



MCUXpresso SDK Documentation

Release 25.09.00-pvw1



NXP
Jul 17, 2025



Table of contents

1	FRDM-KE16Z	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	4
1.3.1	Getting Started with MCUXpresso SDK Repository	4
1.4	Release Notes	17
1.4.1	MCUXpresso SDK Release Notes	17
1.5	ChangeLog	20
1.5.1	MCUXpresso SDK Changelog	20
1.6	Driver API Reference Manual	64
1.7	Middleware Documentation	65
1.7.1	FreeMASTER	65
1.7.2	FreeRTOS	65
2	MKE16Z4	67
2.1	ACMP: Analog Comparator Driver	67
2.2	ADC12: Analog-to-Digital Converter	77
2.3	Clock Driver	83
2.4	CRC: Cyclic Redundancy Check Driver	101
2.5	EWM: External Watchdog Monitor Driver	104
2.6	FGPIO Driver	107
2.7	C90TFS Flash Driver	109
2.8	ftfx adapter	109
2.9	Ftftx CACHE Driver	109
2.10	ftfx controller	111
2.11	ftfx feature	127
2.12	Ftftx FLASH Driver	128
2.13	Ftftx FLEXNVM Driver	141
2.14	ftfx utilities	152
2.15	FTM: FlexTimer Driver	153
2.16	GPIO: General-Purpose Input/Output Driver	176
2.17	GPIO Driver	177
2.18	Common Driver	179
2.19	Lin_lpuart_driver	191
2.20	LPI2C: Low Power Inter-Integrated Circuit Driver	199
2.21	LPI2C Master Driver	200
2.22	LPI2C Slave Driver	214
2.23	LPIT: Low-Power Interrupt Timer	225
2.24	LPSPi: Low Power Serial Peripheral Interface	232
2.25	LPSPi Peripheral driver	232
2.26	LPTMR: Low-Power Timer	253
2.27	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	259
2.28	LPUART Driver	259
2.29	MCM: Miscellaneous Control Module	278
2.30	MMDVSQ: Memory-Mapped Divide and Square Root	282

2.31	MSCAN: Scalable Controller Area Network	285
2.32	MSCAN Driver	285
2.33	PDB: Programmable Delay Block	299
2.34	PMC: Power Management Controller	309
2.35	PORT: Port Control and Interrupts	315
2.36	PWT: Pulse Width Timer	322
2.37	RCM: Reset Control Module Driver	327
2.38	RTC: Real Time Clock	332
2.39	SIM: System Integration Module Driver	339
2.40	SMC: System Mode Controller Driver	340
2.41	TRGMUX: Trigger Mux Driver	346
2.42	Tsi_v5_driver	347
2.43	WDOG32: 32-bit Watchdog Timer	374
3	Middleware	381
3.1	Motor Control	381
3.1.1	FreeMASTER	381
4	RTOS	419
4.1	FreeRTOS	419
4.1.1	FreeRTOS kernel	419
4.1.2	FreeRTOS drivers	425
4.1.3	backoffalgorithm	425
4.1.4	corehttp	428
4.1.5	corejson	430
4.1.6	coremqtt	433
4.1.7	coremqtt-agent	436
4.1.8	corepkcs11	440
4.1.9	freertos-plus-tcp	443


This documentation contains information specific to the frdmke16z board.

Chapter 1

FRDM-KE16Z

1.1 Overview

 The FRDM-KE16Z Freedom Board is designed to work in standalone mode or as the main board of FRDM-TOUCH, FRDM-MC-LVBLDC, and Arduino boards. This Freedom board is compatible with DC 5v and 3.3v power supply, and features a KE16Z, a device boasting up to 64KB Flash and 8KB SRAM and numerous analog and digital peripherals. The on-board interfaces include an RGB LED, a 6-axis digital sensor, a 3-axis digital angular rate gyroscope, an ambient light sensor, CAN transceiver and two capacitive touch pads....

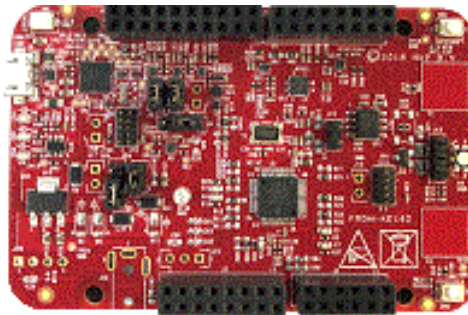

MCU device and part on board is shown below:

- Device: MKE16Z4
- PartNumber: MKE16Z64VLF4

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with Package

- Overview
- MCUXpresso SDK board support package folders
 - Example application structure
 - Locating example application source files
- Run a demo using MCUXpresso IDE
 - Select the workspace location
 - Build an example application

- Run an example application
- Run a demo application using IAR
 - Build an example application
 - Run an example application
- Run a demo using Keil® MDK/μVision
 - Install CMSIS device pack
 - Build an example application
 - Run an example application
- Run a demo using Arm® GCC
 - Set up toolchain
 - * Install GCC Arm Embedded tool chain
 - * Install MinGW (only required on Windows OS)
 - * Add a new system environment variable for ARMGCC_DIR
 - * Install CMake
 - Build an example application
 - Run an example application
- MCUXpresso Config Tools
- MCUXpresso IDE New Project Wizard
- How to determine COM port
- How to define IRQ handler in CPP files
- Default debug interfaces
- Updating debugger firmware
 - Updating OpenSDA firmware

1.3 Getting Started with MCUXpresso SDK GitHub

 
1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. *Verify the installation* after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from <https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation>. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

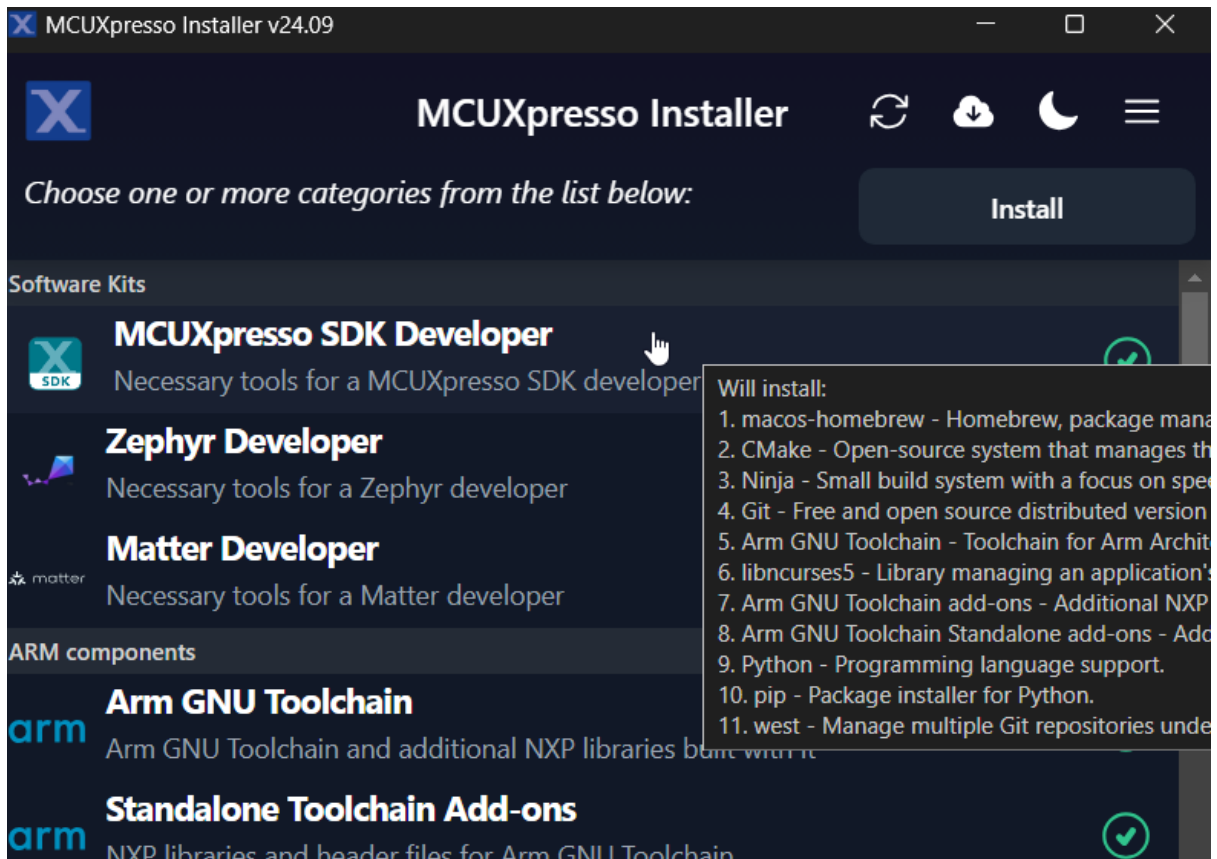

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the official [Git website](#). Download the appropriate version (you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the [Python Download](#) guide.

Use `python --version` to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different
↪source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from [the official CMake download page](#).

For Windows, you can directly use the .msi installer like [cmake-3.31.4-windows-x86_64.msi](#) to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from [the official CMake download page](#).

After installation, you can use `cmake --version` to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the [ninja binary](#) and register the ninja executor location path into your system path variable to work.

For Linux, you can use your [system package manager](#) or you can directly download the [ninja binary](#) to work.

After installation, you can use `ninja --version` to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under `mcuxsdk/scripts/kconfig` folder.

Please make sure [python](#) environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOB from build to debug. This feature is implemented with ruby. You can follow the guide [ruby environment setup](#) to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.


Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	AR-MGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	– toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	– toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	– toolchain mdk
Armclang	ARM-CLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	– toolchain mdk
Zephyr	ZEPHYR_DIR	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	– toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescall\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	– toolchain code-warrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	– toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCV-LVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	– toolchain riscv-llvm

 - The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

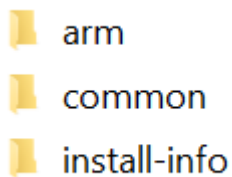

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here's an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: `for %i in (.) do echo %~fsi`

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be `C:\Users\xxx\AppData\Local\Programs\Git\cmd`. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
 1. Open the `$HOME/.bashrc` file using a text editor, such as `vim`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bashrc` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.
- macOS:
 1. Open the `$HOME/.bash_profile` file using a text editor, such as `nano`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bash_profile` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the `west` tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory `mcuxsdk`, follow these steps:

1. Navigate to the core directory:

```
cd mcuxsdk
```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use `venv` to avoid conflicts with other projects using python.**

```
python -m venv .venv

# For Linux/MacOS
source .venv/bin/activate

# For Windows
.\.venv\Scripts\activate
# If you are using powershell and see the issue that the activate script cannot be run.
# You may fix the issue by opening the powershell as administrator and run below command:
powershell Set-ExecutionPolicy RemoteSigned
# then run above activate command again.
```

Once activated, your shell will be prefixed with `(.venv)`. The virtual environment can be deactivated at any time by running `deactivate` command.

Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like `zsh`, there are some powerful plugins to help you auto switch `venv` among workspaces. For example, `zsh-autoswitch-virtualenv`.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a
↪ different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↪ tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at [Getting Started Guide](#), have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the [Manifest repo](#) are checked out to the folder `mcuxsdk/`, the layout of `mcuxsdk` folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- `demo_apps`: Basic demo set to start using SDK, including `hello_world` and `led_blinky`.
- `driver_examples`: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of `_boards/<board_name>` which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code

 
This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the `hello_world` demo application as an example. However, these

steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in [Get MCUXpresso SDK Repo](#).


To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

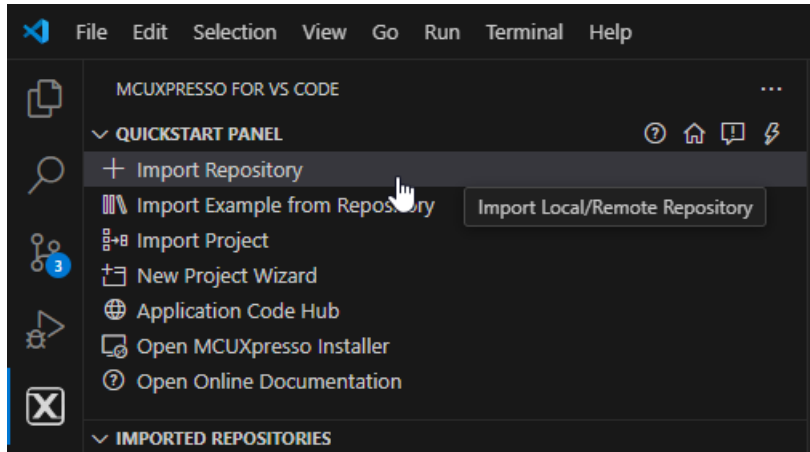


Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details.

 
Select **Local** if you've already obtained the SDK as seen in [Get MCUXpresso SDK Repo](#). Select your location and click **Import**.

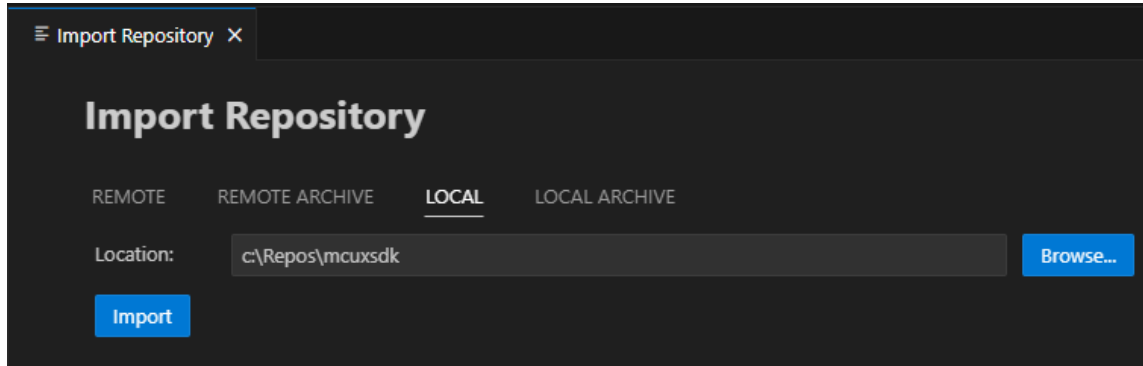

 2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

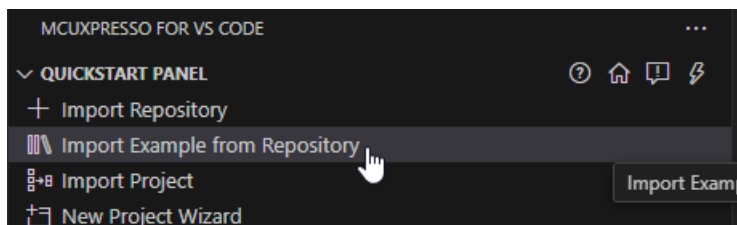

 In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

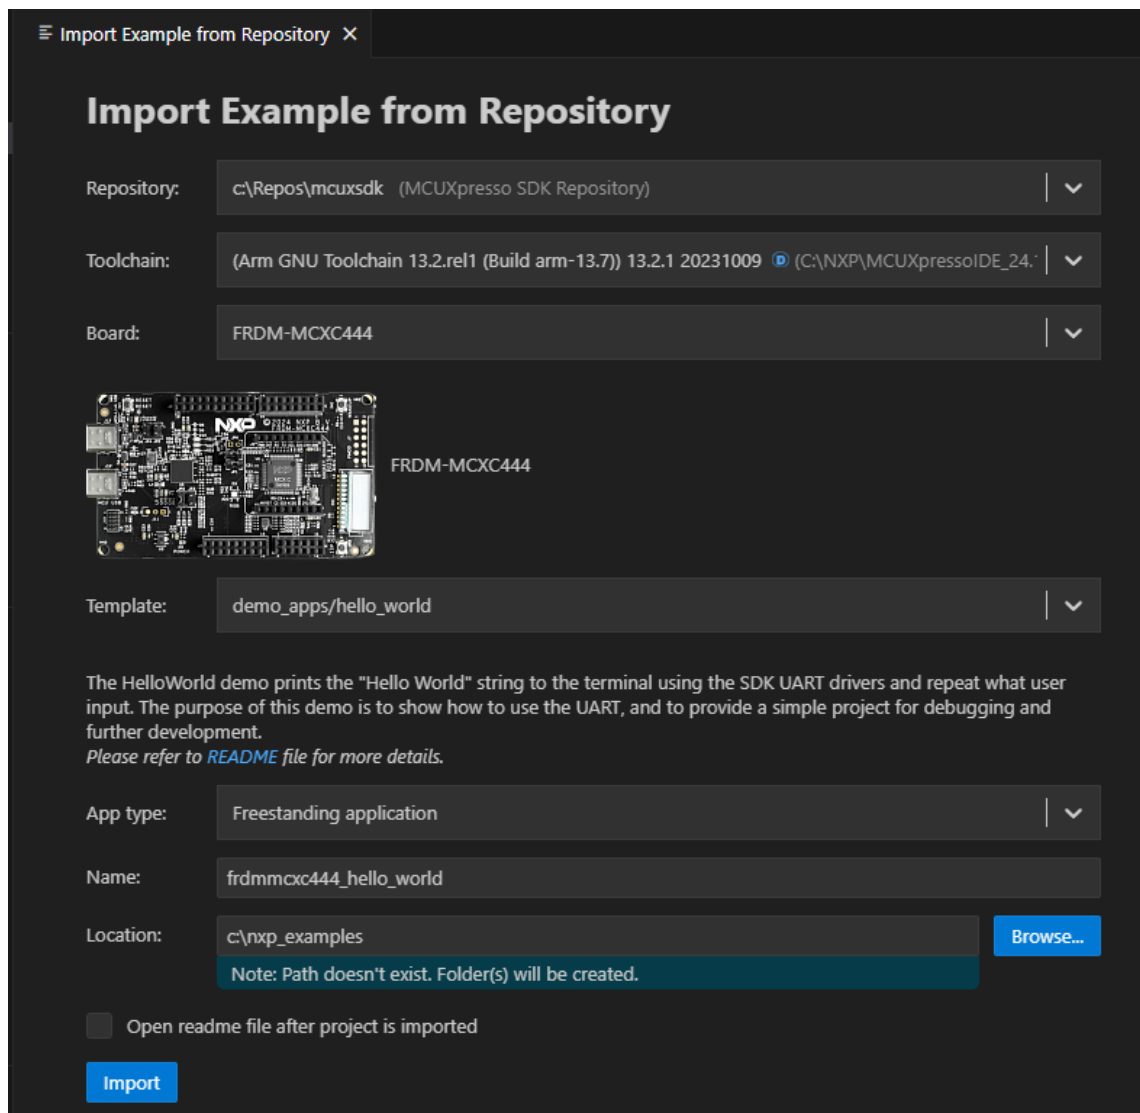

Import Example from Repository

Repository: c:\Repos\mcuxsdk (MCUXpresso SDK Repository) | v

Toolchain: (Arm GNU Toolchain 13.2.rel1 (Build arm-13.7)) 13.2.1 20231009 | v

Board: FRDM-MCXC444 | v

 FRDM-MCXC444

Template: demo_apps/hello_world | v

The HelloWorld demo prints the "Hello World" string to the terminal using the SDK UART drivers and repeat what user input. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.
Please refer to [README](#) file for more details.

App type: Freestanding application | v

Name: frdmmcxc444_hello_world

Location: c:\nxp_examples [Browse...](#)

 
Note: Path doesn't exist. Folder(s) will be created.

☐ Open readme file after project is imported

[Import](#)

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

3. VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
4. Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

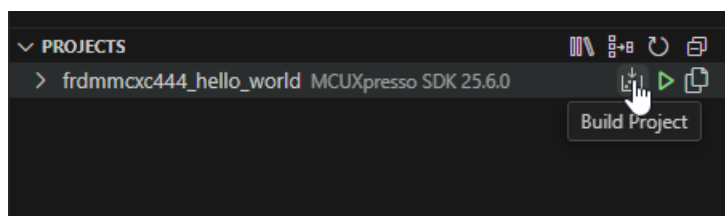

The integrated terminal will open at the bottom and will display the build output.

 

```

[17/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/components/debug_console_lite/fsl_debug_console.c.obj
[18/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/devices/MCXC/MCXC444/drivers/fsl_clock.c.obj
[19/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/lpuart/fsl_lpuart.c.obj
[20/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/uart/fsl_uart.c.obj
[21/21] Linking C executable hello_world.elf
Memory region      Used Size  Region Size  %age Used
  m_interrupts:     192 B      512 B      37.50%
  m_flash_config:    16 B       16 B     100.00%
  m_text:          7892 B    261104 B      3.02%
  m_data:          2128 B     32 KB      6.49%
build finished successfully.
Terminal will be reused by tasks, press any key to close it.


```

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see [MCUXpresso for VS Code Wiki](#).

1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

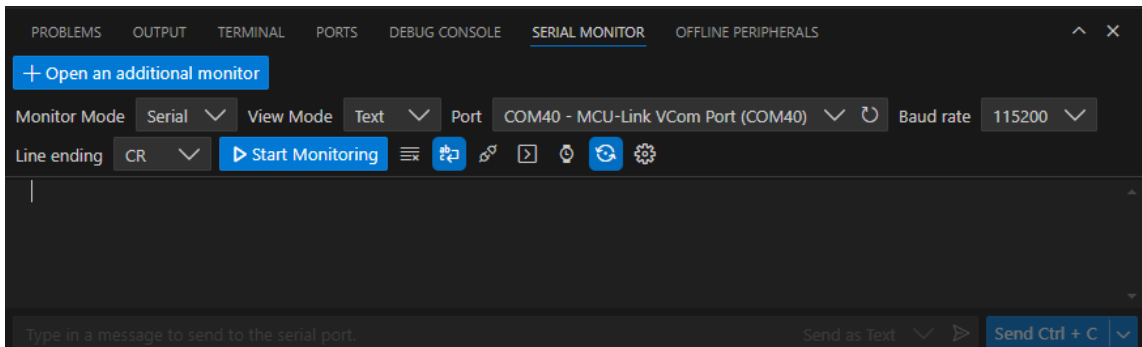

 2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

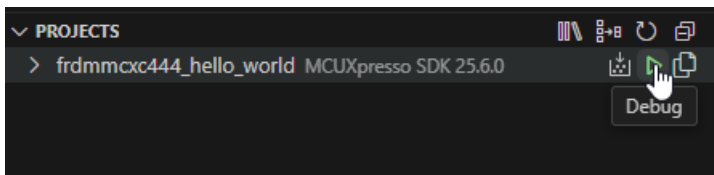

The debug session will begin. The debug controls are initially at the top.

```

C hello_world.c x
frdm-mxc444_hello_world > examples > demo_apps > hello_world > C hello_v
18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37      BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

```

PROBLEMS  OUTPUT  TERMINAL  PERIPHERALS  RTOS DETAILS  PORTS  DEBUG CONSOLE  SERIAL MONITOR
+ Open an additional monitor
Monitor Mode Serial View Mode Text Port COM40 - MCU-Link VCom Port (COM40)
[Stop Monitoring] [Icons]
---- Opened the serial port COM40 ----
hello world.
|

```

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```
west list_project -p examples/demo_apps/hello_world [-t armgcc]
```

```
INFO: [ 1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evk9mimx8ulp -Dcore_id=cm33]
```

```
INFO: [ 2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evkbimxrt1050]
```

```
INFO: [ 3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
```

(continues on next page)

(continued from previous page)

```

↪ evkbmimxrt1060]
INFO: [ 4]west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbmimxrt1170 -Dcore_id=cm4]
INFO: [ 5]west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbmimxrt1170 -Dcore_id=cm7]
INFO: [ 6]west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkcmimxrt1060]
INFO: [ 7]west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkmcimx7ulp]
...

```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use west build -h to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- --toolchain: specify the toolchain for this build, default armgcc.
- --config: value for CMAKE_BUILD_TYPE. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```

# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release

```

For multicore devices, you shall specify the corresponding core id by passing the command line argument -Dcore_id. For example

```

west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug

```

For shield, please use the --shield to specify the shield to run, like

```

west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0

```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding --sysbuild for main application. For example:

```

west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always

```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration

 
```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without --cmake-only parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

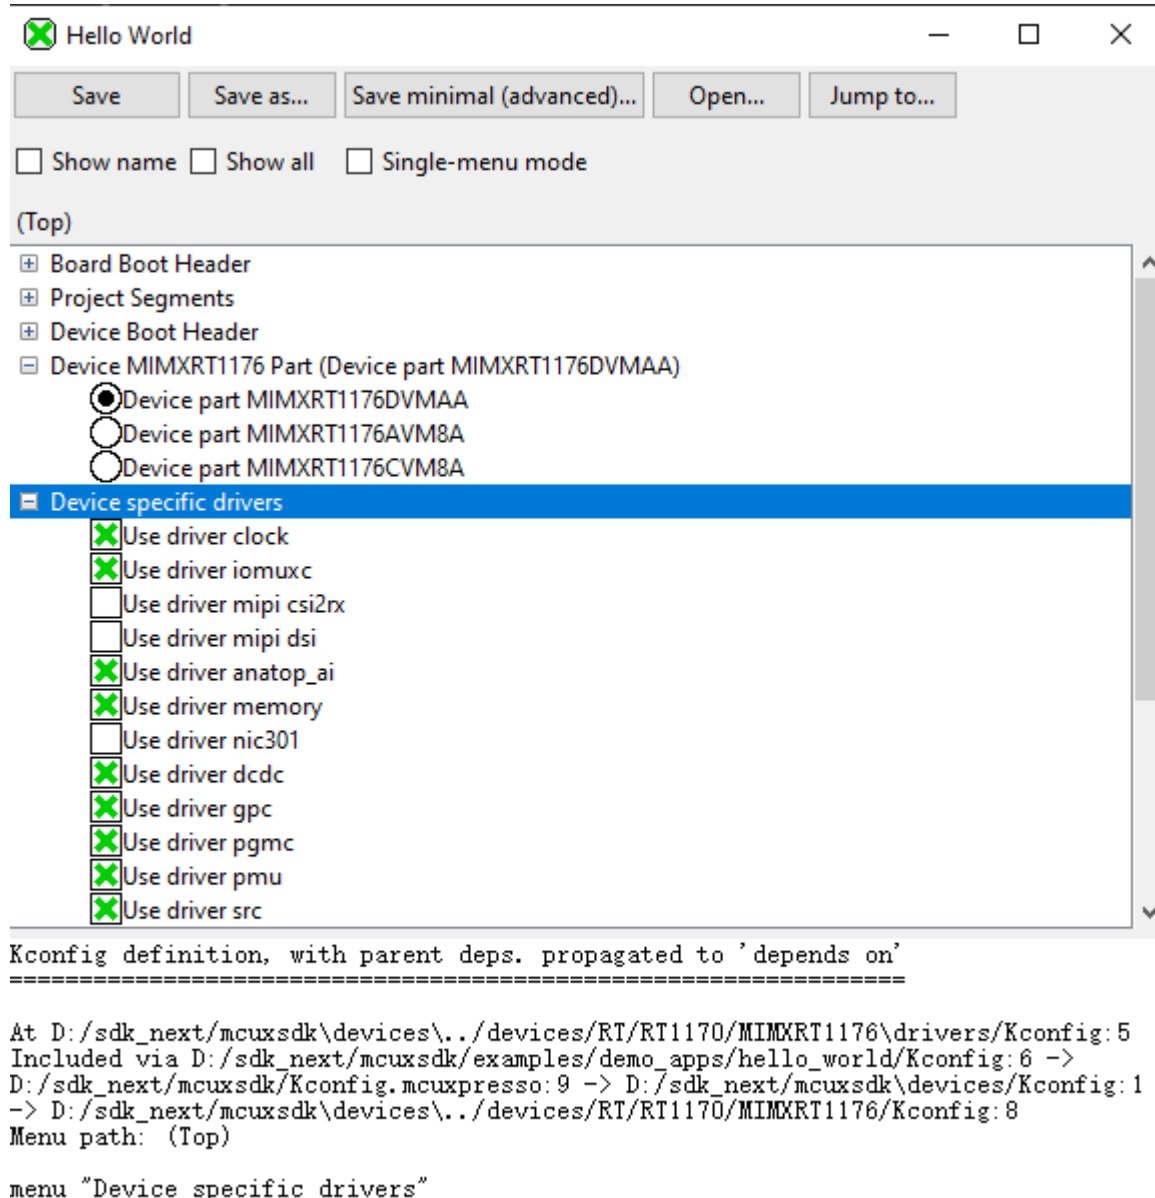

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash *Note:* Please refer Flash and Debug The Example to enable west flash/debug support.

Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:

 
```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbmimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

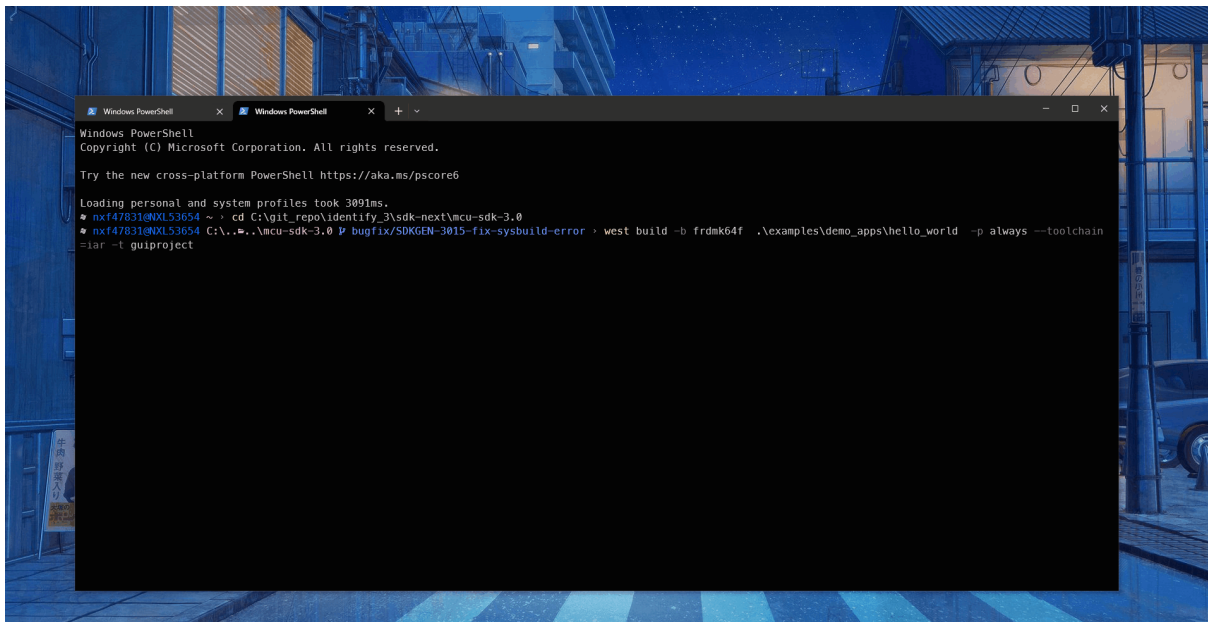

Note, please follow the [Installation](#) to setup the environment especially make sure that [ruby](#) has been installed.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC

further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.41
- MCUXpresso for VS Code v25.06
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

De-velop-ment boards	MCU devices			
FRDM-KE16Z	MKE14Z32VFP4, MKE14Z64VLD4, MKE15Z32VLF4, MKE16Z32VLD4,	MKE14Z32VLD4, MKE14Z64VLF4, MKE15Z64VFP4,	MKE14Z32VLF4, MKE15Z32VFP4, MKE15Z64VLD4,	MKE14Z64VFP4, MKE15Z32VLD4, MKE15Z64VLF4, MKE16Z64VLF4

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

NXP Touch Library NXP Touch Library

TinyCBOR Concise Binary Object Representation (CBOR) Library

PKCS#11 The PKCS#11 standard specifies an application programming interface (API), called “Cryptoki,” for devices that hold cryptographic information and perform cryptographic functions. Cryptoki follows a simple object based approach, addressing the goals of technology independence (any kind of device) and resource sharing (multiple applications accessing multiple devices), presenting to applications a common, logical view of the device called a “cryptographic token”.

llhttp HTTP parser llhttp

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux**[25.06.00]**

- Initial version
-

ACMP**[2.3.0]**

- Improvements
 - Expose C0 register FILTER_CNT bitfield and FPR bitfield to the user.

[2.2.0]

- Improvements
 - Updated feature macros for roundrobin mode, window mode, filter mode, and 3V domain removes.

[2.1.0]

- New Feature
 - Supported the platforms which don't have hysteresis mode.

[2.0.6]

- Bug Fixes
 - Fixed the wrong comments, the DAC value should range from 0 to 255.

[2.0.5]

- Bug Fixes
 - Fixed the out-of-bounds error of Coverity caused by missing an assert sentence to avoid the return value of ACMP_GetInstance() exceeding the array bounds.
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.1, 14.4, 16.4, 17.7.

[2.0.4]

- Bug Fixes
 - Avoided changing w1c bit in ACMP_SetRoundRobinPreState().

[2.0.3]

- New Features
 - Added feature functions for usage of different power domains(1.8 V and 3 V). These functions are first enabled in ULP1. They are about:
 - * ACMP_EnableLinkToDAC()
 - * ACMP_SetDiscreteModeConfig()
 - * ACMP_GetDefaultDiscreteModeConfig()

[2.0.2]

- Other Changes
 - Changed coding style of peripheral base address from “s_acmpBases” to “s_acmpBase”.

[2.0.1]

- Bug Fixes
 - Fixed bug regarding the function “ACMP_SetRoundRobinConfig”. It will not continue execution but returns directly after disabling round robin mode.
-

ADC12

[2.0.8]

- Bug Fixes
 - Fix build warning when FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL is defined as 1.

[2.0.7]

- Improvements
 - Change the method for judging the end of calibration. Previously, it was judged based on the COCO bit of the SC1 register. After the update, it is judged based on the CAL bit of the SC3 register. In some cases, SC1[COCO] was already set to 1 before calibration was performed, which caused calibration to fail.

[2.0.6]

- Improvements
 - Removed useless comments of ADC12_DoAutoCalibration() function.

[2.0.5]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.4.

[2.0.4]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 4.7 10.1 10.3 10.4 10.8 12.2 16.4 17.7

[2.0.3]

- Improvements
 - Used conversion control feature macro instead of that in IO map.

[2.0.2]

- Bug Fixes
 - Set ADC clock frequency as half of the maximum value for calibration.

[2.0.1]

- New Features
 - Added a feature to control enablement of DMA.

[2.0.0]

- Initial version.
-

CLOCK**[2.3.0]**

- Bug Fixes
 - Removed unimplemented kSCG_AsyncDiv1Clk.

[2.2.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.1, rule 10.4, rule 10.8 and so on.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.0]

- New Features
 - Added new API CLOCK_DelayAtLeastUs() implemented by DWT to allow users set delay in unit of microsecond.

[2.0.0]

- Initial version.
-

COMMON

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irqs that mount under `irqsteer` interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with `zephyr`.

[2.4.0]

- New Features
 - Added `EnableIRQWithPriority`, `IRQ_SetPriority`, and `IRQ_ClearPendingIRQ` for ARM.
 - Added `MSDK_EnableCpuCycleCounter`, `MSDK_GetCpuCycleCount` for ARM.

[2.3.3]

- New Features
 - Added `NETC` into status group.

[2.3.2]

- Improvements
 - Make driver `aarch64` compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

EWM

[2.0.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.1, 10.3.

[2.0.2]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules: 10.3, 10.4.

[2.0.1]

- Bug Fixes
 - Fixed the hard fault in EWM_Deinit.

[2.0.0]

- Initial version.
-

FLASH

[3.2.0]

- New Feature
 - Basic support for FTFC

[3.1.3]

- New Feature
 - Support 512KB flash for Kinetis E serials.

[3.1.2]

- Bug Fixes — Remove redundant comments.

[3.1.1]

- Bug Fixes — MISRA C-2012 issue fixed: rule 10.3

[3.1.0]

- New Feature
 - Support erase flash asynchronously.

[3.0.2]

- Bug Fixes — MISRA C-2012 issue fixed: rule 8.4, 17.7, 10.4, 16.1, 21.15, 11.3, 10.7 — building warning -Wnull-dereference on arm compiler v6

[3.0.1]

- New Features
 - Added support FlexNVM alias for (kw37/38/39).

[3.0.0]

- Improvements
 - Reorganized FTFx flash driver source file.
 - Extracted flash cache driver from FTFx driver.
 - Extracted flexnvm flash driver from FTFx driver.

[2.3.1]

- Bug Fixes
 - Unified Flash IFR design from K3.
 - New encoding rule for K3 flash size.

[2.3.0]

- New Features
 - Added support for device with LP flash (K3S/G).
 - Added flash prefetch speculation APIs.
- Improvements
 - Refined flash_cache_clear function.
 - Reorganized the member of flash_config_t struct.

[2.2.0]

- New Features
 - Supported FTFL device in FLASH_Swap API.
 - Supported various pflash start addresses.
 - Added support for KV58 in cache clear function.
 - Added support for device with secondary flash (KW40).
- Bug Fixes
 - Compiled execute-in-ram functions as PIC binary code for driver use.

- Added missed flexram properties.
- Fixed unaligned variable issue for execute-in-ram function code array.

[2.1.0]

- Improvements
 - Updated coding style to align with KSDK 2.0.
 - Different-alignment-size support for pflash and flexnvm.
 - Improved the implementation of execute-in-ram functions.

[2.0.0]

- Initial version
-

FTM

[2.7.2]

- Improvements
 - Add API FTM_ERRATA_010856 for ERR010856 workaround.

[2.7.1]

- Bug Fixes
 - Added function macro when accsee FLTCTRL register FSTATE bit to prevent access nonexistent register.
 - Added function macro to prevent access nonexistent FTM channel for API FTM_ConfigSinglePWM() and FTM_ConfigCombinePWM().

[2.7.0]

- Improvements
 - Support period dithering and edge dithering feature with new APIs:
 - * FTM_SetPeriodDithering()
 - * FTM_SetEdgeDithering()
 - Support get channel n output and input state feature with new APIs:
 - * FTM_GetChannelOutputState()
 - * FTM_GetChannelInputState()
 - Support configure deadtime for specific combined channel pair with new API:
 - * FTM_SetPairDeadTime()
 - Support filter clock prescale, fault output state.
 - Support new APIs to configure PWM and Modified Combine PWM:
 - * FTM_ConfigSinglePWM()
 - * FTM_ConfigCombinePWM()

- Support new API to configure channel software output control:
 - * FTM_SetSoftwareOutputCtrl()
 - * FTM_GetSoftwareOutputValue()
 - * FTM_GetSoftwareOutputEnable()
- Support new API to update FTM counter initial value, modulo value and chanle value:
 - * FTM_SetInitialModuloValue()
 - * FTM_SetChannelValue()

[2.6.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.6.0]

- Improvements
 - Added support to half and full cycle reload feature with new APIs:
 - * FTM_SetLdok()
 - * FTM_SetHalfCycPeriod()
 - * FTM_LoadFreq()
- Bug Fixes
 - Set the HWRSTCNT and SWRSTCNT bits to optional at initialization.

[2.5.0]

- Improvements
 - Added FTM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
 - Modify FTM_UpdatePwmDutycycle API to make it return pwm duty cycles status.
- Bug Fixes
 - Fixed TPM_SetupPwm can't configure 100% center align combined PWM issues.

[2.4.1]

- Bug Fixes
 - Added function macro to determine if FTM instance has only basic features, to prevent access to protected register bits.

[2.4.0]

- Improvements
 - Added CNTIN register initialization in FTM_SetTimerPeriod API.
 - Added a new API to read the captured value of a FTM channel configured in capture mode:
 - * FTM_GetInputCaptureValue()

[2.3.0]

- Improvements
 - Added support of EdgeAligned/CenterAligned/Asymmetrical combine PWM mode in FTM_SetupPWM() and FTM_SetupPwmMode() APIs.
 - Remove kFTM_ComplementaryPwm from support PWM mode, and add new parameter “enableComplementary” in structure ftm_chnl_pwm_signal_param_t.
 - Rename FTM_SetupFault() API to FTM_SetupFaultInput() to avoid ambiguity.

[2.2.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 14.4 and 17.7.

[2.2.2]

- Bug Fixes
 - Fixed the issue that when FTM instance has only TPM features cannot be initialized by FTM_Init() function. By added function macro to assert FTM is TPM only instance.

[2.2.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.1, 10.3, 10.4, 10.6, 10.7 and 11.9.

[2.2.0]

- Bug Fixes
 - Fixed the issue of comparison between signed and unsigned integer expressions.
- Improvements
 - Added support of complementary mode in FTM_SetupPWM() and FTM_SetupPwmMode() APIs.
 - Added new parameter “enableDeadtime” in structure ftm_chnl_pwm_signal_param_t.

[2.1.1]

- Bug Fixes
 - Fixed COVERITY integer handing issue where the right operand of a left bit shift statement should not be a negative value. This appears in FTM_SetReloadPoints().

[2.1.0]

- Improvements
 - Added a new API FTM_SetupPwmMode() to allow the user to set the channel match value in units of timer ticks. New configure structure called ftm_chnl_pwm_config_param_t was added to configure the channel's PWM parameters. This API is similar with FTM_SetupPwm() API, but the new API will not set the timer period(MOD value), it will be useful for users to set the PWM parameters without changing the timer period.

- Bug Fixes
 - Added feature macro to enable/disable the external trigger source configuration.

[2.0.4]

- Improvements
 - Added a new API to enable DMA transfer:
 - * FTM_EnableDmaTransfer()

[2.0.3]

- Bug Fixes
 - Updated the FTM driver to enable fault input after configuring polarity.

[2.0.2]

- Improvements
 - Added support to Quad Decoder feature with new APIs:
 - * FTM_GetQuadDecoderFlags()
 - * FTM_SetQuadDecoderModuloValue()
 - * FTM_GetQuadDecoderCounterValue()
 - * FTM_ClearQuadDecoderCounterValue()

[2.0.1]

- Bug Fixes
 - Updated the FTM driver to fix write to ELSA and ELSB bits.
 - FTM combine mode: set the COMBINE bit before writing to CnV register.

[2.0.0]

- Initial version.
-

GPIO

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMAResourceFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQs) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of `_PinXXX()` and `_PortXXX`.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “`_PinConfigure`” to “`GPIO_PinInit`”.
-

LPI2C

[2.6.1]

- Bug Fixes
 - Fixed coverity issues.

[2.6.0]

- New Feature
 - Added common IRQ handler entry `LPI2C_DriverIRQHandler`.

[2.5.7]

- Improvements
 - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
 - Fixed `LPI2C_SlaveInit()` - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
 - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
 - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
 - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
 - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
 - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
 - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
 - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
 - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
 - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
 - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
 - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
 - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
 - Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
 - Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
 - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
 - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
 - Supported reading more than 256 bytes of data in one transfer as master.
 - Added API LPI2C_GetInstance.
- Bug Fixes
 - Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.
 - Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
 - Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be $2^{\text{prescaler}}$ rather than prescaler.
 - Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
 - Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes

- Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
- MISRA C-2012 issue fixed.
 - * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
 - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
 - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rule 10.3, 14.4, 15.5.
 - Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
 - Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.
 - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
 - Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
 - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
 - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.

- Removed STOP signal wait when NAK detected.
- Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
 - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
 - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
 - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
 - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
 - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
 - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
 - Extended the Driver IRQ handler to support LPI2C4.
 - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE_COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
 - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.

- Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
 - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
 - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
 - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes
 - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccessful sending of the start flag, so the transfer could not start.
 - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
 - API name changed:
 - * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.
 - * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
 - * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
 - * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
 - * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
 - * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
 - * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
 - * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.
-

LPIT

[2.1.2]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- Improvements
 - Add new function LPIT_SetTimerValue to set timeout period.

[2.0.2]

- Improvements
 - Improved LPIT_SetTimerPeriod implementation, configure timeout value with LPIT ticks minus 1 generate more correct interval.
 - Added timeout value configuration check for LPIT_SetTimerPeriod, at least input 3 ticks for calling LPIT_SetTimerPeriod.
- Bug Fixes
 - Fixed MISRA C-2012 rule 17.7 violations.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.0]

- Initial version.
-

LPSP

[2.7.2]

- Bug Fixes
 - Fixed coverity issues.

[2.7.1]

- Bug Fixes
 - Workaround for errata ERR050607
 - Workaround for errata ERR010655

[2.7.0]

- New Feature
 - Added common IRQ handler entry LPSPI_DriverIRQHandler.

[2.6.10]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
 - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
 - Added LPSPI register init in LPSPI_MasterInit incase of LPSPI register exist.

[2.6.5]

- Improvements
 - Introduced FSL_FEATURE_LPSPI_HAS_NO_PCSCFG and FSL_FEATURE_LPSPI_HAS_NO_MULTI_WIDTH for conditional compile.
 - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
 - Added LPSPI6_DriverIRQHandler for LPSPI6 instance.

[2.6.3]

- Hot Fixes
 - Added macro switch in function LPSPI_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
 - Disabled lpspi before LPSPI_MasterSetBaudRate incase of LPSPI opened.

[2.6.1]

- Bug Fixes
 - Fixed return value while calling LPSPI_WaitTxFifoEmpty in function LPSPI_MasterTransferNonBlocking.

[2.6.0]

- Feature
 - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
 - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
 - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
 - Workaround for errata ERR050456 by resetting the entire module using LPSPIIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
 - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
 - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
 - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
 - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
 - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
 - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
 - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
 - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
 - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
 - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
 - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
 - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
 - Fixed bug in LPSPI_SetPCSContinuous when disabling PCS continuous mode.

[2.2.0]

- Bug Fixes
 - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continuous mode is not working.

[2.1.0]

- Improvements
 - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
 - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinuous to support changing PCS selection and PCS continuous mode.
- Bug Fixes
 - Fixed bug in non-blocking and EDMA transfer APIs that kStatus_InvalidArgument is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to kLPSPI_Busy by mistake causing following transfer can not start.
 - Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that LPSPI can not transfer large data using EDMA.
 - Fixed MISRA 17.7 issues.

- Fixed variable overflow issue introduced by MISRA fix.
- Fixed issue that `rxFifoMaxBytes` should be calculated according to transfer width rather than FIFO width.
- Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
 - Fixed in `LPSPi_MasterTransferBlocking` that master `rxfifo` may overflow in stall condition.
 - Eliminated IAR Pa082 warnings.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
 - Removed `LPSPi_Reset` from `LPSPi_MasterInit` and `LPSPi_SlaveInit`, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
 - Added dummy data set up API to allow users to configure the dummy data to be transferred.
 - Enabled the 3-wire mode, `SIN` and `SOUT` pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
 - Fixed the bug that the clock source should be divided by the `PRESCALE` setting in `LPSPi_MasterSetDelayTimes` function.
 - Fixed the bug that `LPSPi_MasterTransferBlocking` function would hang in some corner cases.
- Optimization
 - Added `#ifndef/#endif` to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.
-

LPTMR

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated `lptmr_prescaler_clock_select_t`, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry `LPUART_DriverIRQHandler`.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes

- Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
 - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
 - Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
 - Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
 - Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
 - Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
 - Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
 - Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
 - Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
 - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
 - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for kLPUART_TransmissionCompleteFlag in LPUART_WriteBlocking, LPUART_TransferHandleIRQ, LPUART_TransferSendDMACallback and LPUART_SendEDMACallback to ensure all the data would be sent out to bus.
 - Rounded up the calculated sbr value in LPUART_SetBaudRate and LPUART_Init to achieve more accurate baudrate setting. Changed osr from uint32_t to uint8_t since osr's biggest value is 31.
 - Modified LPUART_ReadBlocking so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using LPUART_EnableTxDMA and LPUART_EnableRxDMA.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in LPUART_TransferNonBlocking function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.
 - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from `rtos_lpuart_config` to `lpuart_rtos_config_t`.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may has a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

MCM

[2.2.0]

- Improvements
 - Support platforms with less features.

[2.1.0]

- Others
 - Remove byteID from mcm_lmem_fault_attribute_t for document update.

[2.0.0]

- Initial version.
-

MMDVSQ

[2.0.4]

- Improvements
 - Fixed CERT-C issues.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, and 14.4.

[2.0.2]

- Bug fix:
 - Fixed MMDVSQ_GetExecutionStatus function get execution status wrong.

[2.0.1]

- Other changes:
 - Changed name of MMDVSQ_GetDivideRemainder and MMDVSQ_GetDivideQuotient functions.

[2.0.0]

- Initial version.
-

MSCAN

[2.1.0]

- Improvements
 - Added wrong data length code(DLC) detection, report kStatus_MSCAN_DataLengthError when DLC is wrong.

[2.0.7]

- Bug Fixes
 - Fix build warning.

[2.0.6]

- Bug Fixes
 - Fix MISRA C-2012 rule 10.3.

[2.0.5]

- Bug Fixes
 - Fixed the code error issue and simplified the algorithm in improved timing APIs.
 - * MSCAN_CalculateImprovedTimingValues

[2.0.4]

- Bug Fixes
 - Fixed the non-divisible case in improved timing API.
 - * MSCAN_CalculateImprovedTimingValues

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue check.
 - * Fixed MISRA C-2012 issue in mcan driver, containing: rule-10.1, rule-10.3, rule-10.4, rule-10.7, rule-11.8, rule-14.4, rule-15.5, rule-16.1, rule-16.4, rule-17.7, rule-8.4, rule-8.5.

[2.0.2]

- Bug Fixes
 - Fixed issue Clang - disable declaration alignment.
 - Fixed issue Central repository code formatting.
- Improvements
 - Implemented feature to find classical CAN improved timing configuration.

[2.0.1]

- Bug Fixes
 - Fixed timestamp issue where it cannot be enabled.
 - Fixed standard mode frame buffer configuration.
 - Added RX Message Buffer Mask helper macro, MSCAN_RX_MB_STD_MASK, MSCAN_RX_MB_EXT_MASK.
 - Fixed dataByte[0-7] order in struct type mscan_frame_t.
 - Updated function MSCAN_WriteTxMb. The MSCAN registers are 8 bits, using 8 bits write for registers.

[2.0.0]

- Initial version.
-

PDB

[2.0.4]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1 and 10.4.

[2.0.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.0.2]

- Improvement:
 - Used macros in feature file instead of that in IO map.

[2.0.1]

- Changed PDB register base array to const.

[2.0.0]

- Initial version.
-

PMC

[2.0.3]

- Bug Fixes
 - Fixed the violation of MISRA C-2012 rule 11.3.

[2.0.2]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3.

[2.0.1]

- Bug Fixes
 - Fixed MISRA issues.
 - * Rule 10.8, Rule 10.3.

[2.0.0]

- Initial version.
-

PORT**[2.5.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4–11.3–11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

PWT

[2.0.2]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.0.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.8, 10.3, 10.6.

[2.0.0]

- Initial version.
-

RCM

[2.0.4]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules.

[2.0.2]

- Bug Fixes
 - Fixed MISRA issue.
 - * Rule 10.8, rule 10.1, rule 13.2, rule 3.1.

[2.0.1]

- Bug Fixes
 - Fixed kRCM_SourceSw bit shift issue.

[2.0.0]

- Initial version.
-

RTC**[2.3.3]**

- Bug Fixes
 - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
 - Handle errata 010716: Disable the counter before setting alarm register and then reen-able the counter.

[2.3.1]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
 - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
 - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
 - Refine _rtc_interrupt_enable order.

[2.2.1]

- Bug Fixes
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of bit field mask checking.
 - Fixed the issue of hard code in RTC_Init.

[2.2.0]

- Bug Fixes
 - Fixed MISRA C-2012 issue.
 - * Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
 - Fixed central repository code formatting issue.
- Improvements
 - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
 - Added feature macro check for many features.

[2.0.0]

- Initial version.
-

SIM

[2.2.0]

- Improvements
 - Added API to trigger TRGMUX.

[2.1.3]

- Improvements
 - Updated function SIM_GetUniqueId to support different register names.

[2.1.2]

- Bug Fixes
 - Fixed SIM_GetUniqueId bug that could not get UIDH.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.4

[2.1.0]

- Improvements
 - Added new APIs: SIM_GetRfAddr() and SIM_EnableSystickClock().

[2.0.0]

- Initial version.
-

SMC**[2.0.7]**

- Bug Fixes
 - Fixed MISRA-2012 issue 10.3.

[2.0.6]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 10.3, rule 11.3.

[2.0.5]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 15.7, rule 14.4, rule 10.3, rule 10.1, rule 10.4.

[2.0.4]

- Bug Fixes
 - When entering stop modes, used RAM function for the flash synchronization issue. Application should make sure that, the RW data of fsl_smc.c is located in memory region which is not powered off in stop modes.

[2.0.3]

- Improvements
 - Added APIs SMC_PreEnterStopModes, SMC_PreEnterWaitModes, SMC_PostExitWaitModes, and SMC_PostExitStopModes.

[2.0.2]

- Bug Fixes
 - Added DSB before WFI while ISB after WFI.
- Other Changes
 - Updated SMC_SetPowerModeVlppw implementation.

[2.0.1]

- Other Changes
 - Updated for KL8x.

[2.0.0]

- Initial version.
-

TRGMUX

[2.0.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.8.

[2.0.0]

- Initial version.
-

TSI_V5

[2.6.0]

- Improvements
 - Add API TSI_ShieldChannelConfig to config all TSI shield channels.

[2.5.0]

- Improvements
 - Add API TSI_EnableShieldChannels to enable/disable TSI shield channels.

[2.4.0]

- Bug Fixes
 - Fixed some elements in the array tsi_sensitivity_xdn_option_t does not match the S_XDN bits.

[2.3.0]

- Other Changes
 - Changed the TSI SINC cutoff divider number.

[2.2.0]

- Improvements
 - Extended enableShield items from tsi_selfCap_config_t structure to cover three shields in the ke17z series.
 - Added interface for getting instance from TSI base address and apply it for clock and IRQ enable/disable.

[2.1.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8.

[2.1.1]

- Improvements
 - Improved the module's noise immunity in mutual cap mode by setting M_TRIM2[0] to 1 in TSI_MUL1 register.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.1, 10.3, 10.4, 10.8, 12.2, 14.4, 17.7.

[2.1.0]

- Bug Fixes
 - Fixed incorrect TSI SSC clock calculation.

[2.0.1]

- Improvements
 - Added functions for M_TX_USED bitfield for ke16z only (Unused TX mutual pins can work as GPIO).

[2.0.0]

- Initial version.
-

WDOG32**[2.2.0]**

- Improvements
 - Added while loop timeout config value for WDOG32 reconfiguration and unlock sequence.
 - Change the return type of WDOG32_Init, WDOG32_Deinit and WDOG32_Unlock from void to status_t.

[2.1.0]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.4]

- Improvements
 - To ensure that the reconfiguration is inside 128 bus clocks unlock window, put all reconfiguration APIs in quick access code section.

[2.0.3]

- Bug Fixes
 - Fixed the noncompliance issue of the reference document.
 - * Waited until for new configuration to take effect by checking the RCS bit field.
 - * Waited until for registers to be unlocked by checking the ULK bit field.
- Improvements
 - Added 128 bus clocks delay ensures a smooth transition before restarting the counter with the new configuration when there is no RCS status bit.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.
 - Fixed the issue of the inseparable process interrupted by other interrupt source.
 - * WDOG32_Refresh

[2.0.1]

- Bug Fixes
 - WDOG must be configured within its configuration time period.
 - * Added WDOG32_Init API to quick access section.
 - * Defined register variable in WDOG32_Init API.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MKE16Z4](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 FreeMASTER

[freemaster](#)

1.7.2 FreeRTOS

[FreeRTOS](#)

Chapter 2

MKE16Z4

2.1 ACMP: Analog Comparator Driver

`void ACMP_Init(CMP_Type *base, const acmp_config_t *config)`

Initializes the ACMP.

The default configuration can be got by calling `ACMP_GetDefaultConfig()`.

Parameters

- `base` – ACMP peripheral base address.
- `config` – Pointer to ACMP configuration structure.

`void ACMP_Deinit(CMP_Type *base)`

Deinitializes the ACMP.

Parameters

- `base` – ACMP peripheral base address.

`void ACMP_GetDefaultConfig(acmp_config_t *config)`

Gets the default configuration for ACMP.

This function initializes the user configuration structure to default value. The default value are:

Example:

```
config->enableHighSpeed = false;
config->enableInvertOutput = false;
config->useUnfilteredOutput = false;
config->enablePinOut = false;
config->enableHysteresisBothDirections = false;
config->hysteresisMode = kACMP_hysteresisMode0;
```

Parameters

- `config` – Pointer to ACMP configuration structure.

`void ACMP_Enable(CMP_Type *base, bool enable)`

Enables or disables the ACMP.

Parameters

- `base` – ACMP peripheral base address.
- `enable` – True to enable the ACMP.

`void ACMP_EnableLinkToDAC(CMP_Type *base, bool enable)`

Enables the link from CMP to DAC enable.

When this bit is set, the DAC enable/disable is controlled by the bit `CMP_C0[EN]` instead of `CMP_C1[DACEN]`.

Parameters

- `base` – ACMP peripheral base address.
- `enable` – Enable the feature or not.

`void ACMP_SetChannelConfig(CMP_Type *base, const acmp_channel_config_t *config)`

Sets the channel configuration.

Note that the plus/minus mux's setting is only valid when the positive/negative port's input isn't from DAC but from channel mux.

Example:

```
acmp_channel_config_t configStruct = {0};
configStruct.positivePortInput = kACMP_PortInputFromDAC;
configStruct.negativePortInput = kACMP_PortInputFromMux;
configStruct.minusMuxInput = 1U;
ACMP_SetChannelConfig(CMP0, &configStruct);
```

Parameters

- `base` – ACMP peripheral base address.
- `config` – Pointer to channel configuration structure.

`void ACMP_EnableDMA(CMP_Type *base, bool enable)`

Enables or disables DMA.

Parameters

- `base` – ACMP peripheral base address.
- `enable` – True to enable DMA.

`void ACMP_EnableWindowMode(CMP_Type *base, bool enable)`

Enables or disables window mode.

Parameters

- `base` – ACMP peripheral base address.
- `enable` – True to enable window mode.

`void ACMP_SetFilterConfig(CMP_Type *base, const acmp_filter_config_t *config)`

Configures the filter.

The filter can be enabled when the filter count is bigger than 1, the filter period is greater than 0 and the sample clock is from divided bus clock or the filter is bigger than 1 and the sample clock is from external clock. Detailed usage can be got from the reference manual.

Example:

```
acmp_filter_config_t configStruct = {0};
configStruct.filterCount = 5U;
configStruct.filterPeriod = 200U;
configStruct.enableSample = false;
ACMP_SetFilterConfig(CMP0, &configStruct);
```

Parameters

- `base` – ACMP peripheral base address.

- config – Pointer to filter configuration structure.

void ACMP_SetDACConfig(CMP_Type *base, const *acmp_dac_config_t* *config)

Configures the internal DAC.

Example:

```
acmp_dac_config_t configStruct = {0};
configStruct.referenceVoltageSource = kACMP_VrefSourceVin1;
configStruct.DACValue = 20U;
configStruct.enableOutput = false;
configStruct.workMode = kACMP_DACWorkLowSpeedMode;
ACMP_SetDACConfig(CMP0, &configStruct);
```

Parameters

- base – ACMP peripheral base address.
- config – Pointer to DAC configuration structure. “NULL” is for disabling the feature.

void ACMP_SetRoundRobinConfig(CMP_Type *base, const *acmp_round_robin_config_t* *config)

Configures the round robin mode.

Example:

```
acmp_round_robin_config_t configStruct = {0};
configStruct.fixedPort = kACMP_FixedPlusPort;
configStruct.fixedChannelNumber = 3U;
configStruct.checkerChannelMask = 0xF7U;
configStruct.sampleClockCount = 0U;
configStruct.delayModulus = 0U;
ACMP_SetRoundRobinConfig(CMP0, &configStruct);
```

Parameters

- base – ACMP peripheral base address.
- config – Pointer to round robin mode configuration structure. “NULL” is for disabling the feature.

void ACMP_SetRoundRobinPreState(CMP_Type *base, uint32_t mask)

Defines the pre-set state of channels in round robin mode.

Note: The pre-state has different circuit with get-round-robin-result in the SOC even though they are same bits. So get-round-robin-result can't return the same value as the value are set by pre-state.

Parameters

- base – ACMP peripheral base address.
- mask – Mask of round robin channel index. Available range is channel0:0x01 to channel7:0x80.

static inline uint32_t ACMP_GetRoundRobinStatusFlags(CMP_Type *base)

Gets the channel input changed flags in round robin mode.

Parameters

- base – ACMP peripheral base address.

Returns

Mask of channel input changed asserted flags. Available range is channel0:0x01 to channel7:0x80.

`void ACMP_ClearRoundRobinStatusFlags(CMP_Type *base, uint32_t mask)`

Clears the channel input changed flags in round robin mode.

Parameters

- `base` – ACMP peripheral base address.
- `mask` – Mask of channel index. Available range is channel0:0x01 to channel7:0x80.

`static inline uint32_t ACMP_GetRoundRobinResult(CMP_Type *base)`

Gets the round robin result.

Note that the set-pre-state has different circuit with get-round-robin-result in the SOC even though they are same bits. So `ACMP_GetRoundRobinResult()` can't return the same value as the value are set by `ACMP_SetRoundRobinPreState`.

Parameters

- `base` – ACMP peripheral base address.

Returns

Mask of round robin channel result. Available range is channel0:0x01 to channel7:0x80.

`void ACMP_EnableInterrupts(CMP_Type *base, uint32_t mask)`

Enables interrupts.

Parameters

- `base` – ACMP peripheral base address.
- `mask` – Interrupts mask. See “`_acmp_interrupt_enable`”.

`void ACMP_DisableInterrupts(CMP_Type *base, uint32_t mask)`

Disables interrupts.

Parameters

- `base` – ACMP peripheral base address.
- `mask` – Interrupts mask. See “`_acmp_interrupt_enable`”.

`uint32_t ACMP_GetStatusFlags(CMP_Type *base)`

Gets status flags.

Parameters

- `base` – ACMP peripheral base address.

Returns

Status flags asserted mask. See “`_acmp_status_flags`”.

`void ACMP_ClearStatusFlags(CMP_Type *base, uint32_t mask)`

Clears status flags.

Parameters

- `base` – ACMP peripheral base address.
- `mask` – Status flags mask. See “`_acmp_status_flags`”.

`void ACMP_SetDiscreteModeConfig(CMP_Type *base, const acmp_discrete_mode_config_t *config)`

Configure the discrete mode.

Configure the discrete mode when supporting 3V domain with 1.8V core.

Parameters

- base – ACMP peripheral base address.
- config – Pointer to configuration structure. See “acmp_discrete_mode_config_t”.

void ACMP_GetDefaultDiscreteModeConfig(*acmp_discrete_mode_config_t* *config)

Get the default configuration for discrete mode setting.

Parameters

- config – Pointer to configuration structure to be restored with the setting values.

FSL_ACMP_DRIVER_VERSION

ACMP driver version 2.3.0.

enum _acmp_interrupt_enable

Interrupt enable/disable mask.

Values:

enumerator kACMP_OutputRisingInterruptEnable

Enable the interrupt when comparator outputs rising.

enumerator kACMP_OutputFallingInterruptEnable

Enable the interrupt when comparator outputs falling.

enumerator kACMP_RoundRobinInterruptEnable

Enable the Round-Robin interrupt.

enum _acmp_status_flags

Status flag mask.

Values:

enumerator kACMP_OutputRisingEventFlag

Rising-edge on compare output has occurred.

enumerator kACMP_OutputFallingEventFlag

Falling-edge on compare output has occurred.

enumerator kACMP_OutputAssertEventFlag

Return the current value of the analog comparator output.

enum _acmp_offset_mode

Comparator hard block offset control.

If OFFSET level is 1, then there is no hysteresis in the case of positive port input crossing negative port input in the positive direction (or negative port input crossing positive port input in the negative direction). Hysteresis still exists for positive port input crossing negative port input in the falling direction. If OFFSET level is 0, then the hysteresis selected by *acmp_hysteresis_mode_t* is valid for both directions.

Values:

enumerator kACMP_OffsetLevel0

The comparator hard block output has level 0 offset internally.

enumerator kACMP_OffsetLevel1

The comparator hard block output has level 1 offset internally.

enum _acmp_hysteresis_mode

Comparator hard block hysteresis control.

See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator kACMP_HysteresisLevel0

Offset is level 0 and Hysteresis is level 0.

enumerator kACMP_HysteresisLevel1

Offset is level 0 and Hysteresis is level 1.

enumerator kACMP_HysteresisLevel2

Offset is level 0 and Hysteresis is level 2.

enumerator kACMP_HysteresisLevel3

Offset is level 0 and Hysteresis is level 3.

enum _acmp_reference_voltage_source

CMP Voltage Reference source.

Values:

enumerator kACMP_VrefSourceVin1

Vin1 is selected as resistor ladder network supply reference Vin.

enumerator kACMP_VrefSourceVin2

Vin2 is selected as resistor ladder network supply reference Vin.

enum _acmp_port_input

Port input source.

Values:

enumerator kACMP_PortInputFromDAC

Port input from the 8-bit DAC output.

enumerator kACMP_PortInputFromMux

Port input from the analog 8-1 mux.

enum _acmp_fixed_port

Fixed mux port.

Values:

enumerator kACMP_FixedPlusPort

Only the inputs to the Minus port are swept in each round.

enumerator kACMP_FixedMinusPort

Only the inputs to the Plus port are swept in each round.

enum _acmp_dac_work_mode

Internal DAC's work mode.

Values:

enumerator kACMP_DACWorkLowSpeedMode

DAC is selected to work in low speed and low power mode.

enumerator kACMP_DACWorkHighSpeedMode

DAC is selected to work in high speed high power mode.

enum _acmp_discrete_clock_source

Discrete mode clock selection.

Values:

enumerator kACMP_DiscreteClockSlow

Slow clock (32kHz) is used as the discrete mode clock.

enumerator kACMP_DiscreteClockFast

Fast clock (16-20MHz) is used as the discrete mode clock.

enum _acmp_discrete_sample_time

ACMP discrete sample selection. These values configures the analog comparator sampling timing (specified by the discrete mode clock period T which is selected by acmp_discrete_clock_source_t) in discrete mode.

Values:

enumerator kACMP_DiscreteSampleTimeAs1T

The sampling time equals to 1xT.

enumerator kACMP_DiscreteSampleTimeAs2T

The sampling time equals to 2xT.

enumerator kACMP_DiscreteSampleTimeAs4T

The sampling time equals to 4xT.

enumerator kACMP_DiscreteSampleTimeAs8T

The sampling time equals to 8xT.

enumerator kACMP_DiscreteSampleTimeAs16T

The sampling time equals to 16xT.

enumerator kACMP_DiscreteSampleTimeAs32T

The sampling time equals to 32xT.

enumerator kACMP_DiscreteSampleTimeAs64T

The sampling time equals to 64xT.

enumerator kACMP_DiscreteSampleTimeAs256T

The sampling time equals to 256xT.

enum _acmp_discrete_phase_time

ACMP discrete phase time selection. There are two phases for sampling input signals, phase 1 and phase 2.

Values:

enumerator kACMP_DiscretePhaseTimeAlt0

The phase x active in one sampling selection 0.

enumerator kACMP_DiscretePhaseTimeAlt1

The phase x active in one sampling selection 1.

enumerator kACMP_DiscretePhaseTimeAlt2

The phase x active in one sampling selection 2.

enumerator kACMP_DiscretePhaseTimeAlt3

The phase x active in one sampling selection 3.

enumerator kACMP_DiscretePhaseTimeAlt4

The phase x active in one sampling selection 4.

enumerator kACMP_DiscretePhaseTimeAlt5

The phase x active in one sampling selection 5.

enumerator kACMP_DiscretePhaseTimeAlt6

The phase x active in one sampling selection 6.

enumerator kACMP_DiscretePhaseTimeAlt7

The phase x active in one sampling selection 7.

typedef enum *_acmp_offset_mode* acmp_offset_mode_t

Comparator hard block offset control.

If OFFSET level is 1, then there is no hysteresis in the case of positive port input crossing negative port input in the positive direction (or negative port input crossing positive port input in the negative direction). Hysteresis still exists for positive port input crossing negative port input in the falling direction. If OFFSET level is 0, then the hysteresis selected by *acmp_hysteresis_mode_t* is valid for both directions.

typedef enum *_acmp_hysteresis_mode* acmp_hysteresis_mode_t

Comparator hard block hysteresis control.

See chip data sheet to get the actual hysteresis value with each level.

typedef enum *_acmp_reference_voltage_source* acmp_reference_voltage_source_t

CMP Voltage Reference source.

typedef enum *_acmp_port_input* acmp_port_input_t

Port input source.

typedef enum *_acmp_fixed_port* acmp_fixed_port_t

Fixed mux port.

typedef enum *_acmp_dac_work_mode* acmp_dac_work_mode_t

Internal DAC's work mode.

typedef struct *_acmp_config* acmp_config_t

Configuration for ACMP.

typedef struct *_acmp_channel_config* acmp_channel_config_t

Configuration for channel.

The comparator's port can be input from channel mux or DAC. If port input is from channel mux, detailed channel number for the mux should be configured.

typedef struct *_acmp_filter_config* acmp_filter_config_t

Configuration for filter.

typedef struct *_acmp_dac_config* acmp_dac_config_t

Configuration for DAC.

typedef struct *_acmp_round_robin_config* acmp_round_robin_config_t

Configuration for round robin mode.

typedef enum *_acmp_discrete_clock_source* acmp_discrete_clock_source_t

Discrete mode clock selection.

typedef enum *_acmp_discrete_sample_time* acmp_discrete_sample_time_t

ACMP discrete sample selection. These values configures the analog comparator sampling timing (specified by the discrete mode clock period T which is selected by *acmp_discrete_clock_source_t*) in discrete mode.

typedef enum *_acmp_discrete_phase_time* acmp_discrete_phase_time_t

ACMP discrete phase time selection. There are two phases for sampling input signals, phase 1 and phase 2.

typedef struct *_acmp_discrete_mode_config* acmp_discrete_mode_config_t

Configuration for discrete mode.

CMP_C0_CFx_MASK

The mask of status flags cleared by writing 1.

CMP_C1_CHNn_MASK

CMP_C2_CHnF_MASK

struct _acmp_config

#include <fsl_acmp.h> Configuration for ACMP.

Public Members

acmp_offset_mode_t offsetMode

Offset mode.

acmp_hysteresis_mode_t hysteresisMode

Hysteresis mode.

bool enableHighSpeed

Enable High Speed (HS) comparison mode.

bool enableInvertOutput

Enable inverted comparator output.

bool useUnfilteredOutput

Set compare output(COUT) to equal COUTA(true) or COUT(false).

bool enablePinOut

The comparator output is available on the associated pin.

struct _acmp_channel_config

#include <fsl_acmp.h> Configuration for channel.

The comparator's port can be input from channel mux or DAC. If port input is from channel mux, detailed channel number for the mux should be configured.

Public Members

acmp_port_input_t positivePortInput

Input source of the comparator's positive port.

uint32_t plusMuxInput

Plus mux input channel(0~7).

acmp_port_input_t negativePortInput

Input source of the comparator's negative port.

uint32_t minusMuxInput

Minus mux input channel(0~7).

struct _acmp_filter_config

#include <fsl_acmp.h> Configuration for filter.

Public Members

bool enableSample

Using external SAMPLE as sampling clock input, or using divided bus clock.

uint32_t filterCount

Filter Sample Count. Available range is 1-7, 0 would cause the filter disabled.

uint32_t filterPeriod

Filter Sample Period. The divider to bus clock. Available range is 0-255.

struct _acmp_dac_config

#include <fsl_acmp.h> Configuration for DAC.

Public Members

acmp_reference_voltage_source_t referenceVoltageSource

Supply voltage reference source.

uint32_t DACValue

Value for DAC Output Voltage. Available range is 0-255.

bool enableOutput

Enable the DAC output.

struct *_acmp_round_robin_config*

#include <fsl_acmp.h> Configuration for round robin mode.

Public Members

acmp_fixed_port_t fixedPort

Fixed mux port.

uint32_t fixedChannelNumber

Indicates which channel is fixed in the fixed mux port.

uint32_t checkerChannelMask

Mask of checker channel index. Available range is channel0:0x01 to channel7:0x80 for round-robin checker.

uint32_t sampleClockCount

Specifies how many round-robin clock cycles(0~3) later the sample takes place.

uint32_t delayModulus

Comparator and DAC initialization delay modulus.

struct *_acmp_discrete_mode_config*

#include <fsl_acmp.h> Configuration for discrete mode.

Public Members

bool enablePositiveChannelDiscreteMode

Positive Channel Continuous Mode Enable. By default, the continuous mode is used.

bool enableNegativeChannelDiscreteMode

Negative Channel Continuous Mode Enable. By default, the continuous mode is used.

bool enableResistorDivider

Resistor Divider Enable is used to enable the resistor divider for the inputs when they come from 3v domain and their values are above 1.8v.

acmp_discrete_clock_source_t clockSource

Select the clock source in order to generate the required timing for comparator to work in discrete mode.

acmp_discrete_sample_time_t sampleTime

Select the ACMP total sampling time period.

acmp_discrete_phase_time_t phase1Time

Select the ACMP phase 1 sampling time.

acmp_discrete_phase_time_t phase2Time

Select the ACMP phase 2 sampling time.

2.2 ADC12: Analog-to-Digital Converter

`void ADC12_Init(ADC_Type *base, const adc12_config_t *config)`

Initialize the ADC12 module.

Parameters

- `base` – ADC12 peripheral base address.
- `config` – Pointer to “*adc12_config_t*” structure.

`void ADC12_Deinit(ADC_Type *base)`

De-initialize the ADC12 module.

Parameters

- `base` – ADC12 peripheral base address.

`void ADC12_GetDefaultConfig(adc12_config_t *config)`

Gets an available pre-defined settings for converter’s configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

Example:

```
config->referenceVoltageSource = kADC12_ReferenceVoltageSourceVref;
config->clockSource = kADC12_ClockSourceAlt0;
config->clockDivider = kADC12_ClockDivider1;
config->resolution = kADC12_Resolution8Bit;
config->sampleClockCount = 12U;
config->enableContinuousConversion = false;
```

Parameters

- `config` – Pointer to “*adc12_config_t*” structure.

`void ADC12_SetChannelConfig(ADC_Type *base, uint32_t channelGroup, const adc12_channel_config_t *config)`

Configure the conversion channel.

This operation triggers the conversion in software trigger mode. In hardware trigger mode, this API configures the channel while the external trigger source helps to trigger the conversion.

Note that the “Channel Group” has a detailed description. To allow sequential conversions of the ADC to be triggered by internal peripherals, the ADC can have more than one group of status and control register, one for each conversion. The channel group parameter indicates which group of registers are used, channel group 0 is for Group A registers and channel group 1 is for Group B registers. The channel groups are used in a “ping-pong” approach to control the ADC operation. At any time, only one of the channel groups is actively controlling ADC conversions. Channel group 0 is used for both software and hardware trigger modes of operation. Channel groups 1 and greater indicate potentially multiple channel group registers for use only in hardware trigger mode. See the chip configuration information in the MCU reference manual about the number of SC1n registers (channel groups) specific to this device. None of the channel groups 1 or greater are used for software trigger operation and therefore writes to these channel groups do not initiate a new conversion. Updating channel group 0 while a different channel group is actively controlling a conversion is allowed and vice versa. Writing any of the channel group registers while that specific channel group is actively controlling a conversion aborts the current conversion.

Parameters

- `base` – ADC12 peripheral base address.

- channelGroup – Channel group index.
- config – Pointer to “adc12_channel_config_t” structure.

static inline uint32_t ADC12_GetChannelConversionValue(ADC_Type *base, uint32_t channelGroup)

Get the conversion value.

Parameters

- base – ADC12 peripheral base address.
- channelGroup – Channel group index.

Returns

Conversion value.

uint32_t ADC12_GetChannelStatusFlags(ADC_Type *base, uint32_t channelGroup)

Get the status flags of channel.

Parameters

- base – ADC12 peripheral base address.
- channelGroup – Channel group index.

Returns

Flags' mask if indicated flags are asserted. See to “_adc12_channel_status_flags”.

status_t ADC12_DoAutoCalibration(ADC_Type *base)

Automate the hardware calibration.

This auto calibration helps to adjust the gain automatically according to the converter's working environment. Execute the calibration before conversion. Note that the software trigger should be used during calibration.

Parameters

- base – ADC12 peripheral base address.

Return values

- kStatus_Success – Calibration is done successfully.
- kStatus_Fail – Calibration is failed.

static inline void ADC12_SetOffsetValue(ADC_Type *base, uint32_t value)

Set the offset value for the conversion result.

This offset value takes effect on the conversion result. If the offset value is not zero, the conversion result is subtracted by it.

Parameters

- base – ADC12 peripheral base address.
- value – Offset value.

static inline void ADC12_SetGainValue(ADC_Type *base, uint32_t value)

Set the gain value for the conversion result.

This gain value takes effect on the conversion result. If the gain value is not zero, the conversion result is amplified as it.

Parameters

- base – ADC12 peripheral base address.
- value – Gain value.

```
static inline void ADC12_EnableDMA(ADC_Type *base, bool enable)
```

Enable generating the DMA trigger when conversion is completed.

Parameters

- base – ADC12 peripheral base address.
- enable – Switcher of DMA feature. “true” means to enable, “false” means to disable.

```
static inline void ADC12_EnableHardwareTrigger(ADC_Type *base, bool enable)
```

Enable of disable the hardware trigger mode.

Parameters

- base – ADC12 peripheral base address.
- enable – Switcher of hardware trigger feature. “true” means to enable, “false” means not.

```
void ADC12_SetHardwareCompareConfig(ADC_Type *base, const  
                                     adc12_hardware_compare_config_t *config)
```

Configure the hardware compare mode.

The hardware compare mode provides a way to process the conversion result automatically by hardware. Only the result in compare range is available. To compare the range, see “adc12_hardware_compare_mode_t”, or the reference manual document for more detailed information.

Parameters

- base – ADC12 peripheral base address.
- config – Pointer to “adc12_hardware_compare_config_t” structure. Pass “NULL” to disable the feature.

```
void ADC12_SetHardwareAverage(ADC_Type *base, adc12_hardware_average_mode_t mode)
```

Set the hardware average mode.

Hardware average mode provides a way to process the conversion result automatically by hardware. The multiple conversion results are accumulated and averaged internally. This aids to get more accurate conversion result.

Parameters

- base – ADC12 peripheral base address.
- mode – Setting hardware average mode. See to “adc12_hardware_average_mode_t”.

```
uint32_t ADC12_GetStatusFlags(ADC_Type *base)
```

Get the status flags of the converter.

Parameters

- base – ADC12 peripheral base address.

Returns

Flags’ mask if indicated flags are asserted. See to “_adc12_status_flags”.

```
enum _adc12_channel_status_flags
```

Channel status flags’ mask.

Values:

enumerator kADC12_ChannelConversionCompletedFlag
Conversion done.

enum _adc12_status_flags

Converter status flags' mask.

Values:

enumerator kADC12_ActiveFlag

Converter is active.

enumerator kADC12_CalibrationFailedFlag

Calibration is failed.

enum _adc12_clock_divider

Clock divider for the converter.

Values:

enumerator kADC12_ClockDivider1

For divider 1 from the input clock to the module.

enumerator kADC12_ClockDivider2

For divider 2 from the input clock to the module.

enumerator kADC12_ClockDivider4

For divider 4 from the input clock to the module.

enumerator kADC12_ClockDivider8

For divider 8 from the input clock to the module.

enum _adc12_resolution

Converter's resolution.

Values:

enumerator kADC12_Resolution8Bit

8 bit resolution.

enumerator kADC12_Resolution12Bit

12 bit resolution.

enumerator kADC12_Resolution10Bit

10 bit resolution.

enum _adc12_clock_source

Conversion clock source.

Values:

enumerator kADC12_ClockSourceAlt0

Alternate clock 1 (ADC_ALTCLK1).

enumerator kADC12_ClockSourceAlt1

Alternate clock 2 (ADC_ALTCLK2).

enumerator kADC12_ClockSourceAlt2

Alternate clock 3 (ADC_ALTCLK3).

enumerator kADC12_ClockSourceAlt3

Alternate clock 4 (ADC_ALTCLK4).

enum _adc12_reference_voltage_source

Reference voltage source.

Values:

enumerator `kADC12_ReferenceVoltageSourceVref`
For external pins pair of `VrefH` and `VrefL`.

enumerator `kADC12_ReferenceVoltageSourceValt`
For alternate reference pair of `ValtH` and `ValtL`.

enum `_adc12_hardware_average_mode`
Hardware average mode.

Values:

enumerator `kADC12_HardwareAverageCount4`
For hardware average with 4 samples.

enumerator `kADC12_HardwareAverageCount8`
For hardware average with 8 samples.

enumerator `kADC12_HardwareAverageCount16`
For hardware average with 16 samples.

enumerator `kADC12_HardwareAverageCount32`
For hardware average with 32 samples.

enumerator `kADC12_HardwareAverageDisabled`
Disable the hardware average feature.

enum `_adc12_hardware_compare_mode`
Hardware compare mode.

Values:

enumerator `kADC12_HardwareCompareMode0`
`x < value1`.

enumerator `kADC12_HardwareCompareMode1`
`x > value1`.

enumerator `kADC12_HardwareCompareMode2`
if `value1 <= value2`, then `x < value1 || x > value2`; else, `value1 > x > value2`.

enumerator `kADC12_HardwareCompareMode3`
if `value1 <= value2`, then `value1 <= x <= value2`; else `x >= value1 || x <= value2`.

typedef enum `_adc12_clock_divider` `adc12_clock_divider_t`
Clock divider for the converter.

typedef enum `_adc12_resolution` `adc12_resolution_t`
Converter's resolution.

typedef enum `_adc12_clock_source` `adc12_clock_source_t`
Conversion clock source.

typedef enum `_adc12_reference_voltage_source` `adc12_reference_voltage_source_t`
Reference voltage source.

typedef enum `_adc12_hardware_average_mode` `adc12_hardware_average_mode_t`
Hardware average mode.

typedef enum `_adc12_hardware_compare_mode` `adc12_hardware_compare_mode_t`
Hardware compare mode.

typedef struct `_adc12_config` `adc12_config_t`
Converter configuration.

```
typedef struct _adc12_hardware_compare_config adc12_hardware_compare_config_t
```

Hardware compare configuration.

```
typedef struct _adc12_channel_config adc12_channel_config_t
```

Channel conversion configuration.

```
FSL_ADC12_DRIVER_VERSION
```

ADC12 driver version.

```
struct _adc12_config
```

#include <fsl_adc12.h> Converter configuration.

Public Members

adc12_reference_voltage_source_t referenceVoltageSource

Select the reference voltage source.

adc12_clock_source_t clockSource

Select the input clock source to converter.

adc12_clock_divider_t clockDivider

Select the divider of input clock source.

adc12_resolution_t resolution

Select the sample resolution mode.

uint32_t sampleClockCount

Select the sample clock count. Add its value may improve the stability of the conversion result.

bool enableContinuousConversion

Enable continuous conversion mode.

```
struct _adc12_hardware_compare_config
```

#include <fsl_adc12.h> Hardware compare configuration.

Public Members

adc12_hardware_compare_mode_t hardwareCompareMode

Select the hardware compare mode.

int16_t value1

Setting value1 for hardware compare mode.

int16_t value2

Setting value2 for hardware compare mode.

```
struct _adc12_channel_config
```

#include <fsl_adc12.h> Channel conversion configuration.

Public Members

uint32_t channelNumber

Setting the conversion channel number. The available range is 0-31. See channel connection information for each chip in Reference Manual document.

bool enableInterruptOnConversionCompleted

Generate a interrupt request once the conversion is completed.

2.3 Clock Driver

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_CoreSysClk

Core/system clock

enumerator kCLOCK_BusClk

Bus clock

enumerator kCLOCK_FlashClk

Flash clock

enumerator kCLOCK_ScgSysOscClk

SCG system OSC clock. (SYSOSC)

enumerator kCLOCK_ScgSircClk

SCG SIRC clock.

enumerator kCLOCK_ScgFircClk

SCG FIRC clock.

enumerator kCLOCK_ScgLpFllClk

SCG low power FLL clock. (LPFLL)

enumerator kCLOCK_ScgSysOscAsyncDiv2Clk

SOSCDIV2_CLK.

enumerator kCLOCK_ScgSircAsyncDiv2Clk

SIRCDIV2_CLK.

enumerator kCLOCK_ScgFircAsyncDiv2Clk

FIRCDIV2_CLK.

enumerator kCLOCK_ScgLpFllAsyncDiv2Clk

LPFLLDIV2_CLK.

enumerator kCLOCK_LpoClk

LPO clock

enumerator kCLOCK_ErClk

ERCLK. The external reference clock from SCG.

enum _clock_ip_src

Clock source for peripherals that support various clock selections.

Values:

enumerator kCLOCK_IpSrcNoneOrExt

Clock is off or external clock is used.

enumerator kCLOCK_IpSrcSysOscAsync

System Oscillator async clock.

enumerator kCLOCK_IpSrcSircAsync

Slow IRC async clock.

enumerator kCLOCK_IpSrcFircAsync

Fast IRC async clock.

enumerator kCLOCK_IpSrcLpFllAsync
LPFLL async clock.

enum _clock_ip_name

Peripheral clock name definition used for clock gate, clock source and clock divider setting.
It is defined as the corresponding register address.

Values:

enumerator kCLOCK_IpInvalid

enumerator kCLOCK_Flash0

enumerator kCLOCK_Mscan0

enumerator kCLOCK_Lpspi0

enumerator kCLOCK_Crc0

enumerator kCLOCK_Pdb0

enumerator kCLOCK_Lpit0

enumerator kCLOCK_Ftm0

enumerator kCLOCK_Ftm1

enumerator kCLOCK_Adc0

enumerator kCLOCK_Rtc0

enumerator kCLOCK_Lptmr0

enumerator kCLOCK_Tsi0

enumerator kCLOCK_PortA

enumerator kCLOCK_PortB

enumerator kCLOCK_PortC

enumerator kCLOCK_PortD

enumerator kCLOCK_PortE

enumerator kCLOCK_Pwt0

enumerator kCLOCK_Ewm0

enumerator kCLOCK_Lpi2c0

enumerator kCLOCK_Lpuart0

enumerator kCLOCK_Lpuart1

enumerator kCLOCK_Lpuart2

enumerator kCLOCK_Cmp0

SCG status return codes.

Values:

enumerator kStatus_SCG_Busy
Clock is busy.

enumerator kStatus_SCG_InvalidSrc
Invalid source.

enum _scg_sys_clk
SCG system clock type.

Values:

enumerator kSCG_SysClkSlow
System slow clock.

enumerator kSCG_SysClkCore
Core clock.

enum _scg_sys_clk_src
SCG system clock source.

Values:

enumerator kSCG_SysClkSrcSysOsc
System OSC.

enumerator kSCG_SysClkSrcSirc
Slow IRC.

enumerator kSCG_SysClkSrcFirc
Fast IRC.

enumerator kSCG_SysClkSrcLpFll
Low power FLL.

enum _scg_sys_clk_div
SCG system clock divider value.

Values:

enumerator kSCG_SysClkDivBy1
Divided by 1.

enumerator kSCG_SysClkDivBy2
Divided by 2.

enumerator kSCG_SysClkDivBy3
Divided by 3.

enumerator kSCG_SysClkDivBy4
Divided by 4.

enumerator kSCG_SysClkDivBy5
Divided by 5.

enumerator kSCG_SysClkDivBy6
Divided by 6.

enumerator kSCG_SysClkDivBy7
Divided by 7.

enumerator kSCG_SysClkDivBy8
Divided by 8.

enumerator kSCG_SysClkDivBy9
Divided by 9.

enumerator kSCG__SysClkDivBy10

Divided by 10.

enumerator kSCG__SysClkDivBy11

Divided by 11.

enumerator kSCG__SysClkDivBy12

Divided by 12.

enumerator kSCG__SysClkDivBy13

Divided by 13.

enumerator kSCG__SysClkDivBy14

Divided by 14.

enumerator kSCG__SysClkDivBy15

Divided by 15.

enumerator kSCG__SysClkDivBy16

Divided by 16.

enum _clock_clkout_src

SCG clock out configuration (CLKOUTSEL).

Values:

enumerator kClockClkoutSelScgSlow

SCG slow clock.

enumerator kClockClkoutSelSysOsc

System OSC.

enumerator kClockClkoutSelSirc

Slow IRC.

enumerator kClockClkoutSelFirc

Fast IRC.

enumerator kClockClkoutSelLpFll

Low power FLL.

enum _scg_async_clk

SCG asynchronous clock type.

Values:

enumerator kSCG__AsyncDiv2Clk

The async clock by DIV2, e.g. SOSCDIV2_CLK, SIRCDIV2_CLK.

enum scg_async_clk_div

SCG asynchronous clock divider value.

Values:

enumerator kSCG__AsyncClkDisable

Clock output is disabled.

enumerator kSCG__AsyncClkDivBy1

Divided by 1.

enumerator kSCG__AsyncClkDivBy2

Divided by 2.

enumerator kSCG__AsyncClkDivBy4

Divided by 4.

enumerator kSCG__AsyncClkDivBy8

Divided by 8.

enumerator kSCG__AsyncClkDivBy16

Divided by 16.

enumerator kSCG__AsyncClkDivBy32

Divided by 32.

enumerator kSCG__AsyncClkDivBy64

Divided by 64.

enum __scg__sosc__monitor__mode

SCG system OSC monitor mode.

Values:

enumerator kSCG__SysOscMonitorDisable

Monitor disabled.

enumerator kSCG__SysOscMonitorInt

Interrupt when the system OSC error is detected.

enumerator kSCG__SysOscMonitorReset

Reset when the system OSC error is detected.

enum __scg__sosc__mode

OSC work mode.

Values:

enumerator kSCG__SysOscModeExt

Use external clock.

enumerator kSCG__SysOscModeOscLowPower

Oscillator low power.

enumerator kSCG__SysOscModeOscHighGain

Oscillator high gain.

OSC enable mode.

Values:

enumerator kSCG__SysOscEnable

Enable OSC clock.

enumerator kSCG__SysOscEnableInStop

Enable OSC in stop mode.

enumerator kSCG__SysOscEnableInLowPower

Enable OSC in low power mode.

enumerator kSCG__SysOscEnableErClk

Enable OSCERCLK.

enum __scg__sirc__range

SCG slow IRC clock frequency range.

Values:

enumerator kSCG_SircRangeLow

Slow IRC low range clock (2 MHz, 4 MHz for i.MX 7 ULP).

enumerator kSCG_SircRangeHigh

Slow IRC high range clock (8 MHz, 16 MHz for i.MX 7 ULP).

SIRC enable mode.

Values:

enumerator kSCG_SircEnable

Enable SIRC clock.

enumerator kSCG_SircEnableInStop

Enable SIRC in stop mode.

enumerator kSCG_SircEnableInLowPower

Enable SIRC in low power mode.

enum _scg_firc_trim_mode

SCG fast IRC trim mode.

Values:

enumerator kSCG_FircTrimNonUpdate

FIRC trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure scg_firc_trim_config_t.

enumerator kSCG_FircTrimUpdate

FIRC trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _scg_firc_trim_div

SCG fast IRC trim predivided value for system OSC.

Values:

enumerator kSCG_FircTrimDivBy1

Divided by 1.

enumerator kSCG_FircTrimDivBy128

Divided by 128.

enumerator kSCG_FircTrimDivBy256

Divided by 256.

enumerator kSCG_FircTrimDivBy512

Divided by 512.

enumerator kSCG_FircTrimDivBy1024

Divided by 1024.

enumerator kSCG_FircTrimDivBy2048

Divided by 2048.

enum _scg_firc_trim_src

SCG fast IRC trim source.

Values:

enumerator kSCG_FircTrimSrcSysOsc

System OSC.

enum _scg_firc_range

SCG fast IRC clock frequency range.

Values:

enumerator kSCG_FircRange48M

Fast IRC is trimmed to 48 MHz.

FIRC enable mode.

Values:

enumerator kSCG_FircEnable

Enable FIRC clock.

enumerator kSCG_FircEnableInStop

Enable FIRC in stop mode.

enumerator kSCG_FircEnableInLowPower

Enable FIRC in low power mode.

enumerator kSCG_FircDisableRegulator

Disable regulator.

LPFLL enable mode.

Values:

enumerator kSCG_LpFllEnable

Enable LPFLL clock.

enum _scg_lpfll_range

SCG LPFLL clock frequency range.

Values:

enumerator kSCG_LpFllRange48M

LPFLL is trimmed to 48MHz.

enum _scg_lpfll_trim_mode

SCG LPFLL trim mode.

Values:

enumerator kSCG_LpFllTrimNonUpdate

LPFLL trim is enabled but the trim value update is not enabled. In this mode, the trim value is fixed to the initialized value, which is defined by the Member variable trimValue in the structure scg_lpfll_trim_config_t.

enumerator kSCG_LpFllTrimUpdate

FIRC trim is enabled and trim value update is enabled. In this mode, the trim value is automatically updated.

enum _scg_lpfll_trim_src

SCG LPFLL trim source.

Values:

enumerator kSCG_LpFllTrimSrcSirc

SIRC.

enumerator kSCG_LpFllTrimSrcFirc

FIRC.

enumerator kSCG_LpFllTrimSrcSysOsc
System OSC.

enumerator kSCG_LpFllTrimSrcRtcOsc
RTC OSC (32.768 kHz).

enum _scg_lpfl_lock_mode
SCG LPFLL lock mode.

Values:

enumerator kSCG_LpFllLock1Lsb
Lock with 1 LSB.

enumerator kSCG_LpFllLock2Lsb
Lock with 2 LSB.

typedef enum _clock_name clock_name_t
Clock name used to get clock frequency.

typedef enum _clock_ip_src clock_ip_src_t
Clock source for peripherals that support various clock selections.

typedef enum _clock_ip_name clock_ip_name_t
Peripheral clock name definition used for clock gate, clock source and clock divider setting.
It is defined as the corresponding register address.

typedef enum _scg_sys_clk scg_sys_clk_t
SCG system clock type.

typedef enum _scg_sys_clk_src scg_sys_clk_src_t
SCG system clock source.

typedef enum _scg_sys_clk_div scg_sys_clk_div_t
SCG system clock divider value.

typedef struct _scg_sys_clk_config scg_sys_clk_config_t
SCG system clock configuration.

typedef enum _clock_clkout_src clock_clkout_src_t
SCG clock out configuration (CLKOUTSEL).

typedef enum _scg_async_clk scg_async_clk_t
SCG asynchronous clock type.

typedef enum _scg_async_clk_div scg_async_clk_div_t
SCG asynchronous clock divider value.

typedef enum _scg_sosc_monitor_mode scg_sosc_monitor_mode_t
SCG system OSC monitor mode.

typedef enum _scg_sosc_mode scg_sosc_mode_t
OSC work mode.

typedef struct _scg_sosc_config scg_sosc_config_t
SCG system OSC configuration.

typedef enum _scg_sirc_range scg_sirc_range_t
SCG slow IRC clock frequency range.

typedef struct _scg_sirc_config scg_sirc_config_t
SCG slow IRC clock configuration.

typedef enum *_scg_firc_trim_mode* scg_firc_trim_mode_t
 SCG fast IRC trim mode.

typedef enum *_scg_firc_trim_div* scg_firc_trim_div_t
 SCG fast IRC trim predivided value for system OSC.

typedef enum *_scg_firc_trim_src* scg_firc_trim_src_t
 SCG fast IRC trim source.

typedef struct *_scg_firc_trim_config* scg_firc_trim_config_t
 SCG fast IRC clock trim configuration.

typedef enum *_scg_firc_range* scg_firc_range_t
 SCG fast IRC clock frequency range.

typedef struct *_scg_firc_config_t* scg_firc_config_t
 SCG fast IRC clock configuration.

typedef enum *_scg_lpfl_range* scg_lpfl_range_t
 SCG LPFLL clock frequency range.

typedef enum *_scg_lpfl_trim_mode* scg_lpfl_trim_mode_t
 SCG LPFLL trim mode.

typedef enum *_scg_lpfl_trim_src* scg_lpfl_trim_src_t
 SCG LPFLL trim source.

typedef enum *_scg_lpfl_lock_mode* scg_lpfl_lock_mode_t
 SCG LPFLL lock mode.

typedef struct *_scg_lpfl_trim_config* scg_lpfl_trim_config_t
 SCG LPFLL clock trim configuration.

typedef struct *_scg_lpfl_config* scg_lpfl_config_t
 SCG low power FLL configuration.

volatile uint32_t g_xtal0Freq
 External XTAL0 (OSC0/SYSOSC) clock frequency.

The XTAL0/EXTAL0 (OSC0/SYSOSC) clock frequency in Hz. When the clock is set up, use the function `CLOCK_SetXtal0Freq` to set the value in the clock driver. For example, if XTAL0 is 8 MHz:

```
CLOCK_InitSysOsc(...);
CLOCK_SetXtal0Freq(8000000);
```

This is important for the multicore platforms where only one core needs to set up the OSC0/SYSOSC using `CLOCK_InitSysOsc`. All other cores need to call the `CLOCK_SetXtal0Freq` to get a valid clock frequency.

static inline void `CLOCK_EnableClock(clock_ip_name_t name)`
 Enable the clock for specific IP.

Parameters

- name – Which clock to enable, see `clock_ip_name_t`.

static inline void `CLOCK_DisableClock(clock_ip_name_t name)`
 Disable the clock for specific IP.

Parameters

- name – Which clock to disable, see `clock_ip_name_t`.

static inline void CLOCK_SetIpSrc(*clock_ip_name_t* name, *clock_ip_src_t* src)

Set the clock source for specific IP module.

Set the clock source for specific IP, not all modules need to set the clock source, should only use this function for the modules need source setting.

Parameters

- name – Which peripheral to check, see *clock_ip_name_t*.
- src – Clock source to set.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in *clock_name_t*.

Parameters

- clockName – Clock names defined in *clock_name_t*

Returns

Clock frequency value in hertz

uint32_t CLOCK_GetCoreSysClkFreq(void)

Get the core clock or system clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetBusClkFreq(void)

Get the bus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFlashClkFreq(void)

Get the flash clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetErClkFreq(void)

Get the external reference clock frequency (ERCLK).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetIpFreq(*clock_ip_name_t* name)

Gets the clock frequency for a specific IP module.

This function gets the IP module clock frequency based on PCC registers. It is only used for the IP modules which could select clock source by PCC[PCS].

Parameters

- name – Which peripheral to get, see *clock_ip_name_t*.

Returns

Clock frequency value in hertz

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.3.0.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

RTC_CLOCKS

Clock ip name array for RTC.

PORT_CLOCKS

Clock ip name array for PORT.

LPI2C_CLOCKS

Clock ip name array for LPI2C.

TSI_CLOCKS

Clock ip name array for TSI.

LPUART_CLOCKS

Clock ip name array for LPUART.

LPTMR_CLOCKS

Clock ip name array for LPTMR.

ADC12_CLOCKS

Clock ip name array for ADC12.

LPSPI_CLOCKS

Clock ip name array for LPSPI.

LPIT_CLOCKS

Clock ip name array for LPIT.

CRC_CLOCKS

Clock ip name array for CRC.

CMP_CLOCKS

Clock ip name array for CMP.

FLASH_CLOCKS

Clock ip name array for FLASH.

EWM_CLOCKS

Clock ip name array for EWM.

FTM_CLOCKS

Clock ip name array for FLEXTMR.

PDB_CLOCKS

Clock ip name array for PDB.

PWT_CLOCKS

Clock ip name array for PWT.

MSCAN_CLOCKS

Clock ip name array for MSCAN.

LPO_CLK_FREQ

LPO clock frequency.

kCLOCK_Osc0ErClk

CLOCK_GetOsc0ErClkFreq

For compatible with other MCG platforms.

uint32_t CLOCK_GetSysClkFreq(*scg_sys_clk_t* type)

Gets the SCG system clock frequency.

This function gets the SCG system clock frequency. These clocks are used for core, platform, external, and bus clock domains.

Parameters

- type – Which type of clock to get, core clock or slow clock.

Returns

Clock frequency.

static inline void CLOCK_SetVlprModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for VLPR mode.

This function sets the system clock configuration for VLPR mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetRunModeSysClkConfig(const *scg_sys_clk_config_t* *config)

Sets the system clock configuration for RUN mode.

This function sets the system clock configuration for RUN mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetCurSysClkConfig(*scg_sys_clk_config_t* *config)

Gets the system clock configuration in the current power mode.

This function gets the system configuration in the current power mode.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetClkOutSel(*clock_clkout_src_t* setting)

Sets the clock out selection.

This function sets the clock out selection (CLKOUTSEL).

Parameters

- setting – The selection to set.

Returns

The current clock out selection.

status_t CLOCK_InitSysOsc(const *scg_sosc_config_t* *config)

Initializes the SCG system OSC.

This function enables the SCG system OSC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – System OSC is initialized.
- kStatus_SCG_Busy – System OSC has been enabled and is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

status_t CLOCK_DeinitSysOsc(void)

De-initializes the SCG system OSC.

This function disables the SCG system OSC clock.

Note: This function can't detect whether the system OSC is used by an IP.

Return values

- kStatus_Success – System OSC is deinitialized.
- kStatus_SCG_Busy – System OSC is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

static inline void CLOCK_SetSysOscAsyncClkDiv(*scg_async_clk_t* asyncClk, *scg_async_clk_div_t* divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set.

uint32_t CLOCK_GetSysOscFreq(void)

Gets the SCG system OSC clock frequency (SYSOSC).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetSysOscAsyncFreq(*scg_async_clk_t* type)

Gets the SCG asynchronous clock frequency from the system OSC.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsSysOscErr(void)

Checks whether the system OSC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearSysOscErr(void)

Clears the system OSC clock error.

static inline void CLOCK_SetSysOscMonitorMode(*scg_sosc_monitor_mode_t* mode)

Sets the system OSC monitor mode.

This function sets the system OSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsSysOscValid(void)

Checks whether the system OSC clock is valid.

Returns

True if clock is valid, false if not.

status_t CLOCK_InitSirc(const scg_sirc_config_t *config)

Initializes the SCG slow IRC clock.

This function enables the SCG slow IRC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – SIRC is initialized.
- kStatus_SCG_Busy – SIRC has been enabled and is used by system clock.
- kStatus_ReadOnly – SIRC control register is locked.

status_t CLOCK_DeinitSirc(void)

De-initializes the SCG slow IRC.

This function disables the SCG slow IRC.

Note: This function can't detect whether the SIRC is used by an IP.

Return values

- kStatus_Success – SIRC is deinitialized.
- kStatus_SCG_Busy – SIRC is used by system clock.
- kStatus_ReadOnly – SIRC control register is locked.

static inline void CLOCK_SetSircAsyncClkDiv(scg_async_clk_t asyncClk, scg_async_clk_div_t divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set.

uint32_t CLOCK_GetSircFreq(void)

Gets the SCG SIRC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetSircAsyncFreq(*scg_async_clk_t* type)

Gets the SCG asynchronous clock frequency from the SIRC.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsSircValid(void)

Checks whether the SIRC clock is valid.

Returns

True if clock is valid, false if not.

status_t CLOCK_InitFirc(const *scg_firc_config_t* *config)

Initializes the SCG fast IRC clock.

This function enables the SCG fast IRC clock according to the configuration.

Note: This function can't detect whether the FIRC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – FIRC is initialized.
- kStatus_SCG_Busy – FIRC has been enabled and is used by the system clock.
- kStatus_ReadOnly – FIRC control register is locked.

status_t CLOCK_DeinitFirc(void)

De-initializes the SCG fast IRC.

This function disables the SCG fast IRC.

Note: This function can't detect whether the FIRC is used by an IP.

Return values

- kStatus_Success – FIRC is deinitialized.
- kStatus_SCG_Busy – FIRC is used by the system clock.
- kStatus_ReadOnly – FIRC control register is locked.

static inline void CLOCK_SetFircAsyncClkDiv(*scg_async_clk_t* asyncClk, *scg_async_clk_div_t* divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.

- divider – The divider value to set.

uint32_t CLOCK_GetFircFreq(void)

Gets the SCG FIRC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetFircAsyncFreq(*scg_async_clk_t* type)

Gets the SCG asynchronous clock frequency from the FIRC.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsFircErr(void)

Checks whether the FIRC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearFircErr(void)

Clears the FIRC clock error.

static inline bool CLOCK_IsFircValid(void)

Checks whether the FIRC clock is valid.

Returns

True if clock is valid, false if not.

status_t CLOCK_InitLpFll(const *scg_lpfl_config_t* *config)

Initializes the SCG LPFLL clock.

This function enables the SCG LPFLL clock according to the configuration.

Note: This function can't detect whether the LPFLL has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – LPFLL is initialized.
- kStatus_SCG_Busy – LPFLL has been enabled and is used by the system clock.
- kStatus_ReadOnly – LPFLL control register is locked.

status_t CLOCK_DeinitLpFll(void)

De-initializes the SCG LPFLL.

This function disables the SCG LPFLL.

Note: This function can't detect whether the LPFLL is used by an IP.

Return values

- kStatus_Success – LPFLL is deinitialized.

- kStatus_SCG_Busy – LPFLL is used by the system clock.
- kStatus_ReadOnly – LPFLL control register is locked.

static inline void CLOCK_SetLpFllAsyncClkDiv(*scg_async_clk_t* asyncClk, *scg_async_clk_div_t* divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set.

uint32_t CLOCK_GetLpFllFreq(void)

Gets the SCG LPFLL clock frequency.

Returns

Clock frequency in Hz; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpFllAsyncFreq(*scg_async_clk_t* type)

Gets the SCG asynchronous clock frequency from the LPFLL.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency in Hz; If the clock is invalid, returns 0.

static inline bool CLOCK_IsLpFllValid(void)

Checks whether the LPFLL clock is valid.

Returns

True if the clock is valid, false if not.

static inline void CLOCK_SetXtal0Freq(uint32_t freq)

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

uint32_t divSlow

Slow clock divider, see *scg_sys_clk_div_t*.

uint32_t __pad0__

Reserved.

uint32_t __pad1__

Reserved.

uint32_t __pad2__

Reserved.

uint32_t divCore

Core clock divider, see *scg_sys_clk_div_t*.

uint32_t __pad3__

Reserved.

uint32_t src

System clock source, see `scg_sys_clk_src_t`.

uint32_t __pad4__

reserved.

uint32_t freq

System OSC frequency.

scg_sosc_monitor_mode_t monitorMode

Clock monitor mode selected.

uint8_t enableMode

Enable mode, OR'ed value of `_scg_sosc_enable_mode`.

scg_async_clk_div_t div2

SOSCDIV2 value.

scg_sosc_mode_t workMode

OSC work mode.

uint32_t enableMode

Enable mode, OR'ed value of `_scg_sirc_enable_mode`.

scg_async_clk_div_t div2

SIRCDIV2 value.

scg_sirc_range_t range

Slow IRC frequency range.

scg_firc_trim_mode_t trimMode

FIRC trim mode.

scg_firc_trim_src_t trimSrc

Trim source.

scg_firc_trim_div_t trimDiv

Trim predivided value for the system OSC.

uint8_t trimCoar

Trim coarse value; Irrelevant if trimMode is `kSCG_FircTrimUpdate`.

uint8_t trimFine

Trim fine value; Irrelevant if trimMode is `kSCG_FircTrimUpdate`.

uint32_t enableMode

Enable mode, OR'ed value of `_scg_firc_enable_mode`.

scg_async_clk_div_t div2

FIRCDIV2 value.

scg_firc_range_t range

Fast IRC frequency range.

const *scg_firc_trim_config_t* *trimConfig

Pointer to the FIRC trim configuration; set NULL to disable trim.

scg_lpfl_trim_mode_t trimMode

Trim mode.

scg_lpfl_lock_mode_t lockMode

Lock mode; Irrelevant if the trimMode is `kSCG_LpFlTrimNonUpdate`.

scg_lpfl_trim_src_t trimSrc

Trim source.

uint8_t trimDiv

Trim predivideds value, which can be 0 ~ 31. [Trim source frequency / (trimDiv + 1)] must be 2 MHz or 32768 Hz.

uint8_t trimValue

Trim value; Irrelevant if trimMode is the kSCG_LpFlTrimUpdate.

uint8_t enableMode

Enable mode, OR'ed value of *_scg_lpfl_enable_mode*

scg_async_clk_div_t div2

LPFLLDIV2 value.

scg_lpfl_range_t range

LPFLL frequency range.

const *scg_lpfl_trim_config_t* *trimConfig

Trim configuration; set NULL to disable trim.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

struct *_scg_sys_clk_config*

#include <fsl_clock.h> SCG system clock configuration.

struct *_scg_sosc_config*

#include <fsl_clock.h> SCG system OSC configuration.

struct *_scg_sirc_config*

#include <fsl_clock.h> SCG slow IRC clock configuration.

struct *_scg_firc_trim_config*

#include <fsl_clock.h> SCG fast IRC clock trim configuration.

struct *_scg_firc_config_t*

#include <fsl_clock.h> SCG fast IRC clock configuration.

struct *_scg_lpfl_trim_config*

#include <fsl_clock.h> SCG LPFLL clock trim configuration.

struct *_scg_lpfl_config*

#include <fsl_clock.h> SCG low power FLL configuration.

2.4 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum _crc_bits

CRC bit width.

Values:

enumerator kCrcBits16

Generate 16-bit CRC code

enumerator kCrcBits32

Generate 32-bit CRC code

enum _crc_result

CRC result type.

Values:

enumerator kCrcFinalChecksum

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator kCrcIntermediateChecksum

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for CRC_Init() to continue adding data to this checksum.

typedef enum _crc_bits crc_bits_t

CRC bit width.

typedef enum _crc_result crc_result_t

CRC result type.

typedef struct _crc_config crc_config_t

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void CRC_Init(CRC_Type *base, const crc_config_t *config)

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- base – CRC peripheral address.
- config – CRC module configuration structure.

static inline void CRC_Deinit(CRC_Type *base)

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct _crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1\_0000\_0010\_0001 = x^{12} + x^5 + 1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.5 EWM: External Watchdog Monitor Driver

void EWM_Init(EWM_Type *base, const ewm_config_t *config)

Initializes the EWM peripheral.

This function is used to initialize the EWM. After calling, the EWM runs immediately according to the configuration. Note that, except for the interrupt enable control bit, other control bits and registers are write once after a CPU reset. Modifying them more than once generates a bus transfer error.

This is an example.

```
ewm_config_t config;
EWM_GetDefaultConfig(&config);
config.compareHighValue = 0xAAU;
EWM_Init(ewm_base, &config);
```

Parameters

- base – EWM peripheral base address
- config – The configuration of the EWM

void EWM_Deinit(EWM_Type *base)

Deinitializes the EWM peripheral.

This function is used to shut down the EWM.

Parameters

- base – EWM peripheral base address

void EWM_GetDefaultConfig(*ewm_config_t* *config)

Initializes the EWM configuration structure.

This function initializes the EWM configuration structure to default values. The default values are as follows.

```
ewmConfig->enableEwm = true;
ewmConfig->enableEwmInput = false;
ewmConfig->setInputAssertLogic = false;
ewmConfig->enableInterrupt = false;
ewmConfig->ewm_lpo_clock_source_t = kEWM_LpoClockSource0;
ewmConfig->prescaler = 0;
ewmConfig->compareLowValue = 0;
ewmConfig->compareHighValue = 0xFEU;
```

See also:

`ewm_config_t`

Parameters

- config – Pointer to the EWM configuration structure.

static inline void EWM_EnableInterrupts(EWM_Type *base, uint32_t mask)

Enables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to enable The parameter can be combination of the following source if defined
 - kEWM_InterruptEnable

static inline void EWM_DisableInterrupts(EWM_Type *base, uint32_t mask)

Disables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to disable The parameter can be combination of the following source if defined
 - kEWM_InterruptEnable

static inline uint32_t EWM_GetStatusFlags(EWM_Type *base)

Gets all status flags.

This function gets all status flags.

This is an example for getting the running flag.

```
uint32_t status;  
status = EWM_GetStatusFlags(ewm_base) & kEWM_RunningFlag;
```

See also:

`_ewm_status_flags_t`

- True: a related status flag has been set.
- False: a related status flag is not set.

Parameters

- base – EWM peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

`void EWM_Refresh(EWM_Type *base)`

Services the EWM.

This function resets the EWM counter to zero.

Parameters

- base – EWM peripheral base address

`FSL_EWM_DRIVER_VERSION`

EWM driver version 2.0.4.

`enum _ewm_lpo_clock_source`

Describes EWM clock source.

Values:

enumerator `kEWM_LpoClockSource0`

EWM clock sourced from `lpo_clk[0]`

enumerator `kEWM_LpoClockSource1`

EWM clock sourced from `lpo_clk[1]`

enumerator `kEWM_LpoClockSource2`

EWM clock sourced from `lpo_clk[2]`

enumerator `kEWM_LpoClockSource3`

EWM clock sourced from `lpo_clk[3]`

`enum _ewm_interrupt_enable_t`

EWM interrupt configuration structure with default settings all disabled.

This structure contains the settings for all of EWM interrupt configurations.

Values:

enumerator `kEWM_InterruptEnable`

Enable the EWM to generate an interrupt

`enum _ewm_status_flags_t`

EWM status flags.

This structure contains the constants for the EWM status flags for use in the EWM functions.

Values:

enumerator `kEWM_RunningFlag`

Running flag, set when EWM is enabled

```
typedef enum _ewm_lpo_clock_source ewm_lpo_clock_source_t
```

Describes EWM clock source.

```
typedef struct _ewm_config ewm_config_t
```

Data structure for EWM configuration.

This structure is used to configure the EWM.

```
struct _ewm_config
```

#include <fsl_ewm.h> Data structure for EWM configuration.

This structure is used to configure the EWM.

Public Members

```
bool enableEwm
```

Enable EWM module

```
bool enableEwmInput
```

Enable EWM_in input

```
bool setInputAssertLogic
```

EWM_in signal assertion state

```
bool enableInterrupt
```

Enable EWM interrupt

```
ewm_lpo_clock_source_t clockSource
```

Clock source select

```
uint8_t prescaler
```

Clock prescaler value

```
uint8_t compareLowValue
```

Compare low-register value

```
uint8_t compareHighValue
```

Compare high-register value

2.6 FGPIO Driver

```
void FGPIO_PinInit(FGPIO_Type *base, uint32_t pin, const gpio_pin_config_t *config)
```

Initializes a FGPIO pin used by the board.

To initialize the FGPIO driver, define a pin configuration, as either input or output, in the user file. Then, call the FGPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration:

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO port pin number
- config – FGPIO pin configuration pointer

static inline void FGPIO_PinWrite(FGPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple FGPIO pins to the logic 1 or 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number
- output – FGPIOpin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void FGPIO_PortSet(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 1.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortClear(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortToggle(FGPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple FGPIO pins.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline uint32_t FGPIO_PinRead(FGPIO_Type *base, uint32_t pin)

Reads the current input value of the FGPIO port.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number

Return values

FGPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

uint32_t FGPIO_PortGetInterruptFlags(FGPIO_Type *base)

Reads the FGPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level-sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)

Return values

The – current FGPIO port interrupt status flags, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

void FGPIO_PortClearInterruptFlags(FGPIO_Type *base, uint32_t mask)

Clears the multiple FGPIO pin interrupt status flag.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

2.7 C90TFS Flash Driver

2.8 ftfx adapter

2.9 Ftftx CACHE Driver

enum _ftfx_cache_ram_func_constants

Constants for execute-in-RAM flash function.

Values:

enumerator kFTF_x_CACHE_RamFuncMaxSizeInWords

The maximum size of execute-in-RAM function.

typedef struct *_flash_prefetch_speculation_status* ftfx_prefetch_speculation_status_t

FTFx prefetch speculation status.

typedef struct *_ftfx_cache_config* ftfx_cache_config_t

FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

status_t FTF_x_CACHE_Init(*ftfx_cache_config_t* *config)

Initializes the global FTFx cache structure members.

This function checks and initializes the Flash module for the other FTFx cache APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTF_x_Success – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CACHE_ClearCachePrefetchSpeculation(ftfx_cache_config_t *config, bool isPreProcess)`

Process the cache/prefetch/speculation to the flash.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `isPreProcess` – The possible option used to control flash cache/prefetch/speculation

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CACHE_PflashSetPrefetchSpeculation(ftfx_prefetch_speculation_status_t *speculationStatus)`

Sets the PFlash prefetch speculation to the intended speculation status.

Parameters

- `speculationStatus` – The expected protect status to set to the PFlash protection register. Each bit is

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidSpeculationOption` – An invalid speculation option argument is provided.

`status_t FTFx_CACHE_PflashGetPrefetchSpeculation(ftfx_prefetch_speculation_status_t *speculationStatus)`

Gets the PFlash prefetch speculation status.

Parameters

- `speculationStatus` – Speculation status returned by the PFlash IP.

Return values

`kStatus_FTFx_Success` – API was executed successfully.

`struct _flash_prefetch_speculation_status`

`#include <fsl_ftfx_cache.h>` FTFx prefetch speculation status.

Public Members

`bool instructionOff`

Instruction speculation.

`bool dataOff`

Data speculation.

`union function_bit_operation_ptr_t`

`#include <fsl_ftfx_cache.h>`

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint32_t *base, uint32_t bitMask, uint32_t bitShift, uint32_t bitValue)

struct _ftfx_cache_config

#include <fsl_ftfx_cache.h> FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint8_t flashMemoryIndex

0 - primary flash; 1 - secondary flash

function_bit_operation_ptr_t bitOperFuncAddr

An buffer point to the flash execute-in-RAM function.

2.10 ftfx controller

FTFx driver status codes.

Values:

enumerator kStatus_FTFx_Success

API is executed successfully

enumerator kStatus_FTFx_InvalidArgument

Invalid argument

enumerator kStatus_FTFx_SizeError

Error size

enumerator kStatus_FTFx_AlignmentError

Parameter is not aligned with the specified baseline

enumerator kStatus_FTFx_AddressError

Address is out of range

enumerator kStatus_FTFx_AccessError

Invalid instruction codes and out-of bound addresses

enumerator kStatus_FTFx_ProtectionViolation

The program/erase operation is requested to execute on protected areas

enumerator kStatus_FTFx_CommandFailure

Run-time error during command execution.

enumerator kStatus_FTFx_UnknownProperty

Unknown property.

enumerator kStatus_FTFx_EraseKeyError

API erase key is invalid.

enumerator kStatus_FTFx_RegionExecuteOnly

The current region is execute-only.

enumerator kStatus_FTFx_ExecuteInRamFunctionNotReady

Execute-in-RAM function is not available.

enumerator kStatus_FTFx_PartitionStatusUpdateFailure

Failed to update partition status.

enumerator kStatus_FTFx_SetFlexramAsEepromError

Failed to set FlexRAM as EEPROM.

enumerator kStatus_FTFx_RecoverFlexramAsRamError

Failed to recover FlexRAM as RAM.

enumerator kStatus_FTFx_SetFlexramAsRamError

Failed to set FlexRAM as RAM.

enumerator kStatus_FTFx_RecoverFlexramAsEepromError

Failed to recover FlexRAM as EEPROM.

enumerator kStatus_FTFx_CommandNotSupported

Flash API is not supported.

enumerator kStatus_FTFx_SwapSystemNotInUninitialized

Swap system is not in an uninitialized state.

enumerator kStatus_FTFx_SwapIndicatorAddressError

The swap indicator address is invalid.

enumerator kStatus_FTFx_ReadOnlyProperty

The flash property is read-only.

enumerator kStatus_FTFx_InvalidPropertyValue

The flash property value is out of range.

enumerator kStatus_FTFx_InvalidSpeculationOption

The option of flash prefetch speculation is invalid.

enumerator kStatus_FTFx_CommandOperationInProgress

The option of flash command is processing.

enum _ftfx_driver_api_keys

Enumeration for FTFx driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFTFx_ApiEraseKey

Key value used to validate all FTFx erase APIs.

void FTFx_API_Init(*ftfx_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

status_t FTFx_API_UpdateFlexnvmPartitionStatus(*ftfx_config_t* *config)

Updates FlexNVM memory partition status according to data flash 0 IFR.

This function updates FlexNVM memory partition status.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FTFx_CMD_Erase(*ftfx_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FTFx_CMD_EraseSectorNonBlocking(*ftfx_config_t* *config, uint32_t start, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address.

Parameters

- config – The pointer to the storage for the driver runtime state.

- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CMD_EraseAll(ftfx_config_t *config, uint32_t key)`

Erases entire flash.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllUnsecure(ftfx_config_t *config, uint32_t key)`

Erases the entire flash, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllExecuteOnlySegments(ftfx_config_t *config, uint32_t key)`

Erases all program flash execute-only segments defined by the FXACC registers.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_Program(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramOnce(ftfx_config_t *config, uint32_t index, const uint8_t *src, uint32_t lengthInBytes)`

Programs Program Once Field through parameters.

This function programs the Program Once Field with the desired data for a given flash area as determined by the index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating which area of the Program Once Field to be programmed.
- `src` – A pointer to the source buffer of data that is to be programmed into the Program Once Field.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramSection(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.

- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t FTFx_CMD_ProgramPartition(ftfx_config_t *config, ftfx_partition_flexram_load_opt_t option, uint32_t eepromDataSizeCode, uint32_t flexnvmPartitionCode, uint8_t CSEcKeySize, uint8_t CFE)`

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

status_t FTFx_CMD_ReadOnce(*ftfx_config_t* *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)

Reads the Program Once Field through parameters.

This function reads the read once field with given index and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- index – The index indicating the area of program once field to be read.
- dst – A pointer to the destination buffer of data that is used to store data to be read.
- lengthInBytes – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FTFx_CMD_ReadResource(*ftfx_config_t* *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, *ftfx_read_resource_opt_t* option)

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be programmed. Must be word-aligned.
- dst – A pointer to the destination buffer of data that is used to store data to be read.
- lengthInBytes – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- option – The resource option which indicates which area should be read back.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – Parameter is not aligned with the specified baseline.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyErase(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAll(ftfx_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAllExecuteOnlySegments(ftfx_config_t *config,
ftfx_margin_value_t margin)`

Verifies whether the program flash execute-only segments have been erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyProgram(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes,
const uint8_t *expectedData, ftfx_margin_value_t margin,
uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.

- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_REG_GetSecurityState(ftfx_config_t *config, ftfx_security_state_t *state)`

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t FTFx_CMD_SecurityBypass(ftfx_config_t *config, const uint8_t *backdoorKey)`

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_SetFlexramFunction(ftfx_config_t *config, ftfx_flexram_func_opt_t option)`

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

```
status_t FTFx_CMD_SwapControl(ftfx_config_t *config, uint32_t address,  
                             ftfx_swap_control_opt_t option, ftfx_swap_state_config_t  
                             *returnInfo)
```

Configures the Swap function or checks the swap state of the Flash module.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `address` – Address used to configure the flash Swap function.
- `option` – The possible option used to configure Flash Swap function or check the flash Swap status
- `returnInfo` – A pointer to the data which is used to return the information of flash Swap.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

```
enum _ftfx_partition_flexram_load_option
```

Enumeration for the FlexRAM load during reset option.

Values:

```
enumerator kFTFx_PartitionFlexramLoadOptLoadedWithValidEepromData
```

FlexRAM is loaded with valid EEPROM data during reset sequence.

enumerator kFTFx_PartitionFlexramLoadOptNotLoaded
FlexRAM is not loaded during reset sequence.

enum _ftfx_read_resource_opt

Enumeration for the two possible options of flash read resource command.

Values:

enumerator kFTFx_ResourceOptionFlashIfc

Select code for Program flash 0 IFR, Program flash swap 0 IFR, Data flash 0 IFR

enumerator kFTFx_ResourceOptionVersionId

Select code for the version ID

enum _ftfx_margin_value

Enumeration for supported FTFx margin levels.

Values:

enumerator kFTFx_MarginValueNormal

Use the 'normal' read level for 1s.

enumerator kFTFx_MarginValueUser

Apply the 'User' margin to the normal read-1 level.

enumerator kFTFx_MarginValueFactory

Apply the 'Factory' margin to the normal read-1 level.

enumerator kFTFx_MarginValueInvalid

Not real margin level, Used to determine the range of valid margin level.

enum _ftfx_security_state

Enumeration for the three possible FTFx security states.

Values:

enumerator kFTFx_SecurityStateNotSecure

Flash is not secure.

enumerator kFTFx_SecurityStateBackdoorEnabled

Flash backdoor is enabled.

enumerator kFTFx_SecurityStateBackdoorDisabled

Flash backdoor is disabled.

enum _ftfx_flexram_function_option

Enumeration for the two possible options of set FlexRAM function command.

Values:

enumerator kFTFx_FlexramFuncOptAvailableAsRam

An option used to make FlexRAM available as RAM

enumerator kFTFx_FlexramFuncOptAvailableForEeprom

An option used to make FlexRAM available for EEPROM

enum _flash_acceleration_ram_property

Enumeration for acceleration ram property.

Values:

enumerator kFLASH_AccelerationRamSize

enum _ftfx_swap_control_option

Enumeration for the possible options of Swap control commands.

Values:

enumerator kFTFx_SwapControlOptionIntializeSystem

An option used to initialize the Swap system

enumerator kFTFx_SwapControlOptionSetInUpdateState

An option used to set the Swap in an update state

enumerator kFTFx_SwapControlOptionSetInCompleteState

An option used to set the Swap in a complete state

enumerator kFTFx_SwapControlOptionReportStatus

An option used to report the Swap status

enumerator kFTFx_SwapControlOptionDisableSystem

An option used to disable the Swap status

enum _ftfx_swap_state

Enumeration for the possible flash Swap status.

Values:

enumerator kFTFx_SwapStateUninitialized

Flash Swap system is in an uninitialized state.

enumerator kFTFx_SwapStateReady

Flash Swap system is in a ready state.

enumerator kFTFx_SwapStateUpdate

Flash Swap system is in an update state.

enumerator kFTFx_SwapStateUpdateErased

Flash Swap system is in an updateErased state.

enumerator kFTFx_SwapStateComplete

Flash Swap system is in a complete state.

enumerator kFTFx_SwapStateDisabled

Flash Swap system is in a disabled state.

enum _ftfx_swap_block_status

Enumeration for the possible flash Swap block status.

Values:

enumerator kFTFx_SwapBlockStatusLowerHalfProgramBlocksAtZero

Swap block status is that lower half program block at zero.

enumerator kFTFx_SwapBlockStatusUpperHalfProgramBlocksAtZero

Swap block status is that upper half program block at zero.

enum _ftfx_memory_type

Enumeration for FTFx memory type.

Values:

enumerator kFTFx_MemTypePflash

enumerator kFTFx_MemTypeFlexnvm

typedef enum *_ftfx_partition_flexram_load_option* ftfx_partition_flexram_load_opt_t
 Enumeration for the FlexRAM load during reset option.

typedef enum *_ftfx_read_resource_opt* ftfx_read_resource_opt_t
 Enumeration for the two possible options of flash read resource command.

typedef enum *_ftfx_margin_value* ftfx_margin_value_t
 Enumeration for supported FTFx margin levels.

typedef enum *_ftfx_security_state* ftfx_security_state_t
 Enumeration for the three possible FTFx security states.

typedef enum *_ftfx_flexram_function_option* ftfx_flexram_func_opt_t
 Enumeration for the two possible options of set FlexRAM function command.

typedef enum *_ftfx_swap_control_option* ftfx_swap_control_opt_t
 Enumeration for the possible options of Swap control commands.

typedef enum *_ftfx_swap_state* ftfx_swap_state_t
 Enumeration for the possible flash Swap status.

typedef enum *_ftfx_swap_block_status* ftfx_swap_block_status_t
 Enumeration for the possible flash Swap block status.

typedef struct *_ftfx_swap_state_config* ftfx_swap_state_config_t
 Flash Swap information.

typedef struct *_ftfx_special_mem* ftfx_spec_mem_t
 ftfx special memory access information.

typedef struct *_ftfx_mem_descriptor* ftfx_mem_desc_t
 Flash memory descriptor.

typedef struct *_ftfx_ops_config* ftfx_ops_config_t
 Active FTFx information for the current operation.

typedef struct *_ftfx_ifr_descriptor* ftfx_ifr_desc_t
 Flash IFR memory descriptor.

typedef struct *_ftfx_config* ftfx_config_t
 Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

struct *_ftfx_swap_state_config*
#include <fsl_ftfx_controller.h> Flash Swap information.

Public Members

ftfx_swap_state_t flashSwapState
 The current Swap system status.

ftfx_swap_block_status_t currentSwapBlockStatus
 The current Swap block status.

ftfx_swap_block_status_t nextSwapBlockStatus
 The next Swap block status.

struct *_ftfx_special_mem*
#include <fsl_ftfx_controller.h> ftfx special memory access information.

Public Members

uint32_t base

Base address of flash special memory.

uint32_t size

size of flash special memory.

uint32_t count

flash special memory count.

struct __ftfx_mem_descriptor

#include <fsl_ftfx_controller.h> Flash memory descriptor.

Public Members

uint32_t blockBase

A base address of the flash block

uint32_t aliasBlockBase

A base address of the alias flash block

uint32_t totalSize

The size of the flash block.

uint32_t sectorSize

The size in bytes of a sector of flash.

uint32_t blockCount

A number of flash blocks.

struct __ftfx_ops_config

#include <fsl_ftfx_controller.h> Active FTFx information for the current operation.

Public Members

uint32_t convertedAddress

A converted address for the current flash type.

struct __ftfx_ifr_descriptor

#include <fsl_ftfx_controller.h> Flash IFR memory descriptor.

union function_ptr_t

#include <fsl_ftfx_controller.h>

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint8_t *FTMRx_fstat)

struct __ftfx_config

#include <fsl_ftfx_controller.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint32_t flexramBlockBase

The base address of the FlexRAM/acceleration RAM

uint32_t flexramTotalSize

The size of the FlexRAM/acceleration RAM

uint16_t eepromTotalSize

The size of EEPROM area which was partitioned from FlexRAM

function_ptr_t runCmdFuncAddr

An buffer point to the flash execute-in-RAM function.

struct __unnamed8__

Public Members

uint8_t type

Type of flash block.

uint8_t index

Index of flash block.

struct feature

struct addrAligment

struct feature

struct resRange

Public Members

uint8_t versionIdStart

Version ID start address

uint32_t pflashIfrStart

Program Flash 0 IFR start address

uint32_t dflashIfrStart

Data Flash 0 IFR start address

uint32_t pflashSwapIfrStart

Program Flash Swap IFR start address

struct idxInfo

2.11 ftfx feature

FTFx_DRIVER_IS_FLASH_RESIDENT

Flash driver location.

Used for the flash resident application.

FTFx_DRIVER_IS_EXPORTED

Flash Driver Export option.

Used for the MCUXpresso SDK application.

FTFx_FLASH1_HAS_PROT_CONTROL

Indicates whether the secondary flash has its own protection register in flash module.

FTFx_FLASH1_HAS_XACC_CONTROL

Indicates whether the secondary flash has its own Execute-Only access register in flash module.

FTFx_DRIVER_HAS_FLASH1_SUPPORT

Indicates whether the secondary flash is supported in the Flash driver.

FTFx_FLASH_COUNT

FTFx_FLASH1_IS_INDEPENDENT_BLOCK

2.12 Ftftx FLASH Driver

status_t FLASH_Init(*flash_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLASH_Erase(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.

- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_EraseSectorNonBlocking(*flash_config_t* *config, uint32_t start, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address, and it is executed asynchronously.

NOTE: This function can only erase one flash sector at a time, and the other commands can be executed after the previous command has been completed.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.

`status_t` FLASH_EraseAll(*flash_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the all pflash and flexnvm were erased successfully, the swap and eeprom have been reset to unconfigured state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_EraseAllUnsecure(flash_config_t *config, uint32_t key)`

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protected sectors of flash were reset to unprotected status.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_Program(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data were programmed successfully into flash based on desired start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_ProgramOnce(*flash_config_t* *config, uint32_t index, uint8_t *src, uint32_t lengthInBytes)

Program the Program-Once-Field through parameters.

This function Program the Program-once-field with given index and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- index – The index indicating the area of program once field to be read.
- src – A pointer to the source buffer of data that is used to store data to be write.
- lengthInBytes – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; The index indicating the area of program once field was programmed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_ProgramSection(*flash_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be programmed. Must be word-aligned.

- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into flash based on start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t` FLASH_ReadResource(*flash_config_t* *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, *ftfx_read_resource_opt_t* option)

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ReadOnce(flash_config_t *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)`

Reads the Program Once Field through parameters.

This function reads the read once field with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been successfully read from Program flash0 IFR map and Program Once field based on index and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyErase(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region has been erased.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyEraseAll(*flash_config_t* *config, *ftfx_margin_value_t* margin)

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- config – A pointer to the storage for the driver runtime state.
- margin – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; all program flash and flexnvm were in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyProgram(*flash_config_t* *config, `uint32_t` start, `uint32_t` lengthInBytes, `const uint8_t` *expectedData, *ftfx_margin_value_t* margin, `uint32_t` *failedAddress, `uint32_t` *failedData)

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be verified. Must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.

- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified FLASH region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_GetSecurityState(*flash_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flash was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_SecurityBypass(*flash_config_t* *config, const `uint8_t` *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_SetFlexramFunction(*flash_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- config – A pointer to the storage for the driver runtime state.
- option – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_Swap(*flash_config_t* *config, `uint32_t` address, `bool` isSetEnable)

Swaps the lower half flash with the higher half flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- address – Address used to configure the flash swap function
- isSetEnable – The possible option used to configure the Flash Swap function or check the flash Swap status.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the lower half flash and higher half flash have been swapped.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_SwapSystemNotInUninitialized` – Swap system is not in an uninitialized state.

`status_t FLASH_IsProtected(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, flash_prot_state_t *protection_state)`

Returns the protection state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash protect status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be checked. Must be word-aligned.
- `protection_state` – A pointer to the value returned for the current protection status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protection state of specified FLASH region was stored to `protection_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t FLASH_IsExecuteOnly(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, flash_xacc_state_t *access_state)`

Returns the access state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash access status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be checked. Must be word-aligned.
- `access_state` – A pointer to the value returned for the current access status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the `executeOnly` state of specified FLASH region was stored to `access_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- `kStatus_FTFx_AlignmentError` – The parameter is not aligned to the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t FLASH_PflashSetProtection(flash_config_t *config, pflash_prot_status_t *protectStatus)`
Sets the PFlash Protection to the intended protection status.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the PFlash protection register. Each bit is corresponding to protection of 1/32(64) of the total PFlash. The least significant bit is corresponding to the lowest address area of PFlash. The most significant bit is corresponding to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLASH_PflashGetProtection(flash_config_t *config, pflash_prot_status_t *protectStatus)`
Gets the PFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – Protect status returned by the PFlash IP. Each bit is corresponding to the protection of 1/32(64) of the total PFlash. The least significant bit corresponds to the lowest address area of the PFlash. The most significant bit corresponds to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the Protection state was stored to `protectStatus`;
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t FLASH_GetProperty(flash_config_t *config, flash_property_tag_t whichProperty, uint32_t *value)`

Returns the desired flash property.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `whichProperty` – The desired property from the list of properties in enum `flash_property_tag_t`
- `value` – A pointer to the value returned for the desired flash property.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flash property was stored to `value`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- kStatus_FTFx_UnknownProperty – An unknown property tag.

status_t FLASH_GetCommandState(void)

Get previous command status.

This function is used to obtain the execution status of the previous command.

Return values

- kStatus_FTFx_Success – The previous command is executed successfully.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

FSL_FLASH_DRIVER_VERSION

Flash driver version for SDK.

Version 3.1.3.

FSL_FLASH_DRIVER_VERSION_ROM

Flash driver version for ROM.

Version 3.0.0.

enum _flash_protection_state

Enumeration for the three possible flash protection levels.

Values:

enumerator kFLASH_ProtectionStateUnprotected

Flash region is not protected.

enumerator kFLASH_ProtectionStateProtected

Flash region is protected.

enumerator kFLASH_ProtectionStateMixed

Flash is mixed with protected and unprotected region.

enum _flash_execute_only_access_state

Enumeration for the three possible flash execute access levels.

Values:

enumerator kFLASH_AccessStateUnLimited

Flash region is unlimited.

enumerator kFLASH_AccessStateExecuteOnly

Flash region is execute only.

enumerator kFLASH_AccessStateMixed

Flash is mixed with unlimited and execute only region.

enum _flash_property_tag

Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflash0SectorSize
Pflash sector size property.

enumerator kFLASH_PropertyPflash0TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash0BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash0BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash0BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash0FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash0AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash0AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyPflash1SectorSize
Pflash sector size property.

enumerator kFLASH_PropertyPflash1TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash1BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash1BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash1BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash1FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash1AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash1AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyFlexRamBlockBaseAddr
FlexRam block base address property.

enumerator kFLASH_PropertyFlexRamTotalSize
FlexRam total size property.

typedef enum *_flash_protection_state* flash_prot_state_t
Enumeration for the three possible flash protection levels.

typedef union *_pflash_protection_status* pflash_prot_status_t
PFlash protection status.

typedef enum *_flash_execute_only_access_state* flash_xacc_state_t
Enumeration for the three possible flash execute access levels.


```
typedef enum _flash_property_tag flash_property_tag_t
```

Enumeration for various flash properties.

```
typedef struct _flash_config flash_config_t
```

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

```
kStatus_FLASH_Success
```

```
kFLASH_ApiEraseKey
```

```
union _pflash_protection_status
```

#include <fsl_ftfx_flash.h> PFlash protection status.

Public Members

```
uint32_t protl
```

```
PROT[31:0] .
```

```
uint32_t proth
```

```
PROT[63:32].
```

```
uint8_t protsl
```

```
PROTS[7:0] .
```

```
uint8_t protsh
```

```
PROTS[15:8] .
```

```
uint8_t reserved[2]
```

```
struct _flash_config
```

#include <fsl_ftfx_flash.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

2.13 Fftfx FLEXNVM Driver

```
status_t FLEXNVM_Init(flexnvm_config_t *config)
```

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- *config* – Pointer to the storage for the driver runtime state.

Return values

- *kStatus_FTFx_Success* – API was executed successfully.
- *kStatus_FTFx_InvalidArgument* – An invalid argument is provided.
- *kStatus_FTFx_ExecuteInRamFunctionNotReady* – Execute-in-RAM function is not available.
- *kStatus_FTFx_PartitionStatusUpdateFailure* – Failed to update the partition status.

status_t FLEXNVM_DflashErase(*flexnvm_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of data flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLEXNVM_EraseAll(*flexnvm_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- config – Pointer to the storage for the driver runtime state.
- key – A value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the entire flexnvm has been erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_EraseKeyError – API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLEXNVM_EraseAllUnsecure(flexnvm_config_t *config, uint32_t key)`

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flexnvm is not in security state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLEXNVM_DflashProgram(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programed into specified date flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.

- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashProgramSection(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash area.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t FLEXNVM_ProgramPartition(flexnvm_config_t *config, ftfx_partition_flexram_load_opt_t option, uint32_t eepromDataSizeCode, uint32_t flexnvmPartitionCode)`

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eeepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

status_t FLEXNVM_ProgramPartition_CSE(*flexnvm_config_t* *config,
 ftfx_partition_flexram_load_opt_t option, *uint32_t*
 eeepromDataSizeCode, *uint32_t*
 flexnvmPartitionCode, *uint8_t* CSEcKeySize, *uint8_t*
 SFE)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM. This is the CSE enabled version for IP's like FTFC.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eeepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.
- `CSEcKeySize` – CSEc/SHE key size, see RM for details and possible values
- `SFE` – Security Flag Extension (SFE), see RM for details and possible values

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_ReadResource(flexnvm_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyErase(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.

- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified data flash region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_VerifyEraseAll(flexnvm_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the entire flexnvm region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyProgram(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FLEXNVM_GetSecurityState(*flexnvm_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flexnvm was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

status_t FLEXNVM_SecurityBypass(*flexnvm_config_t* *config, const uint8_t *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_SetFlexramFunction(flexnvm_config_t *config, ftfx_flexram_func_opt_t option)`

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashSetProtection(flexnvm_config_t *config, uint8_t protectStatus)`

Sets the DFlash protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the DFlash protection register. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified DFlash region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_DflashGetProtection(*flexnvm_config_t* *config, `uint8_t` *protectStatus)

Gets the DFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash, and so on. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t` FLEXNVM_EepromSetProtection(*flexnvm_config_t* *config, `uint8_t` protectStatus)

Sets the EEPROM protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the EEPROM protection register. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of EEPROM, and so on. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_EepromGetProtection(*flexnvm_config_t* *config, `uint8_t` *protectStatus)

Gets the EEPROM protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of the EEPROM. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- kStatus_FTFx_CommandNotSupported – Flash API is not supported.

status_t FLEXNVM_GetProperty(*flexnvm_config_t* *config, *flexnvm_property_tag_t* whichProperty, *uint32_t* *value)

Returns the desired flexnvm property.

Parameters

- config – A pointer to the storage for the driver runtime state.
- whichProperty – The desired property from the list of properties in enum *flexnvm_property_tag_t*
- value – A pointer to the value returned for the desired flexnvm property.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_UnknownProperty – An unknown property tag.

enum *_flexnvm_property_tag*

Enumeration for various flexnvm properties.

Values:

enumerator kFLEXNVM_PropertyDflashSectorSize
Dflash sector size property.

enumerator kFLEXNVM_PropertyDflashTotalSize
Dflash total size property.

enumerator kFLEXNVM_PropertyDflashBlockSize
Dflash block size property.

enumerator kFLEXNVM_PropertyDflashBlockCount
Dflash block count property.

enumerator kFLEXNVM_PropertyDflashBlockBaseAddr
Dflash block base address property.

enumerator kFLEXNVM_PropertyAliasDflashBlockBaseAddr
Dflash block base address Alias property.

enumerator kFLEXNVM_PropertyFlexRamBlockBaseAddr
FlexRam block base address property.

enumerator kFLEXNVM_PropertyFlexRamTotalSize
FlexRam total size property.

enumerator kFLEXNVM_PropertyEepromTotalSize
EEPROM total size property.

typedef enum *_flexnvm_property_tag* *flexnvm_property_tag_t*

Enumeration for various flexnvm properties.

typedef struct *_flexnvm_config* *flexnvm_config_t*

Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

`status_t FLEXNVM_EepromWrite(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs the EEPROM with data at locations passed in through parameters.

This function programs the emulated EEPROM with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified eeprom region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsEepromError` – Failed to set flexram as eeprom.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_RecoverFlexramAsRamError` – Failed to recover the FlexRAM as RAM.

`struct _flexnvm_config`

`#include <fsl_ftfx_flexnvm.h>` Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

2.14 ftfx utilities

`ALIGN_DOWN(x, a)`

Alignment(down) utility.

`ALIGN_UP(x, a)`

Alignment(up) utility.

`MAKE_VERSION(major, minor, bugfix)`

Constructs the version number for drivers.

`MAKE_STATUS(group, code)`

Constructs a status code value from a group and a code number.

`FOUR_CHAR_CODE(a, b, c, d)`

Constructs the four character code for the Flash driver API key.

`B1P4(b)`

bytes2word utility.

B1P3(b)

B1P2(b)

B1P1(b)

B2P3(b)

B2P2(b)

B2P1(b)

B3P2(b)

B3P1(b)

BYTE2WORD_1_3(x, y)

BYTE2WORD_2_2(x, y)

BYTE2WORD_3_1(x, y)

BYTE2WORD_1_1_2(x, y, z)

BYTE2WORD_1_2_1(x, y, z)

BYTE2WORD_2_1_1(x, y, z)

BYTE2WORD_1_1_1_1(x, y, z, w)

2.15 FTM: FlexTimer Driver

status_t FTM_Init(FTM_Type *base, const *ftm_config_t* *config)

Un gates the FTM clock and config ures the peripheral for basic operation.

Note: This API should be called at the beginning of the application which is using the FTM driver. If the FTM instance has only TPM features, please use the TPM driver.

Parameters

- base – FTM peripheral base address
- config – Pointer to the user configuration structure.

Returns

kStatus_Success indicates success; Else indicates failure.

void FTM_Deinit(FTM_Type *base)

Gates the FTM clock.

Parameters

- base – FTM peripheral base address

void FTM_GetDefaultConfig(*ftm_config_t* *config)

Fills in the FTM configuration structure with the default settings.

The default values are:

```
config->prescale = kFTM_Prescale_Divide_1;
config->bdmMode = kFTM_BdmMode_0;
config->pwmSyncMode = kFTM_SoftwareTrigger;
config->reloadPoints = 0;
config->faultMode = kFTM_Fault_Disable;
config->faultFilterValue = 0;
config->deadTimePrescale = kFTM_Deadtime_Prescale_1;
config->deadTimeValue = 0;
config->extTriggers = 0;
config->chnlInitState = 0;
config->chnlPolarity = 0;
config->useGlobalTimeBase = false;
config->hwTriggerResetCount = false;
config->swTriggerResetCount = true;
```

Parameters

- config – Pointer to the user configuration structure.

```
static inline ftm_clock_prescale_t FTM__CalculateCounterClkDiv(FTM_Type *base, uint32_t
                                                                counterPeriod_Hz, uint32_t
                                                                srcClock_Hz)
```

brief Calculates the counter clock prescaler.

This function calculates the values for SC[PS] bit.

param base FTM peripheral base address param counterPeriod_Hz The desired frequency in Hz which corresponding to the time when the counter reaches the mod value param srcClock_Hz FTM counter clock in Hz

return Calculated clock prescaler value, see *ftm_clock_prescale_t*.

```
status_t FTM_SetupPwm(FTM_Type *base, const ftm_chnl_pwm_signal_param_t *chnlParams,
                      uint8_t numOfChnls, ftm_pwm_mode_t mode, uint32_t pwmFreq_Hz,
                      uint32_t srcClock_Hz)
```

Configures the PWM signal parameters.

Call this function to configure the PWM signal period, mode, duty cycle, and edge. Use this function to configure all FTM channels that are used to output a PWM signal.

Parameters

- base – FTM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure; This should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration *ftm_pwm_mode_t*
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – FTM counter clock in Hz

Returns

kStatus_Success if the PWM setup was successful *kStatus_Error* on failure

```
status_t FTM_UpdatePwmDutycycle(FTM_Type *base, ftm_chnl_t chnlNumber, ftm_pwm_mode_t
                                currentPwmMode, uint8_t dutyCyclePercent)
```

Updates the duty cycle of an active PWM signal.

Parameters

- `base` – FTM peripheral base address
- `chnlNumber` – The channel/channel pair number. In combined mode, this represents the channel pair number
- `currentPwmMode` – The current PWM mode set during PWM setup
- `dutyCyclePercent` – New PWM pulse width; The value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

`kStatus_Success` if the PWM update was successful `kStatus_Error` on failure

`void FTM_UpdateChnlEdgeLevelSelect(FTM_Type *base, ftm_chnl_t chnlNumber, uint8_t level)`

Updates the edge level selection for a channel.

Parameters

- `base` – FTM peripheral base address
- `chnlNumber` – The channel number
- `level` – The level to be set to the `ELSnB:ELSnA` field; Valid values are 00, 01, 10, 11. See the Kinetis SoC reference manual for details about this field.

`status_t FTM_SetupPwmMode(FTM_Type *base, const ftm_chnl_pwm_config_param_t *chnlParams, uint8_t numOfChnls, ftm_pwm_mode_t mode)`

Configures the PWM mode parameters.

Call this function to configure the PWM signal mode, duty cycle in ticks, and edge. Use this function to configure all FTM channels that are used to output a PWM signal. Please note that: This API is similar with `FTM_SetupPwm()` API, but will not set the timer period, and this API will set channel match value in timer ticks, not period percent.

Parameters

- `base` – FTM peripheral base address
- `chnlParams` – Array of PWM channel parameters to configure the channel(s)
- `numOfChnls` – Number of channels to configure; This should be the size of the array passed in
- `mode` – PWM operation mode, options available in enumeration `ftm_pwm_mode_t`

Returns

`kStatus_Success` if the PWM setup was successful `kStatus_Error` on failure

`void FTM_ConfigSinglePWM(FTM_Type *base, const ftm_chnl_param_t *chnlParams, ftm_chnl_t chnlNumber)`

Configure FTM edge aligned PWM or center aligned PWM by each channel.

This function configure PWM signal by setting channel `n` value register. Need to invoke `FTM_SetInitialModuloValue` to configure FTM period.

Parameters

- `base` – FTM peripheral base address
- `chnlParams` – PWM configuration structure pointer.
- `chnlPairNumber` – Channel number.

```
void FTM_ConfigCombinePWM(FTM_Type *base, const ftm_chnl_param_t *chnlParams,  
                          ftm_chnl_t chnlPairNumber)
```

Configure FTM Combine PWM, Modified Combine PWM or Asymmetrical PWM by each channel pair.

This function configure PWM signal by setting channel n value register. Need to invoke FTM_SetInitialModuloValue to configure FTM period.

Parameters

- base – FTM peripheral base address
- chnlParams – PWM configuration structure pointer.
- chnlPairNumber – Channel pair number, options are 0, 1, 2, 3.

```
void FTM_SetupInputCapture(FTM_Type *base, ftm_chnl_t chnlNumber,  
                          ftm_input_capture_edge_t captureMode, uint32_t filterValue)
```

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the captureMode argument occurs on the channel, the FTM counter is captured into the CnV register. The user has to read the CnV register separately to get this value. The filter function is disabled if the filterVal argument passed in is 0. The filter function is available only for channels 0, 1, 2, 3.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel number
- captureMode – Specifies which edge to capture
- filterValue – Filter value, specify 0 to disable filter. Available only for channels 0-3.

```
void FTM_SetupOutputCompare(FTM_Type *base, ftm_chnl_t chnlNumber,  
                           ftm_output_compare_mode_t compareMode, uint32_t  
                           compareValue)
```

Configures the FTM to generate timed pulses.

When the FTM counter matches the value of compareVal argument (this is written into CnV reg), the channel output is changed based on what is specified in the compareMode argument.

Parameters

- base – FTM peripheral base address
- chnlNumber – The channel number
- compareMode – Action to take on the channel output when the compare condition is met
- compareValue – Value to be programmed in the CnV register.

```
void FTM_SetupDualEdgeCapture(FTM_Type *base, ftm_chnl_t chnlPairNumber, const  
                             ftm_dual_edge_capture_param_t *edgeParam, uint32_t  
                             filterValue)
```

Configures the dual edge capture mode of the FTM.

This function sets up the dual edge capture mode on a channel pair. The capture edge for the channel pair and the capture mode (one-shot or continuous) is specified in the parameter argument. The filter function is disabled if the filterVal argument passed is zero. The filter function is available only on channels 0 and 2. The user has to read the channel CnV registers separately to get the capture values.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- edgeParam – Sets up the dual edge capture function
- filterValue – Filter value, specify 0 to disable filter. Available only for channel pair 0 and 1.

void FTM_EnableInterrupts(FTM_Type *base, uint32_t mask)

Enables the selected FTM interrupts.

Parameters

- base – FTM peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `ftm_interrupt_enable_t`

void FTM_DisableInterrupts(FTM_Type *base, uint32_t mask)

Disables the selected FTM interrupts.

Parameters

- base – FTM peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `ftm_interrupt_enable_t`

uint32_t FTM_GetEnabledInterrupts(FTM_Type *base)

Gets the enabled FTM interrupts.

Parameters

- base – FTM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `ftm_interrupt_enable_t`

uint32_t FTM_GetInstance(FTM_Type *base)

Gets the instance from the base address.

Parameters

- base – FTM peripheral base address

Returns

The FTM instance

uint32_t FTM_GetStatusFlags(FTM_Type *base)

Gets the FTM status flags.

Parameters

- base – FTM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ftm_status_flags_t`

void FTM_ClearStatusFlags(FTM_Type *base, uint32_t mask)

Clears the FTM status flags.

Parameters

- base – FTM peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ftm_status_flags_t`

static inline void FTM_SetTimerPeriod(FTM_Type *base, uint32_t ticks)

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

- a. This API allows the user to use the FTM module as a timer. Do not mix usage of this API with FTM's PWM setup API's.
 - b. Call the utility macros provided in the fsl_common.h to convert usec or msec to ticks.
-

Parameters

- base – FTM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

static inline void FTM_SetInitialModuloValue(FTM_Type *base, uint16_t initialValue, uint16_t moduloValue)

Set initial value and modulo value for FTM.

Parameters

- base – FTM peripheral base address
- initialValue – FTM counter initial value.
- moduloValue – FTM counter modulo value.

static inline uint32_t FTM_GetCurrentTimerCount(FTM_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – FTM peripheral base address

Returns

The current counter value in ticks

static inline void FTM_SetChannelMatchValue(FTM_Type *base, *ftm_chnl_t* chnlNumber, uint16_t value)

Set channel match value for output.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to set.
- value – Channel match value for output.

static inline uint32_t FTM_GetInputCaptureValue(FTM_Type *base, *ftm_chnl_t* chnlNumber)

Reads the captured value.

This function returns the captured value of a FTM channel configured in input capture or dual edge capture mode.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- `base` – FTM peripheral base address
- `chnlNumber` – Channel to be read

Returns

The captured FTM counter value of the input modes.

```
static inline void FTM_StartTimer(FTM_Type *base, ftm_clock_source_t clockSource)
```

Starts the FTM counter.

Parameters

- `base` – FTM peripheral base address
- `clockSource` – FTM clock source; After the clock source is set, the counter starts running.

```
static inline void FTM_StopTimer(FTM_Type *base)
```

Stops the FTM counter.

Parameters

- `base` – FTM peripheral base address

```
static inline uint32_t FTM_GetSoftwareOutputValue(FTM_Type *base)
```

Get channel software output status.

Parameters

- `base` – FTM peripheral base address

Returns

Status of channel software output, logical OR value of `ftm_channel_index_t`.

```
static inline uint32_t FTM_GetSoftwareOutputEnable(FTM_Type *base)
```

Get channel software enable status.

Parameters

- `base` – FTM peripheral base address

Returns

Status of channel software enable, logical OR value of `ftm_channel_index_t`.

```
static inline void FTM_SetSoftwareOutputCtrl(FTM_Type *base, uint32_t chnlEnable, uint32_t chnlValue)
```

Enables or disables the channel software output control and set channel software output value.

Parameters

- `base` – FTM peripheral base address
- `chnlEnable` – Channels to enable or disable software output control, logical OR of enumeration `ftm_channel_index_t` members.
- `chnlValue` – Channels output value, logical OR of enumeration `ftm_channel_index_t` members

```
static inline void FTM_SetSoftwareCtrlEnable(FTM_Type *base, ftm_chnl_t chnlNumber, bool value)
```

Enables or disables the channel software output control.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to be enabled or disabled
- value – true: channel output is affected by software output control false: channel output is unaffected by software output control

static inline void FTM_SetSoftwareCtrlVal(FTM_Type *base, *ftm_chnl_t* chnlNumber, bool value)
Sets the channel software output control value.

Parameters

- base – FTM peripheral base address.
- chnlNumber – Channel to be configured
- value – true to set 1, false to set 0

static inline void FTM_SetFaultControlEnable(FTM_Type *base, *ftm_chnl_t* chnlPairNumber, bool value)

This function enables/disables the fault control in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: Enable fault control for this channel pair; false: No fault control

static inline void FTM_SetDeadTimeEnable(FTM_Type *base, *ftm_chnl_t* chnlPairNumber, bool value)

This function enables/disables the dead time insertion in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: Insert dead time in this channel pair; false: No dead time inserted

static inline void FTM_SetComplementaryEnable(FTM_Type *base, *ftm_chnl_t* chnlPairNumber, bool value)

This function enables/disables complementary mode in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: enable complementary mode; false: disable complementary mode

static inline void FTM_SetInvertEnable(FTM_Type *base, *ftm_chnl_t* chnlPairNumber, bool value)

This function enables/disables inverting control in a channel pair.

Parameters

- base – FTM peripheral base address
- chnlPairNumber – The FTM channel pair number; options are 0, 1, 2, 3
- value – true: enable inverting; false: disable inverting

```
void FTM_SetupQuadDecode(FTM_Type *base, const ftm_phase_params_t *phaseAParams,
                        const ftm_phase_params_t *phaseBParams,
                        ftm_quad_decode_mode_t quadMode)
```

Configures the parameters and activates the quadrature decoder mode.

Parameters

- base – FTM peripheral base address
- phaseAParams – Phase A configuration parameters
- phaseBParams – Phase B configuration parameters
- quadMode – Selects encoding mode used in quadrature decoder mode

```
static inline uint32_t FTM_GetQuadDecoderFlags(FTM_Type *base)
```

Gets the FTM Quad Decoder flags.

Parameters

- base – FTM peripheral base address.

Returns

Flag mask of FTM Quad Decoder, see `_ftm_quad_decoder_flags`.

```
static inline void FTM_SetQuadDecoderModuloValue(FTM_Type *base, uint32_t startValue,
                                                uint32_t overValue)
```

Sets the modulo values for Quad Decoder.

The modulo values configure the minimum and maximum values that the Quad decoder counter can reach. After the counter goes over, the counter value goes to the other side and decrease/increase again.

Parameters

- base – FTM peripheral base address.
- startValue – The low limit value for Quad Decoder counter.
- overValue – The high limit value for Quad Decoder counter.

```
static inline uint32_t FTM_GetQuadDecoderCounterValue(FTM_Type *base)
```

Gets the current Quad Decoder counter value.

Parameters

- base – FTM peripheral base address.

Returns

Current quad Decoder counter value.

```
static inline void FTM_ClearQuadDecoderCounterValue(FTM_Type *base)
```

Clears the current Quad Decoder counter value.

The counter is set as the initial value.

Parameters

- base – FTM peripheral base address.

```
FSL_FTM_DRIVER_VERSION
```

FTM driver version 2.7.1.

```
enum _ftm_chnl
```

List of FTM channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kFTM_Chnl_0
FTM channel number 0

enumerator kFTM_Chnl_1
FTM channel number 1

enumerator kFTM_Chnl_2
FTM channel number 2

enumerator kFTM_Chnl_3
FTM channel number 3

enumerator kFTM_Chnl_4
FTM channel number 4

enumerator kFTM_Chnl_5
FTM channel number 5

enumerator kFTM_Chnl_6
FTM channel number 6

enumerator kFTM_Chnl_7
FTM channel number 7

enum _ftm_fault_input

List of FTM faults.

Values:

enumerator kFTM_Fault_0
FTM fault 0 input pin

enumerator kFTM_Fault_1
FTM fault 1 input pin

enumerator kFTM_Fault_2
FTM fault 2 input pin

enumerator kFTM_Fault_3
FTM fault 3 input pin

enum _ftm_pwm_mode

FTM PWM operation modes.

Values:

enumerator kFTM_EdgeAlignedPwm
Edge-aligned PWM

enumerator kFTM_CenterAlignedPwm
Center-aligned PWM

enumerator kFTM_EdgeAlignedCombinedPwm
Edge-aligned combined PWM

enumerator kFTM_CenterAlignedCombinedPwm
Center-aligned combined PWM

enumerator kFTM_AsymmetricalCombinedPwm
Asymmetrical combined PWM

enum _ftm_pwm_level_select

FTM PWM output pulse mode: high-true, low-true or no output.

Note: kFTM_NoPwmSignal: ELSnB:ELSnA = 0:0 kFTM_LowTrue: ELSnB:ELSnA = 0:1 EPWM: Channel n output is forced low at counter overflow, forced high at channel n match. CPWM: Channel n output is forced low at channel n match when counting down, and forced high at channel n match when counting up. Combined PWM: Channel n output is forced high at beginning of period and at channel n+1 match. It is forced low at the channel n match. kFTM_HighTrue: ELSnB:ELSnA = 1:0 EPWM: Channel n output is forced high at counter overflow, forced low at channel n match. CPWM: Channel n output is forced high at channel n match when counting down, and forced low at channel n match when counting up. Combined PWM: Channel n output is forced low at beginning of period and at channel n+1 match. It is forced high at the channel n match.

Values:

enumerator kFTM_NoPwmSignal

No PWM output on pin

enumerator kFTM_LowTrue

Low true pulses

enumerator kFTM_HighTrue

High true pulses

enum _ftm_output_compare_mode

FlexTimer output compare mode.

Values:

enumerator kFTM_NoOutputSignal

No channel output when counter reaches CnV

enumerator kFTM_ToggleOnMatch

Toggle output

enumerator kFTM_ClearOnMatch

Clear output

enumerator kFTM_SetOnMatch

Set output

enum _ftm_input_capture_edge

FlexTimer input capture edge.

Values:

enumerator kFTM_RisingEdge

Capture on rising edge only

enumerator kFTM_FallingEdge

Capture on falling edge only

enumerator kFTM_RiseAndFallEdge

Capture on rising or falling edge

enum _ftm_dual_edge_capture_mode

FlexTimer dual edge capture modes.

Values:

enumerator kFTM_OneShot

One-shot capture mode

enumerator kFTM_Continuous

Continuous capture mode

enum _ftm_quad_decode_mode

FlexTimer quadrature decode modes.

Values:

enumerator kFTM_QuadPhaseEncode

Phase A and Phase B encoding mode

enumerator kFTM_QuadCountAndDir

Count and direction encoding mode

enum _ftm_phase_polarity

FlexTimer quadrature phase polarities.

Values:

enumerator kFTM_QuadPhaseNormal

Phase input signal is not inverted

enumerator kFTM_QuadPhaseInvert

Phase input signal is inverted

enum _ftm_deadtime_prescale

FlexTimer pre-scaler factor for the dead time insertion.

Values:

enumerator kFTM_Deadtime_Prescale_1

Divide by 1

enumerator kFTM_Deadtime_Prescale_4

Divide by 4

enumerator kFTM_Deadtime_Prescale_16

Divide by 16

enum _ftm_clock_source

FlexTimer clock source selection.

Values:

enumerator kFTM_SystemClock

System clock selected

enumerator kFTM_FixedClock

Fixed frequency clock

enumerator kFTM_ExternalClock

External clock

enum _ftm_clock_prescale

FlexTimer pre-scaler factor selection for the clock source.

Values:

enumerator kFTM_Prescale_Divide_1

Divide by 1

enumerator kFTM_Prescale_Divide_2
Divide by 2

enumerator kFTM_Prescale_Divide_4
Divide by 4

enumerator kFTM_Prescale_Divide_8
Divide by 8

enumerator kFTM_Prescale_Divide_16
Divide by 16

enumerator kFTM_Prescale_Divide_32
Divide by 32

enumerator kFTM_Prescale_Divide_64
Divide by 64

enumerator kFTM_Prescale_Divide_128
Divide by 128

enum _ftm_bdm_mode

Options for the FlexTimer behaviour in BDM Mode.

Values:

enumerator kFTM_BdmMode_0
FTM counter stopped, CH(n)F bit can be set, FTM channels in functional mode, writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_1
FTM counter stopped, CH(n)F bit is not set, FTM channels outputs are forced to their safe value , writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_2
FTM counter stopped, CH(n)F bit is not set, FTM channels outputs are frozen when chip enters in BDM mode, writes to MOD,CNTIN and C(n)V registers bypass the register buffers

enumerator kFTM_BdmMode_3
FTM counter in functional mode, CH(n)F bit can be set, FTM channels in functional mode, writes to MOD,CNTIN and C(n)V registers is in fully functional mode

enum _ftm_fault_mode

Options for the FTM fault control mode.

Values:

enumerator kFTM_Fault_Disable
Fault control is disabled for all channels

enumerator kFTM_Fault_EvenChnls
Enabled for even channels only(0,2,4,6) with manual fault clearing

enumerator kFTM_Fault_AllChnlsMan
Enabled for all channels with manual fault clearing

enumerator kFTM_Fault_AllChnlsAuto
Enabled for all channels with automatic fault clearing

enum _ftm_external_trigger
FTM external trigger options.

Note: Actual available external trigger sources are SoC-specific

Values:

enumerator kFTM_Chnl0Trigger
Generate trigger when counter equals chnl 0 CnV reg

enumerator kFTM_Chnl1Trigger
Generate trigger when counter equals chnl 1 CnV reg

enumerator kFTM_Chnl2Trigger
Generate trigger when counter equals chnl 2 CnV reg

enumerator kFTM_Chnl3Trigger
Generate trigger when counter equals chnl 3 CnV reg

enumerator kFTM_Chnl4Trigger
Generate trigger when counter equals chnl 4 CnV reg

enumerator kFTM_Chnl5Trigger
Generate trigger when counter equals chnl 5 CnV reg

enumerator kFTM_Chnl6Trigger
Available on certain SoC's, generate trigger when counter equals chnl 6 CnV reg

enumerator kFTM_Chnl7Trigger
Available on certain SoC's, generate trigger when counter equals chnl 7 CnV reg

enumerator kFTM_InitTrigger
Generate Trigger when counter is updated with CNTIN

enumerator kFTM_ReloadInitTrigger
Available on certain SoC's, trigger on reload point

enum _ftm_pwm_sync_method
FlexTimer PWM sync options to update registers with buffer.

Values:

enumerator kFTM_SoftwareTrigger
Software triggers PWM sync

enumerator kFTM_HardwareTrigger_0
Hardware trigger 0 causes PWM sync

enumerator kFTM_HardwareTrigger_1
Hardware trigger 1 causes PWM sync

enumerator kFTM_HardwareTrigger_2
Hardware trigger 2 causes PWM sync

enum _ftm_reload_point
FTM options available as loading point for register reload.

Note: Actual available reload points are SoC-specific

Values:

enumerator kFTM_Chnl0Match

Channel 0 match included as a reload point

enumerator kFTM_Chnl1Match

Channel 1 match included as a reload point

enumerator kFTM_Chnl2Match

Channel 2 match included as a reload point

enumerator kFTM_Chnl3Match

Channel 3 match included as a reload point

enumerator kFTM_Chnl4Match

Channel 4 match included as a reload point

enumerator kFTM_Chnl5Match

Channel 5 match included as a reload point

enumerator kFTM_Chnl6Match

Channel 6 match included as a reload point

enumerator kFTM_Chnl7Match

Channel 7 match included as a reload point

enumerator kFTM_CntMax

Use in up-down count mode only, reload when counter reaches the maximum value

enumerator kFTM_CntMin

Use in up-down count mode only, reload when counter reaches the minimum value

enumerator kFTM_HalfCycMatch

Available on certain SoC's, half cycle match reload point

enum _ftm_interrupt_enable

List of FTM interrupts.

Note: Actual available interrupts are SoC-specific

Values:

enumerator kFTM_Chnl0InterruptEnable

Channel 0 interrupt

enumerator kFTM_Chnl1InterruptEnable

Channel 1 interrupt

enumerator kFTM_Chnl2InterruptEnable

Channel 2 interrupt

enumerator kFTM_Chnl3InterruptEnable

Channel 3 interrupt

enumerator kFTM_Chnl4InterruptEnable

Channel 4 interrupt

enumerator kFTM_Chnl5InterruptEnable

Channel 5 interrupt

enumerator kFTM_Chnl6InterruptEnable

Channel 6 interrupt

enumerator kFTM_Chnl7InterruptEnable
Channel 7 interrupt

enumerator kFTM_FaultInterruptEnable
Fault interrupt

enumerator kFTM_TimeOverflowInterruptEnable
Time overflow interrupt

enumerator kFTM_ReloadInterruptEnable
Reload interrupt; Available only on certain SoC's

enum _ftm_status_flags
List of FTM flags.

Note: Actual available flags are SoC-specific

Values:

enumerator kFTM_Chnl0Flag
Channel 0 Flag

enumerator kFTM_Chnl1Flag
Channel 1 Flag

enumerator kFTM_Chnl2Flag
Channel 2 Flag

enumerator kFTM_Chnl3Flag
Channel 3 Flag

enumerator kFTM_Chnl4Flag
Channel 4 Flag

enumerator kFTM_Chnl5Flag
Channel 5 Flag

enumerator kFTM_Chnl6Flag
Channel 6 Flag

enumerator kFTM_Chnl7Flag
Channel 7 Flag

enumerator kFTM_FaultFlag
Fault Flag

enumerator kFTM_TimeOverflowFlag
Time overflow Flag

enumerator kFTM_ChnlTriggerFlag
Channel trigger Flag

enumerator kFTM_ReloadFlag
Reload Flag; Available only on certain SoC's

enum _ftm_channel_index
List of FTM channel index used in logic OR.

Values:

enumerator kFTM_Chnl0_Mask
Channel 0 Mask

enumerator kFTM_Chnl1_Mask
Channel 1 Mask

enumerator kFTM_Chnl2_Mask
Channel 2 Mask

enumerator kFTM_Chnl3_Mask
Channel 3 Mask

enumerator kFTM_Chnl4_Mask
Channel 4 Mask

enumerator kFTM_Chnl5_Mask
Channel 5 Mask

enumerator kFTM_Chnl6_Mask
Channel 6 Mask

enumerator kFTM_Chnl7_Mask
Channel 7 Mask

List of FTM Quad Decoder flags.

Values:

enumerator kFTM_QuadDecoderCountingIncreaseFlag
Counting direction is increasing (FTM counter increment), or the direction is decreasing.

enumerator kFTM_QuadDecoderCountingOverflowOnTopFlag
Indicates if the TOF bit was set on the top or the bottom of counting.

typedef enum *_ftm_chnl* ftm_chnl_t
List of FTM channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_ftm_fault_input* ftm_fault_input_t
List of FTM faults.

typedef enum *_ftm_pwm_mode* ftm_pwm_mode_t
FTM PWM operation modes.

typedef enum *_ftm_pwm_level_select* ftm_pwm_level_select_t
FTM PWM output pulse mode: high-true, low-true or no output.

Note: kFTM_NoPwmSignal: ELSnB:ELSnA = 0:0 kFTM_LowTrue: ELSnB:ELSnA = 0:1 EPWM: Channel n output is forced low at counter overflow, forced high at channel n match. CPWM: Channel n output is forced low at channel n match when counting down, and forced high at channel n match when counting up. Combined PWM: Channel n output is forced high at beginning of period and at channel n+1 match. It is forced low at the channel n match. kFTM_HighTrue: ELSnB:ELSnA = 1:0 EPWM: Channel n output is forced high at counter overflow, forced low at channel n match. CPWM: Channel n output is forced high at channel n match when counting down, and forced low at channel n match when counting up. Combined PWM: Channel n output is forced low at beginning of period and at channel n+1 match. It is forced high at the channel n match.

typedef struct *_ftm_chnl_pwm_signal_param* ftm_chnl_pwm_signal_param_t
Options to configure a FTM channel's PWM signal.

typedef struct *_ftm_chnl_pwm_config_param* ftm_chnl_pwm_config_param_t
Options to configure a FTM channel using precise setting.

typedef struct *_ftm_chnl_param* ftm_chnl_param_t
General options to configure a FTM channel using precise setting.

typedef enum *_ftm_output_compare_mode* ftm_output_compare_mode_t
FlexTimer output compare mode.

typedef enum *_ftm_input_capture_edge* ftm_input_capture_edge_t
FlexTimer input capture edge.

typedef enum *_ftm_dual_edge_capture_mode* ftm_dual_edge_capture_mode_t
FlexTimer dual edge capture modes.

typedef struct *_ftm_dual_edge_capture_param* ftm_dual_edge_capture_param_t
FlexTimer dual edge capture parameters.

typedef enum *_ftm_quad_decode_mode* ftm_quad_decode_mode_t
FlexTimer quadrature decode modes.

typedef enum *_ftm_phase_polarity* ftm_phase_polarity_t
FlexTimer quadrature phase polarities.

typedef struct *_ftm_phase_param* ftm_phase_params_t
FlexTimer quadrature decode phase parameters.

typedef struct *_ftm_fault_param* ftm_fault_param_t
Structure is used to hold the parameters to configure a FTM fault.

typedef enum *_ftm_deadtime_prescale* ftm_deadtime_prescale_t
FlexTimer pre-scaler factor for the dead time insertion.

typedef enum *_ftm_clock_source* ftm_clock_source_t
FlexTimer clock source selection.

typedef enum *_ftm_clock_prescale* ftm_clock_prescale_t
FlexTimer pre-scaler factor selection for the clock source.

typedef enum *_ftm_bdm_mode* ftm_bdm_mode_t
Options for the FlexTimer behaviour in BDM Mode.

typedef enum *_ftm_fault_mode* ftm_fault_mode_t
Options for the FTM fault control mode.

typedef enum *_ftm_external_trigger* ftm_external_trigger_t
FTM external trigger options.

Note: Actual available external trigger sources are SoC-specific

typedef enum *_ftm_pwm_sync_method* ftm_pwm_sync_method_t
FlexTimer PWM sync options to update registers with buffer.

typedef enum *_ftm_reload_point* ftm_reload_point_t
FTM options available as loading point for register reload.

Note: Actual available reload points are SoC-specific

```
typedef enum _ftm_interrupt_enable ftm_interrupt_enable_t
```

List of FTM interrupts.

Note: Actual available interrupts are SoC-specific

```
typedef enum _ftm_status_flags ftm_status_flags_t
```

List of FTM flags.

Note: Actual available flags are SoC-specific

```
typedef enum _ftm_channel_index ftm_channel_index_t
```

List of FTM channel index used in logic OR.

```
typedef struct _ftm_config ftm_config_t
```

FTM configuration structure.

This structure holds the configuration settings for the FTM peripheral. To initialize this structure to reasonable defaults, call the FTM_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void FTM_SetupFaultInput(FTM_Type *base, ftm_fault_input_t faultNumber, const  
                        ftm_fault_param_t *faultParams)
```

Sets up the working of the FTM fault inputs protection.

FTM can have up to 4 fault inputs. This function sets up fault parameters, fault level, and input filter.

Parameters

- base – FTM peripheral base address
- faultNumber – FTM fault to configure.
- faultParams – Parameters passed in to set up the fault

```
static inline void FTM_SetGlobalTimeBaseOutputEnable(FTM_Type *base, bool enable)
```

Enables or disables the FTM global time base signal generation to other FTMs.

Parameters

- base – FTM peripheral base address
- enable – true to enable, false to disable

```
static inline void FTM_SetOutputMask(FTM_Type *base, ftm_chnl_t chnlNumber, bool mask)
```

Sets the FTM peripheral timer channel output mask.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to be configured
- mask – true: masked, channel is forced to its inactive state; false: un-masked

```
static inline void FTM_SetPwmOutputEnable(FTM_Type *base, ftm_chnl_t chnlNumber, bool  
                                         value)
```

Allows users to enable an output on an FTM channel.

To enable the PWM channel output call this function with val=true. For input mode, call this function with val=false.

Parameters

- base – FTM peripheral base address
- chnlNumber – Channel to be configured
- value – true: enable output; false: output is disabled, used in input mode

static inline void FTM_SetSoftwareTrigger(FTM_Type *base, bool enable)

Enables or disables the FTM software trigger for PWM synchronization.

Parameters

- base – FTM peripheral base address
- enable – true: software trigger is selected, false: software trigger is not selected

static inline void FTM_SetWriteProtection(FTM_Type *base, bool enable)

Enables or disables the FTM write protection.

Parameters

- base – FTM peripheral base address
- enable – true: Write-protection is enabled, false: Write-protection is disabled

static inline void FTM_EnableDmaTransfer(FTM_Type *base, *ftm_chnl_t* chnlNumber, bool enable)

Enable DMA transfer or not.

Note: CHnIE bit needs to be set when calling this API. The channel DMA transfer request is generated and the channel interrupt is not generated if (CHnF = 1) when DMA and CHnIE bits are set.

Parameters

- base – FTM peripheral base address.
- chnlNumber – Channel to be configured
- enable – true to enable, false to disable

static inline void FTM_SetLdok(FTM_Type *base, bool value)

Enable the LDOK bit.

This function enables loading updated values.

Parameters

- base – FTM peripheral base address
- value – true: loading updated values is enabled; false: loading updated values is disabled.

static inline void FTM_SetHalfCycReloadMatchValue(FTM_Type *base, uint32_t ticks)

Sets the half cycle relade period in units of ticks.

This function can be called to set the half-cycle reload value when half-cycle matching is enabled as a reload point. Note: Need enable kFTM_HalfCycMatch as reload point, and when this API call after FTM_StartTimer(), the new HCR value will not be active until next reload point (need call FTM_SetLdok to set LDOK) or register synchronization.

Parameters

- base – FTM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.


```
static inline void FTM_SetLoadFreq(FTM_Type *base, uint32_t loadfreq)
```

Set load frequency value.

Parameters

- base – FTM peripheral base address.
- loadfreq – PWM reload frequency, range: 0 ~ 31.

```
struct _ftm_chnl_pwm_signal_param
```

#include <fsl_ftm.h> Options to configure a FTM channel's PWM signal.

Public Members

ftm_chnl_t chnlNumber

The channel/channel pair number. In combined mode, this represents the channel pair number.

ftm_pwm_level_select_t level

PWM output active level select.

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0 = inactive signal(0% duty cycle)... 100 = always active signal (100% duty cycle).

uint8_t firstEdgeDelayPercent

Used only in kFTM_AsymmetricalCombinedPwm mode to generate an asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure leave as 0; Should be specified as a percentage of the PWM period

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

```
struct _ftm_chnl_pwm_config_param
```

#include <fsl_ftm.h> Options to configure a FTM channel using precise setting.

Public Members

ftm_chnl_t chnlNumber

The channel/channel pair number. In combined mode, this represents the channel pair number.

ftm_pwm_level_select_t level

PWM output active level select.

uint16_t dutyValue

PWM pulse width, the uint of this value is timer ticks.

uint16_t firstEdgeValue

Used only in kFTM_AsymmetricalCombinedPwm mode to generate an asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure leave as 0, uint of this value is timer ticks.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

struct _ftm_chnl_param

#include <fsl_ftm.h> General options to configure a FTM channel using precise setting.

Public Members

ftm_pwm_mode_t mode

PWM output mode.

ftm_pwm_level_select_t level

PWM output active level select.

uint16_t initialValue

FTM counter initial value.

uint16_t moduloValue

FTM counter modulo value.

uint16_t chnlValue

FTM channel n match value.

uint16_t combinedChnlValue

FTM combined channel n+1 match value, used only in (modified) combined PWM mode.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

bool enableDeadtime

Used only in combined PWM mode with enable complementary. true: The deadtime insertion in this pair of channels is enabled; false: The deadtime insertion in this pair of channels is disabled.

struct _ftm_dual_edge_capture_param

#include <fsl_ftm.h> FlexTimer dual edge capture parameters.

Public Members

ftm_dual_edge_capture_mode_t mode

Dual Edge Capture mode

ftm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

ftm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct _ftm_phase_param

#include <fsl_ftm.h> FlexTimer quadrature decode phase parameters.

Public Members

bool enablePhaseFilter

True: enable phase filter; false: disable filter

uint32_t phaseFilterVal

Filter value, used only if phase filter is enabled

ftm_phase_polarity_t phasePolarity

Phase polarity

struct *_ftm_fault_param*

#include <fsl_ftm.h> Structure is used to hold the parameters to configure a FTM fault.

Public Members

bool enableFaultInput

True: Fault input is enabled; false: Fault input is disabled

bool faultLevel

True: Fault polarity is active low; in other words, '0' indicates a fault; False: Fault polarity is active high

bool useFaultFilter

True: Use the filtered fault signal; False: Use the direct path from fault input

struct *_ftm_config*

#include <fsl_ftm.h> FTM configuration structure.

This structure holds the configuration settings for the FTM peripheral. To initialize this structure to reasonable defaults, call the *FTM_GetDefaultConfig()* function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

ftm_clock_prescale_t prescale

FTM clock prescale value

ftm_bdm_mode_t bdmMode

FTM behavior in BDM mode

uint32_t pwmSyncMode

Synchronization methods to use to update buffered registers; Multiple update modes can be used by providing an OR'ed list of options available in enumeration *ftm_pwm_sync_method_t*.

uint32_t reloadPoints

FTM reload points; When using this, the PWM synchronization is not required. Multiple reload points can be used by providing an OR'ed list of options available in enumeration *ftm_reload_point_t*.

ftm_fault_mode_t faultMode

FTM fault control mode

uint8_t faultFilterValue

Fault input filter value

ftm_deadtime_prescale_t deadTimePrescale

The dead time prescalar value

uint32_t deadTimeValue

The dead time value deadTimeValue's available range is 0-1023 when register has DT-VALEX, otherwise its available range is 0-63.

uint32_t extTriggers

External triggers to enable. Multiple trigger sources can be enabled by providing an OR'ed list of options available in enumeration *ftm_external_trigger_t*.

uint8_t chnlInitState

Defines the initialization value of the channels in OUTINT register

uint8_t chnlPolarity

Defines the output polarity of the channels in POL register

bool useGlobalTimeBase

True: Use of an external global time base is enabled; False: disabled

bool swTriggerResetCount

FTM counter synchronization activated by software trigger, active when (syncMethod & FTM_SYNC_SWSYNC_MASK) != 0U

bool hwTriggerResetCount

FTM counter synchronization activated by hardware trigger, active when (syncMethod & (FTM_SYNC_TRIG0_MASK | FTM_SYNC_TRIG1_MASK | FTM_SYNC_TRIG2_MASK)) != 0U

2.16 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator *kGPIO_DigitalInput*

Set current pin as digital input

enumerator *kGPIO_DigitalOutput*

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator *kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW*

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator *kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW*

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator *kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW*

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

```

enumerator kGPIO__UsernonsecureRUsersecureRPrivilegedsecureRW
    User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write
enumerator kGPIO__UsernonsecureNUsersecureRPrivilegedsecureRW
    User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write
enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureRW
    User nonsecure:None; User Secure:None; Privileged Secure:Read+Write
enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureR
    User nonsecure:None; User Secure:None; Privileged Secure:Read
enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureN
    User nonsecure:None; User Secure:None; Privileged Secure:None
enumerator kGPIO__IgnoreAttributeCheck
    Ignores the attribute check

```

```

typedef enum _gpio_pin_direction gpio_pin_direction_t
    GPIO direction definition.

```

```

typedef enum _gpio_checker_attribute gpio_checker_attribute_t
    GPIO checker attribute.

```

```

typedef struct _gpio_pin_config gpio_pin_config_t
    The GPIO pin configuration structure.

```

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

GPIO_FIT_REG(value)

```

struct _gpio_pin_config
    #include <fsl_gpio.h> The GPIO pin configuration structure.

```

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

```

gpio_pin_direction_t pinDirection
    GPIO direction, input or output
uint8_t outputLogic
    Set a default output logic, which has no use in input

```

2.17 GPIO Driver

```

void GPIO_PortInit(GPIO_Type *base)
    Initializes the GPIO peripheral.
    This function ungates the GPIO clock.

```

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDenit(GPIO_Type *base)

Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,  
gpio_pin_config_t config =  
{  
    kGPIO_DigitalInput,  
    0,  
}  
Define a digital output pin configuration,  
gpio_pin_config_t config =  
{  
    kGPIO_DigitalOutput,  
    0,  
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)
```

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
uint32_t GPIO_PortGetInterruptFlags(GPIO_Type *base)
```

Reads the GPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

Return values

The – current GPIO port interrupt status flag, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

```
void GPIO_PortClearInterruptFlags(GPIO_Type *base, uint32_t mask)
```

Clears multiple GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)
```

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.18 Common Driver

FSL_COMMON_DRIVER_VERSION

common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE

No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART

Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(*a*, *b*)

Computes the minimum of *a* and *b*.

MAX(*a*, *b*)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(*addr*, *val*)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(*addr*, *val*)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(*addr*, *bits*)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(*addr*, *bits*)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(*addr*, *bits*)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic

Group number for generic status codes.

enumerator kStatusGroup_FLASH

Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI

Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI

Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI
Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART
Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C
Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C
Group number for LPI2C status codes.

enumerator kStatusGroup_UART
Group number for UART status codes.

enumerator kStatusGroup_I2C
Group number for UART status codes.

enumerator kStatusGroup_LPSCI
Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART
Group number for LPUART status codes.

enumerator kStatusGroup_SPI
Group number for SPI status code.

enumerator kStatusGroup_XRDC
Group number for XRDC status code.

enumerator kStatusGroup_SEMA42
Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPi
Group number for ECSPi status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator `kStatusGroup_HAL_RNG`
Group number for HAL RNG status codes.

enumerator `kStatusGroup_HAL_I2S`
Group number for HAL I2S status codes.

enumerator `kStatusGroup_HAL_ADC_SENSOR`
Group number for HAL ADC SENSOR status codes.

enumerator `kStatusGroup_TIMERMANAGER`
Group number for TiMER MANAGER status codes.

enumerator `kStatusGroup_SERIALMANAGER`
Group number for SERIAL MANAGER status codes.

enumerator `kStatusGroup_LED`
Group number for LED status codes.

enumerator `kStatusGroup_BUTTON`
Group number for BUTTON status codes.

enumerator `kStatusGroup_EXTERN_EEPROM`
Group number for EXTERN EEPROM status codes.

enumerator `kStatusGroup_SHELL`
Group number for SHELL status codes.

enumerator `kStatusGroup_MEM_MANAGER`
Group number for MEM MANAGER status codes.

enumerator `kStatusGroup_LIST`
Group number for List status codes.

enumerator `kStatusGroup_OSA`
Group number for OSA status codes.

enumerator `kStatusGroup_COMMON_TASK`
Group number for Common task status codes.

enumerator `kStatusGroup_MSG`
Group number for messaging status codes.

enumerator `kStatusGroup_SDK_OCOTP`
Group number for OCOTP status codes.

enumerator `kStatusGroup_SDK_FLEXSPINOR`
Group number for FLEXSPINOR status codes.

enumerator `kStatusGroup_CODEC`
Group number for codec status codes.

enumerator `kStatusGroup_ASRC`
Group number for codec status ASRC.

enumerator `kStatusGroup_OTFAD`
Group number for codec status codes.

enumerator `kStatusGroup_SDIOSLV`
Group number for SDIOSLV status codes.

enumerator `kStatusGroup_MECC`
Group number for MECC status codes.

enumerator kStatusGroup_ENET_QOS
Group number for ENET_QOS status codes.

enumerator kStatusGroup_LOG
Group number for LOG status codes.

enumerator kStatusGroup_I3CBUS
Group number for I3CBUS status codes.

enumerator kStatusGroup_QSCI
Group number for QSCI status codes.

enumerator kStatusGroup_ELEMU
Group number for ELEMU status codes.

enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.

enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.

enumerator kStatusGroup_IPED
Group number for IPED status codes.

enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.

enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.

enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC

Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT

Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT

Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success

Generic status for Success.

enumerator kStatus_Fail

Generic status for Fail.

enumerator kStatus_ReadOnly

Generic status for read only failure.

enumerator kStatus_OutOfRange

Generic status for out of range access.

enumerator kStatus_InvalidArgument

Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.


```
void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)
```

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

```
static inline status_t EnableIRQ(IRQn_Type interrupt)
```

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

```
static inline status_t DisableIRQ(IRQn_Type interrupt)
```

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

```
static inline status_t EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)
```

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ to set.
- `priNum` – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The flag which IRQ to clear.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the `EnableGlobalIRQ()`.

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the `EnableGlobalIRQ()` and `DisableGlobalIRQ()` in pair.

Parameters

- `primask` – value of primask register to be restored. The primask value is supposed to be provided by the `DisableGlobalIRQ()`.

```
static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t
newValue)
```

```
static inline uint32_t __SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)
```

`FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ`

Macro to use the default weak IRQ handler in drivers.

`MAKE_STATUS(group, code)`

Construct a status code value from a group and code number.

`MAKE_VERSION(major, minor, bugfix)`

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused	Major Version	Minor Version	Bug Fix
31 25 24	17 16	9 8	0

`ARRAY_SIZE(x)`

Computes the number of elements in an array.

`UINT64_H(X)`

Macro to get upper 32 bits of a 64-bit value

`UINT64_L(X)`

Macro to get lower 32 bits of a 64-bit value

`SUPPRESS_FALL_THROUGH_WARNING()`

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag `-Wextra` or `-Wimplicit-fallthrough=n` when using `armgcc`. To suppress this warning, “`SUPPRESS_FALL_THROUGH_WARNING()`,” need to be added at the end of each case section which misses “break;”statement.

`MSDK_REG_SECURE_ADDR(x)`

Convert the register address to the one used in secure mode.

`MSDK_REG_NONSECURE_ADDR(x)`

Convert the register address to the one used in non-secure mode.

`MSDK_INVALID_IRQ_HANDLER`

Invalid IRQ handler address.

2.19 Lin_lpuart_driver

`FSL_LIN_LPUART_DRIVER_VERSION`

LIN LPUART driver version.

`enum _lin_lpuart_stop_bit_count`

Values:

enumerator `kLPUART_OneStopBit`

One stop bit

enumerator `kLPUART_TwoStopBit`

Two stop bits

enum _lin_lpuart_flags

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2

enumerator kLPUART_NoiseErrorInRxDataRegFlag

NOISY bit, sets if noise detected in current data word

enumerator kLPUART_ParityErrorInRxDataRegFlag

PARITY bit, sets if noise detected in current data word

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred

enum _lin_lpuart_interrupt_enable

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect.

enumerator kLPUART_RxActiveEdgeInterruptEnable

Receive Active Edge.

enumerator kLPUART_TxDataRegEmptyInterruptEnable

Transmit data register empty.

enumerator kLPUART_TransmissionCompleteInterruptEnable

Transmission complete.

enumerator kLPUART_RxDataRegFullInterruptEnable

Receiver data register full.

enumerator kLPUART_IdleLineInterruptEnable

Idle line.

enumerator kLPUART_RxOverrunInterruptEnable

Receiver Overrun.

enumerator kLPUART_NoiseErrorInterruptEnable

Noise error flag.

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag.

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag.

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow.

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow.

enum _lin_lpuart_status

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enum lin_lpuart_bit_count_per_char_t

Values:

enumerator LPUART_8_BITS_PER_CHAR

8-bit data characters

enumerator LPUART_9_BITS_PER_CHAR

9-bit data characters

enumerator LPUART_10_BITS_PER_CHAR

10-bit data characters

typedef enum *lin_lpuart_stop_bit_count* lin_lpuart_stop_bit_count_t

static inline bool LIN_LPUART_GetRxDataPolarity(const LPUART_Type *base)

static inline void LIN_LPUART_SetRxDataPolarity(LPUART_Type *base, bool polarity)

static inline void LIN_LPUART_WriteByte(LPUART_Type *base, uint8_t data)

static inline void LIN_LPUART_ReadByte(const LPUART_Type *base, uint8_t *readData)

status_t LIN_LPUART_CalculateBaudRate(LPUART_Type *base, uint32_t baudRate_Bps,
uint32_t srcClock_Hz, uint32_t *osr, uint16_t *sbr)

Calculates the best osr and sbr value for configured baudrate.

Parameters

- base – LPUART peripheral base address
- baudRate_Bps – user configuration structure of type #lin_user_config_t
- srcClock_Hz – pointer to the LIN_LPUART driver state structure
- osr – pointer to osr value
- sbr – pointer to sbr value

Returns

An error code or lin_status_t

void LIN_LPUART_SetBaudRate(LPUART_Type *base, uint32_t *osr, uint16_t *sbr)

Configure baudrate according to osr and sbr value.

Parameters

- base – LPUART peripheral base address
- osr – pointer to osr value

- sbr – pointer to sbr value

```
lin_status_t LIN_LPUART_Init(LPUART_Type *base, lin_user_config_t *linUserConfig,  
                             lin_state_t *linCurrentState, uint32_t linSourceClockFreq)
```

Initializes an LIN_LPUART instance for LIN Network.

The caller provides memory for the driver state structures during initialization. The user must select the LIN_LPUART clock source in the application to initialize the LIN_LPUART. This function initializes a LPUART instance for operation. This function will initialize the run-time state structure to keep track of the on-going transfers, initialize the module to user defined settings and default settings, set break field length to be 13 bit times minimum, enable the break detect interrupt, Rx complete interrupt, frame error detect interrupt, and enable the LPUART module transmitter and receiver

Parameters

- base – LPUART peripheral base address
- linUserConfig – user configuration structure of type #lin_user_config_t
- linCurrentState – pointer to the LIN_LPUART driver state structure

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_Deinit(LPUART_Type *base)
```

Shuts down the LIN_LPUART by disabling interrupts and transmitter/receiver.

Parameters

- base – LPUART peripheral base address

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameDataBlocking(LPUART_Type *base, const uint8_t *txBuff,  
                                                uint8_t txSize, uint32_t timeoutMSec)
```

Sends Frame data out through the LIN_LPUART module using blocking method. This function will calculate the checksum byte and send it with the frame data. Blocking means that the function does not return until the transmission is complete.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send
- txSize – the number of bytes to send
- timeoutMSec – timeout value in milli seconds

Returns

An error code or lin_status_t

```
lin_status_t LIN_LPUART_SendFrameData(LPUART_Type *base, const uint8_t *txBuff, uint8_t  
                                       txSize)
```

Sends frame data out through the LIN_LPUART module using non-blocking method. This enables an a-sync method for transmitting data. Non-blocking means that the function returns immediately. The application has to get the transmit status to know when the transmit is complete. This function will calculate the checksum byte and send it with the frame data.

Parameters

- base – LPUART peripheral base address
- txBuff – source buffer containing 8-bit data chars to send

- txSize – the number of bytes to send

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetTransmitStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking transmission. While sending frame data using non-blocking method, users can use this function to get status of that transmission. This function return `LIN_TX_BUSY` while sending, or `LIN_TIMEOUT` if timeout has occurred, or return `LIN_SUCCESS` when the transmission is complete. The `bytesRemaining` shows number of bytes that still needed to transmit.

Parameters

- base – LPUART peripheral base address
- bytesRemaining – Number of bytes still needed to transmit

Returns

`lin_status_t LIN_TX_BUSY`, `LIN_SUCCESS` or `LIN_TIMEOUT`

`lin_status_t LIN_LPUART_RecvFrmDataBlocking(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize, uint32_t timeoutMSec)`

Receives frame data through the `LIN_LPUART` module using blocking method. This function will check the checksum byte. If the checksum is correct, it will receive the frame data. Blocking means that the function does not return until the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive
- timeoutMSec – timeout value in milli seconds

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_RecvFrmData(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize)`

Receives frame data through the `LIN_LPUART` module using non-blocking method. This function will check the checksum byte. If the checksum is correct, it will receive it with the frame data. Non-blocking means that the function returns immediately. The application has to get the receive status to know when the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AbortTransferData(LPUART_Type *base)`

Aborts an on-going non-blocking transmission/reception. While performing a non-blocking transferring data, users can call this function to terminate immediately the transferring.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetReceiveStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking reception While receiving frame data using non-blocking method, users can use this function to get status of that receiving. This function return the current event ID, LIN_RX_BUSY while receiving and return LIN_SUCCESS, or timeout (LIN_TIMEOUT) when the reception is complete. The bytesRemaining shows number of bytes that still needed to receive.

Parameters

- base – LPUART peripheral base address
- bytesRemaining – Number of bytes still needed to receive

Returns

`lin_status_t` LIN_RX_BUSY, LIN_TIMEOUT or LIN_SUCCESS

`lin_status_t LIN_LPUART_GoToSleepMode(LPUART_Type *base)`

This function puts current node to sleep mode This function changes current node state to LIN_NODE_STATE_SLEEP_MODE.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GotoIdleState(LPUART_Type *base)`

Puts current LIN node to Idle state This function changes current node state to LIN_NODE_STATE_IDLE.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendWakeupSignal(LPUART_Type *base)`

Sends a wakeup signal through the LIN_LPUART interface.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_MasterSendHeader(LPUART_Type *base, uint8_t id)`

Sends frame header out through the LIN_LPUART module using a non-blocking method. This function sends LIN Break field, sync field then the ID with correct parity.

Parameters

- base – LPUART peripheral base address
- id – Frame Identifier

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_EnableIRQ(LPUART_Type *base)`

Enables LIN_LPUART hardware interrupts.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_DisableIRQ(LPUART_Type *base)`

Disables LIN_LPUART hardware interrupts.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AutoBaudCapture(uint32_t instance)`

This function capture bits time to detect break char, calculate baudrate from sync bits and enable transceiver if autobaud successful. This function should only be used in Slave. The timer should be in mode input capture of both rising and falling edges. The timer input capture pin should be externally connected to RXD pin.

Parameters

- `instance` – LPUART instance

Returns

`lin_status_t`

`void LIN_LPUART_IRQHandler(LPUART_Type *base)`

LIN_LPUART RX TX interrupt handler.

Parameters

- `base` – LPUART peripheral base address

Returns

`void`

`LIN_LPUART_TRANSMISSION_COMPLETE_TIMEOUT`

Max loops to wait for LPUART transmission complete.

When de-initializing the LIN LPUART module, the program shall wait for the previous transmission to complete. This parameter defines how many loops to check completion before return error. If defined as 0, driver will wait forever until completion.

`AUTOBAUD_BAUDRATE_TOLERANCE`

`BIT_RATE_TOLERANCE_UNSYNC`

`BIT_DURATION_MAX_19200`

`BIT_DURATION_MIN_19200`

`BIT_DURATION_MAX_14400`

`BIT_DURATION_MIN_14400`

`BIT_DURATION_MAX_9600`

`BIT_DURATION_MIN_9600`

`BIT_DURATION_MAX_4800`

`BIT_DURATION_MIN_4800`

`BIT_DURATION_MAX_2400`

`BIT_DURATION_MIN_2400`

TWO_BIT_DURATION_MAX_19200
TWO_BIT_DURATION_MIN_19200
TWO_BIT_DURATION_MAX_14400
TWO_BIT_DURATION_MIN_14400
TWO_BIT_DURATION_MAX_9600
TWO_BIT_DURATION_MIN_9600
TWO_BIT_DURATION_MAX_4800
TWO_BIT_DURATION_MIN_4800
TWO_BIT_DURATION_MAX_2400
TWO_BIT_DURATION_MIN_2400
AUTOBAUD_BREAK_TIME_MIN

2.20 LPI2C: Low Power Inter-Integrated Circuit Driver

`void LPI2C_DriverIRQHandler(uint32_t instance)`

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- `instance` – LPI2C instance.

`FSL_LPI2C_DRIVER_VERSION`

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator `kStatus_LPI2C_Busy`

The master is already performing a transfer.

enumerator `kStatus_LPI2C_Idle`

The slave driver is idle.

enumerator `kStatus_LPI2C_Nak`

The slave device sent a NAK in response to a byte.

enumerator `kStatus_LPI2C_FifoError`

FIFO under run or overrun.

enumerator `kStatus_LPI2C_BitError`

Transferred bit was not seen on the bus.

enumerator `kStatus_LPI2C_ArbitrationLost`

Arbitration lost error.

enumerator `kStatus_LPI2C_PinLowTimeout`

SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress

Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

I2C_RETRY_TIMES

Retry times for waiting flag.

2.21 LPI2C Master Driver

void LPI2C_MasterGetDefaultConfig(*lpi2c_master_config_t* *masterConfig)

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster      = true;
masterConfig->debugEnable        = false;
masterConfig->ignoreAck          = false;
masterConfig->pinConfig           = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz        = 100000U;
masterConfig->busIdleTimeout_ns   = 0;
masterConfig->pinLowTimeout_ns    = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable  = false;
masterConfig->hostRequest.source   = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with LPI2C_MasterInit().

Parameters

- `masterConfig` – **[out]** User provided configuration structure for default values. Refer to `lpi2c_master_config_t`.

`void LPI2C_MasterInit(LPI2C_Type *base, const lpi2c_master_config_t *masterConfig, uint32_t sourceClock_Hz)`

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `masterConfig` – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void LPI2C_MasterDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t *matchConfig)`

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

`status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)`

Convert provided flags to status code, and clear any errors if present.

Parameters

- `base` – The LPI2C peripheral base address.
- `status` – Current status flags value that will be checked.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_PinLowTimeout` –
- `kStatus_LPI2C_ArbitrationLost` –
- `kStatus_LPI2C_Nak` –
- `kStatus_LPI2C_FifoError` –

`status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)`

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- kStatus__Success –
- kStatus__LPI2C__Busy –

static inline void LPI2C_MasterReset(LPI2C_Type *base)

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as master.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as master.

static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

[_lpi2c_master_flags](#)

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

Attempts to clear other flags has no effect.

See also:

[_lpi2c_master_flags](#).

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

```
static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)
```

Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

```
static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

```
static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

```
static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)
```

Sets the watermarks for LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txWords` – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than `txWords`. Writing a value equal or greater than the FIFO size is truncated.
- `rxWords` – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than `rxWords`. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txCount` – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- `rxCount` – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.


```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,  
                                                lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns *kStatus_LPI2C_Nak*.

Parameters

- *base* – The LPI2C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.

Return values

- *kStatus_Success* – Data was sent successfully.
- *kStatus_LPI2C_Busy* – Another master is currently utilizing the bus.
- *kStatus_LPI2C_Nak* – The slave device sent a NAK in response to a byte.
- *kStatus_LPI2C_FifoError* – FIFO under run or over run.
- *kStatus_LPI2C_ArbitrationLost* – Arbitration lost error.
- *kStatus_LPI2C_PinLowTimeout* – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- *base* – The LPI2C peripheral base address.
- *rxBuff* – The pointer to the data to be transferred.
- *rxSize* – The length in bytes of the data to be transferred.

Return values

- *kStatus_Success* – Data was received successfully.
- *kStatus_LPI2C_Busy* – Another master is currently utilizing the bus.
- *kStatus_LPI2C_Nak* – The slave device sent a NAK in response to a byte.
- *kStatus_LPI2C_FifoError* – FIFO under run or overrun.
- *kStatus_LPI2C_ArbitrationLost* – Arbitration lost error.
- *kStatus_LPI2C_PinLowTimeout* – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterStop(LPI2C_Type *base)

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- *base* – The LPI2C peripheral base address.

Return values

- *kStatus_Success* – The STOP signal was successfully sent on the bus and the transaction terminated.
- *kStatus_LPI2C_Busy* – Another master is currently utilizing the bus.
- *kStatus_LPI2C_Nak* – The slave device sent a NAK in response to a byte.

- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, *lpi2c_master_transfer_t* *transfer)
Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- base – The LPI2C peripheral base address.
- transfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_callback_t* callback, void *userData)

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.

- `handle` – Pointer to the LPI2C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus__Success` – The transaction was started successfully.
- `kStatus__LPI2C__Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

`status_t` LPI2C_MasterTransferGetCount(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus__Success` –
- `kStatus__NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void` LPI2C_MasterTransferAbort(LPI2C_Type *base, *lpi2c_master_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

`void` LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `lpi2cMasterHandle` – Pointer to the LPI2C master driver handle.

`enum` `_lpi2c_master_flags`

LPI2C master peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`

- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_MasterTxReadyFlag

Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag

Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag

End Packet flag

enumerator kLPI2C_MasterStopDetectFlag

Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag

NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag

Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag

FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag

Data match flag

enumerator kLPI2C_MasterBusyFlag

Master busy flag

enumerator kLPI2C_MasterBusBusyFlag

Bus busy flag

enumerator kLPI2C_MasterClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags

Errors to check for.

enum _lpi2c_direction

Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write

Master transmit.

enumerator kLPI2C_Read

Master receive.

enum _lpi2c_master_pin_config

LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain

LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly

LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull

LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin

Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger

Select the input trigger as the host request input

enum _lpi2c_host_request_polarity

LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow

Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh

Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode

LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled

LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1

LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1

LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1

LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1

LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1

LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1

LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum _lpi2c_master_transfer_flags

Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator kLPI2C_TransferDefaultFlag

Transfer starts with a start signal, stops with a stop signal.

enumerator kLPI2C_TransferNoStartFlag

Don't send a start condition, address, and sub address

enumerator kLPI2C_TransferRepeatedStartFlag

Send a repeated start condition

enumerator kLPI2C_TransferNoStopFlag

Don't send a stop condition.

typedef enum _lpi2c_direction lpi2c_direction_t

Direction of master and slave transfers.

typedef enum _lpi2c_master_pin_config lpi2c_master_pin_config_t

LPI2C pin configuration.

typedef enum _lpi2c_host_request_source lpi2c_host_request_source_t

LPI2C master host request selection.

typedef enum _lpi2c_host_request_polarity lpi2c_host_request_polarity_t

LPI2C master host request pin polarity configuration.

typedef struct _lpi2c_master_config lpi2c_master_config_t

Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum _lpi2c_data_match_config_mode lpi2c_data_match_config_mode_t

LPI2C master data match configuration modes.

```
typedef struct _lpi2c_match_config lpi2c_data_match_config_t
```

LPI2C master data match configuration structure.

```
typedef struct _lpi2c_master_transfer lpi2c_master_transfer_t
```

LPI2C master descriptor of the transfer.

```
typedef struct _lpi2c_master_handle lpi2c_master_handle_t
```

LPI2C master handle of the transfer.

```
typedef void (*lpi2c_master_transfer_callback_t)(LPI2C_Type *base, lpi2c_master_handle_t  
*handle, status_t completionStatus, void *userData)
```

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterTransferCreateHandle().

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableMaster

Whether to enable master mode.

bool enableDoze

Whether master is enabled in doze mode.

bool debugEnable

Enable transfers to continue when halted in debug mode.

bool ignoreAck

Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig

The pin configuration option.

uint32_t baudRate_Hz

Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns

Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns

Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest

Host request options.

struct *_lpi2c_match_config*

#include <fsl_lpi2c.h> LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer*

#include <fsl_lpi2c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration *_lpi2c_master_transfer_flags* for available options. Set to 0 or *kLPI2C_TransferDefaultFlag* for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either *kLPI2C_Read* or *kLPI2C_Write*.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct _lpi2c_master_handle

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct hostRequest

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.22 LPI2C Slave Driver

void LPI2C_SlaveGetDefaultConfig(*lpi2c_slave_config_t* *slaveConfig)

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```

slaveConfig->enableSlave      = true;
slaveConfig->address0         = 0U;
slaveConfig->address1         = 0U;
slaveConfig->addressMatchMode = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable  = true;
slaveConfig->filterEnable      = true;
slaveConfig->enableGeneralCall = false;
slaveConfig->sclStall.enableAck = false;
slaveConfig->sclStall.enableTx  = true;
slaveConfig->sclStall.enableRx  = true;
slaveConfig->sclStall.enableAddress = true;
slaveConfig->ignoreAck         = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns = 0;
slaveConfig->sclGlitchFilterWidth_ns = 0;
slaveConfig->dataValidDelay_ns = 0;
slaveConfig->clockHoldTime_ns = 0;

```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- `slaveConfig` – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

```
void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t
                    sourceClock_Hz)
```

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `slaveConfig` – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

```
void LPI2C_SlaveDeinit(LPI2C_Type *base)
```

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveReset(LPI2C_Type *base)
```

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

`static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)`

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_slave_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

`static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)`

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_slave_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

`static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)`

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C slave interrupt requests.

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.
- ackOrNack – Pass true for an ACK or false for a NAK.

```
static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)
```

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- base – The LPI2C peripheral base address.
- enable – True will enable ACKSTALL, false will disable ACKSTALL.

```
static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)
```

Returns the slave address sent by the I2C master.

This function should only be called if the kLPI2C_SlaveAddressValidFlag is asserted.

Parameters

- base – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

```
status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)
```

Performs a polling send transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- actualTxSize – **[out]**

Returns

Error or success status returned by API.

```
status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)
```

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.
- actualRxSize – **[out]**

Returns

Error or success status returned by API.

```
void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle,  
                                     lpi2c_slave_transfer_callback_t callback, void *userData)
```

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C slave driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

`status_t` LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *lpi2c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kLPI2C_SlaveTransmitEvent* and *kLPI2C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kLPI2C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.
- `eventMask` – Bit mask formed by OR'ing together *lpi2c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kLPI2C_SlaveAllEvents* to enable all events.

Return values

- `kStatus_Success` – Slave transfers were successfully started.
- `kStatus_LPI2C_Busy` – Slave transfers have already been started on this handle.

`status_t` LPI2C_SlaveTransferGetCount(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to *i2c_slave_handle_t* structure.
- `count` – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

enum *_lpi2c_slave_flags*

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag

Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag

Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag

Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag

Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag

Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag

Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag

Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag

FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag

Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag

General call flag

enumerator kLPI2C_SlaveBusyFlag

Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag

Bus busy flag

enumerator kLPI2C_SlaveClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags

Errors to check for.

enum _lpi2c_slave_address_match

LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0

Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1

Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1

Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, lpi2c_slave_transfer_t *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

struct `_lpi2c_slave_config`

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool `enableSlave`

Enable slave mode.

uint8_t `address0`

Slave's 7-bit address.

uint8_t `address1`

Alternate slave 7-bit address.

lpi2c_slave_address_match_t `addressMatchMode`

Address matching options.

bool `filterDozeEnable`

Enable digital glitch filter in doze mode.

bool `filterEnable`

Enable digital glitch filter.

bool `enableGeneralCall`

Enable general call address matching.

struct *_lpi2c_slave_config* `sclStall`

SCL stall enable options.

bool `ignoreAck`

Continue transfers after a NACK is detected.

bool `enableReceivedAddressRead`

Enable reading the address received address as the first byte of data.

uint32_t `sdaGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t `sclGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t `dataValidDelay_ns`

Width in nanoseconds of the data valid delay.

uint32_t `clockHoldTime_ns`

Width in nanoseconds of the clock hold time.

struct `_lpi2c_slave_transfer`

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t `event`

Reason the callback is being invoked.

uint8_t receivedAddress

Matching address send by master.

uint8_t *data

Transfer buffer

size_t dataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct _lpi2c_slave_handle

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.23 LPIT: Low-Power Interrupt Timer

enum _lpit_chnl

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

Values:

enumerator kLPIT_Chnl_0

LPIT channel number 0

enumerator kLPIT_Chnl_1

LPIT channel number 1

enumerator kLPIT_Chnl_2

LPIT channel number 2

enumerator kLPIT_Chnl_3

LPIT channel number 3

enum _lpit_timer_modes

Mode options available for the LPIT timer.

Values:

enumerator kLPIT_PeriodicCounter

Use the all 32-bits, counter loads and decrements to zero

enumerator kLPIT_DualPeriodicCounter

Counter loads, lower 16-bits decrement to zero, then upper 16-bits decrement

enumerator kLPIT_TriggerAccumulator

Counter loads on first trigger and decrements on each trigger

enumerator kLPIT_InputCapture

Counter loads with 0xFFFFFFFF, decrements to zero. It stores the inverse of the current value when a input trigger is detected

enum _lpit_trigger_select

Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

Values:

enumerator kLPIT_Trigger_TimerChn0

Channel 0 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn1

Channel 1 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn2

Channel 2 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn3

Channel 3 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn4

Channel 4 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn5

Channel 5 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn6

Channel 6 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn7

Channel 7 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn8

Channel 8 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn9

Channel 9 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn10

Channel 10 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn11

Channel 11 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn12

Channel 12 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn13

Channel 13 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn14

Channel 14 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn15

Channel 15 is selected as a trigger source

enum _lpit_trigger_source

Trigger source options available.

Values:

enumerator kLPIT_TriggerSource_External

Use external trigger input

enumerator kLPIT_TriggerSource_Internal

Use internal trigger

enum _lpit_interrupt_enable

List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerInterruptEnable

Channel 0 Timer interrupt

enumerator kLPIT_Channel1TimerInterruptEnable

Channel 1 Timer interrupt

enumerator kLPIT_Channel2TimerInterruptEnable

Channel 2 Timer interrupt

enumerator kLPIT_Channel3TimerInterruptEnable

Channel 3 Timer interrupt

enum _lpit_status_flags

List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerFlag

Channel 0 Timer interrupt flag

enumerator kLPIT_Channel1TimerFlag

Channel 1 Timer interrupt flag

enumerator kLPIT_Channel2TimerFlag

Channel 2 Timer interrupt flag

enumerator kLPIT_Channel3TimerFlag

Channel 3 Timer interrupt flag

typedef enum _lpit_chnl lpit_chnl_t

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

typedef enum _lpit_timer_modes lpit_timer_modes_t

Mode options available for the LPIT timer.

typedef enum _lpit_trigger_select lpit_trigger_select_t

Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

typedef enum _lpit_trigger_source lpit_trigger_source_t

Trigger source options available.

typedef enum _lpit_interrupt_enable lpit_interrupt_enable_t

List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef enum _lpit_status_flags lpit_status_flags_t

List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

```
typedef struct _lpit_chnl_params lpit_chnl_params_t
```

Structure to configure the channel timer.

```
typedef struct _lpit_config lpit_config_t
```

LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
FSL_LPIT_DRIVER_VERSION
```

Version 2.1.2

```
LPIT_RESET_STATE_DELAY
```

Delay used in LPIT_Reset.

The macro value should be larger than 4 * core clock / LPIT peripheral clock.

```
void LPIT_Init(LPIT_Type *base, const lpit_config_t *config)
```

Ungates the LPIT clock and configures the peripheral for a basic operation.

This function issues a software reset to reset all channels and registers except the Module Control register.

Note: This API should be called at the beginning of the application using the LPIT driver.

Parameters

- base – LPIT peripheral base address.
- config – Pointer to the user configuration structure.

```
void LPIT_Deinit(LPIT_Type *base)
```

Disables the module and gates the LPIT clock.

Parameters

- base – LPIT peripheral base address.

```
void LPIT_GetDefaultConfig(lpit_config_t *config)
```

Fills in the LPIT configuration structure with default settings.

The default values are:

```
config->enableRunInDebug = false;  
config->enableRunInDoze = false;
```

Parameters

- config – Pointer to the user configuration structure.

```
status_t LPIT_SetupChannel(LPIT_Type *base, lpit_chnl_t channel, const lpit_chnl_params_t *chnlSetup)
```

Sets up an LPIT channel based on the user's preference.

This function sets up the operation mode to one of the options available in the enumeration *lpit_timer_modes_t*. It sets the trigger source as either internal or external, trigger selection and the timers behaviour when a timeout occurs. It also chains the timer if a prior timer is requested by the user.

Parameters

- base – LPIT peripheral base address.

- `channel` – Channel that is being configured.
- `chnlSetup` – Configuration parameters.

`static inline void LPIT_EnableInterrupts(LPIT_Type *base, uint32_t mask)`

Enables the selected PIT interrupts.

Parameters

- `base` – LPIT peripheral base address.
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `lpit_interrupt_enable_t`

`static inline void LPIT_DisableInterrupts(LPIT_Type *base, uint32_t mask)`

Disables the selected PIT interrupts.

Parameters

- `base` – LPIT peripheral base address.
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `lpit_interrupt_enable_t`

`static inline uint32_t LPIT_GetEnabledInterrupts(LPIT_Type *base)`

Gets the enabled LPIT interrupts.

Parameters

- `base` – LPIT peripheral base address.

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lpit_interrupt_enable_t`

`static inline uint32_t LPIT_GetStatusFlags(LPIT_Type *base)`

Gets the LPIT status flags.

Parameters

- `base` – LPIT peripheral base address.

Returns

The status flags. This is the logical OR of members of the enumeration `lpit_status_flags_t`

`static inline void LPIT_ClearStatusFlags(LPIT_Type *base, uint32_t mask)`

Clears the LPIT status flags.

Parameters

- `base` – LPIT peripheral base address.
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `lpit_status_flags_t`

`static inline void LPIT_SetTimerPeriod(LPIT_Type *base, lpit_chnl_t channel, uint32_t ticks)`

Sets the timer period in units of count.

Timers begin counting down from the value set by this function until it reaches 0, at which point it generates an interrupt and loads this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: User can call the utility macros provided in `fsl_common.h` to convert to ticks.

Parameters

- `base` – LPIT peripheral base address.
- `channel` – Timer channel number.
- `ticks` – Timer period in units of ticks.

static inline void LPIT_SetTimerValue(LPIT_Type *base, *lpit_chnl_t* channel, uint32_t ticks)

Sets the timer period in units of count.

In the Dual 16-bit Periodic Counter mode, the counter will load and then the lower 16-bits will decrement down to zero, which will assert the output pre-trigger. The upper 16-bits will then decrement down to zero, which will negate the output pre-trigger and set the timer interrupt flag.

Note: Set TVAL register to 0 or 1 is invalid in compare mode.

Parameters

- `base` – LPIT peripheral base address.
- `channel` – Timer channel number.
- `ticks` – Timer period in units of ticks.

static inline uint32_t LPIT_GetCurrentTimerCount(LPIT_Type *base, *lpit_chnl_t* channel)

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in `fsl_common.h` to convert ticks to microseconds or milliseconds.

Parameters

- `base` – LPIT peripheral base address.
- `channel` – Timer channel number.

Returns

Current timer counting value in ticks.

static inline void LPIT_StartTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Starts the timer counting.

After calling this function, timers load the period value and count down to 0. When the timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- `base` – LPIT peripheral base address.
- `channel` – Timer channel number.

static inline void LPIT_StopTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Stops the timer counting.

Parameters

- `base` – LPIT peripheral base address.
- `channel` – Timer channel number.

static void LPIT_ResetStateDelay(void)

Short wait for LPIT state reset.

After clear or set LPIT_EN, there should be delay longer than 4 LPIT functional clock.

Parameters

- count – Delay count.

static inline void LPIT_Reset(LPIT_Type *base)

Performs a software reset on the LPIT module.

This resets all channels and registers except the Module Control Register.

Parameters

- base – LPIT peripheral base address.

struct __lpit_chnl_params

#include <fsl_lpit.h> Structure to configure the channel timer.

Public Members

bool chainChannel

true: Timer chained to previous timer; false: Timer not chained

lpit_timer_modes_t timerMode

Timers mode of operation.

lpit_trigger_select_t triggerSelect

Trigger selection for the timer

lpit_trigger_source_t triggerSource

Decides if we use external or internal trigger.

bool enableReloadOnTrigger

true: Timer reloads when a trigger is detected; false: No effect

bool enableStopOnTimeout

true: Timer will stop after timeout; false: does not stop after timeout

bool enableStartOnTrigger

true: Timer starts when a trigger is detected; false: decrement immediately

struct __lpit_config

#include <fsl_lpit.h> LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

bool enableRunInDoze

true: Timers run in doze mode; false: Timers stop in doze mode

2.24 LPSPI: Low Power Serial Peripheral Interface

2.25 LPSPI Peripheral driver

```
void LPSPI_MasterInit(LPSPI_Type *base, const lpspi_master_config_t *masterConfig, uint32_t srcClock_Hz)
```

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure *lpspi_master_config_t*.
- srcClock_Hz – Module source input clock in Hertz

```
void LPSPI_MasterGetDefaultConfig(lpspi_master_config_t *masterConfig)
```

Sets the *lpspi_master_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;  
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to *lpspi_master_config_t* structure

```
void LPSPI_SlaveInit(LPSPI_Type *base, const lpspi_slave_config_t *slaveConfig)
```

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure *lpspi_slave_config_t*.

```
void LPSPI_SlaveGetDefaultConfig(lpspi_slave_config_t *slaveConfig)
```

Sets the *lpspi_slave_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;  
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to *lpspi_slave_config_t* structure.

```
void LPSPI_Deinit(LPSPI_Type *base)
```

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

```
void LPSPI_Reset(LPSPI_Type *base)
```

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag | kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)

static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

```
static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, lpspi_which_pcs_t select)
```

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.

- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinuous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.
- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

```
static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)
```

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPi in slave mode, although the command register does not update until after the LPSPi is enabled. After it is enabled, the transmit command register should only be changed if the LPSPi is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

```
uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t  
srcClock_Hz, uint32_t *tcrPrescaleValue)
```

Sets the LPSPi baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale `tcrPrescaleValue` parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPi module must first be disabled before configuring this. Note that the LPSPi module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.
- tcrPrescaleValue – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPi is not configured for master mode or if the LPSPi module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t
                               whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- `base` – LPSPI peripheral address.
- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result

in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- base – LPSPI peripheral address.
- data – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- base – LPSPI peripheral address.
- dummyData – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                     lpspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to `lpspi_master_handle_t`.
- callback – DSPI callback.
- userData – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.
- transfer – pointer to *lpspi_transfer_t* structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *size_t* *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of status_t.

void LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.

void LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.

```
void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, lpspi_slave_handle_t *handle,  
                                   lpspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the LPSPI slave handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to *lpspi_slave_handle_t*.
- callback – DSPI callback.
- userData – callback function parameter.

```
status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, lpspi_slave_handle_t *handle,  
                                       lpspi_transfer_t *transfer)
```

LPSPI slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.
- transfer – pointer to *lpspi_transfer_t* structure.

Returns

status of *status_t*.

```
status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, lpspi_slave_handle_t *handle, size_t  
                                   *count)
```

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of *status_t*.

```
void LPSPI_SlaveTransferAbort(LPSPI_Type *base, lpspi_slave_handle_t *handle)
```

LPSPI slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.

void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.

bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)

Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

void LPSPI_DriverIRQHandler(uint32_t instance)

LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

FSL_LPSPI_DRIVER_VERSION

LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator kStatus_LPSPI_Busy

LPSPI transfer is busy.

enumerator kStatus_LPSPI_Error

LPSPI driver error.

enumerator kStatus_LPSPI_Idle

LPSPI is idle.

enumerator kStatus_LPSPI_OutOfRange

LPSPI transfer out Of range.

enumerator kStatus_LPSPI_Timeout

LPSPI timeout polling status flags.

enum *_lpspi_flags*

LPSPI status flags in SPIx_SR register.

Values:

enumerator kLPSPI_TxDataRequestFlag

Transmit data flag

enumerator kLPSPI_RxDataReadyFlag

Receive data flag

enumerator kLPSPI_WordCompleteFlag

Word Complete flag

enumerator kLPSPI_FrameCompleteFlag

Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag

Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag

Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag

Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag

Data Match flag

enumerator kLPSPI_ModuleBusyFlag

Module Busy flag

enumerator kLPSPI_AllStatusFlag

Used for clearing all w1c status flags

enum _lpspi_interrupt_enable

LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable

Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable

Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable

Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable

Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable

Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable

Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable

Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable

Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable

All above interrupts enable.

enum _lpspi_dma_enable

LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable

Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable

Receive data DMA enable

enum _lpspi_master_slave_mode

LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master

LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave

LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0

PCS[0]

enumerator kLPSPI_Pcs1

PCS[1]

enumerator kLPSPI_Pcs2

PCS[2]

enumerator kLPSPI_Pcs3

PCS[3]

enum _lpspi_pcs_polarity_config

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh

PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow

PCS Active Low (idles high)

enum _lpspi_pcs_polarity

LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow

Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow

Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow

Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow

Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow

Pcs0 to Pcs5 Active Low (idles high).

enum _lpspi_clock_polarity

LPSPI clock polarity configuration.

Values:

enumerator kLPSPi_ClockPolarityActiveHigh

CPOL=0. Active-high LPSPi clock (idles low)

enumerator kLPSPi_ClockPolarityActiveLow

CPOL=1. Active-low LPSPi clock (idles high)

enum _lpspi_clock_phase

LPSPi clock phase configuration.

Values:

enumerator kLPSPi_ClockPhaseFirstEdge

CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator kLPSPi_ClockPhaseSecondEdge

CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum _lpspi_shift_direction

LPSPi data shifter direction options.

Values:

enumerator kLPSPi_MsbFirst

Data transfers start with most significant bit.

enumerator kLPSPi_LsbFirst

Data transfers start with least significant bit.

enum _lpspi_host_request_select

LPSPi Host Request select configuration.

Values:

enumerator kLPSPi_HostReqExtPin

Host Request is an ext pin.

enumerator kLPSPi_HostReqInternalTrigger

Host Request is an internal trigger.

enum _lpspi_match_config

LPSPi Match configuration options.

Values:

enumerator kLPSPi_MatchDisabled

LPSPi Match Disabled.

enumerator kLPSPi_1stWordEqualsM0orM1

LPSPi Match Enabled.

enumerator kLPSPi_AnyWordEqualsM0orM1

LPSPi Match Enabled.

enumerator kLPSPi_1stWordEqualsM0and2ndWordEqualsM1

LPSPi Match Enabled.

enumerator kLPSPi_AnyWordEqualsM0andNxtWordEqualsM1

LPSPi Match Enabled.

enumerator kLPSPI_1stWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enumerator kLPSPI_AnyWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enum _lpspi_pin_config
LPSPI pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPI SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPI SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPI SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPI SDO input, SDI output.

enum _lpspi_data_out_config
LPSPI data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_pcs_function_config
LPSPI cs function configuration.

Values:

enumerator kLPSPI_PcsAsCs
PCS pin select as cs function

enumerator kLPSPI_PcsAsData
PCS pin select as data function

enum _lpspi_transfer_width
LPSPI transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type
LPSPI delay type selection.

Values:

enumerator kLPSPi_PcsToSck

PCS-to-SCK delay.

enumerator kLPSPi_LastSckToPcs

Last SCK edge to PCS delay.

enumerator kLPSPi_BetweenTransfer

Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPi master transfer configFlags.

Values:

enumerator kLPSPi_MasterPcs0

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS0 signal

enumerator kLPSPi_MasterPcs1

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS1 signal

enumerator kLPSPi_MasterPcs2

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS2 signal

enumerator kLPSPi_MasterPcs3

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS3 signal

enumerator kLPSPi_MasterWidth1

LPSPi master width shift macro, internal used LPSPi master transfer 1bit

enumerator kLPSPi_MasterWidth2

LPSPi master width shift macro, internal used LPSPi master transfer 2bit

enumerator kLPSPi_MasterWidth4

LPSPi master width shift macro, internal used LPSPi master transfer 4bit

enumerator kLPSPi_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPi_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_MasterByteSwapyou flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPi slave transfer configFlags.

Values:

enumerator kLPSPi_SlavePcs0

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS0 signal

enumerator kLPSPi_SlavePcs1

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS1 signal

enumerator kLPSPi_SlavePcs2

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS2 signal

enumerator kLPSPi_SlavePcs3

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS3 signal

enumerator kLPSPi_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.

enum _lpspi_transfer_state

LPSPi transfer state, which is used for LPSPi transactional API state machine.

Values:

enumerator kLPSPi_Idle

Nothing in the transmitter/receiver.

enumerator kLPSPi_Busy

Transfer queue is not finished.

enumerator kLPSPi_Error

Transfer error.

typedef enum _lpspi_master_slave_mode lpspi_master_slave_mode_t

LPSPi master or slave mode configuration.

typedef enum _lpspi_which_pcs_config lpspi_which_pcs_t

LPSPi Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum _lpspi_pcs_polarity_config lpspi_pcs_polarity_config_t

LPSPi Peripheral Chip Select (PCS) Polarity configuration.

typedef enum _lpspi_clock_polarity lpspi_clock_polarity_t

LPSPi clock polarity configuration.

typedef enum _lpspi_clock_phase lpspi_clock_phase_t

LPSPi clock phase configuration.

typedef enum _lpspi_shift_direction lpspi_shift_direction_t

LPSPi data shifter direction options.

typedef enum _lpspi_host_request_select lpspi_host_request_select_t

LPSPi Host Request select configuration.

typedef enum _lpspi_match_config lpspi_match_config_t

LPSPi Match configuration options.

typedef enum _lpspi_pin_config lpspi_pin_config_t

LPSPi pin (SDO and SDI) configuration.

typedef enum _lpspi_data_out_config lpspi_data_out_config_t

LPSPi data output configuration.

typedef enum *_lpspi_pcs_function_config* lpspi_pcs_function_config_t
LPSPi cs function configuration.

typedef enum *_lpspi_transfer_width* lpspi_transfer_width_t
LPSPi transfer width configuration.

typedef enum *_lpspi_delay_type* lpspi_delay_type_t
LPSPi delay type selection.

typedef struct *_lpspi_master_config* lpspi_master_config_t
LPSPi master configuration structure.

typedef struct *_lpspi_slave_config* lpspi_slave_config_t
LPSPi slave configuration structure.

typedef struct *_lpspi_master_handle* lpspi_master_handle_t
Forward declaration of the *_lpspi_master_handle* typedefs.

typedef struct *_lpspi_slave_handle* lpspi_slave_handle_t
Forward declaration of the *_lpspi_slave_handle* typedefs.

typedef void (*lpspi_master_transfer_callback_t)(LPSPi_Type *base, *lpspi_master_handle_t* *handle, *status_t* status, void *userData)
Master completion callback function pointer type.

Param base
LPSPi peripheral address.

Param handle
Pointer to the handle for the LPSPi master.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_transfer_callback_t)(LPSPi_Type *base, *lpspi_slave_handle_t* *handle, *status_t* status, void *userData)
Slave completion callback function pointer type.

Param base
LPSPi peripheral address.

Param handle
Pointer to the handle for the LPSPi slave.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef struct *_lpspi_transfer* lpspi_transfer_t
LPSPi master/slave transfer structure.

volatile uint8_t g_lpspiDummyData[]
Global variable for dummy data value setting.

LPSPi_DUMMY_DATA
LPSPi dummy data if no Tx data.
Dummy data used for tx if there is not txData.

SPI_RETRY_TIMES

Retry times for waiting flag.

LPSPI_MASTER_PCS_SHIFT

LPSPI master PCS shift macro , internal used.

LPSPI_MASTER_PCS_MASK

LPSPI master PCS shift macro , internal used.

LPSPI_MASTER_WIDTH_SHIFT

LPSPI master width shift macro, internal used

LPSPI_MASTER_WIDTH_MASK

LPSPI master width shift mask, internal used

LPSPI_SLAVE_PCS_SHIFT

LPSPI slave PCS shift macro , internal used.

LPSPI_SLAVE_PCS_MASK

LPSPI slave PCS shift macro , internal used.

struct _lpspi_master_config

#include <fsl_lpspi.h> LPSPI master configuration structure.

Public Members

uint32_t baudRate

Baud Rate for LPSPI.

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_pcs_function_config_t pcsFunc

Configures cs pins function.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPi_PCS is negated).

bool enableInputDelay

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct __lpspi_slave_config

#include <fsl_lpspi.h> LPSPi slave configuration structure.

Public Members

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPi_PCS is negated).

struct __lpspi_transfer

#include <fsl_lpspi.h> LPSPi master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from `_lpspi_transfer_config_flag_for_master` if the transfer is used for master or `_lpspi_transfer_config_flag_for_slave` enumeration if the transfer is used for slave.

struct __lpspi_master_handle

#include <fsl_lpspi.h> LPSPi master transfer handle structure used for transactional API.

Public Members

`volatile bool isPcsContinuous`
Is PCS continuous in transfer.

`volatile bool writeTcrInIsr`
A flag that whether should write TCR in ISR.

`volatile bool isByteSwap`
A flag that whether should byte swap.

`volatile bool isTxMask`
A flag that whether TCR[TXMSK] is set.

`volatile uint16_t bytesPerFrame`
Number of bytes in each frame

`volatile uint16_t frameSize`
Backup of TCR[FRAMESZ]

`volatile uint8_t fifoSize`
FIFO dataSize.

`volatile uint8_t rxWatermark`
Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if the txData is NULL.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

`lpspi_master_transfer_callback_t callback`
Completion callback.

void *userData

Callback user data.

struct __lpspi_slave_handle

#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap

A flag that whether should byte swap.

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

volatile uint8_t bytesEachWrite

Bytes for each write TDR.

volatile uint8_t bytesEachRead

Bytes for each read RDR.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t txRemainingByteCount

Number of bytes remaining to send.

volatile size_t rxRemainingByteCount

Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes

Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes

Read RDR register remaining times.

uint32_t totalByteCount

Number of transfer bytes

volatile uint8_t state

LPSPI transfer state , *__lpspi_transfer_state*.

volatile uint32_t errorCount

Error count for slave transfer.

lpspi_slave_transfer_callback_t callback

Completion callback.

void *userData

Callback user data.

2.26 LPTMR: Low-Power Timer

void LPTMR_Init(LPTMR_Type *base, const *lptmr_config_t* *config)

Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

void LPTMR_Deinit(LPTMR_Type *base)

Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *lptmr_interrupt_enable_t*

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration *lptmr_interrupt_enable_t*.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration *lptmr_interrupt_enable_t*

```
static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)
```

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

```
static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)
```

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

```
static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
```

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the `fsl_common.h` to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

```
static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

static inline void LPTMR_StopTimer(LPTMR_Type *base)

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

FSL_LPTMR_DRIVER_VERSION

Driver Version

enum _lptmr_pin_select

LPTMR pin selection used in pulse counter mode.

Values:

enumerator kLPTMR_PinSelectInput_0

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum _lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum _lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum _lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enumerator kLPTMR_PrescalerClock_0
Prescaler/glitch filter clock 0 selected.

enumerator kLPTMR_PrescalerClock_1
Prescaler/glitch filter clock 1 selected.

enumerator kLPTMR_PrescalerClock_2
Prescaler/glitch filter clock 2 selected.

enumerator kLPTMR_PrescalerClock_3
Prescaler/glitch filter clock 3 selected.

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable

Timer interrupt enable

enum _lptmr_status_flags

List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag

Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t

LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t

LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t

LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t

LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t

List of the LPTMR interrupts.

typedef enum _lptmr_status_flags lptmr_status_flags_t

List of the LPTMR status flags.

typedef struct _lptmr_config lptmr_config_t

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

struct _lptmr_config

#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members*lptmr_timer_mode_t* timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.27 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.28 LPUART Driver

static inline void LPUART_SoftwareReset(LPUART_Type *base)

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- base – LPUART peripheral base address.

status_t LPUART_Init(LPUART_Type *base, const *lpuart_config_t* *config, uint32_t srcClock_Hz)

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

void LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

void LPUART_GetDefaultConfig(*lpuart_config_t* *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode = kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits; lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit; lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1; lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;

Parameters

- config – Pointer to a configuration structure.

status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not supported in the current clock source.
- kStatus_Success – Set baudrate succeeded.

void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – LPUART peripheral base address.
- enable – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

```
static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)
```

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

```
static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

```
static inline void LPUART_TransferEnable16Bit(lpuart_handle_t *handle, bool enable)
```

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in lpuart_handle_t.

Parameters

- handle – LPUART handle pointer.

- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators `_lpuart_flags`. To check for a specific status, compare the return value with enumerators in the `_lpuart_flags`. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the `_lpuart_flags`.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)`

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- `base` – LPUART peripheral base address.
- `mask` – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

`uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)`

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

`static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)`

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

`static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)`

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `STAT[TDRE]`, to generate DMA requests.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – True to enable, false to disable.

```
static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
uint32_t LPUART_GetInstance(LPUART_Type *base)
```

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

```
static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)
```

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

```
static inline uint8_t LPUART_ReadByte(LPUART_Type *base)
```

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

void LPUART_SendAddress(LPUART_Type *base, uint8_t address)

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

void LPUART_TransferCreateHandle(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_callback_t* callback, void *userData)

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the LPUART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- callback – Callback function.
- userData – User data.

status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer)

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see *lpuart_transfer_t*.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferStartRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle, uint8_t *ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn’t call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

void LPUART_TransferStopRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, *lpuart_handle_t* *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBtyes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;


```
status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                           lpuart_transfer_t *xfer, size_t *receivedBytes)
```

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to `xfer->data`, which returns with the parameter `receivedBytes` set to 5. For the remaining 5 bytes, the newly arrived data is saved from `xfer->data[5]`. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

```
void LPUART_TransferAbortReceive(LPUART_Type *base, lpuart_handle_t *handle)
```

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

```
status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, lpuart_handle_t *handle,  
                                         uint32_t *count)
```

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

void LPUART__TransferHandleIRQ(LPUART_Type *base, void *irqHandle)

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART__TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART__DriverIRQHandler(uint32_t instance)

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy
TX busy

enumerator kStatus_LPUART_RxBusy
RX busy

enumerator kStatus_LPUART_TxIdle
LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle
LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge
TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge
RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually
Some flag can't manually clear

enumerator kStatus_LPUART_Error
Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun
LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun
LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError
LPUART noise error.

enumerator kStatus_LPUART_FramingError
LPUART framing error.

enumerator kStatus_LPUART_ParityError
LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected
IDLE flag.

enumerator kStatus_LPUART_Timeout
LPUART times out.

enum _lpuart_parity_mode
LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled
Parity disabled

enumerator kLPUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kLPUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _lpuart_data_bits
LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits
Eight data bit

enumerator kLPUART_SevenDataBits
Seven data bit

enum _lpuart_stop_bit_count
LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit
One stop bit

enumerator kLPUART_TwoStopBit
Two stop bits

enum _lpuart_transmit_cts_source
LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin
CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult

CTS resource is the match result.

enum _lpuart_transmit_cts_config

LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart

CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle

CTS input is sampled when the transmitter is idle

enum _lpuart_idle_type_select

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128

the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag
Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag
Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag
Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag
Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag
Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t

LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t

LPUART transmit CTS configure.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t

LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

```
typedef struct _lpuart_config lpuart_config_t
    LPUART configuration structure.

typedef struct _lpuart_transfer lpuart_transfer_t
    LPUART transfer structure.

typedef struct _lpuart_handle lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle,
status_t status, void *userData)
    LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
    Retry times for waiting flag.

struct _lpuart_config
    #include <fsl_lpuart.h> LPUART configuration structure.
```

Public Members

```
uint32_t baudRate_Bps
    LPUART baud rate

lpuart_parity_mode_t parityMode
    Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
    Data bits count, eight (default), seven

bool isMsb
    Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
    Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
    TX FIFO watermark

uint8_t rxFifoWatermark
    RX FIFO watermark

bool enableRxRTS
    RX RTS enable

bool enableTxCTS
    TX CTS enable

lpuart_transmit_cts_source_t txCtsSource
    TX CTS source

lpuart_transmit_cts_config_t txCtsConfig
    TX CTS configure
```

lpuart_idle_type_select_t rxIdleType

RX IDLE type.

lpuart_idle_config_t rxIdleConfig

RX IDLE configuration.

bool enableTx

Enable TX

bool enableRx

Enable RX

struct *_lpuart_transfer*

#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct *_lpuart_handle*

#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize

Size of the remaining data to send.

size_t txDataSizeAll

Size of the data to send out.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t rxDataSizeAll

Size of the data to receive.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback

Callback function.

void *userData

LPUART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state.

bool isSevenDataBits

Seven data bits flag.

bool is16bitData

16bit data bits flag, only used for 9bit or 10bit data

union ____unnamed21____

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

uint16_t *rxData16

The buffer to receive data.

const uint8_t *txData

The buffer of data to be sent.

const uint16_t *txData16

The buffer of data to be sent.

union ____unnamed23____

Public Members

const uint8_t *volatile txData

Address of remaining data to send.

const uint16_t *volatile txData16

Address of remaining data to send.

union ____unnamed25____

Public Members

uint8_t *volatile rxData

Address of remaining data to receive.

uint16_t *volatile rxData16

Address of remaining data to receive.

union ____unnamed27____

Public Members

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16

Start address of the receiver ring buffer.

2.29 MCM: Miscellaneous Control Module

FSL_MCM_DRIVER_VERSION

MCM driver version.

Enum _mcm_interrupt_flag. Interrupt status flag mask. .

Values:

enumerator kMCM_CacheWriteBuffer

Cache Write Buffer Error Enable.

enumerator kMCM_ParityError

Cache Parity Error Enable.

enumerator kMCM_FPUInvalidOperation

FPU Invalid Operation Interrupt Enable.

enumerator kMCM_FPUDivideByZero

FPU Divide-by-zero Interrupt Enable.

enumerator kMCM_FPUOverflow

FPU Overflow Interrupt Enable.

enumerator kMCM_FPUUnderflow

FPU Underflow Interrupt Enable.

enumerator kMCM_FPUInexact

FPU Inexact Interrupt Enable.

enumerator kMCM_FPUInputDenormalInterrupt

FPU Input Denormal Interrupt Enable.

typedef union *_mcm_buffer_fault_attribute* mcm_buffer_fault_attribute_t

The union of buffer fault attribute.

typedef union *_mcm_lmem_fault_attribute* mcm_lmem_fault_attribute_t

The union of LMEM fault attribute.

static inline void MCM_EnableCrossbarRoundRobin(MCM_Type *base, bool enable)

Enables/Disables crossbar round robin.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable crossbar round robin.
 - **true** Enable crossbar round robin.
 - **false** disable crossbar round robin.

static inline void MCM_EnableInterruptStatus(MCM_Type *base, uint32_t mask)

Enables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline void MCM_DisableInterruptStatus(MCM_Type *base, uint32_t mask)

Disables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(`_mcm_interrupt_flag`).

static inline uint16_t MCM_GetInterruptStatus(MCM_Type *base)

Gets the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline void MCM_ClearCacheWriteBufferErrorStatus(MCM_Type *base)

Clears the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultAddress(MCM_Type *base)

Gets buffer fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetBufferFaultAttribute(MCM_Type *base, *mcm_buffer_fault_attribute_t* *bufferfault)

Gets buffer fault attributes.

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultData(MCM_Type *base)

Gets buffer fault data.

Parameters

- base – MCM peripheral base address.

static inline void MCM_LimitCodeCachePeripheralWriteBuffering(MCM_Type *base, bool enable)

Limit code cache peripheral write buffering.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable limit code cache peripheral write buffering.
 - **true** Enable limit code cache peripheral write buffering.
 - **false** disable limit code cache peripheral write buffering.

static inline void MCM_BypassFixedCodeCacheMap(MCM_Type *base, bool enable)

Bypass fixed code cache map.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable bypass fixed code cache map.
 - **true** Enable bypass fixed code cache map.
 - **false** disable bypass fixed code cache map.

static inline void MCM_EnableCodeBusCache(MCM_Type *base, bool enable)

Enables/Disables code bus cache.

Parameters

- base – MCM peripheral base address.
- enable – Used to disable/enable code bus cache.
 - **true** Enable code bus cache.
 - **false** disable code bus cache.

static inline void MCM_ForceCodeCacheToNoAllocation(MCM_Type *base, bool enable)

Force code cache to no allocation.

Parameters

- base – MCM peripheral base address.
- enable – Used to force code cache to allocation or no allocation.
 - **true** Force code cache to no allocation.
 - **false** Force code cache to allocation.

static inline void MCM_EnableCodeCacheWriteBuffer(MCM_Type *base, bool enable)

Enables/Disables code cache write buffer.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable code cache write buffer.
 - **true** Enable code cache write buffer.
 - **false** Disable code cache write buffer.

static inline void MCM_ClearCodeBusCache(MCM_Type *base)

Clear code bus cache.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnablePcParityFaultReport(MCM_Type *base, bool enable)

Enables/Disables PC Parity Fault Report.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity Fault Report.
 - **true** Enable PC Parity Fault Report.
 - **false** disable PC Parity Fault Report.

static inline void MCM_EnablePcParity(MCM_Type *base, bool enable)

Enables/Disables PC Parity.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity.
 - **true** Enable PC Parity.
 - **false** disable PC Parity.

```
static inline void MCM_LockConfigState(MCM_Type *base)
```

Lock the configuration state.

Parameters

- base – MCM peripheral base address.

```
static inline void MCM_EnableCacheParityReporting(MCM_Type *base, bool enable)
```

Enables/Disables cache parity reporting.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable cache parity reporting.
 - **true** Enable cache parity reporting.
 - **false** disable cache parity reporting.

```
static inline uint32_t MCM_GetLmemFaultAddress(MCM_Type *base)
```

Gets LMEM fault address.

Parameters

- base – MCM peripheral base address.

```
static inline void MCM_GetLmemFaultAttribute(MCM_Type *base, mcm_lmem_fault_attribute_t  
*lmemFault)
```

Get LMEM fault attributes.

Parameters

- base – MCM peripheral base address.

```
static inline uint64_t MCM_GetLmemFaultData(MCM_Type *base)
```

Gets LMEM fault data.

Parameters

- base – MCM peripheral base address.

MCM_LMFATR_TYPE_MASK

MCM_LMFATR_MODE_MASK

MCM_LMFATR_BUFF_MASK

MCM_LMFATR_CACH_MASK

MCM_ISCR_STAT_MASK

FSL_COMPONENT_ID

```
union _mcm_buffer_fault_attribute
```

#include <fsl_mcm.h> The union of buffer fault attribute.

Public Members

uint32_t attribute

Indicates the faulting attributes, when a properly-enabled cache write buffer error interrupt event is detected.

```
struct _mcm_buffer_fault_attribute, _mcm_buffer_fault_attrib attribute_memory
```

```
struct _mcm_buffer_fault_attrib
```

#include <fsl_mcm.h>

Public Members

uint32_t busErrorDataAccessType

Indicates the type of cache write buffer access.

uint32_t busErrorPrivilegeLevel

Indicates the privilege level of the cache write buffer access.

uint32_t busErrorSize

Indicates the size of the cache write buffer access.

uint32_t busErrorAccess

Indicates the type of system bus access.

uint32_t busErrorMasterID

Indicates the crossbar switch bus master number of the captured cache write buffer bus error.

uint32_t busErrorOverrun

Indicates if another cache write buffer bus error is detected.

union _mcm_lmem_fault_attribute

#include <fsl_mcm.h> The union of LMEM fault attribute.

Public Members

uint32_t attribute

Indicates the attributes of the LMEM fault detected.

struct _mcm_lmem_fault_attribute._mcm_lmem_fault_attribut attribute__memory

struct _mcm_lmem_fault_attribut

#include <fsl_mcm.h>

Public Members

uint32_t parityFaultProtectionSignal

Indicates the features of parity fault protection signal.

uint32_t parityFaultMasterSize

Indicates the parity fault master size.

uint32_t parityFaultWrite

Indicates the parity fault is caused by read or write.

uint32_t backdoorAccess

Indicates the LMEM access fault is initiated by core access or backdoor access.

uint32_t parityFaultSyndrome

Indicates the parity fault syndrome.

uint32_t overrun

Indicates the number of faultss.

2.30 MMDVSQ: Memory-Mapped Divide and Square Root

```
int32_t MMDVSQ_GetDivideRemainder(MMDVSQ_Type *base, int32_t dividend, int32_t divisor,  
                                  bool isUnsigned)
```

Performs the MMDVSQ division operation and returns the remainder.

Parameters

- base – MMDVSQ peripheral address
- dividend – Dividend value
- divisor – Divisor value
- isUnsigned – Mode of unsigned divide
 - true unsigned divide
 - false signed divide

```
int32_t MMDVSQ_GetDivideQuotient(MMDVSQ_Type *base, int32_t dividend, int32_t divisor,  
                                  bool isUnsigned)
```

Performs the MMDVSQ division operation and returns the quotient.

Parameters

- base – MMDVSQ peripheral address
- dividend – Dividend value
- divisor – Divisor value
- isUnsigned – Mode of unsigned divide
 - true unsigned divide
 - false signed divide

```
uint16_t MMDVSQ_Sqrt(MMDVSQ_Type *base, uint32_t radicand)
```

Performs the MMDVSQ square root operation.

This function performs the MMDVSQ square root operation and returns the square root result of a given radicand value.

Parameters

- base – MMDVSQ peripheral address
- radicand – Radicand value

```
static inline mmdvsq_execution_status_t MMDVSQ_GetExecutionStatus(MMDVSQ_Type *base)
```

Gets the MMDVSQ execution status.

This function checks the current MMDVSQ execution status of the combined CSR[BUSY, DIV, Sqrt] indicators.

Parameters

- base – MMDVSQ peripheral address

Returns

Current MMDVSQ execution status

```
static inline void MMDVSQ_SetFastStartConfig(MMDVSQ_Type *base,  
                                              mmdvsq_fast_start_select_t mode)
```

Configures MMDVSQ fast start mode.

This function sets the MMDVSQ division fast start. The MMDVSQ supports two mechanisms for initiating a division operation. The default mechanism is a “fast start” where a write to the DSOR register begins the division. Alternatively, the start mechanism can begin after a write to the CSR register with CSR[SRT] set.

Parameters

- base – MMDVSQ peripheral address
- mode – Mode of Divide-Fast-Start
 - kMmdvsqDivideFastStart = 0
 - kMmdvsqDivideNormalStart = 1

static inline void MMDVSQ_SetDivideByZeroConfig(MMDVSQ_Type *base, bool isDivByZero)

Configures the MMDVSQ divide-by-zero mode.

This function configures the MMDVSQ response to divide-by-zero calculations. If both CSR[DZ] and CSR[DZE] are set, then a subsequent read of the RES register is error-terminated to signal the processor of the attempted divide-by-zero. Otherwise, the register contents are returned.

Parameters

- base – MMDVSQ peripheral address
- isDivByZero – Mode of Divide-By-Zero
 - kMmdvsqDivideByZeroDis = 0
 - kMmdvsqDivideByZeroEn = 1

FSL_MMSVSQ_DRIVER_VERSION

Version 2.0.4.

enum _mmdvsq_execution_status

MMDVSQ execution status.

Values:

enumerator kMMDVSQ_IdleSquareRoot

MMDVSQ is idle; the last calculation was a square root

enumerator kMMDVSQ_IdleDivide

MMDVSQ is idle; the last calculation was division

enumerator kMMDVSQ_BusySquareRoot

MMDVSQ is busy processing a square root calculation

enumerator kMMDVSQ_BusyDivide

MMDVSQ is busy processing a division calculation

enum _mmdvsq_fast_start_select

MMDVSQ divide fast start select.

Values:

enumerator kMMDVSQ_EnableFastStart

Division operation is initiated by a write to the DSOR register

enumerator kMMDVSQ_DisableFastStart

Division operation is initiated by a write to CSR[SRT] = 1; normal start instead fast start

typedef enum _mmdvsq_execution_status mmdvsq_execution_status_t

MMDVSQ execution status.

typedef enum _mmdvsq_fast_start_select mmdvsq_fast_start_select_t

MMDVSQ divide fast start select.

2.31 MSCAN: Scalable Controller Area Network

2.32 MSCAN Driver

`void MSCAN_Init(MSCAN_Type *base, const mscan_config_t *config, uint32_t sourceClock_Hz)`

Initializes a MsCAN instance.

This function initializes the MsCAN module with user-defined settings. This example shows how to set up the *mscan_config_t* parameters and how to call the `MSCAN_Init` function by passing in these parameters.

```
mscan_config_t mscanConfig;
mscanConfig.clkSrc      = kMSCAN_ClkSrcOsc;
mscanConfig.baudRate    = 1250000U;
mscanConfig.enableTimer = false;
mscanConfig.enableLoopBack = false;
mscanConfig.enableWakeup = false;
mscanConfig.enableListen = false;
mscanConfig.busoffrecMode = kMSCAN_BusoffrecAuto;
mscanConfig.filterConfig.filterMode = kMSCAN_Filter32Bit;
MSCAN_Init(MSCAN, &mscanConfig, 8000000UL);
```

Parameters

- `base` – MsCAN peripheral base address.
- `config` – Pointer to the user-defined configuration structure.
- `sourceClock_Hz` – MsCAN Protocol Engine clock source frequency in Hz.

`void MSCAN_Deinit(MSCAN_Type *base)`

De-initializes a MsCAN instance.

This function disables the MsCAN module clock and sets all register values to the reset value.

Parameters

- `base` – MsCAN peripheral base address.

`void MSCAN_GetDefaultConfig(mscan_config_t *config)`

Gets the default configuration structure.

This function initializes the MsCAN configuration structure to default values.

Parameters

- `config` – Pointer to the MsCAN configuration structure.

`static inline uint8_t MSCAN_GetTxBufferEmptyFlag(MSCAN_Type *base)`

Get the transmit buffer empty status.

This flag indicates that the associated transmit message buffer is empty.

Parameters

- `base` – MsCAN peripheral base address.

`static inline void MSCAN_TxBufferSelect(MSCAN_Type *base, uint8_t txBuf)`

The selection of the actual transmit message buffer.

To get the next available transmit buffer, read the `CANTFLG` register and write its value back into the `CANTBSEL` register.

Parameters

- `base` – MsCAN peripheral base address.

- txBuf – The value read from CANTFLG.

static inline uint8_t MSCAN_GetTxBufferSelect(MSCAN_Type *base)

Get the actual transmit message buffer.

After write TFLG value back into the CANTBSEL register, read again CANBSEL to get the actual transmit message buffer.

Parameters

- base – MsCAN peripheral base address.

static inline void MSCAN_TxBufferLaunch(MSCAN_Type *base, uint8_t txBuf)

Clear TFLG to schedule for transmission.

The CPU must clear the flag after a message is set up in the transmit buffer and is due for transmission.

Parameters

- base – MsCAN peripheral base address.
- txBuf – Message buffer(s) to be cleared.

static inline uint8_t MSCAN_GetTxBufferStatusFlags(MSCAN_Type *base, uint8_t mask)

Get Tx buffer status flag.

The bit is set after successful transmission.

Parameters

- base – MsCAN peripheral base address.
- mask – Message buffer(s) mask.

static inline uint8_t MSCAN_GetRxBufferFullFlag(MSCAN_Type *base)

Check Receive Buffer Full Flag.

RXF is set by the MSCAN when a new message is shifted in the receiver FIFO. This flag indicates whether the shifted buffer is loaded with a correctly received message.

Parameters

- base – MsCAN peripheral base address.

static inline void MSCAN_ClearRxBufferFullFlag(MSCAN_Type *base)

Clear Receive buffer Full flag.

After the CPU has read that message from the RxFG buffer in the receiver FIFO The RXF flag must be cleared to release the buffer.

Parameters

- base – MsCAN peripheral base address.

static inline uint8_t MSCAN_ReadRIDR0(MSCAN_Type *base)

static inline uint8_t MSCAN_ReadRIDR1(MSCAN_Type *base)

static inline uint8_t MSCAN_ReadRIDR2(MSCAN_Type *base)

static inline uint8_t MSCAN_ReadRIDR3(MSCAN_Type *base)

static inline void MSCAN_WriteTIDR0(MSCAN_Type *base, uint8_t id)

static inline void MSCAN_WriteTIDR1(MSCAN_Type *base, uint8_t id)

static inline void MSCAN_WriteTIDR2(MSCAN_Type *base, uint8_t id)

```
static inline void MSCAN_WriteTIDR3(MSCAN_Type *base, uint8_t id)
static inline void MSCAN_SetIDFilterMode(MSCAN_Type *base, mscan_id_filter_mode_t mode)
static inline void MSCAN_WriteIDAR0(MSCAN_Type *base, uint8_t *pID)
static inline void MSCAN_WriteIDAR1(MSCAN_Type *base, uint8_t *pID)
static inline void MSCAN_WriteIDMR0(MSCAN_Type *base, uint8_t *pID)
static inline void MSCAN_WriteIDMR1(MSCAN_Type *base, uint8_t *pID)
```

```
void MSCAN_SetTimingConfig(MSCAN_Type *base, const mscan_timing_config_t *config)
```

Sets the MsCAN protocol timing characteristic.

This function gives user settings to CAN bus timing characteristic. The function is for an experienced user. For less experienced users, call the `MSCAN_Init()` and fill the baud rate field with a desired value. This provides the default timing characteristics to the module.

Note that calling `MSCAN_SetTimingConfig()` overrides the baud rate set in `MSCAN_Init()`.

Parameters

- `base` – MsCAN peripheral base address.
- `config` – Pointer to the timing configuration structure.

```
static inline uint8_t MSCAN_GetTxBufEmptyFlags(MSCAN_Type *base)
```

Gets the MsCAN Tx buffer empty flags.

This function gets MsCAN Tx buffer empty flags. It's returned as the value of the enumerators `_mscan_tx_buffer_empty_flag`.

Parameters

- `base` – MsCAN peripheral base address.

Returns

Tx buffer empty flags in the `_mscan_tx_buffer_empty_flag`.

```
static inline void MSCAN_EnableTxInterrupts(MSCAN_Type *base, uint8_t mask)
```

Enables MsCAN Transmitter interrupts according to the provided mask.

This function enables the MsCAN Tx empty interrupts according to the mask.

Parameters

- `base` – MsCAN peripheral base address.
- `mask` – The Tx interrupts mask to enable.

```
static inline void MSCAN_DisableTxInterrupts(MSCAN_Type *base, uint8_t mask)
```

Disables MsCAN Transmitter interrupts according to the provided mask.

This function disables the MsCAN Tx empty interrupts according to the mask.

Parameters

- `base` – MsCAN peripheral base address.
- `mask` – The Tx interrupts mask to disable.

```
static inline void MSCAN_EnableRxInterrupts(MSCAN_Type *base, uint8_t mask)
```

Enables MsCAN Receiver interrupts according to the provided mask.

This function enables the MsCAN Rx interrupts according to the provided mask which is a logical OR of enumeration members, see `_mscan_interrupt_enable`.

Parameters

- `base` – MsCAN peripheral base address.

- mask – The interrupts to enable. Logical OR of `_mscan_interrupt_enable`.

static inline void MSCAN_DisableRxInterrupts(MSCAN_Type *base, uint8_t mask)

Disables MsCAN Receiver interrupts according to the provided mask.

This function disables the MsCAN Rx interrupts according to the provided mask which is a logical OR of enumeration members, see `_mscan_interrupt_enable`.

Parameters

- base – MsCAN peripheral base address.
- mask – The interrupts to disable. Logical OR of `_mscan_interrupt_enable`.

static inline void MSCAN_AbortTxRequest(MSCAN_Type *base, uint8_t mask)

Abort MsCAN Tx request.

This function allows abort request of queued messages.

Parameters

- base – MsCAN peripheral base address.
- mask – The Tx mask to abort.

static inline void MSCAN_Enable(MSCAN_Type *base, bool enable)

Enables or disables the MsCAN module operation.

This function enables or disables the MsCAN module.

Parameters

- base – MsCAN base pointer.
- enable – true to enable, false to disable.

status_t MSCAN_WriteTxMb(MSCAN_Type *base, mscan_frame_t *pTxFrame)

Writes a MsCAN Message to the Transmit Message Buffer.

This function writes a CAN Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN Message transmit. After that the function returns immediately.

Parameters

- base – MsCAN peripheral base address.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_MSCAN_DataLengthError – - Tx Message Buffer data length is wrong.

status_t MSCAN_ReadRxMb(MSCAN_Type *base, mscan_frame_t *pRxFrame)

Reads a MsCAN Message from Receive Message Buffer.

This function reads a CAN message from a specified Receive Message Buffer. The function fills a receive CAN message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – MsCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- `kStatus_Success` -- Rx Message Buffer is full and has been read successfully.
- `kStatus_Fail` -- Rx Message Buffer is empty.
- `kStatus_MSCAN_DataLengthError` -- Rx Message data length is wrong.

`void MSCAN_TransferCreateHandle(MSCAN_Type *base, mscan_handle_t *handle, mscan_transfer_callback_t callback, void *userData)`

Initializes the MsCAN handle.

This function initializes the MsCAN handle, which can be used for other MsCAN transactional APIs. Usually, for a specified MsCAN instance, call this API once to get the initialized handle.

Parameters

- `base` – MsCAN peripheral base address.
- `handle` – MsCAN handle pointer.
- `callback` – The callback function.
- `userData` – The parameter of the callback function.

`status_t MSCAN_TransferSendBlocking(MSCAN_Type *base, mscan_frame_t *pTxFrame)`

Performs a polling send transaction on the CAN bus.

Note that a transfer handle does not need to be created before calling this API.

Parameters

- `base` – MsCAN peripheral base pointer.
- `pTxFrame` – Pointer to CAN message frame to be sent.

Return values

- `kStatus_Success` -- Write Tx Message Buffer Successfully.
- `kStatus_Fail` -- Tx Message Buffer is currently in use.
- `kStatus_MSCAN_DataLengthError` -- Tx Message Buffer data length is wrong.

`status_t MSCAN_TransferReceiveBlocking(MSCAN_Type *base, mscan_frame_t *pRxFrame)`

Performs a polling receive transaction on the CAN bus.

Note that a transfer handle does not need to be created before calling this API.

Parameters

- `base` – MsCAN peripheral base pointer.
- `pRxFrame` – Pointer to CAN message frame to be received.

Return values

- `kStatus_Success` -- Read Rx Message Buffer Successfully.
- `kStatus_Fail` -- Tx Message Buffer is currently in use.
- `kStatus_MSCAN_DataLengthError` -- Rx Message data length is wrong.

`status_t MSCAN_TransferSendNonBlocking(MSCAN_Type *base, mscan_handle_t *handle, mscan_mb_transfer_t *xfer)`

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – MsCAN peripheral base address.
- handle – MsCAN handle pointer.
- xfer – MsCAN Message Buffer transfer structure. See the `mscan_mb_transfer_t`.

Return values

- `kStatus_Success` – Start Tx Message Buffer sending process successfully.
- `kStatus_Fail` – Write Tx Message Buffer failed.
- `kStatus_MSCAN_DataLengthError` – Tx Message Buffer data length is wrong.

`status_t` `MSCAN_TransferReceiveNonBlocking(MSCAN_Type *base, mscan_handle_t *handle, mscan_mb_transfer_t *xfer)`

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – MsCAN peripheral base address.
- handle – MsCAN handle pointer.
- xfer – MsCAN Message Buffer transfer structure. See the `mscan_mb_transfer_t`.

Return values

- `kStatus_Success` – Start Rx Message Buffer receiving process successfully.
- `kStatus_MSCAN_RxBusy` – Rx Message Buffer is in use.

`void` `MSCAN_TransferAbortSend(MSCAN_Type *base, mscan_handle_t *handle, uint8_t mask)`

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – MsCAN peripheral base address.
- handle – MsCAN handle pointer.
- mask – The MsCAN Tx Message Buffer mask.

`void` `MSCAN_TransferAbortReceive(MSCAN_Type *base, mscan_handle_t *handle, uint8_t mask)`

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – MsCAN peripheral base address.
- handle – MsCAN handle pointer.
- mask – The MsCAN Rx Message Buffer mask.

`void` `MSCAN_TransferHandleIRQ(MSCAN_Type *base, mscan_handle_t *handle)`

MSCAN IRQ handle function.

This function handles the MSCAN Error, the Message Buffer, and the Rx FIFO IRQ request.

Parameters

- base – MSCAN peripheral base address.

- handle – MSCAN handle pointer.

FSL_MSCAN_DRIVER_VERSION

MsCAN driver version.

FlexCAN transfer status.

Values:

enumerator kStatus_MSCAN_TxBusy

Tx Message Buffer is Busy.

enumerator kStatus_MSCAN_TxIdle

Tx Message Buffer is Idle.

enumerator kStatus_MSCAN_TxSwitchToRx

Remote Message is send out and Message buffer changed to Receive one.

enumerator kStatus_MSCAN_RxBusy

Rx Message Buffer is Busy.

enumerator kStatus_MSCAN_RxIdle

Rx Message Buffer is Idle.

enumerator kStatus_MSCAN_RxOverflow

Rx Message Buffer is Overflowed.

enumerator kStatus_MSCAN_RxFifoBusy

Rx Message FIFO is Busy.

enumerator kStatus_MSCAN_RxFifoIdle

Rx Message FIFO is Idle.

enumerator kStatus_MSCAN_RxFifoOverflow

Rx Message FIFO is overflowed.

enumerator kStatus_MSCAN_RxFifoWarning

Rx Message FIFO is almost overflowed.

enumerator kStatus_MSCAN_ErrorStatus

FlexCAN Module Error and Status.

enumerator kStatus_MSCAN_UnHandled

UnHadled Interrupt asserted.

enumerator kStatus_MSCAN_DataLengthError

Frame data length is wrong.

enum __mscan_frame_format

MsCAN frame format.

Values:

enumerator kMSCAN_FrameFormatStandard

Standard frame format attribute.

enumerator kMSCAN_FrameFormatExtend

Extend frame format attribute.

enum __mscan_frame_type

MsCAN frame type.

Values:

enumerator kMSCAN_FrameTypeData

Data frame type attribute.

enumerator kMSCAN_FrameTypeRemote

Remote frame type attribute.

enum _mscan_clock_source

MsCAN clock source.

Values:

enumerator kMSCAN_ClkSrcOsc

MsCAN Protocol Engine clock from Oscillator.

enumerator kMSCAN_ClkSrcBus

MsCAN Protocol Engine clock from Bus Clock.

enum _mscan_busoffrec_mode

MsCAN bus-off recovery mode.

Values:

enumerator kMSCAN_BusoffrecAuto

MsCAN automatic bus-off recovery.

enumerator kMSCAN_BusoffrecUsr

MsCAN bus-off recovery upon user request.

enum _mscan_tx_buffer_empty_flag

MsCAN Tx buffer empty flag.

Values:

enumerator kMSCAN_TxBuf0Empty

MsCAN Tx Buffer 0 empty.

enumerator kMSCAN_TxBuf1Empty

MsCAN Tx Buffer 1 empty.

enumerator kMSCAN_TxBuf2Empty

MsCAN Tx Buffer 2 empty.

enumerator kMSCAN_TxBufFull

MsCAN Tx Buffer all not empty.

enum _mscan_id_filter_mode

MsCAN id filter mode.

Values:

enumerator kMSCAN_Filter32Bit

Two 32-bit acceptance filters.

enumerator kMSCAN_Filter16Bit

Four 16-bit acceptance filters.

enumerator kMSCAN_Filter8Bit

Eight 8-bit acceptance filters.

enumerator kMSCAN_FilterClose

Filter closed.

enum *_mscan_interrupt_enable*

MsCAN interrupt configuration structure, default settings all disabled.

This structure contains the settings for all of the MsCAN Module interrupt configurations.

Values:

enumerator *kMSCAN_WakeUpInterruptEnable*

Wake Up interrupt.

enumerator *kMSCAN_StatusChangeInterruptEnable*

Status change interrupt.

enumerator *kMSCAN_RxStatusChangeInterruptEnable*

Rx status change interrupt.

enumerator *kMSCAN_TxStatusChangeInterruptEnable*

Tx status change interrupt.

enumerator *kMSCAN_OverrunInterruptEnable*

Overrun interrupt.

enumerator *kMSCAN_RxFullInterruptEnable*

Rx buffer full interrupt.

enumerator *kMSCAN_TxEmptyInterruptEnable*

Tx buffer empty interrupt.

typedef enum *_mscan_frame_format* *mscan_frame_format_t*

MsCAN frame format.

typedef enum *_mscan_frame_type* *mscan_frame_type_t*

MsCAN frame type.

typedef enum *_mscan_clock_source* *mscan_clock_source_t*

MsCAN clock source.

typedef enum *_mscan_busoffrec_mode* *mscan_busoffrec_mode_t*

MsCAN bus-off recovery mode.

typedef enum *_mscan_id_filter_mode* *mscan_id_filter_mode_t*

MsCAN id filter mode.

typedef struct *_mscan_mb* *mscan_mb_t*

MsCAN message buffer structure.

typedef struct *_mscan_frame* *mscan_frame_t*

MsCAN frame structure.

typedef struct *_mscan_idfilter_config* *mscan_idfilter_config_t*

MsCAN module acceptance filter configuration structure.

typedef struct *_mscan_config* *mscan_config_t*

MsCAN module configuration structure.

typedef struct *_mscan_timing_config* *mscan_timing_config_t*

MsCAN protocol timing characteristic configuration structure.

typedef struct *_mscan_mb_transfer* *mscan_mb_transfer_t*

MSCAN Message Buffer transfer.

typedef struct *_mscan_handle* *mscan_handle_t*

MsCAN handle structure definition.

```
typedef void (*mscan_transfer_callback_t)(MSCAN_Type *base, mscan_handle_t *handle,
status_t status, void *userData)
```

MsCAN transfer callback function.

The MsCAN transfer callback returns a value from the underlying layer. If the status equals to `kStatus_MSCAN_ErrorStatus`, the result parameter is the Content of MsCAN status register which can be used to get the working status(or error status) of MsCAN module. If the status equals to other MsCAN Message Buffer transfer status, the result is the index of Message Buffer that generate transfer event. If the status equals to other MsCAN Message Buffer transfer status, the result is meaningless and should be Ignored. If the status equals `kStatus_MSCAN_DataLengthError`, it means the received frame data length code (DLC) is wrong.

```
MSCAN_RX_MB_STD_MASK(id)
```

MsCAN Rx Message Buffer Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

```
MSCAN_RX_MB_EXT_MASK(id)
```

Extend Rx Message Buffer Mask helper macro.

```
struct MSCAN_IDR1Type
```

#include <fsl_mscan.h> MSCAN IDR1 struct.

Public Members

`uint8_t` EID17_15

Extended Format Identifier 17-15

`uint8_t` R_TEIDE

ID Extended

`uint8_t` R_TSRR

Substitute Remote Request

`uint8_t` EID20_18_OR_SID2_0

Extended Format Identifier 18-20 or standard format bit 0-2

```
struct MSCAN_IDR3Type
```

#include <fsl_mscan.h> MSCAN IDR3 struct.

Public Members

`uint8_t` ERTR

Remote Transmission Request

`uint8_t` EID6_0

Extended Format Identifier 6-0

```
union IDR1_3_UNION
```

#include <fsl_mscan.h> MSCAN idr1 and idr3 union.

Public Members

MSCAN_IDR1Type IDR1

structure for identifier 1

MSCAN_IDR3Type IDR3

structure for identifier 3

uint8_t Bytes
bytes

struct MSCAN_ExtendIDType
#include <fsl_mscan.h> MSCAN extend ID struct.

Public Members

uint32_t EID6_0
ID[0:6]
uint32_t EID14_7
ID[14:7]
uint32_t EID17_15
ID[17:15]
uint32_t EID20_18
ID[20:18]
uint32_t EID28_21
ID[28:21]

struct MSCAN_StandardIDType
#include <fsl_mscan.h> MSCAN standard ID struct.

Public Members

uint32_t EID2_0
ID[0:2]
uint32_t EID10_3
ID[10:3]

struct __mscan_mb
#include <fsl_mscan.h> MsCAN message buffer structure.

Public Members

uint8_t EIDR0
Extended Identifier Register 0
uint8_t EIDR1
Extended Identifier Register 1
uint8_t EIDR2
Extended Identifier Register 2
uint8_t EIDR3
Extended Identifier Register 3
uint8_t EDSR[8]
Extended Data Segment Register
uint8_t DLR
data length field
uint8_t BPR
Buffer Priority Register

uint8_t TSRH
Time Stamp Register High
uint8_t TSRL
Time Stamp Register Low

struct __mscan_frame
#include <fsl_mscan.h> MsCAN frame structure.

Public Members

union __mscan_frame ID_Type
identifier union
uint8_t DLR
data length
uint8_t BPR
transmit buffer priority
mscan_frame_type_t type
remote frame or data frame
mscan_frame_format_t format
extend frame or standard frame
uint8_t TSRH
time stamp high byte
uint8_t TSRL
time stamp low byte

struct __mscan_idfilter_config
#include <fsl_mscan.h> MsCAN module acceptance filter configuration structure.

Public Members

mscan_id_filter_mode_t filterMode
MSCAN Identifier Acceptance Filter Mode
uint32_t u32IDAR0
MSCAN Identifier Acceptance Register n of First Bank
uint32_t u32IDAR1
MSCAN Identifier Acceptance Register n of Second Bank
uint32_t u32IDMR0
MSCAN Identifier Mask Register n of First Bank
uint32_t u32IDMR1
MSCAN Identifier Mask Register n of Second Bank

struct __mscan_config
#include <fsl_mscan.h> MsCAN module configuration structure.

Public Members

uint32_t baudRate

MsCAN baud rate in bps.

bool enableTimer

Enable or Disable free running timer.

bool enableWakeup

Enable or Disable Wakeup Mode.

mscan_clock_source_t clkSrc

Clock source for MsCAN Protocol Engine.

bool enableLoopBack

Enable or Disable Loop Back Self Test Mode.

bool enableListen

Enable or Disable Listen Only Mode.

mscan_busoffrec_mode_t busoffrecMode

Bus-Off Recovery Mode.

struct *_mscan_timing_config*

#include <fsl_mscan.h> MsCAN protocol timing characteristic configuration structure.

Public Members

uint8_t priDiv

Baud rate prescaler.

uint8_t sJumpwidth

Sync Jump Width.

uint8_t timeSeg1

Time Segment 1.

uint8_t timeSeg2

Time Segment 2.

uint8_t samp

Number of samples per bit time.

struct *_mscan_mb_transfer*

#include <fsl_mscan.h> MSCAN Message Buffer transfer.

Public Members

mscan_frame_t *frame

The buffer of CAN Message to be transfer.

uint8_t mask

The mask of Tx buffer.

struct *_mscan_handle*

#include <fsl_mscan.h> MsCAN handle structure.

Public Members

mscan_transfer_callback_t callback

Callback function.

void *userData

MsCAN callback function parameter.

mscan_frame_t *volatile mbFrameBuf

The buffer for received data from Message Buffers.

volatile uint8_t mbStateTx

Message Buffer transfer state.

volatile uint8_t mbStateRx

Message Buffer transfer state.

union ID_Type

Public Members

MSCAN_StandardIDType StdID

standard format

MSCAN_ExtendIDType ExtID

extend format

uint32_t ID

Identifire with 32 bit format

union ____unnamed32____

Public Members

uint8_t DSR[8]

data segment

struct __mscan_frame

struct __mscan_frame

struct ____unnamed34____

Public Members

uint32_t dataWord0

MSCAN Frame payload word0.

uint32_t dataWord1

MSCAN Frame payload word1.

struct ____unnamed36____

Public Members

uint8_t dataByte0
MSCAN Frame payload byte0.

uint8_t dataByte1
MSCAN Frame payload byte1.

uint8_t dataByte2
MSCAN Frame payload byte2.

uint8_t dataByte3
MSCAN Frame payload byte3.

uint8_t dataByte4
MSCAN Frame payload byte4.

uint8_t dataByte5
MSCAN Frame payload byte5.

uint8_t dataByte6
MSCAN Frame payload byte6.

uint8_t dataByte7
MSCAN Frame payload byte7.

2.33 PDB: Programmable Delay Block

void PDB_Init(PDB_Type *base, const *pdb_config_t* *config)

Initializes the PDB module.

This function initializes the PDB module. The operations included are as follows.

- Enable the clock for PDB instance.
- Configure the PDB module.
- Enable the PDB module.

Parameters

- base – PDB peripheral base address.
- config – Pointer to the configuration structure. See “*pdb_config_t*”.

void PDB_Deinit(PDB_Type *base)

De-initializes the PDB module.

Parameters

- base – PDB peripheral base address.

void PDB_GetDefaultConfig(*pdb_config_t* *config)

Initializes the PDB user configuration structure.

This function initializes the user configuration structure to a default value. The default values are as follows.

```
config->loadValueMode = kPDB_LoadValueImmediately;
config->prescalerDivider = kPDB_PrescalerDivider1;
config->dividerMultiplicationFactor = kPDB_DividerMultiplicationFactor1;
config->triggerInputSource = kPDB_TriggerSoftware;
config->enableContinuousMode = false;
```

Parameters

- config – Pointer to configuration structure. See “pdb_config_t”.

static inline void PDB_Enable(PDB_Type *base, bool enable)

Enables the PDB module.

Parameters

- base – PDB peripheral base address.
- enable – Enable the module or not.

static inline void PDB_DoSoftwareTrigger(PDB_Type *base)

Triggers the PDB counter by software.

Parameters

- base – PDB peripheral base address.

static inline void PDB_DoLoadValues(PDB_Type *base)

Loads the counter values.

This function loads the counter values from the internal buffer. See “pdb_load_value_mode_t” about PDB’s load mode.

Parameters

- base – PDB peripheral base address.

static inline void PDB_EnableDMA(PDB_Type *base, bool enable)

Enables the DMA for the PDB module.

Parameters

- base – PDB peripheral base address.
- enable – Enable the feature or not.

static inline void PDB_EnableInterrupts(PDB_Type *base, uint32_t mask)

Enables the interrupts for the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value for interrupts. See “_pdb_interrupt_enable”.

static inline void PDB_DisableInterrupts(PDB_Type *base, uint32_t mask)

Disables the interrupts for the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value for interrupts. See “_pdb_interrupt_enable”.

static inline uint32_t PDB_GetStatusFlags(PDB_Type *base)

Gets the status flags of the PDB module.

Parameters

- base – PDB peripheral base address.

Returns

Mask value for asserted flags. See “_pdb_status_flags”.

static inline void PDB_ClearStatusFlags(PDB_Type *base, uint32_t mask)

Clears the status flags of the PDB module.

Parameters

- base – PDB peripheral base address.
- mask – Mask value of flags. See “_pdb_status_flags”.

static inline void PDB_SetModulusValue(PDB_Type *base, uint32_t value)

Specifies the counter period.

Parameters

- base – PDB peripheral base address.
- value – Setting value for the modulus. 16-bit is available.

static inline uint32_t PDB_GetCounterValue(PDB_Type *base)

Gets the PDB counter's current value.

Parameters

- base – PDB peripheral base address.

Returns

PDB counter's current value.

static inline void PDB_SetCounterDelayValue(PDB_Type *base, uint32_t value)

Sets the value for the PDB counter delay event.

Parameters

- base – PDB peripheral base address.
- value – Setting value for PDB counter delay event. 16-bit is available.

static inline void PDB_SetADCPreTriggerConfig(PDB_Type *base, *pdb_adc_trigger_channel_t* channel, *pdb_adc_pretrigger_config_t* *config)

Configures the ADC pre-trigger in the PDB module.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for ADC instance.
- config – Pointer to the configuration structure. See “*pdb_adc_pretrigger_config_t*”.

static inline void PDB_SetADCPreTriggerDelayValue(PDB_Type *base, *pdb_adc_trigger_channel_t* channel, *pdb_adc_pretrigger_t* pretriggerNumber, uint32_t value)

Sets the value for the ADC pre-trigger delay event.

This function sets the value for ADC pre-trigger delay event. It specifies the delay value for the channel's corresponding pre-trigger. The pre-trigger asserts when the PDB counter is equal to the set value.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for ADC instance.
- pretriggerNumber – Channel group index for ADC instance.
- value – Setting value for ADC pre-trigger delay event. 16-bit is available.

```
static inline uint32_t PDB_GetADCPreTriggerStatusFlags(PDB_Type *base,  
                                                       pdb_adc_trigger_channel_t channel)
```

Gets the ADC pre-trigger's status flags.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for ADC instance.

Returns

Mask value for asserted flags. See “_pdb_adc_pretrigger_flags”.

```
static inline void PDB_ClearADCPreTriggerStatusFlags(PDB_Type *base,  
                                                     pdb_adc_trigger_channel_t channel,  
                                                     uint32_t mask)
```

Clears the ADC pre-trigger status flags.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for ADC instance.
- mask – Mask value for flags. See “_pdb_adc_pretrigger_flags”.

```
void PDB_SetDACTriggerConfig(PDB_Type *base, pdb_dac_trigger_channel_t channel,  
                             pdb_dac_trigger_config_t *config)
```

Configures the DAC trigger in the PDB module.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for DAC instance.
- config – Pointer to the configuration structure. See “pdb_dac_trigger_config_t”.

```
static inline void PDB_SetDACTriggerIntervalValue(PDB_Type *base, pdb_dac_trigger_channel_t  
                                                  channel, uint32_t value)
```

Sets the value for the DAC interval event.

This function sets the value for DAC interval event. DAC interval trigger triggers the DAC module to update the buffer when the DAC interval counter is equal to the set value.

Parameters

- base – PDB peripheral base address.
- channel – Channel index for DAC instance.
- value – Setting value for the DAC interval event.

```
static inline void PDB_EnablePulseOutTrigger(PDB_Type *base, pdb_pulse_out_channel_mask_t  
                                             channelMask, bool enable)
```

Enables the pulse out trigger channels.

Parameters

- base – PDB peripheral base address.
- channelMask – Channel mask value for multiple pulse out trigger channel.
- enable – Whether the feature is enabled or not.

```
static inline void PDB_SetPulseOutTriggerDelayValue(PDB_Type *base,  
                                                    pdb_pulse_out_trigger_channel_t channel,  
                                                    uint32_t value1, uint32_t value2)
```

Sets event values for the pulse out trigger.

This function is used to set event values for the pulse output trigger. These pulse output trigger delay values specify the delay for the PDB Pulse-out. Pulse-out goes high when the PDB counter is equal to the pulse output high value (value1). Pulse-out goes low when the PDB counter is equal to the pulse output low value (value2).

Parameters

- base – PDB peripheral base address.
- channel – Channel index for pulse out trigger channel.
- value1 – Setting value for pulse out high.
- value2 – Setting value for pulse out low.

FSL_PDB_DRIVER_VERSION

PDB driver version 2.0.4.

enum __pdb_status_flags

PDB flags.

Values:

enumerator kPDB_LoadOKFlag

This flag is automatically cleared when the values in buffers are loaded into the internal registers after the LDOK bit is set or the PDBEN is cleared.

enumerator kPDB_DelayEventFlag

PDB timer delay event flag.

enum __pdb_adc_pretrigger_flags

PDB ADC PreTrigger channel flags.

Values:

enumerator kPDB_ADCPreTriggerChannel0Flag

Pre-trigger 0 flag.

enumerator kPDB_ADCPreTriggerChannel1Flag

Pre-trigger 1 flag.

enumerator kPDB_ADCPreTriggerChannel0ErrorFlag

Pre-trigger 0 Error.

enumerator kPDB_ADCPreTriggerChannel1ErrorFlag

Pre-trigger 1 Error.

enum __pdb_interrupt_enable

PDB buffer interrupts.

Values:

enumerator kPDB_SequenceErrorInterruptEnable

PDB sequence error interrupt enable.

enumerator kPDB_DelayInterruptEnable

PDB delay interrupt enable.

enum __pdb_load_value_mode

PDB load value mode.

Selects the mode to load the internal values after doing the load operation (write 1 to PDBx_SC[LDOK]). These values are for the following operations.

- PDB counter (PDBx_MOD, PDBx_IDLY)
- ADC trigger (PDBx_CHnDLYm)
- DAC trigger (PDBx_DACINTx)
- CMP trigger (PDBx_POyDLY)

Values:

enumerator kPDB_LoadValueImmediately

Load immediately after 1 is written to LDOK.

enumerator kPDB_LoadValueOnCounterOverflow

Load when the PDB counter overflows (reaches the MOD register value).

enumerator kPDB_LoadValueOnTriggerInput

Load a trigger input event is detected.

enumerator kPDB_LoadValueOnCounterOverflowOrTriggerInput

Load either when the PDB counter overflows or a trigger input is detected.

enum __pdb_prescaler_divider

Prescaler divider.

Counting uses the peripheral clock divided by multiplication factor selected by times of MULT.

Values:

enumerator kPDB_PrescalerDivider1

Divider x1.

enumerator kPDB_PrescalerDivider2

Divider x2.

enumerator kPDB_PrescalerDivider4

Divider x4.

enumerator kPDB_PrescalerDivider8

Divider x8.

enumerator kPDB_PrescalerDivider16

Divider x16.

enumerator kPDB_PrescalerDivider32

Divider x32.

enumerator kPDB_PrescalerDivider64

Divider x64.

enumerator kPDB_PrescalerDivider128

Divider x128.

enum __pdb_divider_multiplication_factor

Multiplication factor select for prescaler.

Selects the multiplication factor of the prescaler divider for the counter clock.

Values:

enumerator kPDB_DividerMultiplicationFactor1

Multiplication factor is 1.

enumerator kPDB_DividerMultiplicationFactor10

Multiplication factor is 10.

enumerator kPDB_DividerMultiplicationFactor20
Multiplication factor is 20.

enumerator kPDB_DividerMultiplicationFactor40
Multiplication factor is 40.

enum __pdb_trigger_input_source

Trigger input source.

Selects the trigger input source for the PDB. The trigger input source can be internal or external (EXTRG pin), or the software trigger. See chip configuration details for the actual PDB input trigger connections.

Values:

enumerator kPDB_TriggerInput0
Trigger-In 0.

enumerator kPDB_TriggerInput1
Trigger-In 1.

enumerator kPDB_TriggerInput2
Trigger-In 2.

enumerator kPDB_TriggerInput3
Trigger-In 3.

enumerator kPDB_TriggerInput4
Trigger-In 4.

enumerator kPDB_TriggerInput5
Trigger-In 5.

enumerator kPDB_TriggerInput6
Trigger-In 6.

enumerator kPDB_TriggerInput7
Trigger-In 7.

enumerator kPDB_TriggerInput8
Trigger-In 8.

enumerator kPDB_TriggerInput9
Trigger-In 9.

enumerator kPDB_TriggerInput10
Trigger-In 10.

enumerator kPDB_TriggerInput11
Trigger-In 11.

enumerator kPDB_TriggerInput12
Trigger-In 12.

enumerator kPDB_TriggerInput13
Trigger-In 13.

enumerator kPDB_TriggerInput14
Trigger-In 14.

enumerator kPDB_TriggerSoftware
Trigger-In 15, software trigger.

enum _pdb_adc_trigger_channel

List of PDB ADC trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_ADCTriggerChannel0

PDB ADC trigger channel number 0

enumerator kPDB_ADCTriggerChannel1

PDB ADC trigger channel number 1

enumerator kPDB_ADCTriggerChannel2

PDB ADC trigger channel number 2

enumerator kPDB_ADCTriggerChannel3

PDB ADC trigger channel number 3

enum _pdb_adc_pretrigger

List of PDB ADC pretrigger.

Note: Actual number of available pretrigger channels is SoC dependent

Values:

enumerator kPDB_ADCPreTrigger0

PDB ADC pretrigger number 0

enumerator kPDB_ADCPreTrigger1

PDB ADC pretrigger number 1

enumerator kPDB_ADCPreTrigger2

PDB ADC pretrigger number 2

enumerator kPDB_ADCPreTrigger3

PDB ADC pretrigger number 3

enumerator kPDB_ADCPreTrigger4

PDB ADC pretrigger number 4

enumerator kPDB_ADCPreTrigger5

PDB ADC pretrigger number 5

enumerator kPDB_ADCPreTrigger6

PDB ADC pretrigger number 6

enumerator kPDB_ADCPreTrigger7

PDB ADC pretrigger number 7

enum _pdb_dac_trigger_channel

List of PDB DAC trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_DACTriggerChannel0
PDB DAC trigger channel number 0

enumerator kPDB_DACTriggerChannel1
PDB DAC trigger channel number 1

enum __pdb_pulse_out_trigger_channel
List of PDB pulse out trigger channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPDB_PulseOutTriggerChannel0
PDB pulse out trigger channel number 0

enumerator kPDB_PulseOutTriggerChannel1
PDB pulse out trigger channel number 1

enumerator kPDB_PulseOutTriggerChannel2
PDB pulse out trigger channel number 2

enumerator kPDB_PulseOutTriggerChannel3
PDB pulse out trigger channel number 3

enum __pdb_pulse_out_channel_mask
List of PDB pulse out trigger channels mask.

Note: Actual number of available channels mask is SoC dependent

Values:

enumerator kPDB_PulseOutChannel0Mask
PDB pulse out trigger channel number 0 mask

enumerator kPDB_PulseOutChannel1Mask
PDB pulse out trigger channel number 1 mask

enumerator kPDB_PulseOutChannel2Mask
PDB pulse out trigger channel number 2 mask

enumerator kPDB_PulseOutChannel3Mask
PDB pulse out trigger channel number 3 mask

typedef enum __pdb_load_value_mode pdb_load_value_mode_t
PDB load value mode.

Selects the mode to load the internal values after doing the load operation (write 1 to PDBx_SC[LDOK]). These values are for the following operations.

- PDB counter (PDBx_MOD, PDBx_IDLY)
- ADC trigger (PDBx_CHnDLYm)
- DAC trigger (PDBx_DACINTx)
- CMP trigger (PDBx_POyDLY)

typedef enum __pdb_prescaler_divider pdb_prescaler_divider_t
Prescaler divider.

Counting uses the peripheral clock divided by multiplication factor selected by times of MULT.

typedef enum *_pdb_divider_multiplication_factor* pdb_divider_multiplication_factor_t
Multiplication factor select for prescaler.

Selects the multiplication factor of the prescaler divider for the counter clock.

typedef enum *_pdb_trigger_input_source* pdb_trigger_input_source_t
Trigger input source.

Selects the trigger input source for the PDB. The trigger input source can be internal or external (EXTRG pin), or the software trigger. See chip configuration details for the actual PDB input trigger connections.

typedef enum *_pdb_adc_trigger_channel* pdb_adc_trigger_channel_t
List of PDB ADC trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_adc_pretrigger* pdb_adc_pretrigger_t
List of PDB ADC pretrigger.

Note: Actual number of available pretrigger channels is SoC dependent

typedef enum *_pdb_dac_trigger_channel* pdb_dac_trigger_channel_t
List of PDB DAC trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_pulse_out_trigger_channel* pdb_pulse_out_trigger_channel_t
List of PDB pulse out trigger channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_pdb_pulse_out_channel_mask* pdb_pulse_out_channel_mask_t
List of PDB pulse out trigger channels mask.

Note: Actual number of available channels mask is SoC dependent

typedef struct *_pdb_config* pdb_config_t
PDB module configuration.

typedef struct *_pdb_adc_pretrigger_config* pdb_adc_pretrigger_config_t
PDB ADC Pre-trigger configuration.

typedef struct *_pdb_dac_trigger_config* pdb_dac_trigger_config_t
PDB DAC trigger configuration.

struct *_pdb_config*
#include <fsl_pdb.h> PDB module configuration.

Public Members

pdb_load_value_mode_t loadValueMode
Select the load value mode.

pdb_prescaler_divider_t prescalerDivider

Select the prescaler divider.

pdb_divider_multiplication_factor_t dividerMultiplicationFactor

Multiplication factor select for prescaler.

pdb_trigger_input_source_t triggerInputSource

Select the trigger input source.

bool enableContinuousMode

Enable the PDB operation in Continuous mode.

struct __pdb_adc_pretrigger_config

#include <fsl_pdb.h> PDB ADC Pre-trigger configuration.

Public Members

uint32_t enablePreTriggerMask

PDB Channel Pre-trigger Enable.

uint32_t enableOutputMask

PDB Channel Pre-trigger Output Select. PDB channel's corresponding pre-trigger asserts when the counter reaches the channel delay register.

uint32_t enableBackToBackOperationMask

PDB Channel pre-trigger Back-to-Back Operation Enable. Back-to-back operation enables the ADC conversions complete to trigger the next PDB channel pre-trigger and trigger output, so that the ADC conversions can be triggered on next set of configuration and results registers.

struct __pdb_dac_trigger_config

#include <fsl_pdb.h> PDB DAC trigger configuration.

Public Members

bool enableExternalTriggerInput

Enables the external trigger for DAC interval counter.

bool enableIntervalTrigger

Enables the DAC interval trigger.

2.34 PMC: Power Management Controller

static inline void PMC_GetVersionId(PMC_Type *base, *pmc_version_id_t* *versionId)

Gets the PMC version ID.

This function gets the PMC version ID, including major version number, minor version number, and a feature specification number.

Parameters

- base – PMC peripheral base address.
- versionId – Pointer to version ID structure.

```
void PMC_GetParam(PMC_Type *base, pmc_param_t *param)
```

Gets the PMC parameter.

This function gets the PMC parameter including the VLPO enable and the HVD enable.

Parameters

- base – PMC peripheral base address.
- param – Pointer to PMC param structure.

```
void PMC_ConfigureLowVoltDetect(PMC_Type *base, const pmc_low_volt_detect_config_t *config)
```

Configures the low-voltage detect setting.

This function configures the low-voltage detect setting, including the trip point voltage setting, enables or disables the interrupt, enables or disables the system reset.

Parameters

- base – PMC peripheral base address.
- config – Low-voltage detect configuration structure.

```
static inline bool PMC_GetLowVoltDetectFlag(PMC_Type *base)
```

Gets the Low-voltage Detect Flag status.

This function reads the current LVDF status. If it returns 1, a low-voltage event is detected.

Parameters

- base – PMC peripheral base address.

Returns

Current low-voltage detect flag

- true: Low-voltage detected
- false: Low-voltage not detected

```
static inline void PMC_ClearLowVoltDetectFlag(PMC_Type *base)
```

Acknowledges clearing the Low-voltage Detect flag.

This function acknowledges the low-voltage detection errors (write 1 to clear LVDF).

Parameters

- base – PMC peripheral base address.

```
void PMC_ConfigureLowVoltWarning(PMC_Type *base, const pmc_low_volt_warning_config_t *config)
```

Configures the low-voltage warning setting.

This function configures the low-voltage warning setting, including the trip point voltage setting and enabling or disabling the interrupt.

Parameters

- base – PMC peripheral base address.
- config – Low-voltage warning configuration structure.

```
static inline bool PMC_GetLowVoltWarningFlag(PMC_Type *base)
```

Gets the Low-voltage Warning Flag status.

This function polls the current LVWF status. When 1 is returned, it indicates a low-voltage warning event. LVWF is set when V Supply transitions below the trip point or after reset and V Supply is already below the V LVW.

Parameters

- base – PMC peripheral base address.

Returns

Current LVWF status

- true: Low-voltage Warning Flag is set.
- false: the Low-voltage Warning does not happen.

static inline void PMC_ClearLowVoltWarningFlag(PMC_Type *base)

Acknowledges the Low-voltage Warning flag.

This function acknowledges the low voltage warning errors (write 1 to clear LVWF).

Parameters

- base – PMC peripheral base address.

void PMC_ConfigureHighVoltDetect(PMC_Type *base, const *pmc_high_volt_detect_config_t* *config)

Configures the high-voltage detect setting.

This function configures the high-voltage detect setting, including the trip point voltage setting, enabling or disabling the interrupt, enabling or disabling the system reset.

Parameters

- base – PMC peripheral base address.
- config – High-voltage detect configuration structure.

static inline bool PMC_GetHighVoltDetectFlag(PMC_Type *base)

Gets the High-voltage Detect Flag status.

This function reads the current HVDF status. If it returns 1, a low voltage event is detected.

Parameters

- base – PMC peripheral base address.

Returns

Current high-voltage detect flag

- true: High-voltage detected
- false: High-voltage not detected

static inline void PMC_ClearHighVoltDetectFlag(PMC_Type *base)

Acknowledges clearing the High-voltage Detect flag.

This function acknowledges the high-voltage detection errors (write 1 to clear HVDF).

Parameters

- base – PMC peripheral base address.

void PMC_ConfigureBandgapBuffer(PMC_Type *base, const *pmc_bandgap_buffer_config_t* *config)

Configures the PMC bandgap.

This function configures the PMC bandgap, including the drive select and behavior in low-power mode.

Parameters

- base – PMC peripheral base address.
- config – Pointer to the configuration structure

static inline bool PMC_GetPeriphIOIsolationFlag(PMC_Type *base)

Gets the acknowledge Peripherals and I/O pads isolation flag.

This function reads the Acknowledge Isolation setting that indicates whether certain peripherals and the I/O pads are in a latched state as a result of having been in the VLLS mode.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

ACK isolation 0 - Peripherals and I/O pads are in a normal run state. 1 - Certain peripherals and I/O pads are in an isolated and latched state.

static inline void PMC_ClearPeriphIOIsolationFlag(PMC_Type *base)

Acknowledges the isolation flag to Peripherals and I/O pads.

This function clears the ACK Isolation flag. Writing one to this setting when it is set releases the I/O pads and certain peripherals to their normal run mode state.

Parameters

- base – PMC peripheral base address.

static inline bool PMC_IsRegulatorInRunRegulation(PMC_Type *base)

Gets the regulator regulation status.

This function returns the regulator to run a regulation status. It provides the current status of the internal voltage regulator.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

Regulation status 0 - Regulator is in a stop regulation or in transition to/from the regulation. 1 - Regulator is in a run regulation.

FSL_PMC_DRIVER_VERSION

PMC driver version.

Version 2.0.3.

enum __pmc_low_volt_detect_volt_select

Low-voltage Detect Voltage Select.

Values:

enumerator kPMC_LowVoltDetectLowTrip

Low-trip point selected (VLVD = VLVDL)

enumerator kPMC_LowVoltDetectHighTrip

High-trip point selected (VLVD = VLVDH)

enum __pmc_low_volt_warning_volt_select

Low-voltage Warning Voltage Select.

Values:

enumerator kPMC_LowVoltWarningLowTrip

Low-trip point selected (VLVW = VLVW1)

enumerator kPMC_LowVoltWarningMid1Trip
Mid 1 trip point selected (VLVW = VLVW2)

enumerator kPMC_LowVoltWarningMid2Trip
Mid 2 trip point selected (VLVW = VLVW3)

enumerator kPMC_LowVoltWarningHighTrip
High-trip point selected (VLVW = VLVW4)

enum _pmc_high_volt_detect_volt_select
High-voltage Detect Voltage Select.
Values:

enumerator kPMC_HighVoltDetectLowTrip
Low-trip point selected (VHVD = VHVDL)

enumerator kPMC_HighVoltDetectHighTrip
High-trip point selected (VHVD = VHVDH)

enum _pmc_bandgap_buffer_drive_select
Bandgap Buffer Drive Select.
Values:

enumerator kPMC_BandgapBufferDriveLow
Low-drive.

enumerator kPMC_BandgapBufferDriveHigh
High-drive.

enum _pmc_vlp_freq_option
VLPx Option.
Values:

enumerator kPMC_FreqRestrict
Frequency is restricted in VLPx mode.

enumerator kPMC_FreqUnrestrict
Frequency is unrestricted in VLPx mode.

typedef enum _pmc_low_volt_detect_volt_select pmc_low_volt_detect_volt_select_t
Low-voltage Detect Voltage Select.

typedef enum _pmc_low_volt_warning_volt_select pmc_low_volt_warning_volt_select_t
Low-voltage Warning Voltage Select.

typedef enum _pmc_high_volt_detect_volt_select pmc_high_volt_detect_volt_select_t
High-voltage Detect Voltage Select.

typedef enum _pmc_bandgap_buffer_drive_select pmc_bandgap_buffer_drive_select_t
Bandgap Buffer Drive Select.

typedef enum _pmc_vlp_freq_option pmc_vlp_freq_mode_t
VLPx Option.

typedef struct _pmc_version_id pmc_version_id_t
IP version ID definition.

typedef struct _pmc_param pmc_param_t
IP parameter definition.

```
typedef struct _pmc_low_volt_detect_config pmc_low_volt_detect_config_t
```

Low-voltage Detect Configuration Structure.

```
typedef struct _pmc_low_volt_warning_config pmc_low_volt_warning_config_t
```

Low-voltage Warning Configuration Structure.

```
typedef struct _pmc_high_volt_detect_config pmc_high_volt_detect_config_t
```

High-voltage Detect Configuration Structure.

```
typedef struct _pmc_bandgap_buffer_config pmc_bandgap_buffer_config_t
```

Bandgap Buffer configuration.

```
struct __pmc_version_id
```

#include <fsl_pmc.h> IP version ID definition.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor version number.

uint8_t major

Major version number.

```
struct __pmc_param
```

#include <fsl_pmc.h> IP parameter definition.

Public Members

bool vlpoEnable

VLPO enable.

bool hvdEnable

HVD enable.

```
struct __pmc_low_volt_detect_config
```

#include <fsl_pmc.h> Low-voltage Detect Configuration Structure.

Public Members

bool enableInt

Enable interrupt when Low-voltage detect

bool enableReset

Enable system reset when Low-voltage detect

pmc_low_volt_detect_volt_select_t voltSelect

Low-voltage detect trip point voltage selection

```
struct __pmc_low_volt_warning_config
```

#include <fsl_pmc.h> Low-voltage Warning Configuration Structure.

Public Members

`bool enableInt`
 Enable interrupt when low-voltage warning

`pmc_low_volt_warning_volt_select_t voltSelect`
 Low-voltage warning trip point voltage selection

`struct _pmc_high_volt_detect_config`
`#include <fsl_pmc.h>` High-voltage Detect Configuration Structure.

Public Members

`bool enableInt`
 Enable interrupt when high-voltage detect

`bool enableReset`
 Enable system reset when high-voltage detect

`pmc_high_volt_detect_volt_select_t voltSelect`
 High-voltage detect trip point voltage selection

`struct _pmc_bandgap_buffer_config`
`#include <fsl_pmc.h>` Bandgap Buffer configuration.

Public Members

`bool enable`
 Enable bandgap buffer.

`bool enableInLowPowerMode`
 Enable bandgap buffer in low-power mode.

`pmc_bandgap_buffer_drive_select_t drive`
 Bandgap buffer drive select.

2.35 PORT: Port Control and Interrupts

`static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t *config)`

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- `base` – PORT peripheral base pointer.

- pin – PORT pin number.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const
                                             port_pin_config_t *config)
```

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask,
                                                       port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.

- `kPORT_ActiveHighTriggerOutputEnable` : Enable active high-trigger output (if the trigger states exit).
- `kPORT_ActiveLowTriggerOutputEnable` : Enable active low-trigger output (if the trigger states exit)..

static inline void `PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)`

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the `PORT_SetPinsConfig`, because the `PORT_SetPinsConfig` need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : `kPORT_PinDisabledOrAnalog`). This function is recommended to use to reset the pin mux

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `mux` – pin muxing slot selection.
 - `kPORT_PinDisabledOrAnalog`: Pin disabled or work in analog function.
 - `kPORT_MuxAsGpio` : Set as GPIO.
 - `kPORT_MuxAlt2` : chip-specific.
 - `kPORT_MuxAlt3` : chip-specific.
 - `kPORT_MuxAlt4` : chip-specific.
 - `kPORT_MuxAlt5` : chip-specific.
 - `kPORT_MuxAlt6` : chip-specific.
 - `kPORT_MuxAlt7` : chip-specific.

static inline void `PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)`

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `mask` – PORT pin number macro.
- `enable` – PORT digital filter configuration.

static inline void `PORT_SetDigitalFilterConfig(PORT_Type *base, const port_digital_filter_config_t *config)`

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `config` – PORT digital filter configuration structure.

static inline void `PORT_SetPinInterruptConfig(PORT_Type *base, uint32_t pin, port_interrupt_t config)`

Configures the port pin interrupt/DMA request.

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.

- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.
 - kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline uint32_t PORT_GetPinsInterruptFlags(PORT_Type *base)
Reads the whole port status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – PORT peripheral base pointer.

Returns

Current port interrupt status flags, for example, 0x00010001 means the pin 0 and 16 have the interrupt.

static inline void PORT_ClearPinsInterruptFlags(PORT_Type *base, uint32_t mask)
Clears the multiple pin interrupt status flag.

Parameters

- base – PORT peripheral base pointer.

- mask – PORT pin number macro.

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum __port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum __port_slew_rate

Slew rate selection.

Values:

enumerator kPORT_FastSlewRate

Fast slew rate is configured.

enumerator kPORT_SlowSlewRate

Slow slew rate is configured.

enum __port_open_drain_enable

Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable

Open drain output is disabled.

enumerator kPORT_OpenDrainEnable

Open drain output is enabled.

enum __port_passive_filter_enable

Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable

Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable

Passive input filter is enabled.

enum __port_drive_strength

Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength

Low-drive strength is configured.

enumerator kPORT_HighDriveStrength

High-drive strength is configured.

enum __port__lock__register

Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT__UnlockRegister

Pin Control Register fields [15:0] are not locked.

enumerator kPORT__LockRegister

Pin Control Register fields [15:0] are locked.

enum __port__mux

Pin mux selection.

Values:

enumerator kPORT__PinDisabledOrAnalog

Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT__MuxAsGpio

Corresponding pin is configured as GPIO.

enumerator kPORT__MuxAlt0

Chip-specific

enumerator kPORT__MuxAlt1

Chip-specific

enumerator kPORT__MuxAlt2

Chip-specific

enumerator kPORT__MuxAlt3

Chip-specific

enumerator kPORT__MuxAlt4

Chip-specific

enumerator kPORT__MuxAlt5

Chip-specific

enumerator kPORT__MuxAlt6

Chip-specific

enumerator kPORT__MuxAlt7

Chip-specific

enumerator kPORT__MuxAlt8

Chip-specific

enumerator kPORT__MuxAlt9

Chip-specific

enumerator kPORT__MuxAlt10

Chip-specific

enumerator kPORT__MuxAlt11

Chip-specific

enumerator kPORT__MuxAlt12

Chip-specific

enumerator kPORT__MuxAlt13

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum __port_interrupt

Configures the interrupt generation condition.

Values:

enumerator kPORT_InterruptOrDMADisabled

Interrupt/DMA request is disabled.

enumerator kPORT_DMARisingEdge

DMA request on rising edge.

enumerator kPORT_DMAFallingEdge

DMA request on falling edge.

enumerator kPORT_DMAEitherEdge

DMA request on either edge.

enumerator kPORT_FlagRisingEdge

Flag sets on rising edge.

enumerator kPORT_FlagFallingEdge

Flag sets on falling edge.

enumerator kPORT_FlagEitherEdge

Flag sets on either edge.

enumerator kPORT_InterruptLogicZero

Interrupt when logic zero.

enumerator kPORT_InterruptRisingEdge

Interrupt on rising edge.

enumerator kPORT_InterruptFallingEdge

Interrupt on falling edge.

enumerator kPORT_InterruptEitherEdge

Interrupt on either edge.

enumerator kPORT_InterruptLogicOne

Interrupt when logic one.

enumerator kPORT_ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kPORT_ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum __port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

typedef enum *_port_mux* port__mux_t

Pin mux selection.

typedef enum *_port_interrupt* port__interrupt_t

Configures the interrupt generation condition.

typedef enum *_port_digital_filter_clock_source* port__digital_filter_clock_source_t

Digital filter clock source selection.

typedef struct *_port_digital_filter_config* port__digital_filter_config_t

PORT digital filter feature configuration definition.

typedef struct *_port_pin_config* port__pin_config_t

PORT pin configuration structure.

FSL_COMPONENT_ID

struct __port_digital_filter_config

#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth

Set digital filter width

port_digital_filter_clock_source_t clockSource

Set digital filter clockSource

struct __port_pin_config

#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t pullSelect

No-pull/pull-down/pull-up select

uint16_t slewRate

Fast/slow slew rate Configure

uint16_t passiveFilterEnable

Passive filter enable/disable

uint16_t openDrainEnable

Open drain enable/disable

uint16_t driveStrength

Fast/slow drive strength configure

uint16_t lockRegister

Lock/unlock the PCR field[15:0]

2.36 PWT: Pulse Width Timer

`void PWT_Init(PWT_Type *base, const pwt_config_t *config)`

Ungates the PWT clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the PWT driver.

Parameters

- `base` – PWT peripheral base address
- `config` – Pointer to the user configuration structure.

`void PWT_Deinit(PWT_Type *base)`

Gates the PWT clock.

Parameters

- `base` – PWT peripheral base address

`void PWT_GetDefaultConfig(pwt_config_t *config)`

Fills in the PWT configuration structure with the default settings.

The default values are:

```
config->clockSource = kPWT_BusClock;
config->prescale = kPWT_Prescale_Divide_1;
config->inputSelect = kPWT_InputPort_0;
config->enableFirstCounterLoad = false;
```

Parameters

- `config` – Pointer to the user configuration structure.

`static inline void PWT_EnableInterrupts(PWT_Type *base, uint32_t mask)`

Enables the selected PWT interrupts.

Parameters

- `base` – PWT peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `pwt_interrupt_enable_t`

`static inline void PWT_DisableInterrupts(PWT_Type *base, uint32_t mask)`

Disables the selected PWT interrupts.

Parameters

- `base` – PWT peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `pwt_interrupt_enable_t`

`static inline uint32_t PWT_GetEnabledInterrupts(PWT_Type *base)`

Gets the enabled PWT interrupts.

Parameters

- `base` – PWT peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `pwt_interrupt_enable_t`

static inline uint32_t PWT_GetStatusFlags(PWT_Type *base)

Gets the PWT status flags.

Parameters

- base – PWT peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `pwt_status_flags_t`

static inline void PWT_ClearStatusFlags(PWT_Type *base, uint32_t mask)

Clears the PWT status flags.

Parameters

- base – PWT peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `pwt_status_flags_t`

static inline void PWT_StartTimer(PWT_Type *base)

Starts the PWT counter.

Parameters

- base – PWT peripheral base address

static inline void PWT_StopTimer(PWT_Type *base)

Stops the PWT counter.

Parameters

- base – PWT peripheral base address

enum __pwt_clock_source

PWT clock source selection.

Values:

enumerator `kPWT_BusClock`

The Bus clock is used as the clock source of PWT counter

enumerator `kPWT_AlternativeClock`

Alternative clock is used as the clock source of PWT counter

enum __pwt_clock_prescale

PWT prescaler factor selection for clock source.

Values:

enumerator `kPWT_Prescale_Divide_1`

PWT clock divided by 1

enumerator `kPWT_Prescale_Divide_2`

PWT clock divided by 2

enumerator `kPWT_Prescale_Divide_4`

PWT clock divided by 4

enumerator `kPWT_Prescale_Divide_8`

PWT clock divided by 8

enumerator `kPWT_Prescale_Divide_16`

PWT clock divided by 16

enumerator kPWT_Prescale_Divide_32
PWT clock divided by 32

enumerator kPWT_Prescale_Divide_64
PWT clock divided by 64

enumerator kPWT_Prescale_Divide_128
PWT clock divided by 128

enum _pwt_input_select
PWT input port selection.

Values:

enumerator kPWT_InputPort_0
PWT input comes from PWTIN[0]

enumerator kPWT_InputPort_1
PWT input comes from PWTIN[1]

enumerator kPWT_InputPort_2
PWT input comes from PWTIN[2]

enumerator kPWT_InputPort_3
PWT input comes from PWTIN[3]

enum _pwt_interrupt_enable
List of PWT interrupts.

Values:

enumerator kPWT_PulseWidthReadyInterruptEnable
Pulse width data ready interrupt

enumerator kPWT_CounterOverflowInterruptEnable
Counter overflow interrupt

enum _pwt_status_flags
List of PWT flags.

Values:

enumerator kPWT_CounterOverflowFlag
Counter overflow flag

enumerator kPWT_PulseWidthValidFlag
Pulse width valid flag

typedef enum _pwt_clock_source pwt_clock_source_t
PWT clock source selection.

typedef enum _pwt_clock_prescale pwt_clock_prescale_t
PWT prescaler factor selection for clock source.

typedef enum _pwt_input_select pwt_input_select_t
PWT input port selection.

typedef struct _pwt_config pwt_config_t
PWT configuration structure.

This structure holds the configuration settings for the PWT peripheral. To initialize this structure to reasonable defaults, call the PWT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
static inline uint16_t PWT_GetCurrentTimerCount(PWT_Type *base)
```

Reads the current counter value.

This function returns the timer counting value

Parameters

- base – PWT peripheral base address

Returns

Current 16-bit timer counter value

```
static inline uint16_t PWT_ReadPositivePulseWidth(PWT_Type *base)
```

Reads the positive pulse width.

This function reads the low and high registers and returns the 16-bit positive pulse width

Parameters

- base – PWT peripheral base address.

Returns

The 16-bit positive pulse width.

```
static inline uint16_t PWT_ReadNegativePulseWidth(PWT_Type *base)
```

Reads the negative pulse width.

This function reads the low and high registers and returns the 16-bit negative pulse width

Parameters

- base – PWT peripheral base address.

Returns

The 16-bit negative pulse width.

```
static inline void PWT_Reset(PWT_Type *base)
```

Performs a software reset on the PWT module.

Parameters

- base – PWT peripheral base address

```
FSL_PWT_DRIVER_VERSION
```

Version 2.0.2

```
struct __pwt_config
```

#include <fsl_pwt.h> PWT configuration structure.

This structure holds the configuration settings for the PWT peripheral. To initialize this structure to reasonable defaults, call the PWT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

pwt_clock_source_t clockSource

Clock source for the counter

pwt_clock_prescale_t prescale

Pre-scaler to divide down the clock

pwt_input_select_t inputSelect

PWT Pulse input port selection

bool enableFirstCounterLoad

true: Load the first counter value to registers; false: Do not load first counter value

2.37 RCM: Reset Control Module Driver

static inline void RCM_GetVersionId(RCM_Type *base, rcm_version_id_t *versionId)

Gets the RCM version ID.

This function gets the RCM version ID including the major version number, the minor version number, and the feature specification number.

Parameters

- base – RCM peripheral base address.
- versionId – Pointer to the version ID structure.

static inline uint32_t RCM_GetResetSourceImplementedStatus(RCM_Type *base)

Gets the reset source implemented status.

This function gets the RCM parameter that indicates whether the corresponding reset source is implemented. Use source masks defined in the rcm_reset_source_t to get the desired source status.

This is an example.

```
uint32_t status;

To test whether the MCU is reset using Watchdog.
status = RCM_GetResetSourceImplementedStatus(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source implemented status bit map.

static inline uint32_t RCM_GetPreviousResetSources(RCM_Type *base)

Gets the reset source status which caused a previous reset.

This function gets the current reset source status. Use source masks defined in the rcm_reset_source_t to get the desired source status.

This is an example.

```
uint32_t resetStatus;

To get all reset source statuses.
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceAll;

To test whether the MCU is reset using Watchdog.
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceWdog;

To test multiple reset sources.
resetStatus = RCM_GetPreviousResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

static inline uint32_t RCM_GetStickyResetSources(RCM_Type *base)

Gets the sticky reset source status.

This function gets the current reset source status that has not been cleared by software for a specific source.

This is an example.

```
uint32_t resetStatus;

To get all reset source statuses.
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceAll;

To test whether the MCU is reset using Watchdog.
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceWdog;

To test multiple reset sources.
resetStatus = RCM_GetStickyResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

`static inline void RCM_ClearStickyResetSources(RCM_Type *base, uint32_t sourceMasks)`

Clears the sticky reset source status.

This function clears the sticky system reset flags indicated by source masks.

This is an example.

```
Clears multiple reset sources.
RCM_ClearStickyResetSources(kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.
- sourceMasks – reset source status bit map

`void RCM_ConfigureResetPinFilter(RCM_Type *base, const rcm_reset_pin_filter_config_t *config)`

Configures the reset pin filter.

This function sets the reset pin filter including the filter source, filter width, and so on.

Parameters

- base – RCM peripheral base address.
- config – Pointer to the configuration structure.

`static inline bool RCM_GetEasyPortModePinStatus(RCM_Type *base)`

Gets the EZP_MS_B pin assert status.

This function gets the easy port mode status (EZP_MS_B) pin assert status.

Parameters

- base – RCM peripheral base address.

Returns

status true - asserted, false - reasserted

`static inline rcm_boot_rom_config_t RCM_GetBootRomSource(RCM_Type *base)`

Gets the ROM boot source.

This function gets the ROM boot source during the last chip reset.

Parameters

- base – RCM peripheral base address.

Returns

The ROM boot source.

```
static inline void RCM_ClearBootRomSource(RCM_Type *base)
```

Clears the ROM boot source flag.

This function clears the ROM boot source flag.

Parameters

- base – Register base address of RCM

```
void RCM_SetForceBootRomSource(RCM_Type *base, rcm_boot_rom_config_t config)
```

Forces the boot from ROM.

This function forces booting from ROM during all subsequent system resets.

Parameters

- base – RCM peripheral base address.
- config – Boot configuration.

```
static inline void RCM_SetSystemResetInterruptConfig(RCM_Type *base, uint32_t intMask,  
                                                    rcm_reset_delay_t delay)
```

Sets the system reset interrupt configuration.

For a graceful shut down, the RCM supports delaying the assertion of the system reset for a period of time when the reset interrupt is generated. This function can be used to enable the interrupt and the delay period. The interrupts are passed in as bit mask. See `rcm_int_t` for details. For example, to delay a reset for 512 LPO cycles after the WDOG timeout or loss-of-clock occurs, configure as follows: `RCM_SetSystemResetInterruptConfig(kRCM_IntWatchDog | kRCM_IntLossOfClk, kRCM_ResetDelay512Lpo);`

Parameters

- base – RCM peripheral base address.
- intMask – Bit mask of the system reset interrupts to enable. See `rcm_interrupt_enable_t` for details.
- delay – Bit mask of the system reset interrupts to enable.

FSL_RCM_DRIVER_VERSION

RCM driver version 2.0.4.

```
enum __rcm_reset_source
```

System Reset Source Name definitions.

Values:

enumerator `kRCM_SourceWakeup`

Low-leakage wakeup reset

enumerator `kRCM_SourceLvd`

Low-voltage detect reset

enumerator `kRCM_SourceLoc`

Loss of clock reset

enumerator `kRCM_SourceLol`

Loss of lock reset

enumerator kRCM_SourceWdog

Watchdog reset

enumerator kRCM_SourcePin

External pin reset

enumerator kRCM_SourcePor

Power on reset

enumerator kRCM_SourceJtag

JTAG generated reset

enumerator kRCM_SourceLockup

Core lock up reset

enumerator kRCM_SourceSw

Software reset

enumerator kRCM_SourceMdmap

MDM-AP system reset

enumerator kRCM_SourceEzpt

EzPort reset

enumerator kRCM_SourceSackerr

Parameter could get all reset flags

enumerator kRCM_SourceAll

enum _rcm_run_wait_filter_mode

Reset pin filter select in Run and Wait modes.

Values:

enumerator kRCM_FilterDisable

All filtering disabled

enumerator kRCM_FilterBusClock

Bus clock filter enabled

enumerator kRCM_FilterLpoClock

LPO clock filter enabled

enum _rcm_boot_rom_config

Boot from ROM configuration.

Values:

enumerator kRCM_BootFlash

Boot from flash

enumerator kRCM_BootRomCfg0

Boot from boot ROM due to BOOTCFG0

enumerator kRCM_BootRomFopt

Boot from boot ROM due to FOPT[7]

enumerator kRCM_BootRomBoth

Boot from boot ROM due to both BOOTCFG0 and FOPT[7]

enum _rcm_reset_delay

Maximum delay time from interrupt asserts to system reset.

Values:

enumerator kRCM_ResetDelay8Lpo
Delay 8 LPO cycles.

enumerator kRCM_ResetDelay32Lpo
Delay 32 LPO cycles.

enumerator kRCM_ResetDelay128Lpo
Delay 128 LPO cycles.

enumerator kRCM_ResetDelay512Lpo
Delay 512 LPO cycles.

enum _rcm_interrupt_enable
System reset interrupt enable bit definitions.

Values:

enumerator kRCM_IntNone
No interrupt enabled.

enumerator kRCM_IntLossOfClk
Loss of clock interrupt.

enumerator kRCM_IntLossOfLock
Loss of lock interrupt.

enumerator kRCM_IntWatchDog
Watch dog interrupt.

enumerator kRCM_IntExternalPin
External pin interrupt.

enumerator kRCM_IntGlobal
Global interrupts.

enumerator kRCM_IntCoreLockup
Core lock up interrupt

enumerator kRCM_IntSoftware
software interrupt

enumerator kRCM_IntStopModeAckErr
Stop mode ACK error interrupt.

enumerator kRCM_IntCore1
Core 1 interrupt.

enumerator kRCM_IntAll
Enable all interrupts.

typedef enum _rcm_reset_source rcm_reset_source_t
System Reset Source Name definitions.

typedef enum _rcm_run_wait_filter_mode rcm_run_wait_filter_mode_t
Reset pin filter select in Run and Wait modes.

typedef enum _rcm_boot_rom_config rcm_boot_rom_config_t
Boot from ROM configuration.

typedef enum _rcm_reset_delay rcm_reset_delay_t
Maximum delay time from interrupt asserts to system reset.

```
typedef enum _rcm_interrupt_enable rcm_interrupt_enable_t
```

System reset interrupt enable bit definitions.

```
typedef struct _rcm_version_id rcm_version_id_t
```

IP version ID definition.

```
typedef struct _rcm_reset_pin_filter_config rcm_reset_pin_filter_config_t
```

Reset pin filter configuration.

```
struct _rcm_version_id
```

#include <fsl_rcm.h> IP version ID definition.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor version number.

uint8_t major

Major version number.

```
struct _rcm_reset_pin_filter_config
```

#include <fsl_rcm.h> Reset pin filter configuration.

Public Members

bool enableFilterInStop

Reset pin filter select in stop mode.

rcm_run_wait_filter_mode_t filterInRunWait

Reset pin filter in run/wait mode.

uint8_t busClockFilterCount

Reset pin bus clock filter width.

2.38 RTC: Real Time Clock

```
void RTC_Init(RTC_Type *base, const rtc_config_t *config)
```

Ungates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- base – RTC peripheral base address
- config – Pointer to the user's RTC configuration structure.

static inline void RTC_Deinit(RTC_Type *base)

Stops the timer and gate the RTC clock.

Parameters

- base – RTC peripheral base address

void RTC_GetDefaultConfig(*rtc_config_t* *config)

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- config – Pointer to the user's RTC configuration structure.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC
kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const *rtc_datetime_t* *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- base – RTC peripheral base address
- alarmTime – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm
kStatus_InvalidArgument: Error because the alarm datetime format is incorrect
kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, rtc_datetime_t *datetime)

Returns the RTC alarm time.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

void RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration rtc_interrupt_enable_t

uint32_t RTC_GetStatusFlags(RTC_Type *base)

Gets the RTC status flags.

Parameters

- base – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration rtc_status_flags_t

void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)

Clears the RTC status flags.

Parameters

- base – RTC peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration rtc_status_flags_t

static inline void RTC_EnableOscillatorClock(RTC_Type *base, bool enable)

Enable/Disable RTC 32kHz Oscillator clock.

Note: After setting this bit, wait the oscillator startup time before enabling the time counter to allow the 32.768 kHz clock time to stabilize.

Parameters

- base – RTC peripheral base address
- enable – Enable/Disable RTC 32.768 kHz clock

static inline void RTC_SetClockSource(RTC_Type *base)

Set RTC clock source.

Deprecated:

Do not use this function. It has been superceded by RTC_EnableOscillatorClock

Note: After setting this bit, wait the oscillator startup time before enabling the time counter to allow the 32.768 kHz clock time to stabilize.

Parameters

- base – RTC peripheral base address

static inline void RTC_EnableLPOClock(RTC_Type *base, bool enable)

Enable/Disable RTC 1kHz LPO clock.

Note: After setting this bit, RTC prescaler increments using the LPO 1kHz clock and not the RTC 32kHz crystal clock.

Parameters

- base – RTC peripheral base address
- enable – Enable/Disable RTC 1kHz LPO clock

static inline void RTC_StartTimer(RTC_Type *base)

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided SR[TOF] or SR[TIF] are not set.

Parameters

- base – RTC peripheral base address

static inline void RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- base – RTC peripheral base address

void RTC_GetMonotonicCounter(RTC_Type *base, uint64_t *counter)

Reads the values of the Monotonic Counter High and Monotonic Counter Low and returns them as a single value.

Parameters

- base – RTC peripheral base address
- counter – Pointer to variable where the value is stored.

`void RTC_SetMonotonicCounter(RTC_Type *base, uint64_t counter)`

Writes values Monotonic Counter High and Monotonic Counter Low by decomposing the given single value. The Monotonic Overflow Flag in RTC_SR is cleared due to the API.

Parameters

- `base` – RTC peripheral base address
- `counter` – Counter value

`status_t RTC_IncrementMonotonicCounter(RTC_Type *base)`

Increments the Monotonic Counter by one.

Increments the Monotonic Counter (registers RTC_MCLR and RTC_MCHR accordingly) by setting the monotonic counter enable (MER[MCE]) and then writing to the RTC_MCLR register. A write to the monotonic counter low that causes it to overflow also increments the monotonic counter high.

Parameters

- `base` – RTC peripheral base address

Returns

`kStatus_Success`: success
`kStatus_Fail`: error occurred, either time invalid or monotonic overflow flag was found

`FSL_RTC_DRIVER_VERSION`

Version 2.3.3

`enum _rtc_interrupt_enable`

List of RTC interrupts.

Values:

enumerator `kRTC_TimeInvalidInterruptEnable`

Time invalid interrupt.

enumerator `kRTC_TimeOverflowInterruptEnable`

Time overflow interrupt.

enumerator `kRTC_AlarmInterruptEnable`

Alarm interrupt.

enumerator `kRTC_MonotonicOverflowInterruptEnable`

Monotonic Overflow Interrupt Enable

enumerator `kRTC_SecondsInterruptEnable`

Seconds interrupt.

enumerator `kRTC_TestModeInterruptEnable`

enumerator `kRTC_FlashSecurityInterruptEnable`

enumerator `kRTC_TamperPinInterruptEnable`

enumerator `kRTC_SecurityModuleInterruptEnable`

enumerator `kRTC_LossOfClockInterruptEnable`

`enum _rtc_status_flags`

List of RTC flags.

Values:

enumerator `kRTC_TimeInvalidFlag`

Time invalid flag

enumerator kRTC_TimeOverflowFlag

Time overflow flag

enumerator kRTC_AlarmFlag

Alarm flag

enumerator kRTC_MonotonicOverflowFlag

Monotonic Overflow Flag

enumerator kRTC_TamperInterruptDetectFlag

Tamper interrupt detect flag

enumerator kRTC_TestModeFlag

enumerator kRTC_FlashSecurityFlag

enumerator kRTC_TamperPinFlag

enumerator kRTC_SecurityTamperFlag

enumerator kRTC_LossOfClockTamperFlag

enum _rtc_osc_cap_load

List of RTC Oscillator capacitor load settings.

Values:

enumerator kRTC_Capacitor_2p

2 pF capacitor load

enumerator kRTC_Capacitor_4p

4 pF capacitor load

enumerator kRTC_Capacitor_8p

8 pF capacitor load

enumerator kRTC_Capacitor_16p

16 pF capacitor load

typedef enum _rtc_interrupt_enable rtc_interrupt_enable_t

List of RTC interrupts.

typedef enum _rtc_status_flags rtc_status_flags_t

List of RTC flags.

typedef enum _rtc_osc_cap_load rtc_osc_cap_load_t

List of RTC Oscillator capacitor load settings.

typedef struct _rtc_datetime rtc_datetime_t

Structure is used to hold the date and time.

typedef struct _rtc_pin_config rtc_pin_config_t

RTC pin config structure.

typedef struct _rtc_config rtc_config_t

RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

```
static inline uint32_t RTC_GetTamperTimeSeconds(RTC_Type *base)
```

Get the RTC tamper time seconds.

Parameters

- base – RTC peripheral base address

```
static inline void RTC_SetOscCapLoad(RTC_Type *base, uint32_t capLoad)
```

This function sets the specified capacitor configuration for the RTC oscillator.

Parameters

- base – RTC peripheral base address
- capLoad – Oscillator loads to enable. This is a logical OR of members of the enumeration `rtc_osc_cap_load_t`

```
static inline void RTC_Reset(RTC_Type *base)
```

Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the RTC_WAR and RTC_RAR registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- base – RTC peripheral base address

```
static inline void RTC_EnableWakeUpPin(RTC_Type *base, bool enable)
```

Enables or disables the RTC Wakeup Pin Operation.

This function enable or disable RTC Wakeup Pin. The wakeup pin is optional and not available on all devices.

Parameters

- base – RTC_Type base pointer.
- enable – true to enable, false to disable.

```
struct _rtc_datetime
```

#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

`uint16_t` year

Range from 1970 to 2099.

`uint8_t` month

Range from 1 to 12.

`uint8_t` day

Range from 1 to 31 (depending on month).

`uint8_t` hour

Range from 0 to 23.

`uint8_t` minute

Range from 0 to 59.

`uint8_t` second

Range from 0 to 59.

```
struct _rtc_pin_config
```

#include <fsl_rtc.h> RTC pin config structure.

Public Members

bool inputLogic

true: Tamper pin input data is logic one. false: Tamper pin input data is logic zero.

bool pinActiveLow

true: Tamper pin is active low. false: Tamper pin is active high.

bool filterEnable

true: Input filter is enabled on the tamper pin. false: Input filter is disabled on the tamper pin.

bool pullSelectNegate

true: Tamper pin pull resistor direction will negate the tamper pin. false: Tamper pin pull resistor direction will assert the tamper pin.

bool pullEnable

true: Pull resistor is enabled on tamper pin. false: Pull resistor is disabled on tamper pin.

struct _rtc_config

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool wakeupSelect

true: Wakeup pin outputs the 32 KHz clock; false: Wakeup pin used to wakeup the chip

bool updateMode

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool supervisorAccess

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t compensationInterval

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t compensationTime

Compensation time that is written to the TCR field in RTC TCR Register

2.39 SIM: System Integration Module Driver

FSL_SIM_DRIVER_VERSION

Driver version.

typedef struct _sim_uid sim_uid_t

Unique ID.

```
void SIM_GetUniqueId(sim_uid_t *uid)
```

Gets the unique identification register value.

Parameters

- uid – Pointer to the structure to save the UID value.

```
struct __sim_uid
```

#include <fsl_sim.h> Unique ID.

Public Members

```
uint32_t MH
```

UIDMH.

```
uint32_t ML
```

UIDML.

```
uint32_t L
```

UIDL.

2.40 SMC: System Mode Controller Driver

```
static inline void SMC_GetVersionId(SMC_Type *base, smc_version_id_t *versionId)
```

Gets the SMC version ID.

This function gets the SMC version ID, including major version number, minor version number, and feature specification number.

Parameters

- base – SMC peripheral base address.
- versionId – Pointer to the version ID structure.

```
void SMC_GetParam(SMC_Type *base, smc_param_t *param)
```

Gets the SMC parameter.

This function gets the SMC parameter including the enabled power modes.

Parameters

- base – SMC peripheral base address.
- param – Pointer to the SMC param structure.

```
static inline void SMC_SetPowerModeProtection(SMC_Type *base, uint8_t allowedModes)
```

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes in the specified chip family. The available power modes are defined in the `smc_power_mode_protection_t`. This should be done at an early system level initialization stage. See the reference manual for details. This register can only write once after the power reset.

The allowed modes are passed as bit map. For example, to allow LLS and VLLS, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeVlls | kSMC_AllowPowerModeVlps)`. To allow all modes, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeAll)`.

Parameters

- base – SMC peripheral base address.

- `allowedModes` – Bitmap of the allowed power modes.

`static inline smc_power_state_t SMC_GetPowerModeState(SMC_Type *base)`

Gets the current power mode status.

This function returns the current power mode status. After the application switches the power mode, it should always check the status to check whether it runs into the specified mode or not. The application should check this mode before switching to a different mode. The system requires that only certain modes can switch to other specific modes. See the reference manual for details and the `smc_power_state_t` for information about the power status.

Parameters

- `base` – SMC peripheral base address.

Returns

Current power mode status.

`void SMC_PreEnterStopModes(void)`

Prepares to enter stop modes.

This function should be called before entering STOP/VLPS/LLS/VLLS modes.

`void SMC_PostExitStopModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from STOP/VLPS/LLS/VLLS modes. It is used with `SMC_PreEnterStopModes`.

`void SMC_PreEnterWaitModes(void)`

Prepares to enter wait modes.

This function should be called before entering WAIT/VLPW modes.

`void SMC_PostExitWaitModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from WAIT/VLPW modes. It is used with `SMC_PreEnterWaitModes`.

`status_t SMC_SetPowerModeRun(SMC_Type *base)`

Configures the system to RUN power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeHsrn(SMC_Type *base)`

Configures the system to HSRUN power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeWait(SMC_Type *base)`

Configures the system to WAIT power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeStop(SMC_Type *base, *smc_partial_stop_option_t* option)

Configures the system to Stop power mode.

Parameters

- base – SMC peripheral base address.
- option – Partial Stop mode option.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpr(SMC_Type *base, bool wakeupMode)

Configures the system to VLPR power mode.

Parameters

- base – SMC peripheral base address.
- wakeupMode – Enter Normal Run mode if true, else stay in VLPR mode.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpw(SMC_Type *base)

Configures the system to VLPW power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlps(SMC_Type *base)

Configures the system to VLPS power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeLls(SMC_Type *base, const *smc_power_mode_lls_config_t* *config)

Configures the system to LLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The LLS power mode configuration structure

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlls(SMC_Type *base, const *smc_power_mode_vlls_config_t* *config)

Configures the system to VLLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The VLLS power mode configuration structure.

Returns

SMC configuration error code.

FSL_SMC_DRIVER_VERSION

SMC driver version.

enum _smc_power_mode_protection

Power Modes Protection.

Values:

enumerator kSMC_AllowPowerModeVlls
Allow Very-low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeLls
Allow Low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeVlp
Allow Very-Low-power Mode.

enumerator kSMC_AllowPowerModeHsrn
Allow High-speed Run mode.

enumerator kSMC_AllowPowerModeAll
Allow all power mode.

enum _smc_power_state

Power Modes in PMSTAT.

Values:

enumerator kSMC_PowerStateRun
0000_0001 - Current power mode is RUN

enumerator kSMC_PowerStateStop
0000_0010 - Current power mode is STOP

enumerator kSMC_PowerStateVlpr
0000_0100 - Current power mode is VLPR

enumerator kSMC_PowerStateVlpw
0000_1000 - Current power mode is VLPW

enumerator kSMC_PowerStateVlps
0001_0000 - Current power mode is VLPS

enumerator kSMC_PowerStateLls
0010_0000 - Current power mode is LLS

enumerator kSMC_PowerStateVlls
0100_0000 - Current power mode is VLLS

enumerator kSMC_PowerStateHsrn
1000_0000 - Current power mode is HSRUN

enum _smc_run_mode

Run mode definition.

Values:

enumerator kSMC_RunNormal
Normal RUN mode.

enumerator kSMC_RunVlpr
Very-low-power RUN mode.

enumerator kSMC_Hsrun
High-speed Run mode (HSRUN).

enum __smc_stop_mode
Stop mode definition.

Values:

enumerator kSMC_StopNormal
Normal STOP mode.

enumerator kSMC_StopVlps
Very-low-power STOP mode.

enumerator kSMC_StopLls
Low-leakage Stop mode.

enumerator kSMC_StopVlls
Very-low-leakage Stop mode.

enum __smc_stop_submode
VLLS/LLS stop sub mode definition.

Values:

enumerator kSMC_StopSub0
Stop submode 0, for VLLS0/LLS0.

enumerator kSMC_StopSub1
Stop submode 1, for VLLS1/LLS1.

enumerator kSMC_StopSub2
Stop submode 2, for VLLS2/LLS2.

enumerator kSMC_StopSub3
Stop submode 3, for VLLS3/LLS3.

enum __smc_partial_stop_mode
Partial STOP option.

Values:

enumerator kSMC_PartialStop
STOP - Normal Stop mode

enumerator kSMC_PartialStop1
Partial Stop with both system and bus clocks disabled

enumerator kSMC_PartialStop2
Partial Stop with system clock disabled and bus clock enabled

__smc_status, SMC configuration status.

Values:

enumerator kStatus_SMC_StopAbort
Entering Stop mode is abort

typedef enum __smc_power_mode_protection smc_power_mode_protection_t
Power Modes Protection.

typedef enum __smc_power_state smc_power_state_t
Power Modes in PMSTAT.

```
typedef enum _smc_run_mode smc_run_mode_t
    Run mode definition.

typedef enum _smc_stop_mode smc_stop_mode_t
    Stop mode definition.

typedef enum _smc_stop_submode smc_stop_submode_t
    VLLS/LLS stop sub mode definition.

typedef enum _smc_partial_stop_mode smc_partial_stop_option_t
    Partial STOP option.

typedef struct _smc_version_id smc_version_id_t
    IP version ID definition.

typedef struct _smc_param smc_param_t
    IP parameter definition.

typedef struct _smc_power_mode_lls_config smc_power_mode_lls_config_t
    SMC Low-Leakage Stop power mode configuration.

typedef struct _smc_power_mode_vlls_config smc_power_mode_vlls_config_t
    SMC Very Low-Leakage Stop power mode configuration.

struct _smc_version_id
    #include <fsl_smc.h> IP version ID definition.
```

Public Members

```
uint16_t feature
    Feature Specification Number.

uint8_t minor
    Minor version number.

uint8_t major
    Major version number.

struct _smc_param
    #include <fsl_smc.h> IP parameter definition.
```

Public Members

```
bool hsruntimeEnable
    HSRUN mode enable.

bool llsEnable
    LLS mode enable.

bool lls2Enable
    LLS2 mode enable.

bool vlls0Enable
    VLLS0 mode enable.

struct _smc_power_mode_lls_config
    #include <fsl_smc.h> SMC Low-Leakage Stop power mode configuration.
```

Public Members

smc_stop_submode_t subMode
Low-leakage Stop sub-mode

bool enableLpoClock
Enable LPO clock in LLS mode

struct *_smc_power_mode_vlls_config*
#include <fsl_smc.h> SMC Very Low-Leakage Stop power mode configuration.

Public Members

smc_stop_submode_t subMode
Very Low-leakage Stop sub-mode

bool enablePorDetectInVlls0
Enable Power on reset detect in VLLS mode

bool enableRam2InVlls2
Enable RAM2 power in VLLS2

bool enableLpoClock
Enable LPO clock in VLLS mode

2.41 TRGMUX: Trigger Mux Driver

static inline void TRGMUX_LockRegister(TRGMUX_Type *base, uint32_t index)

Sets the flag of the register which is used to mark writeable.

The function sets the flag of the register which is used to mark writeable. Example:

```
TRGMUX_LockRegister(TRGMUX0, kTRGMUX_Trgmux0Dmamux0);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum *trgmux_device_t* defined in <SOC>.h.

status_t TRGMUX_SetTriggerSource(TRGMUX_Type *base, uint32_t index,
trgmux_trigger_input_t input, uint32_t trigger_src)

Configures the trigger source of the appointed peripheral.

The function configures the trigger source of the appointed peripheral. Example:

```
TRGMUX_SetTriggerSource(TRGMUX0, kTRGMUX_Trgmux0Dmamux0, kTRGMUX_TriggerInput0,  
↪ kTRGMUX_SourcePortPin);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum *trgmux_device_t* defined in <SOC>.h.
- input – The MUX select for peripheral trigger input
- trigger_src – The trigger inputs for various peripherals. See the enum *trgmux_source_t* defined in <SOC>.h.

Return values

- `kStatus_Success` – Configured successfully.
- `kStatus_TRGMUX_Locked` – Configuration failed because the register is locked.

`FSL_TRGMUX_DRIVER_VERSION`

TRGMUX driver version.

TRGMUX configure status.

Values:

enumerator `kStatus_TRGMUX_Locked`

Configure failed for register is locked

enum `_trgmux_trigger_input`

Defines the MUX select for peripheral trigger input.

Values:

enumerator `kTRGMUX_TriggerInput0`

The MUX select for peripheral trigger input 0

enumerator `kTRGMUX_TriggerInput1`

The MUX select for peripheral trigger input 1

enumerator `kTRGMUX_TriggerInput2`

The MUX select for peripheral trigger input 2

enumerator `kTRGMUX_TriggerInput3`

The MUX select for peripheral trigger input 3

typedef enum `_trgmux_trigger_input` `trgmux_trigger_input_t`

Defines the MUX select for peripheral trigger input.

2.42 Tsi_v5_driver

enum `_tsi_main_clock_selection`

TSI main clock selection.

These constants set the tsi main clock.

Values:

enumerator `kTSI_MainClockSlection_0`

Set TSI main clock frequency to 20.72MHz

enumerator `kTSI_MainClockSlection_1`

Set TSI main clock frequency to 16.65MHz

enumerator `kTSI_MainClockSlection_2`

Set TSI main clock frequency to 13.87MHz

enumerator `kTSI_MainClockSlection_3`

Set TSI main clock frequency to 11.91MHz

enum `_tsi_sensing_mode_selection`

TSI sensing mode selection.

These constants set the tsi sensing mode.

Values:

enumerator `kTSI_SensingModeSlection_Self`

Set TSI sensing mode to self-cap mode

enumerator `kTSI_SensingModeSlection_Mutual`

Set TSI sensing mode to mutual-cap mode

enum `_tsi_dvolt_option`

TSI DVOLT settings.

These bits indicate the comparator vp, vm and dvolt voltage.

Values:

enumerator `kTSI_DvoltOption_0`

DVOLT value option 0, the value may differ on different platforms

enumerator `kTSI_DvoltOption_1`

DVOLT value option 1, the value may differ on different platforms

enumerator `kTSI_DvoltOption_2`

DVOLT value option 2, the value may differ on different platforms

enumerator `kTSI_DvoltOption_3`

DVOLT value option 3, the value may differ on different platforms

enum `_tsi_sensitivity_xdn_option`

TSI sensitivity ajustment (XDN option).

These constants define the tsi sensitivity ajustment in self-cap mode, when `TSI_MODE[S_SEN] = 1`.

Values:

enumerator `kTSI_SensitivityXdnOption_0`

Adjust sensitivity in self-cap mode, 1/16

enumerator `kTSI_SensitivityXdnOption_1`

Adjust sensitivity in self-cap mode, 1/8

enumerator `kTSI_SensitivityXdnOption_2`

Adjust sensitivity in self-cap mode, 1/4

enumerator `kTSI_SensitivityXdnOption_3`

Adjust sensitivity in self-cap mode, 1/2

enum `_tsi_shield`

TSI Shield setting (`S_W_SHIELD` option).

These constants define the shield pin used for HW shielding functionality. One or more shield pin can be selected. The involved bitfield is not fix can change from device to device (KE16Z7 and KE17Z7 support 3 shield pins, other KE serials only support 1 shield pin).

Values:

enumerator `kTSI_shieldAllOff`

No pin used

enumerator kTSI_shield0On

Shield 0 pin used

enumerator kTSI_shield1On

Shield 1 pin used

enumerator kTSI_shield1and0On

Shield 0,1 pins used

enumerator kTSI_shield2On

Shield 2 pin used

enumerator kTSI_shield2and0On

Shield 2,0 pins used

enumerator kTSI_shield2and1On

Shield 2,1 pins used

enumerator kTSI_shieldAllOn

Shield 2,1,0 pins used

enum _tsi_sensitivity_ctrim_option

TSI sensitivity adjustment (CTRIM option).

These constants define the tsi sensitivity adjustment in self-cap mode, when TSI_MODE[S_SEN] = 1.

Values:

enumerator kTSI_SensitivityCtrimOption_0

Adjust sensitivity in self-cap mode, 2.5p

enumerator kTSI_SensitivityCtrimOption_1

Adjust sensitivity in self-cap mode, 5.0p

enumerator kTSI_SensitivityCtrimOption_2

Adjust sensitivity in self-cap mode, 7.5p

enumerator kTSI_SensitivityCtrimOption_3

Adjust sensitivity in self-cap mode, 10.0p

enumerator kTSI_SensitivityCtrimOption_4

Adjust sensitivity in self-cap mode, 12.5p

enumerator kTSI_SensitivityCtrimOption_5

Adjust sensitivity in self-cap mode, 15.0p

enumerator kTSI_SensitivityCtrimOption_6

Adjust sensitivity in self-cap mode, 17.5p

enumerator kTSI_SensitivityCtrimOption_7

Adjust sensitivity in self-cap mode, 20.0p

enum _tsi_current_multiple_input

TSI current adjustment (Input current multiple).

These constants set the tsi input current multiple in self-cap mode.

Values:

enumerator kTSI_CurrentMultipleInputValue_0

Adjust input current multiple in self-cap mode, 1/8

enumerator kTSI_CurrentMultipleInputValue_1

Adjust input current multiple in self-cap mode, 1/4

enum _tsi_current_multiple_charge

TSI current adjustment (Charge/Discharge current multiple).

These constants set the tsi charge/discharge current multiple in self-cap mode.

Values:

enumerator kTSI_CurrentMultipleChargeValue_0

Adjust charge/discharge current multiple in self-cap mode, 1/16

enumerator kTSI_CurrentMultipleChargeValue_1

Adjust charge/discharge current multiple in self-cap mode, 1/8

enumerator kTSI_CurrentMultipleChargeValue_2

Adjust charge/discharge current multiple in self-cap mode, 1/4

enumerator kTSI_CurrentMultipleChargeValue_3

Adjust charge/discharge current multiple in self-cap mode, 1/2

enumerator kTSI_CurrentMultipleChargeValue_4

Adjust charge/discharge current multiple in self-cap mode, 1/1

enumerator kTSI_CurrentMultipleChargeValue_5

Adjust charge/discharge current multiple in self-cap mode, 2/1

enumerator kTSI_CurrentMultipleChargeValue_6

Adjust charge/discharge current multiple in self-cap mode, 4/1

enumerator kTSI_CurrentMultipleChargeValue_7

Adjust charge/discharge current multiple in self-cap mode, 8/1

enum _tsi_mutual_pre_current

TSI current used in vref generator.

These constants Choose the current used in vref generator.

Values:

enumerator kTSI_MutualPreCurrent_1uA

Vref generator current is 1uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_2uA

Vref generator current is 2uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_3uA

Vref generator current is 3uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_4uA

Vref generator current is 4uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_5uA

Vref generator current is 5uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_6uA

Vref generator current is 6uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_7uA

Vref generator current is 7uA, used in mutual-cap mode

enumerator kTSI_MutualPreCurrent_8uA

Vref generator current is 8uA, used in mutual-cap mode

enum _tsi_mutual_pre_resistor

TSI resistor used in pre-charge.

These constants Choose the resistor used in pre-charge.

Values:

enumerator kTSI_MutualPreResistor_1k

Vref generator resistor is 1k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_2k

Vref generator resistor is 2k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_3k

Vref generator resistor is 3k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_4k

Vref generator resistor is 4k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_5k

Vref generator resistor is 5k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_6k

Vref generator resistor is 6k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_7k

Vref generator resistor is 7k, used in mutual-cap mode

enumerator kTSI_MutualPreResistor_8k

Vref generator resistor is 8k, used in mutual-cap mode

enum _tsi_mutual_sense_resistor

TSI resistor used in I-sense generator.

These constants Choose the resistor used in I-sense generator.

Values:

enumerator kTSI_MutualSenseResistor_2k5

I-sense resistor is 2.5k , used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_5k

I-sense resistor is 5.0k , used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_7k5

I-sense resistor is 7.5k , used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_10k

I-sense resistor is 10.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_12k5

I-sense resistor is 12.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_15k

I-sense resistor is 15.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_17k5

I-sense resistor is 17.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_20k

I-sense resistor is 20.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_22k5

I-sense resistor is 22.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_25k

I-sense resistor is 25.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_27k5

I-sense resistor is 27.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_30k

I-sense resistor is 30.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_32k5

I-sense resistor is 32.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_35k

I-sense resistor is 35.0k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_37k5

I-sense resistor is 37.5k, used in mutual-cap mode

enumerator kTSI_MutualSenseResistor_40k

I-sense resistor is 40.0k, used in mutual-cap mode

enum _tsi_mutual_tx_channel

TSI TX channel selection in mutual-cap mode.

These constants Choose the TX channel used in mutual-cap mode.

Values:

enumerator kTSI_MutualTxChannel_0

Select channel 0 as tx0, used in mutual-cap mode

enumerator kTSI_MutualTxChannel_1

Select channel 1 as tx1, used in mutual-cap mode

enumerator kTSI_MutualTxChannel_2

Select channel 2 as tx2, used in mutual-cap mode

enumerator kTSI_MutualTxChannel_3

Select channel 3 as tx3, used in mutual-cap mode

enumerator kTSI_MutualTxChannel_4

Select channel 4 as tx4, used in mutual-cap mode

enumerator kTSI_MutualTxChannel_5

Select channel 5 as tx5, used in mutual-cap mode

enum _tsi_mutual_rx_channel

TSI RX channel selection in mutual-cap mode.

These constants Choose the RX channel used in mutual-cap mode.

Values:

enumerator kTSI_MutualRxChannel_6

Select channel 6 as rx6, used in mutual-cap mode

enumerator kTSI_MutualRxChannel_7

Select channel 7 as rx7, used in mutual-cap mode

enumerator kTSI_MutualRxChannel_8

Select channel 8 as rx8, used in mutual-cap mode

enumerator kTSI_MutualRxChannel_9

Select channel 9 as rx9, used in mutual-cap mode

enumerator kTSI_MutualRxChannel_10

Select channel 10 as rx10, used in mutual-cap mode

enumerator kTSI_MutualRxChannel_11

Select channel 11 as rx11, used in mutual-cap mode

enum _tsi_mutual_sense_boost_current

TSI sensitivity boost current settings.

These constants set the sensitivity boost current.

Values:

enumerator kTSI_MutualSenseBoostCurrent_0uA

Sensitivity boost current is 0uA , used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_2uA

Sensitivity boost current is 2uA , used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_4uA

Sensitivity boost current is 4uA , used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_6uA

Sensitivity boost current is 6uA , used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_8uA

Sensitivity boost current is 8uA , used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_10uA

Sensitivity boost current is 10uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_12uA

Sensitivity boost current is 12uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_14uA

Sensitivity boost current is 14uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_16uA

Sensitivity boost current is 16uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_18uA

Sensitivity boost current is 18uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_20uA

Sensitivity boost current is 20uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_22uA

Sensitivity boost current is 22uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_24uA

Sensitivity boost current is 24uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_26uA

Sensitivity boost current is 26uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_28uA

Sensitivity boost current is 28uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_30uA

Sensitivity boost current is 30uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_32uA

Sensitivity boost current is 32uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_34uA

Sensitivity boost current is 34uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_36uA

Sensitivity boost current is 36uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_38uA

Sensitivity boost current is 38uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_40uA

Sensitivity boost current is 40uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_42uA

Sensitivity boost current is 42uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_44uA

Sensitivity boost current is 44uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_46uA

Sensitivity boost current is 46uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_48uA

Sensitivity boost current is 48uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_50uA

Sensitivity boost current is 50uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_52uA

Sensitivity boost current is 52uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_54uA

Sensitivity boost current is 54uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_56uA

Sensitivity boost current is 56uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_58uA

Sensitivity boost current is 58uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_60uA

Sensitivity boost current is 60uA, used in mutual-cap mode

enumerator kTSI_MutualSenseBoostCurrent_62uA

Sensitivity boost current is 62uA, used in mutual-cap mode

enum _tsi_mutual_tx_drive_mode

TSI TX drive mode control.

These constants Choose the TX drive mode control setting.

Values:

enumerator kTSI_MutualTxDriveModeOption_0

TX drive mode is -5v ~ +5v, used in mutual-cap mode

enumerator kTSI_MutualTxDriveModeOption_1

TX drive mode is 0v ~ +5v, used in mutual-cap mode

enum _tsi_mutual_pmos_current_left

TSI Pmos current mirror selection on the left side.

These constants set the Pmos current mirror on the left side used in mutual-cap mode.

Values:

enumerator kTSI_MutualPmosCurrentMirrorLeft_4

Set Pmos current mirror left value as 4, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_8

Set Pmos current mirror left value as 8, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_12

Set Pmos current mirror left value as 12, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_16

Set Pmos current mirror left value as 16, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_20

Set Pmos current mirror left value as 20, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_24

Set Pmos current mirror left value as 24, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_28

Set Pmos current mirror left value as 28, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorLeft_32

Set Pmos current mirror left value as 32, used in mutual-cap mode

enum _tsi_mutual_pmos_current_right

TSI Pmos current mirror selection on the right side.

These constants set the Pmos current mirror on the right side used in mutual-cap mode.

Values:

enumerator kTSI_MutualPmosCurrentMirrorRight_1

Set Pmos current mirror right value as 1, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorRight_2

Set Pmos current mirror right value as 2, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorRight_3

Set Pmos current mirror right value as 3, used in mutual-cap mode

enumerator kTSI_MutualPmosCurrentMirrorRight_4

Set Pmos current mirror right value as 4, used in mutual-cap mode

enum _tsi_mutual_nmos_current

TSI Nmos current mirror selection.

These constants set the Nmos current mirror used in mutual-cap mode.

Values:

enumerator kTSI_MutualNmosCurrentMirror_1

Set Nmos current mirror value as 1, used in mutual-cap mode

enumerator kTSI_MutualNmosCurrentMirror_2

Set Nmos current mirror value as 2, used in mutual-cap mode

enumerator kTSI_MutualNmosCurrentMirror_3

Set Nmos current mirror value as 3, used in mutual-cap mode

enumerator kTSI_MutualNmosCurrentMirror_4

Set Nmos current mirror value as 4, used in mutual-cap mode

enum `_tsi_sinc_cutoff_div`

TSI SINC cutoff divider setting.

These bits set the SINC cutoff divider.

Values:

enumerator `kTSI_SincCutoffDiv_1`

Set SINC cutoff divider as 1

enumerator `kTSI_SincCutoffDiv_2`

Set SINC cutoff divider as 2

enumerator `kTSI_SincCutoffDiv_4`

Set SINC cutoff divider as 4

enumerator `kTSI_SincCutoffDiv_8`

Set SINC cutoff divider as 8

enumerator `kTSI_SincCutoffDiv_16`

Set SINC cutoff divider as 16

enumerator `kTSI_SincCutoffDiv_32`

Set SINC cutoff divider as 32

enumerator `kTSI_SincCutoffDiv_64`

Set SINC cutoff divider as 64

enumerator `kTSI_SincCutoffDiv_128`

Set SINC cutoff divider as 128

enum `_tsi_sinc_filter_order`

TSI SINC filter order setting.

These bits set the SINC filter order.

Values:

enumerator `kTSI_SincFilterOrder_1`

Use 1 order SINC filter

enumerator `kTSI_SincFilterOrder_2`

Use 1 order SINC filter

enum `_tsi_sinc_decimation_value`

TSI SINC decimation value setting.

These bits set the SINC decimation value.

Values:

enumerator `kTSI_SincDecimationValue_1`

The `TSI_DATA[TSICH]` bits is the counter value of 1 trigger period.

enumerator `kTSI_SincDecimationValue_2`

The `TSI_DATA[TSICH]` bits is the counter value of 2 trigger period.

enumerator `kTSI_SincDecimationValue_3`

The `TSI_DATA[TSICH]` bits is the counter value of 3 trigger period.

enumerator `kTSI_SincDecimationValue_4`

The `TSI_DATA[TSICH]` bits is the counter value of 4 trigger period.

enumerator `kTSI_SincDecimationValue_5`

The `TSI_DATA[TSICH]` bits is the counter value of 5 trigger period.

enumerator kTSI_SincDecimationValue_6

The TSI_DATA[TSICH] bits is the counter value of 6 trigger period.

enumerator kTSI_SincDecimationValue_7

The TSI_DATA[TSICH] bits is the counter value of 7 trigger period.

enumerator kTSI_SincDecimationValue_8

The TSI_DATA[TSICH] bits is the counter value of 8 trigger period.

enumerator kTSI_SincDecimationValue_9

The TSI_DATA[TSICH] bits is the counter value of 9 trigger period.

enumerator kTSI_SincDecimationValue_10

The TSI_DATA[TSICH] bits is the counter value of 10 trigger period.

enumerator kTSI_SincDecimationValue_11

The TSI_DATA[TSICH] bits is the counter value of 11 trigger period.

enumerator kTSI_SincDecimationValue_12

The TSI_DATA[TSICH] bits is the counter value of 12 trigger period.

enumerator kTSI_SincDecimationValue_13

The TSI_DATA[TSICH] bits is the counter value of 13 trigger period.

enumerator kTSI_SincDecimationValue_14

The TSI_DATA[TSICH] bits is the counter value of 14 trigger period.

enumerator kTSI_SincDecimationValue_15

The TSI_DATA[TSICH] bits is the counter value of 15 trigger period.

enumerator kTSI_SincDecimationValue_16

The TSI_DATA[TSICH] bits is the counter value of 16 trigger period.

enumerator kTSI_SincDecimationValue_17

The TSI_DATA[TSICH] bits is the counter value of 17 trigger period.

enumerator kTSI_SincDecimationValue_18

The TSI_DATA[TSICH] bits is the counter value of 18 trigger period.

enumerator kTSI_SincDecimationValue_19

The TSI_DATA[TSICH] bits is the counter value of 19 trigger period.

enumerator kTSI_SincDecimationValue_20

The TSI_DATA[TSICH] bits is the counter value of 20 trigger period.

enumerator kTSI_SincDecimationValue_21

The TSI_DATA[TSICH] bits is the counter value of 21 trigger period.

enumerator kTSI_SincDecimationValue_22

The TSI_DATA[TSICH] bits is the counter value of 22 trigger period.

enumerator kTSI_SincDecimationValue_23

The TSI_DATA[TSICH] bits is the counter value of 23 trigger period.

enumerator kTSI_SincDecimationValue_24

The TSI_DATA[TSICH] bits is the counter value of 24 trigger period.

enumerator kTSI_SincDecimationValue_25

The TSI_DATA[TSICH] bits is the counter value of 25 trigger period.

enumerator kTSI_SincDecimationValue_26

The TSI_DATA[TSICH] bits is the counter value of 26 trigger period.

enumerator kTSI_SincDecimationValue_27

The TSI_DATA[TSICH] bits is the counter value of 27 trigger period.

enumerator kTSI_SincDecimationValue_28

The TSI_DATA[TSICH] bits is the counter value of 28 trigger period.

enumerator kTSI_SincDecimationValue_29

The TSI_DATA[TSICH] bits is the counter value of 29 trigger period.

enumerator kTSI_SincDecimationValue_30

The TSI_DATA[TSICH] bits is the counter value of 30 trigger period.

enumerator kTSI_SincDecimationValue_31

The TSI_DATA[TSICH] bits is the counter value of 31 trigger period.

enumerator kTSI_SincDecimationValue_32

The TSI_DATA[TSICH] bits is the counter value of 32 trigger period.

enum _tsi_ssc_charge_num

TSI SSC output bit0's period setting(SSC0[CHARGE_NUM])

These bits set the SSC output bit0's period setting.

Values:

enumerator kTSI_SscChargeNumValue_1

The SSC output bit 0's period will be 1 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_2

The SSC output bit 0's period will be 2 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_3

The SSC output bit 0's period will be 3 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_4

The SSC output bit 0's period will be 4 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_5

The SSC output bit 0's period will be 5 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_6

The SSC output bit 0's period will be 6 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_7

The SSC output bit 0's period will be 7 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_8

The SSC output bit 0's period will be 8 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_9

The SSC output bit 0's period will be 9 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_10

The SSC output bit 0's period will be 10 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_11

The SSC output bit 0's period will be 11 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_12

The SSC output bit 0's period will be 12 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_13

The SSC output bit 0's period will be 13 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_14

The SSC output bit 0's period will be 14 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_15

The SSC output bit 0's period will be 15 clock cycle of system clock.

enumerator kTSI_SscChargeNumValue_16

The SSC output bit 0's period will be 16 clock cycle of system clock.

enum __tsi_ssc_nocharge_num

TSI SSC output bit1's period setting(SSC0[BASE_NOCHARGE_NUM])

These bits set the SSC output bit1's period setting.

Values:

enumerator kTSI_SscNoChargeNumValue_1

The SSC output bit 1's basic period will be 1 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_2

The SSC output bit 1's basic period will be 2 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_3

The SSC output bit 1's basic period will be 3 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_4

The SSC output bit 1's basic period will be 4 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_5

The SSC output bit 1's basic period will be 5 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_6

The SSC output bit 1's basic period will be 6 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_7

The SSC output bit 1's basic period will be 7 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_8

The SSC output bit 1's basic period will be 8 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_9

The SSC output bit 1's basic period will be 9 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_10

The SSC output bit 1's basic period will be 10 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_11

The SSC output bit 1's basic period will be 11 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_12

The SSC output bit 1's basic period will be 12 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_13

The SSC output bit 1's basic period will be 13 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_14

The SSC output bit 1's basic period will be 14 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_15

The SSC output bit 1's basic period will be 15 clock cycle of system clock.

enumerator kTSI_SscNoChargeNumValue_16

The SSC output bit 1's basic period will be 16 clock cycle of system clock.

enum _tsi_ssc_prbs_outsel

TSI SSC outsel choosing the length of the PRBS (Pseudo-RandomBinarySequence) method setting(SSC0[TSI_SSC0_PRBS_OUTSEL])

These bits set the SSC PRBS length.

Values:

enumerator kTSI_SscPrbsOutsel_2

The length of the PRBS is 2.

enumerator kTSI_SscPrbsOutsel_3

The length of the PRBS is 3.

enumerator kTSI_SscPrbsOutsel_4

The length of the PRBS is 4.

enumerator kTSI_SscPrbsOutsel_5

The length of the PRBS is 5.

enumerator kTSI_SscPrbsOutsel_6

The length of the PRBS is 6.

enumerator kTSI_SscPrbsOutsel_7

The length of the PRBS is 7.

enumerator kTSI_SscPrbsOutsel_8

The length of the PRBS is 8.

enumerator kTSI_SscPrbsOutsel_9

The length of the PRBS is 9.

enumerator kTSI_SscPrbsOutsel_10

The length of the PRBS is 10.

enumerator kTSI_SscPrbsOutsel_11

The length of the PRBS is 11.

enumerator kTSI_SscPrbsOutsel_12

The length of the PRBS is 12.

enumerator kTSI_SscPrbsOutsel_13

The length of the PRBS is 13.

enumerator kTSI_SscPrbsOutsel_14

The length of the PRBS is 14.

enumerator kTSI_SscPrbsOutsel_15

The length of the PRBS is 15.

enum _tsi_status_flags

TSI status flags.

Values:

enumerator kTSI_EndOfScanFlag

End-Of-Scan flag

enumerator kTSI_OutOfRangeFlag

Out-Of-Range flag

enum _tsi_interrupt_enable

TSI feature interrupt source.

Values:

enumerator kTSI_GlobalInterruptEnable
TSI module global interrupt

enumerator kTSI_OutOfRangeInterruptEnable
Out-Of-Range interrupt

enumerator kTSI_EndOfScanInterruptEnable
End-Of-Scan interrupt

enum _tsi_ssc_mode

TSI SSC mode selection.

These constants set the SSC mode.

Values:

enumerator kTSI_ssc_prbs_method
Using PRBS method generating SSC output bit.

enumerator kTSI_ssc_up_down_counter
Using up-down counter generating SSC output bit.

enumerator kTSI_ssc_disable
SSC function is disabled.

enum _tsi_ssc_prescaler

TSI main clock selection.

These constants set select the divider ratio for the clock used for generating the SSC output bit.

Values:

enumerator kTSI_ssc_div_by_1
Set SSC divider to 00000000 div1(2^0)

enumerator kTSI_ssc_div_by_2
Set SSC divider to 00000001 div2(2^1)

enumerator kTSI_ssc_div_by_4
Set SSC divider to 00000011 div4(2^2)

enumerator kTSI_ssc_div_by_8
Set SSC divider to 00000111 div8(2^3)

enumerator kTSI_ssc_div_by_16
Set SSC divider to 00001111 div16(2^4)

enumerator kTSI_ssc_div_by_32
Set SSC divider to 00011111 div32(2^5)

enumerator kTSI_ssc_div_by_64
Set SSC divider to 00111111 div64(2^6)

enumerator kTSI_ssc_div_by_128
Set SSC divider to 01111111 div128(2^7)

enumerator kTSI_ssc_div_by_256
Set SSC divider to 11111111 div256(2^8)

typedef enum _tsi_main_clock_selection tsi_main_clock_selection_t

TSI main clock selection.

These constants set the tsi main clock.

`typedef enum _tsi_sensing_mode_selection` `tsi_sensing_mode_selection_t`

TSI sensing mode selection.

These constants set the tsi sensing mode.

`typedef enum _tsi_dvolt_option` `tsi_dvolt_option_t`

TSI DVOLT settings.

These bits indicate the comparator vp, vm and dvolt voltage.

`typedef enum _tsi_sensitivity_xdn_option` `tsi_sensitivity_xdn_option_t`

TSI sensitivity ajustment (XDN option).

These constants define the tsi sensitivity ajustment in self-cap mode, when `TSI_MODE[S_SEN] = 1`.

`typedef enum _tsi_shield` `tsi_shield_t`

TSI Shield setting (S_W_SHIELD option).

These constants define the shield pin used for HW shielding functionality. One or more shield pin can be selected. The involved bitfield is not fix can change from device to device (KE16Z7 and KE17Z7 support 3 shield pins, other KE serials only support 1 shield pin).

`typedef enum _tsi_sensitivity_ctrim_option` `tsi_sensitivity_ctrim_option_t`

TSI sensitivity ajustment (CTRIM option).

These constants define the tsi sensitivity ajustment in self-cap mode, when `TSI_MODE[S_SEN] = 1`.

`typedef enum _tsi_current_multiple_input` `tsi_current_multiple_input_t`

TSI current ajustment (Input current multiple).

These constants set the tsi input current multiple in self-cap mode.

`typedef enum _tsi_current_multiple_charge` `tsi_current_multiple_charge_t`

TSI current ajustment (Charge/Discharge current multiple).

These constants set the tsi charge/discharge current multiple in self-cap mode.

`typedef enum _tsi_mutual_pre_current` `tsi_mutual_pre_current_t`

TSI current used in vref generator.

These constants Choose the current used in vref generator.

`typedef enum _tsi_mutual_pre_resistor` `tsi_mutual_pre_resistor_t`

TSI resistor used in pre-charge.

These constants Choose the resistor used in pre-charge.

`typedef enum _tsi_mutual_sense_resistor` `tsi_mutual_sense_resistor_t`

TSI resistor used in I-sense generator.

These constants Choose the resistor used in I-sense generator.

`typedef enum _tsi_mutual_tx_channel` `tsi_mutual_tx_channel_t`

TSI TX channel selection in mutual-cap mode.

These constants Choose the TX channel used in mutual-cap mode.

`typedef enum _tsi_mutual_rx_channel` `tsi_mutual_rx_channel_t`

TSI RX channel selection in mutual-cap mode.

These constants Choose the RX channel used in mutual-cap mode.

`typedef enum _tsi_mutual_sense_boost_current` `tsi_mutual_sense_boost_current_t`
TSI sensitivity boost current settings.

These constants set the sensitivity boost current.

`typedef enum _tsi_mutual_tx_drive_mode` `tsi_mutual_tx_drive_mode_t`
TSI TX drive mode control.

These constants Choose the TX drive mode control setting.

`typedef enum _tsi_mutual_pmos_current_left` `tsi_mutual_pmos_current_left_t`
TSI Pmos current mirror selection on the left side.

These constants set the Pmos current mirror on the left side used in mutual-cap mode.

`typedef enum _tsi_mutual_pmos_current_right` `tsi_mutual_pmos_current_right_t`
TSI Pmos current mirror selection on the right side.

These constants set the Pmos current mirror on the right side used in mutual-cap mode.

`typedef enum _tsi_mutual_nmos_current` `tsi_mutual_nmos_current_t`
TSI Nmos current mirror selection.

These constants set the Nmos current mirror used in mutual-cap mode.

`typedef enum _tsi_sinc_cutoff_div` `tsi_sinc_cutoff_div_t`
TSI SINC cutoff divider setting.

These bits set the SINC cutoff divider.

`typedef enum _tsi_sinc_filter_order` `tsi_sinc_filter_order_t`
TSI SINC filter order setting.

These bits set the SINC filter order.

`typedef enum _tsi_sinc_decimation_value` `tsi_sinc_decimation_value_t`
TSI SINC decimation value setting.

These bits set the SINC decimation value.

`typedef enum _tsi_ssc_charge_num` `tsi_ssc_charge_num_t`
TSI SSC output bit0's period setting(SSC0[CHARGE_NUM])

These bits set the SSC output bit0's period setting.

`typedef enum _tsi_ssc_nocharge_num` `tsi_ssc_nocharge_num_t`
TSI SSC output bit1's period setting(SSC0[BASE_NOCHARGE_NUM])

These bits set the SSC output bit1's period setting.

`typedef enum _tsi_ssc_prbs_outsel` `tsi_ssc_prbs_outsel_t`
TSI SSC outsel choosing the length of the PRBS (Pseudo-RandomBinarySequence) method setting(SSC0[TSI_SSC0_PRBS_OUTSEL])

These bits set the SSC PRBS length.

`typedef enum _tsi_status_flags` `tsi_status_flags_t`
TSI status flags.

`typedef enum _tsi_interrupt_enable` `tsi_interrupt_enable_t`
TSI feature interrupt source.

`typedef enum _tsi_ssc_mode` `tsi_ssc_mode_t`
TSI SSC mode selection.

These constants set the SSC mode.

```
typedef enum _tsi_ssc_prescaler tsi_ssc_prescaler_t
```

TSI main clock selection.

These constants set select the divider ratio for the clock used for generating the SSC output bit.

```
typedef struct _tsi_calibration_data tsi_calibration_data_t
```

TSI calibration data storage.

```
typedef struct _tsi_common_config tsi_common_config_t
```

TSI common configuration structure.

This structure contains the common settings for TSI self-cap or mutual-cap mode, configurations including the TSI module main clock, sensing mode, DVOLT options, SINC and SSC configurations.

```
typedef struct _tsi_selfCap_config tsi_selfCap_config_t
```

TSI configuration structure for self-cap mode.

This structure contains the settings for the most common TSI self-cap configurations including the TSI module charge currents, sensitivity configuration and so on.

```
typedef struct _tsi_mutualCap_config tsi_mutualCap_config_t
```

TSI configuration structure for mutual-cap mode.

This structure contains the settings for the most common TSI mutual-cap configurations including the TSI module generator settings, sensitivity related current settings and so on.

```
const clock_ip_name_t s_tsiClock[]
```

```
const IRQn_Type s_TsiIRQ[]
```

```
TSI_Type *const s_tsiBases[]
```

```
uint32_t TSI_GetInstance(TSI_Type *base)
```

Get the TSI instance from peripheral base address.

Parameters

- base – TSI peripheral base address.

Returns

TSI instance.

```
void TSI_InitSelfCapMode(TSI_Type *base, const tsi_selfCap_config_t *config)
```

Initialize hardware to Self-cap mode.

Initialize the peripheral to the targeted state specified by parameter config, such as sets sensitivity adjustment, current settings.

Parameters

- base – TSI peripheral base address.
- config – Pointer to TSI self-cap configuration structure.

Returns

none

```
void TSI_InitMutualCapMode(TSI_Type *base, const tsi_mutualCap_config_t *config)
```

Initialize hardware to Mutual-cap mode.

Initialize the peripheral to the targeted state specified by parameter config, such as sets Vref generator setting, sensitivity boost settings, Pmos/Nmos settings.

Parameters

- base – TSI peripheral base address.

- config – Pointer to TSI mutual-cap configuration structure.

Returns

none

void TSI_Deinit(TSI_Type *base)

De-initialize hardware.

De-initialize the peripheral to default state.

Parameters

- base – TSI peripheral base address.

Returns

none

void TSI_GetSelfCapModeDefaultConfig(*tsi_selfCap_config_t* *userConfig)

Get TSI self-cap mode user configure structure. This interface sets userConfig structure to a default value. The configuration structure only includes the settings for the whole TSI. The user configure is set to a value:

```
userConfig->commonConfig.mainClock    = kTSI_MainClockSlection_0;
userConfig->commonConfig.mode         = kTSI_SensingModeSlection_Self;
userConfig->commonConfig.dvoltage     = kTSI_DvoltageOption_2;
userConfig->commonConfig.cutoff       = kTSI_SincCutoffDiv_1;
userConfig->commonConfig.order        = kTSI_SincFilterOrder_1;
userConfig->commonConfig.decimation   = kTSI_SincDecimationValue_8;
userConfig->commonConfig.chargeNum     = kTSI_SscChargeNumValue_3;
userConfig->commonConfig.prbsOutsel   = kTSI_SscPrbsOutsel_2;
userConfig->commonConfig.noChargeNum  = kTSI_SscNoChargeNumValue_2;
userConfig->commonConfig.ssc_mode     = kTSI_ssc_prbs_method;
userConfig->commonConfig.ssc_prescaler = kTSI_ssc_div_by_1;
userConfig->enableSensitivity          = true;
userConfig->enableShield              = false;
userConfig->xdn                      = kTSI_SensitivityXdnOption_1;
userConfig->ctrim                    = kTSI_SensitivityCtrimOption_7;
userConfig->inputCurrent              = kTSI_CurrentMultipleInputValue_0;
userConfig->chargeCurrent             = kTSI_CurrentMultipleChargeValue_1;
```

Parameters

- userConfig – Pointer to TSI user configure structure.

void TSI_GetMutualCapModeDefaultConfig(*tsi_mutualCap_config_t* *userConfig)

Get TSI mutual-cap mode default user configure structure. This interface sets userConfig structure to a default value. The configuration structure only includes the settings for the whole TSI. The user configure is set to a value:

```
userConfig->commonConfig.mainClock    = kTSI_MainClockSlection_1;
userConfig->commonConfig.mode         = kTSI_SensingModeSlection_Mutual;
userConfig->commonConfig.dvoltage     = kTSI_DvoltageOption_0;
userConfig->commonConfig.cutoff       = kTSI_SincCutoffDiv_1;
userConfig->commonConfig.order        = kTSI_SincFilterOrder_1;
userConfig->commonConfig.decimation   = kTSI_SincDecimationValue_8;
userConfig->commonConfig.chargeNum     = kTSI_SscChargeNumValue_4;
userConfig->commonConfig.prbsOutsel   = kTSI_SscPrbsOutsel_2;
userConfig->commonConfig.noChargeNum  = kTSI_SscNoChargeNumValue_5;
userConfig->commonConfig.ssc_mode     = kTSI_ssc_prbs_method;
userConfig->commonConfig.ssc_prescaler = kTSI_ssc_div_by_1;
userConfig->preCurrent                = kTSI_MutualPreCurrent_4uA;
userConfig->preResistor               = kTSI_MutualPreResistor_4k;
userConfig->senseResistor              = kTSI_MutualSenseResistor_10k;
userConfig->boostCurrent              = kTSI_MutualSenseBoostCurrent_0uA;
```

(continues on next page)

(continued from previous page)

```
userConfig->txDriveMode      = kTSI_MutualTxDriveModeOption_0;
userConfig->pmosLeftCurrent   = kTSI_MutualPmosCurrentMirrorLeft_32;
userConfig->pmosRightCurrent  = kTSI_MutualPmosCurrentMirrorRight_1;
userConfig->enableNmosMirror  = true;
userConfig->nmosCurrent       = kTSI_MutualNmosCurrentMirror_1;
```

Parameters

- userConfig – Pointer to TSI user configure structure.

void TSI_SelfCapCalibrate(TSI_Type *base, *tsi_calibration_data_t* *calBuff)

Hardware base counter value for calibration.

Calibrate the peripheral to fetch the initial counter value of the enabled channels. This API is mostly used at initial application setup, it shall be called after the TSI_Init API, then user can use the calibrated counter values to setup applications(such as to determine

under which counter value we can confirm a touch event occurs).

Note: This API is mainly used for self-cap mode;

Note: The calibration work in mutual-cap mode shall be done in applications due to different board layout.

Parameters

- base – TSI peripheral base address.
- calBuff – Data buffer that store the calibrated counter value.

Returns

none

void TSI_EnableInterrupts(TSI_Type *base, uint32_t mask)

Enables TSI interrupt requests.

Parameters

- base – TSI peripheral base address.
- mask – interrupt source The parameter can be combination of the following source if defined:
 - kTSI_GlobalInterruptEnable
 - kTSI_EndOfScanInterruptEnable
 - kTSI_OutOfRangeInterruptEnable

void TSI_DisableInterrupts(TSI_Type *base, uint32_t mask)

Disables TSI interrupt requests.

Parameters

- base – TSI peripheral base address.
- mask – interrupt source The parameter can be combination of the following source if defined:
 - kTSI_GlobalInterruptEnable
 - kTSI_EndOfScanInterruptEnable

– kTSI_OutOfRangeInterruptEnable

static inline uint32_t TSI_GetStatusFlags(TSI_Type *base)

Get interrupt flag. This function get tsi interrupt flags.

Parameters

- base – TSI peripheral base address.

Returns

The mask of these status flags combination.

void TSI_ClearStatusFlags(TSI_Type *base, uint32_t mask)

Clear interrupt flag.

This function clear tsi interrupt flag, automatically cleared flags can not be cleared by this function.

Parameters

- base – TSI peripheral base address.
- mask – The status flags to clear.

static inline uint32_t TSI_GetScanTriggerMode(TSI_Type *base)

Get TSI scan trigger mode.

Parameters

- base – TSI peripheral base address.

Returns

Scan trigger mode.

static inline bool TSI_IsScanInProgress(TSI_Type *base)

Get scan in progress flag.

Parameters

- base – TSI peripheral base address.

Returns

True - scan is in progress. False - scan is not in progress.

static inline void TSI_EnableModule(TSI_Type *base, bool enable)

Enables the TSI Module or not.

Parameters

- base – TSI peripheral base address.
- enable – Choose whether to enable or disable module;
 - true Enable TSI module;
 - false Disable TSI module;

Returns

none.

static inline void TSI_EnableLowPower(TSI_Type *base, bool enable)

Sets the TSI low power STOP mode enable or not. This enables TSI module function in low power modes.

Parameters

- base – TSI peripheral base address.
- enable – Choose to enable or disable STOP mode.
 - true Enable module in STOP mode;

- false Disable module in STOP mode;

Returns

none.

static inline void TSI_EnableHardwareTriggerScan(TSI_Type *base, bool enable)

Enable the hardware trigger scan or not.

Parameters

- base – TSI peripheral base address.
- enable – Choose to enable hardware trigger or software trigger scan.
 - true Enable hardware trigger scan;
 - false Enable software trigger scan;

Returns

none.

static inline void TSI_StartSoftwareTrigger(TSI_Type *base)

Start one sotware trigger measurement (trigger a new measurement).

Parameters

- base – TSI peripheral base address.

Returns

none.

static inline void TSI_SetSelfCapMeasuredChannel(TSI_Type *base, uint8_t channel)

Set the measured channel number for self-cap mode.

Note: This API can only be used in self-cap mode!

Parameters

- base – TSI peripheral base address.
- channel – Channel number 0 ... 24.

Returns

none.

static inline uint8_t TSI_GetSelfCapMeasuredChannel(TSI_Type *base)

Get the current measured channel number, in self-cap mode.

Note: This API can only be used in self-cap mode!

Parameters

- base – TSI peripheral base address.

Returns

uint8_t Channel number 0 ... 24.

static inline void TSI_EnableDmaTransfer(TSI_Type *base, bool enable)

Enable DMA transfer or not.

Parameters

- base – TSI peripheral base address.
- enable – Choose to enable DMA transfer or not.

- true Enable DMA transfer;
- false Disable DMA transfer;

Returns

none.

static inline void TSI_EnableEndOfScanDmaTransferOnly(TSI_Type *base, bool enable)

Decide whether to enable End of Scan DMA transfer request only.

Parameters

- base – TSI peripheral base address.
- enable – Choose whether to enable End of Scan DMA transfer request only.
 - true Enable End of Scan DMA transfer request only;
 - false Both End-of-Scan and Out-of-Range can generate DMA transfer request.

Returns

none.

static inline uint16_t TSI_GetCounter(TSI_Type *base)

Gets the conversion counter value.

Parameters

- base – TSI peripheral base address.

Returns

Accumulated scan counter value ticked by the reference clock.

static inline void TSI_SetLowThreshold(TSI_Type *base, uint16_t low_threshold)

Set the TSI wake-up channel low threshold.

Parameters

- base – TSI peripheral base address.
- low_threshold – Low counter threshold.

Returns

none.

static inline void TSI_SetHighThreshold(TSI_Type *base, uint16_t high_threshold)

Set the TSI wake-up channel high threshold.

Parameters

- base – TSI peripheral base address.
- high_threshold – High counter threshold.

Returns

none.

static inline void TSI_SetMainClock(TSI_Type *base, tsi_main_clock_selection_t mainClock)

Set the main clock of the TSI module.

Parameters

- base – TSI peripheral base address.
- mainClock – clock option value.

Returns

none.

static inline void TSI_SetSensingMode(TSI_Type *base, *tsi_sensing_mode_selection_t* mode)

Set the sensing mode of the TSI module.

Parameters

- base – TSI peripheral base address.
- mode – Mode value.

Returns

none.

static inline *tsi_sensing_mode_selection_t* TSI_GetSensingMode(TSI_Type *base)

Get the sensing mode of the TSI module.

Parameters

- base – TSI peripheral base address.

Returns

Currently selected sensing mode.

static inline void TSI_SetDvoltage(TSI_Type *base, *tsi_dvoltage_option_t* dvolt)

Set the DVOLT settings.

Parameters

- base – TSI peripheral base address.
- dvolt – The voltage rails.

Returns

none.

static inline void TSI_EnableNoiseCancellation(TSI_Type *base, bool enableCancellation)

Enable self-cap mode noise cancellation function or not.

Parameters

- base – TSI peripheral base address.
- enableCancellation – Choose whether to enable noise cancellation in self-cap mode
 - true Enable noise cancellation;
 - false Disable noise cancellation;

Returns

none.

static inline void TSI_SetMutualCapTxChannel(TSI_Type *base, *tsi_mutual_tx_channel_t* txChannel)

Set the mutual-cap mode TX channel.

Parameters

- base – TSI peripheral base address.
- txChannel – Mutual-cap mode TX channel number

Returns

none.

static inline *tsi_mutual_tx_channel_t* TSI_GetTxMutualCapMeasuredChannel(TSI_Type *base)

Get the current measured TX channel number; in mutual-cap mode.

Note: This API can only be used in mutual-cap mode!

Parameters

- base – TSI peripheral base address;

Returns

Tx Channel number 0 ... 5;

```
static inline void TSI_SetMutualCapRxChannel(TSI_Type *base, tsi_mutual_rx_channel_t rxChannel)
```

Set the mutual-cap mode RX channel.

Parameters

- base – TSI peripheral base address.
- rxChannel – Mutual-cap mode RX channel number

Returns

none.

```
static inline tsi_mutual_rx_channel_t TSI_GetRxMutualCapMeasuredChannel(TSI_Type *base)
```

Get the current measured RX channel number, in mutual-cap mode.

Note: This API can only be used in mutual-cap mode!

Parameters

- base – TSI peripheral base address;

Returns

Rx Channel number 6 ... 11;

```
static inline void TSI_SetSscMode(TSI_Type *base, tsi_ssc_mode_t mode)
```

Set the SSC clock mode of the TSI module.

Parameters

- base – TSI peripheral base address.
- mode – SSC mode option value.

Returns

none.

```
static inline void TSI_SetSscPrescaler(TSI_Type *base, tsi_ssc_prescaler_t prescaler)
```

Set the SSC prescaler of the TSI module.

Parameters

- base – TSI peripheral base address.
- prescaler – SSC prescaler option value.

Returns

none.

```
static inline void TSI_SetUsedTxChannel(TSI_Type *base, tsi_mutual_tx_channel_t txChannel)
```

Set used mutual-cap TX channel.

Parameters

- base – TSI peripheral base address.
- txChannel – Mutual-cap mode TX channel number

Returns

none.

static inline void TSI_ClearUsedTxChannel(TSI_Type *base, *tsi_mutual_tx_channel_t* txChannel)
Clear used mutual-cap TX channel.

Parameters

- base – TSI peripheral base address.
- txChannel – Mutual-cap mode TX channel number

Returns

none.

FSL_TSI_DRIVER_VERSION

TSI driver version.

ALL_FLAGS_MASK

TSI status flags macro collection.

struct *_tsi_calibration_data*

#include <fsl_tsi_v5.h> TSI calibration data storage.

Public Members

uint16_t calibratedData[1]

TSI calibration data storage buffer

struct *_tsi_common_config*

#include <fsl_tsi_v5.h> TSI common configuration structure.

This structure contains the common settings for TSI self-cap or mutual-cap mode, configurations including the TSI module main clock, sensing mode, DVOLT options, SINC and SSC configurations.

Public Members

tsi_main_clock_selection_t mainClock

Set main clock.

tsi_sensing_mode_selection_t mode

Choose sensing mode.

tsi_dvolt_option_t dvolt

DVOLT option value.

tsi_sinc_cutoff_div_t cutoff

Cutoff divider.

tsi_sinc_filter_order_t order

SINC filter order.

tsi_sinc_decimation_value_t decimation

SINC decimation value.

tsi_ssc_charge_num_t chargeNum

SSC High Width (t1), SSC output bit0's period setting.

tsi_ssc_prbs_outsel_t prbsOutsel

SSC High Random Width (t2), length of PRBS(Pseudo-RandomBinarySequence),SSC output bit2's period setting.

tsi_ssc_nocharge_num_t noChargeNum

SSC Low Width (t3), SSC output bit1's period setting.

tsi_ssc_mode_t ssc_mode

Clock mode selection (basic - from main clock by divider,advanced - using SSC(Switching Speed Clock) by three configurable intervals.

tsi_ssc_prescaler_t ssc_prescaler

Set clock divider for basic mode.

struct *_tsi_selfCap_config*

#include <fsl_tsi_v5.h> TSI configuration structure for self-cap mode.

This structure contains the settings for the most common TSI self-cap configurations including the TSI module charge currents, sensitivity configuration and so on.

Public Members

tsi_common_config_t commonConfig

Common settings.

bool enableSensitivity

Enable sensitivity boost of self-cap or not.

tsi_shield_t enableShield

Enable shield of self-cap mode or not.

tsi_sensitivity_xdn_option_t xdn

Sensitivity XDN option.

tsi_sensitivity_ctrim_option_t ctrim

Sensitivity CTRIM option.

tsi_current_multiple_input_t inputCurrent

Input current multiple.

tsi_current_multiple_charge_t chargeCurrent

Charge/Discharge current multiple.

struct *_tsi_mutualCap_config*

#include <fsl_tsi_v5.h> TSI configuration structure for mutual-cap mode.

This structure contains the settings for the most common TSI mutual-cap configurations including the TSI module generator settings, sensitivity related current settings and so on.

Public Members

tsi_common_config_t commonConfig

Common settings.

tsi_mutual_pre_current_t preCurrent

Vref generator current.

tsi_mutual_pre_resistor_t preResistor

Vref generator resistor.

tsi_mutual_sense_resistor_t senseResistor

I-sense generator resistor.

tsi_mutual_sense_boost_current_t boostCurrent

Sensitivity boost current setting.

tsi_mutual_tx_drive_mode_t txDriveMode

TX drive mode control setting.

tsi_mutual_pmos_current_left_t pmosLeftCurrent

Pmos current mirror on the left side.

tsi_mutual_pmos_current_right_t pmosRightCurrent

Pmos current mirror on the right side.

bool enableNmosMirror

Enable Nmos current mirror setting or not.

tsi_mutual_nmos_current_t nmosCurrent

Nmos current mirror setting.

2.43 WDOG32: 32-bit Watchdog Timer

void WDOG32_GetDefaultConfig(*wdog32_config_t* *config)

Initializes the WDOG32 configuration structure.

This function initializes the WDOG32 configuration structure to default values. The default values are:

```
wdog32Config->enableWdog32 = true;
wdog32Config->clockSource = kWDOG32_ClockSource1;
wdog32Config->prescaler = kWDOG32_ClockPrescalerDivide1;
wdog32Config->workMode.enableWait = true;
wdog32Config->workMode.enableStop = false;
wdog32Config->workMode.enableDebug = false;
wdog32Config->testMode = kWDOG32_TestModeDisabled;
wdog32Config->enableUpdate = true;
wdog32Config->enableInterrupt = false;
wdog32Config->enableWindowMode = false;
wdog32Config->windowValue = 0U;
wdog32Config->timeoutValue = 0xFFFFU;
```

See also:

wdog32_config_t

Parameters

- config – Pointer to the WDOG32 configuration structure.

AT_QUICKACCESS_SECTION_CODE (status_t WDOG32_Init(WDOG_Type *base,
const *wdog32_config_t* *config))

Initializes the WDOG32 module.

This function initializes the WDOG32. To reconfigure the WDOG32 without forcing a reset first, enableUpdate must be set to true in the configuration.

Example:

```
wdog32_config_t config;
WDOG32_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
config.enableUpdate = true;
WDOG32_Init(wdog_base,&config);
```

Note: If there is errata ERR010536 (FSL_FEATURE_WDOG_HAS_ERRATA_010536 defined as 1), then after calling this function, user need delay at least 4 LPO clock cycles before accessing other WDOG32 registers.

Parameters

- base – WDOG32 peripheral base address.
- config – The configuration of the WDOG32.

Return values

- kStatus_Success – The initialization was successful
- kStatus_Timeout – The initialization timed out

status_t WDOG32_Deinit(WDOG_Type *base)

De-initializes the WDOG32 module.

This function shuts down the WDOG32. Ensure that the WDOG_CS.UPDATE is 1, which means that the register update is enabled.

Parameters

- base – WDOG32 peripheral base address.

Return values

- kStatus_Success – The de-initialization was successful
- kStatus_Timeout – The de-initialization timed out

AT_QUICKACCESS_SECTION_CODE (*status_t* WDOG32_Unlock(WDOG_Type *base))

Unlocks the WDOG32 register written.

This function unlocks the WDOG32 register written.

Before starting the unlock sequence and following the configuration, disable the global interrupts. Otherwise, an interrupt could effectively invalidate the unlock sequence and the WCT may expire. After the configuration finishes, re-enable the global interrupts.

Parameters

- base – WDOG32 peripheral base address

Return values

- kStatus_Success – The unlock sequence was successful
- kStatus_Timeout – The unlock sequence timed out

AT_QUICKACCESS_SECTION_CODE (*void* WDOG32_Enable(WDOG_Type *base))

Enables the WDOG32 module.

Disables the WDOG32 module.

This function writes a value into the WDOG_CS register to enable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

This function writes a value into the WDOG_CS register to disable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- base – WDOG32 peripheral base address

AT_QUICKACCESS_SECTION_CODE (void WDOG32_EnableInterrupts(WDOG_Type *base, uint32_t mask))

Enables the WDOG32 interrupt.

Clears the WDOG32 flag.

Disables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to enable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Example to clear an interrupt flag:

```
WDOG32_ClearStatusFlags(wdog_base, kWDOG32_InterruptFlag);
```

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to enable. The parameter can be a combination of the following source if defined:
 - kWDOG32_InterruptEnable

This function writes a value into the WDOG_CS register to disable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

- base – WDOG32 peripheral base address.
- mask – The interrupts to disabled. The parameter can be a combination of the following source if defined:
 - kWDOG32_InterruptEnable

This function clears the WDOG32 status flag.

- base – WDOG32 peripheral base address.
- mask – The status flags to clear. The parameter can be any combination of the following values:
 - kWDOG32_InterruptFlag

```
static inline uint32_t WDOG32_GetStatusFlags(WDOG_Type *base)
```

Gets the WDOG32 all status flags.

This function gets all status flags.

Example to get the running flag:

```
uint32_t status;
status = WDOG32_GetStatusFlags(wdog_base) & kWDOG32_RunningFlag;
```

See also:

`_wdog32_status_flags_t`

- true: related status flag has been set.
- false: related status flag is not set.

Parameters

- base – WDOG32 peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

```
AT_QUICKACCESS_SECTION_CODE (void WDOG32_SetTimeoutValue(WDOG_Type *base,
uint16_t timeoutCount))
```

Sets the WDOG32 timeout value.

This function writes a timeout value into the WDOG_TOVAL register. The WDOG_TOVAL register is a write-once register. To ensure the reconfiguration fits the timing of WCT, unlock function will be called inline.

Parameters

- base – WDOG32 peripheral base address
- timeoutCount – WDOG32 timeout value, count of WDOG32 clock ticks.

```
AT_QUICKACCESS_SECTION_CODE (void WDOG32_SetWindowValue(WDOG_Type *base,
uint16_t windowValue))
```

Sets the WDOG32 window value.

This function writes a window value into the WDOG_WIN register. The WDOG_WIN register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- windowValue – WDOG32 window value.

```
static inline void WDOG32_Refresh(WDOG_Type *base)
```

Refreshes the WDOG32 timer.

This function feeds the WDOG32. This function should be called before the Watchdog timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WDOG32 peripheral base address

```
static inline uint16_t WDOG32_GetCounterValue(WDOG_Type *base)
```

Gets the WDOG32 counter value.

This function gets the WDOG32 counter value.

Parameters

- base – WDOG32 peripheral base address.

Returns

Current WDOG32 counter value.

WDOG_FIRST_WORD_OF_UNLOCK

First word of unlock sequence

WDOG_SECOND_WORD_OF_UNLOCK

Second word of unlock sequence

WDOG_FIRST_WORD_OF_REFRESH

First word of refresh sequence

WDOG_SECOND_WORD_OF_REFRESH

Second word of refresh sequence

FSL_WDOG32_DRIVER_VERSION

WDOG32 driver version.

enum __wdog32_clock_source

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

Values:

enumerator kWDOG32_ClockSource0

Clock source 0

enumerator kWDOG32_ClockSource1

Clock source 1

enumerator kWDOG32_ClockSource2

Clock source 2

enumerator kWDOG32_ClockSource3

Clock source 3

enum __wdog32_clock_prescaler

Describes the selection of the clock prescaler.

Values:

enumerator kWDOG32_ClockPrescalerDivide1

Divided by 1

enumerator kWDOG32_ClockPrescalerDivide256

Divided by 256

enum __wdog32_test_mode

Describes WDOG32 test mode.

Values:

enumerator kWDOG32_TestModeDisabled

Test Mode disabled

enumerator kWDOG32_UserModeEnabled

User Mode enabled

enumerator kWDOG32_LowByteTest

Test Mode enabled, only low byte is used

enumerator kWDOG32_HighByteTest

Test Mode enabled, only high byte is used

enum __wdog32_interrupt_enable_t

WDOG32 interrupt configuration structure.

This structure contains the settings for all of the WDOG32 interrupt configurations.

Values:

enumerator kWDOG32_InterruptEnable

Interrupt is generated before forcing a reset

enum __wdog32_status_flags_t

WDOG32 status flags.

This structure contains the WDOG32 status flags for use in the WDOG32 functions.

Values:

enumerator kWDOG32_RunningFlag

Running flag, set when WDOG32 is enabled

enumerator kWDOG32_InterruptFlag

Interrupt flag, set when interrupt occurs

typedef enum __wdog32_clock_source wdog32_clock_source_t

Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

typedef enum __wdog32_clock_prescaler wdog32_clock_prescaler_t

Describes the selection of the clock prescaler.

typedef struct __wdog32_work_mode wdog32_work_mode_t

Defines WDOG32 work mode.

typedef enum __wdog32_test_mode wdog32_test_mode_t

Describes WDOG32 test mode.

typedef struct __wdog32_config wdog32_config_t

Describes WDOG32 configuration structure.

struct __wdog32_work_mode

#include <fsl_wdog32.h> Defines WDOG32 work mode.

Public Members

`bool enableWait`
Enables or disables WDOG32 in wait mode

`bool enableStop`
Enables or disables WDOG32 in stop mode

`bool enableDebug`
Enables or disables WDOG32 in debug mode

`struct __wdog32_config`
#include <fsl_wdog32.h> Describes WDOG32 configuration structure.

Public Members

`bool enableWdog32`
Enables or disables WDOG32

`wdog32_clock_source_t clockSource`
Clock source select

`wdog32_clock_prescaler_t prescaler`
Clock prescaler value

`wdog32_work_mode_t workMode`
Configures WDOG32 work mode in debug stop and wait mode

`wdog32_test_mode_t testMode`
Configures WDOG32 test mode

`bool enableUpdate`
Update write-once register enable

`bool enableInterrupt`
Enables or disables WDOG32 interrupt

`bool enableWindowMode`
Enables or disables WDOG32 window mode

`uint16_t windowValue`
Window value

`uint16_t timeoutValue`
Timeout value

Chapter 3

Middleware

3.1 Motor Control

3.1.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called `FMSTR_TRANSPORT` with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The `mcuxsdk` folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)
- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer’s physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pd_bdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER “middleware” driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
 - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
 - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
 - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
 - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- **src/drivers/[sdk]/serial** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- **src/drivers/[sdk]/can** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- **src/drivers/[sdk]/network** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR    [0|1]
#define FMSTR_SHORT_INTR   [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- FMSTR_SERIAL - serial communication protocol
- FMSTR_CAN - using CAN communication
- FMSTR_PDBDM - using packet-driven BDM communication
- FMSTR_NET - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as FMSTR_SERIAL_DRV. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call FMSTR_SetSerialBaseAddress() to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_RQUEUE_SIZE

```
#define FMSTR_COMM_RQUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetCanBaseAddress()` to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options**FMSTR_USE_SCOPE**

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options**FMSTR_USE_RECORDER**

```
#define FMSTR_USE_RECORDER [number]
```


Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.
Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options**FMSTR_USE_TSA**

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the `freemaster_cfg.h` file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: `freemaster.h`
- Implementation: `freemaster_protocol.c`

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the *FMSTR_Poll* function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the *FMSTR_COMM_RQUEUE_SIZE* macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see *Driver interrupt modes*), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()
```

```
FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmrstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)
```

```
/* Directory entry applies to all subsequent MEMFILE entries */
```

```
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()

```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```

FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);

```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
 - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
 - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the *FMSTR_USE_TSA_DYNAMIC* configuration option and when the *FMSTR_SetUpTsaBuff* function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the *FMSTR_APPCMDRESULT_NOCMD* constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the *FMSTR_AppCmdAck* call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The *FMSTR_GetAppCmd* function does not report the commands for which a callback handler function exists. If the *FMSTR_GetAppCmd* function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns *FMSTR_APPCMDRESULT_NOCMD*.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↳PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.


```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the *nGranularity* value equal to the *nLength* value, all data are considered as one chunk which is either written successfully as a whole or not at all. The *nGranularity* value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables. By default, this is defined as <i>FM-STR_SIZE</i> .
<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors. By default, this is defined as <i>FM-STR_SIZE</i> .

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object. Generally, this is a pointer to a void type.
<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data. Generally, this is an unsigned 8-bit or 16-bit type.
<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data. This is used to store the data buffer sizes.
<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function. See FM-STR_PipeOpen for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FMSTR_U16</i>	Unsigned 16-bit integer.
<i>FMSTR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FMSTR_S16</i>	Signed 16-bit integer.
<i>FMSTR_S32</i>	Signed 32-bit integer.
<i>FMSTR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FMSTR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FMSTR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FMSTR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FMSTR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FMSTR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the [FreeRTOS kernel repo](#) integration into the [NXP MCUXpresso Software Development Kit: mcuxsdk](#). MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as [FreeRTOS driver wrappers](#), RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in [CHANGELOG_mcuxsdk.md](#) file.

 
The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of freertos_examples, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in [mcuxsdk-examples](#) repository, see the `freertos_examples` folder.

Once using MCUXpresso SDK zip packages created via the [MCUXpresso SDK Builder](#) the FreeRTOS kernel library and associated `freertos_examples` are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

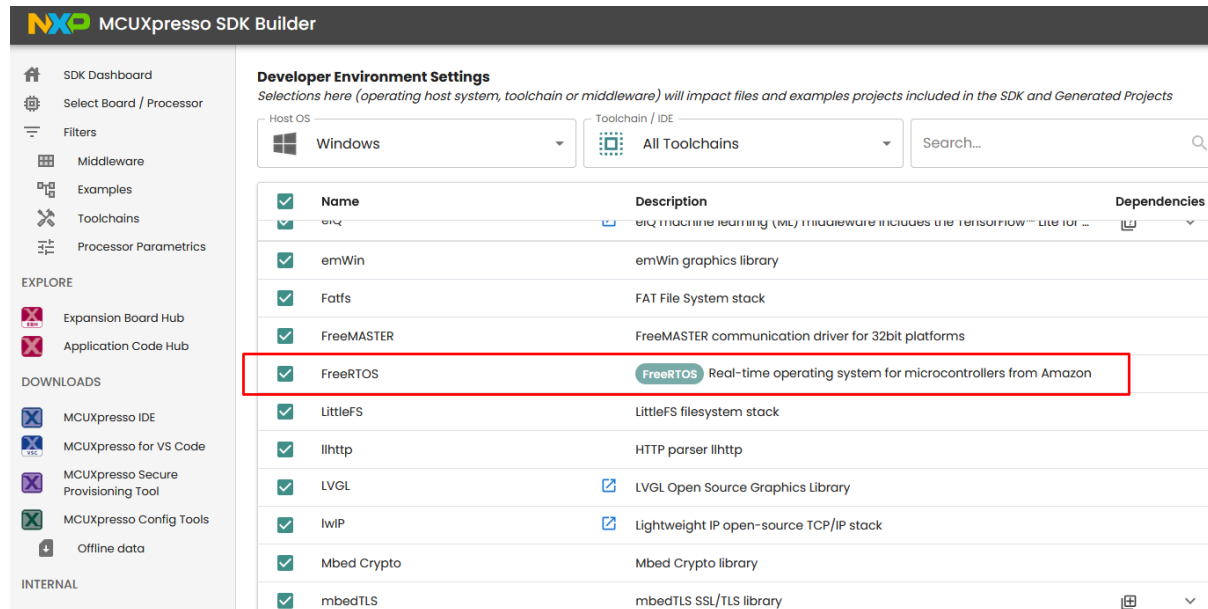

The FreeRTOS examples in MCUXpresso SDK zip packages are located in `<MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/` subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build `freertos_examples` visit: [MCUXpresso SDK documentation for Build And Configuration MCUXpresso SDK Getting Start Guide](#)

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this west `list_project` command in `mcuxsdk` workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

Task List (FreeRTOS)							
TCB#	Task Name	Task Handle	Task State	Priority	Stack Usage	Event Object	Runtime
1	task_one	0x1fffecc8	Blocked	1 (1)	0 B / 880 B	MyCountingSemaphore (Rx)	0x0 (0.0%)
2	task_two	0x1ffff130	Blocked	2 (2)	0 B / 888 B	MyCountingSemaphore (Rx)	0x1 (0.1%)
3	IDLE	0x1ffff330	Running	0 (0)	0 B / 296 B		0x3e5 (99.6%)
4	Tmr Svc	0x1ffff6b8	Blocked	17 (17)	28 B / 672 B	TmrQ (Rx)	0x3 (0.3%)

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[Unreleased]**Added**

- Kconfig added CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT config to optionally include custom FreeRTOSConfig fragment include file FreeRTOSConfig_frag.h. File must be provided by application.
- Added missing Kconfig option for configUSE_PICOLIBC_TLS.
- Add correct header files to build when configUSE_NEWLIB_REENTRANT and configUSE_PICOLIBC_TLS is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See rtos\freertos\freertos_kernel\History.txt
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See rtos\freertos\freertos_kernel\History.txt

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
 - Tickless idle mode support for Cortex-A7. Add fsl_tickless_epit.c and fsl_tickless_generic.h in portable/IAR/ARM_CA9 folder.
 - Enabled float context saving in IAR for Cortex-A7. Added configUSE_TASK_FPU_SUPPORT macros. Modified port.c and portmacro.h in portable/IAR/ARM_CA9 folder.
- Other changes:
 - Transformed ARM_CM core specific tickless low power support into generic form under freertos/Source/portable/low_power_tickless/.

[9.0.0_rev2]

- New features:
 - Enabled MCUXpresso thread aware debugging. Add `freertos_tasks_c_additions.h` and `configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H` and `configFREERTOS_MEMORY_SCHEME` macros.

[9.0.0_rev1]

- New features:
 - Enabled `-flto` optimization in GCC by adding `attribute((used))` for `vTaskSwitchContext`.
 - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable `configRECORD_STACK_HIGH_ADDRESS` macro. Modified files are `task.c` and `FreeRTOS.h`.

[9.0.0_rev0]

- New features:
 - Example `freertos_sem_static`.
 - Static allocation support RTOS driver wrappers.
- Other changes:
 - Tickless idle rework. Support for different timers is in separated files (`fsl_tickless_systick.c`, `fsl_tickless_lptmr.c`).
 - Removed configuration option `configSYSTICK_USE_LOW_POWER_TIMER`. Low power timer is now selected by linking of appropriate file `fsl_tickless_lptmr.c`.
 - Removed `configOVERRIDE_DEFAULT_TICK_CONFIGURATION` in RVDS port. Use of `attribute((weak))` is the preferred solution. Not same as `_weak`!

[8.2.3]

- New features:
 - Tickless idle mode support.
 - Added template application for Kinetis Expert (KEx) tool (`template_application`).
- Other changes:
 - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (<https://github.com/FreeRTOS/FreeRTOS-Kernel>)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see [README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK](#) document.



Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in [FreeRTOS/FreeRTOS](#) repository, which contains pre-configured demo application projects under [FreeRTOS/Demo](#) directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the [Developer Documentation](#), and [API Reference](#).

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#).

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a freertos_config library (typically an INTERFACE library) The following assumes the directory structure:

– include/FreeRTOSConfig.h

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
INTERFACE
  include
)

target_compile_definitions(freertos_config
INTERFACE
  projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to `freertos_config`:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - `list.c`, `queue.c` and `tasks.c`. The kernel is contained within these three files. `croutine.c` implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The `./portable` directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the `./portable` directory for more information.
- The `./include` directory contains the real time kernel header files.
- The `./template_configuration` directory contains a sample `FreeRTOSConfig.h` to help jumpstart a new project. See the *FreeRTOSConfig.h* file for instructions.

Code Formatting FreeRTOS files are formatted using the “`uncrustify`” tool. The configuration file used by `uncrustify` can be found in the [FreeRTOS/CI-CD-GitHub-Actions's uncrustify.cfg](#) file.

Line Endings File checked into the FreeRTOS-Kernel repository use unix-style LF line endings for the best compatibility with git.

For optimal compatibility with Microsoft Windows tools, it is best to enable the git `autocrlf` feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the `git blame` command. You can configure git to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using [Visual Studio Code](#), commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses [cSpell](#) as part of its spelling check. The config file for which can be found at [cspell.config.yaml](#). There is additionally a [cSpell plugin for VSCode](#) that can be used as well. `.cSpellWords.txt` contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to `.cSpellWords.txt`. When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt`. Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (<https://github.com/FreeRTOS/backoffalgorithm>)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the “Full Jitter” strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the [Exponential Backoff and Jitter](#) AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library [here](#).

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the backoffAlgorithm library on a POSIX platform to retry a DNS resolution query for amazon.com.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS      ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS   ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                      RETRY_BACKOFF_BASE_MS,
                                      RETRY_MAX_BACKOFF_DELAY_MS,
                                      RETRY_MAX_ATTEMPTS );

    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
    }
```

(continues on next page)

(continued from previous page)

```

/* Retry if DNS resolution query failed. */
if( dnsStatus != 0 )
{
    /* Generate a random number and get back-off value (in milliseconds) for the next retry.
    * Note: It is recommended to use a random number generator that is seeded with
    * device-specific entropy source so that backoff calculation across devices is different
    * and possibility of network collision between devices attempting retries can be avoided.
    *
    * For the simplicity of this code example, the pseudo random number generator, rand()
    * function is used. */
    retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

    /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
    * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
    ( void ) usleep( nextRetryBackoff * 1000U );
}
} while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

return dnsStatus;
}

```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to *stdint.h* to build the backoffAlgorithm library.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C89 or later compiler like *gcc*
 - CMake 3.13.0 or later
- For running the coverage target, *gcov* is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (<https://github.com/FreeRTOS/corehttp>)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, [llhttp](#), and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety and data structure invariance through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_http_config.h* can be provided by the user application to the library.

By default, a *core_http_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a `core_http_config.h` file in the application, and adding it to the include directories for the library build. **OR**
- Defining the `HTTP_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Building the Library The `httpFilePaths.cmake` file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. `core_http_config.h`) OR `HTTP_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the `httpFilePaths.cmake` file, refer to the `coverity_analysis` library target in `test/CMakeLists.txt` file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is required for this repository's [CMock test framework](#).
- For running the coverage target, the following are required:
 - `gcov`
 - `lcov`

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the `cmake` command: `cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library [here](#) on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (<https://github.com/FreeRTOS/corejson>)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example

```

#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\":\"abc\", \"bar\":{\"foo\":\"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                             &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}

```

A search may descend through nested objects when the queryKey contains matching key strings joined by a separator, .. In the example above, bar has the value { "foo": "xyz" }. Therefore, a search for query key bar.foo would output xyz.

Building coreJSON A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, *stdbool.h* and *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h* respectively.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in `.gitmodules`, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C90 compiler like gcc
 - CMake 3.13.0 or later
 - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (<https://github.com/FreeRTOS/coremqtt>)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the [MQTT 3.1.1](#) standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreMQTT v2.1.1 source code is part of the FreeRTOS 20210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_mqtt_config.h* can be provided by the application to the library.

By default, a *core_mqtt_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `MQTT_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a *core_mqtt_config.h* file in the application, and adding it to the include directories list of the library
- OR**
- Defining the `MQTT_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = "iotuser", OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then "iotuser" can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME           "FreeRTOS"
#define OS_VERSION        "V10.4.3"
#define HARDWARE_PLATFORM_NAME  "WinSim"
#define MQTT_LIB          "coremqtt@2.1.1"

#define USERNAME_STRING   "iotuser?SDK=" OS_NAME "&Version=" OS_VERSION "&Platform=" HARDWARE_PLATFORM_NAME "&MQTTLib=" MQTT_LIB
#define USERNAME_STRING_LENGTH  ( ( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.userName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,
↳ pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, *stdbool.h* and *stdint.h*. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h*, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. *core_mqtt_config.h*) OR `MQTT_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the *mqttFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
 1. `docker build -t coremqtt .`
 2. `docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt`
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
3. Run the *cmake* command: `cmake -S test -B build`
4. Run this command to build the library and unit tests: `make -C build all`
5. The generated test executables will be present in *build/bin/tests* folder.
6. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The *test/cbmc/proofs* directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C
FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (<https://github.com/FreeRTOS/coremqtt-agent>)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the [coreMQTT](#) library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call to MQTT_ProcessLoop). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

Cloning this repository This repo uses [Git Submodules](#) to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the `--recurse-submodules` argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same `core_mqtt_config.h` configuration file as coreMQTT, with the addition of configuration constants listed at the top of `core_mqtt_agent.h` and `core_mqtt_agent_command_functions.h`. Documentation for these configurations can be found [here](#).

To provide values for these configuration values, they must be either:

- Defined in `core_mqtt_config.h` used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the [reference examples](#) below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below [reference examples](#) use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the [reference examples](#) below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same *source/* and *source/include* pattern as the agent library; its build instructions can be found [here](#).

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from *mqttFilePaths.cmake* in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the *mqttAgentFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos
FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found [here](#).

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our [active support forum](#). You can find a list of [frequently asked questions](#) [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (<https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0>)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the [Transport Layer Security \(TLS\)](#) protocol – without the application ever ‘seeing’ the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, “PKCS #11”, is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the [oasis website](#).

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#) and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 [specification](#) replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from [mbedtls](#) version 2.x or 3.x.
- **pkcs11 API header(s)** available from [OASIS](#) or [OpenSC](#)

Optionally, variables from the pkcsFilePaths.cmake file may be referenced if your project uses cmake.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the cmake FetchContent feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for gcov-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the [Linux Test Project](#)
- **perl** needed to run the lcov utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
 - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
 - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library [here](#) using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the AWS [docs](#) web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's [Platform Security Architecture](#).
- Microchip's [cryptoauthlib](#).
- Infineon's [Optiga Trust X](#).

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (<https://github.com/FreeRTOS/freertos-plus-tcp>)(4.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

Introduction This branch contains unified IPv4 and IPv6 functionalities. Refer to the Getting started Guide (found [here](#)) for more details.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the [MISRA coding standard](#). Any deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). The library is validated for memory safety and data structure invariance through the [CBMC automated reasoning tool](#) for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

Getting started The easiest way to use the 4.0.0 version of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found [here](#)) Another way is to start with the pre-configured demo application project (found in [this directory](#)). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the [Documentation](#), and [API Reference](#).

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#). Please also refer to [FAQ](#) for frequently asked questions.

Also see the [Submitting a bugs/feature request](#) section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a `source` directory. This change requires modification of any existing project(s) to include the modified source files and directories. There are examples on how to use the new files and directory structure. For an example based on the Xilinx Zynq-7000, use the code in this [branch](#) and follow these [instructions](#) to build and run the demo.

FreeRTOS-Plus-TCP V3.1.0 source code(.c .h) is part of the FreeRTOS 202210.00 LTS release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to [this](#).

Note: After running the script, while the `.c` files will have same names as the pre V3.0.0 source, the files in the `include` directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from [here](#).

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing `python --version`.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory that was created using the *Cloning this repository* step above. And then run `python <Path/to/the/script>/GenerateOriginalFiles.py`.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        master #Note: Best practice to use specific git-hash or tagged version
  GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.


```

set( FREERTOS_PLUS_FAT_DEV_SUPPORT OFF CACHE BOOL "" FORCE)
# Select the native compile PORT
set( FREERTOS_PLUS_FAT_PORT "POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. Zynq 2019_3 version of port
  set(FREERTOS_PLUS_FAT_PORT "ZYNQ_2019_3" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)

```

Consuming stand-alone This repository uses [Git Submodules](#) to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```

git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Using SSH:

```

git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Porting The porting guide is available on [this page](#).

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
 - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
 - This directory contains all the tests (unit tests and CBMC) and the dependencies ([FreeRTOS-Kernel/Litani-port](#)) the tests require.
- source/portable
 - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compilers.
- source/include
 - The include directory has all the ‘core’ header files of FreeRTOS-Plus-TCP source.
- source
 - This directory contains all the [.c] source files.

Note At this time it is recommended to use `BufferAllocation_2.c` in which case it is essential to use the `heap_4.c` memory allocation scheme. See [memory management](#).

Kernel sources The FreeRTOS Kernel Source is in [FreeRTOS/FreeRTOS-Kernel repository](#), and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at `./test/FreeRTOS-Kernel` directory.

CBMC The `test/cbmc/proofs` directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material [here](#).

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).