



MCUXpresso SDK Documentation

Release 25.09.00-pvw2



NXP
Aug 12, 2025



Table of contents

1	FRDM-MCXL255	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	55
1.3.1	Getting Started with MCUXpresso SDK Repository	55
1.4	Release Notes	68
1.4.1	MCUXpresso SDK Release Notes	68
1.5	ChangeLog	71
1.5.1	MCUXpresso SDK Changelog	71
1.6	Currently supported drivers	72
1.7	Driver API Reference Manual	73
1.8	Middleware Documentation	73
1.8.1	Multicore	73
1.8.2	FreeRTOS	73
2	MCXL255	75
2.1	ADVC Driver	75
2.2	ADVC	75
2.3	AOI: Crossbar AND/OR/INVERT Driver	77
2.4	AON_LPADC: 12-bit single-ended SAR Analog-to-Digital Converter Driver	80
2.5	CDOG	94
2.6	CRC: Cyclic Redundancy Check Driver	97
2.7	CTIMER: Standard counter/timers	100
2.8	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	110
2.9	eDMA core Driver	140
2.10	eDMA soc Driver	147
2.11	ERM: error recording module	148
2.12	FGPIO Driver	150
2.13	FREQME: Frequency Measurement	150
2.14	GLIKEY	150
2.15	GLIKEY	150
2.16	GPIO: General-Purpose Input/Output Driver	155
2.17	GPIO Driver	158
2.18	INPUTMUX: Input Multiplexing Driver	163
2.19	KPP: KeyPad Port Driver	193
2.20	Common Driver	195
2.21	LPACMP: Low-Power Analog Comparator Driver	207
2.22	LPADC: 12-bit SAR Analog-to-Digital Converter Driver	212
2.23	Lpc_freqme	233
2.24	LPCMP: Low Power Analog Comparator Driver	238
2.25	LPI2C: Low Power Inter-Integrated Circuit Driver	248
2.26	LPI2C Master Driver	249
2.27	LPI2C Master DMA Driver	263
2.28	LPI2C Slave Driver	266
2.29	LPSPi: Low Power Serial Peripheral Interface	276

2.30	LPSPI Peripheral driver	276
2.31	LPSPI eDMA Driver	297
2.32	LPTMR: Low-Power Timer	304
2.33	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	310
2.34	LPUART Driver	310
2.35	LPUART eDMA Driver	328
2.36	MCX_CMC: Core Mode Controller Driver	331
2.37	MU: Messaging Unit	344
2.38	OSTIMER: OS Event Timer Driver	356
2.39	Pls_pmu	360
2.40	PORT: Port Control and Interrupts	362
2.41	POWER Driver	370
2.42	QTM: Quad Timer Driver	386
2.43	Reset Driver	396
2.44	ROMAPI Driver	398
2.45	RTC: Real Time Clock	401
2.46	SLCD: Segment LCD Driver	415
2.47	SMM: Sleep Mode Manager Driver	425
2.48	TRDC: Trusted Resource Domain Controller	432
2.49	Trdc_core	455
2.50	UTICK: MicroTick Timer Driver	469
2.51	WUU: Wakeup Unit driver	470
2.52	WWD: Windowed Watchdog Timer Driver	475
3	Middleware	479
3.1	MultiCore	479
3.1.1	Multicore SDK	479
4	RTOS	575
4.1	FreeRTOS	575
4.1.1	FreeRTOS kernel	575
4.1.2	FreeRTOS drivers	581
4.1.3	backoffalgorithm	581
4.1.4	corehttp	584
4.1.5	corejson	586
4.1.6	coremqtt	589
4.1.7	coremqtt-agent	592
4.1.8	corepkcs11	596
4.1.9	freertos-plus-tcp	599

This documentation contains information specific to the frdm-mcx1255 board.

Chapter 1

FRDM-MCXL255

1.1 Overview

The FRDM-MCXL255 board is a design and evaluation platform based on the NXP MCXL255 microcontroller (MCU). The MCXL255 MCU is a low-power microcontroller for industrial and consumer Internet of Things (IoT) applications. It has one Arm Cortex-M33 core running at speeds of up to 96 MHz and one Arm Cortex-M0+ core up to 10 MHz. This series features our Adaptive Dynamic Voltage Control (ADVC) for optimized power consumption at low frequency operation. Compared to traditional low-power MCUs, a dedicated ultra-low-power (ULP) Sense Domain allows operation of low-power peripherals while keeping the main core in Deep Power Mode. This avoids event triggering and keeps data acquisition to extremely low power levels.

The board is compatible with Arduino boards (Arduino UNO R3 and Arduino A4/A5), MikroE click boards, and Pmod boards. It can be used with IAR Embedded Workbench development tool.

For debugging the MCXA276 MCU, the FRDM-MCXL255 board uses an onboard (OB) debug probe, MCU-Link lite OB, which is based on another NXP MCU: LPC55S16

MCU device and part on board is shown below:

- Device: MCXL255
- PartNumber: MCXL255VDF

1.2 Getting Started with MCUXpresso SDK Package


1.2.1 Getting Started with MCUXpresso SDK Package

Overview

The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

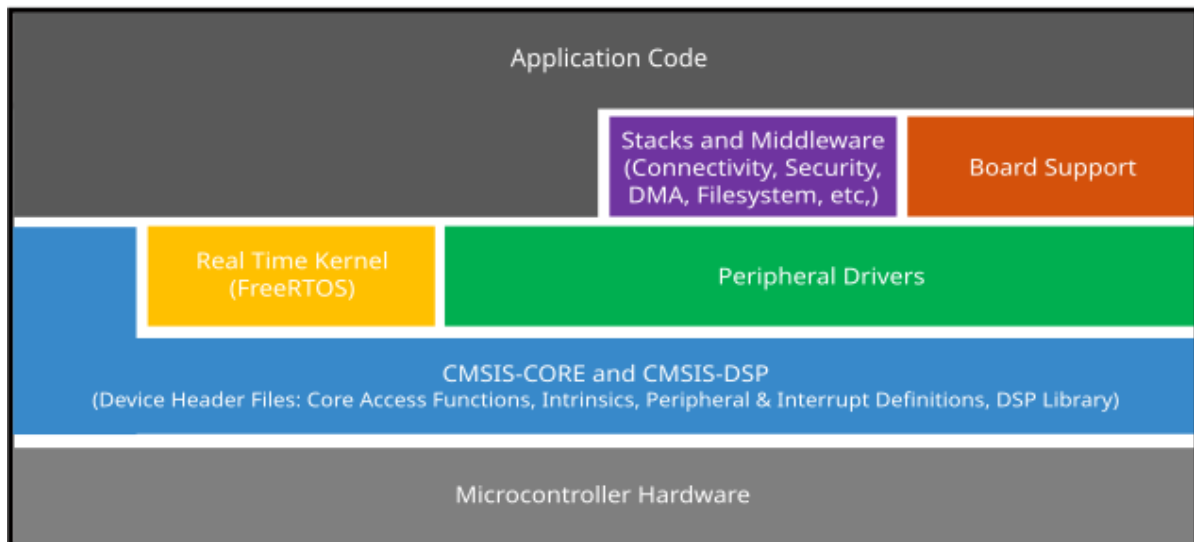

MCUXpresso SDK board support package folders


MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):

- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

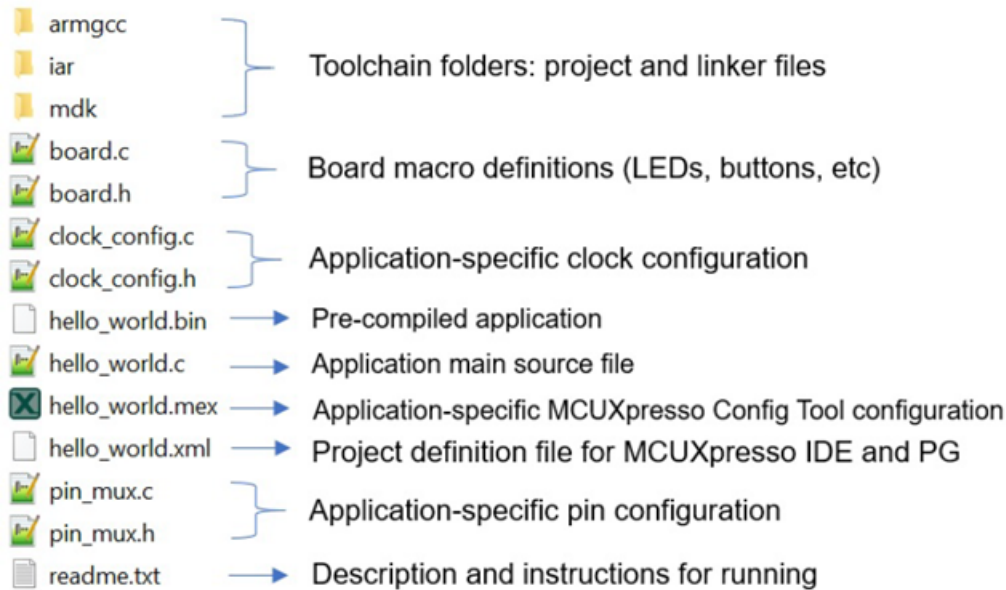

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the `rtos` folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.

Run a demo using MCUXpresso IDE

Note: Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.


This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is

used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

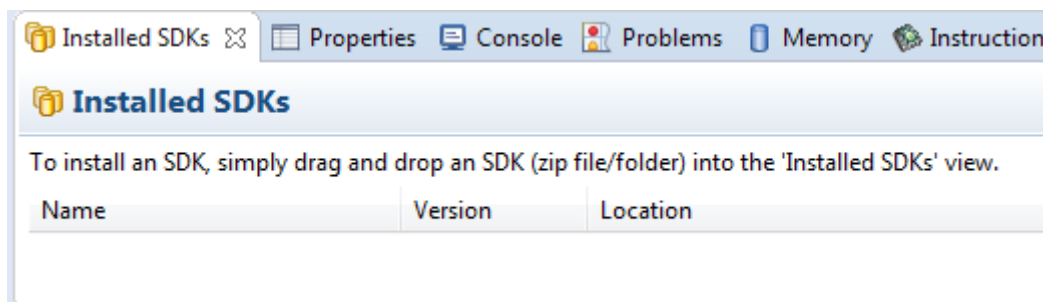

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

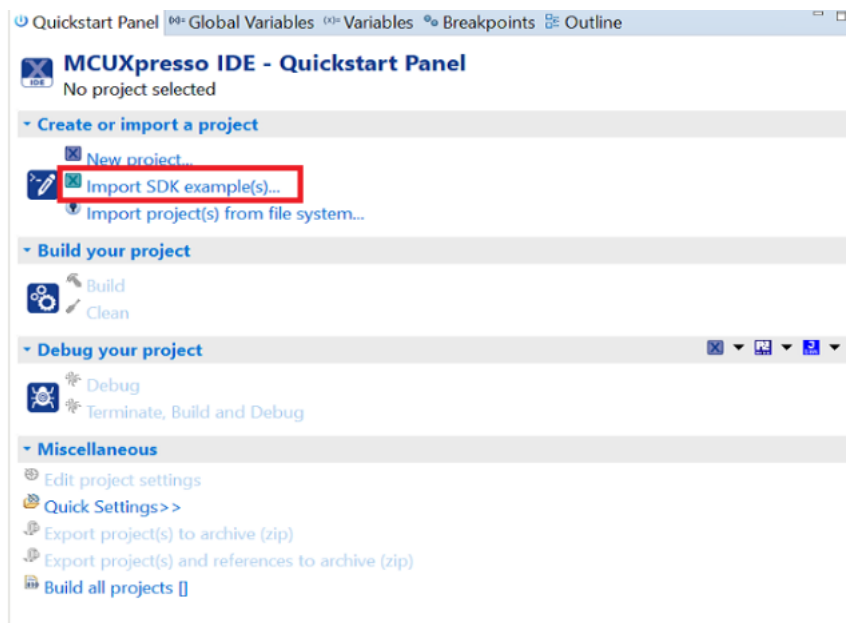

3. Expand the `demo_apps` folder and select `hello_world`.
4. Click **Next**.

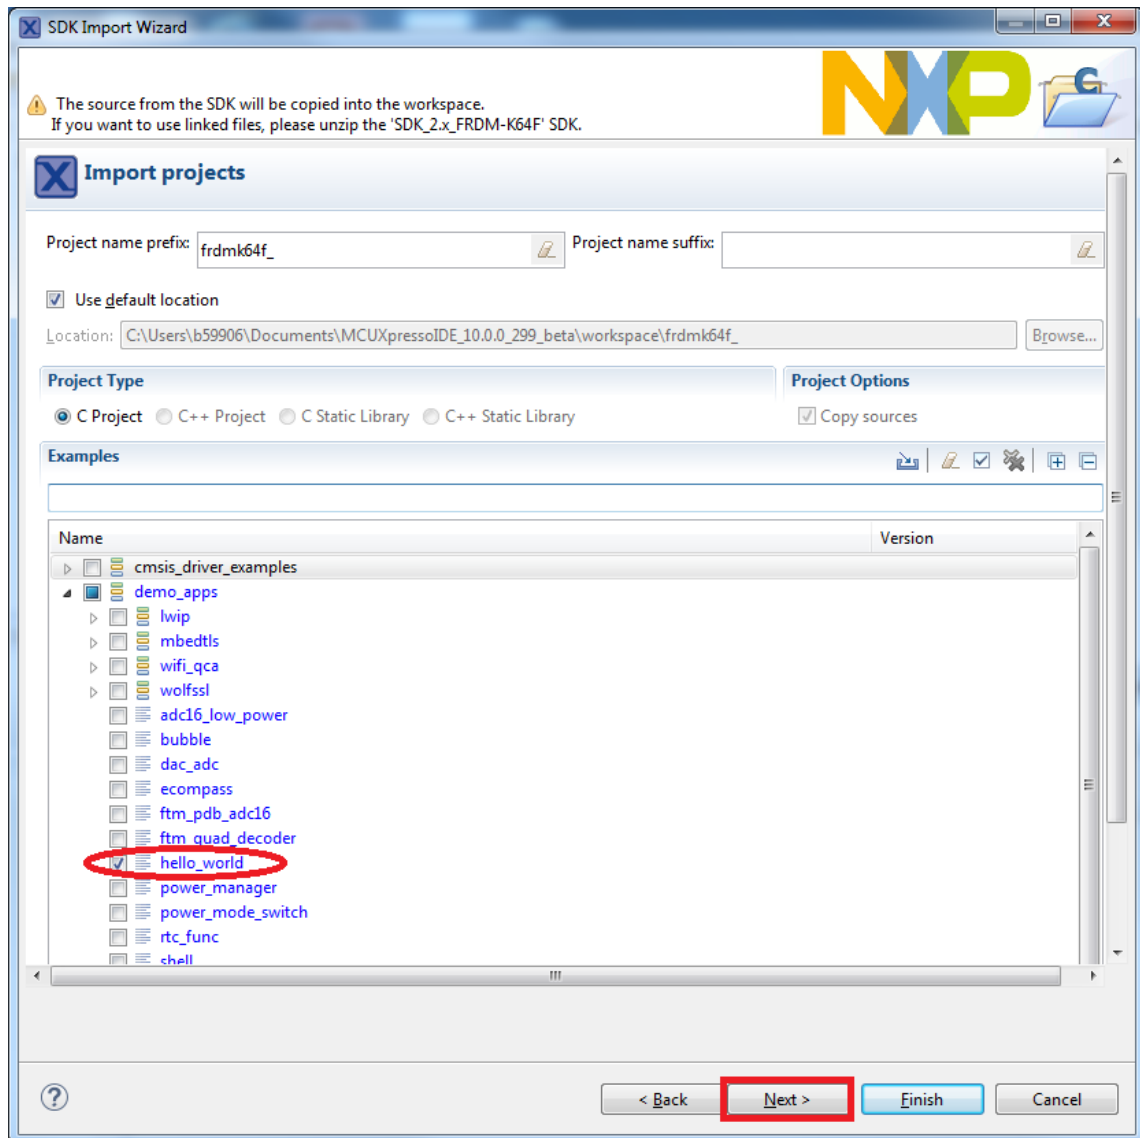


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference `BOARD_DEBUG_UART_BAUDRATE` variable in `board.h` file)
 2. No parity

3. 8 data bits

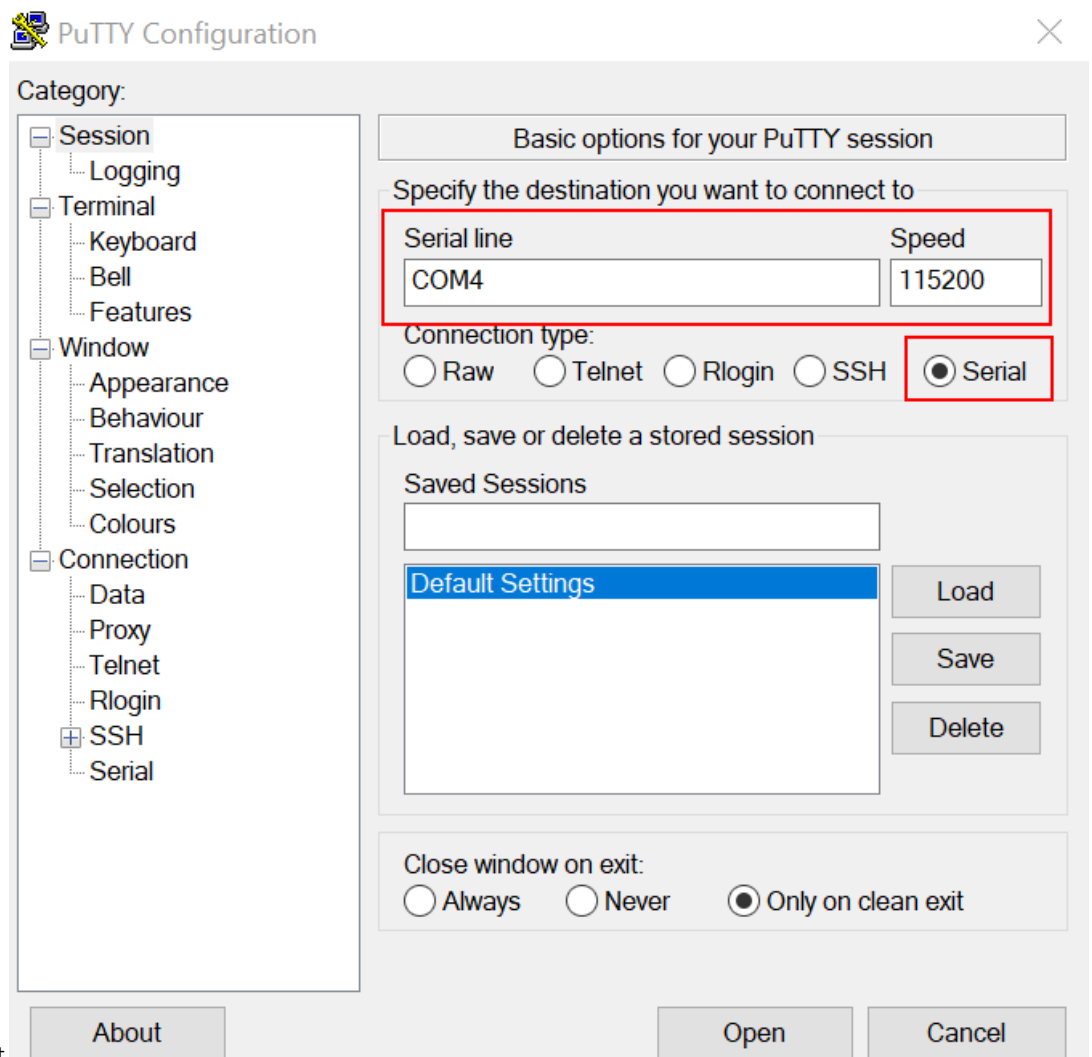

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

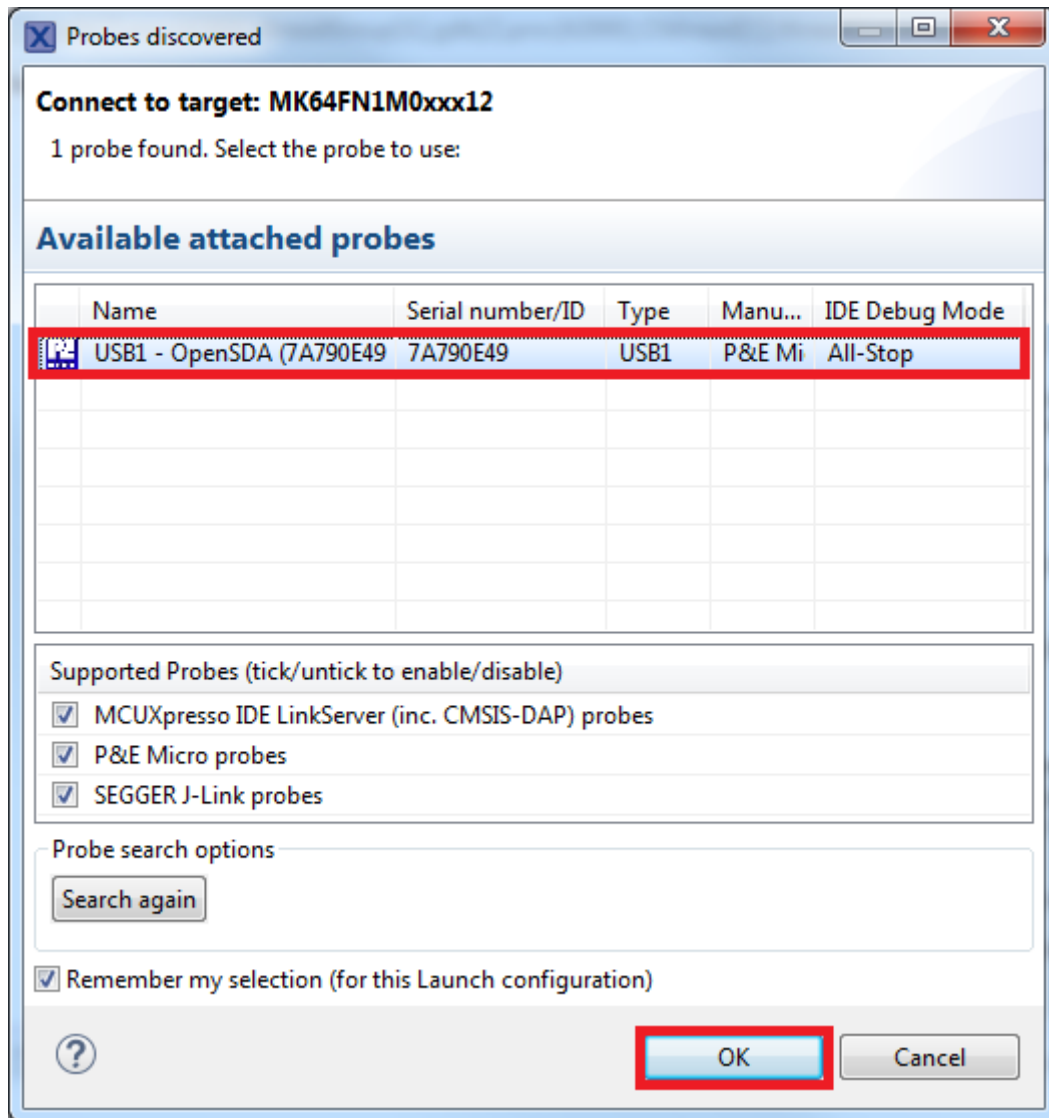

6. The application is downloaded to the target and automatically runs to `main()`.
7. Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

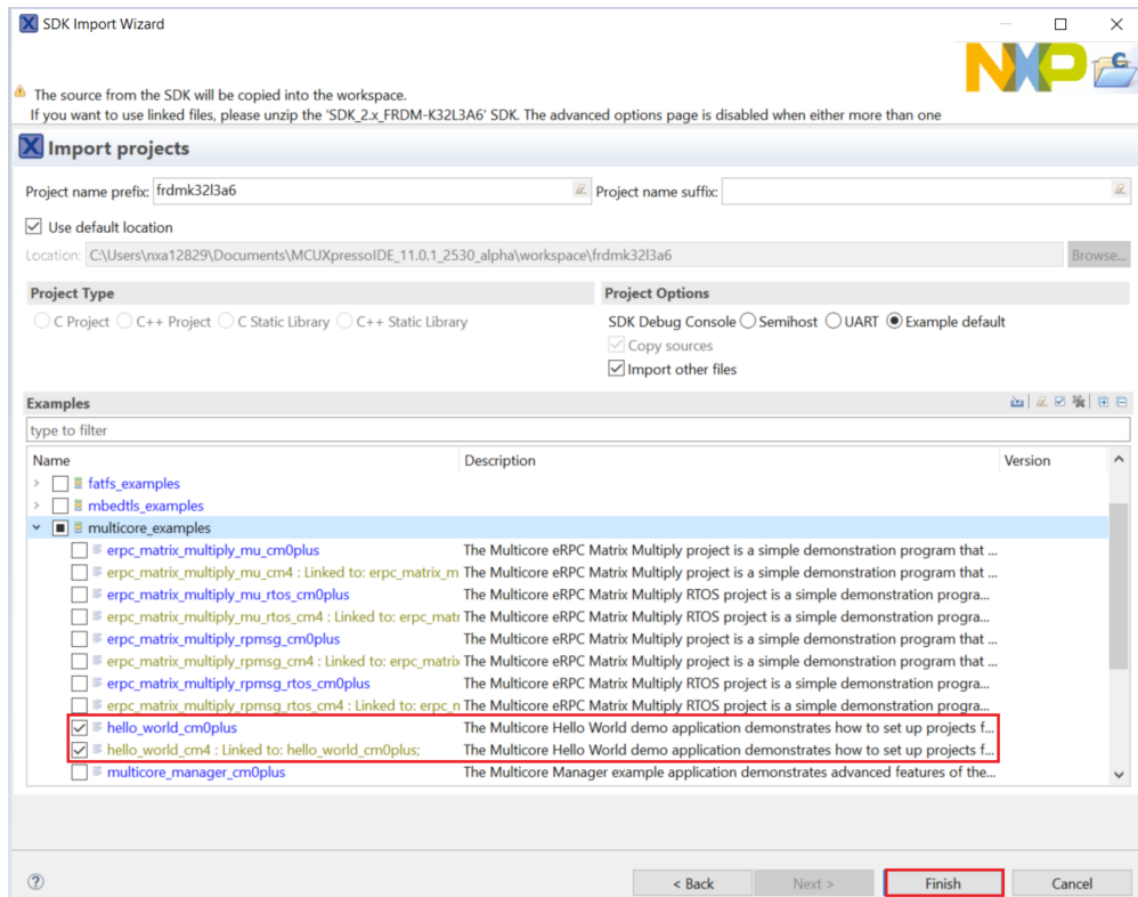


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

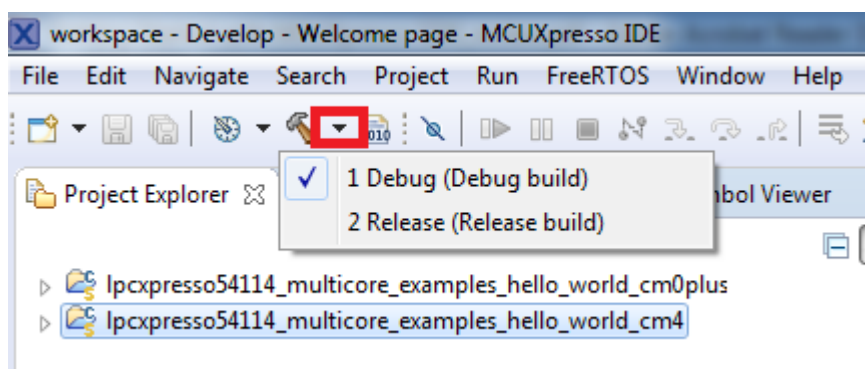




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations -> Set Active -> Release**. This alternate navigation using the menu item is **Project -> Build Configuration -> Set Active -> Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

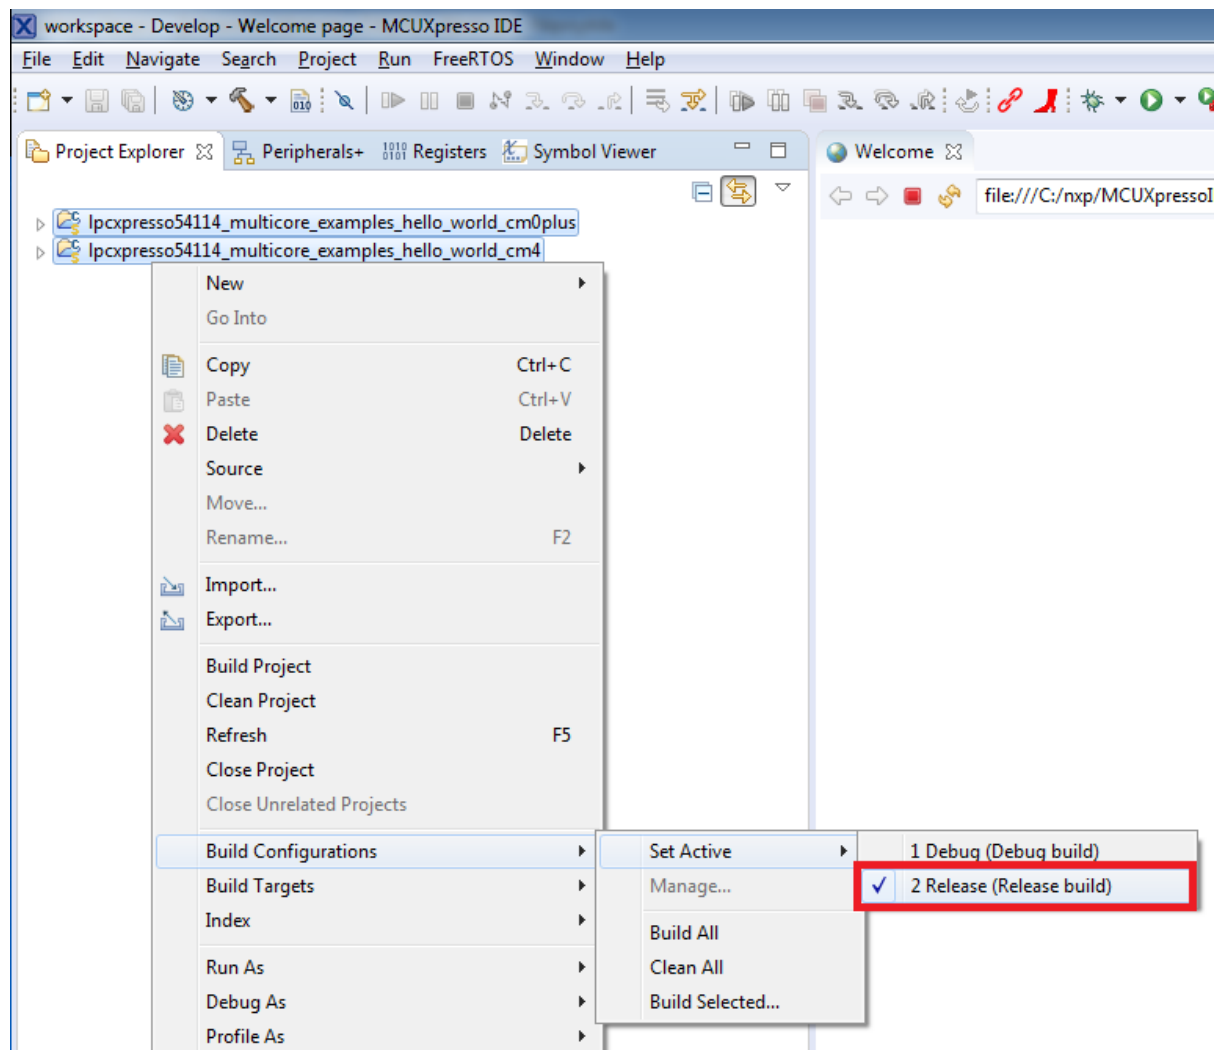


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

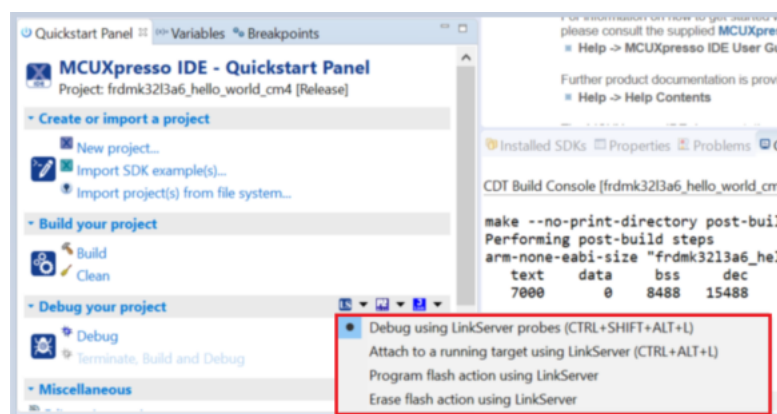

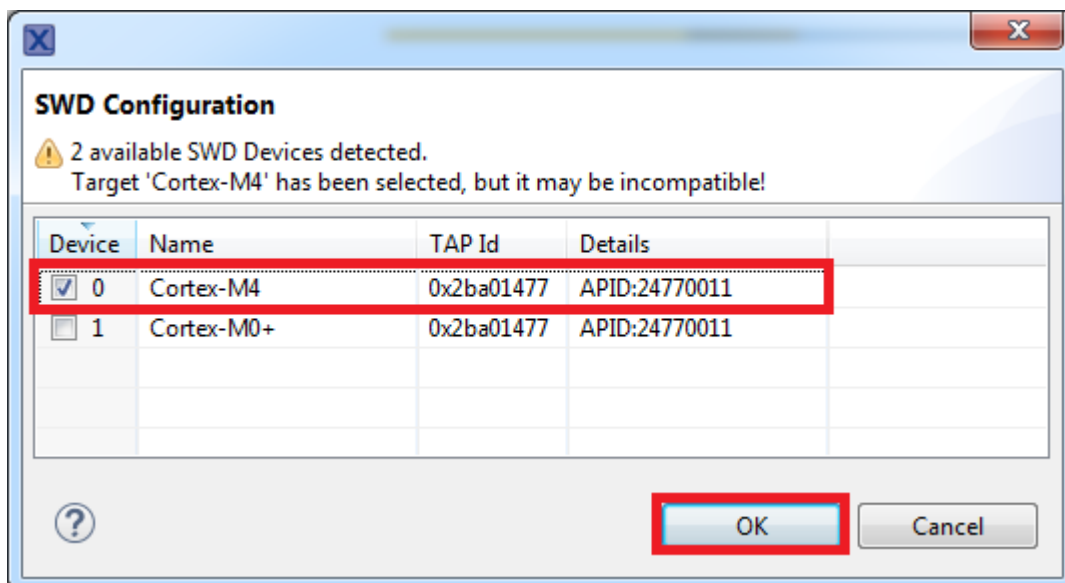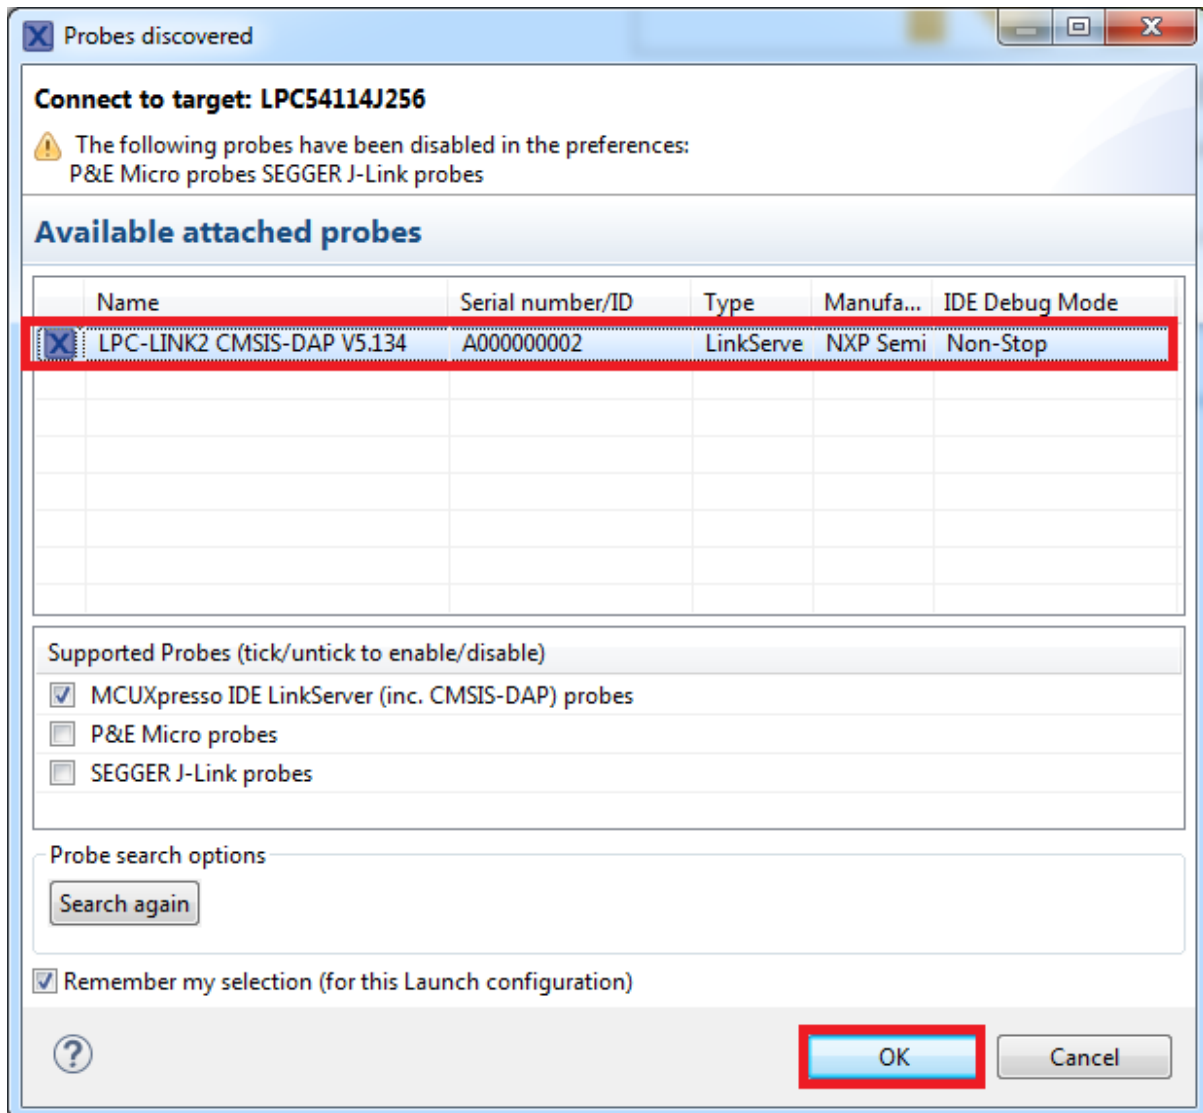

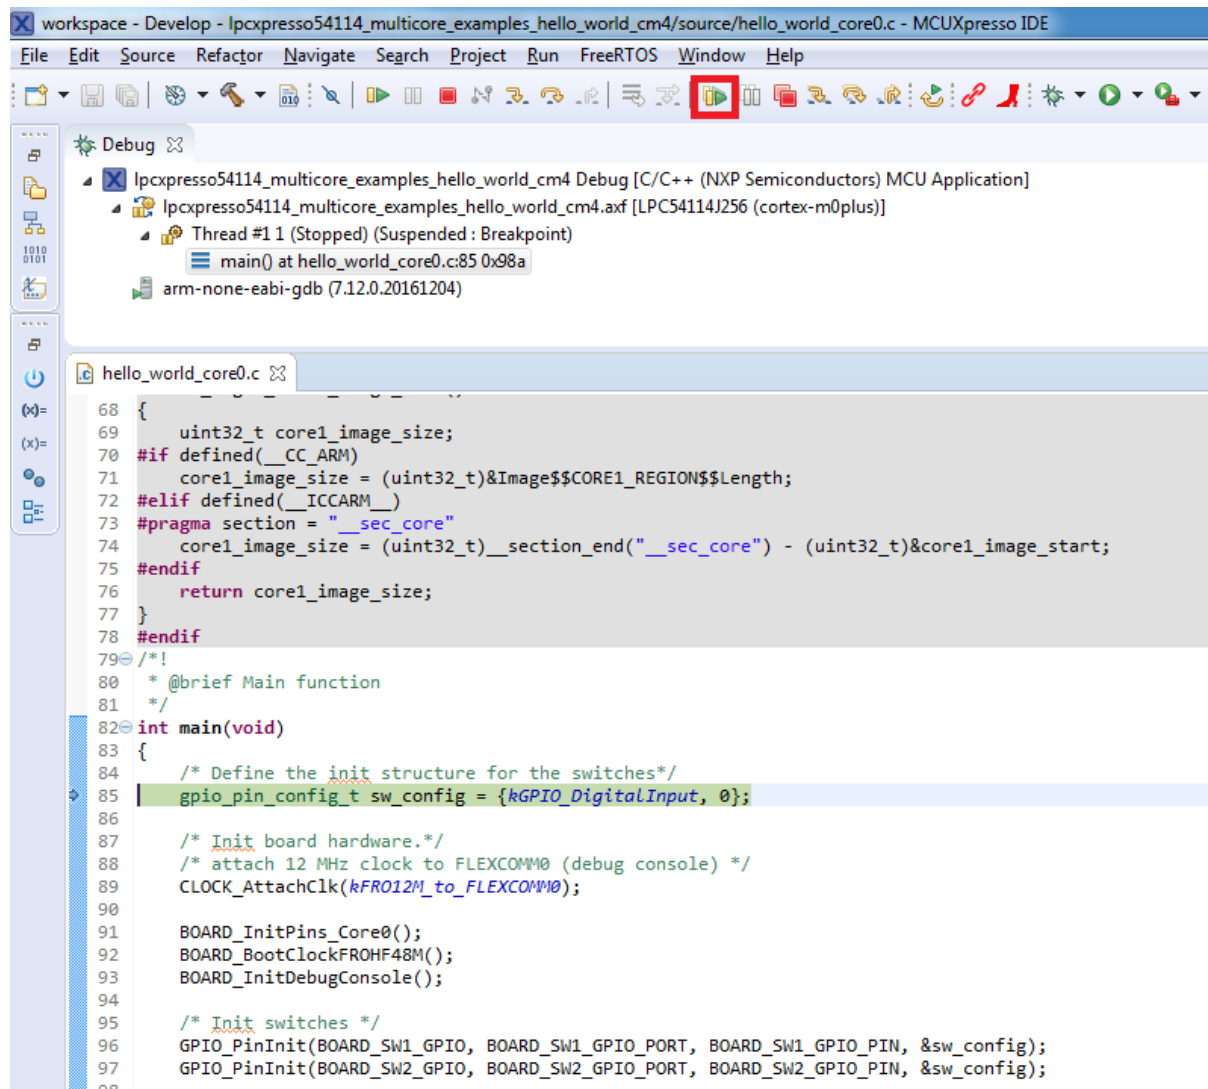



After clicking the “Resume All Debug sessions” button, the hello_world multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

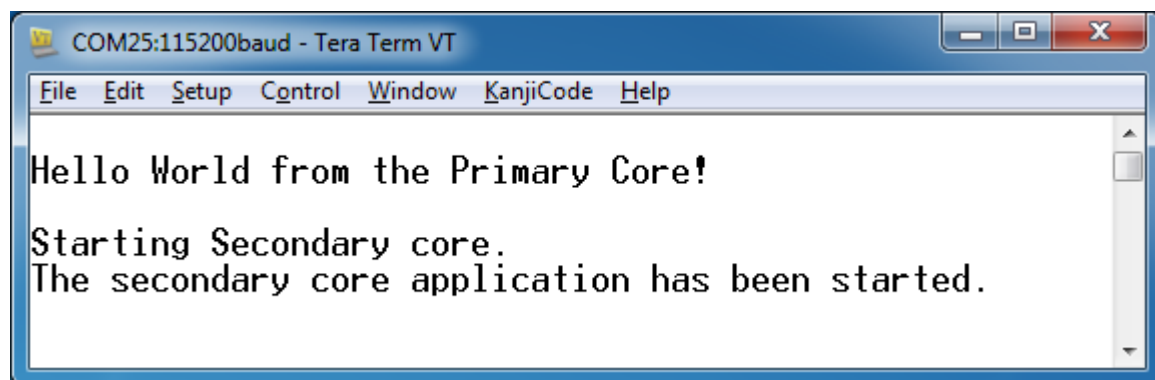


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the lpcxpresso54114_multicore_examples_hello_world_cm0plus project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

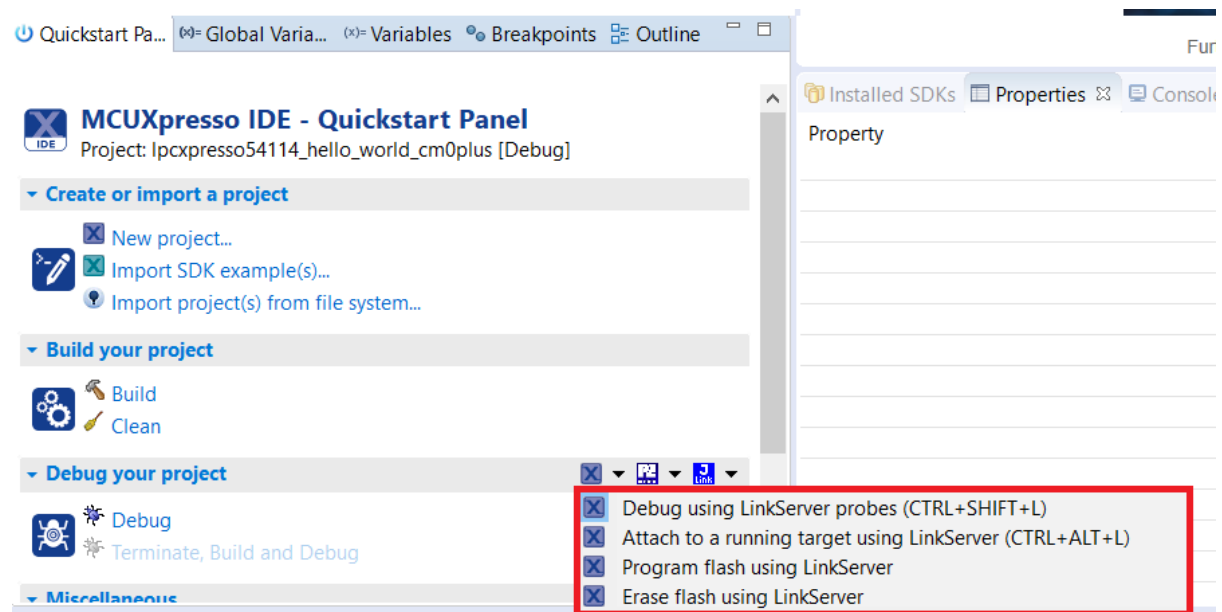


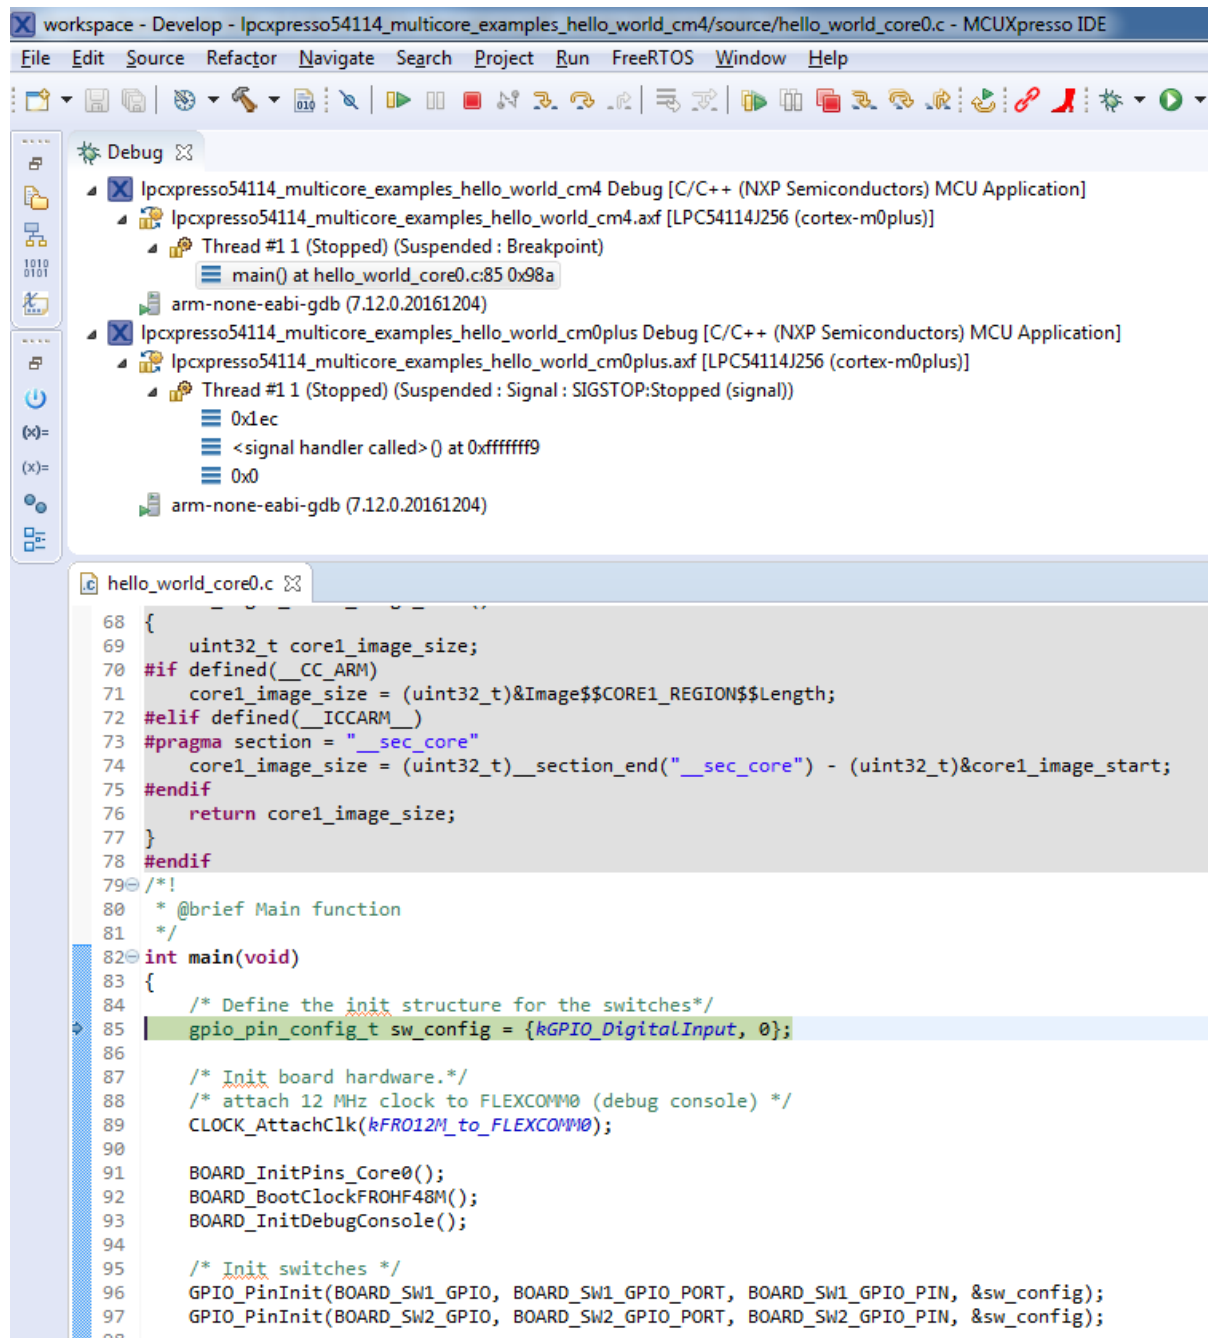


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

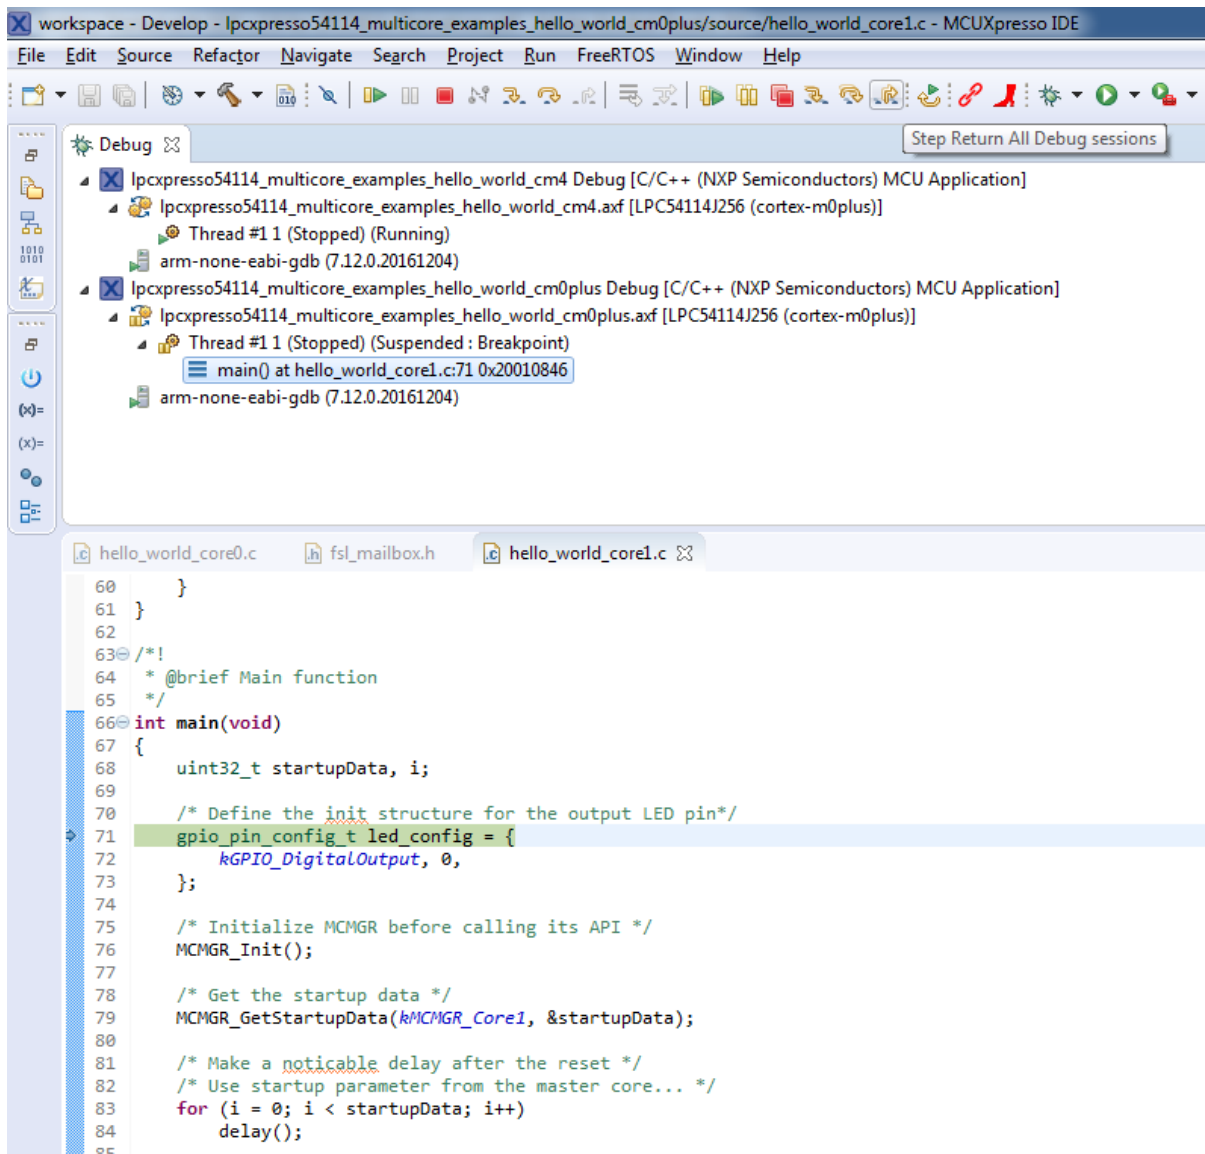


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

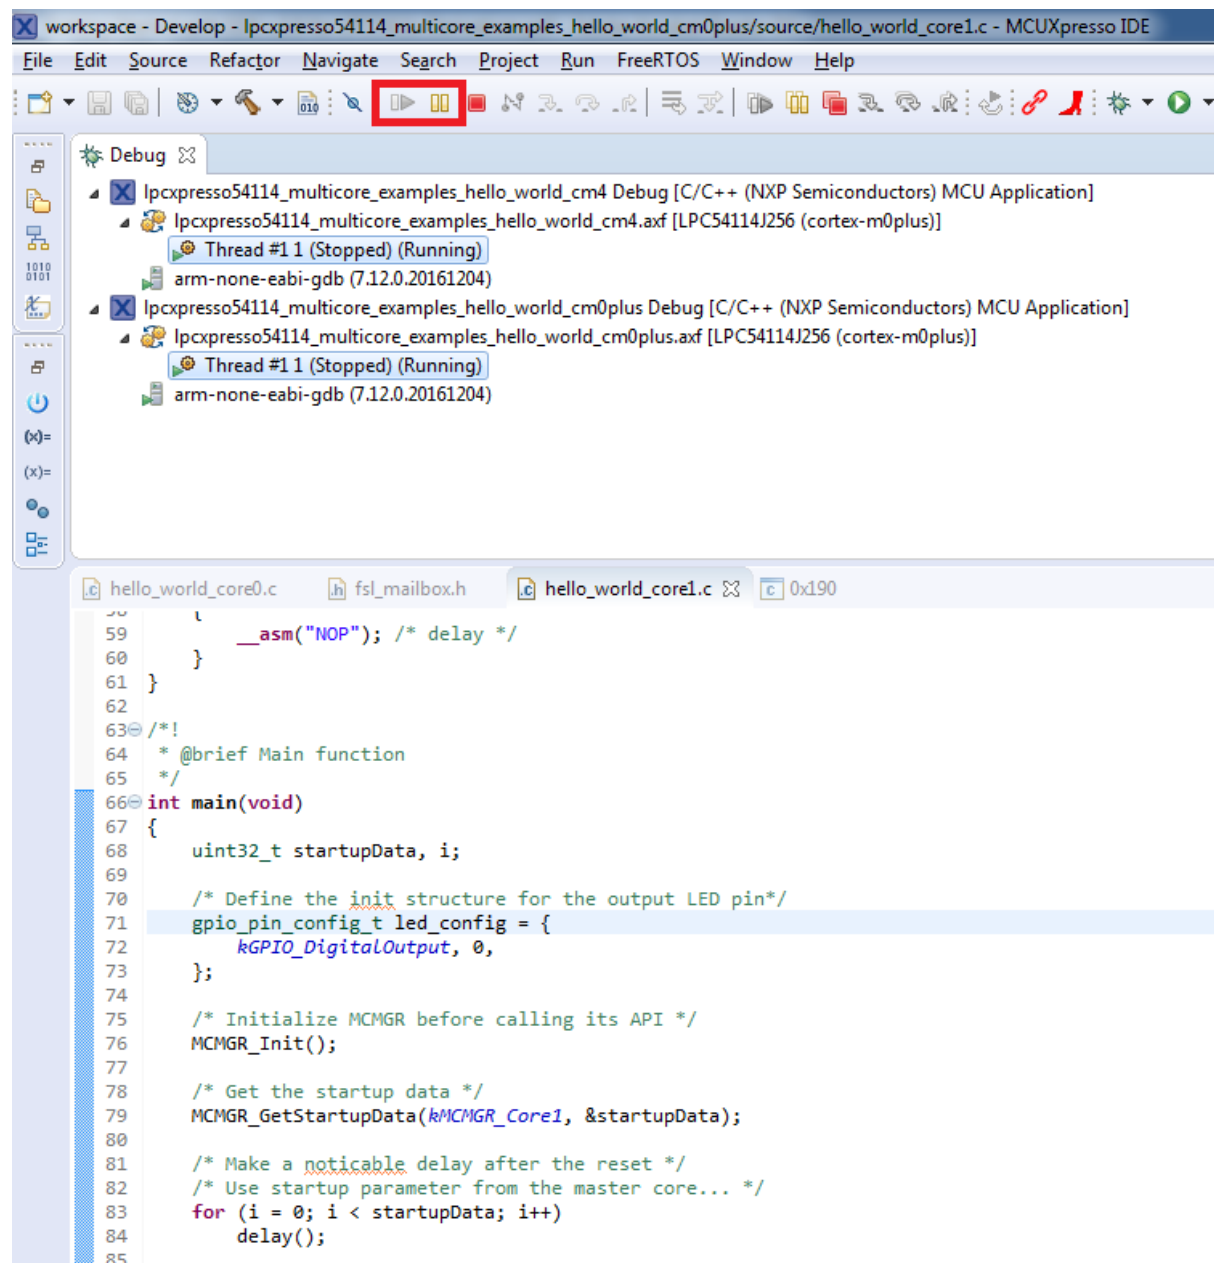

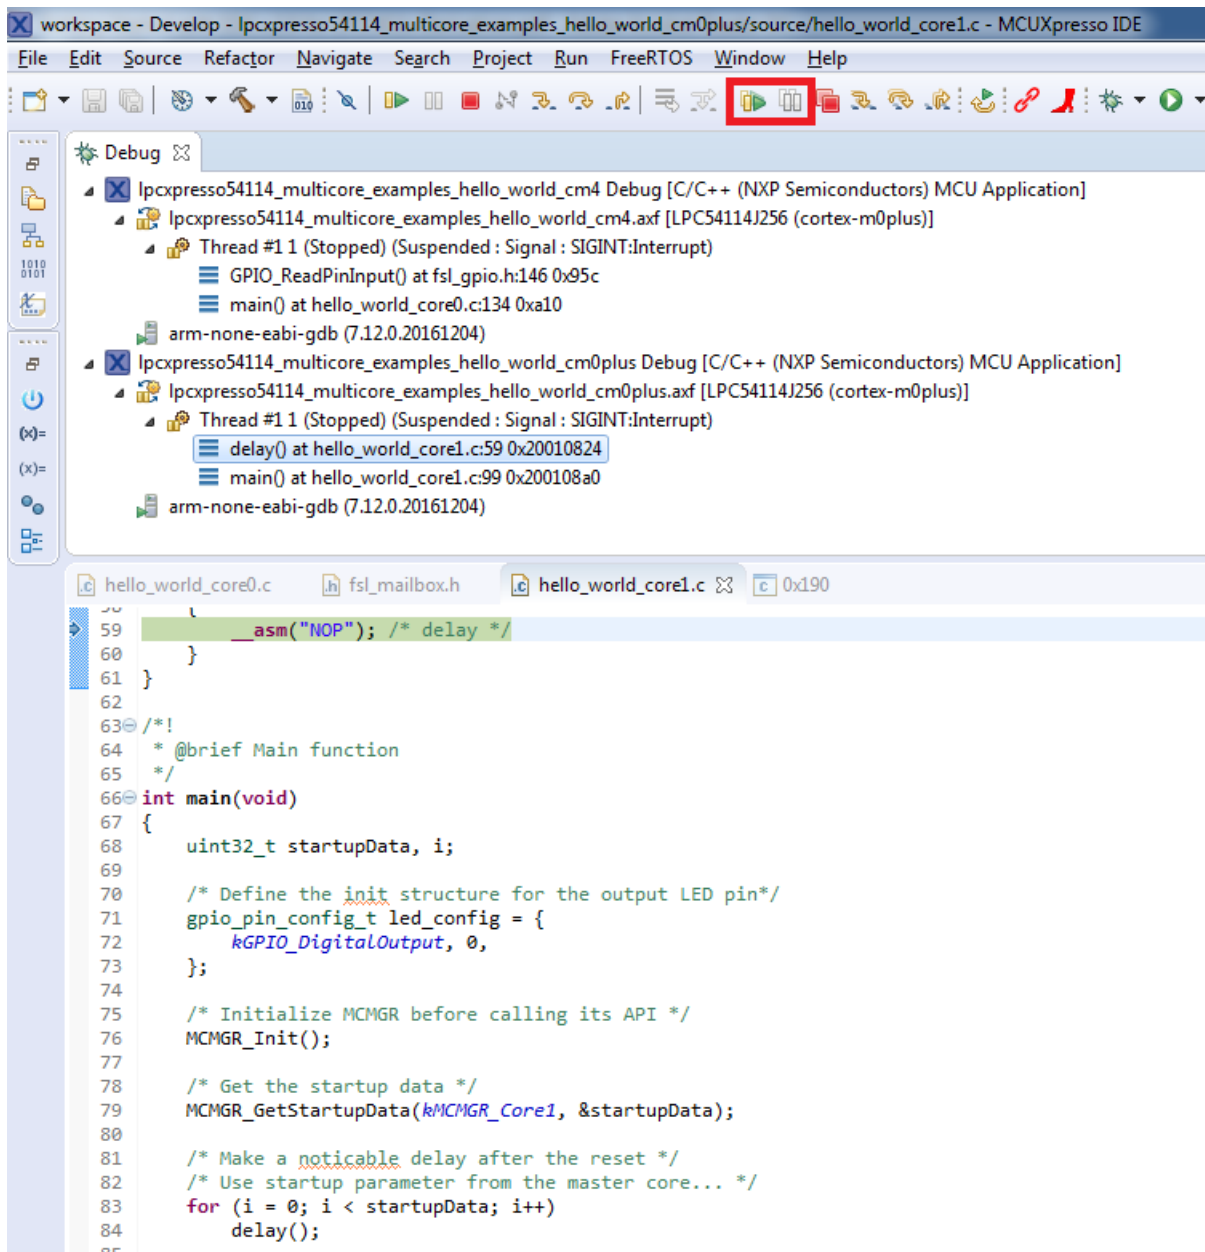


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the `hello_world` example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the `trustzone_examples/` folder and select `hello_world_s`. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

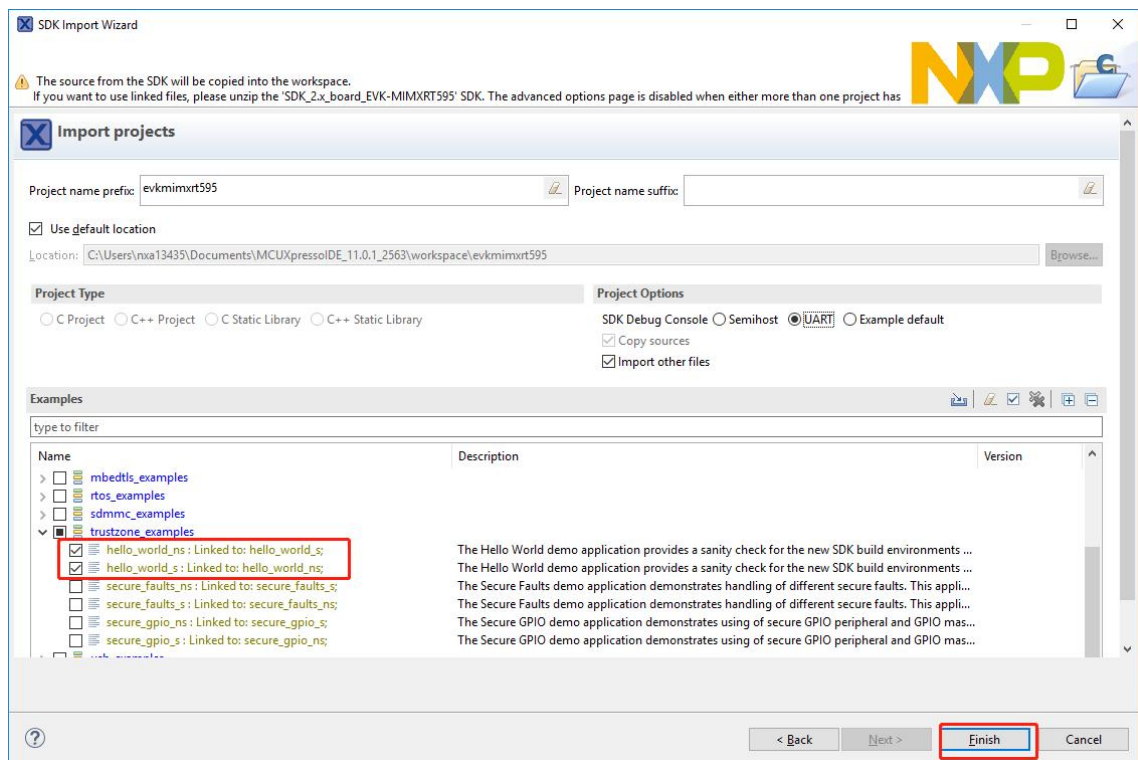


3. Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

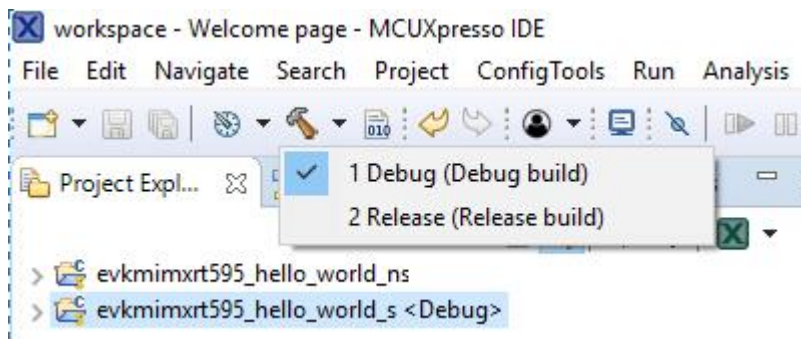


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

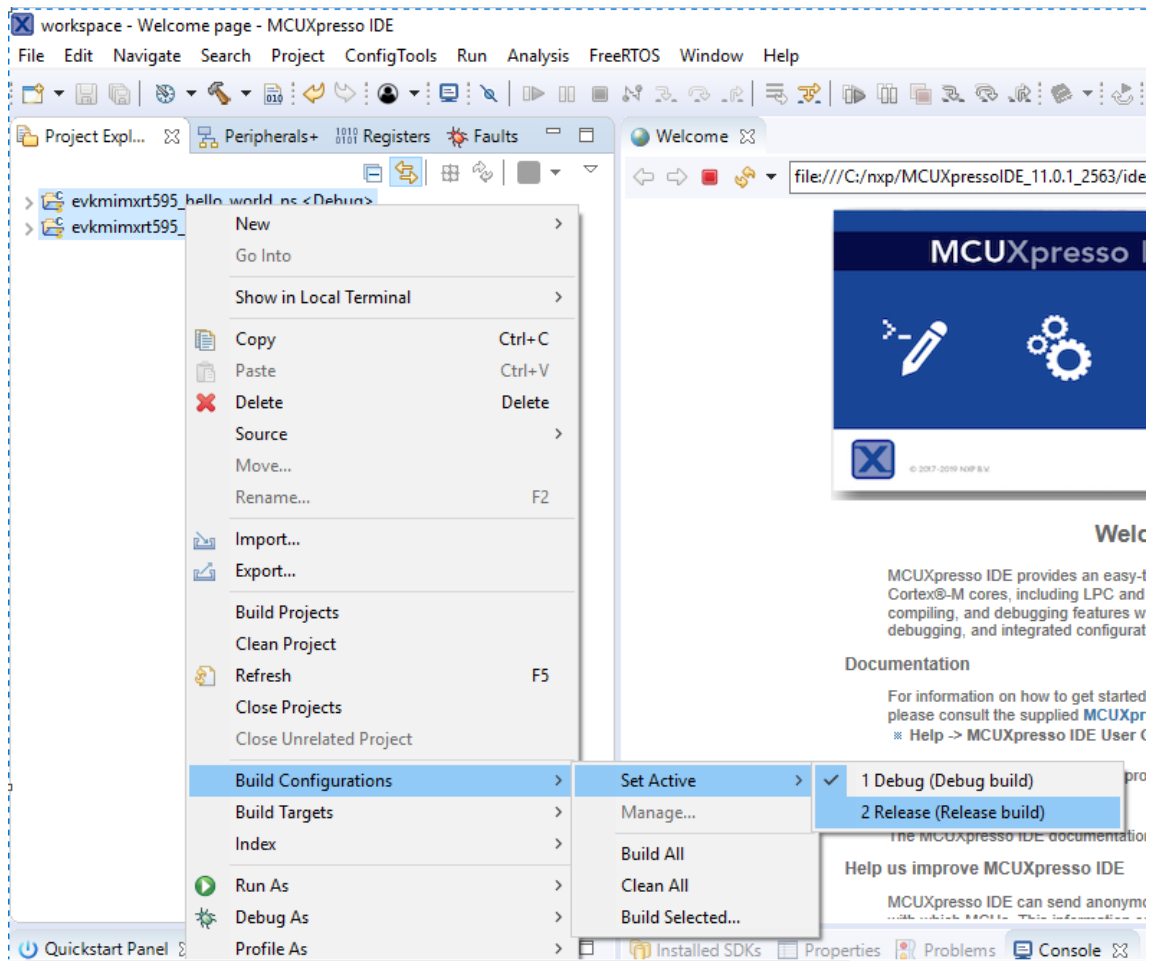

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring <board_name>_hello_world_s is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

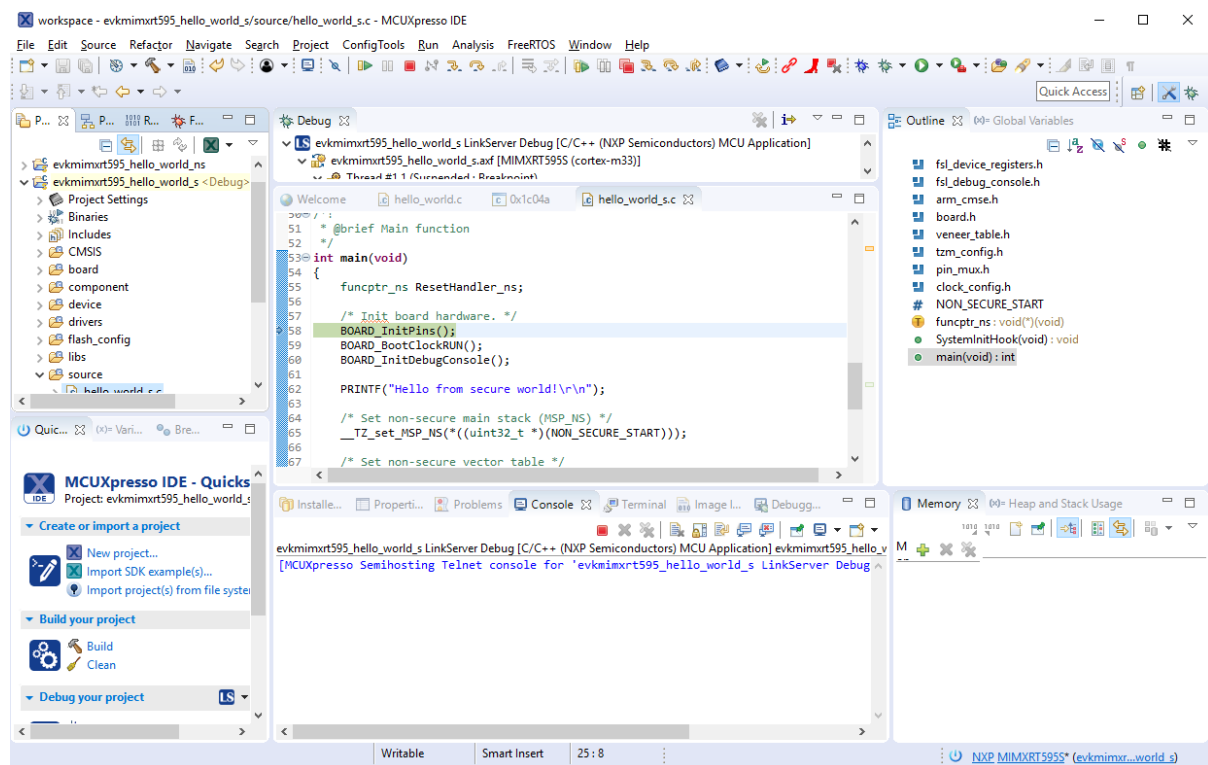

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

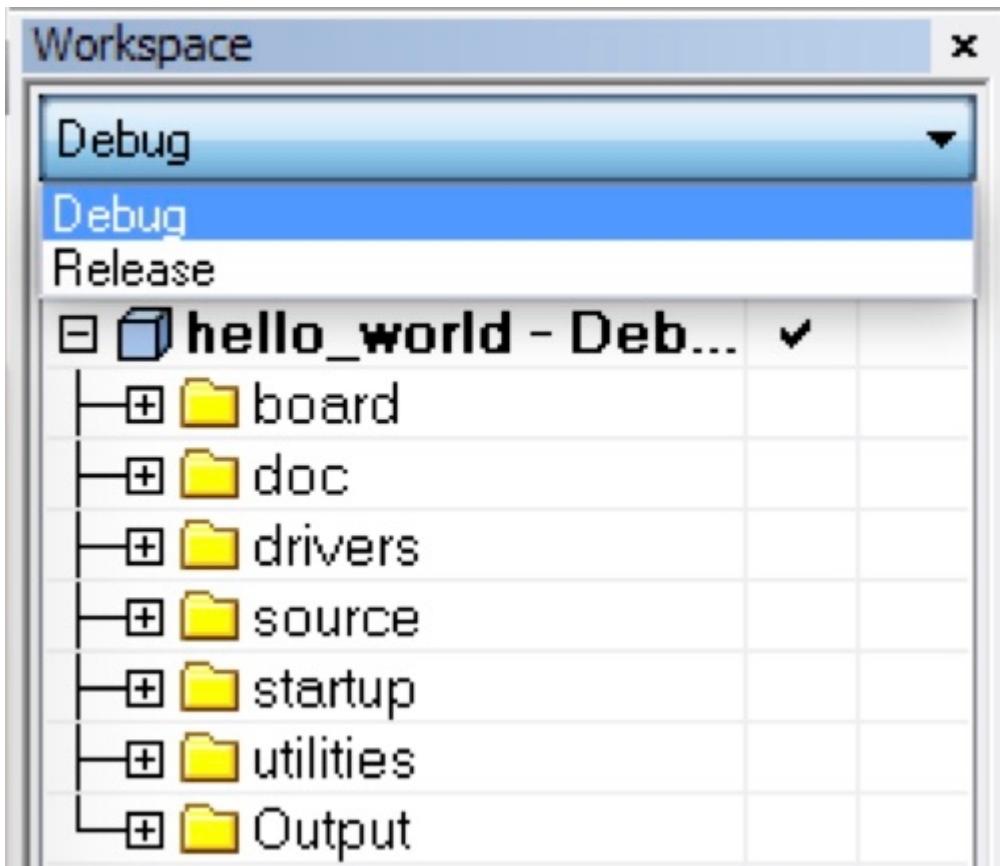


3. To build the demo application, click **Make**, highlighted in red in following figure.

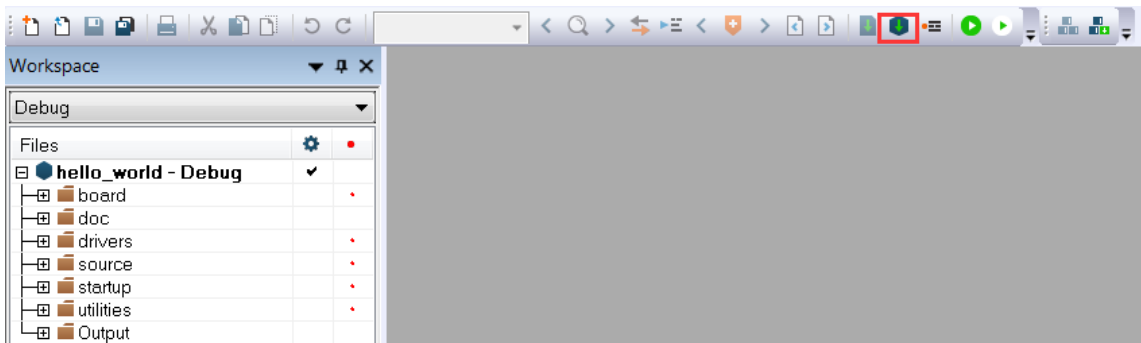

4. The build completes without errors.

Run an example application To download and run the application, perform these steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 2. No parity
 3. 8 data bits

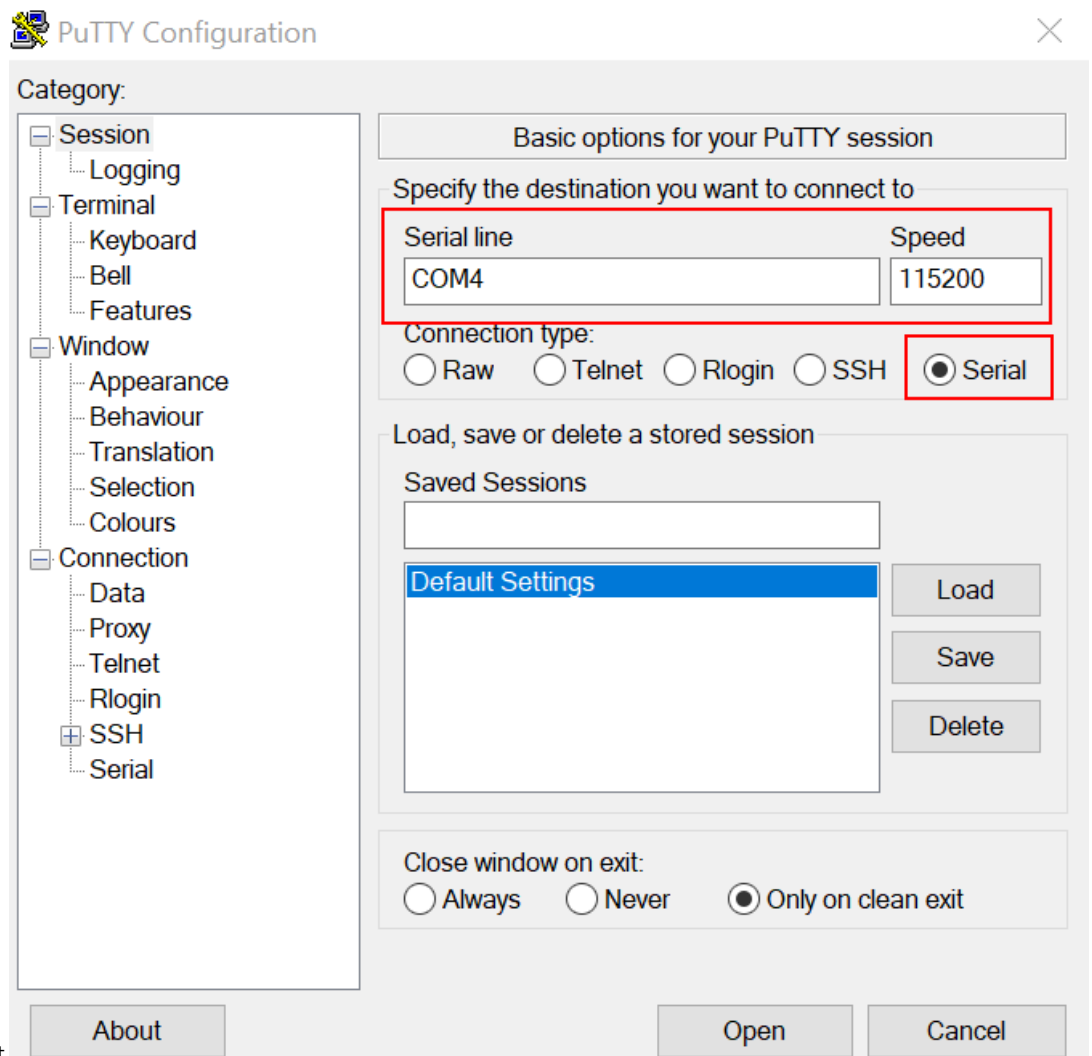


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the `main()` function.

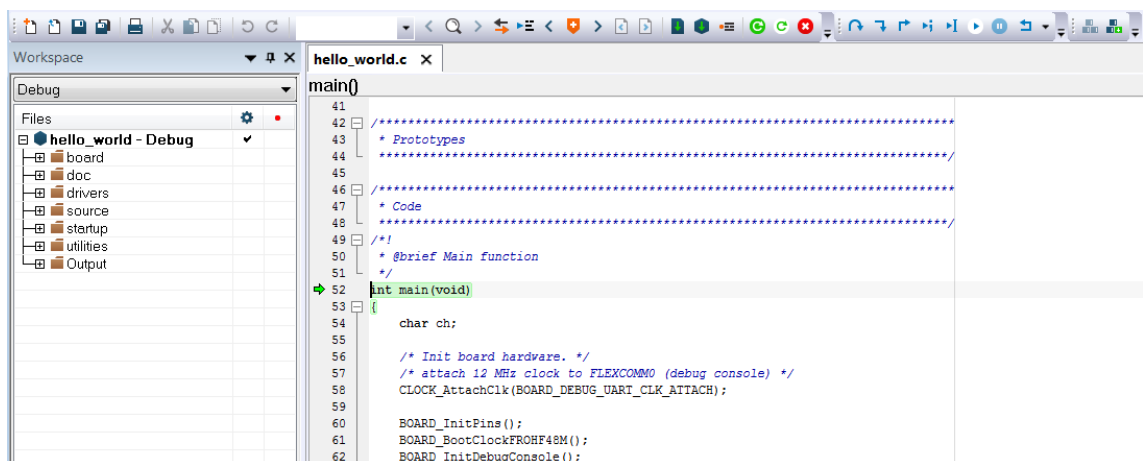

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
↪ eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*function`.

Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

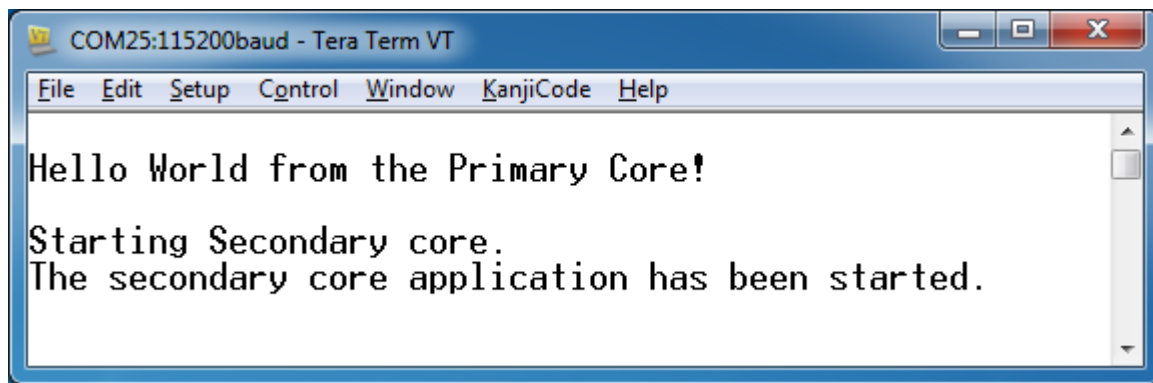

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_  
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.  
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

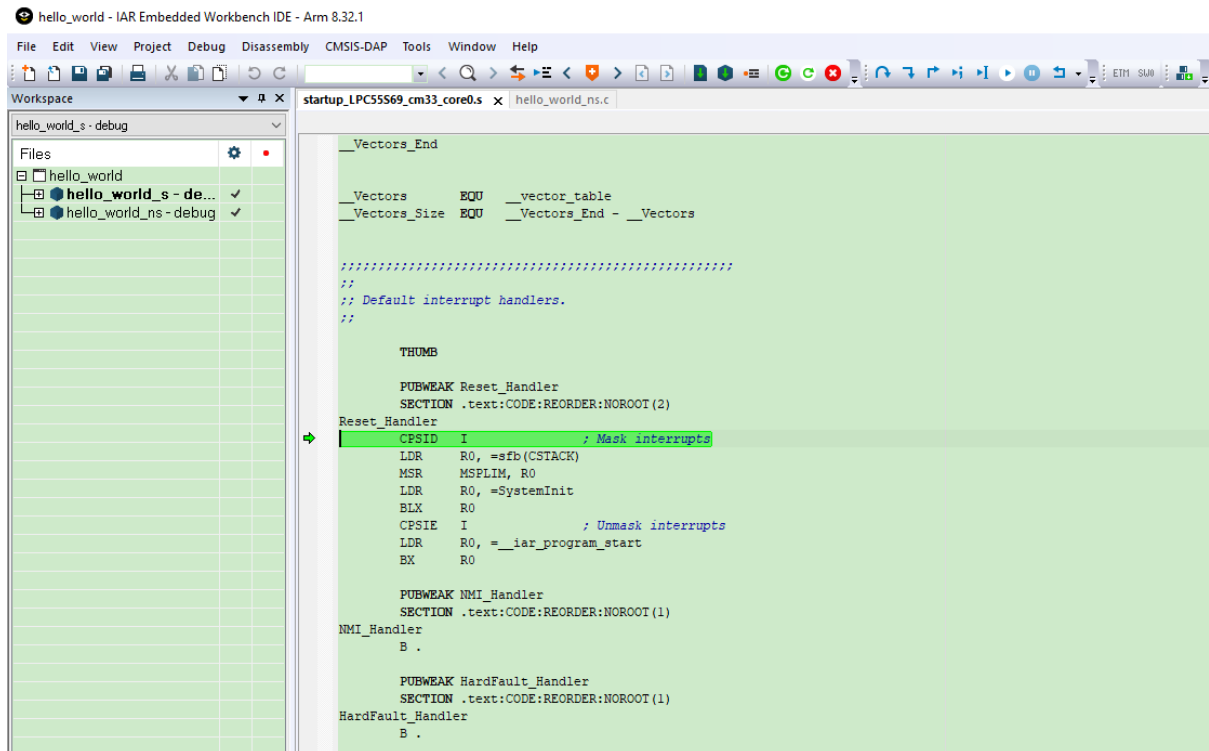


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

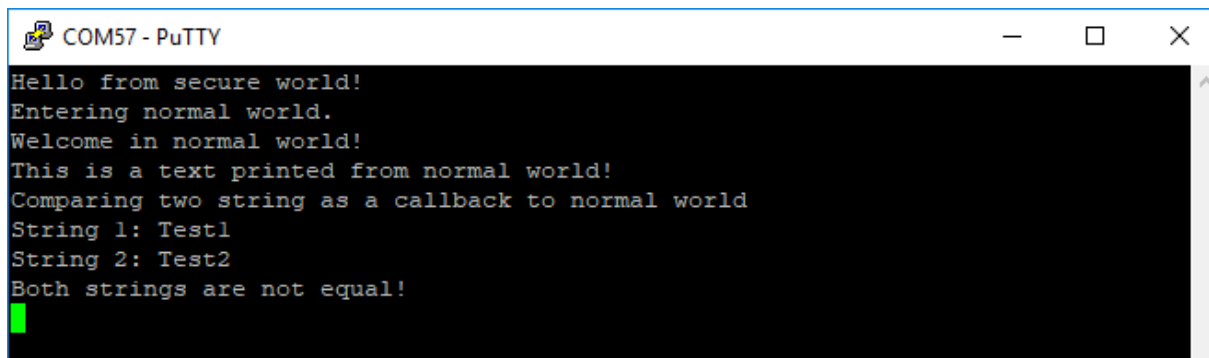

Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the `__ns` download issue on i.MXRT500.

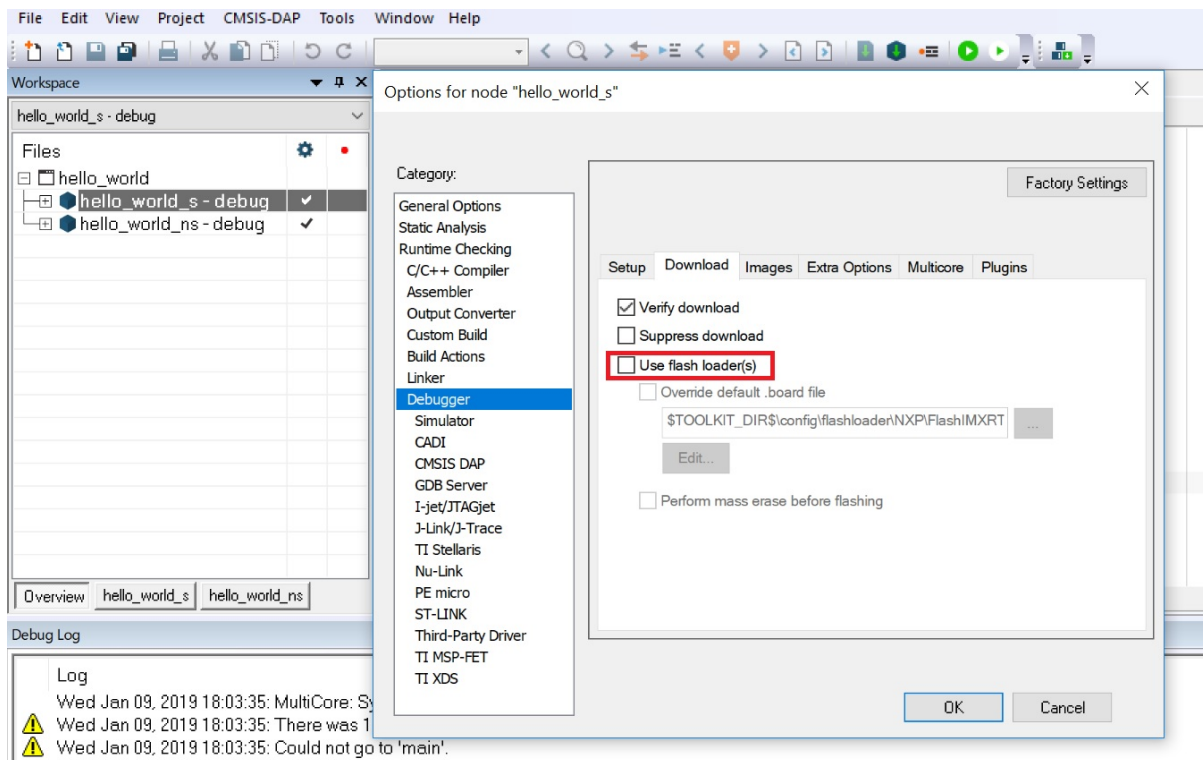


Run a demo using Keil MDK/μVision

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called μVision. In the IDE, select the **Pack Installer** icon.

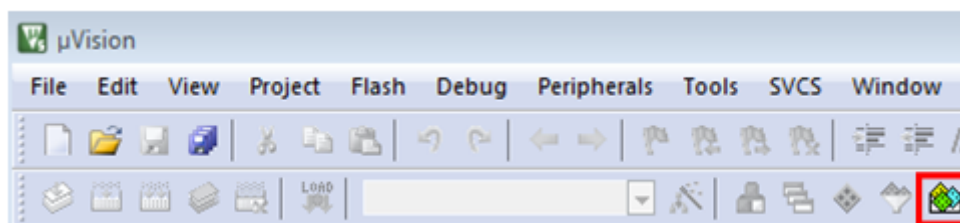

2. After the installation finishes, close the Pack Installer window and return to the μVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

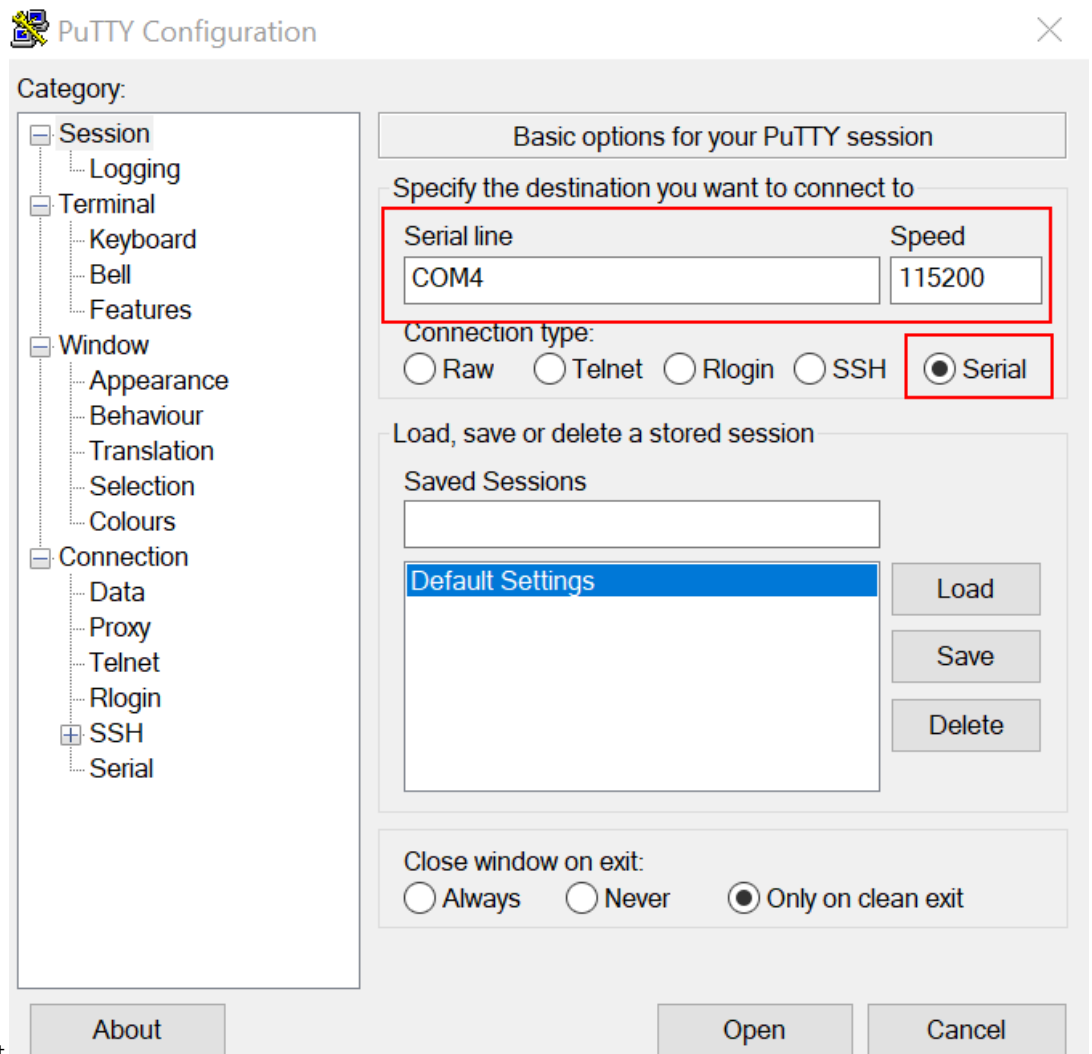


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

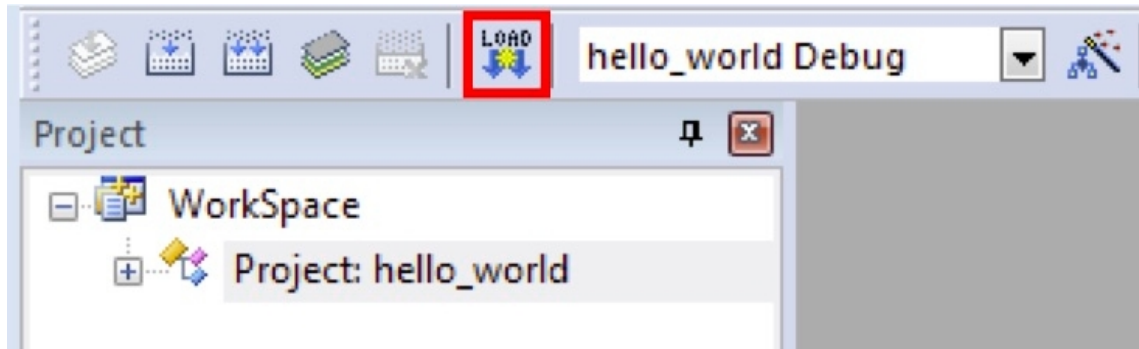

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

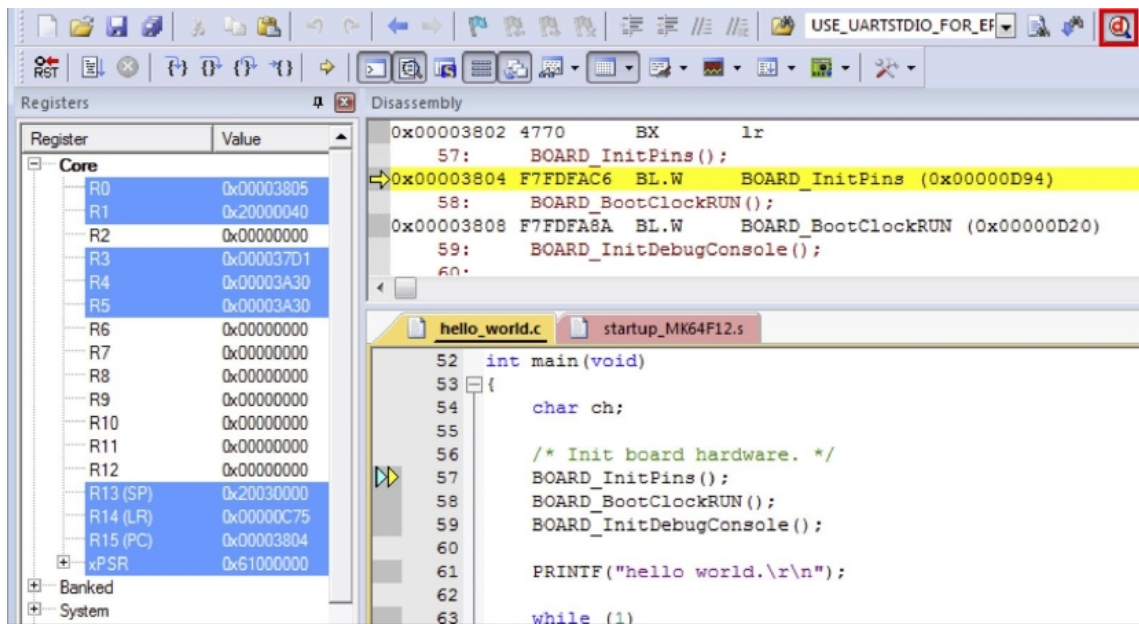

6. Run the code by clicking the **Run** button to start the application.

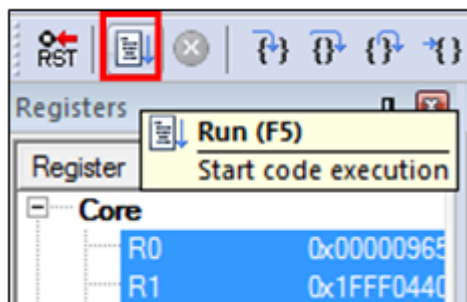

The hello_world application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/μVision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
→cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μVision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

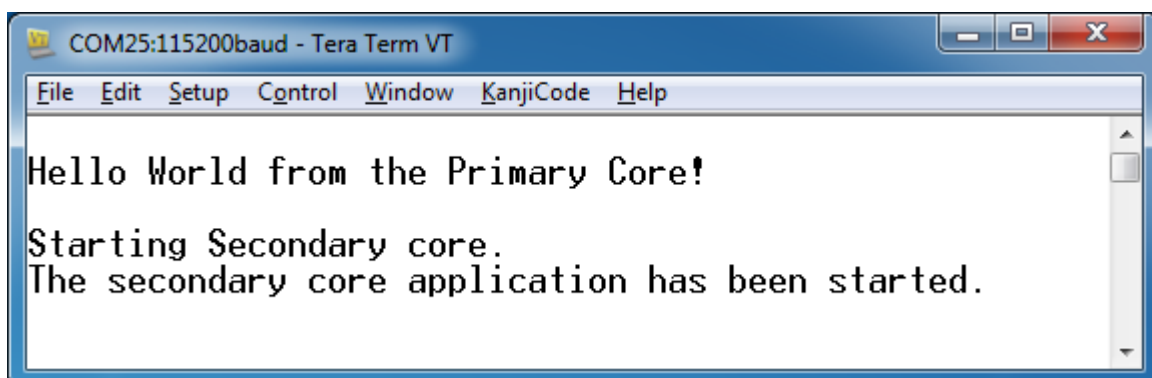

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

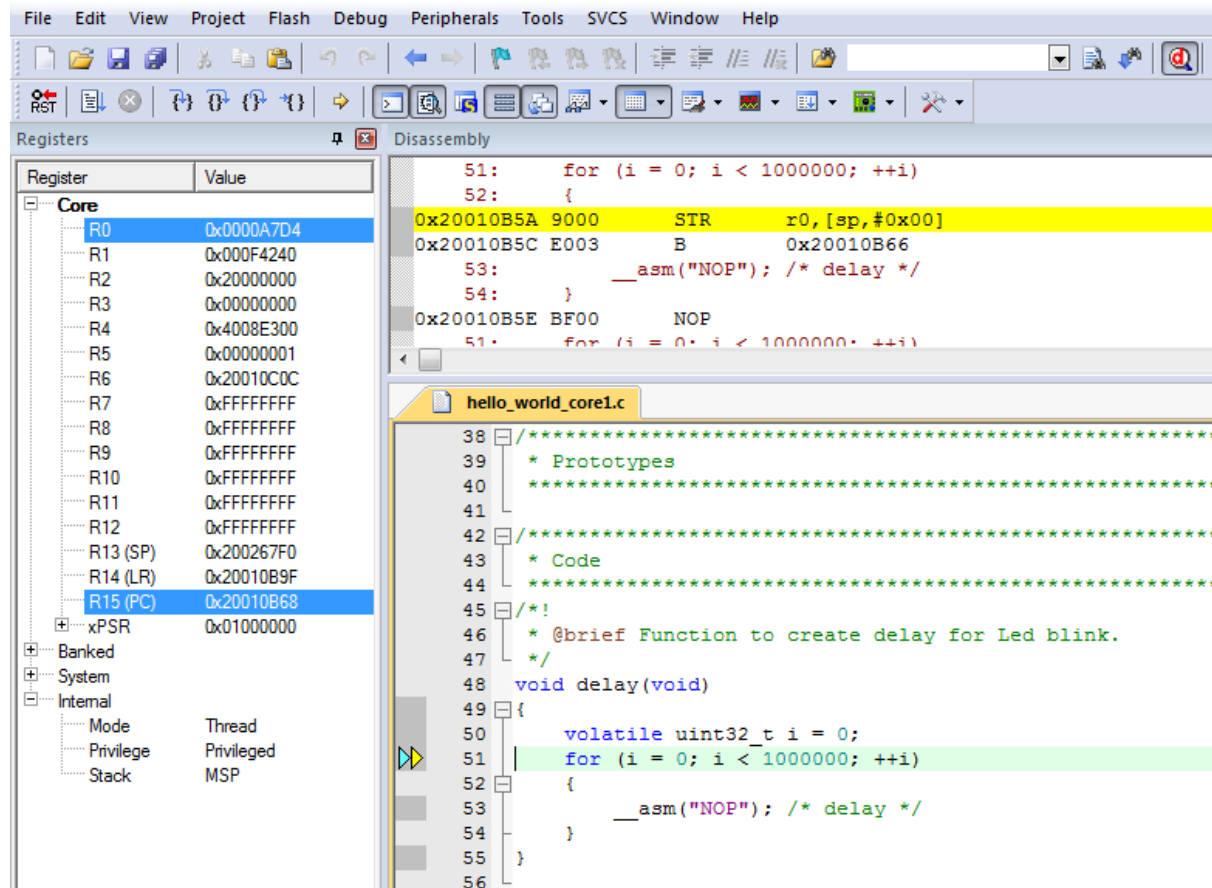

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪ mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪ mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪ uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
→ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

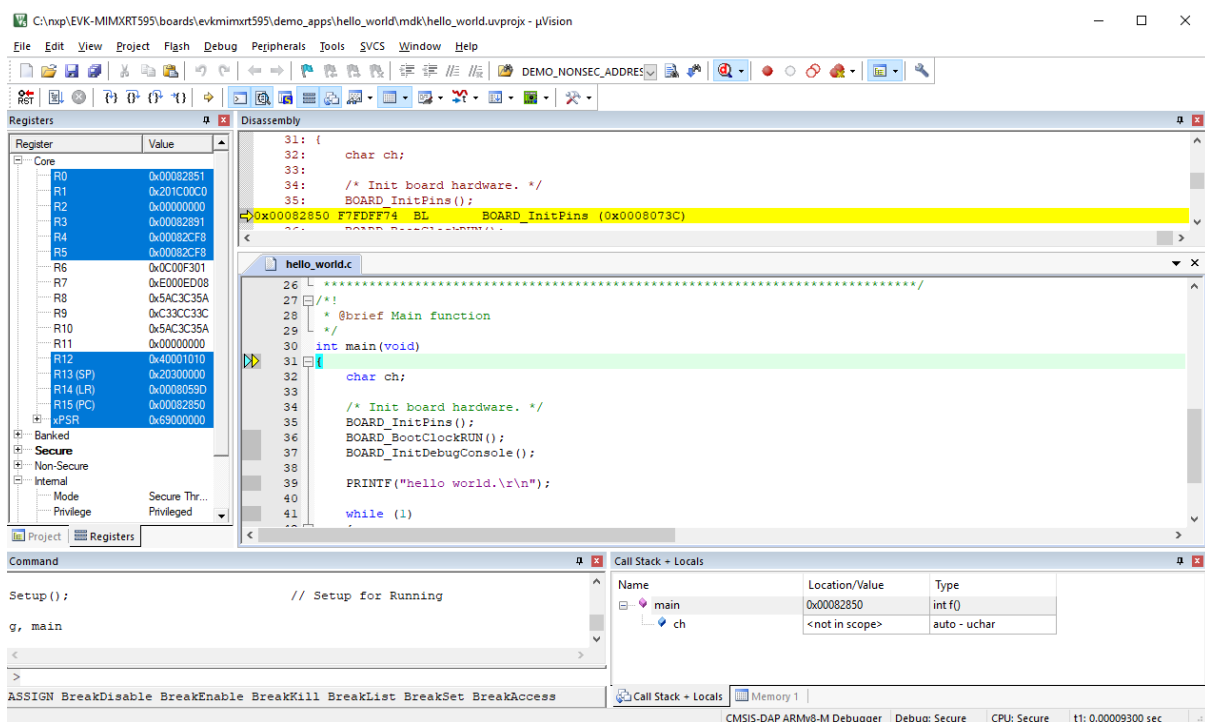

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

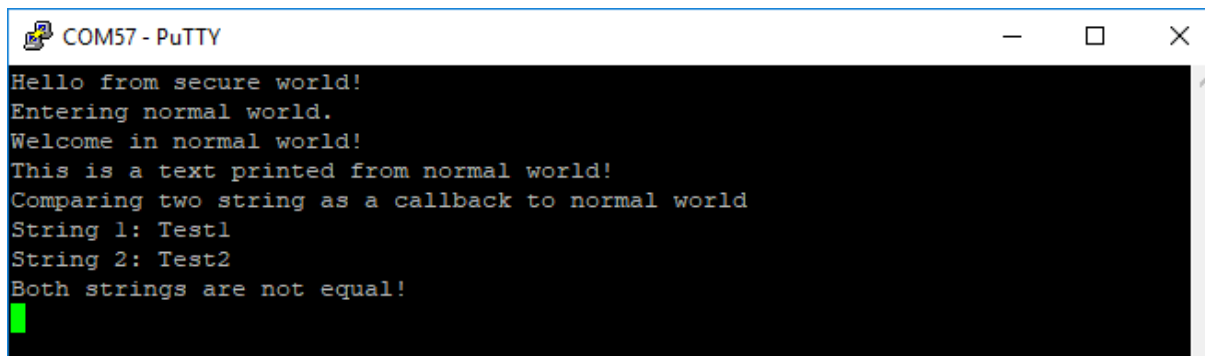

Run a demo using Arm GCC

This section describes the steps to configure the command-line Arm GCC tools to build, run, and debug demo applications and necessary driver libraries provided in the MCUXpresso SDK. The `hello_world` demo application is targeted which is used as an example.

Set up toolchain This section contains the steps to install the necessary components required to build and run an MCUXpresso SDK demo application with the Arm GCC toolchain, as supported by the MCUXpresso SDK. There are many ways to use Arm GCC tools, but this example focuses on a Windows operating system environment.


Install GCC Arm Embedded tool chain Download and run the installer from GNU Arm Embedded Toolchain. This is the actual toolset (in other words, compiler, linker, and so on). The GCC toolchain should correspond to the latest supported version, as described in **MCUXpresso SDK Release Notes**.

Install MinGW (only required on Windows OS) The Minimalist GNU for Windows (MinGW) development tools provide a set of tools that are not dependent on third-party C-Runtime DLLs (such as Cygwin). The build environment used by the MCUXpresso SDK does not use the MinGW build tools, but does leverage the base install of both MinGW and MSYS. MSYS provides a basic shell with a Unix-like interface and tools.


1. Download the latest MinGW mingw-get-setup installer from [MinGW](#).
2. Run the installer. The recommended installation path is `C:\MinGW`, however, you may install to any location.

Note: The installation path cannot contain any spaces.

3. Ensure that the **mingw32-base** and **msys-base** are selected under **Basic Setup**.

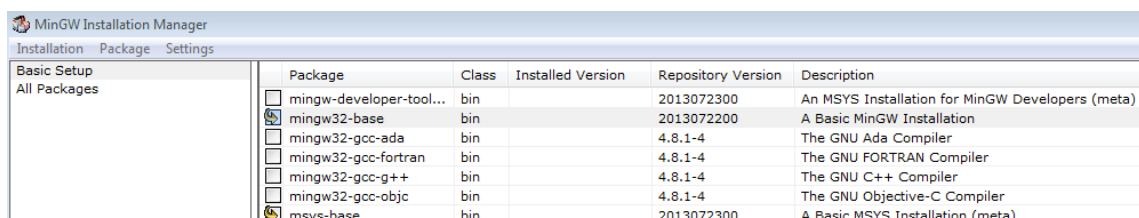

4. In the **Installation** menu, click **Apply Changes** and follow the remaining instructions to complete the installation.

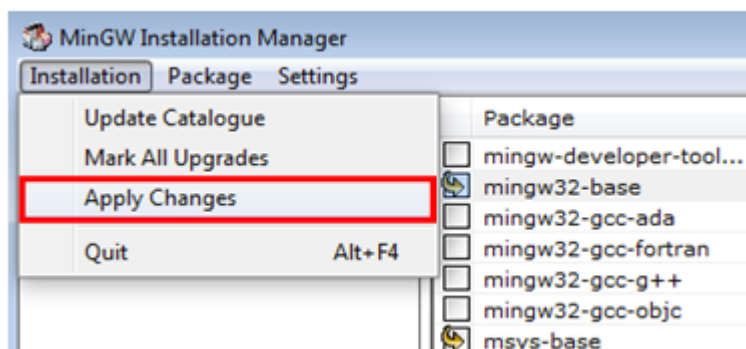


5. Add the appropriate item to the Windows operating system path environment variable. It can be found under **Control Panel->System and Security->System->Advanced System Settings** in the **Environment Variables...** section. The path is:


```
<mingw_install_dir>\bin
```

Assuming the default installation path, C:\MinGW, an example is shown below. If the path is not set correctly, the toolchain will not work.

Note: If you have C:\MinGW\msys\x.x\bin in your PATH variable (as required by Kinetis SDK 1.0.0), remove it to ensure that the new GCC build system works correctly.

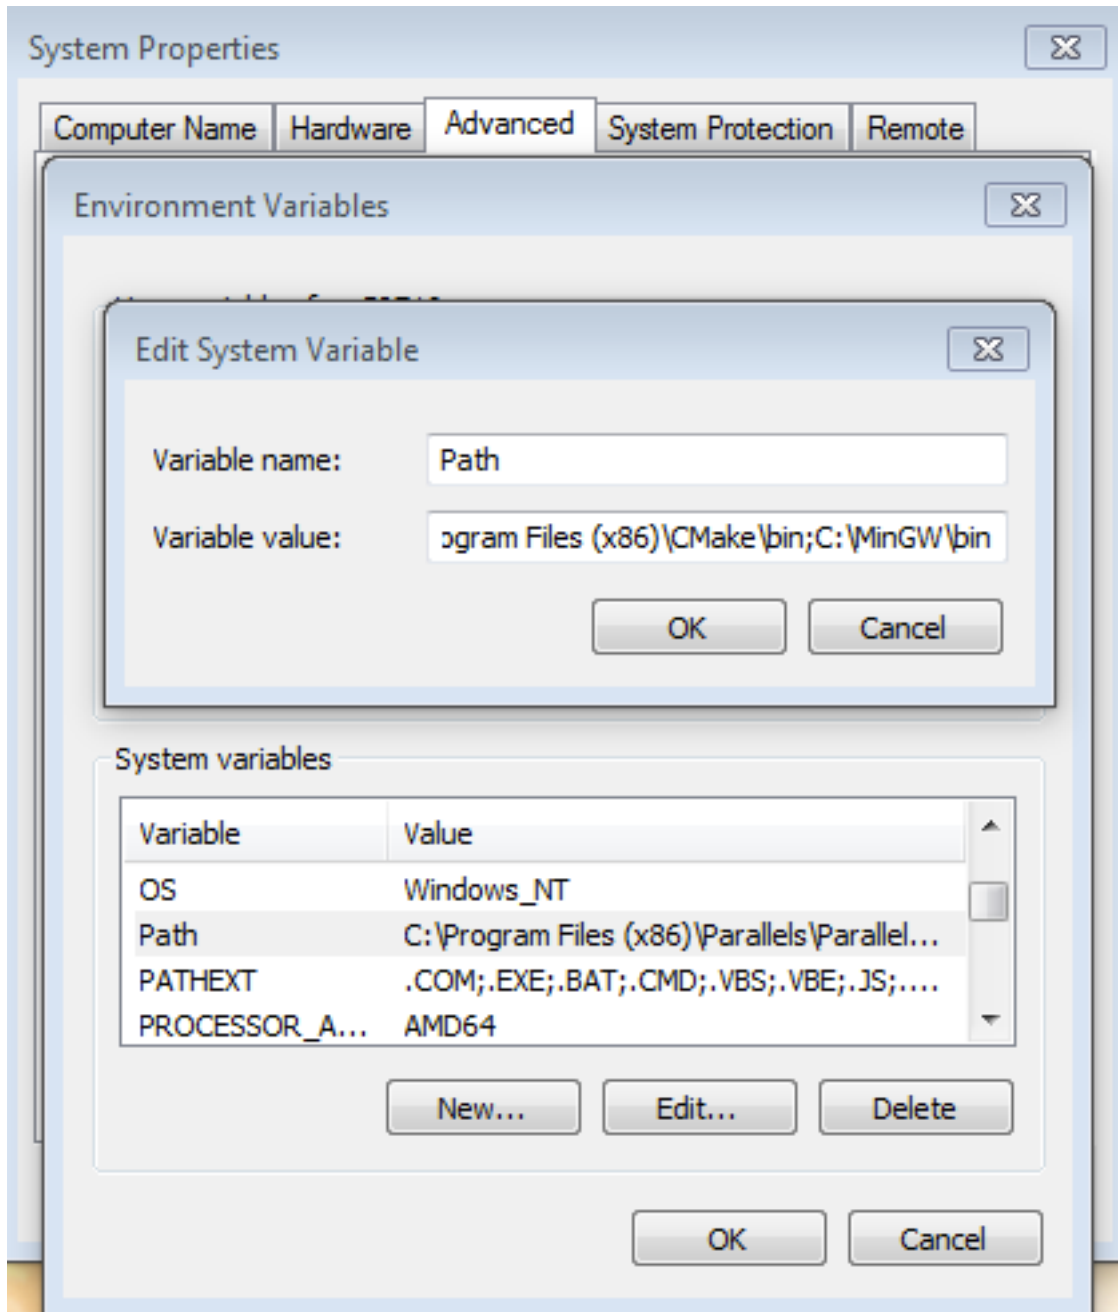


Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it as ARMGCC_DIR. The value of this variable should point to the Arm GCC Embedded tool chain installation path. For this example, the path is:

```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major
```

See the installation folder of the GNU Arm GCC Embedded tools for the exact pathname of your installation.

Short path should be used for path setting, you could convert the path to short path by running command for %I in (.) do echo %~sI


```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>for %I in (.) do echo %~sI
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>echo C:\PROGRA~2\GNUTOO~1\82018~1
C:\PROGRA~2\GNUTOO~1\82018~1
```

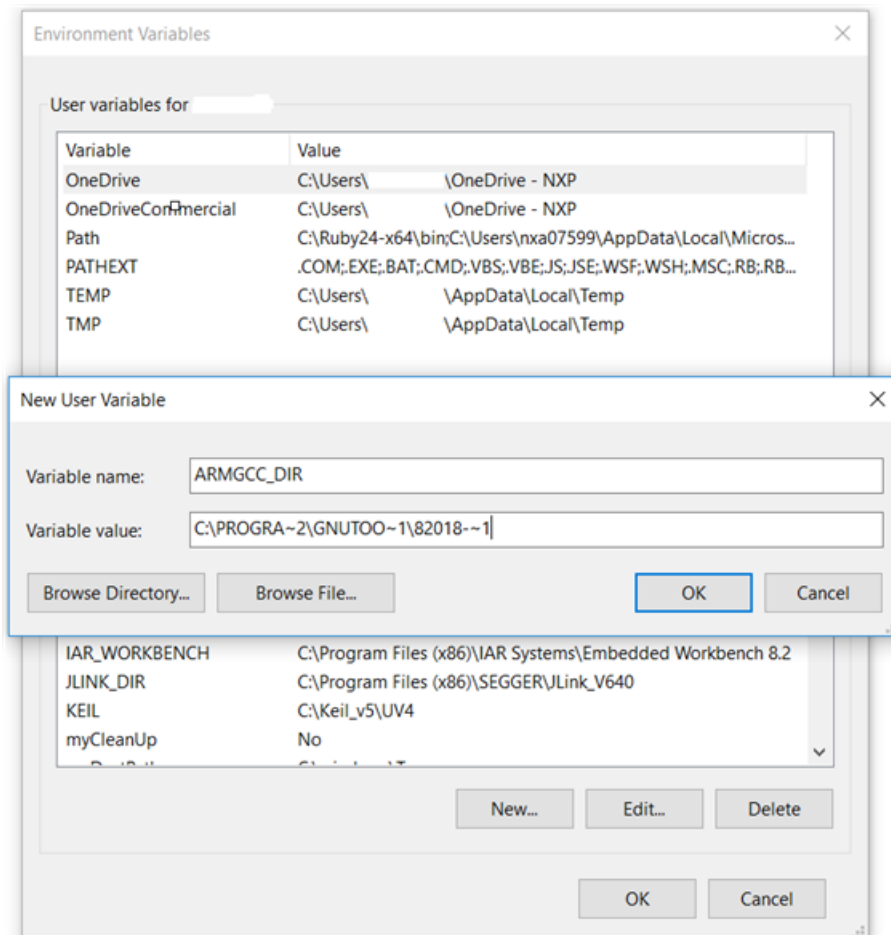

Install CMake

Windows OS

1. Download CMake 3.0.x from www.cmake.org/cmake/resources/software.html.
2. Install CMake, ensuring that the option **Add CMake to system PATH** is selected when installing. The user chooses to select whether it is installed into the PATH for all users or just the current user. In this example, it is installed for all users.

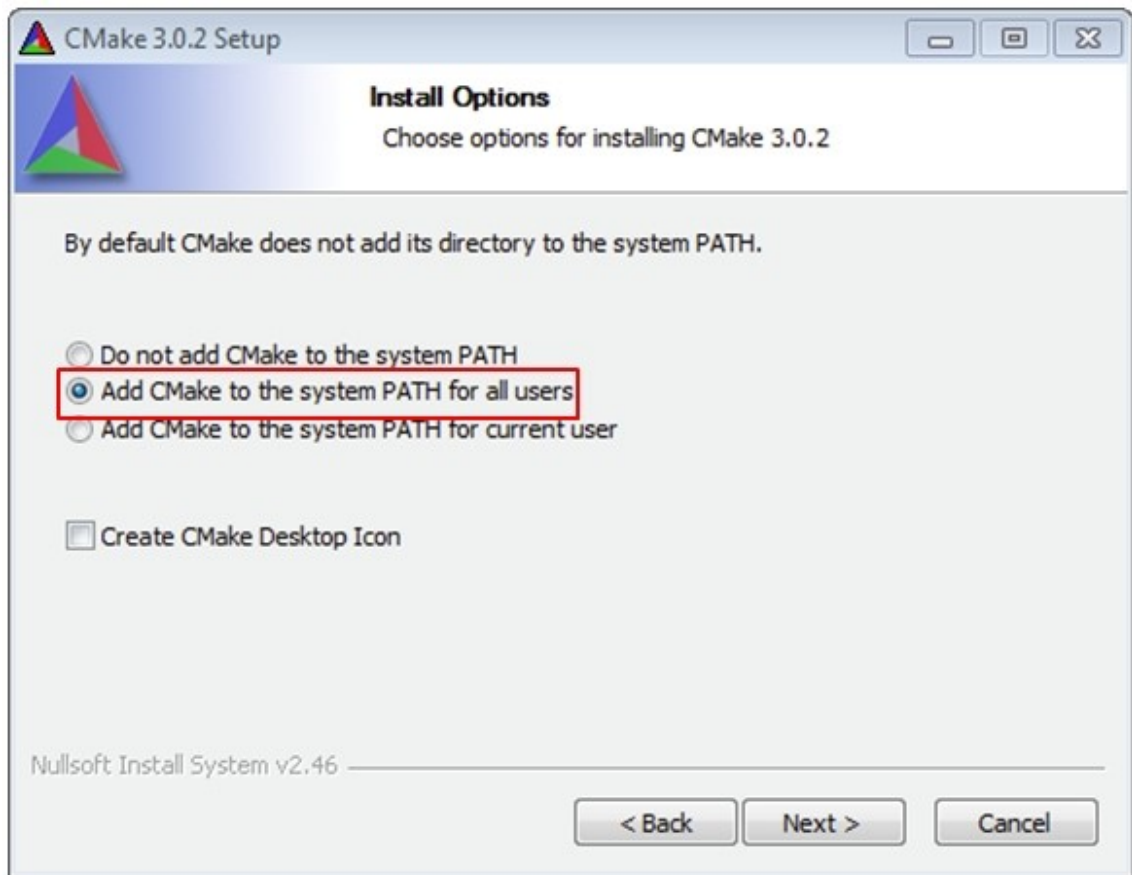

3. Follow the remaining instructions of the installer.
4. You may need to reboot your system for the PATH changes to take effect.
5. Make sure `sh.exe` is not in the Environment Variable PATH. This is a limitation of mingw32-make.


Linux OS It depends on the distributions of Linux Operation System. Here we use Ubuntu as an example.

Open shell and use following commands to install cmake and its version. Ensure the cmake version is above 3.0.x.

```
$ sudo apt-get install cmake
$ cmake --version
```

Build an example application To build an example application, follow these steps.

1. Open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system **Start** menu, go to **Programs > GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

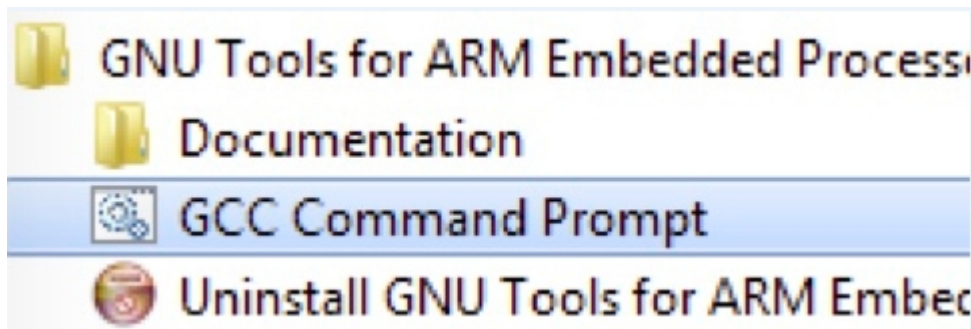

2. Change the directory to the example application project directory which has a path similar to the following:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc
```

For this example, the exact path is:

Note: To change directories, use the `cd` command.

3. Type **build_debug.bat** on the command line or double click on **build_debug.bat** file in Windows Explorer to build it. The output is as shown in following figure.


```
[ 84%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_smc.c.obj
[ 92%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_clock.c.obj
[100%] Linking C executable debug\hello_world.elf
[100%] Built target hello_world.elf

C:\nxp\SDK_2.0_FRDM-K64F\boards\frdmk64f\demo_apps\hello_world\armgcc>IF "" == "
" <pause >
Press any key to continue . . .
```

Run an example application This section describes steps to run a demo application using J-Link GDB Server application. To install J-Link host driver and update the on-board debugger firmware to Jlink firmware, see [On-board debugger](#).

After the J-Link interface is configured and connected, follow these steps to download and run the demo applications:

1. Connect the development platform to your PC via USB cable between the on-board debugger USB connector and the PC USB connector. If using a standalone J-Link debug pod, connect it to the SWD/JTAG connector of the board.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
 2. No parity
 3. 8 data bits
 4. 1 stop bit

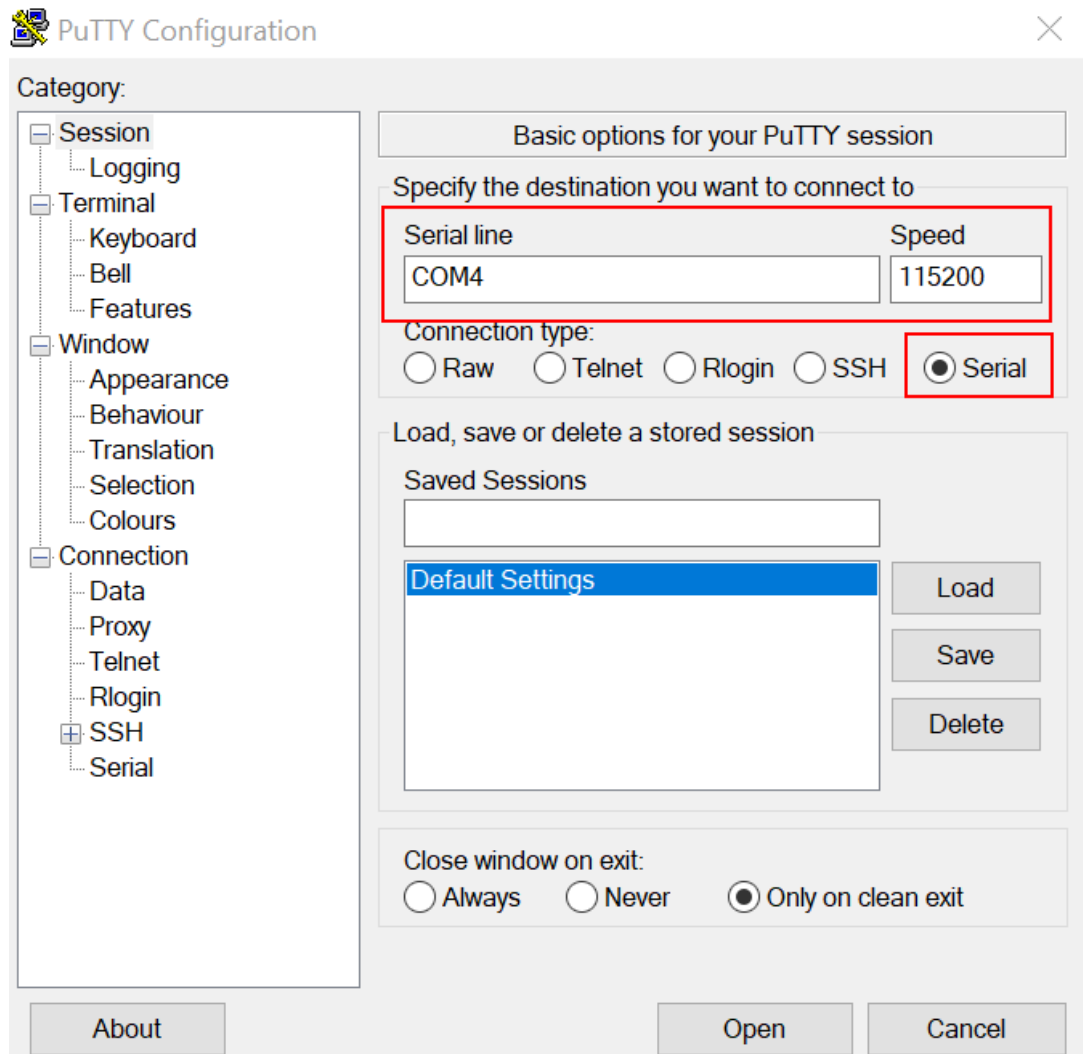


3. To launch the application, open the Windows **Start** menu and select **Programs > SEGGER > J-Link <version> J-Link GDB Server**.


Note: It is assumed that the J-Link software is already installed.

The **SEGGER J-Link GDB Server Config** settings dialog appears.


4. Make sure to check the following options.
 1. **Target interface:** The debug connection on board uses internal SWD signaling. In case of a wrong setting J-Link is unable to communicate with device under test.
 2. **Script file:** If required, a J-Link init script file can be used for board initialization. The file with the ".jlinkscript" file extension is located in the <install_dir>/boards/<board_name>/ directory.
 3. Under the **Server settings**, check the GDB port for connection with the gdb target remote command. For more information, see step 9.
 4. There is a command line version of J-Link GDB server "JLinkGDBServerCL.exe". Typical path is C:\Program Files\SEGGER\JLink\. To start the J-Link GDB server with the same settings as are selected in the UI, you can use these command line options.

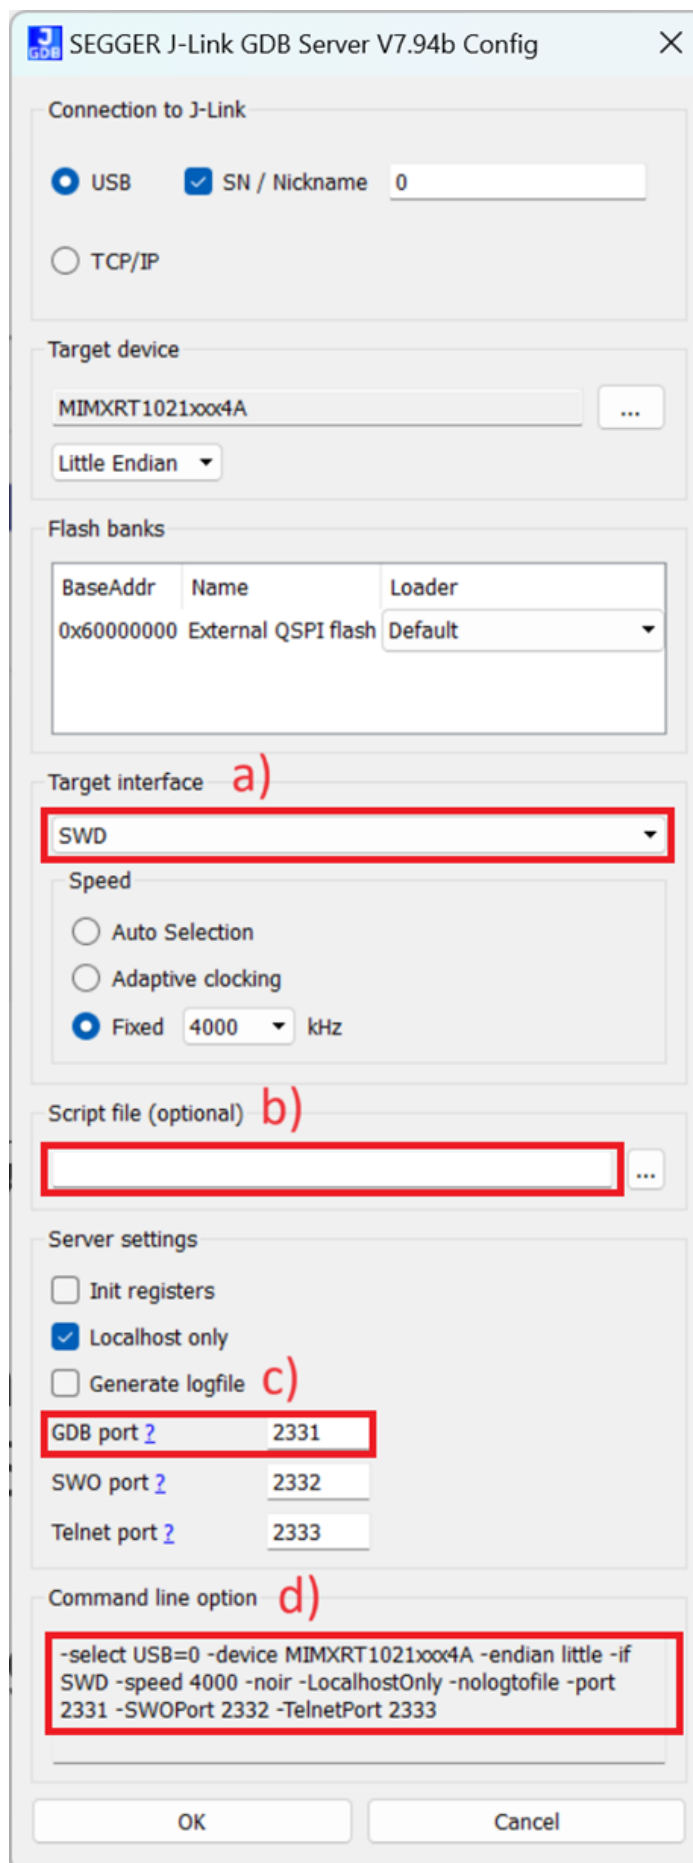

5. After it is connected, the screen should look like this figure:

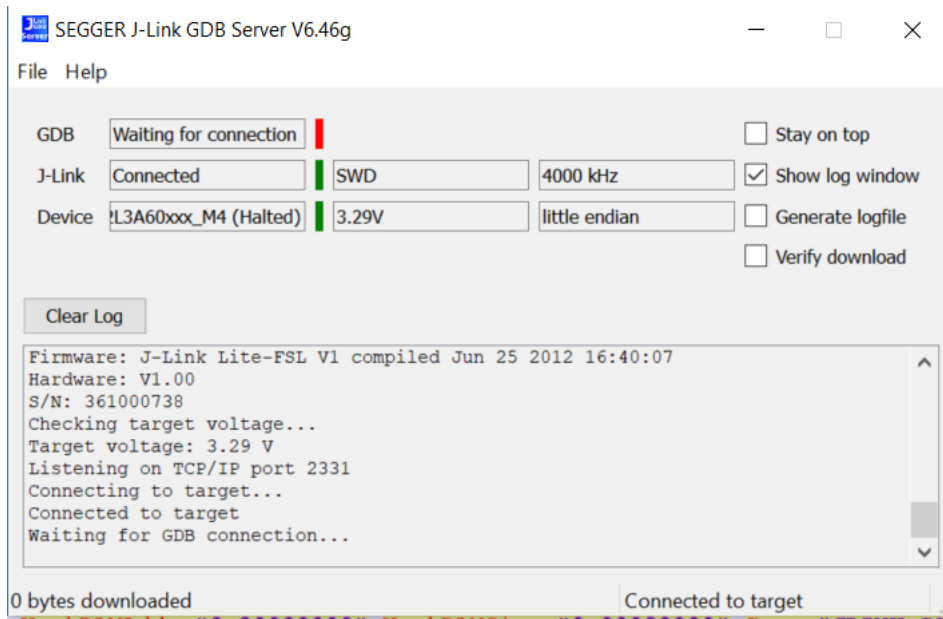

6. If not already running, open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system Start menu, go to **Programs - GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

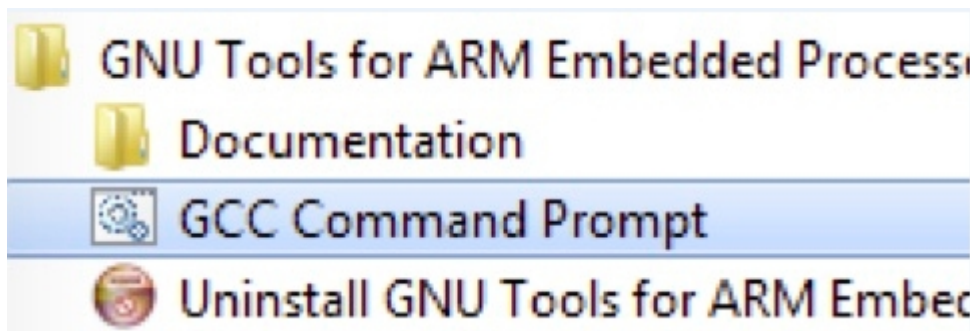

7. Change to the directory that contains the example application output. The output can be found in using one of these paths, depending on the build target selected:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/debug
```

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/release
```

8. Run the `arm-none-eabi-gdb.exe <application_name>.elf` command. For this example, it is `arm-none-eabi-gdb.exe hello_world.elf`.

```

GCC Command Prompt - arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major>arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major\bin>arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf...
(gdb)

```

9. Run these commands:

1. target remote localhost:2331
2. monitor reset
3. monitor halt
4. load
5. monitor reset

10. The application is now downloaded and halted. Execute the `monitor go` command to start the demo application.

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

```

COM4 - PuTTY
hello world.

```

Build a multicore example application This section describes the steps to build and run a dual-core application. The demo application build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/armgcc
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/armgcc/build_debug.bat
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/armgcc/build_debug.bat
```

Build both applications separately following steps for single core examples as described in **Build an example application**.

```

GCC Command Prompt - build_debug.bat

[ 47%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 52%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 56%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 60%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 65%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 69%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 73%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 78%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 82%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 86%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm0plus.c.obj
[ 91%] Building ASM object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm0plus.S.obj
[ 95%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/middleware/multicore/mcmgr/src/mcmgr.c.obj
[100%] Linking C executable debug\hello_world_cm0plus.elf
[100%] Built target hello_world_cm0plus.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm0plus\armgcc>IF "" == "" (pause)
Press any key to continue . . .

GCC Command Prompt - build_debug.bat

[ 50%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_lpuart.c.obj
[ 54%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 58%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 62%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 66%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 70%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 75%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 79%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 83%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 87%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 91%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm4.c.obj
[ 95%] Building ASM object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm4.S.obj
[100%] Linking C executable debug\hello_world_cm4.elf
[100%] Built target hello_world_cm4.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm4\armgcc>IF "" == "" (pause)
Press any key to continue . . .


```

Run a multicore example application When running a multicore application, the same pre-requisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single-core application, applies, as described in **Run an example application**.

The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single-core and dual-core applications in Arm GCC.

Both the primary and the auxiliary image is loaded into the SPI flash memory. After execution of the monitor go command, the primary core application is executed. During the primary core code execution, the auxiliary core code is reallocated from the flash memory to the RAM, and the auxiliary core is released from the reset. The hello_world multicore application is now running

and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

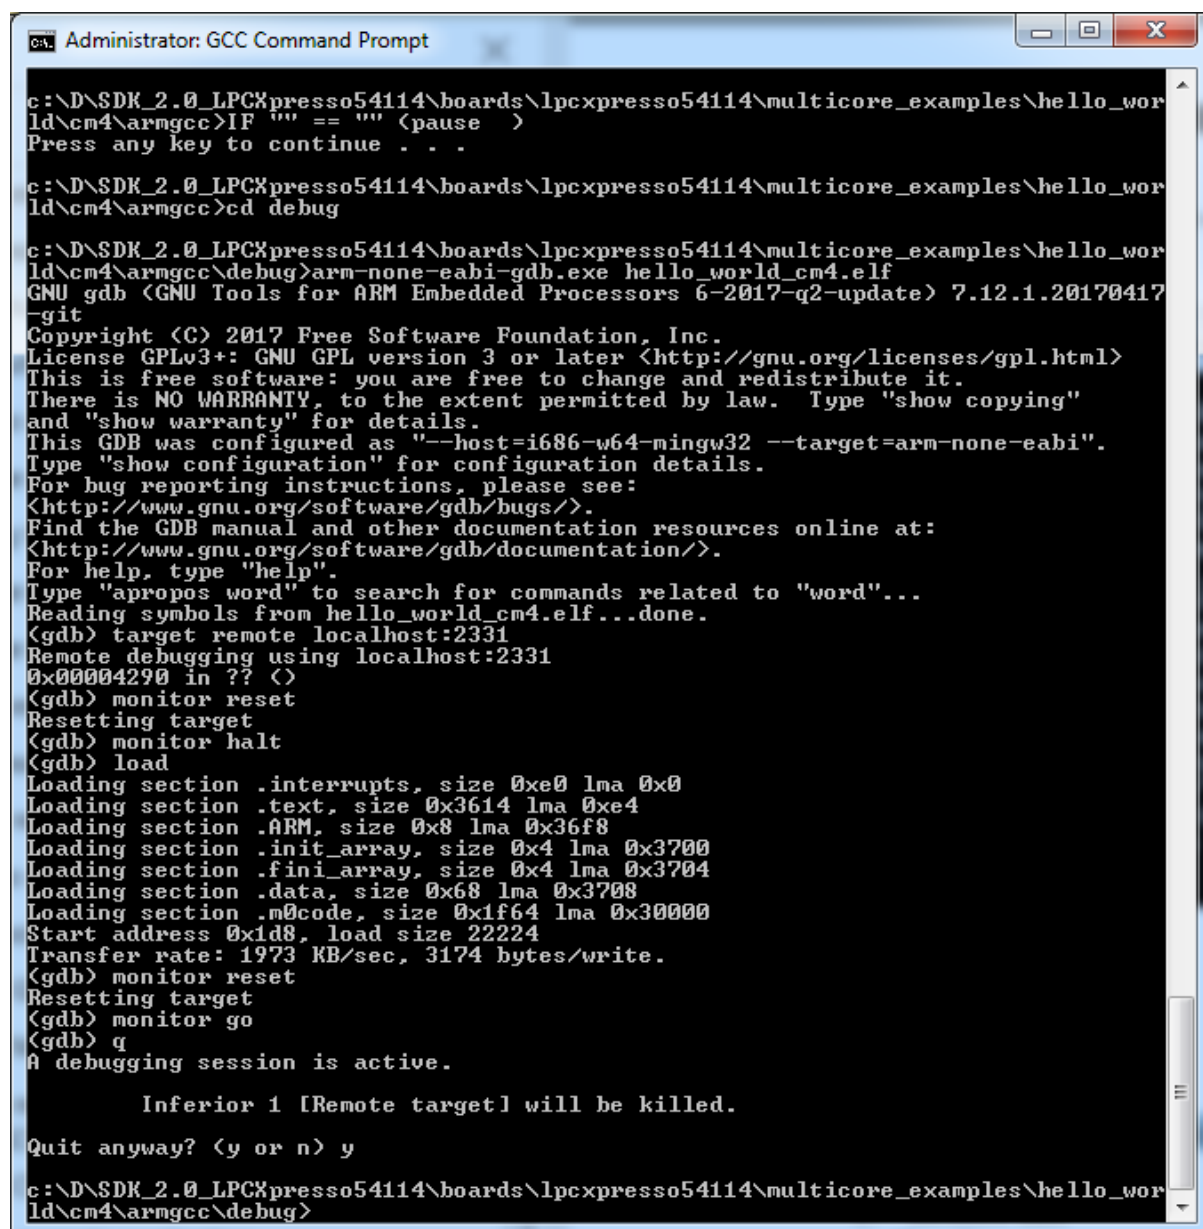

```

Administrator: GCC Command Prompt

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc>IF "" == "" <pause >
Press any key to continue . . .

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc>cd debug


c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc\debug>arm-none-eabi-gdb.exe hello_world_cm4.elf
GNU gdb (GNU Tools for ARM Embedded Processors 6-2017-q2-update) 7.12.1.20170417-git
Copyright (C) 2017 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.
For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from hello_world_cm4.elf...done.
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
0x00004290 in ?? ()
(gdb) monitor reset
Resetting target
(gdb) monitor halt
(gdb) load
Loading section .interrupts, size 0xe0 lma 0x0
Loading section .text, size 0x3614 lma 0xe4
Loading section .ARM, size 0x8 lma 0x36f8
Loading section .init_array, size 0x4 lma 0x3700
Loading section .fini_array, size 0x4 lma 0x3704
Loading section .data, size 0x68 lma 0x3708
Loading section .m0code, size 0x1f64 lma 0x30000
Start address 0x1d8, load size 22224
Transfer rate: 1973 KB/sec, 3174 bytes/write.
(gdb) monitor reset
Resetting target
(gdb) monitor go
(gdb) q
A debugging session is active.

    Inferior 1 [Remote target] will be killed.

Quit anyway? (y or n) y

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world_cm4\armgcc\debug>

```

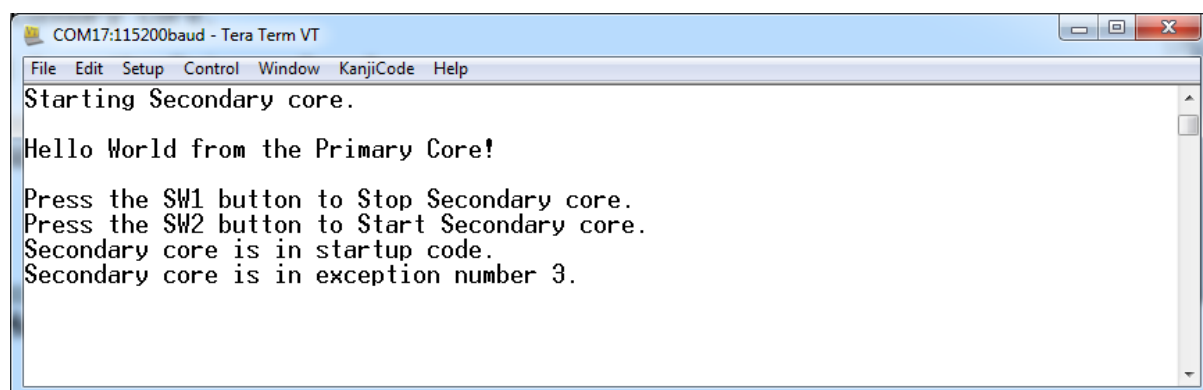

```

COM17:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help
Starting Secondary core.

Hello World from the Primary Core!

Press the SW1 button to Stop Secondary core.
Press the SW2 button to Start Secondary core.
Secondary core is in startup code.
Secondary core is in exception number 3.

```

Build a TrustZone example application This section describes the steps to build and run a TrustZone application. The demo application build scripts are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_ns/armgcc
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_s/armgcc
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/armgcc/build_  
↪debug.bat
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/armgcc/build_  
↪debug.bat
```

Build both applications separately, following steps for single core examples as described in **Build an example application**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because the CMSE library is not ready.

```
C:\WINDOWS\system32\cmd.exe
[ 55%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_
l_assert.c.obj
[ 59%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c
.obj
[ 62%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexspi.c.obj
[ 66%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
cache.c.obj
[ 70%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_manager.c.obj
[ 74%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_port_uart.c.obj
[ 77%] Building ASM object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startu
p_MIMXRT595S_cm33.S.obj
[ 81%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c
.obj
[ 85%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
usart.c.obj
[ 88%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
pio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
iap.c.obj
[100%] Linking C executable debug\hello_world_s.elf
[100%] Built target hello_world_s.elf
C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_s\armgcc>IF "" == "" (paus
e)
Press any key to continue . . .
```

```

C:\WINDOWS\system32\cmd.exe
[ 52%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c.obj
[ 56%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_assert.c.obj
[ 60%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexspi.c.obj
[ 64%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_cache.c.obj
[ 68%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_manager.c.obj
[ 72%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_port_uart.c.obj
[ 76%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_usart.c.obj
[ 80%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c.obj
[ 84%] Building ASM object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startup_MIMXRT595S_cm33.S.obj
[ 88%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_iap.c.obj
[100%] Linking C executable debug\hello_world_ns.elf
[100%] Built target hello_world_ns.elf

C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_ns\armgcc>IF "" == "" (pause)
Press any key to continue . . .

```


Run a TrustZone example application When running a TrustZone application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single core application, apply, as described in **Run an example application**.

To download and run the TrustZone application, perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single core and TrustZone applications in Arm GCC.

Then, run these commands:

1. arm-none-eabi-gdb.exe
2. target remote localhost:2331
3. monitor reset
4. monitor halt
5. monitor exec SetFlashDLNoRMWThreshold = 0x20000
6. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_ns/armgcc/debug/hello_world_ns.elf
7. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_s/armgcc/debug/hello_world_s.elf
8. monitor reset

The application is now downloaded and halted. Execute the `c` command to start the demo application.

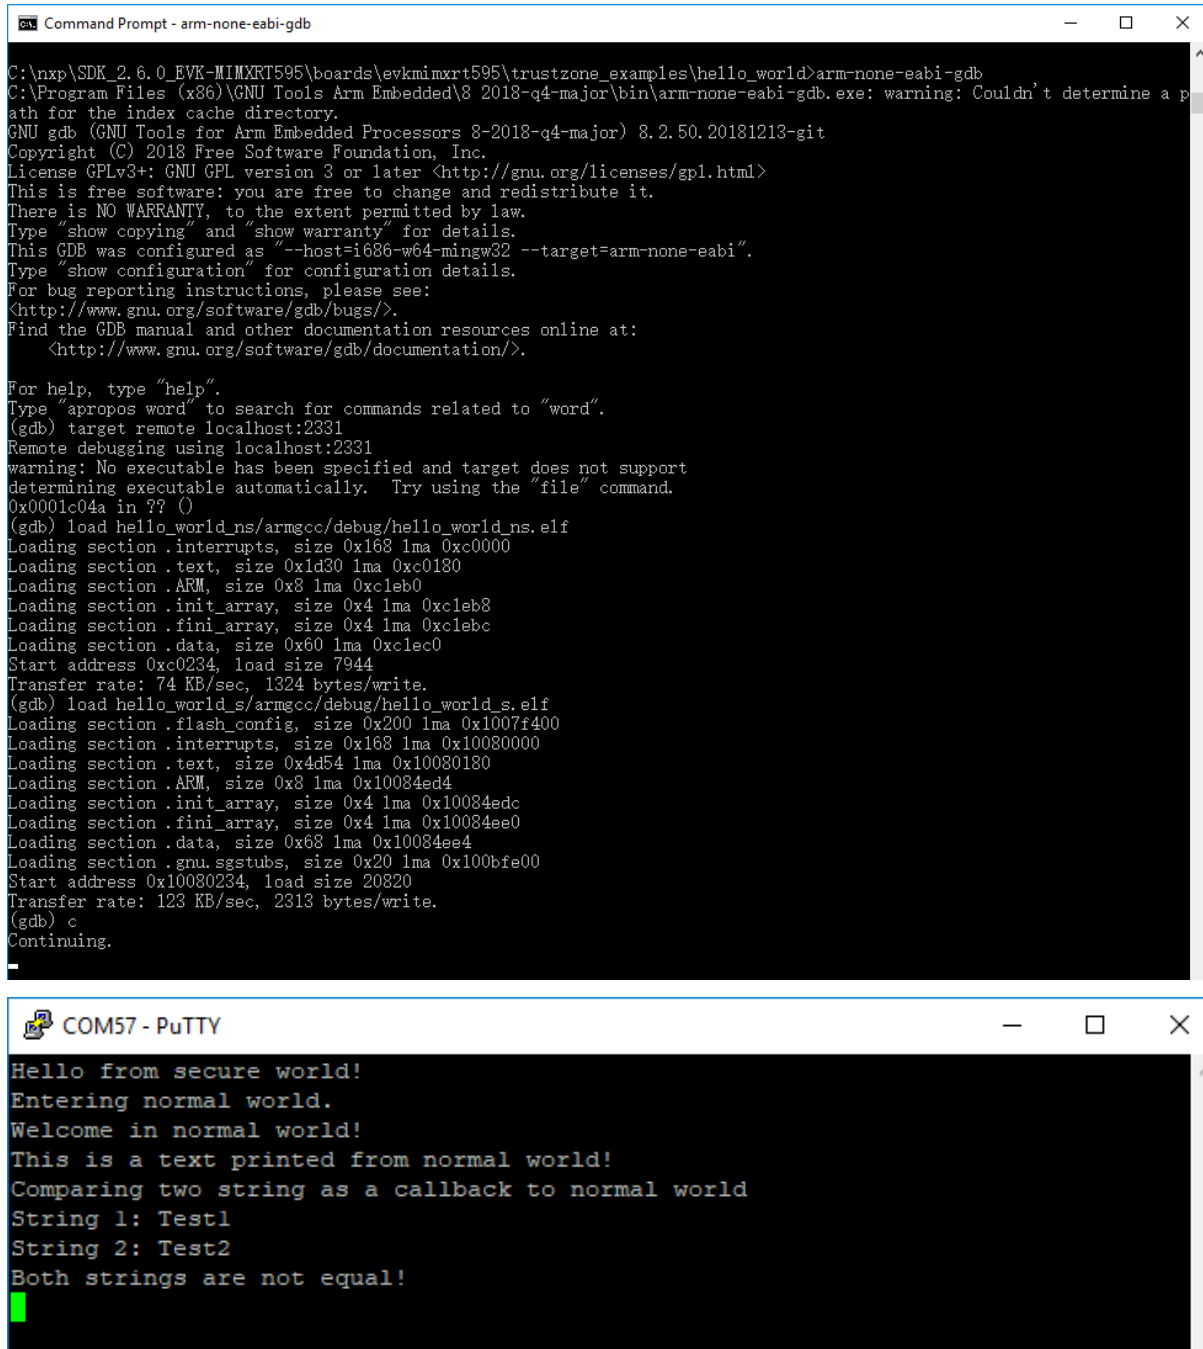

```

C:\nxp\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world>arm-none-eabi-gdb
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major\bin\arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software; you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word".
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
warning: No executable has been specified and target does not support
determining executable automatically. Try using the "file" command.
0x0001c04a in ?? ()
(gdb) load hello_world_ns/armgcc/debug/hello_world_ns.elf
Loading section .interrupts, size 0x168 lma 0xc0000
Loading section .text, size 0x1d30 lma 0xc0180
Loading section .ARM, size 0x8 lma 0xc1eb0
Loading section .init_array, size 0x4 lma 0xc1eb8
Loading section .fini_array, size 0x4 lma 0xc1ebc
Loading section .data, size 0x60 lma 0xc1ec0
Start address 0xc0234, load size 7944
Transfer rate: 74 KB/sec, 1324 bytes/write.
(gdb) load hello_world_s/armgcc/debug/hello_world_s.elf
Loading section .flash_config, size 0x200 lma 0x1007f400
Loading section .interrupts, size 0x168 lma 0x10080000
Loading section .text, size 0x4d54 lma 0x10080180
Loading section .ARM, size 0x8 lma 0x10084ed4
Loading section .init_array, size 0x4 lma 0x10084edc
Loading section .fini_array, size 0x4 lma 0x10084ee0
Loading section .data, size 0x68 lma 0x10084ee4
Loading section .gnu.sgstubs, size 0x20 lma 0x100bfe00
Start address 0x10080234, load size 20820
Transfer rate: 123 KB/sec, 2313 bytes/write.
(gdb) c
Continuing.

```

```

COM57 - PuTTY
Hello from secure world!
Entering normal world.
Welcome in normal world!
This is a text printed from normal world!
Comparing two string as a callback to normal world
String 1: Test1
String 2: Test2
Both strings are not equal!

```

MCUXpresso Config Tools

MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK μ Vision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port

This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:

```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.

 
2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbd/DAPLink** interface:




2. P&E Micro:



 
3. J-Link:



 4. P&E Micro OSJTAG:



 5. MRB-KW01:



On-board Debugger

This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the

CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbd bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.


Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.

- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

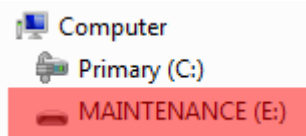

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER  
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces

The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files

With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then extern "C" should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

1.3 Getting Started with MCUXpresso SDK GitHub


1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. *Verify the installation* after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from <https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation>. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

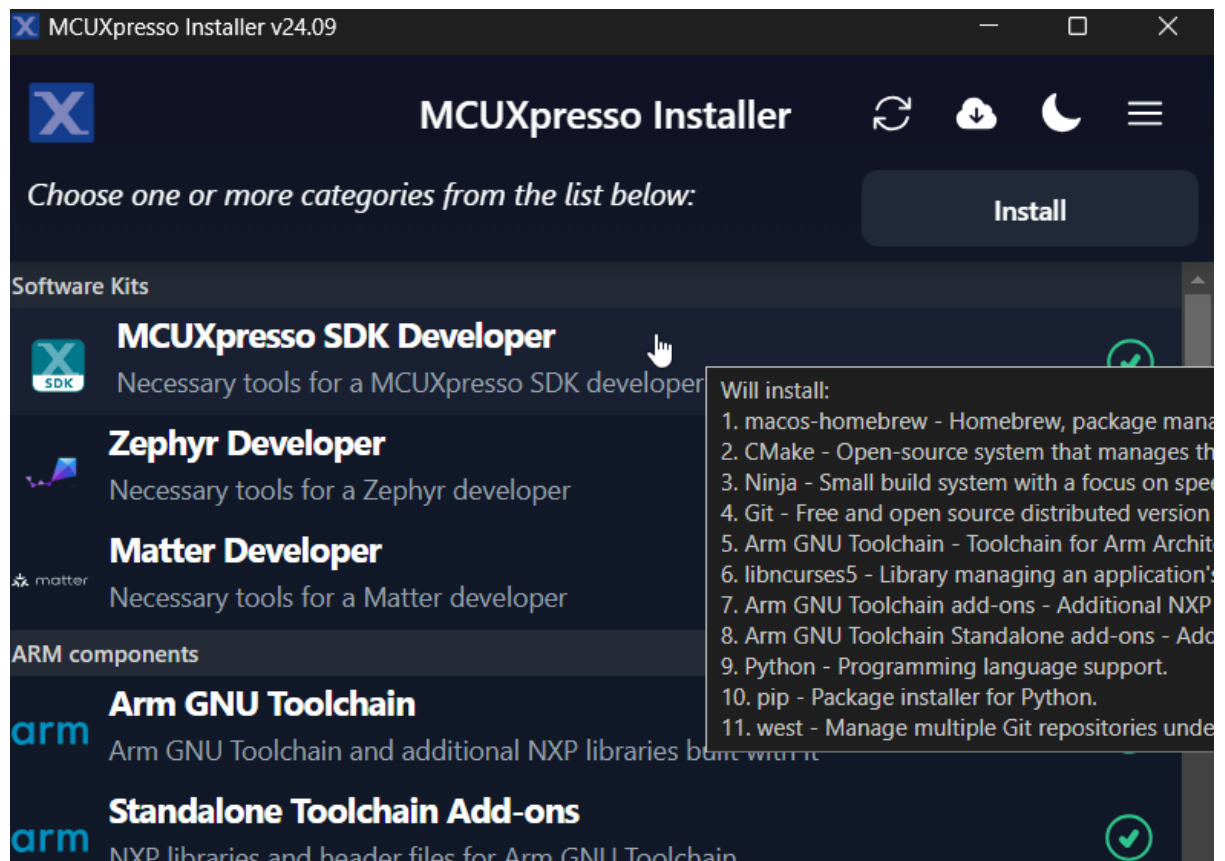

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the official [Git website](#). Download the appropriate version(you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the [Python Download](#) guide.

Use `python --version` to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different
↪source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from [the official CMake download page](#).

For Windows, you can directly use the .msi installer like [cmake-3.31.4-windows-x86_64.msi](#) to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from [the official CMake download page](#).

After installation, you can use `cmake --version` to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the [ninja binary](#) and register the ninja executor location path into your system path variable to work.

For Linux, you can use your [system package manager](#) or you can directly download the [ninja binary](#) to work.

After installation, you can use `ninja --version` to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under `mcuxsdk/scripts/kconfig` folder.

Please make sure [python](#) environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOB from build to debug. This feature is implemented with ruby. You can follow the guide ruby environment setup to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.


Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	AR-MGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	– toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	– toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	– toolchain mdk
Armclang	ARM-CLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	– toolchain mdk
Zephyr	ZEPHYR_DIR	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	– toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescall\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	– toolchain code-warrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	– toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCV-LVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	– toolchain riscv-llvm

- The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

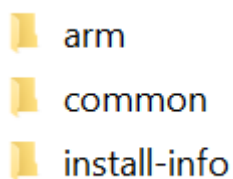

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here's an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: `for %i in (.) do echo %~fsi`

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be `C:\Users\xxx\AppData\Local\Programs\Git\cmd`. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
 1. Open the `$HOME/.bashrc` file using a text editor, such as `vim`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bashrc` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.
- macOS:
 1. Open the `$HOME/.bash_profile` file using a text editor, such as `nano`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bash_profile` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the `west` tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory `mcuxsdk`, follow these steps:

1. Navigate to the core directory:

```
cd mcuxsdk
```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use `venv` to avoid conflicts with other projects using python.**

```
python -m venv .venv

# For Linux/MacOS
source .venv/bin/activate

# For Windows
.\.venv\Scripts\activate
# If you are using powershell and see the issue that the activate script cannot be run.
# You may fix the issue by opening the powershell as administrator and run below command:
powershell Set-ExecutionPolicy RemoteSigned
# then run above activate command again.
```

Once activated, your shell will be prefixed with `(.venv)`. The virtual environment can be deactivated at any time by running `deactivate` command.

Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like `zsh`, there are some powerful plugins to help you auto switch `venv` among workspaces. For example, `zsh-autoswitch-virtualenv`.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a
↪ different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↪ tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at [Getting Started Guide](#), have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the **Manifest repo** are checked out to the folder `mcuxsdk/`, the layout of `mcuxsdk` folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- `demo_apps`: Basic demo set to start using SDK, including `hello_world` and `led_blinky`.
- `driver_examples`: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of `_boards/<board_name>` which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code


This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the `hello_world` demo application as an example. However, these

steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in [Get MCUXpresso SDK Repo](#).


To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

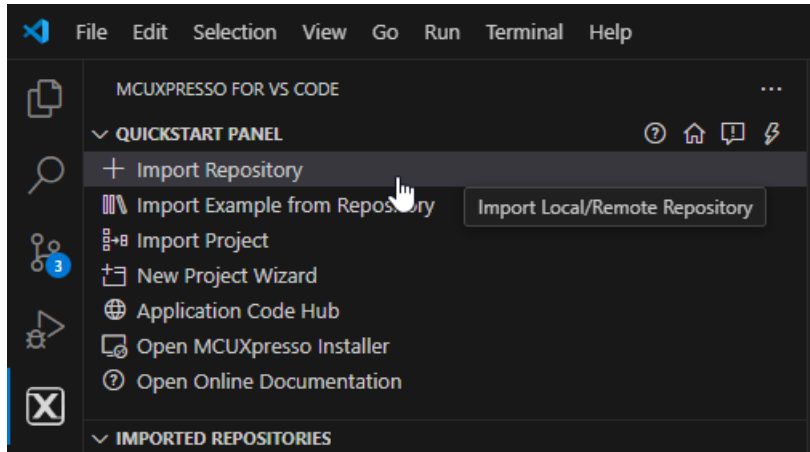


Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details.


Select **Local** if you've already obtained the SDK as seen in [Get MCUXpresso SDK Repo](#). Select your location and click **Import**.

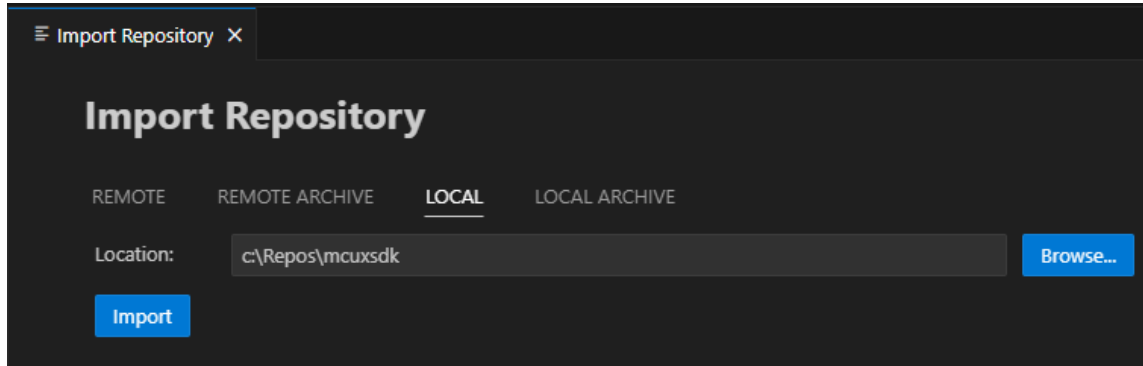

2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

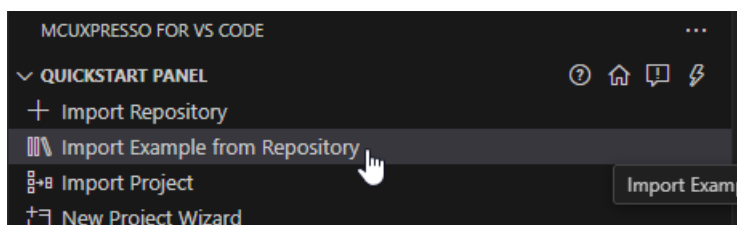

In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

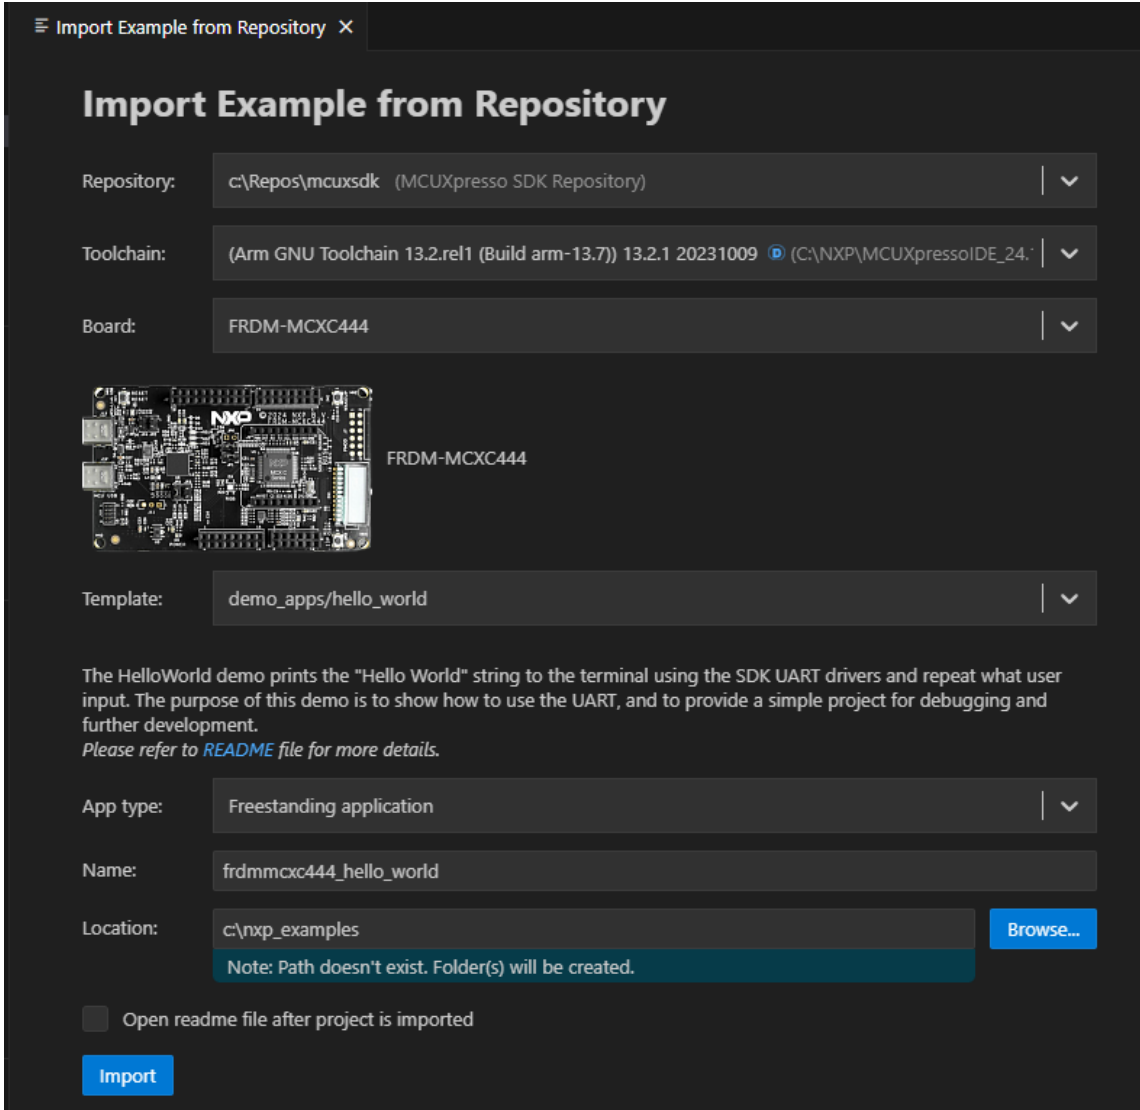

Import Example from Repository X

Import Example from Repository

Repository: c:\Repos\mcuxsdk (MCUXpresso SDK Repository) | v

Toolchain: (Arm GNU Toolchain 13.2.rel1 (Build arm-13.7)) 13.2.1 20231009 | v

Board: FRDM-MCXC444 | v



FRDM-MCXC444

Template: demo_apps/hello_world | v

The HelloWorld demo prints the "Hello World" string to the terminal using the SDK UART drivers and repeat what user input. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.
Please refer to [README](#) file for more details.

App type: Freestanding application | v

Name: frdmmcxc444_hello_world

Location: c:\nxp_examples [Browse...](#)


Note: Path doesn't exist. Folder(s) will be created.

☐ Open readme file after project is imported

[Import](#)

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

- VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
- Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

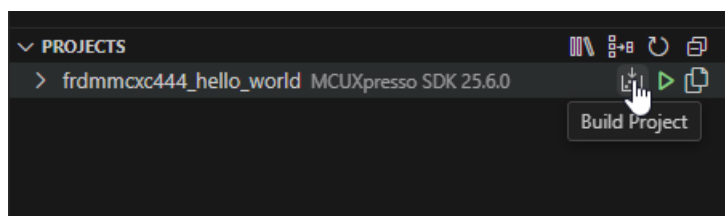

The integrated terminal will open at the bottom and will display the build output.


```

[17/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/components/debug_console_lite/fsl_debug_console.c.obj
[18/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/devices/MCXC/MCXC444/drivers/fsl_clock.c.obj
[19/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/lpuart/fsl_lpuart.c.obj
[20/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/uart/fsl_uart.c.obj
[21/21] Linking C executable hello_world.elf
Memory region      Used Size  Region Size  %age Used
m_interrupts:      192 B      512 B      37.50%
m_flash_config:     16 B      16 B      100.00%
m_text:            7892 B    261104 B     3.02%
m_data:            2128 B     32 KB      6.49%
build finished successfully.
Terminal will be reused by tasks, press any key to close it.


```

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see [MCUXpresso for VS Code Wiki](#).

1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

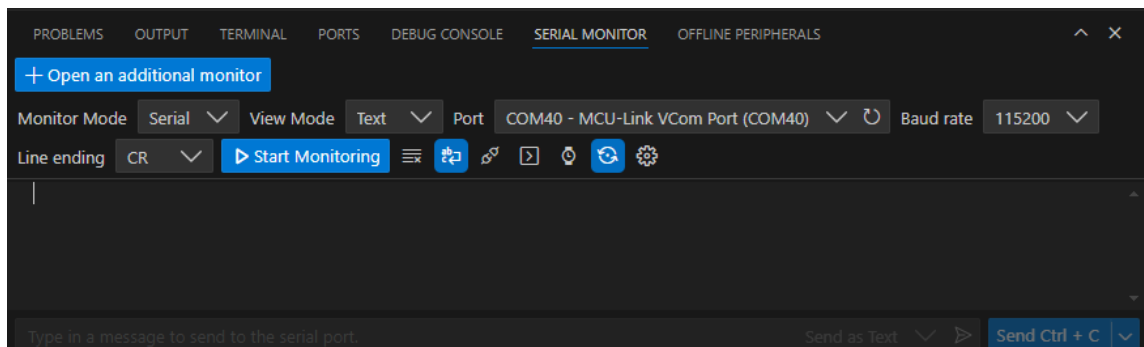

2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

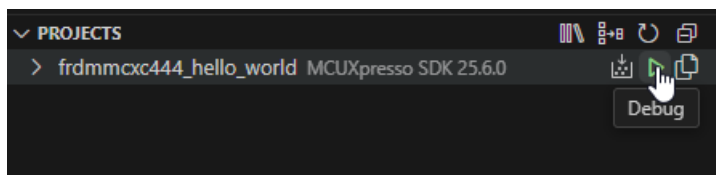

The debug session will begin. The debug controls are initially at the top.

```

18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37      BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

```

PROBLEMS  OUTPUT  TERMINAL  PERIPHERALS  RTOS DETAILS  PORTS  DEBUG CONSOLE  SERIAL MONITOR
+ Open an additional monitor
Monitor Mode Serial View Mode Text Port COM40 - MCU-Link VCom Port (COM40)
[Stop Monitoring] [Icons]
---- Opened the serial port COM40 ----
hello world.
|

```

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```
west list_project -p examples/demo_apps/hello_world [-t armgcc]
```

```
INFO: [ 1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪evk9mimx8ulp -Dcore_id=cm33]
```

```
INFO: [ 2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪evkbimxrt1050]
```

```
INFO: [ 3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
```

(continues on next page)

(continued from previous page)

```

↪ evkbnimxrt1060]
INFO: [ 4][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm4]
INFO: [ 5][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm7]
INFO: [ 6][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1060]
INFO: [ 7][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt7ulp]
...

```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use west build -h to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- --toolchain: specify the toolchain for this build, default armgcc.
- --config: value for CMAKE_BUILD_TYPE. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```

# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release

```

For multicore devices, you shall specify the corresponding core id by passing the command line argument -Dcore_id. For example

```

west build -b evkbnimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug

```

For shield, please use the --shield to specify the shield to run, like

```

west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0

```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding --sysbuild for main application. For example:

```

west build -b evkbnimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always

```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration


```
west build -b evkbnimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without --cmake-only parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

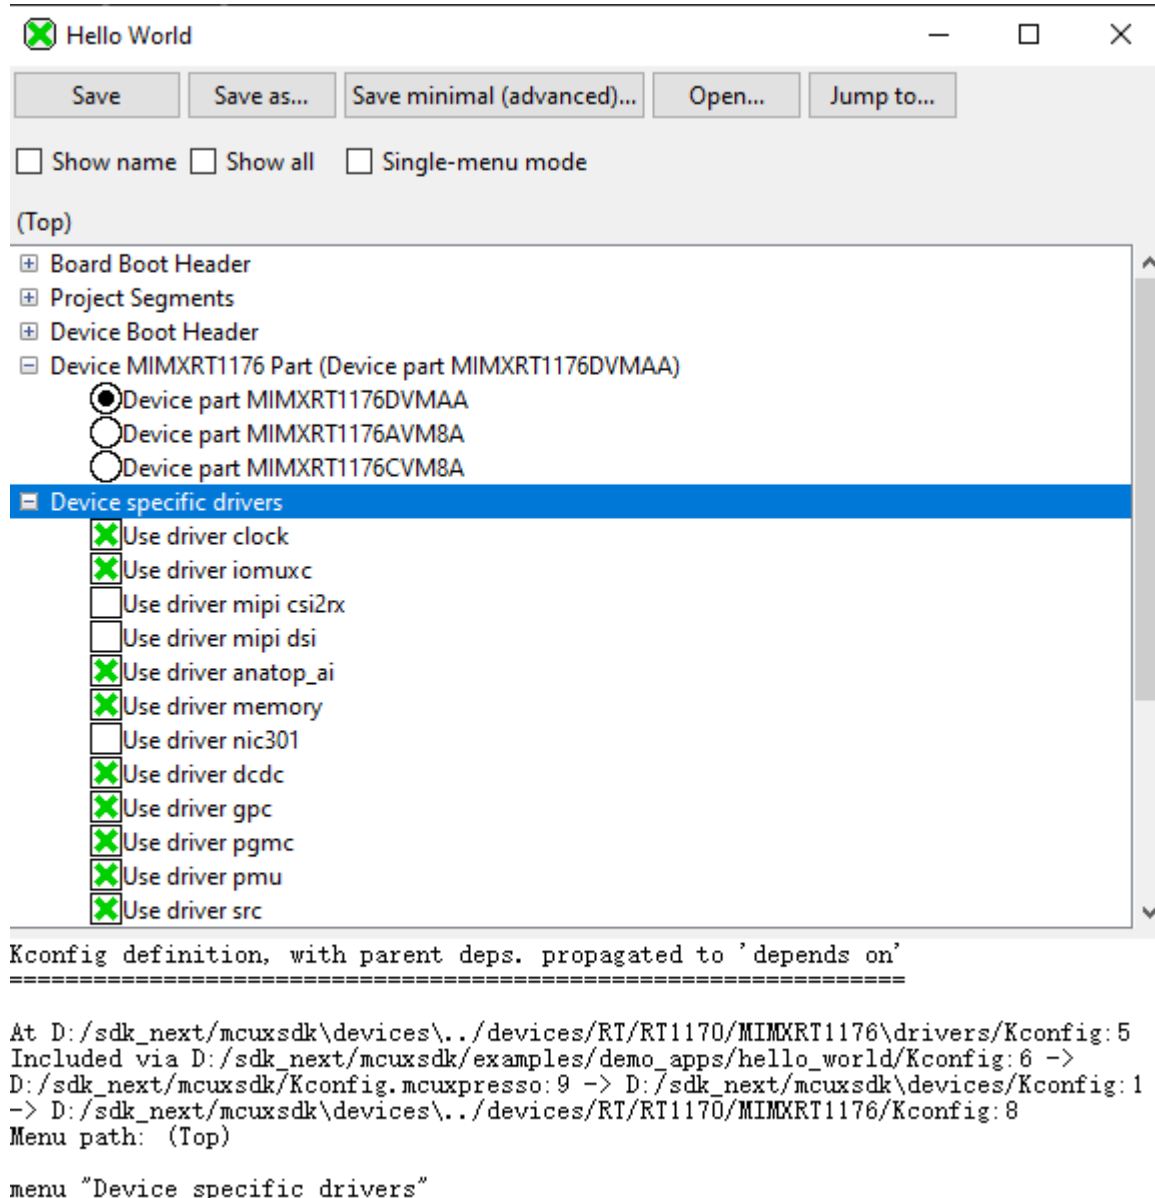

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash *Note:* Please refer Flash and Debug The Example to enable west flash/debug support. Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:


```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbmimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵
↵ flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

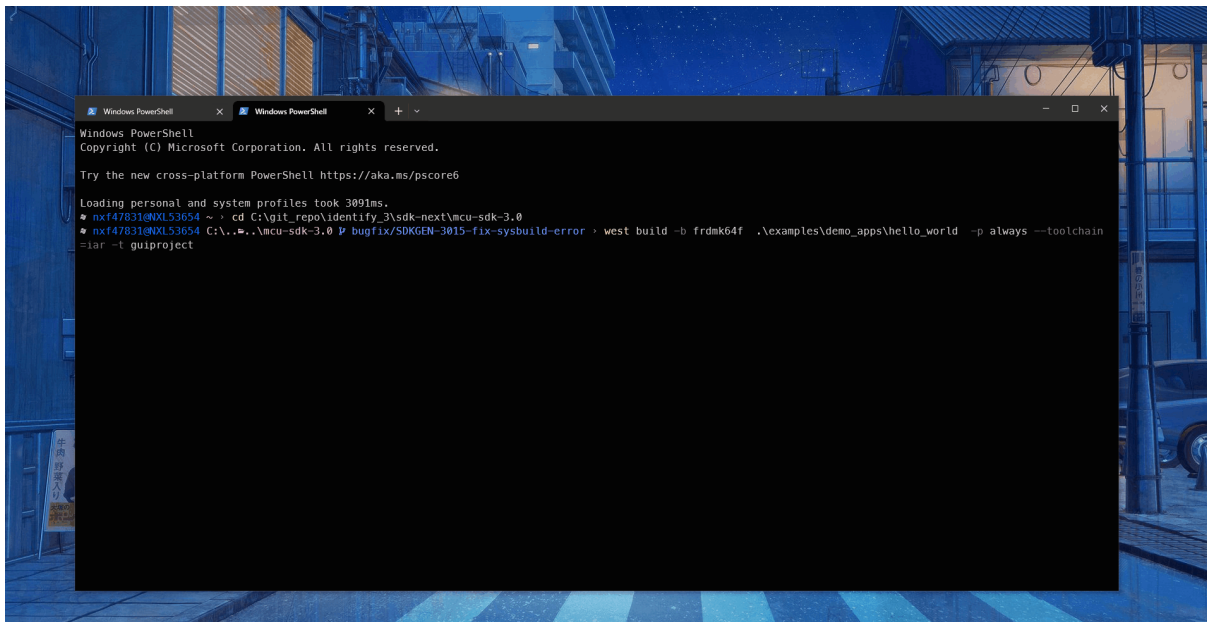

Note, please follow the [Installation](#) to setup the environment especially make sure that [ruby](#) has been installed.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC

further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- IAR Embedded Workbench for Arm, version is 9.60.4
- MCUXpresso for VS Code v25.06
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
FRDM-MCXL255	MCXL255VDF, MCXL255VLL

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

Multicore Multicore Software Development Kit

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eIQ_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known Issues

This section lists the known issues, limitations, and/or workarounds.

Clock driver XTAL32k (rtc osc) clock is not supported in the current driver.

OSTimer The current ostimer driver is not fully compatible with IP. The example does not work properly.

LPACMP LPACMP is missing in the package. Please get it from NXP github.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

1.6 Currently supported drivers

All drivers are supported:

- advc
- aoi
- aon_lpadc
- cdog
- clock
- cmc
- crc
- ctimer
- edma
- erm
- freqme
- glikey
- gpio
- inputmux
- kpp
- lpacmp
- lpadc
- lpc_freqme
- lpacmp (missing in package but you can get it from NXP GitHub)
- lpcmp
- lpspi
- lpspi_edma
- lptmr
- lpuart
- lpuart_edma
- lpuart_freertos
- mcx_cmc

- [mu](#)
- [ostimer](#)
- [pls_pmu](#)
- [pmu](#)
- [port](#)
- [power](#)
- [qtmr](#)
- [reset](#)
- [romapi](#)
- [rtc](#)
- [slcd](#)
- [smm](#)
- [trdc](#)
- [utick](#)
- [wuu](#)
- [wwdt](#)

1.7 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MCXL255](#)

1.8 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.8.1 Multicore

[Multicore SDK](#)

1.8.2 FreeRTOS

[FreeRTOS](#)

Chapter 2

MCXL255

2.1 ADVC Driver

2.2 ADVC

enum _advc_result

The enumeration of ADVC operation result.

Values:

enumerator kADVC_Stat_Ok

ADVC Run Well.

enumerator kADVC_Stat_Init

ADVC is initialized.

enumerator kADVC_Stat_SafeDoneFailed

Fail to set ADVC as safe mode.

enumerator kADVC_Stat_Timeout

ADVC status done condition was not set before timeout

enumerator kADVC_Stat_RingoMeasureFailed

Fail to measure ringo.

enumerator kADVC_Stat_FFMeasureFailed

First fail measurement failed.

enumerator kADVC_Stat_OptimalFailed

ADVC set optimal ended with error.

enumerator kADVC_Stat_BadSignature

Wrong ADVC table.

enumerator kADVC_Stat_NotEnabled

when trying to manipulate advc frequencies before it's enabled.

enumerator kADVC_Stat_PreVoltageRequestFailed

when pre-voltage request change is reaching timeout.

enumerator kADVC_Stat_IllegalOperation

When using illegal operation mode in ADVC_ENABLE.

enum `_advc_mode`

The enumeration of ADVC mode.

Values:

enumerator `kADVC_ModeSafe`

Set ADVC work as safe mode.

enumerator `kADVC_ModeOptimal`

Set ADVC work as optimal mode.

typedef enum `_advc_result` `advc_result_t`

The enumeration of ADVC operation result.

typedef enum `_advc_mode` `advc_mode_t`

The enumeration of ADVC mode.

bool `ADVC_IsInitialized(void)`

Check if ADVC is initialized.

Return values

- `false` – ADVC is not initialized.
- `true` – ADVC is initialized.

`advc_result_t` `ADVC_Enable(advc_mode_t mode, uint8_t *vddCode)`

Enable ADVC.

Parameters

- `mode` – **[in]** Specify the mode of `advc`, please refer to `advc_mode_t`.
- `vddCode` – **[out]** The value of `VDD_AON`, `NULL` means do not care voltage of `VDD_AON`.

Returns

The result outcome with enabling ADVC.

bool `ADVC_IsEnabled(void)`

Check if ADVC is enabled.

Return values

- `false` – ADVC is not enabled.
- `true` – ADVC is enabled.

void `ADVC_Disable(void)`

Disable ADVC.

bool `ADVC_IsDisabled(void)`

Check if ADVC is disabled.

Return values

- `true` – ADVC is not disabled.
- `false` – ADVC is enabled.

`advc_result_t` `ADVC_PreVoltageChangeRequest(uint32_t aonCpuFreq)`

Request to change frequency.

Note: This should be done every time we want to change frequency of any ADVC related clock.

Note: Pre Voltage request should be called before any clock change which is derived from CGU. The paramter we pass is the the future cpu frequency, since we move to safe voltage according to that.

Parameters

- `aonCpuFreq` – The frequency of AON CPU, only 10MHz, 5MHz, 3.3MHz, 2.5MHz, 2MHz, 1MHz are allowed.

Returns

The result outcome with requesting to change frequency.

`advc_result_t` `ADVC_PostVoltageChangeRequest(void)`

Move back to optimal after changing any ADVC related clock frequency.

Returns

The observed result following the post-frequency change.

FSL_ADVC_DRIVER_VERSION

advc driver version 2.0.1.

2.3 AOI: Crossbar AND/OR/INVERT Driver

`void AOI_Init(AOI_Type *base)`

Initializes an AOI instance for operation.

This function un-gates the AOI clock.

Parameters

- `base` – AOI peripheral address.

`void AOI_Deinit(AOI_Type *base)`

Deinitializes an AOI instance for operation.

This function shutdowns AOI module.

Parameters

- `base` – AOI peripheral address.

`void AOI_GetEventLogicConfig(AOI_Type *base, aoi_event_t event, aoi_event_config_t *config)`

Gets the Boolean evaluation associated.

This function returns the Boolean evaluation associated.

Example:

```
aoi_event_config_t demoEventLogicStruct;

AOI_GetEventLogicConfig(AOI, kAOI_Event0, &demoEventLogicStruct);
```

Parameters

- `base` – AOI peripheral address.
- `event` – Index of the event which will be set of type `aoi_event_t`.
- `config` – Selected input configuration .

```
void AOI_SetEventLogicConfig(AOI_Type *base, aoi_event_t event, const aoi_event_config_t
                             *eventConfig)
```

Configures an AOI event.

This function configures an AOI event according to the `aoiEventConfig` structure. This function configures all inputs (A, B, C, and D) of all product terms (0, 1, 2, and 3) of a desired event.

Example:

```
aoi_event_config_t demoEventLogicStruct;

demoEventLogicStruct.PT0AC = kAOI_InvInputSignal;
demoEventLogicStruct.PT0BC = kAOI_InputSignal;
demoEventLogicStruct.PT0CC = kAOI_LogicOne;
demoEventLogicStruct.PT0DC = kAOI_LogicOne;

demoEventLogicStruct.PT1AC = kAOI_LogicZero;
demoEventLogicStruct.PT1BC = kAOI_LogicOne;
demoEventLogicStruct.PT1CC = kAOI_LogicOne;
demoEventLogicStruct.PT1DC = kAOI_LogicOne;

demoEventLogicStruct.PT2AC = kAOI_LogicZero;
demoEventLogicStruct.PT2BC = kAOI_LogicOne;
demoEventLogicStruct.PT2CC = kAOI_LogicOne;
demoEventLogicStruct.PT2DC = kAOI_LogicOne;

demoEventLogicStruct.PT3AC = kAOI_LogicZero;
demoEventLogicStruct.PT3BC = kAOI_LogicOne;
demoEventLogicStruct.PT3CC = kAOI_LogicOne;
demoEventLogicStruct.PT3DC = kAOI_LogicOne;

AOI_SetEventLogicConfig(AOI, kAOI_Event0, demoEventLogicStruct);
```

Parameters

- `base` – AOI peripheral address.
- `event` – Event which will be configured of type `aoi_event_t`.
- `eventConfig` – Pointer to type `aoi_event_config_t` structure. The user is responsible for filling out the members of this structure and passing the pointer to this function.

FSL_AOI_DRIVER_VERSION

Version 2.0.2.

enum _aoi_input_config

AOI input configurations.

The selection item represents the Boolean evaluations.

Values:

enumerator `kAOI_LogicZero`

Forces the input to logical zero.

enumerator `kAOI_InputSignal`

Passes the input signal.

enumerator `kAOI_InvInputSignal`

Inverts the input signal.

enumerator kAOI_LogicOne

Forces the input to logical one.

enum _aoi_event

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

Values:

enumerator kAOI_Event0

Event 0 index

enumerator kAOI_Event1

Event 1 index

enumerator kAOI_Event2

Event 2 index

enumerator kAOI_Event3

Event 3 index

typedef enum _aoi_input_config aoi_input_config_t

AOI input configurations.

The selection item represents the Boolean evaluations.

typedef enum _aoi_event aoi_event_t

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

typedef struct _aoi_event_config aoi_event_config_t

AOI event configuration structure.

Defines structure _aoi_event_config and use the AOI_SetEventLogicConfig() function to make whole event configuration.

AOI

AOI peripheral address

struct _aoi_event_config

#include <fsl_aoi.h> AOI event configuration structure.

Defines structure _aoi_event_config and use the AOI_SetEventLogicConfig() function to make whole event configuration.

Public Members

aoi_input_config_t PT0AC

Product term 0 input A

aoi_input_config_t PT0BC

Product term 0 input B

aoi_input_config_t PT0CC

Product term 0 input C

aoi_input_config_t PT0DC

Product term 0 input D

aoi_input_config_t PT1AC

Product term 1 input A

aoi_input_config_t PT1BC
Product term 1 input B

aoi_input_config_t PT1CC
Product term 1 input C

aoi_input_config_t PT1DC
Product term 1 input D

aoi_input_config_t PT2AC
Product term 2 input A

aoi_input_config_t PT2BC
Product term 2 input B

aoi_input_config_t PT2CC
Product term 2 input C

aoi_input_config_t PT2DC
Product term 2 input D

aoi_input_config_t PT3AC
Product term 3 input A

aoi_input_config_t PT3BC
Product term 3 input B

aoi_input_config_t PT3CC
Product term 3 input C

aoi_input_config_t PT3DC
Product term 3 input D

2.4 AON_LPADC: 12-bit single-ended SAR Analog-to-Digital Converter Driver

void ADC_GetDefaultConfig(*adc_config_t* *config)

Gets an available pre-defined settings for ADC configuration.

Parameters

- config – Pointer to ADC configuration structure, *adc_config_t*.

void ADC_Init(LPADC_Type *base, const *adc_config_t* *config)

Initializes the ADC module.

Parameters

- base – ADC peripheral base address.
- config – Pointer to configuration structure, *adc_config_t*.

void ADC_Deinit(LPADC_Type *base)

De-initializes the ADC module.

Parameters

- base – ADC peripheral base address.

static inline void ADC_Enable(LPADC_Type *base, bool enable)

Enable/disable the ADC module.

Parameters

- base – ADC peripheral base address.
- enable – Indicates whether to enable the ADC module. - true Enable the ADC module. - false Disable the ADC module.

static inline void ADC_DoFifoRst(LPADC_Type *base, adc_fifo_index_t index)

Reset ADC FIFO.

Parameters

- base – ADC peripheral base address.
- index – ADC FIFO index, adc_fifo_index_t

static inline void ADC_DoSoftWareRst(LPADC_Type *base)

Software reset ADC module.

Parameters

- base – ADC peripheral base address.

static inline uint32_t ADC_GetStatusFlags(LPADC_Type *base)

Get ADC status flags.

Parameters

- base – ADC peripheral base address.

Returns

Mask value for ADC status flags to be got, should be the OR'ed value of _adc_status_flags.

static inline void ADC_ClearStatusFlags(LPADC_Type *base, uint32_t mask)

Clear ADC status flags.

Note: Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – ADC peripheral base address.
- mask – Mask value for ADC status flags to be cleared, should be the OR'ed value of _adc_status_flags.

static inline uint32_t ADC_GetTriggerStatusFlags(LPADC_Type *base)

Get ADC trigger status flags.

Parameters

- base – ADC peripheral base address.

Returns

Mask value for ADC trigger status flags to be got, should be the OR'ed value of _adc_trig_status_flags.

static inline void ADC_ClearTriggerStatusFlags(LPADC_Type *base, uint32_t mask)

Clear ADC trigger status flags.

Parameters

- base – ADC peripheral base address.

- **mask** – Mask value for ADC trigger status flags to be cleared, should be the OR'ed value of `_adc_trig_status_flags`.

static inline void ADC_EnableInt(LPADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- **base** – ADC peripheral base address.
- **mask** – Mask value for interrupt events to be enabled, should be the OR'ed value of `_adc_int_en`.

static inline void ADC_DisableInt(LPADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- **base** – ADC peripheral base address.
- **mask** – Mask value for interrupt events to be disabled, should be the OR'ed value of `_adc_int_en`.

static inline void ADC_EnableFifoWatermarkDma(LPADC_Type *base, *adc_fifo_index_t* index, bool enable)

Enable/disable the specified ADC FIFO watermark DAM transfer.

Parameters

- **base** – ADC peripheral base address.
- **index** – ADC FIFO index, `adc_fifo_index_t`
- **enable** – Indicates whether to enable the specified ADC FIFO watermark DAM transfer. **true** Enable the specified ADC FIFO watermark DMA transfer. **false** Disable the specified ADC FIFO watermark DMA transfer.

void ADC_GetDefaultTrigConfig(*adc_trig_config_t* *config)

Gets an available pre-defined settings for ADC trigger's configuration.

Parameters

- **config** – Pointer to ADC trigger configuration structure, `adc_trig_config_t`.

void ADC_SetTrigConfig(LPADC_Type *base, *adc_trig_index_t* index, const *adc_trig_config_t* *config)

Configure the ADC trigger source.

Parameters

- **base** – ADC peripheral base address.
- **index** – ADC trigger index, `adc_trig_index_t`.
- **config** – Pointer to ADC trigger configuration structure, `adc_trig_config_t`.

static inline void ADC_DoSoftwareTrig(LPADC_Type *base, *adc_trig_index_t* index)

Do software trigger.

Parameters

- **base** – ADC peripheral base address.
- **index** – ADC trigger index, `adc_trig_index_t`.

static inline uint32_t ADC_GetResFifoCnt(LPADC_Type *base, *adc_fifo_index_t* index)

Get the count of result kept in specified ADC conversion result FIFO.

Parameters

- base – ADC peripheral base address.
- index – ADC FIFO index, `adc_fifo_index_t`

Returns

The count of result kept in specified ADC conversion result FIFO.

`bool ADC_GetConvRes(LPADC_Type *base, adc_conv_res_t *result, adc_fifo_index_t index)`

Get the result in specified conversion FIFO.

Parameters

- base – ADC peripheral base address.
- result – Pointer to ADC result structure, `adc_conv_res_t`.
- index – ADC FIFO index, `adc_fifo_index_t`

Returns

Status whether FIFO entry is valid. - true Conversion FIFO result is valid. - false Conversion FIFO result is invalid.

`void ADC_GetDefaultCmdConfig(adc_cmd_config_t *config)`

Gets an available pre-defined settings for ADC command's configuration.

Parameters

- config – Pointer to ADC command configuration structure, `adc_cmd_config_t`.

`void ADC_SetCmdConfig(LPADC_Type *base, adc_cmd_index_t index, const adc_cmd_config_t *config)`

Do ADC command configuration.

Parameters

- base – ADC peripheral base address.
- index – ADC command index, `adc_cmd_index_t`.
- config – Pointer to ADC command configuration structure, `adc_cmd_config_t`.

`static inline void ADC_SetOffsetTrimVal(LPADC_Type *base, uint8_t value)`

Set trim value for offset.

Parameters

- base – ADC peripheral base address.
- value – 8-bit unsigned value that should be limited to values between 0h to A0h, with a nominal value of 50h.

`static inline void ADC_GetOffsetTrimVal(LPADC_Type *base, uint8_t *pValue)`

Get trim value of offset.

Parameters

- base – ADC peripheral base address.
- pValue – Pointer to the variable in type of `uint8_t` to store offset value.

`void ADC_DoOffsetCal(LPADC_Type *base)`

Do offset calibration.

Parameters

- base – ADC peripheral base address.

`FSL_AON_LPADC_DRIVER_VERSION`

AON_LPADC driver version 2.0.1.

enum _adc_status_flags

ADC status flags enumeration.

Values:

enumerator kADC_ResFifo0RdyFlag

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator kADC_ResFifo0OverflowFlag

Indicates that more data has been written to the result FIFO 0 than it can hold.

enumerator kADC_ResFifo1RdyFlag

Indicates when the number of valid datawords in the result FIFO 1 is greater than the setting watermark level.

enumerator kADC_ResFifo1OverflowFlag

Indicates that more data has been written to the result FIFO 1 than it can hold.

enumerator kADC_TrigExcFlag

Indicates that a high priority trigger exception event has occurred.

enumerator kADC_TrigCompFlag

Indicates that a trigger sequence has occurred.

enumerator kADC_CalRdyFlag

Indicates that the calibration process is done.

enumerator kADC_ActFlag

Indicates that the ADC is in active state.

enumerator kADC_TrigAct

Indicates that the trigger is actively being processed.

enumerator kADC_CmdAct

Indicates that the command is actively being processed.

enum _adc_trig_status_flags

ADC trigger status flags enumeration.

Values:

enumerator kADC_Trig0IntFlag

Indicates trigger 0 is interrupted by a high priority exception.

enumerator kADC_Trig1IntFlag

Indicates trigger 1 is interrupted by a high priority exception.

enumerator kADC_Trig2IntFlag

Indicates trigger 2 is interrupted by a high priority exception.

enumerator kADC_Trig3IntFlag

Indicates trigger 3 is interrupted by a high priority exception.

enumerator kADC_Trig0CompFlag

Indicates trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kADC_Trig1CompFlag

Indicates trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kADC_Trig2CompFlag

Indicates trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kADC_Trig3CompFlag

Indicates trigger 3 is completed and trigger 3 has enabled completion interrupts.

enum _adc_int_en

ADC interrupt enablement mask enumeration.

Values:

enumerator kADC_ResFifo0WatermarkIntEn

Configures ADC to generate overflow interrupt requests when FIFO0 ready flag is asserted.

enumerator kADC_ResFifo0OverflowIntEn

Configures ADC to generate overflow interrupt requests when FIFO0 overflow flag is asserted.

enumerator kADC_ResFifo1WatermarkIntEn

Configures ADC to generate overflow interrupt requests when FIFO1 ready flag is asserted.

enumerator kADC_ResFifo1OverflowIntEn

Configures ADC to generate overflow interrupt requests when FIFO1 overflow flag is asserted.

enumerator kADC_TrigExcIntEn

Configures ADC to generate trigger exception interrupt.

enumerator kADC_Trig0CompIntEn

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kADC_Trig1CompIntEn

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kADC_Trig2CompIntEn

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kADC_Trig3CompIntEn

Configures ADC to generate interrupt when trigger 3 completion.

enum _adc_cal_conv_avg

ADC calibration conversion averages enumeration.

Values:

enumerator kADC_CalConvAvg0

Single conversion.

enumerator kADC_CalConvAvg2

2 conversions averaged.

enumerator kADC_CalConvAvg4

4 conversions averaged.

enumerator kADC_CalConvAvg8

8 conversions averaged.

enumerator kADC_CalConvAvg16

16 conversions averaged.

enumerator kADC_CalConvAvg32

32 conversions averaged.

enumerator kADC_CalConvAvg64
64 conversions averaged.

enumerator kADC_CalConvAvg128
128 conversions averaged.

enumerator kADC_CalConvAvg256
256 conversions averaged.

enumerator kADC_CalConvAvg512
512 conversions averaged.

enumerator kADC_CalConvAvg1024
1024 conversions averaged.

enum _adc_cal_conv_sample_time
ADC calibration conversion sample time enumeration.

Values:

enumerator kADC_CalConvSampTime_AdckCycle0
1 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle1
2 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle2
3 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle3
4 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle4
5 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle5
6 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle6
7 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle7
8 ADCK cycles sample time.

enum _adc_fifo_index
ADC FIFO enumeration.

Values:

enumerator kADC_Fifo0
FIFO 0.

enumerator kADC_Fifo1
FIFO 1.

enum _adc_trig_index
ADC trigger enumeration.

Values:

enumerator kADC_Trig0
Trigger 0.

enumerator kADC_Trig1

Trigger 1.

enumerator kADC_Trig2

Trigger 2.

enumerator kADC_Trig3

Trigger 3.

enum _adc_trig_cmd_index

ADC trigger command enumeration.

Values:

enumerator kADC_CmdNone

Not a valid selection from the command buffer, trigger event is ignored.

enumerator kADC_Cmd1

Trigger command 1.

enumerator kADC_Cmd2

Trigger command 2.

enumerator kADC_Cmd3

Trigger command 3.

enumerator kADC_Cmd4

Trigger command 4.

enumerator kADC_Cmd5

Trigger command 5.

enumerator kADC_Cmd6

Trigger command 6.

enumerator kADC_Cmd7

Trigger command 7.

enum _adc_conv_avg

ADC hardware conversion averages enumeration.

Values:

enumerator kADC_ConvAvg1

Single conversion.

enumerator kADC_ConvAvg2

2 conversions averaged.

enumerator kADC_ConvAvg4

4 conversions averaged.

enumerator kADC_ConvAvg8

8 conversions averaged.

enumerator kADC_ConvAvg16

16 conversions averaged.

enumerator kADC_ConvAvg32

32 conversions averaged.

enumerator kADC_ConvAvg64

64 conversions averaged.

enumerator kADC_ConvAvg128

128 conversions averaged.

enumerator kADC_ConvAvg256

256 conversions averaged.

enumerator kADC_ConvAvg512

512 conversions averaged.

enumerator kADC_ConvAvg1024

1024 conversions averaged.

enum _adc_sample_time

ADC conversion sample time enumeration.

Values:

enumerator kADC_ConvSampleTime_AdcCycle1

1 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle2

2 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle3

3 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle4

4 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle5

5 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle6

6 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle7

7 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle8

8 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle10

10 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle12

12 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle16

16 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle24

24 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle40

40 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle72

72 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle136

136 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle264
264 ADCK cycles.

enum _adc_comp_mode
ADC hardware compare mode enumeration.

Note: After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kADC_CompareDisabled
Compare disabled.

enumerator kADC_CompareStoreOnTrue
Compare enabled. Store on true.

enumerator kADC_CompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _adc_ref_voltage_src
ADC reference voltage source enumeration.

Values:

enumerator kADC_RefVoltageAlt1
Option 1 setting.

enumerator kADC_RefVoltageAlt2
Option 2 setting.

enum _adc_dac_settle_delay
ADC DAC settle time enumeration.

Values:

enumerator kADC_FastDacSettleTime
Fastest settling

enumerator kADC_SlowDacSettleTime
Slowest settling

enum _adc_trig_priority_policy
ADC trigger priority exception handle policy enumeration.

Values:

enumerator kADC_ConvPreemptImmedNotAutoResumed
If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kADC_ConvPreemptSoftlyNotAutoResumed
If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator `kADC_ConvPreemptImmedAutoRestarted`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kADC_ConvPreemptSoftlyAutoRestarted`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kADC_ConvPreemptImmedAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator `kADC_ConvPreemptSoftlyAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator `kADC_ConvPreemptSubsequentlyNotAutoResumed`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger, when higher priority conversion finishes, the preempted conversion will not automatically be restarted or resumed.

enumerator `kADC_ConvPreemptSubsequentlyAutoRestarted`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger, when higher priority conversion finishes, the preempted conversion will be automatically restarted.

enumerator `kADC_ConvPreemptSubsequentlyAutoResumed`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger, when higher priority conversion finishes, the preempted conversion will be automatically resumed.

enumerator `kADC_TriggerPriorityExceptionDisabled`

High priority trigger exception disabled.

typedef enum `_adc_cal_conv_avg` `adc_cal_conv_avg_t`

ADC calibration conversion averages enumeration.

typedef enum `_adc_cal_conv_sample_time` `adc_cal_conv_sample_time_t`

ADC calibration conversion sample time enumeration.

typedef enum `_adc_fifo_index` `adc_fifo_index_t`

ADC FIFO enumeration.

typedef enum `_adc_trig_index` `adc_trig_index_t`

ADC trigger enumeration.

typedef enum `_adc_trig_cmd_index` `adc_cmd_index_t`

ADC trigger command enumeration.

typedef enum *_adc_conv_avg* adc_conv_avg_t

ADC hardware conversion averages enumeration.

typedef enum *_adc_sample_time* adc_conv_sample_time_t

ADC conversion sample time enumeration.

typedef enum *_adc_comp_mode* adc_comp_mode_t

ADC hardware compare mode enumeration.

Note: After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum *_adc_ref_voltage_src* adc_ref_voltage_src_t

ADC reference voltage source enumeration.

typedef enum *_adc_dac_settle_delay* adc_dac_settle_delay_t

ADC DAC settle time enumeration.

typedef enum *_adc_trig_priority_policy* adc_trig_priority_policy_t

ADC trigger priority exception handle policy enumeration.

typedef struct *_adc_conv_res* adc_conv_res_t

ADC conversion result structure.

typedef struct *_adc_trig_config* adc_trig_config_t

ADC trigger configuration structure.

typedef struct *_adc_cmd_config* adc_cmd_config_t

ADC command configuration structure.

typedef struct *_adc_config* adc_config_t

ADC configuration structure.

ADC_TRIG_PRIORITY_EXC_HANDLE_POLICY_EN(tprictrl, tres, tcmdres, hpted)

Trigger priority exception handle policy helper macro.

tprictrl: ADC Trigger Priority Control. **00b** - If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started. **01b** - If a higher priority trigger is received during command processing, the current command is stopped after completing the current conversion. If averaging is enabled, the averaging loop will be completed. However, CMDHa[LOOP] will be ignored and the higher priority trigger will be serviced. **10b** - If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger.

tres: Trigger Resume Enable. **0b** - Trigger sequences interrupted by a high priority trigger exception are not automatically resumed or restarted. **1b** - Trigger sequences interrupted by a high priority trigger exception are automatically resumed or restarted.

tcmdres: Trigger Command Resume, tres must be asserted for tcmdres to be used. **0b** - Trigger sequences interrupted by a high priority trigger exception is automatically restarted. **1b** - Trigger sequences interrupted by a high priority trigger exception is resumed from the command executing before the exception.

hpted: High Priority Trigger Exception Disable **0b** - High priority trigger exceptions are enabled. **1b** - High priority trigger exceptions are disabled.

ADC_TRIG_PRIORITY_EXC_HANDLE_POLICY_DE(policy)

struct `_adc_conv_res`
#include <fsl_aon_lpadc.h> ADC conversion result structure.

Public Members

uint8_t `trigSrc`
Indicate the trigger source that initiated a conversion and generated this result.

uint8_t `cmdSrc`
Indicate the command buffer being executed that generated this result.

uint8_t `loopCnt`
Indicate the loop count value during command execution that generated this result.

uint16_t `convVal`
ADC conversion result.

struct `_adc_trig_config`
#include <fsl_aon_lpadc.h> ADC trigger configuration structure.

Public Members

bool `trigEn`
Controls hardware trigger source to initiate conversion on the rising edge of the input trigger source.

uint8_t `trigDelay`
Sets the trigger delay duration to wait at the start of servicing a trigger event.

uint8_t `trigPriority`
Sets the priority of the associated trigger source.

adc_fifo_index_t `resFifo`
Selects the FIFO to store the conversion result.

adc_cmd_index_t `cmdIndex`
Selects the trigger command from command buffer to execute upon detect of the associated trigger event.

struct `_adc_cmd_config`
#include <fsl_aon_lpadc.h> ADC command configuration structure.

Public Members

bool `waitTrigEn`
Controls whether commands are automatically executed or a trigger must be received before execution.

bool `autoChanIncEn`
Controls whether enable automatic channel incrementing.

uint8_t `loopCnt`
Sets how many times this command executes (and stores conversion result to RESFIFO) before finish and transition to the next command or Idle state.

uint8_t `chanIndex`
Sets conversion channel.

```

uint16_t compValLow
    Sets compare low value.
uint16_t compValHigh
    Sets compare high value.
adc_conv_avg_t convAvg
    Selects hardware average value.
adc_comp_mode_t compMode
    Selects hardware compare mode.
adc_cmd_index_t nextCmdIndex
    Selects the next command to execute after this command completes.
adc_conv_sample_time_t convSampleTime
    Selects sample time value.
struct __adc_config
    #include <fsl_aon_lpadc.h> ADC configuration structure.

```

Public Members

```

bool dozeModeEn
    Controls system transition to low power modes while ADC is converting.
bool convPauseEn
    Controls whether to enable the ADC pause function.
bool dynamicEleMatchEn
    Controls whether to enable dynamic element match.
uint8_t compTime
    Sets a configurable number of ADCK cycles to complete the compare phase of a conversion.
uint8_t convPauseDelay
    Sets the duration of pausing during command execution sequencing.
uint8_t fifo0Watermark
    Sets FIFO 0 watermark value.
adc_cal_conv_avg_t calConvAvg
    Selects calibration conversion averages.
adc_ref_voltage_src_t refVoltageSrc
    Selects the reference voltage source.
adc_dac_settle_delay_t dacSettleTime
    Selects DAC settle delay.
adc_cal_conv_sample_time_t calConvSampTime
    Selects calibration conversion sample time.
adc_trig_priority_policy_t trigPriorityPolicy
    Selects trigger priority exception handle policy.

```

2.5 CDOG

status_t CDOG_Init(CDOG_Type *base, *cdog_config_t* *conf)

Initialize CDOG.

This function initializes CDOG block and setting.

Parameters

- base – CDOG peripheral base address
- conf – CDOG configuration structure

Returns

Status of the init operation

void CDOG_Deinit(CDOG_Type *base)

Deinitialize CDOG.

This function deinitializes CDOG secure counter.

Parameters

- base – CDOG peripheral base address

void CDOG_GetDefaultConfig(*cdog_config_t* *conf)

Sets the default configuration of CDOG.

This function initialize CDOG config structure to default values.

Parameters

- conf – CDOG configuration structure

void CDOG_Stop(CDOG_Type *base, uint32_t stop)

Stops secure counter and instruction timer.

This function stops instruction timer and secure counter. This also change state of CDOG to IDLE.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter

void CDOG_Start(CDOG_Type *base, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in RELOAD and START registers for instruction timer and secure counter

Parameters

- base – CDOG peripheral base address
- reload – reload value
- start – start value

void CDOG_Check(CDOG_Type *base, uint32_t check)

Checks secure counter.

This function compares stop value in handler with secure counter value by writing to RELOAD register.

Parameters

- base – CDOG peripheral base address
- check – expected (stop) value

`void CDOG_Set(CDOG_Type *base, uint32_t stop, uint32_t reload, uint32_t start)`

Sets secure counter and instruction timer values.

This function sets value in STOP, RELOAD and START registers for instruction timer and secure counter.

Parameters

- `base` – CDOG peripheral base address
- `stop` – expected value which will be compared with value of secure counter
- `reload` – reload value for instruction timer
- `start` – start value for secure timer

`void CDOG_Add(CDOG_Type *base, uint32_t add)`

Add value to secure counter.

This function add specified value to secure counter.

Parameters

- `base` – CDOG peripheral base address.
- `add` – Value to be added.

`void CDOG_Add1(CDOG_Type *base)`

Add 1 to secure counter.

This function add 1 to secure counter.

Parameters

- `base` – CDOG peripheral base address.

`void CDOG_Add16(CDOG_Type *base)`

Add 16 to secure counter.

This function add 16 to secure counter.

Parameters

- `base` – CDOG peripheral base address.

`void CDOG_Add256(CDOG_Type *base)`

Add 256 to secure counter.

This function add 256 to secure counter.

Parameters

- `base` – CDOG peripheral base address.

`void CDOG_Sub(CDOG_Type *base, uint32_t sub)`

brief Subtract value to secure counter

This function subtract specified value to secure counter.

param `base` CDOG peripheral base address. param `sub` Value to be subtracted.

`void CDOG_Sub1(CDOG_Type *base)`

Subtract 1 from secure counter.

This function subtract specified 1 from secure counter.

Parameters

- `base` – CDOG peripheral base address.

void CDOG_Sub16(CDOG_Type *base)

Subtract 16 from secure counter.

This function subtract specified 16 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub256(CDOG_Type *base)

Subtract 256 from secure counter.

This function subtract specified 256 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_WritePersistent(CDOG_Type *base, uint32_t value)

Set the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.
- value – The value to be written.

uint32_t CDOG_ReadPersistent(CDOG_Type *base)

Get the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.

Returns

The persistent word.

FSL_CDOG_DRIVER_VERSION

Defines CDOG driver version 2.1.3.

Change log:

- Version 2.1.3
 - Re-design multiple instance IRQs and Clocks
 - Add fix for RESTART command errata
- Version 2.1.2
 - Support multiple IRQs
 - Fix default CONTROL values
- Version 2.1.1
 - Remove bit CONTROL[CONTROL_CTRL]
- Version 2.1.0
 - Rename CWT to CDOG
- Version 2.0.2
 - Fix MISRA-2012 issues
- Version 2.0.1
 - Fix doxygen issues
- Version 2.0.0
 - initial version

enum __cdog_debug_Action_ctrl_enum

Values:

enumerator kCDOG_DebugHaltCtrl_Run

enumerator kCDOG_DebugHaltCtrl_Pause

enum __cdog_irq_pause_ctrl_enum

Values:

enumerator kCDOG_IrqPauseCtrl_Run

enumerator kCDOG_IrqPauseCtrl_Pause

enum __cdog_fault_ctrl_enum

Values:

enumerator kCDOG_FaultCtrl_EnableReset

enumerator kCDOG_FaultCtrl_EnableInterrupt

enumerator kCDOG_FaultCtrl_NoAction

enum __code_lock_ctrl_enum

Values:

enumerator kCDOG_LockCtrl_Lock

enumerator kCDOG_LockCtrl_Unlock

typedef uint32_t secure_counter_t

SC_ADD(add)

SC_ADD1

SC_ADD16

SC_ADD256

SC_SUB(sub)

SC_SUB1

SC_SUB16

SC_SUB256

SC_CHECK(val)

struct cdog_config_t

#include <fsl_cdog.h>

2.6 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum `_crc_bits`

CRC bit width.

Values:

enumerator `kCrcBits16`

Generate 16-bit CRC code

enumerator `kCrcBits32`

Generate 32-bit CRC code

enum `_crc_result`

CRC result type.

Values:

enumerator `kCrcFinalChecksum`

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator `kCrcIntermediateChecksum`

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for `CRC_Init()` to continue adding data to this checksum.

typedef enum `_crc_bits` `crc_bits_t`

CRC bit width.

typedef enum `_crc_result` `crc_result_t`

CRC result type.

typedef struct `_crc_config` `crc_config_t`

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void `CRC_Init(CRC_Type *base, const crc_config_t *config)`

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

static inline void `CRC_Deinit(CRC_Type *base)`

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct __crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1\_0000\_0010\_0001 = x^{12} + x^5 + 1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.7 CTIMER: Standard counter/timers

void CTIMER_Init(CTIMER_Type *base, const *ctimer_config_t* *config)

Ungates the clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application before using the driver.

Parameters

- base – Ctimer peripheral base address
- config – Pointer to the user configuration structure.

void CTIMER_Deinit(CTIMER_Type *base)

Gates the timer clock.

Parameters

- base – Ctimer peripheral base address

void CTIMER_GetDefaultConfig(*ctimer_config_t* *config)

Fills in the timers configuration structure with the default settings.

The default values are:

```
config->mode = kCTIMER_TimerMode;
config->input = kCTIMER_Capture_0;
config->prescale = 0;
```

Parameters

- config – Pointer to the user configuration structure.

status_t CTIMER_SetupPwmPeriod(CTIMER_Type *base, const *ctimer_match_t* pwmPeriodChannel, *ctimer_match_t* matchChannel, uint32_t pwmPeriod, uint32_t pulsePeriod, bool enableInt)

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM period

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- pwmPeriod – PWM period match value
- pulsePeriod – Pulse width match value
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

Returns

kStatus_Success on success kStatus_Fail If matchChannel is equal to pwmPeriodChannel; this channel is reserved to set the PWM cycle If PWM pulse width register value is larger than 0xFFFFFFFF.

status_t CTIMER_SetupPwm(CTIMER_Type *base, const *ctimer_match_t* pwmPeriodChannel, *ctimer_match_t* matchChannel, uint8_t dutyCyclePercent, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz, bool enableInt)

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM frequency. Please use CTIMER_SetupPwmPeriod to set up the PWM with high resolution.

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- dutyCyclePercent – PWM pulse width; the value should be between 0 to 100
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – Timer counter clock in Hz
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

```
static inline void CTIMER_UpdatePwmPulsePeriod(CTIMER_Type *base, ctimer_match_t
                                              matchChannel, uint32_t pulsePeriod)
```

Updates the pulse period of an active PWM signal.

Parameters

- base – Ctimer peripheral base address
- matchChannel – Match pin to be used to output the PWM signal
- pulsePeriod – New PWM pulse width match value

```
status_t CTIMER_UpdatePwmDutycycle(CTIMER_Type *base, const ctimer_match_t
                                   pwmPeriodChannel, ctimer_match_t matchChannel,
                                   uint8_t dutyCyclePercent)
```

Updates the duty cycle of an active PWM signal.

Note: Please use CTIMER_SetupPwmPeriod to update the PWM with high resolution. This function can manually assign the specified channel to set the PWM cycle.

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- dutyCyclePercent – New PWM pulse width; the value should be between 0 to 100

Returns

kStatus_Success on success kStatus_Fail If PWM pulse width register value is larger than 0xFFFFFFFF.

```
static inline void CTIMER_EnableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Enables the selected Timer interrupts.

Parameters

- base – Ctimer peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *ctimer_interrupt_enable_t*

```
static inline void CTIMER_DisableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Disables the selected Timer interrupts.

Parameters

- base – Ctimer peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *ctimer_interrupt_enable_t*

```
static inline uint32_t CTIMER_GetEnabledInterrupts(CTIMER_Type *base)
```

Gets the enabled Timer interrupts.

Parameters

- base – Ctimer peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration *ctimer_interrupt_enable_t*

```
static inline uint32_t CTIMER_GetStatusFlags(CTIMER_Type *base)
```

Gets the Timer status flags.

Parameters

- base – Ctimer peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_ClearStatusFlags(CTIMER_Type *base, uint32_t mask)
```

Clears the Timer status flags.

Parameters

- base – Ctimer peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_StartTimer(CTIMER_Type *base)
```

Starts the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
static inline void CTIMER_StopTimer(CTIMER_Type *base)
```

Stops the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
FSL_CTIMER_DRIVER_VERSION
```

Version 2.3.3

```
enum _ctimer_capture_channel
```

List of Timer capture channels.

Values:

```
enumerator kCTIMER_Capture_0
```

Timer capture channel 0

```
enumerator kCTIMER_Capture_1
```

Timer capture channel 1

```
enumerator kCTIMER_Capture_3
```

Timer capture channel 3

```
enum _ctimer_capture_edge
```

List of capture edge options.

Values:

```
enumerator kCTIMER_Capture_RiseEdge
```

Capture on rising edge

```
enumerator kCTIMER_Capture_FallEdge
```

Capture on falling edge

```
enumerator kCTIMER_Capture_BothEdge
```

Capture on rising and falling edge

enum `_ctimer_match`

List of Timer match registers.

Values:

enumerator `kCTIMER_Match_0`

Timer match register 0

enumerator `kCTIMER_Match_1`

Timer match register 1

enumerator `kCTIMER_Match_2`

Timer match register 2

enumerator `kCTIMER_Match_3`

Timer match register 3

enum `_ctimer_external_match`

List of external match.

Values:

enumerator `kCTIMER_External_Match_0`

External match 0

enumerator `kCTIMER_External_Match_1`

External match 1

enumerator `kCTIMER_External_Match_2`

External match 2

enumerator `kCTIMER_External_Match_3`

External match 3

enum `_ctimer_match_output_control`

List of output control options.

Values:

enumerator `kCTIMER_Output_NoAction`

No action is taken

enumerator `kCTIMER_Output_Clear`

Clear the EM bit/output to 0

enumerator `kCTIMER_Output_Set`

Set the EM bit/output to 1

enumerator `kCTIMER_Output_Toggle`

Toggle the EM bit/output

enum `_ctimer_timer_mode`

List of Timer modes.

Values:

enumerator `kCTIMER_TimerMode`

enumerator `kCTIMER_IncreaseOnRiseEdge`

enumerator `kCTIMER_IncreaseOnFallEdge`

enumerator `kCTIMER_IncreaseOnBothEdge`

enum `_ctimer_interrupt_enable`

List of Timer interrupts.

Values:

enumerator `kCTIMER_Match0InterruptEnable`

Match 0 interrupt

enumerator `kCTIMER_Match1InterruptEnable`

Match 1 interrupt

enumerator `kCTIMER_Match2InterruptEnable`

Match 2 interrupt

enumerator `kCTIMER_Match3InterruptEnable`

Match 3 interrupt

enum `_ctimer_status_flags`

List of Timer flags.

Values:

enumerator `kCTIMER_Match0Flag`

Match 0 interrupt flag

enumerator `kCTIMER_Match1Flag`

Match 1 interrupt flag

enumerator `kCTIMER_Match2Flag`

Match 2 interrupt flag

enumerator `kCTIMER_Match3Flag`

Match 3 interrupt flag

enum `ctimer_callback_type_t`

Callback type when registering for a callback. When registering a callback an array of function pointers is passed the size could be 1 or 8, the callback type will tell that.

Values:

enumerator `kCTIMER_SingleCallback`

Single Callback type where there is only one callback for the timer. based on the status flags different channels needs to be handled differently

enumerator `kCTIMER_MultipleCallback`

Multiple Callback type where there can be 8 valid callbacks, one per channel. for both match/capture

typedef enum `_ctimer_capture_channel` `ctimer_capture_channel_t`

List of Timer capture channels.

typedef enum `_ctimer_capture_edge` `ctimer_capture_edge_t`

List of capture edge options.

typedef enum `_ctimer_match` `ctimer_match_t`

List of Timer match registers.

typedef enum `_ctimer_external_match` `ctimer_external_match_t`

List of external match.

typedef enum `_ctimer_match_output_control` `ctimer_match_output_control_t`

List of output control options.

```
typedef enum _ctimer_timer_mode ctimer_timer_mode_t
```

List of Timer modes.

```
typedef enum _ctimer_interrupt_enable ctimer_interrupt_enable_t
```

List of Timer interrupts.

```
typedef enum _ctimer_status_flags ctimer_status_flags_t
```

List of Timer flags.

```
typedef void (*ctimer_callback_t)(uint32_t flags)
```

```
typedef struct _ctimer_match_config ctimer_match_config_t
```

Match configuration.

This structure holds the configuration settings for each match register.

```
typedef struct _ctimer_config ctimer_config_t
```

Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the `CTIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void CTIMER_SetupMatch(CTIMER_Type *base, ctimer_match_t matchChannel, const  
                      ctimer_match_config_t *config)
```

Setup the match register.

User configuration is used to setup the match value and action to be taken when a match occurs.

Parameters

- base – Ctimer peripheral base address
- matchChannel – Match register to configure
- config – Pointer to the match configuration structure

```
uint32_t CTIMER_GetOutputMatchStatus(CTIMER_Type *base, uint32_t matchChannel)
```

Get the status of output match.

This function gets the status of output MAT, whether or not this output is connected to a pin. This status is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.

Parameters

- base – Ctimer peripheral base address
- matchChannel – External match channel, user can obtain the status of multiple match channels at the same time by using the logic of “|” enumeration `ctimer_external_match_t`

Returns

The mask of external match channel status flags. Users need to use the `_ctimer_external_match` type to decode the return variables.

```
void CTIMER_SetupCapture(CTIMER_Type *base, ctimer_capture_channel_t capture,  
                        ctimer_capture_edge_t edge, bool enableInt)
```

Setup the capture.

Parameters

- base – Ctimer peripheral base address
- capture – Capture channel to configure

- edge – Edge on the channel that will trigger a capture
- enableInt – Flag to enable channel interrupts, if enabled then the registered call back is called upon capture

static inline uint32_t CTIMER_GetTimerCountValue(CTIMER_Type *base)

Get the timer count value from TC register.

Parameters

- base – Ctimer peripheral base address.

Returns

return the timer count value.

void CTIMER_RegisterCallBack(CTIMER_Type *base, *ctimer_callback_t* *cb_func,
ctimer_callback_type_t cb_type)

Register callback.

This function configures CTimer Callback in following modes:

- Single Callback: cb_func should be pointer to callback function pointer
For example: *ctimer_callback_t* *ctimer_callback* = *pwm_match_callback*;
CTIMER_RegisterCallBack(CTIMER, &*ctimer_callback*, kCTIMER_SingleCallback);
- Multiple Callback: cb_func should be pointer to array of callback function pointers
Each element corresponds to Interrupt Flag in IR register. For example: *ctimer_callback_t* *ctimer_callback_table*[] = {
ctimer_match0_callback, NULL, NULL, *ctimer_match3_callback*, NULL, NULL, NULL, NULL};
CTIMER_RegisterCallBack(CTIMER, &*ctimer_callback_table*[0], kCTIMER_MultipleCallback);

Parameters

- base – Ctimer peripheral base address
- cb_func – Pointer to callback function pointer
- cb_type – callback function type, singular or multiple

static inline void CTIMER_Reset(CTIMER_Type *base)

Reset the counter.

The timer counter and prescale counter are reset on the next positive edge of the APB clock.

Parameters

- base – Ctimer peripheral base address

static inline void CTIMER_SetPrescale(CTIMER_Type *base, uint32_t prescale)

Setup the timer prescale value.

Specifies the maximum value for the Prescale Counter.

Parameters

- base – Ctimer peripheral base address
- prescale – Prescale value

static inline uint32_t CTIMER_GetCaptureValue(CTIMER_Type *base, *ctimer_capture_channel_t*
capture)

Get capture channel value.

Get the counter/timer value on the corresponding capture channel.

Parameters

- base – Ctimer peripheral base address

- capture – Select capture channel

Returns

The timer count capture value.

```
static inline void CTIMER__EnableResetMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                    match, bool enable)
```

Enable reset match channel.

Set the specified match channel reset operation.

Parameters

- base – Ctimer peripheral base address
- match – match channel used
- enable – Enable match channel reset operation.

```
static inline void CTIMER__EnableStopMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                    match, bool enable)
```

Enable stop match channel.

Set the specified match channel stop operation.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable match channel stop operation.

```
static inline void CTIMER__EnableMatchChannelReload(CTIMER_Type *base, ctimer_match_t
                                                    match, bool enable)
```

Enable reload channel falling edge.

Enable the specified match channel reload match shadow value.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable .

```
static inline void CTIMER__EnableRisingEdgeCapture(CTIMER_Type *base,
                                                    ctimer_capture_channel_t capture, bool
                                                    enable)
```

Enable capture channel rising edge.

Sets the specified capture channel for rising edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable rising edge capture.

```
static inline void CTIMER__EnableFallingEdgeCapture(CTIMER_Type *base,
                                                    ctimer_capture_channel_t capture, bool
                                                    enable)
```

Enable capture channel falling edge.

Sets the specified capture channel for falling edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable falling edge capture.

```
static inline void CTIMER_SetShadowValue(CTIMER_Type *base, ctimer_match_t match,
                                         uint32_t matchvalue)
```

Set the specified match shadow channel.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- matchvalue – Reload the value of the corresponding match register.

```
struct __ctimer_match_config
```

#include <fsl_ctimer.h> Match configuration.

This structure holds the configuration settings for each match register.

Public Members

uint32_t matchValue

This is stored in the match register

bool enableCounterReset

true: Match will reset the counter false: Match will not reset the counter

bool enableCounterStop

true: Match will stop the counter false: Match will not stop the counter

ctimer_match_output_control_t outControl

Action to be taken on a match on the EM bit/output

bool outPinInitState

Initial value of the EM bit/output

bool enableInterrupt

true: Generate interrupt upon match false: Do not generate interrupt on match

```
struct __ctimer_config
```

#include <fsl_ctimer.h> Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the CTIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

ctimer_timer_mode_t mode

Timer mode

ctimer_capture_channel_t input

Input channel to increment the timer, used only in timer modes that rely on this input signal to increment TC

uint32_t prescale

Prescale value

2.8 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

`void EDMA_Init(EDMA_Type *base, const edma_config_t *config)`

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “*edma_config_t*”.

`void EDMA_Deinit(EDMA_Type *base)`

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

`void EDMA_InstallTCD(EDMA_Type *base, uint32_t channel, edma_tcd_t *tcd)`

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

`void EDMA_GetDefaultConfig(edma_config_t *config)`

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

`void EDMA_InitChannel(EDMA_Type *base, uint32_t channel, edma_channel_config_t *channelConfig)`

EDMA Channel initialization.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelConfig – pointer to user’s eDMA4 channel config structure, see *edma_channel_config_t* for detail.

```
static inline void EDMA_SetChannelMemoryAttribute(EDMA_Type *base, uint32_t channel,  
                                                edma_channel_memory_attribute_t  
                                                writeAttribute,  
                                                edma_channel_memory_attribute_t  
                                                readAttribute)
```

Set channel memory attribute.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- writeAttribute – Attributes associated with a write transaction.
- readAttribute – Attributes associated with a read transaction.

```
static inline void EDMA_SetChannelSignExtension(EDMA_Type *base, uint32_t channel, uint8_t  
                                                position)
```

Set channel sign extension.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- position – A non-zero value specifying the sign extend bit position. If 0, sign extension is disabled.

```
static inline void EDMA_SetChannelSwapSize(EDMA_Type *base, uint32_t channel,  
                                           edma_channel_swap_size_t swapSize)
```

Set channel swap size.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- swapSize – Swap occurs with respect to the specified transfer size. If 0, swap is disabled.

```
static inline void EDMA_SetChannelAccessType(EDMA_Type *base, uint32_t channel,  
                                             edma_channel_access_type_t  
                                             channelAccessType)
```

Set channel access type.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelAccessType – eDMA4's transactions type on the system bus when the channel is active.

```
static inline void EDMA_SetChannelMux(EDMA_Type *base, uint32_t channel, uint32_t  
                                     channelRequestSource)
```

Set channel request source.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

- `channelRequestSource` – eDMA hardware service request source for the channel. User need to use the `dma_request_source_t` type as the input parameter. Note that devices may use other enum type to express dma request source and User can find it in SOC header or `fsl_edma_soc.h`.

```
static inline uint32_t EDMA_GetChannelSystemBusInformation(EDMA_Type *base, uint32_t channel)
```

Gets the channel identification and attribute information on the system bus interface.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the `_edma_channel_sys_bus_info` type to decode the return variables.

```
static inline void EDMA_EnableChannelMasterIDReplication(EDMA_Type *base, uint32_t channel, bool enable)
```

Set channel master ID replication.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `enable` – true is enable, false is disable.

```
static inline void EDMA_SetChannelProtectionLevel(EDMA_Type *base, uint32_t channel, edma_channel_protection_level_t level)
```

Set channel security level.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `level` – security level.

```
void EDMA_ResetChannel(EDMA_Type *base, uint32_t channel)
```

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

```
void EDMA_SetTransferConfig(EDMA_Type *base, uint32_t channel, const edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the `EDMA_ResetChannel`.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(EDMA_Type *base, uint32_t channel, const
                               edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(EDMA_Type *base, uint32_t channel, const
                                      edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(EDMA_Type *base, uint32_t channel, edma_channel_link_type_t
                        type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
void EDMA_SetBandWidth(EDMA_Type *base, uint32_t channel, edma_bandwidth_t  
bandWidth)
```

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_SetModulo(EDMA_Type *base, uint32_t channel, edma_modulo_t srcModulo,  
edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA_EnableAutoStopRequest(EDMA_Type *base, uint32_t channel, bool  
enable)
```

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

`void EDMA__EnableChannelInterrupts(EDMA_Type *base, uint32_t channel, uint32_t mask)`

Enables the interrupt source for the eDMA transfer.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

`void EDMA__DisableChannelInterrupts(EDMA_Type *base, uint32_t channel, uint32_t mask)`

Disables the interrupt source for the eDMA transfer.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `mask` – The mask of the interrupt source to be set. Use the defined `edma_interrupt_enable_t` type.

`void EDMA__SetMajorOffsetConfig(EDMA_Type *base, uint32_t channel, int32_t sourceOffset, int32_t destOffset)`

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `base` – eDMA peripheral base address.
- `channel` – edma channel number.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

`void EDMA__ConfigChannelSoftwareTCD(edma_tcd_t *tcd, const edma_transfer_config_t *transfer)`

Sets TCD fields according to the user's channel transfer configuration structure, `edma_transfer_config_t`.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__ConfigChannelSoftwareTCDExt`

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- `tcd` – Pointer to the TCD structure.
- `transfer` – channel transfer configuration pointer.

void EDMA_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdResetExt

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfig(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetTransferConfigExt

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {  
...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_TcdSetMinorOffsetConfig(*edma_tcd_t* *tcd, const *edma_minor_offset_config_t* *config)

Configures the eDMA TCD minor offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMinorOffsetConfigExt

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- `tcd` – A point to the TCD structure.
- `config` – A pointer to the minor offset configuration structure.

```
void EDMA_TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t type, uint32_t  
linkedChannel)
```

Sets the channel link for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdSetChannelLinkExt`

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- `tcd` – Point to the TCD structure.
- `type` – Channel link type, it can be one of:
 - `kEDMA_LinkNone`
 - `kEDMA_MinorLink`
 - `kEDMA_MajorLink`
- `linkedChannel` – The linked channel number.

```
static inline void EDMA_TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdSetBandWidthExt`

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- `tcd` – A pointer to the TCD structure.
- `bandWidth` – A bandwidth setting, which can be one of the following:
 - `kEDMABandwidthStallNone`
 - `kEDMABandwidthStall4Cycle`
 - `kEDMABandwidthStall8Cycle`

```
void EDMA_TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t  
destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdSetModuloExt`

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `tcd` – A pointer to the TCD structure.
- `srcModulo` – A source modulo value.
- `destModulo` – A destination modulo value.

static inline void EDMA_TcdEnableAutoStopRequest(*edma_tcd_t* *tcd, bool enable)

Sets the auto stop request for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdEnableAutoStopRequestExt

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- `tcd` – A pointer to the TCD structure.
- `enable` – The command to enable (true) or disable (false).

void EDMA_TcdEnableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Enables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdEnableInterruptsExt

Parameters

- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

void EDMA_TcdDisableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Disables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdDisableInterruptsExt

Parameters

- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

void EDMA_TcdSetMajorOffsetConfig(*edma_tcd_t* *tcd, int32_t sourceOffset, int32_t destOffset)

Configures the eDMA TCD major offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMajorOffsetConfigExt

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `tcd` – A point to the TCD structure.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

void EDMA_ConfigChannelSoftwareTCDExt(*EDMA_Type* *base, *edma_tcd_t* *tcd, const *edma_transfer_config_t* *transfer)

Sets TCD fields according to the user's channel transfer configuration structure, `edma_transfer_config_t`.

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.
- transfer – channel transfer configuration pointer.

void EDMA_TcdResetExt(*EDMA_Type* *base, *edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfigExt(*EDMA_Type* *base, *edma_tcd_t* *tcd, const
edma_transfer_config_t *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {  
...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.


```
void EDMA__TcdSetMinorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, const  
                                     edma_minor_offset_config_t *config)
```

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLinkExt(EDMA_Type *base, edma_tcd_t *tcd,  
                               edma_channel_link_type_t type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA__TcdSetBandWidthExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                             edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA__TcdSetModuloExt(EDMA_Type *base, edma_tcd_t *tcd, edma_modulo_t srcModulo,  
                           edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA__TcdEnableAutoStopRequestExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                                    bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

```
void EDMA__TcdEnableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA__TcdDisableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA__TcdSetMajorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, int32_t  
                                       sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- sourceOffset – source address offset will be applied to source address after major loop done.

- `destOffset` – destination address offset will be applied to source address after major loop done.

static inline void EDMA_EnableChannelRequest(*EDMA_Type* *base, uint32_t channel)

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

static inline void EDMA_DisableChannelRequest(*EDMA_Type* *base, uint32_t channel)

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

static inline void EDMA_TriggerChannelStart(*EDMA_Type* *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

uint32_t EDMA_GetRemainingMajorLoopCount(*EDMA_Type* *base, uint32_t channel)

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

- a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in `DMA_TCDn_NBYTES_MLNO` register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the `dma_engine` is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: $\text{RemainingBytes} = \text{RemainingMajorLoopCount} * \text{NBYTES}(\text{initially configured})$
-

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

static inline uint32_t EDMA_GetErrorStatusFlags(*EDMA_Type* *base)

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

uint32_t EDMA_GetChannelStatusFlags(*EDMA_Type* *base, uint32_t channel)

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

void EDMA_ClearChannelStatusFlags(*EDMA_Type* *base, uint32_t channel, uint32_t mask)

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

void EDMA_CreateHandle(*edma_handle_t* *handle, *EDMA_Type* *base, uint32_t channel)

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_InstallTCDMemory(*edma_handle_t* *handle, *edma_tcd_t* *tcdPool, uint32_t tcdSize)

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

```
void EDMA_SetCallback(edma_handle_t *handle, edma_callback callback, void *userData)
```

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

```
void EDMA_PrepareTransferConfig(edma_transfer_config_t *config, void *srcAddr, uint32_t  
                               srcWidth, int16_t srcOffset, void *destAddr, uint32_t  
                               destWidth, int16_t destOffset, uint32_t bytesEachRequest,  
                               uint32_t transferBytes)
```

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE). User can check if 128 bytes support is available for specific instance by FSL_FEATURE_EDMA_INSTANCE_SUPPORT_128_BYTES_TRANSFERn.

Parameters

- config – The user configuration structure of type *edma_transfer_t*.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

```
void EDMA_PrepareTransfer(edma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth,  
                          void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest,  
                          uint32_t transferBytes, edma_transfer_type_t type)
```

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type *edma_transfer_t*.
- srcAddr – eDMA transfer source address.

- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- type – eDMA transfer type.

```
void EDMA__PrepareTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd, void *srcAddr,
                             uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t
                             destWidth, int16_t destOffset, uint32_t bytesEachRequest,
                             uint32_t transferBytes, edma_tcd_t *nextTcd)
```

Prepares the eDMA transfer content descriptor.

This function prepares the transfer content descriptor structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- nextTcd – eDMA transfer linked TCD address.

```
status_t EDMA__SubmitTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd)
```

Submits the eDMA transfer content descriptor.

This function submits the eDMA transfer request according to the transfer content descriptor. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Typical user case:

a. submit single transfer

```
edma_tcd_t tcd;
EDMA__PrepareTransferTCD(handle, tcd, ...)
EDMA__SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

b. submit static link transfer,

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ...)
EDMA_PrepareTransferTCD(handle, &tcd[1], ...)
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

c. submit dynamic link transfer

```
edma_tcd_t tcdpool[2];
EDMA_InstallTCDMemory(&g_DMA_Handle, tcdpool, 2);
edma_tcd_t tcd;
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

d. submit loop transfer

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ..., &tcd[1])
EDMA_PrepareTransferTCD(handle, &tcd[1], ..., &tcd[0])
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

```
status_t EDMA_SubmitLoopTransfer(edma_handle_t *handle, edma_transfer_config_t *transfer,
                                uint32_t transferLoopCount)
```

Submits the eDMA scatter gather transfer configurations.

The function is target for submit loop transfer request, the ring transfer request means that the transfer request TAIL is link to HEAD, such as, A->B->C->D->A, or A->A

To use the ring transfer feature, the application should allocate several transfer object, such as

```
edma_channel_transfer_config_t transfer[2];
EDMA_TransferSubmitLoopTransfer(psHandle, &transfer, 2U);
```

Then eDMA driver will link transfer[0] and transfer[1] to each other

Note: Application should check the return value of this function to avoid transfer request submit failed

Parameters

- handle – eDMA handle pointer
- transfer – pointer to user's eDMA channel configure structure, see edma_channel_transfer_config_t for detail
- transferLoopCount – the count of the transfer ring, if loop count is 1, that means that the one will link to itself.

Return values

- kStatus_Success – It means submit transfer request succeed
- kStatus_EDMA_Busy – channel is in busy status
- kStatus_InvalidArgument – Invalid Argument

```
void EDMA_StartTransfer(edma_handle_t *handle)
```

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

```
void EDMA_StopTransfer(edma_handle_t *handle)
```

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

```
void EDMA_AbortTransfer(edma_handle_t *handle)
```

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As sga and sga_index are calculated based on the DLAST_SGA bitfield lies in the TCD_CSR register, the sga_index in this case should be 2 (DLAST_SGA of TCD[1] stores the address of TCD[2]). Thus, the “tcdUsed” updated should be (tcdUsed - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major loop completes. Therefore, ensure that the header and tcdUsed updated are identical for them. tcdUsed are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.10.6.

_edma_transfer_status eDMA transfer status

Values:

enumerator kStatus_EDMA_QueueFull

TCD queue is full.

enumerator kStatus_EDMA_Busy

Channel is busy and can't handle the transfer request.

enum _edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes

Source/Destination data transfer size is 64 bytes every time

enumerator kEDMA_TransferSize128Bytes

Source/Destination data transfer size is 128 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes

Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes

Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes

Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes

Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes

Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes

Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes

Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes

Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes

Circular buffer size is 2 G bytes.

enum _edma_bandwidth

Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

_edma_error_status_flags eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag
NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag
Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag
Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag
Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag
Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag
Error channel number of the cancelled channel number

enumerator kEDMA_TransferCanceledFlag
Transfer cancelled

enumerator kEDMA_ValidFlag
No error occurred, this bit is 0. Otherwise, it is 1.

_edma_interrupt_enable eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable
Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type

eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral
Transfer from Peripheral to peripheral

enum edma_channel_memory_attribute

eDMA channel memory attribute

Values:

enumerator kEDMA_ChannelNoWriteNoReadNoCacheNoBuffer
No write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadNoCacheBufferable

No write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableNoBuffer

No write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableBufferable

No write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheNoBuffer

No write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheBufferable

No write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableNoBuffer

No write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableBufferable

No write allocate, read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheNoBuffer

write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheBufferable

write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableNoBuffer

write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableBufferable

write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheNoBuffer

write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheBufferable

write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadCacheableNoBuffer

write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadCacheableBufferable

write allocate, read allocate, cacheable, bufferable.

enum _edma_channel_swap_size

eDMA4 channel swap size

Values:

enumerator kEDMA_ChannelSwapDisabled

Swap is disabled.

enumerator kEDMA_ChannelReadWith8bitSwap

Swap occurs with respect to the read 8bit.

enumerator kEDMA_ChannelReadWith16bitSwap

Swap occurs with respect to the read 16bit.

enumerator kEDMA_ChannelReadWith32bitSwap

Swap occurs with respect to the read 32bit.

enumerator kEDMA_ChannelWriteWith8bitSwap

Swap occurs with respect to the write 8bit.

enumerator kEDMA_ChannelWriteWith16bitSwap

Swap occurs with respect to the write 16bit.

enumerator kEDMA_ChannelWriteWith32bitSwap

Swap occurs with respect to the write 32bit.

eDMA channel system bus information, `_edma_channel_sys_bus_info`

Values:

enumerator kEDMA_PrivilegedAccessLevel

Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId

DMA's master ID when channel is active and master ID replication is enabled.

enum `_edma_channel_access_type`

eDMA4 channel access type

Values:

enumerator kEDMA_ChannelDataAccess

Data access for eDMA4 transfers.

enumerator kEDMA_ChannelInstructionAccess

Instruction access for eDMA4 transfers.

enum `_edma_channel_protection_level`

eDMA4 channel protection level

Values:

enumerator kEDMA_ChannelProtectionLevelUser

user protection level for eDMA transfers.

enumerator kEDMA_ChannelProtectionLevelPrivileged

Privileged protection level eDMA transfers.

typedef enum `_edma_transfer_size` `edma_transfer_size_t`

eDMA transfer configuration

typedef enum `_edma_modulo` `edma_modulo_t`

eDMA modulo configuration

typedef enum `_edma_bandwidth` `edma_bandwidth_t`

Bandwidth control.

typedef enum `_edma_channel_link_type` `edma_channel_link_type_t`

Channel link type.

typedef enum `_edma_transfer_type` `edma_transfer_type_t`

eDMA transfer type

typedef struct `_edma_channel_Preemption_config` `edma_channel_Preemption_config_t`

eDMA channel priority configuration

typedef struct `_edma_minor_offset_config` `edma_minor_offset_config_t`

eDMA minor offset configuration

```
typedef enum edma_channel_memory_attribute edma_channel_memory_attribute_t
    eDMA channel memory attribute
```

```
typedef enum _edma_channel_swap_size edma_channel_swap_size_t
    eDMA4 channel swap size
```

```
typedef enum _edma_channel_access_type edma_channel_access_type_t
    eDMA4 channel access type
```

```
typedef enum _edma_channel_protection_level edma_channel_protection_level_t
    eDMA4 channel protection level
```

```
typedef struct _edma_channel_config edma_channel_config_t
    eDMA4 channel configuration
```

```
typedef edma_core_tcd_t edma_tcd_t
    eDMA TCD.
```

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

```
typedef struct _edma_transfer_config edma_transfer_config_t
    edma4 channel transfer configuration
```

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-


```
typedef struct _edma_config edma_config_t
```

eDMA global configuration structure.

```
typedef void (*edma_callback)(struct _edma_handle *handle, void *userData, bool transferDone,
uint32_t tcds)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface EDMA_GetUnusedTCDNumber.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcds

How many tcds are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcds are finished between the last callback and this.

```
typedef struct _edma_handle edma_handle_t
```

eDMA transfer handle structure

```
FSL_EDMA_DRIVER_EDMA4
```

eDMA driver name

```
EDMA_ALLOCATE_TCD(name, number)
```

Macro used for allocate edma TCD.

```
DMA_DCHPRI_INDEX(channel)
```

Compute the offset unit from DCHPRI3.

```
struct _edma_channel_Preemption_config
```

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

```
bool enableChannelPreemption
```

If true: a channel can be suspended by other channel with higher priority

```
bool enablePreemptAbility
```

If true: a channel can suspend other channel with low priority

```
uint8_t channelPriority
```

Channel priority

```
struct _edma_minor_offset_config
```

#include <fsl_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct __edma_channel_config

#include <fsl_edma.h> eDMA4 channel configuration

Public Members

edma_channel_preemption_config_t channelPreemptionConfig

channel preemption configuration

edma_channel_memory_attribute_t channelReadMemoryAttribute

channel memory read attribute configuration

edma_channel_memory_attribute_t channelWriteMemoryAttribute

channel memory write attribute configuration

edma_channel_swap_size_t channelSwapSize

channel swap size configuration

edma_channel_access_type_t channelAccessType

channel access type configuration

uint8_t channelDataSignExtensionBitPosition

channel data sign extension bit position configuration

uint32_t channelRequestSource

hardware service request source for the channel

bool enableMasterIDReplication

enable master ID replication

edma_channel_protection_level_t protectionLevel

protection level

struct __edma_transfer_config

#include <fsl_edma.h> edma4 channel transfer configuration

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset value in byte unit applied to the current source address to form the next-state value as each source read is completed

int16_t destOffset

Sign-extended offset value in byte unit applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

bytes in each minor loop or each request range: 1 - (2³⁰ - 1) when minor loop mapping is enabled range: 1 - (2¹⁰ - 1) when minor loop mapping is enabled and source or dest minor loop offset is enabled range: 1 - (2³² - 1) when minor loop mapping is disabled

uint32_t majorLoopCounts

minor loop counts in each major loop, should be 1 at least for each transfer range: (0 - (2¹⁵ - 1)) when minor loop channel link is disabled range: (0 - (2⁹ - 1)) when minor loop channel link is enabled total bytes in a transfer = minorLoopCountsEachMajorLoop * bytesEachMinorLoop

uint16_t enabledInterruptMask

channel interrupt to enable, can be OR'ed value of _edma_interrupt_enable

edma_modulo_t srcAddrModulo
source circular data queue range

int32_t srcMajorLoopOffset
source major loop offset

edma_modulo_t dstAddrModulo
destination circular data queue range

int32_t dstMajorLoopOffset
destination major loop offset

bool enableSrcMinorLoopOffset
enable source minor loop offset

bool enableDstMinorLoopOffset
enable dest minor loop offset

int32_t minorLoopOffset
burst offset, the offset will be applied after minor loop update

bool enableChannelMajorLoopLink
channel link when major loop complete

uint32_t majorLoopLinkChannel
major loop link channel number

bool enableChannelMinorLoopLink
channel link when minor loop complete

uint32_t minorLoopLinkChannel
minor loop link channel number

edma_tcd_t *linkTCD
pointer to the link transfer control descriptor

struct _edma_config
#include <fsl_edma.h> eDMA global configuration structure.

Public Members

bool enableMasterIdReplication
Enable (true) master ID replication. If Master ID replication is disabled, the privileged protection level (supervisor mode) for eDMA4 transfers is used.

bool enableGlobalChannelLink
Enable(true) channel linking is available and controlled by each channel's link settings.

bool enableHaltOnError
Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

bool enableDebugMode
Enable(true) eDMA4 debug mode. When in debug mode, the eDMA4 stalls the start of a new channel. Executing channels are allowed to complete.

bool enableRoundRobinArbitration
Enable(true) channel linking is available and controlled by each channel's link settings.

edma_channel_config_t *channelConfig[1]
channel preemption configuration

```
struct _edma_handle
    #include <fsl_edma.h> eDMA transfer handle structure
```

Public Members

edma_callback callback
Callback function for major count exhausted.

void *userData
Callback function parameter.

EDMA_ChannelType *channelBase
eDMA peripheral channel base address.

EDMA_Type *base
eDMA peripheral base address

EDMA_TCDType *tcdBase
eDMA peripheral tcd base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint32_t channel
eDMA channel number.

volatile int8_t header
The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

volatile int8_t tail
The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed
The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

2.9 eDMA core Driver

```
enum _edma_tcd_type
    eDMA tcd flag type

    Values:

    enumerator kEDMA_EDMA4Flag
        Data access for eDMA4 transfers.

    enumerator kEDMA_EDMA5Flag
        Instruction access for eDMA4 transfers.

typedef struct _edma_core_mp edma_core_mp_t
    edma core channel struture definition

typedef struct _edma_core_channel edma_core_channel_t
    edma core channel struture definition
```

```
typedef enum _edma_tcd_type edma_tcd_type_t
    eDMA tcd flag type
typedef struct _edma5_core_tcd edma5_core_tcd_t
    edma5 core TCD struture definition
typedef struct _edma4_core_tcd edma4_core_tcd_t
    edma4 core TCD struture definition
typedef struct _edma_core_tcd edma_core_tcd_t
    edma core TCD struture definition
typedef edma_core_channel_t EDMA_ChannelType
    EDMA typedef.
typedef edma_core_tcd_t EDMA_TCDType
typedef void EDMA_Type

DMA_CORE_MP_CSR_EDBG_MASK
DMA_CORE_MP_CSR_ERCA_MASK
DMA_CORE_MP_CSR_HAE_MASK
DMA_CORE_MP_CSR_HALT_MASK
DMA_CORE_MP_CSR_GCLC_MASK
DMA_CORE_MP_CSR_GMRC_MASK
DMA_CORE_MP_CSR_EDBG(x)
DMA_CORE_MP_CSR_ERCA(x)
DMA_CORE_MP_CSR_HAE(x)
DMA_CORE_MP_CSR_HALT(x)
DMA_CORE_MP_CSR_GCLC(x)
DMA_CORE_MP_CSR_GMRC(x)
DMA_CSR_INTMAJOR_MASK
DMA_CSR_INTHALF_MASK
DMA_CSR_DREQ_MASK
DMA_CSR_ESG_MASK
DMA_CSR_BWC_MASK
DMA_CSR_BWC(x)
DMA_CSR_START_MASK
DMA_CITER_ELINKNO_CITER_MASK
DMA_BITER_ELINKNO_BITER_MASK
DMA_CITER_ELINKNO_CITER_SHIFT
DMA_CITER_ELINKYES_CITER_MASK
```

DMA_CITER_ELINKYES_CITER_SHIFT
DMA_ATTR_SMOD_MASK
DMA_ATTR_DMOD_MASK
DMA_CITER_ELINKNO_ELINK_MASK
DMA_CSR_MAJORELINK_MASK
DMA_BITER_ELINKYES_ELINK_MASK
DMA_CITER_ELINKYES_ELINK_MASK
DMA_CSR_MAJORLINKCH_MASK
DMA_BITER_ELINKYES_LINKCH_MASK
DMA_CITER_ELINKYES_LINKCH_MASK
DMA_NBYTES_MLOFFYES_MLOFF_MASK
DMA_NBYTES_MLOFFYES_DMLOE_MASK
DMA_NBYTES_MLOFFYES_SMLOE_MASK
DMA_NBYTES_MLOFFNO_NBYTES_MASK
DMA_ATTR_DMOD(x)
DMA_ATTR_SMOD(x)
DMA_BITER_ELINKYES_LINKCH(x)
DMA_CITER_ELINKYES_LINKCH(x)
DMA_NBYTES_MLOFFYES_MLOFF(x)
DMA_NBYTES_MLOFFYES_DMLOE(x)
DMA_NBYTES_MLOFFYES_SMLOE(x)
DMA_NBYTES_MLOFFNO_NBYTES(x)
DMA_NBYTES_MLOFFYES_NBYTES(x)
DMA_ATTR_DSIZE(x)
DMA_ATTR_SSIZE(x)
DMA_CSR_DREQ(x)
DMA_CSR_MAJORLINKCH(x)
DMA_CH_MATTR_WCACHE(x)
DMA_CH_MATTR_RCACHE(x)
DMA_CH_CSR_SIGNEXT_MASK
DMA_CH_CSR_SIGNEXT_SHIFT
DMA_CH_CSR_SWAP_MASK
DMA_CH_CSR_SWAP_SHIFT

DMA_CH_SBR_INSTR_MASK

DMA_CH_SBR_INSTR_SHIFT

DMA_CH_MUX_SOURCE(x)

DMA_ERR_DBE_FLAG

DMA error flag.

DMA_ERR_SBE_FLAG

DMA_ERR_SGE_FLAG

DMA_ERR_NCE_FLAG

DMA_ERR_DOE_FLAG

DMA_ERR_DAE_FLAG

DMA_ERR_SOE_FLAG

DMA_ERR_SAE_FLAG

DMA_ERR_ERRCHAN_FLAG

DMA_ERR_ECX_FLAG

DMA_ERR_FLAG

DMA_CLEAR_DONE_STATUS(base, channel)

get/clear DONE bit

DMA_GET_DONE_STATUS(base, channel)

DMA_ENABLE_ERROR_INT(base, channel)

enable/disable error interrupt

DMA_DISABLE_ERROR_INT(base, channel)

DMA_CLEAR_ERROR_STATUS(base, channel)

get/clear error status

DMA_GET_ERROR_STATUS(base, channel)

DMA_CLEAR_INT_STATUS(base, channel)

get/clear INT status

DMA_GET_INT_STATUS(base, channel)

DMA_ENABLE_MAJOR_INT(base, channel)

enable/disable MAJOR/HALF INT

DMA_ENABLE_HALF_INT(base, channel)

DMA_DISABLE_MAJOR_INT(base, channel)

DMA_DISABLE_HALF_INT(base, channel)

EDMA_TCD_ALIGN_SIZE

EDMA tcd align size.

EDMA_CORE_BASE(base)

EDMA base address convert macro.

EDMA_MP_BASE(base)

EDMA_CHANNEL_BASE(base, channel)

EDMA_TCD_BASE(base, channel)

EDMA_TCD_TYPE(x)

EDMA TCD type macro.

EDMA_TCD_SADDR(tcd, flag)

EDMA TCD address convert macro.

EDMA_TCD_SOFF(tcd, flag)

EDMA_TCD_ATTR(tcd, flag)

EDMA_TCD_NBYTES(tcd, flag)

EDMA_TCD_SLAST(tcd, flag)

EDMA_TCD_DADDR(tcd, flag)

EDMA_TCD_DOFF(tcd, flag)

EDMA_TCD_CITER(tcd, flag)

EDMA_TCD_DLAST_SGA(tcd, flag)

EDMA_TCD_CSR(tcd, flag)

EDMA_TCD_BITER(tcd, flag)

struct _edma_core_mp

#include <fsl_edma_core.h> edma core channel struture definition

Public Members

__IO uint32_t MP_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t MP_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

struct _edma_core_channel

#include <fsl_edma_core.h> edma core channel struture definition

Public Members

__IO uint32_t CH_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t CH_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

__IO uint32_t CH_INT

Channel Interrupt Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t CH_SBR

Channel System Bus, array offset: 0x1000C, array step: 0x10000

__IO uint32_t CH_PRI

Channel Priority, array offset: 0x10010, array step: 0x10000

struct _edma5_core_tcd

#include <fsl_edma_core.h> edma5 core TCD struture definition

Public Members

```

__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint32_t SADDR_HIGH
    SADDR HIGH register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer
__IO uint16_t ATTR
    ATTR register, source/destination transfer size and modulo
__IO uint32_t NBYTES
    Nbytes register, minor loop length in bytes
__IO uint32_t SLAST
    SLAST register
__IO uint32_t SLAST_SDA_HIGH
    SLAST SDA HIGH register
__IO uint32_t DADDR
    DADDR register, used for destination address
__IO uint32_t DADDR_HIGH
    DADDR HIGH register, used for destination address
__IO uint32_t DLAST_SGA
    DLASTSGA register, next tcd address used in scatter-gather mode
__IO uint32_t DLAST_SGA_HIGH
    DLASTSGA HIGH register, next tcd address used in scatter-gather mode
__IO uint16_t DOFF
    DOFF register, used for destination offset
__IO uint16_t CITER
    CITER register, current minor loop numbers, for unfinished minor loop.
__IO uint16_t CSR
    CSR register, for TCD control status
__IO uint16_t BITER
    BITER register, begin minor loop count.
uint8_t RESERVED[16]
    Aligned 64 bytes
struct __edma4_core_tcd
    #include <fsl_edma_core.h> edma4 core TCD struture definition

```

Public Members

```

__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer

```

__IO uint16_t ATTR
ATTR register, source/destination transfer size and modulo

__IO uint32_t NBYTES
Nbytes register, minor loop length in bytes

__IO uint32_t SLAST
SLAST register

__IO uint32_t DADDR
DADDR register, used for destination address

__IO uint16_t DOFF
DOFF register, used for destination offset

__IO uint16_t CITER
CITER register, current minor loop numbers, for unfinished minor loop.

__IO uint32_t DLAST_SGA
DLASTSGA register, next tcd address used in scatter-gather mode

__IO uint16_t CSR
CSR register, for TCD control status

__IO uint16_t BITER
BITER register, begin minor loop count.

struct _edma_core_tcd
#include <fsl_edma_core.h> edma core TCD struture definition

union MP_REGS

Public Members

struct _edma_core_mp EDMA5_REG

struct EDMA5_REG

Public Members

__IO uint32_t MP_INT_LOW
Channel Control and Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t MP_INT_HIGH
Channel Control and Status, array offset: 0x1000C, array step: 0x10000

__IO uint32_t MP_HRS_LOW
Channel Control and Status, array offset: 0x10010, array step: 0x10000

__IO uint32_t MP_HRS_HIGH
Channel Control and Status, array offset: 0x10014, array step: 0x10000

__IO uint32_t MP_STOPCH
Channel Control and Status, array offset: 0x10020, array step: 0x10000

__IO uint32_t MP_SSR_LOW
Channel Control and Status, array offset: 0x10030, array step: 0x10000

__IO uint32_t MP_SSR_HIGH
Channel Control and Status, array offset: 0x10034, array step: 0x10000

__IO uint32_t CH_GRPRI [64]
Channel Control and Status, array offset: 0x10100, array step: 0x10000

__IO uint32_t CH_MUX [64]
Channel Control and Status, array offset: 0x10200, array step: 0x10000

__IO uint32_t CH_PROT [64]
Channel Control and Status, array offset: 0x10400, array step: 0x10000

union CH_REGS

Public Members

struct *_edma_core_channel* EDMA5_REG

struct *_edma_core_channel* EDMA4_REG

struct EDMA5_REG

Public Members

__IO uint32_t CH_MATTR
Memory Attributes Register, array offset: 0x10018, array step: 0x8000

struct EDMA4_REG

Public Members

__IO uint32_t CH_MUX
Channel Multiplexor Configuration, array offset: 0x10014, array step: 0x10000

__IO uint16_t CH_MATTR
Memory Attributes Register, array offset: 0x10018, array step: 0x8000

union TCD_REGS

Public Members

edma4_core_tcd_t edma4_tcd

2.10 eDMA soc Driver

FSL_EDMA_SOC_DRIVER_VERSION
Driver version 1.0.0.

FSL_EDMA_SOC_IP_DMA3
DMA IP version.

FSL_EDMA_SOC_IP_DMA4

EDMA_BASE_PTRS
DMA base table.

EDMA_CHN_IRQS

FSL_FEATURE_EDMA_HAS_GLOBAL_MASTER_ID_REPLICATION
FSL_FEATURE_EDMA_HAS_CONTINUOUS_LINK_MODE
FSL_FEATURE_EDMA_MODULE_COUNT
FSL_FEATURE_EDMA_HAS_CHANNEL_CONFIG
FSL_FEATURE_EDMA_HAS_CHANNEL_SWAP_SIZE
FSL_FEATURE_EDMA_HAS_CHANNEL_ACCESS_TYPE
FSL_FEATURE_EDMA_HAS_CHANNEL_MEMORY_ATTRIBUTE
FSL_FEATURE_EDMA_HAS_CHANNEL_SIGN_EXTENSION
FSL_FEATURE_EDMA_MODULE_SUPPORT_MATTR(**base**)
FSL_FEATURE_EDMA_MODULE_SUPPORT_SIGN_EXTENSION(**base**)
FSL_FEATURE_EDMA_MODULE_SUPPORT_SWAP(**base**)
FSL_FEATURE_EDMA_MODULE_SUPPORT_INSTR(**base**)
EDMA_CHANNEL_OFFSET
 EDMA base address convert macro.
EDMA_CHANNEL_ARRAY_STEP(**base**)

2.11 ERM: error recording module

void ERM_Init(ERM_Type ***base**)

ERM module initialization function.

Parameters

- **base** – ERM base address.

void ERM_Deinit(ERM_Type ***base**)

De-initializes the ERM.

static inline void ERM_EnableInterrupts(ERM_Type ***base**, erm_memory_channel_t **channel**,
uint32_t **mask**)

ERM enable interrupts.

Parameters

- **base** – ERM peripheral base address.
- **channel** – memory channel.
- **mask** – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline void ERM_DisableInterrupts(ERM_Type ***base**, erm_memory_channel_t **channel**,
uint32_t **mask**)

ERM module disable interrupts.

Parameters

- **base** – ERM base address.
- **channel** – memory channel.

- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

```
static inline uint32_t ERM_GetInterruptStatus(ERM_Type *base, erm_memory_channel_t channel)
```

Gets ERM interrupt flags.

Parameters

- base – ERM peripheral base address.

Returns

ERM event flags.

```
static inline void ERM_ClearInterruptStatus(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)
```

ERM module clear interrupt status flag.

Parameters

- base – ERM base address.
- mask – event flag to clear. Refer to “_erm_interrupt_flag” enumeration.

```
uint32_t ERM_GetMemoryErrorAddr(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get memory error absolute address, which capturing the address of the last ECC event in Memory n.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

memory – error absolute address.

```
uint32_t ERM_GetSyndrome(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get syndrome, which identifies the pertinent bit position on a correctable, single-bit data inversion or a non-correctable, single-bit address inversion. The syndrome value does not provide any additional diagnostic information on non-correctable, multi-bit inversions.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

syndrome – value.

```
uint32_t ERM_GetErrorCount(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get error count, which records the count value of the number of correctable ECC error events for Memory n. Non-correctable errors are considered a serious fault, so the ERM does not provide any mechanism to count non-correctable errors. Only correctable errors are counted.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

error – count.

`void ERM_ResetErrorCount(ERM_Type *base, erm_memory_channel_t channel)`

ERM reset error count.

Parameters

- `base` – ERM base address.
- `channel` – memory channel.

`FSL_ERM_DRIVER_VERSION`

Driver version.

ERM interrupt configuration structure, default settings all disabled, `_erm_interrupt_enable`.

This structure contains the settings for all of the ERM interrupt configurations.

Values:

enumerator `kERM_SingleCorrectionIntEnable`

Single Correction Interrupt Notification enable.

enumerator `kERM_NonCorrectableIntEnable`

Non-Correction Interrupt Notification enable.

enumerator `kERM_AllInterruptsEnable`

All Interrupts enable

ERM interrupt status, `_erm_interrupt_flag`.

This provides constants for the ERM event status for use in the ERM functions.

Values:

enumerator `kERM_SingleBitCorrectionIntFlag`

Single-Bit Correction Event.

enumerator `kERM_NonCorrectableErrorIntFlag`

Non-Correctable Error Event.

enumerator `kERM_AllIntsFlag`

All Events.

2.12 FGPIO Driver

2.13 FREQME: Frequency Measurement

2.14 GLIKEY

2.15 GLIKEY

Values:

enumerator `kStatus_GLIKEY_LockedError`

GLIKEY status for locked SFR registers (unexpected) .

enumerator kStatus_GLIKEY_NotLocked
GLIKEY status for unlocked SFR registers.

enumerator kStatus_GLIKEY_Locked
GLIKEY status for locked SFR registers.

enumerator kStatus_GLIKEY_DisabledError
GLIKEY status for disabled error.

FSL_GLIKEY_DRIVER_VERSION
Defines GLIKEY driver version 2.0.1.

Change log:

- Version 2.0.1
 - Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.
- Version 2.0.0
 - Initial version

GLIKEY_CODEWORD_STEP1

GLIKEY_CODEWORD_STEP2

GLIKEY_CODEWORD_STEP3

GLIKEY_CODEWORD_STEP4

GLIKEY_CODEWORD_STEP5

GLIKEY_CODEWORD_STEP6

GLIKEY_CODEWORD_STEP7

GLIKEY_CODEWORD_STEP_EN

GLIKEY_FSM_WR_DIS

GLIKEY_FSM_INIT

GLIKEY_FSM_STEP1

GLIKEY_FSM_STEP2

GLIKEY_FSM_STEP3

GLIKEY_FSM_STEP4

GLIKEY_FSM_LOCKED

GLIKEY_FSM_WR_EN

GLIKEY_FSM_SSR_RESET

uint32_t GLIKEY_GetStatus(GLIKEY_Type *base)
Retreives the current status of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Glikey status information

status_t GLIKEY_IsLocked(GLIKEY_Type *base)

Get if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_Locked – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status

status_t GLIKEY_CheckLock(GLIKEY_Type *base)

Check if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_LockedError – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status kStatus_Success if success

status_t GLIKEY_SyncReset(GLIKEY_Type *base)

Perform a synchronous reset of Glikey.

This function performs a synchronous reset of the Glikey. This results in:

- Glikey will return to the INIT state, unless it is in the LOCK state

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntEnable(GLIKEY_Type *base, uint32_t value)

Set interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[in]** Value to set the interrupt enable flag to, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_GetIntEnable(GLIKEY_Type *base, uint32_t *value)

Get interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[out]** Pointer which will be filled with the interrupt enable status, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success

status_t GLIKEY_ClearIntStatus(GLIKEY_Type *base)

Clear the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntStatus(GLIKEY_Type *base)

Set the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_Lock(GLIKEY_Type *base)

Lock Glikey SFR (Special Function Registers) interface.

This operation locks the Glikey SFR interface if it is not locked yet.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success

status_t GLIKEY_LockIndex(GLIKEY_Type *base)

Lock Glikey index.

This operation is used to lock a Glikey index. It can only be executed from the WR_EN state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_IsIndexLocked(GLIKEY_Type *base, uint32_t index)

Check if Glikey index is locked.

This operation returns the locking status of Glikey index.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

kStatus_GLIKEY_Locked if locked, kStatus_GLIKEY_NotLocked if unlocked
Possible errors: kStatus_Fail

status_t GLIKEY_StartEnable(GLIKEY_Type *base, uint32_t index)

Start Glikey enable.

This operation is used to set a new index and start a the sequence to enable it. It needs to be started from the INIT state. If the new index is already locked Glikey will go to LOCKED state, otherwise it will go to STEP1 state. If this operation is used when Glikey is in any state other than INIT Glikey will go to WR_DIS state. It can only recover from this state through a reset (synchronous or asynchrinous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail

status_t GLIKEY_ContinueEnable(GLIKEY_Type *base, uint32_t codeword)

Continue Glikey enable.

This operation is used to progress through the different states of the state machine, starting from STEP1 until the state WR_EN is reached. Each next state of the state machine can only be reached by providing the right codeword to this function. If anything goes wrong the state machine will go to WR_DIS state and can only recover from it through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- codeword – **[in]** Encoded word for progressing to next FSM state (see GLIKEY_CODEWORD_STEPx/EN)

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail, kStatus_GLIKEY_DisabledError

status_t GLIKEY_EndOperation(GLIKEY_Type *base)

End Glikey operation.

This operation is used to end a Glikey operation. It can only be executed from the WR_EN, LOCKED and RESET states. Executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. After this operation Glikey will go to INIT state or stay in LOCKED state when the index was locked. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index
is still locked Possible errors: kStatus_GLIKEY_LockedError, kSta-
tus_GLIKEY_DisabledError

status_t GLIKEY_ResetIndex(GLIKEY_Type *base, uint32_t index)

Reset Glikey index.

This operation is used to reset a Glikey index. It can only be executed from the INIT state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active or the index is locked this operation will return an error.

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

2.16 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW

User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW

User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR

User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN

User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck

Ignores the attribute check

enum `_gpio_interrupt_config`

Configures the interrupt generation condition.

Values:

enumerator `kGPIO_InterruptStatusFlagDisabled`

Interrupt status flag is disabled.

enumerator `kGPIO_DMARisingEdge`

ISF flag and DMA request on rising edge.

enumerator `kGPIO_DMAFallingEdge`

ISF flag and DMA request on falling edge.

enumerator `kGPIO_DMAEitherEdge`

ISF flag and DMA request on either edge.

enumerator `kGPIO_FlagRisingEdge`

Flag sets on rising edge.

enumerator `kGPIO_FlagFallingEdge`

Flag sets on falling edge.

enumerator `kGPIO_FlagEitherEdge`

Flag sets on either edge.

enumerator `kGPIO_InterruptLogicZero`

Interrupt when logic zero.

enumerator `kGPIO_InterruptRisingEdge`

Interrupt on rising edge.

enumerator `kGPIO_InterruptFallingEdge`

Interrupt on falling edge.

enumerator `kGPIO_InterruptEitherEdge`

Interrupt on either edge.

enumerator `kGPIO_InterruptLogicOne`

Interrupt when logic one.

enumerator `kGPIO_ActiveHighTriggerOutputEnable`

Enable active high-trigger output.

enumerator `kGPIO_ActiveLowTriggerOutputEnable`

Enable active low-trigger output.

enum `_gpio_interrupt_selection`

Configures the selection of interrupt/DMA request/trigger output.

Values:

enumerator `kGPIO_InterruptOutput0`

Interrupt/DMA request/trigger output 0.

enumerator `kGPIO_InterruptOutput1`

Interrupt/DMA request/trigger output 1.

enum `gpio_pin_interrupt_control_t`

GPIO pin and interrupt control.

Values:

enumerator kGPIO_PinControlNonSecure
Pin Control Non-Secure.

enumerator kGPIO_InterruptControlNonSecure
Interrupt Control Non-Secure.

enumerator kGPIO_PinControlNonPrivilege
Pin Control Non-Privilege.

enumerator kGPIO_InterruptControlNonPrivilege
Interrupt Control Non-Privilege.

typedef enum *_gpio_pin_direction* gpio_pin_direction_t
GPIO direction definition.

typedef enum *_gpio_checker_attribute* gpio_checker_attribute_t
GPIO checker attribute.

typedef struct *_gpio_pin_config* gpio_pin_config_t
The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

typedef enum *_gpio_interrupt_config* gpio_interrupt_config_t
Configures the interrupt generation condition.

typedef enum *_gpio_interrupt_selection* gpio_interrupt_selection_t
Configures the selection of interrupt/DMA request/trigger output.

typedef struct *_gpio_version_info* gpio_version_info_t
GPIO version information.

GPIO_FIT_REG(value)

struct *_gpio_pin_config*
#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

gpio_pin_direction_t pinDirection
GPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

struct *_gpio_version_info*
#include <fsl_gpio.h> GPIO version information.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor Version Number.

uint8_t major

Major Version Number.

2.17 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)

Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDenit(GPIO_Type *base)

Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

void GPIO_GetVersionInfo(GPIO_Type *base, *gpio_version_info_t* *info)

Get GPIO version information.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- info – GPIO version information

static inline void GPIO_SecurePrivilegeLock(GPIO_Type *base, *gpio_pin_interrupt_control_t* mask)

lock or unlock secure privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – pin or interrupt macro

static inline void GPIO_EnablePinControlNonSecure(GPIO_Type *base, uint32_t mask)

Enable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisablePinControlNonSecure(GPIO_Type *base, uint32_t mask)

Disable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)

Enable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)

Disable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)

Enable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)

Disable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)

Enable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)

Disable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputEnable(GPIO_Type *base, uint32_t mask)

Enable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputDisable(GPIO_Type *base, uint32_t mask)

Disable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
static inline void GPIO_SetPinInterruptConfig(GPIO_Type *base, uint32_t pin,
                                             gpio_interrupt_config_t config)
```

Configures the gpio pin interrupt/DMA request.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt/DMA request disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.
 - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

```
static inline void GPIO_SetPinInterruptChannel(GPIO_Type *base, uint32_t pin,
                                             gpio_interrupt_selection_t selection)
```

Configures the gpio pin interrupt/DMA request/trigger output channel selection.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- selection – GPIO pin interrupt output selection.
 - kGPIO_InterruptOutput0: Interrupt/DMA request/trigger output 0.
 - kGPIO_InterruptOutput1 : Interrupt/DMA request/trigger output 1.

```
uint32_t GPIO_GpioGetInterruptFlags(GPIO_Type *base)
```

Read the GPIO interrupt status flags.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)

Returns

The current GPIO's interrupt status flag. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint32_t GPIO_GpioGetInterruptChannelFlags(GPIO_Type *base, uint32_t channel)

Read the GPIO interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

Returns

The current GPIO's interrupt status flag based on the selected interrupt channel. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint8_t GPIO_PinGetInterruptFlag(GPIO_Type *base, uint32_t pin)

Read individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO specific pin number.

Returns

The current selected pin's interrupt status flag.

void GPIO_GpioClearInterruptFlags(GPIO_Type *base, uint32_t mask)

Clears GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

void GPIO_GpioClearInterruptChannelFlags(GPIO_Type *base, uint32_t mask, uint32_t channel)

Clears GPIO pin interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

void GPIO_PinClearInterruptFlag(GPIO_Type *base, uint32_t pin)

Clear GPIO individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on).
- pin – GPIO specific pin number.

static inline void GPIO_SetMultipleInterruptPinsConfig(GPIO_Type *base, uint32_t mask,
gpio_interrupt_config_t config)

Sets the GPIO interrupt configuration in PCR register for multiple pins.

Parameters

- base – GPIO peripheral base pointer.
- mask – GPIO pin number macro.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.
 - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

void GPIO_CheckAttributeBytes(GPIO_Type *base, *gpio_checker_attribute_t* attribute)

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.18 INPUTMUX: Input Multiplexing Driver

enum *_inputmux_index_t*

Values:

enumerator kINPUTMUXAON_INDEX_QTMR0_TMR0

enumerator kINPUTMUXAON_INDEX_QTMR0_TMR1

enumerator kINPUTMUXAON_INDEX_QTMR0_TMR2

enumerator kINPUTMUXAON_INDEX_QTMR0_TMR3

enumerator kINPUTMUXAON_INDEX_SOC_GLUE_XOR0_IN0

```
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_XOR0_IN1
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR0
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR1
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR2
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR3
enumerator kINPUTMUX_AON_INDEX_ACMP0_TRIG0
enumerator kINPUTMUX_AON_INDEX_ACMP0_TRIG1
enumerator kINPUTMUX_AON_INDEX_ACMP0_TRIG2
enumerator kINPUTMUX_AON_INDEX_ACMP0_TRIG3
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG0
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG1
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG2
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG3
enumerator kINPUTMUX_AON_INDEX_AON_TRIG_OUT0
enumerator kINPUTMUX_AON_INDEX_AON_TRIG_OUT1
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_CMPPADS_PCTRL_XOR_IN0
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0
enumerator kINPUTMUX_AON_INDEX_LC_ROT_SOC_LOGIC_IN
enumerator kINPUTMUX_AON_INDEX_LCSENSE_SEQ_PTRIG_GLUE_IN
enumerator kINPUTMUX_AON_INDEX_LCSENSE_SEQ_TICKS_GLUE_IN
enumerator kINPUTMUX_AON_INDEX_CMP0_SAMPLE
enumerator kINPUTMUX_AON_INDEX_CMP0_RR_TRIG
enumerator kINPUTMUX_AON_INDEX_LPI2C0_TRIG
enumerator kINPUTMUX_AON_INDEX_LPUART0
```

enum `_inputmux_connection_t`

INPUTMUX connections type.

Values:

```
enumerator kINPUTMUX_AonTrigIn0ToQtmr0Tmrn
    QTMR0_TMRn: QTMR0 Input Connections aon_trig_in0 input is selected
enumerator kINPUTMUX_AonTrigIn1ToQtmr0Tmrn
    aon_trig_in1 input is selected
enumerator kINPUTMUX_AonTrigIn2ToQtmr0Tmrn
    aon_trig_in2 input is selected
enumerator kINPUTMUX_AonTrigIn3ToQtmr0Tmrn
    aon_trig_in3 input is selected
```

enumerator kINPUTMUXAON_AonTrigIn4ToQtmr0Tmrn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToQtmr0Tmrn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToQtmr0Tmrn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToQtmr0Tmrn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToQtmr0Tmrn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToQtmr0Tmrn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToQtmr0Tmrn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToQtmr0Tmrn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToQtmr0Tmrn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToQtmr0Tmrn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToQtmr0Tmrn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToQtmr0Tmrn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToQtmr0Tmrn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToQtmr0Tmrn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToQtmr0Tmrn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToQtmr0Tmrn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToQtmr0Tmrn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToQtmr0Tmrn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToQtmr0Tmrn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr0OToQtmr0Tmrn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToQtmr0Tmrn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToQtmr0Tmrn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToQtmr0Tmrn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToQtmr0Tmrn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToQtmr0Tmrn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToQtmr0Tmrn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToQtmr0Tmrn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToQtmr0Tmrn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToQtmr0Tmrn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToQtmr0Tmrn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToQtmr0Tmrn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToQtmr0Tmrn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToQtmr0Tmrn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToQtmr0Tmrn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToQtmr0Tmrn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToQtmr0Tmrn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToQtmr0Tmrn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToQtmr0Tmrn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToQtmr0Tmrn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToQtmr0Tmrn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToQtmr0Tmrn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToQtmr0Tmrn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToQtmr0Tmrn
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToQtmr0Tmrn
lcsense_sequencer_primary_trigger_glue_out is selected SOC_GLUE_XOR0_INn:
SOC_GLUE_XOR0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueXor0Inn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueXor0Inn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueXor0Inn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueXor0Inn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueXor0Inn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueXor0Inn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueXor0Inn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueXor0Inn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueXor0Inn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToSocGlueXor0Inn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToSocGlueXor0Inn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToSocGlueXor0Inn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToSocGlueXor0Inn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueXor0Inn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueXor0Inn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToSocGlueXor0Inn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToSocGlueXor0Inn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToSocGlueXor0Inn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToSocGlueXor0Inn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToSocGlueXor0Inn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToSocGlueXor0Inn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToSocGlueXor0Inn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToSocGlueXor0Inn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr00ToSocGlueXor0Inn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToSocGlueXor0Inn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToSocGlueXor0Inn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToSocGlueXor0Inn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToSocGlueXor0Inn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToSocGlueXor0Inn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToSocGlueXor0Inn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToSocGlueXor0Inn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToSocGlueXor0Inn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToSocGlueXor0Inn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToSocGlueXor0Inn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToSocGlueXor0Inn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToSocGlueXor0Inn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueXor0Inn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueXor0Inn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueXor0Inn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueXor0Inn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToSocGlueXor0Inn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueXor0Inn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueXor0Inn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToSocGlueXor0Inn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToSocGlueXor0Inn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToSocGlueXor0Inn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToSocGlueXor0Inn
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueXor0Inn
lcsense_sequencer_primary_trigger_glue_out is selected QTMR1_TMRn: QTMR1 Input Connections

enumerator kINPUTMUXAON_AonTrigIn0ToQtmr1Tmrn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToQtmr1Tmrn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToQtmr1Tmrn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToQtmr1Tmrn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToQtmr1Tmrn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToQtmr1Tmrn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToQtmr1Tmrn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToQtmr1Tmrn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToQtmr1Tmrn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToQtmr1Tmrn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToQtmr1Tmrn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToQtmr1Tmrn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToQtmr1Tmrn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToQtmr1Tmrn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToQtmr1Tmrn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToQtmr1Tmrn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToQtmr1Tmrn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToQtmr1Tmrn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToQtmr1Tmrn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToQtmr1Tmrn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToQtmr1Tmrn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToQtmr1Tmrn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToQtmr1Tmrn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr0OToQtmr1Tmrn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToQtmr1Tmrn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToQtmr1Tmrn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToQtmr1Tmrn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToQtmr1Tmrn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToQtmr1Tmrn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToQtmr1Tmrn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToQtmr1Tmrn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToQtmr1Tmrn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToQtmr1Tmrn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToQtmr1Tmrn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToQtmr1Tmrn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToQtmr1Tmrn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToQtmr1Tmrn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToQtmr1Tmrn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToQtmr1Tmrn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToQtmr1Tmrn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToQtmr1Tmrn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToQtmr1Tmrn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToQtmr1Tmrn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToQtmr1Tmrn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToQtmr1Tmrn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToQtmr1Tmrn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToQtmr1Tmrn
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToQtmr1Tmrn
lcsense_sequencer_primary_trigger_glue_out is selected

ACMP0_TRIGn: ACMP0 Input Connections

enumerator kINPUTMUXAON_AonTrigIn0ToAcmp0Trign
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToAcmp0Trign
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToAcmp0Trign
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToAcmp0Trign
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToAcmp0Trign
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToAcmp0Trign
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToAcmp0Trign
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToAcmp0Trign
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToAcmp0Trign
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToAcmp0Trign
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToAcmp0Trign
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToAcmp0Trign
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToAcmp0Trign
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_Lptmr0OToAcmp0Trign
lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToAcmp0Trign
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToAcmp0Trign
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToAcmp0Trign
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToAcmp0Trign
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_WuuToAcmp0Trign
wu is selected

enumerator kINPUTMUXAON_GpioApet0ToAcmp0Trign
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToAcmp0Trign
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToAcmp0Trign
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToAcmp0Trign
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToAcmp0Trign
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Acmp0RacoToAcmp0Trign
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToAcmp0Trign
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToAcmp0Trign
soc_glue_xor0_out is selected LPADC0_TRIGN: LPADC trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLpadc0Trign
aon_trig_in0 is selected

enumerator kINPUTMUXAON__AonTrigIn1ToLpadc0Trign
aon_trig_in1 is selected

enumerator kINPUTMUXAON__AonTrigIn2ToLpadc0Trign
aon_trig_in2 is selected

enumerator kINPUTMUXAON__AonTrigIn03ToLpadc0Trign
aon_trig_in03 is selected

enumerator kINPUTMUXAON__AonTrigIn04ToLpadc0Trign
aon_trig_in04 is selected

enumerator kINPUTMUXAON__AonTrigIn5ToLpadc0Trign
aon_trig_in5 is selected

enumerator kINPUTMUXAON__AonTrigIn6ToLpadc0Trign
aon_trig_in6 is selected

enumerator kINPUTMUXAON__AonTrigIn7ToLpadc0Trign
aon_trig_in7 is selected

enumerator kINPUTMUXAON__Cm33TeToLpadc0Trign
cm33 transmit event is selected

enumerator kINPUTMUXAON__LpcmpOutToLpadc0Trign
lpcmp_out is selected

enumerator kINPUTMUXAON__Qtmr0Tmr0OutputToLpadc0Trign
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr1OutputToLpadc0Trign
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr2OutputToLpadc0Trign
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr3OutputToLpadc0Trign
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON__Lptmr0OToLpadc0Trign
lptmr0 output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr0OutputToLpadc0Trign
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr1OutputToLpadc0Trign
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr2OutputToLpadc0Trign
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr3OutputToLpadc0Trign
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON__WuuToLpadc0Trign
wuu is selected

enumerator kINPUTMUXAON__GpioApet0ToLpadc0Trign
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON__Acmp0RacoToLpadc0Trign
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLpadc0Trign
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLpadc0Trign
soc_glue_xor0_out is selected AON_TRIG_OUTn: AON Trigger Output Connections

enumerator kINPUTMUXAON_Cm33TeToAonTrigOutn
cm33 transmit event is selected

enumerator kINPUTMUXAON_AonLpuart0IToAonTrigOutn
aon_lpuart0 (ipp_do_lpuart_txd) is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToAonTrigOutn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToAonTrigOutn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToAonTrigOutn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_ParkedOutIntvertedToAonTrigOutn
parked_out_intverted is selected

enumerator kINPUTMUXAON_AonLptmr0OToAonTrigOutn
aon_lptmr0 output is selected

enumerator kINPUTMUXAON_Lpcomp0OutToAonTrigOutn
lpcomp0_out is selected

enumerator kINPUTMUXAON_Acmp0RacoToAonTrigOutn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToAonTrigOutn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToAonTrigOutn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToAonTrigOutn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToAonTrigOutn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToAonTrigOutn
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToAonTrigOutn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToAonTrigOutn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToAonTrigOutn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToAonTrigOutn
qtmr1_tmr3_output is selected SOC_GLUE_CMPPADS_PCTRL_XOR_IN0:
SOC_GLUE_CMPPADS_PCTRL_XOR_IN0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueCmppadsPctrlXorIn0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueCmppadsPctrlXorIn0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueCmppadsPctrlXorIn0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueCmppadsPctrlXorIn0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueCmppadsPctrlXorIn0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueCmppadsPctrlXorIn0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueCmppadsPctrlXorIn0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueCmppadsPctrlXorIn0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueCmppadsPctrlXorIn0
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueCmppadsPctrlXorIn0
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueCmppadsPctrlXorIn0
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToSocGlueCmppadsPctrlXorIn0
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToSocGlueCmppadsPctrlXorIn0
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToSocGlueCmppadsPctrlXorIn0
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToSocGlueCmppadsPctrlXorIn0
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToSocGlueCmppadsPctrlXorIn0
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToSocGlueCmppadsPctrlXorIn0
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToSocGlueCmppadsPctrlXorIn0
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToSocGlueCmppadsPctrlXorIn0
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr00ToSocGlueCmppadsPctrlXorIn0
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToSocGlueCmppadsPctrlXorIn0
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToSocGlueCmppadsPctrlXorIn0
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToSocGlueCmppadsPctrlXorIn0
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToSocGlueCmppadsPctrlXorIn0
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToSocGlueCmppadsPctrlXorIn0
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueCmppadsPctrlXorIn0
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueCmppadsPctrlXorIn0
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueCmppadsPctrlXorIn0
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueCmppadsPctrlXorIn0
logic_1 is selected

enumerator kINPUTMUXAON_Wuu0ToSocGlueCmppadsPctrlXorIn0
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueCmppadsPctrlXorIn0
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueCmppadsPctrlXorIn0
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToSocGlueCmppsPctrlXorIn0
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToSocGlueCmppsPctrlXorIn0
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToSocGlueCmppsPctrlXorIn0
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToSocGlueCmppsPctrlXorIn0
qtmr0_tmr3_output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueCmppsPctrlXorIn0
lcsense_sequencer_primary_trigger_glue_out is selected
SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0: SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0
trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueCtrlpadsPctrlXorIn0
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueCtrlpadsPctrlXorIn0
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueCtrlpadsPctrlXorIn0
lpi2c0 controller end of packet is selected

enumerator kINPUTMUX_AON_Lpi2c0TeopToSocGlueCtrlpadsPctrlXorIn0
lpi2c0 target end of packet is selected

enumerator kINPUTMUX_AON_Lpuart0RdwToSocGlueCtrlpadsPctrlXorIn0
lpuart0 received data word is selected

enumerator kINPUTMUX_AON_Lpuart0TdwToSocGlueCtrlpadsPctrlXorIn0
lpuart0 transmitted data word is selected

enumerator kINPUTMUX_AON_Lpuart0RliToSocGlueCtrlpadsPctrlXorIn0
lpuart0 receive line idle is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut0ToSocGlueCtrlpadsPctrlXorIn0
lpadc_trigger_out[0] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut1ToSocGlueCtrlpadsPctrlXorIn0
lpadc_trigger_out[1] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut2ToSocGlueCtrlpadsPctrlXorIn0
lpadc_trigger_out[2] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut3ToSocGlueCtrlpadsPctrlXorIn0
lpadc_trigger_out[3] is selected

enumerator kINPUTMUX_AON_Lptmr0OToSocGlueCtrlpadsPctrlXorIn0
lptmr0 output is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut1ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut2ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut3ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut4ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr0DirToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr0_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr1DirToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr1_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr2DirToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr2_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr3DirToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr3_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr0DirToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr0_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr1DirToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr1_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr2DirToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr2_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr3DirToSocGlueCtrlpadsPctrlXorIn0
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueCtrlpadsPctrlXorIn0
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueCtrlpadsPctrlXorIn0
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueCtrlpadsPctrlXorIn0
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueCtrlpadsPctrlXorIn0
logic_1 is selected

enumerator kINPUTMUXAON_Wuu0ToSocGlueCtrlpadsPctrlXorIn0
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueCtrlpadsPctrlXorIn0
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueCtrlpadsPctrlXorIn0
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToSocGlueCtrlpadsPctrlXorIn0
qtmr0_tmr3_output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueCtrlpadsPctrlXorIn0
lcsense_sequencer_primary_trigger_glue_out is selected LC_ROT_SOC_LOGIC_IN:
LC_ROT_SOC_LOGIC_IN trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLcRotSocLogicIn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLcRotSocLogicIn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLcRotSocLogicIn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLcRotSocLogicIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLcRotSocLogicIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLcRotSocLogicIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLcRotSocLogicIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLcRotSocLogicIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLcRotSocLogicIn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToLcRotSocLogicIn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToLcRotSocLogicIn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToLcRotSocLogicIn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToLcRotSocLogicIn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToLcRotSocLogicIn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToLcRotSocLogicIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToLcRotSocLogicIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToLcRotSocLogicIn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToLcRotSocLogicIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToLcRotSocLogicIn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToLcRotSocLogicIn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToLcRotSocLogicIn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToLcRotSocLogicIn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToLcRotSocLogicIn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr0OToLcRotSocLogicIn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToLcRotSocLogicIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToLcRotSocLogicIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToLcRotSocLogicIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToLcRotSocLogicIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToLcRotSocLogicIn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToLcRotSocLogicIn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToLcRotSocLogicIn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToLcRotSocLogicIn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToLcRotSocLogicIn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToLcRotSocLogicIn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToLcRotSocLogicIn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToLcRotSocLogicIn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToLcRotSocLogicIn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLcRotSocLogicIn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToLcRotSocLogicIn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToLcRotSocLogicIn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToLcRotSocLogicIn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLcRotSocLogicIn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLcRotSocLogicIn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToLcRotSocLogicIn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToLcRotSocLogicIn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToLcRotSocLogicIn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToLcRotSocLogicIn
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToLcRotSocLogicIn
lcsense_sequencer_primary_trigger_glue_out is selected LC-
SENSE_SEQ_PTRIG_GLUE_IN: LCSENSE_SEQ_PTRIG_GLUE_IN trigger input con-
nections

enumerator kINPUTMUXAON_AonTrigIn0ToLcsenseSeqPtrigGlueIn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON__AonTrigIn1ToLcsenseSeqPtrigGlueIn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON__AonTrigIn2ToLcsenseSeqPtrigGlueIn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON__AonTrigIn3ToLcsenseSeqPtrigGlueIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON__AonTrigIn4ToLcsenseSeqPtrigGlueIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON__AonTrigIn5ToLcsenseSeqPtrigGlueIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON__AonTrigIn6ToLcsenseSeqPtrigGlueIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON__AonTrigIn7ToLcsenseSeqPtrigGlueIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON__Cm33TeToLcsenseSeqPtrigGlueIn
cm33 transmit event is selected

enumerator kINPUTMUXAON__Qtmr1Tmr0OutputToLcsenseSeqPtrigGlueIn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr1OutputToLcsenseSeqPtrigGlueIn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr2OutputToLcsenseSeqPtrigGlueIn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr3OutputToLcsenseSeqPtrigGlueIn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON__Cmp0OutToLcsenseSeqPtrigGlueIn
cmp0_out is selected

enumerator kINPUTMUXAON__Lpi2c0CeopToLcsenseSeqPtrigGlueIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON__Lpi2c0TeopToLcsenseSeqPtrigGlueIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON__Lpuart0RdwToLcsenseSeqPtrigGlueIn
lpuart0 received data word is selected

enumerator kINPUTMUXAON__Lpuart0TdwToLcsenseSeqPtrigGlueIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON__Lpuart0RliToLcsenseSeqPtrigGlueIn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON__LpadcTriggerOut0ToLcsenseSeqPtrigGlueIn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON__LpadcTriggerOut1ToLcsenseSeqPtrigGlueIn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON__LpadcTriggerOut2ToLcsenseSeqPtrigGlueIn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToLcsenseSeqPtrigGlueIn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Lptmr00ToLcsenseSeqPtrigGlueIn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0DirToLcsenseSeqPtrigGlueIn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1DirToLcsenseSeqPtrigGlueIn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2DirToLcsenseSeqPtrigGlueIn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3DirToLcsenseSeqPtrigGlueIn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0DirToLcsenseSeqPtrigGlueIn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1DirToLcsenseSeqPtrigGlueIn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2DirToLcsenseSeqPtrigGlueIn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3DirToLcsenseSeqPtrigGlueIn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON_Acmp0RacoToLcsenseSeqPtrigGlueIn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLcsenseSeqPtrigGlueIn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToLcsenseSeqPtrigGlueIn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToLcsenseSeqPtrigGlueIn
logic_1 is selected

enumerator kINPUTMUXAON_Wuu0ToLcsenseSeqPtrigGlueIn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLcsenseSeqPtrigGlueIn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLcsenseSeqPtrigGlueIn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToLcsenseSeqPtrigGlueIn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToLcsenseSeqPtrigGlueIn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToLcsenseSeqPtrigGlueIn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToLcsenseSeqPtrigGlueIn
qtmr0_tmr3_output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToLcsenseSeqPtrigGlueIn
lcsense_sequencer_primary_trigger_glue_out is selected LC-
SENSE_SEQ_TICKS_GLUE_IN: LcsenseSeqTicksGlueIn trigger input con-
nections

enumerator kINPUTMUXAON_AonTrigIn0ToLcsenseSeqTicksGlueIn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLcsenseSeqTicksGlueIn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLcsenseSeqTicksGlueIn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLcsenseSeqTicksGlueIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLcsenseSeqTicksGlueIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLcsenseSeqTicksGlueIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLcsenseSeqTicksGlueIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLcsenseSeqTicksGlueIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLcsenseSeqTicksGlueIn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToLcsenseSeqTicksGlueIn
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToLcsenseSeqTicksGlueIn
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToLcsenseSeqTicksGlueIn
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToLcsenseSeqTicksGlueIn
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_Cmp0OutToLcsenseSeqTicksGlueIn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToLcsenseSeqTicksGlueIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUX_AON_Lpi2c0TeopToLcsenseSeqTicksGlueIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUX_AON_Lpuart0RdwToLcsenseSeqTicksGlueIn
lpuart0 received data word is selected

enumerator kINPUTMUX_AON_Lpuart0TdwToLcsenseSeqTicksGlueIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUX_AON_Lpuart0RliToLcsenseSeqTicksGlueIn
lpuart0 receive line idle is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut0ToLcsenseSeqTicksGlueIn
lpadc_trigger_out[0] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut1ToLcsenseSeqTicksGlueIn
lpadc_trigger_out[1] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut2ToLcsenseSeqTicksGlueIn
lpadc_trigger_out[2] is selected

enumerator kINPUTMUX_AON_LpadcTriggerOut3ToLcsenseSeqTicksGlueIn
lpadc_trigger_out[3] is selected

enumerator kINPUTMUX_AON_Lptmr0OToLcsenseSeqTicksGlueIn
lptmr0 output is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut1ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut2ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut3ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUX_AON_LcRotSocLogicOut4ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr0DirToLcsenseSeqTicksGlueIn
qtmr0_tmr0_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr1DirToLcsenseSeqTicksGlueIn
qtmr0_tmr1_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr2DirToLcsenseSeqTicksGlueIn
qtmr0_tmr2_dir is selected

enumerator kINPUTMUX_AON_Qtmr0Tmr3DirToLcsenseSeqTicksGlueIn
qtmr0_tmr3_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr0DirToLcsenseSeqTicksGlueIn
qtmr1_tmr0_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr1DirToLcsenseSeqTicksGlueIn
qtmr1_tmr1_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr2DirToLcsenseSeqTicksGlueIn
qtmr1_tmr2_dir is selected

enumerator kINPUTMUX_AON_Qtmr1Tmr3DirToLcsenseSeqTicksGlueIn
qtmr1_tmr3_dir is selected

enumerator kINPUTMUXAON__Acmp0RacoToLcsenseSeqTicksGlueIn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON__Acmp0AonCoutToLcsenseSeqTicksGlueIn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON__Logic0ToLcsenseSeqTicksGlueIn
logic_0 is selected

enumerator kINPUTMUXAON__Logic1ToLcsenseSeqTicksGlueIn
logic_1 is selected

enumerator kINPUTMUXAON__WuuOToLcsenseSeqTicksGlueIn
wuu output is selected

enumerator kINPUTMUXAON__GpioApet0ToLcsenseSeqTicksGlueIn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON__SocGlueXor0OutToLcsenseSeqTicksGlueIn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON__Qtmr0Tmr0OutputToLcsenseSeqTicksGlueIn
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr1OutputToLcsenseSeqTicksGlueIn
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr2OutputToLcsenseSeqTicksGlueIn
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr3OutputToLcsenseSeqTicksGlueIn
qtmr0_tmr3_output is selected

enumerator
kINPUTMUXAON__LcsenseSequencerPrimaryTriggerGlueOutToLcsenseSeqTicksGlueIn
lcsense_sequencer_primary_trigger_glue_out is selected CMP0_SAMPLE: ACMP0 SAMPLE trigger input connections

enumerator kINPUTMUXAON__AonTrigIn0ToCmp0Sample
aon_trig_in0 input is selected

enumerator kINPUTMUXAON__AonTrigIn1ToCmp0Sample
aon_trig_in1 input is selected

enumerator kINPUTMUXAON__AonTrigIn2ToCmp0Sample
aon_trig_in2 input is selected

enumerator kINPUTMUXAON__AonTrigIn3ToCmp0Sample
aon_trig_in3 input is selected

enumerator kINPUTMUXAON__AonTrigIn4ToCmp0Sample
aon_trig_in4 input is selected

enumerator kINPUTMUXAON__AonTrigIn5ToCmp0Sample
aon_trig_in5 input is selected

enumerator kINPUTMUXAON__AonTrigIn6ToCmp0Sample
aon_trig_in6 input is selected

enumerator kINPUTMUXAON__AonTrigIn7ToCmp0Sample
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToCmp0Sample
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToCmp0Sample
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToCmp0Sample
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToCmp0Sample
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToCmp0Sample
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToCmp0Sample
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_Lptmr0ToCmp0Sample
lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToCmp0Sample
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToCmp0Sample
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToCmp0Sample
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToCmp0Sample
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_WuuToCmp0Sample
wuu is selected

enumerator kINPUTMUXAON_GpioApet0ToCmp0Sample
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToCmp0Sample
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToCmp0Sample
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToCmp0Sample
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToCmp0Sample
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToCmp0Sample
soc_glue_xor0_out is selected CMP0_RR_TRIG: ACMP0 RR trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToCmp0RrTrig
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToCmp0RrTrig
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToCmp0RrTrig
aon_trig_in2 input is selected

enumerator kINPUTMUXAON__AonTrigIn3ToCmp0RrTrig
aon_trig_in3 input is selected

enumerator kINPUTMUXAON__AonTrigIn4ToCmp0RrTrig
aon_trig_in4 input is selected

enumerator kINPUTMUXAON__AonTrigIn5ToCmp0RrTrig
aon_trig_in5 input is selected

enumerator kINPUTMUXAON__AonTrigIn6ToCmp0RrTrig
aon_trig_in6 input is selected

enumerator kINPUTMUXAON__AonTrigIn7ToCmp0RrTrig
aon_trig_in7 input is selected

enumerator kINPUTMUXAON__Cm33TeToCmp0RrTrig
cm33 transmit event is selected

enumerator kINPUTMUXAON__LpcmpOutToCmp0RrTrig
lpcmp_out is selected

enumerator kINPUTMUXAON__Qtmr0Tmr0OutputToCmp0RrTrig
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr1OutputToCmp0RrTrig
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr2OutputToCmp0RrTrig
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr0Tmr3OutputToCmp0RrTrig
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON__Lptmr0OToCmp0RrTrig
lptmr0 output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr0OutputToCmp0RrTrig
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr1OutputToCmp0RrTrig
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr2OutputToCmp0RrTrig
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON__Qtmr1Tmr3OutputToCmp0RrTrig
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON__WuuToCmp0RrTrig
wuu is selected

enumerator kINPUTMUXAON__GpioApet0ToCmp0RrTrig
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON__LpadcTriggerOut0ToCmp0RrTrig
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON__LpadcTriggerOut1ToCmp0RrTrig
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON__LpadcTriggerOut2ToCmp0RrTrig
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToCmp0RrTrig
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToCmp0RrTrig
soc_glue_xor0_out is selected LPI2C0_TRIG: LPI2C0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLpi2c0Trig
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLpi2c0Trig
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLpi2c0Trig
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLpi2c0Trig
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLpi2c0Trig
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLpi2c0Trig
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLpi2c0Trig
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLpi2c0Trig
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLpi2c0Trig
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToLpi2c0Trig
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToLpi2c0Trig
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToLpi2c0Trig
qtmr0_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToLpi2c0Trig
qtmr0_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToLpi2c0Trig
qtmr0_tmr3_output is selected

enumerator kINPUTMUXAON_Lptmr00ToLpi2c0Trig
lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToLpi2c0Trig
qtmr1_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToLpi2c0Trig
qtmr1_tmr1_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToLpi2c0Trig
qtmr1_tmr2_output is selected

enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToLpi2c0Trig
qtmr1_tmr3_output is selected

enumerator kINPUTMUXAON_WuuToLpi2c0Trig
wuu is selected

enumerator kINPUTMUXAON_GpioApet0ToLpi2c0Trig
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerOut0ToLpi2c0Trig
lpadc_trigger_out[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut1ToLpi2c0Trig
lpadc_trigger_out[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut2ToLpi2c0Trig
lpadc_trigger_out[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerOut3ToLpi2c0Trig
lpadc_trigger_out[3] is selected

enumerator kINPUTMUXAON_Acmp0RacoToLpi2c0Trig
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLpi2c0Trig
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLpi2c0Trig
soc_glue_xor0_out is selected LPUART0: LPUART0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLPUART0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLPUART0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLPUART0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLPUART0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLPUART0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLPUART0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLPUART0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLPUART0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLPUART0
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToLPUART0
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Tmr0OutputToLPUART0
qtmr0_tmr0_output is selected

enumerator kINPUTMUXAON_Qtmr0Tmr1OutputToLPUART0
qtmr0_tmr1_output is selected

```
enumerator kINPUTMUXAON_Qtmr0Tmr2OutputToLPUART0
    qtmr0_tmr2_output is selected
enumerator kINPUTMUXAON_Qtmr0Tmr3OutputToLPUART0
    qtmr0_tmr3_output is selected
enumerator kINPUTMUXAON_Lptmr0ToLPUART0
    lptmr0 output is selected
enumerator kINPUTMUXAON_Qtmr1Tmr0OutputToLPUART0
    qtmr1_tmr0_output is selected
enumerator kINPUTMUXAON_Qtmr1Tmr1OutputToLPUART0
    qtmr1_tmr1_output is selected
enumerator kINPUTMUXAON_Qtmr1Tmr2OutputToLPUART0
    qtmr1_tmr2_output is selected
enumerator kINPUTMUXAON_Qtmr1Tmr3OutputToLPUART0
    qtmr1_tmr3_output is selected
enumerator kINPUTMUXAON_WuuToLPUART0
    wuu is selected
enumerator kINPUTMUXAON_GpioApet0ToLPUART0
    gpio (aon) pin event trig 0 is selected
enumerator kINPUTMUXAON_LpadcTriggerOut0ToLPUART0
    lpadc_trigger_out[0] is selected
enumerator kINPUTMUXAON_LpadcTriggerOut1ToLPUART0
    lpadc_trigger_out[1] is selected
enumerator kINPUTMUXAON_LpadcTriggerOut2ToLPUART0
    lpadc_trigger_out[2] is selected
enumerator kINPUTMUXAON_LpadcTriggerOut3ToLPUART0
    lpadc_trigger_out[3] is selected
enumerator kINPUTMUXAON_Acmp0RacoToLPUART0
    acmp0 raw analog comparator output
enumerator kINPUTMUXAON_Acmp0AonCoutToLPUART0
    acmp0_aon_cout is selected
enumerator kINPUTMUXAON_SocGlueXor0OutToLPUART0
    soc_glue_xor0_out is selected
typedef enum _inputmux_index_t inputmux_index_t
typedef enum _inputmux_connection_t inputmux_connection_t
    INPUTMUX connections type.
QTMR0_TMRn_REG
    Periphinmux IDs.
SOC_GLUE_XOR0_INn_REG
QTMR1_TMRn_REG
ACMP0_TRIGn_REG
LPADC0_TRIGn_REG
```


AON_TRIG_OUTn_REG

SOC_GLUE_CMPPADS_PCTRL_XOR_IN0_REG

SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0_REG

LC_ROT_SOC_LOGIC_IN_REG

LCSENSE_SEQ_PTRIG_GLUE_IN_REG

LCSENSE_SEQ_TICKS_GLUE_IN_REG

CMP0_SAMPLE_REG

CMP0_RR_TRIG_REG

LPI2C0_TRIG_REG

LPUART0_REG

PMUX_SHIFT

FSL_INPUTMUX_DRIVER_VERSION

Group interrupt driver version for SDK.

`void INPUTMUX_Init(void *base)`

Initialize INPUTMUX peripheral.

This function enables the INPUTMUX clock.

Parameters

- `base` – Base address of the INPUTMUX peripheral.

Return values

None. –

`void INPUTMUX_AttachSignal(void *base, uint32_t index, inputmux_connection_t connection)`

Attaches a signal.

This function attaches multiplexed signals from INPUTMUX to target signals. For example, to attach GPIO PORT0 Pin 5 to PINT peripheral, do the following:

```
INPUTMUX_AttachSignal(INPUTMUX, 2, kINPUTMUX_GpioPort0Pin5ToPintsel);
```

In this example, INTMUX has 8 registers for PINT, PINT_SEL0~PINT_SEL7. With parameter `index` specified as 2, this function configures register PINT_SEL2.

Parameters

- `base` – Base address of the INPUTMUX peripheral.
- `index` – The serial number of destination register in the group of INPUTMUX registers with same name.
- `connection` – Applies signal from source signals collection to target signal.

Return values

None. –

`void INPUTMUX_Deinit(void *base)`

Deinitialize INPUTMUX peripheral.

This function disables the INPUTMUX clock.

Parameters

- `base` – Base address of the INPUTMUX peripheral.

Return values

None. –

2.19 KPP: KeyPad Port Driver

`void KPP_Init(KPP_Type *base, kpp_config_t *configure)`

KPP initialize. This function ungates the KPP clock and initializes KPP. This function must be called before calling any other KPP driver functions.

Parameters

- `base` – KPP peripheral base address.
- `configure` – The KPP configuration structure pointer.

`void KPP_Deinit(KPP_Type *base)`

Deinitializes the KPP module and gates the clock. This function gates the KPP clock. As a result, the KPP module doesn't work after calling this function.

Parameters

- `base` – KPP peripheral base address.

`static inline void KPP_EnableInterrupts(KPP_Type *base, uint16_t mask)`

Enable the interrupt.

Parameters

- `base` – KPP peripheral base address.
- `mask` – KPP interrupts to enable. This is a logical OR of the enumeration :: `kpp_interrupt_enable_t`.

`static inline void KPP_DisableInterrupts(KPP_Type *base, uint16_t mask)`

Disable the interrupt.

Parameters

- `base` – KPP peripheral base address.
- `mask` – KPP interrupts to disable. This is a logical OR of the enumeration :: `kpp_interrupt_enable_t`.

`static inline uint16_t KPP_GetStatusFlag(KPP_Type *base)`

Gets the KPP interrupt event status.

Parameters

- `base` – KPP peripheral base address.

Returns

The status of the KPP. Application can use the enum type in the "kpp_interrupt_enable_t" to get the right status of the related event.

`static inline void KPP_ClearStatusFlag(KPP_Type *base, uint16_t mask)`

Clears KPP status flag.

Parameters

- `base` – KPP peripheral base address.
- `mask` – KPP mask to be cleared. This is a logical OR of the enumeration :: `kpp_interrupt_enable_t`.

```
static inline void KPP_SetSynchronizeChain(KPP_Type *base, uint16_t mask)
```

Set KPP synchronization chain.

Parameters

- base – KPP peripheral base address.
- mask – KPP mask to be cleared. This is a logical OR of the enumeration :: `kpp_sync_operation_t`.

```
void KPP_keyPressScanning(KPP_Type *base, uint8_t *data, uint32_t clockSrc_Hz)
```

Keypad press scanning.

This function will scanning all columns and rows. so all scanning data will be stored in the data pointer.

Parameters

- base – KPP peripheral base address.
- data – KPP key press scanning data. The data buffer should be prepared with length at least equal to `KPP_KEYPAD_COLUMNNUM_MAX * KPP_KEYPAD_ROWNUM_MAX`. the data pointer is recommended to be a array like `uint8_t data[KPP_KEYPAD_COLUMNNUM_MAX]`. for example the `data[2] = 4`, that means in column 1 row 2 has a key press event.
- clockSrc_Hz – Source clock.

```
FSL_KPP_DRIVER_VERSION
```

KPP driver version.

```
enum _kpp_interrupt_enable
```

List of interrupts supported by the peripheral. This enumeration uses one-hot encoding to allow a logical OR of multiple members. Members usually map to interrupt enable bits in one or more peripheral registers.

Values:

```
enumerator kKPP_keyDepressInterrupt
```

Keypad depress interrupt source

```
enumerator kKPP_keyReleaseInterrupt
```

Keypad release interrupt source

```
enum _kpp_sync_operation
```

Lists of KPP synchronize chain operation.

Values:

```
enumerator kKPP_ClearKeyDepressSyncChain
```

Keypad depress interrupt status.

```
enumerator kKPP_SetKeyReleasesSyncChain
```

Keypad release interrupt status.

```
typedef enum _kpp_interrupt_enable kpp_interrupt_enable_t
```

List of interrupts supported by the peripheral. This enumeration uses one-hot encoding to allow a logical OR of multiple members. Members usually map to interrupt enable bits in one or more peripheral registers.

```
typedef enum _kpp_sync_operation kpp_sync_operation_t
```

Lists of KPP synchronize chain operation.

```
typedef struct _kpp_config kpp_config_t
```

Lists of KPP status.

KPP_KEYPAD_COLUMNNUM_MAX

KPP_KEYPAD_ROWNUM_MAX

struct _kpp_config

#include <fsl_kpp.h> Lists of KPP status.

Public Members

uint8_t activeRow

The row number: bit 7 ~ 0 represents the row 7 ~ 0.

uint8_t activeColumn

The column number: bit 7 ~ 0 represents the column 7 ~ 0.

uint16_t interrupt

KPP interrupt source. A logical OR of “kpp_interrupt_enable_t”.

2.20 Common Driver

FSL_COMMON_DRIVER_VERSION

common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE

No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART

Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(a, b)

Computes the minimum of *a* and *b*.

MAX(a, b)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(addr, val)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(*var*)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(*var*, *alignbytes*)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

enum *_status_groups*

Status group numbers.

Values:

enumerator *kStatusGroup_Generic*

Group number for generic status codes.

enumerator *kStatusGroup_FLASH*

Group number for FLASH status codes.

enumerator *kStatusGroup_LPSPI*

Group number for LPSPI status codes.

enumerator *kStatusGroup_FLEXIO_SPI*

Group number for FLEXIO SPI status codes.

enumerator *kStatusGroup_DSPI*

Group number for DSPI status codes.

enumerator *kStatusGroup_FLEXIO_UART*

Group number for FLEXIO UART status codes.

enumerator *kStatusGroup_FLEXIO_I2C*

Group number for FLEXIO I2C status codes.

enumerator *kStatusGroup_LPI2C*

Group number for LPI2C status codes.

enumerator *kStatusGroup_UART*

Group number for UART status codes.

enumerator *kStatusGroup_I2C*

Group number for UART status codes.

enumerator *kStatusGroup_LPSCI*

Group number for LPSCI status codes.

enumerator *kStatusGroup_LPUART*

Group number for LPUART status codes.

enumerator *kStatusGroup_SPI*

Group number for SPI status code.

enumerator *kStatusGroup_XRDC*

Group number for XRDC status code.

enumerator *kStatusGroup_SEMA42*

Group number for SEMA42 status code.

enumerator *kStatusGroup_SDHC*

Group number for SDHC status code

enumerator *kStatusGroup_SDMMC*

Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator kStatusGroup_OSA
Group number for OSA status codes.

enumerator `kStatusGroup_COMMON_TASK`
Group number for Common task status codes.

enumerator `kStatusGroup_MSG`
Group number for messaging status codes.

enumerator `kStatusGroup_SDK_OCOTP`
Group number for OCOTP status codes.

enumerator `kStatusGroup_SDK_FLEXSPINOR`
Group number for FLEXSPINOR status codes.

enumerator `kStatusGroup_CODEC`
Group number for codec status codes.

enumerator `kStatusGroup_ASRC`
Group number for codec status ASRC.

enumerator `kStatusGroup_OTFAD`
Group number for codec status codes.

enumerator `kStatusGroup_SDIOSLV`
Group number for SDIOSLV status codes.

enumerator `kStatusGroup_MECC`
Group number for MECC status codes.

enumerator `kStatusGroup_ENET_QOS`
Group number for ENET_QOS status codes.

enumerator `kStatusGroup_LOG`
Group number for LOG status codes.

enumerator `kStatusGroup_I3CBUS`
Group number for I3CBUS status codes.

enumerator `kStatusGroup_QSCI`
Group number for QSCI status codes.

enumerator `kStatusGroup_ELEMU`
Group number for ELEMU status codes.

enumerator `kStatusGroup_QUEUEDSPI`
Group number for QSPI status codes.

enumerator `kStatusGroup_POWER_MANAGER`
Group number for POWER_MANAGER status codes.

enumerator `kStatusGroup_IPED`
Group number for IPED status codes.

enumerator `kStatusGroup_ELS_PKC`
Group number for ELS PKC status codes.

enumerator `kStatusGroup_CSS_PKC`
Group number for CSS PKC status codes.

enumerator `kStatusGroup_HOSTIF`
Group number for HOSTIF status codes.

enumerator `kStatusGroup_CLIF`
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout
Generic status for timeout.

enumerator kStatus_NoTransferInProgress
Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline status_t EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

static inline status_t DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt disabled successfully
- `kStatus_Fail` – Failed to disable the interrupt

`static inline status_t EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)`

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ to Enable.
- `priNum` – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

`static inline status_t IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)`

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ to set.
- `priNum` – Priority number set to interrupt controller register.

Return values

- `kStatus_Success` – Interrupt priority set successfully
- `kStatus_Fail` – Failed to set the interrupt priority.

`static inline status_t IRQ_ClearPendingIRQ(IRQn_Type interrupt)`

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t __SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused	Major Version		Minor Version		Bug Fix		
31	25	24	17	16	9	8	0

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING;” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.21 LPACMP: Low-Power Analog Comparator Driver

void LPACMP_Init(LPACMP_Type *base, const *lpacmp_config_t* *config)

Initialize the LPACMP module.

Parameters

- base – LPACMP peripheral base address
- config – Pointer to the LPACMP configuration structure, please refer to *lpacmp_config_t* for details.

void LPACMP_GetDefaultConfig(*lpacmp_config_t* *config)

Gets an available pre-defined settings for LPACMP configuration.

Parameters

- config – Pointer to the LPACMP configuration structure, please refer to *lpacmp_config_t* for details.

void LPACMP_Deinit(LPACMP_Type *base)

De-initializes the LPACMP module.

Parameters

- base – LPACMP peripheral base address

static inline void LPACMP_EnableComparator(LPACMP_Type *base, bool enable)

Enable/Disable comparator module.

Parameters

- base – LPACMP peripheral base address
- enable – Indicates whether to enable the comparator module **true** Enable the comparator module **false** Disable the comparator module

static inline void LPACMP_SetComparatorMode(LPACMP_Type *base, *lpacmp_mode_t* mode)

Set comparator mode.

Parameters

- base – LPACMP peripheral base address
- mode – comparator mode

static inline void LPACMP_SetIntervalTime(LPACMP_Type *base, uint16_t time)

Compare event trigger interval time.

Parameters

- base – LPACMP peripheral base address
- time – Compare event trigger interval time


```
static inline void LPACMP_ChannelInputSelection(LPACMP_Type *base, uint8_t channel,  
                                                lpacmp_positive_input_t positive,  
                                                lpacmp_negative_input_t negative)
```

Channel positive and negative input selection.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- positive – Positive input channel selection
- negative – Negative input channel selection

```
static inline void LPACMP_SetComparePolarity(LPACMP_Type *base, uint8_t channel, bool  
                                             polarity)
```

Comparison polarity configuration.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- polarity – Comparison polarity
 - **true** When the value we are checking is higher than the reference value.
input parameter 'result'.
 - **false** When the value we are checking is lower than the reference value.

```
static inline void LPACMP_SetDelayValue(LPACMP_Type *base, uint8_t channel, uint16_t delay)
```

Compare event sample delay value.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- delay – Compare event sample delay value

```
static inline void LPACMP_SetTriggerOutputWidth(LPACMP_Type *base, uint8_t channel,  
                                                 uint8_t width)
```

Set the trigger output width in clock units.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- width – trigger output width

```
static inline void LPACMP_EnableWakeupToSmm(LPACMP_Type *base, uint8_t channel, bool  
                                             enable)
```

Enable/Disable wakeup to SMM.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- enable – Indicates whether to enable the comparator module
 - **true** Enable the comparator module
 - **false** Disable the comparator module

```
static inline void LPACMP_EnableTriggerOutput(LPACMP_Type *base, uint8_t channel, bool enable)
```

Enable/Disable trigger output.

Parameters

- base – LPACMP peripheral base address
- channel – Channel index (0-3)
- enable – Indicates whether to enable the trigger output
 - **true** Enable the trigger output
 - **false** Disable the trigger output

```
static inline void LPACMP_EnableChannel(LPACMP_Type *base, uint8_t channel, bool enable)
```

Enable/Disable channel.

Parameters

- base – LPACMP peripheral base address
- channel – Channel index (0-3)
- enable – Indicates whether to enable the trigger output **true** Enable the trigger output **false** Disable the trigger output

```
static inline void LPACMP_EnableInterrupt(LPACMP_Type *base, uint8_t channel, bool enable)
```

Enable/Disable match interrupt for specific channel.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- enable – Indicates whether to enable or disable the match interrupt **true** Enable the match interrupt **false** Disable the match interrupt

```
static inline void LPACMP_ClearInterruptStatusFlags(LPACMP_Type *base, uint8_t channel)
```

Clear comparison interrupt status flags.

Remark

Uses Write-1-to-Clear (W1C) mechanism

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)

```
static inline uint32_t LPACMP_GetInterruptStatusFlags(LPACMP_Type *base)
```

Get the comparison interrupt status flag.

Parameters

- base – LPACMP peripheral base address

Returns

Comparison interrupt status flags

FSL_LPACMP_DRIVER_VERSION

LPACMP driver version.

enum _lpacmp_negative_input

Comparator negative input source.

Values:

enumerator kLPACMP_Negative_Input_Avdd_Divide_15

Comparator negative input source 1 x AVDD / 15

enumerator kLPACMP_Negative_Input_2Avdd_Divide_15

Comparator negative input source 2 x AVDD / 15

enumerator kLPACMP_Negative_Input_3Avdd_Divide_15

Comparator negative input source 3 x AVDD / 15

enumerator kLPACMP_Negative_Input_4Avdd_Divide_15

Comparator negative input source 4 x AVDD / 15

enumerator kLPACMP_Negative_Input_5Avdd_Divide_15

Comparator negative input source 5 x AVDD / 15

enumerator kLPACMP_Negative_Input_6Avdd_Divide_15

Comparator negative input source 6 x AVDD / 15

enumerator kLPACMP_Negative_Input_7Avdd_Divide_15

Comparator negative input source 7 x AVDD / 15

enumerator kLPACMP_Negative_Input_8Avdd_Divide_15

Comparator negative input source 8 x AVDD / 15

enumerator kLPACMP_Negative_Input_9Avdd_Divide_15

Comparator negative input source 9 x AVDD / 15

enumerator kLPACMP_Negative_Input_10Avdd_Divide_15

Comparator negative input source 10 x AVDD / 15

enumerator kLPACMP_Negative_Input_11Avdd_Divide_15

Comparator negative input source 11 x AVDD / 15

enumerator kLPACMP_Negative_Input_12Avdd_Divide_15

Comparator negative input source 12 x AVDD / 15

enumerator kLPACMP_Negative_Input_13Avdd_Divide_15

Comparator negative input source 13 x AVDD / 15

enumerator kLPACMP_Negative_Input_14Avdd_Divide_15

Comparator negative input source 14 x AVDD / 15

enumerator kLPACMP_Negative_Input_In4

Comparator negative input source 4

enumerator kLPACMP_Negative_Input_In5

Comparator negative input source 5

enum _lpacmp_positive_input

Comparator positive input source.

Values:

enumerator kLPACMP_Positive_Input_In4

Comparator positive input source 4

enumerator kLPACMP_Positive_Input_In5

Comparator positive input source 5

```
enumerator kLPACMP_Positive_Input_In0
    Comparator positive input source 0
enumerator kLPACMP_Positive_Input_In1
    Comparator positive input source 1
enumerator kLPACMP_Positive_Input_In2
    Comparator positive input source 2
enumerator kLPACMP_Positive_Input_In3
    Comparator positive input source 3
enum _lpacmp_mode
    Comparator operation modes.
Values:
enumerator kLPACMP_Continuous_Mode
    Always-on comparison
enumerator kLPACMP_Interval_Mode
    Periodic sampling with internal timer
enumerator kLPACMP_Trigger_Mode
    External trigger activation
typedef enum _lpacmp_negative_input lpacmp_negative_input_t
    Comparator negative input source.
typedef enum _lpacmp_positive_input lpacmp_positive_input_t
    Comparator positive input source.
typedef enum _lpacmp_mode lpacmp_mode_t
    Comparator operation modes.
typedef struct _lpacmp_channel_config lpacmp_channel_config_t
    Channel configuration structure.
typedef struct _lpacmp_config lpacmp_config_t
    Comparator configuration structure.
struct _lpacmp_channel_config
    #include <fsl_lpacmp.h> Channel configuration structure.
```

Public Members

```
bool enableWakeupToSmm
    Decides whether to enable wakeup to SMM
bool enableTriggerOutput
    Decides whether to enable trigger output
bool enableInterrupt
    Decides whether to enable match interrupt
bool comparePolarityHigher
    Decides comparison polarity
uint8_t channelIndex
    Indicates the channel being configured
```

`uint8_t` triggerOutputWidth
Sets trigger output width

`uint16_t` delay
Sets the delay value for which a compare event is sampled

`lpacmp_positive_input_t` positiveInput
Positive input selection (see RM SELn.INP_SEL)

`lpacmp_negative_input_t` negativeInput
Negative input selection (see RM SELn.INN_SEL)

`struct __lpacmp_config`
#include <fsl_lpacmp.h> Comparator configuration structure.

Public Members

`uint8_t` channelCount
Indicates the channel counts

`uint16_t` intervalTime
Indicates the interval time

`lpacmp_mode_t` mode
Operating mode

`lpacmp_channel_config_t` *channelConfig
Channel configuration

2.22 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

`enum __lpadc_status_flags`
Define hardware flags of the module.
Values:

`enumerator kLPADC__ResultFIFO0OverflowFlag`
Indicates that more data has been written to the Result FIFO 0 than it can hold.

`enumerator kLPADC__ResultFIFO0ReadyFlag`
Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

`enumerator kLPADC__TriggerExceptionFlag`
Indicates that a trigger exception event has occurred.

`enumerator kLPADC__TriggerCompletionFlag`
Indicates that a trigger completion event has occurred.

`enumerator kLPADC__CalibrationReadyFlag`
Indicates that the calibration process is done.

`enumerator kLPADC__ActiveFlag`
Indicates that the ADC is in active state.

`enumerator kLPADC__ResultFIFOOverflowFlag`
To compilitable with old version, do not recommend using this, please use `kLPADC__ResultFIFO0OverflowFlag` as instead.

enumerator kLPADC_ResultFIFOReadyFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0ReadyFlag as instead.

enum __lpadc_interrupt_enable

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_ResultFIFO0OverflowInterruptEnable

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator kLPADC_FIFO0WatermarkInterruptEnable

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator kLPADC_ResultFIFOOverflowInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowInterruptEnable as instead.

enumerator kLPADC_FIFOWatermarkInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_FIFO0WatermarkInterruptEnable as instead.

enumerator kLPADC_TriggerExceptionInterruptEnable

Configures ADC to generate trigger exception interrupt.

enumerator kLPADC_Trigger0CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags

The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag

Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag

Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag

Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag

Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag

Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag

Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag

Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag

Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag

Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag

Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag

Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag

Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag

Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag

Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag

Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag

Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag

Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag

Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag

Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag

Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag

Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag

Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag

Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag

Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag

Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag

Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag

Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag

Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag

Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag

Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum __lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level

at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC__SamplePartScale

Use divided input voltage signal. (For scale select, please refer to the reference manual).

enumerator kLPADC__SampleFullScale

Full scale (Factor of 1).

enum __lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC__SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC__SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC__SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC__SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC__SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC__SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum __lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC__HardwareAverageCount1

Single conversion.

enumerator kLPADC__HardwareAverageCount2

2 conversions averaged.

enumerator kLPADC__HardwareAverageCount4

4 conversions averaged.

enumerator kLPADC__HardwareAverageCount8

8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16
16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32
32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64
64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128
128 conversions averaged.

enum _lpadc_sample_time_mode

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3
3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5
5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7
7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11
11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19
19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35
35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67
69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131
131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled
Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue
Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum `_lpadc_conversion_resolution_mode`

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to `lpadc_sample_channel_mode_t`

Values:

enumerator `kLPADC_ConversionResolutionStandard`

Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator `kLPADC_ConversionResolutionHigh`

High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum `_lpadc_conversion_average_mode`

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of `CAL_AVGS` field in `CTRL` register.

Values:

enumerator `kLPADC_ConversionAverage1`

Single conversion.

enumerator `kLPADC_ConversionAverage2`

2 conversions averaged.

enumerator `kLPADC_ConversionAverage4`

4 conversions averaged.

enumerator `kLPADC_ConversionAverage8`

8 conversions averaged.

enumerator `kLPADC_ConversionAverage16`

16 conversions averaged.

enumerator `kLPADC_ConversionAverage32`

32 conversions averaged.

enumerator `kLPADC_ConversionAverage64`

64 conversions averaged.

enumerator `kLPADC_ConversionAverage128`

128 conversions averaged.

enum `_lpadc_reference_voltage_mode`

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

Values:

enumerator `kLPADC_ReferenceVoltageAlt1`

Option 1 setting.

enumerator `kLPADC_ReferenceVoltageAlt2`

Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3

Option 3 setting.

enum _lpadc_power_level_mode

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1

Lowest power setting.

enumerator kLPADC_PowerLevelAlt2

Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3

...

enumerator kLPADC_PowerLevelAlt4

Highest power setting.

enum _lpadc_offset_calibration_mode

Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode

12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode

16 bit offset calibration mode.

enum _lpadc_trigger_priority_policy

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

Values:

enumerator kLPADC_ConvPreemptImmediatelyNotAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kLPADC_ConvPreemptSoftlyNotAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoRestarted

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptSoftlyAutoRestarted

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator kLPADC_ConvPreemptSoftlyAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator kLPADC_TriggerPriorityPreemptImmediately

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityPreemptSoftly

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityExceptionDisabled

High priority trigger exception disabled.

enum _lpadc_tune_value

Define enumeration of tune value.

Values:

enumerator kLPADC_TuneValue0

Tune value 0.

enumerator kLPADC_TuneValue1

Tune value 1.

enumerator kLPADC_TuneValue2

Tune value 2.

enumerator kLPADC_TuneValue3

Tune value 3.

typedef enum _lpadc_sample_scale_mode lpadc_sample_scale_mode_t

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum _lpadc_sample_channel_mode lpadc_sample_channel_mode_t

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

`typedef enum _lpadc_hardware_average_mode` `lpadc_hardware_average_mode_t`

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

`typedef enum _lpadc_sample_time_mode` `lpadc_sample_time_mode_t`

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

`typedef enum _lpadc_hardware_compare_mode` `lpadc_hardware_compare_mode_t`

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

`typedef enum _lpadc_conversion_resolution_mode` `lpadc_conversion_resolution_mode_t`

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to `lpadc_sample_channel_mode_t`

`typedef enum _lpadc_conversion_average_mode` `lpadc_conversion_average_mode_t`

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

`typedef enum _lpadc_reference_voltage_mode` `lpadc_reference_voltage_source_t`

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

`typedef enum _lpadc_power_level_mode` `lpadc_power_level_mode_t`

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

`typedef enum _lpadc_offset_calibration_mode` `lpadc_offset_calibration_mode_t`

Define enumeration of offset calibration mode.

`typedef enum _lpadc_trigger_priority_policy` `lpadc_trigger_priority_policy_t`

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: `kLPADC_TriggerPriorityPreemptSubsequently` is not available on some devices, mainly depends on the size of `TPRCTRL` field in `CFG` register.

`typedef enum _lpadc_tune_value` `lpadc_tune_value_t`

Define enumeration of tune value.

`typedef struct _lpadc_calibration_value` `lpadc_calibration_value_t`

A structure of calibration value.

`LPADC_CONVERSION_COMPLETE_TIMEOUT`

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

`LPADC_CALIBRATION_READY_TIMEOUT`

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

`LPADC_GAIN_CAL_READY_TIMEOUT`

Max loops to wait for LPADC gain calibration `GAIN_CAL` ready.

Before doing calibration, driver will wait for the gain calibration `GAIN_CAL` ready. This parameter defines how many loops to check the gain calibration `GAIN_CAL` ready. If defined as 0, driver will wait forever until ready.

`ADC_OFSTRIM_OFSTRIM_MAX`

`ADC_OFSTRIM_OFSTRIM_SIGN`

`LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)`

Define the MACRO function to get command status from status value.

The `statusVal` is the return value from `LPADC_GetStatusFlags()`.

`LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)`

Define the MACRO function to get trigger status from status value.

The `statusVal` is the return value from `LPADC_GetStatusFlags()`.

`void LPADC_Init(ADC_Type *base, const lpadc_config_t *config)`

Initializes the LPADC module.

Parameters

- `base` – LPADC peripheral base address.
- `config` – Pointer to configuration structure. See “`lpadc_config_t`”.

`void LPADC_GetDefaultConfig(lpadc_config_t *config)`

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode      = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay           = 0x80;
config->referenceVoltageSource = kLPADC_ReferenceVoltageAlt1;
```

(continues on next page)

(continued from previous page)

```

config->powerLevelMode      = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause     = false;
config->convPauseDelay      = 0U;
config->FIFOWatermark       = 0U;

```

Parameters

- config – Pointer to configuration structure.

void LPADC_Deinit(ADC_Type *base)
De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_Enable(ADC_Type *base, bool enable)
Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

static inline void LPADC_DoResetFIFO(ADC_Type *base)
Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_DoResetConfig(ADC_Type *base)
Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)
Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns

status flags' mask. See to `_lpadc_status_flags`.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)
Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to `_lpadc_status_flags`.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of `_lpadc_trigger_status_flags`.

```
static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)
```

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of `_lpadc_trigger_status_flags`.

```
static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)
```

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

```
static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)
```

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

```
static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)
```

Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

```
static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)
```

Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

```
bool LPADC_GetConvResult(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

```
void LPADC_GetConvResultBlocking(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

```
void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const
                                lpadc_conv_trigger_config_t *config)
```

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to `lpadc_conv_trigger_config_t`.

```
void LPADC_GetDefaultConvTriggerConfig(lpadc_conv_trigger_config_t *config)
```

Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId    = 0U;
config->delayPower         = 0U;
config->priority            = 0U;
config->channelAFIFOSelect = 0U;
config->channelBFIFOSelect = 0U;
config->enableHardwareTrigger = false;
```

Parameters

- config – Pointer to configuration structure.

```
static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)
```

Do software trigger to conversion command.

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

```
void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const
                                lpadc_conv_command_config_t *config)
```

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.

- `commandId` – ID for command in command buffer. Typically, the available value range is 1 - 15.
- `config` – Pointer to configuration structure. See to `lpadc_conv_command_config_t`.

`void LPADC_GetDefaultConvCommandConfig(lpadc_conv_command_config_t *config)`

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode      = kLPADC_SampleFullScale;
config->channelBScaleMode    = kLPADC_SampleFullScale;
config->sampleChannelMode    = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber        = 0U;
config->channelBNumber       = 0U;
config->chainedNextCommandNumber = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount            = 0U;
config->hardwareAverageMode    = kLPADC_HardwareAverageCount1;
config->sampleTimeMode        = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode    = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh = 0U;
config->hardwareCompareValueLow  = 0U;
config->conversionResolutionMode = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger      = false;
config->enableChannelB        = false;
```

Parameters

- `config` – Pointer to configuration structure.

`void LPADC_EnableCalibration(ADC_Type *base, bool enable)`

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- `base` – LPADC peripheral base address.
- `enable` – switcher to the calibration function.

`static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)`

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- `base` – LPADC peripheral base address.
- `value` – Setting offset value.

`status_t LPADC_DoAutoCalibration(ADC_Type *base)`

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional

API including: -LPADC_EnableCalibration(...) -LPADC_LPADC_SetOffsetValue(...) -LPADC_SetConvCommandConfig(...) -LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.
- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t.

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, lpadc_calibration_value_t *ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure, this memory block should be always powered on even in low power modes.

status_t LPADC_SetCalibrationValue(ADC_Type *base, const lpadc_calibration_value_t *ptrCalibrationValue)

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

```
static inline void LPADC_RequestHighSpeedModeTrim(ADC_Type *base)
```

Request high speed mode trim calculation.

Parameters

- base – LPADC peripheral base address.

```
static inline int8_t LPADC_GetHighSpeedTrimValue(ADC_Type *base)
```

Get high speed mode trim value, the result is a 5-bit signed value between -16 and 15.

Note: The high speed mode trim value is used to minimize offset for high speed conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The calculated high speed mode trim value.

```
static inline void LPADC_SetHighSpeedTrimValue(ADC_Type *base, int8_t trimValue)
```

Set high speed mode trim value.

Note: If is possible to set the trim value manually, but it is recommended to use the LPADC_RequestHighSpeedModeTrim.

Parameters

- base – LPADC peripheral base address.
- trimValue – The trim value to be set.

```
static inline void LPADC_EnableHighSpeedConversionMode(ADC_Type *base, bool enable)
```

Enable/disable high speed conversion mode, if enabled conversions complete 2 or 3 ADCK cycles sooner compared to conversion cycle counts when high speed mode is disabled.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable high speed conversion mode:
 - **true** Enable high speed conversion mode;
 - **false** Disable high speed conversion mode.

```
static inline void LPADC_EnableExtraCycle(ADC_Type *base, bool enable)
```

Enable/disable an additional ADCK cycle to conversion.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable an additional ADCK cycle to conversion:
 - **true** Enable an additional ADCK cycle to conversion;
 - **false** Disable an additional ADCK cycle to conversion.

```
static inline void LPADC_SetTuneValue(ADC_Type *base, lpadc_tune_value_t tuneValue)
```

Set tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

- tuneValue – The tune value to be set, please refer to lpadc_tune_value_t.

static inline *lpadc_tune_value_t* LPADC_GetTuneValue(ADC_Type *base)

Get tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The tune value, please refer to lpadc_tune_value_t.

FSL_LPADC_DRIVER_VERSION

LPADC driver version 2.9.3.

struct lpadc_config_t

#include <fsl_lpadc.h> LPADC global configuration.

This structure would used to keep the settings for initialization.

Public Members

bool enableInternalClock

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

bool enableVref1LowVoltage

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

bool enableInDozeMode

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

lpadc_conversion_average_mode_t conversionAverageMode

Auto-Calibration Averages.

bool enableAnalogPreliminary

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

uint32_t powerUpDelay

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (powerUpDelay * 4) ADCK cycles must result in a longer delay than the analog startup time.

lpadc_reference_voltage_source_t referenceVoltageSource

Selects the voltage reference high used for conversions.

lpadc_power_level_mode_t powerLevelMode

Power Configuration Selection.

lpadc_trigger_priority_policy_t triggerPriorityPolicy

Control how higher priority triggers are handled, see to lpadc_trigger_priority_policy_t.

bool enableConvPause

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channel B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number, select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number, select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the “loopCount” field selects the number of times the selected channel is converted consecutively; when enabled, the “loopCount” field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is $2^{\text{delayPower}}$ ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. The software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct __lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.23 Lpc_freqme

void `FREQME_Init(FREQME_Type *base, const freq_measure_config_t *config)`

Initialize freqme module, set operate mode, operate mode attribute and initialize measurement cycle.

Parameters

- `base` – FREQME peripheral base address.
- `config` – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

void `FREQME_GetDefaultConfig(freq_measure_config_t *config)`

Get default configuration.

```
config->operateMode = kFREQME_FreqMeasurementMode;
config->operateModeAttribute.refClkScaleFactor = 0U;
config->enableContinuousMode = false;
config->startMeasurement = false;
```

Parameters

- `config` – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

static inline void `FREQME_StartMeasurementCycle(FREQME_Type *base)`

Start frequency or pulse width measurement process.

Parameters

- `base` – FREQME peripheral base address.

static inline void `FREQME_TerminateMeasurementCycle(FREQME_Type *base)`

Force the termination of any measurement cycle currently in progress and resets RESULT or just reset RESULT if the module in idle state.

Parameters

- `base` – FREQME peripheral base address.

static inline void `FREQME_EnableContinuousMode(FREQME_Type *base, bool enable)`

Enable/disable Continuous mode.

Parameters

- `base` – FREQME peripheral base address.
- `enable` – Used to enable/disable continuous mode,
 - **true** Enable Continuous mode.
 - **false** Disable Continuous mode.

static inline bool `FREQME_CheckContinuousMode(FREQME_Type *base)`

Check whether continuous mode is enabled.

Parameters

- `base` – FREQME peripheral base address.

Return values

- **True** – Continuous mode is enabled, the measurement is performed continuously.
- **False** – Continuous mode is disabled.

```
static inline void FREQME_SetOperateMode(FREQME_Type *base, freqme_operate_mode_t  
                                         operateMode)
```

Set operate mode of freqme module.

Parameters

- base – FREQME peripheral base address.
- operateMode – The operate mode to be set, please refer to freqme_operate_mode_t.

```
static inline bool FREQME_CheckOperateMode(FREQME_Type *base)
```

Check module's operate mode.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Pulse width measurement mode.
- False – Frequency measurement mode.

```
static inline void FREQME_SetMinExpectedValue(FREQME_Type *base, uint32_t minValue)
```

Set the minimum expected value for the measurement result.

Parameters

- base – FREQME peripheral base address.
- minValue – The minimum value to set, please note that this value is 31 bits width.

```
static inline void FREQME_SetMaxExpectedValue(FREQME_Type *base, uint32_t maxValue)
```

Set the maximum expected value for the measurement result.

Parameters

- base – FREQME peripheral base address.
- maxValue – The maximum value to set, please note that this value is 31 bits width.

```
uint32_t FREQME_CalculateTargetClkFreq(FREQME_Type *base, uint32_t refClkFrequency)
```

Calculate the frequency of selected target clock

Note: The formula: $F_{\text{target}} = (\text{RESULT} - 2) * F_{\text{reference}} / 2^{\text{REF\_SCALE}}$.

Note: This function only useful when the operate mode is selected as frequency measurement mode.

Parameters

- base – FREQME peripheral base address.
- refClkFrequency – The frequency of reference clock.

Returns

The frequency of target clock the unit is Hz, if the output result is 0, please check the module's operate mode.

```
static inline uint8_t FREQME_GetReferenceClkScaleValue(FREQME_Type *base)
```

Get reference clock scaling factor.

Parameters

- base – FREQME peripheral base address.

Returns

Reference clock scaling factor, the reference count cycle is $2^{\text{ref\_scale}}$.

```
static inline void FREQME_SetPulsePolarity(FREQME_Type *base, freqme_pulse_polarity_t  
pulsePolarity)
```

Set pulse polarity when operate mode is selected as Pulse Width Measurement mode.

Parameters

- base – FREQME peripheral base address.
- pulsePolarity – The pulse polarity to be set, please refer to `freqme_pulse_polarity_t`.

```
static inline bool FREQME_CheckPulsePolarity(FREQME_Type *base)
```

Check pulse polarity when the operate mode is selected as pulse width measurement mode.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Low period.
- False – High period.

```
static inline uint32_t FREQME_GetMeasurementResult(FREQME_Type *base)
```

Get measurement result, if operate mode is selected as pulse width measurement mode this function can be used to calculate pulse width.

Note: Pulse width = counter result / Frequency of target clock.

Parameters

- base – FREQME peripheral base address.

Returns

Measurement result.

```
static inline uint32_t FREQME_GetInterruptStatusFlags(FREQME_Type *base)
```

Get interrupt status flags, such as overflow interrupt status flag, underflow interrupt status flag, and so on.

Parameters

- base – FREQME peripheral base address.

Returns

Current interrupt status flags, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_ClearInterruptStatusFlags(FREQME_Type *base, uint32_t  
statusFlags)
```

Clear interrupt status flags.

Parameters

- base – FREQME peripheral base address.

- `statusFlags` – The combination of interrupt status flags to clear, should be the OR'ed value of `_freqme_interrupt_status_flags`.

static inline void `FREQME_EnableInterrupts(FREQME_Type *base, uint32_t masks)`

Enable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- `base` – FREQME peripheral base address.
- `masks` – The mask of interrupts to enable, should be the OR'ed value of `_freqme_interrupt_enable`.

static inline void `FREQME_DisableInterrupts(FREQME_Type *base, uint32_t masks)`

Disable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- `base` – FREQME peripheral base address.
- `masks` – The mask of interrupts to disable, should be the OR'ed value of `_freqme_interrupt_enable`.

`FSL_FREQME_DRIVER_VERSION`

FREQME driver version 2.1.2.

enum `_freqme_interrupt_status_flags`

The enumeration of interrupt status flags. .

Values:

enumerator `kFREQME_UnderflowInterruptStatusFlag`

Indicate the measurement is just done and the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptStatusFlag`

Indicate the measurement is just done and the result is greater than maximum value.

enumerator `kFREQME_ReadyInterruptStatusFlag`

Indicate the measurement is just done and the result is ready to read.

enumerator `kFREQME_AllInterruptStatusFlags`

All interrupt status flags.

enum `_freqme_interrupt_enable`

The enumeration of interrupts, including underflow interrupt, overflow interrupt, and result ready interrupt. .

Values:

enumerator `kFREQME_UnderflowInterruptEnable`

Enable interrupt when the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptEnable`

Enable interrupt when the result is greater than maximum value.

enumerator `kFREQME_ReadyInterruptEnable`

Enable interrupt when a measurement completes and the result is ready.

enum `_freqme_operate_mode`

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

Values:

enumerator `kFREQME_FreqMeasurementMode`

The module works in the frequency measurement mode.

enumerator kFREOME_PulseWidthMeasurementMode

The module works in the pulse width measurement mode.

enum _freqme_pulse_polarity

The enumeration of pulse polarity.

Values:

enumerator kFREQME_PulseHighPeriod

Select high period of the reference clock.

enumerator kFREQME_PulseLowPeriod

Select low period of the reference clock.

typedef enum _freqme_operate_mode freqme_operate_mode_t

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

typedef enum _freqme_pulse_polarity freqme_pulse_polarity_t

The enumeration of pulse polarity.

typedef union _freqme_mode_attribute freqme_mode_attribute_t

The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

typedef struct _freq_measure_config freq_measure_config_t

The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

union _freqme_mode_attribute

#include <fsl_freqme.h> The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

Public Members

uint8_t refClkScaleFactor

Only useful in frequency measurement operate mode, used to set the reference clock counter scaling factor.

freqme_pulse_polarity_t pulsePolarity

Only Useful in pulse width measurement operate mode, used to set period polarity.

struct _freq_measure_config

#include <fsl_freqme.h> The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

Public Members

freqme_operate_mode_t operateMode

Select operate mode, please refer to *freqme_operate_mode_t*.

freqme_mode_attribute_t operateModeAttribute

Used to set the attribute of the selected operate mode, if the operate mode is selected as kFREQME_FreqMeasurementMode set *freqme_mode_attribute_t::refClkScaleFactor*; if operate mode is selected as kFREOME_PulseWidthMeasurementMode, please set *freqme_mode_attribute_t::pulsePolarity*.

bool enableContinuousMode

Enable/disable continuous mode, if continuous mode is enable, the measurement is performed continuously and the result for the last completed measurement is available in the result register.

2.24 LPCMP: Low Power Analog Comparator Driver

void LPCMP_Init(LPCMP_Type *base, const *lpcmp_config_t* *config)

Initialize the LPCMP.

This function initializes the LPCMP module. The operations included are:

- Enabling the clock for LPCMP module.
- Configuring the comparator.
- Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “*lpcmp_config_t*” structure.

void LPCMP_Deinit(LPCMP_Type *base)

De-initializes the LPCMP module.

This function de-initializes the LPCMP module. The operations included are:

- Disabling the LPCMP module.
- Disabling the clock for LPCMP module.

This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

Parameters

- base – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)

Gets an available pre-defined settings for the comparator’s configuration.

This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode      = false;
config->enableOutputPin     = false;
config->enableCmpToDacLink  = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput  = false;
config->hysteresisMode      = kLPCMP_HysteresisLevel0;
config->powerMode           = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
config->plusInputSrc        = kLPCMP_PlusInputSrcMux;
config->minusInputSrc       = kLPCMP_MinusInputSrcMux;
```

Parameters

- config – Pointer to “lpcmp_config_t” structure.

static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable the module, and “false” means disable the module.

void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t negativeChannel)

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled, the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable DMA support, and “false” means disable DMA support.

void LPCMP_SetFilterConfig(LPCMP_Type *base, const *lpcmp_filter_config_t* *config)

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_filter_config_t” structure.

void LPCMP_SetDACConfig(LPCMP_Type *base, const *lpcmp_dac_config_t* *config)

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_dac_config_t” structure. If config is “NULL”, disable internal DAC.

static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.


```
static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)
```

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

```
static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)
```

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)
```

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)
```

Enable/Disable window mode. When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable window mode, and “false” means disable window mode.

```
void LPCMP_SetWindowControl(LPCMP_Type *base, const lpcmp_window_control_config_t *config)
```

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event (only valid in windowing mode), and setting the COUTA signal after the window is closed (only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_window_control_config_t” structure.

```
void LPCMP_SetRoundRobinConfig(LPCMP_Type *base, const lpcmp_roundrobin_config_t *config)
```

Configure the roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_roundrobin_config_t” structure.

```
static inline void LPCMP_EnableRoundRobinMode(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin mode, and “false” means disable roundrobin mode.

void LPCMP_SetRoundRobinInternalTimer(LPCMP_Type *base, uint32_t value)

brief Configure the roundrobin internal timer reload value.

param base LPCMP peripheral base address. param value RoundRobin internal timer reload value, allowed range:0x0UL-0xFFFFFFFFUL.

static inline void LPCMP_EnableRoundRobinInternalTimer(LPCMP_Type *base, bool enable)

Enable/Disable roundrobin internal timer; note that this function is only valid when using the internal trigger source.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin internal timer, and “false” means disable roundrobin internal timer.

static inline void LPCMP_SetPreSetValue(LPCMP_Type *base, uint8_t mask)

Set preset value for all channels, users can set all channels' preset value through this API, for example, if the mask set to 0x03U means channel0 and channel2's preset value set to 1U and other channels' preset value set to 0U.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetComparisonResult(LPCMP_Type *base)

Get comparison results for all channels, users can get all channels' comparison results through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' comparison result.

static inline void LPCMP_ClearInputChangedFlags(LPCMP_Type *base, uint8_t mask)

Clear input changed flags for single channel or multiple channels, users can clear input changed flag of a single channel or multiple channels through this API, for example, if the mask set to 0x03U means clear channel0 and channel2's input changed flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetInputChangedFlags(LPCMP_Type *base)

Get input changed flags for all channels, Users can get all channels' input changed flags through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' changed flag.

FSL_LPCMP_DRIVER_VERSION

LPCMP driver version 2.3.2.

enum `_lpcmp_status_flags`

LPCMP status flags mask.

Values:

enumerator `kLPCMP_OutputRisingEventFlag`

Rising-edge on the comparison output has occurred.

enumerator `kLPCMP_OutputFallingEventFlag`

Falling-edge on the comparison output has occurred.

enumerator `kLPCMP_OutputRoundRobinEventFlag`

Detects when any channel's last comparison result is different from the pre-set value in trigger mode.

enumerator `kLPCMP_OutputAssertEventFlag`

Return the current value of the analog comparator output. The flag does not support W1C.

enum `_lpcmp_interrupt_enable`

LPCMP interrupt enable/disable mask.

Values:

enumerator `kLPCMP_OutputRisingInterruptEnable`

Comparator interrupt enable rising.

enumerator `kLPCMP_OutputFallingInterruptEnable`

Comparator interrupt enable falling.

enumerator `kLPCMP_RoundRobinInterruptEnable`

Comparator round robin mode interrupt occurred when the comparison result changes for a given channel.

enum `_lpcmp_hysteresis_mode`

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator `kLPCMP_HysteresisLevel0`

The hard block output has level 0 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel1`

The hard block output has level 1 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel2`

The hard block output has level 2 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel3`

The hard block output has level 3 hysteresis internally.

enum `_lpcmp_power_mode`

LPCMP nano mode.

Values:

enumerator `kLPCMP_LowSpeedPowerMode`

Low speed comparison mode is selected.

enumerator `kLPCMP_HighSpeedPowerMode`

High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode
Nano power comparator is enabled.

enum __lpcmp_dac_reference_voltage_source
Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1
vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2
vrefh_ext is selected as resistor ladder network supply reference Vin.

enum __lpcmp_functional_source_clock
LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

Values:

enumerator kLPCMP_FunctionalClockSource0
Select functional mode clock source0.

enumerator kLPCMP_FunctionalClockSource1
Select functional mode clock source1.

enumerator kLPCMP_FunctionalClockSource2
Select functional mode clock source2.

enumerator kLPCMP_FunctionalClockSource3
Select functional mode clock source3.

enum __lpcmp_couta_signal
Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet
NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow
Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh
Set COUTA signal high(1) when the window is closed.

enum __lpcmp_close_window_event
Set COUT event, which can close the active window in window mode.

Values:

enumerator kLPCMP_CCloseWindowEventNoSet
No Set COUT event, which can close the active window in window mode.

enumerator kLPCMP_CloseWindowEventRisingEdge
Set rising edge COUT signal as COUT event.

enumerator kLPCMP_CloseWindowEventFallingEdge
Set falling edge COUT signal as COUT event.

enumerator kLPCMP_CCloseWindowEventBothEdge
Set both rising and falling edge COUT signal as COUT event.

enum _lpcmp_roundrobin_fixedmuxport

LPCMP round robin mode fixed mux port.

Values:

enumerator kLPCMP_FixedPlusMuxPort

Fixed plus mux port.

enumerator kLPCMP_FixedMinusMuxPort

Fixed minus mux port.

enum _lpcmp_roundrobin_clock_source

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

Values:

enumerator kLPCMP_RoundRobinClockSource0

Select roundrobin mode clock source0.

enumerator kLPCMP_RoundRobinClockSource1

Select roundrobin mode clock source1.

enumerator kLPCMP_RoundRobinClockSource2

Select roundrobin mode clock source2.

enumerator kLPCMP_RoundRobinClockSource3

Select roundrobin mode clock source3.

enum _lpcmp_roundrobin_trigger_source

LPCMP round robin mode trigger source.

Values:

enumerator kLPCMP_TriggerSourceExternally

Select external trigger source.

enumerator kLPCMP_TriggerSourceInternally

Select internal trigger source.

enum _lpcmp_plus_input_src

LPCMP plus input source.

Values:

enumerator kLPCMP_PlusInputSrcDac

LPCMP plus input source from the internal 8-bit DAC output.

enumerator kLPCMP_PlusInputSrcMux

LPCMP plus input source from the analog 8-1 mux.

enum _lpcmp_minus_input_src

LPCMP minus input source.

Values:

enumerator kLPCMP_MinusInputSrcDac

LPCMP minus input source from the internal 8-bit DAC output.

enumerator kLPCMP_MinusInputSrcMux

LPCMP minus input source from the analog 8-1 mux.

typedef enum *_lpcmp_hysteresis_mode* lpcmp_hysteresis_mode_t

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

typedef enum *_lpcmp_power_mode* lpcmp_power_mode_t

LPCMP nano mode.

typedef enum *_lpcmp_dac_reference_voltage_source* lpcmp_dac_reference_voltage_source_t

Internal DAC reference voltage source.

typedef enum *_lpcmp_functional_source_clock* lpcmp_functional_source_clock_t

LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

typedef enum *_lpcmp_couta_signal* lpcmp_couta_signal_t

Set the COUTA signal value when the window is closed.

typedef enum *_lpcmp_close_window_event* lpcmp_close_window_event_t

Set COUT event, which can close the active window in window mode.

typedef enum *_lpcmp_roundrobin_fixedmuxport* lpcmp_roundrobin_fixedmuxport_t

LPCMP round robin mode fixed mux port.

typedef enum *_lpcmp_roundrobin_clock_source* lpcmp_roundrobin_clock_source_t

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

typedef enum *_lpcmp_roundrobin_trigger_source* lpcmp_roundrobin_trigger_source_t

LPCMP round robin mode trigger source.

typedef struct *_lpcmp_filter_config* lpcmp_filter_config_t

Configure the filter.

typedef enum *_lpcmp_plus_input_src* lpcmp_plus_input_src_t

LPCMP plus input source.

typedef enum *_lpcmp_minus_input_src* lpcmp_minus_input_src_t

LPCMP minus input source.

typedef struct *_lpcmp_dac_config* lpcmp_dac_config_t

configure the internal DAC.

typedef struct *_lpcmp_config* lpcmp_config_t

Configures the comparator.

typedef struct *_lpcmp_window_control_config* lpcmp_window_control_config_t

Configure the window mode control.

typedef struct *_lpcmp_roundrobin_config* lpcmp_roundrobin_config_t

Configure the round robin mode.

LPCMP_CCR1_COUTA_CFG_MASK

LPCMP_CCR1_COUTA_CFG_SHIFT

LPCMP_CCR1_COUTA_CFG(x)

LPCMP_CCR1_EVT_SEL_CFG_MASK

LPCMP_CCR1_EVT_SEL_CFG_SHIFT

LPCMP_CCR1_EVT_SEL_CFG(x)

struct `_lpcmp_filter_config`

#include <fsl_lpcmp.h> Configure the filter.

Public Members

bool enableSample

Decide whether to use the external SAMPLE as a sampling clock input.

uint8_t filterSampleCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterSamplePeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

struct `_lpcmp_dac_config`

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

bool enableLowPowerMode

Decide whether to enable DAC low power mode.

lpcmp_dac_reference_voltage_source_t referenceVoltageSource

Internal DAC supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

struct `_lpcmp_config`

#include <fsl_lpcmp.h> Configures the comparator.

Public Members

bool enableStopMode

Decide whether to enable the comparator when in STOP modes.

bool enableCmpToDacLink

Controls the link from the CMP enable to the DAC enable.

bool enableOutputPin

Decide whether to enable the comparator is available in selected pin.

bool useUnfilteredOutput

Decide whether to use unfiltered output.

bool enableInvertOutput

Decide whether to inverts the comparator output.

lpcmp_hysteresis_mode_t hysteresisMode

LPCMP hysteresis mode.

lpcmp_power_mode_t powerMode

LPCMP power mode.

lpcmp_functional_source_clock_t functionalSourceClock

Select LPCMP functional mode clock source.

lpcmp_plus_input_src_t plusInputSrc

Select LPCMP plus input source.

lpcmp_minus_input_src_t minusInputSrc

Select LPCMP minus input source.

struct *__lpcmp_window_control_config*

#include <fsl_lpcmp.h> Configure the window mode control.

Public Members

bool enableInvertWindowSignal

True: enable invert window signal, False: disable invert window signal.

lpcmp_couta_signal_t COUTASignal

Decide whether to define the COUTA signal value when the window is closed.

lpcmp_close_window_event_t closeWindowEvent

Decide whether to select COUT event signal edge defines a COUT event to close window.

struct *__lpcmp_roundrobin_config*

#include <fsl_lpcmp.h> Configure the round robin mode.

Public Members

uint8_t initDelayModules

Comparator and DAC initialization delay modulus, See Reference Manual and DataSheet for specific value.

uint8_t sampleClockNumbers

Specify the number of the round robin clock cycles(0~3) to wait after scanning the active channel before sampling the channel's comparison result.

uint8_t channelSampleNumbers

Specify the number of samples for one channel, note that channelSampleNumbers must not smaller than sampleTimeThreshhold.

uint8_t sampleTimeThreshhold

Specify that for one channel, when (sampleTimeThreshhold + 1) sample results are "1",the final result is "1", otherwise the final result is "0", note that the sampleTimeThreshhold must not be larger than channelSampleNumbers.

lpcmp_roundrobin_clock_source_t roundrobinClockSource

Decide which clock source to choose in round robin mode.

lpcmp_roundrobin_trigger_source_t roundrobinTriggerSource

Decide which trigger source to choose in round robin mode.

lpcmp_roundrobin_fixedmuxport_t fixedMuxPort

Decide which mux port to choose as fixed channel in round robin mode.

uint8_t fixedChannel

Indicate which channel of the fixed mux port is used in round robin mode.

uint8_t checkerChannelMask

Indicate which channel of the non-fixed mux port to check its voltage value in round robin mode, for example, if checkerChannelMask set to 0x11U means select channel 0 and channel 4 as checker channel.

2.25 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy

The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle

The slave driver is idle.

enumerator kStatus_LPI2C_Nak

The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError

FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError

Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost

Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout

SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress

Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cMasterIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

IRQn_Type const kLpi2cSlaveIrqs[]

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

I2C_RETRY_TIMES

Retry times for waiting flag.

2.26 LPI2C Master Driver

void LPI2C_MasterGetDefaultConfig(*lpi2c_master_config_t* *masterConfig)

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster      = true;
masterConfig->debugEnable       = false;
masterConfig->ignoreAck         = false;
masterConfig->pinConfig         = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busIdleTimeout_ns = 0;
masterConfig->pinLowTimeout_ns  = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable = false;
masterConfig->hostRequest.source  = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with LPI2C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to *lpi2c_master_config_t*.

void LPI2C_MasterInit(LPI2C_Type *base, const *lpi2c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The LPI2C peripheral base address.

- `masterConfig` – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void LPI2C_MasterDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t *matchConfig)`

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

`status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)`

Convert provided flags to status code, and clear any errors if present.

Parameters

- `base` – The LPI2C peripheral base address.
- `status` – Current status flags value that will be checked.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_PinLowTimeout` –
- `kStatus_LPI2C_ArbitrationLost` –
- `kStatus_LPI2C_Nak` –
- `kStatus_LPI2C_FifoError` –

`status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)`

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_Busy` –

`static inline void LPI2C_MasterReset(LPI2C_Type *base)`

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as master.

```
static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_master_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_master_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

```
static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

`static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)`
Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

`static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)`
Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

`static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)`
Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

`static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)`
Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

`static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)`
Gets LPI2C master receive data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

`static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)`

Sets the watermarks for LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txWords` – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than `txWords`. Writing a value equal or greater than the FIFO size is truncated.
- `rxWords` – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than `rxWords`. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txCount` – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- `rxCount` – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.

```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted,

followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,  
                                                lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)
```

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_LPI2C_Nak`.

Parameters

- *base* – The LPI2C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.

- `kStatus_LPI2C_FifoError` – FIFO under run or over run.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterStop(LPI2C_Type *base)

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, *lpi2c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

```
void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                     lpi2c_master_transfer_callback_t callback, void  
                                     *userData)
```

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

```
status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                         lpi2c_master_transfer_t *transfer)
```

Performs a non-blocking transaction on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_LPI2C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

```
status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                       size_t *count)
```

Returns number of bytes transferred so far.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus__Success` –
- `kStatus__NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void LPI2C_MasterTransferAbort(LPI2C_Type *base, lpi2c_master_handle_t *handle)`

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

`void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)`

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `lpi2cMasterHandle` – Pointer to the LPI2C master driver handle.

`enum _lpi2c_master_flags`

LPI2C master peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator `kLPI2C_MasterTxReadyFlag`

Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag

Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag

End Packet flag

enumerator kLPI2C_MasterStopDetectFlag

Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag

NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag

Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag

FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag

Data match flag

enumerator kLPI2C_MasterBusyFlag

Master busy flag

enumerator kLPI2C_MasterBusBusyFlag

Bus busy flag

enumerator kLPI2C_MasterClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags

Errors to check for.

enum _lpi2c_direction

Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write

Master transmit.

enumerator kLPI2C_Read

Master receive.

enum _lpi2c_master_pin_config

LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain

LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly

LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull

LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin

Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger

Select the input trigger as the host request input

enum _lpi2c_host_request_polarity

LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow

Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh

Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode

LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled

LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1

LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1

LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1

LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1

LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1

LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1

LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum `_lpi2c_master_transfer_flags`

Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator `kLPI2C_TransferDefaultFlag`

Transfer starts with a start signal, stops with a stop signal.

enumerator `kLPI2C_TransferNoStartFlag`

Don't send a start condition, address, and sub address

enumerator `kLPI2C_TransferRepeatedStartFlag`

Send a repeated start condition

enumerator `kLPI2C_TransferNoStopFlag`

Don't send a stop condition.

typedef enum `_lpi2c_direction` `lpi2c_direction_t`

Direction of master and slave transfers.

typedef enum `_lpi2c_master_pin_config` `lpi2c_master_pin_config_t`

LPI2C pin configuration.

typedef enum `_lpi2c_host_request_source` `lpi2c_host_request_source_t`

LPI2C master host request selection.

typedef enum `_lpi2c_host_request_polarity` `lpi2c_host_request_polarity_t`

LPI2C master host request pin polarity configuration.

typedef struct `_lpi2c_master_config` `lpi2c_master_config_t`

Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum `_lpi2c_data_match_config_mode` `lpi2c_data_match_config_mode_t`

LPI2C master data match configuration modes.

typedef struct `_lpi2c_match_config` `lpi2c_data_match_config_t`

LPI2C master data match configuration structure.

typedef struct `_lpi2c_master_transfer` `lpi2c_master_transfer_t`

LPI2C master descriptor of the transfer.

typedef struct `_lpi2c_master_handle` `lpi2c_master_handle_t`

LPI2C master handle of the transfer.

typedef void (*`lpi2c_master_transfer_callback_t`)(`LPI2C_Type` *`base`, `lpi2c_master_handle_t` *`handle`, `status_t` `completionStatus`, void *`userData`)

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to `LPI2C_MasterTransferCreateHandle()`.

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

```
bool enableMaster
```

Whether to enable master mode.

```
bool enableDoze
```

Whether master is enabled in doze mode.

```
bool debugEnable
```

Enable transfers to continue when halted in debug mode.

```
bool ignoreAck
```

Whether to ignore ACK/NACK.

```
lpi2c_master_pin_config_t pinConfig
```

The pin configuration option.

```
uint32_t baudRate_Hz
```

Desired baud rate in Hertz.

```
uint32_t busIdleTimeout_ns
```

Bus idle timeout in nanoseconds. Set to 0 to disable.

```
uint32_t pinLowTimeout_ns
```

Pin low timeout in nanoseconds. Set to 0 to disable.

```
uint8_t sdaGlitchFilterWidth_ns
```

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

```
uint8_t sclGlitchFilterWidth_ns
```

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

```
struct _lpi2c_master_config hostRequest
```

Host request options.

```
struct _lpi2c_match_config
```

#include <fsl_lpi2c.h> LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer*

#include <fsl_lpi2c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration *_lpi2c_master_transfer_flags* for available options. Set to 0 or *kLPI2C_TransferDefaultFlag* for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either *kLPI2C_Read* or *kLPI2C_Write*.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct *_lpi2c_master_handle*

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct hostRequest

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.27 LPI2C Master DMA Driver

```
void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
                                   edma_handle_t *rxDmaHandle, edma_handle_t
                                   *txDmaHandle, lpi2c_master_edma_transfer_callback_t
                                   callback, void *userData)
```

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *size_t* *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

typedef struct *lpi2c_master_edma_handle* *lpi2c_master_edma_handle_t*
LPI2C master EDMA handle of the transfer.

```
typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base,
lpi2c_master_edma_handle_t *handle, status_t completionStatus, void *userData)
```

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base

The LPI2C peripheral base address.

Param handle

Handle associated with the completed transfer.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_master_edma_handle
#include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base

LPI2C base pointer.

bool isBusy

Transfer state machine current state.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]

LPI2C command sequence. When all 10 command words are used:
Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] +
receive&Size[4 words]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

edma_handle_t *rx

Handle for receive DMA channel.

edma_handle_t *tx

Handle for transmit DMA channel.

edma_tcd_t tcds[3]

Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.28 LPI2C Slave Driver

`void LPI2C_SlaveGetDefaultConfig(lpi2c_slave_config_t *slaveConfig)`

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave      = true;
slaveConfig->address0         = 0U;
slaveConfig->address1         = 0U;
slaveConfig->addressMatchMode = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable = true;
slaveConfig->filterEnable     = true;
slaveConfig->enableGeneralCall = false;
slaveConfig->sclStall.enableAck = false;
slaveConfig->sclStall.enableTx  = true;
slaveConfig->sclStall.enableRx  = true;
slaveConfig->sclStall.enableAddress = true;
slaveConfig->ignoreAck         = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns = 0;
slaveConfig->sclGlitchFilterWidth_ns = 0;
slaveConfig->dataValidDelay_ns   = 0;
slaveConfig->clockHoldTime_ns    = 0;
```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- *slaveConfig* – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

`void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t sourceClock_Hz)`

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- *base* – The LPI2C peripheral base address.
- *slaveConfig* – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- *sourceClock_Hz* – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

`void LPI2C_SlaveDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- *base* – The LPI2C peripheral base address.

`static inline void LPI2C_SlaveReset(LPI2C_Type *base)`

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

`static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)`

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

`static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)`

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_slave_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

`static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)`

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_slave_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

`static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)`

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.

- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.

- `ackOrNack` – Pass true for an ACK or false for a NAK.

`static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)`

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – True will enable ACKSTALL, false will disable ACKSTALL.

`static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)`

Returns the slave address sent by the I2C master.

This function should only be called if the `kLPI2C_SlaveAddressValidFlag` is asserted.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

`status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)`

Performs a polling send transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.
- `actualTxSize` – **[out]**

Returns

Error or success status returned by API.

`status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)`

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.
- `actualRxSize` – **[out]**

Returns

Error or success status returned by API.

`void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle, lpi2c_slave_transfer_callback_t callback, void *userData)`

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_SlaveTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C slave driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *lpi2c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kLPI2C_SlaveTransmitEvent* and *kLPI2C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kLPI2C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.
- `eventMask` – Bit mask formed by OR'ing together *lpi2c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kLPI2C_SlaveAllEvents* to enable all events.

Return values

- *kStatus_Success* – Slave transfers were successfully started.
- *kStatus_LPI2C_Busy* – Slave transfers have already been started on this handle.

status_t LPI2C_SlaveTransferGetCount(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to *i2c_slave_handle_t* structure.
- `count` – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

enum *_lpi2c_slave_flags*

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag

Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag

Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag

Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag

Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag

Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag

Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag

Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag

FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag

Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag

General call flag

enumerator kLPI2C_SlaveBusyFlag

Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag

Bus busy flag

enumerator kLPI2C_SlaveClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags

Errors to check for.

enum _lpi2c_slave_address_match

LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0

Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1

Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1

Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, lpi2c_slave_transfer_t *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

struct `_lpi2c_slave_config`

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool `enableSlave`

Enable slave mode.

uint8_t `address0`

Slave's 7-bit address.

uint8_t `address1`

Alternate slave 7-bit address.

lpi2c_slave_address_match_t `addressMatchMode`

Address matching options.

bool `filterDozeEnable`

Enable digital glitch filter in doze mode.

bool `filterEnable`

Enable digital glitch filter.

bool `enableGeneralCall`

Enable general call address matching.

struct *_lpi2c_slave_config* `sclStall`

SCL stall enable options.

bool `ignoreAck`

Continue transfers after a NACK is detected.

bool `enableReceivedAddressRead`

Enable reading the address received address as the first byte of data.

uint32_t `sdaGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t `sclGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t `dataValidDelay_ns`

Width in nanoseconds of the data valid delay.

uint32_t `clockHoldTime_ns`

Width in nanoseconds of the clock hold time.

struct `_lpi2c_slave_transfer`

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event

Reason the callback is being invoked.

uint8_t receivedAddress

Matching address send by master.

uint8_t *data

Transfer buffer

size_t dataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct _lpi2c_slave_handle

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.29 LPSPI: Low Power Serial Peripheral Interface

2.30 LPSPI Peripheral driver

```
void LPSPI_MasterInit(LPSPI_Type *base, const lpspi_master_config_t *masterConfig, uint32_t  
srcClock_Hz)
```

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure *lpspi_master_config_t*.
- srcClock_Hz – Module source input clock in Hertz

```
void LPSPI_MasterGetDefaultConfig(lpspi_master_config_t *masterConfig)
```

Sets the *lpspi_master_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;  
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to *lpspi_master_config_t* structure

```
void LPSPI_SlaveInit(LPSPI_Type *base, const lpspi_slave_config_t *slaveConfig)
```

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure *lpspi_slave_config_t*.

```
void LPSPI_SlaveGetDefaultConfig(lpspi_slave_config_t *slaveConfig)
```

Sets the *lpspi_slave_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;  
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to lpspi_slave_config_t structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

```
static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)
```

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

```
static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)
```

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag | kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

```
static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)
```

```
static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, *lpspi_which_pcs_t* select)

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.
- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinuous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz, uint32_t *tcrPrescaleValue)

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale `tcrPrescaleValue` parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.

- `tcrPrescaleValue` – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t
                               whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- `base` – LPSPI peripheral address.
- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- `base` – LPSPI peripheral address.
- `data` – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- `base` – LPSPI peripheral address.
- `dummyData` – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                     lpspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – LPSPI handle pointer to `lpspi_master_handle_t`.
- `callback` – DSPI callback.
- `userData` – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, `size_t` *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

`void` LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

`void` LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- `base` – LPSPi peripheral address.
- `handle` – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

```
void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                   lpspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the LPSPi slave handle.

This function initializes the LPSPi handle, which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Parameters

- `base` – LPSPi peripheral address.
- `handle` – LPSPi handle pointer to `lpspi_slave_handle_t`.
- `callback` – DSPI callback.
- `userData` – callback function parameter.

```
status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                       lpspi_transfer_t *transfer)
```

LPSPi slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- `base` – LPSPi peripheral address.
- `handle` – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- `transfer` – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

```
status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, lpspi_slave_handle_t *handle, size_t
                                   *count)
```

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- `base` – LPSPi peripheral address.
- `handle` – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

```
void LPSPI_SlaveTransferAbort(LPSPI_Type *base, lpspi_slave_handle_t *handle)
```

LPSPi slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, lpspi_slave_handle_t *handle)`
LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)`
Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

`void LPSPI_DriverIRQHandler(uint32_t instance)`
LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

`FSL_LPSPI_DRIVER_VERSION`
LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator `kStatus_LPSPI_Busy`
LPSPI transfer is busy.

enumerator `kStatus_LPSPI_Error`
LPSPI driver error.

enumerator `kStatus_LPSPI_Idle`
LPSPI is idle.

enumerator `kStatus_LPSPI_OutOfRange`
LPSPI transfer out Of range.

enumerator `kStatus_LPSPI_Timeout`
LPSPI timeout polling status flags.

`enum _lpspi_flags`
LPSPI status flags in SPIx_SR register.

Values:

enumerator `kLPSPI_TxDataRequestFlag`
Transmit data flag

enumerator kLPSPI_RxDataReadyFlag
Receive data flag

enumerator kLPSPI_WordCompleteFlag
Word Complete flag

enumerator kLPSPI_FrameCompleteFlag
Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag
Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag
Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag
Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag
Data Match flag

enumerator kLPSPI_ModuleBusyFlag
Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPi_TxDmaEnable

Transmit data DMA enable

enumerator kLPSPi_RxDmaEnable

Receive data DMA enable

enum _lpspi_master_slave_mode

LPSPi master or slave mode configuration.

Values:

enumerator kLPSPi_Master

LPSPi peripheral operates in master mode.

enumerator kLPSPi_Slave

LPSPi peripheral operates in slave mode.

enum _lpspi_which_pcs_config

LPSPi Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPi_Pcs0

PCS[0]

enumerator kLPSPi_Pcs1

PCS[1]

enumerator kLPSPi_Pcs2

PCS[2]

enumerator kLPSPi_Pcs3

PCS[3]

enum _lpspi_pcs_polarity_config

LPSPi Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPi_PcsActiveHigh

PCS Active High (idles low)

enumerator kLPSPi_PcsActiveLow

PCS Active Low (idles high)

enum _lpspi_pcs_polarity

LPSPi Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPi_Pcs0ActiveLow

Pcs0 Active Low (idles high).

enumerator kLPSPi_Pcs1ActiveLow

Pcs1 Active Low (idles high).

enumerator kLPSPi_Pcs2ActiveLow

Pcs2 Active Low (idles high).

enumerator kLPSPi_Pcs3ActiveLow

Pcs3 Active Low (idles high).

enumerator kLPSPi_PcsAllActiveLow

Pcs0 to Pcs5 Active Low (idles high).

enum `_lpspi_clock_polarity`

LPSPI clock polarity configuration.

Values:

enumerator `kLPSPi_ClockPolarityActiveHigh`

CPOL=0. Active-high LPSPi clock (idles low)

enumerator `kLPSPi_ClockPolarityActiveLow`

CPOL=1. Active-low LPSPi clock (idles high)

enum `_lpspi_clock_phase`

LPSPi clock phase configuration.

Values:

enumerator `kLPSPi_ClockPhaseFirstEdge`

CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator `kLPSPi_ClockPhaseSecondEdge`

CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum `_lpspi_shift_direction`

LPSPi data shifter direction options.

Values:

enumerator `kLPSPi_MsbFirst`

Data transfers start with most significant bit.

enumerator `kLPSPi_LsbFirst`

Data transfers start with least significant bit.

enum `_lpspi_host_request_select`

LPSPi Host Request select configuration.

Values:

enumerator `kLPSPi_HostReqExtPin`

Host Request is an ext pin.

enumerator `kLPSPi_HostReqInternalTrigger`

Host Request is an internal trigger.

enum `_lpspi_match_config`

LPSPi Match configuration options.

Values:

enumerator `kLPSPi_MatchDisabled`

LPSPi Match Disabled.

enumerator `kLPSPi_1stWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_1stWordEqualsM0and2ndWordEqualsM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0andNxtWordEqualsM1`

LPSPi Match Enabled.

enumerator kLPSI_1stWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enumerator kLPSI_AnyWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enum _lpspi_pin_config
LPSPi pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPi SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPi SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPi SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPi SDO input, SDI output.

enum _lpspi_data_out_config
LPSPi data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width
LPSPi transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type
LPSPi delay type selection.

Values:

enumerator kLPSPI_PcsToSck
PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs
Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer
Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPi master transfer configFlags.

Values:

enumerator kLPSPi_MasterPcs0

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS0 signal

enumerator kLPSPi_MasterPcs1

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS1 signal

enumerator kLPSPi_MasterPcs2

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS2 signal

enumerator kLPSPi_MasterPcs3

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS3 signal

enumerator kLPSPi_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPi_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_MasterByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPi slave transfer configFlags.

Values:

enumerator kLPSPi_SlavePcs0

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS0 signal

enumerator kLPSPi_SlavePcs1

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS1 signal

enumerator kLPSPi_SlavePcs2

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS2 signal

enumerator kLPSPi_SlavePcs3

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS3 signal

enumerator kLPSPi_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.

enum `_lpspi_transfer_state`

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator `kLPSPi_Idle`

Nothing in the transmitter/receiver.

enumerator `kLPSPi_Busy`

Transfer queue is not finished.

enumerator `kLPSPi_Error`

Transfer error.

typedef enum `_lpspi_master_slave_mode` `lpspi_master_slave_mode_t`

LPSPI master or slave mode configuration.

typedef enum `_lpspi_which_pcs_config` `lpspi_which_pcs_t`

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum `_lpspi_pcs_polarity_config` `lpspi_pcs_polarity_config_t`

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum `_lpspi_clock_polarity` `lpspi_clock_polarity_t`

LPSPI clock polarity configuration.

typedef enum `_lpspi_clock_phase` `lpspi_clock_phase_t`

LPSPI clock phase configuration.

typedef enum `_lpspi_shift_direction` `lpspi_shift_direction_t`

LPSPI data shifter direction options.

typedef enum `_lpspi_host_request_select` `lpspi_host_request_select_t`

LPSPI Host Request select configuration.

typedef enum `_lpspi_match_config` `lpspi_match_config_t`

LPSPI Match configuration options.

typedef enum `_lpspi_pin_config` `lpspi_pin_config_t`

LPSPI pin (SDO and SDI) configuration.

typedef enum `_lpspi_data_out_config` `lpspi_data_out_config_t`

LPSPI data output configuration.

typedef enum `_lpspi_transfer_width` `lpspi_transfer_width_t`

LPSPI transfer width configuration.

typedef enum `_lpspi_delay_type` `lpspi_delay_type_t`

LPSPI delay type selection.

typedef struct `_lpspi_master_config` `lpspi_master_config_t`

LPSPI master configuration structure.

typedef struct `_lpspi_slave_config` `lpspi_slave_config_t`

LPSPI slave configuration structure.

typedef struct `_lpspi_master_handle` `lpspi_master_handle_t`

Forward declaration of the `_lpspi_master_handle` typedefs.

typedef struct `_lpspi_slave_handle` `lpspi_slave_handle_t`

Forward declaration of the `_lpspi_slave_handle` typedefs.

```
typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, lpspi_master_handle_t
*handle, status_t status, void *userData)
```

Master completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI master.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, lpspi_slave_handle_t *handle,
status_t status, void *userData)
```

Slave completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI slave.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef struct _lpspi_transfer lpspi_transfer_t
```

LPSPI master/slave transfer structure.

```
volatile uint8_t g_lpspiDummyData[]
```

Global variable for dummy data value setting.

```
LPSPI_DUMMY_DATA
```

LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
LPSPI_MASTER_PCS_SHIFT
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_MASTER_PCS_MASK
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_SHIFT
```

LPSPI slave PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_MASK
```

LPSPI slave PCS shift macro , internal used.

```
struct _lpspi_master_config
```

#include <fsl_lpspi.h> LPSPI master configuration structure.

Public Members

uint32_t baudRate

Baud Rate for LPSPI.

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

bool enableInputDelay

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct __lpspi_slave_config

#include <fsl_lpspi.h> LPSPI slave configuration structure.

Public Members

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct *_lpspi_transfer*

#include <fsl_lpspi.h> LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from *_lpspi_transfer_config_flag_for_master* if the transfer is used for master or *_lpspi_transfer_config_flag_for_slave* enumeration if the transfer is used for slave.

struct *_lpspi_master_handle*

#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool writeTcrInIsr

A flag that whether should write TCR in ISR.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile bool isTxMask

A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame

Number of bytes in each frame

volatile uint16_t frameSize

Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

volatile uint8_t bytesEachWrite
Bytes for each write TDR.

volatile uint8_t bytesEachRead
Bytes for each read RDR.

const uint8_t *volatile txData
Send buffer.

uint8_t *volatile rxData
Receive buffer.

volatile size_t txRemainingByteCount
Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
Read RDR register remaining times.

uint32_t totalByteCount
Number of transfer bytes

uint32_t txBuffIfNull
Used if the txData is NULL.

volatile uint8_t state
LPSPI transfer state , _lpspi_transfer_state.

lpspi_master_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

struct _lpspi_slave_handle
#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
A flag that whether should byte swap.

volatile uint8_t fifoSize
FIFO dataSize.

volatile uint8_t rxWatermark
Rx watermark.

volatile uint8_t bytesEachWrite
Bytes for each write TDR.

volatile uint8_t bytesEachRead
Bytes for each read RDR.

const uint8_t *volatile txData
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

`volatile uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

2.31 LPSPI eDMA Driver

`FSL_LPSPI_EDMA_DRIVER_VERSION`
LPSPI EDMA driver version.

`DMA_MAX_TRANSFER_COUNT`
DMA max transfer size.

`typedef struct _lpspi_master_edma_handle lpspi_master_edma_handle_t`
Forward declaration of the `_lpspi_master_edma_handle` typedefs.

`typedef struct _lpspi_slave_edma_handle lpspi_slave_edma_handle_t`
Forward declaration of the `_lpspi_slave_edma_handle` typedefs.

`typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_master_edma_handle_t *handle, status_t status, void *userData)`
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPI_Type *base,  
lpspi_slave_edma_handle_t *handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

LPSPI peripheral base address.

Param handle

Pointer to the handle for the LPSPI slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
void LPSPI_MasterTransferCreateHandleEDMA(LP_SPI_Type *base, lpspi_master_edma_handle_t  
*handle, lpspi_master_edma_transfer_callback_t  
callback, void *userData, edma_handle_t  
*edmaRxRegToRxDataHandle, edma_handle_t  
*edmaTxDataToTxRegHandle)
```

Initializes the LPSPI master eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that the LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPI callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

```
status_t LPSPI_MasterTransferEDMA(LP_SPI_Type *base, lpspi_master_edma_handle_t *handle,  
lpspi_transfer_t *transfer)
```

LPSPI master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- configFlags – transfer configuration flags. `_lpspi_transfer_config_flag_for_master`.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

`status_t` LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure, config field is not used.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.
- `kStatus_InvalidArgument` – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

`void` LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, size_t *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of *status_t*.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for `edmaRxRegToRxDataHandle` and Tx DMAMUX source for `edmaTxDataToTxRegHandle`. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for `edmaRxRegToRxDataHandle`.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to `lpspi_slave_edma_handle_t`.
- callback – LPSPI callback.
- userData – callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size

should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle)`

LPSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.

`status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle, size_t *count)`

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of `status_t`.

`struct _lpspi_master_edma_handle`

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

`volatile bool isPcsContinuous`

Is PCS continuous in transfer.

`volatile bool isByteSwap`

A flag that whether should byte swap.

`volatile uint8_t fifoSize`

FIFO dataSize.

`volatile uint8_t rxWatermark`

Rx watermark.

`volatile uint8_t bytesEachWrite`

Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`volatile uint8_t bytesLastRead`
Bytes for last read RDR.

`volatile bool isThereExtraRxBytes`
Is there extra RX byte.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`edma_tcd_t *lastTimeTCD`
Pointer to the lastTime TCD

`bool isMultiDMATransmit`
Is there multi DMA transmit

`volatile uint8_t dmaTransmitTime`
DMA Transfer times.

`uint32_t lastTimeDataBytes`
DMA transmit last Time data Bytes

`uint32_t dataBytesEveryTime`
Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

`edma_transfer_config_t transferConfigRx`
Config of DMA rx channel.

`edma_transfer_config_t transferConfigTx`
Config of DMA tx channel.

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`uint32_t transmitCommand`
Used to write TCR for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

```

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
    Completion callback.

void *userData
    Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
    edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
    edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
    SoftwareTCD, internal used

```

struct `_lpspi_slave_edma_handle`
#include <fsl_lpspi_edma.h> LPSPI slave eDMA transfer handle structure used for transactional API.

Public Members

```

volatile bool isByteSwap
    A flag that whether should byte swap.

volatile uint8_t fifoSize
    FIFO dataSize.

volatile uint8_t rxWatermark
    Rx watermark.

volatile uint8_t bytesEachWrite
    Bytes for each write TDR.

volatile uint8_t bytesEachRead
    Bytes for each read RDR.

volatile uint8_t bytesLastRead
    Bytes for last read RDR.

volatile bool isThereExtraRxBytes
    Is there extra RX byte.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData
    Send buffer.

uint8_t *volatile rxData
    Receive buffer.

volatile size_t txRemainingByteCount
    Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
    Number of bytes remaining to receive.

```


`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state.

`uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_edma_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`edma_handle_t *edmaRxRegToRxDataHandle`
edma_handle_t handle point used for RxReg to RxData buff

`edma_handle_t *edmaTxDataToTxRegHandle`
edma_handle_t handle point used for TxData to TxReg

`edma_tcd_t lpspiSoftwareTCD[2]`
SoftwareTCD, internal used

2.32 LPTMR: Low-Power Timer

`void LPTMR_Init(LPTMR_Type *base, const lptmr_config_t *config)`
Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- `base` – LPTMR peripheral base address
- `config` – A pointer to the LPTMR configuration structure.

`void LPTMR_Deinit(LPTMR_Type *base)`
Gates the LPTMR clock.

Parameters

- `base` – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

```
static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
```

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the fsl_common.h to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

```
static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum __lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum __lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum __lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum __lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3

Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4

Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5

Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6

Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7

Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8

Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable
Timer interrupt enable

enum _lptmr_status_flags
List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag
Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t
LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t
LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t
LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t
LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

```
typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t
```

List of the LPTMR interrupts.

```
typedef enum _lptmr_status_flags lptmr_status_flags_t
```

List of the LPTMR status flags.

```
typedef struct _lptmr_config lptmr_config_t
```

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

```
static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)
```

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

```
struct _lptmr_config
```

#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

```
lptmr_timer_mode_t timerMode
```

Time counter mode or pulse counter mode

```
lptmr_pin_select_t pinSelect
```

LPTMR pulse input pin select; used only in pulse counter mode

```
lptmr_pin_polarity_t pinPolarity
```

LPTMR pulse input pin polarity; used only in pulse counter mode

```
bool enableFreeRunning
```

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

```
bool bypassPrescaler
```

True: bypass prescaler; false: use clock from prescaler

```
lptmr_prescaler_clock_select_t prescalerClockSource
```

LPTMR clock source

```
lptmr_prescaler_glitch_value_t value
```

Prescaler or glitch filter value

2.33 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.34 LPUART Driver

static inline void LPUART_SoftwareReset(LPUART_Type *base)

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- base – LPUART peripheral base address.

status_t LPUART_Init(LPUART_Type *base, const lpuart_config_t *config, uint32_t srcClock_Hz)

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

void LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

void LPUART_GetDefaultConfig(lpuart_config_t *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode

```
= kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits;
lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit;
lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1;
lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig =
kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;
```

Parameters

- config – Pointer to a configuration structure.

```
status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t
srcClock_Hz)
```

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not supported in the current clock source.
- kStatus_Success – Set baudrate succeeded.

```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – LPUART peripheral base address.
- enable – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t
address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.

- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

static inline void LPUART__EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

static inline void LPUART__SetRxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

static inline void LPUART__SetTxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART__TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in *lpuart_handle_t*.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART__GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators *_lpuart_flags*. To check for a specific status, compare the return value with enumerators in the *_lpuart_flags*. For example, to check whether the TX is empty:

```
if (kLPUART__TxDataRegEmptyFlag & LPUART__GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the *_lpuart_flags*.

`status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)`

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- `base` – LPUART peripheral base address.
- `mask` – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

`void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)`

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This example shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- `base` – LPUART peripheral base address.
- `mask` – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)`

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- `base` – LPUART peripheral base address.
- `mask` – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

`uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)`

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in

`_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);  
  
if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)  
{  
    ...  
}
```

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

`static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)`

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

`static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)`

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `STAT[TDRE]`, to generate DMA requests.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – True to enable, false to disable.

`static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)`

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, `STAT[RDRF]`, to generate DMA requests.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – True to enable, false to disable.

`uint32_t LPUART_GetInstance(LPUART_Type *base)`

Get the LPUART instance from peripheral base address.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART instance.

```
static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)
```

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

```
static inline uint8_t LPUART_ReadByte(LPUART_Type *base)
```

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

```
static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

`void LPUART_SendAddress(LPUART_Type *base, uint8_t address)`

Transmit an address frame in 9-bit data mode.

Parameters

- `base` – LPUART peripheral base address.
- `address` – LPUART slave address.

`status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)`

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)`

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)`

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.

- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)`

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`void LPUART_TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_callback_t callback, void *userData)`

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t  
                                     *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

```
void LPUART_TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.

- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBytes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_t *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter kStatus_UART_RxIdle. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to xfer->data, which returns with the parameter receivedBytes set to 5. For the remaining 5 bytes, the newly arrived data is saved from xfer->data[5]. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see `uart_transfer_t`.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void LPUART_TransferAbortReceive(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

`status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)`

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

`void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)`

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

`void LPUART_DriverIRQHandler(uint32_t instance)`

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- `instance` – LPUART instance.

`FSL_LPUART_DRIVER_VERSION`

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator `kStatus_LPUART_TxBusy`

TX busy

enumerator `kStatus_LPUART_RxBusy`

RX busy

enumerator `kStatus_LPUART_TxIdle`

LPUART transmitter is idle.

enumerator `kStatus_LPUART_RxIdle`

LPUART receiver is idle.

enumerator `kStatus_LPUART_TxWatermarkTooLarge`

TX FIFO watermark too large

enumerator `kStatus_LPUART_RxWatermarkTooLarge`

RX FIFO watermark too large

enumerator `kStatus_LPUART_FlagCannotClearManually`

Some flag can't manually clear

enumerator `kStatus_LPUART_Error`

Error happens on LPUART.

enumerator `kStatus_LPUART_RxRingBufferOverrun`

LPUART RX software ring buffer overrun.

enumerator `kStatus_LPUART_RxHardwareOverrun`

LPUART RX receiver overrun.

enumerator `kStatus_LPUART_NoiseError`

LPUART noise error.

enumerator `kStatus_LPUART_FramingError`

LPUART framing error.

enumerator `kStatus_LPUART_ParityError`

LPUART parity error.

enumerator `kStatus_LPUART_BaudrateNotSupport`

Baudrate is not support in current clock source

enumerator `kStatus_LPUART_IdleLineDetected`

IDLE flag.

enumerator `kStatus_LPUART_Timeout`

LPUART times out.

enum `_lpuart_parity_mode`

LPUART parity mode.

Values:

enumerator `kLPUART_ParityDisabled`

Parity disabled

enumerator `kLPUART_ParityEven`

Parity enabled, type even, bit setting: PE|PT = 10

enumerator `kLPUART_ParityOdd`

Parity enabled, type odd, bit setting: PE|PT = 11

enum `_lpuart_data_bits`

LPUART data bits count.

Values:

enumerator `kLPUART_EightDataBits`

Eight data bit

enumerator `kLPUART_SevenDataBits`

Seven data bit

enum `_lpuart_stop_bit_count`

LPUART stop bit count.

Values:

enumerator `kLPUART_OneStopBit`

One stop bit

enumerator `kLPUART_TwoStopBit`

Two stop bits

enum `_lpuart_transmit_cts_source`

LPUART transmit CTS source.

Values:

enumerator `kLPUART_CtsSourcePin`

CTS resource is the LPUART_CTS pin.

enumerator `kLPUART_CtsSourceMatchResult`

CTS resource is the match result.

enum `_lpuart_transmit_cts_config`

LPUART transmit CTS configure.

Values:

enumerator `kLPUART_CtsSampleAtStart`

CTS input is sampled at the start of each character.

enumerator `kLPUART_CtsSampleAtIdle`

CTS input is sampled when the transmitter is idle

enum `_lpuart_idle_type_select`

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator `kLPUART_IdleTypeStartBit`

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum __lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128

the number of idle characters.

enum __lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable

Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable

Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable

Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable

Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable

Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable

Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable

Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable

Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable

Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t

LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t

LPUART transmit CTS configure.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t

LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct *_lpuart_config* lpuart_config_t

LPUART configuration structure.

typedef struct *_lpuart_transfer* lpuart_transfer_t

LPUART transfer structure.

typedef struct *_lpuart_handle* lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle, status_t status, void *userData)

LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES

Retry times for waiting flag.

struct __lpuart_config

#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps

LPUART baud rate

lpuart_parity_mode_t parityMode

Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount

Data bits count, eight (default), seven

bool isMsb

Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount

Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark

TX FIFO watermark

uint8_t rxFifoWatermark

RX FIFO watermark

bool enableRxRTS

RX RTS enable

bool enableTxCTS

TX CTS enable

lpuart_transmit_cts_source_t txCtsSource

TX CTS source

lpuart_transmit_cts_config_t txCtsConfig

TX CTS configure

lpuart_idle_type_select_t rxIdleType

RX IDLE type.

lpuart_idle_config_t rxIdleConfig

RX IDLE configuration.

bool enableTx

Enable TX

bool enableRx

Enable RX

bool swapTxdRxd

Swap TXD and RXD pins

struct __lpuart_transfer

#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct __lpuart__handle

#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize

Size of the remaining data to send.

size_t txDataSizeAll

Size of the data to send out.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t rxDataSizeAll

Size of the data to receive.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback

Callback function.

void *userData

LPUART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state.

bool isSevenDataBits

Seven data bits flag.

bool is16bitData

16bit data bits flag, only used for 9bit or 10bit data

union __unnamed24__

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

uint16_t *rxData16

The buffer to receive data.


```
const uint8_t *txData
    The buffer of data to be sent.
const uint16_t *txData16
    The buffer of data to be sent.
union __unnamed26__
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
const uint16_t *volatile txData16
    Address of remaining data to send.
union __unnamed28__
```

Public Members

```
uint8_t *volatile rxData
    Address of remaining data to receive.
uint16_t *volatile rxData16
    Address of remaining data to receive.
union __unnamed30__
```

Public Members

```
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
uint16_t *rxRingBuffer16
    Start address of the receiver ring buffer.
```

2.35 LPUART eDMA Driver

```
void LPUART__TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
    lpuart_edma_transfer_callback_t callback, void
    *userData, edma_handle_t *txEdmaHandle,
    edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.

- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

status_t LPUART_SendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

status_t LPUART_ReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.
- xfer – LPUART eDMA transfer structure, see *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others fail.
- kStatus_LPUART_RxBusy – Previous transfer ongoing.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortSendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

FSL_LPUART_EDMA_DRIVER_VERSION

LPUART EDMA driver version.

typedef struct *lpuart_edma_handle* lpuart_edma_handle_t

typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *status_t* status, void *userData)

LPUART transfer callback function.

```
struct _lpuart_edma_handle
    #include <fsl_lpuart_edma.h> LPUART eDMA handle.
```

Public Members

```
lpuart_edma_transfer_callback_t callback
    Callback function.

void *userData
    LPUART callback function parameter.

size_t rxDataSizeAll
    Size of the data to receive.

size_t txDataSizeAll
    Size of the data to send out.

edma_handle_t *txEdmaHandle
    The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
    The eDMA RX channel used.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

volatile uint8_t txState
    TX transfer state.

volatile uint8_t rxState
    RX transfer state
```

2.36 MCX_CMC: Core Mode Controller Driver

```
enum _cmc_power_mode_protection
    CMC power mode Protection enumeration.

    Values:

    enumerator kCMC_AllowDeepSleepMode
        Allow Deep Sleep mode.

    enumerator kCMC_AllowPowerDownMode
        Allow Power Down mode.

    enumerator kCMC_AllowDeepPowerDownMode
        Allow Deep Power Down mode.

    enumerator kCMC_AllowAllLowPowerModes
        Allow Deep Sleep, Power Down, Deep Power Down modes.

enum _cmc_wakeup_sources
    Wake up sources from the previous low power mode entry.
```

Note: kCMC_WakeupFromUsbFs, kCMC_WakeupFromITRC, kCMC_WakeupFromCpu1 are not supported in MCXA family.

Values:

enumerator kCMC_WakeupFromResetInterruptOrPowerDown

Wakeup source is reset interrupt, or wake up from Deep Power Down.

enumerator kCMC_WakeupFromDebugReuqest

Wakeup source is debug request.

enumerator kCMC_WakeupFromInterrupt

Wakeup source is interrupt.

enumerator kCMC_WakeupFromDMAWakeup

Wakeup source is DMA Wakeup.

enumerator kCMC_WakeupFromWUURequest

Wakeup source is WUU request.

enumerator kCMC_WakeupFromUsbFs

Wakeup source is USBFS(USB0).

enumerator kCMC_WakeupFromITRC

Wakeup source is ITRC.

enumerator kCMC_WakeupFromCpu1

Wakeup source is CPU1.

enum _cmc_system_reset_interrupt_enable

System Reset Interrupt enable enumeration.

Values:

enumerator kCMC_PinResetInterruptEnable

Pin Reset interrupt enable.

enumerator kCMC_DAPResetInterruptEnable

DAP Reset interrupt enable.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable

Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kCMC_WindowedWatchdog0ResetInterruptEnable

Windowed Watchdog 0 reset interrupt enable.

enumerator kCMC_SoftwareResetInterruptEnable

Software Reset interrupt enable.

enumerator kCMC_LockupResetInterruptEnable

Lockup Reset interrupt enable.

enumerator kCMC_CodeWatchDog0ResetInterruptEnable

Code watchdog 0 reset interrupt enable.

enum _cmc_system_reset_interrupt_flag

CMC System Reset Interrupt Status flag.

Values:

enumerator kCMC_PinResetInterruptFlag

Pin Reset interrupt flag.

enumerator kCMC_DAPResetInterruptFlag

DAP Reset interrupt flag.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetFlag

Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kCMC_WindowedWatchdog0ResetInterruptFlag

Windowed Watchdog 0 Reset interrupt flag.

enumerator kCMC_SoftwareResetInterruptFlag

Software Reset interrupt flag.

enumerator kCMC_LockupResetInterruptFlag

Lock up Reset interrupt flag.

enumerator kCMC_CodeWatchdog0ResetInterruptFlag

Code watchdog0 reset interrupt flag.

enum _cmc_system_sram_arrays

CMC System SRAM arrays low power mode enable enumeration.

Values:

enumerator kCMC_RAMX0

Used to control RAMX0.

enumerator kCMC_RAMX1

Used to control RAMX1.

enumerator kCMC_RAMX2

Used to control RAMX2.

enumerator kCMC_RAMB

Used to control RAMB.

enumerator kCMC_RAMC0

Used to control RAMC0.

enumerator kCMC_RAMC1

Used to control RAMC1.

enumerator kCMC_RAMD0

Used to control RAMD0.

enumerator kCMC_RAMD1

Used to control RAMD1.

enumerator kCMC_RAME0

Used to control RAME0.

enumerator kCMC_RAME1

Used to control RAME1.

enumerator kCMC_RAMF0

Used to control RAMF0.

enumerator kCMC_RAMF1

Used to control RAMF1.

enumerator kCMC_RAMG0_RAMG1

Used to control RAMG0 and RAMG1.

enumerator kCMC_RAMG2_RAMG3

Used to control RAMG2 and RAMG3.

enumerator kCMC_RAMH0_RAMH1

Used to control RAMH0 and RAMH1.

enumerator kCMC_LPCAC

Used to control LPCAC.

enumerator kCMC_DMA0_DMA1_PKC

Used to control DMA0, DMA1 and PKC.

enumerator kCMC_USB0

Used to control USB0.

enumerator kCMC_PQ

Used to control PQ.

enumerator kCMC_CAN0_CAN1_ENET_USB1

Used to control CAN0, CAN1, ENET, USB1.

enumerator kCMC_FlexSPI

Used to control FlexSPI.

enumerator kCMC_AllSramArrays

Mask of all System SRAM arrays.

enum _cmc_system_reset_sources

System reset sources enumeration.

Values:

enumerator kCMC_WakeUpReset

The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kCMC_PORReset

The reset caused by power on reset detection logic.

enumerator kCMC_VDReset

The reset caused by an LVD or HVD.

enumerator kCMC_WarmReset

The last reset source is a warm reset source.

enumerator kCMC_FatalReset

The last reset source is a fatal reset source.

enumerator kCMC_PinReset

The reset caused by the RESET_b pin.

enumerator kCMC_DAPReset

The reset caused by a reset request from the Debug Access port.

enumerator kCMC_ResetTimeout

The reset caused by a timeout or other error condition in the system reset generation.

enumerator kCMC_LowPowerAcknowledgeTimeoutReset

The reset caused by a timeout in low power mode entry logic.

enumerator kCMC_SCGRReset

The reset caused by a loss of clock or loss of lock event in the SCG.

enumerator kCMC_WindowedWatchdog0Reset

The reset caused by the Windowed WatchDog 0 timeout.

enumerator kCMC_SoftwareReset

The reset caused by a software reset request.

enumerator kCMC_LockUoReset

The reset caused by the ARM core indication of a LOCKUP event.

enumerator kCMC_CodeWatchDog0Reset

The reset caused by the code watchdog0 fault.

enumerator kCMC_JTAGSystemReset

The reset caused by a JTAG system reset request.

enum _cmc_core_clock_gate_status

Indicate the core clock was gated.

Values:

enumerator kCMC_CoreClockNotGated

Core clock not gated.

enumerator kCMC_CoreClockGated

Core clock was gated due to low power mode entry.

enum _cmc_clock_mode

CMC clock mode enumeration.

Values:

enumerator kCMC_GateNoneClock

No clock gating.

enumerator kCMC_GateCoreClock

Gate Core clock.

enumerator kCMC_GateCorePlatformClock

Gate Core clock and platform clock.

enumerator kCMC_GateAllSystemClocks

Gate all System clocks, without getting core entering into low power mode.

enumerator kCMC_GateAllSystemClocksEnterLowPowerMode

Gate all System clocks, with core entering into low power mode.

enum _cmc_low_power_mode

CMC power mode enumeration.

Values:

enumerator kCMC_ActiveOrSleepMode

Select Active/Sleep mode.

enumerator kCMC_DeepSleepMode

Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator kCMC_PowerDownMode

Select Power Down mode when a core executes WFI or WFE instruction.

enumerator kCMC_DeepPowerDown

Select Deep Power Down mode when a core executes WFI or WFE instruction.

typedef enum _cmc_core_clock_gate_status cmc_core_clock_gate_status_t

Indicate the core clock was gated.

typedef enum _cmc_clock_mode cmc_clock_mode_t

CMC clock mode enumeration.

typedef enum *_cmc_low_power_mode* cmc_low_power_mode_t

CMC power mode enumeration.

typedef struct *_cmc_reset_pin_config* cmc_reset_pin_config_t

CMC reset pin configuration.

typedef struct *_cmc_power_domain_config* cmc_power_domain_config_t

power mode configuration for each power domain.

FSL_CMC_DRIVER_VERSION

CMC driver version 2.3.0.

CMC_BLR_LOCK_FIELD_WIDTH

CMC_BLR_LOCK_IDX_MASK(index)

CMC_BLR_LOCK_IDX_SHIFT(index)

CMC_BLR_LOCK_IDX(index, value)

void CMC_SetClockMode(CMC_Type *base, *cmc_clock_mode_t* mode)

Sets clock mode.

This function config the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

Parameters

- base – CMC peripheral base address.
- mode – System clock mode.

static inline void CMC_LockClockModeSetting(CMC_Type *base)

Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- base – CMC peripheral base address.

static inline *cmc_core_clock_gate_status_t* CMC_GetCoreClockGatedStatus(CMC_Type *base)

Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void CMC_ClearCoreClockGatedStatus(CMC_Type *base)

Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline uint8_t CMC_GetWakeupSource(CMC_Type *base)

Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See `_cmc_wakeup_sources` for details.

```
static inline cmc_clock_mode_t CMC_GetClockMode(CMC_Type *base)
```

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Low Power status.

```
static inline uint32_t CMC_GetSystemResetStatus(CMC_Type *base)
```

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- base – CMC peripheral base address.

Returns

The most recent system reset status. See `_cmc_system_reset_sources` for details.

```
static inline uint32_t CMC_GetStickySystemResetStatus(CMC_Type *base)
```

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See `_cmc_system_reset_sources` for details.

```
static inline void CMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)
```

Clears the sticky system reset status flags.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the sticky system reset status to be cleared.

```
static inline uint8_t CMC_GetResetCount(CMC_Type *base)
```

Gets the number of reset sequences completed since the last Cold Reset.

Parameters

- base – CMC peripheral base address.

Returns

The number of reset sequences.

```
void CMC_SetPowerModeProtection(CMC_Type *base, uint32_t allowedModes)
```

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power doamin.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowSleepMode | kCMC_AllowDeepSleepMode)`. To allow all low power modes, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowAllLowPowerModes)`.

Parameters

- `base` – CMC peripheral base address.
- `allowedModes` – Bitmaps of the allowed power modes. See `_cmc_power_mode_protection` for details.

`static inline void CMC_LockPowerModeProtectionSetting(CMC_Type *base)`

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- `base` – CMC peripheral base address.

`static inline void CMC_SetGlobalPowerMode(CMC_Type *base, cmc_low_power_mode_t lowPowerMode)`

Config the same lowPower mode for all power domain.

This function configures the same low power mode for MAIN power domain and WAKE power domain.

Parameters

- `base` – CMC peripheral base address.
- `lowPowerMode` – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

`static inline void CMC_SetMAINPowerMode(CMC_Type *base, cmc_low_power_mode_t lowPowerMode)`

Configures entry into low power mode for the MAIN Power domain.

This function configures the low power mode for the MAIN power domain, when the core executes WFI/WFE instruction. The available lowPower modes are defined in the `cmc_low_power_mode_t`.

Parameters

- `base` – CMC peripheral base address.
- `lowPowerMode` – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

`static inline cmc_low_power_mode_t CMC_GetMAINPowerMode(CMC_Type *base)`

Gets the power mode of the MAIN Power domain.

Parameters

- `base` – CMC peripheral base address.

Returns

The power mode of MAIN Power domain. See `cmc_low_power_mode_t` for details.

`void CMC_ConfigResetPin(CMC_Type *base, const cmc_reset_pin_config_t *config)`

Configure reset pin.

This function configures reset pin. When enabled, the low power filter is enabled in both Active and Low power modes, the reset filter is only enabled in Active mode. When both filters are enabled, they operate in series.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the reset pin config structure.

static inline void CMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See `_cmc_system_reset_interrupt_enable` for details.

static inline void CMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See `_cmc_system_reset_interrupt_enable` for details.

static inline uint32_t CMC_GetSystemResetInterruptFlags(CMC_Type *base)

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns

System reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

static inline void CMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- base – CMC peripheral base address.
- mask – System Reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

static inline void CMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)

Enable/Disable Non maskable Pin interrupt.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Non maskable pin interrupt. true - enable Non-maskable pin interrupt. false - disable Non-maskable pin interrupt.

static inline uint8_t CMC_GetISPMODEPinLogic(CMC_Type *base)

Gets the logic state of the ISPMODE_n pin.

This function returns the logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

static inline void CMC_ClearISPMODEPinLogic(CMC_Type *base)

Clears ISPMODE_n pin state.

Parameters

- base – CMC peripheral base address.

static inline void CMC_ForceBootConfiguration(CMC_Type *base, bool assert)

Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Confign pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.

static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base)

Gets the status information written by the BootROM.

Parameters

- base – CMC peripheral base address.

Returns

The status information written by the BootROM.

static inline void CMC_SetBootRomStatus(CMC_Type *base, uint32_t statValue)

Sets the bootROM status value.

Note: This function is useful when result of CMC_CheckBootRomRegisterWrittable() is true.

Parameters

- base – CMC peripheral base address.
- stat – The state value to set.

static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base, uint8_t index)

Gets the information written by the BootROM.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Returns

The status information written by the BootROM.

static inline void CMC_WriteBootRomStatusReg(CMC_Type *base, uint8_t index, uint32_t value)
Writes value to BootROM status register, in this way, BootROM status registers are used as general purpose register.

Note: Value in BootROM status registers are reset in cold reset.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.
- value – Value to write.

static inline void CMC_LockWriteOperationToBootRomStatusReg(CMC_Type *base, uint8_t index)

Lock write operation to BootROM status register and BootROM Lock register.

Note: If locked, BootROM status register cannot be written.

Note: Once locked, only cold reset can reset related register.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

static inline bool CMC_CheckBootRomStatusRegWriteLocked(CMC_Type *base, uint8_t index)
Check if BootROM status register can be written.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Return values

- true – The selected BootRom status register is locked and cannot be written.
- false – The selected BootRom Status register is unlocked and cannot be written.

void CMC_PowerOffSRAMAllMode(CMC_Type *base, uint32_t mask)
Power off the selected system SRAM always.

Note: This function power off the selected system SRAM always. The SRAM arrays should not be accessed while they are shut down. SRAM array contents are not retained if they are powered off.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.

- mask – Bitmap of the SRAM arrays to be powered off all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMAllMode(CMC_Type *base, uint32_t mask)

Power on SRAM during all mode.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered on all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

void CMC_PowerOffSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)

Power off the selected system SRAM during low power modes only.

This function power off the selected system SRAM only during low power mode. SRAM array contents are not retained if they are power off.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be power off during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)

Power on the selected system SRAM during low power modes only.

This function power on the selected system SRAM. The SRAM array contents are retained in low power modes.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be power on during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

void CMC_ConfigFlashMode(CMC_Type *base, bool wake, bool doze, bool disable)

Configs the low power mode of the on-chip flash memory.

This function configs the low power mode of the on-chip flash memory.

Parameters

- base – CMC peripheral base address.
- wake – true: Flash will exit low power state during the flash memory accesses. false: No effect.
- doze – true: Flash is disabled while core is sleeping false: No effect.
- disable – true: Flash memory is placed in low power state. false: No effect.

static inline void CMC_EnableDebugOperation(CMC_Type *base, bool enable)

Enables/Disables debug Operation when the core sleep.

This function configs what happens to debug when core sleeps.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Debug when Core is sleeping. true - Debug remains enabled when the core is sleeping. false - Debug is disabled when the core is sleeping.

`void CMC_PreEnterLowPowerMode(void)`

Prepares to enter low power modes.

This function should be called before entering low power modes.

`void CMC_PostExitLowPowerMode(void)`

Recovers after wake up from low power modes.

This function should be called after wake up from low power modes. This function should be used with `CMC_PreEnterLowPowerMode()`

`void CMC_GlobalEnterLowPowerMode(CMC_Type *base, cmc_low_power_mode_t lowPowerMode)`

Configures the entry into the same low power mode for each power domains.

This function provides the feature to entry into the same low power mode for each power domains. Before invoking this function, please ensure the selected power mode have been allowed.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The low power mode to be entered. See `cmc_low_power_mode_t` for the details.

`void CMC_EnterLowPowerMode(CMC_Type *base, const cmc_power_domain_config_t *config)`

Configures the entry into different low power modes for each power domains.

This function provides the feature to entry into different low power modes for each power domains. Before invoking this function please ensure the selected modes are allowed.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the `cmc_power_domain_config_t` structure.

`bool lowpowerFilterEnable`

Low Power Filter enable.

`bool resetFilterEnable`

Reset Filter enable.

`uint8_t resetFilterWidth`

Width of the Reset Filter.

`cmc_clock_mode_t clock_mode`

Clock mode for each power domain.

`cmc_low_power_mode_t main_domain`

The low power mode of the MAIN power domain.

`struct _cmc_reset_pin_config`

`#include <fsl_cmc.h>` CMC reset pin configuration.

`struct _cmc_power_domain_config`

`#include <fsl_cmc.h>` power mode configuration for each power domain.

2.37 MU: Messaging Unit

uint32_t MU_GetInstance(MU_Type *base)

Get the MU instance index.

Parameters

- base – MU peripheral base address.

Returns

MU instance index.

void MU_Init(MU_Type *base)

Initializes the MU module.

This function enables the MU clock only.

Parameters

- base – MU peripheral base address.

void MU_Deinit(MU_Type *base)

De-initializes the MU module.

This function disables the MU clock only.

Parameters

- base – MU peripheral base address.

static inline void MU_SendMsgNonBlocking(MU_Type *base, uint32_t regIndex, uint32_t msg)

Writes a message to the TX register.

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { } Wait for TX0 register empty.  
MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG_VAL); Write message to the TX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – TX register index, see `mu_msg_reg_index_t`.
- msg – Message to send.

status_t MU_SendMsg(MU_Type *base, uint32_t regIndex, uint32_t msg)

Blocks to send a message.

This function waits until the TX register is empty and sends the message. If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and returns `kStatus_Timeout`.

Parameters

- base – MU peripheral base address.
- regIndex – MU message register, see `mu_msg_reg_index_t`.
- msg – Message to send.

Return values

- `kStatus_Success` – Message sent successfully.
- `kStatus_Timeout` – Timeout occurred while waiting for TX register to be empty.

Returns

status_t

static inline uint32_t MU_ReceiveMsgNonBlocking(MU_Type *base, uint32_t regIndex)

Reads a message from the RX register.

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
uint32_t msg;
while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
{
    } Wait for the RX0 register full.

msg = MU_ReceiveMsgNonBlocking(base, kMU_MsgReg0); Read message from RX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns

The received message.

status_t MU_ReceiveMsgTimeout(MU_Type *base, uint32_t regIndex, uint32_t *readValue)

Blocks to receive a message with timeout protection.

This function waits until the RX register is full and receives the message. If MU_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

This function provides the same blocking behavior as MU_ReceiveMsg() but with additional timeout protection to prevent system hangs if the other core becomes unresponsive or if hardware issues occur.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that this function includes timeout protection while MU_ReceiveMsg() waits indefinitely.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.
- readValue – Pointer to store the received message.

Return values

- kStatus_Success – Message received successfully.
- kStatus_InvalidArgument – Invalid readValue pointer.
- kStatus_Timeout – Timeout occurred while waiting for RX register to be full.

Returns

status_t

uint32_t MU_ReceiveMsg(MU_Type *base, uint32_t regIndex)

Blocks to receive a message (infinite wait, no timeout protection).

This function waits until the RX register is full and receives the message. This function will wait indefinitely until a message is received.

Note: Both `MU_ReceiveMsg()` and `MU_ReceiveMsgTimeout()` are blocking functions. The difference is that `MU_ReceiveMsgTimeout()` includes timeout protection while this function waits indefinitely.

Warning: This function does not include timeout protection and may cause system hangs if the other core becomes unresponsive. For applications requiring timeout protection, use `MU_ReceiveMsgTimeout()` instead.

Parameters

- `base` – MU peripheral base address.
- `regIndex` – RX register index, see `mu_msg_reg_index_t`.

Returns

The received message.

`static inline void MU_SetFlagsNonBlocking(MU_Type *base, uint32_t flags)`

Sets the 3-bit MU flags reflect on the other MU side.

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag `kMU_FlagsUpdatingFlag` asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag `kMU_FlagsUpdatingFlag` is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag `kMU_FlagsUpdatingFlag` is cleared before calling this function.

```
while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
{
    } Wait for previous MU flags updating.

MU_SetFlagsNonBlocking(base, 0U); Set the mU flags.
```

Parameters

- `base` – MU peripheral base address.
- `flags` – The 3-bit MU flags to set.

`status_t MU_SetFlags(MU_Type *base, uint32_t flags)`

brief Blocks setting the 3-bit MU flags reflect on the other MU side.

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag `kMU_FlagsUpdatingFlag` asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag `kMU_FlagsUpdatingFlag` is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag `kMU_FlagsUpdatingFlag` cleared and sets the 3-bit MU flags.

If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and return `kStatus_Timeout`.

return `status_t` `retval` `kStatus_Success` Flags were set successfully. `retval` `kStatus_Timeout` Timeout occurred while waiting for flags to update.

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

static inline uint32_t MU_GetFlags(MU_Type *base)

Gets the current value of the 3-bit MU flags set by the other side.

This function gets the current 3-bit MU flags on the current side.

Parameters

- base – MU peripheral base address.

Returns

flags Current value of the 3-bit flags.

uint32_t MU_GetStatusFlags(MU_Type *base)

Gets the MU status flags.

This function returns the bit mask of the MU status flags. See `_mu_status_flags`.

```
uint32_t flags;
flags = MU_GetStatusFlags(base); Get all status flags.
if (kMU_Tx0EmptyFlag & flags)
{
    The TX0 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG0_VAL);
}
if (kMU_Tx1EmptyFlag & flags)
{
    The TX1 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg1, MSG1_VAL);
}
```

If there are more than 4 general purpose interrupts, use `MU_GetGeneralPurposeStatusFlags`.

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU status flags, see `_mu_status_flags`.

static inline uint32_t MU_GetInterruptsPending(MU_Type *base)

Gets the MU IRQ pending status of enabled interrupts.

This function returns the bit mask of the pending MU IRQs of enabled interrupts. Only these flags are checked. `kMU_Tx0EmptyFlag` `kMU_Tx1EmptyFlag` `kMU_Tx2EmptyFlag` `kMU_Tx3EmptyFlag` `kMU_Rx0FullFlag` `kMU_Rx1FullFlag` `kMU_Rx2FullFlag` `kMU_Rx3FullFlag` `kMU_GenInt0Flag` `kMU_GenInt1Flag` `kMU_GenInt2Flag` `kMU_GenInt3Flag`

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU IRQs pending.

static inline void MU_ClearStatusFlags(MU_Type *base, uint32_t flags)

Clears the specific MU status flags.

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See `_mu_status_flags`.

```
Clear general interrupt 0 and general interrupt 1 pending flags.
MU_ClearStatusFlags(base, kMU_GenInt0Flag | kMU_GenInt1Flag);
```

If there are more than 4 general purpose interrupts, use `MU_ClearGeneralPurposeStatusFlags`.

Parameters

- `base` – MU peripheral base address.
- `flags` – Bit mask of the MU status flags. See `_mu_status_flags`. Only the following flags can be cleared by software, other flags are cleared by hardware:
 - `kMU_GenInt0Flag`
 - `kMU_GenInt1Flag`
 - `kMU_GenInt2Flag`
 - `kMU_GenInt3Flag`
 - `kMU_MuResetInterruptFlag`
 - `#kMU_OtherSideEnterRunInterruptFlag`
 - `#kMU_OtherSideEnterHaltInterruptFlag`
 - `#kMU_OtherSideEnterWaitInterruptFlag`
 - `#kMU_OtherSideEnterStopInterruptFlag`
 - `#kMU_OtherSideEnterPowerDownInterruptFlag`
 - `#kMU_ResetAssertInterruptFlag`
 - `#kMU_HardwareResetInterruptFlag`

`static inline void MU_EnableInterrupts(MU_Type *base, uint32_t interrupts)`

Enables the specific MU interrupts.

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See `_mu_interrupt_enable`.

Enable general interrupt 0 and TX0 empty interrupt.
`MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);`

If there are more than 4 general purpose interrupts, use `MU_EnableGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

`static inline void MU_DisableInterrupts(MU_Type *base, uint32_t interrupts)`

Disables the specific MU interrupts.

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See `_mu_interrupt_enable`.

Disable general interrupt 0 and TX0 empty interrupt.
`MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);`

If there are more than 4 general purpose interrupts, use `MU_DisableGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

`status_t MU_TriggerInterrupts(MU_Type *base, uint32_t interrupts)`

Triggers interrupts to the other core.

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `_mu_interrupt_trigger`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
if (kStatus_Success != MU_TriggerInterrupts(base, kMU_GenInt0InterruptTrigger | kMU_
↪ GenInt2InterruptTrigger))
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

If there are more than 4 general purpose interrupts, use `MU_TriggerGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the interrupts to trigger. See `_mu_interrupt_trigger`.

Return values

- `kStatus_Success` – Interrupts have been triggered successfully.
- `kStatus_Fail` – Previous interrupts have not been accepted.

`static inline void MU_EnableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)`

Enables the MU general purpose interrupts.

This function enables the MU general purpose interrupts. The interrupts to enable should be passed in as bit mask of `mu_general_purpose_interrupt_t`. The function `MU_EnableInterrupts` only support general interrupt 0~3, this function supports all general interrupts.

For example, to enable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪ GeneralPurposeInterrupt3);
```

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU general purpose interrupts, see `mu_general_purpose_interrupt_t`.

`static inline void MU_DisableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)`

Disables the MU general purpose interrupts.

This function disables the MU general purpose interrupts. The interrupts to disable should be passed in as bit mask of `mu_general_purpose_interrupt_t`. The function `MU_DisableInterrupts` only support general interrupt 0~3, this function supports all general interrupts.

For example, to disable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪ GeneralPurposeInterrupt3);
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU general purpose interrupts. see `mu_general_purpose_interrupt_t`.

static inline uint32_t MU_GetGeneralPurposeStatusFlags(MU_Type *base)

Gets the MU general purpose interrupt status flags.

This function returns the bit mask of the MU general purpose interrupt status flags. `MU_GetStatusFlags` can only get general purpose interrupt status 0~3, this function can get all general purpose interrupts status.

This example shows to check whether general purpose interrupt 0 and 3 happened.

```
uint32_t flags;
flags = MU_GetGeneralPurposeStatusFlags(base);
if (kMU_GeneralPurposeInterrupt0 & flags)
{
}
if (kMU_GeneralPurposeInterrupt3 & flags)
{
}
```

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU general purpose interrupt status flags.

static inline void MU_ClearGeneralPurposeStatusFlags(MU_Type *base, uint32_t flags)

Clear the MU general purpose interrupt status flags.

This function clears the specific MU general purpose interrupt status flags. The flags to clear should be passed in as bit mask. `mu_general_purpose_interrupt_t_mu_status_flags`.

Example to clear general purpose interrupt 0 and general interrupt 1 pending flags.

```
MU_ClearGeneralPurposeStatusFlags(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt1);
```

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU general purpose interrupt status flags. See `mu_general_purpose_interrupt_t`.

static inline uint32_t MU_GetRxStatusFlags(MU_Type *base)

Return the RX status flags in reverse numerical order.

This function return the RX status flags in reverse order. Note: RFn bits of SR[3-0](mu status register) are mapped in ascending numerical order: RF0 -> SR[0] RF1 -> SR[1] RF2 -> SR[2] RF3 -> SR[3] This function will return these bits in reverse numerical order(RF3->RF1) to comply with `MU_GetRxStatusFlags()` of mu driver. See `MU_GetRxStatusFlags()` from `drivers/mu/fsl_mu.h`

```
status_reg = MU_GetRxStatusFlags(base);
```

Parameters

- base – MU peripheral base address.

Returns

MU RX status flags in reverse order

status_t MU_TriggerGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Triggers general purpose interrupts to the other core.

This function triggers the specific general purpose interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `mu_general_purpose_interrupt_t`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
status_t status;
status = MU_TriggerGeneralPurposeInterrupts(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt2);

if (kStatus_Success != status)
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the interrupts to trigger. See `mu_general_purpose_interrupt_t`.

Return values

- `kStatus_Success` – Interrupts have been triggered successfully.
- `kStatus_Fail` – Previous interrupts have not been accepted.

void MU_BootOtherCore(MU_Type *base, mu_core_boot_mode_t mode)

Boots the other core.

This function boots the other core with a boot configuration.

Parameters

- `base` – MU peripheral base address.
- `mode` – The other core boot mode.

void MU_HoldOtherCoreReset(MU_Type *base)

Holds the other core reset.

This function causes the other core to be held in reset following any reset event.

Parameters

- `base` – MU peripheral base address.

static inline status_t MU_ResetBothSides(MU_Type *base)

Resets the MU for both A side and B side.

This function resets the MU for both A side and B side. Before reset, it is recommended to interrupt processor B, because this function may affect the ongoing processor B programs.

If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations if waiting for the other side to come out of reset takes too long.

Note: For some platforms, only MU side A could use this function, check reference manual for details.

Parameters

- base – MU peripheral base address.

Return values

- kStatus_Success – The MU was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other side to come out of reset.

Returns

status_t

status_t MU_HardwareResetOtherCore(MU_Type *base, bool waitReset, bool holdReset, mu_core_boot_mode_t bootMode)

Hardware reset the other core.

This function resets the other core, the other core could mask the hardware reset by calling MU_MaskHardwareReset. The hardware reset mask feature is only available for some platforms. This function could be used together with MU_BootOtherCore to control the other core reset workflow.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout if waiting for the other core to enter or exit reset takes too long.

Example 1: Reset the other core, and no hold reset

```
MU_HardwareResetOtherCore(MU_A, true, false, bootMode);
```

In this example, the core at MU side B will reset with the specified boot mode.

Example 2: Reset the other core and hold it, then boot the other core later. Here the other core enters reset, and the reset is hold

```
MU_HardwareResetOtherCore(MU_A, true, true, modeDontCare);
```

Current core boot the other core when necessary.

```
MU_BootOtherCore(MU_A, bootMode);
```

Note: The feature waitReset, holdReset, and bootMode might be not supported for some platforms. waitReset is only available for platforms that FSL_FEATURE_MU_NO_CORE_STATUS not defined as 1 and FSL_FEATURE_MU_HAS_RESET_ASSERT_INT not defined as 0. holdReset is only available for platforms that FSL_FEATURE_MU_HAS_RSTH not defined as 0. bootMode is only available for platforms that FSL_FEATURE_MU_HAS_BOOT not defined as 0.

Parameters

- base – MU peripheral base address.
- waitReset – Wait the other core enters reset. Only work when there is CSSR0[RAIP].
 - true: Wait until the other core enters reset, if the other core has masked the hardware reset, then this function will be blocked.
 - false: Don't wait the reset.
- holdReset – Hold the other core reset or not. Only work when there is CCR0[RSTH].

- true: Hold the other core in reset, this function returns directly when the other core enters reset.
- false: Don't hold the other core in reset, this function waits until the other core out of reset.
- bootMode – Boot mode of the other core, if holdReset is true, this parameter is useless.

Return values

- kStatus_Success – The other core was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other core to enter or exit reset.

Returns

status_t

FSL_MU_DRIVER_VERSION

MU driver version.

enum _mu_status_flags

MU status flags.

Values:

enumerator kMU_Tx0EmptyFlag

TX0 empty.

enumerator kMU_Tx1EmptyFlag

TX1 empty.

enumerator kMU_Tx2EmptyFlag

TX2 empty.

enumerator kMU_Tx3EmptyFlag

TX3 empty.

enumerator kMU_Rx0FullFlag

RX0 full.

enumerator kMU_Rx1FullFlag

RX1 full.

enumerator kMU_Rx2FullFlag

RX2 full.

enumerator kMU_Rx3FullFlag

RX3 full.

enumerator kMU_GenInt0Flag

General purpose interrupt 0 pending.

enumerator kMU_GenInt1Flag

General purpose interrupt 1 pending.

enumerator kMU_GenInt2Flag

General purpose interrupt 2 pending.

enumerator kMU_GenInt3Flag

General purpose interrupt 3 pending.

enumerator kMU_RxFullPendingFlag

Any RX full flag is pending.

enumerator kMU__TxEmptyPendingFlag

Any TX empty flag is pending.

enumerator kMU__GenIntPendingFlag

Any general interrupt flag is pending.

enumerator kMU__EventPendingFlag

MU event pending.

enumerator kMU__FlagsUpdatingFlag

MU flags update is on-going.

enumerator kMU__MuInResetFlag

MU of any side is in reset.

enumerator kMU__MuResetInterruptFlag

The other side initializes MU reset.

enum __mu_interrupt_enable

MU interrupt source to enable.

Values:

enumerator kMU__Tx0EmptyInterruptEnable

TX0 empty.

enumerator kMU__Tx1EmptyInterruptEnable

TX1 empty.

enumerator kMU__Tx2EmptyInterruptEnable

TX2 empty.

enumerator kMU__Tx3EmptyInterruptEnable

TX3 empty.

enumerator kMU__Rx0FullInterruptEnable

RX0 full.

enumerator kMU__Rx1FullInterruptEnable

RX1 full.

enumerator kMU__Rx2FullInterruptEnable

RX2 full.

enumerator kMU__Rx3FullInterruptEnable

RX3 full.

enumerator kMU__GenInt0InterruptEnable

General purpose interrupt 0.

enumerator kMU__GenInt1InterruptEnable

General purpose interrupt 1.

enumerator kMU__GenInt2InterruptEnable

General purpose interrupt 2.

enumerator kMU__GenInt3InterruptEnable

General purpose interrupt 3.

enumerator kMU__MuResetInterruptEnable

The other side initializes MU reset.

enum `_mu_interrupt_trigger`

MU interrupt that could be triggered to the other core.

Values:

enumerator `kMU_GenInt0InterruptTrigger`

General purpose interrupt 0.

enumerator `kMU_GenInt1InterruptTrigger`

General purpose interrupt 1.

enumerator `kMU_GenInt2InterruptTrigger`

General purpose interrupt 2.

enumerator `kMU_GenInt3InterruptTrigger`

General purpose interrupt 3.

enum `_mu_msg_reg_index`

MU message register index.

Values:

enumerator `kMU_MsgReg0`

Message register 0.

enumerator `kMU_MsgReg1`

Message register 1.

enumerator `kMU_MsgReg2`

Message register 2.

enumerator `kMU_MsgReg3`

Message register 3.

enum `_mu_general_purpose_interrupt`

MU general purpose interrupts.

Values:

enumerator `kMU_GeneralPurposeInterrupt0`

General purpose interrupt 0

enumerator `kMU_GeneralPurposeInterrupt1`

General purpose interrupt 1

enumerator `kMU_GeneralPurposeInterrupt2`

General purpose interrupt 2

enumerator `kMU_GeneralPurposeInterrupt3`

General purpose interrupt 3

typedef enum `_mu_msg_reg_index` `mu_msg_reg_index_t`

MU message register index.

typedef enum `_mu_general_purpose_interrupt` `mu_general_purpose_interrupt_t`

MU general purpose interrupts.

`MU_CORE_INTR(intr)`

`MU_MISC_INTR(intr)`

`MU_TX_INTR(intr)`

`MU_RX_INTR(intr)`

MU_GI_INTR(*intr*)
MU_GET_CORE_INTR(*intrs*)
MU_GET_TX_INTR(*intrs*)
MU_GET_RX_INTR(*intrs*)
MU_GET_GI_INTR(*intrs*)
MU_CORE_FLAG(*flag*)
MU_STAT_FLAG(*flag*)
MU_TX_FLAG(*flag*)
MU_RX_FLAG(*flag*)
MU_GI_FLAG(*flag*)
MU_GET_CORE_FLAG(*flags*)
MU_GET_STAT_FLAG(*flags*)
MU_GET_TX_FLAG(*flags*)
MU_GET_RX_FLAG(*flags*)
MU_GET_GI_FLAG(*flags*)
MU1_BUSY_POLL_COUNT

Maximum polling iterations for MU waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the MU code before timing out and returning an error.

It applies to all waiting loops in MU driver, such as waiting for TX register to be empty or waiting for RX register to be full.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if a core becomes unresponsive.

2.38 OSTIMER: OS Event Timer Driver

void OSTIMER_Init(OSTIMER_Type *base)

Initializes an OSTIMER by turning its bus clock on.

void OSTIMER_Deinit(OSTIMER_Type *base)

Deinitializes a OSTIMER instance.

This function shuts down OSTIMER bus clock

Parameters

- *base* – OSTIMER peripheral base address.

uint64_t OSTIMER_GrayToDecimal(uint64_t gray)

Translate the value from gray-code to decimal.

Parameters

- *gray* – The gray value input.

Returns

The decimal value.

```
static inline uint64_t OSTIMER_DecimalToGray(uint64_t dec)
```

Translate the value from decimal to gray-code.

Parameters

- dec – The decimal value.

Returns

The gray code of the input value.

```
uint32_t OSTIMER_GetStatusFlags(OSTIMER_Type *base)
```

Get OSTIMER status Flags.

This returns the status flag. Currently, only match interrupt flag can be got.

Parameters

- base – OSTIMER peripheral base address.

Returns

status register value

```
void OSTIMER_ClearStatusFlags(OSTIMER_Type *base, uint32_t mask)
```

Clear Status Interrupt Flags.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- base – OSTIMER peripheral base address.
- mask – Clear bit mask.

Returns

none

```
status_t OSTIMER_SetMatchRawValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)
```

Set the match raw value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central EVTIMER. Please note that, the data format may be gray-code, if so, please using OSTIMER_SetMatchValue().

Parameters

- base – OSTIMER peripheral base address.
- count – OSTIMER timer match value.(Value may be gray-code format)
- cb – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- kStatus_Success -- Set match raw value and enable interrupt Successfully.
- kStatus_Fail -- Set match raw value fail.

```
status_t OSTIMER_SetMatchValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)
```

Set the match value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central OS TIMER.

Parameters

- `base` – OSTIMER peripheral base address.
- `count` – OSTIMER timer match value.(Value is decimal format, and this value will be translate to Gray code in API if the IP counter is gray encoded.)
- `cb` – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- `kStatus_Success` – - Set match value and enable interrupt Successfully.
- `kStatus_Fail` – - Set match value fail.

```
static inline void OSTIMER_SetMatchRegister(OSTIMER_Type *base, uint64_t value)
```

Set value to OSTIMER MATCH register directly.

This function writes the input value to OSTIMER MATCH register directly, it does not touch any other registers. Note that, the data format is gray-code. The function `OSTIMER_DecimalToGray` could convert decimal value to gray code.

Parameters

- `base` – OSTIMER peripheral base address.
- `value` – OSTIMER timer match value (Value is gray-code format).

```
static inline uint64_t OSTIMER_GetMatchRegister(OSTIMER_Type *base)
```

Get the match value from OSTIMER.

This function will get the match value from OSTIMER. The value of timer match is gray code format.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

Value of match register, data format is gray code.

```
static inline uint64_t OSTIMER_GetMatchValue(OSTIMER_Type *base)
```

Get the match value from OSTIMER.

This function will get a match value from OSTIMER.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

Value of match register.

```
static inline void OSTIMER_EnableMatchInterrupt(OSTIMER_Type *base)
```

Enable the OSTIMER counter match interrupt.

Enable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- `base` – OSTIMER peripheral base address.

```
static inline void OSTIMER_DisableMatchInterrupt(OSTIMER_Type *base)
```

Disable the OSTIMER counter match interrupt.

Disable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- base – OSTIMER peripheral base address.

static inline uint64_t OSTIMER_GetCurrentTimerRawValue(OSTIMER_Type *base)

Get current timer raw count value from OSTIMER.

This function will get the timer count value from OS timer register. The raw value of timer count may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of OSTIMER, may be gray code format.

uint64_t OSTIMER_GetCurrentValue(OSTIMER_Type *base)

Get current timer count value from OSTIMER.

This function will get a decimal timer count value. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of OSTIMER which will be formatted to decimal value.

static inline uint64_t OSTIMER_GetCaptureRawValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a captured value from OSTIMER. The Raw value of timer capture may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of capture register, data format may be gray code.

uint64_t OSTIMER_GetCaptureValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a capture decimal-value from OSTIMER. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of capture register, data format is decimal.

void OSTIMER_HandleIRQ(OSTIMER_Type *base, *ostimer_callback_t* cb)

OS timer interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in OSTIMER_SetMatchValue()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – OS timer peripheral base address.
- cb – callback scheduled for this instance of OS timer

Returns

none

FSL_OSTIMER_DRIVER_VERSION

OSTIMER driver version.

enum __ostimer_flags

OSTIMER status flags.

Values:

enumerator kOSTIMER_MatchInterruptFlag

Match interrupt flag bit, sets if the match value was reached.

typedef void (*ostimer_callback_t)(void)

ostimer callback function.

2.39 Pls_pmu

enum __pmu_fro16k_output_freq

The enumeration of FRO16K output frequency.

Values:

enumerator kPMU_FRO16KOutput16KHz

FRM16K output 16KHz.

enumerator kPMU_FRO16KOutput8KHz

FRM16K output 8KHz.

typedef enum __pmu_fro16k_output_freq pmu_fro16k_output_freq_t

The enumeration of FRO16K output frequency.

static inline void PMU_EnableFixedDCDC(PMU_Type *base, bool enable)

Enable/disable Fixed DCDC in active mode.

Parameters

- base – PMU peripheral base address.
- enable – Specify the behavior of Fixed DCDC, true to enable, false to disable.

static inline void PMU_UpdateVDDCoreInActiveMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE in active mode.

Parameters

- base – PMU peripheral base address.
- value – Value to update, LSB is 9.5mV.

static inline void PMU_UpdateVDDCoreInLpMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE in low power modes.

Parameters

- base – PMU peripheral base address.
- value – Value to update, LSB is 9.5mV.

static inline void PMU_UpdateVDDCore1P1InActiveMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE_1P1 in active mode.

Parameters

- base – PMU peripheral base address.
- value – Value to update.

static inline void PMU_UpdateVDDCore1P1InLpMode(PMU_Type *base, uint8_t value)
Update voltage of VDD_CORE_1P1 in low power modes.

Parameters

- base – PMU peripheral base address.
- value – Value to update.

static inline void PMU_EnableFRO16K(PMU_Type *base, bool enable)
Enable/disable FRO16K.

Parameters

- base – PMU peripheral base address.
- enable – Specify the behavior of FRO16K, true to enable FRO16K, false to disable FRO16K.

static inline void PMU_UpdateFRO16KFreq(PMU_Type *base, pmu_fro16k_output_freq_t freq)
Update FRO16K output frequency.

Parameters

- base – PMU peripheral base address.
- freq – The target frequency to update, please refer to pmu_fro16k_output_freq_t for details.

static inline void PMU_UpdateDCDCWakeupWatchdogCounterValue(PMU_Type *base, uint16_t timeoutValue)
Update DCDC watchdog counter value.

Parameters

- base – PMU peripheral base address.
- timeoutValue – DCDC watchdog counter value.

static inline void PMU_UpdateWakeupTime(PMU_Type *base, uint16_t wakeupTime)
Update wakeup time of the PMU analog from POR reset to ext_reset release.

Parameters

- base – PMU peripheral base address.
- wakeupTime – Specify the wakeup time.

static inline uint32_t PMU_GetWakeupTime(PMU_Type *base)
Get wakeup time of the PMU analog from POR reset to ext_reset release.

Parameters

- base – PMU peripheral base address.

Returns

The wakeup time of the PMU analog from POR reset to ext_reset release.

FSL_PMU_DRIVER_VERSION
pls_pmu driver version 2.0.1.

2.40 PORT: Port Control and Interrupts

static inline void PORT_GetVersionInfo(PORT_Type *base, port_version_info_t *info)

Get PORT version information.

Parameters

- base – PORT peripheral base pointer
- info – PORT version information

static inline void PORT_SecletPortVoltageRange(PORT_Type *base, port_voltage_range_t range)

Get PORT version information.

Note: : PORTA_CONFIG[RANGE] controls the voltage ranges of Port A, B, and C. Read or write PORTB_CONFIG[RANGE] and PORTC_CONFIG[RANGE] does not take effect.

Parameters

- base – PORT peripheral base pointer
- range – port voltage range

static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t *config)

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const port_pin_config_t *config)

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
```

(continues on next page)

(continued from previous page)

```

kPORT_MuxAsGpio,
kPORT_UnlockRegister,
};

```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask,
                                                    port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - #kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - #kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - #kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - #kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - #kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - #kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - #kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - #kPORT_InterruptLogicZero : Interrupt when logic zero.
 - #kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - #kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - #kPORT_InterruptEitherEdge : Interrupt on either edge.
 - #kPORT_InterruptLogicOne : Interrupt when logic one.
 - #kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - #kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

```
static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)
```

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the PORT_SetPinsConfig, because the PORT_SetPinsConfig need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : kPORT_PinDisabledOrAnalog). This function is recommended to use to reset the pin mux

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- mux – pin muxing slot selection.
 - kPORT_PinDisabledOrAnalog: Pin disabled or work in analog function.
 - kPORT_MuxAsGpio : Set as GPIO.
 - kPORT_MuxAlt2 : chip-specific.
 - kPORT_MuxAlt3 : chip-specific.
 - kPORT_MuxAlt4 : chip-specific.
 - kPORT_MuxAlt5 : chip-specific.
 - kPORT_MuxAlt6 : chip-specific.
 - kPORT_MuxAlt7 : chip-specific.

static inline void PORT__EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)
Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- enable – PORT digital filter configuration.

static inline void PORT__SetDigitalFilterConfig(PORT_Type *base, const
port_digital_filter_config_t *config)

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- config – PORT digital filter configuration structure.

static inline void PORT__SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline void PORT__EnablePinDoubleDriveStrength(PORT_Type *base, uint32_t pin, bool enable)

Enables the port pin double drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- enable – PORT pin drive strength configuration.

static inline void PORT_SetPinPullValue(PORT_Type *base, uint32_t pin, uint8_t value)

Configures the port pin pull value.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- value – PORT pin pull value
 - kPORT_LowPullResistor = 0U - Low internal pull resistor value is selected.
 - kPORT_HighPullResistor = 1U - High internal pull resistor value is selected.

static inline uint32_t PORT_GetEFTDetectFlags(PORT_Type *base)

Get EFT detect flags.

Parameters

- base – PORT peripheral base pointer

Returns

EFT detect flags

static inline void PORT_EnableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Enable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_DisableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Disable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllLowEFTDetectors(PORT_Type *base)

Clear all low EFT detector.

Note: : Port B and Port C pins share the same EFT detector clear control from PORTC_EDCR register. Any write to the PORTB_EDCR does not take effect.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllHighEFTDetectors(PORT_Type *base)

Clear all high EFT detector.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum `_port_pull`

Internal resistor pull feature selection.

Values:

enumerator `kPORT_PullDisable`

Internal pull-up/down resistor is disabled.

enumerator `kPORT_PullDown`

Internal pull-down resistor is enabled.

enumerator `kPORT_PullUp`

Internal pull-up resistor is enabled.

enum `_port_pull_value`

Internal resistor pull value selection.

Values:

enumerator `kPORT_LowPullResistor`

Low internal pull resistor value is selected.

enumerator `kPORT_HighPullResistor`

High internal pull resistor value is selected.

enum `_port_slew_rate`

Slew rate selection.

Values:

enumerator `kPORT_FastSlewRate`

Fast slew rate is configured.

enumerator `kPORT_SlowSlewRate`

Slow slew rate is configured.

enum `_port_open_drain_enable`

Open Drain feature enable/disable.

Values:

enumerator `kPORT_OpenDrainDisable`

Open drain output is disabled.

enumerator `kPORT_OpenDrainEnable`

Open drain output is enabled.

enum `_port_passive_filter_enable`

Passive filter feature enable/disable.

Values:

enumerator `kPORT_PassiveFilterDisable`

Passive input filter is disabled.

enumerator `kPORT_PassiveFilterEnable`

Passive input filter is enabled.

enum `_port_drive_strength`

Configures the drive strength.

Values:

enumerator `kPORT_LowDriveStrength`

Low-drive strength is configured.

enumerator kPORT_HighDriveStrength

High-drive strength is configured.

enum __port_drive_strength1

Configures the drive strength1.

Values:

enumerator kPORT_NormalDriveStrength

Normal drive strength

enumerator kPORT_DoubleDriveStrength

Double drive strength

enum __port_input_buffer

input buffer disable/enable.

Values:

enumerator kPORT_InputBufferDisable

Digital input is disabled

enumerator kPORT_InputBufferEnable

Digital input is enabled

enum __port_invet_input

Digital input is not inverted or it is inverted.

Values:

enumerator kPORT_InputNormal

Digital input is not inverted

enumerator kPORT_InputInvert

Digital input is inverted

enum __port_lock_register

Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister

Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister

Pin Control Register fields [15:0] are locked.

enum __port_mux

Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog

Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio

Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0

Chip-specific

enumerator kPORT_MuxAlt1

Chip-specific

enumerator kPORT_MuxAlt2

Chip-specific

enumerator kPORT_MuxAlt3

Chip-specific

enumerator kPORT_MuxAlt4

Chip-specific

enumerator kPORT_MuxAlt5

Chip-specific

enumerator kPORT_MuxAlt6

Chip-specific

enumerator kPORT_MuxAlt7

Chip-specific

enumerator kPORT_MuxAlt8

Chip-specific

enumerator kPORT_MuxAlt9

Chip-specific

enumerator kPORT_MuxAlt10

Chip-specific

enumerator kPORT_MuxAlt11

Chip-specific

enumerator kPORT_MuxAlt12

Chip-specific

enumerator kPORT_MuxAlt13

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum __port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

enum __port_voltage_range

PORT voltage range.

Values:

enumerator kPORT_VoltageRange1Dot71V_3Dot6V

Port voltage range is 1.71 V - 3.6 V.

enumerator kPORT_VoltageRange2Dot70V_3Dot6V

Port voltage range is 2.70 V - 3.6 V.

typedef enum *_port_mux* port_mux_t

Pin mux selection.

typedef enum *_port_digital_filter_clock_source* port_digital_filter_clock_source_t

Digital filter clock source selection.

typedef struct *_port_digital_filter_config* port_digital_filter_config_t

PORT digital filter feature configuration definition.

typedef struct *_port_pin_config* port_pin_config_t

PORT pin configuration structure.

typedef struct *_port_version_info* port_version_info_t

PORT version information.

typedef enum *_port_voltage_range* port_voltage_range_t

PORT voltage range.

FSL_COMPONENT_ID

struct _port_digital_filter_config

#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth

Set digital filter width

port_digital_filter_clock_source_t clockSource

Set digital filter clockSource

struct _port_pin_config

#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t pullSelect

No-pull/pull-down/pull-up select

uint16_t pullValueSelect

Pull value select

uint16_t slewRate

Fast/slow slew rate Configure

uint16_t passiveFilterEnable

Passive filter enable/disable

uint16_t openDrainEnable

Open drain enable/disable

uint16_t driveStrength

Fast/slow drive strength configure

uint16_t driveStrength1

Normal/Double drive strength enable/disable

uint16_t inputBuffer

Input Buffer Configure

```
uint16_t invertInput
    Invert Input Configure
uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
struct __port__version__info
    #include <fsl_port.h> PORT version information.
```

Public Members

```
uint16_t feature
    Feature Specification Number.
uint8_t minor
    Minor Version Number.
uint8_t major
    Major Version Number.
```

2.41 POWER Driver

Values:

```
enumerator kStatus_POWER_MuTransferError
    Fail due to Mu transfer error.
enumerator kStatus_POWER_RequestNotAllowed
    Request not allowed by another core.
enumerator kStatus_Power_HandleDuplicated
    Handle already be created.
enumerator kStatus_Power_NotInTargetMode
    Not in target low power mode.
enumerator kStatus_Power_NackWithMultiReasons
    The response is NACK, and serval reasons cause NACK response.
enumerator kStatus_Power_SyncFailed
    Failed to sync dual core.
enumerator kStatus_Power_CM0PNotWFI
    CM0P do not execute WFI after approve to enter target low power mode..
enum __power__low__power__mode
    The enumeration of low power modes.
Values:
enumerator kPower_Sleep
    Sleep Mode.
enumerator kPower_DeepSleep
    Deep Sleep Mode.
enumerator kPower_PowerDown1
    Power Down Mode 1.
```

enumerator kPower__PowerDown2

Power Down Mode 2.

enumerator kPower__DeepPowerDown1

Deep Power Down Mode 1.

enumerator kPower__DeepPowerDown2

Deep Power Down Mode 2.

enumerator kPower__DeepPowerDown3

Deep Power Down Mode 3.

enumerator kPower__ShutDown

ShutDown Mode

enumerator kPower__Active

Active Mode.

enum __power__wakeup__source

The enumeration of wakeup sources for different low power modes.

Values:

enumerator kPower__WS__NONE

enumerator kPower__WS__Main__RtcAlarm0

RTC Alarm0 as wakeup source, only wakeup Main Domain

enumerator kPower__WS__Aon__RtcAlarm0

RTC Alarm0 as wakeup source, only wakeup AON Domain

enumerator kPower__WS__Both__RtcAlarm0

RTC Alarm0 as wakeup source, wakeup both Main and AON Domains

enumerator kPower__WS__Main__RtcAlarm1

RTC Alarm1 as wakeup source, only wakeup Main Domain

enumerator kPower__WS__Aon__RtcAlarm1

RTC Alarm1 as wakeup source, only wakeup AON Domain

enumerator kPower__WS__Both__RtcAlarm1

RTC Alarm1 as wakeup source, wakeup both Main and AON Domains

enumerator kPower__WS__Main__QTimerIrq

QTimer IRQ as wakeup source, only wakeup Main Domain

enumerator kPower__WS__Aon__QTimerIrq

QTimer IRQ as wakeup source, only wakeup AON Domain

enumerator kPower__WS__Both__QTimerIrq

QTimer IRQ as wakeup source, wakeup both Main and AON Domains

enumerator kPower__WS__Main__RtcWDT

RTC watch dog as wakeup source, only wakeup Main Domain

enumerator kPower__WS__Aon__RtcWDT

RTC watch dog as wakeup source, only wakeup AON Domain

enumerator kPower__WS__Both__RtcWDT

RTC watch dog as wakeup source, wakeup both Main and AON Domains

enumerator kPower__WS__Main__RtcXtalFail

RTC XTAL fail as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_RtcXtalFail
RTC XTAL fail as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_RtcXtalFail
RTC XTAL fail as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_ExternalINTFallEdge
External INT falling edge as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_ExternalINTFallEdge
External INT falling edge as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_ExternalINTFallEdge
External INT falling edge as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_ExternalINTRiseEdge
External INT rising edge as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_ExternalINTRiseEdge
External INT rising edge as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_ExternalINTRiseEdge
External INT rising edge as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_SMMTimer
Deep sleep counter as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_SMMTimer
Deep sleep counter as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_SMMTimer
Deep sleep counter as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Comparator
Voltage comparator as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Comparator
Voltage comparator as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Comparator
Voltage comparator as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Lpuart0
LPUART0 Interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Lpuart0
LPUART0 Interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Lpuart0
LPUART0 Interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AdvcOrACMP
ADVC or ACMP as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AdvcOrACMP

ADVC or ACMP as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AdvcOrACMP

ADVC or ACMP as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Lpi2cInt

AON Lpi2c interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Lpi2cInt

AON Lpi2c interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Lpi2cInt

AON Lpi2c interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AdcInt

ADC interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AdcInt

ADC interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AdcInt

ADC interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_LptmrInt

LPTMR interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_LptmrInt

LPTMR interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_LptmrInt

LPTMR interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_TamperDetect

Tamper detect as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_TamperDetect

Tamper detect as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_TamperDetect

Tamper detect as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_LcdInt

LCD interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_LcdInt

LCD interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_LcdInt

LCD interrupt as wakeup source, wakeup both Main and AON Domains

enum _power_main_domain_sram_array

Values:

enumerator kPower_MainDomainNoneRams

enumerator kPower_MainDomainRamX0

Main Domain RAM X0, bitmask representation for power control

enumerator kPower_MainDomainRamX1

Main Domain RAM X1, bitmask representation for power control

enumerator kPower_MainDomainRamA0

Main Domain RAM A0, bitmask representation for power control

enumerator kPower_MainDomainRamA1

Main Domain RAM A1, bitmask representation for power control

enumerator kPower_MainDomainRamA2

Main Domain RAM A2, bitmask representation for power control

enumerator kPower_MainDomainRamA3

Main Domain RAM A3, bitmask representation for power control

enumerator kPower_MainDomainRamB0

Main Domain RAM B0, bitmask representation for power control

enumerator kPower_MainDomainRamB1

Main Domain RAM B1, bitmask representation for power control

enumerator kPower_MainDomainRamB2ToB4

Main Domain RAM B2 to B4, bitmask representation for power control

enumerator kPower_MainDomainAllRams

Represents all RAMs in the Main Domain, bitmask for power control

enum _power_vdd_core_aon_output_voltage

The enumeration of VDD_CORE_AON output voltage.

Values:

enumerator kPower_VddCoreAon_820mV

The output voltage of VDD_CORE_AON is about 820mV.

enumerator kPower_VddCoreAon_801mV

The output voltage of VDD_CORE_AON is about 801mV.

enumerator kPower_VddCoreAon_782mV

The output voltage of VDD_CORE_AON is about 782mV.

enumerator kPower_VddCoreAon_763mV

The output voltage of VDD_CORE_AON is about 763mV.

enumerator kPower_VddCoreAon_744mV

The output voltage of VDD_CORE_AON is about 744mV.

enumerator kPower_VddCoreAon_725mV

The output voltage of VDD_CORE_AON is about 725mV.

enumerator kPower_VddCoreAon_706mV

The output voltage of VDD_CORE_AON is about 706mV.

enumerator kPower_VddCoreAon_687mV

The output voltage of VDD_CORE_AON is about 687mV.

enumerator kPower_VddCoreAon_668mV

The output voltage of VDD_CORE_AON is about 668mV.

enumerator kPower_VddCoreAon_649mV

The output voltage of VDD_CORE_AON is about 649mV.

enumerator kPower_VddCoreAon_630mV

The output voltage of VDD_CORE_AON is about 630mV.

enumerator kPower_VddCoreAon_611mV

The output voltage of VDD_CORE_AON is about 611mV.

enumerator kPower_VddCoreAon_592mV

The output voltage of VDD_CORE_AON is about 592mV.

enumerator kPower_VddCoreAon_AdvcControl

The output voltage of VDD_CORE_AON is controlled by ADVC.

enum __power_aon_domain_sram_array

Values:

enumerator kPower_AonDomainNoneRams

No AON Domain RAMs.

enumerator kPower_AonDomainRam1stHalf16kB

First half (16kB) of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainRam2nd8kB

Second 8kB of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainRamLower8kB

Lower 8kB of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainAllRams

Represents all RAMs in the AON Domain, bitmask for power control

enum __power_mu_message_direction

Enumeration of power MU message directions.

Values:

enumerator kPower_MsgDirMainToAon

Message direction from Main to AON domain

enumerator kPower_MsgDirAonToMain

Message direction from AON to Main domain

enum __power_mu_message_type

Enumeration of power MU message types.

Values:

enumerator kPower_MsgTypeRequest

Message type is a request

enumerator kPower_MsgTypeACK

Message type is response with ACKnowledgment

enumerator kPower_MsgTypeNACK

Message type is response with Negative ACKnowledgment

enumerator kPower_MsgTypeSync

Message type is to sync dual cores.

enum __power_mu_nack_reason

The reason of NACK response.

Values:

enumerator kPower_MsgNACK_ChannelMismatch

NACK response due to channel mismatch.

enumerator `kPower_MsgNACK_TargetModeNotAllowed`

NACK response due to target mode not allowed..

enumerator `kPower_MsgNACK_WrongMsgReceived`

NACK response due to wrong message.

enum `_power_dpd1_transition`

Enumeration of follow power transition.

Values:

enumerator `kPower_Dpd1ToActive`

Transition from DPD1 to Active mode

enumerator `kPower_Dpd1ToDpd2WakeToDpd1`

Transition from DPD1 to DPD2 wakeup to DPD1 mode

enumerator `kPower_Dpd1ToDpd2WakeToActive`

Transition from DPD1 to DPD2 wakeup to Active mode

typedef enum `_power_low_power_mode` `power_low_power_mode_t`

The enumeration of low power modes.

typedef bool (`*power_user_callback_t`)(`power_low_power_mode_t` targetPowerMode, void `*ptrPowerConfig`, void `*userData`)

typedef enum `_power_wakeup_source` `power_wakeup_source_t`

The enumeration of wakeup sources for different low power modes.

typedef enum `_power_vdd_core_aon_output_voltage` `power_vdd_core_output_voltage_t`

The enumeration of VDD_CORE_AON output voltage.

typedef enum `_power_mu_message_direction` `power_mu_message_direction_t`

Enumeration of power MU message directions.

typedef enum `_power_mu_message_type` `power_mu_message_type_t`

Enumeration of power MU message types.

typedef enum `_power_mu_nack_reason` `power_mu_nack_reason_t`

The reason of NACK response.

typedef struct `_power_ds_config` `power_ds_config_t`

Configuration structure for deep sleep mode.

typedef struct `_power_pd1_config` `power_pd1_config_t`

Configuration structure for power down mode.

typedef struct `_power_pd2_config` `power_pd2_config_t`

typedef enum `_power_dpd1_transition` `power_dpd1_transition_t`

Enumeration of follow power transition.

typedef struct `_power_dpd1_config` `power_dpd1_config_t`

Configuration structure for deep power down mode 1.

typedef struct `_power_dpd2_config` `power_dpd2_config_t`

Configuration structure for deep power down mode 2.

typedef struct `_power_dpd3_config` `power_dpd3_config_t`

Configuration structure for deep power down mode 3.

typedef struct `_power_sd_config` `power_sd_config_t`

Configuration structure for shut down.

typedef struct *_power_wakeup_source_info* power_wakeup_source_info_t

The structure of dumped wakeup source information.

typedef struct *_power_handle* power_handle_t

Structure to handle power management operations.

status_t Power_CreateHandle(*power_handle_t* *handle, uint32_t muChannelId)

Create shared power handle.

Parameters

- handle – **[in]** Pointer to a handle in type of power_handle_t, must be in shared RAM.
- muChannelId – **[in]** MU channel ID used by power driver.

Return values

- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_Power_HandleDuplicated – Shared power handle already be created.
- kStatus_Success – Created handle successfully.

void Power_DumpHandleValue(*power_handle_t* *ptrDumpBuffer)

Dump contents of handle.

Parameters

- ptrDumpBuffer – **[out]** The pointer to a buffer in type of power_handle_t to store dumped handle value.

void Power_GetPowerModeConfig(void *config)

Get configurations of latest requested low power mode.

Parameters

- config – **[out]** The pointer to a buffer to store configurations of latest requested low power mode

uint32_t Power_GetHandleOffset(void)

Get the offset of shared handle in shared RAM.

Returns

Offset of shared handle in shared RAM, in bytes.

void Power_RestoreHandleOffset(uint32_t offset)

Restore the shared handle from offset in shared RAM.

Parameters

- offset – **[in]** Offset of shared handle in shared RAM, in bytes.

FSL_POWER_DRIVER_VERSION

power driver version 2.1.0.

POWER_SHARED_RAM_BASE_ADDR

POWER_ENCODE_WS(wakeupDomain, pinEdge, aonIndex)

Encode wakeup source code.

Note: bit 7 - 0: aon control bit index; bit 23 - 20: external pin edge(1: rising edge, 2: falling edge, 3: any edge); bit 27 - 24: Wakeup domain(0: only Main, 1: only Aon, 2: Both Main and Aon), in some low power mode(such as PD2) it is possible only wakeup Aon Domain.

POWER_DECODE_WS(wsCode)

void Power_EnableWakeupSource(*power_wakeup_source_t* ws)

Enable input wakeup source, once enabled it will be effective until disabled.

The enabled wakeup sources are recorded, and set to register before entering low power modes.

Note: There are two ways to enable wakeup source: The first one is invoking Power_EnableWakeupSource(), the way is used to enable more than one wakeup source; The second one is specify the wakeup source in configuration of low power mode.

Parameters

- ws – **[in]** Specify the coded wakeup source, please refer to power_wakeup_source_t for details.

void Power_DisableWakeupSource(*power_wakeup_source_t* ws)

Disable input wakeup source.

Parameters

- ws – **[in]** Specify the coded wakeup source, please refer to power_wakeup_source_t for details.

void Power_DisableAllWakeupSources(void)

Disable all enabled wakeup sources to both main domain and aon domain.

void Power_DumpEnabledWakeSource(*power_wakeup_source_info_t* *ptrWsInfo)

Dump information of all configured wakeup sources, in type of power_wakeup_source_info_t.

Parameters

- ptrWsInfo – **[out]** Pointer to the variable to store dumped wakeup source information.

void Power_GetWakeupSource(uint32_t *ptrWakeupSourceMask)

Get latest mask of wakeup sources which cause the wake-up to main CPU.

Parameters

- ptrWakeupSourceMask – **[out]** Pointer to the variable to store mask of wakeup sources.

void Power_CheckThenDisableWakeupSource(*power_wakeup_source_t* ws)

Check whether the selected wakeup source is already enabled, if it is then disable it.

Parameters

- ws – Specify the wakeup source in type of power_wakeup_source_t.

void Power_CheckThenEnableWakeupSource(*power_wakeup_source_t* ws)

Check whether the selected wakeup source is disabled, if it is then enable it.

Parameters

- ws – Specify the wakeup source in type of power_wakeup_source_t.

void Power_RegisterUserCallback(*power_user_callback_t* callback, void *userData)

Register user callback.

Parameters

- callback – **[in]** Pointer to callback in type of power_user_callback_t.

- `userData` – **[in]** Pointer to user data.

`void Power_UnRegisterUserCallback(void)`

Unregister user callback.

`power_low_power_mode_t Power_GetTargetLowPowerMode(void)`

Get the target low power mode of latest request.

Returns

The target low power mode `power_low_power_mode_t` of latest request.

`power_low_power_mode_t Power_GetPreviousPowerMode(void)`

Get previous power mode.

Returns

The previous power mode.

`void Power_ResetPreviousPowerMode(void)`

Reset previous power mode as active mode.

`status_t Power_GetCurrentPowerMode(power_low_power_mode_t *ptrCurLpMode)`

Get current power mode.

Parameters

- `ptrCurLpMode` – **[out]** Pointer to store current low power mode

Return values

`kStatus_Success` – Successfully retrieved current low power mode.

`power_low_power_mode_t Power_GetTargetPowerMode(void)`

Get the target low power mode.

Returns

Requested low power mode, in type of `power_low_power_mode_t`.

`void Power_ClearTargetPowerMode(void)`

Clear the target low power mode.

`void Power_ClearLpPowerSettings(void)`

Clear all low power settings.

`status_t Power_EnterLowPowerMode(power_low_power_mode_t lowpowerMode, void *config)`

Enter selected low power mode.

Parameters

- `lowpowerMode` – **[in]** Indicate specific target low power mode.
- `config` – Point to low power configurations.

Return values

- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

`status_t Power_EnterSleep(void)`

Enter the sleep mode.

This function is used to put the system into sleep mode.

Return values

- `kStatus_Success` – Successfully entered sleep mode.

- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

`status_t` `Power_EnterDeepSleep(power_ds_config_t *config)`

Enter Deep Sleep mode.

This function attempts to put the system into Deep Sleep mode with the provided configuration.

Parameters

- `config` – **[in]** Pointer to the Deep Sleep mode configuration.

Return values

- `kStatus_Success` – Successfully entered Deep Sleep mode.
- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

`status_t` `Power_EnterPowerDown1(power_pd1_config_t *config)`

Enter Power Down 1 mode.

This function attempts to put the system into Power Down 1 mode with the provided configuration.

Parameters

- `config` – **[in]** Pointer to the Power Down 1 mode configuration.

Return values

- `kStatus_Success` – Successfully entered Power Down 1 mode.
- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

`status_t` `Power_EnterPowerDown2(power_pd2_config_t *config)`

Enter Power Down 2 mode.

This function attempts to put the system into Power Down 2 mode with the provided configuration.

Parameters

- `config` – **[in]** Pointer to the Power Down 2 mode configuration.

Return values

- `kStatus_Success` – Successfully entered Power Down 2 mode.
- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

`status_t` `Power_EnterDeepPowerDown1(power_dpd1_config_t *config)`

Enter Deep Power Down 1 mode.

This function attempts to put the system into Deep Power Down 1 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Deep Power Down 1 mode configuration.

Return values

- kStatus_Success – Successfully entered Deep Power Down 1 mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

power_dpd1_transition_t Power_GetDeepPowerDown1NextTransition(void)

Get the next transition after Deep Power Down 1 mode.

Returns

Next transition after Deep Power Down 1 mode, in type of *power_dpd1_transition_t*.

status_t Power_EnterDeepPowerDown2(*power_dpd2_config_t* *config)

Enter Deep Power Down 2 mode.

This function attempts to put the system into Deep Power Down 2 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Deep Power Down 2 mode configuration.

Return values

- kStatus_Success – Successfully entered Deep Power Down 2 mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

status_t Power_EnterDeepPowerDown3(*power_dpd3_config_t* *config)

Enter Deep Power Down 3 mode.

This function attempts to put the system into Deep Power Down 3 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Deep Power Down 3 mode configuration.

Return values

- kStatus_Success – Successfully entered Deep Power Down 3 mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

status_t Power_EnterShutDown(*power_sd_config_t* *config)

Enter Shutdown mode.

This function attempts to put the system into Shutdown mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Shutdown mode configuration.

Return values

- `kStatus_Success` – Successfully entered Shutdown mode.
- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

power_mu_message_type_t `Power_GetMuMessageType(uint32_t message)`

Get type of received MU message.

Parameters

- `message` – The received message.

Returns

The type of MU message.

power_mu_message_direction_t `Power_GetMuMessageDir(uint32_t message)`

Get direction of received MU message.

Parameters

- `message` – The received message.

Returns

The direction of MU message.

status_t `Power_MuSyncCallback(uint32_t message, uint32_t channelId)`

The callback when one core want to sync with another, that is when the message type is `kPower_MsgTypeSync`.

Parameters

- `message` – Received message value.
- `channelId` – The channel which transfer the message.

Return values

- `kStatus_Power_SyncFailed` – Failed to sync between dual cores.
- `kStatus_Success` – Sync dual cores successfully.

status_t `Power_InterpretRequest(uint32_t message)`

Interpret request message from requester.

Parameters

- `message` – The message which request from requester.

Return values

- `kStatus_POWER_MuTransferError` – Something wrong during transfer.
- `kStatus_POWER_RequestNotAllowed` – Request is not allowed.
- `kStatus_Success` – Interpret request message successfully.

status_t `Power_InterpretResponse(uint32_t message)`

Interpret response of message.

Parameters

- `message` – The message which response to requester.

Return values

- `kStatus_POWER_MuTransferError` – Something wrong during transfer.

- kStatus_POWER_RequestNotAllowed – Request is not allowed.
- kStatus_Power_NackWithMultiReasons – Response as NACK with multiple reasons.
- kStatus_Success – Interpret response message successfully.

status_t Power_MuMessageCallback(uint32_t message, uint32_t channelId)

Callback function for handling power MU messages.

This function is called when a power MU message is received. It processes the message based on the given message content and the channel ID.

Note: This function integrate Power_MuSyncCallback(), Power_InterpretRequest(), and Power_InterpretResponse().

Parameters

- message – **[in]** The received power MU message.
- channelId – **[in]** The ID of the channel on which the message was received.

Return values

- kStatus_Power_SyncFailed – Failed to sync between dual cores.
- kStatus_POWER_MuTransferError – Something wrong during transfer.
- kStatus_POWER_RequestNotAllowed – Request is not allowed.
- kStatus_Success – Interpret request/response message successfully.

struct __power_ds_config

#include <fsl_power.h> Configuration structure for deep sleep mode.

struct __power_pd1_config

#include <fsl_power.h> Configuration structure for power down mode.

Public Members

power_wakeup_source_t mainWakeupSource

Specify the wakeup source to main domain. If the selected wakeup source is not already enabled, it will be enabled before entering PD1 mode. Setting it to kPower_WS_NONE indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking Power_EnableWakeupSource().

uint32_t mainRamArraysToRetain

Bitmask representing the main domain RAM arrays to retain during power down

bool disableBandgap

Flag to indicate whether to disable the bandgap during power down

bool enableIVSMode

Enable/disable IVS mode for the Main domain SRAM retention.

struct __power_pd2_config

#include <fsl_power.h>

Public Members

`uint32_t` `mainRamArraysToRetain`
Bitmask representing the main domain RAM arrays to retain during DPD2 mode

`uint32_t` `aonRamArraysToRetain`
Bitmask representing the AON domain RAM arrays to retain during DPD2 mode

`bool` `enableIVSMode`
Enable/disable IVS mode for the Main domain SRAM retention.

`bool` `disableBandgap`
Flag to indicate whether to disable the bandgap during DPD2 mode

`bool` `disableFRO10M`
Flag to indicate whether to disable the FRO10M clock during DPD2 mode

`power_vdd_core_output_voltage_t` `vddCoreAonVoltage`
Specify output voltage of VDD_CORE_AON

`struct __power_dpd1_config`
#include <fsl_power.h> Configuration structure for deep power down mode 1.

Public Members

`uint32_t` `mainRamArraysToRetain`
Bitmask representing the main domain RAM arrays to retain during power down

`bool` `disableBandgap`
Flag to indicate whether to disable the bandgap during power down

`bool` `enableIVSMode`
Enable/disable IVS mode for the Main domain SRAM retention.

`power_dpd1_transition_t` `nextTrans`
Next transition after DPD1 mode, refer to `power_dpd1_transition_t`

`power_vdd_core_output_voltage_t` `vddCoreAonVoltage`
Specify output voltage of VDD_CORE_AON

`struct __power_dpd2_config`
#include <fsl_power.h> Configuration structure for deep power down mode 2.

Public Members

`uint32_t` `mainRamArraysToRetain`
Bitmask representing the main domain RAM arrays to retain during DPD2 mode

`uint32_t` `aonRamArraysToRetain`
Bitmask representing the AON domain RAM arrays to retain during DPD2 mode

`bool` `enableIVSMode`
Enable/disable IVS mode for the Main domain SRAM retention.

`bool` `disableBandgap`
Flag to indicate whether to disable the bandgap during DPD2 mode

`bool` `switchToX32K`
Flag to indicate whether to switch to X32K clock source during DPD2 mode

bool disableFRO10M

Flag to indicate whether to disable the FRO10M clock during DPD2 mode

bool wakeToDpd1

Flag to indicate whether to wake up to DPD1 mode after DPD2 mode

power_vdd_core_output_voltage_t dpd2VddCoreAonVoltage

Specify output voltage of VDD_CORE AON in DPD2 mode, in type of power_vdd_core_output_voltage_t.

struct __power_dpd3_config

#include <fsl_power.h> Configuration structure for deep power down mode 3.

struct __power_sd_config

#include <fsl_power.h> Configuration structure for shut down.

Public Members

pmu_fro16k_output_freq_t fro16KOutputFreq

Specify the output frequency of FRO16K

struct __power_wakeup_source_info

#include <fsl_power.h> The structure of dumped wakeup source information.

Public Members

uint32_t aonWakeupSourceMask

The mask of wakeup sources in AON domain.

uint32_t mainWakeupSourceMask

The mask of wakeup sources in Main domain.

struct __power_handle

#include <fsl_power.h> Structure to handle power management operations.

Public Members

uint32_t lpConfig[4U]

Array of two 32-bit values for low power configuration

power_user_callback_t cm33Callback

Callback function for CM33 core operations, in type of power_user_callback_t

void *cm33UserData

User data pointer for CM33 core operations

power_user_callback_t cm0pCallback

Callback function for CM0+ core operations, in type of power_user_callback_t

void *cm0pUserData

User data pointer for CM0+ core operations

power_wakeup_source_info_t enabledWsInfo

Used to record all enabled wakeup sources.

uint32_t muChannelId

ID of the Message Unit (MU) channel used for power communication

power_low_power_mode_t targetPowerMode

Current low power mode of the system

power_low_power_mode_t previousPowerMode

Used to record previous low power mode.

bool dualCoreSynced

Flag indicating whether dual cores are synchronized

bool requestCM33Start

Flag indicating whether a request to start CM33 core is made

bool cm0pWFI

Flag indicating whether CM0P execute WFI.

2.42 QTMR: Quad Timer Driver

void QTMR_Init(TMR_Type *base, *qtmr_channel_selection_t* channel, const *qtmr_config_t* *config)

Ungates the Quad Timer clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the Quad Timer driver.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- config – Pointer to user's Quad Timer config structure

void QTMR_Deinit(TMR_Type *base, *qtmr_channel_selection_t* channel)

Stops the counter and gates the Quad Timer clock.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

void QTMR_GetDefaultConfig(*qtmr_config_t* *config)

Fill in the Quad Timer config struct with the default settings.

The default values are:

```
config->debugMode = kQTMR_RunNormalInDebug;
config->enableExternalForce = false;
config->enableMasterMode = false;
config->faultFilterCount = 0;
config->faultFilterPeriod = 0;
config->primarySource = kQTMR_ClockDivide_2;
config->secondarySource = kQTMR_Counter0InputPin;
```

Parameters

- config – Pointer to user's Quad Timer config structure.

```
void QTMR_EnableInterrupts(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Enables the selected Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `qtmr_interrupt_enable_t`

```
void QTMR_DisableInterrupts(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Disables the selected Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `qtmr_interrupt_enable_t`

```
uint32_t QTMR_GetEnabledInterrupts(TMR_Type *base, qtmr_channel_selection_t channel)
```

Gets the enabled Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `qtmr_interrupt_enable_t`

```
uint32_t QTMR_GetStatus(TMR_Type *base, qtmr_channel_selection_t channel)
```

Gets the Quad Timer status flags.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

The status flags. This is the logical OR of members of the enumeration `qtmr_status_flags_t`

```
void QTMR_ClearStatusFlags(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Clears the Quad Timer status flags.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The status flags to clear. This is a logical OR of members of the enumeration `qtmr_status_flags_t`

```
void QTMR_SetTimerPeriod(TMR_Type *base, qtmr_channel_selection_t channel, uint16_t ticks)
```

Sets the timer period in ticks.

Timers counts from initial value till it equals the count value set here. The counter will then reinitialize to the value specified in the Load register.

Note:

- a. This function will write the time period in ticks to COMP1 or COMP2 register depending on the count direction
 - b. User can call the utility macros provided in fsl_common.h to convert to ticks
 - c. This function supports cases, providing only primary source clock without secondary source clock.
-

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- ticks – Timer period in units of ticks

```
void QTMR_SetCompareValue(TMR_Type *base, qtmr_channel_selection_t channel, uint16_t ticks)
```

Set compare value.

This function sets the value used for comparison with the counter value.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- ticks – Timer period in units of ticks.

```
static inline void QTMR_SetLoadValue(TMR_Type *base, qtmr_channel_selection_t channel, uint16_t value)
```

Set load value.

This function sets the value used to initialize the counter after a counter comparison.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- value – Load register initialization value.

```
static inline uint16_t QTMR_GetCurrentTimerCount(TMR_Type *base, qtmr_channel_selection_t channel)
```

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in fsl_common.h to convert ticks to usec or msec

Parameters

- base – Quad Timer peripheral base address

- channel – Quad Timer channel number

Returns

Current counter value in ticks

```
static inline void QTMR_StartTimer(TMR_Type *base, qtmr_channel_selection_t channel,  
                                  qtmr_counting_mode_t clockSource)
```

Starts the Quad Timer counter.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- clockSource – Quad Timer clock source

```
static inline void QTMR_StopTimer(TMR_Type *base, qtmr_channel_selection_t channel)
```

Stops the Quad Timer counter.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

```
void QTMR_EnableDma(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Enable the Quad Timer DMA.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The DMA to enable. This is a logical OR of members of the enumeration qtmr_dma_enable_t

```
void QTMR_DisableDma(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Disable the Quad Timer DMA.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The DMA to enable. This is a logical OR of members of the enumeration qtmr_dma_enable_t

```
void QTMR_SetPwmOutputToIdle(TMR_Type *base, qtmr_channel_selection_t channel, bool  
                             idleStatus)
```

Set PWM output in idle status (high or low).

Note: When the PWM is set again, the counting needs to be restarted.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- idleStatus – True: PWM output is high in idle status; false: PWM output is low in idle status.

```
static inline qtmr_pwm_out_state_t QTMR_GetPwmOutputStatus(TMR_Type *base,  
                                                         qtmr_channel_selection_t  
                                                         channel)
```

Get the channel output status.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

Current channel output status.

```
uint8_t QTMR_GetPwmChannelStatus(TMR_Type *base, qtmr_channel_selection_t channel)
```

Get the PWM channel duty cycle value.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

Current channel duty cycle value.

```
void QTMR_SetPwmClockMode(TMR_Type *base, qtmr_channel_selection_t channel,  
                          qtmr_primary_count_source_t prescaler)
```

This function set the value of the prescaler on QTimer channels.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- prescaler – Set prescaler value

```
FSL_QTMR_DRIVER_VERSION
```

Version

```
enum __qtmr_primary_count_source
```

Quad Timer primary clock source selection.

Values:

```
enumerator kQTMR_ClockCounter0InputPin
```

Use counter 0 input pin

```
enumerator kQTMR_ClockCounter1InputPin
```

Use counter 1 input pin

```
enumerator kQTMR_ClockCounter2InputPin
```

Use counter 2 input pin

```
enumerator kQTMR_ClockCounter3InputPin
```

Use counter 3 input pin

```
enumerator kQTMR_ClockCounter0Output
```

Use counter 0 output

```
enumerator kQTMR_ClockCounter1Output
```

Use counter 1 output

```
enumerator kQTMR_ClockCounter2Output
```

Use counter 2 output

enumerator kQTMR_ClockCounter3Output

Use counter 3 output

enumerator kQTMR_ClockDivide_1

IP bus clock divide by 1 prescaler

enumerator kQTMR_ClockDivide_2

IP bus clock divide by 2 prescaler

enumerator kQTMR_ClockDivide_4

IP bus clock divide by 4 prescaler

enumerator kQTMR_ClockDivide_8

IP bus clock divide by 8 prescaler

enumerator kQTMR_ClockDivide_16

IP bus clock divide by 16 prescaler

enumerator kQTMR_ClockDivide_32

IP bus clock divide by 32 prescaler

enumerator kQTMR_ClockDivide_64

IP bus clock divide by 64 prescaler

enumerator kQTMR_ClockDivide_128

IP bus clock divide by 128 prescaler

enum _qtmr_input_source

Quad Timer input sources selection.

Values:

enumerator kQTMR_Counter0InputPin

Use counter 0 input pin

enumerator kQTMR_Counter1InputPin

Use counter 1 input pin

enumerator kQTMR_Counter2InputPin

Use counter 2 input pin

enumerator kQTMR_Counter3InputPin

Use counter 3 input pin

enum _qtmr_counting_mode

Quad Timer counting mode selection.

Values:

enumerator kQTMR_NoOperation

No operation

enumerator kQTMR_PriSrcRiseEdge

Count rising edges of primary source

enumerator kQTMR_PriSrcRiseAndFallEdge

Count rising and falling edges of primary source

enumerator kQTMR_PriSrcRiseEdgeSecInpHigh

Count rise edges of pri SRC while sec inp high active

enumerator kQTMR_QuadCountMode

Quadrature count mode, uses pri and sec sources

enumerator kQTMR_PriSrcRiseEdgeSecDir
Count rising edges of pri SRC; sec SRC specifies dir

enumerator kQTMR_SecSrcTrigPriCnt
Edge of sec SRC trigger primary count until compare

enumerator kQTMR_CascadeCount
Cascaded count mode (up/down)

enum __qtmr_pwm_out_state
Quad Timer PWM output state.

Values:

enumerator kQTMR_PwmLow
The output state of PWM channel is low

enumerator kQTMR_PwmHigh
The output state of PWM channel is low

enum __qtmr_output_mode
Quad Timer output mode selection.

Values:

enumerator kQTMR_AssertWhenCountActive
Assert OFLAG while counter is active

enumerator kQTMR_ClearOnCompare
Clear OFLAG on successful compare

enumerator kQTMR_SetOnCompare
Set OFLAG on successful compare

enumerator kQTMR_ToggleOnCompare
Toggle OFLAG on successful compare

enumerator kQTMR_ToggleOnAltCompareReg
Toggle OFLAG using alternating compare registers

enumerator kQTMR_SetOnCompareClearOnSecSrcInp
Set OFLAG on compare, clear on sec SRC input edge

enumerator kQTMR_SetOnCompareClearOnCountRoll
Set OFLAG on compare, clear on counter rollover

enumerator kQTMR_EnableGateClock
Enable gated clock output while count is active

enum __qtmr_input_capture_edge
Quad Timer input capture edge mode, rising edge, or falling edge.

Values:

enumerator kQTMR_NoCapture
Capture is disabled

enumerator kQTMR_RisingEdge
Capture on rising edge (IPS=0) or falling edge (IPS=1)

enumerator kQTMR_FallingEdge
Capture on falling edge (IPS=0) or rising edge (IPS=1)

enumerator kQTMR_RisingAndFallingEdge

Capture on both edges

enum __qtmr_preload_control

Quad Timer input capture edge mode, rising edge, or falling edge.

Values:

enumerator kQTMR_NoPreload

Never preload

enumerator kQTMR_LoadOnComp1

Load upon successful compare with value in COMP1

enumerator kQTMR_LoadOnComp2

Load upon successful compare with value in COMP2

enum __qtmr_debug_action

List of Quad Timer run options when in Debug mode.

Values:

enumerator kQTMR_RunNormalInDebug

Continue with normal operation

enumerator kQTMR_HaltCounter

Halt counter

enumerator kQTMR_ForceOutToZero

Force output to logic 0

enumerator kQTMR_HaltCountForceOutZero

Halt counter and force output to logic 0

enum __qtmr_interrupt_enable

List of Quad Timer interrupts.

Values:

enumerator kQTMR_CompareInterruptEnable

Compare interrupt.

enumerator kQTMR_Compare1InterruptEnable

Compare 1 interrupt.

enumerator kQTMR_Compare2InterruptEnable

Compare 2 interrupt.

enumerator kQTMR_OverflowInterruptEnable

Timer overflow interrupt.

enumerator kQTMR_EdgeInterruptEnable

Input edge interrupt.

enum __qtmr_status_flags

List of Quad Timer flags.

Values:

enumerator kQTMR_CompareFlag

Compare flag

enumerator kQTMR_Compare1Flag

Compare 1 flag

enumerator kQTMR_Compare2Flag

Compare 2 flag

enumerator kQTMR_OverflowFlag

Timer overflow flag

enumerator kQTMR_EdgeFlag

Input edge flag

enum __qtmr_channel_selection

List of channel selection.

Values:

enumerator kQTMR_Channel_0

TMR Channel 0

enumerator kQTMR_Channel_1

TMR Channel 1

enumerator kQTMR_Channel_2

TMR Channel 2

enumerator kQTMR_Channel_3

TMR Channel 3

enum __qtmr_dma_enable

List of Quad Timer DMA enable.

Values:

enumerator kQTMR_InputEdgeFlagDmaEnable

Input Edge Flag DMA Enable.

enumerator kQTMR_ComparatorPreload1DmaEnable

Comparator Preload Register 1 DMA Enable.

enumerator kQTMR_ComparatorPreload2DmaEnable

Comparator Preload Register 2 DMA Enable.

typedef enum __qtmr_primary_count_source qtmr_primary_count_source_t

Quad Timer primary clock source selection.

typedef enum __qtmr_input_source qtmr_input_source_t

Quad Timer input sources selection.

typedef enum __qtmr_counting_mode qtmr_counting_mode_t

Quad Timer counting mode selection.

typedef enum __qtmr_pwm_out_state qtmr_pwm_out_state_t

Quad Timer PWM output state.

typedef enum __qtmr_output_mode qtmr_output_mode_t

Quad Timer output mode selection.

typedef enum __qtmr_input_capture_edge qtmr_input_capture_edge_t

Quad Timer input capture edge mode, rising edge, or falling edge.

typedef enum __qtmr_preload_control qtmr_preload_control_t

Quad Timer input capture edge mode, rising edge, or falling edge.

typedef enum __qtmr_debug_action qtmr_debug_action_t

List of Quad Timer run options when in Debug mode.

```
typedef enum _qtmr_interrupt_enable qtmr_interrupt_enable_t
```

List of Quad Timer interrupts.

```
typedef enum _qtmr_status_flags qtmr_status_flags_t
```

List of Quad Timer flags.

```
typedef enum _qtmr_channel_selection qtmr_channel_selection_t
```

List of channel selection.

```
typedef enum _qtmr_dma_enable qtmr_dma_enable_t
```

List of Quad Timer DMA enable.

```
typedef struct _qtmr_config qtmr_config_t
```

Quad Timer config structure.

This structure holds the configuration settings for the Quad Timer peripheral. To initialize this structure to reasonable defaults, call the QTMR_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

```
status_t QTMR_SetupPwm(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t
    pwmFreqHz, uint8_t dutyCyclePercent, bool outputPolarity,
    uint32_t srcClock_Hz)
```

Sets up Quad timer module for PWM signal output.

The function initializes the timer module according to the parameters passed in by the user. The function also sets up the value compare registers to match the PWM signal requirements.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- pwmFreqHz – PWM signal frequency in Hz
- dutyCyclePercent – PWM pulse width, value should be between 0 to 100
0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)
- outputPolarity – true: invert polarity of the output signal, false: no inversion
- srcClock_Hz – Main counter clock in Hz.

Returns

Returns an error if there was error setting up the signal.

```
void QTMR_SetupInputCapture(TMR_Type *base, qtmr_channel_selection_t channel,
    qtmr_input_source_t capturePin, bool inputPolarity, bool
    reloadOnCapture, qtmr_input_capture_edge_t captureMode)
```

Allows the user to count the source clock cycles until a capture event arrives.

The count is stored in the capture register.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- capturePin – Pin through which we receive the input signal to trigger the capture
- inputPolarity – true: invert polarity of the input signal, false: no inversion

- reloadOnCapture – true: reload the counter when an input capture occurs, false: no reload
- captureMode – Specifies which edge of the input signal triggers a capture

TMR_CSCTRL_OFLAG_MASK

TMR_CSCTRL_OFLAG_SHIFT

struct __qtmr_config

#include <fsl_qtmr.h> Quad Timer config structure.

This structure holds the configuration settings for the Quad Timer peripheral. To initialize this structure to reasonable defaults, call the QTMR_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

qtmr_primary_count_source_t primarySource

Specify the primary count source

qtmr_input_source_t secondarySource

Specify the secondary count source

bool enableMasterMode

true: Broadcast compare function output to other counters; false no broadcast

bool enableExternalForce

true: Compare from another counter force state of OFLAG signal false: OFLAG controlled by local counter

uint8_t faultFilterCount

Fault filter count

uint8_t faultFilterPeriod

Fault filter period; value of 0 will bypass the filter

qtmr_debug_action_t debugMode

Operation in Debug mode

2.43 Reset Driver

enum __SYSCON_RSTn

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

Values:

enumerator kAonUART_RST_SHIFT_RSTn

AON UART reset control

enumerator kAonI2C_RST_SHIFT_RSTn

AON I2C reset control

enumerator kAonCAL_RST_SHIFT_RSTn

AON CAL reset control

enumerator kAonQTMR0_RST_SHIFT_RSTn

AON QTMR0 reset control

enumerator kAonLPTMR_RST_SHIFT_RSTn

AON LPTMR reset control

enumerator kAonKPP_RST_SHIFT_RSTn

AON KPP reset control

enumerator kAonLPADC_RST_SHIFT_RSTn

AON LPADC reset control

enumerator kAonLCD_RST_SHIFT_RSTn

AON LCD reset control

enumerator kAonSecurity_RST_SHIFT_RSTn

AON Security reset control

enumerator kAonACMP0_RST_SHIFT_RSTn

AON ACMP reset control

enumerator kAonADVC2P0_RST_SHIFT_RSTn

AON ADVC2P0 reset control

enumerator NotAvail_RSTn

No reset control

typedef enum _SYSCON_RSTn SYSCON_RSTn_t

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

typedef SYSCON_RSTn_t reset_ip_name_t

void RESET_SetPeripheralReset(*reset_ip_name_t* peripheral)

Assert reset to peripheral.

Asserts reset signal to specified peripheral module.

Parameters

- peripheral – Assert reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

void RESET_ClearPeripheralReset(*reset_ip_name_t* peripheral)

Clear reset to peripheral.

Clears reset signal to specified peripheral module, allows it to operate.

Parameters

- peripheral – Clear reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

void RESET_PeripheralReset(*reset_ip_name_t* peripheral)

Reset peripheral module.

Reset peripheral module.

Parameters

- peripheral – Peripheral to reset. The enum argument contains encoding of reset register and reset bit position in the reset register.

static inline void RESET_ReleasePeripheralReset(*reset_ip_name_t* peripheral)

Release peripheral module.

Release peripheral module.

Parameters

- *peripheral* – Peripheral to release. The enum argument contains encoding of reset register and reset bit position in the reset register.

FSL_RESET_DRIVER_VERSION

reset driver version 2.5.0

LPUART_RSTS

LPI2C_RSTS

CTIMER_RSTS

PORT_RSTS_N

PORT_RSTS_N

GPIO_RSTS_N

GPIO_RSTS_N

LPCMP_RSTS

AON_LPADC_RSTS

2.44 ROMAPI Driver

enum _flash_property_tag

Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflashSectorSize

Pflash sector size property.

enumerator kFLASH_PropertyPflashTotalSize

Pflash total size property.

enumerator kFLASH_PropertyPflashBlockSize

Pflash block size property.

enumerator kFLASH_PropertyPflashBlockCount

Pflash block count property.

enumerator kFLASH_PropertyPflashBlockBaseAddr

Pflash block base address property.

enumerator kFLASH_PropertyPflashPageSize

Pflash page size property.

enumerator kFLASH_PropertyPflashSystemFreq

System Frequency property.

enumerator kFLASH_PropertyFfrSectorSize

FFR sector size property.

enumerator kFLASH_PropertyFfrTotalSize
FFR total size property.

enumerator kFLASH_PropertyFfrBlockBaseAddr
FFR block base address property.

enumerator kFLASH_PropertyFfrPageSize
FFR page size property.

enum _flash_driver_api_keys
Enumeration for Flash driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFLASH_ApiEraseKey
Key value used to validate all flash erase APIs.

typedef enum *_flash_property_tag* flash_property_tag_t
Enumeration for various flash properties.

typedef struct *_flash_ffr_config* flash_ffr_config_t
Flash controller paramter config.

typedef struct *_flash_config* flash_config_t
Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

typedef struct *_flash_driver_interface* flash_driver_interface_t
Interface for the flash driver.

typedef struct *_bootloader_tree* bootloader_tree_t
Root of the bootloader API tree.

An instance of this struct resides in read-only memory in the bootloader. It provides a user application access to APIs exported by the bootloader.

FSL_ROMAPI_DRIVER_VERSION
romapi driver version 2.0.0.

FOUR_CHAR_CODE(a, b, c, d)
Constructs the four character code for the Flash driver API key.

ROM_API_BASE
ROM API base address

ROM_API
ROM API base pointer

FLASH_API
FLASH API base pointer

uint32_t ffrBlockBase

uint32_t ffrTotalSize

uint32_t ffrPageSize

uint32_t sectorSize

uint32_t cfpaPageVersion

uint32_t cfpaPageOffset

uint32_t PFlashBlockBase

A base address of the first PFlash block

uint32_t PFlashTotalSize

The size of the combined PFlash block.

uint32_t PFlashBlockCount

A number of PFlash blocks.

uint32_t PFlashPageSize

The size in bytes of a page of PFlash.

uint32_t PFlashSectorSize

The size in bytes of a sector of PFlash.

flash_ffr_config_t ffrConfig

status_t (*flash_init)(*flash_config_t* *config)

status_t (*flash_erase_sector)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

status_t (*flash_program_phrase)(*flash_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

status_t (*flash_program_page)(*flash_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

status_t (*flash_verify_program)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, uint32_t *failedAddress, uint32_t *failedData)

status_t (*flash_verify_erase_phrase)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_verify_erase_page)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_verify_erase_sector)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_get_property)(*flash_config_t* *config, *flash_property_tag_t* whichProperty, uint32_t *value)

status_t (*ifr_verify_erase_phrase)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*ifr_verify_erase_page)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*ifr_verify_erase_sector)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_read)(*flash_config_t* *config, uint32_t start, uint8_t *dest, uint32_t lengthInBytes)

uint32_t version

uint32_t reserved

uint32_t boot_image_index

uint32_t instance

uint32_t boot_interface

uint32_t mode

uint32_t tag

struct *user_app_boot_invoke_option_t* B

uint32_t U

union *user_app_boot_invoke_option_t* option

void (*run_bootloader)(void *arg)

Function to start the bootloader executing.

const *flash_driver_interface_t* *flash_driver

Internal Flash driver API.

void (*jump)(void *arg)

FSL_COMPONENT_ID

struct *_flash_ffr_config*

#include <fsl_romapi.h> Flash controller paramter config.

struct *_flash_config*

#include <fsl_romapi.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

struct *_flash_driver_interface*

#include <fsl_romapi.h> Interface for the flash driver.

struct *user_app_boot_invoke_option_t*

#include <fsl_romapi.h>

struct *_bootloader_tree*

#include <fsl_romapi.h> Root of the bootloader API tree.

An instance of this struct resides in read-only memory in the bootloader. It provides a user application access to APIs exported by the bootloader.

union option

Public Members

struct *user_app_boot_invoke_option_t* B

uint32_t U

struct B

2.45 RTC: Real Time Clock

void RTC_GetDefaultConfig(*rtc_config_t* *config)

Fills the RTC configuration structure with default values.

The default values are chosen for safe and common startup behavior. For example:

```

config->operatingMode           = kRTC_ModeTimeDate;
config->enableXtal32             = true;
config->enable2kHzOutputSMM     = false;
config->alarmInitialEnable[0]   = false;
config->alarmInitialEnable[1]   = false;
config->alarmInitialEnable[2]   = false;
config->enableWatchdog          = false;
config->watchdogTimeoutValue     = 0U;
config->tamperConfig.enableGlobalTamper = false;
config->tamperConfig.tamperInputConfig[0].enableTamperInput = false;
config->tamperConfig.tamperInputConfig[0].polarity = kRTC_TamperPolarityLow;
config->tamperConfig.tamperInputConfig[0].pullup = kRTC_TamperPullupDisabled;
config->tamperConfig.tamperInputConfig[0].filter = kRTC_TamperFilterDisabled;
config->tamperConfig.tamperInputConfig[1].enableTamperInput = false;
config->tamperConfig.tamperInputConfig[1].polarity = kRTC_TamperPolarityLow;
config->tamperConfig.tamperInputConfig[1].pullup = kRTC_TamperPullupDisabled;
config->tamperConfig.tamperInputConfig[1].filter = kRTC_TamperFilterDisabled;
config->aliveDetectorConfig.enableAliveDetector = false;
config->aliveDetectorConfig.bypassAnalogAliveMechanism = false;
config->aliveDetectorConfig.mechanismPeriod = 0U;

```

This function should be called before `RTC_Init()` if custom configuration is not fully provided.

Parameters

- `config` – Pointer to the `rtc_config_t` structure to be filled.

status_t `RTC_Init(RTC_Type *base, const rtc_config_t *config)`

Initializes the RTC peripheral.

This function configures the RTC module according to the settings provided in the `config` structure. It setups initial operating mode, watchdog, tamper detection, and alive detector.

Parameters

- `base` – RTC peripheral base address.
- `config` – Pointer to the user-defined `rtc_config_t` structure.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready,

status_t `RTC_Deinit(RTC_Type *base)`

De-initializes the RTC peripheral.

This function resets RTC registers to a default state and stops the RTC.

Parameters

- `base` – RTC peripheral base address.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t `RTC_StartTimer(RTC_Type *base)`

Starts the RTC time counter.

Parameters

- `base` – RTC peripheral base address

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the current RTC date and time.

Validates the provided date and time before setting. If the input is invalid, an error status is returned.

Parameters

- base – RTC peripheral base address.
- datetime – Pointer to the *rtc_datetime_t* structure containing the new date and time.

Returns

kStatus_Success if the operation was successful, kStatus_Fail if RTC is not working in time date mode, kStatus_InvalidArgument if the input was invalid, kStatus_Timeout if the interface is not ready.

status_t RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Retrieves the current RTC date and time.

Parameters

- base – RTC peripheral base address.
- datetime – Pointer to the *rtc_datetime_t* structure to store the current date and time.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if not in time/date mode, kStatus_Fail if a read collision occurred, kStatus_Timeout if the interface is not ready.

status_t RTC_SetFreeRunningCounter(RTC_Type *base, uint64_t countValue)

Sets the initial value of the RTC free-running counter.

This function is applicable only when the RTC is in Free-Running Counter mode.

Parameters

- base – RTC peripheral base address.
- countValue – The initial value to set for the counter.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_GetFreeRunningCounter(RTC_Type *base, uint64_t *countValue)

Retrieves the current value of the RTC free-running counter.

This function is applicable only when the RTC is in Free-Running Counter mode.

Parameters

- base – RTC peripheral base address.
- countValue – Pointer to a variable to store the current counter value.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if not in free-running mode, or kStatus_Fail if a read collision occurred, kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureBCDAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId, const *rtc_bcd_alarm_config_t* *alarmConfig)

Configures a specific RTC BCD alarm.

Sets the alarm time, date, mask, mode, and initial enable state. The number of alarms is MCU-dependent (e.g., 3 alarms: Alarm0, Alarm1, Alarm2).

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to configure (e.g., kRTC_Alarm_0).
- alarmConfig – Pointer to the *rtc_bcd_alarm_config_t* structure with alarm settings.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureFreeRunningAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId, const *rtc_free_run_alarm_config_t* *alarmConfig)

Configures a specific RTC free running mode alarm.

Select the alarm id and set the alarm counter value

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to configure (e.g., kRTC_Alarm_0).
- alarmConfig – Pointer to the *rtc_free_run_alarm_config_t* structure with alarm settings.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_EnableAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId)

Enables a specific RTC alarm.

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to enable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId)

Disables a specific RTC alarm.

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to disable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables specified RTC interrupt sources.

Parameters

- base – RTC peripheral base address.
- mask – Bitmask of interrupts to enable (see `rtc_interrupt_enable_t`).

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables specified RTC interrupt sources.

Parameters

- base – RTC peripheral base address.
- mask – Bitmask of interrupts to disable (see `rtc_interrupt_enable_t`).

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

static inline uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

enabled interrupts bitmask.

static inline uint32_t RTC_GetInterruptFlags(RTC_Type *base)

Get the RTC interrupt flags.

Parameters

- base – RTC peripheral base address

Returns

Occured interrupt flags bitmask.

status_t RTC_ClearInterruptFlags(RTC_Type *base, uint32_t mask)

Clears the RTC interrupt flags.

Parameters

- base – RTC peripheral base address
- mask – The interrupt flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

void RTC_RegisterCallBack(*rtc_callback_t* cb_func)

Register callback.

Parameters

- cb_func – callback function

status_t RTC_EnableWatchdog(RTC_Type *base)

Enables the RTC Watchdog Timer. Assumes timeout is already configured via RTC_Init or RTC_SetWatchdogTimeout.

Parameters

- base – RTC peripheral base address.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableWatchdog(RTC_Type *base)

Disables the RTC Watchdog Timer.

Parameters

- base – RTC peripheral base address.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_SetWatchdogTimeout(RTC_Type *base, uint32_t timeoutValue)

Sets the timeout value for the RTC Watchdog Timer.

Parameters

- base – RTC peripheral base address.
- timeoutValue – The desired timeout value.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_RefreshWatchdog(RTC_Type *base)

Refreshes the RTC Watchdog Timer.

Parameters

- base – RTC peripheral base address. return kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureTamperInput(RTC_Type *base, rtc_tamper_input_id_t tamperInputId, const rtc_tamper_input_config_t *config)

Configures a specific tamper detection input.

This function sets up the tamper input configuration, including enabling/disabling the input, setting polarity, pullup and filters.

Parameters

- base – RTC peripheral base address.
- config – Pointer to the rtc_tamper_config_t structure containing tamper input settings. This structure defines the behavior of the tamper input, such as polarity, pull-up configuration, and filtering.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_EnableTamperInputPin(RTC_Type *base, rtc_tamper_input_id_t tamperInputId)

Enables the specific tamper detection input pin.

Parameters

- base – RTC peripheral base address.

- `tamperInputId` – Bitmask of tamper inputs to enable.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t `RTC_DisableTamperInputPin(RTC_Type *base, rtc_tamper_input_id_t tamperInputId)`

Disable the specific tamper detection input pin.

Parameters

- `base` – RTC peripheral base address.
- `tamperInputId` – Bitmask of tamper inputs to disable.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t `RTC_GetTamperTimestamp(RTC_Type *base, uint64_t *latchedCount)`

Gets the latched RTC counter value at the time of the last tamper event.

Parameters

- `base` – RTC peripheral base address.
- `latchedCount` – Pointer to a variable where the latched counter value will be stored.

Returns

`kStatus_Success` if the operation was successful, `kStatus_InvalidArgument` if not in tamper mode,

status_t `RTC_WriteKey(RTC_Type *base, const uint32_t *keyData)`

Writes a key to the RTC's non-volatile storage.

Parameters

- `base` – RTC peripheral base address.
- `keyData` – Pointer to the key data to be written.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t `RTC_ReadKey(RTC_Type *base, uint32_t *keyBuffer)`

Reads a key from the RTC's non-volatile storage.

Parameters

- `base` – RTC peripheral base address.
- `keyBuffer` – Pointer to a buffer where the key data will be stored.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Fail` if `SECURE_KEY_READY` is not set.

status_t `RTC_ConfigureAliveDetector(RTC_Type *base, const rtc_alive_detector_config_t *config)`

Enables the RTC alive detector.

Parameters

- `base` – RTC peripheral base address.
- `config` – Pointer to the `rtc_alive_detector_config_t` structure containing alive detector settings.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

FSL_RTC_DRIVER_VERSION

Version 1.0.0

RTC_SECURE_KEY_SIZE_BYTES

RTC_SECURE_KEY_REG_COUNT

RTC_MAX_TAMPER_INPUTS

enum _rtc_operating_mode

RTC operating modes.

Values:

enumerator kRTC_ModeTimeDate

RTC operates in Time/Date counting mode.

enumerator kRTC_ModeFreeRunningCounter

RTC operates as a free-running counter.

enum _rtc_alarm_id

RTC Alarm identifiers. Corresponds to Alarm 0, 1, 2.

Values:

enumerator kRTC_Alarm_0

Identifier for Alarm 0

enumerator kRTC_Alarm_1

Identifier for Alarm 1

enumerator kRTC_Alarm_2

Identifier for Alarm 2

enum _rtc_alarm_mode

RTC alarm operational modes.

Values:

enumerator kRTC_AlarmModeSingleShot

Alarm triggers once and then (typically) disables itself or requires re-arming.

enumerator kRTC_AlarmModeRepeat

Alarm triggers repeatedly based on its configuration (e.g., daily, weekly).

enum _rtc_alarm_mask_fields

RTC alarm mask fields. Used with rtc_bcd_alarm_config_t's mask member. Set a bit to 1 to ignore the corresponding field for alarm matching.

Values:

enumerator kRTC_AlarmMaskIgnoreNothing

Match all fields specified in alarm time/date.

enumerator kRTC_AlarmMaskIgnoreSecond

Ignore seconds field for alarm match.

enumerator kRTC_AlarmMaskIgnoreMinute

Ignore minutes field for alarm match.

enumerator kRTC_AlarmMaskIgnoreHour

Ignore hours field for alarm match.

enumerator kRTC_AlarmMaskIgnoreDay

Ignore day of the month field for alarm match.

enumerator kRTC_AlarmMaskIgnoreDayOfWeek

Ignore day of the week field for alarm match.

enumerator kRTC_AlarmMaskIgnoreMonth

Ignore month field for alarm match.

enumerator kRTC_AlarmMaskIgnoreAll

Ignore all field for alarm match.

enum _rtc_tamper_input_id

RTC Tamper input identifiers. Corresponds to Tamper 0, 1.

Values:

enumerator kRTC_TamperInput0

Enable Tamper input 0.

enumerator kRTC_TamperInput1

Enable Tamper input 1.

enum _rtc_tamper_filter

RTC tamper input filter configuration.

Values:

enumerator kRTC_TamperFilterDisabled

Digital filter disabled for this tamper input.

enumerator kRTC_TamperFilterEnabled

Digital filter enabled for this tamper input.

enum _rtc_tamper_polarity

RTC tamper input trigger level.

Values:

enumerator kRTC_TamperPolarityLow

Tamper event triggered on a low level or falling edge.

enumerator kRTC_TamperPolarityHigh

Tamper event triggered on a high level or rising edge.

enum _rtc_tamper_pullup

RTC tamper input pull-up configuration.

Values:

enumerator kRTC_TamperPullupDisabled

No pull-up resistor enabled for this tamper input.

enumerator kRTC_TamperPullupEnabled

Pull-up resistor enabled for this tamper input.

enum _rtc_callback_type

Callback type identifiers for RTC events.

Values:

enumerator kRTC_Alarm0Callback

Alarm 0 interrupt callback type

enumerator kRTC_Alarm1Callback

Alarm 1 interrupt callback type

enumerator kRTC_Alarm2Callback

Alarm 2 interrupt callback type

enumerator kRTC_XtalFailCallback

XTAL Fail interrupt callback type

enumerator kRTC_WatchDogCallback

WatchDog timer timeout interrupt callback type

enumerator kRTC_Tamper0Callback

Tamper 0 detection interrupt callback type

enumerator kRTC_Tamper1Callback

Tamper 1 detection interrupt callback type

enum _rtc_interrupt_enable

RTC interrupt enable masks. Use bitwise OR to enable multiple interrupts.

Values:

enumerator kRTC_Alarm0InterruptEnable

Enable Alarm 0 interrupt.

enumerator kRTC_Alarm1InterruptEnable

Enable Alarm 1 interrupt.

enumerator kRTC_Alarm2InterruptEnable

Enable Alarm 2 interrupt.

enumerator kRTC_XtalFailInterruptEnable

Enable XTAL Fail interrupt.

enumerator kRTC_WatchdogInterruptEnable

Enable Watchdog timeout interrupt.

enumerator kRTC_Tamper0InterruptEnable

Enable Tamper 0 detection interrupt.

enumerator kRTC_Tamper1InterruptEnable

Enable Tamper 1 detection interrupt.

enumerator kRTC_AllInterruptsEnable

Enable all RTC interrupts.

enum _rtc_status_flags

RTC status flags. Use bitwise OR to check multiple flags.

Values:

enumerator kRTC_Alarm0InterruptFlag

Alarm 0 flag.

enumerator kRTC_Alarm1InterruptFlag

Alarm 1 flag.

enumerator kRTC_Alarm2InterruptFlag

Alarm 2 flag.

enumerator `kRTC_XtalFailInterruptFlag`
XTAL Fail flag.

enumerator `kRTC_WatchdogInterruptFlag`
Watchdog timeout flag.

enumerator `kRTC_Tamper0InterruptFlag`
Tamper 0 detection flag.

enumerator `kRTC_Tamper1InterruptFlag`
Tamper 1 detection flag.

enumerator `kRTC_AllStatusFlags`
Mask for all RTC status flags.

typedef enum `_rtc_operating_mode` `rtc_operating_mode_t`
RTC operating modes.

typedef struct `_rtc_datetime` `rtc_datetime_t`
RTC date and time structure.

typedef enum `_rtc_alarm_id` `rtc_alarm_id_t`
RTC Alarm identifiers. Corresponds to Alarm 0, 1, 2.

typedef enum `_rtc_alarm_mode` `rtc_alarm_mode_t`
RTC alarm operational modes.

typedef enum `_rtc_alarm_mask_fields` `rtc_alarm_mask_fields_t`
RTC alarm mask fields. Used with `rtc_bcd_alarm_config_t`'s mask member. Set a bit to 1 to ignore the corresponding field for alarm matching.

typedef struct `_rtc_alarm_config` `rtc_bcd_alarm_config_t`
RTC bcd alarm configuration structure.

typedef struct `_rtc_free_run_alarm_config` `rtc_free_run_alarm_config_t`
RTC free run mode alarm

typedef enum `_rtc_tamper_input_id` `rtc_tamper_input_id_t`
RTC Tamper input identifiers. Corresponds to Tamper 0, 1.

typedef enum `_rtc_tamper_filter` `rtc_tamper_filter_t`
RTC tamper input filter configuration.

typedef enum `_rtc_tamper_polarity` `rtc_tamper_polarity_t`
RTC tamper input trigger level.

typedef enum `_rtc_tamper_pullup` `rtc_tamper_pullup_t`
RTC tamper input pull-up configuration.

typedef struct `_rtc_tamper_input_config` `rtc_tamper_input_config_t`
RTC tamper input configuration structure.

typedef struct `_rtc_tamper_config` `rtc_tamper_config_t`
RTC global tamper detection configuration structure.

typedef struct `_rtc_alive_detector_config` `rtc_alive_detector_config_t`
RTC alive detector configuration structure.

typedef struct `_rtc_config` `rtc_config_t`
RTC general configuration structure.

typedef enum `_rtc_callback_type` `rtc_callback_type_t`
Callback type identifiers for RTC events.

`typedef enum _rtc_interrupt_enable` `rtc_interrupt_enable_t`

RTC interrupt enable masks. Use bitwise OR to enable multiple interrupts.

`typedef enum _rtc_status_flags` `rtc_status_flags_t`

RTC status flags. Use bitwise OR to check multiple flags.

`typedef void (*rtc_callback_t)(rtc_callback_type_t type)`

RTC callback function pointer type.

`status_t` `RTC_EnableAliveDetector(RTC_Type *base)`

Alive detector enable.

Parameters

- `base` – RTC peripheral base address.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

`status_t` `RTC_DisableAliveDetector(RTC_Type *base)`

Alive detector disable.

Parameters

- `base` – RTC peripheral base address.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

`RTC_WAIT_INTERFACE_READY_TIMEOUT`

RTC wait interface ready timeout

`RTC_WAIT_READ_COUNTER_LATCHED_READY`

RTC wait read counter latched timeout

`RTC_WAIT_SECURE_KEY_READY_TIMEOUT`

RTC wait secure key ready timeout

`struct _rtc_datetime`

`#include <fsl_rtc.h>` RTC date and time structure.

Public Members

`uint16_t` `year`

Year (e.g., 2023)

`uint8_t` `month`

Month (1-12)

`uint8_t` `day`

Day of the month (1-31)

`uint8_t` `hour`

Hour (0-23)

`uint8_t` `minute`

Minute (0-59)

`uint8_t` `second`

Second (0-59)

uint8_t hundredthOfSecond
Hundredth of a second (0-99)

uint8_t dayOfWeek
Day of the week (e.g., 0 for Sunday, 1 for Monday, etc.)

struct _rtc_alarm_config
#include <fsl_rtc.h> RTC bcd alarm configuration structure.

Public Members

uint8_t hour
Alarm hour (0-23). Relevant if not masked.

uint8_t minute
Alarm minute (0-59). Relevant if not masked.

uint8_t second
Alarm second (0-59). Relevant if not masked.

uint8_t hundredthOfSecond
Alarm hundredth of second (0-99).

uint8_t day
Alarm day of the month (1-31). Relevant if not masked.

uint8_t dayOfWeek
Alarm day of the week. Sunday is 0, Monday is 1. Relevant if not masked.

uint8_t month
Alarm month (1-12). Relevant if not masked.

uint8_t mask
Alarm mask, it a logical OR of members of the enumeration rtc_alarm_mask_fields_t.

rtc_alarm_mode_t mode
Alarm mode: kRTC_AlarmModeSingleShot or kRTC_AlarmModeRepeat.

bool enable
Initial enable state for this alarm when configured. True to enable, false to disable.

struct _rtc_free_run_alarm_config
#include <fsl_rtc.h> RTC free run mode alarm

Public Members

uint64_t alarmCounter
Alarm counter value.

rtc_alarm_mode_t mode
Alarm mode: kRTC_AlarmModeSingleShot or kRTC_AlarmModeRepeat.

bool enable
Initial enable state for this alarm when configured. True to enable, false to disable.

struct _rtc_tamper_input_config
#include <fsl_rtc.h> RTC tamper input configuration structure.

Public Members

bool enableTamperInput

True to enable this tamper input, false to disable. (Maps to TAMP_CTRL[TAMP_EN] bit)

rtc_tamper_polarity_t polarity

Trigger level for this tamper input.

rtc_tamper_pullup_t pullup

Pull-up configuration for this tamper input.

rtc_tamper_filter_t filter

Digital filter configuration for this tamper input.

struct *_rtc_tamper_config*

#include <fsl_rtc.h> RTC global tamper detection configuration structure.

Public Members

bool enableGlobalTamper

Master enable for the tamper detection sub-module.

rtc_tamper_input_config_t tamperInputConfig[2]

Configuration for the tamper input pins. This structure is used to configure each tamper input pin's behavior, such as trigger level, pull-up, and filtering.

struct *_rtc_alive_detector_config*

#include <fsl_rtc.h> RTC alive detector configuration structure.

Public Members

bool enableAliveDetector

True to enable the RTC alive detector, false to disable.

bool bypassAnalogAliveMechanism

Bypass the RTC analog alive mechanism, implemented at the PAC. After de-activation of the SMM reset this value is sample back value from PAC.

uint8_t mechanismPeriod

Define the length of the active period of the Alive Detector Mechanism in 2KHz clock cycles

struct *_rtc_config*

#include <fsl_rtc.h> RTC general configuration structure.

Public Members

rtc_operating_mode_t operatingMode

RTC operating mode: Time/Date or Free-Running Counter.

bool enableXtal32

Enable/disable the 32kHz crystal oscillator circuitry. True to enable.

bool enable2kHzOutputSMM

Enable/disable 2kHz output towards SMM. True to enable.

bool alarmInitialEnable[3]

Initial enable state for Alarm 0, 1, 2. True to enable.

`bool enableWatchdog`

Initial enable state for the Watchdog Timer. True to enable.

`uint32_t watchdogTimeoutValue`

Watchdog Timer timeout value (units are MCU specific, e.g., seconds or RTC clock cycles).

`rtc_tamper_config_t tamperConfig`

Tamper detection configuration.

`rtc_alive_detector_config_t aliveDetectorConfig`

RTC alive detector configuration.

2.46 SLCD: Segment LCD Driver

`void SLCD_Init(SLCD_Type *base, const slcd_config_t *configure)`

Initializes the SLCD, ungates the module clock, initializes the power setting, enables all used plane pins, and sets with interrupt and work mode with the configuration.

Parameters

- `base` – SLCD peripheral base address.
- `configure` – SLCD configuration pointer. For the configuration structure, many parameters have the default setting and the `SGLCD_Getdefaultconfig()` is provided to get them. Use it verified for their applications. The others have no default settings, such as “clk-Config”, and must be provided by the application before calling the `SGLCD_Init()` API.

`void SLCD_Deinit(SLCD_Type *base)`

Deinitializes the SLCD module, gates the module clock, disables an interrupt, and displays the SLCD.

Parameters

- `base` – SLCD peripheral base address.

`void SLCD_GetDefaultConfig(slcd_config_t *configure)`

Gets the SLCD default configuration structure. The purpose of this API is to get default parameters of the configuration structure for the `SGLCD_Init()`. Use these initialized parameters unchanged in `SGLCD_Init()` or modify fields of the structure before the calling `SGLCD_Init()`. All default parameters of the configure structuration are listed.

```
config.displayMode      = kSLCD_NormalMode;
config.powerSupply      = kSLCD_InternalVll3UseChargePump;
config.voltageTrim      = kSLCD_RegulatedVolatgeTrim00;
config.lowPowerBehavior = kSLCD_EnabledInWaitStop;
config.interruptSrc     = 0;
config.faultConfig      = NULL;
config.frameFreqIntEnable = false;
```

Parameters

- `configure` – The SLCD configuration structure pointer.

`static inline void SLCD_StartDisplay(SLCD_Type *base)`

Enables the SLCD controller, starts generation, and displays the front plane and back plane waveform.

Parameters

- base – SLCD peripheral base address.

static inline void SLCD_StopDisplay(*SLCD_Type* *base)

Stops the SLCD controller. There is no waveform generator and all enabled pins only output a low value.

Parameters

- base – SLCD peripheral base address.

void SLCD_StartBlinkMode(*SLCD_Type* *base, *slcd_blink_mode_t* mode, *slcd_blink_rate_t* rate)

Starts the SLCD blink mode.

Parameters

- base – SLCD peripheral base address.
- mode – SLCD blink mode.
- rate – SLCD blink rate.

static inline void SLCD_StopBlinkMode(*SLCD_Type* *base)

Stops the SLCD blink mode.

Parameters

- base – SLCD peripheral base address.

static inline void SLCD_SetBackPlanePhase(*SLCD_Type* *base, uint32_t pinIndx, *slcd_phase_type_t* phase)

Sets the SLCD back plane pin phase.

This function sets the SLCD back plane pin phase. “kSLCD_PhaseXActivate” setting means the phase X is active for the back plane pin. “kSLCD_NoPhaseActivate” setting means there is no phase active for the back plane pin. For example, set the back plane pin 20 for phase A.

```
SLCD_SetBackPlanePhase(LCD, 20, kSLCD_PhaseAActivate);
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- phase – The phase activates for the back plane pin.

static inline void SLCD_SetFrontPlaneSegments(*SLCD_Type* *base, uint32_t pinIndx, uint8_t operation)

Sets the SLCD front plane segment operation for a front plane pin.

This function sets the SLCD front plane segment on or off operation. Each bit turns on or off the segments associated with the front plane pin in the following pattern: HGFEDCBA (most significant bit controls segment H and least significant bit controls segment A). For example, turn on the front plane pin 20 for phase B and phase C.

```
SLCD_SetFrontPlaneSegments(LCD, 20, (kSLCD_PhaseBActivate | kSLCD_PhaseCAActivate));
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- operation – The operation for the segment on the front plane pin. This is a logical OR of the enumeration :: *slcd_phase_type_t*.

```
static inline void SLCD_SetFrontPlaneOnePhase(SLCD_Type *base, uint32_t pinIndx,
                                             slcd_phase_index_t phaseIndx, bool enable)
```

Sets one SLCD front plane pin for one phase.

This function can be used to set one phase on or off for the front plane pin. It can be call many times to set the plane pin for different phase indexes. For example, turn on the front plane pin 20 for phase B and phase C.

```
SLCD_SetFrontPlaneOnePhase(LCD, 20, kSLCD_PhaseBIndex, true);
SLCD_SetFrontPlaneOnePhase(LCD, 20, kSLCD_PhaseCIndex, true);
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- phaseIndx – The phase bit index *slcd_phase_index_t*.
- enable – True to turn on the segment for phaseIndx phase false to turn off the segment for phaseIndx phase.

```
static inline uint32_t SLCD_GetFaultDetectCounter(SLCD_Type *base)
```

Gets the SLCD fault detect counter.

This function gets the number of samples inside the fault detection sample window.

Parameters

- base – SLCD peripheral base address.

Returns

The fault detect counter. The maximum return value is 255. If the maximum 255 returns, the overflow may happen. Reconfigure the fault detect sample window and fault detect clock prescaler for proper sampling.

```
void SLCD_EnableInterrupts(SLCD_Type *base, uint32_t mask)
```

Enables the SLCD interrupt. For example, to enable fault detect complete interrupt and frame frequency interrupt, do the following.

```
SLCD_EnableInterrupts(LCD, kSLCD_FaultDetectCompleteInterrupt | kSLCD_FrameFreqInterrupt);
```

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupts to enable. This is a logical OR of the enumeration :: *slcd_interrupt_enable_t*.

```
void SLCD_DisableInterrupts(SLCD_Type *base, uint32_t mask)
```

Disables the SLCD interrupt. For example, to disable fault detect complete interrupt and frame frequency interrupt, do the following.

```
SLCD_DisableInterrupts(LCD, kSLCD_FaultDetectCompleteInterrupt | kSLCD_FrameFreqInterrupt);
```

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupts to disable. This is a logical OR of the enumeration :: *slcd_interrupt_enable_t*.

uint32_t SLCD_GetInterruptStatus(*SLCD_Type* *base)

Gets the SLCD interrupt status flag.

Parameters

- base – SLCD peripheral base address.

Returns

The event status of the interrupt source. This is the logical OR of members of the enumeration :: slcd_interrupt_enable_t.

void SLCD_ClearInterruptStatus(*SLCD_Type* *base, uint32_t mask)

Clears the SLCD interrupt events status flag.

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupt source to be cleared. This is the logical OR of members of the enumeration :: slcd_interrupt_enable_t.

FSL_SLCD_DRIVER_VERSION

SLCD driver version.

enum _slcd_clock_prescaler

SLCD clock prescaler to generate frame frequency.

Values:

enumerator kSLCD_ClkPrescaler00

Prescaler 0.

enumerator kSLCD_ClkPrescaler01

Prescaler 1.

enumerator kSLCD_ClkPrescaler02

Prescaler 2.

enumerator kSLCD_ClkPrescaler03

Prescaler 3.

enumerator kSLCD_ClkPrescaler04

Prescaler 4.

enumerator kSLCD_ClkPrescaler05

Prescaler 5.

enumerator kSLCD_ClkPrescaler06

Prescaler 6.

enumerator kSLCD_ClkPrescaler07

Prescaler 7.

enum _slcd_regulated_voltage_trim

SLCD regulated voltage trim parameter, be used to meet the desired contrast.

Values:

enumerator kSLCD_VolatgeTrimNo

No voltage trim.

enumerator kSLCD_VolatgeTrimIncrease50mV

Increase the voltage by 50 mV.

enumerator kSLCD_VolatgeTrimIncrease100mV
Increase the voltage by 100 mV.

enumerator kSLCD_VolatgeTrimIncrease150mV
Increase the voltage by 150 mV.

enumerator kSLCD_VolatgeTrimIncrease200mV
Increase the voltage by 200 mV.

enumerator kSLCD_VolatgeTrimIncrease250mV
Increase the voltage by 250 mV.

enumerator kSLCD_VolatgeTrimIncrease300mV
Increase the voltage by 300 mV.

enumerator kSLCD_VolatgeTrimIncrease350mV
Increase the voltage by 350 mV.

enumerator kSLCD_VolatgeTrimDecrease400mV
Decrease the voltage by 400 mV.

enumerator kSLCD_VolatgeTrimDecrease350mV
Decrease the voltage by 350 mV.

enumerator kSLCD_VolatgeTrimDecrease300mV
Decrease the voltage by 300 mV.

enumerator kSLCD_VolatgeTrimDecrease250mV
Decrease the voltage by 250 mV.

enumerator kSLCD_VolatgeTrimDecrease200mV
Decrease the voltage by 200 mV.

enumerator kSLCD_VolatgeTrimDecrease150mV
Decrease the voltage by 150 mV.

enumerator kSLCD_VolatgeTrimDecrease100mV
Decrease the voltage by 100 mV.

enumerator kSLCD_VolatgeTrimDecrease50mV
Decrease the voltage by 50 mV.

enum _slcd_sample_hold

SLCD sample&hold configuration. To save power, configure the voltage to be sampled and held periodically, during this period the phase switches are turned off.

Values:

enumerator kSLCD_SampleHoldNone
No sample&hold.

enumerator kSLCD_SampleHold64Cycle
Sample&hold each 64 function clock cycle.

enumerator kSLCD_SampleHold128Cycle
Sample&hold each 128 function clock cycle.

enum _slcd_blink_rate

SLCD blink rate.

Values:

enumerator kSLCD_BlinkRate00
SLCD blink rate is LCD clock/((2¹¹)).

enumerator kSLCD__BlinkRate01
SLCD blink rate is LCD clock/ $((2^{12}))$.

enumerator kSLCD__BlinkRate02
SLCD blink rate is LCD clock/ $((2^{13}))$.

enumerator kSLCD__BlinkRate03
SLCD blink rate is LCD clock/ $((2^{14}))$.

enumerator kSLCD__BlinkRate04
SLCD blink rate is LCD clock/ $((2^{15}))$.

enumerator kSLCD__BlinkRate05
SLCD blink rate is LCD clock/ $((2^{16}))$.

enumerator kSLCD__BlinkRate06
SLCD blink rate is LCD clock/ $((2^{17}))$.

enumerator kSLCD__BlinkRate07
SLCD blink rate is LCD clock/ $((2^{18}))$.

enum __slcd__duty__cycle
SLCD duty cycle.

Values:

enumerator kSLCD__1Div1DutyCycle
LCD use 1 BP 1/1 duty cycle.

enumerator kSLCD__1Div2DutyCycle
LCD use 2 BP 1/2 duty cycle.

enumerator kSLCD__1Div3DutyCycle
LCD use 3 BP 1/3 duty cycle.

enumerator kSLCD__1Div4DutyCycle
LCD use 4 BP 1/4 duty cycle.

enumerator kSLCD__1Div5DutyCycle
LCD use 5 BP 1/5 duty cycle.

enumerator kSLCD__1Div6DutyCycle
LCD use 6 BP 1/6 duty cycle.

enumerator kSLCD__1Div7DutyCycle
LCD use 7 BP 1/7 duty cycle.

enumerator kSLCD__1Div8DutyCycle
LCD use 8 BP 1/8 duty cycle.

enum __slcd__phase__type
SLCD segment phase type.

Values:

enumerator kSLCD__NoPhaseActivate
LCD waveform no phase activates.

enumerator kSLCD__PhaseAActivate
LCD waveform phase A activates.

enumerator kSLCD__PhaseBActivate
LCD waveform phase B activates.

enumerator kSLCD_PhaseCActivate
LCD waveform phase C activates.

enumerator kSLCD_PhaseDActivate
LCD waveform phase D activates.

enumerator kSLCD_PhaseEActivate
LCD waveform phase E activates.

enumerator kSLCD_PhaseFActivate
LCD waveform phase F activates.

enumerator kSLCD_PhaseGActivate
LCD waveform phase G activates.

enumerator kSLCD_PhaseHActivate
LCD waveform phase H activates.

enum _slcd_phase_index
SLCD segment phase bit index.

Values:

enumerator kSLCD_PhaseAIndex
LCD phase A bit index.

enumerator kSLCD_PhaseBIndex
LCD phase B bit index.

enumerator kSLCD_PhaseCIndex
LCD phase C bit index.

enumerator kSLCD_PhaseDIndex
LCD phase D bit index.

enumerator kSLCD_PhaseEIndex
LCD phase E bit index.

enumerator kSLCD_PhaseFIndex
LCD phase F bit index.

enumerator kSLCD_PhaseGIndex
LCD phase G bit index.

enumerator kSLCD_PhaseHIndex
LCD phase H bit index.

enum _slcd_display_mode
SLCD display mode.

Values:

enumerator kSLCD_NormalMode
LCD Normal display mode.

enumerator kSLCD_AlternateMode
LCD Alternate display mode. For four back planes or less.

enumerator kSLCD_BlankMode
LCD Blank display mode.

enum _slcd_blink_mode
SLCD blink mode.

Values:

enumerator kSLCD_BlankDisplayBlink

Display blank during the blink period.

enumerator kSLCD_AltDisplayBlink

Display alternate display during the blink period if duty cycle is lower than 5.

enum _sld_fault_detect_clock_prescaler

SLCD fault detect clock prescaler.

Values:

enumerator kSLCD_FaultSampleFreqDivider1

Fault detect sample clock frequency is 1/1 bus clock.

enumerator kSLCD_FaultSampleFreqDivider2

Fault detect sample clock frequency is 1/2 bus clock.

enumerator kSLCD_FaultSampleFreqDivider4

Fault detect sample clock frequency is 1/4 bus clock.

enumerator kSLCD_FaultSampleFreqDivider8

Fault detect sample clock frequency is 1/8 bus clock.

enumerator kSLCD_FaultSampleFreqDivider16

Fault detect sample clock frequency is 1/16 bus clock.

enumerator kSLCD_FaultSampleFreqDivider32

Fault detect sample clock frequency is 1/32 bus clock.

enumerator kSLCD_FaultSampleFreqDivider64

Fault detect sample clock frequency is 1/64 bus clock.

enumerator kSLCD_FaultSampleFreqDivider128

Fault detect sample clock frequency is 1/128 bus clock.

enum _sld_fault_detect_sample_window_width

SLCD fault detect sample window width.

Values:

enumerator kSLCD_FaultDetectWindowWidth4SampleClk

Sample window width is 4 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth8SampleClk

Sample window width is 8 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth16SampleClk

Sample window width is 16 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth32SampleClk

Sample window width is 32 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth64SampleClk

Sample window width is 64 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth128SampleClk

Sample window width is 128 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth256SampleClk

Sample window width is 256 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth512SampleClk

Sample window width is 512 sample clock cycles.

enum `_slcd_interrupt_enable`
SLCD interrupt source.

Values:

enumerator `kSLCD_FaultDetectCompleteInterrupt`
SLCD fault detection complete interrupt source.

enumerator `kSLCD_FrameFreqInterrupt`
SLCD frame frequency interrupt source. Not available in all low-power modes.

enum `_slcd_lowpower_behavior`
SLCD behavior in low power mode.

Values:

enumerator `kSLCD_EnabledInWaitStop`
SLCD works in wait and stop mode.

enumerator `kSLCD_EnabledInWaitOnly`
SLCD works in wait mode and is disabled in stop mode.

enumerator `kSLCD_EnabledInStopOnly`
SLCD works in stop mode and is disabled in wait mode.

enumerator `kSLCD_DisabledInWaitStop`
SLCD is disabled in stop mode and wait mode.

typedef enum `_slcd_clock_prescaler` `slcd_clock_prescaler_t`
SLCD clock prescaler to generate frame frequency.

typedef enum `_slcd_regulated_voltage_trim` `slcd_regulated_voltage_trim_t`
SLCD regulated voltage trim parameter, be used to meet the desired contrast.

typedef enum `_slcd_sample_hold` `slcd_sample_hold_t`
SLCD sample&hold configuration. To save power, configure the voltage to be sampled and held periodically, during this period the phase switches are turned off.

typedef enum `_slcd_blink_rate` `slcd_blink_rate_t`
SLCD blink rate.

typedef enum `_slcd_duty_cycle` `slcd_duty_cycle_t`
SLCD duty cycle.

typedef enum `_slcd_phase_type` `slcd_phase_type_t`
SLCD segment phase type.

typedef enum `_slcd_phase_index` `slcd_phase_index_t`
SLCD segment phase bit index.

typedef enum `_slcd_display_mode` `slcd_display_mode_t`
SLCD display mode.

typedef enum `_slcd_blink_mode` `slcd_blink_mode_t`
SLCD blink mode.

typedef enum `_slcd_fault_detect_clock_prescaler` `slcd_fault_detect_clock_prescaler_t`
SLCD fault detect clock prescaler.

typedef enum `_slcd_fault_detect_sample_window_width` `slcd_fault_detect_sample_window_width_t`
SLCD fault detect sample window width.


```
typedef struct _slcd_fault_detect_config slcd_fault_detect_config_t
```

SLCD fault frame detection configuration structure.

```
typedef enum _slcd_interrupt_enable slcd_interrupt_enable_t
```

SLCD interrupt source.

```
typedef enum _slcd_lowpower_behavior slcd_lowpower_behavior
```

SLCD behavior in low power mode.

```
typedef struct _slcd_config slcd_config_t
```

SLCD configuration structure.

```
struct SLCD_Type
```

#include <fsl_slcd.h> SLCD structure definition.

Public Members

SGLCD_FAULT_DETECT_Type *fault

Pointer to fault detect registers.

SGLCD_CONTROL_Type *control

Pointer to control registers.

```
struct _slcd_fault_detect_config
```

#include <fsl_slcd.h> SLCD fault frame detection configuration structure.

Public Members

bool faultDetectIntEnable

Fault frame detection interrupt enable flag.

bool faultDetectBackPlaneEnable

True means the pin id fault detected is back plane otherwise front plane.

uint8_t faultDetectPinIndex

Fault detected pin id from 0 to 63.

slcd_fault_detect_clock_prescaler_t faultPrescaler

Fault detect clock prescaler.

slcd_fault_detect_sample_window_width_t width

Fault detect sample window width.

```
struct _slcd_config
```

#include <fsl_slcd.h> SLCD configuration structure.

Public Members

bool lowPowerWaveform

Generate low power waveform.

slcd_regulated_voltage_trim_t voltageTrimVLL1

Voltage trim for VLL1 output level.

slcd_regulated_voltage_trim_t voltageTrimVLL2

Voltage trim for VLL2 output level.

slcd_sample_hold_t sampleHold

Sample&hold setting.

slcd_display_mode_t displayMode

SLCD display mode.

slcd_duty_cycle_t dutyCycle

Duty cycle.

slcd_lowpower_behavior lowPowerBehavior

SLCD behavior in low power mode.

bool frameFreqIntEnable

Frame frequency interrupt enable flag.

uint32_t slcdLowPinEnabled

Setting enabled SLCD pin 0 ~ pin 31. Setting bit n to 1 means enable pin n.

uint32_t slcdHighPinEnabled

Setting enabled SLCD pin 32 ~ pin 63. Setting bit n to 1 means enable pin (n + 32).

uint32_t backPlaneLowPin

Setting back plane pin 0 ~ pin 31. Setting bit n to 1 means setting pin n as back plane. It should never have the same bit setting as the frontPlane Pin.

uint32_t backPlaneHighPin

Setting back plane pin 32 ~ pin 63. Setting bit n to 1 means setting pin (n + 32) as back plane. It should never have the same bit setting as the frontPlane Pin.

slcd_fault_detect_config_t *faultConfig

Fault frame detection configure. If not requirement, set to NULL.

2.47 SMM: Sleep Mode Manager Driver

enum _smm_interrupt_enable

The enumeration of interrupt to enable. .

Values:

enumerator kSMM_QChannelTimeoutInt

enumerator kSMM_QChannelDenyInt

enumerator kSMM_DeepSleepCounterInt

enumerator kSMM_ComparatorMatchInt

enumerator kSMM_AllSupportedInts

enum _smm_interrupt_flag

The enumeration of interrupt flag. .

Values:

enumerator kSMM_QChannelTimeoutIntFlag

enumerator kSMM_QChannelDenyIntFlag

enumerator kSMM_AllIntFlags

enum _smm_ext_int_polarity

The enumeration of external interrupt polarity.

Values:

enumerator kSMM_ExtIntRisingEdge

Detect rising edge of External Interrupt Pin.

enumerator kSMM_ExtIntFallingEdge

Detect falling edge of External Interrupt Pin.

enum _smm_watchdog_alarm_use

Watchdog alarm use enumeration.

Values:

enumerator kSMM_WatchdogAlarmAsReset

Watchdog alarm as reset.

enumerator kSMM_WatchdogAlarmAsInterrupt

Watchdog alarm as interrupt.

typedef enum _smm_ext_int_polarity smm_ext_int_polarity_t

The enumeration of external interrupt polarity.

typedef struct _smm_ext_int_config smm_ext_int_config_t

Configuration definition of external interrupt.

typedef struct _smm_backup_reg_content smm_backup_reg_content_t

The definition of backend register content.

typedef enum _smm_watchdog_alarm_use smm_watchdog_alarm_use_t

Watchdog alarm use enumeration.

void SMM_SetExtInterruptConfig(SMM_Type *base, const smm_ext_int_config_t *ptrConfig)

Set external interrupt configuration.

Parameters

- base – SMM base address.
- ptrConfig – Pointer to configuration in type of smm_ext_int_config_t.

static inline void SMM_DisableAonCpuIsoSingal(SMM_Type *base)

Disable the AON CPU I/O signals on exist from DPD2.

Parameters

- base – SMM base address.

static inline void SMM_DisableMainCpuIsoSingal(SMM_Type *base)

Disable the Main CPU I/O signals on exist from DPD1.

Parameters

- base – SMM base address.

static inline void SMM_EnableWakeupSourceToMainCpu(SMM_Type *base, uint32_t
wakeupSources)

Enable wakeup sources to the main CPU.

Parameters

- base – SMM base address.
- wakeupSources – Mask value of wakeup sources.

static inline void SMM_DisableWakeupSourceToMainCpu(SMM_Type *base, uint32_t
wakeupSources)

Disable wakeup sources to the main CPU.

Parameters

- base – SMM base address.
- wakeupSources – Mask value of wakeup sources.

static inline uint32_t SMM_GetEnabledWakeupSourceToMainCpu(SMM_Type *base)

Get enabled wakeup sources to main CPU.

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources to main CPU.

static inline void SMM_EnableWakeupSourceToAonCpu(SMM_Type *base, uint32_t wakeupSources)

Enable wakeup sources to AON CPU.

Parameters

- base – SMM base address.
- wakeupSources – The mask value of wakeup sources.

static inline void SMM_DisableWakeupSourceToAonCpu(SMM_Type *base, uint32_t wakeupSources)

Disable wakeup sources to AON CPU.

Parameters

- base – SMM base address.
- wakeupSources – The mask value of wakeup sources.

static inline uint32_t SMM_GetEnabledWakeupSourceToAonCpu(SMM_Type *base)

Get enabled wakeup sources to AON CPU.

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources to AON CPU.

static inline uint32_t SMM_GetWakeupSourceStatus(SMM_Type *base)

Get wakeup source status.

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources.

static inline void SMM_ShutDownBandgapInLowPowerModes(SMM_Type *base, bool shutdown)

Shutdown bandgap in low power modes.

Parameters

- base – SMM base address.
- shutdown – True to disable bandgap, false to keep enabled.

static inline void SMM_StartPowerDownSequence(SMM_Type *base)

Start the power down sequence.

Parameters

- base – SMM base address.

static inline void SMM_StartAonDPD2Sequence(SMM_Type *base)

Start the DPD2 sequence.

Parameters

- base – SMM base address.

static inline void SMM_StartAonShutDownSequence(SMM_Type *base)

Start the AON shutdown/DPD3 sequence.

Parameters

- base – SMM base address.

static inline void SMM_AbortLowPowerModeSequence(SMM_Type *base)

Abort any start of low power modes sequence.

Parameters

- base – SMM base address.

static inline void SMM_SwitchToXTAL32(SMM_Type *base, bool enable)

Switch to XTAL32 in DPD2 mode.

Parameters

- base – SMM base address
- enable – True means switch to 32k clock, false means remain at AON_CLK.

static inline void SMM_PowerOffAonSramManually(SMM_Type *base, uint8_t sramCuts)

Power off selected AON SRAM cuts manually.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

static inline void SMM_PowerOnAonSramManually(SMM_Type *base, uint8_t sramCuts)

Power on selected AON SRAM cuts manually.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

static inline void SMM_PowerOffAonSramAutomatically(SMM_Type *base, uint8_t sramCuts)

Power off selected AON SRAM cuts when enter into low power mode.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

static inline void SMM_DisableAonSramAutoControl(SMM_Type *base, uint8_t sramCuts)

Keep selected AON SRAM keep powered when enter into low power mode.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

void SMM_WriteToBackupReg(SMM_Type *base, const *smm_backup_reg_content_t*
*ptrBackupRegContent)

Write data to backup registers.

Parameters

- base – SMM base address.
- ptrBackupRegContent – **[in]** Pointer of the content will write to backup registers.

```
void SMM_ReadFromBackupReg(SMM_Type *base, smm_backup_reg_content_t
                          *ptrBackupRegContent)
```

Read data from backup registers.

Parameters

- base – SMM base address.
- ptrBackupRegContent – **[out]** Pointer of the content will read from backup registers.

```
void SMM_EnableMainDomainSramRetention(SMM_Type *base, uint16_t sramCuts)
```

Enable memory retention at low power modes for main CPU.

Parameters

- base – SMM base address.
- sramCuts – Mask of sram cuts to retained.

```
static inline void SMM_DisableMainDomainSramRetention(SMM_Type *base)
```

Disable memory retention at low power modes for main CPU.

Parameters

- base – SMM base address.

```
static inline void SMM_EnableIvsModeForSramRetention(SMM_Type *base, bool enable)
```

Enable/disable IVS Mode for the SRAM retention.

Parameters

- base – SMM base address.
- enable – True to enable IVS mode, false to disable.

```
static inline uint8_t SMM_GetPowerState(SMM_Type *base)
```

Get the power state.

Parameters

- base – SMM base address.

Returns

Value of power state.

```
static inline void SMM_WakeupMainDomain(SMM_Type *base)
```

Wakeup the main domain CPU from low power mode.

Parameters

- base – SMM base address.

```
static inline bool SMM_CheckExternalIntActive(SMM_Type *base)
```

Check if the external interrupt flag is asserted.

Parameters

- base – SMM base address.

Returns

True if external interrupt is active, false otherwise.

static inline void SMM_ClearExternalIntFlag(SMM_Type *base)

Clear the external interrupt flag.

Parameters

- base – SMM base address.

static inline void SMM_DisableMainCpuIso(SMM_Type *base)

Disable the main CPU I/O signals.

Parameters

- base – SMM base address.

static inline void SMM_DisableAonCpuIso(SMM_Type *base)

Disable the AON CPU I/O signals.

Parameters

- base – SMM base address.

static inline void SMM_ClearAllLowPowerSequence(SMM_Type *base)

Clear all low power sequence settings.

Parameters

- base – SMM base address.

static inline void SMM_ClearMainCpuWakeupSources(SMM_Type *base)

Clear all wakeup sources to main domain.

Parameters

- base –

static inline void SMM_ClearAonCpuWakeupSources(SMM_Type *base)

Clear all wakeup sources to AON domain.

Parameters

- base – SMM base address.

static inline void SMM_ConfigWatchdogAlarmUse(SMM_Type *base, *smm_watchdog_alarm_use_t* alarmUse)

Config the watchdog alarm use.

Parameters

- base – SMM base address.
- alarmUse – The watchdog alarm use.

static inline void SMM_UseDeepSleepCounterInSoftwareMethod(SMM_Type *base)

Use the deep sleep counter for general software needs.

Parameters

- base – SMM base address.

static inline void SMM_UseDeepSleepCounterInHardwareMethod(SMM_Type *base)

Use the deep sleep counter by hardware to wakeup from low power mode.

Parameters

- base – SMM base address.

static inline void SMM_ResetAndDisableDeepSleepCounter(SMM_Type *base)

Reset the deep sleep counter and disable count.

Parameters

- base – SMM base address.

static inline void SMM_StartDeepSleepCounter(SMM_Type *base)

Enable the countdown start of the deep sleep counter when at software use.

Parameters

- base – SMM base address.

static inline void SMM_UpdateDeepSleepCounter(SMM_Type *base, uint16_t value)

Update the deep sleep counter, the counter is counting the AON clocks.

Parameters

- base – SMM base address.
- value – Value to update the deep sleep counter.

static inline uint16_t SMM_ReadDeepSleepCounter(SMM_Type *base)

Read value of deep sleep counter.

Parameters

- base – SMM base address.

Returns

Count of deep sleep counter.

static inline void SMM_EnableInterrupts(SMM_Type *base, uint32_t masks)

Enable specific interrupts.

Parameters

- base – SMM base address.
- masks – The mask of interrupts to enable, should be OR'ed value of `smm_interrupt_enable_t`.

static inline void SMM_DisableInterrupts(SMM_Type *base, uint32_t masks)

Disable specific interrupts.

Parameters

- base – SMM base address.
- masks – The mask of interrupts to disable, should be OR'ed value of `smm_interrupt_enable_t`.

static inline uint32_t SMM_GetInterruptFlags(SMM_Type *base)

Get interrupt flags.

Parameters

- base – SMM base address.

Returns

The mask of all asserted interrupt flags, should be the OR'ed value of `smm_interrupt_flag_t`.

static inline void SMM_ClearInterruptFlags(SMM_Type *base, uint32_t flags)

Clear interrupt flags.

Parameters

- base – SMM base address.

- `flags` – The mask of interrupt flags to clear, should be the OR'ed value of `smm_interrupt_flag_t`.

static inline bool SMM_CheckDeepSleepCounterMatch(SMM_Type *base)

Check if deep sleep counter reach zero at software use.

Parameters

- `base` – SMM base address.

Return values

- `false` – Deep sleep counter do not reach zero.
- `true` – Deep sleep counter reach zero.

static inline void SMM_ClearDeepSleepCounterMatchFlag(SMM_Type *base)

Clear deep sleep counter match flag.

Parameters

- `base` – SMM base address.

static inline bool SMM_CheckComparatorMatch(SMM_Type *base)

Check if comparator match was active.

Parameters

- `base` – SMM base address.

Return values

- `false` – Comparator match is not active.
- `true` – Comparator match is active.

static inline void SMM_ClearComparatorMatchFlag(SMM_Type *base)

Clear comparator match flag.

Parameters

- `base` – SMM base address.

FSL_SMM_DRIVER_VERSION

smm driver version 2.1.0.

bool maskExtIntPin

True to mask external interrupt pin, false to unmask.

smm_ext_int_polarity_t extIntPolarity

External interrupt polarity.

uint32_t word1

uint32_t word2

struct __smm_ext_int_config

#include <fsl_smm.h> Configuration definition of external interrupt.

struct __smm_backup_reg_content

#include <fsl_smm.h> The definition of backend register content.

2.48 TRDC: Trusted Resource Domain Controller

`void TRDC_Init(TRDC_Type *base)`

Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- `base` – TRDC peripheral base address.

`void TRDC_Deinit(TRDC_Type *base)`

De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- `base` – TRDC peripheral base address.

`static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)`

Gets the domain ID of the current bus master.

Parameters

- `base` – TRDC peripheral base address.

Returns

Domain ID of current bus master.

`void TRDC_GetHardwareConfig(TRDC_Type *base, trdc_hardware_config_t *config)`

Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- `base` – TRDC peripheral base address.
- `config` – Pointer to the structure to get the configuration.

`static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)`

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- `base` – TRDC peripheral base address.

`static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum)`

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure, refer to `trdcx_master_t` in processor header file, `x` is `trdc` instance.
- `regNum` – Which register to configure, processor master can have more than one register for the MDAC configuration.
- `assignIndex` – Which assignment register to lock.

```
static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master,
                                                       uint8_t regNum, bool valid)
```

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure.
- `regNum` – Which register to configure, processor master can have more than one register for the MDAC configuration.
- `assignIndex` – Index for the domain assignment register.
- `valid` – True to set valid, false to set invalid.

```
void TRDC_GetDefaultProcessorDomainAssignment(trdc_processor_domain_assignment_t
                                              *domainAssignment)
```

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->domainIdSelect = kTRDC_DidMda;
assignment->lock           = 0U;
```

Parameters

- `domainAssignment` – Pointer to the assignment structure.

```
void TRDC_GetDefaultNonProcessorDomainAssignment(trdc_non_processor_domain_assignment_t
                                                 *domainAssignment)
```

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->privilegeAttr  = kTRDC_ForceUser;
assignment->secureAttr    = kTRDC_ForceSecure;
assignment->bypassDomainId = 0U;
assignment->lock           = 0U;
```

Parameters

- `domainAssignment` – Pointer to the assignment structure.

```
void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum,
                                       const trdc_processor_domain_assignment_t
                                       *domainAssignment)
```

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- **base** – TRDC peripheral base address.
- **master** – Which master to configure, refer to `trdc_master_t` in processor header file.
- **regNum** – Which register to configure, processor master can have more than one register for the MDAC configuration.
- **domainAssignment** – Pointer to the assignment structure.

```
void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const
                                         trdc_non_processor_domain_assignment_t
                                         *domainAssignment)
```

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- **base** – TRDC peripheral base address.
- **master** – Which master to configure, refer to `trdc_master_t` in processor header file.
- **domainAssignment** – Pointer to the assignment structure.

```
static inline uint64_t TRDC_GetActiveMasterPidMap(TRDC_Type *base)
```

Gets the bit map of the bus master(s) that is(are) sourcing a PID register.

This function sets the non-processor master domain assignment as valid.

Parameters

- **base** – TRDC peripheral base address.

Returns

the bit map of the master(s). Bit 1 sets indicates bus master 1.

```
void TRDC_SetPid(TRDC_Type *base, uint8_t master, const trdc_pid_config_t *pidConfig)
```

Sets the current Process identifier(PID) for processor core.

Each processor has a corresponding process identifier (PID) which can be used to group tasks into different domains. Secure privileged software saves and restores the PID as part of any context switch. This data structure defines an array of 32-bit values, one per MDA

module, that define the PID. Since this register resource is only applicable to processor cores, the data structure is typically sparsely populated. The HWCFG[2-3] registers provide a bitmap of the implemented PIDn registers. This data structure is indexed using the corresponding MDA instance number. Depending on the operating clock domain of each DAC instance, there may be optional information stored in the corresponding PIDm register to properly implement the LK2 = 2 functionality.

Parameters

- base – TRDC peripheral base address.
- master – Which processor master to configure, refer to `trdc_master_t` in processor header file.
- pidConfig – Pointer to the configuration structure.

void TRDC_GetDefaultIDAUConfig(*trdc_idau_config_t* *idauConfiguration)

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU     = false;
config->lockNonsecureMPU  = false;
config->lockSAU           = false;
```

Parameters

- domainAssignment – Pointer to the configuration structure.

void TRDC_SetIDAU(TRDC_Type *base, const *trdc_idau_config_t* *idauConfiguration)

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
idauConfiguration.lockNonsecureMPU = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)

Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)

Locks FLW registers. Once locked the registers can not be updated until next reset.

Parameters

- base – TRDC peripheral base address.

```
static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)
```

Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

```
static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)
```

Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

```
void TRDC_GetDefaultFlashLogicalWindowConfig(trdc_flw_config_t *flwConfiguration)
```

Gets the default FLW(Flash Logical Window) configuration.

```
config->blockCount   = false;
config->arrayBaseAddr = false;
config->lock          = false;
config->enable        = false;
```

Parameters

- flwConfiguration – Pointer to the configuration structure.

```
void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const trdc_flw_config_t
                                *flwConfiguration)
```

Sets the FLW function's configuration.

```
trdc_flw_config_t flwConfiguration;

TRDC_GetDefaultIDAUConfig(&flwConfiguration);

flwConfiguration.blockCount = 32U;
flwConfiguration.arrayBaseAddr = 0xFFFFFFFF;
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- flwConfiguration – Pointer to the configuration structure.

```
status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, trdc_domain_error_t *error)
```

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the `kStatus_NoData`.

```
status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, trdc_domain_error_t
                                                    *error, uint8_t domainId)
```

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter `error`. If no access violation is captured, this function returns the `kStatus_NoData`.

```
static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)
```

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

```
static inline uint8_t TRDC_GetMrcRegionNumber(TRDC_Type *base, uint8_t mrcIdx)
```

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.

Returns

the region number of the given MRC instance

```
void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const
                                     trdc_memory_access_control_config_t *config, uint8_t
                                     mrcIdx, uint8_t regIdx)
```

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

```
void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t  
                                   domianMask, bool enable)
```

Enables the update of the selected domians.

After the domians' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domianMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

```
void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

```
void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

```
void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)
```

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domians whose NSE bits to clear.

```
void TRDC_MrcSetRegionDescriptorConfig(TRDC_Type *base, const  
                                       trdc_mrc_region_descriptor_config_t *config)
```

Sets the configuration for one of the region descriptor per domain per MRC instnce.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

static inline void TRDC_SetMbcGlobalValid(TRDC_Type *base)

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

void TRDC_GetMbcHardwareConfig(TRDC_Type *base, *trdc_slave_memory_hardware_config_t* *config, uint8_t mbcIdx, uint8_t slvIdx)

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

void TRDC_MbcSetNseUpdateConfig(TRDC_Type *base, const *trdc_mbc_nse_update_config_t* *config, uint8_t mbcIdx)

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be updateby NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

void TRDC_MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

void TRDC_MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

void TRDC_MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slave)

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

```
void TRDC__MbcSetMemoryAccessConfig(TRDC_Type *base, const
                                     trdc_memory_access_control_config_t *config, uint8_t
                                     mbcIdx, uint8_t rgdIdx)
```

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

```
void TRDC__MbcSetMemoryBlockConfig(TRDC_Type *base, const
                                    trdc_mbc_memory_block_config_t *config)
```

Sets the configuration for one of the memory block per domain per MBC instance.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

```
enum _trdc_did_sel
```

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

Values:

```
enumerator kTRDC_DidMda
```

Use MDAn[2:0] as DID.

```
enumerator kTRDC_DidInput
```

Use the input DID (DID_in) as DID.

```
enumerator kTRDC_DidMdaAndInput
```

Use MDAn[2] concatenated with DID_in[1:0] as DID.

```
enumerator kTRDC_DidReserved
```

Reserved.

enum _trdc_secure_attr

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

Values:

enumerator kTRDC_ForceSecure

Force the bus attribute for this master to secure.

enumerator kTRDC_ForceNonSecure

Force the bus attribute for this master to non-secure.

enumerator kTRDC_MasterSecure

Use the bus master's secure/nonsecure attribute directly.

enumerator kTRDC_MasterSecure1

Use the bus master's secure/nonsecure attribute directly.

enum _trdc_pid_domain_hit_config

The configuration of domain hit evaluation of PID.

Values:

enumerator kTRDC_pidDomainHitNone0

No PID is included in the domain hit evaluation.

enumerator kTRDC_pidDomainHitNone1

No PID is included in the domain hit evaluation.

enumerator kTRDC_pidDomainHitInclusive

The PID is included in the domain hit evaluation when (PID & ~PIDM).

enumerator kTRDC_pidDomainHitExclusive

The PID is included in the domain hit evaluation when ~(PID & ~PIDM).

enum _trdc_privilege_attr

TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

Values:

enumerator kTRDC_ForceUser

Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege

Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege

Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1

Use the bus master's attribute directly.

enum _trdc_pid_lock

PID lock configuration.

Values:

enumerator kTRDC_PidUnlocked0

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked1

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked2

The PID value can be updated by any secure privileged write from the bus master that first configured this register.

enumerator kTRDC_PidLocked

The PID value is locked until next reset.

enum _trdc_controller

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0

Memory block checker 0.

enumerator kTRDC_MemBlockController1

Memory block checker 1.

enumerator kTRDC_MemBlockController2

Memory block checker 2.

enumerator kTRDC_MemBlockController3

Memory block checker 3.

enumerator kTRDC_MemRegionChecker0

Memory region checker 0.

enumerator kTRDC_MemRegionChecker1

Memory region checker 1.

enumerator kTRDC_MemRegionChecker2

Memory region checker 2.

enumerator kTRDC_MemRegionChecker3

Memory region checker 3.

enumerator kTRDC_MemRegionChecker4

Memory region checker 4.

enumerator kTRDC_MemRegionChecker5

Memory region checker 5.

enumerator kTRDC_MemRegionChecker6

Memory region checker 6.

enum _trdc_error_state

TRDC domain error state definition	TRDC_MBCn_DERR_W1[EST]	or
TRDC_MRCn_DERR_W1[EST].		

Values:

enumerator kTRDC_ErrorStateNone

No access violation detected.

enumerator kTRDC_ErrorStateNone1

No access violation detected.

enumerator kTRDC_ErrorStateSingle

Single access violation detected.

enumerator kTRDC_ErrorStateMulti

Multiple access violation detected.

enum _trdc_error_attr

TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or TRDC_MRCn_DERR_W1[EATR].

Values:

enumerator kTRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum _trdc_error_type

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum _trdc_region_descriptor

The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator kTRDC_RegionDescriptor0
Region descriptor 0.

enumerator kTRDC_RegionDescriptor1
Region descriptor 1.

enumerator kTRDC_RegionDescriptor2
Region descriptor 2.

enumerator kTRDC_RegionDescriptor3
Region descriptor 3.

enumerator kTRDC_RegionDescriptor4
Region descriptor 4.

enumerator kTRDC_RegionDescriptor5
Region descriptor 5.

enumerator kTRDC_RegionDescriptor6

Region descriptor 6.

enumerator kTRDC_RegionDescriptor7

Region descriptor 7.

enumerator kTRDC_RegionDescriptor8

Region descriptor 8.

enumerator kTRDC_RegionDescriptor9

Region descriptor 9.

enumerator kTRDC_RegionDescriptor10

Region descriptor 10.

enumerator kTRDC_RegionDescriptor11

Region descriptor 11.

enumerator kTRDC_RegionDescriptor12

Region descriptor 12.

enumerator kTRDC_RegionDescriptor13

Region descriptor 13.

enumerator kTRDC_RegionDescriptor14

Region descriptor 14.

enumerator kTRDC_RegionDescriptor15

Region descriptor 15.

enum _trdc_MRC_domain

The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator kTRDC_MrcDomain0

Domain 0.

enumerator kTRDC_MrcDomain1

Domain 1.

enumerator kTRDC_MrcDomain2

Domain 2.

enumerator kTRDC_MrcDomain3

Domain 3.

enumerator kTRDC_MrcDomain4

Domain 4.

enumerator kTRDC_MrcDomain5

Domain 5.

enumerator kTRDC_MrcDomain6

Domain 6.

enumerator kTRDC_MrcDomain7

Domain 7.

enumerator kTRDC_MrcDomain8

Domain 8.

enumerator kTRDC_MrcDomain9
Domain 9.

enumerator kTRDC_MrcDomain10
Domain 10.

enumerator kTRDC_MrcDomain11
Domain 11.

enumerator kTRDC_MrcDomain12
Domain 12.

enumerator kTRDC_MrcDomain13
Domain 13.

enumerator kTRDC_MrcDomain14
Domain 14.

enumerator kTRDC_MrcDomain15
Domain 15.

enum _trdc_MBC_domain

The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0
Domain 0.

enumerator kTRDC_MbcDomain1
Domain 1.

enumerator kTRDC_MbcDomain2
Domain 2.

enumerator kTRDC_MbcDomain3
Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum _trdc_MBC_memory

The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2

Memory 2.

enumerator kTRDC_MbcSlaveMemory3

Memory 3.

enum __trdc_MBC_bit

The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0

Bit 0.

enumerator kTRDC_MbcBit1

Bit 1.

enumerator kTRDC_MbcBit2

Bit 2.

enumerator kTRDC_MbcBit3

Bit 3.

enumerator kTRDC_MbcBit4

Bit 4.

enumerator kTRDC_MbcBit5

Bit 5.

enumerator kTRDC_MbcBit6

Bit 6.

enumerator kTRDC_MbcBit7

Bit 7.

enumerator kTRDC_MbcBit8

Bit 8.

enumerator kTRDC_MbcBit9

Bit 9.

enumerator kTRDC_MbcBit10

Bit 10.

enumerator kTRDC_MbcBit11

Bit 11.

enumerator kTRDC_MbcBit12

Bit 12.

enumerator kTRDC_MbcBit13

Bit 13.

enumerator kTRDC_MbcBit14

Bit 14.

enumerator kTRDC_MbcBit15

Bit 15.

enumerator kTRDC_MbcBit16

Bit 16.

enumerator `kTRDC_MbcBit17`

Bit 17.

enumerator `kTRDC_MbcBit18`

Bit 18.

enumerator `kTRDC_MbcBit19`

Bit 19.

enumerator `kTRDC_MbcBit20`

Bit 20.

enumerator `kTRDC_MbcBit21`

Bit 21.

enumerator `kTRDC_MbcBit22`

Bit 22.

enumerator `kTRDC_MbcBit23`

Bit 23.

enumerator `kTRDC_MbcBit24`

Bit 24.

enumerator `kTRDC_MbcBit25`

Bit 25.

enumerator `kTRDC_MbcBit26`

Bit 26.

enumerator `kTRDC_MbcBit27`

Bit 27.

enumerator `kTRDC_MbcBit28`

Bit 28.

enumerator `kTRDC_MbcBit29`

Bit 29.

enumerator `kTRDC_MbcBit30`

Bit 30.

enumerator `kTRDC_MbcBit31`

Bit 31.

typedef struct *trdc_hardware_config* trdc_hardware_config_t

TRDC hardware configuration.

typedef struct *trdc_slave_memory_hardware_config* trdc_slave_memory_hardware_config_t

Hardware configuration of the two slave memories within each MBC(memory block checker).

typedef enum *trdc_did_sel* trdc_did_sel_t

TRDC domain ID select method, the register bit `TRDC_MDA_W0_0_DFMT0[DIDS]`, used for domain hit evaluation.

typedef enum *trdc_secure_attr* trdc_secure_attr_t

TRDC secure attribute, the register bit `TRDC_MDA_W0_0_DFMT0[SA]`, used for bus master domain assignment.

typedef enum *trdc_pid_domain_hit_config* trdc_pid_domain_hit_config_t

The configuration of domain hit evaluation of PID.

```

typedef struct _trdc_processor_domain_assignment trdc_processor_domain_assignment_t
    Domain assignment for the processor bus master.

typedef enum _trdc_privilege_attr trdc_privilege_attr_t
    TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-
    processor bus master domain assignment.

typedef struct _trdc_non_processor_domain_assignment
trdc_non_processor_domain_assignment_t
    Domain assignment for the non-processor bus master.

typedef enum _trdc_pid_lock trdc_pid_lock_t
    PID lock configuration.

typedef struct _trdc_pid_config trdc_pid_config_t
    Process identifier(PID) configuration for processor cores.

typedef struct _trdc_idau_config trdc_idau_config_t
    IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

typedef struct _trdc_flw_config trdc_flw_config_t
    FLW(Flash Logical Window) configuration.

typedef enum _trdc_controller trdc_controller_t
    TRDC controller definition for domain error check. Each TRDC instance may have different
    MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

typedef enum _trdc_error_state trdc_error_state_t
    TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or
    TRDC_MRCn_DERR_W1[EST].

typedef enum _trdc_error_attr trdc_error_attr_t
    TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or
    TRDC_MRCn_DERR_W1[EATR].

typedef enum _trdc_error_type trdc_error_type_t
    TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

typedef struct _trdc_domain_error trdc_domain_error_t
    TRDC domain error definition.

typedef struct _trdc_memory_access_control_config trdc_memory_access_control_config_t
    Memory access control configuration for MBC/MRC.

typedef struct _trdc_mrc_region_descriptor_config trdc_mrc_region_descriptor_config_t
    The configuration of each region descriptor per domain per MRC instance.

typedef struct _trdc_mbc_nse_update_config trdc_mbc_nse_update_config_t
    The configuration of MBC NSE update.

typedef struct _trdc_mbc_memory_block_config trdc_mbc_memory_block_config_t
    The configuration of each memory block per domain per MBC instance.

FSL_TRDC_DRIVER_VERSION

struct _trdc_hardware_config
    #include <fsl_trdc.h> TRDC hardware configuration.

```

Public Members

uint8_t masterNumber
Number of bus masters.

uint8_t domainNumber
Number of domains.

uint8_t mbcNumber
Number of MBCs.

uint8_t mrcNumber
Number of MRCs.

struct _trdc_slave_memory_hardware_config
#include <fsl_trdc.h> Hardware configuration of the two slave memories within each MBC(memory block checker).

Public Members

uint32_t blockNum
Number of blocks.

uint32_t blockSize
Block size.

struct _trdc_processor_domain_assignment
#include <fsl_trdc.h> Domain assignment for the processor bus master.

Public Members

uint32_t domainId
Domain ID.

uint32_t domainIdSelect
Domain ID select method, see trdc_did_sel_t.

uint32_t pidDomainHitConfig
The configuration of the domain hit evaluation for PID, see trdc_pid_domain_hit_config_t.

uint32_t pidMask
The mask combined with PID, so multiple PID can be included as part of the domain hit determination. Set to 0 to disable.

uint32_t secureAttr
Secure attribute, see trdc_secure_attr_t.

uint32_t pid
The process identifier, combined with pidMask to form the domain hit determination.

uint32_t __pad0__
Reserved.

uint32_t lock
Lock the register.

uint32_t __pad1__
Reserved.

struct _trdc_non_processor_domain_assignment
#include <fsl_trdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see trdc_privilege_attr_t.

uint32_t secureAttr

Secure attribute, see trdc_secure_attr_t.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct _trdc_pid_config

#include <fsl_trdc.h> Process identifier(PID) configuration for processor cores.

Public Members

uint32_t pid

The process identifier of the executing task. The highest bit can be used to define secure/nonsecure attribute of the task.

uint32_t __pad0__

Reserved.

uint32_t lock

How to lock the register, see trdc_pid_lock_t.

uint32_t __pad1__

Reserved.

struct _trdc_idau_config

#include <fsl_trdc.h> IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t __pad0__

Reserved.

uint32_t lockSecureVTOR

Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR

Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU

Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU

Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU

Disable writes to SAU(Security Attribution Unit) registers.

uint32_t __pad1__

Reserved.

struct __trdc_flw_config

#include <fsl_trdc.h> FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount

Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr

Flash array base address of the Flash Logical Window.

bool lock

Disable writes to FLW registers.

bool enable

Enable FLW function.

struct __trdc_domain_error

#include <fsl_trdc.h> TRDC domain error definition.

Public Members

trdc_controller_t controller

Which controller captured access violation.

uint32_t address

Access address that generated access violation.

trdc_error_state_t errorState

Error state.

trdc_error_attr_t errorAttr

Error attribute.

trdc_error_type_t errorType

Error type.

uint8_t errorPort

Error port.

uint8_t domainId

Domain ID.

uint8_t slaveMemoryIdx

The slave memory index. Only apply when violation in MBC.

struct __trdc_memory_access_control_config

#include <fsl_trdc.h> Memory access control configuration for MBC/MRC.

Public Members

uint32_t nonsecureUsrX

Allow nonsecure user execute access.

uint32_t nonsecureUsrW

Allow nonsecure user write access.

uint32_t nonsecureUsrR

Allow nonsecure user read access.

uint32_t __pad0__

Reserved.

uint32_t nonsecurePrivX

Allow nonsecure privilege execute access.

uint32_t nonsecurePrivW

Allow nonsecure privilege write access.

uint32_t nonsecurePrivR

Allow nonsecure privilege read access.

uint32_t __pad1__

Reserved.

uint32_t secureUsrX

Allow secure user execute access.

uint32_t secureUsrW

Allow secure user write access.

uint32_t secureUsrR

Allow secure user read access.

uint32_t __pad2__

Reserved.

uint32_t securePrivX

Allownonsecure privilege execute access.

uint32_t securePrivW

Allownonsecure privilege write access.

uint32_t securePrivR

Allownonsecure privilege read access.

uint32_t __pad3__

Reserved.

uint32_t lock

Lock the configuration until next reset, only apply to access control register 0.

struct _trdc_mrc_region_descriptor_config

#include <fsl_trdc.h> The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect

Select one of the 8 access control policies for this region, for access cotrol policies see trdc_memory_access_control_config_t.

`uint32_t startAddr`
Physical start address.

`bool valid`
Lock the register.

`bool nseEnable`
Enable non-secure accesses and disable secure accesses.

`uint32_t endAddr`
Physical start address.

`uint8_t mrcIdx`
The index of the MRC for this configuration to take effect.

`uint8_t domainIdx`
The index of the domain for this configuration to take effect.

`uint8_t regionIdx`
The index of the region for this configuration to take effect.

`struct _trdc_mbc_nse_update_config`
#include <fsl_trdc.h> The configuration of MBC NSE update.

Public Members

`uint32_t __pad0__`
Reserved.

`uint32_t wordIdx`
MBC configuration word index to be updated.

`uint32_t __pad1__`
Reserved.

`uint32_t memorySelect`
Bit mask of the selected memory to be updated. `_trdc_MBC_memory`.

`uint32_t __pad2__`
Reserved.

`uint32_t domainSelect`
Bit mask of the selected domain to be updated. `_trdc_MBC_domain`.

`uint32_t __pad3__`
Reserved.

`uint32_t autoIncrement`
Whether to increment the word index after current word is updated using this configuration.

`struct _trdc_mbc_memory_block_config`
#include <fsl_trdc.h> The configuration of each memory block per domain per MBC instance.

Public Members

`uint32_t memoryAccessControlSelect`
Select one of the 8 access control policies for this memory block, for access control policies see `trdc_memory_access_control_config_t`.

`uint32_t nseEnable`

Enable non-secure accesses and disable secure accesses.

`uint32_t mbcIdx`

The index of the MBC for this configuration to take effect.

`uint32_t domainIdx`

The index of the domain for this configuration to take effect.

`uint32_t slaveMemoryIdx`

The index of the slave memory for this configuration to take effect.

`uint32_t memoryBlockIdx`

The index of the memory block for this configuration to take effect.

2.49 Trdc_core

`typedef struct _TRDC_General_Type TRDC_General_Type`

TRDC general configuration register definition.

`typedef struct _TRDC_FLW_Type TRDC_FLW_Type`

TRDC flash logical control register definition.

`typedef struct _TRDC_DomainError_Type TRDC_DomainError_Type`

TRDC domain error register definition.

`typedef struct _TRDC_DomainAssignment_Type TRDC_DomainAssignment_Type`

TRDC master domain assignment register definition.

`typedef struct _TRDC_MBC_Type TRDC_MBC_Type`

TRDC MBC control register definition.

`typedef struct _TRDC_MRC_Type TRDC_MRC_Type`

TRDC MRC control register definition. `MRC_DOM0_RGD_W[region][word]`.

`TRDC_GENERAL_BASE(base)`

TRDC base address convert macro.

`TRDC_FLW_BASE(base)`

`TRDC_DOMAIN_ERROR_BASE(base)`

`TRDC_DOMAIN_ASSIGNMENT_BASE(base)`

`TRDC_MBC_BASE(base, instance)`

`TRDC_MRC_BASE(base, instance)`

`struct _TRDC_General_Type`

`#include <fsl_trdc_core.h>` TRDC general configuration register definition.

Public Members

`__IO uint32_t TRDC_CR`

TRDC Register, offset: 0x0

`__I uint32_t TRDC_HWCFG0`

TRDC Hardware Configuration Register 0, offset: 0xF0


```
__IO uint32_t TRDC_HWCFG1
    TRDC Hardware Configuration Register 1, offset: 0xF4
__IO uint32_t TRDC_HWCFG2
    TRDC Hardware Configuration Register 2, offset: 0xF8
__IO uint32_t TRDC_HWCFG3
    TRDC Hardware Configuration Register 3, offset: 0xFC
__IO uint8_t DACFG [8]
    Domain Assignment Configuration Register, array offset: 0x100, array step: 0x1
__IO uint32_t TRDC_IDAU_CR
    TRDC IDAU Control Register, offset: 0x1C0
```

```
struct _TRDC_FLW_Type
```

```
    #include <fsl_trdc_core.h> TRDC flash logical control register definition.
```

Public Members

```
__IO uint32_t TRDC_FLW_CTL
    TRDC FLW Control, offset: 0x1E0
__IO uint32_t TRDC_FLW_PBASE
    TRDC FLW Physical Base, offset: 0x1E4
__IO uint32_t TRDC_FLW_ABASE
    TRDC FLW Array Base, offset: 0x1E8
__IO uint32_t TRDC_FLW_BCNT
    TRDC FLW Block Count, offset: 0x1EC
```

```
struct _TRDC_DomainError_Type
```

```
    #include <fsl_trdc_core.h> TRDC domain error register definition.
```

Public Members

```
__IO uint32_t TRDC_FDID
    TRDC Fault Domain ID, offset: 0x1FC
__IO uint32_t TRDC_DERRLOC [16]
    TRDC Domain Error Location Register, array offset: 0x200, array step: 0x4
```

```
struct _TRDC_DomainAssignment_Type
```

```
    #include <fsl_trdc_core.h> TRDC master domain assignment register definition.
```

Public Members

```
__IO uint32_t PID [8]
    Process Identifier, array offset: 0x700, array step: 0x4
```

```
struct _TRDC_MBC_Type
```

```
    #include <fsl_trdc_core.h> TRDC MBC control register definition.
```

Public Members

- ___I uint32_t MBC_MEM_GLBCFG [4]
MBC Global Configuration Register, array offset: 0x10000, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_NSE_BLK_INDEX
MBC NonSecure Enable Block Index, array offset: 0x10010, array step: 0x2000
- ___O uint32_t MBC_NSE_BLK_SET
MBC NonSecure Enable Block Set, array offset: 0x10014, array step: 0x2000
- ___O uint32_t MBC_NSE_BLK_CLR
MBC NonSecure Enable Block Clear, array offset: 0x10018, array step: 0x2000
- ___O uint32_t MBC_NSE_BLK_CLR_ALL
MBC NonSecure Enable Block Clear All, array offset: 0x1001C, array step: 0x2000
- ___IO uint32_t MBC_MEMN_GLBAC [8]
MBC Global Access Control, array offset: 0x10020, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10040, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10140, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10180, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x101A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x101D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10340, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM1_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10640, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM3_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109F0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM5_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10D40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10D80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DD0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM6_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10E40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10F40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10F80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11040, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11140, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11180, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111C8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM8_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115A8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM10_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11640, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119A0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM12_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11D40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11D80, array step: index*0x2000, index2*0x4

```

__IO uint32_t MBC_DOM14_MEM1_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11DA0, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM2_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11DA8, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM2_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11DC8, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM3_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11DD0, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM3_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11DF0, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM0_BLK_CFG_W [64]
    MBC Memory Block Configuration Word, array offset: 0x11E40, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM0_BLK_NSE_W [16]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11F40, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM1_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11F80, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM1_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FA0, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM2_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11FA8, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM2_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FC8, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM3_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11FD0, array step: in-
    dex*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM3_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FF0, array step: in-
    dex*0x2000, index2*0x4

struct _TRDC_MRC_Type
#include <fsl_trdc_core.h> TRDC MRC control register definition.
MRC_DOM0_RGD_W[region][word].

```

Public Members

```

__IO uint32_t MRC_GLBCFG
    MRC Global Configuration Register, array offset: 0x14000, array step: 0x1000

```

___IO uint32_t MRC_NSE_RGN_INDIRECT
MRC NonSecure Enable Region Indirect, array offset: 0x14010, array step: 0x1000

___O uint32_t MRC_NSE_RGN_SET
MRC NonSecure Enable Region Set, array offset: 0x14014, array step: 0x1000

___O uint32_t MRC_NSE_RGN_CLR
MRC NonSecure Enable Region Clear, array offset: 0x14018, array step: 0x1000

___O uint32_t MRC_NSE_RGN_CLR_ALL
MRC NonSecure Enable Region Clear All, array offset: 0x1401C, array step: 0x1000

___IO uint32_t MRC_GLBAC [8]
MRC Global Access Control, array offset: 0x14020, array step: index*0x1000, index2*0x4

___IO uint32_t MRC_DOM0_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14040, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM0_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x140C0, array step: 0x1000

___IO uint32_t MRC_DOM1_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14140, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM1_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x141C0, array step: 0x1000

___IO uint32_t MRC_DOM2_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14240, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM2_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x142C0, array step: 0x1000

___IO uint32_t MRC_DOM3_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14340, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM3_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x143C0, array step: 0x1000

___IO uint32_t MRC_DOM4_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14440, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM4_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x144C0, array step: 0x1000

___IO uint32_t MRC_DOM5_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14540, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM5_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x145C0, array step: 0x1000

___IO uint32_t MRC_DOM6_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14640, array step: index*0x1000, index2*0x8, index3*0x4

```

__IO uint32_t MRC_DOM6_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x146C0, array step: 0x1000
__IO uint32_t MRC_DOM7_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14740,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM7_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x147C0, array step: 0x1000
__IO uint32_t MRC_DOM8_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14840,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM8_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x148C0, array step: 0x1000
__IO uint32_t MRC_DOM9_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14940,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM9_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x149C0, array step: 0x1000
__IO uint32_t MRC_DOM10_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14A40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM10_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14AC0, array step: 0x1000
__IO uint32_t MRC_DOM11_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14B40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM11_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14BC0, array step: 0x1000
__IO uint32_t MRC_DOM12_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14C40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM12_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14CC0, array step: 0x1000
__IO uint32_t MRC_DOM13_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14D40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM13_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14DC0, array step: 0x1000
__IO uint32_t MRC_DOM14_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14E40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM14_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14EC0, array step: 0x1000
__IO uint32_t MRC_DOM15_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14F40,
    array step: index*0x1000, index2*0x8, index3*0x4

```

___IO uint32_t MRC_DOM15_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14FC0, array step: 0x1000
struct MBC_DERR

Public Members

___I uint32_t W0
MBC Domain Error Word0 Register, array offset: 0x400, array step: 0x10
___I uint32_t W1
MBC Domain Error Word1 Register, array offset: 0x404, array step: 0x10
___O uint32_t W3
MBC Domain Error Word3 Register, array offset: 0x40C, array step: 0x10
struct MRC_DERR

Public Members

___I uint32_t W0
MRC Domain Error Word0 Register, array offset: 0x480, array step: 0x10
___I uint32_t W1
MRC Domain Error Word1 Register, array offset: 0x484, array step: 0x10
___O uint32_t W3
MRC Domain Error Word3 Register, array offset: 0x48C, array step: 0x10
union ___unnamed34___

Public Members

struct *_TRDC_DomainAssignment_Type* MDA_DFMT0[8]
struct *_TRDC_DomainAssignment_Type* MDA_DFMT1[8]
struct MDA_DFMT0

Public Members

___IO uint32_t MDA_W_DFMT0 [8]
DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20,
index2*0x4
struct MDA_DFMT1

Public Members

___IO uint32_t MDA_W_DFMT1 [1]
DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20,
index2*0x4

2.50 UTICK: MictoTick Timer Driver

`void UTICK_Init(UTICK_Type *base)`

Initializes an UTICK by turning its bus clock on.

`void UTICK_Deinit(UTICK_Type *base)`

Deinitializes a UTICK instance.

This function shuts down Utick bus clock

Parameters

- `base` – UTICK peripheral base address.

`uint32_t UTICK_GetStatusFlags(UTICK_Type *base)`

Get Status Flags.

This returns the status flag

Parameters

- `base` – UTICK peripheral base address.

Returns

status register value

`void UTICK_ClearStatusFlags(UTICK_Type *base)`

Clear Status Interrupt Flags.

This clears intr status flag

Parameters

- `base` – UTICK peripheral base address.

Returns

none

`void UTICK_SetTick(UTICK_Type *base, utick_mode_t mode, uint32_t count, utick_callback_t cb)`

Starts UTICK.

This function starts a repeat/onetime countdown with an optional callback

Parameters

- `base` – UTICK peripheral base address.
- `mode` – UTICK timer mode (ie `kUTICK_onetime` or `kUTICK_repeat`)
- `count` – UTICK timer mode (ie `kUTICK_onetime` or `kUTICK_repeat`)
- `cb` – UTICK callback (can be left as `NULL` if none, otherwise should be a `void func(void)`)

Returns

none

`void UTICK_HandleIRQ(UTICK_Type *base, utick_callback_t cb)`

UTICK Interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in `UTICK_SetTick()`). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- `base` – UTICK peripheral base address.

- `cb` – callback scheduled for this instance of UTICK

Returns

none

FSL_UTICK_DRIVER_VERSION

UTICK driver version 2.0.5.

enum `_utick_mode`

UTICK timer operational mode.

Values:

enumerator `kUTICK_Onetime`

Trigger once

enumerator `kUTICK_Repeat`

Trigger repeatedly

typedef enum `_utick_mode` `utick_mode_t`

UTICK timer operational mode.

typedef void (`*utick_callback_t`)(void)

UTICK callback function.

2.51 WUU: Wakeup Unit driver

void WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const `wuu_external_wakeup_pin_config_t` *config)

Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- `base` – MUU peripheral base address.
- `pinIndex` – The index of the external input pin. See Reference Manual for the details.
- `config` – Pointer to `wuu_external_wakeup_pin_config_t` structure.

void WUU_ClearExternalWakeupPinsConfig(WUU_Type *base, uint8_t pinIndex)

Disable and clear external wakeup pin settings.

Parameters

- `base` – MUU peripheral base address.
- `pinIndex` – The index of the external input pin.

static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- `base` – WUU peripheral base address.

Returns

Wakeup flags for all external wakeup pins.

```
static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)
```

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- base – WUU peripheral base address.
- mask – The mask of Wakeup pin index to be cleared.

```
void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                         wuu_internal_wakeup_module_event_t event)
```

Config Internal modules' event as the wake up sources.

This function configs the internal modules event as the wake up sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – Select interrupt or DMA/Trigger of the internal module as the wake up source.

```
void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                           wuu_internal_wakeup_module_event_t event)
```

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – The event(interrupt or DMA/trigger) of the internal module to disable.

```
static inline uint32_t WUU_GetModuleInterruptFlag(WUU_Type *base)
```

Get wakeup flags for internal wakeup modules.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all internal wakeup modules.

```
static inline bool WUU_GetInternalWakeupModuleFlag(WUU_Type *base, uint32_t moduleIndex)
```

Gets the internal module wakeup source flag.

This function checks the flag to detect whether the system is woken up by specific on-chip module interrupt.

Parameters

- base – WWU peripheral base address.
- moduleIndex – A module index, which starts from 0.

Returns

True if the specific pin is a wake up source.


```
void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const
                           wuu_pin_filter_config_t *config)
```

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filter operate mode filter wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filter.
- config – Pointer to wuu_pin_filter_config_t structure.

```
bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)
```

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

```
void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)
```

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

```
bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)
```

brief Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

```
void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)
```

brief Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

```
FSL_WUU_DRIVER_VERSION
```

Defines WUU driver version 2.4.0.

```
enum _wuu_external_pin_edge_detection
```

External WakeUp pin edge detection enumeration.

Values:

enumerator kWUU_ExternalPinDisable

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge
External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge
External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge
External input Pin enabled with any change detection.

enum _wu_external_wakeup_pin_event
External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt
External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest
External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent
External input Pin configured as Trigger event.

enum _wu_external_wakeup_pin_mode
External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD
External input Pin is active only during Deep Sleep/Power Down Mode.

enumerator kWUU_ExternalPinActiveAlways
External input Pin is active during all power modes.

enum _wu_internal_wakeup_module_event
Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt
Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger
Internal modules' DMA/Trigger as a wakeup source.

enum _wu_filter_edge
Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum `_wuui_filter_event`

Pin Filter event enumeration.

Values:

enumerator `kWUU_FilterInterrupt`

Filter output configured as interrupt.

enumerator `kWUU_FilterDMARequest`

Filter output configured as DMA request.

enumerator `kWUU_FilterTriggerEvent`

Filter output configured as Trigger event.

enum `_wuui_filter_mode`

Pin filter mode enumeration.

Values:

enumerator `kWUU_FilterActiveDSPD`

External input pin filter is active only during Deep Sleep/Power Down Mode.

enumerator `kWUU_FilterActiveAlways`

External input Pin filter is active during all power modes.

typedef enum `_wuui_external_pin_edge_detection` `wuui_external_pin_edge_detection_t`

External WakeUp pin edge detection enumeration.

typedef enum `_wuui_external_wakeup_pin_event` `wuui_external_wakeup_pin_event_t`

External input wake up pin event enumeration.

typedef enum `_wuui_external_wakeup_pin_mode` `wuui_external_wakeup_pin_mode_t`

External input wake up pin mode enumeration.

typedef enum `_wuui_internal_wakeup_module_event` `wuui_internal_wakeup_module_event_t`

Internal module wake up event enumeration.

typedef enum `_wuui_filter_edge` `wuui_filter_edge_t`

Pin filter edge enumeration.

typedef enum `_wuui_filter_event` `wuui_filter_event_t`

Pin Filter event enumeration.

typedef enum `_wuui_filter_mode` `wuui_filter_mode_t`

Pin filter mode enumeration.

typedef struct `_wuui_external_wakeup_pin_config` `wuui_external_wakeup_pin_config_t`

External WakeUp pin configuration.

typedef struct `_wuui_pin_filter_config` `wuui_pin_filter_config_t`

Pin Filter configuration.

struct `_wuui_external_wakeup_pin_config`

`#include <fsl_wuui.h>` External WakeUp pin configuration.

Public Members

`wuui_external_pin_edge_detection_t` edge

External Input pin edge detection.

`wuui_external_wakeup_pin_event_t` event

External Input wakeup Pin event

wuu_external_wakeup_pin_mode_t mode

External Input wakeup Pin operate mode.

struct *_wuu_pin_filter_config*

#include <fsl_wuu.h> Pin Filter configuration.

Public Members

uint32_t pinIndex

The index of wakeup pin to be muxxed into filter.

wuu_filter_edge_t edge

The edge of the pin digital filter.

wuu_filter_event_t event

The event of the filter output.

wuu_filter_mode_t mode

The mode of the filter operate.

2.52 WWDT: Windowed Watchdog Timer Driver

void WWDT_GetDefaultConfig(*wwdt_config_t* *config)

Initializes WWDT configure structure.

This function initializes the WWDT configure structure to default value. The default value are:

```
config->enableWwdt = true;
config->enableWatchdogReset = false;
config->enableWatchdogProtect = false;
config->enableLockOscillator = false;
config->windowValue = 0xFFFFF0U;
config->timeoutValue = 0xFFFFF0U;
config->warningValue = 0;
```

See also:

wwdt_config_t

Parameters

- config – Pointer to WWDT config structure.

void WWDT_Init(WWDT_Type *base, const *wwdt_config_t* *config)

Initializes the WWDT.

This function initializes the WWDT. When called, the WWDT runs according to the configuration.

Example:

```
wwdt_config_t config;
WWDT_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
WWDT_Init(wwdt_base,&config);
```

Parameters

- base – WWDT peripheral base address
- config – The configuration of WWDT

void WWDT_Deinit(WWDT_Type *base)

Shuts down the WWDT.

This function shuts down the WWDT.

Parameters

- base – WWDT peripheral base address

static inline void WWDT_Enable(WWDT_Type *base)

Enables the WWDT module.

This function write value into WWDT_MOD register to enable the WWDT, it is a write-once bit; once this bit is set to one and a watchdog feed is performed, the watchdog timer will run permanently.

Parameters

- base – WWDT peripheral base address

static inline void WWDT_Disable(WWDT_Type *base)

Disables the WWDT module.

Deprecated:

Do not use this function. It will be deleted in next release version, for once the bit field of WDEN written with a 1, it can not be re-written with a 0.

This function write value into WWDT_MOD register to disable the WWDT.

Parameters

- base – WWDT peripheral base address

static inline uint32_t WWDT_GetStatusFlags(WWDT_Type *base)

Gets all WWDT status flags.

This function gets all status flags.

Example for getting Timeout Flag:

```
uint32_t status;
status = WWDT_GetStatusFlags(wwdt_base) & kWWDT_TimeoutFlag;
```

Parameters

- base – WWDT peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `_wwdt_status_flags_t`

void WWDT_ClearStatusFlags(WWDT_Type *base, uint32_t mask)

Clear WWDT flag.

This function clears WWDT status flag.

Example for clearing warning flag:

```
WWDT_ClearStatusFlags(wwdt_base, kWWDT_WarningFlag);
```

Parameters

- `base` – WWDT peripheral base address
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `_wwdt_status_flags_t`

`static inline void WWDT_SetWarningValue(WWDT_Type *base, uint32_t warningValue)`

Set the WWDT warning value.

The `WDWARNINT` register determines the watchdog timer counter value that will generate a watchdog interrupt. When the watchdog timer counter is no longer greater than the value defined by `WARNINT`, an interrupt will be generated after the subsequent `WDCLK`.

Parameters

- `base` – WWDT peripheral base address
- `warningValue` – WWDT warning value.

`static inline void WWDT_SetTimeoutValue(WWDT_Type *base, uint32_t timeoutCount)`

Set the WWDT timeout value.

This function sets the timeout value. Every time a feed sequence occurs the value in the `TC` register is loaded into the Watchdog timer. Writing a value below `0xFF` will cause `0xFF` to be loaded into the `TC` register. Thus the minimum time-out interval is $TWDCLK * 256 * 4$. If `enableWatchdogProtect` flag is true in `wwdt_config_t` config structure, any attempt to change the timeout value before the watchdog counter is below the warning and window values will cause a watchdog reset and set the `WDTOF` flag.

Parameters

- `base` – WWDT peripheral base address
- `timeoutCount` – WWDT timeout value, count of WWDT clock tick.

`static inline void WWDT_SetWindowValue(WWDT_Type *base, uint32_t windowValue)`

Sets the WWDT window value.

The `WINDOW` register determines the highest `TV` value allowed when a watchdog feed is performed. If a feed sequence occurs when timer value is greater than the value in `WINDOW`, a watchdog event will occur. To disable windowing, set `windowValue` to `0xFFFFFFFF` (maximum possible timer value) so windowing is not in effect.

Parameters

- `base` – WWDT peripheral base address
- `windowValue` – WWDT window value.

`void WWDT_Refresh(WWDT_Type *base)`

Refreshes the WWDT timer.

This function feeds the WWDT. This function should be called before WWDT timer is in timeout. Otherwise, a reset is asserted.

Parameters

- `base` – WWDT peripheral base address

`FSL_WWDT_DRIVER_VERSION`

Defines WWDT driver version.

`WWDT_FIRST_WORD_OF_REFRESH`

First word of refresh sequence

`WWDT_SECOND_WORD_OF_REFRESH`

Second word of refresh sequence

enum __wwdt_status_flags_t

WWDT status flags.

This structure contains the WWDT status flags for use in the WWDT functions.

Values:

enumerator kWWDT_TimeoutFlag

Time-out flag, set when the timer times out

enumerator kWWDT_WarningFlag

Warning interrupt flag, set when timer is below the value WDWARNINT

typedef struct __wwdt_config wwdt_config_t

Describes WWDT configuration structure.

struct __wwdt_config

#include <fsl_wwdt.h> Describes WWDT configuration structure.

Public Members

bool enableWwdt

Enables or disables WWDT

bool enableWatchdogReset

true: Watchdog timeout will cause a chip reset false: Watchdog timeout will not cause a chip reset

bool enableWatchdogProtect

true: Enable watchdog protect i.e timeout value can only be changed after counter is below warning & window values false: Disable watchdog protect; timeout value can be changed at any time

bool enableLockOscillator

true: Disabling or powering down the watchdog oscillator is prevented Once set, this bit can only be cleared by a reset false: Do not lock oscillator

uint32_t windowValue

Window value, set this to 0xFFFFFFFF if windowing is not in effect

uint32_t timeoutValue

Timeout value

uint32_t warningValue

Watchdog time counter value that will generate a warning interrupt. Set this to 0 for no warning

uint32_t clockFreq_Hz

Watchdog clock source frequency.

Chapter 3

Middleware

3.1 MultiCore

3.1.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 25.06.00.

This software package contains components for efficient work with multicore devices as well as for the multiprocessor communication.

What is new

- eRPC [CHANGELOG](#)
- RMPmsg-Lite [CHANGELOG](#)
- MCMgr [CHANGELOG](#)
- Supported evaluation boards (multicore examples):
 - LPCXpresso55S69
 - FRDM-K32L3A6
 - MIMXRT1170-EVKB
 - MIMXRT1160-EVK
 - MIMXRT1180-EVK
 - MCX-N5XX-EVK
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK

- KW47-EVK
- KW47-LOC
- FRDM-MCXW72
- MCX-W72-EVK
- Supported evaluation boards (multiprocessor examples):
 - LPCXpresso55S36
 - FRDM-K22F
 - FRDM-K32L2B
 - MIMXRT685-EVK
 - MIMXRT1170-EVKB
 - MIMXRT1180
 - FRDM-MCXN236
 - FRDM-MCXC242
 - FRDM-MCXC444
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: [Development tools](#)

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable			Location
Multicore SDK	location	<MCSDK_dir>	<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation			<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component			<MCSDK_dir>/erpc/
Multicore Manager component			<MCSDK_dir>/mcmgr/
RPMMsg-Lite			<MCSDK_dir>/rpmsg_lite/
Multicore demo applications			<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications			<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.

The following multicore demo applications are located together with other MCUXpresso SDK examples in

the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.

The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in


the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

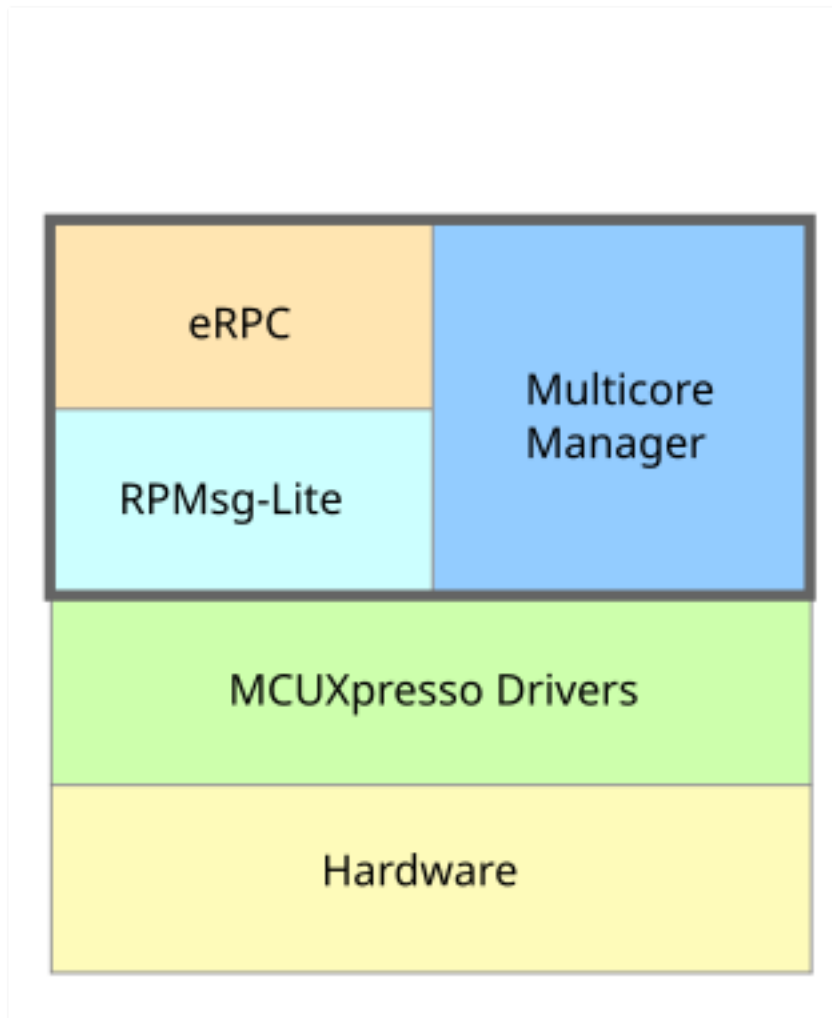


All the MCSDK-related files are located in `<MCUXpressoSDK_install_dir>/middleware/multicore` folder.

For supported toolchain versions, see the *Multicore SDK v25.06.00 Release Notes* (document MCS-DKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.


Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RMsg-Lite):** Inter-Processor Communication library.

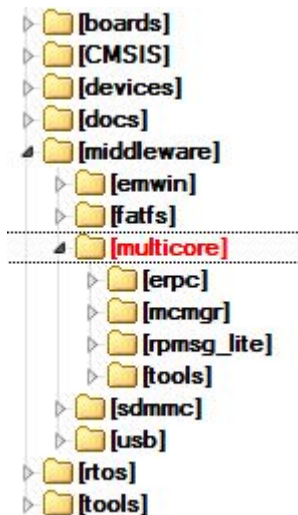

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TCP/IP, UART, and so on). The server unmarshals the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

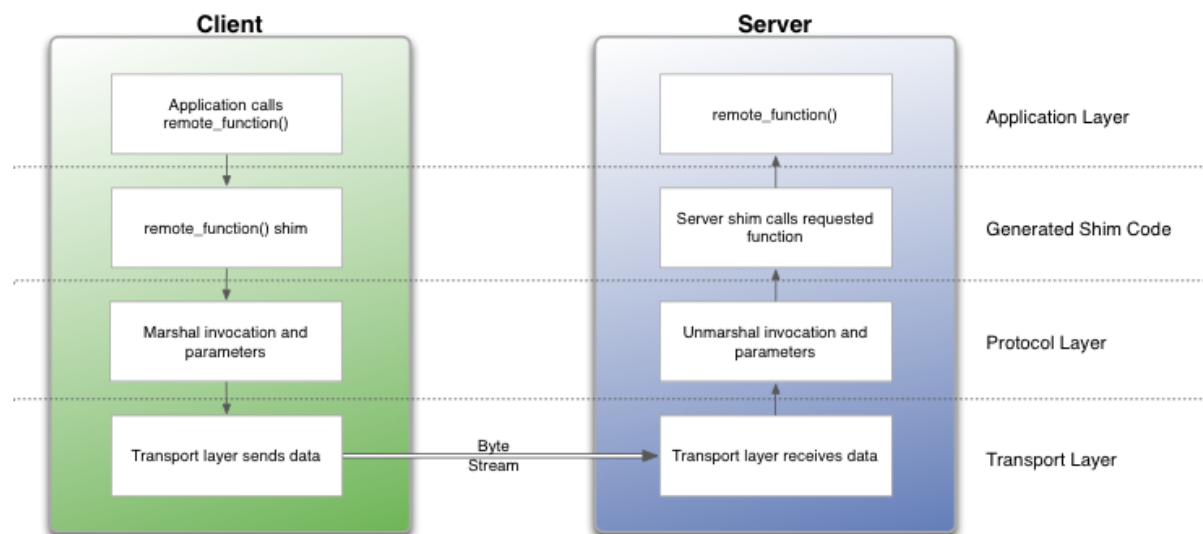

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc` folder. For detailed information about the eRPC, see the documentation available in the

<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr folder. For detailed information about the MCMGR library, see the documentation available in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.
- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the <MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite/doc folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location		Folder
Multicore projects	example	<MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/
Multiprocessor projects	example	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[25.06.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.0
 - RPSMsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.7
 - RPSMsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.6
 - RPSMsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.12.0
 - eRPC generator (erpcgen) v1.12.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.11.0
 - eRPC generator (erpcgen) v1.11.0
 - Multicore Manager (MCMgr) v4.1.4
 - RPSMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.1
 - eRPC generator (erpcgen) v1.8.1
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.0
 - eRPC generator (erpcgen) v1.8.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.4
 - eRPC generator (erpcgen) v1.7.4
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.3
 - eRPC generator (erpcgen) v1.7.3
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.2
 - eRPC generator (erpcgen) v1.7.2
 - Multicore Manager (MCMgr) v4.0.3
 - RPSMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.1
 - eRPC generator (erpcgen) v1.7.1
 - Multicore Manager (MCMgr) v4.0.2
 - RPSMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.0
 - eRPC generator (erpcgen) v1.7.0
 - Multicore Manager (MCMgr) v4.0.1
 - RPSMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.6.0
 - eRPC generator (erpcgen) v1.6.0
 - Multicore Manager (MCMgr) v4.0.0
 - RPSMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.5.0
 - eRPC generator (erpcgen) v1.5.0
 - Multicore Manager (MCMgr) v3.0.0
 - RPSMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.4.0
 - eRPC generator (erpcgen) v1.4.0
 - Multicore Manager (MCMgr) v2.0.1
 - RPSMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.3.0
 - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.2.0
 - eRPC generator (erpcgen) v1.2.0
 - Multicore Manager (MCMgr) v2.0.0
 - RPSMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.1.0
 - Multicore Manager (MCMgr) v1.1.0
 - Open-AMP / RPSMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.0.0
 - Multicore Manager (MCMgr) v1.0.0
 - Open-AMP / RPMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components

RPMSG-Lite

MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [RPMSG-Lite - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMsg) protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (<https://github.com/OpenAMP/open-amp>), the RPMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMsg-Lite.

The RPMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For Further documentation, please look at doxygen documentation at: <https://nxp-mcuxpresso.github.io/rpmsg-lite/>

For overview please read RPMSG-Lite VirtIO Overview.

For RPMSG-Lite Design Considerations please read RPMSG-Lite Design Considerations.

Motivation to create RPSMsg-Lite There are multiple reasons why RPSMsg-Lite was developed. One reason is the need for the small footprint of the RPSMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPSMsg implementation.

RPSMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.


Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPSMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPSMsg implementation and new RPSMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPSMsg / Release (reference)	5547	456 + dynamic
RPSMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPSMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%


Implementation The implementation of RPSMsg-Lite can be divided into three sub-components, from which two are optional. The core component is situated in `rpmsg_lite.c`. Two optional components are used to implement a blocking receive API (in `rpmsg_queue.c`) and dynamic “named” endpoint creation and deletion announcement service (in `rpmsg_ns.c`).

The actual “media access” layer is implemented in `virtqueue.c`, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as `vring` or `virtqueue`.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in `rpmsg_env_bm.c`, and the FreeRTOS environment is implemented in `rpmsg_env_freertos.c` etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in `rpmsg_platform.c` and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

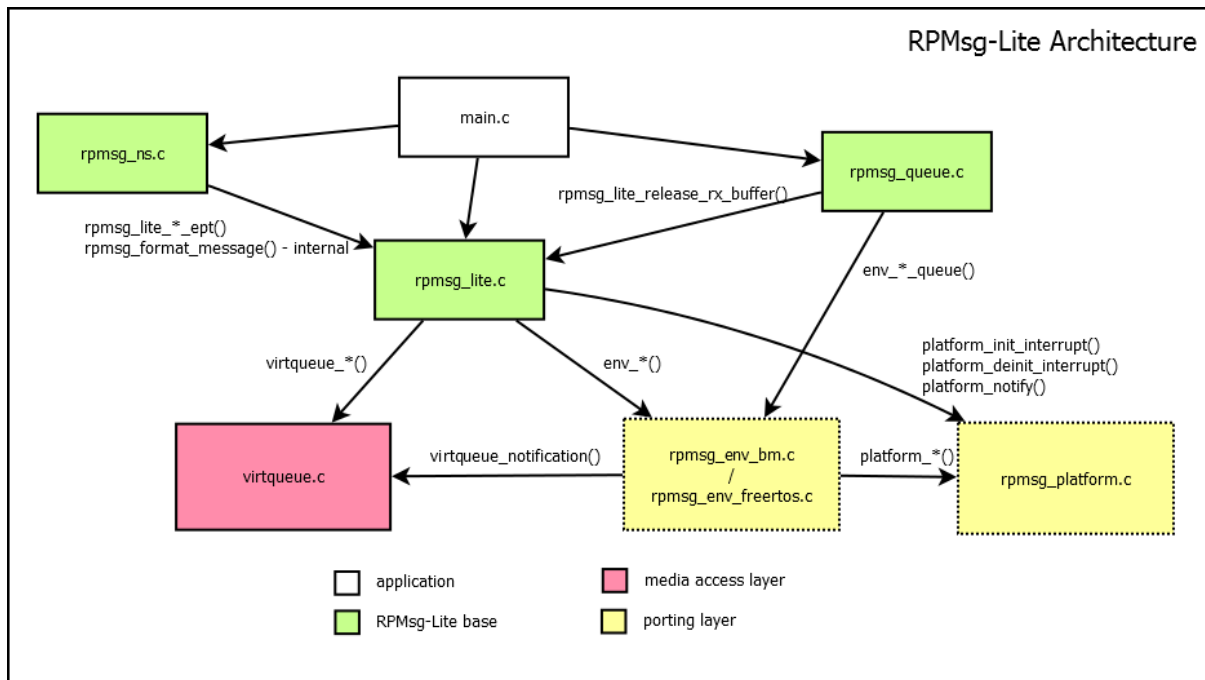

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function. However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

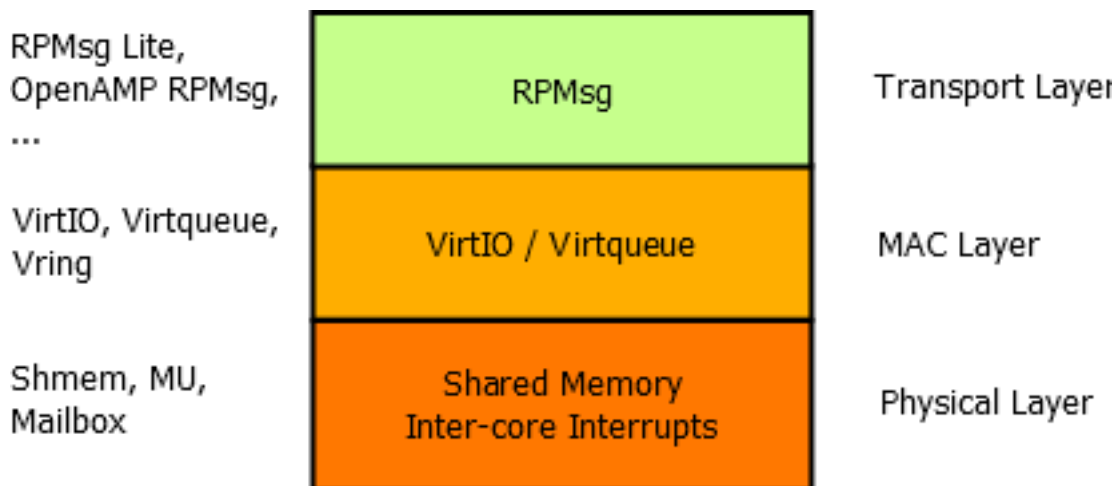

Queue sub-component (optional) This subcomponent is optional and requires implementation of the `env_*_queue()` functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action

in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the `/rpmmsg_lite/lib/include` directory to the include path and in the application, include either the `rpmmsg_lite.h` header file, or optionally also include the `rpmmsg_queue.h` and/or `rpmmsg_ns.h` files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, `rpmmsg_env_myrtos.c`) and to include it in the project build.

The initialization of the stack is done by calling the `rpmmsg_lite_master_init()` on the master side and the `rpmmsg_lite_remote_init()` on the remote side. This initialization function must be called prior to any RPMMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the `rpmmsg_lite_create_ept()` function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the `RL_USE_STATIC_API` option is set to 1. If not, the stack internally calls `env_alloc()` to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the `rpmmsg_queue_create()` function must be called before calling `rpmmsg_lite_create_ept()`. The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to `rpmmsg_queue_rx_cb()`. Then, it is possible to use `rpmmsg_queue_receive()` function to listen on a queue object for incoming messages. The `rpmmsg_lite_send()` function is used to send messages to the other side.

The RPMMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.


no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the `rpmmsg_lite_alloc_tx_buffer()` function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the `rpmmsg_lite_alloc_tx_buffer()` size output parameter).
- Call the `rpmmsg_lite_send_nocopy()` function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the `rpmmsg_lite_send_nocopy()` function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the `rpmmsg_queue_rcv_nocopy()` function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the `rpmmsg_queue_nocopy_free()` function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMMsg-Lite objects he has created in case of deinitialization. In order to do this, the function `rpmmsg_queue_destroy()` is used to destroy a queue, `rpmmsg_lite_destroy_ept()` is used to destroy an endpoint and finally, `rpmmsg_lite_deinit()` is used to deinitialize the RPMMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMMsg-Lite does not check this internally, since its main aim is to be lightweight.

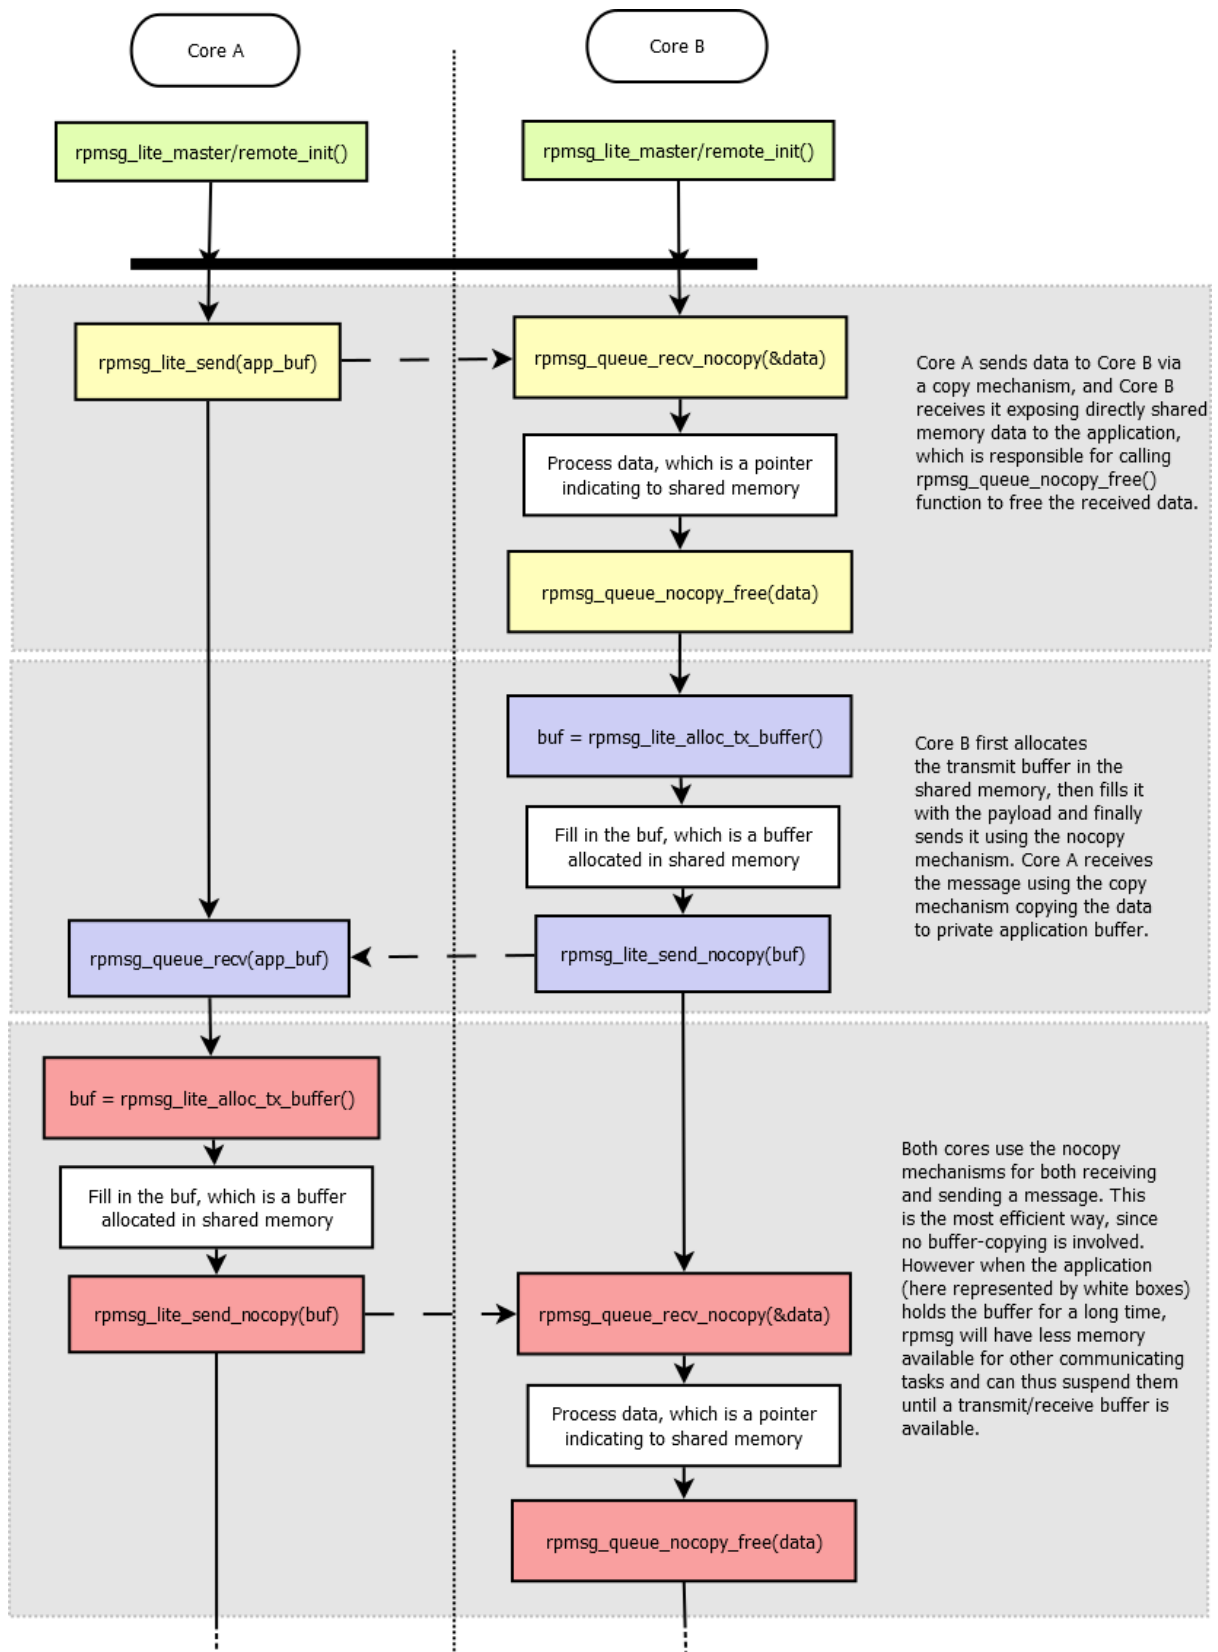

Examples RPSMsg Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages. To get the board list with multicore support (RPSMsg Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for RPMsg_Lite multicore examples with 'rpmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMsg_Lite multicore examples is using the [mcuxsdk-manifests](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in [readme section](#). Once done the armgcc rpmsg_lite examples can be found in

mcuxsdk/examples/_<board_name>/multicore_examples

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMsg_Lite examples use the 'rpmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in lib/rpmsg_lite/porting/environment folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- rpmsg_env_bm.c
- rpmsg_env_freertos.c
- rpmsg_env_xos.c
- rpmsg_env_threadx.c

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in linker file is also a good practise, it is recommended to use linker files from MCUXpressoSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMsg-Lite can be configured at the compile time. The default configuration is defined in the rpmsg_default_config.h header file. This configuration can be customized by the user by including rpmsg_config.h file with custom settings. The following table summarizes all possible RPMsg-Lite configuration options.

Config- uration option	De- fault value	Usage
RL_MS_PE (1)		Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFFE (496)		Size of the buffer payload, it must be equal to (240, 496, 1008, ...) [$2^n - 16$]
RL_BUFFE (2)		Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H (1)		Zero-copy API functions enabled/disabled.
RL_USE_S' (0)		Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D (0)		Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF (0)		Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M (0)		When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E (0)		When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU (0)		When enabled buffer pointers passed to <code>rpmsg_lite_send_nocopy()</code> and <code>rpmsg_lite_release_rx_buffer()</code> functions (enabled by <code>RL_API_HAS_ZEROCOPY</code> config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLO (0)		When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLO (0)		It allows to define custom shared memory configuration and replacing the shared memory related global settings from <code>rpmsg_config.h</code> . This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg-Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSER	see <code>rpmsg</code>	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the [llvm](#) project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the `.clang-format` file, placed in a root of the rpmsg-lite directory where Python script `run_clang_format.py` can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, **Lockless Shared Memory Based Multicore Communication Protocol**
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMSG-Lite All notable changes to this project will be documented in this file. The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Fixed

- Fixed CERT-C INT31-C violation in platform_notify function in rpmsg_platform.c for imxrt700_m33, imxrt700_hifi4, imxrt700_hifi1 platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change rpmsg_platform.c to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed env_wait_for_link_up function to handle timeout in link state checks for baremetal and qnx environment, RL_BLOCK mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure RL_PLATFORM_HIGHEST_LINK_ID remains within safe range for 16-bit casting in virtqueue ID creation.
- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in shmem_length - (uint32_t)RL_VRING_OVERHEAD and shmem_length - 2U * shmem_config.vring_size expressions.
- Fixed CERT INT31-C violation in platform_interrupt_disable() and similar functions by replacing unsafe cast from uint32_t to int32_t with a return of 0 constant.
- Fixed unsigned integer underflow in rpmsg_lite_alloc_tx_buffer() where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in rpmsg_lite.c where size parameter was cast from uint32_t to uint16_t without proper validation.
 - Applied consistent masking approach to both size and flags parameters: (uint16_t)(value & 0xFFFFU).
 - This fix prevents potential data loss when size values exceed 65535.

- Fixed CERT INT31-C violation in `env_memset` functions by explicitly converting `int32_t` values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard `memset()` function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
 - `rpmsg_env_freertos.c`: Added validation before converting `int32_t` to `UBaseType_t`.
 - `rpmsg_env_qnx.c`: Fixed format string and added validation before assigning to `mqstat` fields.
 - `rpmsg_env_threadx.c`: Added validation to prevent integer overflow and negative values.
 - `rpmsg_env_xos.c`: Added range checking before casting to `uint16_t`.
 - `rpmsg_env_zephyr.c`: Added validation before passing values to `k_msgq_init`.
- Fixed a CERT INT31-C compliance issue in `env_get_current_queue_size()` function where an unsigned queue count was cast to a signed `int32_t` without proper validation, which could lead to lost or misinterpreted data if queue size exceeded `INT32_MAX`.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where `memcmp()` return value (signed int) was compared with unsigned constant without proper type handling.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where casting from `uint32_t` to `uint16_t` could potentially result in data loss. Changed length variable type from `uint16_t` to `uint32_t` to properly handle memory address differences without truncation.
- Fixed potential integer overflow in `env_sleep_msec()` function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on `imx943` platform.
- Added `RL_MAX_BUFFER_COUNT` (32768U) and `RL_MAX_VRING_ALIGN` (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in `vring_need_event()`, added cast to `uint16_t` for each operand.

v5.1.4 - 27-Mar-2025

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025

Added

- Memory cache management of shared memory. Enable with `#define RL_USE_DCACHE (1)` in `rpmsg_config.h` in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for imx95, imxrt700, mcmxw71x, mcmxw72x, kw47b42 added.

v5.1.2 - 08-Jul-2024

Changed

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024

Added

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023

Added

- RPMsg-Lite: Added aarch64 support.

Changed

- RPMsg-Lite: Increased the queue size to $(2 * RL\_BUFFER\_COUNT)$ to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023

Added

- Timeout parameter added to `rpmsg_lite_wait_for_link_up` API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- VRING_SIZE is set based on number of used buffers now (as calculated in vring_init) - updated for all platforms that are not communicating to Linux rpmsg counterpart.

Fixed

- Fixed wrong RL_VRING_OVERHEAD macro comment in platform.h files
- Misra corrections.

v4.0.0 - 20-Jun-2022

Added

- Added support for custom shared memory arrangement per the RPMsg_Lite instance.
- Introduced new rpmsg_lite_wait_for_link_up() API function - this allows to avoid using busy loops in rtos environments, GitHub PR [#21](#).

Changed

- Adjusted rpmsg_lite_is_link_up() to return RL_TRUE/RL_FALSE.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR [#14](#).
- Aligned rpmsg_env_xos.c and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR [#19](#), [#20](#).

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the `rpmsg_lite_get_endpoint_from_addr` function.

Changed

- Updated `RL_BUFFER_COUNT` documentation (issue [#10](#)).
- Updated `imxrt600_hifi4` platform layer.

v3.1.1 - 15-Jan-2021

Added

- Introduced `RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION` config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in `rpmsg_lite_rx_callback()` for QNX env.
- Correction of `rpmsg_lite_instance` structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019

Added

- Added configuration macro `RL_DEBUG_CHECK_BUFFERS`.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the `RL_USE_ENVIRONMENT_CONTEXT` configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017

Added

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremetal and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : `mcuxsdk-middleware-mcmgr` (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on `mcux-sdk-middleware-mcmgr` component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)


Visit [Multicore Manager - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr directory.

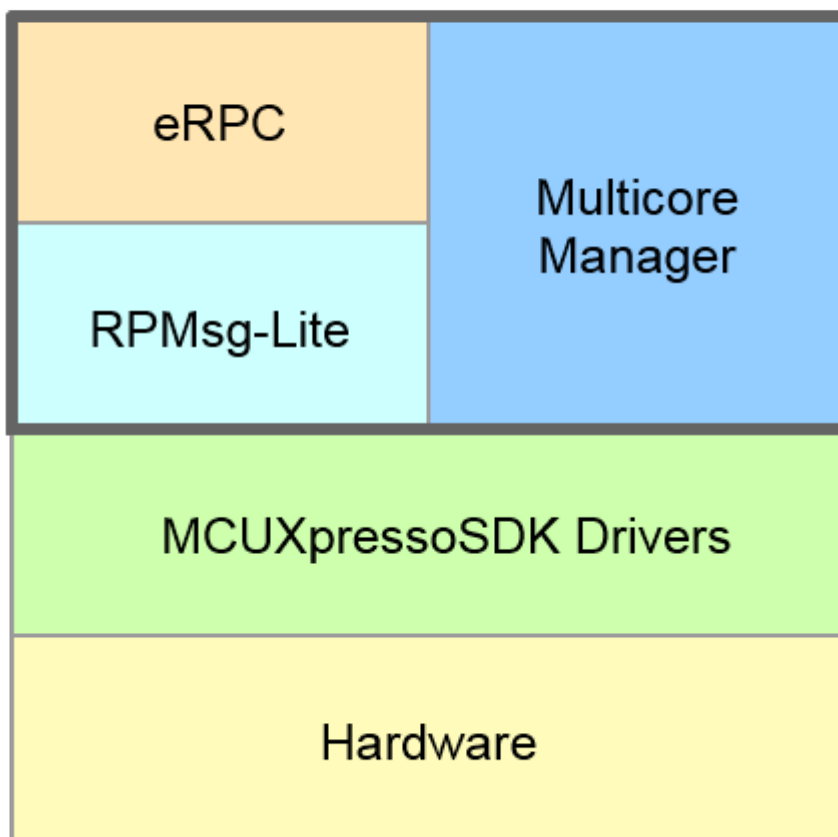

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

For Further API documentation, please look at doxygen documentation at: <https://nxp-mcuxpresso.github.io/mcux-mcmgr/>

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```
#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,
    ↪ starting synchronously. */
    MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
    .
    .
    .
    /* Stop secondary core execution. */
    MCMGR_StopCore(kMCMGR_Core1);
}
```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. mcmgr_event_type_t enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```
#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()
↪ called on the secondary core side */
void RPSMsgRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
    uint16_t RPSMsgRemoteReadyEventData[NUMBER_OF_CORES] = {0};

    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();
```

(continues on next page)

(continued from previous page)

```

/* Initialize MCMGR, install generic event handlers */
MCMGR_Init();

/* Register the application event before starting the secondary core */
MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RPMMsgRemoteReadyEventHandler, (void_)
↳)RPMMsgRemoteReadyEventData);

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpmsg_lite_base address_
↳as startup data, starting synchronously. */
MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpmsg_lite_
↳base, kMCMGR_Start_Synchronous);

/* Wait until the secondary core application signals the rpmsg remote has been initialized and is ready to_
↳communicate. */
while(APP_RPMSG_READY_EVENT_DATA != RPMMsgRemoteReadyEventData[APP_SECONDARY_
↳CORE]) {};
.
.
.
}

```

Code for the secondary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)


void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
    .
    .
    .

    /* Signal the to other core that we are ready by triggering the event and passing the APP_RPMSG_
    ↳READY_EVENT_DATA */
    MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPMSG_
    ↳READY_EVENT_DATA);
    .
    .
    .
}

```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

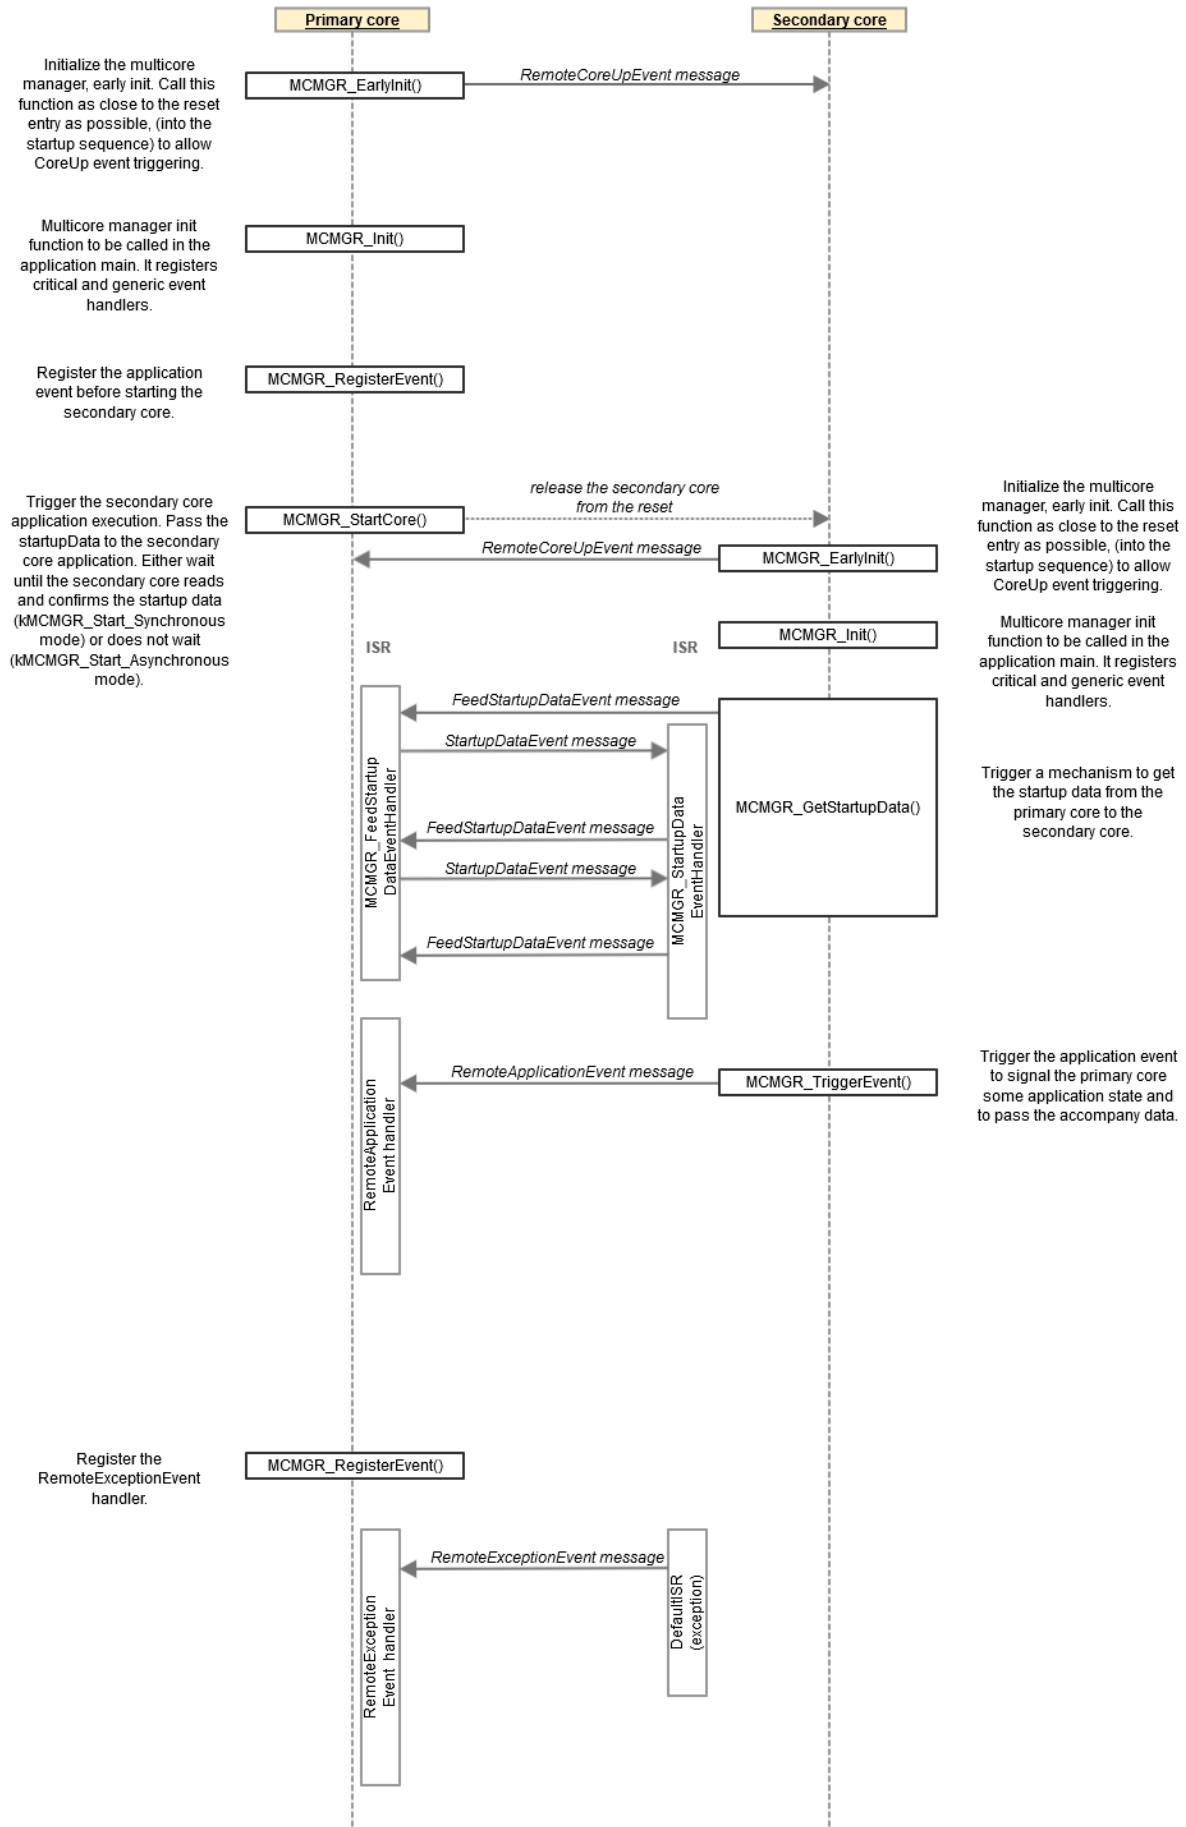

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Added

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more then two cores. Breaking API change by adding parameter `coreNum` specifying core number in functions bellow.
 - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

When registering the event with function `MCMGR_RegisterEvent()` user now needs to provide `callbackData` pointer to array of elements per every core in system (see README.md for example). In case of systems with only two cores the `coreNum` in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: [Porting-GuideTo_v5.md](#)

- Updated all porting files to support new MCMGR API.
- Added new platform specific include file `mcmgr_platform.h`. It will contain common platform specific macros that can be then used in `mcmgr` and application. e.g. platform core count `MCMGR_CORECOUNT` 4.
- Move all header files to new `inc` directory.
- Added new platform-specific include files `inc/platform/<platform_name>/mcmgr_platform.h`.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- `mcmgr_stop_core_internal()` function now returns `kStatus_MCMGR_NotImplemented` status code instead of `kStatus_MCMGR_Success` when device does not support stop of secondary core. Ports affected: kw32w1, kw45b41, kw45b42, mcxw716, mcxw727.

[v4.1.6]**Added**

- Multicore Manager moved to standalone repository.
- Add porting layers for imxrt700, mcmxw727, kw47b42.
- New `MCMGR_ProcessDeferredRxIsr()` API added.

[v4.1.5]**Added**

- Add notification into `MCMGR_EarlyInit` and `mcmgr_early_init_internal` functions to avoid using uninitialized data in their implementations.

[v4.1.4]**Fixed**

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]**Added**

- Add porting layers for imxrt1180.

Fixed

- `mu_isr()` updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- `mcmgr_mu_internal.c` code adaptation to new supported SoCs.

[v4.1.2]**Fixed**

- Update `mcmgr_stop_core_internal()` implementations to set core state to `kMCMGR_ResetCoreState`.

[v4.1.0]

Fixed

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]

Fixed

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]

Fixed

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]

Fixed

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]**Added**

- Support for lpcxpresso54114 board.

[v1.1.0]**Fixed**

- Ported to KSDK 2.0.0.

[v1.0.0]**Added**

- Initial release.

eRPC**MCUXpresso SDK : mcuxsdk-middleware-erpc**

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [eRPC - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

eRPC

- [MCUXpresso SDK : mcuxsdk-middleware-erpc](#)
 - [Overview](#)
 - [Documentation](#)
 - [Setup](#)
 - [Contribution](#)
- [eRPC](#)
 - [About](#)
 - [Releases](#)
 - * [Edge releases](#)
 - [Documentation](#)
 - [Examples](#)
 - [References](#)
 - [Directories](#)
 - [Building and installing](#)
 - * [Requirements](#)
 - [Windows](#)
 - [Mac OS X](#)
 - * [Building](#)
 - [CMake and KConfig](#)
 - [Make](#)
 - * [Installing for Python](#)
 - [Known issues and limitations](#)
 - [Code providing](#)

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent [Apache Thrift](#), eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the

internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called `erpcgen` is included. It accepts input IDL files, having an `.erpc` extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. `erpcgen` can generate either C/C++ or Python code.

Example `.erpc` file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* init eRPC client IO service */
    initIO_client(client_manager);

    // Now we can call the remote function to turn on the green LED.
    set_led(kGreen, true);

    /* deinit objects */
    deinitIO_client();
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
```

(continues on next page)

(continued from previous page)

```

    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

Server side usage:

```

// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, service);

    // Run the server.
    erpc_server_run();

    /* deinit objects */
    destroy_IO_service(service);
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

```

// Implement the remote function.
class IO : public IO_interface
{
    /* eRPC call definition */
    void set_led(LEDName whichLed, bool onOrOff) override {
        // implementation goes here
    }
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    IO IOImpl;
    IO_service io(&IOImpl);

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, &io);

    /* poll for requests */
}

```

(continues on next page)

(continued from previous page)

```

erpc_status_t err = server.run();

/* deinit objects */
erpc_server_deinit(server);
erpc_mbf_dynamic_deinit(message_buffer_factory);
erpc_transport_tcp_deinit(transport);
}

```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- [NXP RPMsg-Lite / RPMsg TTY](#)
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the [LICENSE file](#) for the full license text.

Releases [eRPC releases](#)

Edge releases Edge releases can be found on [eRPC CircleCI](#) webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation [Documentation](#) is in the wiki section.

[eRPC Infrastructure documentation](#)

Examples *Example IDL* is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the [mcux-sdk](#) Github repo. Follow the description how to use the West tool to clone and

update the mcuxsdk repo in [readme Overview section](#). Once done the armgcc eRPC examples can be found in

mcuxsdk/examples/<board_name>/multicore_examples or in

mcuxsdk/examples/<board_name>/multiprocessor_examples folders.

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- [erpc \(EmbeddedRPC\) getting started notes](#)
- [ERPC Linux Local Environment Construction and Use](#)
- [The New Wio Terminal eRPC Firmware](#)

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of *erpcgen* using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build *erpcgen* for OS X.

- **CMake** (minimal version 3.20.0)
- Generator - **Make, Ninja, ...**
- C/C++ **compiler** - **GCC, CLANG, ...**
- **Bison** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

- **Make**
- **C/C++ compiler - GCC, CLANG, ...**
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

To install MinGW, Bison, Flex locally on Windows:

Mandatory for case, when build for different architecture is needed

- ## Mac OS X

Building

Generate project, config and build. In *erpc/* execute:

****CMake will use the system's default compilers and generator**

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and ↵
↵examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

Make To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to sudo the make install.

By default this will install into /usr/local. If you want to install elsewhere, set the PREFIX environment variable. Example for installing into /opt:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- erpc: build the liberpc.a static library
- erpcgen: build the erpcgen tool
- erpcsniffer: build the sniffer tool
- test: build the unit tests under the *test* directory
- all: build all of the above
- install: install liberpc.a, erpcgen, and include files

eRPC code is validated with respect to the C++ 11 standard.

Installing for Python To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

Known issues and limitations

- Static allocations controlled by the ERPC_ALLOCATION_POLICY config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

Code providing Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

eRPC Getting Started

Overview This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

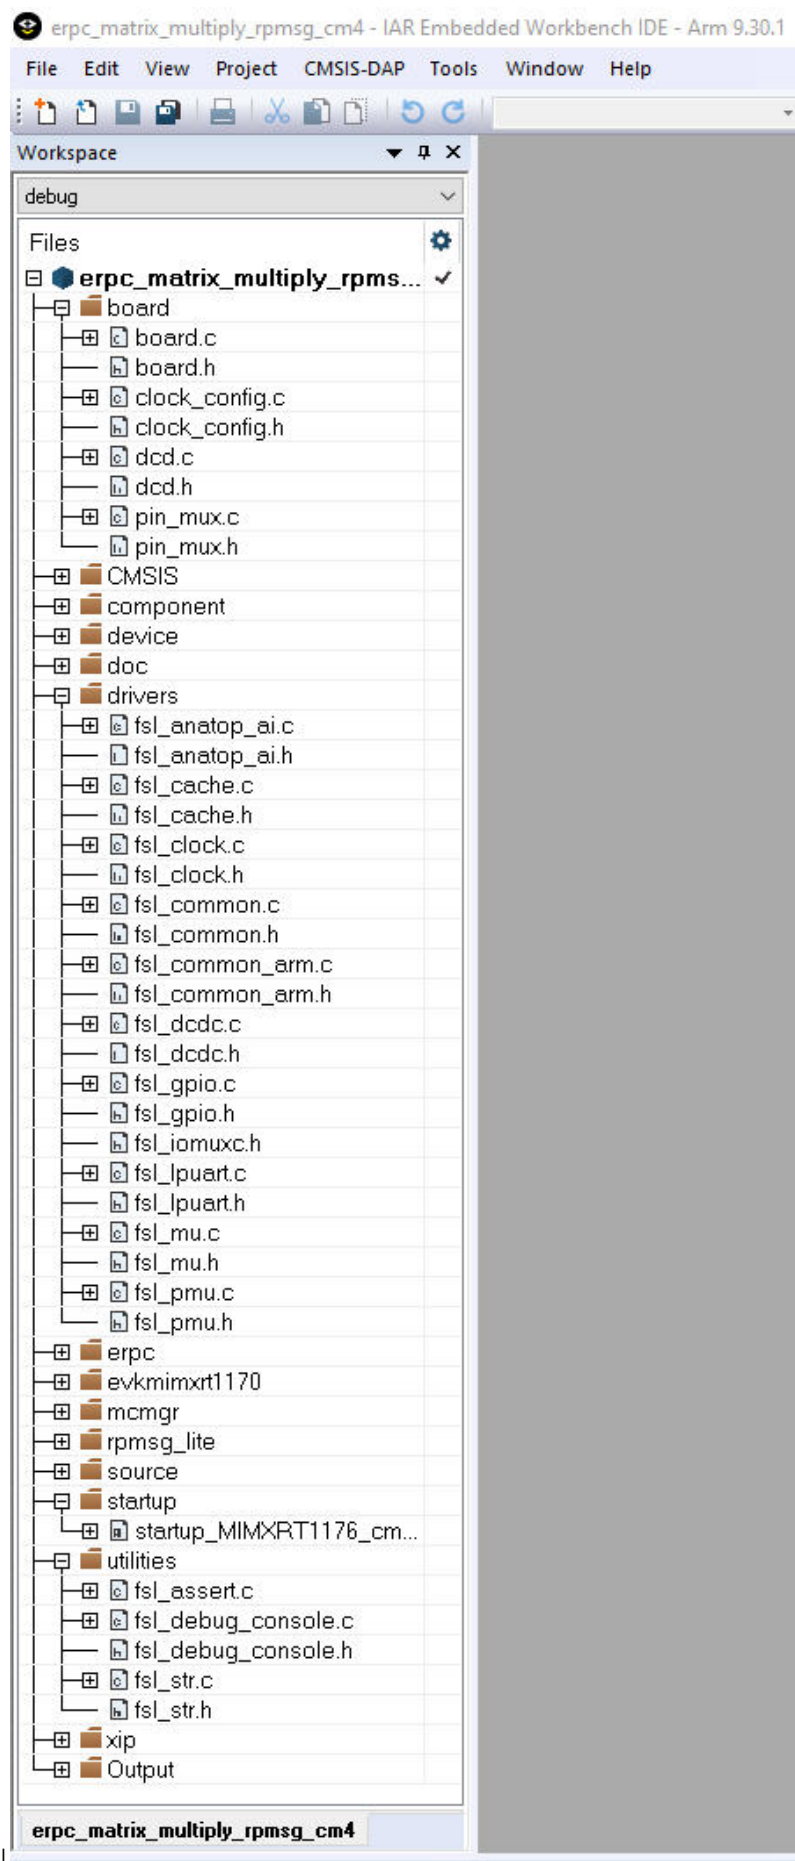

|


Parent topic:Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

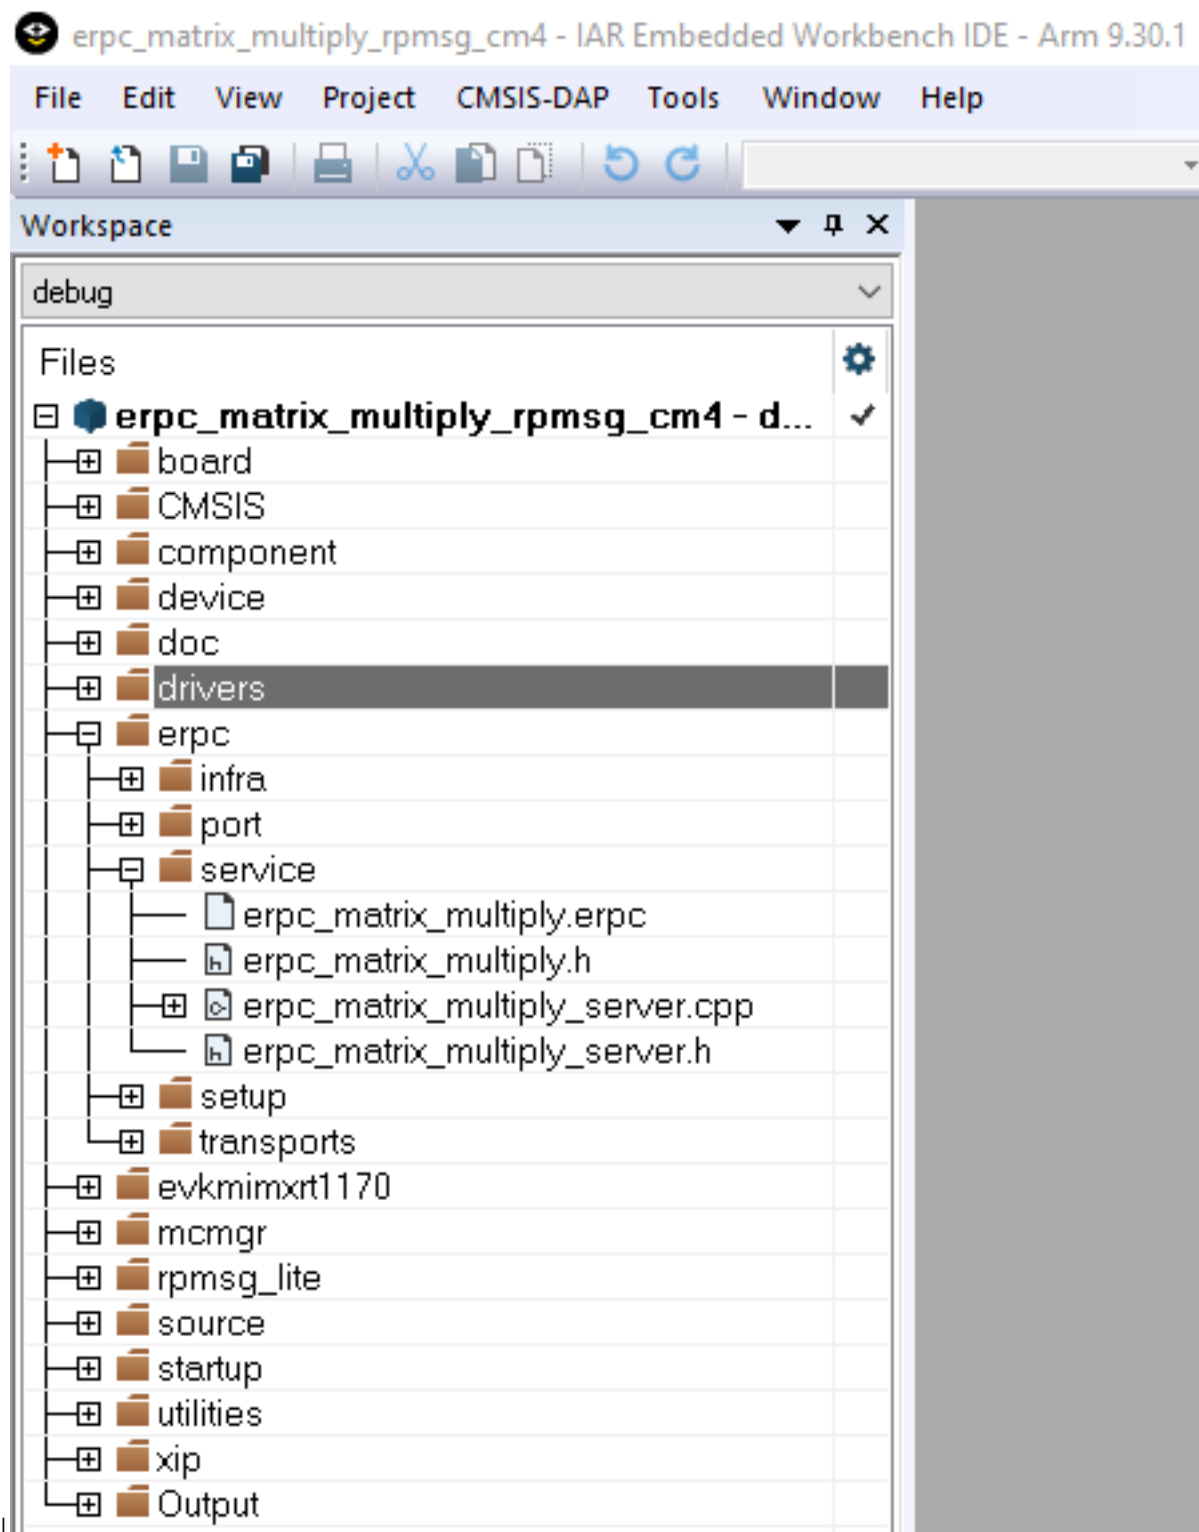


Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

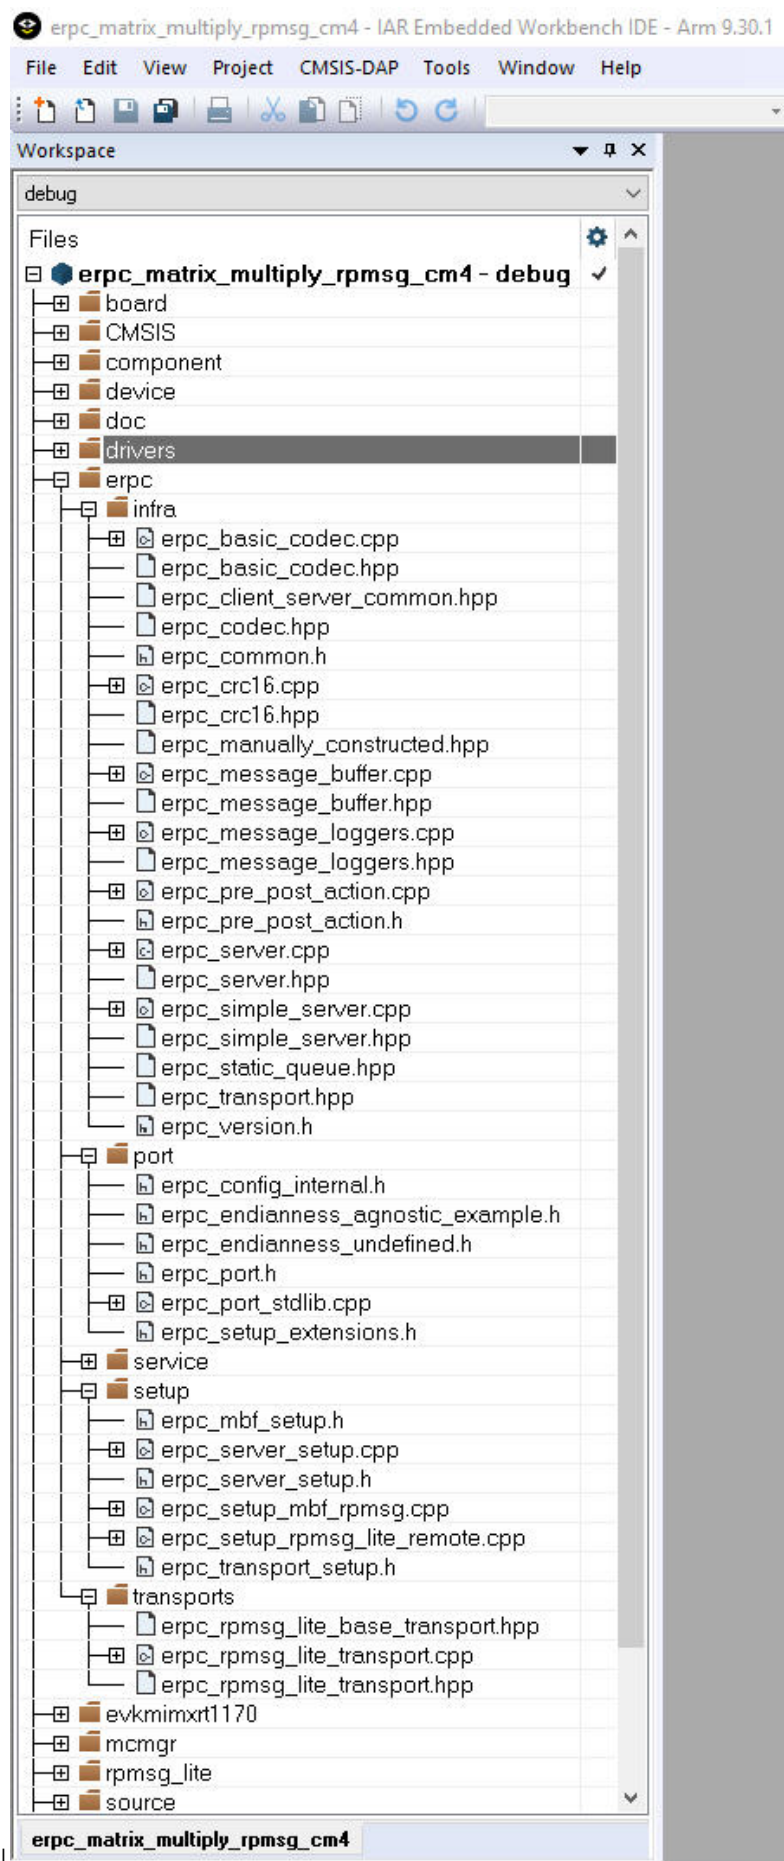

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

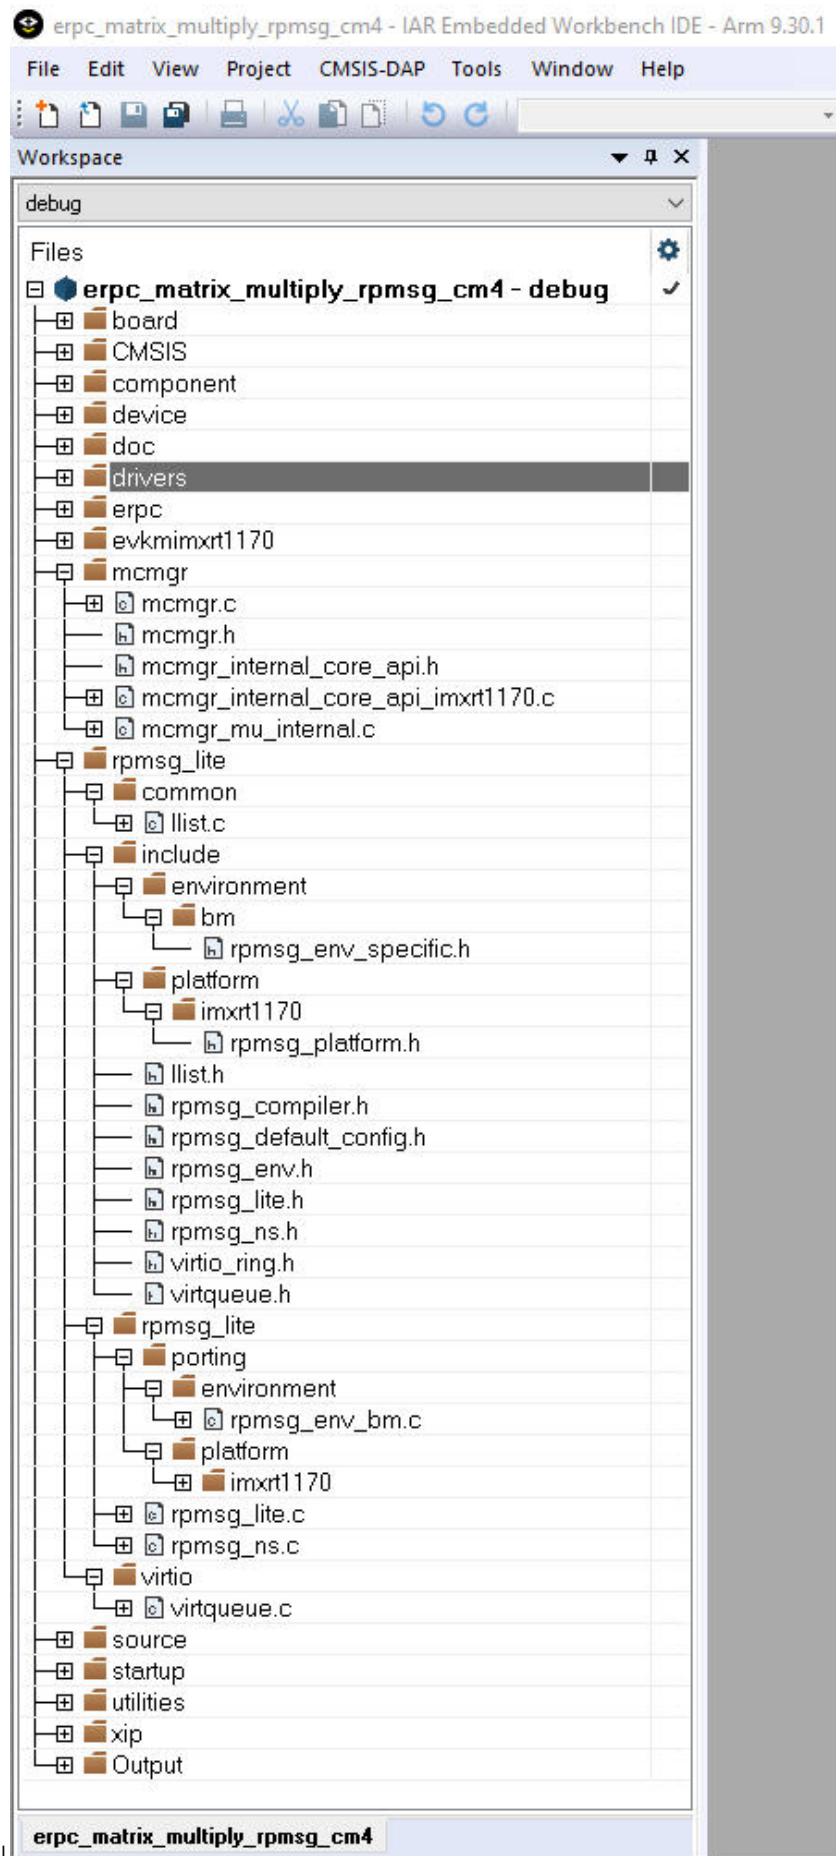

|

Parent topic: Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```


Except for the application main file, there are configuration files for the RPMsg-Lite (`rpmsg_config.h`) and eRPC (`erpc_config.h`), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

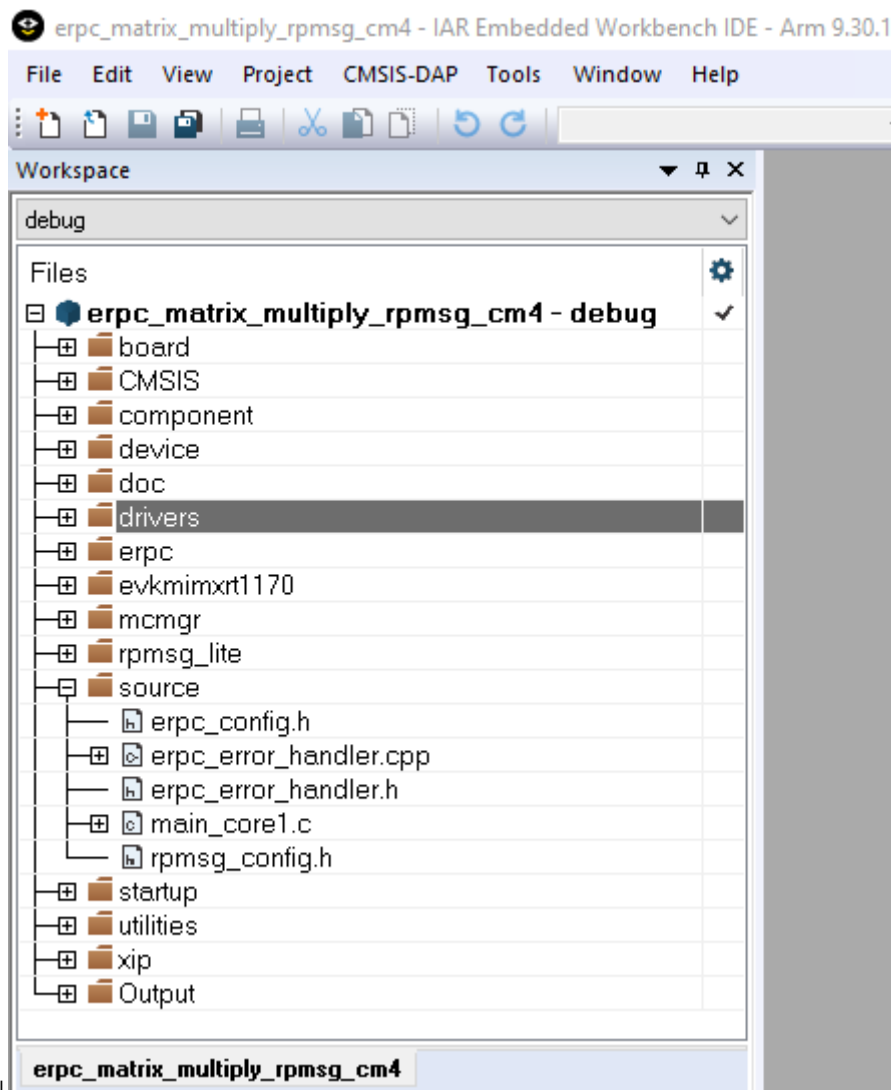

Parent topic:Multicore server application

Parent topic:[Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

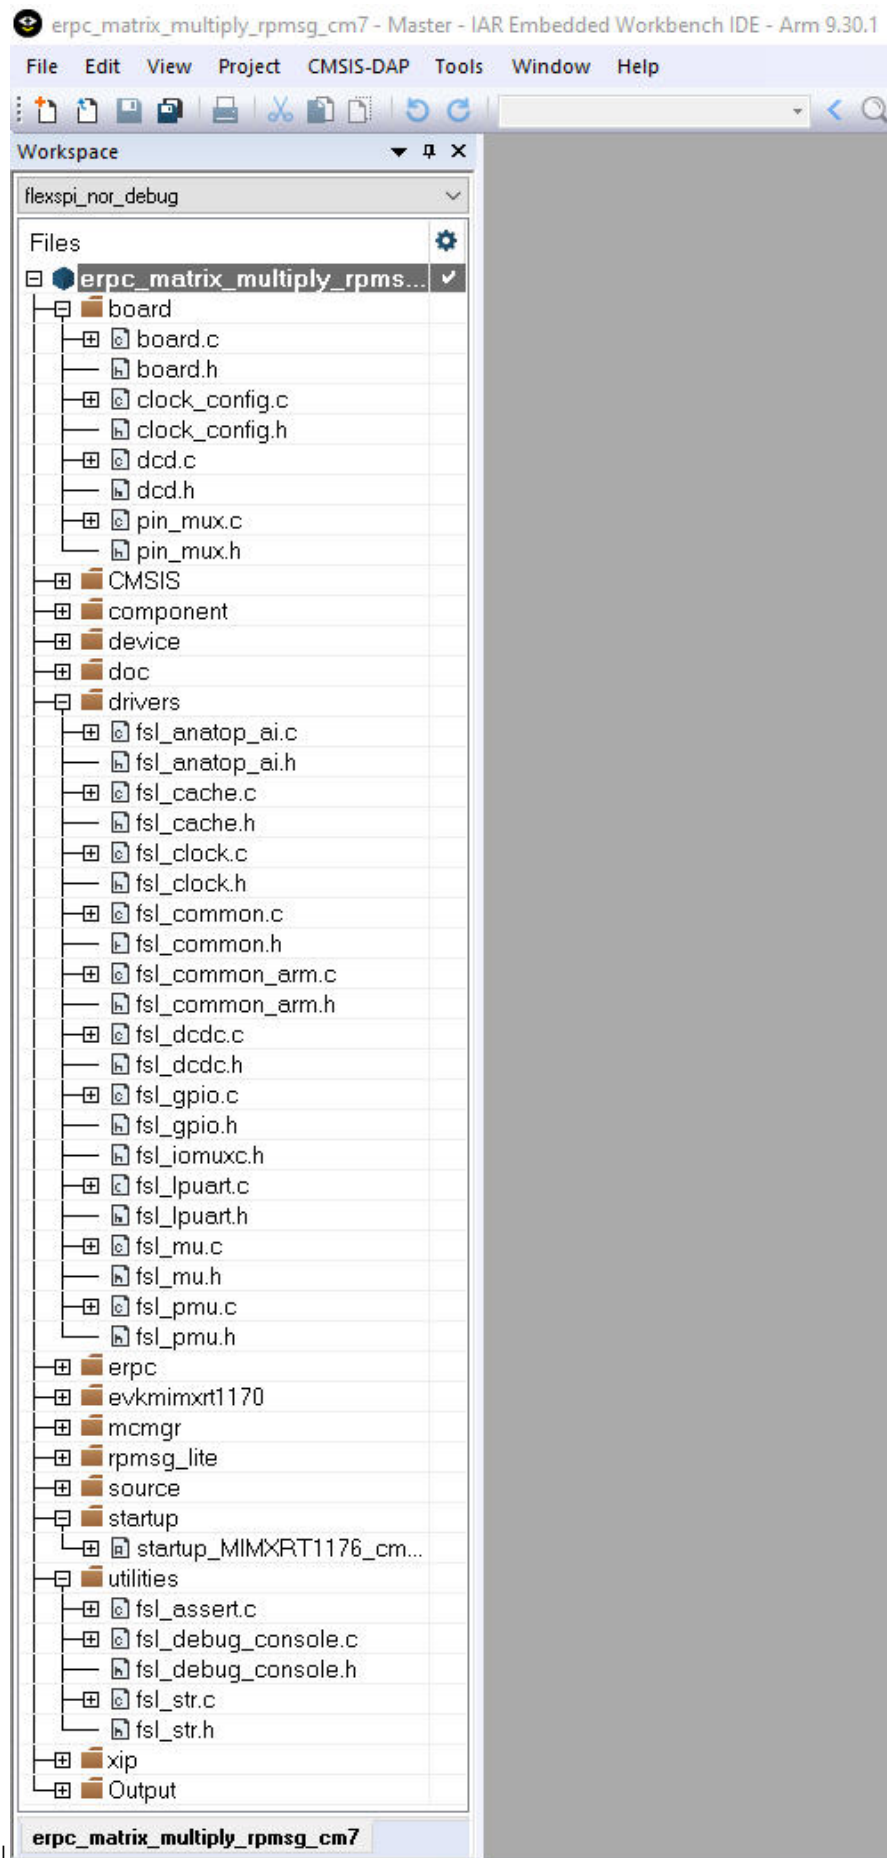


|

Parent topic: Multicore client application**Client-related generated files** The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

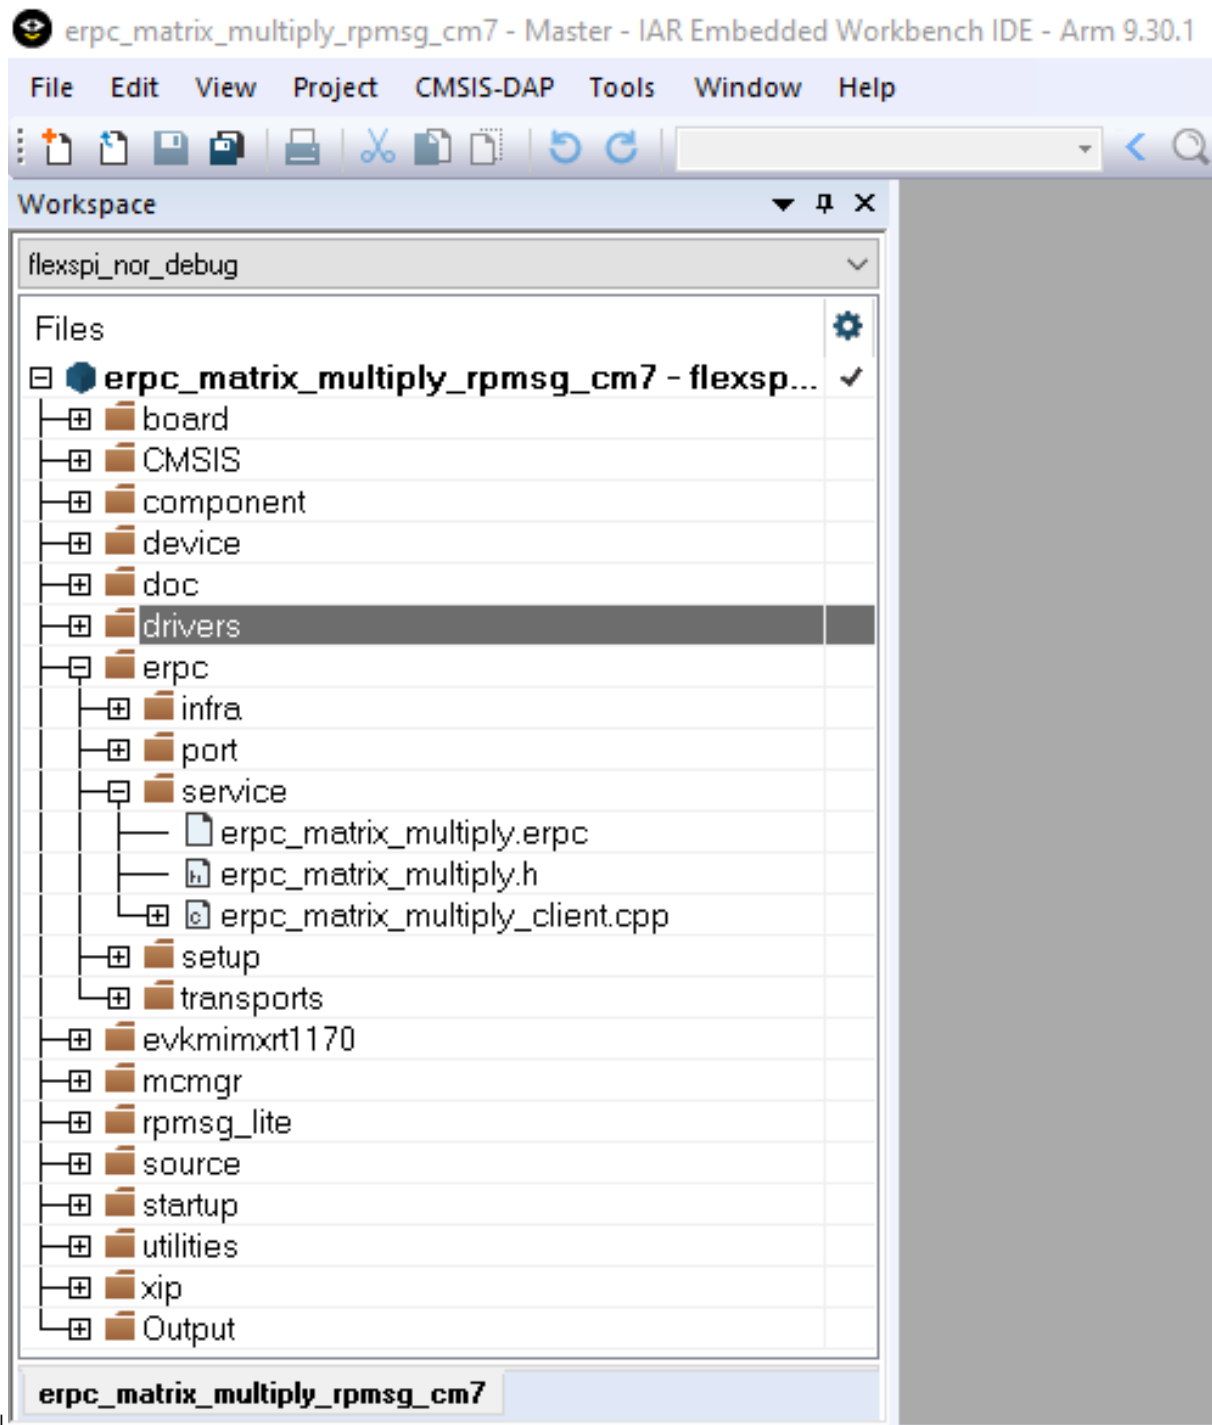

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

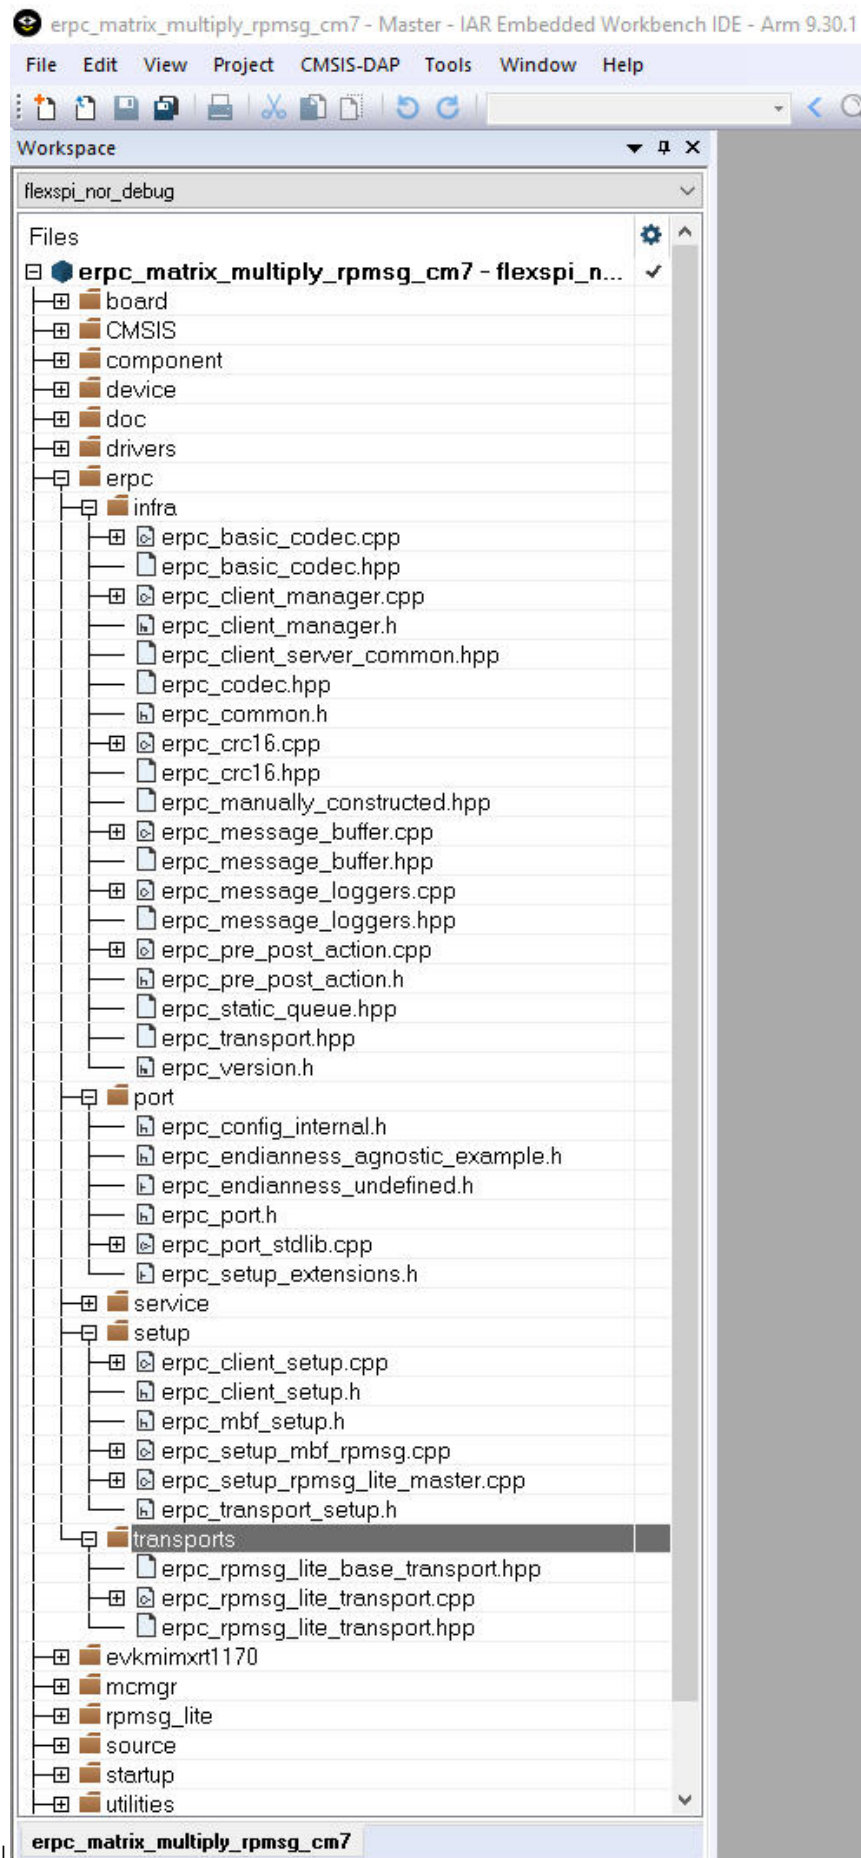

|


Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPMMsg-Lite (transport layer), it is also necessary to include RPMMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

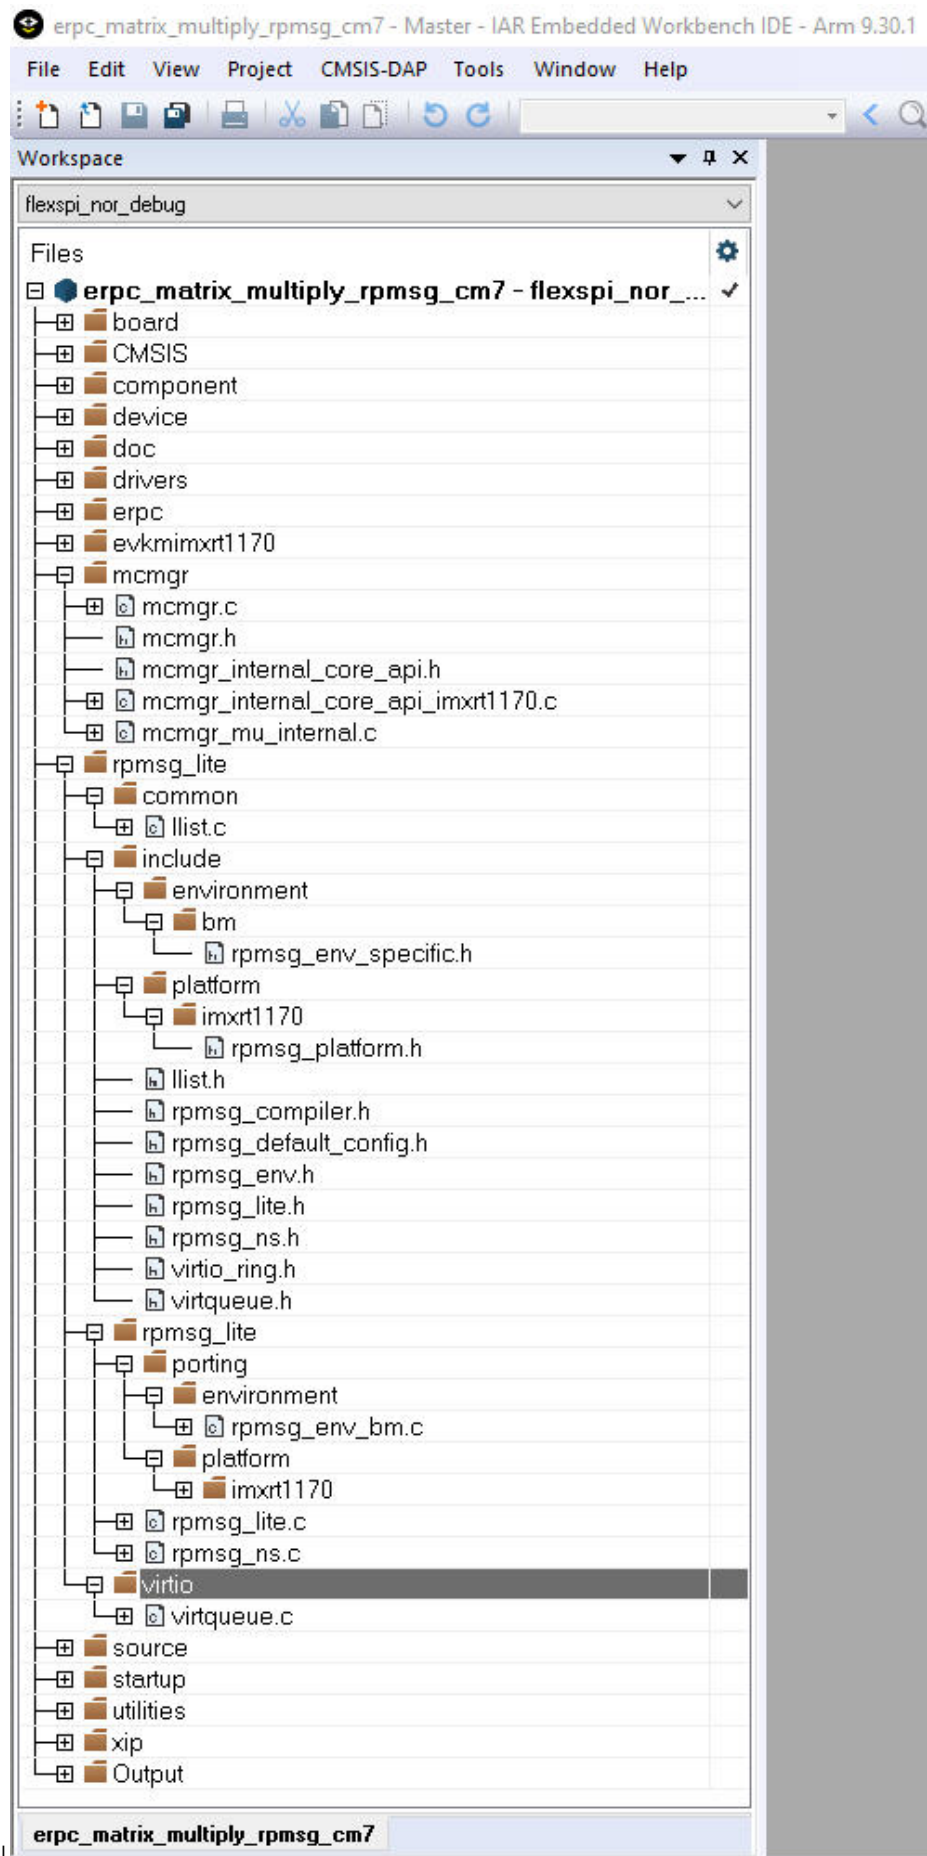

|

Parent topic:Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

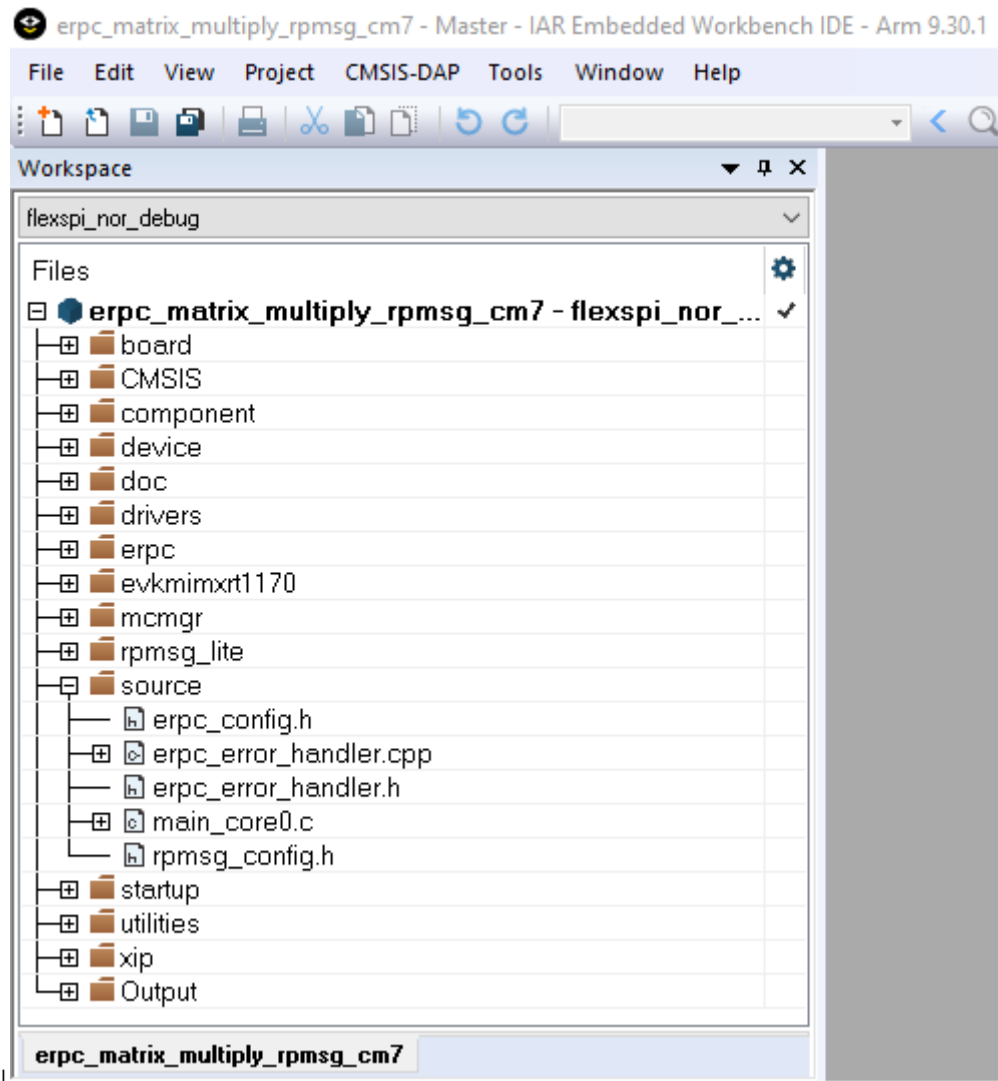

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMs-Lite). The RPMs-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

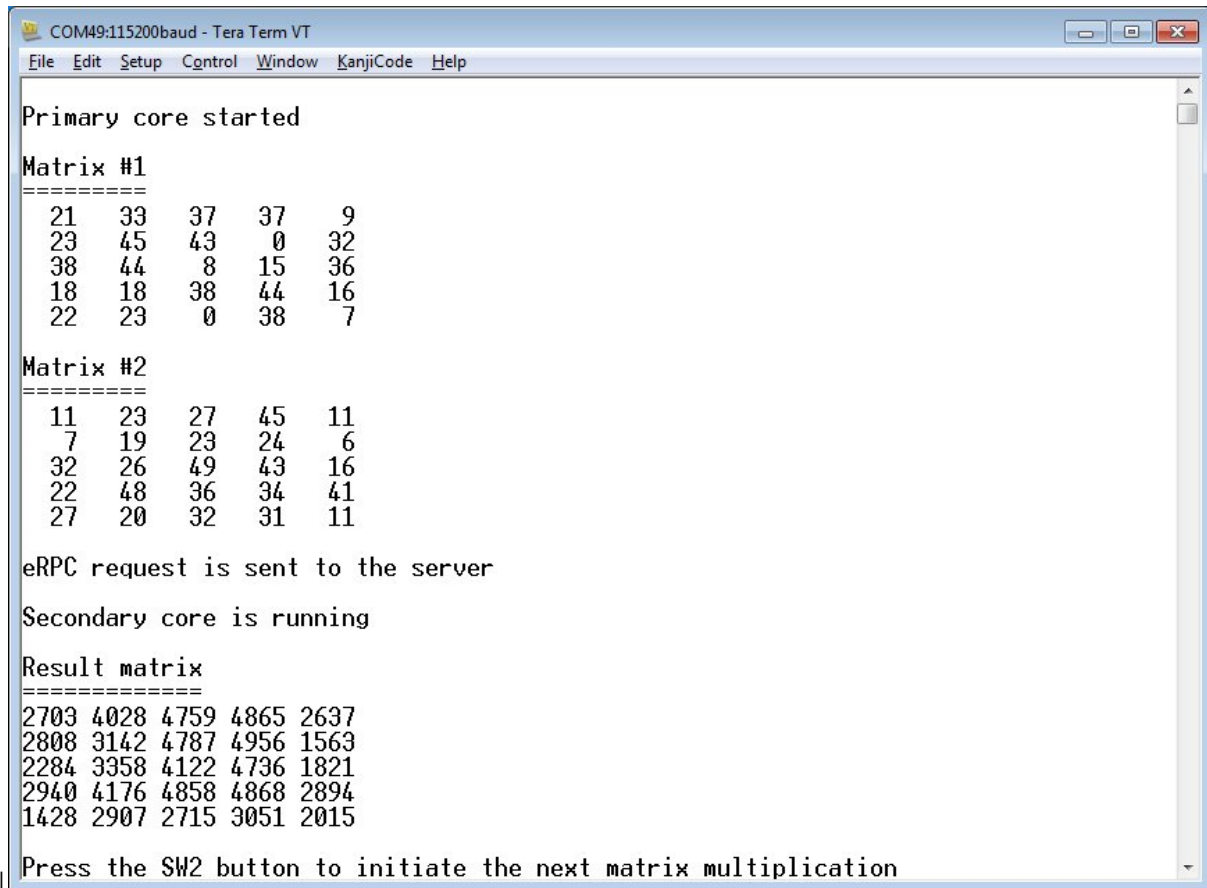

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

eRPC example This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RPMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC communicates with the eRPC server that runs on another SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

| Multicore application source and project files | `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore/`
 | Multiprocessor application source and project files | `<MCUXpressoSDK_install_dir>/boards/<board_name>/multi`
`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr`
 | | eRPC source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/` | | RPLite
 source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/rplite/` |

Designing the eRPC application The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has been declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

Parent topic: [eRPC example](#)

Creating the IDL file The created IDL file is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/`

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc_matrix_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix_size* follows next. The *matrix_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of *Matrix* type: *matrix1* and *matrix2* are input parameters, while *result_matrix* is the output parameter. Additionally, the returned data type is declared as *void*.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

Parent topic: [eRPC example](#)

Using the eRPC generator tool | Windows OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64`
| Linux OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`
`<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`
| | Mac OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac`

The files for the “Matrix multiply” example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (*.erpc) is located; then run the following command:

```
erpcgen <IDL_file>.erpc
```

- In the “Matrix multiply” example, the command should look like:

```
erpcgen erpc_matrix_multiply.erpc
```

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- “-?”/”—help” – Shows supported commands.
- “-o <filePath>”/”—output<filePath>” – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen -o <path_to_output>  
<path_to_IDL>/<IDL_file_name>.erpc
```

For the “Matrix multiply” example, when the command is executed from the default erpcgen location, it looks like:

```
erpcgen -o
```

```
.././.././boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service  
.././.././boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu
```

In both cases, the following four files are generated into the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service` folder:

- erpc_matrix_multiply.h
- erpc_matrix_multiply_client.cpp
- erpc_matrix_multiply_server.h
- erpc_matrix_multiply_server.cpp

For multiprocessor examples, the eRPC file and pre-generated files can be found in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/service` folder.

For Linux OS users:

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as `./erpcgen...` instead of as `erpcgen ....`

Parent topic: [eRPC example](#)

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

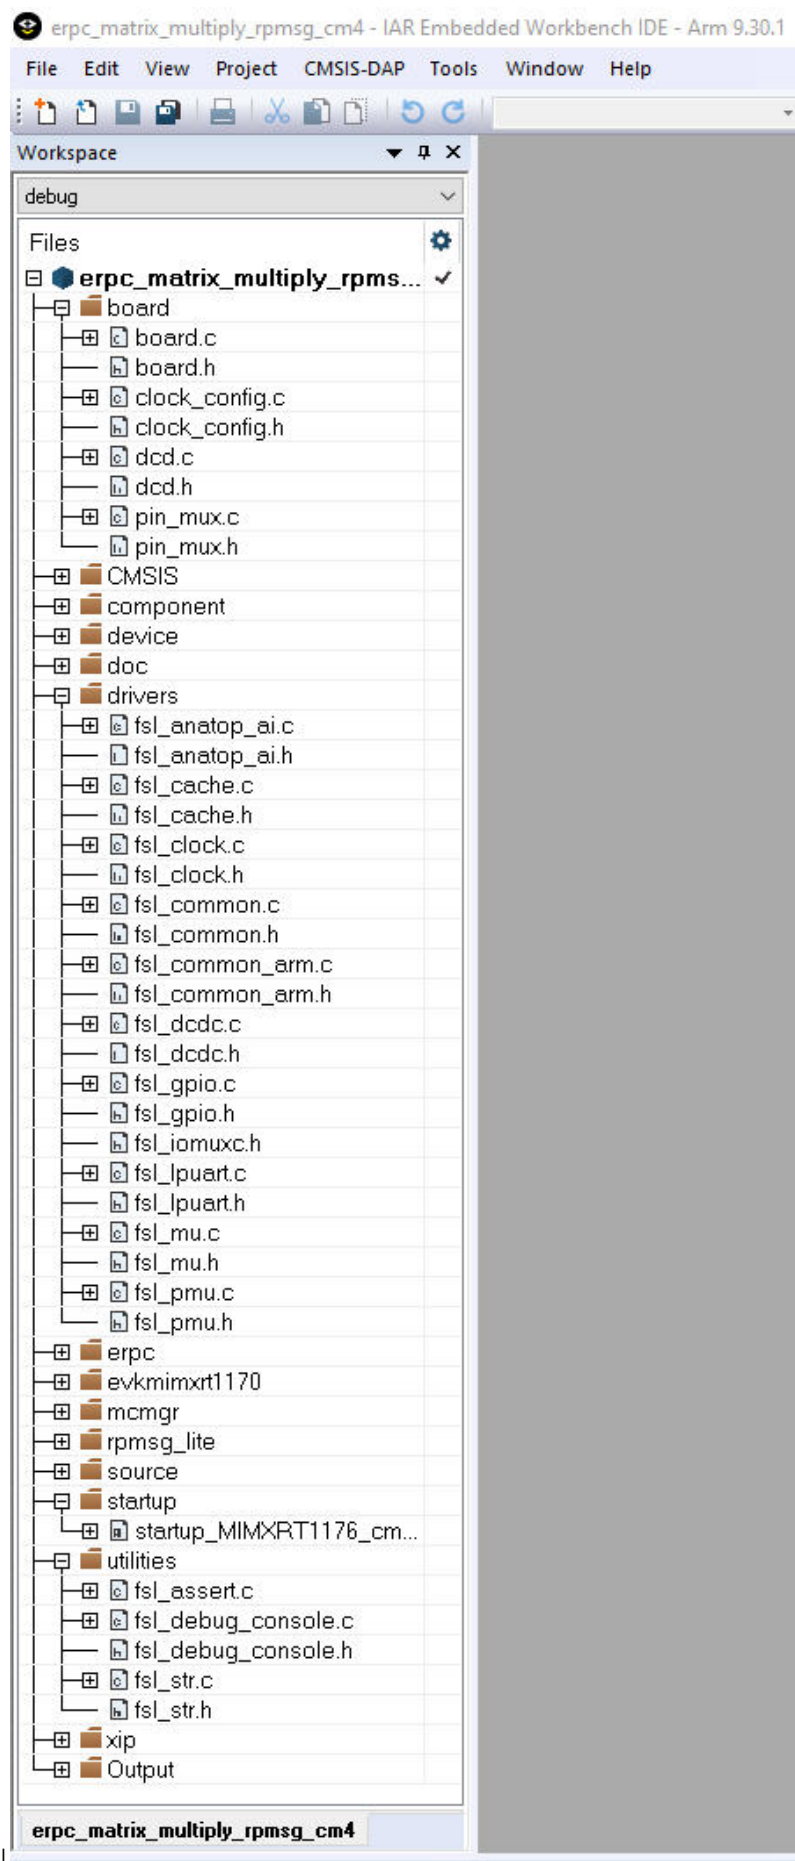

|


Parent topic:Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

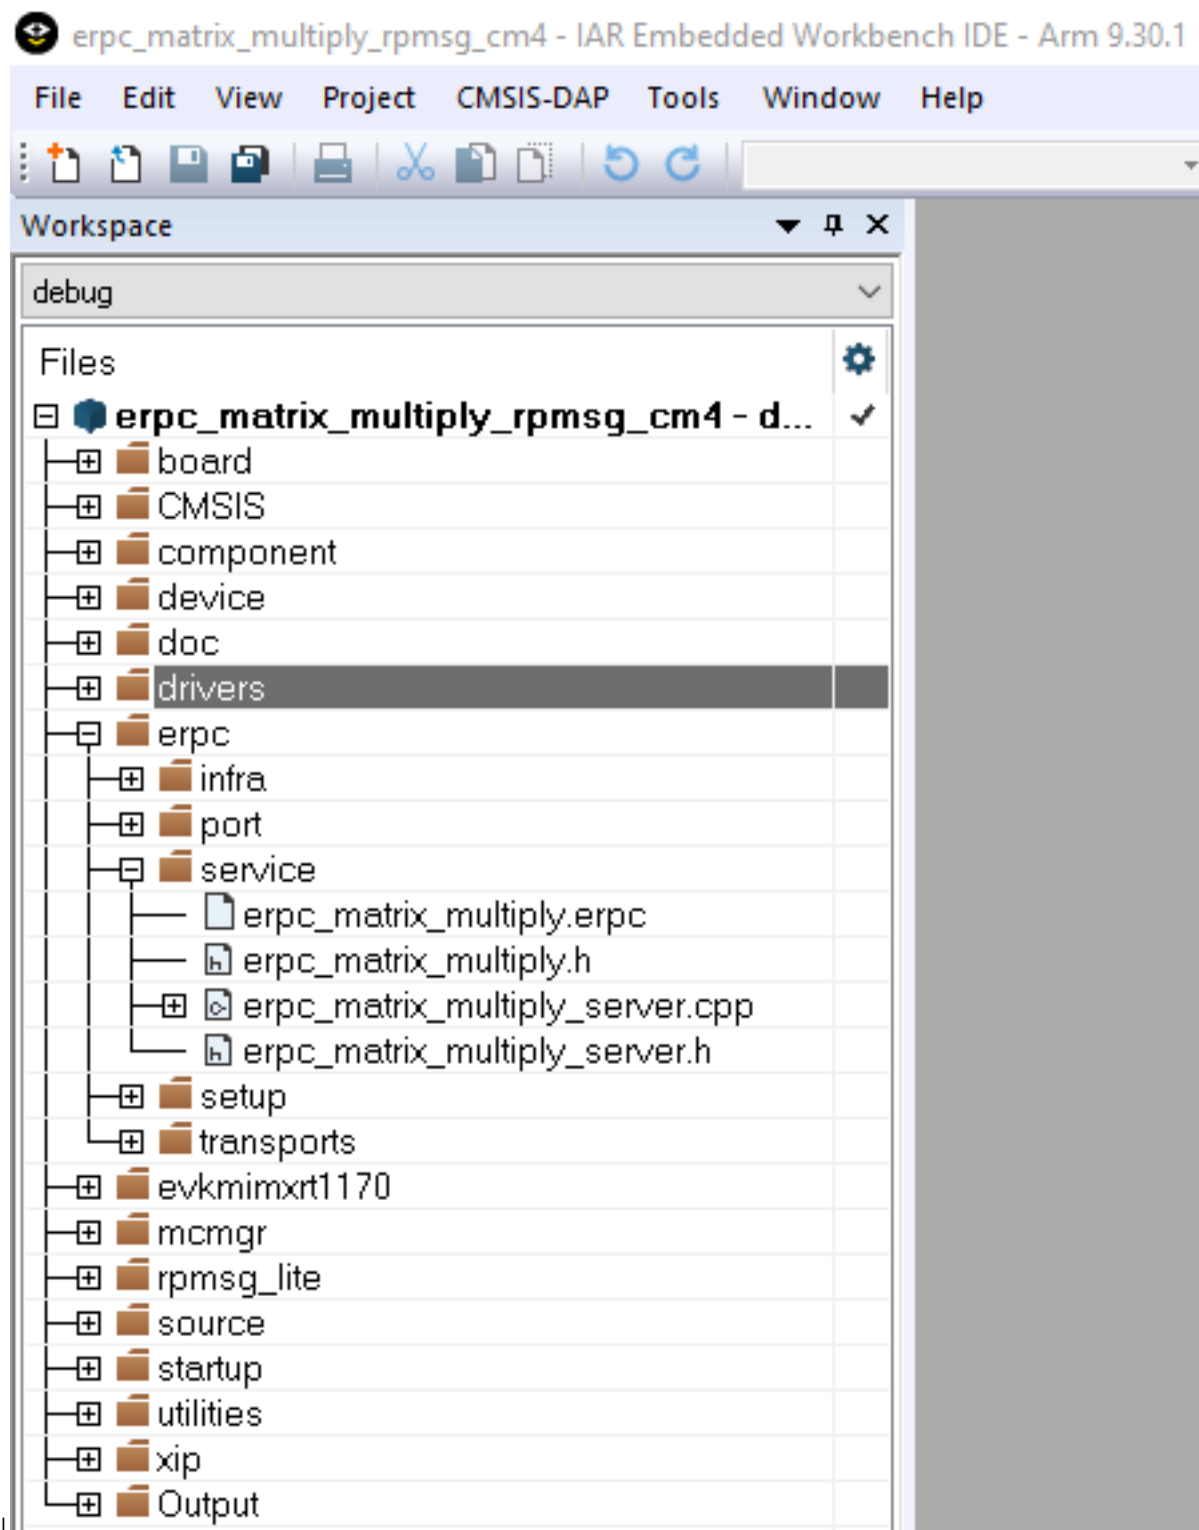


Parent topic:Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

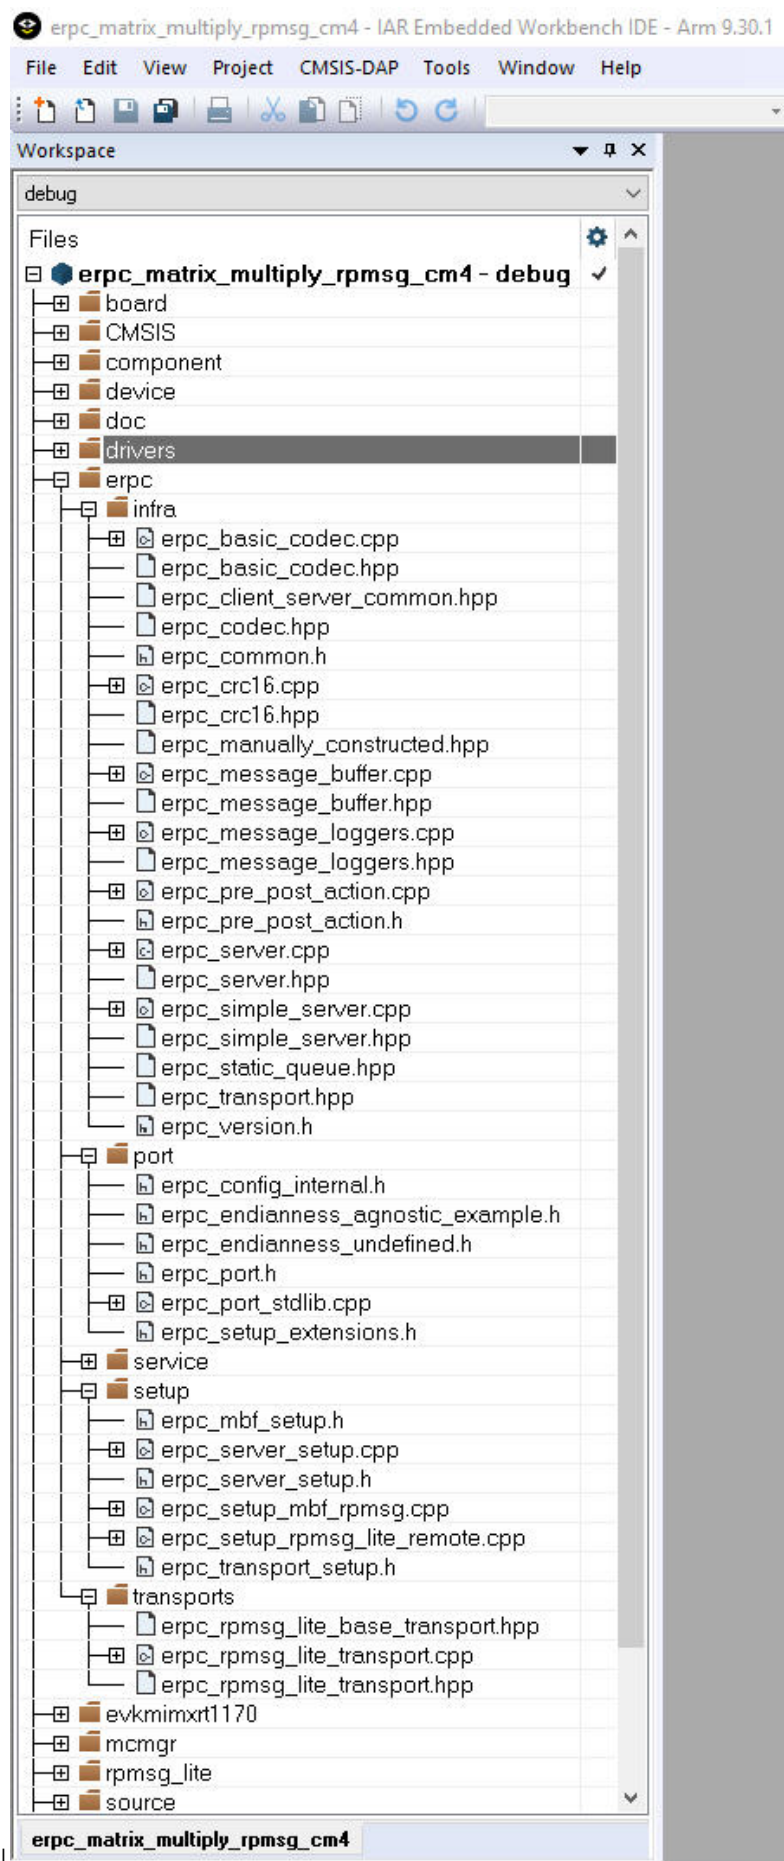

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

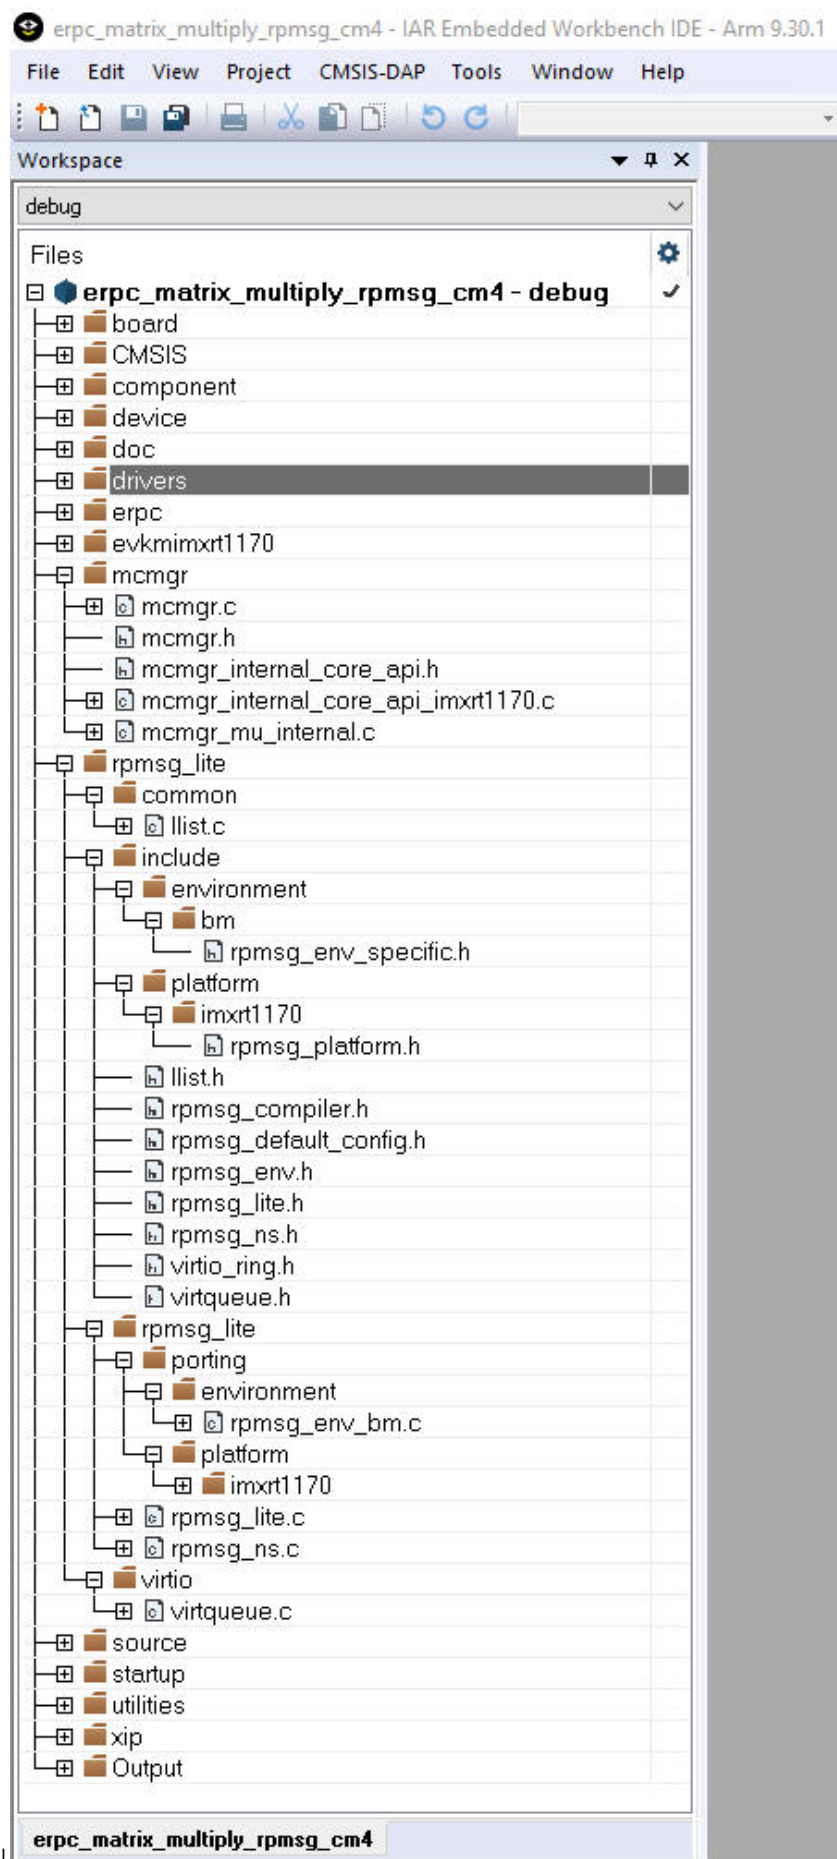

Parent topic: Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```


Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

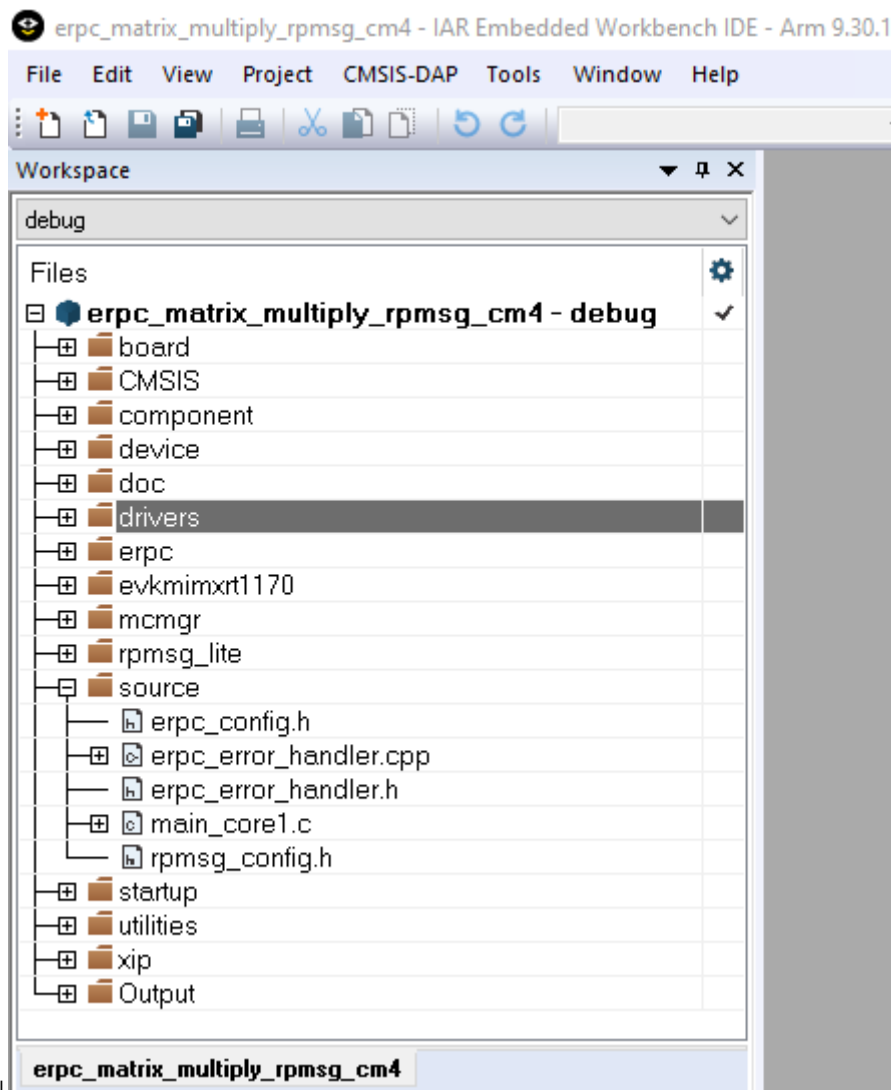

Parent topic:Multicore server application

Parent topic:[Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

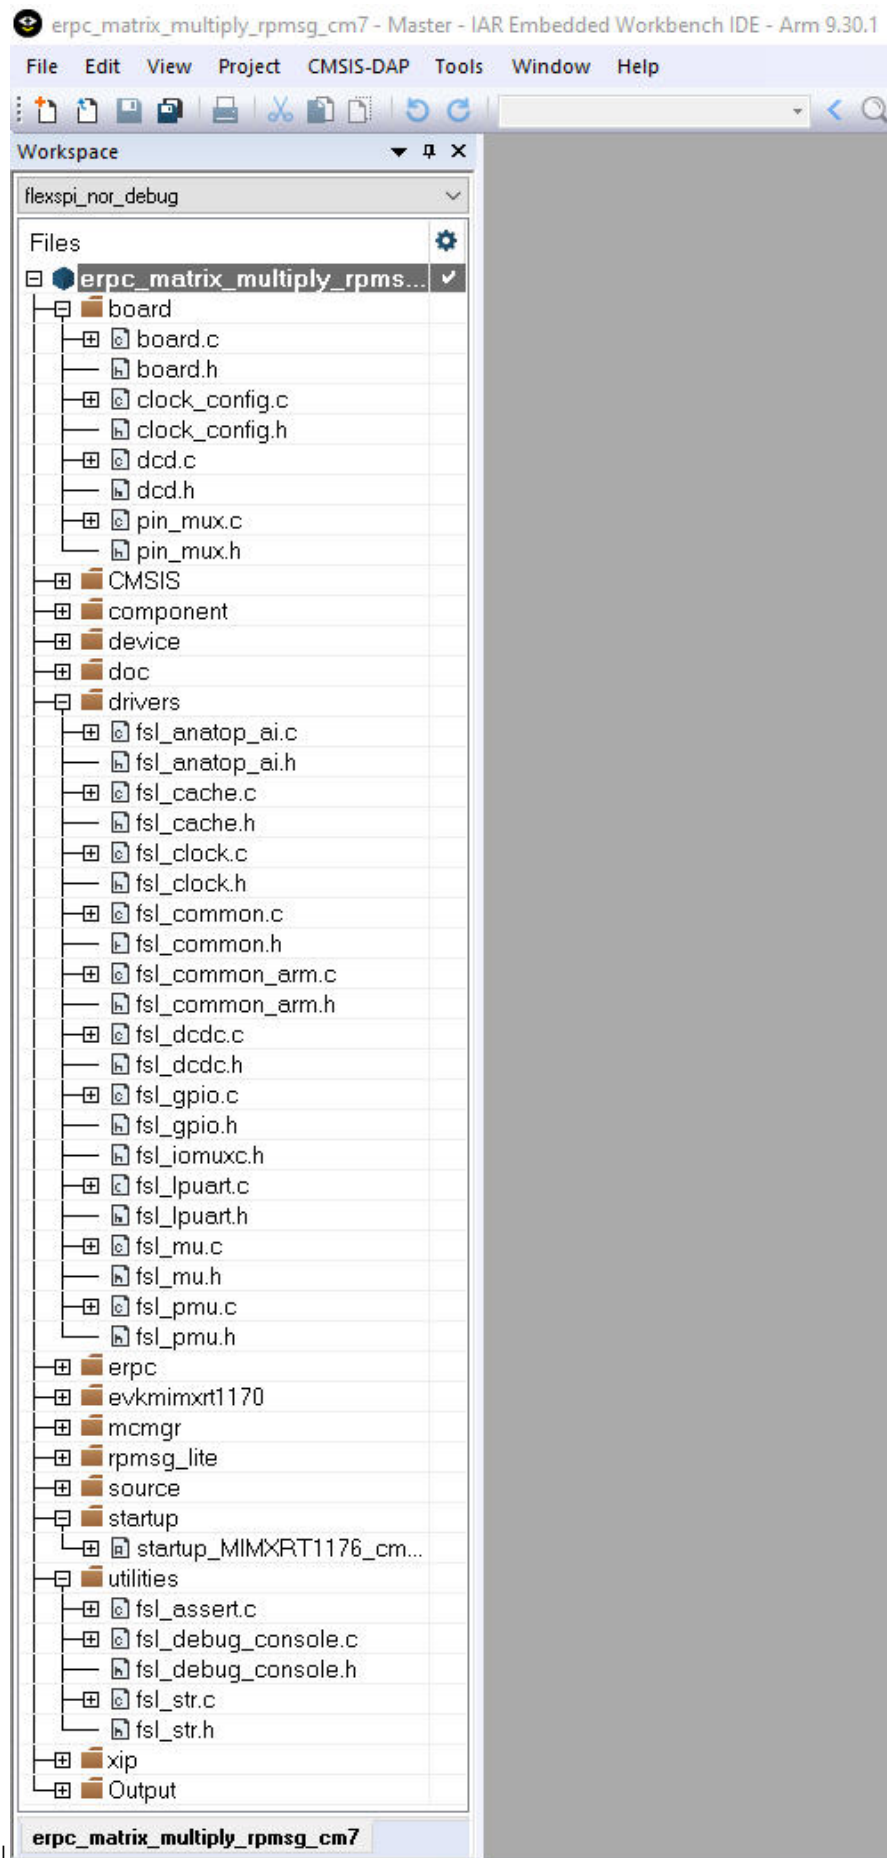


|

Parent topic:Multicore client application**Client-related generated files** The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

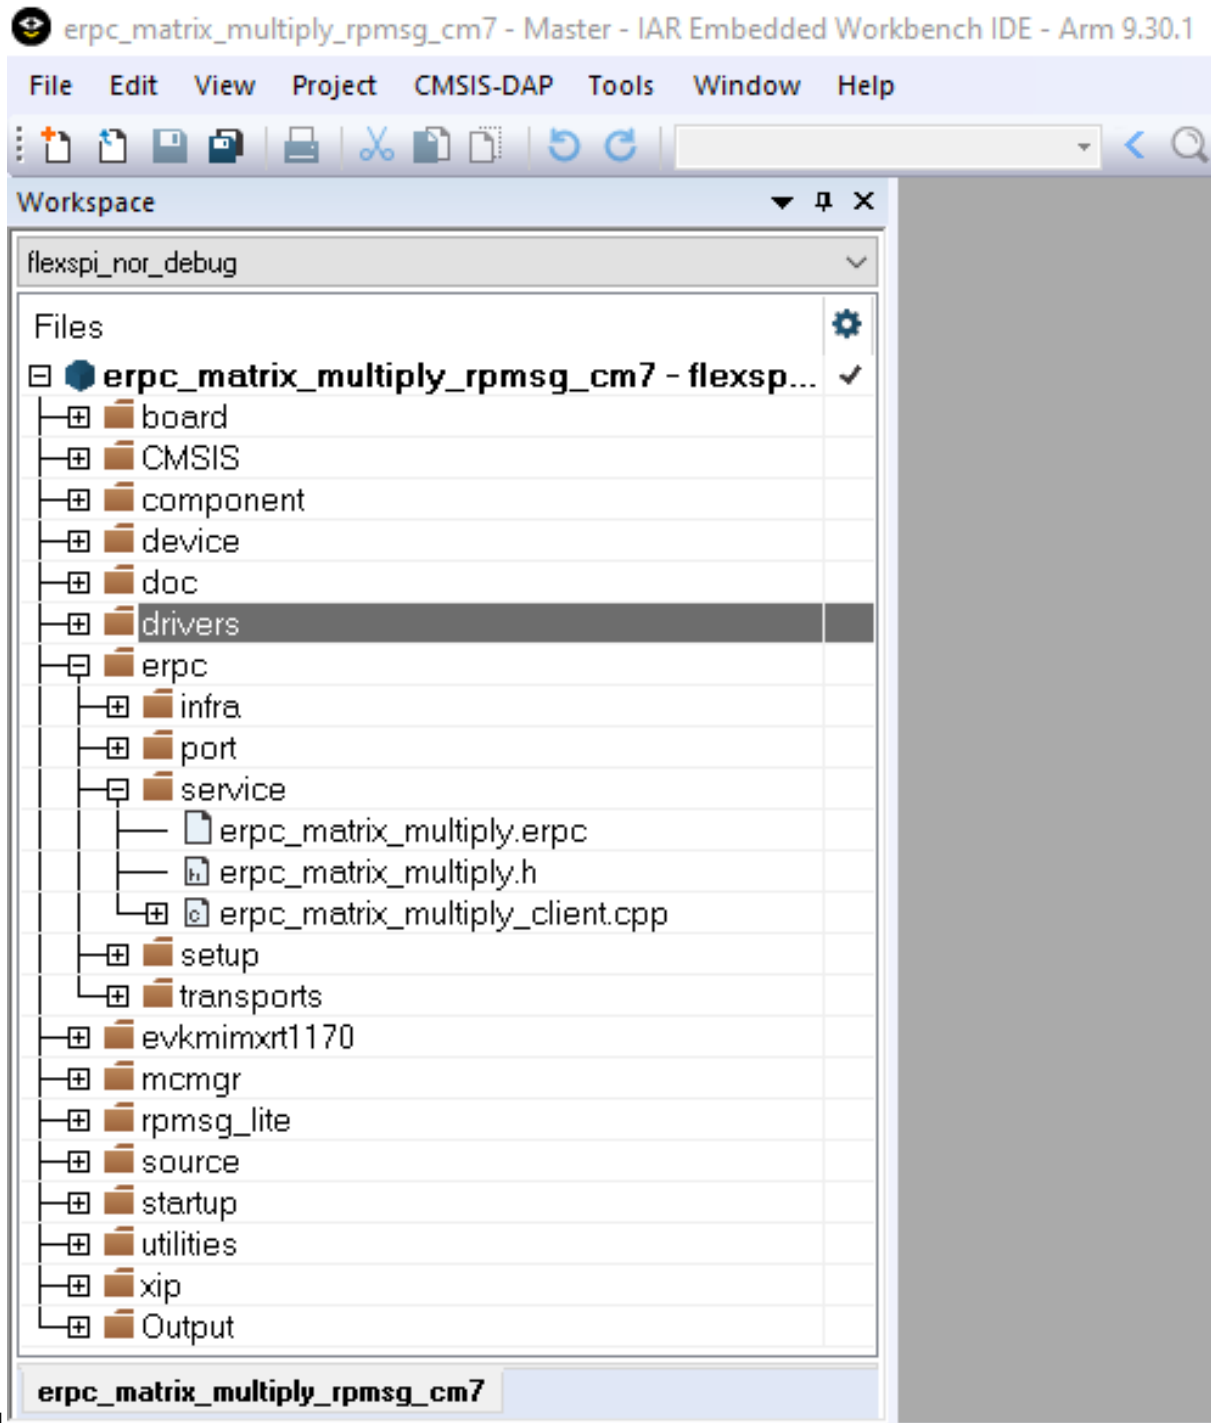

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

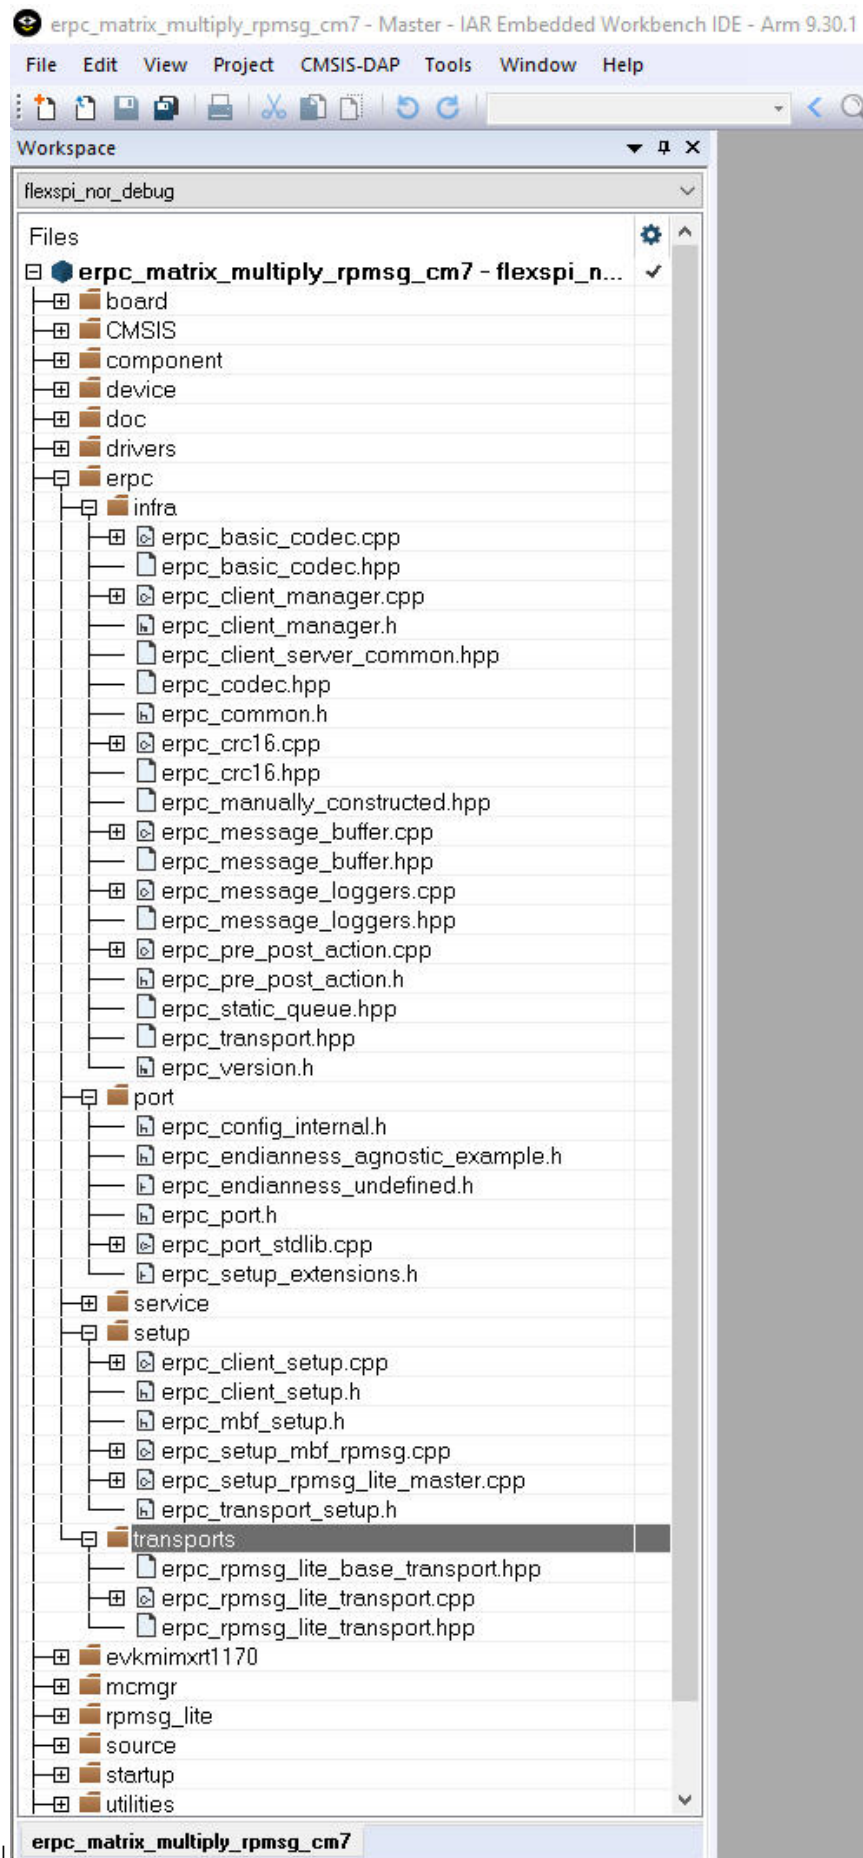

|


Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpsmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

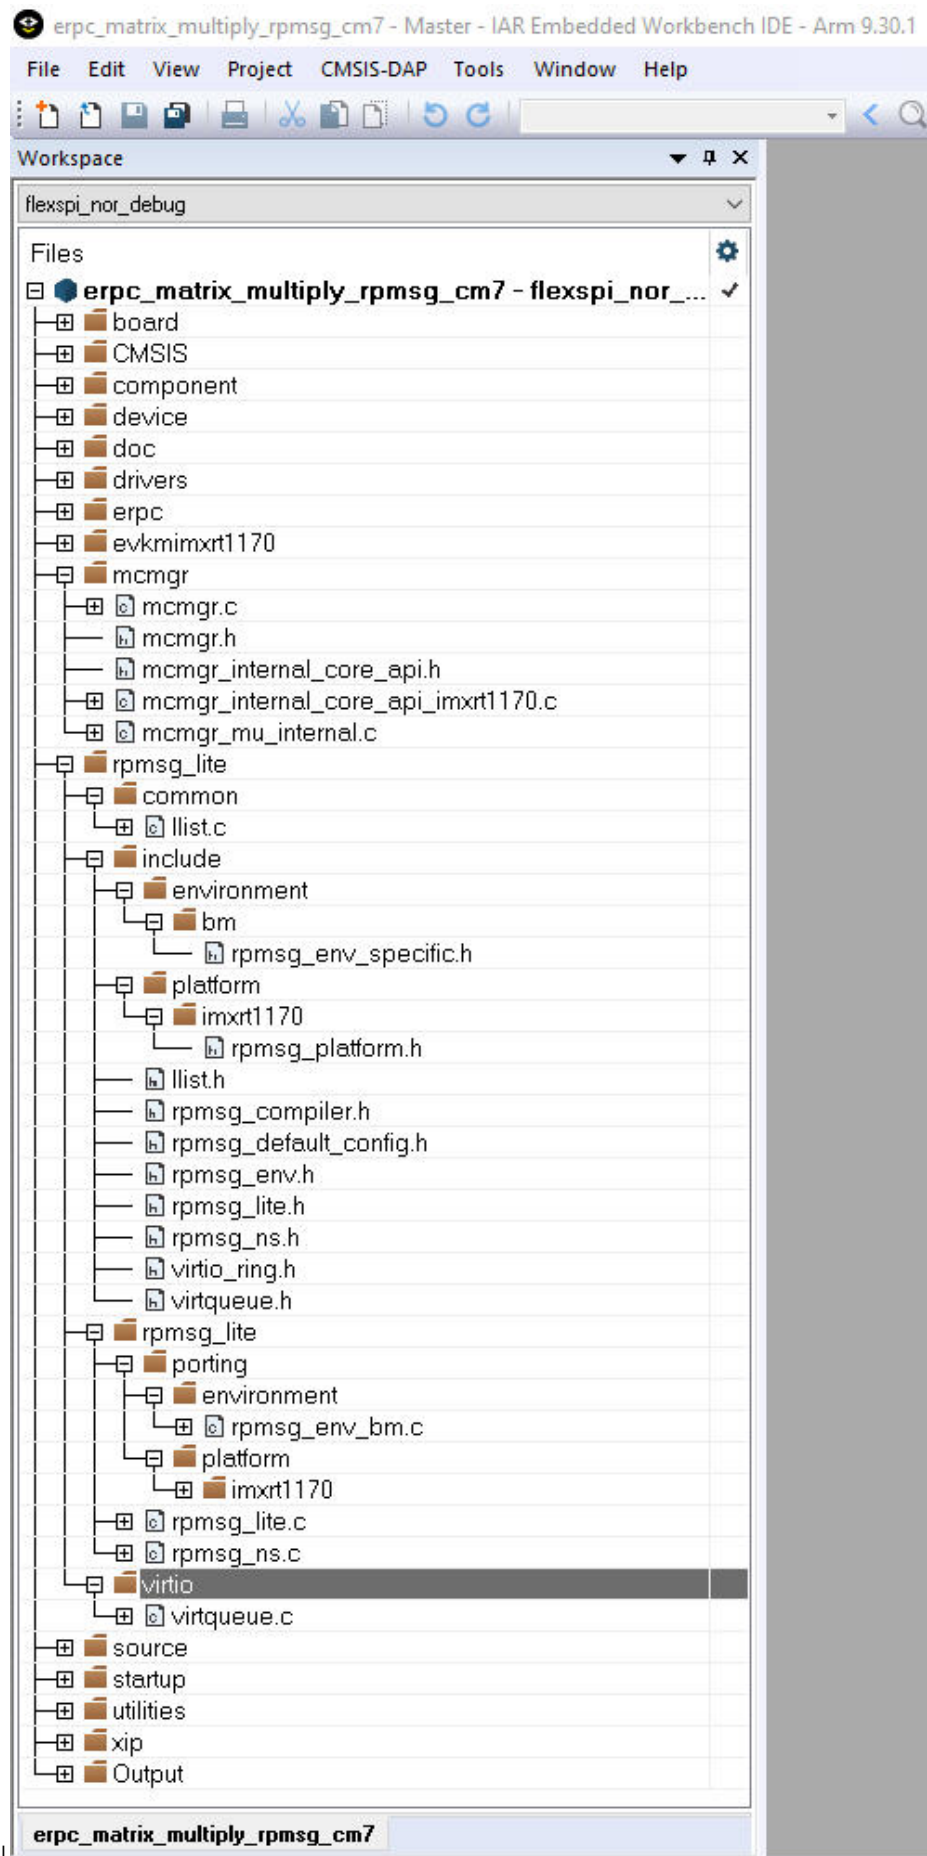

|

Parent topic:Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

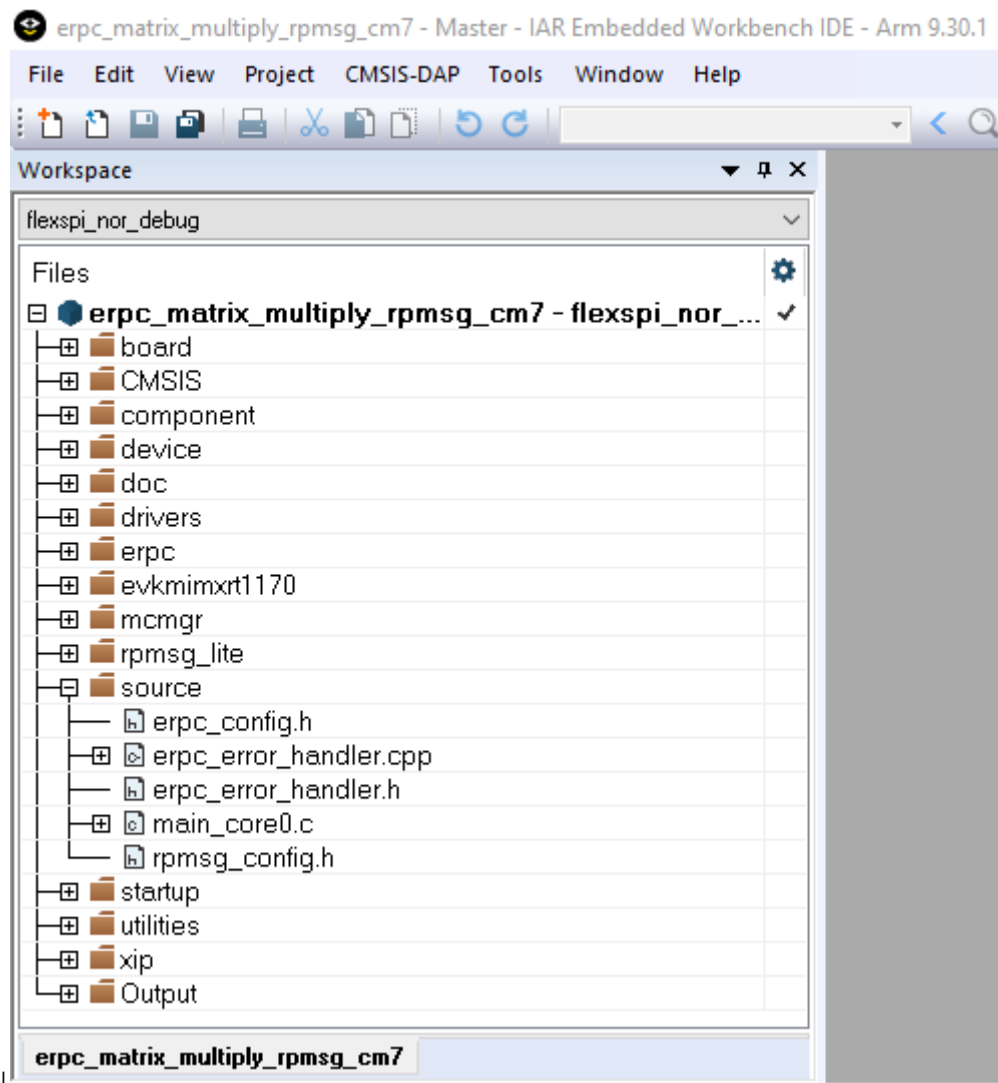

Parent topic:Multicore client application

Parent topic:[Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMs-Lite). The RPMs-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

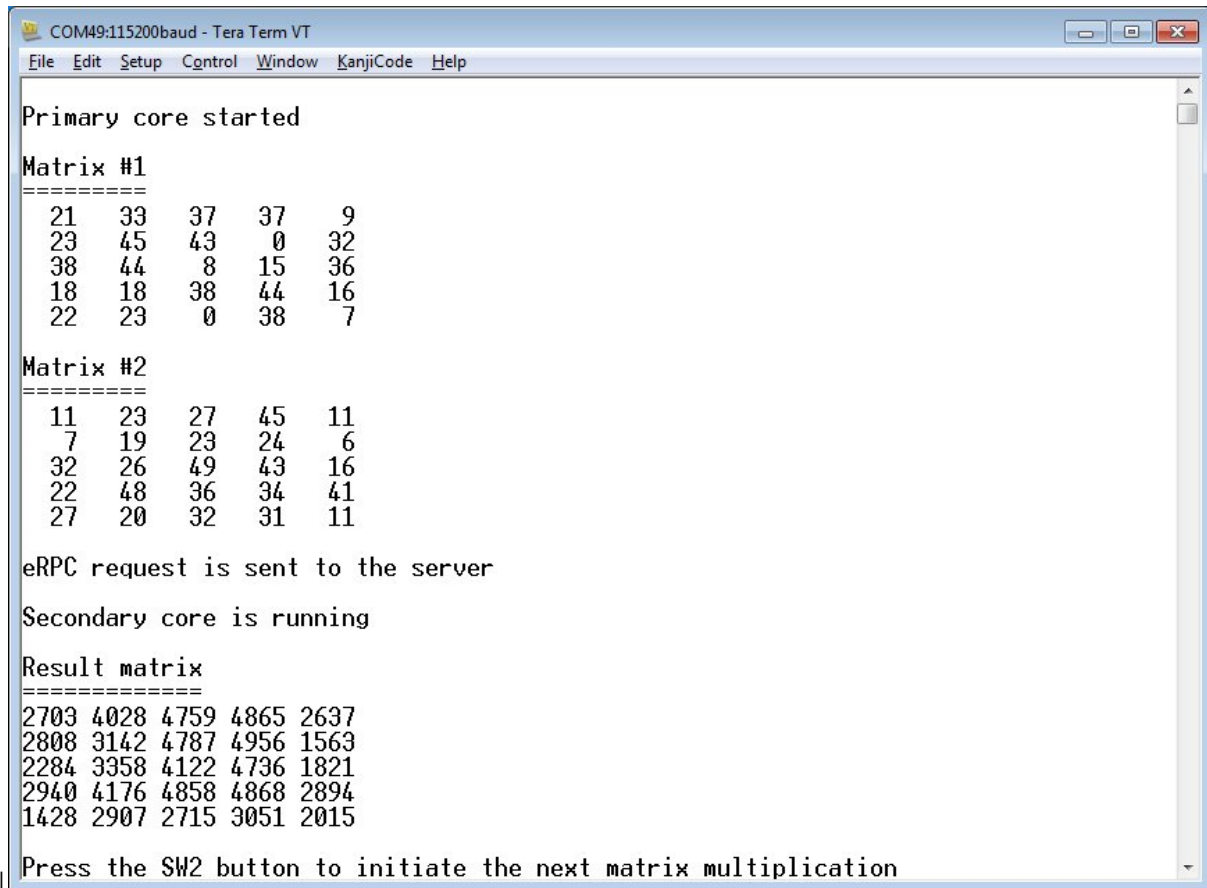

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

Other uses for an eRPC implementation The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the github.com/EmbeddedRPC.

Note about the source code in the document Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Changelog eRPC All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Added

Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.

1.14.0

Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.

- erpc: Fixed Makefile, install the erpc_simple_server header, GitHub PR #447.
- erpc_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

1.13.0

Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr_uart, zephyr_mbox).
- eRPC: Add new Zephyr-related examples.

Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

1.12.0

Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in Message-Buffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

Fixed

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

1.11.0

Fixed

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSBSIO.GetNumPorts API use with libusbsio python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcpy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

1.10.0

Fixed

- eRPC: MU transport layer switched to blocking MU_SendMsg() API use.

1.10.0

Added

- eRPC: Add TCP_NODELAY option to python, GitHub PR #298.

Fixed

- eRPC: MUPort adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT_TRUE with EXPECT_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg_lite based transports to changed rpmsg_lite_wait_for_link_up() API parameters.
- eRPC, erpcgen: Better distinguish which file can and cannot be linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest_enumErrorCode_allDirection, serialize enums as int32 instead of uint32.

1.9.1

Fixed

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.
- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.

- eRPC: Remove ERPC_PRE_POST_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcpy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid of serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg_lite_wait_for_link_up() in rpmsg_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

1.9.0

Added

- eRPC: Allow used LIBUSBSIO device index being specified from the Python command line argument.

Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run_clang_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc_setup_mbf_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related API, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

1.8.1

Added

- eRPC: New i2c_slave_transport transport introduced.

Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message_loggers and pre_post_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

1.8.0

Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char*, GitHub PR #125.

Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native _WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix_multiply.py example: Add -serial and -baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc_framed_transport.cpp: return error if received message has zero length, GitHub PR #141.
- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '\$' character from generated symbol name in '_\$union' suffix, GitHub PR #103.

- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

1.7.4

Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

1.7.3

Fixed

- eRPC: Improved the test_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

1.7.2

Added

- eRPC: Add missing doxygen comments for transports.

Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

1.7.1

Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

1.7.0

Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

1.6.0

Added

- eRPC: Added @nullable support for scalar types.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

1.5.0

Added

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

1.4.0**Added**

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

Fixed

- eRPC: win_flex_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

[1.3.0]**Added**

- eRPC: New annotation types introduced (@length, @max_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

[1.2.0]**Added**

- eRPC source directory organization changed.
- Many eRPC improvements.

[1.1.0]

Added

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

[1.0.0]

Added

- Initial Release

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the [FreeRTOS kernel repo](#) integration into the [NXP MCUXpresso Software Development Kit: mcuxsdk](#). MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as [FreeRTOS driver wrappers](#), RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in [CHANGELOG_mcuxsdk.md](#) file.


The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of freertos_examples, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in [mcuxsdk-examples](#) repository, see the `freertos_examples` folder.

Once using MCUXpresso SDK zip packages created via the [MCUXpresso SDK Builder](#) the FreeRTOS kernel library and associated `freertos_examples` are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

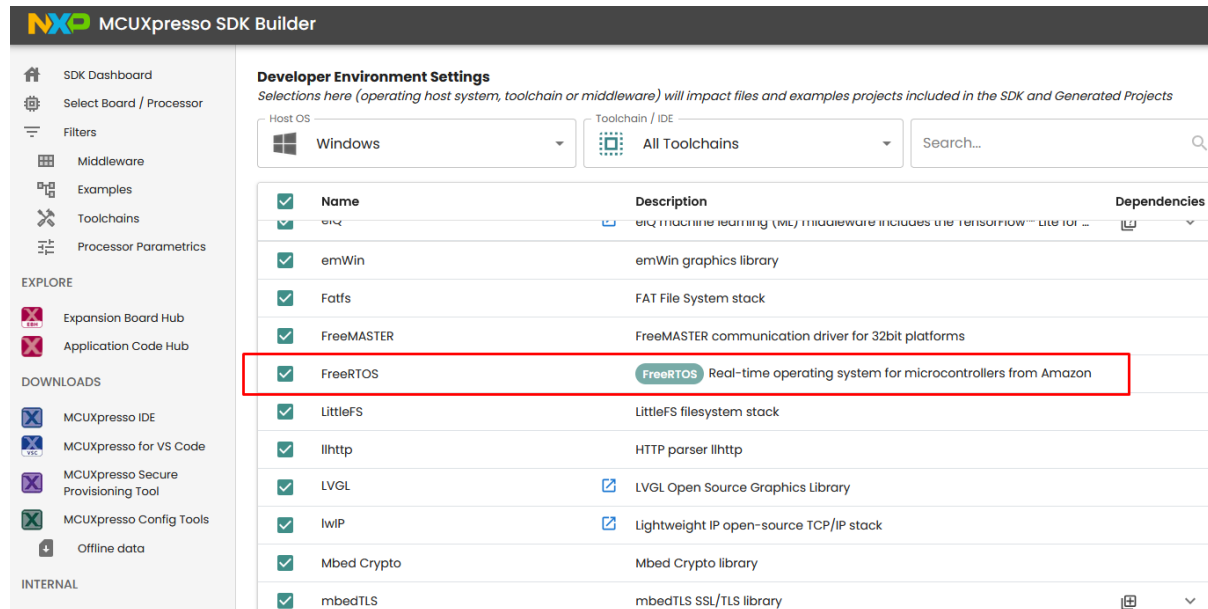

The FreeRTOS examples in MCUXpresso SDK zip packages are located in `<MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/` subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build `freertos_examples` visit: [MCUXpresso SDK documentation for Build And Configuration](#) [MCUXpresso SDK Getting Start Guide](#)

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this `west list_project` command in `mcuxsdk` workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

Task List (FreeRTOS)							
TCB#	Task Name	Task Handle	Task State	Priority	Stack Usage	Event Object	Runtime
1	task_one	0x1fffecc8	Blocked	1 (1)	0 B / 880 B	MyCountingSemaphore (Rx)	0x0 (0.0%)
2	task_two	0x1ffff130	Blocked	2 (2)	0 B / 888 B	MyCountingSemaphore (Rx)	0x1 (0.1%)
3	IDLE	0x1ffff330	Running	0 (0)	0 B / 296 B		0x3e5 (99.6%)
4	Tmr Svc	0x1ffff6b8	Blocked	17 (17)	28 B / 672 B	TmrQ (Rx)	0x3 (0.3%)

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[Unreleased]

Added

- Kconfig added CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT config to optionally include custom FreeRTOSConfig fragment include file FreeRTOSConfig_frag.h. File must be provided by application.
- Added missing Kconfig option for configUSE_PICOLIBC_TLS.
- Add correct header files to build when configUSE_NEWLIB_REENTRANT and configUSE_PICOLIBC_TLS is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See rtos\freertos\freertos_kernel\History.txt
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See rtos\freertos\freertos_kernel\History.txt

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
 - Tickless idle mode support for Cortex-A7. Add fsl_tickless_epit.c and fsl_tickless_generic.h in portable/IAR/ARM_CA9 folder.
 - Enabled float context saving in IAR for Cortex-A7. Added configUSE_TASK_FPU_SUPPORT macros. Modified port.c and portmacro.h in portable/IAR/ARM_CA9 folder.
- Other changes:
 - Transformed ARM_CM core specific tickless low power support into generic form under freertos/Source/portable/low_power_tickless/.

[9.0.0_rev2]

- New features:
 - Enabled MCUXpresso thread aware debugging. Add `freertos_tasks_c_additions.h` and `configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H` and `configFREERTOS_MEMORY_SCHEME` macros.

[9.0.0_rev1]

- New features:
 - Enabled `-flto` optimization in GCC by adding `attribute((used))` for `vTaskSwitchContext`.
 - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable `configRECORD_STACK_HIGH_ADDRESS` macro. Modified files are `task.c` and `FreeRTOS.h`.

[9.0.0_rev0]

- New features:
 - Example `freertos_sem_static`.
 - Static allocation support RTOS driver wrappers.
- Other changes:
 - Tickless idle rework. Support for different timers is in separated files (`fsl_tickless_systick.c`, `fsl_tickless_lptmr.c`).
 - Removed configuration option `configSYSTICK_USE_LOW_POWER_TIMER`. Low power timer is now selected by linking of appropriate file `fsl_tickless_lptmr.c`.
 - Removed `configOVERRIDE_DEFAULT_TICK_CONFIGURATION` in RVDS port. Use of `attribute((weak))` is the preferred solution. Not same as `_weak`!

[8.2.3]

- New features:
 - Tickless idle mode support.
 - Added template application for Kinetis Expert (KEx) tool (`template_application`).
- Other changes:
 - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (<https://github.com/FreeRTOS/FreeRTOS-Kernel>)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see [README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK](#) document.



Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in [FreeRTOS/FreeRTOS](#) repository, which contains pre-configured demo application projects under [FreeRTOS/Demo](#) directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the [Developer Documentation](#), and [API Reference](#).

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#).

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a freertos_config library (typically an INTERFACE library) The following assumes the directory structure:

– include/FreeRTOSConfig.h

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
INTERFACE
  include
)

target_compile_definitions(freertos_config
INTERFACE
  projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to `freertos_config`:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - `list.c`, `queue.c` and `tasks.c`. The kernel is contained within these three files. `croutine.c` implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The `./portable` directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the `./portable` directory for more information.
- The `./include` directory contains the real time kernel header files.
- The `./template_configuration` directory contains a sample `FreeRTOSConfig.h` to help jumpstart a new project. See the *FreeRTOSConfig.h* file for instructions.

Code Formatting FreeRTOS files are formatted using the “`uncrustify`” tool. The configuration file used by `uncrustify` can be found in the [FreeRTOS/CI-CD-GitHub-Actions's uncrustify.cfg](#) file.

Line Endings File checked into the FreeRTOS-Kernel repository use unix-style LF line endings for the best compatibility with git.

For optimal compatibility with Microsoft Windows tools, it is best to enable the git `autocrlf` feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the `git blame` command. You can configure git to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using [Visual Studio Code](#), commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses [cSpell](#) as part of its spelling check. The config file for which can be found at [cspell.config.yaml](#). There is additionally a [cSpell plugin for VSCode](#) that can be used as well. `.cSpellWords.txt` contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to `.cSpellWords.txt`. When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt`. Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (<https://github.com/FreeRTOS/backoffalgorithm>)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the “Full Jitter” strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the [Exponential Backoff and Jitter](#) AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library [here](#).

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the backoffAlgorithm library on a POSIX platform to retry a DNS resolution query for amazon.com.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS      ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS  ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS      ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                      RETRY_BACKOFF_BASE_MS,
                                      RETRY_MAX_BACKOFF_DELAY_MS,
                                      RETRY_MAX_ATTEMPTS );

    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
    }
```

(continues on next page)

(continued from previous page)

```

/* Retry if DNS resolution query failed. */
if( dnsStatus != 0 )
{
    /* Generate a random number and get back-off value (in milliseconds) for the next retry.
    * Note: It is recommended to use a random number generator that is seeded with
    * device-specific entropy source so that backoff calculation across devices is different
    * and possibility of network collision between devices attempting retries can be avoided.
    *
    * For the simplicity of this code example, the pseudo random number generator, rand()
    * function is used. */
    retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

    /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
    * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
    ( void ) usleep( nextRetryBackoff * 1000U );
}
} while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

return dnsStatus;
}

```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to *stdint.h* to build the backoffAlgorithm library.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C89 or later compiler like *gcc*
 - CMake 3.13.0 or later
- For running the coverage target, *gcov* is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (<https://github.com/FreeRTOS/corehttp>)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, [llhttp](#), and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety and data structure invariance through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_http_config.h* can be provided by the user application to the library.

By default, a *core_http_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a `core_http_config.h` file in the application, and adding it to the include directories for the library build. **OR**
- Defining the `HTTP_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Building the Library The `httpFilePaths.cmake` file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. `core_http_config.h`) OR `HTTP_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the `httpFilePaths.cmake` file, refer to the `coverity_analysis` library target in `test/CMakeLists.txt` file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is required for this repository's [CMock test framework](#).
- For running the coverage target, the following are required:
 - `gcov`
 - `lcov`

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the `cmake` command: `cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library [here](#) on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (<https://github.com/FreeRTOS/corejson>)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example

```

#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\":\"abc\",\"bar\":{\"foo\":\"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                             &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}

```

A search may descend through nested objects when the queryKey contains matching key strings joined by a separator, .. In the example above, bar has the value { "foo": "xyz" }. Therefore, a search for query key bar.foo would output xyz.

Building coreJSON A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, *stdbool.h* and *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h* respectively.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in `.gitmodules`, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C90 compiler like gcc
 - CMake 3.13.0 or later
 - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (<https://github.com/FreeRTOS/coremqtt>)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the [MQTT 3.1.1](#) standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreMQTT v2.1.1 source code is part of the FreeRTOS 202210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_mqtt_config.h* can be provided by the application to the library.

By default, a *core_mqtt_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `MQTT_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a *core_mqtt_config.h* file in the application, and adding it to the include directories list of the library
- OR**
- Defining the `MQTT_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = "iotuser", OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then "iotuser" can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME           "FreeRTOS"
#define OS_VERSION        "V10.4.3"
#define HARDWARE_PLATFORM_NAME  "WinSim"
#define MQTT_LIB          "coremqtt@2.1.1"

#define USERNAME_STRING    "iotuser?SDK=" OS_NAME "&Version=" OS_VERSION "&Platform=" HARDWARE_PLATFORM_NAME "&MQTTLib=" MQTT_LIB
#define USERNAME_STRING_LENGTH  ( ( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.userName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,
↳ pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, *stdbool.h* and *stdint.h*. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h*, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. *core_mqtt_config.h*) OR `MQTT_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the *mqttFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
 1. `docker build -t coremqtt .`
 2. `docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt`
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
3. Run the *cmake* command: `cmake -S test -B build`
4. Run this command to build the library and unit tests: `make -C build all`
5. The generated test executables will be present in *build/bin/tests* folder.
6. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The *test/cbmc/proofs* directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C
FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (<https://github.com/FreeRTOS/coremqtt-agent>)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the [coreMQTT](#) library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call to MQTT_ProcessLoop). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

Cloning this repository This repo uses [Git Submodules](#) to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the `--recurse-submodules` argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same `core_mqtt_config.h` configuration file as coreMQTT, with the addition of configuration constants listed at the top of `core_mqtt_agent.h` and `core_mqtt_agent_command_functions.h`. Documentation for these configurations can be found [here](#).

To provide values for these configuration values, they must be either:

- Defined in `core_mqtt_config.h` used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the [reference examples](#) below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below [reference examples](#) use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the [reference examples](#) below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same *source/* and *source/include* pattern as the agent library; its build instructions can be found [here](#).

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from *mqttFilePaths.cmake* in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the *mqttAgentFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos
FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found [here](#).

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our [active support forum](#). You can find a list of [frequently asked questions](#) [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (<https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0>)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the [Transport Layer Security \(TLS\)](#) protocol – without the application ever ‘seeing’ the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, “PKCS #11”, is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the [oasis website](#).

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#) and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 [specification](#) replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from [mbedtls](#) version 2.x or 3.x.
- **pkcs11 API header(s)** available from [OASIS](#) or [OpenSC](#)

Optionally, variables from the pkcsFilePaths.cmake file may be referenced if your project uses cmake.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the cmake FetchContent feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for gcov-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the [Linux Test Project](#)
- **perl** needed to run the lcov utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
 - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
 - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library [here](#) using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the AWS [docs](#) web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's [Platform Security Architecture](#).
- Microchip's [cryptoauthlib](#).
- Infineon's [Optiga Trust X](#).

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (<https://github.com/FreeRTOS/freertos-plus-tcp>)(4.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

Introduction This branch contains unified IPv4 and IPv6 functionalities. Refer to the Getting started Guide (found [here](#)) for more details.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the [MISRA coding standard](#). Any deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). The library is validated for memory safety and data structure invariance through the [CBMC automated reasoning tool](#) for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

Getting started The easiest way to use the 4.0.0 version of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found [here](#)) Another way is to start with the pre-configured demo application project (found in [this directory](#)). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the [Documentation](#), and [API Reference](#).

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#). Please also refer to [FAQ](#) for frequently asked questions.

Also see the [Submitting a bugs/feature request](#) section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a `source` directory. This change requires modification of any existing project(s) to include the modified source files and directories. There are examples on how to use the new files and directory structure. For an example based on the Xilinx Zynq-7000, use the code in this [branch](#) and follow these [instructions](#) to build and run the demo.

FreeRTOS-Plus-TCP V3.1.0 source code(.c .h) is part of the FreeRTOS 202210.00 LTS release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to [this](#).

Note: After running the script, while the `.c` files will have same names as the pre V3.0.0 source, the files in the `include` directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from [here](#).

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing `python --version`.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory that was created using the *Cloning this repository* step above. And then run `python <Path/to/the/script>/GenerateOriginalFiles.py`.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        master #Note: Best practice to use specific git-hash or tagged version
  GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```

set( FREERTOS_PLUS_FAT_DEV_SUPPORT OFF CACHE BOOL "" FORCE)
# Select the native compile PORT
set( FREERTOS_PLUS_FAT_PORT "POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. Zynq 2019_3 version of port
  set(FREERTOS_PLUS_FAT_PORT "ZYNQ_2019_3" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)

```

Consuming stand-alone This repository uses [Git Submodules](#) to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```

git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Using SSH:

```

git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel

```

Porting The porting guide is available on [this page](#).

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
 - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
 - This directory contains all the tests (unit tests and CBMC) and the dependencies ([FreeRTOS-Kernel/Litani-port](#)) the tests require.
- source/portable
 - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compilers.
- source/include
 - The include directory has all the ‘core’ header files of FreeRTOS-Plus-TCP source.
- source
 - This directory contains all the [.c] source files.

Note At this time it is recommended to use BufferAllocation_2.c in which case it is essential to use the heap_4.c memory allocation scheme. See [memory management](#).

Kernel sources The FreeRTOS Kernel Source is in [FreeRTOS/FreeRTOS-Kernel repository](#), and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at `./test/FreeRTOS-Kernel` directory.

CBMC The `test/cbmc/proofs` directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material [here](#).

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).