



MCUXpresso SDK Documentation

Release 25.09.00



NXP
Sep 19, 2025



Table of contents

1	FRDM-MCXA344	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	55
1.3.1	Getting Started with MCUXpresso SDK Repository	55
1.4	Release Notes	68
1.4.1	MCUXpresso SDK Release Notes	68
1.5	ChangeLog	71
1.5.1	MCUXpresso SDK Changelog	71
1.6	Driver API Reference Manual	146
1.7	Middleware Documentation	146
1.7.1	MCU Boot	146
1.7.2	FreeMASTER	146
1.7.3	FreeRTOS	146
1.7.4	File systemFatfs	146
2	MCXA344	147
2.1	AOI: Crossbar AND/OR/INVERT Driver	147
2.2	CACHE: LPCAC CACHE Memory Controller	150
2.3	CDOG	150
2.4	Clock Driver	154
2.5	CRC: Cyclic Redundancy Check Driver	174
2.6	CTIMER: Standard counter/timers	176
2.7	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	186
2.8	eDMA core Driver	216
2.9	eDMA soc Driver	223
2.10	EIM: error injection module	224
2.11	EQDC: Enhanced Quadrature Encoder/Decoder	224
2.12	ERM: error recording module	242
2.13	FGPIO Driver	244
2.14	FlexCAN: Flex Controller Area Network Driver	244
2.15	FlexCAN Driver	244
2.16	FlexCAN eDMA Driver	291
2.17	FREQME: Frequency Measurement	294
2.18	GLIKEY	294
2.19	GLIKEY	294
2.20	GPIO: General-Purpose Input/Output Driver	298
2.21	GPIO Driver	301
2.22	INPUTMUX: Input Multiplexing Driver	307
2.23	Common Driver	445
2.24	LPADC: 12-bit SAR Analog-to-Digital Converter Driver	456
2.25	Lpc_freqme	477
2.26	LPCMP: Low Power Analog Comparator Driver	482
2.27	LPI2C: Low Power Inter-Integrated Circuit Driver	491
2.28	LPI2C Master Driver	493

2.29	LPI2C Master DMA Driver	507
2.30	LPI2C Slave Driver	509
2.31	LPSPi: Low Power Serial Peripheral Interface	520
2.32	LPSPi Peripheral driver	520
2.33	LPSPi eDMA Driver	541
2.34	LPTMR: Low-Power Timer	548
2.35	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	554
2.36	LPUART Driver	554
2.37	LPUART eDMA Driver	572
2.38	MAU: Math Accelerator Unit Driver	575
2.39	MCX_CMC: Core Mode Controller Driver	579
2.40	MCX_SPC: System Power Control driver	591
2.41	MCX_VBAT: Smart Power Switch	629
2.42	OPAMP: Operational Amplifier	649
2.43	OSTIMER: OS Event Timer Driver	651
2.44	PORT: Port Control and Interrupts	655
2.45	PWM: Pulse Width Modulator	663
2.46	Reset Driver	688
2.47	RTC: Real Time Clock	692
2.48	SMARTDMA: SMART DMA Driver	696
2.49	MCXN SMARTDMA Firmware	698
2.50	TRDC: Trusted Resource Domain Controller	701
2.51	Trdc_core	723
2.52	Trdc_soc	737
2.53	UTICK: MictoTick Timer Driver	737
2.54	WAKETIMER: WAKETIMER Driver	739
2.55	WUU: Wakeup Unit driver	741
2.56	WWDT: Windowed Watchdog Timer Driver	746
3	Middleware	751
3.1	Boot	751
3.1.1	MCUXpresso SDK : mcuxsdk-middleware-mcuboot_opensource	751
3.1.2	MCUboot	752
3.2	Motor Control	753
3.2.1	FreeMASTER	753
4	RTOS	791
4.1	FreeRTOS	791
4.1.1	FreeRTOS kernel	791
4.1.2	FreeRTOS drivers	797
4.1.3	backoffalgorithm	797
4.1.4	corehttp	800
4.1.5	corejson	802
4.1.6	coremqtt	805
4.1.7	coremqtt-agent	808
4.1.8	corepkcs11	812
4.1.9	freertos-plus-tcp	815

This documentation contains information specific to the frdm-mcxa344 board.

Chapter 1


FRDM-MCXA344

1.1 Overview

FRDM-MCXA344 are compact and scalable development boards for rapid prototyping of MCX A27X MCUs. They offer industry standard headers for easy access to the MCUs I/Os, integrated open-standard serial interfaces and an on-board MCU-Link debugger. MCX A Series are high-performance, low-power microcontrollers with MAU, SmartDMA and performance efficiency.

The board is compatible with Arduino boards (Arduino UNO R3 and Arduino A4/A5), motor control boards (FRDM-MC-LVBLDC and FRDM-MC-LVPMSM), Mikroe click boards, and Pmod boards. It can be used with a wide range of development tools, including NXP MCUXpresso IDE, IAR Embedded Workbench, and Arm Keil MDK. The board is lead-free and RoHS-compliant.

For debugging the MCXA346 MCU, the FRDM-MCXA344 board uses an onboard (OB) debug probe, MCU-Link lite OB, which is based on another NXP MCU: LPC55S16

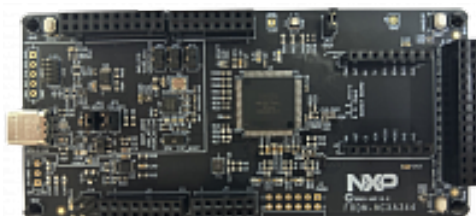

MCU device and part on board is shown below:

- Device: MCXA344
- PartNumber: MCXA344VLQ


1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with MCUXpresso SDK Package

Overview

The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case

examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development. For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN). For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

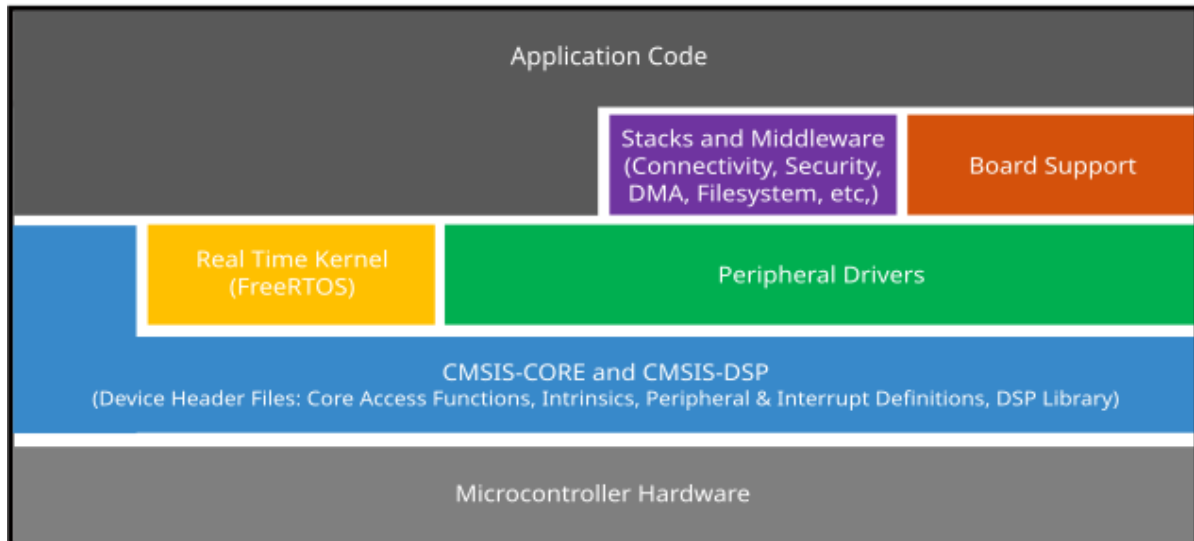

MCUXpresso SDK board support package folders

MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):


- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` exam-

ple (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

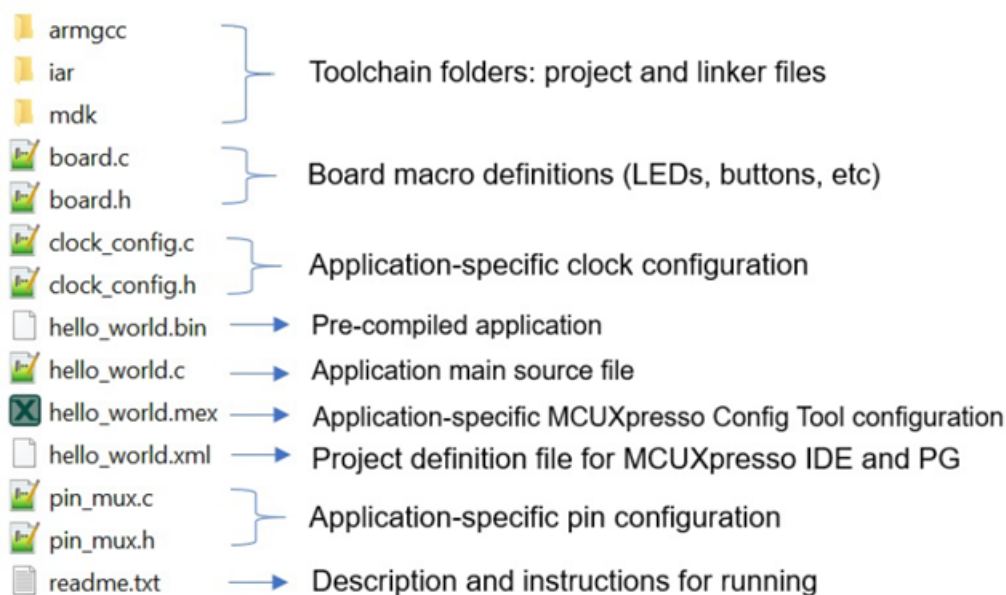

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the `rtos` folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.

Run a demo using MCUXpresso IDE


Note: Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.

This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

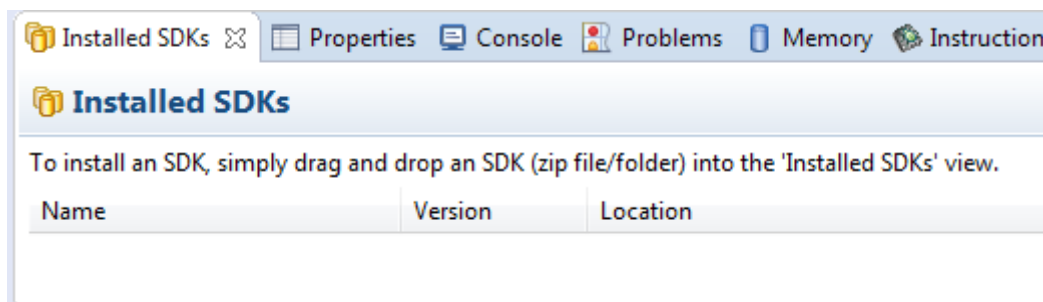

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

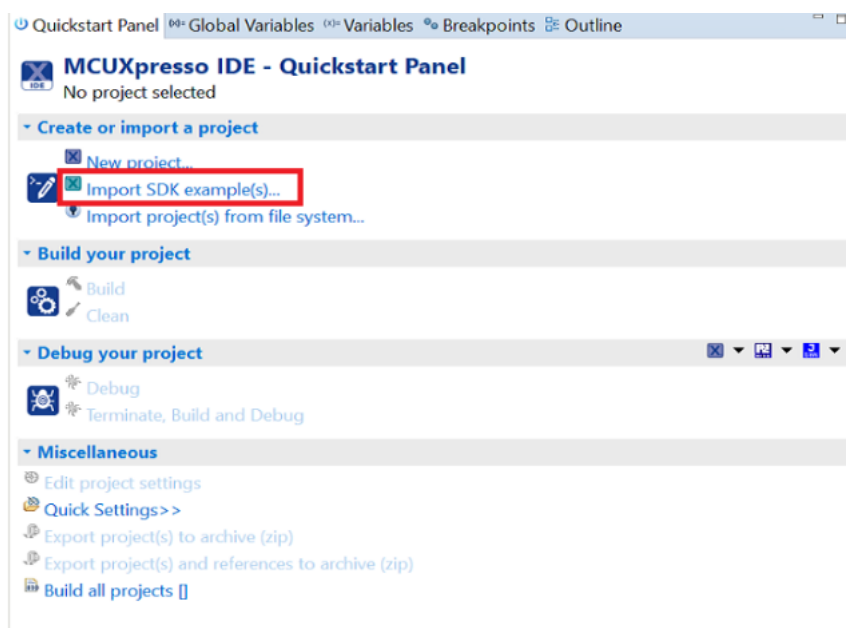

3. Expand the `demo_apps` folder and select `hello_world`.
4. Click **Next**.

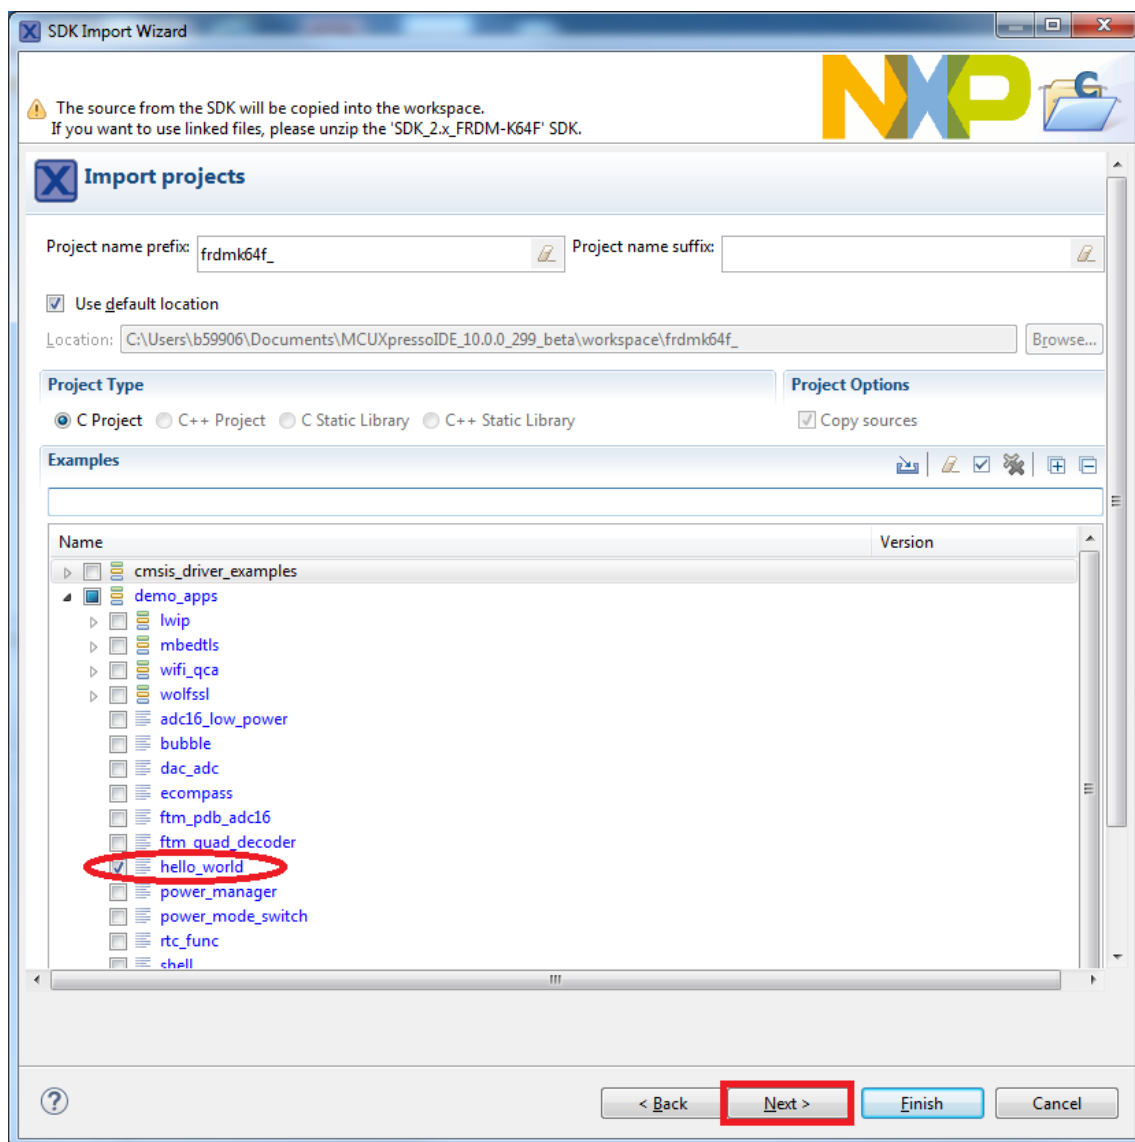


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference `BOARD_DEBUG_UART_BAUDRATE` variable in `board.h` file)
 2. No parity

3. 8 data bits

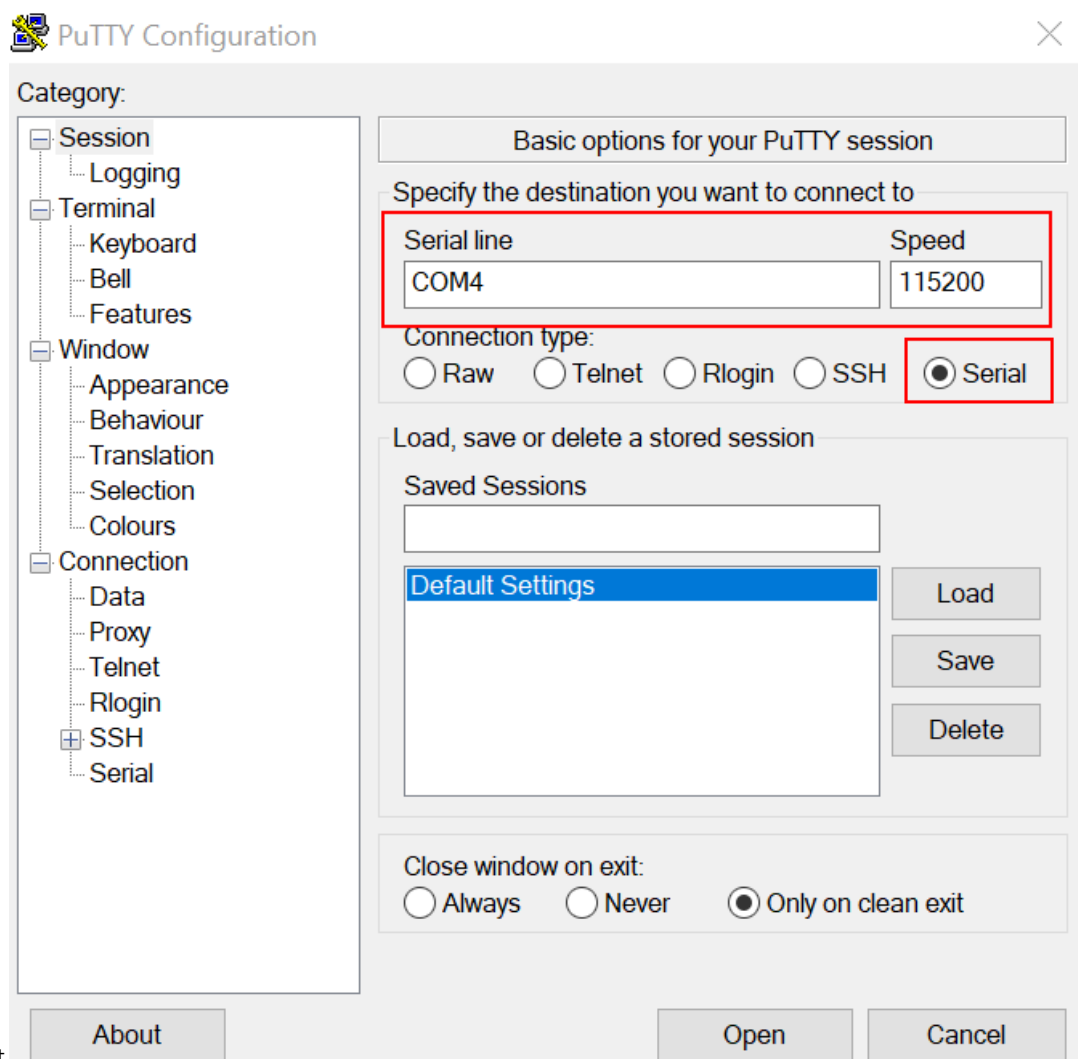

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

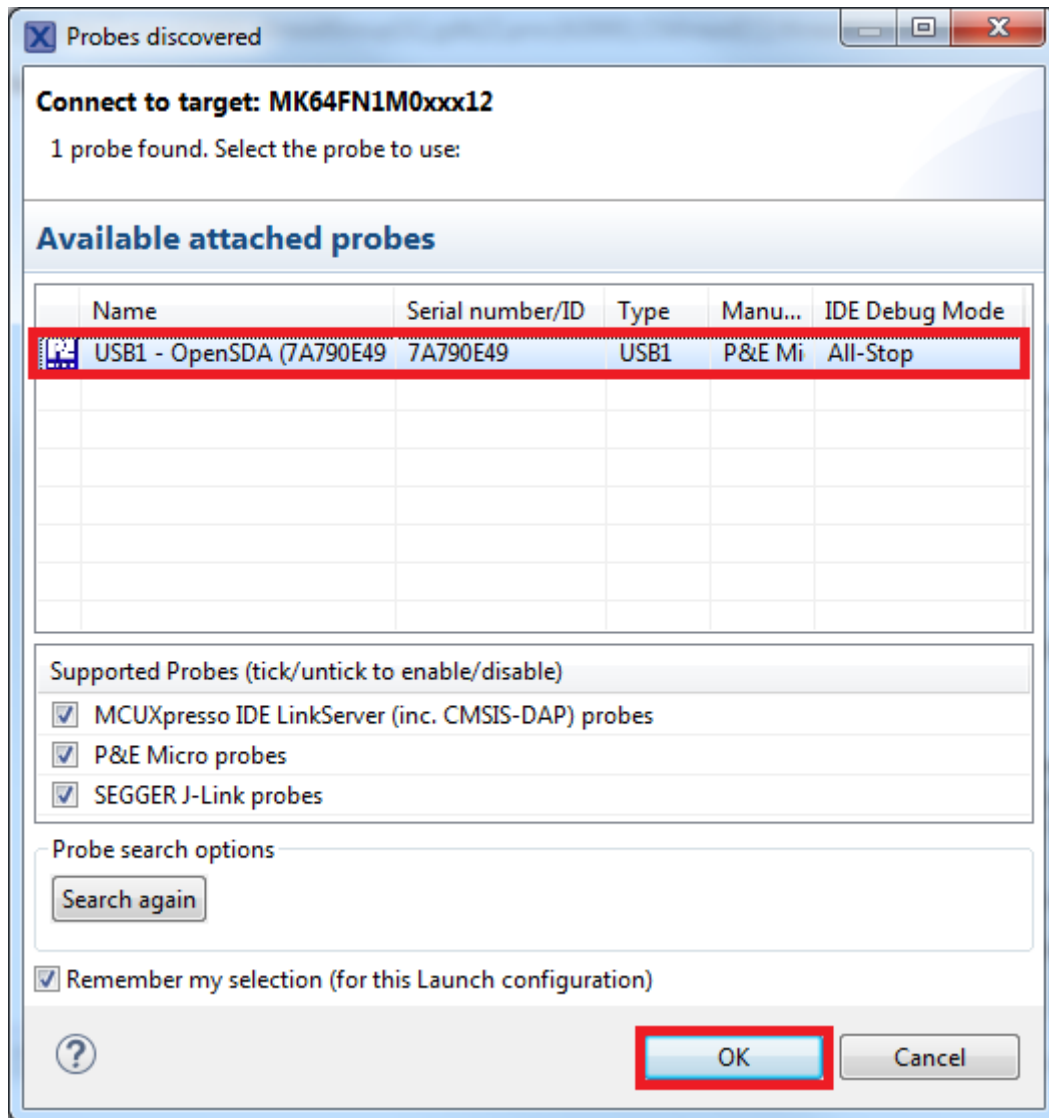

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

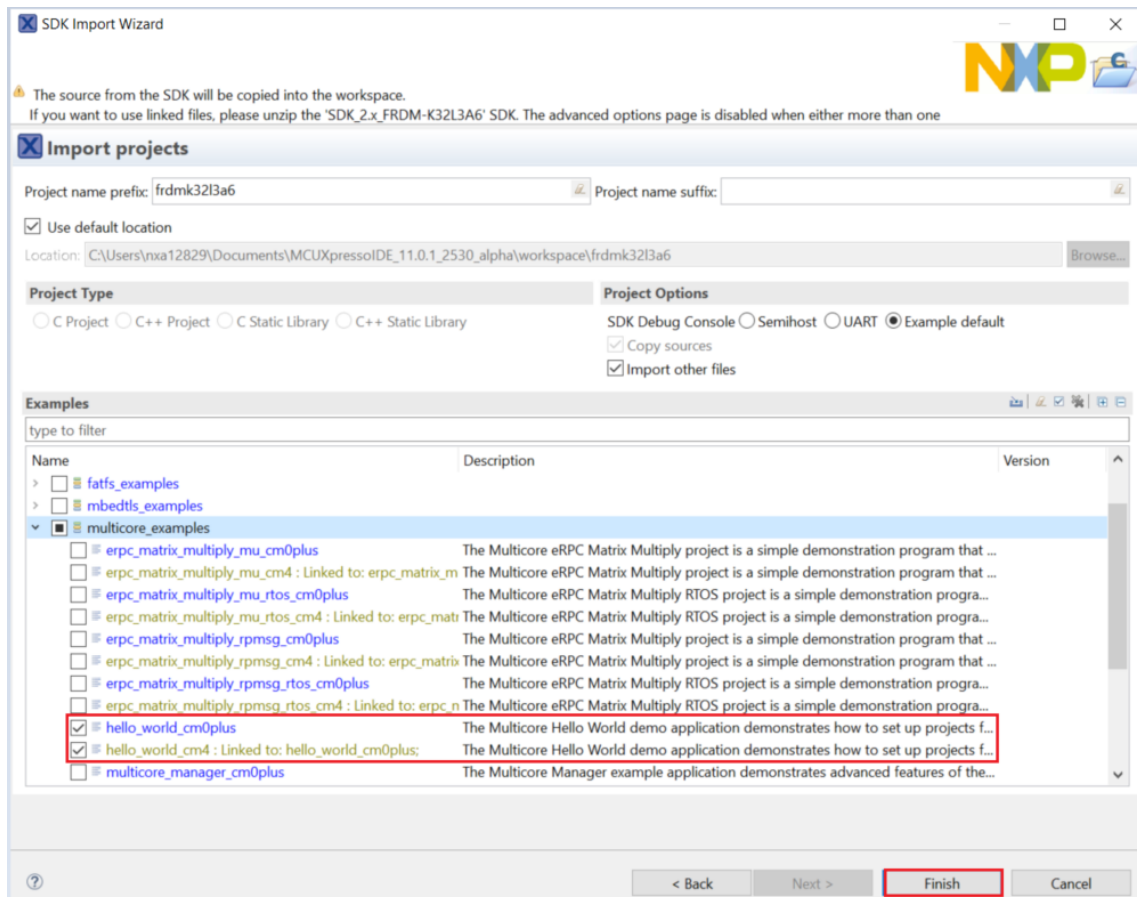


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

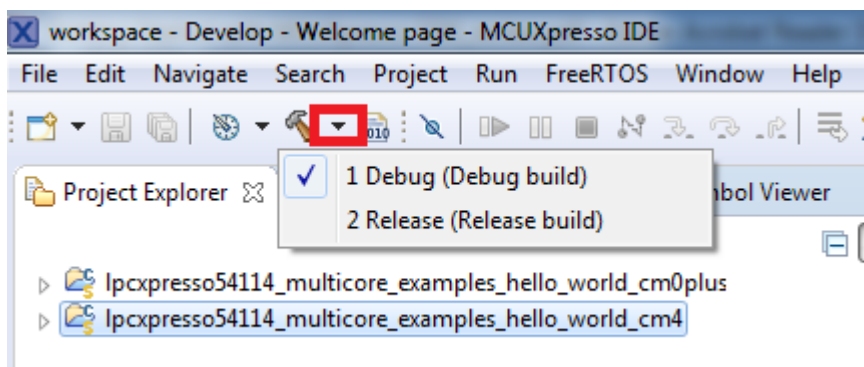




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations -> Set Active -> Release**. This alternate navigation using the menu item is **Project -> Build Configuration -> Set Active -> Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

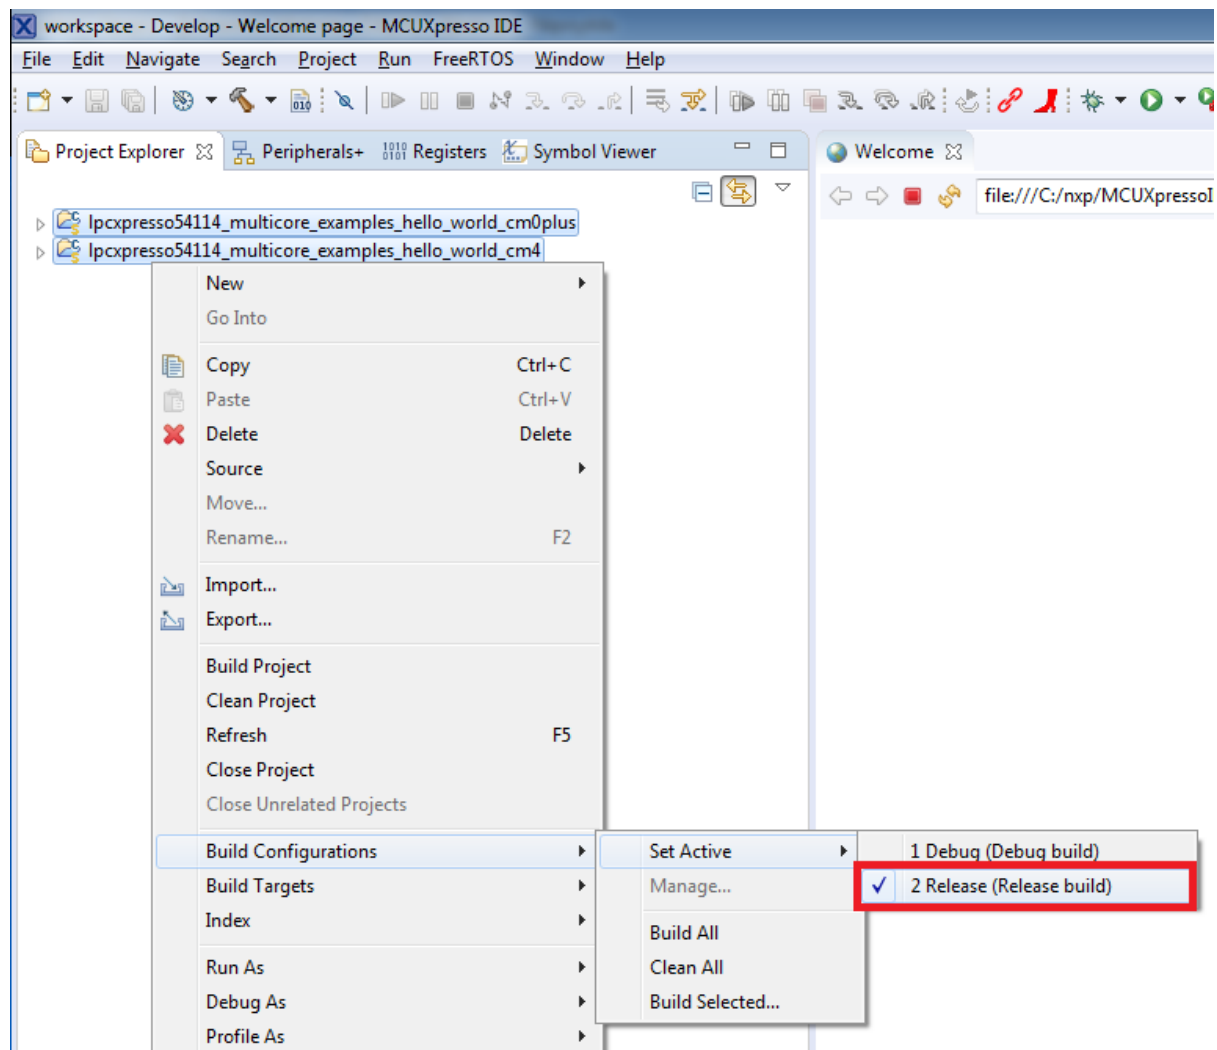


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

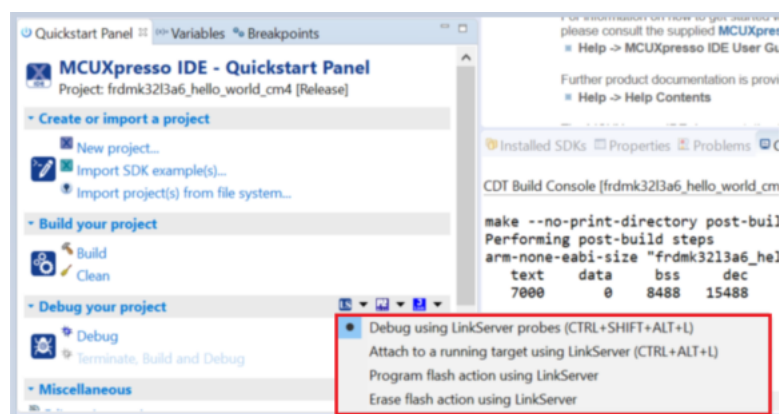

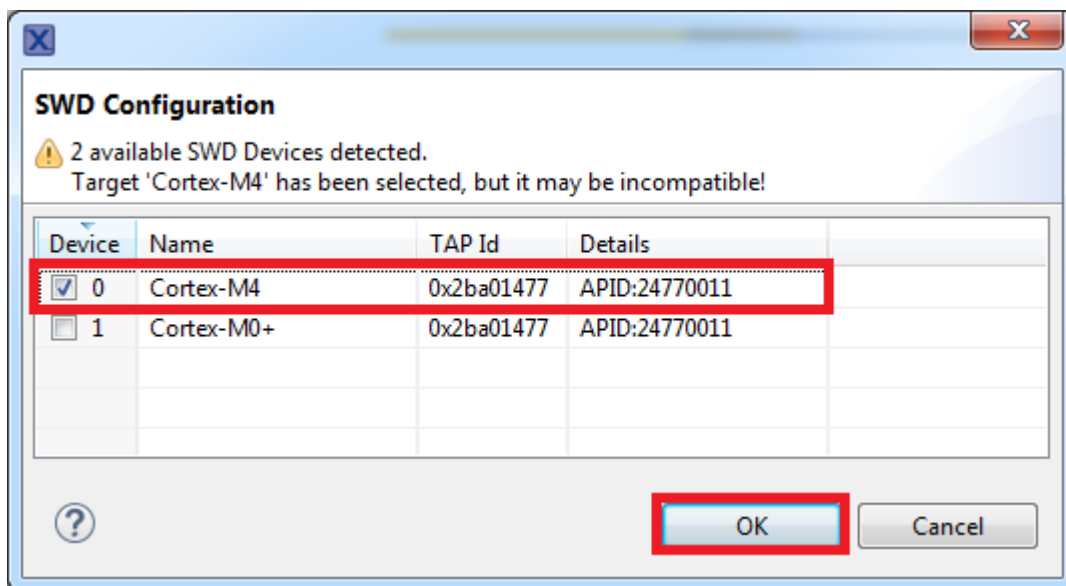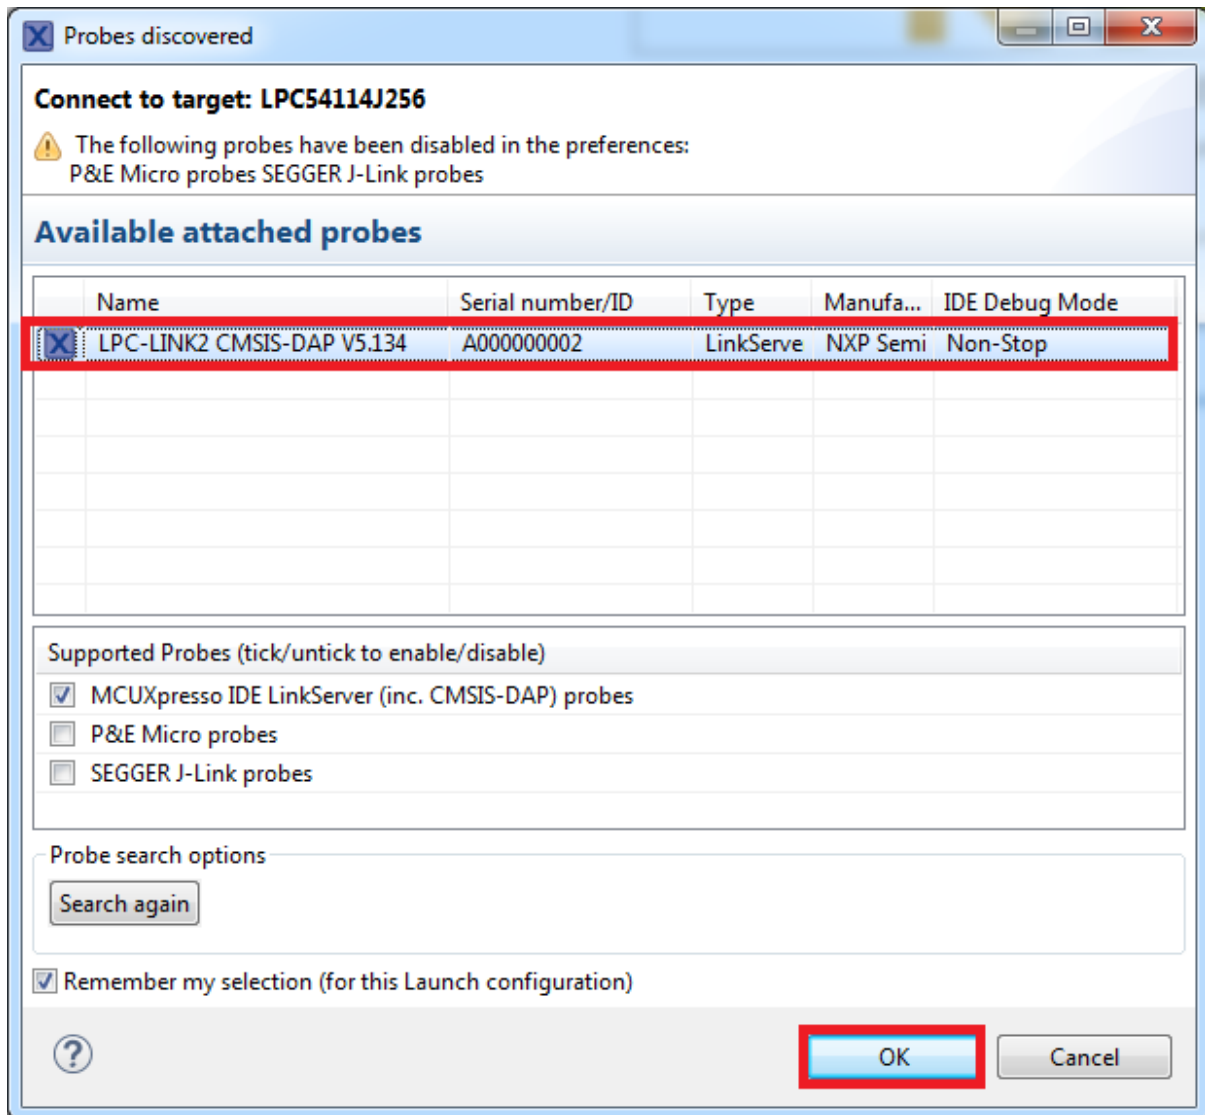

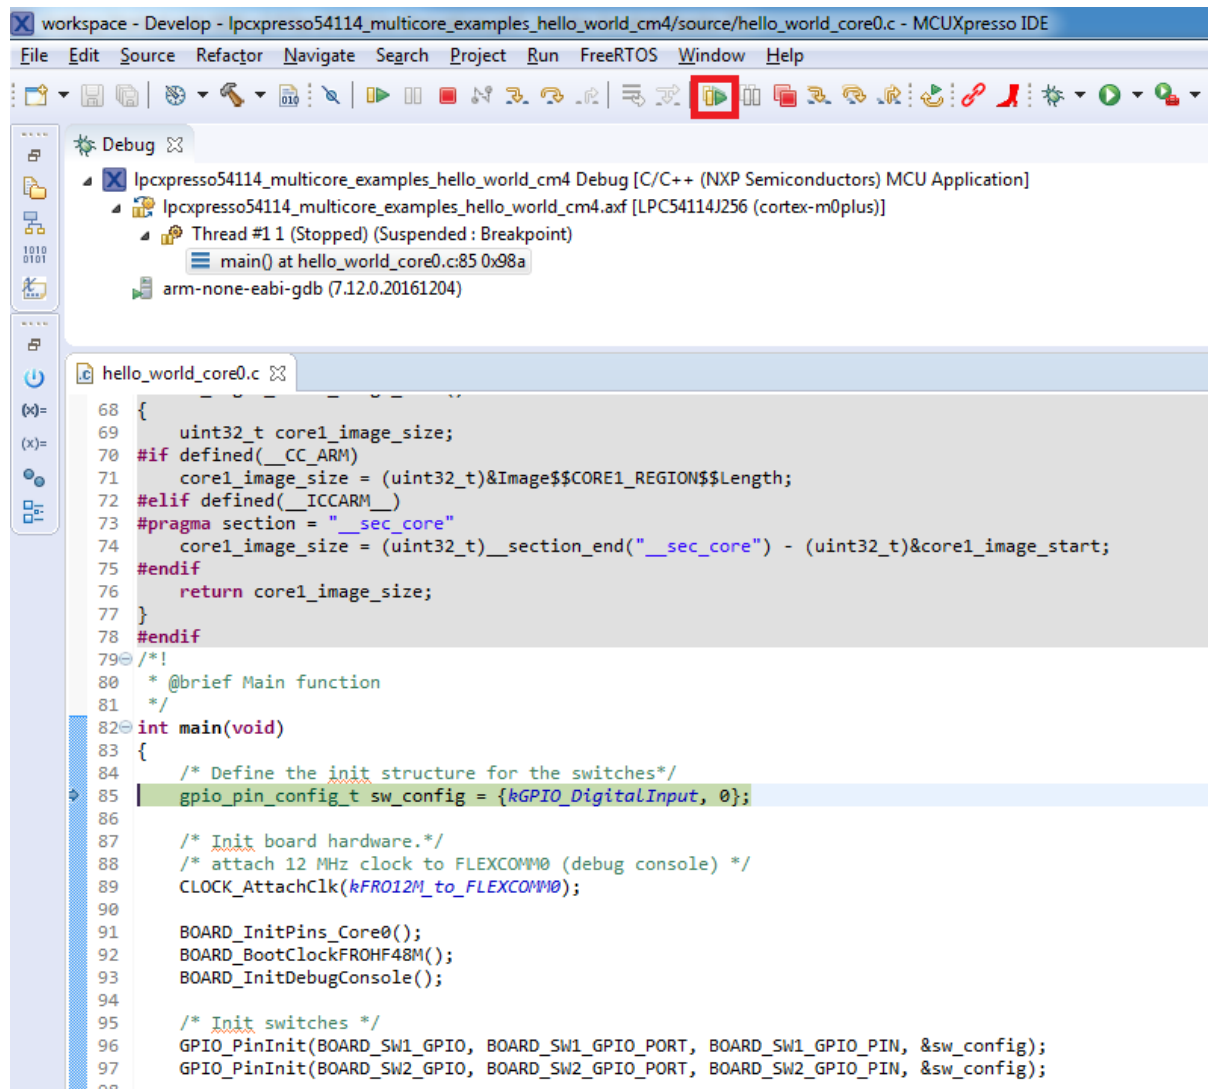



After clicking the “Resume All Debug sessions” button, the hello_world multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

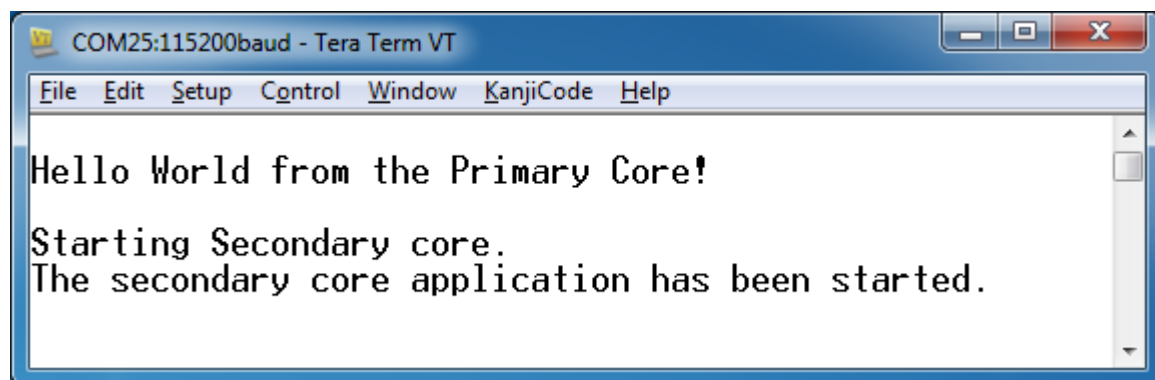


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the lpcxpresso54114_multicore_examples_hello_world_cm0plus project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

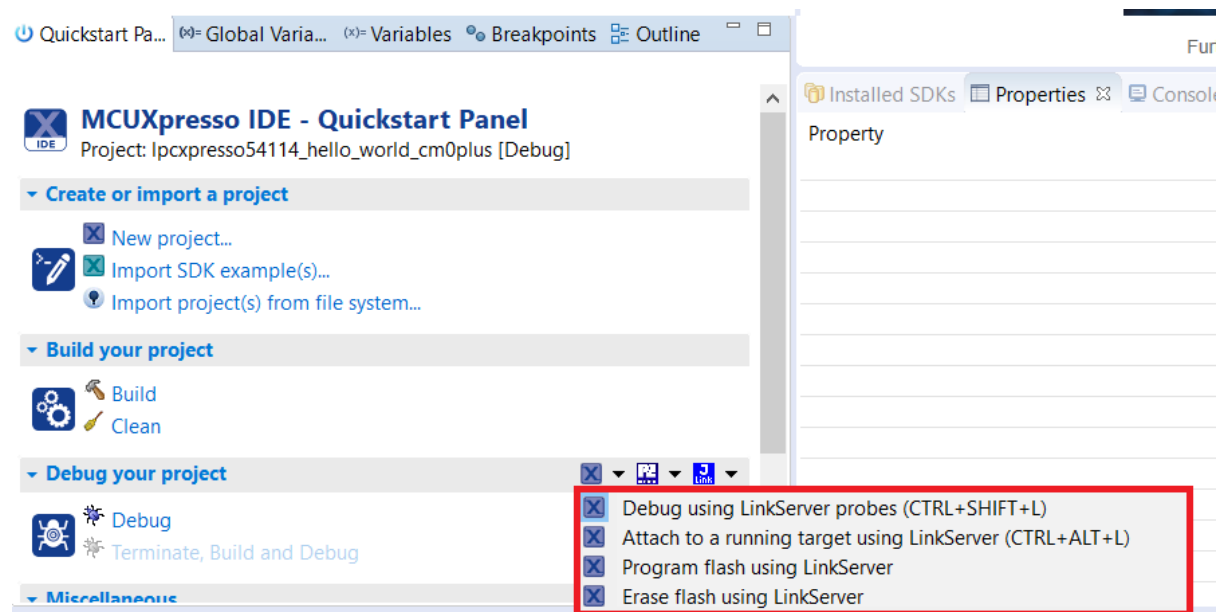


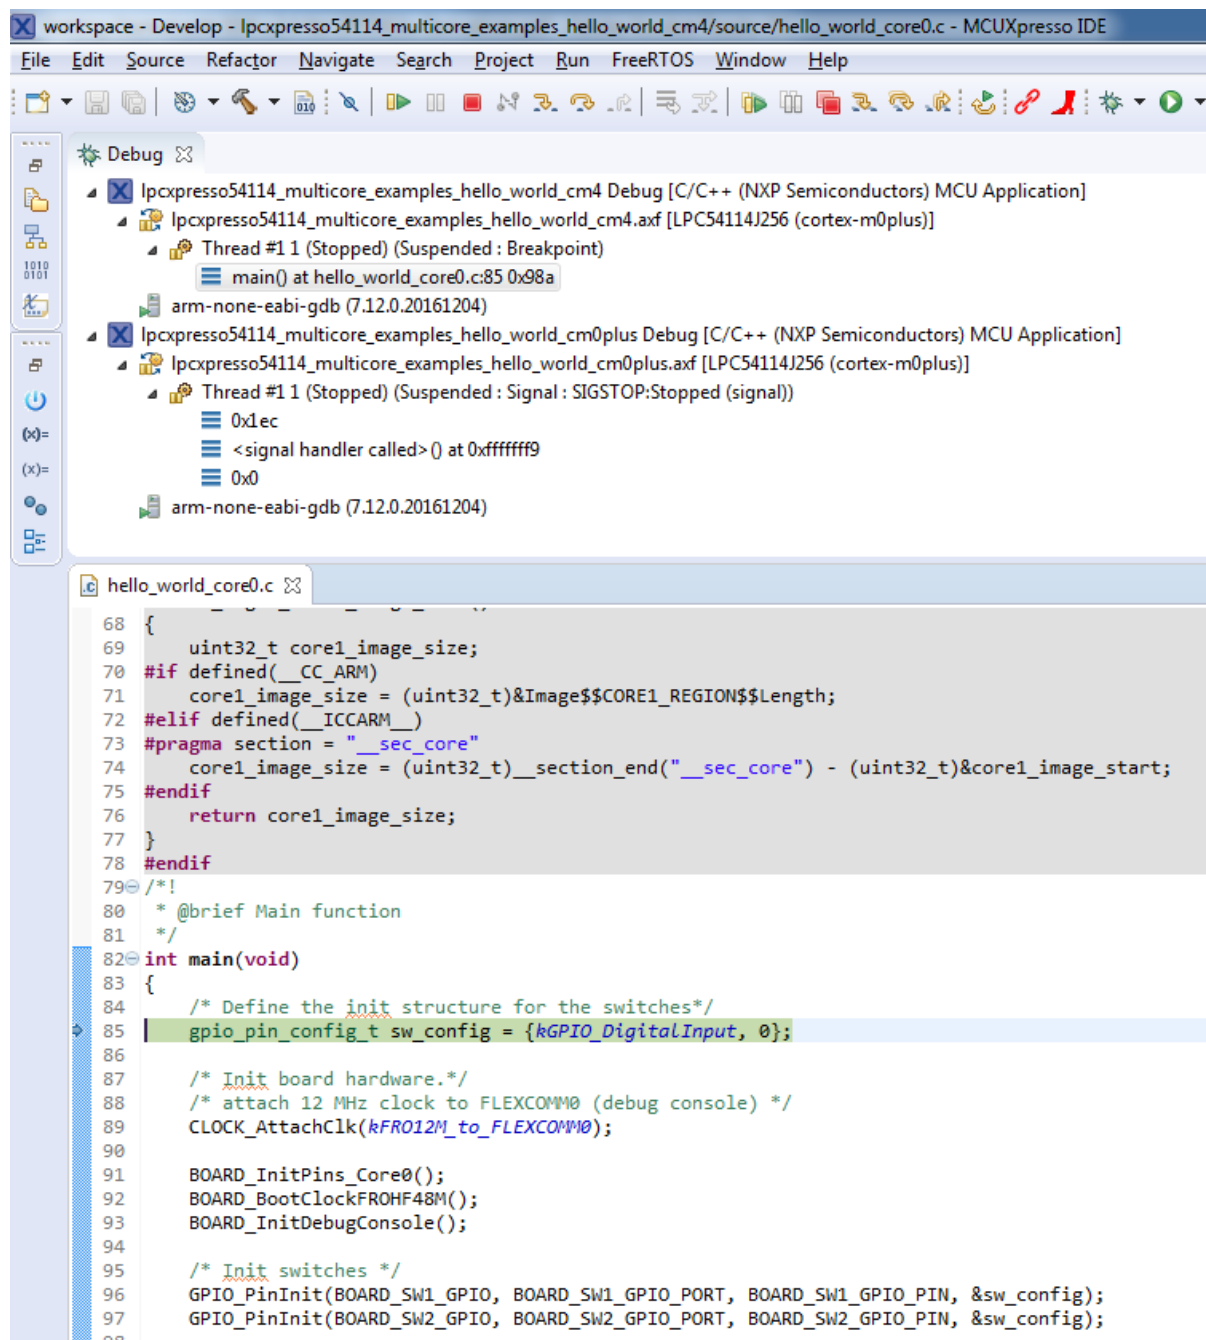


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

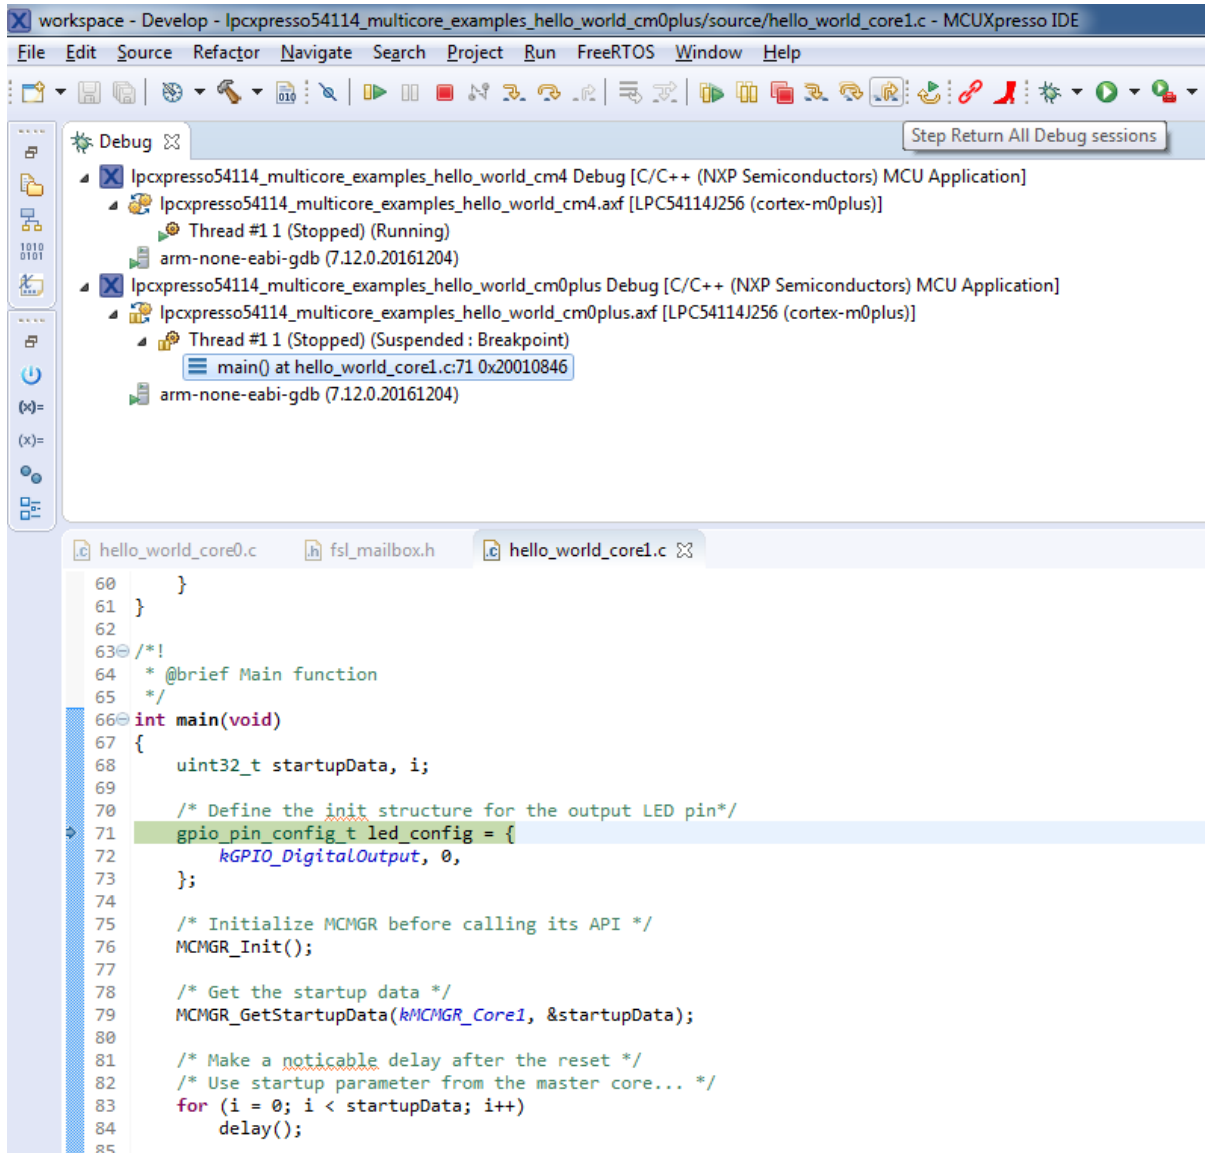


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

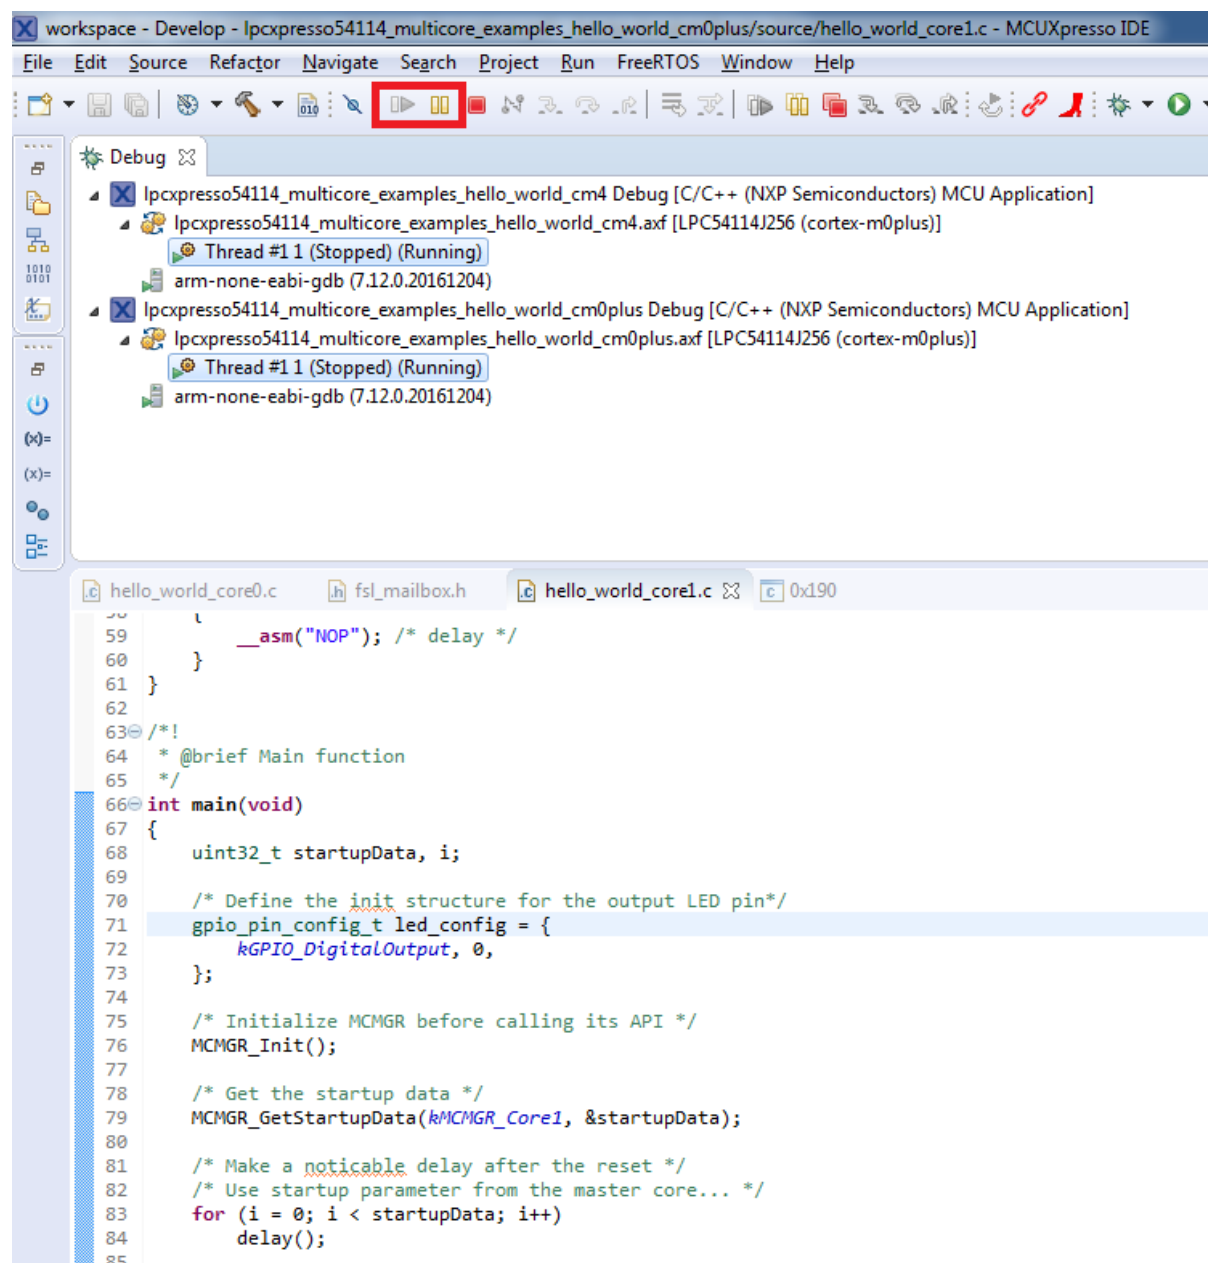

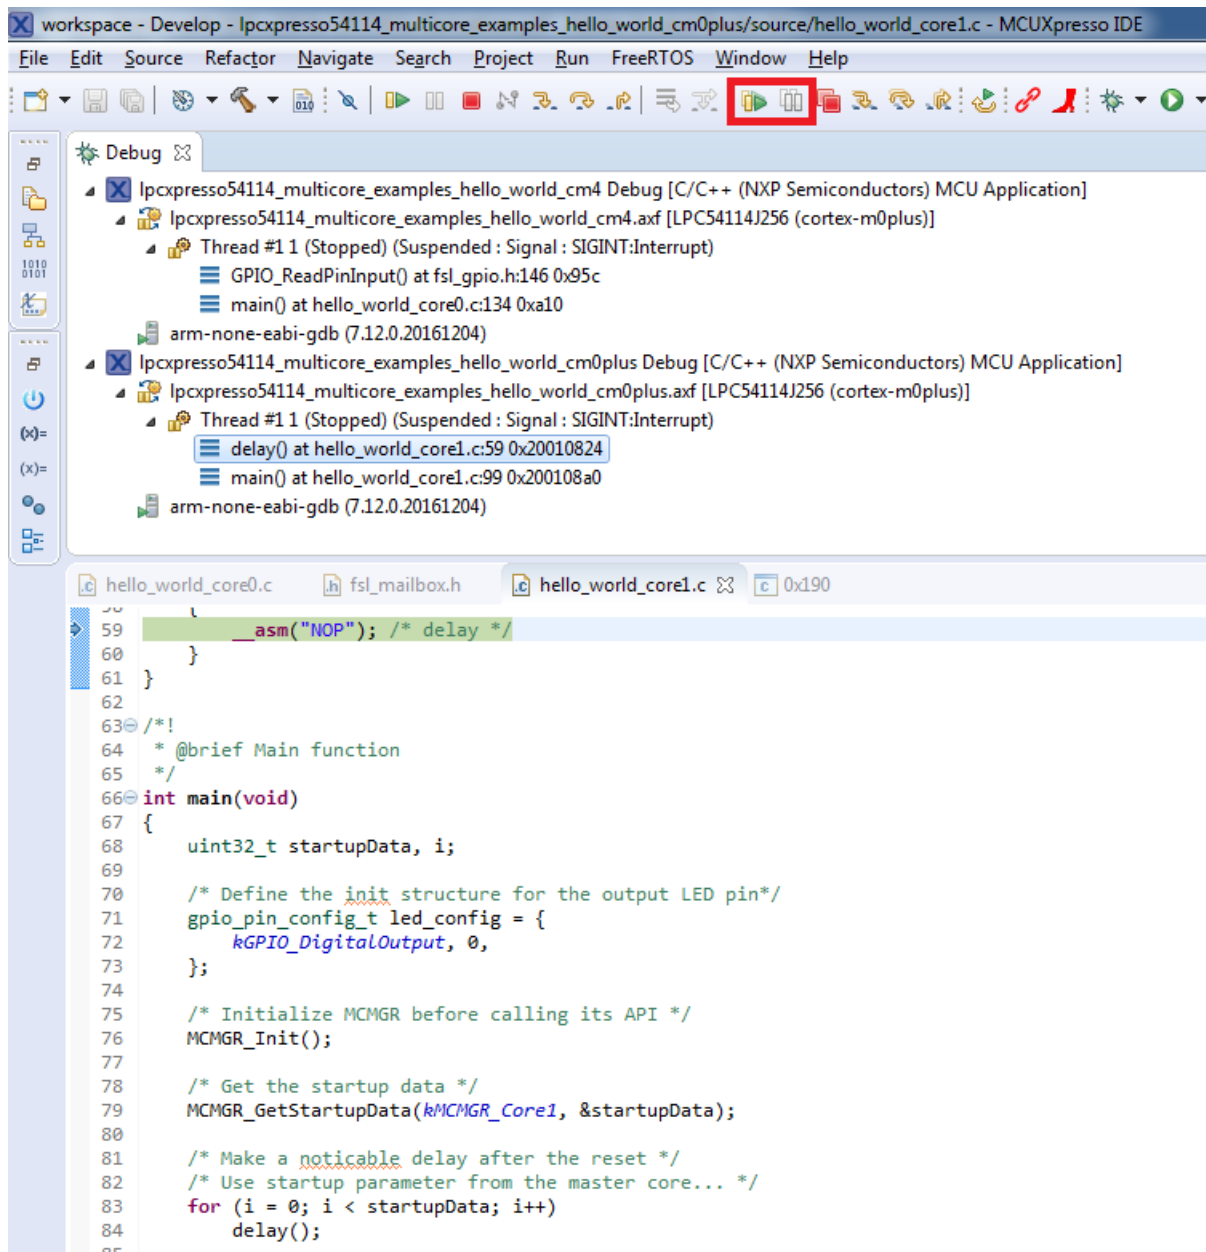


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the hello_world example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the **trustzone_examples/** folder and select **hello_world_s**. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

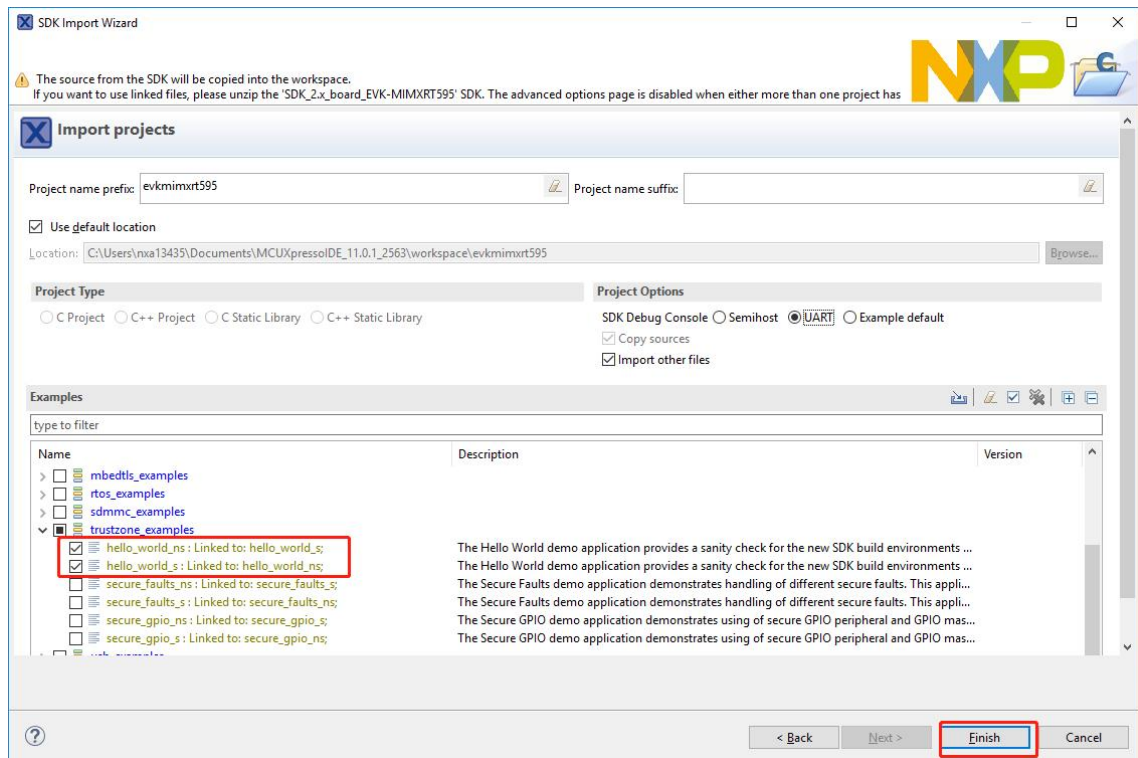


3. Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

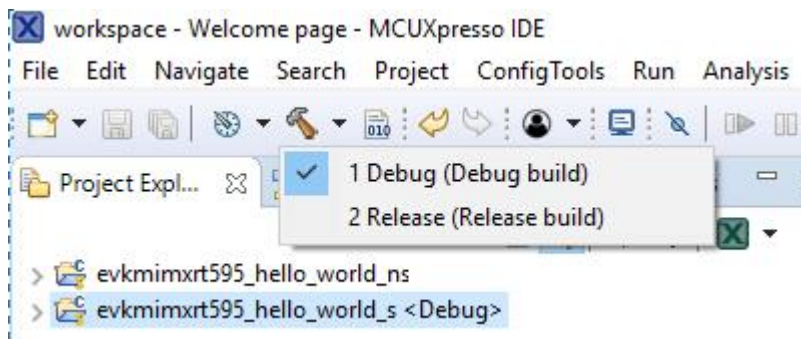


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

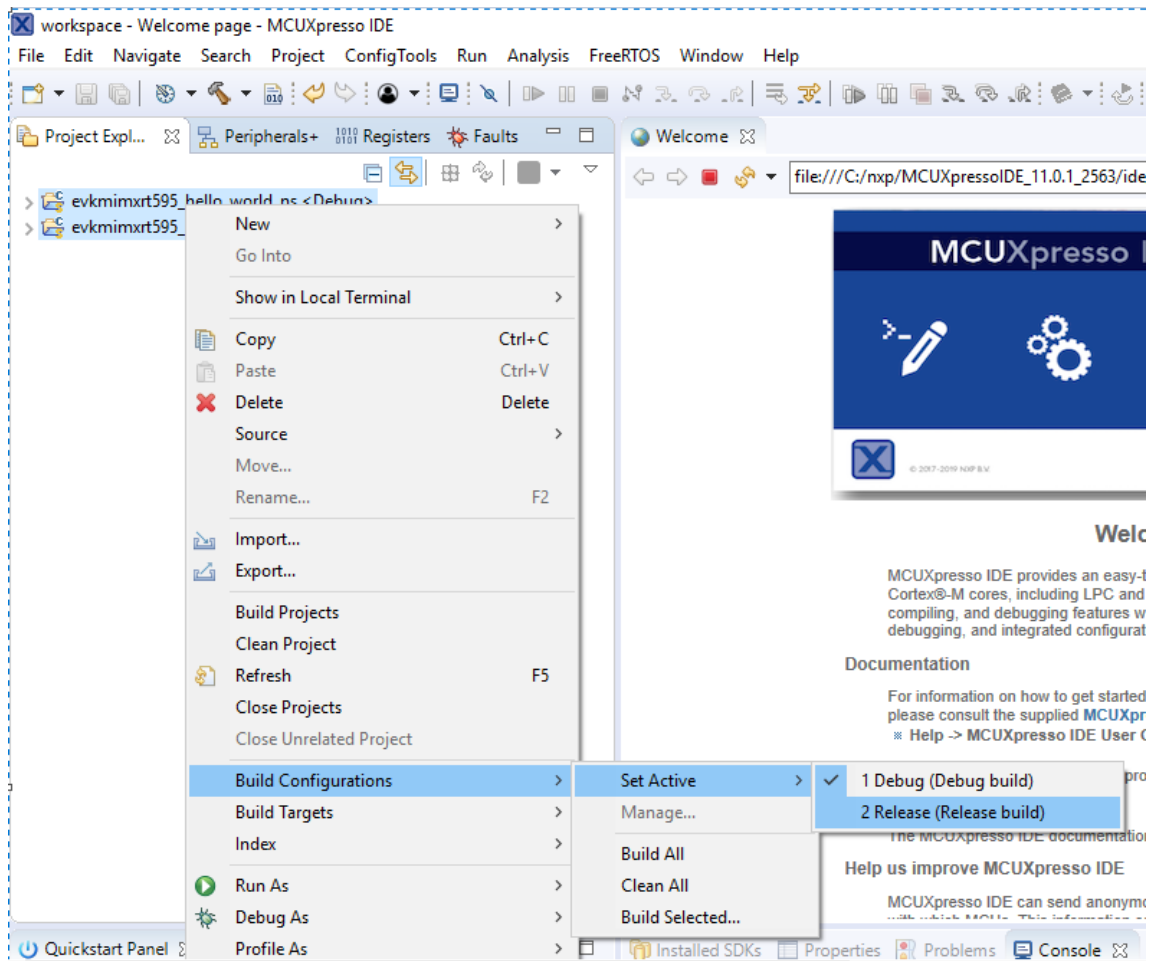

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring <board_name>_hello_world_s is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

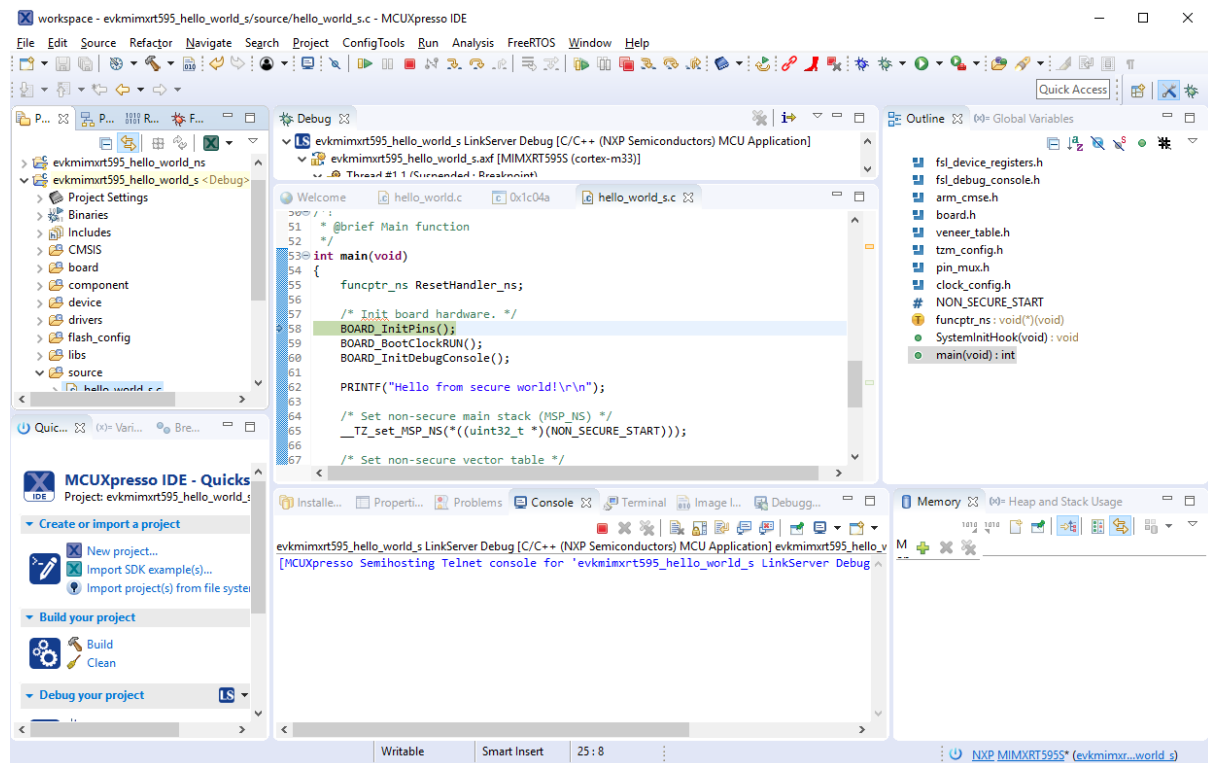

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

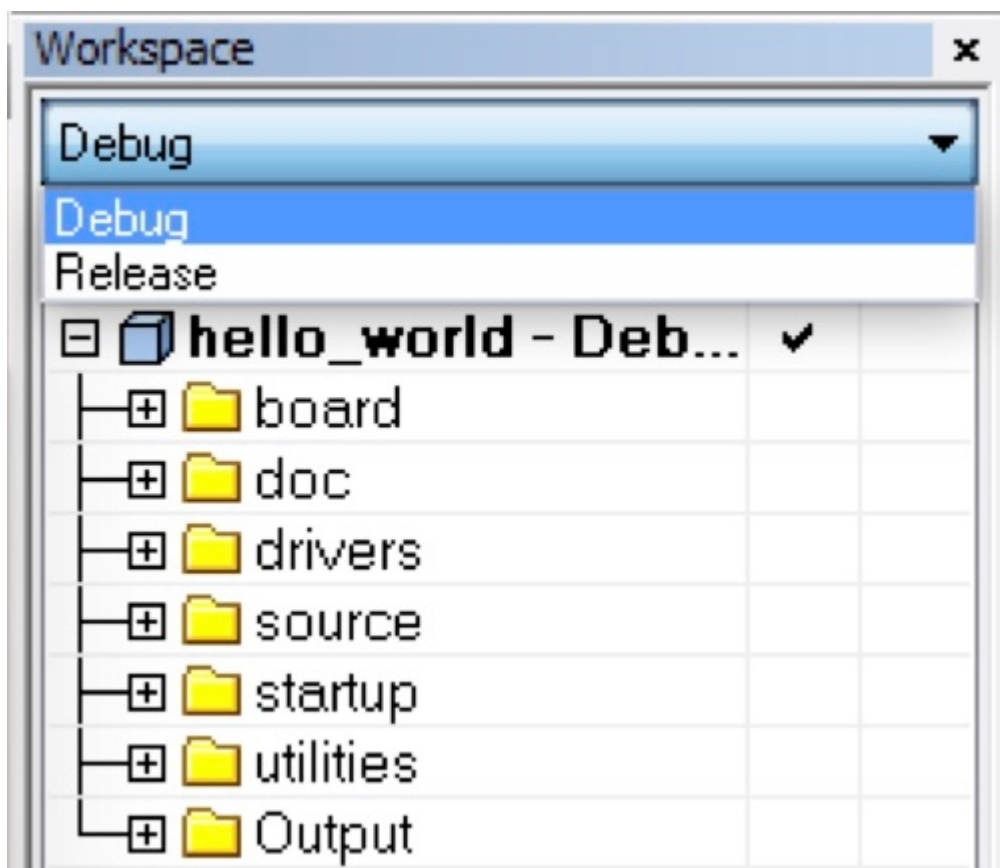


3. To build the demo application, click **Make**, highlighted in red in following figure.

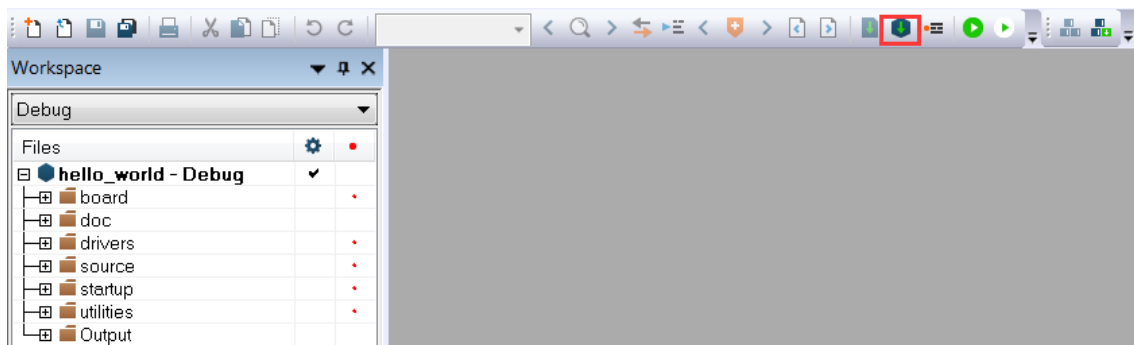

4. The build completes without errors.

Run an example application To download and run the application, perform these steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 2. No parity
 3. 8 data bits

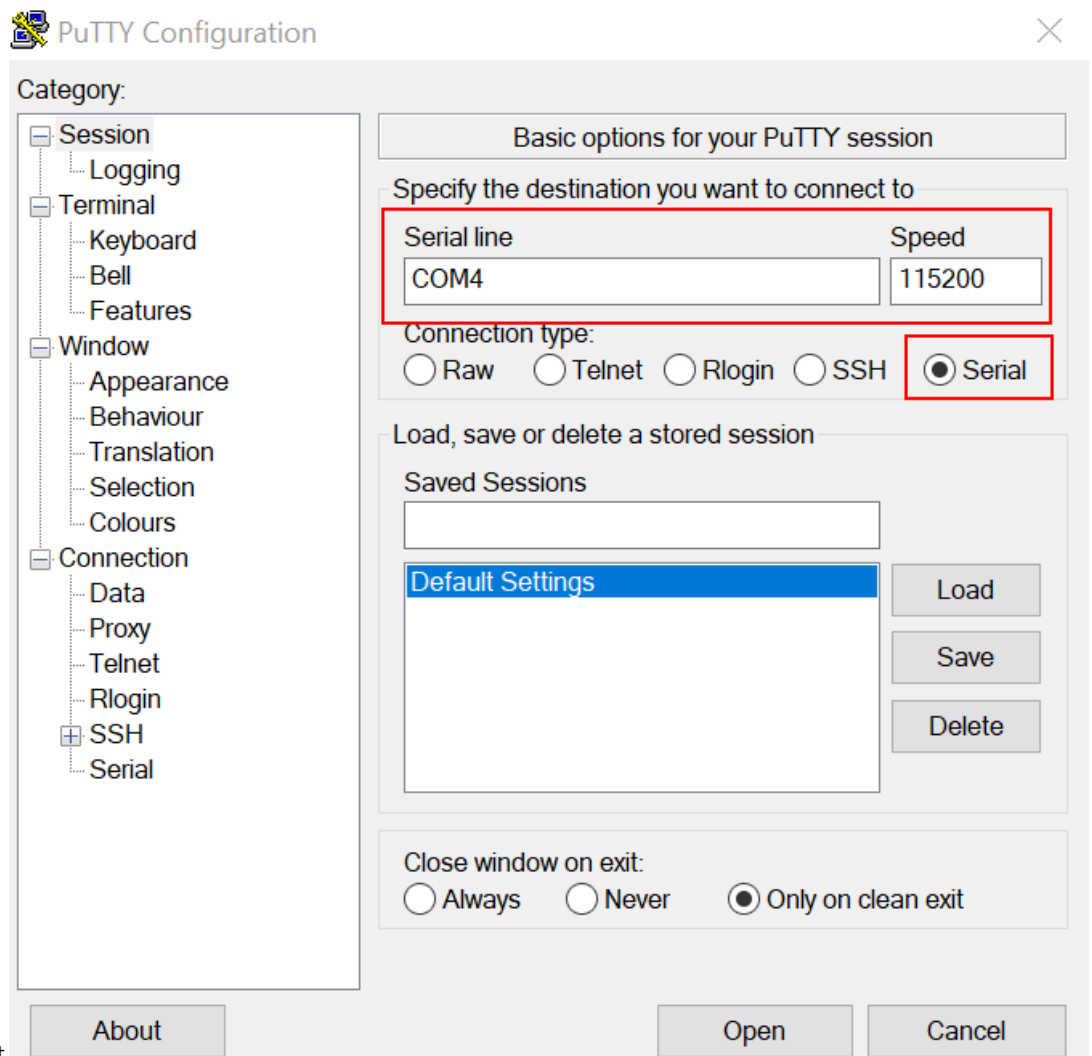


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the `main()` function.

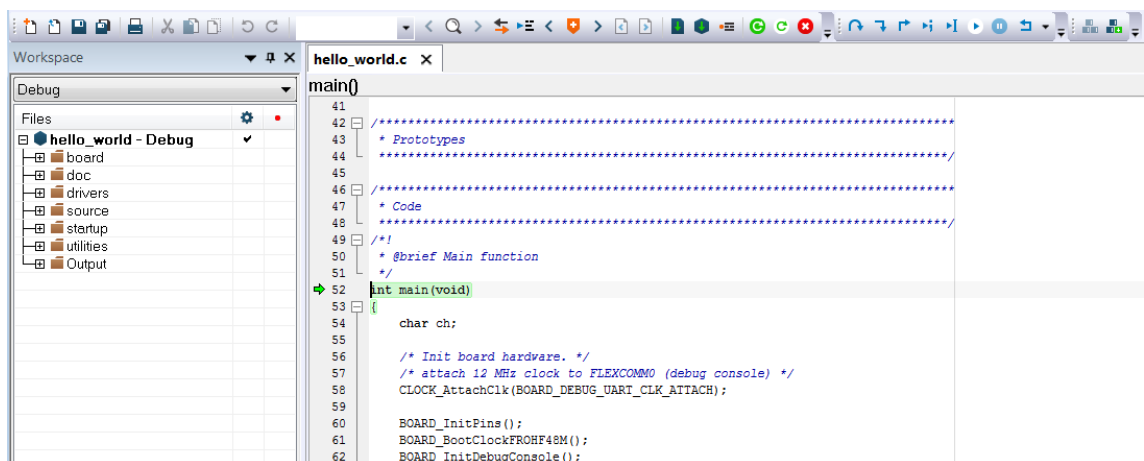

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
→ eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*function`.


Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

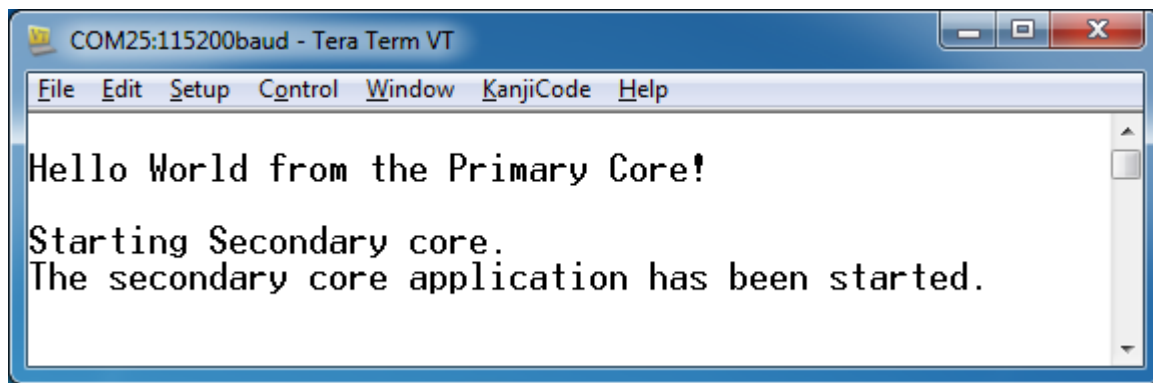

 An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.



Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_  
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.  
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

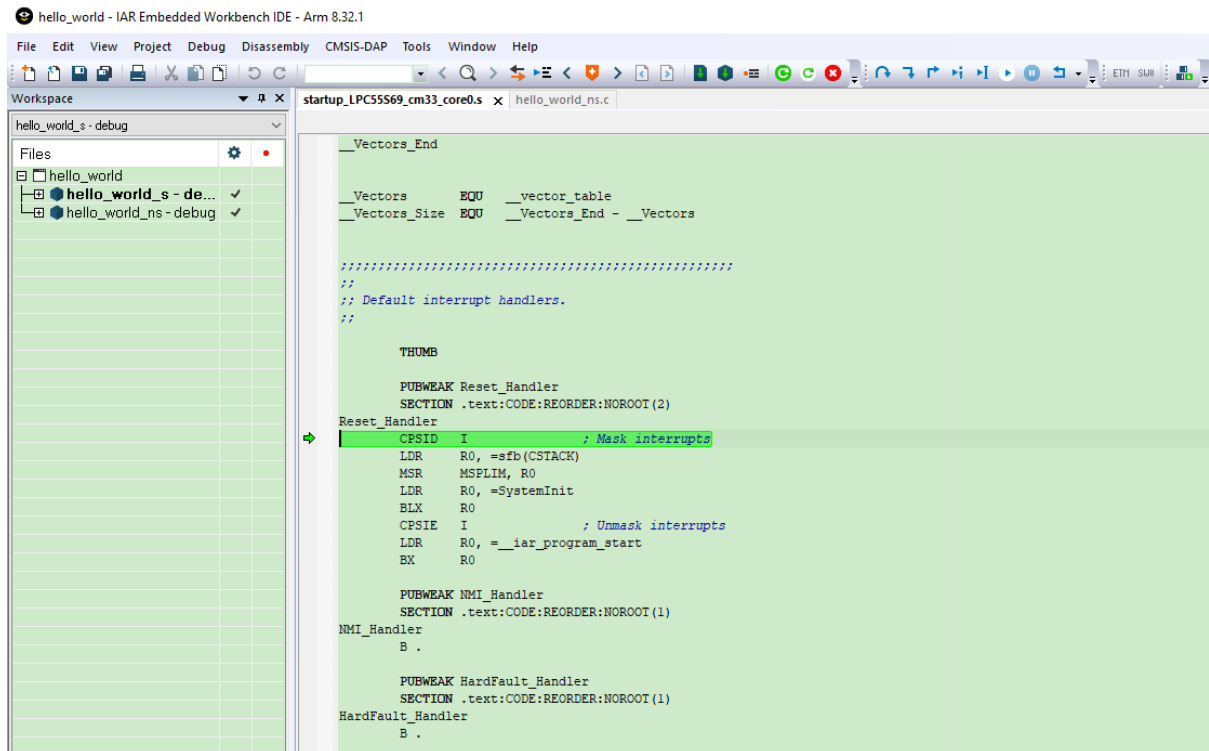


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

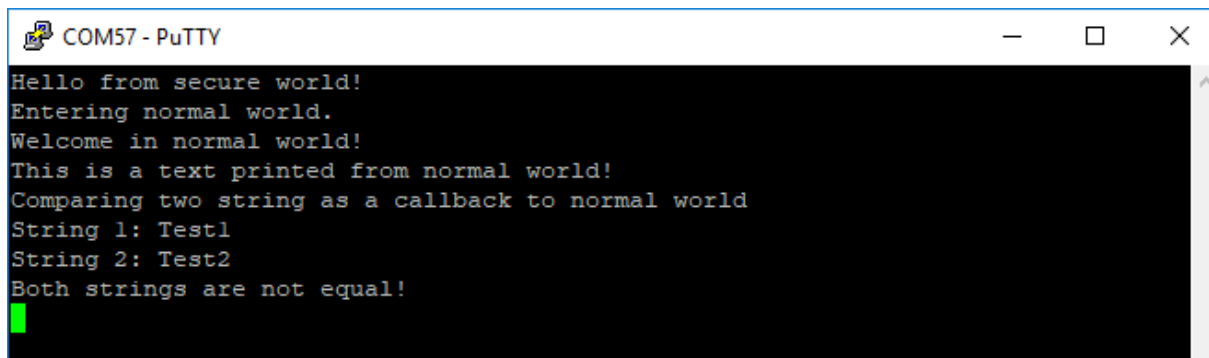

Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the __ns download issue on i.MXRT500.

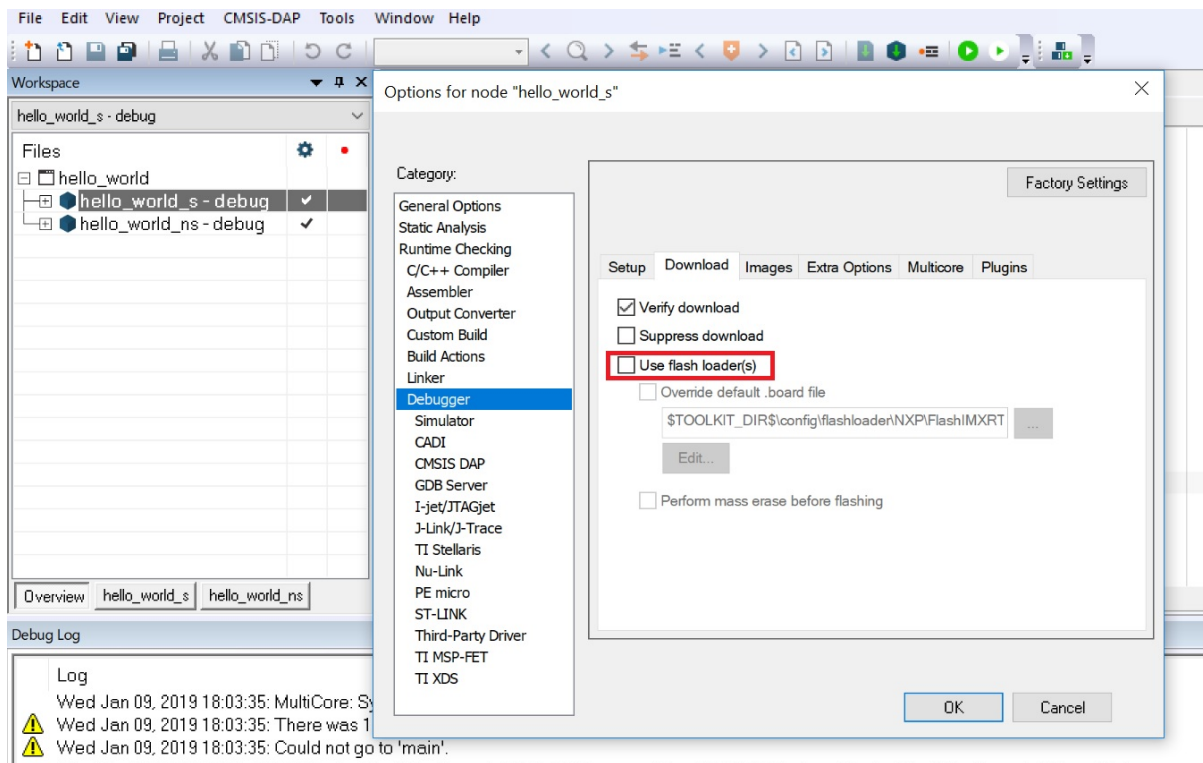


Run a demo using Keil MDK/μVision

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called μVision. In the IDE, select the **Pack Installer** icon.

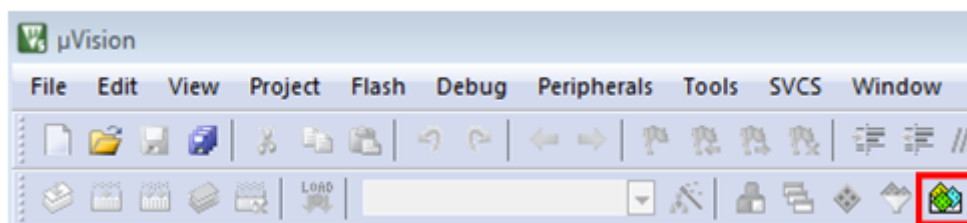

2. After the installation finishes, close the Pack Installer window and return to the μVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

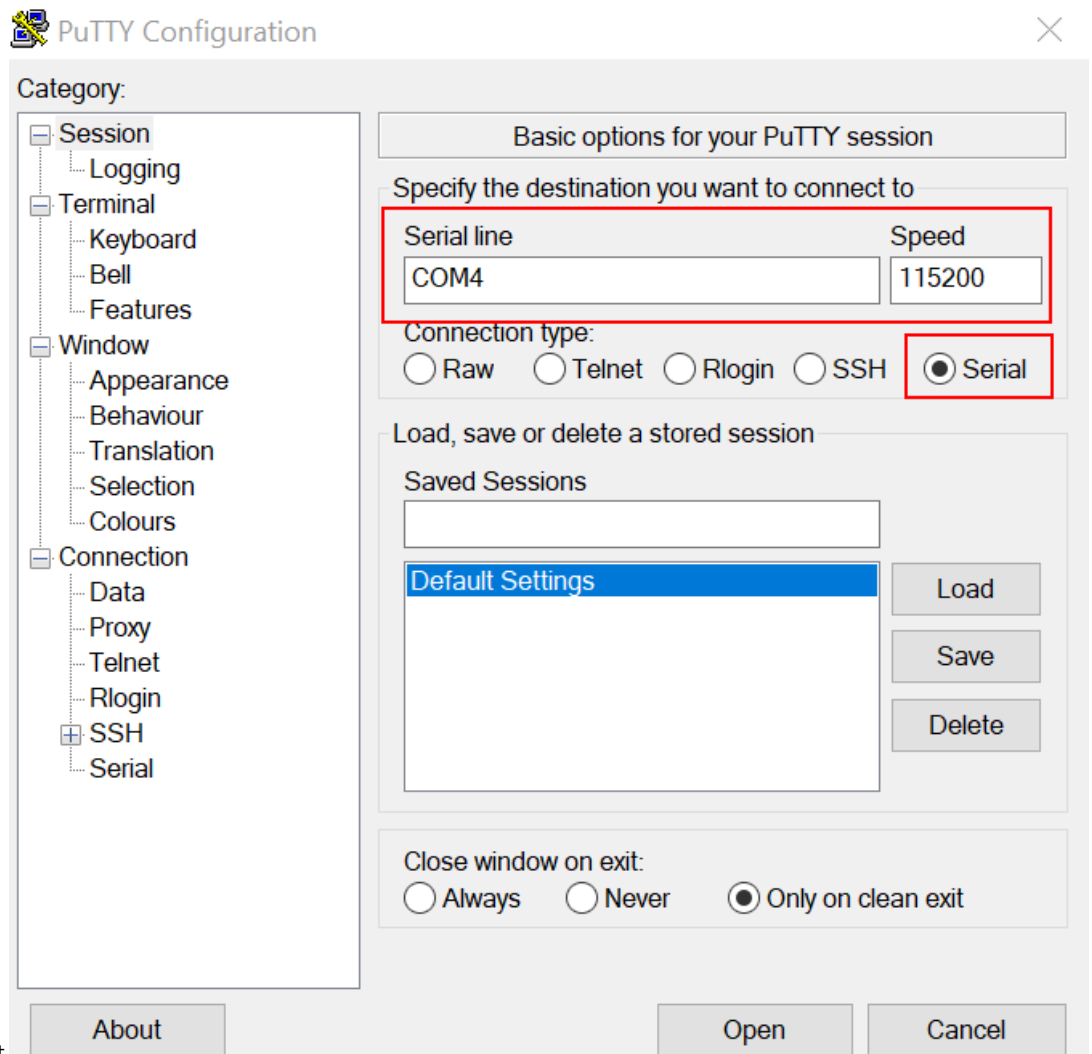


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

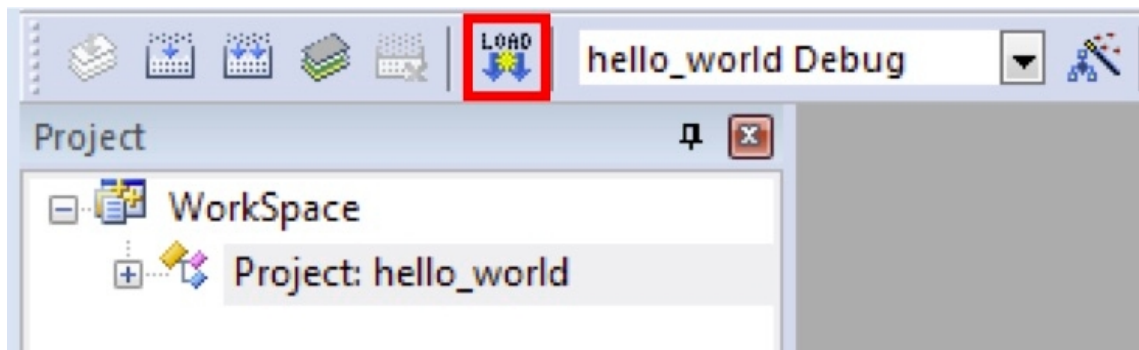

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

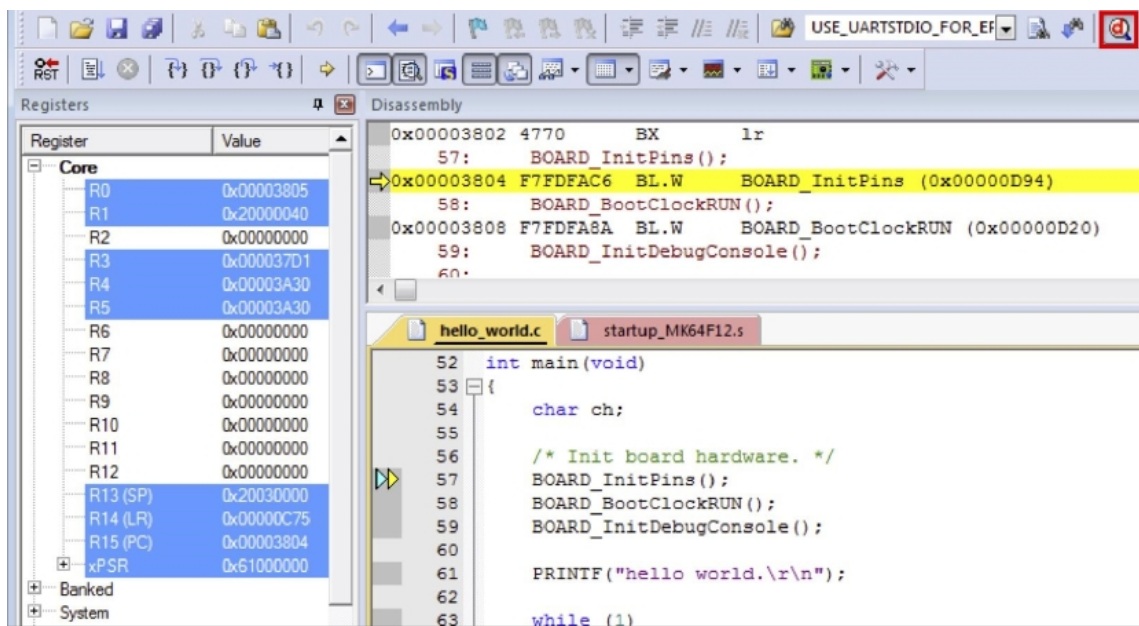

6. Run the code by clicking the **Run** button to start the application.

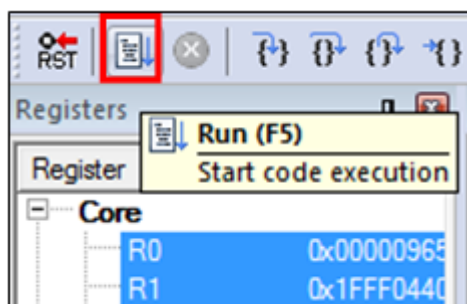

The hello_world application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/μVision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
→cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μVision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

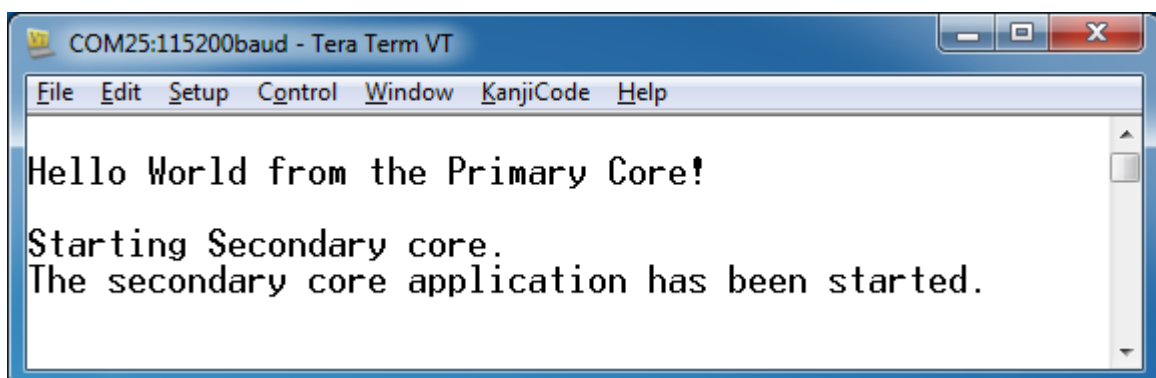

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

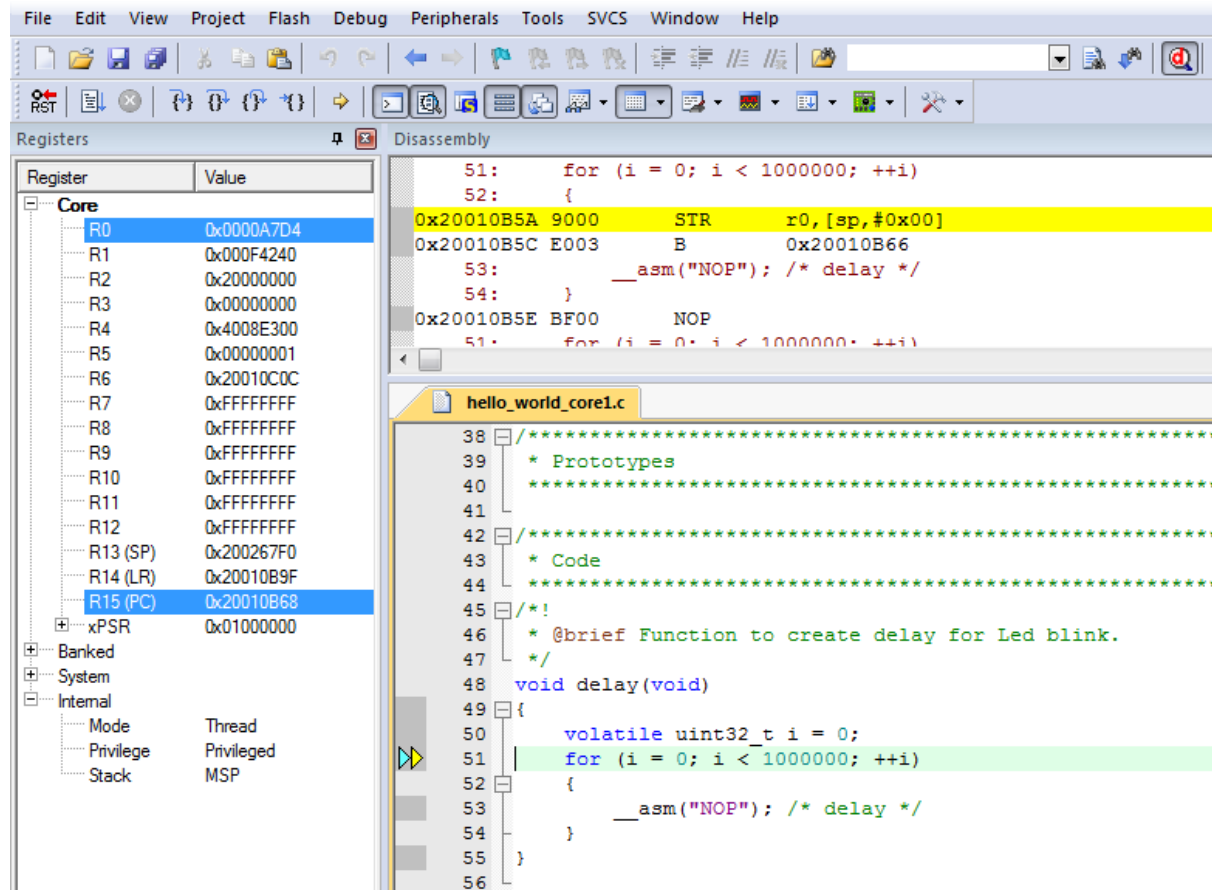

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪ mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪ mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪ uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
→ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

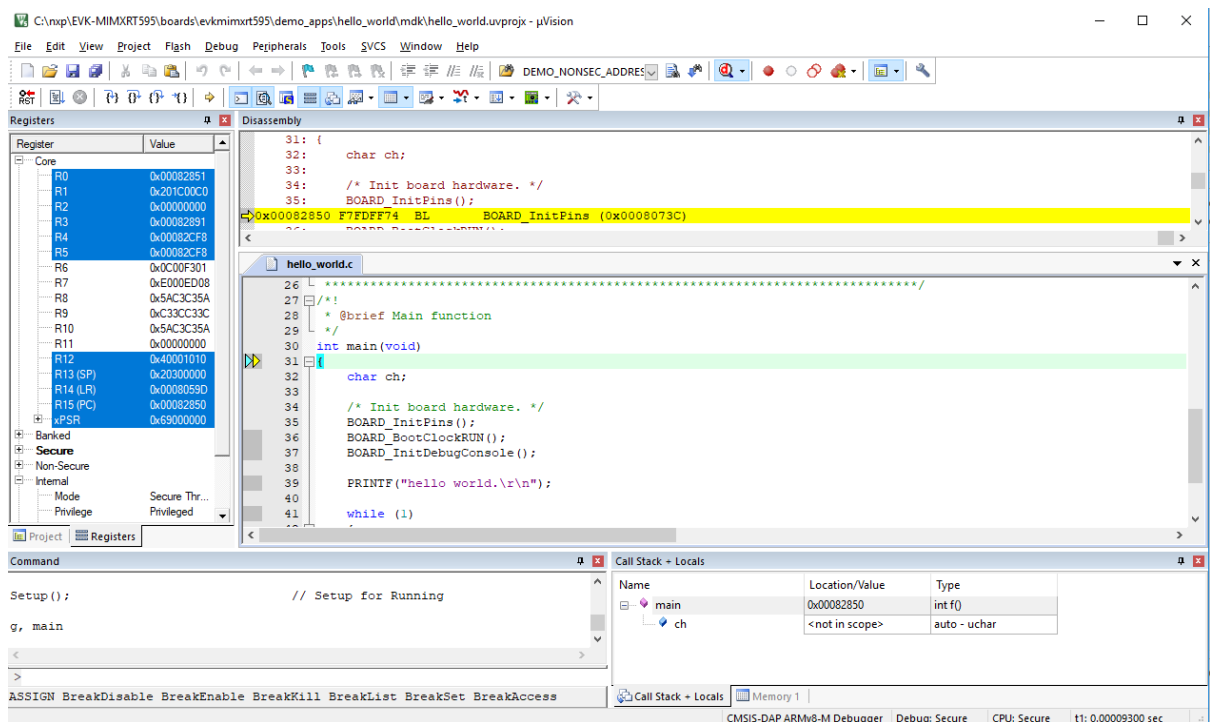

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

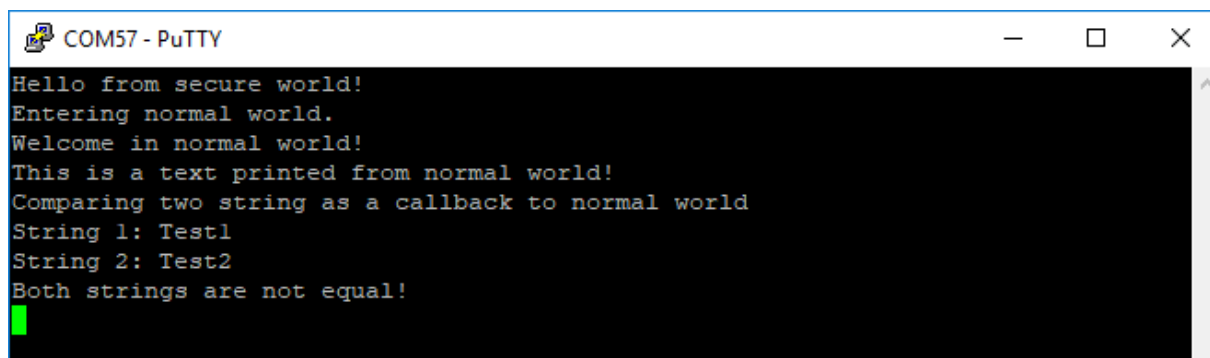

Run a demo using Arm GCC

This section describes the steps to configure the command-line Arm GCC tools to build, run, and debug demo applications and necessary driver libraries provided in the MCUXpresso SDK. The `hello_world` demo application is targeted which is used as an example.

Set up toolchain This section contains the steps to install the necessary components required to build and run an MCUXpresso SDK demo application with the Arm GCC toolchain, as supported by the MCUXpresso SDK. There are many ways to use Arm GCC tools, but this example focuses on a Windows operating system environment.


Install GCC Arm Embedded tool chain Download and run the installer from GNU Arm Embedded Toolchain. This is the actual toolset (in other words, compiler, linker, and so on). The GCC toolchain should correspond to the latest supported version, as described in **MCUXpresso SDK Release Notes**.

Install MinGW (only required on Windows OS) The Minimalist GNU for Windows (MinGW) development tools provide a set of tools that are not dependent on third-party C-Runtime DLLs (such as Cygwin). The build environment used by the MCUXpresso SDK does not use the MinGW build tools, but does leverage the base install of both MinGW and MSYS. MSYS provides a basic shell with a Unix-like interface and tools.


1. Download the latest MinGW mingw-get-setup installer from [MinGW](#).
2. Run the installer. The recommended installation path is `C:\MinGW`, however, you may install to any location.

Note: The installation path cannot contain any spaces.

3. Ensure that the **mingw32-base** and **msys-base** are selected under **Basic Setup**.

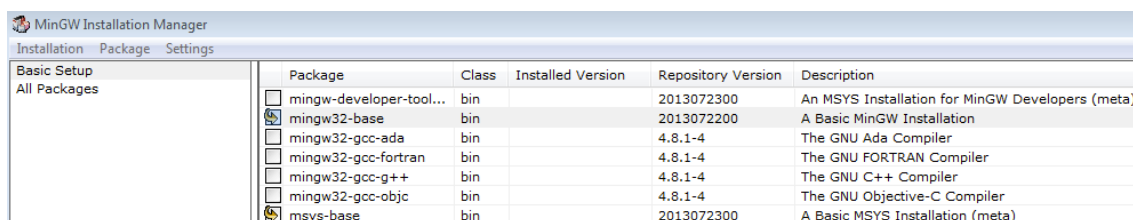

4. In the **Installation** menu, click **Apply Changes** and follow the remaining instructions to complete the installation.

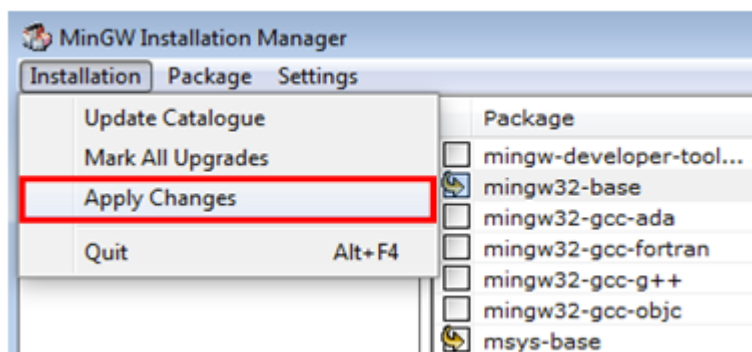


5. Add the appropriate item to the Windows operating system path environment variable. It can be found under **Control Panel->System and Security->System->Advanced System Settings** in the **Environment Variables...** section. The path is:


```
<mingw_install_dir>\bin
```

Assuming the default installation path, C:\MinGW, an example is shown below. If the path is not set correctly, the toolchain will not work.

Note: If you have C:\MinGW\msys\x.x\bin in your PATH variable (as required by Kinetis SDK 1.0.0), remove it to ensure that the new GCC build system works correctly.

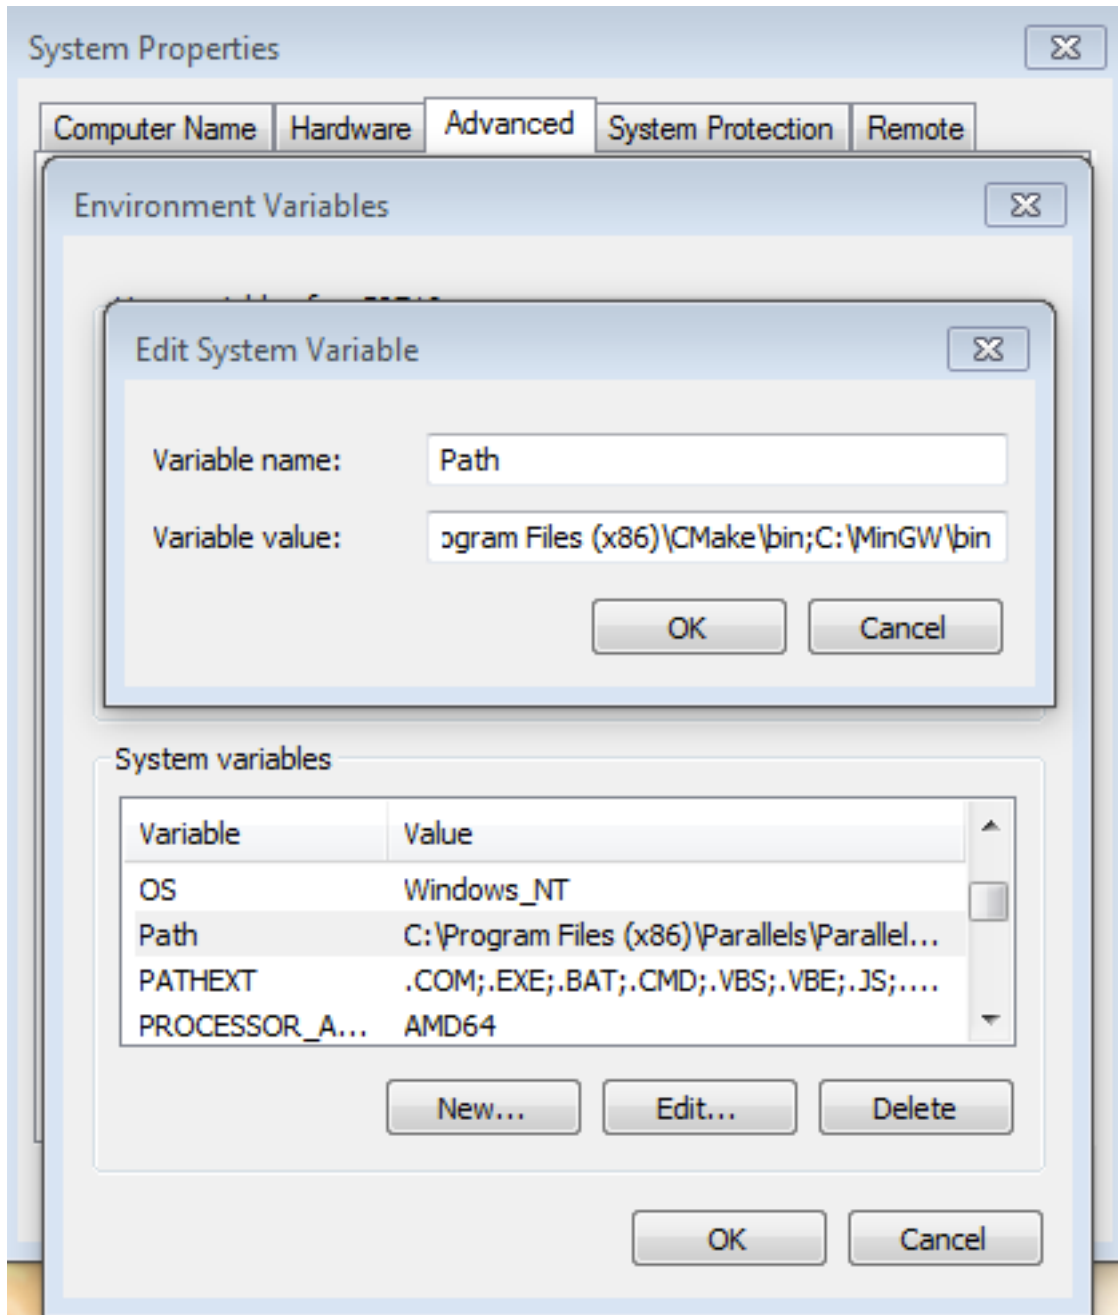


Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it as ARMGCC_DIR. The value of this variable should point to the Arm GCC Embedded tool chain installation path. For this example, the path is:

```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major
```

See the installation folder of the GNU Arm GCC Embedded tools for the exact pathname of your installation.

Short path should be used for path setting, you could convert the path to short path by running command for %I in (.) do echo %~sI


```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>for %I in (.) do echo %~sI
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>echo C:\PROGRA~2\GNUTOO~1\82018~1
C:\PROGRA~2\GNUTOO~1\82018~1
```

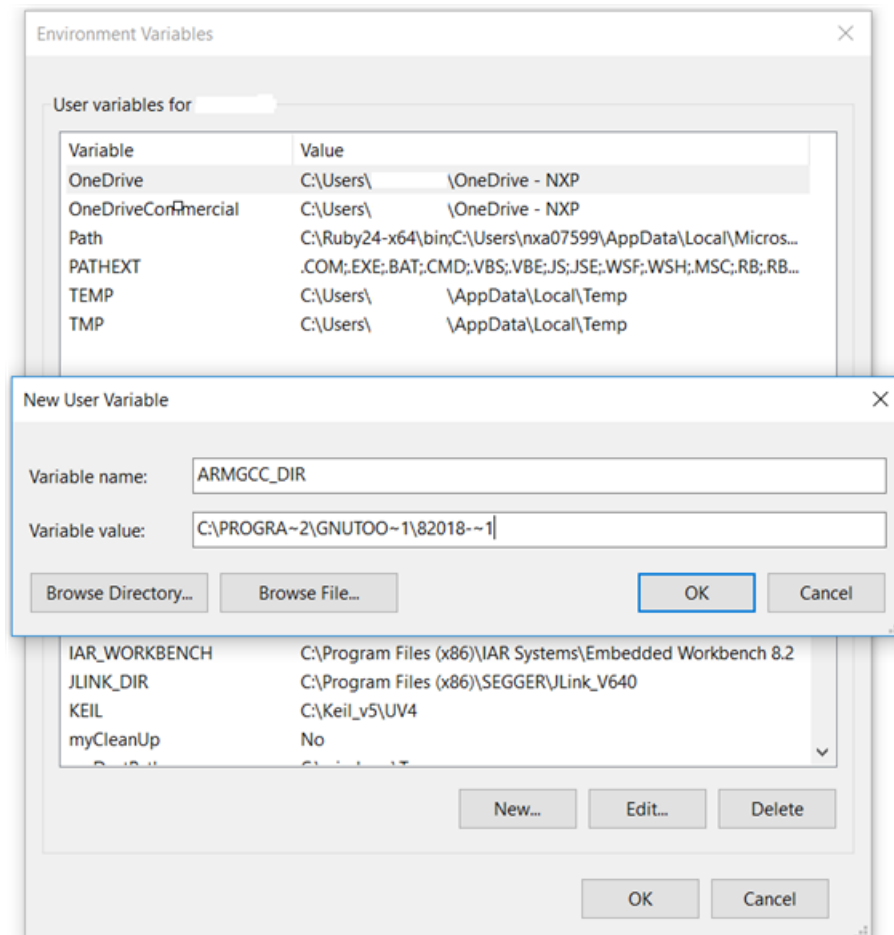

Install CMake

Windows OS

1. Download CMake 3.0.x from www.cmake.org/cmake/resources/software.html.
2. Install CMake, ensuring that the option **Add CMake to system PATH** is selected when installing. The user chooses to select whether it is installed into the PATH for all users or just the current user. In this example, it is installed for all users.

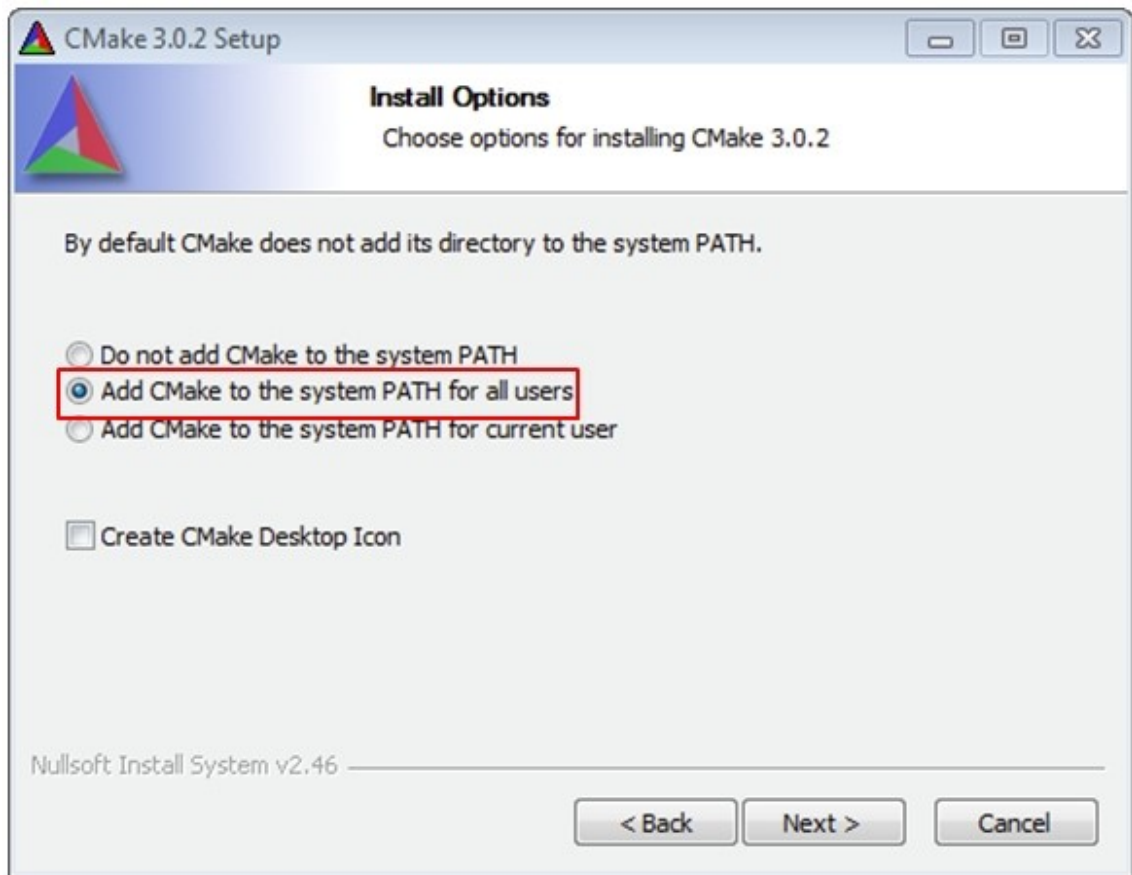

3. Follow the remaining instructions of the installer.
4. You may need to reboot your system for the PATH changes to take effect.
5. Make sure `sh.exe` is not in the Environment Variable PATH. This is a limitation of `mingw32-make`.


Linux OS It depends on the distributions of Linux Operation System. Here we use Ubuntu as an example.

Open shell and use following commands to install cmake and its version. Ensure the cmake version is above 3.0.x.

```
$ sudo apt-get install cmake
$ cmake --version
```

Build an example application To build an example application, follow these steps.

1. Open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system **Start** menu, go to **Programs > GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

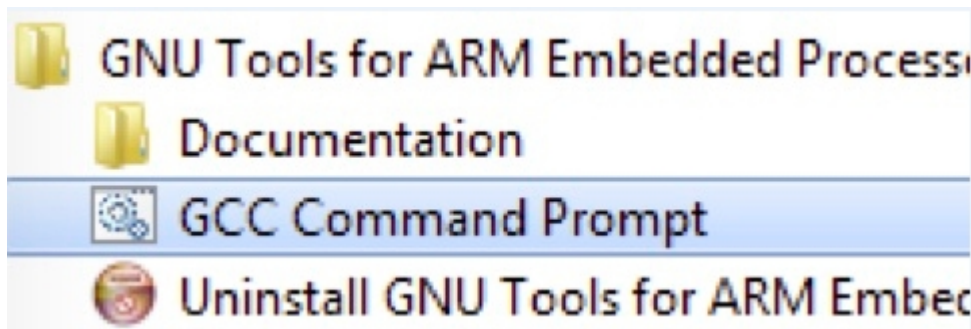

2. Change the directory to the example application project directory which has a path similar to the following:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc
```

For this example, the exact path is:

Note: To change directories, use the `cd` command.

3. Type **build_debug.bat** on the command line or double click on **build_debug.bat** file in Windows Explorer to build it. The output is as shown in following figure.


```
[ 84%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_smc.c.obj
[ 92%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_clock.c.obj
[100%] Linking C executable debug\hello_world.elf
[100%] Built target hello_world.elf

C:\nxp\SDK_2.0_FRDM-K64F\boards\frdmk64f\demo_apps\hello_world\armgcc>IF "" == "
" <pause >
Press any key to continue . . .
```

Run an example application This section describes steps to run a demo application using J-Link GDB Server application. To install J-Link host driver and update the on-board debugger firmware to Jlink firmware, see [On-board debugger](#).

After the J-Link interface is configured and connected, follow these steps to download and run the demo applications:

1. Connect the development platform to your PC via USB cable between the on-board debugger USB connector and the PC USB connector. If using a standalone J-Link debug pod, connect it to the SWD/JTAG connector of the board.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
 2. No parity
 3. 8 data bits
 4. 1 stop bit

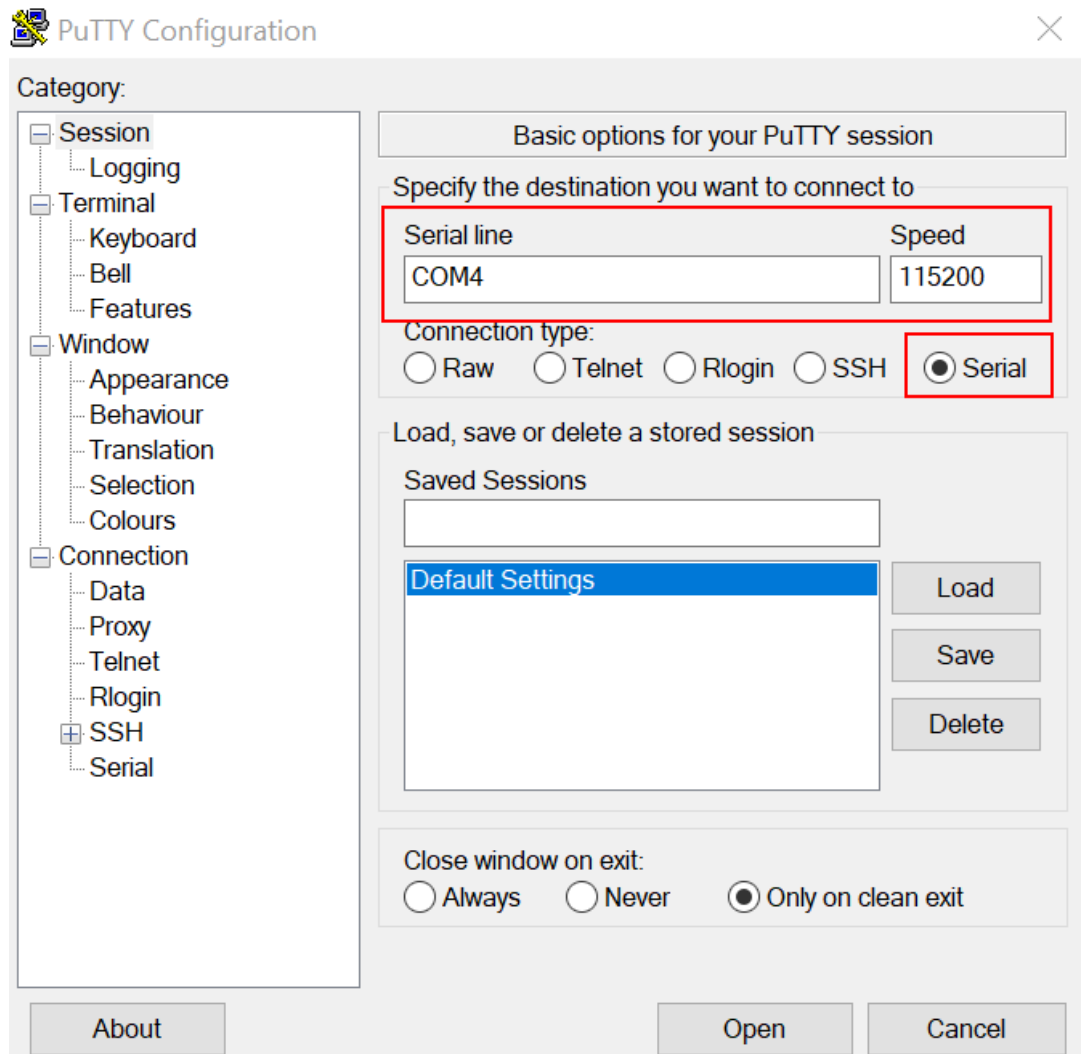


3. To launch the application, open the Windows **Start** menu and select **Programs > SEGGER > J-Link <version> J-Link GDB Server**.


Note: It is assumed that the J-Link software is already installed.

The **SEGGER J-Link GDB Server Config** settings dialog appears.


4. Make sure to check the following options.
 1. **Target interface:** The debug connection on board uses internal SWD signaling. In case of a wrong setting J-Link is unable to communicate with device under test.
 2. **Script file:** If required, a J-Link init script file can be used for board initialization. The file with the ".jlinkscript" file extension is located in the <install_dir>/boards/<board_name>/ directory.
 3. Under the **Server settings**, check the GDB port for connection with the gdb target remote command. For more information, see step 9.
 4. There is a command line version of J-Link GDB server "JLinkGDBServerCL.exe". Typical path is C:\Program Files\SEGGER\JLink\. To start the J-Link GDB server with the same settings as are selected in the UI, you can use these command line options.

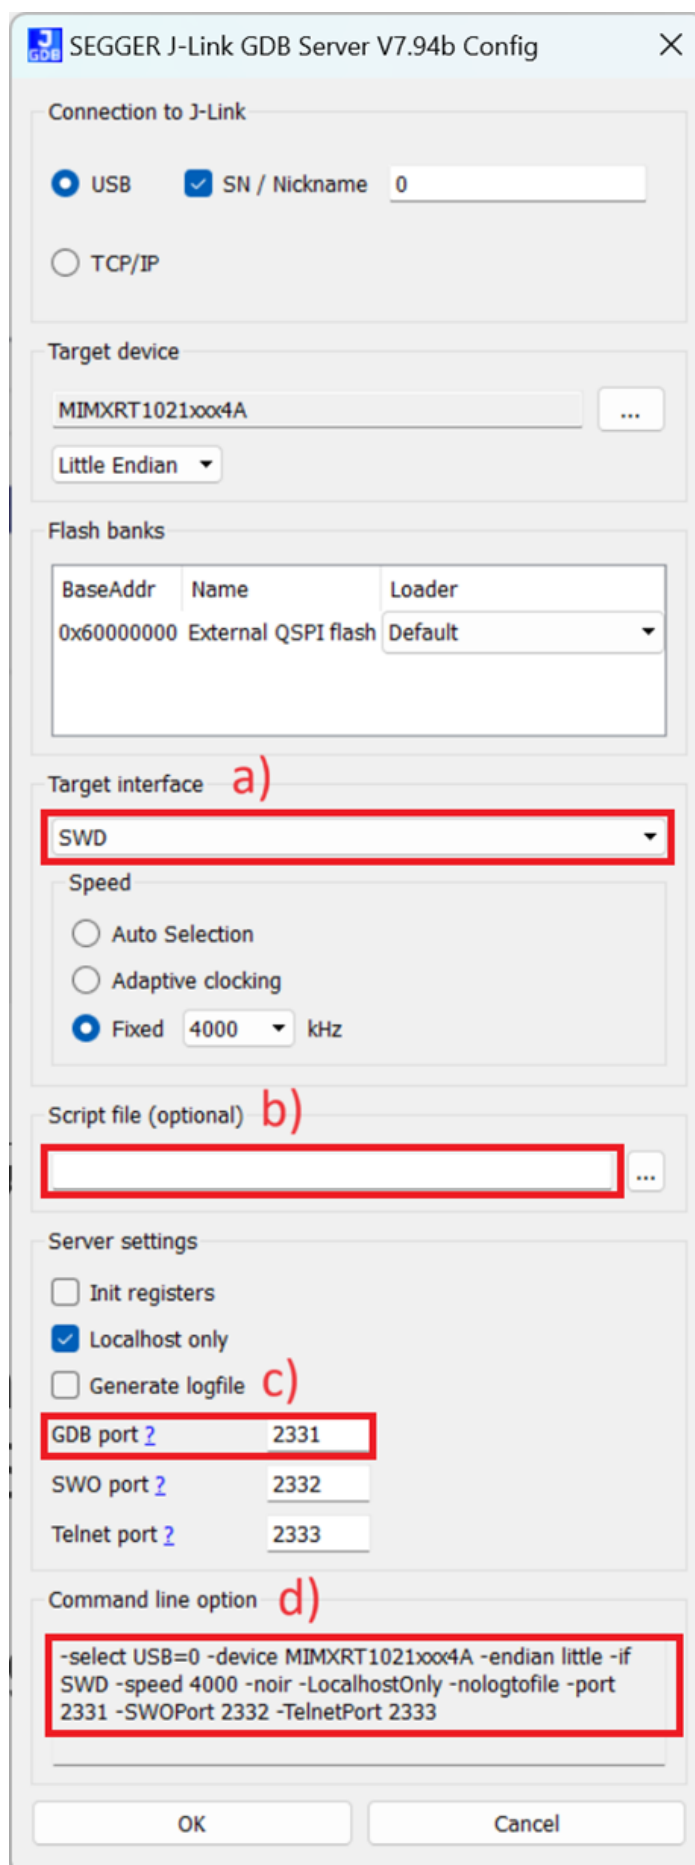

5. After it is connected, the screen should look like this figure:

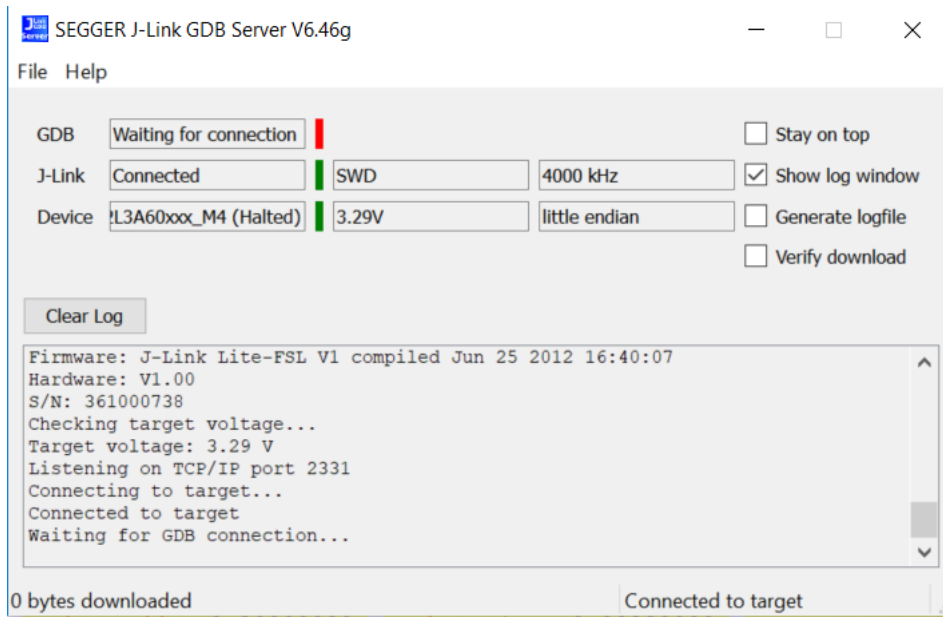

6. If not already running, open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system Start menu, go to **Programs - GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

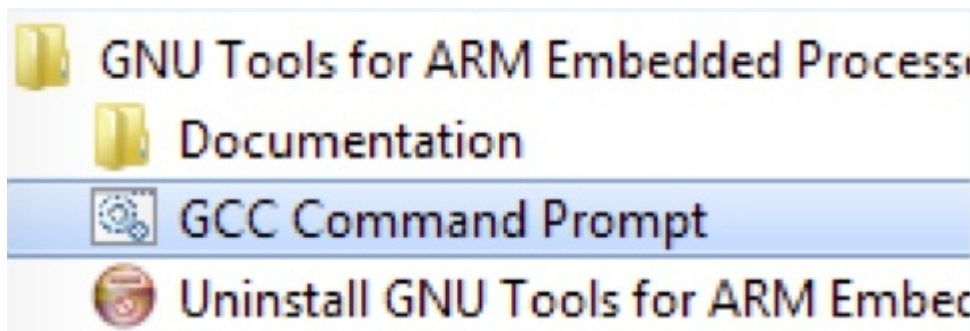

7. Change to the directory that contains the example application output. The output can be found in using one of these paths, depending on the build target selected:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/debug
```

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/release
```

8. Run the `arm-none-eabi-gdb.exe <application_name>.elf` command. For this example, it is `arm-none-eabi-gdb.exe hello_world.elf`.

```

C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major>arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major\bin>arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
  <http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf...
(gdb)

```

9. Run these commands:

1. target remote localhost:2331
2. monitor reset
3. monitor halt
4. load
5. monitor reset

10. The application is now downloaded and halted. Execute the `monitor go` command to start the demo application.

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

```

COM4 - PuTTY
hello world.

```

Build a multicore example application This section describes the steps to build and run a dual-core application. The demo application build scripts are located in this folder:


```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/armgcc
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/armgcc/build_debug.bat
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/armgcc/build_debug.bat
```

Build both applications separately following steps for single core examples as described in **Build an example application**.

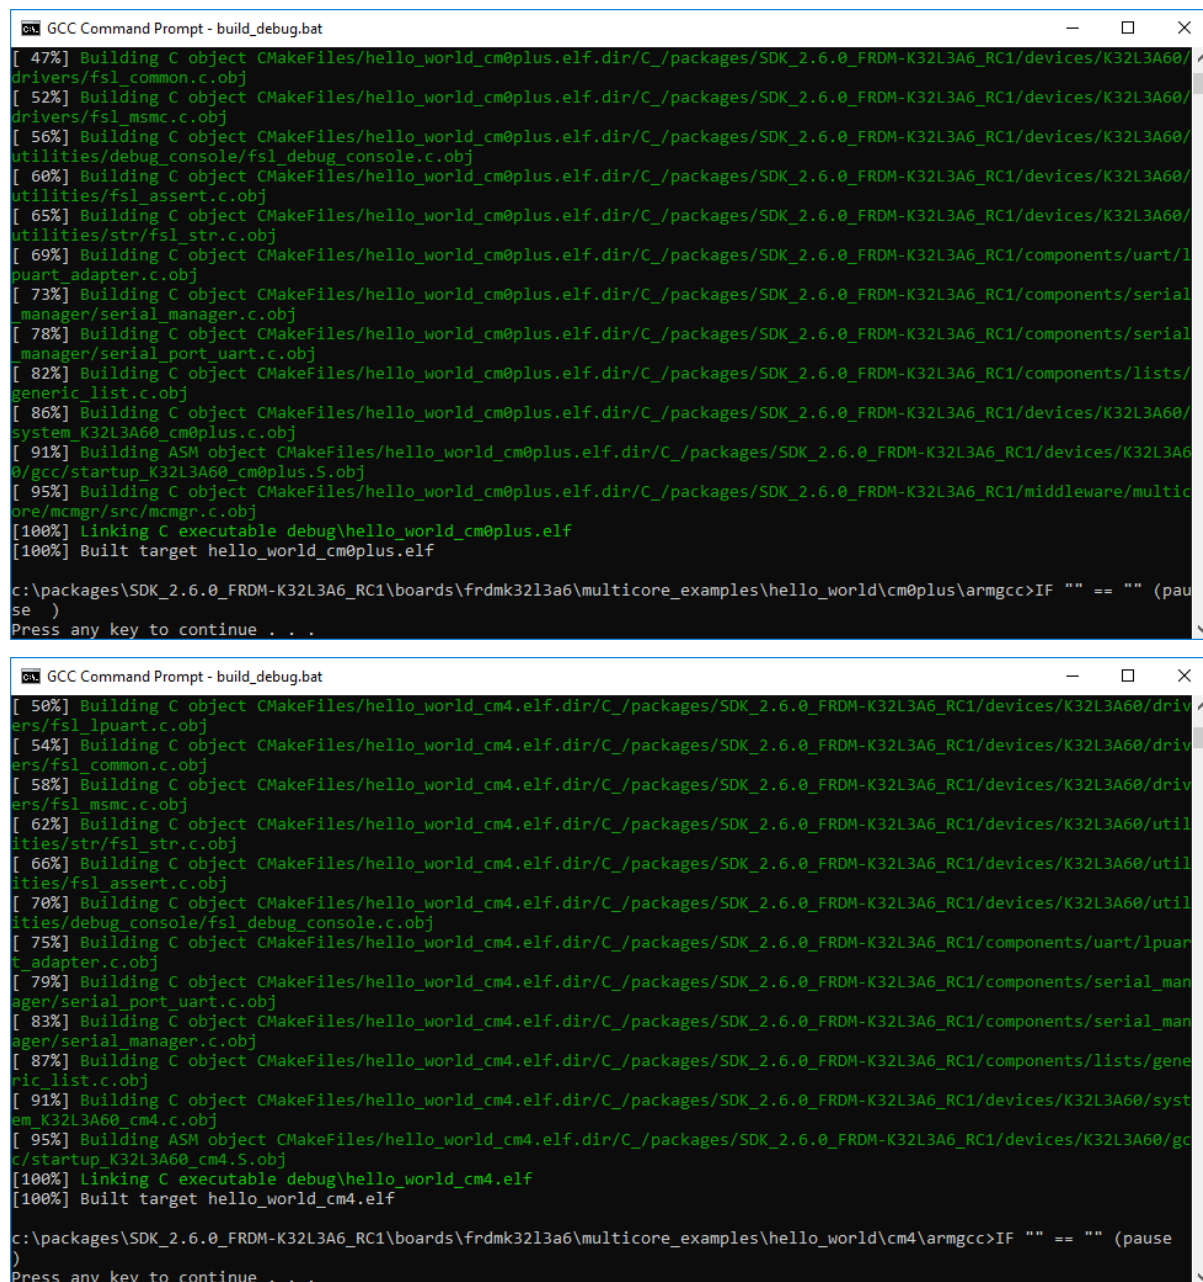

```

GCC Command Prompt - build_debug.bat

[ 47%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 52%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 56%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 60%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 65%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 69%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 73%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 78%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 82%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 86%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm0plus.c.obj
[ 91%] Building ASM object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm0plus.S.obj
[ 95%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/middleware/multicore/mcmgr/src/mcmgr.c.obj
[100%] Linking C executable debug\hello_world_cm0plus.elf
[100%] Built target hello_world_cm0plus.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm0plus\armgcc>IF "" == "" (pause)
Press any key to continue . . .

GCC Command Prompt - build_debug.bat

[ 50%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_lpuart.c.obj
[ 54%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 58%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 62%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 66%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 70%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 75%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 79%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 83%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 87%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 91%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm4.c.obj
[ 95%] Building ASM object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm4.S.obj
[100%] Linking C executable debug\hello_world_cm4.elf
[100%] Built target hello_world_cm4.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm4\armgcc>IF "" == "" (pause)
Press any key to continue . . .


```

Run a multicore example application When running a multicore application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single-core application, applies, as described in **Run an example application**.

The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single-core and dual-core applications in Arm GCC.

Both the primary and the auxiliary image is loaded into the SPI flash memory. After execution of the monitor go command, the primary core application is executed. During the primary core code execution, the auxiliary core code is reallocated from the flash memory to the RAM, and the auxiliary core is released from the reset. The hello_world multicore application is now running

and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

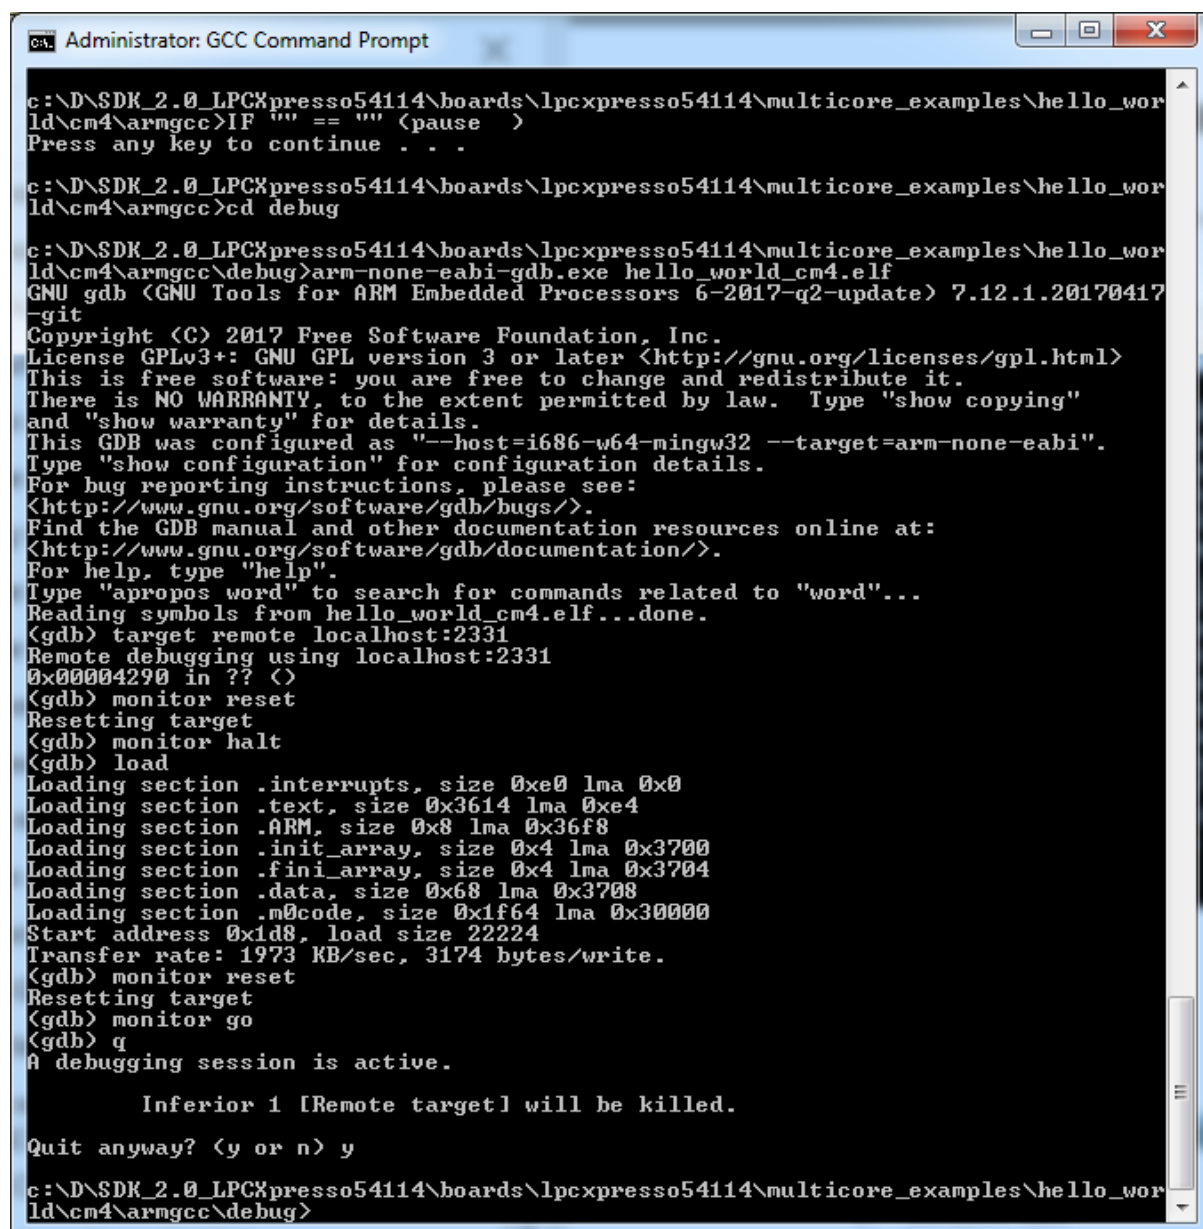

```

Administrator: GCC Command Prompt

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc>IF "" == "" <pause >
Press any key to continue . . .

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc>cd debug


c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc\debug>arm-none-eabi-gdb.exe hello_world_cm4.elf
GNU gdb (GNU Tools for ARM Embedded Processors 6-2017-q2-update) 7.12.1.20170417-git
Copyright (C) 2017 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.
For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from hello_world_cm4.elf...done.
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
0x00004290 in ?? ()
(gdb) monitor reset
Resetting target
(gdb) monitor halt
(gdb) load
Loading section .interrupts, size 0xe0 lma 0x0
Loading section .text, size 0x3614 lma 0xe4
Loading section .ARM, size 0x8 lma 0x36f8
Loading section .init_array, size 0x4 lma 0x3700
Loading section .fini_array, size 0x4 lma 0x3704
Loading section .data, size 0x68 lma 0x3708
Loading section .m0code, size 0x1f64 lma 0x30000
Start address 0x1d8, load size 22224
Transfer rate: 1973 KB/sec, 3174 bytes/write.
(gdb) monitor reset
Resetting target
(gdb) monitor go
(gdb) q
A debugging session is active.

    Inferior 1 [Remote target] will be killed.

Quit anyway? (y or n) y

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc\debug>

```

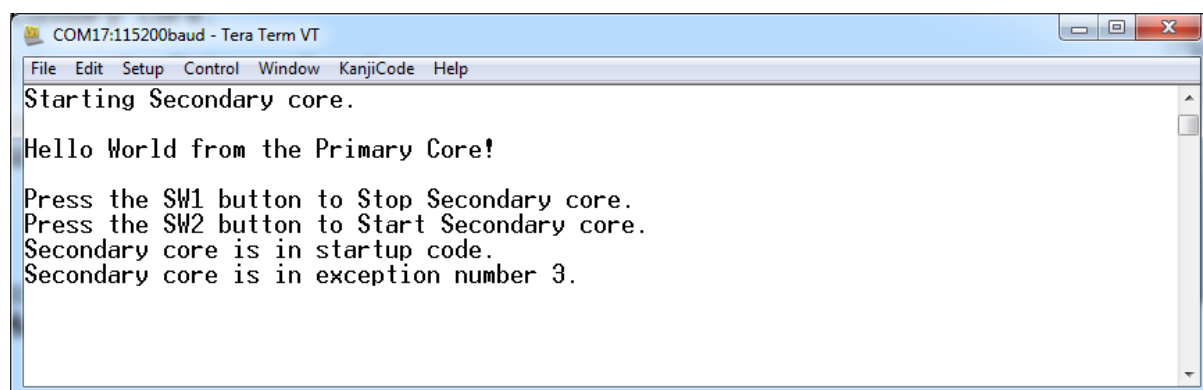

```

COM17:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help
Starting Secondary core.

Hello World from the Primary Core!

Press the SW1 button to Stop Secondary core.
Press the SW2 button to Start Secondary core.
Secondary core is in startup code.
Secondary core is in exception number 3.

```

Build a TrustZone example application This section describes the steps to build and run a TrustZone application. The demo application build scripts are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_ns/armgcc
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/  
↪<application_name>_s/armgcc
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/armgcc/build_  
↪debug.bat
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/armgcc/build_  
↪debug.bat
```

Build both applications separately, following steps for single core examples as described in **Build an example application**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because the CMSE library is not ready.

```
C:\WINDOWS\system32\cmd.exe
[ 55%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_
assert.c.obj
[ 59%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c
.obj
[ 62%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexspi.c.obj
[ 66%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
cache.c.obj
[ 70%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_manager.c.obj
[ 74%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/seria
l_port_uart.c.obj
[ 77%] Building ASM object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startu
p_MIMXRT595S_cm33.S.obj
[ 81%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c
.obj
[ 85%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
uart.c.obj
[ 88%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
pio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_
iap.c.obj
[100%] Linking C executable debug\hello_world_s.elf
[100%] Built target hello_world_s.elf
C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_s\armgcc>IF "" == "" (paus
e)
Press any key to continue . . .
```

```

C:\WINDOWS\system32\cmd.exe
[ 52%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c.obj
[ 56%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/flexspi_assert.c.obj
[ 60%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexspi/flexspi.c.obj
[ 64%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexspi/cache.c.obj
[ 68%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_manager.c.obj
[ 72%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_port_uart.c.obj
[ 76%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexspi/usart.c.obj
[ 80%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c.obj
[ 84%] Building ASM object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startup_MIMXRT595S_cm33.S.obj
[ 88%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexcomm/flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexcomm/gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/flexcomm/iap.c.obj
[100%] Linking C executable debug\hello_world_ns.elf
[100%] Built target hello_world_ns.elf

C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_ns\armgcc>IF "" == "" (pause)
Press any key to continue . . .

```


Run a TrustZone example application When running a TrustZone application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single core application, apply, as described in **Run an example application**.

To download and run the TrustZone application, perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single core and TrustZone applications in Arm GCC.

Then, run these commands:

1. arm-none-eabi-gdb.exe
2. target remote localhost:2331
3. monitor reset
4. monitor halt
5. monitor exec SetFlashDLNoRMWThreshold = 0x20000
6. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_ns/armgcc/debug/hello_world_ns.elf
7. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_s/armgcc/debug/hello_world_s.elf
8. monitor reset

The application is now downloaded and halted. Execute the `c` command to start the demo application.

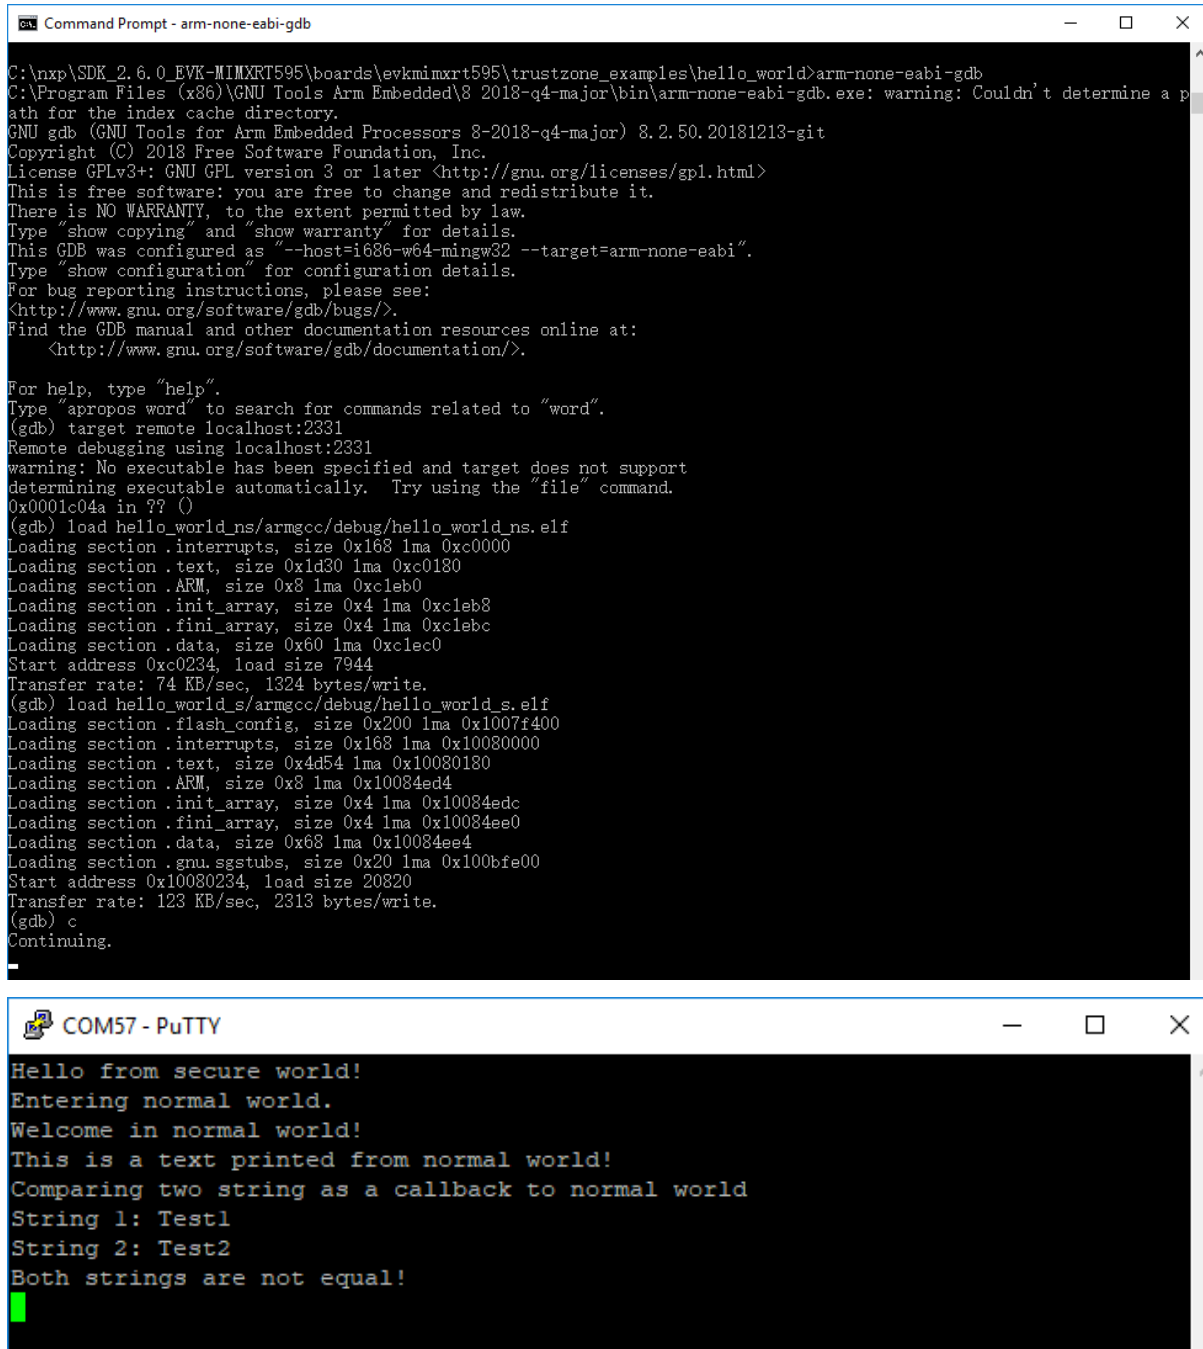

The first screenshot shows a Windows Command Prompt window titled "Command Prompt - arm-none-eabi-gdb". The user has navigated to the directory `C:\nxp\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world` and executed `arm-none-eabi-gdb`. The GDB interface displays its version (8.2.50.20181213-git), copyright information, and license details. The user enters `target remote localhost:2331`, which results in a warning that no executable has been specified. The user then enters `load hello_world_ns/armgcc/debug/hello_world_ns.elf`, which successfully loads the ELF file. The user enters `c` to continue execution.

The second screenshot shows a PuTTY window titled "COM57 - PuTTY". The output of the program is displayed as follows:

```

Hello from secure world!
Entering normal world.
Welcome in normal world!
This is a text printed from normal world!
Comparing two string as a callback to normal world
String 1: Test1
String 2: Test2
Both strings are not equal!

```

MCUXpresso Config Tools

MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK μ Vision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port

This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:

```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.

 
2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. P&E Micro:



 
3. J-Link:



 4. P&E Micro OSJTAG:



 5. MRB-KW01:



On-board Debugger

This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the

CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/MBED bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.


Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.

- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

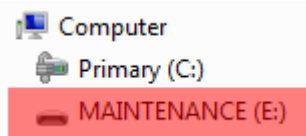

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER  
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces

The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA266	CMSIS-DAP	MCU-Link
FRDM-MCXA344	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXA366	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXE31B	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files

With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then `extern "C"` should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

1.3 Getting Started with MCUXpresso SDK GitHub


1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. [Verify the installation](#) after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from <https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation>. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

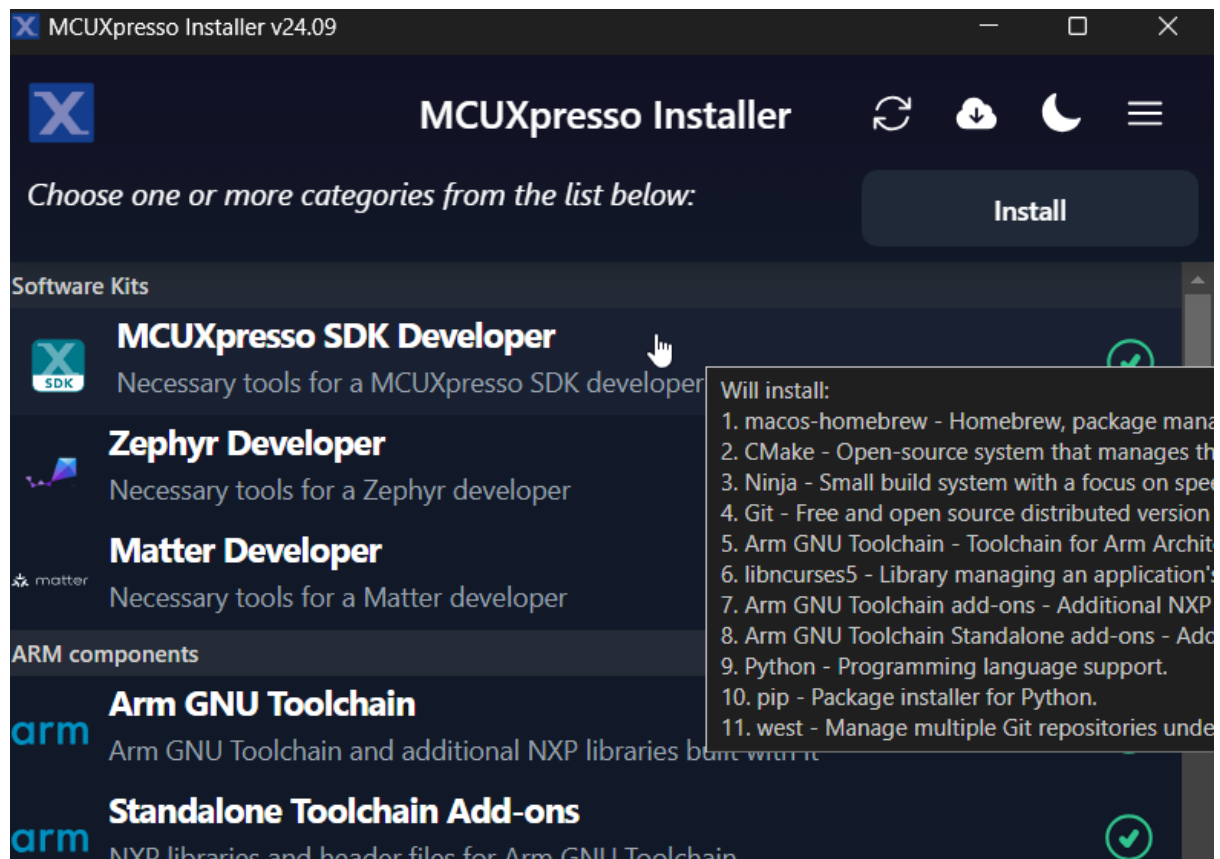

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the official [Git website](#). Download the appropriate version (you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the [Python Download](#) guide.

Use `python --version` to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different
↪source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from [the official CMake download page](#).

For Windows, you can directly use the .msi installer like [cmake-3.31.4-windows-x86_64.msi](#) to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from [the official CMake download page](#).

After installation, you can use `cmake --version` to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the [ninja binary](#) and register the ninja executor location path into your system path variable to work.

For Linux, you can use your [system package manager](#) or you can directly download the [ninja binary](#) to work.

After installation, you can use `ninja --version` to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under `mcuxsdk/scripts/kconfig` folder.

Please make sure [python](#) environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOB from build to debug. This feature is implemented with ruby. You can follow the guide ruby environment setup to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.


Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	AR-MGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	– toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	– toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	– toolchain mdk
Armclang	ARM-CLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	– toolchain mdk
Zephyr	ZEPHYR_SDK	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	– toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescalar\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	– toolchain code-warrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	– toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCV-LVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	– toolchain riscv-llvm

- The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

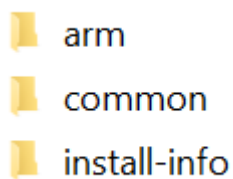

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here's an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: `for %i in (.) do echo %~fsi`

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be `C:\Users\xxx\AppData\Local\Programs\Git\cmd`. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
 1. Open the `$HOME/.bashrc` file using a text editor, such as `vim`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bashrc` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.
- macOS:
 1. Open the `$HOME/.bash_profile` file using a text editor, such as `nano`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bash_profile` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the `west` tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory `mcuxsdk`, follow these steps:

1. Navigate to the core directory:

```
cd mcuxsdk
```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use `venv` to avoid conflicts with other projects using python.**

```
python -m venv .venv

# For Linux/macOS
source .venv/bin/activate

# For Windows
.\.venv\Scripts\activate
# If you are using powershell and see the issue that the activate script cannot be run.
# You may fix the issue by opening the powershell as administrator and run below command:
powershell Set-ExecutionPolicy RemoteSigned
# then run above activate command again.
```

Once activated, your shell will be prefixed with `(.venv)`. The virtual environment can be deactivated at any time by running `deactivate` command.

Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like `zsh`, there are some powerful plugins to help you auto switch `venv` among workspaces. For example, `zsh-autoswitch-virtualenv`.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a
↪ different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↪ tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at [Getting Started Guide](#), have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the **Manifest repo** are checked out to the folder `mcuxsdk/`, the layout of `mcuxsdk` folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- `demo_apps`: Basic demo set to start using SDK, including `hello_world` and `led_blinky`.
- `driver_examples`: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of `_boards/<board_name>` which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code


This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the `hello_world` demo application as an example. However, these

steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in [Get MCUXpresso SDK Repo](#).


To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

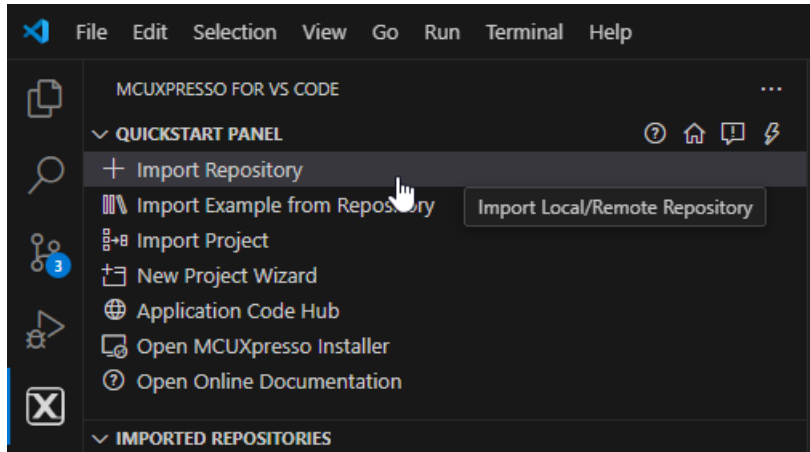


Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details.


Select **Local** if you've already obtained the SDK as seen in [Get MCUXpresso SDK Repo](#). Select your location and click **Import**.

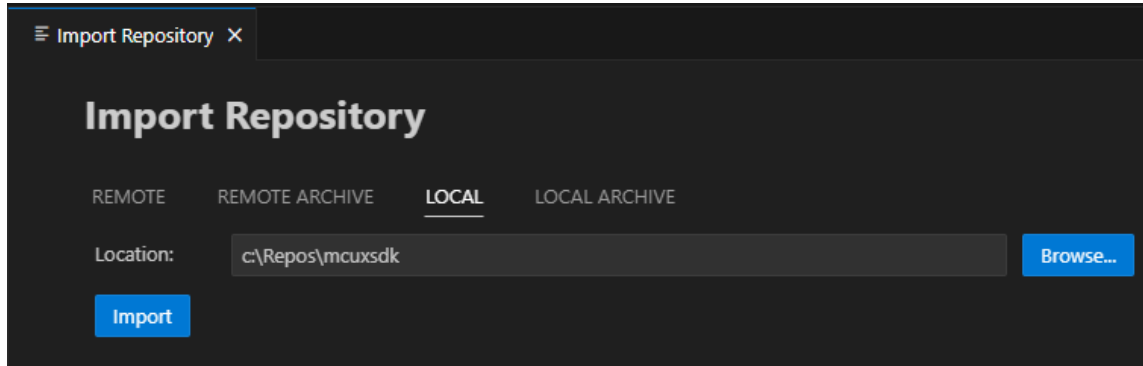

2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

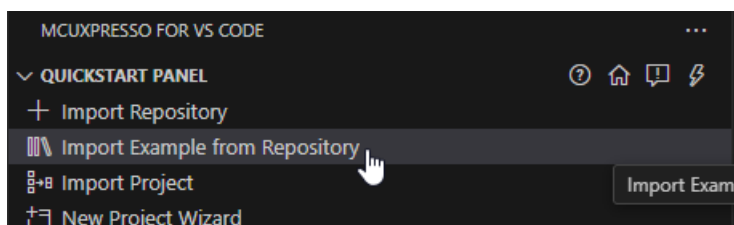

In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

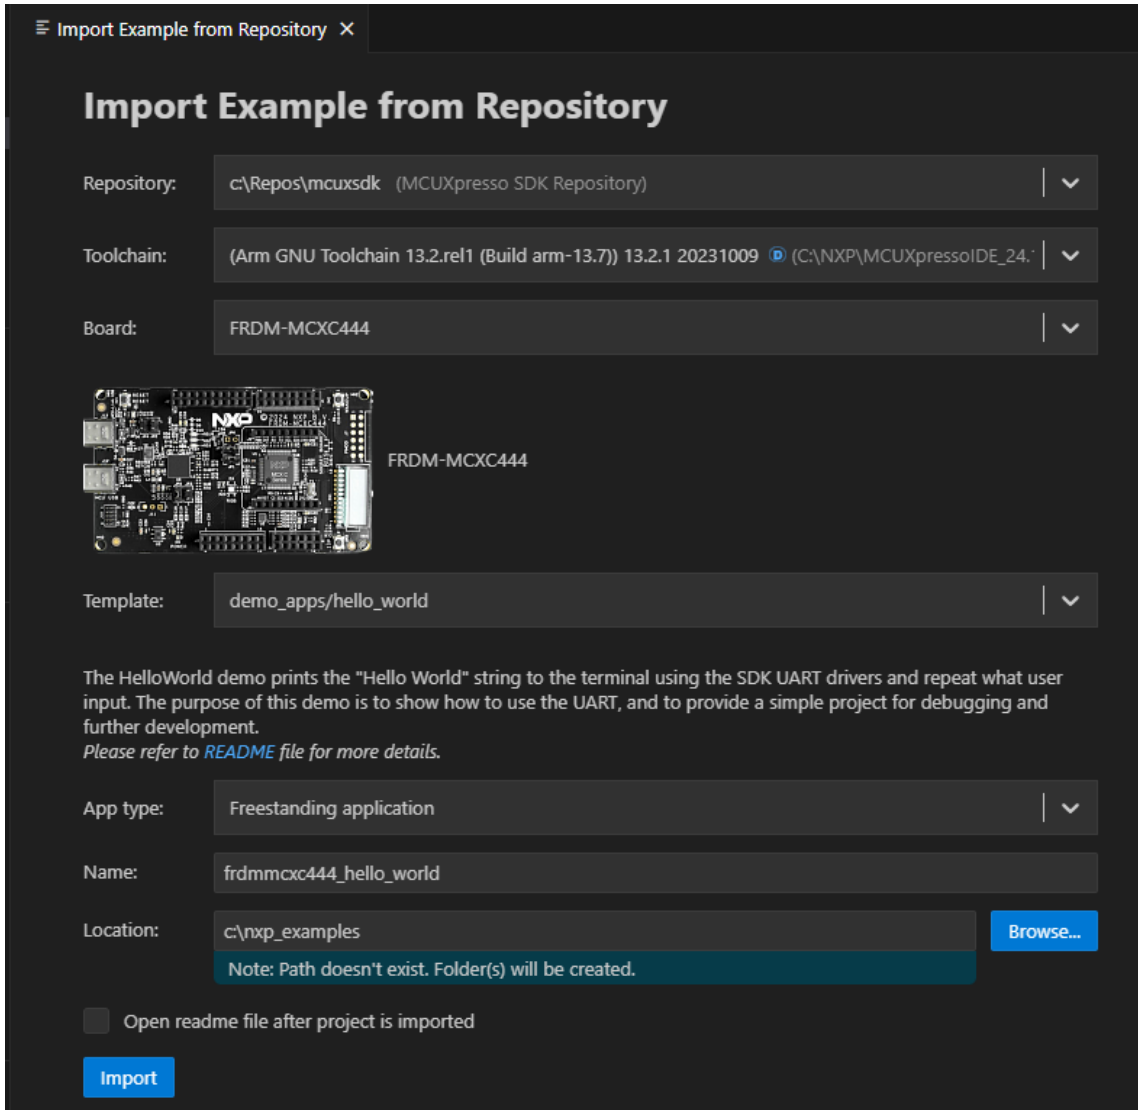

Import Example from Repository

Repository: c:\Repos\mcuxsdk (MCUXpresso SDK Repository) | v

Toolchain: (Arm GNU Toolchain 13.2.rel1 (Build arm-13.7)) 13.2.1 20231009 | v

Board: FRDM-MCXC444 | v

 FRDM-MCXC444

Template: demo_apps/hello_world | v

The HelloWorld demo prints the "Hello World" string to the terminal using the SDK UART drivers and repeat what user input. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.
Please refer to [README](#) file for more details.

App type: Freestanding application | v

Name: frdmmcxc444_hello_world

Location: c:\nxp_examples [Browse...](#)


Note: Path doesn't exist. Folder(s) will be created.

☐ Open readme file after project is imported

[Import](#)

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

- VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
- Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

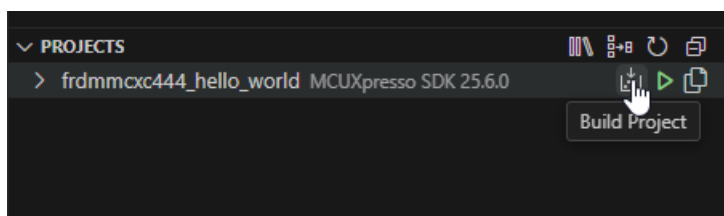

The integrated terminal will open at the bottom and will display the build output.


```

[17/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/components/debug_console_lite/fsl_debug_console.c.obj
[18/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/devices/MCX/MCX444/drivers/fsl_clock.c.obj
[19/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/lpuart/fsl_lpuart.c.obj
[20/21] Building C object CMakeFiles/hello_world.dir/C:/Repos/mcuxsdk/mcuxsdk/drivers/uart/fsl_uart.c.obj
[21/21] Linking C executable hello_world.elf
Memory region      Used Size  Region Size  %age Used
m_interrupts:      192 B      512 B      37.50%
m_flash_config:     16 B       16 B     100.00%
m_text:            7892 B    261104 B     3.02%
m_data:            2128 B     32 KB     6.49%
build finished successfully.
Terminal will be reused by tasks, press any key to close it.


```

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see [MCUXpresso for VS Code Wiki](#).


1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

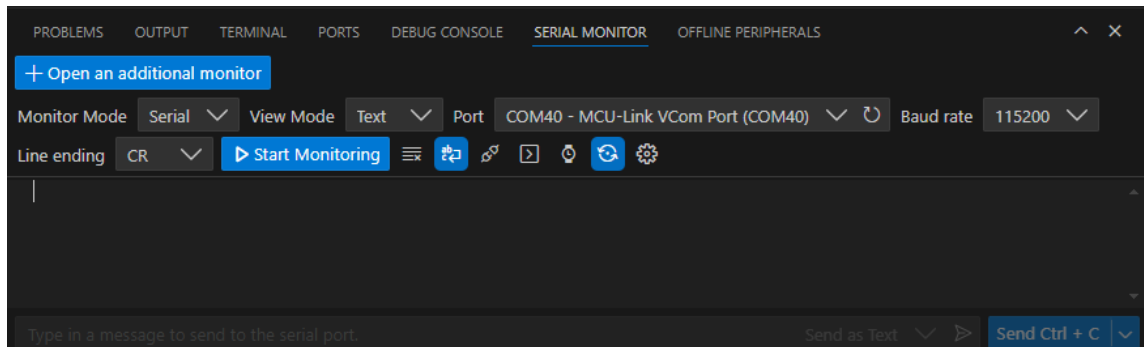

2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

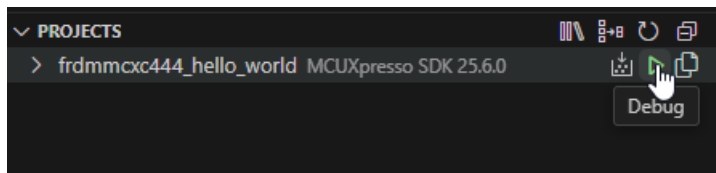

The debug session will begin. The debug controls are initially at the top.

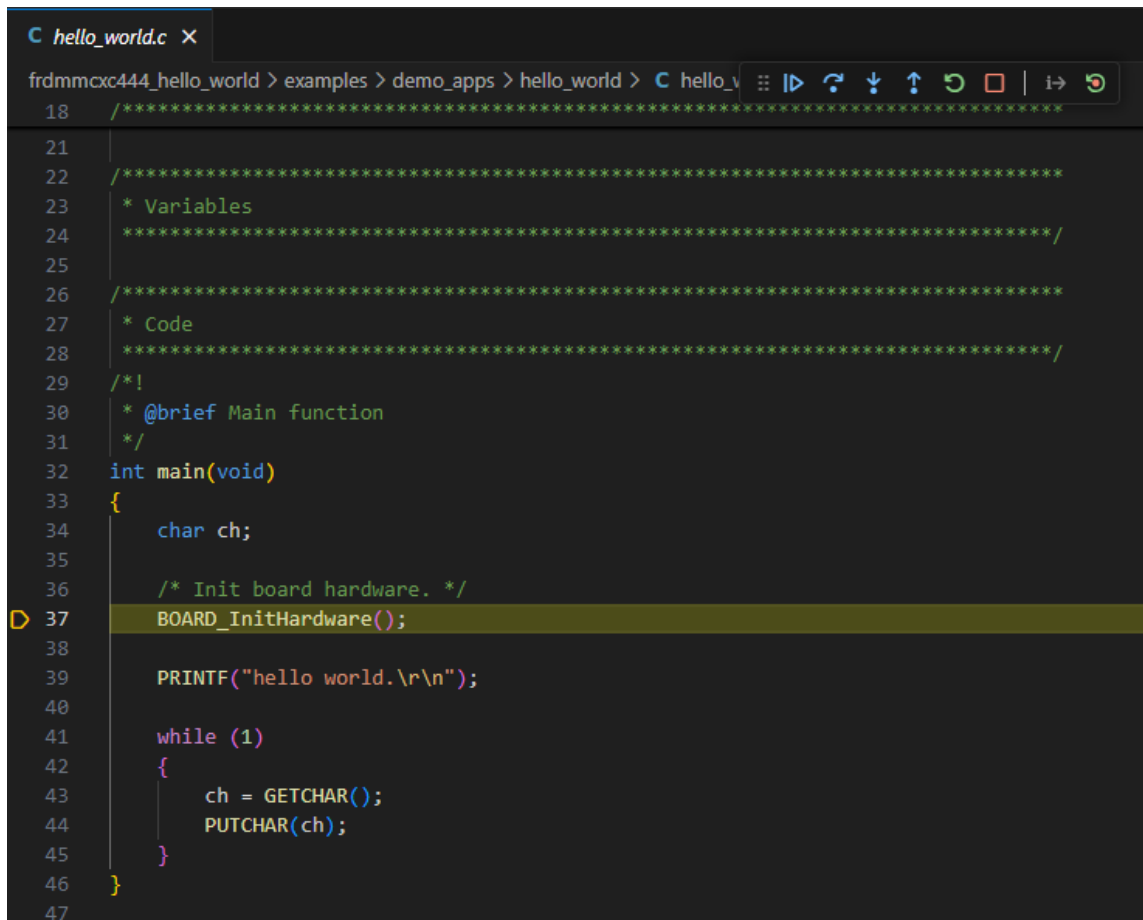


```

18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37      BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

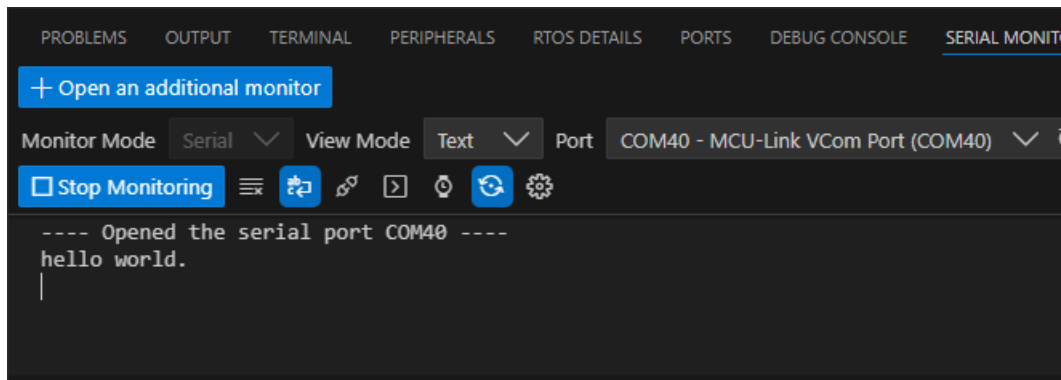

```

PROBLEMS  OUTPUT  TERMINAL  PERIPHERALS  RTOS DETAILS  PORTS  DEBUG CONSOLE  SERIAL MONITOR
+ Open an additional monitor
Monitor Mode Serial View Mode Text Port COM40 - MCU-Link VCom Port (COM40)
Stop Monitoring
---- Opened the serial port COM40 ----
hello world.
|

```

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```
west list_project -p examples/demo_apps/hello_world [-t armgcc]
```

```
INFO: [ 1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
evk9mimx8ulp -Dcore_id=cm33]
```

```
INFO: [ 2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
evkbimxrt1050]
```

```
INFO: [ 3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
```

(continues on next page)

(continued from previous page)

```

↪ evkbnimxrt1060]
INFO: [ 4][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm4]
INFO: [ 5][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm7]
INFO: [ 6][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1060]
INFO: [ 7][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt7ulp]
...

```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use west build -h to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- --toolchain: specify the toolchain for this build, default armgcc.
- --config: value for CMAKE_BUILD_TYPE. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```

# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release

```

For multicore devices, you shall specify the corresponding core id by passing the command line argument -Dcore_id. For example

```

west build -b evkbnimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug

```

For shield, please use the --shield to specify the shield to run, like

```

west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0

```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding --sysbuild for main application. For example:

```

west build -b evkbnimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always

```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration


```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without --cmake-only parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

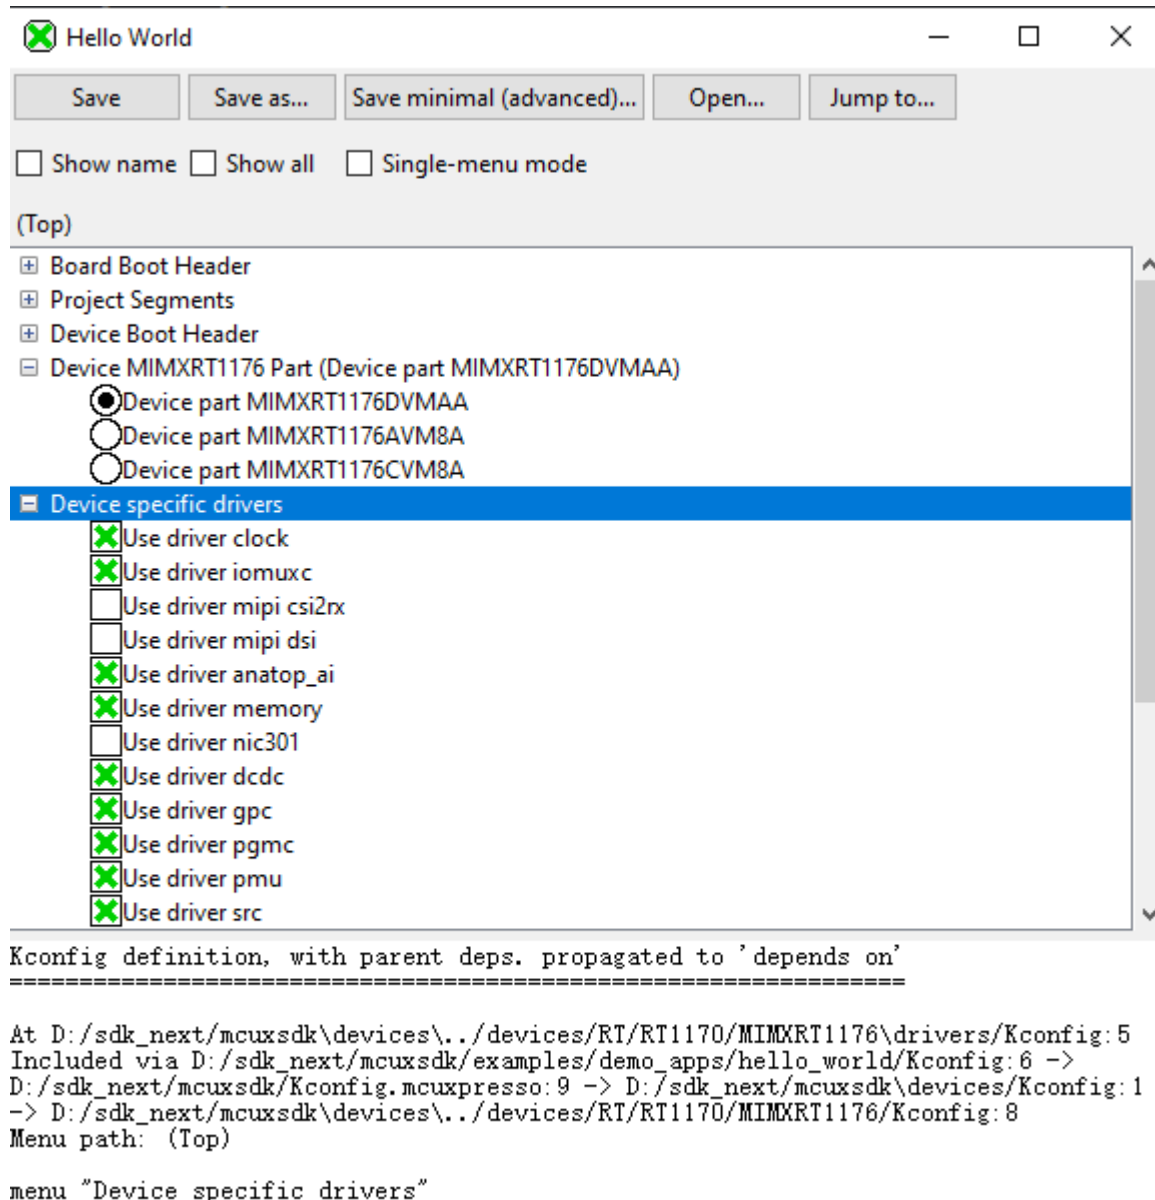

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash *Note:* Please refer Flash and Debug The Example to enable west flash/debug support.
Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:


```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbmimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵  
↵flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

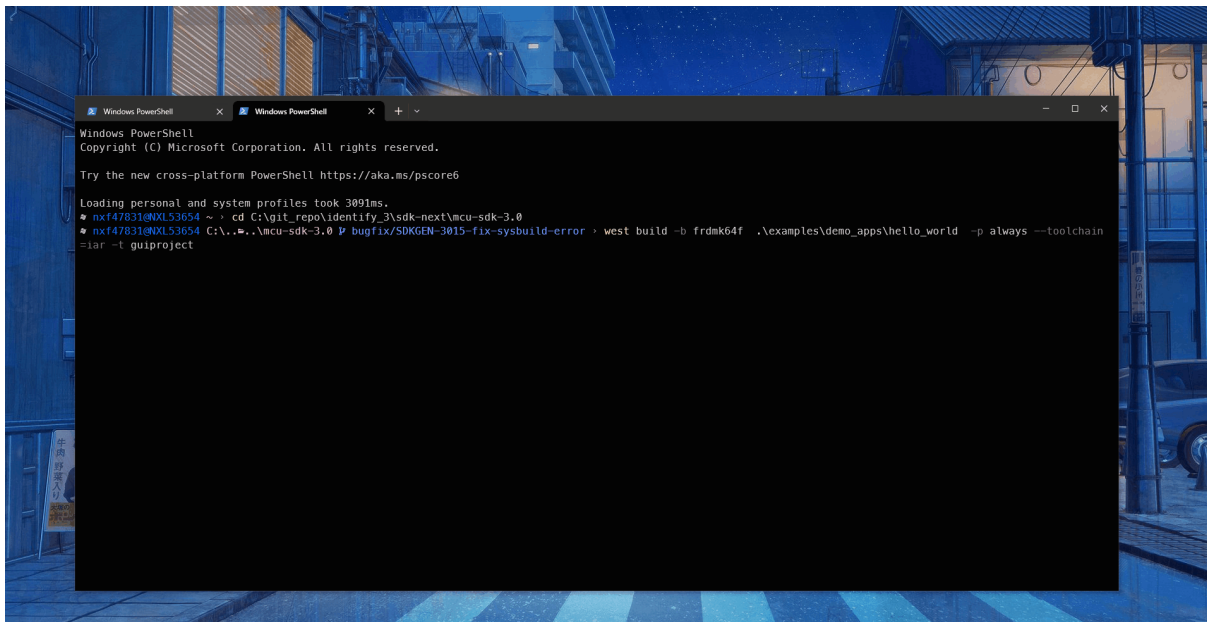

Note, please follow the [Installation](#) to setup the environment especially make sure that [ruby](#) has been installed.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC

further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.42
- MCUXpresso for VS Code v25.09
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
FRDM-MCXA344	MCXA343VFM, MCXA343VLF, MCXA343VLH, MCXA343VLL, MCXA344VFM, MCXA344VLF, MCXA344VLH, MCXA344VLL

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the `main()` function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

LittleFS LittleFS filesystem stack

Motor Control Software (ACIM, BLDC, PMSM) Motor control examples.

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

File systemFatfs The FatFs file system is integrated with the MCUXpresso SDK and can be used to access either the SD card or the USB memory stick when the SD card driver or the USB Mass Storage Device class implementation is used.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known Issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

AOI

[2.0.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.8, 2.2.

[2.0.0]

- Initial version.
-

CACHE LPCAC

[2.2.0]

- Improvements
 - Used new add macros `FSL_FEATURE_SYSCON_HAS_LPCAC_CTRL_PARITY_MISS_EN_BIT` and `FSL_FEATURE_SYSCON_HAS_LPCAC_CTRL_PARITY_FAULT_EN_BIT` to support some platforms which `PARITY_MISS_EN` and `PARITY_FAULT_EN` bit may be reserved.

[2.1.1]

- Bug Fixes
 - Fixed an issue of `L1CACHE_InvalidateCodeCache()` function, to clean cache the `LP-CAC_CTRL[CLR_LPCAC]` should be set not clear.

[2.1.0]

- Improvements
 - Supported more features, such as write buffer contron, write buffer limit and so on.

[2.0.0]

- Initial version.
-

CDOG

[2.1.3]

- Re-design multiple instance IRQs and Clocks
- Add fix for RESTART command errata

[2.1.2]

- Support multiple IRQs
- Fix default CONTROL values

[2.1.1]

- Remove bit `CONTROL[CONTROL_CTRL]`.

[2.1.0]

- Rename CWT to CDOG.

[2.0.2]

- Fix MISRA-2012 issues.

[2.0.1]

- Fix doxygen issues.

[2.0.0]

- Initial version.
-

MCX_CMC**[2.3.0]**

- Improvements
 - Added macros to support some device have BSR_SCR bit field.

[2.2.3]

- Improvements
 - Clear SCB_SCR[SLEEPDEEP] bitfield after wakeup.

[2.2.2]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.2.1]

- Improvements
 - Updated _cmc_system_reset_interrupt_enable, _cmc_system_reset_interrupt_flag and _cmc_system_reset_sources to support new added bit field.
- Bug Fixes
 - Fixed issue in CMC_PowerOffSRAMAllMode() and CMC_PowerOffSRAMLowPowerOnly() which overwrite reserved bit fields.

[2.2.0]

- Improvements
 - Added feature macro “FSL_FEATURE_MCX_CMC_HAS_NO_FLASHCR_WAKE” to support some devices where FLASHCR[WAKE] is reserved.

[2.1.0]

- Improvements
 - Added macros to support some devices(such as MCXA family) that only support one power domain.

[2.0.0]

- Initial version.
-

COMMON

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irqs that mount under `irqsteer` interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with `zephyr`.

[2.4.0]

- New Features
 - Added `EnableIRQWithPriority`, `IRQ_SetPriority`, and `IRQ_ClearPendingIRQ` for ARM.
 - Added `MSDK_EnableCpuCycleCounter`, `MSDK_GetCpuCycleCount` for ARM.

[2.3.3]

- New Features
 - Added `NETC` into status group.

[2.3.2]

- Improvements
 - Make driver `aarch64` compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

CTIMER

[2.3.3]

- Bug Fixes
 - Fix CERT INT30-C INT31-C issue.
 - Make API CTIMER_SetupPwm and CTIMER_UpdatePwmDutycycle return fail if pulse width register overflow.

[2.3.2]

- Bug Fixes
 - Clear unexpected DMA request generated by RESET_PeripheralReset in API CTIMER_Init to avoid trigger DMA by mistake.

[2.3.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.7 and 12.2.

[2.3.0]

- Improvements
 - Added the CTIMER_SetPrescale(), CTIMER_GetCaptureValue(), CTIMER_EnableResetMatchChannel(), CTIMER_EnableStopMatchChannel(), CTIMER_EnableRisingEdgeCapture(), CTIMER_EnableFallingEdgeCapture(), CTIMER_SetShadowValue(), APIs Interface to reduce code complexity.

[2.2.2]

- Bug Fixes
 - Fixed SetupPwm() API only can use match 3 as period channel issue.

[2.2.1]

- Bug Fixes
 - Fixed use specified channel to setting the PWM period in SetupPwmPeriod() API.
 - Fixed Coverity Out-of-bounds issue.

[2.2.0]

- Improvements
 - Updated three API Interface to support Users to flexibly configure the PWM period and PWM output.
- Bug Fixes
 - MISRA C-2012 issue fixed: rule 8.4.

[2.1.0]

- Improvements
 - Added the CTIMER_GetOutputMatchStatus() API Interface.
 - Added feature macro for FSL_FEATURE_CTIMER_HAS_NO_CCR_CAP2 and FSL_FEATURE_CTIMER_HAS_NO_IR_CR2INT.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, 10.6, 10.7 and 11.9.

[2.0.2]

- New Features
 - Added new API “CTIMER_GetTimerCountValue” to get the current timer count value.
 - Added a control macro to enable/disable the RESET and CLOCK code in current driver.
 - Added a new feature macro to update the API of CTimer driver for lpc8n04.

[2.0.1]

- Improvements
 - API Interface Change
 - * Changed API interface by adding CTIMER_SetupPwmPeriod API and CTIMER_UpdatePwmPulsePeriod API, which both can set up the right PWM with high resolution.

[2.0.0]

- Initial version.
-

EDMA**[2.10.6]**

- Improvements
 - Add macro FSL_FEATURE_EDMA_HAS_EDMA_TCD_CLOCK_ENABLE to enable tcd clocks in EDMA_Init function.

[2.10.5]

- Bug Fixes
 - Fixed memory convert would convert NULL as zero address issue.

[2.10.4]

- Improvements
 - Add new MP register macros to ensure compatibility with different devices.
 - Add macro DMA_CHANNEL_ARRAY_STEPn to adapt to complex addressing of edma tcd registers.

[2.10.3]

- Bug Fixes
 - Clear interrupt status flags in EDMA_CreateHandle to avoid triggering interrupt by mistake.

[2.10.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.

[2.10.1]

- Bug Fixes
 - Fixed EDMA_GetRemainingMajorLoopCount may return wrong value issue.
 - Fixed violations of the MISRA C-2012 rules 13.5, 10.4.

[2.10.0]

- Improvements
 - Modify the structures edma_core_mp_t, edma_core_channel_t, edma_core_tcd_t to adapt to edma5.
 - Add TCD register macro to facilitate confirmation of tcd type.
 - Modify the mask macro to a fixed value.
 - Add EDMA_TCD_TYPE macro to determine edma tcd type.
 - Add extension API to the following API to determine edma tcd type.
 - * EDMA_ConfigChannelSoftwareTCD -> EDMA_ConfigChannelSoftwareTCDExt
 - * EDMA_TcdReset -> EDMA_TcdResetExt
 - * EDMA_TcdSetTransferConfig -> EDMA_TcdSetTransferConfigExt
 - * EDMA_TcdSetMinorOffsetConfig -> EDMA_TcdSetMinorOffsetConfigExt
 - * EDMA_TcdSetChannelLink -> EDMA_TcdSetChannelLinkExt
 - * EDMA_TcdSetBandWidth -> EDMA_TcdSetBandWidthExt
 - * EDMA_TcdSetModulo -> EDMA_TcdSetModuloExt
 - * EDMA_TcdEnableAutoStopRequest -> EDMA_TcdEnableAutoStopRequestExt

- * `EDMA_TcdEnableInterrupts` -> `EDMA_TcdEnableInterruptsExt`
- * `EDMA_TcdDisableInterrupts` -> `EDMA_TcdDisableInterruptsExt`
- * `EDMA_TcdSetMajorOffsetConfig` -> `EDMA_TcdSetMajorOffsetConfigExt`

[2.9.2]

- Improvements
 - Remove tcd alignment check in API that is low level and does not necessarily use scatter/gather mode.

[2.9.1]

- Bug Fixes
 - Deinit channel request source before set channel mux.

[2.9.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed the variable type definition error issue.
 - Fixed doxygen warning.
 - Fixed violations of MISRA C-2012 rule 18.1.

[2.8.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3

[2.8.0]

- Improvements
 - Added feature `FSL_FEATURE_EDMA_HAS_NO_CH_SBR_SEC` to separate DMA without SEC bitfield.

[2.7.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 11.8, 14.3,.

[2.7.0]

- Improvements
 - Use more accurate DMA instance based feature macros.
- New Features
 - Add new APIs `EDMA_PrepareTransferTCD` and `EDMA_SubmitTransferTCD`, which support EDMA transfer using TCD.

[2.6.0]

- Improvements
 - Modify the type of parameter channelRequestSource from dma_request_source_t to int32_t in the EDMA_SetChannelMux.

[2.5.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 20.7, 12.2, 20.9, 5.3, 10.8, 8.4, 9.3.

[2.5.2]

- Improvements
 - Applied ERRATA 51327.

[2.5.1]

- Bug Fixes
 - Fixed the EDMA_ResetChannel function cannot reset channel DONE/ERROR status.

[2.5.0]

- Improvements
 - Added feature FSL_FEATURE_EDMA_HAS_NO_SBR_ATTR_BIT to separate DMA without ATTR bitfield.
 - Added api EDMA_GetChannelSystemBusInformation to gets the channel identification and attribute information on the system bus interface.
- Bug Fixes
 - Fixed the ESG bit not set in scatter gather mode issue.
 - Fixed the DREQ bit configuration missed in single transfer issue.
 - Cleared the interrupt status before invoke callback to avoid miss interrupt issue.
 - Removed disableRequestAfterMajorLoopComplete from edma_transfer_config_t structure as driver will handle it.
 - Fixed the channel mux configuration not compatible issue.
 - Fixed the out of bound access in function EDMA_DriverIRQHandler.

[2.4.4]

- Bug Fixes
 - Fixed comments by replacing STCD with TCD
 - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.

[2.4.3]

- Improvements
 - Added `FSL_FEATURE_MEMORY_HAS_ADDRESS_OFFSET` to convert the address between system mapped address and dma quick access address.
- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt for the non scatter gather case.

[2.4.2]

- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt by correct the initial value of the header.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.4.1]

- Bug Fixes
 - Added clear CITER and BITER registers in `EDMA_AbortTransfer` to make sure the TCD registers in a correct state for next calling of `EDMA_SubmitTransfer`.
 - Removed the clear DONE status for ESG not enabled case to avoid DONE bit cleared unexpectedly.

[2.4.0]

- Improvements
 - Added api `EDMA_EnableContinuousChannelLinkMode` to support continuous link mode.
 - Added apis `EDMA_SetMajorOffsetConfig/EDMA_TcdSetMajorOffsetConfig` to support major loop address offset feature.
 - Added api `EDMA_EnableChannelMinorLoopMapping` for minor loop offset feature.
 - Removed the redundant IRQ Handler in edma driver.

[2.3.2]

- Improvements
 - Fixed HIS ccm issue in function `EDMA_PrepareTransferConfig`.
 - Fixed violations of MISRA C-2012 rule 11.6, 10.7, 10.3, 18.1.
- Bug Fixes
 - Added ACTIVE & BITER & CITER bitfields to determine the channel status to fixed the issue of the transfer request cannot submit by function `EDMA_SubmitTransfer` when channel is idle.

[2.3.1]

- Improvements
 - Added source/destination address alignment check.
 - Added driver IRQ handler support for multi DMA instance in one SOC.

[2.3.0]

- Improvements
 - Added new api EDMA_PrepareTransferConfig to allow different configurations of width and offset.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.1.
 - Fixed the Coverity issue regarding out-of-bounds write.

[2.2.0]

- Improvements
 - Added peripheral-to-peripheral support in EDMA driver.

[2.1.9]

- Bug Fixes
 - Fixed MISRA issue: Rule 10.7 and 10.8 in function EDMA_DisableChannelInterrupts and EDMA_SubmitTransfer.
 - Fixed MISRA issue: Rule 10.7 in function EDMA_EnableAsyncRequest.

[2.1.8]

- Bug Fixes
 - Fixed incorrect channel preemption base address used in EDMA_SetChannelPreemptionConfig API which causes incorrect configuration of the channel preemption register.

[2.1.7]

- Bug Fixes
 - Fixed incorrect transfer size setting.
 - * Added 8 bytes transfer configuration and feature for RT series;
 - * Added feature to support 16 bytes transfer for Kinetis.
 - Fixed the issue that EDMA_HandleIRQ would go to incorrect branch when TCD was not used and callback function not registered.

[2.1.6]

- Bug Fixes
 - Fixed KW3X MISRA Issue.
 - * Rule 14.4, 10.8, 10.4, 10.7, 10.1, 10.3, 13.5, and 13.2.
- Improvements
 - Cleared the IRQ handler unavailable for specific platform with macro `FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SHARED_OFFSET`.

[2.1.5]

- Improvements
 - Improved EDMA IRQ handler to support half interrupt feature.

[2.1.4]

- Bug Fixes
 - Cleared enabled request, status during `EDMA_Init` for the case that EDMA is halted before reinitialization.

[2.1.3]

- Bug Fixes
 - Added clear DONE bit in IRQ handler to avoid overwrite TCD issue.
 - Optimized above solution for the case that transfer request occurs in callback.

[2.1.2]

- Improvements
 - Added interface to get next TCD address.
 - Added interface to get the unused TCD number.

[2.1.1]

- Improvements
 - Added documentation for eDMA data flow when scatter/gather is implemented for the `EDMA_HandleIRQ` API.
 - Updated and corrected some related comments in the `EDMA_HandleIRQ` API and `edma_handle_t` struct.

[2.1.0]

- Improvements
 - Changed the `EDMA_GetRemainingBytes` API into `EDMA_GetRemainingMajorLoopCount` due to eDMA IP limitation (see API comments/note for further details).

[2.0.5]

- Improvements
 - Added pubweak DriverIRQHandler for K32H844P (16 channels shared).

[2.0.4]

- Improvements
 - Added support for SoCs with multiple eDMA instances.
 - Added pubweak DriverIRQHandler for KL28T DMA1 and MCIMX7U5_M4.

[2.0.3]

- Bug Fixes
 - Fixed the incorrect pubweak IRQHandler name issue, which caused re-definition build errors when client set his/her own IRQHandler, by changing the 32-channel IRQHandler name to DriverIRQHandler.

[2.0.2]

- Bug Fixes
 - Fixed incorrect minorLoopBytes type definition in `_edma_transfer_config` struct, and defined `minorLoopBytes` as `uint32_t` instead of `uint16_t`.

[2.0.1]

- Bug Fixes
 - Fixed the eDMA callback issue (which did not check valid status) in `EDMA_HandleIRQ` API.

[2.0.0]

- Initial version.
-

EIM

[2.0.2]

- Improvements
 - Reset the peripheral during initialization, otherwise some platforms may not work.
- Bug Fixes
 - Fixed incorrect register access in `EIM_GetDataBitMask()`.

[2.0.1]

- Improvements
 - Update driver to support fewer channel.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.0]

- Initial version.
-

EQDC**[2.3.1]**

- Bug Fix
- Fixed CTRL2[CMODE] field overwritten in API EQDC_Init.

[2.3.0]

- Improvements
- Add feature macro to support platforms which do not have compare interrupt.

[2.2.3]

- Bug Fix
- Clear Revolution Counter Register(REV) in init function to prevent its value not equal to zero after reset.

[2.2.2]

- Improvements
- Release peripheral from reset if necessary in init function.

[2.2.1]

- Bug Fix
- Fixed violations of the MISRA C-2012 rules 20.9.

[2.2.0]

- New features
- Supported the feature that the position counter to be initialized by Index Event Edge Mark.

[2.1.0]

- Bug Fix
- Fixed typo in interrupt enumeration values.
 - Improvements
- Supported Count Direct Change interrupt.
- Removed unused parameter in user configuration.
- Supported ERRATA_051383 check, the CTRL[DMAEN] can't be cleared.

[2.0.1]

- Bug Fix
- Fixed violations of the MISRA C-2012 rules 10.3, 10.6, 10.8, 14.4, 16.4.

[2.0.0]

- Initial version.
-

ERM

[2.0.2]

- Improvements
 - Reset the peripheral during initialization, otherwise some platforms may not work.
- Bug Fixes
 - Only keep bit 0-3 of ERM_GetInterruptStatus() as it may get other channel results in higher bits.

[2.0.1]

- Improvements
 - Update driver to support fewer channel.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.0]

- Initial version.
-

FLEXCAN

[2.14.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 8.4, 10.1, 10.4, 18.1.

[2.14.3]

- Improvements
 - Add unhandled interrupt events check for following API:
 - * FLEXCAN_MbHandleIRQ
 - * FLEXCAN_EhancedRxFifoHandleIRQ
- Bug Fixes
 - Remove FLEXCAN_MemoryErrorHandleIRQ on some platform without memory error interrupt.

- Add conditional compile for CTRL2[ISOCANFDEN] because some platform do not have this bit.

[2.14.2]

- Improvements
 - Add Coverage Justification for uncovered code.
 - Adjust API FLEXCAN_TransferAbortReceive order.
 - Update FLEXCAN_Enable to enter Freeze Mode first when enter Disable mode on some platform.
 - Added while loop timeout for following API:
 - * FLEXCAN_EnterFreezeMode
 - * FLEXCAN_ExitFreezeMode
 - * FLEXCAN_Enable
 - * FLEXCAN_Reset
 - * FLEXCAN_TransferSendBlocking
 - * FLEXCAN_TransferReceiveBlocking
 - * FLEXCAN_TransferFDSendBlocking
 - * FLEXCAN_TransferFDReceiveBlocking
 - * FLEXCAN_TransferReceiveFifoBlocking
 - * FLEXCAN_TransferReceiveEnhancedFifoBlocking
- Bug Fixes
 - Remove remote frame feature in CANFD mode because there is no remote frame in the CANFD format.
 - Remove legacy Rx FIFO disabled branch in FLEXCAN_SubHandlerForLegacyRxFIFO and FLEXCAN_SubHandlerForDataTransferred.

[2.14.1]

- Bug Fixes
 - Fixed register IMASK2-4 IFLAG2-4 HR_TIME_STAMPn access issue on FlexCAN instances with different number of MBs.
 - Fixed bit field MBDSR1-3 access issue on FlexCAN instances with different number of MBs.
- Improvements
 - Unified following API as same parameter and return value type:
 - * FLEXCAN_GetMbStatusFlags
 - * FLEXCAN_ClearMbStatusFlags
 - * FLEXCAN_EnableMbInterrupts
 - * FLEXCAN_DisableMbInterrupts
 - Add workaround for ERR050443 and ERR052403.
 - Update message buffer read process in API FLEXCAN_ReadRxMb and FLEXCAN_ReadFDRxMb to make critical section as short as possible.

- Simplify API `FLEXCAN_DriverDataIRQHandler` implementation by remove parameter type.

[2.14.0]

- Improvements
 - Support external time tick feature.
 - Support high resolution timestamp feature.
 - Enter Freeze Mode first when enter Disable Mode on some platform.
 - Add feature macro for Pretended Networking because some FlexCAN instance do not have this feature.
 - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
 - Add new FlexCAN IRQ Handler `FLEXCAN_DriverDataIRQHandler` and `FLEXCAN_DriverEventIRQHandler`. Thses IRQ Handlers are used on soc which FlexCAN interrupts are grouped by specific function and assigned to different vector.
 - Update macro `FLEXCAN_WAKE_UP_FLAG` and `FLEXCAN_PNWAKE_UP_FLAG` to simplify code.
 - Replace macro `FSL_FEATURE_FLEXCAN_HAS_NO_WAKMSK_SUPPORT` with `FSL_FEATURE_FLEXCAN_HAS_NO_SLFWAK_SUPPORT`.
 - Replace macro `FSL_FEATURE_FLEXCAN_HAS_NO_WAKSRC_SUPPORT` with `FSL_FEATURE_FLEXCAN_HAS_GLITCH_FILTER`.
- Bug Fixes
 - Fixed wrong interrupt and status flag helper macro in enumeration `_flexcan_flags` and API `FLEXCAN_DisableInterrupts`.
 - Fixed interrupt flag helper macro typo issue.
 - Remove flags which will are unassociated with interrupt in macro `FLEXCAN_MEMORY_ERROR_INT_FLAG`.
 - Remove flags which will are unassociated with interrupt in macro `FLEXCAN_ERROR_AND_STATUS_INT_FLAG`.
 - Fixed array out-of-bounds access when read enhanced Rx FIFO.

[2.13.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- Improvements
 - Support payload endianness selection feature.

[2.12.0]

- Improvements
 - Support automatic Remote Response feature.
 - Add API `FLEXCAN_SetRemoteResponseMbConfig()` to configure automatic Remote Response mailbox.

[2.11.8]

- Improvements
 - Synchronize flexcan driver update on s32z platform.

[2.11.7]

- Bug Fixes
 - Fixed `FLEXCAN_TransferReceiveEnhancedFifoEDMA()` compatibility with edma5.

[2.11.6]

- Bug Fixes
 - Fixed ERRATA_9595 `FLEXCAN_EnterFreezeMode()` may result to bus fault on some platform.

[2.11.5]

- Bug Fixes
 - Fixed `flexcan_memset()` crash under high optimization compilation.

[2.11.4]

- Improvements
 - Update CANFD max bitrate to 10Mbps on MCXNx3x and MCXNx4x.
 - Release peripheral from reset if necessary in init function.

[2.11.3]

- Bug Fixes
 - Fixed `FLEXCAN_TransferReceiveEnhancedFifoEDMA()` compile error with DMA3.

[2.11.2]

- Bug Fixes
 - Fixed bug that timestamp in `flexcan_handle_t` not updated when RX overflow happens.

[2.11.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1.

[2.11.0]

- Bug Fixes
 - Fixed wrong base address argument in FLEXCAN2 IRQ Handler.
- Improvements
 - Add API to determine if the instance supports CAN FD mode at run time.

[2.10.1]

- Bug Fixes
 - Fixed HIS CCM issue.
 - Fixed RTOS issue by adding protection to read-modify-write operations on interrupt enable/disable API.

[2.10.0]

- Improvements
 - Update driver to make it able to support devices which has more than 64 8bytes MBs.
 - Update CAN FD transfer APIs to make them set/get edl bit according to frame content, which can make them compatible with classic CAN.

[2.9.2]

- Bug Fixes
 - Fixed the issue that FLEXCAN_CheckUnhandleInterruptEvents() can't detecting the exist enhanced RX FIFO interrupt status.
 - Fixed the issue that FLEXCAN_ReadPNWakeUpMB() does not return fail even no existing valid wake-up frame.
 - Fixed the issue that FLEXCAN_ReadEnhancedRxFifo() may clear bits other than the data available bit.
 - Fixed violations of the MISRA C-2012 rules 10.4, 10.8.
- Improvements
 - Return kStatus_FLEXCAN_RxFifoDisabled instead of kStatus_Fail when read FIFO fail during IRQ handler.
 - Remove unreachable code from timing calculates APIs.
 - Update Enhanced Rx FIFO handler to make it deal with underflow/overflow status first.

[2.9.1]

- Bug Fixes
 - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoBlocking() API clearing Fifo data available flag more than once.
 - Fixed the issue that entering FLEXCAN_SubHandlerForEnhancedRxFifo() even if Enhanced Rx fifo interrupts are not enabled.
 - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoEDMA() update handle even if previous Rx FIFO receive not finished.

- Fixed the issue that `FLEXCAN_SetEnhancedRxFifoConfig()` not configure the `ER_FCR[NFE]` bits to the correct value.
- Fixed the issue that `FLEXCAN_ReceiveFifoEDMACallback()` can't differentiate between Rx fifo and enhanced rx fifo.
- Fixed the issue that `FLEXCAN_TransferHandleIRQ()` can't report Legacy Rx FIFO warning status.

[2.9.0]

- Improvements
- Add public set bit rate API to make driver easier to use.
- Update Legacy Rx FIFO transfer APIs to make it support received multiple frames during one API call.
- Optimized `FLEXCAN_SubHandlerForDataTransferred()` API in interrupt handling to reduce the probability of packet loss.

[2.8.7]

- Improvements
- Initialized the EDMA configuration structure in the FLEXCAN EDMA driver.

[2.8.6]

- Bug Fixes
- Fix Coverity overrun issues in `fsl_flexcan_edma` driver.

[2.8.5]

- Improvements
 - Make driver aarch64 compatible.

[2.8.4]

- Bug Fixes
 - Fixed `FlexCan_Errata_6032` to disable all interrupts.

[2.8.3]

- Bug Fixes
 - Fixed an issue with the `FLEXCAN_EnableInterrupts` and `FLEXCAN_DisableInterrupts` interrupt enable bits in the `CTRL1` register.

[2.8.2]

- Bug Fixes
 - Fixed errors in timing calculations and simplify the calculation process.
 - Fixed issue of CBT and FDCBT register may write failure.

[2.8.1]

- Bug Fixes
 - Fixed the issue of CAN FD three sampling points.
 - Added macro to support the devices that no MCR[SUPV] bit.
 - Remove unnecessary clear WMB operations.

[2.8.0]

- Improvements
 - Update config configuration.
 - * Added enableSupervisorMode member to support enable/disable Supervisor mode.
 - Simplified the algorithm in CAN FD improved timing APIs.

[2.7.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.7.

[2.7.0]

- Improvements
 - Update config configuration.
 - * Added enablePretendedNetworking member to support enable/disable Pretended Networking feature.
 - * Added enableTransceiverDelayMeasure member to support enable/disable Transceiver Delay Measurement Pretended feature.
 - * Added bitRate/bitRateFD member to work as baudRate/baudRateFD member union.
 - Rename all “baud” in code or comments to “bit” to align with the CAN spec.
 - Added Pretended Networking mode related APIs.
 - * FLEXCAN_SetPNConfig
 - * FLEXCAN_GetPNMatchCount
 - * FLEXCAN_ReadPNWakeUpMB
 - Added support for Enhanced Rx FIFO.
 - Removed independent memory error interrupt/status APIs and put all interrupt/status control operation into FLEXCAN_EnableInterrupts/FLEXCAN_DisableInterrupts and FLEXCAN_GetStatusFlags/FLEXCAN_ClearStatusFlags APIs.
 - Update improved timing APIs to make it calculate improved timing according to CiA doc recommended.
 - * FLEXCAN_CalculateImprovedTimingValues.
 - * FLEXCAN_FDCalculateImprovedTimingValues.
 - Update FLEXCAN_SetBitRate/FLEXCAN_SetFDBitRate to added the use of enhanced timing registers.

[2.6.2]

- Improvements
 - Add CANFD frame data length enumeration.

[2.6.1]

- Bug Fixes
 - Fixed the issue of not fully initializing memory in FLEXCAN_Reset() API.

[2.6.0]

- Improvements
 - Enable CANFD ISO mode in FLEXCAN_FDInit API.
 - Enable the transceiver delay compensation feature when enable FD operation and set bitrate switch.
 - Implementation memory error control in FLEXCAN_Init API.
 - Improve FLEXCAN_FDCalculateImprovedTimingValues API to get same value for FPRESDIV and PRESDIV.
 - Added memory error configuration for user.
 - * enableMemoryErrorControl
 - * enableNonCorrectableErrorEnterFreeze
 - Added memory error related APIs.
 - * FLEXCAN_GetMemoryErrorReportStatus
 - * FLEXCAN_GetMemoryErrorStatusFlags
 - * FLEXCAN_ClearMemoryErrorStatusFlags
 - * FLEXCAN_EnableMemoryErrorInterrupts
 - * FLEXCAN_DisableMemoryErrorInterrupts
- Bug Fixes
 - Fixed the issue of sent duff CAN frame after call FLEXCAN_FDInit() API.

[2.5.2]

- Bug Fixes
 - Fixed the code error issue and simplified the algorithm in improved timing APIs.
 - * The bit field in CTRL1 register couldn't calculate higher ideal SP, we set it as the lowest one(75%)
 - FLEXCAN_CalculateImprovedTimingValues
 - FLEXCAN_FDCalculateImprovedTimingValues
 - Fixed MISRA-C 2012 Rule 17.7 and 14.4.
- Improvements
 - Pass ESRStatus to callback function when kStatus_FLEXCAN_ErrorStatus is coming.

[2.5.1]

- Bug Fixes
 - Fixed the non-divisible case in improved timing APIs.
 - * FLEXCAN_CalculateImprovedTimingValues
 - * FLEXCAN_FDCalculateImprovedTimingValues

[2.5.0]

- Bug Fixes
 - MISRA C-2012 issue check.
 - * Fixed rules, containing: rule-10.1, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-11.8, rule-12.2, rule-13.4, rule-14.4, rule-15.5, rule-15.6, rule-15.7, rule-16.4, rule-17.3, rule-5.8, rule-8.3, rule-8.5.
 - Fixed the issue that API FLEXCAN_SetFDRxMbConfig lacks inactive message buff.
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of dead lock in the function of interruption handler.
 - Fixed the issue of Legacy Rx Fifo EDMA transfer data fail in evkmimxrt1060 and evk-mimxrt1064.
 - Fixed the issue of setting CANFD Bit Rate Switch.
 - Fixed the issue of operating unknown pointer risk.
 - * when used the pointer “handle->mbFrameBuf[mbIdx]” to update the timestamp in a short-live TX frame, the frame pointer became as unknown, the action of operating it would result in program stack destroyed.
 - Added assert to check current CAN clock source affected by other clock gates in current device.
 - * In some chips, CAN clock sources could be selected by CCM. But for some clock sources affected by other clock gates, if user insisted on using that clock source, they had to open these gates at the same time. However, they should take into consideration the power consumption issue at system level. In RT10xx chips, CAN clock source 2 was affected by the clock gate of lpuart1. ERRATA ID: (ERR050235 in CCM).
- Improvements
 - Implementation for new FLEXCAN with ECC feature able to exit Freeze mode.
 - Optimized the function of interruption handler.
 - Added two APIs for FLEXCAN EDMA driver.
 - * FLEXCAN_PrepareTransfConfiguration
 - * FLEXCAN_StartTransferDatafromRxFIFO
 - Added new API for FLEXCAN driver.
 - * FLEXCAN_GetTimeStamp
 - For TX non-blocking API, we wrote the frame into mailbox only, so no need to register TX frame address to the pointer, and the timestamp could be updated into the new global variable handle->timestamp[mbIdx], the FLEXCAN driver provided a new API for user to get it by handle and index number after TX DONE Success.
 - * FLEXCAN_EnterFreezeMode

- * FLEXCAN_ExitFreezeMode
- Added new configuration for user.
 - * disableSelfReception
 - * enableListenOnlyMode
- Renamed the two clock source enum macros based on CLKSRC bit field value directly.
 - * The CLKSRC bit value had no property about Oscillator or Peripheral type in lots of devices, it acted as two different clock input source only, but the legacy enum macros name contained such property, that misled user to select incorrect CAN clock source.
- Created two new enum macros for the FLEXCAN driver.
 - * kFLEXCAN_ClkSrc0
 - * kFLEXCAN_ClkSrc1
- Deprecated two legacy enum macros for the FLEXCAN driver.
 - * kFLEXCAN_ClkSrcOsc
 - * kFLEXCAN_ClkSrcPeri
- Changed the process flow for Remote request frame response..
 - * Created a new enum macro for the FLEXCAN driver.
 - kStatus_FLEXCAN_RxRemote
- Changed the process flow for kFLEXCAN_StateRxRemote state in the interrupt handler.
 - * Should the TX frame not register to the pointer of frame handle, interrupt handler would not be able to read the remote response frame from the mail box to ram, so user should read the frame by manual from mail box after a complete remote frame transfer.

[2.4.0]

- Bug Fixes
 - MISRA C-2012 issue check.
 - * Fixed rules, containing: rule-12.1, rule-17.7, rule-16.4, rule-11.9, rule-8.4, rule-14.4, rule-10.8, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-8.3, rule-12.2 and rule-16.1.
 - Fixed the issue that CANFD transfer data fail when bus baudrate is 30Khz.
 - Fixed the issue that ERR009595 does not follow the ERRATA document.
 - Fixed code error for ERR006032 work around solution.
 - Fixed the Coverity issue of BAD_SHIFT in FLEXCAN.
 - Fixed the Repo build warning issue for variable without initial.
- Improvements
 - Fixed the run fail issue of FlexCAN RemoteRequest UT Case.
 - Implementation all TX and RX transferring Timestamp used in FlexCAN demos.
 - Fixed the issue of UT Test Fail for CANFD payload size changed from 64BperMB to 8PerMB.
 - Implementation for improved timing API by baud rate.

[2.3.2]

- Improvements
 - Implementation for ERR005959.
 - Implementation for ERR005829.
 - Implementation for ERR006032.

[2.3.1]

- Bug Fixes
 - Added correct handle when kStatus_FLEXCAN_TxSwitchToRx is coming.

[2.3.0]

- Improvements
 - Added self-wakeup support for STOP mode in the interrupt handling.

[2.2.3]

- Bug Fixes
 - Fixed the issue of CANFD data phase's bit rate not set as expected.

[2.2.2]

- Improvements
 - Added a time stamp feature and enable it in the interrupt_transfer example.

[2.2.1]

- Improvements
 - Separated CANFD initialization API.
 - In the interrupt handling, fix the issue that the user cannot use the normal CAN API when with an FD.

[2.2.0]

- Improvements
 - Added FSL_FEATURE_FLEXCAN_HAS_SUPPORT_ENGINE_CLK_SEL_REMOVE feature to support SoCs without CAN Engine Clock selection in FlexCAN module.
 - Added FlexCAN Serial Clock Operation to support i.MX SoCs.

[2.1.0]

- Bug Fixes
 - Corrected the spelling error in the function name FLEXCAN_XXX().
 - Moved Freeze Enable/Disable setting from FLEXCAN_Enter/ExitFreezeMode() to FLEXCAN_Init().
 - Corrected wrong helper macro values.

- Improvements
 - Hid FLEXCAN_Reset() from user.
 - Used NDEBUG macro to wrap FLEXCAN_IsMbOccupied() function instead of DEBUG macro.

[2.0.0]

- Initial version.
-

FLEXCAN_EDMA

[2.12.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 18.1.

[2.12.0]

- Improvements
 - Support high resolution timestamp feature in enhanced Rx FIFO EDMA.
 - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
- Bug Fixes
 - Fixed array out-of-bounds access when read enhanced Rx FIFO in EDMA.

[2.11.7]

- Refer FLEXCAN driver change log 2.7.0 to 2.11.7
-

FREQME

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Fixed MISRA issues.

[2.1.0]

- Updated register name.

[2.0.0]

- Initial version.
-

GLIKEY

[2.0.1]

- Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.

[2.0.0]

- Initial version.
-

GPIO

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMARequestFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of _PinXXX() and _PortXXX.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “_PinConfigure” to “GPIO_PinInit”.
-

INPUTMUX**[2.0.9]**

- Improvements
 - Use INPUTMUX_CLOCKS to initialize the inputmux module clock to adapt to multiple inputmux instances.
 - Modify the API base type from INPUTMUX_Type to void.

[2.0.8]

- Improvements
 - Updated a feature macro usage for function INPUTMUX_EnableSignal.

[2.0.7]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.6]

- Bug Fixes
 - Fixed the documentation wrong in API INPUTMUX_AttachSignal.

[2.0.5]

- Bug Fixes
 - Fixed build error because some devices has no sct.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rule 10.4, 12.2 in INPUTMUX_EnableSignal() function.

[2.0.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 10.7, 12.2.

[2.0.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 12.2.

[2.0.1]

- Support channel mux setting in INPUTMUX_EnableSignal().

[2.0.0]

- Initial version.
-

LPADC

[2.9.3]

- Improvements
 - Add timeout for while loop code.

[2.9.2]

- Improvements
 - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
 - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
 - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
 - Split LPADC_FinishAutoCalibration function into two functions.
 - Improved LPADC driver.

[2.8.4]

- Bug Fixes
 - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
 - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
 - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed function LPADC_GetConvResult() issue.
 - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
 - Corrected descriptions of several functions.
 - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
 - Revert changes of feature macros for lpadc.
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.8.
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
 - Added supports of CFG2 register.
 - Removed some useless macros.

[2.6.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules.
 - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
 - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
 - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
 - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
 - Added API to set offset calibration mode.
 - Added configuration of alternate channel.
 - Updated auto calibration API and added calibration value conversion API.
- New feature
 - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
 - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
 - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
 - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
 - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
 - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
 - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
 - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
 - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
 - Clean doxygen warnings.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
 - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
 - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
 - Updated the gain calibration formula.
 - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
 - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
 - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
 - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
 - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
 - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.
-

LPCMP

[2.3.2]

- Improvements
 - Fixed LPCMP CERT-C issues.

[2.3.1]

- Improvements
 - Update LPCMP driver to be compatible with platforms that do not support LPCMP nano power mode selection.

[2.3.0]

- New Feature
 - Added some new features for platforms which support
 - * Plus input source selection.
 - * Minus input source selection.
 - * CMP to DAC link.
- Improvements
 - Removed some new features for platforms which doesn't support
 - * Functional clock source selection.
 - * DAC high power mode selection.
 - * Round Robin clock source selection.
 - * Round Robin trigger source selection.
 - * Round Robin channel sample numbers setting.
 - * Round Robin channel sample time threshold setting.
 - * Round Robin internal trigger configuration.

[2.2.0]

- Improvements
 - Change `FSL_FEATURE_LPCMP_HAS_NO_CCR0_CMP_STOP_EN` to `FSL_FEATURE_LPCMP_HAS_CCR0_CMP_STOP_EN`.

[2.1.3]

- New Feature
 - Added new macro to handle the case where some instances do not have the CCR0 CMP_STOP_EN bit field.

[2.1.2]

- New Feature
 - Add macros to be compatible with some platforms that do not have the CCR0 CMP_STOP_EN bitfield.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- New Features:
 - Supported round robin mode and window mode feature.

[2.0.3]

- Bug Fixes:
 - Fixed the violation of MISRA-2012 rule 17.7.

[2.0.2]

- Bug Fixes:
 - The current API LPCMP_ClearStatusFlags has to check w1c bits.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

LPI2C**[2.6.2]**

- Improvements
 - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
 - Fixed coverity issues.

[2.6.0]

- New Feature
 - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
 - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
 - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
 - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
 - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
 - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
 - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
 - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
 - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
 - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
 - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
 - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
 - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
 - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
 - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
 - Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
 - Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
 - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
 - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
 - Supported reading more than 256 bytes of data in one transfer as master.
 - Added API LPI2C_GetInstance.
- Bug Fixes
 - Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.
 - Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
 - Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be $2^{\text{prescaler}}$ rather than prescaler.
 - Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
 - Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes
 - Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
 - MISRA C-2012 issue fixed.
 - * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
 - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
 - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rule 10.3, 14.4, 15.5.
 - Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
 - Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.
 - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
 - Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
 - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
 - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.
 - Removed STOP signal wait when NAK detected.
 - Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
 - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
 - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
 - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
 - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
 - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
 - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
 - Extended the Driver IRQ handler to support LPI2C4.
 - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
 - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
 - Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
 - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
 - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
 - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes

- Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccessful sending of the start flag, so the transfer could not start.
- Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
 - API name changed:
 - * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.
 - * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
 - * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
 - * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
 - * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
 - * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
 - * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
 - * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.
-

LPI2C_EDMA

[2.4.4]

- Improvements
 - Added support for 2KB data transfer

[2.4.3]

- Improvements
 - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1
-

LPSPi

[2.7.3]

- Improvements
 - Added timeout for while loop in LPSPi_MasterTransferWriteAllTxData().
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
 - Fixed coverity issues.

[2.7.1]

- Bug Fixes
 - Workaround for errata ERR050607
 - Workaround for errata ERR010655

[2.7.0]

- New Feature
 - Added common IRQ handler entry LPSPi_DriverIRQHandler.

[2.6.10]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
 - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
 - Added LPSPI register init in LPSPI_MasterInit incase of LPSPI register exist.

[2.6.5]

- Improvements
 - Introduced FSL_FEATURE_LPSPI_HAS_NO_PCSCFG and FSL_FEATURE_LPSPI_HAS_NO_MULTI_WIDTH for conditional compile.
 - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
 - Added LPSPI6_DriverIRQHandler for LPSPI6 instance.

[2.6.3]

- Hot Fixes
 - Added macro switch in function LPSPI_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
 - Disabled lpspi before LPSPI_MasterSetBaudRate incase of LPSPI opened.

[2.6.1]

- Bug Fixes
 - Fixed return value while calling LPSPI_WaitTxFifoEmpty in function LPSPI_MasterTransferNonBlocking.

[2.6.0]

- Feature
 - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
 - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
 - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
 - Workaround for errata ERR050456 by resetting the entire module using LPSPIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
 - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
 - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
 - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
 - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
 - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
 - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
 - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
 - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
 - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
 - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
 - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
 - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
 - Fixed bug in LPSPI_SetPCSContinuous when disabling PCS continuous mode.

[2.2.0]

- Bug Fixes
 - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continuous mode is not working.

[2.1.0]

- Improvements
 - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
 - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinuous to support changing PCS selection and PCS continuous mode.
- Bug Fixes
 - Fixed bug in non-blocking and EDMA transfer APIs that kStatus_InvalidArgument is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to kLPSPI_Busy by mistake causing following transfer can not start.
 - Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that LPSPI can not transfer large data using EDMA.
 - Fixed MISRA 17.7 issues.
 - Fixed variable overflow issue introduced by MISRA fix.
 - Fixed issue that rxFifoMaxBytes should be calculated according to transfer width rather than FIFO width.
 - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
 - Fixed in LPSPI_MasterTransferBlocking that master rxfifo may overflow in stall condition.
 - Eliminated IAR Pa082 warnings.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
 - Removed LPSPI_Reset from LPSPI_MasterInit and LPSPI_SlaveInit, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
 - Added dummy data set up API to allow users to configure the dummy data to be transferred.
 - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
 - Fixed the bug that the clock source should be divided by the PRESCALE setting in LPSPI_MasterSetDelayTimes function.
 - Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
 - Added #ifndef/#endif to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.
-

LPSPI_EDMA**[2.4.9]**

- Improvements
 - Removed unused code from LPSPI_SeparateEdmaReadData().

[2.4.8]

- Improvements
 - Added timeout for while loop in EDMA_LpspiMasterCallback() and EDMA_LpspiSlaveCallback().

[2.4.7]

- Bug Fixes
 - Add macro LPSPI_ALIGN_TCD_SIZE_MASK to align an address to edma_tcd_t size.

[2.4.6]

- Improvements
 - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.4.4]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
 - Supported 32K bytes transmit in DMA, improve the max datasize in LPSPI_MasterTransferEDMALite.

[2.4.2]

- Improvements
 - Added callback status in EDMA_LpspiMasterCallback and EDMA_LpspiSlaveCallback to check transferDone.

[2.4.1]

- Improvements
 - Add the TXMSK wait after TCR setting.

[2.4.0]

- Improvements
 - Separated LPSPI_MasterTransferEDMA functions to LP-SPI_MasterTransferPrepareEDMA and LPSPI_MasterTransferEDMALite to optimize the process of transfer.
-

LPTMR

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART**[2.10.0]**

- New Feature
 - Added support to configure RTS watermark.

[2.9.4]

- Improvements
 - Merged duplicate code.

[2.9.3]

- Improvements
 - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
 - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
 - Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.

- Deleted unused status flags `kLPUART_NoiseErrorInRxDataRegFlag` and `kLPUART_ParityErrorInRxDataRegFlag`, since firstly their function are the same as `kLPUART_NoiseErrorFlag` and `kLPUART_ParityErrorFlag`, secondly to obtain them one data word must be read out thus interfering with the receiving process.
- Fixed bug in `LPUART_GetStatusFlags` that the `STAT[LBKDIF]`, `STAT[MA1F]` and `STAT[MA2F]` should be soc specific.
- Fixed bug in `LPUART_ClearStatusFlags` that tx/rx FIFO is reset by mistake when clearing flags.
- Fixed bug in `LPUART_TransferHandleIRQ` that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs `LPUART_GetRxFifoCount/LPUART_GetTxFifoCount` to get rx/tx FIFO data count.
 - Added APIs `LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark` to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified `LPUART_TransferHandleIRQ` so that `txState` will be set to idle only when all data has been sent out to bus.
 - Modified `LPUART_TransferGetSendCount` so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for `kLPUART_TransmissionCompleteFlag` in `LPUART_WriteBlocking`, `LPUART_TransferHandleIRQ`, `LPUART_TransferSendDMACallback` and `LPUART_SendEDMACallback` to ensure all the data would be sent out to bus.
 - Rounded up the calculated `sbr` value in `LPUART_SetBaudRate` and `LPUART_Init` to achieve more accurate baudrate setting. Changed `osr` from `uint32_t` to `uint8_t` since `osr`'s biggest value is 31.
 - Modified `LPUART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using `LPUART_EnableTxDMA` and `LPUART_EnableRxDMA`.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `LPUART_TransferNonBlocking` function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.

- Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may have a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

MAU

[2.2.2]

- Bug fix
 - Fixed assert judgment.

[2.2.1]

- Improvements
 - Fixed CERT-C issues.

[2.2.0]

- New Features
 - Support indirect operation in low address.

[2.1.0]

- New Features
 - Add some CMSIS DSP functions.

[2.0.0]

- Initial version.
-

OPAMP

[2.0.0]

- Initial version.
-

OSTIMER

[2.2.5]

- Improvements
 - Support binary encoded ostimer.

[2.2.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.2.3]

- Improvements
 - Disable and clear pending interrupts before disabling the OSTIMER clock to avoid interrupts being executed when the clock is already disabled.

[2.2.2]

- Improvements
 - Support devices with different OSTIMER instance name.

[2.2.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.0]

- Improvements
 - Move the PMC operation out of the OSTIMER driver to board specific files.
 - Added low level APIs to control OSTIMER MATCH and interrupt.

[2.1.2]

- Bug Fixes
 - Fixed MISRA-2012 rule 10.8.

[2.1.1]

- Bug Fixes
 - removes the suffix 'n' for some register names and bit fields' names
- Improvements
 - Added HW CODE GRAY feature supported by CODE GRAY in SYSCTRL register group.

[2.1.0]

- Bug Fixes
 - Added a workaround to fix the issue that no interrupt was reported when user set smaller period.
 - Fixed violation of MISRA C-2012 rule 10.3 and 11.9.
- Improvements
 - Added return value for the two APIs to set match value.
 - * OSTIMER_SetMatchRawValue
 - * OSTIMER_SetMatchValue

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3, 14.4, 17.7.

[2.0.2]

- Improvements
 - Added support for OSTIMER0

[2.0.1]

- Improvements
 - Removed the software reset function out of the initialization API.
 - Enabled interrupt directly instead of enabling deep sleep interrupt. Users need to enable the deep sleep interrupt in application code if needed.

[2.0.0]

- Initial version.
-

PORT**[2.5.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4–11.3–11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

PWM

[2.9.0]

- Improvements
 - Support PWMX channel output for edge aligned PWM.
 - Forbid submodule 0 counter initialize with master sync and master reload mode.
 - Clarify kPWM_BusClock meaning.
 - Verify pulseCnt within 65535 when update period register.

[2.8.4]

- Improvements
 - Support workaround for ERR051989. This function helps realize no phase delay between submodule 0 and other submodule.

[2.8.3]

- Bug Fixes
 - Fixed MISRA C-2012 Rule 15.7

[2.8.2]

- Bug Fixes
 - Fixed warning conversion from ‘int’ to ‘uint16_t’ on API PWM_Init.
 - Fixed warning unused variable ‘reg’ on API PWM_SetPwmForceOutputToZero.

[2.8.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.8.0]

- Improvements
 - Added API PWM_UpdatePwmPeriodAndDutycycle to update the PWM signal's period and dutycycle for a PWM submodule.
 - Added API PWM_SetPeriodRegister and PWM_SetDutycycleRegister to merge duplicate code in API PWM_SetupPwm, PWM_UpdatePwmDutycycleHighAccuracy and PWM_UpdatePwmPeriodAndDutycycle

[2.7.1]

- Improvements
 - Supported UPDATE_MASK bit in MASK register.

[2.7.0]

- Improvements
 - Supported platforms which don't have Capture feature with channel A and B.
 - Supported platforms which don't have Submodule 3.
 - Added assert function in API PWM_SetPhaseDelay to prevent wrong argument.

[2.6.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.3.

[2.6.0]

- Improvements
 - Added API PWM_SetPhaseDelay to set the phase delay from the master sync signal of submodule 0.
 - Added API PWM_SetFilterSampleCountthe to set number of consecutive samples that must agree prior to the input filter.
 - Added API PWM_SetFilterSamplePeriod to set set the sampling period of the fault pin input filter.

[2.5.1]

- Bug Fixes
 - Fixed MISRA C-2012 rules: 10.1, 10.3, 10.4 , 10.6 and 10.8.
 - Fixed the issue that PWM_UpdatePwmDutycycle() can't update duty cycle status value correct.

[2.5.0]

- Improvements
 - Added API PWM_SetOouputToIdle to set pwm channel output to idle.
 - Added API PWM_GetPwmChannelState to get the pwm channel output duty cycle value.

- Added API PWM_SetPwmForceOutputToZero to set the pwm channel output to zero logic.
- Added API PWM_SetChannelOutput to set the pwm channel output state.
- Added API PWM_SetClockMode to set the value of the clock prescaler.
- Added API PWM_SetupPwmPhaseShift to set PWM which a special phase shift and 50% duty cycle.
- Added API PWM_SetVALxValue/PWM_GetVALxValue to set/get PWM VALs registers values directly.

[2.4.0]

- Improvements
 - Supported the PWM which can't work in wait mode.

[2.3.0]

- Improvements
 - Add PWM output enable&disbale API for SDK.
- Bug Fixes
 - Fixed changing channel B configuration when parameter is kPWM_PWMX and PWMX configuration is not supported yet.

[2.2.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.3, 10.4.
- Bug Fixes
 - Fixed the issue that PWM drivers computed VAL1 improperly.
- Improvements
 - Updated calculation accuracy of reloadValue in dutyCycleToReloadValue function.

[2.2.0]

- Improvements
 - Added new enumeration and two APIs to support enabling and disabling one or more PWM output triggers.
 - Added a new function to make the most of 16-bit resolution PWM.
 - Added one API to support updating fault status of PWM output.
 - Added one API to support PWM DMA write request.
 - Added three APIs to support PWM DMA capture read request.
 - Added one API to support get default fault config of PWM.
 - Added one API to support setting PWM fault disable mapping.

[2.1.0]

- Improvements
 - Moved the configuration of fault input filter into a new API to avoid be initialized multiple times.
- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fix rules, containing: rule-10.2, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-14.4, rule-16.4.

[2.0.1]

- Bug Fixes
 - Fixed the issue that PWM submodule may be initialized twice in function PWM_SetupPwm().

[2.0.0]

- Initial version.
-

ROMAPI**[2.0.1]**

- Add ROMAPI_BASE feature to support MCXA276.

[2.0.0]

- Initial version.
-

RTC**[2.4.0]**

- New features
 - Add support for RTC clock output.
 - Add support for RTC time seconds interrupt configuration.

[2.3.3]

- Bug Fixes
 - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
 - Handle errata 010716: Disable the counter before setting alarm register and then reen-able the counter.

[2.3.1]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
 - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
 - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
 - Refine _rtc_interrupt_enable order.

[2.2.1]

- Bug Fixes
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of bit field mask checking.
 - Fixed the issue of hard code in RTC_Init.

[2.2.0]

- Bug Fixes
 - Fixed MISRA C-2012 issue.
 - * Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
 - Fixed central repository code formatting issue.
- Improvements
 - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
 - Added feature macro check for many features.

[2.0.0]

- Initial version.
-

SMARTDMA

[2.13.2]

- Other Changes
 - Add more MCXN devices support.

[2.13.1]

- Other Changes
 - Add more MCXA devices support.

[2.13.0]

- New Features
 - Added MCXA keyscan firmware.
 - Added functions to control CTRL[EXF].

[2.12.0]

- New Features
 - Supported MCXA mculcd and camera functions.

[2.11.0]

- Improvements
 - Make the RT500 QSPI firmware can work with other display firmware in the same project.

[2.10.0]

- New Features
 - Added new camera APIs for MCXN SoCs to support more resolutions.

[2.9.1]

- New Features
 - Supported MCXN235, MCXN236.

[2.9.0]

- New Features
 - Supported MCXN camera functions.
 - Supported user to select individual firmware for MIPI or FLEXIO alone, or both.
 - Added new API of enabling DMA from FlexIO to a Buffer.
 - Added new APIs of setting MIPI-DSI to enter and exit ultra low power state.

[2.8.0]

- New Features
 - Supported converting the pixel data from RGB565 to RGB888.
 - Supported function to turn off certain pixel in a checker board pattern.

[2.7.0]

- New Features
 - Supported data transfer in 2-dimensional way.
 - Supported data transfer in XRGB8888 format and rotate 180 degree.
 - Supported to fill data in whenever there is room in MIPI controller's FIFO rather than using the tx FIFO in double buffered way.

[2.6.3]

- Bug Fixes
 - Fixed EZH_MIPIDSI_RGB565_DMA, EZH_MIPIDSI_RGB888_DMA, EZH_MIPIDSI_ARGB8888toRGB888_DMA issues that don't support some length.

[2.6.2]

- Bug Fixes
 - Fixed MISRA C-2012 issues: 8.4, 11.6, 17.7.

[2.6.1]

- Improvements
 - Optimized MIPI DSI APIs performance.

[2.6.0]

- Improvements
 - Optimized MIPI DSI APIs performance.
- New Features
 - Added new APIs to send MIPI DSI frame with 180 degree rotation.

[2.5.0]

- Improvements
 - Supported swap or don't swap the pixel byte before written to MIPI DSI FIFO.
 - Updated MIPI DSI firmware, make sure data has been sent out before calling callback function.

[2.4.0]

- Improvements
 - Added new APIs for MIPI DSI kSMARTDMA_MIPI_XRGB2RGB_DMA.

[2.3.0]

- Improvements
 - Added new APIs for FlexIO one SHIFTBUF, kSMARTDMA_FlexIO_DMA_ONELANE.
- Bug Fixes
 - Fixed kSMARTDMA_MIPI_RGB565_DMA color bias issue.

[2.2.0]

- Improvements
 - Added new APIs for MIPI DSI, kSMARTDMA_MIPI_RGB565_DMA and kSMARTDMA_MIPI_RGB888_DMA.
 - Supported install firmware and callback function dynamically.

[2.1.0]

- Improvements
 - Removed test APIs, including kSMARTDMA_LightOn, kSMARTDMA_LightOff, kSMARTDMA_Notify, and kSMARTDMA_Test.
 - Added new APIs, including kSMARTDMA_FlexIO_DMA_Reverse, kSMARTDMA_FlexIO_DMA_ARGB2RGB, kSMARTDMA_FlexIO_DMA_ARGB2RGB_Endian_Swap, and kSMARTDMA_FlexIO_DMA_ARGB2RGB_Endian_Swap_Reverse.

[2.0.0]

- Initial version.
-

MCX_SPC**[2.8.1]**

- Improvements
 - Fixed cert_int31_c_violation of SPC_GetVoltageDetectStatusFlag(), SPC_GetExternalDomainsStatus() and SPC_SetDCDCBurstConfig.

[2.8.0]

- New Features
 - Updated MCX_SPC driver for compatibility with SoCs without PD_STATUS[PWR_REQ_STATUS].

[2.7.0]

- New Features
 - Added new function to unretain RAM array.

[2.6.0]

- Bug Fixes
 - The enumeration `kSPC_DeepPowerDownWithSysClockOff` should be `0x8U`.
- New Features
 - Added functions to get the last low-power mode that the power domain requested.

[2.5.0]

- Improvements
 - Updated `SPC_SetLowPowerModeCoreLDORegulatorConfig()` with adding check that `LP_CFG[CORELDO_VDD_LVL]` only be updated when `CORELDO` is in normal driver strength in active mode.
 - Updated `SPC_SetLowPowerModeRegulatorsConfig()` with adding check the if `DCDC` voltage level set as retention mode, `CORELDO` low voltage detection must be disabled.
 - Updated `spc_analog_module_control` with adding `Opamp3` support.
- New Features
 - Added functions to mask/unmask voltage detections in active mode.

[2.4.2]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.4.1]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.4.0]

- Improvements
 - Refined APIs to set regulators, the input parameters will be check firstly before setting register.
 - Improved APIs' document.
 - Removed software check for `DCDC`'s settings since there is not hardware restrictions for `DCDC`.
 - Added new APIs to check if glitch detector is enabled in active/low power mode.
 - Added new APIs for `DCDC` burst feature, make it more flexible to use.
 - Added new API to enable/disable `DCDC` bleed resistor.
 - Set functions of `VD_SYS_CFG[LVSEL]` configuration as deprecated, since this bit filed is reserved for all devices.
 - Updated details of `spc_core_ldo_voltage_level_t` to align with description of latest RM, added comments to reminder users that the retention voltage is reserved in some devices.

[2.3.0]

- New Features
 - Updated glitch detect API to support devices which do not have aGDET

[2.2.1]

- Bug Fixes
 - Fixed an issue of SPC_SetActiveModeRegulatorsConfig() which will cause LVD in case of setting DCDC and CORE LDO into higher voltage level.

[2.2.0]

- New Features
 - Added some macros to support some devices(such as MCXA family) do not equipped DCDC, SYS_LDO and so on.
 - Added new function SPC_EnableSRAMLdOLowPowerModeIREF(), SPC_TrimSRAMLdoRefVoltage(), SPC_EnableSRAMLdo() to support some devices(such as MCXA family) that support control of SRAM_LDO.
 - Fixed violation of MISRA C-2012 rule 17.7.
 - Fixed an issue in SPC_SetLowPowerModeRegulatorsConfig() function that set ACTIVE_CFG register by mistake.

[2.1.0]

- Improvements
 - Added new functions to set regulators' voltage level and drive strength individually.
 - Updated SPC_SetActiveModeRegulatorsConfig() and SPC_SetLowPowerModeRegulatorsConfig() based on new added functions.

[2.0.1]

- Bug Fixes
 - Fixed a bug that external burst not working properly.
 - Fixed a bug that is SPC has VDD_DS the voltage is not configured correctly.

[2.0.0]

- Initial version.
-

TRDC**[2.2.1]**

- Bug Fixes:
 - Fix MISRA violations.

[2.2.0]

- New Features:
 - Supported SoCs that do not have all TRDC modules.

[2.1.0]

- Bug Fixes:
 - Fix MISRA violations.
 - Fixed wrong operation of domain mask in TRDC_MbcNseClearAll and TRDC_MrcDomainNseClear.

[2.0.0]

- Initial version.
-

UTICK

[2.0.5]

- Improvements
 - Improved for SOC RW610.

[2.0.4]

- Bug Fixes
 - Fixed compile fail issue of no-supporting PD configuration in utick driver.

[2.0.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 8.4, 14.4, 17.7

[2.0.2]

- Added new feature definition macro to enable/disable power control in drivers for some devices have no power control function.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

MCX_VBAT

[2.3.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 low impact rules.

[2.3.0]

- Improvements
 - OSCCTLA[FINE_AMP_GAIN] is reserved, added new macro to support this change.
 - Defined VBAT_LDORAMC_RET in case of this macro is not defined in header file.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.8.

[2.2.0]

- Improvements
 - Added macros to support some devices(such as MCXA family) that do not support OSC control, LDO control, bandgap timer, and tamper.

[2.1.0]

- New features
 - Added functions to support tamper and clock monitor.

[2.0.0]

- Initial version.
-

WAKETIMER

[2.0.1]

- Bug Fix
 - MISRA C-2012 issue fixed: rule 8.2, 8.8, 10.1, 10.4.

[2.0.0]

- Initial version.
-

WUU

[2.4.0]

- New Features
 - Added WUU_ClearExternalWakeupPinsConfig() to clear settings of PDC and PE register.

[2.3.0]

- New Features
 - Added `WUU_ClearInternalWakeUpModulesConfig()` to clear settings of DM and ME register.

[2.2.1]

- Bug Fixes
 - Fixed `WUU_SetPinFilterConfig()` unable to set edge detection of pin filter config.
 - Fixed wrong macro used in `WUU_GetPinFilterFlag()` function.

[2.2.0]

- New Features
 - Added the `WUU_GetExternalWakeupPinFlag()` and `WUU_ClearExternalWakeupPinFlag()` function .

[2.1.0]

- New Features
 - Added the `WUU_GetModuleInterruptFlag()` function to support the devices that equipped MF register.

[2.0.0]

- Initial version.
-

WWDT

[2.1.10]

- Bug Fixes
 - Check `WWDT_RSTS` instead of `FSL_FEATURE_WWDT_HAS_NO_RESET` to determine whether the peripheral can be reset.

[2.1.9]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rule 10.4.

[2.1.8]

- Improvements
 - Updated the “`WWDT_Init`” API to add wait operation. Which can avoid the TV value read by CPU still be 0xFF (reset value) after `WWDT_Init` function returns.

[2.1.7]

- Bug Fixes
 - Fixed the issue that the watchdog reset event affected the system from PMC.
 - Fixed the issue of setting watchdog WDPROTECT field without considering the backwards compatibility.
 - Fixed the issue of clearing bit fields by mistake in the function of WWDT_ClearStatusFlags.

[2.1.5]

- Bug Fixes
 - deprecated a unusable API in WWWD driver.
 - * WWDT_Disable

[2.1.4]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rules Rule 10.1, 10.3, 10.4 and 11.9.
 - Fixed the issue of the inseparable process interrupted by other interrupt source.
 - * WWDT_Init

[2.1.3]

- Bug Fixes
 - Fixed legacy issue when initializing the MOD register.

[2.1.2]

- Improvements
 - Updated the “WWDT_ClearStatusFlags” API and “WWDT_GetStatusFlags” API to match QN9090. WDTOF is not set in case of WD reset. Get info from PMC instead.

[2.1.1]

- New Features
 - Added new feature definition macro for devices which have no LCOK control bit in MOD register.
 - Implemented delay/retry in WWDT driver.

[2.1.0]

- Improvements
 - Added new parameter in configuration when initializing WWDT module. This parameter, which must be set, allows the user to deliver the WWDT clock frequency.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MCXA344](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 MCU Boot

[mcuboot_opensource](#)

1.7.2 FreeMASTER

[freemaster](#)

1.7.3 FreeRTOS

[FreeRTOS](#)

1.7.4 File systemFatfs

[fatfs](#)

Chapter 2

MCXA344

2.1 AOI: Crossbar AND/OR/INVERT Driver

`void AOI_Init(AOI_Type *base)`

Initializes an AOI instance for operation.

This function un-gates the AOI clock.

Parameters

- `base` – AOI peripheral address.

`void AOI_Deinit(AOI_Type *base)`

Deinitializes an AOI instance for operation.

This function shutdowns AOI module.

Parameters

- `base` – AOI peripheral address.

`void AOI_GetEventLogicConfig(AOI_Type *base, aoi_event_t event, aoi_event_config_t *config)`

Gets the Boolean evaluation associated.

This function returns the Boolean evaluation associated.

Example:

```
aoi_event_config_t demoEventLogicStruct;  
  
AOI_GetEventLogicConfig(AOI, kAOI_Event0, &demoEventLogicStruct);
```

Parameters

- `base` – AOI peripheral address.
- `event` – Index of the event which will be set of type `aoi_event_t`.
- `config` – Selected input configuration .

`void AOI_SetEventLogicConfig(AOI_Type *base, aoi_event_t event, const aoi_event_config_t *eventConfig)`

Configures an AOI event.

This function configures an AOI event according to the `aoiEventConfig` structure. This function configures all inputs (A, B, C, and D) of all product terms (0, 1, 2, and 3) of a desired event.

Example:

```
aoi_event_config_t demoEventLogicStruct;

demoEventLogicStruct.PT0AC = kAOI_InvInputSignal;
demoEventLogicStruct.PT0BC = kAOI_InputSignal;
demoEventLogicStruct.PT0CC = kAOI_LogicOne;
demoEventLogicStruct.PT0DC = kAOI_LogicOne;

demoEventLogicStruct.PT1AC = kAOI_LogicZero;
demoEventLogicStruct.PT1BC = kAOI_LogicOne;
demoEventLogicStruct.PT1CC = kAOI_LogicOne;
demoEventLogicStruct.PT1DC = kAOI_LogicOne;

demoEventLogicStruct.PT2AC = kAOI_LogicZero;
demoEventLogicStruct.PT2BC = kAOI_LogicOne;
demoEventLogicStruct.PT2CC = kAOI_LogicOne;
demoEventLogicStruct.PT2DC = kAOI_LogicOne;

demoEventLogicStruct.PT3AC = kAOI_LogicZero;
demoEventLogicStruct.PT3BC = kAOI_LogicOne;
demoEventLogicStruct.PT3CC = kAOI_LogicOne;
demoEventLogicStruct.PT3DC = kAOI_LogicOne;

AOI_SetEventLogicConfig(AOI, kAOI_Event0, demoEventLogicStruct);
```

Parameters

- base – AOI peripheral address.
- event – Event which will be configured of type `aoi_event_t`.
- eventConfig – Pointer to type `aoi_event_config_t` structure. The user is responsible for filling out the members of this structure and passing the pointer to this function.

FSL_AOI_DRIVER_VERSION

Version 2.0.2.

enum _aoi_input_config

AOI input configurations.

The selection item represents the Boolean evaluations.

Values:

enumerator kAOI_LogicZero

Forces the input to logical zero.

enumerator kAOI_InputSignal

Passes the input signal.

enumerator kAOI_InvInputSignal

Inverts the input signal.

enumerator kAOI_LogicOne

Forces the input to logical one.

enum _aoi_event

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

Values:

enumerator kAOI_Event0

Event 0 index

enumerator kAOI_Event1

Event 1 index

enumerator kAOI_Event2

Event 2 index

enumerator kAOI_Event3

Event 3 index

typedef enum *_aoi_input_config* aoi_input_config_t

AOI input configurations.

The selection item represents the Boolean evaluations.

typedef enum *_aoi_event* aoi_event_t

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

typedef struct *_aoi_event_config* aoi_event_config_t

AOI event configuration structure.

Defines structure *_aoi_event_config* and use the *AOI_SetEventLogicConfig()* function to make whole event configuration.

AOI

AOI peripheral address

struct *_aoi_event_config*

#include <fsl_aoi.h> AOI event configuration structure.

Defines structure *_aoi_event_config* and use the *AOI_SetEventLogicConfig()* function to make whole event configuration.

Public Members

aoi_input_config_t PT0AC

Product term 0 input A

aoi_input_config_t PT0BC

Product term 0 input B

aoi_input_config_t PT0CC

Product term 0 input C

aoi_input_config_t PT0DC

Product term 0 input D

aoi_input_config_t PT1AC

Product term 1 input A

aoi_input_config_t PT1BC

Product term 1 input B

aoi_input_config_t PT1CC

Product term 1 input C

aoi_input_config_t PT1DC

Product term 1 input D

aoi_input_config_t PT2AC

Product term 2 input A

aoi_input_config_t PT2BC
Product term 2 input B

aoi_input_config_t PT2CC
Product term 2 input C

aoi_input_config_t PT2DC
Product term 2 input D

aoi_input_config_t PT3AC
Product term 3 input A

aoi_input_config_t PT3BC
Product term 3 input B

aoi_input_config_t PT3CC
Product term 3 input C

aoi_input_config_t PT3DC
Product term 3 input D

2.2 CACHE: LPCAC CACHE Memory Controller

`static inline void L1CACHE_EnableCodeCache(void)`
Enables the processor code bus cache.

`static inline void L1CACHE_DisableCodeCache(void)`
Disables the processor code bus cache.

`static inline void L1CACHE_InvalidateCodeCache(void)`
Clears cache.

`static inline void L1CACHE_EnableAllocation(void)`
Enables allocation.

`static inline void L1CACHE_DisableAllocation(void)`
Disables allocation.

`static inline void L1CACHE_EnableParity(void)`
Enables parity.

`static inline void L1CACHE_DisableParity(void)`
Disable parity.

`FSL_CACHE_LPCAC_DRIVER_VERSION`
cache driver version

2.3 CDOG

`status_t CDOG_Init(CDOG_Type *base, cdog_config_t *conf)`
Initialize CDOG.
This function initializes CDOG block and setting.

Parameters

- `base` – CDOG peripheral base address
- `conf` – CDOG configuration structure

Returns

Status of the init operation

void CDOG_Deinit(CDOG_Type *base)

Deinitialize CDOG.

This function deinitializes CDOG secure counter.

Parameters

- base – CDOG peripheral base address

void CDOG_GetDefaultConfig(*cdog_config_t* *conf)

Sets the default configuration of CDOG.

This function initialize CDOG config structure to default values.

Parameters

- conf – CDOG configuration structure

void CDOG_Stop(CDOG_Type *base, uint32_t stop)

Stops secure counter and instruction timer.

This function stops instruction timer and secure counter. This also change state of CDOG to IDLE.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter

void CDOG_Start(CDOG_Type *base, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in RELOAD and START registers for instruction timer and secure counter

Parameters

- base – CDOG peripheral base address
- reload – reload value
- start – start value

void CDOG_Check(CDOG_Type *base, uint32_t check)

Checks secure counter.

This function compares stop value in handler with secure counter value by writing to RELOAD register.

Parameters

- base – CDOG peripheral base address
- check – expected (stop) value

void CDOG_Set(CDOG_Type *base, uint32_t stop, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in STOP, RELOAD and START registers for instruction timer and secure counter.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter
- reload – reload value for instruction timer

- start – start value for secure timer

void CDOG_Add(CDOG_Type *base, uint32_t add)

Add value to secure counter.

This function add specified value to secure counter.

Parameters

- base – CDOG peripheral base address.
- add – Value to be added.

void CDOG_Add1(CDOG_Type *base)

Add 1 to secure counter.

This function add 1 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add16(CDOG_Type *base)

Add 16 to secure counter.

This function add 16 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add256(CDOG_Type *base)

Add 256 to secure counter.

This function add 256 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub(CDOG_Type *base, uint32_t sub)

brief Subtract value to secure counter

This function subtract specified value to secure counter.

param base CDOG peripheral base address. param sub Value to be subtracted.

void CDOG_Sub1(CDOG_Type *base)

Subtract 1 from secure counter.

This function subtract specified 1 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub16(CDOG_Type *base)

Subtract 16 from secure counter.

This function subtract specified 16 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub256(CDOG_Type *base)

Subtract 256 from secure counter.

This function subtract specified 256 from secure counter.

Parameters

- base – CDOG peripheral base address.

`void CDOG_WritePersistent(CDOG_Type *base, uint32_t value)`

Set the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.
- value – The value to be written.

`uint32_t CDOG_ReadPersistent(CDOG_Type *base)`

Get the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.

Returns

The persistent word.

`FSL_CDOG_DRIVER_VERSION`

Defines CDOG driver version 2.1.3.

Change log:

- Version 2.1.3
 - Re-design multiple instance IRQs and Clocks
 - Add fix for RESTART command errata
- Version 2.1.2
 - Support multiple IRQs
 - Fix default CONTROL values
- Version 2.1.1
 - Remove bit CONTROL[CONTROL_CTRL]
- Version 2.1.0
 - Rename CWT to CDOG
- Version 2.0.2
 - Fix MISRA-2012 issues
- Version 2.0.1
 - Fix doxygen issues
- Version 2.0.0
 - initial version

`enum __cdog_debug_Action_ctrl_enum`

Values:

enumerator `kCDOG_DebugHaltCtrl_Run`

enumerator `kCDOG_DebugHaltCtrl_Pause`

`enum __cdog_irq_pause_ctrl_enum`

Values:

enumerator `kCDOG_IrqPauseCtrl_Run`

enumerator `kCDOG_IrqPauseCtrl_Pause`

```
enum __cdog_fault_ctrl_enum
    Values:
    enumerator kCDOG_FaultCtrl_EnableReset
    enumerator kCDOG_FaultCtrl_EnableInterrupt
    enumerator kCDOG_FaultCtrl_NoAction

enum __code_lock_ctrl_enum
    Values:
    enumerator kCDOG_LockCtrl_Lock
    enumerator kCDOG_LockCtrl_Unlock

typedef uint32_t secure_counter_t

SC_ADD(add)

SC_ADD1

SC_ADD16

SC_ADD256

SC_SUB(sub)

SC_SUB1

SC_SUB16

SC_SUB256

SC_CHECK(val)

struct cdog_config_t
    #include <fsl_cdog.h>
```

2.4 Clock Driver

```
enum _clock_ip_name
    Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.
    Values:
    enumerator kCLOCK_InputMux
        Clock gate name: INPUTMUX0
    enumerator kCLOCK_GateINPUTMUX0
        Clock gate name: INPUTMUX0
    enumerator kCLOCK_GateCTIMER0
        Clock gate name: CTIMER0
    enumerator kCLOCK_GateCTIMER1
        Clock gate name: CTIMER1
    enumerator kCLOCK_GateCTIMER2
        Clock gate name: CTIMER2
```

enumerator kCLOCK_GateFREQME
Clock gate name: FREQME

enumerator kCLOCK_GateUTICK0
Clock gate name: UTICK0

enumerator kCLOCK_GateWWDT0
Clock gate name: WWDT0

enumerator kCLOCK_Smartdma
Clock gate name: SMARTDMA0

enumerator kCLOCK_GateDMA0
Clock gate name: DMA0

enumerator kCLOCK_GateAOI0
Clock gate name: AOI0

enumerator kCLOCK_GateCRC0
Clock gate name: CRC0

enumerator kCLOCK_Crc0
Clock gate name: CRC0

enumerator kCLOCK_GateEIM0
Clock gate name: EIM0

enumerator kCLOCK_GateERM0
Clock gate name: ERM0

enumerator kCLOCK_GateFMC
Clock gate name: FMC

enumerator kCLOCK_GateAOI1
Clock gate name: AOI1

enumerator kCLOCK_GateLPI2C0
Clock gate name: LPI2C0

enumerator kCLOCK_GateLPI2C1
Clock gate name: LPI2C1

enumerator kCLOCK_GateLPSPI0
Clock gate name: LPSPI0

enumerator kCLOCK_GateLPSPI1
Clock gate name: LPSPI1

enumerator kCLOCK_GateLPUART0
Clock gate name: LPUART0

enumerator kCLOCK_GateLPUART1
Clock gate name: LPUART1

enumerator kCLOCK_GateLPUART2
Clock gate name: LPUART2

enumerator kCLOCK_GateLPUART3
Clock gate name: LPUART3

enumerator kCLOCK_GateQDC0
Clock gate name: QDC0

enumerator kCLOCK_GateQDC1
Clock gate name: QDC1

enumerator kCLOCK_GateFLEXPWM0
Clock gate name: FLEXPWM0

enumerator kCLOCK_GateFLEXPWM1
Clock gate name: FLEXPWM1

enumerator kCLOCK_GateOSTIMER0
Clock gate name: OSTIMER0

enumerator kCLOCK_GateADC0
Clock gate name: ADC0

enumerator kCLOCK_GateADC1
Clock gate name: ADC1

enumerator kCLOCK_GateCMP0
Clock gate name: CMP0

enumerator kCLOCK_GateCMP1
Clock gate name: CMP1

enumerator kCLOCK_GateCMP2
Clock gate name: CMP2

enumerator kCLOCK_GateOPAMP0
Clock gate name: OPAMP0

enumerator kCLOCK_GateOPAMP1
Clock gate name: OPAMP1

enumerator kCLOCK_GateOPAMP2
Clock gate name: OPAMP2

enumerator kCLOCK_GatePORT0
Clock gate name: PORT0

enumerator kCLOCK_GatePORT1
Clock gate name: PORT1

enumerator kCLOCK_GatePORT2
Clock gate name: PORT2

enumerator kCLOCK_GatePORT3
Clock gate name: PORT3

enumerator kCLOCK_GatePORT4
Clock gate name: PORT4

enumerator kCLOCK_GateFLEXCAN0
Clock gate name: FLEXCAN0

enumerator kCLOCK_GateRAMA
Clock gate name: RAMA

enumerator kCLOCK_GateRAMB
Clock gate name: RAMB

enumerator kCLOCK_GateRAMC
Clock gate name: RAMC

enumerator kCLOCK_GateGPIO0

Clock gate name: GPIO0

enumerator kCLOCK_GateGPIO1

Clock gate name: GPIO1

enumerator kCLOCK_GateGPIO2

Clock gate name: GPIO2

enumerator kCLOCK_GateGPIO3

Clock gate name: GPIO3

enumerator kCLOCK_GateGPIO4

Clock gate name: GPIO4

enumerator kCLOCK_GateMAU0

Clock gate name: MAU0

enumerator kCLOCK_GateROMC

Clock gate name: ROMC

enumerator kCLOCK_GatePWM0SM0

Clock gate name: PWM0 SM0

enumerator kCLOCK_GatePWM0SM1

Clock gate name: PWM0 SM1

enumerator kCLOCK_GatePWM0SM2

Clock gate name: PWM0 SM2

enumerator kCLOCK_GatePWM0SM3

Clock gate name: PWM0 SM3

enumerator kCLOCK_GatePWM1SM0

Clock gate name: PWM1 SM0

enumerator kCLOCK_GatePWM1SM1

Clock gate name: PWM1 SM1

enumerator kCLOCK_GatePWM1SM2

Clock gate name: PWM1 SM2

enumerator kCLOCK_GatePWM1SM3

Clock gate name: PWM1 SM3

enumerator kCLOCK_GateNotAvail

Clock gate name: None

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_MainClk

MAIN_CLK

enumerator kCLOCK_CoreSysClk

Core/system clock(CPU_CLK)

enumerator kCLOCK_SYSTEM_CLK

SYSTEM clock/AHB_BUS

enumerator kCLOCK_BusClk
SYSTEM clock divided by 2

enumerator kCLOCK_ExtClk
External Clock

enumerator kCLOCK_FroHf
FRO192

enumerator kCLOCK_FroHfDiv
Divided by FRO192

enumerator kCLOCK_Clk45M
CLK45M

enumerator kCLOCK_Fro12M
FRO12M

enumerator kCLOCK_Fro12MDiv
FRO12MDiv

enumerator kCLOCK_Clk1M
CLK1M

enumerator kCLOCK_Fro16K
FRO16K

enumerator kCLOCK_Clk16K0
CLK16K[0]

enumerator kCLOCK_Clk16K1
CLK16K[1]

enumerator kCLOCK_SLOW_CLK
SYSTEM_CLK divided by 6

enum _clock_select_name
Clock name used to get clock frequency.

Values:

enumerator kCLOCK_SelCTIMER0
CTIMER0 clock selection

enumerator kCLOCK_SelCTIMER1
CTIMER1 clock selection

enumerator kCLOCK_SelCTIMER2
CTIMER2 clock selection

enumerator kCLOCK_SelLPI2C0
LPI2C0 clock selection

enumerator kCLOCK_SelLPI2C1
LPI2C1 clock selection

enumerator kCLOCK_SelLPSPi0
LPSPi0 clock selection

enumerator kCLOCK_SelLPSPi1
LPSPi1 clock selection

enumerator kCLOCK_SelLPUART0
LPUART0 clock selection

enumerator kCLOCK_SelLPUART1
LPUART1 clock selection

enumerator kCLOCK_SelLPUART2
LPUART2 clock selection

enumerator kCLOCK_SelLPUART3
LPUART3 clock selection

enumerator kCLOCK_SelLPTMR0
LPTMR0 clock selection

enumerator kCLOCK_SelOSTIMER0
OSTIMER0 clock selection

enumerator kCLOCK_SelADC
ADC clock selection

enumerator kCLOCK_SelCMP0_RR
CMP0_RR clock selection

enumerator kCLOCK_SelCMP1_RR
CMP1_RR clock selection

enumerator kCLOCK_SelCMP2_RR
CMP2_RR clock selection

enumerator kCLOCK_SelFLEXCAN0
FLEXCAN0 clock selection

enumerator kCLOCK_SelTRACE
TRACE clock selection

enumerator kCLOCK_SelCLKOUT
CLKOUT clock selection

enumerator kCLOCK_SelSCGSCS
SCG SCS clock selection

enumerator kCLOCK_SelMax
MAX clock selection

enum _clock_attach_id

The enumerator of clock attach Id.

Values:

enumerator kCLK_IN_to_MAIN_CLK
Attach clk_in to MAIN_CLK.

enumerator kFRO12M_to_MAIN_CLK
Attach FRO_12M to MAIN_CLK.

enumerator kFRO_HF_to_MAIN_CLK
Attach FRO_HF to MAIN_CLK.

enumerator kCLK_16K_to_MAIN_CLK
Attach CLK_16K[1] to MAIN_CLK.

enumerator kNONE_to_MAIN_CLK
Attach NONE to MAIN_CLK.

enumerator kFRO_LF_DIV_to_CTIMER0
Attach FRO_LF_DIV to CTIMER0.

enumerator kFRO_HF_to_CTIMER0
Attach FRO_HF to CTIMER0.

enumerator kCLK_IN_to_CTIMER0
Attach CLK_IN to CTIMER0.

enumerator kCLK_16K_to_CTIMER0
Attach CLK_16K to CTIMER0.

enumerator kCLK_1M_to_CTIMER0
Attach CLK_1M to CTIMER0.

enumerator kNONE_to_CTIMER0
Attach NONE to CTIMER0.

enumerator kFRO_LF_DIV_to_CTIMER1
Attach FRO_LF_DIV to CTIMER1.

enumerator kFRO_HF_to_CTIMER1
Attach FRO_HF to CTIMER1.

enumerator kCLK_IN_to_CTIMER1
Attach CLK_IN to CTIMER1.

enumerator kCLK_16K_to_CTIMER1
Attach CLK_16K to CTIMER1.

enumerator kCLK_1M_to_CTIMER1
Attach CLK_1M to CTIMER1.

enumerator kNONE_to_CTIMER1
Attach NONE to CTIMER1.

enumerator kFRO_LF_DIV_to_CTIMER2
Attach FRO_LF_DIV to CTIMER2.

enumerator kFRO_HF_to_CTIMER2
Attach FRO_HF to CTIMER2.

enumerator kCLK_IN_to_CTIMER2
Attach CLK_IN to CTIMER2.

enumerator kCLK_16K_to_CTIMER2
Attach CLK_16K to CTIMER2.

enumerator kCLK_1M_to_CTIMER2
Attach CLK_1M to CTIMER2.

enumerator kNONE_to_CTIMER2
Attach NONE to CTIMER2.

enumerator kFRO_HF_to_FLEXCAN0
Attach FRO_HF to FLEXCAN0.

enumerator kFRO_HF_DIV_to_FLEXCAN0
Attach FRO_HF_DIV to FLEXCAN0.

enumerator kCLK_IN_to_FLEXCAN0

Attach CLK_IN to FLEXCAN0.

enumerator kNONE_to_FLEXCAN0

Attach NONE to FLEXCAN0.

enumerator kFRO_LF_DIV_to_LPI2C0

Attach FRO_LF_DIV to LPI2C0.

enumerator kFRO_HF_DIV_to_LPI2C0

Attach FRO_HF_DIV to LPI2C0.

enumerator kCLK_IN_to_LPI2C0

Attach CLK_IN to LPI2C0.

enumerator kCLK_1M_to_LPI2C0

Attach CLK_1M to LPI2C0.

enumerator kNONE_to_LPI2C0

Attach NONE to LPI2C0.

enumerator kFRO_LF_DIV_to_LPI2C1

Attach FRO_LF_DIV to LPI2C1.

enumerator kFRO_HF_DIV_to_LPI2C1

Attach FRO_HF_DIV to LPI2C1.

enumerator kCLK_IN_to_LPI2C1

Attach CLK_IN to LPI2C1.

enumerator kCLK_1M_to_LPI2C1

Attach CLK_1M to LPI2C1.

enumerator kNONE_to_LPI2C1

Attach NONE to LPI2C1.

enumerator kFRO_LF_DIV_to_LPSPi0

Attach FRO_LF_DIV to LPSPi0.

enumerator kFRO_HF_DIV_to_LPSPi0

Attach FRO_HF_DIV to LPSPi0.

enumerator kCLK_IN_to_LPSPi0

Attach CLK_IN to LPSPi0.

enumerator kCLK_1M_to_LPSPi0

Attach CLK_1M to LPSPi0.

enumerator kNONE_to_LPSPi0

Attach NONE to LPSPi0.

enumerator kFRO_LF_DIV_to_LPSPi1

Attach FRO_LF_DIV to LPSPi1.

enumerator kFRO_HF_DIV_to_LPSPi1

Attach FRO_HF_DIV to LPSPi1.

enumerator kCLK_IN_to_LPSPi1

Attach CLK_IN to LPSPi1.

enumerator kCLK_1M_to_LPSPi1

Attach CLK_1M to LPSPi1.

enumerator kNONE_to_LPSP11
Attach NONE to LPSP11.

enumerator kFRO_LF_DIV_to_LPUART0
Attach FRO_LF_DIV to LPUART0.

enumerator kFRO_HF_DIV_to_LPUART0
Attach FRO_HF_DIV to LPUART0.

enumerator kCLK_IN_to_LPUART0
Attach CLK_IN to LPUART0.

enumerator kCLK_16K_to_LPUART0
Attach CLK_16K to LPUART0.

enumerator kCLK_1M_to_LPUART0
Attach CLK_1M to LPUART0.

enumerator kNONE_to_LPUART0
Attach NONE to LPUART0.

enumerator kFRO_LF_DIV_to_LPUART1
Attach FRO_LF_DIV to LPUART1.

enumerator kFRO_HF_DIV_to_LPUART1
Attach FRO_HF_DIV to LPUART1.

enumerator kCLK_IN_to_LPUART1
Attach CLK_IN to LPUART1.

enumerator kCLK_16K_to_LPUART1
Attach CLK_16K to LPUART1.

enumerator kCLK_1M_to_LPUART1
Attach CLK_1M to LPUART1.

enumerator kNONE_to_LPUART1
Attach NONE to LPUART1.

enumerator kFRO_LF_DIV_to_LPUART2
Attach FRO_LF_DIV to LPUART2.

enumerator kFRO_HF_DIV_to_LPUART2
Attach FRO_HF_DIV to LPUART2.

enumerator kCLK_IN_to_LPUART2
Attach CLK_IN to LPUART2.

enumerator kCLK_16K_to_LPUART2
Attach CLK_16K to LPUART2.

enumerator kCLK_1M_to_LPUART2
Attach CLK_1M to LPUART2.

enumerator kNONE_to_LPUART2
Attach NONE to LPUART2.

enumerator kFRO_LF_DIV_to_LPUART3
Attach FRO_LF_DIV to LPUART2.

enumerator kFRO_HF_DIV_to_LPUART3
Attach FRO_HF_DIV to LPUART2.

enumerator kCLK_IN_to_LPUART3

Attach CLK_IN to LPUART2.

enumerator kCLK_16K_to_LPUART3

Attach CLK_16K to LPUART2.

enumerator kCLK_1M_to_LPUART3

Attach CLK_1M to LPUART2.

enumerator kNONE_to_LPUART3

Attach NONE to LPUART2.

enumerator kFRO_LF_DIV_to_LPTMR0

Attach FRO_LF_DIV to LPTMR0.

enumerator kFRO_HF_DIV_to_LPTMR0

Attach FRO_HF_DIV to LPTMR0.

enumerator kCLK_IN_to_LPTMR0

Attach CLK_IN to LPTMR0.

enumerator kCLK_1M_to_LPTMR0

Attach CLK_1M to LPTMR0.

enumerator kNONE_to_LPTMR0

Attach NONE to LPTMR0.

enumerator kCLK_16K_to_OSTIMER

Attach FRO16K to OSTIMER0.

enumerator kCLK_1M_to_OSTIMER

Attach CLK_1M to OSTIMER0.

enumerator kNONE_to_OSTIMER

Attach NONE to OSTIMER0.

enumerator kFRO_LF_DIV_to_ADC

Attach FRO_LF_DIV to ADC.

enumerator kFRO_HF_to_ADC

Attach FRO_HF to ADC.

enumerator kCLK_IN_to_ADC

Attach CLK_IN to ADC.

enumerator kCLK_1M_to_ADC

Attach CLK_1M to ADC.

enumerator kNONE_to_ADC

Attach NONE to ADC.

enumerator kFRO_LF_DIV_to_CMP0

Attach FRO_LF_DIV to CMP0.

enumerator kFRO_HF_DIV_to_CMP0

Attach FRO_HF_DIV to CMP0.

enumerator kCLK_IN_to_CMP0

Attach CLK_IN to CMP0.

enumerator kCLK_1M_to_CMP0

Attach CLK_1M to CMP0.

enumerator kNONE_to_CMP0
Attach NONE to CMP0.

enumerator kFRO_LF_DIV_to_CMP1
Attach FRO_LF_DIV to CMP1.

enumerator kFRO_HF_DIV_to_CMP1
Attach FRO_HF_DIV to CMP1.

enumerator kCLK_IN_to_CMP1
Attach CLK_IN to CMP1.

enumerator kCLK_1M_to_CMP1
Attach CLK_1M to CMP1.

enumerator kNONE_to_CMP1
Attach NONE to CMP1.

enumerator kFRO_LF_DIV_to_CMP2
Attach FRO_LF_DIV to CMP2.

enumerator kFRO_HF_DIV_to_CMP2
Attach FRO_HF_DIV to CMP2.

enumerator kCLK_IN_to_CMP2
Attach CLK_IN to CMP2.

enumerator kCLK_1M_to_CMP2
Attach CLK_1M to CMP2.

enumerator kNONE_to_CMP2
Attach NONE to CMP2.

enumerator kCPU_CLK_to_TRACE
Attach CPU_CLK to TRACE.

enumerator kCLK_1M_to_TRACE
Attach CLK_1M to TRACE.

enumerator kCLK_16K_to_TRACE
Attach CLK_16K to TRACE.

enumerator kNONE_to_TRACE
Attach NONE to TRACE.

enumerator kFRO12M_to_CLKOUT
Attach FRO12M to CLKOUT.

enumerator kFRO_HF_DIV_to_CLKOUT
Attach FRO_HF_DIV to CLKOUT.

enumerator kCLK_IN_to_CLKOUT
Attach CLK_IN to CLKOUT.

enumerator kCLK_16K_to_CLKOUT
Attach CLK_16K to CLKOUT.

enumerator kSLOW_CLK_to_CLKOUT
Attach SLOW_CLK to CLKOUT.

enumerator kNONE_to_CLKOUT
Attach NONE to CLKOUT.

enumerator kNONE_to_NONE

Attach NONE to NONE.

enum _clock_div_name

Clock dividers.

Values:

enumerator kCLOCK_DivCTIMER0

CTIMER0 clock divider

enumerator kCLOCK_DivCTIMER1

CTIMER1 clock divider

enumerator kCLOCK_DivCTIMER2

CTIMER2 clock divider

enumerator kCLOCK_DivWWDT0

WWDT0 clock divider

enumerator kCLOCK_DivLPI2C0

LPI2C0 clock divider

enumerator kCLOCK_DivLPI2C1

LPI2C1 clock divider

enumerator kCLOCK_DivLPSPi0

LPSPi0 clock divider

enumerator kCLOCK_DivLPSPi1

LPSPi1 clock divider

enumerator kCLOCK_DivLPUART0

LPUART0 clock divider

enumerator kCLOCK_DivLPUART1

LPUART1 clock divider

enumerator kCLOCK_DivLPUART2

LPUART2 clock divider

enumerator kCLOCK_DivLPUART3

LPUART3 clock divider

enumerator kCLOCK_DivLPTMR0

LPTMR0 clock divider

enumerator kCLOCK_DivADC

ADC clock divider

enumerator kCLOCK_DivCMP0_FUNC

CMP0_FUNC clock divider

enumerator kCLOCK_DivCMP0_RR

CMP0_RR clock divider

enumerator kCLOCK_DivCMP1_FUNC

CMP1_FUNC clock divider

enumerator kCLOCK_DivCMP1_RR

CMP1_RR clock divider

enumerator kCLOCK_DivCMP2_FUNC
CMP2_FUNC clock divider

enumerator kCLOCK_DivCMP2_RR
CMP2_RR clock divider

enumerator kCLOCK_DivFLEXCAN0
FLEXCAN0 clock divider

enumerator kCLOCK_DivTRACE
DBG_TRACE clock divider

enumerator kCLOCK_DivCLKOUT
CLKOUT clock divider

enumerator kCLOCK_DivSLOWCLK
SLOWCLK clock divider

enumerator kCLOCK_DivBUSCLK
BUSCLK clock divider

enumerator kCLOCK_DivAHBCLK
AHBCLK clock divider

enumerator kCLOCK_DivFRO_HF
FROHF clock divider

enumerator kCLOCK_DivFRO_LF
FROLF clock divider

enumerator kCLOCK_DivMax
Max clock divider

enum _clke_16k
firc trim source.

Values:

enumerator kCLKE_16K_SYSTEM
To VSYS domain.

enumerator kCLKE_16K_COREMAIN
To VDD_CORE domain.

enum _scg_status
SCG status return codes.

Values:

enumerator kStatus_SCG_Busy
Clock is busy.

enumerator kStatus_SCG_InvalidSrc
Invalid source.

enum _sirc_trim_mode
sirc trim mode.

Values:

enumerator kSCG_SircTrimNonUpdate

Trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure sirc_trim_mode_t.

enumerator kSCG_SircTrimUpdate

Trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _sirc_trim_src

sirc trim source.

Values:

enumerator kNoTrimSrc

No external trim source.

enumerator kSCG_SircTrimSrcSysOsc

System OSC.

enum _scg_sosc_monitor_mode

SCG system OSC monitor mode.

Values:

enumerator kSCG_SysOscMonitorDisable

Monitor disabled.

enumerator kSCG_SysOscMonitorInt

Interrupt when the SOSC error is detected.

enumerator kSCG_SysOscMonitorReset

Reset when the SOSC error is detected.

enum _run_mode

The active run mode (voltage level).

Values:

enumerator kMD_Mode

Mid voltage (1.0 V).

enumerator kOD_Mode

Overdrive voltage (1.2 V).

typedef enum _clock_ip_name clock_ip_name_t

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

typedef enum _clock_name clock_name_t

Clock name used to get clock frequency.

typedef enum _clock_select_name clock_select_name_t

Clock name used to get clock frequency.

typedef enum _clock_attach_id clock_attach_id_t

The enumerator of clock attach Id.

typedef enum _clock_div_name clock_div_name_t

Clock dividers.

typedef enum _clke_16k clke_16k_t

firc trim source.

typedef enum _sirc_trim_mode sirc_trim_mode_t

sirc trim mode.

typedef enum _sirc_trim_src sirc_trim_src_t

sirc trim source.


```
typedef struct _sirc_trim_config sirc_trim_config_t  
    sirc trim configuration.
```

```
typedef enum _scg_sosc_monitor_mode scg_sosc_monitor_mode_t  
    SCG system OSC monitor mode.
```

```
typedef enum _run_mode run_mode_t  
    The active run mode (voltage level).
```

```
static inline void CLOCK_EnableClock(clock_ip_name_t clk)  
    Enable the clock for specific IP.
```

Parameters

- *clk* – : Clock to be enabled.

Returns

Nothing

```
static inline void CLOCK_DisableClock(clock_ip_name_t clk)  
    Disable the clock for specific IP.
```

Parameters

- *clk* – : Clock to be Disabled.

Returns

Nothing

```
void CLOCK_AttachClk(clock_attach_id_t connection)  
    Configure the clock selection muxes.
```

Parameters

- *connection* – : Clock to be configured.

```
clock_attach_id_t CLOCK_GetClockAttachId(clock_attach_id_t connection)
```

Get the actual clock attach id. This function uses the offset in input attach id, then it reads the actual source value in the register and combine the offset to obtain an actual attach id.

Parameters

- *connection* – : Clock attach id to get.

Returns

Clock source value.

```
void CLOCK_SetClockSelect(clock_select_name_t sel_name, uint32_t value)  
    Set the clock select value. This function set the peripheral clock select value.
```

Parameters

- *sel_name* – : Clock select.
- *value* – : value to be set.

```
uint32_t CLOCK_GetClockSelect(clock_select_name_t sel_name)
```

Get the clock select value. This function get the peripheral clock select value.

Parameters

- *sel_name* – : Clock select.

Returns

Clock source value.

`void CLOCK_SetClockDiv(clock_div_name_t div_name, uint32_t value)`

Setup peripheral clock dividers.

Parameters

- `div_name` – : Clock divider name
- `value` – : Value to be divided

`uint32_t CLOCK_GetClockDiv(clock_div_name_t div_name)`

Get peripheral clock dividers.

Parameters

- `div_name` – : Clock divider name

Returns

peripheral clock dividers

`void CLOCK_HaltClockDiv(clock_div_name_t div_name)`

Halt peripheral clock dividers.

Parameters

- `div_name` – : Clock divider name

`status_t CLOCK_SetupFROHFClocking(uint32_t iFreq)`

Initialize the FROHF to given frequency (48,64,96,192). This function turns on FIRC and select the given frequency as the source of `fro_hf`.

Parameters

- `iFreq` – : Desired frequency.

Returns

returns success or fail status.

`status_t CLOCK_SetupFRO12MClocking(void)`

Initialize the FRO12M. This function turns on FRO12M.

Returns

returns success or fail status.

`status_t CLOCK_SetupFRO16KClocking(uint8_t clk_16k_enable_mask)`

Initialize the FRO16K. This function turns on FRO16K.

Parameters

- `clk_16k_enable_mask` – 0-3 0b00: disable both `clk_16k0` and `clk_16k1` 0b01: only enable `clk_16k0` 0b10: only enable `clk_16k1` 0b11: enable both `clk_16k0` and `clk_16k1`

Returns

returns success or fail status.

`status_t CLOCK_SetupExtClocking(uint32_t iFreq)`

Initialize the external osc clock to given frequency.

Parameters

- `iFreq` – : Desired frequency (must be equal to exact rate in Hz)

Returns

returns success or fail status.

`status_t CLOCK_SetupExtRefClocking(uint32_t iFreq)`

Initialize the external reference clock to given frequency.

Parameters

- iFreq – : Desired frequency (must be equal to exact rate in Hz)

Returns

returns success or fail status.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Return Frequency of selected clock.

Returns

Frequency of selected clock

uint32_t CLOCK_GetCoreSysClkFreq(void)

Return Frequency of core.

Returns

Frequency of the core

uint32_t CLOCK_GetCTimerClkFreq(uint32_t id)

Return Frequency of CTimer functional Clock.

Returns

Frequency of CTimer functional Clock

uint32_t CLOCK_GetLpi2cClkFreq(uint32_t id)

Return Frequency of LPI2C0 functional Clock.

Returns

Frequency of LPI2C0 functional Clock

uint32_t CLOCK_GetLpspiClkFreq(uint32_t id)

Return Frequency of LPSPI functional Clock.

Returns

Frequency of LPSPI functional Clock

uint32_t CLOCK_GetLpuartClkFreq(uint32_t id)

Return Frequency of LPUART functional Clock.

Returns

Frequency of LPUART functional Clock

uint32_t CLOCK_GetLptmrClkFreq(void)

Return Frequency of LPTMR functional Clock.

Returns

Frequency of LPTMR functional Clock

uint32_t CLOCK_GetOstimerClkFreq(void)

Return Frequency of OSTIMER.

Returns

Frequency of OSTIMER Clock

uint32_t CLOCK_GetAdcClkFreq(uint32_t id)

Return Frequency of Adc Clock.

Returns

Frequency of Adc.

uint32_t CLOCK_GetCmpFClkFreq(uint32_t id)

Return Frequency of CMP Function Clock.

Returns

Frequency of CMP Function.

uint32_t CLOCK_GetCmpRRClkFreq(uint32_t id)

Return Frequency of CMP Round Robin Clock.

Returns

Frequency of CMP Round Robin.

uint32_t CLOCK_GetTraceClkFreq(void)

Return Frequency of Trace Clock.

Returns

Frequency of Trace.

uint32_t CLOCK_GetClkoutClkFreq(void)

Return Frequency of CLKOUT Clock.

Returns

Frequency of CLKOUT.

uint32_t CLOCK_GetWwdtClkFreq(void)

brief Return Frequency of WWDT Clock return Frequency of WWDT.

uint32_t CLOCK_GetFlexcanClkFreq(void)

Return Frequency of FlexCAN FCLK.

Returns

Frequency of FlexCAN FCLK.

status_t CLOCK_FRO12MTrimConfig(sirc_trim_config_t config)

Setup FRO 12M trim.

Parameters

- config – : FRO 12M trim value

Returns

returns success or fail status.

void CLOCK_SetSysOscMonitorMode(scg_sosc_monitor_mode_t mode)

Sets the system OSC monitor mode.

This function sets the system OSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

status_t CLOCK_SetFLASHAccessCyclesForFreq(uint32_t system_freq_hz, run_mode_t mode)

Set the additional number of wait-states added to account for the ratio of system clock period to flash access time during full speed power mode.

Parameters

- system_freq_hz – : Input frequency
- mode – : Active run mode (voltage level).

Returns

success or fail status

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.0.0.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

CLK_GATE_REG_OFFSET(value)

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

CLK_GATE_BIT_SHIFT(value)

REG_PWM0SUBCTL

REG_PWM1SUBCTL

AOI_CLOCKS

Clock ip name array for AOI.

CRC_CLOCKS

Clock ip name array for CRC.

CTIMER_CLOCKS

Clock ip name array for CTIMER.

DMA_CLOCKS

Clock ip name array for DMA.

EDMA_CLOCKS

Clock gate name array for EDMA.

ERM_CLOCKS

Clock ip name array for ERM.

EIM_CLOCKS

Clock ip name array for EIM.

FLEXCAN_CLOCKS

Clock ip name array for FLEXCAN.

FREQME_CLOCKS

Clock ip name array for FREQME.

GPIO_CLOCKS

Clock ip name array for GPIO.

INPUTMUX_CLOCKS

Clock ip name array for INPUTMUX.

LPCMP_CLOCKS

Clock ip name array for GPIO.

LPADC_CLOCKS

Clock ip name array for LPADC.

LPUART_CLOCKS

Clock ip name array for LPUART.

LPI2C_CLOCKS

Clock ip name array for LPI2C.

LPSPi_CLOCKS

Clock ip name array for LSPI.

MAU_CLOCKS

Clock ip name array for MAU.

OSTIMER_CLOCKS

Clock ip name array for OSTIMER.

OPAMP_CLOCKS

Clock ip name array for OPAMP.

PWM_CLOCKS

Clock ip name array for PWM.

PORT_CLOCKS

Clock ip name array for PORT.

QDC_CLOCKS

Clock ip name array for QDC.

SMARTDMA_CLOCKS

Clock ip name array for SMARTDMA.

UTICK_CLOCKS

Clock ip name array for UTICK.

WWDT_CLOCKS

Clock ip name array for WWDT.

BUS_CLK

Peripherals clock source definition.

CLK_ATTACH_REG_OFFSET(value)

Clock Mux Switches The encoding is as follows each connection identified is 32bits wide while 24bits are valuable starting from LSB upwards.

[4 bits for choice, 0 means invalid choice] [8 bits mux ID]*

CLK_ATTACH_CLK_SEL(value)

CLK_ATTACH_MUX(reg, sel)

sirc_trim_mode_t trimMode

Trim mode.

sirc_trim_src_t trimSrc

Trim source.

uint16_t trimDiv

Divider of SOSC.

uint8_t cltrim

Trim coarse value; Irrelevant if trimMode is kSCG_TrimUpdate.

uint8_t ccotrim

Trim fine value; Irrelevant if trimMode is kSCG_TrimUpdate.

struct _sirc_trim_config

#include <fsl_clock.h> sirc trim configuration.

2.5 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum _crc_bits

CRC bit width.

Values:

enumerator kCrcBits16

Generate 16-bit CRC code

enumerator kCrcBits32

Generate 32-bit CRC code

enum _crc_result

CRC result type.

Values:

enumerator kCrcFinalChecksum

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator kCrcIntermediateChecksum

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for CRC_Init() to continue adding data to this checksum.

typedef enum _crc_bits crc_bits_t

CRC bit width.

typedef enum _crc_result crc_result_t

CRC result type.

typedef struct _crc_config crc_config_t

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void CRC_Init(CRC_Type *base, const crc_config_t *config)

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- base – CRC peripheral address.
- config – CRC module configuration structure.

static inline void CRC_Deinit(CRC_Type *base)

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct _crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1\_0000\_0010\_0001 = x^{12}+x^5+1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.6 CTIMER: Standard counter/timers

void CTIMER_Init(CTIMER_Type *base, const *ctimer_config_t* *config)

Ungates the clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application before using the driver.

Parameters

- base – Ctimer peripheral base address
- config – Pointer to the user configuration structure.

void CTIMER_Deinit(CTIMER_Type *base)

Gates the timer clock.

Parameters

- base – Ctimer peripheral base address

`void CTIMER_GetDefaultConfig(ctimer_config_t *config)`

Fills in the timers configuration structure with the default settings.

The default values are:

```
config->mode = kCTIMER_TimerMode;
config->input = kCTIMER_Capture_0;
config->prescale = 0;
```

Parameters

- config – Pointer to the user configuration structure.

`status_t CTIMER_SetupPwmPeriod(CTIMER_Type *base, const ctimer_match_t pwmPeriodChannel, ctimer_match_t matchChannel, uint32_t pwmPeriod, uint32_t pulsePeriod, bool enableInt)`

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM period

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- pwmPeriod – PWM period match value
- pulsePeriod – Pulse width match value
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

Returns

kStatus_Success on success kStatus_Fail If matchChannel is equal to pwmPeriodChannel; this channel is reserved to set the PWM cycle If PWM pulse width register value is larger than 0xFFFFFFFF.

`status_t CTIMER_SetupPwm(CTIMER_Type *base, const ctimer_match_t pwmPeriodChannel, ctimer_match_t matchChannel, uint8_t dutyCyclePercent, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz, bool enableInt)`

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM frequency. Please use CTIMER_SetupPwmPeriod to set up the PWM with high resolution.

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period

- `matchChannel` – Match pin to be used to output the PWM signal
- `dutyCyclePercent` – PWM pulse width; the value should be between 0 to 100
- `pwmFreq_Hz` – PWM signal frequency in Hz
- `srcClock_Hz` – Timer counter clock in Hz
- `enableInt` – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

```
static inline void CTIMER_UpdatePwmPulsePeriod(CTIMER_Type *base, ctimer_match_t
                                              matchChannel, uint32_t pulsePeriod)
```

Updates the pulse period of an active PWM signal.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – Match pin to be used to output the PWM signal
- `pulsePeriod` – New PWM pulse width match value

```
status_t CTIMER_UpdatePwmDutycycle(CTIMER_Type *base, const ctimer_match_t
                                   pwmPeriodChannel, ctimer_match_t matchChannel,
                                   uint8_t dutyCyclePercent)
```

Updates the duty cycle of an active PWM signal.

Note: Please use `CTIMER_SetupPwmPeriod` to update the PWM with high resolution. This function can manually assign the specified channel to set the PWM cycle.

Parameters

- `base` – Ctimer peripheral base address
- `pwmPeriodChannel` – Specify the channel to control the PWM period
- `matchChannel` – Match pin to be used to output the PWM signal
- `dutyCyclePercent` – New PWM pulse width; the value should be between 0 to 100

Returns

`kStatus_Success` on success `kStatus_Fail` If PWM pulse width register value is larger than `0xFFFFFFFF`.

```
static inline void CTIMER_EnableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Enables the selected Timer interrupts.

Parameters

- `base` – Ctimer peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline void CTIMER_DisableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Disables the selected Timer interrupts.

Parameters

- `base` – Ctimer peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

static inline uint32_t CTIMER_GetEnabledInterrupts(CTIMER_Type *base)

Gets the enabled Timer interrupts.

Parameters

- base – Ctimer peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `ctimer_interrupt_enable_t`

static inline uint32_t CTIMER_GetStatusFlags(CTIMER_Type *base)

Gets the Timer status flags.

Parameters

- base – Ctimer peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ctimer_status_flags_t`

static inline void CTIMER_ClearStatusFlags(CTIMER_Type *base, uint32_t mask)

Clears the Timer status flags.

Parameters

- base – Ctimer peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ctimer_status_flags_t`

static inline void CTIMER_StartTimer(CTIMER_Type *base)

Starts the Timer counter.

Parameters

- base – Ctimer peripheral base address

static inline void CTIMER_StopTimer(CTIMER_Type *base)

Stops the Timer counter.

Parameters

- base – Ctimer peripheral base address

FSL_CTIMER_DRIVER_VERSION

Version 2.3.3

enum __ctimer_capture_channel

List of Timer capture channels.

Values:

enumerator kCTIMER_Capture_0

Timer capture channel 0

enumerator kCTIMER_Capture_1

Timer capture channel 1

enumerator kCTIMER_Capture_3

Timer capture channel 3

enum __ctimer_capture_edge

List of capture edge options.

Values:

enumerator kCTIMER_Capture_RiseEdge

Capture on rising edge

enumerator kCTIMER_Capture_FallEdge

Capture on falling edge

enumerator kCTIMER_Capture_BothEdge

Capture on rising and falling edge

enum _ctimer_match

List of Timer match registers.

Values:

enumerator kCTIMER_Match_0

Timer match register 0

enumerator kCTIMER_Match_1

Timer match register 1

enumerator kCTIMER_Match_2

Timer match register 2

enumerator kCTIMER_Match_3

Timer match register 3

enum _ctimer_external_match

List of external match.

Values:

enumerator kCTIMER_External_Match_0

External match 0

enumerator kCTIMER_External_Match_1

External match 1

enumerator kCTIMER_External_Match_2

External match 2

enumerator kCTIMER_External_Match_3

External match 3

enum _ctimer_match_output_control

List of output control options.

Values:

enumerator kCTIMER_Output_NoAction

No action is taken

enumerator kCTIMER_Output_Clear

Clear the EM bit/output to 0

enumerator kCTIMER_Output_Set

Set the EM bit/output to 1

enumerator kCTIMER_Output_Toggle

Toggle the EM bit/output

enum _ctimer_timer_mode

List of Timer modes.

Values:

enumerator kCTIMER_TimerMode

enumerator kCTIMER_IncreaseOnRiseEdge

enumerator kCTIMER_IncreaseOnFallEdge

enumerator kCTIMER_IncreaseOnBothEdge

enum _ctimer_interrupt_enable

List of Timer interrupts.

Values:

enumerator kCTIMER_Match0InterruptEnable

Match 0 interrupt

enumerator kCTIMER_Match1InterruptEnable

Match 1 interrupt

enumerator kCTIMER_Match2InterruptEnable

Match 2 interrupt

enumerator kCTIMER_Match3InterruptEnable

Match 3 interrupt

enum _ctimer_status_flags

List of Timer flags.

Values:

enumerator kCTIMER_Match0Flag

Match 0 interrupt flag

enumerator kCTIMER_Match1Flag

Match 1 interrupt flag

enumerator kCTIMER_Match2Flag

Match 2 interrupt flag

enumerator kCTIMER_Match3Flag

Match 3 interrupt flag

enum ctimer_callback_type_t

Callback type when registering for a callback. When registering a callback an array of function pointers is passed the size could be 1 or 8, the callback type will tell that.

Values:

enumerator kCTIMER_SingleCallback

Single Callback type where there is only one callback for the timer. based on the status flags different channels needs to be handled differently

enumerator kCTIMER_MultipleCallback

Multiple Callback type where there can be 8 valid callbacks, one per channel. for both match/capture

typedef enum _ctimer_capture_channel ctimer_capture_channel_t

List of Timer capture channels.

typedef enum _ctimer_capture_edge ctimer_capture_edge_t

List of capture edge options.

typedef enum _ctimer_match ctimer_match_t

List of Timer match registers.

```
typedef enum _ctimer_external_match ctimer_external_match_t
```

List of external match.

```
typedef enum _ctimer_match_output_control ctimer_match_output_control_t
```

List of output control options.

```
typedef enum _ctimer_timer_mode ctimer_timer_mode_t
```

List of Timer modes.

```
typedef enum _ctimer_interrupt_enable ctimer_interrupt_enable_t
```

List of Timer interrupts.

```
typedef enum _ctimer_status_flags ctimer_status_flags_t
```

List of Timer flags.

```
typedef void (*ctimer_callback_t)(uint32_t flags)
```

```
typedef struct _ctimer_match_config ctimer_match_config_t
```

Match configuration.

This structure holds the configuration settings for each match register.

```
typedef struct _ctimer_config ctimer_config_t
```

Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the `CTIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void CTIMER_SetupMatch(CTIMER_Type *base, ctimer_match_t matchChannel, const  
                      ctimer_match_config_t *config)
```

Setup the match register.

User configuration is used to setup the match value and action to be taken when a match occurs.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – Match register to configure
- `config` – Pointer to the match configuration structure

```
uint32_t CTIMER_GetOutputMatchStatus(CTIMER_Type *base, uint32_t matchChannel)
```

Get the status of output match.

This function gets the status of output MAT, whether or not this output is connected to a pin. This status is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – External match channel, user can obtain the status of multiple match channels at the same time by using the logic of “|” enumeration `ctimer_external_match_t`

Returns

The mask of external match channel status flags. Users need to use the `_ctimer_external_match` type to decode the return variables.

```
void CTIMER_SetupCapture(CTIMER_Type *base, ctimer_capture_channel_t capture,  
                        ctimer_capture_edge_t edge, bool enableInt)
```

Setup the capture.

Parameters

- base – Ctimer peripheral base address
- capture – Capture channel to configure
- edge – Edge on the channel that will trigger a capture
- enableInt – Flag to enable channel interrupts, if enabled then the registered call back is called upon capture

```
static inline uint32_t CTIMER_GetTimerCountValue(CTIMER_Type *base)
```

Get the timer count value from TC register.

Parameters

- base – Ctimer peripheral base address.

Returns

return the timer count value.

```
void CTIMER_RegisterCallBack(CTIMER_Type *base, ctimer_callback_t *cb_func,  
                           ctimer_callback_type_t cb_type)
```

Register callback.

This function configures CTimer Callback in following modes:

- Single Callback: cb_func should be pointer to callback function pointer For example: `ctimer_callback_t ctimer_callback = pwm_match_callback; CTIMER_RegisterCallBack(CTIMER, &ctimer_callback, kCTIMER_SingleCallback);`
- Multiple Callback: cb_func should be pointer to array of callback function pointers Each element corresponds to Interrupt Flag in IR register. For example: `ctimer_callback_t ctimer_callback_table[] = { ctimer_match0_callback, NULL, NULL, ctimer_match3_callback, NULL, NULL, NULL, NULL}; CTIMER_RegisterCallBack(CTIMER, &ctimer_callback_table[0], kCTIMER_MultipleCallback);`

Parameters

- base – Ctimer peripheral base address
- cb_func – Pointer to callback function pointer
- cb_type – callback function type, singular or multiple

```
static inline void CTIMER_Reset(CTIMER_Type *base)
```

Reset the counter.

The timer counter and prescale counter are reset on the next positive edge of the APB clock.

Parameters

- base – Ctimer peripheral base address

```
static inline void CTIMER_SetPrescale(CTIMER_Type *base, uint32_t prescale)
```

Setup the timer prescale value.

Specifies the maximum value for the Prescale Counter.

Parameters

- base – Ctimer peripheral base address
- prescale – Prescale value


```
static inline uint32_t CTIMER_GetCaptureValue(CTIMER_Type *base, ctimer_capture_channel_t
                                              capture)
```

Get capture channel value.

Get the counter/timer value on the corresponding capture channel.

Parameters

- base – Ctimer peripheral base address
- capture – Select capture channel

Returns

The timer count capture value.

```
static inline void CTIMER_EnableResetMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable reset match channel.

Set the specified match channel reset operation.

Parameters

- base – Ctimer peripheral base address
- match – match channel used
- enable – Enable match channel reset operation.

```
static inline void CTIMER_EnableStopMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable stop match channel.

Set the specified match channel stop operation.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable match channel stop operation.

```
static inline void CTIMER_EnableMatchChannelReload(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable reload channel falling edge.

Enable the specified match channel reload match shadow value.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable .

```
static inline void CTIMER_EnableRisingEdgeCapture(CTIMER_Type *base,
                                                  ctimer_capture_channel_t capture, bool
                                                  enable)
```

Enable capture channel rising edge.

Sets the specified capture channel for rising edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable rising edge capture.

```
static inline void CTIMER_EnableFallingEdgeCapture(CTIMER_Type *base,
                                                    ctimer_capture_channel_t capture, bool
                                                    enable)
```

Enable capture channel falling edge.

Sets the specified capture channel for falling edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable falling edge capture.

```
static inline void CTIMER_SetShadowValue(CTIMER_Type *base, ctimer_match_t match,
                                          uint32_t matchvalue)
```

Set the specified match shadow channel.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- matchvalue – Reload the value of the corresponding match register.

```
struct _ctimer_match_config
```

#include <fsl_ctimer.h> Match configuration.

This structure holds the configuration settings for each match register.

Public Members

uint32_t matchValue

This is stored in the match register

bool enableCounterReset

true: Match will reset the counter false: Match will not reset the counter

bool enableCounterStop

true: Match will stop the counter false: Match will not stop the counter

ctimer_match_output_control_t outControl

Action to be taken on a match on the EM bit/output

bool outPinInitState

Initial value of the EM bit/output

bool enableInterrupt

true: Generate interrupt upon match false: Do not generate interrupt on match

```
struct _ctimer_config
```

#include <fsl_ctimer.h> Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the CTIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

ctimer_timer_mode_t mode

Timer mode

ctimer_capture_channel_t input

Input channel to increment the timer; used only in timer modes that rely on this input signal to increment TC

uint32_t prescale

Prescale value

2.7 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_Init(*EDMA_Type* *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “edma_config_t”.

void EDMA_Deinit(*EDMA_Type* *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(*EDMA_Type* *base, uint32_t channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

```
void EDMA_InitChannel(EDMA_Type *base, uint32_t channel, edma_channel_config_t
                    *channelConfig)
```

EDMA Channel initialization.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelConfig – pointer to user's eDMA4 channel config structure, see *edma_channel_config_t* for detail.

```
static inline void EDMA_SetChannelMemoryAttribute(EDMA_Type *base, uint32_t channel,
                                                edma_channel_memory_attribute_t
                                                writeAttribute,
                                                edma_channel_memory_attribute_t
                                                readAttribute)
```

Set channel memory attribute.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- writeAttribute – Attributes associated with a write transaction.
- readAttribute – Attributes associated with a read transaction.

```
static inline void EDMA_SetChannelSignExtension(EDMA_Type *base, uint32_t channel, uint8_t
                                                position)
```

Set channel sign extension.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- position – A non-zero value specifying the sign extend bit position. If 0, sign extension is disabled.

```
static inline void EDMA_SetChannelSwapSize(EDMA_Type *base, uint32_t channel,
                                           edma_channel_swap_size_t swapSize)
```

Set channel swap size.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- swapSize – Swap occurs with respect to the specified transfer size. If 0, swap is disabled.

```
static inline void EDMA_SetChannelAccessType(EDMA_Type *base, uint32_t channel,
                                           edma_channel_access_type_t
                                           channelAccessType)
```

Set channel access type.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.

- `channelAccessType` – eDMA4's transactions type on the system bus when the channel is active.

```
static inline void EDMA_SetChannelMux(EDMA_Type *base, uint32_t channel, uint32_t  
                                     channelRequestSource)
```

Set channel request source.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `channelRequestSource` – eDMA hardware service request source for the channel. User need to use the `dma_request_source_t` type as the input parameter. Note that devices may use other enum type to express dma request source and User can fined it in SOC header or `fsl_edma_soc.h`.

```
static inline uint32_t EDMA_GetChannelSystemBusInformation(EDMA_Type *base, uint32_t  
                                                         channel)
```

Gets the channel identification and attribute information on the system bus interface.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the `_edma_channel_sys_bus_info` type to decode the return variables.

```
static inline void EDMA_EnableChannelMasterIDReplication(EDMA_Type *base, uint32_t  
                                                         channel, bool enable)
```

Set channel master ID replication.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `enable` – true is enable, false is disable.

```
static inline void EDMA_SetChannelProtectionLevel(EDMA_Type *base, uint32_t channel,  
                                                  edma_channel_protection_level_t level)
```

Set channel security level.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `level` – security level.

```
void EDMA_ResetChannel(EDMA_Type *base, uint32_t channel)
```

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_SetTransferConfig(EDMA_Type *base, uint32_t channel, const
                           edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(EDMA_Type *base, uint32_t channel, const
                              edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(EDMA_Type *base, uint32_t channel, const
                                     edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(EDMA_Type *base, uint32_t channel, edma_channel_link_type_t  
                        type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
void EDMA_SetBandWidth(EDMA_Type *base, uint32_t channel, edma_bandwidth_t  
                      bandWidth)
```

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_SetModulo(EDMA_Type *base, uint32_t channel, edma_modulo_t srcModulo,  
                   edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA_EnableAutoStopRequest(EDMA_Type *base, uint32_t channel, bool enable)
```

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
void EDMA_EnableChannelInterrupts(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_DisableChannelInterrupts(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined `edma_interrupt_enable_t` type.

```
void EDMA_SetMajorOffsetConfig(EDMA_Type *base, uint32_t channel, int32_t sourceOffset, int32_t destOffset)
```

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- channel – edma channel number.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

```
void EDMA_ConfigChannelSoftwareTCD(edma_tcd_t *tcd, const edma_transfer_config_t *transfer)
```

Sets TCD fields according to the user's channel transfer configuration structure, `edma_transfer_config_t`.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_ConfigChannelSoftwareTCDExt`

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- `tcd` – Pointer to the TCD structure.
- `transfer` – channel transfer configuration pointer.

void EDMA_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdResetExt

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- `tcd` – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfig(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetTransferConfigExt

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {  
    ...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- `tcd` – Pointer to the TCD structure.
- `config` – Pointer to eDMA transfer configuration structure.
- `nextTcd` – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA__TcdSetMinorOffsetConfig(edma_tcd_t *tcd, const edma_minor_offset_config_t
                                   *config)
```

Configures the eDMA TCD minor offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMinorOffsetConfigExt

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t type, uint32_t
                             linkedChannel)
```

Sets the channel link for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetChannelLinkExt

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA__TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetBandWidthExt

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA__TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetModuloExt

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA__TcdEnableAutoStopRequest(edma_tcd_t *tcd, bool enable)
```

Sets the auto stop request for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdEnableAutoStopRequestExt

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

```
void EDMA__TcdEnableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdEnableInterruptsExt

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdDisableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdDisableInterruptsExt

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdSetMajorOffsetConfig(edma_tcd_t *tcd, int32_t sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMajorOffsetConfigExt

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `tcd` – A point to the TCD structure.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

```
void EDMA__ConfigChannelSoftwareTCDExt(EDMA_Type *base, edma_tcd_t *tcd, const  
                                         edma_transfer_config_t *transfer)
```

Sets TCD fields according to the user's channel transfer configuration structure, `edma_transfer_config_t`.

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Pointer to the TCD structure.
- `transfer` – channel transfer configuration pointer.

```
void EDMA__TcdResetExt(EDMA_Type *base, edma_tcd_t *tcd)
```

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Pointer to the TCD structure.

```
void EDMA__TcdSetTransferConfigExt(EDMA_Type *base, edma_tcd_t *tcd, const  
                                   edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {  
    ...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA__TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA__TcdSetMinorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, const  
                                     edma_minor_offset_config_t *config)
```

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLinkExt(EDMA_Type *base, edma_tcd_t *tcd,  
                               edma_channel_link_type_t type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA__TcdSetBandWidthExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                             edma_bandwidth_t bandwidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA__TcdSetModuloExt(EDMA_Type *base, edma_tcd_t *tcd, edma_modulo_t srcModulo,  
                           edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA__TcdEnableAutoStopRequestExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                                    bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

```
void EDMA__TcdEnableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdDisableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdSetMajorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, int32_t  
                                     sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

```
static inline void EDMA__EnableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
static inline void EDMA__DisableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
static inline void EDMA__TriggerChannelStart(EDMA_Type *base, uint32_t channel)
```

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
uint32_t EDMA__GetRemainingMajorLoopCount(EDMA_Type *base, uint32_t channel)
```

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

- a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

```
static inline uint32_t EDMA_GetErrorStatusFlags(EDMA_Type *base)
```

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

```
uint32_t EDMA_GetChannelStatusFlags(EDMA_Type *base, uint32_t channel)
```

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

```
void EDMA_ClearChannelStatusFlags(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

```
void EDMA_CreateHandle(edma_handle_t *handle, EDMA_Type *base, uint32_t channel)
```

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_InstallTCDMemory(edma_handle_t *handle, edma_tcd_t *tcdPool, uint32_t tcdSize)
```

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

void EDMA_SetCallback(*edma_handle_t* *handle, *edma_callback* callback, void *userData)

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

void EDMA_PrepareTransferConfig(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE). User can check if 128 bytes support is available for specific instance by FSL_FEATURE_EDMA_INSTANCE_SUPPORT_128_BYTES_TRANSFERn.

Parameters

- config – The user configuration structure of type *edma_transfer_t*.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

void EDMA_PrepareTransfer(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferBytes, *edma_transfer_type_t* type)

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error

(SAE).

Parameters

- `config` – The user configuration structure of type `edma_transfer_t`.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `destAddr` – eDMA transfer destination address.
- `destWidth` – eDMA transfer destination address width(bytes).
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.
- `type` – eDMA transfer type.

```
void EDMA__PrepareTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd, void *srcAddr,  
                             uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t  
                             destWidth, int16_t destOffset, uint32_t bytesEachRequest,  
                             uint32_t transferBytes, edma_tcd_t *nextTcd)
```

Prepares the eDMA transfer content descriptor.

This function prepares the transfer content descriptor structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- `handle` – eDMA handle pointer.
- `tcd` – Pointer to eDMA transfer content descriptor structure.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `srcOffset` – source address offset.
- `destAddr` – eDMA transfer destination address.
- `destWidth` – eDMA transfer destination address width(bytes).
- `destOffset` – destination address offset.
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.
- `nextTcd` – eDMA transfer linked TCD address.

```
status_t EDMA__SubmitTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd)
```

Submits the eDMA transfer content descriptor.

This function submits the eDMA transfer request according to the transfer content descriptor. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function `EDMA_InstallTCDMemory` before.

Typical user case:

- a. submit single transfer

```
edma_tcd_t tcd;  
EDMA_PrepareTransferTCD(handle, tcd, ....)  
EDMA_SubmitTransferTCD(handle, tcd)  
EDMA_StartTransfer(handle)
```

b. submit static link transfer,

```
edma_tcd_t tcd[2];  
EDMA_PrepareTransferTCD(handle, &tcd[0], ....)  
EDMA_PrepareTransferTCD(handle, &tcd[1], ....)  
EDMA_SubmitTransferTCD(handle, &tcd[0])  
EDMA_StartTransfer(handle)
```

c. submit dynamic link transfer

```
edma_tcd_t tcdpool[2];  
EDMA_InstallTCDDMemory(&g_DMA_Handle, tcdpool, 2);  
edma_tcd_t tcd;  
EDMA_PrepareTransferTCD(handle, tcd, ....)  
EDMA_SubmitTransferTCD(handle, tcd)  
EDMA_PrepareTransferTCD(handle, tcd, ....)  
EDMA_SubmitTransferTCD(handle, tcd)  
EDMA_StartTransfer(handle)
```

d. submit loop transfer

```
edma_tcd_t tcd[2];  
EDMA_PrepareTransferTCD(handle, &tcd[0], ..., &tcd[1])  
EDMA_PrepareTransferTCD(handle, &tcd[1], ..., &tcd[0])  
EDMA_SubmitTransferTCD(handle, &tcd[0])  
EDMA_StartTransfer(handle)
```

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)
Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDDMemory before.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.

- `kStatus_EDMA_Busy` – It means the given channel is busy, need to submit request later.

`status_t` `EDMA_SubmitLoopTransfer`(*edma_handle_t* *handle, *edma_transfer_config_t* *transfer, `uint32_t` transferLoopCount)

Submits the eDMA scatter gather transfer configurations.

The function is target for submit loop transfer request, the ring transfer request means that the transfer request TAIL is link to HEAD, such as, A->B->C->D->A, or A->A

To use the ring transfer feature, the application should allocate several transfer object, such as

```
edma_channel_transfer_config_t transfer[2];
EDMA_TransferSubmitLoopTransfer(psHandle, &transfer, 2U);
```

Then eDMA driver will link transfer[0] and transfer[1] to each other

Note: Application should check the return value of this function to avoid transfer request submit failed

Parameters

- handle – eDMA handle pointer
- transfer – pointer to user's eDMA channel configure structure, see `edma_channel_transfer_config_t` for detail
- transferLoopCount – the count of the transfer ring, if loop count is 1, that means that the one will link to itself.

Return values

- `kStatus_Success` – It means submit transfer request succeed
- `kStatus_EDMA_Busy` – channel is in busy status
- `kStatus_InvalidArgument` – Invalid Argument

`void` `EDMA_StartTransfer`(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

`void` `EDMA_StopTransfer`(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call `EDMA_StartTransfer()` again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

`void` `EDMA_AbortTransfer`(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As sga and sga_index are calculated based on the DLAST_SGA bitfield lies in the TCD_CSR register, the sga_index in this case should be 2 (DLAST_SGA of TCD[1] stores the address of TCD[2]). Thus, the “tcdUsed” updated should be (tcdUsed - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major loop completes. Therefore, ensure that the header and tcdUsed updated are identical for them. tcdUsed are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.10.6.

_edma_transfer_status eDMA transfer status

Values:

enumerator kStatus_EDMA_QueueFull

TCD queue is full.

enumerator kStatus_EDMA_Busy

Channel is busy and can't handle the transfer request.

enum _edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes

Source/Destination data transfer size is 64 bytes every time

enumerator kEDMA_TransferSize128Bytes

Source/Destination data transfer size is 128 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes

Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes

Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes

Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes

Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes

Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes

Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes

Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes

Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes

Circular buffer size is 2 G bytes.

enum _edma_bandwidth

Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

_edma_error_status_flags eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag
NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag
Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag
Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag
Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag
Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag
Error channel number of the cancelled channel number

enumerator kEDMA_TransferCanceledFlag
Transfer cancelled

enumerator kEDMA_ValidFlag
No error occurred, this bit is 0. Otherwise, it is 1.

_edma_interrupt_enable eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable
Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type

eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral
Transfer from Peripheral to peripheral

enum edma_channel_memory_attribute

eDMA channel memory attribute

Values:

enumerator kEDMA_ChannelNoWriteNoReadNoCacheNoBuffer
No write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadNoCacheBufferable

No write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableNoBuffer

No write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableBufferable

No write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheNoBuffer

No write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheBufferable

No write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableNoBuffer

No write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableBufferable

No write allocate, read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheNoBuffer

write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheBufferable

write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableNoBuffer

write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableBufferable

write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheNoBuffer

write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheBufferable

write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadCacheableNoBuffer

write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadCacheableBufferable

write allocate, read allocate, cacheable, bufferable.

enum _edma_channel_swap_size

eDMA4 channel swap size

Values:

enumerator kEDMA_ChannelSwapDisabled

Swap is disabled.

enumerator kEDMA_ChannelReadWith8bitSwap

Swap occurs with respect to the read 8bit.

enumerator kEDMA_ChannelReadWith16bitSwap

Swap occurs with respect to the read 16bit.

enumerator kEDMA_ChannelReadWith32bitSwap

Swap occurs with respect to the read 32bit.

enumerator kEDMA_ChannelWriteWith8bitSwap

Swap occurs with respect to the write 8bit.

enumerator kEDMA_ChannelWriteWith16bitSwap

Swap occurs with respect to the write 16bit.

enumerator kEDMA_ChannelWriteWith32bitSwap

Swap occurs with respect to the write 32bit.

eDMA channel system bus information, `_edma_channel_sys_bus_info`

Values:

enumerator kEDMA_PrivilegedAccessLevel

Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId

DMA's master ID when channel is active and master ID replication is enabled.

enum `_edma_channel_access_type`

eDMA4 channel access type

Values:

enumerator kEDMA_ChannelDataAccess

Data access for eDMA4 transfers.

enumerator kEDMA_ChannelInstructionAccess

Instruction access for eDMA4 transfers.

enum `_edma_channel_protection_level`

eDMA4 channel protection level

Values:

enumerator kEDMA_ChannelProtectionLevelUser

user protection level for eDMA transfers.

enumerator kEDMA_ChannelProtectionLevelPrivileged

Privileged protection level eDMA transfers.

typedef enum `_edma_transfer_size` `edma_transfer_size_t`

eDMA transfer configuration

typedef enum `_edma_modulo` `edma_modulo_t`

eDMA modulo configuration

typedef enum `_edma_bandwidth` `edma_bandwidth_t`

Bandwidth control.

typedef enum `_edma_channel_link_type` `edma_channel_link_type_t`

Channel link type.

typedef enum `_edma_transfer_type` `edma_transfer_type_t`

eDMA transfer type

typedef struct `_edma_channel_Preemption_config` `edma_channel_Preemption_config_t`

eDMA channel priority configuration

typedef struct `_edma_minor_offset_config` `edma_minor_offset_config_t`

eDMA minor offset configuration

```
typedef enum edma_channel_memory_attribute edma_channel_memory_attribute_t
    eDMA channel memory attribute
```

```
typedef enum _edma_channel_swap_size edma_channel_swap_size_t
    eDMA4 channel swap size
```

```
typedef enum _edma_channel_access_type edma_channel_access_type_t
    eDMA4 channel access type
```

```
typedef enum _edma_channel_protection_level edma_channel_protection_level_t
    eDMA4 channel protection level
```

```
typedef struct _edma_channel_config edma_channel_config_t
    eDMA4 channel configuration
```

```
typedef edma_core_tcd_t edma_tcd_t
    eDMA TCD.
```

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

```
typedef struct _edma_transfer_config edma_transfer_config_t
    edma4 channel transfer configuration
```

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

```
typedef struct _edma_config edma_config_t
```

eDMA global configuration structure.

```
typedef void (*edma_callback)(struct _edma_handle *handle, void *userData, bool transferDone,
uint32_t tcDs)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface EDMA_GetUnusedTCDNumber.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcDs

How many tcDs are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcDs are finished between the last callback and this.

```
typedef struct _edma_handle edma_handle_t
```

eDMA transfer handle structure

```
FSL_EDMA_DRIVER_EDMA4
```

eDMA driver name

```
EDMA_ALLOCATE_TCD(name, number)
```

Macro used for allocate edma TCD.

```
DMA_DCHPRI_INDEX(channel)
```

Compute the offset unit from DCHPRI3.

```
struct _edma_channel_Preemption_config
```

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

```
bool enableChannelPreemption
```

If true: a channel can be suspended by other channel with higher priority

```
bool enablePreemptAbility
```

If true: a channel can suspend other channel with low priority

```
uint8_t channelPriority
```

Channel priority

```
struct _edma_minor_offset_config
```

#include <fsl_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct __edma_channel_config

#include <fsl_edma.h> eDMA4 channel configuration

Public Members

edma_channel_preemption_config_t channelPreemptionConfig

channel preemption configuration

edma_channel_memory_attribute_t channelReadMemoryAttribute

channel memory read attribute configuration

edma_channel_memory_attribute_t channelWriteMemoryAttribute

channel memory write attribute configuration

edma_channel_swap_size_t channelSwapSize

channel swap size configuration

edma_channel_access_type_t channelAccessType

channel access type configuration

uint8_t channelDataSignExtensionBitPosition

channel data sign extension bit position configuration

uint32_t channelRequestSource

hardware service request source for the channel

bool enableMasterIDReplication

enable master ID replication

edma_channel_protection_level_t protectionLevel

protection level

struct __edma_transfer_config

#include <fsl_edma.h> edma4 channel transfer configuration

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enableChannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset value in byte unit applied to the current source address to form the next-state value as each source read is completed

int16_t destOffset

Sign-extended offset value in byte unit applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

bytes in each minor loop or each request range: 1 - (2³⁰ - 1) when minor loop mapping is enabled range: 1 - (2¹⁰ - 1) when minor loop mapping is enabled and source or dest minor loop offset is enabled range: 1 - (2³² - 1) when minor loop mapping is disabled

uint32_t majorLoopCounts

minor loop counts in each major loop, should be 1 at least for each transfer range: (0 - (2¹⁵ - 1)) when minor loop channel link is disabled range: (0 - (2⁹ - 1)) when minor loop channel link is enabled total bytes in a transfer = minorLoopCountsEachMajorLoop * bytesEachMinorLoop

uint16_t enabledInterruptMask

channel interrupt to enable, can be OR'ed value of _edma_interrupt_enable

```

    edma_modulo_t srcAddrModulo
        source circular data queue range
    int32_t srcMajorLoopOffset
        source major loop offset
    edma_modulo_t dstAddrModulo
        destination circular data queue range
    int32_t dstMajorLoopOffset
        destination major loop offset
    bool enableSrcMinorLoopOffset
        enable source minor loop offset
    bool enableDstMinorLoopOffset
        enable dest minor loop offset
    int32_t minorLoopOffset
        burst offset, the offset will be applied after minor loop update
    bool enableChannelMajorLoopLink
        channel link when major loop complete
    uint32_t majorLoopLinkChannel
        major loop link channel number
    bool enableChannelMinorLoopLink
        channel link when minor loop complete
    uint32_t minorLoopLinkChannel
        minor loop link channel number
    edma_tcd_t *linkTCD
        pointer to the link transfer control descriptor
struct __edma_config
    #include <fsl_edma.h> eDMA global configuration structure.

```

Public Members

```

bool enableMasterIdReplication
    Enable (true) master ID replication. If Master ID replication is disabled, the privileged
    protection level (supervisor mode) for eDMA4 transfers is used.
bool enableGlobalChannelLink
    Enable(true) channel linking is available and controlled by each channel's link settings.
bool enableHaltOnError
    Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently,
    all service requests are ignored until the HALT bit is cleared.
bool enableDebugMode
    Enable(true) eDMA4 debug mode. When in debug mode, the eDMA4 stalls the start of
    a new channel. Executing channels are allowed to complete.
bool enableRoundRobinArbitration
    Enable(true) channel linking is available and controlled by each channel's link settings.
edma_channel_config_t *channelConfig[1]
    channel preemption configuration

```



```
struct _edma_handle
    #include <fsl_edma.h> eDMA transfer handle structure
```

Public Members

edma_callback callback
Callback function for major count exhausted.

void *userData
Callback function parameter.

EDMA_ChannelType *channelBase
eDMA peripheral channel base address.

EDMA_Type *base
eDMA peripheral base address

EDMA_TCDType *tcdBase
eDMA peripheral tcd base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint32_t channel
eDMA channel number.

volatile int8_t header
The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

volatile int8_t tail
The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed
The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

2.8 eDMA core Driver

```
enum _edma_tcd_type
    eDMA tcd flag type

    Values:

    enumerator kEDMA_EDMA4Flag
        Data access for eDMA4 transfers.

    enumerator kEDMA_EDMA5Flag
        Instruction access for eDMA4 transfers.

typedef struct _edma_core_mp edma_core_mp_t
    edma core channel struture definition

typedef struct _edma_core_channel edma_core_channel_t
    edma core channel struture definition
```

```
typedef enum _edma_tcd_type edma_tcd_type_t
    eDMA tcd flag type
typedef struct _edma5_core_tcd edma5_core_tcd_t
    edma5 core TCD struture definition
typedef struct _edma4_core_tcd edma4_core_tcd_t
    edma4 core TCD struture definition
typedef struct _edma_core_tcd edma_core_tcd_t
    edma core TCD struture definition
typedef edma_core_channel_t EDMA_ChannelType
    EDMA typedef.
typedef edma_core_tcd_t EDMA_TCDType
typedef void EDMA_Type

DMA_CORE_MP_CSR_EDBG_MASK
DMA_CORE_MP_CSR_ERCA_MASK
DMA_CORE_MP_CSR_HAE_MASK
DMA_CORE_MP_CSR_HALT_MASK
DMA_CORE_MP_CSR_GCLC_MASK
DMA_CORE_MP_CSR_GMRC_MASK
DMA_CORE_MP_CSR_EDBG(x)
DMA_CORE_MP_CSR_ERCA(x)
DMA_CORE_MP_CSR_HAE(x)
DMA_CORE_MP_CSR_HALT(x)
DMA_CORE_MP_CSR_GCLC(x)
DMA_CORE_MP_CSR_GMRC(x)
DMA_CSR_INTMAJOR_MASK
DMA_CSR_INTHALF_MASK
DMA_CSR_DREQ_MASK
DMA_CSR_ESG_MASK
DMA_CSR_BWC_MASK
DMA_CSR_BWC(x)
DMA_CSR_START_MASK
DMA_CITER_ELINKNO_CITER_MASK
DMA_BITER_ELINKNO_BITER_MASK
DMA_CITER_ELINKNO_CITER_SHIFT
DMA_CITER_ELINKYES_CITER_MASK
```

DMA_CITER_ELINKYES_CITER_SHIFT
DMA_ATTR_SMOD_MASK
DMA_ATTR_DMOD_MASK
DMA_CITER_ELINKNO_ELINK_MASK
DMA_CSR_MAJORELINK_MASK
DMA_BITER_ELINKYES_ELINK_MASK
DMA_CITER_ELINKYES_ELINK_MASK
DMA_CSR_MAJORLINKCH_MASK
DMA_BITER_ELINKYES_LINKCH_MASK
DMA_CITER_ELINKYES_LINKCH_MASK
DMA_NBYTES_MLOFFYES_MLOFF_MASK
DMA_NBYTES_MLOFFYES_DMLOE_MASK
DMA_NBYTES_MLOFFYES_SMLOE_MASK
DMA_NBYTES_MLOFFNO_NBYTES_MASK
DMA_ATTR_DMOD(x)
DMA_ATTR_SMOD(x)
DMA_BITER_ELINKYES_LINKCH(x)
DMA_CITER_ELINKYES_LINKCH(x)
DMA_NBYTES_MLOFFYES_MLOFF(x)
DMA_NBYTES_MLOFFYES_DMLOE(x)
DMA_NBYTES_MLOFFYES_SMLOE(x)
DMA_NBYTES_MLOFFNO_NBYTES(x)
DMA_NBYTES_MLOFFYES_NBYTES(x)
DMA_ATTR_DSIZE(x)
DMA_ATTR_SSIZE(x)
DMA_CSR_DREQ(x)
DMA_CSR_MAJORLINKCH(x)
DMA_CH_MATTR_WCACHE(x)
DMA_CH_MATTR_RCACHE(x)
DMA_CH_CSR_SIGNEXT_MASK
DMA_CH_CSR_SIGNEXT_SHIFT
DMA_CH_CSR_SWAP_MASK
DMA_CH_CSR_SWAP_SHIFT

DMA_CH_SBR_INSTR_MASK

DMA_CH_SBR_INSTR_SHIFT

DMA_CH_MUX_SOURCE(x)

DMA_ERR_DBE_FLAG

DMA error flag.

DMA_ERR_SBE_FLAG

DMA_ERR_SGE_FLAG

DMA_ERR_NCE_FLAG

DMA_ERR_DOE_FLAG

DMA_ERR_DAE_FLAG

DMA_ERR_SOE_FLAG

DMA_ERR_SAE_FLAG

DMA_ERR_ERRCHAN_FLAG

DMA_ERR_ECX_FLAG

DMA_ERR_FLAG

DMA_CLEAR_DONE_STATUS(base, channel)

get/clear DONE bit

DMA_GET_DONE_STATUS(base, channel)

DMA_ENABLE_ERROR_INT(base, channel)

enable/disable error interrupt

DMA_DISABLE_ERROR_INT(base, channel)

DMA_CLEAR_ERROR_STATUS(base, channel)

get/clear error status

DMA_GET_ERROR_STATUS(base, channel)

DMA_CLEAR_INT_STATUS(base, channel)

get/clear INT status

DMA_GET_INT_STATUS(base, channel)

DMA_ENABLE_MAJOR_INT(base, channel)

enable/disable MAJOR/HALF INT

DMA_ENABLE_HALF_INT(base, channel)

DMA_DISABLE_MAJOR_INT(base, channel)

DMA_DISABLE_HALF_INT(base, channel)

EDMA_TCD_ALIGN_SIZE

EDMA tcd align size.

EDMA_CORE_BASE(base)

EDMA base address convert macro.

EDMA_MP_BASE(base)

EDMA_CHANNEL_BASE(base, channel)

EDMA_TCD_BASE(base, channel)

EDMA_TCD_TYPE(x)

EDMA TCD type macro.

EDMA_TCD_SADDR(tcd, flag)

EDMA TCD address convert macro.

EDMA_TCD_SOFF(tcd, flag)

EDMA_TCD_ATTR(tcd, flag)

EDMA_TCD_NBYTES(tcd, flag)

EDMA_TCD_SLAST(tcd, flag)

EDMA_TCD_DADDR(tcd, flag)

EDMA_TCD_DOFF(tcd, flag)

EDMA_TCD_CITER(tcd, flag)

EDMA_TCD_DLAST_SGA(tcd, flag)

EDMA_TCD_CSR(tcd, flag)

EDMA_TCD_BITER(tcd, flag)

struct _edma_core_mp

#include <fsl_edma_core.h> edma core channel struture definition

Public Members

__IO uint32_t MP_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t MP_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

struct _edma_core_channel

#include <fsl_edma_core.h> edma core channel struture definition

Public Members

__IO uint32_t CH_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t CH_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

__IO uint32_t CH_INT

Channel Interrupt Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t CH_SBR

Channel System Bus, array offset: 0x1000C, array step: 0x10000

__IO uint32_t CH_PRI

Channel Priority, array offset: 0x10010, array step: 0x10000

struct _edma5_core_tcd

#include <fsl_edma_core.h> edma5 core TCD struture definition

Public Members

```

__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint32_t SADDR_HIGH
    SADDR HIGH register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer
__IO uint16_t ATTR
    ATTR register, source/destination transfer size and modulo
__IO uint32_t NBYTES
    Nbytes register, minor loop length in bytes
__IO uint32_t SLAST
    SLAST register
__IO uint32_t SLAST_SDA_HIGH
    SLAST SDA HIGH register
__IO uint32_t DADDR
    DADDR register, used for destination address
__IO uint32_t DADDR_HIGH
    DADDR HIGH register, used for destination address
__IO uint32_t DLAST_SGA
    DLASTSGA register, next tcd address used in scatter-gather mode
__IO uint32_t DLAST_SGA_HIGH
    DLASTSGA HIGH register, next tcd address used in scatter-gather mode
__IO uint16_t DOFF
    DOFF register, used for destination offset
__IO uint16_t CITER
    CITER register, current minor loop numbers, for unfinished minor loop.
__IO uint16_t CSR
    CSR register, for TCD control status
__IO uint16_t BITER
    BITER register, begin minor loop count.
uint8_t RESERVED[16]
    Aligned 64 bytes
struct __edma4_core_tcd
    #include <fsl_edma_core.h> edma4 core TCD struture definition

```

Public Members

```

__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer

```

__IO uint16_t ATTR
ATTR register, source/destination transfer size and modulo

__IO uint32_t NBYTES
Nbytes register, minor loop length in bytes

__IO uint32_t SLAST
SLAST register

__IO uint32_t DADDR
DADDR register, used for destination address

__IO uint16_t DOFF
DOFF register, used for destination offset

__IO uint16_t CITER
CITER register, current minor loop numbers, for unfinished minor loop.

__IO uint32_t DLAST_SGA
DLASTSGA register, next tcd address used in scatter-gather mode

__IO uint16_t CSR
CSR register, for TCD control status

__IO uint16_t BITER
BITER register, begin minor loop count.

struct _edma_core_tcd
#include <fsl_edma_core.h> edma core TCD struture definition

union MP_REGS

Public Members

struct _edma_core_mp EDMA5_REG

struct EDMA5_REG

Public Members

__IO uint32_t MP_INT_LOW
Channel Control and Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t MP_INT_HIGH
Channel Control and Status, array offset: 0x1000C, array step: 0x10000

__IO uint32_t MP_HRS_LOW
Channel Control and Status, array offset: 0x10010, array step: 0x10000

__IO uint32_t MP_HRS_HIGH
Channel Control and Status, array offset: 0x10014, array step: 0x10000

__IO uint32_t MP_STOPCH
Channel Control and Status, array offset: 0x10020, array step: 0x10000

__IO uint32_t MP_SSR_LOW
Channel Control and Status, array offset: 0x10030, array step: 0x10000

__IO uint32_t MP_SSR_HIGH
Channel Control and Status, array offset: 0x10034, array step: 0x10000

```
__IO uint32_t CH_GRPRI [64]
    Channel Control and Status, array offset: 0x10100, array step: 0x10000
__IO uint32_t CH_MUX [64]
    Channel Control and Status, array offset: 0x10200, array step: 0x10000
__IO uint32_t CH_PROT [64]
    Channel Control and Status, array offset: 0x10400, array step: 0x10000
union CH_REGS
```

Public Members

```
struct_edma_core_channel EDMA5_REG
struct_edma_core_channel EDMA4_REG
struct EDMA5_REG
```

Public Members

```
__IO uint32_t CH_MATTR
    Memory Attributes Register, array offset: 0x10018, array step: 0x8000
struct EDMA4_REG
```

Public Members

```
__IO uint32_t CH_MUX
    Channel Multiplexor Configuration, array offset: 0x10014, array step: 0x10000
__IO uint16_t CH_MATTR
    Memory Attributes Register, array offset: 0x10018, array step: 0x8000
union TCD_REGS
```

Public Members

```
edma4_core_tcd_t edma4_tcd
```

2.9 eDMA soc Driver

```
FSL_EDMA_SOC_DRIVER_VERSION
    Driver version 2.0.0.
FSL_EDMA_SOC_IP_DMA3
    DMA IP version.
FSL_EDMA_SOC_IP_DMA4
EDMA_BASE_PTRS
    DMA base table.
EDMA_CHN_IRQS
```


EDMA_CHANNEL_OFFSET

EDMA base address convert macro.

EDMA_CHANNEL_ARRAY_STEP(base)

2.10 EIM: error injection module

FSL_ERM_DRIVER_VERSION

Driver version.

void EIM_Init(EIM_Type *base)

EIM module initialization function.

Parameters

- base – EIM base address.

void EIM_Deinit(EIM_Type *base)

De-initializes the EIM.

2.11 EQDC: Enhanced Quadrature Encoder/Decoder

void EQDC_Init(EQDC_Type *base, const *eqdc_config_t* *psConfig)

Initializes the EQDC module.

This function initializes the EQDC by enabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.
- psConfig – Pointer to configuration structure.

void EQDC_GetDefaultConfig(*eqdc_config_t* *psConfig)

Gets an available pre-defined configuration.

The default value are:

```
psConfig->enableReverseDirection    = false;
psConfig->countOnce                  = false;
psConfig->operateMode                 = kEQDC_QuadratureDecodeOperationMode;
psConfig->countMode                   = kEQDC_QuadratureX4;
psConfig->homeEnableInitPosCounterMode = kEQDC_HomeInitPosCounterDisabled;
psConfig->indexPresetInitPosCounterMode = kEQDC_IndexInitPosCounterDisabled;
psConfig->enableIndexInitPositionCounter = false;
psConfig->enableDma                   = false;
psConfig->bufferedRegisterLoadMode    = false;
psConfig->enableTriggerInitPositionCounter = false;
psConfig->enableTriggerClearPositionRegisters = false;
psConfig->enableTriggerHoldPositionRegisters = false;
psConfig->enableWatchdog               = false;
psConfig->watchdogTimeoutValue         = 0xFFFFU;
psConfig->filterPhaseA                 = 0U;
psConfig->filterPhaseB                 = 0U;
psConfig->filterIndPre                 = 0U;
psConfig->filterHomEna                 = 0U;
psConfig->filterClockSourceSelection   = false;
psConfig->filterSampleCount            = kEQDC_Filter3Samples;
psConfig->filterSamplePeriod           = 0U;
```

(continues on next page)

(continued from previous page)

```

psConfig->outputPulseMode           = kEQDC_OutputPulseOnCounterEqualCompare;
psConfig->positionCompareValue[0]    = 0xFFFFFFFFU;
psConfig->positionCompareValue[1]    = 0xFFFFFFFFU;
psConfig->positionCompareValue[2]    = 0xFFFFFFFFU;
psConfig->positionCompareValue[3]    = 0xFFFFFFFFU;
psConfig->revolutionCountCondition    = kEQDC_RevolutionCountOnIndexPulse;
psConfig->positionModulusValue        = 0U;
psConfig->positionInitialValue        = 0U;
psConfig->positionCounterValue        = 0U;
psConfig->enablePeriodMeasurement     = false;
psConfig->prescaler                   = kEQDC_Prescaler1;
psConfig->enabledInterruptsMask       = 0U;

```

Parameters

- psConfig – Pointer to configuration structure.

```
void EQDC_Deinit(EQDC_Type *base)
```

De-initializes the EQDC module.

This function deinitializes the EQDC by disabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.

```
void EQDC_SetOperateMode(EQDC_Type *base, eqdc_operate_mode_t operateMode)
```

Initializes the mode of operation.

This function initializes mode of operation by enabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.
- operateMode – Select operation mode.

```
static inline void EQDC_SetCountMode(EQDC_Type *base, eqdc_count_mode_t countMode)
```

Initializes the mode of count.

These bits control the basic counting and behavior of Position Counter and Position Difference Counter. Setting CTRL[REV] to 1 can reverse the counting direction. 1.In quadrature Mode (CTRL[PH1] = 0): 00b - CM0: Normal/Reverse Quadrature X4 01b - CM1: Normal/Reverse Quadrature X2 10b - CM2: Normal/Reverse Quadrature X1 11b - CM3: Reserved 2.In Single Phase Mode (CTRL[PH1] = 1): 00b - CM0: UP/DOWN Pulse Count Mode 01b - CM1: Signed Mode, count PHASEA rising/falling edge, position counter counts up when PHASEB is low and counts down when PHASEB is high 10b - CM2: Signed Count Mode, count PHASEA rising edge only, position counter counts up when PHASEB is low and counts down when PHASEB is high 11b - CM3: Reserved

Parameters

- base – EQDC peripheral base address.
- countMode – Select count mode.

```
static inline void EQDC_EnableWatchdog(EQDC_Type *base, bool bEnable)
```

Enable watchdog for EQDC module.

Parameters

- base – EQDC peripheral base address
- bEnable – Enables or disables the watchdog

static inline void EQDC_SetWatchdogTimeout(EQDC_Type *base, uint16_t u16Timeout)
Set watchdog timeout value.

Parameters

- base – EQDC peripheral base address
- u16Timeout – Number of clock cycles, plus one clock cycle that the watchdog timer counts before timing out

static inline void EQDC_EnableDMA(EQDC_Type *base, bool bEnable)
Enable DMA for EQDC module.

Parameters

- base – EQDC peripheral base address
- bEnable – Enables or disables the DMA

static inline void EQDC_SetBufferedRegisterLoadUpdateMode(EQDC_Type *base)
Set Buffered Register Load (Update) Mode.

This bit selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UNIT/LINIT), and modulus register (UMOD/LMOD). Buffered registers are loaded and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

static inline void EQDC_ClearBufferedRegisterLoadUpdateMode(EQDC_Type *base)
Clear Buffered Register Load (Update) Mode.

Buffered Register Load (Update) Mode bit selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UNIT/LINIT), and modulus register (UMOD/LMOD). Buffered registers are loaded and take effect immediately upon CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

static inline void EQDC_SetEqdcLdok(EQDC_Type *base)
Set load okay.

Load okay enables that the outer-set values of buffered compare registers (UCOMPx/LCOMPx, x=0~3), initial register(UNIT/LINIT) and modulus register(UMOD/LMOD) can be loaded into their inner-sets and take effect. When LDOK is set, this loading action occurs at the next position counter roll-over or roll-under if CTRL2[LDMOD] is set, or it occurs immediately if CTRL2[LDMOD] is cleared. LDOK is automatically cleared after the values in outer-set is loaded into the inner-set.

Parameters

- base – EQDC peripheral base address.

static inline uint8_t EQDC_GetEqdcLdok(EQDC_Type *base)
Get load okay.

Parameters

- base – EQDC peripheral base address.

static inline void EQDC_ClearEqdcLdok(EQDC_Type *base)
Clear load okay.

Parameters

- base – EQDC peripheral base address.

static inline uint32_t EQDC_GetStatusFlags(EQDC_Type *base)

Get the status flags.

Parameters

- base – EQDC peripheral base address.

Returns

Logical OR'ed value of the status flags, `_eqdc_status_flags`.

static inline void EQDC_ClearStatusFlags(EQDC_Type *base, uint32_t u32Flags)

Clear the status flags.

Parameters

- base – EQDC peripheral base address.
- u32Flags – Logical OR'ed value of the flags to clear, `_eqdc_status_flags`.

static inline uint16_t EQDC_GetSignalStatusFlags(EQDC_Type *base)

Get the signals' real-time status.

Parameters

- base – EQDC peripheral base address.

Returns

Logical OR'ed value of the real-time signal status, `_eqdc_signal_status`.

static inline *eqdc_count_direction_flag_t* EQDC_GetLastCountDirection(EQDC_Type *base)

Get the direction of the last count.

Parameters

- base – EQDC peripheral base address.

Returns

Direction of the last count.

static inline void EQDC_EnableInterrupts(EQDC_Type *base, uint32_t u32Interrupts)

Enable the interrupts.

Parameters

- base – EQDC peripheral base address.
- u32Interrupts – Logical OR'ed value of the interrupts, `_eqdc_interrupt_enable`.

static inline void EQDC_DisableInterrupts(EQDC_Type *base, uint32_t u32Interrupts)

Disable the interrupts.

Parameters

- base – EQDC peripheral base address.
- u32Interrupts – Logical OR'ed value of the interrupts, `_eqdc_interrupt_enable`.

static inline void EQDC_DoSoftwareLoadInitialPositionValue(EQDC_Type *base)

Load the initial position value to position counter.

Software trigger to load the initial position value (UNIT and LINIT) contents to position counter (UPOS and LPOS), so that to provide the consistent operation the position counter registers.

Parameters

- base – EQDC peripheral base address.

```
static inline void EQDC_SetInitialPositionValue(EQDC_Type *base, uint32_t
                                              u32PositionInitValue)
```

Set initial position value for EQDC module.

Set the position counter initial value (UNIT, LINIT). After writing values to the UNIT and LINIT registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionInitValue – Position initial value

```
static inline void EQDC_SetPositionCounterValue(EQDC_Type *base, uint32_t
                                              positionCounterValue)
```

Set position counter value.

Set the position counter value (POS or UPOS, LPOS).

Parameters

- base – EQDC peripheral base address
- positionCounterValue – Position counter value

```
static inline void EQDC_SetPositionModulusValue(EQDC_Type *base, uint32_t
                                              positionModulusValue)
```

Set position counter modulus value.

Set the position counter modulus value (UMOD, LMOD). After writing values to the UMOD and LMOD registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- positionModulusValue – Position modulus value

```
static inline void EQDC_SetPositionCompare0Value(EQDC_Type *base, uint32_t
                                              u32PositionComp0Value)
```

Set position counter compare 0 value.

Set the position counter compare 0 value (UCOMP0, LCOMP0). After writing values to the UCOMP0 and LCOMP0 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp0Value – Position modulus value

```
static inline void EQDC_SetPositionCompare1Value(EQDC_Type *base, uint32_t
                                                u32PositionComp1Value)
```

Set position counter compare 1 value.

Set the position counter compare 1 value (UCOMP1, LCOMP1). After writing values to the UCOMP1 and LCOMP1 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp1Value – Position modulus value

```
static inline void EQDC_SetPositionCompare2Value(EQDC_Type *base, uint32_t
                                                u32PositionComp2Value)
```

Set position counter compare 2 value.

Set the position counter compare 2 value (UCOMP2, LCOMP2). After writing values to the UCOMP2 and LCOMP2 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp2Value – Position modulus value

```
static inline void EQDC_SetPositionCompare3Value(EQDC_Type *base, uint32_t
                                                u32PositionComp3Value)
```

Set position counter compare 3 value.

Set the position counter compare 3 value (UCOMP3, LCOMP3). After writing values to the UCOMP3 and LCOMP3 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

- u32PositionComp3Value – Position modulus value

static inline uint32_t EQDC_GetPosition(EQDC_Type *base)

Get the current position counter's value.

Parameters

- base – EQDC peripheral base address.

Returns

Current position counter's value.

static inline uint32_t EQDC_GetHoldPosition(EQDC_Type *base)

Get the hold position counter's value.

The position counter (POS or UPOS, LPOS) value is loaded to hold position (POSH or UPOSH, LPOSH) when:

- a. Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read.
- b. TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter's value.

static inline uint32_t EQDC_GetHoldPosition1(EQDC_Type *base)

Get the hold position counter1's value.

The Upper Position Counter Hold Register 1(UPOSH1) shares the same address with UCOMP1. When read, this register means the value of UPOSH1, which is the upper 16 bits of POSH1. The Lower Position Counter Hold Register 1(LPOSH1) shares the same address with LCOMP1. When read, this register means the value of LPOSH1, which is the lower 16 bits of POSH1. Position counter is captured into POSH1 on the rising edge of ICAP[1].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter1's value.

static inline uint32_t EQDC_GetHoldPosition2(EQDC_Type *base)

Get the hold position counter2's value.

The Upper Position Counter Hold Register 2(UPOSH2) shares the same address with UCOMP2. When read, this register means the value of UPOSH2, which is the upper 16 bits of POSH2. The Lower Position Counter Hold Register 2(LPOSH2) shares the same address with LCOMP2. When read, this register means the value of LPOSH2, which is the lower 16 bits of POSH2. Position counter is captured into POSH2 on the rising edge of ICAP[2].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter2's value.

static inline uint32_t EQDC_GetHoldPosition3(EQDC_Type *base)

Get the hold position counter3's value.

The Upper Position Counter Hold Register 3(UPOSH3) shares the same address with UCOMP3. When read, this register means the value of UPOSH3, which is the upper 16 bits of POSH3. The Lower Position Counter Hold Register 3(LPOSH3) shares the same address

with LCOMP3. When read, this register means the value of LPOSH3, which is the lower 16 bits of POSH3. Position counter is captured into POSH3 on the rising edge of ICAP[3].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter3's value.

```
static inline uint16_t EQDC_GetPositionDifference(EQDC_Type *base)
```

Get the position difference counter's value.

Parameters

- base – EQDC peripheral base address.

Returns

The position difference counter's value.

```
static inline uint16_t EQDC_GetHoldPositionDifference(EQDC_Type *base)
```

Get the hold position difference counter's value.

The position difference (POSD) value is loaded to hold position difference (POSDH) when:

- Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read. When Period Measurement is enabled (CTRL3[PMEN] = 1), POSDH will only be updated when reading POSD.
- TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position difference counter's value.

```
static inline uint16_t EQDC_GetRevolution(EQDC_Type *base)
```

Get the revolution counter's value.

Get the revolution counter (REV) value.

Parameters

- base – EQDC peripheral base address.

Returns

The revolution counter's value.

```
static inline uint16_t EQDC_GetHoldRevolution(EQDC_Type *base)
```

Get the hold revolution counter's value.

The revolution counter (REV) value is loaded to hold revolution (REXH) when:

- Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read.
- TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position revolution counter's value.


```
static inline uint16_t EQDC_GetLastEdgeTime(EQDC_Type *base)
```

Get the last edge time.

Last edge time (LASTEDGE) is the time since the last edge occurred on PHASEA or PHASEB. The last edge time register counts up using the peripheral clock after prescaler. Any edge on PHASEA or PHASEB will reset this register to 0 and start counting. If the last edge timer count reaches 0xffff, the counting will stop in order to prevent an overflow. Counting will continue when an edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The last edge time.

```
static inline uint16_t EQDC_GetHoldLastEdgeTime(EQDC_Type *base)
```

Get the hold last edge time.

The hold of last edge time (LASTEDGEH) is update to last edge time (LASTEDGE) when the position difference register (POSD) is read.

Parameters

- base – EQDC peripheral base address.

Returns

Hold of last edge time.

```
static inline uint16_t EQDC_GetPositionDifferencePeriod(EQDC_Type *base)
```

Get the Position Difference Period counter value.

The Position Difference Period counter (POSDPER) counts up using the prescaled peripheral clock. When reading the position difference register (POSD), the last edge time (LASTEDGE) will be loaded to position difference period counter (POSDPER). If the POSDPER count reaches 0xffff, the counting will stop in order to prevent an overflow. Counting will continue when an edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The position difference period counter value.

```
static inline uint16_t EQDC_GetBufferedPositionDifferencePeriod(EQDC_Type *base)
```

Get buffered Position Difference Period counter value.

The Bufferd Position Difference Period (POSDPERBFR) value is updated with the position difference period counter (POSDPER) when any edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The buffered position difference period counter value.

```
static inline uint16_t EQDC_GetHoldPositionDifferencePeriod(EQDC_Type *base)
```

Get Hold Position Difference Period counter value.

The hold position difference period (POSDPERH) is updated with the value of buffered position difference period (POSDPERBFR) when the position difference (POSD) register is read.

Parameters

- base – EQDC peripheral base address.

Returns

The hold position difference period counter value.

enum `_eqdc_status_flags`

EQDC status flags, these flags indicate the counter's events. .

Values:

enumerator `kEQDC_HomeEnableTransitionFlag`

HOME/ENABLE signal transition occurred.

enumerator `kEQDC_IndexPresetPulseFlag`

INDEX/PRESET pulse occurred.

enumerator `kEQDC_WatchdogTimeoutFlag`

Watchdog timeout occurred.

enumerator `kEQDC_SimultPhaseChangeFlag`

Simultaneous change of PHASEA and PHASEB occurred.

enumerator `kEQDC_CountDirectionChangeFlag`

Count direction change interrupt enable.

enumerator `kEQDC_PositionRollOverFlag`

Position counter rolls over from 0xFFFFFFFF to 0, or from MOD value to INIT value.

enumerator `kEQDC_PositionRollUnderFlag`

Position register roll under from 0 to 0xFFFFFFFF, or from INIT value to MOD value.

enumerator `kEQDC_PositionCompare0Flag`

Position counter match the COMP0 value.

enumerator `kEQDC_PositionCompare1Flag`

Position counter match the COMP1 value.

enumerator `kEQDC_PositionCompare2Flag`

Position counter match the COMP2 value.

enumerator `kEQDC_PositionCompare3Flag`

Position counter match the COMP3 value.

enumerator `kEQDC_StatusAllFlags`

enum `_eqdc_signal_status`

Signal status, these flags indicate the raw and filtered input signal status. .

Values:

enumerator `kEQDC_SignalStatusRawHomeEnable`

Raw HOME/ENABLE input.

enumerator `kEQDC_SignalStatusRawIndexPreset`

Raw INDEX/PRESET input.

enumerator `kEQDC_SignalStatusRawPhaseB`

Raw PHASEB input.

enumerator `kEQDC_SignalStatusRawPhaseA`

Raw PHASEA input.

enumerator `kEQDC_SignalStatusFilteredHomeEnable`

The filtered HOME/ENABLE input.

enumerator kEQDC_SignalStatusFilteredIndexPreset

The filtered INDEX/PRESET input.

enumerator kEQDC_SignalStatusFilteredPhaseB

The filtered PHASEB input.

enumerator kEQDC_SignalStatusFilteredPhaseA

The filtered PHASEA input.

enumerator kEQDC_SignalStatusPositionCompare0Flag

Position Compare 0 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare1Flag

Position Compare 1 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare2Flag

Position Compare 2 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare3Flag

Position Compare 3 Flag Output.

enumerator kEQDC_SignalStatusCountDirectionFlagHold

Count Direction Flag Hold.

enumerator kEQDC_SignalStatusCountDirectionFlag

Count Direction Flag Output.

enumerator kEQDC_SignalStatusAllFlags

enum _eqdc_interrupt_enable

Interrupt enable/disable mask. .

Values:

enumerator kEQDC_HomeEnableTransitionInterruptEnable

HOME/ENABLE signal transition interrupt enable.

enumerator kEQDC_IndexPresetPulseInterruptEnable

INDEX/PRESET pulse interrupt enable.

enumerator kEQDC_WatchdogTimeoutInterruptEnable

Watchdog timeout interrupt enable.

enumerator kEQDC_SimultPhaseChangeInterruptEnable

Simultaneous PHASEA and PHASEB change interrupt enable.

enumerator kEQDC_CountDirectionChangeInterruptEnable

Count direction change interrupt enable.

enumerator kEQDC_PositionRollOverInterruptEnable

Roll-over interrupt enable.

enumerator kEQDC_PositionRollUnderInterruptEnable

Roll-under interrupt enable.

enumerator kEQDC_PositionCompare0InterruptEnable

Position compare 0 interrupt enable.

enumerator kEQDC_PositionCompare1InterruptEnable

Position compare 1 interrupt enable.

enumerator kEQDC_PositionCompare2InterruptEnable

Position compare 2 interrupt enable.

enumerator kEQDC_PositionCompare3InterruptEnable
Position compare 3 interrupt enable.

enumerator kEQDC_AllInterruptEnable

enum _eqdc_home_enable_init_pos_counter_mode
Define HOME/ENABLE signal's trigger mode.

Values:

enumerator kEQDC_HomeInitPosCounterDisabled
Don't use HOME/ENABLE signal to initialize the position counter.

enumerator kEQDC_HomeInitPosCounterOnRisingEdge
Use positive going edge to trigger initialization of position counters.

enumerator kEQDC_HomeInitPosCounterOnFallingEdge
Use negative going edge to trigger initialization of position counters.

enum _eqdc_index_preset_init_pos_counter_mode
Define INDEX/PRESET signal's trigger mode.

Values:

enumerator kEQDC_IndexInitPosCounterDisabled
INDEX/PRESET pulse does not initialize the position counter.

enumerator kEQDC_IndexInitPosCounterOnRisingEdge
Use INDEX/PRESET pulse rising edge to initialize position counter.

enumerator kEQDC_IndexInitPosCounterOnFallingEdge
Use INDEX/PRESET pulse falling edge to initialize position counter.

enum _eqdc_operate_mode
Define type for decoder operation mode.

The Quadrature Decoder operates in following 4 operation modes: 1. Quadrature Decode(QDC) Operation Mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 0) In QDC operation mode, Module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 2. Quadrature Count(QCT) Operation Mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 1) In QCT operation mode, Module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor. 3. Single Phase Decode(PH1DC) Operation Mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 0) In PH1DC operation mode, the module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 4. Single Phase Count(PH1CT) Operation Mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 1) In PH1CT operation mode, the module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor.

Values:

enumerator kEQDC_QuadratureDecodeOperationMode
Use standard quadrature decoder with PHASEA/PHASEB, INDEX/HOME.

enumerator kEQDC_QuadratureCountOperationMode
Use quadrature count operation mode with PHASEA/PHASEB, PRESET/ENABLE.

enumerator kEQDC_SinglePhaseDecodeOperationMode
Use single phase quadrature decoder with PHASEA/PHASEB, INDEX/HOME.

enumerator kEQDC_SinglePhaseCountOperationMode
Use single phase count decoder with PHASEA/PHASEB, PRESET/ENABLE.

enum _eqdc_count_mode

Define type for decoder count mode.

In decode mode, it uses the standard quadrature decoder with PHASEA and PHASEB, PHASEA = 0 and PHASEB = 0 mean reverse direction.

- If PHASEA leads PHASEB, then motion is in the positive direction.
- If PHASEA trails PHASEB, then motion is in the negative direction. In single phase mode, there are three count modes:
- In Signed Count mode (Single Edge). Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down). If CTRL[REV] is 1, then the position counter will count in the opposite direction.
- In Signed Count mode (double edge), both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down).
- In UP/DOWN Pulse Count mode. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs. Both counters count in the down direction when input PHASEB rising edge occurs. If CTRL[REV] is 1, then the position counter will count in the opposite direction.

Values:

enumerator kEQDC_QuadratureX4

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_QuadratureX2

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_QuadratureX1

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_UpDownPulseCount

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enumerator kEQDC_SignedCountDoubleEdge

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enumerator kEQDC_SignedCountSingleEdge

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enum _eqdc_output_pulse_mode

Define type for the condition of POSMATCH pulses.

Values:

enumerator kEQDC_OutputPulseOnCounterEqualCompare

POSMATCH pulses when a match occurs between the position counters (POS) and the compare value (UCOMPx/LCOMPx)(x range is 0-3).

enumerator kEQDC_OutputPulseOnReadingPositionCounter

POSMATCH pulses when reading position counter(POS and LPOS), revolution counter(REV), position difference counter(POSD).

enum _eqdc_revolution_count_condition

Define type for determining how the revolution counter (REV) is incremented/decremented.

Values:

enumerator kEQDC_RevolutionCountOnIndexPulse

Use INDEX pulse to increment/decrement revolution counter.

enumerator kEQDC_RevolutionCountOnRollOverModulus

Use modulus counting roll-over/under to increment/decrement revolution counter.

enum __eqdc_filter_sample_count

Input Filter Sample Count.

The Input Filter Sample Count represents the number of consecutive samples that must agree, before the input filter accepts an input transition

Values:

enumerator kEQDC_Filter3Samples

3 samples.

enumerator kEQDC_Filter4Samples

4 samples.

enumerator kEQDC_Filter5Samples

5 samples.

enumerator kEQDC_Filter6Samples

6 samples.

enumerator kEQDC_Filter7Samples

7 samples.

enumerator kEQDC_Filter8Samples

8 samples.

enumerator kEQDC_Filter9Samples

9 samples.

enumerator kEQDC_Filter10Samples

10 samples.

enum __eqdc_count_direction_flag

Count direction.

Values:

enumerator kEQDC_CountDirectionDown

Last count was in down direction.

enumerator kEQDC_CountDirectionUp

Last count was in up direction.

enum __eqdc_prescaler

Prescaler used by Last Edge Time (LASTEDGE) and Position Difference Period Counter (POS-DPER).

Values:

enumerator kEQDC_Prescaler1

Prescaler value 1.

enumerator kEQDC_Prescaler2

Prescaler value 2.

enumerator kEQDC_Prescaler4

Prescaler value 4.

enumerator kEQDC_Prescaler8

Prescaler value 8.

enumerator kEQDC_Prescaler16

Prescaler value 16.

enumerator kEQDC_Prescaler32

Prescaler value 32.

enumerator kEQDC_Prescaler64

Prescaler value 64.

enumerator kEQDC_Prescaler128

Prescaler value 128.

enumerator kEQDC_Prescaler256

Prescaler value 256.

enumerator kEQDC_Prescaler512

Prescaler value 512.

enumerator kEQDC_Prescaler1024

Prescaler value 1024.

enumerator kEQDC_Prescaler2048

Prescaler value 2048.

enumerator kEQDC_Prescaler4096

Prescaler value 4096.

enumerator kEQDC_Prescaler8192

Prescaler value 8192.

enumerator kEQDC_Prescaler16384

Prescaler value 16384.

enumerator kEQDC_Prescaler32768

Prescaler value 32768.

`typedef enum _eqdc_home_enable_init_pos_counter_mode`

`eqdc_home_enable_init_pos_counter_mode_t`

Define HOME/ENABLE signal's trigger mode.

`typedef enum _eqdc_index_preset_init_pos_counter_mode`

`eqdc_index_preset_init_pos_counter_mode_t`

Define INDEX/PRESET signal's trigger mode.

`typedef enum _eqdc_operate_mode eqdc_operate_mode_t`

Define type for decoder operation mode.

The Quadrature Decoder operates in following 4 operation modes: 1.Quadrature Decode(QDC) Operation Mode (CTRL[PH1] = 0,CTRL2[OPMODE] = 0) In QDC operation mode, Module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 2.Quadrature Count(QCT) Operation Mode (CTRL[PH1] = 0,CTRL2[OPMODE] = 1) In QCT operation mode, Module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor. 3.Single Phase Decode(PH1DC) Operation Mode (CTRL[PH1] = 1,CTRL2[OPMODE] = 0) In PH1DC operation mode, the module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 4.Single Phase Count(PH1CT) Operation Mode (CTRL[PH1] = 1,CTRL2[OPMODE] = 1) In PH1CT operation mode, the module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor.

```
typedef enum _eqdc_count_mode eqdc_count_mode_t
```

Define type for decoder count mode.

In decode mode, it uses the standard quadrature decoder with PHASEA and PHASEB, PHASEA = 0 and PHASEB = 0 mean reverse direction.

- If PHASEA leads PHASEB, then motion is in the positive direction.
- If PHASEA trails PHASEB, then motion is in the negative direction. In single phase mode, there are three count modes:
- In Signed Count mode (Single Edge). Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down). If CTRL[REV] is 1, then the position counter will count in the opposite direction.
- In Signed Count mode (double edge), both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down).
- In UP/DOWN Pulse Count mode. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs. Both counters count in the down direction when input PHASEB rising edge occurs. If CTRL[REV] is 1, then the position counter will count in the opposite direction.

```
typedef enum _eqdc_output_pulse_mode eqdc_output_pulse_mode_t
```

Define type for the condition of POSMATCH pulses.

```
typedef enum _eqdc_revolution_count_condition eqdc_revolution_count_condition_t
```

Define type for determining how the revolution counter (REV) is incremented/decremented.

```
typedef enum _eqdc_filter_sample_count eqdc_filter_sample_count_t
```

Input Filter Sample Count.

The Input Filter Sample Count represents the number of consecutive samples that must agree, before the input filter accepts an input transition

```
typedef enum _eqdc_count_direction_flag eqdc_count_direction_flag_t
```

Count direction.

```
typedef enum _eqdc_prescaler eqdc_prescaler_t
```

Prescaler used by Last Edge Time (LASTEDGE) and Position Difference Period Counter (POSDPER).

```
typedef struct _eqdc_config eqdc_config_t
```

Define user configuration structure for EQDC module.

```
FSL_EQDC_DRIVER_VERSION
```

```
EQDC_CTRL_W1C_FLAGS
```

W1C bits in EQDC CTRL registers.

```
EQDC_INTCTRL_W1C_FLAGS
```

W1C bits in EQDC INTCTRL registers.

```
EQDC_CTRL_INT_EN
```

Interrupt enable bits in EQDC CTRL registers.

```
EQDC_INTCTRL_INT_EN
```

Interrupt enable bits in EQDC INTCTRL registers.

```
EQDC_CTRL_INT_FLAGS
```

Interrupt flag bits in EQDC CTRL registers.

EQDC_INTCTRL_INT_FLAGS

Interrupt flag bits in EQDC INTCTRL registers.

kEQDC_PositionCompare0InterruptEnable

kEQDC_PositionCompare1InterruptEnable

kEQDC_PositionCompare2InterruptEnable

kEQDC_PositionCompare3InterruptEnable

struct _eqdc_config

#include <fsl_eqdc.h> Define user configuration structure for EQDC module.

Public Members

bool enableReverseDirection

Enable reverse direction counting.

bool countOnce

Selects modulo loop or one shot counting mode.

bool enableDma

Enable DMA for new written buffer values of COMPx/INIT/MOD(x range is 0-3)

bool bufferedRegisterLoadMode

selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UINIT/LINIT), and modulus register (UMOD/LMOD).

bool enableTriggerInitPositionCounter

Initialize position counter with initial register(UINIT, LINIT) value on TRIGGER's rising edge.

bool enableIndexInitPositionCounter

Enables the feature that the position counter to be initialized by Index Event Edge Mark.

This option works together with `_eqdc_index_preset_init_pos_counter_mode` and `enableReverseDirection`; If enabled, the behavior is like this:

When PHA leads PHB (Clockwise): If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnRisingEdge`, then INDEX rising edge reset position counter. If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnFallingEdge`, then INDEX falling edge reset position counter. If `enableReverseDirection` is false, then Reset position counter to initial value. If `enableReverseDirection` is true, then reset position counter to modulus value.

When PHA lags PHB (Counter Clockwise): If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnRisingEdge`, then INDEX falling edge reset position counter. If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnFallingEdge`, then INDEX rising edge reset position counter. If `enableReverseDirection` is false, then Reset position counter to modulus value. If `enableReverseDirection` is true, then reset position counter to initial value.

bool enableTriggerClearPositionRegisters

Clear position counter(POS), revolution counter(REV), position difference counter(POSD) on TRIGGER's rising edge.

bool enableTriggerHoldPositionRegisters

Load position counter(POS), revolution counter(REV), position difference counter(POSD) values to hold registers on TRIGGER's rising edge.

`bool filterPhaseA`

Filter operation on PHASEA input, when write 1, it means filter for PHASEA input is bypassed.

`bool filterPhaseB`

Filter operation on PHASEB input, when write 1, it means filter for PHASEB input is bypassed.

`bool filterIndPre`

Filter operation on INDEX/PRESET input, when write 1, it means filter for INDEX/PRESET input is bypassed.

`bool filterHomEna`

Filter operation on HOME/ENABLE input, when write 1, it means filter for HOME/ENABLE input is bypassed.

`bool enableWatchdog`

Enable the watchdog to detect if the target is moving or not.

`uint16_t watchdogTimeoutValue`

Watchdog timeout count value. It stores the timeout count for the quadrature decoder module watchdog timer.

`eqdc_prescaler_t prescaler`

Prescaler.

`bool filterClockSourceselection`

Filter Clock Source selection.

`eqdc_filter_sample_count_t filterSampleCount`

Input Filter Sample Count. This value should be chosen to reduce the probability of noisy samples causing an incorrect transition to be recognized. The value represent the number of consecutive samples that must agree prior to the input filter accepting an input transition.

`uint8_t filterSamplePeriod`

Input Filter Sample Period. This value should be set such that the sampling period is larger than the period of the expected noise. This value represents the sampling period (in IPBus clock cycles) of the decoder input signals. The available range is 0 - 255.

`eqdc_operate_mode_t operateMode`

Selects operation mode.

`eqdc_count_mode_t countMode`

Selects count mode.

`eqdc_home_enable_init_pos_counter_mode_t homeEnableInitPosCounterMode`

Select how HOME/Enable signal used to initialize position counters.

`eqdc_index_preset_init_pos_counter_mode_t indexPresetInitPosCounterMode`

Select how INDEX/Preset signal used to initialize position counters.

`eqdc_output_pulse_mode_t outputPulseMode`

The condition of POSMATCH pulses.

`uint32_t positionCompareValue[4]`

Position compare 0 ~ 3 value. The available value is a 32-bit number.

`eqdc_revolution_count_condition_t revolutionCountCondition`

Revolution Counter Modulus Enable.

uint32_t positionModulusValue

Position modulus value. The available value is a 32-bit number.

uint32_t positionInitialValue

Position initial value. The available value is a 32-bit number.

uint32_t positionCounterValue

Position counter value. When Modulo mode enabled, the positionCounterValue should be in the range of positionInitialValue and positionModulusValue.

bool enablePeriodMeasurement

Enable period measurement. When enabled, the position difference hold register (POSDH) is only updated when position difference register (POSD) is read.

uint16_t enabledInterruptsMask

Mask of interrupts to be enabled, should be OR'ed value of _eqdc_interrupt_enable.

2.12 ERM: error recording module

void ERM_Init(ERM_Type *base)

ERM module initialization function.

Parameters

- base – ERM base address.

void ERM_Deinit(ERM_Type *base)

De-initializes the ERM.

static inline void ERM_EnableInterrupts(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)

ERM enable interrupts.

Parameters

- base – ERM peripheral base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline void ERM_DisableInterrupts(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)

ERM module disable interrupts.

Parameters

- base – ERM base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline uint32_t ERM_GetInterruptStatus(ERM_Type *base, erm_memory_channel_t channel)

Gets ERM interrupt flags.

Parameters

- base – ERM peripheral base address.

Returns

ERM event flags.

```
static inline void ERM_ClearInterruptStatus(ERM_Type *base, erm_memory_channel_t channel,
                                           uint32_t mask)
```

ERM module clear interrupt status flag.

Parameters

- base – ERM base address.
- mask – event flag to clear. Refer to “_erm_interrupt_flag” enumeration.

```
uint32_t ERM_GetMemoryErrorAddr(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get memory error absolute address, which capturing the address of the last ECC event in Memory n.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

memory – error absolute address.

```
uint32_t ERM_GetSyndrome(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get syndrome, which identifies the pertinent bit position on a correctable, single-bit data inversion or a non-correctable, single-bit address inversion. The syndrome value does not provide any additional diagnostic information on non-correctable, multi-bit inversions.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

syndrome – value.

```
uint32_t ERM_GetErrorCount(ERM_Type *base, erm_memory_channel_t channel)
```

ERM get error count, which records the count value of the number of correctable ECC error events for Memory n. Non-correctable errors are considered a serious fault, so the ERM does not provide any mechanism to count non-correctable errors. Only correctable errors are counted.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

error – count.

```
void ERM_ResetErrorCount(ERM_Type *base, erm_memory_channel_t channel)
```

ERM reset error count.

Parameters

- base – ERM base address.
- channel – memory channel.

```
FSL_ERM_DRIVER_VERSION
```

Driver version.

ERM interrupt configuration structure, default settings all disabled, `_erm_interrupt_enable`. This structure contains the settings for all of the ERM interrupt configurations.

Values:

enumerator `kERM_SingleCorrectionIntEnable`
Single Correction Interrupt Notification enable.

enumerator `kERM_NonCorrectableIntEnable`
Non-Correction Interrupt Notification enable.

enumerator `kERM_AllInterruptsEnable`
All Interrupts enable

ERM interrupt status, `_erm_interrupt_flag`.

This provides constants for the ERM event status for use in the ERM functions.

Values:

enumerator `kERM_SingleBitCorrectionIntFlag`
Single-Bit Correction Event.

enumerator `kERM_NonCorrectableErrorIntFlag`
Non-Correctable Error Event.

enumerator `kERM_AllIntsFlag`
All Events.

2.13 FGPIO Driver

2.14 FlexCAN: Flex Controller Area Network Driver

2.15 FlexCAN Driver

`bool FLEXCAN_IsInstanceHasFDMode(CAN_Type *base)`

Determine whether the FlexCAN instance support CAN FD mode at run time.

Note: Use this API only if different soc parts share the SOC part name macro define. Otherwise, a different SOC part name can be used to determine at compile time whether the FlexCAN instance supports CAN FD mode or not. If need use this API to determine if CAN FD mode is supported, the `FLEXCAN_Init` function needs to be executed first, and then call this API and use the return to value determines whether to supports CAN FD mode, if return true, continue calling `FLEXCAN_FDInit` to enable CAN FD mode.

Parameters

- `base` – FlexCAN peripheral base address.

Returns

return TRUE if instance support CAN FD mode, FALSE if instance only support classic CAN (2.0) mode.

status_t FLEXCAN_EnterFreezeMode(CAN_Type *base)

Enter FlexCAN Freeze Mode.

This function makes the FlexCAN work under Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

status_t FLEXCAN_ExitFreezeMode(CAN_Type *base)

Exit FlexCAN Freeze Mode.

This function makes the FlexCAN leave Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

uint32_t FLEXCAN_GetInstance(CAN_Type *base)

Get the FlexCAN instance from peripheral base address.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN instance.

bool FLEXCAN_CalculateImprovedTimingValues(CAN_Type *base, *uint32_t* bitRate, *uint32_t* sourceClock_Hz, *flexcan_timing_config_t* *pTimingConfig)

Calculates the improved timing values by specific bit Rates for classical CAN.

This function use to calculates the Classical CAN timing values according to the given bit rate. The Calculated timing values will be set in CTRL1/CBT/ENCBT register. The calculation is based on the recommendation of the CiA 301 v4.2.0 and previous version document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The classical CAN speed in bps defined by user, should be less than or equal to 1Mbps.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration.

void FLEXCAN_Init(CAN_Type *base, const *flexcan_config_t* *pConfig, *uint32_t* sourceClock_Hz)

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the *flexcan_config_t* parameters and how to call the FLEXCAN_Init function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc      = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate     = 1000000U;
flexcanConfig.maxMbNum    = 16;
flexcanConfig.enableLoopBack = false;
flexcanConfig.enableSelfWakeup = false;
flexcanConfig.enableIndividMask = false;
flexcanConfig.enableDoze    = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
flexcanConfig.timingConfig = timingConfig;
FLEXCAN_Init(CAN0, &flexcanConfig, 4000000UL);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.

```
bool FLEXCAN_FDCalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t
                                             bitRateFD, uint32_t sourceClock_Hz,
                                             flexcan_timing_config_t *pTimingConfig)
```

Calculates the improved timing values by specific bit rates for CANFD.

This function use to calculates the CANFD timing values according to the given nominal phase bit rate and data phase bit rate. The Calculated timing values will be set in CBT/ENCBT and FDCBT/EDCBT registers. The calculation is based on the recommendation of the CiA 1301 v1.0.0 document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The CANFD bus control speed in bps defined by user.
- bitRateFD – The CAN FD data phase speed in bps defined by user. Equal to bitRate means disable bit rate switching.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration

```
void FLEXCAN_FDInit(CAN_Type *base, const flexcan_config_t *pConfig, uint32_t
                   sourceClock_Hz, flexcan_mb_size_t dataSize, bool brs)
```

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_FDInit function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc      = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate     = 1000000U;
flexcanConfig.bitRateFD   = 2000000U;
flexcanConfig.maxMbNum    = 16;
flexcanConfig.enableLoopBack = false;
flexcanConfig.enableSelfWakeup = false;
flexcanConfig.enableIndividMask = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
```

(continues on next page)

(continued from previous page)

```
flexcanConfig.enableDoze      = false;
flexcanConfig.timingConfig    = timingConfig;
FLEXCAN_FDInit(CAN0, &flexcanConfig, 8000000UL, kFLEXCAN_16BperMB, true);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.
- dataSize – FlexCAN Message Buffer payload size. The actual transmitted or received CAN FD frame data size needs to be less than or equal to this value.
- brs – True if bit rate switch is enabled in FD mode.

void FLEXCAN_Deinit(CAN_Type *base)

De-initializes a FlexCAN instance.

This function disables the FlexCAN module clock and sets all register values to the reset value.

Parameters

- base – FlexCAN peripheral base address.

void FLEXCAN_GetDefaultConfig(*flexcan_config_t* *pConfig)

Gets the default configuration structure.

This function initializes the FlexCAN configuration structure to default values. The default values are as follows. `flexcanConfig->clkSrc = kFLEXCAN_ClkSrc0;` `flexcanConfig->bitRate = 1000000U;` `flexcanConfig->bitRateFD = 2000000U;` `flexcanConfig->maxMbNum = 16;` `flexcanConfig->enableLoopBack = false;` `flexcanConfig->enableSelfWakeup = false;` `flexcanConfig->enableIndividMask = false;` `flexcanConfig->disableSelfReception = false;` `flexcanConfig->enableListenOnlyMode = false;` `flexcanConfig->enableDoze = false;` `flexcanConfig->enablePretendedNetworking = false;` `flexcanConfig->enableMemoryErrorControl = true;` `flexcanConfig->enableNonCorrectableErrorEnterFreeze = true;` `flexcanConfig->enableTransceiverDelayMeasure = true;` `flexcanConfig->enableRemoteRequestFrameStored = true;` `flexcanConfig->payloadEndianness = kFLEXCAN_bigEndian;` `flexcanConfig.timingConfig = timingConfig;`

Parameters

- pConfig – Pointer to the FlexCAN configuration structure.

void FLEXCAN_SetTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN classical CAN protocol timing characteristic.

This function gives user settings to classical CAN or CAN FD nominal phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetBitRate() instead.

Note: Calling FLEXCAN_SetTimingConfig() overrides the bit rate set in FLEXCAN_Init() or FLEXCAN_SetBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRate_Bps)

Set bit rate of FlexCAN classical CAN frame or CAN FD frame nominal phase.

This function set the bit rate of classical CAN frame or CAN FD frame nominal phase base on FLEXCAN_CalculateImprovedTimingValues() API calculated timing values.

Note: Calling FLEXCAN_SetBitRate() overrides the bit rate set in FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRate_Bps – Bit rate in Bps.

Returns

kStatus_Success - Set CAN baud rate (only Nominal phase) successfully.

void FLEXCAN_SetFDTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN CANFD data phase timing characteristic.

This function gives user settings to CANFD data phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetFDBitRate() to set both Nominal/Data bit Rate instead.

Note: Calling FLEXCAN_SetFDTimingConfig() overrides the data phase bit rate set in FLEXCAN_FDInit()/FLEXCAN_SetFDBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetFDBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRateN_Bps, uint32_t bitRateD_Bps)

Set bit rate of FlexCAN FD frame.

This function set the baud rate of FLEXCAN FD base on FLEXCAN_FDCalculateImprovedTimingValues() API calculated timing values.

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRateN_Bps – Nominal bit Rate in Bps.
- bitRateD_Bps – Data bit Rate in Bps.

Returns

kStatus_Success - Set CAN FD bit rate (include Nominal and Data phase) successfully.

void FLEXCAN_SetRxMbGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive message buffer global mask.

This function sets the global mask for the FlexCAN message buffer in a matching process. The configuration is only effective when the Rx individual mask is disabled in the FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Message Buffer Global Mask value.

void FLEXCAN_SetRxFifoGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive FIFO global mask.

This function sets the global mask for FlexCAN FIFO in a matching process.

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Fifo Global Mask value.

void FLEXCAN_SetRxIndividualMask(CAN_Type *base, uint8_t maskIdx, uint32_t mask)

Sets the FlexCAN receive individual mask.

This function sets the individual mask for the FlexCAN matching process. The configuration is only effective when the Rx individual mask is enabled in the FLEXCAN_Init(). If the Rx FIFO is disabled, the individual mask is applied to the corresponding Message Buffer. If the Rx FIFO is enabled, the individual mask for Rx FIFO occupied Message Buffer is applied to the Rx Filter with the same index. Note that only the first 32 individual masks can be used as the Rx FIFO filter mask.

Parameters

- base – FlexCAN peripheral base address.
- maskIdx – The Index of individual Mask.
- mask – Rx Individual Mask value.

void FLEXCAN_SetTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
 - true: Enable Tx Message Buffer.
 - false: Disable Tx Message Buffer.

void FLEXCAN_SetRxMbConfig(CAN_Type *base, uint8_t mbIdx, const flexcan_rx_mb_config_t *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer. User should invoke this API when CTRL2[RRS]=1. When CTRL2[RRS]=1, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbEmpty, kFLEXCAN_RxMbFull or kFLEXCAN_RxMbOverrun. Message buffer will store the remote frame in the same fashion of a data frame. No automatic remote response frame will be generated. User need to setup another message buffer to respond remote request.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.

- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
 - true: Enable Rx Message Buffer.
 - false: Disable Rx Message Buffer.

void FLEXCAN_SetFDTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
 - true: Enable Tx Message Buffer.
 - false: Disable Tx Message Buffer.

void FLEXCAN_SetFDRxMbConfig(CAN_Type *base, uint8_t mbIdx, const
flexcan_rx_mb_config_t *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
 - true: Enable Rx Message Buffer.
 - false: Disable Rx Message Buffer.

void FLEXCAN_SetRemoteResponseMbConfig(CAN_Type *base, uint8_t mbIdx, const
flexcan_frame_t *pFrame)

Configures a FlexCAN Remote Response Message Buffer.

User should invoke this API when CTRL2[RRS]=0. When CTRL2[RRS]=0, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbRanswer. If there is a matching ID, then this mailbox content will be transmitted as response. The received remote request frame is not stored in receive buffer. It is only used to trigger a transmission of a frame in response.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pFrame – Pointer to CAN message frame structure for response.

```
void FLEXCAN_SetRxFifoConfig(CAN_Type *base, const flexcan_rx_fifo_config_t *pRxFifoConfig,
                             bool enable)
```

Configures the FlexCAN Legacy Rx FIFO.

This function configures the FlexCAN Rx FIFO with given configuration.

Note: Legacy Rx FIFO only can receive classic CAN message.

Parameters

- base – FlexCAN peripheral base address.
- pRxFifoConfig – Pointer to the FlexCAN Legacy Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Legacy Rx FIFO.
 - true: Enable Legacy Rx FIFO.
 - false: Disable Legacy Rx FIFO.

```
void FLEXCAN_SetEnhancedRxFifoConfig(CAN_Type *base, const
                                     flexcan_enhanced_rx_fifo_config_t *pConfig, bool
                                     enable)
```

Configures the FlexCAN Enhanced Rx FIFO.

This function configures the Enhanced Rx FIFO with given configuration.

Note: Enhanced Rx FIFO support receive classic CAN or CAN FD messages, Legacy Rx FIFO and Enhanced Rx FIFO cannot be enabled at the same time.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Enhanced Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Enhanced Rx FIFO.
 - true: Enable Enhanced Rx FIFO.
 - false: Disable Enhanced Rx FIFO.

```
void FLEXCAN_SetPNConfig(CAN_Type *base, const flexcan_pn_config_t *pConfig)
```

Configures the FlexCAN Pretended Networking mode.

This function configures the FlexCAN Pretended Networking mode with given configuration.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Rx FIFO configuration structure.

```
static inline uint64_t FLEXCAN_GetStatusFlags(CAN_Type *base)
```

Gets the FlexCAN module interrupt flags.

This function gets all FlexCAN status flags. The flags are returned as the logical OR value of the enumerators `_flexcan_flags`. To check the specific status, compare the return value with enumerators in `_flexcan_flags`.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN status flags which are ORed by the enumerators in the `_flexcan_flags`.

```
static inline void FLEXCAN_ClearStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears status flags with the provided mask.

This function clears the FlexCAN status flags with a provided mask. An automatically cleared flag can't be cleared by this function.

Parameters

- base – FlexCAN peripheral base address.
- mask – The status flags to be cleared, it is logical OR value of `_flexcan_flags`.

```
static inline void FLEXCAN_GetBusErrCount(CAN_Type *base, uint8_t *txErrBuf, uint8_t *rxErrBuf)
```

Gets the FlexCAN Bus Error Counter value.

This function gets the FlexCAN Bus Error Counter value for both Tx and Rx direction. These values may be needed in the upper layer error handling.

Parameters

- base – FlexCAN peripheral base address.
- txErrBuf – Buffer to store Tx Error Counter value.
- rxErrBuf – Buffer to store Rx Error Counter value.

```
static inline uint64_t FLEXCAN_GetMbStatusFlags(CAN_Type *base, uint64_t mask)
```

Gets the FlexCAN low 64 Message Buffer interrupt flags.

This function gets the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns

The status of given Message Buffers.

```
static inline uint64_t FLEXCAN_GetHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)
```

Gets the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns

The status of given Message Buffers.

```
static inline void FLEXCAN_ClearMbStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears the FlexCAN low 64 Message Buffer interrupt flags.

This function clears the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
static inline void FLEXCAN_ClearHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- *base* – FlexCAN peripheral base address.
- *mask* – The ORed FlexCAN Message Buffer mask.

```
void FLEXCAN_GetMemoryErrorReportStatus(CAN_Type *base,  
                                         flexcan_memory_error_report_status_t  
                                         *errorStatus)
```

Gets the FlexCAN Memory Error Report registers status.

This function gets the FlexCAN Memory Error Report registers status.

Parameters

- *base* – FlexCAN peripheral base address.
- *errorStatus* – Pointer to FlexCAN Memory Error Report registers status structure.

```
static inline uint8_t FLEXCAN_GetPNMatchCount(CAN_Type *base)
```

Gets the FlexCAN Number of Matches when in Pretended Networking.

This function gets the number of times a given message has matched the predefined filtering criteria for ID and/or PL before a wakeup event.

Parameters

- *base* – FlexCAN peripheral base address.

Returns

The number of received wake up messages.

```
static inline uint32_t FLEXCAN_GetEnhancedFifoDataCount(CAN_Type *base)
```

Gets the number of FlexCAN Enhanced Rx FIFO available frames.

This function gets the number of CAN messages stored in the Enhanced Rx FIFO.

Parameters

- *base* – FlexCAN peripheral base address.

Returns

The number of available CAN messages stored in the Enhanced Rx FIFO.

```
static inline void FLEXCAN_EnableInterrupts(CAN_Type *base, uint64_t mask)
```

Enables FlexCAN interrupts according to the provided mask.

This function enables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see `_flexcan_interrupt_enable`.

Parameters

- *base* – FlexCAN peripheral base address.
- *mask* – The interrupts to enable. Logical OR of `_flexcan_interrupt_enable`.

```
static inline void FLEXCAN_DisableInterrupts(CAN_Type *base, uint64_t mask)
```

Disables FlexCAN interrupts according to the provided mask.

This function disables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see `_flexcan_interrupt_enable`.

Parameters

- *base* – FlexCAN peripheral base address.

- mask – The interrupts to disable. Logical OR of `_flexcan_interrupt_enable`.

`static inline void FLEXCAN_EnableMbInterrupts(CAN_Type *base, uint64_t mask)`

Enables FlexCAN low 64 Message Buffer interrupts.

This function enables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

`static inline void FLEXCAN_EnableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)`

Enables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

`static inline void FLEXCAN_DisableMbInterrupts(CAN_Type *base, uint64_t mask)`

Disables FlexCAN low 64 Message Buffer interrupts.

This function disables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

`static inline void FLEXCAN_DisableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)`

Disables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

`void FLEXCAN_EnableRxFifoDMA(CAN_Type *base, bool enable)`

Enables or disables the FlexCAN Rx FIFO DMA request.

This function enables or disables the DMA feature of FlexCAN build-in Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- enable – true to enable, false to disable.

`static inline uintptr_t FLEXCAN_GetRxFifoHeadAddr(CAN_Type *base)`

Gets the Rx FIFO Head address.

This function returns the FlexCAN Rx FIFO Head address, which is mainly used for the DMA/eDMA use case.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN Rx FIFO Head address.

static inline *status_t* FLEXCAN_Enable(CAN_Type *base, bool enable)

Enables or disables the FlexCAN module operation.

This function enables or disables the FlexCAN module.

Parameters

- base – FlexCAN base pointer.
- enable – true to enable, false to disable.

Returns

kStatus_Success Enable FlexCAN module successful
kStatus_Timeout Timeout when wait for Low-Power Mode Acknowledge

status_t FLEXCAN_WriteTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_frame_t* *pTxFrame)

Writes a FlexCAN Message to the Transmit Message Buffer.

This function writes a CAN Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Receive Message Buffer.

This function reads a CAN message from a specified Receive Message Buffer. The function fills a receive CAN message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_WriteFDTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_fd_frame_t* *pTxFrame)

Writes a FlexCAN FD Message to the Transmit Message Buffer.

This function writes a CAN FD Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN FD Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadFDRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN FD Message from Receive Message Buffer.

This function reads a CAN FD message from a specified Receive Message Buffer. The function fills a receive CAN FD message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_ReadRxFifo(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Legacy Rx FIFO.

This function reads a CAN message from the FlexCAN Legacy Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadEnhancedRxFifo(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN Message from Enhanced Rx FIFO.

This function reads a CAN or CAN FD message from the FlexCAN Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadPNWakeUpMB(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Wake Up MB.

This function reads a CAN message from the FlexCAN Wake up Message Buffers. There are four Wake up Message Buffers (WMBs) used to store incoming messages in Pretended Networking mode. The WMB index indicates the arrival order. The last message is stored in WMB3.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.
- mbIdx – The FlexCAN Wake up Message Buffer index. Range in 0x0 ~ 0x3.

Return values

- kStatus_Success – - Read Message from Wake up Message Buffer successfully.
- kStatus_Fail – - Wake up Message Buffer has no valid content.

status_t FLEXCAN_TransferFDSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferFDReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.

- kStatus_Fail – Rx Message Buffer is empty.
- kStatus_Timeout – Failed to receive frames within specific time.

status_t FLEXCAN_TransferFDSendNonBlocking(*CAN_Type* *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferFDReceiveNonBlocking(*CAN_Type* *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – Rx Message Buffer is in use.

void FLEXCAN_TransferFDAbortSend(*CAN_Type* *base, *flexcan_handle_t* *handle, *uint8_t* mbIdx)

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

void FLEXCAN_TransferFDAbortReceive(*CAN_Type* *base, *flexcan_handle_t* *handle, *uint8_t* mbIdx)

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

status_t FLEXCAN_TransferSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveFifoBlocking(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction from Legacy Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success -- Read Message from Rx FIFO successfully.
- kStatus_Fail -- Rx FIFO is not enabled.
- kStatus_Timeout -- Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveEnhancedFifoBlocking(*CAN_Type* *base, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction from Enhanced Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success -- Read Message from Rx FIFO successfully.
- kStatus_Fail -- Rx FIFO is not enabled.
- kStatus_Timeout -- Failed to receive frames within specific time.

void FLEXCAN_TransferCreateHandle(*CAN_Type* *base, *flexcan_handle_t* *handle, *flexcan_transfer_callback_t* callback, *void* *userData)

Initializes the FlexCAN handle.

This function initializes the FlexCAN handle, which can be used for other FlexCAN transactional APIs. Usually, for a specified FlexCAN instance, call this API once to get the initialized handle.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

status_t FLEXCAN_TransferSendNonBlocking(*CAN_Type* *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the *flexcan_mb_transfer_t*.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN__TransferReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the *flexcan_mb_transfer_t*.

Return values

- kStatus_Success – Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – Rx Message Buffer is in use.

status_t FLEXCAN__TransferReceiveFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the *flexcan_fifo_transfer_t*.

Return values

- kStatus_Success – Start Rx FIFO receiving process successfully.
- kStatus_FLEXCAN_RxFifoBusy – Rx FIFO is currently in use.

status_t FLEXCAN__TransferGetReceiveFifoCount(CAN_Type *base, *flexcan_handle_t* *handle, *size_t* *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

status_t FLEXCAN__TransferReceiveEnhancedFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Enhanced Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the ref flex-can_fifo_transfer_t.@

Return values

- kStatus__Success – - Start Rx FIFO receiving process successfully.
- kStatus__FLEXCAN__RxFifoBusy – - Rx FIFO is currently in use.

```
static inline status_t FLEXCAN__TransferGetReceiveEnhancedFifoCount(CAN_Type *base,  
                                                                    flexcan_handle_t *handle,  
                                                                    size_t *count)
```

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus__InvalidArgument – count is Invalid.
- kStatus__Success – Successfully return the count.

```
uint32_t FLEXCAN__GetTimeStamp(flexcan_handle_t *handle, uint8_t mbIdx)
```

Gets the detail index of Mailbox's Timestamp by handle.

Then function can only be used when calling non-blocking Data transfer (TX/RX) API, After TX/RX data transfer done (User can get the status by handler's callback function), we can get the detail index of Mailbox's timestamp by handle, Detail non-blocking data transfer API (TX/RX) contain. -FLEXCAN_TransferSendNonBlocking -FLEXCAN_TransferFDSendNonBlocking -FLEXCAN_TransferReceiveNonBlocking -FLEXCAN_TransferFDReceiveNonBlocking -FLEXCAN_TransferReceiveFifoNonBlocking

Parameters

- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

Return values

the – index of mailbox 's timestamp stored in the handle.

```
void FLEXCAN__TransferAbortSend(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

```
void FLEXCAN_TransferAbortReceive(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

```
void FLEXCAN_TransferAbortReceiveFifo(CAN_Type *base, flexcan_handle_t *handle)
```

Aborts the interrupt driven message receive from Rx FIFO process.

This function aborts the interrupt driven message receive from Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

```
void FLEXCAN_TransferAbortReceiveEnhancedFifo(CAN_Type *base, flexcan_handle_t *handle)
```

Aborts the interrupt driven message receive from Enhanced Rx FIFO process.

This function aborts the interrupt driven message receive from Enhanced Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

```
void FLEXCAN_TransferHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)
```

FlexCAN IRQ handle function.

This function handles the FlexCAN Error, the Message Buffer, and the Rx FIFO IRQ request.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

```
void FLEXCAN_MbHandleIRQ(CAN_Type *base, flexcan_handle_t *handle, uint32_t startMbIdx, uint32_t endMbIdx)
```

FlexCAN Message Buffer IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- startMbIdx – First Message Buffer to handle.
- endMbIdx – Last Message Buffer to handle.

```
void FLEXCAN_EhancedRxFifoHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)
```

FlexCAN Enhanced Rx FIFO IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_BusoffErrorHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Bus Off, Error and Warning IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_PNWakeUpHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Pretended Networking Wake-up IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MemoryErrorHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Memory Error IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

FSL_FLEXCAN_DRIVER_VERSION

FlexCAN driver version.

FlexCAN transfer status.

Values:

enumerator kStatus_FLEXCAN_TxBusy

Tx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_TxIdle

Tx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_TxSwitchToRx

Remote Message is send out and Message buffer changed to Receive one.

enumerator kStatus_FLEXCAN_RxBusy

Rx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_RxIdle

Rx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_RxOverflow

Rx Message Buffer is Overflowed.

enumerator kStatus_FLEXCAN_RxFifoBusy

Rx Message FIFO is Busy.

enumerator kStatus_FLEXCAN_RxFifoIdle

Rx Message FIFO is Idle.

enumerator kStatus_FLEXCAN_RxFifoOverflow

Rx Message FIFO is overflowed.

enumerator kStatus_FLEXCAN_RxFifoWarning

Rx Message FIFO is almost overflowed.

enumerator kStatus_FLEXCAN_RxFifoDisabled
Rx Message FIFO is disabled during reading.

enumerator kStatus_FLEXCAN_ErrorStatus
FlexCAN Module Error and Status.

enumerator kStatus_FLEXCAN_WakeUp
FlexCAN is waken up from STOP mode.

enumerator kStatus_FLEXCAN_UnHandled
UnHandled Interrupt asserted.

enumerator kStatus_FLEXCAN_RxRemote
Rx Remote Message Received in Mail box.

enumerator kStatus_FLEXCAN_RxFifoUnderflow
Enhanced Rx Message FIFO is underflow.

enumerator kStatus_FLEXCAN_MemoryError
FlexCAN Memory Error.

enum _flexcan_frame_format
FlexCAN frame format.

Values:

enumerator kFLEXCAN_FrameFormatStandard
Standard frame format attribute.

enumerator kFLEXCAN_FrameFormatExtend
Extend frame format attribute.

enum _flexcan_frame_type
FlexCAN frame type.

Values:

enumerator kFLEXCAN_FrameTypeData
Data frame type attribute.

enumerator kFLEXCAN_FrameTypeRemote
Remote frame type attribute.

enum _flexcan_clock_source
FlexCAN clock source.

Deprecated:

Do not use the kFLEXCAN_ClkSrcOs. It has been superseded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superseded kFLEXCAN_ClkSrc1

Values:

enumerator kFLEXCAN_ClkSrcOsc
FlexCAN Protocol Engine clock from Oscillator.

enumerator kFLEXCAN_ClkSrcPeri
FlexCAN Protocol Engine clock from Peripheral Clock.

enumerator kFLEXCAN_ClkSrc0
FlexCAN Protocol Engine clock selected by user as SRC == 0.

enumerator kFLEXCAN_ClkSrc1

FlexCAN Protocol Engine clock selected by user as SRC == 1.

enum _flexcan_wake_up_source

FlexCAN wake up source.

Values:

enumerator kFLEXCAN_WakeupSrcUnfiltered

FlexCAN uses unfiltered Rx input to detect edge.

enumerator kFLEXCAN_WakeupSrcFiltered

FlexCAN uses filtered Rx input to detect edge.

enum _flexcan_endianness

FlexCAN payload endianness.

Values:

enumerator kFLEXCAN_bigEndian

Transmit frame with MSB first, receive frame with big-endian format.

enumerator kFLEXCAN_littleEndian

Transmit frame with LSB first, receive frame with little-endian format.

enum _flexcan_rx_fifo_filter_type

FlexCAN Rx Fifo Filter type.

Values:

enumerator kFLEXCAN_RxFifoFilterTypeA

One full ID (standard and extended) per ID Filter element.

enumerator kFLEXCAN_RxFifoFilterTypeB

Two full standard IDs or two partial 14-bit ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeC

Four partial 8-bit Standard or extended ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeD

All frames rejected.

enum _flexcan_mb_size

FlexCAN Message Buffer Payload size.

Values:

enumerator kFLEXCAN_8BperMB

Selects 8 bytes per Message Buffer.

enumerator kFLEXCAN_16BperMB

Selects 16 bytes per Message Buffer.

enumerator kFLEXCAN_32BperMB

Selects 32 bytes per Message Buffer.

enumerator kFLEXCAN_64BperMB

Selects 64 bytes per Message Buffer.

enum _flexcan_fd_frame_length

FlexCAN CAN FD frame supporting data length (available DLC values).

For Tx, when the Data size corresponding to DLC value stored in the MB selected for transmission is larger than the MB Payload size, FlexCAN adds the necessary number of bytes

with constant 0xCC pattern to complete the expected DLC. For Rx, when the Data size corresponding to DLC value received from the CAN bus is larger than the MB Payload size, the high order bytes that do not fit the Payload size will lose.

Values:

enumerator kFLEXCAN_0BperFrame
Frame contains 0 valid data bytes.

enumerator kFLEXCAN_1BperFrame
Frame contains 1 valid data bytes.

enumerator kFLEXCAN_2BperFrame
Frame contains 2 valid data bytes.

enumerator kFLEXCAN_3BperFrame
Frame contains 3 valid data bytes.

enumerator kFLEXCAN_4BperFrame
Frame contains 4 valid data bytes.

enumerator kFLEXCAN_5BperFrame
Frame contains 5 valid data bytes.

enumerator kFLEXCAN_6BperFrame
Frame contains 6 valid data bytes.

enumerator kFLEXCAN_7BperFrame
Frame contains 7 valid data bytes.

enumerator kFLEXCAN_8BperFrame
Frame contains 8 valid data bytes.

enumerator kFLEXCAN_12BperFrame
Frame contains 12 valid data bytes.

enumerator kFLEXCAN_16BperFrame
Frame contains 16 valid data bytes.

enumerator kFLEXCAN_20BperFrame
Frame contains 20 valid data bytes.

enumerator kFLEXCAN_24BperFrame
Frame contains 24 valid data bytes.

enumerator kFLEXCAN_32BperFrame
Frame contains 32 valid data bytes.

enumerator kFLEXCAN_48BperFrame
Frame contains 48 valid data bytes.

enumerator kFLEXCAN_64BperFrame
Frame contains 64 valid data bytes.

enum _flexcan_efifo_dma_per_read_length
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

Values:

enumerator kFLEXCAN_1WordPerRead
Transfer 1 32-bit words (CS).

enumerator kFLEXCAN_2WordPerRead
Transfer 2 32-bit words (CS + ID).

enumerator kFLEXCAN_3WordPerRead

Transfer 3 32-bit words (CS + ID + 1~4 bytes data).

enumerator kFLEXCAN_4WordPerRead

Transfer 4 32-bit words (CS + ID + 5~8 bytes data).

enumerator kFLEXCAN_5WordPerRead

Transfer 5 32-bit words (CS + ID + 9~12 bytes data).

enumerator kFLEXCAN_6WordPerRead

Transfer 6 32-bit words (CS + ID + 13~16 bytes data).

enumerator kFLEXCAN_7WordPerRead

Transfer 7 32-bit words (CS + ID + 17~20 bytes data).

enumerator kFLEXCAN_8WordPerRead

Transfer 8 32-bit words (CS + ID + 21~24 bytes data).

enumerator kFLEXCAN_9WordPerRead

Transfer 9 32-bit words (CS + ID + 25~28 bytes data).

enumerator kFLEXCAN_10WordPerRead

Transfer 10 32-bit words (CS + ID + 29~32 bytes data).

enumerator kFLEXCAN_11WordPerRead

Transfer 11 32-bit words (CS + ID + 33~36 bytes data).

enumerator kFLEXCAN_12WordPerRead

Transfer 12 32-bit words (CS + ID + 37~40 bytes data).

enumerator kFLEXCAN_13WordPerRead

Transfer 13 32-bit words (CS + ID + 41~44 bytes data).

enumerator kFLEXCAN_14WordPerRead

Transfer 14 32-bit words (CS + ID + 45~48 bytes data).

enumerator kFLEXCAN_15WordPerRead

Transfer 15 32-bit words (CS + ID + 49~52 bytes data).

enumerator kFLEXCAN_16WordPerRead

Transfer 16 32-bit words (CS + ID + 53~56 bytes data).

enumerator kFLEXCAN_17WordPerRead

Transfer 17 32-bit words (CS + ID + 57~60 bytes data).

enumerator kFLEXCAN_18WordPerRead

Transfer 18 32-bit words (CS + ID + 61~64 bytes data).

enumerator kFLEXCAN_19WordPerRead

Transfer 19 32-bit words (CS + ID + 64 bytes data + ID HIT).

enum _flexcan_rx_fifo_priority

FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

Values:

enumerator kFLEXCAN_RxFifoPrioLow

Matching process start from Rx Message Buffer first.

enumerator kFLEXCAN_RxFifoPrioHigh

Matching process start from Enhanced/Legacy Rx FIFO first.

enum _flexcan_interrupt_enable

FlexCAN interrupt enable enumerations.

This provides constants for the FlexCAN interrupt enable enumerations for use in the FlexCAN functions.

Note: FlexCAN Message Buffers and Legacy Rx FIFO interrupts not included in.

Values:

enumerator kFLEXCAN_BusOffInterruptEnable

Bus Off interrupt, use bit 15.

enumerator kFLEXCAN_ErrorInterruptEnable

CAN Error interrupt, use bit 14.

enumerator kFLEXCAN_TxWarningInterruptEnable

Tx Warning interrupt, use bit 11.

enumerator kFLEXCAN_RxWarningInterruptEnable

Rx Warning interrupt, use bit 10.

enumerator kFLEXCAN_WakeUpInterruptEnable

Self Wake Up interrupt, use bit 26.

enumerator kFLEXCAN_FDErrorInterruptEnable

CAN FD Error interrupt, use bit 31.

enumerator kFLEXCAN_PNMatchWakeUpInterruptEnable

PN Match Wake Up interrupt, use high word bit 17.

enumerator kFLEXCAN_PNTimeoutWakeUpInterruptEnable

PN Timeout Wake Up interrupt, use high word bit 16. Enhanced Rx FIFO Underflow interrupt, use high word bit 31.

enumerator kFLEXCAN_ERxFifoUnderflowInterruptEnable

Enhanced Rx FIFO Overflow interrupt, use high word bit 30.

enumerator kFLEXCAN_ERxFifoOverflowInterruptEnable

Enhanced Rx FIFO Watermark interrupt, use high word bit 29.

enumerator kFLEXCAN_ERxFifoWatermarkInterruptEnable

Enhanced Rx FIFO Data Available interrupt, use high word bit 28.

enumerator kFLEXCAN_ERxFifoDataAvlInterruptEnable

enumerator kFLEXCAN_HostAccessNCErrInterruptEnable

Host Access With Non-Correctable Errors interrupt, use high word bit 0.

enumerator kFLEXCAN_FlexCanAccessNCErrInterruptEnable

FlexCAN Access With Non-Correctable Errors interrupt, use high word bit 2.

enumerator kFLEXCAN_HostOrFlexCanCErrInterruptEnable

Host or FlexCAN Access With Correctable Errors interrupt, use high word bit 3.

enum `_flexcan_flags`

FlexCAN status flags.

This provides constants for the FlexCAN status flags for use in the FlexCAN functions.

Note: The CPU read action clears the bits corresponding to the `FLEXCAN_ErrorFlag` macro, therefore user need to read status flags and distinguish which error is occur using `_flexcan_error_flags` enumerations.

Values:

enumerator `kFLEXCAN_ErrorOverrunFlag`

Error Overrun Status.

enumerator `kFLEXCAN_FDErrorIntFlag`

CAN FD Error Interrupt Flag.

enumerator `kFLEXCAN_BusoffDoneIntFlag`

Bus Off process completed Interrupt Flag.

enumerator `kFLEXCAN_SynchFlag`

CAN Synchronization Status.

enumerator `kFLEXCAN_TxWarningIntFlag`

Tx Warning Interrupt Flag.

enumerator `kFLEXCAN_RxWarningIntFlag`

Rx Warning Interrupt Flag.

enumerator `kFLEXCAN_IdleFlag`

FlexCAN In IDLE Status.

enumerator `kFLEXCAN_FaultConfinementFlag`

FlexCAN Fault Confinement State.

enumerator `kFLEXCAN_TransmittingFlag`

FlexCAN In Transmission Status.

enumerator `kFLEXCAN_ReceivingFlag`

FlexCAN In Reception Status.

enumerator `kFLEXCAN_BusOffIntFlag`

Bus Off Interrupt Flag.

enumerator `kFLEXCAN_ErrorIntFlag`

CAN Error Interrupt Flag.

enumerator `kFLEXCAN_WakeUpIntFlag`

Self Wake-Up Interrupt Flag.

enumerator `kFLEXCAN_ErrorFlag`

enumerator `kFLEXCAN_PNMatchIntFlag`

PN Matching Event Interrupt Flag.

enumerator `kFLEXCAN_PNTimeoutIntFlag`

PN Timeout Event Interrupt Flag.

enumerator `kFLEXCAN_ERxFifoUnderflowIntFlag`

Enhanced Rx FIFO underflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoOverflowIntFlag

Enhanced Rx FIFO overflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoWatermarkIntFlag

Enhanced Rx FIFO watermark Interrupt Flag.

enumerator kFLEXCAN_ERxFifoDataAvlIntFlag

Enhanced Rx FIFO data available Interrupt Flag.

enumerator kFLEXCAN_ERxFifoEmptyFlag

Enhanced Rx FIFO empty status.

enumerator kFLEXCAN_ERxFifoFullFlag

Enhanced Rx FIFO full status.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorIntFlag

Host Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorIntFlag

FlexCAN Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_CorrectableErrorIntFlag

Correctable Error Interrupt Flag.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorOverrunFlag

Host Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorOverrunFlag

FlexCAN Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_CorrectableErrorOverrunFlag

Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_AllMemoryErrorIntFlag

All Memory Error Interrupt Flags.

enumerator kFLEXCAN_AllMemoryErrorFlag

All Memory Error Flags.

enum _flexcan_error_flags

FlexCAN error status flags.

The FlexCAN Error Status enumerations is used to report current error of the FlexCAN bus. This enumerations should be used with KFlexCAN_ErrorFlag in _flexcan_flags enumerations to determine which error is generated.

Values:

enumerator kFLEXCAN_FDStuffingError

Stuffing Error.

enumerator kFLEXCAN_FDFormError

Form Error.

enumerator kFLEXCAN_FDCrcError

Cyclic Redundancy Check Error.

enumerator kFLEXCAN_FDBit0Error

Unable to send dominant bit.

enumerator kFLEXCAN_FDBit1Error

Unable to send recessive bit.

enumerator kFLEXCAN_TxErrorWarningFlag
Tx Error Warning Status.

enumerator kFLEXCAN_RxErrorWarningFlag
Rx Error Warning Status.

enumerator kFLEXCAN_StuffingError
Stuffing Error.

enumerator kFLEXCAN_FormError
Form Error.

enumerator kFLEXCAN_CrcError
Cyclic Redundancy Check Error.

enumerator kFLEXCAN_AckError
Received no ACK on transmission.

enumerator kFLEXCAN_Bit0Error
Unable to send dominant bit.

enumerator kFLEXCAN_Bit1Error
Unable to send recessive bit.

FlexCAN Legacy Rx FIFO status flags.

The FlexCAN Legacy Rx FIFO Status enumerations are used to determine the status of the Rx FIFO. Because Rx FIFO occupy the MB0 ~ MB7 (Rx Fifo filter also occupies more Message Buffer space), Rx FIFO status flags are mapped to the corresponding Message Buffer status flags.

Values:

enumerator kFLEXCAN_RxFifoOverflowFlag
Rx FIFO overflow flag.

enumerator kFLEXCAN_RxFifoWarningFlag
Rx FIFO almost full flag.

enumerator kFLEXCAN_RxFifoFrameAvlFlag
Frames available in Rx FIFO flag.

enum _flexcan_memory_error_type
FlexCAN Memory Error Type.

Values:

enumerator kFLEXCAN_CorrectableError
The memory error is correctable which means on bit error.

enumerator kFLEXCAN_NonCorrectableError
The memory error is non-correctable which means two bit errors.

enum _flexcan_memory_access_type
FlexCAN Memory Access Type.

Values:

enumerator kFLEXCAN_MoveOutFlexCanAccess
The memory error was detected during move-out FlexCAN access.

enumerator kFLEXCAN_MoveInAccess
The memory error was detected during move-in FlexCAN access.

enumerator kFLEXCAN_TxArbitrationAccess

The memory error was detected during Tx Arbitration FlexCAN access.

enumerator kFLEXCAN_RxMatchingAccess

The memory error was detected during Rx Matching FlexCAN access.

enumerator kFLEXCAN_MoveOutHostAccess

The memory error was detected during Rx Matching Host (CPU) access.

enum _flexcan_byte_error_syndrome

FlexCAN Memory Error Byte Syndrome.

Values:

enumerator kFLEXCAN_NoError

No bit error in this byte.

enumerator kFLEXCAN_ParityBits0Error

Parity bit 0 error in this byte.

enumerator kFLEXCAN_ParityBits1Error

Parity bit 1 error in this byte.

enumerator kFLEXCAN_ParityBits2Error

Parity bit 2 error in this byte.

enumerator kFLEXCAN_ParityBits3Error

Parity bit 3 error in this byte.

enumerator kFLEXCAN_ParityBits4Error

Parity bit 4 error in this byte.

enumerator kFLEXCAN_DataBits0Error

Data bit 0 error in this byte.

enumerator kFLEXCAN_DataBits1Error

Data bit 1 error in this byte.

enumerator kFLEXCAN_DataBits2Error

Data bit 2 error in this byte.

enumerator kFLEXCAN_DataBits3Error

Data bit 3 error in this byte.

enumerator kFLEXCAN_DataBits4Error

Data bit 4 error in this byte.

enumerator kFLEXCAN_DataBits5Error

Data bit 5 error in this byte.

enumerator kFLEXCAN_DataBits6Error

Data bit 6 error in this byte.

enumerator kFLEXCAN_DataBits7Error

Data bit 7 error in this byte.

enumerator kFLEXCAN_AllZeroError

All-zeros non-correctable error in this byte.

enumerator kFLEXCAN_AllOneError

All-ones non-correctable error in this byte.

enumerator kFLEXCAN_NonCorrectableErrors

Non-correctable error in this byte.

enum _flexcan_pn_match_source

FlexCAN Pretended Networking match source selection.

Values:

enumerator kFLEXCAN_PNMatSrcID

Message match with ID filtering.

enumerator kFLEXCAN_PNMatSrcIDAndData

Message match with ID filtering and payload filtering.

enum _flexcan_pn_match_mode

FlexCAN Pretended Networking mode match type.

Values:

enumerator kFLEXCAN_PNMatModeEqual

Match upon ID/Payload contents against an exact target value.

enumerator kFLEXCAN_PNMatModeGreater

Match upon an ID/Payload value greater than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeSmaller

Match upon an ID/Payload value smaller than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeRange

Match upon an ID/Payload value inside a range, greater than or equal to a specified lower limit, and smaller than or equal to a specified upper limit

typedef enum _flexcan_frame_format flexcan_frame_format_t

FlexCAN frame format.

typedef enum _flexcan_frame_type flexcan_frame_type_t

FlexCAN frame type.

typedef enum _flexcan_clock_source flexcan_clock_source_t

FlexCAN clock source.

Deprecated:

Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

typedef enum _flexcan_wake_up_source flexcan_wake_up_source_t

FlexCAN wake up source.

typedef enum _flexcan_endianness flexcan_endianness_t

FlexCAN payload endianness.

typedef enum _flexcan_rx_fifo_filter_type flexcan_rx_fifo_filter_type_t

FlexCAN Rx Fifo Filter type.

typedef enum _flexcan_mb_size flexcan_mb_size_t

FlexCAN Message Buffer Payload size.

typedef enum _flexcan_efifo_dma_per_read_length flexcan_efifo_dma_per_read_length_t

FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

```
typedef enum _flexcan_rx_fifo_priority flexcan_rx_fifo_priority_t
```

FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

```
typedef enum _flexcan_memory_error_type flexcan_memory_error_type_t
```

FlexCAN Memory Error Type.

```
typedef enum _flexcan_memory_access_type flexcan_memory_access_type_t
```

FlexCAN Memory Access Type.

```
typedef enum _flexcan_byte_error_syndrome flexcan_byte_error_syndrome_t
```

FlexCAN Memory Error Byte Syndrome.

```
typedef struct _flexcan_memory_error_report_status flexcan_memory_error_report_status_t
```

FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

```
typedef struct _flexcan_frame flexcan_frame_t
```

FlexCAN message frame structure.

```
typedef struct _flexcan_fd_frame flexcan_fd_frame_t
```

CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see *_flexcan_fd_frame_length*.

```
typedef struct _flexcan_timing_config flexcan_timing_config_t
```

FlexCAN protocol timing characteristic configuration structure.

```
typedef struct _flexcan_config flexcan_config_t
```

FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

```
typedef struct _flexcan_rx_mb_config flexcan_rx_mb_config_t
```

FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

```
typedef enum _flexcan_pn_match_source flexcan_pn_match_source_t
```

FlexCAN Pretended Networking match source selection.

```
typedef enum _flexcan_pn_match_mode flexcan_pn_match_mode_t
```

FlexCAN Pretended Networking mode match type.

`typedef struct flexcan_pn_config flexcan_pn_config_t`

FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of `FLEXCAN_SetPNConfig()` function. The `FLEXCAN_SetPNConfig()` function is used to configure FlexCAN Networking work mode.

`typedef struct flexcan_rx_fifo_config flexcan_rx_fifo_config_t`

FlexCAN Legacy Rx FIFO configuration structure.

`typedef struct flexcan_enhanced_rx_fifo_std_id_filter flexcan_enhanced_rx_fifo_std_id_filter_t`

FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

`typedef struct flexcan_enhanced_rx_fifo_ext_id_filter flexcan_enhanced_rx_fifo_ext_id_filter_t`

FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

`typedef struct flexcan_enhanced_rx_fifo_config flexcan_enhanced_rx_fifo_config_t`

FlexCAN Enhanced Rx FIFO configuration structure.

`typedef struct flexcan_mb_transfer flexcan_mb_transfer_t`

FlexCAN Message Buffer transfer.

`typedef struct flexcan_fifo_transfer flexcan_fifo_transfer_t`

FlexCAN Rx FIFO transfer.

`typedef struct flexcan_handle flexcan_handle_t`

FlexCAN handle structure definition.

`typedef void (*flexcan_transfer_callback_t)(CAN_Type *base, flexcan_handle_t *handle, status_t status, uint64_t result, void *userData)`

`FLEXCAN_WAIT_TIMEOUT`

`FLEXCAN_POLLING_TIMEOUT`

Max loops to wait for polling transfer.

`FLEXCAN_MODULE_TIMEOUT`

Max loops to wait for FlexCAN register access complete.

`DLC_LENGTH_DECODE(dlc)`

FlexCAN frame length helper macro.

`FLEXCAN_ID_STD(id)`

FlexCAN Frame ID helper macro.

Standard Frame ID helper macro.

`FLEXCAN_ID_EXT(id)`

Extend Frame ID helper macro.

`FLEXCAN_RX_MB_STD_MASK(id, rtr, ide)`

FlexCAN Rx Message Buffer Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

`FLEXCAN_RX_MB_EXT_MASK(id, rtr, ide)`

Extend Rx Message Buffer Mask helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_A(id, rtr, ide)`

FlexCAN Legacy Rx FIFO Mask helper macro.

Standard Rx FIFO Mask helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_HIGH(id, rtr, ide)`

Standard Rx FIFO Mask helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_LOW(id, rtr, ide)`

Standard Rx FIFO Mask helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_HIGH(id)`

Standard Rx FIFO Mask helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_HIGH(id)`

Standard Rx FIFO Mask helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_LOW(id)`

Standard Rx FIFO Mask helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_LOW(id)`

Standard Rx FIFO Mask helper macro Type C lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_A(id, rtr, ide)`

Extend Rx FIFO Mask helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_HIGH(id, rtr, ide)`

Extend Rx FIFO Mask helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_LOW(id, rtr, ide)`

Extend Rx FIFO Mask helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_HIGH(id)`

Extend Rx FIFO Mask helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_HIGH(id)`

Extend Rx FIFO Mask helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_LOW(id)`

Extend Rx FIFO Mask helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_LOW(id)`

Extend Rx FIFO Mask helper macro Type C lower part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_A(id, rtr, ide)`

FlexCAN Rx FIFO Filter helper macro.

Standard Rx FIFO Filter helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_HIGH(id, rtr, ide)`

Standard Rx FIFO Filter helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_LOW(id, rtr, ide)`

Standard Rx FIFO Filter helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_HIGH(id)`

Standard Rx FIFO Filter helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_HIGH(id)`

Standard Rx FIFO Filter helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_LOW(id)`

Standard Rx FIFO Filter helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_LOW(id)`

Standard Rx FIFO Filter helper macro Type C lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_A(id, rtr, ide)`

Extend Rx FIFO Filter helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_HIGH(id, rtr, ide)`

Extend Rx FIFO Filter helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_LOW(id, rtr, ide)`

Extend Rx FIFO Filter helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_HIGH(id)`

Extend Rx FIFO Filter helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_HIGH(id)`

Extend Rx FIFO Filter helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_LOW(id)`

Extend Rx FIFO Filter helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_LOW(id)`

Extend Rx FIFO Filter helper macro Type C lower part helper macro.

`ENHANCED_RX_FIFO_FSCH(x)`

FlexCAN Enhanced Rx FIFO Filter and Mask helper macro.

`RTR_STD_HIGH(x)`

`RTR_STD_LOW(x)`

`RTR_EXT(x)`

`ID_STD_LOW(id)`

`ID_STD_HIGH(id)`

`ID_EXT(id)`

`FLEXCAN_ENHANCED_RX_FIFO_STD_MASK_AND_FILTER(id, rtr, id_mask, rtr_mask)`

Standard ID filter element with filter + mask scheme.

`FLEXCAN_ENHANCED_RX_FIFO_STD_FILTER_WITH_RANGE(id_upper, rtr, id_lower,
rtr_mask)`

Standard ID filter element with filter range.

`FLEXCAN_ENHANCED_RX_FIFO_STD_TWO_FILTERS(id1, rtr1, id2, rtr2)`

Standard ID filter element with two filters without masks.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_LOW(id, rtr)`

Extended ID filter element with filter + mask scheme low word.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_HIGH(id_mask, rtr_mask)`

Extended ID filter element with filter + mask scheme high word.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_LOW(id_upper, rtr)`

Extended ID filter element with range scheme low word.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_HIGH(id_lower, rtr_mask)`

Extended ID filter element with range scheme high word.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_LOW(id2, rtr2)`

Extended ID filter element with two filters without masks low word.

`FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_HIGH(id1, rtr1)`

Extended ID filter element with two filters without masks high word.

`FLEXCAN_PN_STD_MASK(id, rtr)`

FlexCAN Pretended Networking ID Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

`FLEXCAN_PN_EXT_MASK(id, rtr)`

Extend Rx Message Buffer Mask helper macro.

`FLEXCAN_PN_INT_MASK(x)`

FlexCAN interrupt/status flag helper macro.

`FLEXCAN_PN_INT_UNMASK(x)`

`FLEXCAN_PN_STATUS_MASK(x)`

`FLEXCAN_PN_STATUS_UNMASK(x)`

`FLEXCAN_EFIFO_INT_MASK(x)`

`FLEXCAN_EFIFO_INT_UNMASK(x)`

`FLEXCAN_EFIFO_STATUS_MASK(x)`

`FLEXCAN_EFIFO_STATUS_UNMASK(x)`

`FLEXCAN_MECR_INT_MASK(x)`

`FLEXCAN_MECR_INT_UNMASK(x)`

`FLEXCAN_MECR_STATUS_MASK(x)`

`FLEXCAN_MECR_STATUS_UNMASK(x)`

`FLEXCAN_ERROR_AND_STATUS_INT_FLAG`

`FLEXCAN_PNWAKE_UP_FLAG`

`FLEXCAN_WAKE_UP_FLAG`

`FLEXCAN_MEMORY_ERROR_INT_FLAG`

`FLEXCAN_MEMORY_ENHANCED_RX_FIFO_INT_FLAG`

`E_RX_FIFO(base)`

FlexCAN Enhanced Rx FIFO base address helper macro.

`FLEXCAN_CALLBACK(x)`

FlexCAN transfer callback function.

The FlexCAN transfer callback returns a value from the underlying layer. If the status equals to `kStatus_FLEXCAN_ErrorStatus`, the result parameter is the Content of FlexCAN status register which can be used to get the working status(or error status) of FlexCAN module. If the status equals to other FlexCAN Message Buffer transfer status, the result is the index of Message Buffer that generate transfer event. If the status equals to other FlexCAN Message Buffer transfer status, the result is meaningless and should be Ignored.

`struct flexcan_memory_error_report_status`

`#include <fsl_flexcan.h>` FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of `FLEXCAN_GetMemoryErrorReportStatus()` function. And user can use `FLEXCAN_GetMemoryErrorReportStatus` to get the status of the last memory error access.

Public Members

flexcan_memory_error_type_t errorType

The type of memory error that giving rise to the report.

flexcan_memory_access_type_t accessType

The type of memory access that giving rise to the memory error.

uint16_t accessAddress

The address where memory error detected.

uint32_t errorData

The raw data word read from memory with error.

struct _flexcan_frame

#include <fsl_flexcan.h> FlexCAN message frame structure.

struct _flexcan_fd_frame

#include <fsl_flexcan.h> CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see *_flexcan_fd_frame_length*.

Public Members

uint32_t idhit

Note: ID HIT offset is changed dynamically according to data length code (DLC), when DLC is 15, they will be located below. Using FLEXCAN_FixEnhancedRxFifoFrameIdHit API is recommended to ensure this idhit value is correct. CAN Enhanced Rx FIFO filter hit id (This value is only used in Enhanced Rx FIFO receive mode).

struct _flexcan_timing_config

#include <fsl_flexcan.h> FlexCAN protocol timing characteristic configuration structure.

Public Members

uint16_t preDivider

Classic CAN or CAN FD nominal phase bit rate prescaler.

uint8_t rJumpwidth

Classic CAN or CAN FD nominal phase Re-sync Jump Width.

uint8_t phaseSeg1

Classic CAN or CAN FD nominal phase Segment 1.

uint8_t phaseSeg2

Classic CAN or CAN FD nominal phase Segment 2.

uint8_t propSeg

Classic CAN or CAN FD nominal phase Propagation Segment.

uint16_t fpreDivider

CAN FD data phase bit rate prescaler.

uint8_t frJumpwidth

CAN FD data phase Re-sync Jump Width.

uint8_t fphaseSeg1

CAN FD data phase Phase Segment 1.

uint8_t fphaseSeg2

CAN FD data phase Phase Segment 2.

uint8_t fpropSeg

CAN FD data phase Propagation Segment.

struct _flexcan_config

#include <fsl_flexcan.h> FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

Public Members

flexcan_clock_source_t clkSrc

Clock source for FlexCAN Protocol Engine.

flexcan_wake_up_source_t wakeupSrc

Wake up source selection.

uint8_t maxMbNum

The maximum number of Message Buffers used by user.

bool enableLoopBack

Enable or Disable Loop Back Self Test Mode.

bool enableTimerSync

Enable or Disable Timer Synchronization.

bool enableSelfWakeup

Enable or Disable Self Wakeup Mode.

bool enableIndividMask

Enable or Disable Rx Individual Mask and Queue feature.

bool disableSelfReception

Enable or Disable Self Reflection.

bool enableListenOnlyMode

Enable or Disable Listen Only Mode.

bool enableDoze

Enable or Disable Doze Mode.

bool enablePretendedeNetworking

Enable or Disable the Pretended Networking mode.

bool enableMemoryErrorControl

Enable or Disable the memory errors detection and correction mechanism.

bool enableNonCorrectableErrorEnterFreeze

Enable or Disable Non-Correctable Errors In FlexCAN Access Put Device In Freeze Mode.

`bool enableTransceiverDelayMeasure`

Enable or Disable the transceiver delay measurement, when it is enabled, then the secondary sample point position is determined by the sum of the transceiver delay measurement plus the enhanced TDC offset.

`bool enableRemoteRequestFrameStored`

true: Store Remote Request Frame in the same fashion of data frame. false: Generate an automatic Remote Response Frame.

`flexcan_endianness_t payloadEndianness`

Selects the byte order for the payload of transmit and receive frames, see `flexcan_endianness_t`.

`struct _flexcan_rx_mb_config`

`#include <fsl_flexcan.h>` FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of `FLEXCAN_SetRxMbConfig()` function. The `FLEXCAN_SetRxMbConfig()` function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

Public Members

`uint32_t id`

CAN Message Buffer Frame Identifier, should be set using `FLEXCAN_ID_EXT()` or `FLEXCAN_ID_STD()` macro.

`flexcan_frame_format_t format`

CAN Frame Identifier format(Standard of Extend).

`flexcan_frame_type_t type`

CAN Frame Type(Data or Remote for classical CAN only).

`struct _flexcan_pn_config`

`#include <fsl_flexcan.h>` FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of `FLEXCAN_SetPNConfig()` function. The `FLEXCAN_SetPNConfig()` function is used to configure FlexCAN Networking work mode.

Public Members

`bool enableTimeout`

Enable or Disable timeout event trigger wakeup.

`uint16_t timeoutValue`

The timeout value that generates a wakeup event, the counter timer is incremented based on 64 times the CAN Bit Time unit.

`bool enableMatch`

Enable or Disable match event trigger wakeup.

`flexcan_pn_match_source_t matchSrc`

Selects the match source (ID and/or data match) to trigger wakeup.

`uint8_t matchNum`

The number of times a given message must match the predefined ID and/or data before generating a wakeup event, range in 0x1 ~ 0xFF.

`flexcan_pn_match_mode_t idMatchMode`

The ID match type.

flexcan_pn_match_mode_t dataMatchMode

The data match type.

uint32_t idLower

The ID target values 1 which used either for ID match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in ID match “range detection”.

uint32_t idUpper

The ID target values 2 which used only as the upper limit value in ID match “range detection” or used to store the ID mask in “equal to”.

uint8_t lengthLower

The lower limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

uint8_t lengthUpper

The upper limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

struct *_flexcan_rx_fifo_config*

#include <fsl_flexcan.h> FlexCAN Legacy Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable

Pointer to the FlexCAN Legacy Rx FIFO identifier filter table.

uint8_t idFilterNum

The FlexCAN Legacy Rx FIFO Filter elements quantity.

flexcan_rx_fifo_filter_type_t idFilterType

The FlexCAN Legacy Rx FIFO Filter type.

flexcan_rx_fifo_priority_t priority

The FlexCAN Legacy Rx FIFO receive priority.

struct *_flexcan_enhanced_rx_fifo_std_id_filter*

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see *_flexcan_fd_frame_length*, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use *DLC_LENGTH_DECODE(length)* macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct _flexcan_enhanced_rx_fifo_ext_id_filter

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct _flexcan_enhanced_rx_fifo_config

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable

Pointer to the FlexCAN Enhanced Rx FIFO identifier filter table, each table member occupies 32 bit word, table size should be equal to idFilterNum. There are two types of Enhanced Rx FIFO filter elements that can be stored in table : extended-ID filter element (1 word, occupie 1 table members) and standard-ID filter element (2 words, occupies 2 table members), the extended-ID filter element needs to be placed in front of the table.

uint8_t idFilterPairNum

idFilterPairNum is the Enhanced Rx FIFO identifier filter element pair numbers, each pair of filter elements occupies 2 words and can consist of one extended ID filter element or two standard ID filter elements.

uint8_t extendIdFilterNum

The number of extended ID filter element items in the FlexCAN enhanced Rx FIFO identifier filter table, each extended-ID filter element occupies 2 words, extendIdFilterNum need less than or equal to idFilterPairNum.

uint8_t fifoWatermark

(fifoWatermark + 1) is the minimum number of CAN messages stored in the Enhanced RX FIFO which can trigger FIFO watermark interrupt or a DMA request.

flexcan_efifo_dma_per_read_length_t dmaPerReadLength

Define the length of each read of the Enhanced RX FIFO element by the DAM, see _flexcan_fd_frame_length.

flexcan_rx_fifo_priority_t priority

The FlexCAN Enhanced Rx FIFO receive priority.

```
struct _flexcan_mb_transfer
#include <fsl_flexcan.h> FlexCAN Message Buffer transfer.
```

Public Members

flexcan_frame_t *frame
The buffer of CAN Message to be transfer.

uint8_t mbIdx
The index of Message buffer used to transfer Message.

```
struct _flexcan_fifo_transfer
#include <fsl_flexcan.h> FlexCAN Rx FIFO transfer.
```

Public Members

flexcan_fd_frame_t *framefd
The buffer of CAN Message to be received from Enhanced Rx FIFO.

flexcan_frame_t *frame
The buffer of CAN Message to be received from Legacy Rx FIFO.

size_t frameNum
Number of CAN Message need to be received from Legacy or Enhanced Rx FIFO.

```
struct _flexcan_handle
#include <fsl_flexcan.h> FlexCAN handle structure.
```

Public Members

flexcan_transfer_callback_t callback
Callback function.

void *userData
FlexCAN callback function parameter.

flexcan_frame_t *volatile mbFrameBuf[CAN_WORD1_COUNT]
The buffer for received CAN data from Message Buffers.

flexcan_fd_frame_t *volatile mbFDFrameBuf[CAN_WORD1_COUNT]
The buffer for received CAN FD data from Message Buffers.

flexcan_frame_t *volatile rxFifoFrameBuf
The buffer for received CAN data from Legacy Rx FIFO.

flexcan_fd_frame_t *volatile rxFifoFDFrameBuf
The buffer for received CAN FD data from Enhanced Rx FIFO.

size_t rxFifoFrameNum
The number of CAN messages remaining to be received from Legacy or Enhanced Rx FIFO.

size_t rxFifoTransferTotalNum
Total CAN Message number need to be received from Legacy or Enhanced Rx FIFO.

volatile uint8_t mbState[CAN_WORD1_COUNT]
Message Buffer transfer state.

volatile uint8_t rxFifoState

Rx FIFO transfer state.

volatile uint32_t timestamp[CAN_WORD1_COUNT]

Mailbox transfer timestamp.

struct byteStatus

Public Members

bool byteIsRead

The byte n (0~3) was read or not. The type of error and which bit in byte (n) is affected by the error.

struct __unnamed18__

Public Members

uint32_t timestamp

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length

CAN frame data length in bytes (Range: 0~8).

uint32_t type

CAN Frame Type(DATA or REMOTE).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t __pad0__

Reserved.

uint32_t idhit

CAN Rx FIFO filter hit id(This value is only used in Rx FIFO receive mode).

struct __unnamed20__

Public Members

uint32_t id

CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t __pad0__

Reserved.

union __unnamed22__

Public Members

struct __flexcan__frame

struct __flexcan__frame

struct __unnamed24__

Public Members

uint32_t dataWord0
CAN Frame payload word0.

uint32_t dataWord1
CAN Frame payload word1.

struct ____unnamed26____

Public Members

uint8_t dataByte3
CAN Frame payload byte3.

uint8_t dataByte2
CAN Frame payload byte2.

uint8_t dataByte1
CAN Frame payload byte1.

uint8_t dataByte0
CAN Frame payload byte0.

uint8_t dataByte7
CAN Frame payload byte7.

uint8_t dataByte6
CAN Frame payload byte6.

uint8_t dataByte5
CAN Frame payload byte5.

uint8_t dataByte4
CAN Frame payload byte4.

struct ____unnamed28____

Public Members

uint32_t timestamp
FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length
CAN FD frame data length code (DLC), range see `_flexcan_fd_frame_length`, When the length ≤ 8 , it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use `DLC_LENGTH_DECODE(length)` macro to get the number of valid data bytes.

uint32_t type
CAN Frame Type(DATA only).

uint32_t format
CAN Frame Identifier(STD or EXT format).

uint32_t srr
Substitute Remote request.

uint32_t esi
Error State Indicator.

uint32_t brs

Bit Rate Switch.

uint32_t edl

Extended Data Length.

struct ____unnamed30____

Public Members

uint32_t id

CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t ____pad0____

Reserved.

union ____unnamed32____

Public Members

struct __flexcan_fd_frame

struct __flexcan_fd_frame

struct ____unnamed34____

Public Members

uint32_t dataWord[16]

CAN FD Frame payload, 16 double word maximum.

struct ____unnamed36____

Public Members

uint8_t dataByte3

CAN Frame payload byte3.

uint8_t dataByte2

CAN Frame payload byte2.

uint8_t dataByte1

CAN Frame payload byte1.

uint8_t dataByte0

CAN Frame payload byte0.

uint8_t dataByte7

CAN Frame payload byte7.

uint8_t dataByte6

CAN Frame payload byte6.

uint8_t dataByte5

CAN Frame payload byte5.

```
uint8_t dataByte4
    CAN Frame payload byte4.
union __unnamed38__
```

Public Members

```
struct __flexcan__config
struct __flexcan__config
struct __unnamed40__
```

Public Members

```
uint32_t baudRate
    FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.
uint32_t baudRateFD
    FlexCAN FD bit rate in bps, for CANFD data phase.
struct __unnamed42__
```

Public Members

```
uint32_t bitRate
    FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.
uint32_t bitRateFD
    FlexCAN FD bit rate in bps, for CANFD data phase.
union __unnamed44__
```

Public Members

```
struct __flexcan__pn_config
    < The data target values 1 which used either for data match “equal to”, “smaller than”,
    “greater than” comparisons, or as the lower limit value in data match “range
    detection”.
struct __flexcan__pn_config
struct __unnamed48__
    < The data target values 1 which used either for data match “equal to”, “smaller than”,
    “greater than” comparisons, or as the lower limit value in data match “range
    detection”.
```

Public Members

```
uint32_t lowerWord0
    CAN Frame payload word0.
uint32_t lowerWord1
    CAN Frame payload word1.
struct __unnamed50__
```

Public Members

uint8_t lowerByte3
CAN Frame payload byte3.

uint8_t lowerByte2
CAN Frame payload byte2.

uint8_t lowerByte1
CAN Frame payload byte1.

uint8_t lowerByte0
CAN Frame payload byte0.

uint8_t lowerByte7
CAN Frame payload byte7.

uint8_t lowerByte6
CAN Frame payload byte6.

uint8_t lowerByte5
CAN Frame payload byte5.

uint8_t lowerByte4
CAN Frame payload byte4.

union __unnamed46__

Public Members

struct __flexcan_pn_config
< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

struct __flexcan_pn_config

struct __unnamed52__

< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

Public Members

uint32_t upperWord0
CAN Frame payload word0.

uint32_t upperWord1
CAN Frame payload word1.

struct __unnamed54__

Public Members

uint8_t upperByte3
CAN Frame payload byte3.

uint8_t upperByte2
CAN Frame payload byte2.

uint8_t upperByte1
CAN Frame payload byte1.

uint8_t upperByte0
CAN Frame payload byte0.

uint8_t upperByte7
CAN Frame payload byte7.

uint8_t upperByte6
CAN Frame payload byte6.

uint8_t upperByte5
CAN Frame payload byte5.

uint8_t upperByte4
CAN Frame payload byte4.

2.16 FlexCAN eDMA Driver

void FLEXCAN_TransferCreateHandleEDMA(CAN_Type *base, flexcan_edma_handle_t *handle, flexcan_edma_transfer_callback_t callback, void *userData, edma_handle_t *rxFifoEdmaHandle)

Initializes the FlexCAN handle, which is used in transactional functions.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxFifoEdmaHandle – User-requested DMA handle for Rx FIFO DMA transfer.

void FLEXCAN_PrepareTransfConfiguration(CAN_Type *base, flexcan_fifo_transfer_t *pFifoXfer, edma_transfer_config_t *pEdmaConfig)

Prepares the eDMA transfer configuration for FLEXCAN Legacy RX FIFO.

This function prepares the eDMA transfer configuration structure according to FLEXCAN Legacy RX FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

status_t FLEXCAN_StartTransferDatafromRxFIFO(CAN_Type *base, flexcan_edma_handle_t *handle, edma_transfer_config_t *pEdmaConfig)

Start Transfer Data from the FLEXCAN Legacy Rx FIFO using eDMA.

This function to Update edma transfer configuration and Start eDMA transfer

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

Return values

- kStatus__Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN__TransferReceiveFifoEDMA(CAN_Type *base, flexcan_edma_handle_t *handle, flexcan_fifo_transfer_t *pFifoXfer)

Receives the CAN Message from the Legacy Rx FIFO using eDMA.

This function receives the CAN Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus__Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN__TransferGetReceiveFifoCountEMDA(CAN_Type *base, flexcan_edma_handle_t *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus__Success – Successfully return the count.

void FLEXCAN__TransferAbortReceiveFifoEDMA(CAN_Type *base, flexcan_edma_handle_t *handle)

Aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

This function aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.

status_t FLEXCAN__TransferReceiveEnhancedFifoEDMA(CAN_Type *base, flexcan_edma_handle_t *handle, flexcan_fifo_transfer_t *pFifoXfer)

Receives the CAN FD Message from the Enhanced Rx FIFO using eDMA.

This function receives the CAN FD Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- `base` – FlexCAN peripheral base address.
- `handle` – Pointer to `flexcan_edma_handle_t` structure.
- `pFifoXfer` – FlexCAN Rx FIFO EDMA transfer structure, see `flexcan_fifo_transfer_t`.

Return values

- `kStatus_Success` – if succeed, others failed.
- `kStatus_FLEXCAN_RxFifoBusy` – Previous transfer ongoing.

```
static inline status_t FLEXCAN_TransferGetReceiveEnhancedFifoCountEMDA(CAN_Type *base,
                                                                    flex-
                                                                    can_edma_handle_t
                                                                    *handle, size_t
                                                                    *count)
```

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- `base` – FlexCAN peripheral base address.
- `handle` – FlexCAN handle pointer.
- `count` – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – count is Invalid.
- `kStatus_Success` – Successfully return the count.

FSL_FLEXCAN_EDMA_DRIVER_VERSION

FlexCAN EDMA driver version.

```
typedef struct flexcan_edma_handle flexcan_edma_handle_t
```

```
typedef void (*flexcan_edma_transfer_callback_t)(CAN_Type *base, flexcan_edma_handle_t
*handle, status_t status, void *userData)
```

FlexCAN transfer callback function.

```
struct flexcan_edma_handle
```

```
#include <fsl_flexcan_edma.h> FlexCAN eDMA handle.
```

Public Members

`flexcan_edma_transfer_callback_t` callback
Callback function.

`void *userData`

FlexCAN callback function parameter.

`edma_handle_t *rxFifoEdmaHandle`

The EDMA handler for Rx FIFO.

`volatile uint8_t rxFifoState`

Rx FIFO transfer state.

`size_t frameNum`

The number of messages that need to be received.

`flexcan_fd_frame_t *framefd`

Point to the buffer of CAN Message to be received from Enhanced Rx FIFO.

2.17 FREQME: Frequency Measurement

2.18 GLIKEY

2.19 GLIKEY

Values:

`enumerator kStatus_GLIKEY_LockedError`

GLIKEY status for locked SFR registers (unexpected) .

`enumerator kStatus_GLIKEY_NotLocked`

GLIKEY status for unlocked SFR registers.

`enumerator kStatus_GLIKEY_Locked`

GLIKEY status for locked SFR registers.

`enumerator kStatus_GLIKEY_DisabledError`

GLIKEY status for disabled error.

`FSL_GLIKEY_DRIVER_VERSION`

Defines GLIKEY driver version 2.0.1.

Change log:

- Version 2.0.1
 - Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.
- Version 2.0.0
 - Initial version

`GLIKEY_CODEWORD_STEP1`

`GLIKEY_CODEWORD_STEP2`

`GLIKEY_CODEWORD_STEP3`

`GLIKEY_CODEWORD_STEP4`

`GLIKEY_CODEWORD_STEP5`

`GLIKEY_CODEWORD_STEP6`

`GLIKEY_CODEWORD_STEP7`

`GLIKEY_CODEWORD_STEP_EN`

GLIKEY_FSM_WR_DIS

GLIKEY_FSM_INIT

GLIKEY_FSM_STEP1

GLIKEY_FSM_STEP2

GLIKEY_FSM_STEP3

GLIKEY_FSM_STEP4

GLIKEY_FSM_LOCKED

GLIKEY_FSM_WR_EN

GLIKEY_FSM_SSR_RESET

uint32_t GLIKEY_GetStatus(GLIKEY_Type *base)

Retreives the current status of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Glikey status information

status_t GLIKEY_IsLocked(GLIKEY_Type *base)

Get if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_Locked – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status

status_t GLIKEY_CheckLock(GLIKEY_Type *base)

Check if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_LockedError – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status kStatus_Success if success

status_t GLIKEY_SyncReset(GLIKEY_Type *base)

Perform a synchronous reset of Glikey.

This function performs a synchronounous reset of the Glikey. This results in:

- Glikey will return to the INIT state, unless it is in the LOCK state

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntEnable(GLIKEY_Type *base, uint32_t value)

Set interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[in]** Value to set the interrupt enable flag to, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_GetIntEnable(GLIKEY_Type *base, uint32_t *value)

Get interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[out]** Pointer which will be filled with the interrupt enable status, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success

status_t GLIKEY_ClearIntStatus(GLIKEY_Type *base)

Clear the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntStatus(GLIKEY_Type *base)

Set the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_Lock(GLIKEY_Type *base)

Lock Glikey SFR (Special Function Registers) interface.

This operation locks the Glikey SFR interface if it is not locked yet.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success

status_t GLIKEY_LockIndex(GLIKEY_Type *base)

Lock Glikey index.

This operation is used to lock a Glikey index. It can only be executed from the WR_EN state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_IsIndexLocked(GLIKEY_Type *base, uint32_t index)

Check if Glikey index is locked.

This operation returns the locking status of Glikey index.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

kStatus_GLIKEY_Locked if locked, kStatus_GLIKEY_NotLocked if unlocked
Possible errors: kStatus_Fail

status_t GLIKEY_StartEnable(GLIKEY_Type *base, uint32_t index)

Start Glikey enable.

This operation is used to set a new index and start a the sequence to enable it. It needs to be started from the INIT state. If the new index is already locked Glikey will go to LOCKED state, otherwise it will go to STEP1 state. If this operation is used when Glikey is in any state other than INIT Glikey will go to WR_DIS state. It can only recover from this state through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail

status_t GLIKEY_ContinueEnable(GLIKEY_Type *base, uint32_t codeword)

Continue Glikey enable.

This operation is used to progress through the different states of the state machine, starting from STEP1 until the state WR_EN is reached. Each next state of the state machine can only be reached by providing the right codeword to this function. If anything goes wrong the state machine will go to WR_DIS state and can only recover from it through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- codeword – **[in]** Encoded word for progressing to next FSM state (see GLIKEY_CODEWORD_STEPx/EN)

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail, kStatus_GLIKEY_DisabledError

status_t GLIKEY_EndOperation(GLIKEY_Type *base)

End Glikey operation.

This operation is used to end a Glikey operation. It can only be executed from the WR_EN, LOCKED and RESET states. Executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. After this operation Glikey will go to INIT state or stay in LOCKED state when the index was locked. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_ResetIndex(GLIKEY_Type *base, uint32_t index)

Reset Glikey index.

This operation is used to reset a Glikey index. It can only be executed from the INIT state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active or the index is locked this operation will return an error.

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

2.20 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureRWPrivilegedsecureRW
 User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureRUsersecureRPrivilegedsecureRW
 User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureRPrivilegedsecureRW
 User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureRW
 User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureR
 User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureN
 User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO__IgnoreAttributeCheck
 Ignores the attribute check

enum _gpio_interrupt_config

Configures the interrupt generation condition.

Values:

enumerator kGPIO__InterruptStatusFlagDisabled
 Interrupt status flag is disabled.

enumerator kGPIO__DMARisingEdge
 ISF flag and DMA request on rising edge.

enumerator kGPIO__DMAFallingEdge
 ISF flag and DMA request on falling edge.

enumerator kGPIO__DMAEitherEdge
 ISF flag and DMA request on either edge.

enumerator kGPIO__FlagRisingEdge
 Flag sets on rising edge.

enumerator kGPIO__FlagFallingEdge
 Flag sets on falling edge.

enumerator kGPIO__FlagEitherEdge
 Flag sets on either edge.

enumerator kGPIO__InterruptLogicZero
 Interrupt when logic zero.

enumerator kGPIO__InterruptRisingEdge
 Interrupt on rising edge.

enumerator kGPIO__InterruptFallingEdge
 Interrupt on falling edge.

enumerator kGPIO__InterruptEitherEdge
 Interrupt on either edge.

enumerator kGPIO__InterruptLogicOne
 Interrupt when logic one.

enumerator kGPIO__ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kGPIO__ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum __gpio_interrupt_selection

Configures the selection of interrupt/DMA request/trigger output.

Values:

enumerator kGPIO__InterruptOutput0

Interrupt/DMA request/trigger output 0.

enumerator kGPIO__InterruptOutput1

Interrupt/DMA request/trigger output 1.

enum gpio_pin_interrupt_control_t

GPIO pin and interrupt control.

Values:

enumerator kGPIO__PinControlNonSecure

Pin Control Non-Secure.

enumerator kGPIO__InterruptControlNonSecure

Interrupt Control Non-Secure.

enumerator kGPIO__PinControlNonPrivilege

Pin Control Non-Privilege.

enumerator kGPIO__InterruptControlNonPrivilege

Interrupt Control Non-Privilege.

typedef enum __gpio_pin_direction gpio_pin_direction_t

GPIO direction definition.

typedef enum __gpio_checker_attribute gpio_checker_attribute_t

GPIO checker attribute.

typedef struct __gpio_pin_config gpio_pin_config_t

The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

typedef enum __gpio_interrupt_config gpio_interrupt_config_t

Configures the interrupt generation condition.

typedef enum __gpio_interrupt_selection gpio_interrupt_selection_t

Configures the selection of interrupt/DMA request/trigger output.

typedef struct __gpio_version_info gpio_version_info_t

GPIO version information.

GPIO_FIT_REG(value)

struct __gpio_pin_config

#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members*gpio_pin_direction_t* pinDirection

GPIO direction, input or output

uint8_t outputLogic

Set a default output logic, which has no use in input

struct __gpio_version_info

#include <fsl_gpio.h> GPIO version information.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor Version Number.

uint8_t major

Major Version Number.

2.21 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)

Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDeinit(GPIO_Type *base)

Deinitializes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```

Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}

```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

```
void GPIO_GetVersionInfo(GPIO_Type *base, gpio_version_info_t *info)
```

Get GPIO version information.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- info – GPIO version information

```
static inline void GPIO_SecurePrivilegeLock(GPIO_Type *base, gpio_pin_interrupt_control_t mask)
```

lock or unlock secure privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – pin or interrupt macro

```
static inline void GPIO_EnablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Enable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Disable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
```

Enable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
```

Disable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Enable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputEnable(GPIO_Type *base, uint32_t mask)
Enable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputDisable(GPIO_Type *base, uint32_t mask)
Disable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)
Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro


```
static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)
```

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
static inline void GPIO_SetPinInterruptConfig(GPIO_Type *base, uint32_t pin,  
                                              gpio_interrupt_config_t config)
```

Configures the gpio pin interrupt/DMA request.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt/DMA request disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.

- kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
- kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

static inline void GPIO_SetPinInterruptChannel(GPIO_Type *base, uint32_t pin,
gpio_interrupt_selection_t selection)

Configures the gpio pin interrupt/DMA request/trigger output channel selection.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- selection – GPIO pin interrupt output selection.
 - kGPIO_InterruptOutput0: Interrupt/DMA request/trigger output 0.
 - kGPIO_InterruptOutput1 : Interrupt/DMA request/trigger output 1.

uint32_t GPIO_GpioGetInterruptFlags(GPIO_Type *base)

Read the GPIO interrupt status flags.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)

Returns

The current GPIO's interrupt status flag. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint32_t GPIO_GpioGetInterruptChannelFlags(GPIO_Type *base, uint32_t channel)

Read the GPIO interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

Returns

The current GPIO's interrupt status flag based on the selected interrupt channel. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint8_t GPIO_PinGetInterruptFlag(GPIO_Type *base, uint32_t pin)

Read individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on)
- pin – GPIO specific pin number.

Returns

The current selected pin's interrupt status flag.

void GPIO_GpioClearInterruptFlags(GPIO_Type *base, uint32_t mask)

Clears GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

`void GPIO_GpioClearInterruptChannelFlags(GPIO_Type *base, uint32_t mask, uint32_t channel)`
Clears GPIO pin interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro
- channel – ‘0’ means selete interrupt channel 0, ‘1’ means selete interrupt channel 1.

`void GPIO_PinClearInterruptFlag(GPIO_Type *base, uint32_t pin)`
Clear GPIO individual pin’s interrupt status flag.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on).
- pin – GPIO specific pin number.

`static inline void GPIO_SetMultipleInterruptPinsConfig(GPIO_Type *base, uint32_t mask, gpio_interrupt_config_t config)`

Sets the GPIO interrupt configuration in PCR register for multiple pins.

Parameters

- base – GPIO peripheral base pointer.
- mask – GPIO pin number macro.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.
 - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

`void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)`

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If

the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.22 INPUTMUX: Input Multiplexing Driver

enum _inputmux_index_t

Values:

```
enumerator kINPUTMUX_INDEX_CTIMER0CAPTSEL0
enumerator kINPUTMUX_INDEX_CTIMER0CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER0CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER0CAPTSEL3
enumerator kINPUTMUX_INDEX_CTIMER1CAPTSEL0
enumerator kINPUTMUX_INDEX_CTIMER1CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER1CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER1CAPTSEL3
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL0
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL3
enumerator kINPUTMUX_INDEX_CTIMER3CAPTSEL0
enumerator kINPUTMUX_INDEX_CTIMER3CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER3CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER3CAPTSEL3
enumerator kINPUTMUX_INDEX_CTIMER4CAPTSEL0
enumerator kINPUTMUX_INDEX_CTIMER4CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER4CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER4CAPTSEL3
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL0
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL1
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL2
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL3
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL4
```

enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL5
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL6
enumerator kINPUTMUX_INDEX_SMARTDMA_TRIGSEL7
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL0
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL1
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL2
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL3
enumerator kINPUTMUX_INDEX_ADC1_TRIGSEL0
enumerator kINPUTMUX_INDEX_ADC1_TRIGSEL1
enumerator kINPUTMUX_INDEX_ADC1_TRIGSEL2
enumerator kINPUTMUX_INDEX_ADC1_TRIGSEL3
enumerator kINPUTMUX_INDEX_ADC2_TRIGSEL0
enumerator kINPUTMUX_INDEX_ADC2_TRIGSEL1
enumerator kINPUTMUX_INDEX_ADC2_TRIGSEL2
enumerator kINPUTMUX_INDEX_ADC2_TRIGSEL3
enumerator kINPUTMUX_INDEX_ADC3_TRIGSEL0
enumerator kINPUTMUX_INDEX_ADC3_TRIGSEL1
enumerator kINPUTMUX_INDEX_ADC3_TRIGSEL2
enumerator kINPUTMUX_INDEX_ADC3_TRIGSEL3
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL1
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL2
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL3
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL1
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL2
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL3
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL0
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL1
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL2
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL3
enumerator kINPUTMUX_INDEX_FLEXPWM1_FAULTSEL0
enumerator kINPUTMUX_INDEX_FLEXPWM1_FAULTSEL1
enumerator kINPUTMUX_INDEX_FLEXPWM1_FAULTSEL2
enumerator kINPUTMUX_INDEX_FLEXPWM1_FAULTSEL3

enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL0
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL1
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL2
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL3
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL4
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL5
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL6
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL7
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL8
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL9
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL10
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL11
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL12
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL13
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL14
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL15
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL0
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL1
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL2
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL3
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL4
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL5
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL6
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL7
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL8
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL9
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL10
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL11
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL12
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL13
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL14
enumerator kINPUTMUX_INDEX_AOI1_TRIGSEL15
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL0

enumerator kINPUTMUX_INDEX_EXT_TRIGSEL1
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL2
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL3
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL4
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL6
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL7
enumerator kINPUTMUX_INDEX_FLEXIO_TRIGSEL0
enumerator kINPUTMUX_INDEX_FLEXIO_TRIGSEL1
enumerator kINPUTMUX_INDEX_FLEXIO_TRIGSEL2
enumerator kINPUTMUX_INDEX_FLEXIO_TRIGSEL3

enum __inputmux_connection_t

INPUTMUX connections type.

Values:

enumerator kINPUTMUX_CtimerInp0ToTimer0Cptsel
TIMERO CAPTSEL.
enumerator kINPUTMUX_CtimerInp1ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp2ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp3ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp4ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp5ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp6ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp7ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp8ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp10ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp11ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp12ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp13ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp14ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp15ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp16ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp17ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp18ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp19ToTimer0Cptsel

enumerator kINPUTMUX__Usb0StartOfFrameToTimer0Cptsel
enumerator kINPUTMUX__Aoi0Out0ToTimer0Cptsel
enumerator kINPUTMUX__Aoi0Out1ToTimer0Cptsel
enumerator kINPUTMUX__Aoi0Out2ToTimer0Cptsel
enumerator kINPUTMUX__Aoi0Out3ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp3ToTimer0Cptsel
enumerator kINPUTMUX__Cmp0OutToTimer0Cptsel
enumerator kINPUTMUX__Cmp1OutToTimer0Cptsel
enumerator kINPUTMUX__Cmp2OutToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M1ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M2ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M3ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M1ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M2ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M3ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c1MasterEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c1SlaveEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpspi0EndOfFrameToTimer0Cptsel
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToTimer0Cptsel

enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer0Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M1ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M2ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M3ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M1ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M2ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M3ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer0Cptsel

enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Adc2Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX_Adc2Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX_Adc2Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX_Adc2Tcomp3ToTimer0Cptsel
enumerator kINPUTMUX_Adc3Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX_Adc3Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX_Adc3Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX_Adc3Tcomp3ToTimer0Cptsel
TIMER1 CAPTSEL.
enumerator kINPUTMUX_CtimerInp0ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp1ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp2ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp3ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp4ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp5ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp6ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp7ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp8ToTimer1Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer1Cptsel

enumerator kINPUTMUX__CtimerInp10ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp11ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp12ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp13ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp14ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp15ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp16ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp17ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp18ToTimer1Captsel
enumerator kINPUTMUX__CtimerInp19ToTimer1Captsel
enumerator kINPUTMUX__Usb0StartOfFrameToTimer1Captsel
enumerator kINPUTMUX__Aoi0Out0ToTimer1Captsel
enumerator kINPUTMUX__Aoi0Out1ToTimer1Captsel
enumerator kINPUTMUX__Aoi0Out2ToTimer1Captsel
enumerator kINPUTMUX__Aoi0Out3ToTimer1Captsel
enumerator kINPUTMUX__Adc0Tcomp0ToTimer1Captsel
enumerator kINPUTMUX__Adc0Tcomp1ToTimer1Captsel
enumerator kINPUTMUX__Adc0Tcomp2ToTimer1Captsel
enumerator kINPUTMUX__Adc0Tcomp3ToTimer1Captsel
enumerator kINPUTMUX__Cmp0OutToTimer1Captsel
enumerator kINPUTMUX__Cmp1OutToTimer1Captsel
enumerator kINPUTMUX__Cmp2OutToTimer1Captsel
enumerator kINPUTMUX__Ctimer0M1ToTimer1Captsel
enumerator kINPUTMUX__Ctimer0M2ToTimer1Captsel
enumerator kINPUTMUX__Ctimer0M3ToTimer1Captsel
enumerator kINPUTMUX__Ctimer2M1ToTimer1Captsel
enumerator kINPUTMUX__Ctimer2M2ToTimer1Captsel
enumerator kINPUTMUX__Ctimer2M3ToTimer1Captsel
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer1Captsel
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer1Captsel
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer1Captsel
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer1Captsel
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer1Captsel

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer1Captsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer1Captsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out0ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out1ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out2ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out3ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer1Captsel

```
enumerator kINPUTMUX__Adc1Tcomp2ToTimer1Captsel
enumerator kINPUTMUX__Adc1Tcomp3ToTimer1Captsel
enumerator kINPUTMUX__Ctimer3M1ToTimer1Captsel
enumerator kINPUTMUX__Ctimer3M2ToTimer1Captsel
enumerator kINPUTMUX__Ctimer3M3ToTimer1Captsel
enumerator kINPUTMUX__Ctimer4M1ToTimer1Captsel
enumerator kINPUTMUX__Ctimer4M2ToTimer1Captsel
enumerator kINPUTMUX__Ctimer4M3ToTimer1Captsel
enumerator kINPUTMUX__Qdc1CmpFlag0ToTimer1Captsel
enumerator kINPUTMUX__Qdc1CmpFlag1ToTimer1Captsel
enumerator kINPUTMUX__Qdc1CmpFlag2ToTimer1Captsel
enumerator kINPUTMUX__Qdc1CmpFlag3ToTimer1Captsel
enumerator kINPUTMUX__Qdc1PosMatch0ToTimer1Captsel
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToTimer1Captsel
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToTimer1Captsel
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToTimer1Captsel
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToTimer1Captsel
enumerator kINPUTMUX__Lpi2c2MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX__Lpi2c2SlaveEndOfPacketToTimer1Captsel
enumerator kINPUTMUX__Lpi2c3MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX__Lpi2c3SlaveEndOfPacketToTimer1Captsel
enumerator kINPUTMUX__Lpuart5ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX__Lpuart5TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX__Lpuart5ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX__Adc2Tcomp0ToTimer1Captsel
enumerator kINPUTMUX__Adc2Tcomp1ToTimer1Captsel
enumerator kINPUTMUX__Adc2Tcomp2ToTimer1Captsel
enumerator kINPUTMUX__Adc2Tcomp3ToTimer1Captsel
enumerator kINPUTMUX__Adc3Tcomp0ToTimer1Captsel
enumerator kINPUTMUX__Adc3Tcomp1ToTimer1Captsel
enumerator kINPUTMUX__Adc3Tcomp2ToTimer1Captsel
enumerator kINPUTMUX__Adc3Tcomp3ToTimer1Captsel
    TIMER2 CAPTSEL.
enumerator kINPUTMUX__CtimerInp0ToTimer2Captsel
```

enumerator kINPUTMUX__CtimerInp1ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp2ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp3ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp4ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp5ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp6ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp7ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp8ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp9ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp10ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp11ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp12ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp13ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp14ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp15ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp16ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp17ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp18ToTimer2Cptsel
enumerator kINPUTMUX__CtimerInp19ToTimer2Cptsel
enumerator kINPUTMUX__Usb0StartOfFrameToTimer2Cptsel
enumerator kINPUTMUX__Aoi0Out0ToTimer2Cptsel
enumerator kINPUTMUX__Aoi0Out1ToTimer2Cptsel
enumerator kINPUTMUX__Aoi0Out2ToTimer2Cptsel
enumerator kINPUTMUX__Aoi0Out3ToTimer2Cptsel
enumerator kINPUTMUX__Adc0Tcomp0ToTimer2Cptsel
enumerator kINPUTMUX__Adc0Tcomp1ToTimer2Cptsel
enumerator kINPUTMUX__Adc0Tcomp2ToTimer2Cptsel
enumerator kINPUTMUX__Adc0Tcomp3ToTimer2Cptsel
enumerator kINPUTMUX__Cmp0OutToTimer2Cptsel
enumerator kINPUTMUX__Cmp1OutToTimer2Cptsel
enumerator kINPUTMUX__Cmp2OutToTimer2Cptsel
enumerator kINPUTMUX__Ctimer0M1ToTimer2Cptsel
enumerator kINPUTMUX__Ctimer0M2ToTimer2Cptsel

enumerator kINPUTMUX_Ctimer0M3ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer1M1ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer1M2ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer1M3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer2Cptsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer2Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer2Cptsel

enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer2Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer2Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer2Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer2Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer3M1ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer3M2ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer3M3ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer4M1ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer4M2ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer4M3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer2Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer2Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer2Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer2Cptsel

enumerator kINPUTMUX__Adc2Tcomp0ToTimer2Cptsel
enumerator kINPUTMUX__Adc2Tcomp1ToTimer2Cptsel
enumerator kINPUTMUX__Adc2Tcomp2ToTimer2Cptsel
enumerator kINPUTMUX__Adc2Tcomp3ToTimer2Cptsel
enumerator kINPUTMUX__Adc3Tcomp0ToTimer2Cptsel
enumerator kINPUTMUX__Adc3Tcomp1ToTimer2Cptsel
enumerator kINPUTMUX__Adc3Tcomp2ToTimer2Cptsel
enumerator kINPUTMUX__Adc3Tcomp3ToTimer2Cptsel
TIMER3 CAPTSEL.

enumerator kINPUTMUX__CtimerInp0ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp1ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp2ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp3ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp4ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp5ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp6ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp7ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp8ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp9ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp10ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp11ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp12ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp13ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp14ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp15ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp16ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp17ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp18ToTimer3Cptsel
enumerator kINPUTMUX__CtimerInp19ToTimer3Cptsel
enumerator kINPUTMUX__Usb0StartOffFrameToTimer3Cptsel
enumerator kINPUTMUX__Aoi0Out0ToTimer3Cptsel
enumerator kINPUTMUX__Aoi0Out1ToTimer3Cptsel
enumerator kINPUTMUX__Aoi0Out2ToTimer3Cptsel

enumerator kINPUTMUX__Aoi0Out3ToTimer3Cptsel
enumerator kINPUTMUX__Adc0Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX__Adc0Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX__Adc0Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX__Adc0Tcomp3ToTimer3Cptsel
enumerator kINPUTMUX__Cmp0OutToTimer3Cptsel
enumerator kINPUTMUX__Cmp1OutToTimer3Cptsel
enumerator kINPUTMUX__Cmp2OutToTimer3Cptsel
enumerator kINPUTMUX__Ctimer0M1ToTimer3Cptsel
enumerator kINPUTMUX__Ctimer0M2ToTimer3Cptsel
enumerator kINPUTMUX__Ctimer0M3ToTimer3Cptsel
enumerator kINPUTMUX__Ctimer1M1ToTimer3Cptsel
enumerator kINPUTMUX__Ctimer1M2ToTimer3Cptsel
enumerator kINPUTMUX__Ctimer1M3ToTimer3Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer3Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer3Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer3Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer3Cptsel
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer3Cptsel
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX__Lpi2c1MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX__Lpi2c1SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX__Lpspi0EndOfFrameToTimer3Cptsel
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX__Lpspi1EndOfFrameToTimer3Cptsel
enumerator kINPUTMUX__Lpspi1ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX__Lpuart0ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX__Lpuart0TransmittedDataWordToTimer3Cptsel

enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer2M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer2M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer2M3ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M3ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer3Cptsel

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Adc2Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX_Adc2Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX_Adc2Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX_Adc2Tcomp3ToTimer3Cptsel
enumerator kINPUTMUX_Adc3Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX_Adc3Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX_Adc3Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX_Adc3Tcomp3ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn0ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn1ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn2ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn3ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn4ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn5ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn6ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn7ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn8ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn9ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn10ToTimer3Cptsel
enumerator kINPUTMUX_TrigIn11ToTimer3Cptsel
TIMER4 CAPTSEL.
enumerator kINPUTMUX_CtimerInp0ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp1ToTimer4Cptsel

enumerator kINPUTMUX_CtimerInp2ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp3ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp4ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp5ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp6ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp7ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp8ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp10ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp11ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp12ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp13ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp14ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp15ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp16ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp17ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp18ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp19ToTimer4Cptsel
enumerator kINPUTMUX_Usb0StartOffFrameToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out0ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out1ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out2ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out3ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp0ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp1ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp2ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp3ToTimer4Cptsel
enumerator kINPUTMUX_Cmp0OutToTimer4Cptsel
enumerator kINPUTMUX_Cmp1OutToTimer4Cptsel
enumerator kINPUTMUX_Cmp2OutToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M3ToTimer4Cptsel

enumerator kINPUTMUX_Ctimer1M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer1M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer1M3ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer4Cptsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer4Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer4Cptsel

enumerator kINPUTMUX__Lpuart4TransmittedDataWordToTimer4Captsel
enumerator kINPUTMUX__Lpuart4ReceiveLineIdleToTimer4Captsel
enumerator kINPUTMUX__Aoi1Out0ToTimer4Captsel
enumerator kINPUTMUX__Aoi1Out1ToTimer4Captsel
enumerator kINPUTMUX__Aoi1Out2ToTimer4Captsel
enumerator kINPUTMUX__Aoi1Out3ToTimer4Captsel
enumerator kINPUTMUX__Adc1Tcomp0ToTimer4Captsel
enumerator kINPUTMUX__Adc1Tcomp1ToTimer4Captsel
enumerator kINPUTMUX__Adc1Tcomp2ToTimer4Captsel
enumerator kINPUTMUX__Adc1Tcomp3ToTimer4Captsel
enumerator kINPUTMUX__Ctimer2M1ToTimer4Captsel
enumerator kINPUTMUX__Ctimer2M2ToTimer4Captsel
enumerator kINPUTMUX__Ctimer2M3ToTimer4Captsel
enumerator kINPUTMUX__Ctimer3M1ToTimer4Captsel
enumerator kINPUTMUX__Ctimer3M2ToTimer4Captsel
enumerator kINPUTMUX__Ctimer3M3ToTimer4Captsel
enumerator kINPUTMUX__Qdc1CmpFlag0ToTimer4Captsel
enumerator kINPUTMUX__Qdc1CmpFlag1ToTimer4Captsel
enumerator kINPUTMUX__Qdc1CmpFlag2ToTimer4Captsel
enumerator kINPUTMUX__Qdc1CmpFlag3ToTimer4Captsel
enumerator kINPUTMUX__Qdc1PosMatch0ToTimer4Captsel
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToTimer4Captsel
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToTimer4Captsel
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToTimer4Captsel
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToTimer4Captsel
enumerator kINPUTMUX__Lpi2c2MasterEndOfPacketToTimer4Captsel
enumerator kINPUTMUX__Lpi2c2SlaveEndOfPacketToTimer4Captsel
enumerator kINPUTMUX__Lpi2c3MasterEndOfPacketToTimer4Captsel
enumerator kINPUTMUX__Lpi2c3SlaveEndOfPacketToTimer4Captsel
enumerator kINPUTMUX__Lpuart5ReceivedDataWordToTimer4Captsel
enumerator kINPUTMUX__Lpuart5TransmittedDataWordToTimer4Captsel
enumerator kINPUTMUX__Lpuart5ReceiveLineIdleToTimer4Captsel
enumerator kINPUTMUX__Adc2Tcomp0ToTimer4Captsel

enumerator kINPUTMUX__Adc2Tcomp1ToTimer4Cptsel
enumerator kINPUTMUX__Adc2Tcomp2ToTimer4Cptsel
enumerator kINPUTMUX__Adc2Tcomp3ToTimer4Cptsel
enumerator kINPUTMUX__Adc3Tcomp0ToTimer4Cptsel
enumerator kINPUTMUX__Adc3Tcomp1ToTimer4Cptsel
enumerator kINPUTMUX__Adc3Tcomp2ToTimer4Cptsel
enumerator kINPUTMUX__Adc3Tcomp3ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn0ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn1ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn2ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn3ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn4ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn5ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn6ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn7ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn8ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn9ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn10ToTimer4Cptsel
enumerator kINPUTMUX__TrigIn11ToTimer4Cptsel

TIMER0 Trigger.

enumerator kINPUTMUX__CtimerInp0ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp1ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp2ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp3ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp4ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp5ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp6ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp7ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp8ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp9ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp10ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp11ToTimer0Trigger
enumerator kINPUTMUX__CtimerInp12ToTimer0Trigger

enumerator kINPUTMUX_CtimerInp13ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer0Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer0Trigger
enumerator kINPUTMUX_Cmp0OutToTimer0Trigger
enumerator kINPUTMUX_Cmp1OutToTimer0Trigger
enumerator kINPUTMUX_Cmp2OutToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer0Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer0Trigger

enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer0Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer0Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer0Trigger

enumerator kINPUTMUX_Ctimer3M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc2Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc2Tcomp3ToTimer0Trigger
enumerator kINPUTMUX_Adc3Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc3Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc3Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc3Tcomp3ToTimer0Trigger
TIMER1 Trigger.
enumerator kINPUTMUX_CtimerInp0ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer1Trigger

enumerator kINPUTMUX_CtimerInp3ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer1Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer1Trigger
enumerator kINPUTMUX_Cmp0OutToTimer1Trigger
enumerator kINPUTMUX_Cmp1OutToTimer1Trigger
enumerator kINPUTMUX_Cmp2OutToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer1Trigger

enumerator kINPUTMUX_Ctimer2M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer1Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer1Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer1Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer1Trigger

enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToTimer1Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToTimer1Trigger

enumerator kINPUTMUX__Adc2Tcomp2ToTimer1Trigger
enumerator kINPUTMUX__Adc2Tcomp3ToTimer1Trigger
enumerator kINPUTMUX__Adc3Tcomp0ToTimer1Trigger
enumerator kINPUTMUX__Adc3Tcomp1ToTimer1Trigger
enumerator kINPUTMUX__Adc3Tcomp2ToTimer1Trigger
enumerator kINPUTMUX__Adc3Tcomp3ToTimer1Trigger
TIMER2 Trigger.
enumerator kINPUTMUX__CtimerInp0ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp1ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp2ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp3ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp4ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp5ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp6ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp7ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp8ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp9ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp10ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp11ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp12ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp13ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp14ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp15ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp16ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp17ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp18ToTimer2Trigger
enumerator kINPUTMUX__CtimerInp19ToTimer2Trigger
enumerator kINPUTMUX__Usb0StartOffFrameToTimer2Trigger
enumerator kINPUTMUX__Aoi0Out0ToTimer2Trigger
enumerator kINPUTMUX__Aoi0Out1ToTimer2Trigger
enumerator kINPUTMUX__Aoi0Out2ToTimer2Trigger
enumerator kINPUTMUX__Aoi0Out3ToTimer2Trigger
enumerator kINPUTMUX__Adc0Tcomp0ToTimer2Trigger

enumerator kINPUTMUX__Adc0Tcomp1ToTimer2Trigger
enumerator kINPUTMUX__Adc0Tcomp2ToTimer2Trigger
enumerator kINPUTMUX__Adc0Tcomp3ToTimer2Trigger
enumerator kINPUTMUX__Cmp0OutToTimer2Trigger
enumerator kINPUTMUX__Cmp1OutToTimer2Trigger
enumerator kINPUTMUX__Cmp2OutToTimer2Trigger
enumerator kINPUTMUX__Ctimer0M1ToTimer2Trigger
enumerator kINPUTMUX__Ctimer0M2ToTimer2Trigger
enumerator kINPUTMUX__Ctimer0M3ToTimer2Trigger
enumerator kINPUTMUX__Ctimer1M1ToTimer2Trigger
enumerator kINPUTMUX__Ctimer1M2ToTimer2Trigger
enumerator kINPUTMUX__Ctimer1M3ToTimer2Trigger
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer2Trigger
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer2Trigger
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer2Trigger
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer2Trigger
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer2Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c1MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c1SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpspi0EndOfFrameToTimer2Trigger
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX__Lpspi1EndOfFrameToTimer2Trigger
enumerator kINPUTMUX__Lpspi1ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX__Lpuart0ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX__Lpuart0TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX__Lpuart0ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX__Lpuart1ReceivedDataWordToTimer2Trigger

enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer2Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer2Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer2Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer2Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer2Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer2Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer2Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer2Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer2Trigger
enumerator kINPUTMUX_Ctimer3M2ToTimer2Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer2Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer2Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer2Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer2Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer2Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer2Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer2Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer2Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer2Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer2Trigger

enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToTimer2Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToTimer2Trigger
enumerator kINPUTMUX_Adc2Tcomp2ToTimer2Trigger
enumerator kINPUTMUX_Adc2Tcomp3ToTimer2Trigger
enumerator kINPUTMUX_Adc3Tcomp0ToTimer2Trigger
enumerator kINPUTMUX_Adc3Tcomp1ToTimer2Trigger
enumerator kINPUTMUX_Adc3Tcomp2ToTimer2Trigger
enumerator kINPUTMUX_Adc3Tcomp3ToTimer2Trigger

TIMER3 Trigger.

enumerator kINPUTMUX_CtimerInp0ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp3ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer3Trigger

enumerator kINPUTMUX_CtimerInp16ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer3Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_Cmp0OutToTimer3Trigger
enumerator kINPUTMUX_Cmp1OutToTimer3Trigger
enumerator kINPUTMUX_Cmp2OutToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer3Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer3Trigger

enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer3Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer3Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer3Trigger

enumerator kINPUTMUX_Ctimer4M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer3Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToTimer3Trigger
enumerator kINPUTMUX_Adc2Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc2Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_Adc3Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc3Tcomp1ToTimer3Trigger
enumerator kINPUTMUX_Adc3Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc3Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_TrigIn0ToTimer3Trigger
enumerator kINPUTMUX_TrigIn1ToTimer3Trigger
enumerator kINPUTMUX_TrigIn2ToTimer3Trigger
enumerator kINPUTMUX_TrigIn3ToTimer3Trigger
enumerator kINPUTMUX_TrigIn4ToTimer3Trigger
enumerator kINPUTMUX_TrigIn5ToTimer3Trigger
enumerator kINPUTMUX_TrigIn6ToTimer3Trigger

enumerator kINPUTMUX__TrigIn7ToTimer3Trigger
enumerator kINPUTMUX__TrigIn8ToTimer3Trigger
enumerator kINPUTMUX__TrigIn9ToTimer3Trigger
enumerator kINPUTMUX__TrigIn10ToTimer3Trigger
enumerator kINPUTMUX__TrigIn11ToTimer3Trigger
 TIMER4 Trigger.
enumerator kINPUTMUX__CtimerInp0ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp1ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp2ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp3ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp4ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp5ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp6ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp7ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp8ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp9ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp10ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp11ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp12ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp13ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp14ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp15ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp16ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp17ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp18ToTimer4Trigger
enumerator kINPUTMUX__CtimerInp19ToTimer4Trigger
enumerator kINPUTMUX__Usb0StartOfFrameToTimer4Trigger
enumerator kINPUTMUX__Aoi0Out0ToTimer4Trigger
enumerator kINPUTMUX__Aoi0Out1ToTimer4Trigger
enumerator kINPUTMUX__Aoi0Out2ToTimer4Trigger
enumerator kINPUTMUX__Aoi0Out3ToTimer4Trigger
enumerator kINPUTMUX__Adc0Tcomp0ToTimer4Trigger
enumerator kINPUTMUX__Adc0Tcomp1ToTimer4Trigger

enumerator kINPUTMUX__Adc0Tcomp2ToTimer4Trigger
enumerator kINPUTMUX__Adc0Tcomp3ToTimer4Trigger
enumerator kINPUTMUX__Cmp0OutToTimer4Trigger
enumerator kINPUTMUX__Cmp1OutToTimer4Trigger
enumerator kINPUTMUX__Cmp2OutToTimer4Trigger
enumerator kINPUTMUX__Ctimer0M1ToTimer4Trigger
enumerator kINPUTMUX__Ctimer0M2ToTimer4Trigger
enumerator kINPUTMUX__Ctimer0M3ToTimer4Trigger
enumerator kINPUTMUX__Ctimer1M1ToTimer4Trigger
enumerator kINPUTMUX__Ctimer1M2ToTimer4Trigger
enumerator kINPUTMUX__Ctimer1M3ToTimer4Trigger
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer4Trigger
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer4Trigger
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer4Trigger
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer4Trigger
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer4Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToTimer4Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToTimer4Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToTimer4Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToTimer4Trigger
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToTimer4Trigger
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToTimer4Trigger
enumerator kINPUTMUX__Lpi2c1MasterEndOfPacketToTimer4Trigger
enumerator kINPUTMUX__Lpi2c1SlaveEndOfPacketToTimer4Trigger
enumerator kINPUTMUX__Lpspi0EndOfFrameToTimer4Trigger
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX__Lpspi1EndOfFrameToTimer4Trigger
enumerator kINPUTMUX__Lpspi1ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX__Lpuart0ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX__Lpuart0TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX__Lpuart0ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX__Lpuart1ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX__Lpuart1TransmittedDataWordToTimer4Trigger

enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer4Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer4Trigger
enumerator kINPUTMUX_Ctimer3M2ToTimer4Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer4Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer4Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer4Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer4Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer4Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer4Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer4Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer4Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer4Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToTimer4Trigger

enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpuart5ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart5TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart5ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToTimer4Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToTimer4Trigger
enumerator kINPUTMUX_Adc2Tcomp2ToTimer4Trigger
enumerator kINPUTMUX_Adc2Tcomp3ToTimer4Trigger
enumerator kINPUTMUX_Adc3Tcomp0ToTimer4Trigger
enumerator kINPUTMUX_Adc3Tcomp1ToTimer4Trigger
enumerator kINPUTMUX_Adc3Tcomp2ToTimer4Trigger
enumerator kINPUTMUX_Adc3Tcomp3ToTimer4Trigger
enumerator kINPUTMUX_TrigIn0ToTimer4Trigger
enumerator kINPUTMUX_TrigIn1ToTimer4Trigger
enumerator kINPUTMUX_TrigIn2ToTimer4Trigger
enumerator kINPUTMUX_TrigIn3ToTimer4Trigger
enumerator kINPUTMUX_TrigIn4ToTimer4Trigger
enumerator kINPUTMUX_TrigIn5ToTimer4Trigger
enumerator kINPUTMUX_TrigIn6ToTimer4Trigger
enumerator kINPUTMUX_TrigIn7ToTimer4Trigger
enumerator kINPUTMUX_TrigIn8ToTimer4Trigger
enumerator kINPUTMUX_TrigIn9ToTimer4Trigger
enumerator kINPUTMUX_TrigIn10ToTimer4Trigger
enumerator kINPUTMUX_TrigIn11ToTimer4Trigger
Selection for frequency measurement reference clock.
enumerator kINPUTMUX_ClkInToFreqmeasRef
enumerator kINPUTMUX_FroOsc12MToFreqmeasRef
enumerator kINPUTMUX_FroHfDivToFreqmeasRef
enumerator kINPUTMUX_Clk16K1ToFreqmeasRef
enumerator kINPUTMUX_SlowClkToFreqmeasRef

enumerator kINPUTMUX_FreqmeClkIn0ToFreqmeasRef
enumerator kINPUTMUX_FreqmeClkIn1ToFreqmeasRef
enumerator kINPUTMUX_Aoi0Out0ToFreqmeasRef
enumerator kINPUTMUX_Aoi0Out1ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Aoi1Out0ToFreqmeasRef
enumerator kINPUTMUX_Aoi1Out1ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFreqmeasRef
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFreqmeasRef
Selection for frequency measurement target clock.
enumerator kINPUTMUX_ClkInToFreqmeasTar
enumerator kINPUTMUX_FroOsc12MToFreqmeasTar
enumerator kINPUTMUX_FroHfDivToFreqmeasTar
enumerator kINPUTMUX_Clk16K1ToFreqmeasTar
enumerator kINPUTMUX_SlowClkToFreqmeasTar
enumerator kINPUTMUX_FreqmeClkIn0ToFreqmeasTar
enumerator kINPUTMUX_FreqmeClkIn1ToFreqmeasTar
enumerator kINPUTMUX_Aoi0Out0ToFreqmeasTar
enumerator kINPUTMUX_Aoi0Out1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFreqmeasTar

enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Aoi1Out0ToFreqmeasTar
enumerator kINPUTMUX_Aoi1Out1ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFreqmeasTar
Cmp0 Trigger.
enumerator kINPUTMUX_Aoi0Out0ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out1ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out2ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out3ToCmp0Trigger
enumerator kINPUTMUX_Cmp1OutToCmp0Trigger
enumerator kINPUTMUX_Cmp2OutToCmp0Trigger
enumerator kINPUTMUX_Ctimer0M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer0M2ToCmp0Trigger
enumerator kINPUTMUX_Ctimer1M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer1M2ToCmp0Trigger
enumerator kINPUTMUX_Ctimer2M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer2M2ToCmp0Trigger
enumerator kINPUTMUX_Lptmr0ToCmp0Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToCmp0Trigger

enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_WuuToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out0ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out1ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out2ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out3ToCmp0Trigger
enumerator kINPUTMUX_Ctimer3M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer3M1ToCmp0Trigger
enumerator kINPUTMUX_Ctimer4M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer4M1ToCmp0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToCmp0Trigger
Cmp1 Trigger.
enumerator kINPUTMUX_Aoi0Out0ToCmp1Trigger
enumerator kINPUTMUX_Aoi0Out1ToCmp1Trigger

enumerator kINPUTMUX__Aoi0Out2ToCmp1Trigger
enumerator kINPUTMUX__Aoi0Out3ToCmp1Trigger
enumerator kINPUTMUX__Cmp0OutToCmp1Trigger
enumerator kINPUTMUX__Cmp2OutToCmp1Trigger
enumerator kINPUTMUX__Ctimer0M0ToCmp1Trigger
enumerator kINPUTMUX__Ctimer0M2ToCmp1Trigger
enumerator kINPUTMUX__Ctimer1M0ToCmp1Trigger
enumerator kINPUTMUX__Ctimer1M2ToCmp1Trigger
enumerator kINPUTMUX__Ctimer2M0ToCmp1Trigger
enumerator kINPUTMUX__Ctimer2M2ToCmp1Trigger
enumerator kINPUTMUX__Lptmr0ToCmp1Trigger
enumerator kINPUTMUX__Qdc0PosMatch0ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToCmp1Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToCmp1Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX__WuuToCmp1Trigger
enumerator kINPUTMUX__Aoi1Out0ToCmp1Trigger
enumerator kINPUTMUX__Aoi1Out1ToCmp1Trigger
enumerator kINPUTMUX__Aoi1Out2ToCmp1Trigger
enumerator kINPUTMUX__Aoi1Out3ToCmp1Trigger
enumerator kINPUTMUX__Ctimer3M0ToCmp1Trigger
enumerator kINPUTMUX__Ctimer3M1ToCmp1Trigger
enumerator kINPUTMUX__Ctimer4M0ToCmp1Trigger

enumerator kINPUTMUX_Ctimer4M1ToCmp1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToCmp1Trigger
Cmp2 Trigger.
enumerator kINPUTMUX_Aoi0Out0ToCmp2Trigger
enumerator kINPUTMUX_Aoi0Out1ToCmp2Trigger
enumerator kINPUTMUX_Aoi0Out2ToCmp2Trigger
enumerator kINPUTMUX_Aoi0Out3ToCmp2Trigger
enumerator kINPUTMUX_Cmp0OutToCmp2Trigger
enumerator kINPUTMUX_Cmp1OutToCmp2Trigger
enumerator kINPUTMUX_Ctimer0M0ToCmp2Trigger
enumerator kINPUTMUX_Ctimer0M2ToCmp2Trigger
enumerator kINPUTMUX_Ctimer1M0ToCmp2Trigger
enumerator kINPUTMUX_Ctimer1M2ToCmp2Trigger
enumerator kINPUTMUX_Ctimer2M0ToCmp2Trigger
enumerator kINPUTMUX_Ctimer2M2ToCmp2Trigger
enumerator kINPUTMUX_Lptmr0ToCmp2Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToCmp2Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToCmp2Trigger

enumerator kINPUTMUX__Gpio0PinEventTrig0ToCmp2Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToCmp2Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToCmp2Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToCmp2Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToCmp2Trigger
enumerator kINPUTMUX__WuuToCmp2Trigger
enumerator kINPUTMUX__Aoi1Out0ToCmp2Trigger
enumerator kINPUTMUX__Aoi1Out1ToCmp2Trigger
enumerator kINPUTMUX__Aoi1Out2ToCmp2Trigger
enumerator kINPUTMUX__Aoi1Out3ToCmp2Trigger
enumerator kINPUTMUX__Ctimer3M0ToCmp2Trigger
enumerator kINPUTMUX__Ctimer3M1ToCmp2Trigger
enumerator kINPUTMUX__Ctimer4M0ToCmp2Trigger
enumerator kINPUTMUX__Ctimer4M1ToCmp2Trigger
enumerator kINPUTMUX__Qdc1PosMatch0ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToCmp2Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToCmp2Trigger
Adc0 Trigger.
enumerator kINPUTMUX__ArmTxevToAdc0Trigger
enumerator kINPUTMUX__Aoi0Out0ToAdc0Trigger
enumerator kINPUTMUX__Aoi0Out1ToAdc0Trigger
enumerator kINPUTMUX__Aoi0Out2ToAdc0Trigger
enumerator kINPUTMUX__Aoi0Out3ToAdc0Trigger
enumerator kINPUTMUX__Cmp0OutToAdc0Trigger
enumerator kINPUTMUX__Cmp1OutToAdc0Trigger
enumerator kINPUTMUX__Cmp2OutToAdc0Trigger
enumerator kINPUTMUX__Ctimer0M0ToAdc0Trigger

enumerator kINPUTMUX__Ctimer0M1ToAdc0Trigger
enumerator kINPUTMUX__Ctimer1M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer1M1ToAdc0Trigger
enumerator kINPUTMUX__Ctimer2M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer2M1ToAdc0Trigger
enumerator kINPUTMUX__Lptmr0ToAdc0Trigger
enumerator kINPUTMUX__Qdc0PosMatch0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__WuuToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out0ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out1ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out2ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out3ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp0ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp1ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp2ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp3ToAdc0Trigger
enumerator kINPUTMUX__Ctimer3M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer3M1ToAdc0Trigger
enumerator kINPUTMUX__Ctimer4M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer4M1ToAdc0Trigger

enumerator kINPUTMUX_FlexioCh0ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh1ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh2ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh3ToAdc0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToAdc0Trigger
Adc1 Trigger.
enumerator kINPUTMUX_ArmTxevToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out0ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out1ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out2ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out3ToAdc1Trigger
enumerator kINPUTMUX_Cmp0OutToAdc1Trigger
enumerator kINPUTMUX_Cmp1OutToAdc1Trigger
enumerator kINPUTMUX_Cmp2OutToAdc1Trigger
enumerator kINPUTMUX_Ctimer0M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer0M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer1M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer1M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer2M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer2M1ToAdc1Trigger
enumerator kINPUTMUX_Lptmr0ToAdc1Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAdc1Trigger

enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_WuuToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out0ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out1ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out2ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out3ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToAdc1Trigger
enumerator kINPUTMUX_Ctimer3M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer3M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer4M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer4M1ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh0ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh1ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh2ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh3ToAdc1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAdc1Trigger

enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToAdc1Trigger
Adc2 Trigger.
enumerator kINPUTMUX_ArmTxeVToAdc2Trigger
enumerator kINPUTMUX_Aoi0Out0ToAdc2Trigger
enumerator kINPUTMUX_Aoi0Out1ToAdc2Trigger
enumerator kINPUTMUX_Aoi0Out2ToAdc2Trigger
enumerator kINPUTMUX_Aoi0Out3ToAdc2Trigger
enumerator kINPUTMUX_Cmp0OutToAdc2Trigger
enumerator kINPUTMUX_Cmp1OutToAdc2Trigger
enumerator kINPUTMUX_Cmp2OutToAdc2Trigger
enumerator kINPUTMUX_Ctimer0M0ToAdc2Trigger
enumerator kINPUTMUX_Ctimer0M1ToAdc2Trigger
enumerator kINPUTMUX_Ctimer1M0ToAdc2Trigger
enumerator kINPUTMUX_Ctimer1M1ToAdc2Trigger
enumerator kINPUTMUX_Ctimer2M0ToAdc2Trigger
enumerator kINPUTMUX_Ctimer2M1ToAdc2Trigger
enumerator kINPUTMUX_Lptmr0ToAdc2Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToAdc2Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToAdc2Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToAdc2Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToAdc2Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToAdc2Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToAdc2Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToAdc2Trigger

enumerator kINPUTMUX__WuuToAdc2Trigger
enumerator kINPUTMUX__Aoi1Out0ToAdc2Trigger
enumerator kINPUTMUX__Aoi1Out1ToAdc2Trigger
enumerator kINPUTMUX__Aoi1Out2ToAdc2Trigger
enumerator kINPUTMUX__Aoi1Out3ToAdc2Trigger
enumerator kINPUTMUX__Adc0Tcomp0ToAdc2Trigger
enumerator kINPUTMUX__Adc0Tcomp1ToAdc2Trigger
enumerator kINPUTMUX__Adc0Tcomp2ToAdc2Trigger
enumerator kINPUTMUX__Adc0Tcomp3ToAdc2Trigger
enumerator kINPUTMUX__Ctimer3M0ToAdc2Trigger
enumerator kINPUTMUX__Ctimer3M1ToAdc2Trigger
enumerator kINPUTMUX__Ctimer4M0ToAdc2Trigger
enumerator kINPUTMUX__Ctimer4M1ToAdc2Trigger
enumerator kINPUTMUX__FlexioCh0ToAdc2Trigger
enumerator kINPUTMUX__FlexioCh1ToAdc2Trigger
enumerator kINPUTMUX__FlexioCh2ToAdc2Trigger
enumerator kINPUTMUX__FlexioCh3ToAdc2Trigger
enumerator kINPUTMUX__Qdc1PosMatch0ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToAdc2Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToAdc2Trigger
Adc3 Trigger.
enumerator kINPUTMUX__ArmTxevToAdc3Trigger
enumerator kINPUTMUX__Aoi0Out0ToAdc3Trigger
enumerator kINPUTMUX__Aoi0Out1ToAdc3Trigger
enumerator kINPUTMUX__Aoi0Out2ToAdc3Trigger
enumerator kINPUTMUX__Aoi0Out3ToAdc3Trigger
enumerator kINPUTMUX__Cmp0OutToAdc3Trigger

enumerator kINPUTMUX_Cmp1OutToAdc3Trigger
enumerator kINPUTMUX_Cmp2OutToAdc3Trigger
enumerator kINPUTMUX_Ctimer0M0ToAdc3Trigger
enumerator kINPUTMUX_Ctimer0M1ToAdc3Trigger
enumerator kINPUTMUX_Ctimer1M0ToAdc3Trigger
enumerator kINPUTMUX_Ctimer1M1ToAdc3Trigger
enumerator kINPUTMUX_Ctimer2M0ToAdc3Trigger
enumerator kINPUTMUX_Ctimer2M1ToAdc3Trigger
enumerator kINPUTMUX_Lptmr0ToAdc3Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToAdc3Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToAdc3Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToAdc3Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToAdc3Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToAdc3Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToAdc3Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToAdc3Trigger
enumerator kINPUTMUX_WuuToAdc3Trigger
enumerator kINPUTMUX_Aoi1Out0ToAdc3Trigger
enumerator kINPUTMUX_Aoi1Out1ToAdc3Trigger
enumerator kINPUTMUX_Aoi1Out2ToAdc3Trigger
enumerator kINPUTMUX_Aoi1Out3ToAdc3Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToAdc3Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToAdc3Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToAdc3Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToAdc3Trigger
enumerator kINPUTMUX_Ctimer3M0ToAdc3Trigger

enumerator kINPUTMUX__Ctimer3M1ToAdc3Trigger
enumerator kINPUTMUX__Ctimer4M0ToAdc3Trigger
enumerator kINPUTMUX__Ctimer4M1ToAdc3Trigger
enumerator kINPUTMUX__FlexioCh0ToAdc3Trigger
enumerator kINPUTMUX__FlexioCh1ToAdc3Trigger
enumerator kINPUTMUX__FlexioCh2ToAdc3Trigger
enumerator kINPUTMUX__FlexioCh3ToAdc3Trigger
enumerator kINPUTMUX__Qdc1PosMatch0ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToAdc3Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToAdc3Trigger
 Dac0 Trigger.
enumerator kINPUTMUX__ArmTxevToDac0Trigger
enumerator kINPUTMUX__Aoi0Out0ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out1ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out2ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out3ToDac0Trigger
enumerator kINPUTMUX__Cmp0OutToDac0Trigger
enumerator kINPUTMUX__Cmp1OutToDac0Trigger
enumerator kINPUTMUX__Cmp2OutToDac0Trigger
enumerator kINPUTMUX__Ctimer0M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer0M1ToDac0Trigger
enumerator kINPUTMUX__Ctimer1M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer1M1ToDac0Trigger
enumerator kINPUTMUX__Ctimer2M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer2M1ToDac0Trigger
enumerator kINPUTMUX__Lptmr0ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToDac0Trigger

enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToDac0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToDac0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToDac0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX_WuuToDac0Trigger
enumerator kINPUTMUX_Aoi1Out0ToDac0Trigger
enumerator kINPUTMUX_Aoi1Out1ToDac0Trigger
enumerator kINPUTMUX_Aoi1Out2ToDac0Trigger
enumerator kINPUTMUX_Aoi1Out3ToDac0Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToDac0Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToDac0Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToDac0Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToDac0Trigger
enumerator kINPUTMUX_Ctimer3M0ToDac0Trigger
enumerator kINPUTMUX_Ctimer3M1ToDac0Trigger
enumerator kINPUTMUX_Ctimer4M0ToDac0Trigger
enumerator kINPUTMUX_Ctimer4M1ToDac0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToDac0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToDac0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToDac0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToDac0Trigger
enumerator kINPUTMUX_Adc2Tcomp0ToDac0Trigger
enumerator kINPUTMUX_Adc2Tcomp1ToDac0Trigger
enumerator kINPUTMUX_Adc3Tcomp0ToDac0Trigger
enumerator kINPUTMUX_Adc3Tcomp1ToDac0Trigger
Qdc0 Trigger.
enumerator kINPUTMUX_ArmTxevToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out0ToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out1ToQdc0Trigger

enumerator kINPUTMUX__Aoi0Out2ToQdc0Trigger
enumerator kINPUTMUX__Aoi0Out3ToQdc0Trigger
enumerator kINPUTMUX__Cmp0OutToQdc0Trigger
enumerator kINPUTMUX__Cmp1OutToQdc0Trigger
enumerator kINPUTMUX__Cmp2OutToQdc0Trigger
enumerator kINPUTMUX__Ctimer0M2ToQdc0Trigger
enumerator kINPUTMUX__Ctimer0M3ToQdc0Trigger
enumerator kINPUTMUX__Ctimer1M2ToQdc0Trigger
enumerator kINPUTMUX__Ctimer1M3ToQdc0Trigger
enumerator kINPUTMUX__Ctimer2M2ToQdc0Trigger
enumerator kINPUTMUX__Ctimer2M3ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__TrigIn0ToQdc0Trigger
enumerator kINPUTMUX__TrigIn1ToQdc0Trigger
enumerator kINPUTMUX__TrigIn2ToQdc0Trigger
enumerator kINPUTMUX__TrigIn3ToQdc0Trigger
enumerator kINPUTMUX__TrigIn4ToQdc0Trigger
enumerator kINPUTMUX__TrigIn5ToQdc0Trigger
enumerator kINPUTMUX__TrigIn6ToQdc0Trigger
enumerator kINPUTMUX__TrigIn7ToQdc0Trigger
enumerator kINPUTMUX__TrigIn8ToQdc0Trigger
enumerator kINPUTMUX__TrigIn9ToQdc0Trigger
enumerator kINPUTMUX__TrigIn10ToQdc0Trigger
enumerator kINPUTMUX__TrigIn11ToQdc0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Trigger

enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX__Aoi1Out0ToQdc0Trigger
enumerator kINPUTMUX__Aoi1Out1ToQdc0Trigger
enumerator kINPUTMUX__Aoi1Out2ToQdc0Trigger
enumerator kINPUTMUX__Aoi1Out3ToQdc0Trigger
enumerator kINPUTMUX__Ctimer3M2ToQdc0Trigger
enumerator kINPUTMUX__Ctimer3M3ToQdc0Trigger
enumerator kINPUTMUX__Ctimer4M2ToQdc0Trigger
enumerator kINPUTMUX__Ctimer4M3ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc0Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc0Trigger
Qdc0 Home.
enumerator kINPUTMUX__ArmTxevToQdc0Home
enumerator kINPUTMUX__Aoi0Out0ToQdc0Home
enumerator kINPUTMUX__Aoi0Out1ToQdc0Home
enumerator kINPUTMUX__Aoi0Out2ToQdc0Home
enumerator kINPUTMUX__Aoi0Out3ToQdc0Home
enumerator kINPUTMUX__Cmp0OutToQdc0Home
enumerator kINPUTMUX__Cmp1OutToQdc0Home
enumerator kINPUTMUX__Cmp2OutToQdc0Home
enumerator kINPUTMUX__Ctimer0M2ToQdc0Home
enumerator kINPUTMUX__Ctimer0M3ToQdc0Home
enumerator kINPUTMUX__Ctimer1M2ToQdc0Home
enumerator kINPUTMUX__Ctimer1M3ToQdc0Home
enumerator kINPUTMUX__Ctimer2M2ToQdc0Home

enumerator kINPUTMUX__Ctimer2M3ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc0Home
enumerator kINPUTMUX__TrigIn0ToQdc0Home
enumerator kINPUTMUX__TrigIn1ToQdc0Home
enumerator kINPUTMUX__TrigIn2ToQdc0Home
enumerator kINPUTMUX__TrigIn3ToQdc0Home
enumerator kINPUTMUX__TrigIn4ToQdc0Home
enumerator kINPUTMUX__TrigIn5ToQdc0Home
enumerator kINPUTMUX__TrigIn6ToQdc0Home
enumerator kINPUTMUX__TrigIn7ToQdc0Home
enumerator kINPUTMUX__TrigIn8ToQdc0Home
enumerator kINPUTMUX__TrigIn9ToQdc0Home
enumerator kINPUTMUX__TrigIn10ToQdc0Home
enumerator kINPUTMUX__TrigIn11ToQdc0Home
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Home
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Home
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Home
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Home
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Home
enumerator kINPUTMUX__Aoi1Out0ToQdc0Home
enumerator kINPUTMUX__Aoi1Out1ToQdc0Home
enumerator kINPUTMUX__Aoi1Out2ToQdc0Home
enumerator kINPUTMUX__Aoi1Out3ToQdc0Home
enumerator kINPUTMUX__Ctimer3M2ToQdc0Home
enumerator kINPUTMUX__Ctimer3M3ToQdc0Home
enumerator kINPUTMUX__Ctimer4M2ToQdc0Home

enumerator kINPUTMUX__Ctimer4M3ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc0Home
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc0Home
Qdc0 Index.

enumerator kINPUTMUX__ArmTxevToQdc0Index
enumerator kINPUTMUX__Aoi0Out0ToQdc0Index
enumerator kINPUTMUX__Aoi0Out1ToQdc0Index
enumerator kINPUTMUX__Aoi0Out2ToQdc0Index
enumerator kINPUTMUX__Aoi0Out3ToQdc0Index
enumerator kINPUTMUX__Cmp0OutToQdc0Index
enumerator kINPUTMUX__Cmp1OutToQdc0Index
enumerator kINPUTMUX__Cmp2OutToQdc0Index
enumerator kINPUTMUX__Ctimer0M2ToQdc0Index
enumerator kINPUTMUX__Ctimer0M3ToQdc0Index
enumerator kINPUTMUX__Ctimer1M2ToQdc0Index
enumerator kINPUTMUX__Ctimer1M3ToQdc0Index
enumerator kINPUTMUX__Ctimer2M2ToQdc0Index
enumerator kINPUTMUX__Ctimer2M3ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc0Index
enumerator kINPUTMUX__TrigIn0ToQdc0Index

enumerator kINPUTMUX__TrigIn1ToQdc0Index
enumerator kINPUTMUX__TrigIn2ToQdc0Index
enumerator kINPUTMUX__TrigIn3ToQdc0Index
enumerator kINPUTMUX__TrigIn4ToQdc0Index
enumerator kINPUTMUX__TrigIn5ToQdc0Index
enumerator kINPUTMUX__TrigIn6ToQdc0Index
enumerator kINPUTMUX__TrigIn7ToQdc0Index
enumerator kINPUTMUX__TrigIn8ToQdc0Index
enumerator kINPUTMUX__TrigIn9ToQdc0Index
enumerator kINPUTMUX__TrigIn10ToQdc0Index
enumerator kINPUTMUX__TrigIn11ToQdc0Index
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Aoi1Out0ToQdc0Index
enumerator kINPUTMUX__Aoi1Out1ToQdc0Index
enumerator kINPUTMUX__Aoi1Out2ToQdc0Index
enumerator kINPUTMUX__Aoi1Out3ToQdc0Index
enumerator kINPUTMUX__Ctimer3M2ToQdc0Index
enumerator kINPUTMUX__Ctimer3M3ToQdc0Index
enumerator kINPUTMUX__Ctimer4M2ToQdc0Index
enumerator kINPUTMUX__Ctimer4M3ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc0Index
Qdc0 Phaseb.

enumerator kINPUTMUX__ArmTxeVToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out0ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out1ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out2ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out3ToQdc0Phaseb
enumerator kINPUTMUX__Cmp0OutToQdc0Phaseb
enumerator kINPUTMUX__Cmp1OutToQdc0Phaseb
enumerator kINPUTMUX__Cmp2OutToQdc0Phaseb
enumerator kINPUTMUX__Ctimer0M2ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer0M3ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer1M2ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer1M3ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer2M2ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer2M3ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn0ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn1ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn2ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn3ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn4ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn5ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn6ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn7ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn8ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn9ToQdc0Phaseb
enumerator kINPUTMUX__TrigIn10ToQdc0Phaseb

enumerator kINPUTMUX__TrigIn11ToQdc0Phaseb
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Aoi1Out0ToQdc0Phaseb
enumerator kINPUTMUX__Aoi1Out1ToQdc0Phaseb
enumerator kINPUTMUX__Aoi1Out2ToQdc0Phaseb
enumerator kINPUTMUX__Aoi1Out3ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer3M2ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer3M3ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer4M2ToQdc0Phaseb
enumerator kINPUTMUX__Ctimer4M3ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc0Phaseb
Qdc0 Phasea.
enumerator kINPUTMUX__ArmTxevToQdc0Phasea
enumerator kINPUTMUX__Aoi0Out0ToQdc0Phasea
enumerator kINPUTMUX__Aoi0Out1ToQdc0Phasea
enumerator kINPUTMUX__Aoi0Out2ToQdc0Phasea
enumerator kINPUTMUX__Aoi0Out3ToQdc0Phasea
enumerator kINPUTMUX__Cmp0OutToQdc0Phasea
enumerator kINPUTMUX__Cmp1OutToQdc0Phasea
enumerator kINPUTMUX__Cmp2OutToQdc0Phasea
enumerator kINPUTMUX__Ctimer0M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer0M3ToQdc0Phasea

enumerator kINPUTMUX__Ctimer1M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer1M3ToQdc0Phasea
enumerator kINPUTMUX__Ctimer2M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer2M3ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__TrigIn0ToQdc0Phasea
enumerator kINPUTMUX__TrigIn1ToQdc0Phasea
enumerator kINPUTMUX__TrigIn2ToQdc0Phasea
enumerator kINPUTMUX__TrigIn3ToQdc0Phasea
enumerator kINPUTMUX__TrigIn4ToQdc0Phasea
enumerator kINPUTMUX__TrigIn5ToQdc0Phasea
enumerator kINPUTMUX__TrigIn6ToQdc0Phasea
enumerator kINPUTMUX__TrigIn7ToQdc0Phasea
enumerator kINPUTMUX__TrigIn8ToQdc0Phasea
enumerator kINPUTMUX__TrigIn9ToQdc0Phasea
enumerator kINPUTMUX__TrigIn10ToQdc0Phasea
enumerator kINPUTMUX__TrigIn11ToQdc0Phasea
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out0ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out1ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out2ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out3ToQdc0Phasea

enumerator kINPUTMUX__Ctimer3M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer3M3ToQdc0Phasea
enumerator kINPUTMUX__Ctimer4M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer4M3ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc0Phasea
Qdc0 Icap1-3.
enumerator kINPUTMUX__ArmTxevToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out0ToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out1ToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out2ToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out3ToQdc0Icap1
enumerator kINPUTMUX__Cmp0OutToQdc0Icap1
enumerator kINPUTMUX__Cmp1OutToQdc0Icap1
enumerator kINPUTMUX__Cmp2OutToQdc0Icap1
enumerator kINPUTMUX__Ctimer0M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer0M3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer1M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer1M3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer2M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer2M3ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Icap1

enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc0Icap1
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc0Icap1
enumerator kINPUTMUX_TrigIn0ToQdc0Icap1
enumerator kINPUTMUX_TrigIn1ToQdc0Icap1
enumerator kINPUTMUX_TrigIn2ToQdc0Icap1
enumerator kINPUTMUX_TrigIn3ToQdc0Icap1
enumerator kINPUTMUX_TrigIn4ToQdc0Icap1
enumerator kINPUTMUX_TrigIn5ToQdc0Icap1
enumerator kINPUTMUX_TrigIn6ToQdc0Icap1
enumerator kINPUTMUX_TrigIn7ToQdc0Icap1
enumerator kINPUTMUX_TrigIn8ToQdc0Icap1
enumerator kINPUTMUX_TrigIn9ToQdc0Icap1
enumerator kINPUTMUX_TrigIn10ToQdc0Icap1
enumerator kINPUTMUX_TrigIn11ToQdc0Icap1
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX_Aoi1Out0ToQdc0Icap1
enumerator kINPUTMUX_Aoi1Out1ToQdc0Icap1
enumerator kINPUTMUX_Aoi1Out2ToQdc0Icap1
enumerator kINPUTMUX_Aoi1Out3ToQdc0Icap1
enumerator kINPUTMUX_Ctimer3M2ToQdc0Icap1
enumerator kINPUTMUX_Ctimer3M3ToQdc0Icap1
enumerator kINPUTMUX_Ctimer4M2ToQdc0Icap1
enumerator kINPUTMUX_Ctimer4M3ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc0Icap1

enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToQdc0Icap1
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToQdc0Icap1
Qdc1 Trigger.
enumerator kINPUTMUX_ArmTxevToQdc1Trigger
enumerator kINPUTMUX_Aoi0Out0ToQdc1Trigger
enumerator kINPUTMUX_Aoi0Out1ToQdc1Trigger
enumerator kINPUTMUX_Aoi0Out2ToQdc1Trigger
enumerator kINPUTMUX_Aoi0Out3ToQdc1Trigger
enumerator kINPUTMUX_Cmp0OutToQdc1Trigger
enumerator kINPUTMUX_Cmp1OutToQdc1Trigger
enumerator kINPUTMUX_Cmp2OutToQdc1Trigger
enumerator kINPUTMUX_Ctimer0M2ToQdc1Trigger
enumerator kINPUTMUX_Ctimer0M3ToQdc1Trigger
enumerator kINPUTMUX_Ctimer1M2ToQdc1Trigger
enumerator kINPUTMUX_Ctimer1M3ToQdc1Trigger
enumerator kINPUTMUX_Ctimer2M2ToQdc1Trigger
enumerator kINPUTMUX_Ctimer2M3ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_TrigIn0ToQdc1Trigger
enumerator kINPUTMUX_TrigIn1ToQdc1Trigger
enumerator kINPUTMUX_TrigIn2ToQdc1Trigger
enumerator kINPUTMUX_TrigIn3ToQdc1Trigger
enumerator kINPUTMUX_TrigIn4ToQdc1Trigger
enumerator kINPUTMUX_TrigIn5ToQdc1Trigger
enumerator kINPUTMUX_TrigIn6ToQdc1Trigger
enumerator kINPUTMUX_TrigIn7ToQdc1Trigger

enumerator kINPUTMUX__TrigIn8ToQdc1Trigger
enumerator kINPUTMUX__TrigIn9ToQdc1Trigger
enumerator kINPUTMUX__TrigIn10ToQdc1Trigger
enumerator kINPUTMUX__TrigIn11ToQdc1Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX__Aoi1Out0ToQdc1Trigger
enumerator kINPUTMUX__Aoi1Out1ToQdc1Trigger
enumerator kINPUTMUX__Aoi1Out2ToQdc1Trigger
enumerator kINPUTMUX__Aoi1Out3ToQdc1Trigger
enumerator kINPUTMUX__Ctimer3M2ToQdc1Trigger
enumerator kINPUTMUX__Ctimer3M3ToQdc1Trigger
enumerator kINPUTMUX__Ctimer4M2ToQdc1Trigger
enumerator kINPUTMUX__Ctimer4M3ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc1Trigger
Qdc1 Home.
enumerator kINPUTMUX__ArmTxevToQdc1Home
enumerator kINPUTMUX__Aoi0Out0ToQdc1Home
enumerator kINPUTMUX__Aoi0Out1ToQdc1Home
enumerator kINPUTMUX__Aoi0Out2ToQdc1Home
enumerator kINPUTMUX__Aoi0Out3ToQdc1Home
enumerator kINPUTMUX__Cmp0OutToQdc1Home
enumerator kINPUTMUX__Cmp1OutToQdc1Home

enumerator kINPUTMUX_Cmp2OutToQdc1Home
enumerator kINPUTMUX_Ctimer0M2ToQdc1Home
enumerator kINPUTMUX_Ctimer0M3ToQdc1Home
enumerator kINPUTMUX_Ctimer1M2ToQdc1Home
enumerator kINPUTMUX_Ctimer1M3ToQdc1Home
enumerator kINPUTMUX_Ctimer2M2ToQdc1Home
enumerator kINPUTMUX_Ctimer2M3ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc1Home
enumerator kINPUTMUX_TrigIn0ToQdc1Home
enumerator kINPUTMUX_TrigIn1ToQdc1Home
enumerator kINPUTMUX_TrigIn2ToQdc1Home
enumerator kINPUTMUX_TrigIn3ToQdc1Home
enumerator kINPUTMUX_TrigIn4ToQdc1Home
enumerator kINPUTMUX_TrigIn5ToQdc1Home
enumerator kINPUTMUX_TrigIn6ToQdc1Home
enumerator kINPUTMUX_TrigIn7ToQdc1Home
enumerator kINPUTMUX_TrigIn8ToQdc1Home
enumerator kINPUTMUX_TrigIn9ToQdc1Home
enumerator kINPUTMUX_TrigIn10ToQdc1Home
enumerator kINPUTMUX_TrigIn11ToQdc1Home
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Aoi1Out0ToQdc1Home

enumerator kINPUTMUX__Aoi1Out1ToQdc1Home
enumerator kINPUTMUX__Aoi1Out2ToQdc1Home
enumerator kINPUTMUX__Aoi1Out3ToQdc1Home
enumerator kINPUTMUX__Ctimer3M2ToQdc1Home
enumerator kINPUTMUX__Ctimer3M3ToQdc1Home
enumerator kINPUTMUX__Ctimer4M2ToQdc1Home
enumerator kINPUTMUX__Ctimer4M3ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc1Home
Qdc1 Index.
enumerator kINPUTMUX__ArmTxevToQdc1Index
enumerator kINPUTMUX__Aoi0Out0ToQdc1Index
enumerator kINPUTMUX__Aoi0Out1ToQdc1Index
enumerator kINPUTMUX__Aoi0Out2ToQdc1Index
enumerator kINPUTMUX__Aoi0Out3ToQdc1Index
enumerator kINPUTMUX__Cmp0OutToQdc1Index
enumerator kINPUTMUX__Cmp1OutToQdc1Index
enumerator kINPUTMUX__Cmp2OutToQdc1Index
enumerator kINPUTMUX__Ctimer0M2ToQdc1Index
enumerator kINPUTMUX__Ctimer0M3ToQdc1Index
enumerator kINPUTMUX__Ctimer1M2ToQdc1Index
enumerator kINPUTMUX__Ctimer1M3ToQdc1Index
enumerator kINPUTMUX__Ctimer2M2ToQdc1Index
enumerator kINPUTMUX__Ctimer2M3ToQdc1Index
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc1Index
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc1Index
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc1Index

enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc1Index
enumerator kINPUTMUX_TrigIn0ToQdc1Index
enumerator kINPUTMUX_TrigIn1ToQdc1Index
enumerator kINPUTMUX_TrigIn2ToQdc1Index
enumerator kINPUTMUX_TrigIn3ToQdc1Index
enumerator kINPUTMUX_TrigIn4ToQdc1Index
enumerator kINPUTMUX_TrigIn5ToQdc1Index
enumerator kINPUTMUX_TrigIn6ToQdc1Index
enumerator kINPUTMUX_TrigIn7ToQdc1Index
enumerator kINPUTMUX_TrigIn8ToQdc1Index
enumerator kINPUTMUX_TrigIn9ToQdc1Index
enumerator kINPUTMUX_TrigIn10ToQdc1Index
enumerator kINPUTMUX_TrigIn11ToQdc1Index
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Aoi1Out0ToQdc1Index
enumerator kINPUTMUX_Aoi1Out1ToQdc1Index
enumerator kINPUTMUX_Aoi1Out2ToQdc1Index
enumerator kINPUTMUX_Aoi1Out3ToQdc1Index
enumerator kINPUTMUX_Ctimer3M2ToQdc1Index
enumerator kINPUTMUX_Ctimer3M3ToQdc1Index
enumerator kINPUTMUX_Ctimer4M2ToQdc1Index
enumerator kINPUTMUX_Ctimer4M3ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Index

enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToQdc1Index
Qdc1 Phaseb.
enumerator kINPUTMUX_ArmTxevToQdc1Phaseb
enumerator kINPUTMUX_Aoi0Out0ToQdc1Phaseb
enumerator kINPUTMUX_Aoi0Out1ToQdc1Phaseb
enumerator kINPUTMUX_Aoi0Out2ToQdc1Phaseb
enumerator kINPUTMUX_Aoi0Out3ToQdc1Phaseb
enumerator kINPUTMUX_Cmp0OutToQdc1Phaseb
enumerator kINPUTMUX_Cmp1OutToQdc1Phaseb
enumerator kINPUTMUX_Cmp2OutToQdc1Phaseb
enumerator kINPUTMUX_Ctimer0M2ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer0M3ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer1M2ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer1M3ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer2M2ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer2M3ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_TrigIn0ToQdc1Phaseb
enumerator kINPUTMUX_TrigIn1ToQdc1Phaseb
enumerator kINPUTMUX_TrigIn2ToQdc1Phaseb
enumerator kINPUTMUX_TrigIn3ToQdc1Phaseb
enumerator kINPUTMUX_TrigIn4ToQdc1Phaseb

enumerator kINPUTMUX__TrigIn5ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn6ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn7ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn8ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn9ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn10ToQdc1Phaseb
enumerator kINPUTMUX__TrigIn11ToQdc1Phaseb
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Aoi1Out0ToQdc1Phaseb
enumerator kINPUTMUX__Aoi1Out1ToQdc1Phaseb
enumerator kINPUTMUX__Aoi1Out2ToQdc1Phaseb
enumerator kINPUTMUX__Aoi1Out3ToQdc1Phaseb
enumerator kINPUTMUX__Ctimer3M2ToQdc1Phaseb
enumerator kINPUTMUX__Ctimer3M3ToQdc1Phaseb
enumerator kINPUTMUX__Ctimer4M2ToQdc1Phaseb
enumerator kINPUTMUX__Ctimer4M3ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc1Phaseb
Qdc1 Phasea.
enumerator kINPUTMUX__ArmTxevToQdc1Phasea
enumerator kINPUTMUX__Aoi0Out0ToQdc1Phasea
enumerator kINPUTMUX__Aoi0Out1ToQdc1Phasea
enumerator kINPUTMUX__Aoi0Out2ToQdc1Phasea

enumerator kINPUTMUX__Aoi0Out3ToQdc1Phasea
enumerator kINPUTMUX__Cmp0OutToQdc1Phasea
enumerator kINPUTMUX__Cmp1OutToQdc1Phasea
enumerator kINPUTMUX__Cmp2OutToQdc1Phasea
enumerator kINPUTMUX__Ctimer0M2ToQdc1Phasea
enumerator kINPUTMUX__Ctimer0M3ToQdc1Phasea
enumerator kINPUTMUX__Ctimer1M2ToQdc1Phasea
enumerator kINPUTMUX__Ctimer1M3ToQdc1Phasea
enumerator kINPUTMUX__Ctimer2M2ToQdc1Phasea
enumerator kINPUTMUX__Ctimer2M3ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__TrigIn0ToQdc1Phasea
enumerator kINPUTMUX__TrigIn1ToQdc1Phasea
enumerator kINPUTMUX__TrigIn2ToQdc1Phasea
enumerator kINPUTMUX__TrigIn3ToQdc1Phasea
enumerator kINPUTMUX__TrigIn4ToQdc1Phasea
enumerator kINPUTMUX__TrigIn5ToQdc1Phasea
enumerator kINPUTMUX__TrigIn6ToQdc1Phasea
enumerator kINPUTMUX__TrigIn7ToQdc1Phasea
enumerator kINPUTMUX__TrigIn8ToQdc1Phasea
enumerator kINPUTMUX__TrigIn9ToQdc1Phasea
enumerator kINPUTMUX__TrigIn10ToQdc1Phasea
enumerator kINPUTMUX__TrigIn11ToQdc1Phasea
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc1Phasea

enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX__Aoi1Out0ToQdc1Phasea
enumerator kINPUTMUX__Aoi1Out1ToQdc1Phasea
enumerator kINPUTMUX__Aoi1Out2ToQdc1Phasea
enumerator kINPUTMUX__Aoi1Out3ToQdc1Phasea
enumerator kINPUTMUX__Ctimer3M2ToQdc1Phasea
enumerator kINPUTMUX__Ctimer3M3ToQdc1Phasea
enumerator kINPUTMUX__Ctimer4M2ToQdc1Phasea
enumerator kINPUTMUX__Ctimer4M3ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToQdc1Phasea
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToQdc1Phasea
Qdc1 Icap1-3.
enumerator kINPUTMUX__ArmTxevToQdc1Icap1
enumerator kINPUTMUX__Aoi0Out0ToQdc1Icap1
enumerator kINPUTMUX__Aoi0Out1ToQdc1Icap1
enumerator kINPUTMUX__Aoi0Out2ToQdc1Icap1
enumerator kINPUTMUX__Aoi0Out3ToQdc1Icap1
enumerator kINPUTMUX__Cmp0OutToQdc1Icap1
enumerator kINPUTMUX__Cmp1OutToQdc1Icap1
enumerator kINPUTMUX__Cmp2OutToQdc1Icap1
enumerator kINPUTMUX__Ctimer0M2ToQdc1Icap1
enumerator kINPUTMUX__Ctimer0M3ToQdc1Icap1
enumerator kINPUTMUX__Ctimer1M2ToQdc1Icap1
enumerator kINPUTMUX__Ctimer1M3ToQdc1Icap1
enumerator kINPUTMUX__Ctimer2M2ToQdc1Icap1
enumerator kINPUTMUX__Ctimer2M3ToQdc1Icap1

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_TrigIn0ToQdc1Icap1
enumerator kINPUTMUX_TrigIn1ToQdc1Icap1
enumerator kINPUTMUX_TrigIn2ToQdc1Icap1
enumerator kINPUTMUX_TrigIn3ToQdc1Icap1
enumerator kINPUTMUX_TrigIn4ToQdc1Icap1
enumerator kINPUTMUX_TrigIn5ToQdc1Icap1
enumerator kINPUTMUX_TrigIn6ToQdc1Icap1
enumerator kINPUTMUX_TrigIn7ToQdc1Icap1
enumerator kINPUTMUX_TrigIn8ToQdc1Icap1
enumerator kINPUTMUX_TrigIn9ToQdc1Icap1
enumerator kINPUTMUX_TrigIn10ToQdc1Icap1
enumerator kINPUTMUX_TrigIn11ToQdc1Icap1
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX_Aoi1Out0ToQdc1Icap1
enumerator kINPUTMUX_Aoi1Out1ToQdc1Icap1
enumerator kINPUTMUX_Aoi1Out2ToQdc1Icap1
enumerator kINPUTMUX_Aoi1Out3ToQdc1Icap1
enumerator kINPUTMUX_Ctimer3M2ToQdc1Icap1
enumerator kINPUTMUX_Ctimer3M3ToQdc1Icap1
enumerator kINPUTMUX_Ctimer4M2ToQdc1Icap1
enumerator kINPUTMUX_Ctimer4M3ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToQdc1Icap1

enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToQdc1Icap1

FlexPWM0_SM0_EXTa0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Cmp2OutToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm0Ext0

enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToFlexPwm0Sm0Exta0
FlexPWM0_SM1_EXT1 input trigger connections.

enumerator kINPUTMUX__ArmTxeVToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Cmp0OutToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Cmp1OutToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Cmp2OutToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm1Ext1

enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Sm1Ext1
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Sm1Ext1

FlexPWM0_SM2_EXT2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm2Ext2
enumerator kINPUTMUX_Cmp2OutToFlexPwm0Sm2Ext2

enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm2Exta2

enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToFlexPwm0Sm2Exta2

FlexPWM0_SM3_EXT3 input trigger connections.

enumerator kINPUTMUX__ArmTxevToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Cmp0OutToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Cmp1OutToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Cmp2OutToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Sm3Exta3

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm3Exta3

enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Sm3Exta3
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Sm3Exta3
FlexPWM0_SM0_EXTSYNC0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Cmp2OutToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm0Extsync0

enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToFlexPwm0Sm0Extsync0
FlexPWM0_SM1_EXTSYNC1 input trigger connections.

enumerator kINPUTMUX__ArmTxevToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Cmp0OutToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Cmp1OutToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Cmp2OutToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm1Extsync1

enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Sm1Extsync1

FlexPWM0_SM2_EXTSYNC2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Cmp2OutToFlexPwm0Sm2Extsync2

enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm2Extsync2

enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Sm2Extsync2

FlexPWM0_SM3_EXTSYNC3 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Cmp2OutToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm3Extsync3
 enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm3Extsync3

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm3Extsync3

enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Sm3Extsync3
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Sm3Extsync3
FlexPWM0_FAULT input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Fault
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Fault
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Fault
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Fault
enumerator kINPUTMUX_Cmp2OutToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Fault

enumerator kINPUTMUX__TrigIn5ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Fault
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Fault
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Fault
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Fault
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Fault
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Fault
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Fault
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Fault
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Fault
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Fault
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Fault
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Fault
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Fault
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Fault
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToFlexPwm0Fault
enumerator kINPUTMUX__Pwm1Sm3OutTrig1ToFlexPwm0Fault
FlexPWM0_FORCE input trigger connections.

enumerator kINPUTMUX__ArmTxeVToFlexPwm0Force
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm0Force
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm0Force
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm0Force
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm0Force
enumerator kINPUTMUX__Cmp0OutToFlexPwm0Force
enumerator kINPUTMUX__Cmp1OutToFlexPwm0Force
enumerator kINPUTMUX__Cmp2OutToFlexPwm0Force
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm0Force
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm0Force
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm0Force
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm0Force
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm0Force
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn0ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn1ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn2ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn3ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Force
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Force

enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Force
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Force
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Force
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Force
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Force
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Force
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Force
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Force
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Force
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Force
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Force
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Force
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToFlexPwm0Force

FlexPWM1_SM0_EXT_A0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm0ExtA0

enumerator kINPUTMUX__Ctimer0M2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn1ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn4ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm0Exta0
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm0Exta0

enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToFlexPwm1Sm0ExtA0

FlexPWM1_SM1_EXT_A1 input trigger connections.

enumerator kINPUTMUX__ArmTxevToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Cmp0OutToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Cmp1OutToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Cmp2OutToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm1Sm1ExtA1

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm1Ext1

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Sm1Ext1
FlexPWM1_SM2_EXT2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm2Ext2

enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToFlexPwm1Sm2Ext2
FlexPWM1_SM3_EXT2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm3Ext3
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm3Ext3

enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Sm3Exta3
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Sm3Exta3

FlexPWM1_SM0_EXTSYNC0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm0Extsync0

enumerator kINPUTMUX__Ctimer0M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn4ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm0Extsync0

enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Sm0Extsync0

FlexPWM1_SM1_EXTSYNC1 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm1Extsync1

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm1Extsync1

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Sm1Extsync1

FlexPWM1_SM2_EXTSYNC2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm2Extsync2

enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToFlexPwm1Sm2Extsync2
FlexPWM1_SM3_EXTSYNC3 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm3Extsync3

enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Sm3Extsync3
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Sm3Extsync3

FlexPWM1_FAULT input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Fault
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Fault
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Fault
enumerator kINPUTMUX_Cmp2OutToFlexPwm1Fault

enumerator kINPUTMUX__Ctimer0M2ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc0CmpFlag2ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc0CmpFlag3ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc0PosMatch0ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn0ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn1ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn2ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn3ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn4ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn5ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Fault
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Fault
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Fault
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Fault
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Fault
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Fault

enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Fault
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Fault
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToFlexPwm1Fault

FlexPWM1_FORCE input trigger connections.

enumerator kINPUTMUX__ArmTxevToFlexPwm1Force
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm1Force
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm1Force
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm1Force
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm1Force
enumerator kINPUTMUX__Cmp0OutToFlexPwm1Force
enumerator kINPUTMUX__Cmp1OutToFlexPwm1Force
enumerator kINPUTMUX__Cmp2OutToFlexPwm1Force
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm1Force
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm1Force
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm1Force
enumerator kINPUTMUX__Ctimer1M3ToFlexPwm1Force
enumerator kINPUTMUX__Ctimer2M2ToFlexPwm1Force
enumerator kINPUTMUX__Ctimer2M3ToFlexPwm1Force
enumerator kINPUTMUX__Qdc0CmpFlag0ToFlexPwm1Force
enumerator kINPUTMUX__Qdc0CmpFlag1ToFlexPwm1Force

enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Force
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Force

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm3OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm3OutTrig1ToFlexPwm1Force

PWM0 external clock trigger.

enumerator kINPUTMUX_Clk16K1ToPwm0ExtClk
enumerator kINPUTMUX_ClkInToPwm0ExtClk
enumerator kINPUTMUX_Aoi0Out0ToPwm0ExtClk
enumerator kINPUTMUX_Aoi0Out1ToPwm0ExtClk
enumerator kINPUTMUX_ExttrigIn0ToPwm0ExtClk
enumerator kINPUTMUX_ExttrigIn7ToPwm0ExtClk
enumerator kINPUTMUX_Aoi1Out0ToPwm0ExtClk
enumerator kINPUTMUX_Aoi1Out1ToPwm0ExtClk

PWM1 external clock trigger.

enumerator kINPUTMUX_Clk16K1ToPwm1ExtClk
enumerator kINPUTMUX_ClkInToPwm1ExtClk
enumerator kINPUTMUX_Aoi0Out0ToPwm1ExtClk
enumerator kINPUTMUX_Aoi0Out1ToPwm1ExtClk
enumerator kINPUTMUX_ExttrigIn0ToPwm1ExtClk
enumerator kINPUTMUX_ExttrigIn7ToPwm1ExtClk
enumerator kINPUTMUX_Aoi1Out0ToPwm1ExtClk
enumerator kINPUTMUX_Aoi1Out1ToPwm1ExtClk

AOI0 trigger input connections.

enumerator kINPUTMUX_Adc0Tcomp0ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp1ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp2ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp3ToAoi0Mux
enumerator kINPUTMUX_Cmp0OutToAoi0Mux
enumerator kINPUTMUX_Cmp1OutToAoi0Mux
enumerator kINPUTMUX_Cmp2OutToAoi0Mux

enumerator kINPUTMUX__Ctimer0M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer0M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer0M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer0M3ToAoi0Mux
enumerator kINPUTMUX__Ctimer1M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer1M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer1M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer1M3ToAoi0Mux
enumerator kINPUTMUX__Ctimer2M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer2M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer2M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer2M3ToAoi0Mux
enumerator kINPUTMUX__Lptmr0ToAoi0Mux
enumerator kINPUTMUX__Qdc0CmpFlag0ToAoi0Mux
enumerator kINPUTMUX__Qdc0CmpFlag1ToAoi0Mux
enumerator kINPUTMUX__Qdc0CmpFlag2ToAoi0Mux
enumerator kINPUTMUX__Qdc0CmpFlag3ToAoi0Mux
enumerator kINPUTMUX__Qdc0PosMatchToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToAoi0Mux
enumerator kINPUTMUX__TrigIn0ToAoi0Mux
enumerator kINPUTMUX__TrigIn1ToAoi0Mux
enumerator kINPUTMUX__TrigIn2ToAoi0Mux
enumerator kINPUTMUX__TrigIn3ToAoi0Mux
enumerator kINPUTMUX__TrigIn4ToAoi0Mux
enumerator kINPUTMUX__TrigIn5ToAoi0Mux
enumerator kINPUTMUX__TrigIn6ToAoi0Mux

enumerator kINPUTMUX__TrigIn7ToAoi0Mux
enumerator kINPUTMUX__TrigIn8ToAoi0Mux
enumerator kINPUTMUX__TrigIn9ToAoi0Mux
enumerator kINPUTMUX__TrigIn10ToAoi0Mux
enumerator kINPUTMUX__TrigIn11ToAoi0Mux
enumerator kINPUTMUX__Gpio0PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio1PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio2PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio3PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio4PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp0ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp1ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp2ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp3ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M3ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M3ToAoi0Mux
enumerator kINPUTMUX__FlexioCh0ToAoi0Mux
enumerator kINPUTMUX__FlexioCh1ToAoi0Mux
enumerator kINPUTMUX__FlexioCh2ToAoi0Mux
enumerator kINPUTMUX__FlexioCh3ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag0ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag1ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag2ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag3ToAoi0Mux
enumerator kINPUTMUX__Qdc1PosMatchToAoi0Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToAoi0Mux

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm0AOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm0BOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm1AOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm1BOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2AOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2BOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm3AOutToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm3BOutToAoi0Mux
enumerator kINPUTMUX_Adc2Tcomp0ToAoi0Mux
enumerator kINPUTMUX_Adc2Tcomp1ToAoi0Mux
enumerator kINPUTMUX_Adc2Tcomp2ToAoi0Mux
enumerator kINPUTMUX_Adc2Tcomp3ToAoi0Mux
enumerator kINPUTMUX_Adc3Tcomp0ToAoi0Mux
enumerator kINPUTMUX_Adc3Tcomp1ToAoi0Mux
enumerator kINPUTMUX_Adc3Tcomp2ToAoi0Mux
enumerator kINPUTMUX_Adc3Tcomp3ToAoi0Mux
AOI1 trigger input connections.
enumerator kINPUTMUX_Adc0Tcomp0ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp1ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp2ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp3ToAoi1Mux
enumerator kINPUTMUX_Cmp0OutToAoi1Mux
enumerator kINPUTMUX_Cmp1OutToAoi1Mux
enumerator kINPUTMUX_Cmp2OutToAoi1Mux
enumerator kINPUTMUX_Ctimer0M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer0M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer0M2ToAoi1Mux

enumerator kINPUTMUX__Ctimer0M3ToAoi1Mux
enumerator kINPUTMUX__Ctimer1M0ToAoi1Mux
enumerator kINPUTMUX__Ctimer1M1ToAoi1Mux
enumerator kINPUTMUX__Ctimer1M2ToAoi1Mux
enumerator kINPUTMUX__Ctimer1M3ToAoi1Mux
enumerator kINPUTMUX__Ctimer2M0ToAoi1Mux
enumerator kINPUTMUX__Ctimer2M1ToAoi1Mux
enumerator kINPUTMUX__Ctimer2M2ToAoi1Mux
enumerator kINPUTMUX__Ctimer2M3ToAoi1Mux
enumerator kINPUTMUX__Lptmr0ToAoi1Mux
enumerator kINPUTMUX__Qdc0CmpFlag0ToAoi1Mux
enumerator kINPUTMUX__Qdc0CmpFlag1ToAoi1Mux
enumerator kINPUTMUX__Qdc0CmpFlag2ToAoi1Mux
enumerator kINPUTMUX__Qdc0CmpFlag3ToAoi1Mux
enumerator kINPUTMUX__Qdc0PosMatchToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm0Sm3OutTrig1ToAoi1Mux
enumerator kINPUTMUX__TrigIn0ToAoi1Mux
enumerator kINPUTMUX__TrigIn1ToAoi1Mux
enumerator kINPUTMUX__TrigIn2ToAoi1Mux
enumerator kINPUTMUX__TrigIn3ToAoi1Mux
enumerator kINPUTMUX__TrigIn4ToAoi1Mux
enumerator kINPUTMUX__TrigIn5ToAoi1Mux
enumerator kINPUTMUX__TrigIn6ToAoi1Mux
enumerator kINPUTMUX__TrigIn7ToAoi1Mux
enumerator kINPUTMUX__TrigIn8ToAoi1Mux
enumerator kINPUTMUX__TrigIn9ToAoi1Mux

enumerator kINPUTMUX__TrigIn10ToAoi1Mux
enumerator kINPUTMUX__TrigIn11ToAoi1Mux
enumerator kINPUTMUX__Gpio0PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX__Gpio1PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX__Gpio2PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX__Gpio3PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX__Gpio4PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX__Adc1Tcomp0ToAoi1Mux
enumerator kINPUTMUX__Adc1Tcomp1ToAoi1Mux
enumerator kINPUTMUX__Adc1Tcomp2ToAoi1Mux
enumerator kINPUTMUX__Adc1Tcomp3ToAoi1Mux
enumerator kINPUTMUX__Ctimer3M0ToAoi1Mux
enumerator kINPUTMUX__Ctimer3M1ToAoi1Mux
enumerator kINPUTMUX__Ctimer3M2ToAoi1Mux
enumerator kINPUTMUX__Ctimer3M3ToAoi1Mux
enumerator kINPUTMUX__Ctimer4M0ToAoi1Mux
enumerator kINPUTMUX__Ctimer4M1ToAoi1Mux
enumerator kINPUTMUX__Ctimer4M2ToAoi1Mux
enumerator kINPUTMUX__Ctimer4M3ToAoi1Mux
enumerator kINPUTMUX__FlexioCh0ToAoi1Mux
enumerator kINPUTMUX__FlexioCh1ToAoi1Mux
enumerator kINPUTMUX__FlexioCh2ToAoi1Mux
enumerator kINPUTMUX__FlexioCh3ToAoi1Mux
enumerator kINPUTMUX__Qdc1CmpFlag0ToAoi1Mux
enumerator kINPUTMUX__Qdc1CmpFlag1ToAoi1Mux
enumerator kINPUTMUX__Qdc1CmpFlag2ToAoi1Mux
enumerator kINPUTMUX__Qdc1CmpFlag3ToAoi1Mux
enumerator kINPUTMUX__Qdc1PosMatchToAoi1Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToAoi1Mux
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToAoi1Mux
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToAoi1Mux
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToAoi1Mux

enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm3OutTrig0ToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm3OutTrig1ToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm0AOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm0BOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm1AOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm1BOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm2AOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm2BOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm3AOutToAoi1Mux
enumerator kINPUTMUX_Pwm1Sm3BOutToAoi1Mux
enumerator kINPUTMUX_Adc2Tcomp0ToAoi1Mux
enumerator kINPUTMUX_Adc2Tcomp1ToAoi1Mux
enumerator kINPUTMUX_Adc2Tcomp2ToAoi1Mux
enumerator kINPUTMUX_Adc2Tcomp3ToAoi1Mux
enumerator kINPUTMUX_Adc3Tcomp0ToAoi1Mux
enumerator kINPUTMUX_Adc3Tcomp1ToAoi1Mux
enumerator kINPUTMUX_Adc3Tcomp2ToAoi1Mux
enumerator kINPUTMUX_Adc3Tcomp3ToAoi1Mux

USB-FS trigger input connections.

enumerator kINPUTMUX_Lpuart0TrgTxdataToUsbfsTrigger
enumerator kINPUTMUX_Lpuart1TrgTxdataToUsbfsTrigger
enumerator kINPUTMUX_Lpuart2TrgTxdataToUsbfsTrigger
enumerator kINPUTMUX_Lpuart3TrgTxdataToUsbfsTrigger
enumerator kINPUTMUX_Lpuart4TrgTxdataToUsbfsTrigger
enumerator kINPUTMUX_Lpuart5TrgTxdataToUsbfsTrigger

EXT trigger connections.

enumerator kINPUTMUX_Aoi0Out0ToExtTrigger
enumerator kINPUTMUX_Aoi0Out1ToExtTrigger
enumerator kINPUTMUX_Aoi0Out2ToExtTrigger
enumerator kINPUTMUX_Aoi0Out3ToExtTrigger
enumerator kINPUTMUX_Cmp0OutToExtTrigger
enumerator kINPUTMUX_Cmp1OutToExtTrigger
enumerator kINPUTMUX_Cmp2OutToExtTrigger

enumerator kINPUTMUX_Lpuart0ToExtTrigger

enumerator kINPUTMUX_Lpuart1ToExtTrigger

enumerator kINPUTMUX_Lpuart2ToExtTrigger

enumerator kINPUTMUX_Lpuart3ToExtTrigger

enumerator kINPUTMUX_Lpuart4ToExtTrigger

enumerator kINPUTMUX_Aoi1Out0ToExtTrigger

enumerator kINPUTMUX_Aoi1Out1ToExtTrigger

enumerator kINPUTMUX_Aoi1Out2ToExtTrigger

enumerator kINPUTMUX_Aoi1Out3ToExtTrigger

enumerator kINPUTMUX_Lpuart5ToExtTrigger

enumerator kINPUTMUX_Rtc1HZClkToExtTrigger

LPI2C0 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpi2c0Trigger

enumerator kINPUTMUX_Aoi0Out1ToLpi2c0Trigger

enumerator kINPUTMUX_Aoi0Out2ToLpi2c0Trigger

enumerator kINPUTMUX_Aoi0Out3ToLpi2c0Trigger

enumerator kINPUTMUX_Cmp0OutToLpi2c0Trigger

enumerator kINPUTMUX_Cmp1OutToLpi2c0Trigger

enumerator kINPUTMUX_Cmp2OutToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer0M0ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer0M1ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer1M0ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer1M1ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer2M0ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer2M1ToLpi2c0Trigger

enumerator kINPUTMUX_Lptmr0ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn0ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn1ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn2ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn3ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn4ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn5ToLpi2c0Trigger

enumerator kINPUTMUX_TrigIn6ToLpi2c0Trigger

enumerator kINPUTMUX__TrigIn7ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__WuuToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpi2c0Trigger
enumerator kINPUTMUX__FlexioCh0ToLpi2c0Trigger
enumerator kINPUTMUX__FlexioCh1ToLpi2c0Trigger
enumerator kINPUTMUX__FlexioCh2ToLpi2c0Trigger
enumerator kINPUTMUX__FlexioCh3ToLpi2c0Trigger

LPI2C1 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpi2c1Trigger
enumerator kINPUTMUX__Cmp0OutToLpi2c1Trigger
enumerator kINPUTMUX__Cmp1OutToLpi2c1Trigger
enumerator kINPUTMUX__Cmp2OutToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer0M0ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer0M1ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer1M0ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer1M1ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer2M0ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer2M1ToLpi2c1Trigger

enumerator kINPUTMUX__Lptmr0ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn0ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn1ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn2ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn3ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn4ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn5ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn6ToLpi2c1Trigger
enumerator kINPUTMUX__TrigIn7ToLpi2c1Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpi2c1Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpi2c1Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpi2c1Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpi2c1Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpi2c1Trigger
enumerator kINPUTMUX__WuuToLpi2c1Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpi2c1Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpi2c1Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpi2c1Trigger
enumerator kINPUTMUX__FlexioCh0ToLpi2c1Trigger
enumerator kINPUTMUX__FlexioCh1ToLpi2c1Trigger
enumerator kINPUTMUX__FlexioCh2ToLpi2c1Trigger
enumerator kINPUTMUX__FlexioCh3ToLpi2c1Trigger

LPI2C2 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpi2c2Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpi2c2Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpi2c2Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpi2c2Trigger
enumerator kINPUTMUX__Cmp0OutToLpi2c2Trigger

enumerator kINPUTMUX_Cmp1OutToLpi2c2Trigger
enumerator kINPUTMUX_Cmp2OutToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer0M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer0M1ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer1M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer1M1ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer2M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer2M1ToLpi2c2Trigger
enumerator kINPUTMUX_Lptmr0ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn0ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn1ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn2ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn3ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn4ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn5ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn6ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn7ToLpi2c2Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpi2c2Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpi2c2Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpi2c2Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpi2c2Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpi2c2Trigger
enumerator kINPUTMUX_WuuToLpi2c2Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpi2c2Trigger
enumerator kINPUTMUX_FlexioCh0ToLpi2c2Trigger
enumerator kINPUTMUX_FlexioCh1ToLpi2c2Trigger

enumerator kINPUTMUX_FlexioCh2ToLpi2c2Trigger

enumerator kINPUTMUX_FlexioCh3ToLpi2c2Trigger

LPI2C3 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpi2c3Trigger

enumerator kINPUTMUX_Aoi0Out1ToLpi2c3Trigger

enumerator kINPUTMUX_Aoi0Out2ToLpi2c3Trigger

enumerator kINPUTMUX_Aoi0Out3ToLpi2c3Trigger

enumerator kINPUTMUX_Cmp0OutToLpi2c3Trigger

enumerator kINPUTMUX_Cmp1OutToLpi2c3Trigger

enumerator kINPUTMUX_Cmp2OutToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer0M0ToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer0M1ToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer1M0ToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer1M1ToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer2M0ToLpi2c3Trigger

enumerator kINPUTMUX_Ctimer2M1ToLpi2c3Trigger

enumerator kINPUTMUX_Lptmr0ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn0ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn1ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn2ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn3ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn4ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn5ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn6ToLpi2c3Trigger

enumerator kINPUTMUX_TrigIn7ToLpi2c3Trigger

enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpi2c3Trigger

enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpi2c3Trigger

enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpi2c3Trigger

enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpi2c3Trigger

enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpi2c3Trigger

enumerator kINPUTMUX_WuuToLpi2c3Trigger

enumerator kINPUTMUX_Aoi1Out0ToLpi2c3Trigger

enumerator kINPUTMUX_Aoi1Out1ToLpi2c3Trigger

enumerator kINPUTMUX__Aoi1Out2ToLpi2c3Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpi2c3Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpi2c3Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpi2c3Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpi2c3Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpi2c3Trigger
enumerator kINPUTMUX__FlexioCh0ToLpi2c3Trigger
enumerator kINPUTMUX__FlexioCh1ToLpi2c3Trigger
enumerator kINPUTMUX__FlexioCh2ToLpi2c3Trigger
enumerator kINPUTMUX__FlexioCh3ToLpi2c3Trigger
LPSPiO trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpspi0Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpspi0Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpspi0Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpspi0Trigger
enumerator kINPUTMUX__Cmp0OutToLpspi0Trigger
enumerator kINPUTMUX__Cmp1OutToLpspi0Trigger
enumerator kINPUTMUX__Cmp2OutToLpspi0Trigger
enumerator kINPUTMUX__Ctimer0M1ToLpspi0Trigger
enumerator kINPUTMUX__Ctimer0M2ToLpspi0Trigger
enumerator kINPUTMUX__Ctimer1M1ToLpspi0Trigger
enumerator kINPUTMUX__Ctimer1M2ToLpspi0Trigger
enumerator kINPUTMUX__Ctimer2M1ToLpspi0Trigger
enumerator kINPUTMUX__Ctimer2M2ToLpspi0Trigger
enumerator kINPUTMUX__Lptmr0ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn0ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn1ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn2ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn3ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn4ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn5ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn6ToLpspi0Trigger
enumerator kINPUTMUX__TrigIn7ToLpspi0Trigger

enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_WuuToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh0ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh1ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh2ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh3ToLpspi0Trigger

LPSPi1 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpspi1Trigger
enumerator kINPUTMUX_Cmp0OutToLpspi1Trigger
enumerator kINPUTMUX_Cmp1OutToLpspi1Trigger
enumerator kINPUTMUX_Cmp2OutToLpspi1Trigger
enumerator kINPUTMUX_Ctimer0M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer1M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer2M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpspi1Trigger
enumerator kINPUTMUX_Lptmr0ToLpspi1Trigger

enumerator kINPUTMUX__TrigIn0ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn1ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn2ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn3ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn4ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn5ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn6ToLpspi1Trigger
enumerator kINPUTMUX__TrigIn7ToLpspi1Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX__WuuToLpspi1Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpspi1Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpspi1Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpspi1Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpspi1Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpspi1Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpspi1Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpspi1Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpspi1Trigger
enumerator kINPUTMUX__FlexioCh0ToLpspi1Trigger
enumerator kINPUTMUX__FlexioCh1ToLpspi1Trigger
enumerator kINPUTMUX__FlexioCh2ToLpspi1Trigger
enumerator kINPUTMUX__FlexioCh3ToLpspi1Trigger
LPUART0 trigger input connections.
enumerator kINPUTMUX__Aoi0Out0ToLpuart0Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpuart0Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpuart0Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpuart0Trigger
enumerator kINPUTMUX__Cmp0OutToLpuart0Trigger
enumerator kINPUTMUX__Cmp1OutToLpuart0Trigger

enumerator kINPUTMUX_Cmp2OutToLpuart0Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer0M3ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer1M3ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer2M3ToLpuart0Trigger
enumerator kINPUTMUX_Lptmr0ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn0ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn1ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn2ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn3ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn4ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn5ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn6ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn7ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn8ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn9ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn10ToLpuart0Trigger
enumerator kINPUTMUX_TrigIn11ToLpuart0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart0Trigger
enumerator kINPUTMUX_WuuToLpuart0Trigger
enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart0Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpuart0Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpuart0Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpuart0Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer4M2ToLpuart0Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpuart0Trigger
enumerator kINPUTMUX_FlexioCh0ToLpuart0Trigger
enumerator kINPUTMUX_FlexioCh1ToLpuart0Trigger
enumerator kINPUTMUX_FlexioCh2ToLpuart0Trigger
enumerator kINPUTMUX_FlexioCh3ToLpuart0Trigger
LPUART1 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpuart1Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpuart1Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpuart1Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpuart1Trigger
enumerator kINPUTMUX_Cmp0OutToLpuart1Trigger
enumerator kINPUTMUX_Cmp1OutToLpuart1Trigger
enumerator kINPUTMUX_Cmp2OutToLpuart1Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer0M3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer1M3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer2M3ToLpuart1Trigger
enumerator kINPUTMUX_Lptmr0ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn0ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn1ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn2ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn3ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn4ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn5ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn6ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn7ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn8ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn9ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn10ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn11ToLpuart1Trigger

enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_WuuToLpuart1Trigger
enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh0ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh1ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh2ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh3ToLpuart1Trigger

LPUART2 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpuart2Trigger
enumerator kINPUTMUX_Cmp0OutToLpuart2Trigger
enumerator kINPUTMUX_Cmp1OutToLpuart2Trigger
enumerator kINPUTMUX_Cmp2OutToLpuart2Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer0M3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer1M3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer2M3ToLpuart2Trigger

enumerator kINPUTMUX__Lptmr0ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn0ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn1ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn2ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn3ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn4ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn5ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn6ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn7ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn8ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn9ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn10ToLpuart2Trigger
enumerator kINPUTMUX__TrigIn11ToLpuart2Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX__WuuToLpuart2Trigger
enumerator kINPUTMUX__Usb0IppIndUartRxdUsbmuxToLpuart2Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpuart2Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpuart2Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpuart2Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpuart2Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpuart2Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpuart2Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpuart2Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpuart2Trigger
enumerator kINPUTMUX__FlexioCh0ToLpuart2Trigger
enumerator kINPUTMUX__FlexioCh1ToLpuart2Trigger
enumerator kINPUTMUX__FlexioCh2ToLpuart2Trigger
enumerator kINPUTMUX__FlexioCh3ToLpuart2Trigger
LPUART3 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpuart3Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpuart3Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpuart3Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpuart3Trigger
enumerator kINPUTMUX__Cmp0OutToLpuart3Trigger
enumerator kINPUTMUX__Cmp1OutToLpuart3Trigger
enumerator kINPUTMUX__Cmp2OutToLpuart3Trigger
enumerator kINPUTMUX__Ctimer0M2ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer0M3ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer1M2ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer1M3ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer2M2ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer2M3ToLpuart3Trigger
enumerator kINPUTMUX__Lptmr0ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn0ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn1ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn2ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn3ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn4ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn5ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn6ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn7ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn8ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn9ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn10ToLpuart3Trigger
enumerator kINPUTMUX__TrigIn11ToLpuart3Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX__WuuToLpuart3Trigger
enumerator kINPUTMUX__Usb0IppIndUartRxdUsbmuxToLpuart3Trigger

enumerator kINPUTMUX__Aoi1Out0ToLpuart3Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpuart3Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpuart3Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpuart3Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpuart3Trigger
enumerator kINPUTMUX__FlexioCh0ToLpuart3Trigger
enumerator kINPUTMUX__FlexioCh1ToLpuart3Trigger
enumerator kINPUTMUX__FlexioCh2ToLpuart3Trigger
enumerator kINPUTMUX__FlexioCh3ToLpuart3Trigger
LPUART4 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpuart4Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpuart4Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpuart4Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpuart4Trigger
enumerator kINPUTMUX__Cmp0OutToLpuart4Trigger
enumerator kINPUTMUX__Cmp1OutToLpuart4Trigger
enumerator kINPUTMUX__Cmp2OutToLpuart4Trigger
enumerator kINPUTMUX__Ctimer0M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer0M3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer1M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer1M3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer2M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer2M3ToLpuart4Trigger
enumerator kINPUTMUX__Lptmr0ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn0ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn1ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn2ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn3ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn4ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn5ToLpuart4Trigger

enumerator kINPUTMUX__TrigIn6ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn7ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn8ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn9ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn10ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn11ToLpuart4Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__WuuToLpuart4Trigger
enumerator kINPUTMUX__Usb0IppIndUartRxdUsbmuxToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh0ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh1ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh2ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh3ToLpuart4Trigger

LPUART5 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpuart5Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpuart5Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpuart5Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpuart5Trigger
enumerator kINPUTMUX__Cmp0OutToLpuart5Trigger
enumerator kINPUTMUX__Cmp1OutToLpuart5Trigger
enumerator kINPUTMUX__Cmp2OutToLpuart5Trigger

enumerator kINPUTMUX__Ctimer0M2ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer0M3ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer1M2ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer1M3ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer2M2ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer2M3ToLpuart5Trigger
enumerator kINPUTMUX__Lptmr0ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn0ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn1ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn2ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn3ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn4ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn5ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn6ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn7ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn8ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn9ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn10ToLpuart5Trigger
enumerator kINPUTMUX__TrigIn11ToLpuart5Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpuart5Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpuart5Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpuart5Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpuart5Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpuart5Trigger
enumerator kINPUTMUX__WuuToLpuart5Trigger
enumerator kINPUTMUX__Usb0IppIndUartRxdUsbmuxToLpuart5Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpuart5Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpuart5Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpuart5Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpuart5Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpuart5Trigger

enumerator kINPUTMUX__Ctimer4M3ToLpuart5Trigger

enumerator kINPUTMUX__FlexioCh0ToLpuart5Trigger

enumerator kINPUTMUX__FlexioCh1ToLpuart5Trigger

enumerator kINPUTMUX__FlexioCh2ToLpuart5Trigger

enumerator kINPUTMUX__FlexioCh3ToLpuart5Trigger

Flexio trigger0 input connections.

enumerator kINPUTMUX__Aoi0Out0ToFlexioTrigger

enumerator kINPUTMUX__Aoi0Out1ToFlexioTrigger

enumerator kINPUTMUX__Aoi0Out2ToFlexioTrigger

enumerator kINPUTMUX__Aoi0Out3ToFlexioTrigger

enumerator kINPUTMUX__Adc0Tcomp0ToFlexioTrigger

enumerator kINPUTMUX__Adc0Tcomp1ToFlexioTrigger

enumerator kINPUTMUX__Adc0Tcomp2ToFlexioTrigger

enumerator kINPUTMUX__Adc0Tcomp3ToFlexioTrigger

enumerator kINPUTMUX__Cmp0OutToFlexioTrigger

enumerator kINPUTMUX__Cmp1OutToFlexioTrigger

enumerator kINPUTMUX__Cmp2OutToFlexioTrigger

enumerator kINPUTMUX__Ctimer0M1ToFlexioTrigger

enumerator kINPUTMUX__Ctimer0M2ToFlexioTrigger

enumerator kINPUTMUX__Ctimer1M1ToFlexioTrigger

enumerator kINPUTMUX__Ctimer1M2ToFlexioTrigger

enumerator kINPUTMUX__Ctimer2M1ToFlexioTrigger

enumerator kINPUTMUX__Ctimer2M2ToFlexioTrigger

enumerator kINPUTMUX__Lptmr0ToFlexioTrigger

enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexioTrigger

enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexioTrigger

enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexioTrigger

enumerator kINPUTMUX__Pwm0Sm3OutTrig0ToFlexioTrigger

enumerator kINPUTMUX__TrigIn0ToFlexioTrigger

enumerator kINPUTMUX__TrigIn1ToFlexioTrigger

enumerator kINPUTMUX__TrigIn2ToFlexioTrigger

enumerator kINPUTMUX__TrigIn3ToFlexioTrigger

enumerator kINPUTMUX__TrigIn4ToFlexioTrigger

enumerator kINPUTMUX__TrigIn5ToFlexioTrigger
enumerator kINPUTMUX__TrigIn6ToFlexioTrigger
enumerator kINPUTMUX__TrigIn7ToFlexioTrigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX__WuuToFlexioTrigger
enumerator kINPUTMUX__Pwm1A0Trig0ToFlexioTrigger
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c1MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c1SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpspi0EndOfFrameToFlexioTrigger
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpspi1EndOfFrameToFlexioTrigger
enumerator kINPUTMUX__Lpspi1ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart0ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart0TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart0ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX__Lpuart1ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart1TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart1ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX__Lpuart2ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart2TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart2ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX__Lpuart3ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart3TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart3ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX__Lpuart4ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart4TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX__Lpuart4ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX__Aoi1Out0ToFlexioTrigger

enumerator kINPUTMUX__Aoi1Out1ToFlexioTrigger
enumerator kINPUTMUX__Aoi1Out2ToFlexioTrigger
enumerator kINPUTMUX__Aoi1Out3ToFlexioTrigger
enumerator kINPUTMUX__Adc1Tcomp0ToFlexioTrigger
enumerator kINPUTMUX__Adc1Tcomp1ToFlexioTrigger
enumerator kINPUTMUX__Adc1Tcomp2ToFlexioTrigger
enumerator kINPUTMUX__Adc1Tcomp3ToFlexioTrigger
enumerator kINPUTMUX__Ctimer3M2ToFlexioTrigger
enumerator kINPUTMUX__Ctimer3M3ToFlexioTrigger
enumerator kINPUTMUX__Ctimer4M2ToFlexioTrigger
enumerator kINPUTMUX__Ctimer4M3ToFlexioTrigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexioTrigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexioTrigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexioTrigger
enumerator kINPUTMUX__Pwm1Sm3OutTrig0ToFlexioTrigger
enumerator kINPUTMUX__Lpi2c2MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c2SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c3MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX__Lpi2c3SlaveEndOfPacketToFlexioTrigger

SMARTDMA0 trigger input connections.

enumerator kINPUTMUX__GpioP0__16ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP0__17ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__8ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__9ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__10ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__11ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__12ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP1__13ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP2__0ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP2__1ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP2__2ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP2__3ToSmartdma0Trigger
enumerator kINPUTMUX__GpioP2__6ToSmartdma0Trigger

enumerator kINPUTMUX_GpioP3_8ToSmartdma0Trigger
enumerator kINPUTMUX_GpioP3_9ToSmartdma0Trigger
enumerator kINPUTMUX_GpioP3_10ToSmartdma0Trigger
enumerator kINPUTMUX_GpioP3_11ToSmartdma0Trigger
enumerator kINPUTMUX_GpioP3_12ToSmartdma0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrigToSmartdma0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrigToSmartdma0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrigToSmartdma0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrigToSmartdma0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrigToSmartdma0Trigger
enumerator kINPUTMUX_ArmTxevToSmartdma0Trigger
enumerator kINPUTMUX_Aoi0Out0ToSmartdma0Trigger
enumerator kINPUTMUX_Aoi1Out1ToSmartdma0Trigger
enumerator kINPUTMUX_DmaIrqToSmartdma0Trigger
enumerator kINPUTMUX_MauIrqToSmartdma0Trigger
enumerator kINPUTMUX_WuuIrqToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer0M2ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer0M3ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer1M2ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer1M3ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer2M2ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer2M3ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer3M2ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer3M3ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer4M2ToSmartdma0Trigger
enumerator kINPUTMUX_Ctimer4M3ToSmartdma0Trigger
enumerator kINPUTMUX_OstimerIrqToSmartdma0Trigger
enumerator kINPUTMUX_Pwm0IrqToSmartdma0Trigger
enumerator kINPUTMUX_Pwm1IrqToSmartdma0Trigger
enumerator kINPUTMUX_Qdc0IrqToSmartdma0Trigger
enumerator kINPUTMUX_Qdc1IrqToSmartdma0Trigger
enumerator kINPUTMUX_RtcAlarmIrqToSmartdma0Trigger
enumerator kINPUTMUX_Rtc1hzIrqToSmartdma0Trigger

```
enumerator kINPUTMUX__UtickIrqToSmartdma0Trigger
enumerator kINPUTMUX__WdtIrqToSmartdma0Trigger
enumerator kINPUTMUX__WakeupTimerIrqToSmartdma0Trigger
enumerator kINPUTMUX__Can0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Can1IrqToSmartdma0Trigger
enumerator kINPUTMUX__FlexioIrqToSmartdma0Trigger
enumerator kINPUTMUX__FlexioShifer0dmareqToSmartdma0Trigger
enumerator kINPUTMUX__FlexioShifer1dmareqToSmartdma0Trigger
enumerator kINPUTMUX__FlexioShifer2dmareqToSmartdma0Trigger
enumerator kINPUTMUX__FlexioShifer3dmareqToSmartdma0Trigger
enumerator kINPUTMUX__I3c0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpi2c0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpi2c1IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpspi0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpspi1IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpuart0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpuart1IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpuart2IrqToSmartdma0Trigger
enumerator kINPUTMUX__Lpuart3IrqToSmartdma0Trigger
enumerator kINPUTMUX__Usb0SofToSmartdma0Trigger
enumerator kINPUTMUX__Adc0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Adc1IrqToSmartdma0Trigger
enumerator kINPUTMUX__Adc2IrqToSmartdma0Trigger
enumerator kINPUTMUX__Adc3IrqToSmartdma0Trigger
enumerator kINPUTMUX__Cmp0IrqToSmartdma0Trigger
enumerator kINPUTMUX__Cmp1IrqToSmartdma0Trigger
enumerator kINPUTMUX__Cmp2IrqToSmartdma0Trigger
enumerator kINPUTMUX__Cmp0OutToSmartdma0Trigger
enumerator kINPUTMUX__Cmp1OutToSmartdma0Trigger
enumerator kINPUTMUX__Cmp2OutToSmartdma0Trigger
enumerator kINPUTMUX__Dac0IrqToSmartdma0Trigger
enumerator kINPUTMUX__SlcdIrqToSmartdma0Trigger

typedef enum _inputmux_index_t inputmux__index__t
```

`typedef enum _inputmux_connection_t inputmux_connection_t`
INPUTMUX connections type.

TIMER0CAPTSEL0

Periphinmux IDs.

TIMER0TRIGIN

TIMER1CAPTSEL0

TIMER1TRIGIN

TIMER2CAPTSEL0

TIMER2TRIGIN

SMARTDMA0_TRIG0_REG

FREQMEAS_REF_REG

FREQMEAS_TAR_REG

TIMER3CAPTSEL0

TIMER3TRIGIN

TIMER4CAPTSEL0

TIMER4TRIGIN

AOI1_MUX_REG

CMP0_TRIG_REG

ADC0_TRIG0_REG

ADC2_TRIG0_REG

ADC1_TRIG0_REG

ADC3_TRIG0_REG

DAC0_TRIG0_REG

QDC0_TRIG_REG

QDC0_HOME_REG

QDC0_INDEX_REG

QDC0_PHASEB_REG

QDC0_PHASEA_REG

QDC0_ICAP0_REG

QDC1_TRIG_REG

QDC1_HOME_REG

QDC1_INDEX_REG

QDC1_PHASEB_REG

QDC1_PHASEA_REG

QDC1_ICAP0_REG
FlexPWM0_SM0_EXT_A0_REG
FlexPWM0_SM0_EXTSYNC0_REG
FlexPWM0_SM1_EXT_A1_REG
FlexPWM0_SM1_EXTSYNC1_REG
FlexPWM0_SM2_EXT_A2_REG
FlexPWM0_SM2_EXTSYNC2_REG
FlexPWM0_SM3_EXT_A3_REG
FlexPWM0_SM3_EXTSYNC3_REG
FlexPWM0_FAULT_REG
FlexPWM0_FORCE_REG
FlexPWM1_SM0_EXT_A0_REG
FlexPWM1_SM0_EXTSYNC0_REG
FlexPWM1_SM1_EXT_A1_REG
FlexPWM1_SM1_EXTSYNC1_REG
FlexPWM1_SM2_EXT_A2_REG
FlexPWM1_SM2_EXTSYNC2_REG
FlexPWM1_SM3_EXT_A3_REG
FlexPWM1_SM3_EXTSYNC3_REG
FlexPWM1_FAULT_REG
FlexPWM1_FORCE_REG
PWM0_EXT_CLK_REG
PWM1_EXT_CLK_REG
AOI0_MUX_REG
USBFS_TRIG_REG
EXT_TRIG0_REG
CMP1_TRIG_REG
CMP2_TRIG_REG
LPI2C2_TRIG_REG
LPI2C3_TRIG_REG
LPI2C0_TRIG_REG
LPI2C1_TRIG_REG
LPSPi0_TRIG_REG

LPSP11_TRIG_REG

LPUART0_TRIG_REG

LPUART1_TRIG_REG

LPUART2_TRIG_REG

LPUART3_TRIG_REG

LPUART4_TRIG_REG

LPUART5_TRIG_REG

FLEXIO_TRIG0_REG

PMUX_SHIFT

FSL_INPUTMUX_DRIVER_VERSION

Group interrupt driver version for SDK.

void INPUTMUX_Init(void *base)

Initialize INPUTMUX peripheral.

This function enables the INPUTMUX clock.

Parameters

- base – Base address of the INPUTMUX peripheral.

Return values

None. –

void INPUTMUX_AttachSignal(void *base, uint32_t index, *inputmux_connection_t* connection)

Attaches a signal.

This function attaches multiplexed signals from INPUTMUX to target signals. For example, to attach GPIO PORT0 Pin 5 to PINT peripheral, do the following:

```
INPUTMUX_AttachSignal(INPUTMUX, 2, kINPUTMUX_GpioPort0Pin5ToPintsel);
```

In this example, INTMUX has 8 registers for PINT, PINT_SEL0~PINT_SEL7. With parameter index specified as 2, this function configures register PINT_SEL2.

Parameters

- base – Base address of the INPUTMUX peripheral.
- index – The serial number of destination register in the group of INPUTMUX registers with same name.
- connection – Applies signal from source signals collection to target signal.

Return values

None. –

void INPUTMUX_Deinit(void *base)

Deinitialize INPUTMUX peripheral.

This function disables the INPUTMUX clock.

Parameters

- base – Base address of the INPUTMUX peripheral.

Return values

None. –

2.23 Common Driver

FSL_COMMON_DRIVER_VERSION

common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE

No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_UART

Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(*a*, *b*)

Computes the minimum of *a* and *b*.

MAX(*a*, *b*)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(*addr*, *val*)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(*addr*, *val*)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(*addr*, *bits*)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(*addr*, *bits*)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic

Group number for generic status codes.

enumerator kStatusGroup_FLASH

Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI

Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI
Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI
Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART
Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C
Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C
Group number for LPI2C status codes.

enumerator kStatusGroup_UART
Group number for UART status codes.

enumerator kStatusGroup_I2C
Group number for UART status codes.

enumerator kStatusGroup_LPSCI
Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART
Group number for LPUART status codes.

enumerator kStatusGroup_SPI
Group number for SPI status code.

enumerator kStatusGroup_XRDC
Group number for XRDC status code.

enumerator kStatusGroup_SEMA42
Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator `kStatusGroup_FLEXCOMM_I2C`
Group number for FLEXCOMM I2C status codes

enumerator `kStatusGroup_I2S`
Group number for I2S status codes

enumerator `kStatusGroup_IUART`
Group number for IUART status codes

enumerator `kStatusGroup_CSI`
Group number for CSI status codes

enumerator `kStatusGroup_MIPIDSI`
Group number for MIPI DSI status codes

enumerator `kStatusGroup_SDRAMC`
Group number for SDRAMC status codes.

enumerator `kStatusGroup_POWER`
Group number for POWER status codes.

enumerator `kStatusGroup_ENET`
Group number for ENET status codes.

enumerator `kStatusGroup_PHY`
Group number for PHY status codes.

enumerator `kStatusGroup_TRGMUX`
Group number for TRGMUX status codes.

enumerator `kStatusGroup_SMARTCARD`
Group number for SMARTCARD status codes.

enumerator `kStatusGroup_LMEM`
Group number for LMEM status codes.

enumerator `kStatusGroup_QSPI`
Group number for QSPI status codes.

enumerator `kStatusGroup_DMA`
Group number for DMA status codes.

enumerator `kStatusGroup_EDMA`
Group number for EDMA status codes.

enumerator `kStatusGroup_DMAMGR`
Group number for DMAMGR status codes.

enumerator `kStatusGroup_FLEXCAN`
Group number for FlexCAN status codes.

enumerator `kStatusGroup_LTC`
Group number for LTC status codes.

enumerator `kStatusGroup_FLEXIO_CAMERA`
Group number for FLEXIO CAMERA status codes.

enumerator `kStatusGroup_LPC_SPI`
Group number for LPC_SPI status codes.

enumerator `kStatusGroup_LPC_USART`
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPi
Group number for ECSPi status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator kStatusGroup_OSA
Group number for OSA status codes.

enumerator kStatusGroup_COMMON_TASK
Group number for Common task status codes.

enumerator kStatusGroup_MSG
Group number for messaging status codes.

enumerator kStatusGroup_SDK_OCOTP
Group number for OCOTP status codes.

enumerator kStatusGroup_SDK_FLEXSPINOR
Group number for FLEXSPINOR status codes.

enumerator kStatusGroup_CODEC
Group number for codec status codes.

enumerator kStatusGroup_ASRC
Group number for codec status ASRC.

enumerator kStatusGroup_OTFAD
Group number for codec status codes.

enumerator `kStatusGroup_SDIO_SLV`
Group number for SDIO_SLV status codes.

enumerator `kStatusGroup_MECC`
Group number for MECC status codes.

enumerator `kStatusGroup_ENET_QOS`
Group number for ENET_QOS status codes.

enumerator `kStatusGroup_LOG`
Group number for LOG status codes.

enumerator `kStatusGroup_I3CBUS`
Group number for I3CBUS status codes.

enumerator `kStatusGroup_QSCI`
Group number for QSCI status codes.

enumerator `kStatusGroup_ELEMU`
Group number for ELEMU status codes.

enumerator `kStatusGroup_QUEUEDSPI`
Group number for QSPI status codes.

enumerator `kStatusGroup_POWER_MANAGER`
Group number for POWER_MANAGER status codes.

enumerator `kStatusGroup_IPED`
Group number for IPED status codes.

enumerator `kStatusGroup_ELS_PKC`
Group number for ELS PKC status codes.

enumerator `kStatusGroup_CSS_PKC`
Group number for CSS PKC status codes.

enumerator `kStatusGroup_HOSTIF`
Group number for HOSTIF status codes.

enumerator `kStatusGroup_CLIF`
Group number for CLIF status codes.

enumerator `kStatusGroup_BMA`
Group number for BMA status codes.

enumerator `kStatusGroup_NETC`
Group number for NETC status codes.

enumerator `kStatusGroup_ELE`
Group number for ELE status codes.

enumerator `kStatusGroup_GLIKEY`
Group number for GLIKEY status codes.

enumerator `kStatusGroup_AON_POWER`
Group number for AON_POWER status codes.

enumerator `kStatusGroup_AON_COMMON`
Group number for AON_COMMON status codes.

enumerator `kStatusGroup_ENDAT3`
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout
Generic status for timeout.

enumerator kStatus_NoTransferInProgress
Generic status for no transfer in progress.

enumerator kStatus_Busy
Generic status for module is busy.

enumerator kStatus_NoData
Generic status for no data is found for the operation.

typedef int32_t status_t
Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)
Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

`void SDK_Free(void *ptr)`

Free memory.

Parameters

- `ptr` – The memory to be release.

`void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)`

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- `delayTime_us` – Delay time in unit of microsecond.
- `coreClock_Hz` – Core clock frequency with Hz.

`static inline status_t EnableIRQ(IRQn_Type interrupt)`

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt enabled successfully
- `kStatus_Fail` – Failed to enable the interrupt

`static inline status_t DisableIRQ(IRQn_Type interrupt)`

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt disabled successfully
- `kStatus_Fail` – Failed to disable the interrupt

`static inline status_t EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)`

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management

mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t __SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused	Major Version		Minor Version		Bug Fix		
31	25	24	17	16	9	8	0

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.24 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum _lpadc_status_flags

Define hardware flags of the module.

Values:

enumerator kLPADC_ResultFIFO0OverflowFlag

Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator kLPADC_ResultFIFO0ReadyFlag

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator kLPADC_TriggerExceptionFlag

Indicates that a trigger exception event has occurred.

enumerator kLPADC_TriggerCompletionFlag

Indicates that a trigger completion event has occurred.

enumerator kLPADC_CalibrationReadyFlag

Indicates that the calibration process is done.

enumerator kLPADC_ActiveFlag

Indicates that the ADC is in active state.

enumerator kLPADC_ResultFIFOOverflowFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowFlag as instead.

enumerator kLPADC_ResultFIFOReadyFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0ReadyFlag as instead.

enum _lpadc_interrupt_enable

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_ResultFIFO0OverflowInterruptEnable

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator kLPADC_FIFO0WatermarkInterruptEnable

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator kLPADC_ResultFIFOOverflowInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowInterruptEnable as instead.

enumerator kLPADC_FIFOWatermarkInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_FIFO0WatermarkInterruptEnable as instead.

enumerator kLPADC_TriggerExceptionInterruptEnable

Configures ADC to generate trigger exception interrupt.

enumerator kLPADC_Trigger0CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags

The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag
Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag
Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag
Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag
Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag
Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag
Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag
Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag

Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag

Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag

Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag

Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag

Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag

Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag

Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag

Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag

Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag

Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag

Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag

Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag

Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag

Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag

Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag

Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag

Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag

Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag

Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag

Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag

Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag

Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag

Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum __lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale

Use divided input voltage signal. (For scale select, please refer to the reference manual).

enumerator kLPADC_SampleFullScale

Full scale (Factor of 1).

enum __lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum __lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC__HardwareAverageCount1

Single conversion.

enumerator kLPADC__HardwareAverageCount2

2 conversions averaged.

enumerator kLPADC__HardwareAverageCount4

4 conversions averaged.

enumerator kLPADC__HardwareAverageCount8

8 conversions averaged.

enumerator kLPADC__HardwareAverageCount16

16 conversions averaged.

enumerator kLPADC__HardwareAverageCount32

32 conversions averaged.

enumerator kLPADC__HardwareAverageCount64

64 conversions averaged.

enumerator kLPADC__HardwareAverageCount128

128 conversions averaged.

enum _lpadc_sample_time_mode

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC__SampleTimeADCK3

3 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK5

5 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK7

7 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK11

11 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK19

19 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK35

35 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK67

69 ADCK cycles total sample time.

enumerator kLPADC__SampleTimeADCK131

131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC__HardwareCompareDisabled

Compare disabled.

enumerator kLPADC__HardwareCompareStoreOnTrue

Compare enabled. Store on true.

enumerator kLPADC__HardwareCompareRepeatUntilTrue

Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

Values:

enumerator kLPADC__ConversionResolutionStandard

Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC__ConversionResolutionHigh

High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC__ConversionAverage1

Single conversion.

enumerator kLPADC__ConversionAverage2

2 conversions averaged.

enumerator kLPADC__ConversionAverage4

4 conversions averaged.

enumerator kLPADC__ConversionAverage8

8 conversions averaged.

enumerator kLPADC__ConversionAverage16

16 conversions averaged.

enumerator kLPADC__ConversionAverage32

32 conversions averaged.

enumerator kLPADC_ConversionAverage64
64 conversions averaged.

enumerator kLPADC_ConversionAverage128
128 conversions averaged.

enum __lpadc_reference_voltage_mode
Define enumeration of reference voltage source.
For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1
Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2
Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3
Option 3 setting.

enum __lpadc_power_level_mode
Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1
Lowest power setting.

enumerator kLPADC_PowerLevelAlt2
Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3
...

enumerator kLPADC_PowerLevelAlt4
Highest power setting.

enum __lpadc_offset_calibration_mode
Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode
12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode
16 bit offset calibration mode.

enum __lpadc_trigger_priority_policy
Define enumeration of trigger priority policy.
This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

Values:

enumerator kLPADC_ConvPreemptImmediatelyNotAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kLPADC_ConvPreemptSoftlyNotAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoRestarted

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptSoftlyAutoRestarted

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator kLPADC_ConvPreemptSoftlyAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator kLPADC_TriggerPriorityPreemptImmediately

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityPreemptSoftly

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityExceptionDisabled

High priority trigger exception disabled.

enum _lpadc_tune_value

Define enumeration of tune value.

Values:

enumerator kLPADC_TuneValue0

Tune value 0.

enumerator kLPADC_TuneValue1

Tune value 1.

enumerator kLPADC_TuneValue2

Tune value 2.

enumerator kLPADC_TuneValue3

Tune value 3.

typedef enum *_lpadc_sample_scale_mode* lpadc_sample_scale_mode_t

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum *_lpadc_sample_channel_mode* lpadc_sample_channel_mode_t

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum *_lpadc_hardware_average_mode* lpadc_hardware_average_mode_t

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

typedef enum *_lpadc_sample_time_mode* lpadc_sample_time_mode_t

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum *_lpadc_hardware_compare_mode* lpadc_hardware_compare_mode_t

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum *_lpadc_conversion_resolution_mode* lpadc_conversion_resolution_mode_t

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

typedef enum *_lpadc_conversion_average_mode* lpadc_conversion_average_mode_t

Define enumeration of conversion averages mode.

Configure the converion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

`typedef enum _lpadc_reference_voltage_mode` `lpadc_reference_voltage_source_t`

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

`typedef enum _lpadc_power_level_mode` `lpadc_power_level_mode_t`

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

`typedef enum _lpadc_offset_calibration_mode` `lpadc_offset_calibration_mode_t`

Define enumeration of offset calibration mode.

`typedef enum _lpadc_trigger_priority_policy` `lpadc_trigger_priority_policy_t`

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

`typedef enum _lpadc_tune_value` `lpadc_tune_value_t`

Define enumeration of tune value.

`typedef struct _lpadc_calibration_value` `lpadc_calibration_value_t`

A structure of calibration value.

`LPADC_CONVERSION_COMPLETE_TIMEOUT`

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

`LPADC_CALIBRATION_READY_TIMEOUT`

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

`LPADC_GAIN_CAL_READY_TIMEOUT`

Max loops to wait for LPADC gain calibration GAIN_CAL ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

`ADC_OFSTRIM_OFSTRIM_MAX`

`ADC_OFSTRIM_OFSTRIM_SIGN`

`LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)`

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

`LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)`

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

`void LPADC_Init(ADC_Type *base, const lpadc_config_t *config)`

Initializes the LPADC module.

Parameters

- `base` – LPADC peripheral base address.
- `config` – Pointer to configuration structure. See “*lpadc_config_t*”.

`void LPADC_GetDefaultConfig(lpadc_config_t *config)`

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode      = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay          = 0x80;
config->referenceVoltageSource = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode        = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy  = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause       = false;
config->convPauseDelay        = 0U;
config->FIFOWatermark         = 0U;
```

Parameters

- `config` – Pointer to configuration structure.

`void LPADC_Deinit(ADC_Type *base)`

De-initializes the LPADC module.

Parameters

- `base` – LPADC peripheral base address.

`static inline void LPADC_Enable(ADC_Type *base, bool enable)`

Switch on/off the LPADC module.

Parameters

- `base` – LPADC peripheral base address.
- `enable` – switcher to the module.

`static inline void LPADC_DoResetFIFO(ADC_Type *base)`

Do reset the conversion FIFO.

Parameters

- `base` – LPADC peripheral base address.

`static inline void LPADC_DoResetConfig(ADC_Type *base)`

Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- `base` – LPADC peripheral base address.

`static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)`

Get status flags.

Parameters

- `base` – LPADC peripheral base address.

Returns

status flags' mask. See to `_lpadc_status_flags`.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to `_lpadc_status_flags`.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)

Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)

Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

```
bool LPADC_GetConvResult(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO.

Parameters

- `base` – LPADC peripheral base address.
- `result` – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

```
void LPADC_GetConvResultBlocking(ADC_Type *base, lpadc_conv_result_t *result)
```

Get the result in conversion FIFO using blocking method.

Parameters

- `base` – LPADC peripheral base address.
- `result` – Pointer to structure variable that keeps the conversion result in conversion FIFO.

```
void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const  
                                lpadc_conv_trigger_config_t *config)
```

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- `base` – LPADC peripheral base address.
- `triggerId` – ID for each trigger. Typically, the available value range is from 0.
- `config` – Pointer to configuration structure. See to `lpadc_conv_trigger_config_t`.

```
void LPADC_GetDefaultConvTriggerConfig(lpadc_conv_trigger_config_t *config)
```

Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId    = 0U;  
config->delayPower         = 0U;  
config->priority           = 0U;  
config->channelAFIFOSelect = 0U;  
config->channelBFIFOSelect = 0U;  
config->enableHardwareTrigger = false;
```

Parameters

- `config` – Pointer to configuration structure.

```
static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)
```

Do software trigger to conversion command.

Parameters

- `base` – LPADC peripheral base address.
- `triggerIdMask` – Mask value for software trigger indexes, which count from zero.

```
void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const
                                lpadc_conv_command_config_t *config)
```

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to `lpadc_conv_command_config_t`.

```
void LPADC_GetDefaultConvCommandConfig(lpadc_conv_command_config_t *config)
```

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode      = kLPADC_SampleFullScale;
config->channelBScaleMode    = kLPADC_SampleFullScale;
config->sampleChannelMode    = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber        = 0U;
config->channelBNumber       = 0U;
config->chainedNextCommandNumber = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount            = 0U;
config->hardwareAverageMode    = kLPADC_HardwareAverageCount1;
config->sampleTimeMode        = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode    = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh = 0U;
config->hardwareCompareValueLow  = 0U;
config->conversionResolutionMode = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger       = false;
config->enableChannelB         = false;
```

Parameters

- config – Pointer to configuration structure.

```
void LPADC_EnableCalibration(ADC_Type *base, bool enable)
```

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

```
static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)
```

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

`status_t LPADC_DoAutoCalibration(ADC_Type *base)`

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including: -LPADC_EnableCalibration(...) -LPADC_LPADC_SetOffsetValue(...) -LPADC_SetConvCommandConfig(...) -LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

`static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)`

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

`static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)`

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

`static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)`

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

`static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)`

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.

- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t .

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, *lpadc_calibration_value_t* *ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure, this memory block should be always powered on even in low power modes.

status_t LPADC_SetCalibrationValue(ADC_Type *base, const *lpadc_calibration_value_t* *ptrCalibrationValue)

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

```
static inline void LPADC_RequestHighSpeedModeTrim(ADC_Type *base)
```

Request high speed mode trim calculation.

Parameters

- base – LPADC peripheral base address.

```
static inline int8_t LPADC_GetHighSpeedTrimValue(ADC_Type *base)
```

Get high speed mode trim value, the result is a 5-bit signed value between -16 and 15.

Note: The high speed mode trim value is used to minimize offset for high speed conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The calculated high speed mode trim value.

```
static inline void LPADC_SetHighSpeedTrimValue(ADC_Type *base, int8_t trimValue)
```

Set high speed mode trim value.

Note: If is possible to set the trim value manually, but it is recommended to use the LPADC_RequestHighSpeedModeTrim.

Parameters

- base – LPADC peripheral base address.
- trimValue – The trim value to be set.

```
static inline void LPADC_EnableHighSpeedConversionMode(ADC_Type *base, bool enable)
```

Enable/disable high speed conversion mode, if enabled conversions complete 2 or 3 ADCK cycles sooner compared to conversion cycle counts when high speed mode is disabled.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable high speed conversion mode:
 - **true** Enable high speed conversion mode;
 - **false** Disable high speed conversion mode.

```
static inline void LPADC_EnableExtraCycle(ADC_Type *base, bool enable)
```

Enable/disable an additional ADCK cycle to conversion.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable an additional ADCK cycle to conversion:

- **true** Enable an additional ADCK cycle to conversion;
- **false** Disable an additional ADCK cycle to conversion.

static inline void LPADC_SetTuneValue(ADC_Type *base, *lpadc_tune_value_t* tuneValue)

Set tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.
- tuneValue – The tune value to be set, please refer to *lpadc_tune_value_t*.

static inline *lpadc_tune_value_t* LPADC_GetTuneValue(ADC_Type *base)

Get tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The tune value, please refer to *lpadc_tune_value_t*.

FSL_LPADC_DRIVER_VERSION

LPADC driver version 2.9.3.

struct *lpadc_config_t*

#include <fsl_lpadc.h> LPADC global configuration.

This structure would used to keep the settings for initialization.

Public Members

bool enableInternalClock

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

bool enableVref1LowVoltage

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

bool enableInDozeMode

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

lpadc_conversion_average_mode_t conversionAverageMode

Auto-Calibration Averages.

bool enableAnalogPreliminary

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

uint32_t powerUpDelay

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (powerUpDelay * 4) ADCK cycles must result in a longer delay than the analog startup time.

lpadc_reference_voltage_source_t referenceVoltageSource

Selects the voltage reference high used for conversions.

lpadc_power_level_mode_t powerLevelMode

Power Configuration Selection.

lpadc_trigger_priority_policy_t triggerPriorityPolicy

Control how higher priority triggers are handled, see to *lpadc_trigger_priority_policy_t*.

bool enableConvPause

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channel B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number, select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number, select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the “loopCount” field selects the number of times the selected channel is converted consecutively; when enabled, the “loopCount” field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is $2^{\text{delayPower}}$ ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. The software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct __lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.25 Lpc_freqme

void FREQME_Init(FREQME_Type *base, const *freq_measure_config_t* *config)

Initialize freqme module, set operate mode, operate mode attribute and initialize measurement cycle.

Parameters

- base – FREQME peripheral base address.
- config – The pointer to module basic configuration, please refer to *freq_measure_config_t*.

void FREQME_GetDefaultConfig(*freq_measure_config_t* *config)

Get default configuration.

```
config->operateMode = kFREQME_FreqMeasurementMode;
config->operateModeAttribute.refClkScaleFactor = 0U;
config->enableContinuousMode = false;
config->startMeasurement = false;
```

Parameters

- config – The pointer to module basic configuration, please refer to *freq_measure_config_t*.

static inline void FREQME_StartMeasurementCycle(FREQME_Type *base)

Start frequency or pulse width measurement process.

Parameters

- base – FREQME peripheral base address.

static inline void FREQME_TerminateMeasurementCycle(FREQME_Type *base)

Force the termination of any measurement cycle currently in progress and resets RESULT or just reset RESULT if the module in idle state.

Parameters

- base – FREQME peripheral base address.

static inline void FREQME_EnableContinuousMode(FREQME_Type *base, bool enable)

Enable/disable Continuous mode.

Parameters

- base – FREQME peripheral base address.
- enable – Used to enable/disable continuous mode,
 - **true** Enable Continuous mode.
 - **false** Disable Continuous mode.

```
static inline bool FREQME_CheckContinuousMode(FREQME_Type *base)
```

Check whether continuous mode is enabled.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Continuous mode is enabled, the measurement is performed continuously.
- False – Continuous mode is disabled.

```
static inline void FREQME_SetOperateMode(FREQME_Type *base, freqme_operate_mode_t  
                                         operateMode)
```

Set operate mode of freqme module.

Parameters

- base – FREQME peripheral base address.
- operateMode – The operate mode to be set, please refer to freqme_operate_mode_t.

```
static inline bool FREQME_CheckOperateMode(FREQME_Type *base)
```

Check module's operate mode.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Pulse width measurement mode.
- False – Frequency measurement mode.

```
static inline void FREQME_SetMinExpectedValue(FREQME_Type *base, uint32_t minValue)
```

Set the minimum expected value for the measurement result.

Parameters

- base – FREQME peripheral base address.
- minValue – The minimum value to set, please note that this value is 31 bits width.

```
static inline void FREQME_SetMaxExpectedValue(FREQME_Type *base, uint32_t maxValue)
```

Set the maximum expected value for the measurement result.

Parameters

- base – FREQME peripheral base address.
- maxValue – The maximum value to set, please note that this value is 31 bits width.

```
uint32_t FREQME_CalculateTargetClkFreq(FREQME_Type *base, uint32_t refClkFrequency)
```

Calculate the frequency of selected target clock

Note: The formula: $F_{\text{target}} = (\text{RESULT} - 2) * F_{\text{reference}} / 2^{\text{REF\_SCALE}}$.

Note: This function only useful when the operate mode is selected as frequency measurement mode.

Parameters

- base – FREQME peripheral base address.
- refClkFrequency – The frequency of reference clock.

Returns

The frequency of target clock the unit is Hz, if the output result is 0, please check the module's operate mode.

```
static inline uint8_t FREQME_GetReferenceClkScaleValue(FREQME_Type *base)
```

Get reference clock scaling factor.

Parameters

- base – FREQME peripheral base address.

Returns

Reference clock scaling factor, the reference count cycle is $2^{\text{ref\_scale}}$.

```
static inline void FREQME_SetPulsePolarity(FREQME_Type *base, freqme_pulse_polarity_t  
pulsePolarity)
```

Set pulse polarity when operate mode is selected as Pulse Width Measurement mode.

Parameters

- base – FREQME peripheral base address.
- pulsePolarity – The pulse polarity to be set, please refer to `freqme_pulse_polarity_t`.

```
static inline bool FREQME_CheckPulsePolarity(FREQME_Type *base)
```

Check pulse polarity when the operate mode is selected as pulse width measurement mode.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Low period.
- False – High period.

```
static inline uint32_t FREQME_GetMeasurementResult(FREQME_Type *base)
```

Get measurement result, if operate mode is selected as pulse width measurement mode this function can be used to calculate pulse width.

Note: Pulse width = counter result / Frequency of target clock.

Parameters

- base – FREQME peripheral base address.

Returns

Measurement result.

```
static inline uint32_t FREQME_GetInterruptStatusFlags(FREQME_Type *base)
```

Get interrupt status flags, such as overflow interrupt status flag, underflow interrupt status flag, and so on.

Parameters

- base – FREQME peripheral base address.

Returns

Current interrupt status flags, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_ClearInterruptStatusFlags(FREQME_Type *base, uint32_t
                                                    statusFlags)
```

Clear interrupt status flags.

Parameters

- `base` – FREQME peripheral base address.
- `statusFlags` – The combination of interrupt status flags to clear, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_EnableInterrupts(FREQME_Type *base, uint32_t masks)
```

Enable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- `base` – FREQME peripheral base address.
- `masks` – The mask of interrupts to enable, should be the OR'ed value of `_freqme_interrupt_enable`.

```
static inline void FREQME_DisableInterrupts(FREQME_Type *base, uint32_t masks)
```

Disable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- `base` – FREQME peripheral base address.
- `masks` – The mask of interrupts to disable, should be the OR'ed value of `_freqme_interrupt_enable`.

FSL_FREQME_DRIVER_VERSION

FREQME driver version 2.1.2.

```
enum _freqme_interrupt_status_flags
```

The enumeration of interrupt status flags. .

Values:

enumerator `kFREQME_UnderflowInterruptStatusFlag`

Indicate the measurement is just done and the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptStatusFlag`

Indicate the measurement is just done and the result is greater than maximum value.

enumerator `kFREQME_ReadyInterruptStatusFlag`

Indicate the measurement is just done and the result is ready to read.

enumerator `kFREQME_AllInterruptStatusFlags`

All interrupt status flags.

```
enum _freqme_interrupt_enable
```

The enumeration of interrupts, including underflow interrupt, overflow interrupt, and result ready interrupt. .

Values:

enumerator `kFREQME_UnderflowInterruptEnable`

Enable interrupt when the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptEnable`

Enable interrupt when the result is greater than maximum value.

enumerator kFREQME_ReadyInterruptEnable

Enable interrupt when a measurement completes and the result is ready.

enum _freqme_operate_mode

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

Values:

enumerator kFREQME_FreqMeasurementMode

The module works in the frequency measurement mode.

enumerator kFREQME_PulseWidthMeasurementMode

The module works in the pulse width measurement mode.

enum _freqme_pulse_polarity

The enumeration of pulse polarity.

Values:

enumerator kFREQME_PulseHighPeriod

Select high period of the reference clock.

enumerator kFREQME_PulseLowPeriod

Select low period of the reference clock.

typedef enum _freqme_operate_mode freqme_operate_mode_t

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

typedef enum _freqme_pulse_polarity freqme_pulse_polarity_t

The enumeration of pulse polarity.

typedef union _freqme_mode_attribute freqme_mode_attribute_t

The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

typedef struct _freq_measure_config freq_measure_config_t

The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

union _freqme_mode_attribute

#include <fsl_freqme.h> The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

Public Members

uint8_t refClkScaleFactor

Only useful in frequency measurement operate mode, used to set the reference clock counter scaling factor.

freqme_pulse_polarity_t pulsePolarity

Only Useful in pulse width measurement operate mode, used to set period polarity.

`struct __freq_measure_config`

#include <fsl_freqme.h> The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

Public Members

freqme_operate_mode_t operateMode

Select operate mode, please refer to *freqme_operate_mode_t*.

freqme_mode_attribute_t operateModeAttribute

Used to set the attribute of the selected operate mode, if the operate mode is selected as *kFREQME_FreqMeasurementMode* set *freqme_mode_attribute_t::refClkScaleFactor*, if operate mode is selected as *kFREOME_PulseWidthMeasurementMode*, please set *freqme_mode_attribute_t::pulsePolarity*.

`bool` enableContinuousMode

Enable/disable continuous mode, if continuous mode is enable, the measurement is performed continuously and the result for the last completed measurement is available in the result register.

2.26 LPCMP: Low Power Analog Comparator Driver

`void LPCMP_Init(LPCMP_Type *base, const lpcmp_config_t *config)`

Initialize the LPCMP.

This function initializes the LPCMP module. The operations included are:

- Enabling the clock for LPCMP module.
- Configuring the comparator.
- Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

Parameters

- *base* – LPCMP peripheral base address.
- *config* – Pointer to “*lpcmp_config_t*” structure.

`void LPCMP_Deinit(LPCMP_Type *base)`

De-initializes the LPCMP module.

This function de-initializes the LPCMP module. The operations included are:

- Disabling the LPCMP module.
- Disabling the clock for LPCMP module.

This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

Parameters

- *base* – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)

Gets an available pre-defined settings for the comparator's configuration.

This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode      = false;
config->enableOutputPin     = false;
config->enableCmpToDacLink  = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput  = false;
config->hysteresisMode      = kLPCMP_HysteresisLevel0;
config->powerMode           = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
config->plusInputSrc        = kLPCMP_PlusInputSrcMux;
config->minusInputSrc       = kLPCMP_MinusInputSrcMux;
```

Parameters

- config – Pointer to “lpcmp_config_t” structure.

static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable the module, and “false” means disable the module.

void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t negativeChannel)

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled, the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable DMA support, and “false” means disable DMA support.

void LPCMP_SetFilterConfig(LPCMP_Type *base, const *lpcmp_filter_config_t* *config)

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_filter_config_t” structure.

void LPCMP_SetDACConfig(LPCMP_Type *base, const *lpcmp_dac_config_t* *config)

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_dac_config_t” structure. If config is “NULL”, disable internal DAC.

static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See “_lpcmp_status_flags”.

static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See “_lpcmp_status_flags”.

static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)

Enable/Disable window mode. When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable window mode, and “false” means disable window mode.

void LPCMP_SetWindowControl(LPCMP_Type *base, const *lpcmp_window_control_config_t* *config)

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event (only valid in windowing mode), and setting the COUTA signal after the window is closed (only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_window_control_config_t” structure.

```
void LPCMP_SetRoundRobinConfig(LPCMP_Type *base, const lpcmp_roundrobin_config_t
                               *config)
```

Configure the roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_roundrobin_config_t” structure.

```
static inline void LPCMP_EnableRoundRobinMode(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin mode, and “false” means disable roundrobin mode.

```
void LPCMP_SetRoundRobinInternalTimer(LPCMP_Type *base, uint32_t value)
```

brief Configure the roundrobin internal timer reload value.

param base LPCMP peripheral base address. param value RoundRobin internal timer reload value, allowed range:0x0UL-0xFFFFFFFFUL.

```
static inline void LPCMP_EnableRoundRobinInternalTimer(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin internal timer; note that this function is only valid when using the internal trigger source.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin internal timer, and “false” means disable roundrobin internal timer.

```
static inline void LPCMP_SetPreSetValue(LPCMP_Type *base, uint8_t mask)
```

Set preset value for all channels, users can set all channels’ preset value through this API, for example, if the mask set to 0x03U means channel0 and channel2’s preset value set to 1U and other channels’ preset value set to 0U.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

```
static inline uint8_t LPCMP_GetComparisonResult(LPCMP_Type *base)
```

Get comparison results for all channels, users can get all channels’ comparison results through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels’ comparison result.

```
static inline void LPCMP_ClearInputChangedFlags(LPCMP_Type *base, uint8_t mask)
```

Clear input changed flags for single channel or multiple channels, users can clear input changed flag of a single channel or multiple channels through this API, for example, if the mask set to 0x03U means clear channel0 and channel2’s input changed flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetInputChangedFlags(LPCMP_Type *base)

Get input changed flags for all channels, Users can get all channels' input changed flags through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' changed flag.

FSL_LPCMP_DRIVER_VERSION

LPCMP driver version 2.3.2.

enum __lpcmp_status_flags

LPCMP status falgs mask.

Values:

enumerator kLPCMP_OutputRisingEventFlag

Rising-edge on the comparison output has occurred.

enumerator kLPCMP_OutputFallingEventFlag

Falling-edge on the comparison output has occurred.

enumerator kLPCMP_OutputRoundRobinEventFlag

Detects when any channel's last comparison result is different from the pre-set value in trigger mode.

enumerator kLPCMP_OutputAssertEventFlag

Return the current value of the analog comparator output. The flag does not support W1C.

enum __lpcmp_interrupt_enable

LPCMP interrupt enable/disable mask.

Values:

enumerator kLPCMP_OutputRisingInterruptEnable

Comparator interrupt enable rising.

enumerator kLPCMP_OutputFallingInterruptEnable

Comparator interrupt enable falling.

enumerator kLPCMP_RoundRobinInterruptEnable

Comparator round robin mode interrupt occurred when the comparison result changes for a given channel.

enum __lpcmp_hysteresis_mode

LPCMP hysteresis mode. See chip data sheet to get the actual hystersis value with each level.

Values:

enumerator kLPCMP_HysteresisLevel0

The hard block output has level 0 hysteresis internally.

enumerator kLPCMP_HysteresisLevel1

The hard block output has level 1 hysteresis internally.

enumerator kLPCMP_HysteresisLevel2

The hard block output has level 2 hysteresis internally.

enumerator kLPCMP_HysteresisLevel3

The hard block output has level 3 hysteresis internally.

enum __lpcmp_power_mode

LPCMP nano mode.

Values:

enumerator kLPCMP_LowSpeedPowerMode

Low speed comparison mode is selected.

enumerator kLPCMP_HighSpeedPowerMode

High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode

Nano power comparator is enabled.

enum __lpcmp_dac_reference_voltage_source

Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1

vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2

vrefh_ext is selected as resistor ladder network supply reference Vin.

enum __lpcmp_functional_source_clock

LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

Values:

enumerator kLPCMP_FunctionalClockSource0

Select functional mode clock source0.

enumerator kLPCMP_FunctionalClockSource1

Select functional mode clock source1.

enumerator kLPCMP_FunctionalClockSource2

Select functional mode clock source2.

enumerator kLPCMP_FunctionalClockSource3

Select functional mode clock source3.

enum __lpcmp_couta_signal

Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet

NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow

Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh

Set COUTA signal high(1) when the window is closed.

enum `_lpcmp_close_window_event`

Set COUT event, which can close the active window in window mode.

Values:

enumerator `kLPCMP_CloseWindowEventNoSet`

No Set COUT event, which can close the active window in window mode.

enumerator `kLPCMP_CloseWindowEventRisingEdge`

Set rising edge COUT signal as COUT event.

enumerator `kLPCMP_CloseWindowEventFallingEdge`

Set falling edge COUT signal as COUT event.

enumerator `kLPCMP_CloseWindowEventBothEdge`

Set both rising and falling edge COUT signal as COUT event.

enum `_lpcmp_roundrobin_fixedmuxport`

LPCMP round robin mode fixed mux port.

Values:

enumerator `kLPCMP_FixedPlusMuxPort`

Fixed plus mux port.

enumerator `kLPCMP_FixedMinusMuxPort`

Fixed minus mux port.

enum `_lpcmp_roundrobin_clock_source`

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

Values:

enumerator `kLPCMP_RoundRobinClockSource0`

Select roundrobin mode clock source0.

enumerator `kLPCMP_RoundRobinClockSource1`

Select roundrobin mode clock source1.

enumerator `kLPCMP_RoundRobinClockSource2`

Select roundrobin mode clock source2.

enumerator `kLPCMP_RoundRobinClockSource3`

Select roundrobin mode clock source3.

enum `_lpcmp_roundrobin_trigger_source`

LPCMP round robin mode trigger source.

Values:

enumerator `kLPCMP_TriggerSourceExternally`

Select external trigger source.

enumerator `kLPCMP_TriggerSourceInternally`

Select internal trigger source.

typedef enum `_lpcmp_hysteresis_mode` `lpcmp_hysteresis_mode_t`

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

typedef enum `_lpcmp_power_mode` `lpcmp_power_mode_t`

LPCMP nano mode.

typedef enum *_lpcmp_dac_reference_voltage_source* lpcmp_dac_reference_voltage_source_t
Internal DAC reference voltage source.

typedef enum *_lpcmp_functional_source_clock* lpcmp_functional_source_clock_t
LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

typedef enum *_lpcmp_couta_signal* lpcmp_couta_signal_t
Set the COUTA signal value when the window is closed.

typedef enum *_lpcmp_close_window_event* lpcmp_close_window_event_t
Set COUT event, which can close the active window in window mode.

typedef enum *_lpcmp_roundrobin_fixedmuxport* lpcmp_roundrobin_fixedmuxport_t
LPCMP round robin mode fixed mux port.

typedef enum *_lpcmp_roundrobin_clock_source* lpcmp_roundrobin_clock_source_t
LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

typedef enum *_lpcmp_roundrobin_trigger_source* lpcmp_roundrobin_trigger_source_t
LPCMP round robin mode trigger source.

typedef struct *_lpcmp_filter_config* lpcmp_filter_config_t
Configure the filter.

typedef struct *_lpcmp_dac_config* lpcmp_dac_config_t
configure the internal DAC.

typedef struct *_lpcmp_config* lpcmp_config_t
Configures the comparator.

typedef struct *_lpcmp_window_control_config* lpcmp_window_control_config_t
Configure the window mode control.

typedef struct *_lpcmp_roundrobin_config* lpcmp_roundrobin_config_t
Configure the round robin mode.

LPCMP_CCR1_COUTA_CFG_MASK

LPCMP_CCR1_COUTA_CFG_SHIFT

LPCMP_CCR1_COUTA_CFG(x)

LPCMP_CCR1_EVT_SEL_CFG_MASK

LPCMP_CCR1_EVT_SEL_CFG_SHIFT

LPCMP_CCR1_EVT_SEL_CFG(x)

struct *_lpcmp_filter_config*
#include <fsl_lpcmp.h> Configure the filter.

Public Members

bool enableSample
Decide whether to use the external SAMPLE as a sampling clock input.

uint8_t filterSampleCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterSamplePeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

struct __lpcmp_dac_config

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

bool enableLowPowerMode

Decide whether to enable DAC low power mode.

lpcmp_dac_reference_voltage_source_t referenceVoltageSource

Internal DAC supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

struct __lpcmp_config

#include <fsl_lpcmp.h> Configures the comparator.

Public Members

bool enableStopMode

Decide whether to enable the comparator when in STOP modes.

bool enableOutputPin

Decide whether to enable the comparator is available in selected pin.

bool useUnfilteredOutput

Decide whether to use unfiltered output.

bool enableInvertOutput

Decide whether to inverts the comparator output.

lpcmp_hysteresis_mode_t hysteresisMode

LPCMP hysteresis mode.

lpcmp_power_mode_t powerMode

LPCMP power mode.

lpcmp_functional_source_clock_t functionalSourceClock

Select LPCMP functional mode clock source.

struct __lpcmp_window_control_config

#include <fsl_lpcmp.h> Configure the window mode control.

Public Members

bool enableInvertWindowSignal

True: enable invert window signal, False: disable invert window signal.

lpcmp_couta_signal_t COUTASignal

Decide whether to define the COUTA signal value when the window is closed.

lpcmp_close_window_event_t closeWindowEvent

Decide whether to select COUT event signal edge defines a COUT event to close window.

struct *_lpcmp_roundrobin_config*

#include <fsl_lpcmp.h> Configure the round robin mode.

Public Members

uint8_t initDelayModules

Comparator and DAC initialization delay modulus, See Reference Manual and DataSheet for specific value.

uint8_t sampleClockNumbers

Specify the number of the round robin clock cycles(0~3) to wait after scanning the active channel before sampling the channel's comparison result.

uint8_t channelSampleNumbers

Specify the number of samples for one channel, note that channelSampleNumbers must not smaller than sampleTimeThreshhold.

uint8_t sampleTimeThreshhold

Specify that for one channel, when (sampleTimeThreshhold + 1) sample results are "1",the final result is "1", otherwise the final result is "0", note that the sampleTimeThreshhold must not be larger than channelSampleNumbers.

lpcmp_roundrobin_clock_source_t roundrobinClockSource

Decide which clock source to choose in round robin mode.

lpcmp_roundrobin_trigger_source_t roundrobinTriggerSource

Decide which trigger source to choose in round robin mode.

lpcmp_roundrobin_fixedmuxport_t fixedMuxPort

Decide which mux port to choose as fixed channel in round robin mode.

uint8_t fixedChannel

Indicate which channel of the fixed mux port is used in round robin mode.

uint8_t checkerChannelMask

Indicate which channel of the non-fixed mux port to check its voltage value in round robin mode, for example, if checkerChannelMask set to 0x11U means select channel 0 and channel 4 as checker channel.

2.27 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy

The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle

The slave driver is idle.

enumerator kStatus_LPI2C_Nak

The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError

FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError

Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost

Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout

SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress

Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

I2C_RETRY_TIMES

Retry times for waiting flag.

2.28 LPI2C Master Driver

`void LPI2C_MasterGetDefaultConfig(lpi2c_master_config_t *masterConfig)`

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster      = true;
masterConfig->debugEnable       = false;
masterConfig->ignoreAck         = false;
masterConfig->pinConfig          = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busIdleTimeout_ns = 0;
masterConfig->pinLowTimeout_ns  = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable = false;
masterConfig->hostRequest.source  = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with `LPI2C_MasterInit()`.

Parameters

- `masterConfig` – **[out]** User provided configuration structure for default values. Refer to `lpi2c_master_config_t`.

`void LPI2C_MasterInit(LPI2C_Type *base, const lpi2c_master_config_t *masterConfig, uint32_t sourceClock_Hz)`

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `masterConfig` – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void LPI2C_MasterDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t *matchConfig)`

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)

Convert provided flags to status code, and clear any errors if present.

Parameters

- base – The LPI2C peripheral base address.
- status – Current status flags value that will be checked.

Return values

- kStatus_Success –
- kStatus_LPI2C_PinLowTimeout –
- kStatus_LPI2C_ArbitrationLost –
- kStatus_LPI2C_Nak –
- kStatus_LPI2C_FifoError –

status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- base – The LPI2C peripheral base address.

Return values

- kStatus_Success –
- kStatus_LPI2C_Busy –

static inline void LPI2C_MasterReset(LPI2C_Type *base)

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as master.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as master.

static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_master_flags`

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

Attempts to clear other flags has no effect.

See also:

`_lpi2c_master_flags`.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)
```

Enables or disables LPI2C master DMA requests.

Parameters

- `base` – The LPI2C peripheral base address.
- `enableTx` – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- `enableRx` – Enable flag for receive DMA request. Pass true for enable, false for disable.

```
static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

```
static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

```
static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)
```

Sets the watermarks for LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txWords` – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than `txWords`. Writing a value equal or greater than the FIFO size is truncated.
- `rxWords` – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than `rxWords`. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txCount` – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- `rxCount` – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t
                             baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.

```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,
                                                  lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- `base` – The LPI2C peripheral base address.
- `address` – 7-bit slave device address, in bits [6:0].
- `dir` – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_LPI2C_Nak`.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or over run.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.

- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterStop(LPI2C_Type *base)`

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, lpi2c_master_transfer_t *transfer)`

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, lpi2c_master_handle_t *handle, lpi2c_master_transfer_callback_t callback, void *userData)`

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *size_t* *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void LPI2C_MasterTransferAbort(LPI2C_Type *base, *lpi2c_master_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- lpi2cMasterHandle – Pointer to the LPI2C master driver handle.

enum _lpi2c_master_flags

LPI2C master peripheral flags.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_MasterTxReadyFlag

Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag

Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag

End Packet flag

enumerator kLPI2C_MasterStopDetectFlag

Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag

NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag

Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag

FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag

Data match flag

enumerator kLPI2C_MasterBusyFlag

Master busy flag

enumerator kLPI2C_MasterBusBusyFlag

Bus busy flag

enumerator kLPI2C_MasterClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags

Errors to check for.

enum _lpi2c_direction

Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write

Master transmit.

enumerator kLPI2C_Read

Master receive.

enum _lpi2c_master_pin_config

LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain

LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly

LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull

LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin

Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger

Select the input trigger as the host request input

enum _lpi2c_host_request_polarity

LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow

Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh

Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode

LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled

LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1

LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1

LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1

LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1

LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1

LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1

LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum _lpi2c_master_transfer_flags

Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator kLPI2C_TransferDefaultFlag

Transfer starts with a start signal, stops with a stop signal.

enumerator kLPI2C_TransferNoStartFlag

Don't send a start condition, address, and sub address

enumerator kLPI2C_TransferRepeatedStartFlag

Send a repeated start condition

enumerator kLPI2C_TransferNoStopFlag

Don't send a stop condition.


```
typedef enum _lpi2c_direction lpi2c_direction_t
```

Direction of master and slave transfers.

```
typedef enum _lpi2c_master_pin_config lpi2c_master_pin_config_t
```

LPI2C pin configuration.

```
typedef enum _lpi2c_host_request_source lpi2c_host_request_source_t
```

LPI2C master host request selection.

```
typedef enum _lpi2c_host_request_polarity lpi2c_host_request_polarity_t
```

LPI2C master host request pin polarity configuration.

```
typedef struct _lpi2c_master_config lpi2c_master_config_t
```

Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

```
typedef enum _lpi2c_data_match_config_mode lpi2c_data_match_config_mode_t
```

LPI2C master data match configuration modes.

```
typedef struct _lpi2c_match_config lpi2c_data_match_config_t
```

LPI2C master data match configuration structure.

```
typedef struct _lpi2c_master_transfer lpi2c_master_transfer_t
```

LPI2C master descriptor of the transfer.

```
typedef struct _lpi2c_master_handle lpi2c_master_handle_t
```

LPI2C master handle of the transfer.

```
typedef void (*lpi2c_master_transfer_callback_t)(LPI2C_Type *base, lpi2c_master_handle_t *handle, status_t completionStatus, void *userData)
```

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterTransferCreateHandle().

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableMaster

Whether to enable master mode.

bool enableDoze

Whether master is enabled in doze mode.

bool debugEnable

Enable transfers to continue when halted in debug mode.

bool ignoreAck

Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig

The pin configuration option.

uint32_t baudRate_Hz

Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns

Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns

Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest

Host request options.

struct *_lpi2c_match_config*

#include <fsl_lpi2c.h> LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer*

#include <fsl_lpi2c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration `_lpi2c_master_transfer_flags` for available options. Set to 0 or `kLPI2C_TransferDefaultFlag` for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either `kLPI2C_Read` or `kLPI2C_Write`.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct `_lpi2c_master_handle`

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: `Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]`

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct hostRequest

Public Members

`bool enable`

Enable host request.

`lpi2c_host_request_source_t source`

Host request source.

`lpi2c_host_request_polarity_t polarity`

Host request pin polarity.

2.29 LPI2C Master DMA Driver

```
void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
                                   edma_handle_t *rxDmaHandle, edma_handle_t
                                   *txDmaHandle, lpi2c_master_edma_transfer_callback_t
                                   callback, void *userData)
```

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbortEDMA()` API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – **[out]** Pointer to the LPI2C master driver handle.
- *rxDmaHandle* – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- *txDmaHandle* – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- *callback* – User provided pointer to the asynchronous callback function.
- *userData* – User provided pointer to the application callback data.

```
status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
                                   lpi2c_master_transfer_t *transfer)
```

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to the LPI2C master driver handle.
- *transfer* – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_LPI2C_Busy` – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

```
status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t
                                           *handle, size_t *count)
```

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

```
status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, lpi2c_master_edma_handle_t
                                         *handle)
```

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

```
typedef struct _lpi2c_master_edma_handle lpi2c_master_edma_handle_t
LPI2C master EDMA handle of the transfer.
```

```
typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base,
lpi2c_master_edma_handle_t *handle, status_t completionStatus, void *userData)
```

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base

The LPI2C peripheral base address.

Param handle

Handle associated with the completed transfer.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_master_edma_handle
    #include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base
LPI2C base pointer.

bool isBusy
Transfer state machine current state.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]
LPI2C command sequence. When all 10 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] + receive&Size[4 words]

lpi2c_master_transfer_t transfer
Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback
Callback function pointer.

void *userData
Application data passed to callback.

edma_handle_t *rx
Handle for receive DMA channel.

edma_handle_t *tx
Handle for transmit DMA channel.

edma_tcd_t tcds[3]
Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.30 LPI2C Slave Driver

```
void LPI2C_SlaveGetDefaultConfig(lpi2c_slave_config_t *slaveConfig)
```

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave      = true;
slaveConfig->address0         = 0U;
slaveConfig->address1         = 0U;
slaveConfig->addressMatchMode = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable = true;
slaveConfig->filterEnable     = true;
slaveConfig->enableGeneralCall = false;
slaveConfig->sclStall.enableAck = false;
slaveConfig->sclStall.enableTx  = true;
slaveConfig->sclStall.enableRx  = true;
```

(continues on next page)

(continued from previous page)

```

slaveConfig->sclStall.enableAddress    = true;
slaveConfig->ignoreAck                = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns   = 0;
slaveConfig->sclGlitchFilterWidth_ns   = 0;
slaveConfig->dataValidDelay_ns        = 0;
slaveConfig->clockHoldTime_ns         = 0;

```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- `slaveConfig` – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

```
void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t
                    sourceClock_Hz)
```

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- `base` – The LPI2C peripheral base address.
- `slaveConfig` – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

```
void LPI2C_SlaveDeinit(LPI2C_Type *base)
```

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveReset(LPI2C_Type *base)
```

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

```
static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_slave_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_slave_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

```
static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.


```
static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)
```

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

```
static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

```
static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)
```

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.
- ackOrNack – Pass true for an ACK or false for a NAK.

```
static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)
```

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- base – The LPI2C peripheral base address.
- enable – True will enable ACKSTALL, false will disable ACKSTALL.

static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)

Returns the slave address sent by the I2C master.

This function should only be called if the kLPI2C_SlaveAddressValidFlag is asserted.

Parameters

- base – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)

Performs a polling send transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- actualTxSize – **[out]**

Returns

Error or success status returned by API.

status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.
- actualRxSize – **[out]**

Returns

Error or success status returned by API.

void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle, lpi2c_slave_transfer_callback_t callback, void *userData)

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C slave driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

```
status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, lpi2c_slave_handle_t *handle,  
                                         uint32_t eventMask)
```

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *lpi2c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kLPI2C_SlaveTransmitEvent* and *kLPI2C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kLPI2C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.
- *eventMask* – Bit mask formed by OR'ing together *lpi2c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kLPI2C_SlaveAllEvents* to enable all events.

Return values

- *kStatus_Success* – Slave transfers were successfully started.
- *kStatus_LPI2C_Busy* – Slave transfers have already been started on this handle.

```
status_t LPI2C_SlaveTransferGetCount(LPI2C_Type *base, lpi2c_slave_handle_t *handle, size_t  
                                     *count)
```

Gets the slave transfer status during a non-blocking transfer.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *i2c_slave_handle_t* structure.
- *count* – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- *kStatus_Success* –
- *kStatus_NoTransferInProgress* –

```
void LPI2C_SlaveTransferAbort(LPI2C_Type *base, lpi2c_slave_handle_t *handle)
```

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- *base* – The LPI2C peripheral base address.

- `handle` – Pointer to `lpi2c_slave_handle_t` structure which stores the transfer state.

`void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, lpi2c_slave_handle_t *handle)`

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to `lpi2c_slave_handle_t` structure which stores the transfer state.

`enum _lpi2c_slave_flags`

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator `kLPI2C_SlaveTxReadyFlag`

Transmit data flag

enumerator `kLPI2C_SlaveRxReadyFlag`

Receive data flag

enumerator `kLPI2C_SlaveAddressValidFlag`

Address valid flag

enumerator `kLPI2C_SlaveTransmitAckFlag`

Transmit ACK flag

enumerator `kLPI2C_SlaveRepeatedStartDetectFlag`

Repeated start detect flag

enumerator `kLPI2C_SlaveStopDetectFlag`

Stop detect flag

enumerator `kLPI2C_SlaveBitErrFlag`

Bit error flag

enumerator `kLPI2C_SlaveFifoErrFlag`

FIFO error flag

enumerator `kLPI2C_SlaveAddressMatch0Flag`

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag

Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag

General call flag

enumerator kLPI2C_SlaveBusyFlag

Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag

Bus busy flag

enumerator kLPI2C_SlaveClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags

Errors to check for.

enum _lpi2c_slave_address_match

LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0

Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1

Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1

Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, *lpi2c_slave_transfer_t* *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

struct *_lpi2c_slave_config*

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

`bool enableSlave`
Enable slave mode.

`uint8_t address0`
Slave's 7-bit address.

`uint8_t address1`
Alternate slave 7-bit address.

`lpi2c_slave_address_match_t addressMatchMode`
Address matching options.

`bool filterDozeEnable`
Enable digital glitch filter in doze mode.

`bool filterEnable`
Enable digital glitch filter.

`bool enableGeneralCall`
Enable general call address matching.

`struct _lpi2c_slave_config sclStall`
SCL stall enable options.

`bool ignoreAck`
Continue transfers after a NACK is detected.

`bool enableReceivedAddressRead`
Enable reading the address received address as the first byte of data.

`uint32_t sdaGlitchFilterWidth_ns`
Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

`uint32_t sclGlitchFilterWidth_ns`
Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

`uint32_t dataValidDelay_ns`
Width in nanoseconds of the data valid delay.

`uint32_t clockHoldTime_ns`
Width in nanoseconds of the clock hold time.

`struct _lpi2c_slave_transfer`
#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

`lpi2c_slave_transfer_event_t event`
Reason the callback is being invoked.

`uint8_t receivedAddress`
Matching address send by master.

`uint8_t *data`
Transfer buffer

`size_t dataSize`
Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct *_lpi2c_slave_handle*

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.31 LPSPI: Low Power Serial Peripheral Interface

2.32 LPSPI Peripheral driver

```
void LPSPI_MasterInit(LPSPI_Type *base, const lpspi_master_config_t *masterConfig, uint32_t  
srcClock_Hz)
```

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure *lpspi_master_config_t*.
- srcClock_Hz – Module source input clock in Hertz

```
void LPSPI_MasterGetDefaultConfig(lpspi_master_config_t *masterConfig)
```

Sets the *lpspi_master_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;  
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to *lpspi_master_config_t* structure

```
void LPSPI_SlaveInit(LPSPI_Type *base, const lpspi_slave_config_t *slaveConfig)
```

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure *lpspi_slave_config_t*.

```
void LPSPI_SlaveGetDefaultConfig(lpspi_slave_config_t *slaveConfig)
```

Sets the *lpspi_slave_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;  
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to *lpspi_slave_config_t* structure.

```
void LPSPI_Deinit(LPSPI_Type *base)
```

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

```
void LPSPI_Reset(LPSPI_Type *base)
```

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag | kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)

static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

```
static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, lpspi_which_pcs_t select)
```

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.

- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinuous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.
- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

```
static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)
```

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPi in slave mode, although the command register does not update until after the LPSPi is enabled. After it is enabled, the transmit command register should only be changed if the LPSPi is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

```
uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t  
srcClock_Hz, uint32_t *tcrPrescaleValue)
```

Sets the LPSPi baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale `tcrPrescaleValue` parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPi module must first be disabled before configuring this. Note that the LPSPi module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.
- tcrPrescaleValue – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPi is not configured for master mode or if the LPSPi module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t
                               whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- `base` – LPSPI peripheral address.
- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result

in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- `base` – LPSPI peripheral address.
- `data` – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- `base` – LPSPI peripheral address.
- `dummyData` – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                     lpspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – LPSPI handle pointer to `lpspi_master_handle_t`.
- `callback` – DSPI callback.
- `userData` – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- `base` – LPSPI peripheral address.
- `transfer` – pointer to `lpspi_transfer_t` structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.
- transfer – pointer to *lpspi_transfer_t* structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *size_t* *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of status_t.

void LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.

void LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_master_handle_t* structure which stores the transfer state.

```
void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                   lpspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the LPSPI slave handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to *lpspi_slave_handle_t*.
- callback – DSPI callback.
- userData – callback function parameter.

```
status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                         lpspi_transfer_t *transfer)
```

LPSPI slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.
- transfer – pointer to *lpspi_transfer_t* structure.

Returns

status of *status_t*.

```
status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, lpspi_slave_handle_t *handle, size_t
                                     *count)
```

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of *status_t*.

```
void LPSPI_SlaveTransferAbort(LPSPI_Type *base, lpspi_slave_handle_t *handle)
```

LPSPI slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.

void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to *lpspi_slave_handle_t* structure which stores the transfer state.

bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)

Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

void LPSPI_DriverIRQHandler(uint32_t instance)

LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

FSL_LPSPI_DRIVER_VERSION

LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator kStatus_LPSPI_Busy

LPSPI transfer is busy.

enumerator kStatus_LPSPI_Error

LPSPI driver error.

enumerator kStatus_LPSPI_Idle

LPSPI is idle.

enumerator kStatus_LPSPI_OutOfRange

LPSPI transfer out Of range.

enumerator kStatus_LPSPI_Timeout

LPSPI timeout polling status flags.

enum *_lpspi_flags*

LPSPI status flags in SPIx_SR register.

Values:

enumerator kLPSPI_TxDataRequestFlag

Transmit data flag

enumerator kLPSPI_RxDataReadyFlag

Receive data flag

enumerator kLPSPI_WordCompleteFlag
Word Complete flag

enumerator kLPSPI_FrameCompleteFlag
Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag
Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag
Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag
Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag
Data Match flag

enumerator kLPSPI_ModuleBusyFlag
Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable

Receive data DMA enable

enum _lpspi_master_slave_mode

LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master

LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave

LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0

PCS[0]

enumerator kLPSPI_Pcs1

PCS[1]

enumerator kLPSPI_Pcs2

PCS[2]

enumerator kLPSPI_Pcs3

PCS[3]

enum _lpspi_pcs_polarity_config

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh

PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow

PCS Active Low (idles high)

enum _lpspi_pcs_polarity

LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow

Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow

Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow

Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow

Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow

Pcs0 to Pcs5 Active Low (idles high).

enum `_lpspi_clock_polarity`

LPSPI clock polarity configuration.

Values:

enumerator `kLPSPi_ClockPolarityActiveHigh`

CPOL=0. Active-high LPSPi clock (idles low)

enumerator `kLPSPi_ClockPolarityActiveLow`

CPOL=1. Active-low LPSPi clock (idles high)

enum `_lpspi_clock_phase`

LPSPi clock phase configuration.

Values:

enumerator `kLPSPi_ClockPhaseFirstEdge`

CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator `kLPSPi_ClockPhaseSecondEdge`

CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum `_lpspi_shift_direction`

LPSPi data shifter direction options.

Values:

enumerator `kLPSPi_MsbFirst`

Data transfers start with most significant bit.

enumerator `kLPSPi_LsbFirst`

Data transfers start with least significant bit.

enum `_lpspi_host_request_select`

LPSPi Host Request select configuration.

Values:

enumerator `kLPSPi_HostReqExtPin`

Host Request is an ext pin.

enumerator `kLPSPi_HostReqInternalTrigger`

Host Request is an internal trigger.

enum `_lpspi_match_config`

LPSPi Match configuration options.

Values:

enumerator `kLPSPi_MatchDisabled`

LPSPi Match Disabled.

enumerator `kLPSPi_1stWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_1stWordEqualsM0and2ndWordEqualsM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0andNxtWordEqualsM1`

LPSPi Match Enabled.

enumerator kLPSI_1stWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enumerator kLPSI_AnyWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enum _lpspi_pin_config
LPSPi pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPi SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPi SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPi SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPi SDO input, SDI output.

enum _lpspi_data_out_config
LPSPi data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width
LPSPi transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type
LPSPi delay type selection.

Values:

enumerator kLPSPI_PcsToSck
PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs
Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer
Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPi master transfer configFlags.

Values:

enumerator kLPSPi_MasterPcs0

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS0 signal

enumerator kLPSPi_MasterPcs1

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS1 signal

enumerator kLPSPi_MasterPcs2

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS2 signal

enumerator kLPSPi_MasterPcs3

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS3 signal

enumerator kLPSPi_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPi_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_MasterByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPi slave transfer configFlags.

Values:

enumerator kLPSPi_SlavePcs0

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS0 signal

enumerator kLPSPi_SlavePcs1

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS1 signal

enumerator kLPSPi_SlavePcs2

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS2 signal

enumerator kLPSPi_SlavePcs3

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS3 signal

enumerator kLPSPi_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.

enum `_lpspi_transfer_state`

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator `kLPSPi_Idle`

Nothing in the transmitter/receiver.

enumerator `kLPSPi_Busy`

Transfer queue is not finished.

enumerator `kLPSPi_Error`

Transfer error.

typedef enum `_lpspi_master_slave_mode` `lpspi_master_slave_mode_t`

LPSPI master or slave mode configuration.

typedef enum `_lpspi_which_pcs_config` `lpspi_which_pcs_t`

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum `_lpspi_pcs_polarity_config` `lpspi_pcs_polarity_config_t`

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum `_lpspi_clock_polarity` `lpspi_clock_polarity_t`

LPSPI clock polarity configuration.

typedef enum `_lpspi_clock_phase` `lpspi_clock_phase_t`

LPSPI clock phase configuration.

typedef enum `_lpspi_shift_direction` `lpspi_shift_direction_t`

LPSPI data shifter direction options.

typedef enum `_lpspi_host_request_select` `lpspi_host_request_select_t`

LPSPI Host Request select configuration.

typedef enum `_lpspi_match_config` `lpspi_match_config_t`

LPSPI Match configuration options.

typedef enum `_lpspi_pin_config` `lpspi_pin_config_t`

LPSPI pin (SDO and SDI) configuration.

typedef enum `_lpspi_data_out_config` `lpspi_data_out_config_t`

LPSPI data output configuration.

typedef enum `_lpspi_transfer_width` `lpspi_transfer_width_t`

LPSPI transfer width configuration.

typedef enum `_lpspi_delay_type` `lpspi_delay_type_t`

LPSPI delay type selection.

typedef struct `_lpspi_master_config` `lpspi_master_config_t`

LPSPI master configuration structure.

typedef struct `_lpspi_slave_config` `lpspi_slave_config_t`

LPSPI slave configuration structure.

typedef struct `_lpspi_master_handle` `lpspi_master_handle_t`

Forward declaration of the `_lpspi_master_handle` typedefs.

typedef struct `_lpspi_slave_handle` `lpspi_slave_handle_t`

Forward declaration of the `_lpspi_slave_handle` typedefs.

```
typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, lpspi_master_handle_t
*handle, status_t status, void *userData)
```

Master completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI master.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, lpspi_slave_handle_t *handle,
status_t status, void *userData)
```

Slave completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI slave.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef struct _lpspi_transfer lpspi_transfer_t
```

LPSPI master/slave transfer structure.

```
volatile uint8_t g_lpspiDummyData[]
```

Global variable for dummy data value setting.

```
LPSPI_DUMMY_DATA
```

LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
LPSPI_MASTER_PCS_SHIFT
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_MASTER_PCS_MASK
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_SHIFT
```

LPSPI slave PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_MASK
```

LPSPI slave PCS shift macro , internal used.

```
struct _lpspi_master_config
```

#include <fsl_lpspi.h> LPSPI master configuration structure.

Public Members

`uint32_t baudRate`

Baud Rate for LPSPI.

`uint32_t bitsPerFrame`

Bits per frame, minimum 8, maximum 4096.

`lpspi_clock_polarity_t cpol`

Clock polarity.

`lpspi_clock_phase_t cpha`

Clock phase.

`lpspi_shift_direction_t direction`

MSB or LSB data shift direction.

`uint32_t pcsToSckDelayInNanoSec`

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`uint32_t lastSckToPcsDelayInNanoSec`

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`uint32_t betweenTransferDelayInNanoSec`

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`lpspi_which_pcs_t whichPcs`

Desired Peripheral Chip Select (PCS).

`lpspi_pcs_polarity_config_t pcsActiveHighOrLow`

Desired PCS active high or low

`lpspi_pin_config_t pinCfg`

Configures which pins are used for input and output data during single bit transfers.

`lpspi_data_out_config_t dataOutConfig`

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

`bool enableInputDelay`

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

`struct __lpspi_slave_config`

`#include <fsl_lpspi.h>` LPSPI slave configuration structure.

Public Members

`uint32_t bitsPerFrame`

Bits per frame, minimum 8, maximum 4096.

`lpspi_clock_polarity_t cpol`

Clock polarity.

`lpspi_clock_phase_t cpha`

Clock phase.

`lpspi_shift_direction_t direction`

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct *_lpspi_transfer*

#include <fsl_lpspi.h> LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from *_lpspi_transfer_config_flag_for_master* if the transfer is used for master or *_lpspi_transfer_config_flag_for_slave* enumeration if the transfer is used for slave.

struct *_lpspi_master_handle*

#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool writeTcrInIsr

A flag that whether should write TCR in ISR.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile bool isTxMask

A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame

Number of bytes in each frame

volatile uint16_t frameSize

Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if the txData is NULL.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

`lpspi_master_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`struct _lpspi_slave_handle`
#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

`volatile bool isByteSwap`
A flag that whether should byte swap.

`volatile uint8_t fifoSize`
FIFO dataSize.

`volatile uint8_t rxWatermark`
Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

uint8_t *volatile rxData
Receive buffer.

volatile size_t txRemainingByteCount
Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
Read RDR register remaining times.

uint32_t totalByteCount
Number of transfer bytes

volatile uint8_t state
LPSPI transfer state , _lpspi_transfer_state.

volatile uint32_t errorCount
Error count for slave transfer.

lpspi_slave_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

2.33 LPSPI eDMA Driver

FSL_LPSPi_EDMA_DRIVER_VERSION

LPSPI EDMA driver version.

DMA_MAX_TRANSFER_COUNT

DMA max transfer size.

typedef struct *_lpspi_master_edma_handle* lpspi_master_edma_handle_t

Forward declaration of the *_lpspi_master_edma_handle* typedefs.

typedef struct *_lpspi_slave_edma_handle* lpspi_slave_edma_handle_t

Forward declaration of the *_lpspi_slave_edma_handle* typedefs.

typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_master_edma_handle_t *handle, *status_t* status, void *userData)

Completion callback function pointer type.

Param base

LPSPI peripheral base address.

Param handle

Pointer to the handle for the LPSPI master.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPi_Type *base,  
lpspi_slave_edma_handle_t *handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

LPSPi peripheral base address.

Param handle

Pointer to the handle for the LPSPi slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
void LPSPi_MasterTransferCreateHandleEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t  
*handle, lpspi_master_edma_transfer_callback_t  
callback, void *userData, edma_handle_t  
*edmaRxRegToRxDataHandle, edma_handle_t  
*edmaTxDataToTxRegHandle)
```

Initializes the LPSPi master eDMA handle.

This function initializes the LPSPi eDMA handle which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Note that the LPSPi eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPi peripheral base address.
- handle – LPSPi handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPi callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

```
status_t LPSPi_MasterTransferEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t *handle,  
lpspi_transfer_t *transfer)
```

LPSPi master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPi peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- configFlags – transfer configuration flags. `_lpspi_transfer_config_flag_for_master`.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

`status_t` LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure, config field is not used.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.
- `kStatus_InvalidArgument` – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

`void` LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *size_t* *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of *status_t*.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, *void* *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for `edmaRxRegToRxDataHandle` and Tx DMAMUX source for `edmaTxDataToTxRegHandle`. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for `edmaRxRegToRxDataHandle`.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to `lpspi_slave_edma_handle_t`.
- callback – LPSPI callback.
- userData – callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size

should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle)`
LPSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.

`status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle, size_t *count)`

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of `status_t`.

`struct _lpspi_master_edma_handle`

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

`volatile bool isPcsContinuous`

Is PCS continuous in transfer.

`volatile bool isByteSwap`

A flag that whether should byte swap.

`volatile uint8_t fifoSize`

FIFO dataSize.

`volatile uint8_t rxWatermark`

Rx watermark.

`volatile uint8_t bytesEachWrite`

Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`volatile uint8_t bytesLastRead`
Bytes for last read RDR.

`volatile bool isThereExtraRxBytes`
Is there extra RX byte.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`edma_tcd_t *lastTimeTCD`
Pointer to the lastTime TCD

`bool isMultiDMATransmit`
Is there multi DMA transmit

`volatile uint8_t dmaTransmitTime`
DMA Transfer times.

`uint32_t lastTimeDataBytes`
DMA transmit last Time data Bytes

`uint32_t dataBytesEveryTime`
Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

`edma_transfer_config_t transferConfigRx`
Config of DMA rx channel.

`edma_transfer_config_t transferConfigTx`
Config of DMA tx channel.

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`uint32_t transmitCommand`
Used to write TCR for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

```

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
    Completion callback.

void *userData
    Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
    edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
    edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
    SoftwareTCD, internal used

```

struct `_lpspi_slave_edma_handle`
#include <fsl_lpspi_edma.h> LPSPI slave eDMA transfer handle structure used for transactional API.

Public Members

```

volatile bool isByteSwap
    A flag that whether should byte swap.

volatile uint8_t fifoSize
    FIFO dataSize.

volatile uint8_t rxWatermark
    Rx watermark.

volatile uint8_t bytesEachWrite
    Bytes for each write TDR.

volatile uint8_t bytesEachRead
    Bytes for each read RDR.

volatile uint8_t bytesLastRead
    Bytes for last read RDR.

volatile bool isThereExtraRxBytes
    Is there extra RX byte.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData
    Send buffer.

uint8_t *volatile rxData
    Receive buffer.

volatile size_t txRemainingByteCount
    Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
    Number of bytes remaining to receive.

```

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state.

`uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_edma_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`edma_handle_t *edmaRxRegToRxDataHandle`
edma_handle_t handle point used for RxReg to RxData buff

`edma_handle_t *edmaTxDataToTxRegHandle`
edma_handle_t handle point used for TxData to TxReg

`edma_tcd_t lpspiSoftwareTCD[2]`
SoftwareTCD, internal used

2.34 LPTMR: Low-Power Timer

`void LPTMR_Init(LPTMR_Type *base, const lptmr_config_t *config)`
Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- `base` – LPTMR peripheral base address
- `config` – A pointer to the LPTMR configuration structure.

`void LPTMR_Deinit(LPTMR_Type *base)`
Gates the LPTMR clock.

Parameters

- `base` – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

```
static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
```

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the fsl_common.h to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

```
static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum __lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1
Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2
Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3
Pulse counter input 3 is selected

enum _lptmr_pin_polarity
LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh
Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow
Pulse Counter input source is active-low

enum _lptmr_timer_mode
LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter
Time Counter mode

enumerator kLPTMR_TimerModePulseCounter
Pulse Counter mode

enum _lptmr_prescaler_glitch_value
LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0
Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1
Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2
Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable
Timer interrupt enable

enum _lptmr_status_flags
List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag
Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t
LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t
LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t
LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t
LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

```
typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t
```

List of the LPTMR interrupts.

```
typedef enum _lptmr_status_flags lptmr_status_flags_t
```

List of the LPTMR status flags.

```
typedef struct _lptmr_config lptmr_config_t
```

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

```
static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)
```

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

```
struct _lptmr_config
```

#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.35 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.36 LPUART Driver

`static inline void LPUART_SoftwareReset(LPUART_Type *base)`

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- `base` – LPUART peripheral base address.

`status_t LPUART_Init(LPUART_Type *base, const lpuart_config_t *config, uint32_t srcClock_Hz)`

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the `LPUART_GetDefaultConfig()` function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `config` – Pointer to a user-defined configuration structure.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not support in current clock source.
- `kStatus_Success` – LPUART initialize succeed

`status_t LPUART_Deinit(LPUART_Type *base)`

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- `base` – LPUART peripheral base address.

Return values

- `kStatus_Success` – Deinit is success.
- `kStatus_LPUART_Timeout` – Timeout during deinit.

```
void LPUART_GetDefaultConfig(lpuart_config_t *config)
```

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: `lpuartConfig->baudRate_Bps = 115200U`; `lpuartConfig->parityMode = kLPUART_ParityDisabled`; `lpuartConfig->dataBitsCount = kLPUART_EightDataBits`; `lpuartConfig->isMsb = false`; `lpuartConfig->stopBitCount = kLPUART_OneStopBit`; `lpuartConfig->txFifoWatermark = 0`; `lpuartConfig->rxFifoWatermark = 1`; `lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit`; `lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1`; `lpuartConfig->enableTx = false`; `lpuartConfig->enableRx = false`;

Parameters

- `config` – Pointer to a configuration structure.

```
status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)
```

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the `LPUART_Init`.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `baudRate_Bps` – LPUART baudrate to be set.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not supported in the current clock source.
- `kStatus_Success` – Set baudrate succeeded.

```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

```
static inline void LPUART__EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)
```

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void LPUART__SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

```
static inline void LPUART__SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

```
static inline void LPUART__TransferEnable16Bit(lpuart_handle_t *handle, bool enable)
```

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in `lpuart_handle_t`.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

```
uint32_t LPUART__GetStatusFlags(LPUART_Type *base)
```

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators `_lpuart_flags`. To check for a specific status, compare the return value with enumerators in the `_lpuart_flags`. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART__GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the `_lpuart_flags`.

`status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)`

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

`void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)`

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This example shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)`

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);  
  
if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)  
{  
    ...  
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `STAT[TDRE]`, to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, `STAT[RDRF]`, to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART_GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

static inline uint8_t LPUART_ReadByte(LPUART_Type *base)

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

`void LPUART_SendAddress(LPUART_Type *base, uint8_t address)`

Transmit an address frame in 9-bit data mode.

Parameters

- `base` – LPUART peripheral base address.
- `address` – LPUART slave address.

`status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)`

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)`

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)`

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the RX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.

- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)`

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`void LPUART_TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_callback_t callback, void *userData)`

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t  
                                    *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

```
void LPUART_TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.

- *handle* – LPUART handle pointer.

`size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- *base* – LPUART peripheral base address.
- *handle* – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

`void LPUART_TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBytes to find out how many bytes are not sent out.

Parameters

- *base* – LPUART peripheral base address.
- *handle* – LPUART handle pointer.

`status_t LPUART_TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- *base* – LPUART peripheral base address.
- *handle* – LPUART handle pointer.
- *count* – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter *count*;

`status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_t *xfer, size_t *receivedBytes)`

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter *receivedBytes* shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to *xfer->data*, which returns with the parameter *receivedBytes* set to 5. For the remaining 5 bytes, the newly arrived data is saved from *xfer->data[5]*. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to *xfer->data*. When all data is received, the upper layer is notified.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see `uart_transfer_t`.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void LPUART_TransferAbortReceive(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

`status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)`

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

`void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)`

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

`void LPUART_DriverIRQHandler(uint32_t instance)`

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- `instance` – LPUART instance.

`FSL_LPUART_DRIVER_VERSION`

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator `kStatus_LPUART_TxBusy`

TX busy

enumerator `kStatus_LPUART_RxBusy`

RX busy

enumerator `kStatus_LPUART_TxIdle`

LPUART transmitter is idle.

enumerator `kStatus_LPUART_RxIdle`

LPUART receiver is idle.

enumerator `kStatus_LPUART_TxWatermarkTooLarge`

TX FIFO watermark too large

enumerator `kStatus_LPUART_RxWatermarkTooLarge`

RX FIFO watermark too large

enumerator `kStatus_LPUART_FlagCannotClearManually`

Some flag can't manually clear

enumerator `kStatus_LPUART_Error`

Error happens on LPUART.

enumerator `kStatus_LPUART_RxRingBufferOverrun`

LPUART RX software ring buffer overrun.

enumerator `kStatus_LPUART_RxHardwareOverrun`

LPUART RX receiver overrun.

enumerator `kStatus_LPUART_NoiseError`

LPUART noise error.

enumerator `kStatus_LPUART_FramingError`

LPUART framing error.

enumerator `kStatus_LPUART_ParityError`

LPUART parity error.

enumerator `kStatus_LPUART_BaudrateNotSupport`

Baudrate is not support in current clock source

enumerator `kStatus_LPUART_IdleLineDetected`

IDLE flag.

enumerator `kStatus_LPUART_Timeout`

LPUART times out.

enum `_lpuart_parity_mode`

LPUART parity mode.

Values:

enumerator `kLPUART_ParityDisabled`

Parity disabled

enumerator `kLPUART_ParityEven`

Parity enabled, type even, bit setting: PE|PT = 10

enumerator `kLPUART_ParityOdd`

Parity enabled, type odd, bit setting: PE|PT = 11

enum `_lpuart_data_bits`

LPUART data bits count.

Values:

enumerator `kLPUART_EightDataBits`

Eight data bit

enumerator `kLPUART_SevenDataBits`

Seven data bit

enum `_lpuart_stop_bit_count`

LPUART stop bit count.

Values:

enumerator `kLPUART_OneStopBit`

One stop bit

enumerator `kLPUART_TwoStopBit`

Two stop bits

enum `_lpuart_transmit_cts_source`

LPUART transmit CTS source.

Values:

enumerator `kLPUART_CtsSourcePin`

CTS resource is the LPUART_CTS pin.

enumerator `kLPUART_CtsSourceMatchResult`

CTS resource is the match result.

enum `_lpuart_transmit_cts_config`

LPUART transmit CTS configure.

Values:

enumerator `kLPUART_CtsSampleAtStart`

CTS input is sampled at the start of each character.

enumerator `kLPUART_CtsSampleAtIdle`

CTS input is sampled when the transmitter is idle

enum `_lpuart_idle_type_select`

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator `kLPUART_IdleTypeStartBit`

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum __lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128

the number of idle characters.

enum __lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable

Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable

Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable

Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable

Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable

Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable

Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable

Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable

Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable

Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t

LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t

LPUART transmit CTS configure.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t

LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct *_lpuart_config* lpuart_config_t

LPUART configuration structure.

typedef struct *_lpuart_transfer* lpuart_transfer_t

LPUART transfer structure.

typedef struct *_lpuart_handle* lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle, status_t status, void *userData)

LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *_s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES

Retry times for waiting flag.

struct __lpuart_config

#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps

LPUART baud rate

lpuart_parity_mode_t parityMode

Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount

Data bits count, eight (default), seven

bool isMsb

Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount

Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark

TX FIFO watermark

uint8_t rxFifoWatermark

RX FIFO watermark

bool enableRxRTS

RX RTS enable

bool enableTxCTS

TX CTS enable

lpuart_transmit_cts_source_t txCtsSource

TX CTS source

lpuart_transmit_cts_config_t txCtsConfig

TX CTS configure

lpuart_idle_type_select_t rxIdleType

RX IDLE type.

lpuart_idle_config_t rxIdleConfig

RX IDLE configuration.

bool enableTx

Enable TX

bool enableRx

Enable RX

struct __lpuart_transfer

#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct `_lpuart_handle`
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

`volatile size_t txDataSize`
Size of the remaining data to send.

`size_t txDataSizeAll`
Size of the data to send out.

`volatile size_t rxDataSize`
Size of the remaining data to receive.

`size_t rxDataSizeAll`
Size of the data to receive.

`size_t rxRingBufferSize`
Size of the ring buffer.

`volatile uint16_t rxRingBufferHead`
Index for the driver to store received data into ring buffer.

`volatile uint16_t rxRingBufferTail`
Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback
Callback function.

`void *userData`
LPUART callback function parameter.

`volatile uint8_t txState`
TX transfer state.

`volatile uint8_t rxState`
RX transfer state.

`bool isSevenDataBits`
Seven data bits flag.

`bool is16bitData`
16bit data bits flag, only used for 9bit or 10bit data

`union __unnamed62__`

Public Members

`uint8_t *data`
The buffer of data to be transfer.

`uint8_t *rxData`
The buffer to receive data.

`uint16_t *rxData16`
The buffer to receive data.

`const uint8_t *txData`
The buffer of data to be sent.

```
const uint16_t *txData16
    The buffer of data to be sent.
union __unnamed64__
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
const uint16_t *volatile txData16
    Address of remaining data to send.
union __unnamed66__
```

Public Members

```
uint8_t *volatile rxData
    Address of remaining data to receive.
uint16_t *volatile rxData16
    Address of remaining data to receive.
union __unnamed68__
```

Public Members

```
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
uint16_t *rxRingBuffer16
    Start address of the receiver ring buffer.
```

2.37 LPUART eDMA Driver

```
void LPUART_TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
    lpuart_edma_transfer_callback_t callback, void
    *userData, edma_handle_t *txEdmaHandle,
    edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.
- callback – Callback function.
- userData – User data.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

```
status_t LPUART_SendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,  
                          lpuart_transfer_t *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See `lpuart_transfer_t`.

Return values

- `kStatus_Success` – if succeed, others failed.
- `kStatus_LPUART_TxBusy` – Previous transfer on going.
- `kStatus_InvalidArgument` – Invalid argument.

```
status_t LPUART_ReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,  
                             lpuart_transfer_t *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.
- xfer – LPUART eDMA transfer structure, see `lpuart_transfer_t`.

Return values

- `kStatus_Success` – if succeed, others fail.
- `kStatus_LPUART_RxBusy` – Previous transfer ongoing.
- `kStatus_InvalidArgument` – Invalid argument.

```
void LPUART_TransferAbortSendEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)  
Aborts the sent data using eDMA.
```

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

```
void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle)  
Aborts the received data using eDMA.
```

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.

status_t LPUART__TransferGetSendCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART__TransferGetReceiveCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART__TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

FSL_LPUART_EDMA_DRIVER_VERSION

LPUART EDMA driver version.

typedef struct *lpuart_edma_handle* lpuart_edma_handle_t

typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *status_t* status, void *userData)

LPUART transfer callback function.

```
struct _lpuart_edma_handle
    #include <fsl_lpuart_edma.h> LPUART eDMA handle.
```

Public Members

```
lpuart_edma_transfer_callback_t callback
    Callback function.

void *userData
    LPUART callback function parameter.

size_t rxDataSizeAll
    Size of the data to receive.

size_t txDataSizeAll
    Size of the data to send out.

edma_handle_t *txEdmaHandle
    The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
    The eDMA RX channel used.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

volatile uint8_t txState
    TX transfer state.

volatile uint8_t rxState
    RX transfer state
```

2.38 MAU: Math Accelerator Unit Driver

```
typedef int16_t mau_q15_t
    MAU Q15 type.
```

```
typedef int32_t mau_q31_t
    MAU Q31 type.
```

```
mau_result_t res {return (base->RES_STATUS >> (8 << (uint8_t)(res))) & 0xFF
```

```
mau_result_t uint32_t mask {base->RES_STATUS &= ~((mask & 0xFF) << (8 << (uint8_t)(res)))
```

```
uint32_t input
```

```
(*volatile uint32_t )(addr))) = input
```

```
(*volatile float )(addr))) = input
```

```
float float *pSin = ((*((volatile float*)((uint32_t)&MAU0->RES0) + (sin_res « 2))))
```

```
float float float *pCos = ((*((volatile float*)((uint32_t)&MAU0->RES0) + (cos_res « 2))))
```

```
float float float mau_result_t sin_res
```

```
float float float mau_result_t mau_result_t cos_res = {    uint32_t sin_addr = (( (uint32_t)base ) | 0x800U | (( kMAU_
```



```
uint32_t cos_addr = (((uint32_t)base) | 0x800U | ((kMAU_DT_FLOAT) « 9U) | ((cos_res) « 7U) | ((kMAU_MOPC_COS) « 2U))
```

```
float input_value = input
```

```
static inline static __attribute__((always_inline)) void MAU_GetDefaultConfig(mau_config_t *config)
```

Gets the default configuration structure.

Calculate the arctangent(X)/PI for Q15.

Calculate the sine(PI*X) and cosine(PI*X) for Q15.

Calculate the cosine(PI*X) for Q15.

Calculate the sine(PI*X) for Q15.

Calculate the reciprocal square root for Q15.

Calculate the square root for Q15.

Calculate the reciprocal for Q15.

Calculate the arctangent(X)/PI for Q31.

Calculate the sine(PI*X) and cosine(PI*X) for Q31.

Calculate the cosine(PI*X) for Q31.

Calculate the sine(PI*X) for Q31.

Calculate the reciprocal square root for Q31.

Calculate the square root for Q31.

Calculate the reciprocal for Q31.

Calculate the arctangent(X)/PI for float.

Calculate the sine(PI*X) and cosine(PI*X) for float.

Calculate the cosine(PI*X) for float.

Calculate the sine(PI*X) for float.

Calculate the reciprocal square root for float.

Calculate the square root for float.

Calculate the reciprocal for float.

Calculate the square root for uint32.

Clears the result register status flag.

Gets the result register status flag.

This function initializes the MAU configuration structure to a default value.

Parameters

- base – MAU peripheral base address.
- res – MAU result register. see mau_result_t.
- base – MAU peripheral base address.
- res – MAU result register. see mau_result_t.
- mask – MAU result register flag mask, see mau_flags_t.
- base – MAU peripheral base address.
- input – Input data.

- res – MAU result register. see `mau_result_t`.
- base – MAU peripheral base address.
- input – Input data.
- res – MAU result register. see `mau_result_t`.
- base – MAU peripheral base address.
- input – Input data.
- pSin – Points to the block of sine output data
- pCos – Points to the block of cosine output data
- sin_res – MAU result register for sine. see `mau_result_t`.
- cos_res – MAU result register for cosine. see `mau_result_t`.
- base – MAU peripheral base address.
- input – Input data.
- res – MAU result register. see `mau_result_t`.
- base – MAU peripheral base address.
- input – Input data.
- res – MAU result register. see `mau_result_t`.

Returns

`uint32_t` MAU result register flags, see `mau_flags_t`.

Returns

`uint32_t`

Returns

`float`

Returns

`mau_q31_t`

Returns

`mau_q15_t`

`void MAU_Init(MAU_Type *base, mau_config_t *config)`

Initializes MAU instance with the user configuration structure.

Parameters

- base – MAU peripheral base address.
- config – Pointer to a user-defined configuration structure.

`void MAU_Deinit(MAU_Type *base)`

Deinitializes MAU instance.

Parameters

- base – MAU peripheral base address.

`FSL_MAU_DRIVER_VERSION`

MAU driver version.

`enum _mau_data_type`

MAU data type.

Values:

enumerator `kMAU_DT_UINT`

enumerator kMAU_DT_INT

enumerator kMAU_DT_Q1X

enumerator kMAU_DT_FLOAT

enum __mau_result

MAU result register.

Values:

enumerator kMAU_RES0

enumerator kMAU_RES1

enumerator kMAU_RES2

enumerator kMAU_RES3

enum __mau_mopc

MAU calculation code.

Values:

enumerator kMAU_MOPC_BYPASS

enumerator kMAU_MOPC_RECIP

enumerator kMAU_MOPC_SQRT

enumerator kMAU_MOPC_SQRT_RECIP

enumerator kMAU_MOPC_COS

enumerator kMAU_MOPC_SIN

enumerator kMAU_MOPC_ATAN

enum __mau_flags

MAU result register status flag.

Values:

enumerator kMAU_FLAG_NX

enumerator kMAU_FLAG_UF

enumerator kMAU_FLAG_OF

enumerator kMAU_FLAG_DZ

enumerator kMAU_FLAG_NV

enumerator kMAU_FLAG_ERR

enumerator kMAU_FLAG_OVWR

enumerator kMAU_FLAG_FULL

typedef enum __mau_data_type mau_data_type_t

MAU data type.

typedef enum __mau_result mau_result_t

MAU result register.

```
typedef enum _mau_mopc mau_mopc_t
    MAU calculation code.

typedef enum _mau_flags mau_flags_t
    MAU result register status flag.

typedef struct _mau_config mau_config_t
    MAU configuration structure.

MAU_MATH_PI

MAU_DT_SET(dt)

MAU_RES_SET(res)

MAU_MOPC_SET(mopc)

MAU_INDIRECT_ADDR(base, dt, ds, mopc)

MAU_REG_UINT32(addr)

MAU_REG_Q15(addr)

MAU_REG_Q31(addr)

MAU_REG_FLOAT(addr)

CONFIG_MAU_ENABLE_CMSIS_DSP_API
    Enable the MAU CMSIS DSP function.

CONFIG_MAU_ENABLE_CMSIS_DSP_ARM_SQRT_F32_API
    Enable the MAU arm_sqrt_f32 function.

struct _mau_config
    #include <fsl_mau.h> MAU configuration structure.
```

Public Members

```
bool enableRes0Interrupt
    Enable RES0 interrupt.

bool enableRes1Interrupt
    Enable RES1 interrupt.

bool enableRes2Interrupt
    Enable RES2 interrupt.

bool enableRes3Interrupt
    Enable RES3 interrupt.
```

2.39 MCX_CMC: Core Mode Controller Driver

```
enum _cmc_power_mode_protection
    CMC power mode Protection enumeration.

Values:

enumerator kCMC_AllowDeepSleepMode
    Allow Deep Sleep mode.
```

enumerator kCMC_AllowPowerDownMode

Allow Power Down mode.

enumerator kCMC_AllowDeepPowerDownMode

Allow Deep Power Down mode.

enumerator kCMC_AllowAllLowPowerModes

Allow Deep Sleep, Power Down, Deep Power Down modes.

enum __cmc_wakeup_sources

Wake up sources from the previous low power mode entry.

Note: kCMC_WakeupFromUsbFs, kCMC_WakeupFromITRC, kCMC_WakeupFromCpu1 are not supported in MCXA family.

Values:

enumerator kCMC_WakeupFromResetInterruptOrPowerDown

Wakeup source is reset interrupt, or wake up from Deep Power Down.

enumerator kCMC_WakeupFromDebugReuquest

Wakeup source is debug request.

enumerator kCMC_WakeupFromInterrupt

Wakeup source is interrupt.

enumerator kCMC_WakeupFromDMAWakeup

Wakeup source is DMA Wakeup.

enumerator kCMC_WakeupFromWUURequest

Wakeup source is WUU request.

enumerator kCMC_WakeupFromUsbFs

Wakeup source is USBFS(USB0).

enumerator kCMC_WakeupFromITRC

Wakeup source is ITRC.

enumerator kCMC_WakeupFromCpu1

Wakeup source is CPU1.

enum __cmc_system_reset_interrupt_enable

System Reset Interrupt enable enumeration.

Values:

enumerator kCMC_PinResetInterruptEnable

Pin Reset interrupt enable.

enumerator kCMC_DAPResetInterruptEnable

DAP Reset interrupt enable.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable

Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kCMC_WindowedWatchdog0ResetInterruptEnable

Windowed Watchdog 0 reset interrupt enable.

enumerator kCMC_SoftwareResetInterruptEnable

Software Reset interrupt enable.

enumerator kCMC_LockupResetInterruptEnable
Lockup Reset interrupt enable.

enumerator kCMC_CodeWatchDog0ResetInterruptEnable
Code watchdog 0 reset interrupt enable.

enum _cmc_system_reset_interrupt_flag
CMC System Reset Interrupt Status flag.

Values:

enumerator kCMC_PinResetInterruptFlag
Pin Reset interrupt flag.

enumerator kCMC_DAPResetInterruptFlag
DAP Reset interrupt flag.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetFlag
Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kCMC_WindowedWatchdog0ResetInterruptFlag
Windowed Watchdog 0 Reset interrupt flag.

enumerator kCMC_SoftwareResetInterruptFlag
Software Reset interrupt flag.

enumerator kCMC_LockupResetInterruptFlag
Lock up Reset interrupt flag.

enumerator kCMC_CodeWatchdog0ResetInterruptFlag
Code watchdog0 reset interrupt flag.

enum _cmc_system_sram_arrays
CMC System SRAM arrays low power mode enable enumeration.

Values:

enumerator kCMC_RAMX0
Used to control RAMX0.

enumerator kCMC_RAMX1
Used to control RAMX1.

enumerator kCMC_RAMX2
Used to control RAMX2.

enumerator kCMC_RAMB
Used to control RAMB.

enumerator kCMC_RAMC0
Used to control RAMC0.

enumerator kCMC_RAMC1
Used to control RAMC1.

enumerator kCMC_RAMD0
Used to control RAMD0.

enumerator kCMC_RAMD1
Used to control RAMD1.

enumerator kCMC_RAME0
Used to control RAME0.

enumerator kCMC_RAME1

Used to control RAME1.

enumerator kCMC_RAMF0

Used to control RAMF0.

enumerator kCMC_RAMF1

Used to control RAMF1.

enumerator kCMC_RAMG0_RAMG1

Used to control RAMG0 and RAMG1.

enumerator kCMC_RAMG2_RAMG3

Used to control RAMG2 and RAMG3.

enumerator kCMC_RAMH0_RAMH1

Used to control RAMH0 and RAMH1.

enumerator kCMC_LPCAC

Used to control LPCAC.

enumerator kCMC_DMA0_DMA1_PKC

Used to control DMA0, DMA1 and PKC.

enumerator kCMC_USB0

Used to control USB0.

enumerator kCMC_PQ

Used to control PQ.

enumerator kCMC_CAN0_CAN1_ENET_USB1

Used to control CAN0, CAN1, ENET, USB1.

enumerator kCMC_FlexSPI

Used to control FlexSPI.

enumerator kCMC_AllSramArrays

Mask of all System SRAM arrays.

enum _cmc_system_reset_sources

System reset sources enumeration.

Values:

enumerator kCMC_WakeUpReset

The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kCMC_PORReset

The reset caused by power on reset detection logic.

enumerator kCMC_VDReset

The reset caused by an LVD or HVD.

enumerator kCMC_WarmReset

The last reset source is a warm reset source.

enumerator kCMC_FatalReset

The last reset source is a fatal reset source.

enumerator kCMC_PinReset

The reset caused by the RESET_b pin.

enumerator kCMC_DAPReset

The reset caused by a reset request from the Debug Access port.

enumerator kCMC_ResetTimeout

The reset caused by a timeout or other error condition in the system reset generation.

enumerator kCMC_LowPowerAcknowledgeTimeoutReset

The reset caused by a timeout in low power mode entry logic.

enumerator kCMC_SCGRReset

The reset caused by a loss of clock or loss of lock event in the SCG.

enumerator kCMC_WindowedWatchdog0Reset

The reset caused by the Windowed WatchDog 0 timeout.

enumerator kCMC_SoftwareReset

The reset caused by a software reset request.

enumerator kCMC_LockUoReset

The reset caused by the ARM core indication of a LOCKUP event.

enumerator kCMC_CodeWatchdog0Reset

The reset caused by the code watchdog0 fault.

enumerator kCMC_JTAGSystemReset

The reset caused by a JTAG system reset request.

enum _cmc_core_clock_gate_status

Indicate the core clock was gated.

Values:

enumerator kCMC_CoreClockNotGated

Core clock not gated.

enumerator kCMC_CoreClockGated

Core clock was gated due to low power mode entry.

enum _cmc_clock_mode

CMC clock mode enumeration.

Values:

enumerator kCMC_GateNoneClock

No clock gating.

enumerator kCMC_GateCoreClock

Gate Core clock.

enumerator kCMC_GateCorePlatformClock

Gate Core clock and platform clock.

enumerator kCMC_GateAllSystemClocks

Gate all System clocks, without getting core entering into low power mode.

enumerator kCMC_GateAllSystemClocksEnterLowPowerMode

Gate all System clocks, with core entering into low power mode.

enum _cmc_low_power_mode

CMC power mode enumeration.

Values:

enumerator `kCMC_ActiveOrSleepMode`

Select Active/Sleep mode.

enumerator `kCMC_DeepSleepMode`

Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator `kCMC_PowerDownMode`

Select Power Down mode when a core executes WFI or WFE instruction.

enumerator `kCMC_DeepPowerDown`

Select Deep Power Down mode when a core executes WFI or WFE instruction.

typedef enum `_cmc_core_clock_gate_status` `cmc_core_clock_gate_status_t`

Indicate the core clock was gated.

typedef enum `_cmc_clock_mode` `cmc_clock_mode_t`

CMC clock mode enumeration.

typedef enum `_cmc_low_power_mode` `cmc_low_power_mode_t`

CMC power mode enumeration.

typedef struct `_cmc_reset_pin_config` `cmc_reset_pin_config_t`

CMC reset pin configuration.

typedef struct `_cmc_power_domain_config` `cmc_power_domain_config_t`

power mode configuration for each power domain.

FSL_CMC_DRIVER_VERSION

CMC driver version 2.3.0.

void `CMC_SetClockMode(CMC_Type *base, cmc_clock_mode_t mode)`

Sets clock mode.

This function configs the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

Parameters

- `base` – CMC peripheral base address.
- `mode` – System clock mode.

static inline void `CMC_LockClockModeSetting(CMC_Type *base)`

Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- `base` – CMC peripheral base address.

static inline `cmc_core_clock_gate_status_t` `CMC_GetCoreClockGatedStatus(CMC_Type *base)`

Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- `base` – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void CMC_ClearCoreClockGatedStatus(CMC_Type *base)

Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline uint8_t CMC_GetWakeupSource(CMC_Type *base)

Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See `_cmc_wakeup_sources` for details.

static inline *cmc_clock_mode_t* CMC_GetClockMode(CMC_Type *base)

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Low Power status.

static inline uint32_t CMC_GetSystemResetStatus(CMC_Type *base)

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- base – CMC peripheral base address.

Returns

The most recent system reset status. See `_cmc_system_reset_sources` for details.

static inline uint32_t CMC_GetStickySystemResetStatus(CMC_Type *base)

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See `_cmc_system_reset_sources` for details.

static inline void CMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)

Clears the sticky system reset status flags.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the sticky system reset status to be cleared.

```
static inline uint8_t CMC_GetResetCount(CMC_Type *base)
```

Gets the number of reset sequences completed since the last Cold Reset.

Parameters

- base – CMC peripheral base address.

Returns

The number of reset sequences.

```
void CMC_SetPowerModeProtection(CMC_Type *base, uint32_t allowedModes)
```

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power domain.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use CMC_SetPowerModeProtection(CMC_base, kCMC_AllowSleepMode|kCMC_AllowDeepSleepMode). To allow all low power modes, use CMC_SetPowerModeProtection(CMC_base, kCMC_AllowAllLowPowerModes).

Parameters

- base – CMC peripheral base address.
- allowedModes – Bitmaps of the allowed power modes. See `_cmc_power_mode_protection` for details.

```
static inline void CMC_LockPowerModeProtectionSetting(CMC_Type *base)
```

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- base – CMC peripheral base address.

```
static inline void CMC_SetGlobalPowerMode(CMC_Type *base, cmc_low_power_mode_t  
lowPowerMode)
```

Config the same lowPower mode for all power domain.

This function configures the same low power mode for MAIN power domain and WAKE power domain.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

```
static inline void CMC_SetMAINPowerMode(CMC_Type *base, cmc_low_power_mode_t  
lowPowerMode)
```

Configures entry into low power mode for the MAIN Power domain.

This function configures the low power mode for the MAIN power domain, when the core executes WFI/WFE instruction. The available lowPower modes are defined in the `cmc_low_power_mode_t`.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

static inline *cmc_low_power_mode_t* CMC_GetMAINPowerMode(CMC_Type *base)

Gets the power mode of the MAIN Power domain.

Parameters

- base – CMC peripheral base address.

Returns

The power mode of MAIN Power domain. See *cmc_low_power_mode_t* for details.

void CMC_ConfigResetPin(CMC_Type *base, const *cmc_reset_pin_config_t* *config)

Configure reset pin.

This function configures reset pin. When enabled, the low power filter is enabled in both Active and Low power modes, the reset filter is only enabled in Active mode. When both filters are enabled, they operate in series.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the reset pin config structure.

static inline void CMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See *_cmc_system_reset_interrupt_enable* for details.

static inline void CMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See *_cmc_system_reset_interrupt_enable* for details.

static inline uint32_t CMC_GetSystemResetInterruptFlags(CMC_Type *base)

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns

System reset interrupt flags. See *_cmc_system_reset_interrupt_flag* for details.

static inline void CMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- base – CMC peripheral base address.
- mask – System Reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

static inline void CMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)
Enable/Disable Non maskable Pin interrupt.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Non maskable pin interrupt. true - enable Non-maskable pin interrupt. false - disable Non-maskable pin interrupt.

static inline uint8_t CMC_GetISPMODEPinLogic(CMC_Type *base)
Gets the logic state of the ISPMODE_n pin.

This function returns the logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

static inline void CMC_ClearISPMODEPinLogic(CMC_Type *base)
Clears ISPMODE_n pin state.

Parameters

- base – CMC peripheral base address.

static inline void CMC_ForceBootConfiguration(CMC_Type *base, bool assert)
Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Config pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.

static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base)
Gets the status information written by the BootROM.

Parameters

- base – CMC peripheral base address.

Returns

The status information written by the BootROM.

static inline void CMC_SetBootRomStatus(CMC_Type *base, uint32_t statValue)
Sets the bootROM status value.

Note: This function is useful when result of `CMC_CheckBootRomRegisterWrittable()` is true.

Parameters

- base – CMC peripheral base address.

- stat – The state value to set.

static inline bool CMC_CheckBootRomRegisterWrittable(CMC_Type *base)

Check if BootROM status and lock registers is writable.

Parameters

- base – CMC peripheral base address.

Returns

The result of whether BootROM status and lock register is writable.

- **true** BootROM status and lock registers are writable;
- **false** BootROM status and lock registers are not writable.

static inline void CMC_LockBootRomStatusWritten(CMC_Type *base)

After invoking this function, BootROM status and lock registers cannot be written.

Parameters

- base – CMC peripheral base address.

static inline void CMC_UnlockBootRomStatusWritten(CMC_Type *base)

After invoking this function, BootROM status and lock register can be written.s.

Parameters

- base –

void CMC_PowerOffSRAMAllMode(CMC_Type *base, uint32_t mask)

Power off the selected system SRAM always.

Note: This function power off the selected system SRAM always. The SRAM arrays should not be accessed while they are shut down. SRAM array contents are not retained if they are powered off.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered off all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMAllMode(CMC_Type *base, uint32_t mask)

Power on SRAM during all mode.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered on all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`void CMC_PowerOffSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)`

Power off the selected system SRAM during low power modes only.

This function power off the selected system SRAM only during low power mode. SRAM array contents are not retained if they are power off.

Parameters

- `base` – CMC peripheral base address.
- `mask` – Bitmap of the SRAM arrays to be power off during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`static inline void CMC_PowerOnSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)`

Power on the selected system SRAM during low power modes only.

This function power on the selected system SRAM. The SRAM array contents are retained in low power modes.

Parameters

- `base` – CMC peripheral base address.
- `mask` – Bitmap of the SRAM arrays to be power on during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`void CMC_ConfigFlashMode(CMC_Type *base, bool wake, bool doze, bool disable)`

Configures the low power mode of the on-chip flash memory.

This function configures the low power mode of the on-chip flash memory.

Parameters

- `base` – CMC peripheral base address.
- `wake` – `true`: Flash will exit low power state during the flash memory accesses. `false`: No effect.
- `doze` – `true`: Flash is disabled while core is sleeping `false`: No effect.
- `disable` – `true`: Flash memory is placed in low power state. `false`: No effect.

`static inline void CMC_EnableDebugOperation(CMC_Type *base, bool enable)`

Enables/Disables debug Operation when the core sleep.

This function configures what happens to debug when core sleeps.

Parameters

- `base` – CMC peripheral base address.
- `enable` – Enable or disable Debug when Core is sleeping. `true` - Debug remains enabled when the core is sleeping. `false` - Debug is disabled when the core is sleeping.

`void CMC_PreEnterLowPowerMode(void)`

Prepares to enter low power modes.

This function should be called before entering low power modes.

`void CMC_PostExitLowPowerMode(void)`

Recovers after wake up from low power modes.

This function should be called after wake up from low power modes. This function should be used with `CMC_PreEnterLowPowerMode()`

```
void CMC_GlobalEnterLowPowerMode(CMC_Type *base, cmc_low_power_mode_t
                                lowPowerMode)
```

Configures the entry into the same low power mode for each power domains.

This function provides the feature to entry into the same low power mode for each power domains. Before invoking this function, please ensure the selected power mode have been allowed.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The low power mode to be entered. See `cmc_low_power_mode_t` for the details.

```
void CMC_EnterLowPowerMode(CMC_Type *base, const cmc_power_domain_config_t *config)
```

Configures the entry into different low power modes for each power domains.

This function provides the feature to entry into different low power modes for each power domains. Before invoking this function please ensure the selected modes are allowed.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the `cmc_power_domain_config_t` structure.

```
bool lowpowerFilterEnable
```

Low Power Filter enable.

```
bool resetFilterEnable
```

Reset Filter enable.

```
uint8_t resetFilterWidth
```

Width of the Reset Filter.

```
cmc_clock_mode_t clock_mode
```

Clock mode for each power domain.

```
cmc_low_power_mode_t main_domain
```

The low power mode of the MAIN power domain.

```
struct _cmc_reset_pin_config
```

`#include <fsl_cmc.h>` CMC reset pin configuration.

```
struct _cmc_power_domain_config
```

`#include <fsl_cmc.h>` power mode configuration for each power domain.

2.40 MCX_SPC: System Power Control driver

```
uint8_t SPC_GetPeriphIOIsolationStatus(SPC_Type *base)
```

Gets Isolation status for each power domains.

This function gets the status which indicates whether certain peripheral and the IO pads are in a latched state as a result of having been in POWERDOWN mode.

Parameters

- base – SPC peripheral base address.

Returns

Current isolation status for each power domains. See `_spc_power_domains` for details.

static inline void SPC_ClearPeriphIOIsolationFlag(SPC_Type *base)

Clears peripherals and I/O pads isolation flags for each power domains.

This function clears peripherals and I/O pads isolation flags for each power domains. After recovering from the POWERDOWN mode, user must invoke this function to release the I/O pads and certain peripherals to their normal run mode state. Before invoking this function, user must restore chip configuration in particular pin configuration for enabled WUU wakeup pins.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_GetBusyStatusFlag(SPC_Type *base)

Gets SPC busy status flag.

This function gets SPC busy status flag. When SPC executing any type of power mode transition in ACTIVE mode or any of the SOC low power mode, the SPC busy status flag is set and this function returns true. When changing CORE LDO voltage level and DCDC voltage level in ACTIVE mode, the SPC busy status flag is set and this function return true.

Parameters

- base – SPC peripheral base address.

Returns

Ack busy flag. true - SPC is busy. false - SPC is not busy.

static inline bool SPC_CheckLowPowerRequest(SPC_Type *base)

Checks system low power request.

Note: Only when all power domains request low power mode entry, the result of this function is true. That means when all power domains request low power mode entry, the SPC regulators will be controlled by LP_CFG register.

Parameters

- base – SPC peripheral base address.

Returns

The system low power request check result.

- **true** All power domains have requested low power mode and SPC has entered a low power state and power mode configuration are based on the LP_CFG configuration register.
- **false** SPC in active mode and ACTIVE_CFG register control system power supply.

static inline void SPC_ClearLowPowerRequest(SPC_Type *base)

Clears system low power request, set SPC in active mode.

Parameters

- base – SPC peripheral base address.

static inline *spc_power_domain_low_power_mode_t* SPC_GetRequestedLowPowerMode(SPC_Type *base)

Check the last low-power mode that the power domain requested.

Parameters

- base – SPC peripheral base address.

Returns

The last low-power mode that the power domain requested.

```
static inline bool SPC__CheckSwitchState(SPC_Type *base)
```

Checks whether the power switch is on.

Parameters

- `base` – SPC peripheral base address.

Return values

- `true` – The power switch is on.
- `false` – The power switch is off.

```
spc_power_domain_low_power_mode_t SPC__GetPowerDomainLowPowerMode(SPC_Type *base,  
                                                                    spc_power_domain_id_t  
                                                                    powerDomainId)
```

Gets selected power domain's requested low power mode.

Parameters

- `base` – SPC peripheral base address.
- `powerDomainId` – Power Domain Id, please refer to `spc_power_domain_id_t`.

Returns

The selected power domain's requested low power mode, please refer to `spc_power_domain_low_power_mode_t`.

```
static inline bool SPC__CheckPowerDomainLowPowerRequest(SPC_Type *base,  
                                                         spc_power_domain_id_t  
                                                         powerDomainId)
```

Checks power domain's low power request.

Parameters

- `base` – SPC peripheral base address.
- `powerDomainId` – Power Domain Id, please refer to `spc_power_domain_id_t`.

Returns

The result of power domain's low power request.

- **true** The selected power domain requests low power mode entry.
- **false** The selected power domain does not request low power mode entry.

```
static inline void SPC__ClearPowerDomainLowPowerRequestFlag(SPC_Type *base,  
                                                            spc_power_domain_id_t  
                                                            powerDomainId)
```

Clears selected power domain's low power request flag.

Parameters

- `base` – SPC peripheral base address.
- `powerDomainId` – Power Domain Id, please refer to `spc_id_t`.

```
static inline void SPC__TrimSRAMLdoRefVoltage(SPC_Type *base, uint8_t trimValue)
```

Trims SRAM retention regulator reference voltage, trim step is 12 mV, range is around 0.48V to 0.85V.

Parameters

- base – SPC peripheral base address.
- trimValue – Reference voltage trim value.

static inline void SPC__EnableSRAMLdo(SPC_Type *base, bool enable)

Enables/disables SRAM retention LDO.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable SRAM LDO :
 - **true** Enable SRAM LDO;
 - **false** Disable SRAM LDO.

static inline void SPC__RetainSRAMArray(SPC_Type *base, uint8_t mask)

Parameters

- base – SPC peripheral base address.
- mask – The OR'ed value of SRAM Array.

static inline void SPC__UnRetainSRAMArray(SPC_Type *base, uint8_t mask)

Unretain SRAM array.

Parameters

- base – SPC peripheral base address.
- mask – The OR'ed value of SRAM Array.

void SPC__SetLowPowerRequestConfig(SPC_Type *base, const *spc_lowpower_request_config_t* *config)

Config Low power request output pin.

This function config the low power request output pin

Parameters

- base – SPC peripheral base address.
- config – Pointer the *spc_lowpower_request_config_t* structure.

static inline void SPC__EnableIntegratedPowerSwitchManually(SPC_Type *base, bool enable)

Enables/disables the integrated power switch manually.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable the integrated power switch:
 - **true** Enable the integrated power switch;
 - **false** Disable the integrated power switch.

static inline void SPC__EnableIntegratedPowerSwitchAutomatically(SPC_Type *base, bool sleepGate, bool wakeupUngate)

Enables/disables the integrated power switch automatically.

To gate the integrated power switch when chip enter low power modes, and ungate the switch after wake-up from low power modes:

```
SPC__EnableIntegratedPowerSwitchAutomatically(SPC, true, true);
```

Parameters

- `base` – SPC peripheral base address.
- `sleepGate` – Enable the integrated power switch when chip enter low power modes:
 - **true** SPC asserts an output pin at low-power entry to power-gate the switch;
 - **false** SPC does not assert an output pin at low-power entry to power-gate the switch.
- `wakeupUngate` – Enables the switch after wake-up from low power modes:
 - **true** SPC asserts an output pin at low-power exit to power-ungate the switch;
 - **false** SPC does not assert an output pin at low-power exit to power-ungate the switch.

`void SPC_SetSRAMOperateVoltage(SPC_Type *base, const spc_sram_voltage_config_t *config)`
Set SRAM operate voltage.

Parameters

- `base` – SPC peripheral base address.
- `config` – The pointer to `spc_sram_voltage_config_t`, specifies the configuration of sram voltage.

`static inline spc_bandgap_mode_t SPC_GetActiveModeBandgapMode(SPC_Type *base)`
Gets the Bandgap mode in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

Bandgap mode in the type of `spc_bandgap_mode_t` enumeration.

`static inline uint32_t SPC_GetActiveModeVoltageDetectStatus(SPC_Type *base)`
Gets all voltage detectors status in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

All voltage detectors status in Active mode.

`status_t SPC_SetActiveModeBandgapModeConfig(SPC_Type *base, spc_bandgap_mode_t mode)`
Configs Bandgap mode in Active mode.

Note: To disable bandgap in Active mode:

- a. Disable all LVD's and HVD's in active mode;
 - b. Disable Glitch detect;
 - c. Configure LDO's and DCDC to low drive strength in active mode;
 - d. Invoke this function to disable bandgap in active mode; otherwise the error status will be reported.
-

Note: Some other system resources(such as PLL, CMP) require bandgap to be enabled, to disable bandgap please take care of other system resources.

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode be selected.

Return values

- kStatus_SPC_BandgapModeWrong – The Bandgap can not be disabled in active mode.
- kStatus_Success – Config Bandgap mode in Active power mode successful.

static inline void SPC_EnableActiveModeCMPBandgapBuffer(SPC_Type *base, bool enable)
Enables/Disable the CMP Bandgap Buffer in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference voltage to CMP. false - Disable Buffer Stored Reference voltage to CMP.

static inline void SPC_SetActiveModeVoltageTrimDelay(SPC_Type *base, uint16_t delay)
Sets the delay when the regulators change voltage level in Active mode.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles.

status_t SPC_SetActiveModeRegulatorsConfig(SPC_Type *base, const
 spc_active_mode_regulators_config_t *config)

Configs all settings of regulators in Active mode at a time.

Note: This function is used to overwrite all settings of regulators(including bandgap mode, regulators' drive strength and voltage level) in active mode at a time.

Note: Enable/disable LVDs/HVDs before invoking this function.

Note: This function will check input parameters based on hardware restrictions before setting registers, if input parameters do not satisfy hardware restrictions the specific error will be reported.

Note: Some hardware restrictions not covered, application should be aware of this and follow this hardware restrictions otherwise some unknown issue may occur:

- a. If Core LDO's drive strength are set to same value in both Active mode and low power mode, the voltage level should also set to same value.
 - b. When switching Core LDO's drive strength from low to normal, ensure the LDO_CORE high voltage level is set to same level that was set prior to switching to the LDO_CORE drive strength. Otherwise, if the LVDs are enabled, an unexpected LVD can occur.
-

Note: If this function can not satisfy some tricky settings, please invoke other APIs in low-level function group.

Parameters

- base – SPC peripheral base address.
- config – Pointer to `spc_active_mode_regulators_config_t` structure.

Return values

- `kStatus_Success` – Config regulators in Active power mode successful.
- `kStatus_SPC_BandgapModeWrong` – Based on input setting, bandgap can not be disabled.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – Any of LVDs/HVDs kept enabled before invoking this function.
- `kStatus_SPC_SYSLDOOverDriveVoltageFail` – Fail to regulator to Over Drive Voltage due to System VDD HVD is not disabled.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Any of LVDs/HVDs kept enabled before invoking this function.
- `kStatus_SPC_CORELDOLowVoltageWrong` – Core LDO and System LDO do not have same voltage level.

`static inline void SPC_EnableActiveModeAnalogModules(SPC_Type *base, uint32_t maskValue)`
Enables analog modules in active mode.

Parameters

- base – SPC peripheral base address.
- maskValue – The mask of analog modules to enable in active mode, should be the OR'ed value of `spc_analog_module_control`.

`static inline void SPC_DisableActiveModeAnalogModules(SPC_Type *base, uint32_t maskValue)`
Disables analog modules in active mode.

Parameters

- base – SPC peripheral base address.
- maskValue – The mask of analog modules to disable in active mode, should be the OR'ed value of `spc_analog_module_control`.

`static inline uint32_t SPC_GetActiveModeEnabledAnalogModules(SPC_Type *base)`
Gets enabled analog modules that enabled in active mode.

Parameters

- base – SPC peripheral base address.

Returns

The mask of enabled analog modules that enabled in active mode.

`static inline spc_bandgap_mode_t SPC_GetLowPowerModeBandgapMode(SPC_Type *base)`
Gets the Bandgap mode in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns

Bandgap mode in the type of `spc_bandgap_mode_t` enumeration.

```
static inline uint32_t SPC_GetLowPowerModeVoltageDetectStatus(SPC_Type *base)
```

Gets the status of all voltage detectors in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns

The status of all voltage detectors in low power mode.

```
static inline void SPC_EnableLowPowerModeLowPowerIREF(SPC_Type *base, bool enable)
```

Enables/Disables Low Power IREF in low power modes.

This function enables/disables Low Power IREF. Low Power IREF can only get disabled in Deep power down mode. In other low power modes, the Low Power IREF is always enabled.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Low Power IREF. true - Enable Low Power IREF for Low Power modes. false - Disable Low Power IREF for Deep Power Down mode.

```
status_t SPC_SetLowPowerModeBandgapmodeConfig(SPC_Type *base, spc_bandgap_mode_t mode)
```

Configs Bandgap mode in Low Power mode.

Note: To disable Bandgap in Low-power mode:

- Disable all LVD's and HVD's in low power mode;
 - Disable Glitch detect in low power mode;
 - Configure LDO's and DCDC to low drive strength in low power mode;
 - Disable bandgap in low power mode; Otherwise, the error status will be reported.
-

Note: Some other system resources(such as PLL, CMP) require bandgap to be enabled, to disable bandgap please take care of other system resources.

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode to be selected.

Return values

- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in Low Power mode is wrong.
- kStatus_Success – Config Bandgap mode in Low Power power mode successful.

```
static inline void SPC_EnableSRAMLdOLowPowerModeIREF(SPC_Type *base, bool enable)
```

Enables/disables SRAM_LDO deep power low power IREF.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable low power IREF :
 - **true:** Low Power IREF is enabled ;

- **false:** Low Power IREF is disabled for power saving.

```
static inline void SPC__EnableLowPowerModeCMPBandgapBufferMode(SPC_Type *base, bool  
                                                                enable)
```

Enables/Disables CMP Bandgap Buffer.

This function gates CMP bandgap buffer. CMP bandgap buffer is automatically disabled and turned off in Deep Power Down mode.

Deprecated:

No longer used, please use SPC_EnableLowPowerModeCMPBandgapBuffer as instead.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference Voltage to CMP. false - Disable Buffer Stored Reference Voltage to CMP.

```
static inline void SPC__EnableLowPowerModeCMPBandgapBuffer(SPC_Type *base, bool enable)
```

Enables/Disables CMP Bandgap Buffer.

This function gates CMP bandgap buffer. CMP bandgap buffer is automatically disabled and turned off in Deep Power Down mode.

Deprecated:

No longer used.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference Voltage to CMP. false - Disable Buffer Stored Reference Voltage to CMP.

```
static inline void SPC__EnableLowPowerModeCoreVDDInternalVoltageScaling(SPC_Type *base,  
                                                                           bool enable)
```

Enables/Disables CORE VDD IVS(Internal Voltage Scaling) in power down modes.

This function gates CORE VDD IVS. When enabled, the IVS regulator will scale the external input CORE VDD to a lower voltage level to reduce internal leakage. IVS is invalid in Sleep or Deep power down mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IVS. true - enable CORE VDD IVS in Power Down mode. false - disable CORE VDD IVS in Power Down mode.

```
static inline void SPC__SetLowPowerWakeUpDelay(SPC_Type *base, uint16_t delay)
```

Sets the delay when exit the low power modes.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles that the SPC waits on exit from low power modes.


```
status_t SPC_SetLowPowerModeRegulatorsConfig(SPC_Type *base, const
                                              spc_lowpower_mode_regulators_config_t
                                              *config)
```

Configs all settings of regulators in Low power mode at a time.

Note: This function is used to overwrite all settings of regulators(including bandgap mode, regulators' drive strength and voltage level) in low power mode at a time.

Note: Enable/disable LVDs/HVDs before invoking this function.

Note: This function will check input parameters based on hardware restrictions before setting registers, if input parameters do not satisfy hardware restrictions the specific error will be reported.

Note: Some hardware restrictions not covered, application should be aware of this and follow this hardware restrictions otherwise some unknown issue may occur:

- a. If Core LDO's drive strength are set to same value in both Active mode and low power mode, the voltage level should also set to same value.
 - b. When switching Core LDO's drive strength from low to normal, ensure the LDO_CORE high voltage level is set to same level that was set prior to switching to the LDO_CORE drive strength. Otherwise, if the LVDs are enabled, an unexpected LVD can occur.
-

Note: If this function can not satisfy some tricky settings, please invoke other APIs in low-level function group.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_lowpower_mode_regulators_config_t structure.

Return values

- kStatus_Success – Config regulators in Low power mode successful.
- kStatus_SPC_BandgapModeWrong – The bandgap should not be disabled based on input settings.
- kStatus_SPC_CORELDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- kStatus_SPC_SYSLDOLowDriveStrengthIgnore – Set driver strength to low will be ignored.
- kStatus_SPC_CORELDOLowVoltageWrong – Core LDO and System LDO do not have same voltage level.

```
static inline void SPC_EnableLowPowerModeAnalogModules(SPC_Type *base, uint32_t
                                                         maskValue)
```

Enables analog modules in low power modes.

Parameters

- base – SPC peripheral base address.

- `maskValue` – The mask of analog modules to enable in low power modes, should be OR'ed value of `spc_analog_module_control`.

```
static inline void SPC__DisableLowPowerModeAnalogModules(SPC_Type *base, uint32_t  
                                                         maskValue)
```

Disables analog modules in low power modes.

Parameters

- `base` – SPC peripheral base address.
- `maskValue` – The mask of analog modules to disable in low power modes, should be OR'ed value of `spc_analog_module_control`.

```
static inline uint32_t SPC__GetLowPowerModeEnabledAnalogModules(SPC_Type *base)
```

Gets enabled analog modules that enabled in low power modes.

Parameters

- `base` – SPC peripheral base address.

Returns

The mask of enabled analog modules that enabled in low power modes.

```
static inline uint32_t SPC__GetVoltageDetectStatusFlag(SPC_Type *base)
```

Get Voltage Detect Status Flags.

Parameters

- `base` – SPC peripheral base address.

Returns

Voltage Detect Status Flags. See `_spc_voltage_detect_flags` for details.

```
static inline void SPC__ClearVoltageDetectStatusFlag(SPC_Type *base, uint8_t mask)
```

Clear Voltage Detect Status Flags.

Parameters

- `base` – SPC peripheral base address.
- `mask` – The mask of the voltage detect status flags. See `_spc_voltage_detect_flags` for details.

```
void SPC__SetCoreVoltageDetectConfig(SPC_Type *base, const spc_core_voltage_detect_config_t  
                                     *config)
```

Configs CORE voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- `base` – SPC peripheral base address.
- `config` – Pointer to `spc_core_voltage_detect_config_t` structure.

```
static inline void SPC__LockCoreVoltageDetectResetSetting(SPC_Type *base)
```

Locks Core voltage detect reset setting.

This function locks core voltage detect reset setting. After invoking this function any configuration of Core voltage detect reset will be ignored.

Parameters

- `base` – SPC peripheral base address.

static inline void SPC_UnlockCoreVoltageDetectResetSetting(SPC_Type *base)

Unlocks Core voltage detect reset setting.

This function unlocks core voltage detect reset setting. If locks the Core voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

status_t SPC_EnableActiveModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core Low Voltage Detector in Active mode.

Note: If the CORE_LDO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core LVD. true - Enable Core Low voltage detector in active mode. false - Disable Core Low voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable Core Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core Low Voltage Detector in Low Power mode.

This function enables/disables the Core Low Voltage Detector. If enabled the Core Low Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core Low voltage detector in low power mode. false - Disable Core Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable Core Low Voltage Detect in low power mode successfully.

status_t SPC_EnableActiveModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core High Voltage Detector in Active mode.

Note: If the CORE_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.

- `enable` – Enable/Disable Core HVD. `true` - Enable Core High voltage detector in active mode. `false` - Disable Core High voltage detector in active mode.

Return values

`kStatus_Success` – Enable/Disable Core High Voltage Detect successfully.

`status_t` `SPC_EnableLowPowerModeCoreHighVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the Core High Voltage Detector in Low Power mode.

This function enables/disables the Core High Voltage Detector. If enabled the Core High Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in low power mode.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable Core HVD. `true` - Enable Core High voltage detector in low power mode. `false` - Disable Core High voltage detector in low power mode.

Return values

`kStatus_Success` – Enable/Disable Core High Voltage Detect in low power mode successfully.

`void` `SPC_SetSystemVDDLowVoltageLevel(SPC_Type *base, spc_low_voltage_level_select_t level)`

Set system VDD Low-voltage level selection.

This function selects the system VDD low-voltage level. Changing system VDD low-voltage level must be done after disabling the System VDD low voltage reset and interrupt.

Deprecated:

In latest RM, reserved for all devices, will removed in next release.

Parameters

- `base` – SPC peripheral base address.
- `level` – System VDD Low-Voltage level selection.

`void` `SPC_SetSystemVoltageDetectConfig(SPC_Type *base, const spc_system_voltage_detect_config_t *config)`

Configs SYS voltage detect options.

This function config SYS voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- `base` – SPC peripheral base address.
- `config` – Pointer to `spc_system_voltage_detect_config_t` structure.

`static inline void SPC_LockSystemVoltageDetectResetSetting(SPC_Type *base)`

Lock System voltage detect reset setting.

This function locks system voltage detect reset setting. After invoking this function any configuration of System Voltage detect reset will be ignored.

Parameters

- `base` – SPC peripheral base address.

`static inline void SPC_UnlockSystemVoltageDetectResetSetting(SPC_Type *base)`

Unlock System voltage detect reset setting.

This function unlocks system voltage detect reset setting. If locks the System voltage detect reset setting, invoking this function to unlock.

Parameters

- `base` – SPC peripheral base address.

`status_t SPC_EnableActiveModeSystemHighVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the System High Voltage Detector in Active mode.

Note: If the System_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable System HVD. `true` - Enable System High voltage detector in active mode. `false` - Disable System High voltage detector in active mode.

Return values

`kStatus_Success` – Enable/Disable System High Voltage Detect successfully.

`status_t SPC_EnableActiveModeSystemLowVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disable the System Low Voltage Detector in Active mode.

Note: If the System_LDO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable System LVD. `true` - Enable System Low voltage detector in active mode. `false` - Disable System Low voltage detector in active mode.

Return values

`kStatus_Success` – Enable/Disable the System Low Voltage Detect successfully.

`status_t SPC_EnableLowPowerModeSystemHighVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the System High Voltage Detector in Low Power mode.

Note: If the System_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System High voltage detector in low power mode. false - Disable System High voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable System High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System Low Voltage Detector in Low Power mode.

Note: If the System_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System Low voltage detector in low power mode. false - Disable System Low voltage detector in low power mode.

Return values

kStatus_Success – Enables System Low Voltage Detect in low power mode successfully.

void SPC_SetIOVDDLowVoltageLevel(SPC_Type *base, *spc_low_voltage_level_select_t* level)

Set IO VDD Low-Voltage level selection.

This function selects the IO VDD Low-voltage level. Changing IO VDD low-voltage level must be done after disabling the IO VDD low voltage reset and interrupt.

Parameters

- base – SPC peripheral base address.
- level – IO VDD Low-voltage level selection.

void SPC_SetIOVoltageDetectConfig(SPC_Type *base, const *spc_io_voltage_detect_config_t* *config)

Configs IO voltage detect options.

This function config IO voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.

- config – Pointer to `spc_voltage_detect_config_t` structure.

`static inline void SPC_LockIOVoltageDetectResetSetting(SPC_Type *base)`

Lock IO Voltage detect reset setting.

This function locks IO voltage detect reset setting. After invoking this function any configuration of system voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

`static inline void SPC_UnlockIOVoltageDetectResetSetting(SPC_Type *base)`

Unlock IO voltage detect reset setting.

This function unlocks IO voltage detect reset setting. If locks the IO voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

`status_t SPC_EnableActiveModeIOHighVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the IO High Voltage Detector in Active mode.

Note: If the IO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in active mode. false - Disable IO High voltage detector in active mode.

Return values

`kStatus_Success` – Enable/Disable IO High Voltage Detect successfully.

`status_t SPC_EnableActiveModeIOLowVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the IO Low Voltage Detector in Active mode.

Note: If the IO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in active mode. false - Disable IO Low voltage detector in active mode.

Return values

`kStatus_Success` – Enable IO Low Voltage Detect successfully.

`status_t SPC_EnableLowPowerModeIOHighVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the IO High Voltage Detector in Low Power mode.

Note: If the IO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in low power mode. false - Disable IO High voltage detector in low power mode.

Return values

kStatus_Success – Enable IO High Voltage Detect in low power mode successfully.

`status_t SPC_EnableLowPowerModeIOLowVoltageDetect(SPC_Type *base, bool enable)`

Enables/Disables the IO Low Voltage Detector in Low Power mode.

Note: If the IO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in low power mode. false - Disable IO Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable IO Low Voltage Detect in low power mode successfully.

`void SPC_SetExternalVoltageDomainsConfig(SPC_Type *base, uint8_t lowPowerIsoMask, uint8_t IsoMask)`

Configs external voltage domains.

This function configs external voltage domains isolation.

Parameters

- base – SPC peripheral base address.
- lowPowerIsoMask – The mask of external domains isolate enable during low power mode. Please read the Reference Manual for the Bitmap.
- IsoMask – The mask of external domains isolate. Please read the Reference Manual for the Bitmap.

`static inline uint8_t SPC_GetExternalDomainsStatus(SPC_Type *base)`

Gets External Domains status.

Parameters

- base – SPC peripheral base address.

Returns

The status of each external domain.

`static inline void SPC_EnableCoreLDORegulator(SPC_Type *base, bool enable)`

Enable/Disable Core LDO regulator.

Note: The CORE LDO enable bit is write-once.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable CORE LDO Regulator. `true` - Enable CORE LDO Regulator. `false` - Disable CORE LDO Regulator.

`static inline void SPC_PullDownCoreLDORegulator(SPC_Type *base, bool pulldown)`
Enable/Disable the CORE LDO Regulator pull down in Deep Power Down.

Note: This function only useful when enabled the CORE LDO Regulator.

Parameters

- `base` – SPC peripheral base address.
- `pulldown` – Enable/Disable CORE LDO pulldown in Deep Power Down mode. `true` - CORE LDO Regulator will discharge in Deep Power Down mode. `false` - CORE LDO Regulator will not discharge in Deep Power Down mode.

`status_t SPC_SetActiveModeCoreLDORegulatorConfig(SPC_Type *base, const`
`spc_active_mode_core_ldo_option_t`
`*option)`

Configs Core LDO Regulator in Active mode.

Note: The bandgap must be enabled before invoking this function.

Note: To set Core LDO as low drive strength, all HVDs/LVDs must be disabled previously.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to the `spc_active_mode_core_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config Core LDO regulator in Active power mode successful.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – Bandgap should be enabled before invoking this function.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – To set Core LDO as low drive strength, all LVDs/HVDs must be disabled before invoking this function.

`status_t SPC_SetActiveModeCoreLDORegulatorVoltageLevel(SPC_Type *base,`
`spc_core_ldo_voltage_level_t`
`voltageLevel)`

Set Core LDO Regulator Voltage level in Active mode.

Note: In active mode, the Core LDO voltage level should only be changed when the Core LDO is in normal drive strength.

Note: Update Core LDO voltage level will set Busy flag, this function return only when busy flag is cleared by hardware

Parameters

- `base` – SPC peripheral base address.
- `voltageLevel` – Specify the voltage level of CORE LDO Regulator in Active mode, please refer to `spc_core_ldo_voltage_level_t`.

Return values

- `kStatus_SPC_CORELDOVoltageSetFail` – The drive strength of Core LDO is not normal.
- `kStatus_Success` – Set Core LDO regulator voltage level in Active power mode successful.

```
static inline spc_core_ldo_voltage_level_t SPC_GetActiveModeCoreLDOVDDVoltageLevel(SPC_Type
                                                                                   *base)
```

Gets CORE LDO Regulator Voltage level.

This function returns the voltage level of CORE LDO Regulator in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

Voltage level of CORE LDO in type of `spc_core_ldo_voltage_level_t` enumeration.

```
status_t SPC_SetActiveModeCoreLDORegulatorDriveStrength(SPC_Type *base,
                                                         spc_core_ldo_drive_strength_t
                                                         driveStrength)
```

Set Core LDO VDD Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the drive strength of CORE LDO Regulator in Active mode, please refer to `spc_core_ldo_drive_strength_t`.

Return values

- `kStatus_Success` – Set Core LDO regulator drive strength in Active power mode successful.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – If any voltage detect enabled, core_ldo's drive strength can not set to low.
- `kStatus_SPC_BandgapModeWrong` – The selected bandgap mode is not allowed.

```
static inline spc_core_ldo_drive_strength_t SPC_GetActiveModeCoreLDODriveStrength(SPC_Type
                                                                                   *base)
```

Gets CORE LDO VDD Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

Drive Strength of CORE LDO regulator in Active mode, please refer to `spc_core_ldo_drive_strength_t`.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorConfig(SPC_Type *base, const
                                                    spc_lowpower_mode_core_ldo_option_t
                                                    *option)
```

Configs CORE LDO Regulator in low power mode.

This function configs CORE LDO Regulator in Low Power mode. If CORE LDO VDD Drive Strength is set to Normal, the CORE LDO VDD regulator voltage level in Active mode must be equal to the voltage level in Low power mode. And the Bandgap must be programmed to select bandgap enabled. Core VDD voltage levels for the Core LDO low power regulator can only be changed when the CORE LDO Drive Strength set as Normal.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the `spc_lowpower_mode_core_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config Core LDO regulator in power mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.
- `#kStatus_SPC_CORELDOVoltageSetFail` – Fail to change Core LDO voltage level.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorVoltageLevel(SPC_Type *base,
                                                          spc_core_ldo_voltage_level_t
                                                          voltageLevel)
```

Set Core LDO VDD Regulator Voltage level in Low power mode.

Note: If CORE LDO's drive strength is set to Normal, the CORE LDO VDD regulator voltage in active mode and low power mode must be same.

Note: Voltage level for the CORE LDO in low power mode can only be changed when the CORE LDO Drive Strength set as Normal.

Parameters

- base – SPC peripheral base address.
- voltageLevel – Voltage level of CORE LDO Regulator in Low power mode, please refer to `spc_core_ldo_voltage_level_t`.

Return values

- `kStatus_SPC_CORELDOVoltageWrong` – Voltage level in active mode and low power mode is not same.
- `kStatus_Success` – Set Core LDO regulator voltage level in Low power mode successful.
- `kStatus_SPC_CORELDOVoltageSetFail` – Fail to update voltage level because drive strength is incorrect.

```
static inline spc_core_ldo_voltage_level_t SPC_GetLowPowerCoreLDOVDDVoltageLevel(SPC_Type
                                                                                     *base)
```

Gets the CORE LDO VDD Regulator Voltage Level for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO VDD Regulator's voltage level.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorDriveStrength(SPC_Type *base,  
                                                           spc_core_ldo_drive_strength_t  
                                                           driveStrength)
```

Set Core LDO VDD Regulator Drive Strength in Low power mode.

Parameters

- base – SPC peripheral base address.
- driveStrength – Specify drive strength of CORE LDO in low power mode.

Return values

- kStatus_SPC_CORELDOLowDriveStrengthIgnore – Some voltage detect enabled, CORE LDO's drive strength can not set as low.
- kStatus_Success – Set Core LDO regulator drive strength in Low power mode successful.
- kStatus_SPC_BandgapModeWrong – Bandgap is disabled when attempt to set CORE LDO work as normal drive strength.

```
static inline spc_core_ldo_drive_strength_t SPC_GetLowPowerCoreLDOVDDDriveStrength(SPC_Type  
                                                                                    *base)
```

Gets CORE LDO VDD Drive Strength for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO's VDD Drive Strength.

```
static inline void SPC_EnableSystemLDORegulator(SPC_Type *base, bool enable)  
Enable/Disable System LDO regulator.
```

Note: The SYSTEM LDO enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System LDO Regulator. true - Enable System LDO Regulator. false - Disable System LDO Regulator.

```
static inline void SPC_EnableSystemLDOSinkFeature(SPC_Type *base, bool sink)  
Enable/Disable current sink feature of System LDO Regulator.
```

Parameters

- base – SPC peripheral base address.
- sink – Enable/Disable current sink feature. true - Enable current sink feature of System LDO Regulator. false - Disable current sink feature of System LDO Regulator.

```
status_t SPC_SetActiveModeSystemLDORegulatorConfig(SPC_Type *base, const  
                                                    spc_active_mode_sys_ldo_option_t  
                                                    *option)
```

Config System LDO VDD Regulator in Active mode.

Note: If System LDO VDD Drive Strength is set to Normal, the Bandgap mode in Active mode must be programmed to a value that enables the bandgap.

Note: If any voltage detects are kept enabled, configuration to set System LDO VDD drive strength to low will be ignored.

Note: If select System LDO VDD Regulator voltage level to Over Drive Voltage, the Drive Strength of System LDO VDD Regulator must be set to Normal otherwise the regulator Drive Strength will be forced to Normal.

Note: If select System LDO VDD Regulator voltage level to Over Drive Voltage, the High voltage detect must be disabled. Otherwise it will be fail to regulator to Over Drive Voltage.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the `spc_active_mode_sys_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config System LDO regulator in Active power mode successful.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – The bandgap is not enabled before invoking this function.
- `kStatus_SPC_SYSLDOOverDriveVoltageFail` – HVD of System VDD is not disable before setting to Over Drive voltage.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Set System LDO VDD regulator's driver strength to Low will be ignored.

status_t SPC_SetActiveModeSystemLDORegulatorVoltageLevel(*SPC_Type* *base,
 spc_sys_ldo_voltage_level_t
 voltageLevel)

Set System LDO Regulator voltage level in Active mode.

Note: The system LDO regulator can only operate at the overdrive voltage level for a limited amount of time for the life of chip.

Parameters

- base – SPC peripheral base address.
- voltageLevel – Specify the voltage level of System LDO Regulator in Active mode.

Return values

- `kStatus_Success` – Set System LDO Regulator voltage level in Active mode successfully.
- `kStatus_SPC_SYSLDOOverDriveVoltageFail` – Must disable system LDO high voltage detector before specifying overdrive voltage.

```
static inline spc_sys_ldo_voltage_level_t SPC_GetActiveModeSystemLDORegulatorVoltageLevel(SPC_Type *base)
```

Get System LDO Regulator voltage level in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO Regulator voltage level in Active mode, please refer to `spc_sys_ldo_voltage_level_t`.

```
status_t SPC_SetActiveModeSystemLDORegulatorDriveStrength(SPC_Type *base,
                                                           spc_sys_ldo_drive_strength_t
                                                           driveStrength)
```

Set System LDO Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the drive strength of System LDO Regulator in Active mode.

Return values

- `kStatus_Success` – Set System LDO Regulator drive strength in Active mode successfully.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Attempt to specify low drive strength is ignored due to any voltage detect feature is enabled in active mode.
- `kStatus_SPC_BandgapModeWrong` – Bandgap mode in Active mode must be programmed to a value that enables the bandgap if attempt to specify normal drive strength.

```
static inline spc_sys_ldo_drive_strength_t SPC_GetActiveModeSystemLDORegulatorDriveStrength(SPC_Type *base)
```

Get System LDO Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO regulator drive strength in Active mode, please refer to `spc_sys_ldo_drive_strength_t`.

```
status_t SPC_SetLowPowerModeSystemLDORegulatorConfig(SPC_Type *base, const
                                                       spc_lowpower_mode_sys_ldo_option_t
                                                       *option)
```

Configs System LDO regulator in low power modes.

This function configs System LDO regulator in low power modes. If System LDO VDD Regulator Drive strength is set to normal, bandgap mode in low power mode must be programmed to a value that enables the Bandgap. If any High voltage detectors or Low Voltage detectors are kept enabled, configuration to set System LDO Regulator drive strength as Low will be ignored.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to `spc_lowpower_mode_sys_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config System LDO regulator in Low Power Mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.

```
status_t SPC_SetLowPowerModeSystemLDORegulatorDriveStrength(SPC_Type *base,  
                                                             spc_sys_ldo_drive_strength_t  
                                                             driveStrength)
```

Set System LDO Regulator drive strength in Low Power Mode.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the drive strength of System LDO Regulator in Low Power Mode.

Return values

- `kStatus_Success` – Set System LDO Regulator drive strength in Low Power Mode successfully.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Attempt to specify low drive strength is ignored due to any voltage detect feature is enabled in low power mode.
- `kStatus_SPC_BandgapModeWrong` – Bandgap mode in low power mode must be programmed to a value that enables the bandgap if attempt to specify normal drive strength.

```
static inline spc_sys_ldo_drive_strength_t SPC_GetLowPowerModeSystemLDORegulatorDriveStrength(SPC_Type  
                                                                                             *base)
```

Get System LDO Regulator drive strength in Low Power Mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO regulator drive strength in Low Power Mode, please refer to `spc_sys_ldo_drive_strength_t`.

```
static inline void SPC_EnableDCDCRegulator(SPC_Type *base, bool enable)  
Enable/Disable DCDC Regulator.
```

Note: The DCDC enable bit is write-once, settings only reset after a POR, LVD, or HVD event.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable DCDC Regulator. `true` - Enable DCDC Regulator. `false` - Disable DCDC Regulator.

void SPC_SetDCDCBurstConfig(SPC_Type *base, *spc_dcdc_burst_config_t* *config)

Config DCDC Burst options.

Parameters

- base – SPC peripheral base address.
- config – Pointer to *spc_dcdc_burst_config_t* structure.

static inline void SPC_TriggerDCDCBurstRequest(SPC_Type *base)

Trigger a software burst request to DCDC.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_CheckDCDCBurstAck(SPC_Type *base)

Check if burst acknowledge flag is asserted.

Parameters

- base – SPC peripheral base address.

Return values

- false – DCDC burst not complete.
- true – DCDC burst complete.

static inline void SPC_ClearDCDCBurstAckFlag(SPC_Type *base)

Clear DCDC burst acknowledge flag.

Parameters

- base – SPC peripheral base address.

void SPC_SetDCDCRefreshCount(SPC_Type *base, uint16_t count)

Set the count value of the reference clock to configure the period of DCDC not active.

Note: This function is only useful when DCDC's drive strength is set as pulse refresh.

Note: The pulse duration(time between on and off) is: reference clock period * (count + 2).

Parameters

- base – SPC peripheral base address.
- count – The count value, 16 bit width.

static inline void SPC_EnableDCDCBleedResistor(SPC_Type *base, bool enable)

Enable a bleed resistor to discharge DCDC output when DCDC is disabled.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable bleed resistor.

status_t SPC_SetActiveModeDCDCRegulatorConfig(SPC_Type *base, const
spc_active_mode_dcdc_option_t *option)

Configs DCDC_CORE Regulator in Active mode.

Note: When changing the DCDC output voltage level, take care to change the CORE LDO voltage level.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to the `spc_active_mode_dcdc_option_t` structure.

Return values

- `kStatus_Success` – Config DCDC regulator in Active power mode successful.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

```
static inline void SPC_SetActiveModeDCDCRegulatorVoltageLevel(SPC_Type *base,  
                                                             spc_dcdc_voltage_level_t  
                                                             voltageLevel)
```

Set DCDC_CORE Regulator voltage level in Active mode.

Note: When changing the DCDC output voltage level, take care to change the CORE LDO voltage level.

Parameters

- `base` – SPC peripheral base address.
- `voltageLevel` – Specify the DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

```
static inline spc_dcdc_voltage_level_t SPC_GetActiveModeDCDCRegulatorVoltageLevel(SPC_Type  
                                                                                    *base)
```

Get DCDC_CORE Regulator voltage level in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

```
status_t SPC_SetActiveModeDCDCRegulatorDriveStrength(SPC_Type *base,  
                                                      spc_dcdc_drive_strength_t  
                                                      driveStrength)
```

Set DCDC_CORE Regulator drive strength in Active mode.

Note: To set DCDC drive strength as Normal, the bandgap must be enabled.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the DCDC_CORE regulator drive strength, please refer to `spc_dcdc_drive_strength_t`.

Return values

- `kStatus_Success` – Set DCDC_CORE Regulator drive strength in Active mode successfully.
- `kStatus_SPC_BandgapModeWrong` – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

static inline *spc_dcdc_drive_strength_t* SPC_GetActiveModeDCDCRegulatorDriveStrength(*SPC_Type* *base)

Get DCDC_CORE Regulator drive strength in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator drive strength, please refer to *spc_dcdc_drive_strength_t*.

status_t SPC_SetLowPowerModeDCDCRegulatorConfig(*SPC_Type* *base, const *spc_lowpower_mode_dcdc_option_t* *option)

Configs DCDC_CORE Regulator in Low power modes.

Note: If DCDC_CORE Drive Strength is set to Normal, the Bandgap mode in Low Power mode must be programmed to a value that enables the Bandgap.

Note: In Deep Power Down mode, DCDC regulator is always turned off.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to the *spc_lowpower_mode_dcdc_option_t* structure.

Return values

- `kStatus_Success` – Config DCDC regulator in low power mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – The bandgap mode setting in Low Power mode is wrong.

status_t SPC_SetLowPowerModeDCDCRegulatorDriveStrength(*SPC_Type* *base, *spc_dcdc_drive_strength_t* driveStrength)

Set DCDC_CORE Regulator drive strength in Low power mode.

Note: To set drive strength as normal, the bandgap must be enabled.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the DCDC_CORE Regulator drive strength, please refer to *spc_dcdc_drive_strength_t*.

Return values

- `kStatus_Success` – Set DCDC_CORE Regulator drive strength in Low power mode successfully.
- `kStatus_SPC_BandgapModeWrong` – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

static inline *spc_dcdc_drive_strength_t* SPC_GetLowPowerModeDCDCRegulatorDriveStrength(*SPC_Type* *base)

Get DCDC_CORE Regulator drive strength in Low power mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator drive strength, please refer to *spc_dcdc_drive_strength_t*.

static inline void SPC_SetLowPowerModeDCDCRegulatorVoltageLevel(*SPC_Type* *base, *spc_dcdc_voltage_level_t* voltageLevel)

Set DCDC_CORE Regulator voltage level in Low power mode.

- a. Configure `ACTIVE_CFG[DCDC_VDD_LVL]` to same level programmed in #1.

Note: To change DCDC level in Low-Power mode:

- a. Configure `LP_CFG[DCDC_VDD_LVL]` to desired level;
 - b. Configure `LP_CFG[DCDC_VDD_DS]` to low driver strength;
-

Note: After invoking this function, the voltage level in active mode(wakeup from low power modes) also changed, if it is necessary, please invoke `SPC_SetActiveModeDCDCRegulatorVoltageLevel()` to change to desired voltage level.

Parameters

- `base` – SPC peripheral base address.
- `voltageLevel` – Specify the DCDC_CORE Regulator voltage level, please refer to *spc_dcdc_voltage_level_t*.

static inline *spc_dcdc_voltage_level_t* SPC_GetLowPowerModeDCDCRegulatorVoltageLevel(*SPC_Type* *base)

Get DCDC_CORE Regulator voltage level in Low power mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator voltage level, please refer to *spc_dcdc_voltage_level_t*.

FSL_SPC_DRIVER_VERSION
SPC driver version 2.8.1.

SPC status enumeration.

Note: Some device(such as MCXA family) do not equip DCDC or System LDO, please refer to the reference manual to check.

Values:

enumerator kStatus_SPC_Busy

The SPC instance is busy executing any type of power mode transition.

enumerator kStatus_SPC_DCDCLowDriveStrengthIgnore

DCDC Low drive strength setting be ignored for LVD/HVD enabled.

enumerator kStatus_SPC_DCDCPulseRefreshModeIgnore

DCDC Pulse Refresh Mode drive strength setting be ignored for LVD/HVD enabled.

enumerator kStatus_SPC_SYSLDOOverDriveVoltageFail

SYS LDO regulate to Over drive voltage failed for SYS LDO HVD must be disabled.

enumerator kStatus_SPC_SYSLDOLowDriveStrengthIgnore

SYS LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator kStatus_SPC_CORELDOLowDriveStrengthIgnore

CORE LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator kStatus_SPC_BandgapModeWrong

Selected Bandgap Mode wrong.

enumerator kStatus_SPC_CORELDOVoltageWrong

Core LDO voltage is wrong.

enumerator kStatus_SPC_CORELDOVoltageSetFail

Core LDO voltage set fail.

enumerator kStatus_SPC_CORELDOVoltageDetectWrong

Settings of CORE_LDO voltage detection is not allowed.

enumerator kStatus_SPC_DCDCCoreLdoVoltageMismatch

Target voltage level of DCDC not equal to CORE_LDO.

enum _spc_voltage_detect_flags

Voltage Detect Status Flags.

Values:

enumerator kSPC_IOVDDHighVoltageDetectFlag

IO VDD High-Voltage detect flag.

enumerator kSPC_IOVDDLowVoltageDetectFlag

IO VDD Low-Voltage detect flag.

enumerator kSPC_SystemVDDHighVoltageDetectFlag

System VDD High-Voltage detect flag.

enumerator kSPC_SystemVDDLowVoltageDetectFlag

System VDD Low-Voltage detect flag.

enumerator kSPC_CoreVDDHighVoltageDetectFlag

Core VDD High-Voltage detect flag.

enumerator kSPC_CoreVDDLowVoltageDetectFlag

Core VDD Low-Voltage detect flag.

enum _spc_power_domains

SPC power domain isolation status.

Note: Some devices(such as MCXA family) do not contain WAKE Power Domain, please refer to the reference manual to check.

Values:

enumerator kSPC_MAINPowerDomainRetain

Peripherals and IO pads retain in MAIN Power Domain.

enumerator kSPC_WAKEPowerDomainRetain

Peripherals and IO pads retain in WAKE Power Domain.

enum _spc_analog_module_control

The enumeration of all analog module that can be controlled by SPC in active or low-power modes.

Note: Enumerations may not suitable for all devices, please check the specific device's RM for supported analog modules.

Values:

enumerator kSPC_controlVref

Enable/disable VREF in active or low-power modes.

enumerator kSPC_controlUsb3vDet

Enable/disable USB3V_Det in active or low-power modes.

enumerator kSPC_controlDac0

Enable/disable DAC0 in active or low-power modes.

enumerator kSPC_controlDac1

Enable/disable DAC1 in active or low-power modes.

enumerator kSPC_controlDac2

Enable/disable DAC2 in active or low-power modes.

enumerator kSPC_controlOpamp0

Enable/disable OPAMP0 in active or low-power modes.

enumerator kSPC_controlOpamp1

Enable/disable OPAMP1 in active or low-power modes.

enumerator kSPC_controlOpamp2

Enable/disable OPAMP2 in active or low-power modes.

enumerator kSPC_controlOpamp3

Enable/disable OPAMP3 in active or low-power modes.

enumerator kSPC_controlCmp0

Enable/disable CMP0 in active or low-power modes.

enumerator kSPC_controlCmp1

Enable/disable CMP1 in active or low-power modes.

enumerator kSPC_controlCmp2

Enable/disable CMP2 in active or low-power modes.

enumerator kSPC_controlCmp0Dac

Enable/disable CMP0_DAC in active or low-power modes.

enumerator kSPC_controlCmp1Dac

Enable/disable CMP1_DAC in active or low-power modes.

enumerator kSPC_controlCmp2Dac

Enable/disable CMP2_DAC in active or low-power modes.

enumerator kSPC_controlAllModules

Enable/disable all modules in active or low-power modes.

enum _spc_power_domain_id

The enumeration of spc power domain, the connected power domain is chip specific, please refer to chip's RM for details.

Values:

enumerator kSPC_PowerDomain0

Power domain0, the connected power domain is chip specific.

enumerator kSPC_PowerDomain1

Power domain1, the connected power domain is chip specific.

enum _spc_power_domain_low_power_mode

The enumeration of Power domain's low power mode.

Values:

enumerator kSPC_SleepWithSYSClockRunning

Power domain request SLEEP mode with SYS clock running.

enumerator kSPC_DeepSleepWithSysClockOff

Power domain request deep sleep mode with system clock off.

enumerator kSPC_PowerDownWithSysClockOff

Power domain request power down mode with system clock off.

enumerator kSPC_DeepPowerDownWithSysClockOff

Power domain request deep power down mode with system clock off.

enum _spc_lowPower_request_pin_polarity

SPC low power request output pin polarity.

Values:

enumerator kSPC_HighTruePolarity

Control the High Polarity of the Low Power Request Pin.

enumerator kSPC_LowTruePolarity

Control the Low Polarity of the Low Power Request Pin.

enum _spc_lowPower_request_output_override

SPC low power request output override.

Values:

enumerator kSPC_LowPowerRequestNotForced

Not Forced.

enumerator kSPC_LowPowerRequestReserved

Reserved.

enumerator kSPC_LowPowerRequestForcedLow

Forced Low (Ignore LowPower request output polarity setting.)

enumerator kSPC_LowPowerRequestForcedHigh

Forced High (Ignore LowPower request output polarity setting.)

enum _spc_bandgap_mode

SPC Bandgap mode enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_BandgapDisabled

Bandgap disabled.

enumerator kSPC_BandgapEnabledBufferDisabled

Bandgap enabled with Buffer disabled.

enumerator kSPC_BandgapEnabledBufferEnabled

Bandgap enabled with Buffer enabled.

enumerator kSPC_BandgapReserved

Reserved.

enum _spc_dcdc_voltage_level

DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

Note: kSPC_DCDC_RetentionVoltage not supported for all power modes.

Values:

enumerator kSPC_DCDC_RetentionVoltage

DCDC_CORE Regulator regulate to retention Voltage(Only supported in low power modes)

enumerator kSPC_DCDC_MidVoltage

DCDC_CORE Regulator regulate to Mid Voltage(1.0V).

enumerator kSPC_DCDC_NormalVoltage

DCDC_CORE Regulator regulate to Normal Voltage(1.1V).

enumerator kSPC_DCDC_OverdriveVoltage

DCDC_CORE Regulator regulate to Safe-Mode Voltage(1.2V).

enum _spc_dcdc_drive_strength

DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

Note: Different drive strength differ in these DCDC characteristics: Maximum load current Quiescent current Transient response.

Values:

enumerator kSPC_DCDC_PulseRefreshMode

DCDC_CORE Regulator Drive Strength set to Pulse Refresh Mode, This enum member is only useful for Low Power Mode config, please note that pulse refresh mode is invalid in SLEEP mode.

enumerator kSPC_DCDC_LowDriveStrength

DCDC_CORE regulator Drive Strength set to low.

enumerator kSPC_DCDC_NormalDriveStrength

DCDC_CORE regulator Drive Strength set to Normal.

enum _spc_sys_ldo_voltage_level

SYS LDO regulator voltage level enumeration in Active mode.

Values:

enumerator kSPC_SysLDO_NormalVoltage

SYS LDO VDD Regulator regulate to Normal Voltage(1.8V).

enumerator kSPC_SysLDO_OverDriveVoltage

SYS LDO VDD Regulator regulate to Over Drive Voltage(2.5V).

enum _spc_sys_ldo_drive_strength

SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_SysLDO_LowDriveStrength

SYS LDO VDD regulator Drive Strength set to low.

enumerator kSPC_SysLDO_NormalDriveStrength

SYS LDO VDD regulator Drive Strength set to Normal.

enum _spc_core_ldo_voltage_level

Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_CoreLDO_UnderDriveVoltage

Deprecated:

, to align with description of latest RM, please use kSPC_Core_LDO_RetentionVoltage as instead.

enumerator kSPC_Core_LDO_RetentionVoltage

Core LDO VDD regulator regulate to retention voltage, please note that only useful in low power modes and not all devices support this options please refer to devices' RM for details.

enumerator kSPC_CoreLDO_MidDriveVoltage

Core LDO VDD regulator regulate to Mid Drive Voltage.

enumerator kSPC_CoreLDO_NormalVoltage

Core LDO VDD regulator regulate to Normal Voltage.

enumerator kSPC_CoreLDO_OverDriveVoltage

Core LDO VDD regulator regulate to overdrive Voltage.

enum _spc_core_ldo_drive_strength

CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

Values:

enumerator kSPC_CoreLDO_LowDriveStrength

Core LDO VDD regulator Drive Strength set to low.

enumerator kSPC_CoreLDO_NormalDriveStrength

Core LDO VDD regulator Drive Strength set to Normal.

enum _spc_low_voltage_level_select

IO VDD Low-Voltage Level Select.

Values:

enumerator kSPC_LowVoltageNormalLevel

Deprecated:

, please use kSPC_LowVoltageHighRange as instead.

enumerator kSPC_LowVoltageSafeLevel

Deprecated:

, please use kSPC_LowVoltageLowRange as instead.

enumerator kSPC_LowVoltageHighRange

High range LVD threshold.

enumerator kSPC_LowVoltageLowRange

Low range LVD threshold.

enum _spc_sram_operate_voltage

The list of the operating voltage for the SRAM's read/write timing margin.

Values:

enumerator kSPC_sramOperateAt1P0V

SRAM configured for 1.0V operation.

enumerator kSPC_sramOperateAt1P1V

SRAM configured for 1.1V operation.

enumerator kSPC_sramOperateAt1P2V

SRAM configured for 1.2V operation.

typedef enum _spc_power_domain_id spc_power_domain_id_t

The enumeration of spc power domain, the connected power domain is chip specific, please refer to chip's RM for details.

typedef enum _spc_power_domain_low_power_mode spc_power_domain_low_power_mode_t

The enumeration of Power domain's low power mode.

typedef enum _spc_lowPower_request_pin_polarity spc_lowpower_request_pin_polarity_t

SPC low power request output pin polarity.

typedef enum _spc_lowPower_request_output_override spc_lowpower_request_output_override_t

SPC low power request output override.

typedef enum _spc_bandgap_mode spc_bandgap_mode_t

SPC Bandgap mode enumeration in Active mode or Low Power mode.

typedef enum _spc_dcdc_voltage_level spc_dcdc_voltage_level_t

DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

Note: kSPC_DCDC_RetentionVoltage not supported for all power modes.

typedef enum _spc_dcdc_drive_strength spc_dcdc_drive_strength_t

DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

Note: Different drive strength differ in these DCDC characteristics: Maximum load current
Quiescent current Transient response.

typedef enum _spc_sys_ldo_voltage_level spc_sys_ldo_voltage_level_t

SYS LDO regulator voltage level enumeration in Active mode.

`typedef enum _spc_sys_ldo_drive_strength` `spc_sys_ldo_drive_strength_t`
SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

`typedef enum _spc_core_ldo_voltage_level` `spc_core_ldo_voltage_level_t`
Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

`typedef enum _spc_core_ldo_drive_strength` `spc_core_ldo_drive_strength_t`
CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

`typedef enum _spc_low_voltage_level_select` `spc_low_voltage_level_select_t`
IO VDD Low-Voltage Level Select.

`typedef enum _spc_sram_operate_voltage` `spc_sram_operate_voltage_t`
The list of the operating voltage for the SRAM's read/write timing margin.

`typedef struct _spc_sram_voltage_config` `spc_sram_voltage_config_t`

`typedef struct _spc_lowpower_request_config` `spc_lowpower_request_config_t`
Low Power Request output pin configuration.

`typedef struct _spc_active_mode_core_ldo_option` `spc_active_mode_core_ldo_option_t`
Core LDO regulator options in Active mode.

`typedef struct _spc_active_mode_sys_ldo_option` `spc_active_mode_sys_ldo_option_t`
System LDO regulator options in Active mode.

`typedef struct _spc_active_mode_dcdc_option` `spc_active_mode_dcdc_option_t`
DCDC regulator options in Active mode.

`typedef struct _spc_lowpower_mode_core_ldo_option` `spc_lowpower_mode_core_ldo_option_t`
Core LDO regulator options in Low Power mode.

`typedef struct _spc_lowpower_mode_sys_ldo_option` `spc_lowpower_mode_sys_ldo_option_t`
System LDO regulator options in Low Power mode.

`typedef struct _spc_lowpower_mode_dcdc_option` `spc_lowpower_mode_dcdc_option_t`
DCDC regulator options in Low Power mode.

`typedef struct _spc_dcdc_burst_config` `spc_dcdc_burst_config_t`
DCDC Burst configuration.

Deprecated:

Do not recommend to use this structure.

`typedef struct _spc_voltage_detect_option` `spc_voltage_detect_option_t`
CORE/SYS/IO VDD Voltage Detect options.

`typedef struct _spc_core_voltage_detect_config` `spc_core_voltage_detect_config_t`
Core Voltage Detect configuration.

`typedef struct _spc_system_voltage_detect_config` `spc_system_voltage_detect_config_t`
System Voltage Detect Configuration.

`typedef struct _spc_io_voltage_detect_config` `spc_io_voltage_detect_config_t`
IO Voltage Detect Configuration.

`typedef struct _spc_active_mode_regulators_config` `spc_active_mode_regulators_config_t`
Active mode configuration.

`typedef struct _spc_lowpower_mode_regulators_config` `spc_lowpower_mode_regulators_config_t`
Low Power Mode configuration.

```
SPC_EVD_CFG_REG_EVDISO_SHIFT
SPC_EVD_CFG_REG_EVDLPISO_SHIFT
SPC_EVD_CFG_REG_EVDSTAT_SHIFT
SPC_EVD_CFG_REG_EVDISO(x)
SPC_EVD_CFG_REG_EVDLPISO(x)
SPC_EVD_CFG_REG_EVDSTAT(x)
```

```
struct _spc_sram_voltage_config
#include <fsl_spc.h>
```

Public Members

spc_sram_operate_voltage_t operateVoltage
Specifies the operating voltage for the SRAM's read/write timing margin.

bool requestVoltageUpdate
Used to control whether request an SRAM trim value change.

```
struct _spc_lowpower_request_config
#include <fsl_spc.h> Low Power Request output pin configuration.
```

Public Members

bool enable
Low Power Request Output enable.

spc_lowpower_request_pin_polarity_t polarity
Low Power Request Output pin polarity select.

spc_lowpower_request_output_override_t override
Low Power Request Output Override.

```
struct _spc_active_mode_core_ldo_option
#include <fsl_spc.h> Core LDO regulator options in Active mode.
```

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage
Core LDO Regulator Voltage Level selection in Active mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength
Core LDO Regulator Drive Strength selection in Active mode

```
struct _spc_active_mode_sys_ldo_option
#include <fsl_spc.h> System LDO regulator options in Active mode.
```

Public Members

spc_sys_ldo_voltage_level_t SysLDOVoltage
System LDO Regulator Voltage Level selection in Active mode.

spc_sys_ldo_drive_strength_t SysLDODriveStrength
System LDO Regulator Drive Strength selection in Active mode.

struct _spc_active_mode_dcdc_option
#include <fsl_spc.h> DCDC regulator options in Active mode.

Public Members

spc_dcdc_voltage_level_t DCDCVoltage
DCDC Regulator Voltage Level selection in Active mode.

spc_dcdc_drive_strength_t DCDCDriveStrength
DCDC_CORE Regulator Drive Strength selection in Active mode.

struct _spc_lowpower_mode_core_ldo_option
#include <fsl_spc.h> Core LDO regulator options in Low Power mode.

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage
Core LDO Regulator Voltage Level selection in Low Power mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength
Core LDO Regulator Drive Strength selection in Low Power mode

struct _spc_lowpower_mode_sys_ldo_option
#include <fsl_spc.h> System LDO regulator options in Low Power mode.

Public Members

spc_sys_ldo_drive_strength_t SysLDODriveStrength
System LDO Regulator Drive Strength selection in Low Power mode.

struct _spc_lowpower_mode_dcdc_option
#include <fsl_spc.h> DCDC regulator options in Low Power mode.

Public Members

spc_dcdc_voltage_level_t DCDCVoltage
DCDC Regulator Voltage Level selection in Low Power mode.

spc_dcdc_drive_strength_t DCDCDriveStrength
DCDC_CORE Regulator Drive Strength selection in Low Power mode.

struct _spc_dcdc_burst_config
#include <fsl_spc.h> DCDC Burst configuration.

Deprecated:

Do not recommend to use this structure.

Public Members

bool softwareBurstRequest
Enable/Disable DCDC Software Burst Request.

bool externalBurstRequest
Enable/Disable DCDC External Burst Request.

bool stabilizeBurstFreq

Enable/Disable DCDC frequency stabilization.

uint8_t freq

The frequency of the current burst.

struct _spc_voltage_detect_option

#include <fsl_spc.h> CORE/SYS/IO VDD Voltage Detect options.

Public Members

bool HVDInterruptEnable

CORE/SYS/IO VDD High Voltage Detect interrupt enable.

bool HVDRResetEnable

CORE/SYS/IO VDD High Voltage Detect reset enable.

bool LVDInterruptEnable

CORE/SYS/IO VDD Low Voltage Detect interrupt enable.

bool LVDRResetEnable

CORE/SYS/IO VDD Low Voltage Detect reset enable.

struct _spc_core_voltage_detect_config

#include <fsl_spc.h> Core Voltage Detect configuration.

Public Members

spc_voltage_detect_option_t option

Core VDD Voltage Detect option.

struct _spc_system_voltage_detect_config

#include <fsl_spc.h> System Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option

System VDD Voltage Detect option.

spc_low_voltage_level_select_t level

Deprecated:

, reserved for all devices, will removed in next release.

struct _spc_io_voltage_detect_config

#include <fsl_spc.h> IO Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option

IO VDD Voltage Detect option.

spc_low_voltage_level_select_t level

IO VDD Low-voltage level selection.

struct _spc_active_mode_regulators_config

#include <fsl_spc.h> Active mode configuration.

Public Members

spc_bandgap_mode_t bandgapMode
Specify bandgap mode in active mode.

bool lpBuff
Enable/disable CMP bandgap buffer.

spc_active_mode_dcdc_option_t DCDCOption
Specify DCDC configurations in active mode.

spc_active_mode_sys_ldo_option_t SysLDOOption
Specify System LDO configurations in active mode.

spc_active_mode_core_ldo_option_t CoreLDOOption
Specify Core LDO configurations in active mode.

struct _spc_lowpower_mode_regulators_config
#include <fsl_spc.h> Low Power Mode configuration.

Public Members

bool lpIREF
Enable/disable low power IREF in low power modes.

spc_bandgap_mode_t bandgapMode
Specify bandgap mode in low power modes.

bool lpBuff
Enable/disable CMP bandgap buffer in low power modes.

bool CoreIVS
Enable/disable CORE VDD internal voltage scaling.

spc_lowpower_mode_dcdc_option_t DCDCOption
Specify DCDC configurations in low power modes.

spc_lowpower_mode_sys_ldo_option_t SysLDOOption
Specify system LDO configurations in low power modes.

spc_lowpower_mode_core_ldo_option_t CoreLDOOption
Specify core LDO configurations in low power modes.

2.41 MCX_VBAT: Smart Power Switch

The enumeration of VBAT module status.

Values:

enumerator kStatus_VBAT_Fro16kNotEnabled
Internal 16kHz free running oscillator not enabled.

enumerator kStatus_VBAT_BandgapNotEnabled
Bandgap not enabled.

enumerator kStatus_VBAT_WrongCapacitanceValue
Wrong capacitance for selected oscillator mode.

enumerator kStatus_VBAT_ClockMonitorLocked
Clock monitor locked.

enumerator kStatus_VBAT_OSC32KNotReady
OSC32K not ready.

enumerator kStatus_VBAT_LDONotReady
LDO not ready.

enumerator kStatus_VBAT_TamperLocked
Tamper locked.

enum __vbat_status_flag
The enumeration of VBAT status flags.

Values:

enumerator kVBAT_StatusFlagPORDetect
VBAT domain has been reset

enumerator kVBAT_StatusFlagWakeupPin
A falling edge is detected on the wakeup pin.

enumerator kVBAT_StatusFlagBandgapTimer0
Bandgap Timer0 period reached.

enumerator kVBAT_StatusFlagBandgapTimer1
Bandgap Timer1 period reached.

enumerator kVBAT_StatusFlagLdoReady
LDO is enabled and ready.

enumerator kVBAT_StatusFlagOsc32kReady
OSC32k is enabled and clock is ready.

enumerator kVBAT_StatusFlagConfigDetect
Configuration error detected.

enumerator kVBAT_StatusFlagInterrupt0Detect
Interrupt 0 asserted.

enumerator kVBAT_StatusFlagInterrupt1Detect
Interrupt 1 asserted.

enumerator kVBAT_StatusFlagInterrupt2Detect
Interrupt 2 asserted.

enumerator kVBAT_StatusFlagInterrupt3Detect
Interrupt 2 asserted.

enum __vbat_interrupt_enable
The enumeration of VBAT interrupt enable.

Values:

enumerator kVBAT_InterruptEnablePORDetect
Enable POR detect interrupt.

enumerator kVBAT_InterruptEnableWakeupPin
Enable the interrupt when a falling edge is detected on the wakeup pin.

enumerator kVBAT_InterruptEnableBandgapTimer0
Enable the interrupt if Bandgap Timer0 period reached.

enumerator kVBAT__InterruptEnableBandgapTimer1
Enable the interrupt if Bandgap Timer1 period reached.

enumerator kVBAT__InterruptEnableLdoReady
Enable LDO ready interrupt.

enumerator kVBAT__InterruptEnableOsc32kReady
Enable OSC32K ready interrupt.

enumerator kVBAT__InterruptEnableConfigDetect
Enable configuration error detected interrupt.

enumerator kVBAT__InterruptEnableInterrupt0
Enable the interrupt0.

enumerator kVBAT__InterruptEnableInterrupt1
Enable the interrupt1.

enumerator kVBAT__InterruptEnableInterrupt2
Enable the interrupt2.

enumerator kVBAT__InterruptEnableInterrupt3
Enable the interrupt3.

enumerator kVBAT__AllInterruptsEnable
Enable all interrupts.

enum _vbat__wakeup__enable

The enumeration of VBAT wakeup enable.

Values:

enumerator kVBAT__WakeupEnablePORDetect
Enable POR detect wakeup.

enumerator kVBAT__WakeupEnableWakeupPin
Enable wakeup feature when a falling edge is detected on the wakeup pin.

enumerator kVBAT__WakeupEnableBandgapTimer0
Enable wakeup feature when bandgap timer0 period reached.

enumerator kVBAT__WakeupEnableBandgapTimer1
Enable wakeup feature when bandgap timer1 period reached.

enumerator kVBAT__WakeupEnableLdoReady
Enable wakeup when LDO ready.

enumerator kVBAT__WakeupEnableOsc32kReady
Enable wakeup when OSC32k ready.

enumerator kVBAT__WakeupEnableConfigDetect
Enable wakeup when configuration error detected.

enumerator kVBAT__WakeupEnableInterrupt0
Enable wakeup when interrupt0 asserted.

enumerator kVBAT__WakeupEnableInterrupt1
Enable wakeup when interrupt1 asserted.

enumerator kVBAT__WakeupEnableInterrupt2
Enable wakeup when interrupt2 asserted.

enumerator kVBAT_WakeupEnableInterrupt3
Enable wakeup when interrupt3 asserted.

enumerator kVBAT_AllWakeupEnable
Enable all wakeup.

enum __vbat_tamper_enable
The enumeration of VBAT tamper enable.

Values:

enumerator kVBAT_TamperEnablePOR
Enable tamper if POR asserted in STATUS register.

enumerator kVBAT_TamperEnableClockDetect
Enable tamper if clock monitor detect an error.

enumerator kVBAT_TamperEnableConfigDetect
Enable tamper if configuration error detected.

enumerator kVBAT_TamperEnableVoltageDetect
Enable tamper if voltage monitor detect an error.

enumerator kVBAT_TamperEnableTemperatureDetect
Enable tamper if temperature monitor detect an error.

enumerator kVBAT_TamperEnableSec0Detect
Enable tamper if security input 0 detect an error.

enum __vbat_bandgap_timer_id
The enumeration of bandgap timer id, VBAT support two bandgap timers.

Values:

enumerator kVBAT_BandgapTimer0
Bandgap Timer0.

enumerator kVBAT_BandgapTimer1
Bandgap Timer1.

enum __vbat_clock_enable
The enumeration of connections for OSC32K/FRO32K output clock to other modules.

Values:

enumerator kVBAT_EnableClockToDomain0
Enable clock to power domain0.

enumerator kVBAT_EnableClockToDomain1
Enable clock to power domain1.

enumerator kVBAT_EnableClockToDomain2
Enable clock to power domain2.

enumerator kVBAT_EnableClockToDomain3
Enable clock to power domain3.

enum __vbat_ram_array
The enumeration of SRAM arrays that controlled by VBAT. .

Values:

enumerator kVBAT_SramArray0
Specify SRAM array0 that controlled by VBAT.

enumerator kVBAT_SramArray1

Specify SRAM array1 that controlled by VBAT.

enumerator kVBAT_SramArray2

Specify SRAM array2 that controlled by VBAT.

enumerator kVBAT_SramArray3

Specify SRAM array3 that controlled by VBAT.

enum _vbat_bandgap_refresh_period

The enumeration of bandgap refresh period.

Values:

enumerator kVBAT_BandgapRefresh7P8125ms

Bandgap refresh every 7.8125ms.

enumerator kVBAT_BandgapRefresh15P625ms

Bandgap refresh every 15.625ms.

enumerator kVBAT_BandgapRefresh31P25ms

Bandgap refresh every 31.25ms.

enumerator kVBAT_BandgapRefresh62P5ms

Bandgap refresh every 62.5ms.

enum _vbat_bandgap_timer0_timeout_period

The enumeration of bandgap timer0 timeout period.

Values:

enumerator kVBAT_BangapTimer0Timeout1s

Bandgap timer0 timerout every 1s.

enumerator kVBAT_BangapTimer0Timeout500ms

Bandgap timer0 timerout every 500ms.

enumerator kVBAT_BangapTimer0Timeout250ms

Bandgap timer0 timerout every 250ms.

enumerator kVBAT_BangapTimer0Timeout125ms

Bandgap timer0 timerout every 125ms.

enumerator kVBAT_BangapTimer0Timeout62P5ms

Bandgap timer0 timerout every 62.5ms.

enumerator kVBAT_BangapTimer0Timeout31P25ms

Bandgap timer0 timerout every 31.25ms.

enum _vbat_osc32k_operate_mode

The enumeration of osc32k operate mode, including Bypass mode, low power switched mode and so on.

Values:

enumerator kVBAT_Osc32kEnabledToTransconductanceMode

Set to transconductance mode.

enumerator kVBAT_Osc32kEnabledToLowPowerBackupMode

Set to low power backup mode.

enumerator kVBAT_Osc32kEnabledToLowPowerSwitchedMode

Set to low power switched mode.

enum _vbat_osc32k_load_capacitance_select

The enumeration of OSC32K load capacitance.

Values:

enumerator kVBAT_Osc32kCrystalLoadCap0pF

Internal capacitance bank is enabled, set the internal capacitance to 0 pF.

enumerator kVBAT_Osc32kCrystalLoadCap2pF

Internal capacitance bank is enabled, set the internal capacitance to 2 pF.

enumerator kVBAT_Osc32kCrystalLoadCap4pF

Internal capacitance bank is enabled, set the internal capacitance to 4 pF.

enumerator kVBAT_Osc32kCrystalLoadCap6pF

Internal capacitance bank is enabled, set the internal capacitance to 6 pF.

enumerator kVBAT_Osc32kCrystalLoadCap8pF

Internal capacitance bank is enabled, set the internal capacitance to 8 pF.

enumerator kVBAT_Osc32kCrystalLoadCap10pF

Internal capacitance bank is enabled, set the internal capacitance to 10 pF.

enumerator kVBAT_Osc32kCrystalLoadCap12pF

Internal capacitance bank is enabled, set the internal capacitance to 12 pF.

enumerator kVBAT_Osc32kCrystalLoadCap14pF

Internal capacitance bank is enabled, set the internal capacitance to 14 pF.

enumerator kVBAT_Osc32kCrystalLoadCap16pF

Internal capacitance bank is enabled, set the internal capacitance to 16 pF.

enumerator kVBAT_Osc32kCrystalLoadCap18pF

Internal capacitance bank is enabled, set the internal capacitance to 18 pF.

enumerator kVBAT_Osc32kCrystalLoadCap20pF

Internal capacitance bank is enabled, set the internal capacitance to 20 pF.

enumerator kVBAT_Osc32kCrystalLoadCap22pF

Internal capacitance bank is enabled, set the internal capacitance to 22 pF.

enumerator kVBAT_Osc32kCrystalLoadCap24pF

Internal capacitance bank is enabled, set the internal capacitance to 24 pF.

enumerator kVBAT_Osc32kCrystalLoadCap26pF

Internal capacitance bank is enabled, set the internal capacitance to 26 pF.

enumerator kVBAT_Osc32kCrystalLoadCap28pF

Internal capacitance bank is enabled, set the internal capacitance to 28 pF.

enumerator kVBAT_Osc32kCrystalLoadCap30pF

Internal capacitance bank is enabled, set the internal capacitance to 30 pF.

enumerator kVBAT_Osc32kCrystalLoadCapBankDisabled

Internal capacitance bank is disabled.

enum _vbat_osc32k_start_up_time

The enumeration of start-up time of the oscillator.

Values:

enumerator kVBAT_Osc32kStartUpTime8Sec

Configure the start-up time as 8 seconds.

enumerator kVBAT_Osc32kStartUpTime4Sec

Configure the start-up time as 4 seconds.

enumerator kVBAT_Osc32kStartUpTime2Sec

Configure the start-up time as 2 seconds.

enumerator kVBAT_Osc32kStartUpTime1Sec

Configure the start-up time as 1 seconds.

enumerator kVBAT_Osc32kStartUpTime0P5Sec

Configure the start-up time as 0.5 seconds.

enumerator kVBAT_Osc32kStartUpTime0P25Sec

Configure the start-up time as 0.25 seconds.

enumerator kVBAT_Osc32kStartUpTime0P125Sec

Configure the start-up time as 0.125 seconds.

enumerator kVBAT_Osc32kStartUpTime0P5MSec

Configure the start-up time as 0.5 milliseconds.

enum _vbat_internal_module_supply

The enumeration of VBAT module supplies.

Values:

enumerator kVBAT_ModuleSuppliedByVddBat

VDD_BAT supplies VBAT modules.

enumerator kVBAT_ModuleSuppliedByVddSys

VDD_SYS supplies VBAT modules.

enum _vbat_clock_monitor_divide_trim

The enumeration of VBAT clock monitor divide trim value.

Values:

enumerator kVBAT_ClockMonitorOperateAt1kHz

Clock monitor operates at 1 kHz.

enumerator kVBAT_ClockMonitorOperateAt64Hz

Clock monitor operates at 64 Hz.

enum _vbat_clock_monitor_freq_trim

The enumeration of VBAT clock monitor frequency trim value used to adjust the clock monitor assert.

Values:

enumerator kVBAT_ClockMonitorAssert2Cycle

Clock monitor assert 2 cycles after expected edge.

enumerator kVBAT_ClockMonitorAssert4Cycle

Clock monitor assert 4 cycles after expected edge.

enumerator kVBAT_ClockMonitorAssert6Cycle

Clock monitor assert 8 cycles after expected edge.

enumerator kVBAT_ClockMonitorAssert8Cycle

Clock monitor assert 8 cycles after expected edge.

typedef enum _vbat_bandgap_refresh_period vbat_bandgap_refresh_period_t

The enumeration of bandgap refresh period.

`typedef enum _vbat_bandgap_timer0_timeout_period vbat_bandgap_timer0_timeout_period_t`
The enumeration of bandgap timer0 timeout period.

`typedef enum _vbat_osc32k_operate_mode vbat_osc32k_operate_mode_t`
The enumeration of osc32k operate mode, including Bypass mode, low power switched mode and so on.

`typedef enum _vbat_osc32k_load_capacitance_select vbat_osc32k_load_capacitance_select_t`
The enumeration of OSC32K load capacitance.

`typedef enum _vbat_osc32k_start_up_time vbat_osc32k_start_up_time_t`
The enumeration of start-up time of the oscillator.

`typedef enum _vbat_internal_module_supply vbat_internal_module_supply_t`
The enumeration of VBAT module supplies.

`typedef enum _vbat_clock_monitor_divide_trim vbat_clock_monitor_divide_trim_t`
The enumeration of VBAT clock monitor divide trim value.

`typedef enum _vbat_clock_monitor_freq_trim vbat_clock_monitor_freq_trim_t`
The enumeration of VBAT clock monitor frequency trim value used to adjust the clock monitor assert.

`typedef struct _vbat_fro16k_config vbat_fro16k_config_t`
The structure of internal 16kHz free running oscillator attributes.

`typedef struct _vbat_clock_monitor_config vbat_clock_monitor_config_t`
The structure of internal clock monitor, including divide trim and frequency trim.

`typedef struct _vbat_tamper_config vbat_tamper_config_t`
The structure of Tamper configuration.

`FSL_VBAT_DRIVER_VERSION`
VBAT driver version 2.3.1.

`VBAT_LDORAMC_RET_MASK`

`VBAT_LDORAMC_RET_SHIFT`

`VBAT_LDORAMC_RET(x)`

`kVBAT_EnableClockToVddBat`

`kVBAT_EnableClockToVddSys`

`kVBAT_EnableClockToVddWake`

`kVBAT_EnableClockToVddMain`

`void VBAT_ConfigFRO16k(VBAT_Type *base, const vbat_fro16k_config_t *config)`
Configure internal 16kHz free running oscillator, including enabel FRO16k, gate FRO16k output.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to `vbat_fro16k_config_t` structure.

`static inline void VBAT_EnableFRO16k(VBAT_Type *base, bool enable)`
Enable/disable internal 16kHz free running oscillator.

Parameters

- base – VBAT peripheral base address.

- enable – Used to enable/disable 16kHz FRO.
 - **true** Enable internal 16kHz free running oscillator.
 - **false** Disable internal 16kHz free running oscillator.

static inline bool VBAT__CheckFRO16kEnabled(VBAT_Type *base)

Check if internal 16kHz free running oscillator is enabled.

Parameters

- base – VBAT peripheral base address.

Return values

- true – The internal 16kHz Free running oscillator is enabled.
- false – The internal 16kHz Free running oscillator is disabled.

static inline void VBAT__UngateFRO16k(VBAT_Type *base, uint8_t connectionsMask)

Enable FRO16kHz output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The mask of modules that FRO16k is connected, should be the OR'ed value of vbat_clock_enable_t.

static inline void VBAT__GateFRO16k(VBAT_Type *base, uint8_t connectionsMask)

Disable FRO16kHz output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of vbat_clock_enable_t.

static inline void VBAT__LockFRO16kSettings(VBAT_Type *base)

Lock settings of internal 16kHz free running oscillator, please note that if locked 16kHz FRO's settings can not be updated until the next POR.

Note: Please note that the operation to ungate/gate FRO 16kHz output clock can not be locked by this function.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT__CheckFRO16kSettingsLocked(VBAT_Type *base)

Check if FRO16K settings are locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of FRO16k settings are locked, false in case of FRO16k settings are not locked.

static inline void VBAT__EnableCrystalOsc32k(VBAT_Type *base, bool enable)

Enable/disable 32K Crystal Oscillator.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable 32k Crystal Oscillator:

- **true** Enable crystal oscillator and polling status register to check clock is ready.
- **false** Disable crystal oscillator.

static inline void VBAT__BypassCrystalOsc32k(VBAT_Type *base, bool enableBypass)

Bypass 32k crystal oscillator, the clock is still output by oscillator but this clock is the same as clock provided on XTAL pin.

Note: In bypass mode, oscillator must be enabled; To exit bypass mode, oscillator must be disabled.

Parameters

- base – VBAT peripheral base address.
- enableBypass – Used to enter/exit bypass mode:
 - **true** Enter into bypass mode;
 - **false** Exit bypass mode.

static inline void VBAT__AdjustCrystalOsc32kAmplifierGain(VBAT_Type *base, uint8_t coarse)

Adjust 32k crystal oscillator amplifier gain.

Parameters

- base – VBAT peripheral base address.
- coarse – Specify amplifier coarse trim value.

status_t VBAT__SetCrystalOsc32kModeAndLoadCapacitance(VBAT_Type *base,
vbat_osc32k_operate_mode_t
operateMode,
vbat_osc32k_load_capacitance_select_t
xtalCap,
vbat_osc32k_load_capacitance_select_t
extalCap)

Set 32k crystal oscillator mode and load capacitance for the XTAL/EXTAL pin.

Parameters

- base – VBAT peripheral base address.
- operateMode – Specify the crystal oscillator mode, please refer to vbat_osc32k_operate_mode_t.
- xtalCap – Specify the internal capacitance for the XTAL pin from the capacitor bank.
- extalCap – Specify the internal capacitance for the EXTAL pin from the capacitor bank.

Return values

- kStatus_VBAT_WrongCapacitanceValue – The load capacitance value to set is not align with operate mode's requirements.
- kStatus_Success – Success to set operate mode and load capacitance.

static inline void VBAT__TrimCrystalOsc32kStartupTime(VBAT_Type *base,
vbat_osc32k_start_up_time_t
startupTime)

Trim 32k crystal oscillator startup time.

Parameters

- base – VBAT peripheral base address.
- startupTime – Specify the startup time of the oscillator.

```
static inline void VBAT_SetOsc32kSwitchModeComparatorTrimValue(VBAT_Type *base, uint8_t
                                                                comparatorTrimValue)
```

Set crystal oscillator comparator trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.
- comparatorTrimValue – Comparator trim value, ranges from 0 to 7.

```
static inline void VBAT_SetOsc32kSwitchModeDelayTrimValue(VBAT_Type *base, uint8_t
                                                         delayTrimValue)
```

Set crystal oscillator delay trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.
- delayTrimValue – Delay trim value, ranges from 0 to 15.

```
static inline void VBAT_SetOsc32kSwitchModeCapacitorTrimValue(VBAT_Type *base, uint8_t
                                                             capacitorTrimValue)
```

Set crystal oscillator capacitor trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.
- capacitorTrimValue – Capacitor value to trim, ranges from 0 to 3.

```
static inline void VBAT_LookOsc32kSettings(VBAT_Type *base)
```

Lock Osc32k settings, after locked all writes to the Oscillator registers are blocked.

Parameters

- base – VBAT peripheral base address.

```
static inline void VBAT_UnlockOsc32kSettings(VBAT_Type *base)
```

Unlock Osc32k settings.

Parameters

- base – VBAT peripheral base address.

```
static inline bool VBAT_CheckOsc32kSettingsLocked(VBAT_Type *base)
```

Check if osc32k settings are locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of osc32k settings are locked, false in case of osc32k settings are not locked.

```
static inline void VBAT_UngateOsc32k(VBAT_Type *base, uint8_t connectionsMask)
```

Enable OSC32k output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of vbat_clock_enable_t.

static inline void VBAT_GateOsc32k(VBAT_Type *base, uint8_t connectionsMask)
Disable OSC32k output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of vbat_clock_enable_t.

status_t VBAT_EnableBandgap(VBAT_Type *base, bool enable)
Enable/disable Bandgap.

Note: The FRO16K must be enabled before enabling the bandgap.

Note: This setting can be locked by VBAT_LockRamLdoSettings() function.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable bandgap.
 - **true** Enable the bandgap.
 - **false** Disable the bandgap.

Return values

- kStatus_Success – Success to enable/disable the bandgap.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable the bandgap due to FRO16k is not enabled previously.

static inline bool VBAT_CheckBandgapEnabled(VBAT_Type *base)
Check if bandgap is enabled.

Parameters

- base – VBAT peripheral base address.

Return values

- true – The bandgap is enabled.
- false – The bandgap is disabled.

static inline void VBAT_EnableBandgapRefreshMode(VBAT_Type *base, bool
enableRefreshMode)

Enable/disable bandgap low power refresh mode.

Note: For lowest power consumption, refresh mode must be enabled.

Note: This setting can be locked by VBAT_LockRamLdoSettings() function.

Parameters

- base – VBAT peripheral base address.
- enableRefreshMode – Used to enable/disable bandgap low power refresh mode.
 - **true** Enable bandgap low power refresh mode.

- **false** Disable bandgap low power refresh mode.

status_t VBAT_EnableBackupSRAMRegulator(VBAT_Type *base, bool enable)
Enable/disable Backup RAM Regulator(RAM_LDO).

Note: This setting can be locked by VBAT_LockRamLdoSettings() function.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable RAM_LDO.
 - **true** Enable backup SRAM regulator.
 - **false** Disable backup SRAM regulator.

Return values

- kStatusSuccess – Success to enable/disable backup SRAM regulator.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable backup SRAM regulator due to FRO16k is not enabled previously.
- kStatus_VBAT_BandgapNotEnabled – Fail to enable backup SRAM regulator due to the bandgap is not enabled previously.

static inline void VBAT_LockRamLdoSettings(VBAT_Type *base)

Lock settings of RAM_LDO, please note that if locked then RAM_LDO's settings can not be updated until the next POR.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT_CheckRamLdoSettingsLocked(VBAT_Type *base)

Check if RAM_LDO settings is locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of RAM_LDO settings are locked, false in case of RAM_LDO settings are unlocked.

status_t VBAT_SwitchSRAMPowerByLDOSRAM(VBAT_Type *base)

Switch the SRAM to be powered by LDO_RAM.

Note: This function can be used to switch the SRAM to the VBAT retention supply at any time, but please note that the SRAM must not be accessed during this time.

Note: Invoke this function to switch power supply before switching off external power.

Note: RAM_LDO must be enabled before invoking this function.

Note: To access the SRAM arrays retained by the LDO_RAM, please invoke VBAT_SwitchSRAMPowerBySocSupply(), after external power is switched back on.

Parameters

- `base` – VBAT peripheral base address.

Return values

- `kStatusSuccess` – Success to Switch SRAM powered by VBAT.
- `kStatus_VBAT_Fro16kNotEnabled` – Fail to switch SRAM powered by VBAT due to FRO16K not enabled previously.

```
static inline void VBAT__SwitchSRAMPowerBySocSupply(VBAT_Type *base)
```

Switch the RAM to be powered by Soc Supply in software mode.

Parameters

- `base` – VBAT peripheral base address.

```
static inline void VBAT__PowerOffSRAMsInLowPowerModes(VBAT_Type *base, uint8_t  
sramMask)
```

Power off selected SRAM array in low power modes.

Parameters

- `base` – VBAT peripheral base address.
- `sramMask` – The mask of SRAM array to power off, should be the OR'ed value of `vbat_ram_array_t`.

```
static inline void VBAT__RetainSRAMsInLowPowerModes(VBAT_Type *base, uint8_t sramMask)
```

Retain selected SRAM array in low power modes.

Parameters

- `base` – VBAT peripheral base address.
- `sramMask` – The mask of SRAM array to retain, should be the OR'ed value of `vbat_ram_array_t`.

```
static inline void VBAT__EnableSRAMIsolation(VBAT_Type *base, bool enable)
```

Enable/disable SRAM isolation.

Parameters

- `base` – VBAT peripheral base address.
- `enable` – Used to enable/disable SRAM violation.
 - **true** SRAM will be isolated.
 - **false** SRAM state follows the SoC power modes.

```
status_t VBAT__EnableBandgapTimer(VBAT_Type *base, bool enable, uint8_t timerIdMask)
```

Enable/disable Bandgap timer.

Note: The bandgap timer is available when the bandgap is enabled and are clocked by the FRO16k.

Parameters

- `base` – VBAT peripheral base address.
- `enable` – Used to enable/disable bandgap timer.
- `timerIdMask` – The mask of bandgap timer Id, should be the OR'ed value of `vbat_bandgap_timer_id_t`.

Return values

- `kStatus_Success` – Success to enable/disable selected bandgap timer.
- `kStatus_VBAT_Fro16kNotEnabled` – Fail to enable/disable selected bandgap timer due to FRO16k not enabled previously.
- `kStatus_VBAT_BandgapNotEnabled` – Fail to enable/disable selected bandgap timer due to bandgap not enabled previously.

```
void VBAT_SetBandgapTimer0TimeoutValue(VBAT_Type *base,  
                                       vbat_bandgap_timer0_timeout_period_t  
                                       timeoutPeriod)
```

Set bandgap timer0 timeout value.

Note: The timeout value can only be changed when the timer is disabled.

Parameters

- `base` – VBAT peripheral base address.
- `timeoutPeriod` – Bandgap timer timeout value, please refer to `vbat_bandgap_timer0_timeout_period_t`.

```
void VBAT_SetBandgapTimer1TimeoutValue(VBAT_Type *base, uint32_t timeoutPeriod)
```

Set bandgap timer1 timeout value.

Note: The timeout value can only be changed when the timer is disabled.

Parameters

- `base` – VBAT peripheral base address.
- `timeoutPeriod` – The bandgap timerout 1 period, in number of seconds, ranging from 0 to 65535s.

```
static inline void VBAT_SwitchVBATModuleSupplyActiveMode(VBAT_Type *base,  
                                                         vbat_internal_module_supply_t  
                                                         supply)
```

Control the VBAT internal switch in active mode, VBAT modules can be supplied by VDD_BAT and VDD_SYS.

Parameters

- `base` – VBAT peripheral base address.
- `supply` – Used to control the VBAT internal switch.

```
static inline vbat_internal_module_supply_t VBAT_GetVBATModuleSupply(VBAT_Type *base)
```

Get VBAT module supply in active mode.

Parameters

- `base` – VBAT peripheral base address.

Returns

VDD_SYS supplies VBAT modules or VDD_BAT supplies VBAT modules, in type of `vbat_internal_module_supply_t`.

```
static inline void VBAT_SwitchVBATModuleSupplyLowPowerMode(VBAT_Type *base,  
                                                           vbat_internal_module_supply_t  
                                                           supply)
```

Control the VBAT internal switch in low power modes.

Note: If VBAT modules are supplied by VDD_SYS in low power modes, VBAT module will also supplied by VDD_SYS in active mode.

Parameters

- base – VBAT peripheral base address.
- supply – Used to specify which voltage input supply VBAT modules in low power mode.

static inline void VBAT_LockSwitchControl(VBAT_Type *base)

Lock switch control, if locked all writes to the switch registers will be blocked.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT_UnlockSwitchControl(VBAT_Type *base)

Unlock switch control.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT_CheckSwitchControlLocked(VBAT_Type *base)

Check if switch control is locked.

Parameters

- base – VBAT peripheral base address.

Return values

- false – switch control is not locked.
- true – switch control is locked, any writes to related registers are blocked.

status_t VBAT_InitClockMonitor(VBAT_Type *base, const vbat_clock_monitor_config_t *config)

Initialize the VBAT clock monitor, enable clock monitor and set the clock monitor configuration.

Note: Both FRO16K and OSC32K should be enabled and stable before invoking this function.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to vbat_clock_monitor_config_t structure.

Return values

- kStatus_Success – Clock monitor is initialized successfully.
- kStatus_VBAT_Fro16kNotEnabled – FRO16K is not enabled.
- kStatus_VBAT_Osc32kNotReady – OSC32K is not ready.
- kStatus_VBAT_ClockMonitorLocked – Clock monitor is locked.

status_t VBAT_DeinitMonitor(VBAT_Type *base)

Deinitialize the VBAT clock monitor.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatus_Success – Clock monitor is de-initialized successfully.
- kStatus_VBAT_ClockMonitorLocked – Control of Clock monitor is locked.

static inline void VBAT__EnableClockMonitor(VBAT_Type *base, bool enable)

Enable/disable clock monitor.

- false: disable clock monitor.

Parameters

- base – VBAT peripheral base address.
- enable – Switcher to enable/disable clock monitor:
 - true: enable clock monitor;

static inline void VBAT__SetClockMonitorDivideTrim(VBAT_Type *base,
vbat_clock_monitor_divide_trim_t
divideTrim)

Set clock monitor's divide trim, available value is kVBAT_ClockMonitorOperateAt1kHz and kVBAT_ClockMonitorOperateAt64Hz.

Parameters

- base – VBAT peripheral base address.
- divideTrim – Specify divide trim value, please refer to vbat_clock_monitor_divide_trim_t.

static inline void VBAT__SetClockMonitorFrequencyTrim(VBAT_Type *base,
vbat_clock_monitor_freq_trim_t
freqTrim)

Set clock monitor's frequency trim, available value is kVBAT_ClockMonitorAssert2Cycle, kVBAT_ClockMonitorAssert4Cycle, kVBAT_ClockMonitorAssert6Cycle and kVBAT_ClockMonitorAssert8Cycle.

Parameters

- base – VBAT peripheral base address.
- freqTrim – Specify frequency trim value, please refer to vbat_clock_monitor_freq_trim_t.

static inline void VBAT__LockClockMonitorControl(VBAT_Type *base)

Lock clock monitor enable/disable control.

Note: If locked, it is not allowed to change clock monitor enable/disable control.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT__UnlockClockMonitorControl(VBAT_Type *base)

Unlock clock monitor enable/disable control.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT__CheckClockMonitorControlLocked(VBAT_Type *base)
Check if clock monitor enable/disable control is locked.

Note: If locked, it is not allowed to change clock monitor enable/disable control.

Parameters

- base – VBAT peripheral base address.

Return values

- false – clock monitor enable/disable control is not locked.
- true – clock monitor enable/disable control is locked, any writes to related registers are blocked.

status_t VBAT__InitTamper(VBAT_Type *base, const vbat_tamper_config_t *config)
Initialize tamper control.

Note: Both FRO16K and bandgap should be enabled before calling this function.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to vbat_tamper_config_t structure.

Return values

- kStatus_Success – Tamper is initialized successfully.
- kStatus_VBAT_TamperLocked – Tamper control is locked.
- kStatus_VBAT_BandgapNotEnabled – Bandgap is not enabled.
- kStatus_VBAT_Fro16kNotEnabled – FRO 16K is not enabled.

status_t VBAT__DeinitTamper(VBAT_Type *base)
De-initialize tamper control.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatus_Success – Tamper is de-initialized successfully.
- kStatus_VBAT_TamperLocked – Tamper control is locked.

static inline void VBAT__EnableTamper(VBAT_Type *base, uint32_t tamperEnableMask)
Enable tampers for VBAT.

Parameters

- base – VBAT peripheral base address.
- tamperEnableMask – Mask of tamper to be enabled, should be the OR'ed value of _vbat_tamper_enable.

static inline void VBAT__DisableTamper(VBAT_Type *base, uint32_t tamperEnableMask)
Disable tampers for VBAT.

Parameters

- base – VBAT peripheral base address.

- `tamperEnableMask` – Mask of tamper to be disabled, should be the OR'ed value of `_vbat_tamper_enable`.

static inline uint32_t VBAT_GetTamperEnableInfo(VBAT_Type *base)

Get tamper enable information.

Parameters

- `base` – VBAT peripheral base address.

Returns

Mask of tamper enable information, should be the OR'ed value of `_vbat_tamper_enable`.

static inline void VBAT_LockTamperControl(VBAT_Type *base)

Lock tamper control, if locked, it is not allowed to change tamper control.

Parameters

- `base` – VBAT peripheral base address.

static inline void VBAT_UnlockTamperControl(VBAT_Type *base)

Unlock tamper control.

Parameters

- `base` – VBAT peripheral base address.

static inline bool VBAT_CheckTamperControlLocked(VBAT_Type *base)

Check if tamper control is locked.

Parameters

- `base` – VBAT peripheral base address.

Return values

- `false` – Tamper control is not locked.
- `true` – Tamper control is locked, any writes to related registers are blocked.

static inline uint32_t VBAT_GetStatusFlags(VBAT_Type *base)

Get VBAT status flags.

Parameters

- `base` – VBAT peripheral base address.

Returns

The asserted status flags, should be the OR'ed value of `vbat_status_flag_t`.

static inline void VBAT_ClearStatusFlags(VBAT_Type *base, uint32_t mask)

Clear VBAT status flags.

Parameters

- `base` – VBAT peripheral base address.
- `mask` – The mask of status flags to be cleared, should be the OR'ed value of `vbat_status_flag_t` except `kVBAT_StatusFlagLdoReady`, `kVBAT_StatusFlagOsc32kReady`, `kVBAT_StatusFlagInterrupt0Detect`, `kVBAT_StatusFlagInterrupt1Detect`, `kVBAT_StatusFlagInterrupt2Detect`, `kVBAT_StatusFlagInterrupt3Detect`.

static inline void VBAT_EnableInterrupts(VBAT_Type *base, uint32_t mask)

Enable interrupts for the VBAT module, such as POR detect interrupt, Wakeup Pin interrupt and so on.

Parameters

- `base` – VBAT peripheral base address.
- `mask` – The mask of interrupts to be enabled, should be the OR'ed value of `vbat_interrupt_enable_t`.

static inline void VBAT__DisableInterrupts(VBAT_Type *base, uint32_t mask)

Disable interrupts for the VBAT module, such as POR detect interrupt, wakeup pin interrupt and so on.

Parameters

- `base` – VBAT peripheral base address.
- `mask` – The mask of interrupts to be disabled, should be the OR'ed value of `vbat_interrupt_enable_t`.

static inline void VBAT__EnableWakeup(VBAT_Type *base, uint32_t mask)

Enable wakeup for the VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- `base` – VBAT peripheral base address.
- `mask` – The mask of enumerators in `vbat_wakeup_enable_t`.

static inline void VBAT__DisableWakeup(VBAT_Type *base, uint32_t mask)

Disable wakeup for VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- `base` – VBAT peripheral base address.
- `mask` – The mask of enumerators in `vbat_wakeup_enable_t`.

static inline void VBAT__LockInterruptWakeupSettings(VBAT_Type *base)

Lock VBAT interrupt and wakeup settings, please note that if locked the interrupt and wakeup settings can not be updated until the next POR.

Parameters

- `base` – VBAT peripheral base address.

static inline void VBAT__SetWakeupPinDefaultState(VBAT_Type *base, bool assert)

Set the default state of the WAKEUP_b pin output when no enabled wakeup source is asserted.

Parameters

- `base` – VBAT peripheral base address.
- `assert` – Used to set default state of the WAKEUP_b pin output:
 - **true** WAKEUP_b output state is logic one;
 - **false** WAKEUP_b output state is logic zero.

struct __vbat_fro16k_config

#include <fsl_vbat.h> The structure of internal 16kHz free running oscillator attributes.

Public Members

bool enableFRO16k

Enable/disable internal 16kHz free running oscillator.

uint8_t enabledConnectionsMask

The mask of connected modules to enable FRO16k clock output.

struct __vbat_clock_monitor_config

#include <fsl_vbat.h> The structure of internal clock monitor, including divide trim and frequency trim.

Public Members

vbat_clock_monitor_freq_trim_t freqTrim

Frequency trim value used to adjust the clock monitor assert, please refer to vbat_clock_monitor_freq_trim_t.

bool lock

Lock the clock monitor control after enabled.

struct __vbat_tamper_config

#include <fsl_vbat.h> The structure of Tamper configuration.

Public Members

bool enableVoltageDetect

Enable/disable voltage detection.

bool enableTemperatureDetect

Enable/disable temperature detection.

bool lock

Lock the tamper control after enabled.

2.42 OPAMP: Operational Amplifier

void OPAMP_Init(OPAMP_Type *base, const opamp_config_t *config)

Initialize OPAMP instance.

Parameters

- base – OPAMP peripheral base address.
- config – The pointer to opamp_config_t.

void OPAMP_Deinit(OPAMP_Type *base)

De-initialize OPAMP instance.

Parameters

- base – OPAMP peripheral base address.

void OPAMP_GetDefaultConfig(opamp_config_t *config)

Get default configuration of OPAMP.

```
config->enable    = false;
config->compCap    = kOPAMP_FitGain2x;
config->biasCurrent = kOPAMP_NoChange;
```

Parameters

- config – The pointer to opamp_config_t.

```
static inline void OPAMP_SetCompensationCapcitor(OPAMP_Type *base, uint8_t compCap)
```

This function is used to set OPAMP compensation capcitor.

Parameters

- base – OPAMP peripheral base address.
- compCap – The value of compensation capcitor.

```
static inline void OPAMP_SetBiasCurrent(OPAMP_Type *base, uint8_t biasCurrent)
```

This function is used to set the OPAMP bias current.

Parameters

- base – OPAMP peripheral base address.
- biasCurrent – The value of bias current.

```
static inline void OPAMP_Enable(OPAMP_Type *base, bool enable)
```

This function is used to enable or disable the OPAMP.

Parameters

- base – OPAMP peripheral base address.
- enable – Decides whether to enable or disable the OPAMP.
 - **true** Enable the OPAMP.
 - **false** Disable the OPAMP.

```
FSL_OPAMP_DRIVER_VERSION
```

OPAMP driver version.

```
enum __opamp_comp_cap
```

The enumeration provides the selection of the OPAMP compensation capcitor, choose different option to fit different gains.

Values:

```
enumerator kOPAMP_FitGain2x
```

Fit 2x gains.

```
enumerator kOPAMP_FitGain4x
```

Fit 4x gains.

```
enumerator kOPAMP_FitGain8x
```

Fit 2x gains.

```
enumerator kOPAMP_FitGain16x
```

Fit 16x gains.

```
enum __opamp_bias_current
```

The enumeration provides the selection of the OPAMP bias current, choose different option to change power consumption.

Values:

```
enumerator kOPAMP_NoChange
```

Keep power consumption constant.

```
enumerator kOPAMP_ChangeToQuarter
```

Reduce power consumption to 1/4.

```
enumerator kOPAMP_ChangeToHalf
```

Reduce power consumption to 1/2.

enumerator kOPAMP_ChangeToDouble

Double the power consumption.

typedef enum _opamp_comp_cap opamp_comp_cap_t

The enumeration provides the selection of the OPAMP compensation capacitor, choose different option to fit different gains.

typedef enum _opamp_bias_current opamp_bias_current_t

The enumeration provides the selection of the OPAMP bias current, choose different option to change power consumption.

typedef struct _opamp_config opamp_config_t

OPAMP configuration.

struct __opamp_config

#include <fsl_opamp.h> OPAMP configuration.

Public Members

bool enable

Decides whether to enable or disable OPAMP.

uint8_t compCap

Compensation capacitor selection.

uint8_t biasCurrent

Bias current selection.

2.43 OSTIMER: OS Event Timer Driver

void OSTIMER_Init(OSTIMER_Type *base)

Initializes an OSTIMER by turning its bus clock on.

void OSTIMER_Deinit(OSTIMER_Type *base)

Deinitializes a OSTIMER instance.

This function shuts down OSTIMER bus clock

Parameters

- base – OSTIMER peripheral base address.

uint64_t OSTIMER_GrayToDecimal(uint64_t gray)

Translate the value from gray-code to decimal.

Parameters

- gray – The gray value input.

Returns

The decimal value.

static inline uint64_t OSTIMER_DecimalToGray(uint64_t dec)

Translate the value from decimal to gray-code.

Parameters

- dec – The decimal value.

Returns

The gray code of the input value.

uint32_t OSTIMER_GetStatusFlags(OSTIMER_Type *base)

Get OSTIMER status Flags.

This returns the status flag. Currently, only match interrupt flag can be got.

Parameters

- base – OSTIMER peripheral base address.

Returns

status register value

void OSTIMER_ClearStatusFlags(OSTIMER_Type *base, uint32_t mask)

Clear Status Interrupt Flags.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- base – OSTIMER peripheral base address.
- mask – Clear bit mask.

Returns

none

status_t OSTIMER_SetMatchRawValue(OSTIMER_Type *base, uint64_t count, *ostimer_callback_t* cb)

Set the match raw value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central EVTIMER. Please note that, the data format may be gray-code, if so, please using OSTIMER_SetMatchValue().

Parameters

- base – OSTIMER peripheral base address.
- count – OSTIMER timer match value.(Value may be gray-code format)
- cb – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- kStatus_Success -- Set match raw value and enable interrupt Successfully.
- kStatus_Fail -- Set match raw value fail.

status_t OSTIMER_SetMatchValue(OSTIMER_Type *base, uint64_t count, *ostimer_callback_t* cb)

Set the match value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central OS TIMER.

Parameters

- base – OSTIMER peripheral base address.
- count – OSTIMER timer match value.(Value is decimal format, and this value will be translate to Gray code in API if the IP counter is gray encoded.)
- cb – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- kStatus_Success -- Set match value and enable interrupt Successfully.

- kStatus_Fail – - Set match value fail.

static inline void OSTIMER_SetMatchRegister(OSTIMER_Type *base, uint64_t value)

Set value to OSTIMER MATCH register directly.

This function writes the input value to OSTIMER MATCH register directly, it does not touch any other registers. Note that, the data format is gray-code. The function OSTIMER_DecimalToGray could convert decimal value to gray code.

Parameters

- base – OSTIMER peripheral base address.
- value – OSTIMER timer match value (Value is gray-code format).

static inline uint64_t OSTIMER_GetMatchRegister(OSTIMER_Type *base)

Get the match value from OSTIMER.

This function will get the match value from OSTIMER. The value of timer match is gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of match register, data format is gray code.

static inline uint64_t OSTIMER_GetMatchValue(OSTIMER_Type *base)

Get the match value from OSTIMER.

This function will get a match value from OSTIMER.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of match register.

static inline void OSTIMER_EnableMatchInterrupt(OSTIMER_Type *base)

Enable the OSTIMER counter match interrupt.

Enable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- base – OSTIMER peripheral base address.

static inline void OSTIMER_DisableMatchInterrupt(OSTIMER_Type *base)

Disable the OSTIMER counter match interrupt.

Disable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- base – OSTIMER peripheral base address.

static inline uint64_t OSTIMER_GetCurrentTimerRawValue(OSTIMER_Type *base)

Get current timer raw count value from OSTIMER.

This function will get the timer count value from OS timer register. The raw value of timer count may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of OSTIMER, may be gray code format.

uint64_t OSTIMER_GetCurrentValue(OSTIMER_Type *base)

Get current timer count value from OSTIMER.

This function will get a decimal timer count value. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of OSTIMER which will be formatted to decimal value.

static inline uint64_t OSTIMER_GetCaptureRawValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a captured value from OSTIMER. The Raw value of timer capture may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of capture register, data format may be gray code.

uint64_t OSTIMER_GetCaptureValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a capture decimal-value from OSTIMER. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of capture register, data format is decimal.

void OSTIMER_HandleIRQ(OSTIMER_Type *base, *ostimer_callback_t* cb)

OS timer interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in OSTIMER_SetMatchValue()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – OS timer peripheral base address.
- cb – callback scheduled for this instance of OS timer

Returns

none

FSL_OSTIMER_DRIVER_VERSION

OSTIMER driver version.

enum *_ostimer_flags*

OSTIMER status flags.

Values:

enumerator kOSTIMER_MatchInterruptFlag

Match interrupt flag bit, sets if the match value was reached.

```
typedef void (*ostimer_callback_t)(void)
    ostimer callback function.
```

2.44 PORT: Port Control and Interrupts

```
static inline void PORT_GetVersionInfo(PORT_Type *base, port_version_info_t *info)
    Get PORT version information.
```

Parameters

- base – PORT peripheral base pointer
- info – PORT version information

```
static inline void PORT_SecletPortVoltageRange(PORT_Type *base, port_voltage_range_t range)
    Get PORT version information.
```

Note: : PORTA_CONFIG[RANGE] controls the voltage ranges of Port A, B, and C. Read or write PORTB_CONFIG[RANGE] and PORTC_CONFIG[RANGE] does not take effect.

Parameters

- base – PORT peripheral base pointer
- range – port voltage range

```
static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t
    *config)
```

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const
    port_pin_config_t *config)
```

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.


```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask,
                                                    port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - #kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - #kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - #kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - #kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - #kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - #kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - #kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - #kPORT_InterruptLogicZero : Interrupt when logic zero.
 - #kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - #kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - #kPORT_InterruptEitherEdge : Interrupt on either edge.
 - #kPORT_InterruptLogicOne : Interrupt when logic one.
 - #kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - #kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

```
static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)
```

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the `PORT_SetPinsConfig`, because the `PORT_SetPinsConfig` need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : `kPORT_PinDisabledOrAnalog`). This function is recommended to use to reset the pin mux

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `mux` – pin muxing slot selection.
 - `kPORT_PinDisabledOrAnalog`: Pin disabled or work in analog function.
 - `kPORT_MuxAsGpio` : Set as GPIO.
 - `kPORT_MuxAlt2` : chip-specific.
 - `kPORT_MuxAlt3` : chip-specific.
 - `kPORT_MuxAlt4` : chip-specific.
 - `kPORT_MuxAlt5` : chip-specific.
 - `kPORT_MuxAlt6` : chip-specific.
 - `kPORT_MuxAlt7` : chip-specific.

```
static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)
```

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `mask` – PORT pin number macro.
- `enable` – PORT digital filter configuration.

```
static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const  
                                              port_digital_filter_config_t *config)
```

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `config` – PORT digital filter configuration structure.

```
static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
```

Configures the port pin drive strength.

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `strength` – PORT pin drive strength
 - `kPORT_LowDriveStrength` = 0U - Low-drive strength is configured.
 - `kPORT_HighDriveStrength` = 1U - High-drive strength is configured.

```
static inline void PORT_EnablePinDoubleDriveStrength(PORT_Type *base, uint32_t pin, bool enable)
```

Enables the port pin double drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- enable – PORT pin drive strength configuration.

```
static inline void PORT_SetPinPullValue(PORT_Type *base, uint32_t pin, uint8_t value)
```

Configures the port pin pull value.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- value – PORT pin pull value
 - kPORT_LowPullResistor = 0U - Low internal pull resistor value is selected.
 - kPORT_HighPullResistor = 1U - High internal pull resistor value is selected.

```
static inline uint32_t PORT_GetEFTDetectFlags(PORT_Type *base)
```

Get EFT detect flags.

Parameters

- base – PORT peripheral base pointer

Returns

EFT detect flags

```
static inline void PORT_EnableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)
```

Enable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

```
static inline void PORT_DisableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)
```

Disable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

```
static inline void PORT_ClearAllLowEFTDetectors(PORT_Type *base)
```

Clear all low EFT detector.

Note: : Port B and Port C pins share the same EFT detector clear control from PORTC_EDCR register. Any write to the PORTB_EDCR does not take effect.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllHighEFTDetectors(PORT_Type *base)

Clear all high EFT detector.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum __port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum __port_pull_value

Internal resistor pull value selection.

Values:

enumerator kPORT_LowPullResistor

Low internal pull resistor value is selected.

enumerator kPORT_HighPullResistor

High internal pull resistor value is selected.

enum __port_slew_rate

Slew rate selection.

Values:

enumerator kPORT_FastSlewRate

Fast slew rate is configured.

enumerator kPORT_SlowSlewRate

Slow slew rate is configured.

enum __port_open_drain_enable

Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable

Open drain output is disabled.

enumerator kPORT_OpenDrainEnable

Open drain output is enabled.

enum __port_passive_filter_enable

Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable

Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum __port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum __port_drive_strength1
Configures the drive strength1.

Values:

enumerator kPORT_NormalDriveStrength
Normal drive strength

enumerator kPORT_DoubleDriveStrength
Double drive strength

enum __port_input_buffer
input buffer disable/enable.

Values:

enumerator kPORT_InputBufferDisable
Digital input is disabled

enumerator kPORT_InputBufferEnable
Digital input is enabled

enum __port_invet_input
Digital input is not inverted or it is inverted.

Values:

enumerator kPORT_InputNormal
Digital input is not inverted

enumerator kPORT_InputInvert
Digital input is inverted

enum __port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum __port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog
Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio

Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0

Chip-specific

enumerator kPORT_MuxAlt1

Chip-specific

enumerator kPORT_MuxAlt2

Chip-specific

enumerator kPORT_MuxAlt3

Chip-specific

enumerator kPORT_MuxAlt4

Chip-specific

enumerator kPORT_MuxAlt5

Chip-specific

enumerator kPORT_MuxAlt6

Chip-specific

enumerator kPORT_MuxAlt7

Chip-specific

enumerator kPORT_MuxAlt8

Chip-specific

enumerator kPORT_MuxAlt9

Chip-specific

enumerator kPORT_MuxAlt10

Chip-specific

enumerator kPORT_MuxAlt11

Chip-specific

enumerator kPORT_MuxAlt12

Chip-specific

enumerator kPORT_MuxAlt13

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum __port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

enum *_port_voltage_range*

PORT voltage range.

Values:

enumerator *kPORT_VoltageRange1Dot71V_3Dot6V*

Port voltage range is 1.71 V - 3.6 V.

enumerator *kPORT_VoltageRange2Dot70V_3Dot6V*

Port voltage range is 2.70 V - 3.6 V.

typedef enum *_port_mux* *port_mux_t*

Pin mux selection.

typedef enum *_port_digital_filter_clock_source* *port_digital_filter_clock_source_t*

Digital filter clock source selection.

typedef struct *_port_digital_filter_config* *port_digital_filter_config_t*

PORT digital filter feature configuration definition.

typedef struct *_port_pin_config* *port_pin_config_t*

PORT pin configuration structure.

typedef struct *_port_version_info* *port_version_info_t*

PORT version information.

typedef enum *_port_voltage_range* *port_voltage_range_t*

PORT voltage range.

FSL_COMPONENT_ID

struct *_port_digital_filter_config*

#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t *digitalFilterWidth*

Set digital filter width

port_digital_filter_clock_source_t *clockSource*

Set digital filter clockSource

struct *_port_pin_config*

#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t *pullSelect*

No-pull/pull-down/pull-up select

uint16_t *pullValueSelect*

Pull value select

uint16_t *slewRate*

Fast/slow slew rate Configure

uint16_t *passiveFilterEnable*

Passive filter enable/disable

uint16_t *openDrainEnable*

Open drain enable/disable

```

uint16_t driveStrength
    Fast/slow drive strength configure
uint16_t driveStrength1
    Normal/Double drive strength enable/disable
uint16_t inputBuffer
    Input Buffer Configure
uint16_t invertInput
    Invert Input Configure
uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
struct __port_version_info
    #include <fsl_port.h> PORT version information.

```

Public Members

```

uint16_t feature
    Feature Specification Number.
uint8_t minor
    Minor Version Number.
uint8_t major
    Major Version Number.

```

2.45 PWM: Pulse Width Modulator

```

status_t PWM_Init(PWM_Type *base, pwm_submodule_t subModule, const pwm_config_t
    *config)

```

Ungates the PWM submodule clock and configures the peripheral for basic operation.

This API should be called at the beginning of the application using the PWM driver. When user select PWMX, user must choose edge aligned output, because there are some limitation on center aligned PWMX output. When output PWMX in center aligned mode, VAL1 register controls both PWM period and PWMX duty cycle, PWMA and PWMB output will be corrupted. But edge aligned PWMX output do not have such limit. In master reload counter initialization mode, PWM period is depended by period of set LDOK in submodule 0 because this operation will reload register. Submodule 0 counter initialization cannot be master sync or master reload.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- config – Pointer to user's PWM config structure.

Returns

kStatus_Success means success; else failed.

```

void PWM_Deinit(PWM_Type *base, pwm_submodule_t subModule)
    Gate the PWM submodule clock.

```

Parameters

- base – PWM peripheral base address

- subModule – PWM submodule to deinitialize

void PWM_GetDefaultConfig(*pwm_config_t* *config)

Fill in the PWM config struct with the default settings.

The default values are:

```
config->enableDebugMode = false;
config->enableWait = false;
config->reloadSelect = kPWM_LocalReload;
config->clockSource = kPWM_BusClock;
config->prescale = kPWM_Prescale_Divide_1;
config->initializationControl = kPWM_Initialize_LocalSync;
config->forceTrigger = kPWM_Force_Local;
config->reloadFrequency = kPWM_LoadEveryOpportunity;
config->reloadLogic = kPWM_ReloadImmediate;
config->pairOperation = kPWM_Independent;
```

Parameters

- config – Pointer to user's PWM config structure.

status_t PWM_SetupPwm(PWM_Type *base, *pwm_submodule_t* subModule, const
pwm_signal_param_t *chnlParams, uint8_t numOfChnls,
pwm_mode_t mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Sets up the PWM signals for a PWM submodule.

The function initializes the submodule according to the parameters passed in by the user. The function also sets up the value compare registers to match the PWM signal requirements. If the dead time insertion logic is enabled, the pulse period is reduced by the dead time period specified by the user. When user select PWMX, user must choose edge aligned output, because there are some limitation on center aligned PWMX output. Due to edge aligned PWMX is negative true signal, need to configure PWMX active low true level to get correct duty cycle. The half cycle point will not be exactly in the middle of the PWM cycle when PWMX enabled.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- chnlParams – Array of PWM channel parameters to configure the channel(s).
- numOfChnls – Number of channels to configure, this should be the size of the array passed in. Array size should not be more than 3 as each submodule has 3 pins to output PWM.
- mode – PWM operation mode, options available in enumeration *pwm_mode_t*
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – PWM source clock of correspond submodule in Hz. If source clock of submodule1,2,3 is from submodule0 AUX_CLK, its source clock is submodule0 source clock divided with submodule0 prescaler value instead of submodule0 source clock.

Returns

Returns *kStatus_Fail* if there was error setting up the signal; *kStatus_Success* otherwise

status_t PWM_SetupPwmPhaseShift(PWM_Type *base, *pwm_submodule_t* subModule,
pwm_channels_t pwmChannel, uint32_t pwmFreq_Hz,
uint32_t srcClock_Hz, uint8_t shiftvalue, bool doSync)

Set PWM phase shift for PWM channel running on channel PWM_A, PWM_B which with 50% duty cycle.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – PWM main counter clock in Hz.
- shiftvalue – Phase shift value, range in 0 ~ 50
- doSync – true: Set LDOK bit for the submodule list; false: LDOK bit don't set, need to call PWM_SetPwmLdok to sync update.

Returns

Returns kStatus_Fail if there was error setting up the signal; kStatus_Success otherwise

```
void PWM_UpdatePwmDutycycle(PWM_Type *base, pwm_submodule_t subModule,  
                             pwm_channels_t pwmSignal, pwm_mode_t currPwmMode,  
                             uint8_t dutyCyclePercent)
```

Updates the PWM signal's dutycycle.

The function updates the PWM dutycycle to the new value that is passed in. If the dead time insertion logic is enabled then the pulse period is reduced by the dead time period specified by the user.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A, PWM B, PWM X) to update
- currPwmMode – The current PWM mode set during PWM setup
- dutyCyclePercent – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

```
void PWM_UpdatePwmDutycycleHighAccuracy(PWM_Type *base, pwm_submodule_t subModule,  
                                          pwm_channels_t pwmSignal, pwm_mode_t  
                                          currPwmMode, uint16_t dutyCycle)
```

Updates the PWM signal's dutycycle with 16-bit accuracy.

The function updates the PWM dutycycle to the new value that is passed in. If the dead time insertion logic is enabled then the pulse period is reduced by the dead time period specified by the user.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A, PWM B, PWM X) to update
- currPwmMode – The current PWM mode set during PWM setup
- dutyCycle – New PWM pulse width, value should be between 0 to 65535 0=inactive signal(0% duty cycle)... 65535=active signal (100% duty cycle)

```
void PWM_UpdatePwmPeriodAndDutycycle(PWM_Type *base, pwm_submodule_t subModule,  
                                     pwm_channels_t pwmSignal, pwm_mode_t  
                                     currPwmMode, uint16_t pulseCnt, uint16_t  
                                     dutyCycle)
```

Update the PWM signal's period and dutycycle for a PWM submodule.

The function updates PWM signal period generated by a specific submodule according to the parameters passed in by the user. This function can also set dutycycle whether you want to keep original dutycycle or update new dutycycle. Call this function in local sync control mode because PWM period is depended by

INIT and VAL1 register of each submodule. In master sync initialization control mode, call this function to update INIT and VAL1 register of all submodule because PWM period is depended by INIT and VAL1 register in submodule0. If the dead time insertion logic is enabled, the pulse period is reduced by the dead time period specified by the user. PWM signal will not be generated if its period is less than dead time duration.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A or PWM B) to update
- currPwmMode – The current PWM mode set during PWM setup, options available in enumeration `pwm_mode_t`
- pulseCnt – New PWM period, value should be between 0 to 65535 0=minimum PWM period... 65535=maximum PWM period
- dutyCycle – New PWM pulse width of channel, value should be between 0 to 65535 0=inactive signal(0% duty cycle)... 65535=active signal (100% duty cycle) You can keep original duty cycle or update new duty cycle

```
static inline void PWM_EnableInterrupts(PWM_Type *base, pwm_submodule_t subModule,  
                                       uint32_t mask)
```

Enables the selected PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline void PWM_DisableInterrupts(PWM_Type *base, pwm_submodule_t subModule,  
                                       uint32_t mask)
```

Disables the selected PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline uint32_t PWM_GetEnabledInterrupts(PWM_Type *base, pwm_submodule_t  
                                              subModule)
```

Gets the enabled PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline void PWM_DMAFIFOWatermarkControl(PWM_Type *base, pwm_submodule_t
                                              subModule, pwm_watermark_control_t
                                              pwm_watermark_control)
```

Capture DMA Enable Source Select.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- `pwm_watermark_control` – PWM FIFO watermark and control

```
static inline void PWM_DMACaptureSourceSelect(PWM_Type *base, pwm_submodule_t
                                              subModule, pwm_dma_source_select_t
                                              pwm_dma_source_select)
```

Capture DMA Enable Source Select.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- `pwm_dma_source_select` – PWM capture DMA enable source select

```
static inline void PWM_EnableDMACapture(PWM_Type *base, pwm_submodule_t subModule,
                                         uint16_t mask, bool activate)
```

Enables or disables the selected PWM DMA Capture read request.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The DMA to enable or disable. This is a logical OR of members of the enumeration `pwm_dma_enable_t`
- activate – true: Enable DMA read request; false: Disable DMA read request

```
static inline void PWM_EnableDMAWrite(PWM_Type *base, pwm_submodule_t subModule, bool
                                       activate)
```

Enables or disables the PWM DMA write request.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- activate – true: Enable DMA write request; false: Disable DMA write request

```
static inline uint32_t PWM_GetStatusFlags(PWM_Type *base, pwm_submodule_t subModule)
```

Gets the PWM status flags.

Parameters

- base – PWM peripheral base address

- subModule – PWM submodule to configure

Returns

The status flags. This is the logical OR of members of the enumeration `pwm_status_flags_t`

```
static inline void PWM_ClearStatusFlags(PWM_Type *base, pwm_submodule_t subModule,  
                                       uint32_t mask)
```

Clears the PWM status flags.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The status flags to clear. This is a logical OR of members of the enumeration `pwm_status_flags_t`

```
static inline void PWM_StartTimer(PWM_Type *base, uint8_t subModulesToStart)
```

Starts the PWM counter for a single or multiple submodules.

Sets the Run bit which enables the clocks to the PWM submodule. This function can start multiple submodules at the same time.

Parameters

- base – PWM peripheral base address
- subModulesToStart – PWM submodules to start. This is a logical OR of members of the enumeration `pwm_module_control_t`

```
static inline void PWM_StopTimer(PWM_Type *base, uint8_t subModulesToStop)
```

Stops the PWM counter for a single or multiple submodules.

Clears the Run bit which resets the submodule's counter. This function can stop multiple submodules at the same time.

Parameters

- base – PWM peripheral base address
- subModulesToStop – PWM submodules to stop. This is a logical OR of members of the enumeration `pwm_module_control_t`

FSL_PWM_DRIVER_VERSION

Version 2.9.0

```
enum __pwm_submodule
```

List of PWM submodules.

Values:

enumerator `kPWM_Module_0`
Submodule 0

enumerator `kPWM_Module_1`
Submodule 1

enumerator `kPWM_Module_2`
Submodule 2

```
enum __pwm_channels
```

List of PWM channels in each module.

Values:

enumerator kPWM_PwmB

enumerator kPWM_PwmA

enumerator kPWM_PwmX

enum __pwm_value_register

List of PWM value registers.

Values:

enumerator kPWM_ValueRegister_0

PWM Value0 register

enumerator kPWM_ValueRegister_1

PWM Value1 register

enumerator kPWM_ValueRegister_2

PWM Value2 register

enumerator kPWM_ValueRegister_3

PWM Value3 register

enumerator kPWM_ValueRegister_4

PWM Value4 register

enumerator kPWM_ValueRegister_5

PWM Value5 register

enum __pwm_value_register_mask

List of PWM value registers mask.

Values:

enumerator kPWM_ValueRegisterMask_0

PWM Value0 register mask

enumerator kPWM_ValueRegisterMask_1

PWM Value1 register mask

enumerator kPWM_ValueRegisterMask_2

PWM Value2 register mask

enumerator kPWM_ValueRegisterMask_3

PWM Value3 register mask

enumerator kPWM_ValueRegisterMask_4

PWM Value4 register mask

enumerator kPWM_ValueRegisterMask_5

PWM Value5 register mask

enum __pwm_clock_source

PWM clock source selection.

Values:

enumerator kPWM_BusClock

Device specific IPBus clock, refer reference manual for frequency

enumerator kPWM_ExternalClock

EXT_CLK is used as the clock

enumerator kPWM_Submodule0Clock

Clock of the submodule 0 (AUX_CLK) is used as the source clock

enum _pwm_clock_prescale

PWM prescaler factor selection for clock source.

Values:

enumerator kPWM_Prescale_Divide_1

PWM clock frequency = fclk/1

enumerator kPWM_Prescale_Divide_2

PWM clock frequency = fclk/2

enumerator kPWM_Prescale_Divide_4

PWM clock frequency = fclk/4

enumerator kPWM_Prescale_Divide_8

PWM clock frequency = fclk/8

enumerator kPWM_Prescale_Divide_16

PWM clock frequency = fclk/16

enumerator kPWM_Prescale_Divide_32

PWM clock frequency = fclk/32

enumerator kPWM_Prescale_Divide_64

PWM clock frequency = fclk/64

enumerator kPWM_Prescale_Divide_128

PWM clock frequency = fclk/128

enum _pwm_force_output_trigger

Options that can trigger a PWM FORCE_OUT.

Values:

enumerator kPWM_Force_Local

The local force signal, CTRL2[FORCE], from the submodule is used to force updates

enumerator kPWM_Force_Master

The master force signal from submodule 0 is used to force updates

enumerator kPWM_Force_LocalReload

The local reload signal from this submodule is used to force updates without regard to the state of LDOK

enumerator kPWM_Force_MasterReload

The master reload signal from submodule 0 is used to force updates if LDOK is set

enumerator kPWM_Force_LocalSync

The local sync signal from this submodule is used to force updates

enumerator kPWM_Force_MasterSync

The master sync signal from submodule0 is used to force updates

enumerator kPWM_Force_External

The external force signal, EXT_FORCE, from outside the PWM module causes updates

enumerator kPWM_Force_ExternalSync

The external sync signal, EXT_SYNC, from outside the PWM module causes updates

enum `_pwm_output_state`

PWM channel output status.

Values:

enumerator `kPWM_HighState`

The output state of PWM channel is high

enumerator `kPWM_LowState`

The output state of PWM channel is low

enumerator `kPWM_NormalState`

The output state of PWM channel is normal

enumerator `kPWM_InvertState`

The output state of PWM channel is invert

enumerator `kPWM_MaskState`

The output state of PWM channel is mask

enum `_pwm_init_source`

PWM counter initialization options.

Values:

enumerator `kPWM_Initialize_LocalSync`

Local sync causes initialization

enumerator `kPWM_Initialize_MasterReload`

Master reload from submodule 0 causes initialization

enumerator `kPWM_Initialize_MasterSync`

Master sync from submodule 0 causes initialization

enumerator `kPWM_Initialize_ExtSync`

EXT_SYNC causes initialization

enum `_pwm_load_frequency`

PWM load frequency selection.

Values:

enumerator `kPWM_LoadEveryOportunity`

Every PWM opportunity

enumerator `kPWM_LoadEvery2Oportunity`

Every 2 PWM opportunities

enumerator `kPWM_LoadEvery3Oportunity`

Every 3 PWM opportunities

enumerator `kPWM_LoadEvery4Oportunity`

Every 4 PWM opportunities

enumerator `kPWM_LoadEvery5Oportunity`

Every 5 PWM opportunities

enumerator `kPWM_LoadEvery6Oportunity`

Every 6 PWM opportunities

enumerator `kPWM_LoadEvery7Oportunity`

Every 7 PWM opportunities

enumerator kPWM_LoadEvery8Opportunity
Every 8 PWM opportunities

enumerator kPWM_LoadEvery9Opportunity
Every 9 PWM opportunities

enumerator kPWM_LoadEvery10Opportunity
Every 10 PWM opportunities

enumerator kPWM_LoadEvery11Opportunity
Every 11 PWM opportunities

enumerator kPWM_LoadEvery12Opportunity
Every 12 PWM opportunities

enumerator kPWM_LoadEvery13Opportunity
Every 13 PWM opportunities

enumerator kPWM_LoadEvery14Opportunity
Every 14 PWM opportunities

enumerator kPWM_LoadEvery15Opportunity
Every 15 PWM opportunities

enumerator kPWM_LoadEvery16Opportunity
Every 16 PWM opportunities

enum _pwm_fault_input
List of PWM fault selections.

Values:

enumerator kPWM_Fault_0
Fault 0 input pin

enumerator kPWM_Fault_1
Fault 1 input pin

enumerator kPWM_Fault_2
Fault 2 input pin

enumerator kPWM_Fault_3
Fault 3 input pin

enum _pwm_fault_disable
List of PWM fault disable mapping selections.

Values:

enumerator kPWM_FaultDisable_0
Fault 0 disable mapping

enumerator kPWM_FaultDisable_1
Fault 1 disable mapping

enumerator kPWM_FaultDisable_2
Fault 2 disable mapping

enumerator kPWM_FaultDisable_3
Fault 3 disable mapping

enum _pwm_fault_channels
List of PWM fault channels.

Values:

enumerator kPWM_faultchannel_0

enumerator kPWM_faultchannel_1

enum __pwm_input_capture_edge
PWM capture edge select.

Values:

enumerator kPWM_Disable
Disabled

enumerator kPWM_FallingEdge
Capture on falling edge only

enumerator kPWM_RisingEdge
Capture on rising edge only

enumerator kPWM_RiseAndFallEdge
Capture on rising or falling edge

enum __pwm_force_signal
PWM output options when a FORCE_OUT signal is asserted.

Values:

enumerator kPWM_UsePwm
Generated PWM signal is used by the deadtime logic.

enumerator kPWM_InvertedPwm
Inverted PWM signal is used by the deadtime logic.

enumerator kPWM_SoftwareControl
Software controlled value is used by the deadtime logic.

enumerator kPWM_UseExternal
PWM_EXT_A signal is used by the deadtime logic.

enum __pwm_chnl_pair_operation
Options available for the PWM A & B pair operation.

Values:

enumerator kPWM_Independent
PWM A & PWM B operate as 2 independent channels

enumerator kPWM_ComplementaryPwmA
PWM A & PWM B are complementary channels, PWM A generates the signal

enumerator kPWM_ComplementaryPwmB
PWM A & PWM B are complementary channels, PWM B generates the signal

enum __pwm_register_reload
Options available on how to load the buffered-registers with new values.

Values:

enumerator kPWM_ReloadImmediate
Buffered-registers get loaded with new values as soon as LDOK bit is set

enumerator kPWM_ReloadPwmHalfCycle
Registers loaded on a PWM half cycle

enumerator kPWM_ReloadPwmFullCycle
Registers loaded on a PWM full cycle

enumerator kPWM__ReloadPwmHalfAndFullCycle

Registers loaded on a PWM half & full cycle

enum __pwm_fault_recovery_mode

Options available on how to re-enable the PWM output when recovering from a fault.

Values:

enumerator kPWM__NoRecovery

PWM output will stay inactive

enumerator kPWM__RecoverHalfCycle

PWM output re-enabled at the first half cycle

enumerator kPWM__RecoverFullCycle

PWM output re-enabled at the first full cycle

enumerator kPWM__RecoverHalfAndFullCycle

PWM output re-enabled at the first half or full cycle

enum __pwm_interrupt_enable

List of PWM interrupt options.

Values:

enumerator kPWM__CompareVal0InterruptEnable

PWM VAL0 compare interrupt

enumerator kPWM__CompareVal1InterruptEnable

PWM VAL1 compare interrupt

enumerator kPWM__CompareVal2InterruptEnable

PWM VAL2 compare interrupt

enumerator kPWM__CompareVal3InterruptEnable

PWM VAL3 compare interrupt

enumerator kPWM__CompareVal4InterruptEnable

PWM VAL4 compare interrupt

enumerator kPWM__CompareVal5InterruptEnable

PWM VAL5 compare interrupt

enumerator kPWM__CaptureX0InterruptEnable

PWM capture X0 interrupt

enumerator kPWM__CaptureX1InterruptEnable

PWM capture X1 interrupt

enumerator kPWM__CaptureB0InterruptEnable

PWM capture B0 interrupt

enumerator kPWM__CaptureB1InterruptEnable

PWM capture B1 interrupt

enumerator kPWM__CaptureA0InterruptEnable

PWM capture A0 interrupt

enumerator kPWM__CaptureA1InterruptEnable

PWM capture A1 interrupt

enumerator kPWM__ReloadInterruptEnable

PWM reload interrupt

enumerator kPWM__ReloadErrorInterruptEnable

PWM reload error interrupt

enumerator kPWM__Fault0InterruptEnable

PWM fault 0 interrupt

enumerator kPWM__Fault1InterruptEnable

PWM fault 1 interrupt

enumerator kPWM__Fault2InterruptEnable

PWM fault 2 interrupt

enumerator kPWM__Fault3InterruptEnable

PWM fault 3 interrupt

enum _pwm_status_flags

List of PWM status flags.

Values:

enumerator kPWM__CompareVal0Flag

PWM VAL0 compare flag

enumerator kPWM__CompareVal1Flag

PWM VAL1 compare flag

enumerator kPWM__CompareVal2Flag

PWM VAL2 compare flag

enumerator kPWM__CompareVal3Flag

PWM VAL3 compare flag

enumerator kPWM__CompareVal4Flag

PWM VAL4 compare flag

enumerator kPWM__CompareVal5Flag

PWM VAL5 compare flag

enumerator kPWM__CaptureX0Flag

PWM capture X0 flag

enumerator kPWM__CaptureX1Flag

PWM capture X1 flag

enumerator kPWM__CaptureB0Flag

PWM capture B0 flag

enumerator kPWM__CaptureB1Flag

PWM capture B1 flag

enumerator kPWM__CaptureA0Flag

PWM capture A0 flag

enumerator kPWM__CaptureA1Flag

PWM capture A1 flag

enumerator kPWM__ReloadFlag

PWM reload flag

enumerator kPWM__ReloadErrorFlag

PWM reload error flag

enumerator kPWM_RegUpdatedFlag

PWM registers updated flag

enumerator kPWM_Fault0Flag

PWM fault 0 flag

enumerator kPWM_Fault1Flag

PWM fault 1 flag

enumerator kPWM_Fault2Flag

PWM fault 2 flag

enumerator kPWM_Fault3Flag

PWM fault 3 flag

enum _pwm_dma_enable

List of PWM DMA options.

Values:

enumerator kPWM_CaptureX0DMAEnable

PWM capture X0 DMA

enumerator kPWM_CaptureX1DMAEnable

PWM capture X1 DMA

enumerator kPWM_CaptureB0DMAEnable

PWM capture B0 DMA

enumerator kPWM_CaptureB1DMAEnable

PWM capture B1 DMA

enumerator kPWM_CaptureA0DMAEnable

PWM capture A0 DMA

enumerator kPWM_CaptureA1DMAEnable

PWM capture A1 DMA

enum _pwm_dma_source_select

List of PWM capture DMA enable source select.

Values:

enumerator kPWM_DMAResourceDisable

Read DMA requests disabled

enumerator kPWM_DMAWatermarksEnable

Exceeding a FIFO watermark sets the DMA read request

enumerator kPWM_DMALocalSync

A local sync (VAL1 matches counter) sets the read DMA request

enumerator kPWM_DMALocalReload

A local reload (STS[RF] being set) sets the read DMA request

enum _pwm_watermark_control

PWM FIFO Watermark AND Control.

Values:

enumerator kPWM_FIFOWatermarksOR

Selected FIFO watermarks are OR'ed together

enumerator kPWM_FIFOWatermarksAND
Selected FIFO watermarks are AND'ed together

enum __pwm_mode

PWM operation mode.

Values:

enumerator kPWM_SignedCenterAligned
Signed center-aligned

enumerator kPWM_CenterAligned
Unsigned cente-aligned

enumerator kPWM_SignedEdgeAligned
Signed edge-aligned

enumerator kPWM_EdgeAligned
Unsigned edge-aligned

enum __pwm_level_select

PWM output pulse mode, high-true or low-true.

Values:

enumerator kPWM_HighTrue
High level represents “on” or “active” state

enumerator kPWM_LowTrue
Low level represents “on” or “active” state

enum __pwm_fault_state

PWM output fault status.

Values:

enumerator kPWM_PwmFaultState0
Output is forced to logic 0 state prior to consideration of output polarity control.

enumerator kPWM_PwmFaultState1
Output is forced to logic 1 state prior to consideration of output polarity control.

enumerator kPWM_PwmFaultState2
Output is tristated.

enumerator kPWM_PwmFaultState3
Output is tristated.

enum __pwm_reload_source_select

PWM reload source select.

Values:

enumerator kPWM_LocalReload
The local reload signal is used to reload registers

enumerator kPWM_MasterReload
The master reload signal (from submodule 0) is used to reload

enum __pwm_fault_clear

PWM fault clearing options.

Values:

enumerator kPWM__Automatic
Automatic fault clearing

enumerator kPWM__ManualNormal
Manual fault clearing with no fault safety mode

enumerator kPWM__ManualSafety
Manual fault clearing with fault safety mode

enum __pwm__module__control
Options for submodule master control operation.
Values:

enumerator kPWM__Control__Module__0
Control submodule 0's start/stop,buffer reload operation

enumerator kPWM__Control__Module__1
Control submodule 1's start/stop,buffer reload operation

enumerator kPWM__Control__Module__2
Control submodule 2's start/stop,buffer reload operation

enumerator kPWM__Control__Module__3
Control submodule 3's start/stop,buffer reload operation

typedef enum __pwm__submodule pwm__submodule__t
List of PWM submodules.

typedef enum __pwm__channels pwm__channels__t
List of PWM channels in each module.

typedef enum __pwm__value__register pwm__value__register__t
List of PWM value registers.

typedef enum __pwm__clock__source pwm__clock__source__t
PWM clock source selection.

typedef enum __pwm__clock__prescale pwm__clock__prescale__t
PWM prescaler factor selection for clock source.

typedef enum __pwm__force__output__trigger pwm__force__output__trigger__t
Options that can trigger a PWM FORCE_OUT.

typedef enum __pwm__output__state pwm__output__state__t
PWM channel output status.

typedef enum __pwm__init__source pwm__init__source__t
PWM counter initialization options.

typedef enum __pwm__load__frequency pwm__load__frequency__t
PWM load frequency selection.

typedef enum __pwm__fault__input pwm__fault__input__t
List of PWM fault selections.

typedef enum __pwm__fault__disable pwm__fault__disable__t
List of PWM fault disable mapping selections.

typedef enum __pwm__fault__channels pwm__fault__channels__t
List of PWM fault channels.

typedef enum *_pwm_input_capture_edge* pwm_input_capture_edge_t

PWM capture edge select.

typedef enum *_pwm_force_signal* pwm_force_signal_t

PWM output options when a FORCE_OUT signal is asserted.

typedef enum *_pwm_chnl_pair_operation* pwm_chnl_pair_operation_t

Options available for the PWM A & B pair operation.

typedef enum *_pwm_register_reload* pwm_register_reload_t

Options available on how to load the buffered-registers with new values.

typedef enum *_pwm_fault_recovery_mode* pwm_fault_recovery_mode_t

Options available on how to re-enable the PWM output when recovering from a fault.

typedef enum *_pwm_interrupt_enable* pwm_interrupt_enable_t

List of PWM interrupt options.

typedef enum *_pwm_status_flags* pwm_status_flags_t

List of PWM status flags.

typedef enum *_pwm_dma_enable* pwm_dma_enable_t

List of PWM DMA options.

typedef enum *_pwm_dma_source_select* pwm_dma_source_select_t

List of PWM capture DMA enable source select.

typedef enum *_pwm_watermark_control* pwm_watermark_control_t

PWM FIFO Watermark AND Control.

typedef enum *_pwm_mode* pwm_mode_t

PWM operation mode.

typedef enum *_pwm_level_select* pwm_level_select_t

PWM output pulse mode, high-true or low-true.

typedef enum *_pwm_fault_state* pwm_fault_state_t

PWM output fault status.

typedef enum *_pwm_reload_source_select* pwm_reload_source_select_t

PWM reload source select.

typedef enum *_pwm_fault_clear* pwm_fault_clear_t

PWM fault clearing options.

typedef enum *_pwm_module_control* pwm_module_control_t

Options for submodule master control operation.

typedef struct *_pwm_signal_param* pwm_signal_param_t

Structure for the user to define the PWM signal characteristics.

typedef struct *_pwm_config* pwm_config_t

PWM config structure.

This structure holds the configuration settings for the PWM peripheral. To initialize this structure to reasonable defaults, call the PWM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

typedef struct *_pwm_fault_input_filter_param* pwm_fault_input_filter_param_t

Structure for the user to configure the fault input filter.


```
typedef struct _pwm_fault_param pwm_fault_param_t
```

Structure is used to hold the parameters to configure a PWM fault.

```
typedef struct _pwm_input_capture_param pwm_input_capture_param_t
```

Structure is used to hold parameters to configure the capture capability of a signal pin.

```
void PWM_SetupInputCapture(PWM_Type *base, pwm_submodule_t subModule,  
                           pwm_channels_t pwmChannel, const  
                           pwm_input_capture_param_t *inputCaptureParams)
```

Sets up the PWM input capture.

Each PWM submodule has 3 pins that can be configured for use as input capture pins. This function sets up the capture parameters for each pin and enables the pin for input capture operation.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel in the submodule to setup
- inputCaptureParams – Parameters passed in to set up the input pin

```
void PWM_SetupFaultInputFilter(PWM_Type *base, const pwm_fault_input_filter_param_t  
                              *faultInputFilterParams)
```

Sets up the PWM fault input filter.

Parameters

- base – PWM peripheral base address
- faultInputFilterParams – Parameters passed in to set up the fault input filter.

```
void PWM_SetupFaults(PWM_Type *base, pwm_fault_input_t faultNum, const  
                    pwm_fault_param_t *faultParams)
```

Sets up the PWM fault protection.

PWM has 4 fault inputs.

Parameters

- base – PWM peripheral base address
- faultNum – PWM fault to configure.
- faultParams – Pointer to the PWM fault config structure

```
void PWM_FaultDefaultConfig(pwm_fault_param_t *config)
```

Fill in the PWM fault config struct with the default settings.

The default values are:

```
config->faultClearingMode = kPWM_Automatic;  
config->faultLevel = false;  
config->enableCombinationalPath = true;  
config->recoverMode = kPWM_NoRecovery;
```

Parameters

- config – Pointer to user's PWM fault config structure.

```
void PWM_SetupForceSignal(PWM_Type *base, pwm_submodule_t subModule, pwm_channels_t  
                          pwmChannel, pwm_force_signal_t mode)
```

Selects the signal to output on a PWM pin when a FORCE_OUT signal is asserted.

The user specifies which channel to configure by supplying the submodule number and whether to modify PWM A or PWM B within that submodule.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – Channel to configure
- `mode` – Signal to output when a FORCE_OUT is triggered

```
static inline void PWM_SetVALxValue(PWM_Type *base, pwm_submodule_t subModule,  
                                   pwm_value_register_t valueRegister, uint16_t value)
```

Set the PWM VALx registers.

This function allows the user to write value into VAL registers directly. And it will destroying the PWM clock period set by the PWM_SetupPwm()/PWM_SetupPwmPhaseShift() functions. Due to VALx registers are buffered, the new value will not active unless call PWM_SetPwmLdok() and the reload point is reached.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `valueRegister` – VALx register that will be written new value
- `value` – Value that will be written into VALx register

```
static inline uint16_t PWM_GetVALxValue(PWM_Type *base, pwm_submodule_t subModule,  
                                       pwm_value_register_t valueRegister)
```

Get the PWM VALx registers.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `valueRegister` – VALx register that will be read value

Returns

The VALx register value

```
static inline void PWM_OutputTriggerEnable(PWM_Type *base, pwm_submodule_t subModule,  
                                           pwm_value_register_t valueRegister, bool activate)
```

Enables or disables the PWM output trigger.

This function allows the user to enable or disable the PWM trigger. The PWM has 2 triggers. Trigger 0 is activated when the counter matches VAL 0, VAL 2, or VAL 4 register. Trigger 1 is activated when the counter matches VAL 1, VAL 3, or VAL 5 register.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `valueRegister` – Value register that will activate the trigger
- `activate` – true: Enable the trigger; false: Disable the trigger

```
static inline void PWM_ActivateOutputTrigger(PWM_Type *base, pwm_submodule_t subModule,
                                             uint16_t valueRegisterMask)
```

Enables the PWM output trigger.

This function allows the user to enable one or more (VAL0-5) PWM trigger.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegisterMask – Value register mask that will activate one or more (VAL0-5) trigger enumeration `_pwm_value_register_mask`

```
static inline void PWM_DeactivateOutputTrigger(PWM_Type *base, pwm_submodule_t
                                              subModule, uint16_t valueRegisterMask)
```

Disables the PWM output trigger.

This function allows the user to disables one or more (VAL0-5) PWM trigger.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegisterMask – Value register mask that will Deactivate one or more (VAL0-5) trigger enumeration `_pwm_value_register_mask`

```
static inline void PWM_SetupSwCtrlOut(PWM_Type *base, pwm_submodule_t subModule,
                                     pwm_channels_t pwmChannel, bool value)
```

Sets the software control output for a pin to high or low.

The user specifies which channel to modify by supplying the submodule number and whether to modify PWM A or PWM B within that submodule.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel to configure
- value – true: Supply a logic 1, false: Supply a logic 0.

```
static inline void PWM_SetPwmLdok(PWM_Type *base, uint8_t subModulesToUpdate, bool
                                  value)
```

Sets or clears the PWM LDOK bit on a single or multiple submodules.

Set LDOK bit to load buffered values into CTRL[PRSC] and the INIT, FRACVAL and VAL registers. The values are loaded immediately if `kPWM_ReloadImmediate` option was chosen during config. Else the values are loaded at the next PWM reload point. This function can issue the load command to multiple submodules at the same time.

Parameters

- base – PWM peripheral base address
- subModulesToUpdate – PWM submodules to update with buffered values. This is a logical OR of members of the enumeration `pwm_module_control_t`
- value – true: Set LDOK bit for the submodule list; false: Clear LDOK bit

```
static inline void PWM_SetPwmFaultState(PWM_Type *base, pwm_submodule_t subModule,  
                                       pwm_channels_t pwmChannel, pwm_fault_state_t  
                                       faultState)
```

Set PWM output fault status.

These bits determine the fault state for the PWM_A output in fault conditions and STOP mode. It may also define the output state in WAIT and DEBUG modes depending on the settings of CTRL2[WAITEN] and CTRL2[DBGEN]. This function can update PWM output fault status.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel to configure
- faultState – PWM output fault status

```
static inline void PWM_SetupFaultDisableMap(PWM_Type *base, pwm_submodule_t subModule,  
                                           pwm_channels_t pwmChannel,  
                                           pwm_fault_channels_t pwm_fault_channels,  
                                           uint16_t value)
```

Set PWM fault disable mapping.

Each of the four bits of this read/write field is one-to-one associated with the four FAULTx inputs of fault channel 0/1. The PWM output will be turned off if there is a logic 1 on an FAULTx input and a 1 in the corresponding bit of this field. A reset sets all bits in this field.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- pwm_fault_channels – PWM fault channel to configure
- value – Fault disable mapping mask value enumeration *pwm_fault_disable_t*

```
static inline void PWM_OutputEnable(PWM_Type *base, pwm_channels_t pwmChannel,  
                                   pwm_submodule_t subModule)
```

Set PWM output enable.

This feature allows the user to enable the PWM Output. Recommend to invoke this API after PWM and fault configuration. But invoke this API before configure MCTRL register is okay, such as set LDOK or start timer.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure

```
static inline void PWM_OutputDisable(PWM_Type *base, pwm_channels_t pwmChannel,  
                                    pwm_submodule_t subModule)
```

Set PWM output disable.

This feature allows the user to disable the PWM output. Recommend to invoke this API after PWM and fault configuration. But invoke this API before configure MCTRL register is okay, such as set LDOK or start timer.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure

uint8_t PWM_GetPwmChannelState(PWM_Type *base, *pwm_submodule_t* subModule, *pwm_channels_t* pwmChannel)

Get the dutycycle value.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure

Returns

Current channel dutycycle value.

status_t PWM_SetOutputToIdle(PWM_Type *base, *pwm_channels_t* pwmChannel, *pwm_submodule_t* subModule, bool idleStatus)

Set PWM output in idle status (high or low).

Note: This API should call after PWM_SetupPwm() APIs, and PWMX submodule is not supported.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure
- idleStatus – True: PWM output is high in idle status; false: PWM output is low in idle status.

Returns

kStatus_Fail if there was error setting up the signal; kStatus_Success if set output idle success

void PWM_SetClockMode(PWM_Type *base, *pwm_submodule_t* subModule, *pwm_clock_prescale_t* prescaler)

Set the pwm submodule prescaler.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- prescaler – Set prescaler value

void PWM_SetPwmForceOutputToZero(PWM_Type *base, *pwm_submodule_t* subModule, *pwm_channels_t* pwmChannel, bool forcetozero)

This function enables-disables the forcing of the output of a given eFlexPwm channel to logic 0.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure

- `forcetozero` – True: Enable the pwm force output to zero; False: Disable the pwm output resumes normal function.

```
void PWM_SetChannelOutput(PWM_Type *base, pwm_submodule_t subModule,  
                          pwm_channels_t pwmChannel, pwm_output_state_t outputstate)
```

This function set the output state of the PWM pin as requested for the current cycle.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – PWM channel to configure
- `outputstate` – Set pwm output state, see `pwm_output_state_t`.

```
status_t PWM_SetPhaseDelay(PWM_Type *base, pwm_channels_t pwmChannel,  
                           pwm_submodule_t subModule, uint16_t delayCycles)
```

This function set the phase delay from the master sync signal of submodule 0.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – PWM channel to configure
- `delayCycles` – Number of cycles delayed from submodule 0.

Returns

`kStatus_Fail` if the number of delay cycles is set larger than the period defined in submodule 0; `kStatus_Success` if set phase delay success

```
static inline void PWM_SetFilterSampleCount(PWM_Type *base, pwm_channels_t pwmChannel,  
                                           pwm_submodule_t subModule, uint8_t  
                                           filterSampleCount)
```

This function set the number of consecutive samples that must agree prior to the input filter.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – PWM channel to configure
- `filterSampleCount` – Number of consecutive samples.

```
static inline void PWM_SetFilterSamplePeriod(PWM_Type *base, pwm_channels_t pwmChannel,  
                                             pwm_submodule_t subModule, uint8_t  
                                             filterSamplePeriod)
```

This function set the sampling period of the fault pin input filter.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – PWM channel to configure
- `filterSamplePeriod` – Sampling period of input filter.

```
PWM_SUBMODULE_SWCONTROL_WIDTH
```

Number of bits per submodule for software output control

PWM_SUBMODULE_CHANNEL

Submodule channels include PWMA, PWMB, PWMX.

struct *_pwm_signal_param*

#include <fsl_pwm.h> Structure for the user to define the PWM signal characteristics.

Public Members

pwm_channels_t pwmChannel

PWM channel being configured; PWM A or PWM B

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)...
100=always active signal (100% duty cycle)

pwm_level_select_t level

PWM output active level select

uint16_t deadtimeValue

The deadtime value; only used if channel pair is operating in complementary mode

pwm_fault_state_t faultState

PWM output fault status

bool pwmchannelenable

Enable PWM output

struct *_pwm_config*

#include <fsl_pwm.h> PWM config structure.

This structure holds the configuration settings for the PWM peripheral. To initialize this structure to reasonable defaults, call the PWM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool enableDebugMode

true: PWM continues to run in debug mode; false: PWM is paused in debug mode

pwm_init_source_t initializationControl

Option to initialize the counter

pwm_clock_source_t clockSource

Clock source for the counter

pwm_clock_prescale_t prescale

Pre-scaler to divide down the clock

pwm_chnl_pair_operation_t pairOperation

Channel pair in independent or complementary mode

pwm_register_reload_t reloadLogic

PWM Reload logic setup

pwm_reload_source_select_t reloadSelect

Reload source select

pwm_load_frequency_t reloadFrequency

Specifies when to reload, used when user's choice is not immediate reload

pwm_force_output_trigger_t forceTrigger

Specify which signal will trigger a FORCE_OUT

struct __pwm_fault_input_filter_param

#include <fsl_pwm.h> Structure for the user to configure the fault input filter.

Public Members

uint8_t faultFilterCount

Fault filter count

uint8_t faultFilterPeriod

Fault filter period; value of 0 will bypass the filter

bool faultGlitchStretch

Fault Glitch Stretch Enable: A logic 1 means that input fault signals will be stretched to at least 2 IPBus clock cycles

struct __pwm_fault_param

#include <fsl_pwm.h> Structure is used to hold the parameters to configure a PWM fault.

Public Members

pwm_fault_clear_t faultClearingMode

Fault clearing mode to use

bool faultLevel

true: Logic 1 indicates fault; false: Logic 0 indicates fault

bool enableCombinationalPath

true: Combinational Path from fault input is enabled; false: No combination path is available

pwm_fault_recovery_mode_t recoverMode

Specify when to re-enable the PWM output

struct __pwm_input_capture_param

#include <fsl_pwm.h> Structure is used to hold parameters to configure the capture capability of a signal pin.

Public Members

bool captureInputSel

true: Use the edge counter signal as source false: Use the raw input signal from the pin as source

uint8_t edgeCompareValue

Compare value, used only if edge counter is used as source

pwm_input_capture_edge_t edge0

Specify which edge causes a capture for input circuitry 0

pwm_input_capture_edge_t edge1

Specify which edge causes a capture for input circuitry 1

bool enableOneShotCapture

true: Use one-shot capture mode; false: Use free-running capture mode

uint8_t fifoWatermark

Watermark level for capture FIFO. The capture flags in the status register will set if the word count in the FIFO is greater than this watermark level

2.46 Reset Driver

enum _SYSCON_RSTn

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

Values:

enumerator kINPUTMUX0_RST_SHIFT_RSTn

INPUTMUX0 reset control

enumerator kCTIMER0_RST_SHIFT_RSTn

CTIMER0 reset control

enumerator kCTIMER1_RST_SHIFT_RSTn

CTIMER1 reset control

enumerator kCTIMER2_RST_SHIFT_RSTn

CTIMER2 reset control

enumerator kFREQME_RST_SHIFT_RSTn

FREQME reset control

enumerator kUTICK0_RST_SHIFT_RSTn

UTICK0 reset control

enumerator kSMART_DMA_RST_SHIFT_RSTn

SMARTDMA0 reset control

enumerator kDMA0_RST_SHIFT_RSTn

DMA0 reset control

enumerator kAOI0_RST_SHIFT_RSTn

AOI0 reset control

enumerator kCRC0_RST_SHIFT_RSTn

CRC0 reset control

enumerator kEIM0_RST_SHIFT_RSTn

EIM0 reset control

enumerator kERM0_RST_SHIFT_RSTn

ERM0 reset control

enumerator kAOI1_RST_SHIFT_RSTn

AOI1 reset control

enumerator kLPI2C0_RST_SHIFT_RSTn

LPI2C0 reset control

enumerator kLPI2C1_RST_SHIFT_RSTn

LPI2C1 reset control

enumerator kLPSPi0_RST_SHIFT_RSTn

LPSPi0 reset control

enumerator kLPSP11_RST_SHIFT_RSTn
LPSP11 reset control

enumerator kLPUART0_RST_SHIFT_RSTn
LPUART0 reset control

enumerator kLPUART1_RST_SHIFT_RSTn
LPUART1 reset control

enumerator kLPUART2_RST_SHIFT_RSTn
LPUART2 reset control

enumerator kLPUART3_RST_SHIFT_RSTn
LPUART3 reset control

enumerator kQDC0_RST_SHIFT_RSTn
QDC0 reset control

enumerator kQDC1_RST_SHIFT_RSTn
QDC1 reset control

enumerator kFLEXPWM0_RST_SHIFT_RSTn
FLEXPWM0 reset control

enumerator kFLEXPWM1_RST_SHIFT_RSTn
FLEXPWM1 reset control

enumerator kOSTIMER0_RST_SHIFT_RSTn
OSTIMER0 reset control

enumerator kADC0_RST_SHIFT_RSTn
ADC0 reset control

enumerator kADC1_RST_SHIFT_RSTn
ADC1 reset control

enumerator kCMP1_RST_SHIFT_RSTn
CMP1 reset control

enumerator kCMP2_RST_SHIFT_RSTn
CMP2 reset control

enumerator kOPAMP0_RST_SHIFT_RSTn
OPAMP0 reset control

enumerator kOPAMP1_RST_SHIFT_RSTn
OPAMP1 reset control

enumerator kOPAMP2_RST_SHIFT_RSTn
OPAMP2 reset control

enumerator kPORT0_RST_SHIFT_RSTn
PORT0 reset control

enumerator kPORT1_RST_SHIFT_RSTn
PORT1 reset control

enumerator kPORT2_RST_SHIFT_RSTn
PORT2 reset control

enumerator kPORT3_RST_SHIFT_RSTn
PORT3 reset control

enumerator kPORT4_RST_SHIFT_RSTn
PORT4 reset control

enumerator kFLEXCAN0_RST_SHIFT_RSTn
FLEXCAN0 reset control

enumerator kGPIO0_RST_SHIFT_RSTn
GPIO0 reset control

enumerator kGPIO1_RST_SHIFT_RSTn
GPIO1 reset control

enumerator kGPIO2_RST_SHIFT_RSTn
GPIO2 reset control

enumerator kGPIO3_RST_SHIFT_RSTn
GPIO3 reset control

enumerator kGPIO4_RST_SHIFT_RSTn
GPIO4 reset control

enumerator kMAU0_RST_SHIFT_RSTn
MAU0 reset control

enumerator NotAvail_RSTn
No reset control

typedef enum _SYSCON_RSTn SYSCON_RSTn_t
Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

typedef SYSCON_RSTn_t reset_ip_name_t

void RESET_SetPeripheralReset(*reset_ip_name_t* peripheral)

Assert reset to peripheral.

Asserts reset signal to specified peripheral module.

Parameters

- peripheral – Assert reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

void RESET_ClearPeripheralReset(*reset_ip_name_t* peripheral)

Clear reset to peripheral.

Clears reset signal to specified peripheral module, allows it to operate.

Parameters

- peripheral – Clear reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

void RESET_PeripheralReset(*reset_ip_name_t* peripheral)

Reset peripheral module.

Reset peripheral module.

Parameters

- peripheral – Peripheral to reset. The enum argument contains encoding of reset register and reset bit position in the reset register.

static inline void RESET_ReleasePeripheralReset(*reset_ip_name_t* peripheral)

Release peripheral module.

Release peripheral module.

Parameters

- peripheral – Peripheral to release. The enum argument contains encoding of reset register and reset bit position in the reset register.

FSL_RESET_DRIVER_VERSION

reset driver version 2.4.0

AOI_RSTS

Reset bits for AOI peripheral.

Array initializers with peripheral reset bits

ADC_RSTS

Reset bits for ADC peripheral.

CRC_RSTS

Reset bits for CRC peripheral.

CTIMER_RSTS

Reset bits for CTIMER peripheral.

DMA_RSTS_N

Reset bits for DMA peripheral.

EIM_RSTS_N

Reset bits for EIM peripheral.

ERM_RSTS_N

Reset bits for ERM peripheral.

EQDC_RSTS

Reset bits for EQDC peripheral.

FLEXCAN_RSTS_N

Reset bits for FLEXCAN peripheral.

FLEXPWM_RSTS_N

Reset bits for FLEXPWM peripheral.

FREQME_RSTS_N

Reset bits for FREQME peripheral.

GPIO_RSTS_N

Reset bits for GPIO peripheral.

INPUTMUX_RSTS

Reset bits for INPUTMUX peripheral.

LPUART_RSTS

Reset bits for LPUART peripheral.

LPSPi_RSTS

Reset bits for LPSPi peripheral.

LPI2C_RSTS

Reset bits for LPI2C peripheral.

LPCMP_RSTS

Reset bits for LPCMP peripheral.

MAU_RSTS

Reset bits for MAU peripheral.

OPAMP_RSTS

Reset bits for OPAMP peripheral.

OSTIMER_RSTS

Reset bits for OSTIMER peripheral.

PORT_RSTS_N

Reset bits for PORT peripheral.

SMARTDMA_RSTS

Reset bits for SMARTDMA peripheral.

UTICK_RSTS

Reset bits for UTICK peripheral.

2.47 RTC: Real Time Clock

`void RTC_Init(RTC_Type *base, const rtc_config_t *config)`

Ungates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- `base` – RTC peripheral base address
- `config` – Pointer to the user's RTC configuration structure.

`static inline void RTC_Deinit(RTC_Type *base)`

Stops the timer and gate the RTC clock.

Parameters

- `base` – RTC peripheral base address

`void RTC_GetDefaultConfig(rtc_config_t *config)`

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->clockOutput = false;
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- `config` – Pointer to the user's RTC configuration structure.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- *base* – RTC peripheral base address
- *datetime* – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC
kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- *base* – RTC peripheral base address
- *datetime* – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const *rtc_datetime_t* *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- *base* – RTC peripheral base address
- *alarmTime* – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm
kStatus_InvalidArgument: Error because the alarm datetime format is incorrect
kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, *rtc_datetime_t* *datetime)

Returns the RTC alarm time.

Parameters

- *base* – RTC peripheral base address
- *datetime* – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, *uint32_t* mask)

Enables the selected RTC interrupts.

Parameters

- *base* – RTC peripheral base address
- *mask* – The interrupts to enable. This is a logical OR of members of the enumeration *rtc_interrupt_enable_t*

void RTC_DisableInterrupts(RTC_Type *base, *uint32_t* mask)

Disables the selected RTC interrupts.

Parameters

- *base* – RTC peripheral base address

- mask – The interrupts to enable. This is a logical OR of members of the enumeration `rtc_interrupt_enable_t`

`uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)`

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `rtc_interrupt_enable_t`

`uint32_t RTC_GetStatusFlags(RTC_Type *base)`

Gets the RTC status flags.

Parameters

- base – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `rtc_status_flags_t`

`void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)`

Clears the RTC status flags.

Parameters

- base – RTC peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

`static inline void RTC_StartTimer(RTC_Type *base)`

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided `SR[TOF]` or `SR[TIF]` are not set.

Parameters

- base – RTC peripheral base address

`static inline void RTC_StopTimer(RTC_Type *base)`

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- base – RTC peripheral base address

`FSL_RTC_DRIVER_VERSION`

Version 2.4.0

`enum _rtc_interrupt_enable`

List of RTC interrupts.

Values:

enumerator `kRTC_TimeInvalidInterruptEnable`

Time invalid interrupt.

enumerator `kRTC_TimeOverflowInterruptEnable`

Time overflow interrupt.

enumerator kRTC_AlarmInterruptEnable
Alarm interrupt.

enumerator kRTC_SecondsInterruptEnable
Seconds interrupt.

enum _rtc_status_flags
List of RTC flags.

Values:

enumerator kRTC_TimeInvalidFlag
Time invalid flag

enumerator kRTC_TimeOverflowFlag
Time overflow flag

enumerator kRTC_AlarmFlag
Alarm flag

typedef enum _rtc_interrupt_enable rtc_interrupt_enable_t
List of RTC interrupts.

typedef enum _rtc_status_flags rtc_status_flags_t
List of RTC flags.

typedef struct _rtc_datetime rtc_datetime_t
Structure is used to hold the date and time.

typedef struct _rtc_config rtc_config_t
RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

static inline void RTC_Reset(RTC_Type *base)
Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the RTC_WAR and RTC_RAR registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- base – RTC peripheral base address

static inline void RTC_EnableClockOutput(RTC_Type *base, bool enable)
Enables or disables the RTC 32 kHz clock output.

This function enables or disables the RTC 32 kHz clock output.

Parameters

- base – RTC_Type base pointer.
- enable – true to enable, false to disable.

struct _rtc_datetime
#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

uint16_t year

Range from 1970 to 2099.

uint8_t month

Range from 1 to 12.

uint8_t day

Range from 1 to 31 (depending on month).

uint8_t hour

Range from 0 to 23.

uint8_t minute

Range from 0 to 59.

uint8_t second

Range from 0 to 59.

struct _rtc_config

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool clockOutput

true: The 32 kHz clock is not output to other peripherals; false: The 32 kHz clock is output to other peripherals

bool wakeupSelect

true: Wakeup pin outputs the 32 KHz clock; false: Wakeup pin used to wakeup the chip

bool updateMode

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool supervisorAccess

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t compensationInterval

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t compensationTime

Compensation time that is written to the TCR field in RTC TCR Register

2.48 SMARTDMA: SMART DMA Driver

typedef void (*smartdma_callback_t)(void *param)

Callback function prototype for the smartdma driver.

```
void SMARTDMA_Init(uint32_t apiMemAddr, const void *firmware, uint32_t  
firmwareSizeByte)
```

Initialize the SMARTDMA.

Deprecated:

Do not use this function. It has been superseded by SMARTDMA_InitWithoutFirmware and SMARTDMA_InstallFirmware.

Parameters

- apiMemAddr – The address firmware will be copied to.
- firmware – The firmware to use.
- firmwareSizeByte – Size of firmware.

```
void SMARTDMA_InitWithoutFirmware(void)
```

Initialize the SMARTDMA.

This function is similar with SMARTDMA_Init, the difference is this function does not install the firmware, the firmware could be installed using SMARTDMA_InstallFirmware.

```
void SMARTDMA_InstallFirmware(uint32_t apiMemAddr, const void *firmware, uint32_t  
firmwareSizeByte)
```

Install the firmware.

Note: Only call this function when SMARTDMA is not busy.

Parameters

- apiMemAddr – The address firmware will be copied to.
- firmware – The firmware to use.
- firmwareSizeByte – Size of firmware.

```
void SMARTDMA_InstallCallback(smartdma_callback_t callback, void *param)
```

Install the complete callback function.

Note: Only call this function when SMARTDMA is not busy.

Parameters

- callback – The callback called when smartdma program finished.
- param – Parameter for the callback.

```
void SMARTDMA_Boot(uint32_t apiIndex, void *pParam, uint8_t mask)
```

Boot the SMARTDMA to run program.

Note: Only call this function when SMARTDMA is not busy.

Note: The memory *pParam shall not be freed before the SMARTDMA function finished.

Parameters

- apiIndex – Index of the API to call.

- pParam – Pointer to the parameter allocated by caller.
- mask – Value set to register SMARTDMA->ARM2EZH[0:1].

void SMARTDMA_Boot1(uint32_t apiIndex, const *smartdma_param_t* *pParam, uint8_t mask)

Copy SMARTDMA params and Boot to run program.

This function is similar with SMARTDMA_Boot, the only difference is, this function copies the *pParam to a local variable, upper layer can free the pParam's memory before the SMARTDMA execution finished, for example, upper layer can define the param as a local variable.

Note: Only call this function when SMARTDMA is not busy.

Parameters

- apiIndex – Index of the API to call.
- pParam – Pointer to the parameter.
- mask – Value set to SMARTDMA_ARM2SMARTDMA[0:1].

void SMARTDMA_Deinit(void)

Deinitialize the SMARTDMA.

void SMARTDMA_Reset(void)

Reset the SMARTDMA.

void SMARTDMA_HandleIRQ(void)

SMARTDMA IRQ.

void SMARTDMA_SetExternalFlag(uint8_t flag)

SMARTDMA set EX flag.

void SMARTDMA_AccessShareRAM(uint8_t flag)

SMARTDMA access RAM.

FSL_SMARTDMA_DRIVER_VERSION

SMARTDMA driver version.

2.49 MCXN SMARTDMA Firmware

enum _smartdma_display_api

The API index when using s_smartdmaDisplayFirmware.

Values:

enumerator kSMARTDMA_FlexIO_DMA

enum _smartdma_camera_api

The API index when using s_smartdmaCameraFirmware.

Values:

enumerator kSMARTDMA_FlexIO_CameraWholeFrame

enumerator kSMARTDMA_FlexIO_CameraDiv16Frame

Deprecated. Use kSMARTDMA_CameraWholeFrameQVGA instead.

enumerator kSMARTDMA_CameraWholeFrameQVGA

Deprecated. Use kSMARTDMA_CameraDiv16FrameQVGA instead.

Save whole frame of QVGA(320x240) to buffer in each interrupt in RGB565 format.

enumerator kSMARTDMA_CameraDiv16FrameQVGA

Save 1/16 frame of QVGA(320x240) to buffer in each interrupt in RGB565 format, takes 16 interrupts to get the whole frame.

enumerator kSMARTDMA_CameraWholeFrame480_320

Save whole frame of 480x320 to buffer in each interrupt in RGB565 format.

enumerator kSMARTDMA_CameraDiv4FrameQVGAGrayScale

Save 1/4 frame of QVGA(320x240) to buffer in each interrupt in grayscale format, takes 4 interrupts to get the whole frame.

enumerator kSMARTDMA_CameraDiv16FrameQVGAGrayScale

Save 1/16 frame of QVGA(320x240) to buffer in each interrupt in grayscale format, takes 16 interrupts to get the whole frame.

enumerator kSMARTDMA_CameraDiv16Frame384_384

Save 1/16 frame of 384x384 to buffer in each interrupt in grayscale format, takes 16 interrupts to get the whole frame.

enumerator kSMARTDMA_CameraWholeFrame320_480

Save whole frame of 320x480 to buffer in each interrupt in RGB565 format.

enum _smartdma_keyscan_api

The API index when using s_smartdmaKeyscanFirmware.

Values:

enumerator kSMARTDMA_Keyscan_4x4

Using SmartDma to control GPIO.

typedef struct _smartdma_flexio_mculcd_param smartdma_flexio_mculcd_param_t

Parameter for FlexIO MCULCD.

typedef struct _smartdma_camera_param smartdma_camera_param_t

Parameter for camera.

typedef struct _smartdma_keyscan_4x4_param smartdma_keyscan_4x4_param_t

Parameter for keyscan 4x4.

const uint8_t s_smartdmaDisplayFirmware[]

The firmware used for display.

const uint32_t s_smartdmaDisplayFirmwareSize

Size of s_smartdmaDisplayFirmware.

const uint8_t s_smartdmaCameraFirmware[]

The firmware used for camera.

const uint32_t s_smartdmaCameraFirmwareSize

Size of s_smartdmacameraFirmware.

const uint8_t s_smartdmaKeyscanFirmware[]

The firmware used for keyscan.

const uint32_t s_smartdmaKeyscanFirmwareSize

Size of s_smartdmaKeyscanFirmware.

SMARTDMA_DISPLAY_MEM_ADDR

The s_smartdmaDisplayFirmware firmware memory address.

SMARTDMA_DISPLAY_FIRMWARE_SIZE

Size of s_smartdmaDisplayFirmware.

SMARTDMA_CAMERA_MEM_ADDR

The s_smartdmaCameraFirmware firmware memory address.

SMARTDMA_CAMERA_FIRMWARE_SIZE

Size of s_smartdmacameraFirmware.

SMARTDMA_KEYSCAN_MEM_ADDR

The s_smartdmaKeyscanFirmware firmware memory address.

SMARTDMA_KEYSCAN_FIRMWARE_SIZE

Size of s_smartdmaKeyscanFirmware.

struct _smartdma_flexio_mculcd_param

#include <fsl_smartdma_mcx.h> Parameter for FlexIO MCULCD.

struct _smartdma_camera_param

#include <fsl_smartdma_mcx.h> Parameter for camera.

Public Members

uint32_t *smartdma_stack

Stack used by SMARTDMA, shall be at least 64 bytes.

uint32_t *p_buffer

Buffer to store the received camera data.

uint32_t *p_stripe_index

Pointer to stripe index. Used when only partial frame is received per interrupt.

uint32_t *p_buffer_ping_pong

Buffer to store the 2nd stripe of camera data. Used when only partial frame is received per interrupt.

union smartdma_param_t

#include <fsl_smartdma_mcx.h> Parameter for all supported APIs.

Public Members

smartdma_flexio_mculcd_param_t flexioMcuLcdParam

Parameter for flexio MCULCD.

smartdma_camera_param_t cameraParam

Parameter for camera.

struct _smartdma_keyscan_4x4_param

#include <fsl_smartdma_mcx.h> Parameter for keyscan 4x4.

Public Members

uint32_t *smartdma_stack

Stack used by SMARTDMA, shall be at least 64 bytes.

uint32_t *p_gpio_reg

Buffer to provide GPIO register for COL1, COL2, COL3, COL4, ROW1, ROW2, ROW3, ROW4.

uint32_t *p_keyvalue

Buffer to store key value.

uint32_t *p_keycan_interval

Delay how many system clock cycles.

2.50 TRDC: Trusted Resource Domain Controller

void TRDC_Init(TRDC_Type *base)

Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

void TRDC_Deinit(TRDC_Type *base)

De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)

Gets the domain ID of the current bus master.

Parameters

- base – TRDC peripheral base address.

Returns

Domain ID of current bus master.

void TRDC_GetHardwareConfig(TRDC_Type *base, trdc_hardware_config_t *config)

Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.

static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

```
static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum)
```

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdcx_master_t` in processor header file, x is trdc instance.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- assignIndex – Which assignment register to lock.

```
static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master, uint8_t regNum, bool valid)
```

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- assignIndex – Index for the domain assignment register.
- valid – True to set valid, false to set invalid.

```
void TRDC_GetDefaultProcessorDomainAssignment(trdc_processor_domain_assignment_t *domainAssignment)
```

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->domainIdSelect = kTRDC_DidMda;
assignment->lock           = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_GetDefaultNonProcessorDomainAssignment(trdc_non_processor_domain_assignment_t *domainAssignment)
```

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->privilegeAttr  = kTRDC_ForceUser;
assignment->secureAttr    = kTRDC_ForceSecure;
assignment->bypassDomainId = 0U;
assignment->lock          = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum,
                                       const trdc_processor_domain_assignment_t
                                       *domainAssignment)
```

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdc_master_t` in processor header file.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const
                                          trdc_non_processor_domain_assignment_t
                                          *domainAssignment)
```

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdc_master_t` in processor header file.
- domainAssignment – Pointer to the assignment structure.


```
static inline uint64_t TRDC_GetActiveMasterPidMap(TRDC_Type *base)
```

Gets the bit map of the bus master(s) that is(are) sourcing a PID register.

This function sets the non-processor master domain assignment as valid.

Parameters

- base – TRDC peripheral base address.

Returns

the bit map of the master(s). Bit 1 sets indicates bus master 1.

```
void TRDC_SetPid(TRDC_Type *base, uint8_t master, const trdc_pid_config_t *pidConfig)
```

Sets the current Process identifier(PID) for processor core.

Each processor has a corresponding process identifier (PID) which can be used to group tasks into different domains. Secure privileged software saves and restores the PID as part of any context switch. This data structure defines an array of 32-bit values, one per MDA module, that define the PID. Since this register resource is only applicable to processor cores, the data structure is typically sparsely populated. The HWCFG[2-3] registers provide a bitmap of the implemented PIDn registers. This data structure is indexed using the corresponding MDA instance number. Depending on the operating clock domain of each DAC instance, there may be optional information stored in the corresponding PIDm register to properly implement the LK2 = 2 functionality.

Parameters

- base – TRDC peripheral base address.
- master – Which processor master to configure, refer to trdc_master_t in processor header file.
- pidConfig – Pointer to the configuration structure.

```
void TRDC_GetDefaultIDAUConfig(trdc_idau_config_t *idauConfiguration)
```

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU      = false;
config->lockNonsecureMPU   = false;
config->lockSAU            = false;
```

Parameters

- domainAssignment – Pointer to the configuration structure.

```
void TRDC_SetIDAU(TRDC_Type *base, const trdc_idau_config_t *idauConfiguration)
```

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
idauConfiguration.lockNonsecureMPU = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)
Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)
Locks FLW registers. Once locked the registers can not be updated until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)
Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)
Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

void TRDC_GetDefaultFlashLogicalWindowConfig(*trdc_flw_config_t* *flwConfiguration)
Gets the default FLW(Flash Logical Window) configuration.

```
config->blockCount = false;
config->arrayBaseAddr = false;
config->lock = false;
config->enable = false;
```

Parameters

- flwConfiguration – Pointer to the configuration structure.

void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const *trdc_flw_config_t* *flwConfiguration)
Sets the FLW function's configuration.

```
trdc_flw_config_t flwConfiguration;

TRDC_GetDefaultIDAUConfig(&flwConfiguration);

flwConfiguration.blockCount = 32U;
flwConfiguration.arrayBaseAddr = 0xFFFFFFFF;
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- flwConfiguration – Pointer to the configuration structure.

status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, *trdc_domain_error_t* *error)

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the *kStatus_Success*. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the *kStatus_NoData*.

status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, *trdc_domain_error_t* *error, *uint8_t* domainId)

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the *kStatus_Success*. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the *kStatus_NoData*.

static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline *uint8_t* TRDC_GetMrcRegionNumber(TRDC_Type *base, *uint8_t* mrcIdx)

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.

Returns

the region number of the given MRC instance

void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, *uint8_t* mrcIdx, *uint8_t* regIdx)

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

```
void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t
                                   domianMask, bool enable)
```

Enables the update of the selected domians.

After the domians' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domianMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

```
void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

```
void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

```
void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)
```

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains whose NSE bits to clear.

```
void TRDC__MrcSetRegionDescriptorConfig(TRDC_Type *base, const
                                         trdc_mrc_region_descriptor_config_t *config)
```

Sets the configuration for one of the region descriptor per domain per MRC instance.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

```
static inline void TRDC__SetMbcGlobalValid(TRDC_Type *base)
```

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

```
void TRDC__GetMbcHardwareConfig(TRDC_Type *base, trdc_slave_memory_hardware_config_t
                                *config, uint8_t mbcIdx, uint8_t slvIdx)
```

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

```
void TRDC__MbcSetNseUpdateConfig(TRDC_Type *base, const trdc_mbc_nse_update_config_t
                                  *config, uint8_t mbcIdx)
```

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be update by NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

```
void TRDC__MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)
```

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured region, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

```
void TRDC_MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)
```

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

```
void TRDC_MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slave)
```

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

```
void TRDC_MbcSetMemoryAccessConfig(TRDC_Type *base, const
                                   trdc_memory_access_control_config_t *config, uint8_t
                                   mbcIdx, uint8_t rgdIdx)
```

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

```
void TRDC_MbcSetMemoryBlockConfig(TRDC_Type *base, const
                                  trdc_mbc_memory_block_config_t *config)
```

Sets the configuration for one of the memory block per domain per MBC instance.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

enum _trdc_did_sel

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

Values:

enumerator kTRDC_DidMda

Use MDAn[2:0] as DID.

enumerator kTRDC_DidInput

Use the input DID (DID_in) as DID.

enumerator kTRDC_DidMdaAndInput

Use MDAn[2] concatenated with DID_in[1:0] as DID.

enumerator kTRDC_DidReserved

Reserved.

enum _trdc_secure_attr

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

Values:

enumerator kTRDC_ForceSecure

Force the bus attribute for this master to secure.

enumerator kTRDC_ForceNonSecure

Force the bus attribute for this master to non-secure.

enumerator kTRDC_MasterSecure

Use the bus master's secure/nonsecure attribute directly.

enumerator kTRDC_MasterSecure1

Use the bus master's secure/nonsecure attribute directly.

enum _trdc_pid_domain_hit_config

The configuration of domain hit evaluation of PID.

Values:

enumerator kTRDC_pidDomainHitNone0

No PID is included in the domain hit evaluation.

enumerator kTRDC_pidDomainHitNone1

No PID is included in the domain hit evaluation.

enumerator kTRDC_pidDomainHitInclusive

The PID is included in the domain hit evaluation when (PID & ~PIDM).

enumerator kTRDC_pidDomainHitExclusive

The PID is included in the domain hit evaluation when ~(PID & ~PIDM).

enum _trdc_privilege_attr

TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

Values:

enumerator kTRDC_ForceUser

Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege

Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege

Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1

Use the bus master's attribute directly.

enum _trdc_pid_lock

PID lock configuration.

Values:

enumerator kTRDC_PidUnlocked0

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked1

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked2

The PID value can be updated by any secure privileged write from the bus master that first configured this register.

enumerator kTRDC_PidLocked

The PID value is locked until next reset.

enum _trdc_controller

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0

Memory block checker 0.

enumerator kTRDC_MemBlockController1

Memory block checker 1.

enumerator kTRDC_MemBlockController2

Memory block checker 2.

enumerator kTRDC_MemBlockController3

Memory block checker 3.

enumerator kTRDC_MemRegionChecker0

Memory region checker 0.

enumerator kTRDC_MemRegionChecker1

Memory region checker 1.

enumerator kTRDC_MemRegionChecker2

Memory region checker 2.

enumerator kTRDC_MemRegionChecker3

Memory region checker 3.

enumerator kTRDC_MemRegionChecker4

Memory region checker 4.

enumerator kTRDC_MemRegionChecker5

Memory region checker 5.

enumerator kTRDC_MemRegionChecker6

Memory region checker 6.

enum _trdc_error_state

TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or
TRDC_MRCn_DERR_W1[EST].

Values:

enumerator kTRDC_ErrorStateNone
No access violation detected.

enumerator kTRDC_ErrorStateNone1
No access violation detected.

enumerator kTRDC_ErrorStateSingle
Single access violation detected.

enumerator kTRDC_ErrorStateMulti
Multiple access violation detected.

enum _trdc_error_attr

TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or
TRDC_MRCn_DERR_W1[EATR].

Values:

enumerator kTRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum _trdc_error_type

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum _trdc_region_descriptor

The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator kTRDC_RegionDescriptor0
Region descriptor 0.

enumerator kTRDC_RegionDescriptor1
Region descriptor 1.

enumerator kTRDC_RegionDescriptor2
Region descriptor 2.

enumerator kTRDC_RegionDescriptor3
Region descriptor 3.

enumerator kTRDC_RegionDescriptor4
Region descriptor 4.

enumerator kTRDC_RegionDescriptor5
Region descriptor 5.

enumerator kTRDC_RegionDescriptor6
Region descriptor 6.

enumerator kTRDC_RegionDescriptor7
Region descriptor 7.

enumerator kTRDC_RegionDescriptor8
Region descriptor 8.

enumerator kTRDC_RegionDescriptor9
Region descriptor 9.

enumerator kTRDC_RegionDescriptor10
Region descriptor 10.

enumerator kTRDC_RegionDescriptor11
Region descriptor 11.

enumerator kTRDC_RegionDescriptor12
Region descriptor 12.

enumerator kTRDC_RegionDescriptor13
Region descriptor 13.

enumerator kTRDC_RegionDescriptor14
Region descriptor 14.

enumerator kTRDC_RegionDescriptor15
Region descriptor 15.

enum _trdc_MRC_domain

The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator kTRDC_MrcDomain0
Domain 0.

enumerator kTRDC_MrcDomain1
Domain 1.

enumerator kTRDC_MrcDomain2
Domain 2.

enumerator kTRDC_MrcDomain3
Domain 3.

enumerator kTRDC_MrcDomain4
Domain 4.

enumerator kTRDC_MrcDomain5
Domain 5.

enumerator kTRDC_MrcDomain6
Domain 6.

enumerator kTRDC_MrcDomain7
Domain 7.

enumerator kTRDC_MrcDomain8
Domain 8.

enumerator kTRDC_MrcDomain9
Domain 9.

enumerator kTRDC_MrcDomain10
Domain 10.

enumerator kTRDC_MrcDomain11
Domain 11.

enumerator kTRDC_MrcDomain12
Domain 12.

enumerator kTRDC_MrcDomain13
Domain 13.

enumerator kTRDC_MrcDomain14
Domain 14.

enumerator kTRDC_MrcDomain15
Domain 15.

enum _trdc_MBC_domain

The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0
Domain 0.

enumerator kTRDC_MbcDomain1
Domain 1.

enumerator kTRDC_MbcDomain2
Domain 2.

enumerator kTRDC_MbcDomain3
Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum __trdc_MBC_memory

The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2
Memory 2.

enumerator kTRDC_MbcSlaveMemory3
Memory 3.

enum __trdc_MBC_bit

The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0
Bit 0.

enumerator kTRDC_MbcBit1
Bit 1.

enumerator kTRDC_MbcBit2
Bit 2.

enumerator kTRDC_MbcBit3
Bit 3.

enumerator kTRDC_MbcBit4
Bit 4.

enumerator kTRDC_MbcBit5
Bit 5.

enumerator kTRDC_MbcBit6
Bit 6.

enumerator kTRDC_MbcBit7
Bit 7.

enumerator kTRDC_MbcBit8
Bit 8.

enumerator kTRDC_MbcBit9
Bit 9.

enumerator kTRDC_MbcBit10
Bit 10.

enumerator kTRDC_MbcBit11
Bit 11.

enumerator kTRDC_MbcBit12

Bit 12.

enumerator kTRDC_MbcBit13

Bit 13.

enumerator kTRDC_MbcBit14

Bit 14.

enumerator kTRDC_MbcBit15

Bit 15.

enumerator kTRDC_MbcBit16

Bit 16.

enumerator kTRDC_MbcBit17

Bit 17.

enumerator kTRDC_MbcBit18

Bit 18.

enumerator kTRDC_MbcBit19

Bit 19.

enumerator kTRDC_MbcBit20

Bit 20.

enumerator kTRDC_MbcBit21

Bit 21.

enumerator kTRDC_MbcBit22

Bit 22.

enumerator kTRDC_MbcBit23

Bit 23.

enumerator kTRDC_MbcBit24

Bit 24.

enumerator kTRDC_MbcBit25

Bit 25.

enumerator kTRDC_MbcBit26

Bit 26.

enumerator kTRDC_MbcBit27

Bit 27.

enumerator kTRDC_MbcBit28

Bit 28.

enumerator kTRDC_MbcBit29

Bit 29.

enumerator kTRDC_MbcBit30

Bit 30.

enumerator kTRDC_MbcBit31

Bit 31.

typedef struct *trdc_hardware_config* trdc_hardware_config_t
TRDC hardware configuration.

```
typedef struct _trdc_slave_memory_hardware_config trdc_slave_memory_hardware_config_t
    Hardware configuration of the two slave memories within each MBC(memory block
    checker).
```

```
typedef enum _trdc_did_sel trdc_did_sel_t
    TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for
    domain hit evaluation.
```

```
typedef enum _trdc_secure_attr trdc_secure_attr_t
    TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master
    domain assignment.
```

```
typedef enum _trdc_pid_domain_hit_config trdc_pid_domain_hit_config_t
    The configuration of domain hit evaluation of PID.
```

```
typedef struct _trdc_processor_domain_assignment trdc_processor_domain_assignment_t
    Domain assignment for the processor bus master.
```

```
typedef enum _trdc_privilege_attr trdc_privilege_attr_t
    TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-
    processor bus master domain assignment.
```

```
typedef struct _trdc_non_processor_domain_assignment
trdc_non_processor_domain_assignment_t
    Domain assignment for the non-processor bus master.
```

```
typedef enum _trdc_pid_lock trdc_pid_lock_t
    PID lock configuration.
```

```
typedef struct _trdc_pid_config trdc_pid_config_t
    Process identifier(PID) configuration for processor cores.
```

```
typedef struct _trdc_idau_config trdc_idau_config_t
    IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.
```

```
typedef struct _trdc_flw_config trdc_flw_config_t
    FLW(Flash Logical Window) configuration.
```

```
typedef enum _trdc_controller trdc_controller_t
    TRDC controller definition for domain error check. Each TRDC instance may have different
    MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.
```

```
typedef enum _trdc_error_state trdc_error_state_t
    TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or
    TRDC_MRCn_DERR_W1[EST].
```

```
typedef enum _trdc_error_attr trdc_error_attr_t
    TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or
    TRDC_MRCn_DERR_W1[EATR].
```

```
typedef enum _trdc_error_type trdc_error_type_t
    TRDC domain error access type definition TRDC_DERR_W1_n[ERW].
```

```
typedef struct _trdc_domain_error trdc_domain_error_t
    TRDC domain error definition.
```

```
typedef struct _trdc_memory_access_control_config trdc_memory_access_control_config_t
    Memory access control configuration for MBC/MRC.
```

```
typedef struct _trdc_mrc_region_descriptor_config trdc_mrc_region_descriptor_config_t
    The configuration of each region descriptor per domain per MRC instance.
```

```
typedef struct _trdc_mbc_nse_update_config trdc_mbc_nse_update_config_t
```

The configuration of MBC NSE update.

```
typedef struct _trdc_mbc_memory_block_config trdc_mbc_memory_block_config_t
```

The configuration of each memory block per domain per MBC instance.

```
FSL_TRDC_DRIVER_VERSION
```

```
struct _trdc_hardware_config
```

#include <fsl_trdc.h> TRDC hardware configuration.

Public Members

```
uint8_t masterNumber
```

Number of bus masters.

```
uint8_t domainNumber
```

Number of domains.

```
uint8_t mbcNumber
```

Number of MBCs.

```
uint8_t mrcNumber
```

Number of MRCs.

```
struct _trdc_slave_memory_hardware_config
```

#include <fsl_trdc.h> Hardware configuration of the two slave memories within each MBC(memory block checker).

Public Members

```
uint32_t blockNum
```

Number of blocks.

```
uint32_t blockSize
```

Block size.

```
struct _trdc_processor_domain_assignment
```

#include <fsl_trdc.h> Domain assignment for the processor bus master.

Public Members

```
uint32_t domainId
```

Domain ID.

```
uint32_t domainIdSelect
```

Domain ID select method, see `trdc_did_sel_t`.

```
uint32_t pidDomainHitConfig
```

The configuration of the domain hit evaluation for PID, see `trdc_pid_domain_hit_config_t`.

```
uint32_t pidMask
```

The mask combined with PID, so multiple PID can be included as part of the domain hit determination. Set to 0 to disable.

```
uint32_t secureAttr
```

Secure attribute, see `trdc_secure_attr_t`.

uint32_t pid

The process identifier, combined with pidMask to form the domain hit determination.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct __trdc_non_processor_domain_assignment

#include <fsl_trdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see trdc_privilege_attr_t.

uint32_t secureAttr

Secure attribute, see trdc_secure_attr_t.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct __trdc_pid_config

#include <fsl_trdc.h> Process identifier(PID) configuration for processor cores.

Public Members

uint32_t pid

The process identifier of the executing task. The highest bit can be used to define secure/nonsecure attribute of the task.

uint32_t __pad0__

Reserved.

uint32_t lock

How to lock the register, see trdc_pid_lock_t.

uint32_t __pad1__

Reserved.

struct __trdc_idau_config

#include <fsl_trdc.h> IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t __pad0__

Reserved.

uint32_t lockSecureVTOR

Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR

Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU

Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU

Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU

Disable writes to SAU(Security Attribution Unit) registers.

uint32_t __pad1__

Reserved.

struct _trdc_flw_config

#include <fsl_trdc.h> FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount

Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr

Flash array base address of the Flash Logical Window.

bool lock

Disable writes to FLW registers.

bool enable

Enable FLW function.

struct _trdc_domain_error

#include <fsl_trdc.h> TRDC domain error definition.

Public Members

trdc_controller_t controller

Which controller captured access violation.

uint32_t address

Access address that generated access violation.

trdc_error_state_t errorState

Error state.

trdc_error_attr_t errorAttr

Error attribute.

trdc_error_type_t errorType

Error type.

uint8_t errorPort

Error port.

uint8_t domainId

Domain ID.

uint8_t slaveMemoryIdx

The slave memory index. Only apply when violation in MBC.

struct __trdc_memory_access_control_config

#include <fsl_trdc.h> Memory access control configuration for MBC/MRC.

Public Members

uint32_t nonsecureUsrX

Allow nonsecure user execute access.

uint32_t nonsecureUsrW

Allow nonsecure user write access.

uint32_t nonsecureUsrR

Allow nonsecure user read access.

uint32_t __pad0__

Reserved.

uint32_t nonsecurePrivX

Allow nonsecure privilege execute access.

uint32_t nonsecurePrivW

Allow nonsecure privilege write access.

uint32_t nonsecurePrivR

Allow nonsecure privilege read access.

uint32_t __pad1__

Reserved.

uint32_t secureUsrX

Allow secure user execute access.

uint32_t secureUsrW

Allow secure user write access.

uint32_t secureUsrR

Allow secure user read access.

uint32_t __pad2__

Reserved.

uint32_t securePrivX

Allownonsecure privilege execute access.

uint32_t securePrivW

Allownonsecure privilege write access.

uint32_t securePrivR

Allownonsecure privilege read access.

uint32_t __pad3__
Reserved.

uint32_t lock
Lock the configuration until next reset, only apply to access control register 0.

struct _trdc_mrc_region_descriptor_config
#include <fsl_trdc.h> The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect
Select one of the 8 access control policies for this region, for access control policies see `trdc_memory_access_control_config_t`.

uint32_t startAddr
Physical start address.

bool valid
Lock the register.

bool nseEnable
Enable non-secure accesses and disable secure accesses.

uint32_t endAddr
Physical start address.

uint8_t mrcIdx
The index of the MRC for this configuration to take effect.

uint8_t domainIdx
The index of the domain for this configuration to take effect.

uint8_t regionIdx
The index of the region for this configuration to take effect.

struct _trdc_mbc_nse_update_config
#include <fsl_trdc.h> The configuration of MBC NSE update.

Public Members

uint32_t __pad0__
Reserved.

uint32_t wordIdx
MBC configuration word index to be updated.

uint32_t __pad1__
Reserved.

uint32_t memorySelect
Bit mask of the selected memory to be updated. `_trdc_MBC_memory`.

uint32_t __pad2__
Reserved.

uint32_t domainSelect
Bit mask of the selected domain to be updated. `_trdc_MBC_domain`.

uint32_t __pad3__
Reserved.

uint32_t autoIncrement

Whether to increment the word index after current word is updated using this configuration.

struct _trdc_mbc_memory_block_config

#include <fsl_trdc.h> The configuration of each memory block per domain per MBC instance.

Public Members

uint32_t memoryAccessControlSelect

Select one of the 8 access control policies for this memory block, for access control policies see trdc_memory_access_control_config_t.

uint32_t nseEnable

Enable non-secure accesses and disable secure accesses.

uint32_t mbcIdx

The index of the MBC for this configuration to take effect.

uint32_t domainIdx

The index of the domain for this configuration to take effect.

uint32_t slaveMemoryIdx

The index of the slave memory for this configuration to take effect.

uint32_t memoryBlockIdx

The index of the memory block for this configuration to take effect.

2.51 Trdc_core

typedef struct *_TRDC_General_Type* TRDC_General_Type

TRDC general configuration register definition.

typedef struct *_TRDC_FLW_Type* TRDC_FLW_Type

TRDC flash logical control register definition.

typedef struct *_TRDC_DomainError_Type* TRDC_DomainError_Type

TRDC domain error register definition.

typedef struct *_TRDC_DomainAssignment_Type* TRDC_DomainAssignment_Type

TRDC master domain assignment register definition.

typedef struct *_TRDC_MBC_Type* TRDC_MBC_Type

TRDC MBC control register definition.

typedef struct *_TRDC_MRC_Type* TRDC_MRC_Type

TRDC MRC control register definition. MRC_DOM0_RGD_W[region][word].

TRDC_GENERAL_BASE(base)

TRDC base address convert macro.

TRDC_FLW_BASE(base)

TRDC_DOMAIN_ERROR_BASE(base)

TRDC_DOMAIN_ASSIGNMENT_BASE(base)

TRDC_MBC_BASE(base, instance)

TRDC_MRC_BASE(base, instance)

struct _TRDC_General_Type

#include <fsl_trdc_core.h> TRDC general configuration register definition.

Public Members

__IO uint32_t TRDC_CR

TRDC Register, offset: 0x0

__I uint32_t TRDC_HWCFG0

TRDC Hardware Configuration Register 0, offset: 0xF0

__I uint32_t TRDC_HWCFG1

TRDC Hardware Configuration Register 1, offset: 0xF4

__I uint32_t TRDC_HWCFG2

TRDC Hardware Configuration Register 2, offset: 0xF8

__I uint32_t TRDC_HWCFG3

TRDC Hardware Configuration Register 3, offset: 0xFC

__I uint8_t DACFG [8]

Domain Assignment Configuration Register, array offset: 0x100, array step: 0x1

__IO uint32_t TRDC_IDAU_CR

TRDC IDAU Control Register, offset: 0x1C0

struct _TRDC_FLW_Type

#include <fsl_trdc_core.h> TRDC flash logical control register definition.

Public Members

__IO uint32_t TRDC_FLW_CTL

TRDC FLW Control, offset: 0x1E0

__I uint32_t TRDC_FLW_PBASE

TRDC FLW Physical Base, offset: 0x1E4

__IO uint32_t TRDC_FLW_ABASE

TRDC FLW Array Base, offset: 0x1E8

__IO uint32_t TRDC_FLW_BCNT

TRDC FLW Block Count, offset: 0x1EC

struct _TRDC_DomainError_Type

#include <fsl_trdc_core.h> TRDC domain error register definition.

Public Members

__IO uint32_t TRDC_FDID

TRDC Fault Domain ID, offset: 0x1FC

__I uint32_t TRDC_DERRLOC [16]

TRDC Domain Error Location Register, array offset: 0x200, array step: 0x4

struct _TRDC_DomainAssignment_Type

#include <fsl_trdc_core.h> TRDC master domain assignment register definition.

Public Members

__IO uint32_t PID [8]

Process Identifier, array offset: 0x700, array step: 0x4

struct _TRDC_MBC_Type

#include <fsl_trdc_core.h> TRDC MBC control register definition.

Public Members

__IO uint32_t MBC_MEM_GLBCFG [4]

MBC Global Configuration Register, array offset: 0x10000, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_NSE_BLK_INDEX

MBC NonSecure Enable Block Index, array offset: 0x10010, array step: 0x2000

__IO uint32_t MBC_NSE_BLK_SET

MBC NonSecure Enable Block Set, array offset: 0x10014, array step: 0x2000

__IO uint32_t MBC_NSE_BLK_CLR

MBC NonSecure Enable Block Clear, array offset: 0x10018, array step: 0x2000

__IO uint32_t MBC_NSE_BLK_CLR_ALL

MBC NonSecure Enable Block Clear All, array offset: 0x1001C, array step: 0x2000

__IO uint32_t MBC_MEMN_GLBAC [8]

MBC Global Access Control, array offset: 0x10020, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM0_BLK_CFG_W [64]

MBC Memory Block Configuration Word, array offset: 0x10040, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM0_BLK_NSE_W [16]

MBC Memory Block NonSecure Enable Word, array offset: 0x10140, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM1_BLK_CFG_W [8]

MBC Memory Block Configuration Word, array offset: 0x10180, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM1_BLK_NSE_W [2]

MBC Memory Block NonSecure Enable Word, array offset: 0x101A0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM2_BLK_CFG_W [8]

MBC Memory Block Configuration Word, array offset: 0x101A8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM2_BLK_NSE_W [2]

MBC Memory Block NonSecure Enable Word, array offset: 0x101C8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM0_MEM3_BLK_CFG_W [8]

MBC Memory Block Configuration Word, array offset: 0x101D0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM0_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105C8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM2_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10640, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109A8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM4_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10D40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10D80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DA0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM6_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10E40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10F40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10F80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11040, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11140, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11180, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM8_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11540, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11580, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115A0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115A8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115C8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115D0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM10_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115F0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11640, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11740, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11780, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117A0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117A8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117C8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117D0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM11_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117F0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM12_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11840, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM12_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BF0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM14_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11D40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11D80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11DA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11DD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM14_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11E40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11F40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11F80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11FA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11FA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11FC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM15_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11FD0, array step: index*0x2000, index2*0x4

```
__IO uint32_t MBC_DOM15_MEM3_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FF0, array step: index*0x2000, index2*0x4

struct __TRDC_MRC_Type
#include <fsl_trdc_core.h> TRDC MRC control register definition.
MRC_DOM0_RGD_W[region][word].
```

Public Members

```
__I uint32_t MRC_GLBCFG
    MRC Global Configuration Register, array offset: 0x14000, array step: 0x1000

__IO uint32_t MRC_NSE_RGN_INDIRECT
    MRC NonSecure Enable Region Indirect, array offset: 0x14010, array step: 0x1000

__O uint32_t MRC_NSE_RGN_SET
    MRC NonSecure Enable Region Set, array offset: 0x14014, array step: 0x1000

__O uint32_t MRC_NSE_RGN_CLR
    MRC NonSecure Enable Region Clear, array offset: 0x14018, array step: 0x1000

__O uint32_t MRC_NSE_RGN_CLR_ALL
    MRC NonSecure Enable Region Clear All, array offset: 0x1401C, array step: 0x1000

__IO uint32_t MRC_GLBAC [8]
    MRC Global Access Control, array offset: 0x14020, array step: index*0x1000, index2*0x4

__IO uint32_t MRC_DOM0_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14040, array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM0_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x140C0, array step: 0x1000

__IO uint32_t MRC_DOM1_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14140, array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM1_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x141C0, array step: 0x1000

__IO uint32_t MRC_DOM2_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14240, array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM2_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x142C0, array step: 0x1000

__IO uint32_t MRC_DOM3_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14340, array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM3_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x143C0, array step: 0x1000

__IO uint32_t MRC_DOM4_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14440, array step: index*0x1000, index2*0x8, index3*0x4
```

```

__IO uint32_t MRC_DOM4_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x144C0, array step: 0x1000
__IO uint32_t MRC_DOM5_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14540,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM5_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x145C0, array step: 0x1000
__IO uint32_t MRC_DOM6_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14640,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM6_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x146C0, array step: 0x1000
__IO uint32_t MRC_DOM7_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14740,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM7_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x147C0, array step: 0x1000
__IO uint32_t MRC_DOM8_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14840,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM8_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x148C0, array step: 0x1000
__IO uint32_t MRC_DOM9_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14940,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM9_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x149C0, array step: 0x1000
__IO uint32_t MRC_DOM10_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14A40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM10_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14AC0, array step: 0x1000
__IO uint32_t MRC_DOM11_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14B40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM11_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14BC0, array step: 0x1000
__IO uint32_t MRC_DOM12_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14C40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM12_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14CC0, array step: 0x1000
__IO uint32_t MRC_DOM13_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14D40,
    array step: index*0x1000, index2*0x8, index3*0x4

```


__IO uint32_t MRC_DOM13_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14DC0, array step: 0x1000

__IO uint32_t MRC_DOM14_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14E40,
array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM14_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14EC0, array step: 0x1000

__IO uint32_t MRC_DOM15_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14F40,
array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM15_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14FC0, array step: 0x1000

struct MBC_DERR

Public Members

__I uint32_t W0
MBC Domain Error Word0 Register, array offset: 0x400, array step: 0x10

__I uint32_t W1
MBC Domain Error Word1 Register, array offset: 0x404, array step: 0x10

__O uint32_t W3
MBC Domain Error Word3 Register, array offset: 0x40C, array step: 0x10

struct MRC_DERR

Public Members

__I uint32_t W0
MRC Domain Error Word0 Register, array offset: 0x480, array step: 0x10

__I uint32_t W1
MRC Domain Error Word1 Register, array offset: 0x484, array step: 0x10

__O uint32_t W3
MRC Domain Error Word3 Register, array offset: 0x48C, array step: 0x10

union __unnamed74__

Public Members

struct *_TRDC_DomainAssignment_Type* MDA_DFMT0[8]
struct *_TRDC_DomainAssignment_Type* MDA_DFMT1[8]

struct MDA_DFMT0

Public Members

__IO uint32_t MDA_W_DFMT0 [8]
DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20,
index2*0x4

struct MDA_DFMT1

Public Members

__IO uint32_t MDA_W_DFMT1 [1]

DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20, index2*0x4

2.52 Trdc_soc

FSL_TRDC_SOC_DRIVER_VERSION

Driver version 2.0.0.

TRDC_MBC_MEM_GLBCFG_NBLKS_MASK

TRDC_MBC_MEM_GLBCFG_SIZE_LOG2_MASK

TRDC_MBC_MEM_GLBCFG_SIZE_LOG2_SHIFT

TRDC_MBC_NSE_BLK_CLR_ALL_MEMSEL(x)

TRDC_MBC_NSE_BLK_CLR_ALL_DID_SEL(x)

FSL_FEATURE_TRDC_DOMAIN_COUNT

TRDC feature.

TRDC_MBC_COUNT

TRDC base address convert macro.

TRDC_MBC_OFFSET(x)

MBC register offset in TRDC_Type structure.

TRDC_MBC_ARRAY_STEP

Offset between two MBC control block, useless if there is only one.

FSL_COMPONENT_ID

2.53 UTICK: MictoTick Timer Driver

void UTICK_Init(UTICK_Type *base)

Initializes an UTICK by turning its bus clock on.

void UTICK_Deinit(UTICK_Type *base)

Deinitializes a UTICK instance.

This function shuts down Utick bus clock

Parameters

- base – UTICK peripheral base address.

uint32_t UTICK_GetStatusFlags(UTICK_Type *base)

Get Status Flags.

This returns the status flag

Parameters

- base – UTICK peripheral base address.

Returns

status register value

void UTICK_ClearStatusFlags(UTICK_Type *base)

Clear Status Interrupt Flags.

This clears intr status flag

Parameters

- base – UTICK peripheral base address.

Returns

none

void UTICK_SetTick(UTICK_Type *base, *utick_mode_t* mode, uint32_t count, *utick_callback_t* cb)

Starts UTICK.

This function starts a repeat/onetime countdown with an optional callback

Parameters

- base – UTICK peripheral base address.
- mode – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- count – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- cb – UTICK callback (can be left as NULL if none, otherwise should be a void func(void))

Returns

none

void UTICK_HandleIRQ(UTICK_Type *base, *utick_callback_t* cb)

UTICK Interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in UTICK_SetTick()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – UTICK peripheral base address.
- cb – callback scheduled for this instance of UTICK

Returns

none

FSL_UTICK_DRIVER_VERSION

UTICK driver version 2.0.5.

enum *_utick_mode*

UTICK timer operational mode.

Values:

enumerator kUTICK_Onetime

Trigger once

enumerator kUTICK_Repeat

Trigger repeatedly

typedef enum *_utick_mode* *utick_mode_t*

UTICK timer operational mode.

typedef void (**utick_callback_t*)(void)

UTICK callback function.

2.54 WAKETIMER: WAKETIMER Driver

`void WAKETIMER_Init(WAKETIMER_Type *base, const waketimer_config_t *config)`

Initializes an WAKETIMER.

This function initializes the WAKETIMER.

Parameters

- `base` – WAKETIMER peripheral base address.
- `config` – Pointer to the user configuration structure.

`void WAKETIMER_Deinit(WAKETIMER_Type *base)`

Deinitializes a WAKETIMER instance.

This function deinitialize the WAKETIMER.

Parameters

- `base` – WAKETIMER peripheral base address.

`void WAKETIMER_GetDefaultConfig(waketimer_config_t *config)`

Fills in the WAKETIMER configuration structure with the default settings.

The default values are:

```
config->enableInterrupt = true;
config->enableOSCDivide = true;
config->callback        = NULL;
```

Parameters

- `config` – Pointer to the user configuration structure.

`void WAKETIMER_EnableInterrupts(WAKETIMER_Type *base, uint32_t mask)`

Enables the selected WAKETIMER interrupts.

Parameters

- `base` – WAKETIMER peripheral base address
- `mask` – Mask value for interrupt events. See to `_waketimer_interrupt_enable`

`void WAKETIMER_DisableInterrupts(WAKETIMER_Type *base, uint32_t mask)`

Enables the selected WAKETIMER interrupts.

Parameters

- `base` – WAKETIMER peripheral base address
- `mask` – Mask value for interrupt events. See to `_waketimer_interrupt_enable`

`void WAKETIMER_ClearStatusFlags(WAKETIMER_Type *base, uint32_t mask)`

Clear Status Interrupt Flag.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- `base` – WAKETIMER peripheral base address.
- `mask` – Mask value for flags to be cleared. See to `_waketimer_status_flags`.

Returns

none

`void WAKETIMER_SetCallback(WAKETIMER_Type *base, waketimer_callback_t callback)`

Receive notification when waketime countdown.

If the interrupt for the waketime countdown is enabled, then a callback can be registered which will be invoked when the event is triggered

Parameters

- `base` – WAKETIMER peripheral base address
- `callback` – Function to invoke when the event is triggered

`static inline void WAKETIMER_HaltTimer(WAKETIMER_Type *base)`

Halt and clear timer counter.

This halt and clear timer counter.

Parameters

- `base` – WAKETIMER peripheral base address.

Returns

none

`static inline void WAKETIMER_StartTimer(WAKETIMER_Type *base, uint32_t value)`

Set timer counter.

This set the timer counter and start the timer countdown.

Parameters

- `base` – WAKETIMER peripheral base address.
- `value` – countdown value.

Returns

none

`uint32_t WAKETIMER_GetCurrentTimerValue(WAKETIMER_Type *base)`

Get current timer count value from WAKETIMER.

This function will get a decimal timer count value. The RAW value of timer count is gray code format, will be translated to decimal data internally.

Parameters

- `base` – WAKETIMER peripheral base address.

Returns

Value of WAKETIMER which will be formatted to decimal value.

`FSL_WAKETIMER_DRIVER_VERSION`

WAKETIMER driver version.

`enum _waketimer_status_flags`

WAKETIMER status flags.

Values:

enumerator `kWAKETIMER_WakeFlag`

Wake Timer Status Flag, sets wake timer has timed out.

`enum _waketimer_interrupt_enable`

Define interrupt switchers of the module.

Values:

enumerator `kWAKETIMER_WakeInterruptEnable`

Generate interrupt requests when `WAKE_FLAG` is asserted.

```
typedef void (*waketimer_callback_t)(void)
```

waketimer callback function.

```
typedef struct _waketimer_config waketimer_config_t
```

WAKETIMER configuration structure.

This structure holds the configuration settings for the WAKETIMER peripheral. To initialize this structure to reasonable defaults, call the WAKETIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
struct _waketimer_config
```

#include <fsl_waketimer.h> WAKETIMER configuration structure.

This structure holds the configuration settings for the WAKETIMER peripheral. To initialize this structure to reasonable defaults, call the WAKETIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool enableOSCDivide

true: Enable OSC Divide. false: Disable OSC Divide.

bool enableInterrupt

true: Enable interrupt. false: Disable interrupt.

waketimer_callback_t callback

timer countdown callback.

2.55 WUU: Wakeup Unit driver

```
void WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const
                                     wuu_external_wakeup_pin_config_t *config)
```

Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin. See Reference Manual for the details.
- config – Pointer to wuu_external_wakeup_pin_config_t structure.

```
void WUU_ClearExternalWakeupPinsConfig(WUU_Type *base, uint8_t pinIndex)
```

Disable and clear external wakeup pin settings.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin.

```
static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)
```

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all external wakeup pins.

```
static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)
```

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- base – WUU peripheral base address.
- mask – The mask of Wakeup pin index to be cleared.

```
void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                         wuu_internal_wakeup_module_event_t event)
```

Config Internal modules' event as the wake up sources.

This function configs the internal modules event as the wake up sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – Select interrupt or DMA/Trigger of the internal module as the wake up source.

```
void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                           wuu_internal_wakeup_module_event_t event)
```

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – The event(interrupt or DMA/trigger) of the internal module to disable.

```
void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const  
                           wuu_pin_filter_config_t *config)
```

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filter operate mode filter wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filter.
- config – Pointer to wuu_pin_filter_config_t structure.

bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

FSL_WUU_DRIVER_VERSION

Defines WUU driver version 2.4.0.

enum _wuu_external_pin_edge_detection

External WakeUp pin edge detection enumeration.

Values:

enumerator kWUU_ExternalPinDisable

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge

External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge

External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge

External input Pin enabled with any change detection.

enum _wuu_external_wakeup_pin_event

External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt
External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest
External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent
External input Pin configured as Trigger event.

enum _wu_external_wakeup_pin_mode
External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD
External input Pin is active only during Deep Sleep/Power Down Mode.

enumerator kWUU_ExternalPinActiveAlways
External input Pin is active during all power modes.

enum _wu_internal_wakeup_module_event
Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt
Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger
Internal modules' DMA/Trigger as a wakeup source.

enum _wu_filter_edge
Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum _wu_filter_event
Pin Filter event enumeration.

Values:

enumerator kWUU_FilterInterrupt
Filter output configured as interrupt.

enumerator kWUU_FilterDMARequest
Filter output configured as DMA request.

enumerator kWUU_FilterTriggerEvent
Filter output configured as Trigger event.

enum `_wuui_filter_mode`

Pin filter mode enumeration.

Values:

enumerator `kWUUI_FilterActiveDSPD`

External input pin filter is active only during Deep Sleep/Power Down Mode.

enumerator `kWUUI_FilterActiveAlways`

External input Pin filter is active during all power modes.

typedef enum `_wuui_external_pin_edge_detection` `wuui_external_pin_edge_detection_t`

External WakeUp pin edge detection enumeration.

typedef enum `_wuui_external_wakeup_pin_event` `wuui_external_wakeup_pin_event_t`

External input wake up pin event enumeration.

typedef enum `_wuui_external_wakeup_pin_mode` `wuui_external_wakeup_pin_mode_t`

External input wake up pin mode enumeration.

typedef enum `_wuui_internal_wakeup_module_event` `wuui_internal_wakeup_module_event_t`

Internal module wake up event enumeration.

typedef enum `_wuui_filter_edge` `wuui_filter_edge_t`

Pin filter edge enumeration.

typedef enum `_wuui_filter_event` `wuui_filter_event_t`

Pin Filter event enumeration.

typedef enum `_wuui_filter_mode` `wuui_filter_mode_t`

Pin filter mode enumeration.

typedef struct `_wuui_external_wakeup_pin_config` `wuui_external_wakeup_pin_config_t`

External WakeUp pin configuration.

typedef struct `_wuui_pin_filter_config` `wuui_pin_filter_config_t`

Pin Filter configuration.

struct `_wuui_external_wakeup_pin_config`

`#include <fsl_wuui.h>` External WakeUp pin configuration.

Public Members

`wuui_external_pin_edge_detection_t` edge

External Input pin edge detection.

`wuui_external_wakeup_pin_event_t` event

External Input wakeup Pin event

`wuui_external_wakeup_pin_mode_t` mode

External Input wakeup Pin operate mode.

struct `_wuui_pin_filter_config`

`#include <fsl_wuui.h>` Pin Filter configuration.

Public Members

uint32_t pinIndex

The index of wakeup pin to be muxxed into filter.

wwu_filter_edge_t edge

The edge of the pin digital filter.

wwu_filter_event_t event

The event of the filter output.

wwu_filter_mode_t mode

The mode of the filter operate.

2.56 WWDT: Windowed Watchdog Timer Driver

`void WWDT_GetDefaultConfig(wwdt_config_t *config)`

Initializes WWDT configure structure.

This function initializes the WWDT configure structure to default value. The default value are:

```
config->enableWwdt = true;
config->enableWatchdogReset = false;
config->enableWatchdogProtect = false;
config->enableLockOscillator = false;
config->windowValue = 0xFFFFFfU;
config->timeoutValue = 0xFFFFFfU;
config->warningValue = 0;
```

See also:

`wwdt_config_t`

Parameters

- `config` – Pointer to WWDT config structure.

`void WWDT_Init(WWDT_Type *base, const wwdt_config_t *config)`

Initializes the WWDT.

This function initializes the WWDT. When called, the WWDT runs according to the configuration.

Example:

```
wwdt_config_t config;
WWDT_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
WWDT_Init(wwdt_base,&config);
```

Parameters

- `base` – WWDT peripheral base address
- `config` – The configuration of WWDT

`void WWDT_Deinit(WWDT_Type *base)`

Shuts down the WWDT.

This function shuts down the WWDT.

Parameters

- `base` – WWDT peripheral base address

```
static inline void WWDT_Enable(WWDT_Type *base)
```

Enables the WWDT module.

This function write value into WWDT_MOD register to enable the WWDT, it is a write-once bit; once this bit is set to one and a watchdog feed is performed, the watchdog timer will run permanently.

Parameters

- base – WWDT peripheral base address

```
static inline void WWDT_Disable(WWDT_Type *base)
```

Disables the WWDT module.

Deprecated:

Do not use this function. It will be deleted in next release version, for once the bit field of WDEN written with a 1, it can not be re-written with a 0.

This function write value into WWDT_MOD register to disable the WWDT.

Parameters

- base – WWDT peripheral base address

```
static inline uint32_t WWDT_GetStatusFlags(WWDT_Type *base)
```

Gets all WWDT status flags.

This function gets all status flags.

Example for getting Timeout Flag:

```
uint32_t status;
status = WWDT_GetStatusFlags(wwdt_base) & kWWDT_TimeoutFlag;
```

Parameters

- base – WWDT peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `_wwdt_status_flags_t`

```
void WWDT_ClearStatusFlags(WWDT_Type *base, uint32_t mask)
```

Clear WWDT flag.

This function clears WWDT status flag.

Example for clearing warning flag:

```
WWDT_ClearStatusFlags(wwdt_base, kWWDT_WarningFlag);
```

Parameters

- base – WWDT peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `_wwdt_status_flags_t`

```
static inline void WWDT_SetWarningValue(WWDT_Type *base, uint32_t warningValue)
```

Set the WWDT warning value.

The WDWARNINT register determines the watchdog timer counter value that will generate a watchdog interrupt. When the watchdog timer counter is no longer greater than the value defined by WARNINT, an interrupt will be generated after the subsequent WDCLK.

Parameters

- base – WWDT peripheral base address
- warningValue – WWDT warning value.

static inline void WWDT_SetTimeoutValue(WWDT_Type *base, uint32_t timeoutCount)

Set the WWDT timeout value.

This function sets the timeout value. Every time a feed sequence occurs the value in the TC register is loaded into the Watchdog timer. Writing a value below 0xFF will cause 0xFF to be loaded into the TC register. Thus the minimum time-out interval is $TWDCLK * 256 * 4$. If enableWatchdogProtect flag is true in `wwdt_config_t` config structure, any attempt to change the timeout value before the watchdog counter is below the warning and window values will cause a watchdog reset and set the WDTOF flag.

Parameters

- base – WWDT peripheral base address
- timeoutCount – WWDT timeout value, count of WWDT clock tick.

static inline void WWDT_SetWindowValue(WWDT_Type *base, uint32_t windowValue)

Sets the WWDT window value.

The WINDOW register determines the highest TV value allowed when a watchdog feed is performed. If a feed sequence occurs when timer value is greater than the value in WINDOW, a watchdog event will occur. To disable windowing, set windowValue to 0xFFFF (maximum possible timer value) so windowing is not in effect.

Parameters

- base – WWDT peripheral base address
- windowValue – WWDT window value.

void WWDT_Refresh(WWDT_Type *base)

Refreshes the WWDT timer.

This function feeds the WWDT. This function should be called before WWDT timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WWDT peripheral base address

FSL_WWDT_DRIVER_VERSION

Defines WWDT driver version.

WWDT_FIRST_WORD_OF_REFRESH

First word of refresh sequence

WWDT_SECOND_WORD_OF_REFRESH

Second word of refresh sequence

enum __wwdt_status_flags_t

WWDT status flags.

This structure contains the WWDT status flags for use in the WWDT functions.

Values:

enumerator kWWDT_TimeoutFlag

Time-out flag, set when the timer times out

enumerator kWWDT_WarningFlag

Warning interrupt flag, set when timer is below the value WDWARNINT

```
typedef struct _wwdt_config wwdt_config_t
```

Describes WWDT configuration structure.

```
struct _wwdt_config
```

#include <fsl_wwdt.h> Describes WWDT configuration structure.

Public Members

```
bool enableWwdt
```

Enables or disables WWDT

```
bool enableWatchdogReset
```

true: Watchdog timeout will cause a chip reset false: Watchdog timeout will not cause a chip reset

```
bool enableWatchdogProtect
```

true: Enable watchdog protect i.e timeout value can only be changed after counter is below warning & window values false: Disable watchdog protect; timeout value can be changed at any time

```
bool enableLockOscillator
```

true: Disabling or powering down the watchdog oscillator is prevented Once set, this bit can only be cleared by a reset false: Do not lock oscillator

```
uint32_t windowValue
```

Window value, set this to 0xFFFFFFFF if windowing is not in effect

```
uint32_t timeoutValue
```

Timeout value

```
uint32_t warningValue
```

Watchdog time counter value that will generate a warning interrupt. Set this to 0 for no warning

```
uint32_t clockFreq_Hz
```

Watchdog clock source frequency.

Chapter 3

Middleware

3.1 Boot

3.1.1 MCUXpresso SDK : mcuxsdk-middleware-mcuboot_opensource

Overview

This repository is a fork of MCUboot (<https://github.com/mcu-tools/mcuboot>) for MCUXpresso SDK delivery and it contains the components officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository (mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

Documentation

Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [MCUboot - Documentation](#) to review details on the contents in this sub-repo.

Setup

Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution

Contributions are not currently accepted. If the intended contribution is not related to NXP specific code, consider contributing directly to the upstream MCUboot project. Once this MCUboot fork is synchronized with the upstream project, such contributions will end up here as well. If the intended contribution is a bugfix or improvement for NXP porting layer or for code added or modified by NXP, please open an issue or contact NXP support.

NXP Fork

This fork of MCUboot contains specific modifications and enhancements for NXP MCUXpresso SDK integration.

See *changelog* for details.

3.1.2 MCUboot



This is MCUboot version 2.2.0

MCUboot is a secure bootloader for 32-bits microcontrollers. It defines a common infrastructure for the bootloader and the system flash layout on microcontroller systems, and provides a secure bootloader that enables easy software upgrade.

MCUboot is not dependent on any specific operating system and hardware and relies on hardware porting layers from the operating system it works with. Currently, MCUboot works with the following operating systems and SoCs:

- [Zephyr](#)
- [Apache Mynewt](#)
- [Apache NuttX](#)
- [RIOT](#)
- [Mbed OS](#)
- [Espressif](#)
- [Cypress/Infineon](#)

RIOT is supported only as a boot target. We will accept any new port contributed by the community once it is good enough.

MCUboot How-tos

See the following pages for instructions on using MCUboot with different operating systems and SoCs:

- [Zephyr](#)
- [Apache Mynewt](#)
- [Apache NuttX](#)
- [RIOT](#)
- [Mbed OS](#)
- [Espressif](#)
- [Cypress/Infineon](#)

There are also instructions for the *Simulator*.

Roadmap

The issues being planned and worked on are tracked using GitHub issues. To give your input, visit [MCUboot GitHub Issues](#).

Source files

You can find additional documentation on the bootloader in the source files. For more information, use the following links:

- [boot/bootutil](#) - The core of the bootloader itself.
- [boot/boot_serial](#) - Support for serial upgrade within the bootloader itself.
- [boot/zephyr](#) - Port of the bootloader to Zephyr.
- [boot/mynewt](#) - Bootloader application for Apache Mynewt.
- [boot/nuttX](#) - Bootloader application and port of MCUboot interfaces for Apache NuttX.
- [boot/mbed](#) - Port of the bootloader to Mbed OS.
- [boot/espressif](#) - Bootloader application and MCUboot port for Espressif SoCs.
- [boot/cypress](#) - Bootloader application and MCUboot port for Cypress/Infineon SoCs.
- [imgtool](#) - A tool to securely sign firmware images for booting by MCUboot.
- [sim](#) - A bootloader simulator for testing and regression.

Joining the project

Developers are welcome!

Use the following links to join or see more about the project:

- [Our developer mailing list](#)
- [Our Discord channel](#) [Get your invite](#)

3.2 Motor Control

3.2.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? [FreeMASTER](#) is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**

- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.

- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called FMSTR_TRANSPORT with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The *mcuxsdk* folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)

- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer's physical or virtual COM port. The typical transmission speed is 115200 bps.
- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER "middleware" driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.
- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.

- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.
- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.

- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.

- *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
- *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
- *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- **src/drivers/[sdk]/serial** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.

- **src/drivers/[sdk]/can** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- **src/drivers/[sdk]/network** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR    [0|1]
#define FMSTR_SHORT_INTR  [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- **FMSTR_SERIAL** - serial communication protocol
- **FMSTR_CAN** - using CAN communication
- **FMSTR_PDBDM** - using packet-driven BDM communication
- **FMSTR_NET** - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as **FMSTR_SERIAL_DRV**. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_QUEUE_SIZE

```
#define FMSTR_COMM_QUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the `FMSTR_SHORT_INTR` interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call FMSTR_SetCanBaseAddress() to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access**FMSTR_USE_READMEM**

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options**FMSTR_USE_SCOPE**

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options

FMSTR_USE_RECORDER

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library. Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options

FMSTR_USE_TSA

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial “character time” which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the Read Memory or Write Memory commands’ execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (*FMSTR_LONG_INTR*), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the *FMSTR_* prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the *fmstr_* prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the *FMSTR_Init* call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the *FMSTR_SerialIsr* function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the *FMSTR_CanIsr* function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (*FMSTR_USE_RECORDER* > 0), call the *FMSTR_RecorderCreate* function early after *FMSTR_Init* to set

up each recorder instance to be used in the application. Then call the `FMSTR_Recorder` function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the `FMSTR_Recorder` in the main application loop.

In applications where `FMSTR_Recorder` is called periodically with a constant period, specify the period in the Recorder configuration structure before calling `FMSTR_RecorderCreate`. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all `*c` files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the `FMSTR_LONG_INTR` and `FMSTR_SHORT_INTR` modes, install the application-specific interrupt routine and call the `FMSTR_SerialIsr` or `FMSTR_CanIsr` functions from this handler.
- Call the `FMSTR_Init` function early on in the application initialization code.
- Call the `FMSTR_RecorderCreate` functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the `FMSTR_Poll` API function periodically when the application is idle.
- For the `FMSTR_SHORT_INTR` and `FMSTR_LONG_INTR` modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the `FMSTR_DEBUG_TX` option in the `freemaster_cfg.h` file and call the `FMSTR_Poll` function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the *FMSTR_Poll* function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the *FMSTR_COMM_QUEUE_SIZE* macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype


```
void FMSTR_SerialIsr(void);  
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see [Driver interrupt modes](#)), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the *FMSTR_USE_TSA* macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the *FMSTR_TSA_TABLE_BEGIN* macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
```

(continues on next page)

(continued from previous page)

```

FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */

```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.
- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```

FMSTR_TSA_TABLE_LIST_BEGIN()

FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...

```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)

/* Directory entry applies to all subsequent MEMFILE entries */
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()
```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```
FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR ↵
↵ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - FMSTR_TSA_INFO_RO_VAR — read-only memory-mapped object (typically a variable)
 - FMSTR_TSA_INFO_RW_VAR — read/write memory-mapped object
 - FMSTR_TSA_INFO_NON_VAR — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the FMSTR_USE_TSA_DYNAMIC configuration option and when the FMSTR_SetUpTsaBuff function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the FMSTR_APPCMDRESULT_NOCMD constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the FMSTR_AppCmdAck call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The FMSTR_GetAppCmd function does not report the commands for which a callback handler function exists. If the FMSTR_GetAppCmd function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns FMSTR_APPCMDRESULT_NOCMD.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↳PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```


Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_xxx and FMSTR_PIPE_SIZE_xxx constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk.

This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the `nGranularity` value equal to the `nLength` value, all data are considered as one chunk which is either written successfully as a whole or not at all. The `nGranularity` value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The `readGranularity` argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables. By default, this is defined as <i>FM-STR_SIZE</i> .
<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors. By default, this is defined as <i>FM-STR_SIZE</i> .

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object. Generally, this is a pointer to a void type.
<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data. Generally, this is an unsigned 8-bit or 16-bit type.
<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data. This is used to store the data buffer sizes.
<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function. See FM-STR_PipeOpen for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FMSTR_U16</i>	Unsigned 16-bit integer.
<i>FMSTR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FMSTR_S16</i>	Signed 16-bit integer.
<i>FMSTR_S32</i>	Signed 32-bit integer.
<i>FMSTR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FMSTR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FMSTR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FMSTR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FMSTR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FMSTR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the [FreeRTOS kernel repo](#) integration into the [NXP MCUXpresso Software Development Kit: mcuxsdk](#). MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as [FreeRTOS driver wrappers](#), RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in [CHANGELOG_mcuxsdk.md](#) file.


The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of freertos_examples, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in [mcuxsdk-examples](#) repository, see the `freertos_examples` folder.

Once using MCUXpresso SDK zip packages created via the [MCUXpresso SDK Builder](#) the FreeRTOS kernel library and associated `freertos_examples` are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

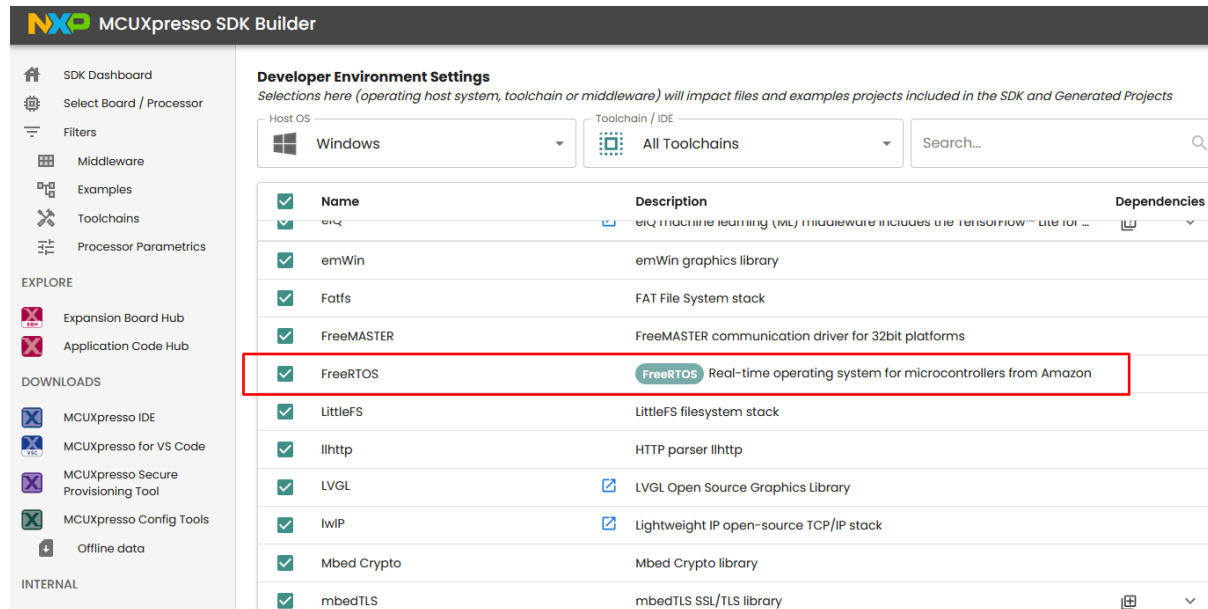

The FreeRTOS examples in MCUXpresso SDK zip packages are located in `<MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/` subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build `freertos_examples` visit: [MCUXpresso SDK documentation for Build And Configuration MCUXpresso SDK Getting Start Guide](#)

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this west `list_project` command in `mcuxsdk` workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

Task List (FreeRTOS)							
TCB#	Task Name	Task Handle	Task State	Priority	Stack Usage	Event Object	Runtime
1	task_one	0x1fffecc8	Blocked	1 (1)	0 B / 880 B	MyCountingSemaphore (Rx)	0x0 (0.0%)
2	task_two	0x1ffff130	Blocked	2 (2)	0 B / 888 B	MyCountingSemaphore (Rx)	0x1 (0.1%)
3	IDLE	0x1ffff330	Running	0 (0)	0 B / 296 B		0x3e5 (99.6%)
4	Tmr Svc	0x1ffff6b8	Blocked	17 (17)	28 B / 672 B	TmrQ (Rx)	0x3 (0.3%)

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[Unreleased]

Added

- Kconfig added CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT config to optionally include custom FreeRTOSConfig fragment include file FreeRTOSConfig_frag.h. File must be provided by application.
- Added missing Kconfig option for configUSE_PICOLIBC_TLS.
- Add correct header files to build when configUSE_NEWLIB_REENTRANT and configUSE_PICOLIBC_TLS is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See rtos\freertos\freertos_kernel\History.txt
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See rtos\freertos\freertos_kernel\History.txt

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
 - Tickless idle mode support for Cortex-A7. Add fsl_tickless_epit.c and fsl_tickless_generic.h in portable/IAR/ARM_CA9 folder.
 - Enabled float context saving in IAR for Cortex-A7. Added configUSE_TASK_FPU_SUPPORT macros. Modified port.c and portmacro.h in portable/IAR/ARM_CA9 folder.
- Other changes:
 - Transformed ARM_CM core specific tickless low power support into generic form under freertos/Source/portable/low_power_tickless/.

[9.0.0_rev2]

- New features:
 - Enabled MCUXpresso thread aware debugging. Add `freertos_tasks_c_additions.h` and `configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H` and `configFREERTOS_MEMORY_SCHEME` macros.

[9.0.0_rev1]

- New features:
 - Enabled `-flto` optimization in GCC by adding `attribute((used))` for `vTaskSwitchContext`.
 - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable `configRECORD_STACK_HIGH_ADDRESS` macro. Modified files are `task.c` and `FreeRTOS.h`.

[9.0.0_rev0]

- New features:
 - Example `freertos_sem_static`.
 - Static allocation support RTOS driver wrappers.
- Other changes:
 - Tickless idle rework. Support for different timers is in separated files (`fsl_tickless_systick.c`, `fsl_tickless_lptmr.c`).
 - Removed configuration option `configSYSTICK_USE_LOW_POWER_TIMER`. Low power timer is now selected by linking of appropriate file `fsl_tickless_lptmr.c`.
 - Removed `configOVERRIDE_DEFAULT_TICK_CONFIGURATION` in RVDS port. Use of `attribute((weak))` is the preferred solution. Not same as `_weak`!

[8.2.3]

- New features:
 - Tickless idle mode support.
 - Added template application for Kinetis Expert (KEx) tool (`template_application`).
- Other changes:
 - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (<https://github.com/FreeRTOS/FreeRTOS-Kernel>)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see [README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK](#) document.



Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in [FreeRTOS/FreeRTOS](#) repository, which contains pre-configured demo application projects under [FreeRTOS/Demo](#) directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the [Developer Documentation](#), and [API Reference](#).

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#).

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's CMakeLists.txt:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a freertos_config library (typically an INTERFACE library) The following assumes the directory structure:

– include/FreeRTOSConfig.h

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
  INTERFACE
    include
)

target_compile_definitions(freertos_config
  INTERFACE
    projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to `freertos_config`:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - `list.c`, `queue.c` and `tasks.c`. The kernel is contained within these three files. `croutine.c` implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The `./portable` directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the `./portable` directory for more information.
- The `./include` directory contains the real time kernel header files.
- The `./template_configuration` directory contains a sample `FreeRTOSConfig.h` to help jumpstart a new project. See the *FreeRTOSConfig.h* file for instructions.

Code Formatting FreeRTOS files are formatted using the “`uncrustify`” tool. The configuration file used by `uncrustify` can be found in the [FreeRTOS/CI-CD-GitHub-Actions's uncrustify.cfg](#) file.

Line Endings File checked into the FreeRTOS-Kernel repository use unix-style LF line endings for the best compatibility with git.

For optimal compatibility with Microsoft Windows tools, it is best to enable the git `autocrlf` feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the `git blame` command. You can configure git to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using [Visual Studio Code](#), commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses [cSpell](#) as part of its spelling check. The config file for which can be found at [cspell.config.yaml](#). There is additionally a [cSpell plugin for VSCode](#) that can be used as well. [.cSpellWords.txt](#) contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to [.cSpellWords.txt](#). When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt`. Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (<https://github.com/FreeRTOS/backoffalgorithm>)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk-manifests](https://github.com/nxp-mcuxpresso/mcuxsdk-manifests)(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the “Full Jitter” strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the [Exponential Backoff and Jitter](#) AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library [here](#).

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the backoffAlgorithm library on a POSIX platform to retry a DNS resolution query for amazon.com.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS      ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS    ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                      RETRY_BACKOFF_BASE_MS,
                                      RETRY_MAX_BACKOFF_DELAY_MS,
                                      RETRY_MAX_ATTEMPTS );

    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
    }
```

(continues on next page)

(continued from previous page)

```

/* Retry if DNS resolution query failed. */
if( dnsStatus != 0 )
{
    /* Generate a random number and get back-off value (in milliseconds) for the next retry.
    * Note: It is recommended to use a random number generator that is seeded with
    * device-specific entropy source so that backoff calculation across devices is different
    * and possibility of network collision between devices attempting retries can be avoided.
    *
    * For the simplicity of this code example, the pseudo random number generator, rand()
    * function is used. */
    retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

    /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
    * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
    ( void ) usleep( nextRetryBackoff * 1000U );
}
} while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

return dnsStatus;
}

```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to *stdint.h* to build the backoffAlgorithm library.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C89 or later compiler like *gcc*
 - CMake 3.13.0 or later
- For running the coverage target, *gcov* is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (<https://github.com/FreeRTOS/corehttp>)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, [llhttp](#), and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety and data structure invariance through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_http_config.h* can be provided by the user application to the library.

By default, a *core_http_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a `core_http_config.h` file in the application, and adding it to the include directories for the library build. **OR**
- Defining the `HTTP_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Building the Library The `httpFilePaths.cmake` file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. `core_http_config.h`) OR `HTTP_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the `httpFilePaths.cmake` file, refer to the `coverity_analysis` library target in `test/CMakeLists.txt` file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is required for this repository's [CMock test framework](#).
- For running the coverage target, the following are required:
 - `gcov`
 - `lcov`

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the `cmake` command: `cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library [here](#) on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (<https://github.com/FreeRTOS/corejson>)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example

```

#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\":\"abc\", \"bar\":{\"foo\":\"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                             &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}

```

A search may descend through nested objects when the queryKey contains matching key strings joined by a separator, .. In the example above, bar has the value { "foo": "xyz" }. Therefore, a search for query key bar.foo would output xyz.

Building coreJSON A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, *stdbool.h* and *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h* respectively.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in `.gitmodules`, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C90 compiler like gcc
 - CMake 3.13.0 or later
 - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (<https://github.com/FreeRTOS/coremqtt>)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the [MQTT 3.1.1](#) standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreMQTT v2.1.1 source code is part of the FreeRTOS 20210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_mqtt_config.h* can be provided by the application to the library.

By default, a *core_mqtt_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `MQTT_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a *core_mqtt_config.h* file in the application, and adding it to the include directories list of the library
- OR**
- Defining the `MQTT_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = "iotuser", OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then "iotuser" can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME           "FreeRTOS"
#define OS_VERSION        "V10.4.3"
#define HARDWARE_PLATFORM_NAME  "WinSim"
#define MQTT_LIB          "coremqtt@2.1.1"

#define USERNAME_STRING    "iotuser?SDK=" OS_NAME "&Version=" OS_VERSION "&Platform=" HARDWARE_PLATFORM_NAME "&MQTTLib=" MQTT_LIB
#define USERNAME_STRING_LENGTH  ( ( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.userName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,
↳ pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, *stdbool.h* and *stdint.h*. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h*, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. *core_mqtt_config.h*) OR `MQTT_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the *mqttFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
 1. `docker build -t coremqtt .`
 2. `docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt`
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
3. Run the *cmake* command: `cmake -S test -B build`
4. Run this command to build the library and unit tests: `make -C build all`
5. The generated test executables will be present in *build/bin/tests* folder.
6. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The *test/cbmc/proofs* directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C
FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (<https://github.com/FreeRTOS/coremqtt-agent>)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the [coreMQTT](#) library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call to MQTT_ProcessLoop). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

Cloning this repository This repo uses [Git Submodules](#) to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the `--recurse-submodules` argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same `core_mqtt_config.h` configuration file as coreMQTT, with the addition of configuration constants listed at the top of `core_mqtt_agent.h` and `core_mqtt_agent_command_functions.h`. Documentation for these configurations can be found [here](#).

To provide values for these configuration values, they must be either:

- Defined in `core_mqtt_config.h` used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the [reference examples](#) below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below [reference examples](#) use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the [reference examples](#) below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same *source/* and *source/include* pattern as the agent library; its build instructions can be found [here](#).

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from *mqttFilePaths.cmake* in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the *mqttAgentFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos
FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found [here](#).

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our [active support forum](#). You can find a list of [frequently asked questions](#) [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (<https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0>)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the [Transport Layer Security \(TLS\)](#) protocol – without the application ever ‘seeing’ the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, “PKCS #11”, is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the [oasis website](#).

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#) and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 [specification](#) replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from [mbedtls](#) version 2.x or 3.x.
- **pkcs11 API header(s)** available from [OASIS](#) or [OpenSC](#)

Optionally, variables from the `pkcsFilePaths.cmake` file may be referenced if your project uses `cmake`.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the `cmake` `FetchContent` feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for gcov-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the [Linux Test Project](#)
- **perl** needed to run the `lcov` utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
 - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
 - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library [here](#) using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the AWS [docs](#) web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's [Platform Security Architecture](#).
- Microchip's [cryptoauthlib](#).
- Infineon's [Optiga Trust X](#).

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (<https://github.com/FreeRTOS/freertos-plus-tcp>)(4.3.3). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the [MISRA coding standard](#). Any deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). The library is validated for memory safety and data structure invariance through the [CBMC automated reasoning tool](#) for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

FreeRTOS-Plus-TCP Library V4.2.2 source code is part of the FreeRTOS 202406.01 LTS release.

Getting started The easiest way to use version 4.0.0 and later of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found [here](#)) Another way is to start with the pre-configured IPv4 Windows Simulator demo (found in [this directory](#)) or IPv6 Multi-endpoint Windows Simulator demo (found in [this directory](#)). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the [Documentation](#), and [API Reference](#).

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#). Please also refer to [FAQ](#) for frequently asked questions.

Also see the [Submitting a bug/feature request](#) section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V4.3.0 and above For users of STM32 network interfaces:

Starting from version V4.3.0, the STM32 network interfaces have been consolidated into a single unified implementation located at `source/portable/NetworkInterface/STM32/NetworkInterface.c`, supporting STM32 F4, F7, and H7 series microcontrollers, with newly added support for STM32 H5. The new interface has been tested with the STM32 HAL Ethernet (ETH) drivers, available at `source/portable/NetworkInterface/STM32/Drivers`. For compatibility, the legacy interfaces (STM32Fxx and STM32Hxx) have been retained and relocated to `source/portable/NetworkInterface/STM32/Legacy`.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a `source` directory. This change requires modification of any existing project(s) to include the modified source files and directories.

FreeRTOS-Plus-TCP V3.1.0 [source code\(.c .h\)](#) is part of the [FreeRTOS 20210.00 LTS](#) release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to [this](#).

Note: After running the script, while the `.c` files will have same names as the pre V3.0.0 source, the files in the `include` directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from [here](#).

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing `python --version`.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory Then run `python <Path/to/the/script>/GenerateOriginalFiles.py`.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's `CMakeLists.txt`:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
```

(continues on next page)

(continued from previous page)

```
GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
# Select the native compile PORT
set( FREERTOS_PLUS_TCP_NETWORK_IF "POSIX" CACHE STRING "" FORCE)
# Or: select a cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. STM32Hxx version of port
  set(FREERTOS_PLUS_TCP_NETWORK_IF "STM32HXX" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)
```

Consuming stand-alone This repository uses [Git Submodules](#) to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Porting The porting guide is available on [this page](#).

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
 - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
 - This directory contains all the tests (unit tests and CBMC) and the dependencies ([FreeRTOS-Kernel/Litani-port](#)) the tests require.
- source/portable
 - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compilers.
- source/include
 - The include directory has all the ‘core’ header files of FreeRTOS-Plus-TCP source.
- source

- This directory contains all the [.c] source files.

Note At this time it is recommended to use BufferAllocation_2.c in which case it is essential to use the heap_4.c memory allocation scheme. See [memory management](#).

Kernel sources The FreeRTOS Kernel Source is in [FreeRTOS/FreeRTOS-Kernel repository](#), and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at `./test/FreeRTOS-Kernel` directory.

CBMC The `test/cbmc/proofs` directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material [here](#).

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).