



MCUXpresso SDK Documentation

Release 25.12.00



NXP
Dec 18, 2025



Table of contents

1	FRDM-MCXL255	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	58
1.3.1	Getting Started with MCUXpresso SDK Repository	58
1.4	Release Notes	65
1.4.1	MCUXpresso SDK Release Notes	65
1.5	ChangeLog	68
1.5.1	MCUXpresso SDK Changelog	68
1.6	Driver API Reference Manual	131
1.7	Middleware Documentation	132
1.7.1	Multicore	132
1.7.2	FreeRTOS	132
1.7.3	FreeMASTER	132
2	MCXL255	133
2.1	ADVC Driver	133
2.2	ADVC	133
2.3	AOI: Crossbar AND/OR/INVERT Driver	135
2.4	AON_LPADC: 12-bit single-ended SAR Analog-to-Digital Converter Driver	139
2.5	CDOG	152
2.6	Clock Driver	156
2.7	CRC: Cyclic Redundancy Check Driver	166
2.8	CTIMER: Standard counter/timers	169
2.9	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	179
2.10	eDMA core Driver	210
2.11	eDMA soc Driver	217
2.12	ERM: error recording module	218
2.13	FGPIO Driver	220
2.14	FREQME: Frequency Measurement	220
2.15	GLIKEY	220
2.16	GLIKEY	220
2.17	GPIO: General-Purpose Input/Output Driver	224
2.18	GPIO Driver	227
2.19	INPUTMUX: Input Multiplexing Driver	233
2.20	KPP: KeyPad Port Driver	262
2.21	Common Driver	265
2.22	LPACMP: Low-Power Analog Comparator Driver	277
2.23	LPADC: 12-bit SAR Analog-to-Digital Converter Driver	283
2.24	Lpc_freqme	303
2.25	LPCMP: Low Power Analog Comparator Driver	309
2.26	LPI2C: Low Power Inter-Integrated Circuit Driver	319
2.27	LPI2C Master Driver	320
2.28	LPI2C Master DMA Driver	334
2.29	LPI2C Slave Driver	337

2.30	LPSPI: Low Power Serial Peripheral Interface	347
2.31	LPSPI Peripheral driver	347
2.32	LPSPI eDMA Driver	368
2.33	LPTMR: Low-Power Timer	375
2.34	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	381
2.35	LPUART Driver	381
2.36	LPUART eDMA Driver	399
2.37	MCX_CMC: Core Mode Controller Driver	402
2.38	MU: Messaging Unit	414
2.39	OSTIMER: OS Event Timer Driver	427
2.40	Pls_pmu	431
2.41	PORT: Port Control and Interrupts	432
2.42	POWER Driver	440
2.43	QTM: Quad Timer Driver	458
2.44	Reset Driver	469
2.45	ROMAPI Driver	470
2.46	RTC: Real Time Clock	474
2.47	SLCD: Segment LCD Driver	487
2.48	SMM: Sleep Mode Manager Driver	498
2.49	TRDC: Trusted Resource Domain Controller	505
2.50	Trdc_core	527
2.51	Trdc_soc	541
2.52	TRNG: True Random Number Generator	541
2.53	UTICK: MicroTick Timer Driver	546
2.54	WUU: Wakeup Unit driver	548
2.55	WWD: Windowed Watchdog Timer Driver	553
3	Middleware	557
3.1	Motor Control	557
3.1.1	FreeMASTER	557
3.2	MultiCore	594
3.2.1	Multicore SDK	594
4	RTOS	693
4.1	FreeRTOS	693
4.1.1	FreeRTOS kernel	693
4.1.2	FreeRTOS drivers	693
4.1.3	backoffalgorithm	693
4.1.4	corehttp	693
4.1.5	corejson	693
4.1.6	coremqtt	694
4.1.7	corepkcs11	694
4.1.8	freertos-plus-tcp	694

This documentation contains information specific to the frdm-mcxl255 board.

Chapter 1

FRDM-MCXL255

1.1 Overview

The FRDM-MCXL255 board is a design and evaluation platform based on the NXP MCXL255 microcontroller (MCU). The MCXL255 MCU is a low-power microcontroller for industrial and consumer Internet of Things (IoT) applications. It has one Arm Cortex-M33 core running at speeds of up to 96 MHz and one Arm Cortex-M0+ core up to 10 MHz. This series features our Adaptive Dynamic Voltage Control (ADVC) for optimized power consumption at low frequency operation. Compared to traditional low-power MCUs, a dedicated ultra-low-power (ULP) Sense Domain allows operation of low-power peripherals while keeping the main core in Deep Power Mode. This avoids event triggering and keeps data acquisition to extremely low power levels.

The board is compatible with Arduino boards (Arduino UNO R3 and Arduino A4/A5), Mikroe click boards, and Pmod boards.

For debugging the MCXA276 MCU, the FRDM-MCXL255 board uses an onboard (OB) debug probe, MCU-Link lite OB, which is based on another NXP MCU: LPC55S16

MCU device and part on board is shown below:

- Device: MCXL255
- PartNumber: MCXL255VDF

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with MCUXpresso SDK Package

Starting with version 25.09.00, MCUXpresso SDK introduced two package versions for offline development:

- **Classic SDK Package:** Traditional board-specific packages with pre-configured IDE projects for MCUXpresso IDE, IAR, Keil, and other toolchains.
- **Repository-Layout SDK Package:** Board-specific packages that maintain the same structure and build system as the GitHub Repository SDK, providing offline access to the repository SDK development experience. Available when selecting the ARMGCC toolchain.

From version 25.12.00 onward:

- When you select ARMGCC, the SDK download will use the Repository-Layout version.
- For all other toolchains, the SDK download will remain in the Classic version.


Note: The Repository-Layout SDK package was first introduced in version 25.09.00, but initially only for MCXW23x platforms.

Classic SDK Package

Overview The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

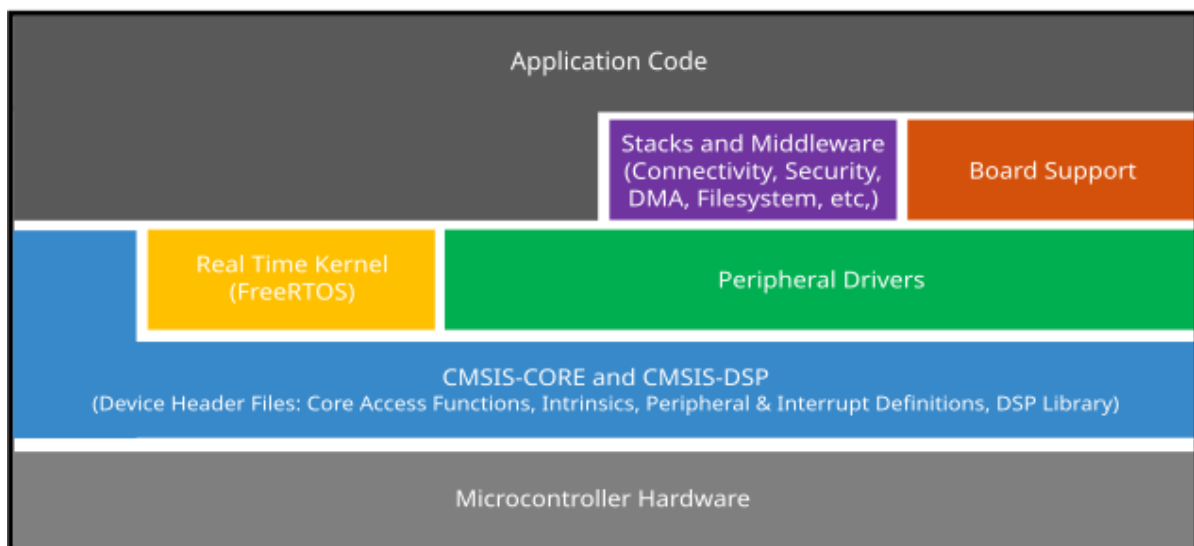

MCUXpresso SDK board support package folders MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):


- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.

- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

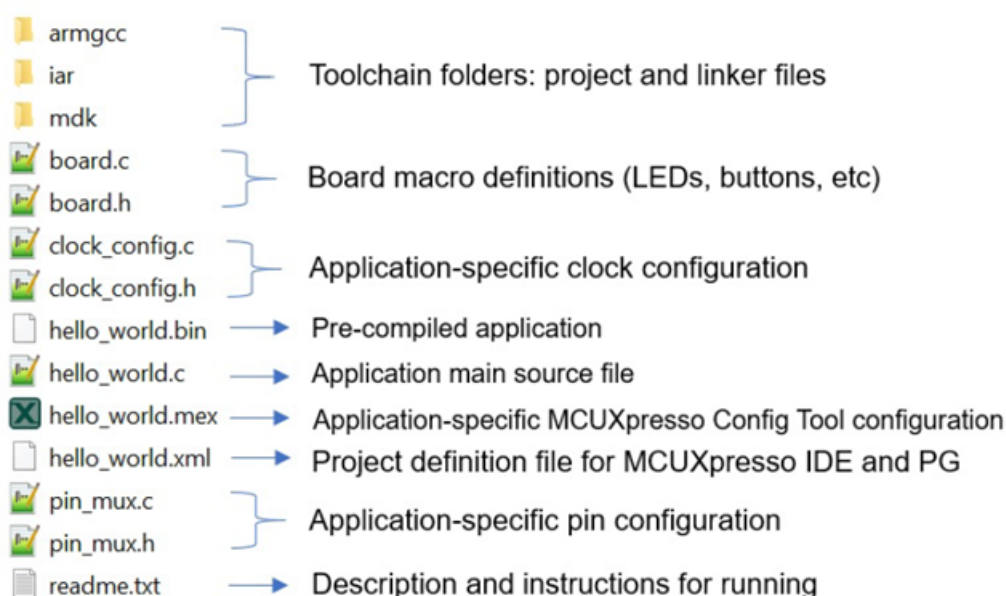

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications

- `devices/<devices_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the `rtos` folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.


Run a demo using MCUXpresso IDE **Note:** Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.

This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

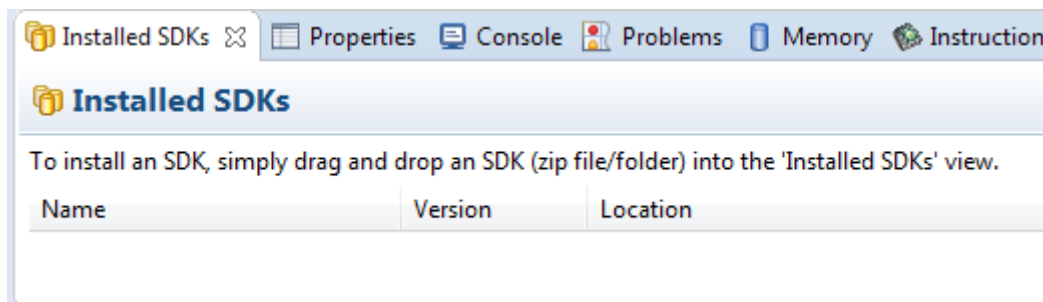

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

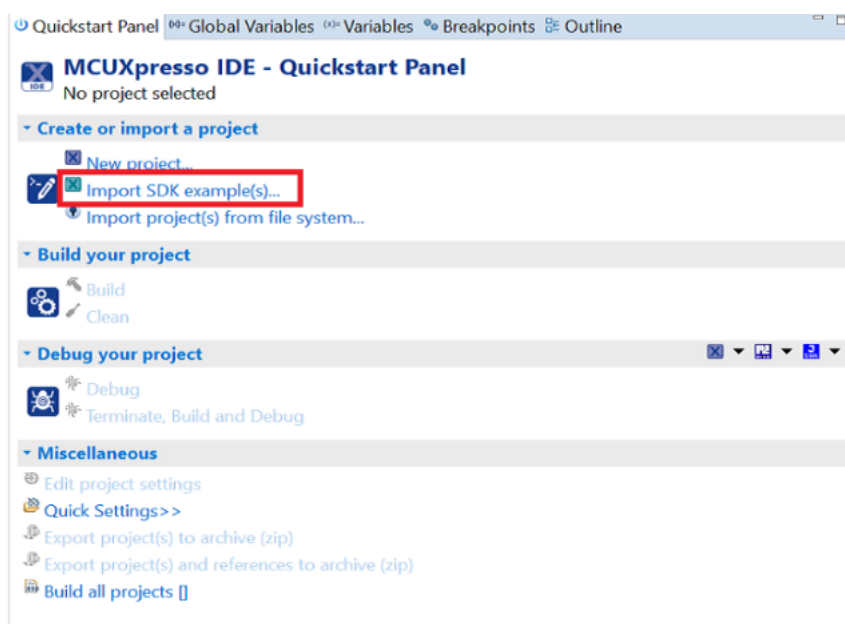

3. Expand the `demo_apps` folder and select `hello_world`.
4. Click **Next**.

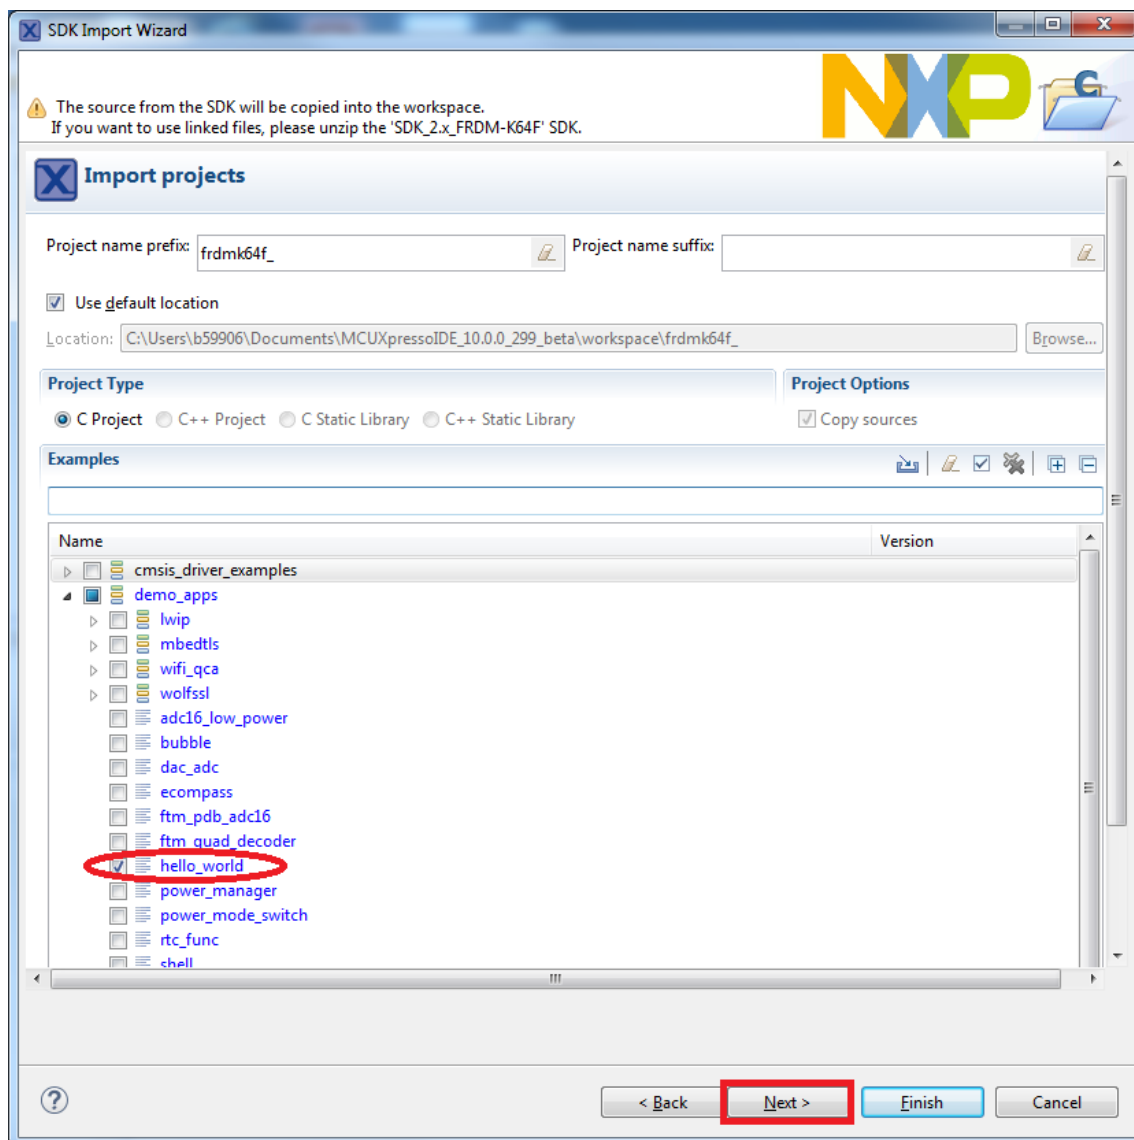


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.


To download and run the application, perform the following steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:

1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
2. No parity
3. 8 data bits

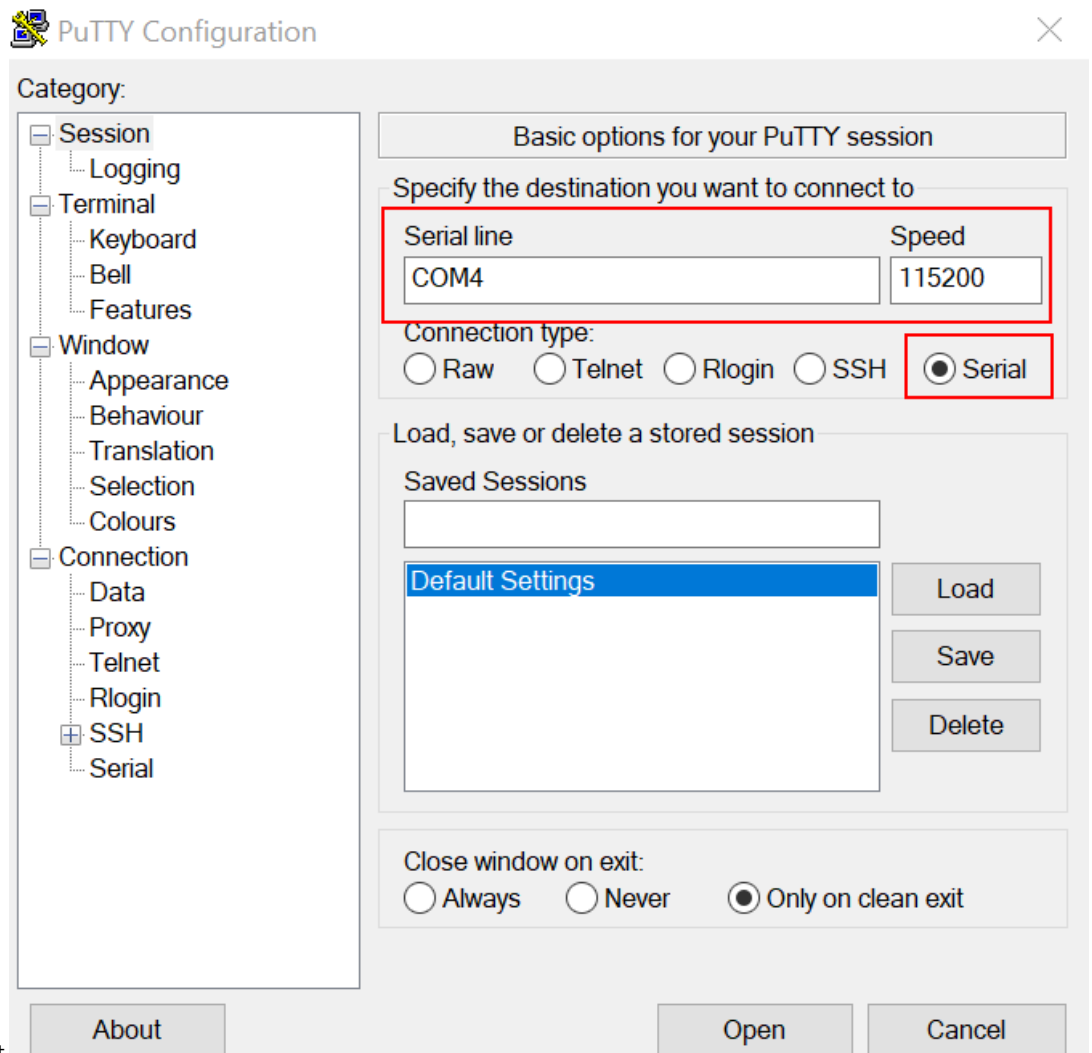

4. 1 stop bit
4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

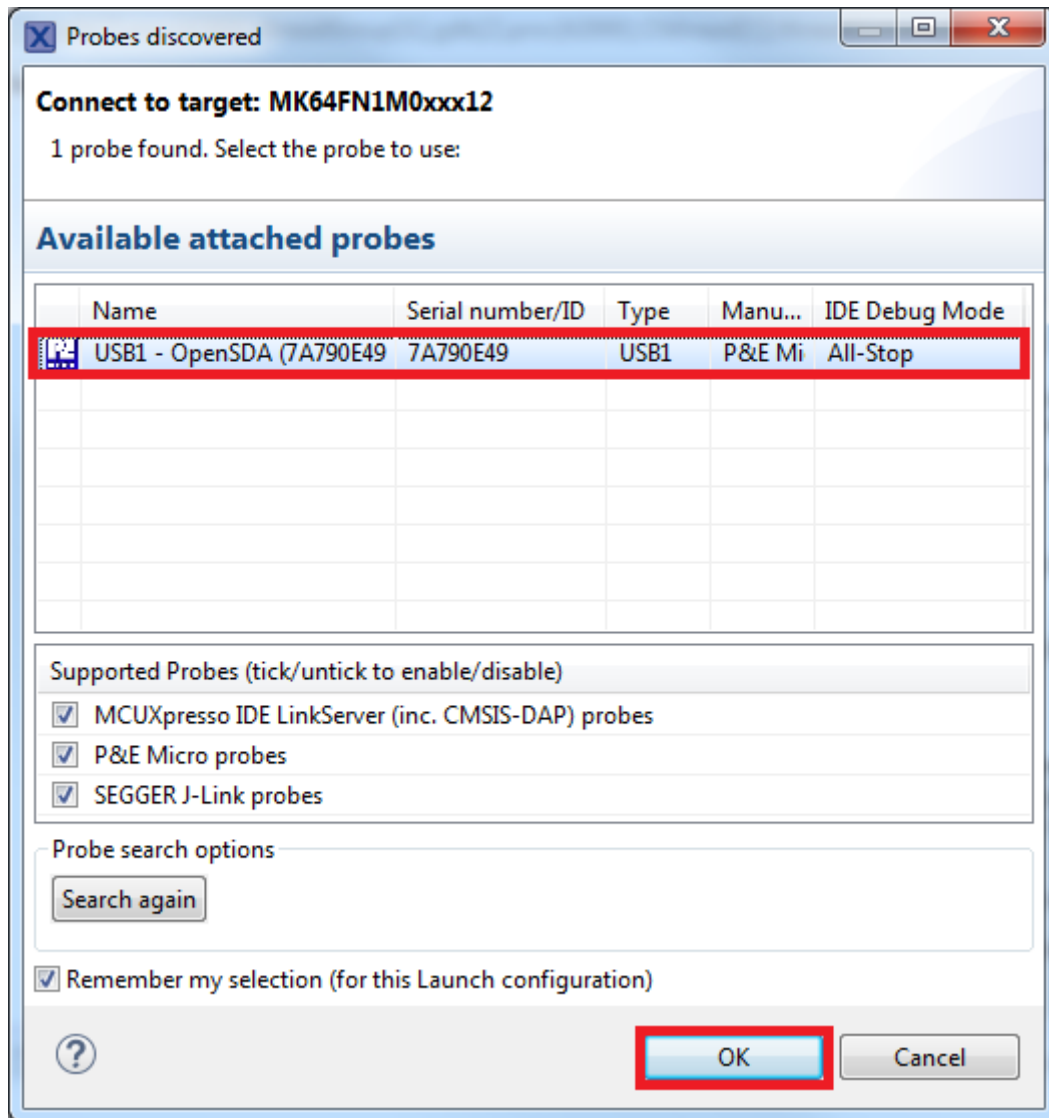

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

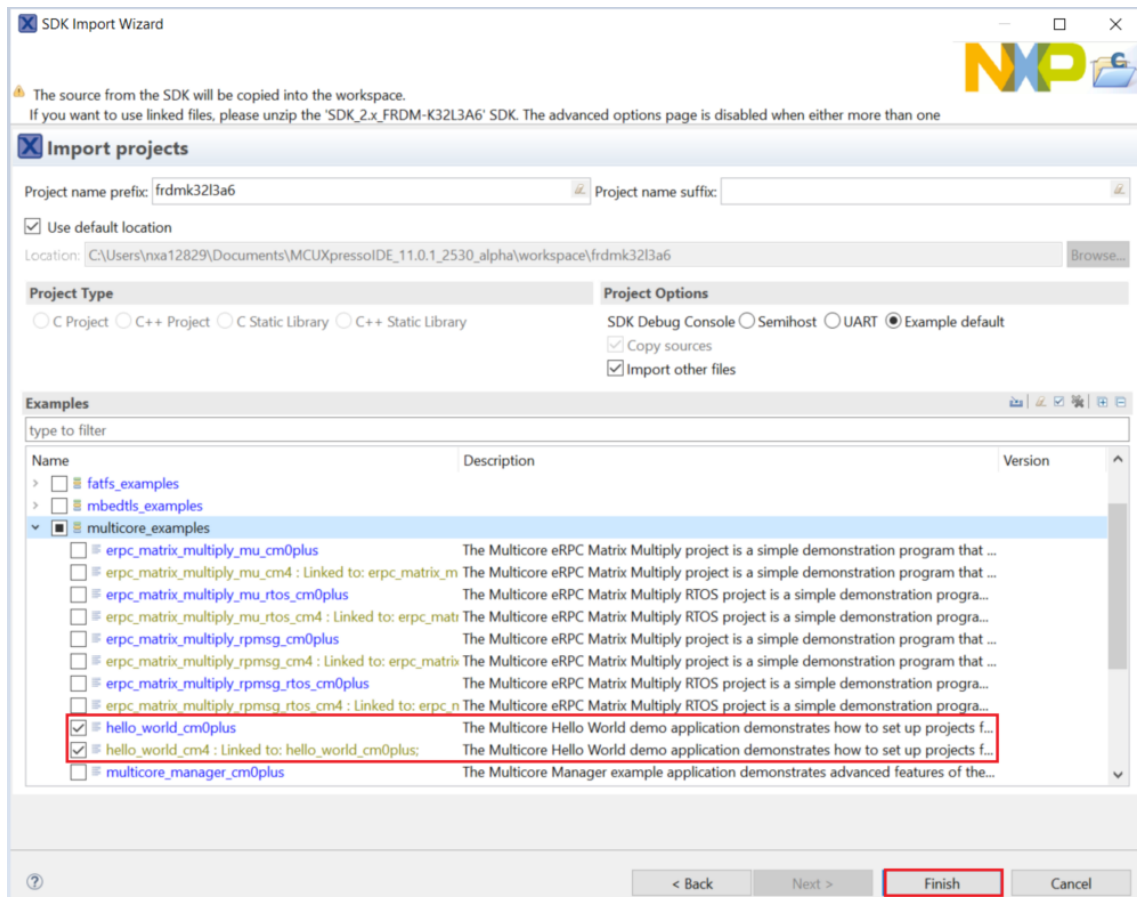


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

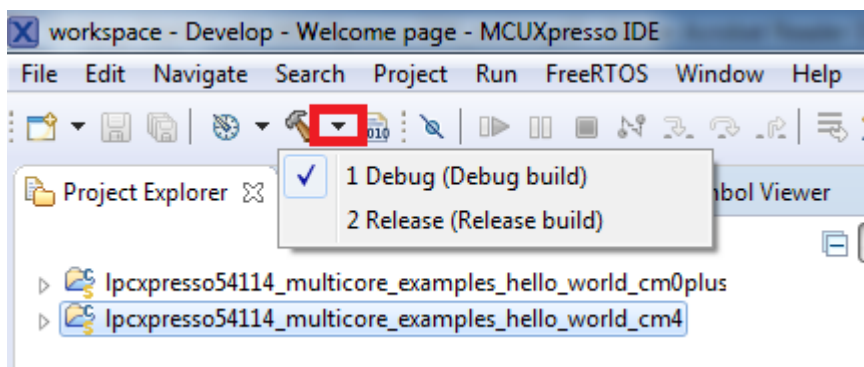




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations -> Set Active -> Release**. This alternate navigation using the menu item is **Project -> Build Configuration -> Set Active -> Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

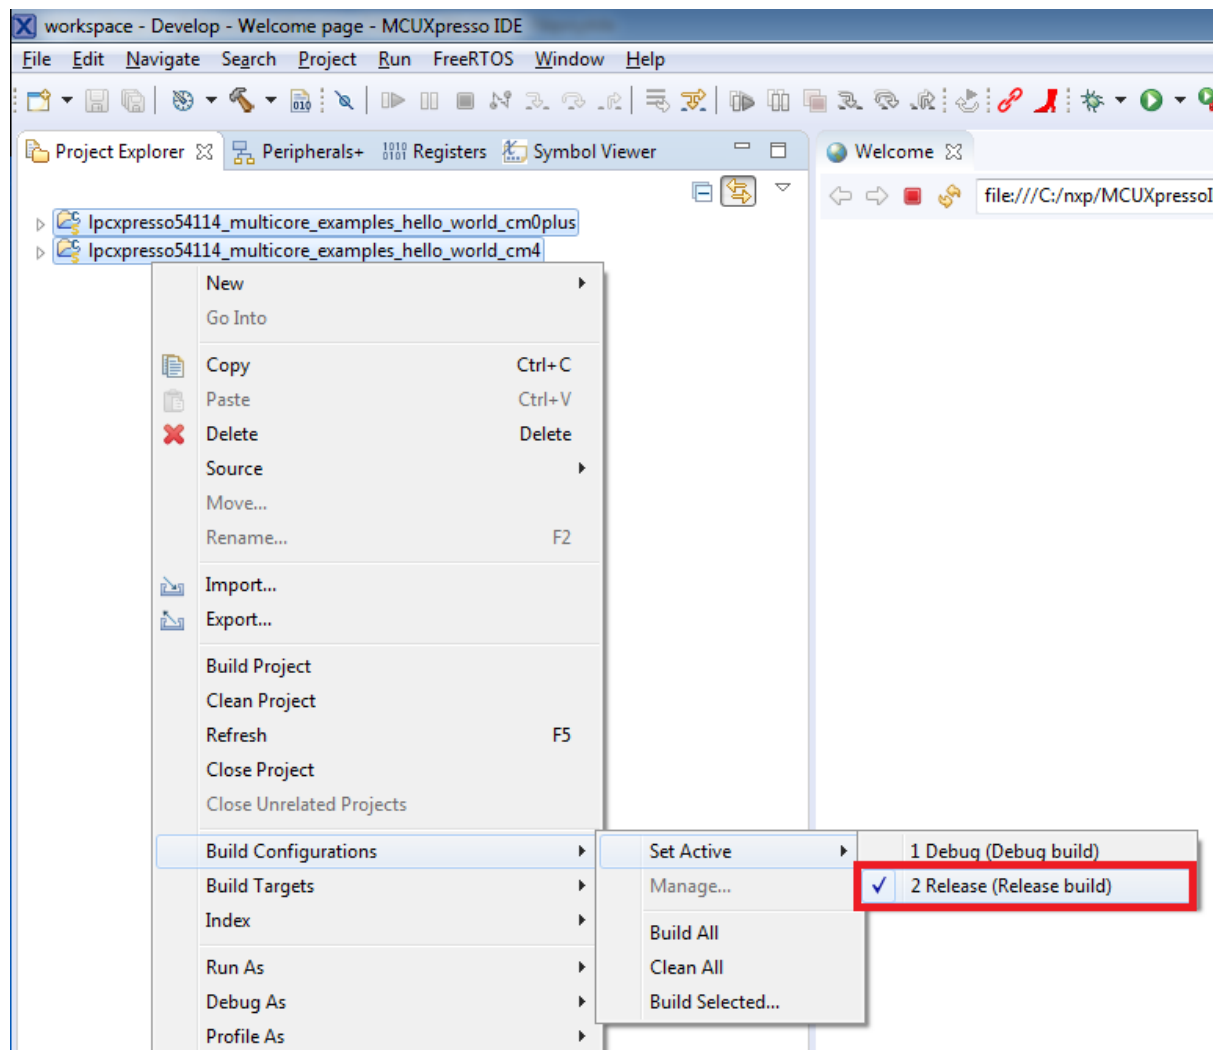


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

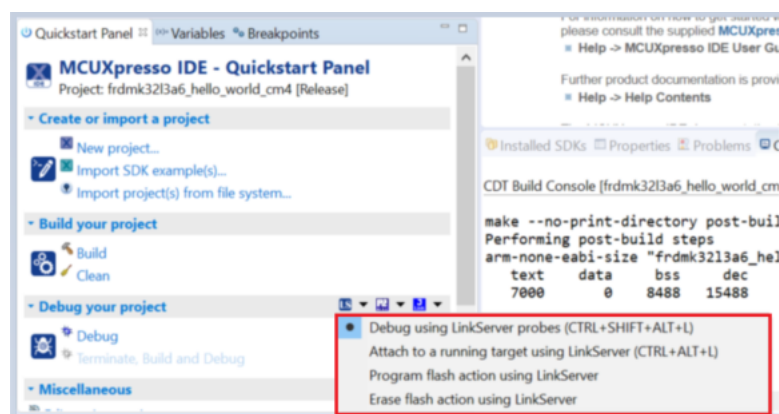

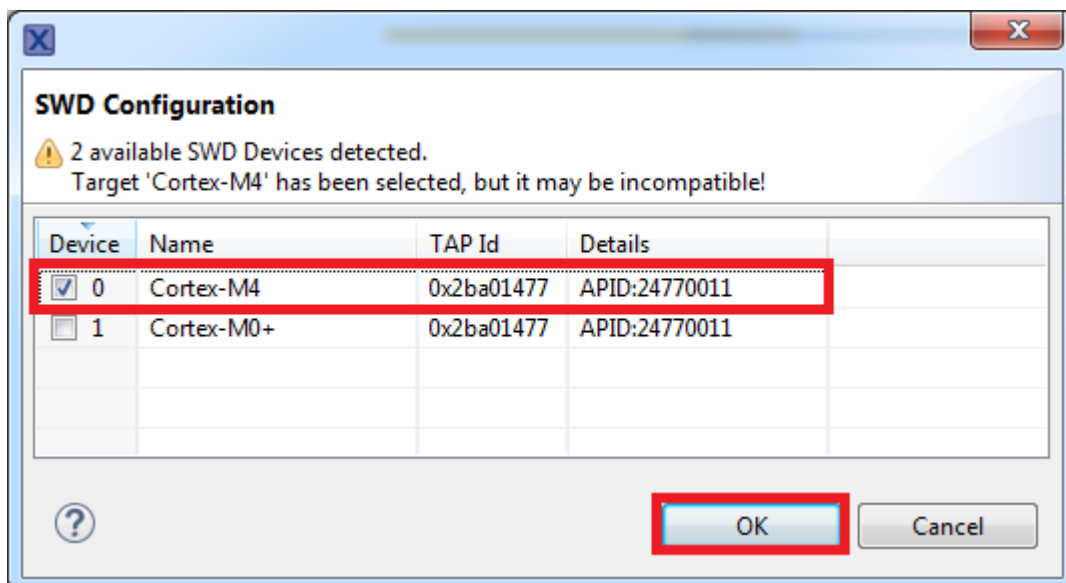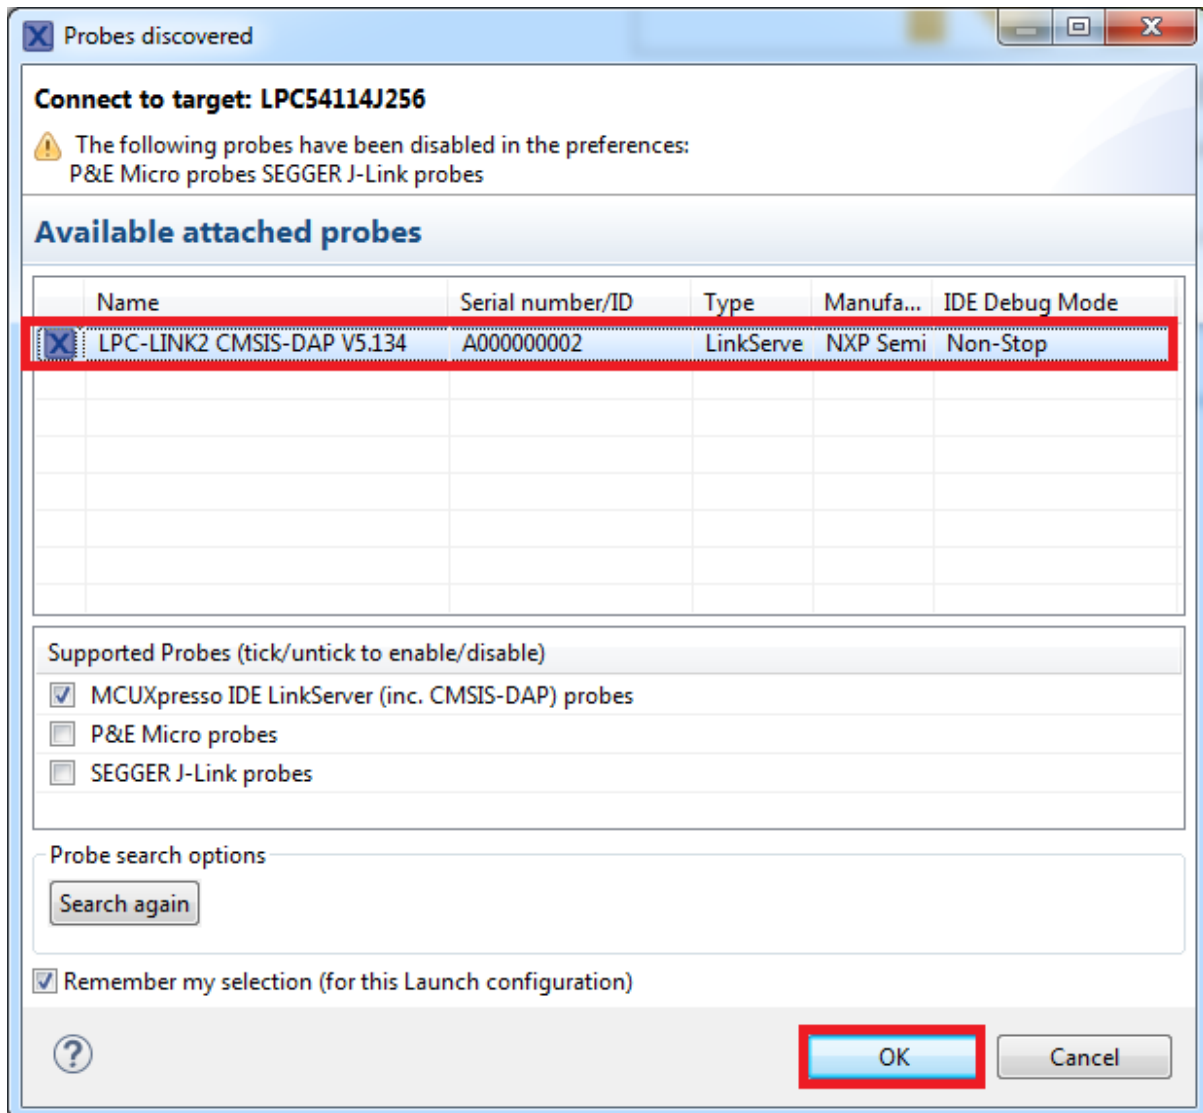

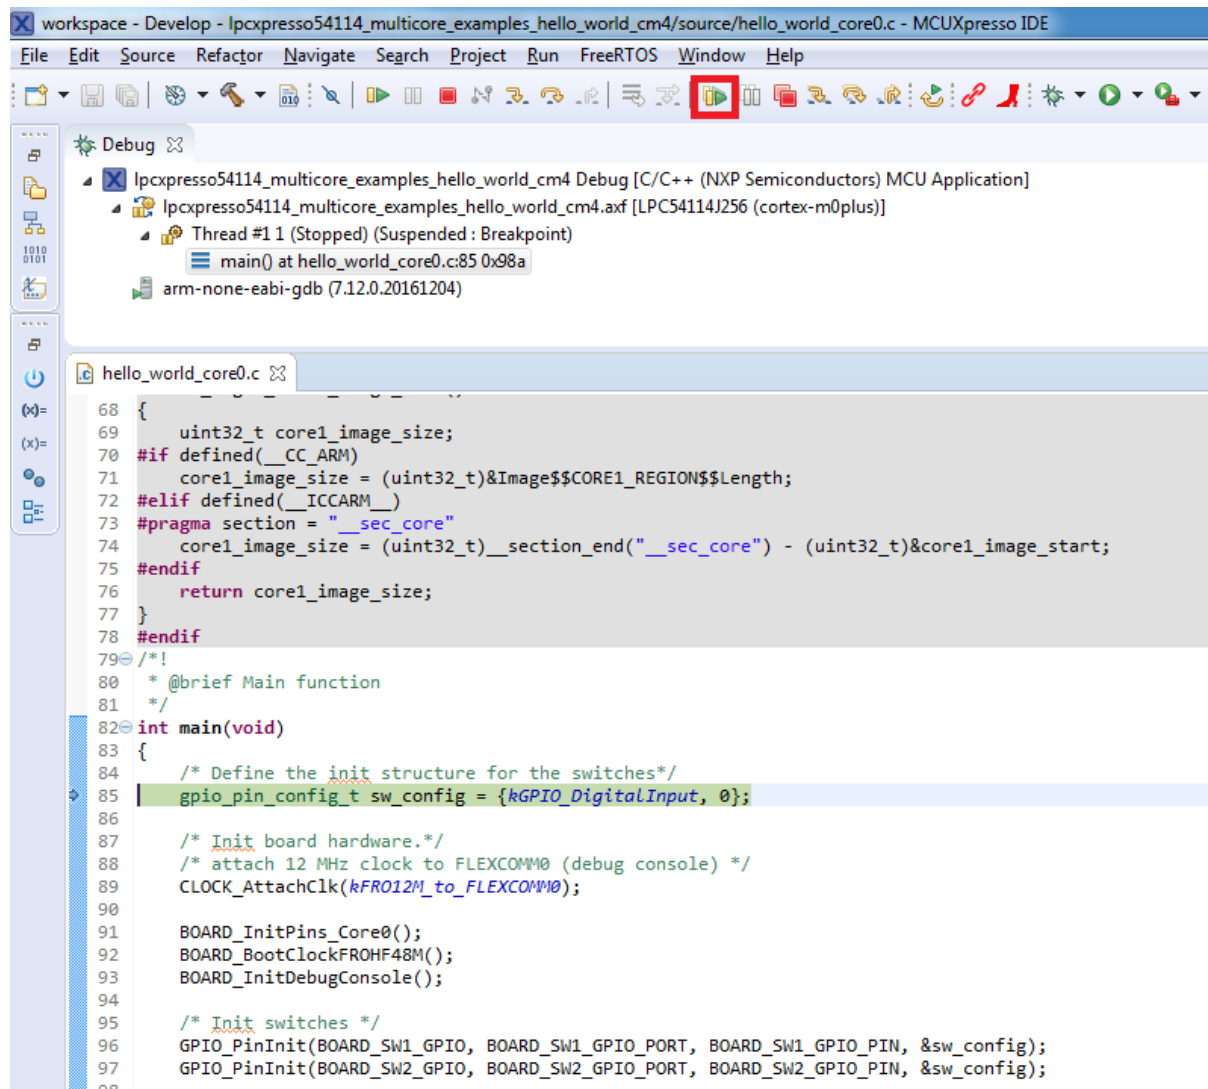



After clicking the “Resume All Debug sessions” button, the hello_world multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

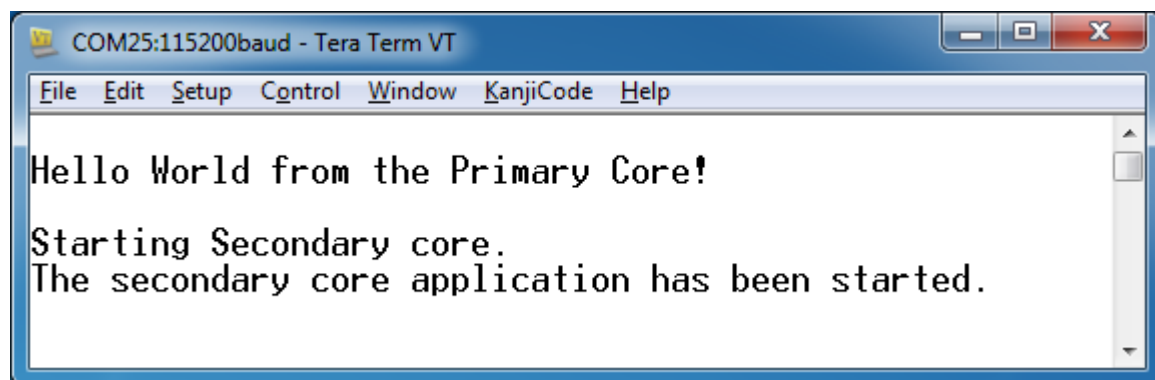


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the lpcxpresso54114_multicore_examples_hello_world_cm0plus project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

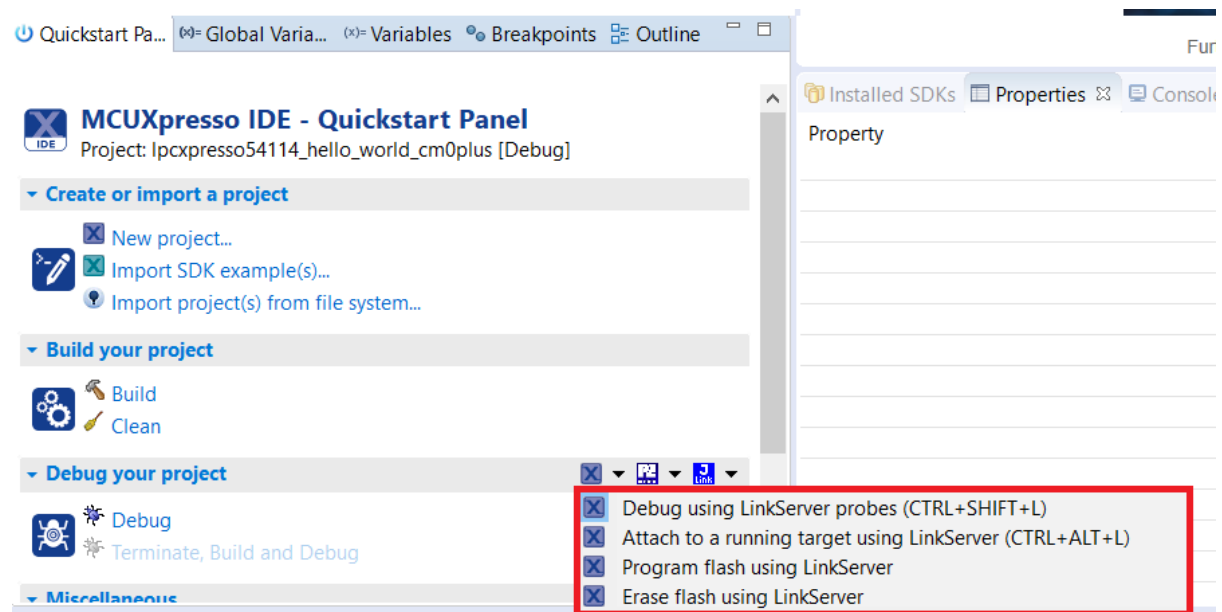


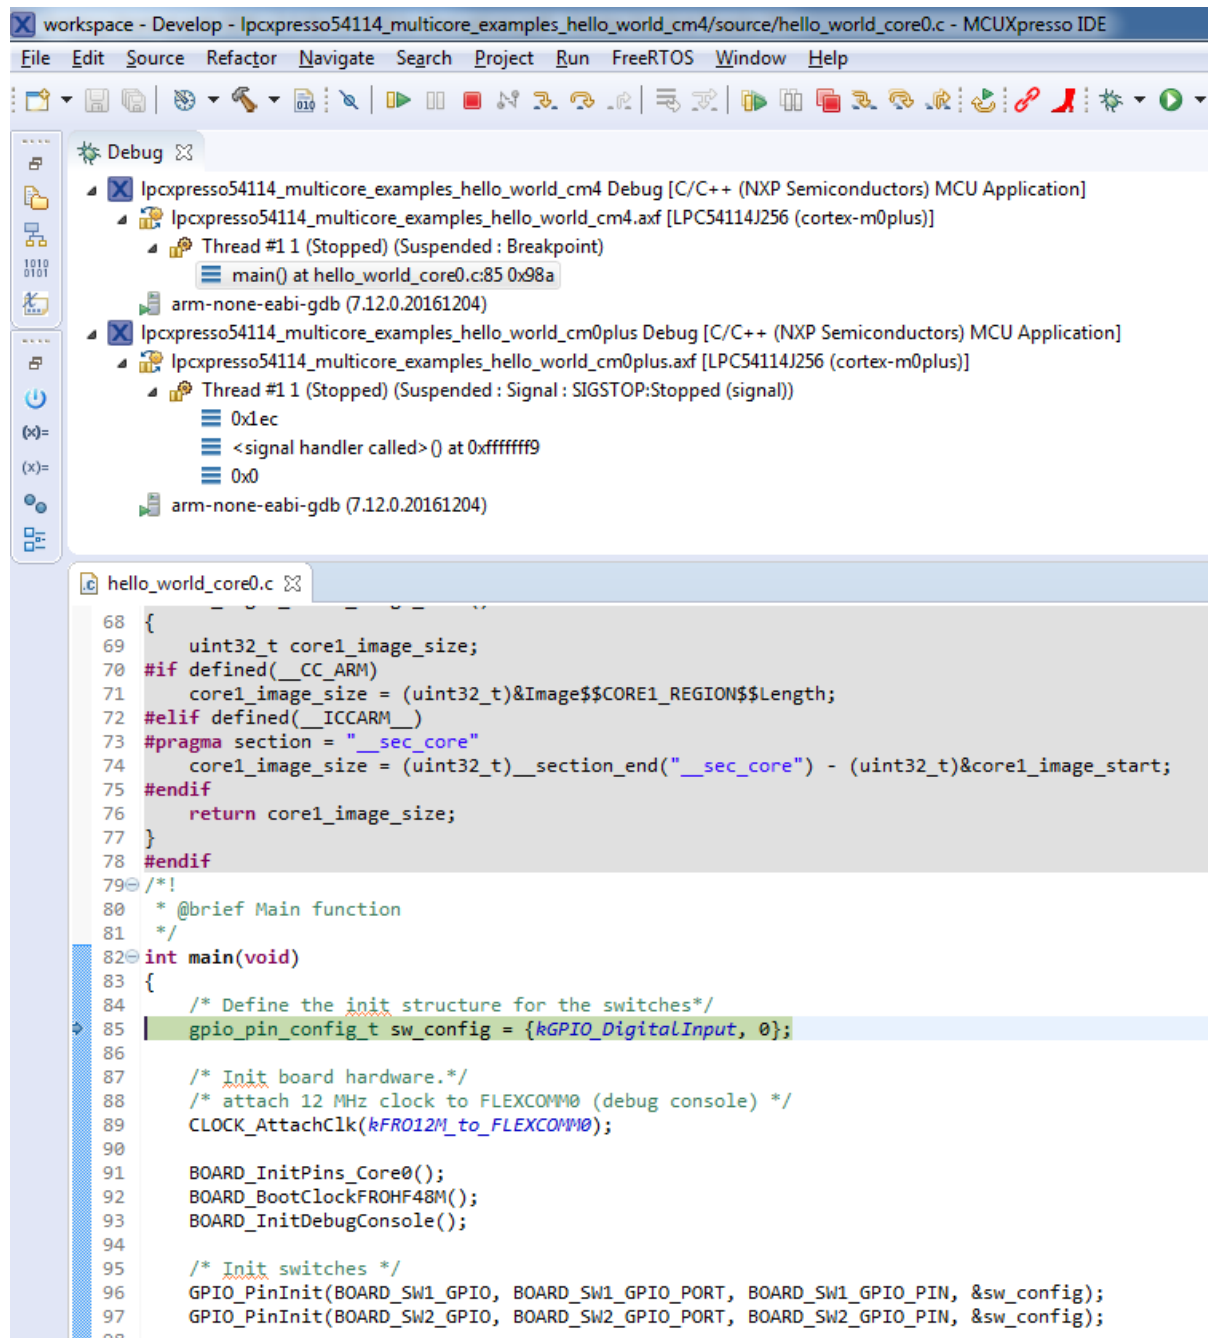


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

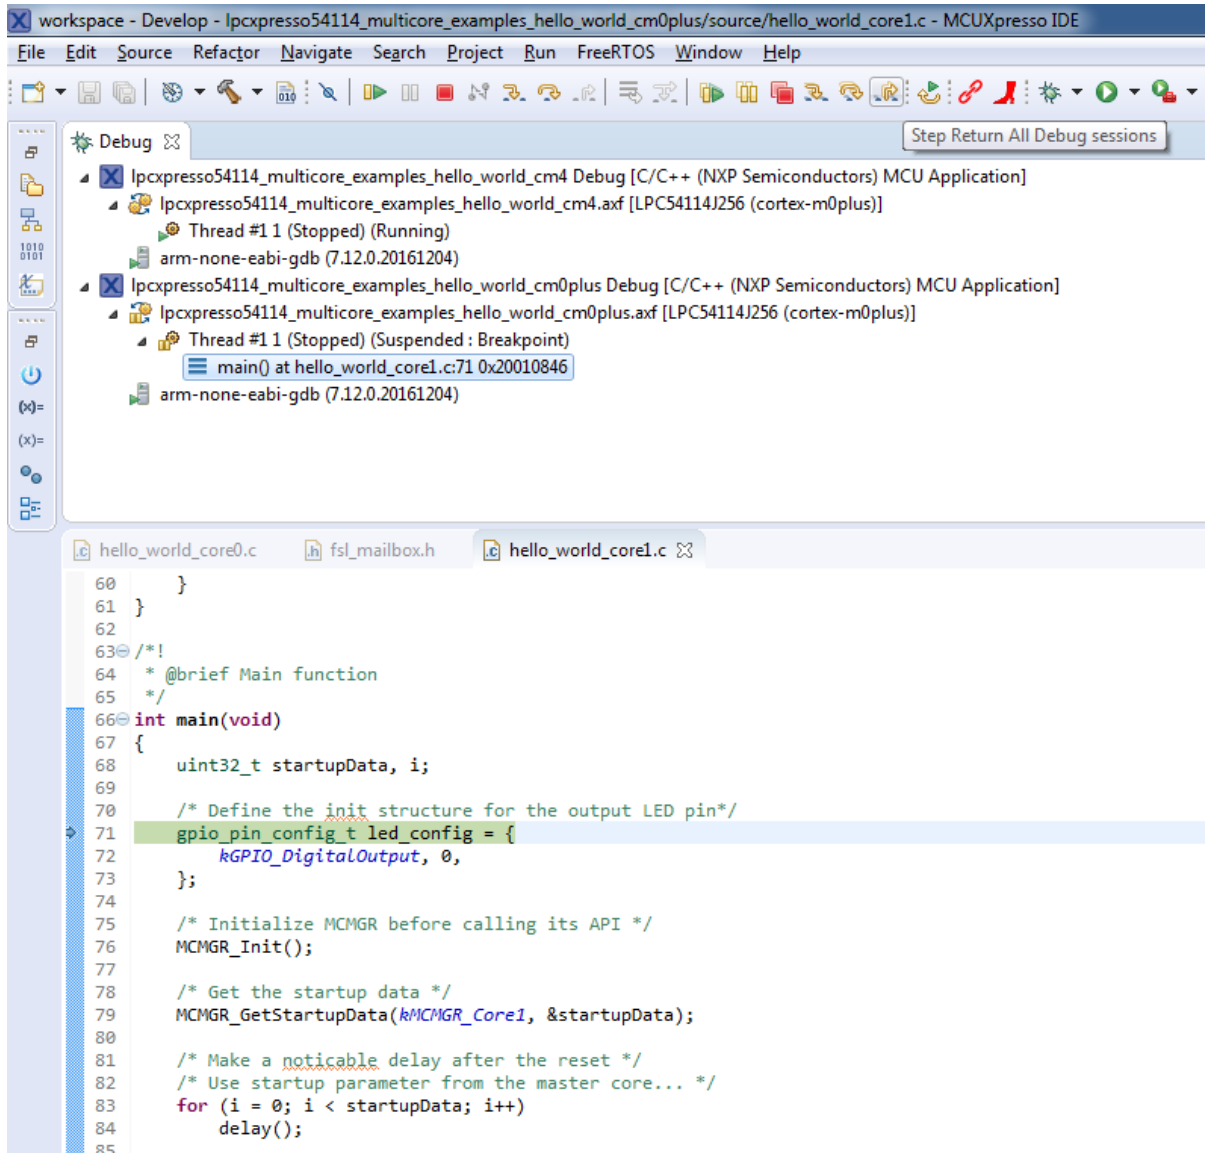


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

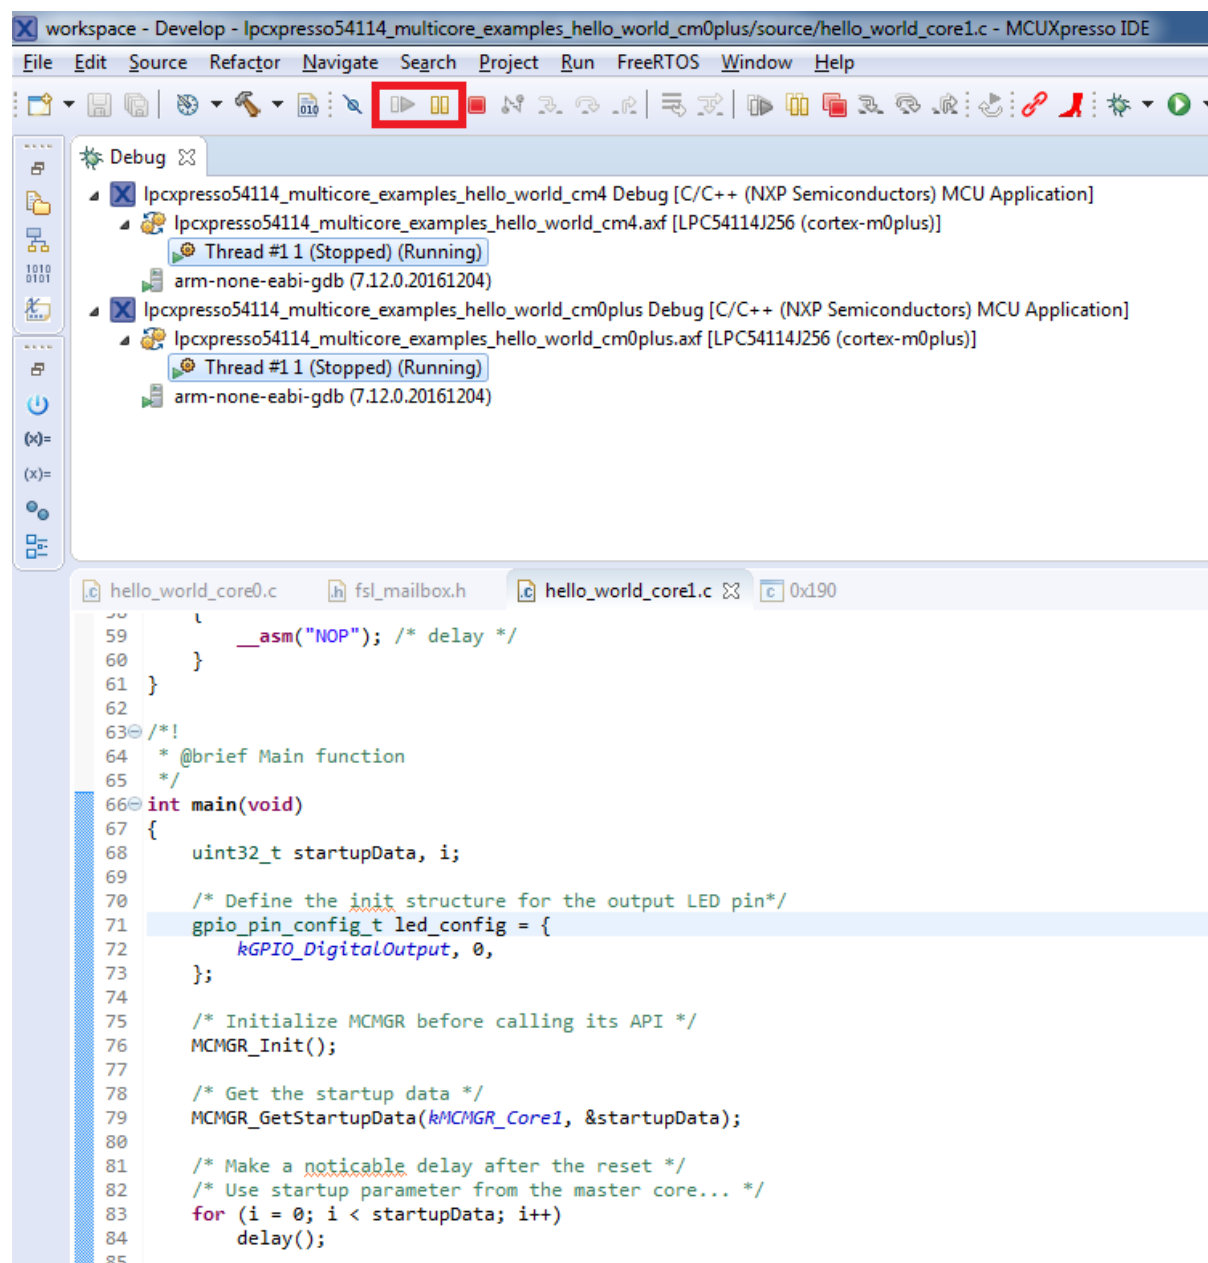

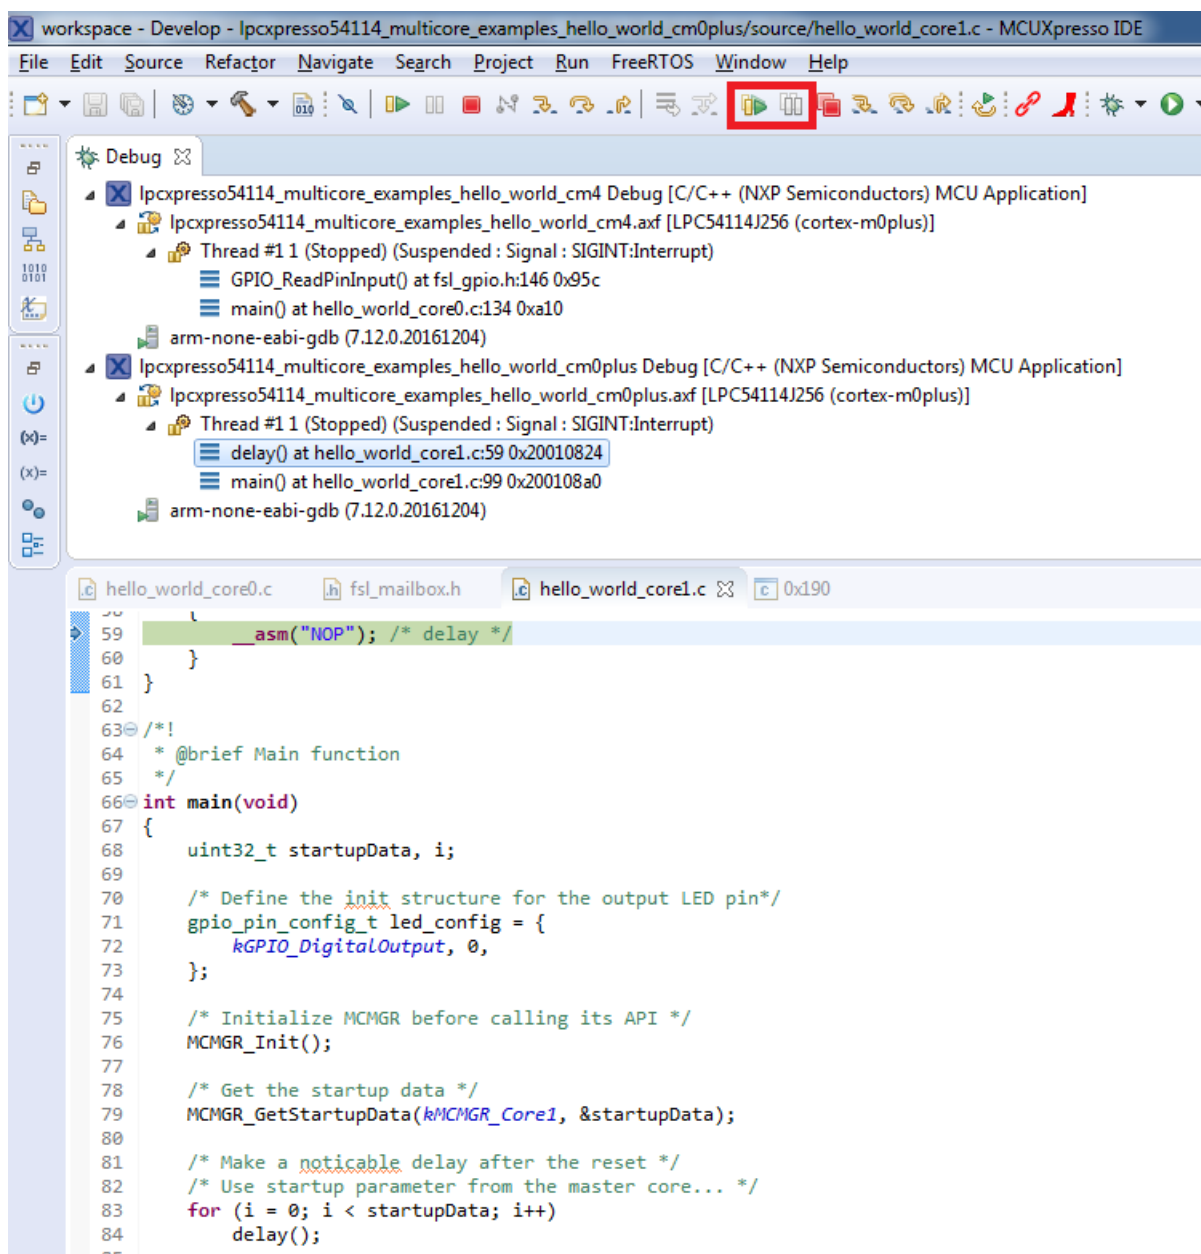


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the hello_world example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the **trustzone_examples/** folder and select **hello_world_s**. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

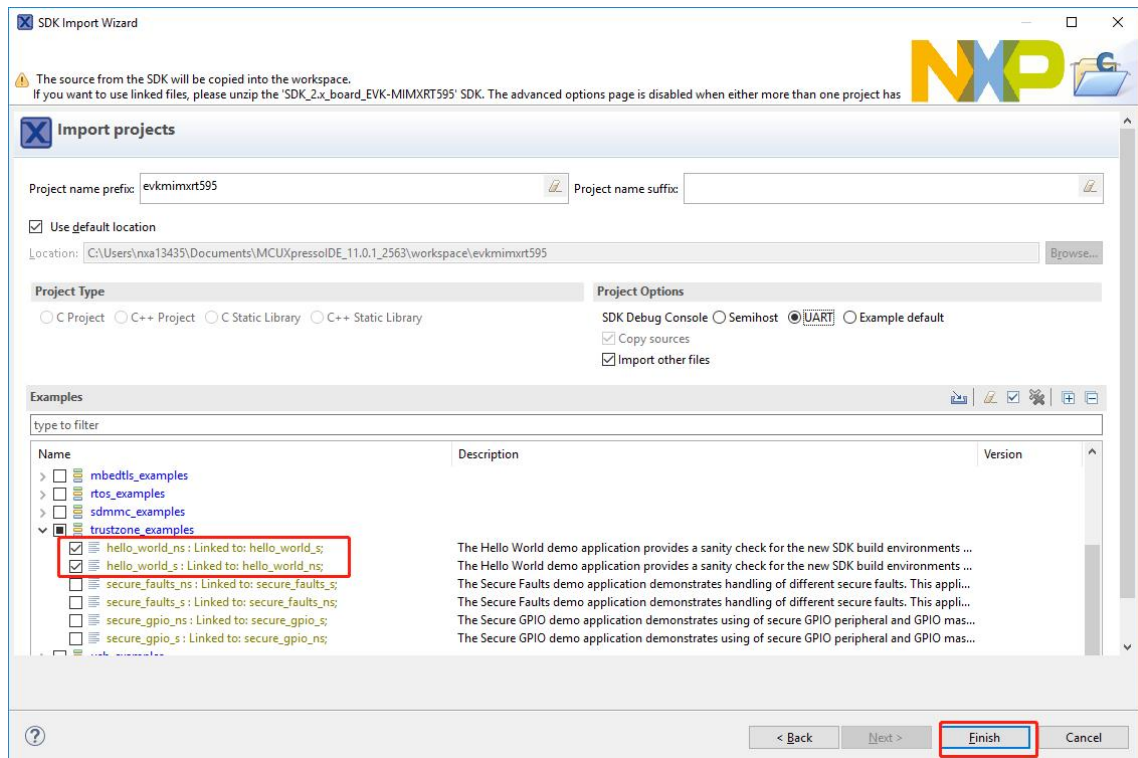


3. Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

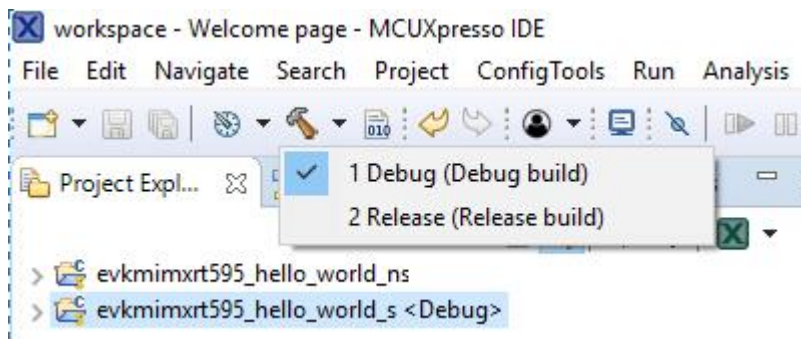


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

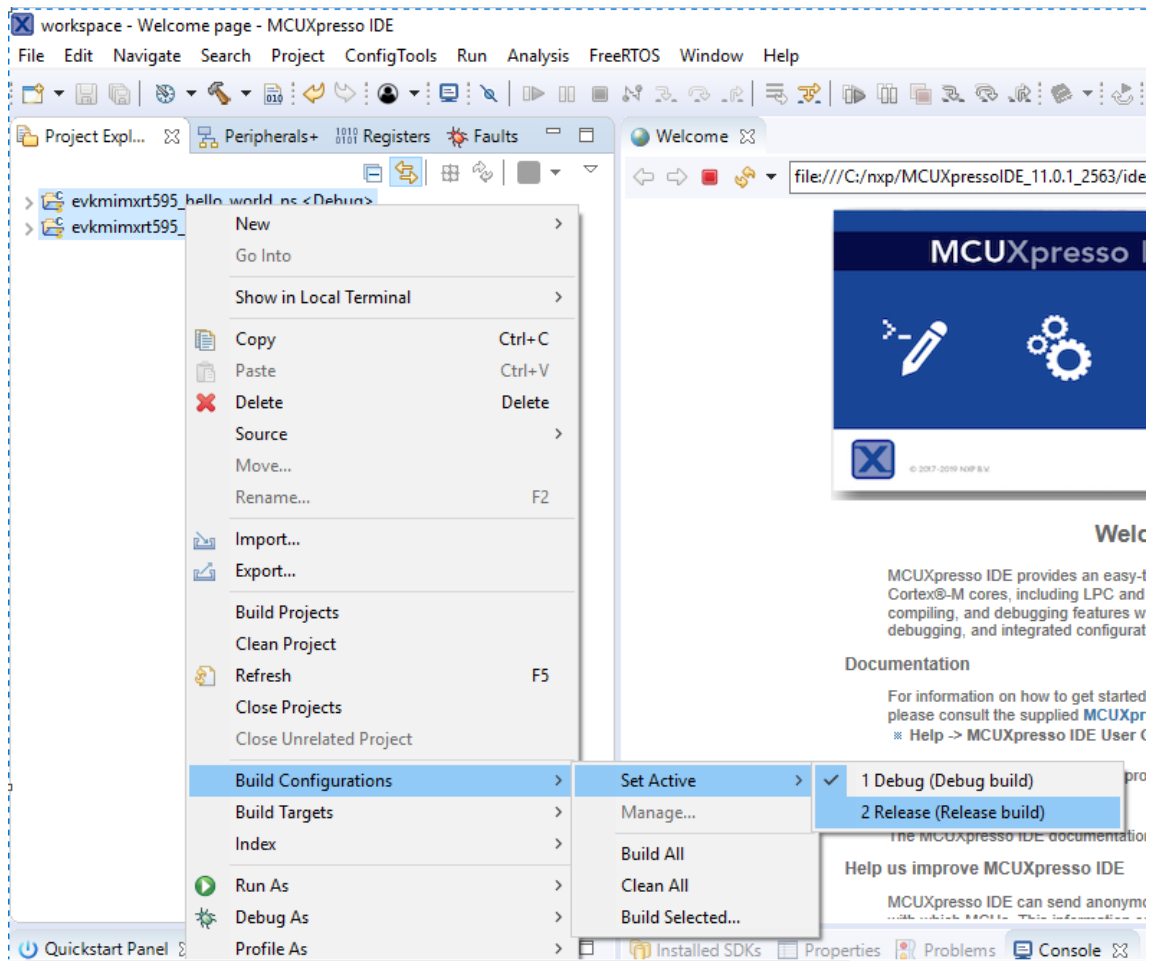

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring <board_name>_hello_world_s is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

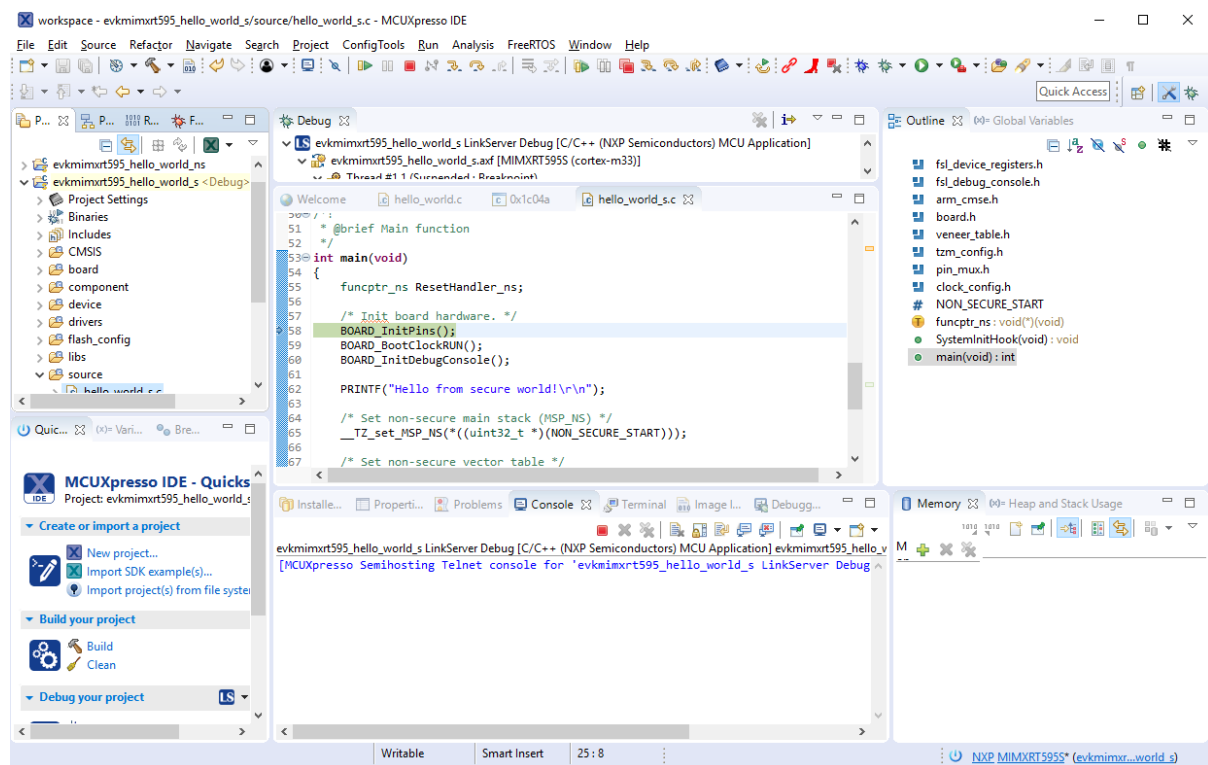

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

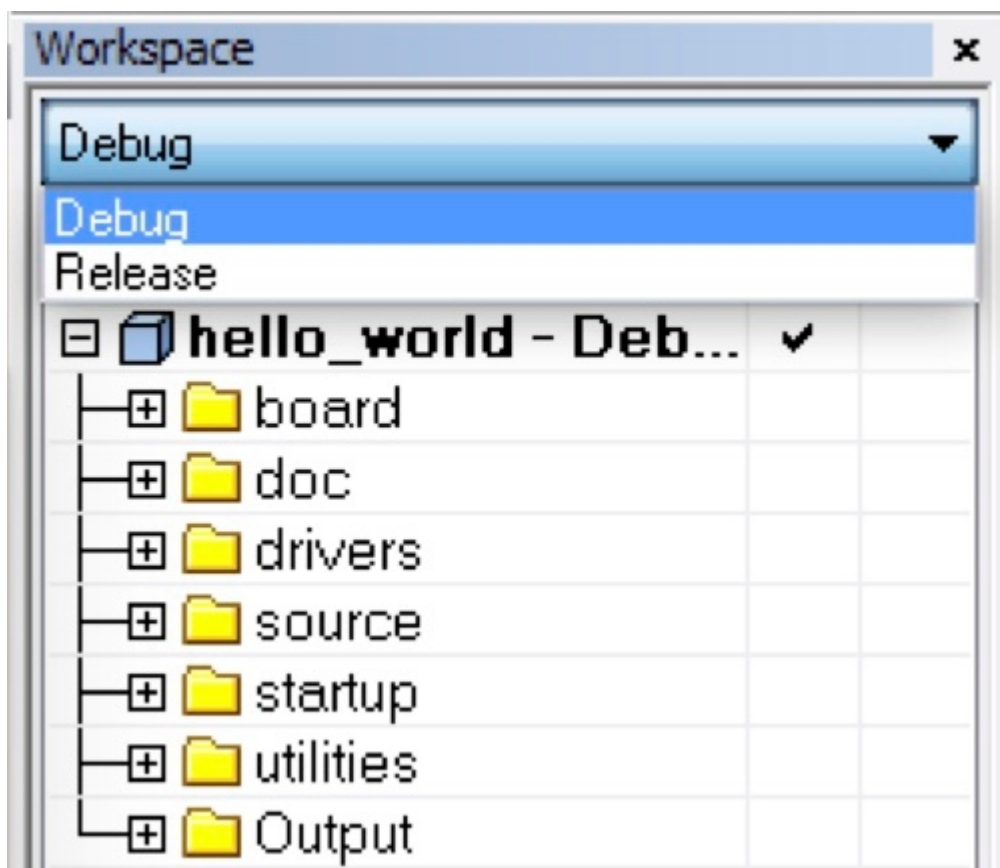


3. To build the demo application, click **Make**, highlighted in red in following figure.

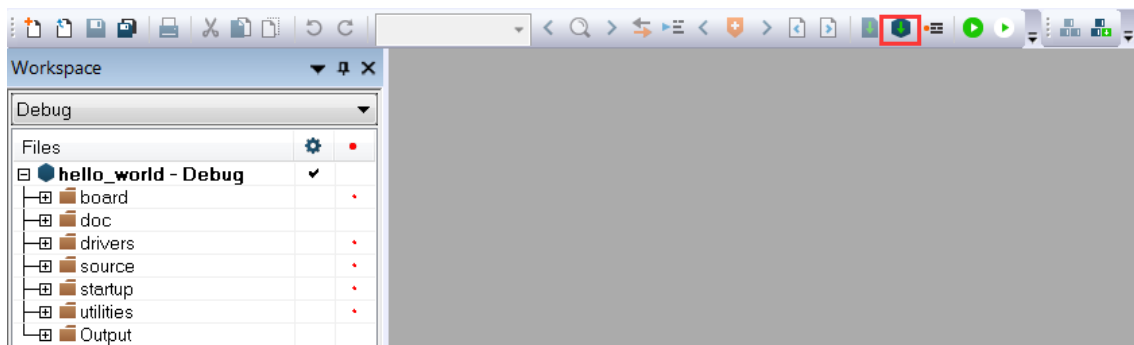

4. The build completes without errors.

Run an example application To download and run the application, perform these steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 2. No parity
 3. 8 data bits

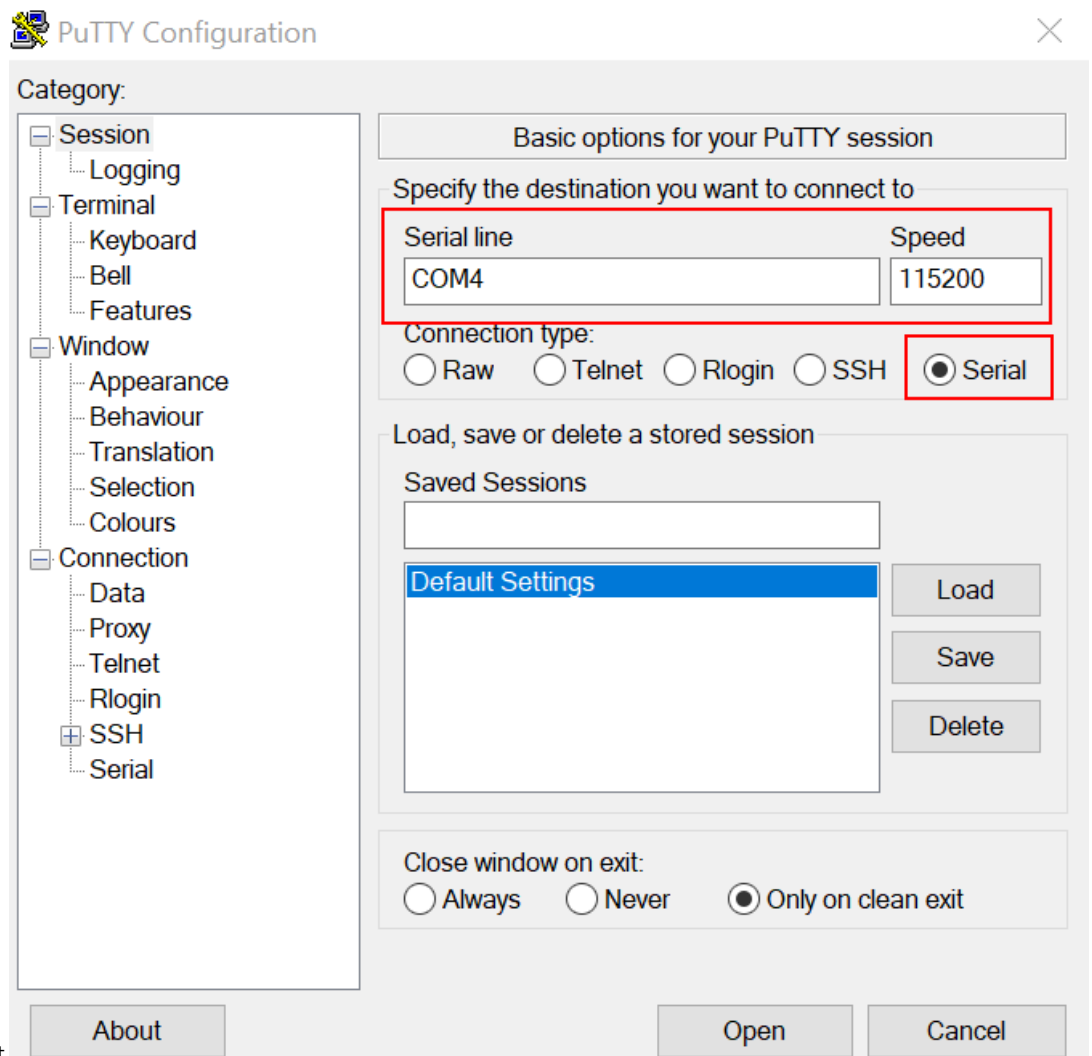


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the `main()` function.

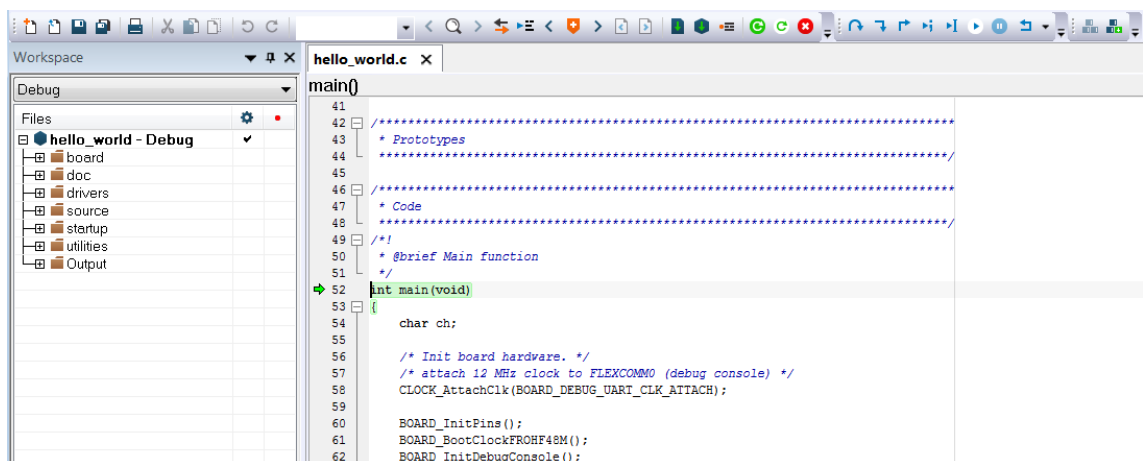

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
→ eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*function`.


Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

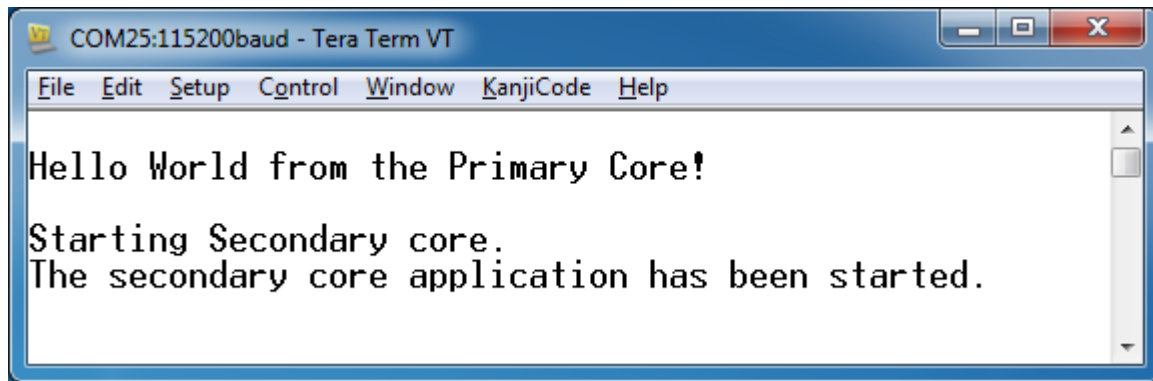

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.



Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_  
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.  
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

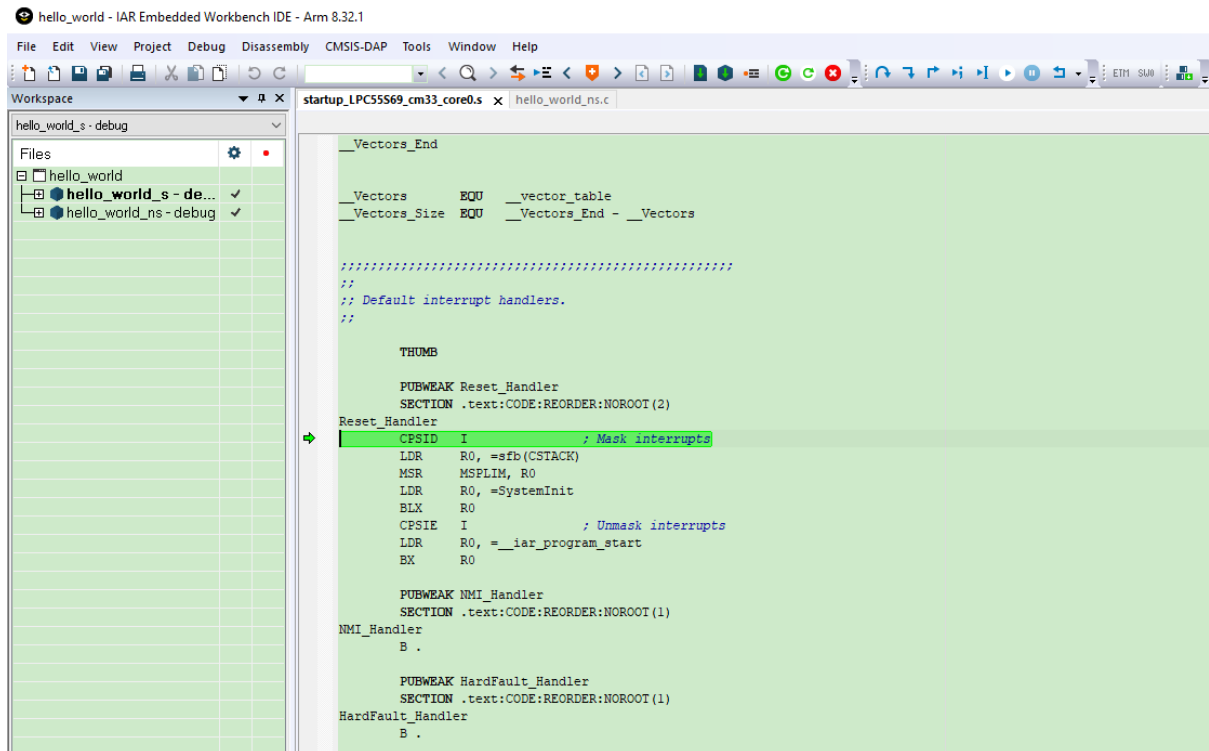


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

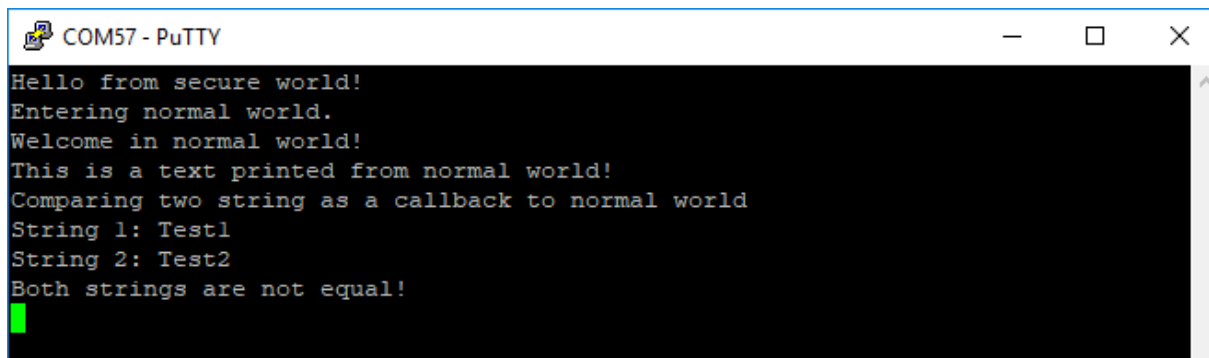


Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the __ns download issue on i.MXRT500.

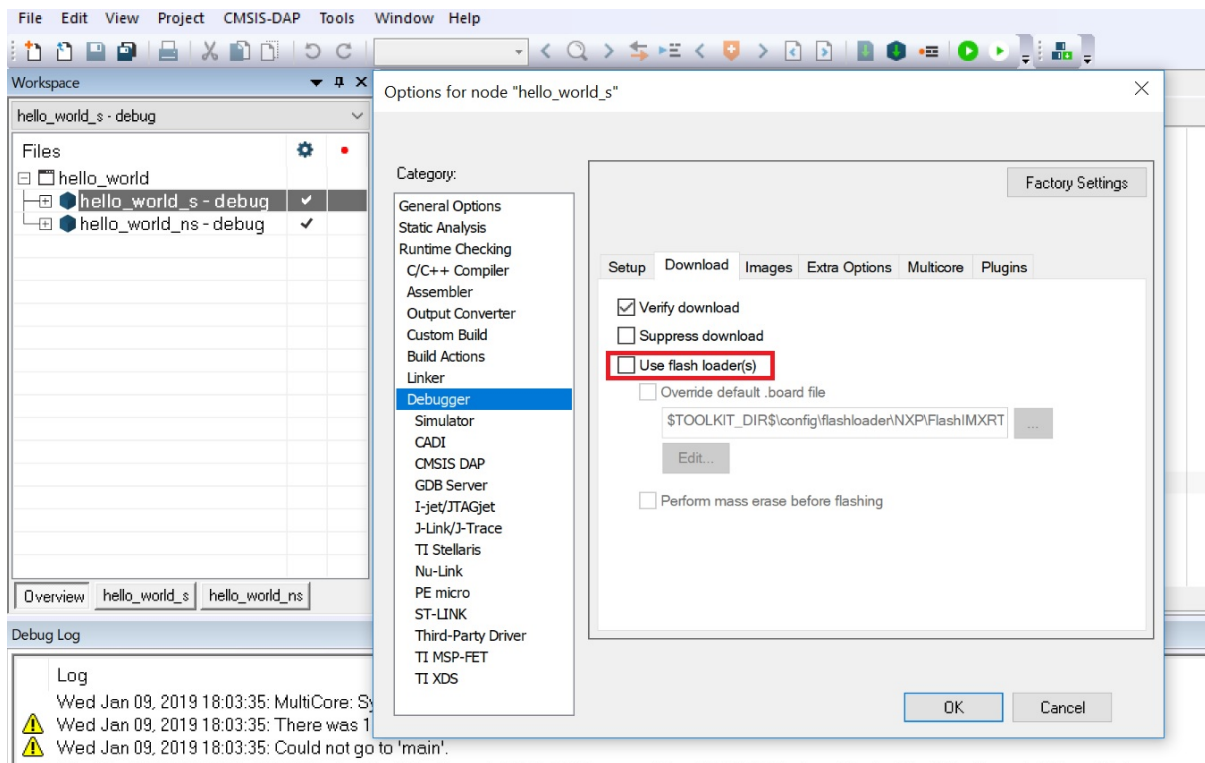

Run a demo using Keil MDK/µVision This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called µVision. In the IDE, select the **Pack Installer** icon.

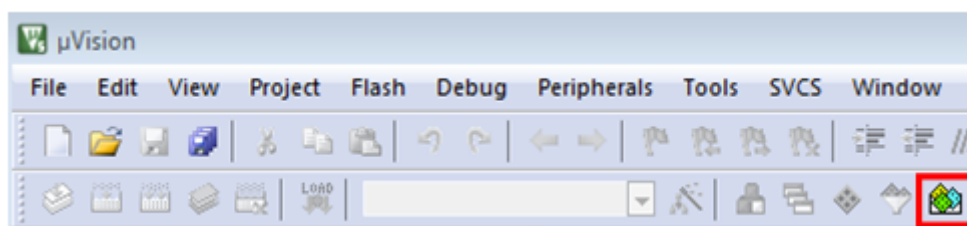

2. After the installation finishes, close the Pack Installer window and return to the µVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

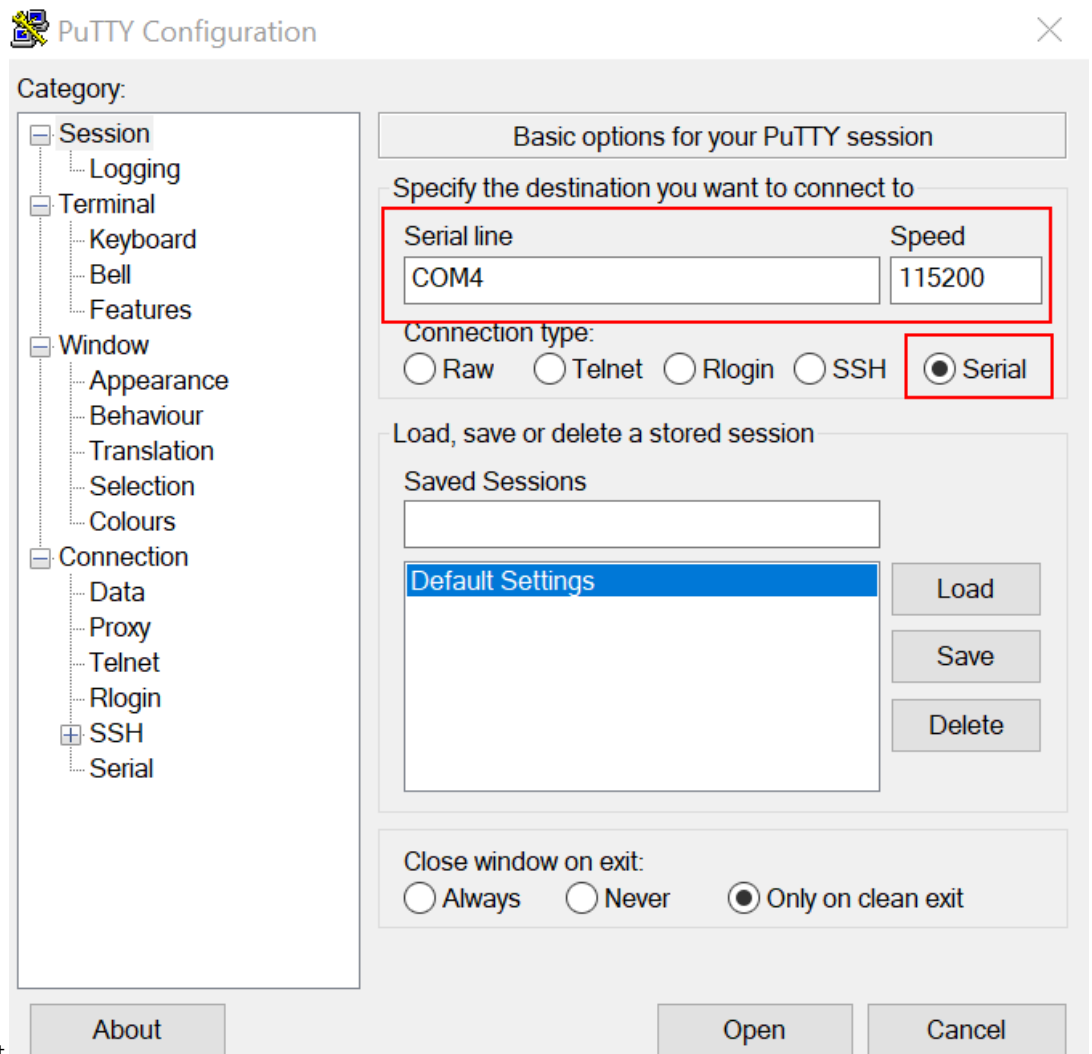


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

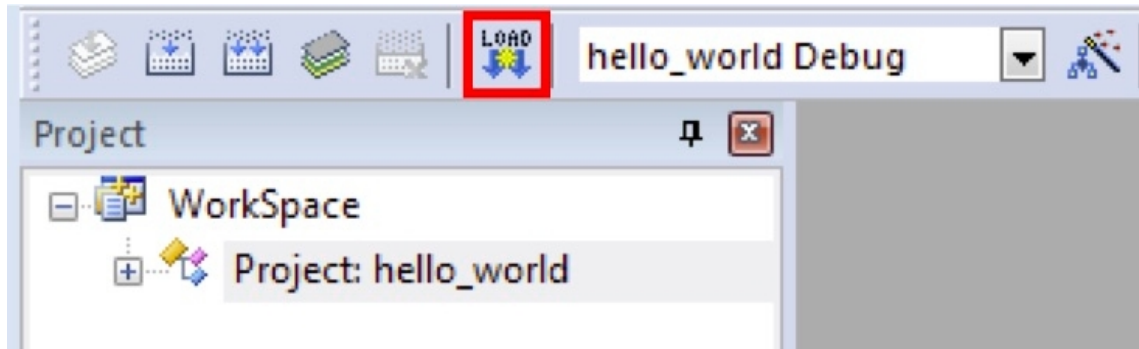

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

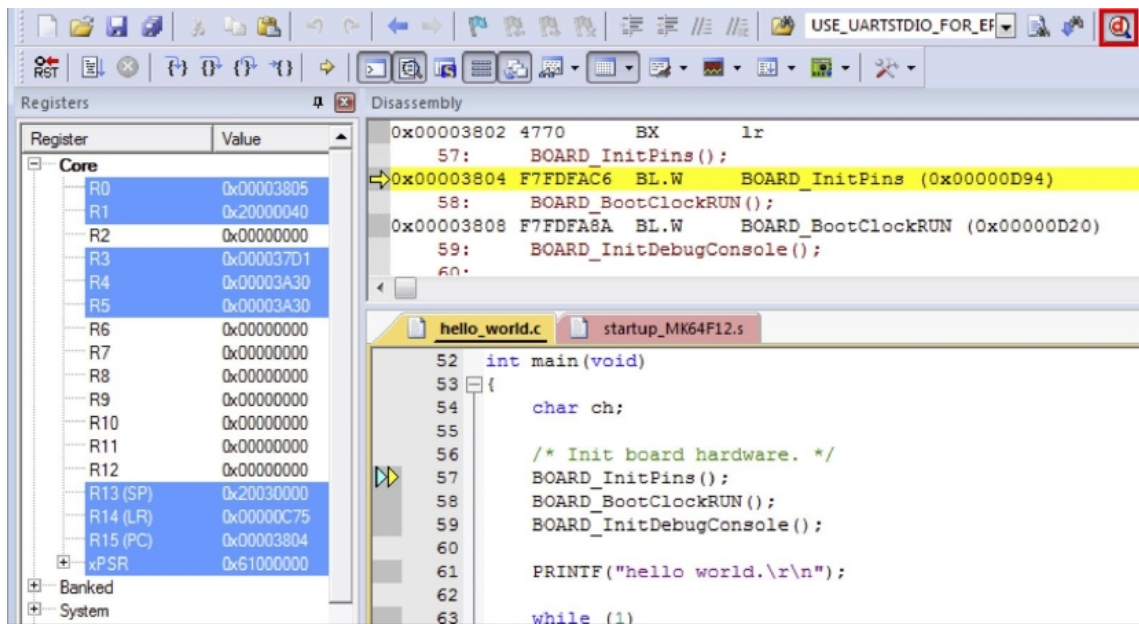

6. Run the code by clicking the **Run** button to start the application.

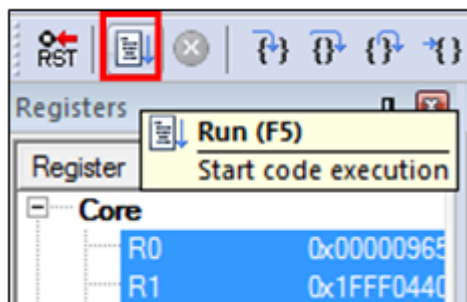

The hello_world application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/μVision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
→cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μVision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

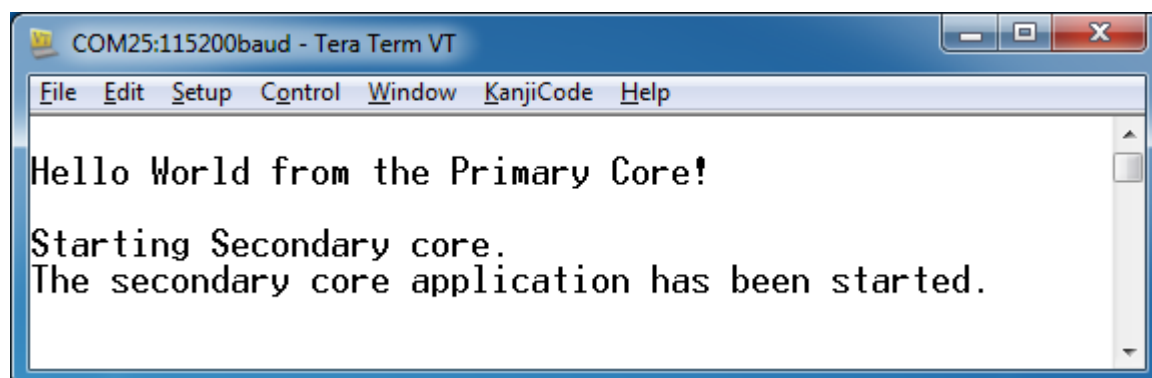

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

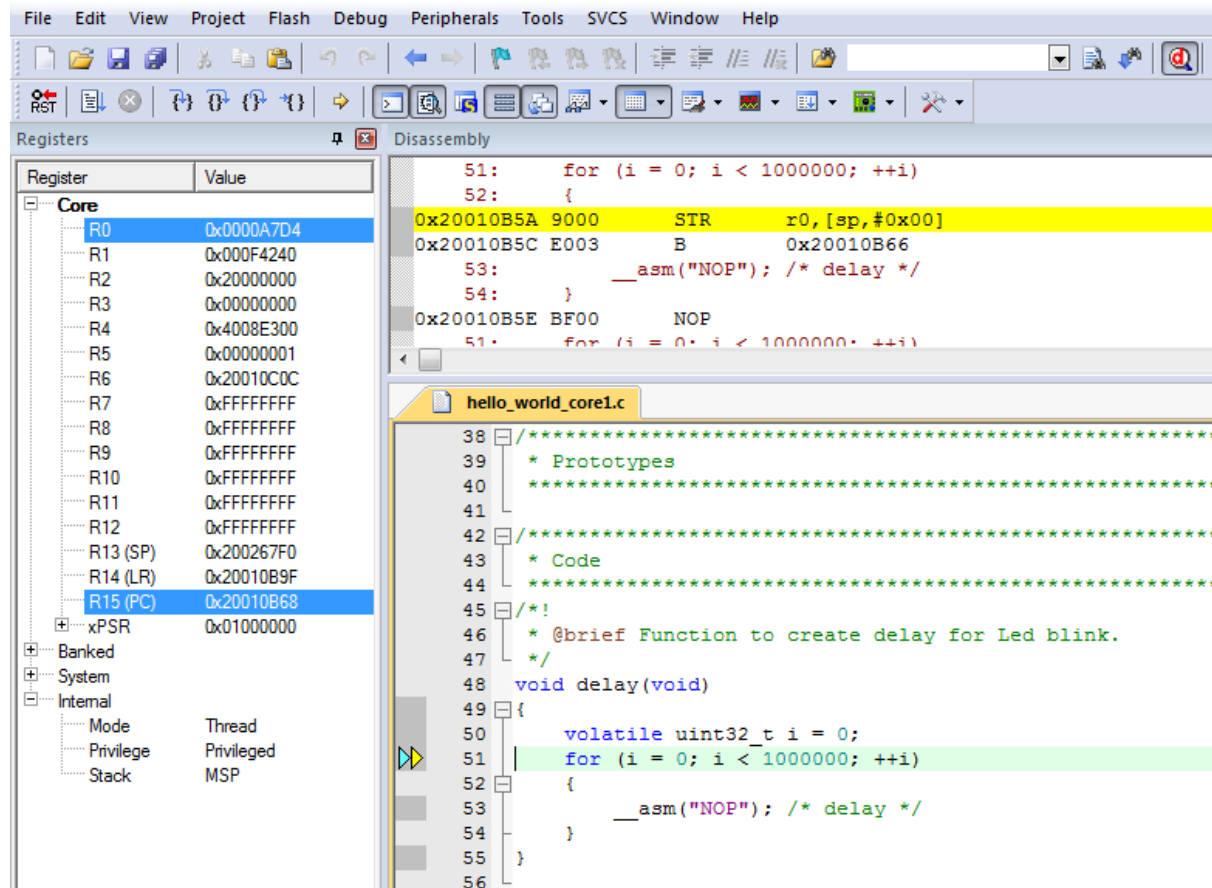

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪ mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪ mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪ uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
→ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

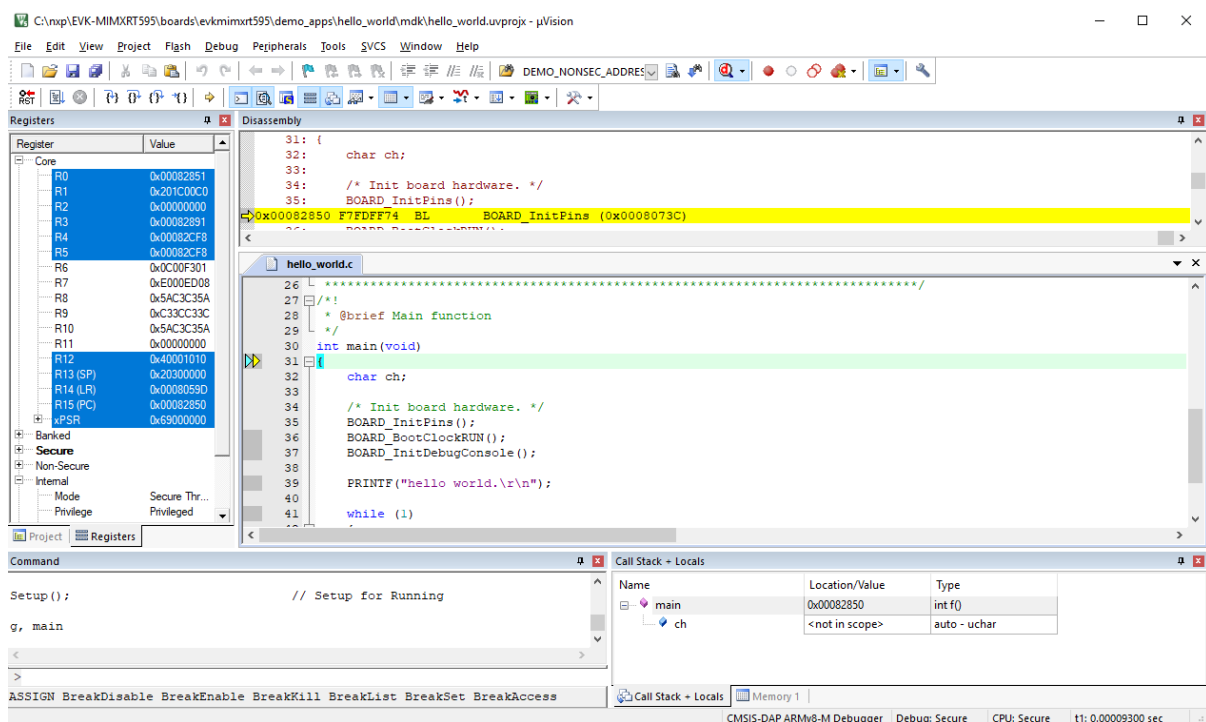

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

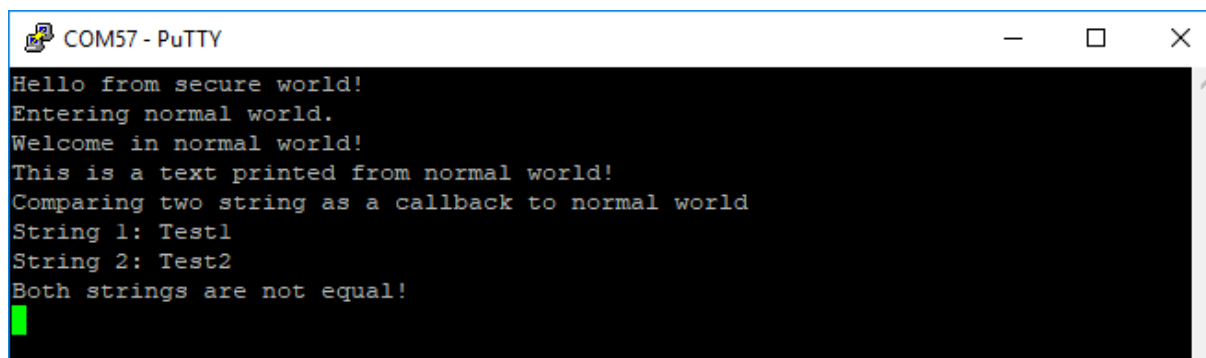

Run a demo using ARMGCC / VSCODE This section describes the steps to run an example application from the SDK archive using the ARMGCC / VSCODE toolchain.

Refer to the [running a demo using MCUXpresso VSC](#) section for detailed instructions on setting up and configuring your project in Visual Studio Code.

Refer to the [CLI](#) section for detailed instructions on building and running your project from the command line.

MCUXpresso Config Tools MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK µVision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:


```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.


2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. **P&E Micro:**




3. **J-Link:**



4. **P&E Micro OSJTAG:**



5. **MRB-KW01:**



On-board Debugger This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.

- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFULink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFULink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFULink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFULink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbed bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.


- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.
- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

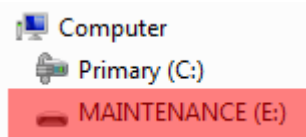

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA266	CMSIS-DAP	MCU-Link
FRDM-MCXA344	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXA366	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXE31B	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override

the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then `extern "C"` should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

Repository-Layout SDK Package

Development Tools Installation This guide explains how to install the essential tools for development with the MCUXpresso SDK.

Quick Start: Automated Installation (Recommended) The **MCUXpresso Installer** is the fastest way to get started. It automatically installs all the basic tools you need.

1. **Download the MCUXpresso Installer** from: [Dependency-Installation](#)
2. **Run the installer** and select “**MCUXpresso SDK Developer**” from the menu
3. **Click Install** and let it handle everything automatically

Manual Installation If you prefer to install tools manually or need specific versions, follow these steps:

Essential Tools

Git - Version Control **What it does:** Manages code versions and downloads SDK repositories from GitHub.

Installation:

- Visit git-scm.com
- Download for your operating system
- Run installer with default settings
- **Important:** Make sure “Add Git to PATH” is selected during installation

Setup:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python - Scripting Environment **What it does:** Runs build scripts and SDK tools.

Installation:

- Install Python **3.10 or newer** from python.org
- **Important:** Check “Add Python to PATH” during installation

West - SDK Management Tool **What it does:** Manages SDK repositories and provides build commands. The west tool is developed by the Zephyr project for managing multiple repositories.

Installation:

```
pip install -U west
```

Minimum version: 1.2.0 or newer

Build System Tools

CMake - Build Configuration **What it does:** Configures how your projects are built.

Recommended version: 3.30.0 or newer

Installation:

- **Windows:** Download .msi installer from cmake.org/download
- **Linux:** Use package manager or download from cmake.org
- **macOS:** Use Homebrew (brew install cmake) or download from cmake.org

Ninja - Fast Build System **What it does:** Compiles your code quickly.

Minimum version: 1.12.1 or newer

Installation:

- **Windows:** Usually included, or download from ninja-build.org
- **Linux:** sudo apt install ninja-build or download binary
- **macOS:** brew install ninja or download binary

Ruby - IDE Project Generation (Optional) **What it does:** Generates project files for IDEs like IAR and Keil.

When needed: Only if you want to use traditional IDEs instead of VS Code.

Installation: Follow the Ruby environment setup guide

Compiler Toolchains Choose and install the compiler toolchain you want to use:

Toolchain			Best For	Download Link		Environment Variable
ARM GCC (Recommended)			Most users, free	ARM Toolchain	GNU	ARMGCC_DIR
IAR EWARM			Professional development	IAR Systems		IAR_DIR
Keil MDK			ARM ecosystem	ARM Developer		MDK_DIR
ARM Compiler			Advanced optimization	ARM Developer		ARMCLANG_DIR

Setting Up Environment Variables After toolchain installation, set an environment variable so the build system locates it:

Windows:

```
# Example for ARM GCC installed in C:\armgcc
setx ARMGCC_DIR "C:\armgcc"
```

Linux/macOS:

```
# Add to ~/.bashrc or ~/.zshrc
export ARMGCC_DIR="/usr" # or your installation path
```

Verify Your Installation After installation, verify everything works by opening a terminal/command prompt and running these commands:

```
# Check each tool - you should see version numbers
git --version
python --version
west --version
cmake --version
ninja --version
arm-none-eabi-gcc --version # (if using ARM GCC)
```

Troubleshooting Installation Issues “Command not found” errors:

- The tool isn’t in your system PATH
- **Solution:** Add the installation directory to your PATH environment variable

Python/pip issues:

- Try using python3 and pip3 instead of python and pip
- On Windows, run the Command Prompt as an Administrator

Slow downloads:

- Add timeout option: `pip install -U west --default-timeout=1000`
- Use alternative mirror: `pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple`

Building Your First Project This guide explains how to build and run your first SDK example project using the west build system. This applies to both GitHub Repository SDK and Repository-Layout SDK Package.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development board connected via USB
- Build tools installed per [Installation Guide](#)

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:


```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Process

Simple Build Build the hello_world example with default settings:

```
west build -b your_board examples/demo_apps/hello_world
```

The default toolchain is armgcc, and the build system will select the first debug target as default if no config is specified.

Specifying Configuration

```
# Release build
west build -b your_board examples/demo_apps/hello_world --config release
```

```
# Debug build (default)
west build -b your_board examples/demo_apps/hello_world --config debug
```

Alternative Toolchains

```
# IAR toolchain
west build -b your_board examples/demo_apps/hello_world --toolchain iar
```

```
# Other toolchains as supported by the example
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config ↵
↵ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_ ↵
↵ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Flash an Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Start a debug session:

```
west debug -r linkserver
```

Common Build Options

Clean Build Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See the commands that get executed without running them:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device DEVICE_PART_NUMBER --config ↵  
↵release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b your_board examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Getting Help View the help information for west build:

```
west build -h
```

Check Supported Configurations To see available configuration options and board targets for an example, refer to the below command:

```
west list_project -p examples/demo_apps/hello_world
```

Next Steps

- Explore other examples in the SDK
- Learn about [Command Line Development](#) for advanced options
- Try [VS Code Development](#) for integrated development
- Refer [Workspace Structure](#) to understand the SDK layout

MCUXpresso for VS Code Development This guide covers using MCUXpresso for VS Code extension to build, debug, and develop SDK applications with an integrated development environment.

Prerequisites

- SDK workspace initialized (GitHub Repository SDK or Repository-Layout SDK Package)
- Development tools installed per [Installation Guide](#)
- Visual Studio Code installed
- MCUXpresso for VS Code extension installed


Extension Installation

Install MCUXpresso for VS Code The MCUXpresso for VS Code extension provides integrated development capabilities for MCUXpresso SDK projects. Refer to the [MCUXpresso for VS Code Wiki](#) for detailed installation and setup instructions.


SDK Import and Setup

Import Methods The SDK can be imported in several ways. The MCUXpresso for VS Code extension supports both GitHub Repository SDK and Repository-Layout SDK Package distributions.


Import GitHub Repository SDK Click **Import Repository** from the **QUICKSTART PANEL**

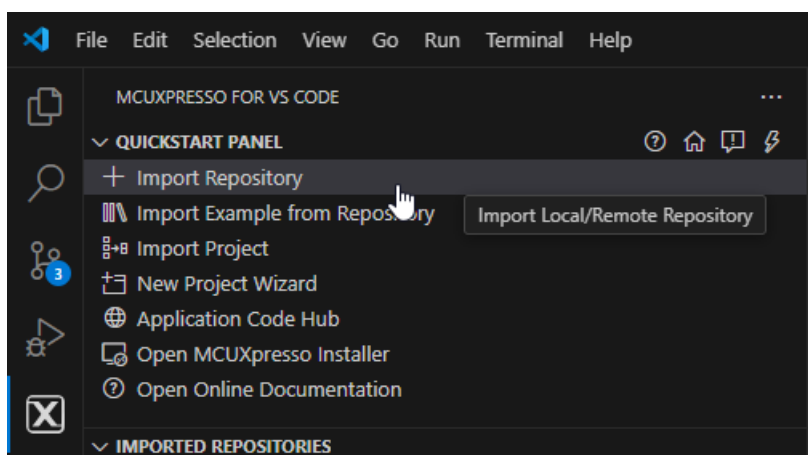

Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details. Select **Local** if you've already obtained the SDK according to [setting up the repo](#). Select your location and click **Import**.

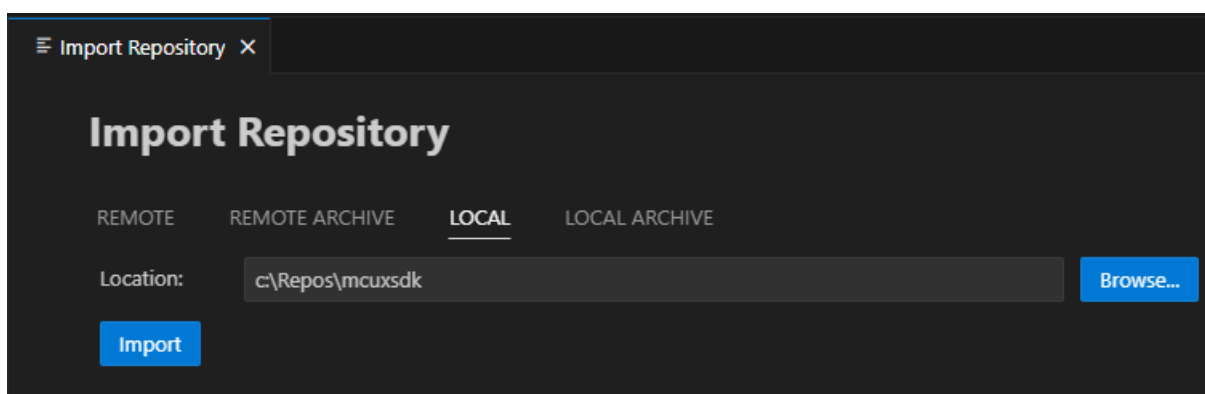


Import Repository-Layout SDK Package Click **Import Repository** from the **QUICKSTART**

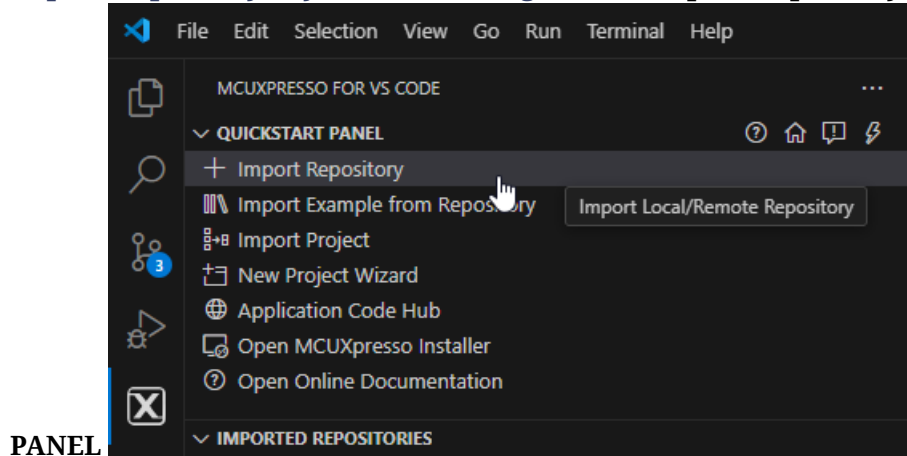


PANEL

Select **Local** if you've already unzipped the Repository-Layout SDK Package. Select your location and click **Import**.

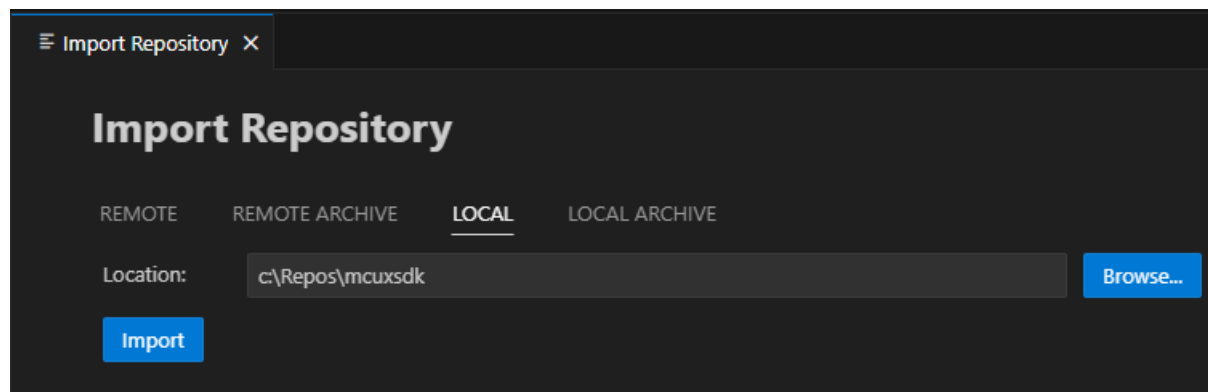


Else if the SDK is ZIP archive, select **Local Archive**, browse to the downloaded SDK ZIP file, fill the link of expect location, then click **Import**.

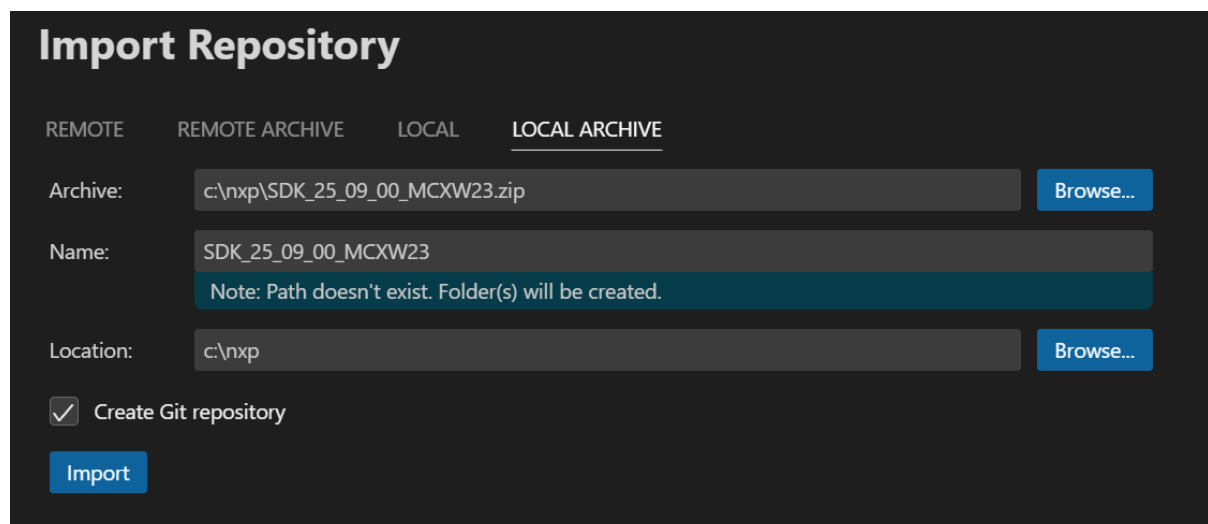

Building Example Applications

Import Example Project

1. Click **Import Example from Repository** from the **QUICKSTART PANEL**

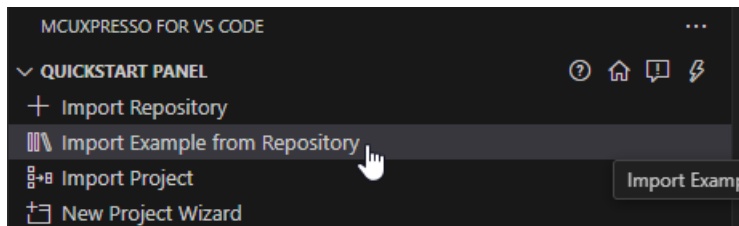

2. Configure project settings:

- **MCUXpresso SDK:** Select your imported SDK
- **Arm GNU Toolchain:** Choose toolchain
- **Board:** Select your target development board
- **Template:** Choose example category
- **Application:** Select specific example (e.g., hello_world)
- **App type:** Choose between Repository applications or Freestanding applications

3. Click **Import**

Import Example from Repository

Repository: c:\Repos\mcuxsdk (MCUXpresso SDK Repository) | v

Toolchain: (Arm GNU Toolchain 13.2.rel1 (Build arm-13.7)) 13.2.1 20231009 | v

Board: FRDM-MCXC444 | v

 FRDM-MCXC444

Template: demo_apps/hello_world | v

The HelloWorld demo prints the "Hello World" string to the terminal using the SDK UART drivers and repeat what user input. The purpose of this demo is to show how to use the UART, and to provide a simple project for debugging and further development.
Please refer to [README](#) file for more details.

App type: Freestanding application | v

Name: frdmxc444_hello_world

Location: c:\nxp_examples [Browse...](#)

Note: Path doesn't exist. Folder(s) will be created.

☐ Open readme file after project is imported

Import

Application Types Repository Applications:

- Located inside the MCUXpresso SDK
- Integrated with SDK workspace

Freestanding Applications:


- Imported to user-defined location
- Independent of SDK location

Trust Confirmation VS Code will prompt you to confirm if the imported files are trusted. Click **Yes** to proceed.

Building Projects

Build Process

1. Navigate to **PROJECTS** view
2. Find your project
3. Click the **Build Project** icon

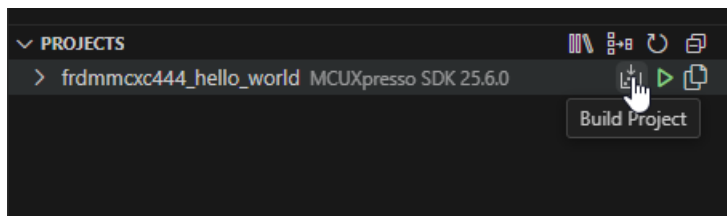


The integrated terminal will display build output at the bottom of the VS Code window.

Running and Debugging

Serial Monitor Setup


1. Open **Serial Monitor** from VS Code's integrated terminal

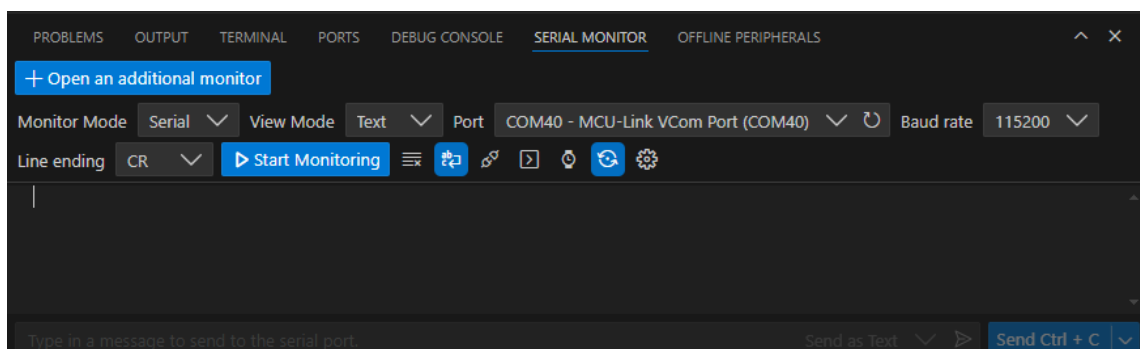

2. Configure serial settings:
 - **VCom Port:** Select port for your device
 - **Baud Rate:** Set to 115200

Debug Session


1. Navigate to **PROJECTS** view
2. Click the play button to initiate a debug session

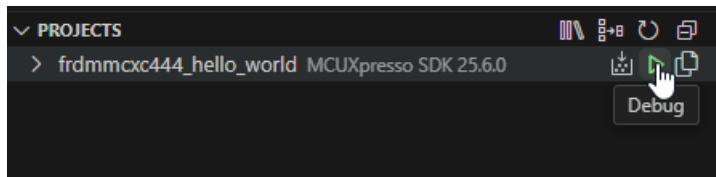

The debug session will begin with debug controls initially at the top of the interface.


Debug Controls Use the debug controls to manage execution:

- **Continue:** Resume code execution
- **Step controls:** Navigate through code

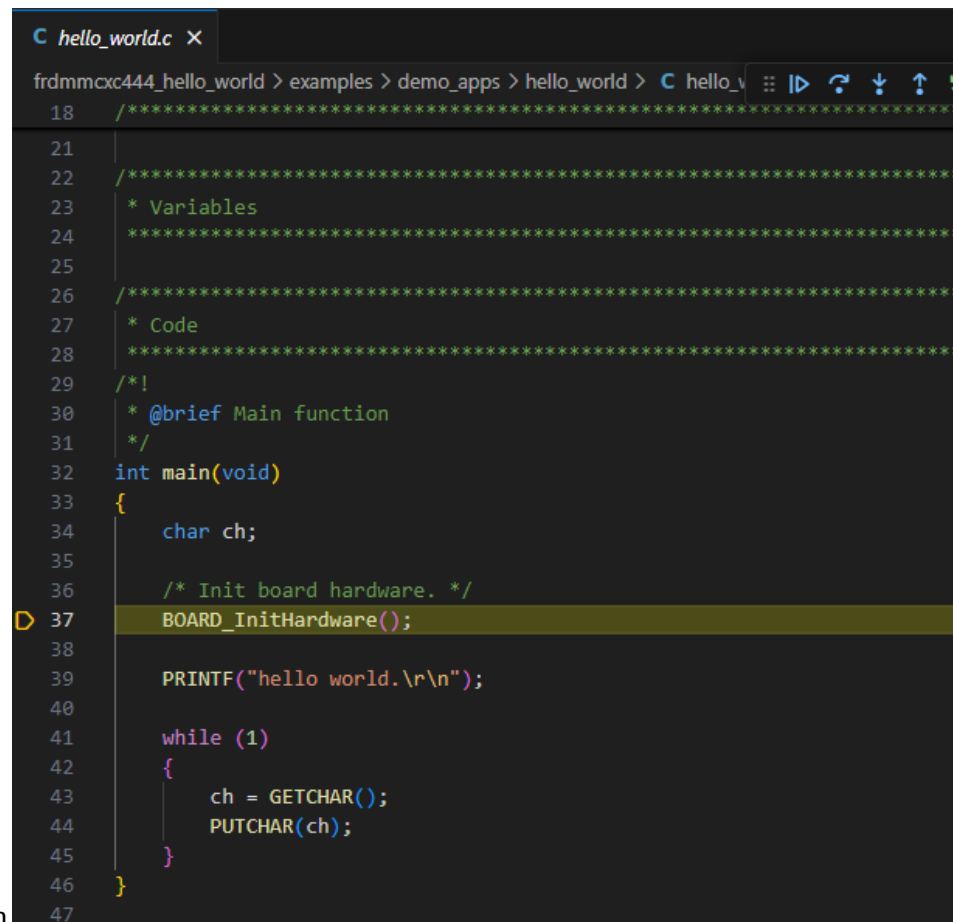

- **Stop:** Terminate debug session

Monitor Output Observe application output in the **Serial Monitor** to verify correct operation.

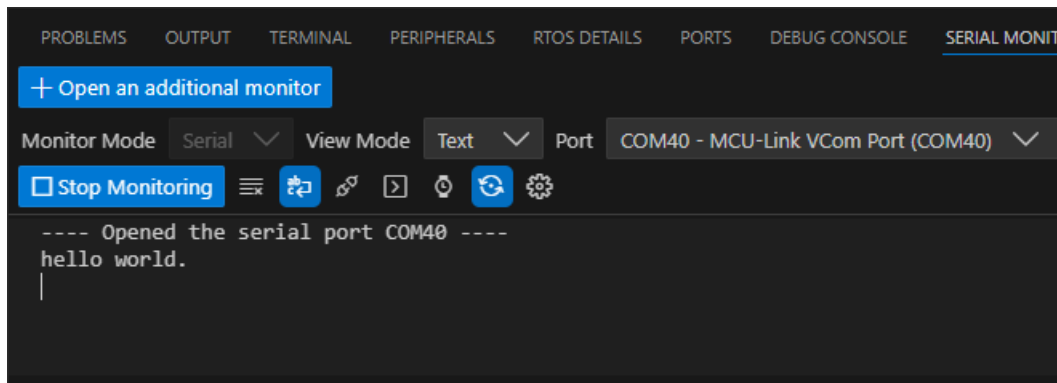

Debug Probe Support For comprehensive information on debug probe support and configuration, refer to the [MCUXpresso for VS Code Wiki DebugK section](#).

Project Configuration

Workspace Management The extension integrates with the MCUXpresso SDK workspace structure, providing access to:

- Example applications
- Board configurations
- Middleware components
- Build system integration

Multi-Project Support The PROJECTS view allows management of multiple imported projects within the same workspace.

Troubleshooting

Import Issues SDK not detected:

- Verify SDK workspace is properly initialized
- Ensure all required repositories are updated
- Check SDK manifest files are present

Project import failures:

- Confirm board support exists for selected example
- Verify toolchain installation
- Check example compatibility with selected board

Build Problems Build failures:

- Check integrated terminal for error messages
- Verify all dependencies are installed
- Ensure toolchain is properly configured

Debug Issues Debug session fails:

- Verify board connection via USB
- Check debug probe drivers are installed
- Confirm build completed successfully

Serial monitor problems:

- Verify correct VCom port selection
- Check baud rate configuration (115200)
- Ensure board drivers are installed

Integration with Command Line MCUXpresso for VS Code integrates with the underlying west build system, allowing seamless integration with command line workflows described in [Command Line Development](#).

Advanced Features

Project Types The extension supports both repository-based and freestanding project types, providing flexibility in project organization and SDK integration.

Build System Integration The extension leverages the MCUXpresso SDK build system, providing access to all build configurations and options available through command line tools.

Next Steps

- Explore additional examples in the SDK
- Review [Command Line Development](#) for advanced build options
- Refer [MCUXpresso for VS Code Wiki](#) for detailed documentation
- Learn about [SDK Architecture](#) for better understanding of the development environment

Command Line Development This guide covers developing with the MCUXpresso SDK using command line tools and the west build system. This workflow applies to both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development tools installed per [Installation Guide](#)
- Target board connected via USB

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Commands

Standard Build Process Build with default settings (armgcc toolchain, first debug config):

```
west build -b your_board examples/demo_apps/hello_world
```

Specifying Build Configuration

Release build

```
west build -b your_board examples/demo_apps/hello_world --config release
```

Debug build with specific toolchain

```
west build -b your_board examples/demo_apps/hello_world --toolchain iar --config debug
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config ↵
↵ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↵ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Shield Support For boards with shields:

```
west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↵ Dcore_id=cm33_core0
```

Advanced Build Options

Clean Builds Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See what commands would be executed:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device MK22F12810 --config release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Flashing and Debugging

Flash Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Session Start a debugging session:

```
west debug -r linkserver
```

IDE Project Generation Generate IDE project files for traditional IDEs:

```
# Generate IAR project
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵
↵flexspi_nor_debug -p always -t guiproject
```

IDE project files are generated in mcuxsdk/build/<toolchain> folder.

Note: Ruby installation is required for IDE project generation. See [Installation Guide](#) for setup instructions.

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Toolchain Issues Verify environment variables are set correctly:

```
# Check ARM GCC
echo $ARMGCC_DIR
arm-none-eabi-gcc --version

# Check IAR (if using)
echo $IAR_DIR
```

Getting Help Display help information:

```
west build -h
west flash -h
west debug -h
```

Check Supported Configurations If unsure about supported options for an example:

```
west list_project -p examples/demo_apps/hello_world
```

Best Practices

Project Organization

- Keep custom projects outside the SDK tree
- Use version control for your application code
- Document any SDK modifications

Build Efficiency

- Use `-p` always for clean builds when troubleshooting
- Leverage `--dry-run` to understand build processes
- Use specific configs and toolchains to reduce build time

Development Workflow

1. Start with existing examples closest to your requirements
2. Copy and modify rather than building from scratch
3. Test with `hello_world` before moving to complex examples
4. Use configuration tools for pin muxing and clock setup

Next Steps

- Explore [VS Code Development](#) for integrated development experience
- Review [Workspace Structure](#) to understand SDK organization
- Refer build system documentation for advanced configurations

Workspace Structure After you initialize your SDK workspace, it creates a specific directory structure that organizes all SDK components. This structure is identical for both GitHub Repository SDK and Repository-Layout SDK Package.

Top-Level Organization

```
your-sdk-workspace/  
  manifests/      # West manifest repository  
  mcuxsdk/        # Main SDK content
```

The `mcuxsdk/` directory serves as your primary working directory and contains all the SDK components.

SDK Component Layout Based on the actual SDK structure, the main directories include:

Di- rec- tory	Contents	Purpose
arch/	Architecture-specific files	ARM CMSIS, build configurations
cmake/	Build system modules	CMake configuration and build rules
compo	Software components	Reusable software libraries and utilities
devices	Device support packages	MCU-specific headers, startup code, linker scripts
drivers	Peripheral drivers	Hardware abstraction layer for MCU peripherals
examp	Sample applications	Demonstration code and reference implementations
middle	Optional software stacks	Networking, graphics, security, and other libraries
rtos/	Operating system support	FreeRTOS integration
scripts	Build and utility scripts	West extensions and development tools
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.	

Example Organization Examples follow a two-tier structure separating common code from board-specific implementations:

Common Example Files

```
examples/demo_apps/hello_world/
  CMakeLists.txt      # Build configuration
  example.yml         # Example metadata
  hello_world.c       # Application source code
  Kconfig             # Configuration options
  readme.md           # General documentation
```

Board-Specific Files

```
examples/_boards/your_board/demo_apps/hello_world/
  app.h               # Board specific application header
  example_board_readme.md # Board specific documentation
  hardware_init.c     # Board specific hardware initialization
  pin_mux.c           # Pin multiplexing configuration
  pin_mux.h           # Pin multiplexing header definitions
  hello_world.bin     # Pre-built binary for quick testing
  hello_world.mex     # MCUXpresso Config Tools project file
  prj.conf            # Board specific Kconfig configuration
  reconfig.cmake      # Board specific cmake configuration overrides
```

Device Support Structure Device support is organized hierarchically by MCU family:

```

devices/
  MCX/          # MCU portfolio
    MCXW/       # MCU family
      MCXW235/  # Specific device
        MCXW235.h # Device register definitions
      drivers/   # Device-specific drivers
      gcc/       # GNU toolchain files
      iar/       # IAR toolchain files
      mcuxpresso/ # MCUXpresso IDE files
      startup_MCXW235.c # Startup and vector table
      system_MCXW235.c # System initialization

```

Middleware Organization Middleware components are categorized by functionality and maintained in separate repositories. Based on the manifest files, common middleware categories include:

- **Connectivity:** USB, TCP/IP, industrial protocols
- **Security:** Cryptographic libraries, secure boot
- **Wireless:** Bluetooth, IEEE 802.15.4, Wi-Fi
- **Graphics:** Display drivers, UI frameworks
- **Audio:** Processing libraries, voice recognition
- **Machine Learning:** Inference engines, neural networks
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Documentation Structure SDK documentation is distributed across multiple locations:

- docs/ - Core SDK documentation and build infrastructure
- Component repositories - API documentation and integration guides
- Board directories - Hardware-specific setup instructions

For complete documentation, refer to the [online documentation](#).

Understanding Example Structure Each example has **two README files**:

1. General README: examples/demo_apps/hello_world/readme.md

- What the example does
- General functionality description
- Common usage information

2. Board-Specific README: examples/_boards/{board_name}/demo_apps/hello_world/example_board_readme.md

- Board-specific setup instructions
- Hardware connections required
- Board-specific behavior notes

Tip: Always check both readme files - start with the general one, then read the board-specific one for detailed setup.

1.3 Getting Started with MCUXpresso SDK GitHub

1.3.1 Getting Started with MCUXpresso SDK Repository

Welcome to the **GitHub Repository SDK Guide**. This documentation provides instructions for setting up and working with the MCUXpresso SDK distributed in a **multi-repository model**. The SDK is distributed across multiple GitHub repositories and managed using the **Zephyr West** tool, enabling modular development and streamlined workflows.

Overview

The GitHub Repository SDK approach offers:

- **Modular Structure:** Multiple repositories for flexibility and scalability.
- **Zephyr West Integration:** Simplified repository management and synchronization.
- **Cross-Platform Support:** Designed for MCUXpresso SDK development environments.

Benefits of the Multi-Repository Approach

- **Scalability:** Easily add or update components without impacting the entire SDK.
- **Collaboration:** Enables distributed development across teams and repositories.
- **Version Control:** Independent versioning for components ensures better stability.
- **Automation:** Zephyr West simplifies dependency handling and repository synchronization.

Setup and Configuration

Follow these steps to prepare your development environment:

GitHub Repository Setup This guide explains how to initialize your MCUXpresso SDK workspace from GitHub repositories using the west tool. The GitHub Repository SDK uses multiple repositories hosted on GitHub to provide modular, flexible development.

Prerequisites Verify the requirements:

System Requirements:

- Python 3.8 or later
- Git 2.25 or later
- CMake 3.20 or later
- Build tools for your target platform

Verification Commands:


```
python --version  # Should show 3.8+
git --version     # Should show 2.25+
cmake --version   # Should show 3.20+
west --version    # Should show west tool installation
```

Workspace Initialization The GitHub Repository SDK uses the Zephyr west tool to manage multiple repositories containing different SDK components.

Step 1: Initialize Workspace Create and initialize your SDK workspace from GitHub:

Get the latest SDK from main branch:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk
```

Get SDK at specific revision:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk --mr {revision}
```

Note: Replace {revision} with the desired release tag, such as v25.09.00

Step 2: Choose Your Repository Update Strategy Navigate to the SDK workspace:

```
cd mcuxpresso-sdk
```

The west tool manages multiple GitHub repositories containing different SDK components. You have two options for downloading:

Option A: Download All Repositories (Complete SDK) Download all SDK repositories for comprehensive development:

```
west update
```

This command downloads all the repositories defined in the manifest from GitHub. Initial download takes several minutes and requires ~7 GB of disk space.

Best for:

- Exploring the complete SDK
- Multi-board development projects
- Comprehensive middleware evaluation

Option B: Targeted Repository Download (Recommended) Download only repositories needed for your specific board or device to save time and disk space:

```
# For specific board development
west update_board --set board your_board_name

# For specific device family development
west update_board --set device your_device_name

# List available repositories before downloading
west update_board --set board your_board_name --list-repo
```

Best for:

- Single board development

- Faster setup and reduced disk usage
- Focused development workflows

Examples:

```
# Update only repositories for FRDM-MCXW23 board
west update_board --set board frdmmcxw23

# Update only repositories for MCXW23 device family
west update_board --set device mcxw23
```

Step 3: Verify Installation Confirm successful setup:

```
# Verify workspace structure
ls -la
# Should show: manifests/ and mcuxsdk/ directories

# Test build system
west list_project -p examples/demo_apps/hello_world
# Should display available build configurations
```

Advanced Repository Management The west extension command `update_board` provides advanced repository management capabilities for optimized workspace setup with GitHub repositories.

Board-Specific Setup Update only repositories required for a specific board:

```
# Update only repositories for specific board, e.g., frdmmcxw23
west update_board --set board frdmmcxw23

# List available repositories for the board before updating
west update_board --set board frdmmcxw23 --list-repo
```

Device-Specific Setup Update only repositories required for a specific device family:

```
# Update only repositories for specific device, e.g., MCXW235
west update_board --set device mcxw23

# List available repositories for the device family
west update_board --set device mcxw23 --list-repo
```

Custom Configuration For advanced users who want to create custom repository combinations:

```
# Use custom configuration file
west update_board --set custom path/to/custom-config.yml

# Generate custom configuration template
cp manifests/boards/custom.yml.template my-custom-config.yml
```

Benefits of Targeted Setup Reduced Download Size

- Download only components needed for your target board or device
- Significantly faster initial setup for focused development

- Typical reduction from 7 GB to 2GB

Optimized Workspace

- Cleaner workspace with relevant components only
- Reduced disk space usage
- Faster repository operations

Flexible Development

- Switch between different board configurations easily
- Maintain separate workspaces for different projects
- Include optional components as needed

Repository Information Before setting up your workspace, you can explore what repositories are available:

```
# Display repository information in console
west update_board --set board frdm-mcxw23 --list-repo

# Export repository information to YAML file for reference
west update_board --set board frdm-mcxw23 --list-repo -o board-repos.yml
```

This command lists all the available repositories with descriptions and outlines the included components in the workspace.

Package Generation (Optional) The `update_board` command can also generate ZIP packages for offline distribution:

```
# Generate board-specific SDK package
west update_board --set board frdm-mcxw23 -o frdm-mcxw23-sdk.zip
```

Note: Package generation is primarily intended for creating custom SDK distributions. For regular development, use the workspace update commands without the `-o` option.

Workspace Management

Updating Your Workspace Keep your SDK current with latest updates from GitHub:

For Complete SDK Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update all component repositories
cd ..
west update
```

For Targeted Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update board-specific repositories
cd ..
west update_board --set board your_board_name
```

Workspace Status Check workspace synchronization status:

```
# Show status of all repositories
west status
```

```
# Show detailed information about repositories
west list
```

Troubleshooting Network Issues:

- Use `west update --keep-descendants` for partial failures
- Configure Git credentials for private repositories
- Check firewall settings for Git protocol access

Permission Issues:

- Ensure write permissions in workspace directory
- Run commands without `sudo`/administrator privileges
- Verify Git SSH key configuration for authenticated access

Disk Space:

- Full SDK workspace requires approximately 7-8 GB
- Targeted workspace typically requires 1-2 GB
- Use board-specific setup to reduce workspace size

Repository Management Issues:

- Verify board/device names match available configurations
- Check that custom YAML files follow the correct template format
- Use `--list-repo` to verify available repositories before setup

Next Steps With your workspace initialized:

1. Review [Workspace Structure](#) to understand the layout
2. Build your first project with [First Build Guide](#)
3. Explore [Development Workflows MCUXpresso VSCode](#) or [Development Workflows Command Line](#) for the details on project setup and execution

For advanced repository management, see the [west tool documentation](#).

Explore SDK Structure and Content

Learn about the organization of the SDK and its components:

SDK Architecture Overview The MCUXpresso SDK uses a modular architecture where software components are distributed across multiple repositories hosted on GitHub and managed through the west tool. This approach provides flexibility, maintainability, and enables selective component inclusion.

Repository Organization Based on the manifest structure, the SDK consists of four main repository categories:

Manifest Repository The manifest repo (mcuxsdk-manifests) contains the west.yml manifest file that tracks all other repositories in the SDK.

Base Repositories Recorded in submanifests/base.yml and loaded in the root west.yml manifest file. These are the foundational repositories that build the SDK:

- **Devices:** MCU-specific support packages
- **Examples:** Demonstration applications and code samples
- **Boards:** Board support packages

Middleware Repositories Recorded in the submanifests/middleware subdirectory, categorized according to functionality:

- **Connectivity:** Networking stacks, USB, and communication protocols
- **Security:** Cryptographic libraries and secure boot components
- **Wireless:** Bluetooth, IEEE 802.15.4, and other wireless protocols
- **Graphics:** Display drivers and UI frameworks
- **Audio:** Audio processing and voice recognition libraries
- **Machine Learning:** AI inference engines and neural network libraries
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Internal Repositories Recorded in submanifests/internal.yml and grouped into the “bifrost” group. These are only visible to NXP internal developers and hosted on NXP internal git servers.

Repository Hosting Public repositories are hosted on GitHub under these organizations:

- [nxp-mcuxpresso](#)
- [NXP](#)
- [nxp-zephyr](#)

Internal repositories are hosted on NXP's private Git infrastructure.

Benefits of This Architecture **Selective Integration:** Projects include only required components, reducing memory footprint and build complexity.

Independent Versioning: Each component maintains its own release cycle and version control.

Community Collaboration: Public repositories accept community contributions through standard Git workflows.

Scalable Maintenance: Component owners can update their repositories without affecting the entire SDK.

Workspace Management The west tool manages repository synchronization, version tracking, and workspace updates. All repositories are checked out under the mcuxsdk/ directory with their designated paths defined in the manifest files.

Development Workflows

Get started with building and running projects:

Using MCUXpresso Config Tools MCUXpresso Config tools provide a user-friendly way to configure hardware initialization of your projects. This guide explains the basic workflow with the MCUXpresso SDK west build system and the Config Tools.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- MCUXpresso Config Tools standalone installed (version 25.09 or above)
- MCUXpresso SDK Project that can be successfully built

Board Files MCUXpresso Config Tools generate source files for the board. These files include `pin_mux.c/h` and `clock_config.c/h`. The files contain initialization code functions that reflect the hardware configuration in the Config Tools. Within the SDK codebase, these files are specific for the board and either shared by multiple example projects or specific for one example. Open or import the configuration from the SDK project in the Config Tools and customize the settings to match the custom board or specific project use case and regenerate the code. See *User Guide for MCUXpresso Config Tools (Desktop)* (document [GSMCUXCTUG](#)) for details.

Note: When opening the configuration for SDK example projects, the board files may be shared across multiple examples. To ensure a separate copy of the board configuration files exists, create a freestanding project with copied board files.

Visual Studio Code To open the configuration in Visual Studio Code, use the context menu for the project to access Config Tools. See [MCUXpresso Extension Documentation](#) for details. Otherwise, use the manual workflow described in detail in the following section.

Manual Workflow Use the following steps:

1. Before using Config Tools, run the west command to get the project information for Config Tools from the SDK project files, for example:

```
west cfg_project_info -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_
↪id=cm33_core0
```

This results in the creation of the project information json file that is searched by the config tools when the configuration is created. The parameters of the command should match the build parameters that will be used for the project.

2. Launch the MCUXpresso Config Tools and in the **Start development** wizard, select **Create a new configuration based on the existing IDE/Toolchain project**. Select the created “cfg_tools” subfolder as a project folder (for example: `...mcuxsdk/examples/demo_apps/hello_world/cfg_tools/`).

Updating the SDK West project **Note:** Updating project is supported with Config Tools V25.12 or newer only.

Changes in the Config tools generated source code modules may require adjustments to the toolchain project to ensure a successful build. These changes may mean, for example, adding the newly generated files, adding include paths, required drivers, or other SDK components.

This section describes how to manually resolve the changes needed in the project within the toolchain projects based on the SDK project managed by the West tool.

After the configuration in the Config Tools is finished, write updated files to the disk using the 'Update Code' command. The written files include a json file with the required changes for the toolchain project.

To resolve the changes in the project in the terminal, launch the west command that updates the project. For example:

```
west cfg_resolve -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_id=cm33_core0
```

This command updates the appropriate cmake and kconfig files to address the changes. After this, the application can be built.

Note: The `cfg_resolve` command supports additional arguments. Launch the `west cfg_resolve -h` command to get the list and description.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.42
- MCUXpresso for VS Code v25.09
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
FRDM-MCXL255	MCXL253VDF, MCXL253VLL, MCXL254VDF, MCXL254VLL, MCXL255VDF, MCXL255VLL

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

TF-M Trusted Firmware - M Library

PSA Test Suite Arm Platform Security Architecture Test Suite

mbedTLS mbedtls SSL/TLS library v3.x

NXP PSA CRYPTO DRIVER PSA crypto driver for crypto library integration via driver wrappers

MCU Boot Open source MCU Bootloader.

Multicore Multicore Software Development Kit

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known Issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

Tfm_psatest_ns Tfm_psatest_ns is not supported because AEAD test fails for SGL_PKC.

CM0+ core debug in Keil uVision IDE CM0+ core debug using CMSIS-DAP is not supported in Keil uVision IDE.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

ADVC

[2.0.2]

- Improvements
 - Check and restore SysTick in each APIs.
 - Updated advc library, remove debug section.

[2.0.1]

- Improvements
 - Check and restore APB clock status in each APIs.
 - Updated implementation of ADVC_IsEnabled() and ADVC_IsDisabled(). Check register value to indicate if ADVC is enabled.

[2.0.0]

- Initial version.
-

AOI**[2.0.2]**

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.8, 2.2.

[2.0.0]

- Initial version.
-

AON_LPADC**[2.0.1]**

- Improvements
 - Split the ADC_Enable from the ADC_Init function.
 - Rename autoChaIncEn to autoChanIncEn.
- Bug Fixes
 - Fix ADC_SetCmdConfig function cannot correctly configure command.

[2.0.0]

- Initial version.
-

CDOG**[2.1.3]**

- Re-design multiple instance IRQs and Clocks
- Add fix for RESTART command errata

[2.1.2]

- Support multiple IRQs
- Fix default CONTROL values

[2.1.1]

- Remove bit CONTROL[CONTROL_CTRL].

[2.1.0]

- Rename CWT to CDOG.

[2.0.2]

- Fix MISRA-2012 issues.

[2.0.1]

- Fix doxygen issues.

[2.0.0]

- Initial version.
-

CLOCK

[1.2.0]

- Improved CLOCK_InitRosc() function

[1.1.0]

- Added support of INPUTMUX
- Added alias for CRC
- Changed AON FRO to 10M/2M
- Fixed switching of AON FRO
- CLOCK_GetFroAonFreq() now returns correct value.

[1.0.0]

- Initial version.
-

MCX_CMC

[2.5.0]

- New features
 - Update MCX_CMC driver to be compatible with new platforms.

[2.4.0]

- New features
 - Update MCX_CMC driver to be compatible with new platforms.

[2.3.0]

- Improvements
 - Added macros to support some device have BSR_SCR bit field.

[2.2.3]

- Improvements
 - Clear SCB SCR[SLEEPDEEP] bitfield after wakeup.

[2.2.2]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.2.1]

- Improvements
 - Updated _cmc_system_reset_interrupt_enable, _cmc_system_reset_interrupt_flag and _cmc_system_reset_sources to support new added bit field.
- Bug Fixes
 - Fixed issue in CMC_PowerOffSRAMAllMode() and CMC_PowerOffSRAMLowPowerOnly() which overwrite reserved bit fields.

[2.2.0]

- Improvements
 - Added feature macro “FSL_FEATURE_MCX_CMC_HAS_NO_FLASHCR_WAKE” to support some devices where FLASHCR[WAKE] is reserved.

[2.1.0]

- Improvements
 - Added macros to support some devices(such as MCXA family) that only support one power domain.

[2.0.0]

- Initial version.
-

COMMON

[2.6.3]

- Bug Fixes
 - Fixed build issue of CMSIS PACK BSP example caused by CMSIS 6.1 issue.

[2.6.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule for implicit conversions in boolean contexts

[2.6.1]

- Improvements
 - Support Cortex M23.

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irqs that mount under `irqsteer` interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with `zephyr`.

[2.4.0]

- New Features
 - Added `EnableIRQWithPriority`, `IRQ_SetPriority`, and `IRQ_ClearPendingIRQ` for ARM.
 - Added `MSDK_EnableCpuCycleCounter`, `MSDK_GetCpuCycleCount` for ARM.

[2.3.3]

- New Features
 - Added NETC into status group.

[2.3.2]

- Improvements
 - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add `SUPPRESS_FALL_THROUGH_WARNING()` macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of `LPC8XX Enable/DisableDeepSleepIRQ()` function.
 - Added new feature macro switch “`FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION`” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the `align(x)` to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC

[2.0.5]

- Bug fix:
 - Fix CERT-C issue with boolean-to-unsigned integer conversion.

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

CTIMER

[2.3.4]

- Bug Fixes
 - Fixed ERRATA ERR053024 CTIMER will enter interrupt twice when function clock much slower than bus clock.

[2.3.3]

- Bug Fixes
 - Fix CERT INT30-C INT31-C issue.
 - Make API CTIMER_SetupPwm and CTIMER_UpdatePwmDutycycle return fail if pulse width register overflow.

[2.3.2]

- Bug Fixes
 - Clear unexpected DMA request generated by RESET_PeripheralReset in API CTIMER_Init to avoid trigger DMA by mistake.

[2.3.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.7 and 12.2.

[2.3.0]

- Improvements
 - Added the CTIMER_SetPrescale(), CTIMER_GetCaptureValue(), CTIMER_EnableResetMatchChannel(), CTIMER_EnableStopMatchChannel(), CTIMER_EnableRisingEdgeCapture(), CTIMER_EnableFallingEdgeCapture(), CTIMER_SetShadowValue(), APIs Interface to reduce code complexity.

[2.2.2]

- Bug Fixes
 - Fixed SetupPwm() API only can use match 3 as period channel issue.

[2.2.1]

- Bug Fixes
 - Fixed use specified channel to setting the PWM period in SetupPwmPeriod() API.
 - Fixed Coverity Out-of-bounds issue.

[2.2.0]

- Improvements
 - Updated three API Interface to support Users to flexibly configure the PWM period and PWM output.
- Bug Fixes
 - MISRA C-2012 issue fixed: rule 8.4.

[2.1.0]

- Improvements
 - Added the CTIMER_GetOutputMatchStatus() API Interface.
 - Added feature macro for FSL_FEATURE_CTIMER_HAS_NO_CCR_CAP2 and FSL_FEATURE_CTIMER_HAS_NO_IR_CR2INT.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, 10.6, 10.7 and 11.9.

[2.0.2]

- New Features
 - Added new API “CTIMER_GetTimerCountValue” to get the current timer count value.
 - Added a control macro to enable/disable the RESET and CLOCK code in current driver.
 - Added a new feature macro to update the API of CTimer driver for lpc8n04.

[2.0.1]

- Improvements
 - API Interface Change
 - * Changed API interface by adding CTIMER_SetupPwmPeriod API and CTIMER_UpdatePwmPulsePeriod API, which both can set up the right PWM with high resolution.

[2.0.0]

- Initial version.
-

EDMA

[2.10.9]

- Bug Fixes
 - Add new api EDMA_TcdInit to avoid destroying code logic by reordering blocks in the toolchain.

[2.10.8]

- Bug Fixes
 - Fixed coverity issues with CERT INT30-C, CERT INT31-C compliance.
 - Fixed incorrect enabling of preemption capability issue.

[2.10.7]

- Improvements
 - Add condition to fix build warnings(array subscript 4 is above array bounds of 'edma_handle_t *[4][64]')
- Bug Fixes
 - Fixed the EDMA header index retrieval error caused by done bit calculation mistake issue.

[2.10.6]

- Improvements
 - Add macro FSL_FEATURE_EDMA_HAS_EDMA_TCD_CLOCK_ENABLE to enable tcd clocks in EDMA_Init function.

[2.10.5]

- Bug Fixes
 - Fixed memory convert would convert NULL as zero address issue.

[2.10.4]

- Improvements
 - Add new MP register macros to ensure compatibility with different devices.
 - Add macro `DMA_CHANNEL_ARRAY_STEPn` to adapt to complex addressing of edma tcd registers.

[2.10.3]

- Bug Fixes
 - Clear interrupt status flags in `EDMA_CreateHandle` to avoid triggering interrupt by mistake.

[2.10.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.

[2.10.1]

- Bug Fixes
 - Fixed `EDMA_GetRemainingMajorLoopCount` may return wrong value issue.
 - Fixed violations of the MISRA C-2012 rules 13.5, 10.4.

[2.10.0]

- Improvements
 - Modify the structures `edma_core_mp_t`, `edma_core_channel_t`, `edma_core_tcd_t` to adapt to edma5.
 - Add TCD register macro to facilitate confirmation of tcd type.
 - Modify the mask macro to a fixed value.
 - Add `EDMA_TCD_TYPE` macro to determine edma tcd type.
 - Add extension API to the following API to determine edma tcd type.
 - * `EDMA_ConfigChannelSoftwareTCD` -> `EDMA_ConfigChannelSoftwareTCDExt`
 - * `EDMA_TcdReset` -> `EDMA_TcdResetExt`
 - * `EDMA_TcdSetTransferConfig` -> `EDMA_TcdSetTransferConfigExt`
 - * `EDMA_TcdSetMinorOffsetConfig` -> `EDMA_TcdSetMinorOffsetConfigExt`
 - * `EDMA_TcdSetChannelLink` -> `EDMA_TcdSetChannelLinkExt`
 - * `EDMA_TcdSetBandWidth` -> `EDMA_TcdSetBandWidthExt`
 - * `EDMA_TcdSetModulo` -> `EDMA_TcdSetModuloExt`
 - * `EDMA_TcdEnableAutoStopRequest` -> `EDMA_TcdEnableAutoStopRequestExt`
 - * `EDMA_TcdEnableInterrupts` -> `EDMA_TcdEnableInterruptsExt`
 - * `EDMA_TcdDisableInterrupts` -> `EDMA_TcdDisableInterruptsExt`
 - * `EDMA_TcdSetMajorOffsetConfig` -> `EDMA_TcdSetMajorOffsetConfigExt`

[2.9.2]

- Improvements
 - Remove tcd alignment check in API that is low level and does not necessarily use scatter/gather mode.

[2.9.1]

- Bug Fixes
 - Deinit channel request source before set channel mux.

[2.9.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed the variable type definition error issue.
 - Fixed doxygen warning.
 - Fixed violations of MISRA C-2012 rule 18.1.

[2.8.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3

[2.8.0]

- Improvements
 - Added feature FSL_FEATURE_EDMA_HAS_NO_CH_SBR_SEC to separate DMA without SEC bitfield.

[2.7.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 11.8, 14.3,.

[2.7.0]

- Improvements
 - Use more accurate DMA instance based feature macros.
- New Features
 - Add new APIs EDMA_PrepareTransferTCD and EDMA_SubmitTransferTCD, which support EDMA transfer using TCD.

[2.6.0]

- Improvements
 - Modify the type of parameter channelRequestSource from dma_request_source_t to int32_t in the EDMA_SetChannelMux.

[2.5.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 20.7, 12.2, 20.9, 5.3, 10.8, 8.4, 9.3.

[2.5.2]

- Improvements
 - Applied ERRATA 51327.

[2.5.1]

- Bug Fixes
 - Fixed the EDMA_ResetChannel function cannot reset channel DONE/ERROR status.

[2.5.0]

- Improvements
 - Added feature FSL_FEATURE_EDMA_HAS_NO_SBR_ATTR_BIT to separate DMA without ATTR bitfield.
 - Added api EDMA_GetChannelSystemBusInformation to gets the channel identification and attribute information on the system bus interface.
- Bug Fixes
 - Fixed the ESG bit not set in scatter gather mode issue.
 - Fixed the DREQ bit configuration missed in single transfer issue.
 - Cleared the interrupt status before invoke callback to avoid miss interrupt issue.
 - Removed disableRequestAfterMajorLoopComplete from edma_transfer_config_t structure as driver will handle it.
 - Fixed the channel mux configuration not compatible issue.
 - Fixed the out of bound access in function EDMA_DriverIRQHandler.

[2.4.4]

- Bug Fixes
 - Fixed comments by replacing STCD with TCD
 - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.

[2.4.3]

- Improvements
 - Added FSL_FEATURE_MEMORY_HAS_ADDRESS_OFFSET to convert the address between system mapped address and dma quick access address.
- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt for the non scatter gather case.

[2.4.2]

- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt by correct the initial value of the header.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.4.1]

- Bug Fixes
 - Added clear CITER and BITER registers in EDMA_AbortTransfer to make sure the TCD registers in a correct state for next calling of EDMA_SubmitTransfer.
 - Removed the clear DONE status for ESG not enabled case to avoid DONE bit cleared unexpectedly.

[2.4.0]

- Improvements
 - Added api EDMA_EnableContinuousChannelLinkMode to support continuous link mode.
 - Added apis EDMA_SetMajorOffsetConfig/EDMA_TcdSetMajorOffsetConfig to support major loop address offset feature.
 - Added api EDMA_EnableChannelMinorLoopMapping for minor loop offset feature.
 - Removed the redundant IRQ Handler in edma driver.

[2.3.2]

- Improvements
 - Fixed HIS ccm issue in function EDMA_PrepareTransferConfig.
 - Fixed violations of MISRA C-2012 rule 11.6, 10.7, 10.3, 18.1.
- Bug Fixes
 - Added ACTIVE & BITER & CITER bitfields to determine the channel status to fixed the issue of the transfer request cannot submit by function EDMA_SubmitTransfer when channel is idle.

[2.3.1]

- Improvements
 - Added source/destination address alignment check.
 - Added driver IRQ handler support for multi DMA instance in one SOC.

[2.3.0]

- Improvements
 - Added new api EDMA_PrepareTransferConfig to allow different configurations of width and offset.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.1.

- Fixed the Coverity issue regarding out-of-bounds write.

[2.2.0]

- Improvements
 - Added peripheral-to-peripheral support in EDMA driver.

[2.1.9]

- Bug Fixes
 - Fixed MISRA issue: Rule 10.7 and 10.8 in function `EDMA_DisableChannelInterrupts` and `EDMA_SubmitTransfer`.
 - Fixed MISRA issue: Rule 10.7 in function `EDMA_EnableAsyncRequest`.

[2.1.8]

- Bug Fixes
 - Fixed incorrect channel preemption base address used in `EDMA_SetChannelPreemptionConfig` API which causes incorrect configuration of the channel preemption register.

[2.1.7]

- Bug Fixes
 - Fixed incorrect transfer size setting.
 - * Added 8 bytes transfer configuration and feature for RT series;
 - * Added feature to support 16 bytes transfer for Kinetis.
 - Fixed the issue that `EDMA_HandleIRQ` would go to incorrect branch when TCD was not used and callback function not registered.

[2.1.6]

- Bug Fixes
 - Fixed KW3X MISRA Issue.
 - * Rule 14.4, 10.8, 10.4, 10.7, 10.1, 10.3, 13.5, and 13.2.
- Improvements
 - Cleared the IRQ handler unavailable for specific platform with macro `FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SHARED_OFFSET`.

[2.1.5]

- Improvements
 - Improved EDMA IRQ handler to support half interrupt feature.

[2.1.4]

- Bug Fixes
 - Cleared enabled request, status during EDMA_Init for the case that EDMA is halted before reinitialization.

[2.1.3]

- Bug Fixes
 - Added clear DONE bit in IRQ handler to avoid overwrite TCD issue.
 - Optimized above solution for the case that transfer request occurs in callback.

[2.1.2]

- Improvements
 - Added interface to get next TCD address.
 - Added interface to get the unused TCD number.

[2.1.1]

- Improvements
 - Added documentation for eDMA data flow when scatter/gather is implemented for the EDMA_HandleIRQ API.
 - Updated and corrected some related comments in the EDMA_HandleIRQ API and edma_handle_t struct.

[2.1.0]

- Improvements
 - Changed the EDMA_GetRemainingBytes API into EDMA_GetRemainingMajorLoopCount due to eDMA IP limitation (see API comments/note for further details).

[2.0.5]

- Improvements
 - Added pubweak DriverIRQHandler for K32H844P (16 channels shared).

[2.0.4]

- Improvements
 - Added support for SoCs with multiple eDMA instances.
 - Added pubweak DriverIRQHandler for KL28T DMA1 and MCIMX7U5_M4.

[2.0.3]

- Bug Fixes
 - Fixed the incorrect pubweak IRQHandler name issue, which caused re-definition build errors when client set his/her own IRQHandler, by changing the 32-channel IRQHandler name to DriverIRQHandler.

[2.0.2]

- Bug Fixes
 - Fixed incorrect minorLoopBytes type definition in `_edma_transfer_config` struct, and defined `minorLoopBytes` as `uint32_t` instead of `uint16_t`.

[2.0.1]

- Bug Fixes
 - Fixed the eDMA callback issue (which did not check valid status) in `EDMA_HandleIRQ` API.

[2.0.0]

- Initial version.
-

ERM**[2.0.4]**

- Improvements
 - Change `erm_memory_channel_t` to `uint32_t`.
 - Support channel number 16-23.

[2.0.3]

- Bug Fixes
 - Fixed `s_ermResets` variable declaration issue.

[2.0.2]

- Improvements
 - Reset the peripheral during initialization, otherwise some platforms may not work.
- Bug Fixes
 - Only keep bit 0-3 of `ERM_GetInterruptStatus()` as it may get other channel results in higher bits.

[2.0.1]

- Improvements
 - Update driver to support fewer channel.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.0]

- Initial version.
-

FREQME

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Fixed MISRA issues.

[2.1.0]

- Updated register name.

[2.0.0]

- Initial version.
-

GLIKEY

[2.0.1]

- Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.

[2.0.0]

- Initial version.
-

GPIO

[2.8.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 Rule 10.1, 5.7.

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMAResourceFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQs) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of `_PinXXX()` and `_PortXXX`.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “`_PinConfigure`” to “`GPIO_PinInit`”.
-

INPUTMUX

[2.0.10]

- Bug Fixes
 - Fixed CERT-C violations.

[2.0.9]

- Improvements
 - Use `INPUTMUX_CLOCKS` to initialize the inputmux module clock to adapt to multiple inputmux instances.
 - Modify the API base type from `INPUTMUX_Type` to `void`.

[2.0.8]

- Improvements
 - Updated a feature macro usage for function `INPUTMUX_EnableSignal`.

[2.0.7]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.6]

- Bug Fixes
 - Fixed the documentation wrong in API INPUTMUX_AttachSignal.

[2.0.5]

- Bug Fixes
 - Fixed build error because some devices has no sct.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rule 10.4, 12.2 in INPUTMUX_EnableSignal() function.

[2.0.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 10.7, 12.2.

[2.0.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 12.2.

[2.0.1]

- Support channel mux setting in INPUTMUX_EnableSignal().

[2.0.0]

- Initial version.
-

KPP

[2.1.1]

- Bug Fixes
 - Fixed coverity MSG issues with CERT INT30-C, CERT ARR30-C compliance.

[2.1.0]

- Improvements
 - Optimize rowData debounce method to adapt to multi-key detection
 - Modify the KPP_keyPressScanning type to status_t.

[2.0.1]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3 10.4 10.6 14.4 17.7

[2.0.0]

- Initial version.
-

LPACMP**[2.0.1]**

- Bug Fixes
 - Fixed CERT-C INT31-C issue.

[2.0.0]

- Initial version.
-

LPADC**[2.9.5]**

- Improvements
 - Fix doxygen issue, grouping command should be balanced.

[2.9.4]

- Improvements
 - Update LPADC_GetDefaultConfig, change default conversionAverageMode value to: kLPADC_ConversionAverage128 for 3 bit width. kLPADC_ConversionAverage1024 for 4 bit width.

[2.9.3]

- Improvements
 - Add timeout for while loop code.

[2.9.2]

- Improvements
 - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
 - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
 - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
 - Split LPADC_FinishAutoCalibration function into two functions.
 - Improved LPADC driver.

[2.8.4]

- Bug Fixes
 - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
 - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
 - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed function LPADC_GetConvResult() issue.
 - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
 - Corrected descriptions of several functions.
 - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
 - Revert changes of feature macros for lpadc.
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.8.
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
 - Added supports of CFG2 register.
 - Removed some useless macros.

[2.6.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules.
 - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
 - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
 - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
 - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
 - Added API to set offset calibration mode.
 - Added configuration of alternate channel.
 - Updated auto calibration API and added calibration value conversion API.
- New feature
 - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
 - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
 - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
 - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
 - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
 - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
 - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
 - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
 - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
 - Clean doxygen warnings.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
 - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
 - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
 - Updated the gain calibration formula.
 - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
 - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
 - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
 - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
 - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
 - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.
-

LPCMP**[2.3.2]**

- Improvements
 - Fixed LPCMP CERT-C issues.

[2.3.1]

- Improvements
 - Update LPCMP driver to be compatible with platforms that do not support LPCMP nano power mode selection.

[2.3.0]

- New Feature
 - Added some new features for platforms which support
 - * Plus input source selection.
 - * Minus input source selection.
 - * CMP to DAC link.
- Improvements
 - Removed some new features for platforms which doesn't support
 - * Functional clock source selection.
 - * DAC high power mode selection.
 - * Round Robin clock source selection.
 - * Round Robin trigger source selection.
 - * Round Robin channel sample numbers setting.
 - * Round Robin channel sample time threshold setting.
 - * Round Robin internal trigger configuration.

[2.2.0]

- Improvements
 - Change `FSL_FEATURE_LPCMP_HAS_NO_CCR0_CMP_STOP_EN` to `FSL_FEATURE_LPCMP_HAS_CCR0_CMP_STOP_EN`.

[2.1.3]

- New Feature
 - Added new macro to handle the case where some instances do not have the CCR0 CMP_STOP_EN bit field.

[2.1.2]

- New Feature
 - Add macros to be compatible with some platforms that do not have the CCR0 CMP_STOP_EN bitfield.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- New Features:
 - Supported round robin mode and window mode feature.

[2.0.3]

- Bug Fixes:
 - Fixed the violation of MISRA-2012 rule 17.7.

[2.0.2]

- Bug Fixes:
 - The current API LPCMP_ClearStatusFlags has to check w1c bits.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

LPI2C**[2.6.3]**

- Bug Fixes
 - Fixed static analysis identified issues.

[2.6.2]

- Improvements
 - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
 - Fixed coverity issues.

[2.6.0]

- New Feature
 - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
 - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
 - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
 - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
 - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
 - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
 - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
 - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
 - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
 - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
 - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
 - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
 - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
 - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
 - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
 - Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
 - Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
 - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
 - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
 - Supported reading more than 256 bytes of data in one transfer as master.
 - Added API LPI2C_GetInstance.
- Bug Fixes
 - Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.

- Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
- Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be $2^{\text{prescaler}}$ rather than prescaler.
- Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
- Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes
 - Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
 - MISRA C-2012 issue fixed.
 - * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
 - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
 - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rule 10.3, 14.4, 15.5.
 - Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
 - Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.
 - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
 - Fixed MISRA issues.

- * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
- Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
 - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
 - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.
 - Removed STOP signal wait when NAK detected.
 - Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
 - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
 - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
 - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
 - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
 - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
 - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
 - Extended the Driver IRQ handler to support LPI2C4.
 - Changed to use `ARRAY_SIZE(kLpi2cBases)` instead of `FEATURE_COUNT` to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
 - Fixed the `LPI2C_MasterTransferEDMA` receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
 - Fixed the issue by enabling `IntMajor` interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in `LPI2C_MasterEDMACallback` API.

[2.1.3]

- Improvements
 - Added `LPI2C_WATI_TIMEOUT` macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
 - Added `LPI2C_MasterTransferBlocking` API.

[2.1.2]

- Bug Fixes
 - In `LPI2C_SlaveTransferHandleIRQ`, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes
 - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccessful sending of the start flag, so the transfer could not start.
 - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
 - API name changed:
 - * `LPI2C_MasterTransferCreateHandle` -> `LPI2C_MasterCreateHandle`.

- * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
- * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
- * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
- * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
- * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
- * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
- * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.
-

LPI2C_EDMA

[2.4.6]

- Bug Fixes
 - Fixed static analysis identified issues.

[2.4.5]

- Improvements
 - Added condition to IRQ handler to check whether the interrupt is enabled - kLPI2C_MasterTxReadyFlag.

[2.4.4]

- Improvements
 - Added support for 2KB data transfer

[2.4.3]

- Improvements
 - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1
-

LPSPi

[2.7.4]

- Bug Fixes
 - Clear WIDTH bits from the TCR register before writing a new value in LPSPi_MasterTransferBlocking().

[2.7.3]

- Improvements
 - Added timeout for while loop in LPSPi_MasterTransferWriteAllTxData().
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
 - Fixed coverity issues.

[2.7.1]

- Bug Fixes
 - Workaround for errata ERR050607
 - Workaround for errata ERR010655

[2.7.0]

- New Feature
 - Added common IRQ handler entry LPSPi_DriverIRQHandler.

[2.6.10]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
 - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API `_lpspi_master_handle` and `_lpspi_slave_handle`.

[2.6.6]

- Bug Fixes
 - Added LPSPi register init in `LPSPi_MasterInit` incase of LPSPi register exist.

[2.6.5]

- Improvements
 - Introduced `FSL_FEATURE_LPSPi_HAS_NO_PCSCFG` and `FSL_FEATURE_LPSPi_HAS_NO_MULTI_WIDTH` for conditional compile.
 - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
 - Added `LPSPi6_DriverIRQHandler` for LPSPi6 instance.

[2.6.3]

- Hot Fixes
 - Added macro switch in function `LPSPi_Enable` about ERRATA051472.

[2.6.2]

- Bug Fixes
 - Disabled `lpspi` before `LPSPi_MasterSetBaudRate` incase of LPSPi opened.

[2.6.1]

- Bug Fixes
 - Fixed return value while calling `LPSPi_WaitTxFifoEmpty` in function `LPSPi_MasterTransferNonBlocking`.

[2.6.0]

- Feature
 - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
 - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
 - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
 - Workaround for errata ERR050456 by resetting the entire module using LPSPIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
 - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
 - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
 - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
 - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
 - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
 - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
 - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
 - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
 - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
 - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
 - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
 - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
 - Fixed bug in LPSPI_SetPCSContinuous when disabling PCS continuous mode.

[2.2.0]

- Bug Fixes
 - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continuous mode is not working.

[2.1.0]

- Improvements
 - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
 - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinuous to support changing PCS selection and PCS continuous mode.
- Bug Fixes

- Fixed bug in non-blocking and EDMA transfer APIs that `kStatus_InvalidArgument` is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to `kLPSPI_Busy` by mistake causing following transfer can not start.
- Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that LPSPI can not transfer large data using EDMA.
 - Fixed MISRA 17.7 issues.
 - Fixed variable overflow issue introduced by MISRA fix.
 - Fixed issue that `rxFifoMaxBytes` should be calculated according to transfer width rather than FIFO width.
 - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
 - Fixed in `LPSPI_MasterTransferBlocking` that master rxfifo may overflow in stall condition.
 - Eliminated IAR Pa082 warnings.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
 - Removed `LPSPI_Reset` from `LPSPI_MasterInit` and `LPSPI_SlaveInit`, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
 - Added dummy data set up API to allow users to configure the dummy data to be transferred.
 - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
 - Fixed the bug that the clock source should be divided by the `PRESCALE` setting in `LPSPI_MasterSetDelayTimes` function.

- Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
 - Added `#ifndef/#endif` to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.
-

LPSPI_EDMA

[2.4.9]

- Improvements
 - Removed unused code from LPSPI_SeparateEdmaReadData().

[2.4.8]

- Improvements
 - Added timeout for while loop in EDMA_LpspiMasterCallback() and EDMA_LpspiSlaveCallback().

[2.4.7]

- Bug Fixes
 - Add macro LPSPI_ALIGN_TCD_SIZE_MASK to align an address to edma_tcd_t size.

[2.4.6]

- Improvements
 - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.4.4]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
 - Supported 32K bytes transmit in DMA, improve the max datasize in LPSPI_MasterTransferEDMALite.

[2.4.2]

- Improvements
 - Added callback status in EDMA_LpspiMasterCallback and EDMA_LpspiSlaveCallback to check transferDone.

[2.4.1]

- Improvements
 - Add the TXMSK wait after TCR setting.

[2.4.0]

- Improvements
 - Separated LPSPI_MasterTransferEDMA functions to LP-SPI_MasterTransferPrepareEDMA and LPSPI_MasterTransferEDMALite to optimize the process of transfer.
-

LPTMR

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART**[2.10.0]**

- New Feature
 - Added support to configure RTS watermark.

[2.9.4]

- Improvements
 - Merged duplicate code.

[2.9.3]

- Improvements
 - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
 - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.

- Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
- Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
- Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
- Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
- Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
 - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
 - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for `kLPUART_TransmissionCompleteFlag` in `LPUART_WriteBlocking`, `LPUART_TransferHandleIRQ`, `LPUART_TransferSendDMACallback` and `LPUART_SendEDMACallback` to ensure all the data would be sent out to bus.
 - Rounded up the calculated `sbr` value in `LPUART_SetBaudRate` and `LPUART_Init` to achieve more accurate baudrate setting. Changed `osr` from `uint32_t` to `uint8_t` since `osr`'s biggest value is 31.
 - Modified `LPUART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using `LPUART_EnableTxDMA` and `LPUART_EnableRxDMA`.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `LPUART_TransferNonBlocking` function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.

- Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may has a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

MU

[2.8.1]

- Bug Fixes
 - Avoid incorrect MU_BUSY_POLL_COUNT macro use.

[2.8.0]

- New Features
 - Added MU1_BUSY_POLL_COUNT parameter to prevent infinite polling loops in MU operations.
 - Added timeout mechanism to all polling loops in MU driver code.
- Improvements
 - Updated function signatures to return status codes for better error handling:
 - * Changed MU_ResetBothSides to return status_t instead of void
 - * Updated MU_SendMsg to return status_t for timeout indication
 - * Added new function MU_ReceiveMsgTimeout() to include timeout mechanism.
 - Enhanced documentation across all functions to clarify timeout behavior and return values.

[2.7.0]

- New Features
 - Added API MU_GetRxStatusFlags.

[2.6.0]

- New Features
 - Added API MU_GetInterruptsPending.

[2.5.1]

- Bug Fixes
 - Fixed the bug that MU_TriggerGeneralPurposeInterrupts and MU_TriggerInterrupts may trigger previous triggered general purpose interrupts again by mistake.

[2.5.0]

- New Features
 - Supported more than 4 general purpose interrupts.
 - Added separate APIs for general purpose interrupts.

[2.4.0]

- Improvements
 - Supported the case that some features only available with specific instances. These features include Hardware Reset, Boot Peer Core, Hold Reset. When using the features with instances which don't support them, driver will report error.

[2.3.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.3.2]

- Improvements
 - Supported platforms which don't have CCR0[RSTH], CCR0[CLKE], CCR0[HR], CCR0[HRM].

[2.3.1]

- Bug Fixes
 - Fixed build error for platforms which have CCR0[RSTH], but no CCR0[NMI].

[2.3.0]

- New features
 - Added support for i.MX RT7xx.

[2.2.1]

- Bug Fixes
 - Fixed issue that MU_GetInstance() is defined but never used.

[2.2.0]

- New features
 - Added support for i.MX RT118x.
- Bug Fixes
 - Fixed general purpose interrupt bug.
- Other Changes
 - Change _mu_interrupt_trigger item value.

[2.1.2]

- Bug Fixes
 - Fixed bug that general purpose interrupt can't be configured.

[2.1.1]

- Bug Fixes
 - Fixed MISRA C-2012 issues.

[2.1.0]

- Improvements
 - Added new enum `mu_msg_reg_index_t`.

[2.0.0]

- Initial version.
-

OSTIMER**[2.2.6]**

- Improvements
 - Drop the check of `MATCH_WR_RDY` and ostimer counter value in `OSTIMER_SetMatchRawValue`. In most applications, they are useless and may bring at least 7 OSTimer ticks latency, which is unacceptable when OSTimer is working under slow peripheral clock.
 - Optimize software gray code to binary conversion: replaced loop-based implementation with branchless bitwise operations.

[2.2.5]

- Improvements
 - Support binary encoded ostimer.

[2.2.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.2.3]

- Improvements
 - Disable and clear pending interrupts before disabling the OSTIMER clock to avoid interrupts being executed when the clock is already disabled.

[2.2.2]

- Improvements
 - Support devices with different OSTIMER instance name.

[2.2.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.0]

- Improvements
 - Move the PMC operation out of the OSTIMER driver to board specific files.
 - Added low level APIs to control OSTIMER MATCH and interrupt.

[2.1.2]

- Bug Fixes
 - Fixed MISRA-2012 rule 10.8.

[2.1.1]

- Bug Fixes
 - removes the suffix 'n' for some register names and bit fields' names
- Improvements
 - Added HW CODE GRAY feature supported by CODE GRAY in SYSCTRL register group.

[2.1.0]

- Bug Fixes
 - Added a workaround to fix the issue that no interrupt was reported when user set smaller period.
 - Fixed violation of MISRA C-2012 rule 10.3 and 11.9.
- Improvements
 - Added return value for the two APIs to set match value.
 - * OSTIMER_SetMatchRawValue
 - * OSTIMER_SetMatchValue

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3, 14.4, 17.7.

[2.0.2]

- Improvements
 - Added support for OSTIMER0

[2.0.1]

- Improvements
 - Removed the software reset function out of the initialization API.
 - Enabled interrupt directly instead of enabling deep sleep interrupt. Users need to enable the deep sleep interrupt in application code if needed.

[2.0.0]

- Initial version.
-

PORT**[2.5.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.
 - Fixed the violations of MISRA C-2012 rules: 10.1.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4–11.3–11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

Power

[2.2.0]

- Improvements
 - Updated the Power_CreateHandle() function to include a new second parameter, power_drv_config_t, allowing configuration without synchronizing the secondary core within the function.
 - Added a new function, Power_SyncDualCoreBlocking(), to enable synchronization between dual cores.
 - Improved Doxygen comments for better documentation.
 - Introduced a timeout mechanism for the while loop to enhance reliability.
 - Added new member disableFRO2M in power_dpd2_config_t.
- Bug Fixes
 - Fixed incorrect bitwise AND operation in Power_CreateHandle() and Power_SyncDualCoreBlocking() functions.
 - Fixed the same bitwise AND issue in Power_RequestCM33StartLpSeq() function.

[2.1.1]

- Improvements
 - Added “disableFRO10M” in power_dpd1_config_t to support disable FRO10M in power driver.
 - Use the __ASM macro instead of asm to ensure compatibility across different toolchains.

- Fixed violation of CERT INT31-C of cast “~config->aonRamArraysToRetain” for int to uint8_t.

[2.1.0]

- Bug Fixes
 - Removed certain items from power_wakeup_source_t that were related to WUU.
- Improvements
 - Added configurable wakeup sources for various low power modes.
 - Adjusted the sequence for entering specific low power modes.
 - Enhanced MU message details, including explanations for NACK responses.
 - Introduced cm0pWFI in power_handle_t to indicate whether CM0P executed WFI.
 - Added member into power_pd2_config_t, power_dpd1_config_t, power_dpd2_config_t to control output voltage of VDD_CORE_AON.
- New Features
 - Introduced APIs to retrieve the previous low power mode.
 - Added APIs to inspect details of MU messages.
 - Refactored Power_MuMessageCallback() into three modular functions:

```
Power_MuSyncCallback()  
Power_InterpretRequest()  
Power_InterpretResponse()
```

These functions are now exposed for user access.

- Added new function Power_PushContext() and Power_LowPowerBoot() to support context saving.

[2.0.0]

- Initial version.
-

QTMR

[2.3.0]

- Improvements
 - Support for platforms which QTMR registers are 32-bit.

[2.2.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.1, 10.8.

[2.2.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.1, 10.8.

[2.2.0]

- Improvements
 - Added API QTMR_SetPwmOutputToIdle to set the generated pwm signal to the configured idle value.
 - Added API QTMR_GetPwmOutputStatus to return the output status of the generated pwm signal.
 - Added API QTMR_GetPwmChannelStatus to return the channel dutycycle value.
 - Added API QTMR_SetPwmClockMode to set clock mode change peripheral clock frequency.
- Bug Fixes
 - Fixed the issue that pwm duty cycle could not be 0 and 100.

[2.1.0]

- Bug Fixes
 - Fixed the issue QTMR_SetTimerPeriod needs to decrement down count by 1, and added new APIs to configure the LOAD register, COMP register.

[2.0.2]

- Bug Fixes
 - Fixed the issue introduced by previous code correction for improving the output signal accuracy.

[2.0.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.1, 10.3, 11.5, 11.9.
- Improvements
 - Improved the output signal accuracy.

[2.0.0]

- Initial version.
-

RESET

[2.5.0]

- Added SLCD support
- Added INPUMUX resets.
- PMIC renamed to PMU

[2.4.0]

- Initial version.
-

RTC

[2.0.0]

- Initial version.
-

SLCD

[2.0.0]

- Initial version.
-

SMM

[2.1.1]

- Bug Fixes
 - Fixed violation of CERT INT31-C.
 - Added a workaround for an issue where the SMM->STAT register was incorrectly mapped
- Improvements
 - Refined comments throughout the `fsl_smm.h` header file to improve clarity and consistency.

[2.1.0]

- New Features
 - Added APIs to control deep sleep counter.
 - Added APIs to enable/disable interrupts.
 - Added APIs to get/clear interrupt flags.

[2.0.1]

- Bug Fixes
 - Added missed “ of FSL_COMPONENT_ID.
 - Fixed issues of `SMM_EnableWakeupSourceToMainCpu()` and `SMM_EnableWakeupSourceToAonCpu()`.

[2.0.0]

- Initial version.
-

TRDC

[2.2.2]

- Improvements
 - Update APIs to check whether the memory access configuration can be updated.
 - Update APIs to mask the MRC address since only high 18 bits are valid.

[2.2.1]

- Bug Fixes:
 - Fix MISRA violations.

[2.2.0]

- New Features:
 - Supported SoCs that do not have all TRDC modules.

[2.1.0]

- Bug Fixes:
 - Fix MISRA violations.
 - Fixed wrong operation of domain mask in `TRDC_MbcNseClearAll` and `TRDC_MrcDomainNseClear`.

[2.0.0]

- Initial version.
-

TRNG

[2.0.19]

- New features:
 - Added support for MCXA and MCXL.

[2.0.18]

- Bug fix:
 - TRNG health checks now done in software on RT5xx and RT6xx.

[2.0.17]

- New features:
 - Add support for RT700.

[2.0.16]

- Improvements:
 - Added support for Dual oscillator mode.

[2.0.15]

- Other changes:
 - Changed TRNG_USER_CONFIG_DEFAULT_XXX values according to latest recommended by design team.

[2.0.14]

- New features:
 - Add support for RW610 and RW612.

[2.0.13]

- Bug fix:
 - After deepsleep it might return error, added clearing bits in TRNG_GetRandomData() and generating new entropy.
 - Modified reloading entropy in TRNG_GetRandomData(), for some data length it doesn't reloading entropy correctly.

[2.0.12]

- Bug fix:
 - For KW34A4_SERIES, KW35A4_SERIES, KW36A4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.

[2.0.11]

- Bug fix:
 - Add clearing pending errors in TRNG_Init().

[2.0.10]

- Bug Fix:
 - Fixed doxygen issues.

[2.0.9]

- Bug Fix:
 - Fix HIS_CCM metrics issues.

[2.0.8]

- Bug fix:
 - For K32L2A41A_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv4.

[2.0.7]

- Bug fix:
 - Fix MISRA 2004 issue rule 12.5.

[2.0.6]

- Bug fix:
 - For KW35Z4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.

[2.0.5]

- Improvements:
 - For FRQMIN, FRQMAX and OSCDIV, add possibility to use device specific preprocessor macro to define default value in TRNG user configuration structure.

[2.0.4]

- Bug Fix:
 - Fix MISRA-2012 issues.
 - * Rule 10.1, rule 10.3, rule 13.5, rule 16.1.

[2.0.3]

- Improvements:
 - update TRNG_Init to restart new entropy generation.

[2.0.2]

- Improvements:
 - fix MISRA issues
 - * Rule 14.4.

[2.0.1]

- New features:
 - Set default OSCDIV for Kinetis devices KL8x and KL28Z.
- Other changes:
 - Changed default OSCDIV for K81 to divide by 2.

[2.0.0]

- Initial version.
-

UTICK

[2.0.5]

- Improvements
 - Improved for SOC RW610.

[2.0.4]

- Bug Fixes
 - Fixed compile fail issue of no-supporting PD configuration in utick driver.

[2.0.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 8.4, 14.4, 17.7

[2.0.2]

- Added new feature definition macro to enable/disable power control in drivers for some devices have no power control function.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

WUU

[2.4.1]

- Improvements
 - The semantics of kWUU_FilterActiveDSPD and kWUU_ExternalPinActiveDSPD are not clear enough, because on some platforms it's not 'DSPD' (deep sleep, power down) but PDDPD (power down, deep power down). We deprecate them and will use the more generic kWUU_FilterActiveLowLeakage and kWUU_ExternalPinActiveLowLeakage in the future.

[2.4.0]

- New Features
 - Added WUU_ClearExternalWakeupPinsConfig() to clear settings of PDC and PE register.

[2.3.0]

- New Features
 - Added WUU_ClearInternalWakeUpModulesConfig() to clear settings of DM and ME register.

[2.2.1]

- Bug Fixes
 - Fixed WUU_SetPinFilterConfig() unable to set edge detection of pin filter config.
 - Fixed wrong macro used in WUU_GetPinFilterFlag() function.

[2.2.0]

- New Features
 - Added the WUU_GetExternalWakeupPinFlag() and WUU_ClearExternalWakeupPinFlag() function .

[2.1.0]

- New Features
 - Added the WUU_GetModuleInterruptFlag() function to support the devices that equipped MF register.

[2.0.0]

- Initial version.
-

WWDT

[2.1.10]

- Bug Fixes
 - Chek WWDT_RSTS instead of FSL_FEATURE_WWDT_HAS_NO_RESET to determine whether the peripheral can be reset.

[2.1.9]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rule 10.4.

[2.1.8]

- Improvements
 - Updated the “WWDT_Init” API to add wait operation. Which can avoid the TV value read by CPU still be 0xFF (reset value) after WWDT_Init function returns.

[2.1.7]

- Bug Fixes
 - Fixed the issue that the watchdog reset event affected the system from PMC.
 - Fixed the issue of setting watchdog WDPROTECT field without considering the backwards compatibility.
 - Fixed the issue of clearing bit fields by mistake in the function of WWDT_ClearStatusFlags.

[2.1.5]

- Bug Fixes
 - deprecated a unusable API in WWWDT driver.
 - * WWDT_Disable

[2.1.4]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rules Rule 10.1, 10.3, 10.4 and 11.9.
 - Fixed the issue of the inseparable process interrupted by other interrupt source.
 - * WWDT_Init

[2.1.3]

- Bug Fixes
 - Fixed legacy issue when initializing the MOD register.

[2.1.2]

- Improvements
 - Updated the “WWDT_ClearStatusFlags” API and “WWDT_GetStatusFlags” API to match QN9090. WDTOF is not set in case of WD reset. Get info from PMC instead.

[2.1.1]

- New Features
 - Added new feature definition macro for devices which have no LCOK control bit in MOD register.
 - Implemented delay/retry in WWDT driver.

[2.1.0]

- Improvements
 - Added new parameter in configuration when initializing WWDT module. This parameter, which must be set, allows the user to deliver the WWDT clock frequency.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MCXL255](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Multicore

[Multicore SDK](#)

1.7.2 FreeRTOS

[FreeRTOS](#)

1.7.3 FreeMASTER

[freemaster](#)

Chapter 2

MCXL255

2.1 ADVC Driver

2.2 ADVC

enum _advc_result

The enumeration of ADVC operation result.

Values:

enumerator kADVC_Stat_Ok

ADVC Run Well.

enumerator kADVC_Stat_Init

ADVC is initialized.

enumerator kADVC_Stat_SafeDoneFailed

Fail to set ADVC as safe mode.

enumerator kADVC_Stat_Timeout

ADVC status done condition was not set before timeout

enumerator kADVC_Stat_RingoMeasureFailed

Fail to measure ringo.

enumerator kADVC_Stat_FFMeasureFailed

First fail measurement failed.

enumerator kADVC_Stat_OptimalFailed

ADVC set optimal ended with error.

enumerator kADVC_Stat_BadSignature

Wrong ADVC table.

enumerator kADVC_Stat_NotEnabled

when trying to manipulate advc frequencies before it's enabled.

enumerator kADVC_Stat_PreVoltageRequestFailed

when pre-voltage request change is reaching timeout.

enumerator kADVC_Stat_IllegalOperation

When using illegal operation mode in ADVC_ENABLE.

enum _advc_mode

The enumeration of ADVC mode.

Values:

enumerator kADVC_ModeSafe

Set ADVC work as safe mode.

enumerator kADVC_ModeOptimal

Set ADVC work as optimal mode.

typedef enum _advc_result advc_result_t

The enumeration of ADVC operation result.

typedef enum _advc_mode advc_mode_t

The enumeration of ADVC mode.

bool ADVC_IsInitialized(void)

Check if ADVC is initialized.

Return values

- false – ADVC is not initialized.
- true – ADVC is initialized.

advc_result_t ADVC_Enable(advc_mode_t mode, uint8_t *vddCode)

Enable ADVC.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

Parameters

- mode – **[in]** Specify the mode of advc, please refer to advc_mode_t.
- vddCode – **[out]** The value of VDD_AON, NULL means do not care voltage of VDD_AON.

Returns

The result outcome with enabling ADVC.

bool ADVC_IsEnabled(void)

Check if ADVC is enabled.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

Return values

- false – ADVC is not enabled.
- true – ADVC is enabled.

void ADVC_Disable(void)

Disable ADVC.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

`bool ADVC_IsDisabled(void)`

Check if ADVC is disabled.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

Return values

- `true` – ADVC is not disabled.
- `false` – ADVC is enabled.

`advc_result_t ADVC_PreVoltageChangeRequest(uint32_t aonCpuFreq)`

Request to change frequency.

Note: This should be done every time we want to change frequency of any ADVC related clock.

Note: Pre Voltage request should be called before any clock change which is derived from CGU. The paramter we pass is the the future cpu frequency, since we move to safe voltage according to that.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

Parameters

- `aonCpuFreq` – The frequency of AON CPU, only 10MHz, 5MHz, 3.3MHz, 2.5MHz, 2MHz, 1MHz are allowed.

Returns

The result outcome with requesting to change frequency.

`advc_result_t ADVC_PostVoltageChangeRequest(void)`

Move back to optimal after changing any ADVC related clock frequency.

Note: This function checks if SysTick is enabled. If not, it temporarily enables SysTick and disables it before exiting.

Returns

The observed result following the post-frequency change.

FSL_ADVC_DRIVER_VERSION

advc driver version 2.0.2.

2.3 AOI: Crossbar AND/OR/INVERT Driver

`void AOI_Init(AOI_Type *base)`

Initializes an AOI instance for operation.

This function un-gates the AOI clock.

Parameters

- base – AOI peripheral address.

void AOI_Deinit(AOI_Type *base)

Deinitializes an AOI instance for operation.

This function shutdowns AOI module.

Parameters

- base – AOI peripheral address.

void AOI_GetEventLogicConfig(AOI_Type *base, *aoi_event_t* event, *aoi_event_config_t* *config)

Gets the Boolean evaluation associated.

This function returns the Boolean evaluation associated.

Example:

```
aoi_event_config_t demoEventLogicStruct;

AOI_GetEventLogicConfig(AOI, kAOI_Event0, &demoEventLogicStruct);
```

Parameters

- base – AOI peripheral address.
- event – Index of the event which will be set of type *aoi_event_t*.
- config – Selected input configuration .

void AOI_SetEventLogicConfig(AOI_Type *base, *aoi_event_t* event, const *aoi_event_config_t* *eventConfig)

Configures an AOI event.

This function configures an AOI event according to the *aoiEventConfig* structure. This function configures all inputs (A, B, C, and D) of all product terms (0, 1, 2, and 3) of a desired event.

Example:

```
aoi_event_config_t demoEventLogicStruct;

demoEventLogicStruct.PT0AC = kAOI_InvInputSignal;
demoEventLogicStruct.PT0BC = kAOI_InputSignal;
demoEventLogicStruct.PT0CC = kAOI_LogicOne;
demoEventLogicStruct.PT0DC = kAOI_LogicOne;

demoEventLogicStruct.PT1AC = kAOI_LogicZero;
demoEventLogicStruct.PT1BC = kAOI_LogicOne;
demoEventLogicStruct.PT1CC = kAOI_LogicOne;
demoEventLogicStruct.PT1DC = kAOI_LogicOne;

demoEventLogicStruct.PT2AC = kAOI_LogicZero;
demoEventLogicStruct.PT2BC = kAOI_LogicOne;
demoEventLogicStruct.PT2CC = kAOI_LogicOne;
demoEventLogicStruct.PT2DC = kAOI_LogicOne;

demoEventLogicStruct.PT3AC = kAOI_LogicZero;
demoEventLogicStruct.PT3BC = kAOI_LogicOne;
demoEventLogicStruct.PT3CC = kAOI_LogicOne;
demoEventLogicStruct.PT3DC = kAOI_LogicOne;

AOI_SetEventLogicConfig(AOI, kAOI_Event0, demoEventLogicStruct);
```

Parameters

- base – AOI peripheral address.
- event – Event which will be configured of type `aoi_event_t`.
- eventConfig – Pointer to type `aoi_event_config_t` structure. The user is responsible for filling out the members of this structure and passing the pointer to this function.

FSL_AOI_DRIVER_VERSION

Version 2.0.2.

enum `_aoi_input_config`

AOI input configurations.

The selection item represents the Boolean evaluations.

Values:

enumerator `kAOI_LogicZero`

Forces the input to logical zero.

enumerator `kAOI_InputSignal`

Passes the input signal.

enumerator `kAOI_InvInputSignal`

Inverts the input signal.

enumerator `kAOI_LogicOne`

Forces the input to logical one.

enum `_aoi_event`

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

Values:

enumerator `kAOI_Event0`

Event 0 index

enumerator `kAOI_Event1`

Event 1 index

enumerator `kAOI_Event2`

Event 2 index

enumerator `kAOI_Event3`

Event 3 index

typedef enum `_aoi_input_config` `aoi_input_config_t`

AOI input configurations.

The selection item represents the Boolean evaluations.

typedef enum `_aoi_event` `aoi_event_t`

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

typedef struct `_aoi_event_config` `aoi_event_config_t`

AOI event configuration structure.

Defines structure `_aoi_event_config` and use the `AOI_SetEventLogicConfig()` function to make whole event configuration.

AOI

AOI peripheral address

struct `_aoi_event_config`

#include <fsl_aoi.h> AOI event configuration structure.

Defines structure `_aoi_event_config` and use the `AOI_SetEventLogicConfig()` function to make whole event configuration.

Public Members

aoi_input_config_t PT0AC

Product term 0 input A

aoi_input_config_t PT0BC

Product term 0 input B

aoi_input_config_t PT0CC

Product term 0 input C

aoi_input_config_t PT0DC

Product term 0 input D

aoi_input_config_t PT1AC

Product term 1 input A

aoi_input_config_t PT1BC

Product term 1 input B

aoi_input_config_t PT1CC

Product term 1 input C

aoi_input_config_t PT1DC

Product term 1 input D

aoi_input_config_t PT2AC

Product term 2 input A

aoi_input_config_t PT2BC

Product term 2 input B

aoi_input_config_t PT2CC

Product term 2 input C

aoi_input_config_t PT2DC

Product term 2 input D

aoi_input_config_t PT3AC

Product term 3 input A

aoi_input_config_t PT3BC

Product term 3 input B

aoi_input_config_t PT3CC

Product term 3 input C

aoi_input_config_t PT3DC

Product term 3 input D

2.4 AON_LPADC: 12-bit single-ended SAR Analog-to-Digital Converter Driver

void ADC_GetDefaultConfig(*adc_config_t* *config)

Gets an available pre-defined settings for ADC configuration.

Parameters

- config – Pointer to ADC configuration structure, *adc_config_t*.

void ADC_Init(LPADC_Type *base, const *adc_config_t* *config)

Initializes the ADC module.

Parameters

- base – ADC peripheral base address.
- config – Pointer to configuration structure, *adc_config_t*.

void ADC_Deinit(LPADC_Type *base)

De-initializes the ADC module.

Parameters

- base – ADC peripheral base address.

static inline void ADC_Enable(LPADC_Type *base, bool enable)

Enable/disable the ADC module.

Parameters

- base – ADC peripheral base address.
- enable – Indicates whether to enable the ADC module. - true Enable the ADC module. - false Disable the ADC module.

static inline void ADC_DoFifoRst(LPADC_Type *base, *adc_fifo_index_t* index)

Reset ADC FIFO.

Parameters

- base – ADC peripheral base address.
- index – ADC FIFO index, *adc_fifo_index_t*

static inline void ADC_DoSoftWareRst(LPADC_Type *base)

Software reset ADC module.

Parameters

- base – ADC peripheral base address.

static inline uint32_t ADC_GetStatusFlags(LPADC_Type *base)

Get ADC status flags.

Parameters

- base – ADC peripheral base address.

Returns

Mask value for ADC status flags to be got, should be the OR'ed value of *_adc_status_flags*.

static inline void ADC_ClearStatusFlags(LPADC_Type *base, uint32_t mask)
Clear ADC status flags.

Note: Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – ADC peripheral base address.
- mask – Mask value for ADC status flags to be cleared, should be the OR'ed value of _adc_status_flags.

static inline uint32_t ADC_GetTriggerStatusFlags(LPADC_Type *base)
Get ADC trigger status flags.

Parameters

- base – ADC peripheral base address.

Returns

Mask value for ADC trigger status flags to be got, should be the OR'ed value of _adc_trig_status_flags.

static inline void ADC_ClearTriggerStatusFlags(LPADC_Type *base, uint32_t mask)
Clear ADC trigger status flags.

Parameters

- base – ADC peripheral base address.
- mask – Mask value for ADC trigger status flags to be cleared, should be the OR'ed value of _adc_trig_status_flags.

static inline void ADC_EnableInt(LPADC_Type *base, uint32_t mask)
Enable interrupts.

Parameters

- base – ADC peripheral base address.
- mask – Mask value for interrupt events to be enabled, should be the OR'ed value of _adc_int_en.

static inline void ADC_DisableInt(LPADC_Type *base, uint32_t mask)
Disable interrupts.

Parameters

- base – ADC peripheral base address.
- mask – Mask value for interrupt events to be disabled, should be the OR'ed value of _adc_int_en.

static inline void ADC_EnableFifoWatermarkDma(LPADC_Type *base, adc_fifo_index_t index, bool enable)

Enable/disable the specified ADC FIFO watermark DAM transfer.

Parameters

- base – ADC peripheral base address.
- index – ADC FIFO index, adc_fifo_index_t
- enable – Indicates whether to enable the specified ADC FIFO watermark DAM transfer. **true** Enable the specified ADC FIFO watermark DMA transfer. **false** Disable the specified ADC FIFO watermark DMA transfer.

void ADC_GetDefaultTrigConfig(*adc_trig_config_t* *config)

Gets an available pre-defined settings for ADC trigger's configuration.

Parameters

- config – Pointer to ADC trigger configuration structure, *adc_trig_config_t*.

void ADC_SetTrigConfig(LPADC_Type *base, *adc_trig_index_t* index, const *adc_trig_config_t* *config)

Configure the ADC trigger source.

Parameters

- base – ADC peripheral base address.
- index – ADC trigger index, *adc_trig_index_t*.
- config – Pointer to ADC trigger configuration structure, *adc_trig_config_t*.

static inline void ADC_DoSoftwareTrig(LPADC_Type *base, *adc_trig_index_t* index)

Do software trigger.

Parameters

- base – ADC peripheral base address.
- index – ADC trigger index, *adc_trig_index_t*.

static inline uint32_t ADC_GetResFifoCnt(LPADC_Type *base, *adc_fifo_index_t* index)

Get the count of result kept in specified ADC conversion result FIFO.

Parameters

- base – ADC peripheral base address.
- index – ADC FIFO index, *adc_fifo_index_t*

Returns

The count of result kept in specified ADC conversion result FIFO.

bool ADC_GetConvRes(LPADC_Type *base, *adc_conv_res_t* *result, *adc_fifo_index_t* index)

Get the result in specified conversion FIFO.

Parameters

- base – ADC peripheral base address.
- result – Pointer to ADC result structure, *adc_conv_res_t*.
- index – ADC FIFO index, *adc_fifo_index_t*

Returns

Status whether FIFO entry is valid. - true Conversion FIFO result is valid. - false Conversion FIFO result is invalid.

void ADC_GetDefaultCmdConfig(*adc_cmd_config_t* *config)

Gets an available pre-defined settings for ADC command's configuration.

Parameters

- config – Pointer to ADC command configuration structure, *adc_cmd_config_t*.

void ADC_SetCmdConfig(LPADC_Type *base, *adc_cmd_index_t* index, const *adc_cmd_config_t* *config)

Do ADC command configuration.

Parameters

- base – ADC peripheral base address.

- `index` – ADC command index, `adc_cmd_index_t`.
- `config` – Pointer to ADC command configuration structure, `adc_cmd_config_t`.

static inline void ADC_SetOffsetTrimVal(LPADC_Type *base, uint8_t value)

Set trim value for offset.

Parameters

- `base` – ADC peripheral base address.
- `value` – 8-bit unsigned value that should be limited to values between 0h to A0h, with a nominal value of 50h.

static inline void ADC_GetOffsetTrimVal(LPADC_Type *base, uint8_t *pValue)

Get trim value of offset.

Parameters

- `base` – ADC peripheral base address.
- `pValue` – Pointer to the variable in type of `uint8_t` to store offset value.

void ADC_DoOffsetCal(LPADC_Type *base)

Do offset calibration.

Parameters

- `base` – ADC peripheral base address.

FSL_AON_LPADC_DRIVER_VERSION

AON_LPADC driver version 2.0.1.

enum _adc_status_flags

ADC status flags enumeration.

Values:

enumerator `kADC_ResFifo0RdyFlag`

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator `kADC_ResFifo0OverflowFlag`

Indicates that more data has been written to the result FIFO 0 than it can hold.

enumerator `kADC_ResFifo1RdyFlag`

Indicates when the number of valid datawords in the result FIFO 1 is greater than the setting watermark level.

enumerator `kADC_ResFifo1OverflowFlag`

Indicates that more data has been written to the result FIFO 1 than it can hold.

enumerator `kADC_TrigExcFlag`

Indicates that a high priority trigger exception event has occurred.

enumerator `kADC_TrigCompFlag`

Indicates that a trigger sequence has occurred.

enumerator `kADC_CalRdyFlag`

Indicates that the calibration process is done.

enumerator `kADC_ActFlag`

Indicates that the ADC is in active state.

enumerator `kADC_TrigAct`

Indicates that the trigger is actively being processed.

enumerator kADC_CmdAct

Indicates that the command is actively being processed.

enum _adc_trig_status_flags

ADC trigger status flags enumeration.

Values:

enumerator kADC_Trig0IntFlag

Indicates trigger 0 is interrupted by a high priority exception.

enumerator kADC_Trig1IntFlag

Indicates trigger 1 is interrupted by a high priority exception.

enumerator kADC_Trig2IntFlag

Indicates trigger 2 is interrupted by a high priority exception.

enumerator kADC_Trig3IntFlag

Indicates trigger 3 is interrupted by a high priority exception.

enumerator kADC_Trig0CompFlag

Indicates trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kADC_Trig1CompFlag

Indicates trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kADC_Trig2CompFlag

Indicates trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kADC_Trig3CompFlag

Indicates trigger 3 is completed and trigger 3 has enabled completion interrupts.

enum _adc_int_en

ADC interrupt enablement mask enumeration.

Values:

enumerator kADC_ResFifo0WatermarkIntEn

Configures ADC to generate overflow interrupt requests when FIFO0 ready flag is asserted.

enumerator kADC_ResFifo0OverflowIntEn

Configures ADC to generate overflow interrupt requests when FIFO0 overflow flag is asserted.

enumerator kADC_ResFifo1WatermarkIntEn

Configures ADC to generate overflow interrupt requests when FIFO1 ready flag is asserted.

enumerator kADC_ResFifo1OverflowIntEn

Configures ADC to generate overflow interrupt requests when FIFO1 overflow flag is asserted.

enumerator kADC_TrigExcIntEn

Configures ADC to generate trigger exception interrupt.

enumerator kADC_Trig0CompIntEn

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kADC_Trig1CompIntEn

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kADC_Trig2CompIntEn

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kADC_Trig3CompIntEn

Configures ADC to generate interrupt when trigger 3 completion.

enum _adc_cal_conv_avg

ADC calibration conversion averages enumeration.

Values:

enumerator kADC_CalConvAvg0

Single conversion.

enumerator kADC_CalConvAvg2

2 conversions averaged.

enumerator kADC_CalConvAvg4

4 conversions averaged.

enumerator kADC_CalConvAvg8

8 conversions averaged.

enumerator kADC_CalConvAvg16

16 conversions averaged.

enumerator kADC_CalConvAvg32

32 conversions averaged.

enumerator kADC_CalConvAvg64

64 conversions averaged.

enumerator kADC_CalConvAvg128

128 conversions averaged.

enumerator kADC_CalConvAvg256

256 conversions averaged.

enumerator kADC_CalConvAvg512

512 conversions averaged.

enumerator kADC_CalConvAvg1024

1024 conversions averaged.

enum _adc_cal_conv_sample_time

ADC calibration conversion sample time enumeration.

Values:

enumerator kADC_CalConvSampTime_AdckCycle0

1 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle1

2 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle2

3 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle3

4 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle4

5 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle5
6 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle6
7 ADCK cycles sample time.

enumerator kADC_CalConvSampTime_AdckCycle7
8 ADCK cycles sample time.

enum _adc_fifo_index
ADC FIFO enumeration.

Values:

enumerator kADC_Fifo0
FIFO 0.

enumerator kADC_Fifo1
FIFO 1.

enum _adc_trig_index
ADC trigger enumeration.

Values:

enumerator kADC_Trig0
Trigger 0.

enumerator kADC_Trig1
Trigger 1.

enumerator kADC_Trig2
Trigger 2.

enumerator kADC_Trig3
Trigger 3.

enum _adc_trig_cmd_index
ADC trigger command enumeration.

Values:

enumerator kADC_CmdNone
Not a valid selection from the command buffer, trigger event is ignored.

enumerator kADC_Cmd1
Trigger commad 1.

enumerator kADC_Cmd2
Trigger commad 2.

enumerator kADC_Cmd3
Trigger commad 3.

enumerator kADC_Cmd4
Trigger commad 4.

enumerator kADC_Cmd5
Trigger commad 5.

enumerator kADC_Cmd6
Trigger commad 6.

enumerator kADC_Cmd7

Trigger command 7.

enum _adc_conv_avg

ADC hardware conversion averages enumeration.

Values:

enumerator kADC_ConvAvg1

Single conversion.

enumerator kADC_ConvAvg2

2 conversions averaged.

enumerator kADC_ConvAvg4

4 conversions averaged.

enumerator kADC_ConvAvg8

8 conversions averaged.

enumerator kADC_ConvAvg16

16 conversions averaged.

enumerator kADC_ConvAvg32

32 conversions averaged.

enumerator kADC_ConvAvg64

64 conversions averaged.

enumerator kADC_ConvAvg128

128 conversions averaged.

enumerator kADC_ConvAvg256

256 conversions averaged.

enumerator kADC_ConvAvg512

512 conversions averaged.

enumerator kADC_ConvAvg1024

1024 conversions averaged.

enum _adc_sample_time

ADC conversion sample time enumeration.

Values:

enumerator kADC_ConvSampleTime_AdcCycle1

1 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle2

2 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle3

3 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle4

4 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle5

5 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle6

6 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle7
7 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle8
8 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle10
10 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle12
12 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle16
16 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle24
24 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle40
40 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle72
72 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle136
136 ADCK cycles.

enumerator kADC_ConvSampleTime_AdcCycle264
264 ADCK cycles.

enum _adc_comp_mode
ADC hardware compare mode enumeration.

Note: After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kADC_CompareDisabled
Compare disabled.

enumerator kADC_CompareStoreOnTrue
Compare enabled. Store on true.

enumerator kADC_CompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _adc_ref_voltage_src
ADC reference voltage source enumeration.

Values:

enumerator kADC_RefVoltageAlt1
Option 1 setting.

enumerator kADC_RefVoltageAlt2
Option 2 setting.

enum `_adc_dac_settle_delay`

ADC DAC settle time enumeration.

Values:

enumerator `kADC_FastDacSettleTime`

Fastest settling

enumerator `kADC_SlowDacSettleTime`

Slowest settling

enum `_adc_trig_priority_policy`

ADC trigger priority exception handle policy enumeration.

Values:

enumerator `kADC_ConvPreemptImmedNotAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator `kADC_ConvPreemptSoftlyNotAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator `kADC_ConvPreemptImmedAutoRestarted`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kADC_ConvPreemptSoftlyAutoRestarted`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kADC_ConvPreemptImmedAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator `kADC_ConvPreemptSoftlyAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator `kADC_ConvPreemptSubsequentlyNotAutoResumed`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger, when higher priority conversion finishes, the preempted conversion will not automatically be restarted or resumed.

enumerator `kADC_ConvPreemptSubsequentlyAutoRestarted`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger; when higher priority conversion finishes, the preempted conversion will be automatically restarted.

enumerator `kADC_ConvPreemptSubsequentlyAutoResumed`

If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger; when higher priority conversion finishes, the preempted conversion will be automatically resumed.

enumerator `kADC_TriggerPriorityExceptionDisabled`

High priority trigger exception disabled.

typedef enum `_adc_cal_conv_avg` `adc_cal_conv_avg_t`

ADC calibration conversion averages enumeration.

typedef enum `_adc_cal_conv_sample_time` `adc_cal_conv_sample_time_t`

ADC calibration conversion sample time enumeration.

typedef enum `_adc_fifo_index` `adc_fifo_index_t`

ADC FIFO enumeration.

typedef enum `_adc_trig_index` `adc_trig_index_t`

ADC trigger enumeration.

typedef enum `_adc_trig_cmd_index` `adc_cmd_index_t`

ADC trigger command enumeration.

typedef enum `_adc_conv_avg` `adc_conv_avg_t`

ADC hardware conversion averages enumeration.

typedef enum `_adc_sample_time` `adc_conv_sample_time_t`

ADC conversion sample time enumeration.

typedef enum `_adc_comp_mode` `adc_comp_mode_t`

ADC hardware compare mode enumeration.

Note: After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum `_adc_ref_voltage_src` `adc_ref_voltage_src_t`

ADC reference voltage source enumeration.

typedef enum `_adc_dac_settle_delay` `adc_dac_settle_delay_t`

ADC DAC settle time enumeration.

typedef enum `_adc_trig_priority_policy` `adc_trig_priority_policy_t`

ADC trigger priority exception handle policy enumeration.

typedef struct `_adc_conv_res` `adc_conv_res_t`

ADC conversion result structure.

typedef struct `_adc_trig_config` `adc_trig_config_t`

ADC trigger configuration structure.

```
typedef struct _adc_cmd_config adc_cmd_config_t
```

ADC command configuration structure.

```
typedef struct _adc_config adc_config_t
```

ADC configuration structure.

```
ADC_TRIG_PRIORITY_EXC_HANDLE_POLICY_EN(tprictrl, tres, tcmdres, hpted)
```

Trigger priority exception handle policy helper macro.

tprictrl: ADC Trigger Priority Control. **00b** - If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started. **01b** - If a higher priority trigger is received during command processing, the current command is stopped after completing the current conversion. If averaging is enabled, the averaging loop will be completed. However, CMDHa[LOOP] will be ignored and the higher priority trigger will be serviced. **10b** - If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger.

tres: Trigger Resume Enable. **0b** - Trigger sequences interrupted by a high priority trigger exception are not automatically resumed or restarted. **1b** - Trigger sequences interrupted by a high priority trigger exception are automatically resumed or restarted.

tcmdres: Trigger Command Resume, tres must be asserted for tcmdres to be used. **0b** - Trigger sequences interrupted by a high priority trigger exception is automatically restarted. **1b** - Trigger sequences interrupted by a high priority trigger exception is resumed from the command executing before the exception.

hpted: High Priority Trigger Exception Disable **0b** - High priority trigger exceptions are enabled. **1b** - High priority trigger exceptions are disabled.

```
ADC_TRIG_PRIORITY_EXC_HANDLE_POLICY_DE(policy)
```

```
struct _adc_conv_res
```

#include <fsl_aon_lpadc.h> ADC conversion result structure.

Public Members

```
uint8_t trigSrc
```

Indicate the trigger source that initiated a conversion and generated this result.

```
uint8_t cmdSrc
```

Indicate the command buffer being executed that generated this result.

```
uint8_t loopCnt
```

Indicate the loop count value during command execution that generated this result.

```
uint16_t convVal
```

ADC conversion result.

```
struct _adc_trig_config
```

#include <fsl_aon_lpadc.h> ADC trigger configuration structure.

Public Members

```
bool trigEn
```

Controls hardware trigger source to initiate conversion on the rising edge of the input trigger source.

```
uint8_t trigDelay
```

Sets the trigger delay duration to wait at the start of servicing a trigger event.

uint8_t trigPriority

Sets the priority of the associated trigger source.

adc_fifo_index_t resFifo

Selects the FIFO to store the conversion result.

adc_cmd_index_t cmdIndex

Selects the trigger command from command buffer to execute upon detect of the associated trigger event.

struct _adc_cmd_config

#include <fsl_aon_lpadc.h> ADC command configuration structure.

Public Members

bool waitTrigEn

Controls whether commands are automatically executed or a trigger must be received before execution.

bool autoChanIncEn

Controls whether enable automatic channel incrementing.

uint8_t loopCnt

Sets how many times this command executes (and stores conversion result to RESFIFO) before finish and transition to the next command or Idle state.

uint8_t chanIndex

Sets conversion channel.

uint16_t compValLow

Sets compare low value.

uint16_t compValHigh

Sets compare high value.

adc_conv_avg_t convAvg

Selects hardware average value.

adc_comp_mode_t compMode

Selects hardware compare mode.

adc_cmd_index_t nextCmdIndex

Selects the next command to execute after this command completes.

adc_conv_sample_time_t convSampleTime

Selects sample time value.

struct _adc_config

#include <fsl_aon_lpadc.h> ADC configuration structure.

Public Members

bool dozeModeEn

Controls system transition to low power modes while ADC is converting.

bool convPauseEn

Controls whether to enable the ADC pause function.

bool dynamicEleMatchEn

Controls whether to enable dynamic element match.

`uint8_t compTime`

Sets a configurable number of ADCK cycles to complete the compare phase of a conversion.

`uint8_t convPauseDelay`

Sets the duration of pausing during command execution sequencing.

`uint8_t fifo0Watermark`

Sets FIFO 0 watermark value.

`adc_cal_conv_avg_t calConvAvg`

Selects calibration conversion averages.

`adc_ref_voltage_src_t refVoltageSrc`

Selects the reference voltage source.

`adc_dac_settle_delay_t dacSettleTime`

Selects DAC settle delay.

`adc_cal_conv_sample_time_t calConvSampTime`

Selects calibration conversion sample time.

`adc_trig_priority_policy_t trigPriorityPolicy`

Selects trigger priority exception handle policy.

2.5 CDOG

`status_t CDOG_Init(CDOG_Type *base, cdog_config_t *conf)`

Initialize CDOG.

This function initializes CDOG block and setting.

Parameters

- `base` – CDOG peripheral base address
- `conf` – CDOG configuration structure

Returns

Status of the init operation

`void CDOG_Deinit(CDOG_Type *base)`

Deinitialize CDOG.

This function deinitializes CDOG secure counter.

Parameters

- `base` – CDOG peripheral base address

`void CDOG_GetDefaultConfig(cdog_config_t *conf)`

Sets the default configuration of CDOG.

This function initialize CDOG config structure to default values.

Parameters

- `conf` – CDOG configuration structure

`void CDOG_Stop(CDOG_Type *base, uint32_t stop)`

Stops secure counter and instruction timer.

This function stops instruction timer and secure counter. This also change state of CDOG to IDLE.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter

void CDOG_Start(CDOG_Type *base, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in RELOAD and START registers for instruction timer and secure counter

Parameters

- base – CDOG peripheral base address
- reload – reload value
- start – start value

void CDOG_Check(CDOG_Type *base, uint32_t check)

Checks secure counter.

This function compares stop value in handler with secure counter value by writting to RELOAD refister.

Parameters

- base – CDOG peripheral base address
- check – expected (stop) value

void CDOG_Set(CDOG_Type *base, uint32_t stop, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in STOP, RELOAD and START registers for instruction timer and secure counter.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter
- reload – reload value for instruction timer
- start – start value for secure timer

void CDOG_Add(CDOG_Type *base, uint32_t add)

Add value to secure counter.

This function add specified value to secure counter.

Parameters

- base – CDOG peripheral base address.
- add – Value to be added.

void CDOG_Add1(CDOG_Type *base)

Add 1 to secure counter.

This function add 1 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add16(CDOG_Type *base)

Add 16 to secure counter.

This function add 16 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add256(CDOG_Type *base)

Add 256 to secure counter.

This function add 256 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub(CDOG_Type *base, uint32_t sub)

brief Subtract value to secure counter

This function subtract specified value to secure counter.

param base CDOG peripheral base address. param sub Value to be subtracted.

void CDOG_Sub1(CDOG_Type *base)

Subtract 1 from secure counter.

This function subtract specified 1 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub16(CDOG_Type *base)

Subtract 16 from secure counter.

This function subtract specified 16 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub256(CDOG_Type *base)

Subtract 256 from secure counter.

This function subtract specified 256 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_WritePersistent(CDOG_Type *base, uint32_t value)

Set the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.
- value – The value to be written.

uint32_t CDOG_ReadPersistent(CDOG_Type *base)

Get the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.

Returns

The persistent word.

FSL_CDOG_DRIVER_VERSION

Defines CDOG driver version 2.1.3.

Change log:

- Version 2.1.3
 - Re-design multiple instance IRQs and Clocks
 - Add fix for RESTART command errata
- Version 2.1.2
 - Support multiple IRQs
 - Fix default CONTROL values
- Version 2.1.1
 - Remove bit CONTROL[CONTROL_CTRL]
- Version 2.1.0
 - Rename CWT to CDOG
- Version 2.0.2
 - Fix MISRA-2012 issues
- Version 2.0.1
 - Fix doxygen issues
- Version 2.0.0
 - initial version

enum __cdog_debug_Action_ctrl_enum

Values:

enumerator kCDOG_DebugHaltCtrl_Run

enumerator kCDOG_DebugHaltCtrl_Pause

enum __cdog_irq_pause_ctrl_enum

Values:

enumerator kCDOG_IrqPauseCtrl_Run

enumerator kCDOG_IrqPauseCtrl_Pause

enum __cdog_fault_ctrl_enum

Values:

enumerator kCDOG_FaultCtrl_EnableReset

enumerator kCDOG_FaultCtrl_EnableInterrupt

enumerator kCDOG_FaultCtrl_NoAction

enum __code_lock_ctrl_enum

Values:

enumerator kCDOG_LockCtrl_Lock

enumerator kCDOG_LockCtrl_Unlock

typedef uint32_t secure_counter_t

SC_ADD(add)

SC_ADD1

SC_ADD16

SC_ADD256

SC_SUB(sub)

SC_SUB1

SC_SUB16

SC_SUB256

SC_CHECK(val)

```
struct cdog_config_t
    #include <fsl_cdog.h>
```

2.6 Clock Driver

enum _clock_ip_name

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

Values:

enumerator kCLOCK_GateAonUART

Clock gate name: AON UART

enumerator kCLOCK_GateAonI2C

Clock gate name: AON I2C

enumerator kCLOCK_GateAonAPB

Clock gate name: AON APB

enumerator kCLOCK_GateAonPORT

Clock gate name: AON PORT

enumerator kCLOCK_GateAonGPIO

Clock gate name: AON GPIO

enumerator kCLOCK_GateAonQTMRO

Clock gate name: AON QTMRO

enumerator kCLOCK_GateAonQTMRI

Clock gate name: AON QTMRI

enumerator kCLOCK_GateAonLPTMR

Clock gate name: AON LPTMR

enumerator kCLOCK_GateAonKPP

Clock gate name: AON KPP

enumerator kCLOCK_GateAonLPADC

Clock gate name: AON LPADC

enumerator kCLOCK_GateAonSYS

Clock gate name: AON SYS (tick)

enumerator kCLOCK_GateAonACMP0

Clock gate name: AON comparator

enumerator kCLOCK_GateAonLCD

Clock gate name: AON LCD

enumerator kCLOCK_GateAonAVDC2P0

Clock gate name: AON AVDC2P0

enumerator kCLOCK_GateAonINPUTMUX1

Clock gate name: AON INPUTMUX

enumerator kCLOCK_GateAonRootAux

Clock gate name: AON Root Aux CLK

enumerator kCLOCK_GateNotAvail

Clock gate name: None

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_RtcOscClk

RTC OSC clock.

enumerator kCLOCK_Fro16k

AON PAC and SMM clock.

enumerator kCLOCK_FroAON

AON free running clock.

enum _clock_select_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_SelAonROOT_AUX

AON ROOT_AUX clock selection

enumerator kCLOCK_SelAonROOT

AON ROOT clock selection

enumerator kCLOCK_SelAonACMP0

AON ACMP0 clock selection

enumerator kCLOCK_SelAonLCD

AON LCD clock selection

enumerator kCLOCK_SelAonLPADC

AON LPADC clock selection

enumerator kCLOCK_SelAonSYSTICK

AON SYS tick clock selection

enumerator kCLOCK_SelAonKPP

AON KPP clock selection

enumerator kCLOCK_SelAonLPTMR

AON LPTMR GRP clock selection

enumerator kCLOCK_SelAonTMR

AON TMR GRP clock selection

enumerator kCLOCK_SelAonCOM

AON COM comaprator (aon_per_clk) clock selection

enum _clock_attach_id

The enumerator of clock attach Id.

Values:

enumerator kXTAL32K_to_AON_ROOT_AUX

Attach XTAL32K to AON AUX.

enumerator kAUX_to_AON_ROOT_AUX

Attach AUX to AON AUX.

enumerator kFROdiv1_to_AON_CPU

Attach FRO div 1 to AON_CPU.

enumerator kFROdiv2_to_AON_CPU

Attach FRO div 2 to AON_CPU.

enumerator kFROdiv4_to_AON_CPU

Attach FRO div 4 to AON_CPU.

enumerator kROOT_AUX_to_AON_CPU

Attach ROOT AUX to AON_CPU.

enumerator kFROdiv1_to_AON_CMP0

Attach FRO div 1 to AON ACMP0.

enumerator kFROdiv2_to_AON_CMP0

Attach FRO div 2 to AON ACMP0.

enumerator kFROdiv4_to_AON_CMP0

Attach FRO div 4 to AON ACMP0.

enumerator kROOT_AUX_to_AON_CMP0

Attach ROOT AUX to AON ACMP0.

enumerator kCLK_16K_to_AON_LCD

Attach FRO clk_16k to AON LCD.

enumerator kFRO16K_to_AON_LCD

Attach FRO fro16k to AON LCD.

enumerator kFROdiv1_to_AON_LPADC

Attach FRO div 1 to AON LPADC.

enumerator kFROdiv2_to_AON_LPADC

Attach FRO div 2 to AON LPADC.

enumerator kFROdiv4_to_AON_LPADC

Attach FRO div 4 to AON LPADC.

enumerator kROOT_AUX_to_AON_LPADC

Attach ROOT AUX to AON LPADC.

enumerator kXTAL32K_to_AON_LPADC

Attach FRO RTC to AON LPADC.

enumerator kFRO16K_to_AON_LPADC

Attach FRO fro16k to AON LPADC.

enumerator kFROdiv1_to_AON_SYSTICK

Attach FRO div 1 to AON SYSTICK.

enumerator kFROdiv2_to_AON_SYSTICK

Attach FRO div 2 to AON SYSTICK.

enumerator kFROdiv4_to_AON_SYSTICK

Attach FRO div 4 to AON SYSTICK.

enumerator kROOT_AUX_to_AON_SYSTICK

Attach ROOT AUX to AON SYSTICK.

enumerator kXTAL32K_to_AON_KPP

Attach XTAL32K to AON KPP.

enumerator kFRO16K_to_AON_KPP

Attach FRO fro16k to AON KPP.

enumerator AON_TMR_to_AON_LPTMR

Attach AON TIMER CLK to AON LPTMR GRP.

enumerator kFRO16K_to_AON_LPTMR

Attach FRO16K to AON LPTMR GRP.

enumerator kCLK_16K_to_AON_LPTMR

Attach CLK_16K to AON LPTMR GRP.

enumerator kFROdiv1_to_AON_TMR

Attach FRO div 1 to AON TMR GRP.

enumerator kFROdiv2_to_AON_TMR

Attach FRO div 2 to AON TMR GRP.

enumerator kFROdiv4_to_AON_TMR

Attach FRO div 4 to AON TMR GRP.

enumerator kROOT_AUX_to_AON_TMR

Attach ROOT AUX to AON TMR GRP.

enumerator kFROdiv1_to_AON_COM

Attach FRO div 1 to AON COM GRP.

enumerator kFROdiv2_to_AON_COM

Attach FRO div 2 to AON COM GRP.

enumerator kFROdiv4_to_AON_COM

Attach FRO div 4 to AON COM GRP.

enumerator kROOT_AUX_to_AON_COM

Attach ROOT AUX to AON COM GRP.

enumerator kNONE_to_NONE

Attach NONE to NONE.

enum _clock_div_name

Clock dividers.

Values:

enumerator kCLOCK_DIVAonCPU

Aon CPU clock divider

enumerator kCLOCK_DIVAonCMP

Aon Comp grp clock divider

enumerator kCLOCK_DIVAonSYS
Aon SYSTICK clock divider

enumerator kCLOCK_DIVAonACMP0CLK0
Aon CMP0 CLK0 clock divider

enumerator kCLOCK_DIVAonACMP0CLK1
Aon CMP0 CLK1 clock divider

enumerator kCLOCK_DivMax
MAX clock divider

typedef enum *_clock_ip_name* clock_ip_name_t
Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

typedef enum *_clock_name* clock_name_t
Clock name used to get clock frequency.

typedef enum *_clock_select_name* clock_select_name_t
Clock name used to get clock frequency.

typedef enum *_clock_attach_id* clock_attach_id_t
The enumerator of clock attach Id.

typedef enum *_clock_div_name* clock_div_name_t
Clock dividers.

typedef struct *_aon_fro_trim_config* aon_fro_trim_config_t
AON FRO trim configuration.

typedef struct *_xtal_drive_param* xtal_drive_param_t
XTAL drive parameter structure containing dly_cap_sox, amp and gm values.

typedef struct *_rosc_init_config* rosc_init_config_t
ROSC initialization configuration structure.

static inline void CLOCK_EnableClock(*clock_ip_name_t* clk)
Enable the clock for specific IP.

Parameters

- *clk* – : Clock to be enabled.

Returns

Nothing

static inline void CLOCK_DisableClock(*clock_ip_name_t* clk)
Disable the clock for specific IP.

Parameters

- *clk* – : Clock to be Disabled.

Returns

Nothing

void CLOCK_AttachClk(*clock_attach_id_t* connection)
Configure the clock selection muxes.

Parameters

- *connection* – : Clock to be configured.

Returns

Nothing

clock_attach_id_t CLOCK_GetClockAttachId(*clock_attach_id_t* connection)

Get the actual clock attach id. This function uses the offset in input attach id, then it reads the actual source value in the register and combine the offset to obtain an actual attach id.

Parameters

- connection – : Clock attach id to get.

Returns

Clock source value.

void CLOCK_SetClockSelect(*clock_select_name_t* sel_name, uint32_t value)

Set the clock select value. This function set the peripheral clock select value.

Parameters

- sel_name – : Clock select.
- value – : value to be set.

uint32_t CLOCK_GetClockSelect(*clock_select_name_t* sel_name)

Get the clock select value. This function get the peripheral clock select value.

Parameters

- sel_name – : Clock select.

Returns

Clock source value.

void CLOCK_SetClockDiv(*clock_div_name_t* div_name, uint32_t value)

Setup peripheral clock dividers.

Parameters

- div_name – : Clock divider name
- value – : Value to be divided

Returns

Nothing

uint32_t CLOCK_GetClockDiv(*clock_div_name_t* div_name)

Get peripheral clock dividers.

Parameters

- div_name – : Clock divider name

Returns

peripheral clock dividers

void CLOCK_HaltClockDiv(*clock_div_name_t* div_name)

Halt peripheral clock dividers.

Parameters

- div_name – : Clock divider name

Returns

Nothing

status_t CLOCK_SetupFROAonClocking(uint32_t iFreq)

Initialize the AON FRO to given frequency.

Initialize the AON FRO to given frequency and selects the frequency as AON Root Clock source for Root_Clock1, 2, 3 clock signals. In case of 10M selection, it also disables 2M FRO as it has no other usage than AON Root Clock source. In case of 2M selection, 10M FRO is kept running as it can be used in main domain.

Parameters

- iFreq – : Desired frequency (10M, 2M, 0=off).

Returns

returns success or fail status.

uint32_t CLOCK_GetAonCoreSysClkFreq(void)

Return Frequency of the AON core.

Returns

Frequency of the core

void CLOCK_GetDefaultInitRoscConfig(*rosc_init_config_t* *config)

Fills the Rosc initialization configuration structure with default values.

The default values are chosen for safe and common startup behavior. Delays and timeouts are defined in milliseconds. For example:

```
config->xtal_drive_params[0].dly_cap_sox      = 0U;
config->xtal_drive_params[0].amp              = 0U;
config->xtal_drive_params[0].gm               = 0U;
config->detectionDelay                        = 2000U;
config->detectionTimeout                     = 0U;
config->detectionDelaySwitchedMode           = 500U;
config->detectionTimeoutSwitchedMode         = 0U;
config->cbXo                                 = 3U;
config->cbXi                                 = 3U;
config->vbatOver3V                           = true;
```

This function should be called before CLOCK_InitRosc if custom configuration is not fully provided.

Parameters

- config – Pointer to the rosc_init_config_t structure to be filled.

bool CLOCK_IsRoscInitialized(void)

Checks if ROSC (xtal32k) is initialized.

This function enables the RTC alive detector temporarily to check if the ROSC (32kHz crystal oscillator) is properly initialized and running.

Returns

true if ROSC is initialized and running properly, false if ROSC is not initialized or not running properly.

status_t CLOCK_InitRosc(const *rosc_init_config_t* *config)

Initializes the ROSC (xtal32k).

Parameters

- config – Pointer to the user-defined rosc_init_config_t structure.

Returns

kStatus_Success ROSC is initialized. kStatus_Fail ROSC init failed. kStatus_Busy ROSC is used as core clock.

status_t CLOCK_DeinitRosc(void)

brief De-initializes the SCG ROSC.

This function disables the SCG ROSC clock.

retval kStatus_Success System OSC is deinitialized. retval kStatus_Busy ROSC is used by core.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Return Frequency of selected clock.

Returns

Frequency of selected clock

uint32_t CLOCK_GetLpi2cClkFreq(uint32_t id)

Return Frequency of LPI2C functional Clock.

Returns

Frequency of LPI2C functional Clock

uint32_t CLOCK_GetQtmrClkFreq(void)

Return Frequency of QTMR functional Clock.

Returns

Frequency of QTMR functional Clock

uint32_t CLOCK_GetLptmrClkFreq(void)

Return Frequency of LPTMR functional Clock.

Returns

Frequency of LPTMR functional Clock

uint32_t CLOCK_GetLpuartClkFreq(uint32_t id)

Return Frequency of LPUART functional Clock.

Returns

Frequency of LPUART functional Clock

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 1.2.0.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

CLK_GATE_REG_ACC_OFFSET(value)

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

The offset of the registers MRCC_GLB_ACC0 and MRCC_GLB_ACC1.

CLK_GATE_REG_PR_OFFSET(value)

The offset of the registers MRCC_GLB_PR0 and MRCC_GLB_PR1.

CLK_GATE_REG_CC_OFFSET(value)

The offset of the registers MRCC_GLB_CC0 and MRCC_GLB_CC1.

CLK_PERIPHERAL_BIT_SHIFT(value)

Bit definitions for the peripherals in MRCC_GLB_PR, MRCC_GLB_CC and MRCC_GLB_ACC.

CLK_OF_AON(value)

True when clock gate belongs to AON domain.

CLOCK_XTAL_DRIVE_PARAMS_COUNT

Count of XTAL driver parameters' triplets for Rosc initialization.

SLCD_FAULT_DETECT_CLOCKS

Clock ip name array for SLCD.

SLCD_CONTROL_CLOCKS

LPACMP_CLOCKS

Clock ip name array for LPACMP.

AOI_CLOCKS

Clock ip name array for AOI.

ATX_CLOCKS

Clock ip name array for ATX.

CRC_CLOCKS

Clock ip name array for CRC.

CTIMER_CLOCKS

Clock ip name array for CTIMER.

DMA_CLOCKS

Clock ip name array for DMA.

ERM_CLOCKS

EDMA_CLOCKS

Clock gate name array for EDMA.

EZRAMC_CLOCKS

Clock ip name array for EZRAMC_RAM.

FREQME_CLOCKS

Clock ip name array for FREQME.

GPIO_CLOCKS

Clock ip name array for GPIO.

INPUTMUX_CLOCKS

Clock ip name array for INPUTMUX.

LPCMP_CLOCKS

Clock ip name array for LPCMP.

AON_LPADC_CLOCKS

Clock ip name array for LPADC.

Clock ip name array for LPADC.

LPUART_CLOCKS

Clock ip name array for LPUART.

LPI2C_CLOCKS

Clock ip name array for LPI2C.

LPSPI_CLOCKS

Clock ip name array for LPSPI.

MTR_CLOCKS

Clock ip name array for MTR.

OSTIMER_CLOCKS

Clock ip name array for OSTIMER.

PERIPHGROUP_CLOCKS

Clock ip name array for PERIPH_GROUP.

PORT_CLOCKS

Clock ip name array for PORT.

ROMCP_CLOCKS

Clock ip name array for ROMCP.

TCU_CLOCKS

Clock ip name array for TCU.

TRNG_CLOCKS

Clock ip name array for TRNG.

UTICK_CLOCKS

Clock ip name array for UTICK.

WWDT_CLOCKS

Clock ip name array for WWDT.

BUS_CLK

Peripherals clock source definition.

TMR_CLOCKS

Clock ip name array for QTMRs.

LPTMR_CLOCKS

Clock ip name array for AON LPTMRs.

KPP_CLOCKS

Clock ip name array for QTMRs.

CLK_ATTACH_REG_OFFSET(value)

Clock Mux Switches The encoding is as follows each connection identified is 32bits wide while 24bits are valuable starting from LSB upwards.

[4 bits for choice, 0 means invalid choice] [8 bits mux ID]*

CLK_ATTACH_CLK_SEL(value)

CLK_ATTACH_MUX(reg, sel)

CLK_OF_AON_SEL(value)

CLK_AON_SEL_REG_OFFSET(value)

CLK_AON_SEL_SHIFT(value)

CLK_AON_SEL_MASK(value)

CLK_AON_SEL(reg, shift, mask)

uint8_t fs_bp

Replica voltage fs_bp. 0-7

uint8_t fs_vcco

Replica voltage fs_vcco. 0-3

uint8_t tf

Relationship between the frequency and temperature. 0-7

uint8_t cltrim

Trim coarse freq value; 0-63

uint8_t ccotrim

Trim fine freq value; 0-63

uint8_t dly_cap_sox

Pulse location

uint8_t amp

Amplitude control

uint8_t gm

GM setting

xtal_drive_param_t xtal_drive_params[(1U)]

Array of dly_cap_sox, amp and gm parameters

uint32_t detectionDelay

Delay before start of rosc initialization detection

uint32_t detectionTimeout

Timeout for detection of rosc initialization

uint32_t detectionDelaySwitchedMode

Delay before start of rosc initialization detection in switched mode

uint32_t detectionTimeoutSwitchedMode

Timeout for detection of rosc initialization in switched mode

uint8_t cbXo

Selects the internal capacitance on XO or XTAL pin

uint8_t cbXi

Selects the internal capacitance on XI or XTAL pin

bool vbatOver3V

Initialization configuration for vbat voltage value

struct _aon_fro_trim_config

#include <fsl_clock.h> AON FRO trim configuration.

struct _xtal_drive_param

#include <fsl_clock.h> XTAL drive parameter structure containing dly_cap_sox, amp and gm values.

struct _rosc_init_config

#include <fsl_clock.h> ROSC initialization configuration structure.

2.7 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.5.

Current version: 2.0.5

Change log:

- Version 2.0.5

- Fix CERT-C issue with boolean-to-unsigned integer conversion.
- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum `_crc_bits`

CRC bit width.

Values:

enumerator `kCrcBits16`

Generate 16-bit CRC code

enumerator `kCrcBits32`

Generate 32-bit CRC code

enum `_crc_result`

CRC result type.

Values:

enumerator `kCrcFinalChecksum`

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator `kCrcIntermediateChecksum`

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for `CRC_Init()` to continue adding data to this checksum.

typedef enum `_crc_bits` `crc_bits_t`

CRC bit width.

typedef enum `_crc_result` `crc_result_t`

CRC result type.

typedef struct `_crc_config` `crc_config_t`

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void `CRC_Init(CRC_Type *base, const crc_config_t *config)`

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

static inline void CRC_Deinit(CRC_Type *base)

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- base – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct __crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: 0x1021 = 1_0000_0010_0001 = $x^{12}+x^5+1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.8 CTIMER: Standard counter/timers

void CTIMER_Init(CTIMER_Type *base, const *ctimer_config_t* *config)

Ungates the clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application before using the driver.

Parameters

- base – Ctimer peripheral base address
- config – Pointer to the user configuration structure.

void CTIMER_Deinit(CTIMER_Type *base)

Gates the timer clock.

Parameters

- base – Ctimer peripheral base address

void CTIMER_GetDefaultConfig(*ctimer_config_t* *config)

Fills in the timers configuration structure with the default settings.

The default values are:

```
config->mode = kCTIMER_TimerMode;
config->input = kCTIMER_Capture_0;
config->prescale = 0;
```

Parameters

- config – Pointer to the user configuration structure.

status_t CTIMER_SetupPwmPeriod(CTIMER_Type *base, const *ctimer_match_t* pwmPeriodChannel, *ctimer_match_t* matchChannel, uint32_t pwmPeriod, uint32_t pulsePeriod, bool enableInt)

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM period

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- pwmPeriod – PWM period match value
- pulsePeriod – Pulse width match value
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

Returns

kStatus_Success on success kStatus_Fail If matchChannel is equal to pwmPeriodChannel; this channel is reserved to set the PWM cycle If PWM pulse width register value is larger than 0xFFFFFFFF.

status_t CTIMER_SetupPwm(CTIMER_Type *base, const *ctimer_match_t* pwmPeriodChannel, *ctimer_match_t* matchChannel, uint8_t dutyCyclePercent, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz, bool enableInt)

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM frequency. Please use CTIMER_SetupPwmPeriod to set up the PWM with high resolution.

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- dutyCyclePercent – PWM pulse width; the value should be between 0 to 100

- `pwmFreq_Hz` – PWM signal frequency in Hz
- `srcClock_Hz` – Timer counter clock in Hz
- `enableInt` – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

```
static inline void CTIMER_UpdatePwmPulsePeriod(CTIMER_Type *base, ctimer_match_t
                                              matchChannel, uint32_t pulsePeriod)
```

Updates the pulse period of an active PWM signal.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – Match pin to be used to output the PWM signal
- `pulsePeriod` – New PWM pulse width match value

```
status_t CTIMER_UpdatePwmDutycycle(CTIMER_Type *base, const ctimer_match_t
                                   pwmPeriodChannel, ctimer_match_t matchChannel,
                                   uint8_t dutyCyclePercent)
```

Updates the duty cycle of an active PWM signal.

Note: Please use `CTIMER_SetupPwmPeriod` to update the PWM with high resolution. This function can manually assign the specified channel to set the PWM cycle.

Parameters

- `base` – Ctimer peripheral base address
- `pwmPeriodChannel` – Specify the channel to control the PWM period
- `matchChannel` – Match pin to be used to output the PWM signal
- `dutyCyclePercent` – New PWM pulse width; the value should be between 0 to 100

Returns

`kStatus_Success` on success `kStatus_Fail` If PWM pulse width register value is larger than `0xFFFFFFFF`.

```
static inline void CTIMER_EnableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Enables the selected Timer interrupts.

Parameters

- `base` – Ctimer peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline void CTIMER_DisableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Disables the selected Timer interrupts.

Parameters

- `base` – Ctimer peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline uint32_t CTIMER_GetEnabledInterrupts(CTIMER_Type *base)
```

Gets the enabled Timer interrupts.

Parameters

- base – Ctimer peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline uint32_t CTIMER_GetStatusFlags(CTIMER_Type *base)
```

Gets the Timer status flags.

Parameters

- base – Ctimer peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_ClearStatusFlags(CTIMER_Type *base, uint32_t mask)
```

Clears the Timer status flags.

Parameters

- base – Ctimer peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_StartTimer(CTIMER_Type *base)
```

Starts the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
static inline void CTIMER_StopTimer(CTIMER_Type *base)
```

Stops the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
FSL_CTIMER_DRIVER_VERSION
```

Version 2.3.4

```
enum _ctimer_capture_channel
```

List of Timer capture channels.

Values:

```
enumerator kCTIMER_Capture_0
```

Timer capture channel 0

```
enumerator kCTIMER_Capture_1
```

Timer capture channel 1

```
enumerator kCTIMER_Capture_3
```

Timer capture channel 3

```
enum _ctimer_capture_edge
```

List of capture edge options.

Values:

```
enumerator kCTIMER_Capture_RiseEdge
```

Capture on rising edge

enumerator kCTIMER_Capture_FallEdge

Capture on falling edge

enumerator kCTIMER_Capture_BothEdge

Capture on rising and falling edge

enum _ctimer_match

List of Timer match registers.

Values:

enumerator kCTIMER_Match_0

Timer match register 0

enumerator kCTIMER_Match_1

Timer match register 1

enumerator kCTIMER_Match_2

Timer match register 2

enumerator kCTIMER_Match_3

Timer match register 3

enum _ctimer_external_match

List of external match.

Values:

enumerator kCTIMER_External_Match_0

External match 0

enumerator kCTIMER_External_Match_1

External match 1

enumerator kCTIMER_External_Match_2

External match 2

enumerator kCTIMER_External_Match_3

External match 3

enum _ctimer_match_output_control

List of output control options.

Values:

enumerator kCTIMER_Output_NoAction

No action is taken

enumerator kCTIMER_Output_Clear

Clear the EM bit/output to 0

enumerator kCTIMER_Output_Set

Set the EM bit/output to 1

enumerator kCTIMER_Output_Toggle

Toggle the EM bit/output

enum _ctimer_timer_mode

List of Timer modes.

Values:

enumerator kCTIMER_TimerMode

enumerator kCTIMER_IncreaseOnRiseEdge

enumerator kCTIMER_IncreaseOnFallEdge

enumerator kCTIMER_IncreaseOnBothEdge

enum _ctimer_interrupt_enable

List of Timer interrupts.

Values:

enumerator kCTIMER_Match0InterruptEnable

Match 0 interrupt

enumerator kCTIMER_Match1InterruptEnable

Match 1 interrupt

enumerator kCTIMER_Match2InterruptEnable

Match 2 interrupt

enumerator kCTIMER_Match3InterruptEnable

Match 3 interrupt

enum _ctimer_status_flags

List of Timer flags.

Values:

enumerator kCTIMER_Match0Flag

Match 0 interrupt flag

enumerator kCTIMER_Match1Flag

Match 1 interrupt flag

enumerator kCTIMER_Match2Flag

Match 2 interrupt flag

enumerator kCTIMER_Match3Flag

Match 3 interrupt flag

enum ctimer_callback_type_t

Callback type when registering for a callback. When registering a callback an array of function pointers is passed the size could be 1 or 8, the callback type will tell that.

Values:

enumerator kCTIMER_SingleCallback

Single Callback type where there is only one callback for the timer. based on the status flags different channels needs to be handled differently

enumerator kCTIMER_MultipleCallback

Multiple Callback type where there can be 8 valid callbacks, one per channel. for both match/capture

typedef enum _ctimer_capture_channel ctimer_capture_channel_t

List of Timer capture channels.

typedef enum _ctimer_capture_edge ctimer_capture_edge_t

List of capture edge options.

typedef enum _ctimer_match ctimer_match_t

List of Timer match registers.

```
typedef enum _ctimer_external_match ctimer_external_match_t
```

List of external match.

```
typedef enum _ctimer_match_output_control ctimer_match_output_control_t
```

List of output control options.

```
typedef enum _ctimer_timer_mode ctimer_timer_mode_t
```

List of Timer modes.

```
typedef enum _ctimer_interrupt_enable ctimer_interrupt_enable_t
```

List of Timer interrupts.

```
typedef enum _ctimer_status_flags ctimer_status_flags_t
```

List of Timer flags.

```
typedef void (*ctimer_callback_t)(uint32_t flags)
```

```
typedef struct _ctimer_match_config ctimer_match_config_t
```

Match configuration.

This structure holds the configuration settings for each match register.

```
typedef struct _ctimer_config ctimer_config_t
```

Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the `CTIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void CTIMER_SetupMatch(CTIMER_Type *base, ctimer_match_t matchChannel, const  
                      ctimer_match_config_t *config)
```

Setup the match register.

User configuration is used to setup the match value and action to be taken when a match occurs.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – Match register to configure
- `config` – Pointer to the match configuration structure

```
uint32_t CTIMER_GetOutputMatchStatus(CTIMER_Type *base, uint32_t matchChannel)
```

Get the status of output match.

This function gets the status of output MAT, whether or not this output is connected to a pin. This status is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – External match channel, user can obtain the status of multiple match channels at the same time by using the logic of “|” enumeration `ctimer_external_match_t`

Returns

The mask of external match channel status flags. Users need to use the `_ctimer_external_match` type to decode the return variables.

```
void CTIMER_SetupCapture(CTIMER_Type *base, ctimer_capture_channel_t capture,  
                        ctimer_capture_edge_t edge, bool enableInt)
```

Setup the capture.

Parameters

- base – Ctimer peripheral base address
- capture – Capture channel to configure
- edge – Edge on the channel that will trigger a capture
- enableInt – Flag to enable channel interrupts, if enabled then the registered call back is called upon capture

```
static inline uint32_t CTIMER_GetTimerCountValue(CTIMER_Type *base)
```

Get the timer count value from TC register.

Parameters

- base – Ctimer peripheral base address.

Returns

return the timer count value.

```
void CTIMER_RegisterCallBack(CTIMER_Type *base, ctimer_callback_t *cb_func,  
                           ctimer_callback_type_t cb_type)
```

Register callback.

This function configures CTimer Callback in following modes:

- Single Callback: cb_func should be pointer to callback function pointer For example: `ctimer_callback_t ctimer_callback = pwm_match_callback; CTIMER_RegisterCallBack(CTIMER, &ctimer_callback, kCTIMER_SingleCallback);`
- Multiple Callback: cb_func should be pointer to array of callback function pointers Each element corresponds to Interrupt Flag in IR register. For example: `ctimer_callback_t ctimer_callback_table[] = { ctimer_match0_callback, NULL, NULL, ctimer_match3_callback, NULL, NULL, NULL, NULL}; CTIMER_RegisterCallBack(CTIMER, &ctimer_callback_table[0], kCTIMER_MultipleCallback);`

Parameters

- base – Ctimer peripheral base address
- cb_func – Pointer to callback function pointer
- cb_type – callback function type, singular or multiple

```
static inline void CTIMER_Reset(CTIMER_Type *base)
```

Reset the counter.

The timer counter and prescale counter are reset on the next positive edge of the APB clock.

Parameters

- base – Ctimer peripheral base address

```
static inline void CTIMER_SetPrescale(CTIMER_Type *base, uint32_t prescale)
```

Setup the timer prescale value.

Specifies the maximum value for the Prescale Counter.

Parameters

- base – Ctimer peripheral base address
- prescale – Prescale value

```
static inline uint32_t CTIMER_GetCaptureValue(CTIMER_Type *base, ctimer_capture_channel_t
                                              capture)
```

Get capture channel value.

Get the counter/timer value on the corresponding capture channel.

Parameters

- base – Ctimer peripheral base address
- capture – Select capture channel

Returns

The timer count capture value.

```
static inline void CTIMER_EnableResetMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable reset match channel.

Set the specified match channel reset operation.

Parameters

- base – Ctimer peripheral base address
- match – match channel used
- enable – Enable match channel reset operation.

```
static inline void CTIMER_EnableStopMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable stop match channel.

Set the specified match channel stop operation.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable match channel stop operation.

```
static inline void CTIMER_EnableMatchChannelReload(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable reload channel falling edge.

Enable the specified match channel reload match shadow value.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable .

```
static inline void CTIMER_EnableRisingEdgeCapture(CTIMER_Type *base,
                                                  ctimer_capture_channel_t capture, bool
                                                  enable)
```

Enable capture channel rising edge.

Sets the specified capture channel for rising edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable rising edge capture.

```
static inline void CTIMER_EnableFallingEdgeCapture(CTIMER_Type *base,
                                                    ctimer_capture_channel_t capture, bool
                                                    enable)
```

Enable capture channel falling edge.

Sets the specified capture channel for falling edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable falling edge capture.

```
static inline void CTIMER_SetShadowValue(CTIMER_Type *base, ctimer_match_t match,
                                          uint32_t matchvalue)
```

Set the specified match shadow channel.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- matchvalue – Reload the value of the corresponding match register.

```
struct _ctimer_match_config
```

#include <fsl_ctimer.h> Match configuration.

This structure holds the configuration settings for each match register.

Public Members

uint32_t matchValue

This is stored in the match register

bool enableCounterReset

true: Match will reset the counter false: Match will not reset the counter

bool enableCounterStop

true: Match will stop the counter false: Match will not stop the counter

ctimer_match_output_control_t outControl

Action to be taken on a match on the EM bit/output

bool outPinInitState

Initial value of the EM bit/output

bool enableInterrupt

true: Generate interrupt upon match false: Do not generate interrupt on match

```
struct _ctimer_config
```

#include <fsl_ctimer.h> Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the CTIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members*ctimer_timer_mode_t* mode

Timer mode

ctimer_capture_channel_t input

Input channel to increment the timer; used only in timer modes that rely on this input signal to increment TC

uint32_t prescale

Prescale value

2.9 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_Init(*EDMA_Type* *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.**Parameters**

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “edma_config_t”.

void EDMA_Deinit(*EDMA_Type* *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(*EDMA_Type* *base, *uint32_t* channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

```
void EDMA_InitChannel(EDMA_Type *base, uint32_t channel, edma_channel_config_t
                    *channelConfig)
```

EDMA Channel initialization.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelConfig – pointer to user's eDMA4 channel config structure, see *edma_channel_config_t* for detail.

```
static inline void EDMA_SetChannelMemoryAttribute(EDMA_Type *base, uint32_t channel,
                                                edma_channel_memory_attribute_t
                                                writeAttribute,
                                                edma_channel_memory_attribute_t
                                                readAttribute)
```

Set channel memory attribute.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- writeAttribute – Attributes associated with a write transaction.
- readAttribute – Attributes associated with a read transaction.

```
static inline void EDMA_SetChannelSignExtension(EDMA_Type *base, uint32_t channel, uint8_t
                                                position)
```

Set channel sign extension.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- position – A non-zero value specifying the sign extend bit position. If 0, sign extension is disabled.

```
static inline void EDMA_SetChannelSwapSize(EDMA_Type *base, uint32_t channel,
                                           edma_channel_swap_size_t swapSize)
```

Set channel swap size.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- swapSize – Swap occurs with respect to the specified transfer size. If 0, swap is disabled.

```
static inline void EDMA_SetChannelAccessType(EDMA_Type *base, uint32_t channel,
                                             edma_channel_access_type_t
                                             channelAccessType)
```

Set channel access type.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.

- `channelAccessType` – eDMA4's transactions type on the system bus when the channel is active.

```
static inline void EDMA_SetChannelMux(EDMA_Type *base, uint32_t channel, uint32_t  
                                     channelRequestSource)
```

Set channel request source.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `channelRequestSource` – eDMA hardware service request source for the channel. User need to use the `dma_request_source_t` type as the input parameter. Note that devices may use other enum type to express dma request source and User can find it in SOC header or `fsl_edma_soc.h`.

```
static inline uint32_t EDMA_GetChannelSystemBusInformation(EDMA_Type *base, uint32_t  
                                                         channel)
```

Gets the channel identification and attribute information on the system bus interface.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the `_edma_channel_sys_bus_info` type to decode the return variables.

```
static inline void EDMA_EnableChannelMasterIDReplication(EDMA_Type *base, uint32_t  
                                                         channel, bool enable)
```

Set channel master ID replication.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `enable` – true is enable, false is disable.

```
static inline void EDMA_SetChannelProtectionLevel(EDMA_Type *base, uint32_t channel,  
                                                  edma_channel_protection_level_t level)
```

Set channel security level.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.
- `level` – security level.

```
void EDMA_ResetChannel(EDMA_Type *base, uint32_t channel)
```

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_SetTransferConfig(EDMA_Type *base, uint32_t channel, const  
                           edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;  
edma_tcd_t tcd;  
config.srcAddr = ..;  
config.destAddr = ..;  
...  
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(EDMA_Type *base, uint32_t channel, const  
                              edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(EDMA_Type *base, uint32_t channel, const  
                                     edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(EDMA_Type *base, uint32_t channel, edma_channel_link_type_t  
                        type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
void EDMA_SetBandWidth(EDMA_Type *base, uint32_t channel, edma_bandwidth_t  
                      bandWidth)
```

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_SetModulo(EDMA_Type *base, uint32_t channel, edma_modulo_t srcModulo,  
                  edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA__EnableAsyncRequest(*EDMA_Type* *base, uint32_t channel, bool enable)

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

static inline void EDMA__EnableAutoStopRequest(*EDMA_Type* *base, uint32_t channel, bool enable)

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

void EDMA__EnableChannelInterrupts(*EDMA_Type* *base, uint32_t channel, uint32_t mask)

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

void EDMA__DisableChannelInterrupts(*EDMA_Type* *base, uint32_t channel, uint32_t mask)

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined `edma_interrupt_enable_t` type.

void EDMA__SetMajorOffsetConfig(*EDMA_Type* *base, uint32_t channel, int32_t sourceOffset, int32_t destOffset)

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- channel – edma channel number.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

```
void EDMA__ConfigChannelSoftwareTCD(edma_tcd_t *tcd, const edma_transfer_config_t
                                     *transfer)
```

Sets TCD fields according to the user's channel transfer configuration structure, *edma_transfer_config_t*.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API *EDMA__ConfigChannelSoftwareTCDExt*

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- *tcd* – Pointer to the TCD structure.
- *transfer* – channel transfer configuration pointer.

```
void EDMA__TcdReset(edma_tcd_t *tcd)
```

Sets all fields to default values for the TCD structure.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API *EDMA__TcdResetExt*

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- *tcd* – Pointer to the TCD structure.

```
void EDMA__TcdSetTransferConfig(edma_tcd_t *tcd, const edma_transfer_config_t *config,
                               edma_tcd_t *nextTcd)
```

Configures the eDMA TCD transfer attribute.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API *EDMA__TcdSetTransferConfigExt*

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA__TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA__TcdSetMinorOffsetConfig(edma_tcd_t *tcd, const edma_minor_offset_config_t *config)
```

Configures the eDMA TCD minor offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMinorOffsetConfigExt

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetChannelLinkExt

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA__TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetBandWidthExt

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after

the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- `tcd` – A pointer to the TCD structure.
- `bandWidth` – A bandwidth setting, which can be one of the following:
 - `kEDMABandwidthStallNone`
 - `kEDMABandwidthStall4Cycle`
 - `kEDMABandwidthStall8Cycle`

```
void EDMA__TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t
                        destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__TcdSetModuloExt`

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `tcd` – A pointer to the TCD structure.
- `srcModulo` – A source modulo value.
- `destModulo` – A destination modulo value.

```
static inline void EDMA__TcdEnableAutoStopRequest(edma_tcd_t *tcd, bool enable)
```

Sets the auto stop request for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__TcdEnableAutoStopRequestExt`

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- `tcd` – A pointer to the TCD structure.
- `enable` – The command to enable (true) or disable (false).

```
void EDMA__TcdEnableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__TcdEnableInterruptsExt`

Parameters

- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA__TcdDisableInterrupts(edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__TcdDisableInterruptsExt`

Parameters

- `tcd` – Point to the TCD structure.

- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

`void EDMA__TcdSetMajorOffsetConfig(edma_tcd_t *tcd, int32_t sourceOffset, int32_t destOffset)`
Configures the eDMA TCD major offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA__TcdSetMajorOffsetConfigExt`

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `tcd` – A point to the TCD structure.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

`void EDMA__ConfigChannelSoftwareTCDExt(EDMA_Type *base, edma_tcd_t *tcd, const edma_transfer_config_t *transfer)`

Sets TCD fields according to the user's channel transfer configuration structure, `edma_transfer_config_t`.

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Pointer to the TCD structure.
- `transfer` – channel transfer configuration pointer.

`void EDMA__TcdResetExt(EDMA_Type *base, edma_tcd_t *tcd)`

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Pointer to the TCD structure.

`void EDMA__TcdSetTransferConfigExt(EDMA_Type *base, edma_tcd_t *tcd, const edma_transfer_config_t *config, edma_tcd_t *nextTcd)`

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_TcdSetMinorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, const
                                     edma_minor_offset_config_t *config)
```

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_TcdSetChannelLinkExt(EDMA_Type *base, edma_tcd_t *tcd,
                              edma_channel_link_type_t type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
 - kEDMA_LinkNone
 - kEDMA_MinorLink

- kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
static inline void EDMA__TcdSetBandWidthExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                             edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA__TcdSetModuloExt(EDMA_Type *base, edma_tcd_t *tcd, edma_modulo_t srcModulo,  
                           edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA__TcdEnableAutoStopRequestExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                                      bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

```
void EDMA__TcdEnableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdDisableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- base – eDMA peripheral base address.
- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

```
void EDMA__TcdSetMajorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, int32_t  
sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

```
static inline void EDMA__EnableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
static inline void EDMA__DisableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
static inline void EDMA__TriggerChannelStart(EDMA_Type *base, uint32_t channel)
```

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
uint32_t EDMA__GetRemainingMajorLoopCount(EDMA_Type *base, uint32_t channel)
```

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

- a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: $\text{RemainingBytes} = \text{RemainingMajorLoopCount} * \text{NBYTES}(\text{initially configured})$
-

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

```
static inline uint32_t EDMA_GetErrorStatusFlags(EDMA_Type *base)
```

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

```
uint32_t EDMA_GetChannelStatusFlags(EDMA_Type *base, uint32_t channel)
```

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

```
void EDMA_ClearChannelStatusFlags(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

```
status_t EDMA_CreateHandle(edma_handle_t *handle, EDMA_Type *base, uint32_t channel)
```

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- `handle` – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.

Return values

- `kStatus_Success` –
- `kStatus_InvalidArgument` –

`void EDMA_InstallTCDMemory(edma_handle_t *handle, edma_tcd_t *tcdPool, uint32_t tcdSize)`

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- `handle` – eDMA handle pointer.
- `tcdPool` – A memory pool to store TCDs. It must be 32 bytes aligned.
- `tcdSize` – The number of TCD slots.

`void EDMA_SetCallback(edma_handle_t *handle, edma_callback callback, void *userData)`

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- `handle` – eDMA handle pointer.
- `callback` – eDMA callback function pointer.
- `userData` – A parameter for the callback function.

`void EDMA_PrepareTransferConfig(edma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)`

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE). User can check if 128 bytes support is available for specific instance by `FSL_FEATURE_EDMA_INSTANCE_SUPPORT_128_BYTES_TRANSFERn`.

Parameters

- `config` – The user configuration structure of type `edma_transfer_t`.
- `srcAddr` – eDMA transfer source address.
- `srcWidth` – eDMA transfer source address width(bytes).
- `srcOffset` – source address offset.

- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

```
void EDMA__PrepareTransfer(edma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth,  
                           void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest,  
                           uint32_t transferBytes, edma_transfer_type_t type)
```

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type *edma_transfer_t*.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- type – eDMA transfer type.

```
void EDMA__PrepareTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd, void *srcAddr,  
                             uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t  
                             destWidth, int16_t destOffset, uint32_t bytesEachRequest,  
                             uint32_t transferBytes, edma_tcd_t *nextTcd)
```

Prepares the eDMA transfer content descriptor.

This function prepares the transfer content descriptor structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).

- `destOffset` – destination address offset.
- `bytesEachRequest` – eDMA transfer bytes per channel request.
- `transferBytes` – eDMA transfer bytes to be transferred.
- `nextTcd` – eDMA transfer linked TCD address.

`status_t` EDMA_SubmitTransferTCD(*edma_handle_t* *handle, *edma_tcd_t* *tcd)

Submits the eDMA transfer content descriptor.

This function submits the eDMA transfer request according to the transfer content descriptor. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Typical user case:

a. submit single transfer

```
edma_tcd_t tcd;
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

b. submit static link transfer,

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ...)
EDMA_PrepareTransferTCD(handle, &tcd[1], ...)
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

c. submit dynamic link transfer

```
edma_tcd_t tcdpool[2];
EDMA_InstallTCDMemory(&g_DMA_Handle, tcdpool, 2);
edma_tcd_t tcd;
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

d. submit loop transfer

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ..., &tcd[1])
EDMA_PrepareTransferTCD(handle, &tcd[1], ..., &tcd[0])
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

Parameters

- `handle` – eDMA handle pointer.
- `tcd` – Pointer to eDMA transfer content descriptor structure.

Return values

- `kStatus_EDMA_Success` – It means submit transfer request succeed.
- `kStatus_EDMA_QueueFull` – It means TCD queue is full. Submit transfer request is not allowed.
- `kStatus_EDMA_Busy` – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitLoopTransfer(*edma_handle_t* *handle, *edma_transfer_config_t* *transfer, uint32_t transferLoopCount)

Submits the eDMA scatter gather transfer configurations.

The function is target for submit loop transfer request, the ring transfer request means that the transfer request TAIL is link to HEAD, such as, A->B->C->D->A, or A->A

To use the ring transfer feature, the application should allocate several transfer object, such as

```
edma_channel_transfer_config_t transfer[2];
EDMA_TransferSubmitLoopTransfer(psHandle, &transfer, 2U);
```

Then eDMA driver will link transfer[0] and transfer[1] to each other

Note: Application should check the return value of this function to avoid transfer request submit failed

Parameters

- handle – eDMA handle pointer
- transfer – pointer to user's eDMA channel configure structure, see *edma_channel_transfer_config_t* for detail
- transferLoopCount – the count of the transfer ring, if loop count is 1, that means that the one will link to itself.

Return values

- kStatus_Success – It means submit transfer request succeed
- kStatus_EDMA_Busy – channel is in busy status
- kStatus_InvalidArgument – Invalid Argument

void EDMA_StartTransfer(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

void EDMA_StopTransfer(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

void EDMA_AbortTransfer(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As sga and sga_index are calculated based on the DLAST_SGA bitfield lies in the TCD_CSR register, the sga_index in this case should be 2 (DLAST_SGA of TCD[1] stores the address of TCD[2]). Thus, the “tcdUsed” updated should be (tcdUsed - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already.).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major

loop completes. Therefore, ensure that the header and tcdUsed updated are identical for them. tcdUsed are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- handle – eDMA handle pointer.

void EDMA_TcdInit(*EDMA_Type* *base, *edma_tcd_t* *tcdRegs)

Initialize all fields to 0 for the TCD structure.

This function initialize all fields for this TCD structure to 0.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.

FSL_EDMA_DRIVER_VERSION

eDMA driver version

Version 2.10.9.

_edma_transfer_status eDMA transfer status

Values:

enumerator kStatus_EDMA_QueueFull

TCD queue is full.

enumerator kStatus_EDMA_Busy

Channel is busy and can't handle the transfer request.

enum _edma_transfer_size

eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes

Source/Destination data transfer size is 64 bytes every time

enumerator kEDMA_TransferSize128Bytes

Source/Destination data transfer size is 128 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable
Disable modulo

enumerator kEDMA_Modulo2bytes
Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes
Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes
Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes
Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes
Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes
Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes
Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes

Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes

Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes

Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes

Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes

Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes

Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes

Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes

Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes

Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes

Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes

Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes

Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes

Circular buffer size is 2 G bytes.

enum _edma_bandwidth

Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

_edma_error_status_flags eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag

NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag

Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag

Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag

Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag

Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag

Error channel number of the cancelled channel number

enumerator kEDMA_TransferCanceledFlag

Transfer cancelled

enumerator kEDMA_ValidFlag

No error occurred, this bit is 0. Otherwise, it is 1.

_edma_interrupt_enable eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable

Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type
eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral
Transfer from Peripheral to peripheral

enum edma_channel_memory_attribute
eDMA channel memory attribute

Values:

enumerator kEDMA_ChannelNoWriteNoReadNoCacheNoBuffer
No write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadNoCacheBufferable
No write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableNoBuffer
No write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableBufferable
No write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheNoBuffer
No write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheBufferable
No write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableNoBuffer
No write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableBufferable
No write allocate, read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheNoBuffer
write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheBufferable
write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableNoBuffer
write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableBufferable
write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheNoBuffer
write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheBufferable
write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadCacheableNoBuffer
write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadCacheableBufferable
write allocate, read allocate, cacheable, bufferable.

enum _edma_channel_swap_size
eDMA4 channel swap size

Values:

enumerator kEDMA_ChannelSwapDisabled
Swap is disabled.

enumerator kEDMA_ChannelReadWith8bitSwap
Swap occurs with respect to the read 8bit.

enumerator kEDMA_ChannelReadWith16bitSwap
Swap occurs with respect to the read 16bit.

enumerator kEDMA_ChannelReadWith32bitSwap
Swap occurs with respect to the read 32bit.

enumerator kEDMA_ChannelWriteWith8bitSwap
Swap occurs with respect to the write 8bit.

enumerator kEDMA_ChannelWriteWith16bitSwap
Swap occurs with respect to the write 16bit.

enumerator kEDMA_ChannelWriteWith32bitSwap
Swap occurs with respect to the write 32bit.

eDMA channel system bus information, _edma_channel_sys_bus_info

Values:

enumerator kEDMA_PrivilegedAccessLevel
Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId
DMA's master ID when channel is active and master ID replication is enabled.

enum _edma_channel_access_type
eDMA4 channel access type

Values:

enumerator kEDMA_ChannelDataAccess
Data access for eDMA4 transfers.

enumerator kEDMA_ChannelInstructionAccess
Instruction access for eDMA4 transfers.

enum _edma_channel_protection_level
eDMA4 channel protection level

Values:

enumerator `kEDMA_ChannelProtectionLevelUser`
user protection level for eDMA transfers.

enumerator `kEDMA_ChannelProtectionLevelPrivileged`
Privileged protection level eDMA transfers.

typedef enum `_edma_transfer_size` `edma_transfer_size_t`
eDMA transfer configuration

typedef enum `_edma_modulo` `edma_modulo_t`
eDMA modulo configuration

typedef enum `_edma_bandwidth` `edma_bandwidth_t`
Bandwidth control.

typedef enum `_edma_channel_link_type` `edma_channel_link_type_t`
Channel link type.

typedef enum `_edma_transfer_type` `edma_transfer_type_t`
eDMA transfer type

typedef struct `_edma_channel_Preemption_config` `edma_channel_Preemption_config_t`
eDMA channel priority configuration

typedef struct `_edma_minor_offset_config` `edma_minor_offset_config_t`
eDMA minor offset configuration

typedef enum `edma_channel_memory_attribute` `edma_channel_memory_attribute_t`
eDMA channel memory attribute

typedef enum `_edma_channel_swap_size` `edma_channel_swap_size_t`
eDMA4 channel swap size

typedef enum `_edma_channel_access_type` `edma_channel_access_type_t`
eDMA4 channel access type

typedef enum `_edma_channel_protection_level` `edma_channel_protection_level_t`
eDMA4 channel protection level

typedef struct `_edma_channel_config` `edma_channel_config_t`
eDMA4 channel configuration

typedef `edma_core_tcd_t` `edma_tcd_t`
eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

typedef struct `_edma_transfer_config` `edma_transfer_config_t`
edma4 channel transfer configuration

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as

each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

```
typedef struct _edma_config edma_config_t
```

edMA global configuration structure.

```
typedef void (*edma_callback)(struct _edma_handle *handle, void *userData, bool transferDone, uint32_t tcds)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface EDMA_GetUnusedTCDNumber.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcds

How many tcds are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcds are finished between the last callback and this.

```
typedef struct _edma_handle edma_handle_t
```

edMA transfer handle structure

FSL_EDMA_DRIVER_EDMA4

eDMA driver name

EDMA_ALLOCATE_TCD(name, number)

Macro used for allocate edma TCD.

DMA_DCHPRI_INDEX(channel)

Compute the offset unit from DCHPRI3.

struct _edma_channel_Preemption_config

#include <fsl_edma.h> eDMA channel priority configuration

Public Members

bool enableChannelPreemption

If true: a channel can be suspended by other channel with higher priority

bool enablePreemptAbility

If true: a channel can suspend other channel with low priority

uint8_t channelPriority

Channel priority

struct _edma_minor_offset_config

#include <fsl_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct _edma_channel_config

#include <fsl_edma.h> eDMA4 channel configuration

Public Members

edma_channel_Preemption_config_t channelPreemptionConfig
channel preemption configuration

edma_channel_memory_attribute_t channelReadMemoryAttribute
channel memory read attribute configuration

edma_channel_memory_attribute_t channelWriteMemoryAttribute
channel memory write attribute configuration

edma_channel_swap_size_t channelSwapSize
channel swap size configuration

edma_channel_access_type_t channelAccessType
channel access type configuration

uint8_t channelDataSignExtensionBitPosition
channel data sign extension bit position configuration

```
uint32_t channelRequestSource
    hardware service request source for the channel
bool enableMasterIDReplication
    enable master ID replication
edma_channel_protection_level_t protectionLevel
    protection level
struct __edma_transfer_config
    #include <fsl_edma.h> edma4 channel transfer configuration
```

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

Public Members

```
uint32_t srcAddr
    Source data address.
uint32_t destAddr
    Destination data address.
edma_transfer_size_t srcTransferSize
    Source data transfer size.
```

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset value in byte unit applied to the current source address to form the next-state value as each source read is completed

int16_t destOffset

Sign-extended offset value in byte unit applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

bytes in each minor loop or each request range: 1 - (2^{30} - 1) when minor loop mapping is enabled range: 1 - (2^{10} - 1) when minor loop mapping is enabled and source or dest minor loop offset is enabled range: 1 - (2^{32} - 1) when minor loop mapping is disabled

uint32_t majorLoopCounts

minor loop counts in each major loop, should be 1 at least for each transfer range: (0 - (2^{15} - 1)) when minor loop channel link is disabled range: (0 - (2^9 - 1)) when minor loop channel link is enabled total bytes in a transfer = minorLoopCountsEachMajorLoop * bytesEachMinorLoop

uint16_t enabledInterruptMask

channel interrupt to enable, can be OR'ed value of `_edma_interrupt_enable`

edma_modulo_t srcAddrModulo

source circular data queue range

int32_t srcMajorLoopOffset

source major loop offset

edma_modulo_t dstAddrModulo

destination circular data queue range

int32_t dstMajorLoopOffset

destination major loop offset

bool enableSrcMinorLoopOffset

enable source minor loop offset

bool enableDstMinorLoopOffset

enable dest minor loop offset

int32_t minorLoopOffset

burst offset, the offset will be applied after minor loop update

bool enableChannelMajorLoopLink

channel link when major loop complete

uint32_t majorLoopLinkChannel

major loop link channel number

bool enableChannelMinorLoopLink

channel link when minor loop complete

uint32_t minorLoopLinkChannel

minor loop link channel number

edma_tcd_t *linkTCD

pointer to the link transfer control descriptor

struct `_edma_config`

`#include <fsl_edma.h>` eDMA global configuration structure.

Public Members

bool enableMasterIdReplication
 Enable (true) master ID replication. If Master ID replication is disabled, the privileged protection level (supervisor mode) for eDMA4 transfers is used.

bool enableGlobalChannelLink
 Enable(true) channel linking is available and controlled by each channel's link settings.

bool enableHaltOnError
 Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

bool enableDebugMode
 Enable(true) eDMA4 debug mode. When in debug mode, the eDMA4 stalls the start of a new channel. Executing channels are allowed to complete.

bool enableRoundRobinArbitration
 Enable(true) channel linking is available and controlled by each channel's link settings.

edma_channel_config_t *channelConfig[1]
 channel preemption configuration

struct _edma_handle
 #include <fsl_edma.h> eDMA transfer handle structure

Public Members

edma_callback callback
 Callback function for major count exhausted.

void *userData
 Callback function parameter.

EDMA_ChannelType *channelBase
 eDMA peripheral channel base address.

EDMA_Type *base
 eDMA peripheral base address

EDMA_TCDType *tcdBase
 eDMA peripheral tcd base address.

edma_tcd_t *tcdPool
 Pointer to memory stored TCDs.

uint32_t channel
 eDMA channel number.

volatile int8_t header
 The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

volatile int8_t tail
 The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed
 The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize
 The total number of TCD slots in the queue.

2.10 eDMA core Driver

```
enum _edma_tcd_type
    eDMA tcd flag type
    Values:
    enumerator kEDMA_EDMA4Flag
        Data access for eDMA4 transfers.
    enumerator kEDMA_EDMA5Flag
        Instruction access for eDMA4 transfers.
typedef struct _edma_core_mp edma_core_mp_t
    edma core channel struture definition
typedef struct _edma_core_channel edma_core_channel_t
    edma core channel struture definition
typedef enum _edma_tcd_type edma_tcd_type_t
    eDMA tcd flag type
typedef struct _edma5_core_tcd edma5_core_tcd_t
    edma5 core TCD struture definition
typedef struct _edma4_core_tcd edma4_core_tcd_t
    edma4 core TCD struture definition
typedef struct _edma_core_tcd edma_core_tcd_t
    edma core TCD struture definition
typedef edma_core_channel_t EDMA_ChannelType
    EDMA typedef.
typedef edma_core_tcd_t EDMA_TCDType
typedef void EDMA_Type
DMA_CORE_MP_CSR_EDBG_MASK
DMA_CORE_MP_CSR_ERCA_MASK
DMA_CORE_MP_CSR_HAE_MASK
DMA_CORE_MP_CSR_HALT_MASK
DMA_CORE_MP_CSR_GCLC_MASK
DMA_CORE_MP_CSR_GMRC_MASK
DMA_CORE_MP_CSR_EDBG(x)
DMA_CORE_MP_CSR_ERCA(x)
DMA_CORE_MP_CSR_HAE(x)
DMA_CORE_MP_CSR_HALT(x)
DMA_CORE_MP_CSR_GCLC(x)
DMA_CORE_MP_CSR_GMRC(x)
DMA_CSR_INTMAJOR_MASK
```


DMA_CSR_INTHALF_MASK
DMA_CSR_DREQ_MASK
DMA_CSR_ESG_MASK
DMA_CSR_BWC_MASK
DMA_CSR_BWC(x)
DMA_CSR_START_MASK
DMA_CITER_ELINKNO_CITER_MASK
DMA_BITER_ELINKNO_BITER_MASK
DMA_CITER_ELINKNO_CITER_SHIFT
DMA_CITER_ELINKYES_CITER_MASK
DMA_CITER_ELINKYES_CITER_SHIFT
DMA_ATTR_SMOD_MASK
DMA_ATTR_DMOD_MASK
DMA_CITER_ELINKNO_ELINK_MASK
DMA_CSR_MAJORELINK_MASK
DMA_BITER_ELINKYES_ELINK_MASK
DMA_CITER_ELINKYES_ELINK_MASK
DMA_CSR_MAJORLINKCH_MASK
DMA_BITER_ELINKYES_LINKCH_MASK
DMA_CITER_ELINKYES_LINKCH_MASK
DMA_NBYTES_MLOFFYES_MLOFF_MASK
DMA_NBYTES_MLOFFYES_DMLOE_MASK
DMA_NBYTES_MLOFFYES_SMLOE_MASK
DMA_NBYTES_MLOFFNO_NBYTES_MASK
DMA_ATTR_DMOD(x)
DMA_ATTR_SMOD(x)
DMA_BITER_ELINKYES_LINKCH(x)
DMA_CITER_ELINKYES_LINKCH(x)
DMA_NBYTES_MLOFFYES_MLOFF(x)
DMA_NBYTES_MLOFFYES_DMLOE(x)
DMA_NBYTES_MLOFFYES_SMLOE(x)
DMA_NBYTES_MLOFFNO_NBYTES(x)
DMA_NBYTES_MLOFFYES_NBYTES(x)

DMA_ATTR_DSIZE(x)
DMA_ATTR_SSIZE(x)
DMA_CSR_DREQ(x)
DMA_CSR_MAJORLINKCH(x)
DMA_CH_MATTR_WCACHE(x)
DMA_CH_MATTR_RCACHE(x)
DMA_CH_CSR_SIGNEXT_MASK
DMA_CH_CSR_SIGNEXT_SHIFT
DMA_CH_CSR_SWAP_MASK
DMA_CH_CSR_SWAP_SHIFT
DMA_CH_SBR_INSTR_MASK
DMA_CH_SBR_INSTR_SHIFT
DMA_CH_SBR_EMI_MASK
DMA_CH_SBR_EMI_SHIFT
DMA_CH_MUX_SOURCE(x)
DMA_ERR_DBE_FLAG
 DMA error flag.
DMA_ERR_SBE_FLAG
DMA_ERR_SGE_FLAG
DMA_ERR_NCE_FLAG
DMA_ERR_DOE_FLAG
DMA_ERR_DAE_FLAG
DMA_ERR_SOE_FLAG
DMA_ERR_SAE_FLAG
DMA_ERR_ERRCHAN_FLAG
DMA_ERR_ECX_FLAG
DMA_ERR_FLAG
DMA_CLEAR_DONE_STATUS(base, channel)
 get/clear DONE bit
DMA_GET_DONE_STATUS(base, channel)
DMA_ENABLE_ERROR_INT(base, channel)
 enable/disable error interrupt
DMA_DISABLE_ERROR_INT(base, channel)
DMA_CLEAR_ERROR_STATUS(base, channel)
 get/clear error status

DMA_GET_ERROR_STATUS(base, channel)
DMA_CLEAR_INT_STATUS(base, channel)
 get/clear INT status
DMA_GET_INT_STATUS(base, channel)
DMA_ENABLE_MAJOR_INT(base, channel)
 enable/dsiable MAJOR/HALF INT
DMA_ENABLE_HALF_INT(base, channel)
DMA_DISABLE_MAJOR_INT(base, channel)
DMA_DISABLE_HALF_INT(base, channel)
EDMA_TCD_ALIGN_SIZE
 EDMA tcd align size.
EDMA_CORE_BASE(base)
 EDMA base address convert macro.
EDMA_MP_BASE(base)
EDMA_CHANNEL_BASE(base, channel)
EDMA_TCD_BASE(base, channel)
EDMA_TCD_TYPE(x)
 EDMA TCD type macro.
EDMA_TCD_SADDR(tcd, flag)
 EDMA TCD address convert macro.
EDMA_TCD_SOFF(tcd, flag)
EDMA_TCD_ATTR(tcd, flag)
EDMA_TCD_NBYTES(tcd, flag)
EDMA_TCD_SLAST(tcd, flag)
EDMA_TCD_DADDR(tcd, flag)
EDMA_TCD_DOFF(tcd, flag)
EDMA_TCD_CITER(tcd, flag)
EDMA_TCD_DLAST_SGA(tcd, flag)
EDMA_TCD_CSR(tcd, flag)
EDMA_TCD_BITER(tcd, flag)
struct _edma_core_mp
 #include <fsl_edma_core.h> edma core channel struture definition

Public Members

__IO uint32_t MP_CSR
 Channel Control and Status, array offset: 0x10000, array step: 0x10000

```
__IO uint32_t MP_ES
    Channel Error Status, array offset: 0x10004, array step: 0x10000
struct __edma_core_channel
    #include <fsl_edma_core.h> edma core channel struture definition
```

Public Members

```
__IO uint32_t CH_CSR
    Channel Control and Status, array offset: 0x10000, array step: 0x10000
__IO uint32_t CH_ES
    Channel Error Status, array offset: 0x10004, array step: 0x10000
__IO uint32_t CH_INT
    Channel Interrupt Status, array offset: 0x10008, array step: 0x10000
__IO uint32_t CH_SBR
    Channel System Bus, array offset: 0x1000C, array step: 0x10000
__IO uint32_t CH_PRI
    Channel Priority, array offset: 0x10010, array step: 0x10000
struct __edma5_core_tcd
    #include <fsl_edma_core.h> edma5 core TCD struture definition
```

Public Members

```
__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint32_t SADDR_HIGH
    SADDR HIGH register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer
__IO uint16_t ATTR
    ATTR register, source/destination transfer size and modulo
__IO uint32_t NBYTES
    Nbytes register, minor loop length in bytes
__IO uint32_t SLAST
    SLAST register
__IO uint32_t SLAST_SDA_HIGH
    SLAST SDA HIGH register
__IO uint32_t DADDR
    DADDR register, used for destination address
__IO uint32_t DADDR_HIGH
    DADDR HIGH register, used for destination address
__IO uint32_t DLAST_SGA
    DLASTSGA register, next tcd address used in scatter-gather mode
__IO uint32_t DLAST_SGA_HIGH
    DLASTSGA HIGH register, next tcd address used in scatter-gather mode
```

```
__IO uint16_t DOFF
    DOFF register, used for destination offset
__IO uint16_t CITER
    CITER register, current minor loop numbers, for unfinished minor loop.
__IO uint16_t CSR
    CSR register, for TCD control status
__IO uint16_t BITER
    BITER register, begin minor loop count.
uint8_t RESERVED[16]
    Aligned 64 bytes
struct _edma4_core_tcd
    #include <fsl_edma_core.h> edma4 core TCD struture definition
```

Public Members

```
__IO uint32_t SADDR
    SADDR register, used to save source address
__IO uint16_t SOFF
    SOFF register, save offset bytes every transfer
__IO uint16_t ATTR
    ATTR register, source/destination transfer size and modulo
__IO uint32_t NBYTES
    Nbytes register, minor loop length in bytes
__IO uint32_t SLAST
    SLAST register
__IO uint32_t DADDR
    DADDR register, used for destination address
__IO uint16_t DOFF
    DOFF register, used for destination offset
__IO uint16_t CITER
    CITER register, current minor loop numbers, for unfinished minor loop.
__IO uint32_t DLAST_SGA
    DLASTSGA register, next tcd address used in scatter-gather mode
__IO uint16_t CSR
    CSR register, for TCD control status
__IO uint16_t BITER
    BITER register, begin minor loop count.
struct _edma_core_tcd
    #include <fsl_edma_core.h> edma core TCD struture definition
union MP_REGS
```

Public Members

struct *_edma_core_mp* EDMA5_REG

struct EDMA5_REG

Public Members

__IO uint32_t MP_INT_LOW

Channel Control and Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t MP_INT_HIGH

Channel Control and Status, array offset: 0x1000C, array step: 0x10000

__IO uint32_t MP_HRS_LOW

Channel Control and Status, array offset: 0x10010, array step: 0x10000

__IO uint32_t MP_HRS_HIGH

Channel Control and Status, array offset: 0x10014, array step: 0x10000

__IO uint32_t MP_STOPCH

Channel Control and Status, array offset: 0x10020, array step: 0x10000

__IO uint32_t MP_SSR_LOW

Channel Control and Status, array offset: 0x10030, array step: 0x10000

__IO uint32_t MP_SSR_HIGH

Channel Control and Status, array offset: 0x10034, array step: 0x10000

__IO uint32_t CH_GRPRI [64]

Channel Control and Status, array offset: 0x10100, array step: 0x10000

__IO uint32_t CH_MUX [64]

Channel Control and Status, array offset: 0x10200, array step: 0x10000

__IO uint32_t CH_PROT [64]

Channel Control and Status, array offset: 0x10400, array step: 0x10000

union CH_REGS

Public Members

struct *_edma_core_channel* EDMA5_REG

struct *_edma_core_channel* EDMA4_REG

struct EDMA5_REG

Public Members

__IO uint32_t CH_MATTR

Memory Attributes Register, array offset: 0x10018, array step: 0x8000

struct EDMA4_REG

Public Members

__IO uint32_t CH_MUX
Channel Multiplexor Configuration, array offset: 0x10014, array step: 0x10000

__IO uint16_t CH_MATTR
Memory Attributes Register, array offset: 0x10018, array step: 0x8000

union TCD_REGS

Public Members

edma4_core_tcd_t edma4_tcd

2.11 eDMA soc Driver

FSL_EDMA_SOC_DRIVER_VERSION
Driver version 1.0.0.

FSL_EDMA_SOC_IP_DMA3
DMA IP version.

FSL_EDMA_SOC_IP_DMA4

EDMA_BASE_PTRS
DMA base table.

EDMA_CHN_IRQS

FSL_FEATURE_EDMA_HAS_GLOBAL_MASTER_ID_REPLICATION

FSL_FEATURE_EDMA_HAS_CONTINUOUS_LINK_MODE

FSL_FEATURE_EDMA_MODULE_COUNT

FSL_FEATURE_EDMA_HAS_CHANNEL_CONFIG

FSL_FEATURE_EDMA_HAS_CHANNEL_SWAP_SIZE

FSL_FEATURE_EDMA_HAS_CHANNEL_ACCESS_TYPE

FSL_FEATURE_EDMA_HAS_CHANNEL_MEMORY_ATTRIBUTE

FSL_FEATURE_EDMA_HAS_CHANNEL_SIGN_EXTENSION

FSL_FEATURE_EDMA_MODULE_SUPPORT_MATTR(*base*)

FSL_FEATURE_EDMA_MODULE_SUPPORT_SIGN_EXTENSION(*base*)

FSL_FEATURE_EDMA_MODULE_SUPPORT_SWAP(*base*)

FSL_FEATURE_EDMA_MODULE_SUPPORT_INSTR(*base*)

EDMA_CHANNEL_OFFSET
EDMA base address convert macro.

EDMA_CHANNEL_ARRAY_STEP(*base*)

2.12 ERM: error recording module

void ERM_Init(ERM_Type *base)

ERM module initialization function.

Parameters

- base – ERM base address.

void ERM_Deinit(ERM_Type *base)

De-initializes the ERM.

static inline void ERM_EnableInterrupts(ERM_Type *base, uint32_t channel, uint32_t mask)

ERM enable interrupts.

Parameters

- base – ERM peripheral base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline void ERM_DisableInterrupts(ERM_Type *base, uint32_t channel, uint32_t mask)

ERM module disable interrupts.

Parameters

- base – ERM base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline uint32_t ERM_GetInterruptStatus(ERM_Type *base, uint32_t channel)

Gets ERM interrupt flags.

Parameters

- base – ERM peripheral base address.

Returns

ERM event flags.

static inline void ERM_ClearInterruptStatus(ERM_Type *base, uint32_t channel, uint32_t mask)

ERM module clear interrupt status flag.

Parameters

- base – ERM base address.
- mask – event flag to clear. Refer to “_erm_interrupt_flag” enumeration.

uint32_t ERM_GetMemoryErrorAddr(ERM_Type *base, uint32_t channel)

ERM get memory error absolute address, which capturing the address of the last ECC event in Memory n.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

memory – error absolute address.

uint32_t ERM_GetSyndrome(ERM_Type *base, uint32_t channel)

ERM get syndrome, which identifies the pertinent bit position on a correctable, single-bit data inversion or a non-correctable, single-bit address inversion. The syndrome value does not provide any additional diagnostic information on non-correctable, multi-bit inversions.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

syndrome – value.

uint32_t ERM_GetErrorCount(ERM_Type *base, uint32_t channel)

ERM get error count, which records the count value of the number of correctable ECC error events for Memory n. Non-correctable errors are considered a serious fault, so the ERM does not provide any mechanism to count non-correctable errors. Only correctable errors are counted.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

error – count.

void ERM_ResetErrorCount(ERM_Type *base, uint32_t channel)

ERM reset error count.

Parameters

- base – ERM base address.
- channel – memory channel.

FSL_ERM_DRIVER_VERSION

Driver version.

ERM interrupt configuration structure, default settings all disabled, `_erm_interrupt_enable`. This structure contains the settings for all of the ERM interrupt configurations.

Values:

enumerator `kERM_SingleCorrectionIntEnable`

Single Correction Interrupt Notification enable.

enumerator `kERM_NonCorrectableIntEnable`

Non-Correction Interrupt Notification enable.

enumerator `kERM_AllInterruptsEnable`

All Interrupts enable

ERM interrupt status, `_erm_interrupt_flag`.

This provides constants for the ERM event status for use in the ERM functions.

Values:

enumerator `kERM_SingleBitCorrectionIntFlag`

Single-Bit Correction Event.

enumerator kERM_NonCorrectableErrorIntFlag
Non-Correctable Error Event.

enumerator kERM_AllIntsFlag
All Events.

2.13 FGPIO Driver

2.14 FREQME: Frequency Measurement

2.15 GLIKEY

2.16 GLIKEY

Values:

enumerator kStatus_GLIKEY_LockedError
GLIKEY status for locked SFR registers (unexpected) .

enumerator kStatus_GLIKEY_NotLocked
GLIKEY status for unlocked SFR registers.

enumerator kStatus_GLIKEY_Locked
GLIKEY status for locked SFR registers.

enumerator kStatus_GLIKEY_DisabledError
GLIKEY status for disabled error.

FSL_GLIKEY_DRIVER_VERSION
Defines GLIKEY driver version 2.0.1.

Change log:

- Version 2.0.1
 - Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.
- Version 2.0.0
 - Initial version

GLIKEY_CODEWORD_STEP1

GLIKEY_CODEWORD_STEP2

GLIKEY_CODEWORD_STEP3

GLIKEY_CODEWORD_STEP4

GLIKEY_CODEWORD_STEP5

GLIKEY_CODEWORD_STEP6

GLIKEY_CODEWORD_STEP7

GLIKEY_CODEWORD_STEP_EN

GLIKEY_FSM_WR_DIS

GLIKEY_FSM_INIT

GLIKEY_FSM_STEP1

GLIKEY_FSM_STEP2

GLIKEY_FSM_STEP3

GLIKEY_FSM_STEP4

GLIKEY_FSM_LOCKED

GLIKEY_FSM_WR_EN

GLIKEY_FSM_SSR_RESET

uint32_t GLIKEY_GetStatus(GLIKEY_Type *base)

Retreives the current status of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Glikey status information

status_t GLIKEY_IsLocked(GLIKEY_Type *base)

Get if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_Locked – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status

status_t GLIKEY_CheckLock(GLIKEY_Type *base)

Check if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_LockedError – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status kStatus_Success if success

status_t GLIKEY_SyncReset(GLIKEY_Type *base)

Perform a synchronous reset of Glikey.

This function performs a synchronounous reset of the Glikey. This results in:

- Glikey will return to the INIT state, unless it is in the LOCK state

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntEnable(GLIKEY_Type *base, uint32_t value)

Set interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[in]** Value to set the interrupt enable flag to, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_GetIntEnable(GLIKEY_Type *base, uint32_t *value)

Get interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[out]** Pointer which will be filled with the interrupt enable status, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success

status_t GLIKEY_ClearIntStatus(GLIKEY_Type *base)

Clear the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntStatus(GLIKEY_Type *base)

Set the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_Lock(GLIKEY_Type *base)

Lock Glikey SFR (Special Function Registers) interface.

This operation locks the Glikey SFR interface if it is not locked yet.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success

status_t GLIKEY_LockIndex(GLIKEY_Type *base)

Lock Glikey index.

This operation is used to lock a Glikey index. It can only be executed from the WR_EN state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_IsIndexLocked(GLIKEY_Type *base, uint32_t index)

Check if Glikey index is locked.

This operation returns the locking status of Glikey index.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

kStatus_GLIKEY_Locked if locked, kStatus_GLIKEY_NotLocked if unlocked
Possible errors: kStatus_Fail

status_t GLIKEY_StartEnable(GLIKEY_Type *base, uint32_t index)

Start Glikey enable.

This operation is used to set a new index and start a the sequence to enable it. It needs to be started from the INIT state. If the new index is already locked Glikey will go to LOCKED state, otherwise it will go to STEP1 state. If this operation is used when Glikey is in any state other than INIT Glikey will go to WR_DIS state. It can only recover from this state through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail

status_t GLIKEY_ContinueEnable(GLIKEY_Type *base, uint32_t codeword)

Continue Glikey enable.

This operation is used to progress through the different states of the state machine, starting from STEP1 until the state WR_EN is reached. Each next state of the state machine can only be reached by providing the right codeword to this function. If anything goes wrong the state machine will go to WR_DIS state and can only recover from it through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- codeword – **[in]** Encoded word for progressing to next FSM state (see GLIKEY_CODEWORD_STEPx/EN)

Returns

Status kStatus_Success if success Possible errors: kSta-
tus_GLIKEY_LockedError, kStatus_Fail, kStatus_GLIKEY_DisabledError

status_t GLIKEY_EndOperation(GLIKEY_Type *base)

End Glikey operation.

This operation is used to end a Glikey operation. It can only be executed from the WR_EN, LOCKED and RESET states. Executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. After this operation Glikey will go to INIT state or stay in LOCKED state when the index was locked. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_ResetIndex(GLIKEY_Type *base, uint32_t index)

Reset Glikey index.

This operation is used to reset a Glikey index. It can only be executed from the INIT state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active or the index is locked this operation will return an error.

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

2.17 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureRWPrivilegedsecureRW
User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureRUsersecureRPrivilegedsecureRW
User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureRPrivilegedsecureRW
User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureRW
User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureR
User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO__UsernonsecureNUsersecureNPrivilegedsecureN
User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO__IgnoreAttributeCheck
Ignores the attribute check

enum _gpio_interrupt_config
Configures the interrupt generation condition.

Values:

enumerator kGPIO__InterruptStatusFlagDisabled
Interrupt status flag is disabled.

enumerator kGPIO__DMARisingEdge
ISF flag and DMA request on rising edge.

enumerator kGPIO__DMAFallingEdge
ISF flag and DMA request on falling edge.

enumerator kGPIO__DMAEitherEdge
ISF flag and DMA request on either edge.

enumerator kGPIO__FlagRisingEdge
Flag sets on rising edge.

enumerator kGPIO__FlagFallingEdge
Flag sets on falling edge.

enumerator kGPIO__FlagEitherEdge
Flag sets on either edge.

enumerator kGPIO__InterruptLogicZero
Interrupt when logic zero.

enumerator kGPIO__InterruptRisingEdge
Interrupt on rising edge.

enumerator kGPIO__InterruptFallingEdge
Interrupt on falling edge.

enumerator kGPIO__InterruptEitherEdge
Interrupt on either edge.

enumerator kGPIO__InterruptLogicOne
Interrupt when logic one.

enumerator kGPIO__ActiveHighTriggerOutputEnable

Enable active high-trigger output.

enumerator kGPIO__ActiveLowTriggerOutputEnable

Enable active low-trigger output.

enum __gpio_interrupt_selection

Configures the selection of interrupt/DMA request/trigger output.

Values:

enumerator kGPIO__InterruptOutput0

Interrupt/DMA request/trigger output 0.

enumerator kGPIO__InterruptOutput1

Interrupt/DMA request/trigger output 1.

enum gpio_pin_interrupt_control_t

GPIO pin and interrupt control.

Values:

enumerator kGPIO__PinControlNonSecure

Pin Control Non-Secure.

enumerator kGPIO__InterruptControlNonSecure

Interrupt Control Non-Secure.

enumerator kGPIO__PinControlNonPrivilege

Pin Control Non-Privilege.

enumerator kGPIO__InterruptControlNonPrivilege

Interrupt Control Non-Privilege.

typedef enum __gpio_pin_direction gpio_pin_direction_t

GPIO direction definition.

typedef enum __gpio_checker_attribute gpio_checker_attribute_t

GPIO checker attribute.

typedef struct __gpio_pin_config gpio_pin_config_t

The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

typedef enum __gpio_interrupt_config gpio_interrupt_config_t

Configures the interrupt generation condition.

typedef enum __gpio_interrupt_selection gpio_interrupt_selection_t

Configures the selection of interrupt/DMA request/trigger output.

typedef struct __gpio_version_info gpio_version_info_t

GPIO version information.

GPIO_FIT_REG(value)

struct __gpio_pin_config

#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members*gpio_pin_direction_t* pinDirection

GPIO direction, input or output

uint8_t outputLogic

Set a default output logic, which has no use in input

struct __gpio_version_info

#include <fsl_gpio.h> GPIO version information.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor Version Number.

uint8_t major

Major Version Number.

2.18 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)

Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDeinit(GPIO_Type *base)

Deinitializes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```

Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}

```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

```
void GPIO_GetVersionInfo(GPIO_Type *base, gpio_version_info_t *verInfo)
```

Get GPIO version information.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- verInfo – GPIO version information

```
static inline void GPIO_SecurePrivilegeLock(GPIO_Type *base, gpio_pin_interrupt_control_t  
mask)
```

lock or unlock secure privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – pin or interrupt macro

```
static inline void GPIO_EnablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Enable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Disable Pin Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
```

Enable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
```

Disable Pin Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
```

Enable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Secure.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_EnableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_DisableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputEnable(GPIO_Type *base, uint32_t mask)
Enable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortInputDisable(GPIO_Type *base, uint32_t mask)
Disable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)
Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)
Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)
```

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
static inline void GPIO_SetPinInterruptConfig(GPIO_Type *base, uint32_t pin,  
                                              gpio_interrupt_config_t config)
```

Configures the gpio pin interrupt/DMA request.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt/DMA request disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.

- kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
- kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

```
static inline void GPIO_SetPinInterruptChannel(GPIO_Type *base, uint32_t pin,
                                             gpio_interrupt_selection_t selection)
```

Configures the gpio pin interrupt/DMA request/trigger output channel selection.

Parameters

- base – GPIO peripheral base pointer.
- pin – GPIO pin number.
- selection – GPIO pin interrupt output selection.
 - kGPIO_InterruptOutput0: Interrupt/DMA request/trigger output 0.
 - kGPIO_InterruptOutput1 : Interrupt/DMA request/trigger output 1.

```
uint32_t GPIO_GpioGetInterruptFlags(GPIO_Type *base)
```

Read the GPIO interrupt status flags.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)

Returns

The current GPIO's interrupt status flag. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

```
uint32_t GPIO_GpioGetInterruptChannelFlags(GPIO_Type *base, uint32_t channel)
```

Read the GPIO interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

Returns

The current GPIO's interrupt status flag based on the selected interrupt channel. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

```
uint8_t GPIO_PinGetInterruptFlag(GPIO_Type *base, uint32_t pin)
```

Read individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on)
- pin – GPIO specific pin number.

Returns

The current selected pin's interrupt status flag.

```
void GPIO_GpioClearInterruptFlags(GPIO_Type *base, uint32_t mask)
```

Clears GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

`void GPIO_GpioClearInterruptChannelFlags(GPIO_Type *base, uint32_t mask, uint32_t channel)`
Clears GPIO pin interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- `base` – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- `mask` – GPIO pin number macro
- `channel` – ‘0’ means selete interrupt channel 0, ‘1’ means selete interrupt channel 1.

`void GPIO_PinClearInterruptFlag(GPIO_Type *base, uint32_t pin)`
Clear GPIO individual pin’s interrupt status flag.

Parameters

- `base` – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- `pin` – GPIO specific pin number.

`static inline void GPIO_SetMultipleInterruptPinsConfig(GPIO_Type *base, uint32_t mask, gpio_interrupt_config_t config)`

Sets the GPIO interrupt configuration in PCR register for multiple pins.

Parameters

- `base` – GPIO peripheral base pointer.
- `mask` – GPIO pin number macro.
- `config` – GPIO pin interrupt configuration.
 - `kGPIO_InterruptStatusFlagDisabled`: Interrupt disabled.
 - `kGPIO_DMARisingEdge` : DMA request on rising edge(if the DMA requests exit).
 - `kGPIO_DMAFallingEdge`: DMA request on falling edge(if the DMA requests exit).
 - `kGPIO_DMAEitherEdge` : DMA request on either edge(if the DMA requests exit).
 - `kGPIO_FlagRisingEdge` : Flag sets on rising edge(if the Flag states exit).
 - `kGPIO_FlagFallingEdge` : Flag sets on falling edge(if the Flag states exit).
 - `kGPIO_FlagEitherEdge` : Flag sets on either edge(if the Flag states exit).
 - `kGPIO_InterruptLogicZero` : Interrupt when logic zero.
 - `kGPIO_InterruptRisingEdge` : Interrupt on rising edge.
 - `kGPIO_InterruptFallingEdge`: Interrupt on falling edge.
 - `kGPIO_InterruptEitherEdge` : Interrupt on either edge.
 - `kGPIO_InterruptLogicOne` : Interrupt when logic one.
 - `kGPIO_ActiveHighTriggerOutputEnable` : Enable active high-trigger output (if the trigger states exit).
 - `kGPIO_ActiveLowTriggerOutputEnable` : Enable active low-trigger output (if the trigger states exit)..

`void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)`

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If

the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.19 INPUTMUX: Input Multiplexing Driver

enum _inputmux_index_t

Values:

```
enumerator kINPUTMUX_AON_INDEX_QTMR0_TMR0
enumerator kINPUTMUX_AON_INDEX_QTMR0_TMR1
enumerator kINPUTMUX_AON_INDEX_QTMR0_TMR2
enumerator kINPUTMUX_AON_INDEX_QTMR0_TMR3
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_XOR0_IN0
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_XOR0_IN1
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR0
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR1
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR2
enumerator kINPUTMUX_AON_INDEX_QTMR1_TMR3
enumerator kINPUTMUX_AON_INDEX_ACOMP0_TRIG0
enumerator kINPUTMUX_AON_INDEX_ACOMP0_TRIG1
enumerator kINPUTMUX_AON_INDEX_ACOMP0_TRIG2
enumerator kINPUTMUX_AON_INDEX_ACOMP0_TRIG3
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG0
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG1
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG2
enumerator kINPUTMUX_AON_INDEX_LPADC0_TRIG3
enumerator kINPUTMUX_AON_INDEX_AON_TRIG_OUT0
enumerator kINPUTMUX_AON_INDEX_AON_TRIG_OUT1
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_CMPPADS_PCTRL_XOR_IN0
enumerator kINPUTMUX_AON_INDEX_SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0
enumerator kINPUTMUX_AON_INDEX_LC_ROT_SOC_LOGIC_IN
enumerator kINPUTMUX_AON_INDEX_LCSENSE_SEQ_PTRIG_GLUE_IN
enumerator kINPUTMUX_AON_INDEX_LCSENSE_SEQ_TICKS_GLUE_IN
```

enumerator kINPUTMUXAON_INDEX_CMP0_SAMPLE

enumerator kINPUTMUXAON_INDEX_CMP0_RR_TRIG

enumerator kINPUTMUXAON_INDEX_LPI2C0_TRIG

enumerator kINPUTMUXAON_INDEX_LPUART0

enum __inputmux_connection_t

INPUTMUX connections type.

Values:

enumerator kINPUTMUXAON_AonTrigIn0ToQtmr0Tmrn

QTMRO_TMRn: QTMRO Input Connections aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToQtmr0Tmrn

aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToQtmr0Tmrn

aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToQtmr0Tmrn

aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToQtmr0Tmrn

aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToQtmr0Tmrn

aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToQtmr0Tmrn

aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToQtmr0Tmrn

aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToQtmr0Tmrn

cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToQtmr0Tmrn

qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToQtmr0Tmrn

qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToQtmr0Tmrn

qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToQtmr0Tmrn

qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToQtmr0Tmrn

cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToQtmr0Tmrn

lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToQtmr0Tmrn

lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToQtmr0Tmrn

lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToQtmr0Tmrn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToQtmr0Tmrn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToQtmr0Tmrn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToQtmr0Tmrn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToQtmr0Tmrn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToQtmr0Tmrn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_Lptmr0OToQtmr0Tmrn
lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToQtmr0Tmrn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToQtmr0Tmrn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToQtmr0Tmrn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToQtmr0Tmrn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToQtmr0Tmrn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToQtmr0Tmrn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToQtmr0Tmrn
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToQtmr0Tmrn
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToQtmr0Tmrn
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToQtmr0Tmrn
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToQtmr0Tmrn
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToQtmr0Tmrn
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToQtmr0Tmrn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToQtmr0Tmrn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToQtmr0Tmrn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToQtmr0Tmrn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToQtmr0Tmrn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToQtmr0Tmrn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToQtmr0Tmrn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToQtmr0Tmrn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToQtmr0Tmrn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToQtmr0Tmrn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToQtmr0Tmrn
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToQtmr0Tmrn
lcsense_sequencer_primary_trigger_glue_out is selected SOC_GLUE_XOR0_INn:
SOC_GLUE_XOR0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueXor0Inn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueXor0Inn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueXor0Inn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueXor0Inn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueXor0Inn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueXor0Inn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueXor0Inn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueXor0Inn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueXor0Inn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToSocGlueXor0Inn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToSocGlueXor0Inn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToSocGlueXor0Inn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToSocGlueXor0Inn
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueXor0Inn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueXor0Inn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToSocGlueXor0Inn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToSocGlueXor0Inn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToSocGlueXor0Inn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToSocGlueXor0Inn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToSocGlueXor0Inn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToSocGlueXor0Inn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToSocGlueXor0Inn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToSocGlueXor0Inn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToSocGlueXor0Inn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToSocGlueXor0Inn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToSocGlueXor0Inn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToSocGlueXor0Inn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToSocGlueXor0Inn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToSocGlueXor0Inn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToSocGlueXor0Inn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToSocGlueXor0Inn
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToSocGlueXor0Inn
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToSocGlueXor0Inn
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToSocGlueXor0Inn
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToSocGlueXor0Inn
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToSocGlueXor0Inn
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueXor0Inn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueXor0Inn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueXor0Inn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueXor0Inn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToSocGlueXor0Inn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueXor0Inn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueXor0Inn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToSocGlueXor0Inn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToSocGlueXor0Inn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToSocGlueXor0Inn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToSocGlueXor0Inn
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueXor0Inn
lcsense_sequencer_primary_trigger_glue_out is selected QTMR1_TMRn: QTMR1 Input Connections

enumerator kINPUTMUXAON_AonTrigIn0ToQtmr1Tmrn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToQtmr1Tmrn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToQtmr1Tmrn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToQtmr1Tmrn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToQtmr1Tmrn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToQtmr1Tmrn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToQtmr1Tmrn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToQtmr1Tmrn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToQtmr1Tmrn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToQtmr1Tmrn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToQtmr1Tmrn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToQtmr1Tmrn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToQtmr1Tmrn
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToQtmr1Tmrn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToQtmr1Tmrn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToQtmr1Tmrn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToQtmr1Tmrn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToQtmr1Tmrn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToQtmr1Tmrn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToQtmr1Tmrn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToQtmr1Tmrn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToQtmr1Tmrn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToQtmr1Tmrn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0OToQtmr1Tmrn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToQtmr1Tmrn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToQtmr1Tmrn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToQtmr1Tmrn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToQtmr1Tmrn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToQtmr1Tmrn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToQtmr1Tmrn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToQtmr1Tmrn
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToQtmr1Tmrn
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToQtmr1Tmrn
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToQtmr1Tmrn
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToQtmr1Tmrn
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToQtmr1Tmrn
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToQtmr1Tmrn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToQtmr1Tmrn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToQtmr1Tmrn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToQtmr1Tmrn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToQtmr1Tmrn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToQtmr1Tmrn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToQtmr1Tmrn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToQtmr1Tmrn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToQtmr1Tmrn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToQtmr1Tmrn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToQtmr1Tmrn
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToQtmr1Tmrn
lcsense_sequencer_primary_trigger_glue_out is selected ACMP0_TRIGn: ACMP0 Input Connections

enumerator kINPUTMUXAON_AonTrigIn0ToAcmp0Trign
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToAcmp0Trign
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToAcmp0Trign
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToAcmp0Trign
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToAcmp0Trign
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToAcmp0Trign
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToAcmp0Trign
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToAcmp0Trign
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToAcmp0Trign
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToAcmp0Trign
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToAcmp0Trign
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToAcmp0Trign
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToAcmp0Trign
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToAcmp0Trign
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToAcmp0Trign
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToAcmp0Trign
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToAcmp0Trign
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToAcmp0Trign
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_WuuOToAcmp0Trign
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToAcmp0Trign
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToAcmp0Trign
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToAcmp0Trign
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToAcmp0Trign
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToAcmp0Trign
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_Acmp0RacoToAcmp0Trign
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToAcmp0Trign
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToAcmp0Trign
soc_glue_xor0_out is selected LPADC0_TRIGN: LPADC trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLpadc0Trign
aon_trig_in0 is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLpadc0Trign
aon_trig_in1 is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLpadc0Trign
aon_trig_in2 is selected

enumerator kINPUTMUXAON_AonTrigIn03ToLpadc0Trign
aon_trig_in03 is selected

enumerator kINPUTMUXAON_AonTrigIn04ToLpadc0Trign
aon_trig_in04 is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLpadc0Trign
aon_trig_in5 is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLpadc0Trign
aon_trig_in6 is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLpadc0Trign
aon_trig_in7 is selected

enumerator kINPUTMUXAON_Cm33TeToLpadc0Trign
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToLpadc0Trign
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToLpadc0Trign
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToLpadc0Trign
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToLpadc0Trign
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToLpadc0Trign
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToLpadc0Trign
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLpadc0Trign
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLpadc0Trign
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLpadc0Trign
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLpadc0Trign
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Wuu0ToLpadc0Trign
wu0 output is selected

enumerator kINPUTMUXAON_GpioApet0ToLpadc0Trign
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_Acmp0RacoToLpadc0Trign
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLpadc0Trign
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLpadc0Trign
soc_glue_xor0_out is selected AON_TRIG_OUTn: AON Trigger Output Connections

enumerator kINPUTMUXAON_Cm33TeToAonTrigOutn
cm33 transmit event is selected

enumerator kINPUTMUXAON_AonLpuart0ToAonTrigOutn
aon_lpuart0

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToAonTrigOutn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToAonTrigOutn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToAonTrigOutn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_ParkedOutIntvertedToAonTrigOutn
parked_out_intverted is selected

enumerator kINPUTMUXAON_AonLptmr0ToAonTrigOutn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Lpcomp0OutToAonTrigOutn
lpcomp0_out is selected

enumerator kINPUTMUXAON_Acmp0RacoToAonTrigOutn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToAonTrigOutn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToAonTrigOutn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToAonTrigOutn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToAonTrigOutn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToAonTrigOutn
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToAonTrigOutn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToAonTrigOutn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToAonTrigOutn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToAonTrigOutn
qtmr1 channel[3] output is selected SOC_GLUE_CMPPADS_PCTRL_XOR_IN0:
SOC_GLUE_CMPPADS_PCTRL_XOR_IN0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueCmppadsPctrlXorIn0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueCmppadsPctrlXorIn0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueCmppadsPctrlXorIn0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueCmppadsPctrlXorIn0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueCmppadsPctrlXorIn0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueCmppadsPctrlXorIn0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueCmppadsPctrlXorIn0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueCmppadsPctrlXorIn0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueCmppadsPctrlXorIn0
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToSocGlueCmppadsPctrlXorIn0
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToSocGlueCmppadsPctrlXorIn0
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToSocGlueCmppadsPctrlXorIn0
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToSocGlueCmppadsPctrlXorIn0
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueCmppadsPctrlXorIn0
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueCmppadsPctrlXorIn0
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToSocGlueCmppadsPctrlXorIn0
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToSocGlueCmppadsPctrlXorIn0
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToSocGlueCmppadsPctrlXorIn0
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToSocGlueCmppadsPctrlXorIn0
lpuart0 receive line idle is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToSocGlueCmppadsPctrlXorIn0
lpadc trigger complete pulse output[0] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToSocGlueCmppadsPctrlXorIn0
lpadc trigger complete pulse output[1] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToSocGlueCmppadsPctrlXorIn0
lpadc trigger complete pulse output[2] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToSocGlueCmppadsPctrlXorIn0
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToSocGlueCmppadsPctrlXorIn0
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToSocGlueCmppadsPctrlXorIn0
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToSocGlueCmppadsPctrlXorIn0
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToSocGlueCmppadsPctrlXorIn0
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToSocGlueCmppadsPctrlXorIn0
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToSocGlueCmppadsPctrlXorIn0
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToSocGlueCmppadsPctrlXorIn0
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToSocGlueCmppadsPctrlXorIn0
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToSocGlueCmppadsPctrlXorIn0
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToSocGlueCmppadsPctrlXorIn0
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueCmppadsPctrlXorIn0
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueCmppadsPctrlXorIn0
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueCmppadsPctrlXorIn0
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueCmppadsPctrlXorIn0
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToSocGlueCmppadsPctrlXorIn0
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueCmppadsPctrlXorIn0
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueCmppadsPctrlXorIn0
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToSocGlueCmppadsPctrlXorIn0
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToSocGlueCmppadsPctrlXorIn0
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToSocGlueCmppadsPctrlXorIn0
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToSocGlueCmppadsPctrlXorIn0
qtmr0 channel[3] output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueCmppadsPctrlXorIn0
lcsense_sequencer_primary_trigger_glue_out is selected
SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0: SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0
trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToSocGlueCtrlpadsPctrlXorIn0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToSocGlueCtrlpadsPctrlXorIn0
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToSocGlueCtrlpadsPctrlXorIn0
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToSocGlueCtrlpadsPctrlXorIn0
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToSocGlueCtrlpadsPctrlXorIn0
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToSocGlueCtrlpadsPctrlXorIn0
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToSocGlueCtrlpadsPctrlXorIn0
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToSocGlueCtrlpadsPctrlXorIn0
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToSocGlueCtrlpadsPctrlXorIn0
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToSocGlueCtrlpadsPctrlXorIn0
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToSocGlueCtrlpadsPctrlXorIn0
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToSocGlueCtrlpadsPctrlXorIn0
lpuart0 receive line idle is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToSocGlueCtrlpadsPctrlXorIn0
lpadc trigger complete pulse output[0] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToSocGlueCtrlpadsPctrlXorIn0
lpadc trigger complete pulse output[1] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToSocGlueCtrlpadsPctrlXorIn0
lpadc trigger complete pulse output[2] is selected

enumerator
kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToSocGlueCtrlpadsPctrlXorIn0
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToSocGlueCtrlpadsPctrlXorIn0
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToSocGlueCtrlpadsPctrlXorIn0
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToSocGlueCtrlpadsPctrlXorIn0
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToSocGlueCtrlpadsPctrlXorIn0
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToSocGlueCtrlpadsPctrlXorIn0
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToSocGlueCtrlpadsPctrlXorIn0
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToSocGlueCtrlpadsPctrlXorIn0
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToSocGlueCtrlpadsPctrlXorIn0
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToSocGlueCtrlpadsPctrlXorIn0
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToSocGlueCtrlpadsPctrlXorIn0
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToSocGlueCtrlpadsPctrlXorIn0
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToSocGlueCtrlpadsPctrlXorIn0
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToSocGlueCtrlpadsPctrlXorIn0
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToSocGlueCtrlpadsPctrlXorIn0
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToSocGlueCtrlpadsPctrlXorIn0
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToSocGlueCtrlpadsPctrlXorIn0
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToSocGlueCtrlpadsPctrlXorIn0
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToSocGlueCtrlpadsPctrlXorIn0
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToSocGlueCtrlpadsPctrlXorIn0
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToSocGlueCtrlpadsPctrlXorIn0
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToSocGlueCtrlpadsPctrlXorIn0
qtmr0 channel[3] output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToSocGlueCtrlpadsPctrlXorIn0
lcsense_sequencer_primary_trigger_glue_out is selected LC_ROT_SOC_LOGIC_IN:
LC_ROT_SOC_LOGIC_IN trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLcRotSocLogicIn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLcRotSocLogicIn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLcRotSocLogicIn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLcRotSocLogicIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLcRotSocLogicIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLcRotSocLogicIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLcRotSocLogicIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLcRotSocLogicIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLcRotSocLogicIn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLcRotSocLogicIn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLcRotSocLogicIn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLcRotSocLogicIn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLcRotSocLogicIn
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToLcRotSocLogicIn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToLcRotSocLogicIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToLcRotSocLogicIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToLcRotSocLogicIn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToLcRotSocLogicIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToLcRotSocLogicIn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToLcRotSocLogicIn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToLcRotSocLogicIn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToLcRotSocLogicIn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToLcRotSocLogicIn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToLcRotSocLogicIn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToLcRotSocLogicIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToLcRotSocLogicIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToLcRotSocLogicIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToLcRotSocLogicIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToLcRotSocLogicIn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToLcRotSocLogicIn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToLcRotSocLogicIn
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToLcRotSocLogicIn
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToLcRotSocLogicIn
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToLcRotSocLogicIn
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToLcRotSocLogicIn
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToLcRotSocLogicIn
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToLcRotSocLogicIn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLcRotSocLogicIn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToLcRotSocLogicIn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToLcRotSocLogicIn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToLcRotSocLogicIn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLcRotSocLogicIn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLcRotSocLogicIn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToLcRotSocLogicIn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToLcRotSocLogicIn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToLcRotSocLogicIn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToLcRotSocLogicIn
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToLcRotSocLogicIn
lcsense_sequencer_primary_trigger_glue_out is selected LC-
SENSE_SEQ_PTRIG_GLUE_IN: LcSENSE_SEQ_PTRIG_GLUE_IN trigger input con-
nections

enumerator kINPUTMUXAON_AonTrigIn0ToLcsenseSeqPtrigGlueIn
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLcsenseSeqPtrigGlueIn
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLcsenseSeqPtrigGlueIn
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLcsenseSeqPtrigGlueIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLcsenseSeqPtrigGlueIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLcsenseSeqPtrigGlueIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLcsenseSeqPtrigGlueIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLcsenseSeqPtrigGlueIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLcsenseSeqPtrigGlueIn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLcsenseSeqPtrigGlueIn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLcsenseSeqPtrigGlueIn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLcsenseSeqPtrigGlueIn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLcsenseSeqPtrigGlueIn
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToLcsenseSeqPtrigGlueIn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToLcsenseSeqPtrigGlueIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToLcsenseSeqPtrigGlueIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToLcsenseSeqPtrigGlueIn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToLcsenseSeqPtrigGlueIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToLcsenseSeqPtrigGlueIn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToLcsenseSeqPtrigGlueIn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToLcsenseSeqPtrigGlueIn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToLcsenseSeqPtrigGlueIn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToLcsenseSeqPtrigGlueIn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToLcsenseSeqPtrigGlueIn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToLcsenseSeqPtrigGlueIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToLcsenseSeqPtrigGlueIn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToLcsenseSeqPtrigGlueIn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToLcsenseSeqPtrigGlueIn
qtmr0 counter[2] direction is selected

```

enumerator kINPUTMUXAON_Qtmr0Counter3dirToLcsenseSeqPtrigGlueIn
    qtmr0 counter[3] direction is selected
enumerator kINPUTMUXAON_Qtmr1Counter0dirToLcsenseSeqPtrigGlueIn
    qtmr1 counter[0] direction is selected
enumerator kINPUTMUXAON_Qtmr1Counter1dirToLcsenseSeqPtrigGlueIn
    qtmr1 counter[1] direction is selected
enumerator kINPUTMUXAON_Qtmr1Counter2dirToLcsenseSeqPtrigGlueIn
    qtmr1 counter[2] direction is selected
enumerator kINPUTMUXAON_Qtmr1Counter3dirToLcsenseSeqPtrigGlueIn
    qtmr1 counter[3] direction is selected
enumerator kINPUTMUXAON_Acmp0RacoToLcsenseSeqPtrigGlueIn
    acmp0 raw analog comparator output
enumerator kINPUTMUXAON_Acmp0AonCoutToLcsenseSeqPtrigGlueIn
    acmp0_aon_cout is selected
enumerator kINPUTMUXAON_Logic0ToLcsenseSeqPtrigGlueIn
    logic_0 is selected
enumerator kINPUTMUXAON_Logic1ToLcsenseSeqPtrigGlueIn
    logic_1 is selected
enumerator kINPUTMUXAON_WuuOToLcsenseSeqPtrigGlueIn
    wuu output is selected
enumerator kINPUTMUXAON_GpioApet0ToLcsenseSeqPtrigGlueIn
    gpio (aon) pin event trig 0 input is selected
enumerator kINPUTMUXAON_SocGlueXor0OutToLcsenseSeqPtrigGlueIn
    soc_glue_xor0_out is selected
enumerator kINPUTMUXAON_Qtmr0Channel0ToLcsenseSeqPtrigGlueIn
    qtmr0 channel[0] output is selected
enumerator kINPUTMUXAON_Qtmr0Channel1ToLcsenseSeqPtrigGlueIn
    qtmr0 channel[1] output is selected
enumerator kINPUTMUXAON_Qtmr0Channel2ToLcsenseSeqPtrigGlueIn
    qtmr0 channel[2] output is selected
enumerator kINPUTMUXAON_Qtmr0Channel3ToLcsenseSeqPtrigGlueIn
    qtmr0 channel[3] output is selected
enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToLcsenseSeqPtrigGlueIn
    lcsense_sequencer_primary_trigger_glue_out is selected LC-
    SENSE_SEQ_TICKS_GLUE_IN: LCSenseSeqTicksGlueIn trigger input con-
    nections
enumerator kINPUTMUXAON_AonTrigIn0ToLcsenseSeqTicksGlueIn
    aon_trig_in0 input is selected
enumerator kINPUTMUXAON_AonTrigIn1ToLcsenseSeqTicksGlueIn
    aon_trig_in1 input is selected
enumerator kINPUTMUXAON_AonTrigIn2ToLcsenseSeqTicksGlueIn
    aon_trig_in2 input is selected

```

enumerator kINPUTMUXAON_AonTrigIn3ToLcsenseSeqTicksGlueIn
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLcsenseSeqTicksGlueIn
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLcsenseSeqTicksGlueIn
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLcsenseSeqTicksGlueIn
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLcsenseSeqTicksGlueIn
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLcsenseSeqTicksGlueIn
cm33 transmit event is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLcsenseSeqTicksGlueIn
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLcsenseSeqTicksGlueIn
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLcsenseSeqTicksGlueIn
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLcsenseSeqTicksGlueIn
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Cmp0OutToLcsenseSeqTicksGlueIn
cmp0_out is selected

enumerator kINPUTMUXAON_Lpi2c0CeopToLcsenseSeqTicksGlueIn
lpi2c0 controller end of packet is selected

enumerator kINPUTMUXAON_Lpi2c0TeopToLcsenseSeqTicksGlueIn
lpi2c0 target end of packet is selected

enumerator kINPUTMUXAON_Lpuart0RdwToLcsenseSeqTicksGlueIn
lpuart0 received data word is selected

enumerator kINPUTMUXAON_Lpuart0TdwToLcsenseSeqTicksGlueIn
lpuart0 transmitted data word is selected

enumerator kINPUTMUXAON_Lpuart0RliToLcsenseSeqTicksGlueIn
lpuart0 receive line idle is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToLcsenseSeqTicksGlueIn
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToLcsenseSeqTicksGlueIn
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToLcsenseSeqTicksGlueIn
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToLcsenseSeqTicksGlueIn
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_AonLptmr0ToLcsenseSeqTicksGlueIn
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut1ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out1 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut2ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out2 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut3ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out3 is selected

enumerator kINPUTMUXAON_LcRotSocLogicOut4ToLcsenseSeqTicksGlueIn
lc_rot_soc_logic_out4 is selected

enumerator kINPUTMUXAON_Qtmr0Counter0dirToLcsenseSeqTicksGlueIn
qtmr0 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter1dirToLcsenseSeqTicksGlueIn
qtmr0 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter2dirToLcsenseSeqTicksGlueIn
qtmr0 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr0Counter3dirToLcsenseSeqTicksGlueIn
qtmr0 counter[3] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter0dirToLcsenseSeqTicksGlueIn
qtmr1 counter[0] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter1dirToLcsenseSeqTicksGlueIn
qtmr1 counter[1] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter2dirToLcsenseSeqTicksGlueIn
qtmr1 counter[2] direction is selected

enumerator kINPUTMUXAON_Qtmr1Counter3dirToLcsenseSeqTicksGlueIn
qtmr1 counter[3] direction is selected

enumerator kINPUTMUXAON_Acmp0RacoToLcsenseSeqTicksGlueIn
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLcsenseSeqTicksGlueIn
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_Logic0ToLcsenseSeqTicksGlueIn
logic_0 is selected

enumerator kINPUTMUXAON_Logic1ToLcsenseSeqTicksGlueIn
logic_1 is selected

enumerator kINPUTMUXAON_WuuOToLcsenseSeqTicksGlueIn
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLcsenseSeqTicksGlueIn
gpio (aon) pin event trig 0 input is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLcsenseSeqTicksGlueIn
soc_glue_xor0_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToLcsenseSeqTicksGlueIn
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToLcsenseSeqTicksGlueIn
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToLcsenseSeqTicksGlueIn
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToLcsenseSeqTicksGlueIn
qtmr0 channel[3] output is selected

enumerator
kINPUTMUXAON_LcsenseSequencerPrimaryTriggerGlueOutToLcsenseSeqTicksGlueIn
lcsense_sequencer_primary_trigger_glue_out is selected CMP0_SAMPLE: ACMP0 SAMPLE input connections

enumerator kINPUTMUXAON_AonTrigIn0ToCmp0Sample
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToCmp0Sample
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToCmp0Sample
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToCmp0Sample
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToCmp0Sample
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToCmp0Sample
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToCmp0Sample
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToCmp0Sample
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToCmp0Sample
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToCmp0Sample
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToCmp0Sample
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToCmp0Sample
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToCmp0Sample
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToCmp0Sample
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToCmp0Sample
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToCmp0Sample
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToCmp0Sample
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToCmp0Sample
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToCmp0Sample
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_WuuOToCmp0Sample
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToCmp0Sample
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToCmp0Sample
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToCmp0Sample
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToCmp0Sample
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToCmp0Sample
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToCmp0Sample
soc_glue_xor0_out is selected CMP0_RR_TRIG: ACMP0 RR trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToCmp0RrTrig
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToCmp0RrTrig
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToCmp0RrTrig
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToCmp0RrTrig
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToCmp0RrTrig
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToCmp0RrTrig
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToCmp0RrTrig
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToCmp0RrTrig
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToCmp0RrTrig
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToCmp0RrTrig
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToCmp0RrTrig
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToCmp0RrTrig
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToCmp0RrTrig
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToCmp0RrTrig
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToCmp0RrTrig
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToCmp0RrTrig
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToCmp0RrTrig
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToCmp0RrTrig
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToCmp0RrTrig
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_Wuu0ToCmp0RrTrig
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToCmp0RrTrig
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToCmp0RrTrig
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToCmp0RrTrig
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToCmp0RrTrig
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToCmp0RrTrig
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToCmp0RrTrig
soc_glue_xor0_out is selected LPI2C0_TRIG: LPI2C0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLpi2c0Trig
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLpi2c0Trig
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLpi2c0Trig
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLpi2c0Trig
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLpi2c0Trig
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLpi2c0Trig
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLpi2c0Trig
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLpi2c0Trig
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLpi2c0Trig
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToLpi2c0Trig
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToLpi2c0Trig
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToLpi2c0Trig
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToLpi2c0Trig
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToLpi2c0Trig
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToLpi2c0Trig
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLpi2c0Trig
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLpi2c0Trig
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLpi2c0Trig
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLpi2c0Trig
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_WuuOToLpi2c0Trig
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLpi2c0Trig
gpio (aon) pin event trig 0 is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput0ToLpi2c0Trig
lpadc trigger complete pulse output[0] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput1ToLpi2c0Trig
lpadc trigger complete pulse output[1] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput2ToLpi2c0Trig
lpadc trigger complete pulse output[2] is selected

enumerator kINPUTMUXAON_LpadcTriggerCompletePulseOutput3ToLpi2c0Trig
lpadc trigger complete pulse output[3] is selected

enumerator kINPUTMUXAON_Acmp0RacoToLpi2c0Trig
acmp0 raw analog comparator output

enumerator kINPUTMUXAON_Acmp0AonCoutToLpi2c0Trig
acmp0_aon_cout is selected

enumerator kINPUTMUXAON_SocGlueXor0OutToLpi2c0Trig
soc_glue_xor0_out is selected LPUART0: LPUART0 trigger input connections

enumerator kINPUTMUXAON_AonTrigIn0ToLPUART0
aon_trig_in0 input is selected

enumerator kINPUTMUXAON_AonTrigIn1ToLPUART0
aon_trig_in1 input is selected

enumerator kINPUTMUXAON_AonTrigIn2ToLPUART0
aon_trig_in2 input is selected

enumerator kINPUTMUXAON_AonTrigIn3ToLPUART0
aon_trig_in3 input is selected

enumerator kINPUTMUXAON_AonTrigIn4ToLPUART0
aon_trig_in4 input is selected

enumerator kINPUTMUXAON_AonTrigIn5ToLPUART0
aon_trig_in5 input is selected

enumerator kINPUTMUXAON_AonTrigIn6ToLPUART0
aon_trig_in6 input is selected

enumerator kINPUTMUXAON_AonTrigIn7ToLPUART0
aon_trig_in7 input is selected

enumerator kINPUTMUXAON_Cm33TeToLPUART0
cm33 transmit event is selected

enumerator kINPUTMUXAON_LpcmpOutToLPUART0
lpcmp_out is selected

enumerator kINPUTMUXAON_Qtmr0Channel0ToLPUART0
qtmr0 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel1ToLPUART0
qtmr0 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel2ToLPUART0
qtmr0 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr0Channel3ToLPUART0
qtmr0 channel[3] output is selected

enumerator kINPUTMUXAON_AonLptmr0ToLPUART0
aon.lptmr0 output is selected

enumerator kINPUTMUXAON_Qtmr1Channel0ToLPUART0
qtmr1 channel[0] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel1ToLPUART0
qtmr1 channel[1] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel2ToLPUART0
qtmr1 channel[2] output is selected

enumerator kINPUTMUXAON_Qtmr1Channel3ToLPUART0
qtmr1 channel[3] output is selected

enumerator kINPUTMUXAON_WuuOToLPUART0
wuu output is selected

enumerator kINPUTMUXAON_GpioApet0ToLPUART0
gpio (aon) pin event trig 0 is selected

```

enumerator kINPUTMUX_AON_LpadcTriggerCompletePulseOutput0ToLPUART0
    lpadc trigger complete pulse output[0] is selected
enumerator kINPUTMUX_AON_LpadcTriggerCompletePulseOutput1ToLPUART0
    lpadc trigger complete pulse output[1] is selected
enumerator kINPUTMUX_AON_LpadcTriggerCompletePulseOutput2ToLPUART0
    lpadc trigger complete pulse output[2] is selected
enumerator kINPUTMUX_AON_LpadcTriggerCompletePulseOutput3ToLPUART0
    lpadc trigger complete pulse output[3] is selected
enumerator kINPUTMUX_AON_Acmp0RacoToLPUART0
    acmp0 raw analog comparator output
enumerator kINPUTMUX_AON_Acmp0AonCoutToLPUART0
    acmp0_aon_cout is selected
enumerator kINPUTMUX_SOC_GlueXor0OutToLPUART0
    soc_glue_xor0_out is selected
typedef enum _inputmux_index_t inputmux_index_t
typedef enum _inputmux_connection_t inputmux_connection_t
    INPUTMUX connections type.
QTMR0_TMRn_REG
    Periphinmux IDs.
SOC_GLUE_XOR0_INn_REG
QTMR1_TMRn_REG
ACMP0_TRIGn_REG
LPADC0_TRIGn_REG
AON_TRIG_OUTn_REG
SOC_GLUE_CMPPADS_PCTRL_XOR_IN0_REG
SOC_GLUE_CTRLPADS_PCTRL_XOR_IN0_REG
LC_ROT_SOC_LOGIC_IN_REG
LCSENSE_SEQ_PTRIG_GLUE_IN_REG
LCSENSE_SEQ_TICKS_GLUE_IN_REG
CMP0_SAMPLE_REG
CMP0_RR_TRIG_REG
LPI2C0_TRIG_REG
LPUART0_REG
PMUX_SHIFT
FSL_INPUTMUX_DRIVER_VERSION
    Group interrupt driver version for SDK.

```

`void INPUTMUX__Init(void *base)`

Initialize INPUTMUX peripheral.

This function enables the INPUTMUX clock.

Parameters

- `base` – Base address of the INPUTMUX peripheral.

Return values

None. –

`void INPUTMUX__AttachSignal(void *base, uint16_t index, inputmux_connection_t connection)`

Attaches a signal.

This function attaches multiplexed signals from INPUTMUX to target signals. For example, to attach GPIO PORT0 Pin 5 to PINT peripheral, do the following:

```
INPUTMUX__AttachSignal(INPUTMUX, 2, kINPUTMUX__GpioPort0Pin5ToPintsel);
```

In this example, INTMUX has 8 registers for PINT, PINT_SELO~PINT_SEL7. With parameter `index` specified as 2, this function configures register PINT_SEL2.

Parameters

- `base` – Base address of the INPUTMUX peripheral.
- `index` – The serial number of destination register in the group of INPUTMUX registers with same name.
- `connection` – Applies signal from source signals collection to target signal.

Return values

None. –

`void INPUTMUX__Deinit(void *base)`

Deinitialize INPUTMUX peripheral.

This function disables the INPUTMUX clock.

Parameters

- `base` – Base address of the INPUTMUX peripheral.

Return values

None. –

2.20 KPP: KeyPad Port Driver

`void KPP__Init(KPP_Type *base, kpp_config_t *configure)`

KPP initialize. This function ungates the KPP clock and initializes KPP. This function must be called before calling any other KPP driver functions.

Parameters

- `base` – KPP peripheral base address.
- `configure` – The KPP configuration structure pointer.

`void KPP__Deinit(KPP_Type *base)`

Deinitializes the KPP module and gates the clock. This function gates the KPP clock. As a result, the KPP module doesn't work after calling this function.

Parameters

- `base` – KPP peripheral base address.

static inline void KPP_EnableInterrupts(KPP_Type *base, uint16_t mask)

Enable the interrupt.

Parameters

- base – KPP peripheral base address.
- mask – KPP interrupts to enable. This is a logical OR of the enumeration :: kpp_interrupt_enable_t.

static inline void KPP_DisableInterrupts(KPP_Type *base, uint16_t mask)

Disable the interrupt.

Parameters

- base – KPP peripheral base address.
- mask – KPP interrupts to disable. This is a logical OR of the enumeration :: kpp_interrupt_enable_t.

static inline uint16_t KPP_GetStatusFlag(KPP_Type *base)

Gets the KPP interrupt event status.

Parameters

- base – KPP peripheral base address.

Returns

The status of the KPP. Application can use the enum type in the “kpp_interrupt_enable_t” to get the right status of the related event.

static inline void KPP_ClearStatusFlag(KPP_Type *base, uint16_t mask)

Clears KPP status flag.

Parameters

- base – KPP peripheral base address.
- mask – KPP mask to be cleared. This is a logical OR of the enumeration :: kpp_interrupt_enable_t.

static inline void KPP_SetSynchronizeChain(KPP_Type *base, uint16_t mask)

Set KPP synchronization chain.

Parameters

- base – KPP peripheral base address.
- mask – KPP mask to be cleared. This is a logical OR of the enumeration :: kpp_sync_operation_t.

status_t KPP_keyPressScanning(KPP_Type *base, uint8_t *data, uint32_t clockSrc_Hz)

Keypad press scanning.

This function will scanning all columns and rows. so all scanning data will be stored in the data pointer.

Parameters

- base – KPP peripheral base address.
- data – KPP key press scanning data. The data buffer should be prepared with length at least equal to KPP_KEYPAD_COLUMNNUM_MAX * KPP_KEYPAD_ROWNUM_MAX. the data pointer is recommended to be a array like uint8_t data[KPP_KEYPAD_COLUMNNUM_MAX]. for example the data[2] = 4, that means in column 1 row 2 has a key press event.
- clockSrc_Hz – Source clock.

Return values

kStatus_Success – kpp press scan succeed.

FSL_KPP_DRIVER_VERSION

KPP driver version.

enum _kpp_interrupt_enable

List of interrupts supported by the peripheral. This enumeration uses one-hot encoding to allow a logical OR of multiple members. Members usually map to interrupt enable bits in one or more peripheral registers.

Values:

enumerator kKPP_keyDepressInterrupt

Keypad depress interrupt source

enumerator kKPP_keyReleaseInterrupt

Keypad release interrupt source

enum _kpp_sync_operation

Lists of KPP synchronize chain operation.

Values:

enumerator kKPP_ClearKeyDepressSyncChain

Keypad depress interrupt status.

enumerator kKPP_SetKeyReleasesSyncChain

Keypad release interrupt status.

typedef enum _kpp_interrupt_enable kpp_interrupt_enable_t

List of interrupts supported by the peripheral. This enumeration uses one-hot encoding to allow a logical OR of multiple members. Members usually map to interrupt enable bits in one or more peripheral registers.

typedef enum _kpp_sync_operation kpp_sync_operation_t

Lists of KPP synchronize chain operation.

typedef struct _kpp_config kpp_config_t

Lists of KPP status.

KPP_KEYPAD_COLUMNNUM_MAX

KPP_KEYPAD_ROWNUM_MAX

struct _kpp_config

#include <fsl_kpp.h> Lists of KPP status.

Public Members

uint8_t activeRow

The row number: bit 7 ~ 0 represents the row 7 ~ 0.

uint8_t activeColumn

The column number: bit 7 ~ 0 represents the column 7 ~ 0.

uint16_t interrupt

KPP interrupt source. A logical OR of “kpp_interrupt_enable_t”.

2.21 Common Driver

FSL_COMMON_DRIVER_VERSION

common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE

No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART

Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(*a*, *b*)

Computes the minimum of *a* and *b*.

MAX(*a*, *b*)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(*addr*, *val*)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(*addr*, *val*)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(*addr*, *bits*)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(*addr*, *bits*)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true**, else return **false**.

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_ALIGN(var, alignbytes)

Macro to define a variable with alignbytes alignment

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value (rounded up)

SDK_SIZEALIGN_UP(var, alignbytes)

Macro to change a value to a given size aligned value (rounded up), the wrapper of SDK_SIZEALIGN

SDK_SIZEALIGN_DOWN(var, alignbytes)

Macro to change a value to a given size aligned value (rounded down)

SDK_IS_ALIGNED(var, alignbytes)

Macro to check if a value is aligned to a given size

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_CACHE_LINE_SECTION(*var*)

Define a variable *var*, which is cache line size aligned and be placed in CacheLineData section.

AT_CACHE_LINE_SECTION_INIT(*var*)

Define a variable *var* with initial value, which is cache line size aligned and be placed in CacheLineData.init section.

AT_QUICKACCESS_SECTION_CODE(*func*)

Place function in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA(*var*)

Place data in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA_ALIGN(*var*, *alignbytes*)

Place data in a section which can be accessed quickly by core, and the variable address is set to align with *alignbytes*.

MCUX_RAMFUNC

Function attribute to place function in RAM. For example, to place function *my_func* in ram, use like:

```
MCUX_RAMFUNC my_func
```

RAMFUNCTION_SECTION_CODE(*func*)

Place function in ram.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic

Group number for generic status codes.

enumerator kStatusGroup_FLASH

Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI

Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI

Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI

Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART

Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C

Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C

Group number for LPI2C status codes.

enumerator kStatusGroup_UART

Group number for UART status codes.

enumerator kStatusGroup_I2C

Group number for UART status codes.

enumerator `kStatusGroup_LPSCI`
Group number for LPSCI status codes.

enumerator `kStatusGroup_LPUART`
Group number for LPUART status codes.

enumerator `kStatusGroup_SPI`
Group number for SPI status code.

enumerator `kStatusGroup_XRDC`
Group number for XRDC status code.

enumerator `kStatusGroup_SEMA42`
Group number for SEMA42 status code.

enumerator `kStatusGroup_SDHC`
Group number for SDHC status code

enumerator `kStatusGroup_SDMMC`
Group number for SDMMC status code

enumerator `kStatusGroup_SAI`
Group number for SAI status code

enumerator `kStatusGroup_MCG`
Group number for MCG status codes.

enumerator `kStatusGroup_SCG`
Group number for SCG status codes.

enumerator `kStatusGroup_SDSPI`
Group number for SDSPI status codes.

enumerator `kStatusGroup_FLEXIO_I2S`
Group number for FLEXIO I2S status codes

enumerator `kStatusGroup_FLEXIO_MCULCD`
Group number for FLEXIO LCD status codes

enumerator `kStatusGroup_FLASHIAP`
Group number for FLASHIAP status codes

enumerator `kStatusGroup_FLEXCOMM_I2C`
Group number for FLEXCOMM I2C status codes

enumerator `kStatusGroup_I2S`
Group number for I2S status codes

enumerator `kStatusGroup_IUART`
Group number for IUART status codes

enumerator `kStatusGroup_CSI`
Group number for CSI status codes

enumerator `kStatusGroup_MIPI_DSI`
Group number for MIPI DSI status codes

enumerator `kStatusGroup_SDRAMC`
Group number for SDRAMC status codes.

enumerator `kStatusGroup_POWER`
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup__SFA
Group number for SFA status codes

enumerator kStatusGroup__SPC
Group number for SPC status codes.

enumerator kStatusGroup__PUF
Group number for PUF status codes.

enumerator kStatusGroup__TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup__VBAT
Group number for VBAT status codes

enumerator kStatusGroup__XSPI
Group number for XSPI status codes

enumerator kStatusGroup__PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup__JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup__AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup__HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup__HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup__HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup__HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup__HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup__HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup__HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup__HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup__HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup__HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup__TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup__SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator `kStatusGroup_LED`
Group number for LED status codes.

enumerator `kStatusGroup_BUTTON`
Group number for BUTTON status codes.

enumerator `kStatusGroup_EXTERN_EEPROM`
Group number for EXTERN EEPROM status codes.

enumerator `kStatusGroup_SHELL`
Group number for SHELL status codes.

enumerator `kStatusGroup_MEM_MANAGER`
Group number for MEM MANAGER status codes.

enumerator `kStatusGroup_LIST`
Group number for List status codes.

enumerator `kStatusGroup_OSA`
Group number for OSA status codes.

enumerator `kStatusGroup_COMMON_TASK`
Group number for Common task status codes.

enumerator `kStatusGroup_MSG`
Group number for messaging status codes.

enumerator `kStatusGroup_SDK_OCOTP`
Group number for OCOTP status codes.

enumerator `kStatusGroup_SDK_FLEXSPINOR`
Group number for FLEXSPINOR status codes.

enumerator `kStatusGroup_CODEC`
Group number for codec status codes.

enumerator `kStatusGroup_ASRC`
Group number for codec status ASRC.

enumerator `kStatusGroup_OTFAD`
Group number for codec status codes.

enumerator `kStatusGroup_SDIOSLV`
Group number for SDIOSLV status codes.

enumerator `kStatusGroup_MECC`
Group number for MECC status codes.

enumerator `kStatusGroup_ENET_QOS`
Group number for ENET_QOS status codes.

enumerator `kStatusGroup_LOG`
Group number for LOG status codes.

enumerator `kStatusGroup_I3CBUS`
Group number for I3CBUS status codes.

enumerator `kStatusGroup_QSCI`
Group number for QSCI status codes.

enumerator `kStatusGroup_ELEMU`
Group number for ELEMU status codes.

enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.

enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.

enumerator kStatusGroup_IPED
Group number for IPED status codes.

enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.

enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.

enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

enumerator kStatusGroup_LPC_QSPI
Group number for LPC QSPI status codes.

Generic status return codes.

Values:

enumerator kStatus_Success

Generic status for Success.

enumerator kStatus_Fail

Generic status for Fail.

enumerator kStatus_ReadOnly

Generic status for read only failure.

enumerator kStatus_OutOfRange

Generic status for out of range access.

enumerator kStatus_InvalidArgument

Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline *status_t* EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the

LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline status_t IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

static inline bool __SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t __SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused		Major Version		Minor Version		Bug Fix	
31	25	24	17	16	9	8	0

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_HAS_DWT_CYCCNT

The chip supports DWT CYCCNT or not.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.22 LPACMP: Low-Power Analog Comparator Driver

void LPACMP_Init(LPACMP_Type *base, const *lpacmp_config_t* *config)

Initialize the LPACMP module.

Parameters

- base – LPACMP peripheral base address
- config – Pointer to the LPACMP configuration structure, please refer to *lpacmp_config_t* for details.

void LPACMP_GetDefaultConfig(*lpacmp_config_t* *config)

Gets an available pre-defined settings for LPACMP configuration.

Parameters

- config – Pointer to the LPACMP configuration structure, please refer to *lpacmp_config_t* for details.

void LPACMP_Deinit(LPACMP_Type *base)

De-initializes the LPACMP module.

Parameters

- base – LPACMP peripheral base address

static inline void LPACMP_EnableComparator(LPACMP_Type *base, bool enable)

Enable/Disable comparator module.

Parameters

- base – LPACMP peripheral base address
- enable – Indicates whether to enable the comparator module **true** Enable the comparator module **false** Disable the comparator module

static inline void LPACMP_SetComparatorMode(LPACMP_Type *base, *lpacmp_mode_t* mode)

Set comparator mode.

Parameters

- base – LPACMP peripheral base address
- mode – comparator mode

static inline void LPACMP_SetIntervalTime(LPACMP_Type *base, uint16_t time)

Compare event trigger interval time.

Parameters

- base – LPACMP peripheral base address
- time – Compare event trigger interval time

static inline void LPACMP_ChannelInputSelection(LPACMP_Type *base, uint8_t channel,
lpacmp_positive_input_t positive,
lpacmp_negative_input_t negative)

Channel positive and negative input selection.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- positive – Positive input channel selection
- negative – Negative input channel selection

static inline void LPACMP_SetComparePolarity(LPACMP_Type *base, uint8_t channel, bool
polarity)

Comparison polarity configuration.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- polarity – Comparison polarity
 - **true** When the value we are checking is higher than the reference value. input parameter 'result'.
 - **false** When the value we are checking is lower than the reference value.

static inline void LPACMP_SetDelayValue(LPACMP_Type *base, uint8_t channel, uint16_t delay)
Compare event sample delay value.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- delay – Compare event sample delay value

static inline void LPACMP_SetTriggerOutputWidth(LPACMP_Type *base, uint8_t channel,
uint8_t width)

Set the trigger output width in clock units.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- width – trigger output width

static inline void LPACMP_EnableWakeupToSmm(LPACMP_Type *base, uint8_t channel, bool
enable)

Enable/Disable wakeup to SMM.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- enable – Indicates whether to enable the comparator module
 - **true** Enable the comparator module
 - **false** Disable the comparator module

static inline void LPACMP_EnableTriggerOutput(LPACMP_Type *base, uint8_t channel, bool
enable)

Enable/Disable trigger output.

Parameters

- base – LPACMP peripheral base address
- channel – Channel index (0-3)
- enable – Indicates whether to enable the trigger output
 - **true** Enable the trigger output
 - **false** Disable the trigger output

static inline void LPACMP_EnableChannel(LPACMP_Type *base, uint8_t channel, bool enable)
Enable/Disable channel.

Parameters

- base – LPACMP peripheral base address
- channel – Channel index (0-3)
- enable – Indicates whether to enable the trigger output **true** Enable the trigger output **false** Disable the trigger output

static inline void LPACMP_EnableInterrupt(LPACMP_Type *base, uint8_t channel, bool enable)
Enable/Disable match interrupt for specific channel.

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)
- enable – Indicates whether to enable or disable the match interrupt **true** Enable the match interrupt **false** Disable the match interrupt

static inline void LPACMP_ClearInterruptStatusFlags(LPACMP_Type *base, uint8_t channel)
Clear comparison interrupt status flags.

Remark

Uses Write-1-to-Clear (W1C) mechanism

Parameters

- base – LPACMP peripheral base address
- channel – Trigger channel index (0-3)

static inline uint32_t LPACMP_GetInterruptStatusFlags(LPACMP_Type *base)
Get the comparison interrupt status flag.

Parameters

- base – LPACMP peripheral base address

Returns

Comparison interrupt status flags

FSL_LPACMP_DRIVER_VERSION
LPACMP driver version.

enum _lpacmp_negative_input
Comparator negative input source.

Values:

enumerator kLPACMP_Negative_Input_Avdd_Divide_15
Comparator negative input source 1 x AVDD / 15

enumerator kLPACMP_Negative_Input_2Avdd_Divide_15
Comparator negative input source 2 x AVDD / 15

enumerator kLPACMP_Negative_Input_3Avdd_Divide_15
Comparator negative input source 3 x AVDD / 15

enumerator kLPACMP_Negative_Input_4Avdd_Divide_15
Comparator negative input source 4 x AVDD / 15

enumerator kLPACMP_Negative_Input_5Avdd_Divide_15
Comparator negative input source 5 x AVDD / 15

enumerator kLPACMP_Negative_Input_6Avdd_Divide_15
Comparator negative input source 6 x AVDD / 15

enumerator kLPACMP_Negative_Input_7Avdd_Divide_15
Comparator negative input source 7 x AVDD / 15

enumerator kLPACMP_Negative_Input_8Avdd_Divide_15
Comparator negative input source 8 x AVDD / 15

```

enumerator kLPACMP_Negative_Input_9Avdd_Divide_15
    Comparator negative input source 9 x AVDD / 15
enumerator kLPACMP_Negative_Input_10Avdd_Divide_15
    Comparator negative input source 10 x AVDD / 15
enumerator kLPACMP_Negative_Input_11Avdd_Divide_15
    Comparator negative input source 11 x AVDD / 15
enumerator kLPACMP_Negative_Input_12Avdd_Divide_15
    Comparator negative input source 12 x AVDD / 15
enumerator kLPACMP_Negative_Input_13Avdd_Divide_15
    Comparator negative input source 13 x AVDD / 15
enumerator kLPACMP_Negative_Input_14Avdd_Divide_15
    Comparator negative input source 14 x AVDD / 15
enumerator kLPACMP_Negative_Input_In4
    Comparator negative input source 4
enumerator kLPACMP_Negative_Input_In5
    Comparator negative input source 5
enum _lpacmp_positive_input
    Comparator positive input source.
    Values:
    enumerator kLPACMP_Positive_Input_In4
        Comparator positive input source 4
    enumerator kLPACMP_Positive_Input_In5
        Comparator positive input source 5
    enumerator kLPACMP_Positive_Input_In0
        Comparator positive input source 0
    enumerator kLPACMP_Positive_Input_In1
        Comparator positive input source 1
    enumerator kLPACMP_Positive_Input_In2
        Comparator positive input source 2
    enumerator kLPACMP_Positive_Input_In3
        Comparator positive input source 3
enum _lpacmp_mode
    Comparator operation modes.
    Values:
    enumerator kLPACMP_Continuous_Mode
        Always-on comparison
    enumerator kLPACMP_Interval_Mode
        Periodic sampling with internal timer
    enumerator kLPACMP_Trigger_Mode
        External trigger activation
typedef enum _lpacmp_negative_input lpacmp_negative_input_t
    Comparator negative input source.

```

typedef enum *_lpacmp_positive_input* lpacmp_positive_input_t

Comparator positive input source.

typedef enum *_lpacmp_mode* lpacmp_mode_t

Comparator operation modes.

typedef struct *_lpacmp_channel_config* lpacmp_channel_config_t

Channel configuration structure.

typedef struct *_lpacmp_config* lpacmp_config_t

Comparator configuration structure.

struct *_lpacmp_channel_config*

#include <fsl_lpacmp.h> Channel configuration structure.

Public Members

bool enableWakeupToSmm

Decides whether to enable wakeup to SMM

bool enableTriggerOutput

Decides whether to enable trigger output

bool enableInterrupt

Decides whether to enable match interrupt

bool comparePolarityHigher

Decides comparison polarity

uint8_t channelIndex

Indicates the channel being configured

uint8_t triggerOutputWidth

Sets trigger output width

uint16_t delay

Sets the delay value for which a compare event is sampled

lpacmp_positive_input_t positiveInput

Positive input selection (see RM SELn.INP_SEL)

lpacmp_negative_input_t negativeInput

Negative input selection (see RM SELn.INN_SEL)

struct *_lpacmp_config*

#include <fsl_lpacmp.h> Comparator configuration structure.

Public Members

uint8_t channelCount

Indicates the channel counts

uint16_t intervalTime

Indicates the interval time

lpacmp_mode_t mode

Operating mode

lpacmp_channel_config_t *channelConfig

Channel configuration

2.23 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum `_lpadc_status_flags`

Define hardware flags of the module.

Values:

enumerator `kLPADC_ResultFIFO0OverflowFlag`

Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator `kLPADC_ResultFIFO0ReadyFlag`

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator `kLPADC_TriggerExceptionFlag`

Indicates that a trigger exception event has occurred.

enumerator `kLPADC_TriggerCompletionFlag`

Indicates that a trigger completion event has occurred.

enumerator `kLPADC_CalibrationReadyFlag`

Indicates that the calibration process is done.

enumerator `kLPADC_ActiveFlag`

Indicates that the ADC is in active state.

enumerator `kLPADC_ResultFIFOOverflowFlag`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0OverflowFlag` as instead.

enumerator `kLPADC_ResultFIFOReadyFlag`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0ReadyFlag` as instead.

enum `_lpadc_interrupt_enable`

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator `kLPADC_ResultFIFO0OverflowInterruptEnable`

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator `kLPADC_FIFO0WatermarkInterruptEnable`

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator `kLPADC_ResultFIFOOverflowInterruptEnable`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0OverflowInterruptEnable` as instead.

enumerator `kLPADC_FIFOWatermarkInterruptEnable`

To compilitable with old version, do not recommend using this, please use `kLPADC_FIFO0WatermarkInterruptEnable` as instead.

enumerator `kLPADC_TriggerExceptionInterruptEnable`

Configures ADC to generate trigger exception interrupt.

enumerator `kLPADC_Trigger0CompletionInterruptEnable`

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags

The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag

Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag

Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag

Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag

Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag

Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag

Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag

Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag

Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag

Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag

Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag

Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag

Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag

Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag

Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag

Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag

Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag

Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag

Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag

Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag

Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag

Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag

Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag

Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag

Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag

Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag

Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag

Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag

Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag

Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag

Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum _lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale

Use divided input voltage signal. (For scale select, please refer to the reference manual).

enumerator kLPADC_SampleFullScale

Full scale (Factor of 1).

enum _lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum _lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC_HardwareAverageCount1

Single conversion.

enumerator kLPADC_HardwareAverageCount2

2 conversions averaged.

enumerator kLPADC_HardwareAverageCount4

4 conversions averaged.

enumerator kLPADC_HardwareAverageCount8

8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16

16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32

32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64

64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128

128 conversions averaged.

enum _lpadc_sample_time_mode

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3

3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5

5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7

7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11

11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19
19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35
35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67
69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131
131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled
Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue
Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to `lpadc_sample_channel_mode_t`

Values:

enumerator kLPADC_ConversionResolutionStandard
Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC_ConversionResolutionHigh
High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC_ConversionAverage1
Single conversion.

enumerator kLPADC_ConversionAverage2
2 conversions averaged.

enumerator kLPADC_ConversionAverage4
4 conversions averaged.

enumerator kLPADC_ConversionAverage8
8 conversions averaged.

enumerator kLPADC_ConversionAverage16
16 conversions averaged.

enumerator kLPADC_ConversionAverage32
32 conversions averaged.

enumerator kLPADC_ConversionAverage64
64 conversions averaged.

enumerator kLPADC_ConversionAverage128
128 conversions averaged.

enumerator kLPADC_ConversionAverageMax

enum _lpadc_reference_voltage_mode
Define enumeration of reference voltage source.
For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1
Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2
Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3
Option 3 setting.

enum _lpadc_power_level_mode
Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1
Lowest power setting.

enumerator kLPADC_PowerLevelAlt2
Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3
...

enumerator kLPADC_PowerLevelAlt4
Highest power setting.

enum _lpadc_offset_calibration_mode
Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode
12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode
16 bit offset calibration mode.

enum __lpadc_trigger_priority_policy

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

Values:

enumerator kLPADC_ConvPreemptImmediatelyNotAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kLPADC_ConvPreemptSoftlyNotAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoRestarted

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptSoftlyAutoRestarted

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator kLPADC_ConvPreemptSoftlyAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator kLPADC_TriggerPriorityPreemptImmediately

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityPreemptSoftly

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityExceptionDisabled

High priority trigger exception disabled.

enum __lpadc_tune_value

Define enumeration of tune value.

Values:

enumerator kLPADC_TuneValue0

Tune value 0.

enumerator kLPADC_TuneValue1

Tune value 1.

enumerator kLPADC_TuneValue2

Tune value 2.

enumerator kLPADC_TuneValue3

Tune value 3.

typedef enum __lpadc_sample_scale_mode lpadc_sample_scale_mode_t

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum __lpadc_sample_channel_mode lpadc_sample_channel_mode_t

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum __lpadc_hardware_average_mode lpadc_hardware_average_mode_t

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

typedef enum __lpadc_sample_time_mode lpadc_sample_time_mode_t

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum __lpadc_hardware_compare_mode lpadc_hardware_compare_mode_t

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

`typedef enum _lpadc_conversion_resolution_mode` `lpadc_conversion_resolution_mode_t`

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to `lpadc_sample_channel_mode_t`

`typedef enum _lpadc_conversion_average_mode` `lpadc_conversion_average_mode_t`

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of `CAL_AVGS` field in `CTRL` register.

`typedef enum _lpadc_reference_voltage_mode` `lpadc_reference_voltage_source_t`

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

`typedef enum _lpadc_power_level_mode` `lpadc_power_level_mode_t`

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

`typedef enum _lpadc_offset_calibration_mode` `lpadc_offset_calibration_mode_t`

Define enumeration of offset calibration mode.

`typedef enum _lpadc_trigger_priority_policy` `lpadc_trigger_priority_policy_t`

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: `kLPADC_TriggerPriorityPreemptSubsequently` is not available on some devices, mainly depends on the size of `TPRCTRL` field in `CFG` register.

`typedef enum _lpadc_tune_value` `lpadc_tune_value_t`

Define enumeration of tune value.

`typedef struct _lpadc_calibration_value` `lpadc_calibration_value_t`

A structure of calibration value.

`LPADC_CONVERSION_COMPLETE_TIMEOUT`

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

`LPADC_CALIBRATION_READY_TIMEOUT`

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

`LPADC_GAIN_CAL_READY_TIMEOUT`

Max loops to wait for LPADC gain calibration `GAIN_CAL` ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

ADC_OFSTRIM_OFSTRIM_MAX

ADC_OFSTRIM_OFSTRIM_SIGN

LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

void LPADC_Init(ADC_Type *base, const *lpadc_config_t* *config)

Initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.
- config – Pointer to configuration structure. See “*lpadc_config_t*”.

void LPADC_GetDefaultConfig(*lpadc_config_t* *config)

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode      = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay           = 0x80;
config->referenceVoltageSource = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode         = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy   = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause        = false;
config->convPauseDelay          = 0U;
config->FIFOWatermark           = 0U;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_Deinit(ADC_Type *base)

De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_Enable(ADC_Type *base, bool enable)

Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

static inline void LPADC_DoResetFIFO(ADC_Type *base)

Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_DoResetConfig(ADC_Type *base)

Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)

Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns

status flags' mask. See to `_lpadc_status_flags`.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to `_lpadc_status_flags`.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)
Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)
Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

bool LPADC_GetConvResult(ADC_Type *base, lpadc_conv_result_t *result)
Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

void LPADC_GetConvResultBlocking(ADC_Type *base, lpadc_conv_result_t *result)
Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const
lpadc_conv_trigger_config_t *config)

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to lpadc_conv_trigger_config_t.

void LPADC_GetDefaultConvTriggerConfig(lpadc_conv_trigger_config_t *config)
Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId    = 0U;
config->delayPower          = 0U;
config->priority            = 0U;
config->channelAFIFOSelect = 0U;
```

(continues on next page)

(continued from previous page)

```
config->channelBFIFOSelect    = 0U;
config->enableHardwareTrigger = false;
```

Parameters

- config – Pointer to configuration structure.

static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)

Do software trigger to conversion command.

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

static inline void LPADC_EnableHardwareTriggerCommandSelection(ADC_Type *base, uint32_t triggerId, bool enable)

Enable hardware trigger command selection.

This function will use the hardware trigger command from ADC_ETC. The trigger command is then defined by ADC hardware trigger command selection field in ADC_ETC->TRIGx_CHAINy_z_n[CSEL].

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- enable – True to enable or false to disable.

void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const *lpadc_conv_command_config_t* *config)

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to *lpadc_conv_command_config_t*.

void LPADC_GetDefaultConvCommandConfig(*lpadc_conv_command_config_t* *config)

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode      = kLPADC_SampleFullScale;
config->channelBScaleMode    = kLPADC_SampleFullScale;
config->sampleChannelMode    = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber        = 0U;
config->channelBNumber       = 0U;
```

(continues on next page)

(continued from previous page)

```

config->chainedNextCommandNumber = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount = 0U;
config->hardwareAverageMode = kLPADC_HardwareAverageCount1;
config->sampleTimeMode = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh = 0U;
config->hardwareCompareValueLow = 0U;
config->conversionResolutionMode = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger = false;
config->enableChannelB = false;

```

Parameters

- config – Pointer to configuration structure.

`void LPADC_EnableCalibration(ADC_Type *base, bool enable)`

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

`static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)`

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

`status_t LPADC_DoAutoCalibration(ADC_Type *base)`

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including:

- LPADC_EnableCalibration(...)
- LPADC_SetOffsetValue(...)
- LPADC_SetConvCommandConfig(...)
- LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- `kStatus_Success` – Successfully configured.
- `kStatus_Timeout` – Timeout occurs while waiting completion.

`static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)`

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- `base` – LPADC peripheral base address.
- `value` – Offset trim value, is a 10-bit signed value between -512 and 511.

`static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)`

Get trim value of offset.

Parameters

- `base` – LPADC peripheral base address.
- `pValue` – Pointer to the variable in type of `int16_t` to store offset value.

`static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)`

Enable the offset calibration function.

Parameters

- `base` – LPADC peripheral base address.
- `enable` – switcher to the calibration function.

`static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)`

Set offset calibration mode.

Parameters

- `base` – LPADC peripheral base address.
- `mode` – set offset calibration mode.see to `lpadc_offset_calibration_mode_t`.

`status_t LPADC_DoOffsetCalibration(ADC_Type *base)`

Do offset calibration.

Parameters

- `base` – LPADC peripheral base address.

Return values

- `kStatus_Success` – Successfully configured.
- `kStatus_Timeout` – Timeout occurs while waiting completion.

`void LPADC_PrepareAutoCalibration(ADC_Type *base)`

Prepare auto calibration, `LPADC_FinishAutoCalibration` has to be called before using the LPADC. `LPADC_DoAutoCalibration` has been split in two API to avoid to be stuck too long in the function.

Parameters

- `base` – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, *lpadc_calibration_value_t* *ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to *lpadc_calibration_value_t* structure, this memory block should be always powered on even in low power modes.

status_t LPADC_SetCalibrationValue(ADC_Type *base, const *lpadc_calibration_value_t* *ptrCalibrationValue)

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to *lpadc_calibration_value_t* structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void LPADC_RequestHighSpeedModeTrim(ADC_Type *base)

Request high speed mode trim calculation.

Parameters

- base – LPADC peripheral base address.

```
static inline int8_t LPADC_GetHighSpeedTrimValue(ADC_Type *base)
```

Get high speed mode trim value, the result is a 5-bit signed value between -16 and 15.

Note: The high speed mode trim value is used to minimize offset for high speed conversion.

Parameters

- `base` – LPADC peripheral base address.

Returns

The calculated high speed mode trim value.

```
static inline void LPADC_SetHighSpeedTrimValue(ADC_Type *base, int8_t trimValue)
```

Set high speed mode trim value.

Note: If is possible to set the trim value manually, but it is recommended to use the `LPADC_RequestHighSpeedModeTrim`.

Parameters

- `base` – LPADC peripheral base address.
- `trimValue` – The trim value to be set.

```
static inline void LPADC_EnableHighSpeedConversionMode(ADC_Type *base, bool enable)
```

Enable/disable high speed conversion mode, if enabled conversions complete 2 or 3 ADCK cycles sooner compared to conversion cycle counts when high speed mode is disabled.

Parameters

- `base` – LPADC peripheral base address.
- `enable` – Used to enable/disable high speed conversion mode:
 - **true** Enable high speed conversion mode;
 - **false** Disable high speed conversion mode.

```
static inline void LPADC_EnableExtraCycle(ADC_Type *base, bool enable)
```

Enable/disable an additional ADCK cycle to conversion.

Parameters

- `base` – LPADC peripheral base address.
- `enable` – Used to enable/disable an additional ADCK cycle to conversion:
 - **true** Enable an additional ADCK cycle to conversion;
 - **false** Disable an additional ADCK cycle to conversion.

```
static inline void LPADC_SetTuneValue(ADC_Type *base, lpadc_tune_value_t tuneValue)
```

Set tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- `base` – LPADC peripheral base address.
- `tuneValue` – The tune value to be set, please refer to `lpadc_tune_value_t`.

```
static inline lpadc_tune_value_t LPADC_GetTuneValue(ADC_Type *base)
```

Get tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The tune value, please refer to `lpadc_tune_value_t`.

FSL_LPADC_DRIVER_VERSION

LPADC driver version 2.9.5.

`struct lpadc_config_t`

`#include <fsl_lpadc.h>` LPADC global configuration.

This structure would used to keep the settings for initialization.

Public Members

`bool enableInternalClock`

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

`bool enableVref1LowVoltage`

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

`bool enableInDozeMode`

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

`lpadc_conversion_average_mode_t` `conversionAverageMode`

Auto-Calibration Averages.

`bool enableAnalogPreliminary`

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

`uint32_t powerUpDelay`

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (`powerUpDelay * 4`) ADCK cycles must result in a longer delay than the analog startup time.

`lpadc_reference_voltage_source_t` `referenceVoltageSource`

Selects the voltage reference high used for conversions.

`lpadc_power_level_mode_t` `powerLevelMode`

Power Configuration Selection.

`lpadc_trigger_priority_policy_t` `triggerPriorityPolicy`

Control how higher priority triggers are handled, see to `lpadc_trigger_priority_policy_t`.

`bool enableConvPause`

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channel B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number; select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number; select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the “loopCount” field selects the number of times the selected channel is converted consecutively; when enabled, the “loopCount” field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is $2^{\text{delayPower}}$ ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. The software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct __lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.24 Lpc_freqme

void FREQME_Init(FREQME_Type *base, const *freq_measure_config_t* *config)

Initialize freqme module, set operate mode, operate mode attribute and initialize measurement cycle.

Parameters

- `base` – FREQME peripheral base address.
- `config` – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

`void FREQME_GetDefaultConfig(freq_measure_config_t *config)`

Get default configuration.

```
config->operateMode = kFREQME_FreqMeasurementMode;
config->operateModeAttribute.refClkScaleFactor = 0U;
config->enableContinuousMode = false;
config->startMeasurement = false;
```

Parameters

- `config` – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

`static inline void FREQME_StartMeasurementCycle(FREQME_Type *base)`

Start frequency or pulse width measurement process.

Parameters

- `base` – FREQME peripheral base address.

`static inline void FREQME_TerminateMeasurementCycle(FREQME_Type *base)`

Force the termination of any measurement cycle currently in progress and resets RESULT or just reset RESULT if the module in idle state.

Parameters

- `base` – FREQME peripheral base address.

`static inline void FREQME_EnableContinuousMode(FREQME_Type *base, bool enable)`

Enable/disable Continuous mode.

Parameters

- `base` – FREQME peripheral base address.
- `enable` – Used to enable/disable continuous mode,
 - **true** Enable Continuous mode.
 - **false** Disable Continuous mode.

`static inline bool FREQME_CheckContinuousMode(FREQME_Type *base)`

Check whether continuous mode is enabled.

Parameters

- `base` – FREQME peripheral base address.

Return values

- **True** – Continuous mode is enabled, the measurement is performed continuously.
- **False** – Continuous mode is disabled.

`static inline void FREQME_SetOperateMode(FREQME_Type *base, freqme_operate_mode_t operateMode)`

Set operate mode of freqme module.

Parameters

- `base` – FREQME peripheral base address.

- `operateMode` – The operate mode to be set, please refer to `freqme_operate_mode_t`.

static inline bool `FREQME_CheckOperateMode(FREQME_Type *base)`

Check module's operate mode.

Parameters

- `base` – FREQME peripheral base address.

Return values

- `True` – Pulse width measurement mode.
- `False` – Frequency measurement mode.

static inline void `FREQME_SetMinExpectedValue(FREQME_Type *base, uint32_t minValue)`

Set the minimum expected value for the measurement result.

Parameters

- `base` – FREQME peripheral base address.
- `minValue` – The minimum value to set, please note that this value is 31 bits width.

static inline void `FREQME_SetMaxExpectedValue(FREQME_Type *base, uint32_t maxValue)`

Set the maximum expected value for the measurement result.

Parameters

- `base` – FREQME peripheral base address.
- `maxValue` – The maximum value to set, please note that this value is 31 bits width.

uint32_t `FREQME_CalculateTargetClkFreq(FREQME_Type *base, uint32_t refClkFrequency)`

Calculate the frequency of selected target clock

Note: The formula: $F_{\text{target}} = (\text{RESULT} - 2) * F_{\text{reference}} / 2^{\text{REF\_SCALE}}$.

Note: This function only useful when the operate mode is selected as frequency measurement mode.

Parameters

- `base` – FREQME peripheral base address.
- `refClkFrequency` – The frequency of reference clock.

Returns

The frequency of target clock the unit is Hz, if the output result is 0, please check the module's operate mode.

static inline uint8_t `FREQME_GetReferenceClkScaleValue(FREQME_Type *base)`

Get reference clock scaling factor.

Parameters

- `base` – FREQME peripheral base address.

Returns

Reference clock scaling factor, the reference count cycle is $2^{\text{ref\_scale}}$.

```
static inline void FREQME_SetPulsePolarity(FREQME_Type *base, freqme_pulse_polarity_t pulsePolarity)
```

Set pulse polarity when operate mode is selected as Pulse Width Measurement mode.

Parameters

- base – FREQME peripheral base address.
- pulsePolarity – The pulse polarity to be set, please refer to `freqme_pulse_polarity_t`.

```
static inline bool FREQME_CheckPulsePolarity(FREQME_Type *base)
```

Check pulse polarity when the operate mode is selected as pulse width measurement mode.

Parameters

- base – FREQME peripheral base address.

Return values

- True – Low period.
- False – High period.

```
static inline uint32_t FREQME_GetMeasurementResult(FREQME_Type *base)
```

Get measurement result, if operate mode is selected as pulse width measurement mode this function can be used to calculate pulse width.

Note: Pulse width = counter result / Frequency of target clock.

Parameters

- base – FREQME peripheral base address.

Returns

Measurement result.

```
static inline uint32_t FREQME_GetInterruptStatusFlags(FREQME_Type *base)
```

Get interrupt status flags, such as overflow interrupt status flag, underflow interrupt status flag, and so on.

Parameters

- base – FREQME peripheral base address.

Returns

Current interrupt status flags, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_ClearInterruptStatusFlags(FREQME_Type *base, uint32_t statusFlags)
```

Clear interrupt status flags.

Parameters

- base – FREQME peripheral base address.
- statusFlags – The combination of interrupt status flags to clear, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_EnableInterrupts(FREQME_Type *base, uint32_t masks)
```

Enable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- base – FREQME peripheral base address.

- `masks` – The mask of interrupts to enable, should be the OR'ed value of `_freqme_interrupt_enable`.

static inline void `FREQME_DisableInterrupts(FREQME_Type *base, uint32_t masks)`

Disable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- `base` – FREQME peripheral base address.
- `masks` – The mask of interrupts to disable, should be the OR'ed value of `_freqme_interrupt_enable`.

`FSL_FREQME_DRIVER_VERSION`

FREQME driver version 2.1.2.

enum `_freqme_interrupt_status_flags`

The enumeration of interrupt status flags. .

Values:

enumerator `kFREQME_UnderflowInterruptStatusFlag`

Indicate the measurement is just done and the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptStatusFlag`

Indicate the measurement is just done and the result is greater than maximum value.

enumerator `kFREQME_ReadyInterruptStatusFlag`

Indicate the measurement is just done and the result is ready to read.

enumerator `kFREQME_AllInterruptStatusFlags`

All interrupt status flags.

enum `_freqme_interrupt_enable`

The enumeration of interrupts, including underflow interrupt, overflow interrupt, and result ready interrupt. .

Values:

enumerator `kFREQME_UnderflowInterruptEnable`

Enable interrupt when the result is less than minimum value.

enumerator `kFREQME_OverflowInterruptEnable`

Enable interrupt when the result is greater than maximum value.

enumerator `kFREQME_ReadyInterruptEnable`

Enable interrupt when a measurement completes and the result is ready.

enum `_freqme_operate_mode`

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

Values:

enumerator `kFREQME_FreqMeasurementMode`

The module works in the frequency measurement mode.

enumerator `kFREQME_PulseWidthMeasurementMode`

The module works in the pulse width measurement mode.

enum `_freqme_pulse_polarity`

The enumeration of pulse polarity.

Values:

enumerator kFREQME_PulseHighPeriod

Select high period of the reference clock.

enumerator kFREQME_PulseLowPeriod

Select low period of the reference clock.

typedef enum *_freqme_operate_mode* freqme_operate_mode_t

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

typedef enum *_freqme_pulse_polarity* freqme_pulse_polarity_t

The enumeration of pulse polarity.

typedef union *_freqme_mode_attribute* freqme_mode_attribute_t

The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

typedef struct *_freq_measure_config* freq_measure_config_t

The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

union *_freqme_mode_attribute*

#include <fsl_freqme.h> The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

Public Members

uint8_t refClkScaleFactor

Only useful in frequency measurement operate mode, used to set the reference clock counter scaling factor.

freqme_pulse_polarity_t pulsePolarity

Only Useful in pulse width measurement operate mode, used to set period polarity.

struct *_freq_measure_config*

#include <fsl_freqme.h> The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

Public Members

freqme_operate_mode_t operateMode

Select operate mode, please refer to *freqme_operate_mode_t*.

freqme_mode_attribute_t operateModeAttribute

Used to set the attribute of the selected operate mode, if the operate mode is selected as kFREQME_FreqMeasurementMode set *freqme_mode_attribute_t::refClkScaleFactor*, if operate mode is selected as kFREOME_PulseWidthMeasurementMode, please set *freqme_mode_attribute_t::pulsePolarity*.

bool enableContinuousMode

Enable/disable continuous mode, if continuous mode is enable, the measurement is performed continuously and the result for the last completed measurement is available in the result register.

2.25 LPCMP: Low Power Analog Comparator Driver

void LPCMP_Init(LPCMP_Type *base, const *lpcmp_config_t* *config)

Initialize the LPCMP.

This function initializes the LPCMP module. The operations included are:

- Enabling the clock for LPCMP module.
- Configuring the comparator.
- Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_config_t” structure.

void LPCMP_Deinit(LPCMP_Type *base)

De-initializes the LPCMP module.

This function de-initializes the LPCMP module. The operations included are:

- Disabling the LPCMP module.
- Disabling the clock for LPCMP module.

This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

Parameters

- base – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)

Gets an available pre-defined settings for the comparator’s configuration.

This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode    = false;
config->enableOutputPin   = false;
config->enableCmpToDacLink = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput = false;
config->hysteresisMode     = kLPCMP_HysteresisLevel0;
config->powerMode          = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
config->plusInputSrc       = kLPCMP_PlusInputSrcMux;
config->minusInputSrc      = kLPCMP_MinusInputSrcMux;
```

Parameters

- config – Pointer to “lpcmp_config_t” structure.

```
static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)
```

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable the module, and “false” means disable the module.

```
void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t  
                           negativeChannel)
```

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

```
static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)
```

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled, the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable DMA support, and “false” means disable DMA support.

```
void LPCMP_SetFilterConfig(LPCMP_Type *base, const lpcmp_filter_config_t *config)
```

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_filter_config_t” structure.

```
void LPCMP_SetDACConfig(LPCMP_Type *base, const lpcmp_dac_config_t *config)
```

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_dac_config_t” structure. If config is “NULL”, disable internal DAC.

```
static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)
```

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

```
static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)
```

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “_lpcmp_interrupt_enable”.

```
static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)
```

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)
```

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See “_lpcmp_status_flags”.

```
static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)
```

Enable/Disable window mode. When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable window mode, and “false” means disable window mode.

```
void LPCMP_SetWindowControl(LPCMP_Type *base, const lpcmp_window_control_config_t *config)
```

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event (only valid in windowing mode), and setting the COUTA signal after the window is closed (only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_window_control_config_t” structure.

```
void LPCMP_SetRoundRobinConfig(LPCMP_Type *base, const lpcmp_roundrobin_config_t *config)
```

Configure the roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “lpcmp_roundrobin_config_t” structure.

```
static inline void LPCMP_EnableRoundRobinMode(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin mode, and “false” means disable roundrobin mode.

void LPCMP_SetRoundRobinInternalTimer(LPCMP_Type *base, uint32_t value)

brief Configure the roundrobin internal timer reload value.

param base LPCMP peripheral base address. param value RoundRobin internal timer reload value, allowed range:0x0UL-0xFFFFFFFFUL.

static inline void LPCMP_EnableRoundRobinInternalTimer(LPCMP_Type *base, bool enable)

Enable/Disable roundrobin internal timer; note that this function is only valid when using the internal trigger source.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin internal timer, and “false” means disable roundrobin internal timer.

static inline void LPCMP_SetPreSetValue(LPCMP_Type *base, uint8_t mask)

Set preset value for all channels, users can set all channels' preset value through this API, for example, if the mask set to 0x03U means channel0 and channel2's preset value set to 1U and other channels' preset value set to 0U.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetComparisonResult(LPCMP_Type *base)

Get comparison results for all channels, users can get all channels' comparison results through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' comparison result.

static inline void LPCMP_ClearInputChangedFlags(LPCMP_Type *base, uint8_t mask)

Clear input changed flags for single channel or multiple channels, users can clear input changed flag of a single channel or multiple channels through this API, for example, if the mask set to 0x03U means clear channel0 and channel2's input changed flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

static inline uint8_t LPCMP_GetInputChangedFlags(LPCMP_Type *base)

Get input changed flags for all channels, Users can get all channels' input changed flags through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' changed flag.

FSL_LPCMP_DRIVER_VERSION

LPCMP driver version 2.3.2.

enum `_lpcmp_status_flags`

LPCMP status flags mask.

Values:

enumerator `kLPCMP_OutputRisingEventFlag`

Rising-edge on the comparison output has occurred.

enumerator `kLPCMP_OutputFallingEventFlag`

Falling-edge on the comparison output has occurred.

enumerator `kLPCMP_OutputRoundRobinEventFlag`

Detects when any channel's last comparison result is different from the pre-set value in trigger mode.

enumerator `kLPCMP_OutputAssertEventFlag`

Return the current value of the analog comparator output. The flag does not support W1C.

enum `_lpcmp_interrupt_enable`

LPCMP interrupt enable/disable mask.

Values:

enumerator `kLPCMP_OutputRisingInterruptEnable`

Comparator interrupt enable rising.

enumerator `kLPCMP_OutputFallingInterruptEnable`

Comparator interrupt enable falling.

enumerator `kLPCMP_RoundRobinInterruptEnable`

Comparator round robin mode interrupt occurred when the comparison result changes for a given channel.

enum `_lpcmp_hysteresis_mode`

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator `kLPCMP_HysteresisLevel0`

The hard block output has level 0 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel1`

The hard block output has level 1 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel2`

The hard block output has level 2 hysteresis internally.

enumerator `kLPCMP_HysteresisLevel3`

The hard block output has level 3 hysteresis internally.

enum `_lpcmp_power_mode`

LPCMP nano mode.

Values:

enumerator `kLPCMP_LowSpeedPowerMode`

Low speed comparison mode is selected.

enumerator `kLPCMP_HighSpeedPowerMode`

High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode
Nano power comparator is enabled.

enum __lpcmp_dac_reference_voltage_source
Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1
vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2
vrefh_ext is selected as resistor ladder network supply reference Vin.

enum __lpcmp_functional_source_clock
LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

Values:

enumerator kLPCMP_FunctionalClockSource0
Select functional mode clock source0.

enumerator kLPCMP_FunctionalClockSource1
Select functional mode clock source1.

enumerator kLPCMP_FunctionalClockSource2
Select functional mode clock source2.

enumerator kLPCMP_FunctionalClockSource3
Select functional mode clock source3.

enum __lpcmp_couta_signal
Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet
NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow
Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh
Set COUTA signal high(1) when the window is closed.

enum __lpcmp_close_window_event
Set COUT event, which can close the active window in window mode.

Values:

enumerator kLPCMP_CCloseWindowEventNoSet
No Set COUT event, which can close the active window in window mode.

enumerator kLPCMP_CloseWindowEventRisingEdge
Set rising edge COUT signal as COUT event.

enumerator kLPCMP_CloseWindowEventFallingEdge
Set falling edge COUT signal as COUT event.

enumerator kLPCMP_CCloseWindowEventBothEdge
Set both rising and falling edge COUT signal as COUT event.

enum _lpcmp_roundrobin_fixedmuxport

LPCMP round robin mode fixed mux port.

Values:

enumerator kLPCMP_FixedPlusMuxPort

Fixed plus mux port.

enumerator kLPCMP_FixedMinusMuxPort

Fixed minus mux port.

enum _lpcmp_roundrobin_clock_source

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

Values:

enumerator kLPCMP_RoundRobinClockSource0

Select roundrobin mode clock source0.

enumerator kLPCMP_RoundRobinClockSource1

Select roundrobin mode clock source1.

enumerator kLPCMP_RoundRobinClockSource2

Select roundrobin mode clock source2.

enumerator kLPCMP_RoundRobinClockSource3

Select roundrobin mode clock source3.

enum _lpcmp_roundrobin_trigger_source

LPCMP round robin mode trigger source.

Values:

enumerator kLPCMP_TriggerSourceExternally

Select external trigger source.

enumerator kLPCMP_TriggerSourceInternally

Select internal trigger source.

enum _lpcmp_plus_input_src

LPCMP plus input source.

Values:

enumerator kLPCMP_PlusInputSrcDac

LPCMP plus input source from the internal 8-bit DAC output.

enumerator kLPCMP_PlusInputSrcMux

LPCMP plus input source from the analog 8-1 mux.

enum _lpcmp_minus_input_src

LPCMP minus input source.

Values:

enumerator kLPCMP_MinusInputSrcDac

LPCMP minus input source from the internal 8-bit DAC output.

enumerator kLPCMP_MinusInputSrcMux

LPCMP minus input source from the analog 8-1 mux.

typedef enum *_lpcmp_hysteresis_mode* lpcmp_hysteresis_mode_t

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

typedef enum *_lpcmp_power_mode* lpcmp_power_mode_t

LPCMP nano mode.

typedef enum *_lpcmp_dac_reference_voltage_source* lpcmp_dac_reference_voltage_source_t

Internal DAC reference voltage source.

typedef enum *_lpcmp_functional_source_clock* lpcmp_functional_source_clock_t

LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

typedef enum *_lpcmp_couta_signal* lpcmp_couta_signal_t

Set the COUTA signal value when the window is closed.

typedef enum *_lpcmp_close_window_event* lpcmp_close_window_event_t

Set COUT event, which can close the active window in window mode.

typedef enum *_lpcmp_roundrobin_fixedmuxport* lpcmp_roundrobin_fixedmuxport_t

LPCMP round robin mode fixed mux port.

typedef enum *_lpcmp_roundrobin_clock_source* lpcmp_roundrobin_clock_source_t

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

typedef enum *_lpcmp_roundrobin_trigger_source* lpcmp_roundrobin_trigger_source_t

LPCMP round robin mode trigger source.

typedef struct *_lpcmp_filter_config* lpcmp_filter_config_t

Configure the filter.

typedef enum *_lpcmp_plus_input_src* lpcmp_plus_input_src_t

LPCMP plus input source.

typedef enum *_lpcmp_minus_input_src* lpcmp_minus_input_src_t

LPCMP minus input source.

typedef struct *_lpcmp_dac_config* lpcmp_dac_config_t

configure the internal DAC.

typedef struct *_lpcmp_config* lpcmp_config_t

Configures the comparator.

typedef struct *_lpcmp_window_control_config* lpcmp_window_control_config_t

Configure the window mode control.

typedef struct *_lpcmp_roundrobin_config* lpcmp_roundrobin_config_t

Configure the round robin mode.

LPCMP_CCR1_COUTA_CFG_MASK

LPCMP_CCR1_COUTA_CFG_SHIFT

LPCMP_CCR1_COUTA_CFG(x)

LPCMP_CCR1_EVT_SEL_CFG_MASK

LPCMP_CCR1_EVT_SEL_CFG_SHIFT

LPCMP_CCR1_EVT_SEL_CFG(x)

struct `_lpcmp_filter_config`

#include <fsl_lpcmp.h> Configure the filter.

Public Members

bool enableSample

Decide whether to use the external SAMPLE as a sampling clock input.

uint8_t filterSampleCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterSamplePeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

struct `_lpcmp_dac_config`

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

bool enableLowPowerMode

Decide whether to enable DAC low power mode.

lpcmp_dac_reference_voltage_source_t referenceVoltageSource

Internal DAC supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

struct `_lpcmp_config`

#include <fsl_lpcmp.h> Configures the comparator.

Public Members

bool enableStopMode

Decide whether to enable the comparator when in STOP modes.

bool enableCmpToDacLink

Controls the link from the CMP enable to the DAC enable.

bool enableOutputPin

Decide whether to enable the comparator is available in selected pin.

bool useUnfilteredOutput

Decide whether to use unfiltered output.

bool enableInvertOutput

Decide whether to inverts the comparator output.

lpcmp_hysteresis_mode_t hysteresisMode

LPCMP hysteresis mode.

lpcmp_power_mode_t powerMode

LPCMP power mode.

lpcmp_functional_source_clock_t functionalSourceClock

Select LPCMP functional mode clock source.

lpcmp_plus_input_src_t plusInputSrc

Select LPCMP plus input source.

lpcmp_minus_input_src_t minusInputSrc

Select LPCMP minus input source.

struct *__lpcmp_window_control_config*

#include <fsl_lpcmp.h> Configure the window mode control.

Public Members

bool enableInvertWindowSignal

True: enable invert window signal, False: disable invert window signal.

lpcmp_couta_signal_t COUTASignal

Decide whether to define the COUTA signal value when the window is closed.

lpcmp_close_window_event_t closeWindowEvent

Decide whether to select COUT event signal edge defines a COUT event to close window.

struct *__lpcmp_roundrobin_config*

#include <fsl_lpcmp.h> Configure the round robin mode.

Public Members

uint8_t initDelayModules

Comparator and DAC initialization delay modulus, See Reference Manual and DataSheet for specific value.

uint8_t sampleClockNumbers

Specify the number of the round robin clock cycles(0~3) to wait after scanning the active channel before sampling the channel's comparison result.

uint8_t channelSampleNumbers

Specify the number of samples for one channel, note that channelSampleNumbers must not smaller than sampleTimeThreshhold.

uint8_t sampleTimeThreshhold

Specify that for one channel, when (sampleTimeThreshhold + 1) sample results are "1",the final result is "1", otherwise the final result is "0", note that the sampleTimeThreshhold must not be larger than channelSampleNumbers.

lpcmp_roundrobin_clock_source_t roundrobinClockSource

Decide which clock source to choose in round robin mode.

lpcmp_roundrobin_trigger_source_t roundrobinTriggerSource

Decide which trigger source to choose in round robin mode.

lpcmp_roundrobin_fixedmuxport_t fixedMuxPort

Decide which mux port to choose as fixed channel in round robin mode.

uint8_t fixedChannel

Indicate which channel of the fixed mux port is used in round robin mode.

uint8_t checkerChannelMask

Indicate which channel of the non-fixed mux port to check its voltage value in round robin mode, for example, if checkerChannelMask set to 0x11U means select channel 0 and channel 4 as checker channel.

2.26 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy

The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle

The slave driver is idle.

enumerator kStatus_LPI2C_Nak

The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError

FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError

Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost

Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout

SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress

Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cMasterIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

IRQn_Type const kLpi2cSlaveIrqs[]

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

I2C_RETRY_TIMES

Retry times for waiting flag.

2.27 LPI2C Master Driver

void LPI2C_MasterGetDefaultConfig(*lpi2c_master_config_t* *masterConfig)

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster      = true;
masterConfig->debugEnable       = false;
masterConfig->ignoreAck         = false;
masterConfig->pinConfig          = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busIdleTimeout_ns  = 0;
masterConfig->pinLowTimeout_ns  = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable = false;
masterConfig->hostRequest.source  = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with LPI2C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to *lpi2c_master_config_t*.

void LPI2C_MasterInit(LPI2C_Type *base, const *lpi2c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The LPI2C peripheral base address.

- `masterConfig` – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void LPI2C_MasterDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t *matchConfig)`

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

`status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)`

Convert provided flags to status code, and clear any errors if present.

Parameters

- `base` – The LPI2C peripheral base address.
- `status` – Current status flags value that will be checked.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_PinLowTimeout` –
- `kStatus_LPI2C_ArbitrationLost` –
- `kStatus_LPI2C_Nak` –
- `kStatus_LPI2C_FifoError` –

`status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)`

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_Busy` –

`static inline void LPI2C_MasterReset(LPI2C_Type *base)`

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as master.

```
static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_master_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_master_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

```
static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)
Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)
Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)
Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)
Gets LPI2C master receive data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)
Sets the watermarks for LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txWords` – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than `txWords`. Writing a value equal or greater than the FIFO size is truncated.
- `rxWords` – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than `rxWords`. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txCount` – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- `rxCount` – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.

```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted,

followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,  
                                                lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)
```

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_LPI2C_Nak`.

Parameters

- *base* – The LPI2C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.

- `kStatus_LPI2C_FifoError` – FIFO under run or over run.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterStop(LPI2C_Type *base)

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, *lpi2c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

```
void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                     lpi2c_master_transfer_callback_t callback, void  
                                     *userData)
```

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

```
status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                         lpi2c_master_transfer_t *transfer)
```

Performs a non-blocking transaction on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_LPI2C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

```
status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                       size_t *count)
```

Returns number of bytes transferred so far.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus__Success` –
- `kStatus__NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void LPI2C_MasterTransferAbort(LPI2C_Type *base, lpi2c_master_handle_t *handle)`

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

`void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)`

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `lpi2cMasterHandle` – Pointer to the LPI2C master driver handle.

`enum _lpi2c_master_flags`

LPI2C master peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator `kLPI2C_MasterTxReadyFlag`

Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag

Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag

End Packet flag

enumerator kLPI2C_MasterStopDetectFlag

Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag

NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag

Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag

FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag

Data match flag

enumerator kLPI2C_MasterBusyFlag

Master busy flag

enumerator kLPI2C_MasterBusBusyFlag

Bus busy flag

enumerator kLPI2C_MasterClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags

Errors to check for.

enum _lpi2c_direction

Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write

Master transmit.

enumerator kLPI2C_Read

Master receive.

enum _lpi2c_master_pin_config

LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain

LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly

LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull

LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin

Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger

Select the input trigger as the host request input

enum _lpi2c_host_request_polarity

LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow

Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh

Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode

LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled

LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1

LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1

LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1

LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1

LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1

LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1

LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum `_lpi2c_master_transfer_flags`
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator `kLPI2C_TransferDefaultFlag`
Transfer starts with a start signal, stops with a stop signal.

enumerator `kLPI2C_TransferNoStartFlag`
Don't send a start condition, address, and sub address

enumerator `kLPI2C_TransferRepeatedStartFlag`
Send a repeated start condition

enumerator `kLPI2C_TransferNoStopFlag`
Don't send a stop condition.

typedef enum `_lpi2c_direction` `lpi2c_direction_t`
Direction of master and slave transfers.

typedef enum `_lpi2c_master_pin_config` `lpi2c_master_pin_config_t`
LPI2C pin configuration.

typedef enum `_lpi2c_host_request_source` `lpi2c_host_request_source_t`
LPI2C master host request selection.

typedef enum `_lpi2c_host_request_polarity` `lpi2c_host_request_polarity_t`
LPI2C master host request pin polarity configuration.

typedef struct `_lpi2c_master_config` `lpi2c_master_config_t`
Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum `_lpi2c_data_match_config_mode` `lpi2c_data_match_config_mode_t`
LPI2C master data match configuration modes.

typedef struct `_lpi2c_match_config` `lpi2c_data_match_config_t`
LPI2C master data match configuration structure.

typedef struct `_lpi2c_master_transfer` `lpi2c_master_transfer_t`
LPI2C master descriptor of the transfer.

typedef struct `_lpi2c_master_handle` `lpi2c_master_handle_t`
LPI2C master handle of the transfer.

typedef void (*`lpi2c_master_transfer_callback_t`)(`LPI2C_Type` *`base`, `lpi2c_master_handle_t` *`handle`, `status_t` `completionStatus`, void *`userData`)

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to `LPI2C_MasterTransferCreateHandle()`.

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableMaster

Whether to enable master mode.

bool enableDoze

Whether master is enabled in doze mode.

bool debugEnable

Enable transfers to continue when halted in debug mode.

bool ignoreAck

Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig

The pin configuration option.

uint32_t baudRate_Hz

Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns

Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns

Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest

Host request options.

```
struct _lpi2c_match_config
```

#include <fsl_lpi2c.h> LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer*

#include <fsl_lpi2c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration *_lpi2c_master_transfer_flags* for available options. Set to 0 or *kLPI2C_TransferDefaultFlag* for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either *kLPI2C_Read* or *kLPI2C_Write*.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct *_lpi2c_master_handle*

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct hostRequest

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.28 LPI2C Master DMA Driver

```
void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
                                   edma_handle_t *rxDmaHandle, edma_handle_t
                                   *txDmaHandle, lpi2c_master_edma_transfer_callback_t
                                   callback, void *userData)
```

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *size_t* *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

typedef struct *lpi2c_master_edma_handle* *lpi2c_master_edma_handle_t*
LPI2C master EDMA handle of the transfer.

```
typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base,  
lpi2c_master_edma_handle_t *handle, status_t completionStatus, void *userData)
```

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base

The LPI2C peripheral base address.

Param handle

Handle associated with the completed transfer.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_master_edma_handle  
#include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base

LPI2C base pointer.

bool isBusy

Transfer state machine current state.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]

LPI2C command sequence. When all 10 command words are used:
Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] +
receive&Size[4 words]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

edma_handle_t *rx

Handle for receive DMA channel.

edma_handle_t *tx

Handle for transmit DMA channel.

edma_tcd_t tcds[3]

Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.29 LPI2C Slave Driver

`void LPI2C_SlaveGetDefaultConfig(lpi2c_slave_config_t *slaveConfig)`

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave      = true;
slaveConfig->address0         = 0U;
slaveConfig->address1         = 0U;
slaveConfig->addressMatchMode = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable = true;
slaveConfig->filterEnable     = true;
slaveConfig->enableGeneralCall = false;
slaveConfig->sclStall.enableAck = false;
slaveConfig->sclStall.enableTx  = true;
slaveConfig->sclStall.enableRx  = true;
slaveConfig->sclStall.enableAddress = true;
slaveConfig->ignoreAck         = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns = 0;
slaveConfig->sclGlitchFilterWidth_ns = 0;
slaveConfig->dataValidDelay_ns   = 0;
slaveConfig->clockHoldTime_ns    = 0;
```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- *slaveConfig* – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

`void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t sourceClock_Hz)`

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- *base* – The LPI2C peripheral base address.
- *slaveConfig* – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- *sourceClock_Hz* – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

`void LPI2C_SlaveDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- *base* – The LPI2C peripheral base address.

`static inline void LPI2C_SlaveReset(LPI2C_Type *base)`

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_slave_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_slave_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.

- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.

- `ackOrNack` – Pass true for an ACK or false for a NAK.

`static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)`

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – True will enable ACKSTALL, false will disable ACKSTALL.

`static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)`

Returns the slave address sent by the I2C master.

This function should only be called if the `kLPI2C_SlaveAddressValidFlag` is asserted.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

`status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)`

Performs a polling send transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.
- `actualTxSize` – **[out]**

Returns

Error or success status returned by API.

`status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)`

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.
- `actualRxSize` – **[out]**

Returns

Error or success status returned by API.

`void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle, lpi2c_slave_transfer_callback_t callback, void *userData)`

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_SlaveTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – **[out]** Pointer to the LPI2C slave driver handle.
- *callback* – User provided pointer to the asynchronous callback function.
- *userData* – User provided pointer to the application callback data.

status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type **base*, *lpi2c_slave_handle_t* **handle*,
uint32_t *eventMask*)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *lpi2c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kLPI2C_SlaveTransmitEvent* and *kLPI2C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kLPI2C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.
- *eventMask* – Bit mask formed by OR'ing together *lpi2c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kLPI2C_SlaveAllEvents* to enable all events.

Return values

- *kStatus_Success* – Slave transfers were successfully started.
- *kStatus_LPI2C_Busy* – Slave transfers have already been started on this handle.

status_t LPI2C_SlaveTransferGetCount(LPI2C_Type **base*, *lpi2c_slave_handle_t* **handle*, size_t
**count*)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- *base* – The LPI2C peripheral base address.
- *handle* – Pointer to *i2c_slave_handle_t* structure.
- *count* – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus__Success –
- kStatus__NoTransferInProgress –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to *lpi2c_slave_handle_t* structure which stores the transfer state.

enum *_lpi2c_slave_flags*

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag

Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag

Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag

Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag

Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag

Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag

Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag

Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag

FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag

Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag

General call flag

enumerator kLPI2C_SlaveBusyFlag

Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag

Bus busy flag

enumerator kLPI2C_SlaveClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags

Errors to check for.

enum _lpi2c_slave_address_match

LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0

Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1

Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1

Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `LPI2C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, lpi2c_slave_transfer_t *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the `LPI2C_SlaveSetCallback()` function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

struct `_lpi2c_slave_config`

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool `enableSlave`

Enable slave mode.

uint8_t `address0`

Slave's 7-bit address.

uint8_t `address1`

Alternate slave 7-bit address.

lpi2c_slave_address_match_t `addressMatchMode`

Address matching options.

bool `filterDozeEnable`

Enable digital glitch filter in doze mode.

bool `filterEnable`

Enable digital glitch filter.

bool `enableGeneralCall`

Enable general call address matching.

struct *_lpi2c_slave_config* `sclStall`

SCL stall enable options.

bool `ignoreAck`

Continue transfers after a NACK is detected.

bool `enableReceivedAddressRead`

Enable reading the address received address as the first byte of data.

uint32_t `sdaGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t `sclGlitchFilterWidth_ns`

Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t `dataValidDelay_ns`

Width in nanoseconds of the data valid delay.

uint32_t `clockHoldTime_ns`

Width in nanoseconds of the clock hold time.

struct `_lpi2c_slave_transfer`

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event

Reason the callback is being invoked.

uint8_t receivedAddress

Matching address send by master.

uint8_t *data

Transfer buffer

size_t dataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct _lpi2c_slave_handle

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

`bool enableTx`

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

`bool enableRx`

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

`bool enableAddress`

Enables SCL clock stretching when the address valid flag is asserted.

2.30 LPSPI: Low Power Serial Peripheral Interface

2.31 LPSPI Peripheral driver

```
void LPSPI_MasterInit(LPSPI_Type *base, const lpspi_master_config_t *masterConfig, uint32_t
srcClock_Hz)
```

Initializes the LPSPI master.

Parameters

- `base` – LPSPI peripheral address.
- `masterConfig` – Pointer to structure `lpspi_master_config_t`.
- `srcClock_Hz` – Module source input clock in Hertz

```
void LPSPI_MasterGetDefaultConfig(lpspi_master_config_t *masterConfig)
```

Sets the `lpspi_master_config_t` structure to default values.

This API initializes the configuration structure for `LPSPI_MasterInit()`. The initialized structure can remain unchanged in `LPSPI_MasterInit()`, or can be modified before calling the `LPSPI_MasterInit()`. Example:

```
lpspi_master_config_t masterConfig;
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- `masterConfig` – pointer to `lpspi_master_config_t` structure

```
void LPSPI_SlaveInit(LPSPI_Type *base, const lpspi_slave_config_t *slaveConfig)
```

LPSPI slave configuration.

Parameters

- `base` – LPSPI peripheral address.
- `slaveConfig` – Pointer to a structure `lpspi_slave_config_t`.

```
void LPSPI_SlaveGetDefaultConfig(lpspi_slave_config_t *slaveConfig)
```

Sets the `lpspi_slave_config_t` structure to default values.

This API initializes the configuration structure for `LPSPI_SlaveInit()`. The initialized structure can remain unchanged in `LPSPI_SlaveInit()` or can be modified before calling the `LPSPI_SlaveInit()`. Example:

```
lpspi_slave_config_t slaveConfig;
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to lpspi_slave_config_t structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

```
static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)
```

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

```
static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)
```

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag | kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

```
static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)
```

```
static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, *lpspi_which_pcs_t* select)

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.
- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinuous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz, uint32_t *tcrPrescaleValue)

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale `tcrPrescaleValue` parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.

- `tcrPrescaleValue` – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t
                               whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- `base` – LPSPI peripheral address.
- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- `base` – LPSPI peripheral address.
- `data` – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- `base` – LPSPI peripheral address.
- `dummyData` – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,  
                                     lpspi_master_transfer_callback_t callback, void  
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – LPSPI handle pointer to `lpspi_master_handle_t`.
- `callback` – DSPI callback.
- `userData` – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferNonBlocking(LP_SPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferGetCount(LP_SPI_Type *base, *lpspi_master_handle_t* *handle, `size_t` *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

`void` LPSPI_MasterTransferAbort(LP_SPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

`void` LPSPI_MasterTransferHandleIRQ(LP_SPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

```
void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, lpspi_slave_handle_t *handle,  
                                   lpspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the LPSPi slave handle.

This function initializes the LPSPi handle, which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Parameters

- base – LPSPi peripheral address.
- handle – LPSPi handle pointer to `lpspi_slave_handle_t`.
- callback – DSPI callback.
- userData – callback function parameter.

```
status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, lpspi_slave_handle_t *handle,  
                                       lpspi_transfer_t *transfer)
```

LPSPi slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

```
status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, lpspi_slave_handle_t *handle, size_t  
                                    *count)
```

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

```
void LPSPI_SlaveTransferAbort(LPSPI_Type *base, lpspi_slave_handle_t *handle)
```

LPSPi slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, lpspi_slave_handle_t *handle)`
LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)`
Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- `base` – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

`void LPSPI_DriverIRQHandler(uint32_t instance)`
LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- `instance` – LPSPI instance.

`FSL_LPSPI_DRIVER_VERSION`
LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator `kStatus_LPSPI_Busy`
LPSPI transfer is busy.

enumerator `kStatus_LPSPI_Error`
LPSPI driver error.

enumerator `kStatus_LPSPI_Idle`
LPSPI is idle.

enumerator `kStatus_LPSPI_OutOfRange`
LPSPI transfer out Of range.

enumerator `kStatus_LPSPI_Timeout`
LPSPI timeout polling status flags.

`enum _lpspi_flags`
LPSPI status flags in SPIx_SR register.

Values:

enumerator `kLPSPI_TxDataRequestFlag`
Transmit data flag

enumerator kLPSPI_RxDataReadyFlag
Receive data flag

enumerator kLPSPI_WordCompleteFlag
Word Complete flag

enumerator kLPSPI_FrameCompleteFlag
Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag
Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag
Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag
Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag
Data Match flag

enumerator kLPSPI_ModuleBusyFlag
Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable
Receive data DMA enable

enum _lpspi_master_slave_mode
LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master
LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave
LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config
LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0
PCS[0]

enumerator kLPSPI_Pcs1
PCS[1]

enumerator kLPSPI_Pcs2
PCS[2]

enumerator kLPSPI_Pcs3
PCS[3]

enum _lpspi_pcs_polarity_config
LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh
PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow
PCS Active Low (idles high)

enum _lpspi_pcs_polarity
LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow
Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow
Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow
Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow
Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow
Pcs0 to Pcs5 Active Low (idles high).

enum `_lpspi_clock_polarity`

LPSPI clock polarity configuration.

Values:

enumerator `kLPSPi_ClockPolarityActiveHigh`

CPOL=0. Active-high LPSPi clock (idles low)

enumerator `kLPSPi_ClockPolarityActiveLow`

CPOL=1. Active-low LPSPi clock (idles high)

enum `_lpspi_clock_phase`

LPSPi clock phase configuration.

Values:

enumerator `kLPSPi_ClockPhaseFirstEdge`

CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator `kLPSPi_ClockPhaseSecondEdge`

CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum `_lpspi_shift_direction`

LPSPi data shifter direction options.

Values:

enumerator `kLPSPi_MsbFirst`

Data transfers start with most significant bit.

enumerator `kLPSPi_LsbFirst`

Data transfers start with least significant bit.

enum `_lpspi_host_request_select`

LPSPi Host Request select configuration.

Values:

enumerator `kLPSPi_HostReqExtPin`

Host Request is an ext pin.

enumerator `kLPSPi_HostReqInternalTrigger`

Host Request is an internal trigger.

enum `_lpspi_match_config`

LPSPi Match configuration options.

Values:

enumerator `kLPSPi_MatchDisabled`

LPSPi Match Disabled.

enumerator `kLPSPi_1stWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0orM1`

LPSPi Match Enabled.

enumerator `kLPSPi_1stWordEqualsM0and2ndWordEqualsM1`

LPSPi Match Enabled.

enumerator `kLPSPi_AnyWordEqualsM0andNxtWordEqualsM1`

LPSPi Match Enabled.

enumerator kLPSI_1stWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enumerator kLPSI_AnyWordAndM1EqualsM0andM1
LPSPi Match Enabled.

enum _lpspi_pin_config
LPSPi pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPi SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPi SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPi SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPi SDO input, SDI output.

enum _lpspi_data_out_config
LPSPi data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width
LPSPi transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type
LPSPi delay type selection.

Values:

enumerator kLPSPI_PcsToSck
PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs
Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer
Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPi master transfer configFlags.

Values:

enumerator kLPSPi_MasterPcs0

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS0 signal

enumerator kLPSPi_MasterPcs1

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS1 signal

enumerator kLPSPi_MasterPcs2

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS2 signal

enumerator kLPSPi_MasterPcs3

LPSPi master PCS shift macro , internal used. LPSPi master transfer use PCS3 signal

enumerator kLPSPi_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPi_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_MasterByteSwapyou flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPi slave transfer configFlags.

Values:

enumerator kLPSPi_SlavePcs0

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS0 signal

enumerator kLPSPi_SlavePcs1

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS1 signal

enumerator kLPSPi_SlavePcs2

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS2 signal

enumerator kLPSPi_SlavePcs3

LPSPi slave PCS shift macro , internal used. LPSPi slave transfer use PCS3 signal

enumerator kLPSPi_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

- i. If you set bitPerFrame = 8 , no matter the kLPSPi_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.
- iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPi_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPi_SlaveByteSwap flag.

enum `_lpspi_transfer_state`

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator `kLPSPI_Idle`

Nothing in the transmitter/receiver.

enumerator `kLPSPI_Busy`

Transfer queue is not finished.

enumerator `kLPSPI_Error`

Transfer error.

typedef enum `_lpspi_master_slave_mode` `lpspi_master_slave_mode_t`

LPSPI master or slave mode configuration.

typedef enum `_lpspi_which_pcs_config` `lpspi_which_pcs_t`

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum `_lpspi_pcs_polarity_config` `lpspi_pcs_polarity_config_t`

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum `_lpspi_clock_polarity` `lpspi_clock_polarity_t`

LPSPI clock polarity configuration.

typedef enum `_lpspi_clock_phase` `lpspi_clock_phase_t`

LPSPI clock phase configuration.

typedef enum `_lpspi_shift_direction` `lpspi_shift_direction_t`

LPSPI data shifter direction options.

typedef enum `_lpspi_host_request_select` `lpspi_host_request_select_t`

LPSPI Host Request select configuration.

typedef enum `_lpspi_match_config` `lpspi_match_config_t`

LPSPI Match configuration options.

typedef enum `_lpspi_pin_config` `lpspi_pin_config_t`

LPSPI pin (SDO and SDI) configuration.

typedef enum `_lpspi_data_out_config` `lpspi_data_out_config_t`

LPSPI data output configuration.

typedef enum `_lpspi_transfer_width` `lpspi_transfer_width_t`

LPSPI transfer width configuration.

typedef enum `_lpspi_delay_type` `lpspi_delay_type_t`

LPSPI delay type selection.

typedef struct `_lpspi_master_config` `lpspi_master_config_t`

LPSPI master configuration structure.

typedef struct `_lpspi_slave_config` `lpspi_slave_config_t`

LPSPI slave configuration structure.

typedef struct `_lpspi_master_handle` `lpspi_master_handle_t`

Forward declaration of the `_lpspi_master_handle` typedefs.

typedef struct `_lpspi_slave_handle` `lpspi_slave_handle_t`

Forward declaration of the `_lpspi_slave_handle` typedefs.

```
typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, lpspi_master_handle_t *handle, status_t status, void *userData)
```

Master completion callback function pointer type.

Param base

LPSPi peripheral address.

Param handle

Pointer to the handle for the LPSPi master.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, lpspi_slave_handle_t *handle, status_t status, void *userData)
```

Slave completion callback function pointer type.

Param base

LPSPi peripheral address.

Param handle

Pointer to the handle for the LPSPi slave.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef struct _lpspi_transfer lpspi_transfer_t
```

LPSPi master/slave transfer structure.

```
volatile uint8_t g_lpspiDummyData[]
```

Global variable for dummy data value setting.

```
LPSPI_DUMMY_DATA
```

LPSPi dummy data if no Tx data.

Dummy data used for tx if there is not txData.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
LPSPI_MASTER_PCS_SHIFT
```

LPSPi master PCS shift macro , internal used.

```
LPSPI_MASTER_PCS_MASK
```

LPSPi master PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_SHIFT
```

LPSPi slave PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_MASK
```

LPSPi slave PCS shift macro , internal used.

```
struct _lpspi_master_config
```

#include <fsl_lpspi.h> LPSPi master configuration structure.

Public Members`uint32_t baudRate`

Baud Rate for LPSPI.

`uint32_t bitsPerFrame`

Bits per frame, minimum 8, maximum 4096.

`lpspi_clock_polarity_t cpol`

Clock polarity.

`lpspi_clock_phase_t cpha`

Clock phase.

`lpspi_shift_direction_t direction`

MSB or LSB data shift direction.

`uint32_t pcsToSckDelayInNanoSec`

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`uint32_t lastSckToPcsDelayInNanoSec`

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`uint32_t betweenTransferDelayInNanoSec`

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

`lpspi_which_pcs_t whichPcs`

Desired Peripheral Chip Select (PCS).

`lpspi_pcs_polarity_config_t pcsActiveHighOrLow`

Desired PCS active high or low

`lpspi_pin_config_t pinCfg`

Configures which pins are used for input and output data during single bit transfers.

`lpspi_data_out_config_t dataOutConfig`

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

`bool enableInputDelay`

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

`struct __lpspi_slave_config`

#include <fsl_lpspi.h> LPSPI slave configuration structure.

Public Members`uint32_t bitsPerFrame`

Bits per frame, minimum 8, maximum 4096.

`lpspi_clock_polarity_t cpol`

Clock polarity.

`lpspi_clock_phase_t cpha`

Clock phase.

`lpspi_shift_direction_t direction`

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct *_lpspi_transfer*

#include <fsl_lpspi.h> LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from *_lpspi_transfer_config_flag_for_master* if the transfer is used for master or *_lpspi_transfer_config_flag_for_slave* enumeration if the transfer is used for slave.

struct *_lpspi_master_handle*

#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool writeTcrInIsr

A flag that whether should write TCR in ISR.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile bool isTxMask

A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame

Number of bytes in each frame

volatile uint16_t frameSize

Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if the txData is NULL.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

`lpspi_master_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`struct _lpspi_slave_handle`
#include <fsl_lpspi.h> LPSPI slave transfer handle structure used for transactional API.

Public Members

`volatile bool isByteSwap`
A flag that whether should byte swap.

`volatile uint8_t fifoSize`
FIFO dataSize.

`volatile uint8_t rxWatermark`
Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

`volatile uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

2.32 LPSPI eDMA Driver

`FSL_LPSPI_EDMA_DRIVER_VERSION`
LPSPI EDMA driver version.

`DMA_MAX_TRANSFER_COUNT`
DMA max transfer size.

`typedef struct _lpspi_master_edma_handle lpspi_master_edma_handle_t`
Forward declaration of the `_lpspi_master_edma_handle` typedefs.

`typedef struct _lpspi_slave_edma_handle lpspi_slave_edma_handle_t`
Forward declaration of the `_lpspi_slave_edma_handle` typedefs.

`typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_master_edma_handle_t *handle, status_t status, void *userData)`
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPi_Type *base,
lpspi_slave_edma_handle_t *handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

LPSPi peripheral base address.

Param handle

Pointer to the handle for the LPSPi slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
void LPSPi_MasterTransferCreateHandleEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t
*handle, lpspi_master_edma_transfer_callback_t
callback, void *userData, edma_handle_t
*edmaRxRegToRxDataHandle, edma_handle_t
*edmaTxDataToTxRegHandle)
```

Initializes the LPSPi master eDMA handle.

This function initializes the LPSPi eDMA handle which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Note that the LPSPi eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPi peripheral base address.
- handle – LPSPi handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPi callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

```
status_t LPSPi_MasterTransferEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t *handle,
lpspi_transfer_t *transfer)
```

LPSPi master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPi peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- configFlags – transfer configuration flags. `_lpspi_transfer_config_flag_for_master`.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

`status_t` LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure, config field is not used.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.
- `kStatus_InvalidArgument` – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

`void` LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *size_t* *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of *status_t*.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, *void* *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for `edmaRxRegToRxDataHandle` and Tx DMAMUX source for `edmaTxDataToTxRegHandle`. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for `edmaRxRegToRxDataHandle`.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to `lpspi_slave_edma_handle_t`.
- callback – LPSPI callback.
- userData – callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size

should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle)`

LPSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.

`status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle, size_t *count)`

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of `status_t`.

`struct _lpspi_master_edma_handle`

`#include <fsl_lpspi_edma.h>` LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

`volatile bool isPcsContinuous`

Is PCS continuous in transfer.

`volatile bool isByteSwap`

A flag that whether should byte swap.

`volatile uint8_t fifoSize`

FIFO dataSize.

`volatile uint8_t rxWatermark`

Rx watermark.

`volatile uint8_t bytesEachWrite`

Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`volatile uint8_t bytesLastRead`
Bytes for last read RDR.

`volatile bool isThereExtraRxBytes`
Is there extra RX byte.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`edma_tcd_t *lastTimeTCD`
Pointer to the lastTime TCD

`bool isMultiDMATransmit`
Is there multi DMA transmit

`volatile uint8_t dmaTransmitTime`
DMA Transfer times.

`uint32_t lastTimeDataBytes`
DMA transmit last Time data Bytes

`uint32_t dataBytesEveryTime`
Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

`edma_transfer_config_t transferConfigRx`
Config of DMA rx channel.

`edma_transfer_config_t transferConfigTx`
Config of DMA tx channel.

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`uint32_t transmitCommand`
Used to write TCR for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

```
uint8_t nbytes
    eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
    Completion callback.

void *userData
    Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
    edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
    edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
    SoftwareTCD, internal used

struct __lpspi_slave_edma_handle
    #include <fsl_lpspi_edma.h> LPSPi slave eDMA transfer handle structure used for transac-
    tional API.
```

Public Members

```
volatile bool isByteSwap
    A flag that whether should byte swap.

volatile uint8_t fifoSize
    FIFO dataSize.

volatile uint8_t rxWatermark
    Rx watermark.

volatile uint8_t bytesEachWrite
    Bytes for each write TDR.

volatile uint8_t bytesEachRead
    Bytes for each read RDR.

volatile uint8_t bytesLastRead
    Bytes for last read RDR.

volatile bool isThereExtraRxBytes
    Is there extra RX byte.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData
    Send buffer.

uint8_t *volatile rxData
    Receive buffer.

volatile size_t txRemainingByteCount
    Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
    Number of bytes remaining to receive.
```

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state.

`uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_edma_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`edma_handle_t *edmaRxRegToRxDataHandle`
edma_handle_t handle point used for RxReg to RxData buff

`edma_handle_t *edmaTxDataToTxRegHandle`
edma_handle_t handle point used for TxData to TxReg

`edma_tcd_t lpspiSoftwareTCD[2]`
SoftwareTCD, internal used

2.33 LPTMR: Low-Power Timer

`void LPTMR_Init(LPTMR_Type *base, const lptmr_config_t *config)`
Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- `base` – LPTMR peripheral base address
- `config` – A pointer to the LPTMR configuration structure.

`void LPTMR_Deinit(LPTMR_Type *base)`
Gates the LPTMR clock.

Parameters

- `base` – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

```
static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
```

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the fsl_common.h to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

```
static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum __lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum __lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum __lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum __lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3

Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4

Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5

Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6

Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7

Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8

Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable
Timer interrupt enable

enum _lptmr_status_flags
List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag
Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t
LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t
LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t
LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t
LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

```
typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t
```

List of the LPTMR interrupts.

```
typedef enum _lptmr_status_flags lptmr_status_flags_t
```

List of the LPTMR status flags.

```
typedef struct _lptmr_config lptmr_config_t
```

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

```
static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)
```

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

```
struct _lptmr_config
```

#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.34 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.35 LPUART Driver

`static inline void LPUART_SoftwareReset(LPUART_Type *base)`

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- `base` – LPUART peripheral base address.

`status_t LPUART_Init(LPUART_Type *base, const lpuart_config_t *config, uint32_t srcClock_Hz)`

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the `LPUART_GetDefaultConfig()` function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `config` – Pointer to a user-defined configuration structure.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not support in current clock source.
- `kStatus_Success` – LPUART initialize succeed

`status_t LPUART_Deinit(LPUART_Type *base)`

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- `base` – LPUART peripheral base address.

Return values

- `kStatus_Success` – Deinit is success.
- `kStatus_LPUART_Timeout` – Timeout during deinit.

```
void LPUART_GetDefaultConfig(lpuart_config_t *config)
```

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: `lpuartConfig->baudRate_Bps = 115200U`; `lpuartConfig->parityMode = kLPUART_ParityDisabled`; `lpuartConfig->dataBitsCount = kLPUART_EightDataBits`; `lpuartConfig->isMsb = false`; `lpuartConfig->stopBitCount = kLPUART_OneStopBit`; `lpuartConfig->txFifoWatermark = 0`; `lpuartConfig->rxFifoWatermark = 1`; `lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit`; `lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1`; `lpuartConfig->enableTx = false`; `lpuartConfig->enableRx = false`;

Parameters

- `config` – Pointer to a configuration structure.

```
status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t  
srcClock_Hz)
```

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the `LPUART_Init`.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `baudRate_Bps` – LPUART baudrate to be set.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not supported in the current clock source.
- `kStatus_Success` – Set baudrate succeeded.

```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t  
address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

```
static inline void LPUART__EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)
```

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void LPUART__SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

```
static inline void LPUART__SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

```
static inline void LPUART__TransferEnable16Bit(lpuart_handle_t *handle, bool enable)
```

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in `lpuart_handle_t`.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

```
uint32_t LPUART__GetStatusFlags(LPUART_Type *base)
```

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators `_lpuart_flags`. To check for a specific status, compare the return value with enumerators in the `_lpuart_flags`. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART__GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the `_lpuart_flags`.

`status_t` LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

`void` LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This example shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void` LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, STAT[TDRE], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART_GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

static inline uint8_t LPUART_ReadByte(LPUART_Type *base)

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

`void LPUART_SendAddress(LPUART_Type *base, uint8_t address)`

Transmit an address frame in 9-bit data mode.

Parameters

- `base` – LPUART peripheral base address.
- `address` – LPUART slave address.

`status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)`

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)`

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)`

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.

- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)`

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`void LPUART_TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_callback_t callback, void *userData)`

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,  
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t  
                                     *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

```
void LPUART_TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.

- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBytes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_t *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter kStatus_UART_RxIdle. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to xfer->data, which returns with the parameter receivedBytes set to 5. For the remaining 5 bytes, the newly arrived data is saved from xfer->data[5]. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void LPUART_TransferAbortReceive(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)`

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

`void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)`

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

void LPUART_DriverIRQHandler(uint32_t instance)

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport

Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected

IDLE flag.

enumerator kStatus_LPUART_Timeout

LPUART times out.

enum _lpuart_parity_mode

LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled

Parity disabled

enumerator kLPUART_ParityEven

Parity enabled, type even, bit setting: PE | PT = 10

enumerator kLPUART_ParityOdd

Parity enabled, type odd, bit setting: PE | PT = 11

enum _lpuart_data_bits

LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits

Eight data bit

enumerator kLPUART_SevenDataBits

Seven data bit

enum _lpuart_stop_bit_count

LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit

One stop bit

enumerator kLPUART_TwoStopBit

Two stop bits

enum _lpuart_transmit_cts_source

LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin

CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult

CTS resource is the match result.

enum _lpuart_transmit_cts_config

LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart

CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle

CTS input is sampled when the transmitter is idle

enum _lpuart_idle_type_select

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128

the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable

Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable

Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable

Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable

Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable

Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable

Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable

Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable

Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable

Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t

LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t

LPUART transmit CTS configure.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t

LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct *_lpuart_config* lpuart_config_t

LPUART configuration structure.

typedef struct *_lpuart_transfer* lpuart_transfer_t

LPUART transfer structure.

typedef struct *_lpuart_handle* lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle, status_t status, void *userData)

LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES

Retry times for waiting flag.

struct __lpuart_config

#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps

LPUART baud rate

lpuart_parity_mode_t parityMode

Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount

Data bits count, eight (default), seven

bool isMsb

Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount

Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark

TX FIFO watermark

uint8_t rxFifoWatermark

RX FIFO watermark

bool enableRxRTS

RX RTS enable

bool enableTxCTS

TX CTS enable

lpuart_transmit_cts_source_t txCtsSource

TX CTS source

lpuart_transmit_cts_config_t txCtsConfig

TX CTS configure

uint8_t rtsWatermark

RTS watermark

lpuart_idle_type_select_t rxIdleType

RX IDLE type.

lpuart_idle_config_t rxIdleConfig

RX IDLE configuration.

bool enableTx

Enable TX

bool enableRx

Enable RX

bool swapTxdRxd

Swap TXD and RXD pins

struct __lpuart_transfer

#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct __lpuart_handle

#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize

Size of the remaining data to send.

size_t txDataSizeAll

Size of the data to send out.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t rxDataSizeAll

Size of the data to receive.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback

Callback function.

void *userData

LPUART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state.

bool isSevenDataBits

Seven data bits flag.

bool is16bitData

16bit data bits flag, only used for 9bit or 10bit data

union __unnamed24__

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

uint16_t *rxData16

The buffer to receive data.

```
const uint8_t *txData
    The buffer of data to be sent.
const uint16_t *txData16
    The buffer of data to be sent.
union __unnamed26__
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
const uint16_t *volatile txData16
    Address of remaining data to send.
union __unnamed28__
```

Public Members

```
uint8_t *volatile rxData
    Address of remaining data to receive.
uint16_t *volatile rxData16
    Address of remaining data to receive.
union __unnamed30__
```

Public Members

```
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
uint16_t *rxRingBuffer16
    Start address of the receiver ring buffer.
```

2.36 LPUART eDMA Driver

```
void LPUART__TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
    lpuart_edma_transfer_callback_t callback, void
    *userData, edma_handle_t *txEdmaHandle,
    edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.

- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

status_t LPUART_SendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

status_t LPUART_ReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.
- xfer – LPUART eDMA transfer structure, see *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others fail.
- kStatus_LPUART_RxBusy – Previous transfer ongoing.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortSendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

```
status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, lpuart_edma_handle_t
                                         *handle, uint32_t *count)
```

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

```
status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, lpuart_edma_handle_t
                                             *handle, uint32_t *count)
```

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

```
void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)
```

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

```
FSL_LPUART_EDMA_DRIVER_VERSION
```

LPUART EDMA driver version.

```
typedef struct _lpuart_edma_handle lpuart_edma_handle_t
```

```
typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, lpuart_edma_handle_t
*handle, status_t status, void *userData)
```

LPUART transfer callback function.

```
struct _lpuart_edma_handle
    #include <fsl_lpuart_edma.h> LPUART eDMA handle.
```

Public Members

```
lpuart_edma_transfer_callback_t callback
    Callback function.

void *userData
    LPUART callback function parameter.

size_t rxDataSizeAll
    Size of the data to receive.

size_t txDataSizeAll
    Size of the data to send out.

edma_handle_t *txEdmaHandle
    The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
    The eDMA RX channel used.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

volatile uint8_t txState
    TX transfer state.

volatile uint8_t rxState
    RX transfer state
```

2.37 MCX_CMC: Core Mode Controller Driver

```
enum _cmc_power_mode_protection
    CMC power mode Protection enumeration.

    Values:

    enumerator kCMC_AllowDeepSleepMode
        Allow Deep Sleep mode.

    enumerator kCMC_AllowPowerDownMode
        Allow Power Down mode.

    enumerator kCMC_AllowDeepPowerDownMode
        Allow Deep Power Down mode.

    enumerator kCMC_AllowAllLowPowerModes
        Allow Deep Sleep, Power Down, Deep Power Down modes.

enum _cmc_wakeup_sources
    Wake up sources from the previous low power mode entry.
```

Note: kCMC_WakeupFromUsbFs, kCMC_WakeupFromITRC, kCMC_WakeupFromCpu1 are not supported in MCXA family.

Values:

enumerator kCMC_WakeupFromResetInterruptOrPowerDown

Wakeup source is reset interrupt, or wake up from Deep Power Down.

enumerator kCMC_WakeupFromDebugReuqest

Wakeup source is debug request.

enumerator kCMC_WakeupFromInterrupt

Wakeup source is interrupt.

enumerator kCMC_WakeupFromDMAWakeup

Wakeup source is DMA Wakeup.

enumerator kCMC_WakeupFromWUURequest

Wakeup source is WUU request.

enumerator kCMC_WakeupFromUsbFs

Wakeup source is USBFS(USB0).

enumerator kCMC_WakeupFromITRC

Wakeup source is ITRC.

enumerator kCMC_WakeupFromCpu1

Wakeup source is CPU1.

enum _cmc_system_reset_interrupt_enable

System Reset Interrupt enable enumeration.

Values:

enumerator kCMC_PinResetInterruptEnable

Pin Reset interrupt enable.

enumerator kCMC_DAPResetInterruptEnable

DAP Reset interrupt enable.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable

Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kCMC_SoftwareResetInterruptEnable

Software Reset interrupt enable.

enumerator kCMC_LockupResetInterruptEnable

Lockup Reset interrupt enable.

enum _cmc_system_reset_interrupt_flag

CMC System Reset Interrupt Status flag.

Values:

enumerator kCMC_PinResetInterruptFlag

Pin Reset interrupt flag.

enumerator kCMC_DAPResetInterruptFlag

DAP Reset interrupt flag.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetFlag

Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kCMC_SoftwareResetInterruptFlag

Software Reset interrupt flag.

enumerator kCMC_LockupResetInterruptFlag

Lock up Reset interrupt flag.

enum _cmc_system_sram_arrays

CMC System SRAM arrays low power mode enable enumeration.

Values:

enumerator kCMC_RAMX0

Used to control RAMX0.

enumerator kCMC_RAMX1

Used to control RAMX1.

enumerator kCMC_RAMX2

Used to control RAMX2.

enumerator kCMC_RAMB

Used to control RAMB.

enumerator kCMC_RAMC0

Used to control RAMC0.

enumerator kCMC_RAMC1

Used to control RAMC1.

enumerator kCMC_RAMD0

Used to control RAMD0.

enumerator kCMC_RAMD1

Used to control RAMD1.

enumerator kCMC_RAME0

Used to control RAME0.

enumerator kCMC_RAME1

Used to control RAME1.

enumerator kCMC_RAMF0

Used to control RAMF0.

enumerator kCMC_RAMF1

Used to control RAMF1.

enumerator kCMC_RAMG0_RAMG1

Used to control RAMG0 and RAMG1.

enumerator kCMC_RAMG2_RAMG3

Used to control RAMG2 and RAMG3.

enumerator kCMC_RAMH0_RAMH1

Used to control RAMH0 and RAMH1.

enumerator kCMC_LPCAC

Used to control LPCAC.

enumerator kCMC_DMA0_DMA1_PKC

Used to control DMA0, DMA1 and PKC.

enumerator kCMC_USB0

Used to control USB0.

enumerator kCMC_PQ

Used to control PQ.

enumerator kCMC_CAN0_CAN1_ENET_USB1

Used to control CAN0, CAN1, ENET, USB1.

enumerator kCMC_FlexSPI

Used to control FlexSPI.

enumerator kCMC_AllSramArrays

Mask of all System SRAM arrays.

enum _cmc_system_reset_sources

System reset sources enumeration.

Values:

enumerator kCMC_WakeUpReset

The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kCMC_PORReset

The reset caused by power on reset detection logic.

enumerator kCMC_WarmReset

The last reset source is a warm reset source.

enumerator kCMC_FatalReset

The last reset source is a fatal reset source.

enumerator kCMC_PinReset

The reset caused by the RESET_b pin.

enumerator kCMC_DAPReset

The reset caused by a reset request from the Debug Access port.

enumerator kCMC_ResetTimeout

The reset caused by a timeout or other error condition in the system reset generation.

enumerator kCMC_LowPowerAcknowledgeTimeoutReset

The reset caused by a timeout in low power mode entry logic.

enumerator kCMC_SCGReset

The reset caused by a loss of clock or loss of lock event in the SCG.

enumerator kCMC_SoftwareReset

The reset caused by a software reset request.

enumerator kCMC_LockUoReset

The reset caused by the ARM core indication of a LOCKUP event.

enumerator kCMC_JTAGSystemReset

The reset caused by a JTAG system reset request.

enum _cmc_core_clock_gate_status

Indicate the core clock was gated.

Values:

enumerator kCMC_CoreClockNotGated

Core clock not gated.

enumerator kCMC_CoreClockGated

Core clock was gated due to low power mode entry.

enum _cmc_clock_mode

CMC clock mode enumeration.

Values:

enumerator kCMC_GateNoneClock

No clock gating.

enumerator kCMC_GateCoreClock

Gate Core clock.

enumerator kCMC_GateCorePlatformClock

Gate Core clock and platform clock.

enumerator kCMC_GateAllSystemClocks

Gate all System clocks, without getting core entering into low power mode.

enumerator kCMC_GateAllSystemClocksEnterLowPowerMode

Gate all System clocks, with core entering into low power mode.

enum _cmc_low_power_mode

CMC power mode enumeration.

Values:

enumerator kCMC_ActiveOrSleepMode

Select Active/Sleep mode.

enumerator kCMC_DeepSleepMode

Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator kCMC_PowerDownMode

Select Power Down mode when a core executes WFI or WFE instruction.

enumerator kCMC_DeepPowerDown

Select Deep Power Down mode when a core executes WFI or WFE instruction.

typedef enum _cmc_core_clock_gate_status cmc_core_clock_gate_status_t

Indicate the core clock was gated.

typedef enum _cmc_clock_mode cmc_clock_mode_t

CMC clock mode enumeration.

typedef enum _cmc_low_power_mode cmc_low_power_mode_t

CMC power mode enumeration.

typedef struct _cmc_reset_pin_config cmc_reset_pin_config_t

CMC reset pin configuration.

typedef struct _cmc_power_domain_config cmc_power_domain_config_t

power mode configuration for each power domain.

FSL_CMC_DRIVER_VERSION

CMC driver version 2.5.0.

CMC_BLR_LOCK_FIELD_WIDTH

CMC_BLR_LOCK_IDX_MASK(index)

CMC_BLR_LOCK_IDX_SHIFT(index)

CMC_BLR_LOCK_IDX(index, value)

void CMC_SetClockMode(CMC_Type *base, cmc_clock_mode_t mode)

Sets clock mode.

This function configs the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

Parameters

- base – CMC peripheral base address.
- mode – System clock mode.

static inline void CMC_LockClockModeSetting(CMC_Type *base)

Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- base – CMC peripheral base address.

static inline *cmc_core_clock_gate_status_t* CMC_GetCoreClockGatedStatus(CMC_Type *base)

Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void CMC_ClearCoreClockGatedStatus(CMC_Type *base)

Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline *uint8_t* CMC_GetWakeupSource(CMC_Type *base)

Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See `_cmc_wakeup_sources` for details.

static inline *cmc_clock_mode_t* CMC_GetClockMode(CMC_Type *base)

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Low Power status.

static inline *uint32_t* CMC_GetSystemResetStatus(CMC_Type *base)

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- base – CMC peripheral base address.

Returns

The most recent system reset status. See `_cmc_system_reset_sources` for details.

static inline uint32_t CMC_GetStickySystemResetStatus(CMC_Type *base)

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See `_cmc_system_reset_sources` for details.

static inline void CMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)

Clears the sticky system reset status flags.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the sticky system reset status to be cleared.

static inline uint8_t CMC_GetResetCount(CMC_Type *base)

Gets the number of reset sequences completed since the last Cold Reset.

Parameters

- base – CMC peripheral base address.

Returns

The number of reset sequences.

void CMC_SetPowerModeProtection(CMC_Type *base, uint32_t allowedModes)

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power doamin.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowSleepMode | kCMC_AllowDeepSleepMode)`. To allow all low power modes, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowAllLowPowerModes)`.

Parameters

- base – CMC peripheral base address.
- allowedModes – Bitmaps of the allowed power modes. See `_cmc_power_mode_protection` for details.

static inline void CMC_LockPowerModeProtectionSetting(CMC_Type *base)

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- base – CMC peripheral base address.

```
static inline void CMC_SetGlobalPowerMode(CMC_Type *base, cmc_low_power_mode_t
                                         lowPowerMode)
```

Config the same lowPower mode for all power domain.

This function configures the same low power mode for MAIN power domain and WAKE power domain.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See *cmc_low_power_mode_t* for details.

```
static inline void CMC_SetMAINPowerMode(CMC_Type *base, cmc_low_power_mode_t
                                         lowPowerMode)
```

Configures entry into low power mode for the MAIN Power domain.

This function configures the low power mode for the MAIN power domain, when the core executes WFI/WFE instruction. The available lowPower modes are defined in the *cmc_low_power_mode_t*.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See *cmc_low_power_mode_t* for details.

```
static inline cmc_low_power_mode_t CMC_GetMAINPowerMode(CMC_Type *base)
```

Gets the power mode of the MAIN Power domain.

Parameters

- base – CMC peripheral base address.

Returns

The power mode of MAIN Power domain. See *cmc_low_power_mode_t* for details.

```
void CMC_ConfigResetPin(CMC_Type *base, const cmc_reset_pin_config_t *config)
```

Configure reset pin.

This function configures reset pin. When enabled, the low power filter is enabled in both Active and Low power modes, the reset filter is only enabled in Active mode. When both filters are enabled, they operate in series.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the reset pin config structure.

```
static inline void CMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)
```

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See *_cmc_system_reset_interrupt_enable* for details.

```
static inline void CMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)
```

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See `_cmc_system_reset_interrupt_enable` for details.

```
static inline uint32_t CMC_GetSystemResetInterruptFlags(CMC_Type *base)
```

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns

System reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

```
static inline void CMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)
```

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- base – CMC peripheral base address.
- mask – System Reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

```
static inline void CMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)
```

Enable/Disable Non maskable Pin interrupt.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Non maskable pin interrupt. true - enable Non-maskable pin interrupt. false - disable Non-maskable pin interrupt.

```
static inline uint8_t CMC_GetISPMODEPinLogic(CMC_Type *base)
```

Gets the logic state of the ISPMODE_n pin.

This function returns the logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

```
static inline void CMC_ClearISPMODEPinLogic(CMC_Type *base)
```

Clears ISPMODE_n pin state.

Parameters

- base – CMC peripheral base address.


```
static inline void CMC_ForceBootConfiguration(CMC_Type *base, bool assert)
```

Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Confign pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.

```
static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base)
```

Gets the status information written by the BootROM.

Parameters

- base – CMC peripheral base address.

Returns

The status information written by the BootROM.

```
static inline void CMC_SetBootRomStatus(CMC_Type *base, uint32_t statValue)
```

Sets the bootROM status value.

Note: This function is useful when result of CMC_CheckBootRomRegisterWrittable() is true.

Parameters

- base – CMC peripheral base address.
- stat – The state value to set.

```
static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base, uint8_t index)
```

Gets the information written by the BootROM.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Returns

The status information written by the BootROM.

```
static inline void CMC_WriteBootRomStatusReg(CMC_Type *base, uint8_t index, uint32_t value)
```

Writes value to BootROM status register, in this way, BootROM status registers are used as general purpose register.

Note: Value in BootROM status registers are reset in cold reset.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.
- value – Value to write.

```
static inline void CMC_LockWriteOperationToBootRomStatusReg(CMC_Type *base, uint8_t index)
```

Lock write operation to BootROM status register and BootROM Lock register.

Note: If locked, BootROM status register cannot be written.

Note: Once locked, only cold reset can reset related register.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

static inline bool CMC_CheckBootRomStatusRegWriteLocked(CMC_Type *base, uint8_t index)
Check if BootROM status register can be written.

Parameters

- base – CMC peripheral base address.
- index – The index of BootROM status register, ranges from 0.

Return values

- true – The selected BootRom status register is locked and cannot be written.
- false – The selected BootRom Status register is unlocked and cannot be written.

void CMC_PowerOffSRAMAllMode(CMC_Type *base, uint32_t mask)
Power off the selected system SRAM always.

Note: This function power off the selected system SRAM always. The SRAM arrays should not be accessed while they are shut down. SRAM array contents are not retained if they are powered off.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered off all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

static inline void CMC_PowerOnSRAMAllMode(CMC_Type *base, uint32_t mask)
Power on SRAM during all mode.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.

- `mask` – Bitmap of the SRAM arrays to be powered on all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`void CMC_PowerOffSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)`

Power off the selected system SRAM during low power modes only.

This function power off the selected system SRAM only during low power mode. SRAM array contents are not retained if they are power off.

Parameters

- `base` – CMC peripheral base address.
- `mask` – Bitmap of the SRAM arrays to be power off during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`static inline void CMC_PowerOnSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)`

Power on the selected system SRAM during low power modes only.

This function power on the selected system SRAM. The SRAM array contents are retained in low power modes.

Parameters

- `base` – CMC peripheral base address.
- `mask` – Bitmap of the SRAM arrays to be power on during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`void CMC_ConfigFlashMode(CMC_Type *base, bool wake, bool doze, bool disable)`

Configs the low power mode of the on-chip flash memory.

This function configs the low power mode of the on-chip flash memory.

Parameters

- `base` – CMC peripheral base address.
- `wake` – `true`: Flash will exit low power state during the flash memory accesses. `false`: No effect.
- `doze` – `true`: Flash is disabled while core is sleeping `false`: No effect.
- `disable` – `true`: Flash memory is placed in low power state. `false`: No effect.

`static inline void CMC_EnableDebugOperation(CMC_Type *base, bool enable)`

Enables/Disables debug Operation when the core sleep.

This function configs what happens to debug when core sleeps.

Parameters

- `base` – CMC peripheral base address.
- `enable` – Enable or disable Debug when Core is sleeping. `true` - Debug remains enabled when the core is sleeping. `false` - Debug is disabled when the core is sleeping.

`void CMC_PreEnterLowPowerMode(void)`

Prepares to enter low power modes.

This function should be called before entering low power modes.

`void CMC_PostExitLowPowerMode(void)`

Recovers after wake up from low power modes.

This function should be called after wake up from low power modes. This function should be used with `CMC_PreEnterLowPowerMode()`

`void CMC_GlobalEnterLowPowerMode(CMC_Type *base, cmc_low_power_mode_t lowPowerMode)`

Config the entry into the same low power mode for each power domains.

This function provides the feature to entry into the same low power mode for each power domains. Before invoking this function, please ensure the selected power mode have been allowed.

Parameters

- `base` – CMC peripheral base address.
- `lowPowerMode` – The low power mode to be entered. See `cmc_low_power_mode_t` for the details.

`void CMC_EnterLowPowerMode(CMC_Type *base, const cmc_power_domain_config_t *config)`

Config the entry into different low power modes for each power domains.

This function provides the feature to entry into different low power modes for each power domains. Before invoking this function please ensure the selected modes are allowed.

Parameters

- `base` – CMC peripheral base address.
- `config` – Pointer to the `cmc_power_domain_config_t` structure.

`bool lowpowerFilterEnable`

Low Power Filter enable.

`bool resetFilterEnable`

Reset Filter enable.

`uint8_t resetFilterWidth`

Width of the Reset Filter.

`cmc_clock_mode_t clock_mode`

Clock mode for each power domain.

`cmc_low_power_mode_t main_domain`

The low power mode of the MAIN power domain.

`struct _cmc_reset_pin_config`

`#include <fsl_cmc.h>` CMC reset pin configuration.

`struct _cmc_power_domain_config`

`#include <fsl_cmc.h>` power mode configuration for each power domain.

2.38 MU: Messaging Unit

`uint32_t MU_GetInstance(MU_Type *base)`

Get the MU instance index.

Parameters

- `base` – MU peripheral base address.

Returns

MU instance index.

`void MU__Init(MU_Type *base)`

Initializes the MU module.

This function enables the MU clock only.

Parameters

- `base` – MU peripheral base address.

`void MU__Deinit(MU_Type *base)`

De-initializes the MU module.

This function disables the MU clock only.

Parameters

- `base` – MU peripheral base address.

`static inline void MU__SendMsgNonBlocking(MU_Type *base, uint32_t regIndex, uint32_t msg)`

Writes a message to the TX register.

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { } Wait for TX0 register empty.
MU__SendMsgNonBlocking(base, kMU_MsgReg0, MSG_VAL); Write message to the TX0 register.
```

Parameters

- `base` – MU peripheral base address.
- `regIndex` – TX register index, see `mu_msg_reg_index_t`.
- `msg` – Message to send.

`status_t MU_SendMsg(MU_Type *base, uint32_t regIndex, uint32_t msg)`

Blocks to send a message.

This function waits until the TX register is empty and sends the message. If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and returns `kStatus_Timeout`.

Parameters

- `base` – MU peripheral base address.
- `regIndex` – MU message register, see `mu_msg_reg_index_t`.
- `msg` – Message to send.

Return values

- `kStatus_Success` – Message sent successfully.
- `kStatus_Timeout` – Timeout occurred while waiting for TX register to be empty.

Returns

`status_t`

`static inline uint32_t MU__ReceiveMsgNonBlocking(MU_Type *base, uint32_t regIndex)`

Reads a message from the RX register.

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
uint32_t msg;
while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
{
    } Wait for the RX0 register full.

msg = MU_ReceiveMsgNonBlocking(base, kMU_MsgReg0); Read message from RX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see `mu_msg_reg_index_t`.

Returns

The received message.

`status_t` MU_ReceiveMsgTimeout(MU_Type *base, uint32_t regIndex, uint32_t *readValue)

Blocks to receive a message with timeout protection.

This function waits until the RX register is full and receives the message. If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and return `kStatus_Timeout`.

This function provides the same blocking behavior as `MU_ReceiveMsg()` but with additional timeout protection to prevent system hangs if the other core becomes unresponsive or if hardware issues occur.

Note: Both `MU_ReceiveMsg()` and `MU_ReceiveMsgTimeout()` are blocking functions. The difference is that this function includes timeout protection while `MU_ReceiveMsg()` waits indefinitely.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see `mu_msg_reg_index_t`.
- readValue – Pointer to store the received message.

Return values

- `kStatus_Success` – Message received successfully.
- `kStatus_InvalidArgument` – Invalid `readValue` pointer.
- `kStatus_Timeout` – Timeout occurred while waiting for RX register to be full.

Returns

`status_t`

`uint32_t` MU_ReceiveMsg(MU_Type *base, uint32_t regIndex)

Blocks to receive a message (infinite wait, no timeout protection).

This function waits until the RX register is full and receives the message. This function will wait indefinitely until a message is received.

Note: Both `MU_ReceiveMsg()` and `MU_ReceiveMsgTimeout()` are blocking functions. The difference is that `MU_ReceiveMsgTimeout()` includes timeout protection while this function waits indefinitely.

Warning: This function does not include timeout protection and may cause system hangs if the other core becomes unresponsive. For applications requiring timeout protection, use `MU_ReceiveMsgTimeout()` instead.

Parameters

- `base` – MU peripheral base address.
- `regIndex` – RX register index, see `mu_msg_reg_index_t`.

Returns

The received message.

`static inline void MU_SetFlagsNonBlocking(MU_Type *base, uint32_t flags)`

Sets the 3-bit MU flags reflect on the other MU side.

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag `kMU_FlagsUpdatingFlag` asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag `kMU_FlagsUpdatingFlag` is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag `kMU_FlagsUpdatingFlag` is cleared before calling this function.

```
while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
{
    } Wait for previous MU flags updating.
    MU_SetFlagsNonBlocking(base, 0U); Set the mU flags.
```

Parameters

- `base` – MU peripheral base address.
- `flags` – The 3-bit MU flags to set.

`status_t MU_SetFlags(MU_Type *base, uint32_t flags)`

brief Blocks setting the 3-bit MU flags reflect on the other MU side.

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag `kMU_FlagsUpdatingFlag` asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag `kMU_FlagsUpdatingFlag` is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag `kMU_FlagsUpdatingFlag` cleared and sets the 3-bit MU flags.

If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations and return `kStatus_Timeout`.

return `status_t` `retval` `kStatus_Success` Flags were set successfully. `retval` `kStatus_Timeout` Timeout occurred while waiting for flags to update.

Parameters

- `base` – MU peripheral base address.
- `flags` – The 3-bit MU flags to set.

`static inline uint32_t MU_GetFlags(MU_Type *base)`

Gets the current value of the 3-bit MU flags set by the other side.

This function gets the current 3-bit MU flags on the current side.

Parameters

- base – MU peripheral base address.

Returns

flags Current value of the 3-bit flags.

uint32_t MU_GetStatusFlags(MU_Type *base)

Gets the MU status flags.

This function returns the bit mask of the MU status flags. See `_mu_status_flags`.

```
uint32_t flags;
flags = MU_GetStatusFlags(base); Get all status flags.
if (kMU_Tx0EmptyFlag & flags)
{
    The TX0 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG0_VAL);
}
if (kMU_Tx1EmptyFlag & flags)
{
    The TX1 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg1, MSG1_VAL);
}
```

If there are more than 4 general purpose interrupts, use `MU_GetGeneralPurposeStatusFlags`.

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU status flags, see `_mu_status_flags`.

static inline uint32_t MU_GetInterruptsPending(MU_Type *base)

Gets the MU IRQ pending status of enabled interrupts.

This function returns the bit mask of the pending MU IRQs of enabled interrupts. Only these flags are checked. `kMU_Tx0EmptyFlag` `kMU_Tx1EmptyFlag` `kMU_Tx2EmptyFlag` `kMU_Tx3EmptyFlag` `kMU_Rx0FullFlag` `kMU_Rx1FullFlag` `kMU_Rx2FullFlag` `kMU_Rx3FullFlag` `kMU_GenInt0Flag` `kMU_GenInt1Flag` `kMU_GenInt2Flag` `kMU_GenInt3Flag`

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU IRQs pending.

static inline void MU_ClearStatusFlags(MU_Type *base, uint32_t flags)

Clears the specific MU status flags.

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See `_mu_status_flags`.

```
Clear general interrupt 0 and general interrupt 1 pending flags.
MU_ClearStatusFlags(base, kMU_GenInt0Flag | kMU_GenInt1Flag);
```

If there are more than 4 general purpose interrupts, use `MU_ClearGeneralPurposeStatusFlags`.

Parameters

- base – MU peripheral base address.

- `flags` – Bit mask of the MU status flags. See `_mu_status_flags`. Only the following flags can be cleared by software (if applicable for particular device), other flags are cleared by hardware:
 - `kMU_GenInt0Flag`
 - `kMU_GenInt1Flag`
 - `kMU_GenInt2Flag`
 - `kMU_GenInt3Flag`
 - `kMU_MuResetInterruptFlag`
 - `kMU_OtherSideEnterRunInterruptFlag`
 - `kMU_OtherSideEnterHaltInterruptFlag`
 - `kMU_OtherSideEnterWaitInterruptFlag`
 - `kMU_OtherSideEnterStopInterruptFlag`
 - `kMU_OtherSideEnterPowerDownInterruptFlag`
 - `kMU_ResetAssertInterruptFlag`
 - `kMU_HardwareResetInterruptFlag`

`static inline void MU_EnableInterrupts(MU_Type *base, uint32_t interrupts)`

Enables the specific MU interrupts.

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See `_mu_interrupt_enable`.

Enable general interrupt 0 and TX0 empty interrupt.
`MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);`

If there are more than 4 general purpose interrupts, use `MU_EnableGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

`static inline void MU_DisableInterrupts(MU_Type *base, uint32_t interrupts)`

Disables the specific MU interrupts.

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See `_mu_interrupt_enable`.

Disable general interrupt 0 and TX0 empty interrupt.
`MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);`

If there are more than 4 general purpose interrupts, use `MU_DisableGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU interrupts. See `_mu_interrupt_enable`.

`status_t MU_TriggerInterrupts(MU_Type *base, uint32_t interrupts)`

Triggers interrupts to the other core.

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `_mu_interrupt_trigger`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This

function checks whether the previous interrupts have been processed. If not, it returns an error.

```
if (kStatus_Success != MU_TriggerInterrupts(base, kMU_GenInt0InterruptTrigger | kMU_
↪ GenInt2InterruptTrigger))
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

If there are more than 4 general purpose interrupts, use `MU_TriggerGeneralPurposeInterrupts`.

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the interrupts to trigger. See `_mu_interrupt_trigger`.

Return values

- `kStatus_Success` – Interrupts have been triggered successfully.
- `kStatus_Fail` – Previous interrupts have not been accepted.

`static inline void MU_EnableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)`

Enables the MU general purpose interrupts.

This function enables the MU general purpose interrupts. The interrupts to enable should be passed in as bit mask of `mu_general_purpose_interrupt_t`. The function `MU_EnableInterrupts` only support general interrupt 0~3, this function supports all general interrupts.

For example, to enable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪ GeneralPurposeInterrupt3);
```

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU general purpose interrupts, see `mu_general_purpose_interrupt_t`.

`static inline void MU_DisableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)`

Disables the MU general purpose interrupts.

This function disables the MU general purpose interrupts. The interrupts to disable should be passed in as bit mask of `mu_general_purpose_interrupt_t`. The function `MU_DisableInterrupts` only support general interrupt 0~3, this function supports all general interrupts.

For example, to disable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪ GeneralPurposeInterrupt3);
```

Parameters

- `base` – MU peripheral base address.
- `interrupts` – Bit mask of the MU general purpose interrupts. see `mu_general_purpose_interrupt_t`.

static inline uint32_t MU_GetGeneralPurposeStatusFlags(MU_Type *base)

Gets the MU general purpose interrupt status flags.

This function returns the bit mask of the MU general purpose interrupt status flags. MU_GetStatusFlags can only get general purpose interrupt status 0~3, this function can get all general purpose interrupts status.

This example shows to check whether general purpose interrupt 0 and 3 happened.

```
uint32_t flags;
flags = MU_GetGeneralPurposeStatusFlags(base);
if (kMU_GeneralPurposeInterrupt0 & flags)
{
}
if (kMU_GeneralPurposeInterrupt3 & flags)
{
}
```

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU general purpose interrupt status flags.

static inline void MU_ClearGeneralPurposeStatusFlags(MU_Type *base, uint32_t flags)

Clear the MU general purpose interrupt status flags.

This function clears the specific MU general purpose interrupt status flags. The flags to clear should be passed in as bit mask. `mu_general_purpose_interrupt_t_mu_status_flags`.

Example to clear general purpose interrupt 0 and general interrupt 1 pending flags.

```
MU_ClearGeneralPurposeStatusFlags(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt1);
```

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU general purpose interrupt status flags. See `mu_general_purpose_interrupt_t`.

static inline uint32_t MU_GetRxStatusFlags(MU_Type *base)

Return the RX status flags in reverse numerical order.

This function return the RX status flags in reverse order. Note: RFn bits of SR[3-0](mu status register) are mapped in ascending numerical order: RF0 -> SR[0] RF1 -> SR[1] RF2 -> SR[2] RF3 -> SR[3] This function will return these bits in reverse numerical order(RF3->RF1) to comply with MU_GetRxStatusFlags() of mu driver. See MU_GetRxStatusFlags() from `drivers/mu/fsl_mu.h`

```
status_reg = MU_GetRxStatusFlags(base);
```

Parameters

- base – MU peripheral base address.

Returns

MU RX status flags in reverse order

status_t MU_TriggerGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Triggers general purpose interrupts to the other core.

This function triggers the specific general purpose interrupts to the other core. The interrupts to trigger are passed in as bit mask. See `mu_general_purpose_interrupt_t`. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
status_t status;
status = MU_TriggerGeneralPurposeInterrupts(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt2);

if (kStatus_Success != status)
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the interrupts to trigger. See `mu_general_purpose_interrupt_t`.

Return values

- kStatus_Success – Interrupts have been triggered successfully.
- kStatus_Fail – Previous interrupts have not been accepted.

void MU_BootOtherCore(MU_Type *base, mu_core_boot_mode_t mode)

Boots the other core.

This function boots the other core with a boot configuration.

Parameters

- base – MU peripheral base address.
- mode – The other core boot mode.

void MU_HoldOtherCoreReset(MU_Type *base)

Holds the other core reset.

This function causes the other core to be held in reset following any reset event.

Parameters

- base – MU peripheral base address.

static inline *status_t* MU_ResetBothSides(MU_Type *base)

Resets the MU for both A side and B side.

This function resets the MU for both A side and B side. Before reset, it is recommended to interrupt processor B, because this function may affect the ongoing processor B programs.

If `MU1_BUSY_POLL_COUNT` is defined and non-zero, the function will timeout after the specified number of polling iterations if waiting for the other side to come out of reset takes too long.

Note: For some platforms, only MU side A could use this function, check reference manual for details.

Parameters

- base – MU peripheral base address.

Return values

- kStatus_Success – The MU was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other side to come out of reset.

Returns

status_t

status_t MU_HardwareResetOtherCore(MU_Type *base, bool waitReset, bool holdReset, mu_core_boot_mode_t bootMode)

Hardware reset the other core.

This function resets the other core, the other core could mask the hardware reset by calling MU_MaskHardwareReset. The hardware reset mask feature is only available for some platforms. This function could be used together with MU_BootOtherCore to control the other core reset workflow.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout if waiting for the other core to enter or exit reset takes too long.

Example 1: Reset the other core, and no hold reset

```
MU_HardwareResetOtherCore(MU_A, true, false, bootMode);
```

In this example, the core at MU side B will reset with the specified boot mode.

Example 2: Reset the other core and hold it, then boot the other core later. Here the other core enters reset, and the reset is hold

```
MU_HardwareResetOtherCore(MU_A, true, true, modeDontCare);
```

Current core boot the other core when necessary.

```
MU_BootOtherCore(MU_A, bootMode);
```

Note: The feature waitReset, holdReset, and bootMode might be not supported for some platforms. waitReset is only available for platforms that FSL_FEATURE_MU_NO_CORE_STATUS not defined as 1 and FSL_FEATURE_MU_HAS_RESET_ASSERT_INT not defined as 0. holdReset is only available for platforms that FSL_FEATURE_MU_HAS_RSTH not defined as 0. bootMode is only available for platforms that FSL_FEATURE_MU_HAS_BOOT not defined as 0.

Parameters

- base – MU peripheral base address.
- waitReset – Wait the other core enters reset. Only work when there is CSSR0[RAIP].
 - true: Wait until the other core enters reset, if the other core has masked the hardware reset, then this function will be blocked.
 - false: Don't wait the reset.
- holdReset – Hold the other core reset or not. Only work when there is CCR0[RSTH].

- true: Hold the other core in reset, this function returns directly when the other core enters reset.
- false: Don't hold the other core in reset, this function waits until the other core out of reset.
- bootMode – Boot mode of the other core, if holdReset is true, this parameter is useless.

Return values

- kStatus_Success – The other core was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other core to enter or exit reset.

Returns

status_t

FSL_MU_DRIVER_VERSION

MU driver version.

enum _mu_status_flags

MU status flags.

Values:

enumerator kMU_Tx0EmptyFlag
TX0 empty.

enumerator kMU_Tx1EmptyFlag
TX1 empty.

enumerator kMU_Tx2EmptyFlag
TX2 empty.

enumerator kMU_Tx3EmptyFlag
TX3 empty.

enumerator kMU_Rx0FullFlag
RX0 full.

enumerator kMU_Rx1FullFlag
RX1 full.

enumerator kMU_Rx2FullFlag
RX2 full.

enumerator kMU_Rx3FullFlag
RX3 full.

enumerator kMU_GenInt0Flag
General purpose interrupt 0 pending.

enumerator kMU_GenInt1Flag
General purpose interrupt 1 pending.

enumerator kMU_GenInt2Flag
General purpose interrupt 2 pending.

enumerator kMU_GenInt3Flag
General purpose interrupt 3 pending.

enumerator kMU_RxFullPendingFlag
Any RX full flag is pending.

enumerator kMU__TxEmptyPendingFlag

Any TX empty flag is pending.

enumerator kMU__GenIntPendingFlag

Any general interrupt flag is pending.

enumerator kMU__EventPendingFlag

MU event pending.

enumerator kMU__FlagsUpdatingFlag

MU flags update is on-going.

enumerator kMU__MuInResetFlag

MU of any side is in reset.

enumerator kMU__MuResetInterruptFlag

The other side initializes MU reset.

enum __mu_interrupt_enable

MU interrupt source to enable.

Values:

enumerator kMU__Tx0EmptyInterruptEnable

TX0 empty.

enumerator kMU__Tx1EmptyInterruptEnable

TX1 empty.

enumerator kMU__Tx2EmptyInterruptEnable

TX2 empty.

enumerator kMU__Tx3EmptyInterruptEnable

TX3 empty.

enumerator kMU__Rx0FullInterruptEnable

RX0 full.

enumerator kMU__Rx1FullInterruptEnable

RX1 full.

enumerator kMU__Rx2FullInterruptEnable

RX2 full.

enumerator kMU__Rx3FullInterruptEnable

RX3 full.

enumerator kMU__GenInt0InterruptEnable

General purpose interrupt 0.

enumerator kMU__GenInt1InterruptEnable

General purpose interrupt 1.

enumerator kMU__GenInt2InterruptEnable

General purpose interrupt 2.

enumerator kMU__GenInt3InterruptEnable

General purpose interrupt 3.

enumerator kMU__MuResetInterruptEnable

The other side initializes MU reset.

enum `_mu_interrupt_trigger`

MU interrupt that could be triggered to the other core.

Values:

enumerator `kMU_GenInt0InterruptTrigger`

General purpose interrupt 0.

enumerator `kMU_GenInt1InterruptTrigger`

General purpose interrupt 1.

enumerator `kMU_GenInt2InterruptTrigger`

General purpose interrupt 2.

enumerator `kMU_GenInt3InterruptTrigger`

General purpose interrupt 3.

enum `_mu_msg_reg_index`

MU message register index.

Values:

enumerator `kMU_MsgReg0`

Message register 0.

enumerator `kMU_MsgReg1`

Message register 1.

enumerator `kMU_MsgReg2`

Message register 2.

enumerator `kMU_MsgReg3`

Message register 3.

enum `_mu_general_purpose_interrupt`

MU general purpose interrupts.

Values:

enumerator `kMU_GeneralPurposeInterrupt0`

General purpose interrupt 0

enumerator `kMU_GeneralPurposeInterrupt1`

General purpose interrupt 1

enumerator `kMU_GeneralPurposeInterrupt2`

General purpose interrupt 2

enumerator `kMU_GeneralPurposeInterrupt3`

General purpose interrupt 3

typedef enum `_mu_msg_reg_index` `mu_msg_reg_index_t`

MU message register index.

typedef enum `_mu_general_purpose_interrupt` `mu_general_purpose_interrupt_t`

MU general purpose interrupts.

`MU_CORE_INTR(intr)`

`MU_MISC_INTR(intr)`

`MU_TX_INTR(intr)`

`MU_RX_INTR(intr)`

MU_GI_INTR(*intr*)
MU_GET_CORE_INTR(*intrs*)
MU_GET_TX_INTR(*intrs*)
MU_GET_RX_INTR(*intrs*)
MU_GET_GI_INTR(*intrs*)
MU_CORE_FLAG(*flag*)
MU_STAT_FLAG(*flag*)
MU_TX_FLAG(*flag*)
MU_RX_FLAG(*flag*)
MU_GI_FLAG(*flag*)
MU_GET_CORE_FLAG(*flags*)
MU_GET_STAT_FLAG(*flags*)
MU_GET_TX_FLAG(*flags*)
MU_GET_RX_FLAG(*flags*)
MU_GET_GI_FLAG(*flags*)

MU1_BUSY_POLL_COUNT

Maximum polling iterations for MU waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the MU code before timing out and returning an error.

It applies to all waiting loops in MU driver, such as waiting for TX register to be empty or waiting for RX register to be full.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if a core becomes unresponsive.

2.39 OSTIMER: OS Event Timer Driver

void OSTIMER_Init(OSTIMER_Type *base)

Initializes an OSTIMER by turning its bus clock on.

void OSTIMER_Deinit(OSTIMER_Type *base)

Deinitializes a OSTIMER instance.

This function shuts down OSTIMER bus clock

Parameters

- *base* – OSTIMER peripheral base address.

uint64_t OSTIMER_GrayToDecimal(uint64_t gray)

Translate the value from gray-code to decimal.

Parameters

- *gray* – The gray value input.

Returns

The decimal value.

```
static inline uint64_t OSTIMER_DecimalToGray(uint64_t dec)
```

Translate the value from decimal to gray-code.

Parameters

- dec – The decimal value.

Returns

The gray code of the input value.

```
uint32_t OSTIMER_GetStatusFlags(OSTIMER_Type *base)
```

Get OSTIMER status Flags.

This returns the status flag. Currently, only match interrupt flag can be got.

Parameters

- base – OSTIMER peripheral base address.

Returns

status register value

```
void OSTIMER_ClearStatusFlags(OSTIMER_Type *base, uint32_t mask)
```

Clear Status Interrupt Flags.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- base – OSTIMER peripheral base address.
- mask – Clear bit mask.

Returns

none

```
status_t OSTIMER_SetMatchRawValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)
```

Set the match raw value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central EVTIMER. Please note that, the data format may be gray-code, if so, please using OSTIMER_SetMatchValue().

Parameters

- base – OSTIMER peripheral base address.
- count – OSTIMER timer match value.(Value may be gray-code format)
- cb – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

kStatus_Success -- Set match raw value and enable interrupt Successfully.

```
status_t OSTIMER_SetMatchValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)
```

Set the match value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central OS TIMER.

Parameters

- base – OSTIMER peripheral base address.

- `count` – OSTIMER timer match value.(Value is decimal format, and this value will be translate to Gray code in API if the IP counter is gray encoded.)
- `cb` – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

`kStatus_Success` – Set match raw value and enable interrupt Successfully.

static inline void OSTIMER_SetMatchRegister(OSTIMER_Type *base, uint64_t value)

Set value to OSTIMER MATCH register directly.

This function writes the input value to OSTIMER MATCH register directly, it does not touch any other registers. Note that, the data format is gray-code. The function OSTIMER_DecimalToGray could convert decimal value to gray code.

Parameters

- `base` – OSTIMER peripheral base address.
- `value` – OSTIMER timer match value (Value is gray-code format).

static inline uint64_t OSTIMER_GetMatchRegister(OSTIMER_Type *base)

Get the match value from OSTIMER.

This function will get the match value from OSTIMER. The value of timer match is gray code format.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

Value of match register, data format is gray code.

static inline uint64_t OSTIMER_GetMatchValue(OSTIMER_Type *base)

Get the match value from OSTIMER.

This function will get a match value from OSTIMER.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

Value of match register.

static inline void OSTIMER_EnableMatchInterrupt(OSTIMER_Type *base)

Enable the OSTIMER counter match interrupt.

Enable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- `base` – OSTIMER peripheral base address.

static inline void OSTIMER_DisableMatchInterrupt(OSTIMER_Type *base)

Disable the OSTIMER counter match interrupt.

Disable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- `base` – OSTIMER peripheral base address.

static inline uint64_t OSTIMER_GetCurrentTimerRawValue(OSTIMER_Type *base)

Get current timer raw count value from OSTIMER.

This function will get the timer count value from OS timer register. The raw value of timer count may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of OSTIMER, may be gray code format.

uint64_t OSTIMER_GetCurrentValue(OSTIMER_Type *base)

Get current timer count value from OSTIMER.

This function will get a decimal timer count value. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of OSTIMER which will be formatted to decimal value.

static inline uint64_t OSTIMER_GetCaptureRawValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a captured value from OSTIMER. The Raw value of timer capture may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of capture register, data format may be gray code.

uint64_t OSTIMER_GetCaptureValue(OSTIMER_Type *base)

Get the capture value from OSTIMER.

This function will get a capture decimal-value from OSTIMER. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of capture register, data format is decimal.

void OSTIMER_HandleIRQ(OSTIMER_Type *base, *ostimer_callback_t* cb)

OS timer interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in OSTIMER_SetMatchValue()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – OS timer peripheral base address.
- cb – callback scheduled for this instance of OS timer

Returns

none

FSL_OSTIMER_DRIVER_VERSION

OSTIMER driver version.

enum __ostimer_flags

OSTIMER status flags.

Values:

enumerator kOSTIMER_MatchInterruptFlag

Match interrupt flag bit, sets if the match value was reached.

typedef void (*ostimer_callback_t)(void)

ostimer callback function.

2.40 Pls_pmu

enum __pmu_fro16k_output_freq

The enumeration of FRO16K output frequency.

Values:

enumerator kPMU_FRO16KOutput16KHz

FRM16K output 16KHz.

enumerator kPMU_FRO16KOutput8KHz

FRM16K output 8KHz.

typedef enum __pmu_fro16k_output_freq pmu_fro16k_output_freq_t

The enumeration of FRO16K output frequency.

static inline void PMU_EnableFixedDCDC(PMU_Type *base, bool enable)

Enable/disable Fixed DCDC in active mode.

Parameters

- base – PMU peripheral base address.
- enable – Specify the behavior of Fixed DCDC, true to enable, false to disable.

static inline void PMU_UpdateVDDCoreInActiveMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE in active mode.

Parameters

- base – PMU peripheral base address.
- value – Value to update, LSB is 9.5mV.

static inline void PMU_UpdateVDDCoreInLpMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE in low power modes.

Parameters

- base – PMU peripheral base address.
- value – Value to update, LSB is 9.5mV.

static inline void PMU_UpdateVDDCore1P1InActiveMode(PMU_Type *base, uint8_t value)

Update voltage of VDD_CORE_1P1 in active mode.

Parameters

- base – PMU peripheral base address.
- value – Value to update.

static inline void PMU__UpdateVDDCore1P1InLpMode(PMU_Type *base, uint8_t value)
Update voltage of VDD_CORE_1P1 in low power modes.

Parameters

- base – PMU peripheral base address.
- value – Value to update.

static inline void PMU__EnableFRO16K(PMU_Type *base, bool enable)
Enable/disable FRO16K.

Parameters

- base – PMU peripheral base address.
- enable – Specify the behavior of FRO16K, true to enable FRO16K, false to disable FRO16K.

static inline void PMU__UpdateFRO16KFreq(PMU_Type *base, pmu_fro16k_output_freq_t freq)
Update FRO16K output frequency.

Parameters

- base – PMU peripheral base address.
- freq – The target frequency to update, please refer to pmu_fro16k_output_freq_t for details.

static inline void PMU__UpdateDCDCWakeupWatchdogCounterValue(PMU_Type *base, uint16_t timeoutValue)
Update DCDC watchdog counter value.

Parameters

- base – PMU peripheral base address.
- timeoutValue – DCDC watchdog counter value.

static inline void PMU__UpdateWakeupTime(PMU_Type *base, uint16_t wakeupTime)
Update wakeup time of the PMU analog from POR reset to ext_reset release.

Parameters

- base – PMU peripheral base address.
- wakeupTime – Specify the wakeup time.

static inline uint32_t PMU__GetWakeupTime(PMU_Type *base)
Get wakeup time of the PMU analog from POR reset to ext_reset release.

Parameters

- base – PMU peripheral base address.

Returns

The wakeup time of the PMU analog from POR reset to ext_reset release.

FSL_PMU_DRIVER_VERSION
pls_pmu driver version 2.0.1.

2.41 PORT: Port Control and Interrupts

```
static inline void PORT_GetVersionInfo(PORT_Type *base, port_version_info_t *info)
```

Get PORT version information.

Parameters

- base – PORT peripheral base pointer
- info – PORT version information

```
static inline void PORT_SecletPortVoltageRange(PORT_Type *base, port_voltage_range_t range)
```

Get PORT version information.

Note: : PORTA_CONFIG[RANGE] controls the voltage ranges of Port A, B, and C. Read or write PORTB_CONFIG[RANGE] and PORTC_CONFIG[RANGE] does not take effect.

Parameters

- base – PORT peripheral base pointer
- range – port voltage range

```
static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t *config)
```

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const port_pin_config_t *config)
```

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, *port_mux_t* mux)

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the PORT_SetPinsConfig, because the PORT_SetPinsConfig need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : kPORT_PinDisabledOrAnalog). This function is recommended to use to reset the pin mux

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- mux – pin muxing slot selection.
 - kPORT_PinDisabledOrAnalog: Pin disabled or work in analog function.
 - kPORT_MuxAsGpio : Set as GPIO.
 - kPORT_MuxAlt2 : chip-specific.
 - kPORT_MuxAlt3 : chip-specific.
 - kPORT_MuxAlt4 : chip-specific.
 - kPORT_MuxAlt5 : chip-specific.
 - kPORT_MuxAlt6 : chip-specific.
 - kPORT_MuxAlt7 : chip-specific.

static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- enable – PORT digital filter configuration.

static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const
port_digital_filter_config_t *config)

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- config – PORT digital filter configuration structure.

static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)

Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.

- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline void PORT__EnablePinDoubleDriveStrength(PORT_Type *base, uint32_t pin, bool enable)

Enables the port pin double drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- enable – PORT pin drive strength configuration.

static inline void PORT__SetPinPullValue(PORT_Type *base, uint32_t pin, uint8_t value)

Configures the port pin pull value.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- value – PORT pin pull value
 - kPORT_LowPullResistor = 0U - Low internal pull resistor value is selected.
 - kPORT_HighPullResistor = 1U - High internal pull resistor value is selected.

static inline uint32_t PORT__GetEFTDetectFlags(PORT_Type *base)

Get EFT detect flags.

Parameters

- base – PORT peripheral base pointer

Returns

EFT detect flags

static inline void PORT__EnableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Enable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT__DisableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)

Disable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT__ClearAllLowEFTDetectors(PORT_Type *base)

Clear all low EFT detector.

Note: : Port B and Port C pins share the same EFT detector clear control from PORTC_EDCR register. Any write to the PORTB_EDCR does not take effect.

Parameters

- base – PORT peripheral base pointer

static inline void PORT_ClearAllHighEFTDetectors(PORT_Type *base)

Clear all high EFT detector.

Parameters

- base – PORT peripheral base pointer

FSL_PORT_DRIVER_VERSION

PORT driver version.

enum __port_pull

Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable

Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown

Internal pull-down resistor is enabled.

enumerator kPORT_PullUp

Internal pull-up resistor is enabled.

enum __port_pull_value

Internal resistor pull value selection.

Values:

enumerator kPORT_LowPullResistor

Low internal pull resistor value is selected.

enumerator kPORT_HighPullResistor

High internal pull resistor value is selected.

enum __port_slew_rate

Slew rate selection.

Values:

enumerator kPORT_FastSlewRate

Fast slew rate is configured.

enumerator kPORT_SlowSlewRate

Slow slew rate is configured.

enum __port_open_drain_enable

Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable

Open drain output is disabled.

enumerator kPORT_OpenDrainEnable

Open drain output is enabled.

enum __port_passive_filter_enable

Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable
Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum __port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum __port_drive_strength1
Configures the drive strength1.

Values:

enumerator kPORT_NormalDriveStrength
Normal drive strength

enumerator kPORT_DoubleDriveStrength
Double drive strength

enum __port_input_buffer
input buffer disable/enable.

Values:

enumerator kPORT_InputBufferDisable
Digital input is disabled

enumerator kPORT_InputBufferEnable
Digital input is enabled

enum __port_invet_input
Digital input is not inverted or it is inverted.

Values:

enumerator kPORT_InputNormal
Digital input is not inverted

enumerator kPORT_InputInvert
Digital input is inverted

enum __port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum __port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog

Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio

Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0

Chip-specific

enumerator kPORT_MuxAlt1

Chip-specific

enumerator kPORT_MuxAlt2

Chip-specific

enumerator kPORT_MuxAlt3

Chip-specific

enumerator kPORT_MuxAlt4

Chip-specific

enumerator kPORT_MuxAlt5

Chip-specific

enumerator kPORT_MuxAlt6

Chip-specific

enumerator kPORT_MuxAlt7

Chip-specific

enumerator kPORT_MuxAlt8

Chip-specific

enumerator kPORT_MuxAlt9

Chip-specific

enumerator kPORT_MuxAlt10

Chip-specific

enumerator kPORT_MuxAlt11

Chip-specific

enumerator kPORT_MuxAlt12

Chip-specific

enumerator kPORT_MuxAlt13

Chip-specific

enumerator kPORT_MuxAlt14

Chip-specific

enumerator kPORT_MuxAlt15

Chip-specific

enum _port_digital_filter_clock_source

Digital filter clock source selection.

Values:

enumerator kPORT_BusClock

Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock

Digital filters are clocked by the 1 kHz LPO clock.

enum __port_voltage_range

PORT voltage range.

Values:

enumerator kPORT_VoltageRange1Dot71V_3Dot6V

Port voltage range is 1.71 V - 3.6 V.

enumerator kPORT_VoltageRange2Dot70V_3Dot6V

Port voltage range is 2.70 V - 3.6 V.

typedef enum __port_mux port_mux_t

Pin mux selection.

typedef enum __port_digital_filter_clock_source port_digital_filter_clock_source_t

Digital filter clock source selection.

typedef struct __port_digital_filter_config port_digital_filter_config_t

PORT digital filter feature configuration definition.

typedef struct __port_pin_config port_pin_config_t

PORT pin configuration structure.

typedef struct __port_version_info port_version_info_t

PORT version information.

typedef enum __port_voltage_range port_voltage_range_t

PORT voltage range.

FSL_COMPONENT_ID

struct __port_digital_filter_config

#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth

Set digital filter width

port_digital_filter_clock_source_t clockSource

Set digital filter clockSource

struct __port_pin_config

#include <fsl_port.h> PORT pin configuration structure.

Public Members

uint16_t pullSelect

No-pull/pull-down/pull-up select

uint16_t pullValueSelect

Pull value select

uint16_t slewRate

Fast/slow slew rate Configure

uint16_t passiveFilterEnable

Passive filter enable/disable

```
uint16_t openDrainEnable
    Open drain enable/disable
uint16_t driveStrength
    Fast/slow drive strength configure
uint16_t driveStrength1
    Normal/Double drive strength enable/disable
uint16_t inputBuffer
    Input Buffer Configure
uint16_t invertInput
    Invert Input Configure
uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
struct __port_version_info
    #include <fsl_port.h> PORT version information.
```

Public Members

```
uint16_t feature
    Feature Specification Number.
uint8_t minor
    Minor Version Number.
uint8_t major
    Major Version Number.
```

2.42 POWER Driver

Values:

```
enumerator kStatus_POWER_MuTransferError
    Failed due to MU transfer error.
enumerator kStatus_POWER_RequestNotAllowed
    Request not allowed by the other core.
enumerator kStatus_Power_HandleDuplicated
    Shared handle has already been created.
enumerator kStatus_Power_NotInTargetMode
    Not in the target low-power mode.
enumerator kStatus_Power_NackWithMultiReasons
    NACK received with multiple reasons.
enumerator kStatus_Power_SyncFailed
    Failed to synchronize the two cores.
enumerator kStatus_Power_CM0PNotWFI
    CM0P did not execute WFI after approval to enter the requested low-power mode.
```

enumerator kStatus_Power_WakeupFromDPD1

Woke up from DPD1 successfully.

enumerator kStatus_Power_WakeupFromDPD2

Woke up from DPD2 successfully.

enumerator kStatus_Power_DualCoreNotSynced

The two cores are not synchronized.

enum _power_low_power_mode

The enumeration of low power modes.

Values:

enumerator kPower_Sleep

Sleep Mode.

enumerator kPower_DeepSleep

Deep Sleep Mode.

enumerator kPower_PowerDown1

Power Down 1 mode.

enumerator kPower_PowerDown2

Power Down 2 mode.

enumerator kPower_DeepPowerDown1

Deep Power Down 1 mode.

enumerator kPower_DeepPowerDown2

Deep Power Down 2 mode.

enumerator kPower_DeepPowerDown3

Deep Power Down 3 mode.

enumerator kPower_ShutDown

ShutDown Mode

enumerator kPower_Active

Active Mode.

enum _power_wakeup_source

The enumeration of wakeup sources for different low power modes.

Values:

enumerator kPower_WS_NONE

enumerator kPower_WS_Main_RtcAlarm0

RTC Alarm0 as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_RtcAlarm0

RTC Alarm0 as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_RtcAlarm0

RTC Alarm0 as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_RtcAlarm1

RTC Alarm1 as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_RtcAlarm1

RTC Alarm1 as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_RtcAlarm1
RTC Alarm1 as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_QTimerIrq
QTimer IRQ as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_QTimerIrq
QTimer IRQ as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_QTimerIrq
QTimer IRQ as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_RtcWDT
RTC watch dog as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_RtcWDT
RTC watch dog as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_RtcWDT
RTC watch dog as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_RtcXtalFail
RTC XTAL fail as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_RtcXtalFail
RTC XTAL fail as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_RtcXtalFail
RTC XTAL fail as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_ExternalINTFallEdge
External INT falling edge as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_ExternalINTFallEdge
External INT falling edge as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_ExternalINTFallEdge
External INT falling edge as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_ExternalINTRiseEdge
External INT rising edge as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_ExternalINTRiseEdge
External INT rising edge as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_ExternalINTRiseEdge
External INT rising edge as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_SMMTimer
Deep sleep counter as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_SMMTimer
Deep sleep counter as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_SMMTimer
Deep sleep counter as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Comparator
Voltage comparator as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Comparator
Voltage comparator as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Comparator
Voltage comparator as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AonHsGpioWakeup0
HS_GPIO wakeup0 as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Lpuart0
LPUART0 Interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Lpuart0
LPUART0 Interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Lpuart0
LPUART0 Interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AdvcOrACMP
ADVC or ACMP as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AdvcOrACMP
ADVC or ACMP as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AdvcOrACMP
ADVC or ACMP as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_Lpi2cInt
AON Lpi2c interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_Lpi2cInt
AON Lpi2c interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_Lpi2cInt
AON Lpi2c interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_AdcInt
ADC interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_AdcInt
ADC interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_AdcInt
ADC interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_LptmrInt
LPTMR interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_LptmrInt
LPTMR interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_LptmrInt
LPTMR interrupt as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_TamperDetect
Tamper detect as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_TamperDetect
Tamper detect as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_TamperDetect

Tamper detect as wakeup source, wakeup both Main and AON Domains

enumerator kPower_WS_Main_LcdInt

LCD interrupt as wakeup source, only wakeup Main Domain

enumerator kPower_WS_Aon_LcdInt

LCD interrupt as wakeup source, only wakeup AON Domain

enumerator kPower_WS_Both_LcdInt

LCD interrupt as wakeup source, wakeup both Main and AON Domains

enum _power_main_domain_sram_array

Values:

enumerator kPower_MainDomainNoneRams

enumerator kPower_MainDomainRamX0

Main Domain RAM X0, bitmask representation for power control

enumerator kPower_MainDomainRamX1

Main Domain RAM X1, bitmask representation for power control

enumerator kPower_MainDomainRamA0

Main Domain RAM A0, bitmask representation for power control

enumerator kPower_MainDomainRamA1

Main Domain RAM A1, bitmask representation for power control

enumerator kPower_MainDomainRamA2

Main Domain RAM A2, bitmask representation for power control

enumerator kPower_MainDomainRamA3

Main Domain RAM A3, bitmask representation for power control

enumerator kPower_MainDomainRamB0

Main Domain RAM B0, bitmask representation for power control

enumerator kPower_MainDomainRamB1

Main Domain RAM B1, bitmask representation for power control

enumerator kPower_MainDomainRamB2ToB4

Main Domain RAM B2 to B4, bitmask representation for power control

enumerator kPower_MainDomainAllRams

Represents all RAMs in the Main Domain, bitmask for power control

enum _power_vdd_core_aon_output_voltage

The enumeration of VDD_CORE_AON output voltage.

Values:

enumerator kPower_VddCoreAon_820mV

The output voltage of VDD_CORE_AON is about 820mV.

enumerator kPower_VddCoreAon_801mV

The output voltage of VDD_CORE_AON is about 801mV.

enumerator kPower_VddCoreAon_782mV

The output voltage of VDD_CORE_AON is about 782mV.

enumerator kPower_VddCoreAon_763mV

The output voltage of VDD_CORE_AON is about 763mV.

enumerator kPower_VddCoreAon_744mV

The output voltage of VDD_CORE_AON is about 744mV.

enumerator kPower_VddCoreAon_725mV

The output voltage of VDD_CORE_AON is about 725mV.

enumerator kPower_VddCoreAon_706mV

The output voltage of VDD_CORE_AON is about 706mV.

enumerator kPower_VddCoreAon_687mV

The output voltage of VDD_CORE_AON is about 687mV.

enumerator kPower_VddCoreAon_668mV

The output voltage of VDD_CORE_AON is about 668mV.

enumerator kPower_VddCoreAon_649mV

The output voltage of VDD_CORE_AON is about 649mV.

enumerator kPower_VddCoreAon_630mV

The output voltage of VDD_CORE_AON is about 630mV.

enumerator kPower_VddCoreAon_611mV

The output voltage of VDD_CORE_AON is about 611mV.

enumerator kPower_VddCoreAon_592mV

The output voltage of VDD_CORE_AON is about 592mV.

enumerator kPower_VddCoreAon_AdvcControl

The output voltage of VDD_CORE_AON is controlled by ADVC.

enum __power_aon_domain_sram_array

Values:

enumerator kPower_AonDomainNoneRams

No AON Domain RAMs.

enumerator kPower_AonDomainRam1stHalf16kB

First half (16kB) of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainRam2nd8kB

Second 8kB of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainRamLower8kB

Lower 8kB of AON Domain RAM, bitmask for power control

enumerator kPower_AonDomainAllRams

Represents all RAMs in the AON Domain, bitmask for power control

enum __power_mu_message_direction

Enumeration of power MU message directions.

Values:

enumerator kPower_MsgDirMainToAon

Message direction from Main to AON domain

enumerator kPower_MsgDirAonToMain

Message direction from AON to Main domain

enum __power_mu_message_type

Enumeration of power MU message types.

Values:

enumerator kPower_MsgTypeRequest

Message type is a request

enumerator kPower_MsgTypeACK

Message type is response with ACKnowledgment

enumerator kPower_MsgTypeNACK

Message type is response with Negative ACKnowledgment

enumerator kPower_MsgTypeSync

Message type is to sync dual cores.

enum __power_mu_nack_reason

The reason of NACK response.

Values:

enumerator kPower_MsgNACK_ChannelMismatch

NACK response due to channel mismatch.

enumerator kPower_MsgNACK_TargetModeNotAllowed

NACK response due to target mode not allowed..

enumerator kPower_MsgNACK_WrongMsgReceived

NACK response due to wrong message.

enum __power_dpd1_transition

Enumeration of follow power transition.

Values:

enumerator kPower_Dpd1ToActive

Transition from DPD1 to Active mode

enumerator kPower_Dpd1ToDpd2WakeToDpd1

Transition from DPD1 to DPD2 wakeup to DPD1 mode

enumerator kPower_Dpd1ToDpd2WakeToActive

Transition from DPD1 to DPD2 wakeup to Active mode

typedef enum __power_low_power_mode power_low_power_mode_t

The enumeration of low power modes.

typedef bool (*power_user_callback_t)(power_low_power_mode_t targetPowerMode, void *ptrPowerConfig, void *userData)

typedef enum __power_wakeup_source power_wakeup_source_t

The enumeration of wakeup sources for different low power modes.

typedef enum __power_vdd_core_aon_output_voltage power_vdd_core_output_voltage_t

The enumeration of VDD_CORE_AON output voltage.

typedef enum __power_mu_message_direction power_mu_message_direction_t

Enumeration of power MU message directions.

typedef enum __power_mu_message_type power_mu_message_type_t

Enumeration of power MU message types.

typedef enum __power_mu_nack_reason power_mu_nack_reason_t

The reason of NACK response.

typedef struct __power_ds_config power_ds_config_t

Configuration structure for deep sleep mode.

typedef struct *_power_pd1_config* power_pd1_config_t
Configuration structure for power down 1 mode.

typedef struct *_power_pd2_config* power_pd2_config_t
Configuration structure for power down 2 mode.

typedef enum *_power_dpd1_transition* power_dpd1_transition_t
Enumeration of follow power transition.

typedef struct *_power_dpd1_config* power_dpd1_config_t
Configuration structure for deep power down mode 1.

typedef struct *_power_dpd2_config* power_dpd2_config_t
Configuration structure for deep power down mode 2.

typedef struct *_power_dpd3_config* power_dpd3_config_t
Configuration structure for deep power down mode 3.

typedef struct *_power_sd_config* power_sd_config_t
Configuration structure for shut down.

typedef struct *_power_wakeup_source_info* power_wakeup_source_info_t
The structure of dumped wakeup source information.

typedef struct *_power_handle* power_handle_t
Structure to handle power management operations.

typedef struct *_power_drv_config* power_drv_config_t
Inform the other core that it attempts to create a handle.

status_t Power_CreateHandle(*power_handle_t* *handle, const *power_drv_config_t* *config)
Create the shared power handle.

This function initializes the shared *power_handle_t* in the shared RAM and, unless *power_drv_config_t::noSyncCM0P* is true, attempts to synchronize with the other core.

Note: Please invoke this function before using other APIs.

Parameters

- handle – **[in]** Pointer to *power_handle_t* in **shared RAM**.
- config – **[in]** Pointer to *power_drv_config_t*.

Return values

- *kStatus_Success* – Handle created (and cores synchronized if requested).
- *kStatus_Power_HandleDuplicated* – A shared handle has already been created by the peer.
- *kStatus_POWER_MuTransferError* – MU synchronization/transfer error.
- *kStatus_Timeout* – Timed out while waiting for MU response (if timeout enabled).

void Power_DumpHandleValue(*power_handle_t* *ptrDumpBuffer)
Dump the current shared handle into a local buffer.

Parameters

- ptrDumpBuffer – **[out]** Pointer to a *power_handle_t* to receive the copy.

`void Power_GetPowerModeConfig(void *config)`

Get the configuration of the latest requested low-power mode.

Parameters

- `config` – **[out]** Pointer to a buffer large enough to hold the configuration structure that matches `Power_GetTargetLowPowerMode()`. The actual type depends on the saved target mode (e.g. `power_pd2_config_t`).

`uint32_t Power_GetHandleOffset(void)`

Get the offset of shared handle in shared RAM.

Returns

Offset of shared handle in shared RAM, in bytes.

`void Power_RestoreHandleOffset(uint32_t offset)`

Restore the shared handle from offset in shared RAM.

Parameters

- `offset` – **[in]** Offset of shared handle in shared RAM, in bytes.

`status_t Power_SyncDualCoreBlocking(void)`

Synchronizes the two cores in a blocking manner.

Return values

- `kStatus_Success` – Synchronized successfully.
- `kStatus_Power_HandleDuplicated` – The peer reports a duplicated handle.
- `kStatus_POWER_MuTransferError` – MU transfer error.
- `kStatus_Timeout` – Timed out while waiting for MU response (if timeout enabled).

`FSL_POWER_DRIVER_VERSION`

power driver version 2.2.0.

`POWER_SHARED_RAM_BASE_ADDR`

`POWER_MU_TRANSFER_TIMEOUT`

`POWER_CONTEXT_SAVING_DPD2_TO_DPD1_SYNC_TIMEOUT`

`POWER_ENCODE_WS(wakeupDomain, pinEdge, aonIndex)`

Encodes a wakeup source into a 32-bit code.

Note: Bit field layout:

- bits [7:0] : AON control-bit index.
 - bits [23:20] : External pin edge (1 = rising, 2 = falling, 3 = both edges).
 - bits [27:24] : Wakeup domain (0 = Main only, 1 = AON only, 2 = both Main and AON). In some low-power modes (e.g. PD2), only the AON domain can be woken.
-

`POWER_DECODE_WS(wsCode)`

`void Power_EnableWakeupSource(power_wakeup_source_t ws)`

Enable input wakeup source, once enabled it will be effective until disabled.

The enabled wakeup sources are recorded, and set to register before entering low power modes.

Note: There are two ways to enable wakeup source: The first one is invoking `Power_EnableWakeupSource()`, the way is used to enable more than one wakeup source; The second one is specify the wakeup source in configuration of low power mode.

Parameters

- `ws` – **[in]** Specify the coded wakeup source, please refer to `power_wakeup_source_t` for details.

`void Power_DisableWakeupSource(power_wakeup_source_t ws)`

Disable input wakeup source.

Parameters

- `ws` – **[in]** Specify the coded wakeup source, please refer to `power_wakeup_source_t` for details.

`void Power_DisableAllWakeupSources(void)`

Disable all enabled wakeup sources to both main domain and aon domain.

`void Power_DumpEnabledWakeSource(power_wakeup_source_info_t *ptrWsInfo)`

Dump information of all configured wakeup sources, in type of `power_wakeup_source_info_t`.

Parameters

- `ptrWsInfo` – **[out]** Pointer to the variable to store dumped wakeup source information.

`void Power_GetWakeupSource(uint32_t *ptrWakeupSourceMask)`

Get latest mask of wakeup sources which cause the wakeup to main CPU.

Parameters

- `ptrWakeupSourceMask` – **[out]** Pointer to the variable to store mask of wakeup sources.

`void Power_CheckThenDisableWakeupSource(power_wakeup_source_t ws)`

Check whether the selected wakeup source is already enabled, if it is then disable it.

Parameters

- `ws` – Specify the wakeup source in type of `power_wakeup_source_t`.

`void Power_CheckThenEnableWakeupSource(power_wakeup_source_t ws)`

Check whether the selected wakeup source is disabled, if it is then enable it.

Parameters

- `ws` – Specify the wakeup source in type of `power_wakeup_source_t`.

`void Power_RegisterUserCallback(power_user_callback_t callback, void *userData)`

Register user callback.

Parameters

- `callback` – **[in]** Pointer to callback in type of `power_user_callback_t`.
- `userData` – **[in]** Pointer to user data.

`void Power_UnRegisterUserCallback(void)`

Unregister user callback.

power_low_power_mode_t Power_GetTargetLowPowerMode(void)

Get the target low power mode of latest request.

Returns

The target low power mode *power_low_power_mode_t* of latest request.

power_low_power_mode_t Power_GetPreviousPowerMode(void)

Get previous power mode.

Returns

The previous power mode.

void Power_ResetPreviousPowerMode(void)

Reset previous power mode as active mode.

void Power_UpdatePreviousPowerMode(*power_low_power_mode_t* lpMode)

Update previous power mode as input low power mode.

Parameters

- lpMode – The low power mode to update, in type of *power_low_power_mode_t*.

status_t Power_GetCurrentPowerMode(*power_low_power_mode_t* *ptrCurLpMode)

Get current power mode.

Parameters

- ptrCurLpMode – **[out]** Pointer to store current low power mode

Return values

kStatus_Success – Successfully retrieved current low power mode.

power_low_power_mode_t Power_GetTargetPowerMode(void)

Get the target low power mode.

Returns

Requested low power mode, in type of *power_low_power_mode_t*.

void Power_ClearTargetPowerMode(void)

Clear the target low power mode.

void Power_ClearLpPowerSettings(void)

Clear all low power settings.

status_t Power_EnterLowPowerMode(*power_low_power_mode_t* lowpowerMode, void *config)

Enter selected low power mode.

Parameters

- lowpowerMode – **[in]** Indicate specific target low power mode.
- config – **[in]** Pointer to the matching configuration structure.

Return values

- kStatus_Success – Entered the target mode (or queued the sequence on peer core).
- kStatus_POWER_MuTransferError – MU transfer error.
- kStatus_POWER_RequestNotAllowed – Request rejected by the peer.
- kStatus_Power_DualCoreNotSynced – The two cores are not synchronized (for modes requiring sync).
- kStatus_Timeout – Timed out while waiting for MU response (if timeout enabled).

status_t Power_EnterSleep(void)

Enter the sleep mode.

This function is used to put the system into sleep mode.

Return values

- kStatus_Success – Successfully entered sleep mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

status_t Power_EnterDeepSleep(*power_ds_config_t* *config)

Enter Deep Sleep mode.

This function attempts to put the system into Deep Sleep mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Deep Sleep mode configuration.

Return values

- kStatus_Success – Successfully entered Deep Sleep mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

status_t Power_EnterPowerDown1(*power_pd1_config_t* *config)

Enter Power Down 1 mode.

This function attempts to put the system into Power Down 1 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Power Down 1 mode configuration.

Return values

- kStatus_Success – Successfully entered Power Down 1 mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.
- kStatus_POWER_RequestNotAllowed – Request not allowed by another core.

status_t Power_EnterPowerDown2(*power_pd2_config_t* *config)

Enter Power Down 2 mode.

This function attempts to put the system into Power Down 2 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Power Down 2 mode configuration.

Return values

- kStatus_Success – Successfully entered Power Down 2 mode.
- kStatus_POWER_MuTransferError – Something error occurs during MU transfer.

- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

status_t `Power_EnterDeepPowerDown1(power_dpd1_config_t *config)`

Enter Deep Power Down 1 mode.

This function attempts to put the system into Deep Power Down 1 mode with the provided configuration.

Note: If attempting to enable context saving feature, please ensure RAM blocks used by stack are retained.

Parameters

- `config` – **[in]** Pointer to the Deep Power Down 1 mode configuration.

Return values

- `kStatus_Success` – Successfully entered Deep Power Down 1 mode.
- `kStatus_POWER_MuTransferError` – Something error occurs during MU transfer.
- `kStatus_POWER_RequestNotAllowed` – Request not allowed by another core.

power_dpd1_transition_t `Power_GetDeepPowerDown1NextTransition(void)`

Get the next transition after Deep Power Down 1 mode.

Returns

Next transition after Deep Power Down 1 mode, in type of `power_dpd1_transition_t`.

status_t `Power_EnterDeepPowerDown2(power_dpd2_config_t *config)`

Enter Deep Power Down 2 mode.

This function attempts to put the system into Deep Power Down 2 mode with the provided configuration.

Note: If attempting to enable context saving feature, please ensure RAM blocks used by stack are retained.

Parameters

- `config` – **[in]** Pointer to the Deep Power Down 2 mode configuration.

Return values

- `kStatus_Success` – Entered DPD2 (or completed the request sequence).
- `kStatus_Power_WakeupFromDPD2` – Returned from DPD2 with context restored (when context saving enabled).
- `kStatus_POWER_MuTransferError` – MU transfer error.
- `kStatus_POWER_RequestNotAllowed` – Request rejected by the peer.
- `kStatus_Power_DualCoreNotSynced` – Cores are not synchronized.
- `kStatus_Timeout` – Timed out while waiting for MU response / cross-core sync.

status_t Power_EnterDeepPowerDown3(*power_dpd3_config_t* *config)

Enter Deep Power Down 3 mode.

This function attempts to put the system into Deep Power Down 3 mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Deep Power Down 3 mode configuration.

Return values

- kStatus_Success – Entered DPD3 (or completed the request sequence).
- kStatus_POWER_MuTransferError – MU transfer error.
- kStatus_POWER_RequestNotAllowed – Request rejected by the peer.
- kStatus_Power_DualCoreNotSynced – Cores are not synchronized.
- kStatus_Timeout – Timed out while waiting for MU response (if timeout enabled).

status_t Power_EnterShutDown(*power_sd_config_t* *config)

Enter Shutdown mode.

This function attempts to put the system into Shutdown mode with the provided configuration.

Parameters

- config – **[in]** Pointer to the Shutdown mode configuration.

Return values

- kStatus_Success – Entered Shutdown (or completed the request sequence).
- kStatus_POWER_MuTransferError – MU transfer error.
- kStatus_POWER_RequestNotAllowed – Request rejected by the peer.
- kStatus_Power_DualCoreNotSynced – Cores are not synchronized.
- kStatus_Timeout – Timed out while waiting for MU response (if timeout enabled).

uint32_t Power_PushContext(*uint32_t* handleAddr)

Save current context into stack. ———High address | D15 | ——— | | D14 | | ——— | | D13 | | ——— | | D12 | | ——— | ——— Only CM33 | D11 | | ——— | | D10 | | ——— | | D9 | | ——— | .

void Power_LowPowerBoot(*void*)

Restore saved context from stack.

Note: User can use this function to restore context after waking up from low power modes which reset system.

power_mu_message_type_t Power_GetMuMessageType(*uint32_t* message)

Get type of received MU message.

Parameters

- message – The received message.

Returns

The type of MU message.

power_mu_message_direction_t Power_GetMuMessageDir(uint32_t message)

Get direction of received MU message.

Parameters

- message – The received message.

Returns

The direction of MU message.

status_t Power_MuSyncCallback(uint32_t message, uint32_t channelId)

The callback when one core want to sync with another, that is when the message type is kPower_MsgTypeSync.

Parameters

- message – Received message value.
- channelId – The channel which transfer the message.

Return values

- kStatus_Power_SyncFailed – Failed to sync between dual cores.
- kStatus_Success – Sync dual cores successfully.

status_t Power_InterpretRequest(uint32_t message)

Interpret request message from requester.

Parameters

- message – The message which request from requester.

Return values

- kStatus_POWER_MuTransferError – Something wrong during transfer.
- kStatus_POWER_RequestNotAllowed – Request is not allowed.
- kStatus_Success – Interpret request message successfully.

status_t Power_InterpretResponse(uint32_t message)

Interpret a MU response message.

Parameters

- message – **[in]** The response message sent to the requester.

Return values

- kStatus_Success – The response has been interpreted successfully (ACK).
- kStatus_POWER_MuTransferError – Invalid message or MU error.
- kStatus_POWER_RequestNotAllowed – NACK due to target mode not allowed.
- kStatus_Power_NackWithMultiReasons – NACK with multiple reasons.

status_t Power_MuMessageCallback(uint32_t message, uint32_t channelId)

Callback function for handling power MU messages.

This function is called when a power MU message is received. It processes the message based on the given message content and the channel ID.

Note: This function integrate Power_MuSyncCallback(), Power_InterpretRequest(), and Power_InterpretResponse().

Parameters

- message – **[in]** The received power MU message.
- channelId – **[in]** The ID of the channel on which the message was received.

Return values

- kStatus_Power_SyncFailed – Failed to sync between dual cores.
- kStatus_POWER_MuTransferError – Something wrong during transfer.
- kStatus_POWER_RequestNotAllowed – Request is not allowed.
- kStatus_Success – Interpret request/response message successfully.

struct __power_ds_config

#include <fsl_power.h> Configuration structure for deep sleep mode.

struct __power_pd1_config

#include <fsl_power.h> Configuration structure for power down 1 mode.

Public Members

power_wakeup_source_t mainWakeupSource

Specify the wakeup source to main domain. If the selected wakeup source is not already enabled, it will be enabled before entering PD1 mode. Setting it to kPower_WS_NONE indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking Power_EnableWakeupSource().

uint32_t mainRamArraysToRetain

Bitmask representing the main domain RAM arrays to retain during power down

uint32_t disableBandgap

Flag to indicate whether to disable the bandgap during power down

uint32_t enableIVSMode

Enable/disable IVS mode for the Main domain SRAM retention.

struct __power_pd2_config

#include <fsl_power.h> Configuration structure for power down 2 mode.

Public Members

uint32_t mainRamArraysToRetain

Bitmask representing the main domain RAM arrays to retain during DPD2 mode

uint32_t aonRamArraysToRetain

Bitmask representing the AON domain RAM arrays to retain during DPD2 mode

uint32_t enableIVSMode

Enable/disable IVS mode for the Main domain SRAM retention.

uint32_t disableBandgap

Flag to indicate whether to disable the bandgap during DPD2 mode

uint32_t disableFRO10M

Flag to indicate whether to disable the FRO10M clock during DPD2 mode

power_vdd_core_output_voltage_t vddCoreAonVoltage

Specify output voltage of VDD_CORE_AON

struct __power_dpd1_config

#include <fsl_power.h> Configuration structure for deep power down mode 1.

Public Members

`uint32_t mainRamArraysToRetain`

Bitmask representing the main domain RAM arrays to retain during power down

`uint32_t disableBandgap`

Flag to indicate whether to disable the bandgap during power down

`uint32_t enableIVSMode`

Enable/disable IVS mode for the Main domain SRAM retention.

`power_dpd1_transition_t nextTrans`

Next transition after DPD1 mode, refer to `power_dpd1_transition_t`

`uint32_t saveContext`

True to save basic register context into stack, false to do not save.

`uint32_t disableFRO10M`

Flag to indicate whether to disable the FRO10M clock during DPD1 mode

`uint32_t reserved`

Reserved for using.

`power_vdd_core_output_voltage_t vddCoreAonVoltage`

Specify output voltage of VDD_CORE_AON

`struct _power_dpd2_config`

#include <fsl_power.h> Configuration structure for deep power down mode 2.

Public Members

`power_wakeup_source_t mainWakeupSource`

Specify the wakeup source to main domain. If the selected wakeup source is not already enabled, it will be enabled before entering DPD2 mode. Setting it to `kPower_WS_NONE` indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking `Power_EnableWakeupSource()`.

`power_wakeup_source_t aonWakeupSource`

Specify the wakeup source to aon domain. If the selected wakeup source is not already enabled, it will be enabled before entering DPD2 mode. Setting it to `kPower_WS_NONE` indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking `Power_EnableWakeupSource()`.

`uint32_t mainRamArraysToRetain`

Bitmask representing the main domain RAM arrays to retain during DPD2 mode

`uint32_t aonRamArraysToRetain`

Bitmask representing the AON domain RAM arrays to retain during DPD2 mode

`uint32_t enableIVSMode`

Enable/disable IVS mode for the Main domain SRAM retention.

`uint32_t disableBandgap`

Flag to indicate whether to disable the bandgap during DPD2 mode

`uint32_t switchToX32K`

Flag to indicate whether to switch to X32K clock source during DPD2 mode

uint32_t disableFRO10M

Flag to indicate whether to disable the FRO10M clock during DPD2 mode

uint32_t wakeToDpd1

Flag to indicate whether to wake up to DPD1 mode after DPD2 mode

uint32_t saveContext

True to save basic register context into stack, false to do not save.

uint32_t disableFRO2M

True to disable FRO2M, false to do not disable.

uint32_t reserved

Reserved for using.

power_vdd_core_output_voltage_t dpd2VddCoreAonVoltage

Specify output voltage of VDD_CORE AON in DPD2 mode, in type of power_vdd_core_output_voltage_t.

struct __power_dpd3_config

#include <fsl_power.h> Configuration structure for deep power down mode 3.

Public Members

power_wakeup_source_t wakeupSource

Specify the wakeup source to main and aon domain. If the selected wakeup source is not already enabled, it will be enabled before entering DPD3 mode. Setting it to kPower_WS_NONE indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking Power_EnableWakeupSource().

struct __power_sd_config

#include <fsl_power.h> Configuration structure for shut down.

Public Members

power_wakeup_source_t wakeupSource

Specify the wakeup source to main and aon domain. If the selected wakeup source is not already enabled, it will be enabled before entering SD mode. Setting it to kPower_WS_NONE indicates that this structure does not control any wakeup source. Pre-enabled wakeup sources are not affected. Wakeup sources can also be enabled manually by invoking Power_EnableWakeupSource().

pmu_fro16k_output_freq_t fro16KOutputFreq

Specify the output frequency of FRO16K

struct __power_wakeup_source_info

#include <fsl_power.h> The structure of dumped wakeup source information.

Public Members

uint32_t aonWakeupSourceMask

The mask of wakeup sources in AON domain.

uint32_t mainWakeupSourceMask

The mask of wakeup sources in Main domain.

struct __power_handle

#include <fsl_power.h> Structure to handle power management operations.

Public Members

uint32_t lpConfig[4U]

Buffer (4 x 32-bit words) for storing the most recent low-power configuration.

power_user_callback_t cm33Callback

Callback function for CM33 core operations, in type of power_user_callback_t

void *cm33UserData

User data pointer for CM33 core operations

power_user_callback_t cm0pCallback

Callback function for CM0+ core operations, in type of power_user_callback_t

void *cm0pUserData

User data pointer for CM0+ core operations

power_wakeup_source_info_t enabledWsInfo

Used to record all enabled wakeup sources.

uint32_t muChannelId

MU channel ID used for power communication.

power_low_power_mode_t targetPowerMode

Target low-power mode requested by this core.

power_low_power_mode_t previousPowerMode

Previously entered low-power mode.

uint32_t dualCoreSynced

Set when the two cores are synchronized.

uint32_t requestCM33Start

CM0P-side flag requesting CM33 to run the entry sequence.

uint32_t cm0pWFI

CM0P has executed WFI (used for PD2/DPD2/DPD3/SD).

struct __power_drv_config

#include <fsl_power.h> Inform the other core that it attempts to create a handle.

Public Members

uint32_t muChannelId

MU channel ID used by the power driver.

uint32_t noSyncCM0P

If true, skip synchronizing with CM0P; if false, perform blocking sync.

2.43 QTMR: Quad Timer Driver

void QTMR_Init(TMR_Type *base, qtmr_channel_selection_t channel, const qtmr_config_t *config)

Ungates the Quad Timer clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the Quad Timer driver.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- config – Pointer to user's Quad Timer config structure

void QTMR_Deinit(TMR_Type *base, *qtmr_channel_selection_t* channel)

Stops the counter and gates the Quad Timer clock.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

void QTMR_GetDefaultConfig(*qtmr_config_t* *config)

Fill in the Quad Timer config struct with the default settings.

The default values are:

```
config->debugMode = kQTMR_RunNormalInDebug;
config->enableExternalForce = false;
config->enableMasterMode = false;
config->faultFilterCount = 0;
config->faultFilterPeriod = 0;
config->primarySource = kQTMR_ClockDivide_2;
config->secondarySource = kQTMR_Counter0InputPin;
```

Parameters

- config – Pointer to user's Quad Timer config structure.

void QTMR_EnableInterrupts(TMR_Type *base, *qtmr_channel_selection_t* channel, uint32_t mask)

Enables the selected Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *qtmr_interrupt_enable_t*

void QTMR_DisableInterrupts(TMR_Type *base, *qtmr_channel_selection_t* channel, uint32_t mask)

Disables the selected Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *qtmr_interrupt_enable_t*

uint32_t QTMR_GetEnabledInterrupts(TMR_Type *base, *qtmr_channel_selection_t* channel)

Gets the enabled Quad Timer interrupts.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `qtmr_interrupt_enable_t`

`uint32_t QTMR_GetStatus(TMR_Type *base, qtmr_channel_selection_t channel)`

Gets the Quad Timer status flags.

Parameters

- `base` – Quad Timer peripheral base address
- `channel` – Quad Timer channel number

Returns

The status flags. This is the logical OR of members of the enumeration `qtmr_status_flags_t`

`void QTMR_ClearStatusFlags(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)`

Clears the Quad Timer status flags.

Parameters

- `base` – Quad Timer peripheral base address
- `channel` – Quad Timer channel number
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `qtmr_status_flags_t`

`void QTMR_SetTimerPeriod(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t ticks)`

Sets the timer period in ticks.

Timers counts from initial value till it equals the count value set here. The counter will then reinitialize to the value specified in the Load register.

Note:

- This function will write the time period in ticks to COMP1 or COMP2 register depending on the count direction
 - User can call the utility macros provided in `fsl_common.h` to convert to ticks
 - This function supports cases, providing only primary source clock without secondary source clock.
-

Parameters

- `base` – Quad Timer peripheral base address
- `channel` – Quad Timer channel number
- `ticks` – Timer period in units of ticks

`void QTMR_SetCompareValue(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t ticks)`

Set compare value.

This function sets the value used for comparison with the counter value.

Parameters

- `base` – Quad Timer peripheral base address
- `channel` – Quad Timer channel number
- `ticks` – Timer period in units of ticks.

```
static inline void QTMR_SetLoadValue(TMR_Type *base, qtmr_channel_selection_t channel,
                                     uint32_t value)
```

Set load value.

This function sets the value used to initialize the counter after a counter comparison.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- value – Load register initialization value.

```
static inline uint32_t QTMR_GetCurrentTimerCount(TMR_Type *base, qtmr_channel_selection_t
                                                  channel)
```

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in `fsl_common.h` to convert ticks to usec or msec

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

Current counter value in ticks

```
static inline void QTMR_StartTimer(TMR_Type *base, qtmr_channel_selection_t channel,
                                   qtmr_counting_mode_t clockSource)
```

Starts the Quad Timer counter.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- clockSource – Quad Timer clock source

```
static inline void QTMR_StopTimer(TMR_Type *base, qtmr_channel_selection_t channel)
```

Stops the Quad Timer counter.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

```
void QTMR_EnableDma(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t mask)
```

Enable the Quad Timer DMA.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The DMA to enable. This is a logical OR of members of the enumeration `qtmr_dma_enable_t`

void QTMR_DisableDma(TMR_Type *base, *qtmr_channel_selection_t* channel, uint32_t mask)
Disable the Quad Timer DMA.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- mask – The DMA to enable. This is a logical OR of members of the enumeration *qtmr_dma_enable_t*

void QTMR_SetPwmOutputToIdle(TMR_Type *base, *qtmr_channel_selection_t* channel, bool idleStatus)
Set PWM output in idle status (high or low).

Note: When the PWM is set again, the counting needs to be restarted.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- idleStatus – True: PWM output is high in idle status; false: PWM output is low in idle status.

static inline *qtmr_pwm_out_state_t* QTMR_GetPwmOutputStatus(TMR_Type *base,
qtmr_channel_selection_t
channel)

Get the channel output status.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

Current channel output status.

uint8_t QTMR_GetPwmChannelStatus(TMR_Type *base, *qtmr_channel_selection_t* channel)
Get the PWM channel dutycycle value.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

Returns

Current channel dutycycle value.

void QTMR_SetPwmClockMode(TMR_Type *base, *qtmr_channel_selection_t* channel,
qtmr_primary_count_source_t prescaler)

This function set the value of the prescaler on QTimer channels.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number
- prescaler – Set prescaler value

FSL_QTMR_DRIVER_VERSION
Version

enum `_qtmr_primary_count_source`
Quad Timer primary clock source selection.

Values:

enumerator `kQTMR_ClockCounter0InputPin`
Use counter 0 input pin

enumerator `kQTMR_ClockCounter1InputPin`
Use counter 1 input pin

enumerator `kQTMR_ClockCounter2InputPin`
Use counter 2 input pin

enumerator `kQTMR_ClockCounter3InputPin`
Use counter 3 input pin

enumerator `kQTMR_ClockCounter0Output`
Use counter 0 output

enumerator `kQTMR_ClockCounter1Output`
Use counter 1 output

enumerator `kQTMR_ClockCounter2Output`
Use counter 2 output

enumerator `kQTMR_ClockCounter3Output`
Use counter 3 output

enumerator `kQTMR_ClockDivide_1`
IP bus clock divide by 1 prescaler

enumerator `kQTMR_ClockDivide_2`
IP bus clock divide by 2 prescaler

enumerator `kQTMR_ClockDivide_4`
IP bus clock divide by 4 prescaler

enumerator `kQTMR_ClockDivide_8`
IP bus clock divide by 8 prescaler

enumerator `kQTMR_ClockDivide_16`
IP bus clock divide by 16 prescaler

enumerator `kQTMR_ClockDivide_32`
IP bus clock divide by 32 prescaler

enumerator `kQTMR_ClockDivide_64`
IP bus clock divide by 64 prescaler

enumerator `kQTMR_ClockDivide_128`
IP bus clock divide by 128 prescaler

enum `_qtmr_input_source`
Quad Timer input sources selection.

Values:

enumerator `kQTMR_Counter0InputPin`
Use counter 0 input pin

enumerator `kQTMR_Counter1InputPin`
Use counter 1 input pin

enumerator kQTMR_Counter2InputPin

Use counter 2 input pin

enumerator kQTMR_Counter3InputPin

Use counter 3 input pin

enum __qtmr_counting_mode

Quad Timer counting mode selection.

Values:

enumerator kQTMR_NoOperation

No operation

enumerator kQTMR_PriSrcRiseEdge

Count rising edges of primary source

enumerator kQTMR_PriSrcRiseAndFallEdge

Count rising and falling edges of primary source

enumerator kQTMR_PriSrcRiseEdgeSecInpHigh

Count rise edges of pri SRC while sec inp high active

enumerator kQTMR_QuadCountMode

Quadrature count mode, uses pri and sec sources

enumerator kQTMR_PriSrcRiseEdgeSecDir

Count rising edges of pri SRC; sec SRC specifies dir

enumerator kQTMR_SecSrcTrigPriCnt

Edge of sec SRC trigger primary count until compare

enumerator kQTMR_CascadeCount

Cascaded count mode (up/down)

enum __qtmr_pwm_out_state

Quad Timer PWM output state.

Values:

enumerator kQTMR_PwmLow

The output state of PWM channel is low

enumerator kQTMR_PwmHigh

The output state of PWM channel is low

enum __qtmr_output_mode

Quad Timer output mode selection.

Values:

enumerator kQTMR_AssertWhenCountActive

Assert OFLAG while counter is active

enumerator kQTMR_ClearOnCompare

Clear OFLAG on successful compare

enumerator kQTMR_SetOnCompare

Set OFLAG on successful compare

enumerator kQTMR_ToggleOnCompare

Toggle OFLAG on successful compare

enumerator kQTMR__ToggleOnAltCompareReg

Toggle OFLAG using alternating compare registers

enumerator kQTMR__SetOnCompareClearOnSecSrcInp

Set OFLAG on compare, clear on sec SRC input edge

enumerator kQTMR__SetOnCompareClearOnCountRoll

Set OFLAG on compare, clear on counter rollover

enumerator kQTMR__EnableGateClock

Enable gated clock output while count is active

enum __qtmr_input_capture_edge

Quad Timer input capture edge mode, rising edge, or falling edge.

Values:

enumerator kQTMR__NoCapture

Capture is disabled

enumerator kQTMR__RisingEdge

Capture on rising edge (IPS=0) or falling edge (IPS=1)

enumerator kQTMR__FallingEdge

Capture on falling edge (IPS=0) or rising edge (IPS=1)

enumerator kQTMR__RisingAndFallingEdge

Capture on both edges

enum __qtmr_preload_control

Quad Timer input capture edge mode, rising edge, or falling edge.

Values:

enumerator kQTMR__NoPreload

Never preload

enumerator kQTMR__LoadOnComp1

Load upon successful compare with value in COMP1

enumerator kQTMR__LoadOnComp2

Load upon successful compare with value in COMP2

enum __qtmr_debug_action

List of Quad Timer run options when in Debug mode.

Values:

enumerator kQTMR__RunNormalInDebug

Continue with normal operation

enumerator kQTMR__HaltCounter

Halt counter

enumerator kQTMR__ForceOutToZero

Force output to logic 0

enumerator kQTMR__HaltCountForceOutZero

Halt counter and force output to logic 0

enum __qtmr_interrupt_enable

List of Quad Timer interrupts.

Values:

enumerator kQTMR__CompareInterruptEnable
Compare interrupt.

enumerator kQTMR__Compare1InterruptEnable
Compare 1 interrupt.

enumerator kQTMR__Compare2InterruptEnable
Compare 2 interrupt.

enumerator kQTMR__OverflowInterruptEnable
Timer overflow interrupt.

enumerator kQTMR__EdgeInterruptEnable
Input edge interrupt.

enum __qtmr__status__flags
List of Quad Timer flags.

Values:

enumerator kQTMR__CompareFlag
Compare flag

enumerator kQTMR__Compare1Flag
Compare 1 flag

enumerator kQTMR__Compare2Flag
Compare 2 flag

enumerator kQTMR__OverflowFlag
Timer overflow flag

enumerator kQTMR__EdgeFlag
Input edge flag

enum __qtmr__channel__selection
List of channel selection.

Values:

enumerator kQTMR__Channel__0
TMR Channel 0

enumerator kQTMR__Channel__1
TMR Channel 1

enumerator kQTMR__Channel__2
TMR Channel 2

enumerator kQTMR__Channel__3
TMR Channel 3

enum __qtmr__dma__enable
List of Quad Timer DMA enable.

Values:

enumerator kQTMR__InputEdgeFlagDmaEnable
Input Edge Flag DMA Enable.

enumerator kQTMR__ComparatorPreload1DmaEnable
Comparator Preload Register 1 DMA Enable.

enumerator kQTMR_ComparatorPreload2DmaEnable

Comparator Preload Register 2 DMA Enable.

typedef uint32_t qtmrRegType

typedef enum *_qtmr_primary_count_source* qtmr_primary_count_source_t

Quad Timer primary clock source selection.

typedef enum *_qtmr_input_source* qtmr_input_source_t

Quad Timer input sources selection.

typedef enum *_qtmr_counting_mode* qtmr_counting_mode_t

Quad Timer counting mode selection.

typedef enum *_qtmr_pwm_out_state* qtmr_pwm_out_state_t

Quad Timer PWM output state.

typedef enum *_qtmr_output_mode* qtmr_output_mode_t

Quad Timer output mode selection.

typedef enum *_qtmr_input_capture_edge* qtmr_input_capture_edge_t

Quad Timer input capture edge mode, rising edge, or falling edge.

typedef enum *_qtmr_preload_control* qtmr_preload_control_t

Quad Timer input capture edge mode, rising edge, or falling edge.

typedef enum *_qtmr_debug_action* qtmr_debug_action_t

List of Quad Timer run options when in Debug mode.

typedef enum *_qtmr_interrupt_enable* qtmr_interrupt_enable_t

List of Quad Timer interrupts.

typedef enum *_qtmr_status_flags* qtmr_status_flags_t

List of Quad Timer flags.

typedef enum *_qtmr_channel_selection* qtmr_channel_selection_t

List of channel selection.

typedef enum *_qtmr_dma_enable* qtmr_dma_enable_t

List of Quad Timer DMA enable.

typedef struct *_qtmr_config* qtmr_config_t

Quad Timer config structure.

This structure holds the configuration settings for the Quad Timer peripheral. To initialize this structure to reasonable defaults, call the QTMR_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

```
status_t QTMR_SetupPwm(TMR_Type *base, qtmr_channel_selection_t channel, uint32_t
    pwmFreqHz, uint8_t dutyCyclePercent, bool outputPolarity,
    uint32_t srcClock_Hz)
```

Sets up Quad timer module for PWM signal output.

The function initializes the timer module according to the parameters passed in by the user. The function also sets up the value compare registers to match the PWM signal requirements.

Parameters

- base – Quad Timer peripheral base address
- channel – Quad Timer channel number

- `pwmFreqHz` – PWM signal frequency in Hz
- `dutyCyclePercent` – PWM pulse width, value should be between 0 to 100
0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)
- `outputPolarity` – true: invert polarity of the output signal, false: no inversion
- `srcClock_Hz` – Main counter clock in Hz.

Returns

Returns an error if there was error setting up the signal.

```
void QTMR_SetupInputCapture(TMR_Type *base, qtmr_channel_selection_t channel,  
                           qtmr_input_source_t capturePin, bool inputPolarity, bool  
                           reloadOnCapture, qtmr_input_capture_edge_t captureMode)
```

Allows the user to count the source clock cycles until a capture event arrives.

The count is stored in the capture register.

Parameters

- `base` – Quad Timer peripheral base address
- `channel` – Quad Timer channel number
- `capturePin` – Pin through which we receive the input signal to trigger the capture
- `inputPolarity` – true: invert polarity of the input signal, false: no inversion
- `reloadOnCapture` – true: reload the counter when an input capture occurs, false: no reload
- `captureMode` – Specifies which edge of the input signal triggers a capture

`TMR_CSCTRL_OFLAG_MASK`

`TMR_CSCTRL_OFLAG_SHIFT`

```
struct __qtmr_config
```

#include <fsl_qtmr.h> Quad Timer config structure.

This structure holds the configuration settings for the Quad Timer peripheral. To initialize this structure to reasonable defaults, call the `QTMR_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

`qtmr_primary_count_source_t` primarySource

Specify the primary count source

`qtmr_input_source_t` secondarySource

Specify the secondary count source

`bool` enableMasterMode

true: Broadcast compare function output to other counters; false no broadcast

`bool` enableExternalForce

true: Compare from another counter force state of OFLAG signal false: OFLAG controlled by local counter

`uint8_t` faultFilterCount

Fault filter count

uint8_t faultFilterPeriod

Fault filter period;value of 0 will bypass the filter

qtmr_debug_action_t debugMode

Operation in Debug mode

2.44 Reset Driver

enum _SYSCON_RSTn

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

Values:

enumerator kAonUART_RST_SHIFT_RSTn

AON UART reset control

enumerator kAonI2C_RST_SHIFT_RSTn

AON I2C reset control

enumerator kAonCAL_RST_SHIFT_RSTn

AON CAL reset control

enumerator kAonQTMR0_RST_SHIFT_RSTn

AON QTMR0 reset control

enumerator kAonLPTMR_RST_SHIFT_RSTn

AON LPTMR reset control

enumerator kAonKPP_RST_SHIFT_RSTn

AON KPP reset control

enumerator kAonLPADC_RST_SHIFT_RSTn

AON LPADC reset control

enumerator kAonLCD_RST_SHIFT_RSTn

AON LCD reset control

enumerator kAonSecurity_RST_SHIFT_RSTn

AON Security reset control

enumerator kAonACMP0_RST_SHIFT_RSTn

AON ACMP reset control

enumerator kAonADVC2P0_RST_SHIFT_RSTn

AON ADVC2P0 reset control

enumerator NotAvail_RSTn

No reset control

typedef enum _SYSCON_RSTn SYSCON_RSTn_t

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

typedef SYSCON_RSTn_t reset_ip_name_t

`void RESET_SetPeripheralReset(reset_ip_name_t peripheral)`

Assert reset to peripheral.

Asserts reset signal to specified peripheral module.

Parameters

- `peripheral` – Assert reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

`void RESET_ClearPeripheralReset(reset_ip_name_t peripheral)`

Clear reset to peripheral.

Clears reset signal to specified peripheral module, allows it to operate.

Parameters

- `peripheral` – Clear reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

`void RESET_PeripheralReset(reset_ip_name_t peripheral)`

Reset peripheral module.

Reset peripheral module.

Parameters

- `peripheral` – Peripheral to reset. The enum argument contains encoding of reset register and reset bit position in the reset register.

`static inline void RESET_ReleasePeripheralReset(reset_ip_name_t peripheral)`

Release peripheral module.

Release peripheral module.

Parameters

- `peripheral` – Peripheral to release. The enum argument contains encoding of reset register and reset bit position in the reset register.

`FSL_RESET_DRIVER_VERSION`

reset driver version 2.5.0

`LPUART_RSTS`

`LPI2C_RSTS`

`CTIMER_RSTS`

`PORT_RSTS_N`

`PORT_RSTS_N`

`GPIO_RSTS_N`

`GPIO_RSTS_N`

`LPCMP_RSTS`

`AON_LPADC_RSTS`

2.45 ROMAPI Driver

enum _flash_property_tag

Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflashSectorSize

Pflash sector size property.

enumerator kFLASH_PropertyPflashTotalSize

Pflash total size property.

enumerator kFLASH_PropertyPflashBlockSize

Pflash block size property.

enumerator kFLASH_PropertyPflashBlockCount

Pflash block count property.

enumerator kFLASH_PropertyPflashBlockBaseAddr

Pflash block base address property.

enumerator kFLASH_PropertyPflashPageSize

Pflash page size property.

enumerator kFLASH_PropertyPflashSystemFreq

System Frequency property.

enumerator kFLASH_PropertyFfrSectorSize

FFR sector size property.

enumerator kFLASH_PropertyFfrTotalSize

FFR total size property.

enumerator kFLASH_PropertyFfrBlockBaseAddr

FFR block base address property.

enumerator kFLASH_PropertyFfrPageSize

FFR page size property.

enum _flash_driver_api_keys

Enumeration for Flash driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFLASH_ApiEraseKey

Key value used to validate all flash erase APIs.

typedef enum _flash_property_tag flash_property_tag_t

Enumeration for various flash properties.

typedef struct _flash_ffr_config flash_ffr_config_t

Flash controller paramter config.

typedef struct _flash_config flash_config_t

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

`typedef struct _flash_driver_interface flash_driver_interface_t`

Interface for the flash driver.

`typedef struct _bootloader_tree bootloader_tree_t`

Root of the bootloader API tree.

An instance of this struct resides in read-only memory in the bootloader. It provides a user application access to APIs exported by the bootloader.

`FSL_ROMAPI_DRIVER_VERSION`

romapi driver version 2.0.0.

`FOUR_CHAR_CODE(a, b, c, d)`

Constructs the four character code for the Flash driver API key.

`ROM_API_BASE`

ROM API base address

`ROM_API`

ROM API base pointer

`FLASH_API`

FLASH API base pointer

`uint32_t ffrBlockBase`

`uint32_t ffrTotalSize`

`uint32_t ffrPageSize`

`uint32_t sectorSize`

`uint32_t cfpaPageVersion`

`uint32_t cfpaPageOffset`

`uint32_t PFlashBlockBase`

A base address of the first PFlash block

`uint32_t PFlashTotalSize`

The size of the combined PFlash block.

`uint32_t PFlashBlockCount`

A number of PFlash blocks.

`uint32_t PFlashPageSize`

The size in bytes of a page of PFlash.

`uint32_t PFlashSectorSize`

The size in bytes of a sector of PFlash.

`flash_ffr_config_t ffrConfig`

`status_t (*flash_init)(flash_config_t *config)`

`status_t (*flash_erase_sector)(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)`

`status_t (*flash_program_phrase)(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

`status_t (*flash_program_page)(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

status_t (*flash_verify_program)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, uint32_t *failedAddress, uint32_t *failedData)

status_t (*flash_verify_erase_phrase)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_verify_erase_page)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_verify_erase_sector)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_get_property)(*flash_config_t* *config, *flash_property_tag_t* whichProperty, uint32_t *value)

status_t (*ifr_verify_erase_phrase)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*ifr_verify_erase_page)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*ifr_verify_erase_sector)(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes)

status_t (*flash_read)(*flash_config_t* *config, uint32_t start, uint8_t *dest, uint32_t lengthInBytes)

uint32_t version

uint32_t reserved

uint32_t boot_image_index

uint32_t instance

uint32_t boot_interface

uint32_t mode

uint32_t tag

struct *user_app_boot_invoke_option_t* B

uint32_t U

union *user_app_boot_invoke_option_t* option

void (*run_bootloader)(void *arg)

Function to start the bootloader executing.

const *flash_driver_interface_t* *flash_driver

Internal Flash driver API.

void (*jump)(void *arg)

FSL_COMPONENT_ID

struct *_flash_ffr_config*

#include <fsl_romapi.h> Flash controller paramter config.

struct *_flash_config*

#include <fsl_romapi.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

struct *_flash_driver_interface*

#include <fsl_romapi.h> Interface for the flash driver.

struct *user_app_boot_invoke_option_t*

#include <fsl_romapi.h>

struct _bootloader_tree

#include <fsl_romapi.h> Root of the bootloader API tree.

An instance of this struct resides in read-only memory in the bootloader. It provides a user application access to APIs exported by the bootloader.

union option

Public Members

struct user_app_boot_invoke_option_t B

uint32_t U

struct B

2.46 RTC: Real Time Clock

void RTC_GetDefaultConfig(*rtc_config_t* *config)

Fills the RTC configuration structure with default values.

The default values are chosen for safe and common startup behavior. For example:

```
config->operatingMode           = kRTC_ModeTimeDate;
config->enableXtal32             = true;
config->enable2kHzOutputSMM      = false;
config->alarmInitialEnable[0]    = false;
config->alarmInitialEnable[1]    = false;
config->alarmInitialEnable[2]    = false;
config->enableWatchdog           = false;
config->watchdogTimeoutValue     = 0U;
config->tamperConfig.enableGlobalTamper = false;
config->tamperConfig.tamperInputConfig[0].enableTamperInput = false;
config->tamperConfig.tamperInputConfig[0].polarity = kRTC_TamperPolarityLow;
config->tamperConfig.tamperInputConfig[0].pullup = kRTC_TamperPullupDisabled;
config->tamperConfig.tamperInputConfig[0].filter = kRTC_TamperFilterDisabled;
config->tamperConfig.tamperInputConfig[1].enableTamperInput = false;
config->tamperConfig.tamperInputConfig[1].polarity = kRTC_TamperPolarityLow;
config->tamperConfig.tamperInputConfig[1].pullup = kRTC_TamperPullupDisabled;
config->tamperConfig.tamperInputConfig[1].filter = kRTC_TamperFilterDisabled;
config->aliveDetectorConfig.enableAliveDetector = false;
config->aliveDetectorConfig.bypassAnalogAliveMechanism = false;
config->aliveDetectorConfig.mechanismPeriod = 0U;
```

This function should be called before `RTC_Init()` if custom configuration is not fully provided.

Parameters

- config – Pointer to the `rtc_config_t` structure to be filled.

status_t RTC_Init(*RTC_Type* *base, const *rtc_config_t* *config)

Initializes the RTC peripheral.

This function configures the RTC module according to the settings provided in the config structure. It setups initial operating mode, watchdog, tamper detection, and alive detector.

Parameters

- base – RTC peripheral base address.
- config – Pointer to the user-defined `rtc_config_t` structure.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready,

status_t RTC_Deinit(RTC_Type *base)

De-initializes the RTC peripheral.

This function resets RTC registers to a default state and stops the RTC.

Parameters

- base – RTC peripheral base address.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_StartTimer(RTC_Type *base)

Starts the RTC time counter.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_StopTimer(RTC_Type *base)

Stops the RTC time counter.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_SetDatetime(RTC_Type *base, const *rtc_datetime_t* *datetime)

Sets the current RTC date and time.

Validates the provided date and time before setting. If the input is invalid, an error status is returned.

Parameters

- base – RTC peripheral base address.
- datetime – Pointer to the *rtc_datetime_t* structure containing the new date and time.

Returns

kStatus_Success if the operation was successful, kStatus_Fail if RTC is not working in time date mode, kStatus_InvalidArgument if the input was invalid, kStatus_Timeout if the interface is not ready.

status_t RTC_GetDatetime(RTC_Type *base, *rtc_datetime_t* *datetime)

Retrieves the current RTC date and time.

Parameters

- base – RTC peripheral base address.
- datetime – Pointer to the *rtc_datetime_t* structure to store the current date and time.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if not in time/date mode, kStatus_Fail if a read collision occurred, kStatus_Timeout if the interface is not ready.

status_t RTC_SetFreeRunningCounter(RTC_Type *base, uint64_t countValue)

Sets the initial value of the RTC free-running counter.

This function is applicable only when the RTC is in Free-Running Counter mode.

Parameters

- base – RTC peripheral base address.
- countValue – The initial value to set for the counter.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_GetFreeRunningCounter(RTC_Type *base, uint64_t *countValue)

Retrieves the current value of the RTC free-running counter.

This function is applicable only when the RTC is in Free-Running Counter mode.

Parameters

- base – RTC peripheral base address.
- countValue – Pointer to a variable to store the current counter value.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if not in free-running mode, or kStatus_Fail if a read collision occurred, kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureBCDAlarm(RTC_Type *base, rtc_alarm_id_t alarmId, const rtc_bcd_alarm_config_t *alarmConfig)

Configures a specific RTC BCD alarm.

Sets the alarm time, date, mask, mode, and initial enable state. The number of alarms is MCU-dependent (e.g., 3 alarms: Alarm0, Alarm1, Alarm2).

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to configure (e.g., kRTC_Alarm_0).
- alarmConfig – Pointer to the rtc_bcd_alarm_config_t structure with alarm settings.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureFreeRunningAlarm(RTC_Type *base, rtc_alarm_id_t alarmId, const rtc_free_run_alarm_config_t *alarmConfig)

Configures a specific RTC free running mode alarm.

Select the alarm id and set the alarm counter value

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to configure (e.g., kRTC_Alarm_0).
- alarmConfig – Pointer to the rtc_free_run_alarm_config_t structure with alarm settings.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if the input was invalid, or kStatus_Timeout if the interface is not ready.

status_t RTC_EnableAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId)

Enables a specific RTC alarm.

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to enable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableAlarm(RTC_Type *base, *rtc_alarm_id_t* alarmId)

Disables a specific RTC alarm.

Parameters

- base – RTC peripheral base address.
- alarmId – The ID of the alarm to disable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables specified RTC interrupt sources.

Parameters

- base – RTC peripheral base address.
- mask – Bitmask of interrupts to enable (see *rtc_interrupt_enable_t*).

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables specified RTC interrupt sources.

Parameters

- base – RTC peripheral base address.
- mask – Bitmask of interrupts to disable (see *rtc_interrupt_enable_t*).

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

static inline uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

enabled interrupts bitmask.

`static inline uint32_t RTC_GetInterruptFlags(RTC_Type *base)`

Get the RTC interrupt flags.

Parameters

- `base` – RTC peripheral base address

Returns

Occurred interrupt flags bitmask.

`status_t RTC_ClearInterruptFlags(RTC_Type *base, uint32_t mask)`

Clears the RTC interrupt flags.

Parameters

- `base` – RTC peripheral base address
- `mask` – The interrupt flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

`void RTC_RegisterCallBack(rtc_callback_t cb_func)`

Register callback.

Parameters

- `cb_func` – callback function

`status_t RTC_EnableWatchdog(RTC_Type *base)`

Enables the RTC Watchdog Timer. Assumes timeout is already configured via `RTC_Init` or `RTC_SetWatchdogTimeout`.

Parameters

- `base` – RTC peripheral base address.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

`status_t RTC_DisableWatchdog(RTC_Type *base)`

Disables the RTC Watchdog Timer.

Parameters

- `base` – RTC peripheral base address.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

`status_t RTC_SetWatchdogTimeout(RTC_Type *base, uint32_t timeoutValue)`

Sets the timeout value for the RTC Watchdog Timer.

Parameters

- `base` – RTC peripheral base address.
- `timeoutValue` – The desired timeout value.

Returns

`kStatus_Success` if the operation was successful, `kStatus_Timeout` if the interface is not ready.

status_t RTC_RefreshWatchdog(RTC_Type *base)

Refreshes the RTC Watchdog Timer.

Parameters

- base – RTC peripheral base address. return kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_ConfigureTamperInput(RTC_Type *base, *rtc_tamper_input_id_t* tamperInputId, const *rtc_tamper_input_config_t* *config)

Configures a specific tamper detection input.

This function sets up the tamper input configuration, including enabling/disabling the input, setting polarity, pullup and filters.

Parameters

- base – RTC peripheral base address.
- config – Pointer to the *rtc_tamper_config_t* structure containing tamper input settings. This structure defines the behavior of the tamper input, such as polarity, pull-up configuration, and filtering.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_EnableTamperInputPin(RTC_Type *base, *rtc_tamper_input_id_t* tamperInputId)

Enables the specific tamper detection input pin.

Parameters

- base – RTC peripheral base address.
- tamperInputId – Bitmask of tamper inputs to enable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_DisableTamperInputPin(RTC_Type *base, *rtc_tamper_input_id_t* tamperInputId)

Disable the specific tamper detection input pin.

Parameters

- base – RTC peripheral base address.
- tamperInputId – Bitmask of tamper inputs to disable.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_GetTamperTimestamp(RTC_Type *base, *uint64_t* *latchedCount)

Gets the latched RTC counter value at the time of the last tamper event.

Parameters

- base – RTC peripheral base address.
- latchedCount – Pointer to a variable where the latched counter value will be stored.

Returns

kStatus_Success if the operation was successful, kStatus_InvalidArgument if not in tamper mode,

status_t RTC_WriteKey(RTC_Type *base, const uint32_t *keyData)

Writes a key to the RTC's non-volatile storage.

Parameters

- base – RTC peripheral base address.
- keyData – Pointer to the key data to be written.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

status_t RTC_ReadKey(RTC_Type *base, uint32_t *keyBuffer)

Reads a key from the RTC's non-volatile storage.

Parameters

- base – RTC peripheral base address.
- keyBuffer – Pointer to a buffer where the key data will be stored.

Returns

kStatus_Success if the operation was successful, kStatus_Fail if SECURE_KEY_READY is not set.

status_t RTC_ConfigureAliveDetector(RTC_Type *base, const rtc_alive_detector_config_t *config)

Enables the RTC alive detector.

Parameters

- base – RTC peripheral base address.
- config – Pointer to the rtc_alive_detector_config_t structure containing alive detector settings.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

FSL_RTC_DRIVER_VERSION

Version 1.0.0

RTC_SECURE_KEY_SIZE_BYTES

RTC_SECURE_KEY_REG_COUNT

RTC_MAX_TAMPER_INPUTS

enum _rtc_operating_mode

RTC operating modes.

Values:

enumerator kRTC_ModeTimeDate

RTC operates in Time/Date counting mode.

enumerator kRTC_ModeFreeRunningCounter

RTC operates as a free-running counter.

enum _rtc_alarm_id

RTC Alarm identifiers. Corresponds to Alarm 0, 1, 2.

Values:

enumerator kRTC_Alarm_0

Identifier for Alarm 0

enumerator kRTC_Alarm_1
Identifier for Alarm 1

enumerator kRTC_Alarm_2
Identifier for Alarm 2

enum _rtc_alarm_mode
RTC alarm operational modes.

Values:

enumerator kRTC_AlarmModeSingleShot
Alarm triggers once and then (typically) disables itself or requires re-arming.

enumerator kRTC_AlarmModeRepeat
Alarm triggers repeatedly based on its configuration (e.g., daily, weekly).

enum _rtc_alarm_mask_fields
RTC alarm mask fields. Used with `rtc_bcd_alarm_config_t`'s `mask` member. Set a bit to 1 to ignore the corresponding field for alarm matching.

Values:

enumerator kRTC_AlarmMaskIgnoreNothing
Match all fields specified in alarm time/date.

enumerator kRTC_AlarmMaskIgnoreSecond
Ignore seconds field for alarm match.

enumerator kRTC_AlarmMaskIgnoreMinute
Ignore minutes field for alarm match.

enumerator kRTC_AlarmMaskIgnoreHour
Ignore hours field for alarm match.

enumerator kRTC_AlarmMaskIgnoreDay
Ignore day of the month field for alarm match.

enumerator kRTC_AlarmMaskIgnoreDayOfWeek
Ignore day of the week field for alarm match.

enumerator kRTC_AlarmMaskIgnoreMonth
Ignore month field for alarm match.

enumerator kRTC_AlarmMaskIgnoreAll
Ignore all field for alarm match.

enum _rtc_tamper_input_id
RTC Tamper input identifiers. Corresponds to Tamper 0, 1.

Values:

enumerator kRTC_TamperInput0
Enable Tamper input 0.

enumerator kRTC_TamperInput1
Enable Tamper input 1.

enum _rtc_tamper_filter
RTC tamper input filter configuration.

Values:

enumerator kRTC_TamperFilterDisabled
Digital filter disabled for this tamper input.

enumerator kRTC_TamperFilterEnabled
Digital filter enabled for this tamper input.

enum _rtc_tamper_polarity
RTC tamper input trigger level.

Values:

enumerator kRTC_TamperPolarityLow
Tamper event triggered on a low level or falling edge.

enumerator kRTC_TamperPolarityHigh
Tamper event triggered on a high level or rising edge.

enum _rtc_tamper_pullup
RTC tamper input pull-up configuration.

Values:

enumerator kRTC_TamperPullupDisabled
No pull-up resistor enabled for this tamper input.

enumerator kRTC_TamperPullupEnabled
Pull-up resistor enabled for this tamper input.

enum _rtc_callback_type
Callback type identifiers for RTC events.

Values:

enumerator kRTC_Alarm0Callback
Alarm 0 interrupt callback type

enumerator kRTC_Alarm1Callback
Alarm 1 interrupt callback type

enumerator kRTC_Alarm2Callback
Alarm 2 interrupt callback type

enumerator kRTC_XtalFailCallback
XTAL Fail interrupt callback type

enumerator kRTC_WatchDogCallback
WatchDog timer timeout interrupt callback type

enumerator kRTC_Tamper0Callback
Tamper 0 detection interrupt callback type

enumerator kRTC_Tamper1Callback
Tamper 1 detection interrupt callback type

enum _rtc_interrupt_enable
RTC interrupt enable masks. Use bitwise OR to enable multiple interrupts.

Values:

enumerator kRTC_Alarm0InterruptEnable
Enable Alarm 0 interrupt.

enumerator kRTC_Alarm1InterruptEnable
Enable Alarm 1 interrupt.

enumerator `kRTC_Alarm2InterruptEnable`

Enable Alarm 2 interrupt.

enumerator `kRTC_XtalFailInterruptEnable`

Enable XTAL Fail interrupt.

enumerator `kRTC_WatchdogInterruptEnable`

Enable Watchdog timeout interrupt.

enumerator `kRTC_Tamper0InterruptEnable`

Enable Tamper 0 detection interrupt.

enumerator `kRTC_Tamper1InterruptEnable`

Enable Tamper 1 detection interrupt.

enumerator `kRTC_AllInterruptsEnable`

Enable all RTC interrupts.

enum `_rtc_status_flags`

RTC status flags. Use bitwise OR to check multiple flags.

Values:

enumerator `kRTC_Alarm0InterruptFlag`

Alarm 0 flag.

enumerator `kRTC_Alarm1InterruptFlag`

Alarm 1 flag.

enumerator `kRTC_Alarm2InterruptFlag`

Alarm 2 flag.

enumerator `kRTC_XtalFailInterruptFlag`

XTAL Fail flag.

enumerator `kRTC_WatchdogInterruptFlag`

Watchdog timeout flag.

enumerator `kRTC_Tamper0InterruptFlag`

Tamper 0 detection flag.

enumerator `kRTC_Tamper1InterruptFlag`

Tamper 1 detection flag.

enumerator `kRTC_AllStatusFlags`

Mask for all RTC status flags.

typedef enum `_rtc_operating_mode` `rtc_operating_mode_t`

RTC operating modes.

typedef struct `_rtc_datetime` `rtc_datetime_t`

RTC date and time structure.

typedef enum `_rtc_alarm_id` `rtc_alarm_id_t`

RTC Alarm identifiers. Corresponds to Alarm 0, 1, 2.

typedef enum `_rtc_alarm_mode` `rtc_alarm_mode_t`

RTC alarm operational modes.

typedef enum `_rtc_alarm_mask_fields` `rtc_alarm_mask_fields_t`

RTC alarm mask fields. Used with `rtc_bcd_alarm_config_t`'s mask member. Set a bit to 1 to ignore the corresponding field for alarm matching.

```
typedef struct _rtc_alarm_config rtc_bcd_alarm_config_t
    RTC bcd alarm configuration structure.

typedef struct _rtc_free_run_alarm_config rtc_free_run_alarm_config_t
    RTC free run mode alarm

typedef enum _rtc_tamper_input_id rtc_tamper_input_id_t
    RTC Tamper input identifiers. Corresponds to Tamper 0, 1.

typedef enum _rtc_tamper_filter rtc_tamper_filter_t
    RTC tamper input filter configuration.

typedef enum _rtc_tamper_polarity rtc_tamper_polarity_t
    RTC tamper input trigger level.

typedef enum _rtc_tamper_pullup rtc_tamper_pullup_t
    RTC tamper input pull-up configuration.

typedef struct _rtc_tamper_input_config rtc_tamper_input_config_t
    RTC tamper input configuration structure.

typedef struct _rtc_tamper_config rtc_tamper_config_t
    RTC global tamper detection configuration structure.

typedef struct _rtc_alive_detector_config rtc_alive_detector_config_t
    RTC alive detector configuration structure.

typedef struct _rtc_config rtc_config_t
    RTC general configuration structure.

typedef enum _rtc_callback_type rtc_callback_type_t
    Callback type identifiers for RTC events.

typedef enum _rtc_interrupt_enable rtc_interrupt_enable_t
    RTC interrupt enable masks. Use bitwise OR to enable multiple interrupts.

typedef enum _rtc_status_flags rtc_status_flags_t
    RTC status flags. Use bitwise OR to check multiple flags.

typedef void (*rtc_callback_t)(rtc_callback_type_t type)
    RTC callback function pointer type.

status_t RTC_EnableAliveDetector(RTC_Type *base)
    Alive detector enable.
```

Parameters

- base – RTC peripheral base address.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

```
status_t RTC_DisableAliveDetector(RTC_Type *base)
    Alive detector disable.
```

Parameters

- base – RTC peripheral base address.

Returns

kStatus_Success if the operation was successful, kStatus_Timeout if the interface is not ready.

RTC_WAIT_INTERFACE_READY_TIMEOUT
RTC wait interface ready timeout

RTC_WAIT_READ_COUNTER_LATCHED_READY
RTC wait read counter latched timeout

RTC_WAIT_SECURE_KEY_READY_TIMEOUT
RTC wait secure key ready timeout

struct _rtc_datetime
#include <fsl_rtc.h> RTC date and time structure.

Public Members

uint16_t year
Year (e.g., 2023)

uint8_t month
Month (1-12)

uint8_t day
Day of the month (1-31)

uint8_t hour
Hour (0-23)

uint8_t minute
Minute (0-59)

uint8_t second
Second (0-59)

uint8_t hundredthOfSecond
Hundredth of a second (0-99)

uint8_t dayOfWeek
Day of the week (e.g., 0 for Sunday, 1 for Monday, etc.)

struct _rtc_alarm_config
#include <fsl_rtc.h> RTC bcd alarm configuration structure.

Public Members

uint8_t hour
Alarm hour (0-23). Relevant if not masked.

uint8_t minute
Alarm minute (0-59). Relevant if not masked.

uint8_t second
Alarm second (0-59). Relevant if not masked.

uint8_t hundredthOfSecond
Alarm hundredth of second (0-99).

uint8_t day
Alarm day of the month (1-31). Relevant if not masked.

uint8_t dayOfWeek
Alarm day of the week. Sunday is 0, Monday is 1. Relevant if not masked.

uint8_t month

Alarm month (1-12). Relevant if not masked.

uint8_t mask

Alarm mask, it a logical OR of members of the enumeration rtc_alarm_mask_fields_t.

rtc_alarm_mode_t mode

Alarm mode: kRTC_AlarmModeSingleShot or kRTC_AlarmModeRepeat.

bool enable

Initial enable state for this alarm when configured. True to enable, false to disable.

struct __rtc_free_run_alarm_config

#include <fsl_rtc.h> RTC free run mode alarm

Public Members

uint64_t alarmCounter

Alarm counter value.

rtc_alarm_mode_t mode

Alarm mode: kRTC_AlarmModeSingleShot or kRTC_AlarmModeRepeat.

bool enable

Initial enable state for this alarm when configured. True to enable, false to disable.

struct __rtc_tamper_input_config

#include <fsl_rtc.h> RTC tamper input configuration structure.

Public Members

bool enableTamperInput

True to enable this tamper input, false to disable. (Maps to TAMP_CTRL[TAMP_EN] bit)

rtc_tamper_polarity_t polarity

Trigger level for this tamper input.

rtc_tamper_pullup_t pullup

Pull-up configuration for this tamper input.

rtc_tamper_filter_t filter

Digital filter configuration for this tamper input.

struct __rtc_tamper_config

#include <fsl_rtc.h> RTC global tamper detection configuration structure.

Public Members

bool enableGlobalTamper

Master enable for the tamper detection sub-module.

rtc_tamper_input_config_t tamperInputConfig[2]

Configuration for the tamper input pins. This structure is used to configure each tamper input pin's behavior, such as trigger level, pull-up, and filtering.

struct __rtc_alive_detector_config

#include <fsl_rtc.h> RTC alive detector configuration structure.

Public Members

bool enableAliveDetector

True to enable the RTC alive detector, false to disable.

bool bypassAnalogAliveMechanism

Bypass the RTC analog alive mechanism, implemented at the PAC. After de-activation of the SMM reset this value is sample back value from PAC.

uint8_t mechanismPeriod

Define the length of the active period of the Alive Detector Mechanism in 2KHz clock cycles

struct _rtc_config

#include <fsl_rtc.h> RTC general configuration structure.

Public Members

rtc_operating_mode_t operatingMode

RTC operating mode: Time/Date or Free-Running Counter.

bool enableXtal32

Enable/disable the 32kHz crystal oscillator circuitry. True to enable.

bool enable2kHzOutputSMM

Enable/disable 2kHz output towards SMM. True to enable.

bool alarmInitialEnable[3]

Initial enable state for Alarm 0, 1, 2. True to enable.

bool enableWatchdog

Initial enable state for the Watchdog Timer. True to enable.

uint32_t watchdogTimeoutValue

Watchdog Timer timeout value (units are MCU specific, e.g., seconds or RTC clock cycles).

rtc_tamper_config_t tamperConfig

Tamper detection configuration.

rtc_alive_detector_config_t aliveDetectorConfig

RTC alive detector configuration.

2.47 SLCD: Segment LCD Driver

void SLCD_Init(*SLCD_Type* *base, const *slcd_config_t* *configure)

Initializes the SLCD, ungates the module clock, initializes the power setting, enables all used plane pins, and sets with interrupt and work mode with the configuration.

Parameters

- base – SLCD peripheral base address.
- configure – SLCD configuration pointer. For the configuration structure, many parameters have the default setting and the SGLCD_Getdefaultconfig() is provided to get them. Use it verified for their applications. The others have no default settings, such as “clk-Config”, and must be provided by the application before calling the SGLCD_Init() API.

void SLCD_Deinit(*SLCD_Type* *base)

Deinitializes the SLCD module, gates the module clock, disables an interrupt, and displays the SLCD.

Parameters

- base – SLCD peripheral base address.

void SLCD_GetDefaultConfig(*slcd_config_t* *configure)

Gets the SLCD default configuration structure. The purpose of this API is to get default parameters of the configuration structure for the SGLCD_Init(). Use these initialized parameters unchanged in SGLCD_Init() or modify fields of the structure before the calling SGLCD_Init(). All default parameters of the configure structuration are listed.

```
config.displayMode      = kSLCD_NormalMode;
config.powerSupply      = kSLCD_InternalV113UseChargePump;
config.voltageTrim      = kSLCD_RegulatedVolatgeTrim00;
config.lowPowerBehavior = kSLCD_EnabledInWaitStop;
config.interruptSrc     = 0;
config.faultConfig      = NULL;
config.frameFreqIntEnable = false;
```

Parameters

- configure – The SLCD configuration structure pointer.

static inline void SLCD_StartDisplay(*SLCD_Type* *base)

Enables the SLCD controller, starts generation, and displays the front plane and back plane waveform.

Parameters

- base – SLCD peripheral base address.

static inline void SLCD_StopDisplay(*SLCD_Type* *base)

Stops the SLCD controller. There is no waveform generator and all enabled pins only output a low value.

Parameters

- base – SLCD peripheral base address.

void SLCD_StartBlinkMode(*SLCD_Type* *base, *slcd_blink_mode_t* mode, *slcd_blink_rate_t* rate)

Starts the SLCD blink mode.

Parameters

- base – SLCD peripheral base address.
- mode – SLCD blink mode.
- rate – SLCD blink rate.

static inline void SLCD_StopBlinkMode(*SLCD_Type* *base)

Stops the SLCD blink mode.

Parameters

- base – SLCD peripheral base address.

static inline void SLCD_SetBackPlanePhase(*SLCD_Type* *base, uint32_t pinIndx,
 slcd_phase_type_t phase)

Sets the SLCD back plane pin phase.

This function sets the SLCD back plane pin phase. “kSLCD_PhaseXActivate” setting means the phase X is active for the back plane pin. “kSLCD_NoPhaseActivate” setting means there is no phase active for the back plane pin. For example, set the back plane pin 20 for phase A.

```
SLCD_SetBackPlanePhase(LCD, 20, kSLCD_PhaseAActivate);
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- phase – The phase activates for the back plane pin.

```
static inline void SLCD_SetFrontPlaneSegments(SLCD_Type *base, uint32_t pinIndx, uint8_t operation)
```

Sets the SLCD front plane segment operation for a front plane pin.

This function sets the SLCD front plane segment on or off operation. Each bit turns on or off the segments associated with the front plane pin in the following pattern: HGFEDCBA (most significant bit controls segment H and least significant bit controls segment A). For example, turn on the front plane pin 20 for phase B and phase C.

```
SLCD_SetFrontPlaneSegments(LCD, 20, (kSLCD_PhaseBActivate | kSLCD_PhaseCActivate));
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- operation – The operation for the segment on the front plane pin. This is a logical OR of the enumeration :: slcd_phase_type_t.

```
static inline void SLCD_SetFrontPlaneOnePhase(SLCD_Type *base, uint32_t pinIndx, slcd_phase_index_t phaseIndx, bool enable)
```

Sets one SLCD front plane pin for one phase.

This function can be used to set one phase on or off for the front plane pin. It can be call many times to set the plane pin for different phase indexes. For example, turn on the front plane pin 20 for phase B and phase C.

```
SLCD_SetFrontPlaneOnePhase(LCD, 20, kSLCD_PhaseBIndex, true);
SLCD_SetFrontPlaneOnePhase(LCD, 20, kSLCD_PhaseCIndex, true);
```

Parameters

- base – SLCD peripheral base address.
- pinIndx – SLCD back plane pin index. Range from 0 to 63.
- phaseIndx – The phase bit index slcd_phase_index_t.
- enable – True to turn on the segment for phaseIndx phase false to turn off the segment for phaseIndx phase.

```
static inline uint32_t SLCD_GetFaultDetectCounter(SLCD_Type *base)
```

Gets the SLCD fault detect counter.

This function gets the number of samples inside the fault detection sample window.

Parameters

- base – SLCD peripheral base address.

Returns

The fault detect counter. The maximum return value is 255. If the maximum 255 returns, the overflow may happen. Reconfigure the fault detect sample window and fault detect clock prescaler for proper sampling.

`void SLCD_EnableInterrupts(SLCD_Type *base, uint32_t mask)`

Enables the SLCD interrupt. For example, to enable fault detect complete interrupt and frame frequency interrupt, do the following.

```
SLCD_EnableInterrupts(LCD,kSLCD_FaultDetectCompleteInterrupt | kSLCD_FrameFreqInterrupt);
```

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupts to enable. This is a logical OR of the enumeration :: `slcd_interrupt_enable_t`.

`void SLCD_DisableInterrupts(SLCD_Type *base, uint32_t mask)`

Disables the SLCD interrupt. For example, to disable fault detect complete interrupt and frame frequency interrupt, do the following.

```
SLCD_DisableInterrupts(LCD,kSLCD_FaultDetectCompleteInterrupt | kSLCD_FrameFreqInterrupt);
```

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupts to disable. This is a logical OR of the enumeration :: `slcd_interrupt_enable_t`.

`uint32_t SLCD_GetInterruptStatus(SLCD_Type *base)`

Gets the SLCD interrupt status flag.

Parameters

- base – SLCD peripheral base address.

Returns

The event status of the interrupt source. This is the logical OR of members of the enumeration :: `slcd_interrupt_enable_t`.

`void SLCD_ClearInterruptStatus(SLCD_Type *base, uint32_t mask)`

Clears the SLCD interrupt events status flag.

Parameters

- base – SLCD peripheral base address.
- mask – SLCD interrupt source to be cleared. This is the logical OR of members of the enumeration :: `slcd_interrupt_enable_t`.

`FSL_SLCD_DRIVER_VERSION`

SLCD driver version.

`enum _slcd_clock_prescaler`

SLCD clock prescaler to generate frame frequency.

Values:

enumerator `kSLCD_ClkPrescaler00`

Prescaler 0.

enumerator `kSLCD_ClkPrescaler01`

Prescaler 1.

enumerator kSLCD_ClkPrescaler02
Prescaler 2.

enumerator kSLCD_ClkPrescaler03
Prescaler 3.

enumerator kSLCD_ClkPrescaler04
Prescaler 4.

enumerator kSLCD_ClkPrescaler05
Prescaler 5.

enumerator kSLCD_ClkPrescaler06
Prescaler 6.

enumerator kSLCD_ClkPrescaler07
Prescaler 7.

enum _slcd_regulated_voltage_trim

SLCD regulated voltage trim parameter, be used to meet the desired contrast.

Values:

enumerator kSLCD_VolatgeTrimNo
No voltage trim.

enumerator kSLCD_VolatgeTrimIncrease50mV
Increase the voltage by 50 mV.

enumerator kSLCD_VolatgeTrimIncrease100mV
Increase the voltage by 100 mV.

enumerator kSLCD_VolatgeTrimIncrease150mV
Increase the voltage by 150 mV.

enumerator kSLCD_VolatgeTrimIncrease200mV
Increase the voltage by 200 mV.

enumerator kSLCD_VolatgeTrimIncrease250mV
Increase the voltage by 250 mV.

enumerator kSLCD_VolatgeTrimIncrease300mV
Increase the voltage by 300 mV.

enumerator kSLCD_VolatgeTrimIncrease350mV
Increase the voltage by 350 mV.

enumerator kSLCD_VolatgeTrimDecrease400mV
Decrease the voltage by 400 mV.

enumerator kSLCD_VolatgeTrimDecrease350mV
Decrease the voltage by 350 mV.

enumerator kSLCD_VolatgeTrimDecrease300mV
Decrease the voltage by 300 mV.

enumerator kSLCD_VolatgeTrimDecrease250mV
Decrease the voltage by 250 mV.

enumerator kSLCD_VolatgeTrimDecrease200mV
Decrease the voltage by 200 mV.

enumerator kSLCD_VolatgeTrimDecrease150mV

Decrease the voltage by 150 mV.

enumerator kSLCD_VolatgeTrimDecrease100mV

Decrease the voltage by 100 mV.

enumerator kSLCD_VolatgeTrimDecrease50mV

Decrease the voltage by 50 mV.

enum _slcd_sample_hold

SLCD sample&hold configuration. To save power, configure the voltage to be sampled and held periodically, during this period the phase switches are turned off.

Values:

enumerator kSLCD_SampleHoldNone

No sample&hold.

enumerator kSLCD_SampleHold64Cycle

Sample&hold each 64 function clock cycle.

enumerator kSLCD_SampleHold128Cycle

Sample&hold each 128 function clock cycle.

enum _slcd_blink_rate

SLCD blink rate.

Values:

enumerator kSLCD_BlinkRate00

SLCD blink rate is LCD clock/ $((2^{11}))$.

enumerator kSLCD_BlinkRate01

SLCD blink rate is LCD clock/ $((2^{12}))$.

enumerator kSLCD_BlinkRate02

SLCD blink rate is LCD clock/ $((2^{13}))$.

enumerator kSLCD_BlinkRate03

SLCD blink rate is LCD clock/ $((2^{14}))$.

enumerator kSLCD_BlinkRate04

SLCD blink rate is LCD clock/ $((2^{15}))$.

enumerator kSLCD_BlinkRate05

SLCD blink rate is LCD clock/ $((2^{16}))$.

enumerator kSLCD_BlinkRate06

SLCD blink rate is LCD clock/ $((2^{17}))$.

enumerator kSLCD_BlinkRate07

SLCD blink rate is LCD clock/ $((2^{18}))$.

enum _slcd_duty_cycle

SLCD duty cycle.

Values:

enumerator kSLCD_1Div1DutyCycle

LCD use 1 BP 1/1 duty cycle.

enumerator kSLCD_1Div2DutyCycle

LCD use 2 BP 1/2 duty cycle.

enumerator kSLCD_1Div3DutyCycle
LCD use 3 BP 1/3 duty cycle.

enumerator kSLCD_1Div4DutyCycle
LCD use 4 BP 1/4 duty cycle.

enumerator kSLCD_1Div5DutyCycle
LCD use 5 BP 1/5 duty cycle.

enumerator kSLCD_1Div6DutyCycle
LCD use 6 BP 1/6 duty cycle.

enumerator kSLCD_1Div7DutyCycle
LCD use 7 BP 1/7 duty cycle.

enumerator kSLCD_1Div8DutyCycle
LCD use 8 BP 1/8 duty cycle.

enum _slcd_phase_type
SLCD segment phase type.

Values:

enumerator kSLCD_NoPhaseActivate
LCD waveform no phase activates.

enumerator kSLCD_PhaseAActivate
LCD waveform phase A activates.

enumerator kSLCD_PhaseBActivate
LCD waveform phase B activates.

enumerator kSLCD_PhaseCAActivate
LCD waveform phase C activates.

enumerator kSLCD_PhaseDAActivate
LCD waveform phase D activates.

enumerator kSLCD_PhaseEActivate
LCD waveform phase E activates.

enumerator kSLCD_PhaseFAActivate
LCD waveform phase F activates.

enumerator kSLCD_PhaseGActivate
LCD waveform phase G activates.

enumerator kSLCD_PhaseHActivate
LCD waveform phase H activates.

enum _slcd_phase_index
SLCD segment phase bit index.

Values:

enumerator kSLCD_PhaseAIndex
LCD phase A bit index.

enumerator kSLCD_PhaseBIndex
LCD phase B bit index.

enumerator kSLCD_PhaseCIndex
LCD phase C bit index.

enumerator kSLCD_PhaseDIndex

LCD phase D bit index.

enumerator kSLCD_PhaseEIndex

LCD phase E bit index.

enumerator kSLCD_PhaseFIndex

LCD phase F bit index.

enumerator kSLCD_PhaseGIndex

LCD phase G bit index.

enumerator kSLCD_PhaseHIndex

LCD phase H bit index.

enum _slcd_display_mode

SLCD display mode.

Values:

enumerator kSLCD_NormalMode

LCD Normal display mode.

enumerator kSLCD_AlternateMode

LCD Alternate display mode. For four back planes or less.

enumerator kSLCD_BlankMode

LCD Blank display mode.

enum _slcd_blink_mode

SLCD blink mode.

Values:

enumerator kSLCD_BlankDisplayBlink

Display blank during the blink period.

enumerator kSLCD_AltDisplayBlink

Display alternate display during the blink period if duty cycle is lower than 5.

enum _slcd_fault_detect_clock_prescaler

SLCD fault detect clock prescaler.

Values:

enumerator kSLCD_FaultSampleFreqDivider1

Fault detect sample clock frequency is 1/1 bus clock.

enumerator kSLCD_FaultSampleFreqDivider2

Fault detect sample clock frequency is 1/2 bus clock.

enumerator kSLCD_FaultSampleFreqDivider4

Fault detect sample clock frequency is 1/4 bus clock.

enumerator kSLCD_FaultSampleFreqDivider8

Fault detect sample clock frequency is 1/8 bus clock.

enumerator kSLCD_FaultSampleFreqDivider16

Fault detect sample clock frequency is 1/16 bus clock.

enumerator kSLCD_FaultSampleFreqDivider32

Fault detect sample clock frequency is 1/32 bus clock.

enumerator kSLCD_FaultSampleFreqDivider64

Fault detect sample clock frequency is 1/64 bus clock.

enumerator kSLCD_FaultSampleFreqDivider128

Fault detect sample clock frequency is 1/128 bus clock.

enum _slcd_fault_detect_sample_window_width

SLCD fault detect sample window width.

Values:

enumerator kSLCD_FaultDetectWindowWidth4SampleClk

Sample window width is 4 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth8SampleClk

Sample window width is 8 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth16SampleClk

Sample window width is 16 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth32SampleClk

Sample window width is 32 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth64SampleClk

Sample window width is 64 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth128SampleClk

Sample window width is 128 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth256SampleClk

Sample window width is 256 sample clock cycles.

enumerator kSLCD_FaultDetectWindowWidth512SampleClk

Sample window width is 512 sample clock cycles.

enum _slcd_interrupt_enable

SLCD interrupt source.

Values:

enumerator kSLCD_FaultDetectCompleteInterrupt

SLCD fault detection complete interrupt source.

enumerator kSLCD_FrameFreqInterrupt

SLCD frame frequency interrupt source. Not available in all low-power modes.

enum _slcd_lowpower_behavior

SLCD behavior in low power mode.

Values:

enumerator kSLCD_EnabledInWaitStop

SLCD works in wait and stop mode.

enumerator kSLCD_EnabledInWaitOnly

SLCD works in wait mode and is disabled in stop mode.

enumerator kSLCD_EnabledInStopOnly

SLCD works in stop mode and is disabled in wait mode.

enumerator kSLCD_DisabledInWaitStop

SLCD is disabled in stop mode and wait mode.

```
typedef enum _slcd_clock_prescaler slcd_clock_prescaler_t
    SLCD clock prescaler to generate frame frequency.

typedef enum _slcd_regulated_voltage_trim slcd_regulated_voltage_trim_t
    SLCD regulated voltage trim parameter, be used to meet the desired contrast.

typedef enum _slcd_sample_hold slcd_sample_hold_t
    SLCD sample&hold configuration. To save power, configure the voltage to be sampled and
    held periodically, during this period the phase switches are turned off.

typedef enum _slcd_blink_rate slcd_blink_rate_t
    SLCD blink rate.

typedef enum _slcd_duty_cycle slcd_duty_cycle_t
    SLCD duty cycle.

typedef enum _slcd_phase_type slcd_phase_type_t
    SLCD segment phase type.

typedef enum _slcd_phase_index slcd_phase_index_t
    SLCD segment phase bit index.

typedef enum _slcd_display_mode slcd_display_mode_t
    SLCD display mode.

typedef enum _slcd_blink_mode slcd_blink_mode_t
    SLCD blink mode.

typedef enum _slcd_fault_detect_clock_prescaler slcd_fault_detect_clock_prescaler_t
    SLCD fault detect clock prescaler.

typedef enum _slcd_fault_detect_sample_window_width
slcd_fault_detect_sample_window_width_t
    SLCD fault detect sample window width.

typedef struct _slcd_fault_detect_config slcd_fault_detect_config_t
    SLCD fault frame detection configuration structure.

typedef enum _slcd_interrupt_enable slcd_interrupt_enable_t
    SLCD interrupt source.

typedef enum _slcd_lowpower_behavior slcd_lowpower_behavior
    SLCD behavior in low power mode.

typedef struct _slcd_config slcd_config_t
    SLCD configuration structure.

struct SLCD_Type
    #include <fsl_slcd.h> SLCD structure definition.
```

Public Members

```
SGLCD_FAULT_DETECT_Type *fault
    Pointer to fault detect registers.

SGLCD_CONTROL_Type *control
    Pointer to control registers.

struct _slcd_fault_detect_config
    #include <fsl_slcd.h> SLCD fault frame detection configuration structure.
```

Public Members

`bool` `faultDetectIntEnable`

Fault frame detection interrupt enable flag.

`bool` `faultDetectBackPlaneEnable`

True means the pin id fault detected is back plane otherwise front plane.

`uint8_t` `faultDetectPinIndex`

Fault detected pin id from 0 to 63.

`slcd_fault_detect_clock_prescaler_t` `faultPrescaler`

Fault detect clock prescaler.

`slcd_fault_detect_sample_window_width_t` `width`

Fault detect sample window width.

`struct` `_slcd_config`

`#include <fsl_slcd.h>` SLCD configuration structure.

Public Members

`bool` `lowPowerWaveform`

Generate low power waveform.

`slcd_regulated_voltage_trim_t` `voltageTrimVLL1`

Voltage trim for VLL1 output level.

`slcd_regulated_voltage_trim_t` `voltageTrimVLL2`

Voltage trim for VLL2 output level.

`slcd_sample_hold_t` `sampleHold`

Sample&hold setting.

`slcd_display_mode_t` `displayMode`

SLCD display mode.

`slcd_duty_cycle_t` `dutyCycle`

Duty cycle.

`slcd_lowpower_behavior` `lowPowerBehavior`

SLCD behavior in low power mode.

`bool` `frameFreqIntEnable`

Frame frequency interrupt enable flag.

`uint32_t` `slcdLowPinEnabled`

Setting enabled SLCD pin 0 ~ pin 31. Setting bit n to 1 means enable pin n.

`uint32_t` `slcdHighPinEnabled`

Setting enabled SLCD pin 32 ~ pin 63. Setting bit n to 1 means enable pin (n + 32).

`uint32_t` `backPlaneLowPin`

Setting back plane pin 0 ~ pin 31. Setting bit n to 1 means setting pin n as back plane. It should never have the same bit setting as the frontPlane Pin.

`uint32_t` `backPlaneHighPin`

Setting back plane pin 32 ~ pin 63. Setting bit n to 1 means setting pin (n + 32) as back plane. It should never have the same bit setting as the frontPlane Pin.

`slcd_fault_detect_config_t` `*faultConfig`

Fault frame detection configure. If not requirement, set to NULL.

2.48 SMM: Sleep Mode Manager Driver

enum _smm_interrupt_enable

The enumeration of interrupt to enable. .

Values:

enumerator kSMM_QChannelTimeoutInt

Enable or disable the QChannel timeout interrupt.

enumerator kSMM_QChannelDenyInt

Enable or disable the QChannel deny interrupt.

enumerator kSMM_DeepSleepCounterInt

Enable or disable the deep sleep counter interrupt.

enumerator kSMM_ComparatorMatchInt

Enable or disable the comparator match interrupt.

enumerator kSMM_AllSupportedInts

Enable or disable all support interrupts.

enum _smm_interrupt_flag

The enumeration of interrupt flag. .

Values:

enumerator kSMM_QChannelTimeoutIntFlag

Indicates that the QChannel timeout interrupt has occurred.

enumerator kSMM_QChannelDenyIntFlag

Indicates that the Q channel deny interrupt has occurred.

enumerator kSMM_AllIntFlags

All supported interrupt flags

enum _smm_ext_int_polarity

The enumeration of external interrupt polarity.

Values:

enumerator kSMM_ExtIntRisingEdge

Trigger on rising edge of the external interrupt pin.

enumerator kSMM_ExtIntFallingEdge

Trigger on falling edge of the external interrupt pin.

enum _smm_watchdog_alarm_use

Watchdog alarm use enumeration.

Values:

enumerator kSMM_WatchdogAlarmAsReset

Use watchdog alarm to trigger system reset.

enumerator kSMM_WatchdogAlarmAsInterrupt

Use watchdog alarm to trigger interrupt.

typedef enum _smm_ext_int_polarity smm_ext_int_polarity_t

The enumeration of external interrupt polarity.

typedef struct _smm_ext_int_config smm_ext_int_config_t

Configuration definition of external interrupt.


```
typedef struct _smm_backup_reg_content smm_backup_reg_content_t
```

The definition of backend register content.

```
typedef enum _smm_watchdog_alarm_use smm_watchdog_alarm_use_t
```

Watchdog alarm use enumeration.

```
void SMM_SetExtInterruptConfig(SMM_Type *base, const smm_ext_int_config_t *ptrConfig)
```

Set external interrupt configuration.

Parameters

- base – SMM base address.
- ptrConfig – Pointer to configuration in type of *smm_ext_int_config_t*.

```
static inline void SMM_DisableAonCpuIsoSingal(SMM_Type *base)
```

Disable the AON CPU I/O signals on exit from DPD2.

Parameters

- base – SMM base address.

```
static inline void SMM_DisableMainCpuIsoSingal(SMM_Type *base)
```

Disable the Main CPU I/O signals on exit from DPD1.

Parameters

- base – SMM base address.

```
static inline void SMM_EnableWakeupSourceToMainCpu(SMM_Type *base, uint32_t  
wakeupSources)
```

Enable wakeup sources to the main CPU.

Parameters

- base – SMM base address.
- wakeupSources – Mask value of wakeup sources.

```
static inline void SMM_DisableWakeupSourceToMainCpu(SMM_Type *base, uint32_t  
wakeupSources)
```

Disable wakeup sources to the main CPU.

Parameters

- base – SMM base address.
- wakeupSources – Mask value of wakeup sources.

```
static inline uint32_t SMM_GetEnabledWakeupSourceToMainCpu(SMM_Type *base)
```

Get enabled wakeup sources to main CPU.

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources to main CPU.

```
static inline void SMM_EnableWakeupSourceToAonCpu(SMM_Type *base, uint32_t  
wakeupSources)
```

Enable wakeup sources to AON CPU.

Parameters

- base – SMM base address.
- wakeupSources – The mask value of wakeup sources.

```
static inline void SMM_DisableWakeupSourceToAonCpu(SMM_Type *base, uint32_t
                                                    wakeupSources)
```

Disable wakeup sources to AON CPU.

Parameters

- base – SMM base address.
- wakeupSources – The mask value of wakeup sources.

```
static inline uint32_t SMM_GetEnabledWakeupSourceToAonCpu(SMM_Type *base)
Get enabled wakeup sources to AON CPU.
```

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources to AON CPU.

```
static inline uint32_t SMM_GetWakeupSourceStatus(SMM_Type *base)
Get wakeup source status.
```

Parameters

- base – SMM base address.

Returns

Masked value of all enabled wakeup sources.

```
static inline void SMM_ShutDownBandgapInLowPowerModes(SMM_Type *base, bool shutdown)
Shutdown bandgap in low power modes.
```

Parameters

- base – SMM base address.
- shutdown – True to disable bandgap, false to keep enabled.

```
static inline void SMM_StartPowerDownSequence(SMM_Type *base)
Start the power down sequence.
```

Parameters

- base – SMM base address.

```
static inline void SMM_StartAonDPD2Sequence(SMM_Type *base)
Start the DPD2 sequence.
```

Parameters

- base – SMM base address.

```
static inline void SMM_StartAonShutDownSequence(SMM_Type *base)
Start the AON shutdown/DPD3 sequence.
```

Parameters

- base – SMM base address.

```
static inline void SMM_AbortLowPowerModeSequence(SMM_Type *base)
Abort any start of low power modes sequence.
```

Parameters

- base – SMM base address.

```
static inline void SMM_SwitchToXTAL32(SMM_Type *base, bool enable)
```

Switch to XTAL32 in DPD2 mode.

Parameters

- base – SMM base address
- enable – True means switch to 32k clock, false means remain at AON_CLK.

```
static inline void SMM_PowerOffAonSramManually(SMM_Type *base, uint8_t sramCuts)
```

Power off selected AON SRAM cuts manually.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

```
static inline void SMM_PowerOnAonSramManually(SMM_Type *base, uint8_t sramCuts)
```

Power on selected AON SRAM cuts manually.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

```
static inline void SMM_PowerOffAonSramAutomatically(SMM_Type *base, uint8_t sramCuts)
```

Power off selected AON SRAM cuts when enter into low power mode.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

```
static inline void SMM_DisableAonSramAutoControl(SMM_Type *base, uint8_t sramCuts)
```

Keep selected AON SRAM keep powered when enter into low power mode.

Parameters

- base – SMM base address.
- sramCuts – The mask of AON SRAM cuts.

```
void SMM_WriteToBackupReg(SMM_Type *base, const smm_backup_reg_content_t  
                          *ptrBackupRegContent)
```

Write data to backup registers.

Parameters

- base – SMM base address.
- ptrBackupRegContent – **[in]** Pointer to the data to be written to the backup registers.

```
void SMM_ReadFromBackupReg(SMM_Type *base, smm_backup_reg_content_t  
                          *ptrBackupRegContent)
```

Read data from backup registers.

Parameters

- base – SMM base address.
- ptrBackupRegContent – **[out]** Pointer of the content will read from backup registers.

`void SMM_EnableMainDomainSramRetention(SMM_Type *base, uint16_t sramCuts)`

Enable memory retention at low power modes for main CPU.

Parameters

- base – SMM base address.
- sramCuts – Mask of sram cuts to retained.

`static inline void SMM_DisableMainDomainSramRetention(SMM_Type *base)`

Disable memory retention at low power modes for main CPU.

Parameters

- base – SMM base address.

`static inline void SMM_EnableIvsModeForSramRetention(SMM_Type *base, bool enable)`

Enable/disable IVS Mode for the SRAM retention.

Parameters

- base – SMM base address.
- enable – True to enable IVS mode, false to disable.

`static inline uint8_t SMM_GetPowerState(SMM_Type *base)`

Get the power state.

Parameters

- base – SMM base address.

Returns

Value of power state.

`static inline void SMM_WakeupMainDomain(SMM_Type *base)`

Wakeup the main domain CPU from low power mode.

Parameters

- base – SMM base address.

`static inline bool SMM_CheckExternalIntActive(SMM_Type *base)`

Check if the external interrupt flag is asserted.

Parameters

- base – SMM base address.

Returns

True if external interrupt is active, false otherwise.

`static inline void SMM_ClearExternalIntFlag(SMM_Type *base)`

Clear the external interrupt flag.

Parameters

- base – SMM base address.

`static inline void SMM_DisableMainCpuIso(SMM_Type *base)`

Disable the main CPU I/O signals.

Parameters

- base – SMM base address.

`static inline void SMM_DisableAonCpuIso(SMM_Type *base)`

Disable the AON CPU I/O signals.

Parameters

- base – SMM base address.

static inline void SMM_ClearAllLowPowerSequence(SMM_Type *base)

Clear all low power sequence settings.

Parameters

- base – SMM base address.

static inline void SMM_ClearMainCpuWakeupSources(SMM_Type *base)

Clear all wakeup sources to main domain.

Parameters

- base –

static inline void SMM_ClearAonCpuWakeupSources(SMM_Type *base)

Clear all wakeup sources to AON domain.

Parameters

- base – SMM base address.

static inline void SMM_ConfigWatchdogAlarmUse(SMM_Type *base, *smm_watchdog_alarm_use_t* alarmUse)

Config the watchdog alarm use.

Parameters

- base – SMM base address.
- alarmUse – The watchdog alarm use.

static inline void SMM_UseDeepSleepCounterInSoftwareMethod(SMM_Type *base)

Use the deep sleep counter for general software needs.

Parameters

- base – SMM base address.

static inline void SMM_UseDeepSleepCounterInHardwareMethod(SMM_Type *base)

Use the deep sleep counter by hardware to wakeup from low power mode.

Parameters

- base – SMM base address.

static inline void SMM_ResetAndDisableDeepSleepCounter(SMM_Type *base)

Reset the deep sleep counter and disable count.

Parameters

- base – SMM base address.

static inline void SMM_StartDeepSleepCounter(SMM_Type *base)

Enable the countdown start of the deep sleep counter when at software use.

Parameters

- base – SMM base address.

static inline void SMM_UpdateDeepSleepCounter(SMM_Type *base, uint16_t value)

Update the deep sleep counter, the counter is counting the AON clocks.

Parameters

- base – SMM base address.
- value – Value to update the deep sleep counter.

```
static inline uint16_t SMM_ReadDeepSleepCounter(SMM_Type *base)
```

Read value of deep sleep counter.

Parameters

- base – SMM base address.

Returns

Count of deep sleep counter.

```
static inline void SMM_EnableInterrupts(SMM_Type *base, uint32_t masks)
```

Enable specific interrupts.

Parameters

- base – SMM base address.
- masks – Bitmask of interrupts to enable. Use OR'ed values from s

```
static inline void SMM_DisableInterrupts(SMM_Type *base, uint32_t masks)
```

Disable specific interrupts.

Parameters

- base – SMM base address.
- masks – Bitmask of interrupts to disable, should be OR'ed value of `smm_interrupt_enable_t`.

```
static inline uint32_t SMM_GetInterruptFlags(SMM_Type *base)
```

Get interrupt flags.

Parameters

- base – SMM base address.

Returns

The mask of all asserted interrupt flags, should be the OR'ed value of `smm_interrupt_flag_t`.

```
static inline void SMM_ClearInterruptFlags(SMM_Type *base, uint32_t flags)
```

Clear interrupt flags.

Parameters

- base – SMM base address.
- flags – The mask of interrupt flags to clear, should be the OR'ed value of `smm_interrupt_flag_t`.

```
static inline bool SMM_CheckDeepSleepCounterMatch(SMM_Type *base)
```

Check if deep sleep counter reach zero at software use.

Parameters

- base – SMM base address.

Return values

- false – Deep sleep counter do not reach zero.
- true – Deep sleep counter reach zero.

```
static inline void SMM_ClearDeepSleepCounterMatchFlag(SMM_Type *base)
```

Clear deep sleep counter match flag.

Parameters

- base – SMM base address.

static inline bool SMM_CheckComparatorMatch(SMM_Type *base)

Check if comparator match was active.

Parameters

- base – SMM base address.

Return values

- false – Comparator match is not active.
- true – Comparator match is active.

static inline void SMM_ClearComparatorMatchFlag(SMM_Type *base)

Clear comparator match flag.

Parameters

- base – SMM base address.

FSL_SMM_DRIVER_VERSION

smm driver version 2.1.1.

bool maskExtIntPin

Set to true to mask the external interrupt pin; false to unmask.

smm_ext_int_polarity_t extIntPolarity

External interrupt polarity.

uint32_t word1

uint32_t word2

struct _smm_ext_int_config

#include <fsl_smm.h> Configuration definition of external interrupt.

struct _smm_backup_reg_content

#include <fsl_smm.h> The definition of backend register content.

2.49 TRDC: Trusted Resource Domain Controller

void TRDC_Init(TRDC_Type *base)

Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

void TRDC_Deinit(TRDC_Type *base)

De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)

Gets the domain ID of the current bus master.

Parameters

- base – TRDC peripheral base address.

Returns

Domain ID of current bus master.

`void TRDC_GetHardwareConfig(TRDC_Type *base, trdc_hardware_config_t *config)`

Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- `base` – TRDC peripheral base address.
- `config` – Pointer to the structure to get the configuration.

`static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)`

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- `base` – TRDC peripheral base address.

`static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum)`

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure, refer to `trdcx_master_t` in processor header file, `x` is `trdc` instance.
- `regNum` – Which register to configure, processor master can have more than one register for the MDAC configuration.
- `assignIndex` – Which assignment register to lock.

`static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master, uint8_t regNum, bool valid)`

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure.
- `regNum` – Which register to configure, processor master can have more than one register for the MDAC configuration.
- `assignIndex` – Index for the domain assignment register.
- `valid` – True to set valid, false to set invalid.

`void TRDC_GetDefaultProcessorDomainAssignment(trdc_processor_domain_assignment_t *domainAssignment)`

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:


```
assignment->domainId      = 0U;
assignment->domainIdSelect = kTRDC_DidMda;
assignment->lock           = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_GetDefaultNonProcessorDomainAssignment(trdc_non_processor_domain_assignment_t
                                                *domainAssignment)
```

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->privilegeAttr  = kTRDC_ForceUser;
assignment->secureAttr    = kTRDC_ForceSecure;
assignment->bypassDomainId = 0U;
assignment->lock          = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum,
                                       const trdc_processor_domain_assignment_t
                                       *domainAssignment)
```

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdc_master_t` in processor header file.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const
                                          trdc_non_processor_domain_assignment_t
                                          *domainAssignment)
```

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure, refer to `trdc_master_t` in processor header file.
- `domainAssignment` – Pointer to the assignment structure.

`static inline uint64_t TRDC_GetActiveMasterPidMap(TRDC_Type *base)`

Gets the bit map of the bus master(s) that is(are) sourcing a PID register.

This function sets the non-processor master domain assignment as valid.

Parameters

- `base` – TRDC peripheral base address.

Returns

the bit map of the master(s). Bit 1 sets indicates bus master 1.

`void TRDC_SetPid(TRDC_Type *base, uint8_t master, const trdc_pid_config_t *pidConfig)`

Sets the current Process identifier(PID) for processor core.

Each processor has a corresponding process identifier (PID) which can be used to group tasks into different domains. Secure privileged software saves and restores the PID as part of any context switch. This data structure defines an array of 32-bit values, one per MDA module, that define the PID. Since this register resource is only applicable to processor cores, the data structure is typically sparsely populated. The `HWCFG[2-3]` registers provide a bitmap of the implemented PIDn registers. This data structure is indexed using the corresponding MDA instance number. Depending on the operating clock domain of each DAC instance, there may be optional information stored in the corresponding PIDm register to properly implement the LK2 = 2 functionality.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which processor master to configure, refer to `trdc_master_t` in processor header file.
- `pidConfig` – Pointer to the configuration structure.

`void TRDC_GetDefaultIDAUConfig(trdc_idau_config_t *idauConfiguration)`

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU      = false;
config->lockNonsecureMPU   = false;
config->lockSAU            = false;
```

Parameters

- domainAssignment – Pointer to the configuration structure.

void TRDC_SetIDAU(TRDC_Type *base, const *trdc_idau_config_t* *idauConfiguration)

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
idauConfiguration.lockNonsecureMPU = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)

Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)

Locks FLW registers. Once locked the registers can not be updated until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)

Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)

Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

void TRDC_GetDefaultFlashLogicalWindowConfig(*trdc_flw_config_t* *flwConfiguration)

Gets the default FLW(Flsh Logical Window) configuration.

```
config->blockCount = false;
config->arrayBaseAddr = false;
config->lock = false;
config->enable = false;
```

Parameters

- `flwConfiguration` – Pointer to the configuration structure.

`void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const trdc_flw_config_t *flwConfiguration)`

Sets the FLW function's configuration.

```
trdc_flw_config_t flwConfiguration;  
  
TRDC_GetDefaultIDAUConfig(&flwConfiguration);  
  
flwConfiguration.blockCount = 32U;  
flwConfiguration.arrayBaseAddr = 0xFFFFFFFF;  
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- `base` – TRDC peripheral base address.
- `flwConfiguration` – Pointer to the configuration structure.

`status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, trdc_domain_error_t *error)`

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- `base` – TRDC peripheral base address.
- `error` – Pointer to the error information.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter `error`. If no access violation is captured, this function returns the `kStatus_NoData`.

`status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, trdc_domain_error_t *error, uint8_t domainId)`

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- `base` – TRDC peripheral base address.
- `error` – Pointer to the error information.
- `domainId` – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the `kStatus_Success`. The error information can be obtained from the parameter `error`. If no access violation is captured, this function returns the `kStatus_NoData`.

`static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)`

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- `base` – TRDC peripheral base address.

```
static inline uint8_t TRDC_GetMrcRegionNumber(TRDC_Type *base, uint8_t mrcIdx)
```

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.

Returns

the region number of the given MRC instance

```
void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const
                                   trdc_memory_access_control_config_t *config, uint8_t
                                   mrcIdx, uint8_t regIdx)
```

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

```
void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t
                                   domianMask, bool enable)
```

Enables the update of the selected domians.

After the domians' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domianMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

```
void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains whose NSE bits to clear.

void TRDC_MrcSetRegionDescriptorConfig(TRDC_Type *base, const
trdc_mrc_region_descriptor_config_t *config)

Sets the configuration for one of the region descriptor per domain per MRC instance.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

static inline void TRDC_SetMbcGlobalValid(TRDC_Type *base)

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

void TRDC_GetMbcHardwareConfig(TRDC_Type *base, trdc_slave_memory_hardware_config_t
*config, uint8_t mbcIdx, uint8_t slvIdx)

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

void TRDC_MbcSetNseUpdateConfig(TRDC_Type *base, const trdc_mbc_nse_update_config_t
*config, uint8_t mbcIdx)

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be update by NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

void TRDC__MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

void TRDC__MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

void TRDC__MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slave)

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

void TRDC__MbcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mbcIdx, uint8_t rgdIdx)

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC__SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.

- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

```
void TRDC__MbcSetMemoryBlockConfig(TRDC_Type *base, const
                                   trdc_mbc_memory_block_config_t *config)
```

Sets the configuration for one of the memory block per domain per MBC instance.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

```
enum _trdc_did_sel
```

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

Values:

```
enumerator kTRDC__DidMda
```

Use MDAn[2:0] as DID.

```
enumerator kTRDC__DidInput
```

Use the input DID (DID_in) as DID.

```
enumerator kTRDC__DidMdaAndInput
```

Use MDAn[2] concatenated with DID_in[1:0] as DID.

```
enumerator kTRDC__DidReserved
```

Reserved.

```
enum _trdc_secure_attr
```

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

Values:

```
enumerator kTRDC__ForceSecure
```

Force the bus attribute for this master to secure.

```
enumerator kTRDC__ForceNonSecure
```

Force the bus attribute for this master to non-secure.

```
enumerator kTRDC__MasterSecure
```

Use the bus master's secure/nonsecure attribute directly.

```
enumerator kTRDC__MasterSecure1
```

Use the bus master's secure/nonsecure attribute directly.

```
enum _trdc_pid_domain_hit_config
```

The configuration of domain hit evaluation of PID.

Values:

```
enumerator kTRDC__pidDomainHitNone0
```

No PID is included in the domain hit evaluation.

```
enumerator kTRDC__pidDomainHitNone1
```

No PID is included in the domain hit evaluation.

enumerator kTRDC_pidDomainHitInclusive

The PID is included in the domain hit evaluation when (PID & ~PIDM).

enumerator kTRDC_pidDomainHitExclusive

The PID is included in the domain hit evaluation when ~(PID & ~PIDM).

enum _trdc_privilege_attr

TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

Values:

enumerator kTRDC_ForceUser

Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege

Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege

Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1

Use the bus master's attribute directly.

enum _trdc_pid_lock

PID lock configuration.

Values:

enumerator kTRDC_PidUnlocked0

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked1

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked2

The PID value can be updated by any secure privileged write from the bus master that first configured this register.

enumerator kTRDC_PidLocked

The PID value is locked until next reset.

enum _trdc_controller

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0

Memory block checker 0.

enumerator kTRDC_MemBlockController1

Memory block checker 1.

enumerator kTRDC_MemBlockController2

Memory block checker 2.

enumerator kTRDC_MemBlockController3

Memory block checker 3.

enumerator kTRDC_MemRegionChecker0

Memory region checker 0.

enumerator kTRDC_MemRegionChecker1

Memory region checker 1.

enumerator kTRDC_MemRegionChecker2

Memory region checker 2.

enumerator kTRDC_MemRegionChecker3

Memory region checker 3.

enumerator kTRDC_MemRegionChecker4

Memory region checker 4.

enumerator kTRDC_MemRegionChecker5

Memory region checker 5.

enumerator kTRDC_MemRegionChecker6

Memory region checker 6.

enum _trdc_error_state

TRDC domain error state	definition	TRDC_MBCn_DERR_W1[EST]	or
TRDC_MRCn_DERR_W1[EST].			

Values:

enumerator kTRDC_ErrorStateNone

No access violation detected.

enumerator kTRDC_ErrorStateNone1

No access violation detected.

enumerator kTRDC_ErrorStateSingle

Single access violation detected.

enumerator kTRDC_ErrorStateMulti

Multiple access violation detected.

enum _trdc_error_attr

TRDC domain error attribute	definition	TRDC_MBCn_DERR_W1[EATR]	or
TRDC_MRCn_DERR_W1[EATR].			

Values:

enumerator kTRDC_ErrorSecureUserInst

Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData

Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst

Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData

Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst

NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData

NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst

NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum _trdc_error_type

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum _trdc_region_descriptor

The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator kTRDC_RegionDescriptor0
Region descriptor 0.

enumerator kTRDC_RegionDescriptor1
Region descriptor 1.

enumerator kTRDC_RegionDescriptor2
Region descriptor 2.

enumerator kTRDC_RegionDescriptor3
Region descriptor 3.

enumerator kTRDC_RegionDescriptor4
Region descriptor 4.

enumerator kTRDC_RegionDescriptor5
Region descriptor 5.

enumerator kTRDC_RegionDescriptor6
Region descriptor 6.

enumerator kTRDC_RegionDescriptor7
Region descriptor 7.

enumerator kTRDC_RegionDescriptor8
Region descriptor 8.

enumerator kTRDC_RegionDescriptor9
Region descriptor 9.

enumerator kTRDC_RegionDescriptor10
Region descriptor 10.

enumerator kTRDC_RegionDescriptor11
Region descriptor 11.

enumerator kTRDC_RegionDescriptor12
Region descriptor 12.

enumerator kTRDC_RegionDescriptor13
Region descriptor 13.

enumerator kTRDC_RegionDescriptor14
Region descriptor 14.

enumerator kTRDC_RegionDescriptor15

Region descriptor 15.

enum _trdc_MRC_domain

The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator kTRDC_MrcDomain0

Domain 0.

enumerator kTRDC_MrcDomain1

Domain 1.

enumerator kTRDC_MrcDomain2

Domain 2.

enumerator kTRDC_MrcDomain3

Domain 3.

enumerator kTRDC_MrcDomain4

Domain 4.

enumerator kTRDC_MrcDomain5

Domain 5.

enumerator kTRDC_MrcDomain6

Domain 6.

enumerator kTRDC_MrcDomain7

Domain 7.

enumerator kTRDC_MrcDomain8

Domain 8.

enumerator kTRDC_MrcDomain9

Domain 9.

enumerator kTRDC_MrcDomain10

Domain 10.

enumerator kTRDC_MrcDomain11

Domain 11.

enumerator kTRDC_MrcDomain12

Domain 12.

enumerator kTRDC_MrcDomain13

Domain 13.

enumerator kTRDC_MrcDomain14

Domain 14.

enumerator kTRDC_MrcDomain15

Domain 15.

enum _trdc_MBC_domain

The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0
Domain 0.

enumerator kTRDC_MbcDomain1
Domain 1.

enumerator kTRDC_MbcDomain2
Domain 2.

enumerator kTRDC_MbcDomain3
Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum _trdc_MBC_memory

The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2
Memory 2.

enumerator kTRDC_MbcSlaveMemory3
Memory 3.

enum _trdc_MBC_bit

The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0
Bit 0.

enumerator kTRDC_MbcBit1
Bit 1.

enumerator kTRDC_MbcBit2
Bit 2.

enumerator kTRDC_MbcBit3
Bit 3.

enumerator kTRDC_MbcBit4
Bit 4.

enumerator kTRDC_MbcBit5
Bit 5.

enumerator kTRDC_MbcBit6
Bit 6.

enumerator kTRDC_MbcBit7
Bit 7.

enumerator kTRDC_MbcBit8
Bit 8.

enumerator kTRDC_MbcBit9
Bit 9.

enumerator kTRDC_MbcBit10
Bit 10.

enumerator kTRDC_MbcBit11
Bit 11.

enumerator kTRDC_MbcBit12
Bit 12.

enumerator kTRDC_MbcBit13
Bit 13.

enumerator kTRDC_MbcBit14
Bit 14.

enumerator kTRDC_MbcBit15
Bit 15.

enumerator kTRDC_MbcBit16
Bit 16.

enumerator kTRDC_MbcBit17
Bit 17.

enumerator kTRDC_MbcBit18
Bit 18.

enumerator kTRDC_MbcBit19
Bit 19.

enumerator kTRDC_MbcBit20
Bit 20.

enumerator kTRDC_MbcBit21
Bit 21.

enumerator kTRDC_MbcBit22
Bit 22.

enumerator kTRDC_MbcBit23
Bit 23.

enumerator kTRDC_MbcBit24
Bit 24.

enumerator kTRDC_MbcBit25
Bit 25.

enumerator kTRDC_MbcBit26
Bit 26.

enumerator `kTRDC_MbcBit27`
Bit 27.

enumerator `kTRDC_MbcBit28`
Bit 28.

enumerator `kTRDC_MbcBit29`
Bit 29.

enumerator `kTRDC_MbcBit30`
Bit 30.

enumerator `kTRDC_MbcBit31`
Bit 31.

typedef struct *trdc_hardware_config* trdc_hardware_config_t
TRDC hardware configuration.

typedef struct *trdc_slave_memory_hardware_config* trdc_slave_memory_hardware_config_t
Hardware configuration of the two slave memories within each MBC(memory block checker).

typedef enum *trdc_did_sel* trdc_did_sel_t
TRDC domain ID select method, the register bit `TRDC_MDA_W0_0_DFMT0[DIDS]`, used for domain hit evaluation.

typedef enum *trdc_secure_attr* trdc_secure_attr_t
TRDC secure attribute, the register bit `TRDC_MDA_W0_0_DFMT0[SA]`, used for bus master domain assignment.

typedef enum *trdc_pid_domain_hit_config* trdc_pid_domain_hit_config_t
The configuration of domain hit evaluation of PID.

typedef struct *trdc_processor_domain_assignment* trdc_processor_domain_assignment_t
Domain assignment for the processor bus master.

typedef enum *trdc_privilege_attr* trdc_privilege_attr_t
TRDC privileged attribute, the register bit `TRDC_MDA_W0_x_DFMT1[PA]`, used for non-processor bus master domain assignment.

typedef struct *trdc_non_processor_domain_assignment*
trdc_non_processor_domain_assignment_t
Domain assignment for the non-processor bus master.

typedef enum *trdc_pid_lock* trdc_pid_lock_t
PID lock configuration.

typedef struct *trdc_pid_config* trdc_pid_config_t
Process identifier(PID) configuration for processor cores.

typedef struct *trdc_idau_config* trdc_idau_config_t
IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

typedef struct *trdc_flw_config* trdc_flw_config_t
FLW(Flash Logical Window) configuration.

typedef enum *trdc_controller* trdc_controller_t
TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call `TRDC_GetHardwareConfig` to get the actual count.

typedef enum *trdc_error_state* trdc_error_state_t
TRDC domain error state definition `TRDC_MBCn_DERR_W1[EST]` or
`TRDC_MRCn_DERR_W1[EST]`.

```
typedef enum _trdc_error_attr trdc_error_attr_t
    TRDC_domain_error_attribute_definition TRDC_MBCn_DERR_W1[EATR] or
    TRDC_MRCn_DERR_W1[EATR].

typedef enum _trdc_error_type trdc_error_type_t
    TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

typedef struct _trdc_domain_error trdc_domain_error_t
    TRDC domain error definition.

typedef struct _trdc_memory_access_control_config trdc_memory_access_control_config_t
    Memory access control configuration for MBC/MRC.

typedef struct _trdc_mrc_region_descriptor_config trdc_mrc_region_descriptor_config_t
    The configuration of each region descriptor per domain per MRC instance.

typedef struct _trdc_mbc_nse_update_config trdc_mbc_nse_update_config_t
    The configuration of MBC NSE update.

typedef struct _trdc_mbc_memory_block_config trdc_mbc_memory_block_config_t
    The configuration of each memory block per domain per MBC instance.

FSL_TRDC_DRIVER_VERSION

struct _trdc_hardware_config
    #include <fsl_trdc.h> TRDC hardware configuration.
```

Public Members

```
uint8_t masterNumber
    Number of bus masters.

uint8_t domainNumber
    Number of domains.

uint8_t mbcNumber
    Number of MBCs.

uint8_t mrcNumber
    Number of MRCs.

struct _trdc_slave_memory_hardware_config
    #include <fsl_trdc.h> Hardware configuration of the two slave memories within each
    MBC(memory block checker).
```

Public Members

```
uint32_t blockNum
    Number of blocks.

uint32_t blockSize
    Block size.

struct _trdc_processor_domain_assignment
    #include <fsl_trdc.h> Domain assignment for the processor bus master.
```


Public Members

uint32_t domainId

Domain ID.

uint32_t domainIdSelect

Domain ID select method, see trdc_did_sel_t.

uint32_t pidDomainHitConfig

The configuration of the domain hit evaluation for PID, see trdc_pid_domain_hit_config_t.

uint32_t pidMask

The mask combined with PID, so multiple PID can be included as part of the domain hit determination. Set to 0 to disable.

uint32_t secureAttr

Secure attribute, see trdc_secure_attr_t.

uint32_t pid

The process identifier, combined with pidMask to form the domain hit determination.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct __trdc_non_processor_domain_assignment

#include <fsl_trdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see trdc_privilege_attr_t.

uint32_t secureAttr

Secure attribute, see trdc_secure_attr_t.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct __trdc_pid_config

#include <fsl_trdc.h> Process identifier(PID) configuration for processor cores.

Public Members

uint32_t pid

The process identifier of the executing task. The highest bit can be used to define secure/nonsecure attribute of the task.

uint32_t __pad0__

Reserved.

uint32_t lock

How to lock the register, see trdc_pid_lock_t.

uint32_t __pad1__

Reserved.

struct _trdc_idau_config

#include <fsl_trdc.h> IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t __pad0__

Reserved.

uint32_t lockSecureVTOR

Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR

Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU

Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU

Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU

Disable writes to SAU(Security Attribution Unit) registers.

uint32_t __pad1__

Reserved.

struct _trdc_flw_config

#include <fsl_trdc.h> FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount

Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr

Flash array base address of the Flash Logical Window.

bool lock

Disable writes to FLW registers.

bool enable

Enable FLW function.

struct `_trdc_domain_error`
#include <fsl_trdc.h> TRDC domain error definition.

Public Members

trdc_controller_t controller
Which controller captured access violation.

uint32_t address
Access address that generated access violation.

trdc_error_state_t errorState
Error state.

trdc_error_attr_t errorAttr
Error attribute.

trdc_error_type_t errorType
Error type.

uint8_t errorPort
Error port.

uint8_t domainId
Domain ID.

uint8_t slaveMemoryIdx
The slave memory index. Only apply when violation in MBC.

struct `_trdc_memory_access_control_config`
#include <fsl_trdc.h> Memory access control configuration for MBC/MRC.

Public Members

uint32_t nonsecureUsrX
Allow nonsecure user execute access.

uint32_t nonsecureUsrW
Allow nonsecure user write access.

uint32_t nonsecureUsrR
Allow nonsecure user read access.

uint32_t __pad0__
Reserved.

uint32_t nonsecurePrivX
Allow nonsecure privilege execute access.

uint32_t nonsecurePrivW
Allow nonsecure privilege write access.

uint32_t nonsecurePrivR
Allow nonsecure privilege read access.

uint32_t __pad1__
Reserved.

uint32_t secureUsrX
Allow secure user execute access.

uint32_t secureUsrW

Allow secure user write access.

uint32_t secureUsrR

Allow secure user read access.

uint32_t __pad2__

Reserved.

uint32_t securePrivX

Allownonsecure privilege execute access.

uint32_t securePrivW

Allownonsecure privilege write access.

uint32_t securePrivR

Allownonsecure privilege read access.

uint32_t __pad3__

Reserved.

uint32_t lock

Lock the configuration until next reset, only apply to access control register 0.

struct _trdc_mrc_region_descriptor_config

#include <fsl_trdc.h> The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect

Select one of the 8 access control policies for this region, for access control policies see `trdc_memory_access_control_config_t`.

uint32_t startAddr

Physical start address.

bool valid

Lock the register.

bool nseEnable

Enable non-secure accesses and disable secure accesses.

uint32_t endAddr

Physical start address.

uint8_t mrcIdx

The index of the MRC for this configuration to take effect.

uint8_t domainIdx

The index of the domain for this configuration to take effect.

uint8_t regionIdx

The index of the region for this configuration to take effect.

struct _trdc_mbc_nse_update_config

#include <fsl_trdc.h> The configuration of MBC NSE update.

Public Members

uint32_t __pad0__

Reserved.

uint32_t wordIdx

MBC configuration word index to be updated.

uint32_t __pad1__

Reserved.

uint32_t memorySelect

Bit mask of the selected memory to be updated. `_trdc_MBC_memory`.

uint32_t __pad2__

Reserved.

uint32_t domainSelect

Bit mask of the selected domain to be updated. `_trdc_MBC_domain`.

uint32_t __pad3__

Reserved.

uint32_t autoIncrement

Whether to increment the word index after current word is updated using this configuration.

struct `_trdc_mbc_memory_block_config`

`#include <fsl_trdc.h>` The configuration of each memory block per domain per MBC instance.

Public Members

uint32_t memoryAccessControlSelect

Select one of the 8 access control policies for this memory block, for access control policies see `trdc_memory_access_control_config_t`.

uint32_t nseEnable

Enable non-secure accesses and disable secure accesses.

uint32_t mbcIdx

The index of the MBC for this configuration to take effect.

uint32_t domainIdx

The index of the domain for this configuration to take effect.

uint32_t slaveMemoryIdx

The index of the slave memory for this configuration to take effect.

uint32_t memoryBlockIdx

The index of the memory block for this configuration to take effect.

2.50 Trdc_core

typedef struct *TRDC_General_Type* TRDC_General_Type

TRDC general configuration register definition.

typedef struct *TRDC_FLW_Type* TRDC_FLW_Type

TRDC flash logical control register definition.

```
typedef struct _TRDC_DomainError_Type TRDC_DomainError_Type
    TRDC domain error register definition.

typedef struct _TRDC_DomainAssignment_Type TRDC_DomainAssignment_Type
    TRDC master domain assignment register definition.

typedef struct _TRDC_MBC_Type TRDC_MBC_Type
    TRDC MBC control register definition.

typedef struct _TRDC_MRC_Type TRDC_MRC_Type
    TRDC MRC control register definition. MRC_DOM0_RGD_W[region][word].

TRDC_GENERAL_BASE(base)
    TRDC base address convert macro.

TRDC_FLW_BASE(base)

TRDC_DOMAIN_ERROR_BASE(base)

TRDC_DOMAIN_ASSIGNMENT_BASE(base)

TRDC_MBC_BASE(base, instance)

TRDC_MRC_BASE(base, instance)

struct _TRDC_General_Type
    #include <fsl_trdc_core.h> TRDC general configuration register definition.
```

Public Members

```
__IO uint32_t TRDC_CR
    TRDC Register, offset: 0x0

__I uint32_t TRDC_HWCFG0
    TRDC Hardware Configuration Register 0, offset: 0xF0

__I uint32_t TRDC_HWCFG1
    TRDC Hardware Configuration Register 1, offset: 0xF4

__I uint32_t TRDC_HWCFG2
    TRDC Hardware Configuration Register 2, offset: 0xF8

__I uint32_t TRDC_HWCFG3
    TRDC Hardware Configuration Register 3, offset: 0xFC

__I uint8_t DACFG [8]
    Domain Assignment Configuration Register, array offset: 0x100, array step: 0x1

__IO uint32_t TRDC_IDAU_CR
    TRDC IDAU Control Register, offset: 0x1C0

struct _TRDC_FLW_Type
    #include <fsl_trdc_core.h> TRDC flash logical control register definition.
```

Public Members

```
__IO uint32_t TRDC_FLW_CTL
    TRDC FLW Control, offset: 0x1E0

__I uint32_t TRDC_FLW_PBASE
    TRDC FLW Physical Base, offset: 0x1E4
```

```
__IO uint32_t TRDC_FLW_ABASE
    TRDC FLW Array Base, offset: 0x1E8
__IO uint32_t TRDC_FLW_BCNT
    TRDC FLW Block Count, offset: 0x1EC
```

```
struct _TRDC_DomainError_Type
    #include <fsl_trdc_core.h> TRDC domain error register definition.
```

Public Members

```
__IO uint32_t TRDC_FDID
    TRDC Fault Domain ID, offset: 0x1FC
__I uint32_t TRDC_DERRLOC [16]
    TRDC Domain Error Location Register, array offset: 0x200, array step: 0x4
```

```
struct _TRDC_DomainAssignment_Type
    #include <fsl_trdc_core.h> TRDC master domain assignment register definition.
```

Public Members

```
__IO uint32_t PID [8]
    Process Identifier, array offset: 0x700, array step: 0x4
```

```
struct _TRDC_MBC_Type
    #include <fsl_trdc_core.h> TRDC MBC control register definition.
```

Public Members

```
__I uint32_t MBC_MEM_GLBCFG [4]
    MBC Global Configuration Register, array offset: 0x10000, array step: index*0x2000,
    index2*0x4
__IO uint32_t MBC_NSE_BLK_INDEX
    MBC NonSecure Enable Block Index, array offset: 0x10010, array step: 0x2000
__O uint32_t MBC_NSE_BLK_SET
    MBC NonSecure Enable Block Set, array offset: 0x10014, array step: 0x2000
__O uint32_t MBC_NSE_BLK_CLR
    MBC NonSecure Enable Block Clear, array offset: 0x10018, array step: 0x2000
__O uint32_t MBC_NSE_BLK_CLR_ALL
    MBC NonSecure Enable Block Clear All, array offset: 0x1001C, array step: 0x2000
__IO uint32_t MBC_MEMN_GLBAC [8]
    MBC Global Access Control, array offset: 0x10020, array step: index*0x2000, in-
    dex2*0x4
__IO uint32_t MBC_DOM0_MEM0_BLK_CFG_W [64]
    MBC Memory Block Configuration Word, array offset: 0x10040, array step: in-
    dex*0x2000, index2*0x4
__IO uint32_t MBC_DOM0_MEM0_BLK_NSE_W [16]
    MBC Memory Block NonSecure Enable Word, array offset: 0x10140, array step: in-
    dex*0x2000, index2*0x4
```

- ___IO uint32_t MBC_DOM0_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10180, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x101A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x101D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10440, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM2_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10640, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107F0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM4_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BD0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM5_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10D40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10D80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10E40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10F40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10F80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FC8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM7_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM7_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11040, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11140, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11180, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113A8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM9_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM10_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11640, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117A0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM11_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM11_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11B80, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM13_MEM1_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11BA0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM13_MEM2_BLK_CFG_W [8]
 MBC Memory Block Configuration Word, array offset: 0x11BA8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM13_MEM2_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11BC8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM13_MEM3_BLK_CFG_W [8]
 MBC Memory Block Configuration Word, array offset: 0x11BD0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM13_MEM3_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11BF0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM0_BLK_CFG_W [64]
 MBC Memory Block Configuration Word, array offset: 0x11C40, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM0_BLK_NSE_W [16]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11D40, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM1_BLK_CFG_W [8]
 MBC Memory Block Configuration Word, array offset: 0x11D80, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM1_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11DA0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM2_BLK_CFG_W [8]
 MBC Memory Block Configuration Word, array offset: 0x11DA8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM2_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11DC8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM3_BLK_CFG_W [8]
 MBC Memory Block Configuration Word, array offset: 0x11DD0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM14_MEM3_BLK_NSE_W [2]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11DF0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM0_BLK_CFG_W [64]
 MBC Memory Block Configuration Word, array offset: 0x11E40, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM0_BLK_NSE_W [16]
 MBC Memory Block NonSecure Enable Word, array offset: 0x11F40, array step: index*0x2000, index2*0x4

```
__IO uint32_t MBC_DOM15_MEM1_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11F80, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM1_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FA0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM2_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11FA8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM2_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FC8, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM3_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11FD0, array step: index*0x2000, index2*0x4

__IO uint32_t MBC_DOM15_MEM3_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FF0, array step: index*0x2000, index2*0x4

struct _TRDC_MRC_Type
#include <fsl_trdc_core.h>    TRDC    MRC    control    register    definition.
MRC_DOM0_RGD_W[region][word].
```

Public Members

```
__I uint32_t MRC_GLBCFG
    MRC Global Configuration Register, array offset: 0x14000, array step: 0x1000

__IO uint32_t MRC_NSE_RGN_INDIRECT
    MRC NonSecure Enable Region Indirect, array offset: 0x14010, array step: 0x1000

__O uint32_t MRC_NSE_RGN_SET
    MRC NonSecure Enable Region Set, array offset: 0x14014, array step: 0x1000

__O uint32_t MRC_NSE_RGN_CLR
    MRC NonSecure Enable Region Clear, array offset: 0x14018, array step: 0x1000

__O uint32_t MRC_NSE_RGN_CLR_ALL
    MRC NonSecure Enable Region Clear All, array offset: 0x1401C, array step: 0x1000

__IO uint32_t MRC_GLBAC [8]
    MRC Global Access Control, array offset: 0x14020, array step: index*0x1000, index2*0x4

__IO uint32_t MRC_DOM0_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14040, array step: index*0x1000, index2*0x8, index3*0x4

__IO uint32_t MRC_DOM0_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x140C0, array step: 0x1000

__IO uint32_t MRC_DOM1_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14140, array step: index*0x1000, index2*0x8, index3*0x4
```

```

__IO uint32_t MRC_DOM1_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x141C0, array step: 0x1000
__IO uint32_t MRC_DOM2_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14240,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM2_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x142C0, array step: 0x1000
__IO uint32_t MRC_DOM3_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14340,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM3_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x143C0, array step: 0x1000
__IO uint32_t MRC_DOM4_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14440,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM4_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x144C0, array step: 0x1000
__IO uint32_t MRC_DOM5_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14540,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM5_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x145C0, array step: 0x1000
__IO uint32_t MRC_DOM6_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14640,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM6_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x146C0, array step: 0x1000
__IO uint32_t MRC_DOM7_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14740,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM7_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x147C0, array step: 0x1000
__IO uint32_t MRC_DOM8_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14840,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM8_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x148C0, array step: 0x1000
__IO uint32_t MRC_DOM9_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14940,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM9_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x149C0, array step: 0x1000
__IO uint32_t MRC_DOM10_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14A40,
    array step: index*0x1000, index2*0x8, index3*0x4

```

```
__IO uint32_t MRC_DOM10_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14AC0, array step: 0x1000
__IO uint32_t MRC_DOM11_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14B40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM11_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14BC0, array step: 0x1000
__IO uint32_t MRC_DOM12_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14C40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM12_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14CC0, array step: 0x1000
__IO uint32_t MRC_DOM13_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14D40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM13_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14DC0, array step: 0x1000
__IO uint32_t MRC_DOM14_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14E40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM14_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14EC0, array step: 0x1000
__IO uint32_t MRC_DOM15_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14F40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM15_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14FC0, array step: 0x1000
struct MBC_DERR
```

Public Members

```
__I uint32_t W0
    MBC Domain Error Word0 Register, array offset: 0x400, array step: 0x10
__I uint32_t W1
    MBC Domain Error Word1 Register, array offset: 0x404, array step: 0x10
__O uint32_t W3
    MBC Domain Error Word3 Register, array offset: 0x40C, array step: 0x10
struct MRC_DERR
```

Public Members

```
__I uint32_t W0
    MRC Domain Error Word0 Register, array offset: 0x480, array step: 0x10
__I uint32_t W1
    MRC Domain Error Word1 Register, array offset: 0x484, array step: 0x10
```

__IO uint32_t W3
MRC Domain Error Word3 Register, array offset: 0x48C, array step: 0x10
union __unnamed34__

Public Members

struct *_TRDC_DomainAssignment_Type* MDA_DFMT0[8]
struct *_TRDC_DomainAssignment_Type* MDA_DFMT1[8]
struct MDA_DFMT0

Public Members

__IO uint32_t MDA_W_DFMT0 [8]
DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20,
index2*0x4
struct MDA_DFMT1

Public Members

__IO uint32_t MDA_W_DFMT1 [1]
DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20,
index2*0x4

2.51 Trdc_soc

FSL_TRDC_SOC_DRIVER_VERSION
Driver version 1.1.0.
TRDC_MBC_NSE_BLK_CLR_ALL_MEMSEL(x)
TRDC_MBC_NSE_BLK_CLR_ALL_DID_SEL(x)
FSL_FEATURE_TRDC_DOMAIN_COUNT
TRDC feature.
TRDC_MBC_COUNT
TRDC base address convert macro.
TRDC_MBC_OFFSET(x)
TRDC_MBC_ARRAY_STEP
FSL_COMPONENT_ID

2.52 TRNG: True Random Number Generator

FSL_TRNG_DRIVER_VERSION

TRNG driver version 2.0.19.

Current version: 2.0.19

Change log:

- version 2.0.19
 - Added support for MCXA and MCXL.
- version 2.0.18
 - TRNG health checks now done in software on RT5xx and RT6xx.
- version 2.0.17
 - Added support for RT700.
- version 2.0.16
 - Added support for Dual oscillator mode.
- version 2.0.15
 - Changed TRNG_USER_CONFIG_DEFAULT_XXX values according to latest recommended by design team.
- version 2.0.14
 - add support for RW610 and RW612
- version 2.0.13
 - After deepsleep it might return error, added clearing bits in TRNG_GetRandomData() and generating new entropy.
 - Modified reloading entropy in TRNG_GetRandomData(), for some data length it doesn't reloading entropy correctly.
- version 2.0.12
 - For KW34A4_SERIES, KW35A4_SERIES, KW36A4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.
- version 2.0.11
 - Add clearing pending errors in TRNG_Init().
- version 2.0.10
 - Fixed doxygen issues.
- version 2.0.9
 - Fix HIS_CCM metrics issues.
- version 2.0.8
 - For K32L2A41A_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv4.
- version 2.0.7
 - Fix MISRA 2004 issue rule 12.5.
- version 2.0.6
 - For KW35Z4_SERIES set TRNG_USER_CONFIG_DEFAULT_OSC_DIV to kTRNG_RingOscDiv8.
- version 2.0.5

- Add possibility to define default TRNG configuration by device specific preprocessor macros for FRQMIN, FRQMAX and OSCDIV.
- version 2.0.4
 - Fix MISRA-2012 issues.
- Version 2.0.3
 - update TRNG_Init to restart entropy generation
- Version 2.0.2
 - fix MISRA issues
- Version 2.0.1
 - add support for KL8x and KL28Z
 - update default OSCDIV for K81 to divide by 2

enum `_trng_sample_mode`

TRNG sample mode. Used by `trng_config_t`.

Values:

enumerator `kTRNG_SampleModeVonNeumann`

Use von Neumann data in both Entropy shifter and Statistical Checker.

enumerator `kTRNG_SampleModeRaw`

Use raw data into both Entropy shifter and Statistical Checker.

enumerator `kTRNG_SampleModeVonNeumannRaw`

Use von Neumann data in Entropy shifter. Use raw data into Statistical Checker.

enum `_trng_clock_mode`

TRNG clock mode. Used by `trng_config_t`.

Values:

enumerator `kTRNG_ClockModeRingOscillator`

Ring oscillator is used to operate the TRNG (default).

enumerator `kTRNG_ClockModeSystem`

System clock is used to operate the TRNG. This is for test use only, and indeterminate results may occur.

enum `_trng_ring_osc_div`

TRNG ring oscillator divide. Used by `trng_config_t`.

Values:

enumerator `kTRNG_RingOscDiv0`

Ring oscillator with no divide

enumerator `kTRNG_RingOscDiv2`

Ring oscillator divided-by-2.

enumerator `kTRNG_RingOscDiv4`

Ring oscillator divided-by-4.

enumerator `kTRNG_RingOscDiv8`

Ring oscillator divided-by-8.

enum `trng_oscillator_mode_t`

TRNG oscillator mode . Used by `trng_config_t`.

Values:

enumerator kTRNG_SingleOscillatorModeOsc1
Single oscillator mode, using OSC1 (default)

enumerator kTRNG_DualOscillatorMode
Dual oscillator mode

enumerator kTRNG_SingleOscillatorModeOsc2
Single oscillator mode, using OSC2

typedef enum *trng_sample_mode* trng_sample_mode_t
TRNG sample mode. Used by trng_config_t.

typedef enum *trng_clock_mode* trng_clock_mode_t
TRNG clock mode. Used by trng_config_t.

typedef enum *trng_ring_osc_div* trng_ring_osc_div_t
TRNG ring oscillator divide. Used by trng_config_t.

typedef enum *trng_oscillator_mode_t* trng_oscillator_mode_t
TRNG oscillator mode . Used by trng_config_t.

typedef struct *trng_statistical_check_limit* trng_statistical_check_limit_t
Data structure for definition of statistical check limits. Used by trng_config_t.

typedef struct *trng_user_config* trng_config_t
Data structure for the TRNG initialization.

This structure initializes the TRNG by calling the TRNG_Init() function. It contains all TRNG configurations.

status_t TRNG_GetDefaultConfig(*trng_config_t* *userConfig)
Initializes the user configuration structure to default values.

This function initializes the configuration structure to default values. The default values are platform dependent.

Parameters

- userConfig – User configuration structure.

Returns

If successful, returns the kStatus_TRNG_Success. Otherwise, it returns an error.

status_t TRNG_Init(TRNG_Type *base, const *trng_config_t* *userConfig)
Initializes the TRNG.

This function initializes the TRNG. When called, the TRNG entropy generation starts immediately.

Parameters

- base – TRNG base address
- userConfig – Pointer to the initialization configuration structure.

Returns

If successful, returns the kStatus_TRNG_Success. Otherwise, it returns an error.

void TRNG_Deinit(TRNG_Type *base)
Shuts down the TRNG.

This function shuts down the TRNG.

Parameters

- base – TRNG base address.

status_t TRNG_GetRandomData(TRNG_Type *base, void *data, size_t dataSize)

Gets random data.

This function gets random data from the TRNG.

Parameters

- base – TRNG base address.
- data – Pointer address used to store random data.
- dataSize – Size of the buffer pointed by the data parameter.

Returns

random data

struct __trng_statistical_check_limit

#include <fsl_trng.h> Data structure for definition of statistical check limits. Used by *trng_config_t*.

Public Members

uint32_t maximum

Maximum limit.

int32_t minimum

Minimum limit.

struct __trng_user_config

#include <fsl_trng.h> Data structure for the TRNG initialization.

This structure initializes the TRNG by calling the TRNG_Init() function. It contains all TRNG configurations.

Public Members

bool lock

Disable programmability of TRNG registers.

trng_clock_mode_t clockMode

Clock mode used to operate TRNG.

trng_ring_osc_div_t ringOscDiv

Ring oscillator divide used by TRNG.

trng_sample_mode_t sampleMode

Sample mode of the TRNG ring oscillator.

trng_oscillator_mode_t oscillatorMode

TRNG oscillator mode .

trng_ring_osc_div_t ringOsc2Div

Divider used for Ring oscillator 2.

uint16_t entropyDelay

Entropy Delay. Defines the length (in system clocks) of each Entropy sample taken.

uint16_t sampleSize

Sample Size. Defines the total number of Entropy samples that will be taken during Entropy generation.

`uint16_t sparseBitLimit`

Sparse Bit Limit which defines the maximum number of consecutive samples that may be discarded before an error is generated. This limit is used only for during von Neumann sampling (enabled by `TRNG_HAL_SetSampleMode()`). Samples are discarded if two consecutive raw samples are both 0 or both 1. If this discarding occurs for a long period of time, it indicates that there is insufficient Entropy.

`uint8_t retryCount`

Retry count. It defines the number of times a statistical check may fails during the TRNG Entropy Generation before generating an error.

`uint8_t longRunMaxLimit`

Largest allowable number of consecutive samples of all 1, or all 0, that is allowed during the Entropy generation.

`trng_statistical_check_limit_t monobitLimit`

Maximum and minimum limits for statistical check of number of ones/zero detected during entropy generation.

`trng_statistical_check_limit_t runBit1Limit`

Maximum and minimum limits for statistical check of number of runs of length 1 detected during entropy generation.

`trng_statistical_check_limit_t runBit2Limit`

Maximum and minimum limits for statistical check of number of runs of length 2 detected during entropy generation.

`trng_statistical_check_limit_t runBit3Limit`

Maximum and minimum limits for statistical check of number of runs of length 3 detected during entropy generation.

`trng_statistical_check_limit_t runBit4Limit`

Maximum and minimum limits for statistical check of number of runs of length 4 detected during entropy generation.

`trng_statistical_check_limit_t runBit5Limit`

Maximum and minimum limits for statistical check of number of runs of length 5 detected during entropy generation.

`trng_statistical_check_limit_t runBit6PlusLimit`

Maximum and minimum limits for statistical check of number of runs of length 6 or more detected during entropy generation.

`trng_statistical_check_limit_t pokerLimit`

Maximum and minimum limits for statistical check of “Poker Test”.

`trng_statistical_check_limit_t frequencyCountLimit`

Maximum and minimum limits for statistical check of entropy sample frequency count.

2.53 UTICK: Mictotick Timer Driver

`void UTICK_Init(UTICK_Type *base)`

Initializes an UTICK by turning its bus clock on.

`void UTICK_Deinit(UTICK_Type *base)`

Deinitializes a UTICK instance.

This function shuts down Utick bus clock

Parameters

- base – UTICK peripheral base address.

uint32_t UTICK_GetStatusFlags(UTICK_Type *base)

Get Status Flags.

This returns the status flag

Parameters

- base – UTICK peripheral base address.

Returns

status register value

void UTICK_ClearStatusFlags(UTICK_Type *base)

Clear Status Interrupt Flags.

This clears intr status flag

Parameters

- base – UTICK peripheral base address.

Returns

none

void UTICK_SetTick(UTICK_Type *base, *utick_mode_t* mode, uint32_t count, *utick_callback_t* cb)

Starts UTICK.

This function starts a repeat/onetime countdown with an optional callback

Parameters

- base – UTICK peripheral base address.
- mode – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- count – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- cb – UTICK callback (can be left as NULL if none, otherwise should be a void func(void))

Returns

none

void UTICK_HandleIRQ(UTICK_Type *base, *utick_callback_t* cb)

UTICK Interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in UTICK_SetTick()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – UTICK peripheral base address.
- cb – callback scheduled for this instance of UTICK

Returns

none

FSL_UTICK_DRIVER_VERSION

UTICK driver version 2.0.5.

```
enum _utick_mode
    UTICK timer operational mode.

    Values:
    enumerator kUTICK_Onetime
        Trigger once
    enumerator kUTICK_Repeat
        Trigger repeatedly

typedef enum _utick_mode utick_mode_t
    UTICK timer operational mode.

typedef void (*utick_callback_t)(void)
    UTICK callback function.
```

2.54 WUU: Wakeup Unit driver

```
void WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const
    wuu_external_wakeup_pin_config_t *config)
```

Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin. See Reference Manual for the details.
- config – Pointer to wuu_external_wakeup_pin_config_t structure.

```
void WUU_ClearExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex)
```

Disable and clear external wakeup pin settings.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin.

```
static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)
```

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all external wakeup pins.

```
static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)
```

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- base – WUU peripheral base address.
- mask – The mask of Wakeup pin index to be cleared.

```
void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                         wuu_internal_wakeup_module_event_t event)
```

Config Internal modules' event as the wake up sources.

This function configs the internal modules event as the wake up sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – Select interrupt or DMA/Trigger of the internal module as the wake up source.

```
void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                           wuu_internal_wakeup_module_event_t event)
```

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – The event(interrupt or DMA/trigger) of the internal module to disable.

```
static inline uint32_t WUU_GetModuleInterruptFlag(WUU_Type *base)
```

Get wakeup flags for internal wakeup modules.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all internal wakeup modules.

```
static inline bool WUU_GetInternalWakeupModuleFlag(WUU_Type *base, uint32_t moduleIndex)
```

Gets the internal module wakeup source flag.

This function checks the flag to detect whether the system is woken up by specific on-chip module interrupt.

Parameters

- base – WWU peripheral base address.
- moduleIndex – A module index, which starts from 0.

Returns

True if the specific pin is a wake up source.

```
void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const  
                            wuu_pin_filter_config_t *config)
```

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filter operate mode filter wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filter.
- config – Pointer to *wuu_pin_filter_config_t* structure.

bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

FSL_WUU_DRIVER_VERSION

Defines WUU driver version 2.4.1.

enum _wuu_external_pin_edge_detection

External WakeUp pin edge detection enumeration.

Values:

enumerator kWUU_ExternalPinDisable

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge

External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge

External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge

External input Pin enabled with any change detection.

enum _wuu_external_wakeup_pin_event

External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt
External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest
External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent
External input Pin configured as Trigger event.

enum _wu_external_wakeup_pin_mode
External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD
External input Pin is active only during Deep Sleep/Power Down Mode. NOTE: This enumerations has been deprecated, please switch to kWUU_ExternalPinActiveLowLeakage.

enumerator kWUU_ExternalPinActiveLowLeakageMode
External input Pin is active only during low-leakage power modes.

enumerator kWUU_ExternalPinActiveAlways
External input Pin is active during all power modes.

enum _wu_internal_wakeup_module_event
Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt
Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger
Internal modules' DMA/Trigger as a wakeup source.

enum _wu_filter_edge
Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum _wu_filter_event
Pin Filter event enumeration.

Values:

enumerator kWUU_FilterInterrupt
Filter output configured as interrupt.

enumerator kWUU_FilterDMARequest
Filter output configured as DMA request.

enumerator kWUU_FilterTriggerEvent

Filter output configured as Trigger event.

enum __wu__filter_mode

Pin filter mode enumeration.

Values:

enumerator kWUU_FilterActiveDSPD

External input pin filter is active only during Deep Sleep/Power Down Mode. NOTE: This enumerations has been deprecated, please switch to kWUU_FilterActiveLowLeakage.

enumerator kWUU_FilterActiveLowLeakageMode

External input pin filter is active only during low-leakage power modes.

enumerator kWUU_FilterActiveAlways

External input Pin filter is active during all power modes.

typedef enum __wu__external_pin_edge_detection wu__external_pin_edge_detection_t

External WakeUp pin edge detection enumeration.

typedef enum __wu__external_wakeup_pin_event wu__external_wakeup_pin_event_t

External input wake up pin event enumeration.

typedef enum __wu__external_wakeup_pin_mode wu__external_wakeup_pin_mode_t

External input wake up pin mode enumeration.

typedef enum __wu__internal_wakeup_module_event wu__internal_wakeup_module_event_t

Internal module wake up event enumeration.

typedef enum __wu__filter_edge wu__filter_edge_t

Pin filter edge enumeration.

typedef enum __wu__filter_event wu__filter_event_t

Pin Filter event enumeration.

typedef enum __wu__filter_mode wu__filter_mode_t

Pin filter mode enumeration.

typedef struct __wu__external_wakeup_pin_config wu__external_wakeup_pin_config_t

External WakeUp pin configuration.

typedef struct __wu__pin_filter_config wu__pin_filter_config_t

Pin Filter configuration.

struct __wu__external_wakeup_pin_config

#include <fsl_wuu.h> External WakeUp pin configuration.

Public Members

wu__external_pin_edge_detection_t edge

External Input pin edge detection.

wu__external_wakeup_pin_event_t event

External Input wakeup Pin event

wu__external_wakeup_pin_mode_t mode

External Input wakeup Pin operate mode.

struct __wu__pin_filter_config

#include <fsl_wuu.h> Pin Filter configuration.

Public Members**uint32_t** pinIndex

The index of wakeup pin to be muxxed into filter.

wuu_filter_edge_t edge

The edge of the pin digital filter.

wuu_filter_event_t event

The event of the filter output.

wuu_filter_mode_t mode

The mode of the filter operate.

2.55 WWDT: Windowed Watchdog Timer Driver

void WWDT_GetDefaultConfig(*wwdt_config_t* *config)

Initializes WWDT configure structure.

This function initializes the WWDT configure structure to default value. The default value are:

```
config->enableWwdt = true;
config->enableWatchdogReset = false;
config->enableWatchdogProtect = false;
config->enableLockOscillator = false;
config->windowValue = 0xFFFFFfU;
config->timeoutValue = 0xFFFFFfU;
config->warningValue = 0;
```

See also:*wwdt_config_t***Parameters**

- config – Pointer to WWDT config structure.

void WWDT_Init(*WWDT_Type* *base, const *wwdt_config_t* *config)

Initializes the WWDT.

This function initializes the WWDT. When called, the WWDT runs according to the configuration.

Example:

```
wwdt_config_t config;
WWDT_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
WWDT_Init(wwdt_base,&config);
```

Parameters

- base – WWDT peripheral base address
- config – The configuration of WWDT

```
void WWDT_Deinit(WWDT_Type *base)
```

Shuts down the WWDT.

This function shuts down the WWDT.

Parameters

- base – WWDT peripheral base address

```
static inline void WWDT_Enable(WWDT_Type *base)
```

Enables the WWDT module.

This function write value into WWDT_MOD register to enable the WWDT, it is a write-once bit; once this bit is set to one and a watchdog feed is performed, the watchdog timer will run permanently.

Parameters

- base – WWDT peripheral base address

```
static inline void WWDT_Disable(WWDT_Type *base)
```

Disables the WWDT module.

Deprecated:

Do not use this function. It will be deleted in next release version, for once the bit field of WDEN written with a 1, it can not be re-written with a 0.

This function write value into WWDT_MOD register to disable the WWDT.

Parameters

- base – WWDT peripheral base address

```
static inline uint32_t WWDT_GetStatusFlags(WWDT_Type *base)
```

Gets all WWDT status flags.

This function gets all status flags.

Example for getting Timeout Flag:

```
uint32_t status;  
status = WWDT_GetStatusFlags(wwdt_base) & kWWDT_TimeoutFlag;
```

Parameters

- base – WWDT peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `_wwdt_status_flags_t`

```
void WWDT_ClearStatusFlags(WWDT_Type *base, uint32_t mask)
```

Clear WWDT flag.

This function clears WWDT status flag.

Example for clearing warning flag:

```
WWDT_ClearStatusFlags(wwdt_base, kWWDT_WarningFlag);
```

Parameters

- base – WWDT peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `_wwdt_status_flags_t`


```
static inline void WWDT_SetWarningValue(WWDT_Type *base, uint32_t warningValue)
```

Set the WWDT warning value.

The WDWARNINT register determines the watchdog timer counter value that will generate a watchdog interrupt. When the watchdog timer counter is no longer greater than the value defined by WARNINT, an interrupt will be generated after the subsequent WDCLK.

Parameters

- base – WWDT peripheral base address
- warningValue – WWDT warning value.

```
static inline void WWDT_SetTimeoutValue(WWDT_Type *base, uint32_t timeoutCount)
```

Set the WWDT timeout value.

This function sets the timeout value. Every time a feed sequence occurs the value in the TC register is loaded into the Watchdog timer. Writing a value below 0xFF will cause 0xFF to be loaded into the TC register. Thus the minimum time-out interval is $TWDCLK * 256 * 4$. If enableWatchdogProtect flag is true in `wwdt_config_t` config structure, any attempt to change the timeout value before the watchdog counter is below the warning and window values will cause a watchdog reset and set the WDTOF flag.

Parameters

- base – WWDT peripheral base address
- timeoutCount – WWDT timeout value, count of WWDT clock tick.

```
static inline void WWDT_SetWindowValue(WWDT_Type *base, uint32_t windowValue)
```

Sets the WWDT window value.

The WINDOW register determines the highest TV value allowed when a watchdog feed is performed. If a feed sequence occurs when timer value is greater than the value in WINDOW, a watchdog event will occur. To disable windowing, set windowValue to 0xFFFFFFFF (maximum possible timer value) so windowing is not in effect.

Parameters

- base – WWDT peripheral base address
- windowValue – WWDT window value.

```
void WWDT_Refresh(WWDT_Type *base)
```

Refreshes the WWDT timer.

This function feeds the WWDT. This function should be called before WWDT timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WWDT peripheral base address

```
FSL_WWDT_DRIVER_VERSION
```

Defines WWDT driver version.

```
WWDT_FIRST_WORD_OF_REFRESH
```

First word of refresh sequence

```
WWDT_SECOND_WORD_OF_REFRESH
```

Second word of refresh sequence

```
enum __wwdt_status_flags_t
```

WWDT status flags.

This structure contains the WWDT status flags for use in the WWDT functions.

Values:

enumerator kWWDT_TimeoutFlag

Time-out flag, set when the timer times out

enumerator kWWDT_WarningFlag

Warning interrupt flag, set when timer is below the value WDWARNINT

typedef struct *wwdt_config* wwdt_config_t

Describes WWDT configuration structure.

struct __wwdt_config

#include <fsl_wwdt.h> Describes WWDT configuration structure.

Public Members

bool enableWwdt

Enables or disables WWDT

bool enableWatchdogReset

true: Watchdog timeout will cause a chip reset false: Watchdog timeout will not cause a chip reset

bool enableWatchdogProtect

true: Enable watchdog protect i.e timeout value can only be changed after counter is below warning & window values false: Disable watchdog protect; timeout value can be changed at any time

uint32_t windowValue

Window value, set this to 0xFFFFFFFF if windowing is not in effect

uint32_t timeoutValue

Timeout value

uint32_t warningValue

Watchdog time counter value that will generate a warning interrupt. Set this to 0 for no warning

uint32_t clockFreq_Hz

Watchdog clock source frequency.

Chapter 3

Middleware

3.1 Motor Control

3.1.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called `FMSTR_TRANSPORT` with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The `mcuxsdk` folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)
- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer’s physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER “middleware” driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
 - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
 - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
 - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
 - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- **src/drivers/[sdk]/serial** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- **src/drivers/[sdk]/can** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- **src/drivers/[sdk]/network** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR    [0|1]
#define FMSTR_SHORT_INTR  [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- FMSTR_SERIAL - serial communication protocol
- FMSTR_CAN - using CAN communication
- FMSTR_PDBDM - using packet-driven BDM communication
- FMSTR_NET - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as FMSTR_SERIAL_DRV. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call FMSTR_SetSerialBaseAddress() to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_RQUEUE_SIZE

```
#define FMSTR_COMM_RQUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode.
The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetCanBaseAddress()` to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options**FMSTR_DISABLE**

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options**FMSTR_USE_SCOPE**

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options**FMSTR_USE_RECORDER**

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.
Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options**FMSTR_USE_TSA**

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial “character time” which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the *src/common/platforms/[your_platform]* folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the *freemaster_cfg.h* file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the *freemaster.h* file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the *freemaster_cfg.h* file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the [FMSTR_Init](#) function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see [Driver interrupt modes](#)). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the [FMSTR_Poll](#) function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the FMSTR_Poll function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- N is equal to the length of the receive FIFO queue (configured by the FMSTR_COMM_RQUEUE_SIZE macro). N is 1 for the poll-driven mode.
- $Tchar$ is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see [Driver interrupt modes](#)), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()
```

```
FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmrstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)
```

```
/* Directory entry applies to all subsequent MEMFILE entries */
```

```
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()

```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```

FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);

```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
 - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
 - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the *FMSTR_USE_TSA_DYNAMIC* configuration option and when the *FMSTR_SetUpTsaBuff* function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the *FMSTR_APPCMDRESULT_NOCMD* constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the *FMSTR_AppCmdAck* call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The *FMSTR_GetAppCmd* function does not report the commands for which a callback handler function exists. If the *FMSTR_GetAppCmd* function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns *FMSTR_APPCMDRESULT_NOCMD*.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↪PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the *nGranularity* value equal to the *nLength* value, all data are considered as one chunk which is either written successfully as a whole or not at all. The *nGranularity* value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables. By default, this is defined as <i>FM-STR_SIZE</i> .
<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors. By default, this is defined as <i>FM-STR_SIZE</i> .

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object. Generally, this is a pointer to a void type.
<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data. Generally, this is an unsigned 8-bit or 16-bit type.
<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data. This is used to store the data buffer sizes.
<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function. See FM-STR_PipeOpen for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FMSTR_U16</i>	Unsigned 16-bit integer.
<i>FMSTR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FMSTR_S16</i>	Signed 16-bit integer.
<i>FMSTR_S32</i>	Signed 32-bit integer.
<i>FMSTR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FMSTR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FMSTR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FMSTR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FMSTR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FMSTR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.2 MultiCore

3.2.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 25.12.00.

This software package contains components for efficient work with multicore devices as well as for the multiprocessor communication.

What is new

- eRPC [CHANGELOG](#)
- RPPmsg-Lite [CHANGELOG](#)
- MCMgr [CHANGELOG](#)
- Supported evaluation boards (multicore examples):
 - LPCXpresso55S69
 - FRDM-K32L3A6
 - MIMXRT1170-EVKB
 - MIMXRT1160-EVK
 - MIMXRT1180-EVK
 - MCX-N5XX-EVK
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - KW47-EVK
 - KW47-LOC
 - FRDM-MCXW72
 - MCX-W72-EVK
 - FRDM-IMXRT1186
- Supported evaluation boards (multiprocessor examples):
 - LPCXpresso55S36
 - FRDM-K22F
 - FRDM-K32L2B
 - MIMXRT685-EVK
 - MIMXRT1170-EVKB
 - MIMXRT1180
 - FRDM-MCXN236
 - FRDM-MCXC242
 - FRDM-MCXC444
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - FRDM-IMXRT1186

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: [Development tools](#)

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable			Location
Multicore SDK	location		<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation			<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component			<MCSDK_dir>/erpc/
Multicore Manager component			<MCSDK_dir>/mcmgr/
RPMsg-Lite			<MCSDK_dir>/rpmsg_lite/
Multicore demo applications			<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications			<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.

The following multicore demo applications are located together with other MCUXpresso SDK examples in the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_dsp
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.

The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in


the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

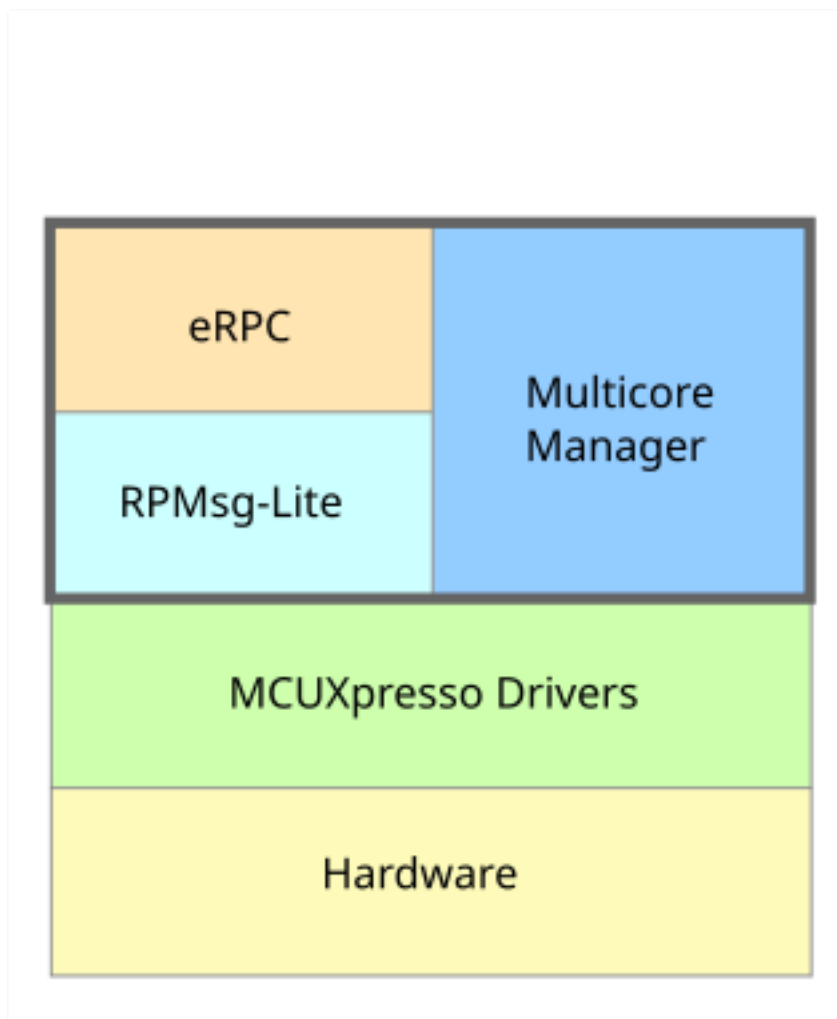


All the MCSDK-related files are located in `<MCUXpressoSDK_install_dir>/middleware/multicore` folder.

For supported toolchain versions, see the *Multicore SDK v25.12.00 Release Notes* (document MCS-DKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.


Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RPMsg-Lite):** Inter-Processor Communication library.

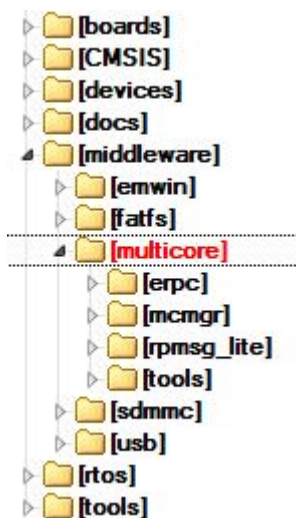

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TPC/IP, UART, and so on). The server unmarshals the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

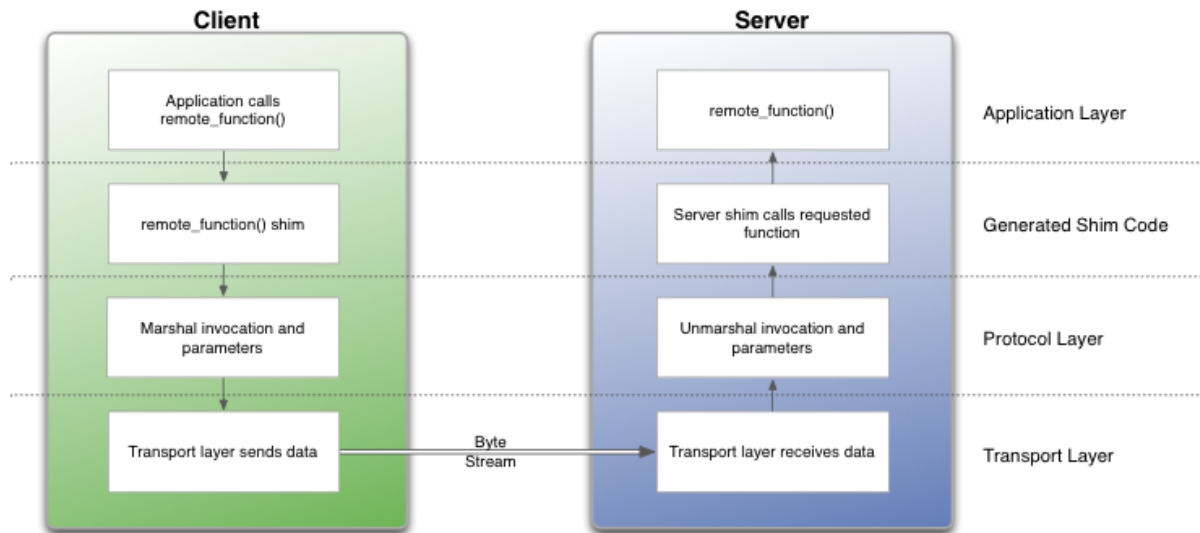

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc` folder. For detailed information about the eRPC, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` folder. For detailed information about the MCMGR library, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc` folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.

- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite` folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/doc` folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location		Folder
Multicore projects	example	<code><MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/</code>
Multiprocessor projects	example	<code><MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/</code>

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[25.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.2
 - RPMsg-Lite v5.3.0

[25.09.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0

- eRPC generator (erpcgen) v1.14.0
- Multicore Manager (MCMgr) v5.0.1
- RPSMsg-Lite v5.2.1

[25.06.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.0
 - RPSMsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.7
 - RPSMsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.6
 - RPSMsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.12.0
 - eRPC generator (erpcgen) v1.12.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.11.0
 - eRPC generator (erpcgen) v1.11.0
 - Multicore Manager (MCMgr) v4.1.4
 - RPSMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.1
 - eRPC generator (erpcgen) v1.8.1
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.0
 - eRPC generator (erpcgen) v1.8.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.4
 - eRPC generator (erpcgen) v1.7.4
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.3
 - eRPC generator (erpcgen) v1.7.3
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.2
 - eRPC generator (erpcgen) v1.7.2
 - Multicore Manager (MCMgr) v4.0.3
 - RPSMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.1
 - eRPC generator (erpcgen) v1.7.1
 - Multicore Manager (MCMgr) v4.0.2
 - RPSMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.0
 - eRPC generator (erpcgen) v1.7.0
 - Multicore Manager (MCMgr) v4.0.1
 - RPSMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.6.0
 - eRPC generator (erpcgen) v1.6.0
 - Multicore Manager (MCMgr) v4.0.0
 - RPSMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.5.0
 - eRPC generator (erpcgen) v1.5.0
 - Multicore Manager (MCMgr) v3.0.0
 - RPMMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.4.0
 - eRPC generator (erpcgen) v1.4.0
 - Multicore Manager (MCMgr) v2.0.1
 - RPMMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.3.0
 - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.2.0
 - eRPC generator (erpcgen) v1.2.0
 - Multicore Manager (MCMgr) v2.0.0
 - RPMMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.1.0
 - Multicore Manager (MCMgr) v1.1.0
 - Open-AMP / RPMMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.0.0
 - Multicore Manager (MCMgr) v1.0.0
 - Open-AMP / RPMMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components

RPMSG-Lite

MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [RPMSG-Lite - Documentation](#) to review details on the contents in this sub-repo.

For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMsg) protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (<https://github.com/OpenAMP/open-amp>), the RPMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMsg-Lite.

The RPMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For overview please read RPMSG-Lite VirtIO Overview.

For RPMSG-Lite Design Considerations please read RPMSG-Lite Design Considerations.

Motivation to create RPMsg-Lite There are multiple reasons why RPMsg-Lite was developed. One reason is the need for the small footprint of the RPMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPMsg implementation.

RPMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.


Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPMsg implementation and new RPMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPMsg / Release (reference)	5547	456 + dynamic
RPMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%

Implementation The implementation of RPMsg-Lite can be divided into three sub-components, from which two are optional. The core component is situated in `rpmsg_lite.c`. Two optional components are used to implement a blocking receive API (in `rpmsg_queue.c`) and dynamic “named” endpoint creation and deletion announcement service (in `rpmsg_ns.c`).


The actual “media access” layer is implemented in `virtqueue.c`, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as `vring` or `virtqueue`.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in `rpmsg_env_bm.c`, and the FreeRTOS environment is implemented in `rpmsg_env_freertos.c` etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in `rpmsg_platform.c` and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

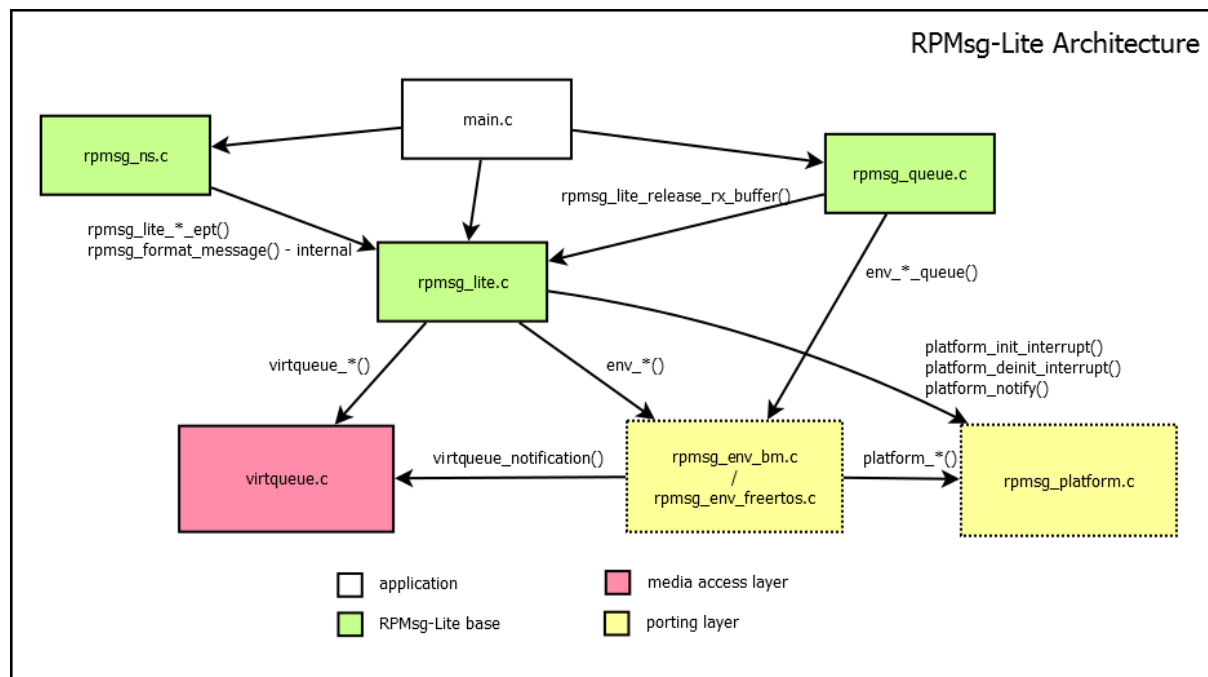

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function.

However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

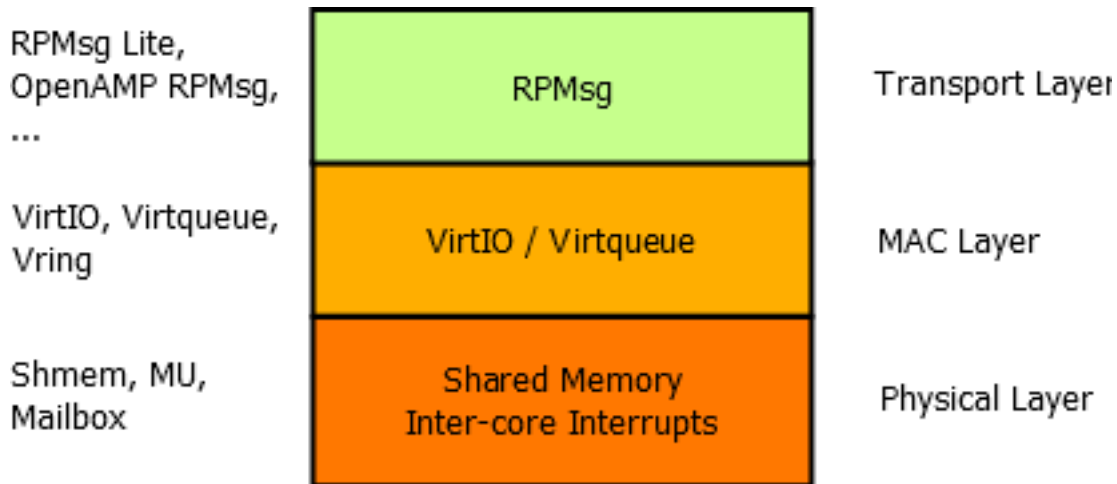

Queue sub-component (optional) This subcomponent is optional and requires implementation of the `env_*_queue()` functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the `/rpmmsg_lite/lib/include` directory to the include path and in the application, include either the `rpmmsg_lite.h` header file, or optionally also include the `rpmmsg_queue.h` and/or `rpmmsg_ns.h` files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, `rpmmsg_env_myrtos.c`) and to include it in the project build.

The initialization of the stack is done by calling the `rpmmsg_lite_master_init()` on the master side and the `rpmmsg_lite_remote_init()` on the remote side. This initialization function must be called prior to any RPMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the `rpmmsg_lite_create_ept()` function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the `RL_USE_STATIC_API` option is set to 1. If not, the stack internally calls `env_alloc()` to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the `rpmmsg_queue_create()` function must be called before calling `rpmmsg_lite_create_ept()`. The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to `rpmmsg_queue_rx_cb()`. Then, it is possible to use `rpmmsg_queue_receive()` function to listen on a queue object for incoming messages. The `rpmmsg_lite_send()` function is used to send messages to the other side.

The RPMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.


no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the `rpmmsg_lite_alloc_tx_buffer()` function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the `rpmmsg_lite_alloc_tx_buffer()` size output parameter).
- Call the `rpmmsg_lite_send_nocopy()` function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the `rpmmsg_lite_send_nocopy()` function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the `rpmmsg_queue_rcv_nocopy()` function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the `rpmmsg_queue_nocopy_free()` function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMsg-Lite objects he has created in case of deinitialization. In order to do this, the function `rpmmsg_queue_destroy()` is used to destroy a queue, `rpmmsg_lite_destroy_ept()` is used to destroy an endpoint and finally, `rpmmsg_lite_deinit()` is used to deinitialize the RPMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMsg-Lite does not check this internally, since its main aim is to be lightweight.

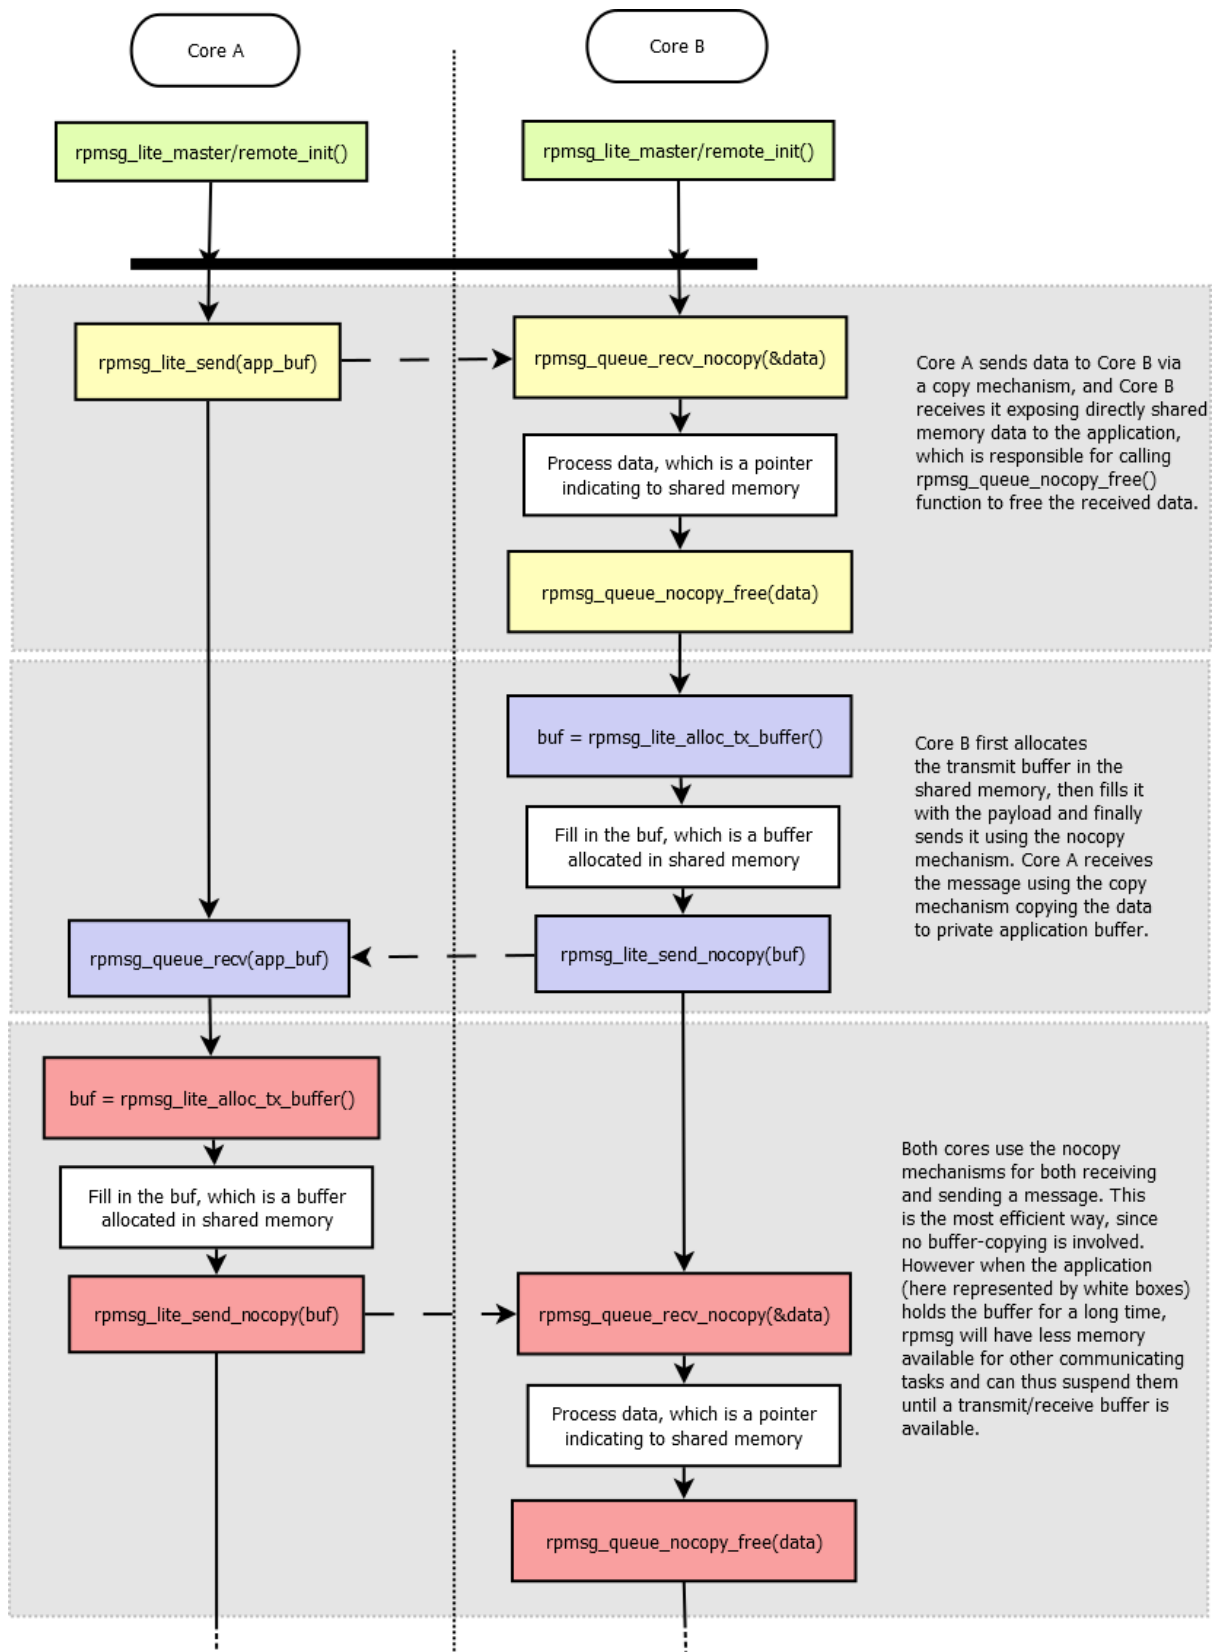

Examples RPMsg_Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages. To get the board list with multicore support (RPMsg_Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

`<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples` for RPMsg_Lite multicore examples with 'rpmmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMsg_Lite multicore examples is using the [mcuxsdk-manifests](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in [readme section](#). Once done the armgcc rpmmsg_lite examples can be found in

`mcuxsdk/examples/_<board_name>/multicore_examples`

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMsg_Lite examples use the 'rpmmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in `lib/rpmmsg_lite/porting/environment` folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- `rpmmsg_env_bm.c`
- `rpmmsg_env_freertos.c`
- `rpmmsg_env_xos.c`
- `rpmmsg_env_threadx.c`

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in linker file is also a good practise, it is recommended to use linker files from MCUXpressoSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMsg-Lite can be configured at the compile time. The default configuration is defined in the `rpmmsg_default_config.h` header file. This configuration can be customized by the user by including `rpmmsg_config.h` file with custom settings. The following table summarizes all possible RPMsg-Lite configuration options.

Config- uration option	De- fault value	Usage
RL_MS_PE (1)		Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFFE (496)		Size of the buffer payload, it must be more than 1 byte, and has to be word align (including rpmsg header size 16 bytes), if not it will be aligned up
RL_BUFFE (2)		Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H (1)		Zero-copy API functions enabled/disabled.
RL_USE_S' (0)		Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D (0)		Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF (0)		Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M (0)		When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E (0)		When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU (0)		When enabled buffer pointers passed to <code>rpmsg_lite_send_nocopy()</code> and <code>rpmsg_lite_release_rx_buffer()</code> functions (enabled by <code>RL_API_HAS_ZEROCOPY</code> config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLOV (0)		When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLOV (0)		It allows to define custom shared memory configuration and replacing the shared memory related global settings from <code>rpmsg_config.h</code> . This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg_Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSER	see rpmsg	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the [llvm](#) project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the `.clang-format` file, placed in a root of the rpmsg-lite directory where Python script `run_clang_format.py` can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, **Lockless Shared Memory Based Multicore Communication Protocol**
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMSG-Lite All notable changes to this project will be documented in this file. The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[v5.3.0]

Added

- RT700 porting layer added support to send rpmsg messages between CM33_0 <-> Hifi1 and CM33_1 <-> Hifi4 cores.
- Add new platform macro `RL_PLATFORM_MAX_ISR_COUNT` this will set number of IRQ count per platform. This macro is then used in environment layers to set `isr_table` size where irq handles are registered. It size should match the bit length of `VQ_ID` so all combinations can fit into table.
- Unit tests updated to improve code coverage, new unit tests added covering static allocations in rtos environment layers.

Fixed

- `virtio.h` removed `typedef uint8_t boolean` and in its place use standard C99 `bool` type to avoid potential type conflicts.
- `env_acquire_sync_lock()` and `env_release_sync_lock()` synchronization primitives removed
- Kconfig consolidation, when `RL_ALLOW_CUSTOM_SHMEM_CONFIG` enabled the `platform_get_custom_shmem_config()` function needs to be implemented in platform layer to provide custom shared memory configuration for RPMsg-Lite instance.

v5.2.1

Added

- Doc added RPMSG-Lite VirtIO Overview
- Doc added RPMSG-Lite Design Considerations
- Added `frdmimxrt1186` unit testing

Changed

- Remove limitation that `RL_BUFFER_SIZE` needs to be power of 2. It just has to be more than 16 bytes, e.g. 16 bytes of rpmsg header and payload size at least 1 byte and word aligned, if not it will be aligned up.

Fixed

- Fixed CERT-C INT31-C violation in `platform_notify` function in `rpmsg_platform.c` for `imxrt700_m33`, `imxrt700_hifi4`, `imxrt700_hifi1` platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro `RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE` to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change `rpmsg_platform.c` to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed `env_wait_for_link_up` function to handle timeout in link state checks for baremetal and qnx environment, `RL_BLOCK` mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure `RL_PLATFORM_HIGHEST_LINK_ID` remains within safe range for 16-bit casting in virtqueue ID creation.
- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in `shmem_length - (uint32_t)RL_VRING_OVERHEAD` and `shmem_length - 2U * shmem_config.vring_size` expressions.
- Fixed CERT INT31-C violation in `platform_interrupt_disable()` and similar functions by replacing unsafe cast from `uint32_t` to `int32_t` with a return of 0 constant.
- Fixed unsigned integer underflow in `rpmsg_lite_alloc_tx_buffer()` where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in `rpmsg_lite.c` where `size` parameter was cast from `uint32_t` to `uint16_t` without proper validation.
 - Applied consistent masking approach to both `size` and `flags` parameters: `(uint16_t)(value & 0xFFFFU)`.
 - This fix prevents potential data loss when `size` values exceed 65535.
- Fixed CERT INT31-C violation in `env_memset` functions by explicitly converting `int32_t` values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard `memset()` function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
 - `rpmsg_env_freertos.c`: Added validation before converting `int32_t` to `UBaseType_t`.
 - `rpmsg_env_qnx.c`: Fixed format string and added validation before assigning to `mqstat` fields.
 - `rpmsg_env_threadx.c`: Added validation to prevent integer overflow and negative values.
 - `rpmsg_env_xos.c`: Added range checking before casting to `uint16_t`.
 - `rpmsg_env_zephyr.c`: Added validation before passing values to `k_msgq_init`.
- Fixed a CERT INT31-C compliance issue in `env_get_current_queue_size()` function where an unsigned queue count was cast to a signed `int32_t` without proper validation, which could lead to lost or misinterpreted data if queue size exceeded `INT32_MAX`.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where `memcmp()` return value (signed int) was compared with unsigned constant without proper type handling.

- Fixed CERT INT31-C violation in `rpmsg_platform.c` where casting from `uint32_t` to `uint16_t` could potentially result in data loss. Changed length variable type from `uint16_t` to `uint32_t` to properly handle memory address differences without truncation.
- Fixed potential integer overflow in `env_sleep_msec()` function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on `imx943` platform.
- Added `RL_MAX_BUFFER_COUNT` (32768U) and `RL_MAX_VRING_ALIGN` (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in `vring_need_event()`, added cast to `uint16_t` for each operand.

v5.1.4 - 27-Mar-2025

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025

Added

- Memory cache management of shared memory. Enable with `#define RL_USE_DCACHE (1)` in `rpmsg_config.h` in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for `imx95`, `imxrt700`, `mcmxw71x`, `mcmxw72x`, `kw47b42` added.

v5.1.2 - 08-Jul-2024

Changed

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024

Added

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023**Added**

- RPMsg-Lite: Added aarch64 support.

Changed

- RPMsg-Lite: Increased the queue size to (2 * RL_BUFFER_COUNT) to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023**Added**

- Timeout parameter added to `rpmmsg_lite_wait_for_link_up` API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- VRING_SIZE is set based on number of used buffers now (as calculated in `vring_init`) - updated for all platforms that are not communicating to Linux rpmmsg counterpart.

Fixed

- Fixed wrong RL_VRING_OVERHEAD macro comment in platform.h files
- Misra corrections.

v4.0.0 - 20-Jun-2022**Added**

- Added support for custom shared memory arrangement per the RPMsg_Lite instance.
- Introduced new `rpmmsg_lite_wait_for_link_up()` API function - this allows to avoid using busy loops in rtos environments, GitHub PR [#21](#).

Changed

- Adjusted `rpmmsg_lite_is_link_up()` to return RL_TRUE/RL_FALSE.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR [#14](#).
- Aligned rpmsg_env_xos.c and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR [#19](#), [#20](#).

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the rpmsg_lite_get_endpoint_from_addr function.

Changed

- Updated RL_BUFFER_COUNT documentation (issue [#10](#)).
- Updated imxrt600_hifi4 platform layer.

v3.1.1 - 15-Jan-2021

Added

- Introduced RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in `rpmsg_lite_rx_callback()` for QNX env.
- Correction of `rpmsg_lite_instance` structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019**Added**

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019**Added**

- Added configuration macro `RL_DEBUG_CHECK_BUFFERS`.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the `RL_USE_ENVIRONMENT_CONTEXT` configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017**Added**

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremetal and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : mcuxsdk-middleware-mcmgr (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on mcux-sdk-middleware-mcmgr component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [Multicore Manager - Documentation](#) to review details on the contents in this sub-repo.


For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` directory.

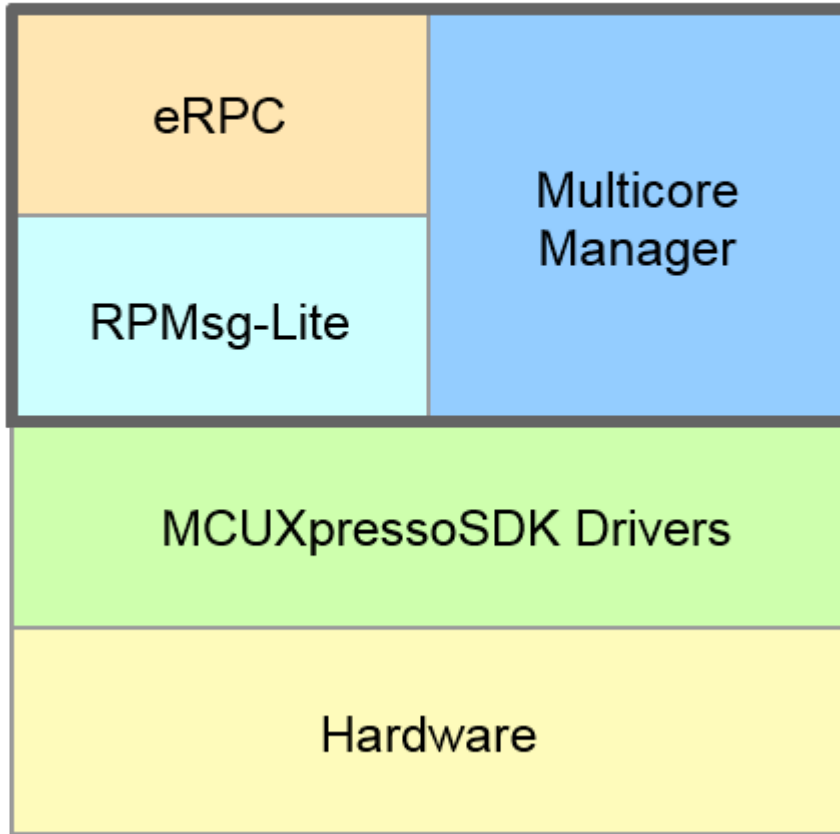

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```
#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
}
```

(continues on next page)

(continued from previous page)

```

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,
↳ starting synchronously. */
MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
.
.
.
/* Stop secondary core execution. */
MCMGR_StopCore(kMCMGR_Core1);
}

```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

It could also happen that the secondary core application stops running correctly and the primary core application does not know about that situation. Therefore, it is beneficial to implement a mechanism for core health monitoring. The *test_heartbeat* unit test can serve as an example how to ensure that: secondary core could periodically send heartbeat signals to the primary core using MCMGR_TriggerEvent() API to indicate that it is alive and functioning properly.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. mcmgr_event_type_t enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()
↳ called on the secondary core side */
void RPMsgRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
    uint16_t RPMsgRemoteReadyEventData[NUMBER_OF_CORES] = {0};

    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Register the application event before starting the secondary core */
    MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RPMsgRemoteReadyEventHandler, (void
↳ *)RPMsgRemoteReadyEventData);

```

(continues on next page)

(continued from previous page)

```

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpmsg_lite_base address
↳as startup data, starting synchronously. */
MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpmsg_lite_
↳base, kMCMGR_Start_Synchronous);

/* Wait until the secondary core application signals the rpmsg remote has been initialized and is ready to
↳communicate. */
while(APP_RPMSG_READY_EVENT_DATA != RPSMsgRemoteReadyEventData[APP_SECONDARY_
↳CORE]) {};
.
.
.
}

```

Code for the secondary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)


void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
    .
    .
    .

    /* Signal the to other core that we are ready by triggering the event and passing the APP_RPMSG_
↳READY_EVENT_DATA */
    MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPMSG_
↳READY_EVENT_DATA);
    .
    .
    .
}

```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

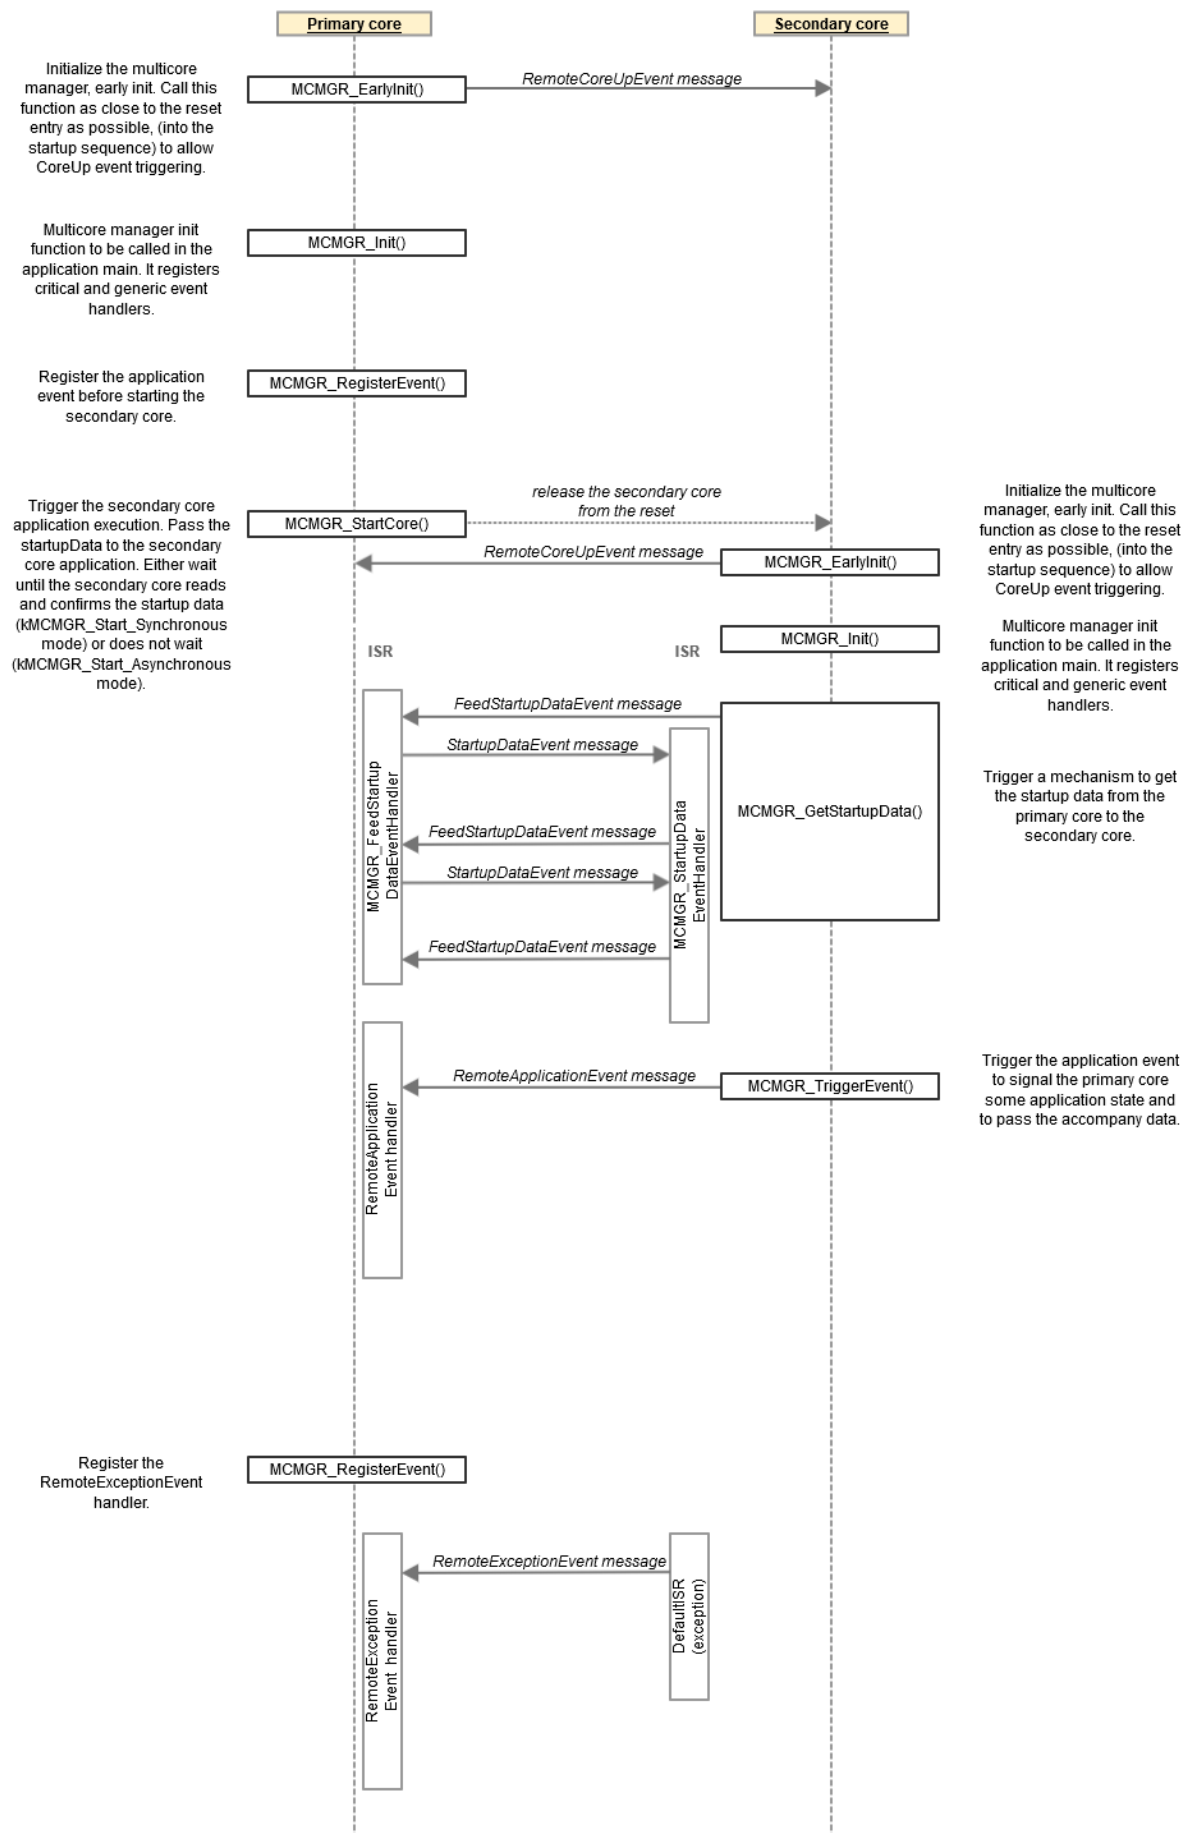

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[v5.0.2]

Added

- Added gcov options and configs to support mcmgr code coverage
- Added new test_weak_mu_isr testcase for devices with MU peripheral
- Added new test_heartbeat testcase showing heartbeat mechanism between primary and secondary cores using the MCMGR

v5.0.1

Added

- Added frdmimxrt1186 unit testing

Changed

- [KW43] Rename core#1 reset control register

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.
- Fix path to mcmgr headers directory in doxyfile

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more then two cores. Breaking API change by adding parameter coreNum specifying core number in functions bellow.
 - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

When registering the event with function `MCMGR_RegisterEvent()` user now needs to provide `callbackData` pointer to array of elements per every core in system (see README.md for example). In case of systems with only two cores the `coreNum` in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: Porting-GuideTo_v5.md

- Updated all porting files to support new MCMGR API.
- Added new platform specific include file `mcmgr_platform.h`. It will contain common platform specific macros that can be then used in `mcmgr` and application. e.g. platform core count `MCMGR_CORECOUNT` 4.
- Move all header files to new `inc` directory.
- Added new platform-specific include files `inc/platform/<platform_name>/mcmgr_platform.h`.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- `mcmgr_stop_core_internal()` function now returns `kStatus_MCMGR_NotImplemented` status code instead of `kStatus_MCMGR_Success` when device does not support stop of secondary core. Ports affected: kw32w1, kw45b41, kw45b42, mcxw716, mcxw727.

[v4.1.6]

Added

- Multicore Manager moved to standalone repository.
- Add porting layers for imxrt700, mcmxw727, kw47b42.
- New `MCMGR_ProcessDeferredRxIsr()` API added.

[v4.1.5]

Added

- Add notification into `MCMGR_EarlyInit` and `mcmgr_early_init_internal` functions to avoid using uninitialized data in their implementations.

[v4.1.4]

Fixed

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]**Added**

- Add porting layers for imxrt1180.

Fixed

- mu_isr() updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- mcmgr_mu_internal.c code adaptation to new supported SoCs.

[v4.1.2]**Fixed**

- Update mcmgr_stop_core_internal() implementations to set core state to kMCMGR_ResetCoreState.

[v4.1.0]**Fixed**

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]**Fixed**

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]**Fixed**

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]**Fixed**

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]

Added

- Support for lpcxpresso54114 board.

[v1.1.0]

Fixed

- Ported to KSDK 2.0.0.

[v1.0.0]

Added

- Initial release.

eRPC

MCUXpresso SDK : mcuxsdk-middleware-erpc

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [eRPC - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

eRPC

- [MCUXpresso SDK : mcuxsdk-middleware-erpc](#)

- [Overview](#)
- [Documentation](#)
- [Setup](#)
- [Contribution](#)

- [eRPC](#)

- [About](#)
- [Releases](#)
 - * [Edge releases](#)
- [Documentation](#)
- [Examples](#)
- [References](#)
- [Directories](#)
- [Building and installing](#)
 - * [Requirements](#)
 - [Windows](#)
 - [Mac OS X](#)
 - * [Building](#)
 - [CMake and KConfig](#)
 - [Make](#)

** Installing for Python*

- *Known issues and limitations*
- *Code providing*

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent [Apache Thrift](#), eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called `erpcgen` is included. It accepts input IDL files, having an `.erpc` extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. `erpcgen` can generate either C/C++ or Python code.

Example `.erpc` file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* init eRPC client IO service */
    initIO_client(client_manager);

    // Now we can call the remote function to turn on the green LED.
    set_led(kGreen, true);

    /* deinit objects */
    deinitIO_client();
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
}
```

(continues on next page)

(continued from previous page)

```

    erpc_transport_tcp_deinit(transport);
}

void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

Server side usage:

```

// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, service);

    // Run the server.
    erpc_server_run();

    /* deinit objects */
    destroy_IO_service(service);
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

```

// Implement the remote function.
class IO : public IO_interface

```

(continues on next page)

(continued from previous page)

```
{
    /* eRPC call definition */
    void set_led(LEDName whichLed, bool onOrOff) override {
        // implementation goes here
    }
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    IO IOImpl;
    IO_service io(&IOImpl);

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, &io);

    /* poll for requests */
    erpc_status_t err = server.run();

    /* deinit objects */
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- [NXP RPMsg-Lite / RPMsg TTY](#)
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the [LICENSE file](#) for the full license text.

Releases [eRPC releases](#)

Edge releases Edge releases can be found on [eRPC CircleCI](#) webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation Documentation is in the [wiki](#) section.

[eRPC Infrastructure documentation](#)

Examples Example IDL is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

`<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples` for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples` for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the [mcux-sdk](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk repo in [readme Overview section](#). Once done the armgcc eRPC examples can be found in

`mcuxsdk/examples/<board_name>/multicore_examples` or in

`mcuxsdk/examples/<board_name>/multiprocessor_examples` folders.

You can use the `evkmimxrt1170` as the `board_name` for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- [erpc \(EmbeddedRPC\) getting started notes](#)
- [ERPC Linux Local Environment Construction and Use](#)
- [The New Wio Terminal eRPC Firmware](#)

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the `erpcgen` executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the `erpcgen` executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of erpcgen using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build erpcgen for OS X.

Requirements eRPC now support building **erpcgen**, **erpc_lib**, **tests** and **C examples** using CMake.

Requirements when using CMake:

- **CMake** (minimal version 3.20.0)
- Generator - **Make**, **Ninja**, ...
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Requirements when using Make:

- **Make**
- **C/C++ compiler - GCC, CLANG, ...**
- **Binson** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Windows Related steps to build **erpcgen** using **Visual Studio** are described in `erpcgen/VisualStudio_v14/readme_erpcgen.txt`.

To install MinGW, Bison, Flex locally on Windows:

```
./install_dependencies.ps1
* ^^^
#### Linux
^^^ bash
./install_dependencies.sh
```

Mandatory for case, when build for different architecture is needed

- gcc-multilib, g++-multilib

Mac OS X


```
./install_dependencies.sh
```

Building

CMake and KConfig eRPC use CMake and KConfig to configure and build eRPC related targets. KConfig can be edited by *prj.conf* or *menuconfig* when building.

Generate project, config and build. In *erpc/* execute:

```
cmake -B ./build # in erpc/build generate cmake project
cmake --build ./build --target menuconfig # Build menuconfig and configure erpcgen, erpc_lib, tests and
↳examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

****CMake will use the system's default compilers and generator**

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configure erpcgen, erpc_lib, tests and
↳examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

Make To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to `sudo` the `make install`.

By default this will install into `/usr/local`. If you want to install elsewhere, set the `PREFIX` environment variable. Example for installing into `/opt`:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- `erpc`: build the `liberpc.a` static library
- `erpcgen`: build the `erpcgen` tool
- `erpcsniffer`: build the sniffer tool
- `test`: build the unit tests under the *test* directory
- `all`: build all of the above
- `install`: install `liberpc.a`, `erpcgen`, and include files

eRPC code is validated with respect to the C++ 11 standard.

Installing for Python To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

Known issues and limitations

- Static allocations controlled by the `ERPC_ALLOCATION_POLICY` config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

Code providing Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

eRPC Getting Started

Overview This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4/iar`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

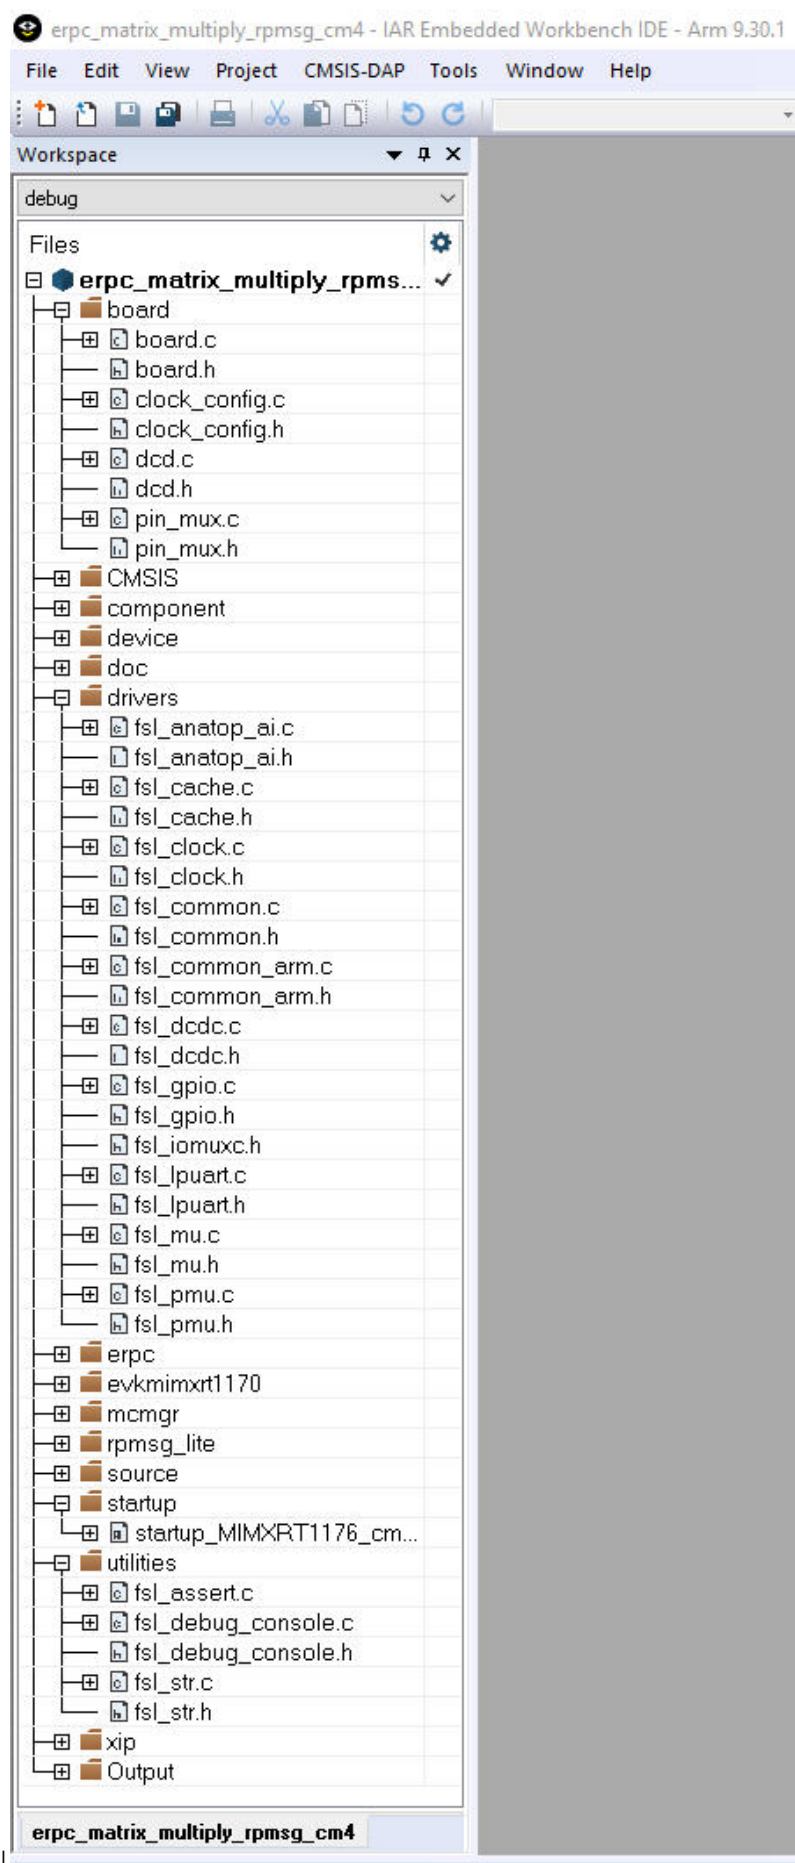

|


Parent topic: Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

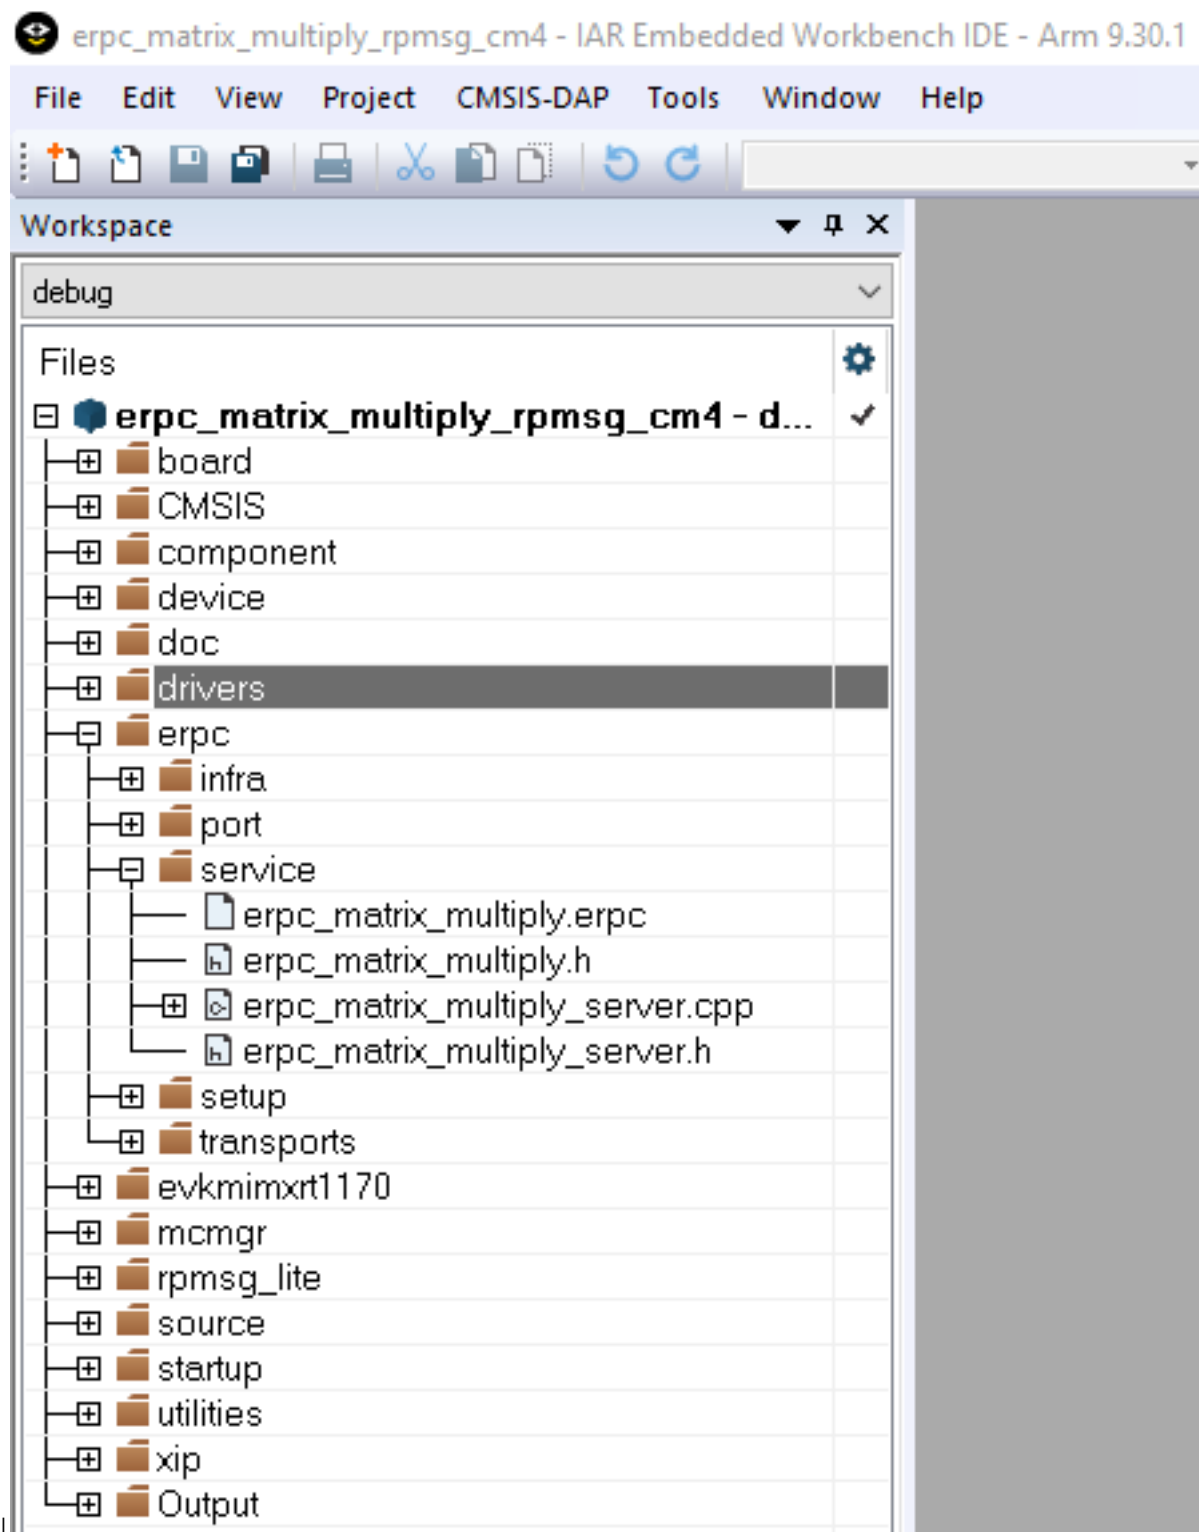


Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

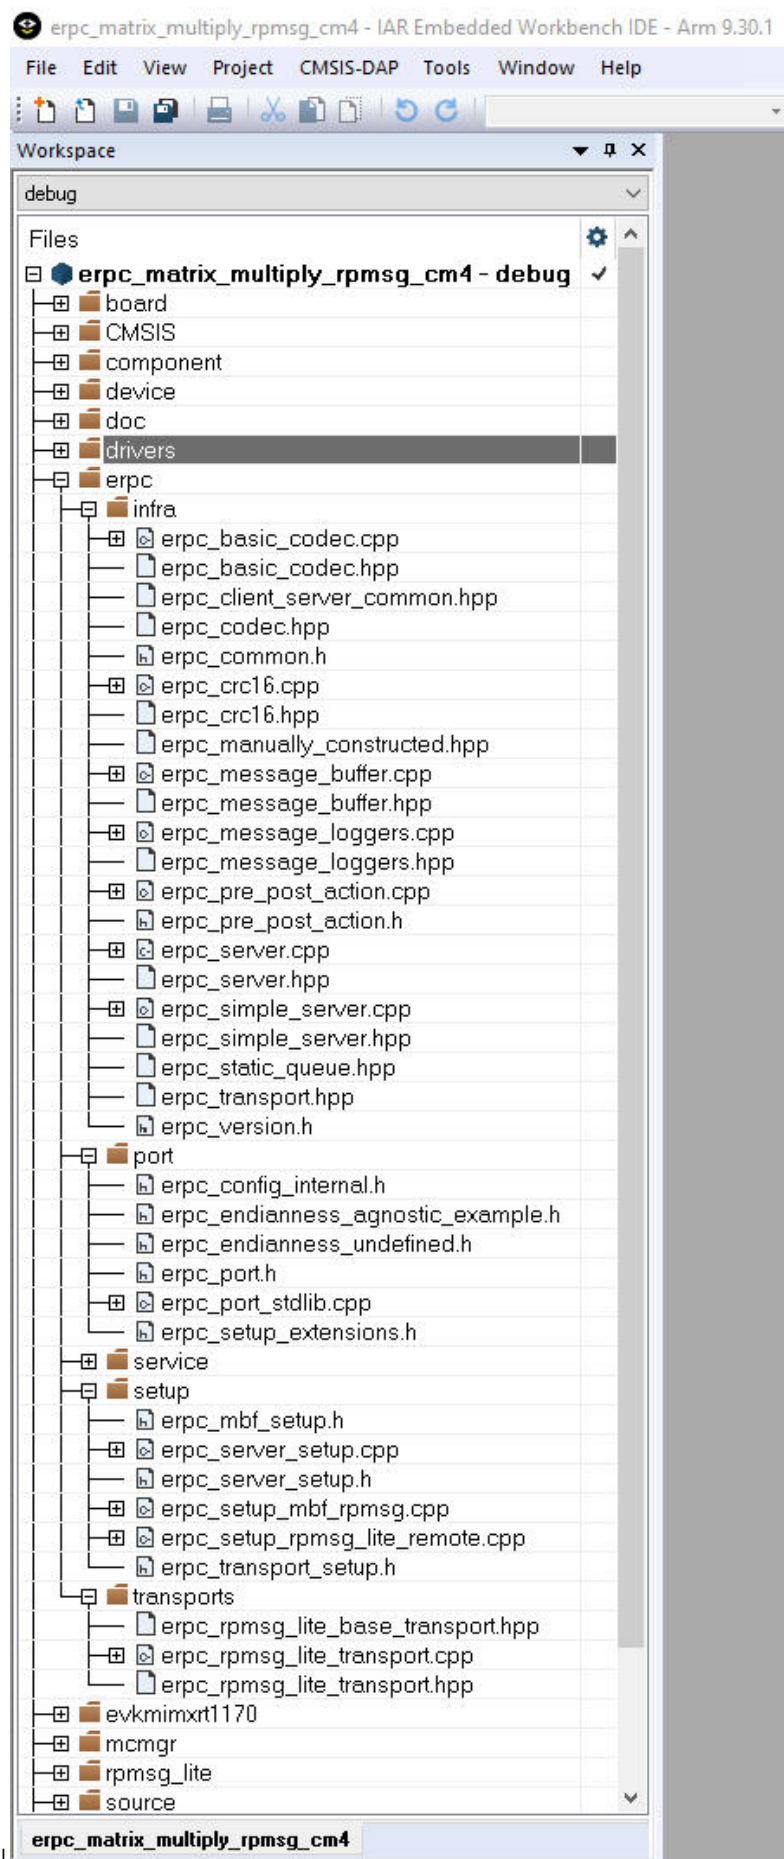

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

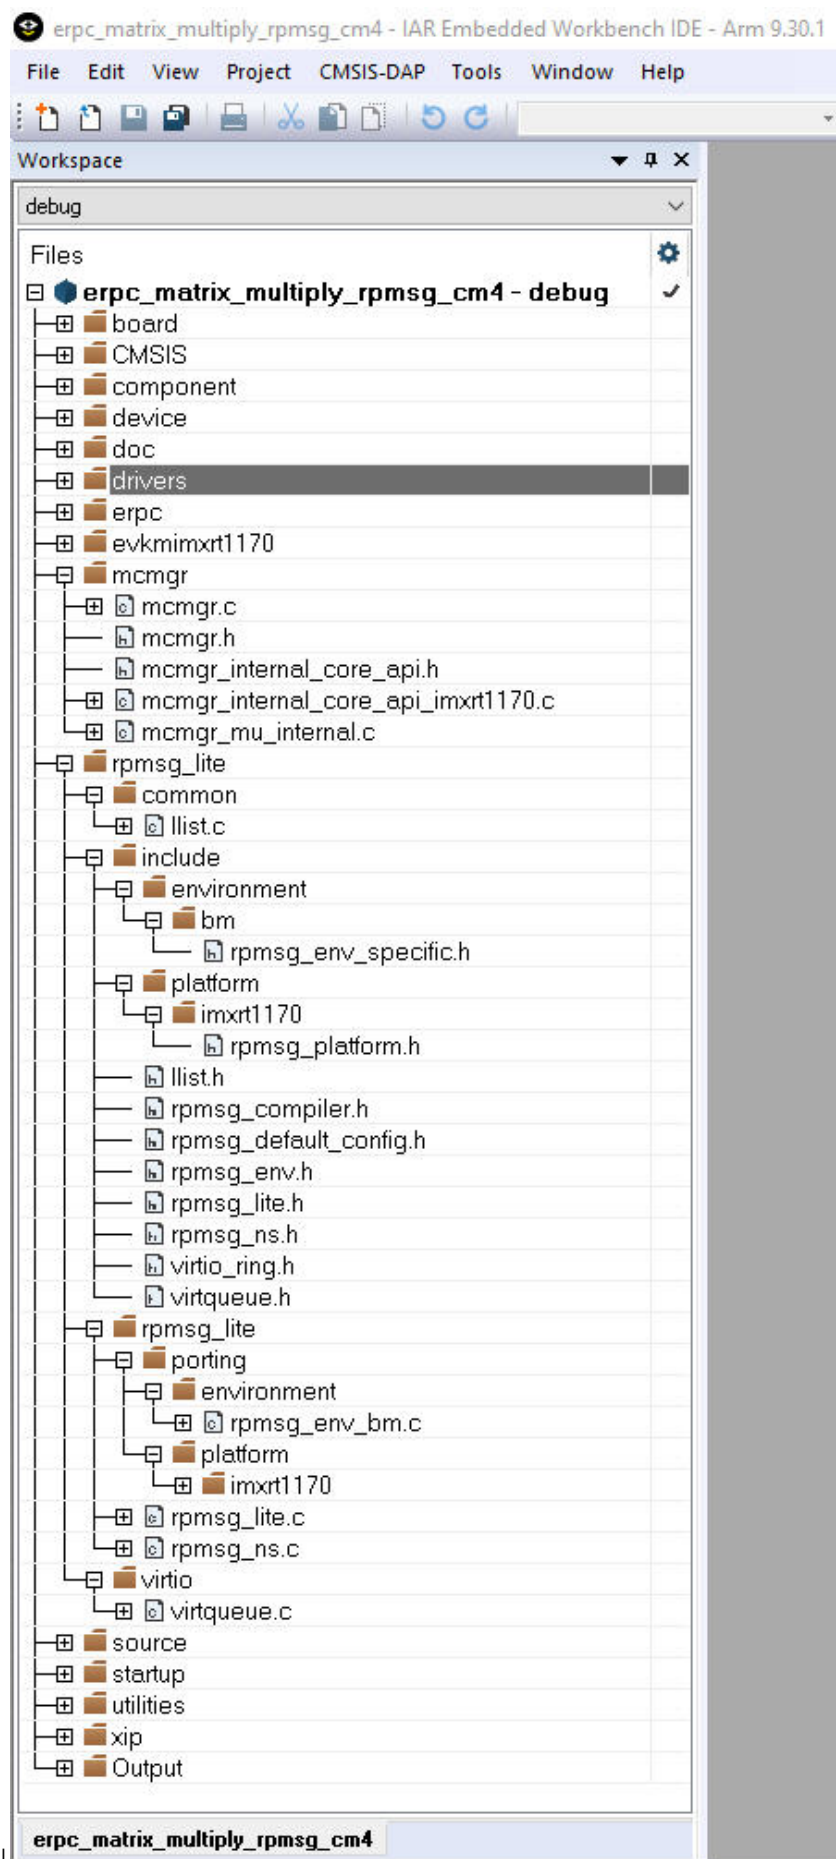

Parent topic:Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

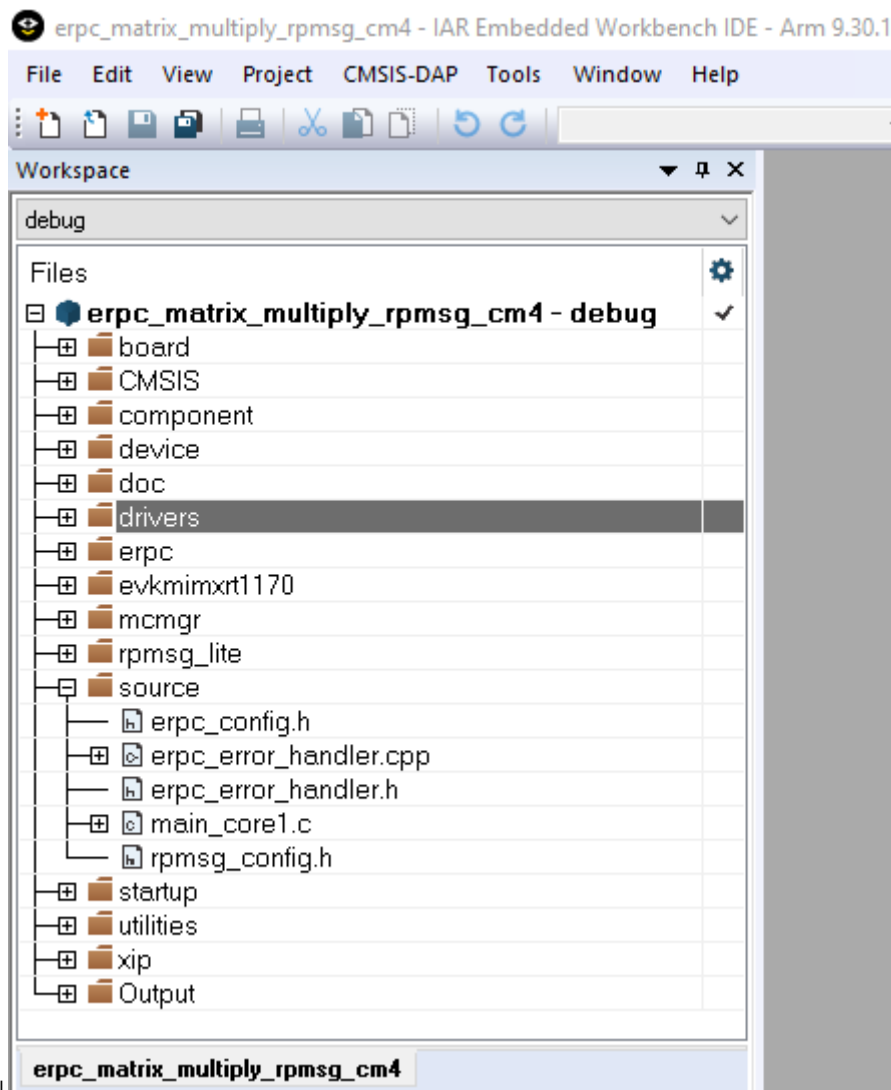

Parent topic:Multicore server application

Parent topic:[Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

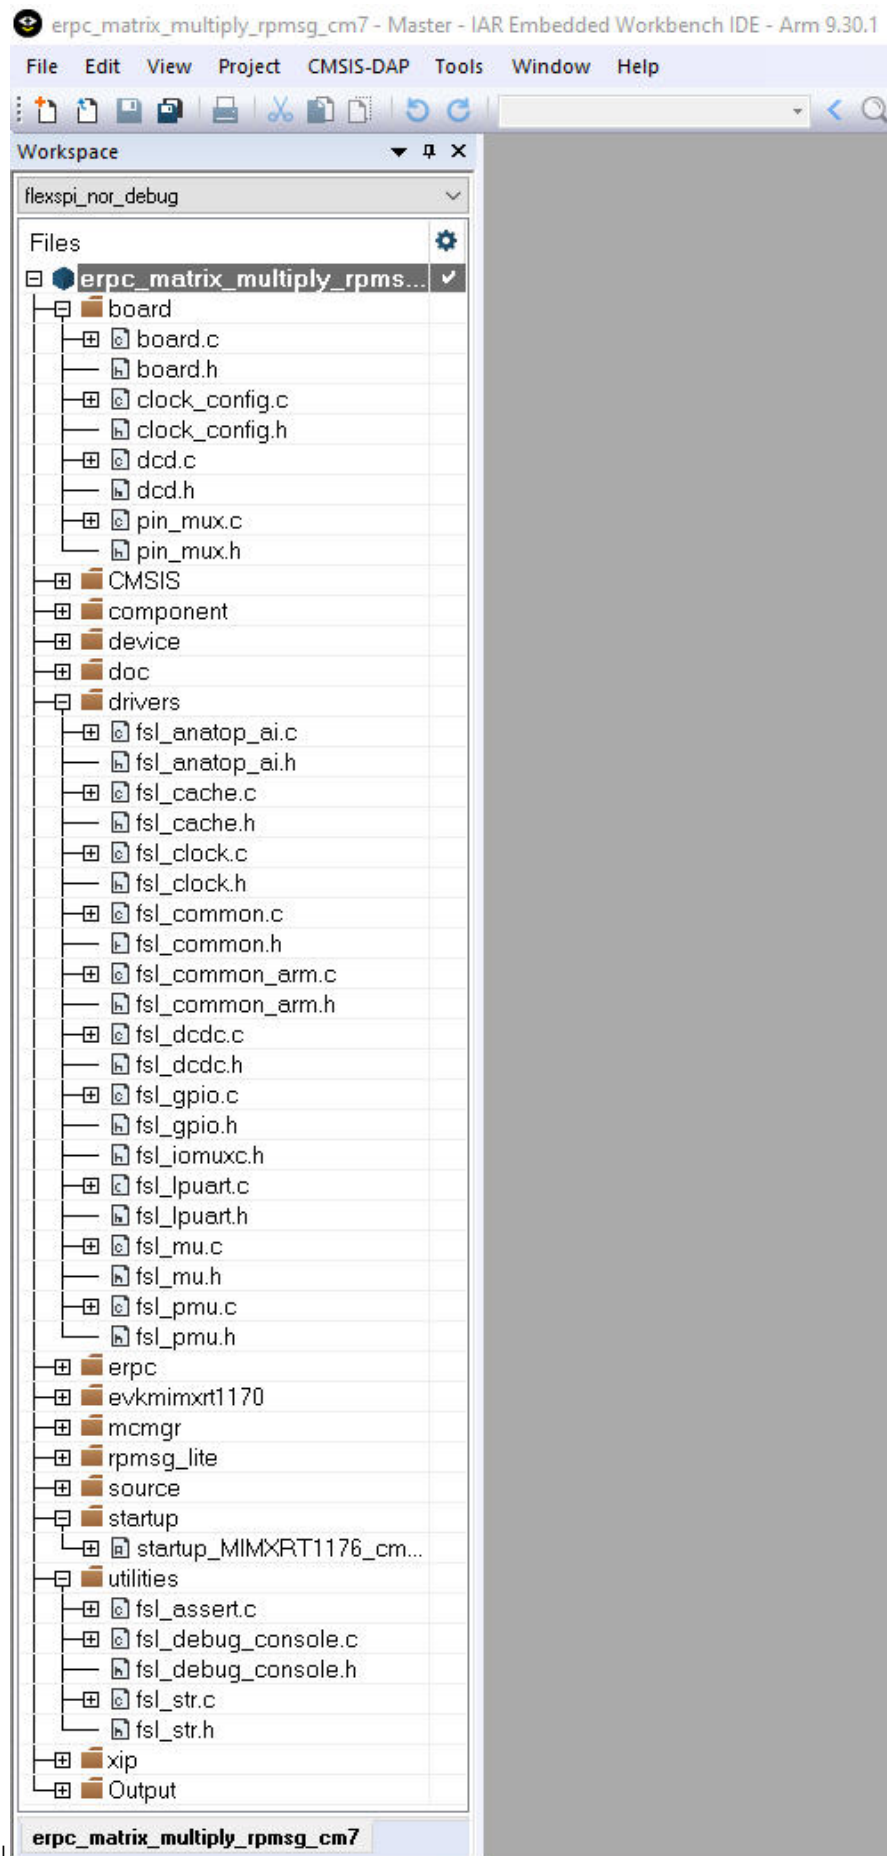


|

Parent topic:Multicore client application**Client-related generated files** The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the <MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/ folder.

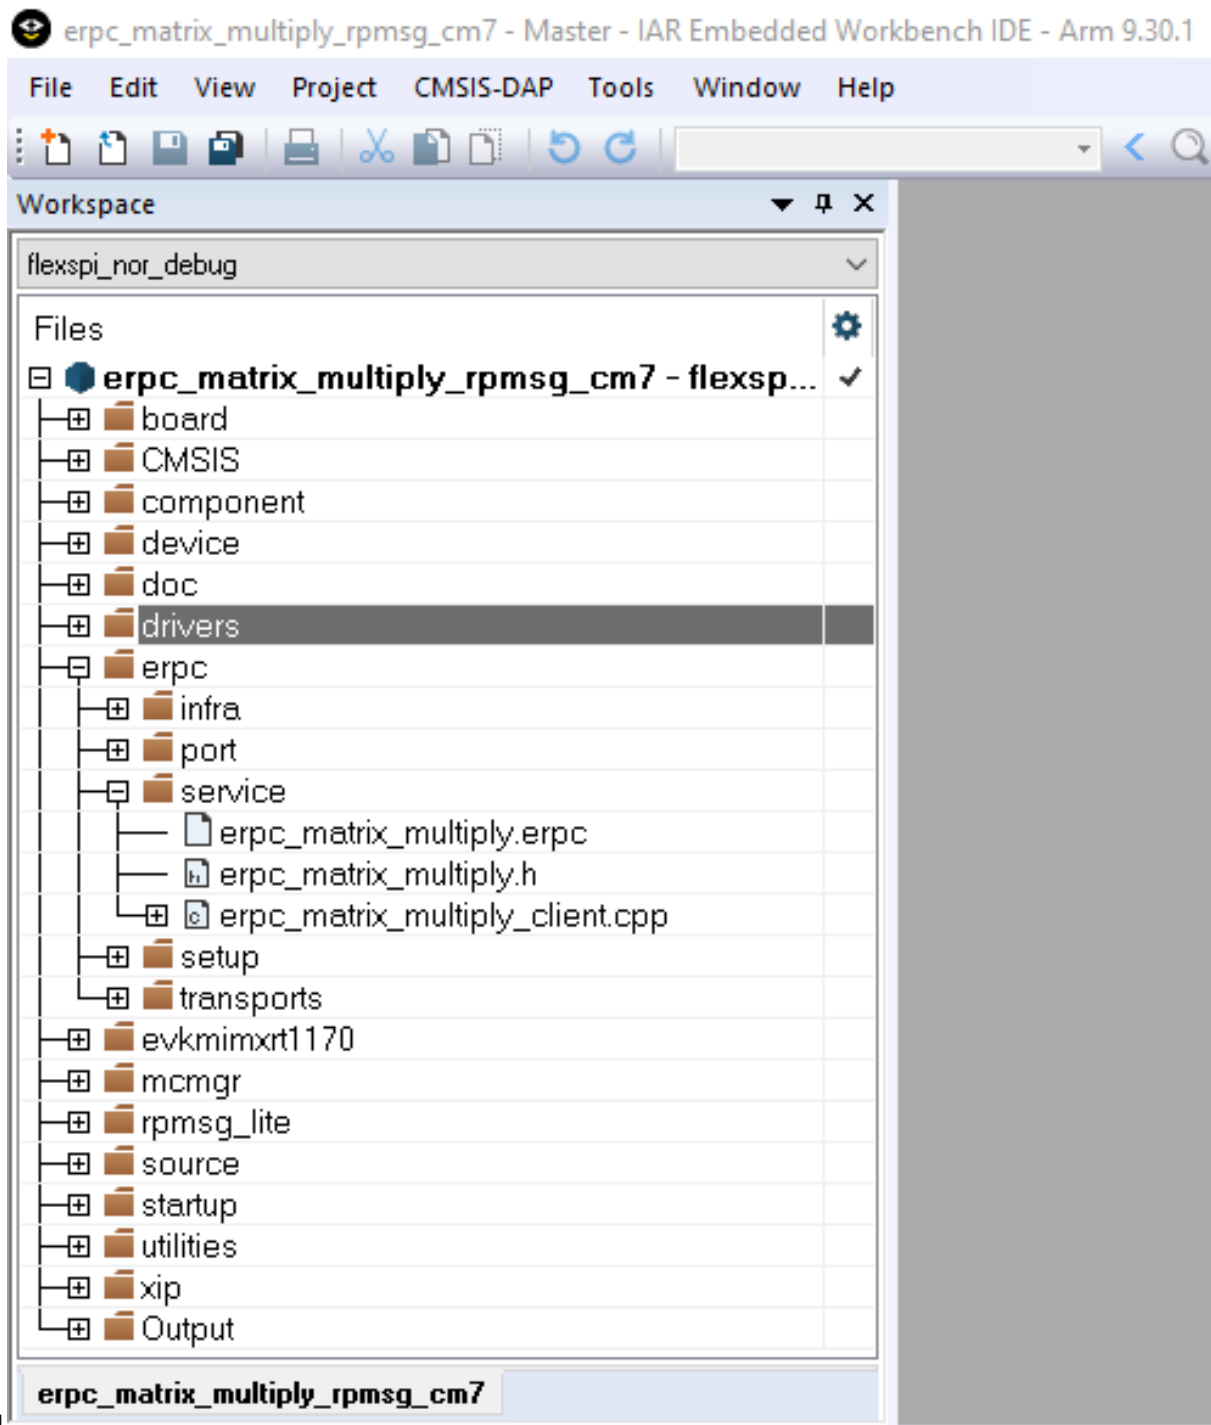

Parent topic:Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

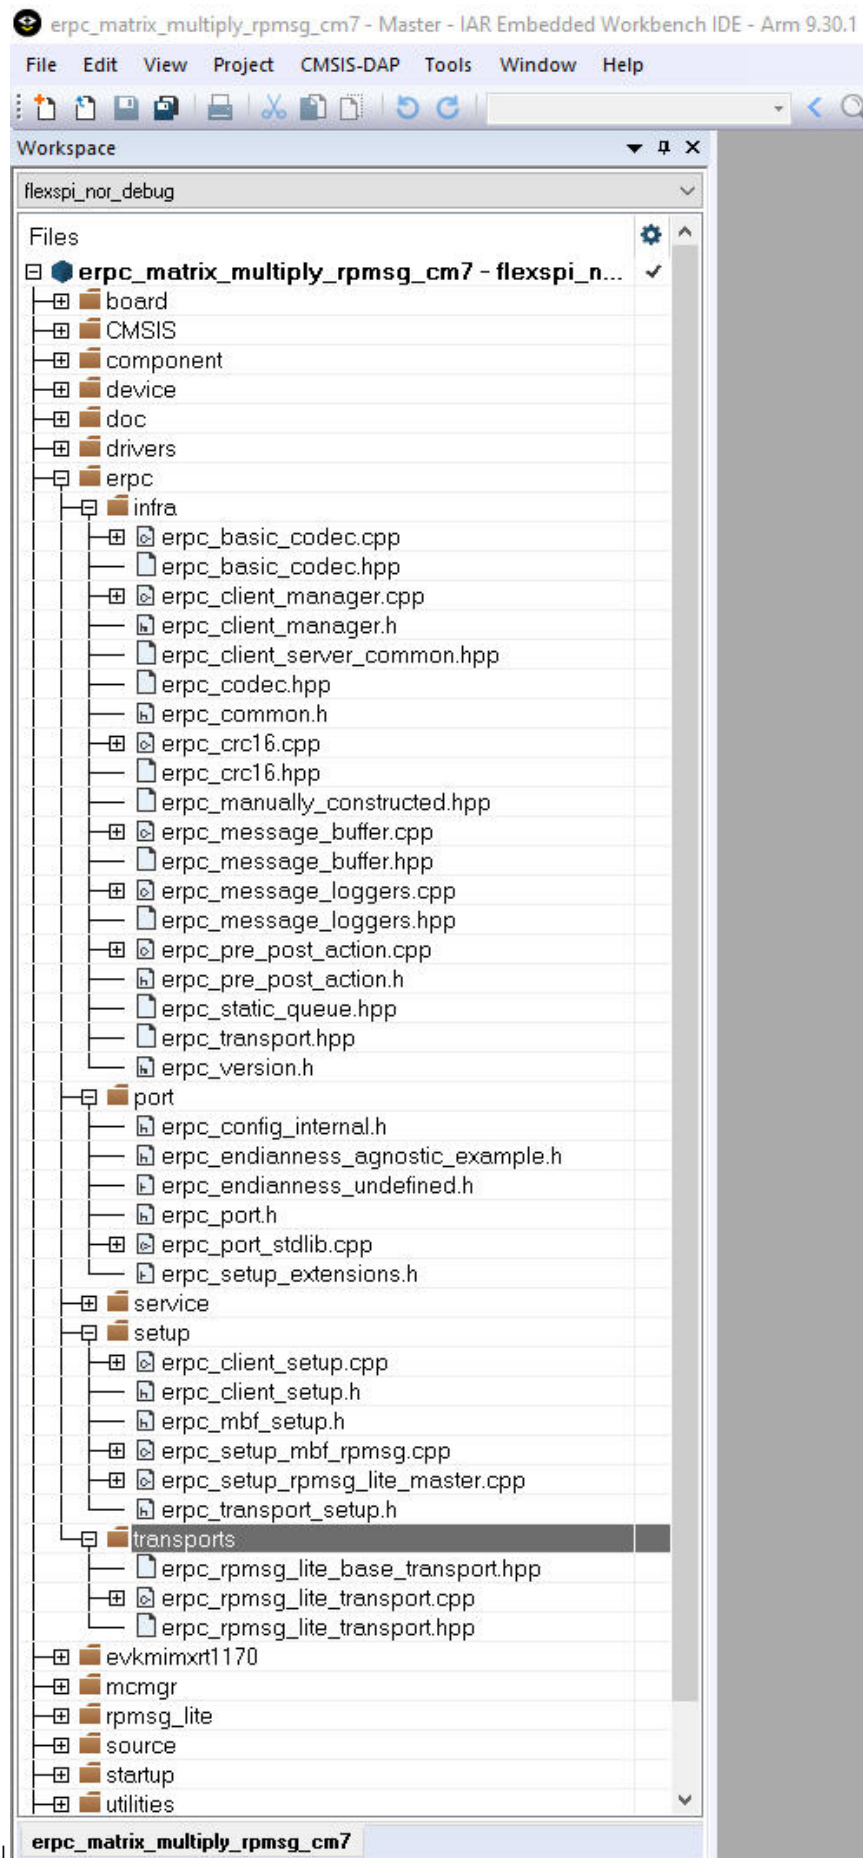

|


Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpsmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

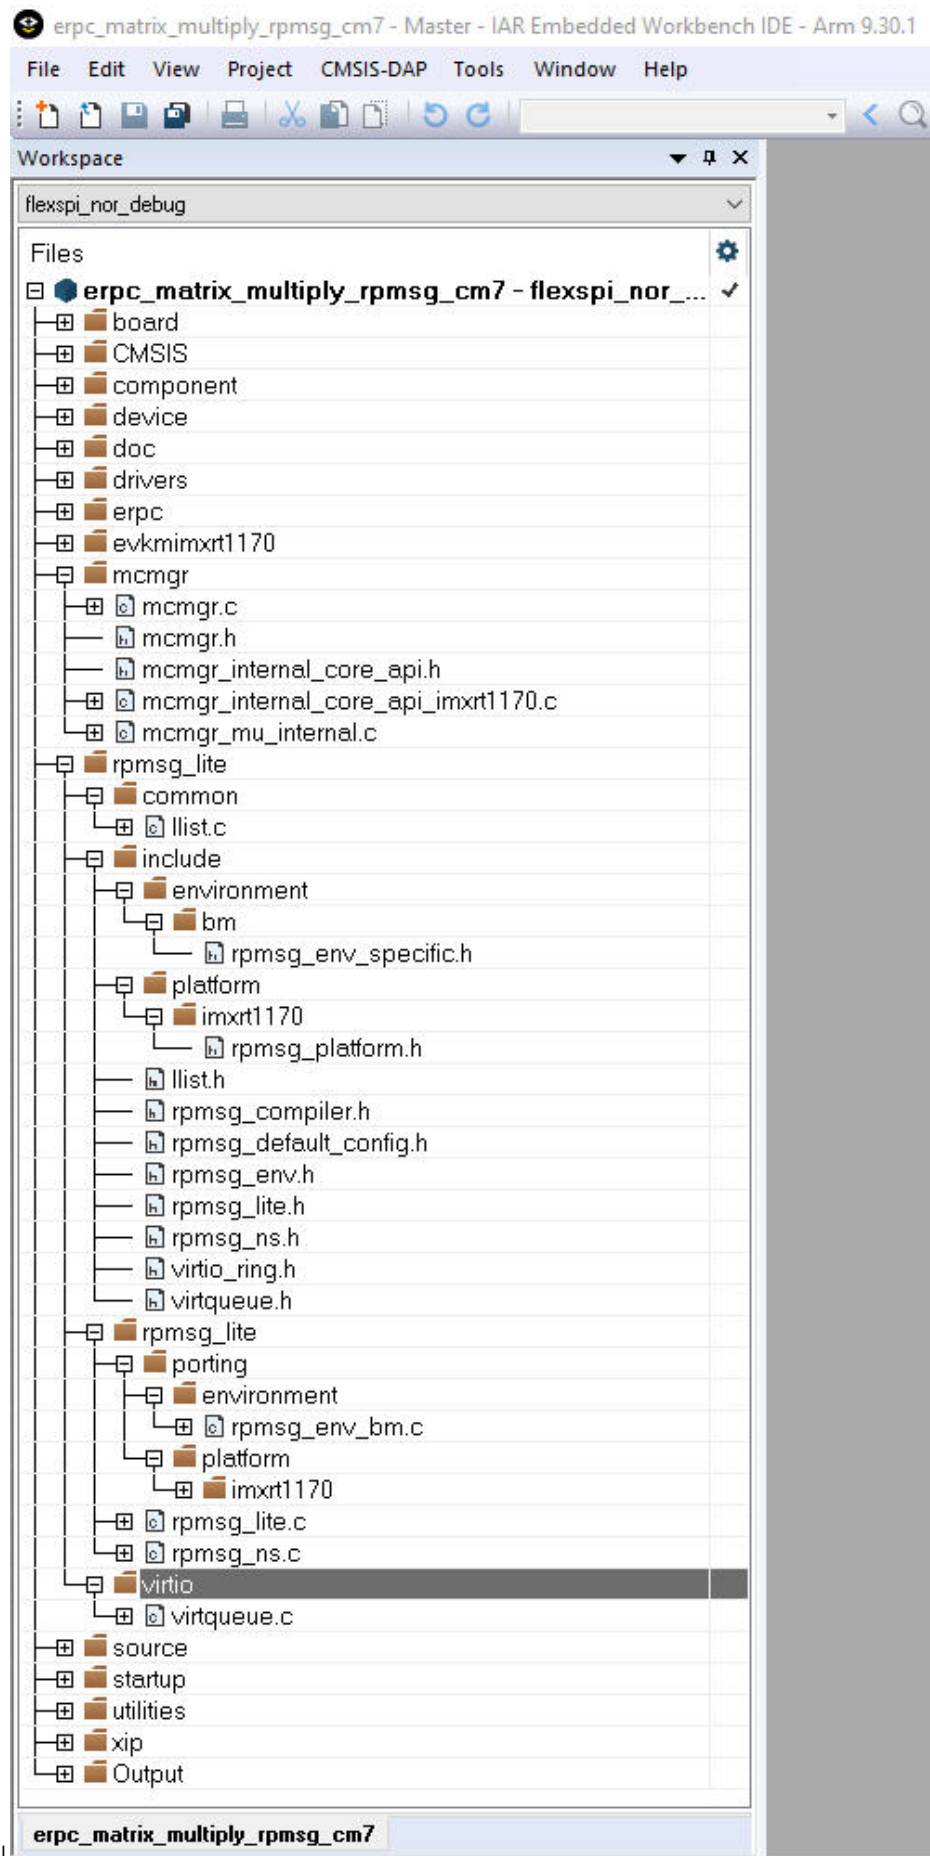

|

Parent topic: Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

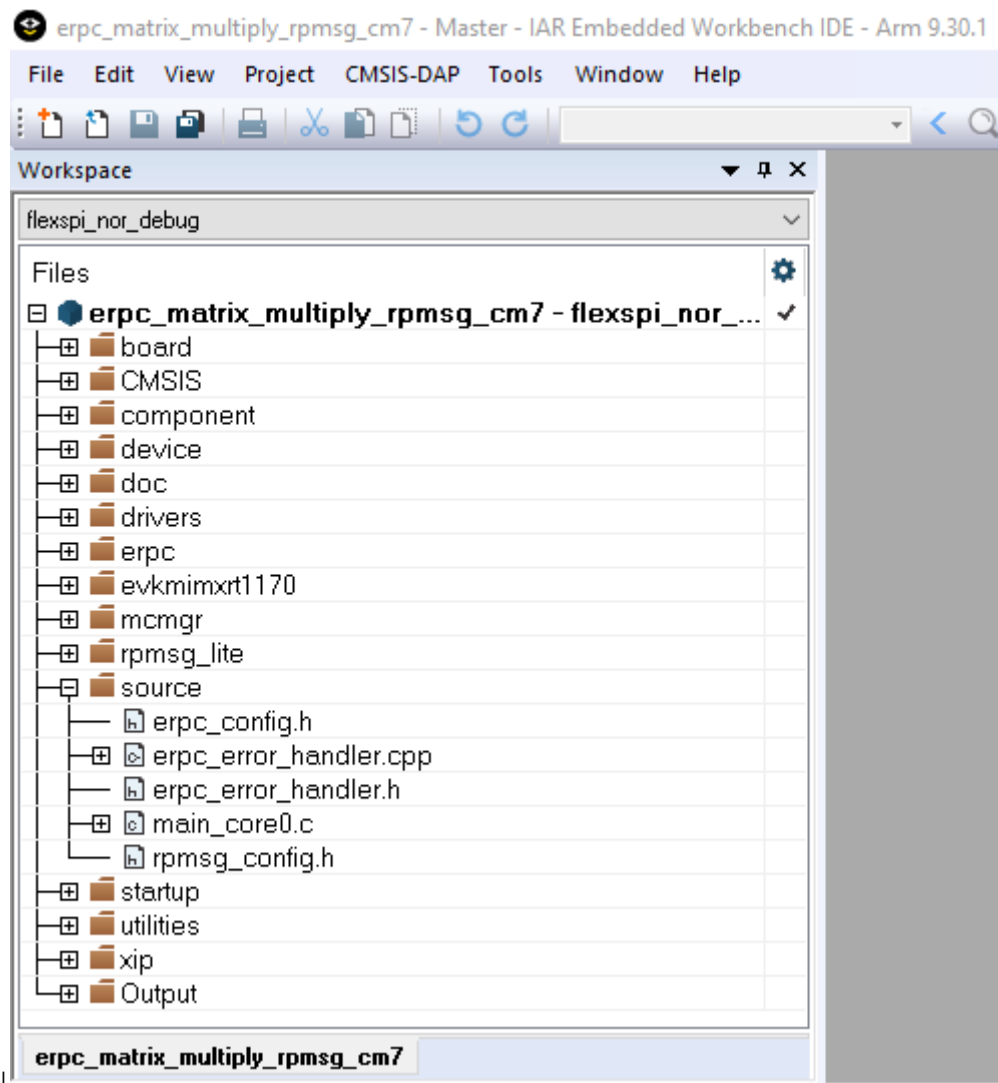

Parent topic:Multicore client application

Parent topic:[Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RMPMsg-Lite). The RMPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

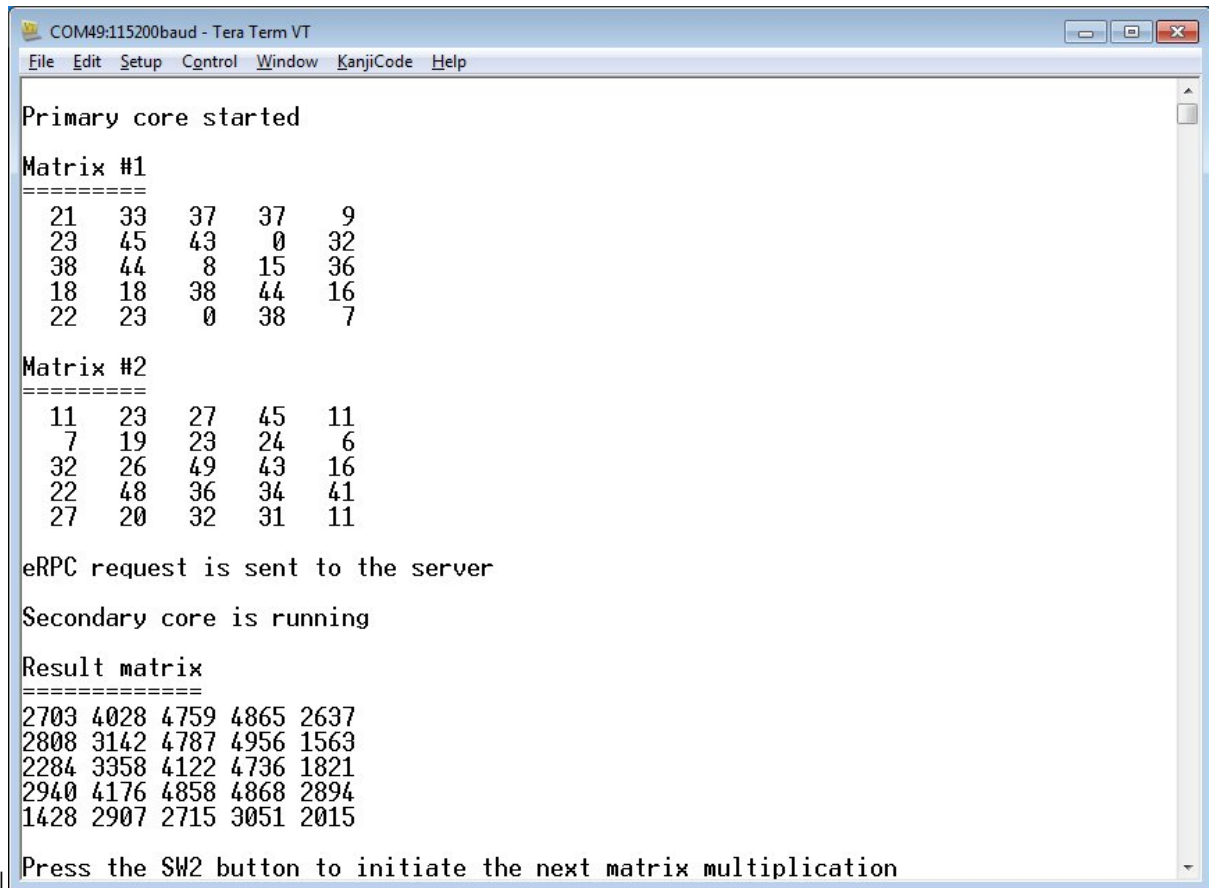

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

eRPC example This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RPMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC communicates with the eRPC server that runs on another SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

| Multicore application source and project files | `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore/`
 | Multiprocessor application source and project files | `<MCUXpressoSDK_install_dir>/boards/<board_name>/multi`
`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr`
 | | eRPC source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/` | | RPLite
 source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/rplite/`

Designing the eRPC application The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has been declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

Parent topic: [eRPC example](#)

Creating the IDL file The created IDL file is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/`

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc_matrix_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix_size* follows next. The *matrix_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of *Matrix* type: *matrix1* and *matrix2* are input parameters, while *result_matrix* is the output parameter. Additionally, the returned data type is declared as *void*.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

Parent topic: [eRPC example](#)

Using the eRPC generator tool | Windows OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64`
| Linux OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`
`<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`
| | Mac OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac`

The files for the “Matrix multiply” example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (*.erpc) is located; then run the following command:

```
erpcgen <IDL_file>.erpc
```

- In the “Matrix multiply” example, the command should look like:

```
erpcgen erpc_matrix_multiply.erpc
```

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- “-?”/”—help” – Shows supported commands.
- “-o <filePath>”/”—output<filePath>” – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen -o <path_to_output>  
<path_to_IDL>/<IDL_file_name>.erpc
```

For the “Matrix multiply” example, when the command is executed from the default erpcgen location, it looks like:

```
erpcgen -o
```

```
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service  
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu
```

In both cases, the following four files are generated into the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service` folder:

- `erpc_matrix_multiply.h`
- `erpc_matrix_multiply_client.cpp`
- `erpc_matrix_multiply_server.h`
- `erpc_matrix_multiply_server.cpp`

For multiprocessor examples, the eRPC file and pre-generated files can be found in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/service` folder.

For Linux OS users:

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as `./erpcgen...` instead of as `erpcgen ....`

Parent topic: [eRPC example](#)

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
 1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
 2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
 3. Add infrastructure files.
 4. Add user code for client and server applications.
 5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

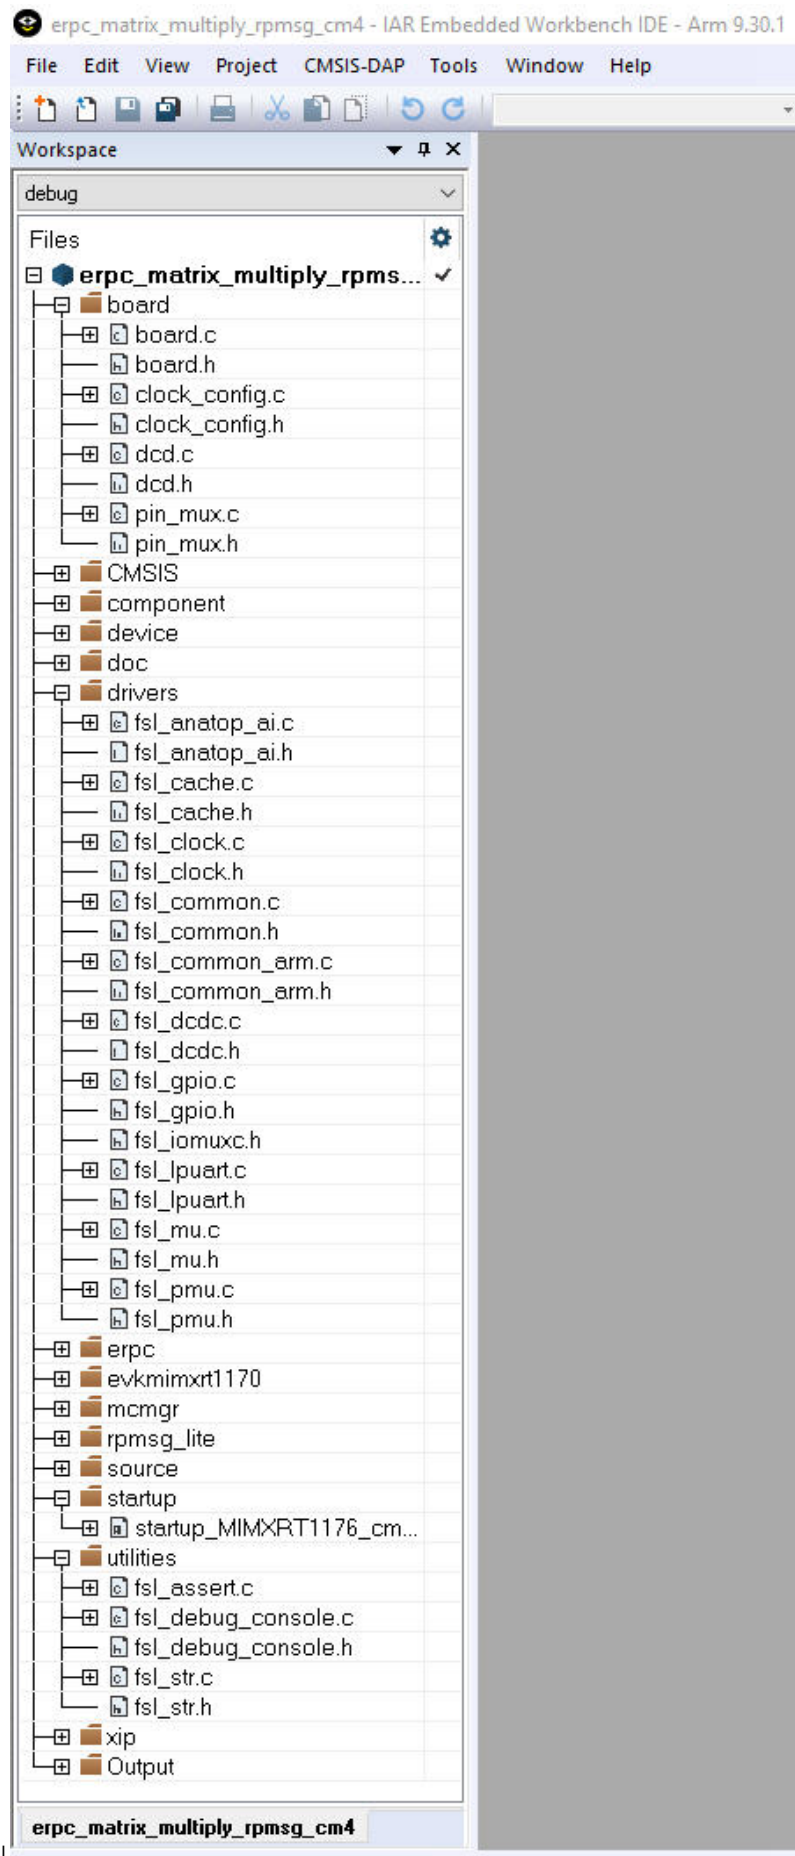

|


Parent topic: Multicore server application

Server related generated files The server-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__server.h
- erpc__matrix__multiply__server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/

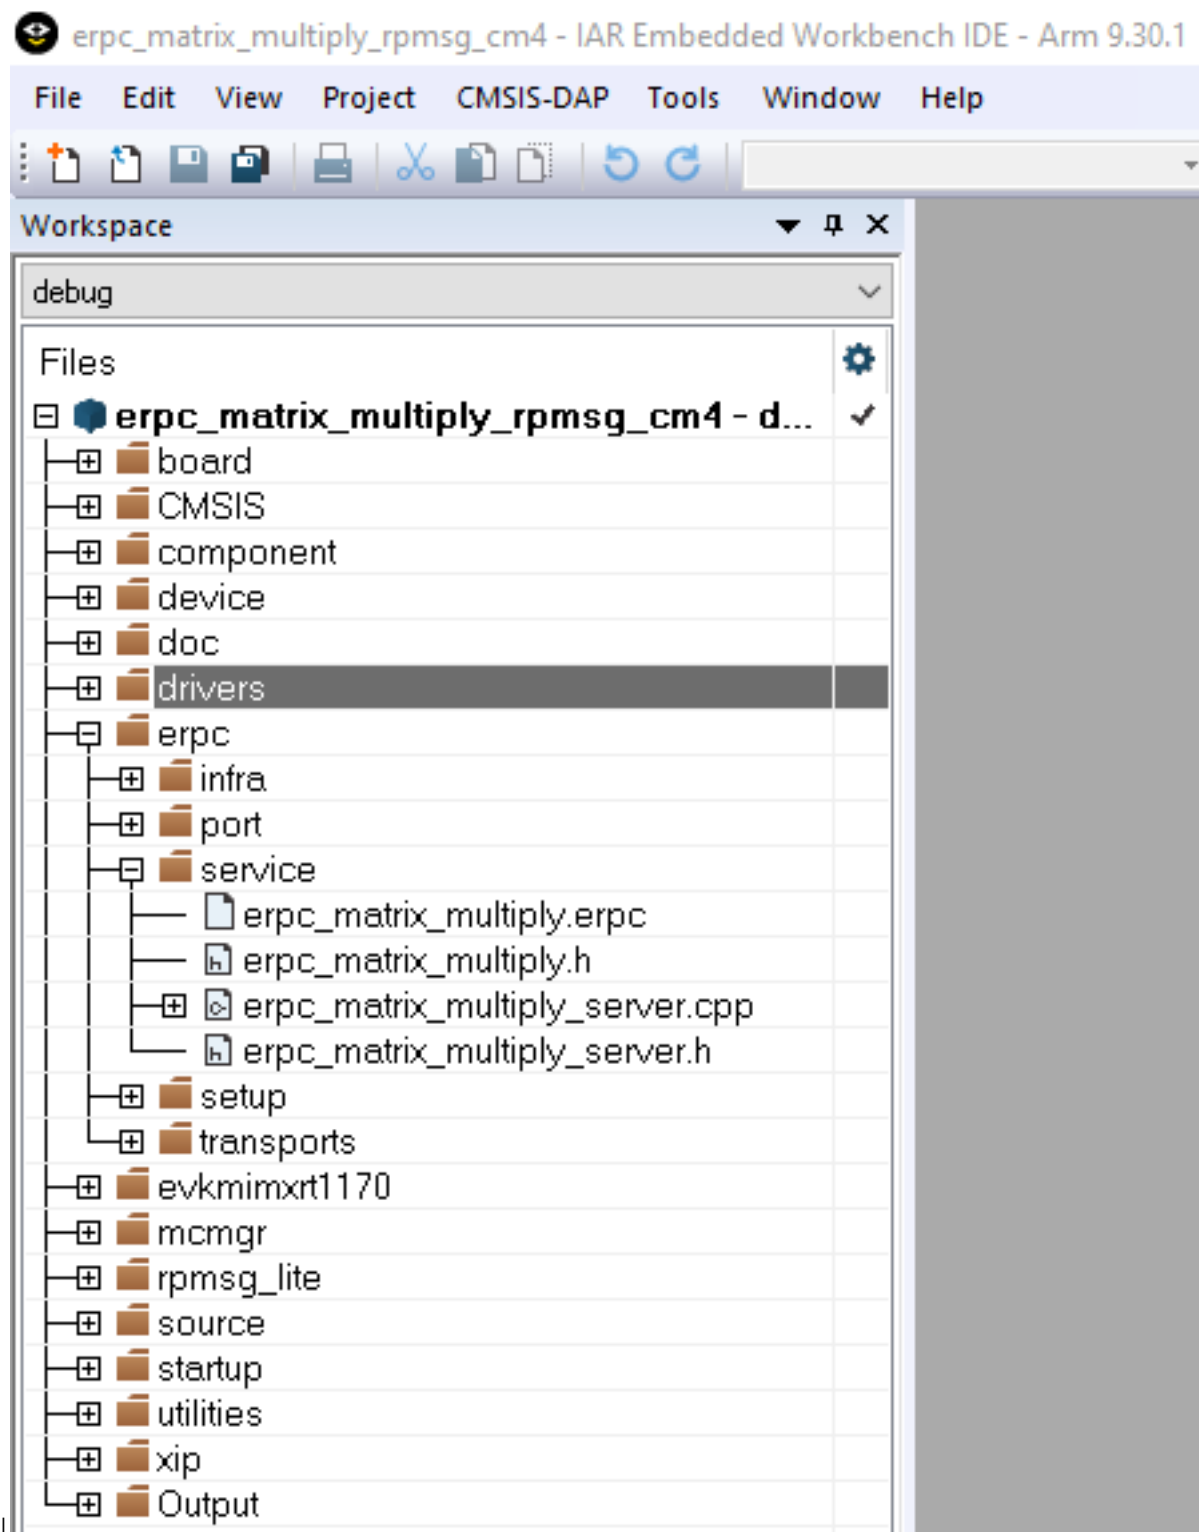


Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
 - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
 - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
 - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
 - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
 - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
 - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
 - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
 - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
 - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
 - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
 - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
 - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
 - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

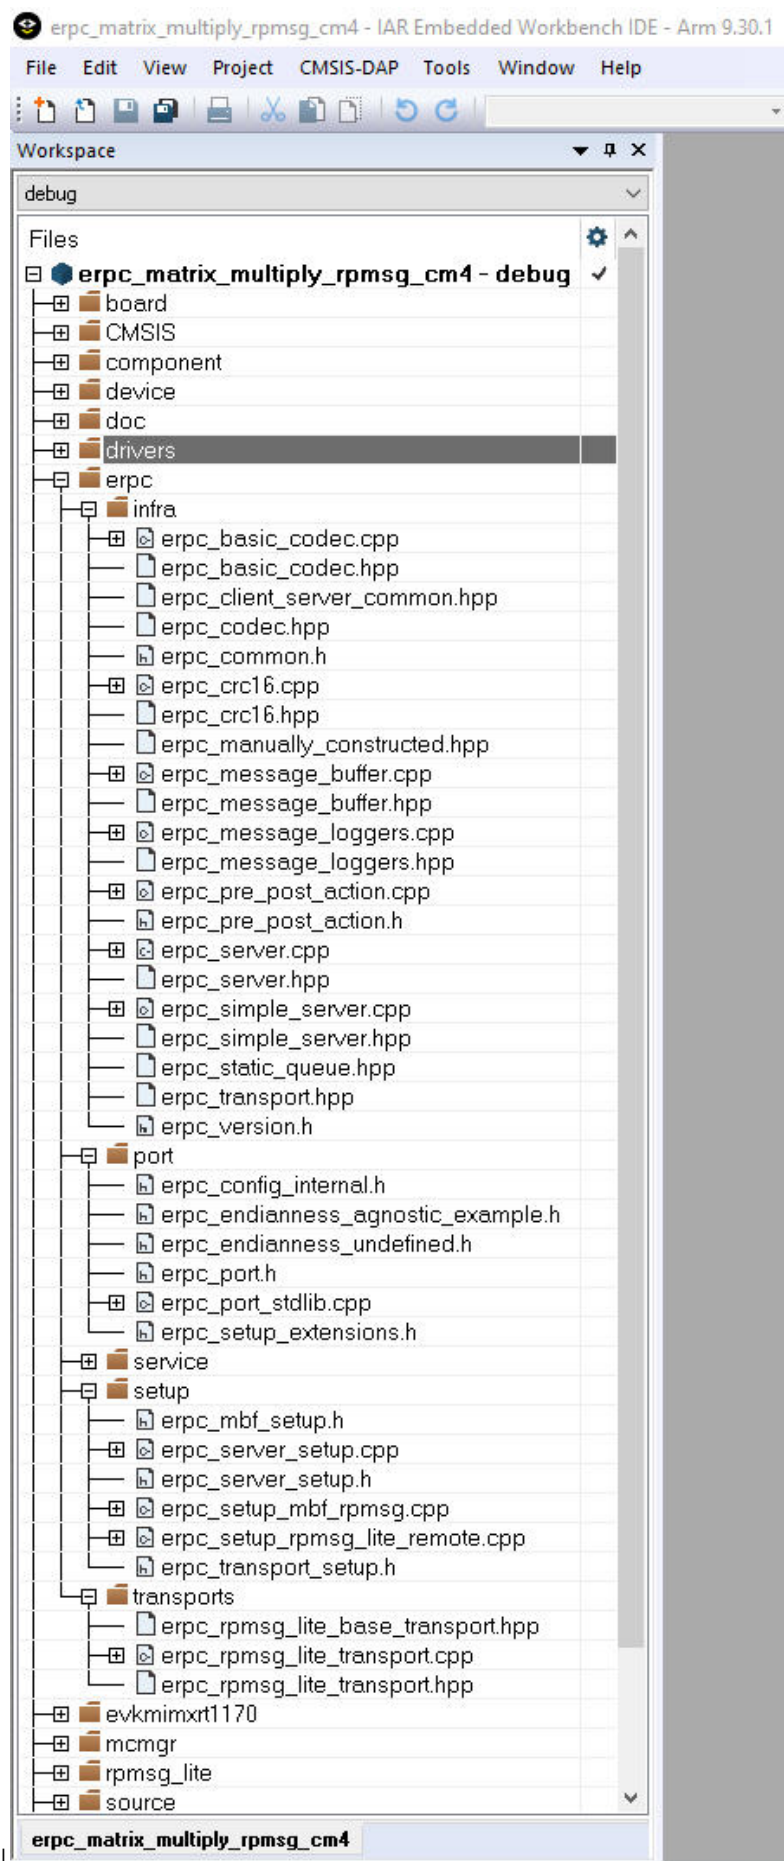

|


Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

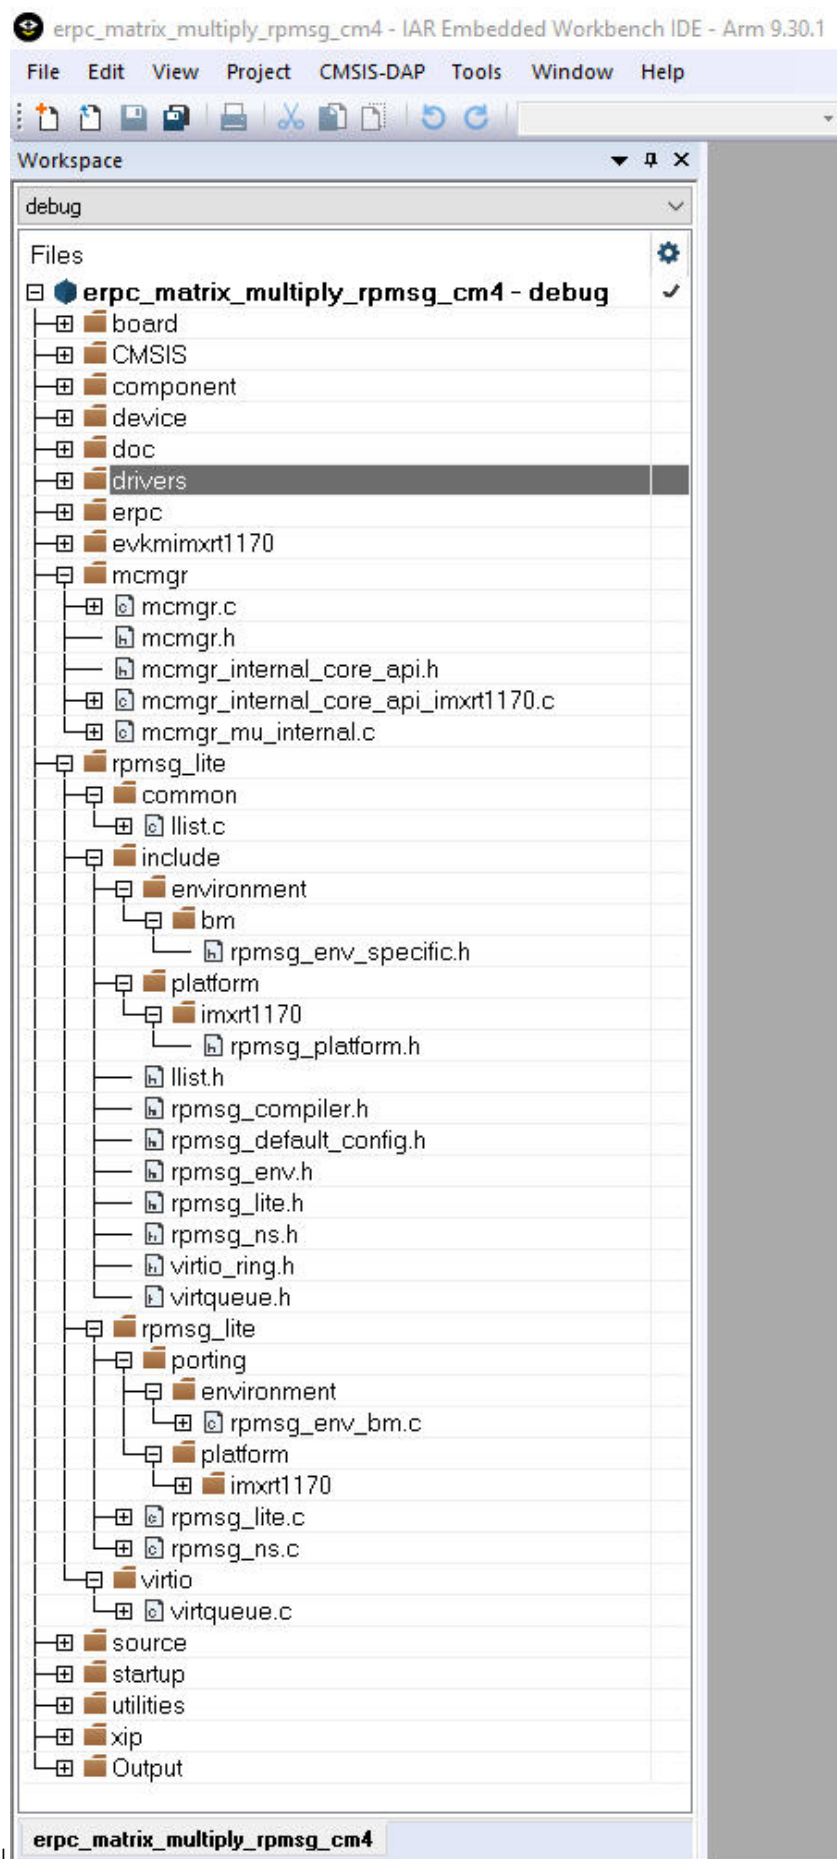

Parent topic:Multicore server application

Server user code The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
    ...
}
int main()
{
    ...
    /* RPSMsg-Lite transport layer initialization */
    erpc_transport_t transport;
    transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
    ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_rpmsg_init(transport);
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server);
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

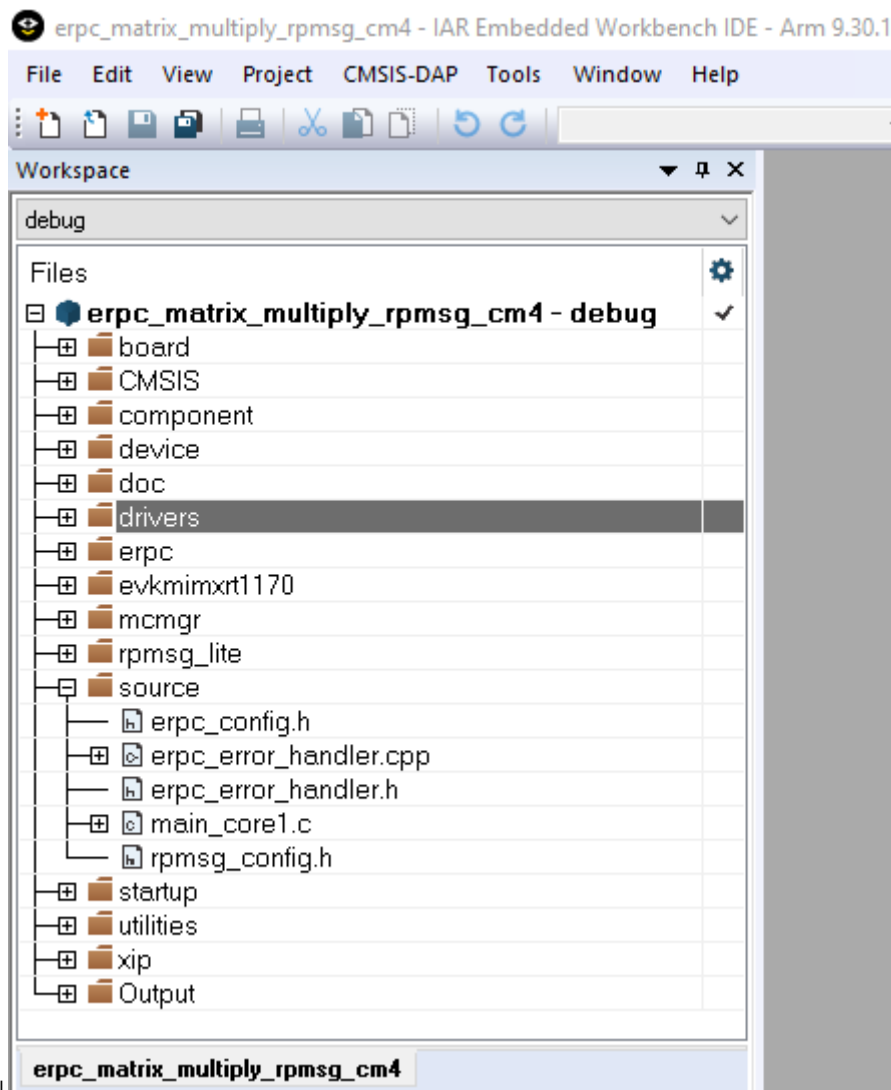

Parent topic:Multicore server application

Parent topic:[Create an eRPC application](#)


Multicore client application The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

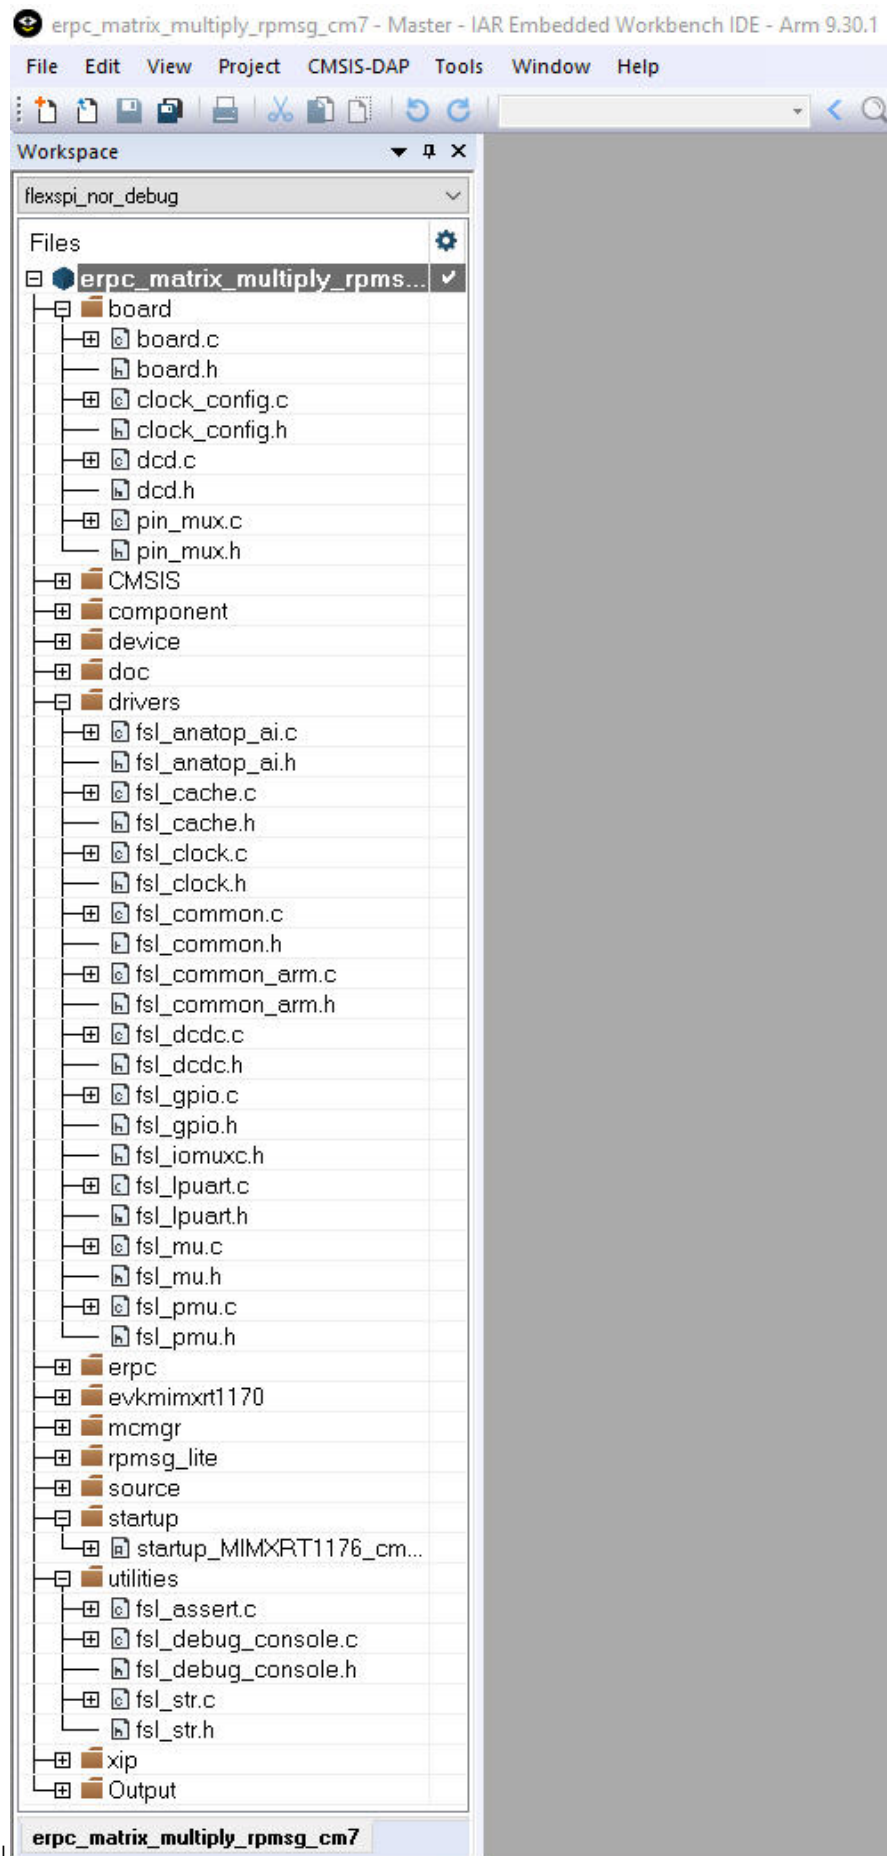


|

Parent topic:Multicore client application**Client-related generated files** The client-related generated files are:

- erpc__matric__multiply.h
- erpc__matrix__multiply__client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.

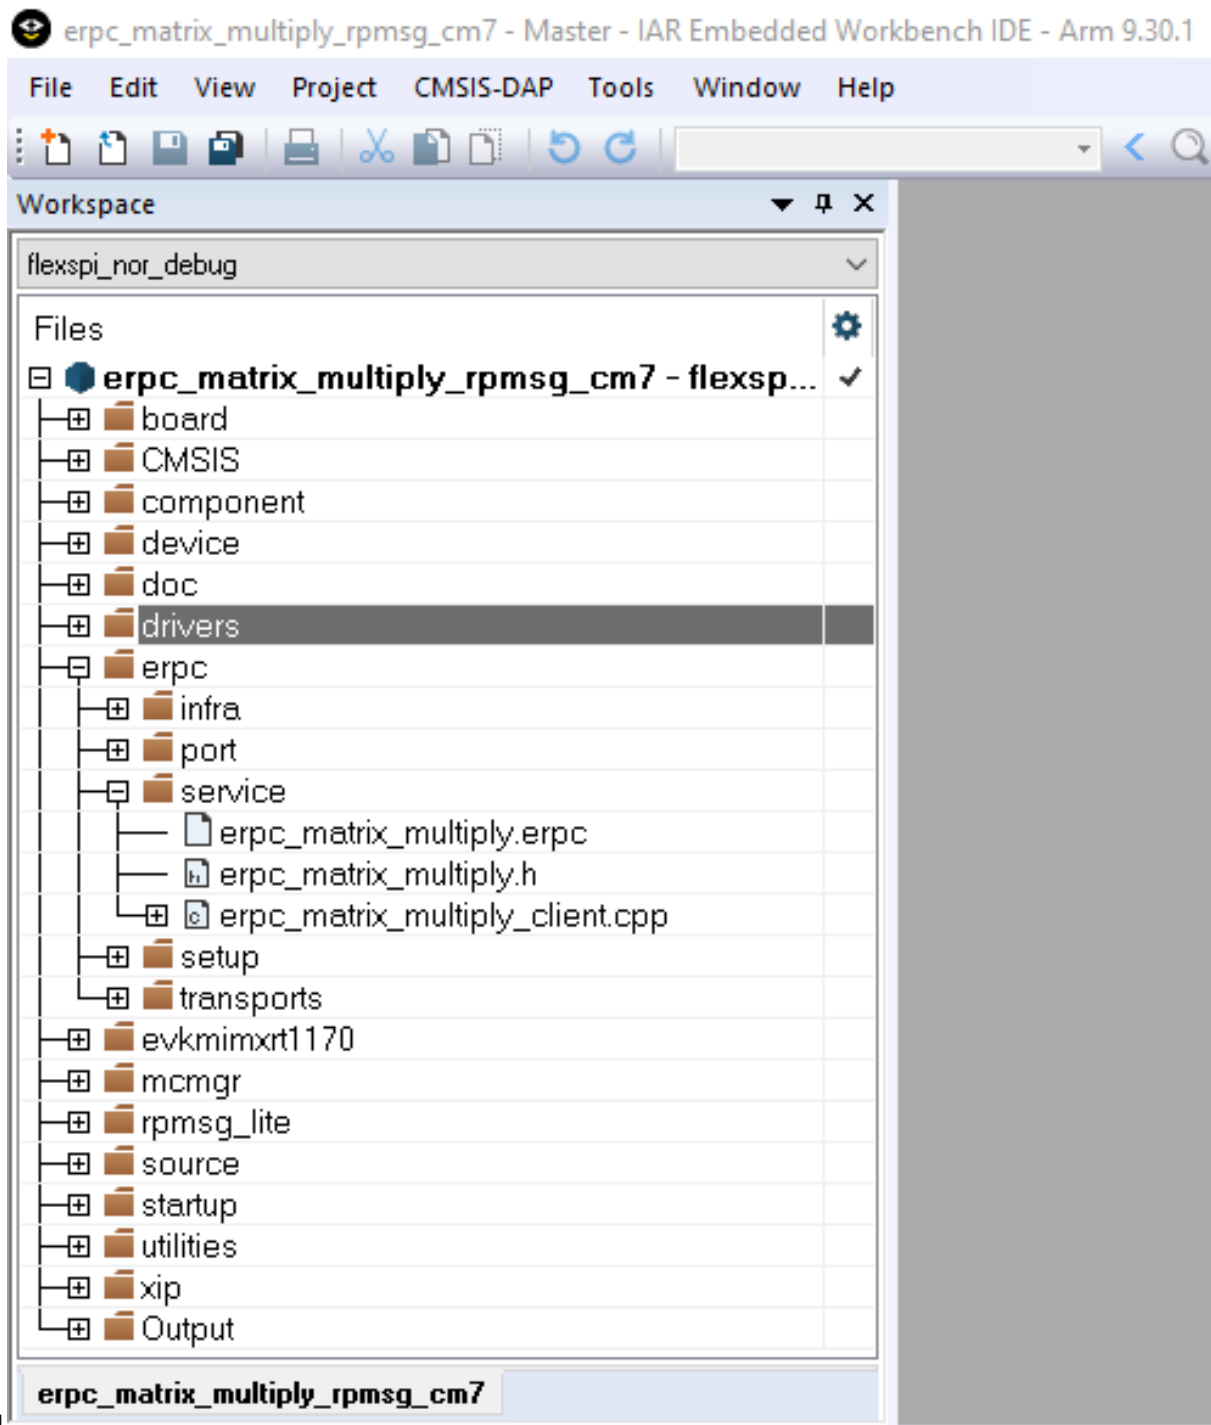

Parent topic:Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

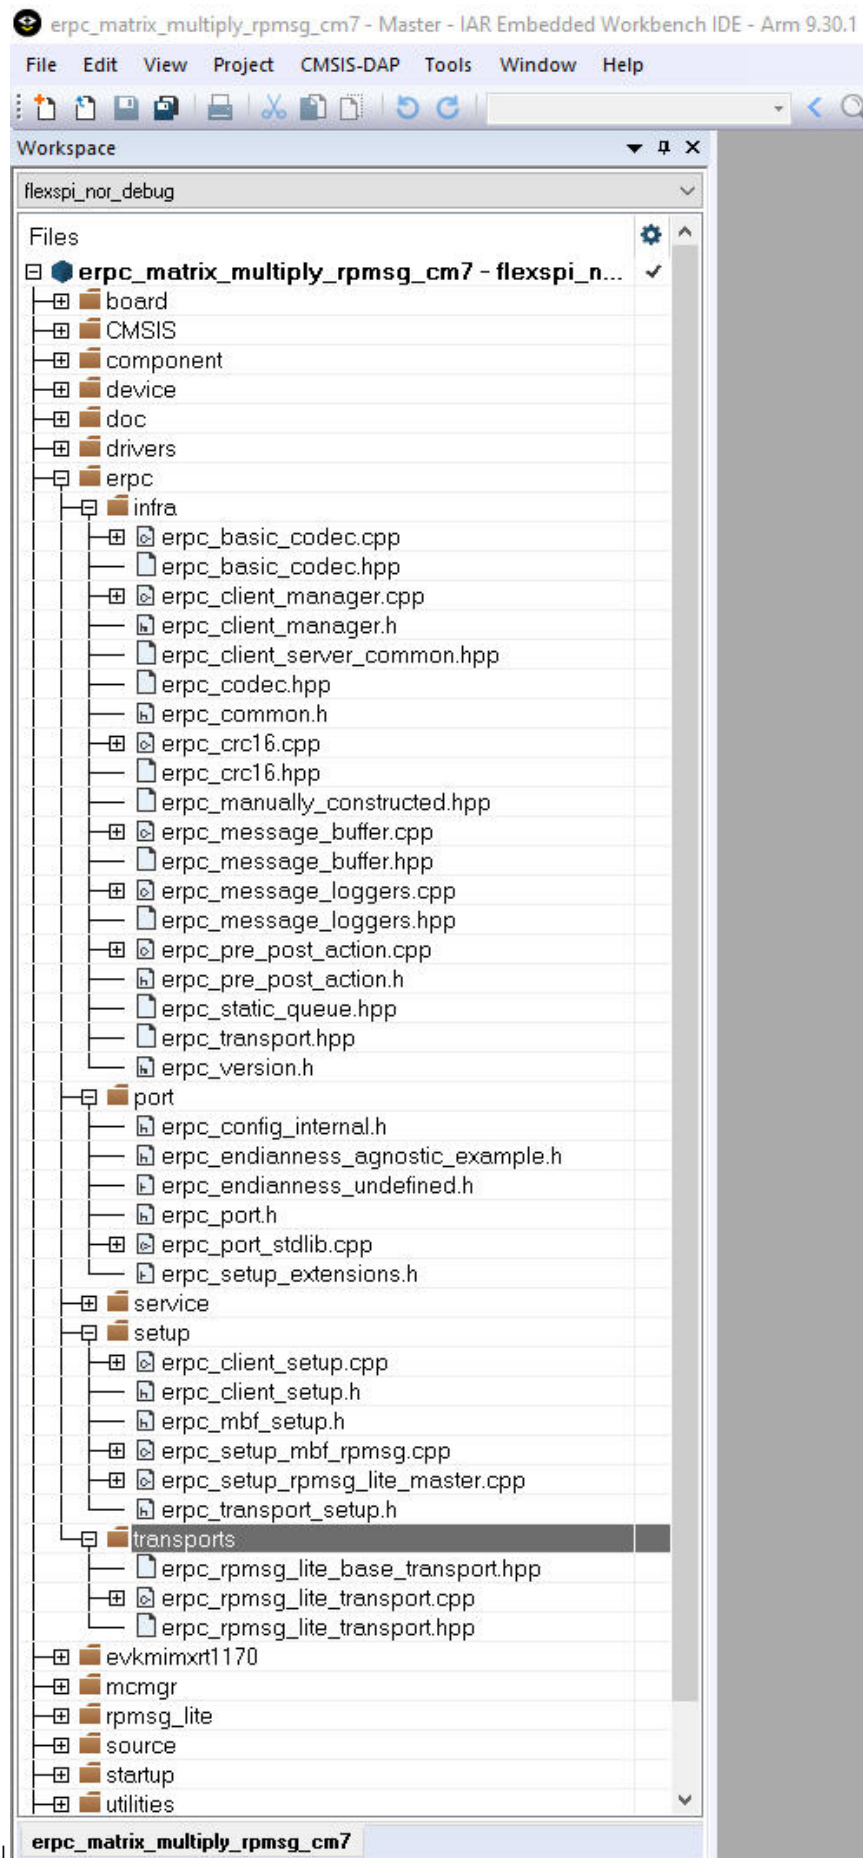

|


Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpsmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

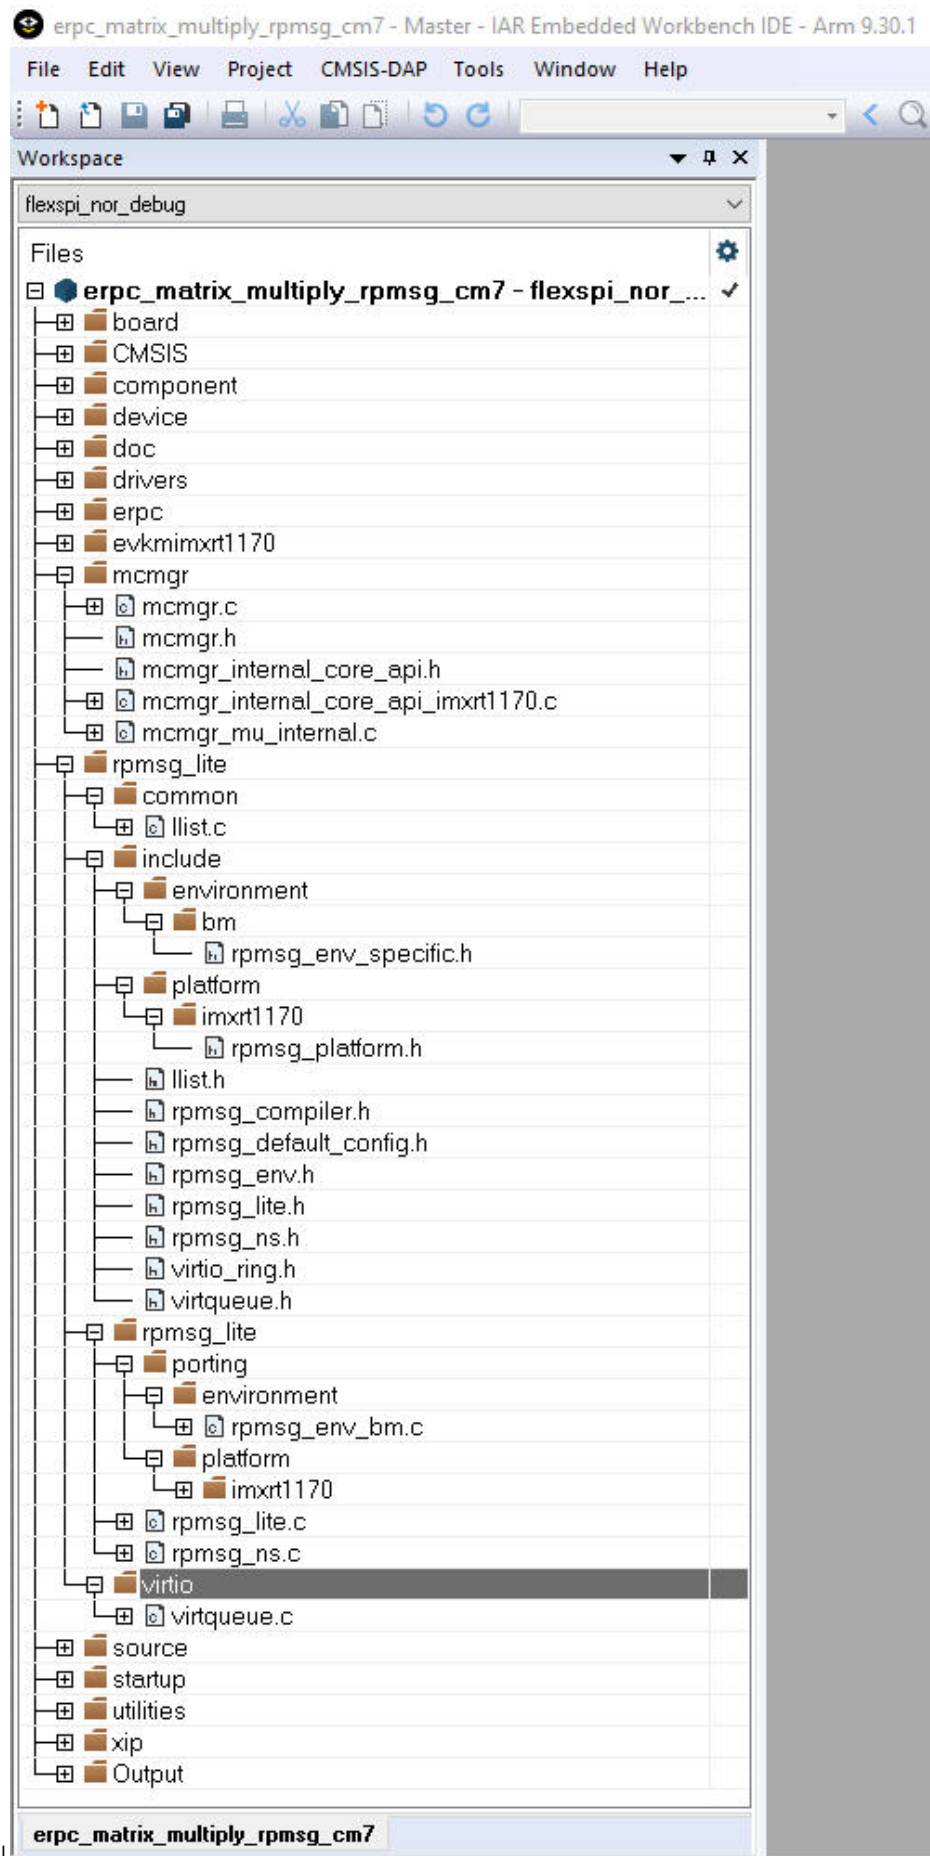

|

Parent topic: Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

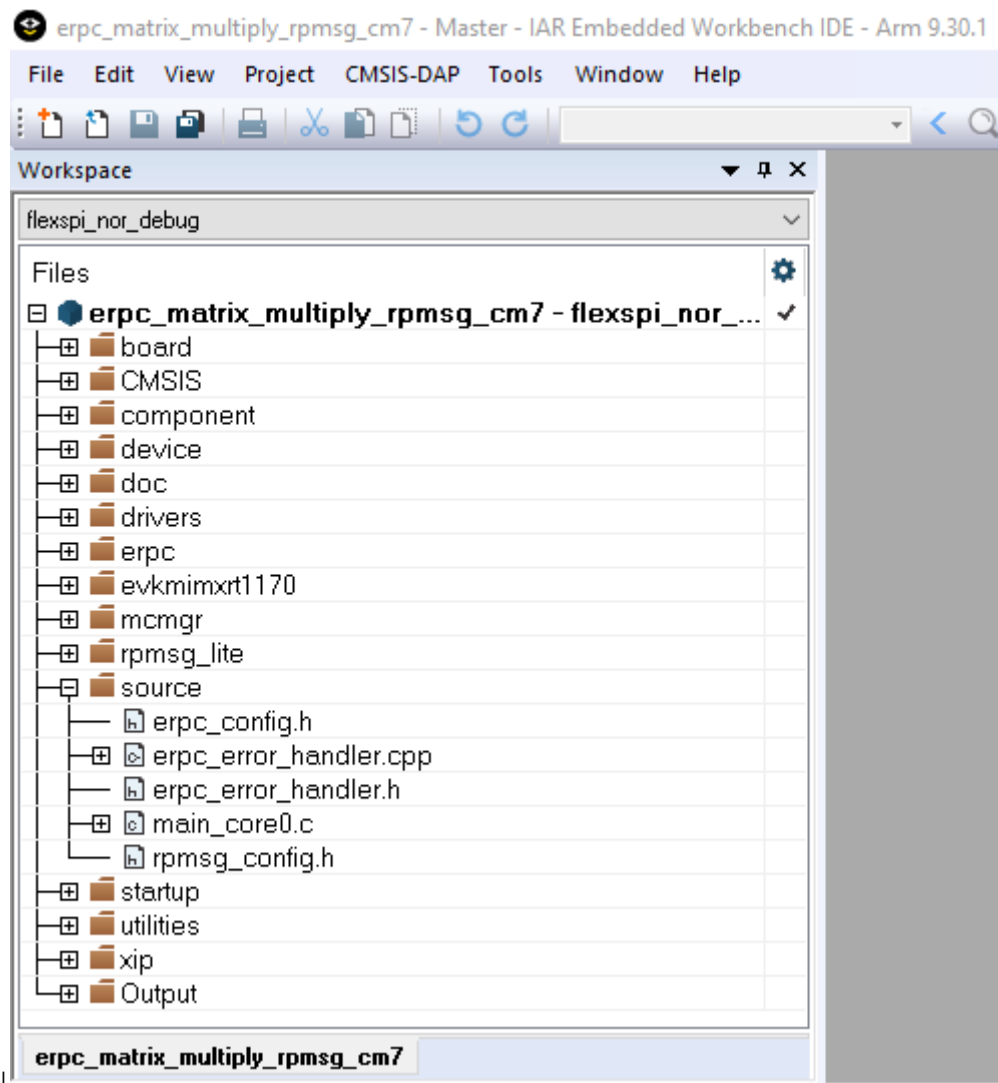

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

Multiprocessor server application The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transport/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
    ...
}
int main()
{
    ...
    /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
    ↪operations */
    erpc_transport_t transport;
    transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
    ...
    /* MessageBufferFactory initialization */
    erpc_mbf_t message_buffer_factory;
    message_buffer_factory = erpc_mbf_dynamic_init();
    ...
    /* eRPC server side initialization */
    erpc_server_t server;
    server = erpc_server_init(transport, message_buffer_factory);
    ...
    /* Adding the service to the server */
    erpc_service_t service = create_MatrixMultiplyService_service();
    erpc_add_service_to_server(server, service);
    ...
    while (1)
    {
        /* Process eRPC requests */
        erpc_status_t status = erpc_server_poll(server)
        /* handle error status */
        if (status != kErpcStatus_Success)
        {
            /* print error description */
            erpc_error_handler(status, 0);
            ...
        }
        ...
    }
}
```

Parent topic:Multiprocessor server application

Multiprocessor client application The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

SPI	<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp
	<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp
UART	<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp
	<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

Client user code The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
    /* Invoke the erpcMatrixMultiply function */
    erpcMatrixMultiply(matrix1, matrix2, result_matrix);
    ...
    /* Check if some error occurred in eRPC */
    if (g_erpc_error_occurred)
    {
        /* Exit program loop */
        break;
    }
    ...
}
```

Parent topic:Multiprocessor client application

Parent topic:Multiprocessor server application

Parent topic:[Create an eRPC application](#)

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK_install_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

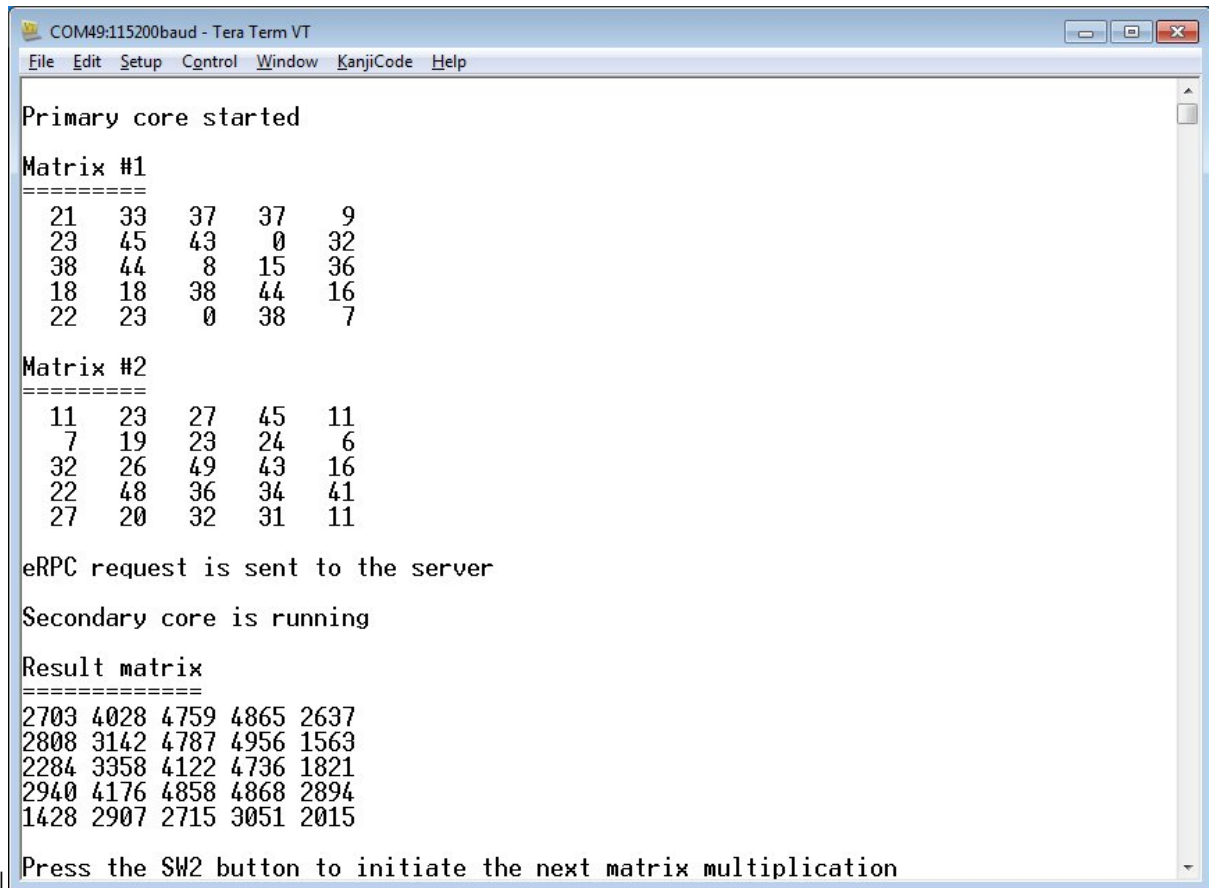

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21  33  37  37   9
 23  45  43   0  32
 38  44   8  15  36
 18  18  38  44  16
 22  23   0  38   7

Matrix #2
=====
 11  23  27  45  11
  7  19  23  24   6
 32  26  49  43  16
 22  48  36  34  41
 27  20  32  31  11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

Other uses for an eRPC implementation The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the github.com/EmbeddedRPC.

Note about the source code in the document Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Changelog eRPC All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

Unreleased

Added

Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.

1.14.0

Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.

- erpc: Fixed Makefile, install the erpc_simple_server header, GitHub PR #447.
- erpc_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

1.13.0

Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr_uart, zephyr_mbox).
- eRPC: Add new Zephyr-related examples.

Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

1.12.0

Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in Message-Buffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

Fixed

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

1.11.0

Fixed

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSB_SIO.GetNumPorts API use with libusb_sio python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcpy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

1.10.0

Fixed

- eRPC: MU transport layer switched to blocking MU_SendMsg() API use.

1.10.0

Added

- eRPC: Add TCP_NODELAY option to python, GitHub PR #298.

Fixed

- eRPC: MUTransport adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT_TRUE with EXPECT_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg_lite based transports to changed rpmsg_lite_wait_for_link_up() API parameters.
- eRPC, erpcgen: Better distinguish which file can and cannot be linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest_enumErrorCode_allDirection, serialize enums as int32 instead of uint32.

1.9.1

Fixed

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.
- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.

- eRPC: Remove ERPC_PRE_POST_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcpy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid of serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg_lite_wait_for_link_up() in rpmsg_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

1.9.0

Added

- eRPC: Allow used LIBUSBSIO device index being specified from the Python command line argument.

Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run_clang_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc_setup_mbf_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related API, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

1.8.1

Added

- eRPC: New i2c_slave_transport transport introduced.

Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message_loggers and pre_post_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

1.8.0

Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char*, GitHub PR #125.

Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native _WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix_multiply.py example: Add -serial and -baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc_framed_transport.cpp: return error if received message has zero length, GitHub PR #141.
- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '\$' character from generated symbol name in '_\$union' suffix, GitHub PR #103.

- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

1.7.4

Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

1.7.3

Fixed

- eRPC: Improved the test_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

1.7.2

Added

- eRPC: Add missing doxygen comments for transports.

Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

1.7.1

Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

1.7.0

Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

1.6.0

Added

- eRPC: Added @nullable support for scalar types.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

1.5.0

Added

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

1.4.0**Added**

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

Fixed

- eRPC: win_flex_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

[1.3.0]**Added**

- eRPC: New annotation types introduced (@length, @max_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

[1.2.0]**Added**

- eRPC source directory organization changed.
- Many eRPC improvements.

[1.1.0]

Added

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

[1.0.0]

Added

- Initial Release

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

[FreeRTOS kernel for MCUXpresso SDK Readme](#)

[FreeRTOS kernel for MCUXpresso SDK ChangeLog](#)

[FreeRTOS kernel Readme](#)

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

[Readme](#)

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

4.1.5 corejson

JSON parser.

Readme

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

4.1.7 corepkcs11

PKCS #11 key management library.

Readme

4.1.8 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme