



MCUXpresso SDK Documentation

Release 26.03.00



NXP
Mar 24, 2026



Table of contents

1	FRDM-MCXC242	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	58
1.3.1	Getting Started with MCUXpresso SDK Repository	58
1.4	Release Notes	65
1.4.1	MCUXpresso SDK Release Notes	65
1.5	ChangeLog	68
1.5.1	MCUXpresso SDK Changelog	68
1.6	Driver API Reference Manual	122
1.7	Middleware Documentation	122
1.7.1	Multicore	122
1.7.2	FreeMASTER	122
1.7.3	FreeRTOS	122
1.7.4	File systemFatfs	122
2	MCXC242	123
2.1	ADC16: 16-bit SAR Analog-to-Digital Converter Driver	123
2.2	Clock Driver	132
2.3	CMP: Analog Comparator Driver	143
2.4	COP: Watchdog Driver	147
2.5	CRC: Cyclic Redundancy Check Driver	150
2.6	DMA: Direct Memory Access Controller Driver	152
2.7	DMAMUX: Direct Memory Access Multiplexer Driver	162
2.8	FGPIO Driver	164
2.9	C90TFS Flash Driver	166
2.10	FlexIO: FlexIO Driver	166
2.11	FlexIO DMA I2S Driver	166
2.12	FlexIO DMA SPI Driver	169
2.13	FlexIO DMA UART Driver	172
2.14	FlexIO Driver	175
2.15	FlexIO I2C Master Driver	189
2.16	FlexIO I2S Driver	198
2.17	FlexIO SPI Driver	208
2.18	FlexIO UART Driver	221
2.19	ftfx adapter	232
2.20	Ftftx CACHE Driver	232
2.21	ftfx controller	234
2.22	ftfx feature	250
2.23	Ftftx FLASH Driver	251
2.24	Ftftx FLEXNVM Driver	264
2.25	ftfx utilities	275
2.26	GPIO: General-Purpose Input/Output Driver	276
2.27	GPIO Driver	277
2.28	I2C: Inter-Integrated Circuit Driver	279

2.29	I2C DMA Driver	279
2.30	I2C Driver	281
2.31	Common Driver	295
2.32	LLWU: Low-Leakage Wakeup Unit Driver	309
2.33	LPTMR: Low-Power Timer	313
2.34	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	318
2.35	LPUART DMA Driver	318
2.36	LPUART Driver	321
2.37	MCM: Miscellaneous Control Module	340
2.38	PIT: Periodic Interrupt Timer	345
2.39	PMC: Power Management Controller	349
2.40	PORT: Port Control and Interrupts	355
2.41	RCM: Reset Control Module Driver	362
2.42	RTC: Real Time Clock	368
2.43	SIM: System Integration Module Driver	375
2.44	SMC: System Mode Controller Driver	377
2.45	SPI: Serial Peripheral Interface Driver	383
2.46	SPI DMA Driver	383
2.47	SPI Driver	386
2.48	TPM: Timer PWM Module	399
2.49	UART: Universal Asynchronous Receiver/Transmitter Driver	414
2.50	UART DMA Driver	415
2.51	UART Driver	417
2.52	VREF: Voltage Reference Driver	433
3	Middleware	437
3.1	File System	437
3.1.1	FatFs	437
3.2	Motor Control	439
3.2.1	FreeMASTER	439
3.3	MultiCore	476
3.3.1	Multicore SDK	476
4	RTOS	575
4.1	FreeRTOS	575
4.1.1	FreeRTOS kernel	575
4.1.2	FreeRTOS drivers	575
4.1.3	backoffalgorithm	575
4.1.4	corehttp	575
4.1.5	corejson	575
4.1.6	coremqtt	576
4.1.7	corepkcs11	576
4.1.8	freertos-plus-tcp	576


This documentation contains information specific to the frdm-mcxc242 board.

Chapter 1

FRDM-MCXC242

1.1 Overview

The FRDM-MCXC242 is supported by a range of NXP and third-party development software.

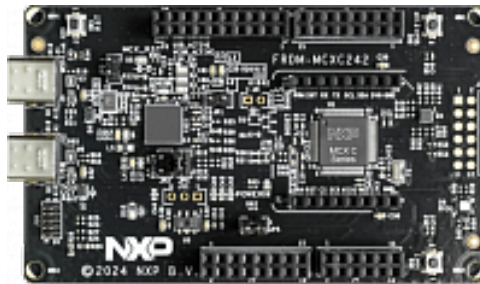

MCU device and part on board is shown below:

- Device: MCXC242
- PartNumber: MCXC242VLH

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 Getting Started with MCUXpresso SDK Package

Starting with version 25.09.00, MCUXpresso SDK introduced two package versions for offline development:

- **Classic SDK Package:** Traditional board-specific packages with pre-configured IDE projects for MCUXpresso IDE, IAR, Keil, and other toolchains.
- **Repository-Layout SDK Package:** Board-specific packages that maintain the same structure and build system as the GitHub Repository SDK, providing offline access to the repository SDK development experience. Available when selecting the ARMGCC toolchain.

From version 25.12.00 onward:

- When you select ARMGCC, the SDK download will use the Repository-Layout version.
- For all other toolchains, the SDK download will remain in the Classic version.


Note: The Repository-Layout SDK package was first introduced in version 25.09.00, but initially only for MCXW23x platforms.

Classic SDK Package

Overview The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

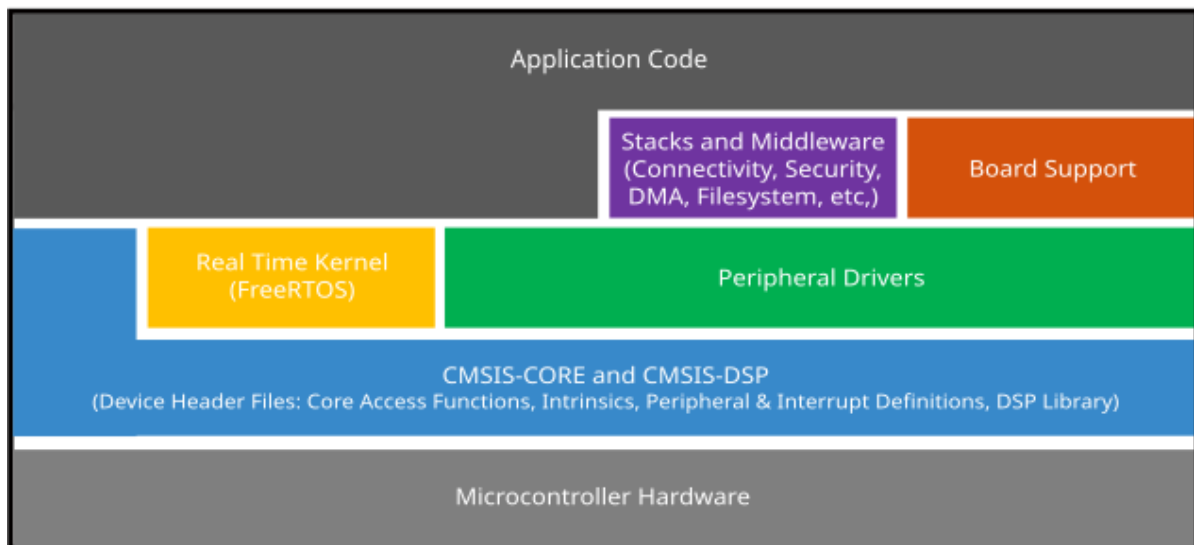


MCUXpresso SDK board support package folders MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):

- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

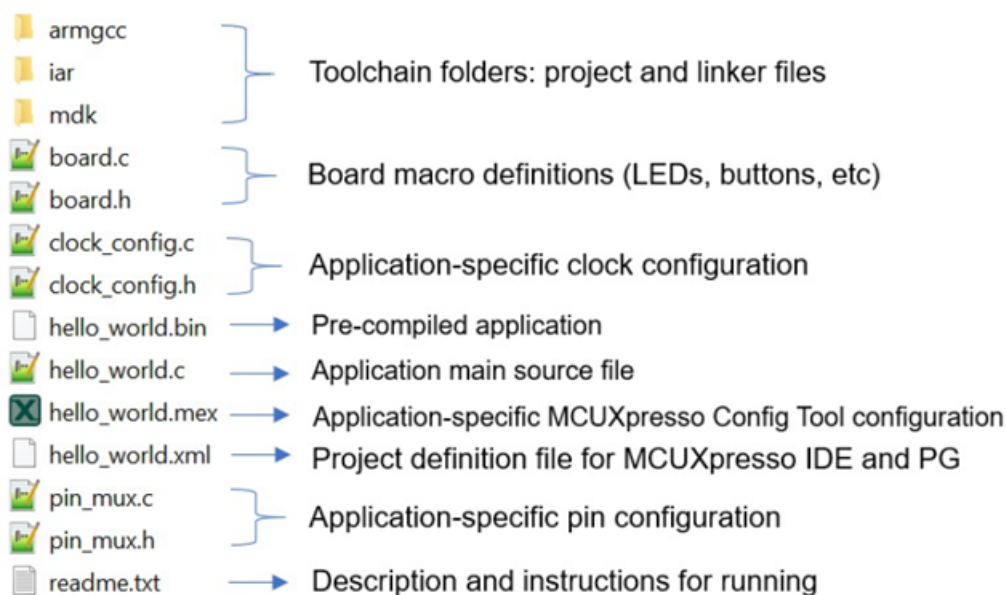

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the

rtos folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.


Run a demo using MCUXpresso IDE **Note:** Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.

This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

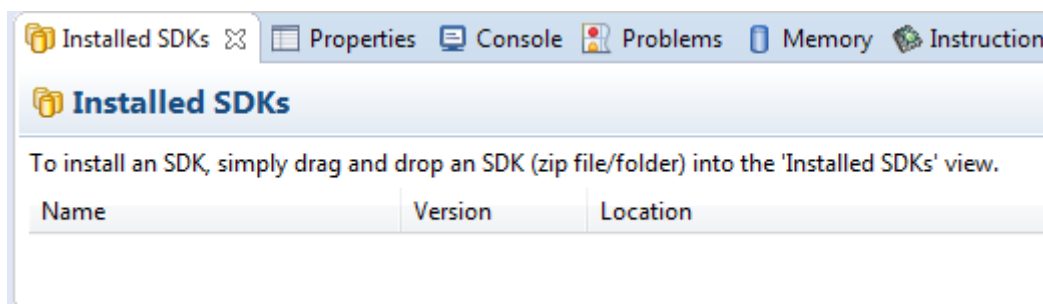

2. On the **Quickstart Panel**, click **Import SDK example(s)....**

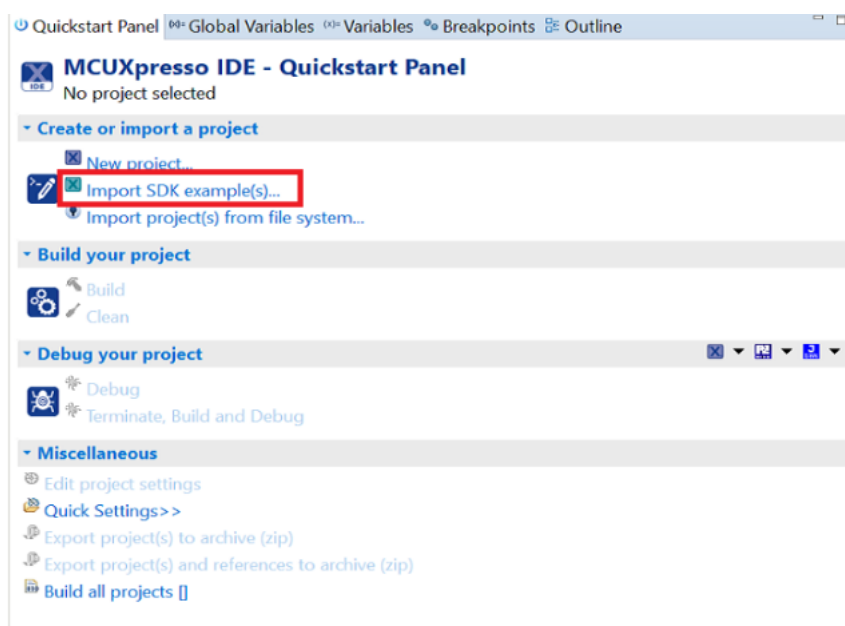

3. Expand the `demo_apps` folder and select `hello_world`.

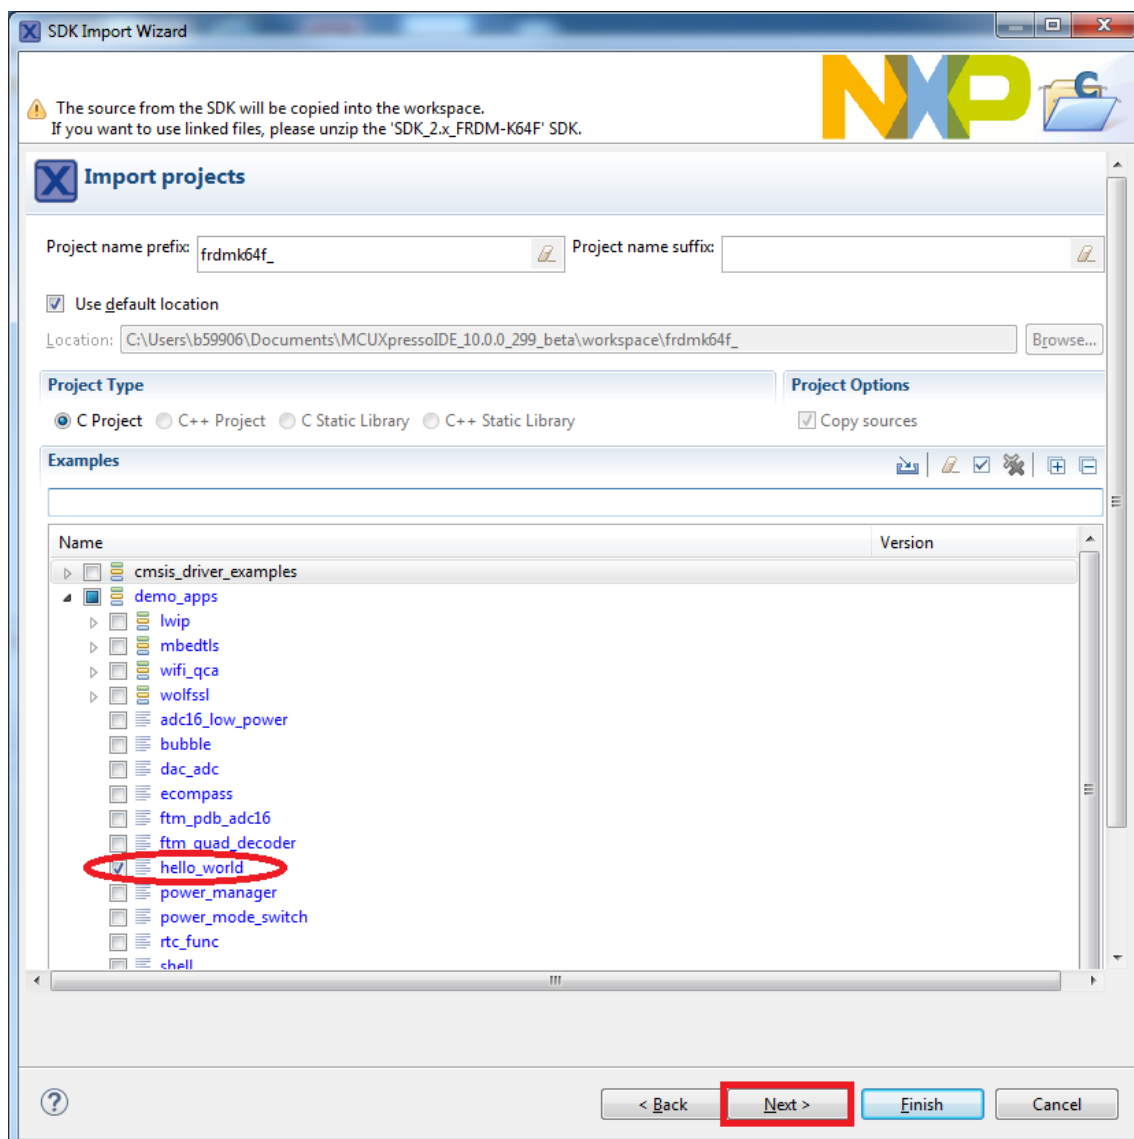4. Click **Next**.


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)

2. No parity
3. 8 data bits

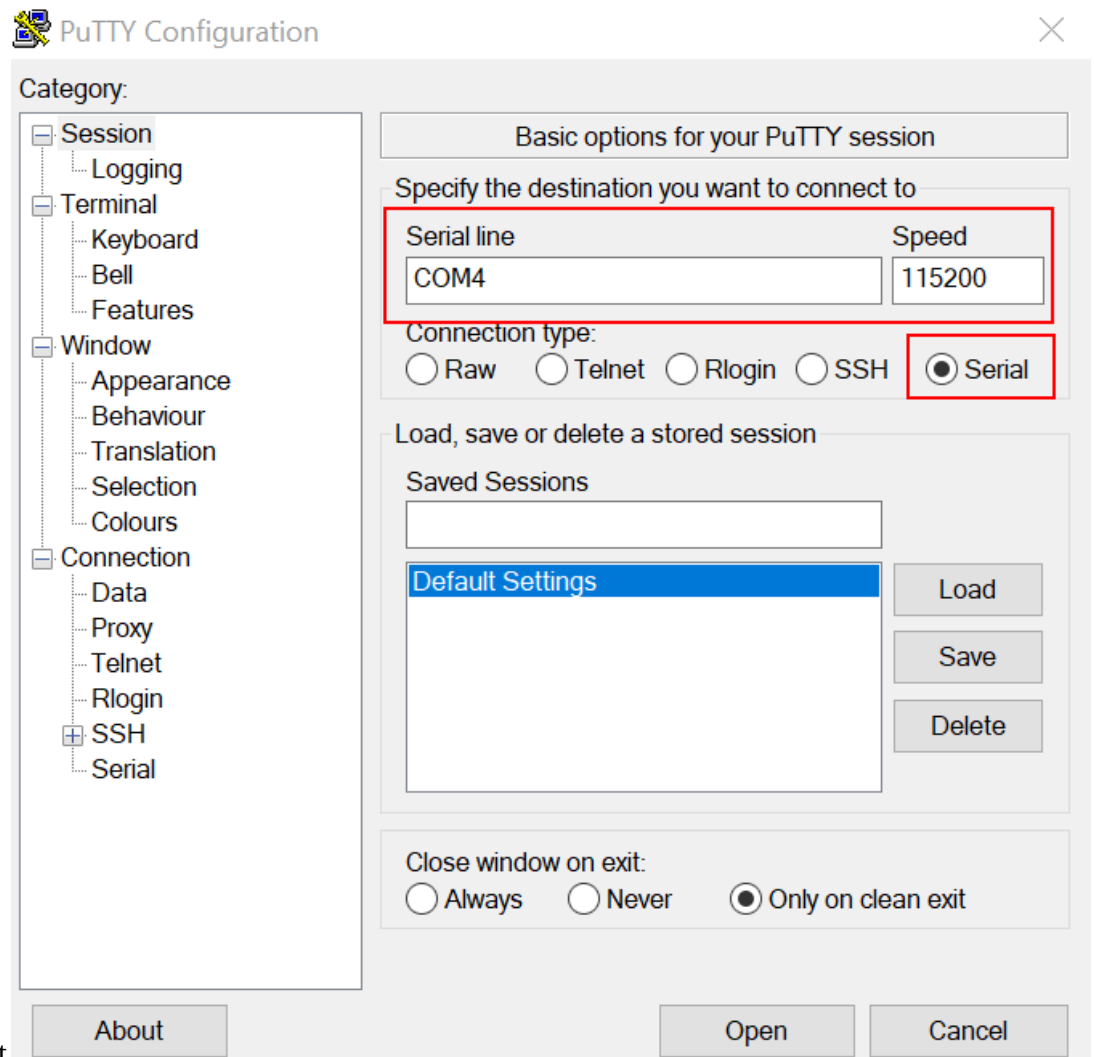

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

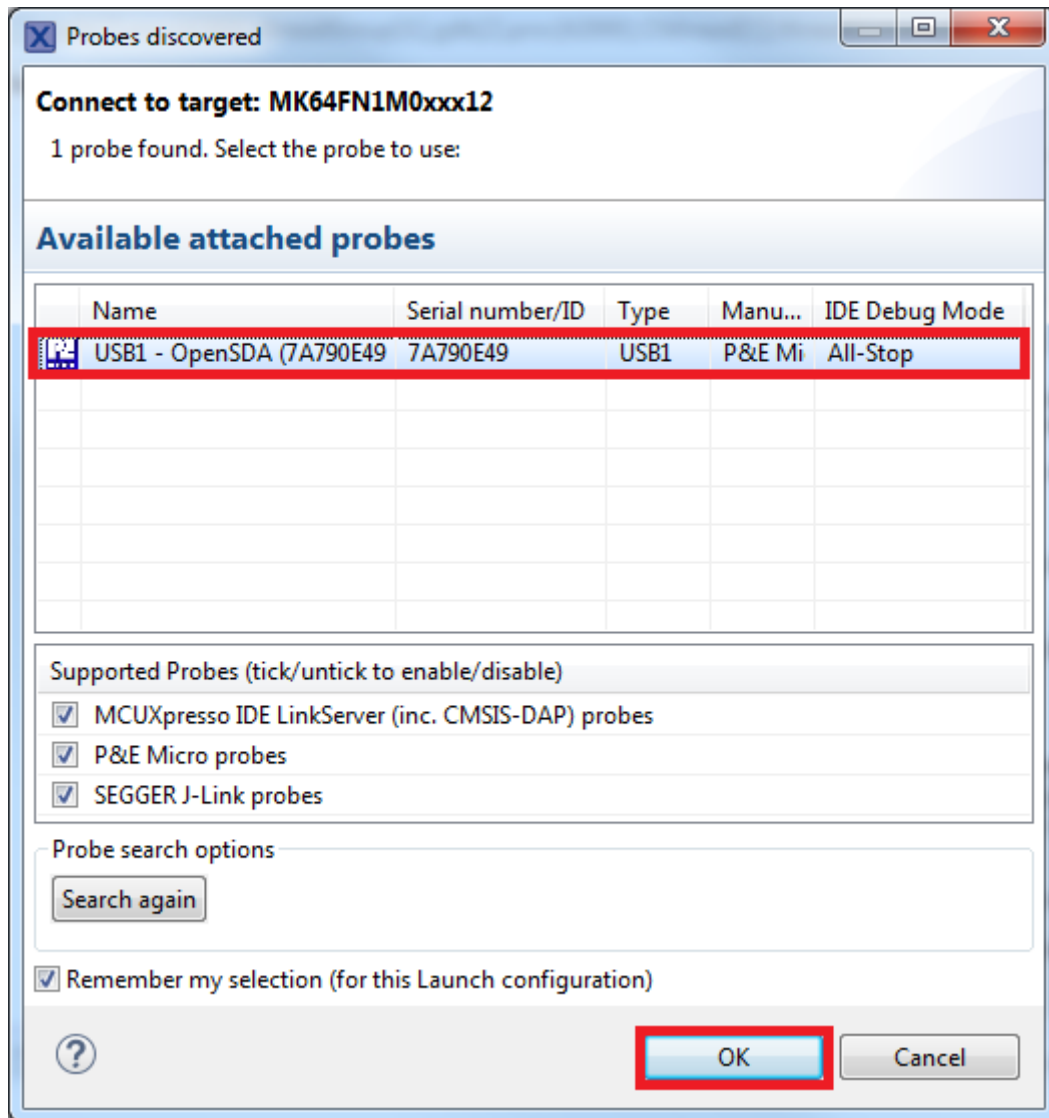

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

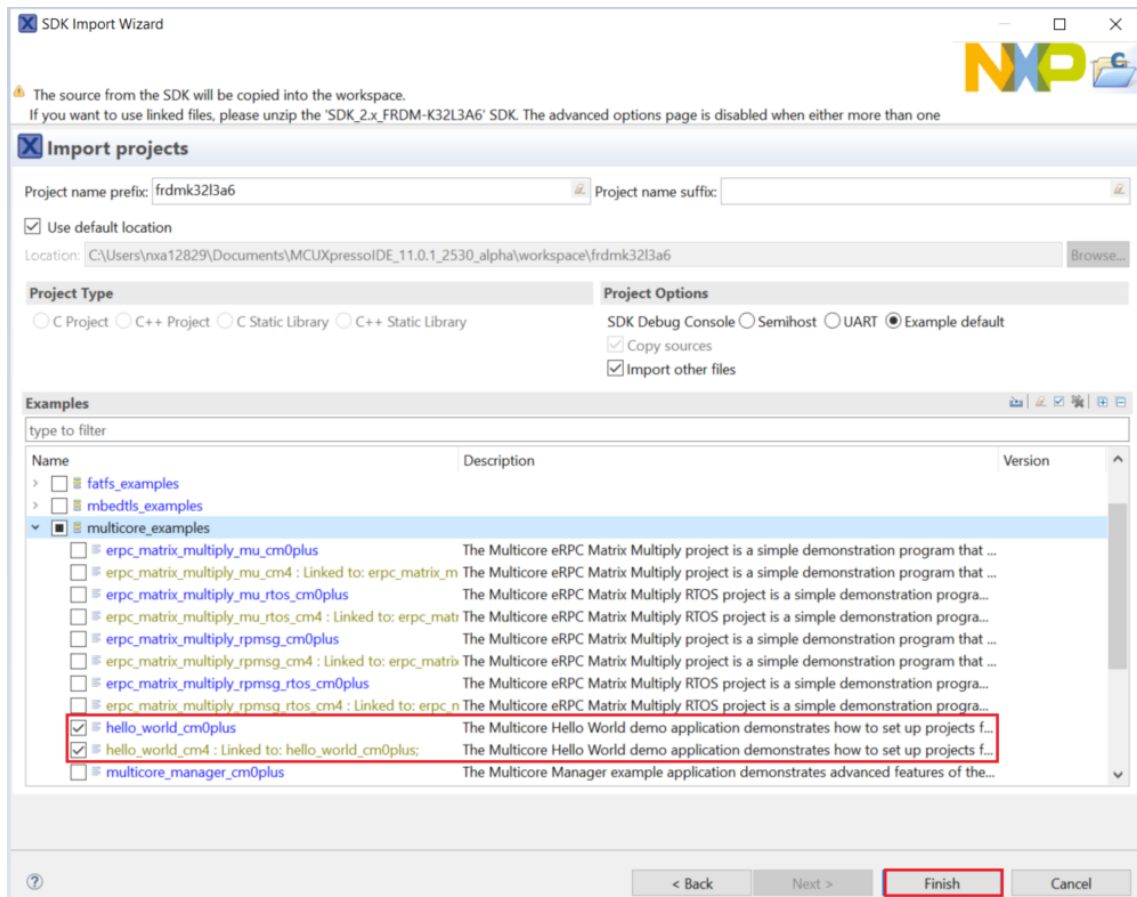


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

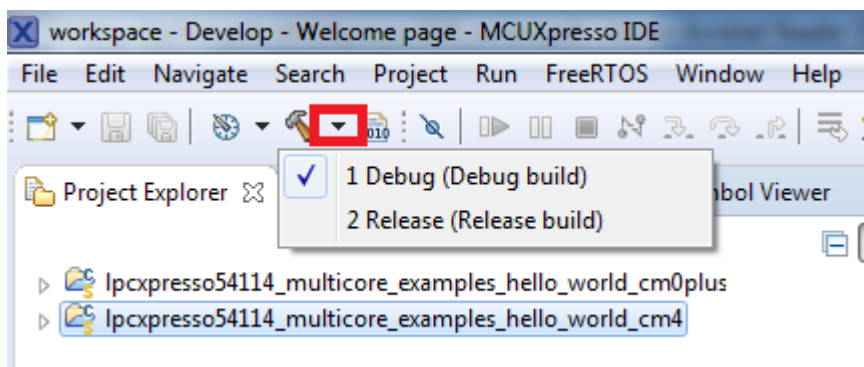




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations -> Set Active -> Release**. This alternate navigation using the menu item is **Project -> Build Configuration -> Set Active -> Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

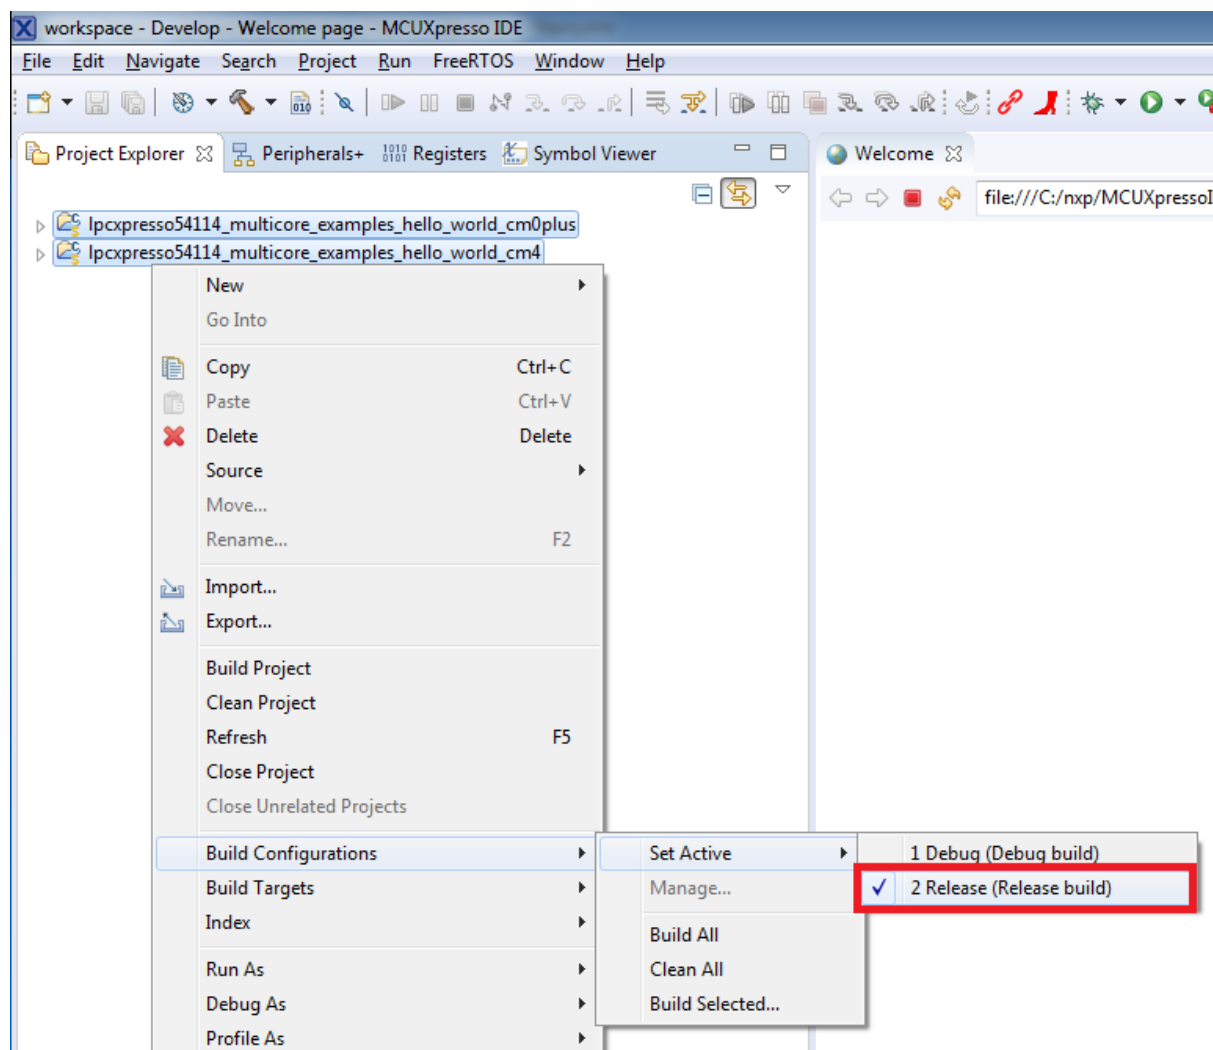


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

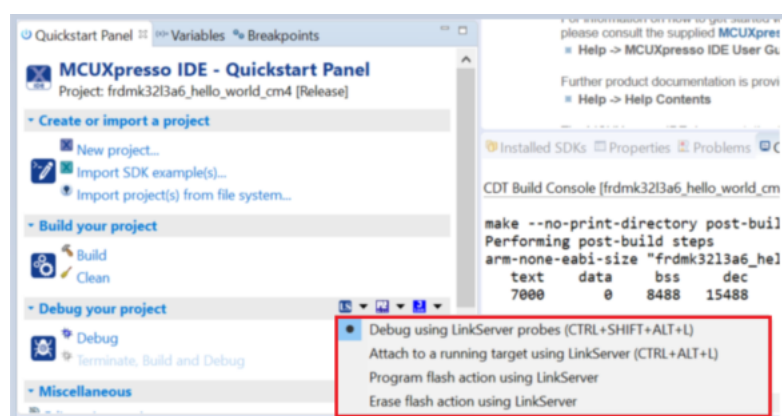

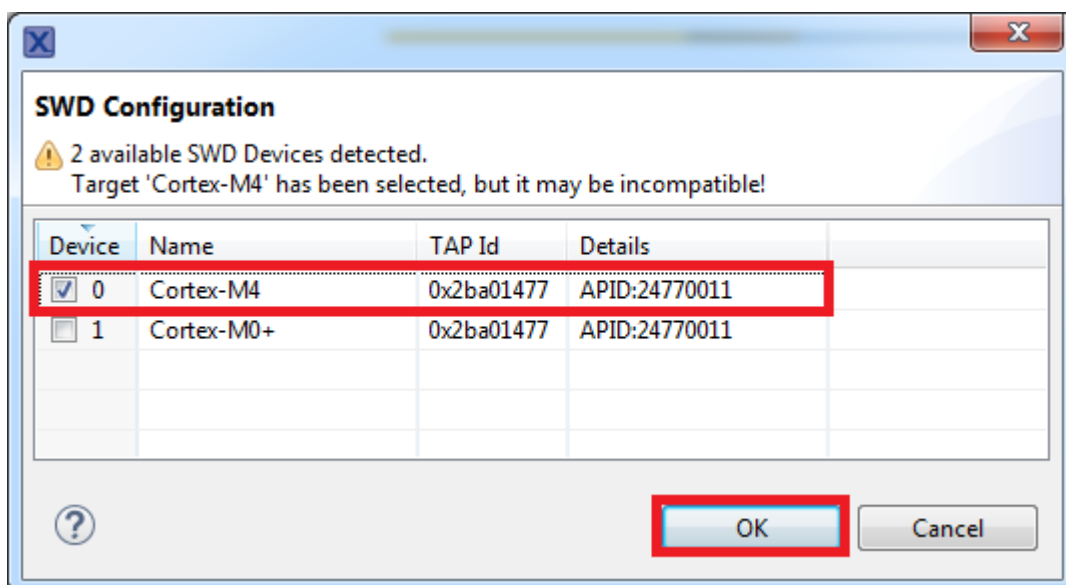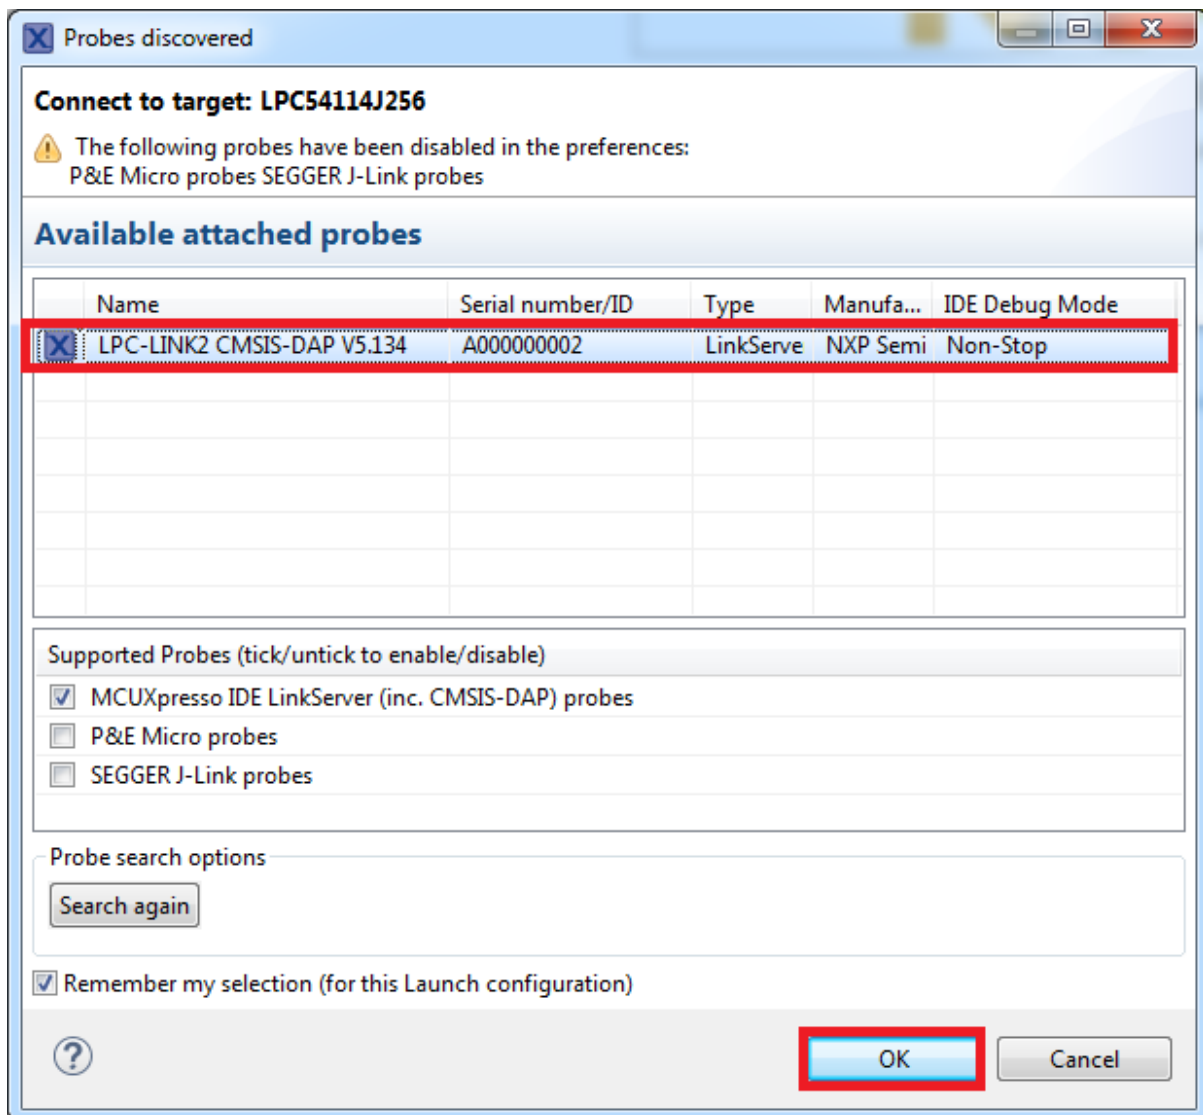

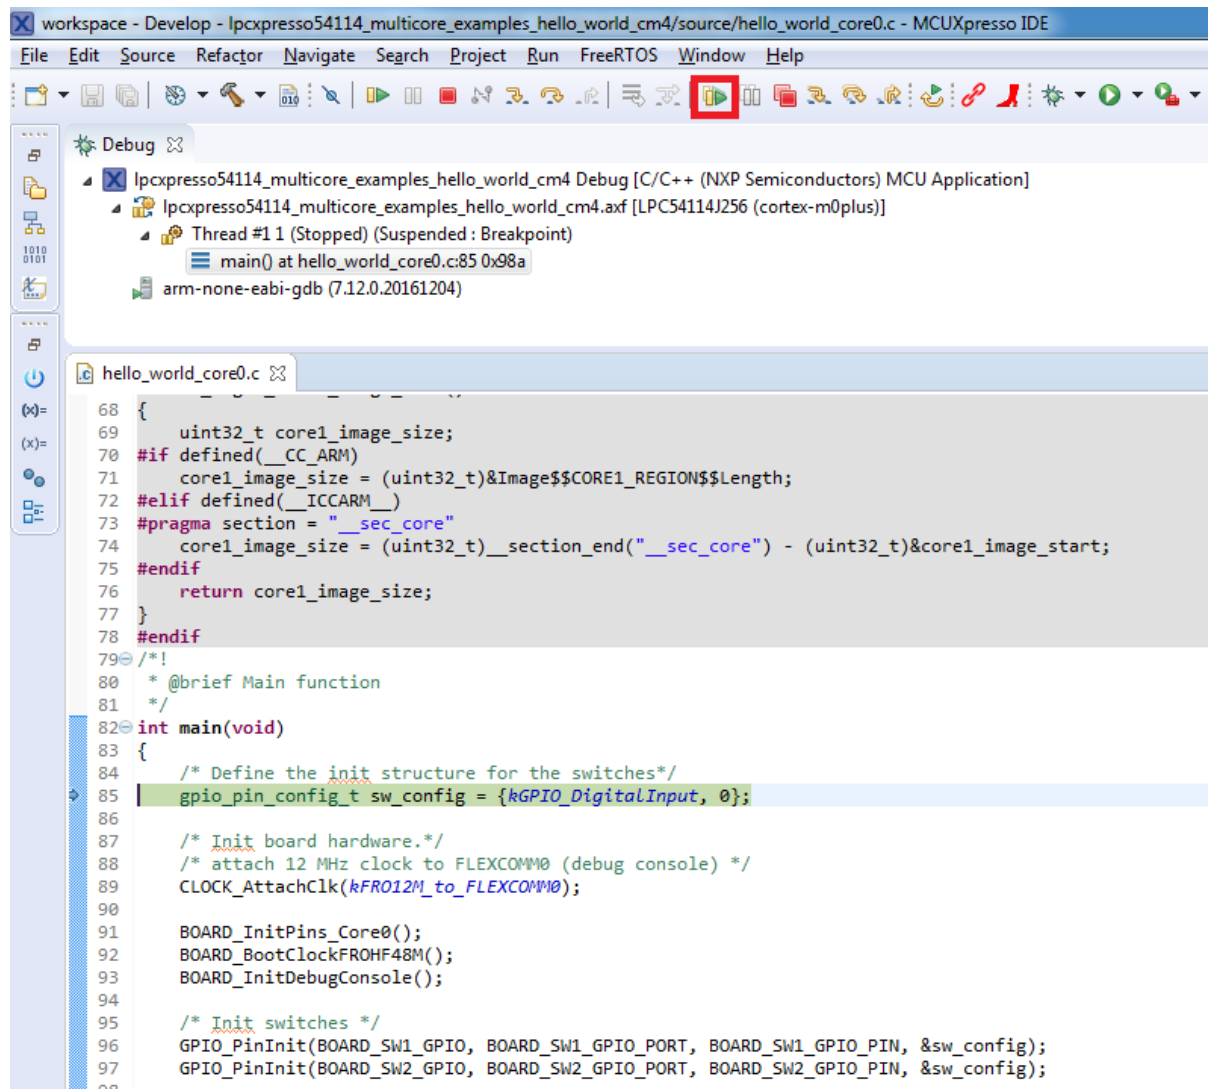



After clicking the “Resume All Debug sessions” button, the hello_world multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

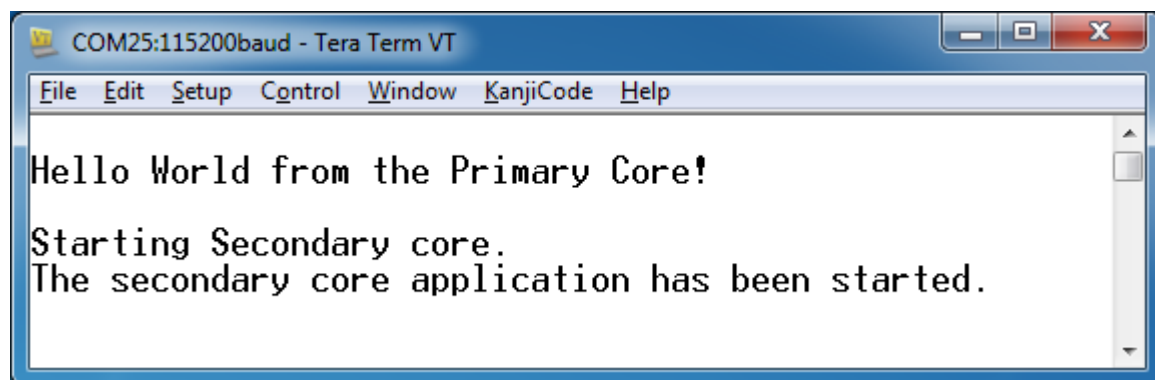


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the lpcxpresso54114_multicore_examples_hello_world_cm0plus project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

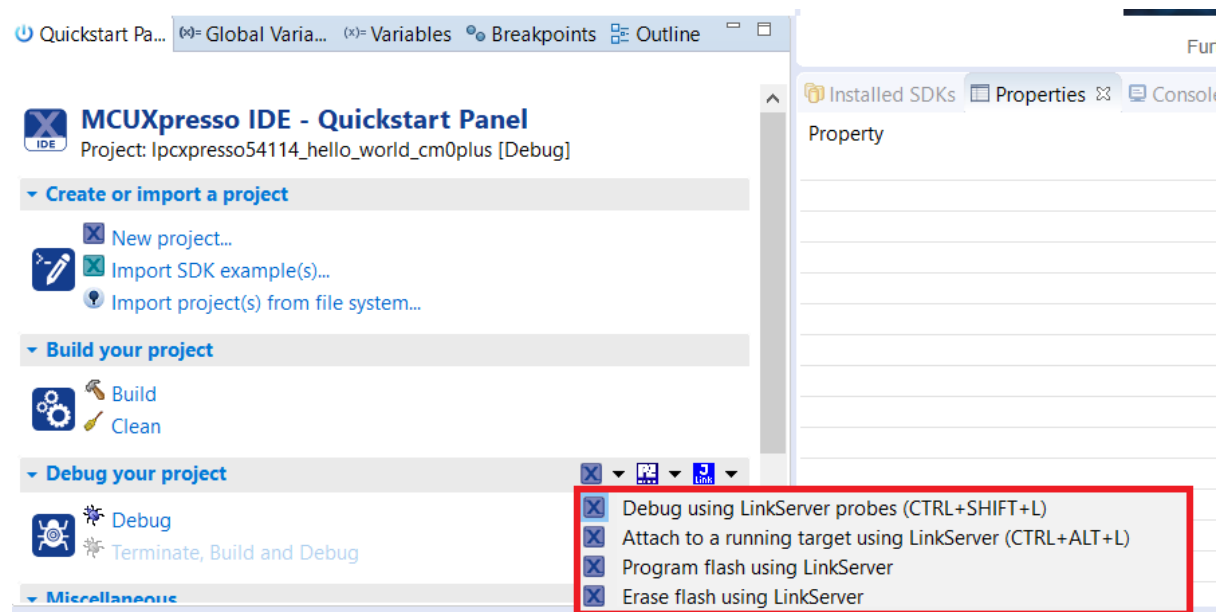


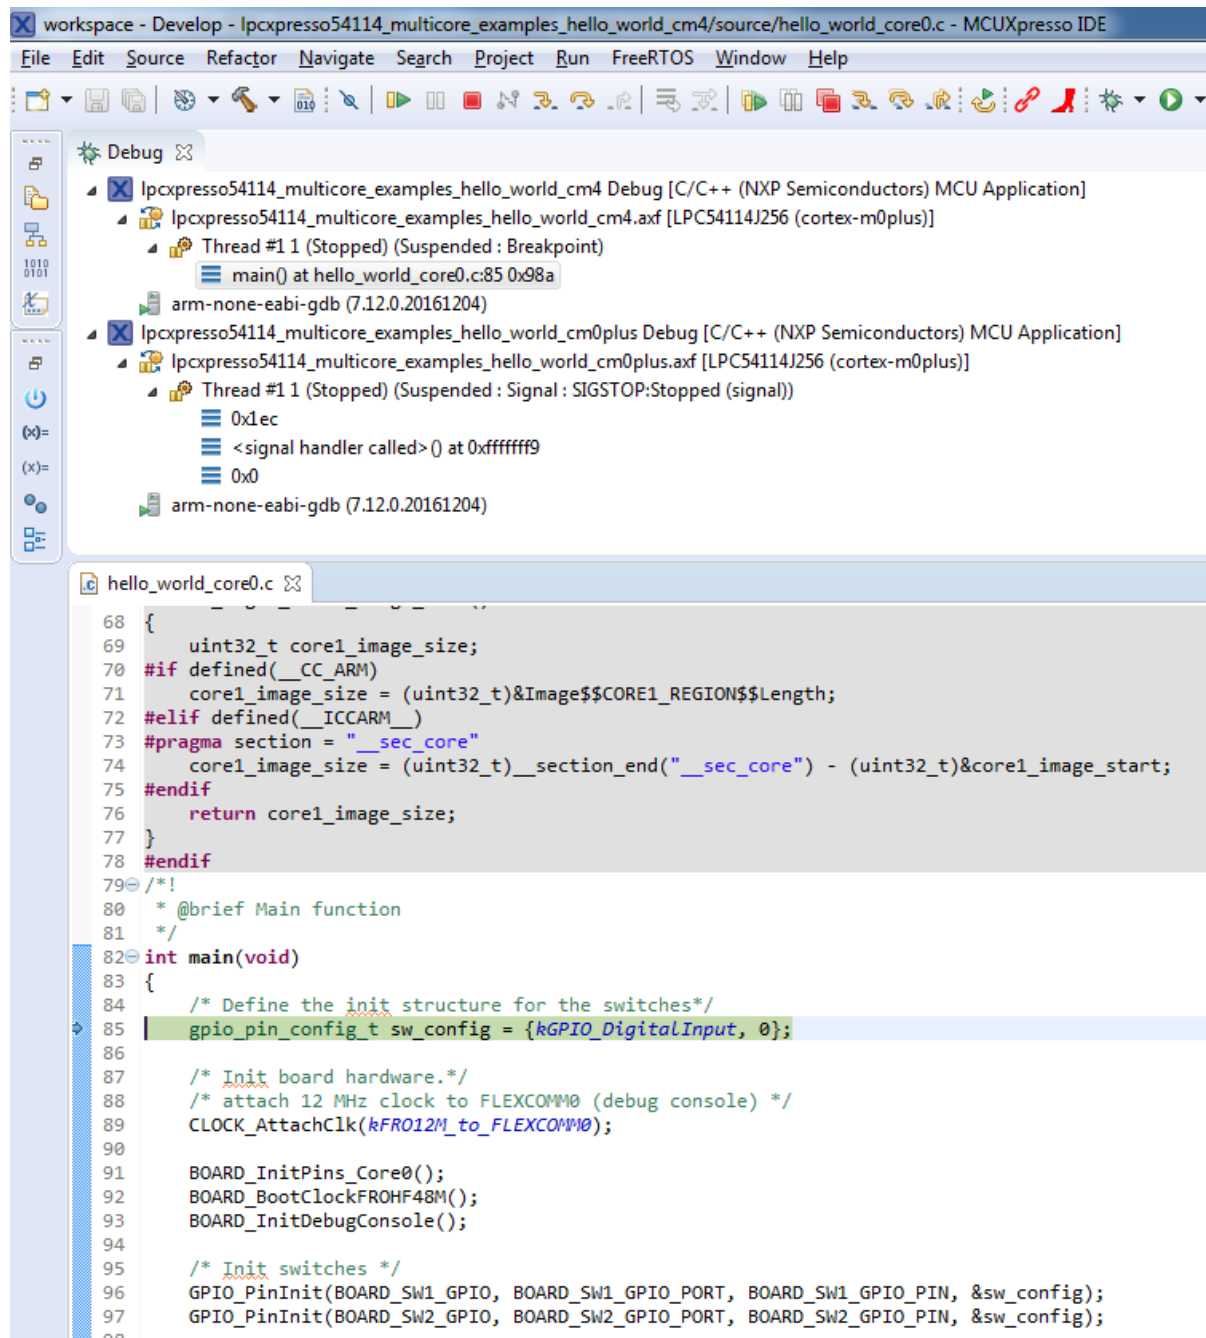


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

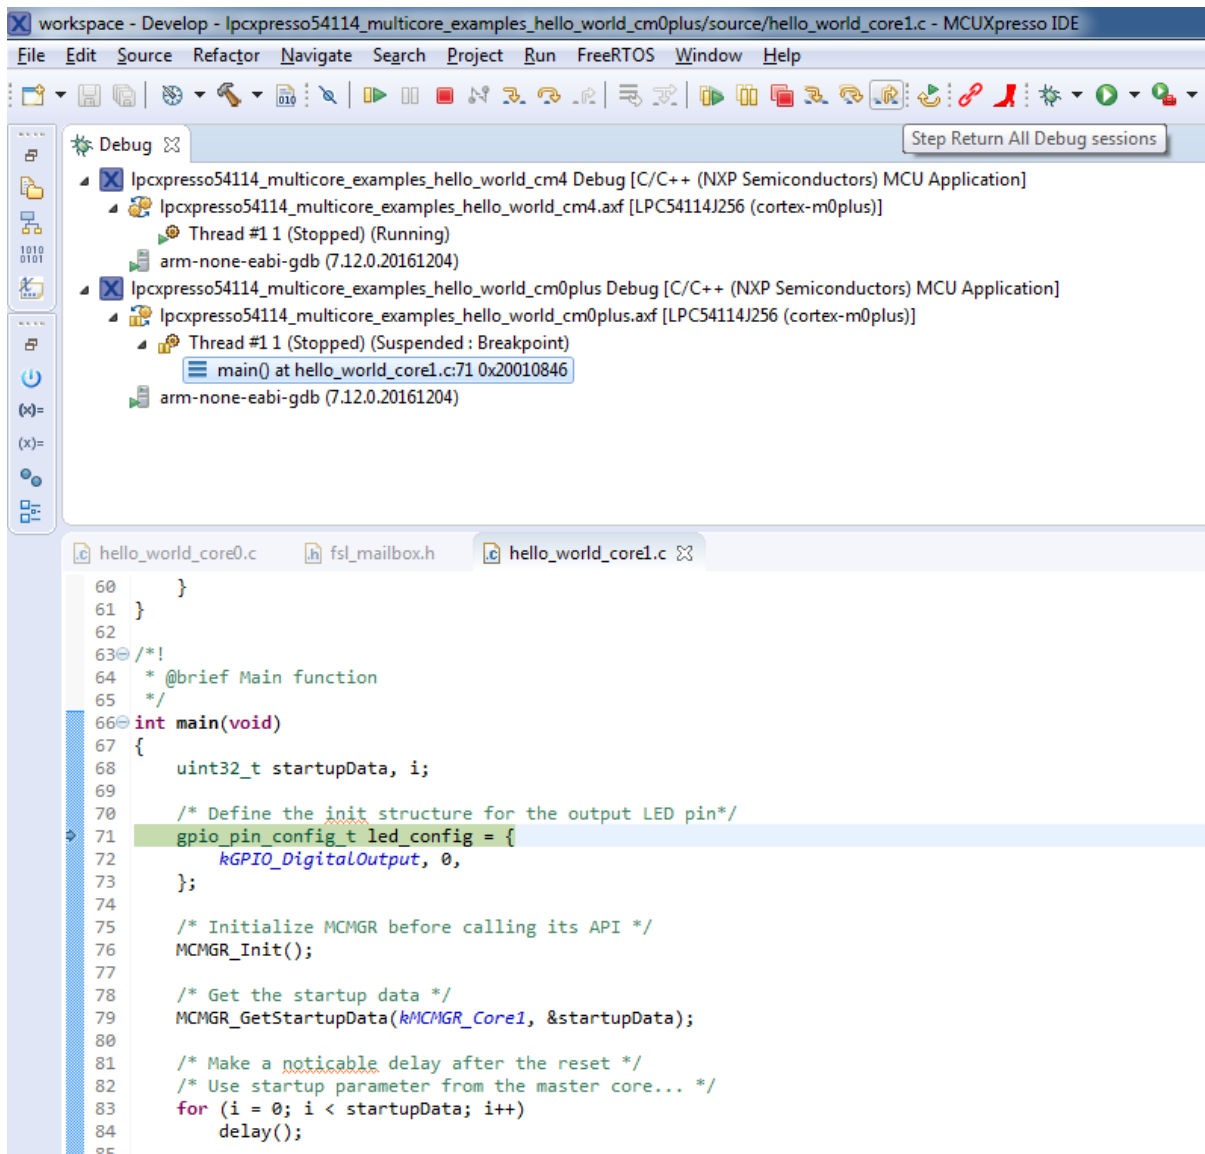


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

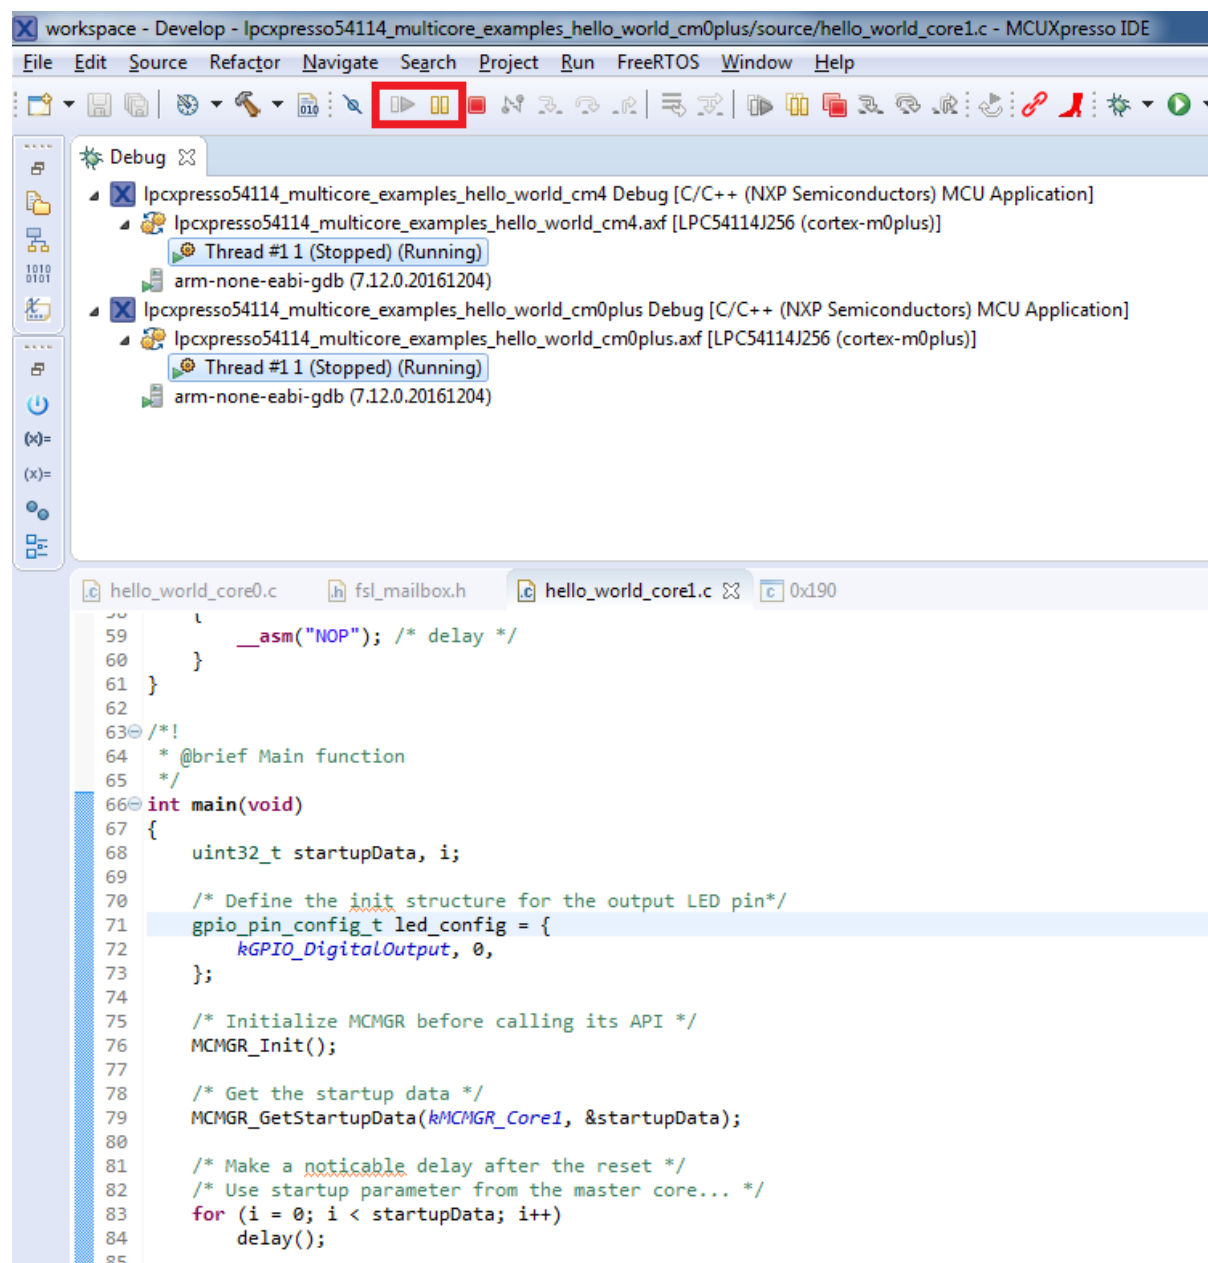

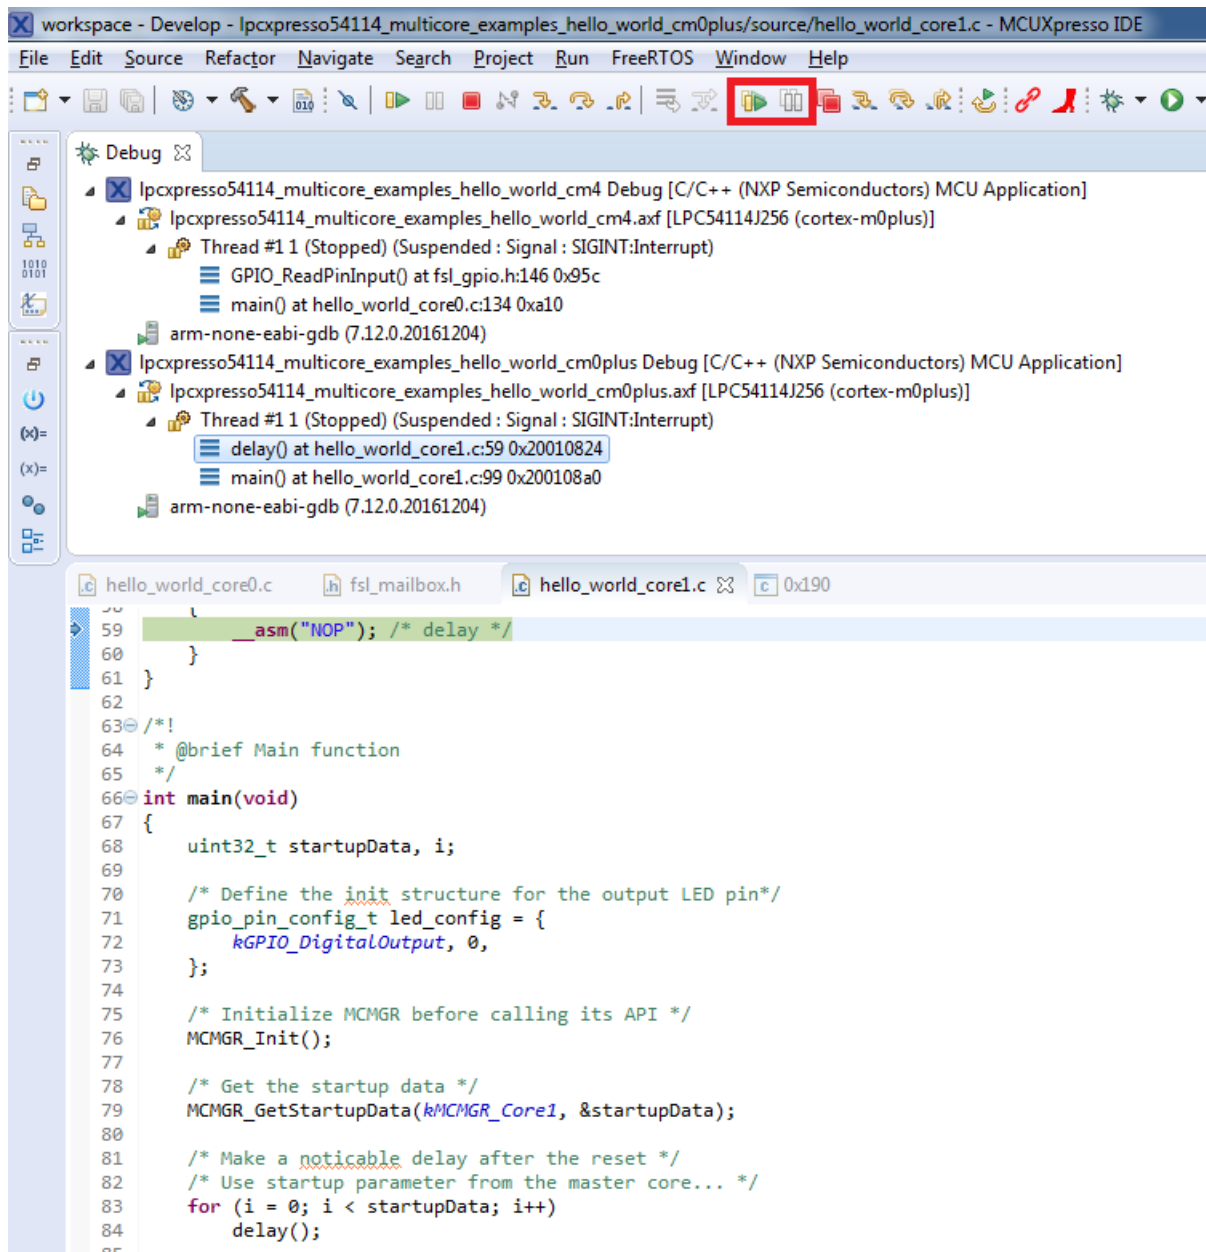


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the `hello_world` example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the `trustzone_examples/` folder and select `hello_world_s`. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

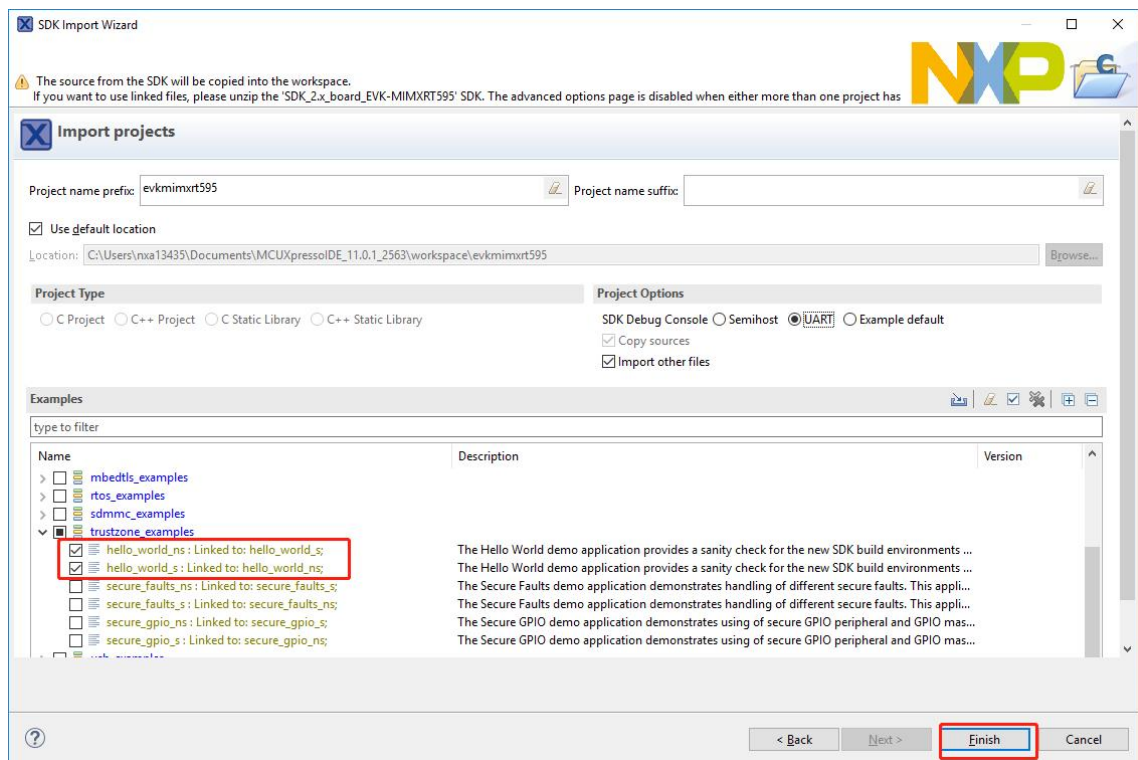


3. Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

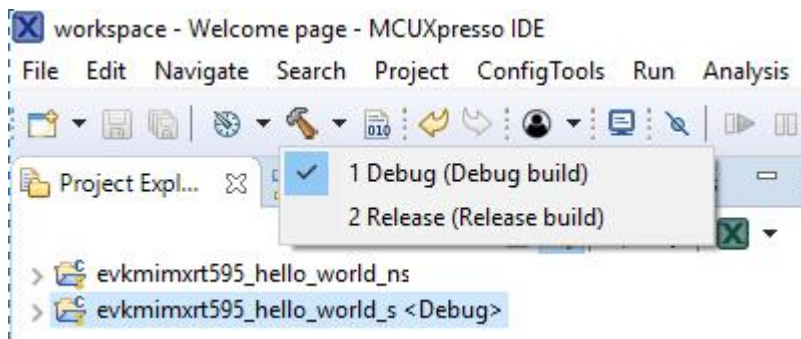


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

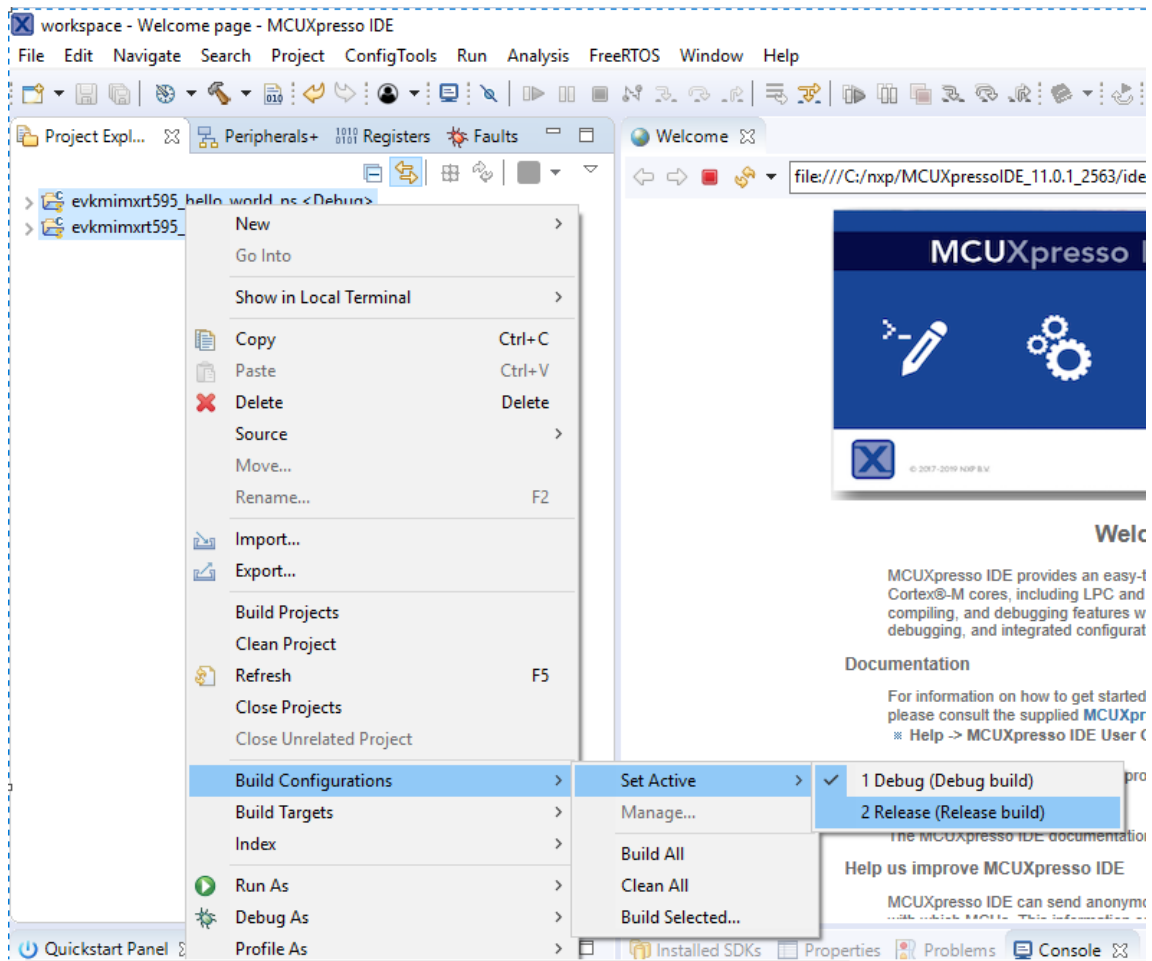

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring <board_name>_hello_world_s is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

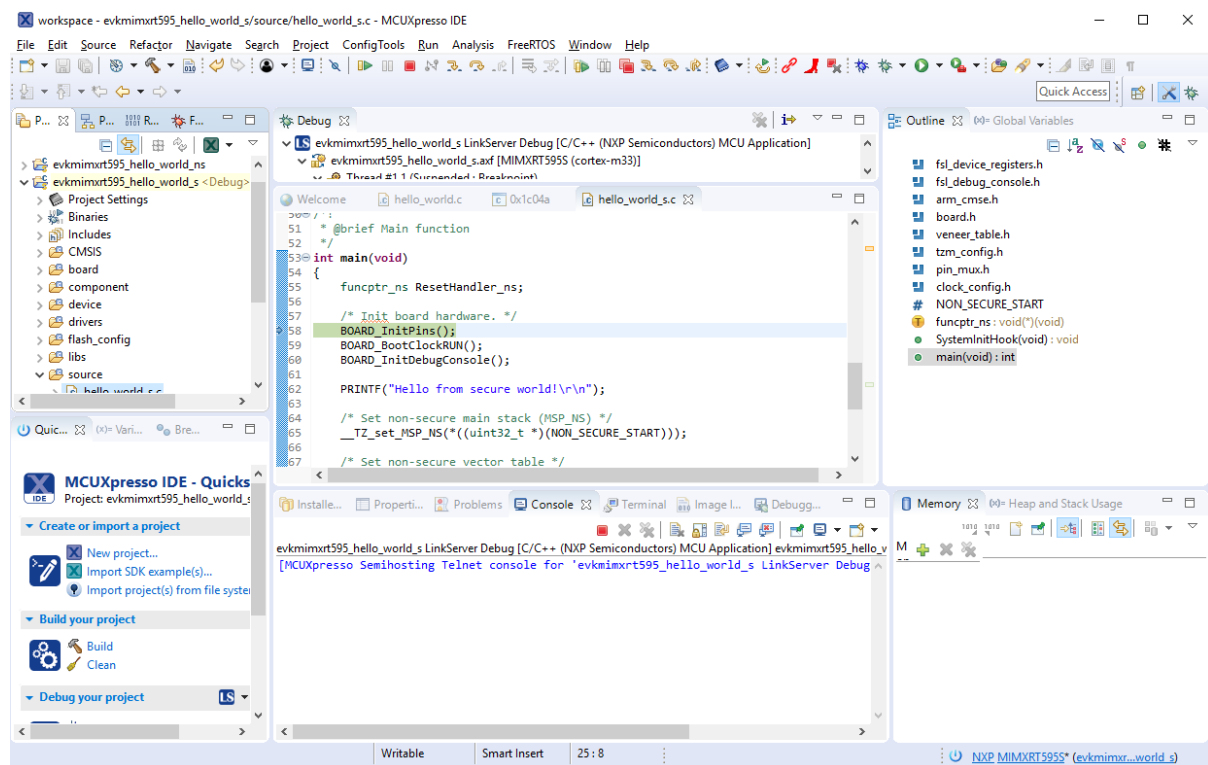

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

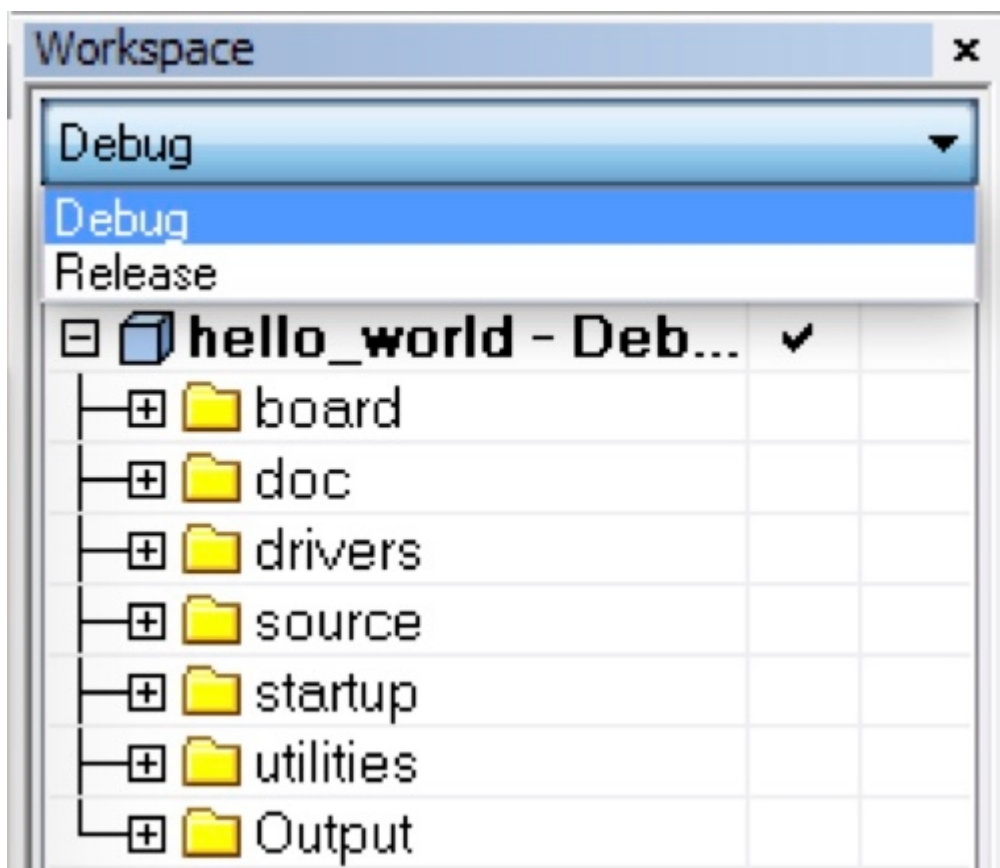


3. To build the demo application, click **Make**, highlighted in red in following figure.

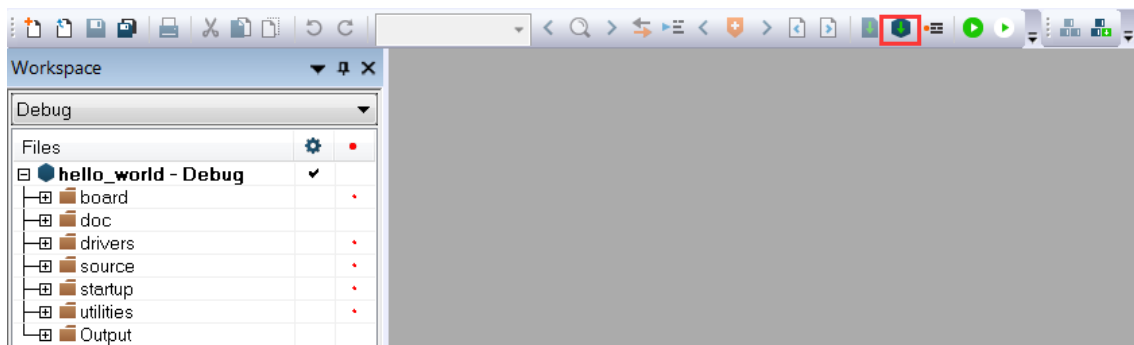

4. The build completes without errors.

Run an example application To download and run the application, perform these steps:

1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 2. No parity
 3. 8 data bits

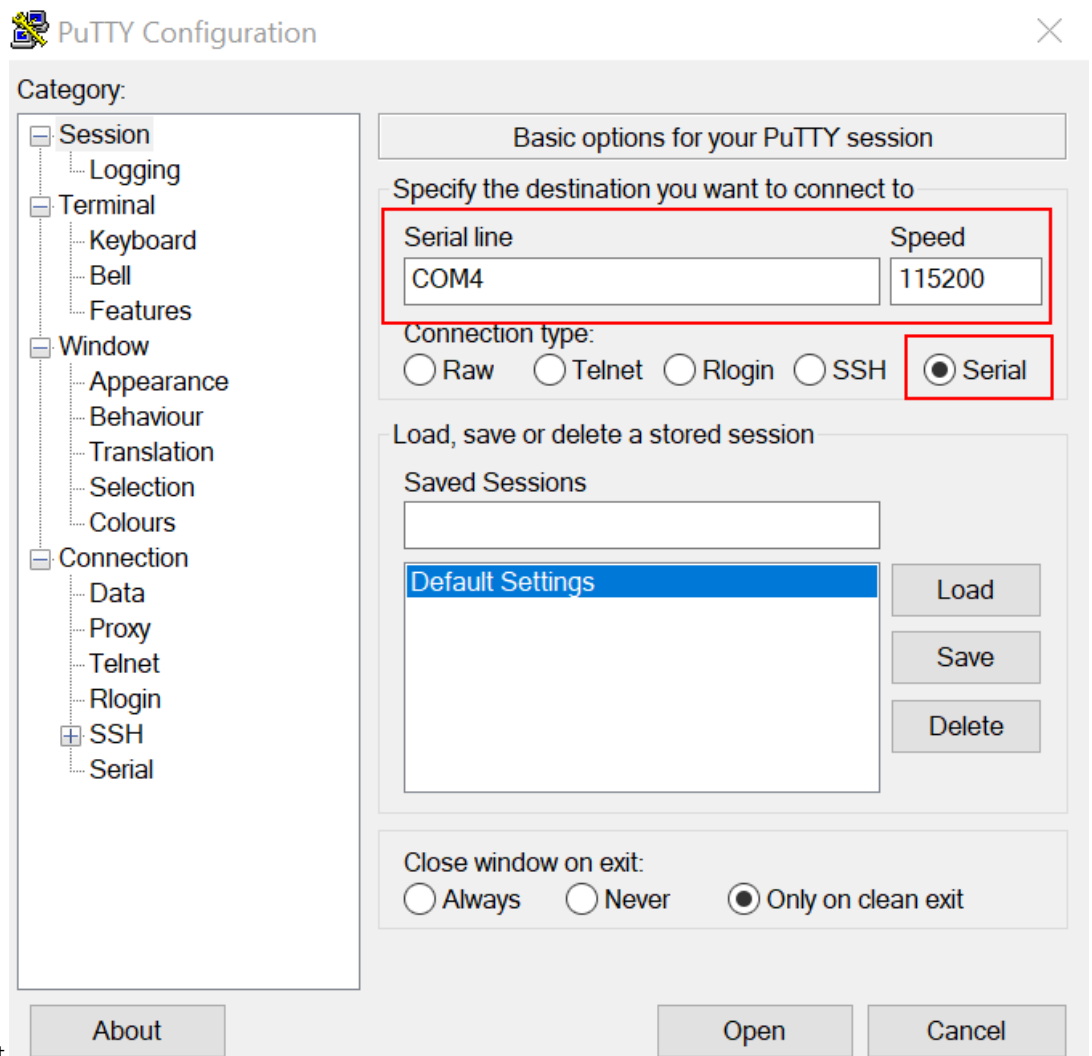


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the `main()` function.

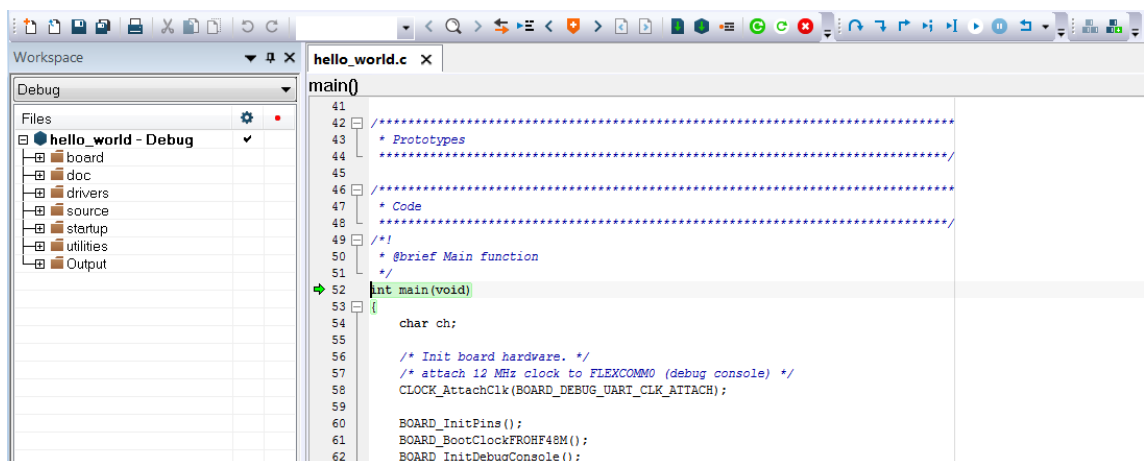

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
→ eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*function`.

Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

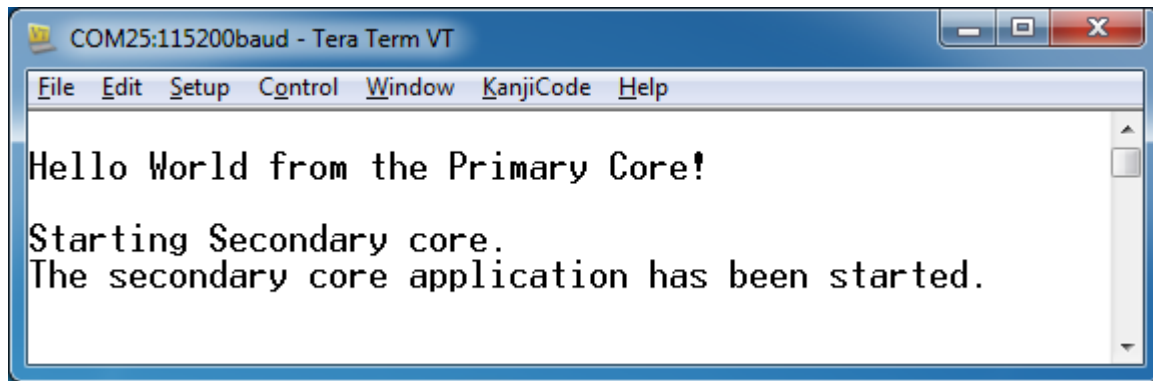

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/  
↪<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_  
↪ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.  
↪eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

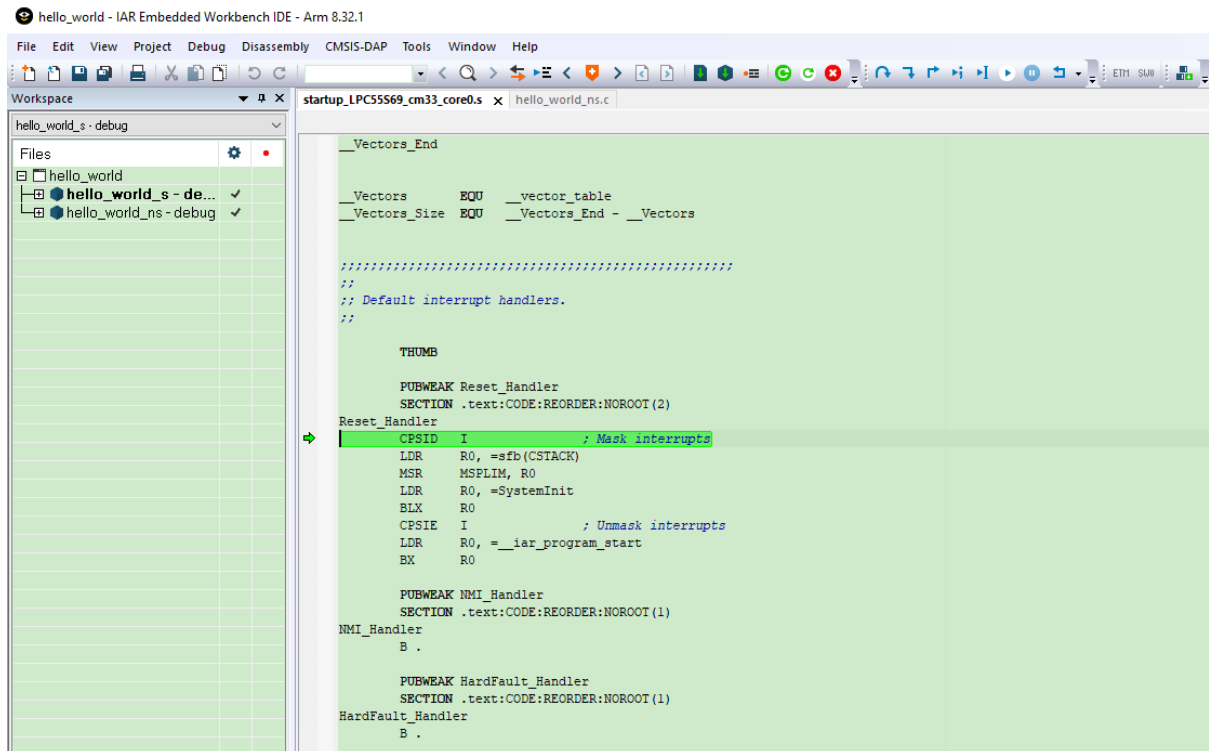


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

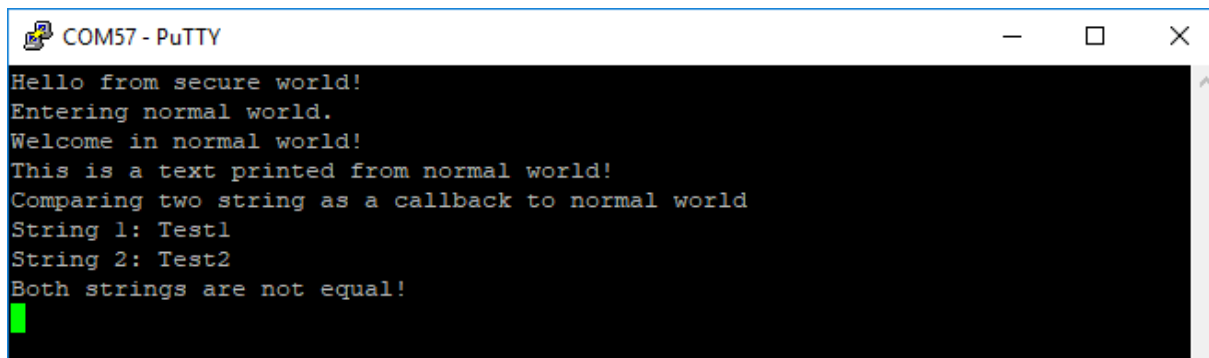


Note: If the application is running in RAM (debug/release build target), in **Options**>Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the __ns download issue on i.MXRT500.

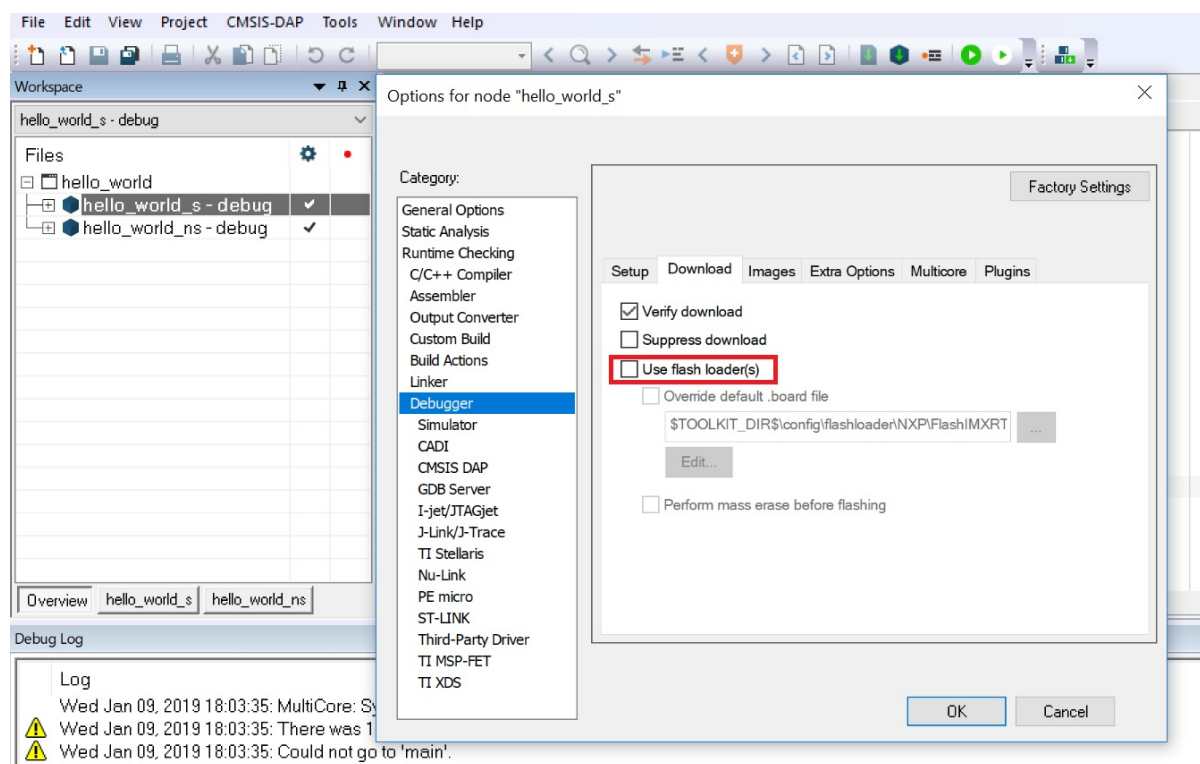

Run a demo using Keil MDK/µVision This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called µVision. In the IDE, select the **Pack Installer** icon.

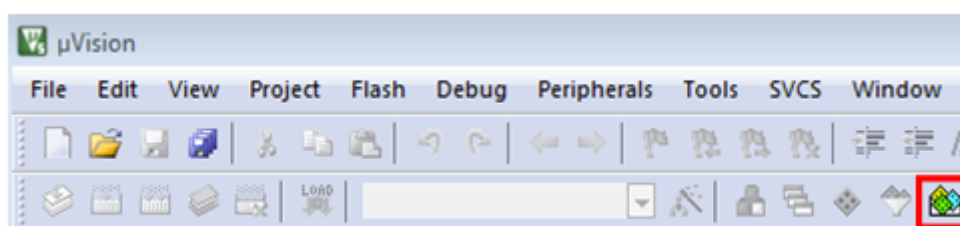

2. After the installation finishes, close the Pack Installer window and return to the µVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

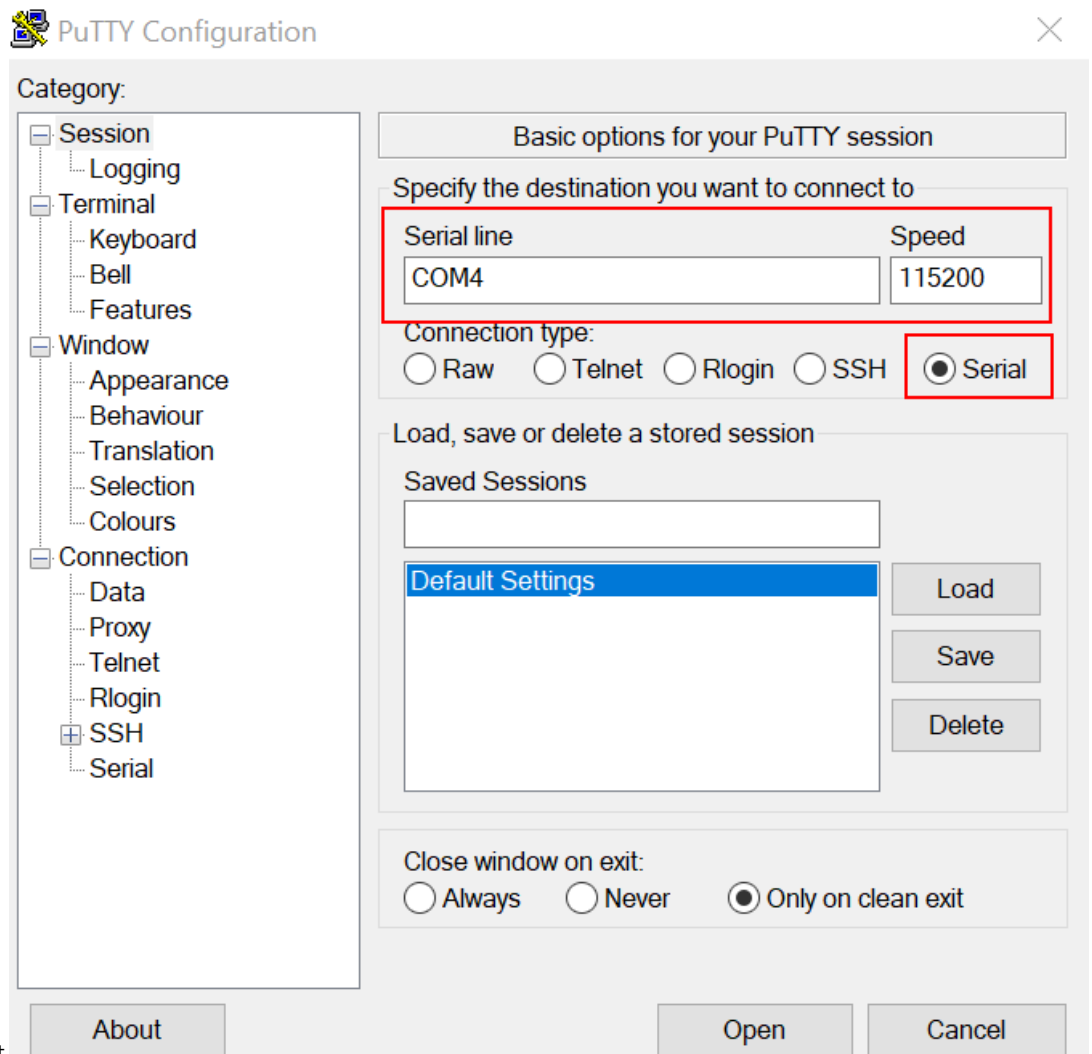


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

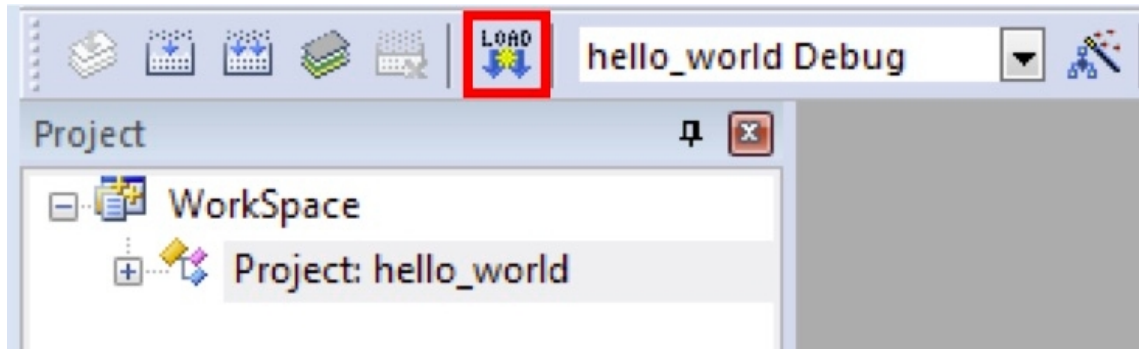

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

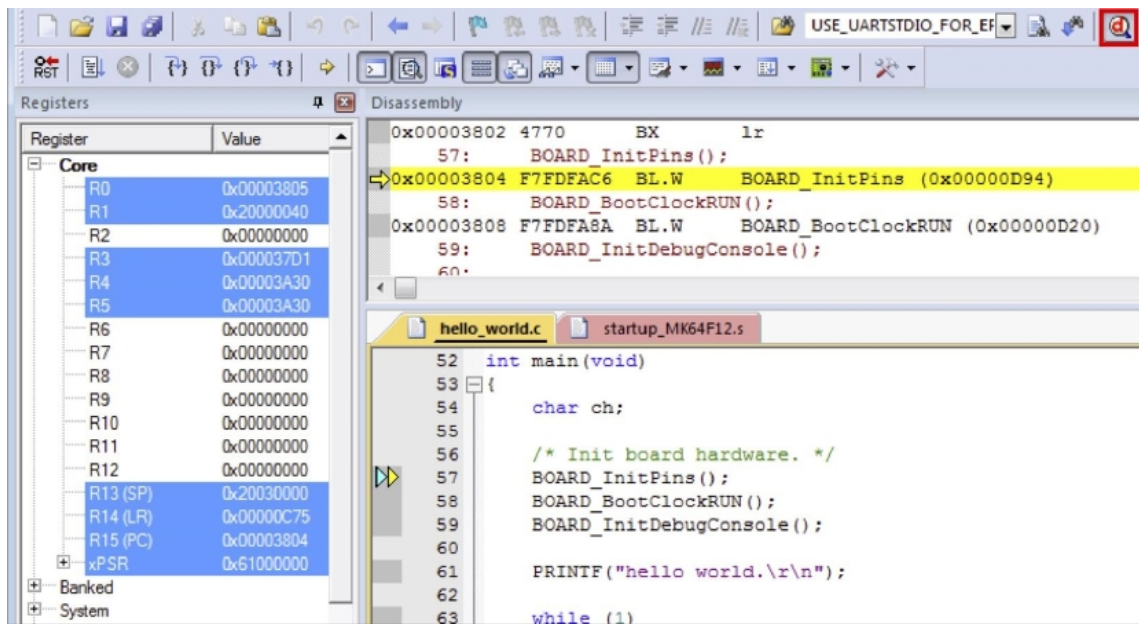

6. Run the code by clicking the **Run** button to start the application.

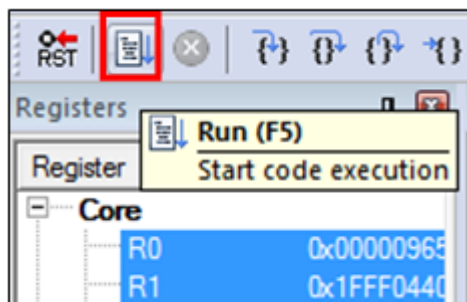

The hello_world application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/μVision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
→cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μVision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

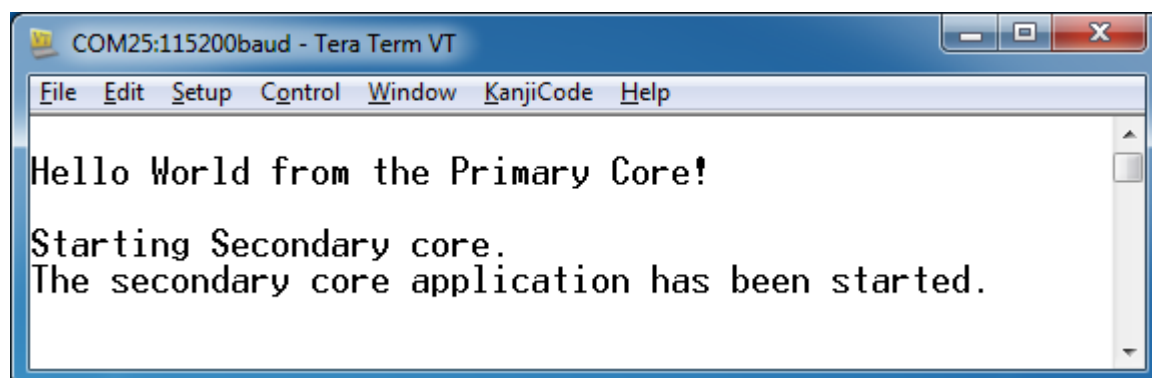

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

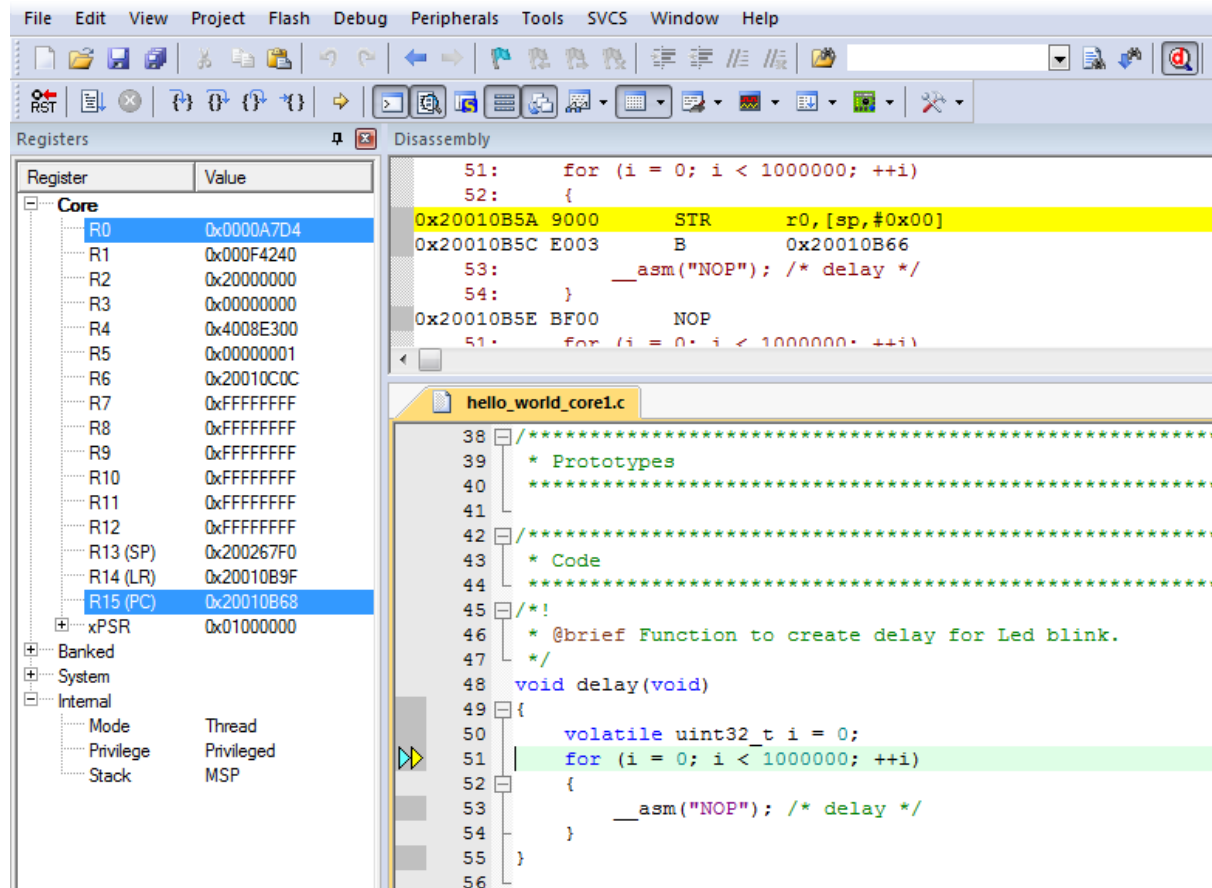

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪ mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪ mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪ uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
→ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

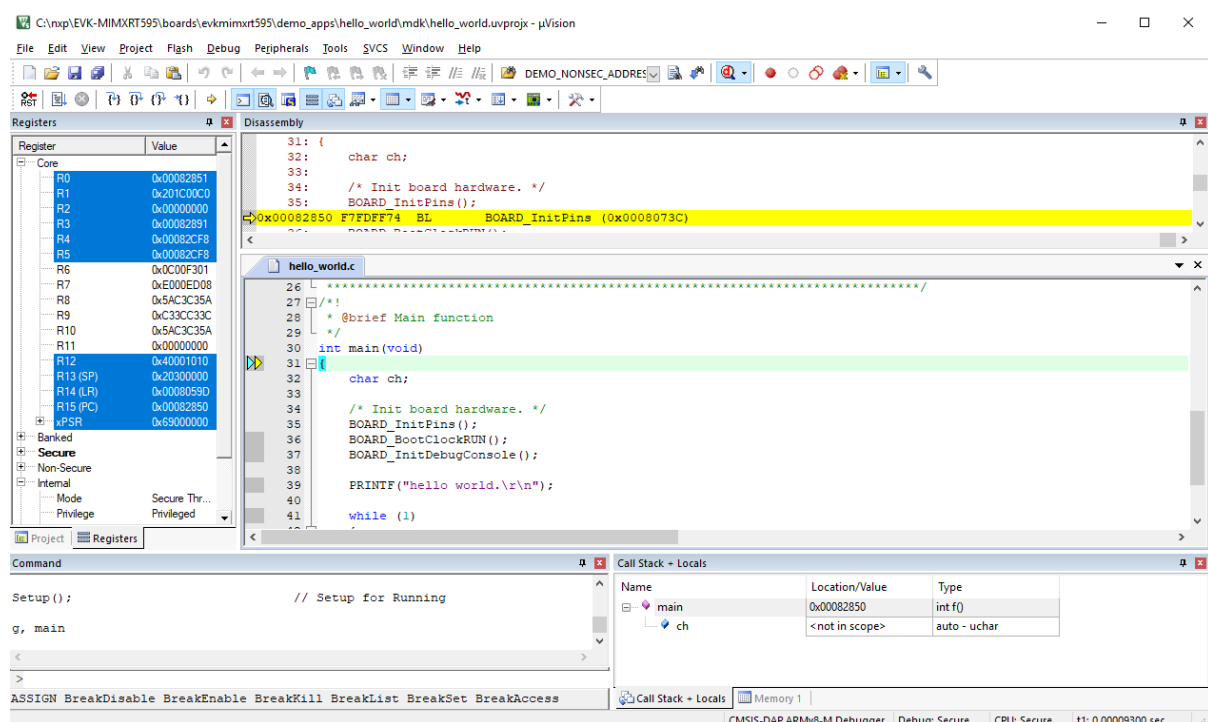

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

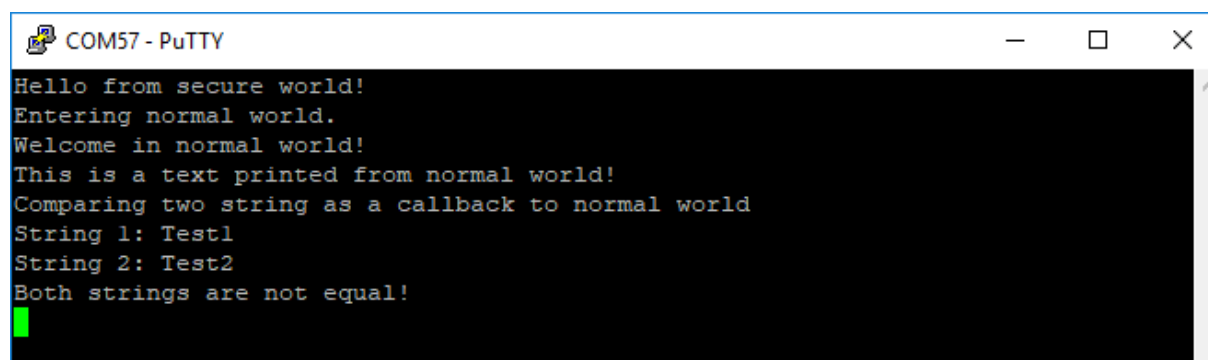

Run a demo using ARMGCC / VSCODE This section describes the steps to run an example application from the SDK archive using the ARMGCC / VSCODE toolchain.

Refer to the [running a demo using MCUXpresso VSC](#) section for detailed instructions on setting up and configuring your project in Visual Studio Code.

Refer to the [CLI](#) section for detailed instructions on building and running your project from the command line.

MCUXpresso Config Tools MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK µVision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:


```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.


2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. **P&E Micro:**




3. **J-Link:**



4. **P&E Micro OSJTAG:**



5. **MRB-KW01:**



On-board Debugger This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.

- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFULink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFULink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFULink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFULink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbed bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.


- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.
- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

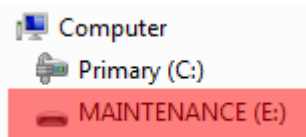

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER  
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA174	CMSIS-DAP	MCU-Link
FRDM-MCXA266	CMSIS-DAP	MCU-Link
FRDM-MCXA344	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXA366	CMSIS-DAP	MCU-Link
FRDM-MCXA577	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC162	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXE31B	CMSIS-DAP	MCU-Link

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then `extern "C"` should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

Repository-Layout SDK Package

Development Tools Installation This guide explains how to install the essential tools for development with the MCUXpresso SDK.

Quick Start: Automated Installation (Recommended) The **MCUXpresso Installer** is the fastest way to get started. It automatically installs all the basic tools you need.

1. **Download the MCUXpresso Installer** from: [MCUXpresso Installer](#)
2. **Run the installer** and select “**MCUXpresso SDK Developer**” from the menu
3. **Click Install** and let it handle everything automatically

Manual Installation If you prefer to install tools manually or need specific versions, follow these steps:

Essential Tools

Git - Version Control **What it does:** Manages code versions and downloads SDK repositories from GitHub.

Installation:

- Visit git-scm.com
- Download for your operating system
- Run installer with default settings
- **Important:** Make sure “Add Git to PATH” is selected during installation

Setup:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python - Scripting Environment **What it does:** Runs build scripts and SDK tools.

Installation:

- Install Python **3.10 or newer** from python.org
- **Important:** Check “Add Python to PATH” during installation

West - SDK Management Tool **What it does:** Manages SDK repositories and provides build commands. The west tool is developed by the Zephyr project for managing multiple repositories.

Installation:

```
pip install -U west
```

Minimum version: 1.2.0 or newer

Build System Tools

CMake - Build Configuration **What it does:** Configures how your projects are built.

Recommended version: 3.30.0 or newer

Installation:

- **Windows:** Download .msi installer from cmake.org/download
- **Linux:** Use package manager or download from cmake.org
- **macOS:** Use Homebrew (brew install cmake) or download from cmake.org

Ninja - Fast Build System **What it does:** Compiles your code quickly.

Minimum version: 1.12.1 or newer

Installation:

- **Windows:** Usually included, or download from ninja-build.org
- **Linux:** sudo apt install ninja-build or download binary
- **macOS:** brew install ninja or download binary

Ruby - IDE Project Generation (Optional) **What it does:** Generates project files for IDEs like IAR and Keil.

When needed: Only if you want to use traditional IDEs instead of VS Code.

Installation: Follow the Ruby environment setup guide

Compiler Toolchains Choose and install the compiler toolchain you want to use:

Toolchain			Best For	Download Link		Environment Variable
ARM GCC (Recommended)	(Recommended)		Most users, free	ARM Toolchain	GNU	ARMGCC_DIR
	IAR EWARM		Professional development	IAR Systems		IAR_DIR
Keil MDK			ARM ecosystem	ARM Developer		MDK_DIR
ARM Compiler			Advanced optimization	ARM Developer		ARMCLANG_DIR

Setting Up Environment Variables After toolchain installation, set an environment variable so the build system locates it:

Windows:

```
# Example for ARM GCC installed in C:\armgcc
setx ARMGCC_DIR "C:\armgcc"
```

Linux/macOS:

```
# Add to ~/.bashrc or ~/.zshrc
export ARMGCC_DIR="/usr" # or your installation path
```

Verify Your Installation After installation, verify everything works by opening a terminal/command prompt and running these commands:

```
# Check each tool - you should see version numbers
git --version
python --version
west --version
cmake --version
ninja --version
arm-none-eabi-gcc --version # (if using ARM GCC)
```

Troubleshooting Installation Issues “Command not found” errors:

- The tool isn’t in your system PATH
- **Solution:** Add the installation directory to your PATH environment variable

Python/pip issues:

- Try using python3 and pip3 instead of python and pip
- On Windows, run the Command Prompt as an Administrator

Slow downloads:

- Add timeout option: `pip install -U west --default-timeout=1000`
- Use alternative mirror: `pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple`

Building Your First Project This guide explains how to build and run your first SDK example project using the west build system. This applies to both GitHub Repository SDK and Repository-Layout SDK Package.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development board connected via USB
- Build tools installed per [Installation Guide](#)

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:


```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Process

Simple Build Build the hello_world example with default settings:

```
west build -b your_board examples/demo_apps/hello_world
```

The default toolchain is armgcc, and the build system will select the first debug target as default if no config is specified.

Specifying Configuration

```
# Release build
west build -b your_board examples/demo_apps/hello_world --config release
```

```
# Debug build (default)
west build -b your_board examples/demo_apps/hello_world --config debug
```

Alternative Toolchains

```
# IAR toolchain
west build -b your_board examples/demo_apps/hello_world --toolchain iar
```

```
# Other toolchains as supported by the example
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config ↵
↵ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_ ↵
↵ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Flash an Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Start a debug session:

```
west debug -r linkserver
```

Common Build Options

Clean Build Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See the commands that get executed without running them:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device DEVICE_PART_NUMBER --config ↵  
↵release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b your_board examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Getting Help View the help information for west build:

```
west build -h
```

Check Supported Configurations To see available configuration options and board targets for an example, refer to the below command:

```
west list_project -p examples/demo_apps/hello_world
```

Next Steps

- Explore other examples in the SDK
- Learn about [Command Line Development](#) for advanced options
- Try [VS Code Development](#) for integrated development
- Refer [Workspace Structure](#) to understand the SDK layout

MCUXpresso for VS Code Development This guide covers using MCUXpresso for VS Code extension to build, debug, and develop SDK applications with an integrated development environment.

Prerequisites

- SDK workspace initialized (GitHub Repository SDK or Repository-Layout SDK Package)
- Development tools installed per [Installation Guide](#)
- Visual Studio Code installed
- MCUXpresso for VS Code extension installed


Extension Installation

Install MCUXpresso for VS Code The MCUXpresso for VS Code extension provides integrated development capabilities for MCUXpresso SDK projects. Refer to the [MCUXpresso for VS Code documentation](#) for detailed installation and setup instructions.

SDK Import and Setup


Import Methods The SDK can be imported in several ways. The MCUXpresso for VS Code extension supports both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Import GitHub Repository SDK Click **Import Repository** from the **QUICKSTART PANEL**

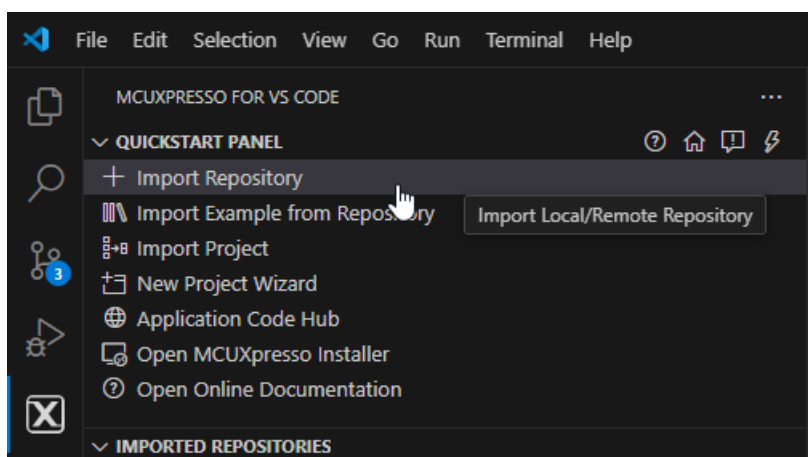


Note: You can import the SDK in several ways. Refer to the [MCUXpresso for VS Code documentation](#) for details.

Select **Local** if you've already obtained the SDK according to [setting up the repo](#). Select your location and click **Import**.

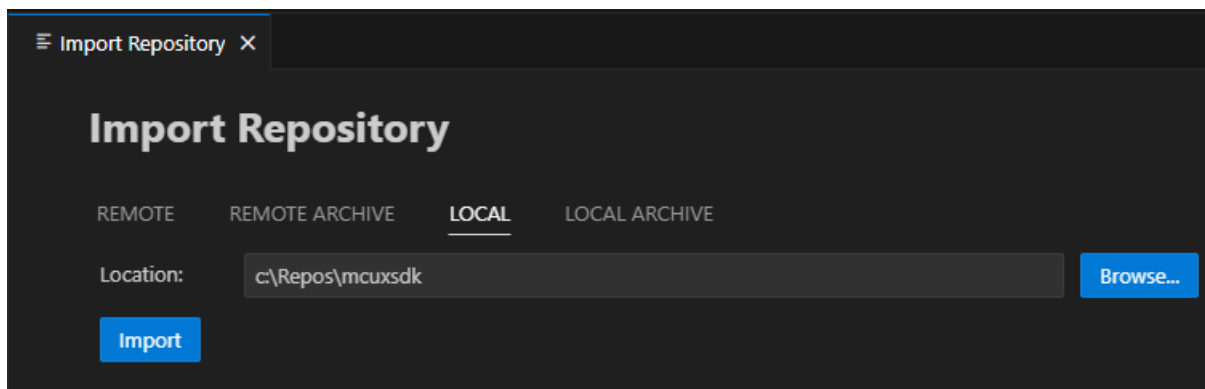


Import Repository-Layout SDK Package Click **Import Repository** from the **QUICKSTART**

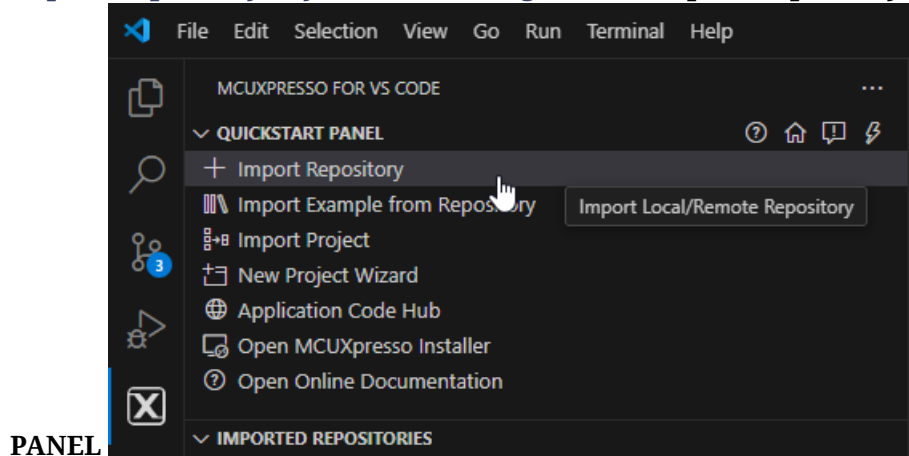


PANEL

Select **Local** if you've already unzipped the Repository-Layout SDK Package. Select your location and click **Import**.

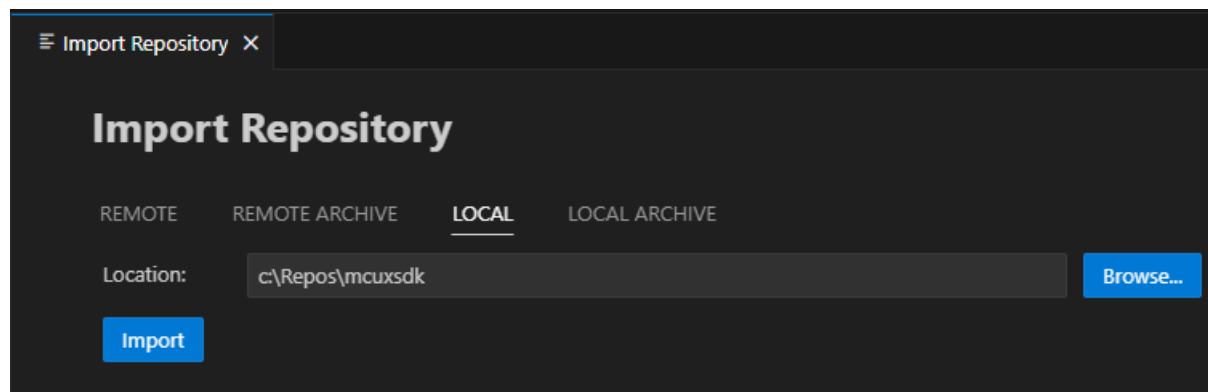


Else if the SDK is ZIP archive, select **Local Archive**, browse to the downloaded SDK ZIP file, fill the link of expect location, then click **Import**.

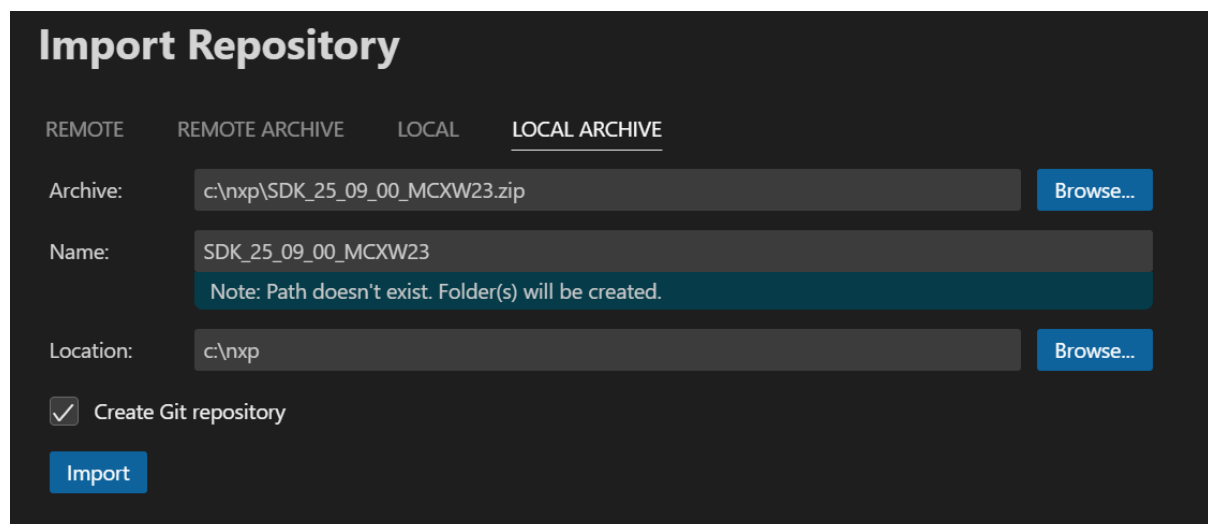

Building Example Applications

Import Example Project


1. Click **Import Example from Repository** from the **QUICKSTART PANEL**

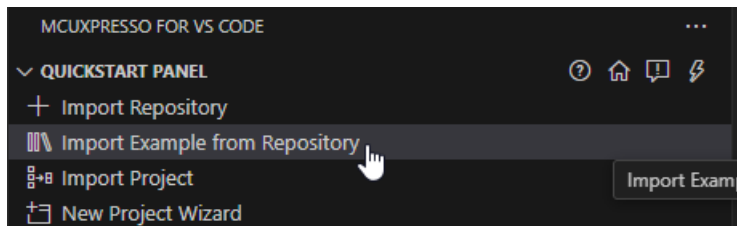

2. Configure project settings:

- **MCUXpresso SDK:** Select your imported SDK
- **Arm GNU Toolchain:** Choose toolchain
- **Board:** Select your target development board
- **Template:** Choose example category
- **Application:** Select specific example (e.g., hello_world)
- **App type:** Choose between Repository applications or Freestanding applications

3. Click **Import**

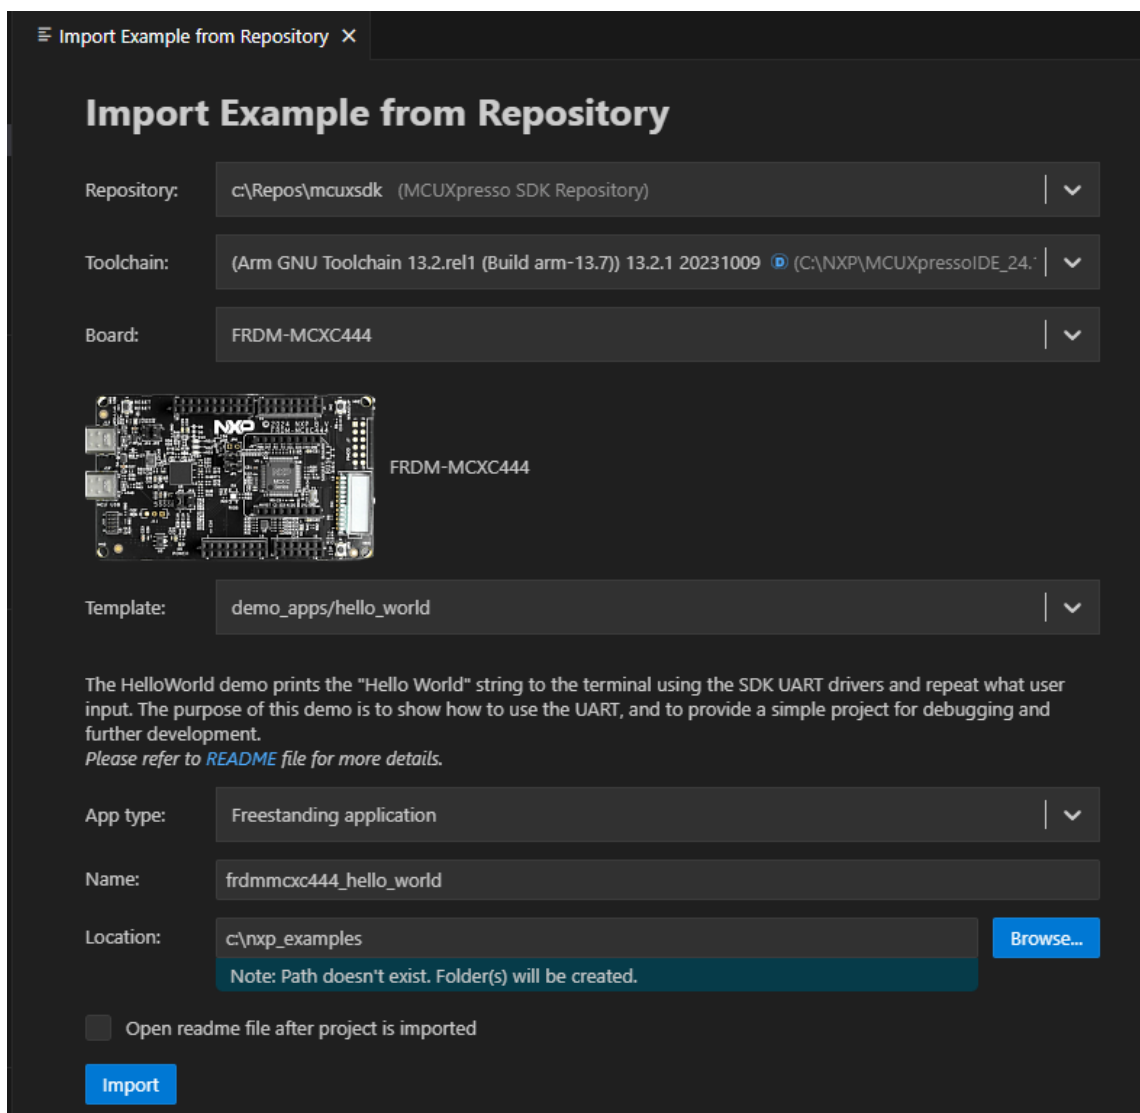

Application Types Repository Applications:

- Located inside the MCUXpresso SDK
- Integrated with SDK workspace

Freestanding Applications:


- Imported to user-defined location
- Independent of SDK location

Trust Confirmation VS Code will prompt you to confirm if the imported files are trusted. Click **Yes** to proceed.

Building Projects

Build Process

1. Navigate to **PROJECTS** view
2. Find your project
3. Click the **Build Project** icon

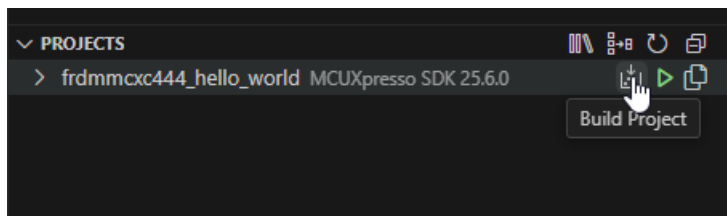


The integrated terminal will display build output at the bottom of the VS Code window.

Running and Debugging

Serial Monitor Setup


1. Open **Serial Monitor** from VS Code's integrated terminal

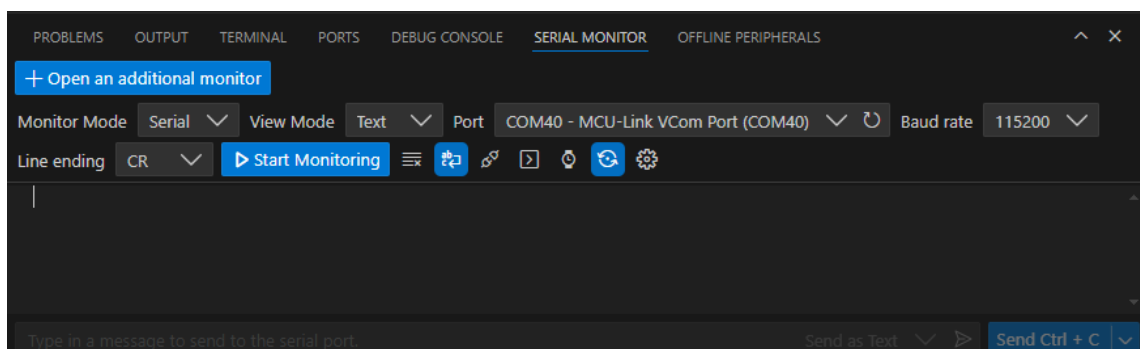

2. Configure serial settings:
 - **VCom Port:** Select port for your device
 - **Baud Rate:** Set to 115200

Debug Session


1. Navigate to **PROJECTS** view
2. Click the play button to initiate a debug session

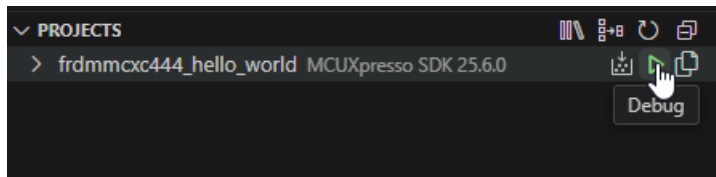

The debug session will begin with debug controls initially at the top of the interface.


Debug Controls Use the debug controls to manage execution:

- **Continue:** Resume code execution
- **Step controls:** Navigate through code

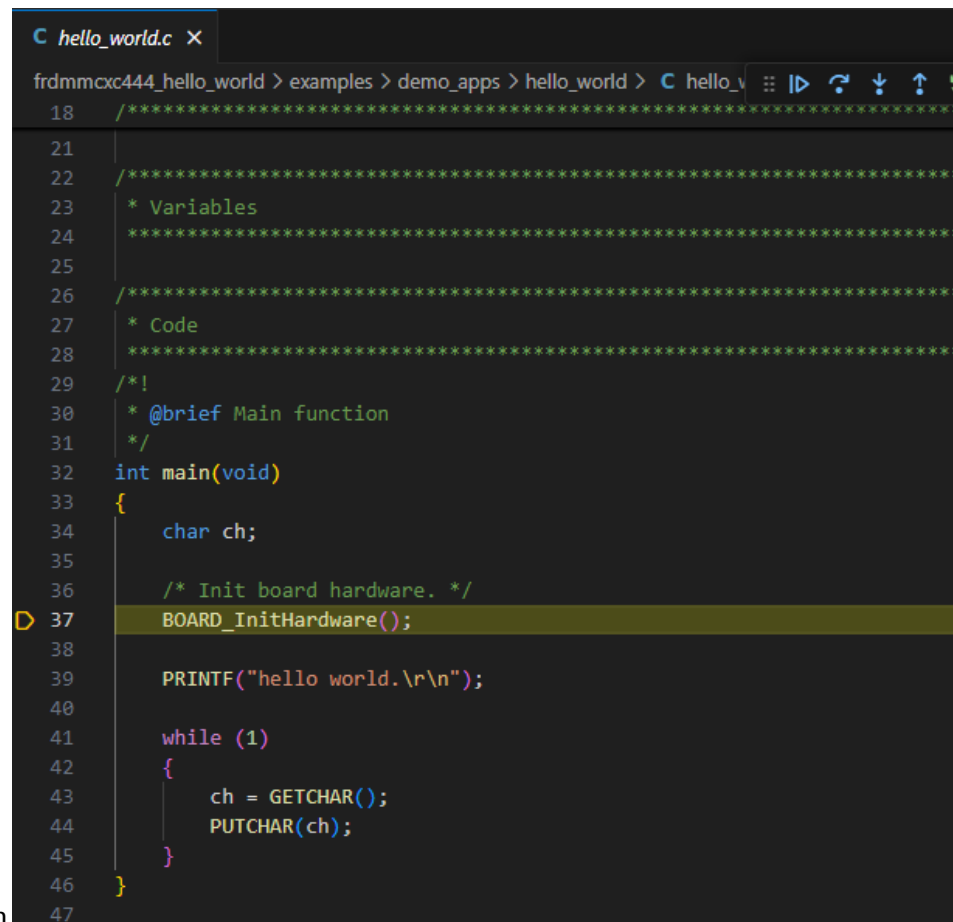

- **Stop:** Terminate debug session

Monitor Output Observe application output in the **Serial Monitor** to verify correct operation.

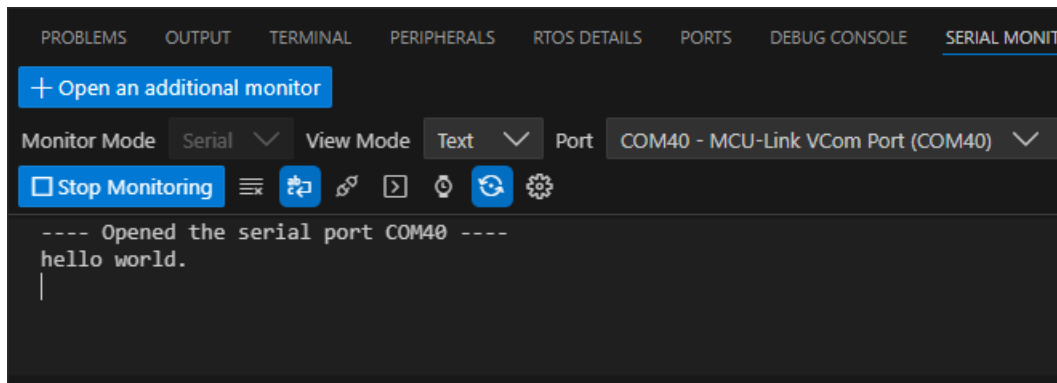

Debug Probe Support For comprehensive information on debug probe support and configuration, refer to the [MCUXpresso for VS Code Debug documentation](#).

Project Configuration

Workspace Management The extension integrates with the MCUXpresso SDK workspace structure, providing access to:

- Example applications
- Board configurations
- Middleware components
- Build system integration

Multi-Project Support The PROJECTS view allows management of multiple imported projects within the same workspace.

Troubleshooting

Import Issues SDK not detected:

- Verify SDK workspace is properly initialized
- Ensure all required repositories are updated
- Check SDK manifest files are present

Project import failures:

- Confirm board support exists for selected example
- Verify toolchain installation
- Check example compatibility with selected board

Build Problems Build failures:

- Check integrated terminal for error messages
- Verify all dependencies are installed
- Ensure toolchain is properly configured

Debug Issues Debug session fails:

- Verify board connection via USB
- Check debug probe drivers are installed
- Confirm build completed successfully

Serial monitor problems:

- Verify correct VCom port selection
- Check baud rate configuration (115200)
- Ensure board drivers are installed

Integration with Command Line MCUXpresso for VS Code integrates with the underlying west build system, allowing seamless integration with command line workflows described in [Command Line Development](#).

Advanced Features

Project Types The extension supports both repository-based and freestanding project types, providing flexibility in project organization and SDK integration.

Build System Integration The extension leverages the MCUXpresso SDK build system, providing access to all build configurations and options available through command line tools.

Next Steps

- Explore additional examples in the SDK
- Review [Command Line Development](#) for advanced build options
- Refer to the [MCUXpresso for VS Code documentation](#) for detailed documentation
- Learn about [SDK Architecture](#) for better understanding of the development environment

Command Line Development This guide covers developing with the MCUXpresso SDK using command line tools and the west build system. This workflow applies to both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development tools installed per [Installation Guide](#)
- Target board connected via USB

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list _project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list _project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Commands

Standard Build Process Build with default settings (armgcc toolchain, first debug config):

```
west build -b your_board examples/demo_apps/hello_world
```

Specifying Build Configuration

Release build

```
west build -b your_board examples/demo_apps/hello_world --config release
```

Debug build with specific toolchain

```
west build -b your_board examples/demo_apps/hello_world --toolchain iar --config debug
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config ↵
↪ flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Shield Support For boards with shields:

```
west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0
```

Advanced Build Options

Clean Builds Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See what commands would be executed:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device MK22F12810 --config release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Flashing and Debugging

Flash Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Session Start a debugging session:

```
west debug -r linkserver
```

IDE Project Generation Generate IDE project files for traditional IDEs:

```
# Generate IAR project
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵
↵flexspi_nor_debug -p always -t guiproject
```

IDE project files are generated in mcuxsdk/build/<toolchain> folder.

Note: Ruby installation is required for IDE project generation. See [Installation Guide](#) for setup instructions.

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Toolchain Issues Verify environment variables are set correctly:

```
# Check ARM GCC
echo $ARMGCC_DIR
arm-none-eabi-gcc --version

# Check IAR (if using)
echo $IAR_DIR
```

Getting Help Display help information:

```
west build -h
west flash -h
west debug -h
```

Check Supported Configurations If unsure about supported options for an example:

```
west list_project -p examples/demo_apps/hello_world
```

Best Practices

Project Organization

- Keep custom projects outside the SDK tree
- Use version control for your application code
- Document any SDK modifications

Build Efficiency

- Use `-p` always for clean builds when troubleshooting
- Leverage `--dry-run` to understand build processes
- Use specific configs and toolchains to reduce build time

Development Workflow

1. Start with existing examples closest to your requirements
2. Copy and modify rather than building from scratch
3. Test with `hello_world` before moving to complex examples
4. Use configuration tools for pin muxing and clock setup

Next Steps

- Explore [VS Code Development](#) for integrated development experience
- Review [Workspace Structure](#) to understand SDK organization
- Refer build system documentation for advanced configurations

Workspace Structure After you initialize your SDK workspace, it creates a specific directory structure that organizes all SDK components. This structure is identical for both GitHub Repository SDK and Repository-Layout SDK Package.

Top-Level Organization

```
your-sdk-workspace/  
  manifests/      # West manifest repository  
  mcuxsdk/        # Main SDK content
```

The `mcuxsdk/` directory serves as your primary working directory and contains all the SDK components.

SDK Component Layout Based on the actual SDK structure, the main directories include:

Di- rec- tory	Contents	Purpose
arch/	Architecture-specific files	ARM CMSIS, build configurations
cmake/	Build system modules	CMake configuration and build rules
compo	Software components	Reusable software libraries and utilities
devices	Device support packages	MCU-specific headers, startup code, linker scripts
drivers	Peripheral drivers	Hardware abstraction layer for MCU peripherals
examp	Sample applications	Demonstration code and reference implementations
middle	Optional software stacks	Networking, graphics, security, and other libraries
rtos/	Operating system support	FreeRTOS integration
scripts	Build and utility scripts	West extensions and development tools
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.	

Example Organization Examples follow a two-tier structure separating common code from board-specific implementations:

Common Example Files

```
examples/demo_apps/hello_world/
  CMakeLists.txt      # Build configuration
  example.yml         # Example metadata
  hello_world.c       # Application source code
  Kconfig             # Configuration options
  readme.md           # General documentation
```

Board-Specific Files

```
examples/_boards/your_board/demo_apps/hello_world/
  app.h              # Board specific application header
  example_board_readme.md # Board specific documentation
  hardware_init.c    # Board specific hardware initialization
  pin_mux.c          # Pin multiplexing configuration
  pin_mux.h          # Pin multiplexing header definitions
  hello_world.bin     # Pre-built binary for quick testing
  hello_world.mex     # MCUXpresso Config Tools project file
  prj.conf           # Board specific Kconfig configuration
  reconfig.cmake     # Board specific cmake configuration overrides
```

Device Support Structure Device support is organized hierarchically by MCU family:

```
devices/
  MCX/          # MCU portfolio
    MCXW/       # MCU family
      MCXW235/  # Specific device
        MCXW235.h # Device register definitions
      drivers/   # Device-specific drivers
      gcc/       # GNU toolchain files
      iar/       # IAR toolchain files
      mcuxpresso/ # MCUXpresso IDE files
      startup_MCXW235.c # Startup and vector table
      system_MCXW235.c # System initialization
```

Middleware Organization Middleware components are categorized by functionality and maintained in separate repositories. Based on the manifest files, common middleware categories include:

- **Connectivity:** USB, TCP/IP, industrial protocols
- **Security:** Cryptographic libraries, secure boot
- **Wireless:** Bluetooth, IEEE 802.15.4, Wi-Fi
- **Graphics:** Display drivers, UI frameworks
- **Audio:** Processing libraries, voice recognition
- **Machine Learning:** Inference engines, neural networks
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Documentation Structure SDK documentation is distributed across multiple locations:

- docs/ - Core SDK documentation and build infrastructure
- Component repositories - API documentation and integration guides
- Board directories - Hardware-specific setup instructions

For complete documentation, refer to the [online documentation](#).

Understanding Example Structure Each example has **two README files**:

1. General README: examples/demo_apps/hello_world/readme.md

- What the example does
- General functionality description
- Common usage information

2. Board-Specific README: examples/_boards/{board_name}/demo_apps/hello_world/example_board_readme.md

- Board-specific setup instructions
- Hardware connections required
- Board-specific behavior notes

Tip: Always check both readme files - start with the general one, then read the board-specific one for detailed setup.

1.3 Getting Started with MCUXpresso SDK GitHub

1.3.1 Getting Started with MCUXpresso SDK Repository

Welcome to the **GitHub Repository SDK Guide**. This documentation provides instructions for setting up and working with the MCUXpresso SDK distributed in a **multi-repository model**. The SDK is distributed across multiple GitHub repositories and managed using the **Zephyr West** tool, enabling modular development and streamlined workflows.

Overview

The GitHub Repository SDK approach offers:

- **Modular Structure:** Multiple repositories for flexibility and scalability.
- **Zephyr West Integration:** Simplified repository management and synchronization.
- **Cross-Platform Support:** Designed for MCUXpresso SDK development environments.

Benefits of the Multi-Repository Approach

- **Scalability:** Easily add or update components without impacting the entire SDK.
- **Collaboration:** Enables distributed development across teams and repositories.
- **Version Control:** Independent versioning for components ensures better stability.
- **Automation:** Zephyr West simplifies dependency handling and repository synchronization.

Setup and Configuration

Follow these steps to prepare your development environment:

GitHub Repository Setup This guide explains how to initialize your MCUXpresso SDK workspace from GitHub repositories using the west tool. The GitHub Repository SDK uses multiple repositories hosted on GitHub to provide modular, flexible development.

Prerequisites Verify the requirements:

System Requirements:

- Python 3.8 or later
- Git 2.25 or later
- CMake 3.20 or later
- Build tools for your target platform

Verification Commands:


```
python --version  # Should show 3.8+
git --version     # Should show 2.25+
cmake --version   # Should show 3.20+
west --version    # Should show west tool installation
```

Workspace Initialization The GitHub Repository SDK uses the Zephyr west tool to manage multiple repositories containing different SDK components.

Step 1: Initialize Workspace Create and initialize your SDK workspace from GitHub:

Get the latest SDK from main branch:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk
```

Get SDK at specific revision:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk --mr {revision}
```

Note: Replace {revision} with the desired release tag, such as v25.09.00

Step 2: Choose Your Repository Update Strategy Navigate to the SDK workspace:

```
cd mcuxpresso-sdk
```

The west tool manages multiple GitHub repositories containing different SDK components. You have two options for downloading:

Option A: Download All Repositories (Complete SDK) Download all SDK repositories for comprehensive development:

```
west update
```

This command downloads all the repositories defined in the manifest from GitHub. Initial download takes several minutes and requires ~7 GB of disk space.

Best for:

- Exploring the complete SDK
- Multi-board development projects
- Comprehensive middleware evaluation

Option B: Targeted Repository Download (Recommended) Download only repositories needed for your specific board or device to save time and disk space:

```
# For specific board development
west update_board --set board your_board_name

# For specific device family development
west update_board --set device your_device_name

# List available repositories before downloading
west update_board --set board your_board_name --list-repo
```

Best for:

- Single board development

- Faster setup and reduced disk usage
- Focused development workflows

Examples:

```
# Update only repositories for FRDM-MCXW23 board
west update_board --set board frdm-mcxw23

# Update only repositories for MCXW23 device family
west update_board --set device mcxw23
```

Step 3: Verify Installation Confirm successful setup:

```
# Verify workspace structure
ls -la
# Should show: manifests/ and mcuxsdk/ directories

# Test build system
west list_project -p examples/demo_apps/hello_world
# Should display available build configurations
```

Advanced Repository Management The west extension command `update_board` provides advanced repository management capabilities for optimized workspace setup with GitHub repositories.

Board-Specific Setup Update only repositories required for a specific board:

```
# Update only repositories for specific board, e.g., frdm-mcxw23
west update_board --set board frdm-mcxw23

# List available repositories for the board before updating
west update_board --set board frdm-mcxw23 --list-repo
```

Device-Specific Setup Update only repositories required for a specific device family:

```
# Update only repositories for specific device, e.g., MCXW235
west update_board --set device mcxw23

# List available repositories for the device family
west update_board --set device mcxw23 --list-repo
```

Custom Configuration For advanced users who want to create custom repository combinations:

```
# Use custom configuration file
west update_board --set custom path/to/custom-config.yml

# Generate custom configuration template
cp manifests/boards/custom.yml.template my-custom-config.yml
```

Benefits of Targeted Setup Reduced Download Size

- Download only components needed for your target board or device
- Significantly faster initial setup for focused development

- Typical reduction from 7 GB to 2GB

Optimized Workspace

- Cleaner workspace with relevant components only
- Reduced disk space usage
- Faster repository operations

Flexible Development

- Switch between different board configurations easily
- Maintain separate workspaces for different projects
- Include optional components as needed

Repository Information Before setting up your workspace, you can explore what repositories are available:

```
# Display repository information in console
west update_board --set board frdm-mcxw23 --list-repo

# Export repository information to YAML file for reference
west update_board --set board frdm-mcxw23 --list-repo -o board-repos.yml
```

This command lists all the available repositories with descriptions and outlines the included components in the workspace.

Package Generation (Optional) The `update_board` command can also generate ZIP packages for offline distribution:

```
# Generate board-specific SDK package
west update_board --set board frdm-mcxw23 -o frdm-mcxw23-sdk.zip
```

Note: Package generation is primarily intended for creating custom SDK distributions. For regular development, use the workspace update commands without the `-o` option.

Workspace Management

Updating Your Workspace Keep your SDK current with latest updates from GitHub:

For Complete SDK Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update all component repositories
cd ..
west update
```

For Targeted Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update board-specific repositories
cd ..
west update_board --set board your_board_name
```

Workspace Status Check workspace synchronization status:

```
# Show status of all repositories
west status
```

```
# Show detailed information about repositories
west list
```

Troubleshooting Network Issues:

- Use `west update --keep-descendants` for partial failures
- Configure Git credentials for private repositories
- Check firewall settings for Git protocol access

Permission Issues:

- Ensure write permissions in workspace directory
- Run commands without `sudo`/administrator privileges
- Verify Git SSH key configuration for authenticated access

Disk Space:

- Full SDK workspace requires approximately 7-8 GB
- Targeted workspace typically requires 1-2 GB
- Use board-specific setup to reduce workspace size

Repository Management Issues:

- Verify board/device names match available configurations
- Check that custom YAML files follow the correct template format
- Use `--list-repo` to verify available repositories before setup

Next Steps With your workspace initialized:

1. Review [Workspace Structure](#) to understand the layout
2. Build your first project with [First Build Guide](#)
3. Explore [Development Workflows MCUXpresso VSCode](#) or [Development Workflows Command Line](#) for the details on project setup and execution

For advanced repository management, see the [west tool documentation](#).

Explore SDK Structure and Content

Learn about the organization of the SDK and its components:

SDK Architecture Overview The MCUXpresso SDK uses a modular architecture where software components are distributed across multiple repositories hosted on GitHub and managed through the west tool. This approach provides flexibility, maintainability, and enables selective component inclusion.

Repository Organization Based on the manifest structure, the SDK consists of four main repository categories:

Manifest Repository The manifest repo (mcuxsdk-manifests) contains the west.yml manifest file that tracks all other repositories in the SDK.

Base Repositories Recorded in submanifests/base.yml and loaded in the root west.yml manifest file. These are the foundational repositories that build the SDK:

- **Devices:** MCU-specific support packages
- **Examples:** Demonstration applications and code samples
- **Boards:** Board support packages

Middleware Repositories Recorded in the submanifests/middleware subdirectory, categorized according to functionality:

- **Connectivity:** Networking stacks, USB, and communication protocols
- **Security:** Cryptographic libraries and secure boot components
- **Wireless:** Bluetooth, IEEE 802.15.4, and other wireless protocols
- **Graphics:** Display drivers and UI frameworks
- **Audio:** Audio processing and voice recognition libraries
- **Machine Learning:** AI inference engines and neural network libraries
- **Safety:** IEC60730B safety libraries
- **Motor Control:** Motor control and real-time control libraries

Internal Repositories Recorded in submanifests/internal.yml and grouped into the “bifrost” group. These are only visible to NXP internal developers and hosted on NXP internal git servers.

Repository Hosting Public repositories are hosted on GitHub under these organizations:

- [nxp-mcuxpresso](#)
- [NXP](#)
- [nxp-zephyr](#)

Internal repositories are hosted on NXP's private Git infrastructure.

Benefits of This Architecture **Selective Integration:** Projects include only required components, reducing memory footprint and build complexity.

Independent Versioning: Each component maintains its own release cycle and version control.

Community Collaboration: Public repositories accept community contributions through standard Git workflows.

Scalable Maintenance: Component owners can update their repositories without affecting the entire SDK.

Workspace Management The west tool manages repository synchronization, version tracking, and workspace updates. All repositories are checked out under the mcuxsdk/ directory with their designated paths defined in the manifest files.

Development Workflows

Get started with building and running projects:

Using MCUXpresso Config Tools MCUXpresso Config tools provide a user-friendly way to configure hardware initialization of your projects. This guide explains the basic workflow with the MCUXpresso SDK west build system and the Config Tools.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- MCUXpresso Config Tools standalone installed (version 25.09 or above)
- MCUXpresso SDK Project that can be successfully built

Board Files MCUXpresso Config Tools generate source files for the board. These files include `pin_mux.c/h` and `clock_config.c/h`. The files contain initialization code functions that reflect the hardware configuration in the Config Tools. Within the SDK codebase, these files are specific for the board and either shared by multiple example projects or specific for one example. Open or import the configuration from the SDK project in the Config Tools and customize the settings to match the custom board or specific project use case and regenerate the code. See *User Guide for MCUXpresso Config Tools (Desktop)* (document [GSMCUXCTUG](#)) for details.

Note: When opening the configuration for SDK example projects, the board files may be shared across multiple examples. To ensure a separate copy of the board configuration files exists, create a freestanding project with copied board files.

Visual Studio Code To open the configuration in Visual Studio Code, use the context menu for the project to access Config Tools. See [MCUXpresso Extension Documentation](#) for details. Otherwise, use the manual workflow described in detail in the following section.

Manual Workflow Use the following steps:

1. Before using Config Tools, run the west command to get the project information for Config Tools from the SDK project files, for example:

```
west cfg_project_info -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_
↪id=cm33_core0
```

This results in the creation of the project information json file that is searched by the config tools when the configuration is created. The parameters of the command should match the build parameters that will be used for the project.

2. Launch the MCUXpresso Config Tools and in the **Start development** wizard, select **Create a new configuration based on the existing IDE/Toolchain project**. Select the created “cfg_tools” subfolder as a project folder (for example: `...mcuxsdk/examples/demo_apps/hello_world/cfg_tools/`).

Updating the SDK West project **Note:** Updating project is supported with Config Tools V25.12 or newer only.

Changes in the Config tools generated source code modules may require adjustments to the toolchain project to ensure a successful build. These changes may mean, for example, adding the newly generated files, adding include paths, required drivers, or other SDK components.

This section describes how to manually resolve the changes needed in the project within the toolchain projects based on the SDK project managed by the West tool.

After the configuration in the Config Tools is finished, write updated files to the disk using the 'Update Code' command. The written files include a json file with the required changes for the toolchain project.

To resolve the changes in the project in the terminal, launch the west command that updates the project. For example:

```
west cfg_resolve -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_id=cm33_core0
```

This command updates the appropriate cmake and kconfig files to address the changes. After this, the application can be built.

Note: The `cfg_resolve` command supports additional arguments. Launch the `west cfg_resolve -h` command to get the list and description.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.70.2
- Keil MDK, version is 5.42a
- MCUXpresso for VS Code v26.03
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices			
FRDM-MCXC242	MCXC141VFM, MCXC242VLH	MCXC141VLH,	MCXC142VFM,	MCXC242VFM,

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

USB Type-C PD Stack See the *MCUXpresso SDK USB Type-C PD Stack User's Guide* (document MCUXSDKUSBPDUG) for more information

USB Host, Device, OTG Stack See the MCUXpresso SDK USB Stack User's Guide (document MCUXSDKUSBSUG) for more information.

TinyCBOR Concise Binary Object Representation (CBOR) Library

SDMMC stack The SDMMC software is integrated with MCUXpresso SDK to support SD/MMC/SDIO standard specification. This also includes a host adapter layer for bare-metal/RTOS applications.

PKCS#11 The PKCS#11 standard specifies an application programming interface (API), called “Cryptoki,” for devices that hold cryptographic information and perform cryptographic functions. Cryptoki follows a simple object based approach, addressing the goals of technology independence (any kind of device) and resource sharing (multiple applications accessing multiple devices), presenting to applications a common, logical view of the device called a “cryptographic token”.

Multicore Multicore Software Development Kit

llhttp HTTP parser llhttp

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

File systemFatfs The FatFs file system is integrated with the MCUXpresso SDK and can be used to access either the SD card or the USB memory stick when the SD card driver or the USB Mass Storage Device class implementation is used.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eiQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known Issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

FreeRTOS issue

When generating a new FreeRTOS project with New Project Wizard tool, the user should de-assert the macro option “configUSE_PORT_OPTIMISED_TASK_SELECTION” in the “FreeRTOSConfig.h” file while it is not being used in the template project for some Cortex-M0+ devices or it may not pass the compiling.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

ADC16

[2.3.0]

- Improvements
 - Added new API ADC16_EnableAsynchronousClockOutput() to enable/disable ADACK output.
 - In ADC16_GetDefaultConfig(), set enableAsynchronousClock to false.

[2.2.0]

- Improvements
 - Added hardware average mode in adc_config_t structure, then the hardware average mode can be set by invoking ADC16_Init() function.

[2.1.0]

- New Features:
 - Supported KM series' new ADC reference voltage source, bandgap from PMC.

[2.0.3]

- Bug Fixes
 - Fixed IAR warning Pa082: the order of volatile access should be defined.

[2.0.2]

- Improvements
 - Used conversion control feature macro instead of that in IO map.

[2.0.1]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 16.4, 10.1, 13.2, 14.4 and 17.7.

[2.0.0]

- Initial version
-

CLOCK

[2.3.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.1, rule 10.4, rule 10.8, rule 15.5 and so on.

[2.3.0]

- New feature:
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.2.0]

- Fix the issue for MISRA-2012 check.
 - Fixed rule 10.4, rule 10.1, rule 10.6, rule 13.5, rule 10.8.
- Bug Fix:
 - Fix incorrect External Oscillator Configuration sequence and ensure oscillator configuration be executed before it be enabled.
- New feature
 - Adding new API CLOCK_DelayAtLeastUs() to implement a delay function which allow users set delay in unit of microsecond.

[2.1.1]

- Bug Fix:
 - Update IP_CLOCKS array, remove unused gates and add missing gates.

[2.1.0]

- Other Changes:
 - Merge fsl_mcglite and fsl_osc into fsl_clock.

[2.0.0]

- Initial version.
-

CMP

[2.0.3]

- Improvements
 - Updated to clear CMP settings in DeInit function.

[2.0.2]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3

[2.0.1]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, rule 10.3, rule 10.1, rule 10.4 and rule 17.7.

[2.0.0]

- Initial version.
-

COMMON**[2.6.3]**

- New Features
 - Added bit mask inversion macros to avoid type promotion.
 - Added register operation macros.
- Improvements
 - Make function `MSDK_EnableCpuCycleCounter` compatible with CMSIS-5 and CMSIS-6.
- Bug Fixes
 - Fixed build issue of CMSIS PACK BSP example caused by CMSIS 6.1 issue.

[2.6.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule for implicit conversions in boolean contexts

[2.6.1]

- Improvements
 - Support Cortex M23.

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irq's that mount under `irqsteer` interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with `zephyr`.

[2.4.0]

- New Features
 - Added `EnableIRQWithPriority`, `IRQ_SetPriority`, and `IRQ_ClearPendingIRQ` for ARM.
 - Added `MSDK_EnableCpuCycleCounter`, `MSDK_GetCpuCycleCount` for ARM.

[2.3.3]

- New Features
 - Added `NETC` into status group.

[2.3.2]

- Improvements
 - Make driver `aarch64` compatible

[2.3.1]

- Bug Fixes
 - Fixed `MAKE_VERSION` overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

COP**[2.0.2]**

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.0.1]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1 and rule 17.7.

[2.0.0]

- Initial version.
-

CRC**[2.1.0]**

- Bug fix:
 - Choosing CRC clocks from CRC clock array according to instance instead of hardcoded value.

[2.0.5]

- Bug fix:
 - Fix CERT-C issue with boolean-to-unsigned integer conversion.

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

DMA

[2.1.3]

- Bug Fixes
 - Fixed coverity issues with CERT INT30-C, CERT INT31-C compliance.

[2.1.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.1.1]

- Improvements
 - Corrected the dma channel feature macro from FSL_FEATURE_DMAMUX_MODULE_CHANNEL to FSL_FEATURE_DMA_MODULE_CHANNEL.

[2.1.0]

- Improvements
 - Added api DMA_PrepareTransferConfig to expose option address increment.
 - Added api DMA_EnableAutoStopRequest to support auto stop request feature.

[2.0.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.3, 14.4, 16.4, 11.6, 10.1.

[2.0.1]

- Bug Fixes
 - By adding parenthesis, fixed the build fail of DMA driver due to rule 12.5, MISRA C 2004.

[2.0.0]

- Initial version.
-

DMAMUX**[2.1.3]**

- Improvements
 - Wrap `DMAMUX_GetInstance` into `FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL` to avoid build issues.

[2.1.2]

- Bug Fixes
 - Add macro `FSL_DMAMUX_CHANNEL_NUM` to calculate correct DMAMUX channel number when input EDAM channel number.

[2.1.1]

- Improvements
 - Add macro `FSL_FEATURE_DMAMUX_CHANNEL_NEEDS_ENDIAN_CONVERT` and `DMAMUX_CHANNEL_ENDIAN_CONVERTn` to do channel endian convert.

[2.1.0]

- Improvements
 - Modify the type of parameter `source` from `uint32_t` to `int32_t` in the `DMA-MUX_SetSource`.

[2.0.5]

- Improvements
 - Added feature `FSL_FEATURE_DMAMUX_CHCFG_REGISTER_WIDTH` for the difference of CHCFG register width.

[2.0.4]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.0.3]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 10.4 and rule 10.3.

[2.0.2]

- New Features
 - Added an always-on enable feature to a DMA channel for ULP1 DMAMUX support.

[2.0.1]

- Bug Fixes
 - Fixed the build warning issue by changing the type of parameter source from uint8_t to uint32_t when setting DMA request source in DMAMUX_SetSourceChange.

[2.0.0]

- Initial version.
-

FLASH

[3.3.0]

- New Feature
 - Support for EEPROM Quick Write on devices with FTFC

[3.2.0]

- New Feature
 - Basic support for FTFC

[3.1.3]

- New Feature
 - Support 512KB flash for Kinetis E serials.

[3.1.2]

- Bug Fixes — Remove redundant comments.

[3.1.1]

- Bug Fixes — MISRA C-2012 issue fixed: rule 10.3

[3.1.0]

- New Feature
 - Support erase flash asynchronously.

[3.0.2]

- Bug Fixes — MISRA C-2012 issue fixed: rule 8.4, 17.7, 10.4, 16.1, 21.15, 11.3, 10.7 — building warning -Wnull-dereference on arm compiler v6

[3.0.1]

- New Features
 - Added support FlexNVM alias for (kw37/38/39).

[3.0.0]

- Improvements
 - Reorganized FTFx flash driver source file.
 - Extracted flash cache driver from FTFx driver.
 - Extracted flexnvm flash driver from FTFx driver.

[2.3.1]

- Bug Fixes
 - Unified Flash IFR design from K3.
 - New encoding rule for K3 flash size.

[2.3.0]

- New Features
 - Added support for device with LP flash (K3S/G).
 - Added flash prefetch speculation APIs.
- Improvements
 - Refined flash_cache_clear function.
 - Reorganized the member of flash_config_t struct.

[2.2.0]

- New Features
 - Supported FTFL device in FLASH_Swap API.
 - Supported various pflash start addresses.
 - Added support for KV58 in cache clear function.
 - Added support for device with secondary flash (KW40).
- Bug Fixes
 - Compiled execute-in-ram functions as PIC binary code for driver use.

- Added missed flexram properties.
- Fixed unaligned variable issue for execute-in-ram function code array.

[2.1.0]

- Improvements
 - Updated coding style to align with KSDK 2.0.
 - Different-alignment-size support for pflash and flexnvm.
 - Improved the implementation of execute-in-ram functions.

[2.0.0]

- Initial version
-

FLEXIO

[2.3.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.
 - Added more pin control functions.

[2.2.3]

- Improvements
 - Adapter the FLEXIO driver to platforms which don't have system level interrupt controller, such as NVIC.

[2.2.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.1]

- Improvements
 - Added doxygen index parameter comment in FLEXIO_SetClockMode.

[2.2.0]

- New Features
 - Added new APIs to support FlexIO pin register.

[2.1.0]

- Improvements
 - Added API FLEXIO_SetClockMode to set flexio channel counter and source clock.

[2.0.4]

- Bug Fixes
 - Fixed MISRA 8.4 issues.

[2.0.3]

- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.0.2]

- Improvements
 - Split FLEXIO component which combines all flexio/flexio_uart/flexio_i2c/flexio_i2s drivers into several components: FlexIO component, flexio_uart component, flexio_i2c_master component, and flexio_i2s component.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.0.1]

- Bug Fixes
 - Fixed the dozen mode configuration error in FLEXIO_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
-

FLEXIO_I2C**[2.6.2]**

- Improvements
 - Added timeout for while loop in FLEXIO_I2C_MasterTransferBlocking().
- Bug Fixes
 - Fixed build issues related to I2C_RETRY_TIMES.

[2.6.1]

- Bug Fixes
 - Fixed coverity issues

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Split some functions, fixed CCM problem in file `fsl_flexio_i2c_master.c`.

[2.4.0]

- Improvements
 - Added delay of 1 clock cycle in `FLEXIO_I2C_MasterTransferRunStateMachine` to ensure that bus would be idle before next transfer if master is nacked.
 - Fixed issue that the restart setup time is less than the time in I2C spec by adding delay of 1 clock cycle before restart signal.

[2.3.0]

- Improvements
 - Used 3 timers instead of 2 to support transfer which is more than 14 bytes in single transfer.
 - Improved `FLEXIO_I2C_MasterTransferGetCount` so that the API can check whether the transfer is still in progress.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
 - Added an API for checking bus pin status.
- Bug Fixes
 - Fixed COVERITY issue of useless call in `FLEXIO_I2C_MasterTransferRunStateMachine`.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.
 - Added codes in `FLEXIO_I2C_MasterTransferCreateHandle` to clear pending NVIC IRQ, disable internal IRQs before enabling NVIC IRQ.
 - Modified code so that during master's nonblocking transfer the start and slave address are sent after interrupts being enabled, in order to avoid potential issue of sending the start and slave address twice.

[2.1.7]

- Bug Fixes
 - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking did not wait for STOP bit sent.
 - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
 - Fixed the issue that I2C master did not check whether bus was busy before transfer.

[2.1.6]

- Bug Fixes
 - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed the subaddress.

[2.1.5]

- Improvements
 - Unified component full name to FLEXIO I2C Driver.

[2.1.4]

- Bug Fixes
 - The following modifications support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.3]

- Improvements
 - Changed the prototype of FLEXIO_I2C_MasterInit to return kStatus_Success if initialized successfully or to return kStatus_InvalidArgument if “(srcClock_Hz / masterConfig->baudRate_Bps) / 2 - 1” exceeds 0xFFU.

[2.1.2]

- Bug Fixes
 - Fixed the FLEXIO I2C issue where the master could not receive data from I2C slave in high baudrate.
 - Fixed the FLEXIO I2C issue where the master could not receive NAK when master sent non-existent addr.
 - Fixed the FLEXIO I2C issue where the master could not get transfer count successfully.
 - Fixed the FLEXIO I2C issue where the master could not receive data successfully when sending data first.
 - Fixed the Dozen mode configuration error in FLEXIO_I2C_MasterInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

- Fixed the issue that FLEXIO_I2C_MasterTransferBlocking API called FLEXIO_I2C_MasterTransferCreateHandle, which lead to the s_flexioHandle/s_flexioIsr/s_flexioType variable being written. Then, if calling FLEXIO_I2C_MasterTransferBlocking API multiple times, the s_flexioHandle/s_flexioIsr/s_flexioType variable would not be written any more due to it being out of range. This lead to the following situation: NonBlocking transfer APIs could not work due to the fail of register IRQ.

[2.1.1]

- Bug Fixes
 - Implemented the FLEXIO_I2C_MasterTransferBlocking API which is defined in header file but has no implementation in the C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
-

FLEXIO_I2S

[2.2.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 12.4.

[2.2.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed violations of the MISRA C-2012 rules 10.4, 14.4, 11.8, 11.9, 10.1, 17.7, 11.6, 10.3, 10.7.

[2.1.6]

- Bug Fixes
 - Added reset flexio before flexio i2s init to make sure flexio status is normal.

[2.1.5]

- Bug Fixes
 - Fixed the issue that I2S driver used hard code for bitwidth setting.

[2.1.4]

- Improvements
 - Unified component's full name to FLEXIO I2S (DMA/EDMA) driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- New Features
 - Added configure items for all pin polarity and data valid polarity.
 - Added default configure for pin polarity and data valid polarity.

[2.1.1]

- Bug Fixes
 - Fixed FlexIO I2S RX data read error and eDMA address error.
 - Fixed FlexIO I2S slave timer compare setting error.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
-

FLEXIO_SPI**[2.4.3]**

- Improvements
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.4.2]

- Bug Fixes
 - Fixed FLEXIO_SPI_MasterTransferBlocking and FLEXIO_SPI_MasterTransferNonBlocking issue in CS continuous mode, the CS might not be continuous.

[2.4.1]

- Bug Fixes
 - Fixed coverity issues

[2.4.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.3.5]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.4]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API

[2.3.3]

- Bugfixes
 - Fixed cs-continuous mode.

[2.3.2]

- Improvements
 - Changed FLEXIO_SPI_DUMMYDATA to 0x00.

[2.3.1]

- Bugfixes
 - Fixed IRQ SHIFTBUF overrun issue when one FLEXIO instance used as multiple SPIs.

[2.3.0]

- New Features
 - Supported FLEXIO_SPI slave transfer with continuous master CS signal and CPHA=0.
 - Supported FLEXIO_SPI master transfer with continuous CS signal.
 - Support 32 bit transfer width.
- Bug Fixes

- Fixed wrong timer compare configuration for dma/edma transfer.
- Fixed wrong byte order of rx data if transfer width is 16 bit, since the we use shifter buffer bit swapped/byte swapped register to read in received data, so the high byte should be read from the high bits of the register when MSB.

[2.2.1]

- Bug Fixes
 - Fixed bug in FLEXIO_SPI_MasterTransferAbortEDMA that when aborting EDMA transfer EDMA_AbortTransfer should be used rather than EDMA_StopTransfer.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.
 - Added codes in FLEXIO_SPI_MasterTransferCreateHandle and FLEXIO_SPI_SlaveTransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.1.3]

- Improvements
 - Unified component full name to FLEXIO SPI(DMA/EDMA) Driver.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.2]

- Bug Fixes
 - The following modification support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.1]

- Bug Fixes
 - Fixed bug where FLEXIO SPI transfer data is in 16 bit per frame mode with eDMA.
 - Fixed bug when FLEXIO SPI works in eDMA and interrupt mode with 16-bit per frame and Lsbfirst.
 - Fixed the Dozen mode configuration error in FLEXIO_SPI_MasterInit/FLEXIO_SPI_SlaveInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

- Improvements
 - Added `#ifndef/#endif` to allow users to change the default TX value at compile time.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added `transferSize` in handle structure to record the transfer size.
 - Bug Fixes
 - Fixed the error register address return for 16-bit data write in `FLEXIO_SPI_GetTxDataRegisterAddress`.
 - Provided independent `IRQHandler`/transfer APIs for Master and slave to fix the baudrate limit issue.
-

FLEXIO_UART

[2.6.4]

- Improvements
 - Make `UART_RETRY_TIMES` configurable by `CONFIG_UART_RETRY_TIMES`.

[2.6.3]

- Bug Fixes
 - Fixed coverity issues

[2.6.2]

- Bug Fixes
 - Fixed coverity issues

[2.6.1]

- Improvements
 - Improve baudrate calculation method, to support higher frequency FlexIO clock source.

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Added API FLEXIO_UART_FlushShifters to flush UART fifo.

[2.4.0]

- Improvements
 - Use separate data for TX and RX in flexio_uart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling FLEXIO_UART_TransferReceiveNonBlocking, the received data count returned by FLEXIO_UART_TransferGetReceiveCount is wrong.

[2.3.0]

- Improvements
 - Added check for baud rate's accuracy that returns kStatus_FLEXIO_UART_BaudrateNotSupport when the best achieved baud rate is not within 3% error of configured baud rate.
- Bug Fixes
 - Added codes in FLEXIO_UART_TransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting for certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.1.6]

- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.5]

- Improvements
 - Triggered user callback after all the data in ringbuffer were received in FLEXIO_UART_TransferReceiveNonBlocking.

[2.1.4]

- Improvements
 - Unified component full name to FLEXIO UART(DMA/EDMA) Driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- Bug Fixes
 - Fixed the transfer count calculation issue in FLEXIO_UART_TransferGetReceiveCount, FLEXIO_UART_TransferGetSendCount, FLEXIO_UART_TransferGetReceiveCountDMA, FLEXIO_UART_TransferGetSendCountDMA, FLEXIO_UART_TransferGetReceiveCountEDMA and FLEXIO_UART_TransferGetSendCountEDMA.
 - Fixed the Dozen mode configuration error in FLEXIO_UART_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
 - Added code to report errors if the user sets a too-low-baudrate which FLEXIO cannot reach.
 - Disabled FLEXIO_UART receive interrupt instead of all NVICs when reading data from ring buffer. If ring buffer is used, receive nonblocking will disable all NVIC interrupts to protect the ring buffer. This had negative effects on other IPs using interrupt.

[2.1.1]

- Bug Fixes
 - Changed the API name FLEXIO_UART_StopRingBuffer to FLEXIO_UART_TransferStopRingBuffer to align with the definition in C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added txSize/rxSize in handle structure to record the transfer size.
- Bug Fixes
 - Added an error handle to handle the situation that data count is zero or data buffer is NULL.

FLEXIO_UART_DMA

[2.3.0]

- Refer FLEXIO_UART driver change log to 2.3.0

GPIO

[2.8.4]

- Improvements
 - Make function `GPIO_PortGetInterruptFlags` and `GPIO_PortClearInterruptFlags` available for all variants, they are used for all pins flags in one GPIO port.

[2.8.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 Rule 10.1, 5.7.

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that `GPIO_GetInstance` could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API `GPIO_PortInit`/`GPIO_PortDeinit` to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API `GPIO_PortInit`/`GPIO_PortDeinit` to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API `GPIO_GetPinsDMARequestFlags` with `GPIO_ISFR_COUNT <= 1`.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of `_PinXXX()` and `_PortXXX`.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “`_PinConfigure`” to “`GPIO_PinInit`”.
-

I2C

[2.0.10]

- Bug Fixes
 - Fixed coverity issues.

[2.0.9]

- Bug Fixes
 - Fixed the MISRA-2012 violations.
 - * Fixed rule 8.4, 10.1, 10.4, 13.5, 20.8.

[2.0.8]

- Bug Fixes
 - Fixed the bug that DFEN bit of I2C Status register 2 could not be set in I2C_MasterInit.
 - MISRA C-2012 issue fixed: rule 14.2, 15.7, and 16.4.
 - Eliminated IAR Pa082 warnings from I2C_MasterTransferDMA and I2C_MasterTransferCallbackDMA by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 11.9, 14.4, 15.7, 17.7.
- Improvements
 - Improved timeout mechanism when waiting certain state in transfer API.
 - Updated the I2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.
 - Moved the master manually acknowledge byte operation into static function I2C_MasterAckByte.
 - Fixed control/status clean flow issue inside I2C_MasterReadBlocking to avoid potential issue that pending status is cleaned before it's proceeded.

[2.0.7]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 11.9 ,15.7 ,14.4 ,10.4 ,10.8 ,10.3, 10.1, 10.6, 13.5, 11.3, 13.2, 17.7, 5.7, 8.3, 8.5, 11.1, 16.1.
 - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
 - Fixed variable redefine issue by moving i2cBases from fsl_i2c.h to fsl_i2c.c.
- Improvements
 - Added I2C_MASTER_FACK_CONTROL macro to enable FACK control for master transfer receive flow with IP supporting double buffer, then master could hold the SCL by manually setting TX AK/NAK during data transfer.

[2.0.6]

- Bug Fixes
 - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed by the subaddress.

[2.0.5]

- Improvements
 - Added I2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.

[2.0.4]

- Bug Fixes
 - Added a proper handle for transfer config flag kI2C_TransferNoStartFlag to support transmit with kI2C_TransferNoStartFlag flag. Support write only or write+read with no start flag; does not support read only with no start flag.

[2.0.3]

- Bug Fixes
 - Removed enableHighDrive member in the master/slave configuration structure because the operation to HDRS bit is useless, the user need to use DSE bit in port register to configure the high drive capability.
 - Added register reset operation in I2C_MasterInit and I2C_SlaveInit APIs. Fixed issue where I2C could not switch between master and slave mode.
 - Improved slave IRQ handler to handle the corner case that stop flag and address match flag come synchronously.

[2.0.2]

- Bug Fixes
 - Fixed issue in master receive and slave transmit mode with no stop flag. The master could not succeed to start next transfer because the master could not send out re-start signal.
 - Fixed the out-of-order issue of data transfer due to memory barrier.
 - Added hold time configuration for slave. By leaving the SCL divider and MULT reset values when configured to slave mode, the setup and hold time of the slave is then reduced outside of spec for lower baudrates. This can cause intermittent arbitration loss on the master side.
- New Features
 - Added address nak event for master.
 - Added general call event for slave.

[2.0.1]

- New Features
 - Added double buffer enable configuration for SoCs which have the DFEN bit in S2 register.
 - Added flexible transmit/receive buffer size support in I2C_SlaveHandleIRQ.
 - Added start flag clear, address match, and release bus operation in I2C_SlaveWrite/ReadBlocking API.
- Bug Fixes
 - Changed the kI2C_SlaveRepeatedStartEvent to kI2C_SlaveStartEvent.

[2.0.0]

- Initial version.
-

LLWU

[2.0.5]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.
 - Fixed the issue that function LLWU_SetExternalWakeupPinMode() does not work on 32-bit width platforms.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 10.6, 10.7, 11.3.
 - Fixed issue that LLWU_ClearExternalWakeupPinFlag may clear other filter flags by mistake on platforms with 32-bit LLWU registers.

[2.0.3]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 16.4.

[2.0.2]

- Improvements
 - Corrected driver function LLWU_SetResetPinMode parameter name.
- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, 10.8, 10.4, 10.3.

[2.0.1]

- Other Changes
 - Updates for KL8x.

[2.0.0]

- Initial version.
-

LPTMR**[2.2.1]**

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated `lptmr_prescaler_clock_select_t`, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART

[2.11.0]

- New Feature
 - Added support to enable transmitter RTS and configure transmitter RTS polarity.
 - Added support to enable Transmit Data Inversion.
- Improvements
 - Updated to work on DSC platform.

[2.10.0]

- New Feature
 - Added support to configure RTS watermark.

[2.9.4]

- Improvements
 - Merged duplicate code.

[2.9.3]

- Improvements
 - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes

- Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes

- Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
- Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
- Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
- Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
- Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
- Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
- Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.

- New Features

- Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
- Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes

- Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features

- Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes

- Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
 - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for kLPUART_TransmissionCompleteFlag in LPUART_WriteBlocking, LPUART_TransferHandleIRQ, LPUART_TransferSendDMACallback and LPUART_SendEDMACallback to ensure all the data would be sent out to bus.
 - Rounded up the calculated sbr value in LPUART_SetBaudRate and LPUART_Init to achieve more accurate baudrate setting. Changed osr from uint32_t to uint8_t since osr's biggest value is 31.
 - Modified LPUART_ReadBlocking so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using LPUART_EnableTxDMA and LPUART_EnableRxDMA.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in LPUART_TransferNonBlocking function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.
 - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from `rtos_lpuart_config` to `lpuart_rtos_config_t`.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may has a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_DMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

MCM

[2.2.0]

- Improvements
 - Support platforms with less features.

[2.1.0]

- Others
 - Remove byteID from mcm_lmem_fault_attribute_t for document update.

[2.0.0]

- Initial version.
-

PIT

[2.2.0]

- Bug Fixes
 - According to ERR050763, PIT_LDVAL_STAT register is not reliable in dynamic load mode, so remove the status check in PIT_SetRtiTimerPeriod which added since 2.1.1.
 - Removed not used bit PIT_RTI_TCTRL_CHN_MASK.
- Improvements
 - Added more guide about get RTI load status in PIT_SetRtiTimerPeriod's API comment.
 - Change PIT_RTI_Deinit to inline API.
 - Ensure PIT peripheral clock enabled in PIT_RTI_Init.
- New Features
 - Added PIT_ClearRtiSyncStatus API to clear the RTI_LDVAL_STAT register.

[2.1.1]

- Bug Fixes
 - Enable PIT when using RTI to ensure RTI can work properly in debug mode.
- Improvements
 - Added status check in PIT_SetRtiTimerPeriod to ensure the load value is synchronized into the RTI clock domain.
 - Added note for PIT_RTI_Init to remind users wait RTI sync.

[2.1.0]

- New Features
 - Support RTI (Real Time Interrupt) timer.

[2.0.5]

- Improvements
 - Support workaround for ERR007914. This workaround guarantee the write to MCR register is not ignored.

[2.0.4]

- Bug Fixes
 - Fixed PIT_SetTimerPeriod implementation, the load value trigger should be PIT clock cycles minus 1.

[2.0.3]

- Bug Fixes
 - Clear all status bits for all channels to make sure the status of all TCTRL registers is clean.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Bug Fixes
 - Cleared timer enable bit for all channels in function PIT_Init() to make sure all channels stay in disable status before setting other configurations.
 - Fixed MISRA-2012 rules.
 - * Rule 14.4, rule 10.4.

[2.0.0]

- Initial version.
-

PMC

[2.0.4]

- Bug Fixes
 - Add validation before narrowing uint32_t to uint8_t conversions using assert
 - Replace direct boolean to integer casts with explicit ternary operators
 - Add INT31-C compliance comments for safe narrowing conversions
 - Apply fixes to PMC_ConfigureLowVoltDetect, PMC_ConfigureLowVoltWarning, and PMC_ConfigureBandgapBuffer functions

[2.0.3]

- Bug Fixes
 - Fixed the violation of MISRA C-2012 rule 11.3.

[2.0.2]

- Bug Fixes
 - Fixed the violations of MISRA 2012 rules:
 - * Rule 10.3.

[2.0.1]

- Bug Fixes
 - Fixed MISRA issues.
 - * Rule 10.8, Rule 10.3.

[2.0.0]

- Initial version.
-

PORT

[2.5.1]

- Bug Fixes
 - Fix CERT INT31-C issues.
 - Fixed the violations of MISRA C-2012 rules: 10.1.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4–11.3–11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.

RCM

[2.0.5]

- Bug Fixes
 - Replace direct boolean to integer casts with explicit ternary operators for INT31-C compliance.
 - Add validation before narrowing uint32_t to uint8_t conversion using assert.
 - Add INT31-C compliance comments for safe type handling.
 - Apply fixes to RCM_ConfigureResetPinFilter and RCM_SetForceBootRomSource functions.

[2.0.4]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rules.

[2.0.2]

- Bug Fixes
 - Fixed MISRA issue.
 - * Rule 10.8, rule 10.1, rule 13.2, rule 3.1.

[2.0.1]

- Bug Fixes
 - Fixed kRCM_SourceSw bit shift issue.

[2.0.0]

- Initial version.
-

RTC

[2.4.0]

- New features
 - Add support for RTC clock output.
 - Add support for RTC time seconds interrupt configuration.

[2.3.3]

- Bug Fixes
 - Fix RTC_GetDatetime function validating datetime issue.

[2.3.2]

- Improvements
 - Handle errata 010716: Disable the counter before setting alarm register and then reen-able the counter.

[2.3.1]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.3.0]

- Improvements
 - Added API RTC_EnableLPOClock to set 1kHz LPO clock.
 - Added API RTC_EnableCrystalClock to replace API RTC_SetClockSource.

[2.2.2]

- Improvements
 - Refine _rtc_interrupt_enable order.

[2.2.1]

- Bug Fixes
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of bit field mask checking.
 - Fixed the issue of hard code in RTC_Init.

[2.2.0]

- Bug Fixes
 - Fixed MISRA C-2012 issue.
 - * Fixed rule contain: rule-17.7, rule-14.4, rule-10.4, rule-10.7, rule-10.1, rule-10.3.
 - Fixed central repository code formatting issue.
- Improvements
 - Added an API for enabling wakeup pin.

[2.1.0]

- Improvements
 - Added feature macro check for many features.

[2.0.0]

- Initial version.
-

SIM

[2.2.0]

- Improvements
 - Added API to trigger TRGMUX.

[2.1.3]

- Improvements
 - Updated function SIM_GetUniqueId to support different register names.

[2.1.2]

- Bug Fixes
 - Fixed SIM_GetUniqueId bug that could not get UIDH.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.4

[2.1.0]

- Improvements
 - Added new APIs: SIM_GetRfAddr() and SIM_EnableSystickClock().

[2.0.0]

- Initial version.
-

SMC

[2.0.8]

- Bug Fixes
 - Replace direct boolean to integer casts with explicit ternary operators for INT31-C compliance
 - Add validation before narrowing uint32_t to uint8_t conversion using assert
 - Add INT31-C compliance comments for safe type handling
 - Apply fixes to RCM_ConfigureResetPinFilter and RCM_SetForceBootRomSource functions

[2.0.7]

- Bug Fixes
 - Fixed MISRA-2012 issue 10.3.

[2.0.6]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 10.3, rule 11.3.

[2.0.5]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule 15.7, rule 14.4, rule 10.3, rule 10.1, rule 10.4.

[2.0.4]

- Bug Fixes
 - When entering stop modes, used RAM function for the flash synchronization issue. Application should make sure that, the RW data of fsl_smc.c is located in memory region which is not powered off in stop modes.

[2.0.3]

- Improvements
 - Added APIs SMC_PreEnterStopModes, SMC_PreEnterWaitModes, SMC_PostExitWaitModes, and SMC_PostExitStopModes.

[2.0.2]

- Bug Fixes
 - Added DSB before WFI while ISB after WFI.
- Other Changes
 - Updated SMC_SetPowerModeVlwpw implementation.

[2.0.1]

- Other Changes
 - Updated for KL8x.

[2.0.0]

- Initial version.
-

SPI

[2.1.4]

- Bug Fixes
 - Fixed coverity issues.

[2.1.3]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API.

[2.1.2]

- Improvements
 - Changed SPI_DUMMYDATA to 0x00.

[2.1.1]

- Bug Fixes
 - Fixed MISRA 10.3 violation.

[2.1.0]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that, when working as a slave, instance that does not have FIFO may miss some rx data.
 - Fixed master RX data overflow issue by synchronizing transmit and receive process.
 - Fixed issue that slave should not share the same non-blocking initialization API and IRQ handler with master to prevent dead lock issue.
 - Fixed issue that callback should be invoked after all data is sent out to bus.
 - Added code in SPI_SlaveTransferNonBlocking to empty rx buffer before initializing transfer.

[2.0.5]

- Bug Fixes
 - Eliminated Pa082 warnings from SPI_WriteNonBlocking and SPI_GetStatusFlags.
 - Fixed MISRA issues.
 - * Fixed issues 10.1, 10.3, 10.4, 10.7, 10.8, 11.9, 14.4, 17.7.

[2.0.4]

- New Features
 - Supported 3-wire mode for SPI driver. Added new API SPI_SetPinMode() to control the transfer direction of the single wire. For master instance, MOSI is selected as I/O pin. For slave instance, MISO is selected as I/O pin.
 - Added dummy data setup API to allow users to configure the dummy data to be transferred.

[2.0.3]

- Bug Fixes
 - Fixed the potential interrupt race condition at high baudrate when calling API SPI_MasterTransferNonBlocking.

[2.0.2]

- New Features
 - Allowed users to set the transfer size for SPI_TransferNonBlocking non-integer times of watermark.
 - Allowed users to define the dummy data. Users only need to define the macro SPI_DUMMYDATA in applications.

[2.0.1]

- Bug Fixes
 - Fixed SPI_Enable function parameter error.
 - Set the s_dummy variable as static variable in fsl_spi_dma.c.
- Improvements
 - Optimized the code size while not using transactional API.
 - Improved performance in polling method.
 - Added #ifndef/#endif to allow users to change the default tx value at compile time.

[2.0.0]

- Initial version.
-

SPI DMA Driver**[2.1.1]**

- Bug Fixes
 - Fixed the bug that TX data not sent to bus when transfer finish callback is called.

[2.1.0]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that, when working as a slave, instance that does not have FIFO may miss some rx data.
 - Fixed master RX data overflow issue by synchronizing transmit and receive process.
 - Fixed issue that slave should not share the same non-blocking initialization API and IRQ handler with master to prevent dead lock issue.
 - Fixed issue that callback should be invoked after all data is sent out to bus.
 - Added code in SPI_SlaveTransferNonBlocking to empty rx buffer before initializing transfer.

[2.0.5]

- Bug Fixes
 - Eliminated Pa082 warnings from SPI_WriteNonBlocking and SPI_GetStatusFlags.
 - Fixed MISRA issues.
 - * Fixed issues 10.1, 10.3, 10.4, 10.7, 10.8, 11.9, 14.4, 17.7.

[2.0.4]

- New Features
 - Supported 3-wire mode for SPI driver. Added new API SPI_SetPinMode() to control the transfer direction of the single wire. For master instance, MOSI is selected as I/O pin. For slave instance, MISO is selected as I/O pin.
 - Added dummy data setup API to allow users to configure the dummy data to be transferred.

[2.0.3]

- Bug Fixes
 - Fixed the potential interrupt race condition at high baudrate when calling API SPI_MasterTransferNonBlocking.

[2.0.2]

- New Features
 - Allowed users to set the transfer size for SPI_TransferNoBlocking non-integer times of watermark.
 - Allowed users to define the dummy data. Users only need to define the macro SPI_DUMMYDATA in applications.

[2.0.1]

- Bug Fixes
 - Fixed SPI_Enable function parameter error.
 - Set the s_dummy variable as static variable in fsl_spi_dma.c.
- Improvements
 - Optimized the code size while not using transactional API.
 - Improved performance in polling method.
 - Added #ifndef/#endif to allow users to change the default tx value at compile time.

[2.0.0]

- Initial version.
-

TPM**[2.4.2]**

- Bug Fixes
 - Fixed CERT INT30-C INT31-C issue for:
 - * Unsigned integer operation may wrap.
 - * Casting from “int” to “unsigned char” may result in lost or misinterpreted data.

[2.4.1]

- Improvements
 - Add Coverage Justification for uncovered code.

[2.4.0]

- New Feature
 - Added while loop timeout for MOD CnV CnSC and SC register write sequence.
 - Change the return type from void to status_t for following API:
 - * TPM_DisableChannel
 - * TPM_EnableChannel
 - * TPM_SetupOutputCompare
 - * TPM_SetTimerPeriod
 - * TPM_StopTimer

[2.3.6]

- Bug Fixes
 - Fixed CERT INT30-C INT31-C issue for TPM_SetupDualEdgeCapture.

[2.3.5]

- New Feature
 - Added IRQ handler entry for TPM2.

[2.3.4]

- New Feature
 - Added common IRQ handler entry TPM_DriverIRQHandler.

[2.3.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.2]

- Bug Fixes
 - Fixed ERR008085 TPM writing the TPMx_MOD or TPMx_CnV registers more than once may fail when the timer is disabled.

[2.3.1]

- Bug Fixes
 - Fixed compilation error when macro FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL is 1.

[2.3.0]

- Improvements
 - Create callback feature for TPM match and timer overflow interrupts.

[2.2.4]

- Improvements
 - Add feature macros(FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_EN, FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_SYNC).

[2.2.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4.

[2.2.1]

- Bug Fixes
 - Fixed CCM issue by splitting function from TPM_SetupPwm() function to reduce function complexity.
 - Fixed violations of MISRA C-2012 rule 17.7.

[2.2.0]

- Improvements
 - Added TPM_SetChannelPolarity to support select channel input/output polarity.
 - Added TPM_EnableChannelExtTrigger to support enable external trigger input to be used by channel.
 - Added TPM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
 - Added TPM_GetChannelValue to support get TPM channel value.
 - Added new TPM configuration.
 - * syncGlobalTimeBase
 - * extTriggerPolarity
 - * chnlPolarity
 - Added new PWM signal configuration.
 - * secPauseLevel
- Bug Fixes
 - Fixed TPM_SetupPwm can't configure 0% combined PWM issues.

[2.1.1]

- Improvements
 - Add feature macro for PWM pause level select feature.

[2.1.0]

- Improvements
 - Added TPM_EnableChannel and TPM_DisableChannel APIs.
 - Added new PWM signal configuration.
 - * pauseLevel - Support select output level when counter first enabled or paused.
 - * enableComplementary - Support enable/disable generate complementary PWM signal.
 - * deadTimeValue - Support deadtime insertion for each pair of channels in combined PWM mode.
- Bug Fixes
 - Fixed issues about channel MSnB:MSnA and ELSnB:ELSnA bit fields and CnV register change request acknowledgement. Writes to these bits are ignored when the interval between successive writes is less than the TPM clock period.

[2.0.8]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.1, 10.4, 10.7 and 14.4.

[2.0.7]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4 and 17.7.

[2.0.6]

- Bug Fixes
 - Fixed Out-of-bounds issue.

[2.0.5]

- Bug Fixes
 - Fixed MISRA-2012 rules.
 - * Rule 10.6, 10.7

[2.0.4]

- Bug Fixes
 - Fixed ERR050050 in functions TPM_SetupPwm/TPM_UpdatePwmDutycycle. When TPM was configured in EPWM mode as PS = 0, the compare event was missed on the first reload/overflow after writing 1 to the CnV register.

[2.0.3]

- Bug Fixes
 - MISRA-2012 issue fixed.
 - * Fixed rules: rule-12.1, rule-17.7, rule-16.3, rule-14.4, rule-1.3, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-10.6, and rule-18.1.

[2.0.2]

- Bug Fixes
 - Fixed issues in functions TPM_SetupPwm/TPM_UpdateChnEdgeLevelSelect/TPM_SetupInputCapture/TPM_SetupOutputCompare/TPM_SetupDualEdgeCapture, wait acknowledgement when the channel is disabled.

[2.0.1]

- Bug Fixes
 - Fixed TPM_UpdateChnEdgeLevelSelect ACK wait issue.
 - Fixed the issue that TPM_SetupDualEdgeCapture could not set FILTER register.
 - Fixed TPM_UpdateChnEdgeLevelSelect ACK wait issue.

[2.0.0]

- Initial version.
-

UART**[2.5.1]**

- Improvements
 - Use separate data for TX and RX in `uart_transfer_t`.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling `UART_TransferReceiveNonBlocking`, the received data count returned by `UART_TransferGetReceiveCount` is wrong.

[2.5.0]

- New Features
 - Added APIs `UART_GetRxFifoCount`/`UART_GetTxFifoCount` to get rx/tx FIFO data count.
 - Added APIs `UART_SetRxFifoWatermark`/`UART_SetTxFifoWatermark` to set rx/tx FIFO water mark.
- Bug Fixes
 - Fixed bug of race condition during UART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable registers.
 - Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.0]

- Bug Fixes
 - Fixed the bug that, when framing/parity/noise/overflow flag or idle line detect flag is set, receive FIFO should be flushed to avoid FIFO pointer being in unknown state, since FIFO has no valid data.
- Improvements
 - Modified `UART_TransferHandleIRQ` so that `txState` will be set to idle only when all data has been sent out to bus.
 - Modified `UART_TransferGetSendCount` so that this API returns the real byte count that UART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.0]

- New Features
 - Added UART hardware FIFO enable/disable API.
- Improvements
 - Added check for `kUART_TransmissionCompleteFlag` in `UART_TransferHandleIRQ`, `UART_SendEDMACallback` and `UART_TransferSendDMACallback` to ensure all the data would be sent out to bus.
- Bug Fixes
 - Eliminated IAR Pa082 warnings from `UART_TransferGetRxRingBufferLength`, `UART_GetEnabledInterrupts`, `UART_GetStatusFlags` and `UART_TransferHandleIRQ`.
 - Added code in `UART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 14.4, 11.6, 17.7.

[2.1.6]

- Bug Fixes
 - Fixed the issue of register's being in repeatedly reading status while performing the IRQ routine.

[2.1.5]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `UART_TransferNonBlocking` function. If an idle line is detected, a callback will be triggered with status `kStatus_UART_IdleLineDetected` returned. This feature may be useful when the number of received bytes is less than the expected receive data size. Before triggering the callback, data in the FIFO is read out (if it has FIFO), and no interrupt will be disabled except for the case that the receive data size reaches 0.
 - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, you can set the watermark value to whatever you want (should not be bigger than the RX FIFO size). Data is then received and a callback will be triggered when data receive ends.

[2.1.4]

- Improvements
 - Changed parameter type in `UART_RTOS_Init()` struct `rtos_uart_config` → `uart_rtos_config_t`.
- Bug Fixes
 - Disabled UART receive interrupt instead of global interrupt when reading data from ring buffer. With ring buffer used, receive nonblocking will disable global interrupt to protect the ring buffer. This has a negative effect on other IPs using interrupt.

[2.1.3]

- New Features
 - Added RX framing error and parity error status check when using interrupt transfer.

[2.1.2]

- Bug Fixes
 - Fixed baud rate fine adjust bug to make the computed baud rate more accurate.

[2.1.1]

- Bug Fixes
 - Removed needless check of event flags and assert in UART_RTOS_Receive.
 - Always waited for RX event flag in UART_RTOS_Receive.

[2.1.0]

- Improvements
 - Added transactional API.

[2.0.0]

- Initial version.
-

UART_DMA**[2.5.0]**

- Refer UART driver change log 2.1.0 to 2.5.0
-

VREF**[2.1.3]**

- Improvements
 - Add timeout for APIs with dfmea issues.

[2.1.2]

- Bug Fixes
 - Fixed the violation of MISRA-2012 rule 10.3.
 - Fixed MISRA C-2012 rule 10.3, rule 10.4 violation.

[2.1.1]

- Bug Fixes
 - MISRA-2012 issue fixed.
 - * Fixed rules containing: rule-10.4, rule-10.3, rule-10.1.

[2.1.0]

- Improvements
 - Added new functions to support L5K board: added VREF_SetTrim2V1Val() and VREF_GetTrim2V1Val() functions to supply 2V1 output mode.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MCXC242](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Multicore

[Multicore SDK](#)

1.7.2 FreeMASTER

[freemaster](#)

1.7.3 FreeRTOS

[FreeRTOS](#)

1.7.4 File systemFatfs

[FatFs](#)

Chapter 2

MCXC242

2.1 ADC16: 16-bit SAR Analog-to-Digital Converter Driver

`void ADC16_Init(ADC_Type *base, const adc16_config_t *config)`

Initializes the ADC16 module.

Parameters

- `base` – ADC16 peripheral base address.
- `config` – Pointer to configuration structure. See “*adc16_config_t*”.

`void ADC16_Deinit(ADC_Type *base)`

De-initializes the ADC16 module.

Parameters

- `base` – ADC16 peripheral base address.

`void ADC16_GetDefaultConfig(adc16_config_t *config)`

Gets an available pre-defined settings for the converter’s configuration.

This function initializes the converter configuration structure with available settings. The default values are as follows.

```
config->referenceVoltageSource = kADC16_ReferenceVoltageSourceVref;
config->clockSource           = kADC16_ClockSourceAsynchronousClock;
config->enableAsynchronousClock = false;
config->clockDivider           = kADC16_ClockDivider8;
config->resolution              = kADC16_ResolutionSE12Bit;
config->longSampleMode          = kADC16_LongSampleDisabled;
config->enableHighSpeed         = false;
config->enableLowPower          = false;
config->enableContinuousConversion = false;
```

Parameters

- `config` – Pointer to the configuration structure.

`status_t ADC16_DoAutoCalibration(ADC_Type *base)`

Automates the hardware calibration.

This auto calibration helps to adjust the plus/minus side gain automatically. Execute the calibration before using the converter. Note that the hardware trigger should be used during the calibration.

Parameters

- `base` – ADC16 peripheral base address.

Return values

- `kStatus_Success` – Calibration is done successfully.
- `kStatus_Fail` – Calibration has failed.

Returns

Execution status.

`static inline void ADC16_SetOffsetValue(ADC_Type *base, int16_t value)`

Sets the offset value for the conversion result.

This offset value takes effect on the conversion result. If the offset value is not zero, the reading result is subtracted by it. Note, the hardware calibration fills the offset value automatically.

Parameters

- `base` – ADC16 peripheral base address.
- `value` – Setting offset value.

`static inline void ADC16_EnableDMA(ADC_Type *base, bool enable)`

Enables generating the DMA trigger when the conversion is complete.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Switcher of the DMA feature. “true” means enabled, “false” means not enabled.

`static inline void ADC16_EnableHardwareTrigger(ADC_Type *base, bool enable)`

Enables the hardware trigger mode.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Switcher of the hardware trigger feature. “true” means enabled, “false” means not enabled.

`void ADC16_SetChannelMuxMode(ADC_Type *base, adc16_channel_mux_mode_t mode)`

Sets the channel mux mode.

Some sample pins share the same channel index. The channel mux mode decides which pin is used for an indicated channel.

Parameters

- `base` – ADC16 peripheral base address.
- `mode` – Setting channel mux mode. See “`adc16_channel_mux_mode_t`”.

`void ADC16_SetHardwareCompareConfig(ADC_Type *base, const
adc16_hardware_compare_config_t *config)`

Configures the hardware compare mode.

The hardware compare mode provides a way to process the conversion result automatically by using hardware. Only the result in the compare range is available. To compare the range, see “`adc16_hardware_compare_mode_t`” or the appropriate reference manual for more information.

Parameters

- `base` – ADC16 peripheral base address.

- `config` – Pointer to the “`adc16_hardware_compare_config_t`” structure. Passing “NULL” disables the feature.

`void ADC16_SetHardwareAverage(ADC_Type *base, adc16_hardware_average_mode_t mode)`

Sets the hardware average mode.

The hardware average mode provides a way to process the conversion result automatically by using hardware. The multiple conversion results are accumulated and averaged internally making them easier to read.

Parameters

- `base` – ADC16 peripheral base address.
- `mode` – Setting the hardware average mode. See “`adc16_hardware_average_mode_t`”.

`void ADC16_SetPGAConfig(ADC_Type *base, const adc16_pga_config_t *config)`

Configures the PGA for the converter’s front end.

Parameters

- `base` – ADC16 peripheral base address.
- `config` – Pointer to the “`adc16_pga_config_t`” structure. Passing “NULL” disables the feature.

`uint32_t ADC16_GetStatusFlags(ADC_Type *base)`

Gets the status flags of the converter.

Parameters

- `base` – ADC16 peripheral base address.

Returns

Flags’ mask if indicated flags are asserted. See “`_adc16_status_flags`”.

`void ADC16_ClearStatusFlags(ADC_Type *base, uint32_t mask)`

Clears the status flags of the converter.

Parameters

- `base` – ADC16 peripheral base address.
- `mask` – Mask value for the cleared flags. See “`_adc16_status_flags`”.

`static inline void ADC16_EnableAsynchronousClockOutput(ADC_Type *base, bool enable)`

Enable/disable ADC Asynchronous clock output to other modules.

Parameters

- `base` – ADC16 peripheral base address.
- `enable` – Used to enable/disable ADC ADACK output.
 - **true** Asynchronous clock and clock output is enabled regardless of the state of the ADC.
 - **false** Asynchronous clock output disabled, asynchronous clock is enabled only if it is selected as input clock and a conversion is active.

`void ADC16_SetChannelConfig(ADC_Type *base, uint32_t channelGroup, const adc16_channel_config_t *config)`

Configures the conversion channel.

This operation triggers the conversion when in software trigger mode. When in hardware trigger mode, this API configures the channel while the external trigger source helps to trigger the conversion.

Note that the “Channel Group” has a detailed description. To allow sequential conversions of the ADC to be triggered by internal peripherals, the ADC has more than one group of status and control registers, one for each conversion. The channel group parameter indicates which group of registers are used, for example, channel group 0 is for Group A registers and channel group 1 is for Group B registers. The channel groups are used in a “ping-pong” approach to control the ADC operation. At any point, only one of the channel groups is actively controlling ADC conversions. The channel group 0 is used for both software and hardware trigger modes. Channel group 1 and greater indicates multiple channel group registers for use only in hardware trigger mode. See the chip configuration information in the appropriate MCU reference manual for the number of SC1n registers (channel groups) specific to this device. Channel group 1 or greater are not used for software trigger operation. Therefore, writing to these channel groups does not initiate a new conversion. Updating the channel group 0 while a different channel group is actively controlling a conversion is allowed and vice versa. Writing any of the channel group registers while that specific channel group is actively controlling a conversion aborts the current conversion.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.
- config – Pointer to the “adc16_channel_config_t” structure for the conversion channel.

```
static inline uint32_t ADC16_GetChannelConversionValue(ADC_Type *base, uint32_t
                                                    channelGroup)
```

Gets the conversion value.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.

Returns

Conversion value.

```
uint32_t ADC16_GetChannelStatusFlags(ADC_Type *base, uint32_t channelGroup)
```

Gets the status flags of channel.

Parameters

- base – ADC16 peripheral base address.
- channelGroup – Channel group index.

Returns

Flags’ mask if indicated flags are asserted. See “_adc16_channel_status_flags”.

```
FSL_ADC16_DRIVER_VERSION
```

ADC16 driver version 2.3.0.

```
enum _adc16_channel_status_flags
```

Channel status flags.

Values:

```
enumerator kADC16_ChannelConversionDoneFlag
```

Conversion done.

```
enum _adc16_status_flags
```

Converter status flags.

Values:

enumerator kADC16_ActiveFlag

Converter is active.

enumerator kADC16_CalibrationFailedFlag

Calibration is failed.

enum _adc_channel_mux_mode

Channel multiplexer mode for each channel.

For some ADC16 channels, there are two pin selections in channel multiplexer. For example, ADC0_SE4a and ADC0_SE4b are the different channels that share the same channel number.

Values:

enumerator kADC16_ChannelMuxA

For channel with channel mux a.

enumerator kADC16_ChannelMuxB

For channel with channel mux b.

enum _adc16_clock_divider

Clock divider for the converter.

Values:

enumerator kADC16_ClockDivider1

For divider 1 from the input clock to the module.

enumerator kADC16_ClockDivider2

For divider 2 from the input clock to the module.

enumerator kADC16_ClockDivider4

For divider 4 from the input clock to the module.

enumerator kADC16_ClockDivider8

For divider 8 from the input clock to the module.

enum _adc16_resolution

Converter's resolution.

Values:

enumerator kADC16_Resolution8or9Bit

Single End 8-bit or Differential Sample 9-bit.

enumerator kADC16_Resolution12or13Bit

Single End 12-bit or Differential Sample 13-bit.

enumerator kADC16_Resolution10or11Bit

Single End 10-bit or Differential Sample 11-bit.

enumerator kADC16_ResolutionSE8Bit

Single End 8-bit.

enumerator kADC16_ResolutionSE12Bit

Single End 12-bit.

enumerator kADC16_ResolutionSE10Bit

Single End 10-bit.

enumerator kADC16_ResolutionDF9Bit

Differential Sample 9-bit.

enumerator kADC16__ResolutionDF13Bit
Differential Sample 13-bit.

enumerator kADC16__ResolutionDF11Bit
Differential Sample 11-bit.

enum __adc16__clock__source
Clock source.

Values:

enumerator kADC16__ClockSourceAlt0
Selection 0 of the clock source.

enumerator kADC16__ClockSourceAlt1
Selection 1 of the clock source.

enumerator kADC16__ClockSourceAlt2
Selection 2 of the clock source.

enumerator kADC16__ClockSourceAlt3
Selection 3 of the clock source.

enumerator kADC16__ClockSourceAsynchronousClock
Using internal asynchronous clock.

enum __adc16__long__sample__mode
Long sample mode.

Values:

enumerator kADC16__LongSampleCycle24
20 extra ADCK cycles, 24 ADCK cycles total.

enumerator kADC16__LongSampleCycle16
12 extra ADCK cycles, 16 ADCK cycles total.

enumerator kADC16__LongSampleCycle10
6 extra ADCK cycles, 10 ADCK cycles total.

enumerator kADC16__LongSampleCycle6
2 extra ADCK cycles, 6 ADCK cycles total.

enumerator kADC16__LongSampleDisabled
Disable the long sample feature.

enum __adc16__reference__voltage__source
Reference voltage source.

Values:

enumerator kADC16__ReferenceVoltageSourceVref
For external pins pair of VrefH and VrefL.

enumerator kADC16__ReferenceVoltageSourceValt
For alternate reference pair of ValtH and ValtL.

enum __adc16__hardware__average__mode
Hardware average mode.

Values:

enumerator kADC16__HardwareAverageCount4
For hardware average with 4 samples.

enumerator kADC16__HardwareAverageCount8

For hardware average with 8 samples.

enumerator kADC16__HardwareAverageCount16

For hardware average with 16 samples.

enumerator kADC16__HardwareAverageCount32

For hardware average with 32 samples.

enumerator kADC16__HardwareAverageDisabled

Disable the hardware average feature.

enum __adc16__hardware__compare__mode

Hardware compare mode.

Values:

enumerator kADC16__HardwareCompareMode0

$x < \text{value1}$.

enumerator kADC16__HardwareCompareMode1

$x > \text{value1}$.

enumerator kADC16__HardwareCompareMode2

if $\text{value1} \leq \text{value2}$, then $x < \text{value1} \mid \mid x > \text{value2}$; else, $\text{value1} > x > \text{value2}$.

enumerator kADC16__HardwareCompareMode3

if $\text{value1} \leq \text{value2}$, then $\text{value1} \leq x \leq \text{value2}$; else $x \geq \text{value1} \mid \mid x \leq \text{value2}$.

enum __adc16__pga__gain

PGA's Gain mode.

Values:

enumerator kADC16__PGAGainValueOf1

For amplifier gain of 1.

enumerator kADC16__PGAGainValueOf2

For amplifier gain of 2.

enumerator kADC16__PGAGainValueOf4

For amplifier gain of 4.

enumerator kADC16__PGAGainValueOf8

For amplifier gain of 8.

enumerator kADC16__PGAGainValueOf16

For amplifier gain of 16.

enumerator kADC16__PGAGainValueOf32

For amplifier gain of 32.

enumerator kADC16__PGAGainValueOf64

For amplifier gain of 64.

typedef enum __adc_channel_mux_mode adc16_channel_mux_mode_t

Channel multiplexer mode for each channel.

For some ADC16 channels, there are two pin selections in channel multiplexer. For example, ADC0_SE4a and ADC0_SE4b are the different channels that share the same channel number.

typedef enum __adc16_clock_divider adc16_clock_divider_t

Clock divider for the converter.

```
typedef enum _adc16_resolution adc16_resolution_t
    Converter's resolution.

typedef enum _adc16_clock_source adc16_clock_source_t
    Clock source.

typedef enum _adc16_long_sample_mode adc16_long_sample_mode_t
    Long sample mode.

typedef enum _adc16_reference_voltage_source adc16_reference_voltage_source_t
    Reference voltage source.

typedef enum _adc16_hardware_average_mode adc16_hardware_average_mode_t
    Hardware average mode.

typedef enum _adc16_hardware_compare_mode adc16_hardware_compare_mode_t
    Hardware compare mode.

typedef enum _adc16_pga_gain adc16_pga_gain_t
    PGA's Gain mode.

typedef struct _adc16_config adc16_config_t
    ADC16 converter configuration.

typedef struct _adc16_hardware_compare_config adc16_hardware_compare_config_t
    ADC16 Hardware comparison configuration.

typedef struct _adc16_channel_config adc16_channel_config_t
    ADC16 channel conversion configuration.

typedef struct _adc16_pga_config adc16_pga_config_t
    ADC16 programmable gain amplifier configuration.

struct _adc16_config
    #include <fsl_adc16.h> ADC16 converter configuration.
```

Public Members

```
adc16_reference_voltage_source_t referenceVoltageSource
    Select the reference voltage source.

adc16_clock_source_t clockSource
    Select the input clock source to converter.

bool enableAsynchronousClock
    Enable the asynchronous clock output.

adc16_clock_divider_t clockDivider
    Select the divider of input clock source.

adc16_resolution_t resolution
    Select the sample resolution mode.

adc16_long_sample_mode_t longSampleMode
    Select the long sample mode.

bool enableHighSpeed
    Enable the high-speed mode.

bool enableLowPower
    Enable low power.
```


bool enableContinuousConversion

Enable continuous conversion mode.

adc16_hardware_average_mode_t hardwareAverageMode

Set hardware average mode.

struct *_adc16_hardware_compare_config*

#include <fsl_adc16.h> ADC16 Hardware comparison configuration.

Public Members

adc16_hardware_compare_mode_t hardwareCompareMode

Select the hardware compare mode. See “*adc16_hardware_compare_mode_t*”.

int16_t value1

Setting value1 for hardware compare mode.

int16_t value2

Setting value2 for hardware compare mode.

struct *_adc16_channel_config*

#include <fsl_adc16.h> ADC16 channel conversion configuration.

Public Members

uint32_t channelNumber

Setting the conversion channel number. The available range is 0-31. See channel connection information for each chip in Reference Manual document.

bool enableInterruptOnConversionCompleted

Generate an interrupt request once the conversion is completed.

bool enableDifferentialConversion

Using Differential sample mode.

struct *_adc16_pga_config*

#include <fsl_adc16.h> ADC16 programmable gain amplifier configuration.

Public Members

adc16_pga_gain_t pgaGain

Setting PGA gain.

bool enableRunInNormalMode

Enable PGA working in normal mode, or low power mode by default.

bool disablePgaChopping

Disable the PGA chopping function. The PGA employs chopping to remove/reduce offset and 1/f noise and offers an offset measurement configuration that aids the offset calibration.

bool enableRunInOffsetMeasurement

Enable the PGA working in offset measurement mode. When this feature is enabled, the PGA disconnects itself from the external inputs and auto-configures into offset measurement mode. With this field set, run the ADC in the recommended settings and enable the maximum hardware averaging to get the PGA offset number. The output is the (PGA offset * (64+1)) for the given PGA setting.

2.2 Clock Driver

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_CoreSysClk

Core/system clock

enumerator kCLOCK_PlatClk

Platform clock

enumerator kCLOCK_BusClk

Bus clock

enumerator kCLOCK_FlexBusClk

FlexBus clock

enumerator kCLOCK_FlashClk

Flash clock

enumerator kCLOCK_FastPeriphClk

Fast peripheral clock

enumerator kCLOCK_PllFllSelClk

The clock after SIM[PLLFLSEL].

enumerator kCLOCK_Er32kClk

External reference 32K clock (ERCLK32K)

enumerator kCLOCK_Osc0ErClk

OSC0 external reference clock (OSC0ERCLK)

enumerator kCLOCK_Osc1ErClk

OSC1 external reference clock (OSC1ERCLK)

enumerator kCLOCK_Osc0ErClkUndiv

OSC0 external reference undivided clock(OSC0ERCLK_UNDIV).

enumerator kCLOCK_McgFixedFreqClk

MCG fixed frequency clock (MCGFFCLK)

enumerator kCLOCK_McgInternalRefClk

MCG internal reference clock (MCGIRCLK)

enumerator kCLOCK_McgFllClk

MCGFLLCLK

enumerator kCLOCK_McgPll0Clk

MCGPLL0CLK

enumerator kCLOCK_McgPll1Clk

MCGPLL1CLK

enumerator kCLOCK_McgExtPllClk

EXT_PLLCLK

enumerator kCLOCK_McgPeriphClk

MCG peripheral clock (MCGPCLK)

enumerator kCLOCK_McgIrc48MClk

MCG IRC48M clock

enumerator kCLOCK_LpoClk
LPO clock

enum __clock_ip_name

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

Values:

enumerator kCLOCK_IpInvalid

enumerator kCLOCK_I2c0

enumerator kCLOCK_I2c1

enumerator kCLOCK_Uart2

enumerator kCLOCK_Cmp0

enumerator kCLOCK_Vref0

enumerator kCLOCK_Spi0

enumerator kCLOCK_Spi1

enumerator kCLOCK_Lptmr0

enumerator kCLOCK_PortA

enumerator kCLOCK_PortB

enumerator kCLOCK_PortC

enumerator kCLOCK_PortD

enumerator kCLOCK_PortE

enumerator kCLOCK_Lpuart0

enumerator kCLOCK_Lpuart1

enumerator kCLOCK_Flexio0

enumerator kCLOCK_Ftf0

enumerator kCLOCK_Dmamux0

enumerator kCLOCK_Crc0

enumerator kCLOCK_Pit0

enumerator kCLOCK_Tpm0

enumerator kCLOCK_Tpm1

enumerator kCLOCK_Tpm2

enumerator kCLOCK_Adc0

enumerator kCLOCK_Rtc0

enumerator kCLOCK_Dma0

enum __osc_cap_load

Oscillator capacitor load setting.

Values:

enumerator kOSC_Cap2P

2 pF capacitor load

enumerator kOSC_Cap4P

4 pF capacitor load

enumerator kOSC_Cap8P

8 pF capacitor load

enumerator kOSC_Cap16P

16 pF capacitor load

enum __oscer_enable_mode

OSCERCLK enable mode.

Values:

enumerator kOSC_ErClkEnable

Enable.

enumerator kOSC_ErClkEnableInStop

Enable in stop mode.

enum __osc_mode

The OSC work mode.

Values:

enumerator kOSC_ModeExt

Use external clock.

enumerator kOSC_ModeOscLowPower

Oscillator low power.

enumerator kOSC_ModeOscHighGain

Oscillator high gain.

enum __mcglite_clkout_src

MCG_Lite clock source selection.

Values:

enumerator kMCGLITE_ClkSrcHirc

MCGOUTCLK source is HIRC

enumerator kMCGLITE_ClkSrcLirc

MCGOUTCLK source is LIRC

enumerator kMCGLITE_ClkSrcExt

MCGOUTCLK source is external clock source

enumerator kMCGLITE_ClkSrcReserved

enum __mcglite_lirc_mode

MCG_Lite LIRC select.

Values:

enumerator kMCGLITE_Lirc2M

Slow internal reference(LIRC) 2 MHz clock selected

enumerator kMCGLITE_Lirc8M

Slow internal reference(LIRC) 8 MHz clock selected

enum `_mcglite_lirc_div`

MCG_Lite divider factor selection for clock source.

Values:

enumerator `kMCGLITE_LircDivBy1`

Divider is 1

enumerator `kMCGLITE_LircDivBy2`

Divider is 2

enumerator `kMCGLITE_LircDivBy4`

Divider is 4

enumerator `kMCGLITE_LircDivBy8`

Divider is 8

enumerator `kMCGLITE_LircDivBy16`

Divider is 16

enumerator `kMCGLITE_LircDivBy32`

Divider is 32

enumerator `kMCGLITE_LircDivBy64`

Divider is 64

enumerator `kMCGLITE_LircDivBy128`

Divider is 128

enum `_mcglite_mode`

MCG_Lite clock mode definitions.

Values:

enumerator `kMCGLITE_ModeHirc48M`

Clock mode is HIRC 48 M

enumerator `kMCGLITE_ModeLirc8M`

Clock mode is LIRC 8 M

enumerator `kMCGLITE_ModeLirc2M`

Clock mode is LIRC 2 M

enumerator `kMCGLITE_ModeExt`

Clock mode is EXT

enumerator `kMCGLITE_ModeError`

Unknown mode

enum `_mcglite_ircclk_enable_mode`

MCG internal reference clock (MCGIRCLK) enable mode definition.

Values:

enumerator `kMCGLITE_IrcclkEnable`

MCGIRCLK enable.

enumerator `kMCGLITE_IrcclkEnableInStop`

MCGIRCLK enable in stop mode.

typedef enum `_clock_name` `clock_name_t`

Clock name used to get clock frequency.

typedef enum *_clock_ip_name* clock_ip_name_t

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

typedef struct *_sim_clock_config* sim_clock_config_t

SIM configuration structure for clock setting.

typedef struct *_oscer_config* oscer_config_t

The OSC configuration for OSCERCLK.

typedef enum *_osc_mode* osc_mode_t

The OSC work mode.

typedef struct *_osc_config* osc_config_t

OSC Initialization Configuration Structure.

Defines the configuration data structure to initialize the OSC. When porting to a new board, set the following members according to the board settings:

- a. freq: The external frequency.
- b. workMode: The OSC module mode.

typedef enum *_mcglite_clkout_src* mcglite_clkout_src_t

MCG_Lite clock source selection.

typedef enum *_mcglite_lirc_mode* mcglite_lirc_mode_t

MCG_Lite LIRC select.

typedef enum *_mcglite_lirc_div* mcglite_lirc_div_t

MCG_Lite divider factor selection for clock source.

typedef enum *_mcglite_mode* mcglite_mode_t

MCG_Lite clock mode definitions.

typedef struct *_mcglite_config* mcglite_config_t

MCG_Lite configure structure for mode change.

volatile uint32_t g_xtal0Freq

External XTAL0 (OSC0) clock frequency.

The XTAL0/EXTAL0 (OSC0) clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal0Freq to set the value in the clock driver. For example, if XTAL0 is 8 MHz:

```
CLOCK_InitOsc0(...);  
CLOCK_SetXtal0Freq(8000000);
```

This is important for the multicore platforms where one core needs to set up the OSC0 using the CLOCK_InitOsc0. All other cores need to call the CLOCK_SetXtal0Freq to get a valid clock frequency.

volatile uint32_t g_xtal32Freq

The external XTAL32/EXTAL32/RTC_CLKIN clock frequency.

The XTAL32/EXTAL32/RTC_CLKIN clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal32Freq to set the value in the clock driver.

This is important for the multicore platforms where one core needs to set up the clock. All other cores need to call the CLOCK_SetXtal32Freq to get a valid clock frequency.

static inline void CLOCK_EnableClock(*clock_ip_name_t* name)

Enable the clock for specific IP.

Parameters

- name – Which clock to enable, see clock_ip_name_t.

static inline void CLOCK_DisableClock(*clock_ip_name_t* name)

Disable the clock for specific IP.

Parameters

- name – Which clock to disable, see clock_ip_name_t.

static inline void CLOCK_SetEr32kClock(uint32_t src)

Set ERCLK32K source.

Parameters

- src – The value to set ERCLK32K clock source.

static inline void CLOCK_SetLpuart0Clock(uint32_t src)

Set LPUART0 clock source.

Parameters

- src – The value to set LPUART0 clock source.

static inline void CLOCK_SetLpuart1Clock(uint32_t src)

Set LPUART1 clock source.

Parameters

- src – The value to set LPUART1 clock source.

static inline void CLOCK_SetTpmClock(uint32_t src)

Set TPM clock source.

Parameters

- src – The value to set TPM clock source.

static inline void CLOCK_SetFlexio0Clock(uint32_t src)

Set FLEXIO clock source.

Parameters

- src – The value to set FLEXIO clock source.

static inline void CLOCK_SetClkOutClock(uint32_t src)

Set CLKOUT source.

Parameters

- src – The value to set CLKOUT source.

static inline void CLOCK_SetRtcClkOutClock(uint32_t src)

Set RTC_CLKOUT source.

Parameters

- src – The value to set RTC_CLKOUT source.

static inline void CLOCK_SetOutDiv(uint32_t outdiv1, uint32_t outdiv4)

System clock divider.

Set the SIM_CLKDIV1[OUTDIV1], SIM_CLKDIV1[OUTDIV4].

Parameters

- outdiv1 – Clock 1 output divider value.
- outdiv4 – Clock 4 output divider value.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in *clock_name_t*. The MCG must be properly configured before using this function.

Parameters

- clockName – Clock names defined in *clock_name_t*

Returns

Clock frequency value in Hertz

uint32_t CLOCK_GetCoreSysClkFreq(void)

Get the core clock or system clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetPlatClkFreq(void)

Get the platform clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetBusClkFreq(void)

Get the bus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFlashClkFreq(void)

Get the flash clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetEr32kClkFreq(void)

Get the external reference 32K clock frequency (ERCLK32K).

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetOsc0ErClkFreq(void)

Get the OSC0 external reference clock frequency (OSC0ERCLK).

Returns

Clock frequency in Hz.

void CLOCK_SetSimConfig(*sim_clock_config_t* const *config)

Set the clock configure in SIM module.

This function sets system layer clock settings in SIM module.

Parameters

- config – Pointer to the configure structure.

static inline void CLOCK_SetSimSafeDivs(void)

Set the system clock dividers in SIM to safe value.

The system level clocks (core clock, bus clock, flexbus clock and flash clock) must be in allowed ranges. During MCG clock mode switch, the MCG output clock changes then the system level clocks may be out of range. This function could be used before MCG mode change, to make sure system level clocks are in allowed range.

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.3.1.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

DMAMUX_CLOCKS

Clock ip name array for DMAMUX.

RTC_CLOCKS

Clock ip name array for RTC.

SPI_CLOCKS

Clock ip name array for SPI.

PIT_CLOCKS

Clock ip name array for PIT.

PORT_CLOCKS

Clock ip name array for PORT.

LPUART_CLOCKS

Clock ip name array for LPUART.

LPTMR_CLOCKS

Clock ip name array for LPTMR.

ADC16_CLOCKS

Clock ip name array for ADC16.

FLEXIO_CLOCKS

Clock ip name array for FLEXIO.

VREF_CLOCKS

Clock ip name array for VREF.

DMA_CLOCKS

Clock ip name array for DMA.

UART_CLOCKS

Clock ip name array for UART.

TPM_CLOCKS

Clock ip name array for TPM.

CRC_CLOCKS

Clock ip name array for CRC.

I2C_CLOCKS

Clock ip name array for I2C.

FTF_CLOCKS

Clock ip name array for FTF.

CMP_CLOCKS

Clock ip name array for CMP.

LPO_CLK_FREQ

LPO clock frequency.

SYS_CLK

Peripherals clock source definition.

BUS_CLK

I2C0_CLK_SRC

I2C1_CLK_SRC

SPI0_CLK_SRC

SPI1_CLK_SRC

UART2_CLK_SRC

CLK_GATE_REG_OFFSET_SHIFT

CLK_GATE_REG_OFFSET_MASK

CLK_GATE_BIT_SHIFT_SHIFT

CLK_GATE_BIT_SHIFT_MASK

CLK_GATE_DEFINE(reg_offset, bit_shift)

CLK_GATE_ABSTRACT_REG_OFFSET(x)

CLK_GATE_ABSTRACT_BITS_SHIFT(x)

uint32_t CLOCK_GetOutClkFreq(void)

Gets the MCG_Lite output clock (MCGOUTCLK) frequency.

This function gets the MCG_Lite output clock frequency in Hz based on the current MCG_Lite register value.

Returns

The frequency of MCGOUTCLK.

uint32_t CLOCK_GetInternalRefClkFreq(void)

Gets the MCG internal reference clock (MCGIRCLK) frequency.

This function gets the MCG_Lite internal reference clock frequency in Hz based on the current MCG register value.

Returns

The frequency of MCGIRCLK.

uint32_t CLOCK_GetPeriphClkFreq(void)

Gets the current MCGPCLK frequency.

This function gets the MCGPCLK frequency in Hz based on the current MCG_Lite register settings.

Returns

The frequency of MCGPCLK.

mcglite_mode_t CLOCK_GetMode(void)

Gets the current MCG_Lite mode.

This function checks the MCG_Lite registers and determines the current MCG_Lite mode.

Returns

The current MCG_Lite mode or error code.

status_t CLOCK_SetMcgliteConfig(mcglite_config_t const *targetConfig)

Sets the MCG_Lite configuration.

This function configures the MCG_Lite, includes the output clock source, MCGIRCLK settings, HIRC settings, and so on. See mcglite_config_t for details.

Parameters

- targetConfig – Pointer to the target MCG_Lite mode configuration structure.

Returns

Error code.

static inline void OSC_SetExtRefClkConfig(OSC_Type *base, *oscer_config_t* const *config)

Configures the OSC external reference clock (OSCERCLK).

This function configures the OSC external reference clock (OSCERCLK). This is an example to enable the OSCERCLK in normal mode and stop mode, and set the output divider to 1.

```
oscer_config_t config =
{
    .enableMode = kOSC_ErClkEnable | kOSC_ErClkEnableInStop,
    .erclkDiv   = 1U,
};

OSC_SetExtRefClkConfig(OSC, &config);
```

Parameters

- base – OSC peripheral address.
- config – Pointer to the configuration structure.

static inline void OSC_SetCapLoad(OSC_Type *base, uint8_t capLoad)

Sets the capacitor load configuration for the oscillator.

This function sets the specified capacitor configuration for the oscillator. This should be done in the early system level initialization function call based on the system configuration.

Example:

```
OSC_SetCapLoad(OSC, kOSC_Cap2P | kOSC_Cap8P);
```

Parameters

- base – OSC peripheral address.
- capLoad – OR'ed value for the capacitor load option. See `_osc_cap_load`.

void CLOCK_InitOsc0(*osc_config_t* const *config)

Initializes the OSC0.

This function initializes the OSC0 according to the board configuration.

Parameters

- config – Pointer to the OSC0 configuration structure.

void CLOCK_DeinitOsc0(void)

Deinitializes the OSC0.

This function deinitializes the OSC0.

static inline void CLOCK_SetXtal0Freq(uint32_t freq)

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

static inline void CLOCK_SetXtal32Freq(uint32_t freq)

Sets the XTAL32/RTC_CLKIN frequency based on board settings.

Parameters

- freq – The XTAL32/EXTAL32/RTC_CLKIN input clock frequency in Hz.

uint8_t er32kSrc

ERCLK32K source selection.

uint32_t clkdiv1

SIM_CLKDIV1.

uint8_t enableMode

OSCERCLK enable mode. OR'ed value of _oscer_enable_mode.

uint32_t freq

External clock frequency.

uint8_t capLoad

Capacitor load setting.

osc_mode_t workMode

OSC work mode setting.

oscer_config_t oscerConfig

Configuration for OSCERCLK.

mcglite_clkout_src_t outSrc

MCGOUT clock select.

uint8_t irclkEnableMode

MCGIRCLK enable mode, OR'ed value of _mcglite_irclk_enable_mode.

mcglite_lirc_mode_t ircs

MCG_C2[IRCS].

mcglite_lirc_div_t fcrdiv

MCG_SC[FCRDIV].

mcglite_lirc_div_t lircDiv2

MCG_MC[LIRC_DIV2].

bool hircEnableInNotHircMode

HIRC enable when not in HIRC mode.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

struct __sim_clock_config

#include <fsl_clock.h> SIM configuration structure for clock setting.

struct __oscer_config

#include <fsl_clock.h> The OSC configuration for OSCERCLK.

struct __osc_config

#include <fsl_clock.h> OSC Initialization Configuration Structure.

Defines the configuration data structure to initialize the OSC. When porting to a new board, set the following members according to the board settings:

- a. freq: The external frequency.

b. `workMode`: The OSC module mode.

```
struct _mcglite_config
```

```
#include <fsl_clock.h> MCG_Lite configure structure for mode change.
```

2.3 CMP: Analog Comparator Driver

```
void CMP_Init(CMP_Type *base, const cmp_config_t *config)
```

Initializes the CMP.

This function initializes the CMP module. The operations included are as follows.

- Enabling the clock for CMP module.
- Configuring the comparator.
- Enabling the CMP module. Note that for some devices, multiple CMP instances share the same clock gate. In this case, to enable the clock for any instance enables all CMPs. See the appropriate MCU reference manual for the clock assignment of the CMP.

Parameters

- `base` – CMP peripheral base address.
- `config` – Pointer to the configuration structure.

```
void CMP_Deinit(CMP_Type *base)
```

De-initializes the CMP module.

This function de-initializes the CMP module. The operations included are as follows.

- Disabling the CMP module.
- Disabling the clock for CMP module.

This function disables the clock for the CMP. Note that for some devices, multiple CMP instances share the same clock gate. In this case, before disabling the clock for the CMP, ensure that all the CMP instances are not used.

Parameters

- `base` – CMP peripheral base address.

```
static inline void CMP_Enable(CMP_Type *base, bool enable)
```

Enables/disables the CMP module.

Parameters

- `base` – CMP peripheral base address.
- `enable` – Enables or disables the module.

```
void CMP_GetDefaultConfig(cmp_config_t *config)
```

Initializes the CMP user configuration structure.

This function initializes the user configuration structure to these default values.

```
config->enableCmp      = true;
config->hysteresisMode  = kCMP_HysteresisLevel0;
config->enableHighSpeed = false;
config->enableInvertOutput = false;
config->useUnfilteredOutput = false;
config->enablePinOut     = false;
config->enableTriggerMode = false;
```

Parameters

- `config` – Pointer to the configuration structure.

```
void CMP_SetInputChannels(CMP_Type *base, uint8_t positiveChannel, uint8_t  
                        negativeChannel)
```

Sets the input channels for the comparator.

This function sets the input channels for the comparator. Note that two input channels cannot be set the same way in the application. When the user selects the same input from the analog mux to the positive and negative port, the comparator is disabled automatically.

Parameters

- `base` – CMP peripheral base address.
- `positiveChannel` – Positive side input channel number. Available range is 0-7.
- `negativeChannel` – Negative side input channel number. Available range is 0-7.

```
void CMP_EnableDMA(CMP_Type *base, bool enable)
```

Enables/disables the DMA request for rising/falling events.

This function enables/disables the DMA request for rising/falling events. Either event triggers the generation of the DMA request from CMP if the DMA feature is enabled. Both events are ignored for generating the DMA request from the CMP if the DMA is disabled.

Parameters

- `base` – CMP peripheral base address.
- `enable` – Enables or disables the feature.

```
static inline void CMP_EnableWindowMode(CMP_Type *base, bool enable)
```

Enables/disables the window mode.

Parameters

- `base` – CMP peripheral base address.
- `enable` – Enables or disables the feature.

```
static inline void CMP_EnablePassThroughMode(CMP_Type *base, bool enable)
```

Enables/disables the pass through mode.

Parameters

- `base` – CMP peripheral base address.
- `enable` – Enables or disables the feature.

```
void CMP_SetFilterConfig(CMP_Type *base, const cmp_filter_config_t *config)
```

Configures the filter.

Parameters

- `base` – CMP peripheral base address.
- `config` – Pointer to the configuration structure.

```
void CMP_SetDACConfig(CMP_Type *base, const cmp_dac_config_t *config)
```

Configures the internal DAC.

Parameters

- `base` – CMP peripheral base address.
- `config` – Pointer to the configuration structure. “NULL” disables the feature.

`void CMP_EnableInterrupts(CMP_Type *base, uint32_t mask)`

Enables the interrupts.

Parameters

- `base` – CMP peripheral base address.
- `mask` – Mask value for interrupts. See “`_cmp_interrupt_enable`”.

`void CMP_DisableInterrupts(CMP_Type *base, uint32_t mask)`

Disables the interrupts.

Parameters

- `base` – CMP peripheral base address.
- `mask` – Mask value for interrupts. See “`_cmp_interrupt_enable`”.

`uint32_t CMP_GetStatusFlags(CMP_Type *base)`

Gets the status flags.

Parameters

- `base` – CMP peripheral base address.

Returns

Mask value for the asserted flags. See “`_cmp_status_flags`”.

`void CMP_ClearStatusFlags(CMP_Type *base, uint32_t mask)`

Clears the status flags.

Parameters

- `base` – CMP peripheral base address.
- `mask` – Mask value for the flags. See “`_cmp_status_flags`”.

`FSL_CMP_DRIVER_VERSION`

CMP driver version 2.0.3.

`enum _cmp_interrupt_enable`

Interrupt enable/disable mask.

Values:

enumerator `kCMP_OutputRisingInterruptEnable`

Comparator interrupt enable rising.

enumerator `kCMP_OutputFallingInterruptEnable`

Comparator interrupt enable falling.

`enum _cmp_status_flags`

Status flags' mask.

Values:

enumerator `kCMP_OutputRisingEventFlag`

Rising-edge on the comparison output has occurred.

enumerator `kCMP_OutputFallingEventFlag`

Falling-edge on the comparison output has occurred.

enumerator `kCMP_OutputAssertEventFlag`

Return the current value of the analog comparator output.

enum *_cmp_hysteresis_mode*

CMP Hysteresis mode.

Values:

enumerator *kCMP_HysteresisLevel0*

Hysteresis level 0.

enumerator *kCMP_HysteresisLevel1*

Hysteresis level 1.

enumerator *kCMP_HysteresisLevel2*

Hysteresis level 2.

enumerator *kCMP_HysteresisLevel3*

Hysteresis level 3.

enum *_cmp_reference_voltage_source*

CMP Voltage Reference source.

Values:

enumerator *kCMP_VrefSourceVin1*

Vin1 is selected as a resistor ladder network supply reference Vin.

enumerator *kCMP_VrefSourceVin2*

Vin2 is selected as a resistor ladder network supply reference Vin.

typedef enum *_cmp_hysteresis_mode* *cmp_hysteresis_mode_t*

CMP Hysteresis mode.

typedef enum *_cmp_reference_voltage_source* *cmp_reference_voltage_source_t*

CMP Voltage Reference source.

typedef struct *_cmp_config* *cmp_config_t*

Configures the comparator.

typedef struct *_cmp_filter_config* *cmp_filter_config_t*

Configures the filter.

typedef struct *_cmp_dac_config* *cmp_dac_config_t*

Configures the internal DAC.

struct *_cmp_config*

#include <fsl_cmp.h> Configures the comparator.

Public Members

bool *enableCmp*

Enable the CMP module.

cmp_hysteresis_mode_t *hysteresisMode*

CMP Hysteresis mode.

bool *enableHighSpeed*

Enable High-speed (HS) comparison mode.

bool *enableInvertOutput*

Enable the inverted comparator output.

bool *useUnfilteredOutput*

Set the compare output(COUT) to equal COUTA(true) or COUT(false).

bool enablePinOut

The comparator output is available on the associated pin.

bool enableTriggerMode

Enable the trigger mode.

struct __cmp_filter_config

#include <fsl_cmp.h> Configures the filter.

Public Members

bool enableSample

Using the external SAMPLE as a sampling clock input or using a divided bus clock.

uint8_t filterCount

Filter Sample Count. Available range is 1-7; 0 disables the filter.

uint8_t filterPeriod

Filter Sample Period. The divider to the bus clock. Available range is 0-255.

struct __cmp_dac_config

#include <fsl_cmp.h> Configures the internal DAC.

Public Members

cmp_reference_voltage_source_t referenceVoltageSource

Supply voltage reference source.

uint8_t DACValue

Value for the DAC Output Voltage. Available range is 0-63.

2.4 COP: Watchdog Driver

void COP_GetDefaultConfig(*cop_config_t* *config)

Initializes the COP configuration structure.

This function initializes the COP configuration structure to default values. The default values are:

```
copConfig->enableWindowMode = false;
copConfig->timeoutMode = kCOP_LongTimeoutMode;
copConfig->enableStop = false;
copConfig->enableDebug = false;
copConfig->clockSource = kCOP_LpoClock;
copConfig->timeoutCycles = kCOP_2Power10CyclesOr2Power18Cycles;
```

See also:

cop_config_t

Parameters

- config – Pointer to the COP configuration structure.

`void COP_Init(SIM_Type *base, const cop_config_t *config)`

Initializes the COP module.

This function configures the COP. After it is called, the COP starts running according to the configuration. Because all COP control registers are write-once only, the `COP_Init` function and the `COP_Disable` function can be called only once. A second call has no effect.

Example:

```
cop_config_t config;
COP_GetDefaultConfig(&config);
config.timeoutCycles = kCOP_2Power8CyclesOr2Power16Cycles;
COP_Init(sim_base,&config);
```

Parameters

- `base` – SIM peripheral base address.
- `config` – The configuration of COP.

`static inline void COP_Disable(SIM_Type *base)`

De-initializes the COP module. This dedicated function is not provided. Instead, the `COP_Disable` function can be used to disable the COP.

Disables the COP module.

This function disables the COP Watchdog. Note: The COP configuration register is a write-once after reset. To disable the COP Watchdog, call this function first.

Parameters

- `base` – SIM peripheral base address.

`void COP_Refresh(SIM_Type *base)`

Refreshes the COP timer.

This function feeds the COP.

Parameters

- `base` – SIM peripheral base address.

`FSL_COP_DRIVER_VERSION`

COP driver version 2.0.2.

`COP_FIRST_BYTE_OF_REFRESH`

First byte of refresh sequence

`COP_SECOND_BYTE_OF_REFRESH`

Second byte of refresh sequence

`enum _cop_clock_source`

COP clock source selection.

Values:

enumerator `kCOP_LpoClock`

COP clock sourced from LPO

enumerator `kCOP_McgIrClock`

COP clock sourced from MCGIRCLK

enumerator `kCOP_OscErClock`

COP clock sourced from OSCERCLK

enumerator kCOP_BusClock
COP clock sourced from Bus clock

enum _cop_timeout_cycles
Define the COP timeout cycles.

Values:

enumerator kCOP_2Power5CyclesOr2Power13Cycles
2⁵ or 2¹³ clock cycles

enumerator kCOP_2Power8CyclesOr2Power16Cycles
2⁸ or 2¹⁶ clock cycles

enumerator kCOP_2Power10CyclesOr2Power18Cycles
2¹⁰ or 2¹⁸ clock cycles

enum _cop_timeout_mode
Define the COP timeout mode.

Values:

enumerator kCOP_ShortTimeoutMode
COP selects short timeout

enumerator kCOP_LongTimeoutMode
COP selects long timeout

typedef enum _cop_clock_source cop_clock_source_t
COP clock source selection.

typedef enum _cop_timeout_cycles cop_timeout_cycles_t
Define the COP timeout cycles.

typedef enum _cop_timeout_mode cop_timeout_mode_t
Define the COP timeout mode.

typedef struct _cop_config cop_config_t
Describes COP configuration structure.

struct _cop_config
#include <fsl_cop.h> Describes COP configuration structure.

Public Members

bool enableWindowMode
COP run mode: window mode or normal mode

cop_timeout_mode_t timeoutMode
COP timeout mode: long timeout or short timeout

bool enableStop
Enable or disable COP in STOP mode

bool enableDebug
Enable or disable COP in DEBUG mode

cop_clock_source_t clockSource
Set COP clock source

cop_timeout_cycles_t timeoutCycles
Set COP timeout value

2.5 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.1.0.

Current version: 2.1.0

Change log:

- Version 2.1.0
 - Choosing CRC clocks from CRC clock array according to instance instead of hard-coded value.
- Version 2.0.5
 - Fix CERT-C issue with boolean-to-unsigned integer conversion.
- Version 2.0.4
 - Release peripheral from reset if necessary in init function.
- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum __crc_bits

CRC bit width.

Values:

enumerator kCrcBits16

Generate 16-bit CRC code

enumerator kCrcBits32

Generate 32-bit CRC code

enum __crc_result

CRC result type.

Values:

enumerator kCrcFinalChecksum

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator kCrcIntermediateChecksum

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for CRC_Init() to continue adding data to this checksum.

typedef enum __crc_bits crc_bits_t

CRC bit width.

typedef enum __crc_result crc_result_t

CRC result type.

`typedef struct _crc_config crc_config_t`
CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

`void CRC_Init(CRC_Type *base, const crc_config_t *config)`
Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

`void CRC_Deinit(CRC_Type *base)`
Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- `base` – CRC peripheral address.

`void CRC_GetDefaultConfig(crc_config_t *config)`
Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- `config` – CRC protocol configuration structure.

`void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)`
Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- `base` – CRC peripheral address.
- `data` – Input data stream, MSByte in `data[0]`.
- `dataSize` – Size in bytes of the input data buffer.

`uint32_t CRC_Get32bitResult(CRC_Type *base)`
Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- `base` – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

`uint16_t CRC_Get16bitResult(CRC_Type *base)`

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- `base` – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

`CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT`

Default configuration structure filled by `CRC_GetDefaultConfig()`. Use CRC16-CCIT-FALSE as default.

`struct __crc_config`

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

`uint32_t polynomial`

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1\_0000\_0010\_0001 = x^{12} + x^5 + 1$

`uint32_t seed`

Starting checksum value

`bool reflectIn`

Reflect bits on input.

`bool reflectOut`

Reflect bits on output.

`bool complementChecksum`

True if the result shall be complement of the actual checksum.

`crc_bits_t crcBits`

Selects 16- or 32- bit CRC protocol.

`crc_result_t crcResult`

Selects final or intermediate checksum return from `CRC_Get16bitResult()` or `CRC_Get32bitResult()`

2.6 DMA: Direct Memory Access Controller Driver

`void DMA_Init(DMA_Type *base)`

Initializes the DMA peripheral.

This function ungates the DMA clock.

Parameters

- base – DMA peripheral base address.

void DMA_Deinit(DMA_Type *base)

Deinitializes the DMA peripheral.

This function gates the DMA clock.

Parameters

- base – DMA peripheral base address.

void DMA_ResetChannel(DMA_Type *base, uint32_t channel)

Resets the DMA channel.

Sets all register values to reset values and enables the cycle steal and auto stop channel request features.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

void DMA_SetTransferConfig(DMA_Type *base, uint32_t channel, const *dma_transfer_config_t* *config)

Configures the DMA transfer attribute.

This function configures the transfer attribute including the source address, destination address, transfer size, and so on. This example shows how to set up the *dma_transfer_config_t* parameters and how to call the *DMA_ConfigBasicTransfer* function.

```
dma_transfer_config_t transferConfig;
memset(&transferConfig, 0, sizeof(transferConfig));
transferConfig.srcAddr = (uint32_t)srcAddr;
transferConfig.destAddr = (uint32_t)destAddr;
transferConfig.enableSrcIncrement = true;
transferConfig.enableDestIncrement = true;
transferConfig.srcSize = kDMA_Transfersize32bits;
transferConfig.destSize = kDMA_Transfersize32bits;
transferConfig.transferSize = sizeof(uint32_t) * BUFF_LENGTH;
DMA_SetTransferConfig(DMA0, 0, &transferConfig);
```

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.
- config – Pointer to the DMA transfer configuration structure.

void DMA_SetChannelLinkConfig(DMA_Type *base, uint32_t channel, const *dma_channel_link_config_t* *config)

Configures the DMA channel link feature.

This function allows DMA channels to have their transfers linked. The current DMA channel triggers a DMA request to the linked channels (LCH1 or LCH2) depending on the channel link type. Perform a link to channel LCH1 after each cycle-steal transfer followed by a link to LCH2 after the BCR decrements to 0 if the type is *kDMA_ChannelLinkChannel1AndChannel2*. Perform a link to LCH1 after each cycle-steal transfer if the type is *kDMA_ChannelLinkChannel1*. Perform a link to LCH1 after the BCR decrements to 0 if the type is *kDMA_ChannelLinkChannel1AfterBCR0*.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

- `config` – Pointer to the channel link configuration structure.

static inline void DMA_SetSourceAddress(DMA_Type *base, uint32_t channel, uint32_t srcAddr)

Sets the DMA source address for the DMA transfer.

Parameters

- `base` – DMA peripheral base address.
- `channel` – DMA channel number.
- `srcAddr` – DMA source address.

static inline void DMA_SetDestinationAddress(DMA_Type *base, uint32_t channel, uint32_t destAddr)

Sets the DMA destination address for the DMA transfer.

Parameters

- `base` – DMA peripheral base address.
- `channel` – DMA channel number.
- `destAddr` – DMA destination address.

static inline void DMA_SetTransferSize(DMA_Type *base, uint32_t channel, uint32_t size)

Sets the DMA transfer size for the DMA transfer.

Parameters

- `base` – DMA peripheral base address.
- `channel` – DMA channel number.
- `size` – The number of bytes to be transferred.

void DMA_SetModulo(DMA_Type *base, uint32_t channel, *dma_modulo_t* srcModulo, *dma_modulo_t* destModulo)

Sets the DMA modulo for the DMA transfer.

This function defines a specific address range specified to be the value after (SAR + SSIZE)/(DAR + DSIZE) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `base` – DMA peripheral base address.
- `channel` – DMA channel number.
- `srcModulo` – source address modulo.
- `destModulo` – destination address modulo.

static inline void DMA_EnableCycleSteal(DMA_Type *base, uint32_t channel, bool enable)

Enables the DMA cycle steal for the DMA transfer.

If the cycle steal feature is enabled (true), the DMA controller forces a single read/write transfer per request, or it continuously makes read/write transfers until the BCR decrements to 0.

Parameters

- `base` – DMA peripheral base address.
- `channel` – DMA channel number.
- `enable` – The command for enable (true) or disable (false).

static inline void DMA_EnableAutoAlign(DMA_Type *base, uint32_t channel, bool enable)

Enables the DMA auto align for the DMA transfer.

If the auto align feature is enabled (true), the appropriate address register increments regardless of DINC or SINC.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.
- enable – The command for enable (true) or disable (false).

static inline void DMA_EnableAsyncRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables the DMA async request for the DMA transfer.

If the async request feature is enabled (true), the DMA supports asynchronous DREQs while the MCU is in stop mode.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.
- enable – The command for enable (true) or disable (false).

static inline void DMA_EnableInterrupts(DMA_Type *base, uint32_t channel)

Enables an interrupt for the DMA transfer.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

static inline void DMA_DisableInterrupts(DMA_Type *base, uint32_t channel)

Disables an interrupt for the DMA transfer.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

static inline void DMA_EnableChannelRequest(DMA_Type *base, uint32_t channel)

Enables the DMA hardware channel request.

Parameters

- base – DMA peripheral base address.
- channel – The DMA channel number.

static inline void DMA_DisableChannelRequest(DMA_Type *base, uint32_t channel)

Disables the DMA hardware channel request.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

static inline void DMA_TriggerChannelStart(DMA_Type *base, uint32_t channel)

Starts the DMA transfer with a software trigger.

This function starts only one read/write iteration.

Parameters

- base – DMA peripheral base address.

- channel – The DMA channel number.

static inline void DMA_EnableAutoStopRequest(DMA_Type *base, uint32_t channel, bool enable)

Starts the DMA enable/disable auto disable request.

Parameters

- base – DMA peripheral base address.
- channel – The DMA channel number.
- enable – true is enable, false is disable.

static inline uint32_t DMA_GetRemainingBytes(DMA_Type *base, uint32_t channel)

Gets the remaining bytes of the current DMA transfer.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

Returns

The number of bytes which have not been transferred yet.

static inline uint32_t DMA_GetChannelStatusFlags(DMA_Type *base, uint32_t channel)

Gets the DMA channel status flags.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.

Returns

The mask of the channel status. Use the `_dma_channel_status_flags` type to decode the return 32 bit variables.

static inline void DMA_ClearChannelStatusFlags(DMA_Type *base, uint32_t channel, uint32_t mask)

Clears the DMA channel status flags.

Parameters

- base – DMA peripheral base address.
- channel – DMA channel number.
- mask – The mask of the channel status to be cleared. Use the defined `_dma_channel_status_flags` type.

void DMA_CreateHandle(*dma_handle_t* *handle, DMA_Type *base, uint32_t channel)

Creates the DMA handle.

This function is called first if using the transactional API for the DMA. This function initializes the internal state of the DMA handle.

Parameters

- handle – DMA handle pointer. The DMA handle stores callback function and parameters.
- base – DMA peripheral base address.
- channel – DMA channel number.

void DMA_SetCallback(*dma_handle_t* *handle, *dma_callback* callback, void *userData)

Sets the DMA callback function.

This callback is called in the DMA IRQ handler. Use the callback to do something after the current transfer complete.

Parameters

- handle – DMA handle pointer.
- callback – DMA callback function pointer.
- userData – Parameter for callback function. If it is not needed, just set to NULL.

```
void DMA__PrepareTransferConfig(dma_transfer_config_t *config, void *srcAddr, uint32_t  
                               srcWidth, void *destAddr, uint32_t destWidth, uint32_t  
                               transferBytes, dma_addr_increment_t srcIncrement,  
                               dma_addr_increment_t destIncrement)
```

Prepares the DMA transfer configuration structure.

This function prepares the transfer configuration structure according to the user input. The difference between this function and DMA_PrepareTransfer is that this function expose the address increment parameter to application, but in DMA_PrepareTransfer, only parts of the address increment option can be selected by *dma_transfer_type_t*.

Parameters

- config – Pointer to the user configuration structure of type *dma_transfer_config_t*.
- srcAddr – DMA transfer source address.
- srcWidth – DMA transfer source address width (byte).
- destAddr – DMA transfer destination address.
- destWidth – DMA transfer destination address width (byte).
- transferBytes – DMA transfer bytes to be transferred.
- srcIncrement – source address increment type.
- destIncrement – dest address increment type.

```
void DMA__PrepareTransfer(dma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth,  
                          void *destAddr, uint32_t destWidth, uint32_t transferBytes,  
                          dma_transfer_type_t type)
```

Prepares the DMA transfer configuration structure.

This function prepares the transfer configuration structure according to the user input.

Parameters

- config – Pointer to the user configuration structure of type *dma_transfer_config_t*.
- srcAddr – DMA transfer source address.
- srcWidth – DMA transfer source address width (byte).
- destAddr – DMA transfer destination address.
- destWidth – DMA transfer destination address width (byte).
- transferBytes – DMA transfer bytes to be transferred.
- type – DMA transfer type.

```
status_t DMA__SubmitTransfer(dma_handle_t *handle, const dma_transfer_config_t *config,  
                             uint32_t options)
```

Submits the DMA transfer request.

This function submits the DMA transfer request according to the transfer configuration structure.

Note: This function can't process multi transfer request.

Parameters

- `handle` – DMA handle pointer.
- `config` – Pointer to DMA transfer configuration structure.
- `options` – Additional configurations for transfer. Use the defined `dma_transfer_options_t` type.

Return values

- `kStatus_DMA_Success` – It indicates that the DMA submit transfer request succeeded.
- `kStatus_DMA_Busy` – It indicates that the DMA is busy. Submit transfer request is not allowed.

static inline void DMA_StartTransfer(*dma_handle_t* *handle)

DMA starts a transfer.

This function enables the channel request. Call this function after submitting a transfer request.

Parameters

- `handle` – DMA handle pointer.

Return values

- `kStatus_DMA_Success` – It indicates that the DMA start transfer succeed.
- `kStatus_DMA_Busy` – It indicates that the DMA has started a transfer.

static inline void DMA_StopTransfer(*dma_handle_t* *handle)

DMA stops a transfer.

This function disables the channel request to stop a DMA transfer. The transfer can be resumed by calling the `DMA_StartTransfer`.

Parameters

- `handle` – DMA handle pointer.

void DMA_AbortTransfer(*dma_handle_t* *handle)

DMA aborts a transfer.

This function disables the channel request and clears all status bits. Submit another transfer after calling this API.

Parameters

- `handle` – DMA handle pointer.

void DMA_HandleIRQ(*dma_handle_t* *handle)

DMA IRQ handler for current transfer complete.

This function clears the channel interrupt flag and calls the callback function if it is not NULL.

Parameters

- `handle` – DMA handle pointer.

FSL_DMA_DRIVER_VERSION

DMA driver version 2.1.3.

`_dma_channel_status_flags` status flag for the DMA driver.

Values:

enumerator `kDMA_TransactionsBCRFlag`

Contains the number of bytes yet to be transferred for a given block

enumerator `kDMA_TransactionsDoneFlag`

Transactions Done

enumerator `kDMA_TransactionsBusyFlag`

Transactions Busy

enumerator `kDMA_TransactionsRequestFlag`

Transactions Request

enumerator `kDMA_BusErrorOnDestinationFlag`

Bus Error on Destination

enumerator `kDMA_BusErrorOnSourceFlag`

Bus Error on Source

enumerator `kDMA_ConfigurationErrorFlag`

Configuration Error

enum `_dma_transfer_size`

DMA transfer size type.

Values:

enumerator `kDMA_Transfersize32bits`

32 bits are transferred for every read/write

enumerator `kDMA_Transfersize8bits`

8 bits are transferred for every read/write

enumerator `kDMA_Transfersize16bits`

16b its are transferred for every read/write

enum `_dma_modulo`

Configuration type for the DMA modulo.

Values:

enumerator `kDMA_ModuloDisable`

Buffer disabled

enumerator `kDMA_Modulo16Bytes`

Circular buffer size is 16 bytes.

enumerator `kDMA_Modulo32Bytes`

Circular buffer size is 32 bytes.

enumerator `kDMA_Modulo64Bytes`

Circular buffer size is 64 bytes.

enumerator `kDMA_Modulo128Bytes`

Circular buffer size is 128 bytes.

enumerator `kDMA_Modulo256Bytes`

Circular buffer size is 256 bytes.

enumerator kDMA_Modulo512Bytes
Circular buffer size is 512 bytes.

enumerator kDMA_Modulo1KBytes
Circular buffer size is 1 KB.

enumerator kDMA_Modulo2KBytes
Circular buffer size is 2 KB.

enumerator kDMA_Modulo4KBytes
Circular buffer size is 4 KB.

enumerator kDMA_Modulo8KBytes
Circular buffer size is 8 KB.

enumerator kDMA_Modulo16KBytes
Circular buffer size is 16 KB.

enumerator kDMA_Modulo32KBytes
Circular buffer size is 32 KB.

enumerator kDMA_Modulo64KBytes
Circular buffer size is 64 KB.

enumerator kDMA_Modulo128KBytes
Circular buffer size is 128 KB.

enumerator kDMA_Modulo256KBytes
Circular buffer size is 256 KB.

enum _dma_channel_link_type
DMA channel link type.

Values:

enumerator kDMA_ChannelLinkDisable
No channel link.

enumerator kDMA_ChannelLinkChannel1AndChannel2
Perform a link to channel LCH1 after each cycle-steal transfer. followed by a link to LCH2 after the BCR decrements to 0.

enumerator kDMA_ChannelLinkChannel1
Perform a link to LCH1 after each cycle-steal transfer.

enumerator kDMA_ChannelLinkChannel1AfterBCR0
Perform a link to LCH1 after the BCR decrements.

enum _dma_transfer_type
DMA transfer type.

Values:

enumerator kDMA_MemoryToMemory
Memory to Memory transfer.

enumerator kDMA_PeripheralToMemory
Peripheral to Memory transfer.

enumerator kDMA_MemoryToPeripheral
Memory to Peripheral transfer.

enum *_dma_transfer_options*

DMA transfer options.

Values:

enumerator *kDMA_NoOptions*

Transfer without options.

enumerator *kDMA_EnableInterrupt*

Enable interrupt while transfer complete.

enum *_dma_addr_increment*

dma addre increment type

Values:

enumerator *kDMA_AddrNoIncrement*

Transfer address not increment.

enumerator *kDMA_AddrIncrementPerTransferWidth*

Transfer address increment per transfer width

_dma_transfer_status DMA transfer status

Values:

enumerator *kStatus_DMA_Busy*

DMA is busy.

typedef enum *_dma_transfer_size* *dma_transfer_size_t*

DMA transfer size type.

typedef enum *_dma_modulo* *dma_modulo_t*

Configuration type for the DMA modulo.

typedef enum *_dma_channel_link_type* *dma_channel_link_type_t*

DMA channel link type.

typedef enum *_dma_transfer_type* *dma_transfer_type_t*

DMA transfer type.

typedef enum *_dma_transfer_options* *dma_transfer_options_t*

DMA transfer options.

typedef enum *_dma_addr_increment* *dma_addr_increment_t*

dma addre increment type

typedef struct *_dma_transfer_config* *dma_transfer_config_t*

DMA transfer configuration structure.

typedef struct *_dma_channel_link_config* *dma_channel_link_config_t*

DMA transfer configuration structure.

typedef void (**dma_callback*)(struct *_dma_handle* **handle*, void **userData*)

Callback function prototype for the DMA driver.

typedef struct *_dma_handle* *dma_handle_t*

DMA DMA handle structure.

struct *_dma_transfer_config*

#include <fsl_dma.h> DMA transfer configuration structure.

Public Members

uint32_t srcAddr

DMA transfer source address.

uint32_t destAddr

DMA destination address.

bool enableSrcIncrement

Source address increase after each transfer.

dma_transfer_size_t srcSize

Source transfer size unit.

bool enableDestIncrement

Destination address increase after each transfer.

dma_transfer_size_t destSize

Destination transfer unit.

uint32_t transferSize

The number of bytes to be transferred.

struct __dma_channel_link_config

#include <fsl_dma.h> DMA transfer configuration structure.

Public Members

dma_channel_link_type_t linkType

Channel link type.

uint32_t channel1

The index of channel 1.

uint32_t channel2

The index of channel 2.

struct __dma_handle

#include <fsl_dma.h> DMA DMA handle structure.

Public Members

DMA_Type *base

DMA peripheral address.

uint8_t channel

DMA channel used.

dma_callback callback

DMA callback function.

void *userData

Callback parameter.

2.7 DMAMUX: Direct Memory Access Multiplexer Driver

`void DMAMUX_Init(DMAMUX_Type *base)`

Initializes the DMAMUX peripheral.

This function ungates the DMAMUX clock.

Parameters

- `base` – DMAMUX peripheral base address.

`void DMAMUX_Deinit(DMAMUX_Type *base)`

Deinitializes the DMAMUX peripheral.

This function gates the DMAMUX clock.

Parameters

- `base` – DMAMUX peripheral base address.

`static inline void DMAMUX_EnableChannel(DMAMUX_Type *base, uint32_t channel)`

Enables the DMAMUX channel.

This function enables the DMAMUX channel.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

`static inline void DMAMUX_DisableChannel(DMAMUX_Type *base, uint32_t channel)`

Disables the DMAMUX channel.

This function disables the DMAMUX channel.

Note: The user must disable the DMAMUX channel before configuring it.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

`static inline void DMAMUX_SetSource(DMAMUX_Type *base, uint32_t channel, int32_t source)`

Configures the DMAMUX channel source.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.
- `source` – Channel source, which is used to trigger the DMA transfer. User need to use the `dma_request_source_t` type as the input parameter.

`static inline void DMAMUX_EnablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)`

Enables the DMAMUX period trigger.

This function enables the DMAMUX period trigger feature.

Parameters

- `base` – DMAMUX peripheral base address.
- `channel` – DMAMUX channel number.

```
static inline void DMAMUX_DisablePeriodTrigger(DMAMUX_Type *base, uint32_t channel)
```

Disables the DMAMUX period trigger.

This function disables the DMAMUX period trigger.

Parameters

- base – DMAMUX peripheral base address.
- channel – DMAMUX channel number.

FSL_DMAMUX_DRIVER_VERSION

DMAMUX driver version 2.1.1.

2.8 FGPIO Driver

```
void FGPIO_PinInit(FGPIO_Type *base, uint32_t pin, const gpio_pin_config_t *config)
```

Initializes a FGPIO pin used by the board.

To initialize the FGPIO driver, define a pin configuration, as either input or output, in the user file. Then, call the FGPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration:

```
Define a digital input pin configuration,  
gpio_pin_config_t config =  
{  
    kGPIO_DigitalInput,  
    0,  
}  
Define a digital output pin configuration,  
gpio_pin_config_t config =  
{  
    kGPIO_DigitalOutput,  
    0,  
}
```

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO port pin number
- config – FGPIO pin configuration pointer

```
static inline void FGPIO_PinWrite(FGPIO_Type *base, uint32_t pin, uint8_t output)
```

Sets the output level of the multiple FGPIO pins to the logic 1 or 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number
- output – FGPIOpin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void FGPIO_PortSet(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 1.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortClear(FGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple FGPIO pins to the logic 0.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline void FGPIO_PortToggle(FGPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple FGPIO pins.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

static inline uint32_t FGPIO_PinRead(FGPIO_Type *base, uint32_t pin)

Reads the current input value of the FGPIO port.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- pin – FGPIO pin number

Return values

FGPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

uint32_t FGPIO_PortGetInterruptFlags(FGPIO_Type *base)

Reads the FGPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level-sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)

Return values

The – current FGPIO port interrupt status flags, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

void FGPIO_PortClearInterruptFlags(FGPIO_Type *base, uint32_t mask)

Clears the multiple FGPIO pin interrupt status flag.

Parameters

- base – FGPIO peripheral base pointer (FGPIOA, FGPIOB, FGPIOC, and so on.)
- mask – FGPIO pin number macro

2.9 C90TFS Flash Driver

2.10 FlexIO: FlexIO Driver

2.11 FlexIO DMA I2S Driver

```
void FLEXIO_I2S_TransferTxCreateHandleDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_dma_handle_t *handle,  
                                           flexio_i2s_dma_callback_t callback, void  
                                           *userData, dma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S DMA handle.

This function initializes the FlexIO I2S master DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- callback – FlexIO I2S DMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – DMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferRxCreateHandleDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_dma_handle_t *handle,  
                                           flexio_i2s_dma_callback_t callback, void  
                                           *userData, dma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S Rx DMA handle.

This function initializes the FlexIO I2S slave DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- callback – FlexIO I2S DMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – DMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferSetFormatDMA(FLEXIO_I2S_Type *base, flexio_i2s_dma_handle_t  
                                     *handle, flexio_i2s_format_t *format, uint32_t  
                                     srcClock_Hz)
```

Configures the FlexIO I2S Tx audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred. This function also sets the DMA parameter according to the format.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – FlexIO I2S clock source frequency in Hz. It should be 0 while in slave mode.

status_t FLEXIO_I2S_TransferSendDMA(*FLEXIO_I2S_Type* *base, *flexio_i2s_dma_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs a non-blocking FlexIO I2S transfer using DMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_I2S_GetTransferStatus to poll the transfer status and check whether FLEXIO I2S transfer finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S DMA send successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_TxBusy – FlexIO I2S is busy sending data.

status_t FLEXIO_I2S_TransferReceiveDMA(*FLEXIO_I2S_Type* *base, *flexio_i2s_dma_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs a non-blocking FlexIO I2S receive using DMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_I2S_GetReceiveRemainingBytes to poll the transfer status to check whether the FlexIO I2S transfer is finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S DMA receive successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_RxBusy – FlexIO I2S is busy receiving data.

```
void FLEXIO_I2S_TransferAbortSendDMA(FLEXIO_I2S_Type *base, flexio_i2s_dma_handle_t
                                     *handle)
```

Aborts a FlexIO I2S transfer using DMA.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.

```
void FLEXIO_I2S_TransferAbortReceiveDMA(FLEXIO_I2S_Type *base, flexio_i2s_dma_handle_t
                                         *handle)
```

Aborts a FlexIO I2S receive using DMA.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.

```
status_t FLEXIO_I2S_TransferGetSendCountDMA(FLEXIO_I2S_Type *base,
                                             flexio_i2s_dma_handle_t *handle, size_t
                                             *count)
```

Gets the remaining bytes to be sent.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

```
status_t FLEXIO_I2S_TransferGetReceiveCountDMA(FLEXIO_I2S_Type *base,
                                                flexio_i2s_dma_handle_t *handle, size_t
                                                *count)
```

Gets the remaining bytes to be received.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes received.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

```
FSL_FLEXIO_I2S_DMA_DRIVER_VERSION
```

FlexIO I2S DMA driver version 2.1.7.

```
typedef struct flexio_i2s_dma_handle flexio_i2s_dma_handle_t
```

```
typedef void (*flexio_i2s_dma_callback_t)(FLEXIO_I2S_Type *base, flexio_i2s_dma_handle_t
*handle, status_t status, void *userData)
```

FlexIO I2S DMA transfer callback function for finish and error.

```
struct _flexio_i2s_dma_handle
```

#include <fsl_flexio_i2s_dma.h> FlexIO I2S DMA transfer handle, users should not touch the content of the handle.

Public Members

```
dma_handle_t *dmaHandle
```

DMA handler for FlexIO I2S send

```
uint8_t bytesPerFrame
```

Bytes in a frame

```
uint32_t state
```

Internal state for FlexIO I2S DMA transfer

```
flexio_i2s_dma_callback_t callback
```

Callback for users while transfer finish or error occurred

```
void *userData
```

User callback parameter

```
flexio_i2s_transfer_t queue[(4U)]
```

Transfer queue storing queued transfer.

```
size_t transferSize[(4U)]
```

Data bytes need to transfer

```
volatile uint8_t queueUser
```

Index for user to queue transfer.

```
volatile uint8_t queueDriver
```

Index for driver to get the transfer data and size

2.12 FlexIO DMA SPI Driver

```
status_t FLEXIO_SPI_MasterTransferCreateHandleDMA(FLEXIO_SPI_Type *base,
                                                    flexio_spi_master_dma_handle_t
                                                    *handle,
                                                    flexio_spi_master_dma_transfer_callback_t
                                                    callback, void *userData, dma_handle_t
                                                    *txHandle, dma_handle_t *rxHandle)
```

Initializes the FLEXIO SPI master DMA handle.

This function initializes the FLEXIO SPI master DMA handle which can be used for other FLEXIO SPI master transactional APIs. Usually, for a specified FLEXIO SPI instance, call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_dma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested DMA handle for FlexIO SPI RX DMA transfer.
- rxHandle – User requested DMA handle for FlexIO SPI TX DMA transfer.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO SPI DMA type/handle table out of range.

`status_t` FLEXIO_SPI_MasterTransferDMA(*FLEXIO_SPI_Type* *base,
 flexio_spi_master_dma_handle_t *handle,
 flexio_spi_transfer_t *xfer)

Performs a non-blocking FlexIO SPI transfer using DMA.

Note: This interface returned immediately after transfer initiates. Call `FLEXIO_SPI_MasterGetTransferCountDMA` to poll the transfer status to check whether the FlexIO SPI transfer is finished.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_master_dma_handle_t` structure to store the transfer state.
- `xfer` – Pointer to FlexIO SPI transfer structure.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – FlexIO SPI is not idle, is running another transfer.

`void` FLEXIO_SPI_MasterTransferAbortDMA(*FLEXIO_SPI_Type* *base,
 flexio_spi_master_dma_handle_t *handle)

Aborts a FlexIO SPI transfer using DMA.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – FlexIO SPI DMA handle pointer.

`status_t` FLEXIO_SPI_MasterTransferGetCountDMA(*FLEXIO_SPI_Type* *base,
 flexio_spi_master_dma_handle_t *handle,
 size_t *count)

Gets the remaining bytes for FlexIO SPI DMA transfer.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – FlexIO SPI DMA handle pointer.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

`static inline void` FLEXIO_SPI_SlaveTransferCreateHandleDMA(*FLEXIO_SPI_Type* *base,
 flexio_spi_slave_dma_handle_t *handle,
 flexio_spi_slave_dma_transfer_callback_t callback,
 void *userData,
 dma_handle_t *txHandle,
 dma_handle_t *rxHandle)

Initializes the FlexIO SPI slave DMA handle.

This function initializes the FlexIO SPI slave DMA handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_dma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested DMA handle for FlexIO SPI TX DMA transfer.
- rxHandle – User requested DMA handle for FlexIO SPI RX DMA transfer.

```
status_t FLEXIO_SPI_SlaveTransferDMA(FLEXIO_SPI_Type *base,  
                                     flexio_spi_slave_dma_handle_t *handle,  
                                     flexio_spi_transfer_t *xfer)
```

Performs a non-blocking FlexIO SPI transfer using DMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_SlaveGetTransferCountDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_dma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbortDMA(FLEXIO_SPI_Type *base,  
                                                    flexio_spi_slave_dma_handle_t *handle)
```

Aborts a FlexIO SPI transfer using DMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_dma_handle_t structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCountDMA(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_slave_dma_handle_t  
                                                         *handle, size_t *count)
```

Gets the remaining bytes to be transferred for FlexIO SPI DMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI DMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

FSL_FLEXIO_SPI_DMA_DRIVER_VERSION

FlexIO SPI DMA driver version 2.3.0.

```
typedef struct flexio_spi_master_dma_handle flexio_spi_master_dma_handle_t
    typedef for flexio_spi_master_dma_handle_t in advance.
```

```
typedef flexio_spi_master_dma_handle_t flexio_spi_slave_dma_handle_t
    Slave handle is the same with master handle.
```

```
typedef void (*flexio_spi_master_dma_transfer_callback_t)(FLEXIO_SPI_Type *base,
    flexio_spi_master_dma_handle_t *handle, status_t status, void *userData)
    FlexIO SPI master callback for finished transmit.
```

```
typedef void (*flexio_spi_slave_dma_transfer_callback_t)(FLEXIO_SPI_Type *base,
    flexio_spi_slave_dma_handle_t *handle, status_t status, void *userData)
    FlexIO SPI slave callback for finished transmit.
```

```
struct flexio_spi_master_dma_handle
    #include <fsl_flexio_spi_dma.h> FlexIO SPI DMA transfer handle, users should not touch the
    content of the handle.
```

Public Members

size_t transferSize
Total bytes to be transferred.

bool txInProgress
Send transfer in progress

bool rxInProgress
Receive transfer in progress

dma_handle_t *txHandle
DMA handler for SPI send

dma_handle_t *rxHandle
DMA handler for SPI receive

flexio_spi_master_dma_transfer_callback_t callback
Callback for SPI DMA transfer

void *userData
User Data for SPI DMA callback

2.13 FlexIO DMA UART Driver

```
status_t FLEXIO_UART_TransferCreateHandleDMA(FLEXIO_UART_Type *base,
    flexio_uart_dma_handle_t *handle,
    flexio_uart_dma_transfer_callback_t
    callback, void *userData, dma_handle_t
    *txDmaHandle, dma_handle_t
    *rxDmaHandle)
```

Initializes the FLEXIO_UART handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_UART_Type structure.
- handle – Pointer to flexio_uart_dma_handle_t structure.

- callback – FlexIO UART callback, NULL means no callback.
- userData – User callback function data.
- txDmaHandle – User requested DMA handle for TX DMA transfer.
- rxDmaHandle – User requested DMA handle for RX DMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO UART DMA type/handle table out of range.

```
status_t FLEXIO_UART_TransferSendDMA(FLEXIO_UART_Type *base,
                                     flexio_uart_dma_handle_t *handle,
                                     flexio_uart_transfer_t *xfer)
```

Sends data using DMA.

This function send data using DMA. This is non-blocking function, which returns right away. When all data is sent out, the send callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type structure
- handle – Pointer to flexio_uart_dma_handle_t structure
- xfer – FLEXIO_UART DMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_TxBusy – Previous transfer on going.

```
status_t FLEXIO_UART_TransferReceiveDMA(FLEXIO_UART_Type *base,
                                         flexio_uart_dma_handle_t *handle,
                                         flexio_uart_transfer_t *xfer)
```

Receives data using DMA.

This function receives data using DMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type structure
- handle – Pointer to flexio_uart_dma_handle_t structure
- xfer – FLEXIO_UART DMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_RxBusy – Previous transfer on going.

```
void FLEXIO_UART_TransferAbortSendDMA(FLEXIO_UART_Type *base,
                                       flexio_uart_dma_handle_t *handle)
```

Aborts the sent data which using DMA.

This function aborts the sent data which using DMA.

Parameters

- base – Pointer to FLEXIO_UART_Type structure
- handle – Pointer to flexio_uart_dma_handle_t structure

```
void FLEXIO_UART_TransferAbortReceiveDMA(FLEXIO_UART_Type *base,  
                                          flexio_uart_dma_handle_t *handle)
```

Aborts the receive data which using DMA.

This function aborts the receive data which using DMA.

Parameters

- base – Pointer to *FLEXIO_UART_Type* structure
- handle – Pointer to *flexio_uart_dma_handle_t* structure

```
status_t FLEXIO_UART_TransferGetSendCountDMA(FLEXIO_UART_Type *base,  
                                              flexio_uart_dma_handle_t *handle, size_t  
                                              *count)
```

Gets the number of bytes sent out.

This function gets the number of bytes sent out.

Parameters

- base – Pointer to *FLEXIO_UART_Type* structure
- handle – Pointer to *flexio_uart_dma_handle_t* structure
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
status_t FLEXIO_UART_TransferGetReceiveCountDMA(FLEXIO_UART_Type *base,  
                                                flexio_uart_dma_handle_t *handle,  
                                                size_t *count)
```

Gets the number of bytes received.

This function gets the number of bytes received.

Parameters

- base – Pointer to *FLEXIO_UART_Type* structure
- handle – Pointer to *flexio_uart_dma_handle_t* structure
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
FSL_FLEXIO_UART_DMA_DRIVER_VERSION
```

FlexIO UART DMA driver version.

```
typedef struct flexio_uart_dma_handle flexio_uart_dma_handle_t
```

```
typedef void (*flexio_uart_dma_transfer_callback_t)(FLEXIO_UART_Type *base,  
                                                    flexio_uart_dma_handle_t *handle, status_t status, void *userData)
```

UART transfer callback function.

```
struct flexio_uart_dma_handle
```

```
#include <fsl_flexio_uart_dma.h> UART DMA handle.
```

Public Members

flexio_uart_dma_transfer_callback_t callback

Callback function.

void *userData

UART callback function parameter.

size_t txDataSizeAll

Total bytes to be sent.

size_t rxDataSizeAll

Total bytes to be received.

dma_handle_t *txDmaHandle

The DMA TX channel used.

dma_handle_t *rxDmaHandle

The DMA RX channel used.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

2.14 FlexIO Driver

void FLEXIO_GetDefaultConfig(*flexio_config_t* *userConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly to call the FLEXIO_Configure().

Example:

```
flexio_config_t config;
FLEXIO_GetDefaultConfig(&config);
```

Parameters

- userConfig – pointer to flexio_config_t structure

void FLEXIO_Init(FLEXIO_Type *base, const *flexio_config_t* *userConfig)

Configures the FlexIO with a FlexIO configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_GetDefaultConfig().

Example

```
flexio_config_t config = {
    .enableFlexio = true,
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false
};
FLEXIO_Configure(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- userConfig – pointer to flexio_config_t structure

```
void FLEXIO__Deinit(FLEXIO_Type *base)
```

Gates the FlexIO clock. Call this API to stop the FlexIO clock.

Note: After calling this API, call the FLEXIO_Init to use the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
uint32_t FLEXIO__GetInstance(FLEXIO_Type *base)
```

Get instance number for FLEXIO module.

Parameters

- base – FLEXIO peripheral base address.

```
void FLEXIO__Reset(FLEXIO_Type *base)
```

Resets the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
static inline void FLEXIO__Enable(FLEXIO_Type *base, bool enable)
```

Enables the FlexIO module operation.

Parameters

- base – FlexIO peripheral base address
- enable – true to enable, false to disable.

```
static inline uint32_t FLEXIO__ReadPinInput(FLEXIO_Type *base)
```

Reads the input data on each of the FlexIO pins.

Parameters

- base – FlexIO peripheral base address

Returns

FlexIO pin input data

```
static inline uint8_t FLEXIO__GetShifterState(FLEXIO_Type *base)
```

Gets the current state pointer for state mode use.

Parameters

- base – FlexIO peripheral base address

Returns

current State pointer

```
void FLEXIO__SetShifterConfig(FLEXIO_Type *base, uint8_t index, const flexio_shifter_config_t *shifterConfig)
```

Configures the shifter with the shifter configuration. The configuration structure covers both the SHIFTCTL and SHIFTCFG registers. To configure the shifter to the proper mode, select which timer controls the shifter to shift, whether to generate start bit/stop bit, and the polarity of start bit and stop bit.

Example

```
flexio_shifter_config_t config = {  
    .timerSelect = 0,  
    .timerPolarity = kFLEXIO_ShifterTimerPolarityOnPositive,  
    .pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
```

(continues on next page)

(continued from previous page)

```
.pinPolarity = kFLEXIO_PinActiveLow,
.shifterMode = kFLEXIO_ShifterModeTransmit,
.inputSource = kFLEXIO_ShifterInputFromPin,
.shifterStop = kFLEXIO_ShifterStopBitHigh,
.shifterStart = kFLEXIO_ShifterStartBitLow
};
FLEXIO_SetShifterConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Shifter index
- shifterConfig – Pointer to flexio_shifter_config_t structure

```
void FLEXIO_SetTimerConfig(FLEXIO_Type *base, uint8_t index, const flexio_timer_config_t
                          *timerConfig)
```

Configures the timer with the timer configuration. The configuration structure covers both the TIMCTL and TIMCFG registers. To configure the timer to the proper mode, select trigger source for timer and the timer pin output and the timing for timer.

Example

```
flexio_timer_config_t config = {
.triggerSelect = FLEXIO_TIMER_TRIGGER_SEL_SHIFThSTAT(0),
.triggerPolarity = kFLEXIO_TimerTriggerPolarityActiveLow,
.triggerSource = kFLEXIO_TimerTriggerSourceInternal,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinSelect = 0,
.pinPolarity = kFLEXIO_PinActiveHigh,
.timerMode = kFLEXIO_TimerModeDual8BitBaudBit,
.timerOutput = kFLEXIO_TimerOutputZeroNotAffectedByReset,
.timerDecrement = kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput,
.timerReset = kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput,
.timerDisable = kFLEXIO_TimerDisableOnTimerCompare,
.timerEnable = kFLEXIO_TimerEnableOnTriggerHigh,
.timerStop = kFLEXIO_TimerStopBitEnableOnTimerDisable,
.timerStart = kFLEXIO_TimerStartBitEnabled
};
FLEXIO_SetTimerConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Timer index
- timerConfig – Pointer to the flexio_timer_config_t structure

```
static inline void FLEXIO_SetClockMode(FLEXIO_Type *base, uint8_t index,
                                       flexio_timer_decrement_source_t clocksource)
```

This function set the value of the prescaler on flexio channels.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- index – Timer index
- clocksource – Set clock value

static inline void FLEXIO_EnableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Enables the shifter status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

static inline void FLEXIO_DisableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Disables the shifter status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

static inline void FLEXIO_EnableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
Enables the shifter error interrupt. The interrupt generates when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

static inline void FLEXIO_DisableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
Disables the shifter error interrupt. The interrupt won't generate when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$


```
static inline void FLEXIO_EnableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Enables the timer status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

```
static inline void FLEXIO_DisableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Disables the timer status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

```
static inline uint32_t FLEXIO_GetShifterStatusFlags(FLEXIO_Type *base)
```

Gets the shifter status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter status flags

```
static inline void FLEXIO_ClearShifterStatusFlags(FLEXIO_Type *base, uint32_t mask)
```

Clears the shifter status flags.

Note: For clearing multiple shifter status flags, for example, two shifter status flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline uint32_t FLEXIO_GetShifterErrorFlags(FLEXIO_Type *base)
```

Gets the shifter error flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter error flags

```
static inline void FLEXIO_ClearShifterErrorFlags(FLEXIO_Type *base, uint32_t mask)
```

Clears the shifter error flags.

Note: For clearing multiple shifter error flags, for example, two shifter error flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline uint32_t FLEXIO_GetTimerStatusFlags(FLEXIO_Type *base)
```

Gets the timer status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Timer status flags

```
static inline void FLEXIO_ClearTimerStatusFlags(FLEXIO_Type *base, uint32_t mask)
```

Clears the timer status flags.

Note: For clearing multiple timer status flags, for example, two timer status flags, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

```
static inline void FLEXIO_EnableShifterStatusDMA(FLEXIO_Type *base, uint32_t mask, bool enable)
```

Enables/disables the shifter status DMA. The DMA request generates when the corresponding SSF is set.

Note: For multiple shifter status DMA enables, for example, calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$
- enable – True to enable, false to disable.

```
uint32_t FLEXIO_GetShifterBufferAddress(FLEXIO_Type *base, flexio_shifter_buffer_type_t type, uint8_t index)
```

Gets the shifter buffer address for the DMA transfer usage.

Parameters

- base – FlexIO peripheral base address
- type – Shifter type of `flexio_shifter_buffer_type_t`

- index – Shifter index

Returns

Corresponding shifter buffer index

status_t FLEXIO_RegisterHandleIRQ(void *base, void *handle, *flexio_isr_t* isr)

Registers the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- handle – Pointer to the handler for FlexIO simulated peripheral.
- isr – FlexIO simulated peripheral interrupt handler.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_UnregisterHandleIRQ(void *base)

Unregisters the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

FSL_FLEXIO_DRIVER_VERSION

FlexIO driver version.

enum *_flexio_timer_trigger_polarity*

Define time of timer trigger polarity.

Values:

enumerator kFLEXIO_TimerTriggerPolarityActiveHigh
Active high.

enumerator kFLEXIO_TimerTriggerPolarityActiveLow
Active low.

enum *_flexio_timer_trigger_source*

Define type of timer trigger source.

Values:

enumerator kFLEXIO_TimerTriggerSourceExternal
External trigger selected.

enumerator kFLEXIO_TimerTriggerSourceInternal
Internal trigger selected.

enum *_flexio_pin_config*

Define type of timer/shifter pin configuration.

Values:

enumerator kFLEXIO_PinConfigOutputDisabled
Pin output disabled.

enumerator kFLEXIO__PinConfigOpenDrainOrBidirection

Pin open drain or bidirectional output enable.

enumerator kFLEXIO__PinConfigBidirectionOutputData

Pin bidirectional output data.

enumerator kFLEXIO__PinConfigOutput

Pin output.

enum __flexio__pin__polarity

Definition of pin polarity.

Values:

enumerator kFLEXIO__PinActiveHigh

Active high.

enumerator kFLEXIO__PinActiveLow

Active low.

enum __flexio__timer__mode

Define type of timer work mode.

Values:

enumerator kFLEXIO__TimerModeDisabled

Timer Disabled.

enumerator kFLEXIO__TimerModeDual8BitBaudBit

Dual 8-bit counters baud/bit mode.

enumerator kFLEXIO__TimerModeDual8BitPWM

Dual 8-bit counters PWM mode.

enumerator kFLEXIO__TimerModeSingle16Bit

Single 16-bit counter mode.

enumerator kFLEXIO__TimerModeDual8BitPWMLow

Dual 8-bit counters PWM Low mode.

enum __flexio__timer__output

Define type of timer initial output or timer reset condition.

Values:

enumerator kFLEXIO__TimerOutputOneNotAffectedByReset

Logic one when enabled and is not affected by timer reset.

enumerator kFLEXIO__TimerOutputZeroNotAffectedByReset

Logic zero when enabled and is not affected by timer reset.

enumerator kFLEXIO__TimerOutputOneAffectedByReset

Logic one when enabled and on timer reset.

enumerator kFLEXIO__TimerOutputZeroAffectedByReset

Logic zero when enabled and on timer reset.

enum __flexio__timer__decrement__source

Define type of timer decrement.

Values:

enumerator kFLEXIO__TimerDecSrcOnFlexIOClockShiftTimerOutput

Decrement counter on FlexIO clock, Shift clock equals Timer output.

enumerator kFLEXIO__TimerDecSrcOnTriggerInputShiftTimerOutput

Decrement counter on Trigger input (both edges), Shift clock equals Timer output.

enumerator kFLEXIO__TimerDecSrcOnPinInputShiftPinInput

Decrement counter on Pin input (both edges), Shift clock equals Pin input.

enumerator kFLEXIO__TimerDecSrcOnTriggerInputShiftTriggerInput

Decrement counter on Trigger input (both edges), Shift clock equals Trigger input.

enum _flexio_timer_reset_condition

Define type of timer reset condition.

Values:

enumerator kFLEXIO__TimerResetNever

Timer never reset.

enumerator kFLEXIO__TimerResetOnTimerPinEqualToTimerOutput

Timer reset on Timer Pin equal to Timer Output.

enumerator kFLEXIO__TimerResetOnTimerTriggerEqualToTimerOutput

Timer reset on Timer Trigger equal to Timer Output.

enumerator kFLEXIO__TimerResetOnTimerPinRisingEdge

Timer reset on Timer Pin rising edge.

enumerator kFLEXIO__TimerResetOnTimerTriggerRisingEdge

Timer reset on Trigger rising edge.

enumerator kFLEXIO__TimerResetOnTimerTriggerBothEdge

Timer reset on Trigger rising or falling edge.

enum _flexio_timer_disable_condition

Define type of timer disable condition.

Values:

enumerator kFLEXIO__TimerDisableNever

Timer never disabled.

enumerator kFLEXIO__TimerDisableOnPreTimerDisable

Timer disabled on Timer N-1 disable.

enumerator kFLEXIO__TimerDisableOnTimerCompare

Timer disabled on Timer compare.

enumerator kFLEXIO__TimerDisableOnTimerCompareTriggerLow

Timer disabled on Timer compare and Trigger Low.

enumerator kFLEXIO__TimerDisableOnPinBothEdge

Timer disabled on Pin rising or falling edge.

enumerator kFLEXIO__TimerDisableOnPinBothEdgeTriggerHigh

Timer disabled on Pin rising or falling edge provided Trigger is high.

enumerator kFLEXIO__TimerDisableOnTriggerFallingEdge

Timer disabled on Trigger falling edge.

enum _flexio_timer_enable_condition

Define type of timer enable condition.

Values:

enumerator kFLEXIO__TimerEnabledAlways

Timer always enabled.

enumerator kFLEXIO__TimerEnableOnPrevTimerEnable

Timer enabled on Timer N-1 enable.

enumerator kFLEXIO__TimerEnableOnTriggerHigh

Timer enabled on Trigger high.

enumerator kFLEXIO__TimerEnableOnTriggerHighPinHigh

Timer enabled on Trigger high and Pin high.

enumerator kFLEXIO__TimerEnableOnPinRisingEdge

Timer enabled on Pin rising edge.

enumerator kFLEXIO__TimerEnableOnPinRisingEdgeTriggerHigh

Timer enabled on Pin rising edge and Trigger high.

enumerator kFLEXIO__TimerEnableOnTriggerRisingEdge

Timer enabled on Trigger rising edge.

enumerator kFLEXIO__TimerEnableOnTriggerBothEdge

Timer enabled on Trigger rising or falling edge.

enum _flexio_timer_stop_bit_condition

Define type of timer stop bit generate condition.

Values:

enumerator kFLEXIO__TimerStopBitDisabled

Stop bit disabled.

enumerator kFLEXIO__TimerStopBitEnableOnTimerCompare

Stop bit is enabled on timer compare.

enumerator kFLEXIO__TimerStopBitEnableOnTimerDisable

Stop bit is enabled on timer disable.

enumerator kFLEXIO__TimerStopBitEnableOnTimerCompareDisable

Stop bit is enabled on timer compare and timer disable.

enum _flexio_timer_start_bit_condition

Define type of timer start bit generate condition.

Values:

enumerator kFLEXIO__TimerStartBitDisabled

Start bit disabled.

enumerator kFLEXIO__TimerStartBitEnabled

Start bit enabled.

enum _flexio_timer_output_state

FlexIO as PWM channel output state.

Values:

enumerator kFLEXIO__PwmLow

The output state of PWM channel is low

enumerator kFLEXIO__PwmHigh

The output state of PWM channel is high

enum _flexio_shifter_timer_polarity

Define type of timer polarity for shifter control.

Values:

enumerator kFLEXIO__ShifterTimerPolarityOnPositive

Shift on positive edge of shift clock.

enumerator kFLEXIO__ShifterTimerPolarityOnNegative

Shift on negative edge of shift clock.

enum _flexio_shifter_mode

Define type of shifter working mode.

Values:

enumerator kFLEXIO__ShifterDisabled

Shifter is disabled.

enumerator kFLEXIO__ShifterModeReceive

Receive mode.

enumerator kFLEXIO__ShifterModeTransmit

Transmit mode.

enumerator kFLEXIO__ShifterModeMatchStore

Match store mode.

enumerator kFLEXIO__ShifterModeMatchContinuous

Match continuous mode.

enumerator kFLEXIO__ShifterModeState

SHIFTBUF contents are used for storing programmable state attributes.

enumerator kFLEXIO__ShifterModeLogic

SHIFTBUF contents are used for implementing programmable logic look up table.

enum _flexio_shifter_input_source

Define type of shifter input source.

Values:

enumerator kFLEXIO__ShifterInputFromPin

Shifter input from pin.

enumerator kFLEXIO__ShifterInputFromNextShifterOutput

Shifter input from Shifter N+1.

enum _flexio_shifter_stop_bit

Define of STOP bit configuration.

Values:

enumerator kFLEXIO__ShifterStopBitDisable

Disable shifter stop bit.

enumerator kFLEXIO__ShifterStopBitLow

Set shifter stop bit to logic low level.

enumerator kFLEXIO__ShifterStopBitHigh

Set shifter stop bit to logic high level.

enum *_flexio_shifter_start_bit*

Define type of START bit configuration.

Values:

enumerator *kFLEXIO__ShifterStartBitDisabledLoadDataOnEnable*

Disable shifter start bit, transmitter loads data on enable.

enumerator *kFLEXIO__ShifterStartBitDisabledLoadDataOnShift*

Disable shifter start bit, transmitter loads data on first shift.

enumerator *kFLEXIO__ShifterStartBitLow*

Set shifter start bit to logic low level.

enumerator *kFLEXIO__ShifterStartBitHigh*

Set shifter start bit to logic high level.

enum *_flexio_shifter_buffer_type*

Define FlexIO shifter buffer type.

Values:

enumerator *kFLEXIO__ShifterBuffer*

Shifter Buffer N Register.

enumerator *kFLEXIO__ShifterBufferBitSwapped*

Shifter Buffer N Bit Byte Swapped Register.

enumerator *kFLEXIO__ShifterBufferByteSwapped*

Shifter Buffer N Byte Swapped Register.

enumerator *kFLEXIO__ShifterBufferBitByteSwapped*

Shifter Buffer N Bit Swapped Register.

enumerator *kFLEXIO__ShifterBufferNibbleByteSwapped*

Shifter Buffer N Nibble Byte Swapped Register.

enumerator *kFLEXIO__ShifterBufferHalfWordSwapped*

Shifter Buffer N Half Word Swapped Register.

enumerator *kFLEXIO__ShifterBufferNibbleSwapped*

Shifter Buffer N Nibble Swapped Register.

typedef enum *_flexio_timer_trigger_polarity* *flexio_timer_trigger_polarity_t*

Define time of timer trigger polarity.

typedef enum *_flexio_timer_trigger_source* *flexio_timer_trigger_source_t*

Define type of timer trigger source.

typedef enum *_flexio_pin_config* *flexio_pin_config_t*

Define type of timer/shifter pin configuration.

typedef enum *_flexio_pin_polarity* *flexio_pin_polarity_t*

Definition of pin polarity.

typedef enum *_flexio_timer_mode* *flexio_timer_mode_t*

Define type of timer work mode.

typedef enum *_flexio_timer_output* *flexio_timer_output_t*

Define type of timer initial output or timer reset condition.

typedef enum *_flexio_timer_decrement_source* *flexio_timer_decrement_source_t*

Define type of timer decrement.


```
typedef enum _flexio_timer_reset_condition flexio_timer_reset_condition_t
    Define type of timer reset condition.
typedef enum _flexio_timer_disable_condition flexio_timer_disable_condition_t
    Define type of timer disable condition.
typedef enum _flexio_timer_enable_condition flexio_timer_enable_condition_t
    Define type of timer enable condition.
typedef enum _flexio_timer_stop_bit_condition flexio_timer_stop_bit_condition_t
    Define type of timer stop bit generate condition.
typedef enum _flexio_timer_start_bit_condition flexio_timer_start_bit_condition_t
    Define type of timer start bit generate condition.
typedef enum _flexio_timer_output_state flexio_timer_output_state_t
    FlexIO as PWM channel output state.
typedef enum _flexio_shifter_timer_polarity flexio_shifter_timer_polarity_t
    Define type of timer polarity for shifter control.
typedef enum _flexio_shifter_mode flexio_shifter_mode_t
    Define type of shifter working mode.
typedef enum _flexio_shifter_input_source flexio_shifter_input_source_t
    Define type of shifter input source.
typedef enum _flexio_shifter_stop_bit flexio_shifter_stop_bit_t
    Define of STOP bit configuration.
typedef enum _flexio_shifter_start_bit flexio_shifter_start_bit_t
    Define type of START bit configuration.
typedef enum _flexio_shifter_buffer_type flexio_shifter_buffer_type_t
    Define FlexIO shifter buffer type.
typedef struct _flexio_config flexio_config_t
    Define FlexIO user configuration structure.
typedef struct _flexio_timer_config flexio_timer_config_t
    Define FlexIO timer configuration structure.
typedef struct _flexio_shifter_config flexio_shifter_config_t
    Define FlexIO shifter configuration structure.
typedef void (*flexio_isr_t)(void *base, void *handle)
    typedef for FlexIO simulated driver interrupt handler.
FLEXIO_Type *const s_flexioBases[]
    Pointers to flexio bases for each instance.
const clock_ip_name_t s_flexioClocks[]
    Pointers to flexio clocks for each instance.
FLEXIO_TIMER_TRIGGER_SEL_PININPUT(x)
    Calculate FlexIO timer trigger.
FLEXIO_TIMER_TRIGGER_SEL_SHIFThSTAT(x)
FLEXIO_TIMER_TRIGGER_SEL_TIMn(x)
struct _flexio_config_
    #include <fsl_flexio.h> Define FlexIO user configuration structure.
```

Public Members

bool enableFlexio

Enable/disable FlexIO module

bool enableInDoze

Enable/disable FlexIO operation in doze mode

bool enableInDebug

Enable/disable FlexIO operation in debug mode

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

struct *_flexio_timer_config*

#include <fsl_flexio.h> Define FlexIO timer configuration structure.

Public Members

uint32_t triggerSelect

The internal trigger selection number using MACROs.

flexio_timer_trigger_polarity_t triggerPolarity

Trigger Polarity.

flexio_timer_trigger_source_t triggerSource

Trigger Source, internal (see 'trgsel') or external.

flexio_pin_config_t pinConfig

Timer Pin Configuration.

uint32_t pinSelect

Timer Pin number Select.

flexio_pin_polarity_t pinPolarity

Timer Pin Polarity.

flexio_timer_mode_t timerMode

Timer work Mode.

flexio_timer_output_t timerOutput

Configures the initial state of the Timer Output and whether it is affected by the Timer reset.

flexio_timer_decrement_source_t timerDecrement

Configures the source of the Timer decrement and the source of the Shift clock.

flexio_timer_reset_condition_t timerReset

Configures the condition that causes the timer counter (and optionally the timer output) to be reset.

flexio_timer_disable_condition_t timerDisable

Configures the condition that causes the Timer to be disabled and stop decrementing.

flexio_timer_enable_condition_t timerEnable

Configures the condition that causes the Timer to be enabled and start decrementing.

flexio_timer_stop_bit_condition_t timerStop

Timer STOP Bit generation.

flexio_timer_start_bit_condition_t timerStart

Timer STRAT Bit generation.

uint32_t timerCompare

Value for Timer Compare N Register.

struct *_flexio_shifter_config*

#include <fsl_flexio.h> Define FlexIO shifter configuration structure.

Public Members

uint32_t timerSelect

Selects which Timer is used for controlling the logic/shift register and generating the Shift clock.

flexio_shifter_timer_polarity_t timerPolarity

Timer Polarity.

flexio_pin_config_t pinConfig

Shifter Pin Configuration.

uint32_t pinSelect

Shifter Pin number Select.

flexio_pin_polarity_t pinPolarity

Shifter Pin Polarity.

flexio_shifter_mode_t shifterMode

Configures the mode of the Shifter.

uint32_t parallelWidth

Configures the parallel width when using parallel mode.

flexio_shifter_input_source_t inputSource

Selects the input source for the shifter.

flexio_shifter_stop_bit_t shifterStop

Shifter STOP bit.

flexio_shifter_start_bit_t shifterStart

Shifter START bit.

2.15 FlexIO I2C Master Driver

status_t FLEXIO_I2C_CheckForBusyBus(*FLEXIO_I2C_Type* *base)

Make sure the bus isn't already pulled down.

Check the FLEXIO pin status to see whether either of SDA and SCL pin is pulled down.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure..

Return values

- kStatus_Success –
- kStatus_FLEXIO_I2C_Busy –

status_t FLEXIO_I2C_MasterInit(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, and configures the FlexIO I2C hardware configuration.

Example

```
FLEXIO_I2C_Type base = {
    .flexioBase = FLEXIO,
    .SDAPinIndex = 0,
    .SCLPinIndex = 1,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_i2c_master_config_t config = {
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .baudRate_Bps = 100000
};
FLEXIO_I2C_MasterInit(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- masterConfig – Pointer to flexio_i2c_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Initialization successful
- kStatus_InvalidArgument – The source clock exceed upper range limitation

void FLEXIO_I2C_MasterDeinit(*FLEXIO_I2C_Type* *base)

De-initializes the FlexIO I2C master peripheral. Calling this API Resets the FlexIO I2C master shifer and timer config, module can't work unless the FLEXIO_I2C_MasterInit is called.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterGetDefaultConfig(*flexio_i2c_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly for calling the FLEXIO_I2C_MasterInit().

Example:

```
flexio_i2c_master_config_t config;
FLEXIO_I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – Pointer to flexio_i2c_master_config_t structure.

static inline void FLEXIO_I2C_MasterEnable(*FLEXIO_I2C_Type* *base, bool enable)

Enables/disables the FlexIO module operation.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – Pass true to enable module, false does not have any effect.

uint32_t FLEXIO_I2C_MasterGetStatusFlags(*FLEXIO_I2C_Type* *base)

Gets the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure

Returns

Status flag, use status flag to AND `_flexio_i2c_master_status_flags` can get the related status.

void FLEXIO_I2C_MasterClearStatusFlags(*FLEXIO_I2C_Type* *base, uint32_t mask)

Clears the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_I2C_RxFullFlag
 - kFLEXIO_I2C_ReceiveNakFlag

void FLEXIO_I2C_MasterEnableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Enables the FlexIO i2c master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source. Currently only one interrupt request source:
 - kFLEXIO_I2C_TransferCompleteInterruptEnable

void FLEXIO_I2C_MasterDisableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Disables the FlexIO I2C master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source.

void FLEXIO_I2C_MasterSetBaudRate(*FLEXIO_I2C_Type* *base, uint32_t baudRate_Bps,
uint32_t srcClock_Hz)

Sets the FlexIO I2C master transfer baudrate.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- baudRate_Bps – the baud rate value in HZ
- srcClock_Hz – source clock in HZ

void FLEXIO_I2C_MasterStart(*FLEXIO_I2C_Type* *base, uint8_t address, *flexio_i2c_direction_t*
direction)

Sends START + 7-bit address to the bus.

Note: This API should be called when the transfer configuration is ready to send a START signal and 7-bit address to the bus. This is a non-blocking API, which returns directly after the address is put into the data register but the address transfer is not finished on the bus. Ensure that the kFLEXIO_I2C_RxFullFlag status is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- address – 7-bit address.
- direction – transfer direction. This parameter is one of the values in flexio_i2c_direction_t:
 - kFLEXIO_I2C_Write: Transmit
 - kFLEXIO_I2C_Read: Receive

void FLEXIO_I2C_MasterStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterRepeatedStart(*FLEXIO_I2C_Type* *base)

Sends the repeated start signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterAbortStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal when transfer is still on-going.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterEnableAck(*FLEXIO_I2C_Type* *base, bool enable)

Configures the sent ACK/NAK for the following byte.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – True to configure send ACK, false configure to send NAK.

status_t FLEXIO_I2C_MasterSetTransferCount(*FLEXIO_I2C_Type* *base, uint16_t count)

Sets the number of bytes to be transferred from a start signal to a stop signal.

Note: Call this API before a transfer begins because the timer generates a number of clocks according to the number of bytes that need to be transferred.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- count – Number of bytes need to be transferred from a start signal to a re-start/stop signal

Return values

- kStatus_Success – Successfully configured the count.
- kStatus_InvalidArgument – Input argument is invalid.

static inline void FLEXIO_I2C_MasterWriteByte(*FLEXIO_I2C_Type* *base, uint32_t data)

Writes one byte of data to the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- data – a byte of data.

static inline uint8_t FLEXIO_I2C_MasterReadByte(*FLEXIO_I2C_Type* *base)

Reads one byte of data from the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the data is ready in the register.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

Returns

data byte read.

status_t FLEXIO_I2C_MasterWriteBlocking(*FLEXIO_I2C_Type* *base, const uint8_t *txBuff, uint8_t txSize)

Sends a buffer of data in bytes.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- txBuff – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Nak – Receive NAK during writing data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterReadBlocking(*FLEXIO_I2C_Type* *base, uint8_t *rxBuff, uint8_t rxSize)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- rxBuff – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterTransferBlocking(*FLEXIO_I2C_Type* *base,
flexio_i2c_master_transfer_t *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to receiving NAK.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.
- xfer – pointer to flexio_i2c_master_transfer_t structure.

Returns

status of status_t.

status_t FLEXIO_I2C_MasterTransferCreateHandle(*FLEXIO_I2C_Type* *base,
flexio_i2c_master_handle_t *handle,
flexio_i2c_master_transfer_callback_t
callback, void *userData)

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure to store the transfer state.
- callback – Pointer to user callback function.
- userData – User param passed to the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/isr table out of range.

status_t FLEXIO_I2C_MasterTransferNonBlocking(*FLEXIO_I2C_Type* *base,
flexio_i2c_master_handle_t *handle,
flexio_i2c_master_transfer_t *xfer)

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: The API returns immediately after the transfer initiates. Call FLEXIO_I2C_MasterTransferGetCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXIO_I2C_Busy, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state
- xfer – pointer to flexio_i2c_master_transfer_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_FLEXIO_I2C_Busy – FlexIO I2C is not idle, is running another transfer.


```
status_t FLEXIO_I2C_MasterTransferGetCount(FLEXIO_I2C_Type *base,  
                                           flexio_i2c_master_handle_t *handle, size_t  
                                           *count)
```

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.
- kStatus_Success – Successfully return the count.

```
void FLEXIO_I2C_MasterTransferAbort(FLEXIO_I2C_Type *base, flexio_i2c_master_handle_t  
                                   *handle)
```

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state

```
void FLEXIO_I2C_MasterTransferHandleIRQ(void *i2cType, void *i2cHandle)
```

Master interrupt handler.

Parameters

- i2cType – Pointer to FLEXIO_I2C_Type structure
- i2cHandle – Pointer to flexio_i2c_master_transfer_t structure

```
FSL_FLEXIO_I2C_MASTER_DRIVER_VERSION
```

FlexIO I2C transfer status.

Values:

enumerator kStatus_FLEXIO_I2C_Busy
I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Idle
I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Nak
NAK received during transfer.

enumerator kStatus_FLEXIO_I2C_Timeout
Timeout polling status flags.

enum *_flexio_i2c_master_interrupt*

Define FlexIO I2C master interrupt mask.

Values:

enumerator *kFLEXIO_I2C_TxEmptyInterruptEnable*

Tx buffer empty interrupt enable.

enumerator *kFLEXIO_I2C_RxFullInterruptEnable*

Rx buffer full interrupt enable.

enum *_flexio_i2c_master_status_flags*

Define FlexIO I2C master status mask.

Values:

enumerator *kFLEXIO_I2C_TxEmptyFlag*

Tx shifter empty flag.

enumerator *kFLEXIO_I2C_RxFullFlag*

Rx shifter full/Transfer complete flag.

enumerator *kFLEXIO_I2C_ReceiveNakFlag*

Receive NAK flag.

enum *_flexio_i2c_direction*

Direction of master transfer.

Values:

enumerator *kFLEXIO_I2C_Write*

Master send to slave.

enumerator *kFLEXIO_I2C_Read*

Master receive from slave.

typedef enum *_flexio_i2c_direction* *flexio_i2c_direction_t*

Direction of master transfer.

typedef struct *_flexio_i2c_type* *FLEXIO_I2C_Type*

Define FlexIO I2C master access structure typedef.

typedef struct *_flexio_i2c_master_config* *flexio_i2c_master_config_t*

Define FlexIO I2C master user configuration structure.

typedef struct *_flexio_i2c_master_transfer* *flexio_i2c_master_transfer_t*

Define FlexIO I2C master transfer structure.

typedef struct *_flexio_i2c_master_handle* *flexio_i2c_master_handle_t*

FlexIO I2C master handle typedef.

typedef void (**flexio_i2c_master_transfer_callback_t*)(*FLEXIO_I2C_Type* *base,
flexio_i2c_master_handle_t *handle, *status_t* status, void *userData)

FlexIO I2C master transfer callback typedef.

I2C_RETRY_TIMES

Retry times for waiting flag.

struct *_flexio_i2c_type*

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master access structure typedef.

Public Members

FLEXIO_Type *flexioBase

FlexIO base pointer.

uint8_t SDAPinIndex

Pin select for I2C SDA.

uint8_t SCLPinIndex

Pin select for I2C SCL.

uint8_t shifterIndex[2]

Shifter index used in FlexIO I2C.

uint8_t timerIndex[3]

Timer index used in FlexIO I2C.

uint32_t baudrate

Master transfer baudrate, used to calculate delay time.

struct _flexio_i2c_master_config

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master user configuration structure.

Public Members

bool enableMaster

Enables the FlexIO I2C peripheral at initialization time.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

struct _flexio_i2c_master_transfer

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master transfer structure.

Public Members

uint32_t flags

Transfer flag which controls the transfer, reserved for FlexIO I2C.

uint8_t slaveAddress

7-bit slave address.

flexio_i2c_direction_t direction

Transfer direction, read or write.

uint32_t subaddress

Sub address. Transferred MSB first.

uint8_t subaddressSize

Size of sub address.

```
uint8_t volatile *data
    Transfer buffer.

volatile size_t dataSize
    Transfer size.

struct _flexio_i2c_master_handle
    #include <fsl_flexio_i2c_master.h> Define FlexIO I2C master handle structure.
```

Public Members

```
flexio_i2c_master_transfer_t transfer
    FlexIO I2C master transfer copy.

size_t transferSize
    Total bytes to be transferred.

uint8_t state
    Transfer state maintained during transfer.

flexio_i2c_master_transfer_callback_t completionCallback
    Callback function called at transfer event. Callback function called at transfer event.

void *userData
    Callback parameter passed to callback function.

bool needRestart
    Whether master needs to send re-start signal.
```

2.16 FlexIO I2S Driver

```
void FLEXIO_I2S_Init(FLEXIO_I2S_Type *base, const flexio_i2s_config_t *config)
    Initializes the FlexIO I2S.
```

This API configures FlexIO pins and shifter to I2S and configures the FlexIO I2S with a configuration structure. The configuration structure can be filled by the user, or be set with default values by FLEXIO_I2S_GetDefaultConfig().

Note: This API should be called at the beginning of the application to use the FlexIO I2S driver. Otherwise, any access to the FlexIO I2S module can cause hard fault because the clock is not enabled.

Parameters

- base – FlexIO I2S base pointer
- config – FlexIO I2S configure structure.

```
void FLEXIO_I2S_GetDefaultConfig(flexio_i2s_config_t *config)
    Sets the FlexIO I2S configuration structure to default values.
```

The purpose of this API is to get the configuration structure initialized for use in FLEXIO_I2S_Init(). Users may use the initialized structure unchanged in FLEXIO_I2S_Init() or modify some fields of the structure before calling FLEXIO_I2S_Init().

Parameters

- config – pointer to master configuration structure

void FLEXIO_I2S_Deinit(*FLEXIO_I2S_Type* *base)

De-initializes the FlexIO I2S.

Calling this API resets the FlexIO I2S shifter and timer config. After calling this API, call the FLEXIO_I2S_Init to use the FlexIO I2S module.

Parameters

- base – FlexIO I2S base pointer

static inline void FLEXIO_I2S_Enable(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S module operation.

Parameters

- base – Pointer to FLEXIO_I2S_Type
- enable – True to enable, false dose not have any effect.

uint32_t FLEXIO_I2S_GetStatusFlags(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S status flags.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

Status flag, which are ORed by the enumerators in the _flexio_i2s_status_flags.

void FLEXIO_I2S_EnableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Enables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

void FLEXIO_I2S_DisableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Disables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

static inline void FLEXIO_I2S_TxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Tx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

static inline void FLEXIO_I2S_RxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Rx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

```
static inline uint32_t FLEXIO_I2S_TxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S send data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO i2s send data register address.

```
static inline uint32_t FLEXIO_I2S_RxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S receive data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO i2s receive data register address.

```
void FLEXIO_I2S_MasterSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format,  
                               uint32_t srcClock_Hz)
```

Configures the FlexIO I2S audio format in master mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – I2S master clock source frequency in Hz.

```
void FLEXIO_I2S_SlaveSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format)
```

Configures the FlexIO I2S audio format in slave mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.

```
status_t FLEXIO_I2S_WriteBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *txData,  
                                  size_t size)
```

Sends data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- txData – Pointer to the data to be written.
- size – Bytes to be written.

Return values

- `kStatus_Success` – Successfully write data.
- `kStatus_FLEXIO_I2C_Timeout` – Timeout polling status flags.

```
static inline void FLEXIO_I2S_WriteData(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint32_t data)
```

Writes data into a data register.

Parameters

- `base` – FlexIO I2S base pointer.
- `bitWidth` – How many bits in a audio word, usually 8/16/24/32 bits.
- `data` – Data to be written.

```
status_t FLEXIO_I2S_ReadBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *rxData, size_t size)
```

Receives a piece of data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- `base` – FlexIO I2S base pointer
- `bitWidth` – How many bits in a audio word, usually 8/16/24/32 bits.
- `rxData` – Pointer to the data to be read.
- `size` – Bytes to be read.

Return values

- `kStatus_Success` – Successfully read data.
- `kStatus_FLEXIO_I2C_Timeout` – Timeout polling status flags.

```
static inline uint32_t FLEXIO_I2S_ReadData(FLEXIO_I2S_Type *base)
```

Reads a data from the data register.

Parameters

- `base` – FlexIO I2S base pointer

Returns

Data read from data register.

```
void FLEXIO_I2S_TransferTxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, flexio_i2s_callback_t callback, void *userData)
```

Initializes the FlexIO I2S handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure
- `handle` – Pointer to `flexio_i2s_handle_t` structure to store the transfer state.
- `callback` – FlexIO I2S callback function, which is called while finished a block.
- `userData` – User parameter for the FlexIO I2S callback.

```
void FLEXIO_I2S_TransferSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,  
                                flexio_i2s_format_t *format, uint32_t srcClock_Hz)
```

Configures the FlexIO I2S audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – FlexIO I2S handle pointer.
- format – Pointer to audio data format structure.
- srcClock_Hz – FlexIO I2S bit clock source frequency in Hz. This parameter should be 0 while in slave mode.

```
void FLEXIO_I2S_TransferRxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,  
                                       flexio_i2s_callback_t callback, void *userData)
```

Initializes the FlexIO I2S receive handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

```
status_t FLEXIO_I2S_TransferSendNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                             *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking send transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status and check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_FLEXIO_I2S_TxBusy – Previous transmission still not finished, data not all written to TX register yet.
- kStatus_InvalidArgument – The input parameter is invalid.

```
status_t FLEXIO_I2S_TransferReceiveNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                                *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking receive transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status to check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data receive.
- kStatus_FLEXIO_I2S_RxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

void FLEXIO_I2S_TransferAbortSend(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)
Aborts the current send.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

void FLEXIO_I2S_TransferAbortReceive(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)
Aborts the current receive.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

status_t FLEXIO_I2S_TransferGetSendCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *size_t* *count)

Gets the remaining bytes to be sent.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes sent.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`status_t FLEXIO_I2S_TransferGetReceiveCount(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, size_t *count)`

Gets the remaining bytes to be received.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – Pointer to `flexio_i2s_handle_t` structure which stores the transfer state
- `count` – Bytes recieved.

Return values

- `kStatus_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

Returns

count Bytes received.

`void FLEXIO_I2S_TransferTxHandleIRQ(void *i2sBase, void *i2sHandle)`

Tx interrupt handler.

Parameters

- `i2sBase` – Pointer to `FLEXIO_I2S_Type` structure.
- `i2sHandle` – Pointer to `flexio_i2s_handle_t` structure

`void FLEXIO_I2S_TransferRxHandleIRQ(void *i2sBase, void *i2sHandle)`

Rx interrupt handler.

Parameters

- `i2sBase` – Pointer to `FLEXIO_I2S_Type` structure.
- `i2sHandle` – Pointer to `flexio_i2s_handle_t` structure.

`FSL_FLEXIO_I2S_DRIVER_VERSION`

FlexIO I2S driver version 2.2.2.

FlexIO I2S transfer status.

Values:

enumerator `kStatus_FLEXIO_I2S_Idle`

FlexIO I2S is in idle state

enumerator `kStatus_FLEXIO_I2S_TxBusy`

FlexIO I2S Tx is busy

enumerator `kStatus_FLEXIO_I2S_RxBusy`

FlexIO I2S Rx is busy

enumerator `kStatus_FLEXIO_I2S_Error`

FlexIO I2S error occurred

enumerator `kStatus_FLEXIO_I2S_QueueFull`

FlexIO I2S transfer queue is full.

enumerator kStatus_FLEXIO_I2S_Timeout
FlexIO I2S timeout polling status flags.

enum _flexio_i2s_master_slave
Master or slave mode.

Values:

enumerator kFLEXIO_I2S_Master
Master mode

enumerator kFLEXIO_I2S_Slave
Slave mode

_flexio_i2s_interrupt_enable Define FlexIO FlexIO I2S interrupt mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_I2S_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

_flexio_i2s_status_flags Define FlexIO FlexIO I2S status mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_I2S_RxDataRegFullFlag
Receive buffer full flag.

enum _flexio_i2s_sample_rate
Audio sample rate.

Values:

enumerator kFLEXIO_I2S_SampleRate8KHz
Sample rate 8000Hz

enumerator kFLEXIO_I2S_SampleRate11025Hz
Sample rate 11025Hz

enumerator kFLEXIO_I2S_SampleRate12KHz
Sample rate 12000Hz

enumerator kFLEXIO_I2S_SampleRate16KHz
Sample rate 16000Hz

enumerator kFLEXIO_I2S_SampleRate22050Hz
Sample rate 22050Hz

enumerator kFLEXIO_I2S_SampleRate24KHz
Sample rate 24000Hz

enumerator kFLEXIO_I2S_SampleRate32KHz
Sample rate 32000Hz

enumerator kFLEXIO_I2S_SampleRate44100Hz
Sample rate 44100Hz

```
enumerator kFLEXIO_I2S_SampleRate48KHz
    Sample rate 48000Hz
enumerator kFLEXIO_I2S_SampleRate96KHz
    Sample rate 96000Hz
enum _flexio_i2s_word_width
    Audio word width.
    Values:
enumerator kFLEXIO_I2S_WordWidth8bits
    Audio data width 8 bits
enumerator kFLEXIO_I2S_WordWidth16bits
    Audio data width 16 bits
enumerator kFLEXIO_I2S_WordWidth24bits
    Audio data width 24 bits
enumerator kFLEXIO_I2S_WordWidth32bits
    Audio data width 32 bits
typedef struct _flexio_i2s_type FLEXIO_I2S_Type
    Define FlexIO I2S access structure typedef.
typedef enum _flexio_i2s_master_slave flexio_i2s_master_slave_t
    Master or slave mode.
typedef struct _flexio_i2s_config flexio_i2s_config_t
    FlexIO I2S configure structure.
typedef struct _flexio_i2s_format flexio_i2s_format_t
    FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.
typedef enum _flexio_i2s_sample_rate flexio_i2s_sample_rate_t
    Audio sample rate.
typedef enum _flexio_i2s_word_width flexio_i2s_word_width_t
    Audio word width.
typedef struct _flexio_i2s_transfer flexio_i2s_transfer_t
    Define FlexIO I2S transfer structure.
typedef struct _flexio_i2s_handle flexio_i2s_handle_t
typedef void (*flexio_i2s_callback_t)(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,
status_t status, void *userData)
    FlexIO I2S xfer callback prototype.
I2S_RETRY_TIMES
    Retry times for waiting flag.
FLEXIO_I2S_XFER_QUEUE_SIZE
    FlexIO I2S transfer queue size, user can refine it according to use case.
struct _flexio_i2s_type
    #include <fsl_flexio_i2s.h> Define FlexIO I2S access structure typedef.
```

Public Members

FLEXIO_Type *flexioBase

FlexIO base pointer

uint8_t txPinIndex

Tx data pin index in FlexIO pins

uint8_t rxPinIndex

Rx data pin index

uint8_t bclkPinIndex

Bit clock pin index

uint8_t fsPinIndex

Frame sync pin index

uint8_t txShifterIndex

Tx data shifter index

uint8_t rxShifterIndex

Rx data shifter index

uint8_t bclkTimerIndex

Bit clock timer index

uint8_t fsTimerIndex

Frame sync timer index

struct _flexio_i2s_config

#include <fsl_flexio_i2s.h> FlexIO I2S configure structure.

Public Members

bool enableI2S

Enable FlexIO I2S

flexio_i2s_master_slave_t masterSlave

Master or slave

flexio_pin_polarity_t txPinPolarity

Tx data pin polarity, active high or low

flexio_pin_polarity_t rxPinPolarity

Rx data pin polarity

flexio_pin_polarity_t bclkPinPolarity

Bit clock pin polarity

flexio_pin_polarity_t fsPinPolarity

Frame sync pin polarity

flexio_shifter_timer_polarity_t txTimerPolarity

Tx data valid on bclk rising or falling edge

flexio_shifter_timer_polarity_t rxTimerPolarity

Rx data valid on bclk rising or falling edge

struct _flexio_i2s_format

#include <fsl_flexio_i2s.h> FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

Public Members

uint8_t bitWidth
Bit width of audio data, always 8/16/24/32 bits

uint32_t sampleRate_Hz
Sample rate of the audio data

struct _flexio_i2s_transfer
#include <fsl_flexio_i2s.h> Define FlexIO I2S transfer structure.

Public Members

uint8_t *data
Data buffer start pointer

size_t dataSize
Bytes to be transferred.

struct _flexio_i2s_handle
#include <fsl_flexio_i2s.h> Define FlexIO I2S handle structure.

Public Members

uint32_t state
Internal state

flexio_i2s_callback_t callback
Callback function called at transfer event

void *userData
Callback parameter passed to callback function

uint8_t bitWidth
Bit width for transfer, 8/16/24/32bits

flexio_i2s_transfer_t queue[(4U)]
Transfer queue storing queued transfer

size_t transferSize[(4U)]
Data bytes need to transfer

volatile uint8_t queueUser
Index for user to queue transfer

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

2.17 FlexIO SPI Driver

void FLEXIO_SPI_MasterInit(*FLEXIO_SPI_Type* *base, *flexio_spi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI master hardware, and configures the FlexIO SPI with FlexIO SPI master configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_MasterGetDefaultConfig().

Example

```

FLEXIO_SPI_Type spiDev = {
    .flexioBase = FLEXIO,
    .SDOPinIndex = 0,
    .SDIPinIndex = 1,
    .SCKPinIndex = 2,
    .CSnPinIndex = 3,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_spi_master_config_t config = {
    .enableMaster = true,
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .baudRate_Bps = 500000,
    .phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
    .direction = kFLEXIO_SPI_MsbFirst,
    .dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_MasterInit(&spiDev, &config, srcClock_Hz);

```

Note: 1.FlexIO SPI master only support CPOL = 0, which means clock inactive low. 2.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI master communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $2*2=4$. If FlexIO SPI master communicates with FlexIO SPI slave, the maximum baud rate is FlexIO clock frequency divided by $(1.5+2.5)*2=8$.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- masterConfig – Pointer to the flexio_spi_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

void FLEXIO_SPI_MasterDeinit(*FLEXIO_SPI_Type* *base)

Resets the FlexIO SPI timer and shifter config.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_MasterGetDefaultConfig(*flexio_spi_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO SPI master. The configuration can be used directly by calling the FLEXIO_SPI_MasterConfigure(). Example:

```

flexio_spi_master_config_t masterConfig;
FLEXIO_SPI_MasterGetDefaultConfig(&masterConfig);

```

Parameters

- masterConfig – Pointer to the flexio_spi_master_config_t structure.

void FLEXIO_SPI_SlaveInit(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_config_t* *slaveConfig)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI slave hardware configuration, and configures the FlexIO SPI with FlexIO SPI slave configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_SlaveGetDefaultConfig().

Note: 1. Only one timer is needed in the FlexIO SPI slave. As a result, the second timer index is ignored. 2. FlexIO SPI slave only support CPOL = 0, which means clock inactive low. 3. For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI slave communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $3 \times 2 = 6$. If FlexIO SPI slave communicates with FlexIO SPI master, the maximum baud rate is FlexIO clock frequency divided by $(1.5 + 2.5) \times 2 = 8$.

Example

```
FLEXIO_SPI_Type spiDev = {
    .flexioBase = FLEXIO,
    .SDOPinIndex = 0,
    .SDIPinIndex = 1,
    .SCKPinIndex = 2,
    .CSnPinIndex = 3,
    .shifterIndex = {0,1},
    .timerIndex = {0}
};
flexio_spi_slave_config_t config = {
    .enableSlave = true,
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
    .direction = kFLEXIO_SPI_MsbFirst,
    .dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_SlaveInit(&spiDev, &config);
```

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

void FLEXIO_SPI_SlaveDeinit(*FLEXIO_SPI_Type* *base)

Gates the FlexIO clock.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_SlaveGetDefaultConfig(*flexio_spi_slave_config_t* *slaveConfig)

Gets the default configuration to configure the FlexIO SPI slave. The configuration can be used directly for calling the FLEXIO_SPI_SlaveConfigure(). Example:

```
flexio_spi_slave_config_t slaveConfig;
FLEXIO_SPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

uint32_t FLEXIO_SPI_GetStatusFlags(*FLEXIO_SPI_Type* *base)

Gets FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

Returns

status flag; Use the status flag to AND the following flag mask and get the status.

- kFLEXIO_SPI_TxEmptyFlag
- kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_ClearStatusFlags(*FLEXIO_SPI_Type* *base, uint32_t mask)

Clears FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – status flag The parameter can be any combination of the following values:
 - kFLEXIO_SPI_TxEmptyFlag
 - kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_EnableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Enables the FlexIO SPI interrupt.

This function enables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source. The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_DisableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Disables the FlexIO SPI interrupt.

This function disables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_EnableDMA(*FLEXIO_SPI_Type* *base, uint32_t mask, bool enable)

Enables/disables the FlexIO SPI transmit DMA. This function enables/disables the FlexIO SPI Tx DMA, which means that asserting the kFLEXIO_SPI_TxEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t FLEXIO_SPI_GetTxDataRegisterAddress(*FLEXIO_SPI_Type* *base,
flexio_spi_shift_direction_t
direction)

Gets the FlexIO SPI transmit data register address for MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI transmit data register address.

```
static inline uint32_t FLEXIO_SPI_GetRxDataRegisterAddress(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_shift_direction_t  
                                                         direction)
```

Gets the FlexIO SPI receive data register address for the MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI receive data register address.

```
static inline void FLEXIO_SPI_Enable(FLEXIO_SPI_Type *base, bool enable)
```

Enables/disables the FlexIO SPI module operation.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.
- enable – True to enable, false does not have any effect.

```
void FLEXIO_SPI_MasterSetBaudRate(FLEXIO_SPI_Type *base, uint32_t baudRate_Bps,  
                                  uint32_t srcClockHz)
```

Sets baud rate for the FlexIO SPI transfer, which is only used for the master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- baudRate_Bps – Baud Rate needed in Hz.
- srcClockHz – SPI source clock frequency in Hz.

```
static inline void FLEXIO_SPI_WriteData(FLEXIO_SPI_Type *base, flexio_spi_shift_direction_t  
                                       direction, uint32_t data)
```

Writes one byte of data, which is sent using the MSB method.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- data – 8/16/32 bit data.

```
static inline uint32_t FLEXIO_SPI_ReadData(FLEXIO_SPI_Type *base,  
                                           flexio_spi_shift_direction_t direction)
```

Reads 8 bit/16 bit data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.

Returns

8 bit/16 bit data received.

```
status_t FLEXIO_SPI_WriteBlocking(FLEXIO_SPI_Type *base, flexio_spi_shift_direction_t  
                                   direction, const uint8_t *buffer, size_t size)
```

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The data bytes to send.
- size – The number of data bytes to send.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

```
status_t FLEXIO_SPI_ReadBlocking(FLEXIO_SPI_Type *base, flexio_spi_shift_direction_t  
                                  direction, uint8_t *buffer, size_t size)
```

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The buffer to store the received bytes.
- size – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_MasterTransferBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_transfer_t* *xfer)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – pointer to FLEXIO_SPI_Type structure
- xfer – FlexIO SPI transfer structure, see flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

void FLEXIO_SPI_FlushShifters(*FLEXIO_SPI_Type* *base)

Flush tx/rx shifters.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

status_t FLEXIO_SPI_MasterTransferCreateHandle(*FLEXIO_SPI_Type* *base,
flexio_spi_master_handle_t *handle,
flexio_spi_master_transfer_callback_t
callback, void *userData)

Initializes the FlexIO SPI Master handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_SPI_MasterTransferNonBlocking(*FLEXIO_SPI_Type* *base,
flexio_spi_master_handle_t *handle,
flexio_spi_transfer_t *xfer)

Master transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- xfer – FlexIO SPI transfer structure. See flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully start a transfer.

- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – SPI is not idle, is running another transfer.

void FLEXIO_SPI_MasterTransferAbort(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle)

Aborts the master data transfer, which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_MasterTransferGetCount(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *size_t* *count)

Gets the data transfer status which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXIO_SPI_MasterTransferHandleIRQ(void *spiType, void *spiHandle)

FlexIO SPI master IRQ handler function.

Parameters

- spiType – Pointer to the FLEXIO_SPI_Type structure.
- spiHandle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_SlaveTransferCreateHandle(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_handle_t* *handle, *flexio_spi_slave_transfer_callback_t* callback, void *userData)

Initializes the FlexIO SPI Slave handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

```
status_t FLEXIO_SPI_SlaveTransferNonBlocking(FLEXIO_SPI_Type *base,  
                                             flexio_spi_slave_handle_t *handle,  
                                             flexio_spi_transfer_t *xfer)
```

Slave transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- handle – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.
- base – Pointer to the `FLEXIO_SPI_Type` structure.
- xfer – FlexIO SPI transfer structure. See `flexio_spi_transfer_t`.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – SPI is not idle; it is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbort(FLEXIO_SPI_Type *base,  
                                                flexio_spi_slave_handle_t *handle)
```

Aborts the slave data transfer which used IRQ, share same API with master.

Parameters

- base – Pointer to the `FLEXIO_SPI_Type` structure.
- handle – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCount(FLEXIO_SPI_Type *base,  
                                                       flexio_spi_slave_handle_t *handle,  
                                                       size_t *count)
```

Gets the data transfer status which used IRQ, share same API with master.

Parameters

- base – Pointer to the `FLEXIO_SPI_Type` structure.
- handle – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – count is Invalid.
- `kStatus_Success` – Successfully return the count.

```
void FLEXIO_SPI_SlaveTransferHandleIRQ(void *spiType, void *spiHandle)
```

FlexIO SPI slave IRQ handler function.

Parameters

- spiType – Pointer to the `FLEXIO_SPI_Type` structure.
- spiHandle – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
FSL_FLEXIO_SPI_DRIVER_VERSION
```

FlexIO SPI driver version.

Error codes for the FlexIO SPI driver.

Values:

enumerator kStatus_FLEXIO_SPI_Busy
FlexIO SPI is busy.

enumerator kStatus_FLEXIO_SPI_Idle
SPI is idle

enumerator kStatus_FLEXIO_SPI_Error
FlexIO SPI error.

enumerator kStatus_FLEXIO_SPI_Timeout
FlexIO SPI timeout polling status flags.

enum _flexio_spi_clock_phase
FlexIO SPI clock phase configuration.

Values:

enumerator kFLEXIO_SPI_ClockPhaseFirstEdge
First edge on SPCK occurs at the middle of the first cycle of a data transfer.

enumerator kFLEXIO_SPI_ClockPhaseSecondEdge
First edge on SPCK occurs at the start of the first cycle of a data transfer.

enum _flexio_spi_shift_direction
FlexIO SPI data shifter direction options.

Values:

enumerator kFLEXIO_SPI_MsbFirst
Data transfers start with most significant bit.

enumerator kFLEXIO_SPI_LsbFirst
Data transfers start with least significant bit.

enum _flexio_spi_data_bitcount_mode
FlexIO SPI data length mode options.

Values:

enumerator kFLEXIO_SPI_8BitMode
8-bit data transmission mode.

enumerator kFLEXIO_SPI_16BitMode
16-bit data transmission mode.

enumerator kFLEXIO_SPI_32BitMode
32-bit data transmission mode.

enum _flexio_spi_interrupt_enable
Define FlexIO SPI interrupt mask.

Values:

enumerator kFLEXIO_SPI_TxEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_SPI_RxFullInterruptEnable
Receive buffer full interrupt enable.

enum *_flexio_spi_status_flags*

Define FlexIO SPI status mask.

Values:

enumerator kFLEXIO_SPI_TxBufferEmptyFlag

Transmit buffer empty flag.

enumerator kFLEXIO_SPI_RxBufferFullFlag

Receive buffer full flag.

enum *_flexio_spi_dma_enable*

Define FlexIO SPI DMA mask.

Values:

enumerator kFLEXIO_SPI_TxDmaEnable

Tx DMA request source

enumerator kFLEXIO_SPI_RxDmaEnable

Rx DMA request source

enumerator kFLEXIO_SPI_DmaAllEnable

All DMA request source

enum *_flexio_spi_transfer_flags*

Define FlexIO SPI transfer flags.

Note: Use kFLEXIO_SPI_csContinuous and one of the other flags to OR together to form the transfer flag.

Values:

enumerator kFLEXIO_SPI_8bitMsb

FlexIO SPI 8-bit MSB first

enumerator kFLEXIO_SPI_8bitLsb

FlexIO SPI 8-bit LSB first

enumerator kFLEXIO_SPI_16bitMsb

FlexIO SPI 16-bit MSB first

enumerator kFLEXIO_SPI_16bitLsb

FlexIO SPI 16-bit LSB first

enumerator kFLEXIO_SPI_32bitMsb

FlexIO SPI 32-bit MSB first

enumerator kFLEXIO_SPI_32bitLsb

FlexIO SPI 32-bit LSB first

enumerator kFLEXIO_SPI_csContinuous

Enable the CS signal continuous mode

typedef enum *_flexio_spi_clock_phase* flexio_spi_clock_phase_t

FlexIO SPI clock phase configuration.

typedef enum *_flexio_spi_shift_direction* flexio_spi_shift_direction_t

FlexIO SPI data shifter direction options.

typedef enum *_flexio_spi_data_bitcount_mode* flexio_spi_data_bitcount_mode_t

FlexIO SPI data length mode options.


```
typedef struct _flexio_spi_type FLEXIO_SPI_Type
    Define FlexIO SPI access structure typedef.

typedef struct _flexio_spi_master_config flexio_spi_master_config_t
    Define FlexIO SPI master configuration structure.

typedef struct _flexio_spi_slave_config flexio_spi_slave_config_t
    Define FlexIO SPI slave configuration structure.

typedef struct _flexio_spi_transfer flexio_spi_transfer_t
    Define FlexIO SPI transfer structure.

typedef struct _flexio_spi_master_handle flexio_spi_master_handle_t
    typedef for flexio_spi_master_handle_t in advance.

typedef flexio_spi_master_handle_t flexio_spi_slave_handle_t
    Slave handle is the same with master handle.

typedef void (*flexio_spi_master_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle, status_t status, void *userData)
    FlexIO SPI master callback for finished transmit.

typedef void (*flexio_spi_slave_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_slave_handle_t *handle, status_t status, void *userData)
    FlexIO SPI slave callback for finished transmit.

FLEXIO_SPI_DUMMYDATA
    FlexIO SPI dummy transfer data, the data is sent while txData is NULL.

SPI_RETRY_TIMES
    Retry times for waiting flag.

FLEXIO_SPI_XFER_DATA_FORMAT(flag)
    Get the transfer data format of width and bit order.

struct _flexio_spi_type
    #include <fsl_flexio_spi.h> Define FlexIO SPI access structure typedef.
```

Public Members

```
FLEXIO_Type *flexioBase
    FlexIO base pointer.

uint8_t SDOPinIndex
    Pin select for data output. To set SDO pin in Hi-Z state, user needs to mux the pin as
    GPIO input and disable all pull up/down in application.

uint8_t SDIPinIndex
    Pin select for data input.

uint8_t SCKPinIndex
    Pin select for clock.

uint8_t CSnPinIndex
    Pin select for enable.

uint8_t shifterIndex[2]
    Shifter index used in FlexIO SPI.

uint8_t timerIndex[2]
    Timer index used in FlexIO SPI.
```

```
struct _flexio_spi_master_config
```

```
#include <fsl_flexio_spi.h> Define FlexIO SPI master configuration structure.
```

Public Members

```
bool enableMaster
```

Enable/disable FlexIO SPI master after configuration.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode.

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode.

```
bool enableFastAccess
```

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

```
uint32_t baudRate_Bps
```

Baud rate in Bps.

```
flexio_spi_clock_phase_t phase
```

Clock phase.

```
flexio_spi_data_bitcount_mode_t dataMode
```

8bit or 16bit mode.

```
struct _flexio_spi_slave_config
```

```
#include <fsl_flexio_spi.h> Define FlexIO SPI slave configuration structure.
```

Public Members

```
bool enableSlave
```

Enable/disable FlexIO SPI slave after configuration.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode.

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode.

```
bool enableFastAccess
```

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

```
flexio_spi_clock_phase_t phase
```

Clock phase.

```
flexio_spi_data_bitcount_mode_t dataMode
```

8bit or 16bit mode.

```
struct _flexio_spi_transfer
```

```
#include <fsl_flexio_spi.h> Define FlexIO SPI transfer structure.
```

Public Members

```
const uint8_t *txData
```

Send buffer.

```

uint8_t *rxData
    Receive buffer.

size_t dataSize
    Transfer bytes.

uint8_t flags
    FlexIO SPI control flag, MSB first or LSB first.

struct _flexio_spi_master_handle
    #include <fsl_flexio_spi.h> Define FlexIO SPI handle structure.

```

Public Members

```

const uint8_t *txData
    Transfer buffer.

uint8_t *rxData
    Receive buffer.

size_t transferSize
    Total bytes to be transferred.

volatile size_t txRemainingBytes
    Send data remaining in bytes.

volatile size_t rxRemainingBytes
    Receive data remaining in bytes.

volatile uint32_t state
    FlexIO SPI internal state.

uint8_t bytePerFrame
    SPI mode, 2bytes or 1byte in a frame

flexio_spi_shift_direction_t direction
    Shift direction.

flexio_spi_master_transfer_callback_t callback
    FlexIO SPI callback.

void *userData
    Callback parameter.

bool isCsContinuous
    Is current transfer using CS continuous mode.

uint32_t timer1Cfg
    TIMER1 TIMCFG regiser value backup.

```

2.18 FlexIO UART Driver

```

status_t FLEXIO_UART_Init(FLEXIO_UART_Type *base, const flexio_uart_config_t *userConfig,
    uint32_t srcClock_Hz)

```

Ungates the FlexIO clock, resets the FlexIO module, configures FlexIO UART hardware, and configures the FlexIO UART with FlexIO UART configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_UART_GetDefaultConfig().

Example

```
FLEXIO_UART_Type base = {
    .flexioBase = FLEXIO,
    .TxPinIndex = 0,
    .RxPinIndex = 1,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_uart_config_t config = {
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .baudRate_Bps = 115200U,
    .bitCountPerChar = 8
};
FLEXIO_UART_Init(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- userConfig – Pointer to the flexio_uart_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Configuration success.
- kStatus_FLEXIO_UART_BaudrateNotSupport – Baudrate is not supported for current clock source frequency.

void FLEXIO_UART_Deinit(*FLEXIO_UART_Type* *base)

Resets the FlexIO UART shifter and timer config.

Note: After calling this API, call the FLEXIO_UART_Init to use the FlexIO UART module.

Parameters

- base – Pointer to FLEXIO_UART_Type structure

void FLEXIO_UART_GetDefaultConfig(*flexio_uart_config_t* *userConfig)

Gets the default configuration to configure the FlexIO UART. The configuration can be used directly for calling the FLEXIO_UART_Init(). Example:

```
flexio_uart_config_t config;
FLEXIO_UART_GetDefaultConfig(&userConfig);
```

Parameters

- userConfig – Pointer to the flexio_uart_config_t structure.

uint32_t FLEXIO_UART_GetStatusFlags(*FLEXIO_UART_Type* *base)

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART status flags.

`void FLEXIO_UART_ClearStatusFlags(FLEXIO_UART_Type *base, uint32_t mask)`

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_UART_TxDataRegEmptyFlag
 - kFLEXIO_UART_RxEmptyFlag
 - kFLEXIO_UART_RxOverRunFlag

`void FLEXIO_UART_EnableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)`

Enables the FlexIO UART interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

`void FLEXIO_UART_DisableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)`

Disables the FlexIO UART interrupt.

This function disables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

`static inline uint32_t FLEXIO_UART_GetTxDataRegisterAddress(FLEXIO_UART_Type *base)`

Gets the FlexIO UART transmit data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART transmit data register address.

`static inline uint32_t FLEXIO_UART_GetRxDataRegisterAddress(FLEXIO_UART_Type *base)`

Gets the FlexIO UART receive data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART receive data register address.

`static inline void FLEXIO_UART_EnableTxDMA(FLEXIO_UART_Type *base, bool enable)`

Enables/disables the FlexIO UART transmit DMA. This function enables/disables the FlexIO UART Tx DMA, which means asserting the kFLEXIO_UART_TxDataRegEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_EnableRxDMA(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART receive DMA. This function enables/disables the FlexIO UART Rx DMA, which means asserting kFLEXIO_UART_RxDataRegFullFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_Enable(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART module operation.

Parameters

- base – Pointer to the FLEXIO_UART_Type.
- enable – True to enable, false does not have any effect.

static inline void FLEXIO_UART_WriteByte(*FLEXIO_UART_Type* *base, const uint8_t *buffer)

Writes one byte of data.

Note: This is a non-blocking API, which returns directly after the data is put into the data register. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The data bytes to send.

static inline void FLEXIO_UART_ReadByte(*FLEXIO_UART_Type* *base, uint8_t *buffer)

Reads one byte of data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The buffer to store the received bytes.

status_t FLEXIO_UART_WriteBlocking(*FLEXIO_UART_Type* *base, const uint8_t *txData, size_t txSize)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- txData – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.

- `kStatus_Success` – Successfully wrote all data.

`status_t FLEXIO_UART_ReadBlocking(FLEXIO_UART_Type *base, uint8_t *rxData, size_t rxSize)`

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `rxData` – The buffer to store the received bytes.
- `rxSize` – The number of data bytes to be received.

Return values

- `kStatus_FLEXIO_UART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t FLEXIO_UART_TransferCreateHandle(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, flexio_uart_transfer_callback_t callback, void *userData)`

Initializes the UART handle.

This function initializes the FlexIO UART handle, which can be used for other FlexIO UART transactional APIs. Call this API once to get the initialized handle.

The UART driver supports the “background” receiving, which means that users can set up a RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `FLEXIO_UART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly. The ring buffer is disabled if passing `NULL` as `ringBuffer`.

Parameters

- `base` – to `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `callback` – The callback function.
- `userData` – The parameter of the callback function.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`void FLEXIO_UART_TransferStartRingBuffer(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, uint8_t *ringBuffer, size_t ringBufferSize)`

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn’t call the `UART_ReceiveNonBlocking()` API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, only 31 bytes are used for saving data.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – Size of the ring buffer.

void FLEXIO_UART_TransferStopRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferSendNonBlocking(*FLEXIO_UART_Type* *base,
flexio_uart_handle_t *handle,
flexio_uart_transfer_t *xfer)

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in ISR, the FlexIO UART driver calls the callback function and passes the kStatus_FLEXIO_UART_TxIdle as status parameter.

Note: The kStatus_FLEXIO_UART_TxIdle is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – FlexIO UART transfer structure. See flexio_uart_transfer_t.

Return values

- kStatus_Success – Successfully starts the data transmission.
- kStatus_UART_TxBusy – Previous transmission still not finished, data not written to the TX register.

void FLEXIO_UART_TransferAbortSend(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. Get the remainBytes to find out how many bytes are still not sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferGetSendCount(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *size_t* *count)

Gets the number of bytes sent.

This function gets the number of bytes sent driven by interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

status_t FLEXIO_UART_TransferReceiveNonBlocking(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_t* *xfer, *size_t* *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using the interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in ring buffer is copied and the parameter *receivedBytes* shows how many bytes are copied from the ring buffer. After copying, if the data in ring buffer is not enough to read, the receive request is saved by the UART driver. When new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter *kStatus_UART_RxIdle*. For example, if the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer, the 5 bytes are copied to *xfer->data*. This function returns with the parameter *receivedBytes* set to 5. For the last 5 bytes, newly arrived data is saved from the *xfer->data[5]*. When 5 bytes are received, the UART driver notifies upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to *xfer->data*. When all data is received, the upper layer is notified.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – UART transfer structure. See *flexio_uart_transfer_t*.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- kStatus_Success – Successfully queue the transfer into the transmit queue.
- kStatus_FLEXIO_UART_RxBusy – Previous receive request is not finished.

```
void FLEXIO_UART_TransferAbortReceive(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle)
```

Aborts the receive data which was using IRQ.

This function aborts the receive data which was using IRQ.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
status_t FLEXIO_UART_TransferGetReceiveCount(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, size_t *count)
```

Gets the number of bytes received.

This function gets the number of bytes received driven by interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
void FLEXIO_UART_TransferHandleIRQ(void *uartType, void *uartHandle)
```

FlexIO UART IRQ handler function.

This function processes the FlexIO UART transmit and receives the IRQ request.

Parameters

- uartType – Pointer to the *FLEXIO_UART_Type* structure.
- uartHandle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
void FLEXIO_UART_FlushShifters(FLEXIO_UART_Type *base)
```

Flush tx/rx shifters.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

```
FSL_FLEXIO_UART_DRIVER_VERSION
```

FlexIO UART driver version.

Error codes for the UART driver.

Values:

enumerator *kStatus_FLEXIO_UART_TxBusy*
Transmitter is busy.

enumerator *kStatus_FLEXIO_UART_RxBusy*
Receiver is busy.

enumerator kStatus_FLEXIO_UART_TxIdle
UART transmitter is idle.

enumerator kStatus_FLEXIO_UART_RxIdle
UART receiver is idle.

enumerator kStatus_FLEXIO_UART_ERROR
ERROR happens on UART.

enumerator kStatus_FLEXIO_UART_RxRingBufferOverrun
UART RX software ring buffer overrun.

enumerator kStatus_FLEXIO_UART_RxHardwareOverrun
UART RX receiver overrun.

enumerator kStatus_FLEXIO_UART_Timeout
UART times out.

enumerator kStatus_FLEXIO_UART_BaudrateNotSupport
Baudrate is not supported in current clock source

enum _flexio_uart_bit_count_per_char
FlexIO UART bit count per char.

Values:

enumerator kFLEXIO_UART_7BitsPerChar
7-bit data characters

enumerator kFLEXIO_UART_8BitsPerChar
8-bit data characters

enumerator kFLEXIO_UART_9BitsPerChar
9-bit data characters

enum _flexio_uart_interrupt_enable
Define FlexIO UART interrupt mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_UART_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

enum _flexio_uart_status_flags
Define FlexIO UART status mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_UART_RxDataRegFullFlag
Receive buffer full flag.

enumerator kFLEXIO_UART_RxOverRunFlag
Receive buffer over run flag.

typedef enum _flexio_uart_bit_count_per_char flexio_uart_bit_count_per_char_t
FlexIO UART bit count per char.

```
typedef struct _flexio_uart_type FLEXIO_UART_Type
    Define FlexIO UART access structure typedef.
typedef struct _flexio_uart_config flexio_uart_config_t
    Define FlexIO UART user configuration structure.
typedef struct _flexio_uart_transfer flexio_uart_transfer_t
    Define FlexIO UART transfer structure.
typedef struct _flexio_uart_handle flexio_uart_handle_t
typedef void (*flexio_uart_transfer_callback_t)(FLEXIO_UART_Type *base, flexio_uart_handle_t
*handle, status_t status, void *userData)
    FlexIO UART transfer callback function.
UART_RETRY_TIMES
    Retry times for waiting flag.
struct _flexio_uart_type
    #include <fsl_flexio_uart.h> Define FlexIO UART access structure typedef.
```

Public Members

```
FLEXIO_Type *flexioBase
    FlexIO base pointer.
uint8_t TxPinIndex
    Pin select for UART_Tx.
uint8_t RxPinIndex
    Pin select for UART_Rx.
uint8_t shifterIndex[2]
    Shifter index used in FlexIO UART.
uint8_t timerIndex[2]
    Timer index used in FlexIO UART.
struct _flexio_uart_config
    #include <fsl_flexio_uart.h> Define FlexIO UART user configuration structure.
```

Public Members

```
bool enableUart
    Enable/disable FlexIO UART TX & RX.
bool enableInDoze
    Enable/disable FlexIO operation in doze mode
bool enableInDebug
    Enable/disable FlexIO operation in debug mode
bool enableFastAccess
    Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to
    be at least twice the frequency of the bus clock.
uint32_t baudRate_Bps
    Baud rate in Bps.
```

flexio_uart_bit_count_per_char_t bitCountPerChar
number of bits, 7/8/9 -bit

struct *_flexio_uart_transfer*

#include <fsl_flexio_uart.h> Define FlexIO UART transfer structure.

Public Members

size_t dataSize

Transfer size

struct *_flexio_uart_handle*

#include <fsl_flexio_uart.h> Define FLEXIO UART handle structure.

Public Members

const uint8_t *volatile txData

Address of remaining data to send.

volatile size_t txDataSize

Size of the remaining data to send.

uint8_t *volatile rxData

Address of remaining data to receive.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t txDataSizeAll

Total bytes to be sent.

size_t rxDataSizeAll

Total bytes to be received.

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

flexio_uart_transfer_callback_t callback

Callback function.

void *userData

UART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

union *__unnamed36__*

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

const uint8_t *txData

The buffer of data to be sent.

2.19 ftfx adapter

2.20 Ftfx CACHE Driver

enum _ftfx_cache_ram_func_constants

Constants for execute-in-RAM flash function.

Values:

enumerator kFTFx_CACHE_RamFuncMaxSizeInWords

The maximum size of execute-in-RAM function.

typedef struct _flash_prefetch_speculation_status ftfx_prefetch_speculation_status_t

FTFx prefetch speculation status.

typedef struct _ftfx_cache_config ftfx_cache_config_t

FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

status_t FTFx_CACHE_Init(ftfx_cache_config_t *config)

Initializes the global FTFx cache structure members.

This function checks and initializes the Flash module for the other FTFx cache APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

status_t FTFx_CACHE_ClearCachePrefetchSpeculation(ftfx_cache_config_t *config, bool isPreProcess)

Process the cache/prefetch/speculation to the flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- isPreProcess – The possible option used to control flash cache/prefetch/speculation

Return values

- kStatus_FTFx_Success – API was executed successfully.

- kStatus_FTFx_InvalidArgument – Invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

status_t FTFx_CACHE_PflashSetPrefetchSpeculation(*ftfx_prefetch_speculation_status_t* *speculationStatus)

Sets the PFlash prefetch speculation to the intended speculation status.

Parameters

- speculationStatus – The expected protect status to set to the PFlash protection register. Each bit is

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidSpeculationOption – An invalid speculation option argument is provided.

status_t FTFx_CACHE_PflashGetPrefetchSpeculation(*ftfx_prefetch_speculation_status_t* *speculationStatus)

Gets the PFlash prefetch speculation status.

Parameters

- speculationStatus – Speculation status returned by the PFlash IP.

Return values

kStatus_FTFx_Success – API was executed successfully.

struct _flash_prefetch_speculation_status

#include <fsl_ftfx_cache.h> FTFx prefetch speculation status.

Public Members

bool instructionOff

Instruction speculation.

bool dataOff

Data speculation.

union function_bit_operation_ptr_t

#include <fsl_ftfx_cache.h>

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint32_t *base, uint32_t bitMask, uint32_t bitShift, uint32_t bitValue)

struct _ftfx_cache_config

#include <fsl_ftfx_cache.h> FTFx cache driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint8_t flashMemoryIndex

0 - primary flash; 1 - secondary flash

function_bit_operation_ptr_t bitOperFuncAddr

An buffer point to the flash execute-in-RAM function.

2.21 ftfx controller

FTFx driver status codes.

Values:

enumerator kStatus_FTFx_Success

API is executed successfully

enumerator kStatus_FTFx_InvalidArgument

Invalid argument

enumerator kStatus_FTFx_SizeError

Error size

enumerator kStatus_FTFx_AlignmentError

Parameter is not aligned with the specified baseline

enumerator kStatus_FTFx_AddressError

Address is out of range

enumerator kStatus_FTFx_AccessError

Invalid instruction codes and out-of bound addresses

enumerator kStatus_FTFx_ProtectionViolation

The program/erase operation is requested to execute on protected areas

enumerator kStatus_FTFx_CommandFailure

Run-time error during command execution.

enumerator kStatus_FTFx_UnknownProperty

Unknown property.

enumerator kStatus_FTFx_EraseKeyError

API erase key is invalid.

enumerator kStatus_FTFx_RegionExecuteOnly

The current region is execute-only.

enumerator kStatus_FTFx_ExecuteInRamFunctionNotReady

Execute-in-RAM function is not available.

enumerator kStatus_FTFx_PartitionStatusUpdateFailure

Failed to update partition status.

enumerator kStatus_FTFx_SetFlexramAsEepromError

Failed to set FlexRAM as EEPROM.

enumerator kStatus_FTFx_RecoverFlexramAsRamError

Failed to recover FlexRAM as RAM.

enumerator kStatus_FTFx_SetFlexramAsRamError
Failed to set FlexRAM as RAM.

enumerator kStatus_FTFx_RecoverFlexramAsEepromError
Failed to recover FlexRAM as EEPROM.

enumerator kStatus_FTFx_CommandNotSupported
Flash API is not supported.

enumerator kStatus_FTFx_SwapSystemNotInUninitialized
Swap system is not in an uninitialized state.

enumerator kStatus_FTFx_SwapIndicatorAddressError
The swap indicator address is invalid.

enumerator kStatus_FTFx_ReadOnlyProperty
The flash property is read-only.

enumerator kStatus_FTFx_InvalidPropertyValue
The flash property value is out of range.

enumerator kStatus_FTFx_InvalidSpeculationOption
The option of flash prefetch speculation is invalid.

enumerator kStatus_FTFx_CommandOperationInProgress
The option of flash command is processing.

enum _ftfx_driver_api_keys

Enumeration for FTFx driver API keys.

Note: The resulting value is built with a byte order such that the string being readable in expected order when viewed in a hex editor, if the value is treated as a 32-bit little endian value.

Values:

enumerator kFTFx_ApiEraseKey
Key value used to validate all FTFx erase APIs.

void FTFx_API_Init(*ftfx_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

status_t FTFx_API_UpdateFlexnvmPartitionStatus(*ftfx_config_t* *config)

Updates FlexNVM memory partition status according to data flash 0 IFR.

This function updates FlexNVM memory partition status.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FTFx_CMD_Erase(*ftfx_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FTFx_CMD_EraseSectorNonBlocking(*ftfx_config_t* *config, uint32_t start, uint32_t key)

Erases the flash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

`status_t FTFx_CMD_EraseAll(ftfx_config_t *config, uint32_t key)`

Erases entire flash.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllUnsecure(ftfx_config_t *config, uint32_t key)`

Erases the entire flash, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FTFx_CMD_EraseAllExecuteOnlySegments(ftfx_config_t *config, uint32_t key)`

Erases all program flash execute-only segments defined by the FXACC registers.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_Program(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramOnce(ftfx_config_t *config, uint32_t index, const uint8_t *src, uint32_t lengthInBytes)`

Programs Program Once Field through parameters.

This function programs the Program Once Field with the desired data for a given flash area as determined by the index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating which area of the Program Once Field to be programmed.
- `src` – A pointer to the source buffer of data that is to be programmed into the Program Once Field.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ProgramSection(ftfx_config_t *config, uint32_t start, const uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.

- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t FTFx_CMD_ProgramPartition(ftfx_config_t *config, ftfx_partition_flexram_load_opt_t option, uint32_t eepromDataSizeCode, uint32_t flexnvmPartitionCode, uint8_t CSEcKeySize, uint8_t CFE)`

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FTFx_CMD_ReadOnce(ftfx_config_t *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)`

Reads the Program Once Field through parameters.

This function reads the read once field with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_ReadResource(ftfx_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyErase(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAll(ftfx_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyEraseAllExecuteOnlySegments(ftfx_config_t *config,
ftfx_margin_value_t margin)`

Verifies whether the program flash execute-only segments have been erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FTFx_CMD_VerifyProgram(ftfx_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

status_t FTFx_REG_GetSecurityState(*ftfx_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- config – A pointer to storage for the driver runtime state.
- state – A pointer to the value returned for the current security status code:

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.

status_t FTFx_CMD_SecurityBypass(*ftfx_config_t* *config, const uint8_t *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- config – A pointer to the storage for the driver runtime state.
- backdoorKey – A pointer to the user buffer containing the backdoor key.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FTFx_CMD_SetFlexramFunction(*ftfx_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- config – A pointer to the storage for the driver runtime state.
- option – The option used to set the work mode of FlexRAM.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

```
status_t FTFx_CMD_SwapControl(ftfx_config_t *config, uint32_t address,
                             ftfx_swap_control_opt_t option, ftfx_swap_state_config_t
                             *returnInfo)
```

Configures the Swap function or checks the swap state of the Flash module.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `address` – Address used to configure the flash Swap function.
- `option` – The possible option used to configure Flash Swap function or check the flash Swap status
- `returnInfo` – A pointer to the data which is used to return the information of flash Swap.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

```
enum _ftfx_partition_flexram_load_option
```

Enumeration for the FlexRAM load during reset option.

Values:

```
enumerator kFTFx_PartitionFlexramLoadOptLoadedWithValidEepromData
    FlexRAM is loaded with valid EEPROM data during reset sequence.
```

```
enumerator kFTFx_PartitionFlexramLoadOptNotLoaded
    FlexRAM is not loaded during reset sequence.
```

```
enum _ftfx_read_resource_opt
```

Enumeration for the two possible options of flash read resource command.

Values:

```
enumerator kFTFx_ResourceOptionFlashIfR
    Select code for Program flash 0 IFR, Program flash swap 0 IFR, Data flash 0 IFR
```

```
enumerator kFTFx_ResourceOptionVersionId
    Select code for the version ID
```

enum _ftfx_margin_value

Enumeration for supported FTFx margin levels.

Values:

enumerator kFTFx_MarginValueNormal

Use the 'normal' read level for 1s.

enumerator kFTFx_MarginValueUser

Apply the 'User' margin to the normal read-1 level.

enumerator kFTFx_MarginValueFactory

Apply the 'Factory' margin to the normal read-1 level.

enumerator kFTFx_MarginValueInvalid

Not real margin level, Used to determine the range of valid margin level.

enum _ftfx_security_state

Enumeration for the three possible FTFx security states.

Values:

enumerator kFTFx_SecurityStateNotSecure

Flash is not secure.

enumerator kFTFx_SecurityStateBackdoorEnabled

Flash backdoor is enabled.

enumerator kFTFx_SecurityStateBackdoorDisabled

Flash backdoor is disabled.

enum _ftfx_flexram_function_option

Enumeration for the two possilbe options of set FlexRAM function command.

Values:

enumerator kFTFx_FlexramFuncOptAvailableAsRam

An option used to make FlexRAM available as RAM

enumerator kFTFx_FlexramFuncOptEepromQuickWriteRecovery

An option used to complete interrupted EEPROM quick write process

enumerator kFTFx_FlexramFuncOptEepromQuickWriteStatus

An option used to make EEPROM quick write status query

enumerator kFTFx_FlexramFuncOptAvailableForEepromQuickWrite

An option used to make FlexRAM available for EEPROM in Quick Write mode

enumerator kFTFx_FlexramFuncOptAvailableForEeprom

An option used to make FlexRAM available for EEPROM

enum _flash_acceleration_ram_property

Enumeration for acceleration ram property.

Values:

enumerator kFLASH_AccelerationRamSize

enum _ftfx_swap_control_option

Enumeration for the possible options of Swap control commands.

Values:

enumerator kFTFx_SwapControlOptionIntializeSystem

An option used to initialize the Swap system

enumerator kFTFx_SwapControlOptionSetInUpdateState

An option used to set the Swap in an update state

enumerator kFTFx_SwapControlOptionSetInCompleteState

An option used to set the Swap in a complete state

enumerator kFTFx_SwapControlOptionReportStatus

An option used to report the Swap status

enumerator kFTFx_SwapControlOptionDisableSystem

An option used to disable the Swap status

enum _ftfx_swap_state

Enumeration for the possible flash Swap status.

Values:

enumerator kFTFx_SwapStateUninitialized

Flash Swap system is in an uninitialized state.

enumerator kFTFx_SwapStateReady

Flash Swap system is in a ready state.

enumerator kFTFx_SwapStateUpdate

Flash Swap system is in an update state.

enumerator kFTFx_SwapStateUpdateErased

Flash Swap system is in an updateErased state.

enumerator kFTFx_SwapStateComplete

Flash Swap system is in a complete state.

enumerator kFTFx_SwapStateDisabled

Flash Swap system is in a disabled state.

enum _ftfx_swap_block_status

Enumeration for the possible flash Swap block status.

Values:

enumerator kFTFx_SwapBlockStatusLowerHalfProgramBlocksAtZero

Swap block status is that lower half program block at zero.

enumerator kFTFx_SwapBlockStatusUpperHalfProgramBlocksAtZero

Swap block status is that upper half program block at zero.

enum _ftfx_memory_type

Enumeration for FTFx memory type.

Values:

enumerator kFTFx_MemTypePflash

enumerator kFTFx_MemTypeFlexnvm

typedef enum _ftfx_partition_flexram_load_option ftfx_partition_flexram_load_opt_t

Enumeration for the FlexRAM load during reset option.

typedef enum _ftfx_read_resource_opt ftfx_read_resource_opt_t

Enumeration for the two possible options of flash read resource command.

typedef enum _ftfx_margin_value ftfx_margin_value_t

Enumeration for supported FTFx margin levels.

```
typedef enum _ftfx_security_state ftfx_security_state_t
```

Enumeration for the three possible FTFx security states.

```
typedef enum _ftfx_flexram_function_option ftfx_flexram_func_opt_t
```

Enumeration for the two possible options of set FlexRAM function command.

```
typedef enum _ftfx_swap_control_option ftfx_swap_control_opt_t
```

Enumeration for the possible options of Swap control commands.

```
typedef enum _ftfx_swap_state ftfx_swap_state_t
```

Enumeration for the possible flash Swap status.

```
typedef enum _ftfx_swap_block_status ftfx_swap_block_status_t
```

Enumeration for the possible flash Swap block status.

```
typedef struct _ftfx_swap_state_config ftfx_swap_state_config_t
```

Flash Swap information.

```
typedef struct _ftfx_special_mem ftfx_spec_mem_t
```

ftfx special memory access information.

```
typedef struct _ftfx_mem_descriptor ftfx_mem_desc_t
```

Flash memory descriptor.

```
typedef struct _ftfx_ops_config ftfx_ops_config_t
```

Active FTFx information for the current operation.

```
typedef struct _ftfx_ifr_descriptor ftfx_ifr_desc_t
```

Flash IFR memory descriptor.

```
typedef struct _ftfx_config ftfx_config_t
```

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

```
struct _ftfx_swap_state_config
```

#include <fsl_ftfx_controller.h> Flash Swap information.

Public Members

ftfx_swap_state_t flashSwapState

The current Swap system status.

ftfx_swap_block_status_t currentSwapBlockStatus

The current Swap block status.

ftfx_swap_block_status_t nextSwapBlockStatus

The next Swap block status.

```
struct _ftfx_special_mem
```

#include <fsl_ftfx_controller.h> ftfx special memory access information.

Public Members

uint32_t base

Base address of flash special memory.

uint32_t size

size of flash special memory.

uint32_t count
flash special memory count.

struct _ftfx_mem_descriptor
#include <fsl_ftfx_controller.h> Flash memory descriptor.

Public Members

uint32_t blockBase
A base address of the flash block

uint32_t aliasBlockBase
A base address of the alias flash block

uint32_t totalSize
The size of the flash block.

uint32_t sectorSize
The size in bytes of a sector of flash.

uint32_t blockCount
A number of flash blocks.

struct _ftfx_ops_config
#include <fsl_ftfx_controller.h> Active FTFx information for the current operation.

Public Members

uint32_t convertedAddress
A converted address for the current flash type.

struct _ftfx_ifr_descriptor
#include <fsl_ftfx_controller.h> Flash IFR memory descriptor.

union function_ptr_t
#include <fsl_ftfx_controller.h>

Public Members

uint32_t commadAddr

void (*callFlashCommand)(volatile uint8_t *FTMRx_fstat)

struct _ftfx_config
#include <fsl_ftfx_controller.h> Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

Public Members

uint32_t flexramBlockBase
The base address of the FlexRAM/acceleration RAM

uint32_t flexramTotalSize
The size of the FlexRAM/acceleration RAM

uint16_t eepromTotalSize

The size of EEPROM area which was partitioned from FlexRAM

function_ptr_t runCmdFuncAddr

An buffer point to the flash execute-in-RAM function.

struct ____unnamed5____

Public Members

uint8_t type

Type of flash block.

uint8_t index

Index of flash block.

struct feature

struct addrAligment

struct feature

struct resRange

Public Members

uint8_t versionIdStart

Version ID start address

uint32_t pflashIfrStart

Program Flash 0 IFR start address

uint32_t dflashIfrStart

Data Flash 0 IFR start address

uint32_t pflashSwapIfrStart

Program Flash Swap IFR start address

struct idxInfo

2.22 ftfx feature

FTFX_DRIVER_IS_FLASH_RESIDENT

Flash driver location.

Used for the flash resident application.

FTFX_DRIVER_IS_EXPORTED

Flash Driver Export option.

Used for the MCUXpresso SDK application.

FTFX_FLASH1_HAS_PROT_CONTROL

Indicates whether the secondary flash has its own protection register in flash module.

FTFX_FLASH1_HAS_XACC_CONTROL

Indicates whether the secondary flash has its own Execute-Only access register in flash module.

FTFx_DRIVER_HAS_FLASH1_SUPPORT

Indicates whether the secondary flash is supported in the Flash driver.

FTFx_FLASH_COUNT

FTFx_FLASH1_IS_INDEPENDENT_BLOCK

2.23 Fftfx FLASH Driver

status_t FLASH_Init(*flash_config_t* *config)

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLASH_Erase(*flash_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_EraseSectorNonBlocking(*flash_config_t* *config, uint32_t start, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases one flash sector size based on the start address, and it is executed asynchronously.

NOTE: This function can only erase one flash sector at a time, and the other commands can be executed after the previous command has been completed.

Parameters

- `config` – The pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- `key` – The value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.
- `kStatus_FTFx_EraseKeyError` – The API erase key is invalid.

`status_t` FLASH_EraseAll(*flash_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the all pflash and flexnvm were erased successfully, the swap and eeprom have been reset to unconfigured state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_EraseAllUnsecure(flash_config_t *config, uint32_t key)`

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protected sectors of flash were reset to unprotected status.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLASH_Program(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data were programed successfully into flash based on desired start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ProgramOnce(flash_config_t *config, uint32_t index, uint8_t *src, uint32_t lengthInBytes)`

Program the Program-Once-Field through parameters.

This function Program the Program-once-feild with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `src` – A pointer to the source buffer of data that is used to store data to be write.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; The index indicating the area of program once field was programed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ProgramSection(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into flash based on start address and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t` FLASH_ReadResource(*flash_config_t* *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, *ftfx_read_resource_opt_t* option)

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.

- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_ReadOnce(flash_config_t *config, uint32_t index, uint8_t *dst, uint32_t lengthInBytes)`

Reads the Program Once Field through parameters.

This function reads the read once feild with given index and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `index` – The index indicating the area of program once field to be read.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been successfully read form Program flash0 IFR map and Program Once field based on index and length.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLASH_VerifyErase(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified FLASH region has been erased.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.

- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyEraseAll(*flash_config_t* *config, *ftfx_margin_value_t* margin)

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- config – A pointer to the storage for the driver runtime state.
- margin – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; all program flash and flexnvm were in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_VerifyProgram(*flash_config_t* *config, `uint32_t` start, `uint32_t` lengthInBytes, `const uint8_t` *expectedData, *ftfx_margin_value_t* margin, `uint32_t` *failedAddress, `uint32_t` *failedData)

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- config – A pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be verified. Must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- expectedData – A pointer to the expected data that is to be verified against.
- margin – Read margin choice.
- failedAddress – A pointer to the returned failing address.

- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programed into specified FLASH region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_GetSecurityState(*flash_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flash was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLASH_SecurityBypass(*flash_config_t* *config, `const uint8_t` *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_SetFlexramFunction(*flash_config_t* *config, *ftfx_flexram_func_opt_t* option)

Sets the FlexRAM function command.

Parameters

- config – A pointer to the storage for the driver runtime state.
- option – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLASH_Swap(*flash_config_t* *config, `uint32_t` address, `bool` isSetEnable)

Swaps the lower half flash with the higher half flash.

Parameters

- config – A pointer to the storage for the driver runtime state.
- address – Address used to configure the flash swap function
- isSetEnable – The possible option used to configure the Flash Swap function or check the flash Swap status.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the lower half flash and higher half flash have been swapped.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_SwapIndicatorAddressError` – Swap indicator address is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

- `kStatus_FTFx_SwapSystemNotInUninitialized` – Swap system is not in an uninitialized state.

`status_t FLASH_IsProtected(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, flash_prot_state_t *protection_state)`

Returns the protection state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash protect status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words) to be checked. Must be word-aligned.
- `protection_state` – A pointer to the value returned for the current protection status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the protection state of specified FLASH region was stored to `protection_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

`status_t FLASH_IsExecuteOnly(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, flash_xacc_state_t *access_state)`

Returns the access state of the desired flash area via the pointer passed into the function.

This function retrieves the current flash access status for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be checked. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be checked. Must be word-aligned.
- `access_state` – A pointer to the value returned for the current access status code for the desired flash area.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the executeOnly state of specified FLASH region was stored to `access_state`.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – The parameter is not aligned to the specified baseline.
- `kStatus_FTFx_AddressError` – The address is out of range.

status_t FLASH_PflashSetProtection(*flash_config_t* *config, *pflash_prot_status_t* *protectStatus)
Sets the PFlash Protection to the intended protection status.

Parameters

- config – A pointer to storage for the driver runtime state.
- protectStatus – The expected protect status to set to the PFlash protection register. Each bit is corresponding to protection of 1/32(64) of the total PFlash. The least significant bit is corresponding to the lowest address area of PFlash. The most significant bit is corresponding to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- kStatus_FTFx_Success – API was executed successfully; the specified FLASH region is protected.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_CommandFailure – Run-time error during command execution.

status_t FLASH_PflashGetProtection(*flash_config_t* *config, *pflash_prot_status_t* *protectStatus)
Gets the PFlash protection status.

Parameters

- config – A pointer to the storage for the driver runtime state.
- protectStatus – Protect status returned by the PFlash IP. Each bit is corresponding to the protection of 1/32(64) of the total PFlash. The least significant bit corresponds to the lowest address area of the PFlash. The most significant bit corresponds to the highest address area of PFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- kStatus_FTFx_Success – API was executed successfully; the Protection state was stored to protectStatus;
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.

status_t FLASH_GetProperty(*flash_config_t* *config, *flash_property_tag_t* whichProperty, *uint32_t* *value)

Returns the desired flash property.

Parameters

- config – A pointer to the storage for the driver runtime state.
- whichProperty – The desired property from the list of properties in enum *flash_property_tag_t*
- value – A pointer to the value returned for the desired flash property.

Return values

- kStatus_FTFx_Success – API was executed successfully; the flash property was stored to value.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_UnknownProperty – An unknown property tag.

status_t FLASH_GetCommandState(void)

Get previous command status.

This function is used to obtain the execution status of the previous command.

Return values

- kStatus_FTFx_Success – The previous command is executed successfully.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

FSL_FLASH_DRIVER_VERSION

Flash driver version for SDK.

Version 3.3.0.

FSL_FLASH_DRIVER_VERSION_ROM

Flash driver version for ROM.

Version 3.0.0.

enum _flash_protection_state

Enumeration for the three possible flash protection levels.

Values:

enumerator kFLASH_ProtectionStateUnprotected

Flash region is not protected.

enumerator kFLASH_ProtectionStateProtected

Flash region is protected.

enumerator kFLASH_ProtectionStateMixed

Flash is mixed with protected and unprotected region.

enum _flash_execute_only_access_state

Enumeration for the three possible flash execute access levels.

Values:

enumerator kFLASH_AccessStateUnLimited

Flash region is unlimited.

enumerator kFLASH_AccessStateExecuteOnly

Flash region is execute only.

enumerator kFLASH_AccessStateMixed

Flash is mixed with unlimited and execute only region.

enum _flash_property_tag

Enumeration for various flash properties.

Values:

enumerator kFLASH_PropertyPflash0SectorSize

Pflash sector size property.

enumerator kFLASH_PropertyPflash0TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash0BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash0BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash0BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash0FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash0AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash0AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyPflash1SectorSize
Pflash sector size property.

enumerator kFLASH_PropertyPflash1TotalSize
Pflash total size property.

enumerator kFLASH_PropertyPflash1BlockSize
Pflash block size property.

enumerator kFLASH_PropertyPflash1BlockCount
Pflash block count property.

enumerator kFLASH_PropertyPflash1BlockBaseAddr
Pflash block base address property.

enumerator kFLASH_PropertyPflash1FacSupport
Pflash fac support property.

enumerator kFLASH_PropertyPflash1AccessSegmentSize
Pflash access segment size property.

enumerator kFLASH_PropertyPflash1AccessSegmentCount
Pflash access segment count property.

enumerator kFLASH_PropertyFlexRamBlockBaseAddr
FlexRam block base address property.

enumerator kFLASH_PropertyFlexRamTotalSize
FlexRam total size property.

typedef enum *_flash_protection_state* flash_prot_state_t
Enumeration for the three possible flash protection levels.

typedef union *_pflash_protection_status* pflash_prot_status_t
PFlash protection status.

typedef enum *_flash_execute_only_access_state* flash_xacc_state_t
Enumeration for the three possible flash execute access levels.

typedef enum *_flash_property_tag* flash_property_tag_t
Enumeration for various flash properties.

```
typedef struct _flash_config flash_config_t
```

Flash driver state information.

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

```
kStatus_FLASH_Success
```

```
kFLASH_ApiEraseKey
```

```
union _pflash_protection_status
```

```
#include <fsl_ftfx_flash.h> PFlash protection status.
```

Public Members

```
uint32_t protl
```

```
PROT[31:0] .
```

```
uint32_t proth
```

```
PROT[63:32].
```

```
uint8_t protsl
```

```
PROTS[7:0] .
```

```
uint8_t protsh
```

```
PROTS[15:8] .
```

```
uint8_t reserved[2]
```

```
struct _flash_config
```

```
#include <fsl_ftfx_flash.h> Flash driver state information.
```

An instance of this structure is allocated by the user of the flash driver and passed into each of the driver APIs.

2.24 Ftfx FLEXNVM Driver

```
status_t FLEXNVM_Init(flexnvm_config_t *config)
```

Initializes the global flash properties structure members.

This function checks and initializes the Flash module for the other Flash APIs.

Parameters

- config – Pointer to the storage for the driver runtime state.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_PartitionStatusUpdateFailure – Failed to update the partition status.

status_t FLEXNVM_DflashErase(*flexnvm_config_t* *config, uint32_t start, uint32_t lengthInBytes, uint32_t key)

Erases the Dflash sectors encompassed by parameters passed into function.

This function erases the appropriate number of flash sectors based on the desired start address and length.

Parameters

- config – The pointer to the storage for the driver runtime state.
- start – The start address of the desired flash memory to be erased. The start address does not need to be sector-aligned but must be word-aligned.
- lengthInBytes – The length, given in bytes (not words or long-words) to be erased. Must be word-aligned.
- key – The value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the appropriate number of data flash sectors based on the desired start address and length were erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_AlignmentError – The parameter is not aligned with the specified baseline.
- kStatus_FTFx_AddressError – The address is out of range.
- kStatus_FTFx_EraseKeyError – The API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.
- kStatus_FTFx_ProtectionViolation – The program/erase operation is requested to execute on protected areas.
- kStatus_FTFx_CommandFailure – Run-time error during the command execution.

status_t FLEXNVM_EraseAll(*flexnvm_config_t* *config, uint32_t key)

Erases entire flexnvm.

Parameters

- config – Pointer to the storage for the driver runtime state.
- key – A value used to validate all flash erase APIs.

Return values

- kStatus_FTFx_Success – API was executed successfully; the entire flexnvm has been erased successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_EraseKeyError – API erase key is invalid.
- kStatus_FTFx_ExecuteInRamFunctionNotReady – Execute-in-RAM function is not available.
- kStatus_FTFx_AccessError – Invalid instruction codes and out-of bounds addresses.

- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLEXNVM_EraseAllUnsecure(flexnvm_config_t *config, uint32_t key)`

Erases the entire flexnvm, including protected sectors.

Parameters

- `config` – Pointer to the storage for the driver runtime state.
- `key` – A value used to validate all flash erase APIs.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the flexnvm is not in security state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_EraseKeyError` – API erase key is invalid.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_PartitionStatusUpdateFailure` – Failed to update the partition status.

`status_t FLEXNVM_DflashProgram(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs flash with data at locations passed in through parameters.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and the length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programed into specified date flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.

- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_DflashProgramSection(*flexnvm_config_t* *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)

Programs flash with data at locations passed in through parameters via the Program Section command.

This function programs the flash memory with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified data flash area.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsRamError` – Failed to set flexram as RAM.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.
- `kStatus_FTFx_RecoverFlexramAsEepromError` – Failed to recover FlexRAM as EEPROM.

`status_t` FLEXNVM_ProgramPartition(*flexnvm_config_t* *config, *ftfx_partition_flexram_load_opt_t* option, uint32_t eepromDataSizeCode, uint32_t flexnvmPartitionCode)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eeepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

status_t FLEXNVM_ProgramPartition_CSE(*flexnvm_config_t* *config,
 ftfx_partition_flexram_load_opt_t option, *uint32_t*
 eeepromDataSizeCode, *uint32_t*
 flexnvmPartitionCode, *uint8_t* CSEcKeySize, *uint8_t*
 SFE)

Prepares the FlexNVM block for use as data flash, EEPROM backup, or a combination of both and initializes the FlexRAM. This is the CSE enabled version for IP's like FTFC.

Parameters

- `config` – Pointer to storage for the driver runtime state.
- `option` – The option used to set FlexRAM load behavior during reset.
- `eeepromDataSizeCode` – Determines the amount of FlexRAM used in each of the available EEPROM subsystems.
- `flexnvmPartitionCode` – Specifies how to split the FlexNVM block between data flash memory and EEPROM backup memory supporting EEPROM functions.
- `CSEcKeySize` – CSEc/SHE key size, see RM for details and possible values
- `SFE` – Security Flag Extension (SFE), see RM for details and possible values

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexNVM block for use as data flash, EEPROM backup, or a combination of both have been Prepared.
- `kStatus_FTFx_InvalidArgument` – Invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.

- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t FLEXNVM_ReadResource(flexnvm_config_t *config, uint32_t start, uint8_t *dst, uint32_t lengthInBytes, ftfx_read_resource_opt_t option)`

Reads the resource with data at locations passed in through parameters.

This function reads the flash memory with the desired location for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `dst` – A pointer to the destination buffer of data that is used to store data to be read.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be read. Must be word-aligned.
- `option` – The resource option which indicates which area should be read back.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the data have been read successfully from program flash IFR, data flash IFR space, and the Version ID field
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with the specified baseline.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyErase(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, ftfx_margin_value_t margin)`

Verifies an erasure of the desired flash area at a specified margin level.

This function checks the appropriate number of flash sectors based on the desired start address and length to check whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. The start address does not need to be sector-aligned but must be word-aligned.

- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified data flash region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_VerifyEraseAll(flexnvm_config_t *config, ftfx_margin_value_t margin)`

Verifies erasure of the entire flash at a specified margin level.

This function checks whether the flash is erased to the specified read margin level.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `margin` – Read margin choice.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the entire flexnvm region is in erased state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashVerifyProgram(flexnvm_config_t *config, uint32_t start, uint32_t lengthInBytes, const uint8_t *expectedData, ftfx_margin_value_t margin, uint32_t *failedAddress, uint32_t *failedData)`

Verifies programming of the desired flash area at a specified margin level.

This function verifies the data programmed in the flash memory using the Flash Program Check Command and compares it to the expected data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be verified. Must be word-aligned.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be verified. Must be word-aligned.
- `expectedData` – A pointer to the expected data that is to be verified against.
- `margin` – Read margin choice.
- `failedAddress` – A pointer to the returned failing address.
- `failedData` – A pointer to the returned failing data. Some derivatives do not include failed data as part of the FCCOBx registers. In this case, zeros are returned upon failure.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been programmed successfully into specified data flash region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AlignmentError` – Parameter is not aligned with specified baseline.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t` FLEXNVM_GetSecurityState(*flexnvm_config_t* *config, *ftfx_security_state_t* *state)

Returns the security state via the pointer passed into the function.

This function retrieves the current flash security status, including the security enabling state and the backdoor key enabling state.

Parameters

- `config` – A pointer to storage for the driver runtime state.
- `state` – A pointer to the value returned for the current security status code:

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the security state of flexnvm was stored to state.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

`status_t` FLEXNVM_SecurityBypass(*flexnvm_config_t* *config, const `uint8_t` *backdoorKey)

Allows users to bypass security with a backdoor key.

If the MCU is in secured state, this function unsecures the MCU by comparing the provided backdoor key with ones in the flash configuration field.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `backdoorKey` – A pointer to the user buffer containing the backdoor key.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_SetFlexramFunction(flexnvm_config_t *config, ftfx_flexram_func_opt_t option)`

Sets the FlexRAM function command.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `option` – The option used to set the work mode of FlexRAM.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the FlexRAM has been successfully configured as RAM or EEPROM
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_ExecuteInRamFunctionNotReady` – Execute-in-RAM function is not available.
- `kStatus_FTFx_AccessError` – Invalid instruction codes and out-of bounds addresses.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_CommandFailure` – Run-time error during the command execution.

`status_t FLEXNVM_DflashSetProtection(flexnvm_config_t *config, uint8_t protectStatus)`

Sets the DFlash protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the DFlash protection register. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the specified DFlash region is protected.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_DflashGetProtection(*flexnvm_config_t* *config, `uint8_t` *protectStatus)

Gets the DFlash protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total DFlash. The least significant bit corresponds to the lowest address area of the DFlash. The most significant bit corresponds to the highest address area of the DFlash, and so on. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.

`status_t` FLEXNVM_EepromSetProtection(*flexnvm_config_t* *config, `uint8_t` protectStatus)

Sets the EEPROM protection to the intended protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – The expected protect status to set to the EEPROM protection register. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of EEPROM, and so on. There are two possible cases as shown below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_CommandNotSupported` – Flash API is not supported.
- `kStatus_FTFx_CommandFailure` – Run-time error during command execution.

`status_t` FLEXNVM_EepromGetProtection(*flexnvm_config_t* *config, `uint8_t` *protectStatus)

Gets the EEPROM protection status.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `protectStatus` – DFlash Protect status returned by the PFlash IP. Each bit corresponds to the protection of the 1/8 of the total EEPROM. The least significant bit corresponds to the lowest address area of the EEPROM. The most significant bit corresponds to the highest address area of the EEPROM. There are two possible cases as below: 0: this area is protected. 1: this area is unprotected.

Return values

- `kStatus_FTFx_Success` – API was executed successfully.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.

- kStatus_FTFx_CommandNotSupported – Flash API is not supported.

status_t FLEXNVM_GetProperty(*flexnvm_config_t* *config, *flexnvm_property_tag_t* whichProperty, *uint32_t* *value)

Returns the desired flexnvm property.

Parameters

- config – A pointer to the storage for the driver runtime state.
- whichProperty – The desired property from the list of properties in enum *flexnvm_property_tag_t*
- value – A pointer to the value returned for the desired flexnvm property.

Return values

- kStatus_FTFx_Success – API was executed successfully.
- kStatus_FTFx_InvalidArgument – An invalid argument is provided.
- kStatus_FTFx_UnknownProperty – An unknown property tag.

enum *flexnvm_property_tag*

Enumeration for various flexnvm properties.

Values:

enumerator kFLEXNVM_PropertyDflashSectorSize
Dflash sector size property.

enumerator kFLEXNVM_PropertyDflashTotalSize
Dflash total size property.

enumerator kFLEXNVM_PropertyDflashBlockSize
Dflash block size property.

enumerator kFLEXNVM_PropertyDflashBlockCount
Dflash block count property.

enumerator kFLEXNVM_PropertyDflashBlockBaseAddr
Dflash block base address property.

enumerator kFLEXNVM_PropertyAliasDflashBlockBaseAddr
Dflash block base address Alias property.

enumerator kFLEXNVM_PropertyFlexRamBlockBaseAddr
FlexRam block base address property.

enumerator kFLEXNVM_PropertyFlexRamTotalSize
FlexRam total size property.

enumerator kFLEXNVM_PropertyEepromTotalSize
EEPROM total size property.

typedef enum *flexnvm_property_tag* *flexnvm_property_tag_t*

Enumeration for various flexnvm properties.

typedef struct *flexnvm_config* *flexnvm_config_t*

Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

`status_t FLEXNVM_EepromWrite(flexnvm_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes)`

Programs the EEPROM with data at locations passed in through parameters.

This function programs the emulated EEPROM with the desired data for a given flash area as determined by the start address and length.

Parameters

- `config` – A pointer to the storage for the driver runtime state.
- `start` – The start address of the desired flash memory to be programmed. Must be word-aligned.
- `src` – A pointer to the source buffer of data that is to be programmed into the flash.
- `lengthInBytes` – The length, given in bytes (not words or long-words), to be programmed. Must be word-aligned.

Return values

- `kStatus_FTFx_Success` – API was executed successfully; the desired data have been successfully programmed into specified eeprom region.
- `kStatus_FTFx_InvalidArgument` – An invalid argument is provided.
- `kStatus_FTFx_AddressError` – Address is out of range.
- `kStatus_FTFx_SetFlexramAsEepromError` – Failed to set flexram as eeprom.
- `kStatus_FTFx_ProtectionViolation` – The program/erase operation is requested to execute on protected areas.
- `kStatus_FTFx_RecoverFlexramAsRamError` – Failed to recover the FlexRAM as RAM.

`struct _flexnvm_config`

`#include <fsl_ftfx_flexnvm.h>` Flexnvm driver state information.

An instance of this structure is allocated by the user of the Flexnvm driver and passed into each of the driver APIs.

2.25 ftfx utilities

`ALIGN_DOWN(x, a)`

Alignment(down) utility.

`ALIGN_UP(x, a)`

Alignment(up) utility.

`MAKE_VERSION(major, minor, bugfix)`

Constructs the version number for drivers.

`MAKE_STATUS(group, code)`

Constructs a status code value from a group and a code number.

`FOUR_CHAR_CODE(a, b, c, d)`

Constructs the four character code for the Flash driver API key.

`B1P4(b)`

bytes2word utility.

B1P3(b)

B1P2(b)

B1P1(b)

B2P3(b)

B2P2(b)

B2P1(b)

B3P2(b)

B3P1(b)

BYTE2WORD_1_3(x, y)

BYTE2WORD_2_2(x, y)

BYTE2WORD_3_1(x, y)

BYTE2WORD_1_1_2(x, y, z)

BYTE2WORD_1_2_1(x, y, z)

BYTE2WORD_2_1_1(x, y, z)

BYTE2WORD_1_1_1_1(x, y, z, w)

2.26 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW
User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW
User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR
User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN
User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck
Ignores the attribute check

typedef enum *_gpio_pin_direction* gpio_pin_direction_t
GPIO direction definition.

typedef enum *_gpio_checker_attribute* gpio_checker_attribute_t
GPIO checker attribute.

typedef struct *_gpio_pin_config* gpio_pin_config_t
The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

GPIO_FIT_REG(value)

struct *_gpio_pin_config*
#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

gpio_pin_direction_t pinDirection
GPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

2.27 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)
Initializes the GPIO peripheral.
This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDeinit(GPIO_Type *base)
Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

- mask – GPIO pin number macro

static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)

Reads the current input value of the GPIO port.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

uint32_t GPIO_PortGetInterruptFlags(GPIO_Type *base)

Reads the GPIO port interrupt status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

Return values

The – current GPIO port interrupt status flag, for example, 0x00010001 means the pin 0 and 17 have the interrupt.

void GPIO_PortClearInterruptFlags(GPIO_Type *base, uint32_t mask)

Clears multiple GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

void GPIO_CheckAttributeBytes(GPIO_Type *base, *gpio_checker_attribute_t* attribute)

The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register is organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.28 I2C: Inter-Integrated Circuit Driver

2.29 I2C DMA Driver

void I2C_MasterTransferCreateHandleDMA(I2C_Type *base, *i2c_master_dma_handle_t* *handle, *i2c_master_dma_transfer_callback_t* callback, void *userData, *dma_handle_t* *dmaHandle)

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – I2C peripheral base address
- handle – Pointer to the `i2c_master_dma_handle_t` structure
- callback – Pointer to the user callback function
- userData – A user parameter passed to the callback function
- dmaHandle – DMA handle pointer

```
status_t I2C_MasterTransferDMA(I2C_Type *base, i2c_master_dma_handle_t *handle,  
                              i2c_master_transfer_t *xfer)
```

Performs a master DMA non-blocking transfer on the I2C bus.

Parameters

- base – I2C peripheral base address
- handle – A pointer to the `i2c_master_dma_handle_t` structure
- xfer – A pointer to the transfer structure of the `i2c_master_transfer_t`

Return values

- `kStatus_Success` – Successfully completes the data transmission.
- `kStatus_I2C_Busy` – A previous transmission is still not finished.
- `kStatus_I2C_Timeout` – A transfer error, waits for the signal timeout.
- `kStatus_I2C_ArbitrationLost` – A transfer error, arbitration lost.
- `kStatus_I2C_Nak` – A transfer error, receives NAK during transfer.

```
status_t I2C_MasterTransferGetCountDMA(I2C_Type *base, i2c_master_dma_handle_t *handle,  
                                       size_t *count)
```

Gets a master transfer status during a DMA non-blocking transfer.

Parameters

- base – I2C peripheral base address
- handle – A pointer to the `i2c_master_dma_handle_t` structure
- count – A number of bytes transferred so far by the non-blocking transaction.

```
void I2C_MasterTransferAbortDMA(I2C_Type *base, i2c_master_dma_handle_t *handle)
```

Aborts a master DMA non-blocking transfer early.

Parameters

- base – I2C peripheral base address
- handle – A pointer to the `i2c_master_dma_handle_t` structure.

```
FSL_I2C_DMA_DRIVER_VERSION
```

I2C DMA driver version.

```
typedef struct i2c_master_dma_handle i2c_master_dma_handle_t
```

Retry times for waiting flag.

I2C master DMA handle typedef.

```
typedef void (*i2c_master_dma_transfer_callback_t)(I2C_Type *base, i2c_master_dma_handle_t  
*handle, status_t status, void *userData)
```

I2C master DMA transfer callback typedef.

```
struct i2c_master_dma_handle
```

`#include <fsl_i2c_dma.h>` I2C master DMA transfer structure.

Public Members

i2c_master_transfer_t transfer

I2C master transfer struct.

size_t transferSize

Total bytes to be transferred.

uint8_t state

I2C master transfer status.

dma_handle_t *dmaHandle

The DMA handler used.

i2c_master_dma_transfer_callback_t completionCallback

A callback function called after the DMA transfer finished.

void *userData

A callback parameter passed to the callback function.

2.30 I2C Driver

void I2C_MasterInit(I2C_Type *base, const *i2c_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Initializes the I2C peripheral. Call this API to ungate the I2C clock and configure the I2C with master configuration.

Note: This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can be custom filled or it can be set with default values by using the I2C_MasterGetDefaultConfig(). After calling this API, the master is ready to transfer. This is an example.

```
i2c_master_config_t config = {
    .enableMaster = true,
    .enableStopHold = false,
    .highDrive = false,
    .baudRate_Bps = 100000,
    .glitchFilterWidth = 0
};
I2C_MasterInit(I2C0, &config, 12000000U);
```

Parameters

- base – I2C base pointer
- masterConfig – A pointer to the master configuration structure
- srcClock_Hz – I2C peripheral clock frequency in Hz

void I2C_SlaveInit(I2C_Type *base, const *i2c_slave_config_t* *slaveConfig, uint32_t srcClock_Hz)

Initializes the I2C peripheral. Call this API to ungate the I2C clock and initialize the I2C with the slave configuration.

Note: This API should be called at the beginning of the application. Otherwise, any operation to the I2C module can cause a hard fault because the clock is not enabled. The configuration structure can partly be set with default values by I2C_SlaveGetDefaultConfig() or it can be custom filled by the user. This is an example.

```
i2c_slave_config_t config = {  
    .enableSlave = true,  
    .enableGeneralCall = false,  
    .addressingMode = kI2C_Address7bit,  
    .slaveAddress = 0x1DU,  
    .enableWakeUp = false,  
    .enablehighDrive = false,  
    .enableBaudRateCtl = false,  
    .sclStopHoldTime_ns = 4000  
};  
I2C_SlaveInit(I2C0, &config, 12000000U);
```

Parameters

- base – I2C base pointer
- slaveConfig – A pointer to the slave configuration structure
- srcClock_Hz – I2C peripheral clock frequency in Hz

void I2C_MasterDeinit(I2C_Type *base)

De-initializes the I2C master peripheral. Call this API to gate the I2C clock. The I2C master module can't work unless the I2C_MasterInit is called.

Parameters

- base – I2C base pointer

void I2C_SlaveDeinit(I2C_Type *base)

De-initializes the I2C slave peripheral. Calling this API gates the I2C clock. The I2C slave module can't work unless the I2C_SlaveInit is called to enable the clock.

Parameters

- base – I2C base pointer

uint32_t I2C_GetInstance(I2C_Type *base)

Get instance number for I2C module.

Parameters

- base – I2C peripheral base address.

void I2C_MasterGetDefaultConfig(*i2c_master_config_t* *masterConfig)

Sets the I2C master configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in the I2C_MasterConfigure(). Use the initialized structure unchanged in the I2C_MasterConfigure() or modify the structure before calling the I2C_MasterConfigure(). This is an example.

```
i2c_master_config_t config;  
I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – A pointer to the master configuration structure.

void I2C_SlaveGetDefaultConfig(*i2c_slave_config_t* *slaveConfig)

Sets the I2C slave configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in the I2C_SlaveConfigure(). Modify fields of the structure before calling the I2C_SlaveConfigure(). This is an example.


```
i2c_slave_config_t config;
I2C_SlaveGetDefaultConfig(&config);
```

Parameters

- slaveConfig – A pointer to the slave configuration structure.

```
static inline void I2C_Enable(I2C_Type *base, bool enable)
```

Enables or disables the I2C peripheral operation.

Parameters

- base – I2C base pointer
- enable – Pass true to enable and false to disable the module.

```
uint32_t I2C_MasterGetStatusFlags(I2C_Type *base)
```

Gets the I2C status flags.

Parameters

- base – I2C base pointer

Returns

status flag, use status flag to AND `_i2c_flags` to get the related status.

```
static inline uint32_t I2C_SlaveGetStatusFlags(I2C_Type *base)
```

Gets the I2C status flags.

Parameters

- base – I2C base pointer

Returns

status flag, use status flag to AND `_i2c_flags` to get the related status.

```
static inline void I2C_MasterClearStatusFlags(I2C_Type *base, uint32_t statusMask)
```

Clears the I2C status flag state.

The following status register flags can be cleared `kI2C_ArbitrationLostFlag` and `kI2C_IntPendingFlag`.

Parameters

- base – I2C base pointer
- statusMask – The status flag mask, defined in type `i2c_status_flag_t`. The parameter can be any combination of the following values:
 - `kI2C_StartDetectFlag` (if available)
 - `kI2C_StopDetectFlag` (if available)
 - `kI2C_ArbitrationLostFlag`
 - `kI2C_IntPendingFlag`

```
static inline void I2C_SlaveClearStatusFlags(I2C_Type *base, uint32_t statusMask)
```

Clears the I2C status flag state.

The following status register flags can be cleared `kI2C_ArbitrationLostFlag` and `kI2C_IntPendingFlag`

Parameters

- base – I2C base pointer
- statusMask – The status flag mask, defined in type `i2c_status_flag_t`. The parameter can be any combination of the following values:

- kI2C_StartDetectFlag (if available)
- kI2C_StopDetectFlag (if available)
- kI2C_ArbitrationLostFlag
- kI2C_IntPendingFlagFlag

void I2C__EnableInterrupts(I2C_Type *base, uint32_t mask)

Enables I2C interrupt requests.

Parameters

- base – I2C base pointer
- mask – interrupt source The parameter can be combination of the following source if defined:
 - kI2C_GlobalInterruptEnable
 - kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable
 - kI2C_SdaTimeoutInterruptEnable

void I2C__DisableInterrupts(I2C_Type *base, uint32_t mask)

Disables I2C interrupt requests.

Parameters

- base – I2C base pointer
- mask – interrupt source The parameter can be combination of the following source if defined:
 - kI2C_GlobalInterruptEnable
 - kI2C_StopDetectInterruptEnable/kI2C_StartDetectInterruptEnable
 - kI2C_SdaTimeoutInterruptEnable

static inline void I2C__EnableDMA(I2C_Type *base, bool enable)

Enables/disables the I2C DMA interrupt.

Parameters

- base – I2C base pointer
- enable – true to enable, false to disable

static inline uint32_t I2C__GetDataRegAddr(I2C_Type *base)

Gets the I2C tx/rx data register address. This API is used to provide a transfer address for I2C DMA transfer configuration.

Parameters

- base – I2C base pointer

Returns

data register address

void I2C__MasterSetBaudRate(I2C_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the I2C master transfer baud rate.

Parameters

- base – I2C base pointer
- baudRate_Bps – the baud rate value in bps
- srcClock_Hz – Source clock

status_t I2C_MasterStart(I2C_Type *base, uint8_t address, i2c_direction_t direction)

Sends a START on the I2C bus.

This function is used to initiate a new master mode transfer by sending the START signal. The slave address is sent following the I2C START signal.

Parameters

- base – I2C peripheral base pointer
- address – 7-bit slave device address.
- direction – Master transfer directions(transmit/receive).

Return values

- kStatus_Success – Successfully send the start signal.
- kStatus_I2C_Busy – Current bus is busy.

status_t I2C_MasterStop(I2C_Type *base)

Sends a STOP signal on the I2C bus.

Return values

- kStatus_Success – Successfully send the stop signal.
- kStatus_I2C_Timeout – Send stop signal failed, timeout.

status_t I2C_MasterRepeatedStart(I2C_Type *base, uint8_t address, i2c_direction_t direction)

Sends a REPEATED START on the I2C bus.

Parameters

- base – I2C peripheral base pointer
- address – 7-bit slave device address.
- direction – Master transfer directions(transmit/receive).

Return values

- kStatus_Success – Successfully send the start signal.
- kStatus_I2C_Busy – Current bus is busy but not occupied by current I2C master.

status_t I2C_MasterWriteBlocking(I2C_Type *base, const uint8_t *txBuff, size_t txSize, uint32_t flags)

Performs a polling send transaction on the I2C bus.

Parameters

- base – The I2C peripheral base pointer.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- flags – Transfer control flag to decide whether need to send a stop, use kI2C_TransferDefaultFlag to issue a stop and kI2C_TransferNoStop to not send a stop.

Return values

- kStatus_Success – Successfully complete the data transmission.
- kStatus_I2C_ArbitrationLost – Transfer error, arbitration lost.
- kStatus_I2C_Nak – Transfer error, receive NAK during transfer.

status_t I2C_MasterReadBlocking(I2C_Type *base, uint8_t *rxBuff, size_t rxSize, uint32_t flags)

Performs a polling receive transaction on the I2C bus.

Note: The I2C_MasterReadBlocking function stops the bus before reading the final byte. Without stopping the bus prior for the final read, the bus issues another read, resulting in garbage data being read into the data register.

Parameters

- base – I2C peripheral base pointer.
- rxBuff – The pointer to the data to store the received data.
- rxSize – The length in bytes of the data to be received.
- flags – Transfer control flag to decide whether need to send a stop, use kI2C_TransferDefaultFlag to issue a stop and kI2C_TransferNoStop to not send a stop.

Return values

- kStatus_Success – Successfully complete the data transmission.
- kStatus_I2C_Timeout – Send stop signal failed, timeout.

status_t I2C_SlaveWriteBlocking(I2C_Type *base, const uint8_t *txBuff, size_t txSize)

Performs a polling send transaction on the I2C bus.

Parameters

- base – The I2C peripheral base pointer.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Return values

- kStatus_Success – Successfully complete the data transmission.
- kStatus_I2C_ArbitrationLost – Transfer error, arbitration lost.
- kStatus_I2C_Nak – Transfer error, receive NAK during transfer.

status_t I2C_SlaveReadBlocking(I2C_Type *base, uint8_t *rxBuff, size_t rxSize)

Performs a polling receive transaction on the I2C bus.

Parameters

- base – I2C peripheral base pointer.
- rxBuff – The pointer to the data to store the received data.
- rxSize – The length in bytes of the data to be received.

Return values

- kStatus_Success – Successfully complete data receive.
- kStatus_I2C_Timeout – Wait status flag timeout.

status_t I2C_MasterTransferBlocking(I2C_Type *base, i2c_master_transfer_t *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to arbitration lost or receiving a NAK.

Parameters

- base – I2C peripheral base address.
- xfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Successfully complete the data transmission.
- kStatus_I2C_Busy – Previous transmission still not finished.
- kStatus_I2C_Timeout – Transfer error, wait signal timeout.
- kStatus_I2C_ArbitrationLost – Transfer error, arbitration lost.
- kStatus_I2C_Nak – Transfer error, receive NAK during transfer.

```
void I2C_MasterTransferCreateHandle(I2C_Type *base, i2c_master_handle_t *handle,  
                                   i2c_master_transfer_callback_t callback, void *userData)
```

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – I2C base pointer.
- handle – pointer to i2c_master_handle_t structure to store the transfer state.
- callback – pointer to user callback function.
- userData – user parameter passed to the callback function.

```
status_t I2C_MasterTransferNonBlocking(I2C_Type *base, i2c_master_handle_t *handle,  
                                       i2c_master_transfer_t *xfer)
```

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: Calling the API returns immediately after transfer initiates. The user needs to call I2C_MasterGetTransferCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_I2C_Busy, the transfer is finished.

Parameters

- base – I2C base pointer.
- handle – pointer to i2c_master_handle_t structure which stores the transfer state.
- xfer – pointer to i2c_master_transfer_t structure.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_I2C_Busy – Previous transmission still not finished.
- kStatus_I2C_Timeout – Transfer error, wait signal timeout.

```
status_t I2C_MasterTransferGetCount(I2C_Type *base, i2c_master_handle_t *handle, size_t  
                                   *count)
```

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – I2C base pointer.
- handle – pointer to i2c_master_handle_t structure which stores the transfer state.

- `count` – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

`status_t I2C_MasterTransferAbort(I2C_Type *base, i2c_master_handle_t *handle)`

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_master_handle_t` structure which stores the transfer state

Return values

- `kStatus_I2C_Timeout` – Timeout during polling flag.
- `kStatus_Success` – Successfully abort the transfer.

`void I2C_MasterTransferHandleIRQ(I2C_Type *base, void *i2cHandle)`

Master interrupt handler.

Parameters

- `base` – I2C base pointer.
- `i2cHandle` – pointer to `i2c_master_handle_t` structure.

`void I2C_SlaveTransferCreateHandle(I2C_Type *base, i2c_slave_handle_t *handle, i2c_slave_transfer_callback_t callback, void *userData)`

Initializes the I2C handle which is used in transactional functions.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_slave_handle_t` structure to store the transfer state.
- `callback` – pointer to user callback function.
- `userData` – user parameter passed to the callback function.

`status_t I2C_SlaveTransferNonBlocking(I2C_Type *base, i2c_slave_handle_t *handle, uint32_t eventMask)`

Starts accepting slave transfers.

Call this API after calling the `I2C_SlaveInit()` and `I2C_SlaveTransferCreateHandle()` to start processing transactions driven by an I2C master. The slave monitors the I2C bus and passes events to the callback that was passed into the call to `I2C_SlaveTransferCreateHandle()`. The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the `eventMask` parameter to the OR'd combination of `i2c_slave_transfer_event_t` enumerators for the events you wish to receive. The `kI2C_SlaveTransmitEvent` and `kLPI2C_SlaveReceiveEvent` events are always enabled and do not need to be included in the mask. Alternatively, pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the `kI2C_SlaveAllEvents` constant is provided as a convenient way to enable all events.

Parameters

- `base` – The I2C peripheral base address.
- `handle` – Pointer to `i2c_slave_handle_t` structure which stores the transfer state.
- `eventMask` – Bit mask formed by OR'ing together `i2c_slave_transfer_event_t` enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and `kI2C_SlaveAllEvents` to enable all events.

Return values

- `kStatus_Success` – Slave transfers were successfully started.
- `kStatus_I2C_Busy` – Slave transfers have already been started on this handle.

`void I2C_SlaveTransferAbort(I2C_Type *base, i2c_slave_handle_t *handle)`
Aborts the slave transfer.

Note: This API can be called at any time to stop slave for handling the bus events.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_slave_handle_t` structure which stores the transfer state.

`status_t I2C_SlaveTransferGetCount(I2C_Type *base, i2c_slave_handle_t *handle, size_t *count)`
Gets the slave transfer remaining bytes during a interrupt non-blocking transfer.

Parameters

- `base` – I2C base pointer.
- `handle` – pointer to `i2c_slave_handle_t` structure.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

`void I2C_SlaveTransferHandleIRQ(I2C_Type *base, void *i2cHandle)`
Slave interrupt handler.

Parameters

- `base` – I2C base pointer.
- `i2cHandle` – pointer to `i2c_slave_handle_t` structure which stores the transfer state

`FSL_I2C_DRIVER_VERSION`
I2C driver version.

I2C status return codes.

Values:

enumerator `kStatus_I2C_Busy`
I2C is busy with current transfer.

enumerator kStatus_I2C_Idle

Bus is Idle.

enumerator kStatus_I2C_Nak

NAK received during transfer.

enumerator kStatus_I2C_ArbitrationLost

Arbitration lost during transfer.

enumerator kStatus_I2C_Timeout

Timeout polling status flags.

enumerator kStatus_I2C_Addr_Nak

NAK received during the address probe.

enum _i2c_flags

I2C peripheral flags.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kI2C_ReceiveNakFlag

I2C receive NAK flag.

enumerator kI2C_IntPendingFlag

I2C interrupt pending flag. This flag can be cleared.

enumerator kI2C_TransferDirectionFlag

I2C transfer direction flag.

enumerator kI2C_RangeAddressMatchFlag

I2C range address match flag.

enumerator kI2C_ArbitrationLostFlag

I2C arbitration lost flag. This flag can be cleared.

enumerator kI2C_BusBusyFlag

I2C bus busy flag.

enumerator kI2C_AddressMatchFlag

I2C address match flag.

enumerator kI2C_TransferCompleteFlag

I2C transfer complete flag.

enumerator kI2C_StopDetectFlag

I2C stop detect flag. This flag can be cleared.

enumerator kI2C_StartDetectFlag

I2C start detect flag. This flag can be cleared.

enum _i2c_interrupt_enable

I2C feature interrupt source.

Values:

enumerator kI2C_GlobalInterruptEnable

I2C global interrupt.

enumerator kI2C_StopDetectInterruptEnable

I2C stop detect interrupt.

enumerator kI2C_StartStopDetectInterruptEnable
I2C start&stop detect interrupt.

enum _i2c_direction
The direction of master and slave transfers.

Values:

enumerator kI2C_Write
Master transmits to the slave.

enumerator kI2C_Read
Master receives from the slave.

enum _i2c_slave_address_mode
Addressing mode.

Values:

enumerator kI2C_Address7bit
7-bit addressing mode.

enumerator kI2C_RangeMatch
Range address match addressing mode.

enum _i2c_master_transfer_flags
I2C transfer control flag.

Values:

enumerator kI2C_TransferDefaultFlag
A transfer starts with a start signal, stops with a stop signal.

enumerator kI2C_TransferNoStartFlag
A transfer starts without a start signal, only support write only or write+read with no start flag, do not support read only with no start flag.

enumerator kI2C_TransferRepeatedStartFlag
A transfer starts with a repeated start signal.

enumerator kI2C_TransferNoStopFlag
A transfer ends without a stop signal.

enum _i2c_slave_transfer_event
Set of events sent to the callback for nonblocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I2C_SlaveTransferNonBlocking() to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kI2C_SlaveAddressMatchEvent
Received the slave address after a start or repeated start.

enumerator kI2C_SlaveTransmitEvent
A callback is requested to provide data to transmit (slave-transmitter role).

enumerator `kI2C_SlaveReceiveEvent`

A callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator `kI2C_SlaveTransmitAckEvent`

A callback needs to either transmit an ACK or NACK.

enumerator `kI2C_SlaveStartEvent`

A start/repeated start was detected.

enumerator `kI2C_SlaveCompletionEvent`

A stop was detected or finished transfer, completing the transfer.

enumerator `kI2C_SlaveGeneralCallEvent`

Received the general call address after a start or repeated start.

enumerator `kI2C_SlaveAllEvents`

A bit mask of all available events.

Common sets of flags used by the driver.

Values:

enumerator `kClearFlags`

All flags which are cleared by the driver upon starting a transfer.

enumerator `kIrqFlags`

typedef enum `_i2c_direction` `i2c_direction_t`

The direction of master and slave transfers.

typedef enum `_i2c_slave_address_mode` `i2c_slave_address_mode_t`

Addressing mode.

typedef enum `_i2c_slave_transfer_event` `i2c_slave_transfer_event_t`

Set of events sent to the callback for nonblocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `I2C_SlaveTransferNonBlocking()` to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct `_i2c_master_config` `i2c_master_config_t`

I2C master user configuration.

typedef struct `_i2c_slave_config` `i2c_slave_config_t`

I2C slave user configuration.

typedef struct `_i2c_master_handle` `i2c_master_handle_t`

I2C master handle typedef.

typedef void (*`i2c_master_transfer_callback_t`)(`I2C_Type` *base, `i2c_master_handle_t` *handle, `status_t` status, void *userData)

I2C master transfer callback typedef.

typedef struct `_i2c_slave_handle` `i2c_slave_handle_t`

I2C slave handle typedef.

```
typedef struct _i2c_master_transfer i2c_master_transfer_t
    I2C master transfer structure.
```

```
typedef struct _i2c_slave_transfer i2c_slave_transfer_t
    I2C slave transfer structure.
```

```
typedef void (*i2c_slave_transfer_callback_t)(I2C_Type *base, i2c_slave_transfer_t *xfer, void
*userData)
    I2C slave transfer callback typedef.
```

```
I2C_RETRY_TIMES
    Retry times for waiting flag.
```

```
I2C_MASTER_FACK_CONTROL
    Mater Fast ack control, control if master needs to manually write ack, this is used to low
the speed of transfer for SoCs with feature FSL_FEATURE_I2C_HAS_DOUBLE_BUFFERING.
```

```
I2C_HAS_STOP_DETECT
```

```
struct _i2c_master_config
    #include <fsl_i2c.h> I2C master user configuration.
```

Public Members

```
bool enableMaster
    Enables the I2C peripheral at initialization time.
```

```
bool enableStopHold
    Controls the stop hold enable.
```

```
bool enableDoubleBuffering
    Controls double buffer enable; notice that enabling the double buffer disables the clock
stretch.
```

```
uint32_t baudRate_Bps
    Baud rate configuration of I2C peripheral.
```

```
uint8_t glitchFilterWidth
    Controls the width of the glitch.
```

```
struct _i2c_slave_config
    #include <fsl_i2c.h> I2C slave user configuration.
```

Public Members

```
bool enableSlave
    Enables the I2C peripheral at initialization time.
```

```
bool enableGeneralCall
    Enables the general call addressing mode.
```

```
bool enableWakeUp
    Enables/disables waking up MCU from low-power mode.
```

```
bool enableDoubleBuffering
    Controls a double buffer enable; notice that enabling the double buffer disables the
clock stretch.
```

```
bool enableBaudRateCtl
    Enables/disables independent slave baud rate on SCL in very fast I2C modes.
```

uint16_t slaveAddress

A slave address configuration.

uint16_t upperAddress

A maximum boundary slave address used in a range matching mode.

i2c_slave_address_mode_t addressingMode

An addressing mode configuration of *i2c_slave_address_mode_config_t*.

uint32_t sclStopHoldTime_ns

the delay from the rising edge of SCL (I2C clock) to the rising edge of SDA (I2C data) while SCL is high (stop condition), SDA hold time and SCL start hold time are also configured according to the SCL stop hold time.

struct *_i2c_master_transfer*

#include <fsl_i2c.h> I2C master transfer structure.

Public Members

uint32_t flags

A transfer flag which controls the transfer.

uint8_t slaveAddress

7-bit slave address.

i2c_direction_t direction

A transfer direction, read or write.

uint32_t subaddress

A sub address. Transferred MSB first.

uint8_t subaddressSize

A size of the command buffer.

uint8_t *volatile data

A transfer buffer.

volatile size_t dataSize

A transfer size.

struct *_i2c_master_handle*

#include <fsl_i2c.h> I2C master handle structure.

Public Members

i2c_master_transfer_t transfer

I2C master transfer copy.

size_t transferSize

Total bytes to be transferred.

uint8_t state

A transfer state maintained during transfer.

i2c_master_transfer_callback_t completionCallback

A callback function called when the transfer is finished.

void *userData

A callback parameter passed to the callback function.

struct *_i2c_slave_transfer*

#include <fsl_i2c.h> I2C slave transfer structure.

Public Members

i2c_slave_transfer_event_t event

A reason that the callback is invoked.

uint8_t *volatile data

A transfer buffer.

volatile size_t dataSize

A transfer size.

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kI2C_SlaveCompletionEvent.

size_t transferredCount

A number of bytes actually transferred since the start or since the last repeated start.

struct _i2c_slave_handle

#include <fsl_i2c.h> I2C slave handle structure.

Public Members

volatile bool isBusy

Indicates whether a transfer is busy.

i2c_slave_transfer_t transfer

I2C slave transfer copy.

uint32_t eventMask

A mask of enabled events.

i2c_slave_transfer_callback_t callback

A callback function called at the transfer event.

void *userData

A callback parameter passed to the callback.

2.31 Common Driver

FSL_COMMON_DRIVER_VERSION

common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE

No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART

Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART

Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI

Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC

Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM

Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART

Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART

Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_UART

Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(*a*, *b*)

Computes the minimum of *a* and *b*.

MAX(*a*, *b*)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

MCUX_MASK_INVERT_8(*mask*)

8-bit mask inversion.

MCUX_MASK_INVERT_16(*mask*)

16-bit mask inversion.

MCUX_MASK_INVERT_32(*mask*)

32-bit mask inversion for completeness.

MCUX_REG_WRITE8(*reg*, *value*)

8-bit register write macro

MCUX_REG_WRITE16(*reg*, *value*)

16-bit register write macro

MCUX_REG_WRITE32(*reg*, *value*)

32-bit register write macro

MCUX_REG_READ8(*reg*)

8-bit register read macro

MCUX_REG_READ16(*reg*)

16-bit register read macro

MCUX_REG_READ32(*reg*)

32-bit register read macro

MCUX_REG_BIT_SET8(*reg*, *mask*)

8-bit register bit set macro

MCUX_REG_BIT_SET16(*reg*, *mask*)

16-bit register bit set macro

MCUX_REG_BIT_SET32(reg, mask)

32-bit register bit set macro

MCUX_REG_BIT_CLEAR8(reg, mask)

8-bit register bit clear macro

MCUX_REG_BIT_CLEAR16(reg, mask)

16-bit register bit clear macro

MCUX_REG_BIT_CLEAR32(reg, mask)

32-bit register bit clear macro

MCUX_REG_BIT_GET8(reg, mask)

8-bit register bit get macro

MCUX_REG_BIT_GET16(reg, mask)

16-bit register bit get macro

MCUX_REG_BIT_GET32(reg, mask)

32-bit register bit get macro

MCUX_REG_MODIFY8(reg, mask, value)

32-bit register read-modify-write macro

MCUX_REG_MODIFY16(reg, mask, value)

16-bit register read-modify-write macro

MCUX_REG_MODIFY32(reg, mask, value)

32-bit register read-modify-write macro

SDK_ATOMIC_LOCAL_ADD(addr, val)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_ALIGN(var, alignbytes)

Macro to define a variable with alignbytes alignment

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value (rounded up)

SDK_SIZEALIGN_UP(var, alignbytes)

Macro to change a value to a given size aligned value (rounded up), the wrapper of SDK_SIZEALIGN

SDK_SIZEALIGN_DOWN(var, alignbytes)

Macro to change a value to a given size aligned value (rounded down)

SDK_IS_ALIGNED(var, alignbytes)

Macro to check if a value is aligned to a given size

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_CACHE_LINE_SECTION(var)

Define a variable *var*, which is cache line size aligned and be placed in CacheLineData section.

AT_CACHE_LINE_SECTION_INIT(var)

Define a variable *var* with initial value, which is cache line size aligned and be placed in CacheLineData.init section.

AT_QUICKACCESS_SECTION_CODE(func)

Place function in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA(var)

Place data in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA_ALIGN(var, alignbytes)

Place data in a section which can be accessed quickly by core, and the variable address is set to align with *alignbytes*.

MCUX_RAMFUNC

Function attribute to place function in RAM. For example, to place function `my_func` in ram, use like:

```
MCUX_RAMFUNC my_func
```

RAMFUNCTION_SECTION_CODE(func)

Place function in ram.

enum __status_groups

Status group numbers.

Values:

enumerator `kStatusGroup_Generic`

Group number for generic status codes.

enumerator `kStatusGroup_FLASH`

Group number for FLASH status codes.

enumerator `kStatusGroup_LPSPI`

Group number for LPSPI status codes.

enumerator `kStatusGroup_FLEXIO_SPI`

Group number for FLEXIO SPI status codes.

enumerator `kStatusGroup_DSPI`

Group number for DSPI status codes.

enumerator `kStatusGroup_FLEXIO_UART`

Group number for FLEXIO UART status codes.

enumerator `kStatusGroup_FLEXIO_I2C`

Group number for FLEXIO I2C status codes.

enumerator `kStatusGroup_LPI2C`

Group number for LPI2C status codes.

enumerator `kStatusGroup_UART`

Group number for UART status codes.

enumerator `kStatusGroup_I2C`

Group number for UART status codes.

enumerator `kStatusGroup_LPSCI`

Group number for LPSCI status codes.

enumerator `kStatusGroup_LPUART`

Group number for LPUART status codes.

enumerator `kStatusGroup_SPI`

Group number for SPI status code.

enumerator `kStatusGroup_XRDC`

Group number for XRDC status code.

enumerator `kStatusGroup_SEMA42`

Group number for SEMA42 status code.

enumerator `kStatusGroup_SDHC`

Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator `kStatusGroup_OSA`
Group number for OSA status codes.

enumerator `kStatusGroup_COMMON_TASK`
Group number for Common task status codes.

enumerator `kStatusGroup_MSG`
Group number for messaging status codes.

enumerator `kStatusGroup_SDK_OCOTP`
Group number for OCOTP status codes.

enumerator `kStatusGroup_SDK_FLEXSPINOR`
Group number for FLEXSPINOR status codes.

enumerator `kStatusGroup_CODEEC`
Group number for codec status codes.

enumerator `kStatusGroup_ASRC`
Group number for codec status ASRC.

enumerator `kStatusGroup_OTFAD`
Group number for codec status codes.

enumerator `kStatusGroup_SDIOSLV`
Group number for SDIOSLV status codes.

enumerator `kStatusGroup_MECC`
Group number for MECC status codes.

enumerator `kStatusGroup_ENET_QOS`
Group number for ENET_QOS status codes.

enumerator `kStatusGroup_LOG`
Group number for LOG status codes.

enumerator `kStatusGroup_I3CBUS`
Group number for I3CBUS status codes.

enumerator `kStatusGroup_QSCI`
Group number for QSCI status codes.

enumerator `kStatusGroup_ELEMU`
Group number for ELEMU status codes.

enumerator `kStatusGroup_QUEUEDSPI`
Group number for QSPI status codes.

enumerator `kStatusGroup_POWER_MANAGER`
Group number for POWER_MANAGER status codes.

enumerator `kStatusGroup_IPED`
Group number for IPED status codes.

enumerator `kStatusGroup_ELS_PKC`
Group number for ELS PKC status codes.

enumerator `kStatusGroup_CSS_PKC`
Group number for CSS PKC status codes.

enumerator `kStatusGroup_HOSTIF`
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

enumerator kStatusGroup_LPC_QSPI
Group number for LPC QSPI status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout

Generic status for timeout.

enumerator kStatus_NoTransferInProgress

Generic status for no transfer in progress.

enumerator kStatus_Busy

Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline status_t EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt enabled successfully
- kStatus_Fail – Failed to enable the interrupt

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

static inline bool _SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t _SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused		Major Version		Minor Version		Bug Fix	
31	25 24	17 16	9 8	0			

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_HAS_DWT_CYCCNT

The chip supports DWT CYCCNT or not.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.32 LLWU: Low-Leakage Wakeup Unit Driver

```
static inline void LLWU_GetVersionId(LLWU_Type *base, llwu_version_id_t *versionId)
```

Gets the LLWU version ID.

This function gets the LLWU version ID, including the major version number, the minor version number, and the feature specification number.

Parameters

- base – LLWU peripheral base address.
- versionId – A pointer to the version ID structure.

```
static inline void LLWU_GetParam(LLWU_Type *base, llwu_param_t *param)
```

Gets the LLWU parameter.

This function gets the LLWU parameter, including a wakeup pin number, a module number, a DMA number, and a pin filter number.

Parameters

- base – LLWU peripheral base address.
- param – A pointer to the LLWU parameter structure.

```
void LLWU_SetExternalWakeupPinMode(LLWU_Type *base, uint32_t pinIndex,  
llwu_external_pin_mode_t pinMode)
```

Sets the external input pin source mode.

This function sets the external input pin source mode that is used as a wake up source.

Parameters

- base – LLWU peripheral base address.
- pinIndex – A pin index to be enabled as an external wakeup source starting from 1.

- `pinMode` – A pin configuration mode defined in the `llwu_external_pin_modes_t`.

`bool LLWU_GetExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)`

Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

Parameters

- `base` – LLWU peripheral base address.
- `pinIndex` – A pin index, which starts from 1.

Returns

True if the specific pin is a wakeup source.

`void LLWU_ClearExternalWakeupPinFlag(LLWU_Type *base, uint32_t pinIndex)`

Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

Parameters

- `base` – LLWU peripheral base address.
- `pinIndex` – A pin index, which starts from 1.

`static inline void LLWU_EnableInternalModuleInterruptWakup(LLWU_Type *base, uint32_t moduleIndex, bool enable)`

Enables/disables the internal module source.

This function enables/disables the internal module source mode that is used as a wake up source.

Parameters

- `base` – LLWU peripheral base address.
- `moduleIndex` – A module index to be enabled as an internal wakeup source starting from 1.
- `enable` – An enable or a disable setting

`static inline void LLWU_EnableInternalModuleDmaRequestWakup(LLWU_Type *base, uint32_t moduleIndex, bool enable)`

Enables/disables the internal module DMA wakeup source.

This function enables/disables the internal DMA that is used as a wake up source.

Parameters

- `base` – LLWU peripheral base address.
- `moduleIndex` – An internal module index which is used as a DMA request source, starting from 1.
- `enable` – Enable or disable the DMA request source

`void LLWU_SetPinFilterMode(LLWU_Type *base, uint32_t filterIndex, llwu_external_pin_filter_mode_t filterMode)`

Sets the pin filter configuration.

This function sets the pin filter configuration.

Parameters

- `base` – LLWU peripheral base address.

- filterIndex – A pin filter index used to enable/disable the digital filter, starting from 1.
- filterMode – A filter mode configuration

bool LLWU_GetPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – LLWU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void LLWU_ClearPinFilterFlag(LLWU_Type *base, uint32_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – LLWU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

void LLWU_SetResetPinMode(LLWU_Type *base, bool pinEnable, bool pinFilterEnable)

Sets the reset pin mode.

This function determines how the reset pin is used as a low leakage mode exit source.

Parameters

- base – LLWU peripheral base address.
- pinEnable – Enable reset the pin filter
- pinFilterEnable – Specify whether the pin filter is enabled in Low-Leakage power mode.

FSL_LLWU_DRIVER_VERSION

LLWU driver version.

enum _llwu_external_pin_mode

External input pin control modes.

Values:

enumerator kLLWU_ExternalPinDisable

Pin disabled as a wakeup input.

enumerator kLLWU_ExternalPinRisingEdge

Pin enabled with the rising edge detection.

enumerator kLLWU_ExternalPinFallingEdge

Pin enabled with the falling edge detection.

enumerator kLLWU_ExternalPinAnyEdge

Pin enabled with any change detection.

enum _llwu_pin_filter_mode

Digital filter control modes.

Values:

enumerator `kLLWU_PinFilterDisable`
Filter disabled.

enumerator `kLLWU_PinFilterRisingEdge`
Filter positive edge detection.

enumerator `kLLWU_PinFilterFallingEdge`
Filter negative edge detection.

enumerator `kLLWU_PinFilterAnyEdge`
Filter any edge detection.

typedef enum `_llwu_external_pin_mode` `llwu_external_pin_mode_t`
External input pin control modes.

typedef enum `_llwu_pin_filter_mode` `llwu_pin_filter_mode_t`
Digital filter control modes.

typedef struct `_llwu_version_id` `llwu_version_id_t`
IP version ID definition.

typedef struct `_llwu_param` `llwu_param_t`
IP parameter definition.

typedef struct `_llwu_external_pin_filter_mode` `llwu_external_pin_filter_mode_t`
An external input pin filter control structure.

`LLWU_REG_VAL(x)`

struct `_llwu_version_id`
#include <fsl_llwu.h> IP version ID definition.

Public Members

uint16_t `feature`
A feature specification number.

uint8_t `minor`
The minor version number.

uint8_t `major`
The major version number.

struct `_llwu_param`
#include <fsl_llwu.h> IP parameter definition.

Public Members

uint8_t `filters`
A number of the pin filter.

uint8_t `dmas`
A number of the wakeup DMA.

uint8_t `modules`
A number of the wakeup module.

uint8_t `pins`
A number of the wake up pin.

struct `_llwu_external_pin_filter_mode`
#include <fsl_llwu.h> An external input pin filter control structure.

Public Members

uint32_t pinIndex

A pin number

llwu_pin_filter_mode_t filterMode

Filter mode

2.33 LPTMR: Low-Power Timer

void LPTMR_Init(LPTMR_Type *base, const *lptmr_config_t* *config)

Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

void LPTMR_Deinit(LPTMR_Type *base)

Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration *lptmr_interrupt_enable_t*

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the `fsl_common.h` to convert to ticks.
-

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum _lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

```
enumerator kLPTMR_PinSelectInput_1
```

Pulse counter input 1 is selected

```
enumerator kLPTMR_PinSelectInput_2
```

Pulse counter input 2 is selected

```
enumerator kLPTMR_PinSelectInput_3
```

Pulse counter input 3 is selected

```
enum _lptmr_pin_polarity
```

LPTMR pin polarity used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinPolarityActiveHigh
```

Pulse Counter input source is active-high

```
enumerator kLPTMR_PinPolarityActiveLow
```

Pulse Counter input source is active-low

```
enum _lptmr_timer_mode
```

LPTMR timer mode selection.

Values:

```
enumerator kLPTMR_TimerModeTimeCounter
```

Time Counter mode

```
enumerator kLPTMR_TimerModePulseCounter
```

Pulse Counter mode

enum _lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3

Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4

Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5

Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6

Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7

Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8

Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9

Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10

Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11

Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12

Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13

Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14

Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15

Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum `_lptmr_interrupt_enable`

List of the LPTMR interrupts.

Values:

enumerator `kLPTMR_TimerInterruptEnable`

Timer interrupt enable

enum `_lptmr_status_flags`

List of the LPTMR status flags.

Values:

enumerator `kLPTMR_TimerCompareFlag`

Timer compare flag

typedef enum `_lptmr_pin_select` `lptmr_pin_select_t`

LPTMR pin selection used in pulse counter mode.

typedef enum `_lptmr_pin_polarity` `lptmr_pin_polarity_t`

LPTMR pin polarity used in pulse counter mode.

typedef enum `_lptmr_timer_mode` `lptmr_timer_mode_t`

LPTMR timer mode selection.

typedef enum `_lptmr_prescaler_glitch_value` `lptmr_prescaler_glitch_value_t`

LPTMR prescaler/glitch filter values.

typedef enum `_lptmr_prescaler_clock_select` `lptmr_prescaler_clock_select_t`

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

typedef enum `_lptmr_interrupt_enable` `lptmr_interrupt_enable_t`

List of the LPTMR interrupts.

typedef enum `_lptmr_status_flags` `lptmr_status_flags_t`

List of the LPTMR status flags.

typedef struct `_lptmr_config` `lptmr_config_t`

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void `LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)`

Enable or disable timer DMA request.

Parameters

- `base` – base LPTMR peripheral base address
- `enable` – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

struct `_lptmr_config`

`#include <fsl_lptmr.h>` LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.34 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.35 LPUART DMA Driver

```
void LPUART_TransferCreateHandleDMA(LPUART_Type *base, lpuart_dma_handle_t *handle,  
                                   lpuart_dma_transfer_callback_t callback, void  
                                   *userData, dma_handle_t *txDmaHandle,  
                                   dma_handle_t *rxDmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_dma_handle_t` structure.
- callback – Callback function.
- userData – User data.
- txDmaHandle – User-requested DMA handle for TX DMA transfer.
- rxDmaHandle – User-requested DMA handle for RX DMA transfer.

```
status_t LPUART_TransferSendDMA(LPUART_Type *base, lpuart_dma_handle_t *handle,
                                lpuart_transfer_t *xfer)
```

Sends data using DMA.

This function sends data using DMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART DMA transfer structure. See *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

```
status_t LPUART_TransferReceiveDMA(LPUART_Type *base, lpuart_dma_handle_t *handle,
                                   lpuart_transfer_t *xfer)
```

Receives data using DMA.

This function receives data using DMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_dma_handle_t* structure.
- xfer – LPUART DMA transfer structure. See *lpuart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_RxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferAbortSendDMA(LPUART_Type *base, lpuart_dma_handle_t *handle)
```

Aborts the sent data using DMA.

This function aborts send data using DMA.

Parameters

- base – LPUART peripheral base address
- handle – Pointer to *lpuart_dma_handle_t* structure

```
void LPUART_TransferAbortReceiveDMA(LPUART_Type *base, lpuart_dma_handle_t *handle)
```

Aborts the received data using DMA.

This function aborts the received data using DMA.

Parameters

- base – LPUART peripheral base address
- handle – Pointer to *lpuart_dma_handle_t* structure

status_t LPUART_TransferGetSendCountDMA(LPUART_Type *base, *lpuart_dma_handle_t* *handle, uint32_t *count)

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes that have been written to LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferGetReceiveCountDMA(LPUART_Type *base, *lpuart_dma_handle_t* *handle, uint32_t *count)

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferDMAHandleIRQ(LPUART_Type *base, void *lpuartDmaHandle)

LPUART DMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartDmaHandle – LPUART handle pointer.

FSL_LPUART_DMA_DRIVER_VERSION

LPUART DMA driver version.

typedef struct *lpuart_dma_handle* *lpuart_dma_handle_t*

typedef void (**lpuart_dma_transfer_callback_t*)(LPUART_Type *base, *lpuart_dma_handle_t* *handle, *status_t* status, void *userData)

LPUART transfer callback function.

```
struct _lpuart_dma_handle
    #include <fsl_lpuart_dma.h> LPUART DMA handle.
```

Public Members

lpuart_dma_transfer_callback_t callback

Callback function.

void *userData

LPUART callback function parameter.

size_t rxDataSizeAll

Size of the data to receive.

size_t txDataSizeAll

Size of the data to send out.

dma_handle_t *txDmaHandle

The DMA TX channel used.

dma_handle_t *rxDmaHandle

The DMA RX channel used.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

2.36 LPUART Driver

```
static inline void LPUART_SoftwareReset(LPUART_Type *base)
```

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- base – LPUART peripheral base address.

```
status_t LPUART_Init(LPUART_Type *base, const lpuart_config_t *config, uint32_t srcClock_Hz)
```

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

status_t LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

Return values

- kStatus_Success – Deinit is success.
- kStatus_LPUART_Timeout – Timeout during deinit.

void LPUART_GetDefaultConfig(*lpuart_config_t* *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode = kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits; lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit; lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1; lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;

Parameters

- config – Pointer to a configuration structure.

status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not supported in the current clock source.
- kStatus_Success – Set baudrate succeeded.


```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – LPUART peripheral base address.
- enable – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t  
                                         address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

```
static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool  
                                             match2)
```

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

```
static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART_TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in lpuart_handle_t.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators `_lpuart_flags`. To check for a specific status, compare the return value with enumerators in the `_lpuart_flags`. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are Ored by the enumerators in the `_lpuart_flags`.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)`

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↪ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

`uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)`

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

`static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)`

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

`static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)`

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `STAT[TDRE]`, to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART__GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART__EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART__WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

static inline uint8_t LPUART__ReadByte(LPUART_Type *base)

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

```
static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

```
void LPUART_SendAddress(LPUART_Type *base, uint8_t address)
```

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

```
status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)
```

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

```
status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)
```

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

```
void LPUART_TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle,
                                lpuart_transfer_callback_t callback, void *userData)
```

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the LPUART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- callback – Callback function.
- userData – User data.

```
status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see *lpuart_transfer_t*.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t
                                    *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn’t call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

void LPUART_TransferStopRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, *lpuart_handle_t* *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBtyes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.

- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t` LPUART_TransferReceiveNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer, `size_t` *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to `xfer->data`, which returns with the parameter `receivedBytes` set to 5. For the remaining 5 bytes, the newly arrived data is saved from `xfer->data[5]`. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void` LPUART_TransferAbortReceive(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t` LPUART_TransferGetReceiveCount(LPUART_Type *base, *lpuart_handle_t* *handle, `uint32_t` *count)

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.

- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_DriverIRQHandler(uint32_t instance)

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun
LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError
LPUART noise error.

enumerator kStatus_LPUART_FramingError
LPUART framing error.

enumerator kStatus_LPUART_ParityError
LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected
IDLE flag.

enumerator kStatus_LPUART_Timeout
LPUART times out.

enum _lpuart_parity_mode
LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled
Parity disabled

enumerator kLPUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kLPUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _lpuart_data_bits
LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits
Eight data bit

enumerator kLPUART_SevenDataBits
Seven data bit

enum _lpuart_stop_bit_count
LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit
One stop bit

enumerator kLPUART_TwoStopBit
Two stop bits

enum _lpuart_transmit_cts_source
LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin
CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult

CTS resource is the match result.

enum _lpuart_transmit_cts_config

LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart

CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle

CTS input is sampled when the transmitter is idle

enum _lpuart_transmit_rts_polarity

LPUART transmitter RTS polarity.

Values:

enumerator kLPUART_RtsPolarityLow

Transmitter RTS is active low.

enumerator kLPUART_RtsPolarityHigh

Transmitter RTS is active high.

enum _lpuart_idle_type_select

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit

Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1

the number of idle characters.

enumerator kLPUART_IdleCharacter2

the number of idle characters.

enumerator kLPUART_IdleCharacter4

the number of idle characters.

enumerator kLPUART_IdleCharacter8

the number of idle characters.

enumerator kLPUART_IdleCharacter16

the number of idle characters.

enumerator kLPUART_IdleCharacter32

the number of idle characters.

enumerator kLPUART_IdleCharacter64

the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag
Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t

LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t

LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t

LPUART stop bit count.

```
typedef enum _lpuart_transmit_cts_source lpuart_transmit_cts_source_t
    LPUART transmit CTS source.

typedef enum _lpuart_transmit_cts_config lpuart_transmit_cts_config_t
    LPUART transmit CTS configure.

typedef enum _lpuart_transmit_rts_polarity lpuart_transmit_rts_polarity_t
    LPUART transmitter RTS polarity.

typedef enum _lpuart_idle_type_select lpuart_idle_type_select_t
    LPUART idle flag type defines when the receiver starts counting.

typedef enum _lpuart_idle_config lpuart_idle_config_t
    LPUART idle detected configuration. This structure defines the number of idle characters
    that must be received before the IDLE flag is set.

typedef struct _lpuart_config lpuart_config_t
    LPUART configuration structure.

typedef struct _lpuart_transfer lpuart_transfer_t
    LPUART transfer structure.

typedef struct _lpuart_handle lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, lpuart_handle_t *handle,
status_t status, void *userData)
    LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
    Retry times for waiting flag.

struct _lpuart_config
    #include <fsl_lpuart.h> LPUART configuration structure.
```

Public Members

```
uint32_t baudRate_Bps
    LPUART baud rate

lpuart_parity_mode_t parityMode
    Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
    Data bits count, eight (default), seven

bool isMsb
    Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
    Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
    TX FIFO watermark
```

uint8_t rxFifoWatermark
RX FIFO watermark

bool enableRxRTS
RX RTS enable

bool enableTxRTS
TX RTS enable

bool enableTxCTS
TX CTS enable

lpuart_transmit_cts_source_t txCtsSource
TX CTS source

lpuart_transmit_cts_config_t txCtsConfig
TX CTS configure

lpuart_transmit_rts_polarity_t txRtsPolarity
TX RTS polarity

uint8_t rtsWatermark
RTS watermark

lpuart_idle_type_select_t rxIdleType
RX IDLE type.

lpuart_idle_config_t rxIdleConfig
RX IDLE configuration.

bool enableTx
Enable TX

bool enableRx
Enable RX

bool swapTxdRxd
Swap TXD and RXD pins

bool inverseTxd
Transmit Data Inversion - Setting true reverses the polarity of the transmitted data output

struct *_lpuart_transfer*
#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize
The byte count to be transfer.

struct *_lpuart_handle*
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize
Size of the remaining data to send.

`size_t txDataSizeAll`
Size of the data to send out.

`volatile size_t rxDataSize`
Size of the remaining data to receive.

`size_t rxDataSizeAll`
Size of the data to receive.

`size_t rxRingBufferSize`
Size of the ring buffer.

`volatile uint16_t rxRingBufferHead`
Index for the driver to store received data into ring buffer.

`volatile uint16_t rxRingBufferTail`
Index for the user to get data from the ring buffer.

`lpuart_transfer_callback_t callback`
Callback function.

`void *userData`
LPUART callback function parameter.

`volatile uint8_t txState`
TX transfer state.

`volatile uint8_t rxState`
RX transfer state.

`bool isSevenDataBits`
Seven data bits flag.

`bool is16bitData`
16bit data bits flag, only used for 9bit or 10bit data

`union __unnamed15__`

Public Members

`uint8_t *data`
The buffer of data to be transfer.

`uint8_t *rxData`
The buffer to receive data.

`uint16_t *rxData16`
The buffer to receive data.

`const uint8_t *txData`
The buffer of data to be sent.

`const uint16_t *txData16`
The buffer of data to be sent.

`union __unnamed17__`

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

const uint16_t *volatile txData16
Address of remaining data to send.

union __unnamed19__

Public Members

uint8_t *volatile rxData
Address of remaining data to receive.

uint16_t *volatile rxData16
Address of remaining data to receive.

union __unnamed21__

Public Members

uint8_t *rxRingBuffer
Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16
Start address of the receiver ring buffer.

2.37 MCM: Miscellaneous Control Module

FSL_MCM_DRIVER_VERSION
MCM driver version.

Enum_mcm_interrupt_flag. Interrupt status flag mask. .

Values:

enumerator kMCM_CacheWriteBuffer
Cache Write Buffer Error Enable.

enumerator kMCM_ParityError
Cache Parity Error Enable.

enumerator kMCM_FPUInvalidOperation
FPU Invalid Operation Interrupt Enable.

enumerator kMCM_FPUDivideByZero
FPU Divide-by-zero Interrupt Enable.

enumerator kMCM_FPUOverflow
FPU Overflow Interrupt Enable.

enumerator kMCM_FPUUnderflow
FPU Underflow Interrupt Enable.

enumerator kMCM_FPUInexact
FPU Inexact Interrupt Enable.

enumerator kMCM_FPUInputDenormalInterrupt
FPU Input Denormal Interrupt Enable.

typedef union *_mcm_buffer_fault_attribute* mcm_buffer_fault_attribute_t
The union of buffer fault attribute.

typedef union *_mcm_lmem_fault_attribute* mcm_lmem_fault_attribute_t
The union of LMEM fault attribute.

static inline void MCM_EnableCrossbarRoundRobin(MCM_Type *base, bool enable)
Enables/Disables crossbar round robin.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable crossbar round robin.
 - **true** Enable crossbar round robin.
 - **false** disable crossbar round robin.

static inline void MCM_EnableInterruptStatus(MCM_Type *base, uint32_t mask)
Enables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(*_mcm_interrupt_flag*).

static inline void MCM_DisableInterruptStatus(MCM_Type *base, uint32_t mask)
Disables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(*_mcm_interrupt_flag*).

static inline uint16_t MCM_GetInterruptStatus(MCM_Type *base)
Gets the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline void MCM_ClearCacheWriteBufferErrorStatus(MCM_Type *base)
Clears the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultAddress(MCM_Type *base)
Gets buffer fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetBufferFaultAttribute(MCM_Type *base, *mcm_buffer_fault_attribute_t* *bufferfault)

Gets buffer fault attributes.

Parameters

- base – MCM peripheral base address.
- bufferfault – Structure to store the result.

```
static inline uint32_t MCM_GetBufferFaultData(MCM_Type *base)
```

Gets buffer fault data.

Parameters

- base – MCM peripheral base address.

```
static inline void MCM_LimitCodeCachePeripheralWriteBuffering(MCM_Type *base, bool enable)
```

Limit code cache peripheral write buffering.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable limit code cache peripheral write buffering.
 - **true** Enable limit code cache peripheral write buffering.
 - **false** disable limit code cache peripheral write buffering.

```
static inline void MCM_BypassFixedCodeCacheMap(MCM_Type *base, bool enable)
```

Bypass fixed code cache map.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable bypass fixed code cache map.
 - **true** Enable bypass fixed code cache map.
 - **false** disable bypass fixed code cache map.

```
static inline void MCM_EnableCodeBusCache(MCM_Type *base, bool enable)
```

Enables/Disables code bus cache.

Parameters

- base – MCM peripheral base address.
- enable – Used to disable/enable code bus cache.
 - **true** Enable code bus cache.
 - **false** disable code bus cache.

```
static inline void MCM_ForceCodeCacheToNoAllocation(MCM_Type *base, bool enable)
```

Force code cache to no allocation.

Parameters

- base – MCM peripheral base address.
- enable – Used to force code cache to allocation or no allocation.
 - **true** Force code cache to no allocation.
 - **false** Force code cache to allocation.

```
static inline void MCM_EnableCodeCacheWriteBuffer(MCM_Type *base, bool enable)
```

Enables/Disables code cache write buffer.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable code cache write buffer.
 - **true** Enable code cache write buffer.
 - **false** Disable code cache write buffer.

static inline void MCM_ClearCodeBusCache(MCM_Type *base)

Clear code bus cache.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnablePcParityFaultReport(MCM_Type *base, bool enable)

Enables/Disables PC Parity Fault Report.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity Fault Report.
 - **true** Enable PC Parity Fault Report.
 - **false** disable PC Parity Fault Report.

static inline void MCM_EnablePcParity(MCM_Type *base, bool enable)

Enables/Disables PC Parity.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity.
 - **true** Enable PC Parity.
 - **false** disable PC Parity.

static inline void MCM_LockConfigState(MCM_Type *base)

Lock the configuration state.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnableCacheParityReporting(MCM_Type *base, bool enable)

Enables/Disables cache parity reporting.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable cache parity reporting.
 - **true** Enable cache parity reporting.
 - **false** disable cache parity reporting.

static inline uint32_t MCM_GetLmemFaultAddress(MCM_Type *base)

Gets LMEM fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetLmemFaultAttribute(MCM_Type *base, *mcm_lmem_fault_attribute_t* *lmemFault)

Get LMEM fault attributes.

Parameters

- base – MCM peripheral base address.
- lmemFault – Structure to store the result.

```
static inline uint64_t MCM_GetLmemFaultData(MCM_Type *base)
```

Gets LMEM fault data.

Parameters

- base – MCM peripheral base address.

```
MCM_LMFATR_TYPE_MASK
```

```
MCM_LMFATR_MODE_MASK
```

```
MCM_LMFATR_BUFF_MASK
```

```
MCM_LMFATR_CACH_MASK
```

```
MCM_ISCR_STAT_MASK
```

```
FSL_COMPONENT_ID
```

```
union _mcm_buffer_fault_attribute
```

#include <fsl_mcm.h> The union of buffer fault attribute.

Public Members

```
uint32_t attribute
```

Indicates the faulting attributes, when a properly-enabled cache write buffer error interrupt event is detected.

```
struct _mcm_buffer_fault_attribute _mcm_buffer_fault_attrib attribute_memory
```

```
struct _mcm_buffer_fault_attrib
```

#include <fsl_mcm.h>

Public Members

```
uint32_t busErrorDataAccessType
```

Indicates the type of cache write buffer access.

```
uint32_t busErrorPrivilegeLevel
```

Indicates the privilege level of the cache write buffer access.

```
uint32_t busErrorSize
```

Indicates the size of the cache write buffer access.

```
uint32_t busErrorAccess
```

Indicates the type of system bus access.

```
uint32_t busErrorMasterID
```

Indicates the crossbar switch bus master number of the captured cache write buffer bus error.

```
uint32_t busErrorOverrun
```

Indicates if another cache write buffer bus error is detected.

```
union _mcm_lmem_fault_attribute
```

#include <fsl_mcm.h> The union of LMEM fault attribute.

Public Members

uint32_t attribute

Indicates the attributes of the LMEM fault detected.

struct __mcm_lmem_fault_attribute __mcm_lmem_fault_attribute attribute__memory

struct __mcm_lmem_fault_attribute

#include <fsl_mcm.h>

Public Members

uint32_t parityFaultProtectionSignal

Indicates the features of parity fault protection signal.

uint32_t parityFaultMasterSize

Indicates the parity fault master size.

uint32_t parityFaultWrite

Indicates the parity fault is caused by read or write.

uint32_t backdoorAccess

Indicates the LMEM access fault is initiated by core access or backdoor access.

uint32_t parityFaultSyndrome

Indicates the parity fault syndrome.

uint32_t overrun

Indicates the number of faultss.

2.38 PIT: Periodic Interrupt Timer

void PIT_Init(PIT_Type *base, const *pit_config_t* *config)

Ungates the PIT clock, enables the PIT module, and configures the peripheral for basic operations.

Note: This API should be called at the beginning of the application using the PIT driver.

Parameters

- base – PIT peripheral base address
- config – Pointer to the user's PIT config structure

void PIT_Deinit(PIT_Type *base)

Gates the PIT clock and disables the PIT module.

Parameters

- base – PIT peripheral base address

static inline void PIT_GetDefaultConfig(*pit_config_t* *config)

Fills in the PIT configuration structure with the default settings.

The default values are as follows.

```
config->enableRunInDebug = false;
```

Parameters

- `config` – Pointer to the configuration structure.

static inline void PIT_SetTimerChainMode(PIT_Type *base, *pit_chnl_t* channel, bool enable)

Enables or disables chaining a timer with the previous timer.

When a timer has a chain mode enabled, it only counts after the previous timer has expired. If the timer `n-1` has counted down to 0, counter `n` decrements the value by one. Each timer is 32-bits, which allows the developers to chain timers together and form a longer timer (64-bits and larger). The first timer (timer 0) can't be chained to any other timer.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number which is chained with the previous timer
- `enable` – Enable or disable chain. `true`: Current timer is chained with the previous timer. `false`: Timer doesn't chain with other timers.

static inline void PIT_EnableInterrupts(PIT_Type *base, *pit_chnl_t* channel, uint32_t mask)

Enables the selected PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `pit_interrupt_enable_t`

static inline void PIT_DisableInterrupts(PIT_Type *base, *pit_chnl_t* channel, uint32_t mask)

Disables the selected PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number
- `mask` – The interrupts to disable. This is a logical OR of members of the enumeration `pit_interrupt_enable_t`

static inline uint32_t PIT_GetEnabledInterrupts(PIT_Type *base, *pit_chnl_t* channel)

Gets the enabled PIT interrupts.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `pit_interrupt_enable_t`

static inline uint32_t PIT_GetStatusFlags(PIT_Type *base, *pit_chnl_t* channel)

Gets the PIT status flags.

Parameters

- `base` – PIT peripheral base address
- `channel` – Timer channel number

Returns

The status flags. This is the logical OR of members of the enumeration `pit_status_flags_t`


```
static inline void PIT_ClearStatusFlags(PIT_Type *base, pit_chnl_t channel, uint32_t mask)
```

Clears the PIT status flags.

Parameters

- base – PIT peripheral base address
- channel – Timer channel number
- mask – The status flags to clear. This is a logical OR of members of the enumeration `pit_status_flags_t`

```
static inline void PIT_SetTimerPeriod(PIT_Type *base, pit_chnl_t channel, uint32_t count)
```

Sets the timer period in units of count.

Timers begin counting from the value set by this function until it reaches 0, then it generates an interrupt and load this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: Users can call the utility macros provided in `fsl_common.h` to convert to ticks.

Parameters

- base – PIT peripheral base address
- channel – Timer channel number
- count – Timer period in units of ticks

```
static inline uint32_t PIT_GetCurrentTimerCount(PIT_Type *base, pit_chnl_t channel)
```

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: Users can call the utility macros provided in `fsl_common.h` to convert ticks to usec or msec.

Parameters

- base – PIT peripheral base address
- channel – Timer channel number

Returns

Current timer counting value in ticks

```
static inline void PIT_StartTimer(PIT_Type *base, pit_chnl_t channel)
```

Starts the timer counting.

After calling this function, timers load period value, count down to 0 and then load the respective start value again. Each time a timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- base – PIT peripheral base address
- channel – Timer channel number.

```
static inline void PIT_StopTimer(PIT_Type *base, pit_chnl_t channel)
```

Stops the timer counting.

This function stops every timer counting. Timers reload their periods respectively after the next time they call the `PIT_DRV_StartTimer`.

Parameters

- base – PIT peripheral base address
- channel – Timer channel number.

FSL_PIT_DRIVER_VERSION

PIT Driver Version 2.2.0.

enum __pit_chnl

List of PIT channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kPIT_Chnl_0

PIT channel number 0

enumerator kPIT_Chnl_1

PIT channel number 1

enumerator kPIT_Chnl_2

PIT channel number 2

enumerator kPIT_Chnl_3

PIT channel number 3

enum __pit_interrupt_enable

List of PIT interrupts.

Values:

enumerator kPIT_TimerInterruptEnable

Timer interrupt enable

enum __pit_status_flags

List of PIT status flags.

Values:

enumerator kPIT_TimerFlag

Timer flag

typedef enum __pit_chnl pit_chnl_t

List of PIT channels.

Note: Actual number of available channels is SoC dependent

typedef enum __pit_interrupt_enable pit_interrupt_enable_t

List of PIT interrupts.

typedef enum __pit_status_flags pit_status_flags_t

List of PIT status flags.

typedef struct __pit_config pit_config_t

PIT configuration structure.

This structure holds the configuration settings for the PIT peripheral. To initialize this structure to reasonable defaults, call the PIT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The configuration structure can be made constant so it resides in flash.

uint64_t PIT_GetLifetimeTimerCount(PIT_Type *base)

Reads the current lifetime counter value.

The lifetime timer is a 64-bit timer which chains timer 0 and timer 1 together. Timer 0 and 1 are chained by calling the PIT_SetTimerChainMode before using this timer. The period of lifetime timer is equal to the “period of timer 0 * period of timer 1”. For the 64-bit value, the higher 32-bit has the value of timer 1, and the lower 32-bit has the value of timer 0.

Parameters

- base – PIT peripheral base address

Returns

Current lifetime timer value

struct __pit_config

#include <fsl_pit.h> PIT configuration structure.

This structure holds the configuration settings for the PIT peripheral. To initialize this structure to reasonable defaults, call the PIT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

2.39 PMC: Power Management Controller

static inline void PMC_GetVersionId(PMC_Type *base, pmc_version_id_t *versionId)

Gets the PMC version ID.

This function gets the PMC version ID, including major version number, minor version number, and a feature specification number.

Parameters

- base – PMC peripheral base address.
- versionId – Pointer to version ID structure.

void PMC_GetParam(PMC_Type *base, pmc_param_t *param)

Gets the PMC parameter.

This function gets the PMC parameter including the VLPO enable and the HVD enable.

Parameters

- base – PMC peripheral base address.
- param – Pointer to PMC param structure.

void PMC_ConfigureLowVoltDetect(PMC_Type *base, const pmc_low_volt_detect_config_t *config)

Configures the low-voltage detect setting.

This function configures the low-voltage detect setting, including the trip point voltage setting, enables or disables the interrupt, enables or disables the system reset.

Parameters

- base – PMC peripheral base address.

- `config` – Low-voltage detect configuration structure.

`static inline bool PMC_GetLowVoltDetectFlag(PMC_Type *base)`

Gets the Low-voltage Detect Flag status.

This function reads the current LVDF status. If it returns 1, a low-voltage event is detected.

Parameters

- `base` – PMC peripheral base address.

Returns

Current low-voltage detect flag

- `true`: Low-voltage detected
- `false`: Low-voltage not detected

`static inline void PMC_ClearLowVoltDetectFlag(PMC_Type *base)`

Acknowledges clearing the Low-voltage Detect flag.

This function acknowledges the low-voltage detection errors (write 1 to clear LVDF).

Parameters

- `base` – PMC peripheral base address.

`void PMC_ConfigureLowVoltWarning(PMC_Type *base, const pmc_low_volt_warning_config_t *config)`

Configures the low-voltage warning setting.

This function configures the low-voltage warning setting, including the trip point voltage setting and enabling or disabling the interrupt.

Parameters

- `base` – PMC peripheral base address.
- `config` – Low-voltage warning configuration structure.

`static inline bool PMC_GetLowVoltWarningFlag(PMC_Type *base)`

Gets the Low-voltage Warning Flag status.

This function polls the current LVWF status. When 1 is returned, it indicates a low-voltage warning event. LVWF is set when V Supply transitions below the trip point or after reset and V Supply is already below the V LVW.

Parameters

- `base` – PMC peripheral base address.

Returns

Current LVWF status

- `true`: Low-voltage Warning Flag is set.
- `false`: the Low-voltage Warning does not happen.

`static inline void PMC_ClearLowVoltWarningFlag(PMC_Type *base)`

Acknowledges the Low-voltage Warning flag.

This function acknowledges the low voltage warning errors (write 1 to clear LVWF).

Parameters

- `base` – PMC peripheral base address.

```
void PMC_ConfigureHighVoltDetect(PMC_Type *base, const pmc_high_volt_detect_config_t
                                *config)
```

Configures the high-voltage detect setting.

This function configures the high-voltage detect setting, including the trip point voltage setting, enabling or disabling the interrupt, enabling or disabling the system reset.

Parameters

- base – PMC peripheral base address.
- config – High-voltage detect configuration structure.

```
static inline bool PMC_GetHighVoltDetectFlag(PMC_Type *base)
```

Gets the High-voltage Detect Flag status.

This function reads the current HVDF status. If it returns 1, a low voltage event is detected.

Parameters

- base – PMC peripheral base address.

Returns

Current high-voltage detect flag

- true: High-voltage detected
- false: High-voltage not detected

```
static inline void PMC_ClearHighVoltDetectFlag(PMC_Type *base)
```

Acknowledges clearing the High-voltage Detect flag.

This function acknowledges the high-voltage detection errors (write 1 to clear HVDF).

Parameters

- base – PMC peripheral base address.

```
void PMC_ConfigureBandgapBuffer(PMC_Type *base, const pmc_bandgap_buffer_config_t
                                *config)
```

Configures the PMC bandgap.

This function configures the PMC bandgap, including the drive select and behavior in low-power mode.

Parameters

- base – PMC peripheral base address.
- config – Pointer to the configuration structure

```
static inline bool PMC_GetPeriphIOIsolationFlag(PMC_Type *base)
```

Gets the acknowledge Peripherals and I/O pads isolation flag.

This function reads the Acknowledge Isolation setting that indicates whether certain peripherals and the I/O pads are in a latched state as a result of having been in the VLLS mode.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

ACK isolation 0 - Peripherals and I/O pads are in a normal run state. 1 - Certain peripherals and I/O pads are in an isolated and latched state.

static inline void PMC_ClearPeriphIOIsolationFlag(PMC_Type *base)

Acknowledges the isolation flag to Peripherals and I/O pads.

This function clears the ACK Isolation flag. Writing one to this setting when it is set releases the I/O pads and certain peripherals to their normal run mode state.

Parameters

- base – PMC peripheral base address.

static inline bool PMC_IsRegulatorInRunRegulation(PMC_Type *base)

Gets the regulator regulation status.

This function returns the regulator to run a regulation status. It provides the current status of the internal voltage regulator.

Parameters

- base – PMC peripheral base address.
- base – Base address for current PMC instance.

Returns

Regulation status 0 - Regulator is in a stop regulation or in transition to/from the regulation. 1 - Regulator is in a run regulation.

FSL_PMC_DRIVER_VERSION

PMC driver version.

Version 2.0.4.

enum _pmc_low_volt_detect_volt_select

Low-voltage Detect Voltage Select.

Values:

enumerator kPMC_LowVoltDetectLowTrip

Low-trip point selected (VLVD = VLVDL)

enumerator kPMC_LowVoltDetectHighTrip

High-trip point selected (VLVD = VLVDH)

enum _pmc_low_volt_warning_volt_select

Low-voltage Warning Voltage Select.

Values:

enumerator kPMC_LowVoltWarningLowTrip

Low-trip point selected (VLVW = VLVW1)

enumerator kPMC_LowVoltWarningMid1Trip

Mid 1 trip point selected (VLVW = VLVW2)

enumerator kPMC_LowVoltWarningMid2Trip

Mid 2 trip point selected (VLVW = VLVW3)

enumerator kPMC_LowVoltWarningHighTrip

High-trip point selected (VLVW = VLVW4)

enum _pmc_high_volt_detect_volt_select

High-voltage Detect Voltage Select.

Values:

enumerator kPMC_HighVoltDetectLowTrip

Low-trip point selected (VHVD = VHVDL)

enumerator kPMC_HighVoltDetectHighTrip
High-trip point selected (VHVD = VHVDH)

enum __pmc_bandgap_buffer_drive_select
Bandgap Buffer Drive Select.

Values:

enumerator kPMC_BandgapBufferDriveLow
Low-drive.

enumerator kPMC_BandgapBufferDriveHigh
High-drive.

enum __pmc_vlp_freq_option
VLPx Option.

Values:

enumerator kPMC_FreqRestrict
Frequency is restricted in VLPx mode.

enumerator kPMC_FreqUnrestrict
Frequency is unrestricted in VLPx mode.

typedef enum __pmc_low_volt_detect_volt_select pmc_low_volt_detect_volt_select_t
Low-voltage Detect Voltage Select.

typedef enum __pmc_low_volt_warning_volt_select pmc_low_volt_warning_volt_select_t
Low-voltage Warning Voltage Select.

typedef enum __pmc_high_volt_detect_volt_select pmc_high_volt_detect_volt_select_t
High-voltage Detect Voltage Select.

typedef enum __pmc_bandgap_buffer_drive_select pmc_bandgap_buffer_drive_select_t
Bandgap Buffer Drive Select.

typedef enum __pmc_vlp_freq_option pmc_vlp_freq_mode_t
VLPx Option.

typedef struct __pmc_version_id pmc_version_id_t
IP version ID definition.

typedef struct __pmc_param pmc_param_t
IP parameter definition.

typedef struct __pmc_low_volt_detect_config pmc_low_volt_detect_config_t
Low-voltage Detect Configuration Structure.

typedef struct __pmc_low_volt_warning_config pmc_low_volt_warning_config_t
Low-voltage Warning Configuration Structure.

typedef struct __pmc_high_volt_detect_config pmc_high_volt_detect_config_t
High-voltage Detect Configuration Structure.

typedef struct __pmc_bandgap_buffer_config pmc_bandgap_buffer_config_t
Bandgap Buffer configuration.

struct __pmc_version_id
#include <fsl_pmc.h> IP version ID definition.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor version number.

uint8_t major
Major version number.

struct __pmc_param
#include <fsl_pmc.h> IP parameter definition.

Public Members

bool vlpoEnable
VLPO enable.

bool hvdEnable
HVD enable.

struct __pmc_low_volt_detect_config
#include <fsl_pmc.h> Low-voltage Detect Configuration Structure.

Public Members

bool enableInt
Enable interrupt when Low-voltage detect

bool enableReset
Enable system reset when Low-voltage detect

pmc_low_volt_detect_volt_select_t voltSelect
Low-voltage detect trip point voltage selection

struct __pmc_low_volt_warning_config
#include <fsl_pmc.h> Low-voltage Warning Configuration Structure.

Public Members

bool enableInt
Enable interrupt when low-voltage warning

pmc_low_volt_warning_volt_select_t voltSelect
Low-voltage warning trip point voltage selection

struct __pmc_high_volt_detect_config
#include <fsl_pmc.h> High-voltage Detect Configuration Structure.

Public Members

bool enableInt
Enable interrupt when high-voltage detect

bool enableReset
Enable system reset when high-voltage detect

pmc_high_volt_detect_volt_select_t voltSelect
High-voltage detect trip point voltage selection

struct __pmc_bandgap_buffer_config
#include <fsl_pmc.h> Bandgap Buffer configuration.

Public Members

bool enable
Enable bandgap buffer.

bool enableInLowPowerMode
Enable bandgap buffer in low-power mode.

pmc_bandgap_buffer_drive_select_t drive
Bandgap buffer drive select.

2.40 PORT: Port Control and Interrupts

static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const *port_pin_config_t* *config)

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const *port_pin_config_t* *config)

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
```

(continues on next page)

(continued from previous page)

```
kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask,
                                                    port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kPORT_InterruptLogicZero : Interrupt when logic zero.
 - kPORT_InterruptRisingEdge : Interrupt on rising edge.
 - kPORT_InterruptFallingEdge: Interrupt on falling edge.
 - kPORT_InterruptEitherEdge : Interrupt on either edge.
 - kPORT_InterruptLogicOne : Interrupt when logic one.
 - kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

```
static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)
```

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the PORT_SetPinsConfig, because the PORT_SetPinsConfig need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : kPORT_PinDisabledOrAnalog). This function is recommended to use to reset the pin mux

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `mux` – pin muxing slot selection.
 - `kPORT_PinDisabledOrAnalog`: Pin disabled or work in analog function.
 - `kPORT_MuxAsGpio` : Set as GPIO.
 - `kPORT_MuxAlt2` : chip-specific.
 - `kPORT_MuxAlt3` : chip-specific.
 - `kPORT_MuxAlt4` : chip-specific.
 - `kPORT_MuxAlt5` : chip-specific.
 - `kPORT_MuxAlt6` : chip-specific.
 - `kPORT_MuxAlt7` : chip-specific.

static inline void `PORT__EnablePinsDigitalFilter`(`PORT_Type *base`, `uint32_t mask`, `bool enable`)

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `mask` – PORT pin number macro.
- `enable` – PORT digital filter configuration.

static inline void `PORT__SetDigitalFilterConfig`(`PORT_Type *base`, `const port_digital_filter_config_t *config`)

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- `base` – PORT peripheral base pointer.
- `config` – PORT digital filter configuration structure.

static inline void `PORT__SetPinInterruptConfig`(`PORT_Type *base`, `uint32_t pin`, `port_interrupt_t config`)

Configures the port pin interrupt/DMA request.

Parameters

- `base` – PORT peripheral base pointer.
- `pin` – PORT pin number.
- `config` – PORT pin interrupt configuration.
 - `kPORT_InterruptOrDMADisabled`: Interrupt/DMA request disabled.
 - `kPORT_DMARisingEdge` : DMA request on rising edge(if the DMA requests exit).
 - `kPORT_DMAFallingEdge`: DMA request on falling edge(if the DMA requests exit).
 - `kPORT_DMAEitherEdge` : DMA request on either edge(if the DMA requests exit).
 - `kPORT_FlagRisingEdge` : Flag sets on rising edge(if the Flag states exit).
 - `kPORT_FlagFallingEdge` : Flag sets on falling edge(if the Flag states exit).
 - `kPORT_FlagEitherEdge` : Flag sets on either edge(if the Flag states exit).
 - `kPORT_InterruptLogicZero` : Interrupt when logic zero.

- kPORT_InterruptRisingEdge : Interrupt on rising edge.
- kPORT_InterruptFallingEdge: Interrupt on falling edge.
- kPORT_InterruptEitherEdge : Interrupt on either edge.
- kPORT_InterruptLogicOne : Interrupt when logic one.
- kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
- kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit).

static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

static inline uint32_t PORT_GetPinsInterruptFlags(PORT_Type *base)
Reads the whole port status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – PORT peripheral base pointer.

Returns

Current port interrupt status flags, for example, 0x00010001 means the pin 0 and 16 have the interrupt.

static inline void PORT_ClearPinsInterruptFlags(PORT_Type *base, uint32_t mask)
Clears the multiple pin interrupt status flag.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.

FSL_PORT_DRIVER_VERSION
PORT driver version.

enum __port_pull
Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable
Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown
Internal pull-down resistor is enabled.

enumerator kPORT_PullUp
Internal pull-up resistor is enabled.

enum __port_slew_rate
Slew rate selection.

Values:

enumerator kPORT_FastSlewRate
Fast slew rate is configured.

enumerator kPORT_SlowSlewRate
Slow slew rate is configured.

enum __port_open_drain_enable
Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable
Open drain output is disabled.

enumerator kPORT_OpenDrainEnable
Open drain output is enabled.

enum __port_passive_filter_enable
Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable
Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum __port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum __port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum __port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog
Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio
Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0
Chip-specific

enumerator kPORT_MuxAlt1
Chip-specific

enumerator kPORT_MuxAlt2
Chip-specific

enumerator kPORT_MuxAlt3
Chip-specific

enumerator kPORT_MuxAlt4
Chip-specific

enumerator kPORT_MuxAlt5
Chip-specific

enumerator kPORT_MuxAlt6
Chip-specific

enumerator kPORT_MuxAlt7
Chip-specific

enumerator kPORT_MuxAlt8
Chip-specific

enumerator kPORT_MuxAlt9
Chip-specific

enumerator kPORT_MuxAlt10
Chip-specific

enumerator kPORT_MuxAlt11
Chip-specific

enumerator kPORT_MuxAlt12
Chip-specific

enumerator kPORT_MuxAlt13
Chip-specific

enumerator kPORT_MuxAlt14
Chip-specific

enumerator kPORT_MuxAlt15
Chip-specific

enum __port_interrupt
Configures the interrupt generation condition.

Values:

enumerator kPORT_InterruptOrDMADisabled
Interrupt/DMA request is disabled.

enumerator kPORT_DMARisingEdge
DMA request on rising edge.

enumerator `kPORT_DMAFallingEdge`
DMA request on falling edge.

enumerator `kPORT_DMAEitherEdge`
DMA request on either edge.

enumerator `kPORT_FlagRisingEdge`
Flag sets on rising edge.

enumerator `kPORT_FlagFallingEdge`
Flag sets on falling edge.

enumerator `kPORT_FlagEitherEdge`
Flag sets on either edge.

enumerator `kPORT_InterruptLogicZero`
Interrupt when logic zero.

enumerator `kPORT_InterruptRisingEdge`
Interrupt on rising edge.

enumerator `kPORT_InterruptFallingEdge`
Interrupt on falling edge.

enumerator `kPORT_InterruptEitherEdge`
Interrupt on either edge.

enumerator `kPORT_InterruptLogicOne`
Interrupt when logic one.

enumerator `kPORT_ActiveHighTriggerOutputEnable`
Enable active high-trigger output.

enumerator `kPORT_ActiveLowTriggerOutputEnable`
Enable active low-trigger output.

enum `_port_digital_filter_clock_source`
Digital filter clock source selection.

Values:

enumerator `kPORT_BusClock`
Digital filters are clocked by the bus clock.

enumerator `kPORT_LpoClock`
Digital filters are clocked by the 1 kHz LPO clock.

typedef enum `_port_mux` `port_mux_t`
Pin mux selection.

typedef enum `_port_interrupt` `port_interrupt_t`
Configures the interrupt generation condition.

typedef enum `_port_digital_filter_clock_source` `port_digital_filter_clock_source_t`
Digital filter clock source selection.

typedef struct `_port_digital_filter_config` `port_digital_filter_config_t`
PORT digital filter feature configuration definition.

typedef struct `_port_pin_config` `port_pin_config_t`
PORT pin configuration structure.

FSL_COMPONENT_ID

```
struct __port_digital_filter_config
    #include <fsl_port.h> PORT digital filter feature configuration definition.
```

Public Members

```
uint32_t digitalFilterWidth
    Set digital filter width
port_digital_filter_clock_source_t clockSource
    Set digital filter clockSource
```

```
struct __port_pin_config
    #include <fsl_port.h> PORT pin configuration structure.
```

Public Members

```
uint16_t pullSelect
    No-pull/pull-down/pull-up select
uint16_t slewRate
    Fast/slow slew rate Configure
uint16_t passiveFilterEnable
    Passive filter enable/disable
uint16_t openDrainEnable
    Open drain enable/disable
uint16_t driveStrength
    Fast/slow drive strength configure
uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
```

2.41 RCM: Reset Control Module Driver

```
static inline void RCM_GetVersionId(RCM_Type *base, rcm_version_id_t *versionId)
```

Gets the RCM version ID.

This function gets the RCM version ID including the major version number, the minor version number, and the feature specification number.

Parameters

- base – RCM peripheral base address.
- versionId – Pointer to the version ID structure.

```
static inline uint32_t RCM_GetResetSourceImplementedStatus(RCM_Type *base)
```

Gets the reset source implemented status.

This function gets the RCM parameter that indicates whether the corresponding reset source is implemented. Use source masks defined in the `rcm_reset_source_t` to get the desired source status.

This is an example.


```
uint32_t status;
```

To test whether the MCU **is** reset using Watchdog.

```
status = RCM_GetResetSourceImplementedStatus(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source implemented status bit map.

```
static inline uint32_t RCM_GetPreviousResetSources(RCM_Type *base)
```

Gets the reset source status which caused a previous reset.

This function gets the current reset source status. Use source masks defined in the `rcm_reset_source_t` to get the desired source status.

This is an example.

```
uint32_t resetStatus;
```

To get **all** reset source statuses.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceAll;
```

To test whether the MCU **is** reset using Watchdog.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & kRCM_SourceWdog;
```

To test multiple reset sources.

```
resetStatus = RCM_GetPreviousResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

```
static inline uint32_t RCM_GetStickyResetSources(RCM_Type *base)
```

Gets the sticky reset source status.

This function gets the current reset source status that has not been cleared by software for a specific source.

This is an example.

```
uint32_t resetStatus;
```

To get **all** reset source statuses.

```
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceAll;
```

To test whether the MCU **is** reset using Watchdog.

```
resetStatus = RCM_GetStickyResetSources(RCM) & kRCM_SourceWdog;
```

To test multiple reset sources.

```
resetStatus = RCM_GetStickyResetSources(RCM) & (kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.

Returns

All reset source status bit map.

```
static inline void RCM_ClearStickyResetSources(RCM_Type *base, uint32_t sourceMasks)
```

Clears the sticky reset source status.

This function clears the sticky system reset flags indicated by source masks.

This is an example.

Clears multiple reset sources.

```
RCM_ClearStickyResetSources(kRCM_SourceWdog | kRCM_SourcePin);
```

Parameters

- base – RCM peripheral base address.
- sourceMasks – reset source status bit map

```
void RCM_ConfigureResetPinFilter(RCM_Type *base, const rcm_reset_pin_filter_config_t *config)
```

Configures the reset pin filter.

This function sets the reset pin filter including the filter source, filter width, and so on.

Parameters

- base – RCM peripheral base address.
- config – Pointer to the configuration structure.

```
static inline bool RCM_GetEasyPortModePinStatus(RCM_Type *base)
```

Gets the EZP_MS_B pin assert status.

This function gets the easy port mode status (EZP_MS_B) pin assert status.

Parameters

- base – RCM peripheral base address.

Returns

status true - asserted, false - reasserted

```
static inline rcm_boot_rom_config_t RCM_GetBootRomSource(RCM_Type *base)
```

Gets the ROM boot source.

This function gets the ROM boot source during the last chip reset.

Parameters

- base – RCM peripheral base address.

Returns

The ROM boot source.

```
static inline void RCM_ClearBootRomSource(RCM_Type *base)
```

Clears the ROM boot source flag.

This function clears the ROM boot source flag.

Parameters

- base – Register base address of RCM

```
void RCM_SetForceBootRomSource(RCM_Type *base, rcm_boot_rom_config_t config)
```

Forces the boot from ROM.

This function forces booting from ROM during all subsequent system resets.

Parameters

- base – RCM peripheral base address.
- config – Boot configuration.

```
static inline void RCM_SetSystemResetInterruptConfig(RCM_Type *base, uint32_t intMask,
                                                    rcm_reset_delay_t delay)
```

Sets the system reset interrupt configuration.

For a graceful shut down, the RCM supports delaying the assertion of the system reset for a period of time when the reset interrupt is generated. This function can be used to enable the interrupt and the delay period. The interrupts are passed in as bit mask. See `rcm_int_t` for details. For example, to delay a reset for 512 LPO cycles after the WDOG timeout or loss-of-clock occurs, configure as follows: `RCM_SetSystemResetInterruptConfig(kRCM_IntWatchDog | kRCM_IntLossOfClk, kRCM_ResetDelay512Lpo);`

Parameters

- `base` – RCM peripheral base address.
- `intMask` – Bit mask of the system reset interrupts to enable. See `rcm_interrupt_enable_t` for details.
- `delay` – Bit mask of the system reset interrupts to enable.

FSL_RCM_DRIVER_VERSION

RCM driver version 2.0.5.

enum _rcm_reset_source

System Reset Source Name definitions.

Values:

enumerator kRCM_SourceWakeup

Low-leakage wakeup reset

enumerator kRCM_SourceLvd

Low-voltage detect reset

enumerator kRCM_SourceLoc

Loss of clock reset

enumerator kRCM_SourceLol

Loss of lock reset

enumerator kRCM_SourceWdog

Watchdog reset

enumerator kRCM_SourcePin

External pin reset

enumerator kRCM_SourcePor

Power on reset

enumerator kRCM_SourceJtag

JTAG generated reset

enumerator kRCM_SourceLockup

Core lock up reset

enumerator kRCM_SourceSw

Software reset

enumerator kRCM_SourceMdmap

MDM-AP system reset

enumerator kRCM_SourceEzpt

EzPort reset

enumerator kRCM_SourceSackerr

Parameter could get all reset flags

enumerator kRCM_SourceAll

enum _rcm_run_wait_filter_mode

Reset pin filter select in Run and Wait modes.

Values:

enumerator kRCM_FilterDisable

All filtering disabled

enumerator kRCM_FilterBusClock

Bus clock filter enabled

enumerator kRCM_FilterLpoClock

LPO clock filter enabled

enum _rcm_boot_rom_config

Boot from ROM configuration.

Values:

enumerator kRCM_BootFlash

Boot from flash

enumerator kRCM_BootRomCfg0

Boot from boot ROM due to BOOTCFG0

enumerator kRCM_BootRomFopt

Boot from boot ROM due to FOPT[7]

enumerator kRCM_BootRomBoth

Boot from boot ROM due to both BOOTCFG0 and FOPT[7]

enum _rcm_reset_delay

Maximum delay time from interrupt asserts to system reset.

Values:

enumerator kRCM_ResetDelay8Lpo

Delay 8 LPO cycles.

enumerator kRCM_ResetDelay32Lpo

Delay 32 LPO cycles.

enumerator kRCM_ResetDelay128Lpo

Delay 128 LPO cycles.

enumerator kRCM_ResetDelay512Lpo

Delay 512 LPO cycles.

enum _rcm_interrupt_enable

System reset interrupt enable bit definitions.

Values:

enumerator kRCM_IntNone

No interrupt enabled.

enumerator kRCM_IntLossOfClk

Loss of clock interrupt.

```
enumerator kRCM_IntLossOfLock
    Loss of lock interrupt.
enumerator kRCM_IntWatchDog
    Watch dog interrupt.
enumerator kRCM_IntExternalPin
    External pin interrupt.
enumerator kRCM_IntGlobal
    Global interrupts.
enumerator kRCM_IntCoreLockup
    Core lock up interrupt
enumerator kRCM_IntSoftware
    software interrupt
enumerator kRCM_IntStopModeAckErr
    Stop mode ACK error interrupt.
enumerator kRCM_IntCore1
    Core 1 interrupt.
enumerator kRCM_IntAll
    Enable all interrupts.
typedef enum _rcm_reset_source rcm_reset_source_t
    System Reset Source Name definitions.
typedef enum _rcm_run_wait_filter_mode rcm_run_wait_filter_mode_t
    Reset pin filter select in Run and Wait modes.
typedef enum _rcm_boot_rom_config rcm_boot_rom_config_t
    Boot from ROM configuration.
typedef enum _rcm_reset_delay rcm_reset_delay_t
    Maximum delay time from interrupt asserts to system reset.
typedef enum _rcm_interrupt_enable rcm_interrupt_enable_t
    System reset interrupt enable bit definitions.
typedef struct _rcm_version_id rcm_version_id_t
    IP version ID definition.
typedef struct _rcm_reset_pin_filter_config rcm_reset_pin_filter_config_t
    Reset pin filter configuration.
struct _rcm_version_id
    #include <fsl_rcm.h> IP version ID definition.
```

Public Members

```
uint16_t feature
    Feature Specification Number.
uint8_t minor
    Minor version number.
uint8_t major
    Major version number.
struct _rcm_reset_pin_filter_config
    #include <fsl_rcm.h> Reset pin filter configuration.
```

Public Members

`bool enableFilterInStop`

Reset pin filter select in stop mode.

`rcm_run_wait_filter_mode_t filterInRunWait`

Reset pin filter in run/wait mode.

`uint8_t busClockFilterCount`

Reset pin bus clock filter width.

2.42 RTC: Real Time Clock

`void RTC_Init(RTC_Type *base, const rtc_config_t *config)`

Un gates the RTC clock and configures the peripheral for basic operation.

This function issues a software reset if the timer invalid flag is set.

Note: This API should be called at the beginning of the application using the RTC driver.

Parameters

- `base` – RTC peripheral base address
- `config` – Pointer to the user's RTC configuration structure.

`static inline void RTC_Deinit(RTC_Type *base)`

Stops the timer and gate the RTC clock.

Parameters

- `base` – RTC peripheral base address

`void RTC_GetDefaultConfig(rtc_config_t *config)`

Fills in the RTC config struct with the default settings.

The default values are as follows.

```
config->clockOutput = false;
config->wakeupSelect = false;
config->updateMode = false;
config->supervisorAccess = false;
config->compensationInterval = 0;
config->compensationTime = 0;
```

Parameters

- `config` – Pointer to the user's RTC configuration structure.

`status_t RTC_SetDatetime(RTC_Type *base, const rtc_datetime_t *datetime)`

Sets the RTC date and time according to the given time structure.

The RTC counter must be stopped prior to calling this function because writes to the RTC seconds register fail if the RTC counter is running.

Parameters

- `base` – RTC peripheral base address
- `datetime` – Pointer to the structure where the date and time details are stored.

Returns

kStatus_Success: Success in setting the time and starting the RTC
kStatus_InvalidArgument: Error because the datetime format is incorrect

void RTC_GetDatetime(RTC_Type *base, rtc_datetime_t *datetime)

Gets the RTC time and stores it in the given time structure.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the date and time details are stored.

status_t RTC_SetAlarm(RTC_Type *base, const rtc_datetime_t *alarmTime)

Sets the RTC alarm time.

The function checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error.

Parameters

- base – RTC peripheral base address
- alarmTime – Pointer to the structure where the alarm time is stored.

Returns

kStatus_Success: success in setting the RTC alarm
kStatus_InvalidArgument: Error because the alarm datetime format is incorrect
kStatus_Fail: Error because the alarm time has already passed

void RTC_GetAlarm(RTC_Type *base, rtc_datetime_t *datetime)

Returns the RTC alarm time.

Parameters

- base – RTC peripheral base address
- datetime – Pointer to the structure where the alarm date and time details are stored.

void RTC_EnableInterrupts(RTC_Type *base, uint32_t mask)

Enables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

void RTC_DisableInterrupts(RTC_Type *base, uint32_t mask)

Disables the selected RTC interrupts.

Parameters

- base – RTC peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration rtc_interrupt_enable_t

uint32_t RTC_GetEnabledInterrupts(RTC_Type *base)

Gets the enabled RTC interrupts.

Parameters

- base – RTC peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `rtc_interrupt_enable_t`

`uint32_t RTC_GetStatusFlags(RTC_Type *base)`

Gets the RTC status flags.

Parameters

- `base` – RTC peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `rtc_status_flags_t`

`void RTC_ClearStatusFlags(RTC_Type *base, uint32_t mask)`

Clears the RTC status flags.

Parameters

- `base` – RTC peripheral base address
- `mask` – The status flags to clear. This is a logical OR of members of the enumeration `rtc_status_flags_t`

`static inline void RTC_EnableLPOClock(RTC_Type *base, bool enable)`

Enable/Disable RTC 1kHz LPO clock.

Note: After setting this bit, RTC prescaler increments using the LPO 1kHz clock and not the RTC 32kHz crystal clock.

Parameters

- `base` – RTC peripheral base address
- `enable` – Enable/Disable RTC 1kHz LPO clock

`static inline void RTC_StartTimer(RTC_Type *base)`

Starts the RTC time counter.

After calling this function, the timer counter increments once a second provided `SR[TOF]` or `SR[TIF]` are not set.

Parameters

- `base` – RTC peripheral base address

`static inline void RTC_StopTimer(RTC_Type *base)`

Stops the RTC time counter.

RTC's seconds register can be written to only when the timer is stopped.

Parameters

- `base` – RTC peripheral base address

`void RTC_GetMonotonicCounter(RTC_Type *base, uint64_t *counter)`

Reads the values of the Monotonic Counter High and Monotonic Counter Low and returns them as a single value.

Parameters

- `base` – RTC peripheral base address
- `counter` – Pointer to variable where the value is stored.

void RTC_SetMonotonicCounter(RTC_Type *base, uint64_t counter)

Writes values Monotonic Counter High and Monotonic Counter Low by decomposing the given single value. The Monotonic Overflow Flag in RTC_SR is cleared due to the API.

Parameters

- base – RTC peripheral base address
- counter – Counter value

status_t RTC_IncrementMonotonicCounter(RTC_Type *base)

Increments the Monotonic Counter by one.

Increments the Monotonic Counter (registers RTC_MCLR and RTC_MCHR accordingly) by setting the monotonic counter enable (MER[MCE]) and then writing to the RTC_MCLR register. A write to the monotonic counter low that causes it to overflow also increments the monotonic counter high.

Parameters

- base – RTC peripheral base address

Returns

kStatus_Success: success
kStatus_Fail: error occurred, either time invalid or monotonic overflow flag was found

FSL_RTC_DRIVER_VERSION

Version 2.4.0

enum _rtc_interrupt_enable

List of RTC interrupts.

Values:

enumerator kRTC_TimeInvalidInterruptEnable

Time invalid interrupt.

enumerator kRTC_TimeOverflowInterruptEnable

Time overflow interrupt.

enumerator kRTC_AlarmInterruptEnable

Alarm interrupt.

enumerator kRTC_MonotonicOverflowInterruptEnable

Monotonic Overflow Interrupt Enable

enumerator kRTC_SecondsInterruptEnable

Seconds interrupt.

enumerator kRTC_TestModeInterruptEnable

enumerator kRTC_FlashSecurityInterruptEnable

enumerator kRTC_TamperPinInterruptEnable

enumerator kRTC_SecurityModuleInterruptEnable

enumerator kRTC_LossOfClockInterruptEnable

enum _rtc_status_flags

List of RTC flags.

Values:

enumerator kRTC_TimeInvalidFlag

Time invalid flag

enumerator kRTC_TimeOverflowFlag

Time overflow flag

enumerator kRTC_AlarmFlag

Alarm flag

enumerator kRTC_MonotonicOverflowFlag

Monotonic Overflow Flag

enumerator kRTC_TamperInterruptDetectFlag

Tamper interrupt detect flag

enumerator kRTC_TestModeFlag

enumerator kRTC_FlashSecurityFlag

enumerator kRTC_TamperPinFlag

enumerator kRTC_SecurityTamperFlag

enumerator kRTC_LossOfClockTamperFlag

enum _rtc_osc_cap_load

List of RTC Oscillator capacitor load settings.

Values:

enumerator kRTC_Capacitor_2p

2 pF capacitor load

enumerator kRTC_Capacitor_4p

4 pF capacitor load

enumerator kRTC_Capacitor_8p

8 pF capacitor load

enumerator kRTC_Capacitor_16p

16 pF capacitor load

enum _rtc_timer_seconds_interrupt_frequency

List of RTC Timer Seconds Interrupt Frequencies.

Values:

enumerator kRTC_TimerSecondsFrequency1Hz

Timer seconds frequency is 1Hz

enumerator kRTC_TimerSecondsFrequency2Hz

Timer seconds frequency is 2Hz

enumerator kRTC_TimerSecondsFrequency4Hz

Timer seconds frequency is 4Hz

enumerator kRTC_TimerSecondsFrequency8Hz

Timer seconds frequency is 8Hz

enumerator kRTC_TimerSecondsFrequency16Hz

Timer seconds frequency is 16Hz

enumerator kRTC_TimerSecondsFrequency32Hz

Timer seconds frequency is 32Hz

enumerator kRTC_TimerSecondsFrequency64Hz

Timer seconds frequency is 64Hz

enumerator `kRTC_TimerSecondsFrequency128Hz`

Timer seconds frequency is 128Hz

typedef enum `_rtc_interrupt_enable` `rtc_interrupt_enable_t`

List of RTC interrupts.

typedef enum `_rtc_status_flags` `rtc_status_flags_t`

List of RTC flags.

typedef enum `_rtc_osc_cap_load` `rtc_osc_cap_load_t`

List of RTC Oscillator capacitor load settings.

typedef enum `_rtc_timer_seconds_interrupt_frequency` `rtc_timer_seconds_interrupt_frequency_t`

List of RTC Timer Seconds Interrupt Frequencies.

typedef struct `_rtc_datetime` `rtc_datetime_t`

Structure is used to hold the date and time.

typedef struct `_rtc_pin_config` `rtc_pin_config_t`

RTC pin config structure.

typedef struct `_rtc_config` `rtc_config_t`

RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the `RTC_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

static inline uint32_t `RTC_GetTamperTimeSeconds(RTC_Type *base)`

Get the RTC tamper time seconds.

Parameters

- `base` – RTC peripheral base address

static inline void `RTC_SetOscCapLoad(RTC_Type *base, uint32_t capLoad)`

This function sets the specified capacitor configuration for the RTC oscillator.

Parameters

- `base` – RTC peripheral base address
- `capLoad` – Oscillator loads to enable. This is a logical OR of members of the enumeration `rtc_osc_cap_load_t`

static inline void `RTC_Reset(RTC_Type *base)`

Performs a software reset on the RTC module.

This resets all RTC registers except for the SWR bit and the `RTC_WAR` and `RTC_RAR` registers. The SWR bit is cleared by software explicitly clearing it.

Parameters

- `base` – RTC peripheral base address

static inline void `RTC_EnableWakeUpPin(RTC_Type *base, bool enable)`

Enables or disables the RTC Wakeup Pin Operation.

This function enable or disable RTC Wakeup Pin. The wakeup pin is optional and not available on all devices.

Parameters

- `base` – `RTC_Type` base pointer.
- `enable` – true to enable, false to disable.

```
static inline void RTC_EnableClockOutput(RTC_Type *base, bool enable)
```

Enables or disables the RTC 32 kHz clock output.

This function enables or disables the RTC 32 kHz clock output.

Parameters

- base – RTC_Type base pointer.
- enable – true to enable, false to disable.

```
void RTC_SetTimerSecondsInterruptFrequency(RTC_Type *base,  
                                           rtc_timer_seconds_interrupt_frequency_t freq)
```

Sets the RTC timer seconds interrupt frequency.

This function sets the RTC timer seconds interrupt frequency.

Parameters

- base – RTC peripheral base address
- freq – The timer seconds interrupt frequency. This is a member of the enumeration `rtc_timer_seconds_interrupt_frequency_t`

```
struct _rtc_datetime
```

#include <fsl_rtc.h> Structure is used to hold the date and time.

Public Members

uint16_t year

Range from 1970 to 2099.

uint8_t month

Range from 1 to 12.

uint8_t day

Range from 1 to 31 (depending on month).

uint8_t hour

Range from 0 to 23.

uint8_t minute

Range from 0 to 59.

uint8_t second

Range from 0 to 59.

```
struct _rtc_pin_config
```

#include <fsl_rtc.h> RTC pin config structure.

Public Members

bool inputLogic

true: Tamper pin input data is logic one. false: Tamper pin input data is logic zero.

bool pinActiveLow

true: Tamper pin is active low. false: Tamper pin is active high.

bool filterEnable

true: Input filter is enabled on the tamper pin. false: Input filter is disabled on the tamper pin.

bool pullSelectNegate

true: Tamper pin pull resistor direction will negate the tamper pin. false: Tamper pin pull resistor direction will assert the tamper pin.

bool pullEnable

true: Pull resistor is enabled on tamper pin. false: Pull resistor is disabled on tamper pin.

struct _rtc_config

#include <fsl_rtc.h> RTC config structure.

This structure holds the configuration settings for the RTC peripheral. To initialize this structure to reasonable defaults, call the RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool clockOutput

true: The 32 kHz clock is not output to other peripherals; false: The 32 kHz clock is output to other peripherals

bool wakeupSelect

true: Wakeup pin outputs the 32 KHz clock; false: Wakeup pin used to wakeup the chip

bool updateMode

true: Registers can be written even when locked under certain conditions, false: No writes allowed when registers are locked

bool supervisorAccess

true: Non-supervisor accesses are allowed; false: Non-supervisor accesses are not supported

uint32_t compensationInterval

Compensation interval that is written to the CIR field in RTC TCR Register

uint32_t compensationTime

Compensation time that is written to the TCR field in RTC TCR Register

2.43 SIM: System Integration Module Driver

FSL_SIM_DRIVER_VERSION

Driver version.

enum _sim_usb_volt_reg_enable_mode

USB voltage regulator enable setting.

Values:

enumerator kSIM_UsbVoltRegEnable

Enable voltage regulator.

enumerator kSIM_UsbVoltRegEnableInLowPower

Enable voltage regulator in VLPR/VLPW modes.

enumerator kSIM_UsbVoltRegEnableInStop

Enable voltage regulator in STOP/VLPS/LLS/VLLS modes.

enumerator kSIM_UsbVoltRegEnableInAllModes
Enable voltage regulator in all power modes.

enum _sim_flash_mode
Flash enable mode.

Values:

enumerator kSIM_FlashDisableInWait
Disable flash in wait mode.

enumerator kSIM_FlashDisable
Disable flash in normal mode.

typedef struct _sim_uid sim_uid_t
Unique ID.

void SIM_SetUsbVoltRegulatorEnableMode(uint32_t mask)
Sets the USB voltage regulator setting.

This function configures whether the USB voltage regulator is enabled in normal RUN mode, STOP/VLPS/LLS/VLLS modes, and VLPR/VLPW modes. The configurations are passed in as mask value of _sim_usb_volt_reg_enable_mode. For example, to enable USB voltage regulator in RUN/VLPR/VLPW modes and disable in STOP/VLPS/LLS/VLLS mode, use:

```
SIM_SetUsbVoltRegulatorEnableMode(kSIM_UsbVoltRegEnable  
kSIM_UsbVoltRegEnableInLowPower);
```

Parameters

- mask – USB voltage regulator enable setting.

void SIM_GetUniqueId(sim_uid_t *uid)
Gets the unique identification register value.

Parameters

- uid – Pointer to the structure to save the UID value.

static inline void SIM_SetFlashMode(uint8_t mode)
Sets the flash enable mode.

Parameters

- mode – The mode to set; see _sim_flash_mode for mode details.

struct _sim_uid
#include <fsl_sim.h> Unique ID.

Public Members

uint32_t H
UIDH.

uint32_t M
SIM_UIDM.

uint32_t L
UIDL.

2.44 SMC: System Mode Controller Driver

`static inline void SMC_GetVersionId(SMC_Type *base, smc_version_id_t *versionId)`

Gets the SMC version ID.

This function gets the SMC version ID, including major version number, minor version number, and feature specification number.

Parameters

- `base` – SMC peripheral base address.
- `versionId` – Pointer to the version ID structure.

`void SMC_GetParam(SMC_Type *base, smc_param_t *param)`

Gets the SMC parameter.

This function gets the SMC parameter including the enabled power modes.

Parameters

- `base` – SMC peripheral base address.
- `param` – Pointer to the SMC param structure.

`static inline void SMC_SetPowerModeProtection(SMC_Type *base, uint8_t allowedModes)`

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes in the specified chip family. The available power modes are defined in the `smc_power_mode_protection_t`. This should be done at an early system level initialization stage. See the reference manual for details. This register can only write once after the power reset.

The allowed modes are passed as bit map. For example, to allow LLS and VLLS, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeVlls | kSMC_AllowPowerModeVlps)`. To allow all modes, use `SMC_SetPowerModeProtection(kSMC_AllowPowerModeAll)`.

Parameters

- `base` – SMC peripheral base address.
- `allowedModes` – Bitmap of the allowed power modes.

`static inline smc_power_state_t SMC_GetPowerModeState(SMC_Type *base)`

Gets the current power mode status.

This function returns the current power mode status. After the application switches the power mode, it should always check the status to check whether it runs into the specified mode or not. The application should check this mode before switching to a different mode. The system requires that only certain modes can switch to other specific modes. See the reference manual for details and the `smc_power_state_t` for information about the power status.

Parameters

- `base` – SMC peripheral base address.

Returns

Current power mode status.

`void SMC_PreEnterStopModes(void)`

Prepares to enter stop modes.

This function should be called before entering STOP/VLPS/LLS/VLLS modes.

`void SMC_PostExitStopModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from STOP/VLPS/LLS/VLLS modes. It is used with SMC_PreEnterStopModes.

`void SMC_PreEnterWaitModes(void)`

Prepares to enter wait modes.

This function should be called before entering WAIT/VLPW modes.

`void SMC_PostExitWaitModes(void)`

Recovers after wake up from stop modes.

This function should be called after wake up from WAIT/VLPW modes. It is used with SMC_PreEnterWaitModes.

`status_t SMC_SetPowerModeRun(SMC_Type *base)`

Configures the system to RUN power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeHsrun(SMC_Type *base)`

Configures the system to HSRUN power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeWait(SMC_Type *base)`

Configures the system to WAIT power mode.

Parameters

- `base` – SMC peripheral base address.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeStop(SMC_Type *base, smc_partial_stop_option_t option)`

Configures the system to Stop power mode.

Parameters

- `base` – SMC peripheral base address.
- `option` – Partial Stop mode option.

Returns

SMC configuration error code.

`status_t SMC_SetPowerModeVlpr(SMC_Type *base, bool wakeupMode)`

Configures the system to VLPR power mode.

Parameters

- `base` – SMC peripheral base address.
- `wakeupMode` – Enter Normal Run mode if true, else stay in VLPR mode.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlpw(SMC_Type *base)

Configures the system to VLPW power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlps(SMC_Type *base)

Configures the system to VLPS power mode.

Parameters

- base – SMC peripheral base address.

Returns

SMC configuration error code.

status_t SMC_SetPowerModeLls(SMC_Type *base, const *smc_power_mode_lls_config_t* *config)

Configures the system to LLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The LLS power mode configuration structure

Returns

SMC configuration error code.

status_t SMC_SetPowerModeVlls(SMC_Type *base, const *smc_power_mode_vlls_config_t* *config)

Configures the system to VLLS power mode.

Parameters

- base – SMC peripheral base address.
- config – The VLLS power mode configuration structure.

Returns

SMC configuration error code.

FSL_SMC_DRIVER_VERSION

SMC driver version.

enum _smc_power_mode_protection

Power Modes Protection.

Values:

enumerator kSMC_AllowPowerModeVlls

Allow Very-low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeLls

Allow Low-leakage Stop Mode.

enumerator kSMC_AllowPowerModeVlp

Allow Very-Low-power Mode.

enumerator kSMC_AllowPowerModeHsrn

Allow High-speed Run mode.

enumerator kSMC_AllowPowerModeAll

Allow all power mode.

enum _smc_power_state

Power Modes in PMSTAT.

Values:

enumerator kSMC_PowerStateRun

0000_0001 - Current power mode is RUN

enumerator kSMC_PowerStateStop

0000_0010 - Current power mode is STOP

enumerator kSMC_PowerStateVlpr

0000_0100 - Current power mode is VLPR

enumerator kSMC_PowerStateVlpw

0000_1000 - Current power mode is VLPW

enumerator kSMC_PowerStateVlps

0001_0000 - Current power mode is VLPS

enumerator kSMC_PowerStateLls

0010_0000 - Current power mode is LLS

enumerator kSMC_PowerStateVlls

0100_0000 - Current power mode is VLLS

enumerator kSMC_PowerStateHsruntime

1000_0000 - Current power mode is HSRUN

enum _smc_run_mode

Run mode definition.

Values:

enumerator kSMC_RunNormal

Normal RUN mode.

enumerator kSMC_RunVlpr

Very-low-power RUN mode.

enumerator kSMC_Hsruntime

High-speed Run mode (HSRUN).

enum _smc_stop_mode

Stop mode definition.

Values:

enumerator kSMC_StopNormal

Normal STOP mode.

enumerator kSMC_StopVlps

Very-low-power STOP mode.

enumerator kSMC_StopLls

Low-leakage Stop mode.

enumerator kSMC_StopVlls

Very-low-leakage Stop mode.

enum _smc_stop_submode

VLLS/LLS stop sub mode definition.

Values:

enumerator kSMC_StopSub0
Stop submode 0, for VLLS0/LLS0.

enumerator kSMC_StopSub1
Stop submode 1, for VLLS1/LLS1.

enumerator kSMC_StopSub2
Stop submode 2, for VLLS2/LLS2.

enumerator kSMC_StopSub3
Stop submode 3, for VLLS3/LLS3.

enum _smc_partial_stop_mode
Partial STOP option.

Values:

enumerator kSMC_PartialStop
STOP - Normal Stop mode

enumerator kSMC_PartialStop1
Partial Stop with both system and bus clocks disabled

enumerator kSMC_PartialStop2
Partial Stop with system clock disabled and bus clock enabled

_smc_status, SMC configuration status.

Values:

enumerator kStatus_SMC_StopAbort
Entering Stop mode is abort

typedef enum _smc_power_mode_protection smc_power_mode_protection_t
Power Modes Protection.

typedef enum _smc_power_state smc_power_state_t
Power Modes in PMSTAT.

typedef enum _smc_run_mode smc_run_mode_t
Run mode definition.

typedef enum _smc_stop_mode smc_stop_mode_t
Stop mode definition.

typedef enum _smc_stop_submode smc_stop_submode_t
VLLS/LLS stop sub mode definition.

typedef enum _smc_partial_stop_mode smc_partial_stop_option_t
Partial STOP option.

typedef struct _smc_version_id smc_version_id_t
IP version ID definition.

typedef struct _smc_param smc_param_t
IP parameter definition.

typedef struct _smc_power_mode_lls_config smc_power_mode_lls_config_t
SMC Low-Leakage Stop power mode configuration.

typedef struct _smc_power_mode_vlls_config smc_power_mode_vlls_config_t
SMC Very Low-Leakage Stop power mode configuration.

struct _smc_version_id
#include <fsl_smc.h> IP version ID definition.

Public Members

uint16_t feature
Feature Specification Number.

uint8_t minor
Minor version number.

uint8_t major
Major version number.

struct __smc_param
#include <fsl_smc.h> IP parameter definition.

Public Members

bool hsruntimeEnable
HSRUN mode enable.

bool llsEnable
LLS mode enable.

bool lls2Enable
LLS2 mode enable.

bool vlls0Enable
VLLS0 mode enable.

struct __smc_power_mode_lls_config
#include <fsl_smc.h> SMC Low-Leakage Stop power mode configuration.

Public Members

smc_stop_submode_t subMode
Low-leakage Stop sub-mode

bool enableLpoClock
Enable LPO clock in LLS mode

struct __smc_power_mode_vlls_config
#include <fsl_smc.h> SMC Very Low-Leakage Stop power mode configuration.

Public Members

smc_stop_submode_t subMode
Very Low-leakage Stop sub-mode

bool enablePorDetectInVlls0
Enable Power on reset detect in VLLS mode

bool enableRam2InVlls2
Enable RAM2 power in VLLS2

bool enableLpoClock
Enable LPO clock in VLLS mode

2.45 SPI: Serial Peripheral Interface Driver

2.46 SPI DMA Driver

```
void SPI_MasterTransferCreateHandleDMA(SPI_Type *base, spi_dma_handle_t *handle,
                                       spi_dma_callback_t callback, void *userData,
                                       dma_handle_t *txHandle, dma_handle_t *rxHandle)
```

Initialize the SPI master DMA handle.

This function initializes the SPI master DMA handle which can be used for other SPI master transactional APIs. Usually, for a specified SPI instance, user need only call this API once to get the initialized handle.

Parameters

- base – SPI peripheral base address.
- handle – SPI handle pointer.
- callback – User callback function called at the end of a transfer.
- userData – User data for callback.
- txHandle – DMA handle pointer for SPI Tx, the handle shall be static allocated by users.
- rxHandle – DMA handle pointer for SPI Rx, the handle shall be static allocated by users.

```
status_t SPI_MasterTransferDMA(SPI_Type *base, spi_dma_handle_t *handle, spi_transfer_t
                               *xfer)
```

Perform a non-blocking SPI transfer using DMA.

Note: This interface returned immediately after transfer initiates, users should call SPI_GetTransferStatus to poll the transfer status to check whether SPI transfer finished.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.
- xfer – Pointer to dma transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_SPI_Busy – SPI is not idle, is running another transfer.

```
void SPI_MasterTransferAbortDMA(SPI_Type *base, spi_dma_handle_t *handle)
```

Abort a SPI transfer using DMA.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.

```
status_t SPI_MasterTransferGetCountDMA(SPI_Type *base, spi_dma_handle_t *handle, size_t
                                       *count)
```

Get the transferred bytes for SPI slave DMA.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.
- count – Transferred bytes.

Return values

- kStatus_SPI_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

```
static inline void SPI_SlaveTransferCreateHandleDMA(SPI_Type *base, spi_dma_handle_t
                                                    *handle, spi_dma_callback_t callback, void
                                                    *userData, dma_handle_t *txHandle,
                                                    dma_handle_t *rxHandle)
```

Initialize the SPI slave DMA handle.

This function initializes the SPI slave DMA handle which can be used for other SPI master transactional APIs. Usually, for a specified SPI instance, user need only call this API once to get the initialized handle.

Parameters

- base – SPI peripheral base address.
- handle – SPI handle pointer.
- callback – User callback function called at the end of a transfer.
- userData – User data for callback.
- txHandle – DMA handle pointer for SPI Tx, the handle shall be static allocated by users.
- rxHandle – DMA handle pointer for SPI Rx, the handle shall be static allocated by users.

```
static inline status_t SPI_SlaveTransferDMA(SPI_Type *base, spi_dma_handle_t *handle,
                                             spi_transfer_t *xfer)
```

Perform a non-blocking SPI transfer using DMA.

Note: This interface returned immediately after transfer initiates, users should call SPI_GetTransferStatus to poll the transfer status to check whether SPI transfer finished.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.
- xfer – Pointer to dma transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_SPI_Busy – SPI is not idle, is running another transfer.

```
static inline void SPI_SlaveTransferAbortDMA(SPI_Type *base, spi_dma_handle_t *handle)
```

Abort a SPI transfer using DMA.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.

```
static inline status_t SPI_SlaveTransferGetCountDMA(SPI_Type *base, spi_dma_handle_t
                                                    *handle, size_t *count)
```

Get the transferred bytes for SPI slave DMA.

Parameters

- base – SPI peripheral base address.
- handle – SPI DMA handle pointer.
- count – Transferred bytes.

Return values

- *kStatus_SPI_Success* – Succeed get the transfer count.
- *kStatus_NoTransferInProgress* – There is not a non-blocking transaction currently in progress.

FSL_SPI_DMA_DRIVER_VERSION

SPI DMA driver version.

```
typedef struct _spi_dma_handle spi_dma_handle_t
```

```
typedef void (*spi_dma_callback_t)(SPI_Type *base, spi_dma_handle_t *handle, status_t status,
void *userData)
```

SPI DMA callback called at the end of transfer.

```
struct _spi_dma_handle
```

#include <fsl_spi_dma.h> SPI DMA transfer handle, users should not touch the content of the handle.

Public Members

```
bool txInProgress
```

Send transfer finished

```
bool rxInProgress
```

Receive transfer finished

```
dma_handle_t *txHandle
```

DMA handler for SPI send

```
dma_handle_t *rxHandle
```

DMA handler for SPI receive

```
uint8_t bytesPerFrame
```

Bytes in a frame for SPI transfer

```
spi_dma_callback_t callback
```

Callback for SPI DMA transfer

```
void *userData
```

User Data for SPI DMA callback

```
uint32_t state
```

Internal state of SPI DMA transfer

```
size_t transferSize
```

Bytes need to be transfer

2.47 SPI Driver

`void SPI_MasterGetDefaultConfig(spi_master_config_t *config)`

Sets the SPI master configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in `SPI_MasterInit()`. User may use the initialized structure unchanged in `SPI_MasterInit()`, or modify some fields of the structure before calling `SPI_MasterInit()`. After calling this API, the master is ready to transfer. Example:

```
spi_master_config_t config;
SPI_MasterGetDefaultConfig(&config);
```

Parameters

- `config` – pointer to master config structure

`void SPI_MasterInit(SPI_Type *base, const spi_master_config_t *config, uint32_t srcClock_Hz)`

Initializes the SPI with master configuration.

The configuration structure can be filled by user from scratch, or be set with default values by `SPI_MasterGetDefaultConfig()`. After calling this API, the slave is ready to transfer. Example

```
spi_master_config_t config = {
    .baudRate_Bps = 400000,
    ...
};
SPI_MasterInit(SPI0, &config);
```

Parameters

- `base` – SPI base pointer
- `config` – pointer to master configuration structure
- `srcClock_Hz` – Source clock frequency.

`void SPI_SlaveGetDefaultConfig(spi_slave_config_t *config)`

Sets the SPI slave configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in `SPI_SlaveInit()`. Modify some fields of the structure before calling `SPI_SlaveInit()`. Example:

```
spi_slave_config_t config;
SPI_SlaveGetDefaultConfig(&config);
```

Parameters

- `config` – pointer to slave configuration structure

`void SPI_SlaveInit(SPI_Type *base, const spi_slave_config_t *config)`

Initializes the SPI with slave configuration.

The configuration structure can be filled by user from scratch or be set with default values by `SPI_SlaveGetDefaultConfig()`. After calling this API, the slave is ready to transfer. Example

```
spi_slave_config_t config = {
    .polarity = kSPIClockPolarity_ActiveHigh;
    .phase = kSPIClockPhase_FirstEdge;
```

(continues on next page)

(continued from previous page)

```
.direction = kSPIMsbFirst;
...
};
SPI_MasterInit(SPI0, &config);
```

Parameters

- base – SPI base pointer
- config – pointer to master configuration structure

void SPI_Deinit(SPI_Type *base)

De-initializes the SPI.

Calling this API resets the SPI module, gates the SPI clock. The SPI module can't work unless calling the SPI_MasterInit/SPI_SlaveInit to initialize module.

Parameters

- base – SPI base pointer

static inline void SPI_Enable(SPI_Type *base, bool enable)

Enables or disables the SPI.

Parameters

- base – SPI base pointer
- enable – pass true to enable module, false to disable module

uint32_t SPI_GetStatusFlags(SPI_Type *base)

Gets the status flag.

Parameters

- base – SPI base pointer

Returns

SPI Status, use status flag to AND _spi_flags could get the related status.

static inline void SPI_ClearInterrupt(SPI_Type *base, uint8_t mask)

Clear the interrupt if enable INCTLR.

Parameters

- base – SPI base pointer
- mask – Interrupt need to be cleared The parameter could be any combination of the following values:
 - kSPI_RxFullAndModfInterruptEnable
 - kSPI_TxEmptyInterruptEnable
 - kSPI_MatchInterruptEnable
 - kSPI_RxFifoNearFullInterruptEnable
 - kSPI_TxFifoNearEmptyInterruptEnable

void SPI_EnableInterrupts(SPI_Type *base, uint32_t mask)

Enables the interrupt for the SPI.

Parameters

- base – SPI base pointer
- mask – SPI interrupt source. The parameter can be any combination of the following values:

- kSPI_RxFullAndModfInterruptEnable
- kSPI_TxEmptyInterruptEnable
- kSPI_MatchInterruptEnable
- kSPI_RxFifoNearFullInterruptEnable
- kSPI_TxFifoNearEmptyInterruptEnable

void SPI_DisableInterrupts(SPI_Type *base, uint32_t mask)

Disables the interrupt for the SPI.

Parameters

- base – SPI base pointer
- mask – SPI interrupt source. The parameter can be any combination of the following values:
 - kSPI_RxFullAndModfInterruptEnable
 - kSPI_TxEmptyInterruptEnable
 - kSPI_MatchInterruptEnable
 - kSPI_RxFifoNearFullInterruptEnable
 - kSPI_TxFifoNearEmptyInterruptEnable

static inline void SPI_EnableDMA(SPI_Type *base, uint8_t mask, bool enable)

Enables the DMA source for SPI.

Parameters

- base – SPI base pointer
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA

static inline uint32_t SPI_GetDataRegisterAddress(SPI_Type *base)

Gets the SPI tx/rx data register address.

This API is used to provide a transfer address for the SPI DMA transfer configuration.

Parameters

- base – SPI base pointer

Returns

data register address

uint32_t SPI_GetInstance(SPI_Type *base)

Get the instance for SPI module.

Parameters

- base – SPI base address

static inline void SPI_SetPinMode(SPI_Type *base, spi_pin_mode_t pinMode)

Sets the pin mode for transfer.

Parameters

- base – SPI base pointer
- pinMode – pin mode for transfer AND `_spi_pin_mode` could get the related configuration.

`void SPI_MasterSetBaudRate(SPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)`
Sets the baud rate for SPI transfer. This is only used in master.

Parameters

- `base` – SPI base pointer
- `baudRate_Bps` – baud rate needed in Hz.
- `srcClock_Hz` – SPI source clock frequency in Hz.

`static inline void SPI_SetMatchData(SPI_Type *base, uint32_t matchData)`

Sets the match data for SPI.

The match data is a hardware comparison value. When the value received in the SPI receive data buffer equals the hardware comparison value, the SPI Match Flag in the S register (S[SPMF]) sets. This can also generate an interrupt if the enable bit sets.

Parameters

- `base` – SPI base pointer
- `matchData` – Match data.

`void SPI_EnableFIFO(SPI_Type *base, bool enable)`

Enables or disables the FIFO if there is a FIFO.

Parameters

- `base` – SPI base pointer
- `enable` – True means enable FIFO, false means disable FIFO.

`status_t SPI_WriteBlocking(SPI_Type *base, uint8_t *buffer, size_t size)`

Sends a buffer of data bytes using a blocking method.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- `base` – SPI base pointer
- `buffer` – The data bytes to send
- `size` – The number of data bytes to send

Returns

`kStatus_SPI_Timeout` The transfer timed out and was aborted.

`void SPI_WriteData(SPI_Type *base, uint16_t data)`

Writes a data into the SPI data register.

Parameters

- `base` – SPI base pointer
- `data` – needs to be write.

`uint16_t SPI_ReadData(SPI_Type *base)`

Gets a data from the SPI data register.

Parameters

- `base` – SPI base pointer

Returns

Data in the register.

```
void SPI_SetDummyData(SPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- base – SPI peripheral address.
- dummyData – Data to be transferred when tx buffer is NULL.

```
void SPI_MasterTransferCreateHandle(SPI_Type *base, spi_master_handle_t *handle,  
                                   spi_master_callback_t callback, void *userData)
```

Initializes the SPI master handle.

This function initializes the SPI master handle which can be used for other SPI master transactional APIs. Usually, for a specified SPI instance, call this API once to get the initialized handle.

Parameters

- base – SPI peripheral base address.
- handle – SPI handle pointer.
- callback – Callback function.
- userData – User data.

```
status_t SPI_MasterTransferBlocking(SPI_Type *base, spi_transfer_t *xfer)
```

Transfers a block of data using a polling method.

Parameters

- base – SPI base pointer
- xfer – pointer to spi_xfer_config_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.

```
status_t SPI_MasterTransferNonBlocking(SPI_Type *base, spi_master_handle_t *handle,  
                                       spi_transfer_t *xfer)
```

Performs a non-blocking SPI interrupt transfer.

Note: The API immediately returns after transfer initialization is finished. Call SPI_GetStatusIRQ() to get the transfer status.

Note: If SPI transfer data frame size is 16 bits, the transfer size cannot be an odd number.

Parameters

- base – SPI peripheral base address.
- handle – pointer to spi_master_handle_t structure which stores the transfer state
- xfer – pointer to spi_xfer_config_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.

- `kStatus_SPI_Busy` – SPI is not idle, is running another transfer.

`status_t SPI_MasterTransferGetCount(SPI_Type *base, spi_master_handle_t *handle, size_t *count)`

Gets the bytes of the SPI interrupt transferred.

Parameters

- `base` – SPI peripheral base address.
- `handle` – Pointer to SPI transfer handle, this should be a static variable.
- `count` – Transferred bytes of SPI master.

Return values

- `kStatus_SPI_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void SPI_MasterTransferAbort(SPI_Type *base, spi_master_handle_t *handle)`

Aborts an SPI transfer using interrupt.

Parameters

- `base` – SPI peripheral base address.
- `handle` – Pointer to SPI transfer handle, this should be a static variable.

`void SPI_MasterTransferHandleIRQ(SPI_Type *base, spi_master_handle_t *handle)`

Interrupts the handler for the SPI.

Parameters

- `base` – SPI peripheral base address.
- `handle` – pointer to `spi_master_handle_t` structure which stores the transfer state.

`void SPI_SlaveTransferCreateHandle(SPI_Type *base, spi_slave_handle_t *handle, spi_slave_callback_t callback, void *userData)`

Initializes the SPI slave handle.

This function initializes the SPI slave handle which can be used for other SPI slave transactional APIs. Usually, for a specified SPI instance, call this API once to get the initialized handle.

Parameters

- `base` – SPI peripheral base address.
- `handle` – SPI handle pointer.
- `callback` – Callback function.
- `userData` – User data.

`status_t SPI_SlaveTransferNonBlocking(SPI_Type *base, spi_slave_handle_t *handle, spi_transfer_t *xfer)`

Performs a non-blocking SPI slave interrupt transfer.

Note: The API returns immediately after the transfer initialization is finished. Call `SPI_GetStatusIRQ()` to get the transfer status.

Note: If SPI transfer data frame size is 16 bits, the transfer size cannot be an odd number.

Parameters

- `base` – SPI peripheral base address.
- `handle` – pointer to `spi_slave_handle_t` structure which stores the transfer state
- `xfer` – pointer to `spi_xfer_config_t` structure

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_SPI_Busy` – SPI is not idle, is running another transfer.

```
static inline status_t SPI_SlaveTransferGetCount(SPI_Type *base, spi_slave_handle_t *handle,
                                                size_t *count)
```

Gets the bytes of the SPI interrupt transferred.

Parameters

- `base` – SPI peripheral base address.
- `handle` – Pointer to SPI transfer handle, this should be a static variable.
- `count` – Transferred bytes of SPI slave.

Return values

- `kStatus_SPI_Success` – Succeed get the transfer count.
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

```
static inline void SPI_SlaveTransferAbort(SPI_Type *base, spi_slave_handle_t *handle)
```

Aborts an SPI slave transfer using interrupt.

Parameters

- `base` – SPI peripheral base address.
- `handle` – Pointer to SPI transfer handle, this should be a static variable.

```
void SPI_SlaveTransferHandleIRQ(SPI_Type *base, spi_slave_handle_t *handle)
```

Interrupts a handler for the SPI slave.

Parameters

- `base` – SPI peripheral base address.
- `handle` – pointer to `spi_slave_handle_t` structure which stores the transfer state

```
FSL_SPI_DRIVER_VERSION
```

SPI driver version.

Return status for the SPI driver.

Values:

enumerator `kStatus_SPI_Busy`
SPI bus is busy

enumerator `kStatus_SPI_Idle`
SPI is idle

enumerator kStatus_SPI_Error
SPI error

enumerator kStatus_SPI_Timeout
SPI timeout polling status flags.

enum _spi_clock_polarity
SPI clock polarity configuration.

Values:

enumerator kSPI_ClockPolarityActiveHigh
Active-high SPI clock (idles low).

enumerator kSPI_ClockPolarityActiveLow
Active-low SPI clock (idles high).

enum _spi_clock_phase
SPI clock phase configuration.

Values:

enumerator kSPI_ClockPhaseFirstEdge
First edge on SPSCCK occurs at the middle of the first cycle of a data transfer.

enumerator kSPI_ClockPhaseSecondEdge
First edge on SPSCCK occurs at the start of the first cycle of a data transfer.

enum _spi_shift_direction
SPI data shifter direction options.

Values:

enumerator kSPI_MsbFirst
Data transfers start with most significant bit.

enumerator kSPI_LsbFirst
Data transfers start with least significant bit.

enum _spi_ss_output_mode
SPI slave select output mode options.

Values:

enumerator kSPI_SlaveSelectAsGpio
Slave select pin configured as GPIO.

enumerator kSPI_SlaveSelectFaultInput
Slave select pin configured for fault detection.

enumerator kSPI_SlaveSelectAutomaticOutput
Slave select pin configured for automatic SPI output.

enum _spi_pin_mode
SPI pin mode options.

Values:

enumerator kSPI_PinModeNormal
Pins operate in normal, single-direction mode.

enumerator kSPI_PinModeInput
Bidirectional mode. Master: MOSI pin is input; Slave: MISO pin is input.

enumerator kSPI_PinModeOutput

Bidirectional mode. Master: MOSI pin is output; Slave: MISO pin is output.

enum _spi_data_bitcount_mode

SPI data length mode options.

Values:

enumerator kSPI_8BitMode

8-bit data transmission mode

enumerator kSPI_16BitMode

16-bit data transmission mode

enum _spi_interrupt_enable

SPI interrupt sources.

Values:

enumerator kSPI_RxFullAndModfInterruptEnable

Receive buffer full (SPRF) and mode fault (MODF) interrupt

enumerator kSPI_TxEmptyInterruptEnable

Transmit buffer empty interrupt

enumerator kSPI_MatchInterruptEnable

Match interrupt

enumerator kSPI_RxFifoNearFullInterruptEnable

Receive FIFO nearly full interrupt

enumerator kSPI_TxFifoNearEmptyInterruptEnable

Transmit FIFO nearly empty interrupt

enum _spi_flags

SPI status flags.

Values:

enumerator kSPI_RxBufferFullFlag

Read buffer full flag

enumerator kSPI_MatchFlag

Match flag

enumerator kSPI_TxBufferEmptyFlag

Transmit buffer empty flag

enumerator kSPI_ModeFaultFlag

Mode fault flag

enumerator kSPI_RxFifoNearFullFlag

Rx FIFO near full

enumerator kSPI_TxFifoNearEmptyFlag

Tx FIFO near empty

enumerator kSPI_TxFifoFullFlag

Tx FIFO full

enumerator kSPI_RxFifoEmptyFlag

Rx FIFO empty

enumerator kSPI_TxFifoError
Tx FIFO error

enumerator kSPI_RxFifoError
Rx FIFO error

enumerator kSPI_TxOverflow
Tx FIFO Overflow

enumerator kSPI_RxOverflow
Rx FIFO Overflow

enum _spi_w1c_interrupt
SPI FIFO write-1-to-clear interrupt flags.

Values:

enumerator kSPI_RxFifoFullClearInterrupt
Receive FIFO full interrupt

enumerator kSPI_TxFifoEmptyClearInterrupt
Transmit FIFO empty interrupt

enumerator kSPI_RxNearFullClearInterrupt
Receive FIFO nearly full interrupt

enumerator kSPI_TxNearEmptyClearInterrupt
Transmit FIFO nearly empty interrupt

enum _spi_txfifo_watermark
SPI TX FIFO watermark settings.

Values:

enumerator kSPI_TxFifoOneFourthEmpty
SPI tx watermark at 1/4 FIFO size

enumerator kSPI_TxFifoOneHalfEmpty
SPI tx watermark at 1/2 FIFO size

enum _spi_rxfifo_watermark
SPI RX FIFO watermark settings.

Values:

enumerator kSPI_RxFifoThreeFourthsFull
SPI rx watermark at 3/4 FIFO size

enumerator kSPI_RxFifoOneHalfFull
SPI rx watermark at 1/2 FIFO size

enum _spi_dma_enable_t
SPI DMA source.

Values:

enumerator kSPI_TxDmaEnable
Tx DMA request source

enumerator kSPI_RxDmaEnable
Rx DMA request source

enumerator kSPI_DmaAllEnable
All DMA request source

typedef enum *_spi_clock_polarity* spi_clock_polarity_t

SPI clock polarity configuration.

typedef enum *_spi_clock_phase* spi_clock_phase_t

SPI clock phase configuration.

typedef enum *_spi_shift_direction* spi_shift_direction_t

SPI data shifter direction options.

typedef enum *_spi_ss_output_mode* spi_ss_output_mode_t

SPI slave select output mode options.

typedef enum *_spi_pin_mode* spi_pin_mode_t

SPI pin mode options.

typedef enum *_spi_data_bitcount_mode* spi_data_bitcount_mode_t

SPI data length mode options.

typedef enum *_spi_w1c_interrupt* spi_w1c_interrupt_t

SPI FIFO write-1-to-clear interrupt flags.

typedef enum *_spi_txfifo_watermark* spi_txfifo_watermark_t

SPI TX FIFO watermark settings.

typedef enum *_spi_rxfifo_watermark* spi_rxfifo_watermark_t

SPI RX FIFO watermark settings.

typedef struct *_spi_master_config* spi_master_config_t

SPI master user configure structure.

typedef struct *_spi_slave_config* spi_slave_config_t

SPI slave user configure structure.

typedef struct *_spi_transfer* spi_transfer_t

SPI transfer structure.

typedef struct *_spi_master_handle* spi_master_handle_t

typedef *spi_master_handle_t* spi_slave_handle_t

Slave handle is the same with master handle

typedef void (*spi_master_callback_t)(SPI_Type *base, *spi_master_handle_t* *handle, *status_t* status, void *userData)

SPI master callback for finished transmit.

typedef void (*spi_slave_callback_t)(SPI_Type *base, *spi_slave_handle_t* *handle, *status_t* status, void *userData)

SPI master callback for finished transmit.

volatile uint8_t g_spiDummyData[]

Global variable for dummy data value setting.

SPI_DUMMYDATA

SPI dummy transfer data, the data is sent while txBuff is NULL.

SPI_RETRY_TIMES

Retry times for waiting flag.

struct *_spi_master_config*

#include <fsl_spi.h> SPI master user configure structure.

Public Members

`bool enableMaster`
 Enable SPI at initialization time

`bool enableStopInWaitMode`
 SPI stop in wait mode

`spi_clock_polarity_t polarity`
 Clock polarity

`spi_clock_phase_t phase`
 Clock phase

`spi_shift_direction_t direction`
 MSB or LSB

`spi_data_bitcount_mode_t dataMode`
 8bit or 16bit mode

`spi_txfifo_watermark_t txWatermark`
 Tx watermark settings

`spi_rxfifo_watermark_t rxWatermark`
 Rx watermark settings

`spi_ss_output_mode_t outputMode`
 SS pin setting

`spi_pin_mode_t pinMode`
 SPI pin mode select

`uint32_t baudRate_Bps`
 Baud Rate for SPI in Hz

`struct __spi_slave_config`
 #include <fsl_spi.h> SPI slave user configure structure.

Public Members

`bool enableSlave`
 Enable SPI at initialization time

`bool enableStopInWaitMode`
 SPI stop in wait mode

`spi_clock_polarity_t polarity`
 Clock polarity

`spi_clock_phase_t phase`
 Clock phase

`spi_shift_direction_t direction`
 MSB or LSB

`spi_data_bitcount_mode_t dataMode`
 8bit or 16bit mode

`spi_txfifo_watermark_t txWatermark`
 Tx watermark settings

spi_rxfifo_watermark_t rxWatermark

Rx watermark settings

spi_pin_mode_t pinMode

SPI pin mode select

struct *_spi_transfer*

#include <fsl_spi.h> SPI transfer structure.

Public Members

const uint8_t *txData

Send buffer

uint8_t *rxData

Receive buffer

size_t dataSize

Transfer bytes

uint32_t flags

SPI control flag, useless to SPI.

struct *_spi_master_handle*

#include <fsl_spi.h> SPI transfer handle structure.

Public Members

const uint8_t *volatile txData

Transfer buffer

uint8_t *volatile rxData

Receive buffer

volatile size_t txRemainingBytes

Send data remaining in bytes

volatile size_t rxRemainingBytes

Receive data remaining in bytes

volatile uint32_t state

SPI internal state

size_t transferSize

Bytes to be transferred

uint8_t bytePerFrame

SPI mode, 2bytes or 1byte in a frame

uint8_t watermark

Watermark value for SPI transfer

spi_master_callback_t callback

SPI callback

void *userData

Callback parameter

2.48 TPM: Timer PWM Module

uint32_t TPM_GetInstance(TPM_Type *base)

Gets the instance from the base address.

Parameters

- base – TPM peripheral base address

Returns

The TPM instance

void TPM_Init(TPM_Type *base, const *tpm_config_t* *config)

Ungates the TPM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the TPM driver.

Parameters

- base – TPM peripheral base address
- config – Pointer to user's TPM config structure.

void TPM_Deinit(TPM_Type *base)

Stops the counter and gates the TPM clock.

Parameters

- base – TPM peripheral base address

void TPM_GetDefaultConfig(*tpm_config_t* *config)

Fill in the TPM config struct with the default settings.

The default values are:

```
config->prescale = kTPM_Prescale_Divide_1;
config->useGlobalTimeBase = false;
config->syncGlobalTimeBase = false;
config->dozeEnable = false;
config->dbgMode = false;
config->enableReloadOnTrigger = false;
config->enableStopOnOverflow = false;
config->enableStartOnTrigger = false;
#if FSL_FEATURE_TPM_HAS_PAUSE_COUNTER_ON_TRIGGER
config->enablePauseOnTrigger = false;
#endif
config->triggerSelect = kTPM_Trigger_Select_0;
#if FSL_FEATURE_TPM_HAS_EXTERNAL_TRIGGER_SELECTION
config->triggerSource = kTPM_TriggerSource_External;
config->extTriggerPolarity = kTPM_ExtTrigger_Active_High;
#endif
#if defined(FSL_FEATURE_TPM_HAS_POL) && FSL_FEATURE_TPM_HAS_POL
config->chnlPolarity = 0U;
#endif
```

Parameters

- config – Pointer to user's TPM config structure.

tpm_clock_prescale_t TPM_CalculateCounterClkDiv(TPM_Type *base, uint32_t
counterPeriod_Hz, uint32_t srcClock_Hz)

Calculates the counter clock prescaler.

This function calculates the values for SC[PS].

return Calculated clock prescaler value.

Parameters

- base – TPM peripheral base address
- counterPeriod_Hz – The desired frequency in Hz which corresponding to the time when the counter reaches the mod value
- srcClock_Hz – TPM counter clock in Hz

static inline void TPM_Reset(TPM_Type *base)

Performs a software reset on the TPM module.

Reset all internal logic and registers, except the Global Register. Remains set until cleared by software.

Note: TPM software reset is available on certain SoC's only

Parameters

- base – TPM peripheral base address

status_t TPM_SetupPwm(TPM_Type *base, const *tpm_chnl_pwm_signal_param_t* *chnlParams, uint8_t numOfChnls, *tpm_pwm_mode_t* mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Configures the PWM signal parameters.

User calls this function to configure the PWM signals period, mode, dutycycle and edge. Use this function to configure all the TPM channels that will be used to output a PWM signal

Parameters

- base – TPM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure, this should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration *tpm_pwm_mode_t*
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – TPM counter clock in Hz

Returns

kStatus_Success PWM setup successful kStatus_Error PWM setup failed kStatus_Timeout PWM setup timeout when write register CnV or MOD

status_t TPM_UpdatePwmDutycycle(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_pwm_mode_t* currentPwmMode, uint8_t dutyCyclePercent)

Update the duty cycle of an active PWM signal.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number. In combined mode, this represents the channel pair number

- `currentPwmMode` – The current PWM mode set during PWM setup
- `dutyCyclePercent` – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

`kStatus_Success` if the PWM setup was successful, `kStatus_Error` on failure

`void TPM_UpdateChnlEdgeLevelSelect(TPM_Type *base, tpm_chnl_t chnlNumber, uint8_t level)`

Update the edge level selection for a channel.

Note: When the TPM has PWM pause level select feature (`FSL_FEATURE_TPM_HAS_PAUSE_LEVEL_SELECT = 1`), the PWM output cannot be turned off by selecting the output level. In this case, must use `TPM_DisableChannel` API to close the PWM output.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `level` – The level to be set to the `ELSnB:ELSnA` field; valid values are 00, 01, 10, 11. See the appropriate SoC reference manual for details about this field.

`static inline uint8_t TPM_GetChannelControlBits(TPM_Type *base, tpm_chnl_t chnlNumber)`

Get the channel control bits value (mode, edge and level bit fields).

This function disable the channel by clear all mode and level control bits.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number

Returns

The control bits value. This is the logical OR of members of the enumeration `tpm_chnl_control_bit_mask_t`.

`static inline status_t TPM_DisableChannel(TPM_Type *base, tpm_chnl_t chnlNumber)`

Disable the channel.

This function disable the channel by clear all mode and level control bits.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number

Returns

`kStatus_Success` PWM setup successful `kStatus_Timeout` PWM setup timeout when write register `CnSC`

`static inline status_t TPM_EnableChannel(TPM_Type *base, tpm_chnl_t chnlNumber, uint8_t control)`

Enable the channel according to mode and level configs.

This function enable the channel output according to input mode/level config parameters.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number

- `control` – The `control` bits value. This is the logical OR of members of the enumeration `tpm_chnl_control_bit_mask_t`.

Returns

`kStatus_Success` PWM setup successful
`kStatus_Timeout` PWM setup timeout when write register `CnSC`

```
void TPM_SetupInputCapture(TPM_Type *base, tpm_chnl_t chnlNumber,  
                           tpm_input_capture_edge_t captureMode)
```

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the `captureMode` argument occurs on the channel, the TPM counter is captured into the `CnV` register. The user has to read the `CnV` register separately to get this value.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `captureMode` – Specifies which edge to capture

```
status_t TPM_SetupOutputCompare(TPM_Type *base, tpm_chnl_t chnlNumber,  
                                 tpm_output_compare_mode_t compareMode, uint32_t  
                                 compareValue)
```

Configures the TPM to generate timed pulses.

When the TPM counter matches the value of `compareVal` argument (this is written into `CnV` reg), the channel output is changed based on what is specified in the `compareMode` argument.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `compareMode` – Action to take on the channel output when the compare condition is met
- `compareValue` – Value to be programmed in the `CnV` register.

Returns

`kStatus_Success` PWM setup successful
`kStatus_Timeout` PWM setup timeout when write register `CnV`

```
void TPM_SetupDualEdgeCapture(TPM_Type *base, tpm_chnl_t chnlPairNumber, const  
                              tpm_dual_edge_capture_param_t *edgeParam, uint32_t  
                              filterValue)
```

Configures the dual edge capture mode of the TPM.

This function allows to measure a pulse width of the signal on the input of channel of a channel pair. The filter function is disabled if the `filterVal` argument passed is zero.

Parameters

- `base` – TPM peripheral base address
- `chnlPairNumber` – The TPM channel pair number; options are 0, 1, 2, 3
- `edgeParam` – Sets up the dual edge capture function
- `filterValue` – Filter value, specify 0 to disable filter.

```
void TPM_SetupQuadDecode(TPM_Type *base, const tpm_phase_params_t *phaseAParams,  
                         const tpm_phase_params_t *phaseBParams,  
                         tpm_quad_decode_mode_t quadMode)
```


Configures the parameters and activates the quadrature decode mode.

Parameters

- `base` – TPM peripheral base address
- `phaseAParams` – Phase A configuration parameters
- `phaseBParams` – Phase B configuration parameters
- `quadMode` – Selects encoding mode used in quadrature decoder mode

```
static inline void TPM_SetChannelPolarity(TPM_Type *base, tpm_chnl_t chnlNumber, bool enable)
```

Set the input and output polarity of each of the channels.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `enable` – `true`: Set the channel polarity to active high; `false`: Set the channel polarity to active low;

```
static inline void TPM_EnableChannelExtTrigger(TPM_Type *base, tpm_chnl_t chnlNumber, bool enable)
```

Enable external trigger input to be used by channel.

In input capture mode, configures the trigger input that is used by the channel to capture the counter value. In output compare or PWM mode, configures the trigger input used to modulate the channel output. When modulating the output, the output is forced to the channel initial value whenever the trigger is not asserted.

Note: No matter how many external trigger sources there are, only input trigger 0 and 1 are used. The even numbered channels share the input trigger 0 and the odd numbered channels share the second input trigger 1.

Parameters

- `base` – TPM peripheral base address
- `chnlNumber` – The channel number
- `enable` – `true`: Configures trigger input 0 or 1 to be used by channel; `false`: Trigger input has no effect on the channel

```
void TPM_EnableInterrupts(TPM_Type *base, uint32_t mask)
```

Enables the selected TPM interrupts.

Parameters

- `base` – TPM peripheral base address
- `mask` – The interrupts to enable. This is a logical OR of members of the enumeration `tpm_interrupt_enable_t`

```
void TPM_DisableInterrupts(TPM_Type *base, uint32_t mask)
```

Disables the selected TPM interrupts.

Parameters

- `base` – TPM peripheral base address
- `mask` – The interrupts to disable. This is a logical OR of members of the enumeration `tpm_interrupt_enable_t`

uint32_t TPM_GetEnabledInterrupts(TPM_Type *base)

Gets the enabled TPM interrupts.

Parameters

- base – TPM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `tpm_interrupt_enable_t`

void TPM_RegisterCallBack(TPM_Type *base, *tpm_callback_t* callback)

Register callback.

If channel or overflow interrupt is enabled by the user, then a callback can be registered which will be invoked when the interrupt is triggered.

Parameters

- base – TPM peripheral base address
- callback – Callback function

void TPM_DriverIRQHandler(uint32_t instance)

TPM driver IRQ handler common entry.

This function provides the common IRQ request entry for TPM.

Parameters

- instance – TPM instance.

static inline uint32_t TPM_GetChannelValue(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Gets the TPM channel value.

Note: The TPM channel value contain the captured TPM counter value for the input modes or the match value for the output modes.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns

The channle CnV regisyer value.

static inline uint32_t TPM_GetStatusFlags(TPM_Type *base)

Gets the TPM status flags.

Parameters

- base – TPM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `tpm_status_flags_t`

static inline void TPM_ClearStatusFlags(TPM_Type *base, uint32_t mask)

Clears the TPM status flags.

Parameters

- base – TPM peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `tpm_status_flags_t`

static inline *status_t* TPM_SetTimerPeriod(TPM_Type *base, uint32_t ticks)

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

- a. This API allows the user to use the TPM module as a timer. Do not mix usage of this API with TPM's PWM setup API's.
 - b. Call the utility macros provided in the `fsl_common.h` to convert usec or msec to ticks.
-

Parameters

- `base` – TPM peripheral base address
- `ticks` – A timer period in units of ticks, which should be equal or greater than 1.

Returns

`kStatus_Success` PWM setup successful
`kStatus_Timeout` PWM setup timeout when write register CnSC

static inline uint32_t TPM_GetCurrentTimerCount(TPM_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- `base` – TPM peripheral base address

Returns

The current counter value in ticks

static inline void TPM_StartTimer(TPM_Type *base, *tpm_clock_source_t* clockSource)

Starts the TPM counter.

Parameters

- `base` – TPM peripheral base address
- `clockSource` – TPM clock source; once clock source is set the counter will start running

static inline *status_t* TPM_StopTimer(TPM_Type *base)

Stops the TPM counter.

Parameters

- `base` – TPM peripheral base address

Returns

`kStatus_Success` PWM setup successful
`kStatus_Timeout` PWM setup timeout when write register CnSC

FSL_TPM_DRIVER_VERSION

TPM driver version 2.4.2.

enum _tpm_chnl

List of TPM channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kTPM_Chnl_0
TPM channel number 0

enumerator kTPM_Chnl_1
TPM channel number 1

enumerator kTPM_Chnl_2
TPM channel number 2

enumerator kTPM_Chnl_3
TPM channel number 3

enumerator kTPM_Chnl_4
TPM channel number 4

enumerator kTPM_Chnl_5
TPM channel number 5

enumerator kTPM_Chnl_6
TPM channel number 6

enumerator kTPM_Chnl_7
TPM channel number 7

enum _tpm_pwm_mode

TPM PWM operation modes.

Values:

enumerator kTPM_EdgeAlignedPwm
Edge aligned PWM

enumerator kTPM_CenterAlignedPwm
Center aligned PWM

enumerator kTPM_CombinedPwm
Combined PWM (Edge-aligned, center-aligned, or asymmetrical PWMs can be obtained in combined mode using different software configurations)

enum _tpm_pwm_level_select

TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

Values:

enumerator kTPM_NoPwmSignal
No PWM output on pin

enumerator kTPM_LowTrue
Low true pulses

enumerator kTPM_HighTrue
High true pulses

enum _tpm_chnl_control_bit_mask

List of TPM channel modes and level control bit mask.

Values:

enumerator kTPM_ChnlELSnAMask
Channel ELSA bit mask.

enumerator kTPM_ChnlELSnBMask
Channel ELSB bit mask.

enumerator kTPM_ChnlMSAMask
Channel MSA bit mask.

enumerator kTPM_ChnlMSBMask
Channel MSB bit mask.

enum _tpm_trigger_select

Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

Values:

enumerator kTPM_Trigger_Select_0

enumerator kTPM_Trigger_Select_1

enumerator kTPM_Trigger_Select_2

enumerator kTPM_Trigger_Select_3

enumerator kTPM_Trigger_Select_4

enumerator kTPM_Trigger_Select_5

enumerator kTPM_Trigger_Select_6

enumerator kTPM_Trigger_Select_7

enumerator kTPM_Trigger_Select_8

enumerator kTPM_Trigger_Select_9

enumerator kTPM_Trigger_Select_10

enumerator kTPM_Trigger_Select_11

enumerator kTPM_Trigger_Select_12

enumerator kTPM_Trigger_Select_13

enumerator kTPM_Trigger_Select_14

enumerator kTPM_Trigger_Select_15

enum _tpm_trigger_source

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal trigger.

Values:

enumerator kTPM_TriggerSource_External

Use external trigger input

enumerator kTPM_TriggerSource_Internal

Use internal trigger (channel pin input capture)

enum _tpm_ext_trigger_polarity

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

Values:

enumerator kTPM_ExtTrigger_Active_High

External trigger input is active high

enumerator kTPM_ExtTrigger_Active_Low

External trigger input is active low

enum _tpm_output_compare_mode

TPM output compare modes.

Values:

enumerator kTPM_NoOutputSignal

No channel output when counter reaches CnV

enumerator kTPM_ToggleOnMatch

Toggle output

enumerator kTPM_ClearOnMatch

Clear output

enumerator kTPM_SetOnMatch

Set output

enumerator kTPM_HighPulseOutput

Pulse output high

enumerator kTPM_LowPulseOutput

Pulse output low

enum _tpm_input_capture_edge

TPM input capture edge.

Values:

enumerator kTPM_RisingEdge

Capture on rising edge only

enumerator kTPM_FallingEdge

Capture on falling edge only

enumerator kTPM_RiseAndFallEdge
Capture on rising or falling edge

enum _tpm_quad_decode_mode
TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

Values:

enumerator kTPM_QuadPhaseEncode
Phase A and Phase B encoding mode

enumerator kTPM_QuadCountAndDir
Count and direction encoding mode

enum _tpm_phase_polarity
TPM quadrature phase polarities.

Values:

enumerator kTPM_QuadPhaseNormal
Phase input signal is not inverted

enumerator kTPM_QuadPhaseInvert
Phase input signal is inverted

enum _tpm_clock_source
TPM clock source selection.

Values:

enumerator kTPM_SystemClock
System clock

enumerator kTPM_ExternalClock
External TPM_EXTCLK pin clock

enumerator kTPM_ExternalInputTriggerClock
Selected external input trigger clock

enum _tpm_clock_prescale
TPM prescale value selection for the clock source.

Values:

enumerator kTPM_Prescale_Divide_1
Divide by 1

enumerator kTPM_Prescale_Divide_2
Divide by 2

enumerator kTPM_Prescale_Divide_4
Divide by 4

enumerator kTPM_Prescale_Divide_8
Divide by 8

enumerator kTPM_Prescale_Divide_16
Divide by 16

enumerator kTPM_Prescale_Divide_32

Divide by 32

enumerator kTPM_Prescale_Divide_64

Divide by 64

enumerator kTPM_Prescale_Divide_128

Divide by 128

enum _tpm_interrupt_enable

List of TPM interrupts.

Values:

enumerator kTPM_Chnl0InterruptEnable

Channel 0 interrupt.

enumerator kTPM_Chnl1InterruptEnable

Channel 1 interrupt.

enumerator kTPM_Chnl2InterruptEnable

Channel 2 interrupt.

enumerator kTPM_Chnl3InterruptEnable

Channel 3 interrupt.

enumerator kTPM_Chnl4InterruptEnable

Channel 4 interrupt.

enumerator kTPM_Chnl5InterruptEnable

Channel 5 interrupt.

enumerator kTPM_Chnl6InterruptEnable

Channel 6 interrupt.

enumerator kTPM_Chnl7InterruptEnable

Channel 7 interrupt.

enumerator kTPM_TimeOverflowInterruptEnable

Time overflow interrupt.

enum _tpm_status_flags

List of TPM flags.

Values:

enumerator kTPM_Chnl0Flag

Channel 0 flag

enumerator kTPM_Chnl1Flag

Channel 1 flag

enumerator kTPM_Chnl2Flag

Channel 2 flag

enumerator kTPM_Chnl3Flag

Channel 3 flag

enumerator kTPM_Chnl4Flag

Channel 4 flag

enumerator kTPM_Chnl5Flag

Channel 5 flag

enumerator kTPM_Chnl6Flag
Channel 6 flag

enumerator kTPM_Chnl7Flag
Channel 7 flag

enumerator kTPM_TimeOverflowFlag
Time overflow flag

typedef enum *tpm_chnl* tpm_chnl_t
List of TPM channels.

Note: Actual number of available channels is SoC dependent

typedef enum *tpm_pwm_mode* tpm_pwm_mode_t
TPM PWM operation modes.

typedef enum *tpm_pwm_level_select* tpm_pwm_level_select_t
TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

typedef enum *tpm_chnl_control_bit_mask* tpm_chnl_control_bit_mask_t
List of TPM channel modes and level control bit mask.

typedef struct *tpm_chnl_pwm_signal_param* tpm_chnl_pwm_signal_param_t
Options to configure a TPM channel's PWM signal.

typedef enum *tpm_trigger_select* tpm_trigger_select_t
Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

typedef enum *tpm_trigger_source* tpm_trigger_source_t
Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal trigger.

typedef enum *tpm_ext_trigger_polarity* tpm_ext_trigger_polarity_t
External trigger source polarity.

Note: Selects the polarity of the external trigger source.

typedef enum *tpm_output_compare_mode* tpm_output_compare_mode_t
TPM output compare modes.

typedef enum *tpm_input_capture_edge* tpm_input_capture_edge_t
TPM input capture edge.

typedef struct *_tpm_dual_edge_capture_param* tpm_dual_edge_capture_param_t
TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_quad_decode_mode* tpm_quad_decode_mode_t
TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_phase_polarity* tpm_phase_polarity_t
TPM quadrature phase polarities.

typedef struct *_tpm_phase_param* tpm_phase_params_t
TPM quadrature decode phase parameters.

typedef enum *_tpm_clock_source* tpm_clock_source_t
TPM clock source selection.

typedef enum *_tpm_clock_prescale* tpm_clock_prescale_t
TPM prescale value selection for the clock source.

typedef struct *_tpm_config* tpm_config_t
TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

typedef enum *_tpm_interrupt_enable* tpm_interrupt_enable_t
List of TPM interrupts.

typedef enum *_tpm_status_flags* tpm_status_flags_t
List of TPM flags.

typedef void (*tpm_callback_t)(TPM_Type *base)
TPM callback function pointer.

Param base

TPM peripheral base address.

TPM_TIMEOUT

Max loops to wait for writing register.

When writing MOD CnV CnSC and SC register, driver will wait until register is updated. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

TPM_MAX_COUNTER_VALUE(x)

Help macro to get the max counter value.

struct *_tpm_chnl_pwm_signal_param*

#include <fsl_tpm.h> Options to configure a TPM channel's PWM signal.

Public Members

tpm_chnl_t chnlNumber

TPM channel to configure. In combined mode (available in some SoC's), this represents the channel pair number

tpm_pwm_level_select_t level

PWM output active level select

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=always active signal (100% duty cycle)

uint8_t firstEdgeDelayPercent

Used only in combined PWM mode to generate asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure, leave as 0. Should be specified as percentage of the PWM period, (dutyCyclePercent + firstEdgeDelayPercent) value should be not greater than 100.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

uint8_t deadTimeValue[2]

The dead time value for channel n and n+1 in combined complementary PWM mode. Deadtime insertion is disabled when this value is zero, otherwise deadtime insertion for channel n/n+1 is configured as (deadTimeValue * 4) clock cycles. deadTimeValue's available range is 0 ~ 15.

struct _tpm_dual_edge_capture_param

#include <fsl_tpm.h> TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

Public Members

bool enableSwap

true: Use channel n+1 input, channel n input is ignored; false: Use channel n input, channel n+1 input is ignored

tpm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

tpm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct _tpm_phase_param

#include <fsl_tpm.h> TPM quadrature decode phase parameters.

Public Members

uint32_t phaseFilterVal

Filter value, filter is disabled when the value is zero

tpm_phase_polarity_t phasePolarity

Phase polarity

struct `_tpm_config`

`#include <fsl_tpm.h>` TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the `TPM_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

`tpm_clock_prescale_t` prescale

Select TPM clock prescale value

bool `useGlobalTimeBase`

true: The TPM channels use an external global time base (the local counter still use for generate overflow interrupt and DMA request); false: All TPM channels use the local counter as their timebase

bool `syncGlobalTimeBase`

true: The TPM counter is synchronized to the global time base; false: disabled

`tpm_trigger_select_t` triggerSelect

Input trigger to use for controlling the counter operation

`tpm_trigger_source_t` triggerSource

Decides if we use external or internal trigger.

`tpm_ext_trigger_polarity_t` extTriggerPolarity

when using external trigger source, need selects the polarity of it.

bool `enableDoze`

true: TPM counter is paused in doze mode; false: TPM counter continues in doze mode

bool `enableDebugMode`

true: TPM counter continues in debug mode; false: TPM counter is paused in debug mode

bool `enableReloadOnTrigger`

true: TPM counter is reloaded on trigger; false: TPM counter not reloaded

bool `enableStopOnOverflow`

true: TPM counter stops after overflow; false: TPM counter continues running after overflow

bool `enableStartOnTrigger`

true: TPM counter only starts when a trigger is detected; false: TPM counter starts immediately

bool `enablePauseOnTrigger`

true: TPM counter will pause while trigger remains asserted; false: TPM counter continues running

uint8_t `chnlPolarity`

Defines the input/output polarity of the channels in POL register

2.49 UART: Universal Asynchronous Receiver/Transmitter Driver

2.50 UART DMA Driver

```
void UART__TransferCreateHandleDMA(UART_Type *base, uart_dma_handle_t *handle,
                                   uart_dma_transfer_callback_t callback, void *userData,
                                   dma_handle_t *txDmaHandle, dma_handle_t
                                   *rxDmaHandle)
```

Initializes the UART handle which is used in transactional functions and sets the callback.

Parameters

- base – UART peripheral base address.
- handle – Pointer to the *uart_dma_handle_t* structure.
- callback – UART callback, NULL means no callback.
- userData – User callback function data.
- rxDmaHandle – User requested DMA handle for the RX DMA transfer.
- txDmaHandle – User requested DMA handle for the TX DMA transfer.

```
status_t UART__TransferSendDMA(UART_Type *base, uart_dma_handle_t *handle,
                                uart_transfer_t *xfer)
```

Sends data using DMA.

This function sends data using DMA. This is non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – UART peripheral base address.
- handle – UART handle pointer.
- xfer – UART DMA transfer structure. See *uart_transfer_t*.

Return values

- kStatus_Success – if succeeded; otherwise failed.
- kStatus_UART_TxBusy – Previous transfer ongoing.
- kStatus_InvalidArgument – Invalid argument.

```
status_t UART__TransferReceiveDMA(UART_Type *base, uart_dma_handle_t *handle,
                                   uart_transfer_t *xfer)
```

Receives data using DMA.

This function receives data using DMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – UART peripheral base address.
- handle – Pointer to the *uart_dma_handle_t* structure.
- xfer – UART DMA transfer structure. See *uart_transfer_t*.

Return values

- kStatus_Success – if succeeded; otherwise failed.
- kStatus_UART_RxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

`void UART__TransferAbortSendDMA(UART_Type *base, uart_dma_handle_t *handle)`

Aborts the send data using DMA.

This function aborts the sent data using DMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – Pointer to `uart_dma_handle_t` structure.

`void UART__TransferAbortReceiveDMA(UART_Type *base, uart_dma_handle_t *handle)`

Aborts the received data using DMA.

This function abort receive data which using DMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – Pointer to `uart_dma_handle_t` structure.

`status_t UART__TransferGetSendCountDMA(UART_Type *base, uart_dma_handle_t *handle, uint32_t *count)`

Gets the number of bytes written to UART TX register.

This function gets the number of bytes written to UART TX register by DMA.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus__NoTransferInProgress` – No send in progress.
- `kStatus__InvalidArgument` – Parameter is invalid.
- `kStatus__Success` – Get successfully through the parameter `count`;

`status_t UART__TransferGetReceiveCountDMA(UART_Type *base, uart_dma_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus__NoTransferInProgress` – No receive in progress.
- `kStatus__InvalidArgument` – Parameter is invalid.
- `kStatus__Success` – Get successfully through the parameter `count`;

`void UART__TransferDMAHandleIRQ(UART_Type *base, void *uartDmaHandle)`

UART DMA IRQ handle function.

This function handles the UART transmit complete IRQ request and invoke user callback.

Parameters

- `base` – UART peripheral base address.
- `uartDmaHandle` – UART handle pointer.

`FSL_UART_DMA_DRIVER_VERSION`

UART DMA driver version.

`typedef struct _uart_dma_handle` `uart_dma_handle_t`

`typedef void (*uart_dma_transfer_callback_t)(UART_Type *base, uart_dma_handle_t *handle, status_t status, void *userData)`

UART transfer callback function.

`struct _uart_dma_handle`

`#include <fsl_uart_dma.h>` UART DMA handle.

Public Members

`UART_Type *base`

UART peripheral base address.

`uart_dma_transfer_callback_t` `callback`

Callback function.

`void *userData`

UART callback function parameter.

`size_t rxDataSizeAll`

Size of the data to receive.

`size_t txDataSizeAll`

Size of the data to send out.

`dma_handle_t *txDmaHandle`

The DMA TX channel used.

`dma_handle_t *rxDmaHandle`

The DMA RX channel used.

`volatile uint8_t txState`

TX transfer state.

`volatile uint8_t rxState`

RX transfer state

2.51 UART Driver

`status_t` `UART_Init(UART_Type *base, const uart_config_t *config, uint32_t srcClock_Hz)`

Initializes a UART instance with a user configuration structure and peripheral clock.

This function configures the UART module with the user-defined settings. The user can configure the configuration structure and also get the default configuration by using the `UART_GetDefaultConfig()` function. The example below shows how to use this API to configure UART.

```
uart_config_t uartConfig;  
uartConfig.baudRate_Bps = 115200U;  
uartConfig.parityMode = kUART_ParityDisabled;  
uartConfig.stopBitCount = kUART_OneStopBit;  
uartConfig.txFifoWatermark = 0;  
uartConfig.rxFifoWatermark = 1;  
UART_Init(UART1, &uartConfig, 20000000U);
```

Parameters

- base – UART peripheral base address.
- config – Pointer to the user-defined configuration structure.
- srcClock_Hz – UART clock source frequency in HZ.

Return values

- kStatus_UART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – Status UART initialize succeed

`void UART_Deinit(UART_Type *base)`

Deinitializes a UART instance.

This function waits for TX complete, disables TX and RX, and disables the UART clock.

Parameters

- base – UART peripheral base address.

`void UART_GetDefaultConfig(uart_config_t *config)`

Gets the default configuration structure.

This function initializes the UART configuration structure to a default value. The default values are as follows. `uartConfig->baudRate_Bps = 115200U`; `uartConfig->bitCountPerChar = kUART_8BitsPerChar`; `uartConfig->parityMode = kUART_ParityDisabled`; `uartConfig->stopBitCount = kUART_OneStopBit`; `uartConfig->txFifoWatermark = 0`; `uartConfig->rxFifoWatermark = 1`; `uartConfig->idleType = kUART_IdleTypeStartBit`; `uartConfig->enableTx = false`; `uartConfig->enableRx = false`;

Parameters

- config – Pointer to configuration structure.

`status_t UART_SetBaudRate(UART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)`

Sets the UART instance baud rate.

This function configures the UART module baud rate. This function is used to update the UART module baud rate after the UART module is initialized by the `UART_Init`.

```
UART_SetBaudRate(UART1, 115200U, 20000000U);
```

Parameters

- base – UART peripheral base address.
- baudRate_Bps – UART baudrate to be set.
- srcClock_Hz – UART clock source frequency in Hz.

Return values

- kStatus_UART_BaudrateNotSupport – Baudrate is not support in the current clock source.
- kStatus_Success – Set baudrate succeeded.


```
void UART_Enable9bitMode(UART_Type *base, bool enable)
```

Enable 9-bit data mode for UART.

This function set the 9-bit mode for UART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – UART peripheral base address.
- enable – true to enable, false to disable.

```
static inline void UART_SetMatchAddress(UART_Type *base, uint8_t address1, uint8_t address2)
```

Set the UART slave address.

This function configures the address for UART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any UART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – UART peripheral base address.
- address1 – UART slave address 1.
- address2 – UART slave address 2.

```
static inline void UART_EnableMatchAddress(UART_Type *base, bool match1, bool match2)
```

Enable the UART match address feature.

Parameters

- base – UART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void UART_Set9thTransmitBit(UART_Type *base)
```

Set UART 9th transmit bit.

Parameters

- base – UART peripheral base address.

```
static inline void UART_Clear9thTransmitBit(UART_Type *base)
```

Clear UART 9th transmit bit.

Parameters

- base – UART peripheral base address.

```
uint32_t UART_GetStatusFlags(UART_Type *base)
```

Gets UART status flags.

This function gets all UART status flags. The flags are returned as the logical OR value of the enumerators `_uart_flags`. To check a specific status, compare the return value with enumerators in `_uart_flags`. For example, to check whether the TX is empty, do the following.

```
if (kUART_TxDataRegEmptyFlag & UART_GetStatusFlags(UART1))
{
    ...
}
```

Parameters

- base – UART peripheral base address.

Returns

UART status flags which are ORed by the enumerators in the `_uart_flags`.

`status_t` UART_ClearStatusFlags(UART_Type *base, uint32_t mask)

Clears status flags with the provided mask.

This function clears UART status flags with a provided mask. An automatically cleared flag can't be cleared by this function. These flags can only be cleared or set by hardware. `kUART_TxDataRegEmptyFlag`, `kUART_TransmissionCompleteFlag`, `kUART_RxDataRegFullFlag`, `kUART_RxActiveFlag`, `kUART_NoiseErrorInRxDataRegFlag`, `kUART_ParityErrorInRxDataRegFlag`, `kUART_TxFifoEmptyFlag`, `kUART_RxFifoEmptyFlag`

Note: that this API should be called when the Tx/Rx is idle. Otherwise it has no effect.

Parameters

- base – UART peripheral base address.
- mask – The status flags to be cleared; it is logical OR value of `_uart_flags`.

Return values

- `kStatus_UART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask is cleared.

`void` UART_EnableInterrupts(UART_Type *base, uint32_t mask)

Enables UART interrupts according to the provided mask.

This function enables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See `_uart_interrupt_enable`. For example, to enable TX empty interrupt and RX full interrupt, do the following.

```
UART_EnableInterrupts(UART1, kUART_TxDataRegEmptyInterruptEnable | kUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – UART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_uart_interrupt_enable`.

`void` UART_DisableInterrupts(UART_Type *base, uint32_t mask)

Disables the UART interrupts according to the provided mask.

This function disables the UART interrupts according to the provided mask. The mask is a logical OR of enumeration members. See `_uart_interrupt_enable`. For example, to disable TX empty interrupt and RX full interrupt do the following.

```
UART_DisableInterrupts(UART1, kUART_TxDataRegEmptyInterruptEnable | kUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – UART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_uart_interrupt_enable`.

`uint32_t UART_GetEnabledInterrupts(UART_Type *base)`

Gets the enabled UART interrupts.

This function gets the enabled UART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_uart_interrupt_enable`. To check a specific interrupts enable status, compare the return value with enumerators in `_uart_interrupt_enable`. For example, to check whether TX empty interrupt is enabled, do the following.

```
uint32_t enabledInterrupts = UART_GetEnabledInterrupts(UART1);

if (kUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – UART peripheral base address.

Returns

UART interrupt flags which are logical OR of the enumerators in `_uart_interrupt_enable`.

`static inline uint32_t UART_GetDataRegisterAddress(UART_Type *base)`

Gets the UART data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – UART peripheral base address.

Returns

UART data register addresses which are used both by the transmitter and the receiver.

`static inline void UART_EnableTxDMA(UART_Type *base, bool enable)`

Enables or disables the UART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `S1[TDRE]`, to generate the DMA requests.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

`static inline void UART_EnableRxDMA(UART_Type *base, bool enable)`

Enables or disables the UART receiver DMA.

This function enables or disables the receiver data register full flag, `S1[RDRF]`, to generate DMA requests.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

`static inline void UART_EnableTx(UART_Type *base, bool enable)`

Enables or disables the UART transmitter.

This function enables or disables the UART transmitter.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void UART__EnableRx(UART_Type *base, bool enable)
```

Enables or disables the UART receiver.

This function enables or disables the UART receiver.

Parameters

- base – UART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void UART__WriteByte(UART_Type *base, uint8_t data)
```

Writes to the TX register.

This function writes data to the TX register directly. The upper layer must ensure that the TX register is empty or TX FIFO has empty room before calling this function.

Parameters

- base – UART peripheral base address.
- data – The byte to write.

```
static inline uint8_t UART__ReadByte(UART_Type *base)
```

Reads the RX register directly.

This function reads data from the RX register directly. The upper layer must ensure that the RX register is full or that the TX FIFO has data before calling this function.

Parameters

- base – UART peripheral base address.

Returns

The byte read from UART data register.

```
static inline uint8_t UART__GetRxFifoCount(UART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – UART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t UART__GetTxFifoCount(UART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – UART peripheral base address.

Returns

tx FIFO data count.

```
void UART__SendAddress(UART_Type *base, uint8_t address)
```

Transmit an address frame in 9-bit data mode.

Parameters

- base – UART peripheral base address.
- address – UART slave address.

status_t UART_WriteBlocking(UART_Type *base, const uint8_t *data, size_t length)

Writes to the TX register using a blocking method.

This function polls the TX register, waits for the TX register to be empty or for the TX FIFO to have room and writes data to the TX buffer.

Parameters

- base – UART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t UART_ReadBlocking(UART_Type *base, uint8_t *data, size_t length)

Read RX data register using a blocking method.

This function polls the RX register, waits for the RX register to be full or for RX FIFO to have data, and reads data from the TX register.

Parameters

- base – UART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_UART_RxHardwareOverrun – Receiver overrun occurred while receiving data.
- kStatus_UART_NoiseError – A noise error occurred while receiving data.
- kStatus_UART_FramingError – A framing error occurred while receiving data.
- kStatus_UART_ParityError – A parity error occurred while receiving data.
- kStatus_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

void UART_TransferCreateHandle(UART_Type *base, *uart_handle_t* *handle,
uart_transfer_callback_t callback, void *userData)

Initializes the UART handle.

This function initializes the UART handle which can be used for other UART transactional APIs. Usually, for a specified UART instance, call this API once to get the initialized handle.

Parameters

- base – UART peripheral base address.
- handle – UART handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

void UART_TransferStartRingBuffer(UART_Type *base, *uart_handle_t* *handle, uint8_t
*ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received are stored into the ring buffer even when the user doesn't call the `UART_TransferReceiveNonBlocking()` API. If data is already received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if `ringBufferSize` is 32, only 31 bytes are used for saving data.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `ringBuffer` – Start address of the ring buffer for background receiving. Pass `NULL` to disable the ring buffer.
- `ringBufferSize` – Size of the ring buffer.

`void UART_TransferStopRingBuffer(UART_Type *base, uart_handle_t *handle)`

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`size_t UART_TransferGetRxRingBufferLength(uart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- `handle` – UART handle pointer.

Returns

Length of received data in RX ring buffer.

`status_t UART_TransferSendNonBlocking(UART_Type *base, uart_handle_t *handle, uart_transfer_t *xfer)`

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in the ISR, the UART driver calls the callback function and passes the `kStatus_UART_TxIdle` as status parameter.

Note: The `kStatus_UART_TxIdle` is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out. Before disabling the TX, check the `kUART_TransmissionCompleteFlag` to ensure that the TX is finished.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `xfer` – UART transfer structure. See `uart_transfer_t`.

Return values

- `kStatus_Success` – Successfully start the data transmission.
- `kStatus_UART_TxBusy` – Previous transmission still not finished; data not all written to TX register yet.
- `kStatus_InvalidArgument` – Invalid argument.

`void UART_TransferAbortSend(UART_Type *base, uart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. The user can get the `remainBytes` to find out how many bytes are not sent out.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`status_t UART_TransferGetSendCount(UART_Type *base, uart_handle_t *handle, uint32_t *count)`

Gets the number of bytes sent out to bus.

This function gets the number of bytes sent out to bus by using the interrupt method.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – The parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t UART_TransferReceiveNonBlocking(UART_Type *base, uart_handle_t *handle, uart_transfer_t *xfer, size_t *receivedBytes)`

Receives a buffer of data using an interrupt method.

This function receives data using an interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough to read, the receive request is saved by the UART driver. When the new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer. The 5 bytes are copied to the `xfer->data` and this function returns with the parameter `receivedBytes` set to 5. For the left 5 bytes, newly arrived data is saved from the `xfer->data[5]`. When 5 bytes are received, the UART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to the `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `xfer` – UART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into transmit queue.
- `kStatus_UART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void UART_TransferAbortReceive(UART_Type *base, uart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to know how many bytes are not received yet.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.

`status_t UART_TransferGetReceiveCount(UART_Type *base, uart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – UART peripheral base address.
- `handle` – UART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter `count`;

`status_t UART_EnableTxFIFO(UART_Type *base, bool enable)`

Enables or disables the UART Tx FIFO.

This function enables or disables the UART Tx FIFO.

param `base` UART peripheral base address. param `enable` true to enable, false to disable. retval `kStatus_Success` Successfully turn on or turn off Tx FIFO. retval `kStatus_Fail` Fail to turn on or turn off Tx FIFO.

`status_t UART_EnableRxFIFO(UART_Type *base, bool enable)`

Enables or disables the UART Rx FIFO.

This function enables or disables the UART Rx FIFO.

param `base` UART peripheral base address. param `enable` true to enable, false to disable. retval `kStatus_Success` Successfully turn on or turn off Rx FIFO. retval `kStatus_Fail` Fail to turn on or turn off Rx FIFO.

`static inline void UART_SetRxFifoWatermark(UART_Type *base, uint8_t water)`

Sets the rx FIFO watermark.

Parameters

- `base` – UART peripheral base address.
- `water` – Rx FIFO watermark.


```
static inline void UART_SetTxFifoWatermark(UART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – UART peripheral base address.
- water – Tx FIFO watermark.

```
void UART_TransferHandleIRQ(UART_Type *base, void *irqHandle)
```

UART IRQ handle function.

This function handles the UART transmit and receive IRQ request.

Parameters

- base – UART peripheral base address.
- irqHandle – UART handle pointer.

```
void UART_TransferHandleErrorIRQ(UART_Type *base, void *irqHandle)
```

UART Error IRQ handle function.

This function handles the UART error IRQ request.

Parameters

- base – UART peripheral base address.
- irqHandle – UART handle pointer.

```
FSL_UART_DRIVER_VERSION
```

UART driver version.

Error codes for the UART driver.

Values:

```
enumerator kStatus_UART_TxBusy
```

Transmitter is busy.

```
enumerator kStatus_UART_RxBusy
```

Receiver is busy.

```
enumerator kStatus_UART_TxIdle
```

UART transmitter is idle.

```
enumerator kStatus_UART_RxIdle
```

UART receiver is idle.

```
enumerator kStatus_UART_TxWatermarkTooLarge
```

TX FIFO watermark too large

```
enumerator kStatus_UART_RxWatermarkTooLarge
```

RX FIFO watermark too large

```
enumerator kStatus_UART_FlagCannotClearManually
```

UART flag can't be manually cleared.

```
enumerator kStatus_UART_Error
```

Error happens on UART.

```
enumerator kStatus_UART_RxRingBufferOverrun
```

UART RX software ring buffer overrun.

enumerator kStatus_UART_RxHardwareOverrun
UART RX receiver overrun.

enumerator kStatus_UART_NoiseError
UART noise error.

enumerator kStatus_UART_FramingError
UART framing error.

enumerator kStatus_UART_ParityError
UART parity error.

enumerator kStatus_UART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_UART_IdleLineDetected
UART IDLE line detected.

enumerator kStatus_UART_Timeout
UART times out.

enum _uart_parity_mode
UART parity mode.

Values:

enumerator kUART_ParityDisabled
Parity disabled

enumerator kUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _uart_stop_bit_count
UART stop bit count.

Values:

enumerator kUART_OneStopBit
One stop bit

enumerator kUART_TwoStopBit
Two stop bits

enum _uart_idle_type_select
UART idle type select.

Values:

enumerator kUART_IdleTypeStartBit
Start counting after a valid start bit.

enumerator kUART_IdleTypeStopBit
Start counting after a stop bit.

enum _uart_interrupt_enable
UART interrupt configuration structure, default settings all disabled.
This structure contains the settings for all of the UART interrupt configurations.

Values:

enumerator kUART_LinBreakInterruptEnable
LIN break detect interrupt.

enumerator kUART_RxActiveEdgeInterruptEnable
RX active edge interrupt.

enumerator kUART_TxDataRegEmptyInterruptEnable
Transmit data register empty interrupt.

enumerator kUART_TransmissionCompleteInterruptEnable
Transmission complete interrupt.

enumerator kUART_RxDataRegFullInterruptEnable
Receiver data register full interrupt.

enumerator kUART_IdleLineInterruptEnable
Idle line interrupt.

enumerator kUART_RxOverrunInterruptEnable
Receiver overrun interrupt.

enumerator kUART_NoiseErrorInterruptEnable
Noise error flag interrupt.

enumerator kUART_FramingErrorInterruptEnable
Framing error flag interrupt.

enumerator kUART_ParityErrorInterruptEnable
Parity error flag interrupt.

enumerator kUART_RxFifoOverflowInterruptEnable
RX FIFO overflow interrupt.

enumerator kUART_TxFifoOverflowInterruptEnable
TX FIFO overflow interrupt.

enumerator kUART_RxFifoUnderflowInterruptEnable
RX FIFO underflow interrupt.

enumerator kUART_AllInterruptsEnable

UART status flags.

This provides constants for the UART status flags for use in the UART functions.

Values:

enumerator kUART_TxDataRegEmptyFlag
TX data register empty flag.

enumerator kUART_TransmissionCompleteFlag
Transmission complete flag.

enumerator kUART_RxDataRegFullFlag
RX data register full flag.

enumerator kUART_IdleLineFlag
Idle line detect flag.

enumerator kUART_RxOverrunFlag
RX overrun flag.

enumerator `kUART_NoiseErrorFlag`

RX takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator `kUART_FramingErrorFlag`

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator `kUART_ParityErrorFlag`

If parity enabled, sets upon parity error detection

enumerator `kUART_LinBreakFlag`

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator `kUART_RxActiveEdgeFlag`

RX pin active edge interrupt flag, sets when active edge detected

enumerator `kUART_RxActiveFlag`

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator `kUART_NoiseErrorInRxDataRegFlag`

Noisy bit, sets if noise detected.

enumerator `kUART_ParityErrorInRxDataRegFlag`

Parity bit, sets if parity error detected.

enumerator `kUART_TxFifoEmptyFlag`

TXEMPTY bit, sets if TX buffer is empty

enumerator `kUART_RxFifoEmptyFlag`

RXEMPTY bit, sets if RX buffer is empty

enumerator `kUART_TxFifoOverflowFlag`

TXOF bit, sets if TX buffer overflow occurred

enumerator `kUART_RxFifoOverflowFlag`

RXOF bit, sets if receive buffer overflow

enumerator `kUART_RxFifoUnderflowFlag`

RXUF bit, sets if receive buffer underflow

typedef enum `_uart_parity_mode` `uart_parity_mode_t`

UART parity mode.

typedef enum `_uart_stop_bit_count` `uart_stop_bit_count_t`

UART stop bit count.

typedef enum `_uart_idle_type_select` `uart_idle_type_select_t`

UART idle type select.

typedef struct `_uart_config` `uart_config_t`

UART configuration structure.

typedef struct `_uart_transfer` `uart_transfer_t`

UART transfer structure.

typedef struct `_uart_handle` `uart_handle_t`

typedef void (`*uart_transfer_callback_t`)(UART_Type *base, `uart_handle_t` *handle, `status_t` status, void *userData)

UART transfer callback function.

typedef void (`*uart_isr_t`)(UART_Type *base, void *handle)

`void *s_uartHandle[]`

Pointers to uart handles for each instance.

`const IRQn_Type s_uartIRQ[]`

`uart_isr_t s_uartIsr`

Pointer to uart IRQ handler for each instance.

`uint32_t UART_GetInstance(UART_Type *base)`

Get the UART instance from peripheral base address.

Parameters

- `base` – UART peripheral base address.

Returns

UART instance.

`UART_RETRY_TIMES`

Retry times for waiting flag.

`struct __uart_config`

#include <fsl_uart.h> UART configuration structure.

Public Members

`uint32_t baudRate_Bps`

UART baud rate

`uart_parity_mode_t parityMode`

Parity mode, disabled (default), even, odd

`uart_stop_bit_count_t stopBitCount`

Number of stop bits, 1 stop bit (default) or 2 stop bits

`uint8_t txFifoWatermark`

TX FIFO watermark

`uint8_t rxFifoWatermark`

RX FIFO watermark

`bool enableRxRTS`

RX RTS enable

`bool enableTxCTS`

TX CTS enable

`uart_idle_type_select_t idleType`

IDLE type select.

`bool enableTx`

Enable TX

`bool enableRx`

Enable RX

`struct __uart_transfer`

#include <fsl_uart.h> UART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct __uart_handle

#include <fsl_uart.h> UART handle structure.

Public Members

const uint8_t *volatile txData

Address of remaining data to send.

volatile size_t txDataSize

Size of the remaining data to send.

size_t txDataSizeAll

Size of the data to send out.

uint8_t *volatile rxData

Address of remaining data to receive.

volatile size_t rxDataSize

Size of the remaining data to receive.

size_t rxDataSizeAll

Size of the data to receive.

uint8_t *rxRingBuffer

Start address of the receiver ring buffer.

size_t rxRingBufferSize

Size of the ring buffer.

volatile uint16_t rxRingBufferHead

Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail

Index for the user to get data from the ring buffer.

uart_transfer_callback_t callback

Callback function.

void *userData

UART callback function parameter.

volatile uint8_t txState

TX transfer state.

volatile uint8_t rxState

RX transfer state

union __unnamed28__

Public Members

uint8_t *data

The buffer of data to be transfer.

uint8_t *rxData

The buffer to receive data.

```
const uint8_t *txData
```

The buffer of data to be sent.

2.52 VREF: Voltage Reference Driver

```
status_t VREF_Init(VREF_Type *base, const vref_config_t *config)
```

Enables the clock gate and configures the VREF module according to the configuration structure.

This function must be called before calling all other VREF driver functions, read/write registers, and configurations with user-defined settings. The example below shows how to set up `vref_config_t` parameters and how to call the `VREF_Init` function by passing in these parameters. This is an example.

```
vref_config_t vrefConfig;
vrefConfig.bufferMode = kVREF_ModeHighPowerBuffer;
vrefConfig.enableExternalVoltRef = false;
vrefConfig.enableLowRef = false;
VREF_Init(VREF, &vrefConfig);
```

Parameters

- `base` – VREF peripheral address.
- `config` – Pointer to the configuration structure.

Return values

- `kStatus_Success` – run success.
- `kStatus_Timeout` – timeout occurs.

```
void VREF_Deinit(VREF_Type *base)
```

Stops and disables the clock for the VREF module.

This function should be called to shut down the module. This is an example.

```
vref_config_t vrefUserConfig;
VREF_Init(VREF);
VREF_GetDefaultConfig(&vrefUserConfig);
...
VREF_Deinit(VREF);
```

Parameters

- `base` – VREF peripheral address.

```
void VREF_GetDefaultConfig(vref_config_t *config)
```

Initializes the VREF configuration structure.

This function initializes the VREF configuration structure to default values. This is an example.

```
vrefConfig->bufferMode = kVREF_ModeHighPowerBuffer;
vrefConfig->enableExternalVoltRef = false;
vrefConfig->enableLowRef = false;
```

Parameters

- `config` – Pointer to the initialization structure.

status_t VREF_SetTrimVal(VREF_Type *base, uint8_t trimValue)

Sets a TRIM value for the reference voltage.

This function sets a TRIM value for the reference voltage. Note that the TRIM value maximum is 0x3F.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

static inline uint8_t VREF_GetTrimVal(VREF_Type *base)

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the TRM register.

Parameters

- base – VREF peripheral address.

Returns

Six-bit value of trim setting.

status_t VREF_SetTrim2V1Val(VREF_Type *base, uint8_t trimValue)

Sets a TRIM value for the reference voltage (2V1).

This function sets a TRIM value for the reference voltage (2V1). Note that the TRIM value maximum is 0x3F.

Parameters

- base – VREF peripheral address.
- trimValue – Value of the trim register to set the output reference voltage (maximum 0x3F (6-bit)).

Return values

- kStatus_Success – run success.
- kStatus_Timeout – timeout occurs.

static inline uint8_t VREF_GetTrim2V1Val(VREF_Type *base)

Reads the value of the TRIM meaning output voltage (2V1).

This function gets the TRIM value from the VREF_TRM4 register.

Parameters

- base – VREF peripheral address.

Returns

Six-bit value of trim setting.

status_t VREF_SetLowReferenceTrimVal(VREF_Type *base, uint8_t trimValue)

Sets the TRIM value for the low voltage reference.

This function sets the TRIM value for low reference voltage. Note the following.

- The TRIM value maximum is 0x05U
- The values 111b and 110b are not valid/allowed.

Parameters

- `base` – VREF peripheral address.
- `trimValue` – Value of the trim register to set output low reference voltage (maximum 0x05U (3-bit)).

Return values

- `kStatus_Success` – run success.
- `kStatus_Timeout` – timeout occurs.

static inline uint8_t VREF_GetLowReferenceTrimVal(VREF_Type *base)

Reads the value of the TRIM meaning output voltage.

This function gets the TRIM value from the VREFL_TRM register.

Parameters

- `base` – VREF peripheral address.

Returns

Three-bit value of the trim setting.

FSL_VREF_DRIVER_VERSION

Version 2.1.3.

VREF_INTERNAL_VOLTAGE_STABLE_TIMEOUT

Max loops to wait for VREF internal voltage stable.

This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

enum _vref_buffer_mode

VREF modes.

Values:

enumerator kVREF_ModeBandgapOnly

Bandgap on only, for stabilization and startup

enumerator kVREF_ModeHighPowerBuffer

High-power buffer mode enabled

enumerator kVREF_ModeLowPowerBuffer

Low-power buffer mode enabled

typedef enum _vref_buffer_mode vref_buffer_mode_t

VREF modes.

typedef struct _vref_config vref_config_t

The description structure for the VREF module.

VREF_SC_MODE_LV

VREF_SC_REGEN

VREF_SC_VREFEN

VREF_SC_ICOMPEN

VREF_SC_REGEN_MASK

VREF_SC_VREFST_MASK

VREF_SC_VREFEN_MASK

VREF_SC_MODE_LV_MASK

VREF_SC_ICOMPEN_MASK

TRM

VREF_TRM_TRIM

VREF_TRM_CHOPEN_MASK

VREF_TRM_TRIM_MASK

VREF_TRM_CHOPEN_SHIFT

VREF_TRM_TRIM_SHIFT

VREF_SC_MODE_LV_SHIFT

VREF_SC_REGEN_SHIFT

VREF_SC_VREFST_SHIFT

VREF_SC_ICOMPEN_SHIFT

struct __vref_config

#include <fsl_vref.h> The description structure for the VREF module.

Public Members

vref_buffer_mode_t bufferMode

Buffer mode selection

bool enableLowRef

Set VREFL (0.4 V) reference buffer enable or disable

bool enableExternalVoltRef

Select external voltage reference or not (internal)

bool enable2V1VoltRef

Enable Internal Voltage Reference (2.1V)

Chapter 3

Middleware

3.1 File System

3.1.1 FatFs

MCUXpresso SDK : mcuxsdk-middleware-fatfs

Overview This repository is for FatFs middleware delivery and it contains the components officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository (mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [FatFs - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution Contributions are not currently accepted. Guidelines to contribute will be posted in the future.

Repo Specific Content This is MCUXpresso SDK fork of FatFs (FAT file system created by ChaN). Official documentation is available at <http://elm-chan.org/fsw/ff/>

MCUXpresso version is extending original content by following hardware specific porting layers:

- mmc_disk
- nand_disk
- ram_disk
- sd_disk
- sdspi_disk
- usb_disk

Changelog FatFs

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#)

[R0.16_rev0]

- Upgraded to version 0.16
- Applied patch <https://elm-chan.org/fsw/ff/patch/ff16p1.diff>
- Applied patch <https://elm-chan.org/fsw/ff/patch/ffunicode.zip>
- Make lb and hb variables conditional. Fix 'unused variable' issue:
 - `ffunicode.c:10622:28: error: unused variable 'lb'`
 - `ffunicode.c:10622:7: error: unused variable 'hb'`

[R0.15_rev0]

- Upgraded to version 0.15
- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev1]

- Applied patches from <http://elm-chan.org/fsw/ff/patches.html>

[R0.14b_rev0]

- Upgraded to version 0.14b

[R0.14a_rev0]

- Upgraded to version 0.14a
- Applied patch `ff14a_p1.diff` and `ff14a_p2.diff`

[R0.14_rev0]

- Upgraded to version 0.14
- Applied patch `ff14_p1.diff` and `ff14_p2.diff`

[R0.13c_rev0]

- Upgraded to version 0.13c
- Applied patches `ff_13c_p1.diff`, `ff_13c_p2.diff`, `ff_13c_p3.diff` and `ff_13c_p4.diff`.

[R0.13b_rev0]

- Upgraded to version 0.13b

[R0.13a_rev0]

- Upgraded to version 0.13a. Added patch `ff_13a_p1.diff`.

[R0.12c_rev1]

- Add NAND disk support.

[R0.12c_rev0]

- Upgraded to version 0.12c and applied patches ff_12c_p1.diff and ff_12c_p2.diff.

[R0.12b_rev0]

- Upgraded to version 0.12b.

[R0.11a]

- Added glue functions for low-level drivers (SDHC, SDSPI, RAM, MMC). Modified diskio.c.
- Added RTOS wrappers to make FatFs thread safe. Modified syscall.c.
- Renamed ffconf.h to ffconf_template.h. Each application should contain its own ffconf.h.
- Included ffconf.h into diskio.c to enable the selection of physical disk from ffconf.h by macro definition.
- Conditional compilation of physical disk interfaces in diskio.c.

3.2 Motor Control

3.2.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space

while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called `FMSTR_TRANSPORT` with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The `mcuxsdk` folder contains implementations which use MCUXpresso

SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)
- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer's physical or virtual COM port. The typical transmission speed is 115200 bps.
- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER “middleware” driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.
- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).

- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.
- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
 - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
 - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
 - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
 - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When

the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- ***src/drivers/[sdk]/serial*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- ***src/drivers/[sdk]/can*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- ***src/drivers/[sdk]/network*** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.

- *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR    [0|1]
#define FMSTR_SHORT_INTR   [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- FMSTR_SERIAL - serial communication protocol
- FMSTR_CAN - using CAN communication
- FMSTR_PDBDM - using packet-driven BDM communication

- **FMSTR_NET** - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as **FMSTR_SERIAL_DRV**. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_QUEUE_SIZE

```
#define FMSTR_COMM_QUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetCanBaseAddress()` to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with `FMSTR_CAN_EXTID` bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options**FMSTR_DISABLE**

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options**FMSTR_USE_SCOPE**

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options**FMSTR_USE_RECORDER**

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.
Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature. Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options**FMSTR_USE_TSA**

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see [Driver interrupt modes](#)), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the `freemaster_cfg.h` file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: `freemaster.h`
- Implementation: `freemaster_protocol.c`

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the [FMSTR_Init](#) function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see [Driver interrupt modes](#)). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the [FMSTR_Poll](#) function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the FMSTR_Poll function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the FMSTR_COMM_RQUEUE_SIZE macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see [Driver interrupt modes](#)), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(<i>m,n</i>)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(<i>m,n</i>)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(<i>name</i>)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()
```

```
FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmrstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)
```

```
/* Directory entry applies to all subsequent MEMFILE entries */
```

```
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()

```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```

FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);

```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
 - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
 - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the *FMSTR_USE_TSA_DYNAMIC* configuration option and when the *FMSTR_SetUpTsaBuff* function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the *FMSTR_APPCMDRESULT_NOCMD* constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the *FMSTR_AppCmdAck* call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The *FMSTR_GetAppCmd* function does not report the commands for which a callback handler function exists. If the *FMSTR_GetAppCmd* function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns *FMSTR_APPCMDRESULT_NOCMD*.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↳PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the *nGranularity* value equal to the *nLength* value, all data are considered as one chunk which is either written successfully as a whole or not at all. The *nGranularity* value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables. By default, this is defined as <i>FM-STR_SIZE</i> .
<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors. By default, this is defined as <i>FM-STR_SIZE</i> .

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object. Generally, this is a pointer to a void type.
<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data. Generally, this is an unsigned 8-bit or 16-bit type.
<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data. This is used to store the data buffer sizes.
<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function. See FM-STR_PipeOpen for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FMSTR_U16</i>	Unsigned 16-bit integer.
<i>FMSTR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FMSTR_S16</i>	Signed 16-bit integer.
<i>FMSTR_S32</i>	Signed 32-bit integer.
<i>FMSTR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FMSTR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FMSTR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FMSTR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FMSTR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FMSTR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.3 MultiCore

3.3.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 26.03.00.

This software package contains components for efficient work with multicore devices as well as for the multiprocessor communication.

What is new

- eRPC [CHANGELOG](#)
- RPPMsg-Lite [CHANGELOG](#)
- MCMgr [CHANGELOG](#)
- Supported evaluation boards (multicore examples):
 - LPCXpresso55S69
 - FRDM-K32L3A6
 - MIMXRT1170-EVKB
 - MIMXRT1160-EVK
 - MIMXRT1180-EVK
 - MCX-N5XX-EVK
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - KW47-EVK
 - KW47-LOC
 - FRDM-MCXW72
 - MCX-W72-EVK
 - FRDM-IMXRT1186
- Supported evaluation boards (multiprocessor examples):
 - LPCXpresso55S36
 - FRDM-K22F
 - FRDM-K32L2B
 - MIMXRT685-EVK
 - MIMXRT1170-EVKB
 - MIMXRT1180
 - FRDM-MCXN236
 - FRDM-MCXC242
 - FRDM-MCXC444
 - MCX-N9XX-EVK
 - FRDM-MCXN947
 - MIMXRT700-EVK
 - FRDM-IMXRT1186

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: [Development tools](#)

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable	Location
Multicore SDK location	<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation	<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component	<MCSDK_dir>/erpc/
Multicore Manager component	<MCSDK_dir>/mcmgr/
RPMMsg-Lite	<MCSDK_dir>/rpmsg_lite/
Multicore demo applications	<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.

The following multicore demo applications are located together with other MCUXpresso SDK examples in the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_dsp
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.

The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in


the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

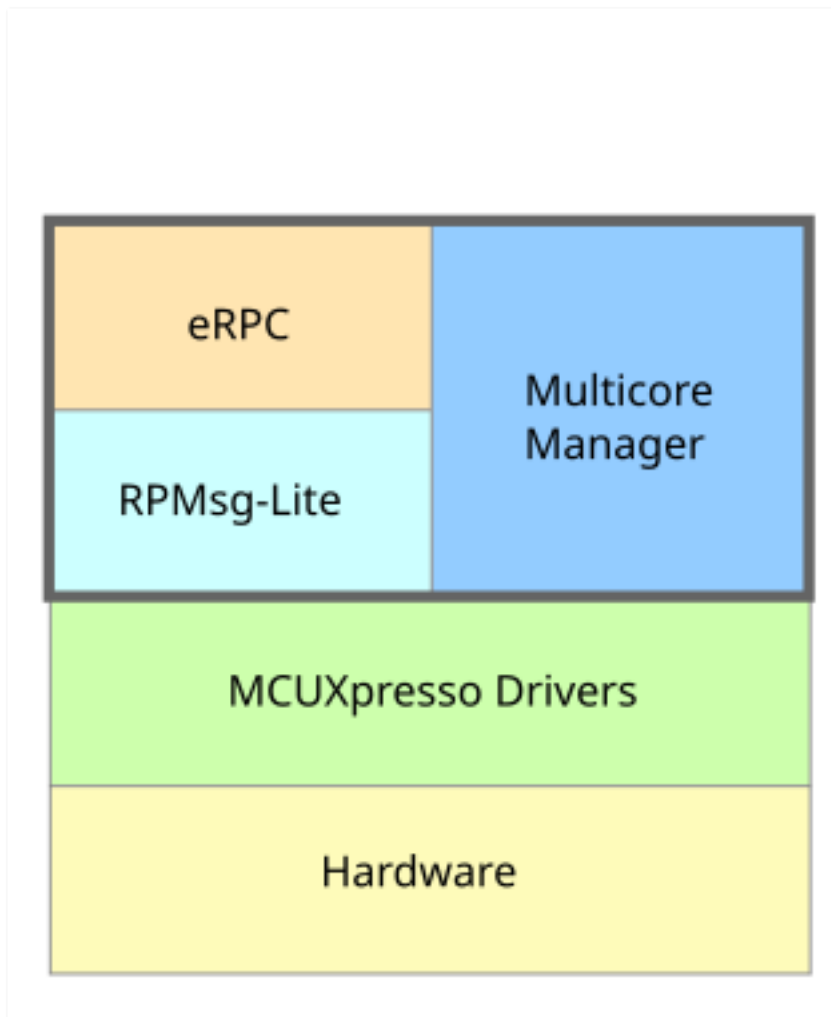


All the MCSDK-related files are located in `<MCUXpressoSDK_install_dir>/middleware/multicore` folder.

For supported toolchain versions, see the *Multicore SDK v26.03.00 Release Notes* (document MCS-DKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.


Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RPMsg-Lite):** Inter-Processor Communication library.

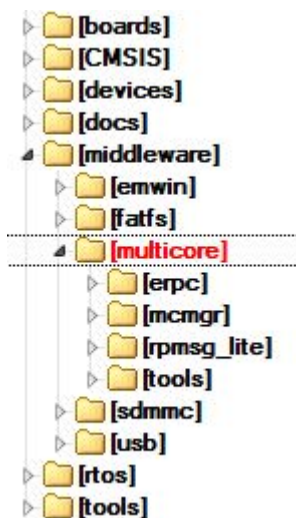

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TPC/IP, UART, and so on). The server unmarshals the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

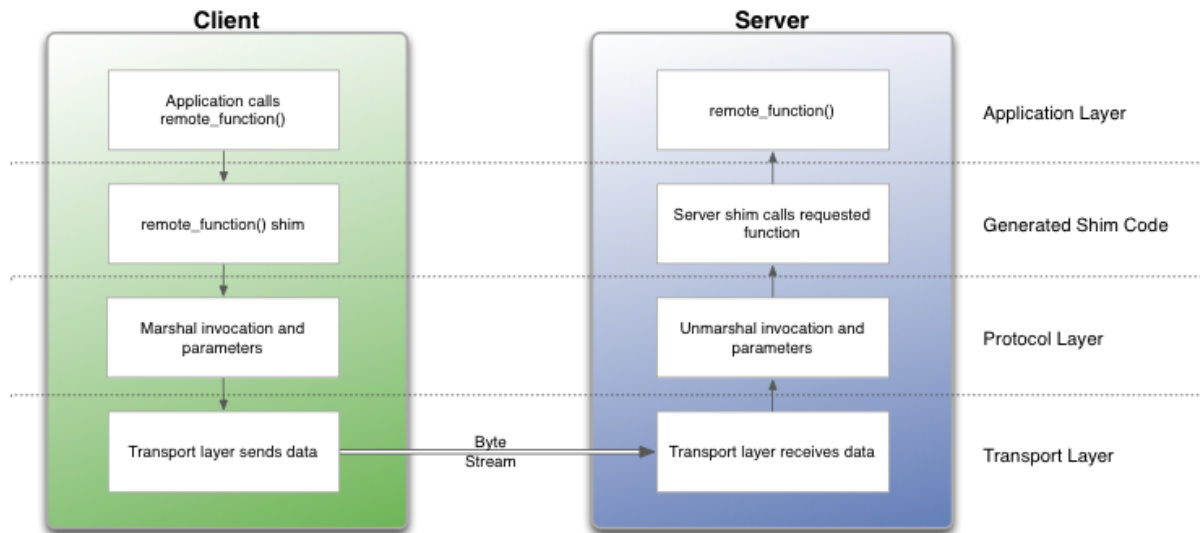

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc` folder. For detailed information about the eRPC, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr` folder. For detailed information about the MCMGR library, see the documentation available in the `<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc` folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.

- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite` folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/doc` folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location		Folder
Multicore projects	example	<code><MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/</code>
Multiprocessor projects	example	<code><MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/</code>

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[26.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.1.0
 - RPMsg-Lite v5.4.0

[25.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0

- eRPC generator (erpcgen) v1.14.0
- Multicore Manager (MCMgr) v5.0.2
- RPSMsg-Lite v5.3.0

[25.09.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.1
 - RPSMsg-Lite v5.2.1

[25.06.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.14.0
 - eRPC generator (erpcgen) v1.14.0
 - Multicore Manager (MCMgr) v5.0.0
 - RPSMsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.7
 - RPSMsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.6
 - RPSMsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.13.0
 - eRPC generator (erpcgen) v1.13.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.12.0
 - eRPC generator (erpcgen) v1.12.0
 - Multicore Manager (MCMgr) v4.1.5
 - RPSMsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.11.0
 - eRPC generator (erpcgen) v1.11.0
 - Multicore Manager (MCMgr) v4.1.4
 - RPSMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.10.0
 - eRPC generator (erpcgen) v1.10.0
 - Multicore Manager (MCMgr) v4.1.3
 - RPSMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.1
 - eRPC generator (erpcgen) v1.9.1
 - Multicore Manager (MCMgr) v4.1.2
 - RPSMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.9.0
 - eRPC generator (erpcgen) v1.9.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.1
 - eRPC generator (erpcgen) v1.8.1
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.8.0
 - eRPC generator (erpcgen) v1.8.0
 - Multicore Manager (MCMgr) v4.1.1
 - RPSMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.4
 - eRPC generator (erpcgen) v1.7.4
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.3
 - eRPC generator (erpcgen) v1.7.3
 - Multicore Manager (MCMgr) v4.1.0
 - RPSMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.2
 - eRPC generator (erpcgen) v1.7.2
 - Multicore Manager (MCMgr) v4.0.3
 - RPSMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.1
 - eRPC generator (erpcgen) v1.7.1
 - Multicore Manager (MCMgr) v4.0.2
 - RPSMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.7.0
 - eRPC generator (erpcgen) v1.7.0
 - Multicore Manager (MCMgr) v4.0.1
 - RPSMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.6.0
 - eRPC generator (erpcgen) v1.6.0
 - Multicore Manager (MCMgr) v4.0.0
 - RPSMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.5.0
 - eRPC generator (erpcgen) v1.5.0
 - Multicore Manager (MCMgr) v3.0.0
 - RPSMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.4.0
 - eRPC generator (erpcgen) v1.4.0
 - Multicore Manager (MCMgr) v2.0.1
 - RPSMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.3.0
 - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.2.0
 - eRPC generator (erpcgen) v1.2.0
 - Multicore Manager (MCMgr) v2.0.0
 - RPSMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.1.0
 - Multicore Manager (MCMgr) v1.1.0
 - Open-AMP / RPSMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
 - embedded Remote Procedure Call (eRPC) v1.0.0
 - Multicore Manager (MCMgr) v1.0.0
 - Open-AMP / RPMMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components**RPMSG-Lite****MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite**

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [RPMSG-Lite - Documentation](#) to review details on the contents in this sub-repo.

For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMMsg) protocol. The RPMMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (<https://github.com/OpenAMP/open-amp>), the RPMMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMMsg-Lite.

The RPMMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For overview please read RPMSG-Lite VirtIO Overview.

For RPMSG-Lite Design Considerations please read RPMSG-Lite Design Considerations.

Motivation to create RPMsg-Lite There are multiple reasons why RPMsg-Lite was developed. One reason is the need for the small footprint of the RPMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPMsg implementation.

RPMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.


Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPMsg implementation and new RPMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPMsg / Release (reference)	5547	456 + dynamic
RPMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%


Implementation The implementation of RPMsg-Lite can be divided into three sub-components, from which two are optional. The core component is situated in `rpmsg_lite.c`. Two optional components are used to implement a blocking receive API (in `rpmsg_queue.c`) and dynamic “named” endpoint creation and deletion announcement service (in `rpmsg_ns.c`).

The actual “media access” layer is implemented in `virtqueue.c`, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as `vring` or `virtqueue`.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in `rpmsg_env_bm.c`, and the FreeRTOS environment is implemented in `rpmsg_env_freertos.c` etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in `rpmsg_platform.c` and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

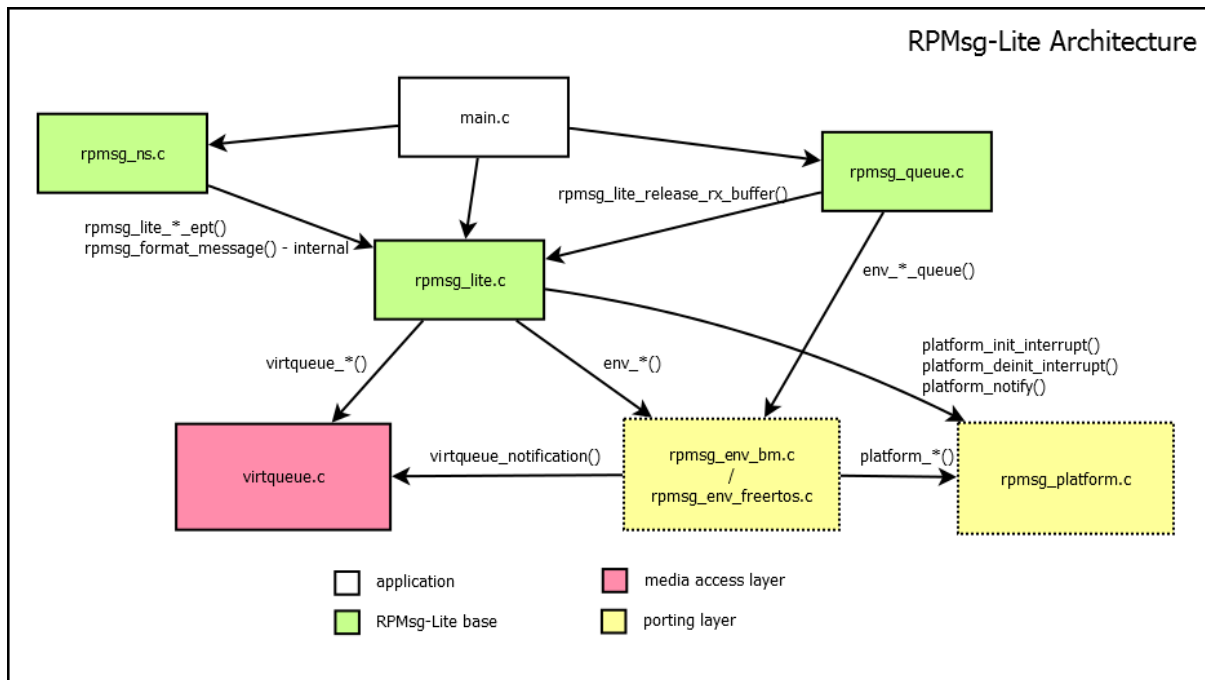

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function. However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

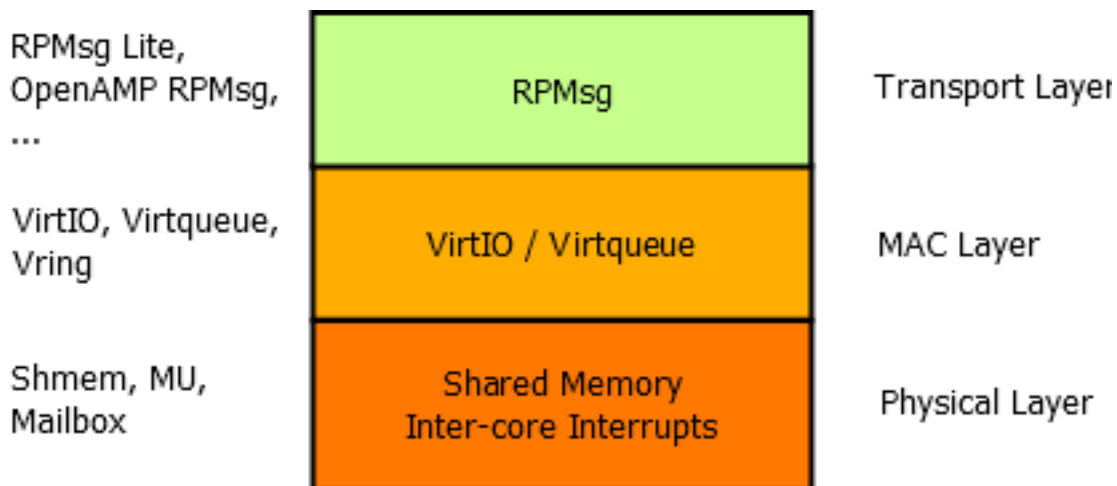

Queue sub-component (optional) This subcomponent is optional and requires implementation of the `env_*_queue()` functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action

in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the `/rpmmsg_lite/lib/include` directory to the include path and in the application, include either the `rpmmsg_lite.h` header file, or optionally also include the `rpmmsg_queue.h` and/or `rpmmsg_ns.h` files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, `rpmmsg_env_myrtos.c`) and to include it in the project build.

The initialization of the stack is done by calling the `rpmmsg_lite_master_init()` on the master side and the `rpmmsg_lite_remote_init()` on the remote side. This initialization function must be called prior to any RPMMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the `rpmmsg_lite_create_ept()` function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the `RL_USE_STATIC_API` option is set to 1. If not, the stack internally calls `env_alloc()` to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the `rpmmsg_queue_create()` function must be called before calling `rpmmsg_lite_create_ept()`. The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to `rpmmsg_queue_rx_cb()`. Then, it is possible to use `rpmmsg_queue_receive()` function to listen on a queue object for incoming messages. The `rpmmsg_lite_send()` function is used to send messages to the other side.

The RPMMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.


no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the `rpmmsg_lite_alloc_tx_buffer()` function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the `rpmmsg_lite_alloc_tx_buffer()` size output parameter).
- Call the `rpmmsg_lite_send_nocopy()` function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the `rpmmsg_lite_send_nocopy()` function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the `rpmmsg_queue_rcv_nocopy()` function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the `rpmmsg_queue_nocopy_free()` function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMMsg-Lite objects he has created in case of deinitialization. In order to do this, the function `rpmmsg_queue_destroy()` is used to destroy a queue, `rpmmsg_lite_destroy_ept()` is used to destroy an endpoint and finally, `rpmmsg_lite_deinit()` is used to deinitialize the RPMMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMMsg-Lite does not check this internally, since its main aim is to be lightweight.

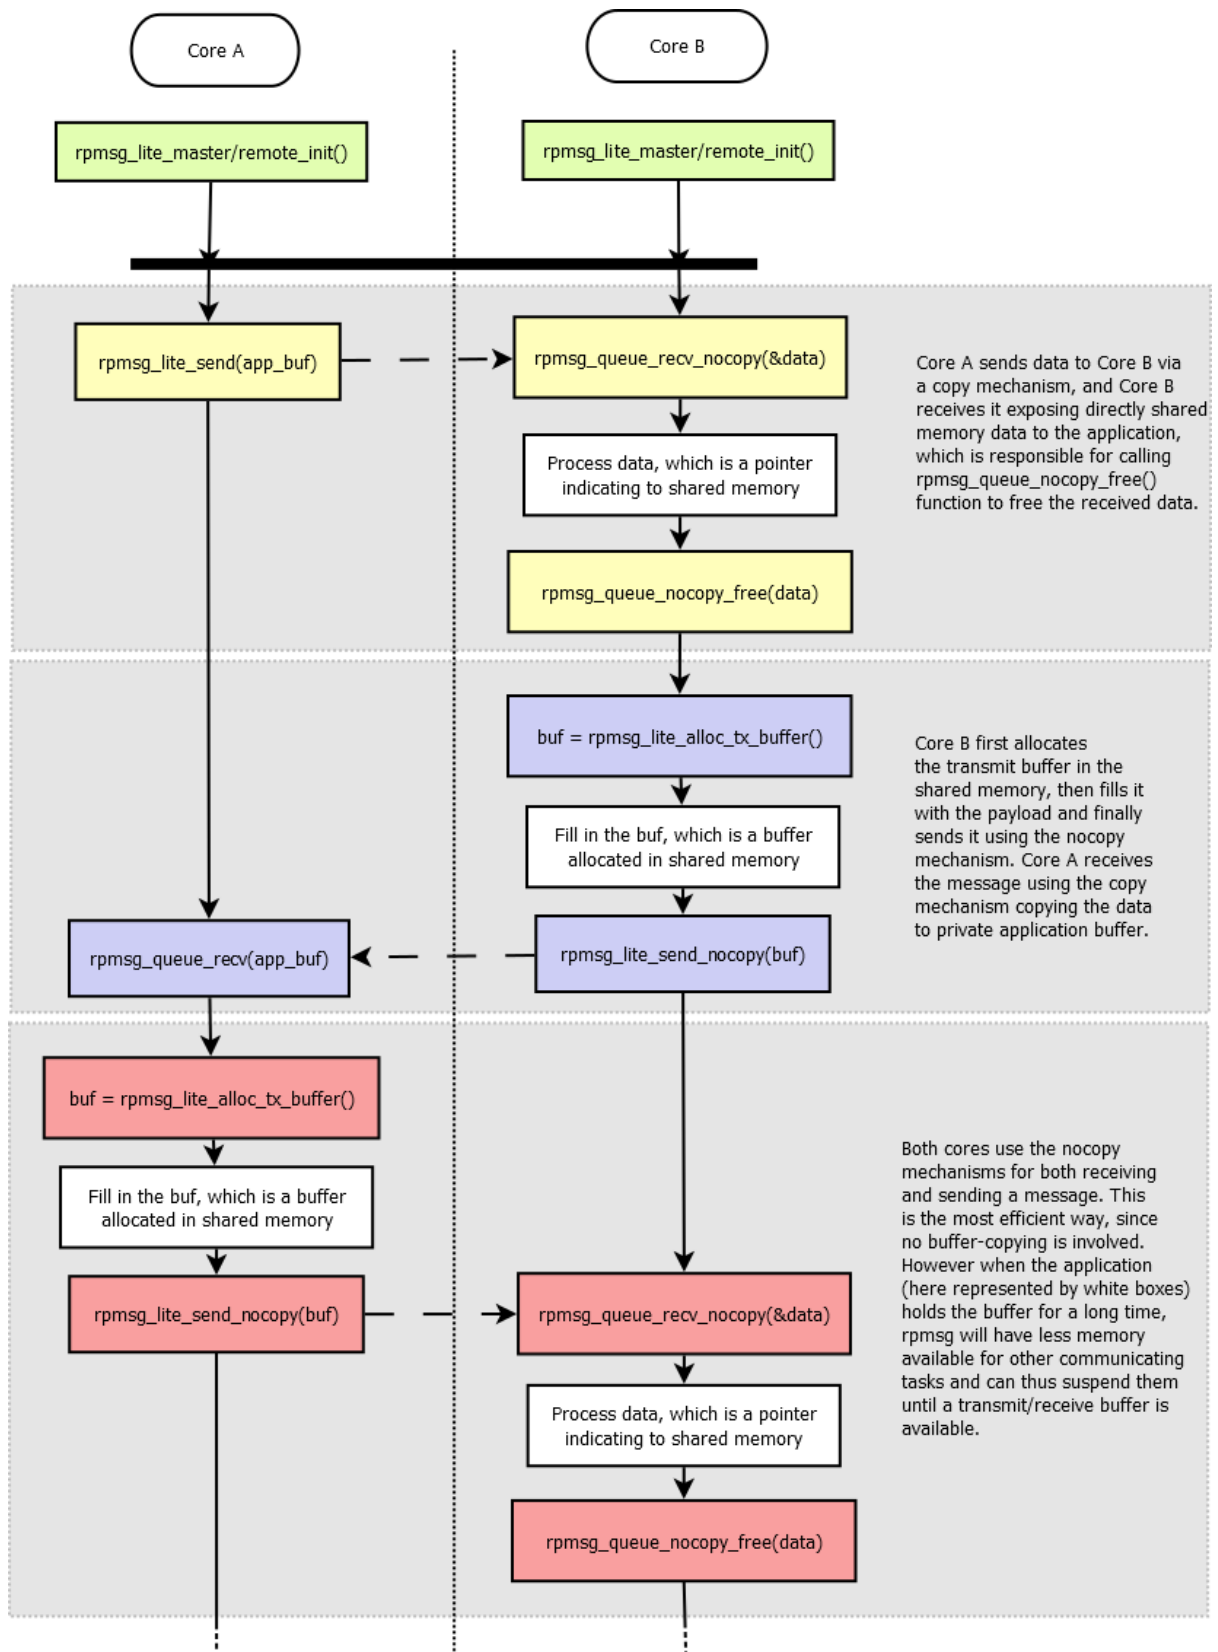

Examples RPSMsg Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages. To get the board list with multicore support (RPSMsg Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for RPMsg_Lite multicore examples with 'rpmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMsg_Lite multicore examples is using the [mcuxsdk-manifests](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in [readme section](#). Once done the armgcc rpmsg_lite examples can be found in

mcuxsdk/examples/_<board_name>/multicore_examples

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMsg_Lite examples use the 'rpmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in lib/rpmsg_lite/porting/environment folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- rpmsg_env_bm.c
- rpmsg_env_freertos.c
- rpmsg_env_xos.c
- rpmsg_env_threadx.c

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in linker file is also a good practise, it is recommended to use linker files from MCUXpressoSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMsg-Lite can be configured at the compile time. The default configuration is defined in the rpmsg_default_config.h header file. This configuration can be customized by the user by including rpmsg_config.h file with custom settings. The following table summarizes all possible RPMsg-Lite configuration options.

Config- uration option	De- fault value	Usage
RL_MS_PE (1)		Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFEE (496)		Size of the buffer payload, it must be more than 1 byte, and has to be word align (including rpmsg header size 16 bytes), if not it will be aligned up
RL_BUFEE (2)		Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H (1)		Zero-copy API functions enabled/disabled.
RL_USE_S' (0)		Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D (0)		Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF (0)		Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M (0)		When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E (0)		When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU (0)		When enabled buffer pointers passed to <code>rpmsg_lite_send_nocopy()</code> and <code>rpmsg_lite_release_rx_buffer()</code> functions (enabled by <code>RL_API_HAS_ZEROCOPY</code> config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLOV (0)		When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLOV (0)		It allows to define custom shared memory configuration and replacing the shared memory related global settings from <code>rpmsg_config.h</code> . This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg_Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSER	see rpmsg	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the [llvm](#) project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the `.clang-format` file, placed in a root of the rpmsg-lite directory where Python script `run_clang_format.py` can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, **Lockless Shared Memory Based Multicore Communication Protocol**
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMSG-Lite All notable changes to this project will be documented in this file. The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

v5.4.0

Added

- Added i.MX93W parts support
- Added i.MX952 parts support
- Added mcxl14x parts support
- Added mcxw70 parts support
- Zephyr rpmsg-lite samples add support for RT600 and RT700 DSP cores

Changed

- Port `platform_get_custom_shmem_config` change return value from `uint32_t` to `int32_t` for error handling consistency.

Fixed

- Updated unit tests code to allow correct GCOV code coverage measurement.
- Added missing dsb instructions into all ISRs for cm4/cm7 based platform layers.
- Fixed CERT EXP34-C by adding `__attribute__((noreturn))` to `RL_HANG(void)` function.
- **MISRA C-2012 Rule 14.3 compliance:** Simplified `RL_WORD_ALIGN_UP` and `RL_WORD_ALIGN_DOWN` macros to eliminate invariant controlling expression violations (CID 5011148)
 - Replaced ternary operator implementations with standard bitwise alignment idioms
 - Fixed hardcoded 4U constant in `RL_WORD_ALIGN_UP` to use `RL_WORD_SIZE` for better portability
- Fixed several MISRA compliance violations

v5.3.0

Added

- RT700 porting layer added support to send rpmsg messages between CM33_0 <-> Hifi1 and CM33_1 <-> Hifi4 cores.
- Add new platform macro `RL_PLATFORM_MAX_ISR_COUNT` this will set number of IRQ count per platform. This macro is then used in environment layers to set `isr_table` size where irq handles are registered. It size should match the bit length of `VQ_ID` so all combinations can fit into table.
- Unit tests updated to improve code coverage, new unit tests added covering static allocations in rtos environment layers.

Fixed

- `virtio.h` removed `typedef uint8_t boolean` and in its place use standard C99 `bool` type to avoid potential type conflicts.
- `env_acquire_sync_lock()` and `env_release_sync_lock()` synchronization primitives removed

- Kconfig consolidation, when `RL_ALLOW_CUSTOM_SHMEM_CONFIG` enabled the `platform_get_custom_shmem_config()` function needs to be implemented in platform layer to provide custom shared memory configuration for RPSMsg-Lite instance.

v5.2.1

Added

- Doc added RPSMSG-Lite VirtIO Overview
- Doc added RPSMSG-Lite Design Considerations
- Added `frdmimxrt1186` unit testing

Changed

- Remove limitation that `RL_BUFFER_SIZE` needs to be power of 2. It just has to be more than 16 bytes, e.g. 16 bytes of `rpmsg` header and payload size at least 1 byte and word aligned, if not it will be aligned up.

Fixed

- Fixed CERT-C INT31-C violation in `platform_notify` function in `rpmsg_platform.c` for `imxrt700_m33`, `imxrt700_hifi4`, `imxrt700_hifi1` platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro `RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE` to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change `rpmsg_platform.c` to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed `env_wait_for_link_up` function to handle timeout in link state checks for baremetal and qnx environment, `RL_BLOCK` mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure `RL_PLATFORM_HIGHEST_LINK_ID` remains within safe range for 16-bit casting in virtqueue ID creation.

- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in `shmem_length - (uint32_t)RL_VRING_OVERHEAD` and `shmem_length - 2U * shmem_config.vring_size` expressions.
- Fixed CERT INT31-C violation in `platform_interrupt_disable()` and similar functions by replacing unsafe cast from `uint32_t` to `int32_t` with a return of 0 constant.
- Fixed unsigned integer underflow in `rpmsg_lite_alloc_tx_buffer()` where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in `rpmsg_lite.c` where `size` parameter was cast from `uint32_t` to `uint16_t` without proper validation.
 - Applied consistent masking approach to both `size` and `flags` parameters: `(uint16_t)(value & 0xFFFFU)`.
 - This fix prevents potential data loss when size values exceed 65535.
- Fixed CERT INT31-C violation in `env_memset` functions by explicitly converting `int32_t` values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard `memset()` function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
 - `rpmsg_env_freertos.c`: Added validation before converting `int32_t` to `UBaseType_t`.
 - `rpmsg_env_qnx.c`: Fixed format string and added validation before assigning to `mqstat` fields.
 - `rpmsg_env_threadx.c`: Added validation to prevent integer overflow and negative values.
 - `rpmsg_env_xos.c`: Added range checking before casting to `uint16_t`.
 - `rpmsg_env_zephyr.c`: Added validation before passing values to `k_msgq_init`.
- Fixed a CERT INT31-C compliance issue in `env_get_current_queue_size()` function where an unsigned queue count was cast to a signed `int32_t` without proper validation, which could lead to lost or misinterpreted data if queue size exceeded `INT32_MAX`.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where `memcmp()` return value (signed int) was compared with unsigned constant without proper type handling.
- Fixed CERT INT31-C violation in `rpmsg_platform.c` where casting from `uint32_t` to `uint16_t` could potentially result in data loss. Changed length variable type from `uint16_t` to `uint32_t` to properly handle memory address differences without truncation.
- Fixed potential integer overflow in `env_sleep_msec()` function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on `imx943` platform.
- Added `RL_MAX_BUFFER_COUNT` (32768U) and `RL_MAX_VRING_ALIGN` (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in `vring_need_event()`, added cast to `uint16_t` for each operand.

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025**Added**

- Memory cache management of shared memory. Enable with `#define RL_USE_DCACHE (1)` in `rpmsg_config.h` in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for imx95, imxrt700, mcmxw71x, mcmxw72x, kw47b42 added.

v5.1.2 - 08-Jul-2024**Changed**

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024**Added**

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023**Added**

- RPMsg-Lite: Added aarch64 support.

Changed

- RPMsg-Lite: Increased the queue size to $(2 * RL\_BUFFER\_COUNT)$ to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023

Added

- Timeout parameter added to `rpmsg_lite_wait_for_link_up` API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- `VRING_SIZE` is set based on number of used buffers now (as calculated in `vring_init`) - updated for all platforms that are not communicating to Linux `rpmsg` counterpart.

Fixed

- Fixed wrong `RL_VRING_OVERHEAD` macro comment in `platform.h` files
- Misra corrections.

v4.0.0 - 20-Jun-2022

Added

- Added support for custom shared memory arrangement per the `RPMMsg_Lite` instance.
- Introduced new `rpmsg_lite_wait_for_link_up()` API function - this allows to avoid using busy loops in rtos environments, GitHub PR [#21](#).

Changed

- Adjusted `rpmsg_lite_is_link_up()` to return `RL_TRUE/RL_FALSE`.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR [#14](#).
- Aligned `rpmsg_env_xos.c` and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR [#19](#), [#20](#).

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the rpmsg_lite_get_endpoint_from_addr function.

Changed

- Updated RL_BUFFER_COUNT documentation (issue [#10](#)).
- Updated imxrt600_hifi4 platform layer.

v3.1.1 - 15-Jan-2021**Added**

- Introduced RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020**Added**

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in rpmsg_lite_rx_callback() for QNX env.
- Correction of rpmsg_lite_instance structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019

Added

- Added configuration macro `RL_DEBUG_CHECK_BUFFERS`.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the `RL_USE_ENVIRONMENT_CONTEXT` configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017

Added

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremetal and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : `mcuxsdk-middleware-mcmgr` (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on `mcux-sdk-middleware-mcmgr` component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [Multicore Manager - Documentation](#) to review details on the contents in this sub-repo.


For Further API documentation, please look at [doxygen documentation](#)

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr directory.

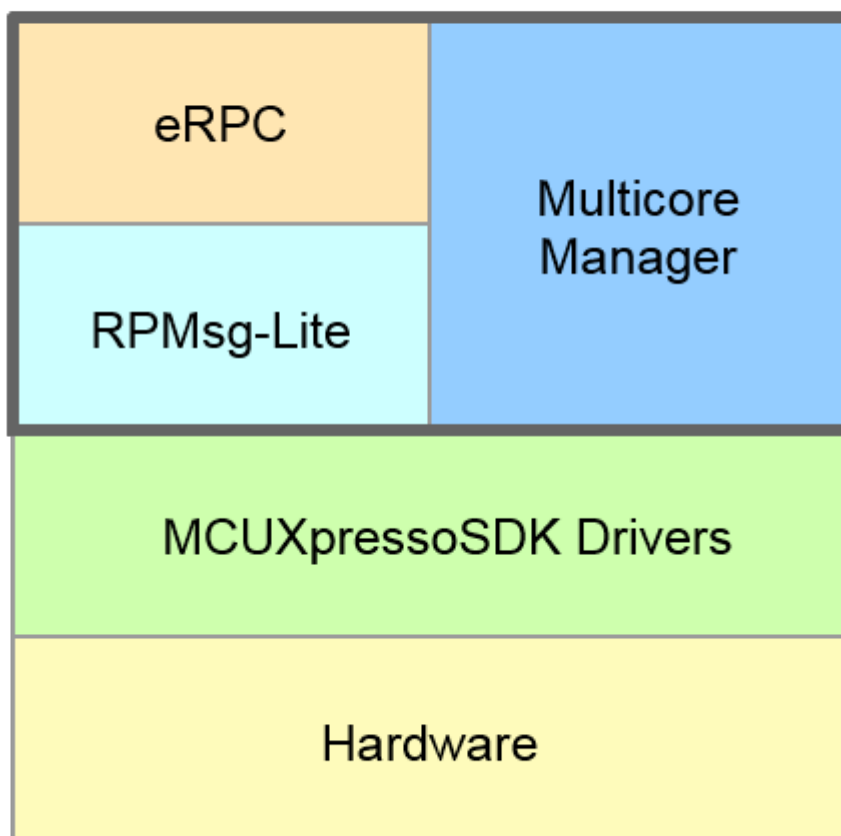

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```
#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,
    ↪ starting synchronously. */
    MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
    .
    .
    .
    /* Stop secondary core execution. */
    MCMGR_StopCore(kMCMGR_Core1);
}
```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

It could also happen that the secondary core application stops running correctly and the primary core application does not know about that situation. Therefore, it is beneficial to implement a mechanism for core health monitoring. The *test_heartbeat* unit test can serve as an example how to ensure that: secondary core could periodically send heartbeat signals to the primary core using MCMGR_TriggerEvent() API to indicate that it is alive and functioning properly.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. *mcmgr_event_type_t* enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```
#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()
↪ called on the secondary core side */
void RPMsgRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
```

(continues on next page)

(continued from previous page)

```

uint16_t RPSMsgRemoteReadyEventData[NUMBER_OF_CORES] = {0};

/* Initialize MCMGR - low level multicore management library.
   Call this function as close to the reset entry as possible,
   (into the startup sequence) to allow CoreUp event triggering. */
MCMGR_EarlyInit();

/* Initialize MCMGR, install generic event handlers */
MCMGR_Init();

/* Register the application event before starting the secondary core */
MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RPSMsgRemoteReadyEventHandler, (void*)
↳RPSMsgRemoteReadyEventData);

/* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpmsg_lite_base address_
↳as startup data, starting synchronously. */
MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpmsg_lite_
↳base, kMCMGR_Start_Synchronous);

/* Wait until the secondary core application signals the rpmsg remote has been initialized and is ready to_
↳communicate. */
while(APP_RPMSG_READY_EVENT_DATA != RPSMsgRemoteReadyEventData[APP_SECONDARY_
↳CORE]) {};
.
.
.
}

```

Code for the secondary side:

```

#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA (1)


void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
    .
    .
    .

    /* Signal the to other core that we are ready by triggering the event and passing the APP_RPMSG_
    ↳READY_EVENT_DATA */
    MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPMSG_
    ↳READY_EVENT_DATA);
    .
    .
    .
}

```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

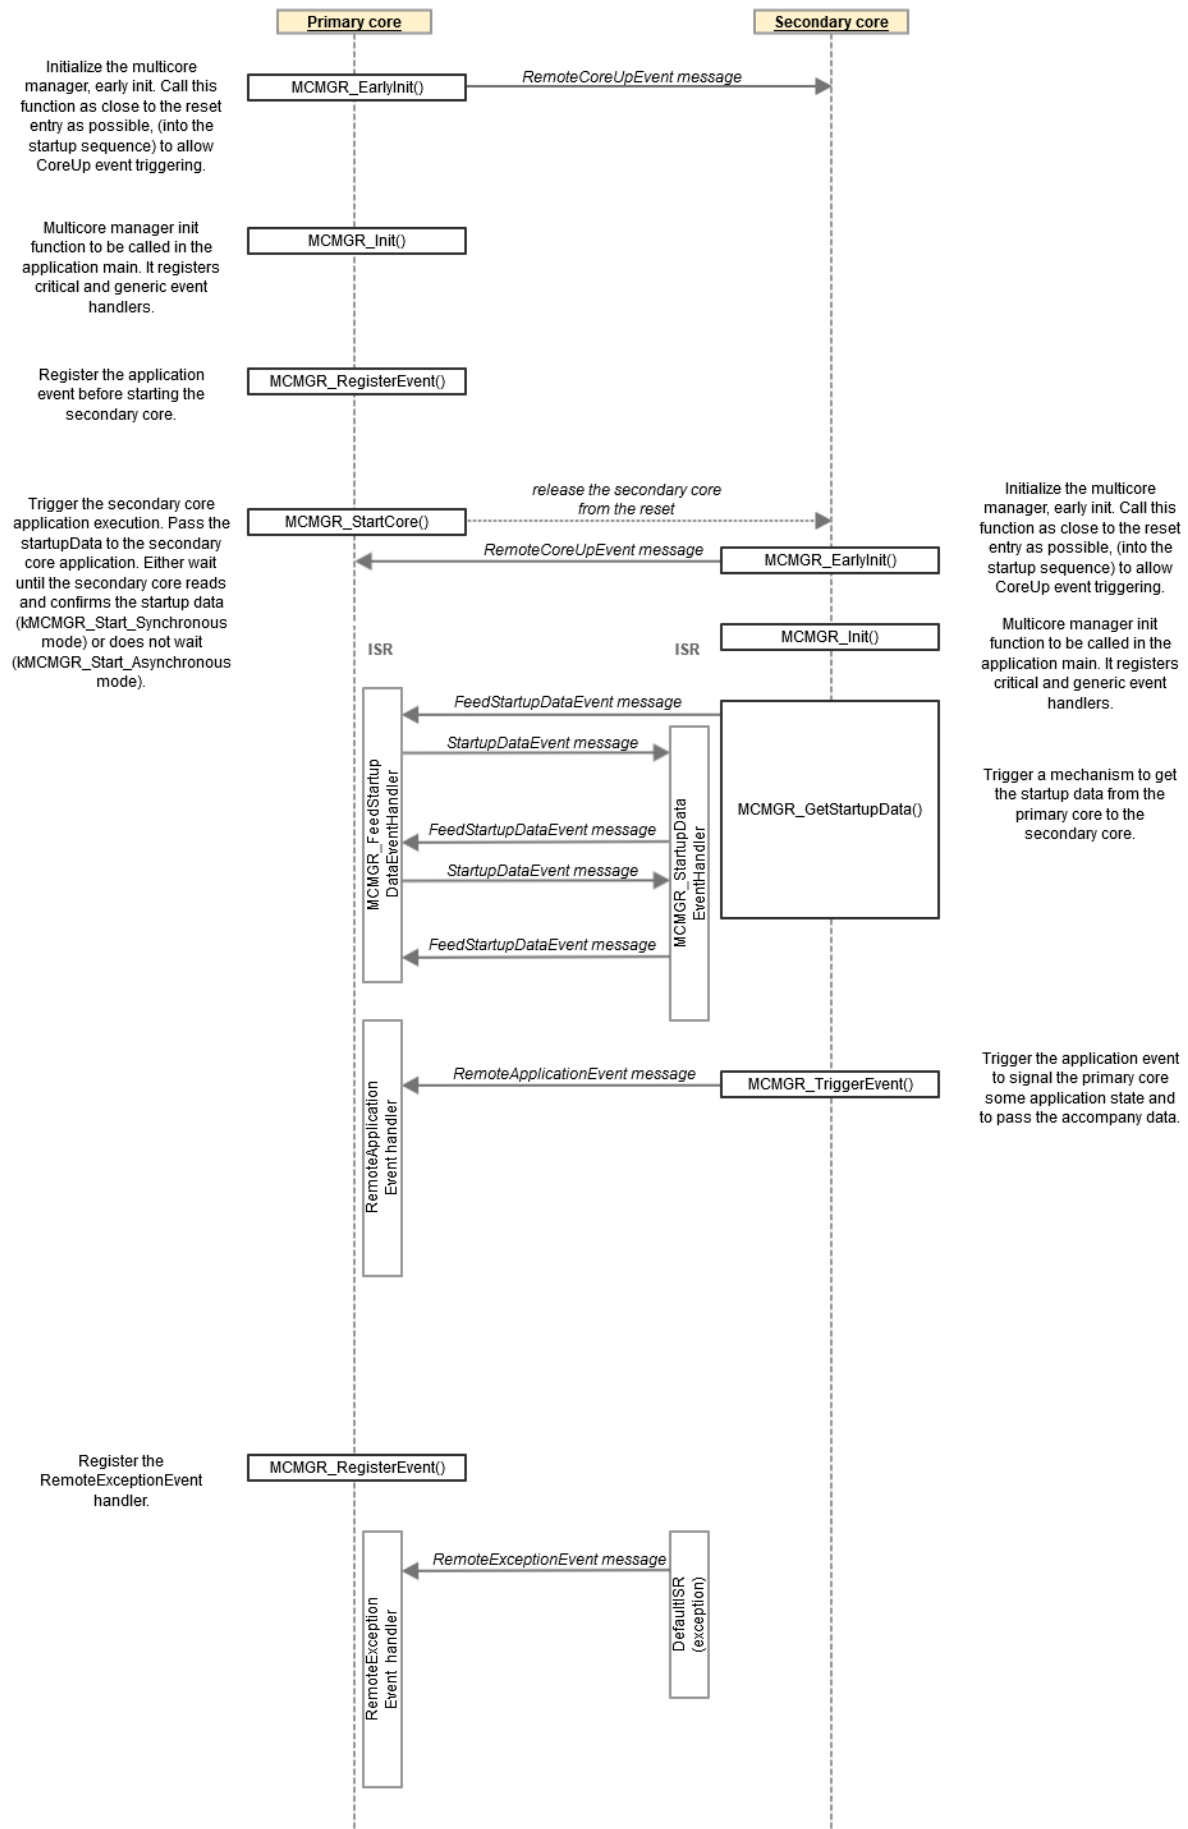

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

v5.1.0

Added

- Added mcxl14x parts support
- Added mcxw70 parts support
- Add new config MCMGR_REMOTE_APP_EVENT_COUNT for configurable remote application event count. This will expand number of application events available for MCMGR users. kMCMGR_RemoteApplicationEvent, kMCMGR_RemoteApplicationEvent1 .. kMCMGR_RemoteApplicationEvent4.
- Align Kinetis parts porting to changed register map

Fixed

- Fix MISRA C-2012 Rule 20.8 violations.

v5.0.2

Added

- Added gcov options and configs to support mcmgr code coverage
- Added new test_weak_mu_isr testcase for devices with MU peripheral
- Added new test_heartbeat testcase showing heartbeat mechanism between primary and secondary cores using the MCMGR

v5.0.1

Added

- Added frdmimxrt1186 unit testing

Changed

- [KW43] Rename core#1 reset control register

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.
- Fix path to mcmgr headers directory in doxyfile

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more than two cores. Breaking API change by adding parameter `coreNum` specifying core number in functions below.
 - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
 - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

When registering the event with function MCMGR_RegisterEvent() user now needs to provide `callbackData` pointer to array of elements per every core in system (see README.md for example). In case of systems with only two cores the `coreNum` in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: Porting-GuideTo_v5.md

- Updated all porting files to support new MCMGR API.
- Added new platform specific include file `mcmgr_platform.h`. It will contain common platform specific macros that can be then used in `mcmgr` and application. e.g. platform core count MCMGR_CORECOUNT 4.
- Move all header files to new `inc` directory.
- Added new platform-specific include files `inc/platform/<platform_name>/mcmgr_platform.h`.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- `mcmgr_stop_core_internal()` function now returns `kStatus_MCMGR_NotImplemented` status code instead of `kStatus_MCMGR_Success` when device does not support stop of secondary core. Ports affected: kw32w1, kw45b41, kw45b42, mcxw716, mcxw727.

[v4.1.6]

Added

- Multicore Manager moved to standalone repository.
- Add porting layers for imxrt700, mcmxw727, kw47b42.
- New MCMGR_ProcessDeferredRxIsr() API added.

[v4.1.5]

Added

- Add notification into MCMGR_EarlyInit and mcmgr_early_init_internal functions to avoid using uninitialized data in their implementations.

[v4.1.4]**Fixed**

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]**Added**

- Add porting layers for imxrt1180.

Fixed

- mu_isr() updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- mcmgr_mu_internal.c code adaptation to new supported SoCs.

[v4.1.2]**Fixed**

- Update mcmgr_stop_core_internal() implementations to set core state to kMCMGR_ResetCoreState.

[v4.1.0]**Fixed**

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]**Fixed**

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]

Fixed

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]

Fixed

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]

Added

- Support for lpcxpresso54114 board.

[v1.1.0]

Fixed

- Ported to KSDK 2.0.0.

[v1.0.0]

Added

- Initial release.

eRPC

MCUXpresso SDK : mcuxsdk-middleware-erpc

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository [mcuxsdk](#) for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [eRPC - Documentation](#) to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

eRPC

- [MCUXpresso SDK : mcuxsdk-middleware-erpc](#)
 - [Overview](#)
 - [Documentation](#)
 - [Setup](#)
 - [Contribution](#)
- [eRPC](#)
 - [About](#)
 - [Releases](#)
 - * [Edge releases](#)
 - [Documentation](#)
 - [Examples](#)

- [References](#)
- [Directories](#)
- [Building and installing](#)
 - * [Requirements](#)
 - [Windows](#)
 - [Mac OS X](#)
 - * [Building](#)
 - [CMake and KConfig](#)
 - [Make](#)
 - * [Installing for Python](#)
- [Known issues and limitations](#)
- [Code providing](#)

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent [Apache Thrift](#), eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called `erpcgen` is included. It accepts input IDL files, having an `.erpc` extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. `erpcgen` can generate either C/C++ or Python code.

Example `.erpc` file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;
```

(continues on next page)

(continued from previous page)

```

/* Init eRPC client infrastructure */
transport = erpc_transport_cmsis_uart_init(Driver_USART0);
message_buffer_factory = erpc_mbf_dynamic_init();
client_manager = erpc_client_init(transport, message_buffer_factory);

/* init eRPC client IO service */
initIO_client(client_manager);

// Now we can call the remote function to turn on the green LED.
set_led(kGreen, true);

/* deinit objects */
deinitIO_client();
erpc_client_deinit(client_manager);
erpc_mbf_dynamic_deinit(message_buffer_factory);
erpc_transport_tcp_deinit(transport);
}

```

```

void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}

```

Server side usage:

```

// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);
}

```

(continues on next page)

(continued from previous page)

```
/* add custom service implementation to the server */
erpc_add_service_to_server(server, service);

// Run the server.
erpc_server_run();

/* deinit objects */
destroy_IO_service(service);
erpc_server_deinit(server);
erpc_mbf_dynamic_deinit(message_buffer_factory);
erpc_transport_tcp_deinit(transport);
}

// Implement the remote function.
class IO : public IO_interface
{
    /* eRPC call definition */
    void set_led(LEDName whichLed, bool onOrOff) override {
        // implementation goes here
    }
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    IO IOImpl;
    IO_service io(&IOImpl);

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, &io);

    /* poll for requests */
    erpc_status_t err = server.run();

    /* deinit objects */
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- NXP RPMsg-Lite / RPMsg TTY
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the [LICENSE file](#) for the full license text.

Releases [eRPC releases](#)

Edge releases Edge releases can be found on [eRPC CircleCI](#) webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation [Documentation](#) is in the wiki section.

[eRPC Infrastructure documentation](#)

Examples *Example IDL* is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit <https://mcuxpresso.nxp.com> to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the [mcux-sdk](#) Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk repo in [readme Overview section](#). Once done the armgcc eRPC examples can be found in

mcuxsdk/examples/<board_name>/multicore_examples or in

mcuxsdk/examples/<board_name>/multiprocessor_examples folders.

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- [erpc \(EmbeddedRPC\) getting started notes](#)
- [ERPC Linux Local Environment Construction and Use](#)
- [The New Wio Terminal eRPC Firmware](#)

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the *erpcgen* executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of erpcgen using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build erpcgen for OS X.

Requirements eRPC now support building **erpcgen**, **erpc_lib**, **tests** and **C examples** using CMake.

Requirements when using CMake:

- **CMake** (minimal version 3.20.0)
- Generator - **Make**, **Ninja**, ...
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Bison** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Requirements when using Make:

- **Make**
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Bison** - <https://www.gnu.org/software/bison/>
- **Flex** - <https://github.com/westes/flex/>

Windows Related steps to build **erpcgen** using **Visual Studio** are described in *erpcgen/VisualStudio_v14/readme_erpcgen.txt*.

To install MinGW, Bison, Flex locally on Windows:

```
./install_dependencies.ps1
* ```

#### Linux

```bash
./install_dependencies.sh
```

Mandatory for case, when build for different architecture is needed

- gcc-multilib, g++-multilib

## Mac OS X

```
./install_dependencies.sh
```

## Building

**CMake and KConfig** eRPC use CMake and KConfig to configurate and build eRPC related targets. KConfig can be edited by *prj.conf* or *menuconfig* when building.

Generate project, config and build. In *erpc/* execute:

```
cmake -B ./build # in erpc/build generate cmake project
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and
↳ examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

**\*\*CMake will use the system's default compilers and generator**

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and
↳ examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

**Make** To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to sudo the make install.

By default this will install into */usr/local*. If you want to install elsewhere, set the *PREFIX* environment variable. Example for installing into */opt*:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- erpc: build the liberpc.a static library
- erpcgen: build the erpcgen tool
- erpcsniffer: build the sniffer tool
- test: build the unit tests under the *test* directory

- **all:** build all of the above
- **install:** install `liberpc.a`, `erpcgen`, and include files

eRPC code is validated with respect to the C++ 11 standard.

**Installing for Python** To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

### Known issues and limitations

- Static allocations controlled by the `ERPC_ALLOCATION_POLICY` config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

**Code providing** Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

---

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

## eRPC Getting Started

**Overview** This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc` folder.

**Create an eRPC application** This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
  1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
  2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
  3. Add infrastructure files.
  4. Add user code for client and server applications.
  5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


**Multicore server application** The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

**Server project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

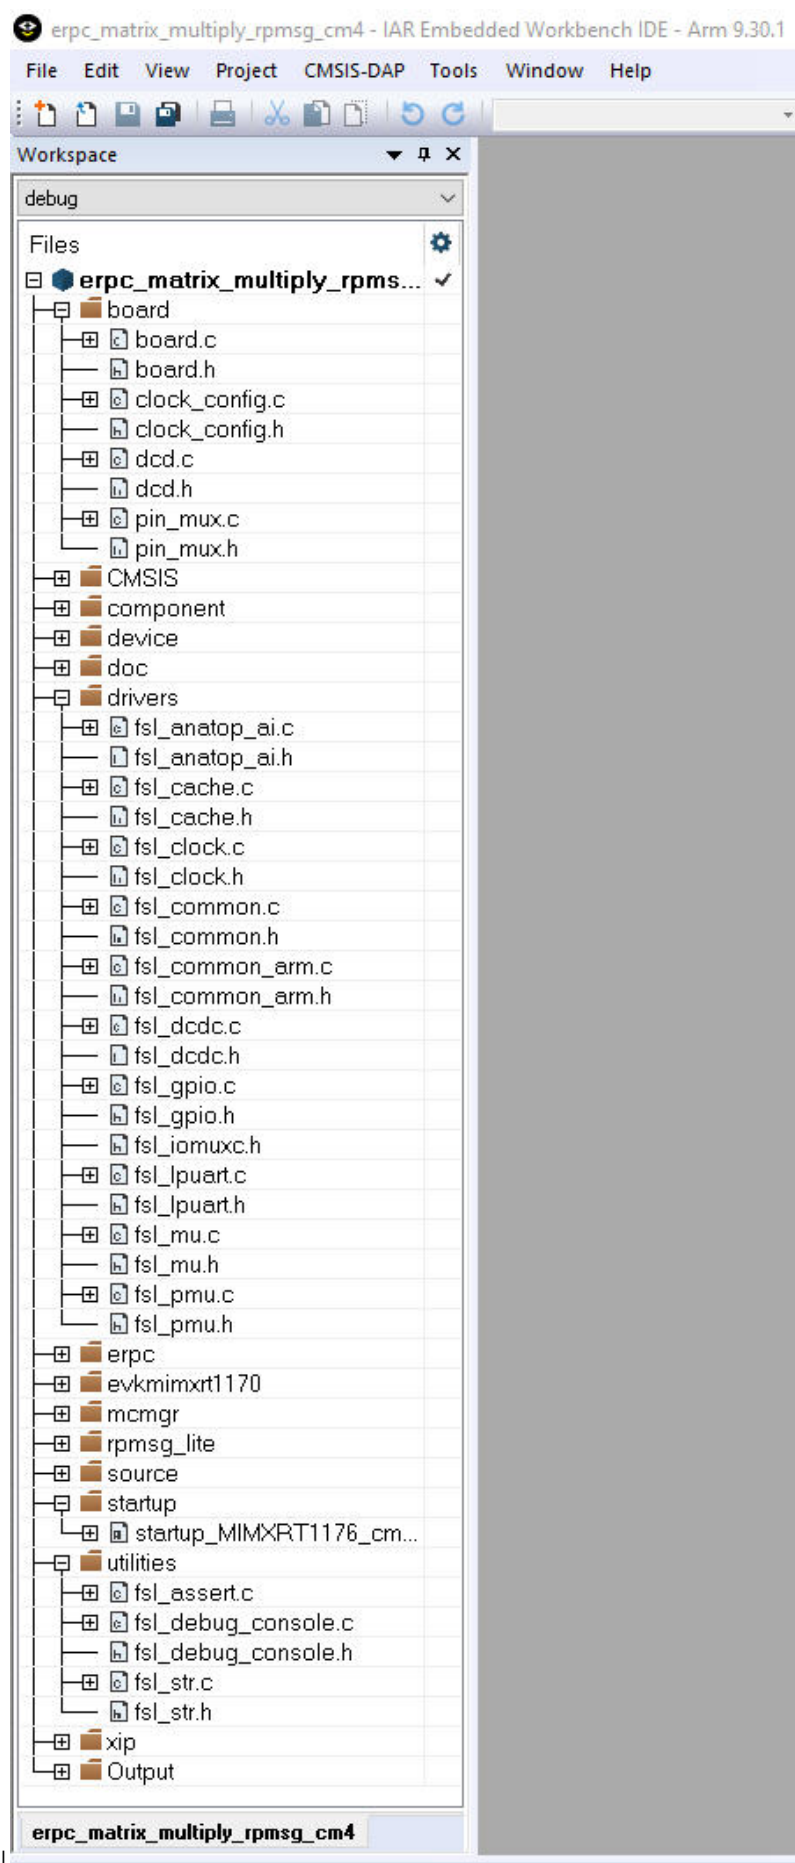

|


**Parent topic:**Multicore server application

**Server related generated files** The server-related generated files are:

- erpc\_\_matric\_\_multiply.h
- erpc\_\_matrix\_\_multiply\_\_server.h
- erpc\_\_matrix\_\_multiply\_\_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_examples/erpc\_common/erpc\_matrix\_multiply/

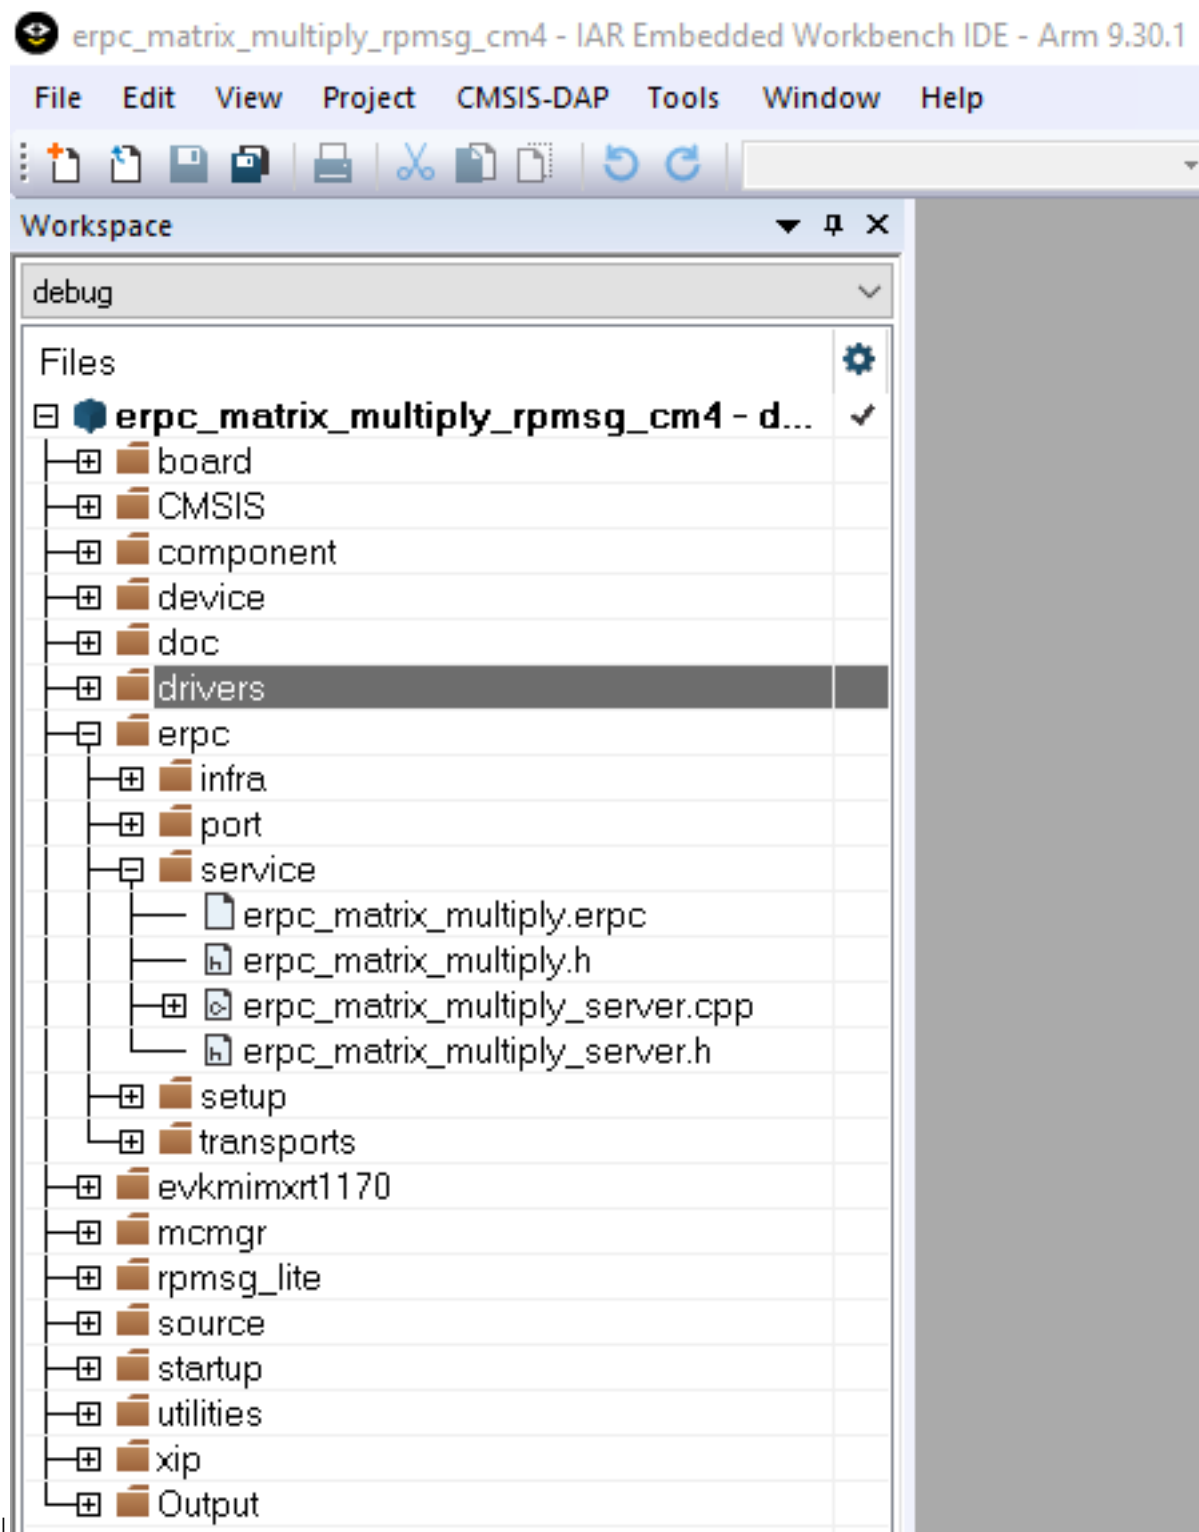

**Parent topic:** Multicore server application


**Server infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.



- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
  - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
  - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
  - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
  - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
  - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

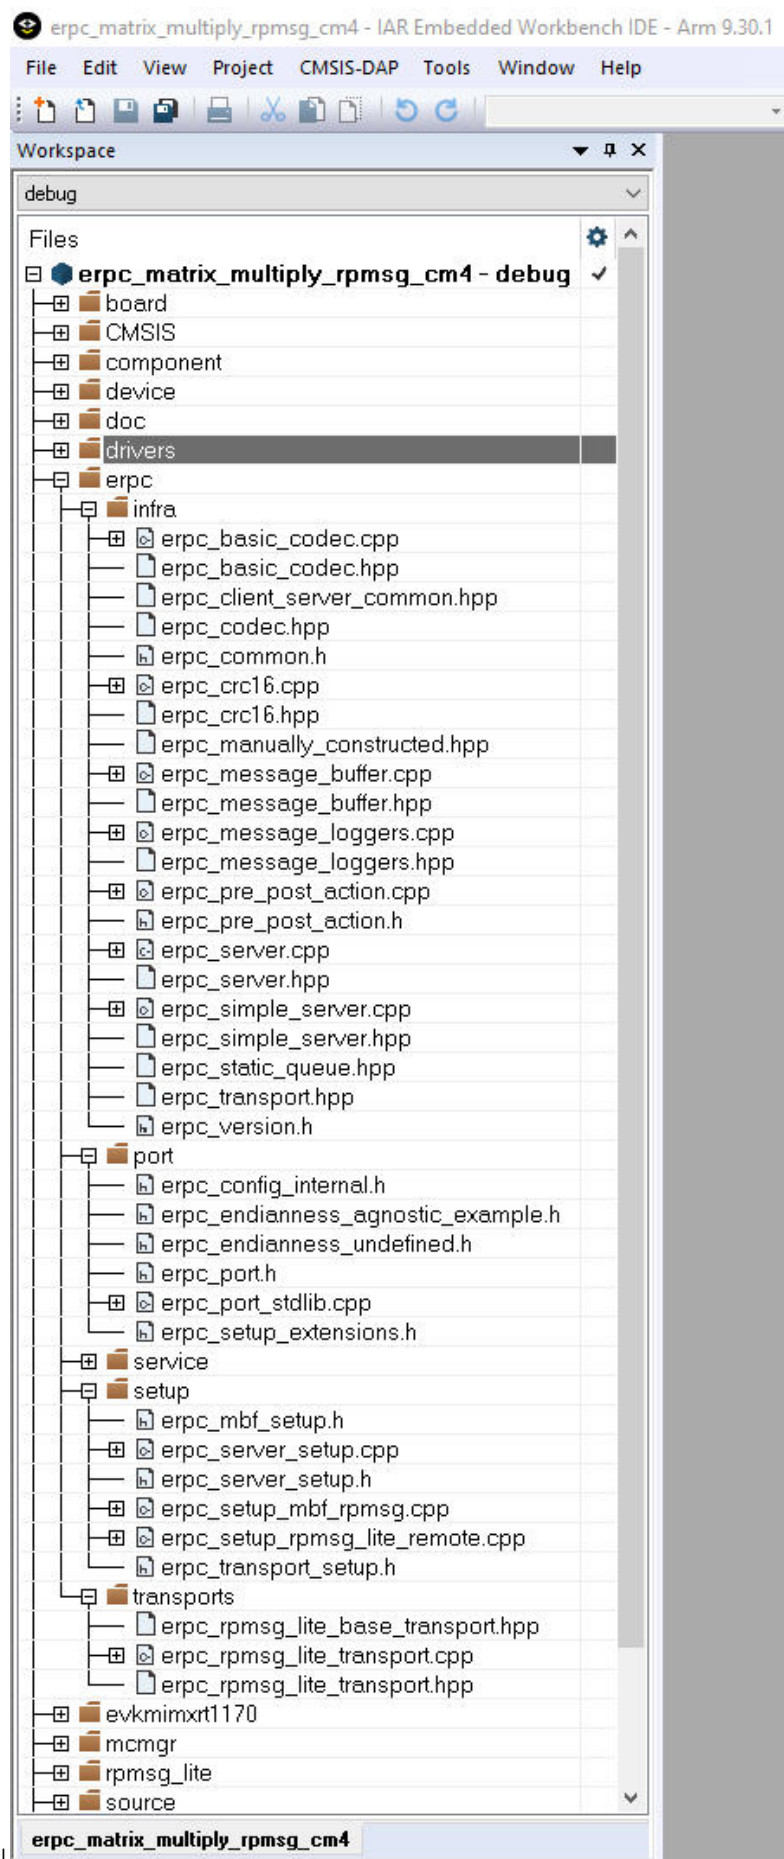

|


**Parent topic:** Multicore server application

**Server multicore infrastructure files** Because of the RPMMsg-Lite (transport layer), it is also necessary to include RPMMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

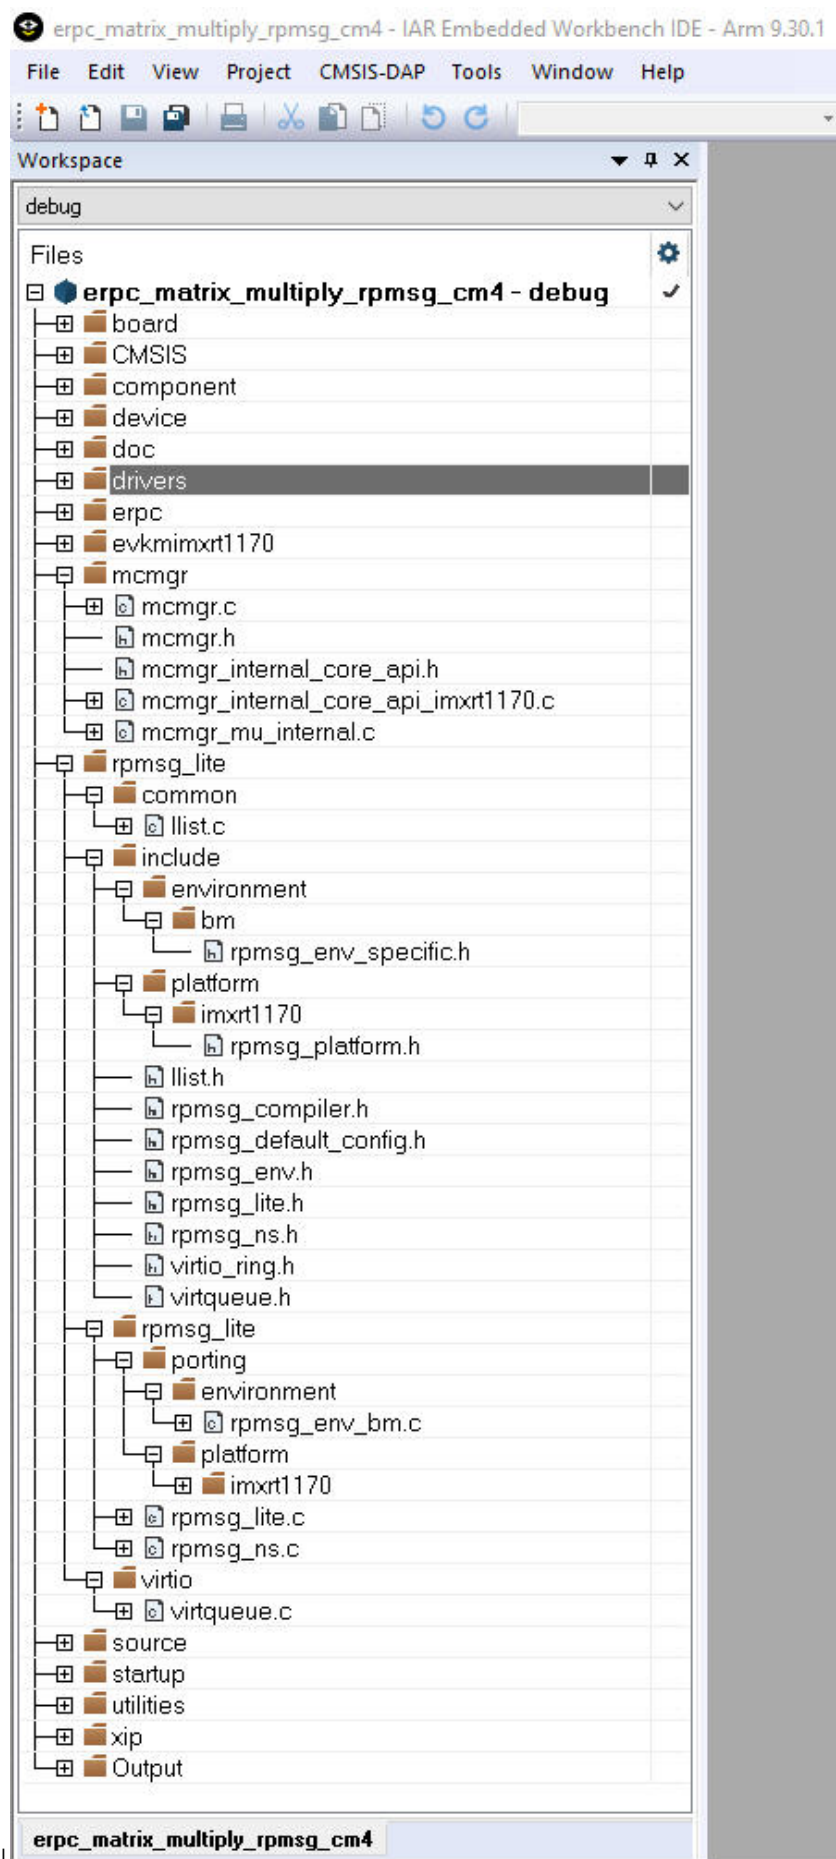

**Parent topic:** Multicore server application

**Server user code** The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
 ...
}
int main()
{
 ...
 /* RPSMsg-Lite transport layer initialization */
 erpc_transport_t transport;
 transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
 ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_rpmsg_init(transport);
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server);
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (`rpmsg_config.h`) and eRPC (`erpc_config.h`), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

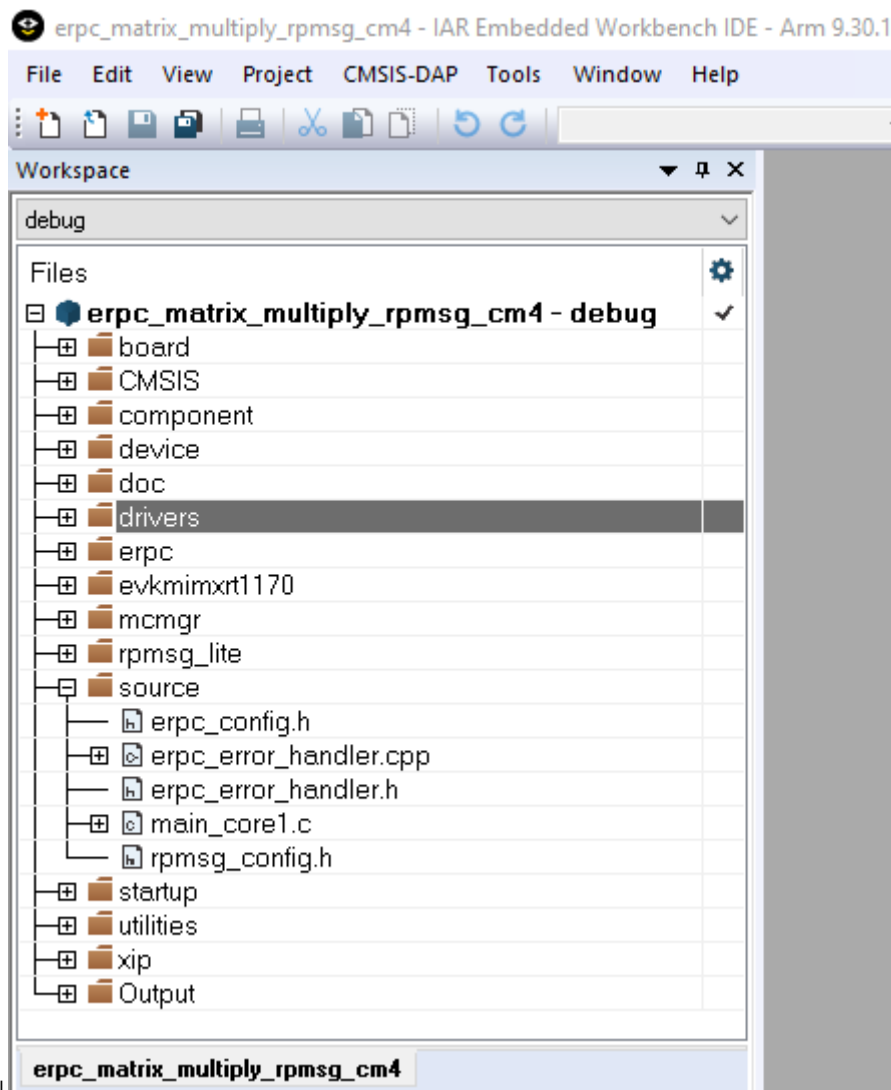

**Parent topic:**Multicore server application

**Parent topic:**[Create an eRPC application](#)


**Multicore client application** The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

**Client project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

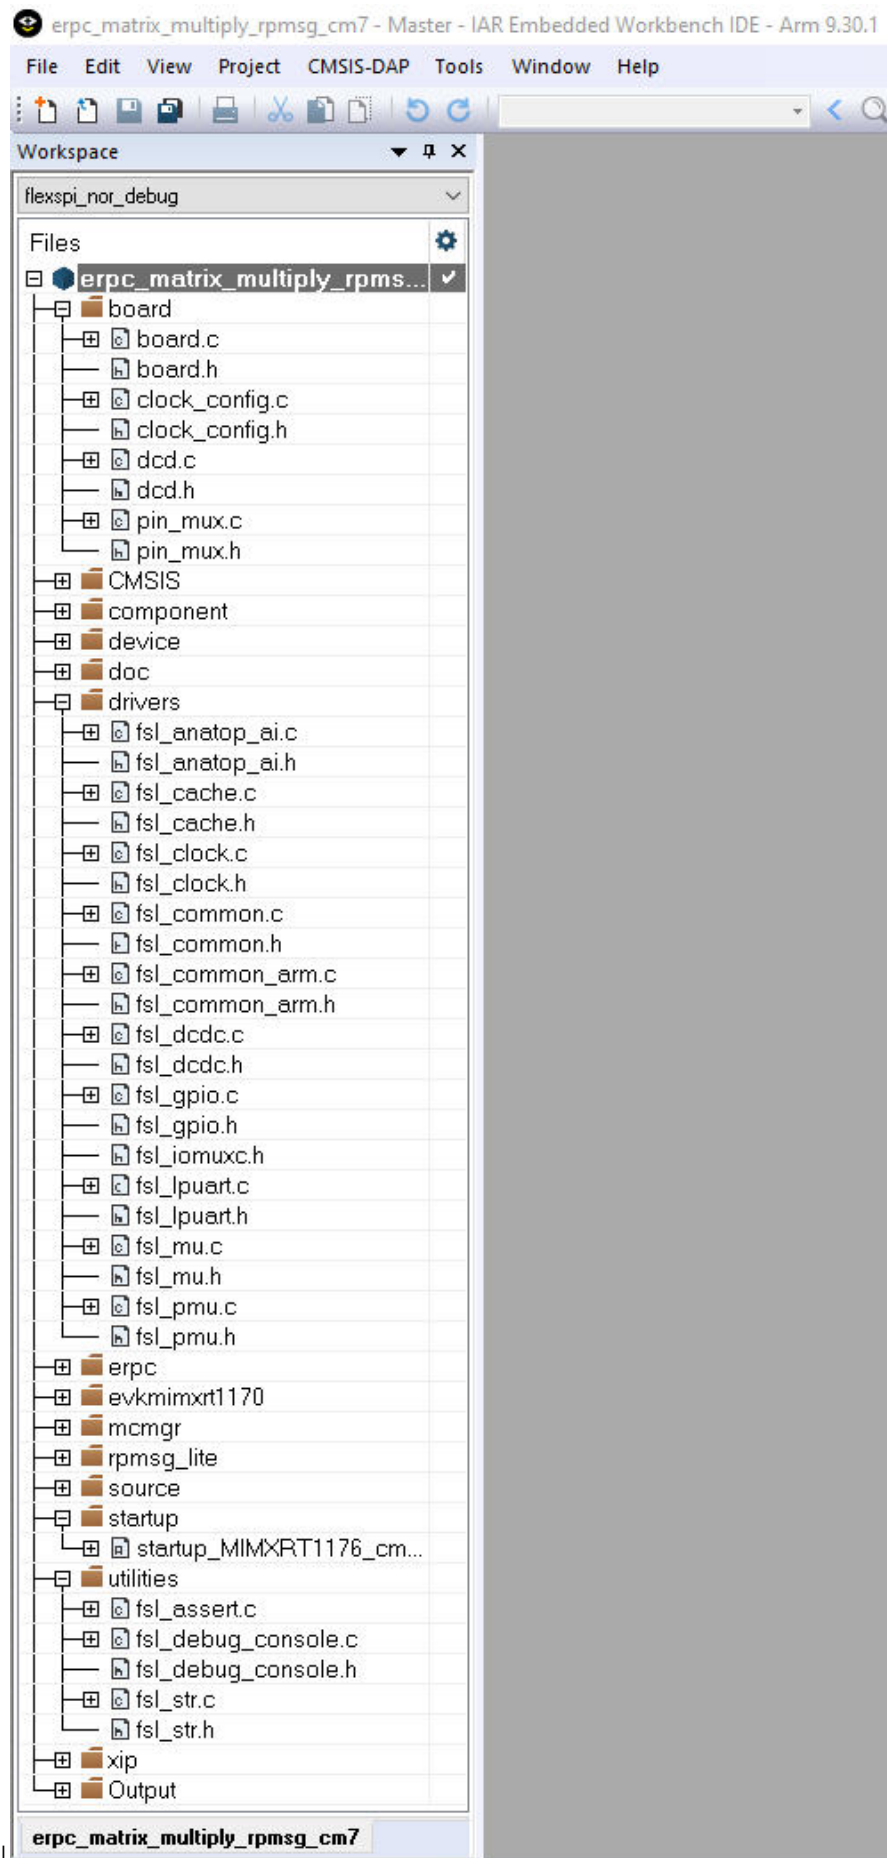


|

**Parent topic:** Multicore client application**Client-related generated files** The client-related generated files are:

- erpc\_\_matric\_\_multiply.h
- erpc\_\_matrix\_\_multiply\_\_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.



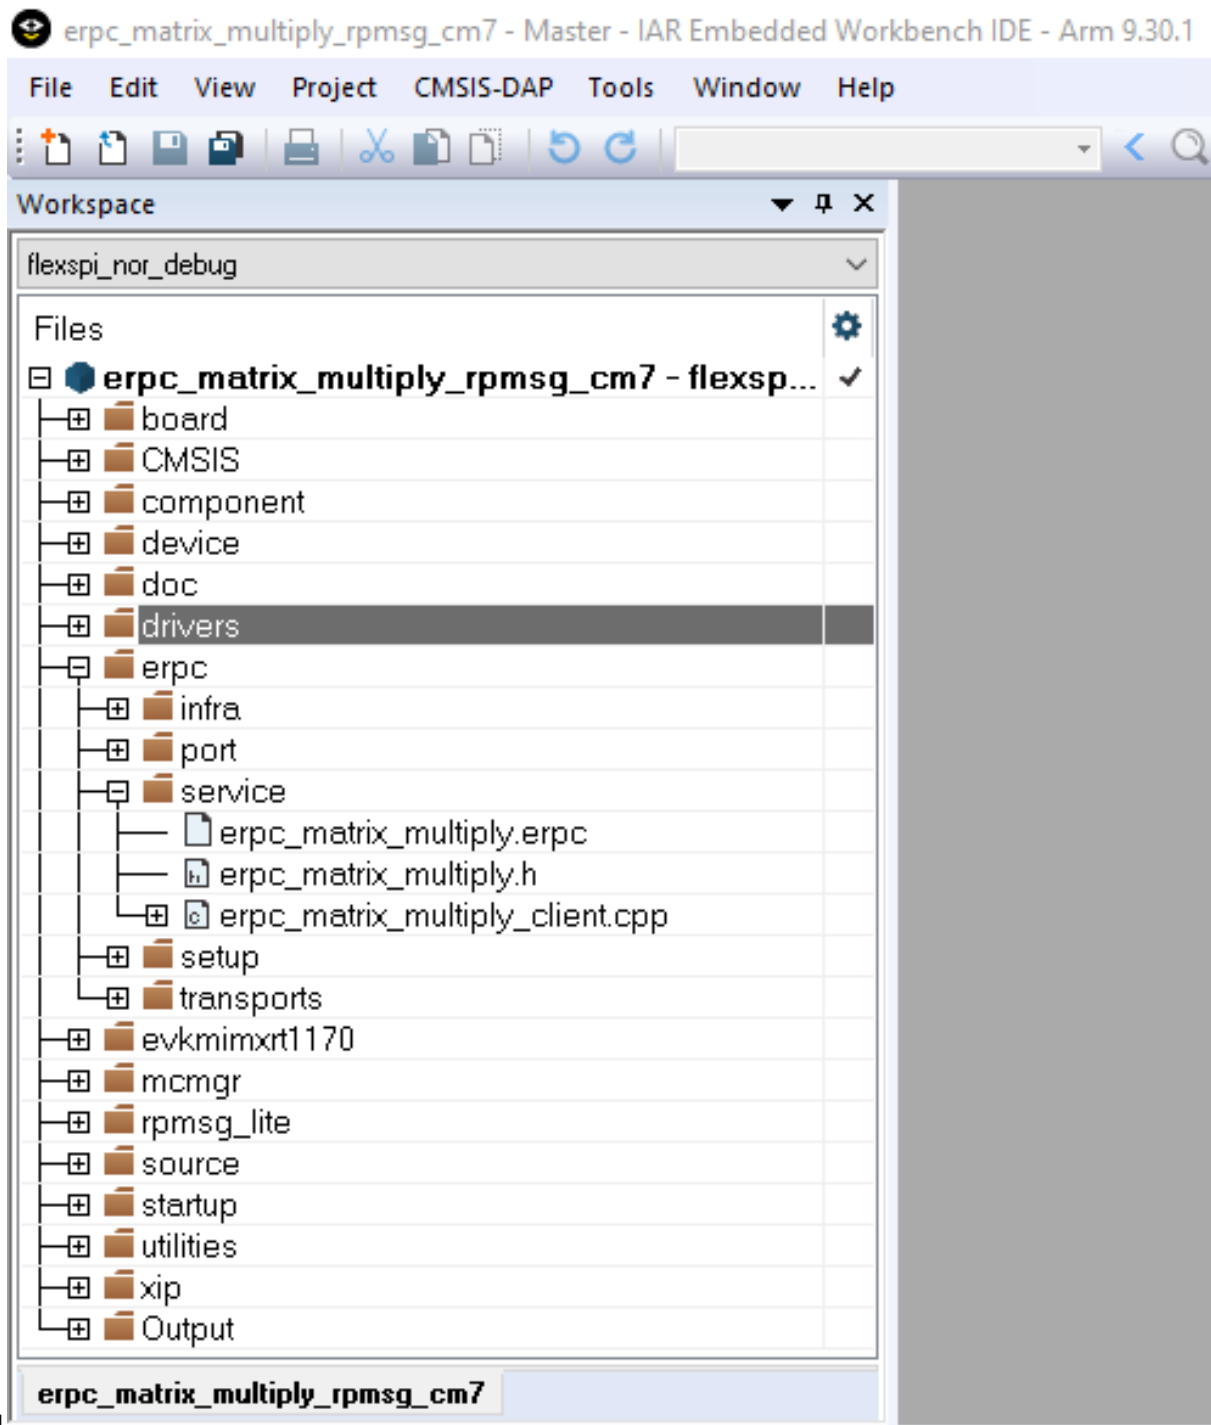

**Parent topic:**Multicore client application

**Client infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

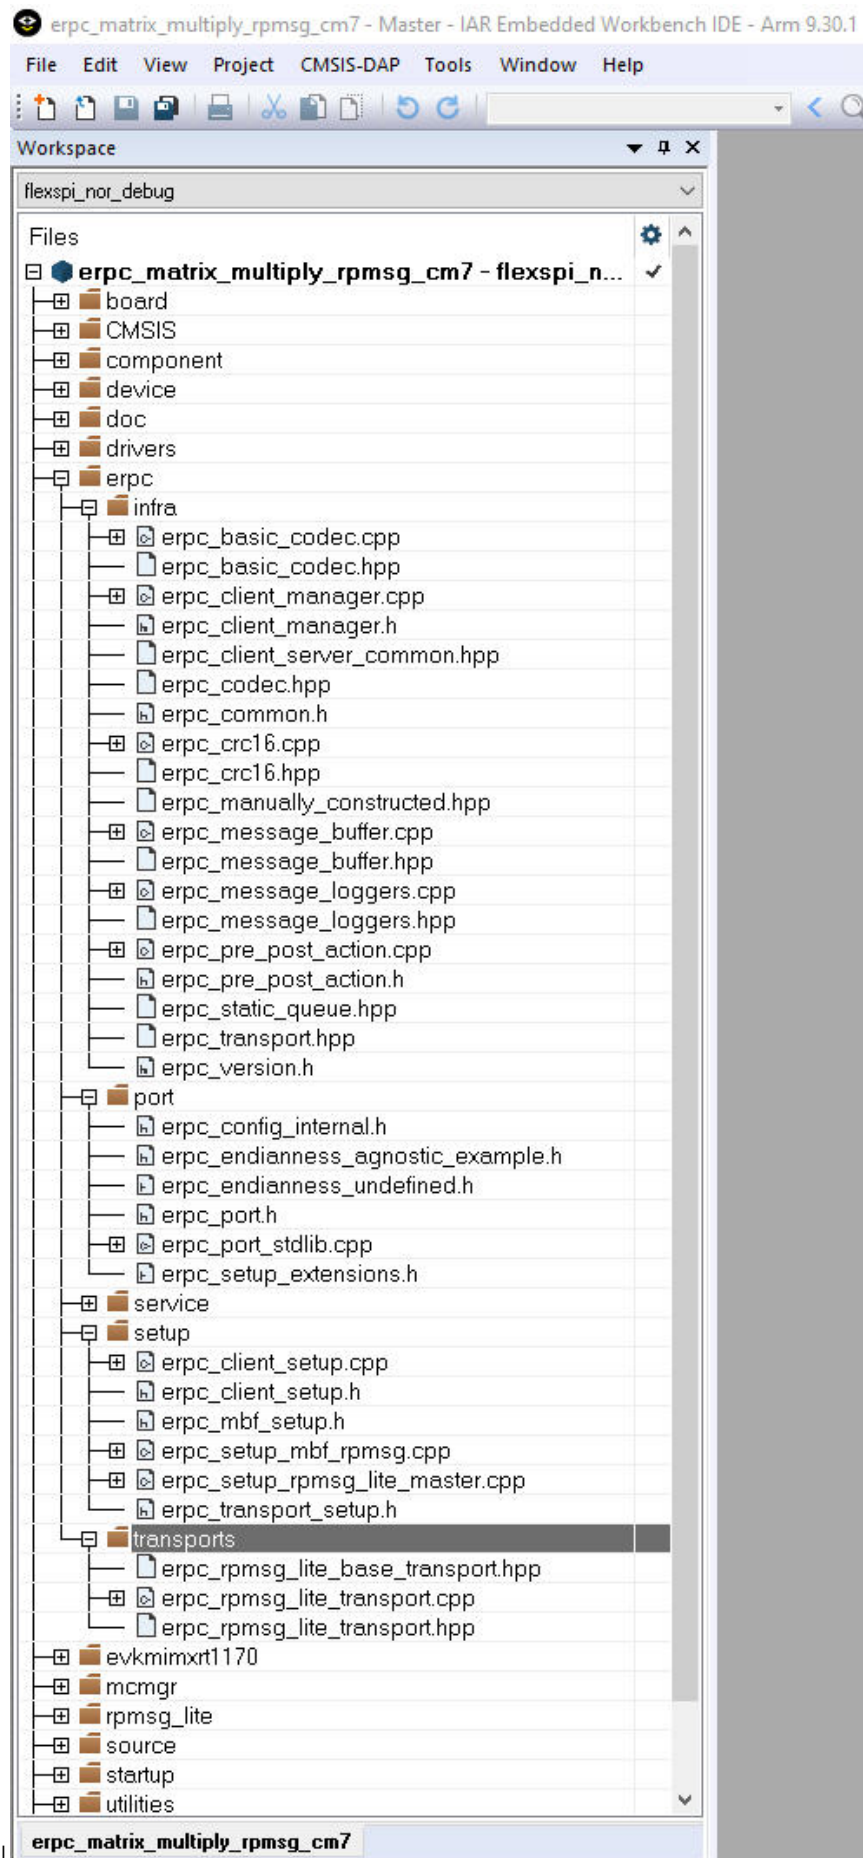

|


**Parent topic:** Multicore client application

**Client multicore infrastructure files** Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

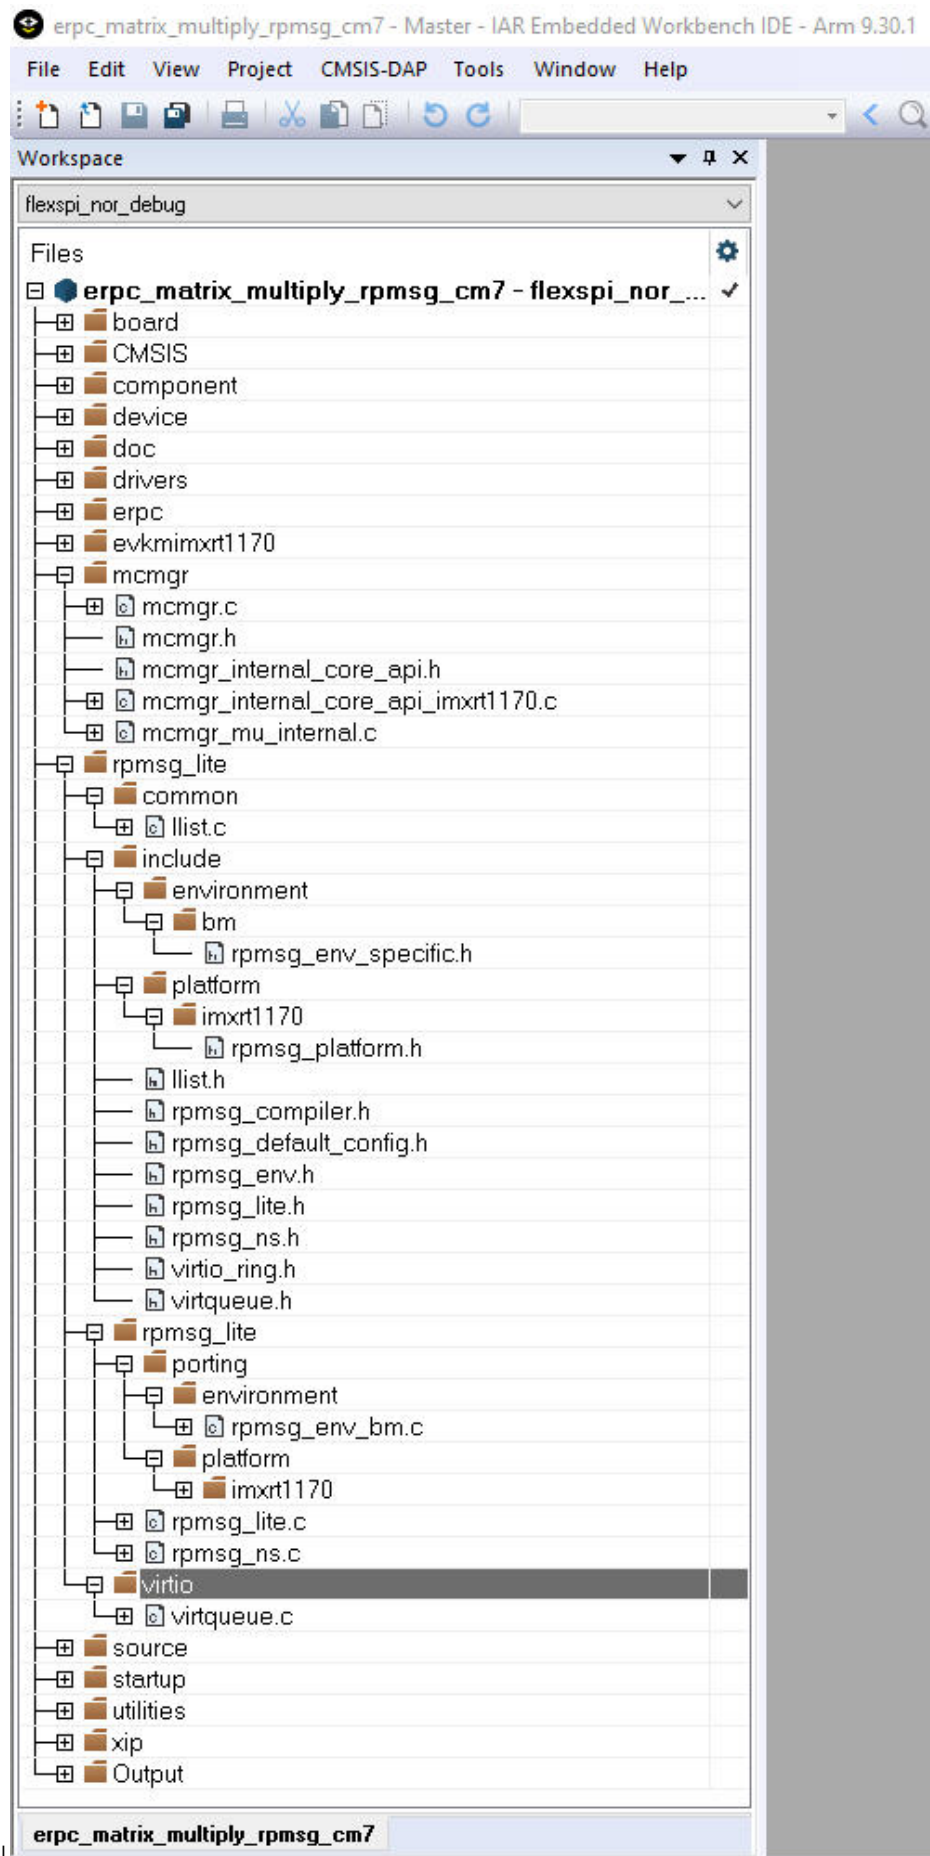

|

**Parent topic:** Multicore client application

**Client user code** The client's user code is stored in the `main_core0.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7`

The `main_core0.c` file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The `erpcMatrixMultiply` eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in `erpc_error_handler.h` and `erpc_error_handler.cpp` files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
 /* Invoke the erpcMatrixMultiply function */
 erpcMatrixMultiply(matrix1, matrix2, result_matrix);
 ...
 /* Check if some error occurred in eRPC */
 if (g_erpc_error_occurred)
 {
 /* Exit program loop */
 break;
 }
 ...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (`rpmsg_config.h`) and eRPC (`erpc_config.h`), located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg`

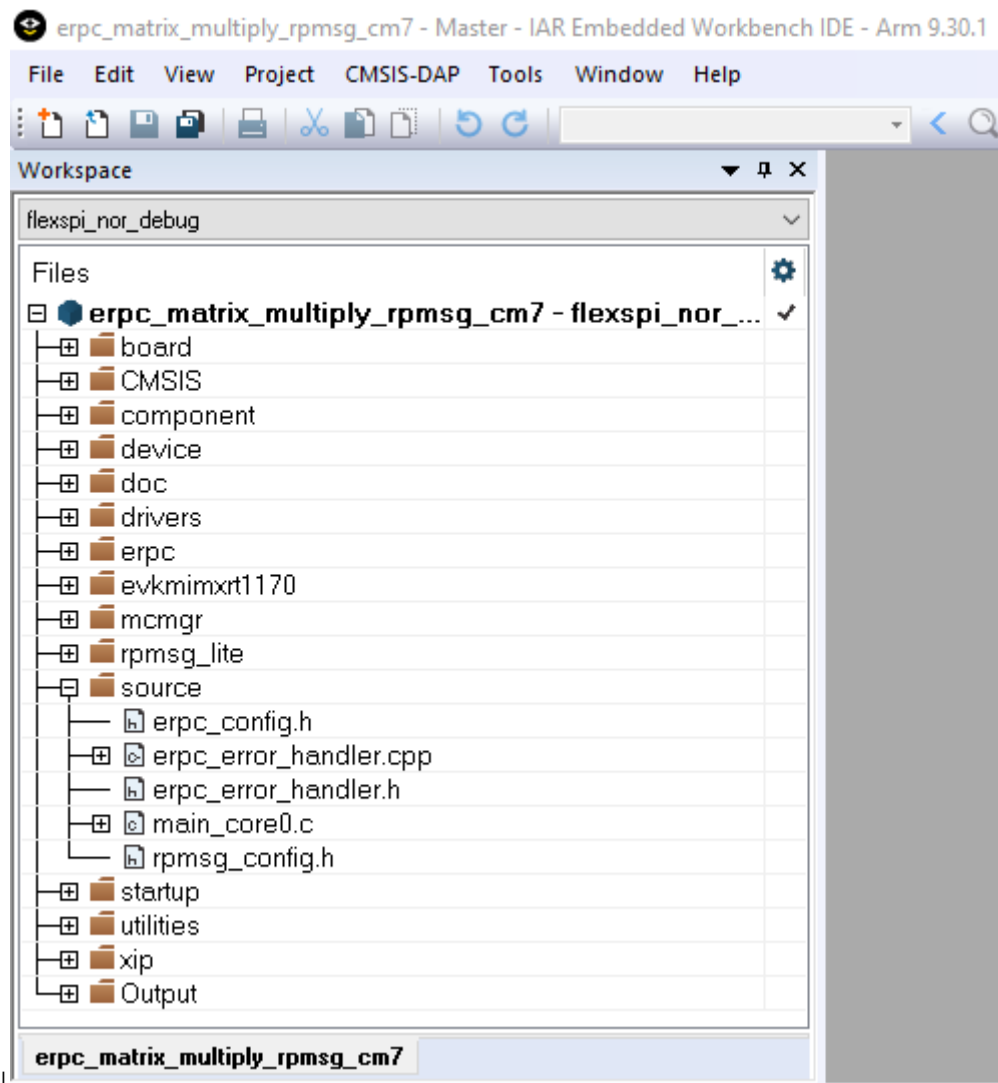

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

**Multiprocessor server application** The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPLite). The RPLite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|      |                                                                         |
|------|-------------------------------------------------------------------------|
| SPI  | <eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp          |
|      | <eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp |
|      | <eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp |
| UART | <eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp            |

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.hpp

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.cpp

|

**Server user code** The server's user code is stored in the main\_server.c file, located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_server\_matrix\_multiply\_<transport\_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
 ...
}
int main()
{
 ...
 /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
 ↪operations */
 erpc_transport_t transport;
 transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_dynamic_init();
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server)
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

**Parent topic:**Multiprocessor server application

**Multiprocessor client application** The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_client\_matrix\_multiply\_<transport\_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),



client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|      |                                                                           |
|------|---------------------------------------------------------------------------|
| SPI  | <eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp           |
|      | <eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp |
|      | <eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp |
| UART | <eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp              |
|      | <eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp     |
|      | <eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp     |
|      |                                                                           |

**Client user code** The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
 /* Invoke the erpcMatrixMultiply function */
 erpcMatrixMultiply(matrix1, matrix2, result_matrix);
 ...
 /* Check if some error occurred in eRPC */
 if (g_erpc_error_occurred)
 {
 /* Exit program loop */
 break;
 }
 ...
}
```

**Parent topic:**Multiprocessor client application

**Parent topic:**Multiprocessor server application

Parent topic:[Create an eRPC application](#)

**Running the eRPC application** Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK\_install\_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

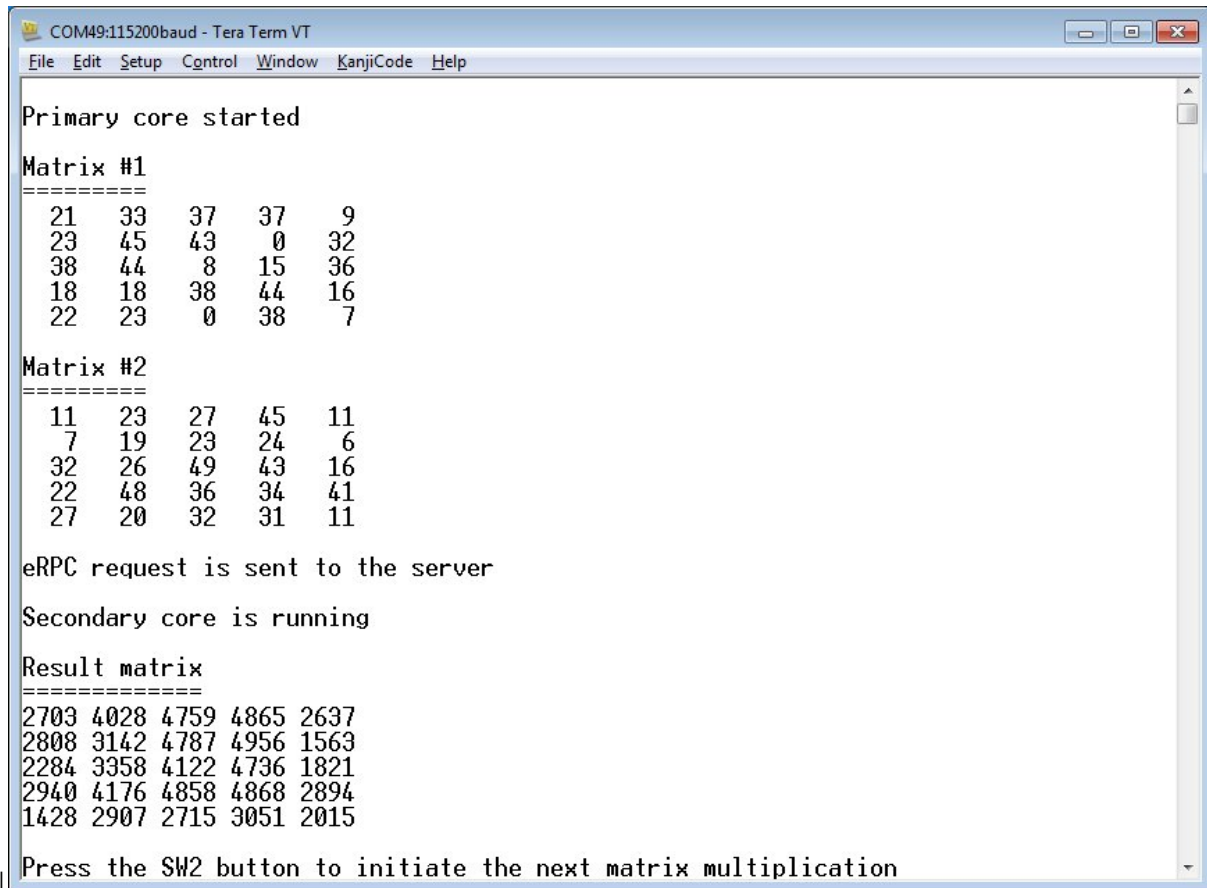

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21 33 37 37 9
 23 45 43 0 32
 38 44 8 15 36
 18 18 38 44 16
 22 23 0 38 7

Matrix #2
=====
 11 23 27 45 11
 7 19 23 24 6
 32 26 49 43 16
 22 48 36 34 41
 27 20 32 31 11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

**eRPC example** This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RPMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC communicates with the eRPC server that runs on another SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

| Multicore application source and project files | `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore/`  
 | Multiprocessor application source and project files | `<MCUXpressoSDK_install_dir>/boards/<board_name>/multi`  
`<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr`  
 | | eRPC source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/` | | RPLite  
 source files | `<MCUXpressoSDK_install_dir>/middleware/multicore/rplite/`

**Designing the eRPC application** The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has been declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

**Parent topic:** [eRPC example](#)

**Creating the IDL file** The created IDL file is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/`

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc\_matrix\_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix\_size* follows next. The *matrix\_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of *Matrix* type: *matrix1* and *matrix2* are input parameters, while *result\_matrix* is the output parameter. Additionally, the returned data type is declared as *void*.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

**Parent topic:** [eRPC example](#)

**Using the eRPC generator tool** | Windows OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64`  
| Linux OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`  
`<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86`  
| | Mac OS | `<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac`

The files for the “Matrix multiply” example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (\*.erpc) is located; then run the following command:

```
erpcgen <IDL_file>.erpc
```

- In the “Matrix multiply” example, the command should look like:

```
erpcgen erpc_matrix_multiply.erpc
```

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- “-?”/”—help” – Shows supported commands.
- “-o <filePath>”/”—output<filePath>” – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen -o <path_to_output>
<path_to_IDL>/<IDL_file_name>.erpc
```

For the “Matrix multiply” example, when the command is executed from the default erpcgen location, it looks like:

```
erpcgen -o
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu
```

In both cases, the following four files are generated into the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service` folder:

- `erpc_matrix_multiply.h`
- `erpc_matrix_multiply_client.cpp`
- `erpc_matrix_multiply_server.h`
- `erpc_matrix_multiply_server.cpp`

For multiprocessor examples, the eRPC file and pre-generated files can be found in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/service` folder.

**For Linux OS users:**

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as `./erpcgen...` instead of as `erpcgen ....`

Parent topic: [eRPC example](#)

**Create an eRPC application** This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
  1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
  2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
  3. Add infrastructure files.
  4. Add user code for client and server applications.
  5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.


**Multicore server application** The “Matrix multiply” eRPC server project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmmsg/cm4/iar/`

The project files for the eRPC server have the `_cm4` suffix.

**Server project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

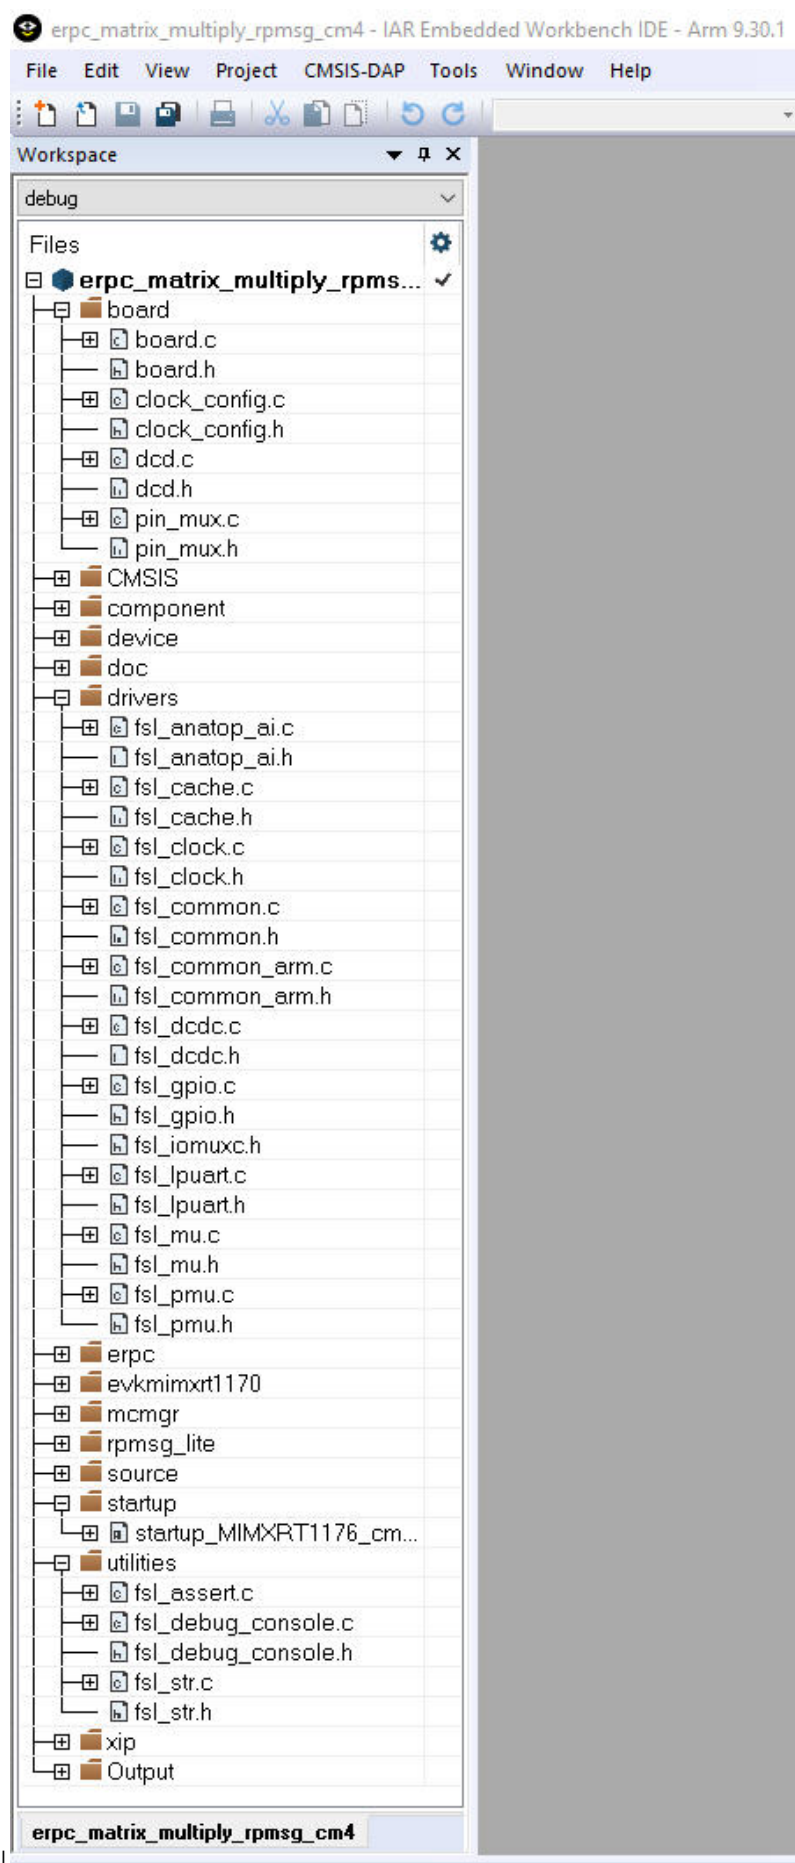

|


**Parent topic:** Multicore server application

**Server related generated files** The server-related generated files are:

- erpc\_\_matric\_\_multiply.h
- erpc\_\_matrix\_\_multiply\_\_server.h
- erpc\_\_matrix\_\_multiply\_\_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_examples/erpc\_common/erpc\_matrix\_multiply/

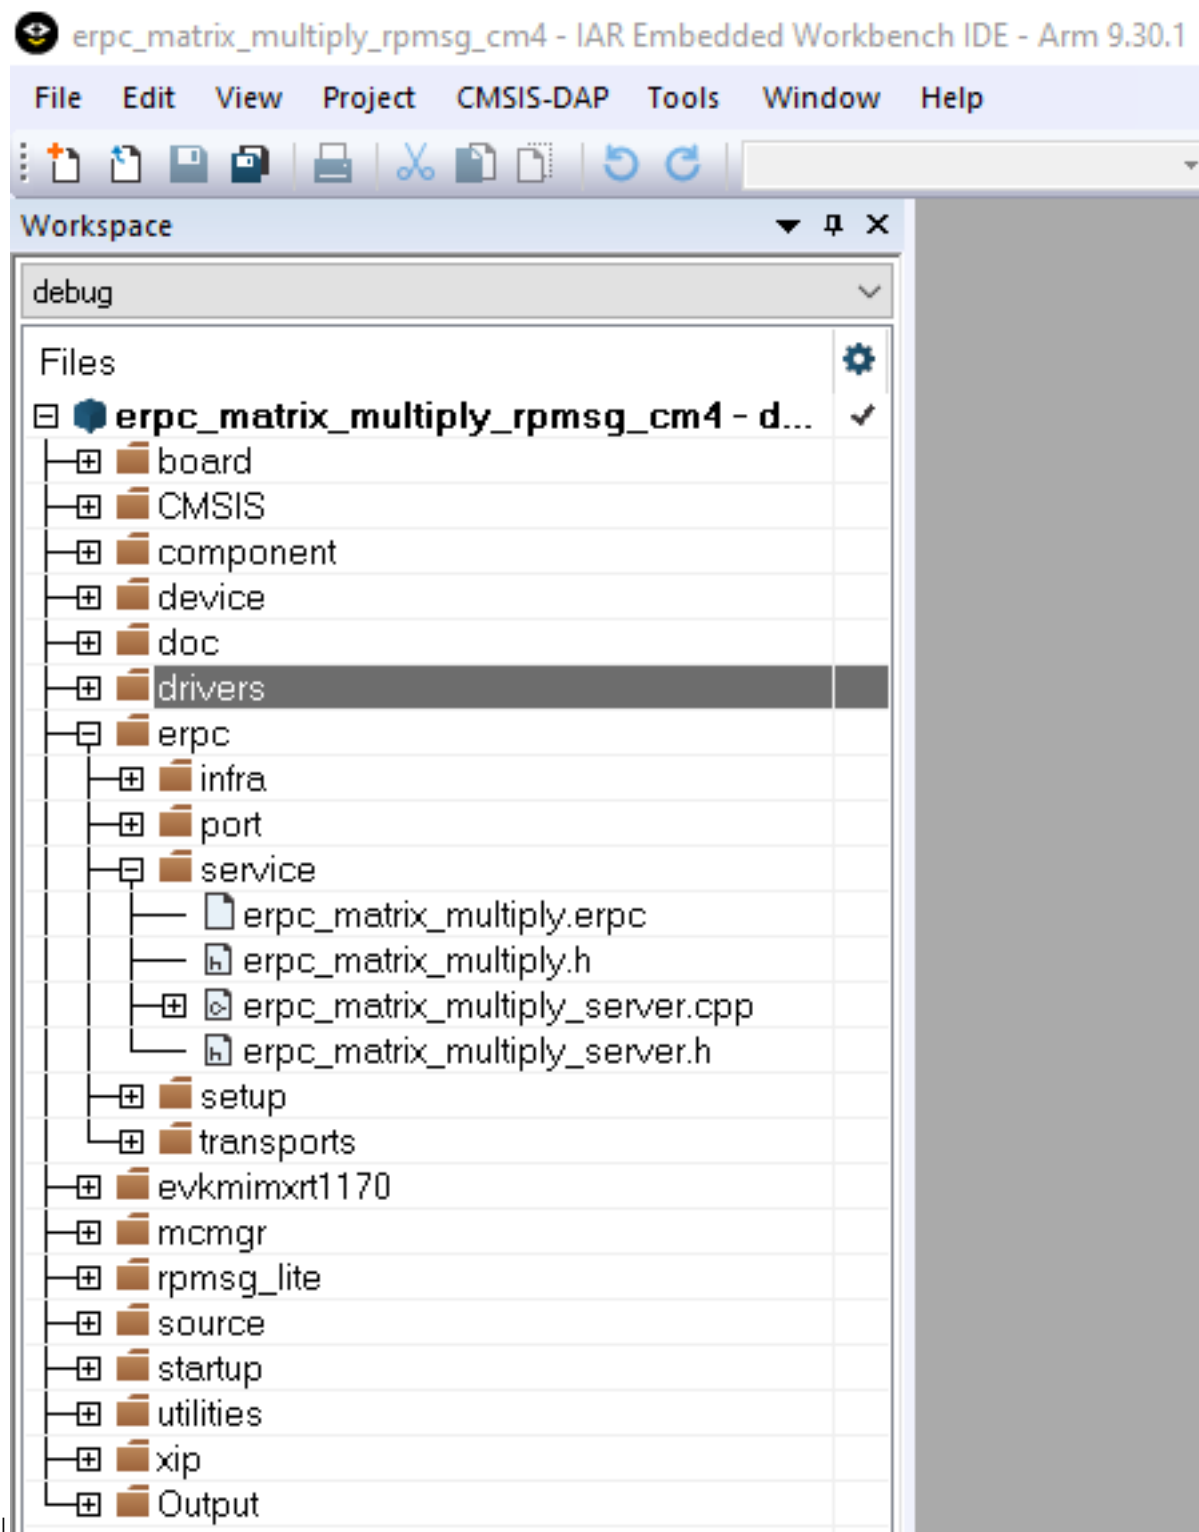

**Parent topic:** Multicore server application


**Server infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.



- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, `erpc_server.hpp`, `erpc_server.cpp`, `erpc_simple_server.hpp`, and `erpc_simple_server.cpp`, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The `erpc_common.hpp` file is used for common eRPC definitions, typedefs, and enums.
  - The `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: `erpc_message_buffer.h` and `erpc_message_buffer.cpp`.
  - The `erpc_transport.h` file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
  - `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
  - `erpc_config_internal.h` internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The `erpc_server_setup.h` and `erpc_server_setup.cpp` files need to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
  - The `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_remote.cpp` files need to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files need to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files need to be added into the server project.

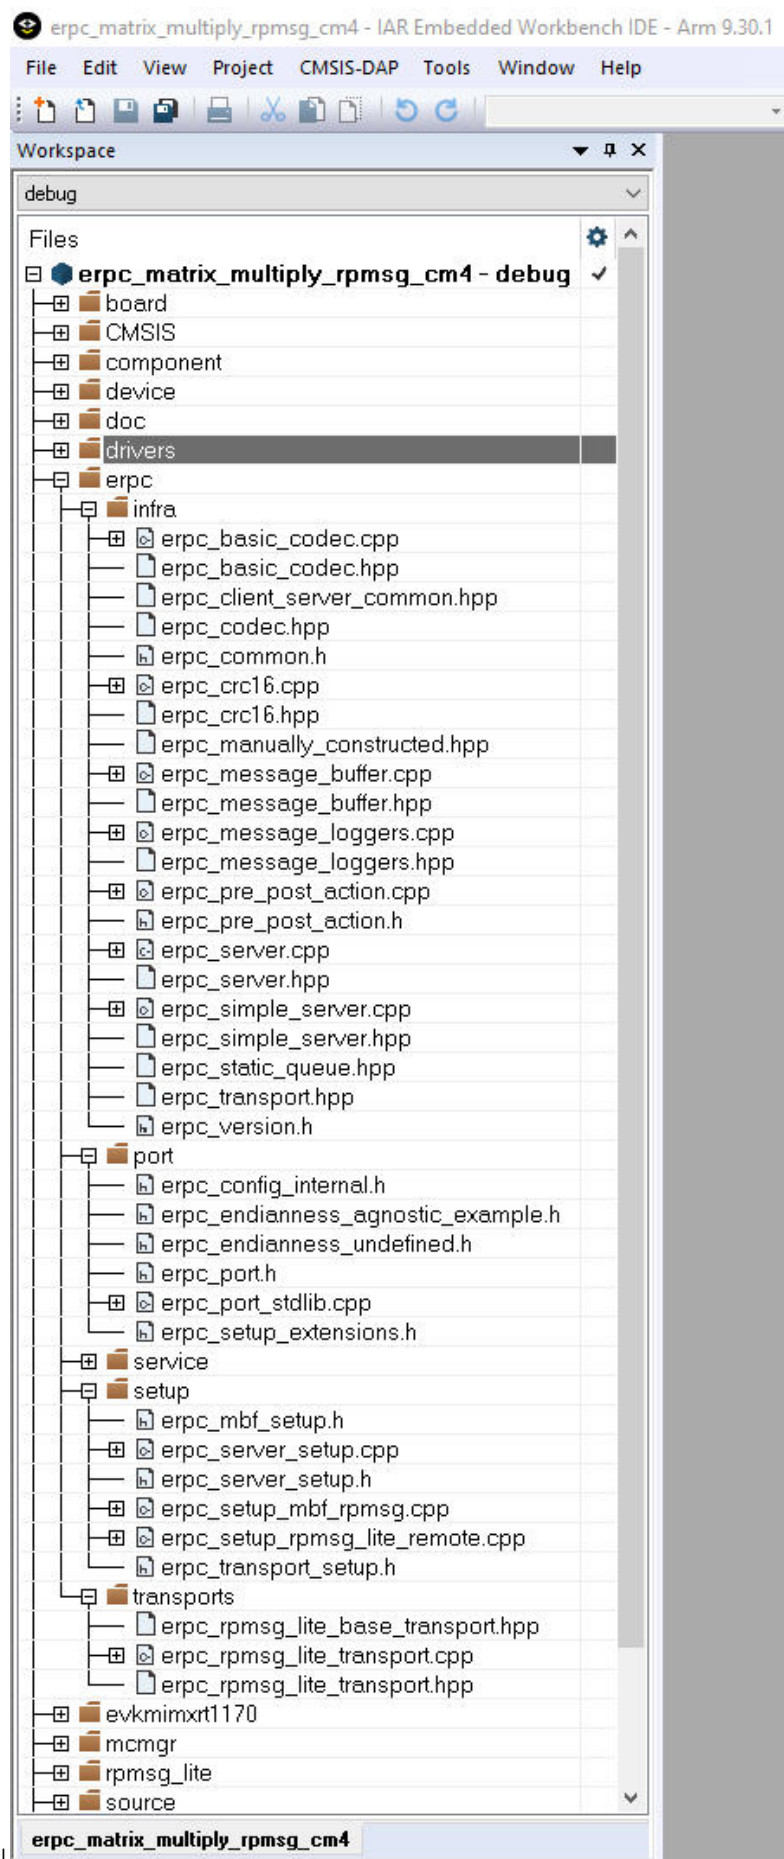

|


**Parent topic:** Multicore server application

**Server multicore infrastructure files** Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

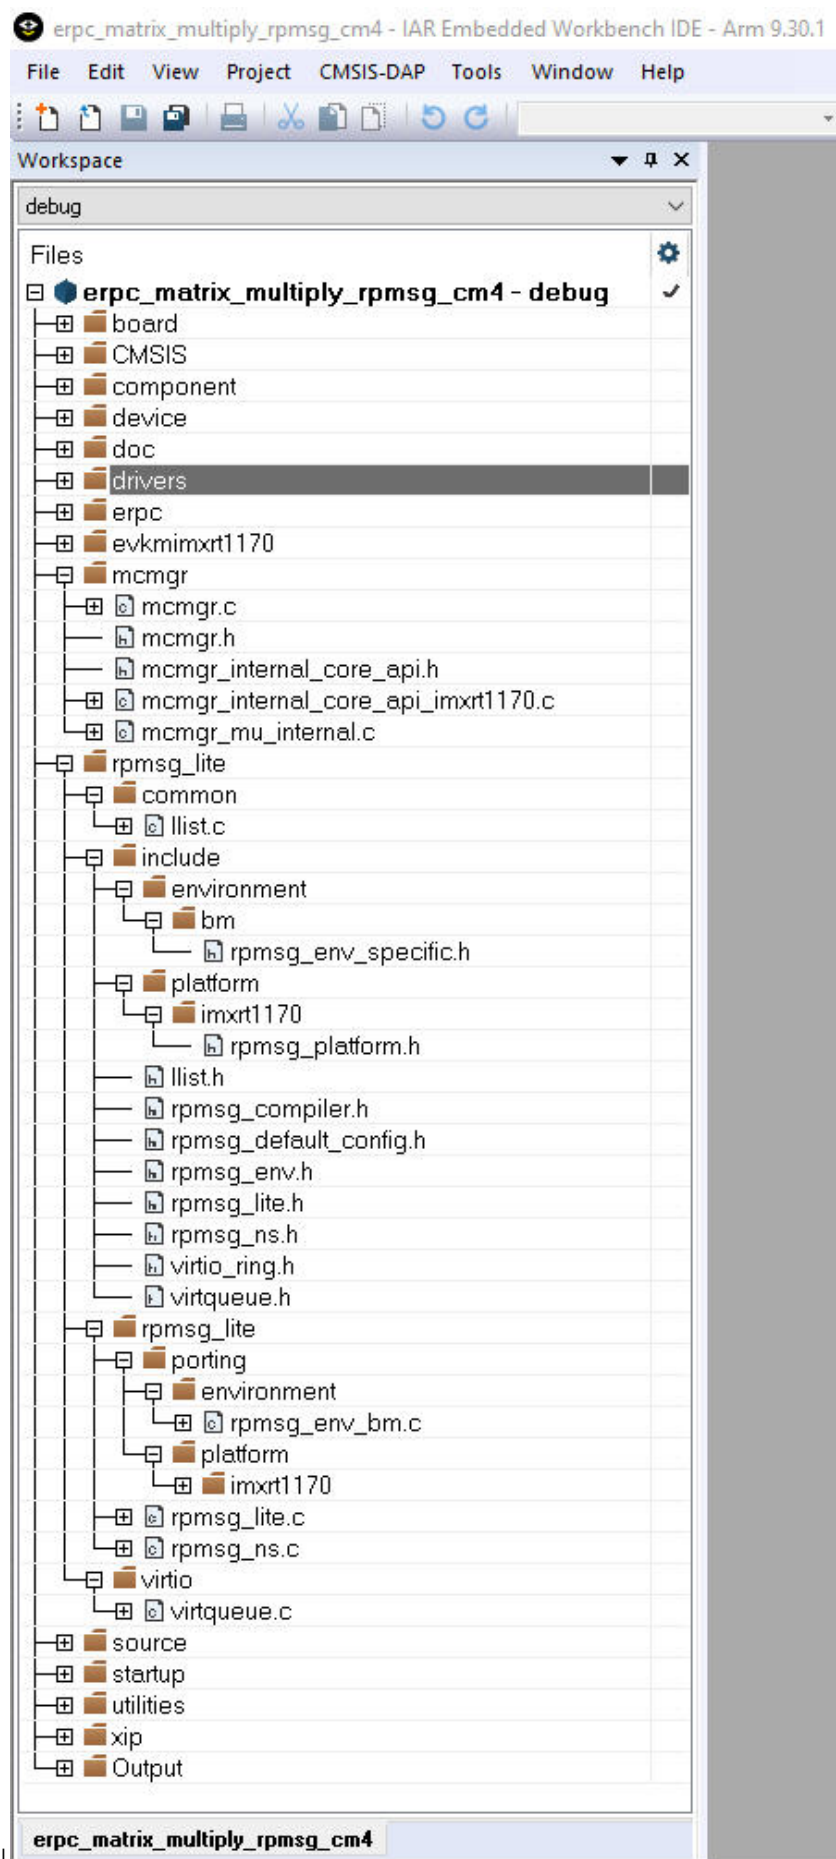

**Parent topic:**Multicore server application

**Server user code** The server's user code is stored in the `main_core1.c` file, located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4`


The `main_core1.c` file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the `erpc_error_handler.h` and `erpc_error_handler.cpp` files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
 ...
}
int main()
{
 ...
 /* RPSMsg-Lite transport layer initialization */
 erpc_transport_t transport;
 transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
 ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_rpmsg_init(transport);
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server);
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg\_config.h) and eRPC (erpc\_config.h), located in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg` folder.

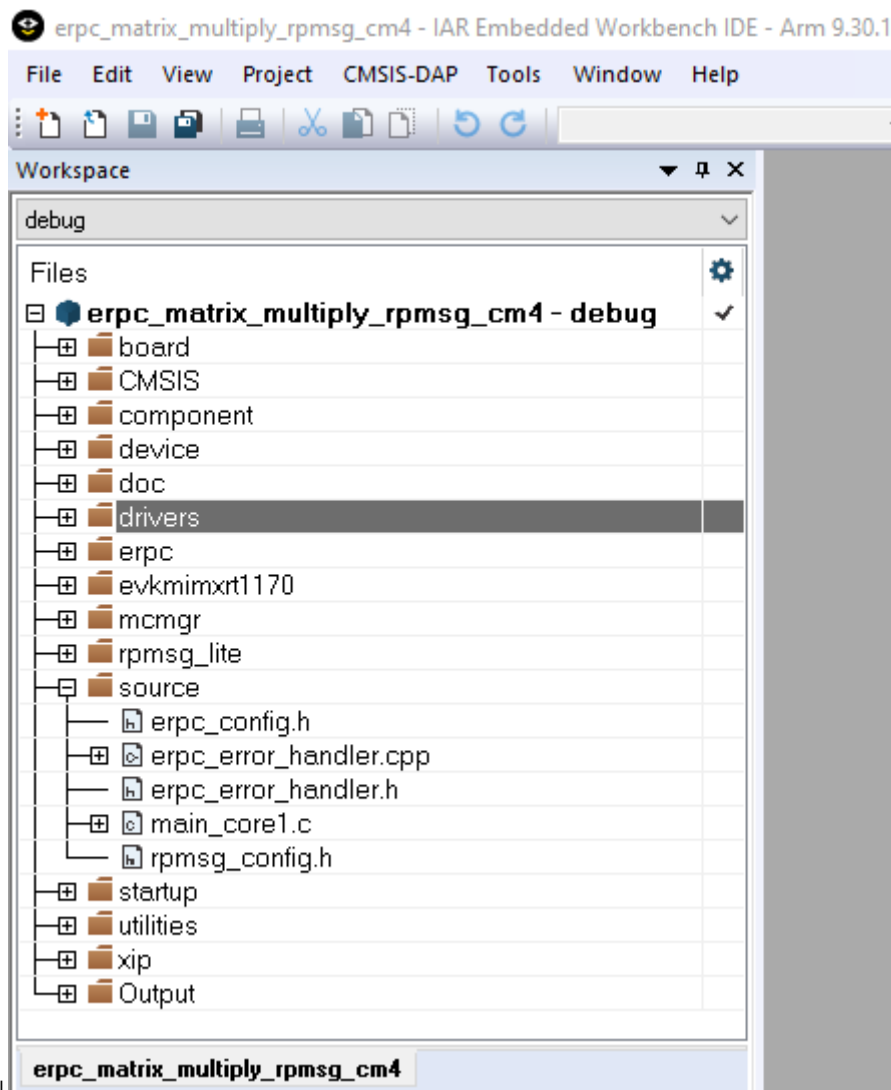

**Parent topic:**Multicore server application

**Parent topic:**[Create an eRPC application](#)


**Multicore client application** The “Matrix multiply” eRPC client project is located in the following folder:

`<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar`

Project files for the eRPC client have the `_cm7` suffix.

**Client project basic source files** The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- `<MCUXpressoSDK_install_dir>/devices/<device>`
- `<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/`

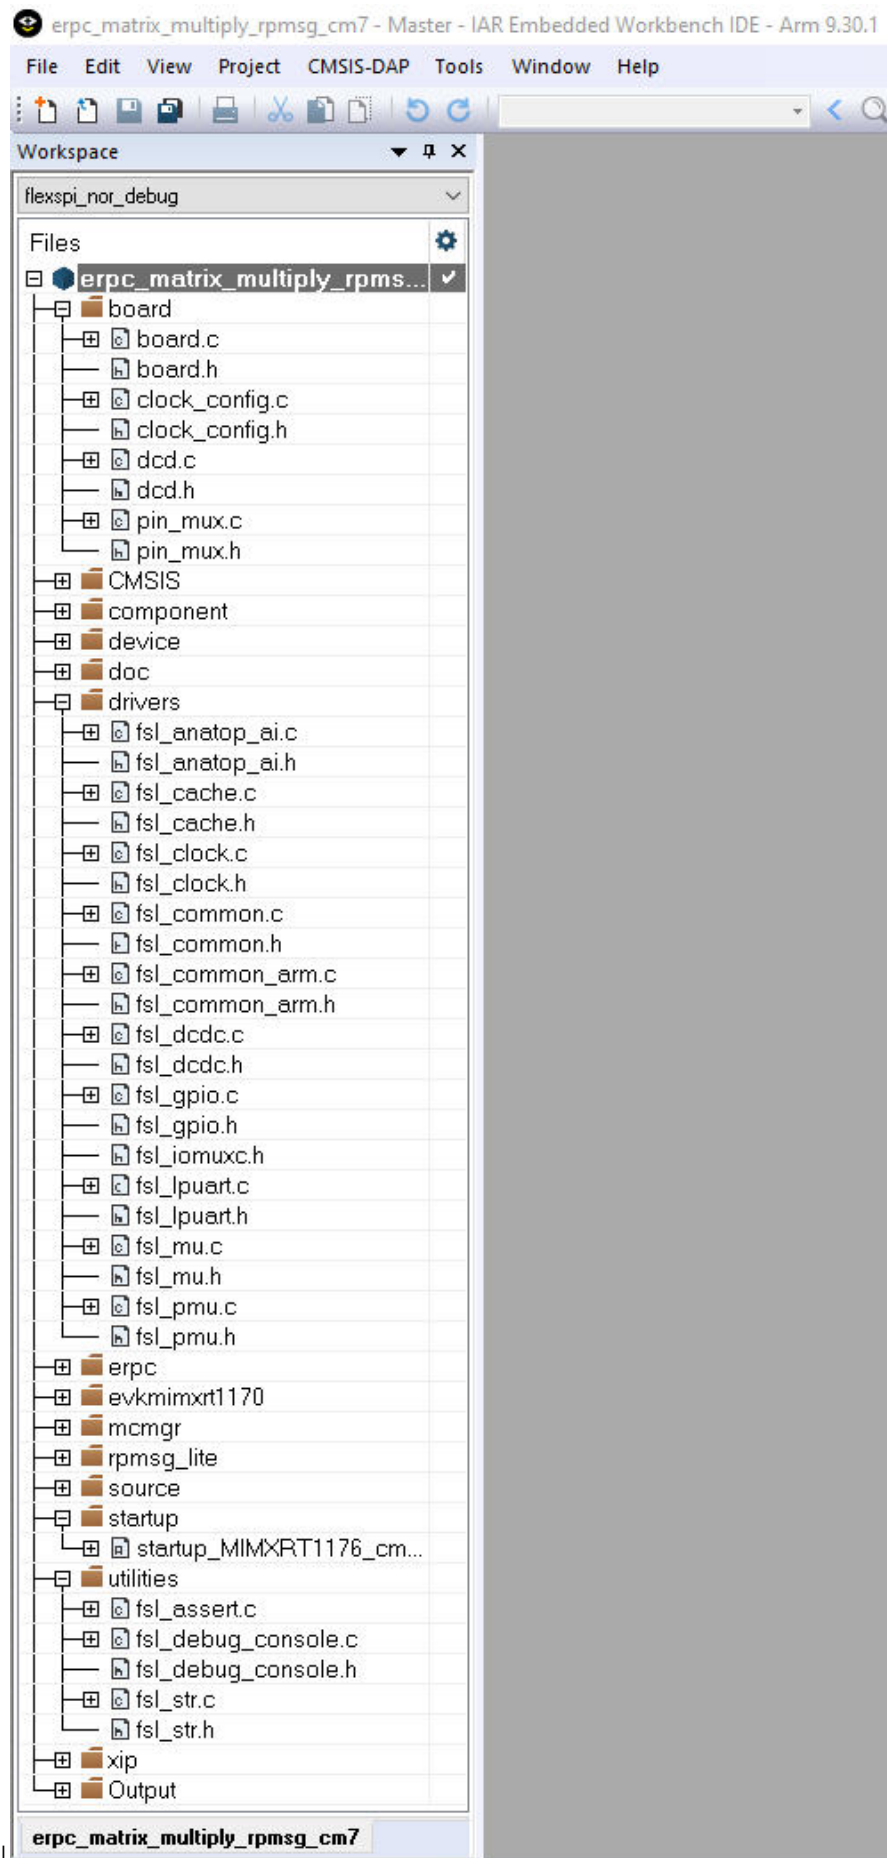

|


**Parent topic:**Multicore client application

**Client-related generated files** The client-related generated files are:

- erpc\_\_matric\_\_multiply.h
- erpc\_\_matrix\_\_multiply\_\_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the `<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/` folder.



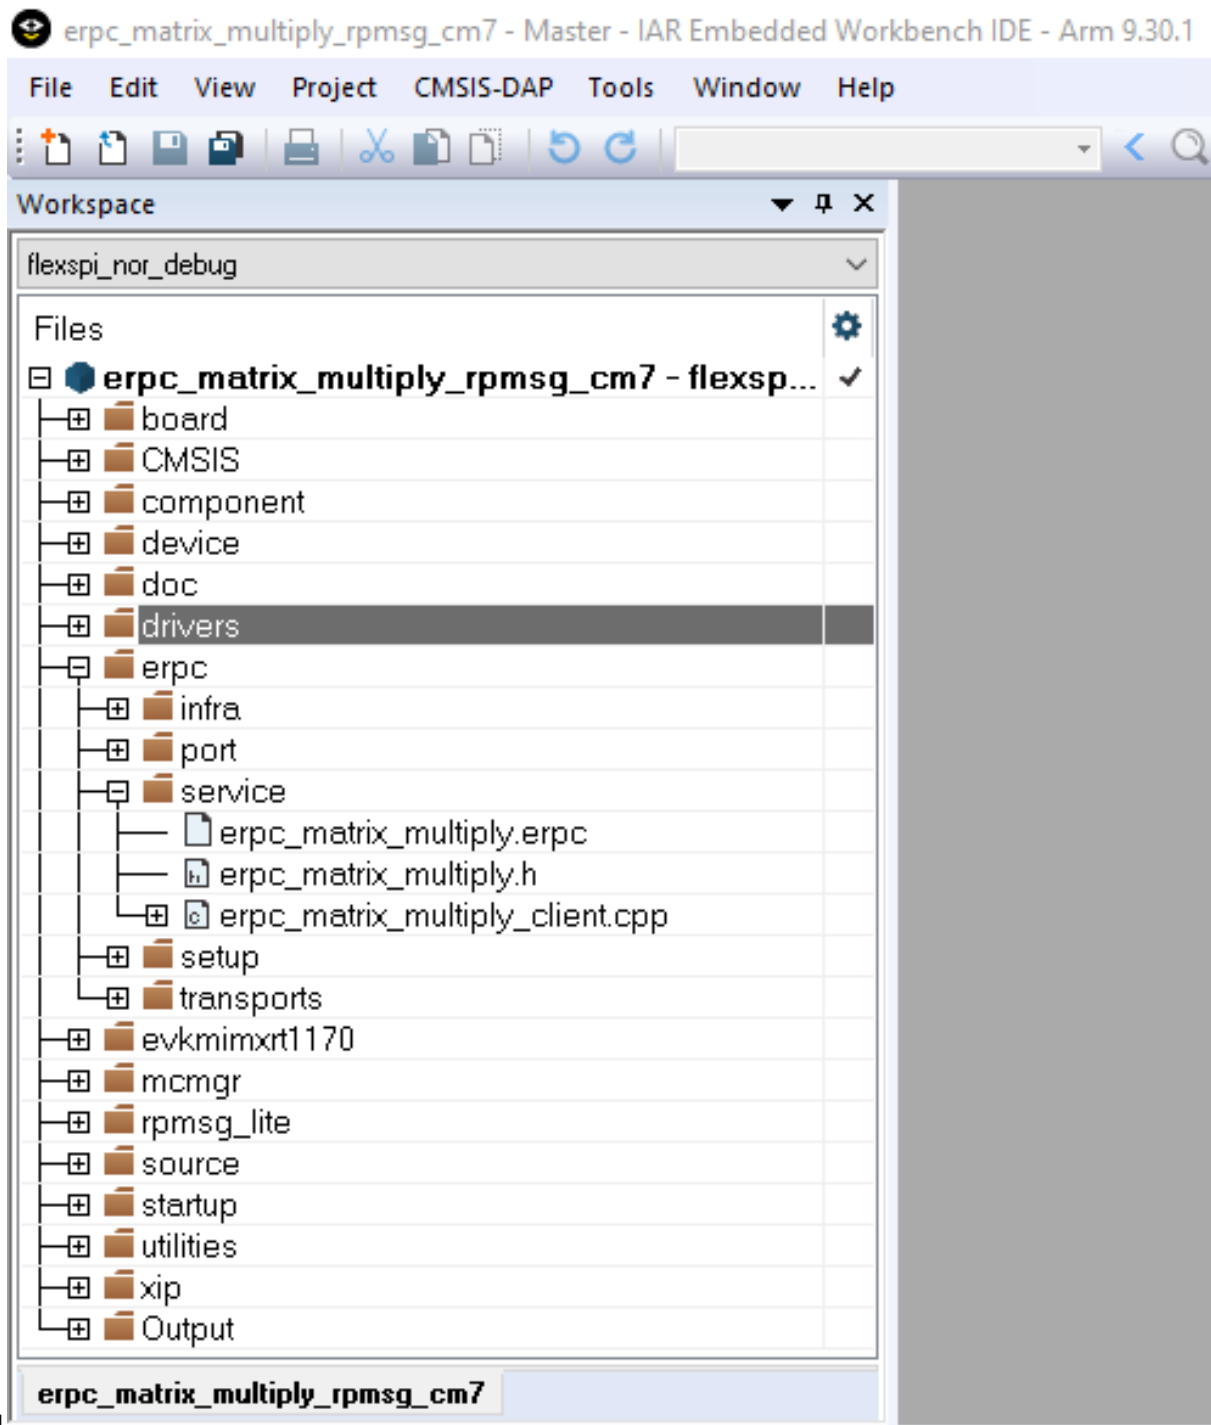

**Parent topic:** Multicore client application

**Client infrastructure files** The eRPC infrastructure files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c`

The **erpc\_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, `erpc_client_manager.h` and `erpc_client_manager.cpp`, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (`erpc_codec.hpp`, `erpc_basic_codec.hpp`, and `erpc_basic_codec.cpp`) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- `erpc_common.h` file is used for common eRPC definitions, typedefs, and enums.
- `erpc_manually_constructed.hpp` file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: `erpc_message_buffer.hpp` and `erpc_message_buffer.cpp`.
- `erpc_transport.hpp` file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.


- `erpc_port.h` file contains definition of `erpc_malloc()` and `erpc_free()` functions.
- `erpc_port_stdlib.cpp` file ensures adaptation to `stdlib`.
- `erpc_config_internal.h` internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- `erpc_client_setup.h` and `erpc_client_setup.cpp` files needs to be added into the “Matrix multiply” example project to demonstrate the use of C-wrapped functions in this example.
- `erpc_transport_setup.h` and `erpc_setup_rpmsg_lite_master.cpp` files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- `erpc_mbf_setup.h` and `erpc_setup_mbf_rpmsg.cpp` files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, `erpc_rpmsg_lite_base_transport.hpp`, `erpc_rpmsg_lite_transport.hpp`, and `erpc_rpmsg_lite_transport.cpp` files needs to be added into the client project.

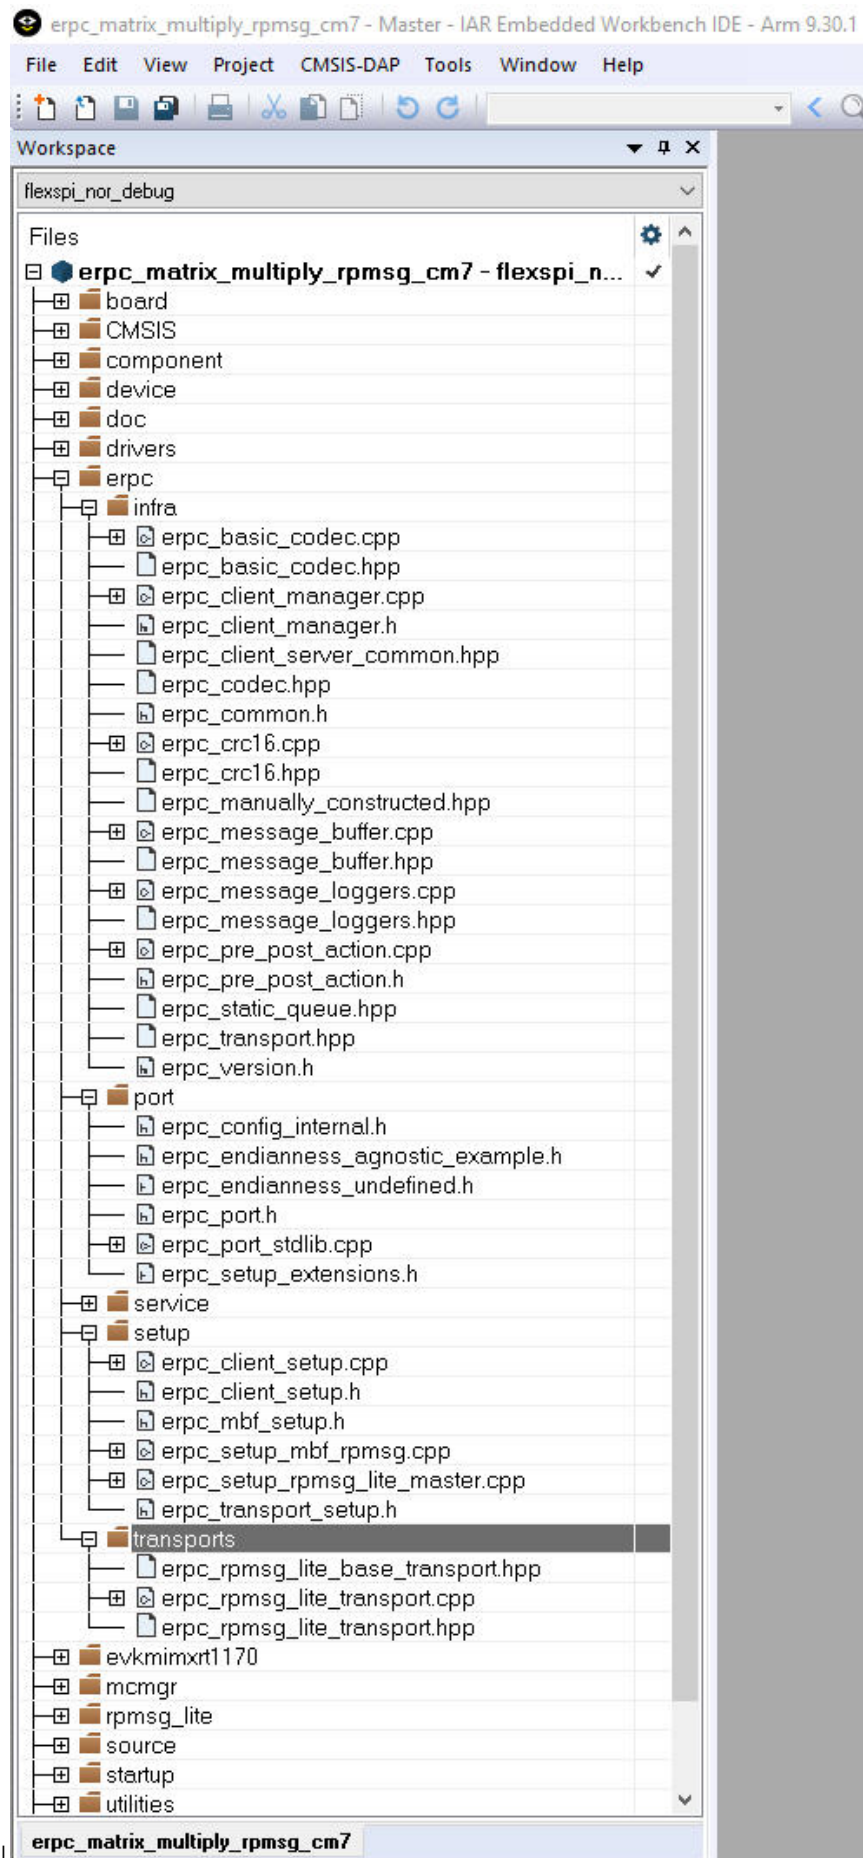

|


**Parent topic:** Multicore client application

**Client multicore infrastructure files** Because of the RPSMsg-Lite (transport layer), it is also necessary to include RPSMsg-Lite related files, which are in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/rpsmsg_lite/`

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

`<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/`

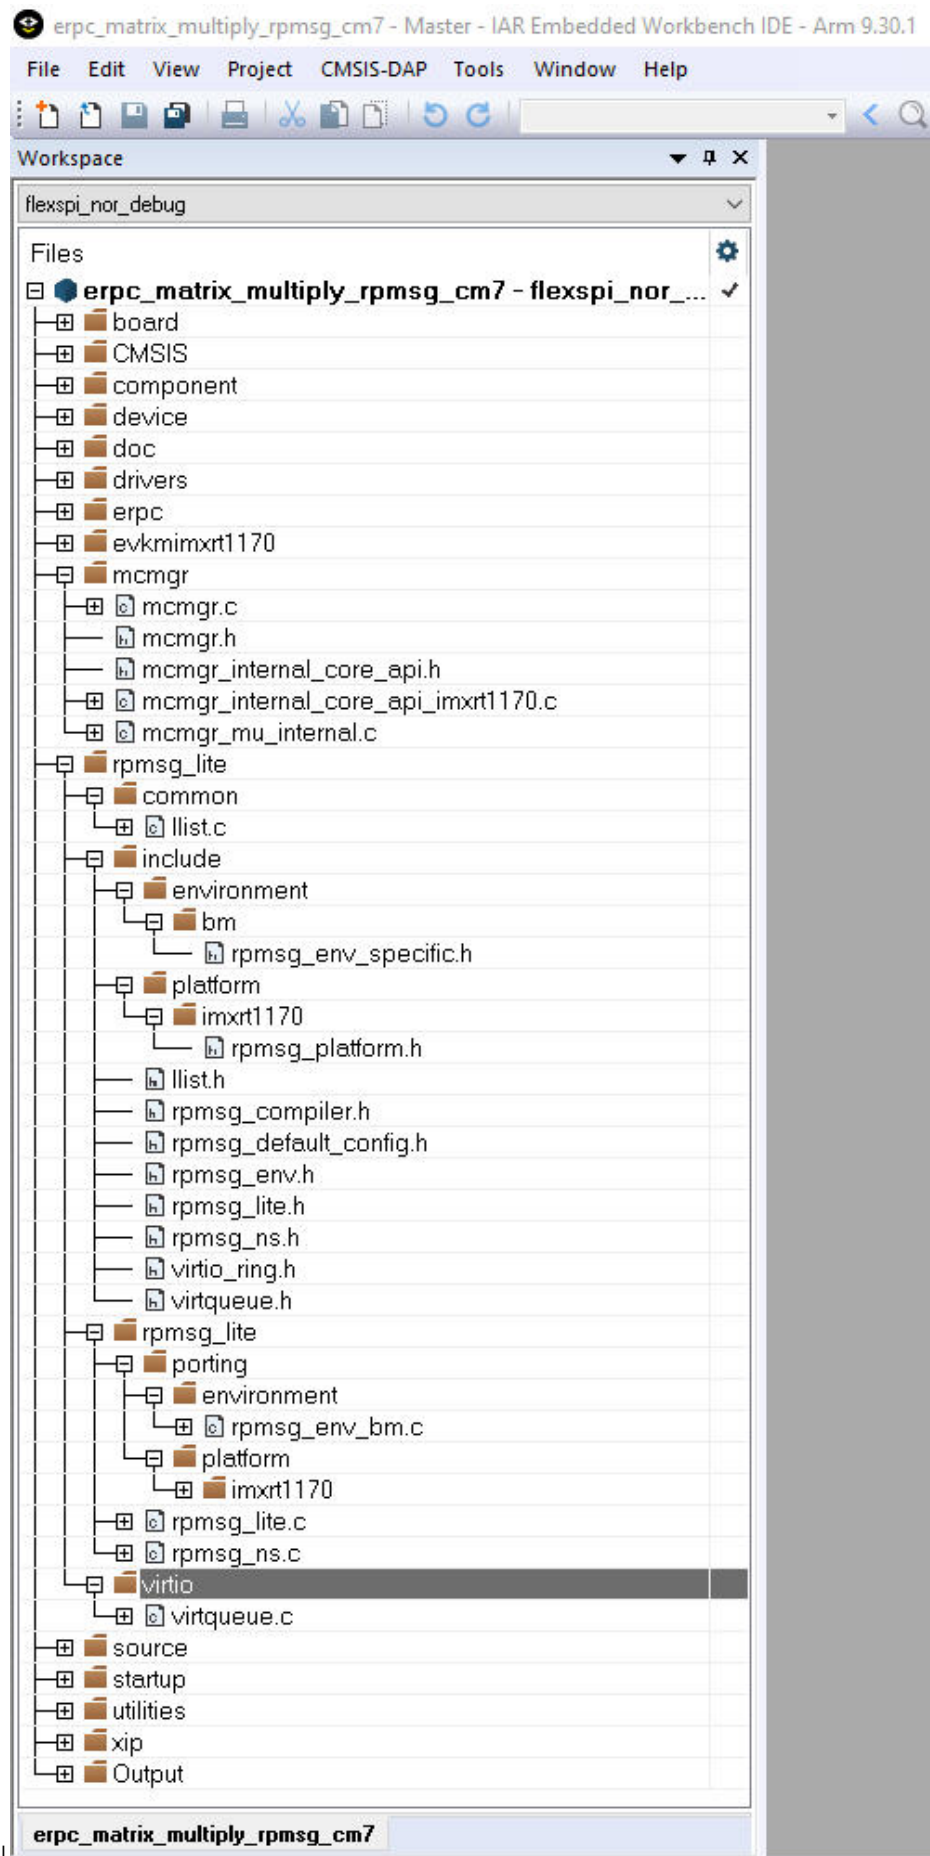

|

**Parent topic:** Multicore client application

**Client user code** The client's user code is stored in the main\_core0.c file, located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_example/erpc\_matrix\_multiply\_rpmsg/cm7

The main\_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc\_error\_handler.h and erpc\_error\_handler.cpp files.


The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPSMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
 /* Invoke the erpcMatrixMultiply function */
 erpcMatrixMultiply(matrix1, matrix2, result_matrix);
 ...
 /* Check if some error occurred in eRPC */
 if (g_erpc_error_occurred)
 {
 /* Exit program loop */
 break;
 }
 ...
}
```

Except for the application main file, there are configuration files for the RPSMsg-Lite (rpmsg\_config.h) and eRPC (erpc\_config.h), located in the following folder:

<MCUXpressoSDK\_install\_dir>/boards/evkmimxrt1170/multicore\_examples/erpc\_matrix\_multiply\_rpmsg

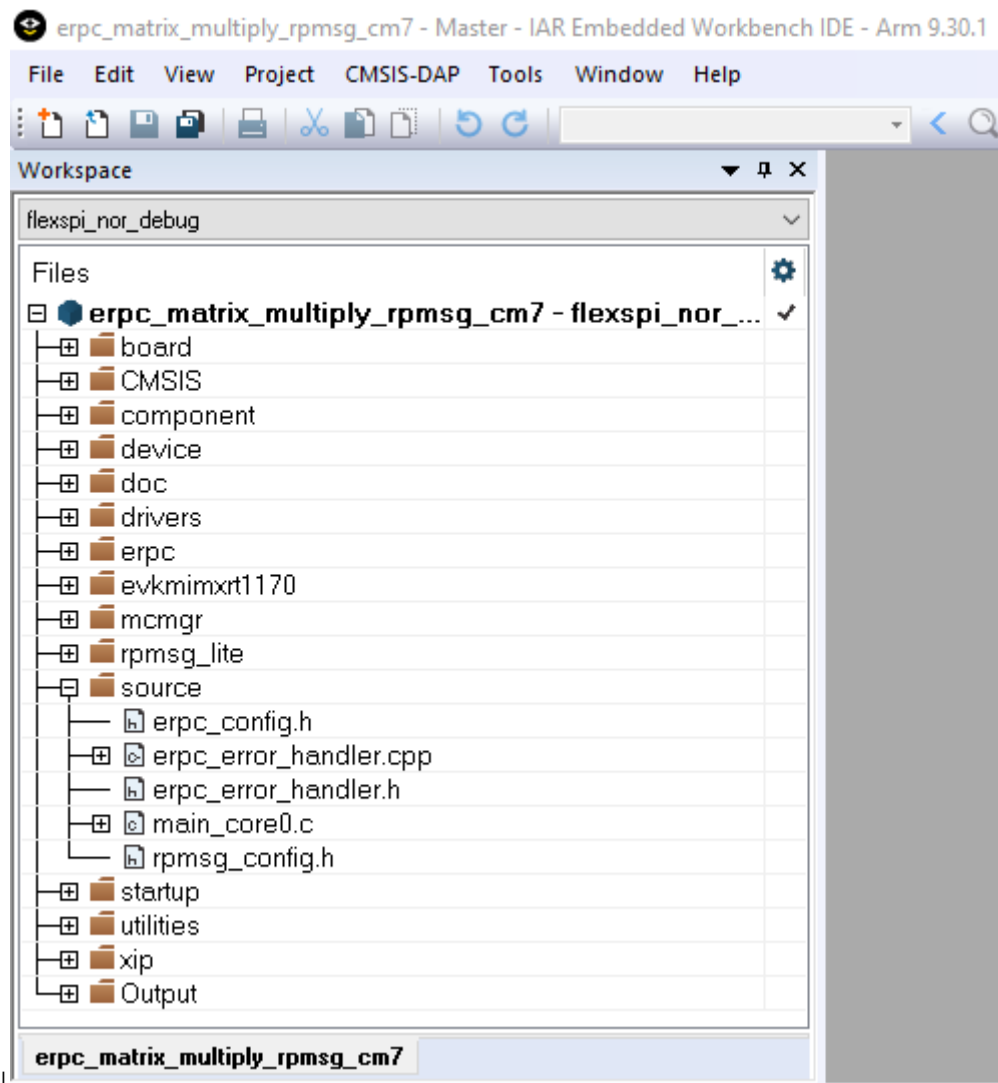

Parent topic: Multicore client application

Parent topic: [Create an eRPC application](#)

**Multiprocessor server application** The “Matrix multiply” eRPC server project for multiprocessor applications is located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>` folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|      |                                                                         |
|------|-------------------------------------------------------------------------|
| SPI  | <eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp          |
|      | <eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp |
|      | <eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp |
| UART | <eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp            |

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.hpp

<eRPC base directory>/erpc\_c/transport/erpc\_uart\_cmsis\_transport.cpp

|

**Server user code** The server's user code is stored in the main\_server.c file, located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_server\_matrix\_multiply\_<transport\_layer>/ folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
 ...
}
int main()
{
 ...
 /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver.
 ↪operations */
 erpc_transport_t transport;
 transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
 ...
 /* MessageBufferFactory initialization */
 erpc_mbf_t message_buffer_factory;
 message_buffer_factory = erpc_mbf_dynamic_init();
 ...
 /* eRPC server side initialization */
 erpc_server_t server;
 server = erpc_server_init(transport, message_buffer_factory);
 ...
 /* Adding the service to the server */
 erpc_service_t service = create_MatrixMultiplyService_service();
 erpc_add_service_to_server(server, service);
 ...
 while (1)
 {
 /* Process eRPC requests */
 erpc_status_t status = erpc_server_poll(server)
 /* handle error status */
 if (status != kErpcStatus_Success)
 {
 /* print error description */
 erpc_error_handler(status, 0);
 ...
 }
 ...
 }
}
```

**Parent topic:**Multiprocessor server application

**Multiprocessor client application** The “Matrix multiply” eRPC client project for multiprocessor applications is located in the <MCUXpressoSDK\_install\_dir>/boards/<board\_name>/multiprocessor\_examples/erpc\_client\_matrix\_multiply\_<transport\_layer>/iar/ folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),



client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPSMsg-Lite). The RPSMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|      |                                                                           |
|------|---------------------------------------------------------------------------|
| SPI  | <eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp           |
|      | <eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp |
|      | <eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp |
| UART | <eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp              |
|      | <eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp     |
|      | <eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp     |
|      |                                                                           |

**Client user code** The client's user code is stored in the `main_client.c` file, located in the `<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/` folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:


```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver
↳operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
 /* Invoke the erpcMatrixMultiply function */
 erpcMatrixMultiply(matrix1, matrix2, result_matrix);
 ...
 /* Check if some error occurred in eRPC */
 if (g_erpc_error_occurred)
 {
 /* Exit program loop */
 break;
 }
 ...
}
```

**Parent topic:**Multiprocessor client application

**Parent topic:**Multiprocessor server application

Parent topic:[Create an eRPC application](#)

**Running the eRPC application** Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <MCUXpressoSDK\_install\_dir>/docs folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

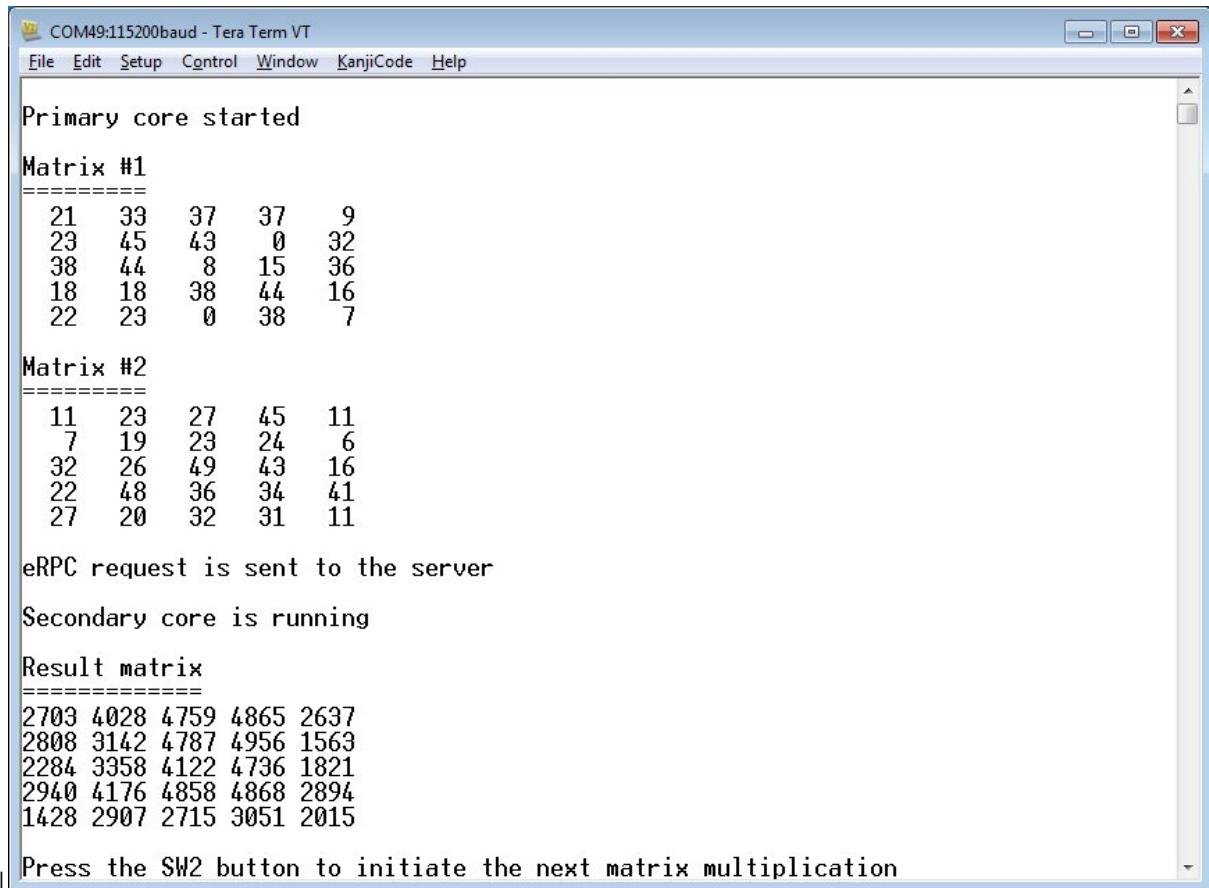

```

COM49:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help

Primary core started

Matrix #1
=====
 21 33 37 37 9
 23 45 43 0 32
 38 44 8 15 36
 18 18 38 44 16
 22 23 0 38 7

Matrix #2
=====
 11 23 27 45 11
 7 19 23 24 6
 32 26 49 43 16
 22 48 36 34 41
 27 20 32 31 11

eRPC request is sent to the server

Secondary core is running

Result matrix
=====
2703 4028 4759 4865 2637
2808 3142 4787 4956 1563
2284 3358 4122 4736 1821
2940 4176 4858 4868 2894
1428 2907 2715 3051 2015

Press the SW2 button to initiate the next matrix multiplication

```

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:[Create an eRPC application](#)

Parent topic:[eRPC example](#)

**Other uses for an eRPC implementation** The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the [github.com/EmbeddedRPC](https://github.com/EmbeddedRPC).

**Note about the source code in the document** Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

**Changelog eRPC** All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

## Unreleased

### Added

- Zephyr examples added support for RT600 and RT700.

### Updated

- eRPC Zephyr module port updated for Zephyr version 4.4

### Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.
- eRPC: Several MISRA violations addressed.

## 1.14.0

### Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

### Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.
- erpc: Fixed Makefile, install the erpc\_simple\_server header, GitHub PR #447.
- erpc\_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

### 1.13.0

### Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr\_uart, zephyr\_mbox).
- eRPC: Add new Zephyr-related examples.

### Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

### Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

### 1.12.0

### Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in Message-Buffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

**Fixed**

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

**1.11.0****Fixed**

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU\_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSBIO.GetNumPorts API use with libusb python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcpy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

**1.10.0****Fixed**

- eRPC: MU transport layer switched to blocking MU\_SendMsg() API use.

### 1.10.0

#### Added

- eRPC: Add TCP\_NODELAY option to python, GitHub PR #298.

#### Fixed

- eRPC: MUPTransport adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT\_TRUE with EXPECT\_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg\_lite based transports to changed rpmsg\_lite\_wait\_for\_link\_up() API parameters.
- eRPC, erpcgen: Better distinguish which file can and cannot be linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc\_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest\_enumErrorCode\_allDirection, serialize enums as int32 instead of uint32.

### 1.9.1

#### Fixed

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.

- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.
- eRPC: Remove ERPC\_PRE\_POST\_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcpy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid for serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg\_lite\_wait\_for\_link\_up() in rpmsg\_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

### 1.9.0

#### Added

- eRPC: Allow used LIBUSBSIO device index being specified from the Python command line argument.

#### Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run\_clang\_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g\_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc\_setup\_mbf\_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related API, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

### 1.8.1

#### Added

- eRPC: New i2c\_slave\_transport transport introduced.

#### Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message\_loggers and pre\_post\_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

### 1.8.0

#### Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char\*, GitHub PR #125.

#### Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native \_WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix\_multiply.py example: Add -serial and -baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc\_framed\_transport.cpp: return error if received message has zero length, GitHub PR #141.



- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '\$' character from generated symbol name in '\_\$union' suffix, GitHub PR #103.
- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

#### 1.7.4

##### Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

##### Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

#### 1.7.3

##### Fixed

- eRPC: Improved the test\_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

#### 1.7.2

##### Added

- eRPC: Add missing doxygen comments for transports.

### Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

### 1.7.1

### Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

### 1.7.0

### Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

### Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

### 1.6.0

### Added

- eRPC: Added @nullable support for scalar types.

### Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

## 1.5.0

### Added

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

## 1.4.0

### Added

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

### Fixed

- eRPC: win\_flex\_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

## [1.3.0]

### Added

- eRPC: New annotation types introduced (@length, @max\_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

## [1.2.0]

**Added**

- eRPC source directory organization changed.
- Many eRPC improvements.

**[1.1.0]**

**Added**

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

**[1.0.0]**

**Added**

- Initial Release

# Chapter 4

## RTOS

### 4.1 FreeRTOS

#### 4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

[FreeRTOS kernel for MCUXpresso SDK Readme](#)

[FreeRTOS kernel for MCUXpresso SDK ChangeLog](#)

[FreeRTOS kernel Readme](#)

#### 4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

#### 4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

[Readme](#)

#### 4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

#### 4.1.5 corejson

JSON parser.

## **Readme**

### **4.1.6 coremqtt**

MQTT publish/subscribe messaging library.

### **4.1.7 corepkcs11**

PKCS #11 key management library.

## **Readme**

### **4.1.8 freertos-plus-tcp**

Open source RTOS FreeRTOS Plus TCP.

## **Readme**