MCUXpresso SDK Documentation

Release 26.03.00

NXP
Mar 24, 2026

Table of contents

1 EVK-MIMX8ULP **3**
- 1.1 Overview . . . 3
- 1.2 Getting Started with MCUXpresso SDK Package . . . 3
  - 1.2.1 MCUXpresso SDK Release Notes for EVK-MIMX8ULP . . . 3
- 1.3 Getting Started with MCUXpresso SDK GitHub . . . 22
  - 1.3.1 Getting Started with MCUXpresso SDK Repository . . . 23
- 1.4 Release Notes . . . 47
  - 1.4.1 MCUXpresso SDK Release Notes . . . 47
- 1.5 ChangeLog . . . 52
  - 1.5.1 MCUXpresso SDK Changelog . . . 52
- 1.6 Driver API Reference Manual . . . 156
- 1.7 Middleware Documentation . . . 156
  - 1.7.1 Multicore . . . 156
  - 1.7.2 FreeMASTER . . . 157
  - 1.7.3 FreeRTOS . . . 157

2 MIMX8UD7 **159**
- 2.1 ACMP: Analog Comparator Driver . . . 159
- 2.2 Battery-Backed Non-Secure Module . . . 165
- 2.3 CACHE: CACHE Memory Controller . . . 167
- 2.4 CASPER: The Cryptographic Accelerator and Signal Processing Engine with RAM sharing . . . 170
- 2.5 casper_driver . . . 170
- 2.6 casper_driver_pkha . . . 174
- 2.7 Clock . . . 177
- 2.8 DAC12: 12-bit Digital-to-Analog Converter Driver . . . 233
- 2.9 EDMA: Enhanced Direct Memory Access (eDMA) Controller Driver . . . 239
- 2.10 EPDC: Electrophoretic Display Controller . . . 274
- 2.11 EWM: External Watchdog Monitor Driver . . . 293
- 2.12 FGPIO Driver . . . 296
- 2.13 FlexCAN: Flex Controller Area Network Driver . . . 296
- 2.14 FlexCAN Driver . . . 296
- 2.15 FlexCAN eDMA Driver . . . 345
- 2.16 FlexIO: FlexIO Driver . . . 348
- 2.17 FlexIO Driver . . . 348
- 2.18 FlexIO eDMA SPI Driver . . . 365
- 2.19 FlexIO eDMA UART Driver . . . 369
- 2.20 FlexIO I2C Master Driver . . . 371
- 2.21 FlexIO I2S Driver . . . 380
- 2.22 FlexIO SPI Driver . . . 390
- 2.23 FlexIO UART Driver . . . 403
- 2.24 FLEXSPI: Flexible Serial Peripheral Interface Driver . . . 414
- 2.25 FLEXSPI eDMA Driver . . . 430
- 2.26 I3C: I3C Driver . . . 433
- 2.27 I3C Common Driver . . . 435
- 2.28 I3C Master Driver . . . 437

2.29 I3C Slave Driver . . . 463
2.30 Iomuxc_driver . . . 476
2.31 Common Driver . . . 525
2.32 LCDIF: LCD interface . . . 540
2.33 LPADC: 12-bit SAR Analog-to-Digital Converter Driver . . . 552
2.34 LPI2C: Low Power Inter-Integrated Circuit Driver . . . 573
2.35 LPI2C Master Driver . . . 575
2.36 LPI2C Master DMA Driver . . . 589
2.37 LPI2C Slave Driver . . . 591
2.38 LPIT: Low-Power Interrupt Timer . . . 602
2.39 LPSPI: Low Power Serial Peripheral Interface . . . 608
2.40 LPSPI Peripheral driver . . . 608
2.41 LPSPI eDMA Driver . . . 630
2.42 LPTMR: Low-Power Timer . . . 637
2.43 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver . . . 642
2.44 LPUART Driver . . . 642
2.45 LPUART eDMA Driver . . . 661
2.46 MCM: Miscellaneous Control Module . . . 664
2.47 MIPI DSI Driver . . . 669
2.48 MIPI_DSI: MIPI DSI Host Controller . . . 687
2.49 MRT: Multi-Rate Timer . . . 687
2.50 MU: Messaging Unit . . . 691
2.51 PDM: Microphone Interface . . . 704
2.52 PDM Driver . . . 704
2.53 PDM EDMA Driver . . . 716
2.54 POWERQUAD: PowerQuad hardware accelerator . . . 720
2.55 PXP: Pixel Pipeline . . . 751
2.56 Reset . . . 786
2.57 RGPIO: Rapid General-Purpose Input/Output Driver . . . 790
2.58 RGPIO Driver . . . 793
2.59 RTD_CMC: Real Time Domain Core Mode Controller Driver . . . 796
2.60 SAI: Serial Audio Interface . . . 806
2.61 SAI Driver . . . 806
2.62 SAI EDMA Driver . . . 832
2.63 SEMA42: Hardware Semaphores Driver . . . 838
2.64 Sentinel . . . 842
2.65 Soc_mipi_dsi . . . 849
2.66 TPM: Timer PWM Module . . . 849
2.67 TRDC: Trusted Resource Domain Controller . . . 865
2.68 TRGMUX: Trigger Mux Driver . . . 886
2.69 TSTMR: Timestamp Timer Driver . . . 887
2.70 Upower . . . 887
2.71 WDOG32: 32-bit Watchdog Timer . . . 898
2.72 WUU: Wakeup Unit driver . . . 904

3 Middleware **911**
3.1 Motor Control . . . 911
3.1.1 FreeMASTER . . . 911
3.2 MultiCore . . . 948
3.2.1 Multicore SDK . . . 948

4 RTOS **1047**
4.1 FreeRTOS . . . 1047
4.1.1 FreeRTOS kernel . . . 1047
4.1.2 FreeRTOS drivers . . . 1047
4.1.3 backoffalgorithm . . . 1047
4.1.4 corehttp . . . 1047
4.1.5 corejson . . . 1047

4.1.6 coremqtt 1048
4.1.7 corepkcs11 1048
4.1.8 freertos-plus-tcp 1048

This documentation contains information specific to the evkmimx8ulp board.

Chapter 1

EVK-MIMX8ULP

1.1 Overview

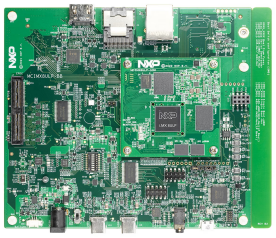

MCU device and part on board is shown below:

- Device: MIMX8UD7
- PartNumber: MIMX8UD7DVP08

1.2 Getting Started with MCUXpresso SDK Package

1.2.1 MCUXpresso SDK Release Notes for EVK-MIMX8ULP

Overview

The MCUXpresso Software Development Kit (MCUXpresso SDK) provides comprehensive software source code to be executed in the i.MX 8ULP M33 core. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. These drivers can be used standalone or collaboratively with the A35 cores running another Operating System (such as Linux OS Kernel). Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to demo applications. The MCUXpresso SDK also contains RTOS kernels, device stack, and various other middleware to support rapid development.

For supported toolchain versions, see the *MCUXpresso SDK Release Notes for EVK-MIMX8ULP* (document MCUXSDKIMX8ULPRN).

For the latest version of this and other MCUXpresso SDK documents, see the MCUXpresso SDK homepage MCUXpresso-SDK: Software Development Kit for MCUXpresso.

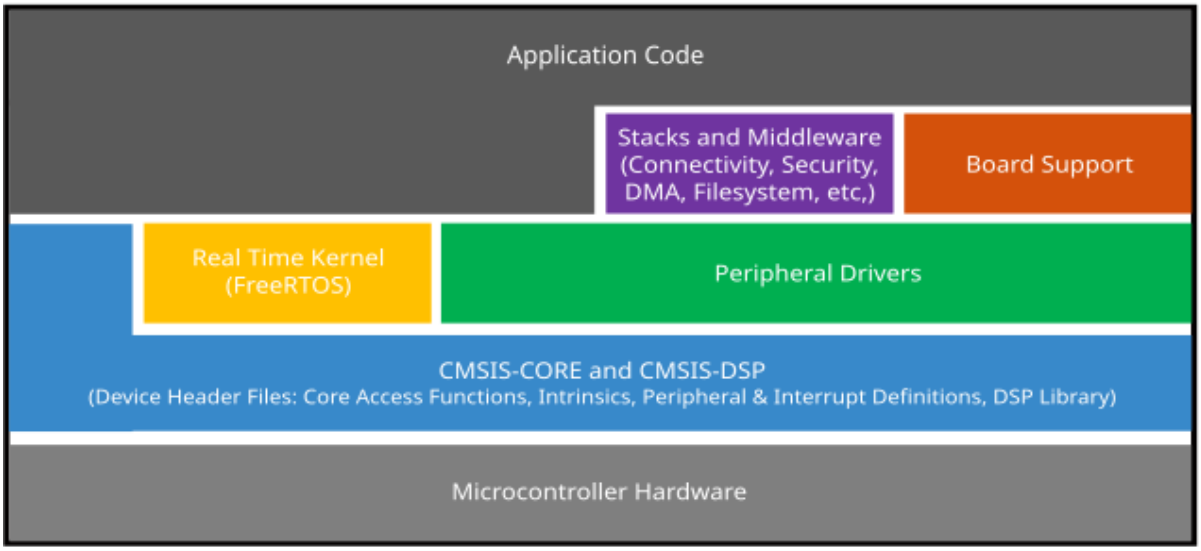

MCUXpresso SDK board support folders

MCUXpresso SDK provides example applications for development and evaluation boards. Board support packages are found inside the top level <board_name> folder, and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each <board_name> folder, there are various sub-folders for each example they contain. These include (but are not limited to):

- demo_apps: Applications intended to highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- driver_examples: Simple applications intended to concisely illustrate how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral, but there are cases where multiple are used.
- rtos_examples: Basic FreeRTOS examples showcasing the use of various RTOS objects (semaphores, queues, and so on) and interfacing with the MCUXpresso SDK's RTOS drivers.
- cmsis_driver_examples: Simple applications intended to concisely illustrate how to use CMSIS drivers.
- multicore_examples: Simple applications intended to concisely illustrate how to use middleware/multicore stack.
- mmcau_examples: Simple applications intended to concisely illustrate how to use middleware/mmcau stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each <board_name> folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the hello_world example (part of the demo_apps folder), the same general rules apply to any type of example in the <board_name> folder.

The following figure shows the contents of the hello_world application folder.

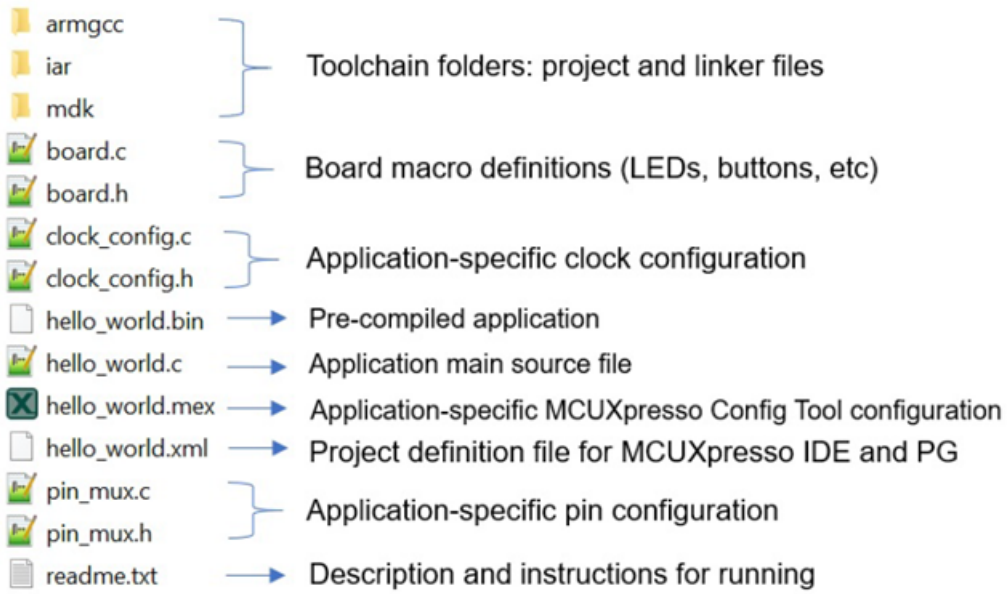

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Parent topic:*MCUXpresso SDK board support folders*

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- devices/<device_name>: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- devices/<device_name>/cmsis_drivers: All the CMSIS drivers for your specific MCU
- devices/<device_name>/drivers: All of the peripheral drivers for your specific MCU
- devices/<device_name>/<tool_name>: Toolchain-specific startup code, including vector table definitions
- devices/<device_name>/utilities: Items such as the debug console that are used by many of the example applications
- devices/<devices_name>/project Project template used in CMSIS PACK new project creation

For examples containing an RTOS, there are references to the appropriate source code. RTOS files are in the rtos folder. The core files of each of these projects are shared, so modifying one could have potential impacts on other projects that depend on that file.

Note: The RPMsg-Lite library is located in the <install_dir>/middleware/multicore/rpmsg-lite folder. For detailed information about the RPMsg-Lite library, see the *RPMsg-Lite User's Guide*, open the index.html located in the <install_dir>/middleware/multicore/rpmsg_lite/doc folder.

Note: The package does not include Xplorer IDE and DSP Fusion user guide. If you want to run examples related to DSP Fusion, contact the NXP representative (FAE/SE).

Parent topic:*MCUXpresso SDK board support folders*

Toolchain introduction

The MCUXpresso SDK release for i.MX 8ULP includes the build system to be used with some toolchains. This chapter lists and explains the supported toolchains.

Compiler/Debugger The release supports building and debugging with the toolchains listed in Table 1.

You can choose the appropriate one for development.

- Arm GCC + SEGGER J-Link GDB Server. This is a command-line tool option and it supports both Windows OS and Linux OS.
- IAR Embedded Workbench for Arm and SEGGER J-Link software. The IAR Embedded Workbench is an IDE integrated with editor, compiler, debugger, and other components. The SEGGER J-Link software provides the driver for the J-Link Plus debug probe and supports the device to attach, debug, and download.

Compiler/Debugger	Supported host OS	Debug probe	Tool website
Arm GCC/J-Link GDB Server	Windows OS/Linux OS	J-Link Plus	developer.arm.com/open-source/gnu-toolchain/gnu-rm

www.segger.com

| |IAR/J-Link|Windows OS|J-Link Plus|www.iar.com

www.segger.com

|

Download the corresponding tools for the specific host OS from the website.

Note: To support i.MX 8ULP, the patch for IAR and SEGGER J-Link should be installed. The patch namediar_segger_support_patch_imx8ulp.zip can be used with the MCUXpresso SDK. See readme.txt in the patch for additional information about patch installation.

Parent topic:*Toolchain introduction*

Running a Demo Application Using Arm GCC

This section describes the steps to configure the command-line Arm GCC tools to build, run, and debug demo applications. This section also lists the necessary driver libraries provided in the MCUXpresso SDK. The hello_world demo application targeted for the MIMX8ULP hardware platform is used as an example, though these steps can be applied to any board, demo, or example application in the MCUXpresso SDK.

Note: Run an application using imx-mkimage. Generate and download flash.bin to emmc or flexspi nor flash when DBD_EN (Deny By Default) is fused.

Linux OS host The following sections provide steps to run a demo compiled with Arm GCC on Linux host.

Set up toolchain This section contains the steps to install the necessary components required to build and run a MCUXpresso SDK demo application with the Arm GCC toolchain, as supported by the MCUXpresso SDK.

Install GCC Arm embedded toolchain Download and run the installer from the GNU Arm Embedded Toolchain Downloads page. The GNU Arm embedded toolchain contains the GCC compiler, libraries, and other tools required for bare-metal software development. The GCC toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes for EVK-MIMX8ULP* (document MCUXSDKIMX8ULPRN).

Note: See *How to set up Windows/Linux host system* for setting up Linux host before compiling the application.

Parent topic: Set up toolchain

Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it ARMGCC_DIR. The value of this variable should point to the Arm GCC embedded toolchain installation path. For this example, the path is:

```
$ export ARMGCC_DIR=<path_to_GNUARM_GCC_installation_dir>
```

Parent topic: Set up toolchain

Parent topic: Linux OS host

Build an example application To build an example application, follow these steps.

1. Change the directory to the example application project directory, which has a path similar to the following:

   <install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc

   For this example, the exact path is: <install_dir>/boards/evkmimx8ulp/demo_apps/hello_world/armgcc

2. Run the build_debug.sh script at the command-line to perform the build. The output is shown as below:

```
$ ./build_debug.sh
-- TOOLCHAIN_DIR:
-- BUILD_TYPE: debug
-- TOOLCHAIN_DIR:
-- BUILD_TYPE: debug
-- The ASM compiler identification is GNU
-- Found assembler:
-- Configuring done
-- Generating done
-- Build files have been written to:
Scanning dependencies of target hello_world.elf
 < -- skipping lines -- >
[100%] Linking C executable debug/hello_world.elf
[100%] Built target hello_world.elf
```

Note: To run the application, see the *Run an application using imx-mkimage*.

Parent topic: Linux OS host

Parent topic:*Running a Demo Application Using Arm GCC*

Windows OS host The following sections provide steps to run a demo compiled with Arm GCC on Windows OS host.

Set up toolchain This section contains the steps to install the necessary components required to build and run a MCUXpresso SDK demo application with the Arm GCC toolchain on Windows OS, as supported by the MCUXpresso SDK.

Install GCC Arm embedded toolchain Download and run the installer from the GNU Arm Embedded Toolchain Downloads page. The GNU Arm embedded toolchain contains the GCC compiler, libraries, and other tools required for bare-metal software development. The GCC toolchain should correspond to the latest supported version, as described in *MCUXpresso SDK Release Notes for EVK-MIMX8ULP* (document MCUXSDKIMX8ULPRN).

Note: See *How to set up Windows/Linux host system* for setting up Windows host before compiling the application.

Parent topic: Set up toolchain

Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it ARMGCC_DIR. The value of this variable should point to the Arm GCC embedded toolchain installation path. For this example, the path is:

```
C:\Program Files (x86)\GNU Arm Embedded Toolchain\9 2020-q2-update
```

Reference the installation folder of the GNU Arm GCC embedded tools for the exact pathname.

Parent topic: Set up toolchain

Parent topic: Windows OS host

Build an example application To build an example application, follow these steps.

1. Open the GCC Arm embedded toolchain command window. To launch the window on the Windows operating system, select **Start** -> **Programs** -> **GNU Tools ARM Embedded <version>** -> **GCC Command Prompt**.

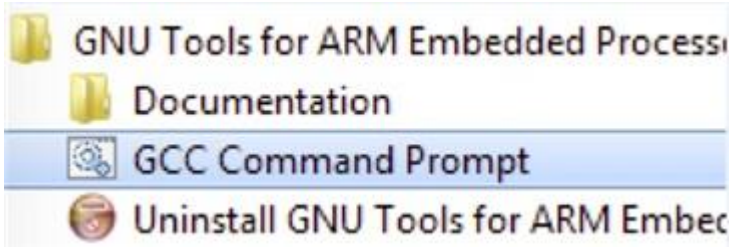

2. Change the directory to the example application project directory, which has a path similar to the following:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc
```

   For this example, the exact path is:

```
<install_dir>/boards/evkmimx8ulp/demo_apps/hello_world/armgcc
```

3. Type build_debug.bat at the command-line or double-click the build_debug.bat file in Windows Explorer to perform the build. The output is as shown in Figure 2.

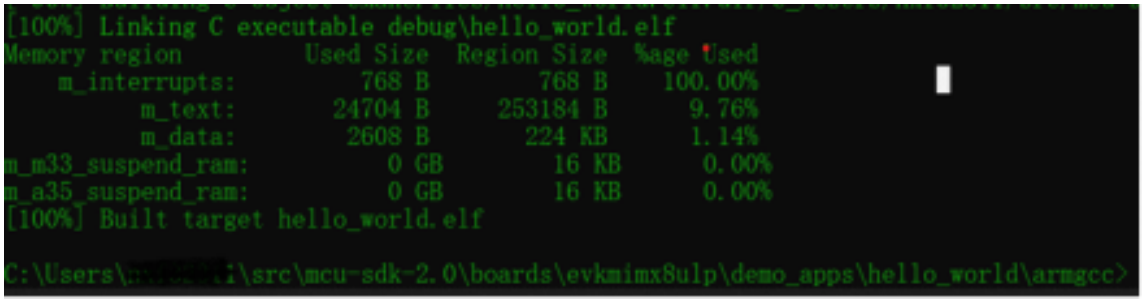

|

Note: To run the application, see the *Run an application using imx-mkimage*.

Parent topic: Windows OS host

Parent topic:*Running a Demo Application Using Arm GCC*

Running a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK using IAR. The hello_world demo application targeted for the MIMX8ULP hardware platform is used as an example, although these steps can be applied to any example application in the MCUXpresso SDK.

Note:

- Newer versions of the IAR are compatible with older versions of the project format. However, using an older version of the IAR to load the SDK project that uses the newer format generates an error. To use the SDK, it is recommended to upgrade the IAR version to 9.30.1.
- Run an application using imx-mkimage. Generate and download flash.bin to emmc or flexspi nor flash when DBD_EN (Deny By Default) is fused.

Build an example application Perform the following steps to build the hello_world example application.

1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

   ```
   <install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
   ```

   For using MIMX8ULP-EVK hardware platform as an example, the hello_world workspace is located at:

   ```
   <install_dir>/boards/evkmimx8ulp/demo_apps/hello_world/iar/hello_world.eww
   ```

   Other example applications may have additional folders in the respective paths.

2. Select the desired build target from the drop-down menu.

   For this example, select **hello_world** – **Debug**.

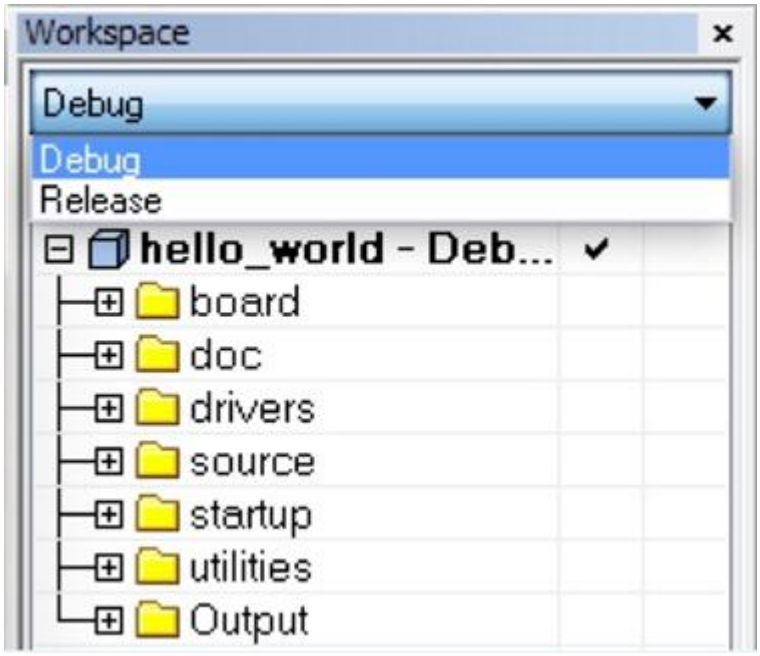

3. To build the demo application, click **Make**, highlighted in red in Figure 2.

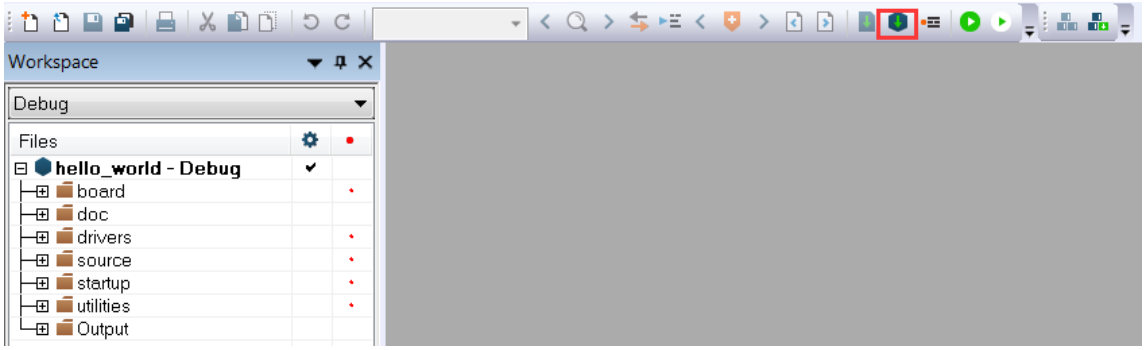

4. The build completes without errors.

Note: To run the application, see the *Run an application using imx-mkimage*.

Parent topic:*Running a demo application using IAR*

Run an application using imx-mkimage

This section describes the steps to write a bootable SDK image to the eMMC/FlexSPI NOR flash for the i.MX processor.

Note: Attach core to debug code with J-Link probe.

The following steps describe how to write container image (flash.bin):

1. Connect the DEBUG UART slot on the board to your PC through the USB cable. The Windows OS installs the USB driver automatically and the Ubuntu OS finds the serial devices as well.
2. On Windows OS, open the device manager, find **USB serial Port** in **Ports (COM and LPT)**. Assume that the ports are COM9 and COM10. One port is for the debug message from the Cortex-A35 and the other is for the Cortex-M33. The port number is allocated randomly, so opening both is beneficial for development. On Ubuntu OS, find the TTY device with

name /dev/ttyUSB* to determine your debug port. Similar to Windows OS, opening both is beneficial for development.

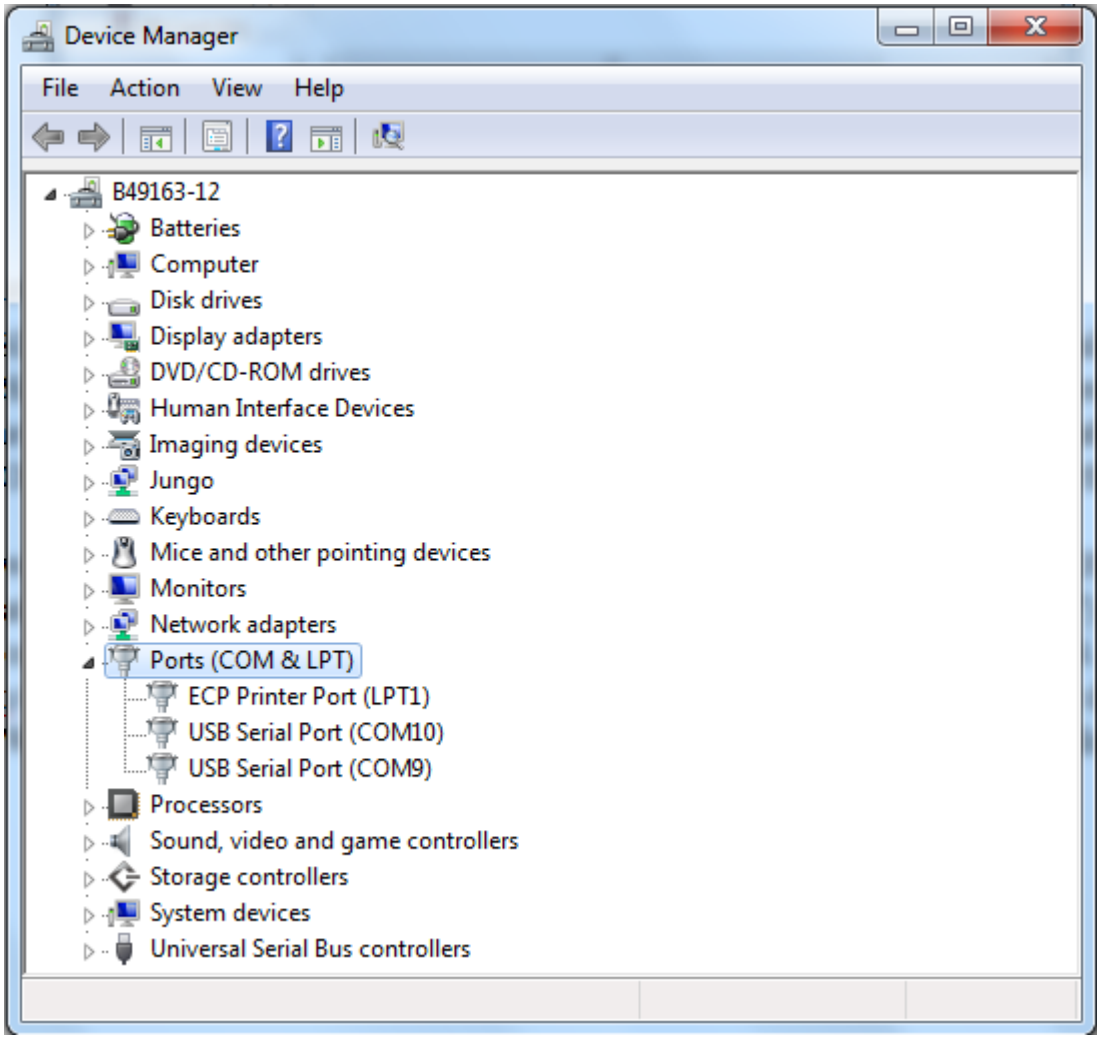

3. Generate m33 firmware:
   - **For RAM target**:

     ```
     $ ./build_debug.sh
     ```

     or

     ```
     $ ./build_release.sh
     ```

   - **For FLASH target(XIP)**:

     ```
     $ ./build_flash_debug.sh
     ```

     or

     ```
     $ ./build_flash_release.sh
     ```

4. Get imx-mkimage, s400 firmware(mx8ulpa2-ahab-container.img), OPTEE(tee.bin), upower firmware(upower.bin), uboot-spl(u-boot-spl.bin), uboot(u-boot.bin), and TF-A(bl31.bin) from the Linux release package.
   1. Clone the imx-mkimage from NXP public git.

```
$ git clone https://github.com/nxp-imx/imx-mkimage
```

2. Check out the correct branch. The branch name is named after Linux release version which is compatible with the SDK. You can get the version information from corresponding Linux Release Notes document.

```
$ cd imx-mkimage
$ git checkout [branch name]
```

3. Get s400 firmware(mx8ulpa2-ahab-container.img).

```
$ cp mx8ulpa2-ahab-container.img iMX8ULP/
```

4. Get upower firmware(upower.bin).

```
$ cp upower.bin iMX8ULP/
```

5. Get u-boot-spl.bin and u-boot.bin.
   - For EVK-MIMX8ULP:

```
$ cp u-boot-spl.bin-imx8ulpevk-sd iMX8ULP/u-boot-spl.bin
$ cp u-boot-imx8ulpevk.bin-sd iMX8ULP/u-boot.bin
```

   - For EVK9-MIMX8ULP:

```
$ cp u-boot-spl.bin-imx8ulp-9x9-lpddr4-evk-sd iMX8ULP/u-boot-spl.bin
$ cp u-boot-imx8ulp-9x9-lpddr4-evk.bin-sd iMX8ULP/u-boot.bin
```

6. Get bl31.bin.

```
$ cp bl31-imx8ulp.bin-optee iMX8ULP/bl31.bin
```

5. Generate container image table with imx-mkimage:

boot type	A35	M33	SW5[8:1]
Single Boot	make SOC=iMX8ULP flash_singleboot For RAM target:		

make SOC=iMX8ULP flash_singleboot_m33 **Note:** Does not support pack Flash target into flash.bin when boot type is single boot type.

|1000_xx00 Single Boot-eMMC| | |make SOC=iMX8ULP flash_singleboot_flexspiFor RAM target:

make SOC=iMX8ULP flash_singleboot_m33_flexspi **Note:** Does not support pack Flash target into flash.bin when boot type is single boot type.

|1010_xx00 Single Boot-Nor| |Dual Boot|make SOC=iMX8ULP flash_dualboot|For RAM target: make SOC=iMX8ULP flash_dualboot_m33

For Flash target: make SOC=iMX8ULP flash_dualboot_m33_xip

|1000_0010 A35-eMMC/M33-Nor| | |make SOC=iMX8ULP flash_dualboot_flexspi|1010_0010 A35-Nor/M33-Nor| |Low Power Boot|make SOC=iMX8ULP flash_dualboot|1000_00x1 A35-eMMC/M33-Nor| | |make SOC=iMX8ULP flash_dualboot_flexspi|1010_00x1 A35-Nor/M33-Nor|

Note:

- For details, see `imx-mkimage/iMX8ULP/README`.
- Does not support pack Flash target firmware to flash.bin when boot type is single boot type.

(continues on next page)

(continued from previous page)

```
- RAM target: debug/release.

- Flash target: `flash_debug/flash_release`.

- Need generate two flash.bin and download to emmc/flexspi2 nor flash of a35 and flexspi0 nor flash of m33,␣
↪one for A35, another one for M33 when boot type is dual boot type or low power boot type.
```

6. Build the application (for example, hello_world), get binary image sdk20-app.bin, copy to imx-mkimage project folder iMX8ULP/ and rename to m33_image.bin.

   ```
   cp sdk20-app.bin <imx-mkimage path>/iMX8ULP/m33_image.bin
   ```

7. Under imx-mkimage project folder, execute the following command to generate m33 container image.

   1. When boot type is dual boot/low power boot type:

      For RAM (TCM) target:

      ```
      make SOC=iMX8ULP flash_dualboot_m33 (write flash.bin to flexspi0 nor flash of m33;
      ```

      For Flash target:

      ```
      make SOC=iMX8ULP flash_dualboot_m33_xip (write flash.bin to flexspi0 nor flash of m33);
      ```

   2. When boot type is single boot type:

      ```
      for RAM (TCM) target and sw5[8:1] = 1000_xx00 Single Boot-eMMC:
      make SOC=iMX8ULP flash_singleboot_m33 (write flash.bin to emmc);
      ```

      ```
      for RAM (TCM) target and sw5[8:1] = 1010_xx00 Single Boot-Nor:
      make SOC=iMX8ULP flash_singleboot_m33_flexspi (write flash.bin to flexspi2 nor flash of
      a35);
      ```

8. Copy the flash.bin image to your tftpboot server.

9. Write flash.bin to flexspi0 nor flash. There are two ways:

   1. Write flash.bin to flexspi0 nor flash with uboot.

      1. Switch to single boot type (sw[8:1]=1000 0000) and boot the board, assuming your board can boot to U-Boot.

      2. At the U-Boot console, execute following commands to download image (from network) and flash to FlexSPI0 NOR flash.

         ```
         setenv serverip <tftpboot server ip>
         dhcp
         tftpboot 0xa0000000 flash.bin
         setenv erase_unit 1000
         setexpr erase_size ${filesize} + ${erase_unit}
         setexpr erase_size ${erase_size} / ${erase_unit}
         setexpr erase_size ${erase_size} * ${erase_unit}
         sf probe 0:0
         sf erase ${erase_size}
         sf write  0xa0000000 0 ${filesize}
         ```

   2. Write flash.bin to flexspi0 nor flash with JLink:

      ```
      J-Link>connect
      Device>
      TIF>s (Choose target interface as SWD, unless failed to do anything)
      Speed>
      ```

(continues on next page)

(continued from previous page)

```
J-Link>r
J-Link>h
J-Link>loadbin flash.bin 0x4000000
```

10. Write flash.bin to emmc with uuu (only for the RAM target):
    1. Start uuu.

    ```
    uuu -b emmc workable-flash.bin flash.bin (workable-flash.bin: uboot and m33 image are workable)
    ```

    2. Enter serial download mode.
        1. Change SW5[8:1] to 01xx_xxxx Serial Downloader.
        2. Enter serial download mode with uboot.

        ```
        => fastboot 0
        ```

11. Open another terminal application on the PC, such as PuTTY and connect to the debug COM port (to determine the COM port number, see *How to determine COM port*). Configure the terminal with these settings:
    - 115200
    - No parity
    - 8 data bits
    - 1 stop bit
12. Power off and switch to low-power boot mode (sw5[8:1]=1000 0001), then repower the board.
13. The hello_world application is now executed and a banner is displayed at the terminal. If this is not true, check your terminal settings and connections.

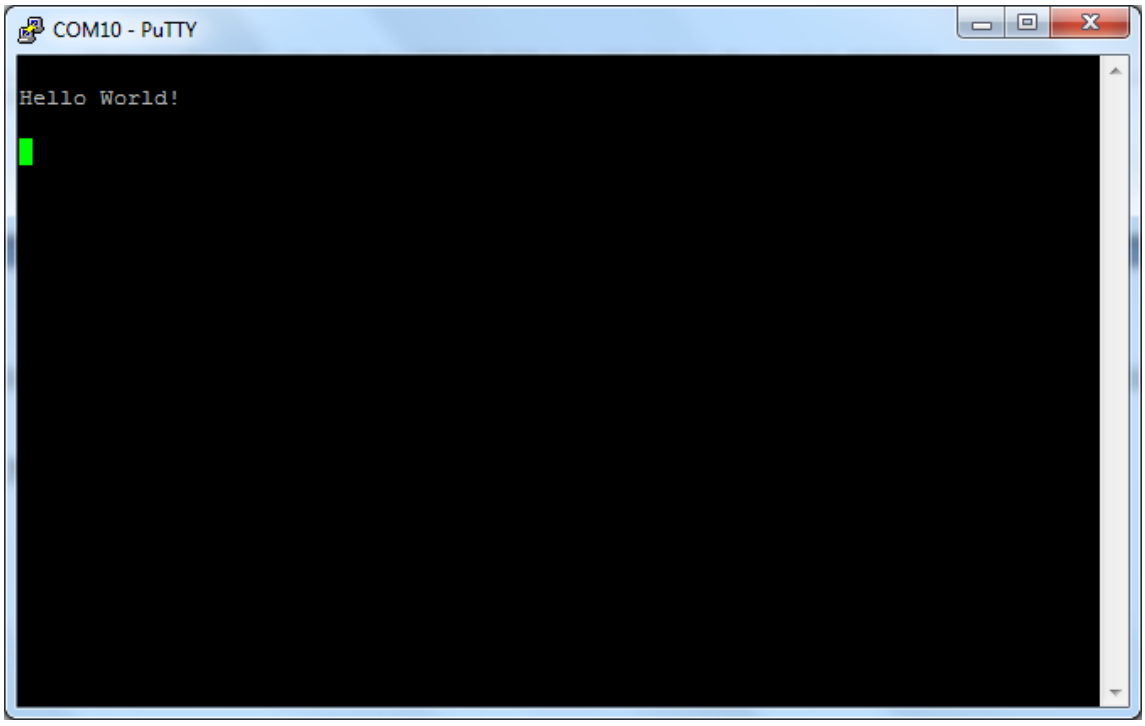

Memory attribution map after doing handshake

The memory attribution map settings after the handshake procedure is successful between Cortex-M33 and Cortex-A35.

Name	Memory block checker/ Memory region checker (MBC/MRC)	Resulting access lev
FLEXSPI1 (alias) 0x5000_0000	Non Secure	Non Secure
FLEXSPI1 0x4000_0000	Non Secure	Non Secure
PBridge1 FlexCAN0 (alias) 0x380A_8000	Non Secure	Non Secure
PBridge1 SAI0 (alias) 0x3809_C000	Non Secure	Non Secure
PBridge1 LPUART1 (alias) 0x3809_B000	Non Secure	Non Secure
PBridge1 LPI2C0 (alias) 0x3809_8000	Non Secure	Non Secure
PBridge1 FlexSPI1 (alias) 0x3809_2000	Non Secure	Non Secure
PBridge0 LPSPI1 (alias) 0x3803_F000	Non Secure	Non Secure
PBridge0 FlexIO0 (alias) 0x3803_C000	Non Secure	Non Secure
PBridge0 FlexSPI0 (alias) 0x3803_9000	Non Secure	Non Secure
PBridge1 FlexCAN0 0x280A_8000	Non Secure	Non Secure
PBridge1 SAI0 0x2809_C000	Non Secure	Non Secure
PBridge1 LPUART1 0x2809_B000	Non Secure	Non Secure
PBridge1 LPI2C0 0x2809_8000	Non Secure	Non Secure
PBridge1 FlexSPI1 0x2809_2000	Non Secure	Non Secure
PBridge0 LPSPI1 0x2803_F000	Non Secure	Non Secure
PBridge0 FlexIO0 0x2803_C000	Non Secure	Non Secure
PBridge0 FlexSPI0 0x2803_9000	Non Secure	Non Secure
SSRAM P6 (alias) 0x3006_0000	Non Secure	Non Secure
SSRAM P5 (alias) 0x3004_0000	Non Secure	Non Secure
SSRAM P4 (alias) 0x3003_0000	Non Secure	Non Secure
SSRAM P3 (alias) 0x3002_0000	Non Secure	Non Secure
SSRAM P2 (alias) 0x3001_0000	Non Secure	Non Secure
SSRAM P1 (alias) 0x3000_8000	Non Secure	Non Secure
SSRAM P0 (alias) 0x3000_0000	Non Secure	Non Secure

conti

Table 1 – continued from previous page

Name	Memory block checker/ Memory region checker (MBC/MRC)	Resulting access lev
SSRAM P6 0x2006_0000	Non Secure	Non Secure
SSRAM P5 0x2004_0000	Non Secure	Non Secure
SSRAM P4 0x2003_0000	Non Secure	Non Secure
SSRAM P3 0x2002_0000	Non Secure	Non Secure
SSRAM P2 0x2001_0000	Non Secure	Non Secure
SSRAM P1 0x2000_8000	Non Secure	Non Secure
SSRAM P0 0x2000_0000	Non Secure	Non Secure
SSRAM P7 (alias) 0x1FFC_0000	Non Secure	Non Secure
FlexSPI0 (alias) 0x1400_0000	Non Secure	Non Secure
SSRAM P7 0x0FFC_0000	Non Secure	Non Secure
FlexSPI0 0x0400_0000	Non Secure	Non Secure

Note:

1. Assign Domain 1 for DMA1, USB0, USB1, ENET, USDHC0, USDHC1, USDHC2, and CAAM Master.
2. The bus attribute for DMA1, USB0, USB1, ENET, USDHC0, USDHC1, and USDHC2 is Non Secure.
3. The bus attribute for CAAM Master is Secure.
4. Security level of MBC/MRC settings of other memory space that are not be shown in the table for Domain 1 are Secure, so master cannot access resources that are controlled by MBC/MRC in other memory spaces when master is in Non Secure state.

|Name|MBC/MRC|Resulting access level| | |—-|:—-:|:————————:|::| |PBridge1|Non Secure|Non Secure|0x280F_FFFF| |0x2808_0000| |SSRAM P2|Secure|No Access|0x2001FFFF| |0x20018000| |Non Secure|Non Secure|0x20017FFF| |0x20010000|

Note:

1. Assign Domain 1 for DMA1, USB0, USB1, ENET, UDSHC0, USDHC1, UDSHC2, and CAAM Master.
2. Security level of MBC/MRC settings of other memory space that are not shown in the table for Domain 1 are Secure, so the master cannot access resources that are controlled by MBC/MRC in other memory spaces.

|Name|SAU|IDAU|MBC/MRC|Resulting access level| | |—-|—|—-|———-|:———————:|::| |GPIOC_REGS (alias)|Secure|Secure|Secure|Secure|0x3882_FFFF| |0x3882_0000| |GPIOB_REGS (alias)|Secure|Secure|Secure|Secure|0x3881_FFFF| |0x3881_0000| |GPIOA_REGS (alias)|Secure|Secure|Secure|Secure|0x3880_FFFF| |0x3880_0000| |MICFIL (alias)|Secure|Secure|Secure|Secure|0x3811_10AB| |0x3811_1000| |SAI3 (alias)|Secure|Secure|Secure|Secure|0x3811_00FF| |0x3811_0000| |SAI2 (alias)|Secure|Secure|Secure|Secure|0x3810_F0FF| |0x3810_F000| |LPSPI3 (alias)|Secure|Secure|Secure|Secure|0x3810_E7FF| |0x3810_E000| |LPSPI2 (alias)|Secure|Secure|Secure|Secure|0x3810_D7FF| |0x3810_D000| |LPUART3 (alias)|Secure|Secure|Secure|Secure|0x3810_C02F| |0x3810_C000|

LPUART2 (alias)	Secure	Secure	Secure	Secure	0x3810_B02F		0x3810_B000
I3C1 (alias)	Secure	Secure	Secure	Secure	0x3810_AFFF		0x3810_A000
LPI2C3 (alias)	Secure	Secure	Secure	Secure	0x3810_9173		0x3810_9000
LPI2C2 (alias)	Secure	Secure	Secure	Secure	0x3810_8173		0x3810_8000
MRT (alias)	Secure	Secure	Secure	Secure	0x3810_70FF		0x3810_7000		TPM3
(alias)	Secure	Secure	Secure	Secure	0x3810_6087		0x3810_6000		TPM2
(alias)	Secure	Secure	Secure	Secure	0x3810_5087		0x3810_5000		PCC2
(alias)	Secure	Secure	Secure	Secure	0x3810_2047		0x3810_2000		WDOG2
(alias)	Secure	Secure	Secure	Secure	0x3810_100F		0x3810_1000		MU1_B
(alias)	Secure	Secure	Secure	Secure	0x3810_028F		0x3810_0000		FlexCAN0
(alias)	Secure	Secure	Secure	Secure	0x380A_BFFF		0x380A_8000		ADC1
(alias)	Secure	Secure	Secure	Secure	0x380A_2303		0x380A_2000		IOMUXC0
(alias)	Secure	Secure	Secure	Secure	0x380A_1AEB		0x380A_1000		SAI1
(alias)	Secure	Secure	Secure	Secure	0x3809_D0FF		0x3809_D000

Note:

1. SAU is disabled.
2. Cortex-M33 can access all of the secure resources. All of the resources (the security level of these resources that are controlled by MBC/MRC) are secure when Cortex-M33 is in secure state.
3. Assign domain 6 for Cortex-M33.

Name	MBC/MRC	Resulting access level	
PBridge1 IOMUXC0	Non Secure	Non Secure	0x280A_1AEB
0x280A_1000			
PBridge1 LPI2C0	Non Secure	Non Secure	0x2809_8173
0x2809_8000			
PBridge1 TPM0	Non Secure	Non Secure	0x2809_5087
0x2809_5000			
PBridge1 PCC1	Non Secure	Non Secure	0x2809_10BF
0x2809_1000			
PBridge0 FlexSPI0	Non Secure	Non Secure	0x2803_92FF
0x2803_9000			
PBridge0 SEMA42_0	Non Secure	Non Secure	0x2803_7043
0x2803_7000			
PBridge0 CGC0	Non Secure	Non Secure	0x2802_FFFF
0x2802_F000			
PBridge0 SIM0-S	Non Secure	Non Secure	0x2802_B3FF
0x2802_B000			
S400 MU-AP of EdgeLock secure enclave	Non Secure	Non Secure	0x2702_028C
0x2702_0000			
FSB of EdgeLock secure enclave	Non Secure	Non Secure	0x2701_0BFC
0x2701_0000			
SSRAM P7	Non Secure	Non Secure	0x1FFF_FFFF
0x1FFF_8000			
Secure	Secure	0x1FFF_7FFF	
0x1FFC_0000			
FlexSPI0	Non Secure	Non Secure	0x0BFF_FFFF
0x0400_0000			

Note:

1. Security level of MBC/MRC settings of Other memory space that are not shown in the table for Domain 7 are Secure. The master can access resources that are controlled by MBC/MRC in other memory spaces when the master is in secure state.
2. Assign domain 7 for Cortex-A35.

How to determine COM port

This section describes the steps to determine the debug COM port number of your NXP hardware development platform.

1. **Linux**: The serial port can be determined by running the following command after the USB Serial is connected to the host:

   ```
   $ dmesg | grep "ttyUSB"
   [503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
   [503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
   ```

   There are two ports, one is Cortex-A core debug console and the other is for Cortex M33.

2. **Windows**: To determine the COM port, open **Device Manager**. Click the **Start** menu and type **Device Manager** in the search bar.

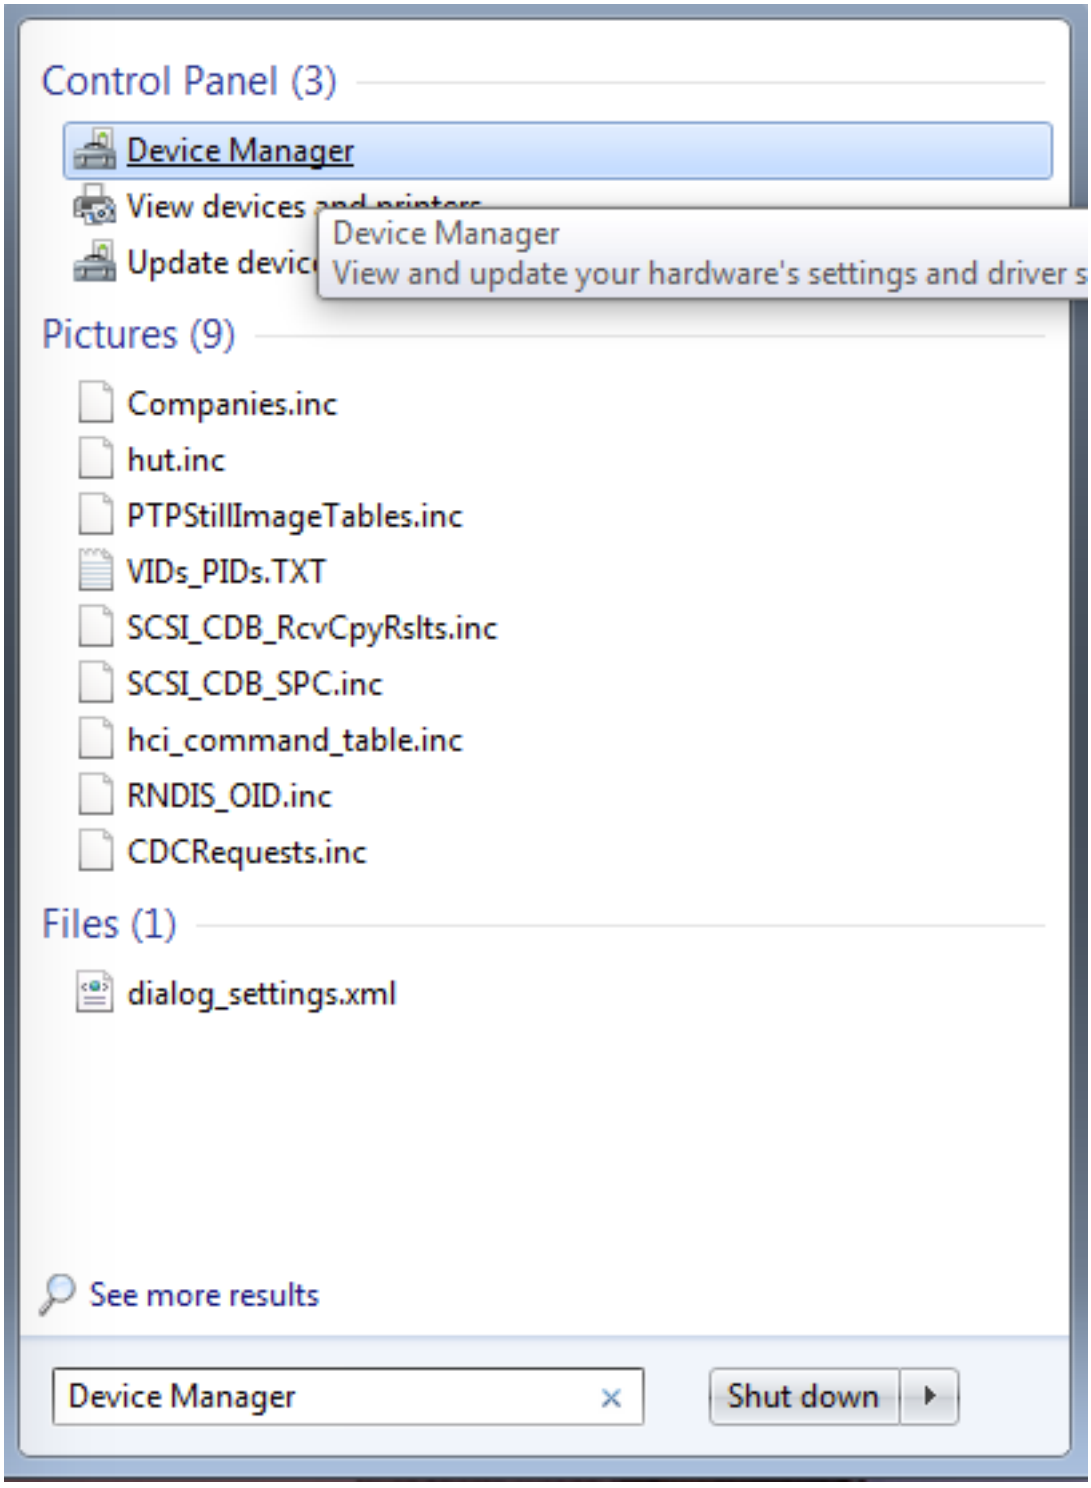

3. In the **Device Manager**, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.
    1. **USB-UART** interface

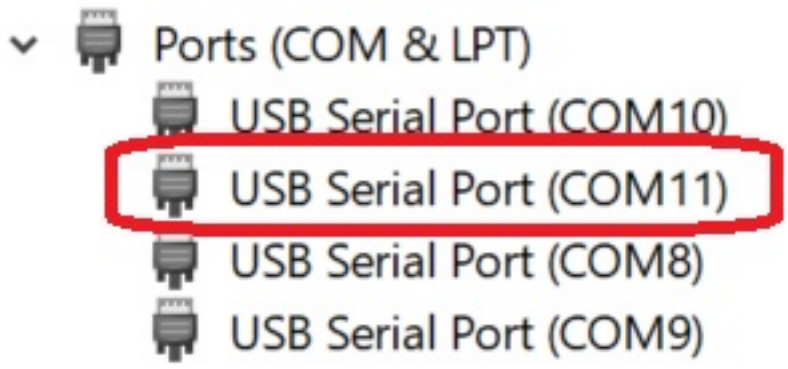

How to set up Windows/Linux host system

An MCUXpresso SDK build requires that some packages are installed on the host. Depending on the used host operating system, the following tools should be installed.

Linux:

- cmake

```
$ sudo apt-get install cmake $ # Check the version >= 3.0.x $ cmake –-version
```

Windows:

- MinGW

  The Minimalist GNU for Windows OS (MinGW) development tools provide a set of tools that are not dependent on third-party C-Runtime DLLs (such as Cygwin). The build environment used by the SDK does not utilize the MinGW build tools, but does leverage the base install of both MinGW and MSYS. MSYS provides a basic shell with a Unix-like interface and tools.

  1. Download the latest MinGW mingw-get-setup installer from source-forge.net/projects/mingw/files/Installer/.
  2. Run the installer. The recommended installation path is C:\MinGW, however, you may install to any location.

     Note: The installation path should not contain any spaces.
  3. Ensure that **mingw32-base** and **msys-base** are selected under **Basic Setup**.

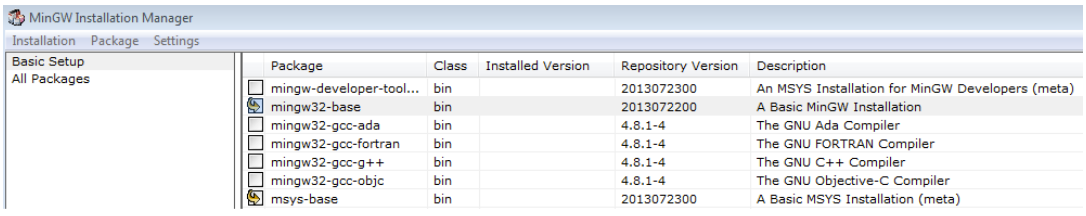

4. Click **Apply Changes** in the **Installation** menu and follow the remaining instructions to complete the installation.

   |

5. Add the appropriate item to the Windows operating system path environment variable. It can be found under **Control Panel**-\>**System and Security**-\>**System**-\>**Advanced System Settings** in the **Environment Variables** section. The path is: `<mingw_install_dir>\bin`.

   Assuming the default installation path, `C:\MinGW`, an example is as shown in [Figure 3](how_to_set_up_windows_linux_host_system.md#ADDINGPATH). If the path is not set correctly, the toolchain does not work.

   Note: If you have `C:\MinGW\msys\x.x\bin` in your `PATH` variable \(as required by Kinetis SDK v2.10.0\), remove it to ensure that the new GCC build system works correctly.

   |

|

- CMake
  1. Download CMake 3.0.x from www.cmake.org/cmake/resources/software.html.
  2. While installing, ensure that the option **Add CMake to system PATH for all users** is selected. You can select install CMake into the path for all users or just the current user. In this example, it is installed for all users.

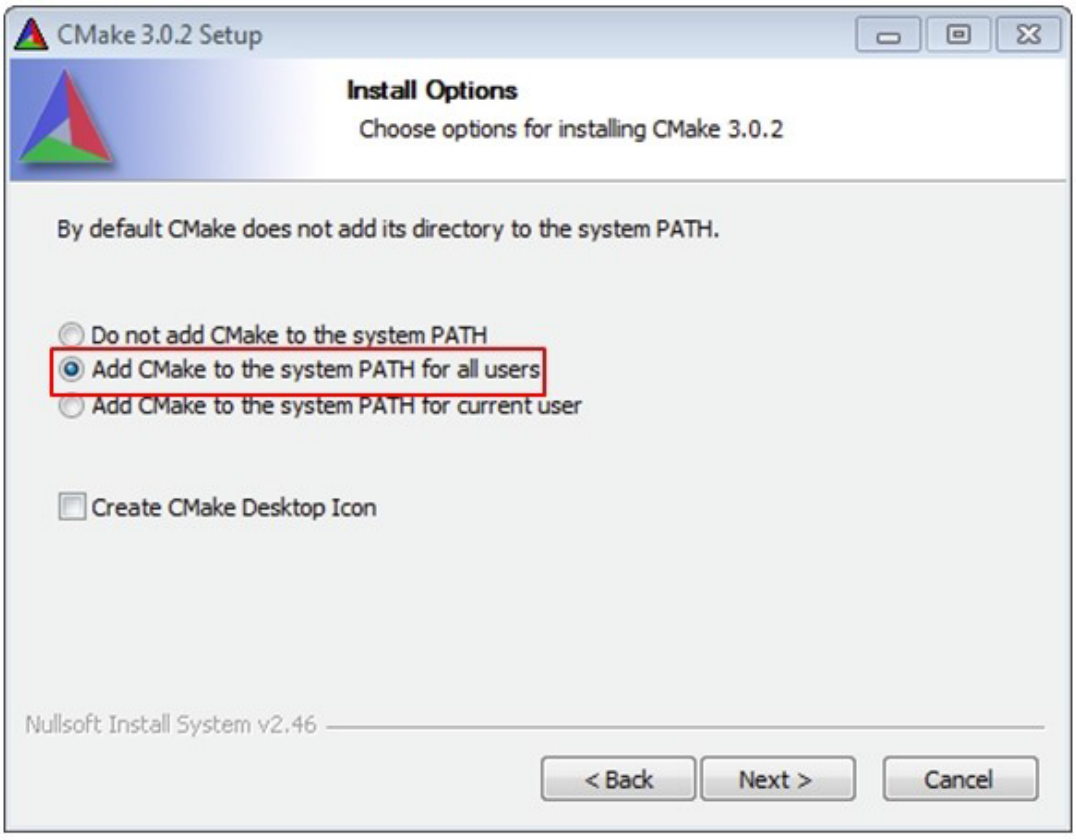

|

3. Follow the remaining instructions of the installer.
4. Reboot your system for the path changes to take effect.

1.3 Getting Started with MCUXpresso SDK GitHub

1.3.1 Getting Started with MCUXpresso SDK Repository

Welcome to the **GitHub Repository SDK Guide**. This documentation provides instructions for setting up and working with the MCUXpresso SDK distributed in a **multi-repository model**. The SDK is distributed across multiple GitHub repositories and managed using the **Zephyr West** tool, enabling modular development and streamlined workflows.

Overview

The GitHub Repository SDK approach offers:

- **Modular Structure**: Multiple repositories for flexibility and scalability.
- **Zephyr West Integration**: Simplified repository management and synchronization.
- **Cross-Platform Support**: Designed for MCUXpresso SDK development environments.

Benefits of the Multi-Repository Approach

- **Scalability**: Easily add or update components without impacting the entire SDK.
- **Collaboration**: Enables distributed development across teams and repositories.
- **Version Control**: Independent versioning for components ensures better stability.
- **Automation**: Zephyr West simplifies dependency handling and repository synchronization.

Setup and Configuration

Follow these steps to prepare your development environment:

Development Tools Installation This guide explains how to install the essential tools for development with the MCUXpresso SDK.

Quick Start: Automated Installation (Recommended) The **MCUXpresso Installer** is the fastest way to get started. It automatically installs all the basic tools you need.

1. **Download the MCUXpresso Installer** from: MCUXpresso Installer
2. **Run the installer** and select **"MCUXpresso SDK Developer"** from the menu
3. **Click Install** and let it handle everything automatically

Manual Installation If you prefer to install tools manually or need specific versions, follow these steps:

Essential Tools

Git - Version Control **What it does**: Manages code versions and downloads SDK repositories from GitHub.

Installation:

- Visit git-scm.com
- Download for your operating system
- Run installer with default settings
- **Important**: Make sure "Add Git to PATH" is selected during installation

Setup:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python - Scripting Environment **What it does**: Runs build scripts and SDK tools.

Installation:

- Install Python **3.10 or newer** from python.org
- **Important**: Check "Add Python to PATH" during installation

West - SDK Management Tool **What it does**: Manages SDK repositories and provides build commands. The west tool is developed by the Zephyr project for managing multiple repositories.

Installation:

```
pip install -U west
```

Minimum version: 1.2.0 or newer

Build System Tools

CMake - Build Configuration **What it does**: Configures how your projects are built.

Recommended version: 3.30.0 or newer

Installation:

- **Windows**: Download .msi installer from cmake.org/download
- **Linux**: Use package manager or download from cmake.org
- **macOS**: Use Homebrew (brew install cmake) or download from cmake.org

Ninja - Fast Build System **What it does**: Compiles your code quickly.

Minimum version: 1.12.1 or newer

Installation:

- **Windows**: Usually included, or download from ninja-build.org
- **Linux**: sudo apt install ninja-build or download binary
- **macOS**: brew install ninja or download binary

Ruby - IDE Project Generation (Optional) **What it does**: Generates project files for IDEs like IAR and Keil.

When needed: Only if you want to use traditional IDEs instead of VS Code.

Installation: Follow the Ruby environment setup guide

Compiler Toolchains Choose and install the compiler toolchain you want to use:

Toolchain	Best For	Download Link	Environment Variable
ARM GCC (Recommended)	Most users, free	ARM GNU Toolchain	ARMGCC_DIR
IAR EWARM	Professional development	IAR Systems	IAR_DIR
Keil MDK	ARM ecosystem	ARM Developer	MDK_DIR
ARM Compiler	Advanced optimization	ARM Developer	ARMCLANG_DIR

Setting Up Environment Variables After toolchain installation, set an environment variable so the build system locates it:

Windows:

```
# Example for ARM GCC installed in C:\armgcc
setx ARMGCC_DIR "C:\armgcc"
```

Linux/macOS:

```
# Add to ~/.bashrc or ~/.zshrc
export ARMGCC_DIR="/usr"  # or your installation path
```

Verify Your Installation After installation, verify everything works by opening a terminal/command prompt and running these commands:

```
# Check each tool - you should see version numbers
git --version
python --version
west --version
cmake --version
ninja --version
arm-none-eabi-gcc --version  # (if using ARM GCC)
```

Troubleshooting Installation Issues **"Command not found" errors**:

- The tool isn't in your system PATH
- **Solution**: Add the installation directory to your PATH environment variable

Python/pip issues:

- Try using `python3` and `pip3` instead of `python` and `pip`
- On Windows, run the Command Prompt as an Administrator

Slow downloads:

- Add timeout option: `pip install -U west --default-timeout=1000`
- Use alternative mirror: `pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple`

GitHub Repository Setup This guide explains how to initialize your MCUXpresso SDK workspace from GitHub repositories using the west tool. The GitHub Repository SDK uses multiple repositories hosted on GitHub to provide modular, flexible development.

Prerequisites Verify the requirements:

System Requirements:

- Python 3.8 or later
- Git 2.25 or later
- CMake 3.20 or later
- Build tools for your target platform

Verification Commands:

```
python --version    # Should show 3.8+
git --version       # Should show 2.25+
cmake --version     # Should show 3.20+
west --version      # Should show west tool installation
```

Workspace Initialization The GitHub Repository SDK uses the Zephyr west tool to manage multiple repositories containing different SDK components.

Step 1: Initialize Workspace Create and initialize your SDK workspace from GitHub:

Get the latest SDK from main branch:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk
```

Get SDK at specific revision:

```
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests.git mcuxpresso-sdk --mr {revision}
```

Note: Replace {revision} *with the desired release tag, such as* v25.09.00

Step 2: Choose Your Repository Update Strategy Navigate to the SDK workspace:

```
cd mcuxpresso-sdk
```

The west tool manages multiple GitHub repositories containing different SDK components. You have two options for downloading:

Option A: Download All Repositories (Complete SDK) Download all SDK repositories for comprehensive development:

```
west update
```

This command downloads all the repositories defined in the manifest from GitHub. Initial download takes several minutes and requires ~7 GB of disk space.

Best for:

- Exploring the complete SDK
- Multi-board development projects
- Comprehensive middleware evaluation

Option B: Targeted Repository Download (Recommended) Download only repositories needed for your specific board or device to save time and disk space:

```
# For specific board development
west update_board --set board your_board_name

# For specific device family development
west update_board --set device your_device_name

# List available repositories before downloading
west update_board --set board your_board_name --list-repo
```

Best for:

- Single board development
- Faster setup and reduced disk usage
- Focused development workflows

Examples:

```
# Update only repositories for FRDM-MCXW23 board
west update_board --set board frdmmcxw23

# Update only repositories for MCXW23 device family
west update_board --set device mcxw23
```

Step 3: Verify Installation Confirm successful setup:

```
# Verify workspace structure
ls -la
# Should show: manifests/ and mcuxsdk/ directories

# Test build system
west list_project -p examples/demo_apps/hello_world
# Should display available build configurations
```

Advanced Repository Management The west extension command `update_board` provides advanced repository management capabilities for optimized workspace setup with GitHub repositories.

Board-Specific Setup Update only repositories required for a specific board:

```
# Update only repositories for specific board, e.g., frdmmcxw23
west update_board --set board frdmmcxw23

# List available repositories for the board before updating
west update_board --set board frdmmcxw23 --list-repo
```

Device-Specific Setup Update only repositories required for a specific device family:

```
# Update only repositories for specific device, e.g., MCXW235
west update_board --set device mcxw23

# List available repositories for the device family
west update_board --set device mcxw23 --list-repo
```

Custom Configuration For advanced users who want to create custom repository combinations:

```
# Use custom configuration file
west update_board --set custom path/to/custom-config.yml

# Generate custom configuration template
cp manifests/boards/custom.yml.template my-custom-config.yml
```

Benefits of Targeted Setup **Reduced Download Size**

- Download only components needed for your target board or device
- Significantly faster initial setup for focused development
- Typical reduction from 7 GB to 2GB

Optimized Workspace

- Cleaner workspace with relevant components only
- Reduced disk space usage
- Faster repository operations

Flexible Development

- Switch between different board configurations easily
- Maintain separate workspaces for different projects
- Include optional components as needed

Repository Information Before setting up your workspace, you can explore what repositories are available:

```
# Display repository information in console
west update_board --set board frdmmcxw23 --list-repo

# Export repository information to YAML file for reference
west update_board --set board frdmmcxw23 --list-repo -o board-repos.yml
```

This command lists all the available repositories with descriptions and outlines the included components in the workspace.

Package Generation (Optional) The `update_board` command can also generate ZIP packages for offline distribution:

```
# Generate board-specific SDK package
west update_board --set board frdmmcxw23 -o frdmmcxw23-sdk.zip
```

Note: Package generation is primarily intended for creating custom SDK distributions. For regular development, use the workspace update commands without the `-o` option.

Workspace Management

Updating Your Workspace Keep your SDK current with latest updates from GitHub:

For Complete SDK Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update all component repositories
cd ..
west update
```

For Targeted Workspace:

```
# Update manifest repository
cd manifests
git pull

# Update board-specific repositories
cd ..
west update_board --set board your_board_name
```

Workspace Status Check workspace synchronization status:

```
# Show status of all repositories
west status

# Show detailed information about repositories
west list
```

Troubleshooting **Network Issues:**

- Use `west update --keep-descendants` for partial failures
- Configure Git credentials for private repositories
- Check firewall settings for Git protocol access

Permission Issues:

- Ensure write permissions in workspace directory
- Run commands without sudo/administrator privileges
- Verify Git SSH key configuration for authenticated access

Disk Space:

- Full SDK workspace requires approximately 7-8 GB
- Targeted workspace typically requires 1-2 GB
- Use board-specific setup to reduce workspace size

Repository Management Issues:

- Verify board/device names match available configurations
- Check that custom YAML files follow the correct template format
- Use `--list-repo` to verify available repositories before setup

Next Steps With your workspace initialized:

1. Review *Workspace Structure* to understand the layout
2. Build your first project with *First Build Guide*
3. Explore *Development Workflows MCUXPresso VSCode* or *Development Workflows Command Line* for the details on project setup and execution

For advanced repository management, see the west tool documentation.

Explore SDK Structure and Content

Learn about the organization of the SDK and its components:

SDK Architecture Overview The MCUXpresso SDK uses a modular architecture where software components are distributed across multiple repositories hosted on GitHub and managed through the west tool. This approach provides flexibility, maintainability, and enables selective component inclusion.

Repository Organization Based on the manifest structure, the SDK consists of four main repository categories:

Manifest Repository The manifest repo (mcuxsdk-manifests) contains the west.yml manifest file that tracks all other repositories in the SDK.

Base Repositories Recorded in submanifests/base.yml and loaded in the root west.yml manifest file. These are the foundational repositories that build the SDK:

- **Devices**: MCU-specific support packages
- **Examples**: Demonstration applications and code samples
- **Boards**: Board support packages

Middleware Repositories Recorded in the submanifests/middleware subdirectory, categorized according to functionality:

- **Connectivity**: Networking stacks, USB, and communication protocols
- **Security**: Cryptographic libraries and secure boot components
- **Wireless**: Bluetooth, IEEE 802.15.4, and other wireless protocols
- **Graphics**: Display drivers and UI frameworks
- **Audio**: Audio processing and voice recognition libraries
- **Machine Learning**: AI inference engines and neural network libraries
- **Safety**: IEC60730B safety libraries
- **Motor Control**: Motor control and real-time control libraries

Internal Repositories Recorded in submanifests/internal.yml and grouped into the "bifrost" group. These are only visible to NXP internal developers and hosted on NXP internal git servers.

Repository Hosting Public repositories are hosted on GitHub under these organizations:

- nxp-mcuxpresso
- NXP
- nxp-zephyr

Internal repositories are hosted on NXP's private Git infrastructure.

Benefits of This Architecture **Selective Integration**: Projects include only required components, reducing memory footprint and build complexity.

Independent Versioning: Each component maintains its own release cycle and version control.

Community Collaboration: Public repositories accept community contributions through standard Git workflows.

Scalable Maintenance: Component owners can update their repositories without affecting the entire SDK.

Workspace Management The west tool manages repository synchronization, version tracking, and workspace updates. All repositories are checked out under the mcuxsdk/ directory with their designated paths defined in the manifest files.

Workspace Structure After you initialize your SDK workspace, it creates a specific directory structure that organizes all SDK components. This structure is identical for both GitHub Repository SDK and Repository-Layout SDK Package.

Top-Level Organization

```
your-sdk-workspace/
  manifests/        # West manifest repository
  mcuxsdk/          # Main SDK content
```

The mcuxsdk/ directory serves as your primary working directory and contains all the SDK components.

SDK Component Layout Based on the actual SDK structure, the main directories include:

Directory	Contents	Purpose
arch/	Architecture-specific files	ARM CMSIS, build configurations
cmake/	Build system modules	CMake configuration and build rules
compo	Software components	Reusable software libraries and utilities
devices	Device support packages	MCU-specific headers, startup code, linker scripts
drivers	Peripheral drivers	Hardware abstraction layer for MCU peripherals
examp	Sample applications	Demonstration code and reference implementations
middle	Optional software stacks	Networking, graphics, security, and other libraries
rtos/	Operating system support	FreeRTOS integration
scripts	Build and utility scripts	West extensions and development tools
svd	Svd files for devices, this is optional because of large size. Customers run `west manifest config group.filter +optional` and `west update mcux-soc-svd` to get this folder.	

Example Organization Examples follow a two-tier structure separating common code from board-specific implementations:

Common Example Files

```
examples/demo_apps/hello_world/
  CMakeLists.txt       # Build configuration
  example.yml          # Example metadata
  hello_world.c        # Application source code
  Kconfig              # Configuration options
  readme.md            # General documentation
```

Board-Specific Files

```
examples/_boards/your_board/demo_apps/hello_world/
  app.h                    # Board specific application header
  example_board_readme.md  # Board specific documentation
  hardware_init.c          # Board specific hardware initialization
  pin_mux.c                # Pin multiplexing configuration
  pin_mux.h                # Pin multiplexing header definitions
  hello_world.bin          # Pre-built binary for quick testing
  hello_world.mex          # MCUXpresso Config Tools project file
  prj.conf                 # Board specific Kconfig configuration
  reconfig.cmake           # Board specific cmake configuration overrides
```

Device Support Structure Device support is organized hierarchically by MCU family:

```
devices/
  MCX/                  # MCU portfolio
    MCXW/               # MCU family
      MCXW235/          # Specific device
        MCXW235.h           # Device register definitions
        drivers/            # Device-specific drivers
        gcc/                # GNU toolchain files
        iar/                # IAR toolchain files
        mcuxpresso/         # MCUXpresso IDE files
        startup_MCXW235.c # Startup and vector table
        system_MCXW235.c  # System initialization
```

Middleware Organization Middleware components are categorized by functionality and maintained in separate repositories. Based on the manifest files, common middleware categories include:

- **Connectivity**: USB, TCP/IP, industrial protocols
- **Security**: Cryptographic libraries, secure boot
- **Wireless**: Bluetooth, IEEE 802.15.4, Wi-Fi
- **Graphics**: Display drivers, UI frameworks
- **Audio**: Processing libraries, voice recognition
- **Machine Learning**: Inference engines, neural networks
- **Safety**: IEC60730B safety libraries
- **Motor Control**: Motor control and real-time control libraries

Documentation Structure SDK documentation is distributed across multiple locations:

- docs/ - Core SDK documentation and build infrastructure
- Component repositories - API documentation and integration guides
- Board directories - Hardware-specific setup instructions

For complete documentation, refer to the online documentation.

Understanding Example Structure Each example has **two README files**:

1. General README: examples/demo_apps/hello_world/readme.md

- What the example does
- General functionality description
- Common usage information

2. Board-Specific README: examples/_boards/{board_name}/demo_apps/hello_world/example_board_readme.md

- Board-specific setup instructions
- Hardware connections required
- Board-specific behavior notes

Tip: Always check both readme files - start with the general one, then read the board-specific one for detailed setup.

Development Workflows

Get started with building and running projects:

Building Your First Project This guide explains how to build and run your first SDK example project using the west build system. This applies to both GitHub Repository SDK and Repository-Layout SDK Package.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development board connected via USB
- Build tools installed per *Installation Guide*

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list_project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list_project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Process

Simple Build Build the hello_world example with default settings:

```
west build -b your_board examples/demo_apps/hello_world
```

The default toolchain is armgcc, and the build system will select the first debug target as default if no config is specified.

Specifying Configuration

```
# Release build
west build -b your_board examples/demo_apps/hello_world --config release

# Debug build (default)
west build -b your_board examples/demo_apps/hello_world --config debug
```

Alternative Toolchains

```
# IAR toolchain
west build -b your_board examples/demo_apps/hello_world --toolchain iar

# Other toolchains as supported by the example
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config␣
↪flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Flash an Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Start a debug session:

```
west debug -r linkserver
```

Common Build Options

Clean Build Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See the commands that get executed without running them:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device DEVICE_PART_NUMBER --config␣
↪release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b your_board examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Getting Help View the help information for west build:

```
west build -h
```

Check Supported Configurations To see available configuration options and board targets for an example, refer to the below command:

```
west list_project -p examples/demo_apps/hello_world
```

Next Steps

- Explore other examples in the SDK
- Learn about *Command Line Development* for advanced options
- Try *VS Code Development* for integrated development
- Refer *Workspace Structure* to understand the SDK layout

MCUXpresso for VS Code Development This guide covers using MCUXpresso for VS Code extension to build, debug, and develop SDK applications with an integrated development environment.

Prerequisites

- SDK workspace initialized (GitHub Repository SDK or Repository-Layout SDK Package)
- Development tools installed per *Installation Guide*
- Visual Studio Code installed
- MCUXpresso for VS Code extension installed

Extension Installation

Install MCUXpresso for VS Code The MCUXpresso for VS Code extension provides integrated development capabilities for MCUXpresso SDK projects. Refer to the MCUXpresso for VS Code documentation for detailed installation and setup instructions.

SDK Import and Setup

Import Methods The SDK can be imported in several ways. The MCUXpresso for VS Code extension supports both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Import GitHub Repository SDK Click **Import Repository** from the **QUICKSTART PANEL**

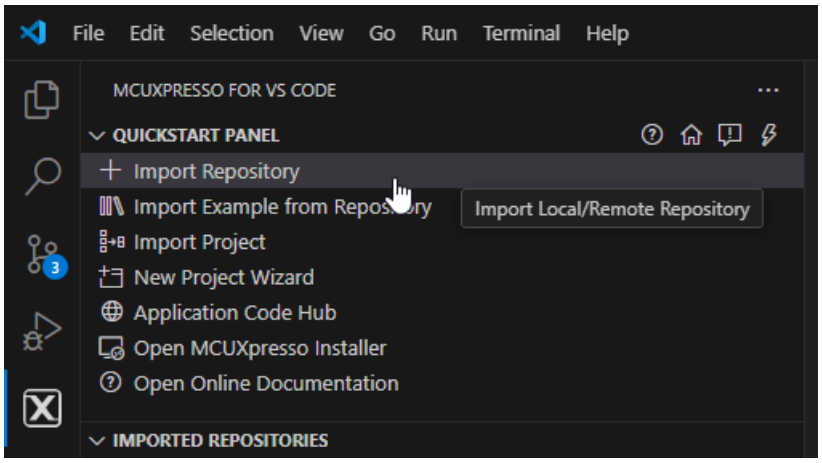

Note: You can import the SDK in several ways. Refer to the MCUXpresso for VS Code documentation for details.

Select **Local** if you've already obtained the SDK according to *setting up the repo*. Select your location and click **Import**.

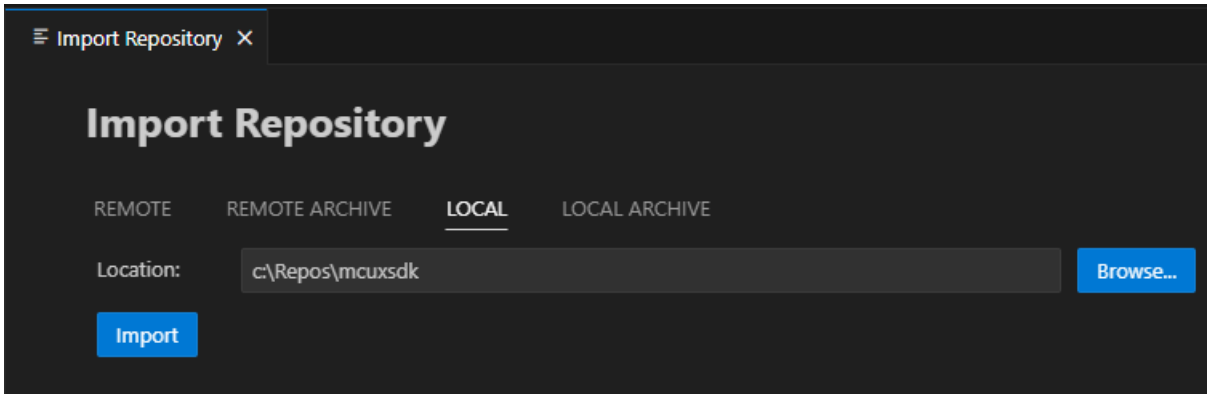

Import Repository-Layout SDK Package Click **Import Repository** from the **QUICKSTART PANEL**

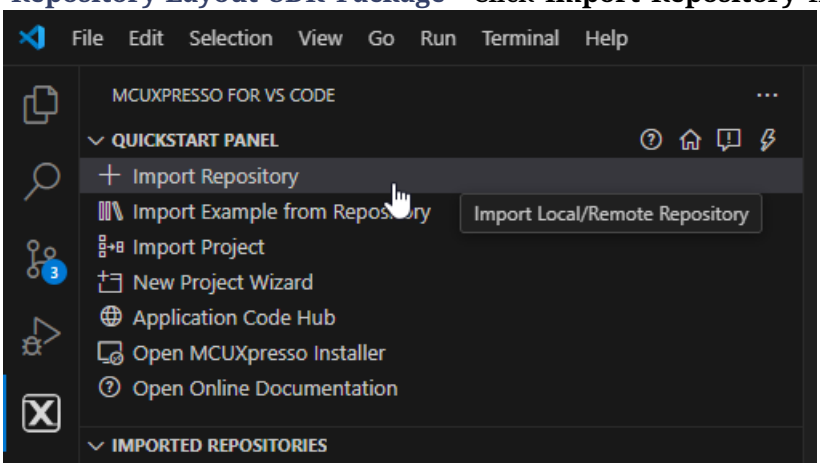

Select **Local** if you've already unzipped the Repository-Layout SDK Package. Select your location and click **Import**.

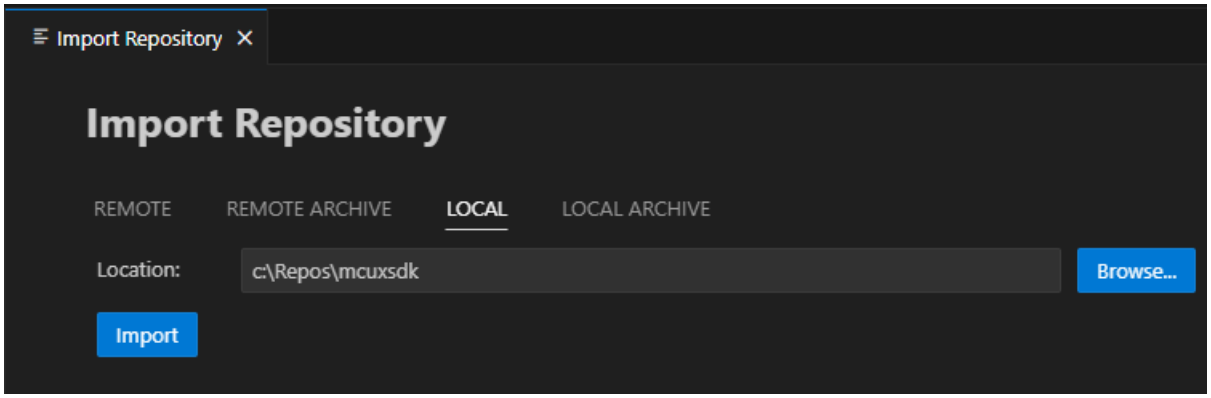

Else if the SDK is ZIP archive, select **Local Archive**, browse to the downloaded SDK ZIP file, fill the link of expect location, then click **Import**.

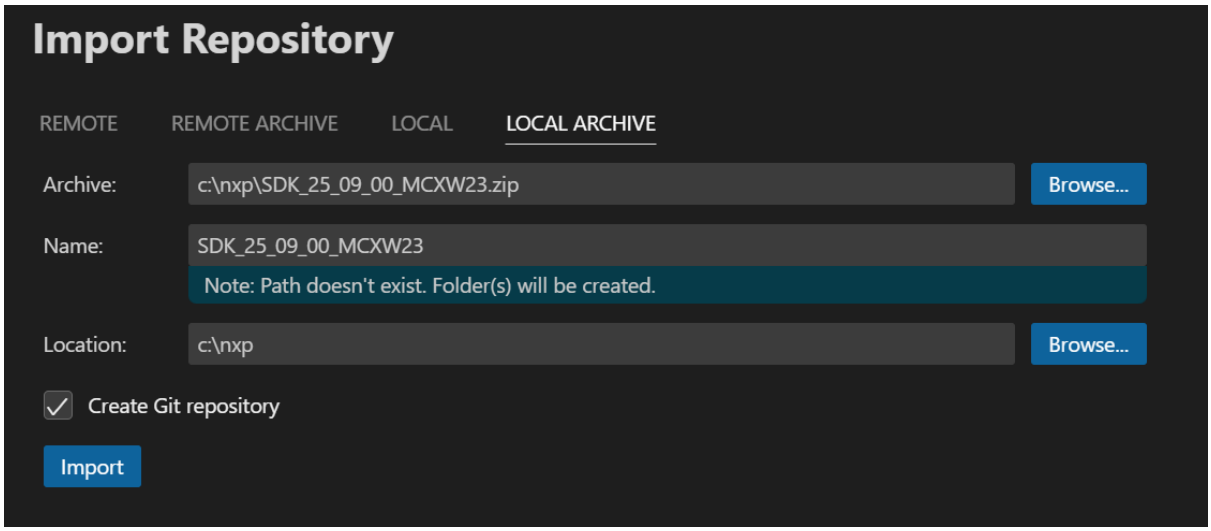

Building Example Applications

Import Example Project

1. Click **Import Example from Repository** from the **QUICKSTART PANEL**

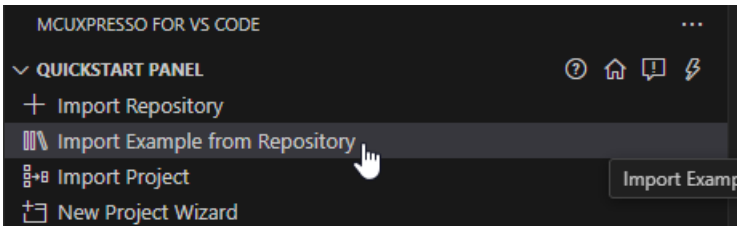

2. Configure project settings:
   - **MCUXpresso SDK**: Select your imported SDK
   - **Arm GNU Toolchain**: Choose toolchain
   - **Board**: Select your target development board
   - **Template**: Choose example category
   - **Application**: Select specific example (e.g., hello_world)
   - **App type**: Choose between Repository applications or Freestanding applications

3. Click **Import**

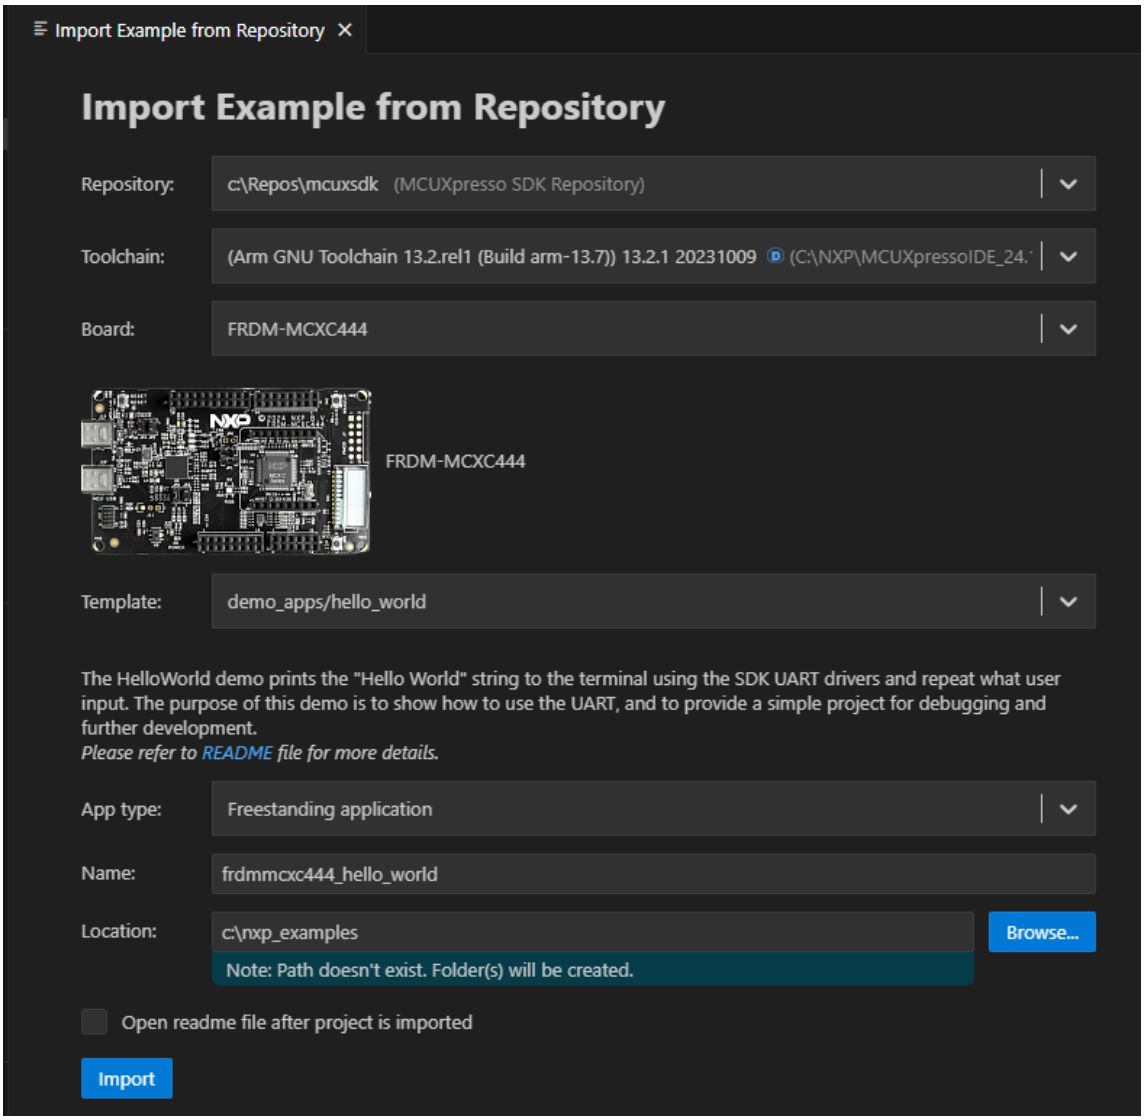

Application Types **Repository Applications:**

- Located inside the MCUXpresso SDK
- Integrated with SDK workspace

Freestanding Applications:

- Imported to user-defined location
- Independent of SDK location

Trust Confirmation VS Code will prompt you to confirm if the imported files are trusted. Click **Yes** to proceed.

Building Projects

Build Process

1. Navigate to **PROJECTS** view

2. Find your project
3. Click the **Build Project** icon

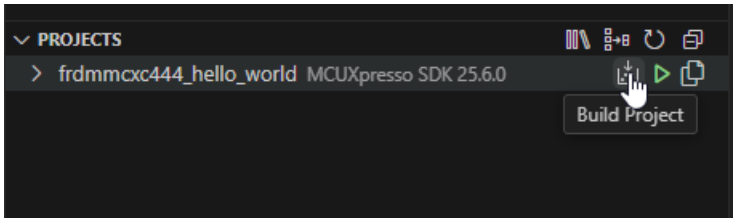

The integrated terminal will display build output at the bottom of the VS Code window.

Running and Debugging

Serial Monitor Setup

1. Open **Serial Monitor** from VS Code's integrated terminal

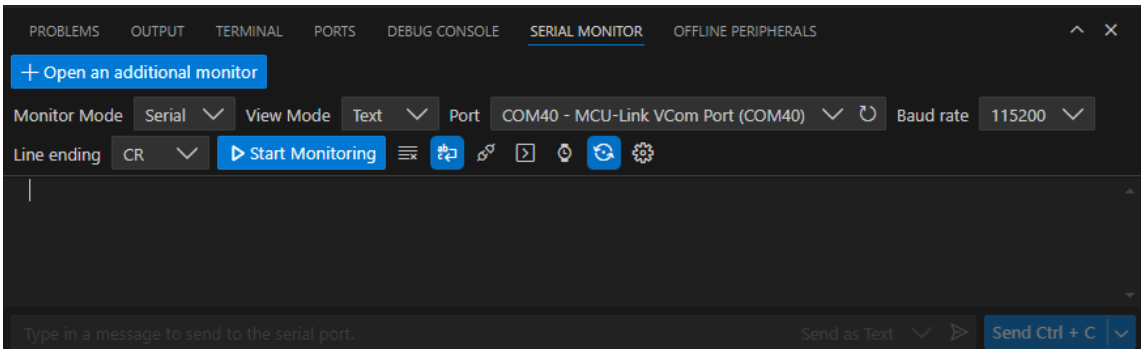

2. Configure serial settings:
   - **VCom Port**: Select port for your device
   - **Baud Rate**: Set to 115200

Debug Session

1. Navigate to **PROJECTS** view
2. Click the play button to initiate a debug session

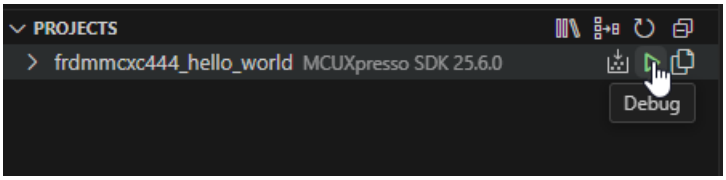

The debug session will begin with debug controls initially at the top of the interface.

Debug Controls Use the debug controls to manage execution:

- **Continue**: Resume code execution
- **Step controls**: Navigate through code

- **Stop**: Terminate debug session

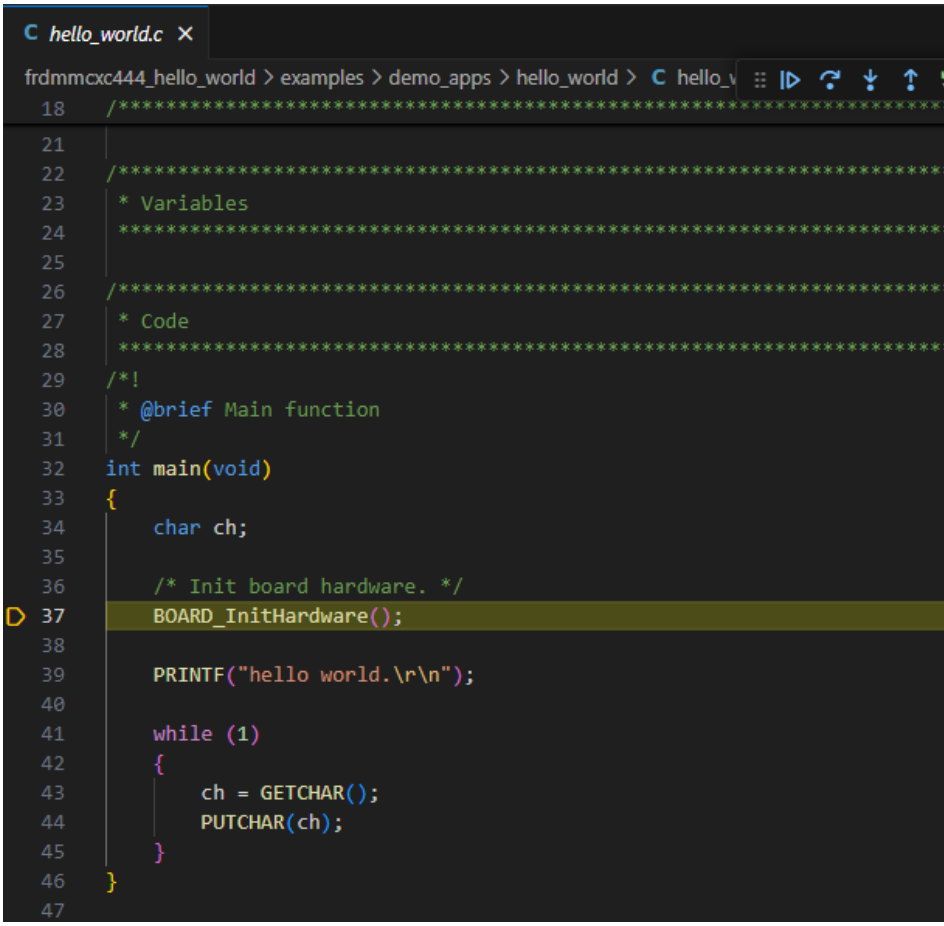

Monitor Output Observe application output in the **Serial Monitor** to verify correct operation.

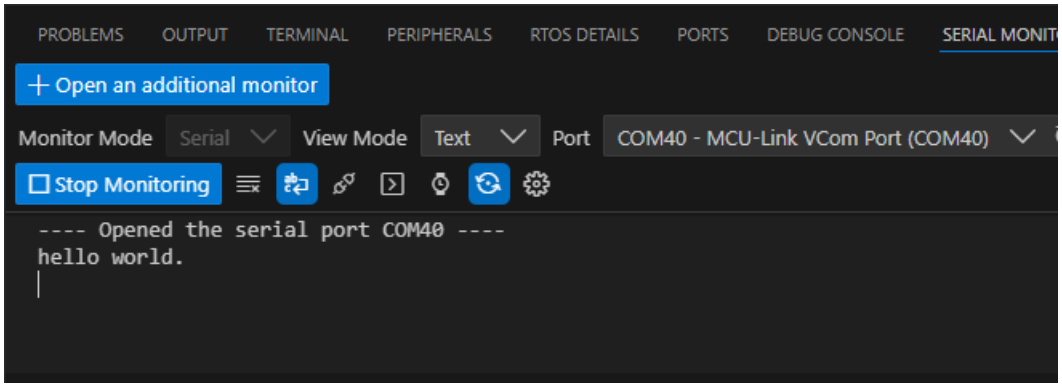

Debug Probe Support For comprehensive information on debug probe support and configuration, refer to the MCUXpresso for VS Code Debug documentation.

Project Configuration

Workspace Management The extension integrates with the MCUXpresso SDK workspace structure, providing access to:

- Example applications
- Board configurations

- Middleware components
- Build system integration

Multi-Project Support The PROJECTS view allows management of multiple imported projects within the same workspace.

Troubleshooting

Import Issues **SDK not detected:**

- Verify SDK workspace is properly initialized
- Ensure all required repositories are updated
- Check SDK manifest files are present

Project import failures:

- Confirm board support exists for selected example
- Verify toolchain installation
- Check example compatibility with selected board

Build Problems **Build failures:**

- Check integrated terminal for error messages
- Verify all dependencies are installed
- Ensure toolchain is properly configured

Debug Issues **Debug session fails:**

- Verify board connection via USB
- Check debug probe drivers are installed
- Confirm build completed successfully

Serial monitor problems:

- Verify correct VCom port selection
- Check baud rate configuration (115200)
- Ensure board drivers are installed

Integration with Command Line MCUXpresso for VS Code integrates with the underlying west build system, allowing seamless integration with command line workflows described in *Command Line Development*.

Advanced Features

Project Types The extension supports both repository-based and freestanding project types, providing flexibility in project organization and SDK integration.

Build System Integration The extension leverages the MCUXpresso SDK build system, providing access to all build configurations and options available through command line tools.

Next Steps

- Explore additional examples in the SDK
- Review *Command Line Development* for advanced build options
- Refer to the MCUXpresso for VS Code documentation for detailed documentation
- Learn about *SDK Architecture* for better understanding of the development environment

Command Line Development This guide covers developing with the MCUXpresso SDK using command line tools and the west build system. This workflow applies to both GitHub Repository SDK and Repository-Layout SDK Package distributions.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- Development tools installed per *Installation Guide*
- Target board connected via USB

Understanding Board Support Use the west extension to discover available examples for your board:

```
west list_project -p examples/demo_apps/hello_world
```

This shows all supported build configurations. You can filter by toolchain:

```
west list_project -p examples/demo_apps/hello_world -t armgcc
```

Basic Build Commands

Standard Build Process Build with default settings (armgcc toolchain, first debug config):

```
west build -b your_board examples/demo_apps/hello_world
```

Specifying Build Configuration

```
# Release build
west build -b your_board examples/demo_apps/hello_world --config release

# Debug build with specific toolchain
west build -b your_board examples/demo_apps/hello_world --toolchain iar --config debug
```

Multicore Applications For multicore devices, specify the core ID:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config␣
↪flexspi_nor_debug
```

For multicore projects using sysbuild:

```
west build -b evkbmimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always
```

Shield Support For boards with shields:

```
west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪Dcore_id=cm33_core0
```

Advanced Build Options

Clean Builds Force a complete rebuild:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Dry Run See what commands would be executed:

```
west build -b your_board examples/demo_apps/hello_world --dry-run
```

Device Variants For boards supporting multiple device variants:

```
west build -b your_board examples/demo_apps/hello_world --device MK22F12810 --config release
```

Project Configuration

CMake Configuration Only Run configuration without building:

```
west build -b evkbmimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Interactive Configuration Launch the configuration GUI:

```
west build -t guiconfig
```

Flashing and Debugging

Flash Application Flash the built application to your board:

```
west flash -r linkserver
```

Debug Session Start a debugging session:

```
west debug -r linkserver
```

IDE Project Generation Generate IDE project files for traditional IDEs:

```
# Generate IAR project
west build -b evkbmimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config␣
↪flexspi_nor_debug -p always -t guiproject
```

IDE project files are generated in mcuxsdk/build/<toolchain> folder.

Note: Ruby installation is required for IDE project generation. See *Installation Guide* for setup instructions.

Troubleshooting

Build Failures Use pristine builds to resolve dependency issues:

```
west build -b your_board examples/demo_apps/hello_world -p always
```

Toolchain Issues Verify environment variables are set correctly:

```
# Check ARM GCC
echo $ARMGCC_DIR
arm-none-eabi-gcc --version

# Check IAR (if using)
echo $IAR_DIR
```

Getting Help Display help information:

```
west build -h
west flash -h
west debug -h
```

Check Supported Configurations If unsure about supported options for an example:

```
west list_project -p examples/demo_apps/hello_world
```

Best Practices

Project Organization

- Keep custom projects outside the SDK tree
- Use version control for your application code
- Document any SDK modifications

Build Efficiency

- Use -p always for clean builds when troubleshooting
- Leverage --dry-run to understand build processes
- Use specific configs and toolchains to reduce build time

Development Workflow

1. Start with existing examples closest to your requirements
2. Copy and modify rather than building from scratch
3. Test with hello_world before moving to complex examples
4. Use configuration tools for pin muxing and clock setup

Next Steps

- Explore *VS Code Development* for integrated development experience
- Review *Workspace Structure* to understand SDK organization
- Refer build system documentation for advanced configurations

Using MCUXpresso Config Tools MCUXpresso Config tools provide a user-friendly way to configure hardware initialization of your projects. This guide explains the basic workflow with the MCUXpresso SDK west build system and the Config Tools.

Prerequisites

- GitHub Repository SDK workspace initialized OR Repository-Layout SDK Package extracted
- MCUXpresso Config Tools standalone installed (version 25.09 or above)
- MCUXpresso SDK Project that can be successfully built

Board Files MCUXpresso Config Tools generate source files for the board. These files include pin_mux.c/h and clock_config.c/h. The files contain initialization code functions that reflect the hardware configuration in the Config Tools. Within the SDK codebase, these files are specific for the board and either shared by multiple example projects or specific for one example. Open or import the configuration from the SDK project in the Config Tools and customize the settings to match the custom board or specific project use case and regenerate the code. See *User Guide for MCUXpresso Config Tools (Desktop)* (document GSMCUXCTUG) for details.

Note: When opening the configuration for SDK example projects, the board files may be shared across multiple examples. To ensure a separate copy of the board configuration files exists, create a freestanding project with copied board files.

Visual Studio Code To open the configuration in Visual Studio Code, use the context menu for the project to access Config Tools. See MCUXpresso Extension Documentation for details. Otherwise, use the manual workflow described in detail in the following section.

Manual Workflow Use the following steps:

1. Before using Config Tools, run the west command to get the project information for Config Tools from the SDK project files, for example:

```
west cfg_project_info -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_
↪id=cm33_core0
```

   This results in the creation of the project information json file that is searched by the config tools when the configuration is created. The parameters of the command should match the build parameters that will be used for the project.

2. Launch the MCUXpresso Config Tools and in the **Start development** wizard, select **Create a new configuration based on the existing IDE/Toolchain project**. Select the created "cfg_tools" subfolder as a project folder (for example: ...mcuxsdk/examples/demo_apps/hello_world/cfg_tools/).

Updating the SDK West project **Note:** Updating project is supported with Config Tools V25.12 or newer only.

Changes in the Config tools generated source code modules may require adjustments to the toolchain project to ensure a successful build. These changes may mean, for example, adding the newly generated files, adding include paths, required drivers, or other SDK components. This section describes how to manually resolve the changes needed in the project within the toolchain projects based on the SDK project managed by the West tool.

After the configuration in the Config Tools is finished, write updated files to the disk using the 'Update Code' command. The written files include a json file with the required changes for the toolchain project.

To resolve the changes in the project in the terminal, launch the west command that updates the project. For example:

```
west cfg_resolve -b lpcxpresso55s69 ...mcuxsdk/examples/demo_apps/hello_world/ -Dcore_id=cm33_core0
```

This command updates the appropriate cmake and kconfig files to address the changes. After this, the application can be built.

Note: The cfg_resolve command supports additional arguments. Launch the *west cfg_resolve -h* command to get the list and description.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see MCUXpresso-SDK: Software Development Kit for MCUXpresso.

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC,PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and

middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- IAR Embedded Workbench for Arm, version is 9.70.2
- MCUXpresso for VS Code v26.03
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

Development boards	MCU devices
EVK-MIMX8	MIMX8UD3CVP08, MIMX8UD3DVK08, MIMX8UD3DVP08, MIMX8UD5CVP08, MIMX8UD5DVK08, MIMX8UD5DVP08, MIMX8US3CVP08, MIMX8US3DVK08, MIMX8US3DVP08, MIMX8US5CVP08, MIMX8US5DVK08, MIMX8US5DVP08, MIMX8UD7CVP08, MIMX8UD7DVK08, **MIMX8UD7DVP08**

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

VoiceSpot VoiceSpot is a highly accurate, small memory and MIPS profile wake word engine supporting custom voice trigger words and phrases. MCUXpresso SDK version of VoiceSpot is trained to “Hey NXP” wake word only and has 25 hour trial timeout.

TinyCBOR Concise Binary Object Representation (CBOR) Library

PKCS#11 The PKCS#11 standard specifies an application programming interface (API), called “Cryptoki,” for devices that hold cryptographic information and perform cryptographic functions. Cryptoki follows a simple object based approach, addressing the goals of technology independence (any kind of device) and resource sharing (multiple applications accessing multiple devices), presenting to applications a common, logical view of the device called a “cryptographic token”.

Multicore Multicore Software Development Kit

mbedTLS mbedtls SSL/TLS library v2.x

llhttp HTTP parser llhttp

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

NatureDSP for FusionF1 Digital Signal Processing for Xtensa FusionF1 DSP Audio Engines.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eiq_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_nam
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_templat
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known issues

This section lists the known issues, limitations, and/or workarounds.

Fusion DSP may load wrong data from shared SRAM on Silicon A0.1 with specific command sequence

There is issue in the shared SRAM controller prefetch logic for silicon A0.1.

A back-2-back access to the same memory location without any “nop” cycle in between corrupts the prefetch buffer under the following conditions.

First cycle access is a read to address N, immediately followed by the second cycle-partial write (1 byte or halfword (16-bits)) to address N.

The partial write is not updated to prefetch buffer. Subsequent reading from the Shared SRAM address N returns incorrect data.

Real-Time Domain cannot normally resume from the power-down mode due to EdgeLock secure enclave (S400) failure

There is an issue in EdgeLock secure enclave (S400) during state restoring phase for silicon A0.1. When Real Time Domain (RTD) is about to enter the power-down mode, S400 is promoted to save the current state to the memory. However, once RTD wakes up, S400 encounters an error when trying to restore the state.

This error can cause S400 decide to reset RTD, which means RTD cannot normally resume from the power-down mode.

Flexcan_ping_pong_buffer_transfer case loses first 8 bytes data for armgcc flash_debug

To prevent flexcan_ping_pong_buffer_transfer case from losing the first 8 bytes data for armgcc flash_debug, apply the fix below.

```
a/flexcan/example/ping_pong_buffer_transfer/flexcan_ping_pong_buffer_transfer.c
+++ b/flexcan/example/ping_pong_buffer_transfer/flexcan_ping_pong_buffer_transfer.c
@@ -539,10 +539,11 @@ int main(void)
        else
        {
            /* Wait until Rx queue 1 full. */
-           while (rxQueueNum != 1U)
+            while (rxQueueNum == 0U)
            {
            };
-           rxQueueNum = 0;
+            if (rxQueueNum == 1)
+                rxQueueNum = 0;
            LOG_INFO("Read Rx MB from Queue 1.\r\n");
            for (i = 0; i < RX_QUEUE_BUFFER_SIZE; i++)
            {
```

Lpspi_interrupt_b2b_master/slave example transfer fail on iar/armgcc flash target

The lpspi_interrupt_b2b_master/slave example transfer fails to send the data from the master to the slave on iar/armgcc flash target.

DSP examples build failure in IAR 9.50.1

In IAR version 9.50.1, there are build issues when building dsp_examples. To build the dsp_examples, use an older version of IAR. This issue will be fixed in the next version of IAR tool.

DSP examples cannot boot the Fusion core

The examples in the dsp_examples folder can not run properly since they can not boot the Fusion DSP core. It can be fixed by removing line 633 from board.c: TRDC_MbcSetMemoryBlockConfig(TRDC, &mbcBlockConfig); under comment /* non secure state can access CGC0 (Pbridge0, slot 47) for HIFI4 DSP */. This will be fixed in the next release.

For the dsp_voice_spot_demo there is a wrong incbin.S file used. Please use the same file as for the rest of the DSP examples.

Examples hello_world_ns, secure_faults_ns, and secure_faults_trdc_ns have incorrect library path in GUI projects

When the affected examples are generated as GUI projects, the library linking the secure and non-secure worlds has an incorrect path set. This causes linking errors during project compilation.

Examples: hello_world_ns, hello_world_s, secure_faults_ns, secure_faults_s, secure_faults_trdc_ns, secure_faults_trdc_s

Affected toolchains: mdk, iar

Workaround: In the IDE project settings for the non-secure (_ns) project, find the linked library (named hello_world_s_CMSE_lib.o, or similar, depending on the example project) and replace

the path to the library with <build_directory>/<secure_world_project_folder>/<IDE>/, replacing the subdirectory names with the build directory, the secure world project name, and IDE name.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version

ACMP

[2.5.0]

- New Feature
  - Supported the plateforms which don't have continuous mode.

[2.4.0]

- New Feature
  - Supported the plateforms which don't have continuous mode.

[2.3.0]

- Improvements
  - Expose C0 register FILTER_CNT bitfield and FPR bitfield to the user.

[2.2.0]

- Improvements
  - Updated feature macros for roundrobin mode, window mode, filter mode, and 3V domain removes.

[2.1.0]

- New Feature
  - Supported the plateforms which don't have hysteresis mode.

[2.0.6]

- Bug Fixes
  - Fixed the wrong comments, the DAC value should range from 0 to 255.

[2.0.5]

- Bug Fixes
  - Fixed the out-of-bounds error of Coverity caused by missing an assert sentence to avoid the return value of ACMP_GetInstance() exceeding the array bounds.
  - Fixed the violations of MISRA C-2012 rules:
    - Rule 10.1, 14.4, 16.4, 17.7.

[2.0.4]

- Bug Fixes
  - Avoided changing w1c bit in ACMP_SetRoundRobinPreState().

[2.0.3]

- New Features
  - Added feature functions for usage of different power domains(1.8 V and 3 V). These functions are first enabled in ULP1. They are about:
    - ACMP_EnableLinkToDAC()
    - ACMP_SetDiscreteModeConfig()
    - ACMP_GetDefaultDiscreteModeConfig()

[2.0.2]

- Other Changes
  - Changed coding style of peripheral base address from "s_acmpBases" to "s_acmpBase".

[2.0.1]

- Bug Fixes
  - Fixed bug regarding the function "ACMP_SetRoundRobinConfig". It will not continue execution but returns directly after disabling round robin mode.

BBNSM

[2.0.0]

- Initial version.

CACHE64

[2.0.14]

- Bug Fixes
  - Fixed boundary check in CACHE64_GetInstanceByAddr() to correctly include the last address of the memory range.

[2.0.13]

- Bug Fixes
  - Fix issue in CACHE64_InvalidateCacheByRange(), CACHE64_CleanCacheByRange() and CACHE64_CleanInvalidateCacheByRange() functions to avoid cleaning/invalidation less cache lines than expected.

[2.0.12]

- Improvements
  - Add memory barrier when enabling/disabling cache.

[2.0.11]

- Bug Fixes
  - Fixed CERT INT30-C violations: check and guarantee address plus size is equal or smaller than UINT32_MAX.

[2.0.10]

- Improvements
  - Updated CACHE64_InvalidateCacheByRange(), CACHE64_CleanCacheByRange() and CACHE64_CleanInvalidateCacheByRange() to support some platforms that multiple regions in the memory map are remapped to create a continuous address space.

[2.0.9]

- Improvements
  - Removed assert(false) in CACHE64_GetInstanceByAddr.

[2.0.8]

- Improvements
  - Updated function CACHE64_GetInstanceByAddr() to support some devices that provide alias of cacheable memory section.

[2.0.7]

- Improvements
  - Check input parameter “size_byte” must be larger than 0.

[2.0.6]

- Bug Fixes
  - Fixed overflow for CACHE64_GetInstanceByAddr()/CACHE64_CleanCacheByRange()/CACHE64_Invalid
    APIs.

[2.0.5]

- Improvement
  - Made use of FSL_FEATURE_CACHE64_CTRL_HAS_NO_WRITE_BUF feature

[2.0.4]

- Improvement
  - Disable cache policy feature on SoC without CACHE64_POLSEL IP.
- Bug Fixes
  - Fixed doxygen issue.

[2.0.3]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 10.3.

[2.0.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 10.1, 10.3, 10.4 and 14.4.
  - Fixed doxygen issue.

[2.0.1]

- Improvements
  - Moved CLCR register configuration out of the while loop, it’s unnecessary to repeat this operation.

[2.0.0]

- Initial version.

CASPER

[2.2.5]

- Fix Coverity Uninitialized scalar variable.

[2.2.4]

- Fix MISRA-C 2012 issue.

[2.2.3]

- Added macro into CASPER_Init and CASPER_Deinit to support devices without clock and reset control.

[2.2.2]

- Enable hardware interleaving to RAMX0 and RAMX1 for CASPER by feature macro FSL_FEATURE_CASPER_RAM_HW_INTERLEAVE

[2.2.1]

- Fix MISRA C-2012 issue.

[2.2.0]

- Rework driver to support multiple curves at once.

[2.1.0]

- Add ECC NIST P-521 elliptic curve.

[2.0.10]

- Fix MISRA C-2012 issue.

[2.0.9]

- Remove unused function Jac_oncurve().
- Fix ECC384 build.

[2.0.8]

- Add feature macro for CASPER_RAM_OFFSET.

[2.0.7]

- Fix MISRA C-2012 issue.

[2.0.6]

- Bug Fixes
  - Fix IAR Pa082 warning

[2.0.5]

- Bug Fixes
  - Fix sign-compare warning

[2.0.4]

- For GCC compiler, enforce O1 optimize level, specifically to remove strict-aliasing option. This driver is very specific and requires -fno-strict-aliasing.

[2.0.3]

- Bug Fixes
  - Fixed the bug for KPSDK-28107 RSUB, FILL and ZERO operations not implemented in enum _casper_operation.

[2.0.2]

- Bug Fixes
  - Fixed KPSDK-25015 CASPER_MEMCPY hard-fault on LPC55xx when both source and destination buffers are outside of CASPER_RAM.

[2.0.1]

- Bug Fixes
  - Fixed the bug that KPSDK-24531 double_scalar_multiplication() result may be all zeroes for some specific input.

[2.0.0]

- Initial version.

COMMON

[2.6.3]

- New Features
  - Added bit mask inversion macros to avoid type promotion.
  - Added register operation macros.
- Improvements
  - Make function MSDK_EnableCpuCycleCounter compatible with CMSIS-5 and CMSIS-6.
- Bug Fixes
  - Fixed build issue of CMSIS PACK BSP example caused by CMSIS 6.1 issue.

[2.6.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule for implicit conversions in boolean contexts

[2.6.1]

- Improvements
  - Support Cortex M23.

[2.6.0]

- Bug Fixes
  - Fix CERT-C violations.

[2.5.0]

- New Features
  - Added new APIs InitCriticalSectionMeasurementContext, DisableGlobalIRQEx and EnableGlobalIRQEx so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
  - Enable irqs that mount under irqsteer interrupt extender.

[2.4.2]

- Improvements
  - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
  - Improve for the macro redefinition error when integrated with zephyr.

[2.4.0]

- New Features
  - Added EnableIRQWithPriority, IRQ_SetPriority, and IRQ_ClearPendingIRQ for ARM.
  - Added MSDK_EnableCpuCycleCounter, MSDK_GetCpuCycleCount for ARM.

[2.3.3]

- New Features
  - Added NETC into status group.

[2.3.2]

- Improvements
  - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
  - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
  - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
  - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
  - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
  - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
  - Included stddef.h header file for MDK tool chain.
- New Features:
  - Added atomic modification macros.

[2.2.7]

- Other Change
  - Added MECC status group definition.

[2.2.6]

- Other Change
  - Added more status group definition.
- Bug Fixes
  - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
  - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
  - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
  - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
  - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
  - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
  - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
  - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
  - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
  - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
  - Deleted and optimized repeated macro.

[2.1.0]

- New Features
  - Added IRQ operation for XCC toolchain.
  - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
  - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
  - Added new feature macro switch "FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION" for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
  - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.

DAC12

[2.1.2]

- Bug Fixes
  - Fixed CERT INT31-C issue.

[2.1.1]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.0]

- Improvements
  - Defined the macro "FSL_FEATURE_HAS_NO_ITRM_REGISTER" to distinguish different scenes that ITRM register may not equipped one some devices.

[2.0.1]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules:
    - Rule 10.8, 17.7.

[2.0.0]

- Initial version.

EDMA (DMA3)

[2.5.3]

- Bug Fixes
  - Fixed coverity issues with CERT INT30-C, CERT INT31-C compliance.
  - Fixed violations of MISRA C-2012 rule 10.4, 8.5.

[2.5.2]

- Bug Fixes
  - Fixed the EDMA header index retrieval error caused by done bit calculation mistake issue.

[2.5.1]

- Bug Fixes
  - enables the auto stop request feature in API EDMA_ResetChannel

[2.5.0]

- Improvements
  - Add API EDMA_GetTransferSize for EDMA_PrepareTransferConfig to reduce HIS CCM value.

[2.4.0]

- Improvements
  - Added peripheral to peripheral support in DMA3 driver.
- Bug Fixes
  - Fixed the ERQ bit reading error issue.

[2.3.2]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.1]

- Bug Fixes
  - Added clear TCD_CITER_ELINKNO and TCD_BITER_ELINKNO registers in EDMA_AbortTransfer to make sure the TCD registers in a correct state for next calling of EDMA_SubmitTransfer.

[2.3.0]

- Improvements
  - Added feature FSL_FEATURE_EDMA_HAS_NO_SBR_ATTR_BIT to separate DMA without ATTR bitfield.

[2.2.7]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.8, 5.6.

[2.2.6]

- Bug Fixes
  - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.

[2.2.5]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.4.

[2.2.4]

- Bug Fixes
  - Fix the issue that EDMA_AbortTransfer not reset edma handle(tcdUsed, tail, header) and fix EDMA_InstallTCDMemory(handle->header = 1)

[2.2.3]

- Improvements
  - Added feature FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SUPPORT_PARAMETER to support driver IRQ handler with parameters.
  - Added feature FSL_FEATURE_EDMA_HAS_COMMON_CLOCK_GATE to improve clock gate control in dma driver.

[2.2.2]

- Bug Fixes
  - Fixed the issue of EDMA_SubmitTransfer return busy when calling EDMA_EnableChannelInterrupts before submit transfer.
  - Fixed violations of MISRA C-2012 rule 10.4, 10.1, 9.2, 10.4, 10.6, 14.4, 10.7, 14.3, 11.6.

[2.2.1]

- Improvements
  - Removed channel MUX reset from EDMA_ResetChannel, since channel mux should be constant while channel is alive.

[2.2.0]

- Improvements
  - Added new API EDMA_SetChannelMux to support channel mux feature.
  - Added new API EDMA_PrepareTransferConfig to expose paramters source offset and destination offset.
  - Exposed EDMA_InstallTCD function to application.
  - Added source/destination address alignment check.

[2.1.1]

- Improvements
  - Added 8bytes transfer width feature support in driver.

[2.1.0]

- Bug Fixes
  - Added const type for parameter configuration in EDMA_SubmitTransfer and EDMA_HandleTransferConfig API.
  - Added configurations for srcAddr and destAddr in EDMA_PrepareTransfer API.

[2.0.2]

- Improvements
  - Updated eDMA driver to support MP_CR bit GMRC.
  - Updated eDMA instance name for i.MX 8QM.
  - Used instance number as factor to calculate channel number for different instance instead of hard code.

[2.0.1]

- New Features
  - Added control macro to enable/disable the CLOCK code in current driver.
  - Added s_EDMAEnabledChannel to record enabled channel to merge all the channel IRQ handler into driver IRQ handler.
  - Added feature macro for bits EMI and EBW in MP_CSR.
- Improvements
  - Removed all the separated channel IRQ handler in DMA driver.

[2.0.0]

- Initial version.

EPDC

[2.0.2]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.1]

- Bug Fixes
  - Fixed bug in EPDC_ClearStatusFlags and EPDC_ClearLutCompleteStatusFlags that IRQ.CLR and IRQx.CLR should be written to clear status.

[2.0.0]

- Initial version.

EWM

[2.0.4]

- Bug Fixes
  - Fixed CERT INT31-C violations.

[2.0.3]

- Bug Fixes
  - Fixed violation of MISRA C-2012 rules: 10.1, 10.3.

[2.0.2]

- Bug Fixes
  - Fixed violation of MISRA C-2012 rules: 10.3, 10.4.

[2.0.1]

- Bug Fixes
  - Fixed the hard fault in EWM_Deinit.

[2.0.0]

- Initial version.

FLEXCAN

[2.15.0]

- Improvements
  - Add remote request and response non-blocking transfer APIs.
    - FLEXCAN_TransferRemoteRequestNonBlocking
    - FLEXCAN_TransferRemoteResponseNonBlocking
- Bug Fixes
  - Fixed improper CS code when configuring FlexCAN Remote Response Message Buffer in FLEXCAN_SetRemoteResponseMbConfig.

[2.14.7]

- Improvements
  - Add Coverage Justification for uncovered code.
- Bug Fixes
  - Fixed violations of the CERT INT30-C INT31-C.

[2.14.6]

- Bug Fixes
  - Fixed MCR register reconfiguration failure after FlexCAN soft reset on some platforms.

[2.14.5]

- Improvements
  - Make API FLEXCAN_GetFDMailboxOffset public.
  - Add API FLEXCAN_SetMbID and FLEXCAN_SetFDMbID to configure Message Buffer ID individually.
- Bug Fixes
  - Fixed violations of the CERT INT30-C INT31-C.
  - Fixed violations of the CERT ARR30-C.

[2.14.4]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 10.1, 10.4, 18.1.

[2.14.3]

- Improvements
  - Add unhandled interrupt events check for following API:
    - FLEXCAN_MbHandleIRQ
    - FLEXCAN_EhancedRxFifoHandleIRQ
- Bug Fixes

  - Remove FLEXCAN_MemoryErrorHandleIRQ on some platform without memory error interrupt.
  - Add conditional compile for CTRL2[ISOCANFDEN] because some platform do not have this bit.

[2.14.2]

- Improvements
  - Add Coverage Justification for uncovered code.
  - Adjust API FLEXCAN_TransferAbortReceive order.
  - Update FLEXCAN_Enable to enter Freeze Mode first when enter Disable mode on some platform.
  - Added while loop timeout for following API:
    * FLEXCAN_EnterFreezeMode
    * FLEXCAN_ExitFreezeMode
    * FLEXCAN_Enable
    * FLEXCAN_Reset
    * FLEXCAN_TransferSendBlocking
    * FLEXCAN_TransferReceiveBlocking
    * FLEXCAN_TransferFDSendBlocking
    * FLEXCAN_TransferFDReceiveBlocking
    * FLEXCAN_TransferReceiveFifoBlocking
    * FLEXCAN_TransferReceiveEnhancedFifoBlocking
- Bug Fixes
  - Remove remote frame feature in CANFD mode because there is no remote frame in the CANFD format.
  - Remove legacy Rx FIFO disabled branch in FLEXCAN_SubHandlerForLegacyRxFIFO and FLEXCAN_SubHandlerForDataTransfered.

[2.14.1]

- Bug Fixes
  - Fixed register IMASK2-4 IFLAG2-4 HR_TIME_STAMPn access issue on FlexCAN instances with different number of MBs.
  - Fixed bit field MBDSR1-3 access issue on FlexCAN instances with different number of MBs.
- Improvements
  - Unified following API as same parameter and return value type:
    * FLEXCAN_GetMbStatusFlags
    * FLEXCAN_ClearMbStatusFlags
    * FLEXCAN_EnableMbInterrupts
    * FLEXCAN_DisableMbInterrupts
  - Add workaround for ERR050443 and ERR052403.

  - Update message buffer read process in API FLEXCAN_ReadRxMb and FLEXCAN_ReadFDRxMb to make critical section as short as possible.
  - Simplify API FLEXCAN_DriverDataIRQHandler implementation by remove parameter type.

[2.14.0]

- Improvements
  - Support external time tick feature.
  - Support high resolution timestamp feature.
  - Enter Freeze Mode first when enter Disable Mode on some platform.
  - Add feature macro for Pretended Networking because some FlexCAN instance do not have this feature.
  - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
  - Add new FlexCAN IRQ Handler FLEXCAN_DriverDataIRQHandler and FLEXCAN_DriverEventIRQHandler. Thses IRQ Handlers are used on soc which FlexCAN interrupts are grouped by specific function and assigned to different vector.
  - Update macro FLEXCAN_WAKE_UP_FLAG and FLEXCAN_PNWAKE_UP_FLAG to simplify code.
  - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKMSK_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_NO_SLFWAK_SUPPORT.
  - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKSRC_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_GLITCH_FILTER.
- Bug Fixes
  - Fixed wrong interrupt and status flag helper macro in enumeration _flexcan_flags and API FLEXCAN_DisableInterrupts.
  - Fixed interrupt flag helper macro typo issue.
  - Remove flags which will are unassociated with interrupt in macro FLEXCAN_MEMORY_ERROR_INT_FLAG.
  - Remove flags which will are unassociated with interrupt in macro FLEXCAN_ERROR_AND_STATUS_INT_FLAG.
  - Fixed array out-of-bounds access when read enhanced Rx FIFO.

[2.13.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- Improvements
  - Support payload endianness selection feature.

[2.12.0]

- Improvements
  - Support automatic Remote Response feature.
  - Add API FLEXCAN_SetRemoteResponseMbConfig() to configure automatic Remote Response mailbox.

[2.11.8]

- Improvements
  - Synchronize flexcan driver update on s32z platform.

[2.11.7]

- Bug Fixes
  - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compatibility with edma5.

[2.11.6]

- Bug Fixes
  - Fixed ERRATA_9595 FLEXCAN_EnterFreezeMode() may result to bus fault on some platform.

[2.11.5]

- Bug Fixes
  - Fixed flexcan_memset() crash under high optimization compilation.

[2.11.4]

- Improvements
  - Update CANFD max bitrate to 10Mbps on MCXNx3x and MCXNx4x.
  - Release peripheral from reset if necessary in init function.

[2.11.3]

- Bug Fixes
  - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compile error with DMA3.

[2.11.2]

- Bug Fixes
  - Fixed bug that timestamp in flexcan_handle_t not updated when RX overflow happens.

[2.11.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.1.

[2.11.0]

- Bug Fixes
  - Fixed wrong base address argument in FLEXCAN2 IRQ Handler.
- Improvements
  - Add API to determine if the instance supports CAN FD mode at run time.

[2.10.1]

- Bug Fixes
  - Fixed HIS CCM issue.
  - Fixed RTOS issue by adding protection to read-modify-write operations on interrupt enable/disable API.

[2.10.0]

- Improvements
  - Update driver to make it able to support devices which has more than 64 8bytes MBs.
  - Update CAN FD transfer APIs to make them set/get edl bit according to frame content, which can make them compatible with classic CAN.

[2.9.2]

- Bug Fixes
  - Fixed the issue that FLEXCAN_CheckUnhandleInterruptEvents() can't detecting the exist enhanced RX FIFO interrupt status.
  - Fixed the issue that FLEXCAN_ReadPNWakeUpMB() does not return fail even no existing valid wake-up frame.
  - Fixed the issue that FLEXCAN_ReadEnhancedRxFifo() may clear bits other than the data available bit.
  - Fixed violations of the MISRA C-2012 rules 10.4, 10.8.
- Improvements
  - Return kStatus_FLEXCAN_RxFifoDisabled instead of kStatus_Fail when read FIFO fail during IRQ handler.
  - Remove unreachable code from timing calculates APIs.
  - Update Enhanced Rx FIFO handler to make it deal with underflow/overflow status first.

[2.9.1]

- Bug Fixes
  - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoBlocking() API clearing Fifo data available flag more than once.
  - Fixed the issue that entering FLEXCAN_SubHandlerForEhancedRxFifo() even if Enhanced Rx fifo interrupts are not enabled.
  - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoEDMA() update handle even if previous Rx FIFO receive not finished.

  - Fixed the issue that FLEXCAN_SetEnhancedRxFifoConfig() not configure the ERFCR[NFE] bits to the correct value.
  - Fixed the issue that FLEXCAN_ReceiveFifoEDMACallback() can't differentiate between Rx fifo and enhanced rx fifo.
  - Fixed the issue that FLEXCAN_TransferHandleIRQ() can't report Legacy Rx FIFO warning status.

[2.9.0]

- Improvements
- Add public set bit rate API to make driver easier to use.
- Update Legacy Rx FIFO transfer APIs to make it support received multiple frames during one API call.
- Optimized FLEXCAN_SubHandlerForDataTransfered() API in interrupt handling to reduce the probability of packet loss.

[2.8.7]

- Improvements
- Initialized the EDMA configuration structure in the FLEXCAN EDMA driver.

[2.8.6]

- Bug Fixes
- Fix Coverity overrun issues in fsl_flexcan_edma driver.

[2.8.5]

- Improvements
  - Make driver aarch64 compatible.

[2.8.4]

- Bug Fixes
  - Fixed FlexCan_Errata_6032 to disable all interrupts.

[2.8.3]

- Bug Fixes
  - Fixed an issue with the FLEXCAN_EnableInterrupts and FLEXCAN_DisableInterrupts interrupt enable bits in the CTRL1 register.

[2.8.2]

- Bug Fixes
  - Fixed errors in timing calculations and simplify the calculation process.
  - Fixed issue of CBT and FDCBT register may write failure.

[2.8.1]

- Bug Fixes
  - Fixed the issue of CAN FD three sampling points.
  - Added macro to support the devices that no MCR[SUPV] bit.
  - Remove unnecessary clear WMB operations.

[2.8.0]

- Improvements
  - Update config configuration.
    - Added enableSupervisorMode member to support enable/disable Supervisor mode.
  - Simplified the algorithm in CAN FD improved timing APIs.

[2.7.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.3, 10.7.

[2.7.0]

- Improvements
  - Update config configuration.
    - Added enablePretendedeNetworking member to support enable/disable Pretended Networking feature.
    - Added enableTransceiverDelayMeasure member to support enable/disable Transceiver Delay MeasurementPretended feature.
    - Added bitRate/bitRateFD member to work as baudRate/baudRateFD member union.
  - Rename all “baud” in code or comments to “bit” to align with the CAN spec.
  - Added Pretended Networking mode related APIs.
    - FLEXCAN_SetPNConfig
    - FLEXCAN_GetPNMatchCount
    - FLEXCAN_ReadPNWakeUpMB
  - Added support for Enhanced Rx FIFO.
  - Removed independent memory error interrupt/status APIs and put all interrupt/status control operation into FLEXCAN_EnableInterrupts/FLEXCAN_DisableInterrupts and FLEXCAN_GetStatusFlags/FLEXCAN_ClearStatusFlags APIs.
  - Update improved timing APIs to make it calculate improved timing according to CiA doc recommended.
    - FLEXCAN_CalculateImprovedTimingValues.
    - FLEXCAN_FDCalculateImprovedTimingValues.
  - Update FLEXCAN_SetBitRate/FLEXCAN_SetFDBitRate to added the use of enhanced timing registers.

[2.6.2]

- Improvements
  - Add CANFD frame data length enumeration.

[2.6.1]

- Bug Fixes
  - Fixed the issue of not fully initializing memory in FLEXCAN_Reset() API.

[2.6.0]

- Improvements
  - Enable CANFD ISO mode in FLEXCAN_FDInit API.
  - Enable the transceiver delay compensation feature when enable FD operation and set bitrate switch.
  - Implementation memory error control in FLEXCAN_Init API.
  - Improve FLEXCAN_FDCalculateImprovedTimingValues API to get same value for FPRESDIV and PRESDIV.
  - Added memory error configuration for user.
    - enableMemoryErrorControl
    - enableNonCorrectableErrorEnterFreeze
  - Added memory error related APIs.
    - FLEXCAN_GetMemoryErrorReportStatus
    - FLEXCAN_GetMemoryErrorStatusFlags
    - FLEXCAN_ClearMemoryErrorStatusFlags
    - FLEXCAN_EnableMemoryErrorInterrupts
    - FLEXCAN_DisableMemoryErrorInterrupts
- Bug Fixes
  - Fixed the issue of sent duff CAN frame after call FLEXCAN_FDInit() API.

[2.5.2]

- Bug Fixes
  - Fixed the code error issue and simplified the algorithm in improved timing APIs.
    - The bit field in CTRL1 register couldn't calculate higher ideal SP, we set it as the lowest one(75%)
      - FLEXCAN_CalculateImprovedTimingValues
      - FLEXCAN_FDCalculateImprovedTimingValues
  - Fixed MISRA-C 2012 Rule 17.7 and 14.4.
- Improvements
  - Pass EsrStatus to callback function when kStatus_FLEXCAN_ErrorStatus is comming.

[2.5.1]

- Bug Fixes
  - Fixed the non-divisible case in improved timing APIs.
    - FLEXCAN_CalculateImprovedTimingValues
    - FLEXCAN_FDCalculateImprovedTimingValues

[2.5.0]

- Bug Fixes
  - MISRA C-2012 issue check.
    - Fixed rules, containing: rule-10.1, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-11.8, rule-12.2, rule-13.4, rule-14.4, rule-15.5, rule-15.6, rule-15.7, rule-16.4, rule-17.3, rule-5.8, rule-8.3, rule-8.5.
  - Fixed the issue that API FLEXCAN_SetFDRxMbConfig lacks inactive message buff.
  - Fixed the issue of Pa082 warning.
  - Fixed the issue of dead lock in the function of interruption handler.
  - Fixed the issue of Legacy Rx Fifo EDMA transfer data fail in evkmimxrt1060 and evkmimxrt1064.
  - Fixed the issue of setting CANFD Bit Rate Switch.
  - Fixed the issue of operating unknown pointer risk.
    - when used the pointer "handle->mbFrameBuf[mbIdx]" to update the timestamp in a short-live TX frame, the frame pointer became as unknown, the action of operating it would result in program stack destroyed.
  - Added assert to check current CAN clock source affected by other clock gates in current device.
    - In some chips, CAN clock sources could be selected by CCM. But for some clock sources affected by other clock gates, if user insisted on using that clock source, they had to open these gates at the same time. However, they should take into consideration the power consumption issue at system level. In RT10xx chips, CAN clock source 2 was affected by the clock gate of lpuart1. ERRATA ID: (ERR050235 in CCM).
- Improvements
  - Implementation for new FLEXCAN with ECC feature able to exit Freeze mode.
  - Optimized the function of interruption handler.
  - Added two APIs for FLEXCAN EDMA driver.
    - FLEXCAN_PrepareTransfConfiguration
    - FLEXCAN_StartTransferDatafromRxFIFO
  - Added new API for FLEXCAN driver.
    - FLEXCAN_GetTimeStamp
      - For TX non-blocking API, we wrote the frame into mailbox only, so no need to register TX frame address to the pointer, and the timestamp could be updated into the new global variable handle->timestamp[mbIdx], the FLEXCAN driver provided a new API for user to get it by handle and index number after TX DONE Success.
    - FLEXCAN_EnterFreezeMode

    - FLEXCAN_ExitFreezeMode
  - Added new configuration for user.
    - disableSelfReception
    - enableListenOnlyMode
  - Renamed the two clock source enum macros based on CLKSRC bit field value directly.
    - The CLKSRC bit value had no property about Oscillator or Peripheral type in lots of devices, it acted as two different clock input source only, but the legacy enum macros name contained such property, that misled user to select incorrect CAN clock source.
  - Created two new enum macros for the FLEXCAN driver.
    - kFLEXCAN_ClkSrc0
    - kFLEXCAN_ClkSrc1
  - Deprecated two legacy enum macros for the FLEXCAN driver.
    - kFLEXCAN_ClkSrcOsc
    - kFLEXCAN_ClkSrcPeri
  - Changed the process flow for Remote request frame response..
    - Created a new enum macro for the FLEXCAN driver.
      - kStatus_FLEXCAN_RxRemote
  - Changed the process flow for kFLEXCAN_StateRxRemote state in the interrupt handler.
    - Should the TX frame not register to the pointer of frame handle, interrupt handler would not be able to read the remote response frame from the mail box to ram, so user should read the frame by manual from mail box after a complete remote frame transfer.

[2.4.0]

- Bug Fixes
  - MISRA C-2012 issue check.
    - Fixed rules, containing: rule-12.1, rule-17.7, rule-16.4, rule-11.9, rule-8.4, rule-14.4, rule-10.8, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-8.3, rule-12.2 and rule-16.1.
  - Fixed the issue that CANFD transfer data fail when bus baudrate is 30Khz.
  - Fixed the issue that ERR009595 does not folllow the ERRATA document.
  - Fixed code error for ERR006032 work around solution.
  - Fixed the Coverity issue of BAD_SHIFT in FLEXCAN.
  - Fixed the Repo build warning issue for variable without initial.
- Improvements
  - Fixed the run fail issue of FlexCAN RemoteRequest UT Case.
  - Implementation all TX and RX transfering Timestamp used in FlexCAN demos.
  - Fixed the issue of UT Test Fail for CANFD payload size changed from 64BperMB to 8PerMB.
  - Implementation for improved timing API by baud rate.

[2.3.2]

- Improvements
  - Implementation for ERR005959.
  - Implementation for ERR005829.
  - Implementation for ERR006032.

[2.3.1]

- Bug Fixes
  - Added correct handle when kStatus_FLEXCAN_TxSwitchToRx is comming.

[2.3.0]

- Improvements
  - Added self-wakeup support for STOP mode in the interrupt handling.

[2.2.3]

- Bug Fixes
  - Fixed the issue of CANFD data phase's bit rate not set as expected.

[2.2.2]

- Improvements
  - Added a time stamp feature and enable it in the interrupt_transfer example.

[2.2.1]

- Improvements
  - Separated CANFD initialization API.
  - In the interrupt handling, fix the issue that the user cannot use the normal CAN API when with an FD.

[2.2.0]

- Improvements
  - Added FSL_FEATURE_FLEXCAN_HAS_SUPPORT_ENGINE_CLK_SEL_REMOVE feature to support SoCs without CAN Engine Clock selection in FlexCAN module.
  - Added FlexCAN Serial Clock Operation to support i.MX SoCs.

[2.1.0]

- Bug Fixes
  - Corrected the spelling error in the function name FLEXCAN_XXX().
  - Moved Freeze Enable/Disable setting from FLEXCAN_Enter/ExitFreezeMode() to FLEXCAN_Init().
  - Corrected wrong helper macro values.

- Improvements
  - Hid FLEXCAN_Reset() from user.
  - Used NDEBUG macro to wrap FLEXCAN_IsMbOccupied() function instead of DEBUG macro.

[2.0.0]

- Initial version.

FLEXCAN_EDMA

[2.12.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 18.1.

[2.12.0]

- Improvements
  - Support high resolution timestamp feature in enhanced Rx FIFO EDMA.
  - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
- Bug Fixes
  - Fixed array out-of-bounds access when read enhanced Rx FIFO in EDMA.

[2.11.7]

- Refer FLEXCAN driver change log 2.7.0 to 2.11.7

FLEXIO

[2.3.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.
  - Added more pin control functions.

[2.2.3]

- Improvements
  - Adapter the FLEXIO driver to platforms which don't have system level interrupt controller, such as NVIC.

[2.2.2]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.2.1]

- Improvements
  - Added doxygen index parameter comment in FLEXIO_SetClockMode.

[2.2.0]

- New Features
  - Added new APIs to support FlexIO pin register.

[2.1.0]

- Improvements
  - Added API FLEXIO_SetClockMode to set flexio channel counter and source clock.

[2.0.4]

- Bug Fixes
  - Fixed MISRA 8.4 issues.

[2.0.3]

- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.0.2]

- Improvements
  - Split FLEXIO component which combines all flexio/flexio_uart/flexio_i2c/flexio_i2s drivers into several components: FlexIO component, flexio_uart component, flexio_i2c_master component, and flexio_i2s component.
- Bug Fixes
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.0.1]

- Bug Fixes
  - Fixed the dozen mode configuration error in FLEXIO_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

FLEXIO_I2C

[2.6.2]

- Improvements
  - Added timeout for while loop in FLEXIO_I2C_MasterTransferBlocking().
- Bug Fixes
  - Fixed build issues related to I2C_RETRY_TIMES.

[2.6.1]

- Bug Fixes
  - Fixed coverity issues

[2.6.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_flexio_i2c_master.c.

[2.4.0]

- Improvements
  - Added delay of 1 clock cycle in FLEXIO_I2C_MasterTransferRunStateMachine to ensure that bus would be idle before next transfer if master is nacked.
  - Fixed issue that the restart setup time is less than the time in I2C spec by adding delay of 1 clock cycle before restart signal.

[2.3.0]

- Improvements
  - Used 3 timers instead of 2 to support transfer which is more than 14 bytes in single transfer.
  - Improved FLEXIO_I2C_MasterTransferGetCount so that the API can check whether the transfer is still in progress.
- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.2.0]

- New Features
  - Added timeout mechanism when waiting certain state in transfer API.
  - Added an API for checking bus pin status.
- Bug Fixes
  - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.
  - Added codes in FLEXIO_I2C_MasterTransferCreateHandle to clear pending NVIC IRQ, disable internal IRQs before enabling NVIC IRQ.
  - Modified code so that during master's nonblocking transfer the start and slave address are sent after interrupts being enabled, in order to avoid potential issue of sending the start and slave address twice.

[2.1.7]

- Bug Fixes
  - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking did not wait for STOP bit sent.
  - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
  - Fixed the issue that I2C master did not check whether bus was busy before transfer.

[2.1.6]

- Bug Fixes
  - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed the subaddress.

[2.1.5]

- Improvements
  - Unified component full name to FLEXIO I2C Driver.

[2.1.4]

- Bug Fixes
  - The following modifications support FlexIO using multiple instances:
    - Removed FLEXIO_Reset API in module Init APIs.
    - Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    - Updated module Enable APIs to only support enable operation.

[2.1.3]

- Improvements
  - Changed the prototype of FLEXIO_I2C_MasterInit to return kStatus_Success if initialized successfully or to return kStatus_InvalidArgument if "(srcClock_Hz / masterConfig->baudRate_Bps) / 2 - 1" exceeds 0xFFU.

[2.1.2]

- Bug Fixes
  - Fixed the FLEXIO I2C issue where the master could not receive data from I2C slave in high baudrate.
  - Fixed the FLEXIO I2C issue where the master could not receive NAK when master sent non-existent addr.
  - Fixed the FLEXIO I2C issue where the master could not get transfer count successfully.
  - Fixed the FLEXIO I2C issue where the master could not receive data successfully when sending data first.
  - Fixed the Dozen mode configuration error in FLEXIO_I2C_MasterInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
  - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking API called FLEXIO_I2C_MasterTransferCreateHandle, which lead to the s_flexioHandle/s_flexioIsr/s_flexioType variable being written. Then, if calling FLEXIO_I2C_MasterTransferBlocking API multiple times, the s_flexioHandle/s_flexioIsr/s_flexioType variable would not be written any more due to it being out of range. This lead to the following situation: NonBlocking transfer APIs could not work due to the fail of register IRQ.

[2.1.1]

- Bug Fixes
  - Implemented the FLEXIO_I2C_MasterTransferBlocking API which is defined in header file but has no implementation in the C file.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.

FLEXIO_I2S

[2.2.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 12.4.

[2.2.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.2.0]

- New Features
  - Added timeout mechanism when waiting certain state in transfer API.
- Bug Fixes
  - Fixed IAR Pa082 warnings.
  - Fixed violations of the MISRA C-2012 rules 10.4, 14.4, 11.8, 11.9, 10.1, 17.7, 11.6, 10.3, 10.7.

[2.1.6]

- Bug Fixes
  - Added reset flexio before flexio i2s init to make sure flexio status is normal.

[2.1.5]

- Bug Fixes
  - Fixed the issue that I2S driver used hard code for bitwidth setting.

[2.1.4]

- Improvements
  - Unified component's full name to FLEXIO I2S (DMA/EDMA) driver.

[2.1.3]

- Bug Fixes
  - The following modifications support FLEXIO using multiple instances:
    - Removed FLEXIO_Reset API in module Init APIs.
    - Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    - Updated module Enable APIs to only support enable operation.

[2.1.2]

- New Features
  - Added configure items for all pin polarity and data valid polarity.
  - Added default configure for pin polarity and data valid polarity.

[2.1.1]

- Bug Fixes
  - Fixed FlexIO I2S RX data read error and eDMA address error.
  - Fixed FlexIO I2S slave timer compare setting error.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.

FLEXIO_SPI

[2.4.3]

- Improvements
  - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.4.2]

- Bug Fixes
  - Fixed FLEXIO_SPI_MasterTransferBlocking and FLEXIO_SPI_MasterTransferNonBlocking issue in CS continuous mode, the CS might not be continuous.

[2.4.1]

- Bug Fixes
  - Fixed coverity issues

[2.4.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.3.5]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.4]

- Bug Fixes
  - Fixed the txData from void * to const void * in transmit API

[2.3.3]

- Bugfixes
  - Fixed cs-continuous mode.

[2.3.2]

- Improvements
  - Changed FLEXIO_SPI_DUMMYDATA to 0x00.

[2.3.1]

- Bugfixes
  - Fixed IRQ SHIFTBUF overrun issue when one FLEXIO instance used as multiple SPIs.

[2.3.0]

- New Features
  - Supported FLEXIO_SPI slave transfer with continuous master CS signal and CPHA=0.
  - Supported FLEXIO_SPI master transfer with continuous CS signal.
  - Support 32 bit transfer width.
- Bug Fixes
  - Fixed wrong timer compare configuration for dma/edma transfer.
  - Fixed wrong byte order of rx data if transfer width is 16 bit, since the we use shifter buffer bit swapped/byte swapped register to read in received data, so the high byte should be read from the high bits of the register when MSB.

[2.2.1]

- Bug Fixes
  - Fixed bug in FLEXIO_SPI_MasterTransferAbortEDMA that when aborting EDMA transfer EDMA_AbortTransfer should be used rather than EDMA_StopTransfer.

[2.2.0]

- Improvements
  - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
  - Fixed MISRA 10.4 issues.
  - Added codes in FLEXIO_SPI_MasterTransferCreateHandle and FLEXIO_SPI_SlaveTransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.1.3]

- Improvements
  - Unified component full name to FLEXIO SPI(DMA/EDMA) Driver.
- Bug Fixes
  - Fixed MISRA issues
    * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.2]

- Bug Fixes
  - The following modification support FlexIO using multiple instances:
    * Removed FLEXIO_Reset API in module Init APIs.
    * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
    * Updated module Enable APIs to only support enable operation.

[2.1.1]

- Bug Fixes
  - Fixed bug where FLEXIO SPI transfer data is in 16 bit per frame mode with eDMA.
  - Fixed bug when FLEXIO SPI works in eDMA and interrupt mode with 16-bit per frame and Lsbfirst.
  - Fixed the Dozen mode configuration error in FLEXIO_SPI_MasterInit/FLEXIO_SPI_SlaveInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
- Improvements
  - Added #ifndef/#endif to allow users to change the default TX value at compile time.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added transferSize in handle structure to record the transfer size.
- Bug Fixes
  - Fixed the error register address return for 16-bit data write in FLEXIO_SPI_GetTxDataRegisterAddress.
  - Provided independent IRQHandler/transfer APIs for Master and slave to fix the baudrate limit issue.

FLEXIO_UART

[2.6.4]

- Improvements
  - Make UART_RETRY_TIMES configurable by CONFIG_UART_RETRY_TIMES.

[2.6.3]

- Bug Fixes
  - Fixed coverity issues

[2.6.2]

- Bug Fixes
  - Fixed coverity issues

[2.6.1]

- Improvements
  - Improve baudrate calculation method, to support higher frequency FlexIO clock source.

[2.6.0]

- Improvements
  - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
  - Added API FLEXIO_UART_FlushShifters to flush UART fifo.

[2.4.0]

- Improvements
  - Use separate data for TX and RX in flexio_uart_transfer_t.
- Bug Fixes
  - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling FLEXIO_UART_TransferReceiveNonBlocking, the received data count returned by FLEXIO_UART_TransferGetReceiveCount is wrong.

[2.3.0]

- Improvements
  - Added check for baud rate's accuracy that returns kStatus_FLEXIO_UART_BaudrateNotSupport when the best achieved baud rate is not within 3% error of configured baud rate.
- Bug Fixes
  - Added codes in FLEXIO_UART_TransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.2.0]

- Improvements
  - Added timeout mechanism when waiting for certain states in transfer driver.
- Bug Fixes
  - Fixed MISRA 10.4 issues.

[2.1.6]

- Bug Fixes
  - Fixed IAR Pa082 warnings.
  - Fixed MISRA issues
    - Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.5]

- Improvements
  - Triggered user callback after all the data in ringbuffer were received in FLEXIO_UART_TransferReceiveNonBlocking.

[2.1.4]

- Improvements
  - Unified component full name to FLEXIO UART(DMA/EDMA) Driver.

[2.1.3]

- Bug Fixes
  - The following modifications support FLEXIO using multiple instances:
    - Removed FLEXIO_Reset API in module Init APIs.
    - Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
    - Updated module Enable APIs to only support enable operation.

[2.1.2]

- Bug Fixes
  - Fixed the transfer count calculation issue in FLEXIO_UART_TransferGetReceiveCount, FLEXIO_UART_TransferGetSendCount, FLEXIO_UART_TransferGetReceiveCountDMA, FLEXIO_UART_TransferGetSendCountDMA, FLEXIO_UART_TransferGetReceiveCountEDMA and FLEXIO_UART_TransferGetSendCountEDMA.
  - Fixed the Dozen mode configuration error in FLEXIO_UART_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
  - Added code to report errors if the user sets a too-low-baudrate which FLEXIO cannot reach.
  - Disabled FLEXIO_UART receive interrupt instead of all NVICs when reading data from ring buffer. If ring buffer is used, receive nonblocking will disable all NVIC interrupts to protect the ring buffer. This had negative effects on other IPs using interrupt.

[2.1.1]

- Bug Fixes
  - Changed the API name FLEXIO_UART_StopRingBuffer to FLEXIO_UART_TransferStopRingBuffer to align with the definition in C file.

[2.1.0]

- New Features
  - Added Transfer prefix in transactional APIs.
  - Added txSize/rxSize in handle structure to record the transfer size.
- Bug Fixes
  - Added an error handle to handle the situation that data count is zero or data buffer is NULL.

FLEXIO_UART_EDMA

[2.3.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules.

[2.3.0]

- Refer FLEXIO_UART driver change log to 2.3.0

FLEXSPI

[2.9.0]

- New Features
  - Added FlexSPI root clock divider configuration.
- Bug Fixes
  - Add explicit boolean to integer conversions (? 1U : 0U) for all enable flags
  - Add assertions to prevent unsigned integer overflow in buffer size calculations
  - Add assertions to prevent unsigned integer underflow in watermark calculations
  - Add safe type conversion for uint32_t to uint8_t operations
  - Add bounds checking assertion for LUT index operations
  - Follow INT30-C and INT31-C CERT coding standards

[2.8.1]

- Improvements
  - Updated the LUT configuration parameter checking with flexible way to adapt different Socs.

[2.8.0]

- Bug Fixes
  - Introduced the **disableAhbReadResume** field in the flexspi_config_t structure to provide control over the AHBCR[RESUMEDISABLE] register bit.
  - Implemented a workaround for hardware erratum ERR052733 by setting the default value of **disableAhbReadResume** to **true**.
  - Fixed issue in FLEXSPI_TransferHandleIRQ where the transfer completion was incorrectly signaled despite pending read/write operations.
- New Features
  - Introduced a new function(FLEXSPI_UpdateAhbBuffersSettings) that allows users to update the AHB buffer configuration after the FLEXSPI module has been initialized

[2.7.0]

- New Features
  - Added new API to support address remapping.

[2.6.4]

- Improvements
  - Added new macro "FSL_SDK_ENABLE_FLEXSPI_RESET_CONTROL" to support driver level reset control.

[2.6.3]

- Bug Fixes
  - Fixed an issue which cause IPCR1[IPAREN] cleared by mistake.

[2.6.2]

- Bug Fixes
  - Wait Bus IDLE before operation of FLEXSPI_SoftwareReset(), FLEXSPI_TransferBlocking() and FLEXSPI_TransferNonBlocking().

[2.6.1]

- Bug Fixes
  - Updated code of reset peripheral.
  - Updated FLEXSPI_UpdateLUT() to check if input lut address is not in Flexspi AMBA region.
  - Updated FLEXSPI_Init() to check if input AHB buffer size exceeded maximum AHB size.

[2.6.0]

- New Features
  - Added new API to set AHB memory-mapped flash base address.
  - Added support of DLLxCR[REFPHASEGAP] bit field, it is recommended to set it as 0x2 if DLL calibration is enabled.

[2.5.1]

- Bugfixes
  - Fixed handling of W1C bits in the INTR register
  - Removed FIFO resets from FLEXSPI_CheckAndClearError
  - FLEXSPI_TransferBlocking is observing IPCMDDONE and then fetches the final status of the transfer
  - Fixed issue that FLEXSPI2_DriverIRQHandler not defined.

[2.5.0]

- Improvements
  - Supported word un-aligned access for write/read blocking/non-blocking API functions.
  - Fixed dead loop issue in DLL update function when using FRO clock source.
  - Fixed violations of the MISRA C-2012 Rule 10.3.

[2.4.0]

- Improvements
  - Isolated IP command parallel mode and AHB command parallel mode using feature MACRO.
  - Supported new column address shift feature for external memory.

[2.3.5]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 14.2.

[2.3.4]

- Bug Fixes
  - Updated flexspi_config_t structure and FlexSPI_Init to support new feature FSL_FEATURE_FLEXSPI_HAS_NO_MCR0_CONBINATION.

[2.3.3]

- Bug Fixes
  - Removed feature FSL_FEATURE_FLEXSPI_DQS_DELAY_PS for DLL delay setting. Changed to use feature FSL_FEATURE_FLEXSPI_DQS_DELAY_MIN to set slave delay target as 0 for DLL enable and clock frequency higher than 100MHz.

[2.3.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 8.4, 8.5, 10.1, 10.3, 10.4, 11.6 and 14.4.

[2.3.1]

- Bug Fixes
  - Wait for bus to be idle before using it as access to external flash with new setting in FLEXSPI_SetFlashConfig() API.
  - Fixed the potential buffer overread and Tx FIFO overwrite issue in FLEXSPI_WriteBlocking.

[2.3.0]

- New Features
  - Added new API FLEXSPI_UpdateDllValue for users to update DLL value after updating flexspi root clock.
  - Corrected grammatical issues for comments.
  - Added support for new feature FSL_FEATURE_FLEXSPI_DQS_DELAY_PS in DLL configuration.

[2.2.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 10.1, 10.3 and 10.4.
  - Updated _flexspi_command from named enumerator into anonymous enumerator.

[2.2.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 Rule 10.1, 10.3, 10.4, 10.8, 11.9, 14.4, 15.7, 16.4, 17.7, 7.3.
  - Fixed IAR build warning Pe167.
  - Fixed the potential buffer overwrite and Rx FIFO overread issue in FLEXSPI_ReadBlocking.

[2.2.0]

- Bug Fixes
  - Fixed flag name typos: kFLEXSPI_IpTxFifoWatermarkEmpltyFlag to kFLEXSPI_IpTxFifoWatermarkEmptyFlag; kFLEXSPI_IpCommandExcutionDoneFlag to kFLEXSPI_IpCommandExecutionDoneFlag.
  - Fixed comments typos such as sequencen->sequence, levle->level.
  - Fixed FLSHCR2[ARDSEQID] field clean issue.
  - Updated flexspi_config_t structure and FlexSPI_Init to support new feature FSL_FEATURE_FLEXSPI_HAS_NO_MCR0_ATDFEN and FSL_FEATURE_FLEXSPI_HAS_NO_MCR0_ARDFEN.
  - Updated flexspi_flags_t structure to support new feature FSL_FEATURE_FLEXSPI_HAS_INTEN_AHBBUSERROREN.

[2.1.1]

- Improvements
  - Defaulted enable prefetch for AHB RX buffer configuration in FLEXSPI_GetDefaultConfig, which is align with the reset value in AHBRXBUFxCR0.
  - Added software workaround for ERR011377 in FLEXSPI_SetFlashConfig; added some delay after DLL lock status set to ensure correct data read/write.

[2.1.0]

- New Features
  - Added new API FLEXSPI_UpdateRxSampleClock for users to update read sample clock source after initialization.
  - Added reset peripheral operation in FLEXSPI_Init if required.

[2.0.5]

- Bug Fixes
  - Fixed FLEXSPI_UpdateLUT cannot do partial update issue.

[2.0.4]

- Bug Fixes
  - Reset flash size to zero for all ports in FLEXSPI_Init; fixed the possible out-of-range flash access with no error reported.

[2.0.3]

- Bug Fixes
  - Fixed AHB receive buffer size configuration issue. The FLEXSPI_AHBRXBUFCR0_BUFSZ field should configure 64 bits size, and currently the AHB receive buffer size is in bytes which means 8-bit, so the correct configuration should be config->ahbConfig.buffer[i].bufferSize / 8.

[2.0.2]

- New Features
  - Supported DQS write mask enable/disable feature during set FLEXSPI configuration.
  - Provided new API FLEXSPI_TransferUpdateSizeEDMA for users to update eDMA transfer size(SSIZE/DSIZE) per DMA transfer.
- Bug Fixes
  - Fixed invalid operation of FLEXSPI_Init to enable AHB bus Read Access to IP RX FIFO.
  - Fixed incorrect operation of FLEXSPI_Init to configure IP TX FIFO watermark.

[2.0.1]

- Bug Fixes
  - Fixed the flag clear issue and AHB read Command index configuration issue in FLEXSPI_SetFlashConfig.
  - Updated FLEXSPI_UpdateLUT function to update LUT table from any index instead of previous command index.
  - Added bus idle wait in FLEXSPI_SetFlashConfig and FLEXSPI_UpdateLUT to ensure bus is idle before any change to FlexSPI controller.
  - Updated interrupt API FLEXSPI_TransferNonBlocking and interrupt handle flow FLEXSPI_TransferHandleIRQ.
  - Updated eDMA API FLEXSPI_TransferEDMA.

[2.0.0]

- Initial version.

FLEXSPI DMA3 Driver

[2.0.1]

- Bug Fixes
  - Correct the FSL_COMPONENT_ID used by peripheral tool.
  - Fixed FLEXSPI_TransferEDMA bug that, the DMA channel not configured correctly when using kFLEXSPI_Read.

[2.0.0]

- Initial version.

I3C

[2.14.4]

- Improvements
  - Fixed MSG violations.

[2.14.3]

- Improvements
  - Fixed Coverity CERT-C violations.
  - Used I3C_RSTS instead of I3C special feature macro.
  - Adapted the driver to support new platform.

[2.14.2]

- Improvements
  - Added timeout for ENTDAA process API.
  - Added build system macro to control the timeout setting.

[2.14.1]

- Improvements
  - Split the function I3C_MasterTransferBlocking to meet the HIS-CCM requirement.

[2.14.0]

- Improvements
  - Added the choice to set fast start header with push-pull speed when all targets addresses have MSB 0 instead of forcing to set it.
  - Deleted duplicated busy check in I3C_MasterStart function.

[2.13.1]

- Bug Fixes
  - Disabled Rx auto-termination in repeated start interrupt event while transfer API doesn't enable it.
  - Waited the completion event after loading all Tx data in Tx FIFO.
- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- New features
  - Added the hot-join support for I3C bus initialization API.
- Bug Fixes
  - Set read termination with START at the same time in case unknown issue.
  - Set MCTRL[TYPE] as 0 for DDR force exit.
- Improvements
  - Added the API to reset device count assigned by ENTDAA.
  - Provided the method to set global macro I3C_MAX_DEVCNT to determine how many device addresses ENTDAA can allocate at one time.
  - Initialized target management static array based on instance number for the case that multiple instances are used at the same time.

[2.12.0]

- Improvements
  - Added the slow clock parameter for Controller initialization function to calculate accurate timeout.
- Bug Fixes
  - Fixed the issue that BAMATCH field can't be 0. BAMATCH should be 1 for 1MHz slow clock.

[2.11.1]

- Bug Fixes
  - Fixed the issue that interrupt API transmits extra byte when subaddress and data size are null.
  - Fixed the slow clock calculation issue.

[2.11.0]

- New features
  - Added the START/ReSTART SCL delay setting for the Soc which supports this feature.
- Bug Fixes
  - Fixed the issue that ENTDAA process waits Rx pending flag which causes problem when Rx watermark isn't 0. Just check the Rx FIFO count.

[2.10.8]

- Improvements
  - Support more instances.

[2.10.7]

- Improvements
  - Fixed the potential compile warning.

[2.10.6]

- New features
  - Added the I3C private read/write with 0x7E address as start.

[2.10.5]

- New features
  - Added I3C HDR-DDR transfer support.

[2.10.4]

- Improvements
  - Added one more option for master to not set RDTERM when doing I3C Common Command Code transfer.

[2.10.3]

- Improvements
  - Masked the slave IBI/MR/HJ request functions with feature macro.

[2.10.2]

- Bug Fixes
  - Added workaround for errata ERR051617: I3C working with I2C mode creates the unintended Repeated START before actual STOP on some platforms.

[2.10.1]

- Bug Fixes
  - Fixed the issue that DAA function doesn't wait until all Rx data is read out from FIFO after master control done flag is set.
  - Fixed the issue that DAA function could return directly although the disabled interrupts are not enabled back.

[2.10.0]

- New features
  - Added I3C extended IBI data support.

[2.9.0]

- Improvements
  - Added adaptive termination for master blocking transfer. Set termination with start signal when receiving bytes less than 256.

[2.8.2]

- Improvements
  - Fixed the build warning due to armgcc strict check.

[2.8.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 17.7.

[2.8.0]

- Improvements
  - Added API I3C_MasterProcessDAASpecifiedBaudrate for temporary baud rate adjustment when I3C master assigns dynamic address.

[2.7.1]

- Bug Fixes
  - Fixed the issue that I3C slave handle STOP event before finishing data transmission.

[2.7.0]

- Fixed the CCM problem in file fsl_i3c.c.
- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in I3C_GetDefaultConfig and I3C_Init.

[2.6.0]

- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in fsl_i3c.h.
- Changed some static functions in fsl_i3c.c as non-static and define the functions in fsl_i3c.h to make I3C DMA driver reuse:
  - I3C_GetIBIType
  - I3C_GetIBIAddress
  - I3C_SlaveCheckAndClearError
- Changed the handle pointer parameter in IRQ related funtions to void * type to make it reuse in I3C DMA driver.
- Added new API I3C_SlaveRequestIBIWithSingleData for slave to request single data byte, this API could be used regardless slave is working in non-blocking interrupt or non-blocking dma.
- Added new API I3C_MasterGetDeviceListAfterDAA for master application to get the device information list built up in DAA process.

[2.5.4]

- Improved I3C driver to avoid setting state twice in the SendCommandState of I3C_RunTransferStateMachine.
- Fixed MISRA violation of rule 20.9.
- Fixed the issue that I3C_MasterEmitRequest did not use Type I3C SDR.

[2.5.3]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH and FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND.

[2.5.2]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_MERRWARN_TERM.
- Fixed the issue that call to I3C_MasterTransferBlocking API did not generate STOP signal when NAK status was returned.

[2.5.1]

- Improved the receive terminate size setting for interrupt transfer read, now it's set at beginning of transfer if the receive size is less than 256 bytes.

[2.5.0]

- Added new API I3C_MasterRepeatedStartWithRxSize to send repeated start signal with receive terminate size specified.
- Fixed the status used in I3C_RunTransferStateMachine, changed to use pending interrupts as status to be handled in the state machine.
- Fixed MISRA 2012 violation of rule 10.3, 10.7.

[2.4.0]

- Bug Fixes
  - Fixed kI3C_SlaveMatchedFlag interrupt is not properly handled in I3C_SlaveTransferHandleIRQ when it comes together with interrupt kI3C_SlaveBusStartFlag.
  - Fixed the inaccurate I2C baudrate calculation in I3C_MasterSetBaudRate.
  - Added new API I3C_MasterGetIBIRules to get registered IBI rules.
  - Added new variable isReadTerm in struct _i3c_master_handle for transfer state routine to check if MCTRL.RDTERM is configured for read transfer.
  - Changed to emit Auto IBI in transfer state routine for slave start flag assertion.
  - Fixed the slave maxWriteLength and maxReadLength does not be configured into SMAXLIMITS register issue.
  - Fixed incorrect state for IBI in I3C master interrupt transfer IRQ handle routine.
  - Added isHotJoin in i3c_slave_config_t to request hot-join event during slave init.

[2.3.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 17.7.
  - Fixed incorrect HotJoin event index in I3C_GetIBIType.

[2.3.1]

- Bug Fixes
  - Fixed the issue that call of I3C_MasterTransferBlocking/I3C_MasterTransferNonBlocking fails for the case which receive length 1 byte of data.
  - Fixed the issue that STOP signal is not sent when NAK status is detected during execution of I3C_MasterTransferBlocking function.

[2.3.0]

- Improvements
  - Added I3C common driver APIs to initialize I3C with both master and slave configuration.
  - Updated I3C master transfer callback to function set structure to include callback invoke for IBI event and slave2master event.
  - Updated I3C master non-blocking transfer model and always enable the interrupts to be able to re-act to the slave start event and handle slave IBI.

[2.2.0]

- Bug Fixes
  - Fixed the issue that I3C transfer size limit to 255 bytes.

[2.1.2]

- Bug Fixes
  - Reset default hkeep value to kI3C_MasterHighKeeperNone in I3C_MasterGetDefaultConfig

[2.1.1]

- Bug Fixes
  - Fixed incorrect FIFO reset operation in I3C Master Transfer APIs.
  - Fixed i3c slave IRQ handler issue, slave transmit could be underrun because tx FIFO is not filled in time right after start flag detected.

[2.1.0]

- Added definitions and APIs for I3C slave functionality, updated previous I3C APIs to support I3C functionality.

[2.0.0]

- Initial version.

LCDIF

[2.3.1]

- Bug Fixes
  - Fixed CERT-C violations.
  - Fixed wrong frame buffer configuration for overlay layers.

[2.3.0]

- New Features
  - Supported layer decompress mode for DC8000.

[2.2.0]

- New Features
  - Supported new layers and configurations for DC8000.
  - Added new APIs and configurations to support DBI interface.
- Bug Fixes
  - Update align calculation method, the old one can only be used when the align bytes' low bits are all zeros.

[2.1.2]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.1]

- Improvements
  - Added memory address conversion to support buffers which could only be accessed using alias address by non-core masters.
- Bug Fixes
  - Fix MISRA-C 2012 issues.

[2.1.0]

- Bug Fixes
  - Corrected the frame buffer pixel format name.

[2.0.0]

- Initial version.

LPADC

[2.9.5]

- Improvements
  - Fix doxygen issue, grouping command should be balanced.

[2.9.4]

- Improvements
  - Update LPADC_GetDefaultConfig, change default conversionAverageMode value to: kLPADC_ConversionAverage128 for 3 bit width. kLPADC_ConversionAverage1024 for 4 bit width.

[2.9.3]

- Improvements
  - Add timeout for while loop code.

[2.9.2]

- Improvements
  - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
  - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
  - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
  - Split LPADC_FinishAutoCalibration function into two functions.
  - Improved LPADC driver.

[2.8.4]

- Bug Fixes
  - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
  - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
  - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
  - Release peripheral from reset if necessary in init function.
- Bug Fixes
  - Fixed function LPADC_GetConvResult() issue.
  - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
  - Use feature macros instead of header file macros.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
  - Corrected descriptions of several functions.
  - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
  - Revert changes of feature macros for lpadc.
  - Use feature macros instead of header file macros.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rule 10.8.
  - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
  - Added supports of CFG2 register.
  - Removed some useless macros.

[2.6.2]

- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules.
  - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
  - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
  - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
  - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
  - Added API to set offset calibration mode.
  - Added configuration of alternate channel.
  - Updated auto calibration API and added calibration value conversion API.
- New feature
  - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
  - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
  - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
  - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
  - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
  - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
  - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
  - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
  - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
  - Clean doxygen warnings.
- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
  - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
  - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
  - Fixed the violations of MISRA C-2012 rules:
    - Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
  - Updated the gain calibration formula.
  - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
  - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
  - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
  - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
  - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
  - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.

LPI2C

[2.6.4]

- Bug Fixes
  - Limited value of filtSda in LPI2C_MasterSetBaudRate().
  - Updated LPI2C_MasterStop() and LPI2C_MasterTransferBlocking() to send I2C STOP also in case of error.
  - Removed unused flag kLPI2C_TransferRepeatedStartFlag.

[2.6.3]

- Bug Fixes
  - Fixed static analysis identified issues.

[2.6.2]

- Improvements
  - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
  - Fixed coverity issues.

[2.6.0]

- New Feature
  - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
  - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
  - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
  - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
  - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
  - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
  - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
  - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
  - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
  - Before master transfer with transactional APIs, enable master function while disable slave function and vise versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
  - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
  - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
  - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
  - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
  - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.
  - Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
  - Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
  - Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
  - Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features
  - Supported reading more than 256 bytes of data in one transfer as master.
  - Added API LPI2C_GetInstance.
- Bug Fixes
  - Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.
  - Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
  - Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be 2^prescaler rather than prescaler.
  - Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
  - Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes
  - Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
  - MISRA C-2012 issue fixed.
    - Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes
  - Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
  - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the kLPI2C_MasterNackDetectFlag is expected, so master should not check and clear kLPI2C_MasterNackDetectFlag when remainingBytes is zero, in case FIFO is emptied when stop command has not been sent yet.
  - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed rule 10.3, 14.4, 15.5.
  - Fixed unaligned access issue in LPI2C_RunTransferStateMachine.
  - Fixed uninitialized variable issue in LPI2C_MasterTransferHandleIRQ.
  - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
  - Fixed MISRA issues.
    - Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
  - Fixed the waitTimes variable not re-assignment issue for each byte read.
- New Features
  - Added the IRQHandler for LPI2C5 and LPI2C6 instances.
- Improvements
  - Updated the LPI2C_WAIT_TIMEOUT macro to unified name I2C_RETRY_TIMES.

[2.1.9]

- Bug Fixes
  - Fixed Coverity issue of unchecked return value in I2C_RTOS_Transfer.
  - Fixed Coverity issue of operands did not affect the result in LPI2C_SlaveReceive and LPI2C_SlaveSend.
  - Removed STOP signal wait when NAK detected.
  - Cleared slave repeat start flag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
  - Fixed the transfer issue with LPI2C_MasterTransferNonBlocking, kLPI2C_TransferNoStopFlag, with the wait transfer done through callback in a way of not doing a blocking transfer.
  - Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
  - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
  - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
  - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
  - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
  - Extended the Driver IRQ handler to support LPI2C4.
  - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
  - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
  - Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
  - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
  - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
  - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes

  - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccesful sending of the start flag, so the transfer could not start.
  - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
  - API name changed:
    * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.
    * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
    * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
    * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
    * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
    * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
    * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
    * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.

LPI2C_EDMA

[2.4.7]

- Bug Fixes
  - Fixed incorrect TX FIFO size (maxTxFifo) in LPI2C_MasterTransferEDMA() and LPI2C_MasterTransferEdmaHandleIRQ().

[2.4.6]

- Bug Fixes
  - Fixed static analysis identified issues.

[2.4.5]

- Improvements
  - Added condition to IRQ handler to check whether the interrupt is enabled - kLPI2C_MasterTxReadyFlag.

[2.4.4]

- Improvements
  - Added support for 2KB data transfer

[2.4.3]

- Improvements
  - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1

LPIT

[2.1.3]

- Bug Fixes
  - Fixed doxygen generation warnings.

[2.1.2]

- Bug Fixes
  - Fix CERT INT31-C issues.

[2.1.1]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.0]

- Improvements
  - Add new function LPIT_SetTimerValue to set timeout period.

[2.0.2]

- Improvements
  - Improved LPIT_SetTimerPeriod implementation, configure timeout value with LPIT ticks minus 1 generate more correct interval.
  - Added timeout value configuration check for LPIT_SetTimerPeriod, at least input 3 ticks for calling LPIT_SetTimerPeriod.
- Bug Fixes
  - Fixed MISRA C-2012 rule 17.7 violations.

[2.0.1]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.0]

- Initial version.

LPSPI

[2.7.4]

- Bug Fixes
  - Clear WIDTH bits from the TCR register before writing a new value in LPSPI_MasterTransferBlocking().

[2.7.3]

- Improvements
  - Added timeout for while loop in LPSPI_MasterTransferWriteAllTxData().
  - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
  - Fixed coverity issues.

[2.7.1]

- Bug Fixes
  - Workaround for errata ERR050607
  - Workaround for errata ERR010655

[2.7.0]

- New Feature
  - Added common IRQ handler entry LPSPI_DriverIRQHandler.

[2.6.10]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
  - Fixed reading of TCR register
  - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
  - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
  - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
  - Added LPSPI register init in LPSPI_MasterInit incase of LPSPI register exist.

[2.6.5]

- Improvements
  - Introduced FSL_FEATURE_LPSPI_HAS_NO_PCSCFG and FSL_FEATURE_LPSPI_HAS_NO_MULTI_WIDTH for conditional compile.
  - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
  - Added LPSPI6_DriverIRQHandler for LPSPI6 instance.

[2.6.3]

- Hot Fixes
  - Added macro switch in function LPSPI_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
  - Disabled lpspi before LPSPI_MasterSetBaudRate incase of LPSPI opened.

[2.6.1]

- Bug Fixes
  - Fixed return value while calling LPSPI_WaitTxFifoEmpty in function LPSPI_MasterTransferNonBlocking.

[2.6.0]

- Feature
  - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
  - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
  - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
  - Workaround for errata ERR050456 by resetting the entire module using LPSPIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
  - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
  - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
  - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
  - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
  - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
  - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
  - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
  - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
  - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
  - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
  - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
  - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
  - Fixed bug in LPSPI_SetPCSContinous when disabling PCS continous mode.

[2.2.0]

- Bug Fixes
  - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continous mode is not working.

[2.1.0]

- Improvements
  - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
  - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinous to support changing PCS selection and PCS continous mode.
- Bug Fixes
  - Fixed bug in non-blocking and EDMA transfer APIs that kStatus_InvalidArgument is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to kLPSPI_Busy by mistake causing following transfer can not start.
  - Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
  - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
  - Fixed the bug that LPSPI can not transfer large data using EDMA.
  - Fixed MISRA 17.7 issues.
  - Fixed variable overflow issue introduced by MISRA fix.
  - Fixed issue that rxFifoMaxBytes should be calculated according to transfer width rather than FIFO width.
  - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
  - Fixed in LPSPI_MasterTransferBlocking that master rxfifo may overflow in stall condition.
  - Eliminated IAR Pa082 warnings.
  - Fixed MISRA issues.
    - Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
  - Removed LPSPI_Reset from LPSPI_MasterInit and LPSPI_SlaveInit, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
  - Added dummy data set up API to allow users to configure the dummy data to be transferred.
  - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
  - Fixed the bug that the clock source should be divided by the PRESCALE setting in LPSPI_MasterSetDelayTimes function.
  - Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
  - Added #ifndef/#endif to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.

LPSPI_EDMA

[2.4.9]

- Improvements
  - Removed unused code from LPSPI_SeparateEdmaReadData().

[2.4.8]

- Improvements
  - Added timeout for while loop in EDMA_LpspiMasterCallback() and EDMA_LpspiSlaveCallback().

[2.4.7]

- Bug Fixes
  - Add macro LPSPI_ALIGN_TCD_SIZE_MASK to align an address to edma_tcd_t size.

[2.4.6]

- Improvements
  - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
  - Fixed reading of TCR register
  - Workaround for errata ERR050606

[2.4.4]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
  - Supported 32K bytes transmit in DMA, improve the max datasize in LPSPI_MasterTransferEDMALite.

[2.4.2]

- Improvements
  - Added callback status in EDMA_LpspiMasterCallback and EDMA_LpspiSlaveCallback to check transferDone.

[2.4.1]

- Improvements
  - Add the TXMSK wait after TCR setting.

[2.4.0]

- Improvements
  - Separated LPSPI_MasterTransferEDMA functions to LPSPI_MasterTransferPrepareEDMA and LPSPI_MasterTransferEDMALite to optimize the process of transfer.

LPTMR

[2.2.1]

- Bug Fixes
  - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
  - Updated lptmr_prescaler_clock_select_t, only define the valid options.

[2.1.1]

- Improvements
  - Updated the characters from “PTMR” to “LPTMR” in “FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT” feature definition.

[2.1.0]

- Improvements
  - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
  - Fixed issue when accessing CMR register.

[2.0.2]

- Bug Fixes
  - Fixed MISRA-2012 issues.
    - Rule 10.1.

[2.0.1]

- Improvements
  - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.

LPUART

[2.11.0]

- New Feature
  - Added support to enable transmitter RTS and configure transmitter RTS polarity.
  - Added support to enable Transmit Data Inversion.
- Improvements
  - Updated to work on DSC platform.

[2.10.0]

- New Feature
  - Added support to configure RTS watermark.

[2.9.4]

- Improvements
  - Merged duplicate code.

[2.9.3]

- Improvements
  - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
  - Fixed coverity issues.

[2.9.1]

- Bug Fixes
  - Fixed coverity issues.

[2.9.0]

- New Feature
  - Added support for swap TXD and RXD pins.
  - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
  - Fixed the bug that LPUART_TransferEnable16Bit controled by wrong feature macro.

[2.8.1]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
  - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
  - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
  - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
  - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
  - Fixed the bug that the OSR calculation error when lupart init and lpuart set baud rate.

[2.7.1]

- Improvements
  - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
  - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
  - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
  - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
  - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
  - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
  - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
  - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
  - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
  - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.
  - Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
  - Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
  - Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
  - Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
  - Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
  - Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
  - Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
  - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
  - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
  - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
  - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
  - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
  - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
  - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
  - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-10.3, rule-14.4, rule-15.5.
  - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
  - Fixed MISRA issues.
    - Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
  - Added check for kLPUART_TransmissionCompleteFlag in LPUART_WriteBlocking, LPUART_TransferHandleIRQ, LPUART_TransferSendDMACallback and LPUART_SendEDMACallback to ensure all the data would be sent out to bus.
  - Rounded up the calculated sbr value in LPUART_SetBaudRate and LPUART_Init to achieve more acurate baudrate setting. Changed osr from uint32_t to uint8_t since osr's bigest value is 31.
  - Modified LPUART_ReadBlocking so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
  - Fixed issue for MISRA-2012 check.
    - Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
  - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
  - Do not set or clear the TIE/RIE bits when using LPUART_EnableTxDMA and LPUART_EnableRxDMA.

[2.2.4]

- Improvements
  - Added hardware flow control function support.
  - Added idle-line-detecting feature in LPUART_TransferNonBlocking function. If an idle line is detected, a callback is triggered with status kStatus_LPUART_IdleLineDetected returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.
  - Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
  - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
  - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may has a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
  - Added software reset feature support.
  - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
  - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
  - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
  - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
  - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
  - Update transactional APIs.

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0

MCM

[2.2.0]

- Improvements
  - Support platforms with less features.

[2.1.0]

- Others
  - Remove byteID from mcm_lmem_fault_attribute_t for document update.

[2.0.0]

- Initial version.

MIPI_DSI

[2.3.0]

- Bug Fixes
  - Fixed typo in member of dsi_transfer_t structure. The sendDscCmd and dscCmd shall be sendDcsCmd and dcsCmd.

[2.2.2]

- Bug Fixes
  - Fixed CERT-C violations.

[2.2.1]

- Bug Fixes
  - Fixed issue that VACTIVE setting shall equal to the number of active lines (height), no need to minus 1.
- Improvements
  - Update DSI_Deinit to reset peripheral.
  - Update DSI_DeinitDphy to power down DPHY using DPHY_PD_REG before powering down PLL.

[2.2.0]

- New Features
  - Added APIs to configure DBI FIFO and payload.
  - Supported new controls and configurations of DBI pixel format, PHY ready and ULPS for RT700.
  - Updated the DPI setting to use float for coefficient value for more accurate calculation.

[2.1.6]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.1.5]

- Other Changes
  - Changed to use new register naming.
  - Added workaround for Errata ERR011439. Avoid DCS long packet command writes with zero-length data payload in low-power mode, because the checksum is incorrect in this case.

[2.1.4]

- Bug Fixes
  - Fixed the MISRA issues.

[2.1.3]

- Bug Fixes
  - Fixed the DPI horizontal timing setting issue.

[2.1.2]

- Improvements
  - Supported long package read.
- Bug Fixes
  - Fixed the bug that runs to hardfault when sending long packet with 4-byte unaligned address.

[2.1.1]

- Improvements
  - Some SOC compatibility improvement.

[2.1.0]

- Improvements
  - Improved for the platforms which does not support ULPS.

[2.0.6]

- Bug Fixes
  - Fixed the timing issue that non-continuous HS clock mode does not work.

[2.0.5]

- Bug Fixes
  - Fixed kDSI_InterruptGroup1BtaTo and kDSI_InterruptGroup1HtxTo definition error.
- Improvements
  - Changed to override MIPI_DriverIRQHandler instead of MIPI_IRQHandler.

[2.0.4]

- Bug Fixes
  - Fixed MISRA C-2012 issues: 10.1, 10.3, 10.4, 10.4, 10.6, 10.7, 10.8, 11.3, 11.8, 12.2, 14.4, 16.4, 17.7.

[2.0.3]

- Improvement
  - Updated for combo phy header file.

[2.0.2]

- New Features
  - Supported sending separate DSI command from TX data array.
- Bug Fixes
  - Disabled all interrupts in DSI_Init.

[2.0.1]

- Improvements
  - Updated to support the DPHY which does not have internal DPHY PLL.

[2.0.0]

- Initial version.

MRT

[2.0.5]

- Bug Fixes
  - Fixed CERT INT31-C violations.

[2.0.4]

- Improvements
  - Don't reset MRT when there is not system level MRT reset functions.

[2.0.3]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1 and 10.4.
  - Fixed the wrong count value assertion in MRT_StartTimer API.

[2.0.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4.

[2.0.1]

- Added control macro to enable/disable the RESET and CLOCK code in current driver.

[2.0.0]

- Initial version.

MU

[2.8.4]

- Improvements
  - Minor update to allow use in DSC projects.

[2.8.3]

- Improvements
  - Fix build failure when driver clock control disabled.
  - Make MU_GetInstance() static function

[2.8.2]

- Improvements
  - Fix MISRA C-2012 Rule 20.8 violations.

[2.8.1]

- Bug Fixes
  - Avoid incorrect MU_BUSY_POLL_COUNT macro use.

[2.8.0]

- New Features
  - Added MU1_BUSY_POLL_COUNT parameter to prevent infinite polling loops in MU operations.
  - Added timeout mechanism to all polling loops in MU driver code.
- Improvements
  - Updated function signatures to return status codes for better error handling:
    - Changed MU_ResetBothSides to return status_t instead of void
    - Updated MU_SendMsg to return status_t for timeout indication
    - Added new function MU_ReceiveMsgTimeout() to include timeout mechanism.
  - Enhanced documentation across all functions to clarify timeout behavior and return values.

[2.7.0]

- New Features
  - Added API MU_GetRxStatusFlags.

[2.6.0]

- New Features
  - Added API MU_GetInterruptsPending.

[2.5.1]

- Bug Fixes
  - Fixed the bug that MU_TriggerGeneralPurposeInterrupts and MU_TriggerInterrupts may trigger previous triggered general purpose interrupts again by mistake.

[2.5.0]

- New Features
  - Supported more than 4 general purpose interrupts.
  - Added seperate APIs for general purpose interrupts.

[2.4.0]

- Improvements
  - Supported the case that some features only avaiable with specific instances. These features include Hardware Reset, Boot Peer Core, Hold Reset. When using the features with instances which don't support them, driver will report error.

[2.3.3]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.3.2]

- Improvements
  - Supported platforms which don't have CCR0[RSTH], CCR0[CLKE], CCR0[HR], CCR0[HRM].

[2.3.1]

- Bug Fixes
  - Fixed build error for platforms which have CCR0[RSTH], but no CCR0[NMI].

[2.3.0]

- New features
  - Added support for i.MX RT7xx.

[2.2.1]

- Bug Fixes
  - Fixed issue that MU_GetInstance() is defined but never used.

[2.2.0]

- New features
  - Added support for i.MX RT118x.
- Bug Fixes
  - Fixed general purpose interrupt bug.
- Other Changes
  - Change _mu_interrupt_trigger item value.

[2.1.2]

- Bug Fixes
  - Fixed bug that general purpose interrupt can't be configured.

[2.1.1]

- Bug Fixes
  - Fixed MISRA C-2012 issues.

[2.1.0]

- Improvements
  - Added new enum mu_msg_reg_index_t.

[2.0.0]

- Initial version.

PDM

[2.9.4]

- Improvements
  - support multiple IRQ handlers

[2.9.3]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.9.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.9.1]

- Bug Fixes
  - Fixed the issue that the driver still enters the interrupt after disabling clock.

[2.9.0]

- Improvements
- Added feature FSL_FEATURE_PDM_HAS_DECIMATION_FILTER_BYPASS to config CTRL_2[DEC_BYPASS] field.
- Modify code to make the OSR value is not limited to 16.

[2.8.1]

- Improvements
- Added feature FSL_FEATURE_PDM_HAS_NO_DOZEN to handle nonexistent CTRL_1[DOZEN] field.

[2.8.0]

- Improvements
- Added feature FSL_FEATURE_PDM_HAS_NO_HWVAD to remove the support of hadware voice activity detector.
- Added feature FSL_FEATURE_PDM_HAS_NO_FILTER_BUFFER to remove the support of FIR_RDY bitfield in STAT register.

[2.7.4]

- Bug Fixes
  - Fixed driver can not determine the specific float number of clock divider.
  - Fixed PDM_ValidateSrcClockRate calculates PDM channel in wrong method issue.

[2.7.3]

- Improvements
- Added feature FSL_FEATURE_PDM_HAS_NO_VADEF to remove the support of VADEF bit-field in VAD0_STAT register.

[2.7.2]

- Improvements
- Added feature FSL_FEATURE_PDM_HAS_NO_MINIMUM_CLKDIV to decide whether the minimum clock frequency division is required.

[2.7.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 10.3, 10.1, 10.4, 14.4

[2.7.0]

- Improvements
  - Added api PDM_EnableHwvadInterruptCallback to support handle hwvad IRQ in PDM driver.
  - Corrected the sample rate configuration for non high quality mode.
  - Added api PDM_SetChannelGain to support adjust the channel gain.

[2.6.0]

- Improvements
  - Added new features FSL_FEATURE_PDM_HAS_STATUS_LOW_FREQ/FSL_FEATURE_PDM_HAS_DC_OUT

[2.5.0]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 16.5, 10.4, 10.3, 10.1, 11.9, 17.7, 10.6, 14.4, 11.8, 11.6.

[2.4.1]

- Bug Fixes
  - Fixed MDK 66-D warning in pdm driver.

[2.4.0]

- Improvements
  - Added api PDM_TransferSetChannelConfig/PDM_ReadFifo to support read different width data.
  - Added feature FSL_FEATURE_PDM_HAS_RANGE_CTRL and api PDM_ClearRangeStatus/PDM_GetRangeStatus for range register.
- Bug Fixes
  - Fixed violation of MISRA C-2012 Rule 14.4, 10.3, 10.4.

[2.3.0]

- Improvements
  - Enabled envelope/energy voice detect mode by adding apis PDM_SetHwvadInEnvelopeBasedMode/PDM_SetHwvadInEnergyBasedMode.
  - Added feature FSL_FEATURE_PDM_CHANNEL_NUM for different SOC.

[2.2.1]

- Bug Fixes
  - Fixed violation of MISRA C-2012 Rule 10.1, 10.3, 10.4, 10.6, 10.7, 11.3, 11.8, 14.4, 17.7, 18.4.
  - Added medium quality mode support in function PDM_SetSampleRateConfig.

[2.2.0]

- Improvements
  - Added api PDM_SetSampleRateConfig to improve user experience and marked api PDM_SetSampleRate as deprecated.

[2.1.1]

- Improvements
- Used new SDMA API SDMA_SetDoneConfig instead of SDMA_EnableSwDone for PDM SDMA driver.

[2.1.0]

- Improvements
  - Added software buffer queue for transactional API.

[2.0.1]

- Improvements
  - Improved HWVAD feature.

[2.0.0]

- Initial version.

PDM_EDMA

[2.6.5]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8.

[2.6.4]

- Improvements
  - Add handling for runtime change of number of linked transfers

[2.6.3]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.6.2]

- Improvements
  - Add macro MCUX_SDK_PDM_EDMA_PDM_ENABLE_INTERNAL to let the user decide whether to enable it when calling PDM_TransferReceiveEDMA.

[2.6.1]

- Bug Fixes
  - Fixed violation of MISRA C-2012 Rule 10.3, 10.4.

[2.6.0]

- Improvements
  - Updated api PDM_TransferReceiveEDMA to support channel block interleave transfer.
  - Added new api PDM_TransferSetMultiChannelInterleaveType to support channel interleave type configurations.

[2.5.0]

- Refer PDM driver change log 2.1.0 to 2.5.0

POWERQUAD

[2.2.1]

- Bug Fixes
  - Fixed CERT-C issues.

[2.2.0]

- New Features
  - Added new API PQ_Arctan2Fixed.

[2.1.1]

- Bug Fixes
  - Remove PQ_WaitDone from PQ_ArctanFixed and PQ_ArctanhFixed because it is unnecessary.

[2.1.0]

- Improvements
  - Fixed typo issue for biquad related function name.
  - Changed operator from “%” into “&” to reduce heavy cycle for biquad functions.

[2.0.5]

- Improvements
  - Added a note in driver for FIR that powerquad has a hardware limitation, when using it for FIR increment calculation, the address of pSrc needs to be a continuous address.

[2.0.4]

- Improvements
  - Supported the platforms which don't have PowerQuad clock and reset control.

[2.0.3]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 8.4, 10.1, 10.3, 10.4, 10.6, and so on.

[2.0.2]

- Bug Fixes
  - Fixed array size issue in fsl_powerquad_data.h file.
  - Fixed vector function pipeline issue.

[2.0.1]

- Bug Fixes
  - Fixed build error in C++ mode.

[2.0.0]

- Initial version.

POWERQUAD_CMSIS

[2.1.0]

- Improvements
  - Support use different API name, to work together with CMSIS DSP software implementation.

[2.0.4]

- Inherit the SDK 2.0 driver.

PXP

[2.7.0]

- New Features
  - Added the PS_LRC setting for V4.
  - Added the PXP_SetPath setting for V4.
  - Fixed the code logic, V4 do not support DATA_PATH_CTRL1.

[2.6.1]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.6.0]

- Bug Fixes
  - Added missing configuration option for fetch engine background value.
  - Fixed bug in PXP_SetStoreEngineConfig that the address increment for store mask is not linear.
  - Added channel aribitration configuration for fetch engine, channel combine for store engine.
  - Fixed wrong method of obtaining the store mask address.
  - Fixed wrong method of configuring flag shift mask/width which can only be written in word boundary.
  - Fixed wrong configurations of block store and pitch in PXP_SetStoreEngineConfig.
  - Fixed wrong method of obtaining cfaValue address and calculating word count.
  - Fixed the channel word order cannot be updated when configuring the second channel.
  - Fixed bugs in PXP_SetHistogramConfig of wrong method to obtain the store mask address and wrong access of 32-bit registers.

[2.5.0]

- New Features
  - Added new API PXP_GetPorterDuffConfigExt for flexible Porter-Duff configuration.
  - Added enumerations for new AS/PS pixel formats for certain SoCs.

[2.4.1]

- New Features
  - Added API PXP_ResetControl to reset the PXP and the control register to initialized state.

[2.4.0]

- New Features
  - Added the API PXP_BuildRect of building a solid rectangle of given pixel value.
  - Added the interrupt enable/disable and status mask for V3.
  - Added API PXP_EnableProcessEngine to enable/disable process engines for V3.
  - Added API PXP_SetHistogramSize to re-configure the histogram size for each update.
  - Updated PXP_WfeaInit and PXP_SetWfeaConfig according to header file's update of WFE related registers.
  - Updated PXP_WfeaInit to support handshake with upstream dither store engine and added API PXP_WfeaEnableDitherHandshake to enable/disable the feature.
  - Added API PXP_GetLutUsage to get the occupied LUT list.

  - Updated APIs to support alpha blending engine1.
  - Added the API PXP_MemCopy to support all memory size copy.
- Bug Fixes
  - Fixed wrong naming for mux16.
  - Fixed wrong naming for enumerations in pxp_scanline_burst_t.
  - Fixed bug in PXP_GetHistogramMatchResult since there are 2 histograms engines rather than 1.
  - Fixed bug in PXP_SetFetchEngineConfig that the fetch size should not be minus one coding.

[2.3.0]

- New Features
  - Added the configuration of fetch engine, store engine, pre-dither engine and histogram block.

[2.2.2]

- Improvements
  - Disable alpha surface (AS) in PXP_Init.

[2.2.1]

- Improvements
  - Added memory address conversion to support buffers which could only be accessed using alias address by non-core masters.

[2.2.0]

- Bug Fixes
  - Fixed Porter Duff configuration error.

[2.1.0]

- New Features
  - Added Porter Duff support.
  - Added APIs PXP_StartMemCopy and PXP_StartPictureCopy.
  - Added API PXP_SetProcessSurfaceYUVFormat.

[2.0.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 3.1, 10.8, 11.6, 12.2.

[2.0.1]

- Bug Fixes
  - Fixed the rotate function issue for i.MX 6ULL.

[2.0.0]

- Initial version.

RGPIO

[2.2.0]

- Added RGPIO_GetPinDirection() API to get the current direction of a RGPIO pin.
- Added FGPIO_GetPinDirection() API to get the current direction of a FGPIO pin.

[2.1.0]

- New feature:
  - Added API RGPIO_EnablePortInput()
  - Added API RGPIO_SetPinInterruptConfig()
  - Added API RGPIO_GetPinsInterruptFlags()
  - Added API RGPIO_ClearPinsInterruptFlags()

[2.0.3]

- Improvements:
  - Enhanced FGPIO_PinInit to enable clock internally.

[2.0.2]

- Bug fix
  - MISRA C-2012 issue fixed.
    - Fix rules, containing: rule-10.3, rule-14.4, rule-15.5.

[2.0.1]

- API Interface Change:
  - Refined naming of API while keep all original APIs with marking them as deprecated. The original API will be removed in the next release. The main change is to update API with prefix of _PinXXX() and _PortXXX().

[2.0.0]

- Initial version.

RTD_CMC

[2.0.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.1]

- Fix compile failure of RTDCMC_LockPowerModeProtectionSetting().

[2.0.0]

- Initial version.

SAI

[2.4.11]

- Bug Fixes
  - Fixed MSG findings for platforms with multiple FIFO size support.

[2.4.10]

- Improvements
  - Allow enabling/disabling implicit channel configuration.
  - Allow NULL FIFO watermark.
- Bug Fixes
  - Fix compilation warnings when asserts are disabled

[2.4.9]

- Added Errata ERR051421 workaround.

[2.4.8]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.7]

- Added conditional support for bit clock swap feature
- Added common IRQ handler entry SAI_DriverIRQHandler.

[2.4.6]

- Bug Fixes
  - Fixed the IAR build warning.

[2.4.5]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.4.4]

- Bug Fixes
  - Fixed enumeration sai_fifo_combine_t - add RX configuration.

[2.4.3]

- Bug Fixes
  - Fixed enumeration sai_fifo_combine_t value configuration issue.

[2.4.2]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.4.1]

- Bug Fixes
  - Fixed bitWidth incorrectly assigned issue.

[2.4.0]

- Improvements
  - Removed deprecated APIs.

[2.3.8]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4.

[2.3.7]

- Improvements
  - Change feature “FSL_FEATURE_SAI_FIFO_COUNT” to “FSL_FEATURE_SAI_HAS_FIFO”.
  - Added feature “FSL_FEATURE_SAI_FIFO_COUNTn(x)” to align SAI fifo count function with IP in function

[2.3.6]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 5.6.

[2.3.5]

- Improvements
  - Make driver to be aarch64 compatible.

[2.3.4]

- Bug Fixes
  - Corrected the fifo combine feature macro used in driver.

[2.3.3]

- Bug Fixes
  - Added bit clock polarity configuration when sai act as slave.
  - Fixed out of bound access coverity issue.
  - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.3.2]

- Bug Fixes
  - Corrected the frame sync configuration when sai act as slave.

[2.3.1]

- Bug Fixes
  - Corrected the peripheral name in function SAI0_DriverIRQHandler.
  - Fixed violations of MISRA C-2012 rule 17.7.

[2.3.0]

- Bug Fixes
  - Fixed the build error caused by the SOC has no fifo feature.

[2.2.3]

- Bug Fixes
  - Corrected the peripheral name in function SAI0_DriverIRQHandler.

[2.2.2]

- Bug Fixes
  - Fixed the issue of MISRA 2004 rule 9.3.
  - Fixed sign-compare warning.
  - Fixed the PA082 build warning.
  - Fixed sign-compare warning.
  - Fixed violations of MISRA C-2012 rule 10.3,17.7,10.4,8.4,10.7,10.8,14.4,17.7,11.6,10.1,10.6,8.4,14.3,16.4,18
  - Allow to reset Rx or Tx FIFO pointers only when Rx or Tx is disabled.
- Improvements
  - Added 24bit raw audio data width support in sai sdma driver.
  - Disabled the interrupt/DMA request in the SAI_Init to avoid generates unexpected sai FIFO requests.

[2.2.1]

- Improvements
  - Added mclk post divider support in function SAI_SetMasterClockDivider.
  - Removed useless configuration code in SAI_RxSetSerialDataConfig.
- Bug Fixes
  - Fixed the SAI SDMA driver build issue caused by the wrong structure member name used in the function SAI_TransferRxSetConfigSDMA/SAI_TransferTxSetConfigSDMA.
  - Fixed BAD BIT SHIFT OPERATION issue caused by the FSL_FEATURE_SAI_CHANNEL_COUNTn.
  - Applied ERR05144: not set FCONT = 1 when TMR > 0, otherwise the TX may not work.

[2.2.0]

- Improvements
  - Added new APIs for parameters collection and simplified user interfaces:
    - SAI_Init
    - SAI_SetMasterClockConfig
    - SAI_TxSetBitClockRate
    - SAI_TxSetSerialDataConfig
    - SAI_TxSetFrameSyncConfig
    - SAI_TxSetFifoConfig
    - SAI_TxSetBitclockConfig
    - SAI_TxSetConfig
    - SAI_TxSetTransferConfig
    - SAI_RxSetBitClockRate
    - SAI_RxSetSerialDataConfig
    - SAI_RxSetFrameSyncConfig
    - SAI_RxSetFifoConfig
    - SAI_RxSetBitclockConfig
    - SAI_RXSetConfig
    - SAI_RxSetTransferConfig
    - SAI_GetClassicI2SConfig
    - SAI_GetLeftJustifiedConfig
    - SAI_GetRightJustifiedConfig
    - SAI_GetTDMConfig

[2.1.9]

- Improvements
  - Improved SAI driver comment for clock polarity.
  - Added enumeration for SAI for sample inputs on different edges.

  - Changed FSL_FEATURE_SAI_CHANNEL_COUNT to FSL_FEATURE_SAI_CHANNEL_COUNTn(base) for the difference between the different SAI instances.
- Added new APIs:
  - SAI_TxSetBitClockDirection
  - SAI_RxSetBitClockDirection
  - SAI_RxSetFrameSyncDirection
  - SAI_TxSetFrameSyncDirection

[2.1.8]

- Improvements
  - Added feature macro test for the sync mode2 and mode 3.
  - Added feature macro test for masterClockHz in sai_transfer_format_t.

[2.1.7]

- Improvements
  - Added feature macro test for the mclkSource member in sai_config_t.
  - Changed "FSL_FEATURE_SAI5_SAI6_SHARE_IRQ" to "FSL_FEATURE_SAI_SAI5_SAI6_SHARE_IRQ".
  - Added #ifndef #endif check for SAI_XFER_QUEUE_SIZE to allow redefinition.
- Bug Fixes
  - Fixed build error caused by feature macro test for mclkSource.

[2.1.6]

- Improvements
  - Added feature macro test for mclkSourceClockHz check.
  - Added bit clock source name for general devices.
- Bug Fixes
  - Fixed incorrect channel numbers setting while calling RX/TX set format together.

[2.1.5]

- Bug Fixes
  - Corrected SAI3 driver IRQ handler name.
  - Added I2S4/5/6 IRQ handler.
  - Added base in handler structure to support different instances sharing one IRQ number.
- New Features
  - Updated SAI driver for MCR bit MICS.
  - Added 192 KHZ/384 KHZ in the sample rate enumeration.
  - Added multi FIFO interrupt/SDMA transfer support for TX/RX.
  - Added an API to read/write multi FIFO data in a blocking method.
  - Added bclk bypass support when bclk is same with mclk.

[2.1.4]

- New Features
  - Added an API to enable/disable auto FIFO error recovery in platforms that support this feature.
  - Added an API to set data packing feature in platforms which support this feature.

[2.1.3]

- New Features
  - Added feature to make I2S frame sync length configurable according to bitWidth.

[2.1.2]

- Bug Fixes
  - Added 24-bit support for SAI eDMA transfer. All data shall be 32 bits for send/receive, as eDMA cannot directly handle 3-Byte transfer.

[2.1.1]

- Improvements
  - Reduced code size while not using transactional API.

[2.1.0]

- Improvements
  - API name changes:
    * SAI_GetSendRemainingBytes -> SAI_GetSentCount.
    * SAI_GetReceiveRemainingBytes -> SAI_GetReceivedCount.
    * All names of transactional APIs were added with “Transfer” prefix.
    * All transactional APIs use base and handle as input parameter.
    * Unified the parameter names.
- Bug Fixes
  - Fixed WLC bug while reading TCSR/RCSR registers.
  - Fixed MOE enable flow issue. Moved MOE enable after MICS settings in SAI_TxInit/SAI_RxInit.

[2.0.0]

- Initial version.

SAI_EDMA

[2.7.4]

- Bug Fixes
  - Fixed MSG finding for platforms with multiple FIFO size support.

[2.7.3]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.3, 10.4, 10.5, 10.6, 10.7, 10.8, 12.4.

[2.7.2]

- Improvements
  - Add macros MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL and MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL to let the user decide whether to enable SAI when calling SAI_TransferSendEDMA/SAI_TransferReceiveEDMA.

[2.7.1]

- Improvements
  - Add EDMA ext API to accommodate more types of EDMA.

[2.7.0]

- Improvements
  - Updated api SAI_TransferReceiveEDMA to support voice channel block interleave transfer.
  - Updated api SAI_TransferSendEDMA to support voice channel block interleave transfer.
  - Added new api SAI_TransferSetInterleaveType to support channel interleave type configurations.

[2.6.0]

- Improvements
  - Removed deprecated APIs.

[2.5.1]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 20.7.

[2.5.0]

- Improvements
  - Added new api SAI_TransferSendLoopEDMA/SAI_TransferReceiveLoopEDMA to support loop transfer.
  - Added multi sai channel transfer support.

[2.4.0]

- Improvements
  - Added new api SAI_TransferGetValidTransferSlotsEDMA which can be used to get valid transfer slot count in the sai edma transfer queue.
  - Deprecated the api SAI_TransferRxSetFormatEDMA and SAI_TransferTxSetFormatEDMA.
- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.3,10.4.

[2.3.2]

- Refer SAI driver change log 2.1.0 to 2.3.2

SEMA42

[2.1.2]

- Improvements
  - Fix MISRA C-2012 Rule 20.8 violations.

[2.1.1]

- Improvements
  - Updated SEMA42_TryLock function to avoid unsigned integer operations wrap issue.

[2.1.0]

- New Features
  - Added SEMA42_BUSY_POLL_COUNT parameter to prevent infinite polling loops in SEMA42 operations.
  - Added timeout mechanism to all polling loops in SEMA42 driver code.
- Improvements
  - Updated SEMA42_Lock function to return status_t instead of void for better error handling.
  - Enhanced documentation to clarify timeout behavior and return values.

[2.0.4]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.3]

- Improvements
  - Changed to implement SEMA42_Lock base on SEMA42_TryLock.

[2.0.2]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 17.7.

[2.0.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.3, 10.4, 14.4, 18.1.

[2.0.0]

- Initial version.

TPM

[2.4.2]

- Bug Fixes
  - Fixed CERT INT30-C INT31-C issue for:
    - Unsigned integer operation may wrap.
    - Casting from “int” to “unsigned char” may result in lost or misinterpreted data.

[2.4.1]

- Improvements
  - Add Coverage Justification for uncovered code.

[2.4.0]

- New Feature
  - Added while loop timeout for MOD CnV CnSC and SC register write sequence.
  - Change the return type from void to status_t for following API:
    - TPM_DisableChannel
    - TPM_EnableChannel
    - TPM_SetupOutputCompare
    - TPM_SetTimerPeriod
    - TPM_StopTimer

[2.3.6]

- Bug Fixes
  - Fixed CERT INT30-C INT31-C issue for TPM_SetupDualEdgeCapture.

[2.3.5]

- New Feature
  - Added IRQ handler entry for TPM2.

[2.3.4]

- New Feature
  - Added common IRQ handler entry TPM_DriverIRQHandler.

[2.3.3]

- Improvements
  - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.2]

- Bug Fixes
  - Fixed ERR008085 TPM writing the TPMx_MOD or TPMx_CnV registers more than once may fail when the timer is disabled.

[2.3.1]

- Bug Fixes
  - Fixed compilation error when macro FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL is 1.

[2.3.0]

- Improvements
  - Create callback feature for TPM match and timer overflow interrupts.

[2.2.4]

- Improvements
  - Add feature macros(FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_EN, FSL_FEATURE_TPM_HAS_GLOBAL_TIME_BASE_SYNC).

[2.2.3]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.2.2]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4.

[2.2.1]

- Bug Fixes
  - Fixed CCM issue by splitting function from TPM_SetupPwm() function to reduce function complexity.
  - Fixed violations of MISRA C-2012 rule 17.7.

[2.2.0]

- Improvements
  - Added TPM_SetChannelPolarity to support select channel input/output polarity.
  - Added TPM_EnableChannelExtTrigger to support enable external trigger input to be used by channel.
  - Added TPM_CalculateCounterClkDiv to help calculates the counter clock prescaler.
  - Added TPM_GetChannelValue to support get TPM channel value.
  - Added new TPM configuration.
    - syncGlobalTimeBase
    - extTriggerPolarity
    - chnlPolarity
  - Added new PWM signal configuration.
    - secPauseLevel
- Bug Fixes
  - Fixed TPM_SetupPwm can't configure 0% combined PWM issues.

[2.1.1]

- Improvements
  - Add feature macro for PWM pause level select feature.

[2.1.0]

- Improvements
  - Added TPM_EnableChannel and TPM_DisableChannel APIs.
  - Added new PWM signal configuration.
    - pauseLevel - Support select output level when counter first enabled or paused.
    - enableComplementary - Support enable/disable generate complementary PWM signal.
    - deadTimeValue - Support deadtime insertion for each pair of channels in combined PWM mode.
- Bug Fixes
  - Fixed issues about channel MSnB:MSnA and ELSnB:ELSnA bit fields and CnV register change request acknowledgement. Writes to these bits are ignored when the interval between successive writes is less than the TPM clock period.

[2.0.8]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.1, 10.4 ,10.7 and 14.4.

[2.0.7]

- Bug Fixes
  - Fixed violations of MISRA C-2012 rule 10.4 and 17.7.

[2.0.6]

- Bug Fixes
  - Fixed Out-of-bounds issue.

[2.0.5]

- Bug Fixes
  - Fixed MISRA-2012 rules.
    - Rule 10.6, 10.7

[2.0.4]

- Bug Fixes
  - Fixed ERR050050 in functions TPM_SetupPwm/TPM_UpdatePwmDutycycle. When TPM was configured in EPWM mode as PS = 0, the compare event was missed on the first reload/overflow after writing 1 to the CnV register.

[2.0.3]

- Bug Fixes
  - MISRA-2012 issue fixed.
    - Fixed rules: rule-12.1, rule-17.7, rule-16.3, rule-14.4, rule-1.3, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-10.6, and rule-18.1.

[2.0.2]

- Bug Fixes
  - Fixed issues in functions TPM_SetupPwm/TPM_UpdateChnlEdgeLevelSelect /TPM_SetupInputCapture/TPM_SetupOutputCompare/TPM_SetupDualEdgeCapture, wait acknowledgement when the channel is disabled.

[2.0.1]

- Bug Fixes
  - Fixed TPM_UpdateChnIEdgeLevelSelect ACK wait issue.
  - Fixed the issue that TPM_SetupdualEdgeCapture could not set FILTER register.
  - Fixed TPM_UpdateChnEdgeLevelSelect ACK wait issue.

[2.0.0]

- Initial version.

TRDC

[2.3.1]

- Improvements
  - Update APIs to check whether the memory access configuration can be updated.
  - Update APIs to mask the MRC address since only high 18 bits are valid.

[2.3.0]

- New Features
  - Added API TRDC_EnableProcessorDomainAssignment to disable/enable DAC.
- Bug Fixes
  - Fixed MISRA violation of missing function declaration.
  - Fixed wrong operation of domain mask in TRDC_MbcNseClearAll and TRDC_MrcDomainNseClear.

[2.2.1]

- Bug Fixes
  - Fixed MISRA violations of rule 10.3.

[2.2.0]

- New Features
  - Added new APIs to support SoC with more than one processor core.

[2.1.1]

- Bug Fixes
  - Fixed MISRA violations of rule 10.3, 10.6, 10.7 and 18.1.

[2.1.0]

- Improvements
  - Modified some of the addressing method according to the device header file's update.
  - Modified flash address configuration structure and default setting.
- New Features
  - Added API to set flash logic window array address.
- Bug Fixes
  - Fixed wrong return value of TRDC_GetFlashLogicalWindowPbase.

  - Fixed bug in TRDC_GetAndClearFirstSpecificDomainError that the error status is cleared by mistake before obtained by software.
  - Fixed MISRA violations of rule 10.3, 10.4, 10.6 and 10.8.

[2.0.0]

- Initial version.

TRGMUX

[2.0.1]

- Bug Fixes
  - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.8.

[2.0.0]

- Initial version.

TSTMR

[2.1.0]

- New Features
  - Support configured clock frequency.
  - Add TSTMR_Init and TSTMR_init APIs.
- Improvements
  - Change TSTMR_DelayUs from static inline function to normal function.

[2.0.4]

- Bugfix
  - Fix MISRA C-2012 Rule 10.4 and 14.4 issues.

[2.0.3]

- Bugfix
  - Fix CERT INT30-C that Unsigned integer operation TSTMR_ReadTimeStamp(base) - startTime may wrap.

[2.0.2]

- Improvements
  - Support 24MHz clock source.
- Bugfix
  - Fix MISRA C-2012 Rule 10.4 issue.
  - Read of TSTMR HIGH must follow TSTMR LOW atomically: require masking interrupt around 2 LSB / MSB accesses.

[2.0.1]

- Bugfix
  - Restrict to read with 32-bit accesses only.
  - Restrict that TSTMR LOW read occurs first, followed by the TSTMR HIGH read.

[2.0.0]

- Initial version.

WDOG32

[2.2.1]

- Bug Fixes
  - Fix CERT INT31-C that the bool value shall be converted to unsigned int 0 or 1 then passed to registers.
  - Fix MISRA 2012 20.3 vilation.

[2.2.0]

- Improvements
  - Added while loop timeout config value for WDOG32 reconfiguration and unlock sequence.
  - Change the return type of WDOG32_Init, WDOG32_Deinit and WDOG32_Unlock from void to status_t.

[2.1.0]

- Improvements
  - Release peripheral from reset if necessary in init function.

[2.0.4]

- Improvements
  - To ensure that the reconfiguration is inside 128 bus clocks unlock window, put all reconfiguration APIs in quick access code section.

[2.0.3]

- Bug Fixes
  - Fixed the noncompliance issue of the reference document.
    - Waited until for new configuration to take effect by checking the RCS bit field.
    - Waited until for registers to be unlocked by checking the ULK bit field.
- Improvements
  - Added 128 bus clocks delay ensures a smooth transition before restarting the counter with the new configuration when there is no RCS status bit.

[2.0.2]

- Bug Fixes
  - MISRA C-2012 issue fixed.
    - Fixed rules, containing: rule-10.3, rule-14.4, rule-15.5.
  - Fixed the issue of the inseparable process interrupted by other interrupt source.
    - WDOG32_Refresh

[2.0.1]

- Bug Fixes
  - WDOG must be configured within its configuration time period.
    - Added WDOG32_Init API to quick access section.
    - Defined register variable in WDOG32_Init API.

[2.0.0]

- Initial version.

WUU

[2.4.2]

- Bug Fixes
  - Fixed violations of CERT-C:
    - Check filterIndex >= 1U to prevent underflow.
    - Check multiplication results fit in uint8_t before assignment to shift variable.

[2.4.1]

- Improvements
  - The semantics of kWUU_FilterActiveDSPD and kWUU_ExternalPinActiveDSPD are not clear enough, because on some platforms it's not 'DSPD' (deep sleep, power down) but PDDPD (power down, deep power down). We deprecate them and will use the more generic kWUU_FilterActiveLowLeakage and kWUU_ExternalPinActiveLowLeakage in the future.

[2.4.0]

- New Features
  - Added WUU_ClearExternalWakeupPinsConfig() to clear settings of PDC and PE register.

[2.3.0]

- New Features
  - Added WUU_ClearInternalWakeUpModulesConfig() to clear settings of DM and ME register.

[2.2.1]

- Bug Fixes
  - Fixed WUU_SetPinFilterConfig() unable to set edge detection of pin filter config.
  - Fixed wrong macro used in WUU_GetPinFilterFlag() function.

[2.2.0]

- New Features
  - Added the WUU_GetExternalWakeupPinFlag() and WUU_ClearExternalWakeupPinFlag() function .

[2.1.0]

- New Features
  - Added the WUU_GetModuleInterruptFlag() function to support the devices that equipped MF register.

[2.0.0]

- Initial version.

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

MIMX8UD7

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 Multicore

Multicore SDK

1.7.2 FreeMASTER

freemaster

1.7.3 FreeRTOS

FreeRTOS

Chapter 2

MIMX8UD7

2.1 ACMP: Analog Comparator Driver

void ACMP_Init(CMP_Type *base, const *acmp_config_t* *config)

Initializes the ACMP.

The default configuration can be got by calling ACMP_GetDefaultConfig().

Parameters

- base – ACMP peripheral base address.
- config – Pointer to ACMP configuration structure.

void ACMP_Deinit(CMP_Type *base)

Deinitializes the ACMP.

Parameters

- base – ACMP peripheral base address.

void ACMP_GetDefaultConfig(*acmp_config_t* *config)

Gets the default configuration for ACMP.

This function initializes the user configuration structure to default value. The default value are:

Example:

```
config->enableHighSpeed = false;
config->enableInvertOutput = false;
config->useUnfilteredOutput = false;
config->enablePinOut = false;
config->enableHysteresisBothDirections = false;
config->hysteresisMode = kACMP_hysteresisMode0;
```

Parameters

- config – Pointer to ACMP configuration structure.

void ACMP_Enable(CMP_Type *base, bool enable)

Enables or disables the ACMP.

Parameters

- base – ACMP peripheral base address.
- enable – True to enable the ACMP.

void ACMP_EnableLinkToDAC(CMP_Type *base, bool enable)

Enables the link from CMP to DAC enable.

When this bit is set, the DAC enable/disable is controlled by the bit CMP_C0[EN] instead of CMP_C1[DACEN].

Parameters

- base – ACMP peripheral base address.
- enable – Enable the feature or not.

void ACMP_SetChannelConfig(CMP_Type *base, const *acmp_channel_config_t* *config)

Sets the channel configuration.

Note that the plus/minus mux's setting is only valid when the positive/negative port's input isn't from DAC but from channel mux.

Example:

```
acmp_channel_config_t configStruct = {0};
configStruct.positivePortInput = kACMP_PortInputFromDAC;
configStruct.negativePortInput = kACMP_PortInputFromMux;
configStruct.minusMuxInput = 1U;
ACMP_SetChannelConfig(CMP0, &configStruct);
```

Parameters

- base – ACMP peripheral base address.
- config – Pointer to channel configuration structure.

void ACMP_EnableDMA(CMP_Type *base, bool enable)

Enables or disables DMA.

Parameters

- base – ACMP peripheral base address.
- enable – True to enable DMA.

void ACMP_SetFilterConfig(CMP_Type *base, const *acmp_filter_config_t* *config)

Configures the filter.

The filter can be enabled when the filter count is bigger than 1, the filter period is greater than 0 and the sample clock is from divided bus clock or the filter is bigger than 1 and the sample clock is from external clock. Detailed usage can be got from the reference manual.

Example:

```
acmp_filter_config_t configStruct = {0};
configStruct.filterCount = 5U;
configStruct.filterPeriod = 200U;
configStruct.enableSample = false;
ACMP_SetFilterConfig(CMP0, &configStruct);
```

Parameters

- base – ACMP peripheral base address.
- config – Pointer to filter configuration structure.

void ACMP_SetDACConfig(CMP_Type *base, const *acmp_dac_config_t* *config)

Configures the internal DAC.

Example:

```
acmp_dac_config_t configStruct = {0};
configStruct.referenceVoltageSource = kACMP_VrefSourceVin1;
configStruct.DACValue = 20U;
configStruct.enableOutput = false;
configStruct.workMode = kACMP_DACWorkLowSpeedMode;
ACMP_SetDACConfig(CMP0, &configStruct);
```

Parameters

- base – ACMP peripheral base address.
- config – Pointer to DAC configuration structure. "NULL" is for disabling the feature.

void ACMP_EnableInterrupts(CMP_Type *base, uint32_t mask)

Enables interrupts.

Parameters

- base – ACMP peripheral base address.
- mask – Interrupts mask. See "_acmp_interrupt_enable".

void ACMP_DisableInterrupts(CMP_Type *base, uint32_t mask)

Disables interrupts.

Parameters

- base – ACMP peripheral base address.
- mask – Interrupts mask. See "_acmp_interrupt_enable".

uint32_t ACMP_GetStatusFlags(CMP_Type *base)

Gets status flags.

Parameters

- base – ACMP peripheral base address.

Returns

Status flags asserted mask. See "_acmp_status_flags".

void ACMP_ClearStatusFlags(CMP_Type *base, uint32_t mask)

Clears status flags.

Parameters

- base – ACMP peripheral base address.
- mask – Status flags mask. See "_acmp_status_flags".

void ACMP_SetDiscreteModeConfig(CMP_Type *base, const *acmp_discrete_mode_config_t* *config)

Configure the discrete mode.

Configure the discrete mode when supporting 3V domain with 1.8V core.

Parameters

- base – ACMP peripheral base address.
- config – Pointer to configuration structure. See "acmp_discrete_mode_config_t".

void ACMP_GetDefaultDiscreteModeConfig(*acmp_discrete_mode_config_t* *config)

Get the default configuration for discrete mode setting.

Parameters

- config – Pointer to configuration structure to be restored with the setting values.

FSL_ACMP_DRIVER_VERSION

ACMP driver version 2.5.0.

enum _acmp_interrupt_enable

Interrupt enable/disable mask.

Values:

enumerator kACMP_OutputRisingInterruptEnable

Enable the interrupt when comparator outputs rising.

enumerator kACMP_OutputFallingInterruptEnable

Enable the interrupt when comparator outputs falling.

enum _acmp_status_flags

Status flag mask.

Values:

enumerator kACMP_OutputRisingEventFlag

Rising-edge on compare output has occurred.

enumerator kACMP_OutputFallingEventFlag

Falling-edge on compare output has occurred.

enumerator kACMP_OutputAssertEventFlag

Return the current value of the analog comparator output.

enum _acmp_offset_mode

Comparator hard block offset control.

If OFFSET level is 1, then there is no hysteresis in the case of positive port input crossing negative port input in the positive direction (or negative port input crossing positive port input in the negative direction). Hysteresis still exists for positive port input crossing negative port input in the falling direction. If OFFSET level is 0, then the hysteresis selected by acmp_hysteresis_mode_t is valid for both directions.

Values:

enumerator kACMP_OffsetLevel0

The comparator hard block output has level 0 offset internally.

enumerator kACMP_OffsetLevel1

The comparator hard block output has level 1 offset internally.

enum _acmp_hysteresis_mode

Comparator hard block hysteresis control.

See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator kACMP_HysteresisLevel0

Offset is level 0 and Hysteresis is level 0.

enumerator kACMP_HysteresisLevel1

Offset is level 0 and Hysteresis is level 1.

enumerator kACMP_HysteresisLevel2

Offset is level 0 and Hysteresis is level 2.

enumerator kACMP_HysteresisLevel3
Offset is level 0 and Hysteresis is level 3.

enum _acmp_reference_voltage_source
CMP Voltage Reference source.

Values:

enumerator kACMP_VrefSourceVin1
Vin1 is selected as resistor ladder network supply reference Vin.

enumerator kACMP_VrefSourceVin2
Vin2 is selected as resistor ladder network supply reference Vin.

enum _acmp_port_input
Port input source.

Values:

enumerator kACMP_PortInputFromDAC
Port input from the 8-bit DAC output.

enumerator kACMP_PortInputFromMux
Port input from the analog 8-1 mux.

enum _acmp_dac_work_mode
Internal DAC's work mode.

Values:

enumerator kACMP_DACWorkLowSpeedMode
DAC is selected to work in low speed and low power mode.

enumerator kACMP_DACWorkHighSpeedMode
DAC is selected to work in high speed high power mode.

typedef enum *_acmp_offset_mode* acmp_offset_mode_t
Comparator hard block offset control.

If OFFSET level is 1, then there is no hysteresis in the case of positive port input crossing negative port input in the positive direction (or negative port input crossing positive port input in the negative direction). Hysteresis still exists for positive port input crossing negative port input in the falling direction. If OFFSET level is 0, then the hysteresis selected by acmp_hysteresis_mode_t is valid for both directions.

typedef enum *_acmp_hysteresis_mode* acmp_hysteresis_mode_t
Comparator hard block hysteresis control.

See chip data sheet to get the actual hysteresis value with each level.

typedef enum *_acmp_reference_voltage_source* acmp_reference_voltage_source_t
CMP Voltage Reference source.

typedef enum *_acmp_port_input* acmp_port_input_t
Port input source.

typedef enum *_acmp_dac_work_mode* acmp_dac_work_mode_t
Internal DAC's work mode.

typedef struct *_acmp_config* acmp_config_t
Configuration for ACMP.

typedef struct *_acmp_channel_config* acmp_channel_config_t

Configuration for channel.

The comparator's port can be input from channel mux or DAC. If port input is from channel mux, detailed channel number for the mux should be configured.

typedef struct *_acmp_filter_config* acmp_filter_config_t

Configuration for filter.

typedef struct *_acmp_dac_config* acmp_dac_config_t

Configuration for DAC.

typedef struct *_acmp_discrete_mode_config* acmp_discrete_mode_config_t

Configuration for discrete mode.

CMP_C0_CFx_MASK

The mask of status flags cleared by writing 1.

struct _acmp_config

#include <fsl_acmp.h> Configuration for ACMP.

Public Members

acmp_offset_mode_t offsetMode

Offset mode.

acmp_hysteresis_mode_t hysteresisMode

Hysteresis mode.

bool enableHighSpeed

Enable High Speed (HS) comparison mode.

bool enableInvertOutput

Enable inverted comparator output.

bool useUnfilteredOutput

Set compare output(COUT) to equal COUTA(true) or COUT(false).

bool enablePinOut

The comparator output is available on the associated pin.

struct _acmp_channel_config

#include <fsl_acmp.h> Configuration for channel.

The comparator's port can be input from channel mux or DAC. If port input is from channel mux, detailed channel number for the mux should be configured.

Public Members

acmp_port_input_t positivePortInput

Input source of the comparator's positive port.

uint32_t plusMuxInput

Plus mux input channel(0~7).

acmp_port_input_t negativePortInput

Input source of the comparator's negative port.

uint32_t minusMuxInput

Minus mux input channel(0~7).

struct _acmp_filter_config
#include <fsl_acmp.h> Configuration for filter.

Public Members

uint32_t filterCount
Filter Sample Count. Available range is 1-7, 0 would cause the filter disabled.

uint32_t filterPeriod
Filter Sample Period. The divider to bus clock. Available range is 0-255.

struct _acmp_dac_config
#include <fsl_acmp.h> Configuration for DAC.

Public Members

acmp_reference_voltage_source_t referenceVoltageSource
Supply voltage reference source.

uint32_t DACValue
Value for DAC Output Voltage. Available range is 0-255.

bool enableOutput
Enable the DAC output.

struct _acmp_discrete_mode_config
#include <fsl_acmp.h> Configuration for discrete mode.

Public Members

bool enablePositiveChannelDiscreteMode
Positive Channel Continuous Mode Enable. By default, the continuous mode is used.

bool enableNegativeChannelDiscreteMode
Negative Channel Continuous Mode Enable. By default, the continuous mode is used.

2.2 Battery-Backed Non-Secure Module

void BBNSM_Init(BBNSM_Type *base)
Init the BBNSM section.

Parameters

- base – BBNSM peripheral base address

void BBNSM_Deinit(BBNSM_Type *base)
Deinit the BBNSM section.

Parameters

- base – BBNSM peripheral base address

FSL_BBNSM_DRIVER_VERSION
Version 2.0.0

enum _bbnsm_interrupts

List of BBNSM interrupts.

Values:

enumerator kBBNSM_RTC_AlarmInterrupt

RTC time alarm interrupt

enumerator kBBNSM_RTC_RolloverInterrupt

RTC rollover interrupt

enum _bbnsm_status_flags

List of BBNSM flags.

Values:

enumerator kBBNSM_RTC_AlarmInterruptFlag

RTC time alarm interrupt flag

enumerator kBBNSM_RTC_RolloverInterruptFlag

RTC rollover interrupt flag

enumerator kBBNSM_PWR_ON_InterruptFlag

power on interrupt flag

enumerator kBBNSM_PWR_OFF_InterruptFlag

power off interrupt flag

enumerator kBBNSM_EMG_OFF_InterruptFlag

emergency power off interrupt flag

typedef enum *_bbnsm_interrupts* bbnsm_interrupts_t

List of BBNSM interrupts.

typedef enum *_bbnsm_status_flags* bbnsm_status_flags_t

List of BBNSM flags.

typedef struct *_bbnsm_rtc_config* bbnsm_rtc_config_t

BBNSM config structure.

This structure holds the configuration settings for the BBNSM peripheral. To initialize this structure to reasonable defaults, call the BBNSM_RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

void BBNSM_RTC_Init(BBNSM_Type *base, const *bbnsm_rtc_config_t* *config)

Ungates the BBNSM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the BBNSM driver.

Parameters

- base – BBNSM peripheral base address
- config – Pointer to the user's BBNSM rtc configuration structure.

void BBNSM_RTC_Deinit(BBNSM_Type *base)

Stops the RTC timer.

Parameters

- base – BBNSM peripheral base address

void BBNSM_RTC_GetDefaultConfig(*bbnsm_rtc_config_t* *config)

Fills in the BBNSM RTC config struct with the default settings.

The default values are as follows.

```
config->rtccalenable = false;
config->rtccalvalue = 0U;
```

Parameters

- config – Pointer to the user's BBNSM configuration structure.

status_t BBNSM_RTC_SetAlarm(BBNSM_Type *base, uint32_t alarmSeconds)

Sets the BBNSM RTC alarm time.

The function sets the RTC alarm. It also checks whether the specified alarm time is greater than the present time. If not, the function does not set the alarm and returns an error. Please note, that RTC alarm has limited resolution because only 32 most significant bits of RTC counter are compared to RTC Alarm register. If the alarm time is beyond RTC resolution, the function does not set the alarm and returns an error.

Parameters

- base – BBNSM peripheral base address
- alarmSeconds –

Returns

kStatus_Success: success in setting the BBNSM RTC alarm kStatus_InvalidArgument: Error because the alarm datetime format is incorrect kStatus_Fail: Error because the alarm time has already passed or is beyond resolution

uint32_t BBNSM_RTC_GetAlarm(BBNSM_Type *base)

Returns the BBNSM RTC alarm time.

Parameters

- base – BBNSM peripheral base address

struct _bbnsm_rtc_config

#include <fsl_bbnsm.h> BBNSM config structure.

This structure holds the configuration settings for the BBNSM peripheral. To initialize this structure to reasonable defaults, call the BBNSM_RTC_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool rtcCalEnable

true: RTC calibration mechanism is enabled; false: No calibration is used

uint32_t rtcCalValue

Defines signed calibration value for RTC; This is a 5-bit 2's complement value, range from -16 to +15

2.3 CACHE: CACHE Memory Controller

uint32_t CACHE64_GetInstanceByAddr(uint32_t address)

brief Returns an instance number given physical memory address.

param address The physical memory address.

Returns

CACHE64_CTRL instance number starting from 0.

void CACHE64_EnableCache(CACHE64_CTRL_Type *base)

Enables the cache.

Parameters

- base – CACHE64_CTRL peripheral base address.

void CACHE64_DisableCache(CACHE64_CTRL_Type *base)

Disables the cache.

Parameters

- base – CACHE64_CTRL peripheral base address.

void CACHE64_InvalidateCache(CACHE64_CTRL_Type *base)

Invalidates the cache.

Parameters

- base – CACHE64_CTRL peripheral base address.

void CACHE64_InvalidateCacheByRange(uint32_t address, uint32_t size_byte)

Invalidates cache by range.

Note: Address and size should be aligned to “CACHE64_LINESIZE_BYTE”. The startAddr here will be forced to align to CACHE64_LINESIZE_BYTE if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address of cache.
- size_byte – size of the memory to be invalidated, should be larger than 0.

void CACHE64_CleanCache(CACHE64_CTRL_Type *base)

Cleans the cache.

Parameters

- base – CACHE64_CTRL peripheral base address.

void CACHE64_CleanCacheByRange(uint32_t address, uint32_t size_byte)

Cleans cache by range.

Note: Address and size should be aligned to “CACHE64_LINESIZE_BYTE”. The startAddr here will be forced to align to CACHE64_LINESIZE_BYTE if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address of cache.
- size_byte – size of the memory to be cleaned, should be larger than 0.

void CACHE64_CleanInvalidateCache(CACHE64_CTRL_Type *base)

Cleans and invalidates the cache.

Parameters

- base – CACHE64_CTRL peripheral base address.

void CACHE64_CleanInvalidateCacheByRange(uint32_t address, uint32_t size_byte)

Cleans and invalidate cache by range.

Note: Address and size should be aligned to "CACHE64_LINESIZE_BYTE". The startAddr here will be forced to align to CACHE64_LINESIZE_BYTE if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address of cache.
- size_byte – size of the memory to be Cleaned and Invalidated, should be larger than 0.

static inline void ICACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)

Invalidates instruction cache by range.

Note: Address and size should be aligned to CACHE64_LINESIZE_BYTE due to the cache operation unit FSL_FEATURE_CACHE64_CTRL_LINESIZE_BYTE. The startAddr here will be forced to align to the cache line size if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address.
- size_byte – size of the memory to be invalidated, should be larger than 0.

static inline void DCACHE_InvalidateByRange(uint32_t address, uint32_t size_byte)

Invalidates data cache by range.

Note: Address and size should be aligned to CACHE64_LINESIZE_BYTE due to the cache operation unit FSL_FEATURE_CACHE64_CTRL_LINESIZE_BYTE. The startAddr here will be forced to align to the cache line size if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address.
- size_byte – size of the memory to be invalidated, should be larger than 0.

static inline void DCACHE_CleanByRange(uint32_t address, uint32_t size_byte)

Clean data cache by range.

Note: Address and size should be aligned to CACHE64_LINESIZE_BYTE due to the cache operation unit FSL_FEATURE_CACHE64_CTRL_LINESIZE_BYTE. The startAddr here will be forced to align to the cache line size if startAddr is not aligned. For the size_byte, application

should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address.
- size_byte – size of the memory to be cleaned, should be larger than 0.

static inline void DCACHE_CleanInvalidateByRange(uint32_t address, uint32_t size_byte)

Cleans and Invalidates data cache by range.

Note: Address and size should be aligned to CACHE64_LINESIZE_BYTE due to the cache operation unit FSL_FEATURE_CACHE64_CTRL_LINESIZE_BYTE. The startAddr here will be forced to align to the cache line size if startAddr is not aligned. For the size_byte, application should make sure the alignment or make sure the right operation order if the size_byte is not aligned.

Parameters

- address – The physical address.
- size_byte – size of the memory to be Cleaned and Invalidated, should be larger than 0.

FSL_CACHE_DRIVER_VERSION

cache driver version.

CACHE64_LINESIZE_BYTE

cache line size.

2.4 CASPER: The Cryptographic Accelerator and Signal Processing Engine with RAM sharing

2.5 casper_driver

FSL_CASPER_DRIVER_VERSION

CASPER driver version. Version 2.2.5.

Current version: 2.2.5

Change log:

- Version 2.0.0
  - Initial version
- Version 2.0.1
  - Bug fix KPSDK-24531 double_scalar_multiplication() result may be all zeroes for some specific input
- Version 2.0.2
  - Bug fix KPSDK-25015 CASPER_MEMCPY hard-fault on LPC55xx when both source and destination buffers are outside of CASPER_RAM
- Version 2.0.3

  - Bug fix KPSDK-28107 RSUB, FILL and ZERO operations not implemented in enum _casper_operation.
- Version 2.0.4
  - For GCC compiler, enforce O1 optimize level, specifically to remove strict-aliasing option. This driver is very specific and requires -fno-strict-aliasing.
- Version 2.0.5
  - Fix sign-compare warning.
- Version 2.0.6
  - Fix IAR Pa082 warning.
- Version 2.0.7
  - Fix MISRA-C 2012 issue.
- Version 2.0.8
  - Add feature macro for CASPER_RAM_OFFSET.
- Version 2.0.9
  - Remove unused function Jac_oncurve().
  - Fix ECC384 build.
- Version 2.0.10
  - Fix MISRA-C 2012 issue.
- Version 2.1.0
  - Add ECC NIST P-521 elliptic curve.
- Version 2.2.0
  - Rework driver to support multiple curves at once.
- Version 2.2.1
  - Fix MISRA-C 2012 issue.
- Version 2.2.2
  - Enable hardware interleaving to RAMX0 and RAMX1 for CASPER by feature macro FSL_FEATURE_CASPER_RAM_HW_INTERLEAVE
- Version 2.2.3
  - Added macro into CASPER_Init and CASPER_Deinit to support devices without clock and reset control.
- Version 2.2.4
  - Fix MISRA-C 2012 issue.
- Version 2.2.5
  - Fix Coverity Uninitialized scalar variable.

enum __casper_operation

CASPER operation.

Values:

enumerator kCASPER_OpMul6464NoSum

enumerator kCASPER_OpMul6464Sum

Walking 1 or more of J loop, doing r=a*b using 64x64=128

enumerator kCASPER_OpMul6464FullSum
Walking 1 or more of J loop, doing c,r=r+a*b using 64x64=128, but assume inner j loop

enumerator kCASPER_OpMul6464Reduce
Walking 1 or more of J loop, doing c,r=r+a*b using 64x64=128, but sum all of w.

enumerator kCASPER_OpAdd64
Walking 1 or more of J loop, doing c,r[-1]=r+a*b using 64x64=128, but skip 1st write

enumerator kCASPER_OpSub64
Walking add with off_AB, and in/out off_RES doing c,r=r+a+c using 64+64=65

enumerator kCASPER_OpDouble64
Walking subtract with off_AB, and in/out off_RES doing r=r-a using 64-64=64, with last borrow implicit if any

enumerator kCASPER_OpXor64
Walking add to self with off_RES doing c,r=r+r+c using 64+64=65

enumerator kCASPER_OpRSub64
Walking XOR with off_AB, and in/out off_RES doing r=r^a using 64^64=64

enumerator kCASPER_OpShiftLeft32
Walking subtract with off_AB, and in/out off_RES using r=a-r

enumerator kCASPER_OpShiftRight32
Walking shift left doing r1,r=(b*D)|r1, where D is 2^amt and is loaded by app (off_CD not used)

enumerator kCASPER_OpCopy
Walking shift right doing r,r1=(b*D)|r1, where D is 2^(32-amt) and is loaded by app (off_CD not used) and off_RES starts at MSW

enumerator kCASPER_OpRemask
Copy from ABoff to resoff, 64b at a time

enumerator kCASPER_OpFill
Copy and mask from ABoff to resoff, 64b at a time

enumerator kCASPER_OpZero
Fill RESOFF using 64 bits at a time with value in A and B

enumerator kCASPER_OpCompare
Fill RESOFF using 64 bits at a time of 0s

enumerator kCASPER_OpCompareFast
Compare two arrays, running all the way to the end

enum __casper_algo_t
Algorithm used for CASPER operation.

Values:

enumerator kCASPER_ECC_P256
ECC_P256

enumerator kCASPER_ECC_P384
ECC_P384

enumerator kCASPER_ECC_P521
ECC_P521

Values:

enumerator kCASPER_RamOffset_Result

enumerator kCASPER_RamOffset_Base

enumerator kCASPER_RamOffset_TempBase

enumerator kCASPER_RamOffset_Modulus

enumerator kCASPER_RamOffset_M64

typedef enum *_casper_operation* casper_operation_t

CASPER operation.

typedef enum *_casper_algo_t* casper_algo_t

Algorithm used for CASPER operation.

void CASPER_Init(CASPER_Type *base)

Enables clock and disables reset for CASPER peripheral.

Enable clock and disable reset for CASPER.

Parameters

- base – CASPER base address

void CASPER_Deinit(CASPER_Type *base)

Disables clock for CASPER peripheral.

Disable clock and enable reset.

Parameters

- base – CASPER base address

CASPER_CP

CASPER_CP_CTRL0

CASPER_CP_CTRL1

CASPER_CP_LOADER

CASPER_CP_STATUS

CASPER_CP_INTENSET

CASPER_CP_INTENCLR

CASPER_CP_INTSTAT

CASPER_CP_AREG

CASPER_CP_BREG

CASPER_CP_CREG

CASPER_CP_DREG

CASPER_CP_RES0

CASPER_CP_RES1

CASPER_CP_RES2

CASPER_CP_RES3

CASPER_CP_MASK

CASPER_CP_REMASK

CASPER_CP_LOCK

CASPER_CP_ID

CASPER_Wr32b(value, off)

CASPER_Wr64b(value, off)

CASPER_Rd32b(off)

N_wordlen_max

2.6 casper_driver_pkha

void CASPER_ModExp(CASPER_Type *base, const uint8_t *signature, const uint8_t *pubN, size_t wordLen, uint32_t pubE, uint8_t *plaintext)

Performs modular exponentiation - (A^E) mod N.

This function performs modular exponentiation.

Parameters

- base – CASPER base address
- signature – first addend (in little endian format)
- pubN – modulus (in little endian format)
- wordLen – Size of pubN in bytes
- pubE – exponent
- plaintext – **[out]** Output array to store result of operation (in little endian format)

void CASPER_ecc_init(*casper_algo_t* curve)

Initialize prime modulus mod in Casper memory .

Set the prime modulus mod in Casper memory and set N_wordlen according to selected algorithm.

Parameters

- curve – elliptic curve algoritm

void CASPER_ECC_SECP256R1_Mul(CASPER_Type *base, uint32_t resX[8], uint32_t resY[8], uint32_t X[8], uint32_t Y[8], uint32_t scalar[8])

Performs ECC secp256r1 point single scalar multiplication.

This function performs ECC secp256r1 point single scalar multiplication [resX; resY] = scalar * [X; Y] Coordinates are affine in normal form, little endian. Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate in normal form, little endian.

- resY – **[out]** Output Y affine coordinate in normal form, little endian.
- X – Input X affine coordinate in normal form, little endian.
- Y – Input Y affine coordinate in normal form, little endian.
- scalar – Input scalar integer, in normal form, little endian.

void CASPER_ECC_SECP256R1_MulAdd(CASPER_Type *base, uint32_t resX[8], uint32_t resY[8], uint32_t X1[8], uint32_t Y1[8], uint32_t scalar1[8], uint32_t X2[8], uint32_t Y2[8], uint32_t scalar2[8])

Performs ECC secp256r1 point double scalar multiplication.

This function performs ECC secp256r1 point double scalar multiplication [resX; resY] = scalar1 * [X1; Y1] + scalar2 * [X2; Y2] Coordinates are affine in normal form, little endian. Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate.
- resY – **[out]** Output Y affine coordinate.
- X1 – Input X1 affine coordinate.
- Y1 – Input Y1 affine coordinate.
- scalar1 – Input scalar1 integer.
- X2 – Input X2 affine coordinate.
- Y2 – Input Y2 affine coordinate.
- scalar2 – Input scalar2 integer.

void CASPER_ECC_SECP384R1_Mul(CASPER_Type *base, uint32_t resX[12], uint32_t resY[12], uint32_t X[12], uint32_t Y[12], uint32_t scalar[12])

Performs ECC secp384r1 point single scalar multiplication.

This function performs ECC secp384r1 point single scalar multiplication [resX; resY] = scalar * [X; Y] Coordinates are affine in normal form, little endian. Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate in normal form, little endian.
- resY – **[out]** Output Y affine coordinate in normal form, little endian.
- X – Input X affine coordinate in normal form, little endian.
- Y – Input Y affine coordinate in normal form, little endian.
- scalar – Input scalar integer, in normal form, little endian.

void CASPER_ECC_SECP384R1_MulAdd(CASPER_Type *base, uint32_t resX[12], uint32_t resY[12], uint32_t X1[12], uint32_t Y1[12], uint32_t scalar1[12], uint32_t X2[12], uint32_t Y2[12], uint32_t scalar2[12])

Performs ECC secp384r1 point double scalar multiplication.

This function performs ECC secp384r1 point double scalar multiplication [resX; resY] = scalar1 * [X1; Y1] + scalar2 * [X2; Y2] Coordinates are affine in normal form, little endian.

Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate.
- resY – **[out]** Output Y affine coordinate.
- X1 – Input X1 affine coordinate.
- Y1 – Input Y1 affine coordinate.
- scalar1 – Input scalar1 integer.
- X2 – Input X2 affine coordinate.
- Y2 – Input Y2 affine coordinate.
- scalar2 – Input scalar2 integer.

void CASPER_ECC_SECP521R1_Mul(CASPER_Type *base, uint32_t resX[18], uint32_t resY[18], uint32_t X[18], uint32_t Y[18], uint32_t scalar[18])

Performs ECC secp521r1 point single scalar multiplication.

This function performs ECC secp521r1 point single scalar multiplication [resX; resY] = scalar * [X; Y] Coordinates are affine in normal form, little endian. Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate in normal form, little endian.
- resY – **[out]** Output Y affine coordinate in normal form, little endian.
- X – Input X affine coordinate in normal form, little endian.
- Y – Input Y affine coordinate in normal form, little endian.
- scalar – Input scalar integer, in normal form, little endian.

void CASPER_ECC_SECP521R1_MulAdd(CASPER_Type *base, uint32_t resX[18], uint32_t resY[18], uint32_t X1[18], uint32_t Y1[18], uint32_t scalar1[18], uint32_t X2[18], uint32_t Y2[18], uint32_t scalar2[18])

Performs ECC secp521r1 point double scalar multiplication.

This function performs ECC secp521r1 point double scalar multiplication [resX; resY] = scalar1 * [X1; Y1] + scalar2 * [X2; Y2] Coordinates are affine in normal form, little endian. Scalars are little endian. All arrays are little endian byte arrays, uint32_t type is used only to enforce the 32-bit alignment (0-mod-4 address).

Parameters

- base – CASPER base address
- resX – **[out]** Output X affine coordinate.
- resY – **[out]** Output Y affine coordinate.
- X1 – Input X1 affine coordinate.
- Y1 – Input Y1 affine coordinate.
- scalar1 – Input scalar1 integer.
- X2 – Input X2 affine coordinate.

- Y2 – Input Y2 affine coordinate.
- scalar2 – Input scalar2 integer.

void CASPER_ECC_equal(int *res, uint32_t *op1, uint32_t *op2)

void CASPER_ECC_equal_to_zero(int *res, uint32_t *op1)

2.7 Clock

enum _clock_name

Clock name used to get clock frequency.

Values:

enumerator kCLOCK_Cm33CorePlatClk

RTD : CM33 Core/Platform clock

enumerator kCLOCK_Cm33BusClk

RTD : CM33 Bus clock

enumerator kCLOCK_Cm33SlowClk

RTD : CM33 Slow clock

enumerator kCLOCK_FusionDspCorePlatClk

RTD : FusionF1 DSP Core/Platform clock

enumerator kCLOCK_FusionDspBusClk

RTD : FusionF1 DSP Bus clock

enumerator kCLOCK_FusionDspSlowClk

RTD : FusionF1 DSP Slow clock

enumerator kCLOCK_XbarBusClk

AD : XBAR Bus clock

enumerator kCLOCK_HifiDspClk

LPAV: HIFI4 clock

enumerator kCLOCK_HifiNicPlatClk

LPAV: NIC HIFI clock

enumerator kCLOCK_NicLpavAxiClk

LPAV: NIC LPAV AXI clock

enumerator kCLOCK_NicLpavAhbClk

LPAV: NIC LPAV AHB clock

enumerator kCLOCK_NicLpavBusClk

LPAV: LPAV Bus clock

enumerator kCLOCK_DdrClk

LPAV: DDR clock

enumerator kCLOCK_SysOscClk

CGC system OSC clock. (SYSOSC)

enumerator kCLOCK_FroClk

CGC FRO 192MHz clock.

enumerator kCLOCK_LpOscClk
CGC LPOSC clock. (LPOSC)

enumerator kCLOCK_RtcOscClk
CGC RTC OSC clock. (RTCOSC)

enumerator kCLOCK_LvdsClk
LVDS pad input clock frequency.

enumerator kCLOCK_RtdFroDiv1Clk
FRODIV1_CLK in RTD.

enumerator kCLOCK_RtdFroDiv2Clk
FRODIV2_CLK in RTD.

enumerator kCLOCK_RtdFroDiv3Clk
FRODIV3_CLK in RTD.

enumerator kCLOCK_RtdSysOscDiv1Clk
SOSCDIV1_CLK in RTD.

enumerator kCLOCK_RtdSysOscDiv2Clk
SOSCDIV2_CLK in RTD.

enumerator kCLOCK_RtdSysOscDiv3Clk
SOSCDIV3_CLK in RTD.

enumerator kCLOCK_AdFroDiv1Clk
FRODIV1_CLK in AD.

enumerator kCLOCK_AdFroDiv2Clk
FRODIV2_CLK in AD.

enumerator kCLOCK_AdFroDiv3Clk
FRODIV3_CLK in AD.

enumerator kCLOCK_AdSysOscDiv1Clk
SOSCDIV1_CLK in AD.

enumerator kCLOCK_AdSysOscDiv2Clk
SOSCDIV2_CLK in AD.

enumerator kCLOCK_AdSysOscDiv3Clk
SOSCDIV3_CLK in AD.

enumerator kCLOCK_LpavFroDiv1Clk
FRODIV1_CLK in LPAV.

enumerator kCLOCK_LpavFroDiv2Clk
FRODIV2_CLK in LPAV.

enumerator kCLOCK_LpavFroDiv3Clk
FRODIV3_CLK in LPAV.

enumerator kCLOCK_LpavSysOscDiv1Clk
SOSCDIV1_CLK in LPAV.

enumerator kCLOCK_LpavSysOscDiv2Clk
SOSCDIV2_CLK in LPAV.

enumerator kCLOCK_LpavSysOscDiv3Clk
SOSCDIV3_CLK in LPAV.

enumerator kCLOCK_Pll0Clk
CGC PLL0 clock. (PLL0CLK)

enumerator kCLOCK_Pll1Clk
CGC PLL1 clock. (PLL1CLK)

enumerator kCLOCK_Pll3Clk
CGC PLL3 clock. (PLL3CLK)

enumerator kCLOCK_Pll4Clk
CGC PLL4 clock. (PLL4CLK)

enumerator kCLOCK_Pll0Pfd0Clk
pll0 pfd0.

enumerator kCLOCK_Pll0Pfd1Clk
pll0 pfd1.

enumerator kCLOCK_Pll0Pfd2Clk
pll0 pfd2.

enumerator kCLOCK_Pll0Pfd3Clk
pll0 pfd3.

enumerator kCLOCK_Pll1Pfd0Clk
pll1 pfd0.

enumerator kCLOCK_Pll1Pfd1Clk
pll1 pfd1.

enumerator kCLOCK_Pll1Pfd2Clk
pll1 pfd2.

enumerator kCLOCK_Pll1Pfd3Clk
pll1 pfd3.

enumerator kCLOCK_Pll3Pfd0Clk
pll3 pfd0.

enumerator kCLOCK_Pll3Pfd1Clk
pll3 pfd1.

enumerator kCLOCK_Pll3Pfd2Clk
pll3 pfd2.

enumerator kCLOCK_Pll3Pfd3Clk
pll3 pfd3.

enumerator kCLOCK_Pll4Pfd0Clk
pll4 pfd0.

enumerator kCLOCK_Pll4Pfd1Clk
pll4 pfd1.

enumerator kCLOCK_Pll4Pfd2Clk
pll4 pfd2.

enumerator kCLOCK_Pll4Pfd3Clk
pll4 pfd3.

enumerator kCLOCK_Pll0VcoDivClk
PLL0VCODIV.

enumerator kCLOCK_Pll0Pfd1DivClk
PLL0PFD1DIV.

enumerator kCLOCK_Pll0Pfd2DivClk
PLL0PFD2DIV.

enumerator kCLOCK_Pll1VcoDivClk
PLL1VCODIV.

enumerator kCLOCK_Pll1Pfd1DivClk
PLL1PFD1DIV.

enumerator kCLOCK_Pll1Pfd2DivClk
PLL1PFD2DIV.

enumerator kCLOCK_Pll3VcoDivClk
PLL3VCODIV.

enumerator kCLOCK_Pll3Pfd0Div1Clk
PLL3PFD0DIV1.

enumerator kCLOCK_Pll3Pfd0Div2Clk
PLL3PFD0DIV2.

enumerator kCLOCK_Pll3Pfd1Div1Clk
PLL3PFD1DIV1.

enumerator kCLOCK_Pll3Pfd1Div2Clk
PLL3PFD1DIV2.

enumerator kCLOCK_Pll3Pfd2Div1Clk
PLL3PFD2DIV1.

enumerator kCLOCK_Pll3Pfd2Div2Clk
PLL3PFD2DIV2.

enumerator kCLOCK_Pll3Pfd3Div1Clk
PLL3PFD3DIV1.

enumerator kCLOCK_Pll3Pfd3Div2Clk
PLL3PFD3DIV2.

enumerator kCLOCK_Pll4VcoDivClk
PLL4VCODIV.

enumerator kCLOCK_Pll4Pfd0Div1Clk
PLL4PFD0DIV1.

enumerator kCLOCK_Pll4Pfd0Div2Clk
PLL4PFD0DIV2.

enumerator kCLOCK_Pll4Pfd1Div1Clk
PLL4PFD1DIV1.

enumerator kCLOCK_Pll4Pfd1Div2Clk
PLL4PFD1DIV2.

enumerator kCLOCK_Pll4Pfd2Div1Clk
PLL4PFD2DIV1.

enumerator kCLOCK_Pll4Pfd2Div2Clk
PLL4PFD2DIV2.

enumerator kCLOCK_Pll4Pfd3Div1Clk
PLL4PFD3DIV1.

enumerator kCLOCK_Pll4Pfd3Div2Clk
PLL4PFD3DIV2.

enum _clock_ip_src
Clock source for peripherals that support various clock selections.

Values:

enumerator kCLOCK_IpSrcNone
Clock is off.

enumerator kCLOCK_Pcc0PlatIpSrcSysOscDiv1
PCC0, PCC1 Platform clock selection: kCLOCK_RtdSysOscDiv1Clk

enumerator kCLOCK_Pcc0PlatIpSrcFroDiv1
PCC0, PCC1 Platform clock selection: kCLOCK_RtdFroDiv1Clk

enumerator kCLOCK_Pcc0PlatIpSrcCm33Plat
PCC0, PCC1 Platform clock selection: kCLOCK_Cm33CorePlatClk

enumerator kCLOCK_Pcc0PlatIpSrcFro
PCC0, PCC1 Platform clock selection: kCLOCK_FroClk

enumerator kCLOCK_Pcc0PlatIpSrcPll0Pfd3
PCC0, PCC1 Platform clock selection: kCLOCK_Pll0Pfd3Clk

enumerator kCLOCK_Pcc0BusIpSrcLpo
PCC0, PCC1 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc0BusIpSrcSysOscDiv2
PCC0, PCC1 Bus clock selection: kCLOCK_RtdSysOscDiv2Clk

enumerator kCLOCK_Pcc0BusIpSrcFroDiv2
PCC0, PCC1 Bus clock selection: kCLOCK_RtdFroDiv2Clk

enumerator kCLOCK_Pcc0BusIpSrcCm33Bus
PCC0, PCC1 Bus clock selection: kCLOCK_Cm33BusClk

enumerator kCLOCK_Pcc0BusIpSrcPll1Pfd1Div
PCC0 Bus clock selection: kCLOCK_Pll1Pfd1DivClk

enumerator kCLOCK_Pcc0BusIpSrcPll0Pfd2Div
PCC0, PCC1 Bus clock selection: kCLOCK_Pll0Pfd2DivClk

enumerator kCLOCK_Pcc0BusIpSrcPll0Pfd1Div
PCC0, PCC1 Bus clock selection: kCLOCK_Pll0Pfd1DivClk

enumerator kCLOCK_Pcc1PlatIpSrcSysOscDiv1
PCC0, PCC1 Platform clock selection: kCLOCK_RtdSysOscDiv1Clk

enumerator kCLOCK_Pcc1PlatIpSrcFroDiv1
PCC0, PCC1 Platform clock selection: kCLOCK_RtdFroDiv1Clk

enumerator kCLOCK_Pcc1PlatIpSrcCm33Plat
PCC0, PCC1 Platform clock selection: kCLOCK_Cm33CorePlatClk

enumerator kCLOCK_Pcc1PlatIpSrcFro
PCC0, PCC1 Platform clock selection: kCLOCK_FroClk

enumerator kCLOCK_Pcc1PlatIpSrcPll0Pfd3
PCC0, PCC1 Platform clock selection: kCLOCK_Pll0Pfd3Clk

enumerator kCLOCK_Pcc1BusIpSrcLpo
PCC0, PCC1 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc1BusIpSrcSysOscDiv2
PCC0, PCC1 Bus clock selection: kCLOCK_RtdSysOscDiv2Clk

enumerator kCLOCK_Pcc1BusIpSrcFroDiv2
PCC0, PCC1 Bus clock selection: kCLOCK_RtdFroDiv2Clk

enumerator kCLOCK_Pcc1BusIpSrcCm33Bus
PCC0, PCC1 Bus clock selection: kCLOCK_Cm33BusClk

enumerator kCLOCK_Pcc1BusIpSrcPll1VcoDiv
PCC1 Bus clock selection: kCLOCK_Pll1VcoDivClk

enumerator kCLOCK_Pcc1BusIpSrcPll0Pfd2Div
PCC0, PCC1 Bus clock selection: kCLOCK_Pll0Pfd2DivClk

enumerator kCLOCK_Pcc1BusIpSrcPll0Pfd1Div
PCC0, PCC1 Bus clock selection: kCLOCK_Pll0Pfd1DivClk

enumerator kCLOCK_Pcc2BusIpSrcLpo
PCC2 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc2BusIpSrcSysOscDiv3
PCC2 Bus clock selection: kCLOCK_RtdSysOscDiv3Clk

enumerator kCLOCK_Pcc2BusIpSrcFroDiv3
PCC2 Bus clock selection: kCLOCK_RtdFroDiv3Clk

enumerator kCLOCK_Pcc2BusIpSrcFusionDspBus
PCC2 Bus clock selection: kCLOCK_FusionDspBusClk

enumerator kCLOCK_Pcc2BusIpSrcPll1VcoDiv
PCC2 Bus clock selection: kCLOCK_Pll1VcoDivClk

enumerator kCLOCK_Pcc2BusIpSrcPll0Pfd2Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd2DivClk

enumerator kCLOCK_Pcc2BusIpSrcPll0Pfd1Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd1DivClk

enumerator kCLOCK_Pcc3BusIpSrcLpo
PCC3 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc3BusIpSrcSysOscDiv2
PCC3 Bus clock selection: kCLOCK_AdSysOscDiv2Clk

enumerator kCLOCK_Pcc3BusIpSrcFroDiv2
PCC3 Bus clock selection: kCLOCK_AdFroDiv2Clk

enumerator kCLOCK_Pcc3BusIpSrcXbarBus
PCC3 Bus clock selection: kCLOCK_XbarBusClk

enumerator kCLOCK_Pcc3BusIpSrcPll3Pfd1Div1
PCC3 Bus clock selection: kCLOCK_Pll3Pfd1Div1Clk

enumerator kCLOCK_Pcc3BusIpSrcPll3Pfd0Div2
PCC3 Bus clock selection: kCLOCK_Pll3Pfd0Div2Clk

enumerator kCLOCK_Pcc3BusIpSrcPll3Pfd0Div1
PCC3 Bus clock selection: kCLOCK_Pll3Pfd0Div1Clk

enumerator kCLOCK_Pcc4PlatIpSrcSysOscDiv1
PCC4 Platform clock selection: kCLOCK_AdSysOscDiv1Clk

enumerator kCLOCK_Pcc4PlatIpSrcFroDiv1
PCC4 Platform clock selection: kCLOCK_AdFroDiv1Clk

enumerator kCLOCK_Pcc4PlatIpSrcPll3Pfd3Div2
PCC4 Platform clock selection: kCLOCK_Pll3Pfd3Div2Clk

enumerator kCLOCK_Pcc4PlatIpSrcPll3Pfd3Div1
PCC4 Platform clock selection: kCLOCK_Pll3Pfd3Div1Clk

enumerator kCLOCK_Pcc4PlatIpSrcPll3Pfd2Div2
PCC4 Platform clock selection: kCLOCK_Pll3Pfd2Div2Clk

enumerator kCLOCK_Pcc4PlatIpSrcPll3Pfd2Div1
PCC4 Platform clock selection: kCLOCK_Pll3Pfd2Div1Clk

enumerator kCLOCK_Pcc4PlatIpSrcPll3Pfd1Div2
PCC4 Platform clock selection: kCLOCK_Pll3Pfd1Div2Clk

enumerator kCLOCK_Pcc4BusIpSrcLpo
PCC4 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc4BusIpSrcSysOscDiv2
PCC4 Bus clock selection: kCLOCK_AdSysOscDiv2Clk

enumerator kCLOCK_Pcc4BusIpSrcFroDiv2
PCC4 Bus clock selection: kCLOCK_AdFroDiv2Clk

enumerator kCLOCK_Pcc4BusIpSrcXbarBus
PCC4 Bus clock selection: kCLOCK_XbarBusClk

enumerator kCLOCK_Pcc4BusIpSrcPll3VcoDiv
PCC4 Bus clock selection: kCLOCK_Pll3VcoDivClk

enumerator kCLOCK_Pcc4BusIpSrcPll3Pfd0Div1
PCC4 Bus clock selection: kCLOCK_Pll3Pfd0Div1Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd3Div2
PCC5 Platform clock selection: kCLOCK_Pll4Pfd3Div2Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd2Div2
PCC5 Platform clock selection: kCLOCK_Pll4Pfd2Div2Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd2Div1
PCC5 Platform clock selection: kCLOCK_Pll4Pfd2Div1Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd1Div2
PCC5 Platform clock selection: kCLOCK_Pll4Pfd1Div2Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd1Div1
PCC5 Platform clock selection: kCLOCK_Pll4Pfd1Div1Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd0Div2
PCC5 Platform clock selection: kCLOCK_Pll4Pfd0Div2Clk

enumerator kCLOCK_Pcc5PlatIpSrcPll4Pfd0Div1
PCC5 Platform clock selection: kCLOCK_Pll4Pfd0Div1Clk

enumerator kCLOCK_Pcc5BusIpSrcLpo
PCC5 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_Pcc5BusIpSrcSysOscDiv2
PCC5 Bus clock selection: kCLOCK_LpavSysOscDiv2Clk

enumerator kCLOCK_Pcc5BusIpSrcFroDiv2
PCC5 Bus clock selection: kCLOCK_LpavFroDiv2Clk

enumerator kCLOCK_Pcc5BusIpSrcLpavBus
PCC5 Bus clock selection: kCLOCK_NicLpavBusClk

enumerator kCLOCK_Pcc5BusIpSrcPll4VcoDiv
PCC5 Bus clock selection: kCLOCK_Pll4VcoDivClk

enumerator kCLOCK_Pcc5BusIpSrcPll4Pfd3Div1
PCC5 Bus clock selection: kCLOCK_Pll4Pfd3Div1Clk

enumerator kCLOCK_Cm33SaiClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_Cm33SaiClkSrcRtdAudClk
Common audio clock in RTD, see cgc_rtd_audclk_src_t.

enumerator kCLOCK_Cm33SaiClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_Cm33SaiClkSrcSysOsc
SYSOSC main reference clock to the chip: kCLOCK_SysOscClk.

enumerator kCLOCK_FusionSaiClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_FusionSaiClkSrcExtMclk1
External audio master clock input 1.

enumerator kCLOCK_FusionSaiClkSrcSai3Rx
SAI3 receiver serial bit clock. Only for SAI2.

enumerator kCLOCK_FusionSaiClkSrcSai2Tx
SAI2 transmitter serial bit clock. Only for SAI3.

enumerator kCLOCK_FusionSaiClkSrcSysOsc
SYSOSC main reference clock to the chip: kCLOCK_SysOscClk.

enumerator kCLOCK_FusionMicfilClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk

enumerator kCLOCK_FusionMicfilClkSrcFro24
FRO24: kCLOCK_FroClk/8.

enumerator kCLOCK_FusionMicfilClkSrcSysOsc
SYSOSC main reference clock to the chip: kCLOCK_SysOscClk.

enumerator kCLOCK_FusionMicfilClkSrcExtMclk1
External audio master clock input 1.

enumerator kCLOCK_FusionMicfilClkSrcRtcOsc
kCLOCK_RtcOscClk.

enumerator kCLOCK_FusionMicfilClkSrcLpo
kCLOCK_LpOscClk.

enumerator kCLOCK_FusionTpm2ClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_FusionTpm2ClkSrcExtMclk1
External audio master clock input 1.

enumerator kCLOCK_FusionTpm2ClkSrcLpo
PCC2 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_FusionTpm2ClkSrcSysOscDiv3
PCC2 Bus clock selection: kCLOCK_RtdSysOscDiv3Clk

enumerator kCLOCK_FusionTpm2ClkSrcFroDiv3
PCC2 Bus clock selection: kCLOCK_RtdFroDiv3Clk

enumerator kCLOCK_FusionTpm2ClkSrcFusionDspBus
PCC2 Bus clock selection: kCLOCK_FusionDspBusClk

enumerator kCLOCK_FusionTpm2ClkSrcPll1VcoDiv
PCC2 Bus clock selection: kCLOCK_Pll1VcoDivClk

enumerator kCLOCK_FusionTpm2ClkSrcPll0Pfd2Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd2DivClk

enumerator kCLOCK_FusionTpm2ClkSrcPll0Pfd1Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd1DivClk

enumerator kCLOCK_FusionTpm3ClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_FusionTpm3ClkSrcRtdAudClk
Common audio clock in RTD, see cgc_rtd_audclk_src_t.

enumerator kCLOCK_FusionTpm3ClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_FusionTpm3ClkSrcLpo
PCC2 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_FusionTpm3ClkSrcSysOscDiv3
PCC2 Bus clock selection: kCLOCK_RtdSysOscDiv3Clk

enumerator kCLOCK_FusionTpm3ClkSrcFroDiv3
PCC2 Bus clock selection: kCLOCK_RtdFroDiv3Clk

enumerator kCLOCK_FusionTpm3ClkSrcFusionDspBus
PCC2 Bus clock selection: kCLOCK_FusionDspBusClk

enumerator kCLOCK_FusionTpm3ClkSrcPll1VcoDiv
PCC2 Bus clock selection: kCLOCK_Pll1VcoDivClk

enumerator kCLOCK_FusionTpm3ClkSrcPll0Pfd2Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd2DivClk

enumerator kCLOCK_FusionTpm3ClkSrcPll0Pfd1Div
PCC2 Bus clock selection: kCLOCK_Pll0Pfd1DivClk

enumerator kCLOCK_AdSaiClkSrcPll3Pfd1Div1
PLL3 PFD1 DIV1 in AD: kCLOCK_Pll3Pfd1Div2Clk.

enumerator kCLOCK_AdSaiClkSrcAdAudClk
Common audio clock in AD, see cgc_ad_audclk_src_t.

enumerator kCLOCK_AdSaiClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_AdSaiClkSrcSysOsc
SYSOSC main reference clock to the chip: kCLOCK_SysOscClk.

enumerator kCLOCK_AdTpm67ClkSrcPll3Pfd1Div1
PLL3 PFD1 DIV1 in AD: kCLOCK_Pll3Pfd1Div2Clk.

enumerator kCLOCK_AdTpm67ClkSrcAdAudClk
Common audio clock in AD, see cgc_ad_audclk_src_t.

enumerator kCLOCK_AdTpm67ClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_AdTpm67ClkSrcLpo
PCC4 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_AdTpm67ClkSrcSysOscDiv2
PCC4 Bus clock selection: kCLOCK_AdSysOscDiv2Clk

enumerator kCLOCK_AdTpm67ClkSrcFroDiv2
PCC4 Bus clock selection: kCLOCK_AdFroDiv2Clk

enumerator kCLOCK_AdTpm67ClkSrcXbarBus
PCC4 Bus clock selection: kCLOCK_XbarBusClk

enumerator kCLOCK_AdTpm67ClkSrcPll3VcoDiv
PCC4 Bus clock selection: kCLOCK_Pll3VcoDivClk

enumerator kCLOCK_AdTpm67ClkSrcPll3Pfd0Div1
PCC4 Bus clock selection: kCLOCK_Pll3Pfd0Div1Clk

enumerator kCLOCK_LpavSaiClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_LpavSaiClkSrcPll3Pfd1Div1
PLL3 PFD1 DIV1 in AD: kCLOCK_Pll3Pfd1Div1Clk.

enumerator kCLOCK_LpavSaiClkSrcRtdAudClk
Common audio clock in RTD, see cgc_rtd_audclk_src_t.

enumerator kCLOCK_LpavSaiClkSrcAdAudClk
Common audio clock in AD, see cgc_ad_audclk_src_t.

enumerator kCLOCK_LpavSaiClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_LpavSaiClkSrcSysOsc
SYSOSC main reference clock to the chip.

enumerator kCLOCK_LpavTpm8ClkSrcPll1Pfd2Div
PLL1 PFD2 DIV in RTD: kCLOCK_Pll1Pfd2DivClk.

enumerator kCLOCK_LpavTpm8ClkSrcPll3Pfd1Div1
PLL3 PFD1 DIV1 in AD: kCLOCK_Pll3Pfd1Div1Clk.

enumerator kCLOCK_LpavTpm8ClkSrcRtdAudClk
Common audio clock in RTD, see cgc_rtd_audclk_src_t.

enumerator kCLOCK_LpavTpm8ClkSrcAdAudClk
Common audio clock in AD, see cgc_ad_audclk_src_t.

enumerator kCLOCK_LpavTpm8ClkSrcLpavAudClk
Common audio clock in LPAV, see cgc_lpav_audclk_src_t.

enumerator kCLOCK_LpavTpm8ClkSrcLpo
PCC5 Bus clock selection: kCLOCK_LpOscClk

enumerator kCLOCK_LpavTpm8ClkSrcSysOscDiv2
PCC5 Bus clock selection: kCLOCK_LpavSysOscDiv2Clk

enumerator kCLOCK_LpavTpm8ClkSrcFroDiv2
PCC5 Bus clock selection: kCLOCK_LpavFroDiv2Clk

enumerator kCLOCK_LpavTpm8ClkSrcLpavBus
PCC5 Bus clock selection: kCLOCK_NicLpavBusClk

enumerator kCLOCK_LpavTpm8ClkSrcPll4VcoDiv
PCC5 Bus clock selection: kCLOCK_Pll4VcoDivClk

enumerator kCLOCK_LpavTpm8ClkSrcPll4Pfd3Div1
PCC5 Bus clock selection: kCLOCK_Pll4Pfd3Div1Clk

enum _clock_lptmr_src
Clock source for LPTMR.

Values:

enumerator kCLOCK_LptmrSrcLPO1M
LPO 1MHz clock.

enumerator kCLOCK_LptmrSrcRtc1K
RTC 1KHz clock.

enumerator kCLOCK_LptmrSrcRtc32K
RTC 32KHz clock.

enumerator kCLOCK_LptmrSrcSysOsc
system OSC clock.

enum _clock_ip_name
Peripheral clock name difinition used for clock gate, clock source and clock divider setting. [31:2] is defined as the corresponding register address. [1:1] is used as indicator of existing of PCS. [0:0] is used as indicator of existing of PCD/FRAC.

Values:

enumerator kCLOCK_IpInvalid

enumerator kCLOCK_Dma0

enumerator kCLOCK_Dma0Ch0

enumerator kCLOCK_Dma0Ch1

enumerator kCLOCK_Dma0Ch2

enumerator kCLOCK_Dma0Ch3

enumerator kCLOCK_Dma0Ch4

enumerator kCLOCK_Dma0Ch5

enumerator kCLOCK_Dma0Ch6

enumerator kCLOCK_Dma0Ch7

enumerator kCLOCK_Dma0Ch8

enumerator kCLOCK_Dma0Ch9

enumerator kCLOCK_Dma0Ch10

enumerator kCLOCK_Dma0Ch11

enumerator kCLOCK_Dma0Ch12

enumerator kCLOCK_Dma0Ch13

enumerator kCLOCK_Dma0Ch14

enumerator kCLOCK_Dma0Ch15

enumerator kCLOCK_Dma0Ch16

enumerator kCLOCK_Dma0Ch17

enumerator kCLOCK_Dma0Ch18

enumerator kCLOCK_Dma0Ch19

enumerator kCLOCK_Dma0Ch20

enumerator kCLOCK_Dma0Ch21

enumerator kCLOCK_Dma0Ch22

enumerator kCLOCK_Dma0Ch23

enumerator kCLOCK_Dma0Ch24

enumerator kCLOCK_Dma0Ch25

enumerator kCLOCK_Dma0Ch26

enumerator kCLOCK_Dma0Ch27

enumerator kCLOCK_Dma0Ch28

enumerator kCLOCK_Dma0Ch29

enumerator kCLOCK_Dma0Ch30

enumerator kCLOCK_Dma0Ch31

enumerator kCLOCK_Mu0A

enumerator kCLOCK_Mu1A

enumerator kCLOCK_Mu2A

enumerator kCLOCK_Syspm0

enumerator kCLOCK_Wuu0

enumerator kCLOCK_UpowerMuARtd

enumerator kCLOCK_Wdog0

enumerator kCLOCK_Wdog1

enumerator kCLOCK_TrdcMgr

enumerator kCLOCK_TrdcMbc0

enumerator kCLOCK_TrdcMbc1

enumerator kCLOCK_TrdcMbc2

enumerator kCLOCK_TrdcMbc3

enumerator kCLOCK_TrdcMrc

enumerator kCLOCK_Sema420

enumerator kCLOCK_Bbnsm

enumerator kCLOCK_Flexspi0

enumerator kCLOCK_Lpit0

enumerator kCLOCK_Flexio0

enumerator kCLOCK_I3c0

enumerator kCLOCK_Lpspi0

enumerator kCLOCK_Lpspi1

enumerator kCLOCK_Adc0

enumerator kCLOCK_Cmp0

enumerator kCLOCK_Cmp1

enumerator kCLOCK_Dac0

enumerator kCLOCK_Dac1

enumerator kCLOCK_Cm33Cache

enumerator kCLOCK_SentinelLpuart

enumerator kCLOCK_PowersysWdog

enumerator kCLOCK_Ocotp

enumerator kCLOCK_Tpiu

enumerator kCLOCK_Swo

enumerator kCLOCK_Flexspi1

enumerator kCLOCK_Lptmr0

enumerator kCLOCK_Lptmr1

enumerator kCLOCK_Tpm0

enumerator kCLOCK_Tpm1

enumerator kCLOCK_Lpi2c0

enumerator kCLOCK_Lpi2c1

enumerator kCLOCK_Lpuart0

enumerator kCLOCK_Lpuart1

enumerator kCLOCK_Sai0

enumerator kCLOCK_Sai1

enumerator kCLOCK_DigFiltA

enumerator kCLOCK_DigFiltB

enumerator kCLOCK_Adc1

enumerator kCLOCK_Flexcan

enumerator kCLOCK_RgpioA

enumerator kCLOCK_RgpioB

enumerator kCLOCK_RgpioC

enumerator kCLOCK_Mu1B

enumerator kCLOCK_Wdog2

enumerator kCLOCK_Tpm2

enumerator kCLOCK_Tpm3

enumerator kCLOCK_Mrt

enumerator kCLOCK_Lpi2c2

enumerator kCLOCK_Lpi2c3

enumerator kCLOCK_I3c1

enumerator kCLOCK_Lpuart2

enumerator kCLOCK_Lpuart3

enumerator kCLOCK_Lpspi2

enumerator kCLOCK_Lpspi3

enumerator kCLOCK_Sai2

enumerator kCLOCK_Sai3

enumerator kCLOCK_Micfil

enumerator kCLOCK_Dma1

enumerator kCLOCK_Dma1Ch0

enumerator kCLOCK_Dma1Ch1

enumerator kCLOCK_Dma1Ch2

enumerator kCLOCK_Dma1Ch3

enumerator kCLOCK_Dma1Ch4

enumerator kCLOCK_Dma1Ch5

enumerator kCLOCK_Dma1Ch6

enumerator kCLOCK_Dma1Ch7

enumerator kCLOCK_Dma1Ch8

enumerator kCLOCK_Dma1Ch9

enumerator kCLOCK_Dma1Ch10

enumerator kCLOCK_Dma1Ch11

enumerator kCLOCK_Dma1Ch12

enumerator kCLOCK_Dma1Ch13

enumerator kCLOCK_Dma1Ch14

enumerator kCLOCK_Dma1Ch15

enumerator kCLOCK_Dma1Ch16

enumerator kCLOCK_Dma1Ch17

enumerator kCLOCK_Dma1Ch18

enumerator kCLOCK_Dma1Ch19

enumerator kCLOCK_Dma1Ch20

enumerator kCLOCK_Dma1Ch21

enumerator kCLOCK_Dma1Ch22

enumerator kCLOCK_Dma1Ch23

enumerator kCLOCK_Dma1Ch24

enumerator kCLOCK_Dma1Ch25

enumerator kCLOCK_Dma1Ch26

enumerator kCLOCK_Dma1Ch27

enumerator kCLOCK_Dma1Ch28

enumerator kCLOCK_Dma1Ch29

enumerator kCLOCK_Dma1Ch30

enumerator kCLOCK_Dma1Ch31

enumerator kCLOCK_Mu0B

enumerator kCLOCK_Mu3A

enumerator kCLOCK_Wuu1

enumerator kCLOCK_Syspm1

enumerator kCLOCK_UpowerMuAApd

enumerator kCLOCK_Wdog3

enumerator kCLOCK_Wdog4

enumerator kCLOCK_Caam

enumerator kCLOCK_XrdcMgr

enumerator kCLOCK_Sema421

enumerator kCLOCK_Lpit1

enumerator kCLOCK_Tpm4

enumerator kCLOCK_Tpm5

enumerator kCLOCK_Flexio1

enumerator kCLOCK_I3c2

enumerator kCLOCK_Lpi2c4

enumerator kCLOCK_Lpi2c5

enumerator kCLOCK_Lpuart4

enumerator kCLOCK_Lpuart5

enumerator kCLOCK_Lpspi4

enumerator kCLOCK_Lpspi5

enumerator kCLOCK_Flexspi2

enumerator kCLOCK_Tpm6

enumerator kCLOCK_Tpm7

enumerator kCLOCK_Lpi2c6

enumerator kCLOCK_Lpi2c7

enumerator kCLOCK_Lpuart6

enumerator kCLOCK_Lpuart7

enumerator kCLOCK_Sai4

enumerator kCLOCK_Sai5

enumerator kCLOCK_DigFiltE

enumerator kCLOCK_DigFiltF

enumerator kCLOCK_Usdhc0

enumerator kCLOCK_Usdhc1

enumerator kCLOCK_Usdhc2

enumerator kCLOCK_Usb0

enumerator kCLOCK_Usb0Phy

enumerator kCLOCK_Usb1

enumerator kCLOCK_Usb1Phy

enumerator kCLOCK_UsbXbar

enumerator kCLOCK_Enet

enumerator kCLOCK_RgpioE

enumerator kCLOCK_RgpioF

enumerator kCLOCK_Dma2

enumerator kCLOCK_Dma2Ch0

enumerator kCLOCK_Dma2Ch1

enumerator kCLOCK_Dma2Ch2

enumerator kCLOCK_Dma2Ch3

enumerator kCLOCK_Dma2Ch4

enumerator kCLOCK_Dma2Ch5

enumerator kCLOCK_Dma2Ch6

enumerator kCLOCK_Dma2Ch7

enumerator kCLOCK_Dma2Ch8

enumerator kCLOCK_Dma2Ch9

enumerator kCLOCK_Dma2Ch10

enumerator kCLOCK_Dma2Ch11

enumerator kCLOCK_Dma2Ch12

enumerator kCLOCK_Dma2Ch13

enumerator kCLOCK_Dma2Ch14

enumerator kCLOCK_Dma2Ch15

enumerator kCLOCK_Dma2Ch16

enumerator kCLOCK_Dma2Ch17

enumerator kCLOCK_Dma2Ch18

enumerator kCLOCK_Dma2Ch19

enumerator kCLOCK_Dma2Ch20

enumerator kCLOCK_Dma2Ch21

enumerator kCLOCK_Dma2Ch22

enumerator kCLOCK_Dma2Ch23

enumerator kCLOCK_Dma2Ch24

enumerator kCLOCK_Dma2Ch25

enumerator kCLOCK_Dma2Ch26

enumerator kCLOCK_Dma2Ch27

enumerator kCLOCK_Dma2Ch28

enumerator kCLOCK_Dma2Ch29

enumerator kCLOCK_Dma2Ch30

enumerator kCLOCK_Dma2Ch31

enumerator kCLOCK_Mu2B

enumerator kCLOCK_Mu3B

enumerator kCLOCK_Sema422

enumerator kCLOCK_Tpm8

enumerator kCLOCK_Sai6

enumerator kCLOCK_Sai7

enumerator kCLOCK_Spdif

enumerator kCLOCK_Isi

enumerator kCLOCK_CsiRegs

enumerator kCLOCK_Csi

enumerator kCLOCK_Dsi

enumerator kCLOCK_Wdog5

enumerator kCLOCK_Epdc

enumerator kCLOCK_Pxp

enumerator kCLOCK_Gpu2d

enumerator kCLOCK_Gpu3d

enumerator kCLOCK_Dcnano

enumerator kCLOCK_Lpddr4

enumerator kCLOCK_CsiClkUi

enumerator kCLOCK_CsiClkEsc

enumerator kCLOCK_RgpioD

enumerator kCLOCK_Mqs0

enumerator kCLOCK_Mqs1

CGC status return codes.

Values:

enumerator kStatus_CGC_Busy
Clock is busy.

enumerator kStatus_CGC_InvalidSrc
Invalid source.

enum _cgc_sys_clk

CGC system clock type.

Values:

enumerator kCGC_SysClkSlow
System slow clock.

enumerator kCGC_SysClkBus
Bus clock.

enumerator kCGC_SysClkCorePlat
Core/Platform clock.

enumerator kCGC_SysClkHifi4
Hifi4 core clock.

enumerator kCGC_SysClkNicHifi
Hifi4 platform clock.

enumerator kCGC_SysClkLpavAxi
LPAV AXI clock.

enumerator kCGC_SysClkLpavAhb
LPAV AHB clock.

enumerator kCGC_SysClkLpavBus
LPAV Bus clock.

enum _cgc_rtd_sys_clk_src
CGC system clock source for RTD.

Values:

enumerator kCGC_RtdSysClkSrcFro
FRO192.

enumerator kCGC_RtdSysClkSrcPll0Pfd0
PLL0 PFD0.

enumerator kCGC_RtdSysClkSrcPll1Pfd0
PLL1 PFD0.

enumerator kCGC_RtdSysClkSrcSysOsc
System OSC.

enumerator kCGC_RtdSysClkSrcRtcOsc
RTC OSC.

enumerator kCGC_RtdSysClkSrcLvds
LVDS XCVR.

enumerator kCGC_RtdSysClkSrcPll0
PLL0.

enum _cgc_nic_sys_clk_src
CGC system clock source for NIC in AD.

Values:

enumerator kCGC_NicSysClkSrcFro
FRO192.

enumerator kCGC_NicSysClkSrcPll3Pfd0
PLL0 PFD0.

enumerator kCGC_NicSysClkSrcSysOsc
System OSC.

enumerator kCGC_NicSysClkSrcLvds
LVDS XCVR.

enum _cgc_hifi_sys_clk_src

CGC system clock source for HIFI4 in LPAV.

Values:

enumerator kCGC_HifiSysClkSrcFro
FRO192.

enumerator kCGC_HifiSysClkSrcPll4
PLL4.

enumerator kCGC_HifiSysClkSrcPll4Pfd0
PLL4 PFD0.

enumerator kCGC_HifiSysClkSrcSysOsc
System OSC.

enumerator kCGC_HifiSysClkSrcLvds
LVDS XCVR.

enum _cgc_lpav_sys_clk_src

CGC system clock source for LPAV.

Values:

enumerator kCGC_LpavSysClkSrcFro
FRO192.

enumerator kCGC_LpavSysClkSrcPll4Pfd1
PLL4 PFD1.

enumerator kCGC_LpavSysClkSrcSysOsc
System OSC.

enumerator kCGC_LpavSysClkSrcLvds
LVDS XCVR.

enum _cgc_ddr_sys_clk_src

CGC system clock source for DDR.

Values:

enumerator kCGC_DdrSysClkSrcFro
FRO192.

enumerator kCGC_DdrSysClkSrcPll4Pfd1
PLL4 PFD1.

enumerator kCGC_DdrSysClkSrcSysOsc
System OSC.

enumerator kCGC_DdrSysClkSrcLvds
LVDS XCVR.

enum _clock_rtd_clkout_src

CGC clock out configuration (CLKOUTCFG) in RTD.

Values:

enumerator kClockRtdClkoutSelCm33Core
CGC CM33 Core/Platform clock.

enumerator kClockRtdClkoutSelCm33Bus
CGC CM33 Bus clock.

enumerator kClockRtdClkoutSelCm33Slow
CGC CM33 Slow clock.

enumerator kClockRtdClkoutSelFusionDspCore
CGC Fusion DSP Core/Platform clock.

enumerator kClockRtdClkoutSelFusionDspBus
CGC Fusion DSP Bus clock.

enumerator kClockRtdClkoutSelFusionDspSlow
CGC Fusion DSP Slow clock.

enumerator kClockRtdClkoutSelFro48
FRO48: kCLOCK_FroClk/4.

enumerator kClockRtdClkoutSelPll0VcoDiv
PLL0 VCO DIV: kCLOCK_Pll0VcoDivClk.

enumerator kClockRtdClkoutSelPll1VcoDiv
PLL1 VCO DIV: kCLOCK_Pll1VcoDivClk.

enumerator kClockRtdClkoutSelSysOsc
System OSC.

enumerator kClockRtdClkoutSelLpOsc
CGC LPOSC clock.

enum __clock__lpav__clkout__src
CGC clock out configuration (CLKOUTCFG) in LPAV.

Values:

enumerator kClockLpavClkoutSelHifi4
CGC HIFI4 core clock.

enumerator kClockLpavClkoutSelNicHifi
CGC HIFI4 platform clock.

enumerator kClockLpavClkoutSelLpavAxi
CGC NIC LPAV AXI clock.

enumerator kClockLpavClkoutSelLpavAhb
CGC NIC LPAV AHB clock.

enumerator kClockLpavClkoutSelLpavBus
CGC LPAV Bus clock.

enumerator kClockLpavClkoutSelDdr
CGC DDR clock.

enumerator kClockLpavClkoutSelFro48
FRO48: kCLOCK_FroClk/4.

enumerator kClockLpavClkoutSelPll4VcoDiv
PLL4 VCO DIV: kCLOCK_Pll4VcoDivClk.

enumerator kClockLpavClkoutSelSysOsc
System OSC.

enumerator kClockLpavClkoutSelLpOsc
CGC LPOSC clock.

enum _cgc_async_clk

CGC asynchronous clock type.

Values:

enumerator kCGC_AsyncDiv1Clk

The async clock by DIV1, e.g. SOSCDIV1_CLK, FRODIV1_CLK.

enumerator kCGC_AsyncDiv2Clk

The async clock by DIV2, e.g. SOSCDIV2_CLK, FRODIV2_CLK.

enumerator kCGC_AsyncDiv3Clk

The async clock by DIV3, e.g. SOSCDIV3_CLK, FRODIV3_CLK.

enumerator kCGC_AsyncVcoClk

The async clock by PLL VCO DIV.

enumerator kCGC_AsyncPfd0Div1Clk

The async clock by PLL PFD0 DIV1.

enumerator kCGC_AsyncPfd0Div2Clk

The async clock by PLL PFD0 DIV2.

enumerator kCGC_AsyncPfd1Div1Clk

The async clock by PLL PFD1 DIV or DIV1.

enumerator kCGC_AsyncPfd1Div2Clk

The async clock by PLL PFD1 DIV2.

enumerator kCGC_AsyncPfd2Div1Clk

The async clock by PLL PFD2 DIV or DIV1.

enumerator kCGC_AsyncPfd2Div2Clk

The async clock by PLL PFD2 DIV2.

enumerator kCGC_AsyncPfd3Div1Clk

The async clock by PLL PFD3 DIV1.

enumerator kCGC_AsyncPfd3Div2Clk

The async clock by PLL PFD3 DIV2.

enum _cgc_sosc_monitor_mode

CGC system OSC monitor mode.

Values:

enumerator kCGC_SysOscMonitorDisable

Monitor disabled.

enumerator kCGC_SysOscMonitorInt

Interrupt when the system OSC error is detected.

enumerator kCGC_SysOscMonitorReset

Reset when the system OSC error is detected.

enum _cgc_sosc_mode

OSC work mode.

Values:

enumerator kCGC_SysOscModeExt

Use external clock.

enumerator kCGC_SysOscModeOscLowPower
Oscillator low power.

enumerator kCGC_SysOscModeOscHighGain
Oscillator high gain.

enum _cgc_sosc_enable_mode
OSC enable mode.

Values:

enumerator kCGC_SysOscEnableInDeepSleep
Enable OSC in deep sleep mode.

enumerator kCGC_SysOscEnableInPowerDown
Enable OSC in low power mode.

enum _cgc_fro_enable_mode
FRO enable mode.

Values:

enumerator kCGC_FroEnableInDeepSleep
Enable FRO in deep sleep mode.

enum _cgc_lposc_enable_mode
LPOSC enable mode.

Values:

enumerator kCGC_LposcEnableInDeepSleep
Enable OSC in deep sleep mode.

enumerator kCGC_LposcEnableInPowerDown
Enable OSC in low power mode.

enum _cgc_pll_src
CGC PLL clock source.

Values:

enumerator kCGC_PllSrcSysOsc
PLL clock source is system OSC.

enumerator kCGC_PllSrcFro24M
PLL clock source is FRO 24M.

enum _cgc_pll_enable_mode
PLL enable mode.

Values:

enumerator kCGC_PllEnable
Enable PLL clock.

enumerator kCGC_PllEnableInDeepSleep
Enable PLL in deep sleep mode.

enum _cgc_pll_pfd_clkout
CGC PLL PFD clouk out select.

Values:

enumerator kCGC_PllPfd0Clk
PFD0 output clock selected.

enumerator kCGC_PllPfd1Clk
PFD1 output clock selected.

enumerator kCGC_PllPfd2Clk
PFD2 output clock selected.

enumerator kCGC_PllPfd3Clk
PFD3 output clock selected.

enum _cgc_pll0_mult
PLL0 Multiplication Factor.

Values:

enumerator kCGC_Pll0Mult15
Divide by 15

enumerator kCGC_Pll0Mult16
Divide by 16

enumerator kCGC_Pll0Mult20
Divide by 20

enumerator kCGC_Pll0Mult22
Divide by 22

enumerator kCGC_Pll0Mult25
Divide by 25

enumerator kCGC_Pll0Mult30
Divide by 30

enum _cgc_rosc_monitor_mode
CGC RTC OSC monitor mode.

Values:

enumerator kCGC_RtcOscMonitorDisable
Monitor disabled.

enumerator kCGC_RtcOscMonitorInt
Interrupt when the RTC OSC error is detected.

enumerator kCGC_RtcOscMonitorReset
Reset when the RTC OSC error is detected.

enum _cgc_pll1_mult
PLL1 Multiplication Factor.

Values:

enumerator kCGC_Pll1Mult16
Divide by 16

enumerator kCGC_Pll1Mult17
Divide by 17

enumerator kCGC_Pll1Mult20
Divide by 20

enumerator kCGC_Pll1Mult22
Divide by 22

enumerator kCGC_Pll1Mult27
Divide by 27

enumerator kCGC_Pll1Mult33
Divide by 33

enum _cgc_pll4_mult
PLL4 Multiplication Factor.

Values:

enumerator kCGC_Pll4Mult16
Divide by 16

enumerator kCGC_Pll4Mult17
Divide by 17

enumerator kCGC_Pll4Mult20
Divide by 20

enumerator kCGC_Pll4Mult22
Divide by 22

enumerator kCGC_Pll4Mult27
Divide by 27

enumerator kCGC_Pll4Mult33
Divide by 33

enum _cgc_rtd_audclk_src
AUD_CLK0 source in RTD.

Values:

enumerator kCGC_RtdAudClkSrcExtMclk0
External audio master clock input 0 from pin.

enumerator kCGC_RtdAudClkSrcExtMclk1
External audio master clock input 1 from pin.

enumerator kCGC_RtdAudClkSrcSai0RxBclk
SAI0 receiver serial bit clock.

enumerator kCGC_RtdAudClkSrcSai0TxBclk
SAI0 transmitter serial bit clock.

enumerator kCGC_RtdAudClkSrcSai1RxBclk
SAI1 receiver serial bit clock.

enumerator kCGC_RtdAudClkSrcSai1TxBclk
SAI1 transmitter serial bit clock.

enumerator kCGC_RtdAudClkSrcSai2RxBclk
SAI2 receiver serial bit clock.

enumerator kCGC_RtdAudClkSrcSai2TxBclk
SAI2 transmitter serial bit clock.

enumerator kCGC_RtdAudClkSrcSai3RxBclk
SAI3 receiver serial bit clock.

enumerator kCGC_RtdAudClkSrcSai3TxBclk
SAI3 transmitter serial bit clock.

enum _cgc_ad_audclk_src

AUD_CLK1 source in AD.

Values:

enumerator kCGC_AdAudClkSrcExtMclk2

External audio master clock input 2 from pin.

enumerator kCGC_AdAudClkSrcSai4RxBclk

SAI4 receiver serial bit clock.

enumerator kCGC_AdAudClkSrcSai4TxBclk

SAI4 transmitter serial bit clock.

enumerator kCGC_AdAudClkSrcSai5RxBclk

SAI5 receiver serial bit clock.

enumerator kCGC_AdAudClkSrcSai5TxBclk

SAI5 transmitter serial bit clock.

enum _cgc_lpav_audclk_src

AUD_CLK2 source in LPAV.

Values:

enumerator kCGC_LpavAudClkSrcExtMclk3

External audio master clock input 3 from pin.

enumerator kCGC_LpavAudClkSrcSai6RxBclk

SAI6 receiver serial bit clock.

enumerator kCGC_LpavAudClkSrcSai6TxBclk

SAI6 transmitter serial bit clock.

enumerator kCGC_LpavAudClkSrcSai7RxBclk

SAI7 receiver serial bit clock.

enumerator kCGC_LpavAudClkSrcSai7TxBclk

SAI7 transmitter serial bit clock.

enumerator kCGC_LpavAudClkSrcSpdifRx

SPDIF receiver clock.

typedef enum *_clock_name* clock_name_t

Clock name used to get clock frequency.

typedef enum *_clock_ip_src* clock_ip_src_t

Clock source for peripherals that support various clock selections.

typedef enum *_clock_lptmr_src* clock_lptmr_src_t

Clock source for LPTMR.

typedef enum *_clock_ip_name* clock_ip_name_t

Peripheral clock name difinition used for clock gate, clock source and clock divider setting. [31:2] is defined as the corresponding register address. [1:1] is used as indicator of existing of PCS. [0:0] is used as indicator of existing of PCD/FRAC.

typedef enum *_cgc_sys_clk* cgc_sys_clk_t

CGC system clock type.

typedef enum *_cgc_rtd_sys_clk_src* cgc_rtd_sys_clk_src_t

CGC system clock source for RTD.

typedef enum *_cgc_nic_sys_clk_src* cgc_nic_sys_clk_src_t
CGC system clock source for NIC in AD.

typedef enum *_cgc_hifi_sys_clk_src* cgc_hifi_sys_clk_src_t
CGC system clock source for HIFI4 in LPAV.

typedef enum *_cgc_lpav_sys_clk_src* cgc_lpav_sys_clk_src_t
CGC system clock source for LPAV.

typedef enum *_cgc_ddr_sys_clk_src* cgc_ddr_sys_clk_src_t
CGC system clock source for DDR.

typedef struct *_cgc_rtd_sys_clk_config* cgc_rtd_sys_clk_config_t
CGC system clock configuration for RTD.

typedef struct *_cgc_hifi_sys_clk_config* cgc_hifi_sys_clk_config_t
CGC system clock configuration for HIFI4 DSP.

typedef struct *_cgc_lpav_sys_clk_config* cgc_lpav_sys_clk_config_t
CGC system clock configuration for LPAV.

typedef struct *_cgc_ddr_sys_clk_config* cgc_ddr_sys_clk_config_t
CGC system clock configuration for DDR in LPAV.

typedef enum *_clock_rtd_clkout_src* clock_rtd_clkout_src_t
CGC clock out configuration (CLKOUTCFG) in RTD.

typedef enum *_clock_lpav_clkout_src* clock_lpav_clkout_src_t
CGC clock out configuration (CLKOUTCFG) in LPAV.

typedef enum *_cgc_async_clk* cgc_async_clk_t
CGC asynchronous clock type.

typedef enum *_cgc_sosc_monitor_mode* cgc_sosc_monitor_mode_t
CGC system OSC monitor mode.

typedef enum *_cgc_sosc_mode* cgc_sosc_mode_t
OSC work mode.

typedef struct *_cgc_sosc_config* cgc_sosc_config_t
CGC system OSC configuration.

typedef struct *_cgc_fro_config* cgc_fro_config_t
CGC FRO clock configuration.

typedef struct *_cgc_lposc_config* cgc_lposc_config_t
CGC LPOSC clock configuration.

typedef enum *_cgc_pll_src* cgc_pll_src_t
CGC PLL clock source.

typedef enum *_cgc_pll_pfd_clkout* cgc_pll_pfd_clkout_t
CGC PLL PFD clouk out select.

typedef enum *_cgc_pll0_mult* cgc_pll0_mult_t
PLL0 Multiplication Factor.

typedef struct *_cgc_pll0_config* cgc_pll0_config_t
CGC PLL0 configuration.

typedef enum *_cgc_rosc_monitor_mode* cgc_rosc_monitor_mode_t
CGC RTC OSC monitor mode.

typedef struct *_cgc_rosc_config* cgc_rosc_config_t

CGC RTC OSC configuration.

typedef enum *_cgc_pll1_mult* cgc_pll1_mult_t

PLL1 Multiplication Factor.

typedef struct *_cgc_pll1_config* cgc_pll1_config_t

CGC PLL1 configuration.

typedef enum *_cgc_pll4_mult* cgc_pll4_mult_t

PLL4 Multiplication Factor.

typedef struct *_cgc_pll4_config* cgc_pll4_config_t

CGC PLL4 configuration.

typedef enum *_cgc_rtd_audclk_src* cgc_rtd_audclk_src_t

AUD_CLK0 source in RTD.

typedef enum *_cgc_ad_audclk_src* cgc_ad_audclk_src_t

AUD_CLK1 source in AD.

typedef enum *_cgc_lpav_audclk_src* cgc_lpav_audclk_src_t

AUD_CLK2 source in LPAV.

volatile uint32_t g_xtal0Freq

External XTAL (SYSOSC) clock frequency.

The XTAL (SYSOSC) clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtalFreq to set the value in the clock driver. For example, if XTAL is 24 MHz:

```
CLOCK_InitSysOsc(...);
CLOCK_SetXtalFreq(24000000);
```

This is important for the multicore platforms where only one core needs to set up the OSC/SYSOSC using CLOCK_InitSysOsc. All other cores need to call the CLOCK_SetXtalFreq to get a valid clock frequency.

volatile uint32_t g_xtal32Freq

External XTAL32/EXTAL32 clock frequency.

The XTAL32/EXTAL32 clock frequency in Hz. When the clock is set up, use the function CLOCK_SetXtal32Freq to set the value in the clock driver.

This is important for the multicore platforms where only one core needs to set up the clock. All other cores need to call the CLOCK_SetXtal32Freq to get a valid clock frequency.

volatile uint32_t g_lvdsFreq

External LVDS pad clock frequency.

The LVDS pad clock frequency in Hz. When the clock is set up, use the function CLOCK_SetLvdsFreq to set the value in the clock driver.

volatile uint32_t g_mclkFreq[4]

External MCLK pad clock frequency.

The MCLK pad clock frequency in Hz. When the clock is set up, use the function CLOCK_SetMclkFreq to set the value in the clock driver.

volatile uint32_t g_rxBclkFreq[8]

External RX_BCLK pad clock frequency.

The RX_BCLK pad clock frequency in Hz. When the clock is set up, use the function CLOCK_SetRxBclkFreq to set the value in the clock driver.

volatile uint32_t g_txBclkFreq[8]

External TX_BCLK pad clock frequency.

The TX_BCLK pad clock frequency in Hz. When the clock is set up, use the function CLOCK_SetTxBclkFreq to set the value in the clock driver.

volatile uint32_t g_spdifRxFreq

Recovered SPDIF_RX clock frequency.

The SPDIF_RX clock frequency in Hz. When the clock is sampled, use the function CLOCK_SetSpdifRxFreq to set the value in the clock driver.

static inline void CLOCK_EnableClock(*clock_ip_name_t* name)

Enable the clock for specific IP.

Parameters

- name – Which clock to enable, see clock_ip_name_t.

static inline void CLOCK_DisableClock(*clock_ip_name_t* name)

Disable the clock for specific IP.

Parameters

- name – Which clock to disable, see clock_ip_name_t.

static inline bool CLOCK_IsEnabledByOtherCore(*clock_ip_name_t* name)

Check whether the clock is already enabled and configured by any other core.

Parameters

- name – Which peripheral to check, see clock_ip_name_t.

Returns

True if clock is already enabled, otherwise false.

void CLOCK_SetIpSrc(*clock_ip_name_t* name, *clock_ip_src_t* src)

Set the clock source for specific IP module.

Set the clock source for specific IP, not all modules need to set the clock source, should only use this function for the modules need source setting.

Parameters

- name – Which peripheral to check, see clock_ip_name_t.
- src – Clock source to set.

void CLOCK_SetIpSrcDiv(*clock_ip_name_t* name, *clock_ip_src_t* src, uint8_t divValue, uint8_t fracValue)

Set the clock source and divider for specific IP module.

Set the clock source and divider for specific IP, not all modules need to set the clock source and divider, should only use this function for the modules need source and divider setting.

Divider output clock = Divider input clock x [(fracValue+1)/(divValue+1)].

Parameters

- name – Which peripheral to check, see clock_ip_name_t.
- src – Clock source to set.
- divValue – The divider value.
- fracValue – The fraction multiply value.

static inline void CLOCK_SetRtdAudClkSrc(*cgc_rtd_audclk_src_t* src)

Set the AUD_CLK0 source in RTD. NOTE: The audio clock pin frequency is decided by SAI, but clock driver cannot depend on SAI driver to get its pin frequencies, user need to explicitly set the MCLK/BCLK frequencies if other modules use the AUD_CLK0 source and need to get correct frequency.

Parameters

- src – Clock source to set.

static inline void CLOCK_SetAdAudClkSrc(*cgc_ad_audclk_src_t* src)

Set the AUD_CLK1 source in AD. NOTE: The audio clock pin frequency is decided by SAI, but clock driver cannot depend on SAI driver to get its pin frequencies, user need to explicitly set the MCLK/BCLK frequencies if other modules use the AUD_CLK1 source and need to get correct frequency.

Parameters

- src – Clock source to set.

static inline void CLOCK_SetLpavAudClkSrc(*cgc_lpav_audclk_src_t* src)

Set the AUD_CLK2 source in LPAV. NOTE: The audio clock pin frequency is decided by SAI, but clock driver cannot depend on SAI driver to get its pin frequencies, user need to explicitly set the MCLK/BCLK frequencies if other modules use the AUD_CLK2 source and need to get correct frequency.

Parameters

- src – Clock source to set.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Gets the clock frequency for a specific clock name.

This function checks the current clock configurations and then calculates the clock frequency for a specific clock name defined in clock_name_t.

Parameters

- clockName – Clock names defined in clock_name_t

Returns

Clock frequency value in hertz

uint32_t CLOCK_GetCm33CorePlatClkFreq(void)

Get the CM33 core/platform clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetCm33BusClkFreq(void)

Get the CM33 bus clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetCm33SlowClkFreq(void)

Get the CM33 slow clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFusionDspCorePlatClkFreq(void)

Get the Fusion DSP core/platform clock frequency.

Returns

Clock frequency in Hz.

uint32_t CLOCK_GetFusionDspBusClkFreq(void)

Get the Fusion DSP bus clock frequency.

Returns
Clock frequency in Hz.

uint32_t CLOCK_GetFusionDspSlowClkFreq(void)

Get the Fusion DSP slow clock frequency.

Returns
Clock frequency in Hz.

uint32_t CLOCK_GetLvdsClkFreq(void)

Get the external LVDS pad clock frequency (LVDS).

Returns
Clock frequency in Hz.

uint32_t CLOCK_GetIpFreq(*clock_ip_name_t* name)

Gets the clock frequency for a specific IP module.

This function gets the IP module clock frequency. It is only used for the IP modules which could select clock source by CLOCK_SetIpSrc().

Parameters

- name – Which peripheral to get, see clock_ip_name_t.

Returns
Clock frequency value in hertz

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.0.5.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

CGC_PLLPFD_PFD_VAL(pfdClkout, fracValue)

CGC (A/S)PLLPFD[PFDx] value.

CGC_PLLPFD_PFD_MASK(pfdClkout)

CGC (A/S)PLLPFD[PFD] mask.

CGC_PLLPFD_PFD_VALID_MASK(pfdClkout)

CGC (A/S)PLLPFD[PFDx_VALID] mask.

CGC_PLLPFD_PFD_CLKGATE_MASK(pfdClkout)

CGC (A/S)PLLPFD[PFDx_CLKGATE] mask.

PCC_CLKCFG_PCD_MASK

Re-define PCC register masks and bitfield operations to unify the different namings in the soc header file.

PCC_CLKCFG_PCD_SHIFT

PCC_CLKCFG_PCD(x)

PCC_CLKCFG_FRAC_MASK

PCC_CLKCFG_FRAC_SHIFT

PCC_CLKCFG_FRAC(x)

PCC_CLKCFG_PCS_MASK

PCC_CLKCFG_PCS_SHIFT

PCC_CLKCFG_PCS(x)

PCC_CLKCFG_INUSE_MASK

PCC_CLKCFG_CGC_MASK

PCC_CLKCFG_PR_MASK

PCC_PCS_VAL(reg)
: Bitfield values for general PCC registers.

PCC_FRAC_VAL(reg)

PCC_PCD_VAL(reg)

CLOCK_IP_SOURCE_PCC_INDEX(idx)
: Clock source index macros for clock_ip_src_t.

CLOCK_IP_SOURCE_NON_PCC_INDEX(idx)

CLOCK_IP_SOURCE_PCC_INDEX_VAL(src)

CLOCK_IP_SOURCE_NON_PCC_INDEX_VAL(src)

PCC_PCS_AVAIL_MASK
: Define PCC bit available mask for clock_ip_name_t.

PCC_PCD_FRAC_AVAIL_MASK

IP_NAME_NON_PCC_FLAG_MASK
: Define Non-PCC register flag mask for clock_ip_name_t.

PCC_REG(name)
: Define PCC register content for clock_ip_name_t.

RGPIO_CLOCKS
: Clock ip name array for RGPIO2P.

SAI_CLOCKS
: Clock ip name array for SAI.

PCTL_CLOCKS
: Clock ip name array for PCTL.

LPI2C_CLOCKS
: Clock ip name array for LPI2C.

I3C_CLOCKS
: Clock ip name array for I3C.

FLEXIO_CLOCKS
: Clock ip name array for FLEXIO.

FLEXCAN_CLOCKS
: Clock ip name array for FLEXCAN.

PDM_CLOCKS
: Clock ip name array for PDM.

LCDIF_CLOCKS
: Clock ip name array for LCDIF/DCNANO.

MIPI_DSI_HOST_CLOCKS
: Clock ip name array for MIPI DSI.

EDMA_CLOCKS
: Clock ip name array for EDMA.

EDMA_CHAN_CLOCKS
: Clock ip name array for EDMA Channels.

LPUART_CLOCKS
: Clock ip name array for LPUART.

DAC_CLOCKS
: Clock ip name array for DAC.

LPTMR_CLOCKS
: Clock ip name array for LPTMR.

LPADC_CLOCKS
: Clock ip name array for LPADC.

LPSPI_CLOCKS
: Clock ip name array for LPSPI.

TPM_CLOCKS
: Clock ip name array for TPM.

LPIT_CLOCKS
: Clock ip name array for LPIT.

CMP_CLOCKS
: Clock ip name array for CMP.

WDOG_CLOCKS
: Clock ip name array for MU.

  Clock ip name array for WDOG.

SEMA42_CLOCKS
: Clock ip name array for SEMA42.

TPIU_CLOCKS
: Clock ip name array for TPIU.

FLEXSPI_CLOCKS
: Clock ip name array for QSPI.

MRT_CLOCKS
: Clock ip name array for MRT.

BBNSM_CLOCKS
: Clock ip name array for BBNSM.

PXP_CLOCKS
: Clock ip name array for PXP.

EPDC_CLOCKS
: Clock ip name array for EPDC.

uint32_t CLOCK_GetCm33SysClkFreq(*cgc_sys_clk_t* type)
: Gets the CGC CM33 system clock frequency.

  This function gets the CGC CM33 system clock frequency. These clocks are used for core, platform, bus and slow clock domains.

  Parameters

  - type – Which type of clock to get.

Returns
Clock frequency.

static inline void CLOCK_SetCm33SysClkConfig(*cgc_rtd_sys_clk_config_t* *config)

Sets the system clock configuration for CM33 domain.

This function sets the system clock configuration for CM33 domain.

Parameters

- config – Pointer to the configuration.

uint32_t CLOCK_GetFusionDspSysClkFreq(*cgc_sys_clk_t* type)

Gets the CGC Fusion DSP system clock frequency.

This function gets the CGC Fusion DSP system clock frequency. These clocks are used for core, platform, bus and slow clock domains.

Parameters

- type – Which type of clock to get.

Returns
Clock frequency.

static inline void CLOCK_SetFusionSysClkConfig(const *cgc_rtd_sys_clk_config_t* *config)

Sets the system clock configuration for FusionF1 DSP domain.

This function sets the system clock configuration for FusionF1 DSP domain.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetCm33SysClkConfig(*cgc_rtd_sys_clk_config_t* *config)

Gets the system clock configuration for CM33 domain.

This function gets the system configuration for CM33 domain.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetFusionDspSysClkConfig(*cgc_rtd_sys_clk_config_t* *config)

Gets the system clock configuration for FusionF1 DSP domain.

This function gets the system configuration for FusionF1 DSP domain.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_SetRtdClkOutConfig(*clock_rtd_clkout_src_t* setting, uint8_t div, bool enable)

Sets the clock out configuration in RTD.

This function sets the clock out configuration.

Parameters

- setting – The selection to set.
- div – The divider to set (div > 0).
- enable – Enable clock out.

static inline void CLOCK_SetRtcClkOutConfig(uint8_t div)

Sets the RTC_CLOCKOUT configuration.

This function sets the RTC_CLOCKOUT configuration.

Parameters

- div – The divider to set (div > 0).

uint32_t CLOCK_GetXbarBusClkFreq(void)

Gets the CGC XBAR bus clock frequency in AD.

This function gets the CGC XBAR bus clock frequency.

Returns
Clock frequency.

uint32_t CLOCK_GetHifiDspSysClkFreq(*cgc_sys_clk_t* type)

Gets the CGC HIFI DSP system clock frequency in LPAV.

This function gets the CGC HIFI DSP system clock frequency. These clocks are used for core, platform domains.

Parameters

- type – Which type of clock to get.

Returns
Clock frequency.

static inline void CLOCK_SetHifiDspSysClkConfig(const *cgc_hifi_sys_clk_config_t* *config)

Sets the system clock configuration for HIFI4 DSP domain.

This function sets the system clock configuration for HIFI4 DSP domain.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetHifiDspSysClkConfig(*cgc_hifi_sys_clk_config_t* *config)

Gets the system clock configuration for HIFI4 DSP domain.

This function gets the system configuration for HIFI4 DSP domain.

Parameters

- config – Pointer to the configuration.

uint32_t CLOCK_GetLpavSysClkFreq(*cgc_sys_clk_t* type)

Gets the CGC NIC LPAV system clock frequency in LPAV.

This function gets the CGC NIC LPAV system clock frequency. These clocks are used for AXI, AHB, Bus domains.

Parameters

- type – Which type of clock to get.

Returns
Clock frequency.

static inline void CLOCK_SetLpavSysClkConfig(const *cgc_lpav_sys_clk_config_t* *config)

Sets the system clock configuration for NIC LPAV domain.

This function sets the system clock configuration for NIC LPAV domain.

Parameters

- config – Pointer to the configuration.

static inline void CLOCK_GetLpavSysClkConfig(*cgc_lpav_sys_clk_config_t* *config)

Gets the system clock configuration for NIC LPAV domain.

This function gets the system configuration for NIC LPAV domain.

Parameters

- config – Pointer to the configuration.

uint32_t CLOCK_GetDdrClkFreq(void)

Gets the CGC DDR clock frequency in LPAV.

This function gets the CGC DDR clock frequency.

Returns
Clock frequency.

static inline void CLOCK_SetLpavClkOutConfig(*clock_lpav_clkout_src_t* setting, uint8_t div, bool enable)

Sets the clock out configuration in LPAV.

This function sets the clock out configuration.

Parameters

- setting – The selection to set.
- div – The divider to set (div > 0).
- enable – Enable clock out.

status_t CLOCK_InitSysOsc(const *cgc_sosc_config_t* *config)

Initializes the CGC system OSC.

This function enables the CGC system OSC clock according to the configuration.

Note: This function can't detect whether the system OSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – System OSC is initialized.
- kStatus_CGC_Busy – System OSC has been enabled and is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

status_t CLOCK_DeinitSysOsc(void)

De-initializes the CGC system OSC.

This function disables the CGC system OSC clock.

Note: This function can't detect whether the system OSC is used by an IP.

Return values

- kStatus_Success – System OSC is deinitialized.
- kStatus_CGC_Busy – System OSC is used by the system clock.
- kStatus_ReadOnly – System OSC control register is locked.

void CLOCK_SetRtdSysOscAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in RTD.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

void CLOCK_SetAdSysOscAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in AD.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

void CLOCK_SetLpavSysOscAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in LPAV.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

uint32_t CLOCK_GetSysOscFreq(void)

Gets the CGC system OSC clock frequency (SYSOSC).

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetRtdSysOscAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the system OSC in RTD.

Parameters

- type – The asynchronous clock type.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetAdSysOscAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the system OSC in AD.

Parameters

- type – The asynchronous clock type.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpavSysOscAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the system OSC in LPAV.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsSysOscErr(void)

Checks whether the system OSC clock error occurs.

Returns

True if the error occurs, false if not.

static inline void CLOCK_ClearSysOscErr(void)

Clears the system OSC clock error.

static inline void CLOCK_SetSysOscMonitorMode(*cgc_sosc_monitor_mode_t* mode)

Sets the system OSC monitor mode.

This function sets the system OSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsSysOscSelected(void)

Checks whether the system OSC clock is used as clock source.

Returns

True if system OSC is used as clock source, false if not.

static inline bool CLOCK_IsSysOscValid(void)

Checks whether the system OSC clock is valid.

Returns

True if clock is valid, false if not.

status_t CLOCK_InitFro(const *cgc_fro_config_t* *config)

Initializes the CGC FRO clock.

This function initializes the CGC FRO clock according to the configuration.

Note: This function can't detect whether the FRO has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – FRO is initialized.
- kStatus_CGC_Busy – FRO has been enabled and is used by system clock.
- kStatus_ReadOnly – FRO control register is locked.

status_t CLOCK_DeinitFro(void)

De-initializes the CGC FRO.

This function deinitializes the CGC FRO.

Note: This function can't detect whether the FRO is used by an IP.

Return values

- kStatus_Success – FRO is deinitialized.
- kStatus_CGC_Busy – FRO is used by system clock.
- kStatus_ReadOnly – FRO control register is locked.

void CLOCK_SetRtdFroAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in RTD.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

void CLOCK_SetAdFroAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in AD.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

void CLOCK_SetLpavFroAsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider in LPAV.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

void CLOCK_EnableFroTuning(bool enable)

Enable/Disable FRO tuning. On enable, the function will wait until FRO is close to the target frequency.

uint32_t CLOCK_GetFroFreq(void)

Gets the CGC FRO clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetRtdFroAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the FRO in RTD.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetAdFroAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the FRO in AD.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpavFroAsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the FRO in LPAV.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsFroSelected(void)

Checks whether the FRO clock is used as clock source.

Returns

True if FRO is used as clock source, false if not.

static inline bool CLOCK_IsFroValid(void)

Checks whether the FRO clock is valid.

Returns

True if clock is valid, false if not.

status_t CLOCK_InitLposc(const *cgc_lposc_config_t* *config)

Initializes the CGC LPOSC clock.

This function initializes the CGC LPOSC clock according to the configuration.

Note: This function can't detect whether the LPOSC has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – LPOSC is initialized.
- kStatus_ReadOnly – FRO control register is locked.

status_t CLOCK_DeinitLposc(void)

De-initializes the CGC LPOSC.

This function deinitializes the CGC LPOSC.

Note: This function can't detect whether the LPOSC is used by an IP.

Return values

- kStatus_Success – LPOSC is deinitialized.
- kStatus_ReadOnly – LPOSC control register is locked.

static inline bool CLOCK_IsLpOscValid(void)

Checks whether the LPOSC clock is valid.

Returns

True if clock is valid, false if not.

uint32_t CLOCK_GetLpOscFreq(void)

Gets the CGC LPOSC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetRtcOscFreq(void)

Gets the CGC RTC OSC clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

static inline bool CLOCK_IsRtcOscErr(void)

Checks whether the RTC OSC clock error occurs.

Returns

True if error occurs, false if not.

static inline void CLOCK_ClearRtcOscErr(void)

Clears the RTC OSC clock error.

void CLOCK_SetRtcOscMonitorMode(*cgc_rosc_monitor_mode_t* mode)

Sets the RTC OSC monitor mode.

This function sets the RTC OSC monitor mode. The mode can be disabled. It can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

static inline bool CLOCK_IsRtcOscSelected(void)

Checks whether the RTCOSC clock is used as clock source.

Returns

True if RTCOSC is used as clock source, false if not.

static inline bool CLOCK_IsRtcOscValid(void)

Checks whether the RTC OSC clock is valid.

Returns

True if the clock is valid, false if not.

status_t CLOCK_InitPll0(const *cgc_pll0_config_t* *config)

Initializes the CGC PLL0.

This function enables the CGC PLL0 clock according to the configuration. The PLL0 can use the OSC or FRO as the clock source. Ensure that the source clock is valid before calling this function.

Example code for initializing PLL0 clock output:

```
const cgc_pll0_config_t g_cgcPll0Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 1U,
                                           .pfd1Div = 2U,
                                           .pfd2Div = 0U,
                                           .src = kCGC_PllSrcSysOsc,
                                           .mult = kCGC_Pll0Mult20};
CLOCK_InitPll0(&g_cgcPll0Config);
```

Note: This function can't detect whether the PLL0 has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – PLL0 is initialized.
- kStatus_CGC_Busy – PLL0 has been enabled and is used by the system clock.
- kStatus_ReadOnly – PLL0 control register is locked.

status_t CLOCK_DeinitPll0(void)

De-initializes the CGC PLL0.

This function disables the CGC PLL0.

Note: This function can't detect whether the PLL0 is used by an IP.

Return values

- kStatus_Success – PLL0 is deinitialized.
- kStatus_CGC_Busy – PLL0 is used by the system clock.
- kStatus_ReadOnly – PLL0 control register is locked.

void CLOCK_SetPll0AsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

uint32_t CLOCK_GetPll0Freq(void)

Gets the CGC PLL0 clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll0AsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the PLL0.

Parameters

- type – The asynchronous clock type.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll0PfdFreq(*cgc_pll_pfd_clkout_t* pfdClkout)

Gets the CGC PLL0 PFD clock frequency.

Parameters

- pfdClkout – The selected PFD clock out. See “cgc_pll_pfd_clkout_t”.

Returns
Clock frequency; If the clock is invalid, returns 0.

void CLOCK_EnablePll0PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout, uint8_t fracValue)

Enables the CGC PLL0 Fractional Divide (PFD) clock out with configurations.

PLL Frequency = Fref * MULT PFD Clock Frequency = PLL output frequency * 18/frac value

```
Example code for configuring PLL0 PFD0 clock output:
const cgc_pll0_config_t g_cgcPll0Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 1U,
                                           .pfd1Div = 2U,
                                           .pfd2Div = 0U,
                                           .src = kCGC_PllSrcSysOsc,
                                           .mult = kCGC_Pll0Mult20};
CLOCK_InitPll0(&g_cgcPll0Config);
CLOCK_EnablePll0PfdClkout(kCGC_PllPfd0Clk, 15U);
```

Parameters

- pfdClkout – PLL0 PFD clock out select.
- fracValue – Fractional Divider value. Recommended to be kept between 12-35 for all PFDs.

static inline void CLOCK_DisablePll0PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout)

Disables the CGC PLL0 Fractional Divide (PFD) clock out.

static inline void CLOCK_SetPll0LockTime(uint16_t lockTime)

Sets the CGC PLL0 lock time.

Parameters

- lockTime – Reference clocks to count before PLL0 is considered locked and valid.

static inline bool CLOCK_IsPll0Selected(void)

Checks whether the PLL0 clock is used as clock source.

Returns
True if PLL0 is used as clock source, false if not.

static inline bool CLOCK_IsPll0Valid(void)

Checks whether the PLL0 clock is valid.

Returns
True if the clock is valid, false if not.

status_t CLOCK_InitPll1(const *cgc_pll1_config_t* *config)

Initializes the CGC PLL1.

This function enables the CGC PLL1 clock according to the configuration. The PLL1 can use the system OSC or FRO as the clock source. Ensure that the source clock is valid before calling this function.

Example code for initializing PLL1 clock output:

```
const cgc_pll1_config_t g_cgcPll1Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 0U,
                                           .pfd1Div = 0U,
                                           .pfd2Div = 0U,
                                           .src = kCGC_PllSrcFro24M,
                                           .mult = kCGC_Pll1Mult22,
                                           .num = 578,
                                           .denom = 1000};
CLOCK_InitPll1(&g_cgcPll1Config);
```

Note: This function can't detect whether the PLL1 has been enabled and is used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – PLL1 is initialized.
- kStatus_CGC_Busy – PLL1 has been enabled and is used by the system clock.
- kStatus_ReadOnly – PLL1 control register is locked.

status_t CLOCK_DeinitPll1(void)

De-initializes the CGC PLL1.

This function disables the CGC PLL1.

Note: This function can't detect whether the PLL1 is used by an IP.

Return values

- kStatus_Success – PLL1 is deinitialized.
- kStatus_CGC_Busy – PLL1 is used by the system clock.
- kStatus_ReadOnly – PLL1 control register is locked.

void CLOCK_SetPll1AsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

uint32_t CLOCK_GetPll1Freq(void)

Gets the CGC PLL1 clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll1AsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the PLL1.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll1PfdFreq(*cgc_pll_pfd_clkout_t* pfdClkout)

Gets the CGC PLL1 PFD clock frequency.

Parameters

- pfdClkout – The selected PFD clocks out. See “cgc_pll_pfd_clkout_t”.

Returns

Clock frequency; If the clock is invalid, returns 0.

void CLOCK_EnablePll1PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout, uint8_t fracValue)

Enables the CGC PLL1 Fractional Divide (PFD) clock out with configurations.

PLL1 Frequency = Fref * (MULT + NUM/DENOM) PFD Clock Frequency = PLL output frequency * 18/frac value

Example code for configuring PLL1 as PLL1 PFD clock output:

```
const cgc_pll1_config_t g_cgcPll1Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 0U,
                                           .pfd1Div = 0U,
                                           .pfd2Div = 0U,
                                           .src = kCGC_PllSrcFro24M,
                                           .mult = kCGC_Pll1Mult22,
                                           .num = 578,
                                           .denom = 1000};
CLOCK_InitPll1(&g_cgcPll1Config);
CLOCK_EnablePll1PfdClkout(kCGC_PllPfd0Clk, 15U);
```

Parameters

- pfdClkout – PLL1 PFD clock out select.
- fracValue – Fractional Divider value. Recommended to be kept between 12-35 for all PFDs.

static inline void CLOCK_DisablePll1PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout)

Disables the CGC PLL1 Fractional Divide (PFD) clock out.

static inline void CLOCK_EnablePll1SpectrumModulation(uint16_t step, uint16_t stop)

Enables the CGC PLL1 spread spectrum modulation feature with configurations.

This function sets the CGC PLL1 spread spectrum modulation configurations. STOP and STEP together control the modulation depth (maximum frequency change) and modulation frequency.

Modulation Depth = (STOP/MFD)*Fref where MFD is the DENOM field value in DENOM register. Modulation Frequency = (STEP/(2*STOP))*Fref.

Parameters

- step – PLL1 Spread Spectrum STEP.
- stop – PLL1 Spread Spectrum STOP.

static inline void CLOCK_DisablePll1SpectrumModulation(void)

Disables the CGC PLL1 spread spectrum modulation.

static inline void CLOCK_SetPll1LockTime(uint16_t lockTime)

Sets the CGC PLL1 lock time.

Parameters

- lockTime – Reference clocks to count before PLL1 is considered locked and valid.

static inline bool CLOCK_IsPll1Selected(void)

Checks whether the PLL1 clock is used as clock source.

Returns

True if PLL1 is used as clock source, false if not.

static inline bool CLOCK_IsPll1Valid(void)

Checks whether the PLL1 clock is valid.

Returns

True if the clock is valid, false if not.

uint32_t CLOCK_GetPll3Freq(void)

Gets the CGC PLL3 clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll3AsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the PLL3.

Parameters

- type – The asynchronous clock type.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll3PfdFreq(*cgc_pll_pfd_clkout_t* pfdClkout)

Gets the CGC PLL3 PFD clock frequency.

Parameters

- pfdClkout – The selected PFD clock out. See “cgc_pll_pfd_clkout_t”.

Returns

Clock frequency; If the clock is invalid, returns 0.

status_t CLOCK_InitPll4(const *cgc_pll4_config_t* *config)

Initializes the CGC PLL4.

This function enables the CGC PLL4 clock according to the configuration. The PLL4 can use the OSC or FRO as the clock source. Ensure that the source clock is valid before calling this function.

Example code for initializing PLL4 clock output:

```
const cgc_pll4_config_t g_cgcPll4Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 0U,
                                           .pfd0Div1 = 0U,
                                           .pfd0Div2 = 0U,
                                           .pfd1Div1 = 0U,
                                           .pfd1Div2 = 0U,
                                           .pfd2Div1 = 0U,
                                           .pfd2Div2 = 0U,
                                           .pfd3Div1 = 0U,
                                           .pfd3Div2 = 0U,
                                           .src = kCGC_PllSrcFro24M,
```

(continues on next page)

(continued from previous page)

```
                                .mult = kCGC_Pll4Mult22,
                                .num = 578,
                                .denom = 1000};
CLOCK_InitPll4(&g_cgcPll4Config);
```

Note: This function can't detect whether the PLL4 has been enabled and used by an IP.

Parameters

- config – Pointer to the configuration structure.

Return values

- kStatus_Success – PLL4 is initialized.
- kStatus_CGC_Busy – PLL4 has been enabled and is used by the system clock.
- kStatus_ReadOnly – PLL4 control register is locked.

status_t CLOCK_DeinitPll4(void)

De-initializes the CGC PLL4.

This function disables the CGC PLL4.

Note: This function can't detect whether the PLL4 is used by an IP.

Return values

- kStatus_Success – PLL4 is deinitialized.
- kStatus_CGC_Busy – PLL4 is used by the system clock.
- kStatus_ReadOnly – PLL4 control register is locked.

void CLOCK_SetPll4AsyncClkDiv(*cgc_async_clk_t* asyncClk, uint8_t divider)

Set the asynchronous clock divider.

Note: There might be glitch when changing the asynchronous divider, so make sure the asynchronous clock is not used while changing divider.

Parameters

- asyncClk – Which asynchronous clock to configure.
- divider – The divider value to set. Disabled when divider == 0.

uint32_t CLOCK_GetPll4Freq(void)

Gets the CGC PLL4 clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll4AsyncFreq(*cgc_async_clk_t* type)

Gets the CGC asynchronous clock frequency from the PLL4.

Parameters

- type – The asynchronous clock type.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetPll4PfdFreq(*cgc_pll_pfd_clkout_t* pfdClkout)

Gets the CGC PLL4 PFD clock frequency.

Parameters

- pfdClkout – The selected PFD clock out. See "cgc_pll_pfd_clkout_t".

Returns
Clock frequency; If the clock is invalid, returns 0.

void CLOCK_EnablePll4PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout, uint8_t fracValue)

Enables the CGC PLL4 Fractional Divide (PFD) clock out with configurations.

PLL Frequency = Fref * MULT PFD Clock Frequency = PLL output frequency * 18/frac value

```
Example code for configuring PLL4 PFD0 clock output:
const cgc_pll4_config_t g_cgcPll4Config = {.enableMode = kCGC_PllEnable,
                                           .div1 = 0U,
                                           .pfd0Div1 = 0U,
                                           .pfd0Div2 = 0U,
                                           .pfd1Div1 = 0U,
                                           .pfd1Div2 = 0U,
                                           .pfd2Div1 = 0U,
                                           .pfd2Div2 = 0U,
                                           .pfd3Div1 = 0U,
                                           .pfd3Div2 = 0U,
                                           .src = kCGC_PllSrcFro24M,
                                           .mult = kCGC_Pll4Mult22,
                                           .num = 578,
                                           .denom = 1000};
CLOCK_InitPll4(&g_cgcPll4Config);
CLOCK_EnablePll4PfdClkout(kCGC_PllPfd0Clk, 15U);
```

Parameters

- pfdClkout – PLL4 PFD clock out select.
- fracValue – Fractional Divider value. Recommended to be kept between 12-35 for all PFDs.

static inline void CLOCK_DisablePll4PfdClkout(*cgc_pll_pfd_clkout_t* pfdClkout)

Disables the CGC PLL4 Fractional Divide (PFD) clock out.

static inline void CLOCK_EnablePll4SpectrumModulation(uint16_t step, uint16_t stop)

Enables the CGC PLL4 spread spectrum modulation feature with configurations.

This function sets the CGC PLL4 spread spectrum modulation configurations. STOP and STEP together control the modulation depth (maximum frequency change) and modulation frequency.

Modulation Depth = (STOP/MFD)*Fref where MFD is the DENOM field value in DENOM register. Modulation Frequency = (STEP/(2*STOP))*Fref.

Parameters

- step – PLL4 Spread Spectrum STEP.
- stop – PLL4 Spread Spectrum STOP.

static inline void CLOCK_SetPll4LockTime(uint16_t lockTime)

Sets the CGC PLL4 lock time.

Parameters

- lockTime – Reference clocks to count before PLL4 is considered locked and valid.

static inline bool CLOCK_IsPll4Selected(void)

Checks whether the PLL4 clock is used as clock source.

Returns

True if PLL4 is used as clock source, false if not.

static inline bool CLOCK_IsPll4Valid(void)

Checks whether the PLL4 clock is valid.

Returns

True if the clock is valid, false if not.

static inline void CLOCK_SetXtal0Freq(uint32_t freq)

Sets the XTAL0 frequency based on board settings.

Parameters

- freq – The XTAL0/EXTAL0 input clock frequency in Hz.

static inline void CLOCK_SetXtal32Freq(uint32_t freq)

Sets the XTAL32 frequency based on board settings.

Parameters

- freq – The XTAL32/EXTAL32 input clock frequency in Hz.

static inline void CLOCK_SetLvdsFreq(uint32_t freq)

Sets the LVDS pad frequency based on board settings.

Parameters

- freq – The LVDS pad input clock frequency in Hz.

static inline void CLOCK_SetMclkFreq(uint32_t index, uint32_t freq)

Sets the MCLK pad frequency based on Audio settings.

Parameters

- index – The MCLK index.
- freq – The MCLK pad input clock frequency in Hz.

static inline void CLOCK_SetRxBclkFreq(uint32_t instance, uint32_t freq)

Sets the RX_BCLK pad frequency based on Audio settings.

Parameters

- instance – The SAI instance to contribute to this RX_BCLK pad.
- freq – The RX_BCLK pad input clock frequency in Hz.

static inline void CLOCK_SetTxBclkFreq(uint32_t instance, uint32_t freq)

Sets the TX_BCLK pad frequency based on Audio settings.

Parameters

- instance – The SAI instance to contribute to this TX_BCLK pad.
- freq – The TX_BCLK pad input clock frequency in Hz.

static inline void CLOCK_SetSpdifRxFreq(uint32_t freq)

Sets the SPDIF_RX frequency based on Audio settings.

Parameters

- freq – The SPDIF_RX input clock frequency in Hz.

uint32_t CLOCK_GetWdogClkFreq(uint32_t instance)

Gets the WDOG clock frequency in RTD and LPAV.

Parameters

- instance – The WDOG instance (0-2,5).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetFlexspiClkFreq(uint32_t instance)

Gets the FlexSPI clock frequency in RTD.

Parameters

- instance – The FlexSPI instance (0-1).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpitClkFreq(void)

Gets the LPIT clock frequency in RTD.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetFlexioClkFreq(void)

Gets the FlexIO clock frequency in RTD.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetI3cClkFreq(uint32_t instance)

Gets the I3C clock frequency in RTD and LPAV.

Parameters

- instance – The I3C instance (0-1).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpspiClkFreq(uint32_t instance)

Gets the LPSPI clock frequency in RTD.

Parameters

- instance – The LPSPI instance (0-3).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetAdcClkFreq(uint32_t instance)

Gets the ADC clock frequency.

Parameters

- instance – The ADC instance (0-1).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetDacClkFreq(uint32_t instance)

Gets the DAC clock frequency.

Parameters

- instance – The DAC instance (0-1).

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetTpiuClkFreq(void)
Gets the TPIU clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetSwoClkFreq(void)
Gets the SWO clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetTpmClkFreq(uint32_t instance)
Gets the TPM clock frequency.

Parameters

- instance – The TPM instance (0-8).

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpi2cClkFreq(uint32_t instance)
Gets the LPI2C clock frequency in RTD.

Parameters

- instance – The LPI2C instance (0-3).

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpuartClkFreq(uint32_t instance)
Gets the LPUART clock frequency in RTD.

Parameters

- instance – The LPUART instance (0-3).

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetFlexcanClkFreq(void)
Gets the FlexCAN clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetCsiClkFreq(void)
Gets the CSI clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetDsiClkFreq(void)
Gets the DSI clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetEpdcClkFreq(void)
Gets the EPDC clock frequency.

Returns
Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetGpu2dClkFreq(void)

Gets the GPU2D clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetGpu3dClkFreq(void)

Gets the GPU3D clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetDcnanoClkFreq(void)

Gets the DC Nano clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetCsiUiClkFreq(void)

Gets the CSI clk_ui clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetCsiEscClkFreq(void)

Gets the CSI clk_esc clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetRtdAudClkFreq(void)

Gets the audio clock frequency in RTD.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetAdAudClkFreq(void)

Gets the audio clock frequency in AD.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetLpavAudClkFreq(void)

Gets the audio clock frequency in LPAV.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetSaiFreq(uint32_t instance)

Gets the SAI clock frequency.

Parameters

- instance – The SAI instance (0-7).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetSpdifFreq(void)

Gets the SPDIF clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetMqsFreq(uint32_t instance)

Gets the MQS clock frequency.

Parameters

- instance – The MQS instance (0-1).

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetMicfilFreq(void)

Gets the EMICFIL clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetMrtFreq(void)

Gets the MRT clock frequency.

Returns

Clock frequency; If the clock is invalid, returns 0.

uint32_t CLOCK_GetRtdSysClkFreq(uint32_t config, *cgc_sys_clk_t* type)

Gets the CGC system clock frequency in RTD.

This function gets the CGC system clock frequency. These clocks are used for core, platform, bus and slow clock domains.

Parameters

- config – Config value from CGC register.
- type – Which type of clock to get.

Returns

Clock frequency.

uint32_t divSlow

Slow clock divider, selected division is the value of the field + 1

uint32_t ___pad0___

Reserved.

uint32_t divBus

Bus clock divider, selected division is the value of the field + 1.

uint32_t ___pad1___

Reserved.

uint32_t divCore

Core/Platform clock divider, selected division is the value of the field + 1.

uint32_t switchFin

1: Clock is running. 0: Clock is not running.

uint32_t src

System clock source, see cgc_rtd_sys_clk_src_t.

uint32_t locked

Clock register locked.

uint32_t ___pad0___

Reserved.

uint32_t divPlat

Platform clock divider, selected division is the value of the field + 1.

uint32_t ___pad1___
: Reserved.

uint32_t divCore
: Core clock divider, selected division is the value of the field + 1.

uint32_t switchFin
: 1: Clock is running. 0: Clock is not running.

uint32_t src
: System clock source, see cgc_hifi_sys_clk_src_t.

uint32_t locked
: Clock register locked.

uint32_t ___pad0___
: Reserved.

uint32_t divBus
: Platform clock divider, selected division is the value of the field + 1.

uint32_t ___pad1___
: Reserved.

uint32_t divAhb
: Platform clock divider, selected division is the value of the field + 1.

uint32_t ___pad2___
: Reserved.

uint32_t divAxi
: Core clock divider, selected division is the value of the field + 1.

uint32_t switchFin
: 1: Clock is running. 0: Clock is not running.

uint32_t src
: System clock source, see cgc_lpav_sys_clk_src_t.

uint32_t ___pad3___
: Reserved.

uint32_t locked
: Clock register locked.

uint32_t ___pad0___
: Reserved.

uint32_t divDdr
: DDR clock divider, selected division is the value of the field + 1.

uint32_t switchFin
: 1: Clock is running. 0: Clock is not running.

uint32_t src
: System clock source, see cgc_lpav_sys_clk_src_t.

uint32_t locked
: Clock register locked.

uint32_t freq
: System OSC frequency.

cgc_sosc_monitor_mode_t monitorMode
Clock monitor mode selected.

uint8_t enableMode
Enable mode, OR'ed value of _cgc_sosc_enable_mode.

cgc_sosc_mode_t workMode
OSC work mode.

uint32_t enableMode
Enable mode, OR'ed value of _cgc_fro_enable_mode.

uint32_t enableMode
Enable mode, OR'ed value of _cgc_lposc_enable_mode.

uint8_t enableMode
Enable mode, OR'ed value of _cgc_pll_enable_mode

uint8_t div1
PLLDIV_VCO divider value. Disabled when div1 == 0.

uint8_t pfd1Div
PLLDIV_PFD_0 DIV1 divider value. Disabled when pfd1Div == 0.

uint8_t pfd2Div
PLLDIV_PFD_0 DIV2 divider value. Disabled when pfd2Div == 0.

cgc_pll_src_t src
Clock source.

cgc_pll0_mult_t mult
PLL multiplier.

cgc_rosc_monitor_mode_t monitorMode
Clock monitor mode selected.

uint8_t enableMode
Enable mode, OR'ed value of _cgc_pll_enable_mode

uint8_t div1
PLLDIV_VCO divider value. Disabled when div1 == 0.

uint8_t pfd1Div
PLLDIV_PFD_0 DIV1 divider value. Disabled when pfd1Div == 0.

uint8_t pfd2Div
PLLDIV_PFD_0 DIV2 divider value. Disabled when pfd2Div == 0.

cgc_pll_src_t src
Clock source.

cgc_pll1_mult_t mult
PLL1 multiplier.

uint32_t num
30-bit numerator of the PLL1 Fractional-Loop divider.

uint32_t denom
30-bit denominator of the PLL1 Fractional-Loop divider.

uint8_t enableMode
Enable mode, OR'ed value of _cgc_pll_enable_mode

uint8_t div1
: PLLDIV_VCO divider value. Disabled when div1 == 0.

uint8_t pfd0Div1
: PLLDIV_PFD_0 DIV1 divider value. Disabled when pfd0Div1 == 0.

uint8_t pfd0Div2
: PLLDIV_PFD_0 DIV2 divider value. Disabled when pfd0Div2 == 0.

uint8_t pfd1Div1
: PLLDIV_PFD_0 DIV3 divider value. Disabled when pfd1Div1 == 0.

uint8_t pfd1Div2
: PLLDIV_PFD_0 DIV4 divider value. Disabled when pfd1Div2 == 0.

uint8_t pfd2Div1
: PLLDIV_PFD_1 DIV1 divider value. Disabled when pfd2Div1 == 0.

uint8_t pfd2Div2
: PLLDIV_PFD_1 DIV2 divider value. Disabled when pfd2Div2 == 0.

uint8_t pfd3Div1
: PLLDIV_PFD_2 DIV3 divider value. Disabled when pfd3Div1 == 0.

uint8_t pfd3Div2
: PLLDIV_PFD_2 DIV4 divider value. Disabled when pfd3Div2 == 0.

cgc_pll_src_t src
: Clock source.

cgc_pll4_mult_t mult
: PLL4 multiplier.

uint32_t num
: 30-bit numerator of the PLL4 Fractional-Loop divider.

uint32_t denom
: 30-bit denominator of the PLL4 Fractional-Loop divider.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL
: Configure whether driver controls clock.

  When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

  Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

  ---

struct _cgc_rtd_sys_clk_config
: *#include <fsl_clock.h>* CGC system clock configuration for RTD.

struct _cgc_hifi_sys_clk_config
: *#include <fsl_clock.h>* CGC system clock configuration for HIFI4 DSP.

struct _cgc_lpav_sys_clk_config
: *#include <fsl_clock.h>* CGC system clock configuration for LPAV.

struct _cgc_ddr_sys_clk_config
: *#include <fsl_clock.h>* CGC system clock configuration for DDR in LPAV.

struct _cgc_sosc_config
#include <fsl_clock.h> CGC system OSC configuration.

struct _cgc_fro_config
#include <fsl_clock.h> CGC FRO clock configuration.

struct _cgc_lposc_config
#include <fsl_clock.h> CGC LPOSC clock configuration.

struct _cgc_pll0_config
#include <fsl_clock.h> CGC PLL0 configuration.

struct _cgc_rosc_config
#include <fsl_clock.h> CGC RTC OSC configuration.

struct _cgc_pll1_config
#include <fsl_clock.h> CGC PLL1 configuration.

struct _cgc_pll4_config
#include <fsl_clock.h> CGC PLL4 configuration.

2.8 DAC12: 12-bit Digital-to-Analog Converter Driver

void DAC12_GetHardwareInfo(DAC_Type *base, *dac12_hardware_info_t* *info)
Get hardware information about this module.

Parameters

- base – DAC12 peripheral base address.
- info – Pointer to info structure, see to dac12_hardware_info_t.

void DAC12_Init(DAC_Type *base, const *dac12_config_t* *config)
Initialize the DAC12 module.

Parameters

- base – DAC12 peripheral base address.
- config – Pointer to configuration structure, see to dac12_config_t.

void DAC12_GetDefaultConfig(*dac12_config_t* *config)
Initializes the DAC12 user configuration structure.

This function initializes the user configuration structure to a default value. The default values are:

```
config->fifoWatermarkLevel = 0U;
config->fifoWorkMode = kDAC12_FIFODisabled;
config->referenceVoltageSource = kDAC12_ReferenceVoltageSourceAlt1;
config->fifoTriggerMode = kDAC12_FIFOTriggerByHardwareMode;
config->referenceCurrentSource = kDAC12_ReferenceCurrentSourceAlt0;
config->speedMode = kDAC12_SpeedLowMode;
config->speedMode = false;
config->currentReferenceInternalTrimValue = 0x4;
```

Parameters

- config – Pointer to the configuration structure. See “dac12_config_t”.

void DAC12_Deinit(DAC_Type *base)

De-initialize the DAC12 module.

Parameters

- base – DAC12 peripheral base address.

static inline void DAC12_Enable(DAC_Type *base, bool enable)

Enable the DAC12's converter or not.

Parameters

- base – DAC12 peripheral base address.
- enable – Enable the DAC12's converter or not.

static inline void DAC12_ResetConfig(DAC_Type *base)

Reset all internal logic and registers.

Parameters

- base – DAC12 peripheral base address.

static inline void DAC12_ResetFIFO(DAC_Type *base)

Reset the FIFO pointers.

FIFO pointers should only be reset when the DAC12 is disabled. This function can be used to configure both pointers to the same address to reset the FIFO as empty.

Parameters

- base – DAC12 peripheral base address.

static inline uint32_t DAC12_GetStatusFlags(DAC_Type *base)

Get status flags.

Parameters

- base – DAC12 peripheral base address.

Returns

Mask of current status flags. See to _dac12_status_flags.

static inline void DAC12_ClearStatusFlags(DAC_Type *base, uint32_t flags)

Clear status flags.

Note: Not all the flags can be cleared by this API. Several flags need special condition to clear them according to target chip's reference manual document.

Parameters

- base – DAC12 peripheral base address.
- flags – Mask of status flags to be cleared. See to _dac12_status_flags.

static inline void DAC12_EnableInterrupts(DAC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – DAC12 peripheral base address.
- mask – Mask value of interrupts to be enabled. See to _dac12_interrupt_enable.

static inline void DAC12_DisableInterrupts(DAC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – DAC12 peripheral base address.

- mask – Mask value of interrupts to be disabled. See to _dac12_interrupt_enable.

static inline void DAC12_EnableDMA(DAC_Type *base, bool enable)

Enable DMA or not.

When DMA is enabled, the DMA request will be generated by original interrupts. The interrupts will not be presented on this module at the same time.

static inline void DAC12_SetData(DAC_Type *base, uint32_t value)

Set data into the entry of FIFO buffer.

When the DAC FIFO is disabled, and the one entry buffer is enabled, the DAC converts the data in the buffer to analog output voltage. Any write to the DATA register will replace the data in the buffer and push data to analog conversion without trigger support. When the DAC FIFO is enabled. Writing data would increase the write pointer of FIFO. Also, the data would be restored into the FIFO buffer.

Parameters

- base – DAC12 peripheral base address.
- value – Setting value into FIFO buffer.

static inline void DAC12_DoSoftwareTrigger(DAC_Type *base)

Do trigger the FIFO by software.

When the DAC FIFO is enabled, and software trigger is used. Doing trigger would increase the read pointer, and the data in the entry pointed by read pointer would be converted as new output.

Parameters

- base – DAC12 peripheral base address.

static inline uint32_t DAC12_GetFIFOReadPointer(DAC_Type *base)

Get the current read pointer of FIFO.

Parameters

- base – DAC12 peripheral base address.

Returns

Read pointer index of FIFO buffer.

static inline uint32_t DAC12_GetFIFOWritePointer(DAC_Type *base)

Get the current write pointer of FIFO.

Parameters

- base – DAC12 peripheral base address.

Returns

Write pointer index of FIFO buffer

FSL_DAC12_DRIVER_VERSION

DAC12 driver version 2.1.2.

enum _dac12_status_flags

DAC12 flags.

Values:

enumerator kDAC12_OverflowFlag

FIFO overflow status flag, which indicates that more data has been written into FIFO than it can hold.

enumerator kDAC12_UnderflowFlag

FIFO underflow status flag, which means that there is a new trigger after the FIFO is nearly empty.

enumerator kDAC12_WatermarkFlag

FIFO wartermark status flag, which indicates the remaining FIFO data is less than the watermark setting.

enumerator kDAC12_NearlyEmptyFlag

FIFO nearly empty flag, which means there is only one data remaining in FIFO.

enumerator kDAC12_FullFlag

FIFO full status flag, which means that the FIFO read pointer equals the write pointer, as the write pointer increase.

enum _dac12_interrupt_enable

DAC12 interrupts.

Values:

enumerator kDAC12_UnderOrOverflowInterruptEnable

Underflow and overflow interrupt enable.

enumerator kDAC12_WatermarkInterruptEnable

Watermark interrupt enable.

enumerator kDAC12_NearlyEmptyInterruptEnable

Nearly empty interrupt enable.

enumerator kDAC12_FullInterruptEnable

Full interrupt enable.

enum _dac12_fifo_size_info

DAC12 FIFO size information provided by hardware.

Values:

enumerator kDAC12_FIFOSize2

FIFO depth is 2.

enumerator kDAC12_FIFOSize4

FIFO depth is 4.

enumerator kDAC12_FIFOSize8

FIFO depth is 8.

enumerator kDAC12_FIFOSize16

FIFO depth is 16.

enumerator kDAC12_FIFOSize32

FIFO depth is 32.

enumerator kDAC12_FIFOSize64

FIFO depth is 64.

enumerator kDAC12_FIFOSize128

FIFO depth is 128.

enumerator kDAC12_FIFOSize256

FIFO depth is 256.

enum _dac12_fifo_work_mode

DAC12 FIFO work mode.

Values:

enumerator kDAC12_FIFODisabled

FIFO disabled and only one level buffer is enabled. Any data written from this buffer goes to conversion.

enumerator kDAC12_FIFOWorkAsNormalMode

Data will first read from FIFO to buffer then go to conversion.

enumerator kDAC12_FIFOWorkAsSwingMode

In Swing mode, the FIFO must be set up to be full. In Swing back mode, a trigger changes the read pointer to make it swing between the FIFO Full and Nearly Empty state. That is, the trigger increases the read pointer till FIFO is nearly empty and decreases the read pointer till the FIFO is full.

enum _dac12_reference_voltage_source

DAC12 reference voltage source.

Values:

enumerator kDAC12_ReferenceVoltageSourceAlt1

The DAC selects DACREF_1 as the reference voltage.

enumerator kDAC12_ReferenceVoltageSourceAlt2

The DAC selects DACREF_2 as the reference voltage.

enum _dac12_fifo_trigger_mode

DAC12 FIFO trigger mode.

Values:

enumerator kDAC12_FIFOTriggerByHardwareMode

Buffer would be triggered by hardware.

enumerator kDAC12_FIFOTriggerBySoftwareMode

Buffer would be triggered by software.

enum _dac12_reference_current_source

DAC internal reference current source.

Analog module needs reference current to keep working . Such reference current can generated by IP itself, or by on-chip PMC's "reference part". If no current reference be selected, analog module can't working normally ,even when other register can still be assigned, DAC would waste current but no function. To make the DAC work, either kDAC12_ReferenceCurrentSourceAltx should be selected.

Values:

enumerator kDAC12_ReferenceCurrentSourceDisabled

None of reference current source is enabled.

enumerator kDAC12_ReferenceCurrentSourceAlt0

Use the internal reference current generated by the module itself.

enumerator kDAC12_ReferenceCurrentSourceAlt1

Use the ZTC(Zero Temperature Coefficient) reference current generated by on-chip power management module.

enumerator kDAC12_ReferenceCurrentSourceAlt2

Use the PTAT(Proportional To Absolution Temperature) reference current generated by power management module.

enum _dac12_speed_mode

DAC analog buffer speed mode for conversion.

Values:

enumerator kDAC12_SpeedLowMode

Low speed mode.

enumerator kDAC12_SpeedMiddleMode

Middle speed mode.

enumerator kDAC12_SpeedHighMode

High speed mode.

typedef enum *_dac12_fifo_size_info* dac12_fifo_size_info_t

DAC12 FIFO size information provided by hardware.

typedef enum *_dac12_fifo_work_mode* dac12_fifo_work_mode_t

DAC12 FIFO work mode.

typedef enum *_dac12_reference_voltage_source* dac12_reference_voltage_source_t

DAC12 reference voltage source.

typedef enum *_dac12_fifo_trigger_mode* dac12_fifo_trigger_mode_t

DAC12 FIFO trigger mode.

typedef enum *_dac12_reference_current_source* dac12_reference_current_source_t

DAC internal reference current source.

Analog module needs reference current to keep working . Such reference current can generated by IP itself, or by on-chip PMC's "reference part". If no current reference be selected, analog module can't working normally ,even when other register can still be assigned, DAC would waste current but no function. To make the DAC work, either kDAC12_ReferenceCurrentSourceAltx should be selected.

typedef enum *_dac12_speed_mode* dac12_speed_mode_t

DAC analog buffer speed mode for conversion.

typedef struct *_dac12_hardware_info* dac12_hardware_info_t

DAC12 hardware information.

DAC12_CR_W1C_FLAGS_MASK

Define "write 1 to clear" flags.

DAC12_CR_ALL_FLAGS_MASK

Define all the flag bits in DACx_CR register.

struct _dac12_hardware_info

#include <fsl_dac12.h> DAC12 hardware information.

Public Members

dac12_fifo_size_info_t fifoSizeInfo

The number of words in this device's DAC buffer.

struct dac12_config_t

#include <fsl_dac12.h> DAC12 module configuration.

Actually, the most fields are for FIFO buffer.

Public Members

uint32_t fifoWatermarkLevel
FIFO's watermark, the max value can be the hardware FIFO size.

dac12_fifo_work_mode_t fifoWorkMode
FIFI's work mode about pointers.

dac12_reference_voltage_source_t referenceVoltageSource
Select the reference voltage source.

dac12_reference_current_source_t referenceCurrentSource
Select the trigger mode for FIFO. Select the reference current source.

dac12_speed_mode_t speedMode
Select the speed mode for conversion.

bool enableAnalogBuffer
Enable analog buffer for high drive.

2.9 EDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_AD_Init(DMA_AD_Type *base, const *edma_config_t* *config)
Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see "edma_config_t".

void EDMA_AD_Deinit(DMA_AD_Type *base)
Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_AD_InstallTCD(DMA_AD_Type *base, uint32_t channel, *edma_tcd_t* *tcd)
Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_AD_GetDefaultConfig(*edma_config_t* *config)
Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values:

```
config.enableMasterIdReplication = true;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
config.enableBufferedWrites = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

static inline void EDMA_AD_EnableAllChannelLink(DMA_AD_Type *base, bool enable)

Enables/disables all channel linking.

This function enables/disables all channel linking in the management page. For specific channel linking enablement & configuration, please refer to EDMA_SetChannelLink and EDMA_TcdSetChannelLink APIs.

For example, to disable all channel linking in the DMA0 management page:

```
EDMA_EnableAllChannelLink(DMA0, false);
```

Parameters

- base – eDMA peripheral base address.
- enable – Switcher of the channel linking feature for all channels. "true" means to enable. "false" means not.

void EDMA_AD_ResetChannel(DMA_AD_Type *base, uint32_t channel)

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_AD_SetTransferConfig(DMA_AD_Type *base, uint32_t channel, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_config_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_AD_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_AD_SetMinorOffsetConfig(DMA_AD_Type *base, uint32_t channel, const *edma_minor_offset_config_t* *config)

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

static inline void EDMA_AD_SetChannelArbitrationGroup(DMA_AD_Type *base, uint32_t channel, uint32_t group)

Configures the eDMA channel arbitration group.

This function configures the channel arbitration group. The arbitration group priorities are evaluated by numeric value from highest group number to lowest.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- group – Fixed-priority arbitration group number for the channel.

static inline void EDMA_AD_SetChannelPreemptionConfig(DMA_AD_Type *base, uint32_t channel, const *edma_channel_Preemption_config_t* *config)

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

static inline uint32_t EDMA_AD_GetChannelSystemBusInformation(DMA_AD_Type *base, uint32_t channel)

Gets the eDMA channel identification and attribute information on the system bus interface.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the _edma_channel_sys_bus_info type to decode the return variables.

void EDMA_AD_SetChannelLink(DMA_AD_Type *base, uint32_t channel, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

void EDMA_AD_SetBandWidth(DMA_AD_Type *base, uint32_t channel, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone
  - kEDMABandwidthStall4Cycle
  - kEDMABandwidthStall8Cycle

void EDMA_AD_SetModulo(DMA_AD_Type *base, uint32_t channel, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_AD_EnableAsyncRequest(DMA_AD_Type *base, uint32_t channel, bool enable)

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

static inline void EDMA_AD_EnableAutoStopRequest(DMA_AD_Type *base, uint32_t channel, bool enable)

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

void EDMA_AD_EnableChannelInterrupts(DMA_AD_Type *base, uint32_t channel, uint32_t mask)

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_AD_DisableChannelInterrupts(DMA_AD_Type *base, uint32_t channel, uint32_t mask)

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined edma_interrupt_enable_t type.

static inline void EDMA_AD_SetChannelMux(DMA_AD_Type *base, uint32_t channel, uint32_t mux)

Set channel mux source.

Note:When the peripheral is no longer needed, the mux configuration for that channel should be written to 0, thus releasing the resource.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mux – the mux source value is SOC specific, please reference the SOC for detail.

void EDMA_AD_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

void EDMA_AD_TcdSetTransferConfig(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The STCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_config_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_AD_TcdSetMinorOffsetConfig(*edma_tcd_t* *tcd, const *edma_minor_offset_config_t* *config)

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

void EDMA_AD_TcdSetChannelLink(*edma_tcd_t* *tcd, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

static inline void EDMA_AD_TcdSetBandWidth(*edma_tcd_t* *tcd, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone
  - kEDMABandwidthStall4Cycle
  - kEDMABandwidthStall8Cycle

void EDMA_AD_TcdSetModulo(*edma_tcd_t* *tcd, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_AD_TcdEnableAutoStopRequest(*edma_tcd_t* *tcd, bool enable)

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

void EDMA_AD_TcdEnableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Enables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_AD_TcdDisableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Disables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

static inline void EDMA_AD_EnableChannelRequest(DMA_AD_Type *base, uint32_t channel)

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_AD_DisableChannelRequest(DMA_AD_Type *base, uint32_t channel)

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_AD_TriggerChannelStart(DMA_AD_Type *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

uint32_t EDMA_AD_GetRemainingMajorLoopCount(DMA_AD_Type *base, uint32_t channel)

Gets the Remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

static inline uint32_t EDMA_AD_GetErrorStatusFlags(DMA_AD_Type *base)

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the _edma_error_status_flags type to decode the return variables.

uint32_t EDMA_AD_GetChannelStatusFlags(DMA_AD_Type *base, uint32_t channel)

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the _edma_channel_status_flags type to decode the return variables.

void EDMA_AD_ClearChannelStatusFlags(DMA_AD_Type *base, uint32_t channel, uint32_t mask)

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined _edma_channel_status_flags type.

void EDMA_AD_CreateHandle(*edma_handle_t* *handle, DMA_AD_Type *base, uint32_t channel)

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.

- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_AD_InstallTCDMemory(*edma_handle_t* *handle, *edma_tcd_t* *tcdPool, uint32_t tcdSize)

Installs the TCDs memory pool into the eDMA handle.

This function is called after the EDMA_CreateHandle to use scatter/gather feature.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

void EDMA_AD_SetCallback(*edma_handle_t* *handle, *edma_callback* callback, void *userData)

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

void EDMA_AD_PrepareTransferConfig(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – eDMA transfer source address offset
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – eDMA transfer destination address offset
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

void EDMA_AD_PrepareTransfer(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferBytes, *edma_transfer_type_t* transferType)

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- transferType – eDMA transfer type.

status_t EDMA_AD_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. If submitting the transfer request repeatedly, this function packs an unprocessed request as a TCD and enables scatter/gather feature to process it in the next time.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

void EDMA_AD_StartTransfer(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

void EDMA_AD_StopTransfer(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

void EDMA_AD_AbortTransfer(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_AD_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_AD_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

void EDMA_AD_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Parameters

- handle – eDMA handle pointer.

void EDMA_Init(DMA_Type *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “edma_config_t”.

void EDMA_Deinit(DMA_Type *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(DMA_Type *base, uint32_t channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values:

```
config.enableMasterIdReplication = true;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
config.enableBufferedWrites = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

static inline void EDMA_EnableAllChannelLink(DMA_Type *base, bool enable)

Enables/disables all channel linking.

This function enables/disables all channel linking in the management page. For specific channel linking enablement & configuration, please refer to EDMA_SetChannelLink and EDMA_TcdSetChannelLink APIs.

For example, to disable all channel linking in the DMA0 management page:

```
EDMA_EnableAllChannelLink(DMA0, false);
```

Parameters

- base – eDMA peripheral base address.
- enable – Switcher of the channel linking feature for all channels. "true" means to enable. "false" means not.

void EDMA_ResetChannel(DMA_Type *base, uint32_t channel)

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_SetTransferConfig(DMA_Type *base, uint32_t channel, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_config_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &stcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the eDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_SetMinorOffsetConfig(DMA_Type *base, uint32_t channel, const *edma_minor_offset_config_t* *config)

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

static inline void EDMA_SetChannelArbitrationGroup(DMA_Type *base, uint32_t channel, uint32_t group)

Configures the eDMA channel arbitration group.

This function configures the channel arbitration group. The arbitration group priorities are evaluated by numeric value from highest group number to lowest.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- group – Fixed-priority arbitration group number for the channel.

static inline void EDMA_SetChannelPreemptionConfig(DMA_Type *base, uint32_t channel, const *edma_channel_Preemption_config_t* *config)

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

static inline uint32_t EDMA_GetChannelSystemBusInformation(DMA_Type *base, uint32_t channel)

Gets the eDMA channel identification and attribute information on the system bus interface.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the _edma_channel_sys_bus_info type to decode the return variables.

void EDMA_SetChannelLink(DMA_Type *base, uint32_t channel, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

void EDMA_SetBandWidth(DMA_Type *base, uint32_t channel, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone

- kEDMABandwidthStall4Cycle
- kEDMABandwidthStall8Cycle

void EDMA_SetModulo(DMA_Type *base, uint32_t channel, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_EnableAsyncRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

static inline void EDMA_EnableAutoStopRequest(DMA_Type *base, uint32_t channel, bool enable)

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

void EDMA_EnableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_DisableChannelInterrupts(DMA_Type *base, uint32_t channel, uint32_t mask)

Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined edma_interrupt_enable_t type.

static inline void EDMA_SetChannelMux(DMA_Type *base, uint32_t channel, uint32_t mux)

Set channel mux source.

Note:When the peripheral is no longer needed, the mux configuration for that channel should be written to 0, thus releasing the resource.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mux – the mux source value is SOC specific, please reference the SOC for detail.

void EDMA_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfig(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The STCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_config_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_TcdSetMinorOffsetConfig(*edma_tcd_t* *tcd, const *edma_minor_offset_config_t* *config)

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- tcd – A point to the TCD structure.
- config – A pointer to the minor offset configuration structure.

void EDMA_TcdSetChannelLink(*edma_tcd_t* *tcd, *edma_channel_link_type_t* type, uint32_t linkedChannel)

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- tcd – Point to the TCD structure.
- type – Channel link type, it can be one of:
  - kEDMA_LinkNone
  - kEDMA_MinorLink
  - kEDMA_MajorLink
- linkedChannel – The linked channel number.

static inline void EDMA_TcdSetBandWidth(*edma_tcd_t* *tcd, *edma_bandwidth_t* bandWidth)

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- tcd – A pointer to the TCD structure.
- bandWidth – A bandwidth setting, which can be one of the following:
  - kEDMABandwidthStallNone
  - kEDMABandwidthStall4Cycle
  - kEDMABandwidthStall8Cycle

void EDMA_TcdSetModulo(*edma_tcd_t* *tcd, *edma_modulo_t* srcModulo, *edma_modulo_t* destModulo)

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- tcd – A pointer to the TCD structure.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

static inline void EDMA_TcdEnableAutoStopRequest(*edma_tcd_t* *tcd, bool enable)

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- tcd – A pointer to the TCD structure.
- enable – The command to enable (true) or disable (false).

void EDMA_TcdEnableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Enables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

void EDMA_TcdDisableInterrupts(*edma_tcd_t* *tcd, uint32_t mask)

Disables the interrupt source for the eDMA TCD.

Parameters

- tcd – Point to the TCD structure.
- mask – The mask of interrupt source to be set. Users need to use the defined edma_interrupt_enable_t type.

static inline void EDMA_EnableChannelRequest(DMA_Type *base, uint32_t channel)

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_DisableChannelRequest(DMA_Type *base, uint32_t channel)

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

static inline void EDMA_TriggerChannelStart(DMA_Type *base, uint32_t channel)

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

uint32_t EDMA_GetRemainingMajorLoopCount(DMA_Type *base, uint32_t channel)

Gets the Remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

a. The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

static inline uint32_t EDMA_GetErrorStatusFlags(DMA_Type *base)

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the _edma_error_status_flags type to decode the return variables.

uint32_t EDMA_GetChannelStatusFlags(DMA_Type *base, uint32_t channel)

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the _edma_channel_status_flags type to decode the return variables.

void EDMA_ClearChannelStatusFlags(DMA_Type *base, uint32_t channel, uint32_t mask)

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined _edma_channel_status_flags type.

void EDMA_CreateHandle(*edma_handle_t* *handle, DMA_Type *base, uint32_t channel)

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

void EDMA_InstallTCDMemory(*edma_handle_t* *handle, *edma_tcd_t* *tcdPool, uint32_t tcdSize)

Installs the TCDs memory pool into the eDMA handle.

This function is called after the EDMA_CreateHandle to use scatter/gather feature.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

void EDMA_SetCallback(*edma_handle_t* *handle, *edma_callback* callback, void *userData)

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

void EDMA_PrepareTransferConfig(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t destWidth, int16_t destOffset, uint32_t bytesEachRequest, uint32_t transferBytes)

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – eDMA transfer source address offset
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – eDMA transfer destination address offset

- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

void EDMA_PrepareTransfer(*edma_transfer_config_t* *config, void *srcAddr, uint32_t srcWidth, void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest, uint32_t transferBytes, *edma_transfer_type_t* transferType)

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type edma_transfer_config_t.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- transferType – eDMA transfer type.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. If submitting the transfer request repeatedly, this function packs an unprocessed request as a TCD and enables scatter/gather feature to process it in the next time.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

void EDMA_StartTransfer(*edma_handle_t* *handle)

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

void EDMA_StopTransfer(*edma_handle_t* *handle)

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call EDMA_StartTransfer() again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

void EDMA_AbortTransfer(*edma_handle_t* *handle)

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

static inline uint32_t EDMA_GetUnusedTCDNumber(*edma_handle_t* *handle)

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

static inline uint32_t EDMA_GetNextTCDAddress(*edma_handle_t* *handle)

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- handle – DMA handle pointer.

Returns

The next TCD address.

static inline *edma_transfer_size_t* EDMA_GetTransferSize(uint32_t width)

Get the transfer size.

This function gets the transfer size.

Parameters

- width – transfer width(bytes).

Returns

The transfer size.

void EDMA_HandleIRQ(*edma_handle_t* *handle)

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Parameters

- handle – eDMA handle pointer.

FSL_EDMA_DRIVER_VERSION
eDMA driver version

Version 2.3.3.

Version 2.5.3.

FSL_EDMA_DRIVER_VERSION
eDMA driver version

Version 2.5.3.

enum _edma_transfer_size
eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes
Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes
Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes
Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes
Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes
Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes
Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes
Source/Destination data transfer size is 64 bytes every time

enum _edma_modulo
eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable
Disable modulo

enumerator kEDMA_Modulo2bytes
Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes
Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes
Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes
Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes
Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes
Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes
Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes
Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes
Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes
Circular buffer size is 2 G bytes.

enum _edma_bandwidth
Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone
No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle
eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle
eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type
Channel link type.

Values:

enumerator kEDMA_LinkNone
No channel link

enumerator kEDMA_MinorLink
Channel link after each minor loop

enumerator kEDMA_MajorLink
Channel link while major loop count exhausted

eDMA channel status flags, _edma_channel_status_flags

Values:

enumerator kEDMA_DoneFlag
DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag
eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag
eDMA interrupt flag, set while an interrupt occurred of this channel

eDMA channel error status flags, _edma_error_status_flags

Values:

enumerator kEDMA_DestinationBusErrorFlag
Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag
Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag
Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag
NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag
Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag
Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag
Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag
Source address not aligned with source size

enumerator kEDMA_TransferCanceledFlag
Transfer cancelled

enumerator kEDMA_ErrorChannelFlag
Error channel number of the cancelled channel number

enumerator kEDMA_ValidFlag
No error occurred, this bit is 0. Otherwise, it is 1.

eDMA channel system bus information, _edma_channel_sys_bus_info

Values:

enumerator kEDMA_PrivilegedAccessLevel
Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId
DMA's master ID when channel is active and master ID replication is enabled.

enum _edma_interrupt_enable
eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable
Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type
eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

eDMA transfer status, _edma_transfer_status

Values:

enumerator kStatus_EDMA_QueueFull
TCD queue is full.

enumerator kStatus_EDMA_Busy
Channel is busy and can't handle the transfer request.

enum _edma_transfer_size
eDMA transfer configuration

Values:

enumerator kEDMA_TransferSize1Bytes
Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes
Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes
Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes
Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes
Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes
Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes
Source/Destination data transfer size is 64 bytes every time

enum _edma_modulo
eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable
Disable modulo

enumerator kEDMA_Modulo2bytes
Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes
Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes
Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes
Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes
Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes
Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes
Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes
Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes
Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes
Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes
Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes
Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes
Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes
Circular buffer size is 2 G bytes.

enum _edma_bandwidth
Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone
No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle
eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle
eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type
Channel link type.

Values:

enumerator kEDMA_LinkNone
No channel link

enumerator kEDMA_MinorLink
Channel link after each minor loop

enumerator kEDMA_MajorLink
Channel link while major loop count exhausted

eDMA channel status flags, _edma_channel_status_flags

Values:

enumerator kEDMA_DoneFlag
DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag
eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag
eDMA interrupt flag, set while an interrupt occurred of this channel

eDMA channel error status flags, _edma_error_status_flags

Values:

enumerator kEDMA_DestinationBusErrorFlag
Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag
Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag
Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag
NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag
Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag
Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag
Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag
Source address not aligned with source size

enumerator kEDMA_TransferCanceledFlag
Transfer cancelled

enumerator kEDMA_ErrorChannelFlag
Error channel number of the cancelled channel number

enumerator kEDMA_ValidFlag
No error occurred, this bit is 0. Otherwise, it is 1.

eDMA channel system bus information, _edma_channel_sys_bus_info

Values:

enumerator kEDMA_PrivilegedAccessLevel
Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator kEDMA_MasterId
DMA's master ID when channel is active and master ID replication is enabled.

enum _edma_interrupt_enable
eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable
Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable
Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable
Enable interrupt while major count to half value.

enum _edma_transfer_type
eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory
Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory
Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral
Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral
Transfer from Peripheral to peripheral

eDMA transfer status, _edma_transfer_status

Values:

enumerator kStatus_EDMA_QueueFull
TCD queue is full.

enumerator kStatus_EDMA_Busy
Channel is busy and can't handle the transfer request.

typedef enum *_edma_transfer_size* edma_transfer_size_t
eDMA transfer configuration

typedef enum *_edma_modulo* edma_modulo_t
eDMA modulo configuration

typedef enum *_edma_bandwidth* edma_bandwidth_t
Bandwidth control.

typedef enum *_edma_channel_link_type* edma_channel_link_type_t
Channel link type.

typedef enum *_edma_interrupt_enable* edma_interrupt_enable_t
eDMA interrupt source

typedef enum *_edma_transfer_type* edma_transfer_type_t
eDMA transfer type

typedef struct *_edma_config* edma_config_t
eDMA global configuration structure.

typedef struct *_edma_transfer_config* edma_transfer_config_t
eDMA transfer configuration

This structure configures the source/destination transfer attribute.

typedef struct *_edma_channel_Preemption_config* edma_channel_Preemption_config_t
eDMA channel priority configuration

typedef struct *_edma_minor_offset_config* edma_minor_offset_config_t
eDMA minor offset configuration

typedef struct *_edma_tcd* edma_tcd_t
eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

typedef void (*edma_callback)(struct *_edma_handle* *handle, void *userData, bool transferDone, uint32_t tcds)
Define callback function for eDMA.

typedef uint32_t (*edma_memorymap_callback)(uint32_t addr)
Memroy map function callback for DMA.

typedef struct *_edma_handle* edma_handle_t
: eDMA transfer handle structure

typedef enum *_edma_transfer_size* edma_transfer_size_t
: eDMA transfer configuration

typedef enum *_edma_modulo* edma_modulo_t
: eDMA modulo configuration

typedef enum *_edma_bandwidth* edma_bandwidth_t
: Bandwidth control.

typedef enum *_edma_channel_link_type* edma_channel_link_type_t
: Channel link type.

typedef enum *_edma_interrupt_enable* edma_interrupt_enable_t
: eDMA interrupt source

typedef enum *_edma_transfer_type* edma_transfer_type_t
: eDMA transfer type

typedef struct *_edma_config* edma_config_t
: eDMA global configuration structure.

typedef struct *_edma_transfer_config* edma_transfer_config_t
: eDMA transfer configuration

  This structure configures the source/destination transfer attribute.

typedef struct *_edma_channel_Preemption_config* edma_channel_Preemption_config_t
: eDMA channel priority configuration

typedef struct *_edma_minor_offset_config* edma_minor_offset_config_t
: eDMA minor offset configuration

typedef struct *_edma_tcd* edma_tcd_t
: eDMA TCD.

  This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

typedef void (*edma_callback)(struct *_edma_handle* *handle, void *userData, bool transferDone, uint32_t tcds)
: Define callback function for eDMA.

typedef uint32_t (*edma_memorymap_callback)(uint32_t addr)
: Memroy map function callback for DMA.

typedef struct *_edma_handle* edma_handle_t
: eDMA transfer handle structure

struct __edma_config
: *#include <fsl_ad_edma.h>* eDMA global configuration structure.

Public Members

bool enableMasterIdReplication
: Enable (true) master ID replication. If Master ID replication is disabled, the privileged protection level (supervisor mode) for DMA transfers is used.

bool enableHaltOnError

Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

bool enableRoundRobinArbitration

Enable (true) round robin channel arbitration method or fixed priority arbitration is used for channel selection

bool enableDebugMode

Enable(true) eDMA debug mode. When in debug mode, the eDMA stalls the start of a new channel. Executing channels are allowed to complete.

struct __edma__transfer__config

#include <fsl_ad_edma.h> eDMA transfer configuration

This structure configures the source/destination transfer attribute.

Public Members

uint32_t srcAddr

Source data address.

uint32_t destAddr

Destination data address.

edma_transfer_size_t srcTransferSize

Source data transfer size.

edma_transfer_size_t destTransferSize

Destination data transfer size.

int16_t srcOffset

Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.

int16_t destOffset

Sign-extended offset applied to the current destination address to form the next-state value as each destination write is completed.

uint32_t minorLoopBytes

Bytes to transfer in a minor loop

uint32_t majorLoopCounts

Major loop iteration count.

struct __edma__channel__Preemption__config

#include <fsl_ad_edma.h> eDMA channel priority configuration

Public Members

bool enableChannelPreemption

If true: a channel can be suspended by other channel with higher priority

bool enablePreemptAbility

If true: a channel can suspend other channel with low priority

uint8_t channelPriority

Channel priority

struct __edma__minor__offset__config

#include <fsl_ad_edma.h> eDMA minor offset configuration

Public Members

bool enableSrcMinorOffset

Enable(true) or Disable(false) source minor loop offset.

bool enableDestMinorOffset

Enable(true) or Disable(false) destination minor loop offset.

uint32_t minorOffset

Offset for a minor loop mapping.

struct _edma_tcd

#include <fsl_ad_edma.h> eDMA TCD.

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

Public Members

___IO uint32_t SADDR

SADDR register, used to save source address

___IO uint16_t SOFF

SOFF register, save offset bytes every transfer

___IO uint16_t ATTR

ATTR register, source/destination transfer size and modulo

___IO uint32_t NBYTES

Nbytes register, minor loop length in bytes

___IO uint32_t SLAST

SLAST register

___IO uint32_t DADDR

DADDR register, used for destination address

___IO uint16_t DOFF

DOFF register, used for destination offset

___IO uint16_t CITER

CITER register, current minor loop numbers, for unfinished minor loop.

___IO uint32_t DLAST_SGA

DLASTSGA register, next stcd address used in scatter-gather mode

___IO uint16_t CSR

CSR register, for TCD control status

___IO uint16_t BITER

BITER register, begin minor loop count.

struct _edma_handle

#include <fsl_ad_edma.h> eDMA transfer handle structure

Public Members

edma_callback callback

Callback function for major count exhausted.

void *userData
Callback function parameter.

DMA_AD_Type *base
eDMA peripheral base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint8_t channel
eDMA channel number.

volatile int8_t header
The first TCD index.

volatile int8_t tail
The last TCD index.

volatile int8_t tcdUsed
The number of used TCD slots.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

uint8_t flags
The status of the current channel.

DMA_Type *base
eDMA peripheral base address.

2.10 EPDC: Electrophoretic Display Controller

static inline void EPDC_EnableInterrupts(EPDC_Type *base, uint8_t interrupts)
Enables non LUT complete EPDC interrupt source.

Parameters

- base – EPDC base pointer
- interrupts – The interrupt source mask, can be a single source or several sources in _epdc_interrupt_enable ORed together.

static inline void EPDC_DisableInterrupts(EPDC_Type *base, uint8_t interrupts)
Diables non LUT complete EPDC interrupt source.

Parameters

- base – EPDC base pointer
- interrupts – The interrupt source mask, can be a single source or several sources in _epdc_interrupt_enable ORed together.

static inline uint8_t EPDC_GetEnabledInterrupts(EPDC_Type *base)
Gets all the enabled non LUT complete interrupt sources.

Parameters

- base – EPDC base pointer

Returns
The interrupt source mask, can be a single source or several sources in _epdc_interrupt_enable ORed together.

static inline uint16_t EPDC_GetStatusFlags(EPDC_Type *base)

Gets the EPDC status flags.

Parameters

- base – EPDC base pointer

Returns

the mask of status flags, can be a single flag or several flags in _epdc_status_flags ORed together.

static inline void EPDC_ClearStatusFlags(EPDC_Type *base, uint16_t statusFlags)

Clears the EPDC status flags.

Parameters

- base – EPDC base pointer
- statusFlags – The status flag mask, can be a single flag or several flags in _epdc_status_flags ORed together.

static inline void EPDC_EnableLutCompleteInterrupts(EPDC_Type *base, uint64_t interrupts)

Enables LUT complete interrupt source.

Parameters

- base – EPDC base pointer
- interrupts – The interrupt source mask of single source or several sources up to all 64 interrupt sources. If user wants to enable the complete interrupt for LUT17, set the bit 17 in this param.

static inline void EPDC_DisableLutCompleteInterrupts(EPDC_Type *base, uint64_t interrupts)

Disables LUT complete interrupt source.

Parameters

- base – EPDC base pointer
- interrupts – The interrupt source mask of single source or several sources up to all 64 interrupt sources. If user wants to disable the complete interrupt for LUT17, set the bit 17 in this param.

static inline uint64_t EPDC_GetEnabledLutCompleteInterrupts(EPDC_Type *base)

Gets all the enabled LUT complete interrupts.

Parameters

- base – EPDC base pointer

Returns

The interrupt source mask, can be a single source or several sources up to all 64 interrupt sources. If complete interrupt for LUT17 is enabled, bit 17 is set.

static inline uint64_t EPDC_GetLutCompleteStatusFlags(EPDC_Type *base)

Gets the LUT complete status flags.

Parameters

- base – EPDC base pointer

Returns

the mask of status flags, can be a single flag or several flags up to all 64 interrupt flags. If LUT17 has completed, bit 17 is set.

static inline void EPDC_ClearLutCompleteStatusFlags(EPDC_Type *base, uint64_t statusFlags)

Clears the LUT complete status flags.

Parameters

- base – EPDC base pointer
- the – mask of status flags, can be a single flag or several flags up to all 64 interrupt flags. If user wants to clear LUT17 completion, set bit 17 in this param.

void EPDC_ResetToInit(EPDC_Type *base)

Resets the EPDC to initialized state.

Parameters

- base – EPDC base pointer

void EPDC_Init(EPDC_Type *base)

Initializes the EPDC.

This function enables the EPDC peripheral clock, and resets the EPDC registers to default status.

Parameters

- base – EPDC base pointer

void EPDC_Deinit(EPDC_Type *base)

De-initializes the EPDC.

This function disables the EPDC peripheral clock.

Parameters

- base – EPDC base pointer

status_t EPDC_InitDisplay(EPDC_Type *base, const *epdc_display_config_t* *config)

Initializes the EPDC dispaly parameters.

Parameters

- base – EPDC base pointer
- config – Pointer to EPDC display configuration structure

Return values

- kStatus_Success – Successfully initialized the display parameters
- kStatus_InvalidArgument – parameter(s) is(are) not valid

status_t EPDC_ConfigFifo(EPDC_Type *base, const *epdc_fifo_config_t* *config)

Configures the FIFO control parameters, including panic function and pre-fill level.

Parameters

- base – EPDC base pointer
- config – Pointer to EPDC FIFO control configuration structure

Return values

- kStatus_Success – Successfully configured the FIFO
- kStatus_InvalidArgument – parameter(s) is(are) not valid

static inline void EPDC_EnableFifoPanic(EPDC_Type *base, bool enable)

Enables/disables the panic funtion for FIFO control.

Parameters

- base – EPDC base pointer
- enable – true to enable panic function, false to disable

status_t EPDC_ConfigTCE(EPDC_Type *base, const *epdc_tce_config_t* *config)

Configures the TCE parameters before initiating the panel update.

Note: Make sure to configure the display parameters by EPDC_InitDisplay before calling this API.

Parameters

- base – EPDC base pointer
- config – Pointer to EPDC TCE control configuration structure

Return values

- kStatus_Success – Successfully configured the TCE
- kStatus_InvalidArgument – parameter(s) is(are) not valid

void EPDC_ConfigPigeon(EPDC_Type *base, uint8_t signalNum, const *epdc_pigeon_config_t* *config)

Configures the signal output format for signals that support pigeon mode.

Note: Refer to the soc reference manual to check the configurable pigeon signal. No need to call this API if not using the pigeon mode.

Parameters

- base – EPDC base pointer
- signalNum – The number of the pigeon signal to be configured
- config – Pointer to EPDC pigeon mode configuration structure

void EPDC_ConfigPigeonCycle(EPDC_Type *base, const *epdc_pigeon_cycle_config_t* *config)

Configures the cycle's period.

When selecting any of the pclk/line/frame cycle as global counter, call this API forst to set the proper cycle period. The configuraton is shared for all pigeon signals.

Parameters

- base – EPDC base pointer
- config – Pointer to EPDC pigeon mode cycle configuration structure

status_t EPDC_GetNextAvailableLUT(EPDC_Type *base, uint8_t *lutNum)

Gets the number of the next available LUT.

Parameters

- base – EPDC base pointer
- lutNum – Pointer to LUT number

Return values

- kStatus_Success – Successfully got the LUT number
- kStatus_Fail – no valid LUT present, all LUTs are busy

static inline void EPDC_ConfigureWaveform(EPDC_Type *base, uint8_t waveformMode)

Configures the waveform mode and initiate the panel update.

Parameters

- base – EPDC base pointer

- waveformMode – Waveform mode

status_t EPDC_UpdateDisplay(EPDC_Type *base, *epdc_update_config_t* *config)

Initiates a panel display update.

Parameters

- base – EPDC base pointer
- config – Pointer to update configuration structure

Return values

- kStatus_Success – Successfully initiate an update
- kStatus_Fail – update failed due to busy working buffer or LUT
- kStatus_InvalidArgument – parameter(s) is(are) not valid

void EPDC_SetAutowaveMap(EPDC_Type *base, const *epdc_autowave_map_t* *config)

Sets one map between a grey level and its waveform mode.

Call this API multiple times until all the maps are set.

Parameters

- base – EPDC base pointer
- config – Pointer to autowave configuration structure

void EPDC_SetGpioOutput(EPDC_Type *base, const *epdc_gpio_config_t* *config)

Sets the GPIO output value for BDR(0,1), PWR_CTRL(0,1,2,3), PWR_COM and PWR_WAKE pins.

Parameters

- base – EPDC base pointer
- config – Pointer to GPIO configuration structure

void EPDC_GetCollisionStatus(EPDC_Type *base, *epdc_collision_status_t* *status)

Gets the status of the collision.

Parameters

- base – EPDC base pointer
- status – Pointer to collision status structure

FSL_EPDC_DRIVER_VERSION

enum _epdc_interrupt_enable

EPDC non LUT complete interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask. EPDC also has 64 independent LUT complete interrupts.

Values:

enumerator kEPDC_WbCompleteInterruptEnable

Working buffer complete interrupt.

enumerator kEPDC_LutCollisionDetetionInterruptEnable

Collision detection interrupt for all LUTs.

enumerator kEPDC_FifoUnderRunInterruptEnable

Pixel FIFO underrun interrupt.

enumerator kEPDC_FrameCompleteInterruptEnable
Current frame is complete and in vertical blanking period interrupt.

enumerator kEPDC_AxiBusErrorInterruptEnable
AXI bus error occur interrupt.

enumerator kEPDC_TceIdleInterruptEnable
TCE finished frame scan and in isle state interrupt.

enumerator kEPDC_UpdateCompleteInterruptEnable
Update complete interrupt.TODO

enumerator kEPDC_PowerInterruptEnable
Power interrupt.TODO

enum _epdc_status_flags
EPDC non LUT complete status flags.

Note: These enumerations are meant to be OR'd together to form a bit mask. EPDC also has 64 independent LUT complete interrupt status.

Values:

enumerator kEPDC_WbBusyFlag
Working buffer process is busy and cannot accept new update requests.

enumerator kEPDC_LutBusyFlag
All the LUTs ary busy.

enumerator kEPDC_LutUnderrunFlag
Not enough time for active luts read during blanking period.

enumerator kEPDC_UpdateBufferVoidFlag
Update buffer is void indicating no pixels need updating or all pixels were collided.

enumerator kEPDC_WbCompleteInterruptFlag
Working buffer complete interrupt flag.

enumerator kEPDC_LutCollisionDetetionInterruptFlag
Collision detection interrupt flag for all LUTs.

enumerator kEPDC_FifoUnderRunInterruptFlag
Pixel FIFO underrun interrupt flag.

enumerator kEPDC_FrameCompleteInterruptFlag
Interrupt flag indicating current frame is complete and in vertical blanking period.

enumerator kEPDC_AxiBusErrorInterruptFlag
AXI bus error occur interrupt flag.

enumerator kEPDC_TceIdleInterruptFlag
Interrupt flag indicationg TCE has finished frame scan and in isle state.

enumerator kEPDC_UpdateCompleteInterruptFlag
Update complete interrupt flag.TODO

enumerator kEPDC_PowerInterruptFlag
Power interrupt flag.TODO

enum _epdc_pixel_format

EPDC TFT pixel format.

Values:

enumerator kEPDC_Pixel2bit

enumerator kEPDC_Pixel2bitVcom

enumerator kEPDC_Pixel4bit

enumerator kEPDC_Pixel4bitVcom

enum _epdc_wb_type

EPDC working buffer type.

Values:

enumerator kEPDC_WbInternal

Internal Working Buffer written by EPDC itself.

enumerator kEPDC_WbWaveform

Working buffer is actually holding waveform.

enumerator kEPDC_Wb16bit

16bit working buffer written by PXP or CPU.

enumerator kEPDC_Wb32bit

32bit working buffer written by PXP or CPU.

enum _epdc_data_swizzle

EPDC data swizzle type for update date or LUT data.

Values:

enumerator kEPDC_NoSwap

Little endian, no byte swapping.

enumerator kEPDC_SwapAllBytes

Big endian, byte 0|1|2|3 -> 3|2|1|0.

enumerator kEPDC_SwapHalfWord

byte 0|1|2|3 -> 2|3|0|1.

enumerator kEPDC_SwapWithinHalfWord

byte 0|1|2|3 -> 1|0|3|2.

enum _epdc_tce_vcom_mode

The VCOM value configuration.

Values:

enumerator kEPDC_VcomManual

VCOM value is set manually, call EPDC_SetGpioOutput to set the VCOM value output.

enumerator kEPDC_VcomAuto

VCOM value is used from waveform.

enum _epdc_data_output_mode

The data output mode using DATA0 - DATA15.

Values:

enumerator kEPDC_Sdr8bit

Data driven only on positive edge of SDCLK. Connect to 8-bit SDDO.

enumerator kEPDC_Sdr16bit
Data driven only on positive edge of SDCLK. Connect to 8-bit SDDO.

enumerator kEPDC_Ddr8bit
Data driven on both edge of SDCLK. Connect to 8-bit SDDO.

enumerator kEPDC_Ddr16bit
Data driven on both edge of SDCLK. Connect to 16-bit SDDO.

enumerator kEPDC_Lvds
DATA[15:8] is for differencial signalling. Requires data driven on both edge of SDCLK and connect to 16-bit SDDO.

enumerator kEPDC_SdrDualScan
Data driven only on positive edge of SDCLK. DATA[7:0] and DATA[15:8] drive the upper/lower half of the panel.

enumerator kEPDC_DdrDualScan
Data driven on both edge of SDCLK. DATA[7:0] and DATA[15:8] drive the upper/lower half of the panel.

enum _epdc_dualscan_direction
The vertical scan direction in dual scan mode.

Values:

enumerator kEPDC_DualScanToptoBottom
Scan this region from top to bottom.

enumerator kEPDC_DualScanBottomtoTop
Scan this region from bottom to top.

enum _epdc_polarity
The signal output polarity for SDCE/SDLE/SDOE in source driver and GDOE/GDSP in gate driver.

Values:

enumerator kEPDC_ActiveLow

enumerator kEPDC_ActiveHigh

enum _epdc_data_reverse
The data reverse configuration for source driver configuration.

Values:

enumerator kEPDC_DataUnchanged

enumerator kEPDC_DataReversed
Reverse the pixel order on SDDO, eg: 2B/pixel on 8-bit bus, P3,P2,P1,P0->P0,P1,P2,P3.

enum _epdc_shift_direction
Shift direction for SDSHR/GDRL signal for sourece/gate driver configuration.TODO.

Values:

enumerator kEPDC_ShiftRight

enumerator kEPDC_ShiftLeft

enum _epdc_signal_delay
SDCLK/SDLE signal delay.

Values:

enumerator kEPDC_NoDelay
No delay.

enumerator kEPDC_Delay1Cycle
Delay 1 SDCLK cycle.

enumerator kEPDC_Delay2Cycle
Delay 2 SDCLK cycle.

enumerator kEPDC_Delay3Cycle
Delay 3 SDCLK cycle.

enum _epdc_gdoe_mode
The output mode for GDOE signal.

Values:

enumerator kEPDC_GDOEActiveBesideSync
GDOE is driven at all times during the frame-scan except FRAME_SYNC.

enumerator kEPDC_GDOEActiveDelayedSck
GDOE is driven as a delayed version of GDCLK, and only active during the frame-data time.

enum _epdc_gdsp_mode
The output mode for GDSP signal.

Values:

enumerator kEPDC_GDSPActiveOnBegin
GDSP is driven on the first line clock of FRAME_BEGIN for one GDCLK period, and can be shifted using the GDSP_OFFSET control.

enumerator kEPDC_GDSPActiveDuringSync
GDSP is active during the entire FRAME_SYNC, and GDSP_OFFSET has no effect.

enum _epdc_pigeon_localCounter_tickEvent
Local counter tick event.

Values:

enumerator kEPDC_TickOnPclk
Counter tick on pixel clock.

enumerator kEPDC_TickOnLineStart
Counter tick on line start pulse.

enumerator kEPDC_TickOnFrameStart
Counter tick on frame start pulse.

enumerator kEPDC_TickOnAnotherSignal
Use another signal as tick event.

enum _epdc_pigeon_globalCounter
Global counter select for pigeon signal's local counter start event. If selecting any of the pclk/line/frame cycle, need to call EPDC_ConfigPigeonCycle to set the cycle period first. The cycle configuration applies to all pigeon signals.

Values:

enumerator kEPDC_PclkCounterReset
Use pclk counter as global counter, counter reset when state changes.

enumerator kEPDC_PclkCycleReset

Use pclk cycle as global counter, counter reset when state changes. Refer to epdc_pigeon_cycle_config_t for the definition of cycle.

enumerator kEPDC_LineCounterReset

Use line counter as global counter, counter reset when state changes.

enumerator kEPDC_LineCycleReset

Use line cycle as global counter, counter reset when state changes. Refer to epdc_pigeon_cycle_config_t for the definition of cycle.

enumerator kEPDC_FrameCounter

Use frame counter as global counter.

enumerator kEPDC_FrameCycle

Use frame cycle as global counter. Refer to epdc_pigeon_cycle_config_t for the definition of cycle.

enumerator kEPDC_PclkCounter

Use pclk counter as global counter.

enumerator kEPDC_LineCounter

Use line counter as global counter.

enum _epdc_pigeon_localCounter_startEvent

The event for the pigeon signal's local counter to start ticking. Chose one or more frame events and one or more line events, OR them together to form the final event. eg: Use (kEPDC_FrameData | kEPDC_LineBegin), then the local counter will start ticking when line begin starts on the frame data phase.

Values:

enumerator kEPDC_FrameSync

enumerator kEPDC_FrameBegin

enumerator kEPDC_FrameData

enumerator kEPDC_FrameEnd

enumerator kEPDC_LineSync

enumerator kEPDC_LineBegin

enumerator kEPDC_LineData

enumerator kEPDC_LineEnd

enum _epdc_pigeon_output_logic

Signal output logic .

Values:

enumerator kEPDC_NoLogic

No logic operation, use the chosen another signal directly as the output.

enumerator kEPDC_SignalAndAnother

Use the pigeon signal AND this chosen another signal to form the final output.

enumerator kEPDC_SignalOrAnother

Use the pigeon signal OR this chosen another signal to form the final output.

enumerator kEPDC_StartPointAndAnother

Use local counter's start point AND this chosen another signal to form the final output.TODO

enum _epdc_waveform_mode

Waveform mode.

Values:

enumerator kEPDC_WaveformInit

Panel initialization. Completely erase the display and leave it in the white state.

enumerator kEPDC_WaveformDU

Direct update. Very fast, non-flashy, transitions from any graytone to black or white only.

enumerator kEPDC_WaveformGC16

Grayscale clearing. High image quality, has 16 unique gray levels.

enumerator kEPDC_WaveformGL16

Used to update scattered content on a white background with reduced flash, has 16 unique gray levels.

enumerator kEPDC_WaveformGLR16

Similar to GL16, but if a separately-supplied image preprocessing algorithm is used, display quality is improved when transitions to pixel states 29 and 31.

enumerator kEPDC_WaveformGLD16

Similar to GL16, but if a separately-supplied image preprocessing algorithm is used, display quality is improved when transitions to pixel states 29 and 31, with lighter flash of the background compared to GC16 mode, and reduce image artifacts even more compared to the GLR16 mode.

enumerator kEPDC_WaveformA2

Very fast, non-flashy, transitions from black or white to black or white only.

enumerator kEPDC_WaveformDU4

Direct update 4. Very fast, non-flashy, from any graytone to gray tones 1,6,11,16 represented by pixel states [0 10 20 30].

typedef enum *_epdc_pixel_format* epdc_pixel_format_t

EPDC TFT pixel format.

typedef enum *_epdc_wb_type* epdc_wb_type_t

EPDC working buffer type.

typedef enum *_epdc_data_swizzle* epdc_data_swizzle_t

EPDC data swizzle type for update date or LUT data.

typedef struct *_epdc_display_config* epdc_display_config_t

EPDC display configuration.

typedef struct *_epdc_fifo_config* epdc_fifo_config_t

EPDC FIFO control configuration.

typedef enum *_epdc_tce_vcom_mode* epdc_tce_vcom_mode_t

The VCOM value configuration.

typedef enum *_epdc_data_output_mode* epdc_data_output_mode_t

The data output mode using DATA0 - DATA15.

typedef enum *_epdc_dualscan_direction* epdc_dualscan_direction_t

The vertical scan direction in dual scan mode.

typedef enum *_epdc_polarity* epdc_polarity_t

The signal output polarity for SDCE/SDLE/SDOE in source driver and GDOE/GDSP in gate driver.

typedef enum *_epdc_data_reverse* epdc_data_reverse_t

The data reverse configuration for source driver configuration.

typedef enum *_epdc_shift_direction* epdc_shift_direction_t

Shift direction for SDSHR/GDRL signal for sourece/gate driver configuration.TODO.

typedef enum *_epdc_signal_delay* epdc_signal_delay_t

SDCLK/SDLE signal delay.

typedef struct *_epdc_sd_config* epdc_sd_config_t

EPDC source driver configuration. Source driver controls the timing for horizontal scan.

typedef enum *_epdc_gdoe_mode* epdc_gdoe_mode_t

The output mode for GDOE signal.

typedef enum *_epdc_gdsp_mode* epdc_gdsp_mode_t

The output mode for GDSP signal.

typedef struct *_epdc_gd_config* epdc_gd_config_t

EPDC gate driver configuration. Gate driver controls the timing for vertical scan.

typedef struct *_epdc_scan_config* epdc_scan_config_t

EPDC scan configuration. Including horizontal scan(line timing) and vertical scan(fram timing).

typedef struct *_epdc_tce_config* epdc_tce_config_t

EPDC TCE(timing controller engine) configuration.

typedef enum *_epdc_pigeon_localCounter_tickEvent* epdc_pigeon_localCounter_tickEvent_t

Local counter tick event.

typedef enum *_epdc_pigeon_globalCounter* epdc_pigeon_globalCounter_t

Global counter select for pigeon signal's local counter start event. If selecting any of the pclk/line/frame cycle, need to call EPDC_ConfigPigeonCycle to set the cycle period first. The cycle configuration applies to all pigeon signals.

typedef enum *_epdc_pigeon_output_logic* epdc_pigeon_output_logic_t

Signal output logic .

typedef struct *_epdc_pigeon_config* epdc_pigeon_config_t

Signal pigeon mode configuration. Each pigeon signal has one local counter with a configurable start/tick event. The counter value is compared to setCount/clearCount for signal assertion/de-assertion.

typedef struct *_epdc_pigeon_cycle_config* epdc_pigeon_cycle_config_t

The pixle/line/frame cycle definition for global counter, shared by all pegion signals.

typedef enum *_epdc_waveform_mode* epdc_waveform_mode_t

Waveform mode.

typedef struct *_epdc_update_config* epdc_update_config_t

Panel update configuration.

typedef struct *_epdc_autowave_map* epdc_autowave_map_t

Autowave map configuration.

typedef struct *_epdc_gpio_config* epdc_gpio_config_t

GPIO pin output configuration.

typedef struct *_epdc_collision_status* epdc_collision_status_t

Update collision status structure.

struct _epdc_display_config

#include <fsl_epdc.h> EPDC display configuration.

Public Members

uint32_t waveformAddr

64-bit aligned waveform table address.

uint32_t wbAddr

64-bit aligned working buffer address.

uint32_t tempIdx

Temperature index, used by the EPDC to access the correct temperature compensated waveform.

uint16_t resX

Horizontal resolution in pixels.

uint16_t resY

Vertical resolution in pixels.

uint8_t defaltTftPixelValue

The source-driver voltage value for either partial updates where a pixel has not changed or for any part of the screen which is not being updated during active frame scans.

epdc_pixel_format_t pixelFormat

How many bits of the SDDO bus are required per pixel. This field must be consistent with the waveform and panel architecture.

epdc_wb_type_t wbType

Working buffer type.

epdc_data_swizzle_t updSwizzle

How to swap the bytes for the UPD data before the WB construction.

epdc_data_swizzle_t lutSwizzle

How to swap the bytes for the LUT data before store to LUTRAM.

struct _epdc_fifo_config

#include <fsl_epdc.h> EPDC FIFO control configuration.

Public Members

uint32_t lowLevel

Low level for panic function.

uint32_t highLevel

High level for panic function.

uint32_t prefillLevel

EPDC pre-fill pixel FIFO to this level before TCE starts refresh operations. Must be less than VERTICAL x HORIZONTAL / 4.

uint32_t ___pad0___

Reserved.

uint32_t panicEnable

Enable epdc_panic output signal for priority elevation. Signal asserts when data in FIFO is below the low level and de-asserts when above the high level. When asserted, EPDC transaction requests have elevated priority at SoC-level bus arbitration.

struct __epdc__sd__config

#include <fsl_epdc.h> EPDC source driver configuration. Source driver controls the timing for horizontal scan.

Public Members

uint32_t sdcePol

SDCE polarity. Refer epdc_polarity_t.

uint32_t sdlePol

SDLE polarity. Refer epdc_polarity_t.

uint32_t sdoePol

SDOE polarity, including SDOE/SDOEZ/SDOED. Refer epdc_polarity_t.

uint32_t sdclk__delay

Additional delay to the SDCLK generation. Refer epdc_signal_delay_t.

uint32_t ___pad0___

Reserved.

uint32_t sdclk__invert

Invert the SDCLK signal.

uint32_t sdle__delay

Additional delay to the SDLE generation. Refer epdc_signal_delay_t.

uint32_t ___pad1___

Reserved.

uint32_t dataInvert

Invert the polarity of each SDDO bit, eg: 0xAAAA -> 0x5555.

uint32_t pixelReverse

Reverse the pixel order on SDDO, eg: 2B/pixel on 8-bit bus, P3,P2,P1,P0->P0,P1,P2,P3. Refer epdc_data_reverse_t.

uint32_t sdceCount

The total count of source driver IC chip-enable pins. Make sure the horizontal resolution can be evenly devided by it.

uint32_t shiftDir

The value of the SDSHR output signal controlling shift direction. Refer epdc_shift_direction_t.

uint32_t clockHoldEnable

Enable to hold the SDCLK low furing line begin phase.

uint32_t ___pad2___

Reserved.

uint32_t sdoezDelay

Number of PIXCLK cycles from SDLE falling edge to SDOEZ rising.

uint32_t sdoezWidth

Number of PIXCLK cycles from SDOEZ high to SDOEZ falling.

uint32_t sdoedDelay

Number of PIXCLK cycles from SDOEZ low to SDOED rising.

uint32_t sdoedWidth

Number of PIXCLK cycles from SDOED high to SDOED falling.

struct __epdc_gd_config

#include <fsl_epdc.h> EPDC gate driver configuration. Gate driver controls the timing for vertical scan.

Public Members

epdc_shift_direction_t shiftDir

The value of the GDRL output signal controlling gate driver pulse shift direction.

epdc_gdoe_mode_t gdoeMode

GDOE(gate driver output enable) signal mode.

epdc_gdsp_mode_t gdspMode

GDSP(gate driver start pulse) signal mode.

epdc_polarity_t gdoePol

GDOE polarity.

epdc_polarity_t gdspPol

GDSP polarity.

uint16_t gdoeOffset

Delay GDOE in the terms of PIXCLK.

uint16_t gdspOffset

Delay GDSP in the terms of PIXCLK, only works when GDSP mode is kEPDC_GDSPActiveOnBegin.

uint16_t gdClkOffset

Delay GDCLK from the line time in the terms of PIXCLK.

uint16_t gdClkHigh

GDCLK high-pulse width in PIXCLK. The GDCLK cycle(high+low) always equal to line timing.

struct __epdc_scan_config

#include <fsl_epdc.h> EPDC scan configuration. Including horizontal scan(line timing) and vertical scan(fram timing).

Public Members

uint16_t lineSync

Number of PIXCLK cycles for line sync duration.

uint16_t lineBegin

Number of PIXCLK cycles for line begin duration.

uint16_t lineEnd

Number of PIXCLK cycles for line end duration.

uint8_t frameSync

Number of lines for frame sync duration.

uint8_t frameBegin

Number of lines for frame begin duration.

uint8_t frameEnd

Number of lines for frame end duration.

struct _epdc_tce_config

#include <fsl_epdc.h> EPDC TCE(timing controller engine) configuration.

Public Members

uint32_t tceWbAddr

Working buffer address for TCE.

uint16_t vscanHoldoff

9-bit max. Hold off the vertical scan timing during the blanking period to allow more smaller updates to be processed and included in the frame scan. Note the remainder of the blanking period is reserved for pre-filling the TCE pixel FIFOs so make sure enough time is left to prevent FIFO underrun.

uint8_t vcomVal

2-bit max. The VCOM value when mode is manual.

epdc_tce_vcom_mode_t vcomMode

The method to driver VCOM signal.

epdc_data_output_mode_t outMode

The data output mode.

epdc_dualscan_direction_t upperScanDirection

The scan direction of the upper half in dual scan mode.

epdc_dualscan_direction_t lowerScanDirection

The scan direction of the lower half in dual scan mode.

epdc_sd_config_t sdConfig

Source driver configuration

epdc_gd_config_t gdConfig

Gate driver configuration

epdc_scan_config_t scanConfig

Scan configuration

struct _epdc_pigeon_config

#include <fsl_epdc.h> Signal pigeon mode configuration. Each pigeon signal has one local counter with a configurable start/tick event. The counter value is compared to setCount/clearCount for signal assertion/de-assertion.

Public Members

uint32_t enablePigeon

Enable pigeon mode for this signal.

uint32_t polarity

Polarty of the signal output.

uint32_t localCounterTickEvent

The tick event selection for local counter. Refer epdc_pigeon_localCounter_tickEvent_t.

uint32_t offset

The offset of pclk unit, to let the signal come out earlier/later.TODO

uint32_t globalCounterSelect

To use a more accurate local counter start event than localCounterStartEvent, a global counter combined with startCount can be used. Refer epdc_pigeon_globalCounter_t.

uint32_t startCount

When the value of the selected global counter matches the count, the local counter starts.

uint32_t localCounterStartEvent

The event to start the local counter. Refer _epdc_pigeon_localCounter_startEvent.

uint32_t setCount

Assert signal when local counter matches this value.

uint32_t clearCount

De-assert signal when local counter matches this value.

uint32_t outputLogic

When localCounterTickEvent is kEPDC_TickOnOtherSignal, use this logic to form the final output. Refer epdc_pigeon_output_logic_t.

uint32_t anotherSignalNum

When localCounterTickEvent is kEPDC_TickOnOtherSignal, use the pigeon signal of this number to form the tick event.

uint32_t ___pad0___

Reserved.

struct __epdc__pigeon__cycle__config

#include <fsl_epdc.h> The pixle/line/frame cycle definition for global counter, shared by all pegion signals.

Public Members

uint32_t lineCount

If chosing kEPDC_LineCycleReset, n lines in a frame are considered as one cycle, when the period count matches startCount global counter starts ticking.

uint32_t ___pad0___

Reserved.

uint32_t pixCount

If chosing kEPDC_PclkCycleReset, n pixles in a line are considered as one cycle, when the period count matches startCount global counter starts ticking.

uint32_t ___pad1___

Reserved.

uint32_t frameCount

If chosing kEPDC_FrameCycle, n frames are considered as one cycle, when the period count matches startCount global counter starts ticking.

uint32_t ___pad2___

Reserved.

uint32_t maxframeCycle

The max cycles of frame cycle counter, frame cycle counter resets when reaches this value.

uint32_t ___pad3___

Reserved.

struct _epdc_update_config

#include <fsl_epdc.h> Panel update configuration.

Public Members

uint32_t bufferAddress

Address pointing to the update region which will be processed into the working buffer. If stride is zero(disabled), the address must start and end on the 8-byte aligned addresses.

uint32_t stride

Line stride.

uint32_t coordinateX

X coordinate of the new update region.

uint32_t ___pad0___

Reserved.

uint32_t coordinateY

Y coordinate of the new update region.

uint32_t ___pad1___

Reserved.

uint32_t width

The width of the new update region in pixels.

uint32_t ___pad2___

Reserved.

uint32_t height

The height of the new update region in pixels.

uint32_t ___pad3___

Reserved.

uint32_t cpValue

The CP value if using fixed CP.

uint32_t npValue

The NP value if using fixed NP.

uint32_t ___pad4___

Reserved.

uint32_t fixedCpEnable

Enable fixed CP, need to set fixedEnable first.

uint32_t fixedNpEnable

Enable fixed NP, need to set fixedEnable first.

uint32_t fullUpdateEnable

Enable full update.

uint32_t dryRunEnable

Enable dryrun which runs an update to obtain information without performing any real action.

uint32_t autoWaveEnable

Enable automatical waveform mode selection. After completes the update buffer processing, EPDC reports the minimal grey level, retrieves the mapped waveform mode and program it into UPD_CTRL[WAVEFORM_MODE]. To use autowave the waveform map should be programmed in advance.

uint32_t pauseEnable

Enable pause after auto waveform selection. User can choose to check and alter the waveform mode then initiate the update by calling EPDC_ConfigureWaveform.

uint32_t voidUpdateCancleDisable

Disable the feature of cancelling void update(due to collision).

uint32_t ___pad5___

Reserved.

uint32_t waveformMode

Waveform used for the update. Refer epdc_waveform_mode_t.

uint32_t lutNum

The LUT number used for the update, can use EPDC_GetNextAvailableLUT.

uint32_t ___pad6___

Reserved.

uint32_t fixedEnable

Use fixed pixel values.

struct _epdc_autowave_map

#include <fsl_epdc.h> Autowave map configuration.

Public Members

uint32_t greyLevel

Grey level.

uint32_t ___pad0___

Reserved.

uint32_t waveformMode

Waveform mode. Refer @epdc_waveform_mode_t.

uint32_t ___pad1___

Reserved.

struct _epdc_gpio_config

#include <fsl_epdc.h> GPIO pin output configuration.

Public Members

uint32_t bdrOutput

The BDR(0,1) pin output value.

uint32_t pwrCtrlOutput

The PWR_CTRL(0,1,2,3) pin output value.

uint32_t pwrComOutput

The PWR_COM pin output value.

uint32_t pwrWakeOutput
: The PWR_WAKE pin output value.

uint32_t ___pad0___
: Reserved.

struct _epdc_collision_status
: *#include <fsl_epdc.h>* Update collision status structure.

Public Members

uint16_t minX
: The x offset of the ULC of the collision region.

uint16_t minY
: The y offset of the ULC of the collision region.

uint16_t width
: The width of the collision region.

uint16_t height
: The height of the collision region.

uint64_t lutlist
: 64-bit LUT list of the victim LUT(s), if LUT17 is being collided, then the bit17 of the list is set.

2.11 EWM: External Watchdog Monitor Driver

void EWM_Init(EWM_Type *base, const *ewm_config_t* *config)
: Initializes the EWM peripheral.

  This function is used to initialize the EWM. After calling, the EWM runs immediately according to the configuration. Note that, except for the interrupt enable control bit, other control bits and registers are write once after a CPU reset. Modifying them more than once generates a bus transfer error.

  This is an example.

```
ewm_config_t config;
EWM_GetDefaultConfig(&config);
config.compareHighValue = 0xAAU;
EWM_Init(ewm_base,&config);
```

  Parameters

  - base – EWM peripheral base address
  - config – The configuration of the EWM

void EWM_Deinit(EWM_Type *base)
: Deinitializes the EWM peripheral.

  This function is used to shut down the EWM.

  Parameters

  - base – EWM peripheral base address

void EWM_GetDefaultConfig(*ewm_config_t* *config)

Initializes the EWM configuration structure.

This function initializes the EWM configuration structure to default values. The default values are as follows.

```
ewmConfig->enableEwm = true;
ewmConfig->enableEwmInput = false;
ewmConfig->setInputAssertLogic = false;
ewmConfig->enableInterrupt = false;
ewmConfig->ewm_lpo_clock_source_t = kEWM_LpoClockSource0;
ewmConfig->prescaler = 0;
ewmConfig->compareLowValue = 0;
ewmConfig->compareHighValue = 0xFEU;
```

See also:

ewm_config_t

Parameters

- config – Pointer to the EWM configuration structure.

static inline void EWM_EnableInterrupts(EWM_Type *base, uint32_t mask)

Enables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to enable The parameter can be combination of the following source if defined
  - kEWM_InterruptEnable

static inline void EWM_DisableInterrupts(EWM_Type *base, uint32_t mask)

Disables the EWM interrupt.

This function enables the EWM interrupt.

Parameters

- base – EWM peripheral base address
- mask – The interrupts to disable The parameter can be combination of the following source if defined
  - kEWM_InterruptEnable

static inline uint32_t EWM_GetStatusFlags(EWM_Type *base)

Gets all status flags.

This function gets all status flags.

This is an example for getting the running flag.

```
uint32_t status;
status = EWM_GetStatusFlags(ewm_base) & kEWM_RunningFlag;
```

See also:

_ewm_status_flags_t

- True: a related status flag has been set.
- False: a related status flag is not set.

Parameters

- base – EWM peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

void EWM_Refresh(EWM_Type *base)

Services the EWM.

This function resets the EWM counter to zero.

Parameters

- base – EWM peripheral base address

FSL_EWM_DRIVER_VERSION

EWM driver version 2.0.4.

enum _ewm_lpo_clock_source

Describes EWM clock source.

Values:

enumerator kEWM_LpoClockSource0

EWM clock sourced from lpo_clk[0]

enumerator kEWM_LpoClockSource1

EWM clock sourced from lpo_clk[1]

enumerator kEWM_LpoClockSource2

EWM clock sourced from lpo_clk[2]

enumerator kEWM_LpoClockSource3

EWM clock sourced from lpo_clk[3]

enum _ewm_interrupt_enable_t

EWM interrupt configuration structure with default settings all disabled.

This structure contains the settings for all of EWM interrupt configurations.

Values:

enumerator kEWM_InterruptEnable

Enable the EWM to generate an interrupt

enum _ewm_status_flags_t

EWM status flags.

This structure contains the constants for the EWM status flags for use in the EWM functions.

Values:

enumerator kEWM_RunningFlag

Running flag, set when EWM is enabled

typedef enum *_ewm_lpo_clock_source* ewm_lpo_clock_source_t

Describes EWM clock source.

typedef struct *_ewm_config* ewm_config_t

Data structure for EWM configuration.

This structure is used to configure the EWM.

struct _ewm_config

#include <fsl_ewm.h> Data structure for EWM configuration.

This structure is used to configure the EWM.

Public Members

bool enableEwm
: Enable EWM module

bool enableEwmInput
: Enable EWM_in input

bool setInputAssertLogic
: EWM_in signal assertion state

bool enableInterrupt
: Enable EWM interrupt

ewm_lpo_clock_source_t clockSource
: Clock source select

uint8_t prescaler
: Clock prescaler value

uint8_t compareLowValue
: Compare low-register value

uint8_t compareHighValue
: Compare high-register value

2.12 FGPIO Driver

2.13 FlexCAN: Flex Controller Area Network Driver

2.14 FlexCAN Driver

bool FLEXCAN_IsInstanceHasFDMode(CAN_Type *base)
: Determine whether the FlexCAN instance support CAN FD mode at run time.

Note: Use this API only if different soc parts share the SOC part name macro define. Otherwise, a different SOC part name can be used to determine at compile time whether the FlexCAN instance supports CAN FD mode or not. If need use this API to determine if CAN FD mode is supported, the FLEXCAN_Init function needs to be executed first, and then call this API and use the return to value determines whether to supports CAN FD mode, if return true, continue calling FLEXCAN_FDInit to enable CAN FD mode.

Parameters

- base – FlexCAN peripheral base address.

Returns
: return TRUE if instance support CAN FD mode, FALSE if instance only support classic CAN (2.0) mode.

uint32_t FLEXCAN_GetFDMailboxOffset(CAN_Type *base, uint8_t mbIdx)
: Get Mailbox offset number by dword.

  This function gets the offset number of the specified mailbox. Mailbox is not consecutive between memory regions when payload is not 8 bytes so need to calculate the specified mailbox address. For example, in the first memory region, MB[0].CS address is 0x4002_4080.

For 32 bytes payload frame, the second mailbox is ((1/12)*512 + 1%12*40)/4 = 10, meaning 10 dword after the 0x4002_4080, which is actually the address of mailbox MB[1].CS.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – Mailbox index.

Returns
Mailbox address offset in word.

status_t FLEXCAN_EnterFreezeMode(CAN_Type *base)

Enter FlexCAN Freeze Mode.

This function makes the FlexCAN work under Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns
kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

status_t FLEXCAN_ExitFreezeMode(CAN_Type *base)

Exit FlexCAN Freeze Mode.

This function makes the FlexCAN leave Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns
kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

uint32_t FLEXCAN_GetInstance(CAN_Type *base)

Get the FlexCAN instance from peripheral base address.

Parameters

- base – FlexCAN peripheral base address.

Returns
FlexCAN instance.

bool FLEXCAN_CalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t sourceClock_Hz, *flexcan_timing_config_t* *pTimingConfig)

Calculates the improved timing values by specific bit Rates for classical CAN.

This function use to calculates the Classical CAN timing values according to the given bit rate. The Calculated timing values will be set in CTRL1/CBT/ENCBT register. The calculation is based on the recommendation of the CiA 301 v4.2.0 and previous version document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The classical CAN speed in bps defined by user, should be less than or equal to 1Mbps.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns
TRUE if timing configuration found, FALSE if failed to find configuration.

void FLEXCAN_Init(CAN_Type *base, const *flexcan_config_t* *pConfig, uint32_t sourceClock_Hz)

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_Init function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc                 = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate                = 1000000U;
flexcanConfig.maxMbNum               = 16;
flexcanConfig.enableLoopBack         = false;
flexcanConfig.enableSelfWakeup       = false;
flexcanConfig.enableIndividMask      = false;
flexcanConfig.enableDoze             = false;
flexcanConfig.disableSelfReception   = false;
flexcanConfig.enableListenOnlyMode   = false;
flexcanConfig.timingConfig           = timingConfig;
FLEXCAN_Init(CAN0, &flexcanConfig, 40000000UL);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.

bool FLEXCAN_FDCalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t bitRateFD, uint32_t sourceClock_Hz, *flexcan_timing_config_t* *pTimingConfig)

Calculates the improved timing values by specific bit rates for CANFD.

This function use to calculates the CANFD timing values according to the given nominal phase bit rate and data phase bit rate. The Calculated timing values will be set in CBT/ENCBT and FDCBT/EDCBT registers. The calculation is based on the recommendation of the CiA 1301 v1.0.0 document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The CANFD bus control speed in bps defined by user.
- bitRateFD – The CAN FD data phase speed in bps defined by user. Equal to bitRate means disable bit rate switching.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration

void FLEXCAN_FDInit(CAN_Type *base, const *flexcan_config_t* *pConfig, uint32_t sourceClock_Hz, *flexcan_mb_size_t* dataSize, bool brs)

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_FDInit function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc                 = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate                = 1000000U;
```

(continues on next page)

(continued from previous page)

```
flexcanConfig.bitRateFD              = 2000000U;
flexcanConfig.maxMbNum               = 16;
flexcanConfig.enableLoopBack         = false;
flexcanConfig.enableSelfWakeup       = false;
flexcanConfig.enableIndividMask      = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
flexcanConfig.enableDoze             = false;
flexcanConfig.timingConfig           = timingConfig;
FLEXCAN_FDInit(CAN0, &flexcanConfig, 80000000UL, kFLEXCAN_16BperMB, true);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.
- dataSize – FlexCAN Message Buffer payload size. The actual transmitted or received CAN FD frame data size needs to be less than or equal to this value.
- brs – True if bit rate switch is enabled in FD mode.

void FLEXCAN_Deinit(CAN_Type *base)

De-initializes a FlexCAN instance.

This function disables the FlexCAN module clock and sets all register values to the reset value.

Parameters

- base – FlexCAN peripheral base address.

void FLEXCAN_GetDefaultConfig(*flexcan_config_t* *pConfig)

Gets the default configuration structure.

This function initializes the FlexCAN configuration structure to default values. The default values are as follows. flexcanConfig->clkSrc = kFLEXCAN_ClkSrc0; flexcanConfig->bitRate = 1000000U; flexcanConfig->bitRateFD = 2000000U; flexcanConfig->maxMbNum = 16; flexcanConfig->enableLoopBack = false; flexcanConfig->enableSelfWakeup = false; flexcanConfig->enableIndividMask = false; flexcanConfig->disableSelfReception = false; flexcanConfig->enableListenOnlyMode = false; flexcanConfig->enableDoze = false; flexcanConfig->enablePretendedeNetworking = false; flexcanConfig->enableMemoryErrorControl = true; flexcanConfig->enableNonCorrectableErrorEnterFreeze = true; flexcanConfig->enableTransceiverDelayMeasure = true; flexcanConfig->enableRemoteRequestFrameStored = true; flexcanConfig->payloadEndianness = kFLEXCAN_bigEndian; flexcanConfig.timingConfig = timingConfig;

Parameters

- pConfig – Pointer to the FlexCAN configuration structure.

void FLEXCAN_SetTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN classical CAN protocol timing characteristic.

This function gives user settings to classical CAN or CAN FD nominal phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetBitRate() instead.

Note: Calling FLEXCAN_SetTimingConfig() overrides the bit rate set in FLEXCAN_Init() or FLEXCAN_SetBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRate_Bps)

Set bit rate of FlexCAN classical CAN frame or CAN FD frame nominal phase.

This function set the bit rate of classical CAN frame or CAN FD frame nominal phase base on FLEXCAN_CalculateImprovedTimingValues() API calculated timing values.

Note: Calling FLEXCAN_SetBitRate() overrides the bit rate set in FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRate_Bps – Bit rate in Bps.

Returns

kStatus_Success - Set CAN baud rate (only Nominal phase) successfully.

void FLEXCAN_SetFDTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN CANFD data phase timing characteristic.

This function gives user settings to CANFD data phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetFDBitRate() to set both Nominal/Data bit Rate instead.

Note: Calling FLEXCAN_SetFDTimingConfig() overrides the data phase bit rate set in FLEXCAN_FDInit()/FLEXCAN_SetFDBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetFDBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRateN_Bps, uint32_t bitRateD_Bps)

Set bit rate of FlexCAN FD frame.

This function set the baud rate of FLEXCAN FD base on FLEXCAN_FDCalculateImprovedTimingValues() API calculated timing values.

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRateN_Bps – Nominal bit Rate in Bps.
- bitRateD_Bps – Data bit Rate in Bps.

Returns

kStatus_Success - Set CAN FD bit rate (include Nominal and Data phase) successfully.

void FLEXCAN_SetRxMbGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive message buffer global mask.

This function sets the global mask for the FlexCAN message buffer in a matching process. The configuration is only effective when the Rx individual mask is disabled in the FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Message Buffer Global Mask value.

void FLEXCAN_SetRxFifoGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive FIFO global mask.

This function sets the global mask for FlexCAN FIFO in a matching process.

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Fifo Global Mask value.

void FLEXCAN_SetRxIndividualMask(CAN_Type *base, uint8_t maskIdx, uint32_t mask)

Sets the FlexCAN receive individual mask.

This function sets the individual mask for the FlexCAN matching process. The configuration is only effective when the Rx individual mask is enabled in the FLEXCAN_Init(). If the Rx FIFO is disabled, the individual mask is applied to the corresponding Message Buffer. If the Rx FIFO is enabled, the individual mask for Rx FIFO occupied Message Buffer is applied to the Rx Filter with the same index. Note that only the first 32 individual masks can be used as the Rx FIFO filter mask.

Parameters

- base – FlexCAN peripheral base address.
- maskIdx – The Index of individual Mask.
- mask – Rx Individual Mask value.

void FLEXCAN_SetTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
  - true: Enable Tx Message Buffer.
  - false: Disable Tx Message Buffer.

void FLEXCAN_SetRxMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_rx_mb_config_t* *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer. User should invoke this API when CTRL2[RRS]=1. When CTRL2[RRS]=1, frame's

ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbEmpty, kFLEXCAN_RxMbFull or kFLEXCAN_RxMbOverrun. Message buffer will store the remote frame in the same fashion of a data frame. No automatic remote response frame will be generated. User need to setup another message buffer to respond remote request.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
  - true: Enable Rx Message Buffer.
  - false: Disable Rx Message Buffer.

static inline void FLEXCAN_SetMbID(CAN_Type *base, uint8_t mbIdx, uint32_t id)

Configures a FlexCAN Message Buffer identifier.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- id – CAN Message Buffer Identifier, should use FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

void FLEXCAN_SetFDTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
  - true: Enable Tx Message Buffer.
  - false: Disable Tx Message Buffer.

void FLEXCAN_SetFDRxMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_rx_mb_config_t* *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
  - true: Enable Rx Message Buffer.
  - false: Disable Rx Message Buffer.

static inline void FLEXCAN_SetFDMbID(CAN_Type *base, uint8_t mbIdx, uint32_t id)

Configures a FlexCAN Message Buffer identifier.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- id – CAN Message Buffer Identifier, should use FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

void FLEXCAN_SetRemoteResponseMbConfig(CAN_Type *base, uint8_t mbIdx, const *flexcan_frame_t* *pFrame)

Configures a FlexCAN Remote Response Message Buffer.

User should invoke this API when CTRL2[RRS]=0. When CTRL2[RRS]=0, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbRanswer. If there is a matching ID, then this mailbox content will be transmitted as response. The received remote request frame is not stored in receive buffer. It is only used to trigger a transmission of a frame in response.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pFrame – Pointer to CAN message frame structure for response.

void FLEXCAN_SetRxFifoConfig(CAN_Type *base, const *flexcan_rx_fifo_config_t* *pRxFifoConfig, bool enable)

Configures the FlexCAN Legacy Rx FIFO.

This function configures the FlexCAN Rx FIFO with given configuration.

Note: Legacy Rx FIFO only can receive classic CAN message.

Parameters

- base – FlexCAN peripheral base address.
- pRxFifoConfig – Pointer to the FlexCAN Legacy Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Legacy Rx FIFO.
  - true: Enable Legacy Rx FIFO.
  - false: Disable Legacy Rx FIFO.

void FLEXCAN_SetEnhancedRxFifoConfig(CAN_Type *base, const *flexcan_enhanced_rx_fifo_config_t* *pConfig, bool enable)

Configures the FlexCAN Enhanced Rx FIFO.

This function configures the Enhanced Rx FIFO with given configuration.

Note: Enhanced Rx FIFO support receive classic CAN or CAN FD messages, Legacy Rx FIFO and Enhanced Rx FIFO cannot be enabled at the same time.

Parameters

- base – FlexCAN peripheral base address.

- pConfig – Pointer to the FlexCAN Enhanced Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Enhanced Rx FIFO.
  - true: Enable Enhanced Rx FIFO.
  - false: Disable Enhanced Rx FIFO.

void FLEXCAN_SetPNConfig(CAN_Type *base, const *flexcan_pn_config_t* *pConfig)

Configures the FlexCAN Pretended Networking mode.

This function configures the FlexCAN Pretended Networking mode with given configuration.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Rx FIFO configuration structure.

static inline uint64_t FLEXCAN_GetStatusFlags(CAN_Type *base)

Gets the FlexCAN module interrupt flags.

This function gets all FlexCAN status flags. The flags are returned as the logical OR value of the enumerators _flexcan_flags. To check the specific status, compare the return value with enumerators in _flexcan_flags.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN status flags which are ORed by the enumerators in the _flexcan_flags.

static inline void FLEXCAN_ClearStatusFlags(CAN_Type *base, uint64_t mask)

Clears status flags with the provided mask.

This function clears the FlexCAN status flags with a provided mask. An automatically cleared flag can't be cleared by this function.

Parameters

- base – FlexCAN peripheral base address.
- mask – The status flags to be cleared, it is logical OR value of _flexcan_flags.

static inline void FLEXCAN_GetBusErrCount(CAN_Type *base, uint8_t *txErrBuf, uint8_t *rxErrBuf)

Gets the FlexCAN Bus Error Counter value.

This function gets the FlexCAN Bus Error Counter value for both Tx and Rx direction. These values may be needed in the upper layer error handling.

Parameters

- base – FlexCAN peripheral base address.
- txErrBuf – Buffer to store Tx Error Counter value.
- rxErrBuf – Buffer to store Rx Error Counter value.

static inline uint64_t FLEXCAN_GetMbStatusFlags(CAN_Type *base, uint64_t mask)

Gets the FlexCAN low 64 Message Buffer interrupt flags.

This function gets the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.

- mask – The ORed FlexCAN Message Buffer mask.

Returns
The status of given Message Buffers.

static inline uint64_t FLEXCAN_GetHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)

Gets the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns
The status of given Message Buffers.

static inline void FLEXCAN_ClearMbStatusFlags(CAN_Type *base, uint64_t mask)

Clears the FlexCAN low 64 Message Buffer interrupt flags.

This function clears the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_ClearHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)

Clears the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

void FLEXCAN_GetMemoryErrorReportStatus(CAN_Type *base, *flexcan_memory_error_report_status_t* *errorStatus)

Gets the FlexCAN Memory Error Report registers status.

This function gets the FlexCAN Memory Error Report registers status.

Parameters

- base – FlexCAN peripheral base address.
- errorStatus – Pointer to FlexCAN Memory Error Report registers status structure.

static inline uint8_t FLEXCAN_GetPNMatchCount(CAN_Type *base)

Gets the FlexCAN Number of Matches when in Pretended Networking.

This function gets the number of times a given message has matched the predefined filtering criteria for ID and/or PL before a wakeup event.

Parameters

- base – FlexCAN peripheral base address.

Returns
The number of received wake up msessages.

static inline uint32_t FLEXCAN_GetEnhancedFifoDataCount(CAN_Type *base)

Gets the number of FlexCAN Enhanced Rx FIFO available frames.

This function gets the number of CAN messages stored in the Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.

Returns

The number of available CAN messages stored in the Enhanced Rx FIFO.

static inline void FLEXCAN_EnableInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN interrupts according to the provided mask.

This function enables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see _flexcan_interrupt_enable.

Parameters

- base – FlexCAN peripheral base address.
- mask – The interrupts to enable. Logical OR of _flexcan_interrupt_enable.

static inline void FLEXCAN_DisableInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN interrupts according to the provided mask.

This function disables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see _flexcan_interrupt_enable.

Parameters

- base – FlexCAN peripheral base address.
- mask – The interrupts to disable. Logical OR of _flexcan_interrupt_enable.

static inline void FLEXCAN_EnableMbInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN low 64 Message Buffer interrupts.

This function enables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_EnableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)

Enables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_DisableMbInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN low 64 Message Buffer interrupts.

This function disables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

static inline void FLEXCAN_DisableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)

Disables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

void FLEXCAN_EnableRxFifoDMA(CAN_Type *base, bool enable)

Enables or disables the FlexCAN Rx FIFO DMA request.

This function enables or disables the DMA feature of FlexCAN build-in Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- enable – true to enable, false to disable.

static inline uintptr_t FLEXCAN_GetRxFifoHeadAddr(CAN_Type *base)

Gets the Rx FIFO Head address.

This function returns the FlexCAN Rx FIFO Head address, which is mainly used for the DMA/eDMA use case.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN Rx FIFO Head address.

static inline *status_t* FLEXCAN_Enable(CAN_Type *base, bool enable)

Enables or disables the FlexCAN module operation.

This function enables or disables the FlexCAN module.

Parameters

- base – FlexCAN base pointer.
- enable – true to enable, false to disable.

Returns

kStatus_Success Enable FlexCAN module successful kStatus_Timeout Timeout when wait for Low-Power Mode Acknowledge

status_t FLEXCAN_WriteTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_frame_t* *pTxFrame)

Writes a FlexCAN Message to the Transmit Message Buffer.

This function writes a CAN Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Receive Message Buffer.

This function reads a CAN message from a specified Receive Message Buffer. The function fills a receive CAN message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_WriteFDTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_fd_frame_t* *pTxFrame)

Writes a FlexCAN FD Message to the Transmit Message Buffer.

This function writes a CAN FD Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN FD Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.

status_t FLEXCAN_ReadFDRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN FD Message from Receive Message Buffer.

This function reads a CAN FD message from a specified Receive Message Buffer. The function fills a receive CAN FD message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.

status_t FLEXCAN_ReadRxFifo(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Legacy Rx FIFO.

This function reads a CAN message from the FlexCAN Legacy Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadEnhancedRxFifo(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN Message from Enhanced Rx FIFO.

This function reads a CAN or CAN FD message from the FlexCAN Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.

status_t FLEXCAN_ReadPNWakeUpMB(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Wake Up MB.

This function reads a CAN message from the FlexCAN Wake up Message Buffers. There are four Wake up Message Buffers (WMBs) used to store incoming messages in Pretended Networking mode. The WMB index indicates the arrival order. The last message is stored in WMB3.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.
- mbIdx – The FlexCAN Wake up Message Buffer index. Range in 0x0 ~ 0x3.

Return values

- kStatus_Success – - Read Message from Wake up Message Buffer successfully.
- kStatus_Fail – - Wake up Message Buffer has no valid content.

status_t FLEXCAN_TransferFDSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferFDReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferFDSendNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferFDReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.

- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – - Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – - Rx Message Buffer is in use.

void FLEXCAN_TransferFDAbortSend(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

void FLEXCAN_TransferFDAbortReceive(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

status_t FLEXCAN_TransferSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – - Write Tx Message Buffer Successfully.
- kStatus_Fail – - Tx Message Buffer is currently in use.
- kStatus_Timeout – - Failed to send frames within specific time.

status_t FLEXCAN_TransferReceiveBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – - Rx Message Buffer is empty.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveFifoBlocking(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Performs a polling receive transaction from Legacy Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.
- kStatus_Timeout – - Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveEnhancedFifoBlocking(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction from Enhanced Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – - Read Message from Rx FIFO successfully.
- kStatus_Fail – - Rx FIFO is not enabled.
- kStatus_Timeout – - Failed to receive frames within specific time.

void FLEXCAN_TransferCreateHandle(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_transfer_callback_t* callback, void *userData)

Initializes the FlexCAN handle.

This function initializes the FlexCAN handle, which can be used for other FlexCAN transactional APIs. Usually, for a specified FlexCAN instance, call this API once to get the initialized handle.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

status_t FLEXCAN_TransferSendNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – - Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy – - Rx Message Buffer is in use.

status_t FLEXCAN_TransferRemoteRequestNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a remote request frame using IRQ.

This function sends a remote request frame using IRQ. This is a non-blocking function, which returns right away. When the remote request frame has been sent out, the send callback function is called. User should invoke API FLEXCAN_TransferReceiveNonBlocking to receive the response frame. Receive message buffer index should less than send message buffer index.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx remote request frame sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Message Buffer is transmitting remote request frame.

status_t FLEXCAN_TransferRemoteResponseNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Configures a FlexCAN Message Buffer for automatic remote response using IRQ.

This function configures a Message Buffer to automatically respond to remote request frames using IRQ. This is a non-blocking function, which returns right away. When a matching remote request frame is received, the configured response frame will be transmitted automatically, and the callback function will be called. User should invoke this API when CTRL2[RRS]=0. When CTRL2[RRS]=0, if a remote request frame is received and matches a mailbox configured with CODE=kFLEXCAN_RxMbRanswer, the mailbox content will be transmitted as a response frame automatically. The received remote request frame is not stored.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Configure remote response Message Buffer successfully.
- kStatus_Busy – Message Buffer is waiting for remote request frame or transmitting response frame.

status_t FLEXCAN_TransferReceiveFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the flexcan_fifo_transfer_t.

Return values

- kStatus_Success – - Start Rx FIFO receiving process successfully.
- kStatus_FLEXCAN_RxFifoBusy – - Rx FIFO is currently in use.

status_t FLEXCAN_TransferGetReceiveFifoCount(CAN_Type *base, *flexcan_handle_t* *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

status_t FLEXCAN_TransferReceiveEnhancedFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Enhanced Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the ref flexcan_fifo_transfer_t.@

Return values

- kStatus_Success – - Start Rx FIFO receiving process successfully.
- kStatus_FLEXCAN_RxFifoBusy – - Rx FIFO is currently in use.

static inline *status_t* FLEXCAN_TransferGetReceiveEnhancedFifoCount(CAN_Type *base, *flexcan_handle_t* *handle, size_t *count)

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

uint32_t FLEXCAN_GetTimeStamp(*flexcan_handle_t* *handle, uint8_t mbIdx)

Gets the detail index of Mailbox's Timestamp by handle.

Then function can only be used when calling non-blocking Data transfer (TX/RX) API, After TX/RX data transfer done (User can get the status by handler's callback function), we can get the detail index of Mailbox's timestamp by handle, Detail non-blocking data transfer API (TX/RX) contain. -FLEXCAN_TransferSendNonBlocking -FLEXCAN_TransferFDSendNonBlocking -FLEXCAN_TransferReceiveNonBlocking -FLEXCAN_TransferFDReceiveNonBlocking -FLEXCAN_TransferReceiveFifoNonBlocking

Parameters

- handle – FlexCAN handle pointer.

- mbIdx – The FlexCAN Message Buffer index.

Return values

the – index of mailbox 's timestamp stored in the handle.

static inline uint32_t FLEXCAN_GetHighResolutionTimeStamp(CAN_Type *base, uint8_t mbIdx)

void FLEXCAN_TransferAbortSend(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

void FLEXCAN_TransferAbortReceive(CAN_Type *base, *flexcan_handle_t* *handle, uint8_t mbIdx)

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

void FLEXCAN_TransferAbortReceiveFifo(CAN_Type *base, *flexcan_handle_t* *handle)

Aborts the interrupt driven message receive from Rx FIFO process.

This function aborts the interrupt driven message receive from Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_TransferAbortReceiveEnhancedFifo(CAN_Type *base, *flexcan_handle_t* *handle)

Aborts the interrupt driven message receive from Enhanced Rx FIFO process.

This function aborts the interrupt driven message receive from Enhanced Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_TransferHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN IRQ handle function.

This function handles the FlexCAN Error, the Message Buffer, and the Rx FIFO IRQ request.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MbHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle, uint32_t startMbIdx, uint32_t endMbIdx)

FlexCAN Message Buffer IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- startMbIdx – First Message Buffer to handle.
- endMbIdx – Last Message Buffer to handle.

void FLEXCAN_EhancedRxFifoHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Ehanced Rx FIFO IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_BusoffErrorHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Bus Off, Error and Warning IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_PNWakeUpHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Pretended Networking Wake-up IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MemoryErrorHandleIRQ(CAN_Type *base, *flexcan_handle_t* *handle)

FlexCAN Memory Error IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

FSL_FLEXCAN_DRIVER_VERSION

FlexCAN driver version.

FlexCAN transfer status.

Values:

enumerator kStatus_FLEXCAN_TxBusy

Tx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_TxIdle

Tx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_TxSwitchToRx

Remote Message is send out and Message buffer changed to Receive one.

enumerator kStatus_FLEXCAN_RxBusy

Rx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_RxIdle

Rx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_RxOverflow

Rx Message Buffer is Overflowed.

enumerator kStatus_FLEXCAN_RxFifoBusy
Rx Message FIFO is Busy.

enumerator kStatus_FLEXCAN_RxFifoIdle
Rx Message FIFO is Idle.

enumerator kStatus_FLEXCAN_RxFifoOverflow
Rx Message FIFO is overflowed.

enumerator kStatus_FLEXCAN_RxFifoWarning
Rx Message FIFO is almost overflowed.

enumerator kStatus_FLEXCAN_RxFifoDisabled
Rx Message FIFO is disabled during reading.

enumerator kStatus_FLEXCAN_ErrorStatus
FlexCAN Module Error and Status.

enumerator kStatus_FLEXCAN_WakeUp
FlexCAN is waken up from STOP mode.

enumerator kStatus_FLEXCAN_UnHandled
UnHadled Interrupt asserted.

enumerator kStatus_FLEXCAN_RxRemote
Rx Remote Message Received in Mail box.

enumerator kStatus_FLEXCAN_RxFifoUnderflow
Enhanced Rx Message FIFO is underflow.

enumerator kStatus_FLEXCAN_MemoryError
FlexCAN Memory Error.

enum _flexcan_frame_format
FlexCAN frame format.

Values:

enumerator kFLEXCAN_FrameFormatStandard
Standard frame format attribute.

enumerator kFLEXCAN_FrameFormatExtend
Extend frame format attribute.

enum _flexcan_frame_type
FlexCAN frame type.

Values:

enumerator kFLEXCAN_FrameTypeData
Data frame type attribute.

enumerator kFLEXCAN_FrameTypeRemote
Remote frame type attribute.

enum _flexcan_clock_source
FlexCAN clock source.

Deprecated:
Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

Values:

enumerator kFLEXCAN_ClkSrcOsc
FlexCAN Protocol Engine clock from Oscillator.

enumerator kFLEXCAN_ClkSrcPeri
FlexCAN Protocol Engine clock from Peripheral Clock.

enumerator kFLEXCAN_ClkSrc0
FlexCAN Protocol Engine clock selected by user as SRC == 0.

enumerator kFLEXCAN_ClkSrc1
FlexCAN Protocol Engine clock selected by user as SRC == 1.

enum _flexcan_wake_up_source
FlexCAN wake up source.

Values:

enumerator kFLEXCAN_WakeupSrcUnfiltered
FlexCAN uses unfiltered Rx input to detect edge.

enumerator kFLEXCAN_WakeupSrcFiltered
FlexCAN uses filtered Rx input to detect edge.

enum _flexcan_endianness
FlexCAN payload endianness.

Values:

enumerator kFLEXCAN_bigEndian
Transmit frame with MSB first, receive frame with big-endian format.

enumerator kFLEXCAN_littleEndian
Transmit frame with LSB first, receive frame with little-endian format.

enum _flexcan_MB_timestamp_base
FlexCAN timebase used for capturing 16-bit TIME_STAMP field of message buffer.

Values:

enumerator kFLEXCAN_CANTimer
FlexCAN free-running timer.

enumerator kFLEXCAN_Lower16bitsHRTimer
Lower 16 bits of high-resolution on-chip timer.

enumerator kFLEXCAN_Upper16bitsHRTimer
Upper 16 bits of high-resolution on-chip timer.

enum _flexcan_capture_point
FlexCAN capture point of 32-bit high resolution timebase during a CAN frame.

Values:

enumerator kFLEXCAN_CANFrameID2ndBit
Second bit of identifier field of any frame is on the CAN bus. HR_TIME_STAMPn register will not capture 32-bit counter value.

enumerator kFLEXCAN_CANFrameEnd
End of the CAN frame.

enumerator kFLEXCAN_CANFrameStart
Start of the CAN frame.

enumerator kFLEXCAN_CANFDFrameRes
Start of frame for classical CAN frames; res bit for CAN FD frames.

enum _flexcan_rx_fifo_filter_type
FlexCAN Rx Fifo Filter type.

Values:

enumerator kFLEXCAN_RxFifoFilterTypeA
One full ID (standard and extended) per ID Filter element.

enumerator kFLEXCAN_RxFifoFilterTypeB
Two full standard IDs or two partial 14-bit ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeC
Four partial 8-bit Standard or extended ID slices per ID Filter Table element.

enumerator kFLEXCAN_RxFifoFilterTypeD
All frames rejected.

enum _flexcan_mb_size
FlexCAN Message Buffer Payload size.

Values:

enumerator kFLEXCAN_8BperMB
Selects 8 bytes per Message Buffer.

enumerator kFLEXCAN_16BperMB
Selects 16 bytes per Message Buffer.

enumerator kFLEXCAN_32BperMB
Selects 32 bytes per Message Buffer.

enumerator kFLEXCAN_64BperMB
Selects 64 bytes per Message Buffer.

enum _flexcan_fd_frame_length
FlexCAN CAN FD frame supporting data length (available DLC values).

For Tx, when the Data size corresponding to DLC value stored in the MB selected for transmission is larger than the MB Payload size, FlexCAN adds the necessary number of bytes with constant 0xCC pattern to complete the expected DLC. For Rx, when the Data size corresponding to DLC value received from the CAN bus is larger than the MB Payload size, the high order bytes that do not fit the Payload size will lose.

Values:

enumerator kFLEXCAN_0BperFrame
Frame contains 0 valid data bytes.

enumerator kFLEXCAN_1BperFrame
Frame contains 1 valid data bytes.

enumerator kFLEXCAN_2BperFrame
Frame contains 2 valid data bytes.

enumerator kFLEXCAN_3BperFrame
Frame contains 3 valid data bytes.

enumerator kFLEXCAN_4BperFrame
Frame contains 4 valid data bytes.

enumerator kFLEXCAN_5BperFrame
Frame contains 5 valid data bytes.

enumerator kFLEXCAN_6BperFrame
Frame contains 6 valid data bytes.

enumerator kFLEXCAN_7BperFrame
Frame contains 7 valid data bytes.

enumerator kFLEXCAN_8BperFrame
Frame contains 8 valid data bytes.

enumerator kFLEXCAN_12BperFrame
Frame contains 12 valid data bytes.

enumerator kFLEXCAN_16BperFrame
Frame contains 16 valid data bytes.

enumerator kFLEXCAN_20BperFrame
Frame contains 20 valid data bytes.

enumerator kFLEXCAN_24BperFrame
Frame contains 24 valid data bytes.

enumerator kFLEXCAN_32BperFrame
Frame contains 32 valid data bytes.

enumerator kFLEXCAN_48BperFrame
Frame contains 48 valid data bytes.

enumerator kFLEXCAN_64BperFrame
Frame contains 64 valid data bytes.

enum _flexcan_efifo_dma_per_read_length
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

Values:

enumerator kFLEXCAN_1WordPerRead
Transfer 1 32-bit words (CS).

enumerator kFLEXCAN_2WordPerRead
Transfer 2 32-bit words (CS + ID).

enumerator kFLEXCAN_3WordPerRead
Transfer 3 32-bit words (CS + ID + 1~4 bytes data).

enumerator kFLEXCAN_4WordPerRead
Transfer 4 32-bit words (CS + ID + 5~8 bytes data).

enumerator kFLEXCAN_5WordPerRead
Transfer 5 32-bit words (CS + ID + 9~12 bytes data).

enumerator kFLEXCAN_6WordPerRead
Transfer 6 32-bit words (CS + ID + 13~16 bytes data).

enumerator kFLEXCAN_7WordPerRead
Transfer 7 32-bit words (CS + ID + 17~20 bytes data).

enumerator kFLEXCAN_8WordPerRead
Transfer 8 32-bit words (CS + ID + 21~24 bytes data).

enumerator kFLEXCAN_9WordPerRead
Transfer 9 32-bit words (CS + ID + 25~28 bytes data).

enumerator kFLEXCAN_10WordPerRead
Transfer 10 32-bit words (CS + ID + 29~32 bytes data).

enumerator kFLEXCAN_11WordPerRead
Transfer 11 32-bit words (CS + ID + 33~36 bytes data).

enumerator kFLEXCAN_12WordPerRead
Transfer 12 32-bit words (CS + ID + 37~40 bytes data).

enumerator kFLEXCAN_13WordPerRead
Transfer 13 32-bit words (CS + ID + 41~44 bytes data).

enumerator kFLEXCAN_14WordPerRead
Transfer 14 32-bit words (CS + ID + 45~48 bytes data).

enumerator kFLEXCAN_15WordPerRead
Transfer 15 32-bit words (CS + ID + 49~52 bytes data).

enumerator kFLEXCAN_16WordPerRead
Transfer 16 32-bit words (CS + ID + 53~56 bytes data).

enumerator kFLEXCAN_17WordPerRead
Transfer 17 32-bit words (CS + ID + 57~60 bytes data).

enumerator kFLEXCAN_18WordPerRead
Transfer 18 32-bit words (CS + ID + 61~64 bytes data).

enumerator kFLEXCAN_19WordPerRead
Transfer 19 32-bit words (CS + ID + 64 bytes data + ID HIT).

enumerator kFLEXCAN_20WordPerRead
Transfer 20 32-bit words (CS + ID + 64 bytes data + ID HIT + HR timestamp).

enum _flexcan_rx_fifo_priority
FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

Values:

enumerator kFLEXCAN_RxFifoPrioLow
Matching process start from Rx Message Buffer first.

enumerator kFLEXCAN_RxFifoPrioHigh
Matching process start from Enhanced/Legacy Rx FIFO first.

enum _flexcan_interrupt_enable
FlexCAN interrupt enable enumerations.

This provides constants for the FlexCAN interrupt enable enumerations for use in the FlexCAN functions.

Note: FlexCAN Message Buffers and Legacy Rx FIFO interrupts not included in.

Values:

enumerator kFLEXCAN_BusOffInterruptEnable
Bus Off interrupt, use bit 15.

enumerator kFLEXCAN_ErrorInterruptEnable
CAN Error interrupt, use bit 14.

enumerator kFLEXCAN_TxWarningInterruptEnable
Tx Warning interrupt, use bit 11.

enumerator kFLEXCAN_RxWarningInterruptEnable
Rx Warning interrupt, use bit 10.

enumerator kFLEXCAN_FDErrorInterruptEnable
CAN FD Error interrupt, use bit 31.

enumerator kFLEXCAN_PNMatchWakeUpInterruptEnable
PN Match Wake Up interrupt, use high word bit 17.

enumerator kFLEXCAN_PNTimeoutWakeUpInterruptEnable
PN Timeout Wake Up interrupt, use high word bit 16. Enhanced Rx FIFO Underflow interrupt, use high word bit 31.

enumerator kFLEXCAN_ERxFifoUnderflowInterruptEnable
Enhanced Rx FIFO Overflow interrupt, use high word bit 30.

enumerator kFLEXCAN_ERxFifoOverflowInterruptEnable
Enhanced Rx FIFO Watermark interrupt, use high word bit 29.

enumerator kFLEXCAN_ERxFifoWatermarkInterruptEnable
Enhanced Rx FIFO Data Avilable interrupt, use high word bit 28.

enumerator kFLEXCAN_ERxFifoDataAvlInterruptEnable

enumerator kFLEXCAN_HostAccessNCErrorInterruptEnable
Host Access With Non-Correctable Errors interrupt, use high word bit 0.

enumerator kFLEXCAN_FlexCanAccessNCErrorInterruptEnable
FlexCAN Access With Non-Correctable Errors interrupt, use high word bit 2.

enumerator kFLEXCAN_HostOrFlexCanCErrorInterruptEnable
Host or FlexCAN Access With Correctable Errors interrupt, use high word bit 3.

enum _flexcan_flags
FlexCAN status flags.

This provides constants for the FlexCAN status flags for use in the FlexCAN functions.

Note: The CPU read action clears the bits corresponding to the FlEXCAN_ErrorFlag macro, therefore user need to read status flags and distinguish which error is occur using _flexcan_error_flags enumerations.

Values:

enumerator kFLEXCAN_ErrorOverrunFlag
Error Overrun Status.

enumerator kFLEXCAN_FDErrorIntFlag
CAN FD Error Interrupt Flag.

enumerator kFLEXCAN_BusoffDoneIntFlag
Bus Off process completed Interrupt Flag.

enumerator kFLEXCAN_SynchFlag
CAN Synchronization Status.

enumerator kFLEXCAN_TxWarningIntFlag
Tx Warning Interrupt Flag.

enumerator kFLEXCAN_RxWarningIntFlag
Rx Warning Interrupt Flag.

enumerator kFLEXCAN_IdleFlag
FlexCAN In IDLE Status.

enumerator kFLEXCAN_FaultConfinementFlag
FlexCAN Fault Confinement State.

enumerator kFLEXCAN_TransmittingFlag
FlexCAN In Transmission Status.

enumerator kFLEXCAN_ReceivingFlag
FlexCAN In Reception Status.

enumerator kFLEXCAN_BusOffIntFlag
Bus Off Interrupt Flag.

enumerator kFLEXCAN_ErrorIntFlag
CAN Error Interrupt Flag.

enumerator kFLEXCAN_ErrorFlag

enumerator kFLEXCAN_PNMatchIntFlag
PN Matching Event Interrupt Flag.

enumerator kFLEXCAN_PNTimeoutIntFlag
PN Timeout Event Interrupt Flag.

enumerator kFLEXCAN_ERxFifoUnderflowIntFlag
Enhanced Rx FIFO underflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoOverflowIntFlag
Enhanced Rx FIFO overflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoWatermarkIntFlag
Enhanced Rx FIFO watermark Interrupt Flag.

enumerator kFLEXCAN_ERxFifoDataAvlIntFlag
Enhanced Rx FIFO data available Interrupt Flag.

enumerator kFLEXCAN_ERxFifoEmptyFlag
Enhanced Rx FIFO empty status.

enumerator kFLEXCAN_ERxFifoFullFlag
Enhanced Rx FIFO full status.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorIntFlag
Host Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorIntFlag
FlexCAN Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_CorrectableErrorIntFlag
Correctable Error Interrupt Flag.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorOverrunFlag
Host Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorOverrunFlag
FlexCAN Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_CorrectableErrorOverrunFlag
Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_AllMemoryErrorIntFlag
All Memory Error Interrupt Flags.

enumerator kFLEXCAN_AllMemoryErrorFlag
All Memory Error Flags.

enum _flexcan_error_flags
FlexCAN error status flags.

The FlexCAN Error Status enumerations is used to report current error of the FlexCAN bus. This enumerations should be used with KFLEXCAN_ErrorFlag in _flexcan_flags enumerations to ditermine which error is generated.

Values:

enumerator kFLEXCAN_FDStuffingError
Stuffing Error.

enumerator kFLEXCAN_FDFormError
Form Error.

enumerator kFLEXCAN_FDCrcError
Cyclic Redundancy Check Error.

enumerator kFLEXCAN_FDBit0Error
Unable to send dominant bit.

enumerator kFLEXCAN_FDBit1Error
Unable to send recessive bit.

enumerator kFLEXCAN_TxErrorWarningFlag
Tx Error Warning Status.

enumerator kFLEXCAN_RxErrorWarningFlag
Rx Error Warning Status.

enumerator kFLEXCAN_StuffingError
Stuffing Error.

enumerator kFLEXCAN_FormError
Form Error.

enumerator kFLEXCAN_CrcError
Cyclic Redundancy Check Error.

enumerator kFLEXCAN_AckError
Received no ACK on transmission.

enumerator kFLEXCAN_Bit0Error
Unable to send dominant bit.

enumerator kFLEXCAN_Bit1Error
Unable to send recessive bit.

FlexCAN Legacy Rx FIFO status flags.

The FlexCAN Legacy Rx FIFO Status enumerations are used to determine the status of the Rx FIFO. Because Rx FIFO occupy the MB0 ~ MB7 (Rx Fifo filter also occupies more Message Buffer space), Rx FIFO status flags are mapped to the corresponding Message Buffer status flags.

Values:

enumerator kFLEXCAN_RxFifoOverflowFlag

Rx FIFO overflow flag.

enumerator kFLEXCAN_RxFifoWarningFlag

Rx FIFO almost full flag.

enumerator kFLEXCAN_RxFifoFrameAvlFlag

Frames available in Rx FIFO flag.

enum _flexcan_memory_error_type

FlexCAN Memory Error Type.

Values:

enumerator kFLEXCAN_CorrectableError

The memory error is correctable which means on bit error.

enumerator kFLEXCAN_NonCorrectableError

The memory error is non-correctable which means two bit errors.

enum _flexcan_memory_access_type

FlexCAN Memory Access Type.

Values:

enumerator kFLEXCAN_MoveOutFlexCanAccess

The memory error was detected during move-out FlexCAN access.

enumerator kFLEXCAN_MoveInAccess

The memory error was detected during move-in FlexCAN access.

enumerator kFLEXCAN_TxArbitrationAccess

The memory error was detected during Tx Arbitration FlexCAN access.

enumerator kFLEXCAN_RxMatchingAccess

The memory error was detected during Rx Matching FlexCAN access.

enumerator kFLEXCAN_MoveOutHostAccess

The memory error was detected during Rx Matching Host (CPU) access.

enum _flexcan_byte_error_syndrome

FlexCAN Memory Error Byte Syndrome.

Values:

enumerator kFLEXCAN_NoError

No bit error in this byte.

enumerator kFLEXCAN_ParityBits0Error

Parity bit 0 error in this byte.

enumerator kFLEXCAN_ParityBits1Error

Parity bit 1 error in this byte.

enumerator kFLEXCAN_ParityBits2Error
Parity bit 2 error in this byte.

enumerator kFLEXCAN_ParityBits3Error
Parity bit 3 error in this byte.

enumerator kFLEXCAN_ParityBits4Error
Parity bit 4 error in this byte.

enumerator kFLEXCAN_DataBits0Error
Data bit 0 error in this byte.

enumerator kFLEXCAN_DataBits1Error
Data bit 1 error in this byte.

enumerator kFLEXCAN_DataBits2Error
Data bit 2 error in this byte.

enumerator kFLEXCAN_DataBits3Error
Data bit 3 error in this byte.

enumerator kFLEXCAN_DataBits4Error
Data bit 4 error in this byte.

enumerator kFLEXCAN_DataBits5Error
Data bit 5 error in this byte.

enumerator kFLEXCAN_DataBits6Error
Data bit 6 error in this byte.

enumerator kFLEXCAN_DataBits7Error
Data bit 7 error in this byte.

enumerator kFLEXCAN_AllZeroError
All-zeros non-correctable error in this byte.

enumerator kFLEXCAN_AllOneError
All-ones non-correctable error in this byte.

enumerator kFLEXCAN_NonCorrectableErrors
Non-correctable error in this byte.

enum _flexcan_pn_match_source
FlexCAN Pretended Networking match source selection.

Values:

enumerator kFLEXCAN_PNMatSrcID
Message match with ID filtering.

enumerator kFLEXCAN_PNMatSrcIDAndData
Message match with ID filtering and payload filtering.

enum _flexcan_pn_match_mode
FlexCAN Pretended Networking mode match type.

Values:

enumerator kFLEXCAN_PNMatModeEqual
Match upon ID/Payload contents against an exact target value.

enumerator kFLEXCAN_PNMatModeGreater
Match upon an ID/Payload value greater than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeSmaller

Match upon an ID/Payload value smaller than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeRange

Match upon an ID/Payload value inside a range, greater than or equal to a specified lower limit, and smaller than or equal to a specified upper limit

typedef enum *_flexcan_frame_format* flexcan_frame_format_t

FlexCAN frame format.

typedef enum *_flexcan_frame_type* flexcan_frame_type_t

FlexCAN frame type.

typedef enum *_flexcan_clock_source* flexcan_clock_source_t

FlexCAN clock source.

Deprecated:

Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

typedef enum *_flexcan_wake_up_source* flexcan_wake_up_source_t

FlexCAN wake up source.

typedef enum *_flexcan_endianness* flexcan_endianness_t

FlexCAN payload endianness.

typedef enum *_flexcan_MB_timestamp_base* flexcan_MB_timestamp_base_t

FlexCAN timebase used for capturing 16-bit TIME_STAMP field of message buffer.

typedef enum *_flexcan_capture_point* flexcan_capture_point_t

FlexCAN capture point of 32-bit high resolution timebase during a CAN frame.

typedef enum *_flexcan_rx_fifo_filter_type* flexcan_rx_fifo_filter_type_t

FlexCAN Rx Fifo Filter type.

typedef enum *_flexcan_mb_size* flexcan_mb_size_t

FlexCAN Message Buffer Payload size.

typedef enum *_flexcan_efifo_dma_per_read_length* flexcan_efifo_dma_per_read_length_t

FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

typedef enum *_flexcan_rx_fifo_priority* flexcan_rx_fifo_priority_t

FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

typedef enum *_flexcan_memory_error_type* flexcan_memory_error_type_t

FlexCAN Memory Error Type.

typedef enum *_flexcan_memory_access_type* flexcan_memory_access_type_t

FlexCAN Memory Access Type.

typedef enum *_flexcan_byte_error_syndrome* flexcan_byte_error_syndrome_t

FlexCAN Memory Error Byte Syndrome.

typedef struct *_flexcan_memory_error_report_status* flexcan_memory_error_report_status_t

FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

typedef struct *_flexcan_frame* flexcan_frame_t

FlexCAN message frame structure.

typedef struct *_flexcan_fd_frame* flexcan_fd_frame_t

CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see _flexcan_fd_frame_length.

typedef struct *_flexcan_timing_config* flexcan_timing_config_t

FlexCAN protocol timing characteristic configuration structure.

typedef struct *_flexcan_config* flexcan_config_t

FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

typedef struct *_flexcan_rx_mb_config* flexcan_rx_mb_config_t

FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

typedef enum *_flexcan_pn_match_source* flexcan_pn_match_source_t

FlexCAN Pretended Networking match source selection.

typedef enum *_flexcan_pn_match_mode* flexcan_pn_match_mode_t

FlexCAN Pretended Networking mode match type.

typedef struct *_flexcan_pn_config* flexcan_pn_config_t

FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of FLEXCAN_SetPNConfig() function. The FLEXCAN_SetPNConfig() function is used to configure FlexCAN Networking work mode.

typedef struct *_flexcan_rx_fifo_config* flexcan_rx_fifo_config_t

FlexCAN Legacy Rx FIFO configuration structure.

typedef struct *_flexcan_enhanced_rx_fifo_std_id_filter* flexcan_enhanced_rx_fifo_std_id_filter_t

FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

typedef struct *_flexcan_enhanced_rx_fifo_ext_id_filter* flexcan_enhanced_rx_fifo_ext_id_filter_t

FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

typedef struct *_flexcan_enhanced_rx_fifo_config* flexcan_enhanced_rx_fifo_config_t

FlexCAN Enhanced Rx FIFO configuration structure.

typedef struct *_flexcan_mb_transfer* flexcan_mb_transfer_t
FlexCAN Message Buffer transfer.

typedef struct *_flexcan_fifo_transfer* flexcan_fifo_transfer_t
FlexCAN Rx FIFO transfer.

typedef struct *_flexcan_handle* flexcan_handle_t
FlexCAN handle structure definition.

typedef void (*flexcan_transfer_callback_t)(CAN_Type *base, *flexcan_handle_t* *handle, *status_t* status, uint64_t result, void *userData)

FLEXCAN_WAIT_TIMEOUT

FLEXCAN_POLLING_TIMEOUT
Max loops to wait for polling transfer.

FLEXCAN_MODULE_TIMEOUT
Max loops to wait for FlexCAN register access complete.

DLC_LENGTH_DECODE(dlc)
FlexCAN frame length helper macro.

FLEXCAN_ID_STD(id)
FlexCAN Frame ID helper macro.

Standard Frame ID helper macro.

FLEXCAN_ID_EXT(id)
Extend Frame ID helper macro.

FLEXCAN_RX_MB_STD_MASK(id, rtr, ide)
FlexCAN Rx Message Buffer Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

FLEXCAN_RX_MB_EXT_MASK(id, rtr, ide)
Extend Rx Message Buffer Mask helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_A(id, rtr, ide)
FlexCAN Legacy Rx FIFO Mask helper macro.

Standard Rx FIFO Mask helper macro Type A helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_HIGH(id, rtr, ide)
Standard Rx FIFO Mask helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_LOW(id, rtr, ide)
Standard Rx FIFO Mask helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_HIGH(id)
Standard Rx FIFO Mask helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_HIGH(id)
Standard Rx FIFO Mask helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_LOW(id)
Standard Rx FIFO Mask helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_LOW(id)
Standard Rx FIFO Mask helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_A(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type A helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_HIGH(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_LOW(id, rtr, ide)
Extend Rx FIFO Mask helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_HIGH(id)
Extend Rx FIFO Mask helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_HIGH(id)
Extend Rx FIFO Mask helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_LOW(id)
Extend Rx FIFO Mask helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_LOW(id)
Extend Rx FIFO Mask helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_A(id, rtr, ide)
FlexCAN Rx FIFO Filter helper macro.

Standard Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_HIGH(id, rtr, ide)
Standard Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_LOW(id, rtr, ide)
Standard Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_HIGH(id)
Standard Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_HIGH(id)
Standard Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_LOW(id)
Standard Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_LOW(id)
Standard Rx FIFO Filter helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_A(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_HIGH(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_LOW(id, rtr, ide)
Extend Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_HIGH(id)
Extend Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_HIGH(id)
Extend Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_LOW(id)
Extend Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_LOW(id)
Extend Rx FIFO Filter helper macro Type C lower part helper macro.

ENHANCED_RX_FIFO_FSCH(x)
FlexCAN Enhanced Rx FIFO Filter and Mask helper macro.

RTR_STD_HIGH(x)

RTR_STD_LOW(x)

RTR_EXT(x)

ID_STD_LOW(id)

ID_STD_HIGH(id)

ID_EXT(id)

FLEXCAN_ENHANCED_RX_FIFO_STD_MASK_AND_FILTER(id, rtr, id_mask, rtr_mask)
Standard ID filter element with filter + mask scheme.

FLEXCAN_ENHANCED_RX_FIFO_STD_FILTER_WITH_RANGE(id_upper, rtr, id_lower, rtr_mask)
Standard ID filter element with filter range.

FLEXCAN_ENHANCED_RX_FIFO_STD_TWO_FILTERS(id1, rtr1, id2, rtr2)
Standard ID filter element with two filters without masks.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_LOW(id, rtr)
Extended ID filter element with filter + mask scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_HIGH(id_mask, rtr_mask)
Extended ID filter element with filter + mask scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_LOW(id_upper, rtr)
Extended ID filter element with range scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_HIGH(id_lower, rtr_mask)
Extended ID filter element with range scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_LOW(id2, rtr2)
Extended ID filter element with two filters without masks low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_HIGH(id1, rtr1)
Extended ID filter element with two filters without masks high word.

FLEXCAN_PN_STD_MASK(id, rtr)
FlexCAN Pretended Networking ID Mask helper macro.

Standard Rx Message Buffer Mask helper macro.

FLEXCAN_PN_EXT_MASK(id, rtr)
Extend Rx Message Buffer Mask helper macro.

FLEXCAN_PN_INT_MASK(x)
FlexCAN interrupt/status flag helper macro.

FLEXCAN_PN_INT_UNMASK(x)

FLEXCAN_PN_STATUS_MASK(x)

FLEXCAN_PN_STATUS_UNMASK(x)

FLEXCAN_EFIFO_INT_MASK(x)

FLEXCAN_EFIFO_INT_UNMASK(x)

FLEXCAN_EFIFO_STATUS_MASK(x)

FLEXCAN_EFIFO_STATUS_UNMASK(x)

FLEXCAN_MECR_INT_MASK(x)

FLEXCAN_MECR_INT_UNMASK(x)

FLEXCAN_MECR_STATUS_MASK(x)

FLEXCAN_MECR_STATUS_UNMASK(x)

FLEXCAN_ERROR_AND_STATUS_INT_FLAG

FLEXCAN_PNWAKE_UP_FLAG

FLEXCAN_WAKE_UP_FLAG

FLEXCAN_MEMORY_ERROR_INT_FLAG

FLEXCAN_ENHANCED_RX_FIFO_INT_FLAG

FlexCAN Enhanced Rx FIFO base address helper macro.

E_RX_FIFO(base)

FLEXCAN_CALLBACK(x)

FlexCAN transfer callback function.

The FlexCAN transfer callback returns a value from the underlying layer. If the status equals to kStatus_FLEXCAN_ErrorStatus, the result parameter is the Content of FlexCAN status register which can be used to get the working status(or error status) of FlexCAN module. If the status equals to other FlexCAN Message Buffer transfer status, the result is the index of Message Buffer that generate transfer event. If the status equals to other FlexCAN Message Buffer transfer status, the result is meaningless and should be Ignored.

struct _flexcan_memory_error_report_status

#include <fsl_flexcan.h> FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

Public Members

flexcan_memory_error_type_t errorType

The type of memory error that giving rise to the report.

flexcan_memory_access_type_t accessType

The type of memory access that giving rise to the memory error.

uint16_t accessAddress

The address where memory error detected.

uint32_t errorData

The raw data word read from memory with error.

struct _flexcan_frame

#include <fsl_flexcan.h> FlexCAN message frame structure.

struct _flexcan_fd_frame

#include <fsl_flexcan.h> CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see _flexcan_fd_frame_length.

Public Members

uint32_t idhit

Note: ID HIT offset is changed dynamically according to data length code (DLC), when DLC is 15, they will be located below. Using FLEXCAN_FixEnhancedRxFifoFrameIdHit API is recommended to ensure this idhit value is correct. CAN Enhanced Rx FIFO filter hit id (This value is only used in Enhanced Rx FIFO receive mode).

uint32_t hrtimestamp

Note: HR timestamp offset is changed dynamically according to data length code (DLC). External 32-bit on-chip timer high-resolution timestamp.

struct _flexcan_timing_config

#include <fsl_flexcan.h> FlexCAN protocol timing characteristic configuration structure.

Public Members

uint32_t preDivider

Classic CAN or CAN FD nominal phase bit rate prescaler.

uint32_t rJumpwidth

Classic CAN or CAN FD nominal phase Re-sync Jump Width.

uint32_t phaseSeg1

Classic CAN or CAN FD nominal phase Segment 1.

uint32_t phaseSeg2

Classic CAN or CAN FD nominal phase Segment 2.

uint32_t propSeg

Classic CAN or CAN FD nominal phase Propagation Segment.

uint32_t fpreDivider

CAN FD data phase bit rate prescaler.

uint32_t frJumpwidth

CAN FD data phase Re-sync Jump Width.

uint32_t fphaseSeg1

CAN FD data phase Phase Segment 1.

uint32_t fphaseSeg2

CAN FD data phase Phase Segment 2.

uint32_t fpropSeg

CAN FD data phase Propagation Segment.

struct _flexcan_config

#include <fsl_flexcan.h> FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

Public Members

flexcan_clock_source_t clkSrc

Clock source for FlexCAN Protocol Engine.

flexcan_wake_up_source_t wakeupSrc

Wake up source selection.

uint8_t maxMbNum

The maximum number of Message Buffers used by user.

bool enableLoopBack

Enable or Disable Loop Back Self Test Mode.

bool enableTimerSync

Enable or Disable Timer Synchronization.

bool enableIndividMask

Enable or Disable Rx Individual Mask and Queue feature.

bool disableSelfReception

Enable or Disable Self Reflection.

bool enableListenOnlyMode

Enable or Disable Listen Only Mode.

bool enableDoze

Enable or Disable Doze Mode.

bool enablePretendedeNetworking

Enable or Disable the Pretended Networking mode.

bool enableMemoryErrorControl

Enable or Disable the memory errors detection and correction mechanism.

bool enableNonCorrectableErrorEnterFreeze

Enable or Disable Non-Correctable Errors In FlexCAN Access Put Device In Freeze Mode.

bool enableTransceiverDelayMeasure

Enable or Disable the transceiver delay measurement, when it is enabled, then the secondary sample point position is determined by the sum of the transceiver delay measurement plus the enhanced TDC offset.

bool enableRemoteRequestFrameStored

true: Store Remote Request Frame in the same fashion of data frame. false: Generate an automatic Remote Response Frame.

flexcan_endianness_t payloadEndianness

Selects the byte order for the payload of transmit and receive frames, see flexcan_endianness_t.

bool enableExternalTimeTick

true: External time tick clocks the free-running timer. false: FlexCAN bit clock clocks the free-running timer.

flexcan_MB_timestamp_base_t captureTimeBase

Timebase of message buffer 16-bit TIME_STAMP field.

flexcan_capture_point_t capturePoint

Point in time when 32-bit timebase is captured during CAN frame.

struct __flexcan__rx__mb__config

#include <fsl_flexcan.h> FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

Public Members

uint32_t id

CAN Message Buffer Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

flexcan_frame_format_t format

CAN Frame Identifier format(Standard of Extend).

flexcan_frame_type_t type

CAN Frame Type(Data or Remote for classical CAN only).

struct __flexcan__pn__config

#include <fsl_flexcan.h> FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of FLEXCAN_SetPNConfig() function. The FLEXCAN_SetPNConfig() function is used to configure FlexCAN Networking work mode.

Public Members

bool enableTimeout

Enable or Disable timeout event trigger wakeup.

uint16_t timeoutValue

The timeout value that generates a wakeup event, the counter timer is incremented based on 64 times the CAN Bit Time unit.

bool enableMatch

Enable or Disable match event trigger wakeup.

flexcan_pn_match_source_t matchSrc

Selects the match source (ID and/or data match) to trigger wakeup.

uint8_t matchNum

The number of times a given message must match the predefined ID and/or data before generating a wakeup event, range in 0x1 ~ 0xFF.

flexcan_pn_match_mode_t idMatchMode

The ID match type.

flexcan_pn_match_mode_t dataMatchMode

The data match type.

uint32_t idLower
The ID target values 1 which used either for ID match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in ID match “range detection”.

uint32_t idUpper
The ID target values 2 which used only as the upper limit value in ID match “range detection” or used to store the ID mask in “equal to”.

uint8_t lengthLower
The lower limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

uint8_t lengthUpper
The upper limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

struct __flexcan_rx_fifo_config
#include <fsl_flexcan.h> FlexCAN Legacy Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable
Pointer to the FlexCAN Legacy Rx FIFO identifier filter table.

uint8_t idFilterNum
The FlexCAN Legacy Rx FIFO Filter elements quantity.

flexcan_rx_fifo_filter_type_t idFilterType
The FlexCAN Legacy Rx FIFO Filter type.

flexcan_rx_fifo_priority_t priority
The FlexCAN Legacy Rx FIFO receive priority.

struct __flexcan_enhanced_rx_fifo_std_id_filter
#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

Public Members

uint32_t filterType
FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1
CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t std1
CAN Frame Type(DATA or REMOTE).

uint32_t rtr2
CAN Frame Identifier(STD or EXT format).

uint32_t std2
Substitute Remote request.

struct __flexcan_enhanced_rx_fifo_ext_id_filter
#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct _flexcan_enhanced_rx_fifo_config

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable

Pointer to the FlexCAN Enhanced Rx FIFO identifier filter table, each table member occupies 32 bit word, table size should be equal to idFilterNum. There are two types of Enhanced Rx FIFO filter elements that can be stored in table : extended-ID filter element (1 word, occupie 1 table members) and standard-ID filter element (2 words, occupies 2 table members), the extended-ID filter element needs to be placed in front of the table.

uint8_t idFilterPairNum

idFilterPairNum is the Enhanced Rx FIFO identifier filter element pair numbers, each pair of filter elements occupies 2 words and can consist of one extended ID filter element or two standard ID filter elements.

uint8_t extendIdFilterNum

The number of extended ID filter element items in the FlexCAN enhanced Rx FIFO identifier filter table, each extended-ID filter element occupies 2 words, extendIdFilterNum need less than or equal to idFilterPairNum.

uint8_t fifoWatermark

(fifoWatermark + 1) is the minimum number of CAN messages stored in the Enhanced RX FIFO which can trigger FIFO watermark interrupt or a DMA request.

flexcan_efifo_dma_per_read_length_t dmaPerReadLength

Define the length of each read of the Enhanced RX FIFO element by the DAM, see _flexcan_fd_frame_length.

flexcan_rx_fifo_priority_t priority

The FlexCAN Enhanced Rx FIFO receive priority.

struct _flexcan_mb_transfer

#include <fsl_flexcan.h> FlexCAN Message Buffer transfer.

Public Members

flexcan_frame_t *frame
The buffer of CAN Message to be transfer.

uint8_t mbIdx
The index of Message buffer used to transfer Message.

struct __flexcan_fifo_transfer
#include <fsl_flexcan.h> FlexCAN Rx FIFO transfer.

Public Members

flexcan_fd_frame_t *framefd
The buffer of CAN Message to be received from Enhanced Rx FIFO.

flexcan_frame_t *frame
The buffer of CAN Message to be received from Legacy Rx FIFO.

size_t frameNum
Number of CAN Message need to be received from Legacy or Ehanced Rx FIFO.

struct __flexcan_handle
#include <fsl_flexcan.h> FlexCAN handle structure.

Public Members

flexcan_transfer_callback_t callback
Callback function.

void *userData
FlexCAN callback function parameter.

flexcan_frame_t *volatile mbFrameBuf[CAN_WORD1_COUNT]
The buffer for received CAN data from Message Buffers.

flexcan_fd_frame_t *volatile mbFDFrameBuf[CAN_WORD1_COUNT]
The buffer for received CAN FD data from Message Buffers.

flexcan_frame_t *volatile rxFifoFrameBuf
The buffer for received CAN data from Legacy Rx FIFO.

flexcan_fd_frame_t *volatile rxFifoFDFrameBuf
The buffer for received CAN FD data from Ehanced Rx FIFO.

size_t rxFifoFrameNum
The number of CAN messages remaining to be received from Legacy or Ehanced Rx FIFO.

size_t rxFifoTransferTotalNum
Total CAN Message number need to be received from Legacy or Ehanced Rx FIFO.

volatile uint8_t mbState[CAN_WORD1_COUNT]
Message Buffer transfer state.

volatile uint8_t rxFifoState
Rx FIFO transfer state.

volatile uint32_t timestamp[CAN_WORD1_COUNT]
Mailbox transfer timestamp.

struct byteStatus

Public Members

bool byteIsRead

The byte n (0~3) was read or not. The type of error and which bit in byte (n) is affected by the error.

struct ___unnamed65___

Public Members

uint32_t timestamp

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length

CAN frame data length in bytes (Range: 0~8).

uint32_t type

CAN Frame Type(DATA or REMOTE).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t ___pad0___

Reserved.

uint32_t idhit

CAN Rx FIFO filter hit id(This value is only used in Rx FIFO receive mode).

struct ___unnamed67___

Public Members

uint32_t id

CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t ___pad0___

Reserved.

union ___unnamed69___

Public Members

struct _flexcan_frame

struct _flexcan_frame

struct ___unnamed71___

Public Members

uint32_t dataWord0

CAN Frame payload word0.

uint32_t dataWord1

CAN Frame payload word1.

struct ___unnamed73___

Public Members

uint8_t dataByte3
: CAN Frame payload byte3.

uint8_t dataByte2
: CAN Frame payload byte2.

uint8_t dataByte1
: CAN Frame payload byte1.

uint8_t dataByte0
: CAN Frame payload byte0.

uint8_t dataByte7
: CAN Frame payload byte7.

uint8_t dataByte6
: CAN Frame payload byte6.

uint8_t dataByte5
: CAN Frame payload byte5.

uint8_t dataByte4
: CAN Frame payload byte4.

struct ___unnamed75___

Public Members

uint32_t timestamp
: FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length
: CAN FD frame data length code (DLC), range see _flexcan_fd_frame_length, When the length <= 8, it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use DLC_LENGTH_DECODE(length) macro to get the number of valid data bytes.

uint32_t type
: CAN Frame Type(DATA only).

uint32_t format
: CAN Frame Identifier(STD or EXT format).

uint32_t srr
: Substitute Remote request.

uint32_t esi
: Error State Indicator.

uint32_t brs
: Bit Rate Switch.

uint32_t edl
: Extended Data Length.

struct ___unnamed77___

Public Members

uint32_t id
: CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.

uint32_t ___pad0___
: Reserved.

union ___unnamed79___

Public Members

struct __flexcan__fd__frame

struct __flexcan__fd__frame

struct ___unnamed81___

Public Members

uint32_t dataWord[16]
: CAN FD Frame payload, 16 double word maximum.

struct ___unnamed83___

Public Members

uint8_t dataByte3
: CAN Frame payload byte3.

uint8_t dataByte2
: CAN Frame payload byte2.

uint8_t dataByte1
: CAN Frame payload byte1.

uint8_t dataByte0
: CAN Frame payload byte0.

uint8_t dataByte7
: CAN Frame payload byte7.

uint8_t dataByte6
: CAN Frame payload byte6.

uint8_t dataByte5
: CAN Frame payload byte5.

uint8_t dataByte4
: CAN Frame payload byte4.

union ___unnamed85___

Public Members

struct _flexcan_config

struct _flexcan_config

struct ___unnamed87___

Public Members

uint32_t baudRate

FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.

uint32_t baudRateFD

FlexCAN FD bit rate in bps, for CANFD data phase.

struct ___unnamed89___

Public Members

uint32_t bitRate

FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.

uint32_t bitRateFD

FlexCAN FD bit rate in bps, for CANFD data phase.

union ___unnamed91___

Public Members

struct _flexcan_pn_config

< The data target values 1 which used either for data match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in data match “range

detection”.

struct _flexcan_pn_config

struct ___unnamed95___

< The data target values 1 which used either for data match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in data match “range

detection”.

Public Members

uint32_t lowerWord0

CAN Frame payload word0.

uint32_t lowerWord1

CAN Frame payload word1.

struct ___unnamed97___

Public Members

uint8_t lowerByte3
: CAN Frame payload byte3.

uint8_t lowerByte2
: CAN Frame payload byte2.

uint8_t lowerByte1
: CAN Frame payload byte1.

uint8_t lowerByte0
: CAN Frame payload byte0.

uint8_t lowerByte7
: CAN Frame payload byte7.

uint8_t lowerByte6
: CAN Frame payload byte6.

uint8_t lowerByte5
: CAN Frame payload byte5.

uint8_t lowerByte4
: CAN Frame payload byte4.

union ___unnamed93___

Public Members

struct __flexcan__pn__config

< The data target values 2 which used only as the upper limit value in data match “range

detection” or used to store the data mask in “equal to”.

struct __flexcan__pn__config

struct ___unnamed99___

< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

Public Members

uint32_t upperWord0
: CAN Frame payload word0.

uint32_t upperWord1
: CAN Frame payload word1.

struct ___unnamed101___

Public Members

uint8_t upperByte3
: CAN Frame payload byte3.

uint8_t upperByte2
: CAN Frame payload byte2.

uint8_t upperByte1
: CAN Frame payload byte1.

uint8_t upperByte0
: CAN Frame payload byte0.

uint8_t upperByte7
: CAN Frame payload byte7.

uint8_t upperByte6
: CAN Frame payload byte6.

uint8_t upperByte5
: CAN Frame payload byte5.

uint8_t upperByte4
: CAN Frame payload byte4.

2.15 FlexCAN eDMA Driver

void FLEXCAN_TransferCreateHandleEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *rxFifoEdmaHandle)

Initializes the FlexCAN handle, which is used in transactional functions.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxFifoEdmaHandle – User-requested DMA handle for Rx FIFO DMA transfer.

void FLEXCAN_PrepareTransfConfiguration(CAN_Type *base, *flexcan_fifo_transfer_t* *pFifoXfer, *edma_transfer_config_t* *pEdmaConfig)

Prepares the eDMA transfer configuration for FLEXCAN Legacy RX FIFO.

This function prepares the eDMA transfer configuration structure according to FLEXCAN Legacy RX FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

status_t FLEXCAN_StartTransferDatafromRxFIFO(CAN_Type *base, *flexcan_edma_handle_t* *handle, *edma_transfer_config_t* *pEdmaConfig)

Start Transfer Data from the FLEXCAN Legacy Rx FIFO using eDMA.

This function to Update edma transfer confiugration and Start eDMA transfer

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferReceiveFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives the CAN Message from the Legacy Rx FIFO using eDMA.

This function receives the CAN Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferGetReceiveFifoCountEMDA(CAN_Type *base, *flexcan_edma_handle_t* *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXCAN_TransferAbortReceiveFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle)

Aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

This function aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.

status_t FLEXCAN_TransferReceiveEnhancedFifoEDMA(CAN_Type *base, *flexcan_edma_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives the CAN FD Message from the Enhanced Rx FIFO using eDMA.

This function receives the CAN FD Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

static inline *status_t* FLEXCAN_TransferGetReceiveEnhancedFifoCountEMDA(CAN_Type *base, *flexcan_edma_handle_t* *handle, size_t *count)

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

FSL_FLEXCAN_EDMA_DRIVER_VERSION

FlexCAN EDMA driver version.

typedef struct *_flexcan_edma_handle* flexcan_edma_handle_t

typedef void (*flexcan_edma_transfer_callback_t)(CAN_Type *base, *flexcan_edma_handle_t* *handle, *status_t* status, void *userData)

FlexCAN transfer callback function.

struct _flexcan_edma_handle

#include <fsl_flexcan_edma.h> FlexCAN eDMA handle.

Public Members

flexcan_edma_transfer_callback_t callback

Callback function.

void *userData

FlexCAN callback function parameter.

edma_handle_t *rxFifoEdmaHandle

The EDMA handler for Rx FIFO.

volatile uint8_t rxFifoState
: Rx FIFO transfer state.

size_t frameNum
: The number of messages that need to be received.

flexcan_fd_frame_t *framefd
: Point to the buffer of CAN Message to be received from Enhanced Rx FIFO.

2.16 FlexIO: FlexIO Driver

2.17 FlexIO Driver

void FLEXIO_GetDefaultConfig(*flexio_config_t* *userConfig)
: Gets the default configuration to configure the FlexIO module. The configuration can used directly to call the FLEXIO_Configure().

  Example:

```
flexio_config_t config;
FLEXIO_GetDefaultConfig(&config);
```

  Parameters

  - userConfig – pointer to flexio_config_t structure

void FLEXIO_Init(FLEXIO_Type *base, const *flexio_config_t* *userConfig)
: Configures the FlexIO with a FlexIO configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_GetDefaultConfig().

  Example

```
flexio_config_t config = {
.enableFlexio = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false
};
FLEXIO_Configure(base, &config);
```

  Parameters

  - base – FlexIO peripheral base address
  - userConfig – pointer to flexio_config_t structure

void FLEXIO_Deinit(FLEXIO_Type *base)
: Gates the FlexIO clock. Call this API to stop the FlexIO clock.

  Note: After calling this API, call the FLEXO_Init to use the FlexIO module.

  Parameters

  - base – FlexIO peripheral base address

uint32_t FLEXIO_GetInstance(FLEXIO_Type *base)

Get instance number for FLEXIO module.

Parameters

- base – FLEXIO peripheral base address.

void FLEXIO_Reset(FLEXIO_Type *base)

Resets the FlexIO module.

Parameters

- base – FlexIO peripheral base address

static inline void FLEXIO_Enable(FLEXIO_Type *base, bool enable)

Enables the FlexIO module operation.

Parameters

- base – FlexIO peripheral base address
- enable – true to enable, false to disable.

static inline uint32_t FLEXIO_ReadPinInput(FLEXIO_Type *base)

Reads the input data on each of the FlexIO pins.

Parameters

- base – FlexIO peripheral base address

Returns

FlexIO pin input data

static inline uint8_t FLEXIO_GetShifterState(FLEXIO_Type *base)

Gets the current state pointer for state mode use.

Parameters

- base – FlexIO peripheral base address

Returns

current State pointer

void FLEXIO_SetShifterConfig(FLEXIO_Type *base, uint8_t index, const *flexio_shifter_config_t* *shifterConfig)

Configures the shifter with the shifter configuration. The configuration structure covers both the SHIFTCTL and SHIFTCFG registers. To configure the shifter to the proper mode, select which timer controls the shifter to shift, whether to generate start bit/stop bit, and the polarity of start bit and stop bit.

Example

```
flexio_shifter_config_t config = {
.timerSelect = 0,
.timerPolarity = kFLEXIO_ShifterTimerPolarityOnPositive,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinPolarity = kFLEXIO_PinActiveLow,
.shifterMode = kFLEXIO_ShifterModeTransmit,
.inputSource = kFLEXIO_ShifterInputFromPin,
.shifterStop = kFLEXIO_ShifterStopBitHigh,
.shifterStart = kFLEXIO_ShifterStartBitLow
};
FLEXIO_SetShifterConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address

- index – Shifter index
- shifterConfig – Pointer to flexio_shifter_config_t structure

void FLEXIO_SetTimerConfig(FLEXIO_Type *base, uint8_t index, const *flexio_timer_config_t* *timerConfig)

Configures the timer with the timer configuration. The configuration structure covers both the TIMCTL and TIMCFG registers. To configure the timer to the proper mode, select trigger source for timer and the timer pin output and the timing for timer.

Example

```
flexio_timer_config_t config = {
.triggerSelect = FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(0),
.triggerPolarity = kFLEXIO_TimerTriggerPolarityActiveLow,
.triggerSource = kFLEXIO_TimerTriggerSourceInternal,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinSelect = 0,
.pinPolarity = kFLEXIO_PinActiveHigh,
.timerMode = kFLEXIO_TimerModeDual8BitBaudBit,
.timerOutput = kFLEXIO_TimerOutputZeroNotAffectedByReset,
.timerDecrement = kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput,
.timerReset = kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput,
.timerDisable = kFLEXIO_TimerDisableOnTimerCompare,
.timerEnable = kFLEXIO_TimerEnableOnTriggerHigh,
.timerStop = kFLEXIO_TimerStopBitEnableOnTimerDisable,
.timerStart = kFLEXIO_TimerStartBitEnabled
};
FLEXIO_SetTimerConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Timer index
- timerConfig – Pointer to the flexio_timer_config_t structure

static inline void FLEXIO_SetClockMode(FLEXIO_Type *base, uint8_t index, *flexio_timer_decrement_source_t* clocksource)

This function set the value of the prescaler on flexio channels.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- index – Timer index
- clocksource – Set clock value

static inline void FLEXIO_EnableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the shifter status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_DisableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the shifter status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_EnableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the shifter error interrupt. The interrupt generates when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_DisableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the shifter error interrupt. The interrupt won't generate when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline void FLEXIO_EnableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Enables the timer status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline void FLEXIO_DisableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)

Disables the timer status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline uint32_t FLEXIO_GetShifterStatusFlags(FLEXIO_Type *base)

Gets the shifter status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter status flags

static inline void FLEXIO_ClearShifterStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter status flags.

Note: For clearing multiple shifter status flags, for example, two shifter status flags, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)

static inline uint32_t FLEXIO_GetShifterErrorFlags(FLEXIO_Type *base)

Gets the shifter error flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter error flags

static inline void FLEXIO_ClearShifterErrorFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter error flags.

Note: For clearing multiple shifter error flags, for example, two shifter error flags, can calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by (1 « shifter index)

static inline uint32_t FLEXIO_GetTimerStatusFlags(FLEXIO_Type *base)

Gets the timer status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Timer status flags

static inline void FLEXIO_ClearTimerStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the timer status flags.

Note: For clearing multiple timer status flags, for example, two timer status flags, can calculate the mask by using ((1 « timer index0) | (1 « timer index1))

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by (1 « timer index)

static inline void FLEXIO_EnableShifterStatusDMA(FLEXIO_Type *base, uint32_t mask, bool enable)

Enables/disables the shifter status DMA. The DMA request generates when the corresponding SSF is set.

Note: For multiple shifter status DMA enables, for example, calculate the mask by using ((1 « shifter index0) | (1 « shifter index1))

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by (1 « shifter index)
- enable – True to enable, false to disable.

uint32_t FLEXIO_GetShifterBufferAddress(FLEXIO_Type *base, *flexio_shifter_buffer_type_t* type, uint8_t index)

Gets the shifter buffer address for the DMA transfer usage.

Parameters

- base – FlexIO peripheral base address
- type – Shifter type of flexio_shifter_buffer_type_t
- index – Shifter index

Returns

Corresponding shifter buffer index

status_t FLEXIO_RegisterHandleIRQ(void *base, void *handle, *flexio_isr_t* isr)

Registers the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- handle – Pointer to the handler for FlexIO simulated peripheral.
- isr – FlexIO simulated peripheral interrupt handler.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_UnregisterHandleIRQ(void *base)

Unregisters the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

static inline void FLEXIO_ClearPortOutput(FLEXIO_Type *base, uint32_t mask)

Sets the output level of the multiple FLEXIO pins to the logic 0.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_SetPortOutput(FLEXIO_Type *base, uint32_t mask)

Sets the output level of the multiple FLEXIO pins to the logic 1.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_TogglePortOutput(FLEXIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple FLEXIO pins.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

static inline void FLEXIO_PinWrite(FLEXIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the FLEXIO pins to the logic 1 or 0.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- output – FLEXIO pin output logic level.
  - 0: corresponding pin output low-logic level.
  - 1: corresponding pin output high-logic level.

static inline void FLEXIO_EnablePinOutput(FLEXIO_Type *base, uint32_t pin)

Enables the FLEXIO output pin function.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

static inline uint32_t FLEXIO_PinRead(FLEXIO_Type *base, uint32_t pin)

Reads the current input value of the FLEXIO pin.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline uint32_t FLEXIO_GetPinStatus(FLEXIO_Type *base, uint32_t pin)

Gets the FLEXIO input pin status.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input status

- 0: corresponding pin input capture no status.
- 1: corresponding pin input capture rising or falling edge.

static inline void FLEXIO_SetPinLevel(FLEXIO_Type *base, uint8_t pin, bool level)

Sets the FLEXIO output pin level.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.
- level – FlexIO output pin level to set, can be either 0 or 1.

static inline bool FLEXIO_GetPinOverride(const FLEXIO_Type *const base, uint8_t pin)

Gets the enabled status of a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.

Return values

FlexIO – port enabled status

- 0: corresponding output pin is in disabled state.
- 1: corresponding output pin is in enabled state.

static inline void FLEXIO_ConfigPinOverride(FLEXIO_Type *base, uint8_t pin, bool enabled)

Enables or disables a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – Flexio pin number.
- enabled – Enable or disable the FlexIO pin.

static inline void FLEXIO_ClearPortStatus(FLEXIO_Type *base, uint32_t mask)

Clears the multiple FLEXIO input pins status.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

FSL_FLEXIO_DRIVER_VERSION

FlexIO driver version.

enum _flexio_timer_trigger_polarity

Define time of timer trigger polarity.

Values:

enumerator kFLEXIO_TimerTriggerPolarityActiveHigh

Active high.

enumerator kFLEXIO_TimerTriggerPolarityActiveLow

Active low.

enum _flexio_timer_trigger_source

Define type of timer trigger source.

Values:

enumerator kFLEXIO_TimerTriggerSourceExternal

External trigger selected.

enumerator kFLEXIO_TimerTriggerSourceInternal

Internal trigger selected.

enum _flexio_pin_config

Define type of timer/shifter pin configuration.

Values:

enumerator kFLEXIO_PinConfigOutputDisabled

Pin output disabled.

enumerator kFLEXIO_PinConfigOpenDrainOrBidirection

Pin open drain or bidirectional output enable.

enumerator kFLEXIO_PinConfigBidirectionOutputData

Pin bidirectional output data.

enumerator kFLEXIO_PinConfigOutput

Pin output.

enum _flexio_pin_polarity

Definition of pin polarity.

Values:

enumerator kFLEXIO_PinActiveHigh

Active high.

enumerator kFLEXIO_PinActiveLow

Active low.

enum _flexio_timer_mode

Define type of timer work mode.

Values:

enumerator kFLEXIO_TimerModeDisabled
Timer Disabled.

enumerator kFLEXIO_TimerModeDual8BitBaudBit
Dual 8-bit counters baud/bit mode.

enumerator kFLEXIO_TimerModeDual8BitPWM
Dual 8-bit counters PWM mode.

enumerator kFLEXIO_TimerModeSingle16Bit
Single 16-bit counter mode.

enumerator kFLEXIO_TimerModeDual8BitPWMLow
Dual 8-bit counters PWM Low mode.

enum _flexio_timer_output
Define type of timer initial output or timer reset condition.

Values:

enumerator kFLEXIO_TimerOutputOneNotAffectedByReset
Logic one when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputZeroNotAffectedByReset
Logic zero when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputOneAffectedByReset
Logic one when enabled and on timer reset.

enumerator kFLEXIO_TimerOutputZeroAffectedByReset
Logic zero when enabled and on timer reset.

enum _flexio_timer_decrement_source
Define type of timer decrement.

Values:

enumerator kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput
Decrement counter on FlexIO clock, Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTimerOutput
Decrement counter on Trigger input (both edges), Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnPinInputShiftPinInput
Decrement counter on Pin input (both edges), Shift clock equals Pin input.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTriggerInput
Decrement counter on Trigger input (both edges), Shift clock equals Trigger input.

enum _flexio_timer_reset_condition
Define type of timer reset condition.

Values:

enumerator kFLEXIO_TimerResetNever
Timer never reset.

enumerator kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput
Timer reset on Timer Pin equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerTriggerEqualToTimerOutput
Timer reset on Timer Trigger equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerPinRisingEdge
Timer reset on Timer Pin rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerRisingEdge
Timer reset on Trigger rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerBothEdge
Timer reset on Trigger rising or falling edge.

enum _flexio_timer_disable_condition
Define type of timer disable condition.

Values:

enumerator kFLEXIO_TimerDisableNever
Timer never disabled.

enumerator kFLEXIO_TimerDisableOnPreTimerDisable
Timer disabled on Timer N-1 disable.

enumerator kFLEXIO_TimerDisableOnTimerCompare
Timer disabled on Timer compare.

enumerator kFLEXIO_TimerDisableOnTimerCompareTriggerLow
Timer disabled on Timer compare and Trigger Low.

enumerator kFLEXIO_TimerDisableOnPinBothEdge
Timer disabled on Pin rising or falling edge.

enumerator kFLEXIO_TimerDisableOnPinBothEdgeTriggerHigh
Timer disabled on Pin rising or falling edge provided Trigger is high.

enumerator kFLEXIO_TimerDisableOnTriggerFallingEdge
Timer disabled on Trigger falling edge.

enum _flexio_timer_enable_condition
Define type of timer enable condition.

Values:

enumerator kFLEXIO_TimerEnabledAlways
Timer always enabled.

enumerator kFLEXIO_TimerEnableOnPrevTimerEnable
Timer enabled on Timer N-1 enable.

enumerator kFLEXIO_TimerEnableOnTriggerHigh
Timer enabled on Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerHighPinHigh
Timer enabled on Trigger high and Pin high.

enumerator kFLEXIO_TimerEnableOnPinRisingEdge
Timer enabled on Pin rising edge.

enumerator kFLEXIO_TimerEnableOnPinRisingEdgeTriggerHigh
Timer enabled on Pin rising edge and Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerRisingEdge
Timer enabled on Trigger rising edge.

enumerator kFLEXIO_TimerEnableOnTriggerBothEdge
Timer enabled on Trigger rising or falling edge.

enum _flexio_timer_stop_bit_condition

Define type of timer stop bit generate condition.

Values:

enumerator kFLEXIO_TimerStopBitDisabled

Stop bit disabled.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompare

Stop bit is enabled on timer compare.

enumerator kFLEXIO_TimerStopBitEnableOnTimerDisable

Stop bit is enabled on timer disable.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompareDisable

Stop bit is enabled on timer compare and timer disable.

enum _flexio_timer_start_bit_condition

Define type of timer start bit generate condition.

Values:

enumerator kFLEXIO_TimerStartBitDisabled

Start bit disabled.

enumerator kFLEXIO_TimerStartBitEnabled

Start bit enabled.

enum _flexio_timer_output_state

FlexIO as PWM channel output state.

Values:

enumerator kFLEXIO_PwmLow

The output state of PWM channel is low

enumerator kFLEXIO_PwmHigh

The output state of PWM channel is high

enum _flexio_shifter_timer_polarity

Define type of timer polarity for shifter control.

Values:

enumerator kFLEXIO_ShifterTimerPolarityOnPositive

Shift on positive edge of shift clock.

enumerator kFLEXIO_ShifterTimerPolarityOnNegitive

Shift on negative edge of shift clock.

enum _flexio_shifter_mode

Define type of shifter working mode.

Values:

enumerator kFLEXIO_ShifterDisabled

Shifter is disabled.

enumerator kFLEXIO_ShifterModeReceive

Receive mode.

enumerator kFLEXIO_ShifterModeTransmit

Transmit mode.

enumerator kFLEXIO_ShifterModeMatchStore
Match store mode.

enumerator kFLEXIO_ShifterModeMatchContinuous
Match continuous mode.

enumerator kFLEXIO_ShifterModeState
SHIFTBUF contents are used for storing programmable state attributes.

enumerator kFLEXIO_ShifterModeLogic
SHIFTBUF contents are used for implementing programmable logic look up table.

enum _flexio_shifter_input_source
Define type of shifter input source.

Values:

enumerator kFLEXIO_ShifterInputFromPin
Shifter input from pin.

enumerator kFLEXIO_ShifterInputFromNextShifterOutput
Shifter input from Shifter N+1.

enum _flexio_shifter_stop_bit
Define of STOP bit configuration.

Values:

enumerator kFLEXIO_ShifterStopBitDisable
Disable shifter stop bit.

enumerator kFLEXIO_ShifterStopBitLow
Set shifter stop bit to logic low level.

enumerator kFLEXIO_ShifterStopBitHigh
Set shifter stop bit to logic high level.

enum _flexio_shifter_start_bit
Define type of START bit configuration.

Values:

enumerator kFLEXIO_ShifterStartBitDisabledLoadDataOnEnable
Disable shifter start bit, transmitter loads data on enable.

enumerator kFLEXIO_ShifterStartBitDisabledLoadDataOnShift
Disable shifter start bit, transmitter loads data on first shift.

enumerator kFLEXIO_ShifterStartBitLow
Set shifter start bit to logic low level.

enumerator kFLEXIO_ShifterStartBitHigh
Set shifter start bit to logic high level.

enum _flexio_shifter_buffer_type
Define FlexIO shifter buffer type.

Values:

enumerator kFLEXIO_ShifterBuffer
Shifter Buffer N Register.

enumerator kFLEXIO_ShifterBufferBitSwapped
Shifter Buffer N Bit Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferByteSwapped
Shifter Buffer N Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferBitByteSwapped
Shifter Buffer N Bit Swapped Register.

enumerator kFLEXIO_ShifterBufferNibbleByteSwapped
Shifter Buffer N Nibble Byte Swapped Register.

enumerator kFLEXIO_ShifterBufferHalfWordSwapped
Shifter Buffer N Half Word Swapped Register.

enumerator kFLEXIO_ShifterBufferNibbleSwapped
Shifter Buffer N Nibble Swapped Register.

enum _flexio_gpio_direction
FLEXIO gpio direction definition.

Values:

enumerator kFLEXIO_DigitalInput
Set current pin as digital input

enumerator kFLEXIO_DigitalOutput
Set current pin as digital output

enum _flexio_pin_input_config
FLEXIO gpio input config.

Values:

enumerator kFLEXIO_InputInterruptDisabled
Interrupt request is disabled.

enumerator kFLEXIO_InputInterruptEnable
Interrupt request is enable.

enumerator kFLEXIO_FlagRisingEdgeEnable
Input pin flag on rising edge.

enumerator kFLEXIO_FlagFallingEdgeEnable
Input pin flag on falling edge.

typedef enum *_flexio_timer_trigger_polarity* flexio_timer_trigger_polarity_t
Define time of timer trigger polarity.

typedef enum *_flexio_timer_trigger_source* flexio_timer_trigger_source_t
Define type of timer trigger source.

typedef enum *_flexio_pin_config* flexio_pin_config_t
Define type of timer/shifter pin configuration.

typedef enum *_flexio_pin_polarity* flexio_pin_polarity_t
Definition of pin polarity.

typedef enum *_flexio_timer_mode* flexio_timer_mode_t
Define type of timer work mode.

typedef enum *_flexio_timer_output* flexio_timer_output_t
Define type of timer initial output or timer reset condition.

typedef enum *_flexio_timer_decrement_source* flexio_timer_decrement_source_t
Define type of timer decrement.

typedef enum *_flexio_timer_reset_condition* flexio_timer_reset_condition_t
Define type of timer reset condition.

typedef enum *_flexio_timer_disable_condition* flexio_timer_disable_condition_t
Define type of timer disable condition.

typedef enum *_flexio_timer_enable_condition* flexio_timer_enable_condition_t
Define type of timer enable condition.

typedef enum *_flexio_timer_stop_bit_condition* flexio_timer_stop_bit_condition_t
Define type of timer stop bit generate condition.

typedef enum *_flexio_timer_start_bit_condition* flexio_timer_start_bit_condition_t
Define type of timer start bit generate condition.

typedef enum *_flexio_timer_output_state* flexio_timer_output_state_t
FlexIO as PWM channel output state.

typedef enum *_flexio_shifter_timer_polarity* flexio_shifter_timer_polarity_t
Define type of timer polarity for shifter control.

typedef enum *_flexio_shifter_mode* flexio_shifter_mode_t
Define type of shifter working mode.

typedef enum *_flexio_shifter_input_source* flexio_shifter_input_source_t
Define type of shifter input source.

typedef enum *_flexio_shifter_stop_bit* flexio_shifter_stop_bit_t
Define of STOP bit configuration.

typedef enum *_flexio_shifter_start_bit* flexio_shifter_start_bit_t
Define type of START bit configuration.

typedef enum *_flexio_shifter_buffer_type* flexio_shifter_buffer_type_t
Define FlexIO shifter buffer type.

typedef struct *_flexio_config_* flexio_config_t
Define FlexIO user configuration structure.

typedef struct *_flexio_timer_config* flexio_timer_config_t
Define FlexIO timer configuration structure.

typedef struct *_flexio_shifter_config* flexio_shifter_config_t
Define FlexIO shifter configuration structure.

typedef enum *_flexio_gpio_direction* flexio_gpio_direction_t
FLEXIO gpio direction definition.

typedef enum *_flexio_pin_input_config* flexio_pin_input_config_t
FLEXIO gpio input config.

typedef struct *_flexio_gpio_config* flexio_gpio_config_t
The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

typedef void (*flexio_isr_t)(void *base, void *handle)
typedef for FlexIO simulated driver interrupt handler.

FLEXIO_Type *const s_flexioBases[]
Pointers to flexio bases for each instance.

const *clock_ip_name_t* s_flexioClocks[]

Pointers to flexio clocks for each instance.

void FLEXIO_SetPinConfig(FLEXIO_Type *base, uint32_t pin, *flexio_gpio_config_t* *config)

Configure a FLEXIO pin used by the board.

To Config the FLEXIO PIN, define a pin configuration, as either input or output, in the user file. Then, call the FLEXIO_SetPinConfig() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
flexio_gpio_config_t config =
{
  kFLEXIO_DigitalInput,
  0U,
  kFLEXIO_FlagRisingEdgeEnable | kFLEXIO_InputInterruptEnable,
}
Define a digital output pin configuration,
flexio_gpio_config_t config =
{
  kFLEXIO_DigitalOutput,
  0U,
  0U
}
```

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- config – FLEXIO pin configuration pointer.

FLEXIO_TIMER_TRIGGER_SEL_PININPUT(x)

Calculate FlexIO timer trigger.

FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(x)

FLEXIO_TIMER_TRIGGER_SEL_TIMn(x)

struct _flexio_config_

#include <fsl_flexio.h> Define FlexIO user configuration structure.

Public Members

bool enableFlexio

Enable/disable FlexIO module

bool enableInDoze

Enable/disable FlexIO operation in doze mode

bool enableInDebug

Enable/disable FlexIO operation in debug mode

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

struct _flexio_timer_config

#include <fsl_flexio.h> Define FlexIO timer configuration structure.

Public Members

uint32_t triggerSelect
: The internal trigger selection number using MACROs.

flexio_timer_trigger_polarity_t triggerPolarity
: Trigger Polarity.

flexio_timer_trigger_source_t triggerSource
: Trigger Source, internal (see 'trgsel') or external.

flexio_pin_config_t pinConfig
: Timer Pin Configuration.

uint32_t pinSelect
: Timer Pin number Select.

flexio_pin_polarity_t pinPolarity
: Timer Pin Polarity.

flexio_timer_mode_t timerMode
: Timer work Mode.

flexio_timer_output_t timerOutput
: Configures the initial state of the Timer Output and whether it is affected by the Timer reset.

flexio_timer_decrement_source_t timerDecrement
: Configures the source of the Timer decrement and the source of the Shift clock.

flexio_timer_reset_condition_t timerReset
: Configures the condition that causes the timer counter (and optionally the timer output) to be reset.

flexio_timer_disable_condition_t timerDisable
: Configures the condition that causes the Timer to be disabled and stop decrementing.

flexio_timer_enable_condition_t timerEnable
: Configures the condition that causes the Timer to be enabled and start decrementing.

flexio_timer_stop_bit_condition_t timerStop
: Timer STOP Bit generation.

flexio_timer_start_bit_condition_t timerStart
: Timer STRAT Bit generation.

uint32_t timerCompare
: Value for Timer Compare N Register.

struct __flexio_shifter_config
: *#include <fsl_flexio.h>* Define FlexIO shifter configuration structure.

Public Members

uint32_t timerSelect
: Selects which Timer is used for controlling the logic/shift register and generating the Shift clock.

flexio_shifter_timer_polarity_t timerPolarity
: Timer Polarity.

flexio_pin_config_t pinConfig
Shifter Pin Configuration.

uint32_t pinSelect
Shifter Pin number Select.

flexio_pin_polarity_t pinPolarity
Shifter Pin Polarity.

flexio_shifter_mode_t shifterMode
Configures the mode of the Shifter.

uint32_t parallelWidth
Configures the parallel width when using parallel mode.

flexio_shifter_input_source_t inputSource
Selects the input source for the shifter.

flexio_shifter_stop_bit_t shifterStop
Shifter STOP bit.

flexio_shifter_start_bit_t shifterStart
Shifter START bit.

struct _flexio_gpio_config
#include <fsl_flexio.h> The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

Public Members

flexio_gpio_direction_t pinDirection
FLEXIO pin direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

uint8_t inputConfig
Set an input config

2.18 FlexIO eDMA SPI Driver

status_t FLEXIO_SPI_MasterTransferCreateHandleEDMA(*FLEXIO_SPI_Type* *base,
flexio_spi_master_edma_handle_t *handle,
flexio_spi_master_edma_transfer_callback_t callback, void *userData,
edma_handle_t *txHandle,
edma_handle_t *rxHandle)

Initializes the FlexIO SPI master eDMA handle.

This function initializes the FlexIO SPI master eDMA handle which can be used for other FlexIO SPI master transactional APIs. For a specified FlexIO SPI instance, call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested eDMA handle for FlexIO SPI RX eDMA transfer.
- rxHandle – User requested eDMA handle for FlexIO SPI TX eDMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

status_t FLEXIO_SPI_MasterTransferEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_MasterGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

void FLEXIO_SPI_MasterTransferAbortEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle)

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.

status_t FLEXIO_SPI_MasterTransferGetCountEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, size_t *count)

Gets the number of bytes transferred so far using FlexIO SPI master eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

static inline void FLEXIO_SPI_SlaveTransferCreateHandleEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *flexio_spi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txHandle, *edma_handle_t* *rxHandle)

Initializes the FlexIO SPI slave eDMA handle.

This function initializes the FlexIO SPI slave eDMA handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested eDMA handle for FlexIO SPI TX eDMA transfer.
- rxHandle – User requested eDMA handle for FlexIO SPI RX eDMA transfer.

status_t FLEXIO_SPI_SlaveTransferEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_SlaveGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

static inline void FLEXIO_SPI_SlaveTransferAbortEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle)

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_slave_edma_handle_t structure to store the transfer state.

static inline *status_t* FLEXIO_SPI_SlaveTransferGetCountEDMA(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, size_t *count)

Gets the number of bytes transferred so far using FlexIO SPI slave eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

FSL_FLEXIO_SPI_EDMA_DRIVER_VERSION

FlexIO SPI EDMA driver version.

typedef struct *_flexio_spi_master_edma_handle* flexio_spi_master_edma_handle_t

typedef for flexio_spi_master_edma_handle_t in advance.

typedef *flexio_spi_master_edma_handle_t* flexio_spi_slave_edma_handle_t

Slave handle is the same with master handle.

typedef void (*flexio_spi_master_edma_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_master_edma_handle_t* *handle, *status_t* status, void *userData)

FlexIO SPI master callback for finished transmit.

typedef void (*flexio_spi_slave_edma_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_edma_handle_t* *handle, *status_t* status, void *userData)

FlexIO SPI slave callback for finished transmit.

struct _flexio_spi_master_edma_handle

#include <fsl_flexio_spi_edma.h> FlexIO SPI eDMA transfer handle, users should not touch the content of the handle.

Public Members

size_t transferSize

Total bytes to be transferred.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

bool txInProgress

Send transfer in progress

bool rxInProgress

Receive transfer in progress

edma_handle_t *txHandle

DMA handler for SPI send

edma_handle_t *rxHandle

DMA handler for SPI receive

flexio_spi_master_edma_transfer_callback_t callback

Callback for SPI DMA transfer

void *userData

User Data for SPI DMA callback

2.19 FlexIO eDMA UART Driver

status_t FLEXIO_UART_TransferCreateHandleEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txEdmaHandle, *edma_handle_t* *rxEdmaHandle)

Initializes the UART handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_UART_Type.
- handle – Pointer to flexio_uart_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

status_t FLEXIO_UART_TransferSendEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent out, the send callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – UART handle pointer.
- xfer – UART eDMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_TxBusy – Previous transfer on going.

status_t FLEXIO_UART_TransferReceiveEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- xfer – UART eDMA transfer structure, see flexio_uart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_UART_RxBusy – Previous transfer on going.

void FLEXIO_UART_TransferAbortSendEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle)

Aborts the sent data which using eDMA.

This function aborts sent data which using eDMA.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure

void FLEXIO_UART_TransferAbortReceiveEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle)

Aborts the receive data which using eDMA.

This function aborts the receive data which using eDMA.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure

status_t FLEXIO_UART_TransferGetSendCountEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, size_t *count)

Gets the number of bytes sent out.

This function gets the number of bytes sent out.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

status_t FLEXIO_UART_TransferGetReceiveCountEDMA(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, size_t *count)

Gets the number of bytes received.

This function gets the number of bytes received.

Parameters

- base – Pointer to FLEXIO_UART_Type
- handle – Pointer to flexio_uart_edma_handle_t structure
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

FSL_FLEXIO_UART_EDMA_DRIVER_VERSION
FlexIO UART EDMA driver version.

typedef struct *_flexio_uart_edma_handle* flexio_uart_edma_handle_t

typedef void (*flexio_uart_edma_transfer_callback_t)(*FLEXIO_UART_Type* *base, *flexio_uart_edma_handle_t* *handle, *status_t* status, void *userData)
UART transfer callback function.

struct _flexio_uart_edma_handle
#include <fsl_flexio_uart_edma.h> UART eDMA handle.

Public Members

flexio_uart_edma_transfer_callback_t callback
Callback function.

void *userData
UART callback function parameter.

size_t txDataSizeAll
Total bytes to be sent.

size_t rxDataSizeAll
Total bytes to be received.

edma_handle_t *txEdmaHandle
The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
The eDMA RX channel used.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state

2.20 FlexIO I2C Master Driver

status_t FLEXIO_I2C_CheckForBusyBus(*FLEXIO_I2C_Type* *base)
Make sure the bus isn't already pulled down.

Check the FLEXIO pin status to see whether either of SDA and SCL pin is pulled down.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure..

Return values

- kStatus_Success –
- kStatus_FLEXIO_I2C_Busy –

status_t FLEXIO_I2C_MasterInit(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, and configures the FlexIO I2C hardware configuration.

Example

```
FLEXIO_I2C_Type base = {
.flexioBase = FLEXIO,
.SDAPinIndex = 0,
.SCLPinIndex = 1,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_i2c_master_config_t config = {
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 100000
};
FLEXIO_I2C_MasterInit(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- masterConfig – Pointer to flexio_i2c_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Initialization successful
- kStatus_InvalidArgument – The source clock exceed upper range limitation

void FLEXIO_I2C_MasterDeinit(*FLEXIO_I2C_Type* *base)

De-initializes the FlexIO I2C master peripheral. Calling this API Resets the FlexIO I2C master shifer and timer config, module can't work unless the FLEXIO_I2C_MasterInit is called.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterGetDefaultConfig(*flexio_i2c_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly for calling the FLEXIO_I2C_MasterInit().

Example:

```
flexio_i2c_master_config_t config;
FLEXIO_I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – Pointer to flexio_i2c_master_config_t structure.

static inline void FLEXIO_I2C_MasterEnable(*FLEXIO_I2C_Type* *base, bool enable)

Enables/disables the FlexIO module operation.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – Pass true to enable module, false does not have any effect.

uint32_t FLEXIO_I2C_MasterGetStatusFlags(*FLEXIO_I2C_Type* *base)

Gets the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure

Returns

Status flag, use status flag to AND _flexio_i2c_master_status_flags can get the related status.

void FLEXIO_I2C_MasterClearStatusFlags(*FLEXIO_I2C_Type* *base, uint32_t mask)

Clears the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
  - kFLEXIO_I2C_RxFullFlag
  - kFLEXIO_I2C_ReceiveNakFlag

void FLEXIO_I2C_MasterEnableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Enables the FlexIO i2c master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source. Currently only one interrupt request source:
  - kFLEXIO_I2C_TransferCompleteInterruptEnable

void FLEXIO_I2C_MasterDisableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Disables the FlexIO I2C master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source.

void FLEXIO_I2C_MasterSetBaudRate(*FLEXIO_I2C_Type* *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the FlexIO I2C master transfer baudrate.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- baudRate_Bps – the baud rate value in HZ
- srcClock_Hz – source clock in HZ

void FLEXIO_I2C_MasterStart(*FLEXIO_I2C_Type* *base, uint8_t address, *flexio_i2c_direction_t* direction)

Sends START + 7-bit address to the bus.

Note: This API should be called when the transfer configuration is ready to send a START signal and 7-bit address to the bus. This is a non-blocking API, which returns directly after the address is put into the data register but the address transfer is not finished on the bus. Ensure that the kFLEXIO_I2C_RxFullFlag status is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- address – 7-bit address.
- direction – transfer direction. This parameter is one of the values in flexio_i2c_direction_t:
  - kFLEXIO_I2C_Write: Transmit
  - kFLEXIO_I2C_Read: Receive

void FLEXIO_I2C_MasterStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterRepeatedStart(*FLEXIO_I2C_Type* *base)

Sends the repeated start signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterAbortStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal when transfer is still on-going.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterEnableAck(*FLEXIO_I2C_Type* *base, bool enable)

Configures the sent ACK/NAK for the following byte.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – True to configure send ACK, false configure to send NAK.

status_t FLEXIO_I2C_MasterSetTransferCount(*FLEXIO_I2C_Type* *base, uint16_t count)

Sets the number of bytes to be transferred from a start signal to a stop signal.

Note: Call this API before a transfer begins because the timer generates a number of clocks according to the number of bytes that need to be transferred.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- count – Number of bytes need to be transferred from a start signal to a re-start/stop signal

Return values

- kStatus_Success – Successfully configured the count.
- kStatus_InvalidArgument – Input argument is invalid.

static inline void FLEXIO_I2C_MasterWriteByte(*FLEXIO_I2C_Type* *base, uint32_t data)

Writes one byte of data to the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- data – a byte of data.

static inline uint8_t FLEXIO_I2C_MasterReadByte(*FLEXIO_I2C_Type* *base)

Reads one byte of data from the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the data is ready in the register.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

Returns

data byte read.

status_t FLEXIO_I2C_MasterWriteBlocking(*FLEXIO_I2C_Type* *base, const uint8_t *txBuff, uint8_t txSize)

Sends a buffer of data in bytes.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- txBuff – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Nak – Receive NAK during writing data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterReadBlocking(*FLEXIO_I2C_Type* *base, uint8_t *rxBuff, uint8_t rxSize)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- rxBuff – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterTransferBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_transfer_t* *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to receiving NAK.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.
- xfer – pointer to flexio_i2c_master_transfer_t structure.

Returns

status of status_t.

status_t FLEXIO_I2C_MasterTransferCreateHandle(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *flexio_i2c_master_transfer_callback_t* callback, void *userData)

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure to store the transfer state.
- callback – Pointer to user callback function.
- userData – User param passed to the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/isr table out of range.

status_t FLEXIO_I2C_MasterTransferNonBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *flexio_i2c_master_transfer_t* *xfer)

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: The API returns immediately after the transfer initiates. Call FLEXIO_I2C_MasterTransferGetCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXIO_I2C_Busy, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state
- xfer – pointer to flexio_i2c_master_transfer_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_FLEXIO_I2C_Busy – FlexIO I2C is not idle, is running another transfer.

status_t FLEXIO_I2C_MasterTransferGetCount(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, size_t *count)

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.
- kStatus_Success – Successfully return the count.

void FLEXIO_I2C_MasterTransferAbort(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle)

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state

void FLEXIO_I2C_MasterTransferHandleIRQ(void *i2cType, void *i2cHandle)

Master interrupt handler.

Parameters

- i2cType – Pointer to FLEXIO_I2C_Type structure
- i2cHandle – Pointer to flexio_i2c_master_transfer_t structure

FSL_FLEXIO_I2C_MASTER_DRIVER_VERSION

FlexIO I2C transfer status.

Values:

enumerator kStatus_FLEXIO_I2C_Busy

I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Idle

I2C is busy doing transfer.

enumerator kStatus_FLEXIO_I2C_Nak

NAK received during transfer.

enumerator kStatus_FLEXIO_I2C_Timeout

Timeout polling status flags.

enum _flexio_i2c_master_interrupt

Define FlexIO I2C master interrupt mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyInterruptEnable

Tx buffer empty interrupt enable.

enumerator kFLEXIO_I2C_RxFullInterruptEnable

Rx buffer full interrupt enable.

enum _flexio_i2c_master_status_flags

Define FlexIO I2C master status mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyFlag

Tx shifter empty flag.

enumerator kFLEXIO_I2C_RxFullFlag

Rx shifter full/Transfer complete flag.

enumerator kFLEXIO_I2C_ReceiveNakFlag

Receive NAK flag.

enum _flexio_i2c_direction

Direction of master transfer.

Values:

enumerator kFLEXIO_I2C_Write

Master send to slave.

enumerator kFLEXIO_I2C_Read

Master receive from slave.

typedef enum *_flexio_i2c_direction* flexio_i2c_direction_t

Direction of master transfer.

typedef struct *_flexio_i2c_type* FLEXIO_I2C_Type

Define FlexIO I2C master access structure typedef.

typedef struct *_flexio_i2c_master_config* flexio_i2c_master_config_t

Define FlexIO I2C master user configuration structure.

typedef struct *_flexio_i2c_master_transfer* flexio_i2c_master_transfer_t

Define FlexIO I2C master transfer structure.

typedef struct *_flexio_i2c_master_handle* flexio_i2c_master_handle_t

FlexIO I2C master handle typedef.

typedef void (*flexio_i2c_master_transfer_callback_t)(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_handle_t* *handle, *status_t* status, void *userData)

FlexIO I2C master transfer callback typedef.

I2C_RETRY_TIMES

Retry times for waiting flag.

struct _flexio_i2c_type

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master access structure typedef.

Public Members

FLEXIO_Type *flexioBase
: FlexIO base pointer.

uint8_t SDAPinIndex
: Pin select for I2C SDA.

uint8_t SCLPinIndex
: Pin select for I2C SCL.

uint8_t shifterIndex[2]
: Shifter index used in FlexIO I2C.

uint8_t timerIndex[3]
: Timer index used in FlexIO I2C.

uint32_t baudrate
: Master transfer baudrate, used to calculate delay time.

struct _flexio_i2c_master_config
: *#include <fsl_flexio_i2c_master.h>* Define FlexIO I2C master user configuration structure.

Public Members

bool enableMaster
: Enables the FlexIO I2C peripheral at initialization time.

bool enableInDoze
: Enable/disable FlexIO operation in doze mode.

bool enableInDebug
: Enable/disable FlexIO operation in debug mode.

bool enableFastAccess
: Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps
: Baud rate in Bps.

struct _flexio_i2c_master_transfer
: *#include <fsl_flexio_i2c_master.h>* Define FlexIO I2C master transfer structure.

Public Members

uint32_t flags
: Transfer flag which controls the transfer, reserved for FlexIO I2C.

uint8_t slaveAddress
: 7-bit slave address.

flexio_i2c_direction_t direction
: Transfer direction, read or write.

uint32_t subaddress
: Sub address. Transferred MSB first.

uint8_t subaddressSize
: Size of sub address.

uint8_t volatile *data
Transfer buffer.

volatile size_t dataSize
Transfer size.

struct __flexio_i2c_master_handle
#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master handle structure.

Public Members

flexio_i2c_master_transfer_t transfer
FlexIO I2C master transfer copy.

size_t transferSize
Total bytes to be transferred.

uint8_t state
Transfer state maintained during transfer.

flexio_i2c_master_transfer_callback_t completionCallback
Callback function called at transfer event. Callback function called at transfer event.

void *userData
Callback parameter passed to callback function.

bool needRestart
Whether master needs to send re-start signal.

2.21 FlexIO I2S Driver

void FLEXIO_I2S_Init(*FLEXIO_I2S_Type* *base, const *flexio_i2s_config_t* *config)
Initializes the FlexIO I2S.

This API configures FlexIO pins and shifter to I2S and configures the FlexIO I2S with a configuration structure. The configuration structure can be filled by the user, or be set with default values by FLEXIO_I2S_GetDefaultConfig().

Note: This API should be called at the beginning of the application to use the FlexIO I2S driver. Otherwise, any access to the FlexIO I2S module can cause hard fault because the clock is not enabled.

Parameters

- base – FlexIO I2S base pointer
- config – FlexIO I2S configure structure.

void FLEXIO_I2S_GetDefaultConfig(*flexio_i2s_config_t* *config)
Sets the FlexIO I2S configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in FLEXIO_I2S_Init(). Users may use the initialized structure unchanged in FLEXIO_I2S_Init() or modify some fields of the structure before calling FLEXIO_I2S_Init().

Parameters

- config – pointer to master configuration structure

void FLEXIO_I2S_Deinit(*FLEXIO_I2S_Type* *base)

De-initializes the FlexIO I2S.

Calling this API resets the FlexIO I2S shifter and timer config. After calling this API, call the FLEXO_I2S_Init to use the FlexIO I2S module.

Parameters

- base – FlexIO I2S base pointer

static inline void FLEXIO_I2S_Enable(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S module operation.

Parameters

- base – Pointer to FLEXIO_I2S_Type
- enable – True to enable, false dose not have any effect.

uint32_t FLEXIO_I2S_GetStatusFlags(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S status flags.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

Status flag, which are ORed by the enumerators in the _flexio_i2s_status_flags.

void FLEXIO_I2S_EnableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Enables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

void FLEXIO_I2S_DisableInterrupts(*FLEXIO_I2S_Type* *base, uint32_t mask)

Disables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – pointer to FLEXIO_I2S_Type structure
- mask – interrupt source

static inline void FLEXIO_I2S_TxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Tx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

static inline void FLEXIO_I2S_RxEnableDMA(*FLEXIO_I2S_Type* *base, bool enable)

Enables/disables the FlexIO I2S Rx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t FLEXIO_I2S_TxGetDataRegisterAddress(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S send data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

FlexIO i2s send data register address.

static inline uint32_t FLEXIO_I2S_RxGetDataRegisterAddress(*FLEXIO_I2S_Type* *base)

Gets the FlexIO I2S receive data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure

Returns

FlexIO i2s receive data register address.

void FLEXIO_I2S_MasterSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_format_t* *format, uint32_t srcClock_Hz)

Configures the FlexIO I2S audio format in master mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – I2S master clock source frequency in Hz.

void FLEXIO_I2S_SlaveSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_format_t* *format)

Configures the FlexIO I2S audio format in slave mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- format – Pointer to FlexIO I2S audio data format structure.

status_t FLEXIO_I2S_WriteBlocking(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint8_t *txData, size_t size)

Sends data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- txData – Pointer to the data to be written.
- size – Bytes to be written.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

static inline void FLEXIO_I2S_WriteData(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint32_t data)

Writes data into a data register.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- data – Data to be written.

status_t FLEXIO_I2S_ReadBlocking(*FLEXIO_I2S_Type* *base, uint8_t bitWidth, uint8_t *rxData, size_t size)

Receives a piece of data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- rxData – Pointer to the data to be read.
- size – Bytes to be read.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

static inline uint32_t FLEXIO_I2S_ReadData(*FLEXIO_I2S_Type* *base)

Reads a data from the data register.

Parameters

- base – FlexIO I2S base pointer

Returns

Data read from data register.

void FLEXIO_I2S_TransferTxCreateHandle(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_callback_t* callback, void *userData)

Initializes the FlexIO I2S handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

void FLEXIO_I2S_TransferSetFormat(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_format_t* *format, uint32_t srcClock_Hz)

Configures the FlexIO I2S audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – FlexIO I2S handle pointer.
- format – Pointer to audio data format structure.
- srcClock_Hz – FlexIO I2S bit clock source frequency in Hz. This parameter should be 0 while in slave mode.

void FLEXIO_I2S_TransferRxCreateHandle(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_callback_t* callback, void *userData)

Initializes the FlexIO I2S receive handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

status_t FLEXIO_I2S_TransferSendNonBlocking(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs an interrupt non-blocking send transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status and check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_FLEXIO_I2S_TxBusy – Previous transmission still not finished, data not all written to TX register yet.
- kStatus_InvalidArgument – The input parameter is invalid.

status_t FLEXIO_I2S_TransferReceiveNonBlocking(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *flexio_i2s_transfer_t* *xfer)

Performs an interrupt non-blocking receive transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call FLEXIO_I2S_GetRemainingBytes to poll the transfer status to check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- xfer – Pointer to flexio_i2s_transfer_t structure

Return values

- kStatus_Success – Successfully start the data receive.
- kStatus_FLEXIO_I2S_RxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

void FLEXIO_I2S_TransferAbortSend(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)

Aborts the current send.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

void FLEXIO_I2S_TransferAbortReceive(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)

Aborts the current receive.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

status_t FLEXIO_I2S_TransferGetSendCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, size_t *count)

Gets the remaining bytes to be sent.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

status_t FLEXIO_I2S_TransferGetReceiveCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, size_t *count)

Gets the remaining bytes to be received.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes recieved.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

Returns

count Bytes received.

void FLEXIO_I2S_TransferTxHandleIRQ(void *i2sBase, void *i2sHandle)

Tx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure

void FLEXIO_I2S_TransferRxHandleIRQ(void *i2sBase, void *i2sHandle)

Rx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure.

FSL_FLEXIO_I2S_DRIVER_VERSION

FlexIO I2S driver version 2.2.2.

FlexIO I2S transfer status.

Values:

enumerator kStatus_FLEXIO_I2S_Idle

FlexIO I2S is in idle state

enumerator kStatus_FLEXIO_I2S_TxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_RxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_Error

FlexIO I2S error occurred

enumerator kStatus_FLEXIO_I2S_QueueFull

FlexIO I2S transfer queue is full.

enumerator kStatus_FLEXIO_I2S_Timeout
FlexIO I2S timeout polling status flags.

enum _flexio_i2s_master_slave
Master or slave mode.

Values:

enumerator kFLEXIO_I2S_Master
Master mode

enumerator kFLEXIO_I2S_Slave
Slave mode

_flexio_i2s_interrupt_enable Define FlexIO FlexIO I2S interrupt mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_I2S_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

_flexio_i2s_status_flags Define FlexIO FlexIO I2S status mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_I2S_RxDataRegFullFlag
Receive buffer full flag.

enum _flexio_i2s_sample_rate
Audio sample rate.

Values:

enumerator kFLEXIO_I2S_SampleRate8KHz
Sample rate 8000Hz

enumerator kFLEXIO_I2S_SampleRate11025Hz
Sample rate 11025Hz

enumerator kFLEXIO_I2S_SampleRate12KHz
Sample rate 12000Hz

enumerator kFLEXIO_I2S_SampleRate16KHz
Sample rate 16000Hz

enumerator kFLEXIO_I2S_SampleRate22050Hz
Sample rate 22050Hz

enumerator kFLEXIO_I2S_SampleRate24KHz
Sample rate 24000Hz

enumerator kFLEXIO_I2S_SampleRate32KHz
Sample rate 32000Hz

enumerator kFLEXIO_I2S_SampleRate44100Hz
Sample rate 44100Hz

enumerator kFLEXIO_I2S_SampleRate48KHz
Sample rate 48000Hz

enumerator kFLEXIO_I2S_SampleRate96KHz
Sample rate 96000Hz

enum _flexio_i2s_word_width
Audio word width.

Values:

enumerator kFLEXIO_I2S_WordWidth8bits
Audio data width 8 bits

enumerator kFLEXIO_I2S_WordWidth16bits
Audio data width 16 bits

enumerator kFLEXIO_I2S_WordWidth24bits
Audio data width 24 bits

enumerator kFLEXIO_I2S_WordWidth32bits
Audio data width 32 bits

typedef struct *_flexio_i2s_type* FLEXIO_I2S_Type
Define FlexIO I2S access structure typedef.

typedef enum *_flexio_i2s_master_slave* flexio_i2s_master_slave_t
Master or slave mode.

typedef struct *_flexio_i2s_config* flexio_i2s_config_t
FlexIO I2S configure structure.

typedef struct *_flexio_i2s_format* flexio_i2s_format_t
FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

typedef enum *_flexio_i2s_sample_rate* flexio_i2s_sample_rate_t
Audio sample rate.

typedef enum *_flexio_i2s_word_width* flexio_i2s_word_width_t
Audio word width.

typedef struct *_flexio_i2s_transfer* flexio_i2s_transfer_t
Define FlexIO I2S transfer structure.

typedef struct *_flexio_i2s_handle* flexio_i2s_handle_t

typedef void (*flexio_i2s_callback_t)(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *status_t* status, void *userData)
FlexIO I2S xfer callback prototype.

I2S_RETRY_TIMES
Retry times for waiting flag.

FLEXIO_I2S_XFER_QUEUE_SIZE
FlexIO I2S transfer queue size, user can refine it according to use case.

struct _flexio_i2s_type
#include <fsl_flexio_i2s.h> Define FlexIO I2S access structure typedef.

Public Members

FLEXIO_Type *flexioBase
: FlexIO base pointer

uint8_t txPinIndex
: Tx data pin index in FlexIO pins

uint8_t rxPinIndex
: Rx data pin index

uint8_t bclkPinIndex
: Bit clock pin index

uint8_t fsPinIndex
: Frame sync pin index

uint8_t txShifterIndex
: Tx data shifter index

uint8_t rxShifterIndex
: Rx data shifter index

uint8_t bclkTimerIndex
: Bit clock timer index

uint8_t fsTimerIndex
: Frame sync timer index

struct __flexio_i2s_config
: *#include <fsl_flexio_i2s.h>* FlexIO I2S configure structure.

Public Members

bool enableI2S
: Enable FlexIO I2S

flexio_i2s_master_slave_t masterSlave
: Master or slave

flexio_pin_polarity_t txPinPolarity
: Tx data pin polarity, active high or low

flexio_pin_polarity_t rxPinPolarity
: Rx data pin polarity

flexio_pin_polarity_t bclkPinPolarity
: Bit clock pin polarity

flexio_pin_polarity_t fsPinPolarity
: Frame sync pin polarity

flexio_shifter_timer_polarity_t txTimerPolarity
: Tx data valid on bclk rising or falling edge

flexio_shifter_timer_polarity_t rxTimerPolarity
: Rx data valid on bclk rising or falling edge

struct __flexio_i2s_format
: *#include <fsl_flexio_i2s.h>* FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

Public Members

uint8_t bitWidth
: Bit width of audio data, always 8/16/24/32 bits

uint32_t sampleRate_Hz
: Sample rate of the audio data

struct _flexio_i2s_transfer
: *#include <fsl_flexio_i2s.h>* Define FlexIO I2S transfer structure.

Public Members

uint8_t *data
: Data buffer start pointer

size_t dataSize
: Bytes to be transferred.

struct _flexio_i2s_handle
: *#include <fsl_flexio_i2s.h>* Define FlexIO I2S handle structure.

Public Members

uint32_t state
: Internal state

flexio_i2s_callback_t callback
: Callback function called at transfer event

void *userData
: Callback parameter passed to callback function

uint8_t bitWidth
: Bit width for transfer, 8/16/24/32bits

flexio_i2s_transfer_t queue[(4U)]
: Transfer queue storing queued transfer

size_t transferSize[(4U)]
: Data bytes need to transfer

volatile uint8_t queueUser
: Index for user to queue transfer

volatile uint8_t queueDriver
: Index for driver to get the transfer data and size

2.22 FlexIO SPI Driver

void FLEXIO_SPI_MasterInit(*FLEXIO_SPI_Type* *base, *flexio_spi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI master hardware, and configures the FlexIO SPI with FlexIO SPI master configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_MasterGetDefaultConfig().

Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_spi_master_config_t config = {
.enableMaster = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 500000,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_MasterInit(&spiDev, &config, srcClock_Hz);
```

Note: 1.FlexIO SPI master only support CPOL = 0, which means clock inactive low. 2.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI master communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by 2*2=4. If FlexIO SPI master communicates with FlexIO SPI slave, the maximum baud rate is FlexIO clock frequency divided by (1.5+2.5)*2=8.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- masterConfig – Pointer to the flexio_spi_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

void FLEXIO_SPI_MasterDeinit(*FLEXIO_SPI_Type* *base)

Resets the FlexIO SPI timer and shifter config.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_MasterGetDefaultConfig(*flexio_spi_master_config_t* *masterConfig)

Gets the default configuration to configure the FlexIO SPI master. The configuration can be used directly by calling the FLEXIO_SPI_MasterConfigure(). Example:

```
flexio_spi_master_config_t masterConfig;
FLEXIO_SPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – Pointer to the flexio_spi_master_config_t structure.

void FLEXIO_SPI_SlaveInit(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_config_t* *slaveConfig)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI slave hardware configuration, and configures the FlexIO SPI with FlexIO SPI slave configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_SlaveGetDefaultConfig().

Note: 1.Only one timer is needed in the FlexIO SPI slave. As a result, the second timer index is ignored. 2.FlexIO SPI slave only support CPOL = 0, which means clock inactive low. 3.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI slave communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by 3*2=6. If FlexIO SPI slave communicates with FlexIO SPI master, the maximum baud rate is FlexIO clock frequency divided by (1.5+2.5)*2=8. Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0}
};
flexio_spi_slave_config_t config = {
.enableSlave = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_SlaveInit(&spiDev, &config);
```

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

void FLEXIO_SPI_SlaveDeinit(*FLEXIO_SPI_Type* *base)

Gates the FlexIO clock.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

void FLEXIO_SPI_SlaveGetDefaultConfig(*flexio_spi_slave_config_t* *slaveConfig)

Gets the default configuration to configure the FlexIO SPI slave. The configuration can be used directly for calling the FLEXIO_SPI_SlaveConfigure(). Example:

```
flexio_spi_slave_config_t slaveConfig;
FLEXIO_SPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

uint32_t FLEXIO_SPI_GetStatusFlags(*FLEXIO_SPI_Type* *base)

Gets FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

Returns

status flag; Use the status flag to AND the following flag mask and get the status.

- kFLEXIO_SPI_TxEmptyFlag
- kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_ClearStatusFlags(*FLEXIO_SPI_Type* *base, uint32_t mask)

Clears FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – status flag The parameter can be any combination of the following values:
  - kFLEXIO_SPI_TxEmptyFlag
  - kFLEXIO_SPI_RxEmptyFlag

void FLEXIO_SPI_EnableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Enables the FlexIO SPI interrupt.

This function enables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source. The parameter can be any combination of the following values:
  - kFLEXIO_SPI_RxFullInterruptEnable
  - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_DisableInterrupts(*FLEXIO_SPI_Type* *base, uint32_t mask)

Disables the FlexIO SPI interrupt.

This function disables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – interrupt source The parameter can be any combination of the following values:
  - kFLEXIO_SPI_RxFullInterruptEnable
  - kFLEXIO_SPI_TxEmptyInterruptEnable

void FLEXIO_SPI_EnableDMA(*FLEXIO_SPI_Type* *base, uint32_t mask, bool enable)

Enables/disables the FlexIO SPI transmit DMA. This function enables/disables the FlexIO SPI Tx DMA, which means that asserting the kFLEXIO_SPI_TxEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t FLEXIO_SPI_GetTxDataRegisterAddress(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction)

Gets the FlexIO SPI transmit data register address for MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns
FlexIO SPI transmit data register address.

static inline uint32_t FLEXIO_SPI_GetRxDataRegisterAddress(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction)

Gets the FlexIO SPI receive data register address for the MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns
FlexIO SPI receive data register address.

static inline void FLEXIO_SPI_Enable(*FLEXIO_SPI_Type* *base, bool enable)

Enables/disables the FlexIO SPI module operation.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.
- enable – True to enable, false does not have any effect.

void FLEXIO_SPI_MasterSetBaudRate(*FLEXIO_SPI_Type* *base, uint32_t baudRate_Bps, uint32_t srcClockHz)

Sets baud rate for the FlexIO SPI transfer, which is only used for the master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- baudRate_Bps – Baud Rate needed in Hz.
- srcClockHz – SPI source clock frequency in Hz.

static inline void FLEXIO_SPI_WriteData(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint32_t data)

Writes one byte of data, which is sent using the MSB method.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- data – 8/16/32 bit data.

static inline uint32_t FLEXIO_SPI_ReadData(*FLEXIO_SPI_Type* *base,
flexio_spi_shift_direction_t direction)

Reads 8 bit/16 bit data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.

Returns

8 bit/16 bit data received.

status_t FLEXIO_SPI_WriteBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, const uint8_t *buffer, size_t size)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The data bytes to send.
- size – The number of data bytes to send.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_ReadBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint8_t *buffer, size_t size)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The buffer to store the received bytes.
- size – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_MasterTransferBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_transfer_t* *xfer)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – pointer to FLEXIO_SPI_Type structure
- xfer – FlexIO SPI transfer structure, see flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

void FLEXIO_SPI_FlushShifters(*FLEXIO_SPI_Type* *base)

Flush tx/rx shifters.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

status_t FLEXIO_SPI_MasterTransferCreateHandle(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *flexio_spi_master_transfer_callback_t* callback, void *userData)

Initializes the FlexIO SPI Master handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_SPI_MasterTransferNonBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *flexio_spi_transfer_t* *xfer)

Master transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- xfer – FlexIO SPI transfer structure. See flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully start a transfer.

- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – SPI is not idle, is running another transfer.

void FLEXIO_SPI_MasterTransferAbort(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle)

Aborts the master data transfer, which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_MasterTransferGetCount(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, size_t *count)

Gets the data transfer status which used IRQ.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXIO_SPI_MasterTransferHandleIRQ(void *spiType, void *spiHandle)

FlexIO SPI master IRQ handler function.

Parameters

- spiType – Pointer to the FLEXIO_SPI_Type structure.
- spiHandle – Pointer to the flexio_spi_master_handle_t structure to store the transfer state.

status_t FLEXIO_SPI_SlaveTransferCreateHandle(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_handle_t* *handle, *flexio_spi_slave_transfer_callback_t* callback, void *userData)

Initializes the FlexIO SPI Slave handle, which is used in transactional functions.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

status_t FLEXIO_SPI_SlaveTransferNonBlocking(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle,
flexio_spi_transfer_t *xfer)

Slave transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- base – Pointer to the FLEXIO_SPI_Type structure.
- xfer – FlexIO SPI transfer structure. See flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – SPI is not idle; it is running another transfer.

static inline void FLEXIO_SPI_SlaveTransferAbort(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle)

Aborts the slave data transfer which used IRQ, share same API with master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.

static inline *status_t* FLEXIO_SPI_SlaveTransferGetCount(*FLEXIO_SPI_Type* *base,
flexio_spi_slave_handle_t *handle,
size_t *count)

Gets the data transfer status which used IRQ, share same API with master.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- handle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXIO_SPI_SlaveTransferHandleIRQ(void *spiType, void *spiHandle)

FlexIO SPI slave IRQ handler function.

Parameters

- spiType – Pointer to the FLEXIO_SPI_Type structure.
- spiHandle – Pointer to the flexio_spi_slave_handle_t structure to store the transfer state.

FSL_FLEXIO_SPI_DRIVER_VERSION

FlexIO SPI driver version.

Error codes for the FlexIO SPI driver.

Values:

enumerator kStatus_FLEXIO_SPI_Busy
FlexIO SPI is busy.

enumerator kStatus_FLEXIO_SPI_Idle
SPI is idle

enumerator kStatus_FLEXIO_SPI_Error
FlexIO SPI error.

enumerator kStatus_FLEXIO_SPI_Timeout
FlexIO SPI timeout polling status flags.

enum _flexio_spi_clock_phase
FlexIO SPI clock phase configuration.

Values:

enumerator kFLEXIO_SPI_ClockPhaseFirstEdge
First edge on SPSCK occurs at the middle of the first cycle of a data transfer.

enumerator kFLEXIO_SPI_ClockPhaseSecondEdge
First edge on SPSCK occurs at the start of the first cycle of a data transfer.

enum _flexio_spi_shift_direction
FlexIO SPI data shifter direction options.

Values:

enumerator kFLEXIO_SPI_MsbFirst
Data transfers start with most significant bit.

enumerator kFLEXIO_SPI_LsbFirst
Data transfers start with least significant bit.

enum _flexio_spi_data_bitcount_mode
FlexIO SPI data length mode options.

Values:

enumerator kFLEXIO_SPI_8BitMode
8-bit data transmission mode.

enumerator kFLEXIO_SPI_16BitMode
16-bit data transmission mode.

enumerator kFLEXIO_SPI_32BitMode
32-bit data transmission mode.

enum _flexio_spi_interrupt_enable
Define FlexIO SPI interrupt mask.

Values:

enumerator kFLEXIO_SPI_TxEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_SPI_RxFullInterruptEnable
Receive buffer full interrupt enable.

enum _flexio_spi_status_flags

Define FlexIO SPI status mask.

Values:

enumerator kFLEXIO_SPI_TxBufferEmptyFlag

Transmit buffer empty flag.

enumerator kFLEXIO_SPI_RxBufferFullFlag

Receive buffer full flag.

enum _flexio_spi_dma_enable

Define FlexIO SPI DMA mask.

Values:

enumerator kFLEXIO_SPI_TxDmaEnable

Tx DMA request source

enumerator kFLEXIO_SPI_RxDmaEnable

Rx DMA request source

enumerator kFLEXIO_SPI_DmaAllEnable

All DMA request source

enum _flexio_spi_transfer_flags

Define FlexIO SPI transfer flags.

Note: Use kFLEXIO_SPI_csContinuous and one of the other flags to OR together to form the transfer flag.

Values:

enumerator kFLEXIO_SPI_8bitMsb

FlexIO SPI 8-bit MSB first

enumerator kFLEXIO_SPI_8bitLsb

FlexIO SPI 8-bit LSB first

enumerator kFLEXIO_SPI_16bitMsb

FlexIO SPI 16-bit MSB first

enumerator kFLEXIO_SPI_16bitLsb

FlexIO SPI 16-bit LSB first

enumerator kFLEXIO_SPI_32bitMsb

FlexIO SPI 32-bit MSB first

enumerator kFLEXIO_SPI_32bitLsb

FlexIO SPI 32-bit LSB first

enumerator kFLEXIO_SPI_csContinuous

Enable the CS signal continuous mode

typedef enum *_flexio_spi_clock_phase* flexio_spi_clock_phase_t

FlexIO SPI clock phase configuration.

typedef enum *_flexio_spi_shift_direction* flexio_spi_shift_direction_t

FlexIO SPI data shifter direction options.

typedef enum *_flexio_spi_data_bitcount_mode* flexio_spi_data_bitcount_mode_t

FlexIO SPI data length mode options.

typedef struct *_flexio_spi_type* FLEXIO_SPI_Type
Define FlexIO SPI access structure typedef.

typedef struct *_flexio_spi_master_config* flexio_spi_master_config_t
Define FlexIO SPI master configuration structure.

typedef struct *_flexio_spi_slave_config* flexio_spi_slave_config_t
Define FlexIO SPI slave configuration structure.

typedef struct *_flexio_spi_transfer* flexio_spi_transfer_t
Define FlexIO SPI transfer structure.

typedef struct *_flexio_spi_master_handle* flexio_spi_master_handle_t
typedef for flexio_spi_master_handle_t in advance.

typedef *flexio_spi_master_handle_t* flexio_spi_slave_handle_t
Slave handle is the same with master handle.

typedef void (*flexio_spi_master_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_master_handle_t* *handle, *status_t* status, void *userData)
FlexIO SPI master callback for finished transmit.

typedef void (*flexio_spi_slave_transfer_callback_t)(*FLEXIO_SPI_Type* *base, *flexio_spi_slave_handle_t* *handle, *status_t* status, void *userData)
FlexIO SPI slave callback for finished transmit.

FLEXIO_SPI_DUMMYDATA
FlexIO SPI dummy transfer data, the data is sent while txData is NULL.

SPI_RETRY_TIMES
Retry times for waiting flag.

FLEXIO_SPI_XFER_DATA_FORMAT(flag)
Get the transfer data format of width and bit order.

struct _flexio_spi_type
#include <fsl_flexio_spi.h> Define FlexIO SPI access structure typedef.

Public Members

FLEXIO_Type *flexioBase
FlexIO base pointer.

uint8_t SDOPinIndex
Pin select for data output. To set SDO pin in Hi-Z state, user needs to mux the pin as GPIO input and disable all pull up/down in application.

uint8_t SDIPinIndex
Pin select for data input.

uint8_t SCKPinIndex
Pin select for clock.

uint8_t CSnPinIndex
Pin select for enable.

uint8_t shifterIndex[2]
Shifter index used in FlexIO SPI.

uint8_t timerIndex[2]
Timer index used in FlexIO SPI.

struct _flexio_spi_master_config

#include <fsl_flexio_spi.h> Define FlexIO SPI master configuration structure.

Public Members

bool enableMaster

Enable/disable FlexIO SPI master after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct _flexio_spi_slave_config

#include <fsl_flexio_spi.h> Define FlexIO SPI slave configuration structure.

Public Members

bool enableSlave

Enable/disable FlexIO SPI slave after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct _flexio_spi_transfer

#include <fsl_flexio_spi.h> Define FlexIO SPI transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData
Receive buffer.

size_t dataSize
Transfer bytes.

uint8_t flags
FlexIO SPI control flag, MSB first or LSB first.

struct _flexio_spi_master_handle
#include <fsl_flexio_spi.h> Define FlexIO SPI handle structure.

Public Members

const uint8_t *txData
Transfer buffer.

uint8_t *rxData
Receive buffer.

size_t transferSize
Total bytes to be transferred.

volatile size_t txRemainingBytes
Send data remaining in bytes.

volatile size_t rxRemainingBytes
Receive data remaining in bytes.

volatile uint32_t state
FlexIO SPI internal state.

uint8_t bytePerFrame
SPI mode, 2bytes or 1byte in a frame

flexio_spi_shift_direction_t direction
Shift direction.

flexio_spi_master_transfer_callback_t callback
FlexIO SPI callback.

void *userData
Callback parameter.

bool isCsContinuous
Is current transfer using CS continuous mode.

uint32_t timer1Cfg
TIMER1 TIMCFG regiser value backup.

2.23 FlexIO UART Driver

status_t FLEXIO_UART_Init(*FLEXIO_UART_Type* *base, const *flexio_uart_config_t* *userConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures FlexIO UART hardware, and configures the FlexIO UART with FlexIO UART configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_UART_GetDefaultConfig().

Example

```
FLEXIO_UART_Type base = {
.flexioBase = FLEXIO,
.TxPinIndex = 0,
.RxPinIndex = 1,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_uart_config_t config = {
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 115200U,
.bitCountPerChar = 8
};
FLEXIO_UART_Init(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- userConfig – Pointer to the flexio_uart_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Configuration success.
- kStatus_FLEXIO_UART_BaudrateNotSupport – Baudrate is not supported for current clock source frequency.

void FLEXIO_UART_Deinit(*FLEXIO_UART_Type* *base)

Resets the FlexIO UART shifter and timer config.

Note: After calling this API, call the FLEXO_UART_Init to use the FlexIO UART module.

Parameters

- base – Pointer to FLEXIO_UART_Type structure

void FLEXIO_UART_GetDefaultConfig(*flexio_uart_config_t* *userConfig)

Gets the default configuration to configure the FlexIO UART. The configuration can be used directly for calling the FLEXIO_UART_Init(). Example:

```
flexio_uart_config_t config;
FLEXIO_UART_GetDefaultConfig(&userConfig);
```

Parameters

- userConfig – Pointer to the flexio_uart_config_t structure.

uint32_t FLEXIO_UART_GetStatusFlags(*FLEXIO_UART_Type* *base)

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART status flags.

void FLEXIO_UART_ClearStatusFlags(*FLEXIO_UART_Type* *base, uint32_t mask)

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
  - kFLEXIO_UART_TxDataRegEmptyFlag
  - kFLEXIO_UART_RxEmptyFlag
  - kFLEXIO_UART_RxOverRunFlag

void FLEXIO_UART_EnableInterrupts(*FLEXIO_UART_Type* *base, uint32_t mask)

Enables the FlexIO UART interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Interrupt source.

void FLEXIO_UART_DisableInterrupts(*FLEXIO_UART_Type* *base, uint32_t mask)

Disables the FlexIO UART interrupt.

This function disables the FlexIO UART interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Interrupt source.

static inline uint32_t FLEXIO_UART_GetTxDataRegisterAddress(*FLEXIO_UART_Type* *base)

Gets the FlexIO UARt transmit data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART transmit data register address.

static inline uint32_t FLEXIO_UART_GetRxDataRegisterAddress(*FLEXIO_UART_Type* *base)

Gets the FlexIO UART receive data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART receive data register address.

static inline void FLEXIO_UART_EnableTxDMA(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART transmit DMA. This function enables/disables the FlexIO UART Tx DMA, which means asserting the kFLEXIO_UART_TxDataRegEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_EnableRxDMA(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART receive DMA. This function enables/disables the FlexIO UART Rx DMA, which means asserting kFLEXIO_UART_RxDataRegFullFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- enable – True to enable, false to disable.

static inline void FLEXIO_UART_Enable(*FLEXIO_UART_Type* *base, bool enable)

Enables/disables the FlexIO UART module operation.

Parameters

- base – Pointer to the FLEXIO_UART_Type.
- enable – True to enable, false does not have any effect.

static inline void FLEXIO_UART_WriteByte(*FLEXIO_UART_Type* *base, const uint8_t *buffer)

Writes one byte of data.

Note: This is a non-blocking API, which returns directly after the data is put into the data register. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The data bytes to send.

static inline void FLEXIO_UART_ReadByte(*FLEXIO_UART_Type* *base, uint8_t *buffer)

Reads one byte of data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- buffer – The buffer to store the received bytes.

status_t FLEXIO_UART_WriteBlocking(*FLEXIO_UART_Type* *base, const uint8_t *txData, size_t txSize)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- txData – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.

- kStatus_Success – Successfully wrote all data.

status_t FLEXIO_UART_ReadBlocking(*FLEXIO_UART_Type* *base, uint8_t *rxData, size_t rxSize)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- rxData – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t FLEXIO_UART_TransferCreateHandle(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_callback_t* callback, void *userData)

Initializes the UART handle.

This function initializes the FlexIO UART handle, which can be used for other FlexIO UART transactional APIs. Call this API once to get the initialized handle.

The UART driver supports the "background" receiving, which means that users can set up a RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn't call the FLEXIO_UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – to FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

void FLEXIO_UART_TransferStartRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, uint8_t *ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_ReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, only 31 bytes are used for saving data.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – Size of the ring buffer.

void FLEXIO_UART_TransferStopRingBuffer(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferSendNonBlocking(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_t* *xfer)

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in ISR, the FlexIO UART driver calls the callback function and passes the kStatus_FLEXIO_UART_TxIdle as status parameter.

Note: The kStatus_FLEXIO_UART_TxIdle is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – FlexIO UART transfer structure. See flexio_uart_transfer_t.

Return values

- kStatus_Success – Successfully starts the data transmission.
- kStatus_UART_TxBusy – Previous transmission still not finished, data not written to the TX register.

void FLEXIO_UART_TransferAbortSend(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. Get the remainBytes to find out how many bytes are still not sent out.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferGetSendCount(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, size_t *count)

Gets the number of bytes sent.

This function gets the number of bytes sent driven by interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

status_t FLEXIO_UART_TransferReceiveNonBlocking(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *flexio_uart_transfer_t* *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using the interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in ring buffer is not enough to read, the receive request is saved by the UART driver. When new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter kStatus_UART_RxIdle. For example, if the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer, the 5 bytes are copied to xfer->data. This function returns with the parameter receivedBytes set to 5. For the last 5 bytes, newly arrived data is saved from the xfer->data[5]. When 5 bytes are received, the UART driver notifies upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- xfer – UART transfer structure. See flexio_uart_transfer_t.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- kStatus_Success – Successfully queue the transfer into the transmit queue.
- kStatus_FLEXIO_UART_RxBusy – Previous receive request is not finished.

void FLEXIO_UART_TransferAbortReceive(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle)

Aborts the receive data which was using IRQ.

This function aborts the receive data which was using IRQ.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

status_t FLEXIO_UART_TransferGetReceiveCount(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, size_t *count)

Gets the number of bytes received.

This function gets the number of bytes received driven by interrupt.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- kStatus_NoTransferInProgress – transfer has finished or no transfer in progress.
- kStatus_Success – Successfully return the count.

void FLEXIO_UART_TransferHandleIRQ(void *uartType, void *uartHandle)

FlexIO UART IRQ handler function.

This function processes the FlexIO UART transmit and receives the IRQ request.

Parameters

- uartType – Pointer to the FLEXIO_UART_Type structure.
- uartHandle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

void FLEXIO_UART_FlushShifters(*FLEXIO_UART_Type* *base)

Flush tx/rx shifters.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

FSL_FLEXIO_UART_DRIVER_VERSION

FlexIO UART driver version.

Error codes for the UART driver.

Values:

enumerator kStatus_FLEXIO_UART_TxBusy

Transmitter is busy.

enumerator kStatus_FLEXIO_UART_RxBusy

Receiver is busy.

enumerator kStatus_FLEXIO_UART_TxIdle
UART transmitter is idle.

enumerator kStatus_FLEXIO_UART_RxIdle
UART receiver is idle.

enumerator kStatus_FLEXIO_UART_ERROR
ERROR happens on UART.

enumerator kStatus_FLEXIO_UART_RxRingBufferOverrun
UART RX software ring buffer overrun.

enumerator kStatus_FLEXIO_UART_RxHardwareOverrun
UART RX receiver overrun.

enumerator kStatus_FLEXIO_UART_Timeout
UART times out.

enumerator kStatus_FLEXIO_UART_BaudrateNotSupport
Baudrate is not supported in current clock source

enum _flexio_uart_bit_count_per_char
FlexIO UART bit count per char.

Values:

enumerator kFLEXIO_UART_7BitsPerChar
7-bit data characters

enumerator kFLEXIO_UART_8BitsPerChar
8-bit data characters

enumerator kFLEXIO_UART_9BitsPerChar
9-bit data characters

enum _flexio_uart_interrupt_enable
Define FlexIO UART interrupt mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_UART_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

enum _flexio_uart_status_flags
Define FlexIO UART status mask.

Values:

enumerator kFLEXIO_UART_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_UART_RxDataRegFullFlag
Receive buffer full flag.

enumerator kFLEXIO_UART_RxOverRunFlag
Receive buffer over run flag.

typedef enum *_flexio_uart_bit_count_per_char* flexio_uart_bit_count_per_char_t
FlexIO UART bit count per char.

typedef struct *_flexio_uart_type* FLEXIO_UART_Type
Define FlexIO UART access structure typedef.

typedef struct *_flexio_uart_config* flexio_uart_config_t
Define FlexIO UART user configuration structure.

typedef struct *_flexio_uart_transfer* flexio_uart_transfer_t
Define FlexIO UART transfer structure.

typedef struct *_flexio_uart_handle* flexio_uart_handle_t

typedef void (*flexio_uart_transfer_callback_t)(*FLEXIO_UART_Type* *base, *flexio_uart_handle_t* *handle, *status_t* status, void *userData)
FlexIO UART transfer callback function.

UART_RETRY_TIMES
Retry times for waiting flag.

struct _flexio_uart_type
#include <fsl_flexio_uart.h> Define FlexIO UART access structure typedef.

Public Members

FLEXIO_Type *flexioBase
FlexIO base pointer.

uint8_t TxPinIndex
Pin select for UART_Tx.

uint8_t RxPinIndex
Pin select for UART_Rx.

uint8_t shifterIndex[2]
Shifter index used in FlexIO UART.

uint8_t timerIndex[2]
Timer index used in FlexIO UART.

struct _flexio_uart_config
#include <fsl_flexio_uart.h> Define FlexIO UART user configuration structure.

Public Members

bool enableUart
Enable/disable FlexIO UART TX & RX.

bool enableInDoze
Enable/disable FlexIO operation in doze mode

bool enableInDebug
Enable/disable FlexIO operation in debug mode

bool enableFastAccess
Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps
Baud rate in Bps.

flexio_uart_bit_count_per_char_t bitCountPerChar
number of bits, 7/8/9 -bit

struct __flexio_uart_transfer
#include <fsl_flexio_uart.h> Define FlexIO UART transfer structure.

Public Members

size_t dataSize
Transfer size

struct __flexio_uart_handle
#include <fsl_flexio_uart.h> Define FLEXIO UART handle structure.

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

volatile size_t txDataSize
Size of the remaining data to send.

uint8_t *volatile rxData
Address of remaining data to receive.

volatile size_t rxDataSize
Size of the remaining data to receive.

size_t txDataSizeAll
Total bytes to be sent.

size_t rxDataSizeAll
Total bytes to be received.

uint8_t *rxRingBuffer
Start address of the receiver ring buffer.

size_t rxRingBufferSize
Size of the ring buffer.

volatile uint16_t rxRingBufferHead
Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail
Index for the user to get data from the ring buffer.

flexio_uart_transfer_callback_t callback
Callback function.

void *userData
UART callback function parameter.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state

union ___unnamed145___

Public Members

uint8_t *data
The buffer of data to be transfer.

uint8_t *rxData
The buffer to receive data.

const uint8_t *txData
The buffer of data to be sent.

2.24 FLEXSPI: Flexible Serial Peripheral Interface Driver

uint32_t FLEXSPI_GetInstance(FLEXSPI_Type *base)
Get the instance number for FLEXSPI.

Parameters

- base – FLEXSPI base pointer.

status_t FLEXSPI_CheckAndClearError(FLEXSPI_Type *base, uint32_t status)
Check and clear IP command execution errors.

Parameters

- base – FLEXSPI base pointer.
- status – interrupt status.

void FLEXSPI_Init(FLEXSPI_Type *base, const *flexspi_config_t* *config)
Initializes the FLEXSPI module and internal state.

This function enables the clock for FLEXSPI and also configures the FLEXSPI with the input configure parameters. Users should call this function before any FLEXSPI operations.

Parameters

- base – FLEXSPI peripheral base address.
- config – FLEXSPI configure structure.

void FLEXSPI_GetDefaultConfig(*flexspi_config_t* *config)
Gets default settings for FLEXSPI.

Parameters

- config – FLEXSPI configuration structure.

void FLEXSPI_Deinit(FLEXSPI_Type *base)
Deinitializes the FLEXSPI module.

Clears the FLEXSPI state and FLEXSPI module registers.

Parameters

- base – FLEXSPI peripheral base address.

void FLEXSPI_UpdateDllValue(FLEXSPI_Type *base, *flexspi_device_config_t* *config,
flexspi_port_t port)
Update FLEXSPI DLL value depending on currently flexspi root clock.

Parameters

- base – FLEXSPI peripheral base address.
- config – Flash configuration parameters.

- port – FLEXSPI Operation port.

void FLEXSPI_SetFlashConfig(FLEXSPI_Type *base, *flexspi_device_config_t* *config, *flexspi_port_t* port)

Configures the connected device parameter.

This function configures the connected device relevant parameters, such as the size, command, and so on. The flash configuration value cannot have a default value. The user needs to configure it according to the connected device.

Parameters

- base – FLEXSPI peripheral base address.
- config – Flash configuration parameters.
- port – FLEXSPI Operation port.

void FLEXSPI_SoftwareReset(FLEXSPI_Type *base)

Software reset for the FLEXSPI logic.

This function sets the software reset flags for both AHB and buffer domain and resets both AHB buffer and also IP FIFOs.

Parameters

- base – FLEXSPI peripheral base address.

static inline void FLEXSPI_Enable(FLEXSPI_Type *base, bool enable)

Enables or disables the FLEXSPI module.

Parameters

- base – FLEXSPI peripheral base address.
- enable – True means enable FLEXSPI, false means disable.

void FLEXSPI_UpdateAhbBuffersSettings(FLEXSPI_Type *base, *flexspi_ahbBuffers_ctrl_t* *ptrAhbBufferCtrl)

Update all AHB buffers' settings, including buffer size, master ID.

Parameters

- base – FLEXSPI peripheral base address.
- ptrAhbBufferCtrl – Pointer to structure flexspi_ahbBuffers_ctrl_t which store all AHB buffers' settings.

static inline void FLEXSPI_EnableInterrupts(FLEXSPI_Type *base, uint32_t mask)

Enables the FLEXSPI interrupts.

Parameters

- base – FLEXSPI peripheral base address.
- mask – FLEXSPI interrupt source.

static inline void FLEXSPI_DisableInterrupts(FLEXSPI_Type *base, uint32_t mask)

Disable the FLEXSPI interrupts.

Parameters

- base – FLEXSPI peripheral base address.
- mask – FLEXSPI interrupt source.

static inline void FLEXSPI_EnableTxDMA(FLEXSPI_Type *base, bool enable)

Enables or disables FLEXSPI IP Tx FIFO DMA requests.

Parameters

- base – FLEXSPI peripheral base address.
- enable – Enable flag for transmit DMA request. Pass true for enable, false for disable.

static inline void FLEXSPI_EnableRxDMA(FLEXSPI_Type *base, bool enable)

Enables or disables FLEXSPI IP Rx FIFO DMA requests.

Parameters

- base – FLEXSPI peripheral base address.
- enable – Enable flag for receive DMA request. Pass true for enable, false for disable.

static inline uint32_t FLEXSPI_GetTxFifoAddress(FLEXSPI_Type *base)

Gets FLEXSPI IP tx fifo address for DMA transfer.

Parameters

- base – FLEXSPI peripheral base address.

Return values

The – tx fifo address.

static inline uint32_t FLEXSPI_GetRxFifoAddress(FLEXSPI_Type *base)

Gets FLEXSPI IP rx fifo address for DMA transfer.

Parameters

- base – FLEXSPI peripheral base address.

Return values

The – rx fifo address.

static inline void FLEXSPI_ResetFifos(FLEXSPI_Type *base, bool txFifo, bool rxFifo)

Clears the FLEXSPI IP FIFO logic.

Parameters

- base – FLEXSPI peripheral base address.
- txFifo – Pass true to reset TX FIFO.
- rxFifo – Pass true to reset RX FIFO.

static inline void FLEXSPI_GetFifoCounts(FLEXSPI_Type *base, size_t *txCount, size_t *rxCount)

Gets the valid data entries in the FLEXSPI FIFOs.

Parameters

- base – FLEXSPI peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

static inline uint32_t FLEXSPI_GetInterruptStatusFlags(FLEXSPI_Type *base)

Get the FLEXSPI interrupt status flags.

Parameters

- base – FLEXSPI peripheral base address.

Return values

interrupt – status flag, use status flag to AND flexspi_flags_t could get the related status.

static inline void FLEXSPI_ClearInterruptStatusFlags(FLEXSPI_Type *base, uint32_t mask)

Get the FLEXSPI interrupt status flags.

Parameters

- base – FLEXSPI peripheral base address.
- mask – FLEXSPI interrupt source.

static inline *flexspi_arb_command_source_t* FLEXSPI_GetArbitratorCommandSource(FLEXSPI_Type *base)

Gets the trigger source of current command sequence granted by arbitrator.

Parameters

- base – FLEXSPI peripheral base address.

Return values

trigger – source of current command sequence.

static inline *flexspi_ip_error_code_t* FLEXSPI_GetIPCommandErrorCode(FLEXSPI_Type *base, uint8_t *index)

Gets the error code when IP command error detected.

Parameters

- base – FLEXSPI peripheral base address.
- index – Pointer to a uint8_t type variable to receive the sequence index when error detected.

Return values

error – code when IP command error detected.

static inline *flexspi_ahb_error_code_t* FLEXSPI_GetAHBCommandErrorCode(FLEXSPI_Type *base, uint8_t *index)

Gets the error code when AHB command error detected.

Parameters

- base – FLEXSPI peripheral base address.
- index – Pointer to a uint8_t type variable to receive the sequence index when error detected.

Return values

error – code when AHB command error detected.

static inline bool FLEXSPI_GetBusIdleStatus(FLEXSPI_Type *base)

Returns whether the bus is idle.

Parameters

- base – FLEXSPI peripheral base address.

Return values

- true – Bus is idle.
- false – Bus is busy.

void FLEXSPI_UpdateRxSampleClock(FLEXSPI_Type *base, *flexspi_read_sample_clock_t* clockSource)

Update read sample clock source.

Parameters

- base – FLEXSPI peripheral base address.

- clockSource – clockSource of type flexspi_read_sample_clock_t

void FLEXSPI_UpdateLUT(FLEXSPI_Type *base, uint32_t index, const uint32_t *cmd, uint32_t count)

Updates the LUT table.

Parameters

- base – FLEXSPI peripheral base address.
- index – From which index start to update. It could be any index of the LUT table, which also allows user to update command content inside a command. Each command consists of up to 8 instructions and occupy 4*32-bit memory.
- cmd – Command sequence array.
- count – Number of sequences.

static inline void FLEXSPI_WriteData(FLEXSPI_Type *base, uint32_t data, uint8_t fifoIndex)

Writes data into FIFO.

Parameters

- base – FLEXSPI peripheral base address
- data – The data bytes to send
- fifoIndex – Destination fifo index.

static inline uint32_t FLEXSPI_ReadData(FLEXSPI_Type *base, uint8_t fifoIndex)

Receives data from data FIFO.

Parameters

- base – FLEXSPI peripheral base address
- fifoIndex – Source fifo index.

Returns

The data in the FIFO.

status_t FLEXSPI_WriteBlocking(FLEXSPI_Type *base, uint8_t *buffer, size_t size)

Sends a buffer of data bytes using blocking method.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – FLEXSPI peripheral base address
- buffer – The data bytes to send
- size – The number of data bytes to send

Return values

- kStatus_Success – write success without error
- kStatus_FLEXSPI_SequenceExecutionTimeout – sequence execution timeout
- kStatus_FLEXSPI_IpCommandSequenceError – IP command sequence error detected
- kStatus_FLEXSPI_IpCommandGrantTimeout – IP command grant timeout detected

status_t FLEXSPI_ReadBlocking(FLEXSPI_Type *base, uint8_t *buffer, size_t size)

Receives a buffer of data bytes using a blocking method.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – FLEXSPI peripheral base address
- buffer – The data bytes to send
- size – The number of data bytes to receive

Return values

- kStatus_Success – read success without error
- kStatus_FLEXSPI_SequenceExecutionTimeout – sequence execution timeout
- kStatus_FLEXSPI_IpCommandSequenceError – IP command sequencen error detected
- kStatus_FLEXSPI_IpCommandGrantTimeout – IP command grant timeout detected

status_t FLEXSPI_TransferBlocking(FLEXSPI_Type *base, *flexspi_transfer_t* *xfer)

Execute command to transfer a buffer data bytes using a blocking method.

Parameters

- base – FLEXSPI peripheral base address
- xfer – pointer to the transfer structure.

Return values

- kStatus_Success – command transfer success without error
- kStatus_FLEXSPI_SequenceExecutionTimeout – sequence execution timeout
- kStatus_FLEXSPI_IpCommandSequenceError – IP command sequence error detected
- kStatus_FLEXSPI_IpCommandGrantTimeout – IP command grant timeout detected

void FLEXSPI_TransferCreateHandle(FLEXSPI_Type *base, *flexspi_handle_t* *handle, *flexspi_transfer_callback_t* callback, void *userData)

Initializes the FLEXSPI handle which is used in transactional functions.

Parameters

- base – FLEXSPI peripheral base address.
- handle – pointer to flexspi_handle_t structure to store the transfer state.
- callback – pointer to user callback function.
- userData – user parameter passed to the callback function.

status_t FLEXSPI_TransferNonBlocking(FLEXSPI_Type *base, *flexspi_handle_t* *handle, *flexspi_transfer_t* *xfer)

Performs a interrupt non-blocking transfer on the FLEXSPI bus.

Note: Calling the API returns immediately after transfer initiates. The user needs to call FLEXSPI_GetTransferCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXSPI_Busy, the transfer is finished. For FLEXSPI_Read, the dataSize should be multiple of rx watermark level, or FLEXSPI could not read data properly.

Parameters

- base – FLEXSPI peripheral base address.
- handle – pointer to flexspi_handle_t structure which stores the transfer state.
- xfer – pointer to flexspi_transfer_t structure.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_FLEXSPI_Busy – Previous transmission still not finished.

status_t FLEXSPI_TransferGetCount(FLEXSPI_Type *base, *flexspi_handle_t* *handle, size_t *count)

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – FLEXSPI peripheral base address.
- handle – pointer to flexspi_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

void FLEXSPI_TransferAbort(FLEXSPI_Type *base, *flexspi_handle_t* *handle)

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – FLEXSPI peripheral base address.
- handle – pointer to flexspi_handle_t structure which stores the transfer state

void FLEXSPI_TransferHandleIRQ(FLEXSPI_Type *base, *flexspi_handle_t* *handle)

Master interrupt handler.

Parameters

- base – FLEXSPI peripheral base address.
- handle – pointer to flexspi_handle_t structure.

FSL_FLEXSPI_DRIVER_VERSION

FLEXSPI driver version.

Status structure of FLEXSPI.

Values:

enumerator kStatus_FLEXSPI_Busy
FLEXSPI is busy

enumerator kStatus_FLEXSPI_SequenceExecutionTimeout
Sequence execution timeout error occurred during FLEXSPI transfer.

enumerator kStatus_FLEXSPI_IpCommandSequenceError
IP command Sequence execution timeout error occurred during FLEXSPI transfer.

enumerator kStatus_FLEXSPI_IpCommandGrantTimeout
IP command grant timeout error occurred during FLEXSPI transfer.

CMD definition of FLEXSPI, use to form LUT instruction, _flexspi_command.

Values:

enumerator kFLEXSPI_Command_STOP
Stop execution, deassert CS.

enumerator kFLEXSPI_Command_SDR
Transmit Command code to Flash, using SDR mode.

enumerator kFLEXSPI_Command_RADDR_SDR
Transmit Row Address to Flash, using SDR mode.

enumerator kFLEXSPI_Command_CADDR_SDR
Transmit Column Address to Flash, using SDR mode.

enumerator kFLEXSPI_Command_MODE1_SDR
Transmit 1-bit Mode bits to Flash, using SDR mode.

enumerator kFLEXSPI_Command_MODE2_SDR
Transmit 2-bit Mode bits to Flash, using SDR mode.

enumerator kFLEXSPI_Command_MODE4_SDR
Transmit 4-bit Mode bits to Flash, using SDR mode.

enumerator kFLEXSPI_Command_MODE8_SDR
Transmit 8-bit Mode bits to Flash, using SDR mode.

enumerator kFLEXSPI_Command_WRITE_SDR
Transmit Programming Data to Flash, using SDR mode.

enumerator kFLEXSPI_Command_READ_SDR
Receive Read Data from Flash, using SDR mode.

enumerator kFLEXSPI_Command_LEARN_SDR
Receive Read Data or Preamble bit from Flash, SDR mode.

enumerator kFLEXSPI_Command_DATSZ_SDR
Transmit Read/Program Data size (byte) to Flash, SDR mode.

enumerator kFLEXSPI_Command_DUMMY_SDR
Leave data lines undriven by FlexSPI controller.

enumerator kFLEXSPI_Command_DUMMY_RWDS_SDR
Leave data lines undriven by FlexSPI controller, dummy cycles decided by RWDS.

enumerator kFLEXSPI_Command_DDR
Transmit Command code to Flash, using DDR mode.

enumerator kFLEXSPI_Command_RADDR_DDR
Transmit Row Address to Flash, using DDR mode.

enumerator kFLEXSPI_Command_CADDR_DDR
Transmit Column Address to Flash, using DDR mode.

enumerator kFLEXSPI_Command_MODE1_DDR
Transmit 1-bit Mode bits to Flash, using DDR mode.

enumerator kFLEXSPI_Command_MODE2_DDR
Transmit 2-bit Mode bits to Flash, using DDR mode.

enumerator kFLEXSPI_Command_MODE4_DDR
Transmit 4-bit Mode bits to Flash, using DDR mode.

enumerator kFLEXSPI_Command_MODE8_DDR
Transmit 8-bit Mode bits to Flash, using DDR mode.

enumerator kFLEXSPI_Command_WRITE_DDR
Transmit Programming Data to Flash, using DDR mode.

enumerator kFLEXSPI_Command_READ_DDR
Receive Read Data from Flash, using DDR mode.

enumerator kFLEXSPI_Command_LEARN_DDR
Receive Read Data or Preamble bit from Flash, DDR mode.

enumerator kFLEXSPI_Command_DATSZ_DDR
Transmit Read/Program Data size (byte) to Flash, DDR mode.

enumerator kFLEXSPI_Command_DUMMY_DDR
Leave data lines undriven by FlexSPI controller.

enumerator kFLEXSPI_Command_DUMMY_RWDS_DDR
Leave data lines undriven by FlexSPI controller, dummy cycles decided by RWDS.

enumerator kFLEXSPI_Command_JUMP_ON_CS
Stop execution, deassert CS and save operand[7:0] as the instruction start pointer for next sequence

enum _flexspi_pad
pad definition of FLEXSPI, use to form LUT instruction.

Values:

enumerator kFLEXSPI_1PAD
Transmit command/address and transmit/receive data only through DATA0/DATA1.

enumerator kFLEXSPI_2PAD
Transmit command/address and transmit/receive data only through DATA[1:0].

enumerator kFLEXSPI_4PAD
Transmit command/address and transmit/receive data only through DATA[3:0].

enumerator kFLEXSPI_8PAD
Transmit command/address and transmit/receive data only through DATA[7:0].

enum _flexspi_flags
FLEXSPI interrupt status flags.

Values:

enumerator kFLEXSPI_SequenceExecutionTimeoutFlag
Sequence execution timeout.

enumerator kFLEXSPI_AhbBusErrorFlag
AHB Bus error flag.

enumerator kFLEXSPI_SckStoppedBecauseTxEmptyFlag
SCK is stopped during command sequence because Async TX FIFO empty.

enumerator kFLEXSPI_SckStoppedBecauseRxFullFlag
SCK is stopped during command sequence because Async RX FIFO full.

enumerator kFLEXSPI_IpTxFifoWatermarkEmptyFlag
IP TX FIFO WaterMark empty.

enumerator kFLEXSPI_IpRxFifoWatermarkAvailableFlag
IP RX FIFO WaterMark available.

enumerator kFLEXSPI_AhbCommandSequenceErrorFlag
AHB triggered Command Sequences Error.

enumerator kFLEXSPI_IpCommandSequenceErrorFlag
IP triggered Command Sequences Error.

enumerator kFLEXSPI_AhbCommandGrantTimeoutFlag
AHB triggered Command Sequences Grant Timeout.

enumerator kFLEXSPI_IpCommandGrantTimeoutFlag
IP triggered Command Sequences Grant Timeout.

enumerator kFLEXSPI_IpCommandExecutionDoneFlag
IP triggered Command Sequences Execution finished.

enumerator kFLEXSPI_AllInterruptFlags
All flags.

enum _flexspi_read_sample_clock
FLEXSPI sample clock source selection for Flash Reading.

Values:

enumerator kFLEXSPI_ReadSampleClkLoopbackInternally
Dummy Read strobe generated by FlexSPI Controller and loopback internally.

enumerator kFLEXSPI_ReadSampleClkLoopbackFromDqsPad
Dummy Read strobe generated by FlexSPI Controller and loopback from DQS pad.

enumerator kFLEXSPI_ReadSampleClkLoopbackFromSckPad
SCK output clock and loopback from SCK pad.

enumerator kFLEXSPI_ReadSampleClkExternalInputFromDqsPad
Flash provided Read strobe and input from DQS pad.

enum _flexspi_cs_interval_cycle_unit
FLEXSPI interval unit for flash device select.

Values:

enumerator kFLEXSPI_CsIntervalUnit1SckCycle
Chip selection interval: CSINTERVAL * 1 serial clock cycle.

enumerator kFLEXSPI_CsIntervalUnit256SckCycle
Chip selection interval: CSINTERVAL * 256 serial clock cycle.

enum _flexspi_ahb_write_wait_unit

FLEXSPI AHB wait interval unit for writing.

Values:

enumerator kFLEXSPI_AhbWriteWaitUnit2AhbCycle
AWRWAIT unit is 2 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit8AhbCycle
AWRWAIT unit is 8 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit32AhbCycle
AWRWAIT unit is 32 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit128AhbCycle
AWRWAIT unit is 128 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit512AhbCycle
AWRWAIT unit is 512 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit2048AhbCycle
AWRWAIT unit is 2048 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit8192AhbCycle
AWRWAIT unit is 8192 ahb clock cycle.

enumerator kFLEXSPI_AhbWriteWaitUnit32768AhbCycle
AWRWAIT unit is 32768 ahb clock cycle.

enumerator _flexspi_ip_error_code

Error Code when IP command Error detected.

Values:

enumerator kFLEXSPI_IpCmdErrorNoError
No error.

enumerator kFLEXSPI_IpCmdErrorJumpOnCsInIpCmd
IP command with JMP_ON_CS instruction used.

enumerator kFLEXSPI_IpCmdErrorUnknownOpCode
Unknown instruction opcode in the sequence.

enumerator kFLEXSPI_IpCmdErrorSdrDummyInDdrSequence
Instruction DUMMY_SDR/DUMMY_RWDS_SDR used in DDR sequence.

enumerator kFLEXSPI_IpCmdErrorDdrDummyInSdrSequence
Instruction DUMMY_DDR/DUMMY_RWDS_DDR used in SDR sequence.

enumerator kFLEXSPI_IpCmdErrorInvalidAddress
Flash access start address exceed the whole flash address range (A1/A2/B1/B2).

enumerator kFLEXSPI_IpCmdErrorSequenceExecutionTimeout
Sequence execution timeout.

enumerator kFLEXSPI_IpCmdErrorFlashBoundaryAcrosss
Flash boundary crossed.

enum _flexspi_ahb_error_code

Error Code when AHB command Error detected.

Values:

enumerator kFLEXSPI_AhbCmdErrorNoError
No error.

enumerator kFLEXSPI_AhbCmdErrorJumpOnCsInWriteCmd
AHB Write command with JMP_ON_CS instruction used in the sequence.

enumerator kFLEXSPI_AhbCmdErrorUnknownOpCode
Unknown instruction opcode in the sequence.

enumerator kFLEXSPI_AhbCmdErrorSdrDummyInDdrSequence
Instruction DUMMY_SDR/DUMMY_RWDS_SDR used in DDR sequence.

enumerator kFLEXSPI_AhbCmdErrorDdrDummyInSdrSequence
Instruction DUMMY_DDR/DUMMY_RWDS_DDR used in SDR sequence.

enumerator kFLEXSPI_AhbCmdSequenceExecutionTimeout
Sequence execution timeout.

enum _flexspi_port
FLEXSPI operation port select.

Values:

enumerator kFLEXSPI_PortA1
Access flash on A1 port.

enumerator kFLEXSPI_PortA2
Access flash on A2 port.

enumerator kFLEXSPI_PortCount

enum _flexspi_arb_command_source
Trigger source of current command sequence granted by arbitrator.

Values:

enumerator kFLEXSPI_AhbReadCommand

enumerator kFLEXSPI_AhbWriteCommand

enumerator kFLEXSPI_IpCommand

enumerator kFLEXSPI_SuspendedCommand

enum _flexspi_command_type
Command type.

Values:

enumerator kFLEXSPI_Command
FlexSPI operation: Only command, both TX and Rx buffer are ignored.

enumerator kFLEXSPI_Config
FlexSPI operation: Configure device mode, the TX fifo size is fixed in LUT.

enumerator kFLEXSPI_Read

enumerator kFLEXSPI_Write

typedef enum *_flexspi_pad* flexspi_pad_t
pad definition of FLEXSPI, use to form LUT instruction.

typedef enum *_flexspi_flags* flexspi_flags_t
FLEXSPI interrupt status flags.

typedef enum *_flexspi_read_sample_clock* flexspi_read_sample_clock_t
FLEXSPI sample clock source selection for Flash Reading.

typedef enum *_flexspi_cs_interval_cycle_unit* flexspi_cs_interval_cycle_unit_t
FLEXSPI interval unit for flash device select.

typedef enum *_flexspi_ahb_write_wait_unit* flexspi_ahb_write_wait_unit_t
FLEXSPI AHB wait interval unit for writing.

typedef enum *_flexspi_ip_error_code* flexspi_ip_error_code_t
Error Code when IP command Error detected.

typedef enum *_flexspi_ahb_error_code* flexspi_ahb_error_code_t
Error Code when AHB command Error detected.

typedef enum *_flexspi_port* flexspi_port_t
FLEXSPI operation port select.

typedef enum *_flexspi_arb_command_source* flexspi_arb_command_source_t
Trigger source of current command sequence granted by arbitrator.

typedef enum *_flexspi_command_type* flexspi_command_type_t
Command type.

typedef struct *_flexspi_ahbBuffer_config* flexspi_ahbBuffer_config_t

typedef struct *_flexspi_ahbBuffers_ctrl* flexspi_ahbBuffers_ctrl_t
Structure to control all AHB buffers.

typedef struct *_flexspi_config* flexspi_config_t
FLEXSPI configuration structure.

typedef struct *_flexspi_device_config* flexspi_device_config_t
External device configuration items.

typedef struct *_flexspi_transfer* flexspi_transfer_t
Transfer structure for FLEXSPI.

typedef struct *_flexspi_handle* flexspi_handle_t

typedef void (*flexspi_transfer_callback_t)(FLEXSPI_Type *base, *flexspi_handle_t* *handle, *status_t* status, void *userData)
FLEXSPI transfer callback function.

typedef struct *_flexspi_addr_map_config* flexspi_addr_map_config_t
Address mapping configuration structure.

FSL_FEATURE_FLEXSPI_AHB_BUFFER_COUNT

FLEXSPI_LUT_SEQ(cmd0, pad0, op0, cmd1, pad1, op1)
Formula to form FLEXSPI instructions in LUT table.

struct flexspi_ahbBuffer_config
#include <fsl_flexspi.h>

Public Members

uint8_t priority
This priority for AHB Master Read which this AHB RX Buffer is assigned.

uint8_t masterIndex
AHB Master ID the AHB RX Buffer is assigned.

uint16_t bufferSize
AHB buffer size in byte.

bool enablePrefetch
AHB Read Prefetch Enable for current AHB RX Buffer corresponding Master, allows prefetch disable/enable separately for each master.

struct _flexspi_ahbBuffers_ctrl
#include <fsl_flexspi.h> Structure to control all AHB buffers.

Public Members

flexspi_ahbBuffer_config_t buffer[FSL_FEATURE_FLEXSPI_AHB_BUFFER_COUNTn(0)]
Configurations of all AHB buffers.

struct _flexspi_config
#include <fsl_flexspi.h> FLEXSPI configuration structure.

Public Members

uint8_t clockDiv
FLEXSPI serial root clock divider.

flexspi_read_sample_clock_t rxSampleClock
Sample Clock source selection for Flash Reading.

bool enableSckFreeRunning
Enable/disable SCK output free-running.

bool enableDoze
Enable/disable doze mode support.

bool enableHalfSpeedAccess
Enable/disable divide by 2 of the clock for half speed commands.

flexspi_read_sample_clock_t rxSampleClockPortB
Sample Clock source_b selection for Flash Reading.

bool rxSampleClockDiff
Sample Clock source or source_b selection for Flash Reading.

bool enableSameConfigForAll
Enable/disable same configuration for all connected devices when enabled, same configuration in FLASHA1CRx is applied to all.

uint16_t seqTimeoutCycle
Timeout wait cycle for command sequence execution, timeout after ahbGrantTimeoutCyle*1024 serial root clock cycles.

uint8_t ipGrantTimeoutCycle
Timeout wait cycle for IP command grant, timeout after ipGrantTimeoutCycle*1024 AHB clock cycles.

uint8_t txWatermark
FLEXSPI IP transmit watermark value.

uint8_t rxWatermark
FLEXSPI receive watermark value.

struct _flexspi_device_config
#include <fsl_flexspi.h> External device configuration items.

Public Members

uint32_t flexspiRootClk
: FLEXSPI serial root clock.

bool isSck2Enabled
: FLEXSPI use SCK2.

uint32_t flashSize
: Flash size in KByte.

bool addressShift
: Address shift.

flexspi_cs_interval_cycle_unit_t CSIntervalUnit
: CS interval unit, 1 or 256 cycle.

uint16_t CSInterval
: CS line assert interval, multiply CS interval unit to get the CS line assert interval cycles.

uint8_t CSHoldTime
: CS line hold time.

uint8_t CSSetupTime
: CS line setup time.

uint8_t dataValidTime
: Data valid time for external device.

uint8_t columnspace
: Column space size.

bool enableWordAddress
: If enable word address.

uint8_t AWRSeqIndex
: Sequence ID for AHB write command.

uint8_t AWRSeqNumber
: Sequence number for AHB write command.

uint8_t ARDSeqIndex
: Sequence ID for AHB read command.

uint8_t ARDSeqNumber
: Sequence number for AHB read command.

flexspi_ahb_write_wait_unit_t AHBWriteWaitUnit
: AHB write wait unit.

uint16_t AHBWriteWaitInterval
: AHB write wait interval, multiply AHB write interval unit to get the AHB write wait cycles.

bool enableWriteMask
: Enable/Disable FLEXSPI drive DQS pin as write mask when writing to external device.

bool isFroClockSource
: Is FRO clock source or not.

struct __flexspi__transfer
: *#include <fsl_flexspi.h>* Transfer structure for FLEXSPI.

Public Members

uint32_t deviceAddress
: Operation device address.

flexspi_port_t port
: Operation port.

flexspi_command_type_t cmdType
: Execution command type.

uint8_t seqIndex
: Sequence ID for command.

uint8_t SeqNumber
: Sequence number for command.

uint32_t *data
: Data buffer.

size_t dataSize
: Data size in bytes.

struct __flexspi_handle
: *#include <fsl_flexspi.h>* Transfer handle structure for FLEXSPI.

Public Members

uint32_t state
: Internal state for FLEXSPI transfer

uint8_t *data
: Data buffer.

size_t dataSize
: Remaining Data size in bytes.

size_t transferTotalSize
: Total Data size in bytes.

flexspi_transfer_callback_t completionCallback
: Callback for users while transfer finish or error occurred

void *userData
: FLEXSPI callback function parameter.

struct __flexspi_addr_map_config
: *#include <fsl_flexspi.h>* Address mapping configuration structure.

Public Members

uint32_t addrStart
: Remapping start address.

uint32_t addrEnd
: Remapping end address.

uint32_t addrOffset
: Address offset.

bool remapEnable

Enable address remapping.

struct ahbConfig

Public Members

uint8_t ahbGrantTimeoutCycle

Timeout wait cycle for AHB command grant, timeout after ahbGrantTimeoutCyle*1024 AHB clock cycles.

uint16_t ahbBusTimeoutCycle

Timeout wait cycle for AHB read/write access, timeout after ahbBusTimeoutCycle*1024 AHB clock cycles.

uint8_t resumeWaitCycle

Wait cycle for idle state before suspended command sequence resume, timeout after ahbBusTimeoutCycle AHB clock cycles.

bool disableAhbReadResume

True: Suspended AHB read prefetch does not resume once aborted; **False:** Suspended AHB read prefetch resumes when AHB is IDLE.

flexspi_ahbBuffer_config_t buffer[FSL_FEATURE_FLEXSPI_AHB_BUFFER_COUNTn(0)]

AHB buffer size.

bool enableClearAHBBufferOpt

Enable/disable automatically clean AHB RX Buffer and TX Buffer when FLEXSPI returns STOP mode ACK.

bool enableReadAddressOpt

Enable/disable remove AHB read burst start address alignment limitation. when enable, there is no AHB read burst start address alignment limitation.

bool enableAHBPrefetch

Enable/disable AHB read prefetch feature, when enabled, FLEXSPI will fetch more data than current AHB burst.

bool enableAHBBufferable

Enable/disable AHB bufferable write access support, when enabled, FLEXSPI return before waiting for command execution finished.

bool enableAHBCachable

Enable AHB bus cachable read access support.

2.25 FLEXSPI eDMA Driver

void FLEXSPI_TransferCreateHandleEDMA(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle, *flexspi_edma_callback_t* callback, void *userData, *edma_handle_t* *txDmaHandle, *edma_handle_t* *rxDmaHandle)

Initializes the FLEXSPI handle for transfer which is used in transactional functions and set the callback.

Parameters

- base – FLEXSPI peripheral base address
- handle – Pointer to flexspi_edma_handle_t structure

- callback – FLEXSPI callback, NULL means no callback.
- userData – User callback function data.
- txDmaHandle – User requested DMA handle for TX DMA transfer.
- rxDmaHandle – User requested DMA handle for RX DMA transfer.

void FLEXSPI_TransferUpdateSizeEDMA(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle, *flexspi_edma_transfer_nsize_t* nsize)

Update FLEXSPI EDMA transfer source data transfer size(SSIZE) and destination data transfer size(DSIZE).

See also:

flexspi_edma_transfer_nsize_t .

Parameters

- base – FLEXSPI peripheral base address
- handle – Pointer to flexspi_edma_handle_t structure
- nsize – FLEXSPI DMA transfer data transfer size(SSIZE/DSIZE), by default the size is kFLEXPSI_EDMAnSize1Bytes(one byte).

status_t FLEXSPI_TransferEDMA(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle, *flexspi_transfer_t* *xfer)

Transfers FLEXSPI data using an eDMA non-blocking method.

This function writes/receives data to/from the FLEXSPI transmit/receive FIFO. This function is non-blocking.

Parameters

- base – FLEXSPI peripheral base address.
- handle – Pointer to flexspi_edma_handle_t structure
- xfer – FLEXSPI transfer structure.

Return values

- kStatus_FLEXSPI_Busy – FLEXSPI is busy transfer.
- kStatus_InvalidArgument – The watermark configuration is invalid, the watermark should be power of 2 to do successfully EDMA transfer.
- kStatus_Success – FLEXSPI successfully start edma transfer.

void FLEXSPI_TransferAbortEDMA(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle)

Aborts the transfer data using eDMA.

This function aborts the transfer data using eDMA.

Parameters

- base – FLEXSPI peripheral base address.
- handle – Pointer to flexspi_edma_handle_t structure

status_t FLEXSPI_TransferGetTransferCountEDMA(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle, size_t *count)

Gets the transferred counts of transfer.

Parameters

- base – FLEXSPI peripheral base address.

- handle – Pointer to flexspi_edma_handle_t structure.
- count – Bytes transfer.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

FSL_FLEXSPI_EDMA_DRIVER_VERSION

FLEXSPI EDMA driver.

enum _flexspi_edma_ntransfer_size

eDMA transfer configuration

Values:

enumerator kFLEXPSI_EDMAnSize1Bytes

Source/Destination data transfer size is 1 byte every time

enumerator kFLEXPSI_EDMAnSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kFLEXPSI_EDMAnSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kFLEXPSI_EDMAnSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kFLEXPSI_EDMAnSize32Bytes

Source/Destination data transfer size is 32 bytes every time

typedef struct *_flexspi_edma_handle* flexspi_edma_handle_t

typedef void (*flexspi_edma_callback_t)(FLEXSPI_Type *base, *flexspi_edma_handle_t* *handle, *status_t* status, void *userData)

FLEXSPI eDMA transfer callback function for finish and error.

typedef enum *_flexspi_edma_ntransfer_size* flexspi_edma_transfer_nsize_t

eDMA transfer configuration

struct _flexspi_edma_handle

#include <fsl_flexspi_edma.h> FLEXSPI DMA transfer handle, users should not touch the content of the handle.

Public Members

edma_handle_t *txDmaHandle

eDMA handler for FLEXSPI Tx.

edma_handle_t *rxDmaHandle

eDMA handler for FLEXSPI Rx.

size_t transferSize

Bytes need to transfer.

flexspi_edma_transfer_nsize_t nsize

eDMA SSIZE/DSIZE in each transfer.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint8_t count
: The transfer data count in a DMA request.

uint32_t state
: Internal state for FLEXSPI eDMA transfer.

flexspi_edma_callback_t completionCallback
: A callback function called after the eDMA transfer is finished.

void *userData
: User callback parameter

2.26 I3C: I3C Driver

FSL_I3C_DRIVER_VERSION
: I3C driver version.

I3C status return codes.

Values:

enumerator kStatus_I3C_Busy
: The master is already performing a transfer.

enumerator kStatus_I3C_Idle
: The slave driver is idle.

enumerator kStatus_I3C_Nak
: The slave device sent a NAK in response to an address.

enumerator kStatus_I3C_WriteAbort
: The slave device sent a NAK in response to a write.

enumerator kStatus_I3C_Term
: The master terminates slave read.

enumerator kStatus_I3C_HdrParityError
: Parity error from DDR read.

enumerator kStatus_I3C_CrcError
: CRC error from DDR read.

enumerator kStatus_I3C_ReadFifoError
: Read from M/SRDATAB register when FIFO empty.

enumerator kStatus_I3C_WriteFifoError
: Write to M/SWDATAB register when FIFO full.

enumerator kStatus_I3C_MsgError
: Message SDR/DDR mismatch or read/write message in wrong state

enumerator kStatus_I3C_InvalidReq
: Invalid use of request.

enumerator kStatus_I3C_Timeout
: The module has stalled too long in a frame.

enumerator kStatus_I3C_SlaveCountExceed
: The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

enumerator kStatus_I3C_IBIWon
The I3C slave event IBI or MR or HJ won the arbitration on a header address.

enumerator kStatus_I3C_OverrunError
Slave internal from-bus buffer/FIFO overrun.

enumerator kStatus_I3C_UnderrunError
Slave internal to-bus buffer/FIFO underrun

enumerator kStatus_I3C_UnderrunNak
Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator kStatus_I3C_InvalidStart
Slave invalid start flag

enumerator kStatus_I3C_SdrParityError
SDR parity error

enumerator kStatus_I3C_S0S1Error
S0 or S1 error

enum _i3c_hdr_mode
I3C HDR modes.

Values:

enumerator kI3C_HDRModeNone

enumerator kI3C_HDRModeDDR

enumerator kI3C_HDRModeTSP

enumerator kI3C_HDRModeTSL

typedef enum *_i3c_hdr_mode* i3c_hdr_mode_t
I3C HDR modes.

typedef struct *_i3c_device_info* i3c_device_info_t
I3C device information.

I3C_RETRY_TIMES
Max loops to wait for I3C operation status complete.

This is the maximum number of loops to wait for I3C operation status complete. If set to 0, it will wait indefinitely.

I3C_MAX_DEVCNT

I3C_IBI_BUFF_SIZE

struct i3c_device_info
#include <fsl_i3c.h> I3C device information.

Public Members

uint8_t dynamicAddr
Device dynamic address.

uint8_t staticAddr
Static address.

uint8_t dcr
Device characteristics register information.

uint8_t bcr
: Bus characteristics register information.

uint16_t vendorID
: Device vendor ID(manufacture ID).

uint32_t partNumber
: Device part number info

uint16_t maxReadLength
: Maximum read length.

uint16_t maxWriteLength
: Maximum write length.

uint8_t hdrMode
: Support hdr mode, could be OR logic in i3c_hdr_mode.

2.27 I3C Common Driver

typedef struct *_i3c_config* i3c_config_t
: Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

  This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

  The configuration structure can be made constant so it resides in flash.

uint32_t I3C_GetInstance(I3C_Type *base)
: Get which instance current I3C is used.

  Parameters

  - base – The I3C peripheral base address.

void I3C_GetDefaultConfig(*i3c_config_t* *config)
: Provides a default configuration for the I3C peripheral, the configuration covers both master functionality and slave functionality.

  This function provides the following default configuration for I3C:

```
config->enableMaster                = kI3C_MasterCapable;
config->disableTimeout              = false;
config->hKeep                       = kI3C_MasterHighKeeperNone;
config->enableOpenDrainStop         = true;
config->enableOpenDrainHigh         = true;
config->baudRate_Hz.i2cBaud         = 400000U;
config->baudRate_Hz.i3cPushPullBaud  = 12500000U;
config->baudRate_Hz.i3cOpenDrainBaud = 2500000U;
config->masterDynamicAddress        = 0x0AU;
config->slowClock_Hz                = 1000000U;
config->enableSlave                 = true;
config->vendorID                    = 0x11BU;
config->enableRandomPart            = false;
config->partNumber                  = 0;
config->dcr                         = 0;
config->bcr = 0;
config->hdrMode             = (uint8_t)kI3C_HDRModeDDR;
config->nakAllRequest       = false;
```

(continues on next page)

(continued from previous page)

```
config->ignoreS0S1Error     = false;
config->offline             = false;
config->matchSlaveStartStop = false;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the common I3C driver with I3C_Init().

Parameters

- config – **[out]** User provided configuration structure for default values. Refer to i3c_config_t.

void I3C_Init(I3C_Type *base, const *i3c_config_t* *config, uint32_t sourceClock_Hz)

Initializes the I3C peripheral. This function enables the peripheral clock and initializes the I3C peripheral as described by the user provided configuration. This will initialize both the master peripheral and slave peripheral so that I3C module could work as pure master, pure slave or secondary master, etc. A software reset is performed prior to configuration.

Parameters

- base – The I3C peripheral base address.
- config – User provided peripheral configuration. Use I3C_GetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

struct _i3c_config

#include <fsl_i3c.h> Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

i3c_master_enable_t enableMaster

Enable master mode.

bool disableTimeout

Whether to disable timeout to prevent the ERRWARN.

i3c_master_hkeep_t hKeep

High keeper mode setting.

bool enableOpenDrainStop

Whether to emit open-drain speed STOP.

bool enableOpenDrainHigh

Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

i3c_baudrate_hz_t baudRate_Hz

Desired baud rate settings.

i3c_start_scl_delay_t startSclDelay

I3C SCL delay after START.

i3c_start_scl_delay_t restartSclDelay
: I3C SCL delay after Repeated START.

uint8_t masterDynamicAddress
: Main master dynamic address configuration.

uint32_t maxWriteLength
: Maximum write length.

uint32_t maxReadLength
: Maximum read length.

bool enableSlave
: Whether to enable slave.

uint8_t staticAddr
: Static address.

uint16_t vendorID
: Device vendor ID(manufacture ID).

uint32_t partNumber
: Device part number info

uint8_t dcr
: Device characteristics register information.

uint8_t bcr
: Bus characteristics register information.

uint8_t hdrMode
: Support hdr mode, could be OR logic in enumeration:i3c_hdr_mode_t.

bool nakAllRequest
: Whether to reply NAK to all requests except broadcast CCC.

bool ignoreS0S1Error
: Whether to ignore S0/S1 error in SDR mode.

bool offline
: Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

bool matchSlaveStartStop
: Whether to assert start/stop status only the time slave is addressed.

2.28 I3C Master Driver

void I3C_MasterGetDefaultConfig(*i3c_master_config_t* *masterConfig)
: Provides a default configuration for the I3C master peripheral.

  This function provides the following default configuration for the I3C master peripheral:

```
masterConfig->enableMaster            = kI3C_MasterOn;
masterConfig->disableTimeout          = false;
masterConfig->hKeep                   = kI3C_MasterHighKeeperNone;
masterConfig->enableOpenDrainStop     = true;
masterConfig->enableOpenDrainHigh     = true;
masterConfig->baudRate_Hz             = 100000U;
masterConfig->busType                 = kI3C_TypeI2C;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with I3C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to i3c_master_config_t.

void I3C_MasterInit(I3C_Type *base, const *i3c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the I3C master peripheral.

This function enables the peripheral clock and initializes the I3C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The I3C peripheral base address.
- masterConfig – User provided peripheral configuration. Use I3C_MasterGetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

void I3C_MasterDeinit(I3C_Type *base)

Deinitializes the I3C master peripheral.

This function disables the I3C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The I3C peripheral base address.

status_t I3C_MasterCheckAndClearError(I3C_Type *base, uint32_t status)

status_t I3C_MasterWaitForCtrlDone(I3C_Type *base, bool waitIdle)

status_t I3C_CheckForBusyBus(I3C_Type *base)

static inline void I3C_MasterEnable(I3C_Type *base, *i3c_master_enable_t* enable)

Set I3C module master mode.

Parameters

- base – The I3C peripheral base address.
- enable – Enable master mode.

void I3C_SlaveGetDefaultConfig(*i3c_slave_config_t* *slaveConfig)

Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableslave              = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with I3C_SlaveInit().

Parameters

- slaveConfig – **[out]** User provided configuration structure for default values. Refer to i3c_slave_config_t.

void I3C_SlaveInit(I3C_Type *base, const *i3c_slave_config_t* *slaveConfig, uint32_t slowClock_Hz)

Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- base – The I3C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use I3C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- slowClock_Hz – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH defines as 1, this parameter is useless.

void I3C_SlaveDeinit(I3C_Type *base)

Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnable)

Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnable – Enable or disable.

static inline uint32_t I3C_MasterGetStatusFlags(I3C_Type *base)

Gets the I3C master status flags.

A bit mask with the state of all I3C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_master_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_MasterClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C master status flag state.

The following status register flags can be cleared:

- kI3C_MasterSlaveStartFlag
- kI3C_MasterControlDoneFlag
- kI3C_MasterCompleteFlag

- kI3C_MasterArbitrationWonFlag
- kI3C_MasterSlave2MasterFlag

Attempts to clear other flags has no effect.

See also:

_i3c_master_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_master_flags enumerators OR'd together. You may pass the result of a previous call to I3C_MasterGetStatusFlags().

static inline uint32_t I3C_MasterGetErrorStatusFlags(I3C_Type *base)

Gets the I3C master error status flags.

A bit mask with the state of all I3C master error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_master_error_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_MasterClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C master error status flag state.

See also:

_i3c_master_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_master_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_MasterGetStatusFlags().

i3c_master_state_t I3C_MasterGetState(I3C_Type *base)

Gets the I3C master state.

Parameters

- base – The I3C peripheral base address.

Returns

I3C master state.

static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)

Gets the I3C slave status flags.

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave status flag state.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Attempts to clear other flags has no effect.

See also:

_i3c_slave_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_slave_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetStatusFlags().

static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_error_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.

- 0: related status flag is not set.

static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave error status flag state.

See also:

_i3c_slave_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_slave_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetErrorStatusFlags().

i3c_slave_activity_state_t I3C_SlaveGetActivityState(I3C_Type *base)

Gets the I3C slave state.

Parameters

- base – The I3C peripheral base address.

Returns

I3C slave activity state, refer i3c_slave_activity_state_t.

status_t I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)

static inline void I3C_MasterEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C master interrupt requests.

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_MasterDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C master interrupt requests.

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_MasterGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C master interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_master_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_MasterGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C master interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_master_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_MasterEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C master DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_MasterGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C master transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Transmit Data Register address.

static inline uint32_t I3C_MasterGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C master receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Receive Data Register address.

static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Transmit Data Register address.

static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Receive Data Register address.

static inline void I3C_MasterSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C master FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_MasterTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- rxLvl – Receive FIFO watermark level. The kI3C_MasterRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_MasterGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C master FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.

- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

static inline void I3C_SlaveSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_SlaveTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- rxLvl – Receive FIFO watermark level. The kI3C_SlaveRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

void I3C_MasterSetBaudRate(I3C_Type *base, const *i3c_baudrate_hz_t* *baudRate_Hz, uint32_t sourceClock_Hz)

Sets the I3C bus frequency for master transactions.

The I3C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Parameters

- base – The I3C peripheral base address.
- baudRate_Hz – Pointer to structure of requested bus frequency in Hertz.
- sourceClock_Hz – I3C functional clock frequency in Hertz.

static inline bool I3C_MasterGetBusIdleState(I3C_Type *base)

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- base – The I3C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

status_t I3C_MasterStartWithRxSize(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir, uint8_t rxSize)

Sends a START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the a address parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- rxSize – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.

status_t I3C_MasterStart(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir)

Sends a START signal and slave address on the I2C/I3C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.

status_t I3C_MasterRepeatedStartWithRxSize(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir, uint8_t rxSize)

Sends a repeated START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to send a Repeated START signal when a transfer is already in progress. Like I3C_MasterStart(), it also sends the specified 7-bit address. Call this API also configures the read terminate size for the following read transfer. For example, set the rxSize = 2, the

following read transfer will be terminated after two bytes of data received. Write transfer will not be affected by the rxSize configuration.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- rxSize – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.

static inline *status_t* I3C_MasterRepeatedStart(I3C_Type *base, *i3c_bus_type_t* type, uint8_t address, *i3c_direction_t* dir)

Sends a repeated START signal and slave address on the I2C/I3C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like I3C_MasterStart(), it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The I3C peripheral base address.
- type – The bus type to use in this transaction.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kI3C_Read or kI3C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.

status_t I3C_MasterSend(I3C_Type *base, const void *txBuff, size_t txSize, uint32_t flags)

Performs a polling send transfer on the I2C/I3C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns kStatus_I3C_Nak.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

- flags – Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options.

Return values

- kStatus_Success – Data was sent successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Nak – The slave device sent a NAK in response to an address.
- kStatus_I3C_WriteAbort – The slave device sent a NAK in response to a write.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_WriteFifoError – Write to M/SWDATAB register when FIFO full.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_MasterReceive(I3C_Type *base, void *rxBuff, size_t rxSize, uint32_t flags)

Performs a polling receive transfer on the I2C/I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.
- flags – Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Term – The master terminates slave read.
- kStatus_I3C_HdrParityError – Parity error from DDR read.
- kStatus_I3C_CrcError – CRC error from DDR read.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_ReadFifoError – Read from M/SRDATAB register when FIFO empty.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_MasterStop(I3C_Type *base)

Sends a STOP signal on the I2C/I3C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- base – The I3C peripheral base address.

Return values

- kStatus_Success – The STOP signal was successfully sent on the bus and the transaction terminated.

- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_InvalidReq – Invalid use of request.

void I3C_MasterEmitRequest(I3C_Type *base, *i3c_bus_request_t* masterReq)

I3C master emit request.

Parameters

- base – The I3C peripheral base address.
- masterReq – I3C master request of type i3c_bus_request_t

static inline void I3C_MasterEmitIBIResponse(I3C_Type *base, *i3c_ibi_response_t* ibiResponse)

I3C master emit request.

Parameters

- base – The I3C peripheral base address.
- ibiResponse – I3C master emit IBI response of type i3c_ibi_response_t

void I3C_MasterRegisterIBI(I3C_Type *base, *i3c_register_ibi_addr_t* *ibiRule)

I3C master register IBI rule.

Parameters

- base – The I3C peripheral base address.
- ibiRule – Pointer to ibi rule description of type i3c_register_ibi_addr_t

void I3C_MasterGetIBIRules(I3C_Type *base, *i3c_register_ibi_addr_t* *ibiRule)

I3C master get IBI rule.

Parameters

- base – The I3C peripheral base address.
- ibiRule – Pointer to store the read out ibi rule description.

i3c_ibi_type_t I3C_GetIBIType(I3C_Type *base)

I3C master get IBI Type.

Parameters

- base – The I3C peripheral base address.

Return values

i3c_ibi_type_t – Type of i3c_ibi_type_t.

static inline uint8_t I3C_GetIBIAddress(I3C_Type *base)

I3C master get IBI Address.

Parameters

- base – The I3C peripheral base address.

Return values

The – 8-bit IBI address.

status_t I3C_MasterProcessDAASpecifiedBaudrate(I3C_Type *base, uint8_t *addressList, uint32_t count, *i3c_master_daa_baudrate_t* *daaBaudRate)

Performs a DAA in the i3c bus with specified temporary baud rate.

Parameters

- base – The I3C peripheral base address.

- addressList – The pointer for address list which is used to do DAA.
- count – The address count in the address list.
- daaBaudRate – The temporary baud rate in DAA process, NULL for using initial setting. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- kStatus_I3C_SlaveCountExceed – The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

static inline *status_t* I3C_MasterProcessDAA(I3C_Type *base, uint8_t *addressList, uint32_t count)

Performs a DAA in the i3c bus.

Parameters

- base – The I3C peripheral base address.
- addressList – The pointer for address list which is used to do DAA.
- count – The address count in the address list. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- kStatus_I3C_SlaveCountExceed – The I3C slave count has exceed the definition in I3C_MAX_DEVCNT.

i3c_device_info_t *I3C_MasterGetDeviceListAfterDAA(I3C_Type *base, uint8_t *count)

Get device information list after DAA process is done.

Parameters

- base – The I3C peripheral base address.
- count – **[out]** The pointer to store the available device count.

Returns

Pointer to the i3c_device_info_t array.

void I3C_MasterClearDeviceCount(I3C_Type *base)

Clear the global device count which represents current devices number on the bus. When user resets all dynamic addresses on the bus, should call this API.

Parameters

- base – The I3C peripheral base address.

status_t I3C_MasterTransferBlocking(I3C_Type *base, *i3c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C/I3C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- base – The I3C peripheral base address.
- transfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_I3C_Busy – Another master is currently utilizing the bus.
- kStatus_I3C_IBIWon – The I3C slave event IBI or MR or HJ won the arbitration on a header address.
- kStatus_I3C_Timeout – The module has stalled too long in a frame.
- kStatus_I3C_Nak – The slave device sent a NAK in response to an address.
- kStatus_I3C_WriteAbort – The slave device sent a NAK in response to a write.
- kStatus_I3C_Term – The master terminates slave read.
- kStatus_I3C_HdrParityError – Parity error from DDR read.
- kStatus_I3C_CrcError – CRC error from DDR read.
- kStatus_I3C_MsgError – Message SDR/DDR mismatch or read/write message in wrong state.
- kStatus_I3C_ReadFifoError – Read from M/SRDATAB register when FIFO empty.
- kStatus_I3C_WriteFifoError – Write to M/SWDATAB register when FIFO full.
- kStatus_I3C_InvalidReq – Invalid use of request.

status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)

Performs a polling send transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

void I3C_MasterTransferCreateHandle(I3C_Type *base, *i3c_master_handle_t* *handle, const *i3c_master_transfer_callback_t* *callback, void *userData)

Creates a new handle for the I3C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the I3C_MasterTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The I3C peripheral base address.
- handle – **[out]** Pointer to the I3C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t I3C_MasterTransferNonBlocking(I3C_Type *base, *i3c_master_handle_t* *handle, *i3c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C/I3C bus.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_I3C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

status_t I3C_MasterTransferGetCount(I3C_Type *base, *i3c_master_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void I3C_MasterTransferAbort(I3C_Type *base, *i3c_master_handle_t* *handle)

Terminates a non-blocking I3C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the I3C peripheral's IRQ priority.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to the I3C master driver handle.

void I3C_MasterTransferHandleIRQ(I3C_Type *base, void *intHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The I3C peripheral base address.
- intHandle – Pointer to the I3C master driver handle.

enum _i3c_master_flags

I3C master peripheral flags.

The following status register flags can be cleared:

- kI3C_MasterSlaveStartFlag
- kI3C_MasterControlDoneFlag
- kI3C_MasterCompleteFlag
- kI3C_MasterArbitrationWonFlag
- kI3C_MasterSlave2MasterFlag

All flags except kI3C_MasterBetweenFlag and kI3C_MasterNackDetectFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_MasterBetweenFlag

Between messages/DAAs flag

enumerator kI3C_MasterNackDetectFlag

NACK detected flag

enumerator kI3C_MasterSlaveStartFlag

Slave request start flag

enumerator kI3C_MasterControlDoneFlag

Master request complete flag

enumerator kI3C_MasterCompleteFlag

Transfer complete flag

enumerator kI3C_MasterRxReadyFlag

Rx data ready in Rx buffer flag

enumerator kI3C_MasterTxReadyFlag

Tx buffer ready for Tx data flag

enumerator kI3C_MasterArbitrationWonFlag

Header address won arbitration flag

enumerator kI3C_MasterErrorFlag

Error occurred flag

enumerator kI3C_MasterSlave2MasterFlag
Switch from slave to master flag

enumerator kI3C_MasterClearFlags

enum _i3c_master_error_flags
I3C master error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_MasterErrorNackFlag
Slave NACKed the last address

enumerator kI3C_MasterErrorWriteAbortFlag
Slave NACKed the write data

enumerator kI3C_MasterErrorParityFlag
Parity error from DDR read

enumerator kI3C_MasterErrorCrcFlag
CRC error from DDR read

enumerator kI3C_MasterErrorReadFlag
Read from MRDATAB register when FIFO empty

enumerator kI3C_MasterErrorWriteFlag
Write to MWDATAB register when FIFO full

enumerator kI3C_MasterErrorMsgFlag
Message SDR/DDR mismatch or read/write message in wrong state

enumerator kI3C_MasterErrorInvalidReqFlag
Invalid use of request

enumerator kI3C_MasterErrorTimeoutFlag
The module has stalled too long in a frame

enumerator kI3C_MasterAllErrorFlags
All error flags

enum _i3c_master_state
I3C working master state.

Values:

enumerator kI3C_MasterStateIdle
Bus stopped.

enumerator kI3C_MasterStateSlvReq
Bus stopped but slave holding SDA low.

enumerator kI3C_MasterStateMsgSdr
In SDR Message mode from using MWMSG_SDR.

enumerator kI3C_MasterStateNormAct
In normal active SDR mode.

enumerator kI3C_MasterStateDdr
In DDR Message mode.

enumerator kI3C_MasterStateDaa
In ENTDAA mode.

enumerator kI3C_MasterStateIbiAck
Waiting on IBI ACK/NACK decision.

enumerator kI3C_MasterStateIbiRcv
Receiving IBI.

enum _i3c_master_enable
I3C master enable configuration.

Values:

enumerator kI3C_MasterOff
Master off.

enumerator kI3C_MasterOn
Master on.

enumerator kI3C_MasterCapable
Master capable.

enum _i3c_master_hkeep
I3C high keeper configuration.

Values:

enumerator kI3C_MasterHighKeeperNone
Use PUR to hold SCL high.

enumerator kI3C_MasterHighKeeperWiredIn
Use pin_HK controls.

enumerator kI3C_MasterPassiveSDA
Hi-Z for Bus Free and hold SDA.

enumerator kI3C_MasterPassiveSDASCL
Hi-Z both for Bus Free, and can Hi-Z SDA for hold.

enum _i3c_bus_request
Emits the requested operation when doing in pieces vs. by message.

Values:

enumerator kI3C_RequestNone
No request.

enumerator kI3C_RequestEmitStartAddr
Request to emit start and address on bus.

enumerator kI3C_RequestEmitStop
Request to emit stop on bus.

enumerator kI3C_RequestIbiAckNack
Manual IBI ACK or NACK.

enumerator kI3C_RequestProcessDAA
Process DAA.

enumerator kI3C_RequestForceExit
Request to force exit.

enumerator kI3C_RequestAutoIbi
Hold in stopped state, but Auto-emit START,7E.

enum _i3c_bus_type
Bus type with EmitStartAddr.

Values:

enumerator kI3C_TypeI3CSdr
SDR mode of I3C.

enumerator kI3C_TypeI2C
Standard i2c protocol.

enumerator kI3C_TypeI3CDdr
HDR-DDR mode of I3C.

enum _i3c_ibi_response
IBI response.

Values:

enumerator kI3C_IbiRespAck
ACK with no mandatory byte.

enumerator kI3C_IbiRespNack
NACK.

enumerator kI3C_IbiRespAckMandatory
ACK with mandatory byte.

enumerator kI3C_IbiRespManual
Reserved.

enum _i3c_ibi_type
IBI type.

Values:

enumerator kI3C_IbiNormal
In-band interrupt.

enumerator kI3C_IbiHotJoin
slave hot join.

enumerator kI3C_IbiMasterRequest
slave master ship request.

enum _i3c_ibi_state
IBI state.

Values:

enumerator kI3C_IbiReady
In-band interrupt ready state, ready for user to handle.

enumerator kI3C_IbiDataBuffNeed
In-band interrupt need data buffer for data receive.

enumerator kI3C_IbiAckNackPending
In-band interrupt Ack/Nack pending for decision.

enum _i3c_direction

Direction of master and slave transfers.

Values:

enumerator kI3C_Write

Master transmit.

enumerator kI3C_Read

Master receive.

enum _i3c_tx_trigger_level

Watermark of TX int/dma trigger level.

Values:

enumerator kI3C_TxTriggerOnEmpty

Trigger on empty.

enumerator kI3C_TxTriggerUntilOneQuarterOrLess

Trigger on 1/4 full or less.

enumerator kI3C_TxTriggerUntilOneHalfOrLess

Trigger on 1/2 full or less.

enumerator kI3C_TxTriggerUntilOneLessThanFull

Trigger on 1 less than full or less.

enum _i3c_rx_trigger_level

Watermark of RX int/dma trigger level.

Values:

enumerator kI3C_RxTriggerOnNotEmpty

Trigger on not empty.

enumerator kI3C_RxTriggerUntilOneQuarterOrMore

Trigger on 1/4 full or more.

enumerator kI3C_RxTriggerUntilOneHalfOrMore

Trigger on 1/2 full or more.

enumerator kI3C_RxTriggerUntilThreeQuarterOrMore

Trigger on 3/4 full or more.

enum _i3c_rx_term_ops

I3C master read termination operations.

Values:

enumerator kI3C_RxTermDisable

Master doesn't terminate read, used for CCC transfer.

enumerator kI3C_RxAutoTerm

Master auto terminate read after receiving specified bytes(<=255).

enumerator kI3C_RxTermLastByte

Master terminates read at any time after START, no length limitation.

enum _i3c_start_scl_delay

I3C start SCL delay options.

Values:

enumerator kI3C_NoDelay
No delay.

enumerator kI3C_IncreaseSclHalfPeriod
Increases SCL clock period by 1/2.

enumerator kI3C_IncreaseSclOnePeriod
Increases SCL clock period by 1.

enumerator kI3C_IncreaseSclOneAndHalfPeriod
Increases SCL clock period by 1 1/2

enum _i3c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the _i3c_master_transfer::flags field.

Values:

enumerator kI3C_TransferDefaultFlag
Transfer starts with a start signal, stops with a stop signal.

enumerator kI3C_TransferNoStartFlag
Don't send a start condition, address, and sub address

enumerator kI3C_TransferRepeatedStartFlag
Send a repeated start condition

enumerator kI3C_TransferNoStopFlag
Don't send a stop condition.

enumerator kI3C_TransferWordsFlag
Transfer in words, else transfer in bytes.

enumerator kI3C_TransferDisableRxTermFlag
Disable Rx termination. Note: It's for I3C CCC transfer.

enumerator kI3C_TransferRxAutoTermFlag
Set Rx auto-termination. Note: It's adaptive based on Rx size(<=255 bytes) except in I3C_MasterReceive.

enumerator kI3C_TransferStartWithBroadcastAddr
Start transfer with 0x7E, then read/write data with device address.

typedef enum *_i3c_master_state* i3c_master_state_t
I3C working master state.

typedef enum *_i3c_master_enable* i3c_master_enable_t
I3C master enable configuration.

typedef enum *_i3c_master_hkeep* i3c_master_hkeep_t
I3C high keeper configuration.

typedef enum *_i3c_bus_request* i3c_bus_request_t
Emits the requested operation when doing in pieces vs. by message.

typedef enum *_i3c_bus_type* i3c_bus_type_t
Bus type with EmitStartAddr.

typedef enum *_i3c_ibi_response* i3c_ibi_response_t
IBI response.

typedef enum *_i3c_ibi_type* i3c_ibi_type_t
IBI type.

typedef enum *_i3c_ibi_state* i3c_ibi_state_t
IBI state.

typedef enum *_i3c_direction* i3c_direction_t
Direction of master and slave transfers.

typedef enum *_i3c_tx_trigger_level* i3c_tx_trigger_level_t
Watermark of TX int/dma trigger level.

typedef enum *_i3c_rx_trigger_level* i3c_rx_trigger_level_t
Watermark of RX int/dma trigger level.

typedef enum *_i3c_rx_term_ops* i3c_rx_term_ops_t
I3C master read termination operations.

typedef enum *_i3c_start_scl_delay* i3c_start_scl_delay_t
I3C start SCL delay options.

typedef struct *_i3c_register_ibi_addr* i3c_register_ibi_addr_t
Structure with setting master IBI rules and slave registry.

typedef struct *_i3c_baudrate* i3c_baudrate_hz_t
Structure with I3C baudrate settings.

typedef struct *_i3c_master_daa_baudrate* i3c_master_daa_baudrate_t
I3C DAA baud rate configuration.

typedef struct *_i3c_master_config* i3c_master_config_t
Structure with settings to initialize the I3C master module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef struct *_i3c_master_transfer* i3c_master_transfer_t

typedef struct *_i3c_master_handle* i3c_master_handle_t

typedef struct *_i3c_master_transfer_callback* i3c_master_transfer_callback_t
i3c master callback functions.

typedef void (*i3c_master_isr_t)(I3C_Type *base, void *handle)
Typedef for master interrupt handler.

struct __i3c_register_ibi_addr
#include <fsl_i3c.h> Structure with setting master IBI rules and slave registry.

Public Members

uint8_t address[5]
Address array for registry.

bool i3cFastStart
Allow the START header to run as push-pull speed if all dynamic addresses take MSB 0.

bool ibiHasPayload
Whether the address array has mandatory IBI byte.

struct _i3c_baudrate
#include <fsl_i3c.h> Structure with I3C baudrate settings.

Public Members

uint32_t i2cBaud
Desired I2C baud rate in Hertz.

uint32_t i3cPushPullBaud
Desired I3C push-pull baud rate in Hertz.

uint32_t i3cOpenDrainBaud
Desired I3C open-drain baud rate in Hertz.

struct _i3c_master_daa_baudrate
#include <fsl_i3c.h> I3C DAA baud rate configuration.

Public Members

uint32_t sourceClock_Hz
FCLK, function clock in Hertz.

uint32_t i3cPushPullBaud
Desired I3C push-pull baud rate in Hertz.

uint32_t i3cOpenDrainBaud
Desired I3C open-drain baud rate in Hertz.

struct _i3c_master_config
#include <fsl_i3c.h> Structure with settings to initialize the I3C master module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

i3c_master_enable_t enableMaster
Enable master mode.

bool disableTimeout
Whether to disable timeout to prevent the ERRWARN.

i3c_master_hkeep_t hKeep
High keeper mode setting.

bool enableOpenDrainStop
Whether to emit open-drain speed STOP.

bool enableOpenDrainHigh
Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

i3c_baudrate_hz_t baudRate_Hz
Desired baud rate settings.

i3c_start_scl_delay_t startSclDelay
: I3C SCL delay after START.

i3c_start_scl_delay_t restartSclDelay
: I3C SCL delay after Repeated START.

struct __i3c_master_transfer_callback
: *#include <fsl_i3c.h>* i3c master callback functions.

Public Members

void (*slave2Master)(I3C_Type *base, void *userData)
: Transfer complete callback

void (*ibiCallback)(I3C_Type *base, *i3c_master_handle_t* *handle, *i3c_ibi_type_t* ibiType, *i3c_ibi_state_t* ibiState)
: IBI event callback

void (*transferComplete)(I3C_Type *base, *i3c_master_handle_t* *handle, *status_t* completionStatus, void *userData)
: Transfer complete callback

struct __i3c_master_transfer
: *#include <fsl_i3c.h>* Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the I3C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags
: Bit mask of options for the transfer. See enumeration _i3c_master_transfer_flags for available options. Set to 0 or kI3C_TransferDefaultFlag for normal transfers.

uint8_t slaveAddress
: The 7-bit slave address.

i3c_direction_t direction
: Either kI3C_Read or kI3C_Write.

uint32_t subaddress
: Sub address. Transferred MSB first.

size_t subaddressSize
: Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data
: Pointer to data to transfer.

size_t dataSize
: Number of bytes to transfer.

i3c_bus_type_t busType
: bus type.

i3c_ibi_response_t ibiResponse
: ibi response during transfer.

struct _i3c_master_handle

#include <fsl_i3c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint32_t remainingBytes

Remaining byte count in current state.

i3c_rx_term_ops_t rxTermOps

Read termination operation.

i3c_master_transfer_t transfer

Copy of the current transfer info.

uint8_t ibiAddress

Slave address which request IBI.

uint8_t *ibiBuff

Pointer to IBI buffer to keep ibi bytes.

size_t ibiPayloadSize

IBI payload size.

i3c_ibi_type_t ibiType

IBI type.

i3c_master_transfer_callback_t callback

Callback functions pointer.

void *userData

Application data passed to callback.

2.29 I3C Slave Driver

void I3C_SlaveGetDefaultConfig(*i3c_slave_config_t* *slaveConfig)

Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableslave              = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with I3C_SlaveInit().

Parameters

- slaveConfig – **[out]** User provided configuration structure for default values. Refer to i3c_slave_config_t.

void I3C_SlaveInit(I3C_Type *base, const *i3c_slave_config_t* *slaveConfig, uint32_t slowClock_Hz)

Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- base – The I3C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use I3C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- slowClock_Hz – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH defines as 1, this parameter is useless.

void I3C_SlaveDeinit(I3C_Type *base)

Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnable)

Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnable – Enable or disable.

static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)

Gets the I3C slave status flags.

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave status flag state.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Attempts to clear other flags has no effect.

See also:

_i3c_slave_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _i3c_slave_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetStatusFlags().

static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_i3c_slave_error_flags

Parameters

- base – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C slave error status flag state.

See also:

_i3c_slave_error_flags.

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of error status flags that are to be cleared. The mask is composed of _i3c_slave_error_flags enumerators OR'd together. You may pass the result of a previous call to I3C_SlaveGetErrorStatusFlags().

i3c_slave_activity_state_t I3C_SlaveGetActivityState(I3C_Type *base)

Gets the I3C slave state.

Parameters

- base – The I3C peripheral base address.

Returns

I3C slave activity state, refer i3c_slave_activity_state_t.

status_t I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)

static inline void I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _i3c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns
A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns
A bitmask composed of _i3c_slave_flags enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns
The I3C Slave Transmit Data Register address.

static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)

Gets I3C slave receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns
The I3C Slave Receive Data Register address.

static inline void I3C_SlaveSetWatermarks(I3C_Type *base, *i3c_tx_trigger_level_t* txLvl, *i3c_rx_trigger_level_t* rxLvl, bool flushTx, bool flushRx)

Sets the watermarks for I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txLvl – Transmit FIFO watermark level. The kI3C_SlaveTxReadyFlag flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.

- rxLvl – Receive FIFO watermark level. The kI3C_SlaveRxReadyFlag flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- flushTx – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- flushRx – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- base – The I3C peripheral base address.
- txCount – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)

Performs a polling send transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I3C bus.

Parameters

- base – The I3C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

void I3C_SlaveTransferCreateHandle(I3C_Type *base, *i3c_slave_handle_t* *handle, *i3c_slave_transfer_callback_t* callback, void *userData)

Creates a new handle for the I3C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the I3C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The I3C peripheral base address.
- handle – **[out]** Pointer to the I3C slave driver handle.

- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t I3C_SlaveTransferNonBlocking(I3C_Type *base, *i3c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and I3C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to I3C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of i3c_slave_transfer_event_t enumerators for the events you wish to receive. The kI3C_SlaveTransmitEvent and kI3C_SlaveReceiveEvent events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the kI3C_SlaveAllEvents constant is provided as a convenient way to enable all events.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.
- eventMask – Bit mask formed by OR'ing together i3c_slave_transfer_event_t enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and kI3C_SlaveAllEvents to enable all events.

Return values

- kStatus_Success – Slave transfers were successfully started.
- kStatus_I3C_Busy – Slave transfers have already been started on this handle.

status_t I3C_SlaveTransferGetCount(I3C_Type *base, *i3c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to i2c_slave_handle_t structure.
- count – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void I3C_SlaveTransferAbort(I3C_Type *base, *i3c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The I3C peripheral base address.

- handle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.

void I3C_SlaveTransferHandleIRQ(I3C_Type *base, void *intHandle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The I3C peripheral base address.
- intHandle – Pointer to struct: _i3c_slave_handle structure which stores the transfer state.

enum _i3c_slave_flags

I3C slave peripheral flags.

The following status register flags can be cleared:

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Only below flags can be enabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveNotStopFlag

Slave status not stop flag

enumerator kI3C_SlaveMessageFlag

Slave status message, indicating slave is listening to the bus traffic or responding

enumerator kI3C_SlaveRequiredReadFlag

Slave status required, either is master doing SDR read from slave, or is IBI pushing out.

enumerator kI3C_SlaveRequiredWriteFlag
Slave status request write, master is doing SDR write to slave, except slave in ENTDAA mode

enumerator kI3C_SlaveBusDAAFlag
I3C bus is in ENTDAA mode

enumerator kI3C_SlaveBusHDRModeFlag
I3C bus is in HDR mode

enumerator kI3C_SlaveBusStartFlag
Start/Re-start event is seen since the bus was last cleared

enumerator kI3C_SlaveMatchedFlag
Slave address(dynamic/static) matched since last cleared

enumerator kI3C_SlaveBusStopFlag
Stop event is seen since the bus was last cleared

enumerator kI3C_SlaveRxReadyFlag
Rx data ready in rx buffer flag

enumerator kI3C_SlaveTxReadyFlag
Tx buffer ready for Tx data flag

enumerator kI3C_SlaveDynamicAddrChangedFlag
Slave dynamic address has been assigned, re-assigned, or lost

enumerator kI3C_SlaveReceivedCCCFlag
Slave received Common command code

enumerator kI3C_SlaveErrorFlag
Error occurred flag

enumerator kI3C_SlaveHDRCommandMatchFlag
High data rate command match

enumerator kI3C_SlaveCCCHandledFlag
Slave received Common command code is handled by I3C module

enumerator kI3C_SlaveEventSentFlag
Slave IBI/P2P/MR/HJ event has been sent

enumerator kI3C_SlaveIbiDisableFlag
Slave in band interrupt is disabled.

enumerator kI3C_SlaveMasterRequestDisabledFlag
Slave master request is disabled.

enumerator kI3C_SlaveHotJoinDisabledFlag
Slave Hot-Join is disabled.

enumerator kI3C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kI3C_SlaveAllIrqFlags

enum _i3c_slave_error_flags
I3C slave error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveErrorOverrunFlag
Slave internal from-bus buffer/FIFO overrun.

enumerator kI3C_SlaveErrorUnderrunFlag
Slave internal to-bus buffer/FIFO underrun

enumerator kI3C_SlaveErrorUnderrunNakFlag
Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator kI3C_SlaveErrorTermFlag
Terminate error from master

enumerator kI3C_SlaveErrorInvalidStartFlag
Slave invalid start flag

enumerator kI3C_SlaveErrorSdrParityFlag
SDR parity error

enumerator kI3C_SlaveErrorHdrParityFlag
HDR parity error

enumerator kI3C_SlaveErrorHdrCRCFlag
HDR-DDR CRC error

enumerator kI3C_SlaveErrorS0S1Flag
S0 or S1 error

enumerator kI3C_SlaveErrorOverreadFlag
Over-read error

enumerator kI3C_SlaveErrorOverwriteFlag
Over-write error

enum _i3c_slave_event
I3C slave.event.

Values:

enumerator kI3C_SlaveEventNormal
Normal mode.

enumerator kI3C_SlaveEventIBI
In band interrupt event.

enumerator kI3C_SlaveEventMasterReq
Master request event.

enumerator kI3C_SlaveEventHotJoinReq
Hot-join event.

enum _i3c_slave_activity_state
I3C slave.activity state.

Values:

enumerator kI3C_SlaveNoLatency
Normal bus operation

enumerator kI3C_SlaveLatency1Ms
1ms of latency.

enumerator kI3C_SlaveLatency100Ms
100ms of latency.

enumerator kI3C_SlaveLatency10S

10s latency.

enum _i3c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I3C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kI3C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kI3C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kI3C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kI3C_SlaveRequiredTransmitEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kI3C_SlaveStartEvent

A start/repeated start was detected.

enumerator kI3C_SlaveHDRCommandMatchEvent

Slave Match HDR Command.

enumerator kI3C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kI3C_SlaveRequestSentEvent

Slave request event sent.

enumerator kI3C_SlaveReceivedCCCEvent

Slave received CCC event, need to handle by application.

enumerator kI3C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_i3c_slave_event* i3c_slave_event_t

I3C slave.event.

typedef enum *_i3c_slave_activity_state* i3c_slave_activity_state_t

I3C slave.activity state.

typedef struct *_i3c_slave_config* i3c_slave_config_t

Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_i3c_slave_transfer_event* i3c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to I3C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_i3c_slave_transfer* i3c_slave_transfer_t

I3C slave transfer structure.

typedef struct *_i3c_slave_handle* i3c_slave_handle_t

typedef void (*i3c_slave_transfer_callback_t)(I3C_Type *base, *i3c_slave_transfer_t* *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the I3C_SlaveSetCallback() function after you have created a handle.

Param base
Base address for the I3C instance on which the event occurred.

Param transfer
Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData
Arbitrary pointer-sized value passed from the application.

typedef void (*i3c_slave_isr_t)(I3C_Type *base, void *handle)

Typedef for slave interrupt handler.

struct _i3c_slave_config

#include <fsl_i3c.h> Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave

Whether to enable slave.

uint8_t staticAddr

Static address.

uint16_t vendorID

Device vendor ID(manufacture ID).

uint32_t partNumber

Device part number info

uint8_t dcr

Device characteristics register information.

uint8_t bcr
: Bus characteristics register information.

uint8_t hdrMode
: Support hdr mode, could be OR logic in enumeration:i3c_hdr_mode_t.

bool nakAllRequest
: Whether to reply NAK to all requests except broadcast CCC.

bool ignoreS0S1Error
: Whether to ignore S0/S1 error in SDR mode.

bool offline
: Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

bool matchSlaveStartStop
: Whether to assert start/stop status only the time slave is addressed.

uint32_t maxWriteLength
: Maximum write length.

uint32_t maxReadLength
: Maximum read length.

struct __i3c_slave_transfer
: *#include <fsl_i3c.h>* I3C slave transfer structure.

Public Members

uint32_t event
: Reason the callback is being invoked.

uint8_t *txData
: Transfer buffer

size_t txDataSize
: Transfer size

uint8_t *rxData
: Transfer buffer

size_t rxDataSize
: Transfer size

status_t completionStatus
: Success or error code describing how the transfer completed. Only applies for kI3C_SlaveCompletionEvent.

size_t transferredCount
: Number of bytes actually transferred since start or last repeated start.

struct __i3c_slave_handle
: *#include <fsl_i3c.h>* I3C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

i3c_slave_transfer_t transfer
I3C slave transfer copy.

bool isBusy
Whether transfer is busy.

bool wasTransmit
Whether the last transfer was a transmit.

uint32_t eventMask
Mask of enabled events.

uint32_t transferredCount
Count of bytes transferred.

i3c_slave_transfer_callback_t callback
Callback function called at transfer event.

void *userData
Callback parameter passed to callback.

size_t txFifoSize
Tx Fifo size

2.30 Iomuxc_driver

static inline void IOMUXC_SetPinMux(uint32_t muxRegister, uint32_t muxMode, uint32_t inputRegister, uint32_t inputDaisy, uint32_t configRegister, uint32_t inputInv)

Sets the IOMUXC pin mux mode.

This is an example to set the PTA2 as the lpuart0_tx:

```
IOMUXC_SetPinMux(IOMUXC_PTA2_LPUART0_TX, 0);
```

This is an example to set the PTC13 as i2s1_txd3:

```
IOMUXC_SetPinMux(IOMUXC_PTC13_I2S1_TXD3, 0);
```

Note: The first five parameters can be filled with the pin function ID macros.

Parameters

- muxRegister – The pin mux register.
- muxMode – The pin mux mode.
- inputRegister – The select input register.
- inputDaisy – The input daisy.
- configRegister – The config register.
- inputInv – The pad->module input inversion.

static inline void IOMUXC_SetPinConfig(uint32_t muxRegister, uint32_t muxMode, uint32_t inputRegister, uint32_t inputDaisy, uint32_t configRegister, uint32_t configValue)

Sets the IOMUXC pin configuration.

This is an example to set pin configuration for IOMUXC_PTA7_LPUART1_RX:

```
IOMUXC_SetPinConfig(IOMUXC_PTA7_LPUART1_RX,
                    IOMUXC_PCR_PE_MASK |
                    IOMUXC_PCR_PS_MASK)
```

Note: The previous five parameters can be filled with the pin function ID macros.

Parameters

- muxRegister – The pin mux register.
- muxMode – The pin mux mode.
- inputRegister – The select input register.
- inputDaisy – The input daisy.
- configRegister – The config register.
- configValue – The pin config value.

FSL_IOMUXC_DRIVER_VERSION

IOMUXC driver version 2.0.0.

IOMUXC_PTA0_CMP1_IN2

IOMUXC_PTA0_PTA0

IOMUXC_PTA0_LPSPI0_PCS1

IOMUXC_PTA0_LPUART0_CTS_B

IOMUXC_PTA0_LPI2C0_SCL

IOMUXC_PTA0_TPM0_CLKIN

IOMUXC_PTA0_I2S0_RX_BCLK

IOMUXC_PTA0_LPTMR0_ALT1

IOMUXC_PTA0_WUU0_P0

IOMUXC_PTA1_CMP1_IN3

IOMUXC_PTA1_PTA1

IOMUXC_PTA1_LPSPI0_PCS2

IOMUXC_PTA1_LPUART0_RTS_B

IOMUXC_PTA1_LPI2C0_SDA

IOMUXC_PTA1_TPM0_CH0

IOMUXC_PTA1_I2S0_RX_FS

IOMUXC_PTA1_EWM0_OUT_B

IOMUXC_PTA1_RTC_CLKOUT_B

IOMUXC_PTA2_CMP1_IN4

IOMUXC_PTA2_PTA2

IOMUXC_PTA2_LPSPI0_PCS3

IOMUXC_PTA2_LPUART0_TX

IOMUXC_PTA2_LPI2C0_HREQ

IOMUXC_PTA2_TPM0_CH1

IOMUXC_PTA2_I2S0_RXD0

IOMUXC_PTA2_WDOG0_RST

IOMUXC_PTA2_LPTMR0_ALT2

IOMUXC_PTA2_RTC_CLKOUT

IOMUXC_PTA3_CMP1_IN5

IOMUXC_PTA3_PTA3

IOMUXC_PTA3_LPUART0_RX

IOMUXC_PTA3_LPI2C1_HREQ

IOMUXC_PTA3_TPM0_CH2

IOMUXC_PTA3_I2S0_RXD1

IOMUXC_PTA3_PMIC0_MODE2

IOMUXC_PTA3_CMP0_OUT

IOMUXC_PTA3_WUU0_P1

IOMUXC_PTA4_CMP0_IN2

IOMUXC_PTA4_PTA4

IOMUXC_PTA4_LPSPI0_SIN

IOMUXC_PTA4_LPUART1_CTS_B

IOMUXC_PTA4_LPI2C1_SCL

IOMUXC_PTA4_TPM0_CH3

IOMUXC_PTA4_I2S0_MCLK

IOMUXC_PTA4_EXT_AUD_MCLK0

IOMUXC_PTA4_CAN0_TX

IOMUXC_PTA4_PMIC0_MODE1

IOMUXC_PTA4_LPTMR0_ALT3

IOMUXC_PTA4_WUU0_P2

IOMUXC_PTA5_CMP0_IN3

IOMUXC_PTA5_PTA5

IOMUXC_PTA5_LPSPI0_SOUT

IOMUXC_PTA5_LPUART1_RTS_B

IOMUXC_PTA5_LPI2C1_SDA

IOMUXC_PTA5_TPM0_CH4

IOMUXC_PTA5_I2S0_TX_BCLK

IOMUXC_PTA5_CAN0_RX

IOMUXC_PTA5_LPTMR1_ALT1

IOMUXC_PTA5_RTC_CLKOUT_B

IOMUXC_PTA6_CMP0_IN4

IOMUXC_PTA6_PTA6

IOMUXC_PTA6_LPSPI0_SCK

IOMUXC_PTA6_LPUART1_TX

IOMUXC_PTA6_I3C0_SCL

IOMUXC_PTA6_TPM0_CH5

IOMUXC_PTA6_I2S0_TX_FS

IOMUXC_PTA6_SEC0_TX

IOMUXC_PTA6_RTC_CLKOUT

IOMUXC_PTA6_WUU0_P3

IOMUXC_PTA7_CMP0_IN5

IOMUXC_PTA7_PTA7

IOMUXC_PTA7_LPSPI0_PCS0

IOMUXC_PTA7_LPUART1_RX

IOMUXC_PTA7_I3C0_SDA

IOMUXC_PTA7_TPM1_CLKIN

IOMUXC_PTA7_I2S0_TXD0

IOMUXC_PTA7_SEC0_RX

IOMUXC_PTA7_WDOG1_RST

IOMUXC_PTA7_LPTMR1_ALT2

IOMUXC_PTA7_WUU0_P4

IOMUXC_PTA8_ADC1_CH0A

IOMUXC_PTA8_PTA8

IOMUXC_PTA8_FXIO0_D0

IOMUXC_PTA8_LPSPI1_PCS1

IOMUXC_PTA8_LPUART1_CTS_B

IOMUXC_PTA8_LPI2C0_SCL

IOMUXC_PTA8_TPM1_CH0

IOMUXC_PTA8_I2S0_TXD1

IOMUXC_PTA8_PMIC0_MODE0

IOMUXC_PTA8_LPTMR1_ALT3

IOMUXC_PTA8_WUU0_P5

IOMUXC_PTA9_ADC1_CH0B

IOMUXC_PTA9_PTA9

IOMUXC_PTA9_FXIO0_D1

IOMUXC_PTA9_LPSPI1_PCS2

IOMUXC_PTA9_LPUART1_RTS_B

IOMUXC_PTA9_LPI2C0_SDA

IOMUXC_PTA9_TPM1_CH1

IOMUXC_PTA9_I2S1_RX_BCLK

IOMUXC_PTA9_NMI0_B

IOMUXC_PTA9_WUU0_P6

IOMUXC_PTA10_ADC1_CH1A

IOMUXC_PTA10_PTA10

IOMUXC_PTA10_FXIO0_D2

IOMUXC_PTA10_LPSPI1_PCS3

IOMUXC_PTA10_LPUART1_TX

IOMUXC_PTA10_LPI2C0_HREQ

IOMUXC_PTA10_I3C0_PUR

IOMUXC_PTA10_I2S1_RX_FS

IOMUXC_PTA10_EWM0_IN

IOMUXC_PTA10_WUU0_P7

IOMUXC_PTA11_ADC1_CH1B

IOMUXC_PTA11_PTA11

IOMUXC_PTA11_FXIO0_D3

IOMUXC_PTA11_LPUART1_RX

IOMUXC_PTA11_LPI2C1_HREQ

IOMUXC_PTA11_I3C0_PUR

IOMUXC_PTA11_I2S1_RXD0

IOMUXC_PTA11_WDOG0_RST

IOMUXC_PTA11_LPTMR0_ALT1

IOMUXC_PTA11_WUU0_P8

IOMUXC_PTA12_ADC1_CH2A

IOMUXC_PTA12_PTA12

IOMUXC_PTA12_FXIO0_D4

IOMUXC_PTA12_LPSPI1_SIN

IOMUXC_PTA12_LPUART0_CTS_B

IOMUXC_PTA12_LPI2C1_SCL

IOMUXC_PTA12_I2S1_RXD1

IOMUXC_PTA12_CAN0_TX

IOMUXC_PTA12_PMIC0_SDA

IOMUXC_PTA12_EWM0_IN

IOMUXC_PTA12_WUU0_P9

IOMUXC_PTA13_ADC1_CH2B

IOMUXC_PTA13_PTA13

IOMUXC_PTA13_FXIO0_D5

IOMUXC_PTA13_LPSPI1_SOUT

IOMUXC_PTA13_LPUART0_RTS_B

IOMUXC_PTA13_LPI2C1_SDA

IOMUXC_PTA13_I2S1_MCLK

IOMUXC_PTA13_EXT_AUD_MCLK0

IOMUXC_PTA13_CAN0_RX

IOMUXC_PTA13_PMIC0_SCL

IOMUXC_PTA13_CMP0_OUT

IOMUXC_PTA13_WUU0_P10

IOMUXC_PTA14_ADC1_CH3A

IOMUXC_PTA14_PTA14

IOMUXC_PTA14_FXIO0_D6

IOMUXC_PTA14_LPSPI1_SCK

IOMUXC_PTA14_LPUART0_TX

IOMUXC_PTA14_I3C0_SCL

IOMUXC_PTA14_TPM0_CLKIN

IOMUXC_PTA14_I2S1_TX_BCLK

IOMUXC_PTA14_SEC0_TX

IOMUXC_PTA14_EWM0_OUT_B

IOMUXC_PTA14_WUU0_P11

IOMUXC_PTA15_ADC1_CH3B

IOMUXC_PTA15_PTA15

IOMUXC_PTA15_FXIO0_D7

IOMUXC_PTA15_LPSPI1_PCS0

IOMUXC_PTA15_LPUART0_RX

IOMUXC_PTA15_I3C0_SDA

IOMUXC_PTA15_TPM0_CH0

IOMUXC_PTA15_I2S1_TX_FS

IOMUXC_PTA15_SEC0_RX

IOMUXC_PTA15_CLKOUT0

IOMUXC_PTA15_CMP1_OUT

IOMUXC_PTA15_WUU0_P12

IOMUXC_PTA16_ADC1_CH4A

IOMUXC_PTA16_PTA16

IOMUXC_PTA16_FXIO0_D8

IOMUXC_PTA16_LPSPI1_SIN

IOMUXC_PTA16_LPUART0_CTS_B

IOMUXC_PTA16_LPI2C0_SCL

IOMUXC_PTA16_TPM0_CH1

IOMUXC_PTA16_I2S1_TXD0

IOMUXC_PTA16_CAN0_TX

IOMUXC_PTA16_RTC_CLKOUT_B

IOMUXC_PTA16_WUU0_P13

IOMUXC_PTA17_ADC1_CH4B

IOMUXC_PTA17_PTA17

IOMUXC_PTA17_FXIO0_D9

IOMUXC_PTA17_LPSPI1_SOUT

IOMUXC_PTA17_LPUART0_RTS_B

IOMUXC_PTA17_LPI2C0_SDA

IOMUXC_PTA17_TPM0_CH2

IOMUXC_PTA17_I2S1_TXD1

IOMUXC_PTA17_CAN0_RX

IOMUXC_PTA17_WDOG1_RST

IOMUXC_PTA17_RTC_CLKOUT

IOMUXC_PTA17_WUU0_P14

IOMUXC_PTA18_ADC1_CH5A

IOMUXC_PTA18_PTA18

IOMUXC_PTA18_FXIO0_D10

IOMUXC_PTA18_LPSPI1_SCK

IOMUXC_PTA18_LPUART0_TX

IOMUXC_PTA18_LPI2C0_HREQ

IOMUXC_PTA18_TPM0_CH3

IOMUXC_PTA18_I2S1_TXD2

IOMUXC_PTA18_NMI1_B

IOMUXC_PTA18_WUU0_P15

IOMUXC_PTA19_PTA19

IOMUXC_PTA19_FXIO0_D11

IOMUXC_PTA19_LPSPI1_PCS0

IOMUXC_PTA19_LPUART0_RX

IOMUXC_PTA19_LPI2C1_HREQ

IOMUXC_PTA19_TPM1_CLKIN

IOMUXC_PTA19_I2S1_TXD3

IOMUXC_PTA19_MQS0_LEFT

IOMUXC_PTA19_JTAG0_TRST_B

IOMUXC_PTA19_LPTMR0_ALT2

IOMUXC_PTA20_PTA20

IOMUXC_PTA20_FXIO0_D12

IOMUXC_PTA20_LPSPI0_SIN

IOMUXC_PTA20_LPUART1_CTS_B

IOMUXC_PTA20_LPI2C1_SCL

IOMUXC_PTA20_TPM1_CH0

IOMUXC_PTA20_I2S1_RXD2

IOMUXC_PTA20_JTAG0_TMS_SWD0_DIO

IOMUXC_PTA20_LPTMR0_ALT3

IOMUXC_PTA21_PTA21

IOMUXC_PTA21_FXIO0_D13

IOMUXC_PTA21_LPSPI0_SOUT

IOMUXC_PTA21_LPUART1_RTS_B

IOMUXC_PTA21_LPI2C1_SDA

IOMUXC_PTA21_TPM1_CH1

IOMUXC_PTA21_I2S1_RXD3

IOMUXC_PTA21_MQS0_RIGHT

IOMUXC_PTA21_JTAG0_TDO

IOMUXC_PTA22_PTA22

IOMUXC_PTA22_FXIO0_D14

IOMUXC_PTA22_LPSPI0_SCK

IOMUXC_PTA22_LPUART1_TX

IOMUXC_PTA22_I3C0_SCL

IOMUXC_PTA22_MQS0_LEFT

IOMUXC_PTA22_JTAG0_TDI

IOMUXC_PTA23_PTA23

IOMUXC_PTA23_FXIO0_D15

IOMUXC_PTA23_LPSPI0_PCS0

IOMUXC_PTA23_LPUART1_RX

IOMUXC_PTA23_I3C0_SDA

IOMUXC_PTA23_MQS0_RIGHT

IOMUXC_PTA23_JTAG0_TCLK_SWD0_CLK

IOMUXC_PTA24_ADC1_CH5B

IOMUXC_PTA24_PTA24

IOMUXC_PTA24_I3C0_PUR

IOMUXC_PTA24_EXT_AUD_MCLK0

IOMUXC_PTA24_WDOG2_RST

IOMUXC_PTA24_LPTMR1_ALT1

IOMUXC_PTA24_WUU0_P16

IOMUXC_PTB0_ADC0_CH0A

IOMUXC_PTB0_PTB0

IOMUXC_PTB0_FXIO0_D16

IOMUXC_PTB0_LPSPI2_PCS1

IOMUXC_PTB0_LPUART2_CTS_B

IOMUXC_PTB0_LPI2C2_SCL

IOMUXC_PTB0_TPM2_CLKIN

IOMUXC_PTB0_I2S2_RXD1

IOMUXC_PTB0_MQS0_LEFT

IOMUXC_PTB0_MICFIL0_CLK01

IOMUXC_PTB0_WUU0_P17

IOMUXC_PTB1_ADC0_CH0B

IOMUXC_PTB1_PTB1

IOMUXC_PTB1_FXIO0_D17

IOMUXC_PTB1_LPSPI2_PCS2

IOMUXC_PTB1_LPUART2_RTS_B

IOMUXC_PTB1_LPI2C2_SDA

IOMUXC_PTB1_TPM2_CH0

IOMUXC_PTB1_I2S2_RX_BCLK

IOMUXC_PTB1_MICFIL0_DATA01

IOMUXC_PTB1_WDOG2_RST

IOMUXC_PTB1_WUU0_P18

IOMUXC_PTB2_ADC0_CH1A

IOMUXC_PTB2_PTB2

IOMUXC_PTB2_FXIO0_D18

IOMUXC_PTB2_LPSPI2_PCS3

IOMUXC_PTB2_LPUART2_TX

IOMUXC_PTB2_LPI2C2_HREQ

IOMUXC_PTB2_TPM2_CH1

IOMUXC_PTB2_I2S2_RX_FS

IOMUXC_PTB2_MICFIL0_CLK01

IOMUXC_PTB2_LPTMR0_ALT1

IOMUXC_PTB2_WUU0_P19

IOMUXC_PTB3_ADC0_CH1B

IOMUXC_PTB3_PTB3

IOMUXC_PTB3_FXIO0_D19

IOMUXC_PTB3_LPSPI2_SIN

IOMUXC_PTB3_LPUART2_RX

IOMUXC_PTB3_LPI2C2_HREQ

IOMUXC_PTB3_I3C1_PUR

IOMUXC_PTB3_I2S2_RXD0

IOMUXC_PTB3_MICFIL0_DATA23

IOMUXC_PTB3_LPTMR0_ALT2

IOMUXC_PTB3_WUU0_P20

IOMUXC_PTB4_ADC0_CH2A

IOMUXC_PTB4_PTB4

IOMUXC_PTB4_FXIO0_D20

IOMUXC_PTB4_LPSPI2_SOUT

IOMUXC_PTB4_LPUART2_CTS_B

IOMUXC_PTB4_LPI2C2_SCL

IOMUXC_PTB4_I2S2_TX_BCLK

IOMUXC_PTB4_MICFIL0_CLK01

IOMUXC_PTB4_WDOG0_RST

IOMUXC_PTB4_LPTMR0_ALT3

IOMUXC_PTB4_WUU0_P21

IOMUXC_PTB5_ADC0_CH2B

IOMUXC_PTB5_PTB5

IOMUXC_PTB5_FXIO0_D21

IOMUXC_PTB5_LPSPI2_SCK

IOMUXC_PTB5_LPUART2_RTS_B

IOMUXC_PTB5_LPI2C2_SDA

IOMUXC_PTB5_I2S2_TX_FS

IOMUXC_PTB5_MICFIL0_DATA45

IOMUXC_PTB5_WDOG1_RST

IOMUXC_PTB5_WUU0_P22

IOMUXC_PTB6_ADC0_CH3A

IOMUXC_PTB6_PTB6

IOMUXC_PTB6_FXIO0_D22

IOMUXC_PTB6_LPSPI2_PCS0

IOMUXC_PTB6_LPUART2_TX

IOMUXC_PTB6_I3C1_SCL

IOMUXC_PTB6_I2S2_TXD0

IOMUXC_PTB6_MICFIL0_CLK01

IOMUXC_PTB6_WUU0_P23

IOMUXC_PTB7_ADC0_CH3B

IOMUXC_PTB7_PTB7

IOMUXC_PTB7_FXIO0_D23

IOMUXC_PTB7_LPSPI3_PCS1

IOMUXC_PTB7_LPUART2_RX

IOMUXC_PTB7_I3C1_SDA

IOMUXC_PTB7_TPM3_CLKIN

IOMUXC_PTB7_I2S2_MCLK

IOMUXC_PTB7_EXT_AUD_MCLK1

IOMUXC_PTB7_MICFIL0_DATA67

IOMUXC_PTB7_PMIC0_MODE2

IOMUXC_PTB8_ADC0_CH4A

IOMUXC_PTB8_PTB8

IOMUXC_PTB8_FXIO0_D24

IOMUXC_PTB8_LPSPI3_PCS2

IOMUXC_PTB8_LPUART3_CTS_B

IOMUXC_PTB8_LPI2C3_SCL

IOMUXC_PTB8_TPM3_CH0

IOMUXC_PTB8_I2S2_TXD1

IOMUXC_PTB8_MQS0_RIGHT

IOMUXC_PTB8_MICFIL0_CLK01

IOMUXC_PTB8_PMIC0_MODE1

IOMUXC_PTB9_ADC0_CH4B

IOMUXC_PTB9_PTB9

IOMUXC_PTB9_FXIO0_D25

IOMUXC_PTB9_LPSPI3_PCS3

IOMUXC_PTB9_LPUART3_RTS_B

IOMUXC_PTB9_LPI2C3_SDA

IOMUXC_PTB9_TPM3_CH1

IOMUXC_PTB9_I2S3_TX_BCLK

IOMUXC_PTB9_MICFIL0_DATA01

IOMUXC_PTB9_PMIC0_MODE0

IOMUXC_PTB10_ADC0_CH5A

IOMUXC_PTB10_PTB10

IOMUXC_PTB10_FXIO0_D26

IOMUXC_PTB10_LPSPI3_SIN

IOMUXC_PTB10_LPUART3_RX

IOMUXC_PTB10_LPI2C3_HREQ

IOMUXC_PTB10_TPM3_CH2

IOMUXC_PTB10_I2S3_TX_FS

IOMUXC_PTB10_MICFIL0_CLK01

IOMUXC_PTB10_PMIC0_SDA

IOMUXC_PTB11_ADC0_CH5B

IOMUXC_PTB11_PTB11

IOMUXC_PTB11_FXIO0_D27

IOMUXC_PTB11_LPSPI3_SOUT

IOMUXC_PTB11_LPUART3_TX

IOMUXC_PTB11_LPI2C3_SDA

IOMUXC_PTB11_TPM3_CH3

IOMUXC_PTB11_I2S3_TXD0

IOMUXC_PTB11_MICFIL0_DATA23

IOMUXC_PTB11_PMIC0_SCL

IOMUXC_PTB12_CMP1_IN0

IOMUXC_PTB12_PTB12

IOMUXC_PTB12_FXIO0_D28

IOMUXC_PTB12_LPSPI3_SCK

IOMUXC_PTB12_LPUART3_CTS_B

IOMUXC_PTB12_LPI2C3_SCL

IOMUXC_PTB12_TPM3_CH4

IOMUXC_PTB12_I2S3_RXD0

IOMUXC_PTB12_MICFIL0_CLK01

IOMUXC_PTB12_WUU0_P24

IOMUXC_PTB13_CMP1_IN1

IOMUXC_PTB13_PTB13

IOMUXC_PTB13_FXIO0_D29

IOMUXC_PTB13_LPSPI3_PCS0

IOMUXC_PTB13_LPUART3_RTS_B

IOMUXC_PTB13_I3C1_SCL

IOMUXC_PTB13_TPM3_CH5

IOMUXC_PTB13_I2S3_RX_BCLK

IOMUXC_PTB13_MICFIL0_DATA45

IOMUXC_PTB13_WDOG2_RST

IOMUXC_PTB13_LPTMR1_ALT3

IOMUXC_PTB13_WUU0_P25

IOMUXC_PTB14_CMP0_IN0

IOMUXC_PTB14_PTB14

IOMUXC_PTB14_FXIO0_D30

IOMUXC_PTB14_LPUART3_TX

IOMUXC_PTB14_I3C1_SDA

IOMUXC_PTB14_I2S3_RX_FS

IOMUXC_PTB14_MICFIL0_CLK01

IOMUXC_PTB14_LPTMR1_ALT2

IOMUXC_PTB14_WUU0_P26

IOMUXC_PTB15_CMP0_IN1

IOMUXC_PTB15_PTB15

IOMUXC_PTB15_FXIO0_D31

IOMUXC_PTB15_LPUART3_RX

IOMUXC_PTB15_I3C1_PUR

IOMUXC_PTB15_I2S3_MCLK

IOMUXC_PTB15_EXT_AUD_MCLK1

IOMUXC_PTB15_MICFIL0_DATA67

IOMUXC_PTB15_LPTMR1_ALT1

IOMUXC_PTB15_WUU0_P27

IOMUXC_PTC0_PTC0

IOMUXC_PTC0_LPSPI2_SIN

IOMUXC_PTC0_FLEXSPI1_B_DQS

IOMUXC_PTC0_TPM2_CLKIN

IOMUXC_PTC0_I2S3_RXD1

IOMUXC_PTC0_FLEXSPI0_A_DQS

IOMUXC_PTC0_MQS0_LEFT

IOMUXC_PTC0_LP_RTD_DBG_MUX_0

IOMUXC_PTC1_PTC1

IOMUXC_PTC1_LPSPI2_SOUT

IOMUXC_PTC1_FLEXSPI1_B_DATA7

IOMUXC_PTC1_TPM2_CH0

IOMUXC_PTC1_I2S3_TXD1

IOMUXC_PTC1_FLEXSPI0_A_DATA7

IOMUXC_PTC1_MQS0_RIGHT

IOMUXC_PTC1_LP_RTD_DBG_MUX_1

IOMUXC_PTC2_PTC2

IOMUXC_PTC2_LPSPI2_SCK

IOMUXC_PTC2_FLEXSPI1_B_DATA6

IOMUXC_PTC2_TPM2_CH1

IOMUXC_PTC2_I2S0_RX_BCLK

IOMUXC_PTC2_FLEXSPI0_A_DATA6

IOMUXC_PTC2_LP_RTD_DBG_MUX_2

IOMUXC_PTC3_PTC3

IOMUXC_PTC3_LPSPI2_PCS0

IOMUXC_PTC3_FLEXSPI1_B_DATA5

IOMUXC_PTC3_I2S0_RX_FS

IOMUXC_PTC3_FLEXSPI0_A_DATA5

IOMUXC_PTC3_LP_RTD_DBG_MUX_3

IOMUXC_PTC4_PTC4

IOMUXC_PTC4_LPSPI2_PCS1

IOMUXC_PTC4_FLEXSPI1_B_DATA4

IOMUXC_PTC4_I2S0_RXD0

IOMUXC_PTC4_FLEXSPI0_A_DATA4

IOMUXC_PTC4_LP_RTD_DBG_MUX_4

IOMUXC_PTC5_PTC5

IOMUXC_PTC5_LPSPI2_PCS2

IOMUXC_PTC5_FLEXSPI1_B_SS0_B

IOMUXC_PTC5_FLEXSPI1_B_SCLK_B

IOMUXC_PTC5_FLEXSPI1_A_SS0_B

IOMUXC_PTC5_I2S0_RXD1

IOMUXC_PTC5_FLEXSPI0_A_SS0_B

IOMUXC_PTC5_FLEXSPI0_A_SCLK_B

IOMUXC_PTC5_LP_RTD_DBG_MUX_5

IOMUXC_PTC6_PTC6

IOMUXC_PTC6_LPSPI2_PCS3

IOMUXC_PTC6_FLEXSPI1_B_SCLK

IOMUXC_PTC6_FLEXSPI1_A_SCLK

IOMUXC_PTC6_I2S0_TXD1

IOMUXC_PTC6_FLEXSPI0_A_SCLK

IOMUXC_PTC6_LP_RTD_DBG_MUX_6

IOMUXC_PTC7_PTC7

IOMUXC_PTC7_FLEXSPI1_B_DATA3

IOMUXC_PTC7_I2S0_TXD0

IOMUXC_PTC7_FLEXSPI0_A_DATA3

IOMUXC_PTC7_LP_RTD_DBG_MUX_7

IOMUXC_PTC8_PTC8

IOMUXC_PTC8_FLEXSPI1_B_DATA2

IOMUXC_PTC8_I2S0_TX_BCLK

IOMUXC_PTC8_FLEXSPI0_A_DATA2

IOMUXC_PTC8_LP_RTD_DBG_MUX_8

IOMUXC_PTC9_PTC9

IOMUXC_PTC9_FLEXSPI1_B_DATA1

IOMUXC_PTC9_I2S0_TX_FS

IOMUXC_PTC9_FLEXSPI0_A_DATA1

IOMUXC_PTC9_LP_RTD_DBG_MUX_9

IOMUXC_PTC10_PTC10

IOMUXC_PTC10_FLEXSPI1_B_DATA0

IOMUXC_PTC10_I2S0_MCLK

IOMUXC_PTC10_FLEXSPI0_A_DATA0

IOMUXC_PTC10_EXT_AUD_MCLK1

IOMUXC_PTC10_LP_RTD_DBG_MUX_10

IOMUXC_PTC11_PTC11

IOMUXC_PTC11_FLEXSPI1_B_SS0_B

IOMUXC_PTC11_FLEXSPI1_B_SS1_B

IOMUXC_PTC11_TPM3_CLKIN

IOMUXC_PTC11_I2S1_RXD3

IOMUXC_PTC11_FLEXSPI0_A_SS0_B

IOMUXC_PTC11_FLEXSPI0_A_SS1_B

IOMUXC_PTC11_CLKOUT0

IOMUXC_PTC11_LP_RTD_DBG_MUX_11

IOMUXC_PTC12_PTC12

IOMUXC_PTC12_FLEXSPI1_A_DQS

IOMUXC_PTC12_TPM3_CH0

IOMUXC_PTC12_I2S1_RXD2

IOMUXC_PTC12_FLEXSPI0_B_DQS

IOMUXC_PTC12_TRACE0_CLKOUT

IOMUXC_PTC12_LP_RTD_DBG_MUX_12

IOMUXC_PTC13_PTC13

IOMUXC_PTC13_LPSPI3_SIN

IOMUXC_PTC13_FLEXSPI1_A_DATA7

IOMUXC_PTC13_TPM3_CH1

IOMUXC_PTC13_I2S1_TXD3

IOMUXC_PTC13_FLEXSPI0_B_DATA7

IOMUXC_PTC13_TRACE0_D0

IOMUXC_PTC13_LP_RTD_DBG_MUX_13

IOMUXC_PTC14_PTC14

IOMUXC_PTC14_LPSPI3_SOUT

IOMUXC_PTC14_FLEXSPI1_A_DATA6

IOMUXC_PTC14_TPM3_CH2

IOMUXC_PTC14_I2S1_TXD2

IOMUXC_PTC14_FLEXSPI0_B_DATA6

IOMUXC_PTC14_TRACE0_D1

IOMUXC_PTC14_LP_RTD_DBG_MUX_14

IOMUXC_PTC15_PTC15

IOMUXC_PTC15_LPSPI3_SCK

IOMUXC_PTC15_FLEXSPI1_A_DATA5

IOMUXC_PTC15_TPM3_CH3

IOMUXC_PTC15_I2S1_RX_BCLK

IOMUXC_PTC15_FLEXSPI0_B_DATA5

IOMUXC_PTC15_TRACE0_D2

IOMUXC_PTC15_LP_RTD_DBG_MUX_15

IOMUXC_PTC16_PTC16

IOMUXC_PTC16_LPSPI3_PCS0

IOMUXC_PTC16_FLEXSPI1_A_DATA4

IOMUXC_PTC16_TPM3_CH4

IOMUXC_PTC16_I2S1_RX_FS

IOMUXC_PTC16_FLEXSPI0_B_DATA4

IOMUXC_PTC16_TRACE0_D3

IOMUXC_PTC16_LP_RTD_DBG_MUX_16

IOMUXC_PTC17_PTC17

IOMUXC_PTC17_LPSPI3_PCS1

IOMUXC_PTC17_FLEXSPI1_A_SS0_B

IOMUXC_PTC17_FLEXSPI1_A_SCLK_B

IOMUXC_PTC17_TPM3_CH5

IOMUXC_PTC17_I2S1_RXD0

IOMUXC_PTC17_FLEXSPI0_B_SS0_B

IOMUXC_PTC17_FLEXSPI0_B_SCLK_B

IOMUXC_PTC17_LP_RTD_DBG_MUX_17

IOMUXC_PTC18_PTC18

IOMUXC_PTC18_LPSPI3_PCS2

IOMUXC_PTC18_FLEXSPI1_A_SCLK

IOMUXC_PTC18_I2S1_RXD1

IOMUXC_PTC18_FLEXSPI0_B_SCLK

IOMUXC_PTC18_LP_RTD_DBG_MUX_18

IOMUXC_PTC19_PTC19

IOMUXC_PTC19_LPSPI3_PCS3

IOMUXC_PTC19_FLEXSPI1_A_DATA3

IOMUXC_PTC19_I2S1_TXD1

IOMUXC_PTC19_FLEXSPI0_B_DATA3

IOMUXC_PTC19_TRACE0_D4

IOMUXC_PTC19_LP_RTD_DBG_MUX_19

IOMUXC_PTC20_PTC20

IOMUXC_PTC20_FLEXSPI1_A_DATA2

IOMUXC_PTC20_I2S1_TXD0

IOMUXC_PTC20_FLEXSPI0_B_DATA2

IOMUXC_PTC20_TRACE0_D5

IOMUXC_PTC21_PTC21

IOMUXC_PTC21_FLEXSPI1_A_DATA1

IOMUXC_PTC21_I2S1_TX_BCLK

IOMUXC_PTC21_FLEXSPI0_B_DATA1

IOMUXC_PTC21_TRACE0_D6

IOMUXC_PTC22_PTC22

IOMUXC_PTC22_FLEXSPI1_A_DATA0

IOMUXC_PTC22_I2S1_TX_FS

IOMUXC_PTC22_FLEXSPI0_B_DATA0

IOMUXC_PTC22_TRACE0_D7

IOMUXC_PTC23_PTC23

IOMUXC_PTC23_FLEXSPI1_A_SS0_B

IOMUXC_PTC23_FLEXSPI1_A_SS1_B

IOMUXC_PTC23_I2S1_MCLK

IOMUXC_PTC23_FLEXSPI0_B_SS0_B

IOMUXC_PTC23_FLEXSPI0_B_SS1_B

IOMUXC_PTC23_CLKOUT0

IOMUXC_PTD0_PTD0

IOMUXC_PTD0_I2S6_RX_BCLK

IOMUXC_PTD0_SDHC0_RESET_B

IOMUXC_PTD0_FLEXSPI2_B_DQS

IOMUXC_PTD0_CLKOUT2

IOMUXC_PTD0_EPDC0_SDCLK_B

IOMUXC_PTD0_LP_APD_DBG_MUX_0

IOMUXC_PTD0_CLKOUT1

IOMUXC_PTD0_DEBUG_MUX0_0

IOMUXC_PTD0_DEBUG_MUX1_0

IOMUXC_PTD1_PTD1

IOMUXC_PTD1_I2S6_RX_FS

IOMUXC_PTD1_SDHC0_CMD

IOMUXC_PTD1_FLEXSPI2_B_DATA7

IOMUXC_PTD1_EPDC0_SDCLK

IOMUXC_PTD1_DPI0_PCLK

IOMUXC_PTD1_LP_APD_DBG_MUX_1

IOMUXC_PTD1_DEBUG_MUX0_1

IOMUXC_PTD1_DEBUG_MUX1_1

IOMUXC_PTD2_PTD2

IOMUXC_PTD2_I2S6_RXD0

IOMUXC_PTD2_SDHC0_CLK

IOMUXC_PTD2_FLEXSPI2_B_DATA6

IOMUXC_PTD2_EPDC0_SDLE

IOMUXC_PTD2_DPI0_HSYNC

IOMUXC_PTD2_LP_APD_DBG_MUX_2

IOMUXC_PTD2_DEBUG_MUX0_2

IOMUXC_PTD2_DEBUG_MUX1_2

IOMUXC_PTD3_PTD3

IOMUXC_PTD3_I2S6_RXD1

IOMUXC_PTD3_SDHC0_D7

IOMUXC_PTD3_FLEXSPI2_B_DATA5

IOMUXC_PTD3_EPDC0_GDSP

IOMUXC_PTD3_DPI0_VSYNC

IOMUXC_PTD3_LP_APD_DBG_MUX_3

IOMUXC_PTD3_DEBUG_MUX0_3

IOMUXC_PTD3_DEBUG_MUX1_3

IOMUXC_PTD4_PTD4

IOMUXC_PTD4_EXT_AUD_MCLK3

IOMUXC_PTD4_SDHC0_VS

IOMUXC_PTD4_TPM8_CH5

IOMUXC_PTD4_I2S6_MCLK

IOMUXC_PTD4_SDHC0_D6

IOMUXC_PTD4_FLEXSPI2_B_DATA4

IOMUXC_PTD4_EPDC0_SDCE0

IOMUXC_PTD4_DPI0_DE

IOMUXC_PTD4_LP_APD_DBG_MUX_4

IOMUXC_PTD4_DEBUG_MUX0_4

IOMUXC_PTD4_DEBUG_MUX1_4

IOMUXC_PTD5_PTD5

IOMUXC_PTD5_SDHC0_CD

IOMUXC_PTD5_TPM8_CH4

IOMUXC_PTD5_I2S6_TX_BCLK

IOMUXC_PTD5_SDHC0_D5

IOMUXC_PTD5_FLEXSPI2_B_SS0_B

IOMUXC_PTD5_FLEXSPI2_B_SCLK_B

IOMUXC_PTD5_EPDC0_D0

IOMUXC_PTD5_DPI0_D0

IOMUXC_PTD5_LP_APD_DBG_MUX_5

IOMUXC_PTD5_DEBUG_MUX0_5

IOMUXC_PTD5_DEBUG_MUX1_5

IOMUXC_PTD6_PTD6

IOMUXC_PTD6_SDHC0_WP

IOMUXC_PTD6_TPM8_CH3

IOMUXC_PTD6_I2S6_TX_FS

IOMUXC_PTD6_SDHC0_D4

IOMUXC_PTD6_FLEXSPI2_B_SCLK

IOMUXC_PTD6_EPDC0_D1

IOMUXC_PTD6_DPI0_D1

IOMUXC_PTD6_LP_APD_DBG_MUX_6

IOMUXC_PTD6_DEBUG_MUX0_6

IOMUXC_PTD6_DEBUG_MUX1_6

IOMUXC_PTD7_PTD7

IOMUXC_PTD7_TPM8_CH2

IOMUXC_PTD7_I2S6_TXD0

IOMUXC_PTD7_SDHC0_D3

IOMUXC_PTD7_FLEXSPI2_B_DATA3

IOMUXC_PTD7_EPDC0_D2

IOMUXC_PTD7_DPI0_D2

IOMUXC_PTD7_LP_APD_DBG_MUX_7

IOMUXC_PTD7_DEBUG_MUX0_7

IOMUXC_PTD7_DEBUG_MUX1_7

IOMUXC_PTD8_PTD8

IOMUXC_PTD8_TPM8_CH1

IOMUXC_PTD8_I2S6_TXD1

IOMUXC_PTD8_SDHC0_D2

IOMUXC_PTD8_FLEXSPI2_B_DATA2

IOMUXC_PTD8_EPDC0_D3

IOMUXC_PTD8_DPI0_D3

IOMUXC_PTD8_LP_APD_DBG_MUX_8

IOMUXC_PTD8_DEBUG_MUX1_8

IOMUXC_PTD9_PTD9

IOMUXC_PTD9_TPM8_CLKIN

IOMUXC_PTD9_I2S6_TXD2

IOMUXC_PTD9_SDHC0_D1

IOMUXC_PTD9_FLEXSPI2_B_DATA1

IOMUXC_PTD9_EPDC0_D4

IOMUXC_PTD9_DPI0_D4

IOMUXC_PTD9_LP_APD_DBG_MUX_9

IOMUXC_PTD9_DEBUG_MUX1_9

IOMUXC_PTD10_PTD10

IOMUXC_PTD10_TPM8_CH0

IOMUXC_PTD10_I2S6_TXD3

IOMUXC_PTD10_SDHC0_D0

IOMUXC_PTD10_FLEXSPI2_B_DATA0

IOMUXC_PTD10_EPDC0_D5

IOMUXC_PTD10_DPI0_D5

IOMUXC_PTD10_LP_APD_DBG_MUX_10

IOMUXC_PTD10_DEBUG_MUX1_10

IOMUXC_PTD11_PTD11

IOMUXC_PTD11_TPM8_CH5

IOMUXC_PTD11_I2S6_RXD2

IOMUXC_PTD11_SDHC0_DQS

IOMUXC_PTD11_FLEXSPI2_B_SS0_B

IOMUXC_PTD11_FLEXSPI2_A_SS1_B

IOMUXC_PTD11_EPDC0_D6

IOMUXC_PTD11_DPI0_D6

IOMUXC_PTD11_LP_APD_DBG_MUX_11

IOMUXC_PTD12_PTD12

IOMUXC_PTD12_USB0_ID

IOMUXC_PTD12_SDHC2_D3

IOMUXC_PTD12_I2S7_RX_BCLK

IOMUXC_PTD12_SDHC1_DQS

IOMUXC_PTD12_FLEXSPI2_A_SS0_B

IOMUXC_PTD12_FLEXSPI2_B_SS1_B

IOMUXC_PTD12_EPDC0_D7

IOMUXC_PTD12_DPI0_D7

IOMUXC_PTD12_LP_APD_DBG_MUX_12

IOMUXC_PTD13_PTD13

IOMUXC_PTD13_SPDIF_IN4

IOMUXC_PTD13_USB0_PWR

IOMUXC_PTD13_SDHC2_D2

IOMUXC_PTD13_I2S7_RX_FS

IOMUXC_PTD13_SDHC1_RESET_B

IOMUXC_PTD13_FLEXSPI2_A_SCLK

IOMUXC_PTD13_CLKOUT2

IOMUXC_PTD13_EPDC0_D8

IOMUXC_PTD13_DPI0_D8

IOMUXC_PTD13_CLKOUT1

IOMUXC_PTD13_LP_APD_DBG_MUX_13

IOMUXC_PTD14_PTD14

IOMUXC_PTD14_SPDIF_SRCLK

IOMUXC_PTD14_USB0_OC

IOMUXC_PTD14_SDHC2_D1

IOMUXC_PTD14_I2S7_RXD0

IOMUXC_PTD14_SDHC1_D7

IOMUXC_PTD14_FLEXSPI2_A_DATA3

IOMUXC_PTD14_TRACE0_D7

IOMUXC_PTD14_EPDC0_D9

IOMUXC_PTD14_DPI0_D9

IOMUXC_PTD14_LP_APD_DBG_MUX_14

IOMUXC_PTD15_PTD15

IOMUXC_PTD15_SPDIF_IN3

IOMUXC_PTD15_SDHC1_VS

IOMUXC_PTD15_SDHC2_D0

IOMUXC_PTD15_I2S7_TX_BCLK

IOMUXC_PTD15_SDHC1_D6

IOMUXC_PTD15_FLEXSPI2_A_DATA2

IOMUXC_PTD15_TRACE0_D6

IOMUXC_PTD15_EPDC0_D10

IOMUXC_PTD15_DPI0_D10

IOMUXC_PTD15_LP_APD_DBG_MUX_15

IOMUXC_PTD16_PTD16

IOMUXC_PTD16_FXIO1_D31

IOMUXC_PTD16_LPSPI4_PCS1

IOMUXC_PTD16_SPDIF_PLOCK

IOMUXC_PTD16_SDHC1_CD

IOMUXC_PTD16_SDHC2_CLK

IOMUXC_PTD16_I2S7_TX_FS

IOMUXC_PTD16_SDHC1_D5

IOMUXC_PTD16_FLEXSPI2_A_DATA1

IOMUXC_PTD16_TRACE0_D5

IOMUXC_PTD16_EPDC0_D11

IOMUXC_PTD16_DPI0_D11

IOMUXC_PTD16_LP_APD_DBG_MUX_16

IOMUXC_PTD17_PTD17

IOMUXC_PTD17_FXIO1_D30

IOMUXC_PTD17_LPSPI4_PCS2

IOMUXC_PTD17_EXT_AUD_MCLK3

IOMUXC_PTD17_SDHC1_WP

IOMUXC_PTD17_SDHC2_CMD

IOMUXC_PTD17_I2S7_TXD0

IOMUXC_PTD17_SDHC1_D4

IOMUXC_PTD17_FLEXSPI2_A_DATA0

IOMUXC_PTD17_TRACE0_D4

IOMUXC_PTD17_EPDC0_D12

IOMUXC_PTD17_DPI0_D12

IOMUXC_PTD17_LP_APD_DBG_MUX_17

IOMUXC_PTD18_PTD18

IOMUXC_PTD18_FXIO1_D29

IOMUXC_PTD18_LPSPI4_PCS3

IOMUXC_PTD18_SPDIF_OUTCLK

IOMUXC_PTD18_EXT_AUD_MCLK3

IOMUXC_PTD18_TPM8_CH0

IOMUXC_PTD18_I2S7_MCLK

IOMUXC_PTD18_SDHC1_D3

IOMUXC_PTD18_FLEXSPI2_A_DQS

IOMUXC_PTD18_TRACE0_D3

IOMUXC_PTD18_EPDC0_D13

IOMUXC_PTD18_DPI0_D13

IOMUXC_PTD18_LP_APD_DBG_MUX_18

IOMUXC_PTD19_PTD19

IOMUXC_PTD19_FXIO1_D28

IOMUXC_PTD19_SPDIF_IN1

IOMUXC_PTD19_TPM8_CH1

IOMUXC_PTD19_I2S6_RXD3

IOMUXC_PTD19_SDHC1_D2

IOMUXC_PTD19_FLEXSPI2_A_DATA7

IOMUXC_PTD19_TRACE0_D2

IOMUXC_PTD19_EPDC0_D14

IOMUXC_PTD19_DPI0_D14

IOMUXC_PTD19_LP_APD_DBG_MUX_19

IOMUXC_PTD20_PTD20

IOMUXC_PTD20_FXIO1_D27

IOMUXC_PTD20_LPSPI4_SIN

IOMUXC_PTD20_SPDIF_OUT1

IOMUXC_PTD20_TPM8_CLKIN

IOMUXC_PTD20_I2S7_RXD1

IOMUXC_PTD20_SDHC1_D1

IOMUXC_PTD20_FLEXSPI2_A_DATA6

IOMUXC_PTD20_TRACE0_D1

IOMUXC_PTD20_EPDC0_D15

IOMUXC_PTD20_DPI0_D15

IOMUXC_PTD20_LP_APD_DBG_MUX_20

IOMUXC_PTD21_PTD21

IOMUXC_PTD21_FXIO1_D26

IOMUXC_PTD21_LPSPI4_SOUT

IOMUXC_PTD21_SPDIF_IN2

IOMUXC_PTD21_USB1_PWR

IOMUXC_PTD21_TPM8_CH2

IOMUXC_PTD21_I2S7_TXD1

IOMUXC_PTD21_SDHC1_D0

IOMUXC_PTD21_FLEXSPI2_A_DATA5

IOMUXC_PTD21_TRACE0_D0

IOMUXC_PTD21_DPI0_D16

IOMUXC_PTD21_WDOG5_RST

IOMUXC_PTD21_LP_APD_DBG_MUX_21

IOMUXC_PTD22_PTD22

IOMUXC_PTD22_FXIO1_D25

IOMUXC_PTD22_LPSPI4_SCK

IOMUXC_PTD22_SPDIF_OUT2

IOMUXC_PTD22_USB1_OC

IOMUXC_PTD22_TPM8_CH3

IOMUXC_PTD22_I2S7_TXD2

IOMUXC_PTD22_SDHC1_CLK

IOMUXC_PTD22_FLEXSPI2_A_DATA4

IOMUXC_PTD22_TRACE0_CLKOUT

IOMUXC_PTD22_DPI0_D17

IOMUXC_PTD22_LP_APD_DBG_MUX_22

IOMUXC_PTD23_PTD23

IOMUXC_PTD23_FXIO1_D24

IOMUXC_PTD23_LPSPI4_PCS0

IOMUXC_PTD23_USB1_ID

IOMUXC_PTD23_TPM8_CH4

IOMUXC_PTD23_I2S7_TXD3

IOMUXC_PTD23_SDHC1_CMD

IOMUXC_PTD23_FLEXSPI2_A_SS0_B

IOMUXC_PTD23_FLEXSPI2_A_SCLK_B

IOMUXC_PTD23_DPI0_D18

IOMUXC_PTD23_LP_APD_DBG_MUX_23

IOMUXC_PTE0_PTE0

IOMUXC_PTE0_FXIO1_D23

IOMUXC_PTE0_SPDIF_IN4

IOMUXC_PTE0_LPUART4_CTS_B

IOMUXC_PTE0_LPI2C4_SCL

IOMUXC_PTE0_TPM8_CLKIN

IOMUXC_PTE0_I2S7_RXD2

IOMUXC_PTE0_SDHC2_D1

IOMUXC_PTE0_FLEXSPI2_B_DQS

IOMUXC_PTE0_ENET0_CRS

IOMUXC_PTE0_DBI0_WRX

IOMUXC_PTE0_DPI0_D19

IOMUXC_PTE0_WUU1_P0

IOMUXC_PTE0_DEBUG_MUX0_8

IOMUXC_PTE0_DEBUG_MUX1_11

IOMUXC_PTE1_PTE1

IOMUXC_PTE1_FXIO1_D22

IOMUXC_PTE1_SPDIF_SRCLK

IOMUXC_PTE1_LPUART4_RTS_B

IOMUXC_PTE1_LPI2C4_SDA

IOMUXC_PTE1_TPM8_CH0

IOMUXC_PTE1_I2S7_RXD3

IOMUXC_PTE1_SDHC2_D0

IOMUXC_PTE1_FLEXSPI2_B_DATA7

IOMUXC_PTE1_ENET0_COL

IOMUXC_PTE1_DBI0_CSX

IOMUXC_PTE1_DPI0_D20

IOMUXC_PTE1_WUU1_P1

IOMUXC_PTE1_DEBUG_MUX0_9

IOMUXC_PTE1_DEBUG_MUX1_12

IOMUXC_PTE2_PTE2

IOMUXC_PTE2_FXIO1_D21

IOMUXC_PTE2_SPDIF_IN3

IOMUXC_PTE2_LPUART4_TX

IOMUXC_PTE2_LPI2C4_HREQ

IOMUXC_PTE2_TPM8_CH1

IOMUXC_PTE2_EXT_AUD_MCLK3

IOMUXC_PTE2_SDHC2_CLK

IOMUXC_PTE2_FLEXSPI2_B_DATA6

IOMUXC_PTE2_ENET0_TXER

IOMUXC_PTE2_DBI0_DCX

IOMUXC_PTE2_DPI0_D21

IOMUXC_PTE2_LP_HV_DBG_MUX_0

IOMUXC_PTE2_DEBUG_MUX0_10

IOMUXC_PTE2_DEBUG_MUX1_13

IOMUXC_PTE3_PTE3

IOMUXC_PTE3_FXIO1_D20

IOMUXC_PTE3_SPDIF_PLOCK

IOMUXC_PTE3_LPUART4_RX

IOMUXC_PTE3_TPM8_CH2

IOMUXC_PTE3_I2S6_MCLK

IOMUXC_PTE3_SDHC2_CMD

IOMUXC_PTE3_FLEXSPI2_B_DATA5

IOMUXC_PTE3_ENET0_TXCLK

IOMUXC_PTE3_DBI0_RWX

IOMUXC_PTE3_DPI0_D22

IOMUXC_PTE3_WUU1_P2

IOMUXC_PTE3_DEBUG_MUX0_11

IOMUXC_PTE3_DEBUG_MUX1_14

IOMUXC_PTE4_PTE4

IOMUXC_PTE4_FXIO1_D19

IOMUXC_PTE4_SPDIF_OUTCLK

IOMUXC_PTE4_LPUART5_CTS_B

IOMUXC_PTE4_LPI2C5_SCL

IOMUXC_PTE4_TPM8_CH3

IOMUXC_PTE4_I2S6_RX_BCLK

IOMUXC_PTE4_SDHC2_D3

IOMUXC_PTE4_FLEXSPI2_B_DATA4

IOMUXC_PTE4_ENET0_TXD3

IOMUXC_PTE4_DBI0_E

IOMUXC_PTE4_DPI0_D23

IOMUXC_PTE4_WUU1_P3

IOMUXC_PTE4_DEBUG_MUX0_12

IOMUXC_PTE4_DEBUG_MUX1_15

IOMUXC_PTE5_PTE5

IOMUXC_PTE5_FXIO1_D18

IOMUXC_PTE5_SPDIF_IN1

IOMUXC_PTE5_LPUART5_RTS_B

IOMUXC_PTE5_LPI2C5_SDA

IOMUXC_PTE5_TPM8_CH4

IOMUXC_PTE5_I2S6_RX_FS

IOMUXC_PTE5_SDHC2_D2

IOMUXC_PTE5_FLEXSPI2_B_SS0_B

IOMUXC_PTE5_ENET0_TXD2

IOMUXC_PTE5_DBI0_D0

IOMUXC_PTE5_LP_HV_DBG_MUX_1

IOMUXC_PTE5_DEBUG_MUX0_13

IOMUXC_PTE5_DEBUG_MUX1_16

IOMUXC_PTE6_PTE6

IOMUXC_PTE6_FXIO1_D17

IOMUXC_PTE6_SPDIF_OUT1

IOMUXC_PTE6_LPUART5_TX

IOMUXC_PTE6_LPI2C5_HREQ

IOMUXC_PTE6_TPM8_CH5

IOMUXC_PTE6_I2S6_RXD0

IOMUXC_PTE6_SDHC2_D4

IOMUXC_PTE6_FLEXSPI2_B_SCLK

IOMUXC_PTE6_ENET0_RXCLK

IOMUXC_PTE6_DBI0_D1

IOMUXC_PTE6_LP_HV_DBG_MUX_2

IOMUXC_PTE6_WDOG5_RST

IOMUXC_PTE6_DEBUG_MUX0_14

IOMUXC_PTE6_DEBUG_MUX1_17

IOMUXC_PTE7_PTE7

IOMUXC_PTE7_FXIO1_D16

IOMUXC_PTE7_SPDIF_IN2

IOMUXC_PTE7_LPUART5_RX

IOMUXC_PTE7_LPI2C6_HREQ

IOMUXC_PTE7_TPM4_CLKIN

IOMUXC_PTE7_I2S6_RXD1

IOMUXC_PTE7_SDHC2_D5

IOMUXC_PTE7_FLEXSPI2_B_DATA3

IOMUXC_PTE7_ENET0_RXD3

IOMUXC_PTE7_DBI0_D2

IOMUXC_PTE7_EPDC0_BDR1

IOMUXC_PTE7_WUU1_P4

IOMUXC_PTE7_DEBUG_MUX0_15

IOMUXC_PTE7_DEBUG_MUX1_18

IOMUXC_PTE8_PTE8

IOMUXC_PTE8_FXIO1_D15

IOMUXC_PTE8_LPSPI4_PCS1

IOMUXC_PTE8_LPUART6_CTS_B

IOMUXC_PTE8_LPI2C6_SCL

IOMUXC_PTE8_TPM4_CH0

IOMUXC_PTE8_I2S6_RXD2

IOMUXC_PTE8_SDHC2_D6

IOMUXC_PTE8_FLEXSPI2_B_DATA2

IOMUXC_PTE8_ENET0_RXD2

IOMUXC_PTE8_DBI0_D3

IOMUXC_PTE8_EPDC0_BDR0

IOMUXC_PTE8_LP_HV_DBG_MUX_3

IOMUXC_PTE8_DEBUG_MUX1_19

IOMUXC_PTE9_PTE9

IOMUXC_PTE9_FXIO1_D14

IOMUXC_PTE9_LPSPI4_PCS2

IOMUXC_PTE9_LPUART6_RTS_B

IOMUXC_PTE9_LPI2C6_SDA

IOMUXC_PTE9_TPM4_CH1

IOMUXC_PTE9_I2S6_RXD3

IOMUXC_PTE9_SDHC2_D7

IOMUXC_PTE9_FLEXSPI2_B_DATA1

IOMUXC_PTE9_ENET0_1588_TMR3

IOMUXC_PTE9_DBI0_D4

IOMUXC_PTE9_EPDC0_VCOM1

IOMUXC_PTE9_LP_HV_DBG_MUX_4

IOMUXC_PTE9_DEBUG_MUX1_20

IOMUXC_PTE10_PTE10

IOMUXC_PTE10_FXIO1_D13

IOMUXC_PTE10_LPSPI4_PCS3

IOMUXC_PTE10_LPUART6_TX

IOMUXC_PTE10_I3C2_SCL

IOMUXC_PTE10_TPM4_CH2

IOMUXC_PTE10_I2S6_TX_BCLK

IOMUXC_PTE10_SDHC2_DQS

IOMUXC_PTE10_FLEXSPI2_B_DATA0

IOMUXC_PTE10_ENET0_1588_TMR2

IOMUXC_PTE10_DBI0_D5

IOMUXC_PTE10_EPDC0_VCOM0

IOMUXC_PTE10_LP_HV_DBG_MUX_5

IOMUXC_PTE10_DEBUG_MUX1_21

IOMUXC_PTE11_PTE11

IOMUXC_PTE11_FXIO1_D12

IOMUXC_PTE11_SPDIF_OUT2

IOMUXC_PTE11_LPUART6_RX

IOMUXC_PTE11_I3C2_SDA

IOMUXC_PTE11_TPM4_CH3

IOMUXC_PTE11_I2S6_TX_FS

IOMUXC_PTE11_FLEXSPI2_B_SCLK_B

IOMUXC_PTE11_FLEXSPI2_B_SS0_B

IOMUXC_PTE11_ENET0_1588_TMR1

IOMUXC_PTE11_DBI0_D6

IOMUXC_PTE11_EPDC0_PWRCTRL0

IOMUXC_PTE11_LP_HV_DBG_MUX_6

IOMUXC_PTE12_PTE12

IOMUXC_PTE12_FXIO1_D11

IOMUXC_PTE12_LPSPI4_SIN

IOMUXC_PTE12_LPUART7_CTS_B

IOMUXC_PTE12_LPI2C7_SCL

IOMUXC_PTE12_TPM4_CH4

IOMUXC_PTE12_I2S6_TXD0

IOMUXC_PTE12_SDHC2_RESET_B

IOMUXC_PTE12_FLEXSPI2_B_SS1_B

IOMUXC_PTE12_ENET0_1588_TMR0

IOMUXC_PTE12_DBI0_D7

IOMUXC_PTE12_EPDC0_PWRCTRL1

IOMUXC_PTE12_WUU1_P5

IOMUXC_PTE13_PTE13

IOMUXC_PTE13_FXIO1_D10

IOMUXC_PTE13_LPSPI4_SOUT

IOMUXC_PTE13_LPUART7_RTS_B

IOMUXC_PTE13_LPI2C7_SDA

IOMUXC_PTE13_TPM4_CH5

IOMUXC_PTE13_I2S6_TXD1

IOMUXC_PTE13_SDHC1_WP

IOMUXC_PTE13_ENET0_1588_CLKIN

IOMUXC_PTE13_DBI0_D8

IOMUXC_PTE13_EPDC0_PWRCTRL2

IOMUXC_PTE13_LP_HV_DBG_MUX_7

IOMUXC_PTE14_PTE14

IOMUXC_PTE14_FXIO1_D9

IOMUXC_PTE14_LPSPI4_SCK

IOMUXC_PTE14_LPUART7_TX

IOMUXC_PTE14_LPI2C7_HREQ

IOMUXC_PTE14_TPM5_CLKIN

IOMUXC_PTE14_I2S6_TXD2

IOMUXC_PTE14_SDHC1_CD

IOMUXC_PTE14_ENET0_MDIO

IOMUXC_PTE14_DBI0_D9

IOMUXC_PTE14_EPDC0_PWRCTRL3

IOMUXC_PTE14_LP_HV_DBG_MUX_8

IOMUXC_PTE15_PTE15

IOMUXC_PTE15_FXIO1_D8

IOMUXC_PTE15_LPSPI4_PCS0

IOMUXC_PTE15_LPUART7_RX

IOMUXC_PTE15_I3C2_PUR

IOMUXC_PTE15_TPM5_CH0

IOMUXC_PTE15_I2S6_TXD3

IOMUXC_PTE15_MQS1_LEFT

IOMUXC_PTE15_ENET0_MDC

IOMUXC_PTE15_DBI0_D10

IOMUXC_PTE15_EPDC0_PWRCOM

IOMUXC_PTE15_WUU1_P6

IOMUXC_PTE16_PTE16

IOMUXC_PTE16_FXIO1_D7

IOMUXC_PTE16_LPSPI5_PCS1

IOMUXC_PTE16_LPUART4_CTS_B

IOMUXC_PTE16_LPI2C4_SCL

IOMUXC_PTE16_TPM5_CH1

IOMUXC_PTE16_MQS1_LEFT

IOMUXC_PTE16_MQS1_RIGHT

IOMUXC_PTE16_USB0_ID

IOMUXC_PTE16_ENET0_TXEN

IOMUXC_PTE16_DBI0_D11

IOMUXC_PTE16_EPDC0_PWRIRQ

IOMUXC_PTE16_WDOG3_RST

IOMUXC_PTE16_LP_HV_DBG_MUX_9

IOMUXC_PTE17_PTE17

IOMUXC_PTE17_FXIO1_D6

IOMUXC_PTE17_LPSPI5_PCS2

IOMUXC_PTE17_LPUART4_RTS_B

IOMUXC_PTE17_LPI2C4_SDA

IOMUXC_PTE17_MQS1_RIGHT

IOMUXC_PTE17_SDHC1_VS

IOMUXC_PTE17_USB0_PWR

IOMUXC_PTE17_ENET0_RXER

IOMUXC_PTE17_DBI0_D12

IOMUXC_PTE17_EPDC0_PWRSTAT

IOMUXC_PTE17_LP_HV_DBG_MUX_10

IOMUXC_PTE18_PTE18

IOMUXC_PTE18_FXIO1_D5

IOMUXC_PTE18_LPSPI5_PCS3

IOMUXC_PTE18_LPUART4_TX

IOMUXC_PTE18_LPI2C4_HREQ

IOMUXC_PTE18_I2S7_TX_BCLK

IOMUXC_PTE18_USB0_OC

IOMUXC_PTE18_ENET0_CRS_DV

IOMUXC_PTE18_DBI0_D13

IOMUXC_PTE18_EPDC0_PWRWAKE

IOMUXC_PTE18_LP_HV_DBG_MUX_11

IOMUXC_PTE19_PTE19

IOMUXC_PTE19_FXIO1_D4

IOMUXC_PTE19_LPUART4_RX

IOMUXC_PTE19_LPI2C5_HREQ

IOMUXC_PTE19_I3C2_PUR

IOMUXC_PTE19_I2S7_TX_FS

IOMUXC_PTE19_USB1_PWR

IOMUXC_PTE19_ENET0_REFCLK

IOMUXC_PTE19_DBI0_D14

IOMUXC_PTE19_EPDC0_GDCLK

IOMUXC_PTE19_WUU1_P7

IOMUXC_PTE20_PTE20

IOMUXC_PTE20_FXIO1_D3

IOMUXC_PTE20_LPSPI5_SIN

IOMUXC_PTE20_LPUART5_CTS_B

IOMUXC_PTE20_LPI2C5_SCL

IOMUXC_PTE20_I2S7_TXD0

IOMUXC_PTE20_USB1_OC

IOMUXC_PTE20_ENET0_RXD1

IOMUXC_PTE20_DBI0_D15

IOMUXC_PTE20_EPDC0_GDOE

IOMUXC_PTE20_LP_HV_DBG_MUX_12

IOMUXC_PTE21_PTE21

IOMUXC_PTE21_FXIO1_D2

IOMUXC_PTE21_LPSPI5_SOUT

IOMUXC_PTE21_LPUART5_RTS_B

IOMUXC_PTE21_LPI2C5_SDA

IOMUXC_PTE21_TPM6_CLKIN

IOMUXC_PTE21_I2S7_TXD1

IOMUXC_PTE21_USB1_ID

IOMUXC_PTE21_ENET0_RXD0

IOMUXC_PTE21_EPDC0_GDRL

IOMUXC_PTE21_WDOG4_RST

IOMUXC_PTE21_LP_HV_DBG_MUX_13

IOMUXC_PTE22_PTE22

IOMUXC_PTE22_FXIO1_D1

IOMUXC_PTE22_LPSPI5_SCK

IOMUXC_PTE22_LPUART5_TX

IOMUXC_PTE22_I3C2_SCL

IOMUXC_PTE22_TPM6_CH0

IOMUXC_PTE22_I2S7_TXD2

IOMUXC_PTE22_EXT_AUD_MCLK3

IOMUXC_PTE22_ENET0_TXD1

IOMUXC_PTE22_EPDC0_SDOED

IOMUXC_PTE22_CLKOUT2

IOMUXC_PTE22_LP_HV_DBG_MUX_14

IOMUXC_PTE23_PTE23

IOMUXC_PTE23_FXIO1_D0

IOMUXC_PTE23_LPSPI5_PCS0

IOMUXC_PTE23_LPUART5_RX

IOMUXC_PTE23_I3C2_SDA

IOMUXC_PTE23_TPM6_CH1

IOMUXC_PTE23_I2S7_TXD3

IOMUXC_PTE23_EXT_AUD_MCLK2

IOMUXC_PTE23_ENET0_TXD0

IOMUXC_PTE23_EPDC0_SDOEZ

IOMUXC_PTE23_CLKOUT1

IOMUXC_PTE23_LP_HV_DBG_MUX_15

IOMUXC_PTF0_PTF0

IOMUXC_PTF0_FXIO1_D0

IOMUXC_PTF0_LPUART6_CTS_B

IOMUXC_PTF0_LPI2C6_SCL

IOMUXC_PTF0_I2S7_RX_BCLK

IOMUXC_PTF0_SDHC1_D1

IOMUXC_PTF0_ENET0_RXD1

IOMUXC_PTF0_USB1_ID

IOMUXC_PTF0_EPDC0_SDOE

IOMUXC_PTF0_DPI0_D23

IOMUXC_PTF0_WUU1_P8

IOMUXC_PTF1_PTF1

IOMUXC_PTF1_FXIO1_D1

IOMUXC_PTF1_LPUART6_RTS_B

IOMUXC_PTF1_LPI2C6_SDA

IOMUXC_PTF1_I2S7_RX_FS

IOMUXC_PTF1_SDHC1_D0

IOMUXC_PTF1_ENET0_RXD0

IOMUXC_PTF1_LP_HV_DBG_MUX_16

IOMUXC_PTF1_EPDC0_SDSHR

IOMUXC_PTF1_DPI0_D22

IOMUXC_PTF1_WDOG3_RST

IOMUXC_PTF1_DEBUG_MUX0_16

IOMUXC_PTF1_DEBUG_MUX1_22

IOMUXC_PTF2_PTF2

IOMUXC_PTF2_FXIO1_D2

IOMUXC_PTF2_LPUART6_TX

IOMUXC_PTF2_LPI2C6_HREQ

IOMUXC_PTF2_I2S7_RXD0

IOMUXC_PTF2_SDHC1_CLK

IOMUXC_PTF2_ENET0_TXD1

IOMUXC_PTF2_USB0_ID

IOMUXC_PTF2_EPDC0_SDCE9

IOMUXC_PTF2_DPI0_D21

IOMUXC_PTF2_LP_HV_DBG_MUX_17

IOMUXC_PTF2_DEBUG_MUX0_17

IOMUXC_PTF2_DEBUG_MUX1_23

IOMUXC_PTF3_PTF3

IOMUXC_PTF3_FXIO1_D3

IOMUXC_PTF3_LPUART6_RX

IOMUXC_PTF3_LPI2C7_HREQ

IOMUXC_PTF3_I2S7_RXD1

IOMUXC_PTF3_SDHC1_CMD

IOMUXC_PTF3_ENET0_TXD0

IOMUXC_PTF3_USB0_PWR

IOMUXC_PTF3_EPDC0_SDCE8

IOMUXC_PTF3_DPI0_D20

IOMUXC_PTF3_WUU1_P9

IOMUXC_PTF3_DEBUG_MUX1_24

IOMUXC_PTF4_PTF4

IOMUXC_PTF4_FXIO1_D4

IOMUXC_PTF4_LPSPI4_PCS1

IOMUXC_PTF4_LPUART7_CTS_B

IOMUXC_PTF4_LPI2C7_SCL

IOMUXC_PTF4_TPM7_CLKIN

IOMUXC_PTF4_I2S7_RXD2

IOMUXC_PTF4_SDHC1_D3

IOMUXC_PTF4_ENET0_TXEN

IOMUXC_PTF4_USB0_OC

IOMUXC_PTF4_EPDC0_SDCE7

IOMUXC_PTF4_DPI0_D19

IOMUXC_PTF4_WUU1_P10

IOMUXC_PTF4_DEBUG_MUX1_25

IOMUXC_PTF5_PTF5

IOMUXC_PTF5_FXIO1_D5

IOMUXC_PTF5_LPSPI4_PCS2

IOMUXC_PTF5_LPUART7_RTS_B

IOMUXC_PTF5_LPI2C7_SDA

IOMUXC_PTF5_TPM7_CH0

IOMUXC_PTF5_I2S7_RXD3

IOMUXC_PTF5_SDHC1_D2

IOMUXC_PTF5_ENET0_RXER

IOMUXC_PTF5_USB1_PWR

IOMUXC_PTF5_EPDC0_SDCE6

IOMUXC_PTF5_DPI0_D18

IOMUXC_PTF5_LP_HV_DBG_MUX_18

IOMUXC_PTF5_DEBUG_MUX0_18

IOMUXC_PTF5_DEBUG_MUX1_26

IOMUXC_PTF6_LP_HV_DBG_MUX_19

IOMUXC_PTF6_PTF6

IOMUXC_PTF6_FXIO1_D6

IOMUXC_PTF6_LPSPI4_PCS3

IOMUXC_PTF6_LPUART7_TX

IOMUXC_PTF6_I3C2_SCL

IOMUXC_PTF6_TPM7_CH1

IOMUXC_PTF6_I2S7_MCLK

IOMUXC_PTF6_SDHC1_D4

IOMUXC_PTF6_ENET0_CRS_DV

IOMUXC_PTF6_USB1_OC

IOMUXC_PTF6_EPDC0_SDCE5

IOMUXC_PTF6_DPI0_D17

IOMUXC_PTF6_WDOG4_RST

IOMUXC_PTF6_DEBUG_MUX0_19

IOMUXC_PTF6_DEBUG_MUX1_27

IOMUXC_PTF7_PTF7

IOMUXC_PTF7_FXIO1_D7

IOMUXC_PTF7_LPUART7_RX

IOMUXC_PTF7_I3C2_SDA

IOMUXC_PTF7_TPM7_CH2

IOMUXC_PTF7_MQS1_LEFT

IOMUXC_PTF7_SDHC1_D5

IOMUXC_PTF7_ENET0_REFCLK

IOMUXC_PTF7_TRACE0_D15

IOMUXC_PTF7_EPDC0_SDCE4

IOMUXC_PTF7_DPI0_D16

IOMUXC_PTF7_WUU1_P11

IOMUXC_PTF7_DEBUG_MUX1_28

IOMUXC_PTF8_PTF8

IOMUXC_PTF8_FXIO1_D8

IOMUXC_PTF8_LPSPI4_SIN

IOMUXC_PTF8_LPUART4_CTS_B

IOMUXC_PTF8_LPI2C4_SCL

IOMUXC_PTF8_TPM7_CH3

IOMUXC_PTF8_MQS1_RIGHT

IOMUXC_PTF8_SDHC1_D6

IOMUXC_PTF8_ENET0_MDIO

IOMUXC_PTF8_TRACE0_D14

IOMUXC_PTF8_EPDC0_D15

IOMUXC_PTF8_DPI0_D15

IOMUXC_PTF8_LP_HV_DBG_MUX_24

IOMUXC_PTF8_DEBUG_MUX1_29

IOMUXC_PTF9_PTF9

IOMUXC_PTF9_FXIO1_D9

IOMUXC_PTF9_LPSPI4_SOUT

IOMUXC_PTF9_LPUART4_RTS_B

IOMUXC_PTF9_LPI2C4_SDA

IOMUXC_PTF9_TPM7_CH4

IOMUXC_PTF9_EXT_AUD_MCLK2

IOMUXC_PTF9_SDHC1_D7

IOMUXC_PTF9_ENET0_MDC

IOMUXC_PTF9_TRACE0_D13

IOMUXC_PTF9_EPDC0_D14

IOMUXC_PTF9_DPI0_D14

IOMUXC_PTF9_LP_HV_DBG_MUX_25

IOMUXC_PTF9_DEBUG_MUX1_30

IOMUXC_PTF10_LP_HV_DBG_MUX_26

IOMUXC_PTF10_PTF10

IOMUXC_PTF10_FXIO1_D10

IOMUXC_PTF10_LPSPI4_SCK

IOMUXC_PTF10_LPUART4_TX

IOMUXC_PTF10_LPI2C4_HREQ

IOMUXC_PTF10_TPM7_CH5

IOMUXC_PTF10_I2S4_RX_BCLK

IOMUXC_PTF10_SDHC1_DQS

IOMUXC_PTF10_ENET0_1588_CLKIN

IOMUXC_PTF10_TRACE0_D12

IOMUXC_PTF10_EPDC0_D13

IOMUXC_PTF10_DPI0_D13

IOMUXC_PTF10_DEBUG_MUX0_20

IOMUXC_PTF10_DEBUG_MUX1_31

IOMUXC_PTF11_PTF11

IOMUXC_PTF11_FXIO1_D11

IOMUXC_PTF11_LPSPI4_PCS0

IOMUXC_PTF11_LPUART4_RX

IOMUXC_PTF11_TPM4_CLKIN

IOMUXC_PTF11_I2S4_RX_FS

IOMUXC_PTF11_SDHC1_RESET_B

IOMUXC_PTF11_ENET0_1588_TMR0

IOMUXC_PTF11_TRACE0_D11

IOMUXC_PTF11_EPDC0_D12

IOMUXC_PTF11_DPI0_D12

IOMUXC_PTF11_LP_HV_DBG_MUX_27

IOMUXC_PTF11_DEBUG_MUX1_32

IOMUXC_PTF12_PTF12

IOMUXC_PTF12_FXIO1_D12

IOMUXC_PTF12_LPSPI5_PCS1

IOMUXC_PTF12_LPUART5_CTS_B

IOMUXC_PTF12_LPI2C5_SCL

IOMUXC_PTF12_TPM4_CH0

IOMUXC_PTF12_I2S4_RXD0

IOMUXC_PTF12_SDHC2_WP

IOMUXC_PTF12_ENET0_1588_TMR1

IOMUXC_PTF12_TRACE0_D10

IOMUXC_PTF12_EPDC0_D11

IOMUXC_PTF12_DPI0_D11

IOMUXC_PTF12_LP_HV_DBG_MUX_28

IOMUXC_PTF12_DEBUG_MUX1_33

IOMUXC_PTF13_PTF13

IOMUXC_PTF13_FXIO1_D13

IOMUXC_PTF13_LPSPI5_PCS2

IOMUXC_PTF13_LPUART5_RTS_B

IOMUXC_PTF13_LPI2C5_SDA

IOMUXC_PTF13_TPM4_CH1

IOMUXC_PTF13_I2S4_RXD1

IOMUXC_PTF13_SDHC2_CD

IOMUXC_PTF13_ENET0_1588_TMR2

IOMUXC_PTF13_TRACE0_D9

IOMUXC_PTF13_EPDC0_D10

IOMUXC_PTF13_DPI0_D10

IOMUXC_PTF13_DEBUG_MUX0_21

IOMUXC_PTF13_LP_HV_DBG_MUX_29

IOMUXC_PTF14_PTF14

IOMUXC_PTF14_FXIO1_D14

IOMUXC_PTF14_LPSPI5_PCS3

IOMUXC_PTF14_LPUART5_TX

IOMUXC_PTF14_LPI2C5_HREQ

IOMUXC_PTF14_TPM4_CH2

IOMUXC_PTF14_I2S4_MCLK

IOMUXC_PTF14_SDHC2_VS

IOMUXC_PTF14_ENET0_1588_TMR3

IOMUXC_PTF14_TRACE0_D8

IOMUXC_PTF14_EPDC0_D9

IOMUXC_PTF14_DPI0_D9

IOMUXC_PTF14_DEBUG_MUX0_22

IOMUXC_PTF14_LP_HV_DBG_MUX_30

IOMUXC_PTF15_PTF15

IOMUXC_PTF15_FXIO1_D15

IOMUXC_PTF15_LPUART5_RX

IOMUXC_PTF15_TPM4_CH3

IOMUXC_PTF15_I2S4_TX_BCLK

IOMUXC_PTF15_SDHC2_D1

IOMUXC_PTF15_ENET0_RXD2

IOMUXC_PTF15_TRACE0_D7

IOMUXC_PTF15_EPDC0_D8

IOMUXC_PTF15_DPI0_D8

IOMUXC_PTF15_LP_HV_DBG_MUX_31

IOMUXC_PTF16_PTF16

IOMUXC_PTF16_FXIO1_D16

IOMUXC_PTF16_LPSPI5_SIN

IOMUXC_PTF16_LPUART6_CTS_B

IOMUXC_PTF16_LPI2C6_SCL

IOMUXC_PTF16_TPM4_CH4

IOMUXC_PTF16_I2S4_TX_FS

IOMUXC_PTF16_SDHC2_D0

IOMUXC_PTF16_ENET0_RXD3

IOMUXC_PTF16_TRACE0_D6

IOMUXC_PTF16_EPDC0_D7

IOMUXC_PTF16_DPI0_D7

IOMUXC_PTF16_LP_HV_DBG_MUX_32

IOMUXC_PTF17_PTF17

IOMUXC_PTF17_FXIO1_D17

IOMUXC_PTF17_LPSPI5_SOUT

IOMUXC_PTF17_LPUART6_RTS_B

IOMUXC_PTF17_LPI2C6_SDA

IOMUXC_PTF17_TPM4_CH5

IOMUXC_PTF17_I2S4_TXD0

IOMUXC_PTF17_SDHC2_CLK

IOMUXC_PTF17_ENET0_RXCLK

IOMUXC_PTF17_TRACE0_D5

IOMUXC_PTF17_EPDC0_D6

IOMUXC_PTF17_DPI0_D6

IOMUXC_PTF17_DEBUG_MUX0_23

IOMUXC_PTF17_LP_HV_DBG_MUX_33

IOMUXC_PTF18_PTF18

IOMUXC_PTF18_FXIO1_D18

IOMUXC_PTF18_LPSPI5_SCK

IOMUXC_PTF18_LPUART6_TX

IOMUXC_PTF18_LPI2C6_HREQ

IOMUXC_PTF18_TPM5_CLKIN

IOMUXC_PTF18_I2S4_TXD1

IOMUXC_PTF18_SDHC2_CMD

IOMUXC_PTF18_ENET0_TXD2

IOMUXC_PTF18_TRACE0_D4

IOMUXC_PTF18_EPDC0_D5

IOMUXC_PTF18_DPI0_D5

IOMUXC_PTF19_PTF19

IOMUXC_PTF19_FXIO1_D19

IOMUXC_PTF19_LPSPI5_PCS0

IOMUXC_PTF19_LPUART6_RX

IOMUXC_PTF19_TPM5_CH0

IOMUXC_PTF19_I2S5_RX_BCLK

IOMUXC_PTF19_SDHC2_D3

IOMUXC_PTF19_ENET0_TXD3

IOMUXC_PTF19_TRACE0_D3

IOMUXC_PTF19_EPDC0_D4

IOMUXC_PTF19_DPI0_D4

IOMUXC_PTF20_PTF20

IOMUXC_PTF20_FXIO1_D20

IOMUXC_PTF20_LPUART7_CTS_B

IOMUXC_PTF20_LPI2C7_SCL

IOMUXC_PTF20_TPM5_CH1

IOMUXC_PTF20_I2S5_RX_FS

IOMUXC_PTF20_SDHC2_D2

IOMUXC_PTF20_ENET0_TXCLK

IOMUXC_PTF20_TRACE0_D2

IOMUXC_PTF20_EPDC0_D3

IOMUXC_PTF20_DPI0_D3

IOMUXC_PTF21_PTF21

IOMUXC_PTF21_FXIO1_D21

IOMUXC_PTF21_SPDIF_OUTCLK

IOMUXC_PTF21_LPUART7_RTS_B

IOMUXC_PTF21_LPI2C7_SDA

IOMUXC_PTF21_TPM6_CLKIN

IOMUXC_PTF21_I2S5_RXD0

IOMUXC_PTF21_SDHC2_D4

IOMUXC_PTF21_ENET0_CRS

IOMUXC_PTF21_TRACE0_D1

IOMUXC_PTF21_EPDC0_D2

IOMUXC_PTF21_DPI0_D2

IOMUXC_PTF22_PTF22

IOMUXC_PTF22_FXIO1_D22

IOMUXC_PTF22_SPDIF_IN1

IOMUXC_PTF22_LPUART7_TX

IOMUXC_PTF22_LPI2C7_HREQ

IOMUXC_PTF22_TPM6_CH0

IOMUXC_PTF22_I2S5_RXD1

IOMUXC_PTF22_SDHC2_D5

IOMUXC_PTF22_ENET0_COL

IOMUXC_PTF22_TRACE0_D0

IOMUXC_PTF22_EPDC0_D1

IOMUXC_PTF22_DPI0_D1

IOMUXC_PTF23_PTF23

IOMUXC_PTF23_FXIO1_D23

IOMUXC_PTF23_SPDIF_OUT1

IOMUXC_PTF23_LPUART7_RX

IOMUXC_PTF23_I3C2_PUR

IOMUXC_PTF23_TPM6_CH1

IOMUXC_PTF23_I2S5_RXD2

IOMUXC_PTF23_SDHC2_D6

IOMUXC_PTF23_ENET0_TXER

IOMUXC_PTF23_TRACE0_CLKOUT

IOMUXC_PTF23_EPDC0_D0

IOMUXC_PTF23_DPI0_D0

IOMUXC_PTF24_PTF24

IOMUXC_PTF24_FXIO1_D24

IOMUXC_PTF24_SPDIF_IN2

IOMUXC_PTF24_I3C2_SCL

IOMUXC_PTF24_I2S5_RXD3

IOMUXC_PTF24_SDHC2_D7

IOMUXC_PTF24_DBI0_WRX

IOMUXC_PTF24_EPDC0_SDCLK

IOMUXC_PTF24_DPI0_PCLK

IOMUXC_PTF24_WUU1_P12

IOMUXC_PTF25_PTF25

IOMUXC_PTF25_FXIO1_D25

IOMUXC_PTF25_SPDIF_OUT2

IOMUXC_PTF25_I3C2_SDA

IOMUXC_PTF25_TPM7_CH5

IOMUXC_PTF25_I2S5_MCLK

IOMUXC_PTF25_SDHC2_DQS

IOMUXC_PTF25_EXT_AUD_MCLK2

IOMUXC_PTF25_EPDC0_GDSP

IOMUXC_PTF25_DPI0_VSYNC

IOMUXC_PTF25_WUU1_P13

IOMUXC_PTF26_PTF26

IOMUXC_PTF26_FXIO1_D26

IOMUXC_PTF26_SPDIF_IN3

IOMUXC_PTF26_TPM7_CLKIN

IOMUXC_PTF26_I2S5_TX_BCLK

IOMUXC_PTF26_SDHC2_RESET_B

IOMUXC_PTF26_EPDC0_SDLE

IOMUXC_PTF26_DPI0_HSYNC

IOMUXC_PTF26_WUU1_P14

IOMUXC_PTF27_PTF27

IOMUXC_PTF27_FXIO1_D27

IOMUXC_PTF27_SPDIF_PLOCK

IOMUXC_PTF27_TPM7_CH0

IOMUXC_PTF27_I2S5_TX_FS

IOMUXC_PTF27_SDHC2_WP

IOMUXC_PTF27_EPDC0_SDCE0

IOMUXC_PTF27_DPI0_DE

IOMUXC_PTF27_WUU1_P15

IOMUXC_PTF28_PTF28

IOMUXC_PTF28_FXIO1_D28

IOMUXC_PTF28_SPDIF_IN4

IOMUXC_PTF28_TPM7_CH1

IOMUXC_PTF28_I2S5_TXD0

IOMUXC_PTF28_SDHC2_CD

IOMUXC_PTF28_EPDC0_SDCLK_B

IOMUXC_PTF28_LP_HV_DBG_MUX_20

IOMUXC_PTF29_PTF29

IOMUXC_PTF29_FXIO1_D29

IOMUXC_PTF29_SPDIF_SRCLK

IOMUXC_PTF29_TPM7_CH2

IOMUXC_PTF29_I2S5_TXD1

IOMUXC_PTF29_SDHC2_VS

IOMUXC_PTF29_EPDC0_SDCE1

IOMUXC_PTF29_WDOG3_RST

IOMUXC_PTF29_LP_HV_DBG_MUX_21

IOMUXC_PTF30_PTF30

IOMUXC_PTF30_FXIO1_D30

IOMUXC_PTF30_TPM7_CH3

IOMUXC_PTF30_I2S5_TXD2

IOMUXC_PTF30_MQS1_LEFT

IOMUXC_PTF30_EPDC0_SDCE2

IOMUXC_PTF30_WDOG4_RST

IOMUXC_PTF30_LP_HV_DBG_MUX_22

IOMUXC_PTF31_PTF31

IOMUXC_PTF31_FXIO1_D31

IOMUXC_PTF31_TPM7_CH4

IOMUXC_PTF31_I2S5_TXD3

IOMUXC_PTF31_MQS1_RIGHT

IOMUXC_PTF31_EPDC0_SDCE3

IOMUXC_PTF31_WDOG5_RST

IOMUXC_PTF31_LP_HV_DBG_MUX_23

IOMUXC_BOOT_MODE0_BOOT_MODE0

IOMUXC_BOOT_MODE1_BOOT_MODE1

IOMUXC_PCR_PS_MASK

IOMUXC_PCR_PS_SHIFT

IOMUXC_PCR_PS(**x**)

IOMUXC_PCR_PE_MASK

IOMUXC_PCR_PE_SHIFT

IOMUXC_PCR_PE(**x**)

IOMUXC_PCR_SRE_MASK

IOMUXC_PCR_SRE_SHIFT

IOMUXC_PCR_SRE(**x**)

IOMUXC_PCR_ODE_MASK

IOMUXC_PCR_ODE_SHIFT

IOMUXC_PCR_ODE(**x**)

IOMUXC_PCR_DSE_MASK

IOMUXC_PCR_DSE_SHIFT

IOMUXC_PCR_DSE(**x**)

IOMUXC_PCR_MUX_MODE_MASK

IOMUXC_PCR_MUX_MODE_SHIFT

IOMUXC_PCR_MUX_MODE(**x**)

IOMUXC_PCR_LK_MASK

IOMUXC_PCR_LK_SHIFT

IOMUXC_PCR_LK(**x**)

IOMUXC_PCR_IBE_MASK

IOMUXC_PCR_IBE_SHIFT

IOMUXC_PCR_IBE(x)

IOMUXC_PCR_OBE_MASK

IOMUXC_PCR_OBE_SHIFT

IOMUXC_PCR_OBE(x)

IOMUXC_PCR_DFE_MASK

IOMUXC_PCR_DFE_SHIFT

IOMUXC_PCR_DFE(x)

IOMUXC_PCR_DFCS_MASK

IOMUXC_PCR_DFCS_SHIFT

IOMUXC_PCR_DFCS(x)

IOMUXC_PCR_DFD_MASK

IOMUXC_PCR_DFD_SHIFT

IOMUXC_PCR_DFD(x)

IOMUXC_PSMI_SSS_MASK

IOMUXC_PSMI_SSS_SHIFT

IOMUXC_PSMI_SSS(x)

IOMUXC_PSMI_INV_MASK

IOMUXC_PSMI_INV_SHIFT

IOMUXC_PSMI_INV(x)

2.31 Common Driver

FSL_COMMON_DRIVER_VERSION
: common driver version.

DEBUG_CONSOLE_DEVICE_TYPE_NONE
: No debug console.

DEBUG_CONSOLE_DEVICE_TYPE_UART
: Debug console based on UART.

DEBUG_CONSOLE_DEVICE_TYPE_LPUART
: Debug console based on LPUART.

DEBUG_CONSOLE_DEVICE_TYPE_LPSCI
: Debug console based on LPSCI.

DEBUG_CONSOLE_DEVICE_TYPE_USBCDC
: Debug console based on USBCDC.

DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM
: Debug console based on FLEXCOMM.

DEBUG_CONSOLE_DEVICE_TYPE_IUART
: Debug console based on i.MX UART.

DEBUG_CONSOLE_DEVICE_TYPE_VUSART
: Debug console based on LPC_VUSART.

DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART
: Debug console based on LPC_USART.

DEBUG_CONSOLE_DEVICE_TYPE_SWO
: Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI
: Debug console based on QSCI.

MIN(a, b)
: Computes the minimum of *a* and *b*.

MAX(a, b)
: Computes the maximum of *a* and *b*.

UINT16_MAX
: Max value of uint16_t type.

UINT32_MAX
: Max value of uint32_t type.

MCUX_MASK_INVERT_8(mask)
: 8-bit mask inversion.

MCUX_MASK_INVERT_16(mask)
: 16-bit mask inversion.

MCUX_MASK_INVERT_32(mask)
: 32-bit mask inversion for completeness.

MCUX_REG_WRITE8(reg, value)
: 8-bit register write macro

MCUX_REG_WRITE16(reg, value)
: 16-bit register write macro

MCUX_REG_WRITE32(reg, value)
: 32-bit register write macro

MCUX_REG_READ8(reg)
: 8-bit register read macro

MCUX_REG_READ16(reg)
: 16-bit register read macro

MCUX_REG_READ32(reg)
: 32-bit register read macro

MCUX_REG_BIT_SET8(reg, mask)
: 8-bit register bit set macro

MCUX_REG_BIT_SET16(reg, mask)
: 16-bit register bit set macro

MCUX_REG_BIT_SET32(reg, mask)
: 32-bit register bit set macro

MCUX_REG_BIT_CLEAR8(reg, mask)
8-bit register bit clear macro

MCUX_REG_BIT_CLEAR16(reg, mask)
16-bit register bit clear macro

MCUX_REG_BIT_CLEAR32(reg, mask)
32-bit register bit clear macro

MCUX_REG_BIT_GET8(reg, mask)
8-bit register bit get macro

MCUX_REG_BIT_GET16(reg, mask)
16-bit register bit get macro

MCUX_REG_BIT_GET32(reg, mask)
32-bit register bit get macro

MCUX_REG_MODIFY8(reg, mask, value)
32-bit register read-modify-write macro

MCUX_REG_MODIFY16(reg, mask, value)
16-bit register read-modify-write macro

MCUX_REG_MODIFY32(reg, mask, value)
32-bit register read-modify-write macro

USEC_TO_COUNT(us, clockFreqInHz)
Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)
Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)
Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)
Macro to convert a raw count value to millisecond

USEC_TO_COUNT(us, clockFreqInHz)
Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)
Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)
Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)
Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_ISR_EXIT_BARRIER

SDK_ALIGN(var, alignbytes)
Macro to define a variable with alignbytes alignment

SDK_L1DCACHE_ALIGN(var)
Macro to define a variable with L1 d-cache line size alignment

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value (rounded up)

SDK_SIZEALIGN_UP(var, alignbytes)

Macro to change a value to a given size aligned value (rounded up), the wrapper of SDK_SIZEALIGN

SDK_SIZEALIGN_DOWN(var, alignbytes)

Macro to change a value to a given size aligned value (rounded down)

SDK_IS_ALIGNED(var, alignbytes)

Macro to check if a value is aligned to a given size

SDK_ALIGN(var, alignbytes)

Macro to define a variable with alignbytes alignment

SDK_L1DCACHE_ALIGN(var)

Macro to define a variable with L1 d-cache line size alignment

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value (rounded up)

SDK_SIZEALIGN_UP(var, alignbytes)

Macro to change a value to a given size aligned value (rounded up), the wrapper of SDK_SIZEALIGN

SDK_SIZEALIGN_DOWN(var, alignbytes)

Macro to change a value to a given size aligned value (rounded down)

SDK_IS_ALIGNED(var, alignbytes)

Macro to check if a value is aligned to a given size

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

AT_NONCACHEABLE_SECTION_INIT(var)

Define a variable *var* with initial value, and place it in non-cacheable section.

AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

MCUX_CS

AT_QUICKACCESS_SECTION_CODE(func)
: Place function in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA(func)
: Place data in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_CODE(func)
: Place function in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA(var)
: Place data in a section which can be accessed quickly by core.

AT_QUICKACCESS_SECTION_DATA_ALIGN(var, alignbytes)
: Place data in a section which can be accessed quickly by core, and the variable address is set to align with *alignbytes*.

SDK_ATOMIC_LOCAL_ADD(addr, val)
: Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)
: Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)
: Set the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)
: Clear the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)
: Toggle the bits specifiled by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)
: For the variable at address *address*, clear the bits specifiled by *clearBits* and set the bits specifiled by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)
: For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)
: For the variable at address *address*, set as *newValue* value and return old value.

AT_CACHE_LINE_SECTION(var)
: Define a variable *var*, which is cache line size aligned and be placed in CacheLineData section.

AT_CACHE_LINE_SECTION_INIT(var)
: Define a variable *var* with initial value, which is cache line size aligned and be placed in CacheLineData.init section.

CACHE_LINE_DATA

MCUX_RAMFUNC
: Function attribute to place function in RAM. For example, to place function my_func in ram, use like:

```
MCUX_RAMFUNC my_func
```

RAMFUNCTION_SECTION_CODE(func)
: Place function in ram.

enum _status_groups

Status group numbers.

Values:

enumerator kStatusGroup_Generic
Group number for generic status codes.

enumerator kStatusGroup_FLASH
Group number for FLASH status codes.

enumerator kStatusGroup_LPSPI
Group number for LPSPI status codes.

enumerator kStatusGroup_FLEXIO_SPI
Group number for FLEXIO SPI status codes.

enumerator kStatusGroup_DSPI
Group number for DSPI status codes.

enumerator kStatusGroup_FLEXIO_UART
Group number for FLEXIO UART status codes.

enumerator kStatusGroup_FLEXIO_I2C
Group number for FLEXIO I2C status codes.

enumerator kStatusGroup_LPI2C
Group number for LPI2C status codes.

enumerator kStatusGroup_UART
Group number for UART status codes.

enumerator kStatusGroup_I2C
Group number for UART status codes.

enumerator kStatusGroup_LPSCI
Group number for LPSCI status codes.

enumerator kStatusGroup_LPUART
Group number for LPUART status codes.

enumerator kStatusGroup_SPI
Group number for SPI status code.

enumerator kStatusGroup_XRDC
Group number for XRDC status code.

enumerator kStatusGroup_SEMA42
Group number for SEMA42 status code.

enumerator kStatusGroup_SDHC
Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

enumerator kStatusGroup_DMA
Group number for DMA status codes.

enumerator kStatusGroup_EDMA
Group number for EDMA status codes.

enumerator kStatusGroup_DMAMGR
Group number for DMAMGR status codes.

enumerator kStatusGroup_FLEXCAN
Group number for FlexCAN status codes.

enumerator kStatusGroup_LTC
Group number for LTC status codes.

enumerator kStatusGroup_FLEXIO_CAMERA
Group number for FLEXIO CAMERA status codes.

enumerator kStatusGroup_LPC_SPI
Group number for LPC_SPI status codes.

enumerator kStatusGroup_LPC_USART
Group number for LPC_USART status codes.

enumerator kStatusGroup_DMIC
Group number for DMIC status codes.

enumerator kStatusGroup_SDIF
Group number for SDIF status codes.

enumerator kStatusGroup_SPIFI
Group number for SPIFI status codes.

enumerator kStatusGroup_OTP
Group number for OTP status codes.

enumerator kStatusGroup_MCAN
Group number for MCAN status codes.

enumerator kStatusGroup_CAAM
Group number for CAAM status codes.

enumerator kStatusGroup_ECSPI
Group number for ECSPI status codes.

enumerator kStatusGroup_USDHC
Group number for USDHC status codes.

enumerator kStatusGroup_LPC_I2C
Group number for LPC_I2C status codes.

enumerator kStatusGroup_DCP
Group number for DCP status codes.

enumerator kStatusGroup_MSCAN
Group number for MSCAN status codes.

enumerator kStatusGroup_ESAI
Group number for ESAI status codes.

enumerator kStatusGroup_FLEXSPI
Group number for FLEXSPI status codes.

enumerator kStatusGroup_MMDC
Group number for MMDC status codes.

enumerator kStatusGroup_PDM
Group number for MIC status codes.

enumerator kStatusGroup_SDMA
Group number for SDMA status codes.

enumerator kStatusGroup_ICS
Group number for ICS status codes.

enumerator kStatusGroup_SPDIF
Group number for SPDIF status codes.

enumerator kStatusGroup_LPC_MINISPI
Group number for LPC_MINISPI status codes.

enumerator kStatusGroup_HASHCRYPT
Group number for Hashcrypt status codes

enumerator kStatusGroup_LPC_SPI_SSP
Group number for LPC_SPI_SSP status codes.

enumerator kStatusGroup_I3C
Group number for I3C status codes

enumerator kStatusGroup_LPC_I2C_1
Group number for LPC_I2C_1 status codes.

enumerator kStatusGroup_NOTIFIER
Group number for NOTIFIER status codes.

enumerator kStatusGroup_DebugConsole
Group number for debug console status codes.

enumerator kStatusGroup_SEMC
Group number for SEMC status codes.

enumerator kStatusGroup_ApplicationRangeStart
Starting number for application groups.

enumerator kStatusGroup_IAP
Group number for IAP status codes

enumerator kStatusGroup_SFA
Group number for SFA status codes

enumerator kStatusGroup_SPC
Group number for SPC status codes.

enumerator kStatusGroup_PUF
Group number for PUF status codes.

enumerator kStatusGroup_TOUCH_PANEL
Group number for touch panel status codes

enumerator kStatusGroup_VBAT
Group number for VBAT status codes

enumerator kStatusGroup_XSPI
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

enumerator kStatusGroup_OSA
Group number for OSA status codes.

enumerator kStatusGroup_COMMON_TASK
Group number for Common task status codes.

enumerator kStatusGroup_MSG
Group number for messaging status codes.

enumerator kStatusGroup_SDK_OCOTP
Group number for OCOTP status codes.

enumerator kStatusGroup_SDK_FLEXSPINOR
Group number for FLEXSPINOR status codes.

enumerator kStatusGroup_CODEC
Group number for codec status codes.

enumerator kStatusGroup_ASRC
Group number for codec status ASRC.

enumerator kStatusGroup_OTFAD
Group number for codec status codes.

enumerator kStatusGroup_SDIOSLV
Group number for SDIOSLV status codes.

enumerator kStatusGroup_MECC
Group number for MECC status codes.

enumerator kStatusGroup_ENET_QOS
Group number for ENET_QOS status codes.

enumerator kStatusGroup_LOG
Group number for LOG status codes.

enumerator kStatusGroup_I3CBUS
Group number for I3CBUS status codes.

enumerator kStatusGroup_QSCI
Group number for QSCI status codes.

enumerator kStatusGroup_ELEMU
Group number for ELEMU status codes.

enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.

enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.

enumerator kStatusGroup_IPED
Group number for IPED status codes.

enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.

enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.

enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

enumerator kStatusGroup_LPC_QSPI
Group number for LPC QSPI status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout
Generic status for timeout.

enumerator kStatus_NoTransferInProgress
Generic status for no transfer in progress.

enumerator kStatus_Busy
Generic status for module is busy.

enumerator kStatus_NoData

Generic status for no data is found for the operation.

typedef int32_t status_t

Type used for all status and error return values.

void *SDK_Malloc(size_t size, size_t alignbytes)

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- size – The length required to malloc.
- alignbytes – The alignment size.

Return values

The – allocated memory.

void SDK_Free(void *ptr)

Free memory.

Parameters

- ptr – The memory to be release.

void SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- delayTime_us – Delay time in unit of microsecond.
- coreClock_Hz – Core clock frequency with Hz.

static inline *status_t* EnableIRQ(IRQn_Type interrupt)

Enable specific interrupt.

Empty function for build compatibility.

Parameters

- interrupt – The IRQ number.

Returns

Always return kStatus_Success.

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Empty function for build compatibility.

Parameters

- interrupt – The IRQ number.

Returns

Always return kStatus_Success.

static inline uint32_t DisableGlobalIRQ(void)

Disable the global IRQ.

Empty function for build compatibility.

Returns

Always return 0;

static inline void EnableGlobalIRQ(uint32_t primask)

Enable the global IRQ.

Empty function for build compatibility.

Parameters

- primask – Not used.

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_ClearPendingIRQ(IRQn_Type interrupt)

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline bool _SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t newValue)

static inline uint32_t _SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)

FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ

Macro to use the default weak IRQ handler in drivers.

MAKE_STATUS(group, code)

Construct a status code value from a group and code number.

MAKE_VERSION(major, minor, bugfix)

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

```
| Unused    || Major Version || Minor Version ||  Bug Fix    |
31       25  24           17  16           9  8           0
```

ARRAY_SIZE(x)

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without "break;" statement, there wil be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, "SUPPRESS_FALL_THROUGH_WARNING();" need to be added at the end of each case section which misses "break;"statement.

NVIC_SetPriorityGrouping(value)

NVIC_GetPriorityGrouping()

NVIC_SetPriority(irq, value)

NVIC_GetPriority(irq)

NVIC_EnableIRQ(value)

NVIC_GetEnableIRQ(value)

NVIC_DisableIRQ(value)

NVIC_GetPendingIRQ(value)

NVIC_SetPendingIRQ(value)

NVIC_ClearPendingIRQ(value)

NVIC_GetActive(value)

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)
Convert the register address to the one used in non-secure mode.

MSDK_REG_SECURE_ADDR(x)
Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)
Convert the register address to the one used in non-secure mode.

MSDK_HAS_DWT_CYCCNT
The chip supports DWT CYCCNT or not.

MSDK_INVALID_IRQ_HANDLER
Invalid IRQ handler address.

2.32 LCDIF: LCD interface

status_t LCDIF_Init(LCDIF_Type *base)
Initialize the LCDIF.

This function initializes the LCDIF to work.

Parameters

- base – LCDIF peripheral base address.

Return values

kStatus_Success – Initialize successfully.

void LCDIF_Deinit(LCDIF_Type *base)
De-initialize the LCDIF.

This function disables the LCDIF peripheral clock.

Parameters

- base – LCDIF peripheral base address.

void LCDIF_DpiModeGetDefaultConfig(*lcdif_dpi_config_t* *config)
Get the default configuration for to initialize the LCDIF.

The default configuration value is:

```
config->panelWidth = 0;
config->panelHeight = 0;
config->hsw = 0;
config->hfp = 0;
config->hbp = 0;
config->vsw = 0;
config->vfp = 0;
config->vbp = 0;
config->polarityFlags = kLCDIF_VsyncActiveLow | kLCDIF_HsyncActiveLow | kLCDIF_
↪DataEnableActiveHigh |
kLCDIF_DriveDataOnFallingClkEdge; config->format = kLCDIF_Output24Bit;
```

Parameters

- config – Pointer to the LCDIF configuration.

status_t LCDIF_DpiModeSetConfig(LCDIF_Type *base, uint8_t displayIndex, const *lcdif_dpi_config_t* *config)

Initialize the LCDIF to work in DPI mode.

This function configures the LCDIF DPI display.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- config – Pointer to the configuration structure.

Return values

- kStatus_Success – Initialize successfully.
- kStatus_InvalidArgument – Initialize failed because of invalid argument.

status_t LCDIF_DbiModeSetConfig(LCDIF_Type *base, uint8_t displayIndex, const *lcdif_dbi_config_t* *config)

Initialize the LCDIF to work in DBI mode.

This function configures the LCDIF DBI display.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- config – Pointer to the configuration structure.

Return values

- kStatus_Success – Initialize successfully.
- kStatus_InvalidArgument – Initialize failed because of invalid argument.

void LCDIF_DbiModeGetDefaultConfig(*lcdif_dbi_config_t* *config)

Get the default configuration to initialize the LCDIF DBI mode.

The default configuration value is:

```
config->swizzle         = kLCDIF_DbiOutSwizzleRGB;
config->format          = kLCDIF_DbiOutD8RGB332;
config->acTimeUnit      = 0;
config->type            = kLCDIF_DbiTypeA_ClockedE;
config->reversePolarity = false;
config->writeWRPeriod   = 3U;
config->writeWRAssert   = 0U;
config->writeCSAssert   = 0U;
config->writeWRDeassert = 0U;
config->writeCSDeassert = 0U;
config->typeCTas        = 1U;
config->typeCSCLTwrl    = 1U;
config->typeCSCLTwrh    = 1U;
```

Parameters

- config – Pointer to the LCDIF DBI configuration.

static inline void LCDIF_DbiReset(LCDIF_Type *base, uint8_t displayIndex)

Reset the DBI module.

Parameters

- displayIndex – Display index.

- base – LCDIF peripheral base address.

static inline bool LCDIF_DbiIsTypeCFifoFull(LCDIF_Type *base, uint8_t displayIndex)

Check whether the FIFO is full in DBI mode type C.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.

Return values

- true – FIFO full.
- false – FIFO not full.

void LCDIF_DbiSelectArea(LCDIF_Type *base, uint8_t displayIndex, uint16_t startX, uint16_t startY, uint16_t endX, uint16_t endY, bool isTiled)

Select the update area in DBI mode.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- startX – X coordinate for start pixel.
- startY – Y coordinate for start pixel.
- endX – X coordinate for end pixel.
- endY – Y coordinate for end pixel.
- isTiled – true if the pixel data is tiled.

static inline void LCDIF_DbiSendCommand(LCDIF_Type *base, uint8_t displayIndex, uint8_t cmd)

Send command to DBI port.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- cmd – the DBI command to send.

void LCDIF_DbiSendData(LCDIF_Type *base, uint8_t displayIndex, const uint8_t *data, uint32_t dataLen_Byte)

brief Send data to DBI port.

Can be used to send light weight data to panel. To send pixel data in frame buffer, use LCDIF_DbiWriteMem.

param base LCDIF peripheral base address. param displayIndex Display index. param data pointer to data buffer. param dataLen_Byte data buffer length in byte.

void LCDIF_DbiSendCommandAndData(LCDIF_Type *base, uint8_t displayIndex, uint8_t cmd, const uint8_t *data, uint32_t dataLen_Byte)

Send command followed by data to DBI port.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- cmd – the DBI command to send.
- data – pointer to data buffer.

- dataLen_Byte – data buffer length in byte.

static inline void LCDIF_DbiWriteMem(LCDIF_Type *base, uint8_t displayIndex)

Send pixel data in frame buffer to panel controller memory.

This function starts sending the pixel data in frame buffer to panel controller, user can monitor interrupt kLCDIF_Display0FrameDoneInterrupt to know when then data sending finished.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.

void LCDIF_SetFrameBufferConfig(LCDIF_Type *base, uint8_t displayIndex, const *lcdif_fb_config_t* *config)

Configure the LCDIF frame buffer.

@Note: For LCDIF of version DC8000 there can be 3 layers in the pre-processing, compared with the older version. Apart from the video layer, there are also 2 overlay layers which shares the same configurations. Use this API to configure the legacy video layer, and use LCDIF_SetOverlayFrameBufferConfig to configure the overlay layers.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- config – Pointer to the configuration structure.

void LCDIF_FrameBufferGetDefaultConfig(*lcdif_fb_config_t* *config)

Get default frame buffer configuration.

@Note: For LCDIF of version DC8000 there can be 3 layers in the pre-processing, compared with the older version. Apart from the video layer, there are also 2 overlay layers which shares the same configurations. Use this API to get the default configuration for all the 3 layers.

The default configuration is

```
config->enable = true;
config->enableGamma = false;
config->format = kLCDIF_PixelFormatRGB565;
```

Parameters

- config – Pointer to the configuration structure.

static inline void LCDIF_SetFrameBufferAddr(LCDIF_Type *base, uint8_t displayIndex, uint32_t address)

Set the frame buffer to LCDIF.

Note: The address must be 128 bytes aligned.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- address – Frame buffer address.

void LCDIF_SetFrameBufferStride(LCDIF_Type *base, uint8_t displayIndex, uint32_t strideBytes)

Set the frame buffer stride.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- strideBytes – The stride in byte.

void LCDIF_SetDitherConfig(LCDIF_Type *base, uint8_t displayIndex, const *lcdif_dither_config_t* *config)

Set the dither configuration.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Index to configure.
- config – Pointer to the configuration structure.

void LCDIF_SetGammaData(LCDIF_Type *base, uint8_t displayIndex, uint16_t startIndex, const uint32_t *gamma, uint16_t gammaLen)

Set the gamma translation values to the LCDIF gamma table.

Parameters

- base – LCDIF peripheral base address.
- displayIndex – Display index.
- startIndex – Start index in the gamma table that the value will be set to.
- gamma – The gamma values to set to the gamma table in LCDIF, could be defined using LCDIF_MAKE_GAMMA_VALUE.
- gammaLen – The length of the gamma.

static inline void LCDIF_EnableInterrupts(LCDIF_Type *base, uint32_t mask)

Enables LCDIF interrupt requests.

Parameters

- base – LCDIF peripheral base address.
- mask – The interrupts to enable, pass in as OR'ed value of _lcdif_interrupt.

static inline void LCDIF_DisableInterrupts(LCDIF_Type *base, uint32_t mask)

Disable LCDIF interrupt requests.

Parameters

- base – LCDIF peripheral base address.
- mask – The interrupts to disable, pass in as OR'ed value of _lcdif_interrupt.

static inline uint32_t LCDIF_GetAndClearInterruptPendingFlags(LCDIF_Type *base)

Get and clear LCDIF interrupt pending status.

Note: The interrupt must be enabled, otherwise the interrupt flags will not assert.

Parameters

- base – LCDIF peripheral base address.

Returns

The interrupt pending status.

void LCDIF_CursorGetDefaultConfig(*lcdif_cursor_config_t* *config)

Get the hardware cursor default configuration.

The default configuration values are:

```
config->enable = true;
config->format = kLCDIF_CursorMasked;
config->hotspotOffsetX = 0;
config->hotspotOffsetY = 0;
```

Parameters

- config – Pointer to the hardware cursor configuration structure.

void LCDIF_SetCursorConfig(LCDIF_Type *base, const *lcdif_cursor_config_t* *config)

Configure the cursor.

Parameters

- base – LCDIF peripheral base address.
- config – Cursor configuration.

static inline void LCDIF_SetCursorHotspotPosition(LCDIF_Type *base, uint16_t x, uint16_t y)

Set the cursor hotspot postion.

Parameters

- base – LCDIF peripheral base address.
- x – X coordinate of the hotspot, range 0 ~ 8191.
- y – Y coordinate of the hotspot, range 0 ~ 8191.

static inline void LCDIF_SetCursorBufferAddress(LCDIF_Type *base, uint32_t address)

Set the cursor memory address.

Parameters

- base – LCDIF peripheral base address.
- address – Memory address.

void LCDIF_SetCursorColor(LCDIF_Type *base, uint32_t background, uint32_t foreground)

Set the cursor color.

Parameters

- base – LCDIF peripheral base address.
- background – Background color, could be defined use LCDIF_MAKE_CURSOR_COLOR
- foreground – Foreground color, could be defined use LCDIF_MAKE_CURSOR_COLOR

FSL_LCDIF_DRIVER_VERSION

enum _lcdif_polarity_flags

LCDIF signal polarity flags.

Values:

enumerator kLCDIF_VsyncActiveLow

VSYNC active low.

enumerator kLCDIF_VsyncActiveHigh

VSYNC active high.

enumerator kLCDIF_HsyncActiveLow
HSYNC active low.

enumerator kLCDIF_HsyncActiveHigh
HSYNC active high.

enumerator kLCDIF_DataEnableActiveLow
Data enable line active low.

enumerator kLCDIF_DataEnableActiveHigh
Data enable line active high.

enumerator kLCDIF_DriveDataOnFallingClkEdge
Drive data on falling clock edge, capture data on rising clock edge.

enumerator kLCDIF_DriveDataOnRisingClkEdge
Drive data on falling clock edge, capture data on rising clock edge.

enum _lcdif_output_format
LCDIF DPI output format.

Values:

enumerator kLCDIF_Output16BitConfig1
16-bit configuration 1. RGB565: XXXXXXXX_RRRRRGGG_GGGBBBBB.

enumerator kLCDIF_Output16BitConfig2
16-bit configuration 2. RGB565: XXXRRRRR_XXGGGGGG_XXXBBBBB.

enumerator kLCDIF_Output16BitConfig3
16-bit configuration 3. RGB565: XXRRRRRX_XXGGGGGG_XXBBBBBX.

enumerator kLCDIF_Output18BitConfig1
18-bit configuration 1. RGB666: XXXXXXRR_RRRRGGGG_GGBBBBBB.

enumerator kLCDIF_Output18BitConfig2
18-bit configuration 2. RGB666: XXRRRRRR_XXGGGGGG_XXBBBBBB.

enumerator kLCDIF_Output24Bit
24-bit.

enum _lcdif_fb_format
LCDIF frame buffer pixel format.

Values:

enumerator kLCDIF_PixelFormatXRGB444
XRGB4444, deprecated, use kLCDIF_PixelFormatXRGB4444 instead.

enumerator kLCDIF_PixelFormatXRGB4444
XRGB4444, 16-bit each pixel, 4-bit each element. R4G4B4 in reference manual.

enumerator kLCDIF_PixelFormatXRGB1555
XRGB1555, 16-bit each pixel, 5-bit each element. R5G5B5 in reference manual.

enumerator kLCDIF_PixelFormatRGB565
RGB565, 16-bit each pixel. R5G6B5 in reference manual.

enumerator kLCDIF_PixelFormatXRGB8888
XRGB8888, 32-bit each pixel, 8-bit each element. R8G8B8 in reference manual.

enum _lcdif_interrupt
LCDIF interrupt and status.

Values:

enumerator kLCDIF_Display0FrameDoneInterrupt
The last pixel of visible area in frame is shown.

enum _lcdif_cursor_format
LCDIF cursor format.

Values:

enumerator kLCDIF_CursorMasked
Masked format.

enumerator kLCDIF_CursorARGB8888
ARGB8888.

enum _lcdif_dbi_cmd_flag
LCDIF DBI command flag.

Values:

enumerator kLCDIF_DbiCmdAddress
Send address (or command).

enumerator kLCDIF_DbiCmdWriteMem
Start write memory.

enumerator kLCDIF_DbiCmdData
Send data.

enumerator kLCDIF_DbiCmdReadMem
Start read memory.

enum _lcdif_dbi_out_format
LCDIF DBI output format.

Values:

enumerator kLCDIF_DbiOutD8RGB332
8-bit data bus width, pixel RGB332. For type A or B. 1 pixel sent in 1 cycle.

enumerator kLCDIF_DbiOutD8RGB444
8-bit data bus width, pixel RGB444. For type A or B. 2 pixels sent in 3 cycles.

enumerator kLCDIF_DbiOutD8RGB565
8-bit data bus width, pixel RGB565. For type A or B. 1 pixel sent in 2 cycles.

enumerator kLCDIF_DbiOutD8RGB666
8-bit data bus width, pixel RGB666. For type A or B. 1 pixel sent in 3 cycles, data bus 2 LSB not used.

enumerator kLCDIF_DbiOutD8RGB888
8-bit data bus width, pixel RGB888. For type A or B. 1 pixel sent in 3 cycles.

enumerator kLCDIF_DbiOutD9RGB666
9-bit data bus width, pixel RGB666. For type A or B. 1 pixel sent in 2 cycles.

enumerator kLCDIF_DbiOutD16RGB332
16-bit data bus width, pixel RGB332. For type A or B. 2 pixels sent in 1 cycle.

enumerator kLCDIF_DbiOutD16RGB444
16-bit data bus width, pixel RGB444. For type A or B. 1 pixel sent in 1 cycle, data bus 4 MSB not used.

enumerator kLCDIF_DbiOutD16RGB565
16-bit data bus width, pixel RGB565. For type A or B. 1 pixel sent in 1 cycle.

enumerator kLCDIF_DbiOutD16RGB666Option1

16-bit data bus width, pixel RGB666. For type A or B. 2 pixels sent in 3 cycles.

enumerator kLCDIF_DbiOutD16RGB666Option2

16-bit data bus width, pixel RGB666. For type A or B. 1 pixel sent in 2 cycles.

enumerator kLCDIF_DbiOutD16RGB888Option1

16-bit data bus width, pixel RGB888. For type A or B. 2 pixels sent in 3 cycles.

enumerator kLCDIF_DbiOutD16RGB888Option2

16-bit data bus width, pixel RGB888. For type A or B. 1 pixel sent in 2 cycles.

enumerator kLCDIF_DbiOutD1RGB565Option1

1-bit data bus width, pixel RGB565. For type C option 1, use extra bit to distinguish Data and Command (DC).

enumerator kLCDIF_DbiOutD1RGB565Option2

1-bit data bus width, pixel RGB565. For type C option 2, use extra byte to distinguish Data and Command (DC).

enumerator kLCDIF_DbiOutD1RGB565Option3

1-bit data bus width, pixel RGB565. For type C option 3, use extra DC line to distinguish Data and Command (DC).

enumerator kLCDIF_DbiOutD1RG888Option1

1-bit data bus width, pixel RGB888. For type C option 1, use extra bit to distinguish Data and Command (DC).

enumerator kLCDIF_DbiOutD1RG888Option2

1-bit data bus width, pixel RGB888. For type C option 2, use extra byte to distinguish Data and Command (DC).

enumerator kLCDIF_DbiOutD1RG888Option3

1-bit data bus width, pixel RGB888. For type C option 3, use extra DC line to distinguish Data and Command (DC).

enum _lcdif_dbi_type

LCDIF DBI type.

Values:

enumerator kLCDIF_DbiTypeA_FixedE

Selects DBI type A fixed E mode, 68000, Motorola mode.

enumerator kLCDIF_DbiTypeA_ClockedE

Selects DBI Type A Clocked E mode, 68000, Motorola mode.

enumerator kLCDIF_DbiTypeB

Selects DBI type B, 8080, Intel mode.

enumerator kLCDIF_DbiTypeC

Selects DBI type C, SPI mode.

enum _lcdif_dbi_out_swizzle

LCDIF DBI output swizzle.

Values:

enumerator kLCDIF_DbiOutSwizzleRGB

RGB

enumerator kLCDIF_DbiOutSwizzleBGR

BGR

typedef enum *_lcdif_output_format* lcdif_output_format_t

LCDIF DPI output format.

typedef struct *_lcdif_dpi_config* lcdif_dpi_config_t

Configuration for LCDIF module to work in DBI mode.

typedef enum *_lcdif_fb_format* lcdif_fb_format_t

LCDIF frame buffer pixel format.

typedef struct *_lcdif_fb_config* lcdif_fb_config_t

LCDIF frame buffer configuration.

typedef enum *_lcdif_cursor_format* lcdif_cursor_format_t

LCDIF cursor format.

typedef struct *_lcdif_cursor_config* lcdif_cursor_config_t

LCDIF cursor configuration.

typedef struct *_lcdif_dither_config* lcdif_dither_config_t

LCDIF dither configuration.

a. Decide which bit of pixel color to enhance. This is configured by the lcdif_dither_config_t::redSize, lcdif_dither_config_t::greenSize, and lcdif_dither_config_t::blueSize. For example, setting redSize=6 means it is the 6th bit starting from the MSB that we want to enhance, in other words, it is the Red-Color[2]bit from RedColor[7:0]. greenSize and blueSize function in the same way.

b. Create the look-up table. a. The Look-Up Table includes 16 entries, 4 bits for each. b. The Look-Up Table provides a value U[3:0] through the index X[1:0] and Y[1:0]. c. The color value RedColor[3:0] is used to compare with this U[3:0]. d. If RedColor[3:0] > U[3:0], and RedColor[7:2] is not 6'b111111, then the final color value is: NewRedColor = RedColor[7:2] + 1'b1. e. If RedColor[3:0] <= U[3:0], then NewRedColor = RedColor[7:2].

typedef enum *_lcdif_dbi_out_format* lcdif_dbi_out_format_t

LCDIF DBI output format.

typedef enum *_lcdif_dbi_type* lcdif_dbi_type_t

LCDIF DBI type.

typedef enum *_lcdif_dbi_out_swizzle* lcdif_dbi_out_swizzle_t

LCDIF DBI output swizzle.

typedef struct *_lcdif_dbi_config* lcdif_dbi_config_t

LCDIF DBI configuration.

LCDIF_MAKE_CURSOR_COLOR(r, g, b)

Construct the cursor color, every element should be in the range of 0 ~ 255.

LCDIF_MAKE_GAMMA_VALUE(r, g, b)

Construct the gamma value set to LCDIF gamma table, every element should be in the range of 0~255.

LCDIF_ALIGN_ADDR(addr, align)

Calculate the aligned address for LCDIF buffer.

LCDIF_FB_ALIGN

The frame buffer should be 128 byte aligned.

LCDIF_GAMMA_INDEX_MAX

Gamma index max value.

LCDIF_CURSOR_SIZE
The cursor size is 32 x 32.

LCDIF_FRAMEBUFFERCONFIG0_OUTPUT_MASK

LCDIF_ADDR_CPU_2_IP(addr)

struct _lcdif_dpi_config
#include <fsl_lcdif.h> Configuration for LCDIF module to work in DBI mode.

Public Members

uint16_t panelWidth
Display panel width, pixels per line.

uint16_t panelHeight
Display panel height, how many lines per panel.

uint8_t hsw
HSYNC pulse width.

uint8_t hfp
Horizontal front porch.

uint8_t hbp
Horizontal back porch.

uint8_t vsw
VSYNC pulse width.

uint8_t vfp
Vrtical front porch.

uint8_t vbp
Vertical back porch.

uint32_t polarityFlags
OR'ed value of _lcdif_polarity_flags, used to contol the signal polarity.

lcdif_output_format_t format
DPI output format.

struct _lcdif_fb_config
#include <fsl_lcdif.h> LCDIF frame buffer configuration.

Public Members

bool enable
Enable the frame buffer output.

bool enableGamma
Enable the gamma correction.

lcdif_fb_format_t format
Frame buffer pixel format.

struct _lcdif_cursor_config
#include <fsl_lcdif.h> LCDIF cursor configuration.

Public Members

bool enable
Enable the cursor or not.

lcdif_cursor_format_t format
Cursor format.

uint8_t hotspotOffsetX
Offset of the hotspot to top left point, range 0 ~ 31

uint8_t hotspotOffsetY
Offset of the hotspot to top left point, range 0 ~ 31

struct __lcdif_dither_config
#include <fsl_lcdif.h> LCDIF dither configuration.

a. Decide which bit of pixel color to enhance. This is configured by the lcdif_dither_config_t::redSize, lcdif_dither_config_t::greenSize, and lcdif_dither_config_t::blueSize. For example, setting redSize=6 means it is the 6th bit starting from the MSB that we want to enhance, in other words, it is the RedColor[2]bit from RedColor[7:0]. greenSize and blueSize function in the same way.

b. Create the look-up table. a. The Look-Up Table includes 16 entries, 4 bits for each. b. The Look-Up Table provides a value U[3:0] through the index X[1:0] and Y[1:0]. c. The color value RedColor[3:0] is used to compare with this U[3:0]. d. If RedColor[3:0] > U[3:0], and RedColor[7:2] is not 6'b111111, then the final color value is: NewRedColor = RedColor[7:2] + 1'b1. e. If RedColor[3:0] <= U[3:0], then NewRedColor = RedColor[7:2].

Public Members

bool enable
Enable or not.

uint8_t redSize
Red color size, valid region 4-8.

uint8_t greenSize
Green color size, valid region 4-8.

uint8_t blueSize
Blue color size, valid region 4-8.

uint32_t low
Low part of the look up table.

uint32_t high
High part of the look up table.

struct __lcdif_dbi_config
#include <fsl_lcdif.h> LCDIF DBI configuration.

Public Members

lcdif_dbi_out_swizzle_t swizzle
Swizzle.

lcdif_dbi_out_format_t format
Output format.

uint8_t acTimeUnit

Time unit for AC characteristics.

lcdif_dbi_type_t type

DBI type.

bool reversePolarity

Reverse the DC pin polarity.

uint16_t writeWRPeriod

WR signal period, Cycle number = writeWRPeriod * (acTimeUnit + 1), must be no less than 3. Only for type A and type b.

uint8_t writeWRAssert

Cycle number = writeWRAssert * (acTimeUnit + 1), only for type A and type B. With kLCDIF_DbiTypeA_FixedE: Not used. With kLCDIF_DbiTypeA_ClockedE: Time to assert E. With kLCDIF_DbiTypeB: Time to assert WRX.

uint8_t writeCSAssert

Cycle number = writeCSAssert * (acTimeUnit + 1), only for type A and type B. With kLCDIF_DbiTypeA_FixedE: Time to assert CSX. With kLCDIF_DbiTypeA_ClockedE: Not used. With kLCDIF_DbiTypeB: Time to assert CSX.

uint16_t writeWRDeassert

Cycle number = writeWRDeassert * (acTimeUnit + 1), only for type A and type B. With kLCDIF_DbiTypeA_FixedE: Not used. With kLCDIF_DbiTypeA_ClockedE: Time to de-assert E. With kLCDIF_DbiTypeB: Time to de-assert WRX.

uint16_t writeCSDeassert

Cycle number = writeCSDeassert * (acTimeUnit + 1), only for type A and type B. With kLCDIF_DbiTypeA_FixedE: Time to de-assert CSX. With kLCDIF_DbiTypeA_ClockedE: Not used. With kLCDIF_DbiTypeB: Time to de-assert CSX.

uint8_t typeCTas

How many sdaClk cycles in Tas phase, only for Type C option 3, at least 1.

uint8_t typeCSCLTwrl

How many sdaClk cycles in Twrl phase, only for Type C, at least 1.

uint8_t typeCSCLTwrh

How many sdaClk cycles in Twrh phase, only for Type C, at least 1.

2.33 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum _lpadc_status_flags

Define hardware flags of the module.

Values:

enumerator kLPADC_ResultFIFO0OverflowFlag

Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator kLPADC_ResultFIFO0ReadyFlag

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator kLPADC_TriggerExceptionFlag

Indicates that a trigger exception event has occurred.

enumerator kLPADC_TriggerCompletionFlag

Indicates that a trigger completion event has occurred.

enumerator kLPADC_CalibrationReadyFlag

Indicates that the calibration process is done.

enumerator kLPADC_ActiveFlag

Indicates that the ADC is in active state.

enumerator kLPADC_ResultFIFOOverflowFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowFlag as instead.

enumerator kLPADC_ResultFIFOReadyFlag

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0ReadyFlag as instead.

enum _lpadc_interrupt_enable

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_ResultFIFO0OverflowInterruptEnable

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator kLPADC_FIFO0WatermarkInterruptEnable

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator kLPADC_ResultFIFOOverflowInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_ResultFIFO0OverflowInterruptEnable as instead.

enumerator kLPADC_FIFOWatermarkInterruptEnable

To compilitable with old version, do not recommend using this, please use kLPADC_FIFO0WatermarkInterruptEnable as instead.

enumerator kLPADC_TriggerExceptionInterruptEnable

Configures ADC to generate trigger exception interrupt.

enumerator kLPADC_Trigger0CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 0 completion.

enumerator kLPADC_Trigger1CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 1 completion.

enumerator kLPADC_Trigger2CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 2 completion.

enumerator kLPADC_Trigger3CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 3 completion.

enumerator kLPADC_Trigger4CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 4 completion.

enumerator kLPADC_Trigger5CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 5 completion.

enumerator kLPADC_Trigger6CompletionInterruptEnable

Configures ADC to generate interrupt when trigger 6 completion.

enumerator kLPADC_Trigger7CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 7 completion.

enumerator kLPADC_Trigger8CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 8 completion.

enumerator kLPADC_Trigger9CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 9 completion.

enumerator kLPADC_Trigger10CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 10 completion.

enumerator kLPADC_Trigger11CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 11 completion.

enumerator kLPADC_Trigger12CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 12 completion.

enumerator kLPADC_Trigger13CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 13 completion.

enumerator kLPADC_Trigger14CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 14 completion.

enumerator kLPADC_Trigger15CompletionInterruptEnable
Configures ADC to generate interrupt when trigger 15 completion.

enum _lpadc_trigger_status_flags
The enumerator of lpadc trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator kLPADC_Trigger0InterruptedFlag
Trigger 0 is interrupted by a high priority exception.

enumerator kLPADC_Trigger1InterruptedFlag
Trigger 1 is interrupted by a high priority exception.

enumerator kLPADC_Trigger2InterruptedFlag
Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag
Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag
Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag
Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag
Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag
Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag
Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag
Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag
Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag
Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag
Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag
Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag
Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag
Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag
Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag
Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag
Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag
Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag
Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag
Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag
Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag
Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag
Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag
Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag
Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag
Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag
Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag
Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum _lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale

Use divided input voltage signal. (For scale select,please refer to the reference manual).

enumerator kLPADC_SampleFullScale

Full scale (Factor of 1).

enum _lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum _lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC_HardwareAverageCount1
Single conversion.

enumerator kLPADC_HardwareAverageCount2
2 conversions averaged.

enumerator kLPADC_HardwareAverageCount4
4 conversions averaged.

enumerator kLPADC_HardwareAverageCount8
8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16
16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32
32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64
64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128
128 conversions averaged.

enum _lpadc_sample_time_mode
Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3
3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5
5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7
7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11
11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19
19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35
35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67
69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131
131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode
Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally

only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled
Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue
Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode
Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

Values:

enumerator kLPADC_ConversionResolutionStandard
Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC_ConversionResolutionHigh
High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode
Define enumeration of conversion averages mode.

Configure the converion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC_ConversionAverage1
Single conversion.

enumerator kLPADC_ConversionAverage2
2 conversions averaged.

enumerator kLPADC_ConversionAverage4
4 conversions averaged.

enumerator kLPADC_ConversionAverage8
8 conversions averaged.

enumerator kLPADC_ConversionAverage16
16 conversions averaged.

enumerator kLPADC_ConversionAverage32
32 conversions averaged.

enumerator kLPADC_ConversionAverage64
64 conversions averaged.

enumerator kLPADC_ConversionAverage128
128 conversions averaged.

enumerator kLPADC_ConversionAverageMax

enum _lpadc_reference_voltage_mode

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1

Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2

Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3

Option 3 setting.

enum _lpadc_power_level_mode

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1

Lowest power setting.

enumerator kLPADC_PowerLevelAlt2

Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3

...

enumerator kLPADC_PowerLevelAlt4

Highest power setting.

enum _lpadc_offset_calibration_mode

Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode

12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode

16 bit offset calibration mode.

enum _lpadc_trigger_priority_policy

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

Values:

enumerator kLPADC_ConvPreemptImmediatelyNotAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator kLPADC_ConvPreemptSoftlyNotAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoRestarted

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptSoftlyAutoRestarted

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator kLPADC_ConvPreemptImmediatelyAutoResumed

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator kLPADC_ConvPreemptSoftlyAutoResumed

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator kLPADC_TriggerPriorityPreemptImmediately

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityPreemptSoftly

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator kLPADC_TriggerPriorityExceptionDisabled

High priority trigger exception disabled.

enum _lpadc_tune_value

Define enumeration of tune value.

Values:

enumerator kLPADC_TuneValue0

Tune value 0.

enumerator kLPADC_TuneValue1

Tune value 1.

enumerator kLPADC_TuneValue2
Tune value 2.

enumerator kLPADC_TuneValue3
Tune value 3.

typedef enum *_lpadc_sample_scale_mode* lpadc_sample_scale_mode_t
Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum *_lpadc_sample_channel_mode* lpadc_sample_channel_mode_t
Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum *_lpadc_hardware_average_mode* lpadc_hardware_average_mode_t
Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

typedef enum *_lpadc_sample_time_mode* lpadc_sample_time_mode_t
Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum *_lpadc_hardware_compare_mode* lpadc_hardware_compare_mode_t
Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum *_lpadc_conversion_resolution_mode* lpadc_conversion_resolution_mode_t
Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

typedef enum *_lpadc_conversion_average_mode* lpadc_conversion_average_mode_t
Define enumeration of conversion averages mode.

Configure the converion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

typedef enum *_lpadc_reference_voltage_mode* lpadc_reference_voltage_source_t

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

typedef enum *_lpadc_power_level_mode* lpadc_power_level_mode_t

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

typedef enum *_lpadc_offset_calibration_mode* lpadc_offset_calibration_mode_t

Define enumeration of offset calibration mode.

typedef enum *_lpadc_trigger_priority_policy* lpadc_trigger_priority_policy_t

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

---

typedef enum *_lpadc_tune_value* lpadc_tune_value_t

Define enumeration of tune value.

typedef struct *_lpadc_calibration_value* lpadc_calibration_value_t

A structure of calibration value.

LPADC_CONVERSION_COMPLETE_TIMEOUT

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

LPADC_CALIBRATION_READY_TIMEOUT

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

LPADC_GAIN_CAL_READY_TIMEOUT

Max loops to wait for LPADC gain calibration GAIN_CAL ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

ADC_OFSTRIM_OFSTRIM_MAX

ADC_OFSTRIM_OFSTRIM_SIGN

LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

void LPADC_Init(ADC_Type *base, const *lpadc_config_t* *config)

Initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.
- config – Pointer to configuration structure. See "lpadc_config_t".

void LPADC_GetDefaultConfig(*lpadc_config_t* *config)

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode        = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay            = 0x80;
config->referenceVoltageSource  = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode          = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy   = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause         = false;
config->convPauseDelay          = 0U;
config->FIFOWatermark           = 0U;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_Deinit(ADC_Type *base)

De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_Enable(ADC_Type *base, bool enable)

Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

static inline void LPADC_DoResetFIFO(ADC_Type *base)

Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_DoResetConfig(ADC_Type *base)

Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)

Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns
status flags' mask. See to _lpadc_status_flags.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to _lpadc_status_flags.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns
The OR'ed value of _lpadc_trigger_status_flags.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of _lpadc_trigger_status_flags.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to _lpadc_interrupt_enable.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to _lpadc_interrupt_enable.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)

Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)

Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns
The count of result kept in conversion FIFO.

bool LPADC_GetConvResult(ADC_Type *base, *lpadc_conv_result_t* *result)

Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns
Status whether FIFO entry is valid.

void LPADC_GetConvResultBlocking(ADC_Type *base, *lpadc_conv_result_t* *result)

Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const *lpadc_conv_trigger_config_t* *config)

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to lpadc_conv_trigger_config_t.

void LPADC_GetDefaultConvTriggerConfig(*lpadc_conv_trigger_config_t* *config)

Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId       = 0U;
config->delayPower            = 0U;
config->priority              = 0U;
config->channelAFIFOSelect    = 0U;
config->channelBFIFOSelect    = 0U;
config->enableHardwareTrigger = false;
```

Parameters

- config – Pointer to configuration structure.

static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)

Do software trigger to conversion command.

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

static inline void LPADC_EnableHardwareTriggerCommandSelection(ADC_Type *base, uint32_t triggerId, bool enable)

Enable hardware trigger command selection.

This function will use the hardware trigger command from ADC_ETC.The trigger command is then defined by ADC hardware trigger command selection field in ADC_ETC->TRIGx_CHAINy_z_n[CSEL].

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- enable – True to enable or flase to disable.

void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const *lpadc_conv_command_config_t* *config)

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to lpadc_conv_command_config_t.

void LPADC_GetDefaultConvCommandConfig(*lpadc_conv_command_config_t* *config)

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode             = kLPADC_SampleFullScale;
config->channelBScaleMode           = kLPADC_SampleFullScale;
config->sampleChannelMode           = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber               = 0U;
config->channelBNumber              = 0U;
config->chainedNextCommandNumber    = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount                   = 0U;
config->hardwareAverageMode         = kLPADC_HardwareAverageCount1;
config->sampleTimeMode              = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode         = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh    = 0U;
config->hardwareCompareValueLow     = 0U;
config->conversionResolutionMode    = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger           = false;
config->enableChannelB              = false;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_EnableCalibration(ADC_Type *base, bool enable)

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

status_t LPADC_DoAutoCalibration(ADC_Type *base)

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including:

- LPADC_EnableCalibration(...)
- LPADC_SetOffsetValue(...)
- LPADC_SetConvCommandConfig(...)
- LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.
- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t .

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, *lpadc_calibration_value_t* *ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure, this memory block should be always powered on even in low power modes.

status_t LPADC_SetCalibrationValue(ADC_Type *base, const *lpadc_calibration_value_t* *ptrCalibrationValue)

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

static inline void LPADC_RequestHighSpeedModeTrim(ADC_Type *base)

Request high speed mode trim calculation.

Parameters

- base – LPADC peripheral base address.

static inline int8_t LPADC_GetHighSpeedTrimValue(ADC_Type *base)

Get high speed mode trim value, the result is a 5-bit signed value between -16 and 15.

Note: The high speed mode trim value is used to minimize offset for high speed conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The calculated high speed mode trim value.

static inline void LPADC_SetHighSpeedTrimValue(ADC_Type *base, int8_t trimValue)

Set high speed mode trim value.

Note: If is possible to set the trim value manually, but it is recommended to use the LPADC_RequestHighSpeedModeTrim.

Parameters

- base – LPADC peripheral base address.
- trimValue – The trim value to be set.

static inline void LPADC_EnableHighSpeedConversionMode(ADC_Type *base, bool enable)

Enable/disable high speed conversion mode, if enabled conversions complete 2 or 3 ADCK cycles sooner compared to conversion cycle counts when high speed mode is disabled.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable high speed conversion mode:
  - **true** Enable high speed conversion mode;
  - **false** Disable high speed conversion mode.

static inline void LPADC_EnableExtraCycle(ADC_Type *base, bool enable)

Enable/disable an additional ADCK cycle to conversion.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable an additional ADCK cycle to conversion:
  - **true** Enable an additional ADCK cycle to conversion;
  - **false** Disable an additional ADCK cycle to conversion.

static inline void LPADC_SetTuneValue(ADC_Type *base, *lpadc_tune_value_t* tuneValue)

Set tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.
- tuneValue – The tune value to be set, please refer to lpadc_tune_value_t.

static inline *lpadc_tune_value_t* LPADC_GetTuneValue(ADC_Type *base)

Get tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The tune value, please refer to lpadc_tune_value_t.

static inline void LPADC_EnableJustifiedLeft(ADC_Type *base, bool enable)

Enable/disable left-justify format in 12-bit single-end mode.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable left-justify format in 12-bit single-end mode:
  - **true** Enable left-justify format in 12-bit single-end mode;

– **false** Disable left-justify format in 12-bit single-end mode.

FSL_LPADC_DRIVER_VERSION

LPADC driver version 2.9.5.

struct lpadc_config_t

#include <fsl_lpadc.h> LPADC global configuration.

This structure would used to keep the settings for initialization.

Public Members

bool enableInternalClock

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

bool enableVref1LowVoltage

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

bool enableInDozeMode

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

lpadc_conversion_average_mode_t conversionAverageMode

Auto-Calibration Averages.

bool enableAnalogPreliminary

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

uint32_t powerUpDelay

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (powerUpDelay * 4) ADCK cycles must result in a longer delay than the analog startup time.

lpadc_reference_voltage_source_t referenceVoltageSource

Selects the voltage reference high used for conversions.

lpadc_power_level_mode_t powerLevelMode

Power Configuration Selection.

lpadc_trigger_priority_policy_t triggerPriorityPolicy

Control how higher priority triggers are handled, see to lpadc_trigger_priority_policy_t.

bool enableConvPause

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

uint32_t convPauseDelay

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (convPauseDelay*4) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

uint32_t FIFOWatermark

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

struct lpadc_conv_command_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion command.

Public Members

lpadc_sample_scale_mode_t sampleScaleMode

Sample scale mode.

lpadc_sample_scale_mode_t channelBScaleMode

Alternate channe B Scale mode.

lpadc_sample_channel_mode_t sampleChannelMode

Channel sample mode.

uint32_t channelNumber

Channel number, select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number, select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the "loopCount" field selects the number of times the selected channel is converted consecutively; when enabled, the "loopCount" field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct lpadc_conv_trigger_config_t

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is 2^delayPower ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. THe software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct __lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.34 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy
The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle
The slave driver is idle.

enumerator kStatus_LPI2C_Nak
The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError
FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError
Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost
Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout
SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress
Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail
DMA request failed.

enumerator kStatus_LPI2C_Timeout
Timeout polling status flags.

IRQn_Type const kLpi2cMasterIrqs[]
Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

IRQn_Type const kLpi2cSlaveIrqs[]

lpi2c_master_isr_t s_lpi2cMasterIsr
Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

void *s_lpi2cMasterHandle[]
Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

uint32_t LPI2C_GetInstance(LPI2C_Type *base)
Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns
LPI2C instance number starting from 0.

I2C_RETRY_TIMES
Retry times for waiting flag.

2.35 LPI2C Master Driver

void LPI2C_MasterGetDefaultConfig(*lpi2c_master_config_t* *masterConfig)

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster            = true;
masterConfig->debugEnable             = false;
masterConfig->ignoreAck               = false;
masterConfig->pinConfig               = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz             = 100000U;
masterConfig->busIdleTimeout_ns       = 0;
masterConfig->pinLowTimeout_ns        = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable      = false;
masterConfig->hostRequest.source      = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity    = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with LPI2C_MasterInit().

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to lpi2c_master_config_t.

void LPI2C_MasterInit(LPI2C_Type *base, const *lpi2c_master_config_t* *masterConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The LPI2C peripheral base address.
- masterConfig – User provided peripheral configuration. Use LPI2C_MasterGetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

void LPI2C_MasterDeinit(LPI2C_Type *base)

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const *lpi2c_data_match_config_t* *matchConfig)

Configures LPI2C master data match feature.

Parameters

- base – The LPI2C peripheral base address.
- matchConfig – Settings for the data match feature.

status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)

Convert provided flags to status code, and clear any errors if present.

Parameters

- base – The LPI2C peripheral base address.
- status – Current status flags value that will be checked.

Return values

- kStatus_Success –
- kStatus_LPI2C_PinLowTimeout –
- kStatus_LPI2C_ArbitrationLost –
- kStatus_LPI2C_Nak –
- kStatus_LPI2C_FifoError –

status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- base – The LPI2C peripheral base address.

Return values

- kStatus_Success –
- kStatus_LPI2C_Busy –

static inline void LPI2C_MasterReset(LPI2C_Type *base)

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as master.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as master.

static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_lpi2c_master_flags

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

Attempts to clear other flags has no effect.

See also:

_lpi2c_master_flags.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _lpi2c_master_flags enumerators OR'd together. You may pass the result of a previous call to LPI2C_MasterGetStatusFlags().

static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C master interrupt requests.

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _lpi2c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C master interrupt requests.

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _lpi2c_master_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns
A bitmask composed of _lpi2c_master_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)

Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns
The LPI2C Master Transmit Data Register address.

static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns
The LPI2C Master Receive Data Register address.

static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)

Sets the watermarks for LPI2C master FIFOs.

Parameters

- base – The LPI2C peripheral base address.
- txWords – Transmit FIFO watermark value in words. The kLPI2C_MasterTxReadyFlag flag is set whenever the number of words in the transmit FIFO is equal or less than *txWords*. Writing a value equal or greater than the FIFO size is truncated.
- rxWords – Receive FIFO watermark value in words. The kLPI2C_MasterRxReadyFlag flag is set whenever the number of words in the receive FIFO is greater than *rxWords*. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t *txCount)

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- base – The LPI2C peripheral base address.
- txCount – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- rxCount – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t baudRate_Hz)

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- base – The LPI2C peripheral base address.
- sourceClock_Hz – LPI2C functional clock frequency in Hertz.
- baudRate_Hz – Requested bus frequency in Hertz.

static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, *lpi2c_direction_t* dir)

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- base – The LPI2C peripheral base address.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kLPI2C_Read or kLPI2C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.

static inline *status_t* LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address, *lpi2c_direction_t* dir)

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like LPI2C_MasterStart(), it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- base – The LPI2C peripheral base address.
- address – 7-bit slave device address, in bits [6:0].
- dir – Master transfer direction, either kLPI2C_Read or kLPI2C_Write. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- kStatus_Success – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.

status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns kStatus_LPI2C_Nak.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.

Return values

- kStatus_Success – Data was sent successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or over run.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.

- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterStop(LPI2C_Type *base)

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- base – The LPI2C peripheral base address.

Return values

- kStatus_Success – The STOP signal was successfully sent on the bus and the transaction terminated.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, *lpi2c_master_transfer_t* *transfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- base – The LPI2C peripheral base address.
- transfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data was received successfully.
- kStatus_LPI2C_Busy – Another master is currently utilizing the bus.
- kStatus_LPI2C_Nak – The slave device sent a NAK in response to a byte.
- kStatus_LPI2C_FifoError – FIFO under run or overrun.
- kStatus_LPI2C_ArbitrationLost – Arbitration lost error.
- kStatus_LPI2C_PinLowTimeout – SCL or SDA were held low longer than the timeout.

void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_callback_t* callback, void *userData)

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking transaction on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void LPI2C_MasterTransferAbort(LPI2C_Type *base, *lpi2c_master_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- lpi2cMasterHandle – Pointer to the LPI2C master driver handle.

enum _lpi2c_master_flags

LPI2C master peripheral flags.

The following status register flags can be cleared:

- kLPI2C_MasterEndOfPacketFlag
- kLPI2C_MasterStopDetectFlag
- kLPI2C_MasterNackDetectFlag
- kLPI2C_MasterArbitrationLostFlag
- kLPI2C_MasterFifoErrFlag
- kLPI2C_MasterPinLowTimeoutFlag
- kLPI2C_MasterDataMatchFlag

All flags except kLPI2C_MasterBusyFlag and kLPI2C_MasterBusBusyFlag can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_MasterTxReadyFlag

Transmit data flag

enumerator kLPI2C_MasterRxReadyFlag

Receive data flag

enumerator kLPI2C_MasterEndOfPacketFlag

End Packet flag

enumerator kLPI2C_MasterStopDetectFlag

Stop detect flag

enumerator kLPI2C_MasterNackDetectFlag

NACK detect flag

enumerator kLPI2C_MasterArbitrationLostFlag

Arbitration lost flag

enumerator kLPI2C_MasterFifoErrFlag

FIFO error flag

enumerator kLPI2C_MasterPinLowTimeoutFlag

Pin low timeout flag

enumerator kLPI2C_MasterDataMatchFlag
Data match flag

enumerator kLPI2C_MasterBusyFlag
Master busy flag

enumerator kLPI2C_MasterBusBusyFlag
Bus busy flag

enumerator kLPI2C_MasterClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_MasterIrqFlags
IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_MasterErrorFlags
Errors to check for.

enum _lpi2c_direction
Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write
Master transmit.

enumerator kLPI2C_Read
Master receive.

enum _lpi2c_master_pin_config
LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain
LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly
LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull
LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull
LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave
LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave
LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave
LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput
LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source
LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin
Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger
Select the input trigger as the host request input

enum _lpi2c_host_request_polarity
LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow
Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh
Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode
LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled
LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1
LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1
LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1
LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1
LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1
LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1
LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum _lpi2c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the _lpi2c_master_transfer::flags field.

Values:

enumerator kLPI2C_TransferDefaultFlag
Transfer starts with a start signal, stops with a stop signal.

enumerator kLPI2C_TransferNoStartFlag
Don't send a start condition, address, and sub address

enumerator kLPI2C_TransferNoStopFlag
Don't send a stop condition.

typedef enum *_lpi2c_direction* lpi2c_direction_t
Direction of master and slave transfers.

typedef enum *_lpi2c_master_pin_config* lpi2c_master_pin_config_t

LPI2C pin configuration.

typedef enum *_lpi2c_host_request_source* lpi2c_host_request_source_t

LPI2C master host request selection.

typedef enum *_lpi2c_host_request_polarity* lpi2c_host_request_polarity_t

LPI2C master host request pin polarity configuration.

typedef struct *_lpi2c_master_config* lpi2c_master_config_t

Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_data_match_config_mode* lpi2c_data_match_config_mode_t

LPI2C master data match configuration modes.

typedef struct *_lpi2c_match_config* lpi2c_data_match_config_t

LPI2C master data match configuration structure.

typedef struct *_lpi2c_master_transfer* lpi2c_master_transfer_t

LPI2C master descriptor of the transfer.

typedef struct *_lpi2c_master_handle* lpi2c_master_handle_t

LPI2C master handle of the transfer.

typedef void (*lpi2c_master_transfer_callback_t)(LPI2C_Type *base, *lpi2c_master_handle_t* *handle, *status_t* completionStatus, void *userData)

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterTransferCreateHandle().

Param base
The LPI2C peripheral base address.

Param handle
Pointer to the LPI2C master driver handle.

Param completionStatus
Either kStatus_Success or an error code describing how the transfer completed.

Param userData
Arbitrary pointer-sized value passed from the application.

typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

struct _lpi2c_master_config

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the LPI2C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableMaster
: Whether to enable master mode.

bool enableDoze
: Whether master is enabled in doze mode.

bool debugEnable
: Enable transfers to continue when halted in debug mode.

bool ignoreAck
: Whether to ignore ACK/NACK.

lpi2c_master_pin_config_t pinConfig
: The pin configuration option.

uint32_t baudRate_Hz
: Desired baud rate in Hertz.

uint32_t busIdleTimeout_ns
: Bus idle timeout in nanoseconds. Set to 0 to disable.

uint32_t pinLowTimeout_ns
: Pin low timeout in nanoseconds. Set to 0 to disable.

uint8_t sdaGlitchFilterWidth_ns
: Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

uint8_t sclGlitchFilterWidth_ns
: Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

struct *_lpi2c_master_config* hostRequest
: Host request options.

struct __lpi2c_match_config
: *#include <fsl_lpi2c.h>* LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode
: Data match configuration setting.

bool rxDataMatchOnly
: When set to true, received data is ignored until a successful match.

uint32_t match0
: Match value 0.

uint32_t match1
: Match value 1.

struct __lpi2c_master_transfer
: *#include <fsl_lpi2c.h>* Non-blocking transfer descriptor structure.

  This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags
: Bit mask of options for the transfer. See enumeration _lpi2c_master_transfer_flags for available options. Set to 0 or kLPI2C_TransferDefaultFlag for normal transfers.

uint16_t slaveAddress
: The 7-bit slave address.

lpi2c_direction_t direction
: Either kLPI2C_Read or kLPI2C_Write.

uint32_t subaddress
: Sub address. Transferred MSB first.

size_t subaddressSize
: Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data
: Pointer to data to transfer.

size_t dataSize
: Number of bytes to transfer.

struct __lpi2c_master_handle
: *#include <fsl_lpi2c.h>* Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state
: Transfer state machine current state.

uint16_t remainingBytes
: Remaining byte count in current state.

uint8_t *buf
: Buffer pointer for current state.

uint16_t commandBuffer[6]
: LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer
: Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback
: Callback function pointer.

void *userData
: Application data passed to callback.

struct hostRequest

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.36 LPI2C Master DMA Driver

void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *edma_handle_t* *rxDmaHandle, *edma_handle_t* *txDmaHandle, *lpi2c_master_edma_transfer_callback_t* callback, void *userData)

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, size_t *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

typedef struct *_lpi2c_master_edma_handle* lpi2c_master_edma_handle_t

LPI2C master EDMA handle of the transfer.

typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *status_t* completionStatus, void *userData)

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base
The LPI2C peripheral base address.

Param handle
Handle associated with the completed transfer.

Param completionStatus
Either kStatus_Success or an error code describing how the transfer completed.

Param userData
Arbitrary pointer-sized value passed from the application.

struct __lpi2c_master_edma_handle

#include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base

LPI2C base pointer.

bool isBusy

Transfer state machine current state.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]

LPI2C command sequence. When all 10 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] + receive&Size[4 words]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

edma_handle_t *rx

Handle for receive DMA channel.

edma_handle_t *tx

Handle for transmit DMA channel.

edma_tcd_t tcds[3]

Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.37 LPI2C Slave Driver

void LPI2C_SlaveGetDefaultConfig(*lpi2c_slave_config_t* *slaveConfig)

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave              = true;
slaveConfig->address0                 = 0U;
slaveConfig->address1                 = 0U;
slaveConfig->addressMatchMode         = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable         = true;
slaveConfig->filterEnable             = true;
slaveConfig->enableGeneralCall        = false;
slaveConfig->sclStall.enableAck       = false;
slaveConfig->sclStall.enableTx        = true;
slaveConfig->sclStall.enableRx        = true;
```

(continues on next page)

(continued from previous page)

```
slaveConfig->sclStall.enableAddress    = true;
slaveConfig->ignoreAck                 = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns   = 0;
slaveConfig->sclGlitchFilterWidth_ns   = 0;
slaveConfig->dataValidDelay_ns         = 0;
slaveConfig->clockHoldTime_ns          = 0;
```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with LPI2C_SlaveInit(). Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- slaveConfig – **[out]** User provided configuration structure that is set to default values. Refer to lpi2c_slave_config_t.

void LPI2C_SlaveInit(LPI2C_Type *base, const *lpi2c_slave_config_t* *slaveConfig, uint32_t sourceClock_Hz)

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- base – The LPI2C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use LPI2C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- sourceClock_Hz – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

void LPI2C_SlaveDeinit(LPI2C_Type *base)

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_SlaveReset(LPI2C_Type *base)

Performs a software reset of the LPI2C slave peripheral.

Parameters

- base – The LPI2C peripheral base address.

static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)

Enables or disables the LPI2C module as slave.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as slave.

static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

_lpi2c_slave_flags

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

Attempts to clear other flags has no effect.

See also:

_lpi2c_slave_flags.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of _lpi2c_slave_flags enumerators OR'd together. You may pass the result of a previous call to LPI2C_SlaveGetStatusFlags().

static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Enables the LPI2C slave interrupt requests.

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See _lpi2c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)

Disables the LPI2C slave interrupt requests.

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See _lpi2c_slave_flags for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of _lpi2c_slave_flags enumerators OR'd together to indicate the set of enabled interrupts.

static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableAddressValid – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- enableRx – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- enableTx – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- base – The LPI2C peripheral base address.

Return values

- true – Bus is busy.
- false – Bus is idle.

static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the kLPI2C_SlaveTransmitAckFlag is asserted. This only happens if you enable the sclStall.enableAck field of the lpi2c_slave_config_t configuration structure used to initialize the slave peripheral.

Parameters

- base – The LPI2C peripheral base address.
- ackOrNack – Pass true for an ACK or false for a NAK.

static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- base – The LPI2C peripheral base address.
- enable – True will enable ACKSTALL,false will disable ACKSTALL.

static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)

Returns the slave address sent by the I2C master.

This function should only be called if the kLPI2C_SlaveAddressValidFlag is asserted.

Parameters

- base – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)

Performs a polling send transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- txBuff – The pointer to the data to be transferred.
- txSize – The length in bytes of the data to be transferred.
- actualTxSize – **[out]**

Returns

Error or success status returned by API.

status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)

Performs a polling receive transfer on the I2C bus.

Parameters

- base – The LPI2C peripheral base address.
- rxBuff – The pointer to the data to be transferred.
- rxSize – The length in bytes of the data to be transferred.
- actualRxSize – **[out]**

Returns

Error or success status returned by API.

void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, *lpi2c_slave_transfer_callback_t* callback, void *userData)

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C slave driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of lpi2c_slave_transfer_event_t enumerators for the events you wish to receive. The kLPI2C_SlaveTransmitEvent and kLPI2C_SlaveReceiveEvent events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the kLPI2C_SlaveAllEvents constant is provided as a convenient way to enable all events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.
- eventMask – Bit mask formed by OR'ing together lpi2c_slave_transfer_event_t enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and kLPI2C_SlaveAllEvents to enable all events.

Return values

- kStatus_Success – Slave transfers were successfully started.
- kStatus_LPI2C_Busy – Slave transfers have already been started on this handle.

status_t LPI2C_SlaveTransferGetCount(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to i2c_slave_handle_t structure.
- count – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.

- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, *lpi2c_slave_handle_t* *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

enum _lpi2c_slave_flags

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag

Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag

Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag

Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag

Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag

Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag

Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag

Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag

FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag
Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag
General call flag

enumerator kLPI2C_SlaveBusyFlag
Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag
Bus busy flag

enumerator kLPI2C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags
IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags
Errors to check for.

enum _lpi2c_slave_address_match
LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0
Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1
Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1
Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event
Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent
Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent
Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent
Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent
A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to LPI2C_SlaveTransferNonBlocking() in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, *lpi2c_slave_transfer_t* *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the LPI2C_SlaveSetCallback() function after you have created a handle.

Param base
Base address for the LPI2C instance on which the event occurred.

Param transfer
Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData
Arbitrary pointer-sized value passed from the application.

struct _lpi2c_slave_config

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave
: Enable slave mode.

uint8_t address0
: Slave's 7-bit address.

uint8_t address1
: Alternate slave 7-bit address.

lpi2c_slave_address_match_t addressMatchMode
: Address matching options.

bool filterDozeEnable
: Enable digital glitch filter in doze mode.

bool filterEnable
: Enable digital glitch filter.

bool enableGeneralCall
: Enable general call address matching.

struct *_lpi2c_slave_config* sclStall
: SCL stall enable options.

bool ignoreAck
: Continue transfers after a NACK is detected.

bool enableReceivedAddressRead
: Enable reading the address received address as the first byte of data.

uint32_t sdaGlitchFilterWidth_ns
: Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t sclGlitchFilterWidth_ns
: Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t dataValidDelay_ns
: Width in nanoseconds of the data valid delay.

uint32_t clockHoldTime_ns
: Width in nanoseconds of the clock hold time.

struct _lpi2c_slave_transfer
: *#include <fsl_lpi2c.h>* LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event
: Reason the callback is being invoked.

uint8_t receivedAddress
: Matching address send by master.

uint8_t *data
: Transfer buffer

size_t dataSize
: Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct __lpi2c_slave_handle

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.38 LPIT: Low-Power Interrupt Timer

void LPIT_Init(LPIT_Type *base, const *lpit_config_t* *config)

Ungates the LPIT clock and configures the peripheral for a basic operation.

This function issues a software reset to reset all channels and registers except the Module Control register.

Note: This API should be called at the beginning of the application using the LPIT driver.

Parameters

- base – LPIT peripheral base address.
- config – Pointer to the user configuration structure.

void LPIT_Deinit(LPIT_Type *base)

Disables the module and gates the LPIT clock.

Parameters

- base – LPIT peripheral base address.

void LPIT_GetDefaultConfig(*lpit_config_t* *config)

Fills in the LPIT configuration structure with default settings.

The default values are:

```
config->enableRunInDebug = false;
config->enableRunInDoze = false;
```

Parameters

- config – Pointer to the user configuration structure.

status_t LPIT_SetupChannel(LPIT_Type *base, *lpit_chnl_t* channel, const *lpit_chnl_params_t* *chnlSetup)

Sets up an LPIT channel based on the user's preference.

This function sets up the operation mode to one of the options available in the enumeration lpit_timer_modes_t. It sets the trigger source as either internal or external, trigger selection and the timers behaviour when a timeout occurs. It also chains the timer if a prior timer if requested by the user.

Parameters

- base – LPIT peripheral base address.
- channel – Channel that is being configured.
- chnlSetup – Configuration parameters.

static inline void LPIT_EnableInterrupts(LPIT_Type *base, uint32_t mask)

Enables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lpit_interrupt_enable_t

static inline void LPIT_DisableInterrupts(LPIT_Type *base, uint32_t mask)

Disables the selected PIT interrupts.

Parameters

- base – LPIT peripheral base address.
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lpit_interrupt_enable_t

static inline uint32_t LPIT_GetEnabledInterrupts(LPIT_Type *base)

Gets the enabled LPIT interrupts.

Parameters

- base – LPIT peripheral base address.

Returns

The enabled interrupts. This is the logical OR of members of the enumeration lpit_interrupt_enable_t

static inline uint32_t LPIT_GetStatusFlags(LPIT_Type *base)

Gets the LPIT status flags.

Parameters

- base – LPIT peripheral base address.

Returns

The status flags. This is the logical OR of members of the enumeration lpit_status_flags_t

static inline void LPIT_ClearStatusFlags(LPIT_Type *base, uint32_t mask)

Clears the LPIT status flags.

Parameters

- base – LPIT peripheral base address.
- mask – The status flags to clear. This is a logical OR of members of the enumeration lpit_status_flags_t

static inline void LPIT_SetTimerPeriod(LPIT_Type *base, *lpit_chnl_t* channel, uint32_t ticks)

Sets the timer period in units of count.

Timers begin counting down from the value set by this function until it reaches 0, at which point it generates an interrupt and loads this register value again. Writing a new value to this register does not restart the timer. Instead, the value is loaded after the timer expires.

Note: User can call the utility macros provided in fsl_common.h to convert to ticks.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

static inline void LPIT_SetTimerValue(LPIT_Type *base, *lpit_chnl_t* channel, uint32_t ticks)

Sets the timer period in units of count.

In the Dual 16-bit Periodic Counter mode, the counter will load and then the lower 16-bits will decrement down to zero, which will assert the output pre-trigger. The upper 16-bits will then decrement down to zero, which will negate the output pre-trigger and set the timer interrupt flag.

Note: Set TVAL register to 0 or 1 is invalid in compare mode.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.
- ticks – Timer period in units of ticks.

static inline uint32_t LPIT_GetCurrentTimerCount(LPIT_Type *base, *lpit_chnl_t* channel)

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in fsl_common.h to convert ticks to microseconds or milliseconds.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

Returns

Current timer counting value in ticks.

static inline void LPIT_StartTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Starts the timer counting.

After calling this function, timers load the period value and count down to 0. When the timer reaches 0, it generates a trigger pulse and sets the timeout interrupt flag.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

static inline void LPIT_StopTimer(LPIT_Type *base, *lpit_chnl_t* channel)

Stops the timer counting.

Parameters

- base – LPIT peripheral base address.
- channel – Timer channel number.

FSL_LPIT_DRIVER_VERSION

Version 2.1.3

enum _lpit_chnl

List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

Values:

enumerator kLPIT_Chnl_0

LPIT channel number 0

enumerator kLPIT_Chnl_1
LPIT channel number 1

enumerator kLPIT_Chnl_2
LPIT channel number 2

enumerator kLPIT_Chnl_3
LPIT channel number 3

enum _lpit_timer_modes
Mode options available for the LPIT timer.

Values:

enumerator kLPIT_PeriodicCounter
Use the all 32-bits, counter loads and decrements to zero

enumerator kLPIT_DualPeriodicCounter
Counter loads, lower 16-bits decrement to zero, then upper 16-bits decrement

enumerator kLPIT_TriggerAccumulator
Counter loads on first trigger and decrements on each trigger

enumerator kLPIT_InputCapture
Counter loads with 0xFFFFFFFF, decrements to zero. It stores the inverse of the current value when a input trigger is detected

enum _lpit_trigger_select
Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

Values:

enumerator kLPIT_Trigger_TimerChn0
Channel 0 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn1
Channel 1 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn2
Channel 2 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn3
Channel 3 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn4
Channel 4 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn5
Channel 5 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn6
Channel 6 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn7
Channel 7 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn8
Channel 8 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn9
Channel 9 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn10
Channel 10 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn11
Channel 11 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn12
Channel 12 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn13
Channel 13 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn14
Channel 14 is selected as a trigger source

enumerator kLPIT_Trigger_TimerChn15
Channel 15 is selected as a trigger source

enum _lpit_trigger_source
Trigger source options available.

Values:

enumerator kLPIT_TriggerSource_External
Use external trigger input

enumerator kLPIT_TriggerSource_Internal
Use internal trigger

enum _lpit_interrupt_enable
List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerInterruptEnable
Channel 0 Timer interrupt

enumerator kLPIT_Channel1TimerInterruptEnable
Channel 1 Timer interrupt

enumerator kLPIT_Channel2TimerInterruptEnable
Channel 2 Timer interrupt

enumerator kLPIT_Channel3TimerInterruptEnable
Channel 3 Timer interrupt

enum _lpit_status_flags
List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

Values:

enumerator kLPIT_Channel0TimerFlag
Channel 0 Timer interrupt flag

enumerator kLPIT_Channel1TimerFlag
Channel 1 Timer interrupt flag

enumerator kLPIT_Channel2TimerFlag
Channel 2 Timer interrupt flag

enumerator kLPIT_Channel3TimerFlag
Channel 3 Timer interrupt flag

typedef enum *_lpit_chnl* lpit_chnl_t
List of LPIT channels.

Note: Actual number of available channels is SoC-dependent

typedef enum *_lpit_timer_modes* lpit_timer_modes_t
Mode options available for the LPIT timer.

typedef enum *_lpit_trigger_select* lpit_trigger_select_t
Trigger options available.

This is used for both internal and external trigger sources. The actual trigger options available is SoC-specific, user should refer to the reference manual.

typedef enum *_lpit_trigger_source* lpit_trigger_source_t
Trigger source options available.

typedef enum *_lpit_interrupt_enable* lpit_interrupt_enable_t
List of LPIT interrupts.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef enum *_lpit_status_flags* lpit_status_flags_t
List of LPIT status flags.

Note: Number of timer channels are SoC-specific. See the SoC Reference Manual.

typedef struct *_lpit_chnl_params* lpit_chnl_params_t
Structure to configure the channel timer.

typedef struct *_lpit_config* lpit_config_t
LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

static void LPIT_ResetStateDelay(void)
Short wait for LPIT state reset.

After clear or set LPIT_EN, there should be delay longer than 4 LPIT functional clock.

static inline void LPIT_Reset(LPIT_Type *base)
Performs a software reset on the LPIT module.

This resets all channels and registers except the Module Control Register.

Parameters

- base – LPIT peripheral base address.

LPIT_RESET_STATE_DELAY

Delay used in LPIT_Reset.

The macro value should be larger than 4 * core clock / LPIT peripheral clock.

struct _lpit_chnl_params

#include <fsl_lpit.h> Structure to configure the channel timer.

Public Members

bool chainChannel

true: Timer chained to previous timer; false: Timer not chained

lpit_timer_modes_t timerMode

Timers mode of operation.

lpit_trigger_select_t triggerSelect

Trigger selection for the timer

lpit_trigger_source_t triggerSource

Decides if we use external or internal trigger.

bool enableReloadOnTrigger

true: Timer reloads when a trigger is detected; false: No effect

bool enableStopOnTimeout

true: Timer will stop after timeout; false: does not stop after timeout

bool enableStartOnTrigger

true: Timer starts when a trigger is detected; false: decrement immediately

struct _lpit_config

#include <fsl_lpit.h> LPIT configuration structure.

This structure holds the configuration settings for the LPIT peripheral. To initialize this structure to reasonable defaults, call the LPIT_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool enableRunInDebug

true: Timers run in debug mode; false: Timers stop in debug mode

bool enableRunInDoze

true: Timers run in doze mode; false: Timers stop in doze mode

2.39 LPSPI: Low Power Serial Peripheral Interface

2.40 LPSPI Peripheral driver

void LPSPI_MasterInit(LPSPI_Type *base, const *lpspi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure lpspi_master_config_t.
- srcClock_Hz – Module source input clock in Hertz

void LPSPI_MasterGetDefaultConfig(*lpspi_master_config_t* *masterConfig)

Sets the lpspi_master_config_t structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to lpspi_master_config_t structure

void LPSPI_SlaveInit(LPSPI_Type *base, const *lpspi_slave_config_t* *slaveConfig)

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure lpspi_slave_config_t.

void LPSPI_SlaveGetDefaultConfig(*lpspi_slave_config_t* *slaveConfig)

Sets the lpspi_slave_config_t structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to lpspi_slave_config_t structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the _lpspi_flags. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag|kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type _lpspi_flags.

static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)

static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_interrupt_enable.

static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_interrupt_enable.

static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_dma_enable.

static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum _lpspi_dma_enable.

static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns
The LPSPI Transmit Data Register address.

static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns
The LPSPI Receive Data Register address.

bool LPSPI_CheckTransferArgument(LPSPI_Type *base, *lpspi_transfer_t* *transfer, bool isEdma)

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns
Return true for right and false for wrong.

static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, *lpspi_master_slave_mode_t* mode)

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- base – LPSPI peripheral address.
- mode – Mode setting (master or slave) of type lpspi_master_slave_mode_t.

static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, *lpspi_which_pcs_t* select)

Configures the peripheral chip select used for the transfer.

Parameters

- base – LPSPI peripheral address.
- select – LPSPI Peripheral Chip Select (PCS) configuration.

static inline void LPSPI_SetPCSContinous(LPSPI_Type *base, bool IsContinous)

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- base – LPSPI peripheral address.
- IsContinous – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

static inline bool LPSPI_IsMaster(LPSPI_Type *base)

Returns whether the LPSPI module is in master mode.

Parameters

- base – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)

Flushes the LPSPI FIFOs.

Parameters

- base – LPSPI peripheral address.
- flushTxFifo – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- flushRxFifo – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- base – LPSPI peripheral address.
- txWater – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.
- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum _lpspi_pcs_polarity.

static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame

size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz, uint32_t *tcrPrescaleValue)

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale tcrPrescaleValue parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.
- tcrPrescaleValue – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, *lpspi_delay_type_t* whichDelay)

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type lpspi_delay_type_t.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.

- scaler – The 8-bit delay value 0x00 to 0xFF (255).
- whichDelay – The desired delay to configure, must be of type lpspi_delay_type_t.

uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec, *lpspi_delay_type_t* whichDelay, uint32_t srcClock_Hz)

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type lpspi_delay_type_t.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler).

Parameters

- base – LPSPI peripheral address.
- delayTimeInNanoSec – The desired delay value in nano-seconds.
- whichDelay – The desired delay to configuration, which must be of type lpspi_delay_type_t.
- srcClock_Hz – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.

static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- base – LPSPI peripheral address.
- data – The data word to be sent.

static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The data read from the data buffer.

void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)

Set up the dummy data.

Parameters

- base – LPSPI peripheral address.
- dummyData – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_master_transfer_callback_t* callback, void *userData)

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to lpspi_master_handle_t.
- callback – DSPI callback.
- userData – callback function parameter.

status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.

- transfer – pointer to lpspi_transfer_t structure.

Returns
status of status_t.

status_t LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, size_t *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns
status of status_t.

void LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.

void LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_master_handle_t structure which stores the transfer state.

void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_slave_transfer_callback_t* callback, void *userData)

Initializes the LPSPI slave handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- base – LPSPI peripheral address.
- handle – LPSPI handle pointer to lpspi_slave_handle_t.
- callback – DSPI callback.
- userData – callback function parameter.

status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns
status of status_t.

status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, size_t *count)

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns
status of status_t.

void LPSPI_SlaveTransferAbort(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.

void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, *lpspi_slave_handle_t* *handle)

LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to lpspi_slave_handle_t structure which stores the transfer state.

bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)

Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns
true for the tx FIFO is ready, false is not.

void LPSPI_DriverIRQHandler(uint32_t instance)

LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

FSL_LPSPI_DRIVER_VERSION

LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator kStatus_LPSPI_Busy

LPSPI transfer is busy.

enumerator kStatus_LPSPI_Error

LPSPI driver error.

enumerator kStatus_LPSPI_Idle

LPSPI is idle.

enumerator kStatus_LPSPI_OutOfRange

LPSPI transfer out Of range.

enumerator kStatus_LPSPI_Timeout

LPSPI timeout polling status flags.

enum _lpspi_flags

LPSPI status flags in SPIx_SR register.

Values:

enumerator kLPSPI_TxDataRequestFlag

Transmit data flag

enumerator kLPSPI_RxDataReadyFlag

Receive data flag

enumerator kLPSPI_WordCompleteFlag

Word Complete flag

enumerator kLPSPI_FrameCompleteFlag

Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag

Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag

Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag

Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag

Data Match flag

enumerator kLPSPI_ModuleBusyFlag

Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable
LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable
LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable
Receive data DMA enable

enum _lpspi_master_slave_mode
LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master
LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave
LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config
LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0
PCS[0]

enumerator kLPSPI_Pcs1
PCS[1]

enumerator kLPSPI_Pcs2
PCS[2]

enumerator kLPSPI_Pcs3
PCS[3]

enum _lpspi_pcs_polarity_config
LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh
PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow
PCS Active Low (idles high)

enum _lpspi_pcs_polarity
LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow
Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow
Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow
Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow
Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow
Pcs0 to Pcs5 Active Low (idles high).

enum _lpspi_clock_polarity
LPSPI clock polarity configuration.

Values:

enumerator kLPSPI_ClockPolarityActiveHigh
CPOL=0. Active-high LPSPI clock (idles low)

enumerator kLPSPI_ClockPolarityActiveLow
CPOL=1. Active-low LPSPI clock (idles high)

enum _lpspi_clock_phase
LPSPI clock phase configuration.

Values:

enumerator kLPSPI_ClockPhaseFirstEdge
CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator kLPSPI_ClockPhaseSecondEdge
CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum _lpspi_shift_direction

LPSPI data shifter direction options.

Values:

enumerator kLPSPI_MsbFirst

Data transfers start with most significant bit.

enumerator kLPSPI_LsbFirst

Data transfers start with least significant bit.

enum _lpspi_host_request_select

LPSPI Host Request select configuration.

Values:

enumerator kLPSPI_HostReqExtPin

Host Request is an ext pin.

enumerator kLPSPI_HostReqInternalTrigger

Host Request is an internal trigger.

enum _lpspi_match_config

LPSPI Match configuration options.

Values:

enumerator kLPSI_MatchDisabled

LPSPI Match Disabled.

enumerator kLPSI_1stWordEqualsM0orM1

LPSPI Match Enabled.

enumerator kLPSI_AnyWordEqualsM0orM1

LPSPI Match Enabled.

enumerator kLPSI_1stWordEqualsM0and2ndWordEqualsM1

LPSPI Match Enabled.

enumerator kLPSI_AnyWordEqualsM0andNxtWordEqualsM1

LPSPI Match Enabled.

enumerator kLPSI_1stWordAndM1EqualsM0andM1

LPSPI Match Enabled.

enumerator kLPSI_AnyWordAndM1EqualsM0andM1

LPSPI Match Enabled.

enum _lpspi_pin_config

LPSPI pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut

LPSPI SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut

LPSPI SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut

LPSPI SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut

LPSPI SDO input, SDI output.

enum _lpspi_data_out_config

LPSPI data output configuration.

Values:

enumerator kLpspiDataOutRetained

Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate

Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width

LPSPI transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer

1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer

2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer

4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type

LPSPI delay type selection.

Values:

enumerator kLPSPI_PcsToSck

PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs

Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer

Delay between transfers.

enum _lpspi_transfer_config_flag_for_master

Use this enumeration for LPSPI master transfer configFlags.

Values:

enumerator kLPSPI_MasterPcs0

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS0 signal

enumerator kLPSPI_MasterPcs1

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS1 signal

enumerator kLPSPI_MasterPcs2

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS2 signal

enumerator kLPSPI_MasterPcs3

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS3 signal

enumerator kLPSPI_MasterPcsContinuous

Is PCS signal continuous

enumerator kLPSPI_MasterByteSwap

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

i. If you set bitPerFrame = 8 , no matter the kLPSPI_MasterByteSwapyou flag is used or not, the waveform is 1 2 3 4 5 6 7 8.

ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.

iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPI_MasterByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_MasterByteSwap flag.

enum _lpspi_transfer_config_flag_for_slave

Use this enumeration for LPSPI slave transfer configFlags.

Values:

enumerator kLPSPI_SlavePcs0

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS0 signal

enumerator kLPSPI_SlavePcs1

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS1 signal

enumerator kLPSPI_SlavePcs2

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS2 signal

enumerator kLPSPI_SlavePcs3

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS3 signal

enumerator kLPSPI_SlaveByteSwap

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set lpspi_shift_direction_t to MSB).

i. If you set bitPerFrame = 8 , no matter the kLPSPI_SlaveByteSwap flag is used or not, the waveform is 1 2 3 4 5 6 7 8.

ii. If you set bitPerFrame = 16 : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the kLPSPI_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_SlaveByteSwap flag.

iii. If you set bitPerFrame = 32 : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the kLPSPI_SlaveByteSwap flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the kLPSPI_SlaveByteSwap flag.

enum _lpspi_transfer_state

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator kLPSPI_Idle

Nothing in the transmitter/receiver.

enumerator kLPSPI_Busy

Transfer queue is not finished.

enumerator kLPSPI_Error

Transfer error.

typedef enum *_lpspi_master_slave_mode* lpspi_master_slave_mode_t

LPSPI master or slave mode configuration.

typedef enum *_lpspi_which_pcs_config* lpspi_which_pcs_t

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum *_lpspi_pcs_polarity_config* lpspi_pcs_polarity_config_t

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum *_lpspi_clock_polarity* lpspi_clock_polarity_t
LPSPI clock polarity configuration.

typedef enum *_lpspi_clock_phase* lpspi_clock_phase_t
LPSPI clock phase configuration.

typedef enum *_lpspi_shift_direction* lpspi_shift_direction_t
LPSPI data shifter direction options.

typedef enum *_lpspi_host_request_select* lpspi_host_request_select_t
LPSPI Host Request select configuration.

typedef enum *_lpspi_match_config* lpspi_match_config_t
LPSPI Match configuration options.

typedef enum *_lpspi_pin_config* lpspi_pin_config_t
LPSPI pin (SDO and SDI) configuration.

typedef enum *_lpspi_data_out_config* lpspi_data_out_config_t
LPSPI data output configuration.

typedef enum *_lpspi_transfer_width* lpspi_transfer_width_t
LPSPI transfer width configuration.

typedef enum *_lpspi_delay_type* lpspi_delay_type_t
LPSPI delay type selection.

typedef struct *_lpspi_master_config* lpspi_master_config_t
LPSPI master configuration structure.

typedef struct *_lpspi_slave_config* lpspi_slave_config_t
LPSPI slave configuration structure.

typedef struct *_lpspi_master_handle* lpspi_master_handle_t
Forward declaration of the _lpspi_master_handle typedefs.

typedef struct *_lpspi_slave_handle* lpspi_slave_handle_t
Forward declaration of the _lpspi_slave_handle typedefs.

typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *status_t* status, void *userData)
Master completion callback function pointer type.

Param base
LPSPI peripheral address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, *lpspi_slave_handle_t* *handle, *status_t* status, void *userData)
Slave completion callback function pointer type.

Param base
LPSPI peripheral address.

Param handle
Pointer to the handle for the LPSPI slave.

Param status
Success or error code describing whether the transfer is completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef struct *_lpspi_transfer* lpspi_transfer_t
LPSPI master/slave transfer structure.

volatile uint8_t g_lpspiDummyData[]
Global variable for dummy data value setting.

LPSPI_DUMMY_DATA
LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

SPI_RETRY_TIMES
Retry times for waiting flag.

LPSPI_MASTER_PCS_SHIFT
LPSPI master PCS shift macro , internal used.

LPSPI_MASTER_PCS_MASK
LPSPI master PCS shift macro , internal used.

LPSPI_SLAVE_PCS_SHIFT
LPSPI slave PCS shift macro , internal used.

LPSPI_SLAVE_PCS_MASK
LPSPI slave PCS shift macro , internal used.

struct _lpspi_master_config
#include <fsl_lpspi.h> LPSPI master configuration structure.

Public Members

uint32_t baudRate
Baud Rate for LPSPI.

uint32_t bitsPerFrame
Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol
Clock polarity.

lpspi_clock_phase_t cpha
Clock phase.

lpspi_shift_direction_t direction
MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec
PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec
Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec
: After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs
: Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow
: Desired PCS active high or low

lpspi_pin_config_t pinCfg
: Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig
: Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

bool enableInputDelay
: Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct __lpspi_slave_config
: *#include <fsl_lpspi.h>* LPSPI slave configuration structure.

Public Members

uint32_t bitsPerFrame
: Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol
: Clock polarity.

lpspi_clock_phase_t cpha
: Clock phase.

lpspi_shift_direction_t direction
: MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs
: Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow
: Desired PCS active high or low

lpspi_pin_config_t pinCfg
: Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig
: Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct __lpspi_transfer
: *#include <fsl_lpspi.h>* LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData
: Send buffer.

uint8_t *rxData
: Receive buffer.

volatile size_t dataSize
: Transfer bytes.

uint32_t configFlags
: Transfer transfer configuration flags. Set from _lpspi_transfer_config_flag_for_master if the transfer is used for master or _lpspi_transfer_config_flag_for_slave enumeration if the transfer is used for slave.

struct __lpspi_master_handle
#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous
: Is PCS continuous in transfer.

volatile bool writeTcrInIsr
: A flag that whether should write TCR in ISR.

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile bool isTxMask
: A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame
: Number of bytes in each frame

volatile uint16_t frameSize
: Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

uint32_t txBuffIfNull
: Used if the txData is NULL.

volatile uint8_t state
: LPSPI transfer state , _lpspi_transfer_state.

lpspi_master_transfer_callback_t callback
: Completion callback.

void *userData
: Callback user data.

struct __lpspi_slave_handle
: *#include <fsl_lpspi.h>* LPSPI slave transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

volatile uint8_t state
: LPSPI transfer state , _lpspi_transfer_state.

volatile uint32_t errorCount
: Error count for slave transfer.

lpspi_slave_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

2.41 LPSPI eDMA Driver

FSL_LPSPI_EDMA_DRIVER_VERSION
LPSPI EDMA driver version.

DMA_MAX_TRANSFER_COUNT
DMA max transfer size.

typedef struct *_lpspi_master_edma_handle* lpspi_master_edma_handle_t
Forward declaration of the _lpspi_master_edma_handle typedefs.

typedef struct *_lpspi_slave_edma_handle* lpspi_slave_edma_handle_t
Forward declaration of the _lpspi_slave_edma_handle typedefs.

typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *status_t* status, void *userData)
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI master.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *status_t* status, void *userData)
Completion callback function pointer type.

Param base
LPSPI peripheral base address.

Param handle
Pointer to the handle for the LPSPI slave.

Param status
Success or error code describing whether the transfer completed.

Param userData
Arbitrary pointer-dataSized value passed from the application.

void LPSPI_MasterTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_master_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)
Initializes the LPSPI master eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that the LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPI callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

status_t LPSPI_MasterTransferEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

status_t LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- configFlags – transfer configuration flags. _lpspi_transfer_config_flag_for_master.

Return values

- kStatus_Success – Execution successfully.
- kStatus_LPSPI_Busy – The LPSPI device is busy.

Returns
Indicates whether LPSPI master transfer was successful or not.

status_t LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure, config field is not uesed.

Return values

- kStatus_Success – Execution successfully.
- kStatus_LPSPI_Busy – The LPSPI device is busy.
- kStatus_InvalidArgument – The transfer structure is invalid.

Returns
Indicates whether LPSPI master transfer was successful or not.

void LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, size_t *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns
status of status_t.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for edmaRxRegToRxDataHandle .

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to lpspi_slave_edma_handle_t.
- callback – LPSPI callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.
- transfer – pointer to lpspi_transfer_t structure.

Returns

status of status_t.

void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle)

LPSPI slave aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.

- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.

status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, size_t *count)

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to lpspi_slave_edma_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of status_t.

struct __lpspi_master_edma_handle

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

volatile uint8_t bytesEachWrite

Bytes for each write TDR.

volatile uint8_t bytesEachRead

Bytes for each read RDR.

volatile uint8_t bytesLastRead

Bytes for last read RDR.

volatile bool isThereExtraRxBytes

Is there extra RX byte.

const uint8_t *volatile txData

Send buffer.

uint8_t *volatile rxData

Receive buffer.

volatile size_t txRemainingByteCount

Number of bytes remaining to send.

volatile size_t rxRemainingByteCount

Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

edma_tcd_t *lastTimeTCD
: Pointer to the lastTime TCD

bool isMultiDMATransmit
: Is there multi DMA transmit

volatile uint8_t dmaTransmitTime
: DMA Transfer times.

uint32_t lastTimeDataBytes
: DMA transmit last Time data Bytes

uint32_t dataBytesEveryTime
: Bytes in a time for DMA transfer, default is DMA_MAX_TRANSFER_COUNT

edma_transfer_config_t transferConfigRx
: Config of DMA rx channel.

edma_transfer_config_t transferConfigTx
: Config of DMA tx channel.

uint32_t txBuffIfNull
: Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull
: Used if there is not rxData for DMA purpose.

uint32_t transmitCommand
: Used to write TCR for DMA purpose.

volatile uint8_t state
: LPSPI transfer state , _lpspi_transfer_state.

uint8_t nbytes
: eDMA minor byte transfer count initially configured.

lpspi_master_edma_transfer_callback_t callback
: Completion callback.

void *userData
: Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
: edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
: edma_handle_t handle point used for TxData to TxReg buff

edma_tcd_t lpspiSoftwareTCD[3]
: SoftwareTCD, internal used

struct __lpspi_slave_edma_handle
: *#include <fsl_lpspi_edma.h>* LPSPI slave eDMA transfer handle structure used for transactional API.

Public Members

volatile bool isByteSwap
: A flag that whether should byte swap.

volatile uint8_t fifoSize
: FIFO dataSize.

volatile uint8_t rxWatermark
: Rx watermark.

volatile uint8_t bytesEachWrite
: Bytes for each write TDR.

volatile uint8_t bytesEachRead
: Bytes for each read RDR.

volatile uint8_t bytesLastRead
: Bytes for last read RDR.

volatile bool isThereExtraRxBytes
: Is there extra RX byte.

uint8_t nbytes
: eDMA minor byte transfer count initially configured.

const uint8_t *volatile txData
: Send buffer.

uint8_t *volatile rxData
: Receive buffer.

volatile size_t txRemainingByteCount
: Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
: Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
: Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
: Read RDR register remaining times.

uint32_t totalByteCount
: Number of transfer bytes

uint32_t txBuffIfNull
: Used if there is not txData for DMA purpose.

uint32_t rxBuffIfNull
: Used if there is not rxData for DMA purpose.

volatile uint8_t state
: LPSPI transfer state.

uint32_t errorCount
: Error count for slave transfer.

lpspi_slave_edma_transfer_callback_t callback
: Completion callback.

void *userData
Callback user data.

edma_handle_t *edmaRxRegToRxDataHandle
edma_handle_t handle point used for RxReg to RxData buff

edma_handle_t *edmaTxDataToTxRegHandle
edma_handle_t handle point used for TxData to TxReg

edma_tcd_t lpspiSoftwareTCD[2]
SoftwareTCD, internal used

2.42 LPTMR: Low-Power Timer

void LPTMR_Init(LPTMR_Type *base, const *lptmr_config_t* *config)
Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

void LPTMR_Deinit(LPTMR_Type *base)
Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

void LPTMR_GetDefaultConfig(*lptmr_config_t* *config)
Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)
Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration lptmr_interrupt_enable_t

static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration lptmr_interrupt_enable_t.

static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration lptmr_interrupt_enable_t

static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration lptmr_status_flags_t

static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration lptmr_status_flags_t.

static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

a. The TCF flag is set with the CNR equals the count provided here and then increments.

b. Call the utility macros provided in the fsl_common.h to convert to ticks.

Parameters

- base – LPTMR peripheral base address
- ticks – A timer period in units of ticks

static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – LPTMR peripheral base address

Returns
The current counter value in ticks

static inline void LPTMR_StartTimer(LPTMR_Type *base)

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- base – LPTMR peripheral base address

static inline void LPTMR_StopTimer(LPTMR_Type *base)

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- base – LPTMR peripheral base address

FSL_LPTMR_DRIVER_VERSION

Driver Version

enum _lptmr_pin_select

LPTMR pin selection used in pulse counter mode.

Values:

enumerator kLPTMR_PinSelectInput_0
Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1
Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2
Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3
Pulse counter input 3 is selected

enum _lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh
Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow
Pulse Counter input source is active-low

enum _lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter
Time Counter mode

enumerator kLPTMR_TimerModePulseCounter
Pulse Counter mode

enum _lptmr_prescaler_glitch_value
LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0
Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1
Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2
Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3
Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4
Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5
Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6
Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7
Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8
Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable

List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable

Timer interrupt enable

enum _lptmr_status_flags

List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag

Timer compare flag

typedef enum *_lptmr_pin_select* lptmr_pin_select_t

LPTMR pin selection used in pulse counter mode.

typedef enum *_lptmr_pin_polarity* lptmr_pin_polarity_t

LPTMR pin polarity used in pulse counter mode.

typedef enum *_lptmr_timer_mode* lptmr_timer_mode_t

LPTMR timer mode selection.

typedef enum *_lptmr_prescaler_glitch_value* lptmr_prescaler_glitch_value_t

LPTMR prescaler/glitch filter values.

typedef enum *_lptmr_prescaler_clock_select* lptmr_prescaler_clock_select_t

LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

---

typedef enum *_lptmr_interrupt_enable* lptmr_interrupt_enable_t

List of the LPTMR interrupts.

typedef enum *_lptmr_status_flags* lptmr_status_flags_t

List of the LPTMR status flags.

typedef struct *_lptmr_config* lptmr_config_t

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)

Enable or disable timer DMA request.

Parameters

- base – base LPTMR peripheral base address
- enable – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

struct _lptmr_config

#include <fsl_lptmr.h> LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the LPTMR_GetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

lptmr_timer_mode_t timerMode

Time counter mode or pulse counter mode

lptmr_pin_select_t pinSelect

LPTMR pulse input pin select; used only in pulse counter mode

lptmr_pin_polarity_t pinPolarity

LPTMR pulse input pin polarity; used only in pulse counter mode

bool enableFreeRunning

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

bool bypassPrescaler

True: bypass prescaler; false: use clock from prescaler

lptmr_prescaler_clock_select_t prescalerClockSource

LPTMR clock source

lptmr_prescaler_glitch_value_t value

Prescaler or glitch filter value

2.43 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.44 LPUART Driver

static inline void LPUART_SoftwareReset(LPUART_Type *base)

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- base – LPUART peripheral base address.

status_t LPUART_Init(LPUART_Type *base, const *lpuart_config_t* *config, uint32_t srcClock_Hz)

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the LPUART_GetDefaultConfig() function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
```

(continues on next page)

(continued from previous page)

```
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- config – Pointer to a user-defined configuration structure.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not support in current clock source.
- kStatus_Success – LPUART initialize succeed

status_t LPUART_Deinit(LPUART_Type *base)

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- base – LPUART peripheral base address.

Return values

- kStatus_Success – Deinit is success.
- kStatus_LPUART_Timeout – Timeout during deinit.

void LPUART_GetDefaultConfig(*lpuart_config_t* *config)

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: lpuartConfig->baudRate_Bps = 115200U; lpuartConfig->parityMode = kLPUART_ParityDisabled; lpuartConfig->dataBitsCount = kLPUART_EightDataBits; lpuartConfig->isMsb = false; lpuartConfig->stopBitCount = kLPUART_OneStopBit; lpuartConfig->txFifoWatermark = 0; lpuartConfig->rxFifoWatermark = 1; lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit; lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1; lpuartConfig->enableTx = false; lpuartConfig->enableRx = false;

Parameters

- config – Pointer to a configuration structure.

status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the LPUART_Init.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- base – LPUART peripheral base address.
- baudRate_Bps – LPUART baudrate to be set.
- srcClock_Hz – LPUART clock source frequency in HZ.

Return values

- kStatus_LPUART_BaudrateNotSupport – Baudrate is not supported in the current clock source.
- kStatus_Success – Set baudrate succeeded.

void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- base – LPUART peripheral base address.
- enable – true to enable, flase to disable.

static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receices with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer, otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

static inline void LPUART_TransferEnable16Bit(*lpuart_handle_t* *handle, bool enable)

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in lpuart_handle_t.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

uint32_t LPUART_GetStatusFlags(LPUART_Type *base)

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators _lpuart_flags. To check for a specific status, compare the return value with enumerators in the _lpuart_flags. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the _lpuart_flags.

status_t LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only cleared or set by hardware are: kLPUART_TxDataRegEmptyFlag, kLPUART_TransmissionCompleteFlag, kLPUART_RxDataRegFullFlag, kLPUART_RxActiveFlag, kLPUART_NoiseErrorFlag, kLPUART_ParityErrorFlag, kLPUART_TxFifoEmptyFlag,kLPUART_RxFifoEmptyFlag Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the _lpuart_status_flag_t to do the OR operation and get the mask.

Return values

- kStatus_LPUART_FlagCannotClearManually – The flag can't be cleared by this function but it is cleared automatically by hardware.
- kStatus_Success – Status in the mask are cleared.

Returns

0 succeed, others failed.

void LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the _lpuart_interrupt_enable. This examples shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1,kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↪RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of _lpuart_interrupt_enable.

void LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See _lpuart_interrupt_enable. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1,kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↪RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of _lpuart_interrupt_enable.

uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators _lpuart_interrupt_enable. To check a specific interrupt enable status, compare the return value with enumerators in _lpuart_interrupt_enable. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);

if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in _lpuart_interrupt_enable.

static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, STAT[TDRE], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, STAT[RDRF], to generate DMA requests.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

uint32_t LPUART_GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- base – LPUART peripheral base address.

Returns

LPUART instance.

static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

static inline uint8_t LPUART_ReadByte(LPUART_Type *base)

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

void LPUART_SendAddress(LPUART_Type *base, uint8_t address)

Transmit an address frame in 9-bit data mode.

Parameters

- base – LPUART peripheral base address.
- address – LPUART slave address.

status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the dat to be sent out to the bus.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the data to write.
- length – Size of the data to write.

Return values

- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the TX register.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.
- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- base – LPUART peripheral base address.
- data – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- length – Size of the buffer.

Return values

- kStatus_LPUART_RxHardwareOverrun – Receiver overrun happened while receiving data.
- kStatus_LPUART_NoiseError – Noise error happened while receiving data.
- kStatus_LPUART_FramingError – Framing error happened while receiving data.

- kStatus_LPUART_ParityError – Parity error happened while receiving data.
- kStatus_LPUART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

void LPUART_TransferCreateHandle(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_callback_t* callback, void *userData)

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the "background" receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn't call the LPUART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- callback – Callback function.
- userData – User data.

status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer)

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferStartRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle, uint8_t *ringBuffer, size_t ringBufferSize)

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

void LPUART_TransferStopRingBuffer(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, *lpuart_handle_t* *handle)

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

void LPUART_TransferAbortSend(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBtyes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetSendCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.

- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, *lpuart_handle_t* *handle, *lpuart_transfer_t* *xfer, size_t *receivedBytes)

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter receivedBytes shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter kStatus_UART_RxIdle. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to xfer->data, which returns with the parameter receivedBytes set to 5. For the remaining 5 bytes, the newly arrived data is saved from xfer->data[5]. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to xfer->data. When all data is received, the upper layer is notified.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see uart_transfer_t.
- receivedBytes – Bytes received from the ring buffer directly.

Return values

- kStatus_Success – Successfully queue the transfer into the transmit queue.
- kStatus_LPUART_RxBusy – Previous receive request is not finished.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortReceive(LPUART_Type *base, *lpuart_handle_t* *handle)

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the remainBytes to find out how many bytes not received yet.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, *lpuart_handle_t* *handle, uint32_t *count)

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- base – LPUART peripheral base address.

- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- base – LPUART peripheral base address.
- irqHandle – LPUART handle pointer.

void LPUART_DriverIRQHandler(uint32_t instance)

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- instance – LPUART instance.

FSL_LPUART_DRIVER_VERSION

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually
Some flag can't manually clear

enumerator kStatus_LPUART_Error
Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun
LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun
LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError
LPUART noise error.

enumerator kStatus_LPUART_FramingError
LPUART framing error.

enumerator kStatus_LPUART_ParityError
LPUART parity error.

enumerator kStatus_LPUART_BaudrateNotSupport
Baudrate is not support in current clock source

enumerator kStatus_LPUART_IdleLineDetected
IDLE flag.

enumerator kStatus_LPUART_Timeout
LPUART times out.

enum _lpuart_parity_mode
LPUART parity mode.

Values:

enumerator kLPUART_ParityDisabled
Parity disabled

enumerator kLPUART_ParityEven
Parity enabled, type even, bit setting: PE|PT = 10

enumerator kLPUART_ParityOdd
Parity enabled, type odd, bit setting: PE|PT = 11

enum _lpuart_data_bits
LPUART data bits count.

Values:

enumerator kLPUART_EightDataBits
Eight data bit

enumerator kLPUART_SevenDataBits
Seven data bit

enum _lpuart_stop_bit_count
LPUART stop bit count.

Values:

enumerator kLPUART_OneStopBit
One stop bit

enumerator kLPUART_TwoStopBit
Two stop bits

enum _lpuart_transmit_cts_source
LPUART transmit CTS source.

Values:

enumerator kLPUART_CtsSourcePin
CTS resource is the LPUART_CTS pin.

enumerator kLPUART_CtsSourceMatchResult
CTS resource is the match result.

enum _lpuart_transmit_cts_config
LPUART transmit CTS configure.

Values:

enumerator kLPUART_CtsSampleAtStart
CTS input is sampled at the start of each character.

enumerator kLPUART_CtsSampleAtIdle
CTS input is sampled when the transmitter is idle

enum _lpuart_transmit_rts_polarity
LPUART transmitter RTS polarity.

Values:

enumerator kLPUART_RtsPolarityLow
Transmitter RTS is active low.

enumerator kLPUART_RtsPolarityHigh
Transmitter RTS is active high.

enum _lpuart_idle_type_select
LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator kLPUART_IdleTypeStartBit
Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit
Start counting after a stop bit.

enum _lpuart_idle_config
LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1
the number of idle characters.

enumerator kLPUART_IdleCharacter2
the number of idle characters.

enumerator kLPUART_IdleCharacter4
the number of idle characters.

enumerator kLPUART_IdleCharacter8
the number of idle characters.

enumerator kLPUART_IdleCharacter16
the number of idle characters.

enumerator kLPUART_IdleCharacter32
the number of idle characters.

enumerator kLPUART_IdleCharacter64
the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable
LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable
Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable
Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable
Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable
Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable
Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable
Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1. bit 15

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2. bit 14

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator kLPUART_AllClearFlags

enumerator kLPUART_AllFlags

typedef enum *_lpuart_parity_mode* lpuart_parity_mode_t
LPUART parity mode.

typedef enum *_lpuart_data_bits* lpuart_data_bits_t
LPUART data bits count.

typedef enum *_lpuart_stop_bit_count* lpuart_stop_bit_count_t
LPUART stop bit count.

typedef enum *_lpuart_transmit_cts_source* lpuart_transmit_cts_source_t
LPUART transmit CTS source.

typedef enum *_lpuart_transmit_cts_config* lpuart_transmit_cts_config_t
LPUART transmit CTS configure.

typedef enum *_lpuart_transmit_rts_polarity* lpuart_transmit_rts_polarity_t
LPUART transmitter RTS polarity.

typedef enum *_lpuart_idle_type_select* lpuart_idle_type_select_t
LPUART idle flag type defines when the receiver starts counting.

typedef enum *_lpuart_idle_config* lpuart_idle_config_t
LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct *_lpuart_config* lpuart_config_t
LPUART configuration structure.

typedef struct *_lpuart_transfer* lpuart_transfer_t
LPUART transfer structure.

typedef struct *_lpuart_handle* lpuart_handle_t

typedef void (*lpuart_transfer_callback_t)(LPUART_Type *base, *lpuart_handle_t* *handle, *status_t* status, void *userData)
LPUART transfer callback function.

typedef void (*lpuart_isr_t)(LPUART_Type *base, void *handle)

void *s_lpuartHandle[]

const IRQn_Type s_lpuartTxIRQ[]

lpuart_isr_t s_lpuartIsr[]

UART_RETRY_TIMES
Retry times for waiting flag.

struct _lpuart_config
#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps
LPUART baud rate

lpuart_parity_mode_t parityMode
Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount
: Data bits count, eight (default), seven

bool isMsb
: Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount
: Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark
: TX FIFO watermark

uint8_t rxFifoWatermark
: RX FIFO watermark

bool enableRxRTS
: RX RTS enable

bool enableTxRTS
: TX RTS enable

bool enableTxCTS
: TX CTS enable

lpuart_transmit_cts_source_t txCtsSource
: TX CTS source

lpuart_transmit_cts_config_t txCtsConfig
: TX CTS configure

lpuart_transmit_rts_polarity_t txRtsPolarity
: TX RTS polarity

uint8_t rtsWatermark
: RTS watermark

lpuart_idle_type_select_t rxIdleType
: RX IDLE type.

lpuart_idle_config_t rxIdleConfig
: RX IDLE configuration.

bool enableTx
: Enable TX

bool enableRx
: Enable RX

bool swapTxdRxd
: Swap TXD and RXD pins

bool inverseTxd
: Transmit Data Inversion - Setting true reverses the polarity of the transmitted data output

struct __lpuart__transfer
: *#include <fsl_lpuart.h>* LPUART transfer structure.

Public Members

size_t dataSize
The byte count to be transfer.

struct _lpuart_handle
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile size_t txDataSize
Size of the remaining data to send.

size_t txDataSizeAll
Size of the data to send out.

volatile size_t rxDataSize
Size of the remaining data to receive.

size_t rxDataSizeAll
Size of the data to receive.

size_t rxRingBufferSize
Size of the ring buffer.

volatile uint16_t rxRingBufferHead
Index for the driver to store received data into ring buffer.

volatile uint16_t rxRingBufferTail
Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t callback
Callback function.

void *userData
LPUART callback function parameter.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state.

bool isSevenDataBits
Seven data bits flag.

bool is16bitData
16bit data bits flag, only used for 9bit or 10bit data

union ___unnamed112___

Public Members

uint8_t *data
The buffer of data to be transfer.

uint8_t *rxData
The buffer to receive data.

uint16_t *rxData16
The buffer to receive data.

const uint8_t *txData
The buffer of data to be sent.

const uint16_t *txData16
The buffer of data to be sent.

union ___unnamed114___

Public Members

const uint8_t *volatile txData
Address of remaining data to send.

const uint16_t *volatile txData16
Address of remaining data to send.

union ___unnamed116___

Public Members

uint8_t *volatile rxData
Address of remaining data to receive.

uint16_t *volatile rxData16
Address of remaining data to receive.

union ___unnamed118___

Public Members

uint8_t *rxRingBuffer
Start address of the receiver ring buffer.

uint16_t *rxRingBuffer16
Start address of the receiver ring buffer.

2.45 LPUART eDMA Driver

void LPUART_TransferCreateHandleEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *txEdmaHandle, *edma_handle_t* *rxEdmaHandle)

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- callback – Callback function.
- userData – User data.

- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

status_t LPUART_SendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_LPUART_TxBusy – Previous transfer on going.
- kStatus_InvalidArgument – Invalid argument.

status_t LPUART_ReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.
- xfer – LPUART eDMA transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – if succeed, others fail.
- kStatus_LPUART_RxBusy – Previous transfer ongoing.
- kStatus_InvalidArgument – Invalid argument.

void LPUART_TransferAbortSendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.

void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)

Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to lpuart_edma_handle_t structure.

status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, uint32_t *count)

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

FSL_LPUART_EDMA_DRIVER_VERSION

LPUART EDMA driver version.

typedef struct *_lpuart_edma_handle* lpuart_edma_handle_t

typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *status_t* status, void *userData)

LPUART transfer callback function.

struct _lpuart_edma_handle

#include <fsl_lpuart_edma.h> LPUART eDMA handle.

Public Members

lpuart_edma_transfer_callback_t callback
Callback function.

void *userData
LPUART callback function parameter.

size_t rxDataSizeAll
Size of the data to receive.

size_t txDataSizeAll
Size of the data to send out.

edma_handle_t *txEdmaHandle
The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
The eDMA RX channel used.

uint8_t nbytes
eDMA minor byte transfer count initially configured.

volatile uint8_t txState
TX transfer state.

volatile uint8_t rxState
RX transfer state

2.46 MCM: Miscellaneous Control Module

FSL_MCM_DRIVER_VERSION
MCM driver version.

Enum _mcm_interrupt_flag. Interrupt status flag mask. .

Values:

enumerator kMCM_CacheWriteBuffer
Cache Write Buffer Error Enable.

enumerator kMCM_ParityError
Cache Parity Error Enable.

enumerator kMCM_FPUInvalidOperation
FPU Invalid Operation Interrupt Enable.

enumerator kMCM_FPUDivideByZero
FPU Divide-by-zero Interrupt Enable.

enumerator kMCM_FPUOverflow
FPU Overflow Interrupt Enable.

enumerator kMCM_FPUUnderflow
FPU Underflow Interrupt Enable.

enumerator kMCM_FPUInexact
FPU Inexact Interrupt Enable.

enumerator kMCM_FPUInputDenormalInterrupt
FPU Input Denormal Interrupt Enable.

typedef union *_mcm_buffer_fault_attribute* mcm_buffer_fault_attribute_t
The union of buffer fault attribute.

typedef union *_mcm_lmem_fault_attribute* mcm_lmem_fault_attribute_t
The union of LMEM fault attribute.

static inline void MCM_EnableCrossbarRoundRobin(MCM_Type *base, bool enable)
Enables/Disables crossbar round robin.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable crossbar round robin.
  - **true** Enable crossbar round robin.
  - **false** disable crossbar round robin.

static inline void MCM_EnableInterruptStatus(MCM_Type *base, uint32_t mask)
Enables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline void MCM_DisableInterruptStatus(MCM_Type *base, uint32_t mask)
Disables the interrupt.

Parameters

- base – MCM peripheral base address.
- mask – Interrupt status flags mask(_mcm_interrupt_flag).

static inline uint16_t MCM_GetInterruptStatus(MCM_Type *base)
Gets the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline void MCM_ClearCacheWriteBufferErroStatus(MCM_Type *base)
Clears the Interrupt status .

Parameters

- base – MCM peripheral base address.

static inline uint32_t MCM_GetBufferFaultAddress(MCM_Type *base)
Gets buffer fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetBufferFaultAttribute(MCM_Type *base, *mcm_buffer_fault_attribute_t* *bufferfault)
Gets buffer fault attributes.

Parameters

- base – MCM peripheral base address.
- bufferfault – Structure to store the result.

static inline uint32_t MCM_GetBufferFaultData(MCM_Type *base)

Gets buffer fault data.

Parameters

- base – MCM peripheral base address.

static inline void MCM_LimitCodeCachePeripheralWriteBuffering(MCM_Type *base, bool enable)

Limit code cache peripheral write buffering.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable limit code cache peripheral write buffering.
  - **true** Enable limit code cache peripheral write buffering.
  - **false** disable limit code cache peripheral write buffering.

static inline void MCM_BypassFixedCodeCacheMap(MCM_Type *base, bool enable)

Bypass fixed code cache map.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable bypass fixed code cache map.
  - **true** Enable bypass fixed code cache map.
  - **false** disable bypass fixed code cache map.

static inline void MCM_EnableCodeBusCache(MCM_Type *base, bool enable)

Enables/Disables code bus cache.

Parameters

- base – MCM peripheral base address.
- enable – Used to disable/enable code bus cache.
  - **true** Enable code bus cache.
  - **false** disable code bus cache.

static inline void MCM_ForceCodeCacheToNoAllocation(MCM_Type *base, bool enable)

Force code cache to no allocation.

Parameters

- base – MCM peripheral base address.
- enable – Used to force code cache to allocation or no allocation.
  - **true** Force code cache to no allocation.
  - **false** Force code cache to allocation.

static inline void MCM_EnableCodeCacheWriteBuffer(MCM_Type *base, bool enable)

Enables/Disables code cache write buffer.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable code cache write buffer.
  - **true** Enable code cache write buffer.

- **false** Disable code cache write buffer.

static inline void MCM_ClearCodeBusCache(MCM_Type *base)

Clear code bus cache.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnablePcParityFaultReport(MCM_Type *base, bool enable)

Enables/Disables PC Parity Fault Report.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity Fault Report.
  - **true** Enable PC Parity Fault Report.
  - **false** disable PC Parity Fault Report.

static inline void MCM_EnablePcParity(MCM_Type *base, bool enable)

Enables/Disables PC Parity.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable PC Parity.
  - **true** Enable PC Parity.
  - **false** disable PC Parity.

static inline void MCM_LockConfigState(MCM_Type *base)

Lock the configuration state.

Parameters

- base – MCM peripheral base address.

static inline void MCM_EnableCacheParityReporting(MCM_Type *base, bool enable)

Enables/Disables cache parity reporting.

Parameters

- base – MCM peripheral base address.
- enable – Used to enable/disable cache parity reporting.
  - **true** Enable cache parity reporting.
  - **false** disable cache parity reporting.

static inline uint32_t MCM_GetLmemFaultAddress(MCM_Type *base)

Gets LMEM fault address.

Parameters

- base – MCM peripheral base address.

static inline void MCM_GetLmemFaultAttribute(MCM_Type *base, *mcm_lmem_fault_attribute_t* *lmemFault)

Get LMEM fault attributes.

Parameters

- base – MCM peripheral base address.
- lmemFault – Structure to store the result.

static inline uint64_t MCM_GetLmemFaultData(MCM_Type *base)

Gets LMEM fault data.

Parameters

- base – MCM peripheral base address.

MCM_LMFATR_TYPE_MASK

MCM_LMFATR_MODE_MASK

MCM_LMFATR_BUFF_MASK

MCM_LMFATR_CACH_MASK

MCM_ISCR_STAT_MASK

FSL_COMPONENT_ID

union __mcm_buffer_fault_attribute

#include <fsl_mcm.h> The union of buffer fault attribute.

Public Members

uint32_t attribute

Indicates the faulting attributes, when a properly-enabled cache write buffer error interrupt event is detected.

struct *_mcm_buffer_fault_attribute._mcm_buffer_fault_attribut* attribute_memory

struct __mcm_buffer_fault_attribut

#include <fsl_mcm.h>

Public Members

uint32_t busErrorDataAccessType

Indicates the type of cache write buffer access.

uint32_t busErrorPrivilegeLevel

Indicates the privilege level of the cache write buffer access.

uint32_t busErrorSize

Indicates the size of the cache write buffer access.

uint32_t busErrorAccess

Indicates the type of system bus access.

uint32_t busErrorMasterID

Indicates the crossbar switch bus master number of the captured cache write buffer bus error.

uint32_t busErrorOverrun

Indicates if another cache write buffer bus error is detected.

union __mcm_lmem_fault_attribute

#include <fsl_mcm.h> The union of LMEM fault attribute.

Public Members

uint32_t attribute
Indicates the attributes of the LMEM fault detected.

struct *_mcm_lmem_fault_attribute._mcm_lmem_fault_attribut* attribute_memory

struct __mcm_lmem_fault_attribut
#include <fsl_mcm.h>

Public Members

uint32_t parityFaultProtectionSignal
Indicates the features of parity fault protection signal.

uint32_t parityFaultMasterSize
Indicates the parity fault master size.

uint32_t parityFaultWrite
Indicates the parity fault is caused by read or write.

uint32_t backdoorAccess
Indicates the LMEM access fault is initiated by core access or backdoor access.

uint32_t parityFaultSyndrome
Indicates the parity fault syndrome.

uint32_t overrun
Indicates the number of faultss.

2.47 MIPI DSI Driver

void DSI_Init(MIPI_DSI_HOST_Type *base, const *dsi_config_t* *config)
Initializes an MIPI DSI host with the user configuration.

This function initializes the MIPI DSI host with the configuration, it should be called first before other MIPI DSI driver functions.

Parameters

- base – MIPI DSI host peripheral base address.
- config – Pointer to a user-defined configuration structure.

void DSI_Deinit(MIPI_DSI_HOST_Type *base)
Deinitializes an MIPI DSI host.

This function should be called after all bother MIPI DSI driver functions.

Parameters

- base – MIPI DSI host peripheral base address.

void DSI_GetDefaultConfig(*dsi_config_t* *config)
Get the default configuration to initialize the MIPI DSI host.

The default value is:

```
config->numLanes = 4;
config->enableNonContinuousHsClk = false;
config->enableTxUlps = false;
config->autoInsertEoTp = true;
config->numExtraEoTp = 0;
config->htxTo_ByteClk = 0;
config->lrxHostTo_ByteClk = 0;
config->btaTo_ByteClk = 0;
```

Parameters

- config – Pointer to a user-defined configuration structure.

void DSI_SetDpiConfig(MIPI_DSI_HOST_Type *base, const *dsi_dpi_config_t* *config, uint8_t numLanes, uint32_t dpiPixelClkFreq_Hz, uint32_t dsiHsBitClkFreq_Hz)

Configure the DPI interface core.

This function sets the DPI interface configuration, it should be used in video mode.

Parameters

- base – MIPI DSI host peripheral base address.
- config – Pointer to the DPI interface configuration.
- numLanes – Lane number, should be same with the setting in dsi_dpi_config_t.
- dpiPixelClkFreq_Hz – The DPI pixel clock frequency in Hz.
- dsiHsBitClkFreq_Hz – The DSI high speed bit clock frequency in Hz. It is the same with DPHY PLL output.

uint32_t DSI_InitDphy(MIPI_DSI_HOST_Type *base, const *dsi_dphy_config_t* *config, uint32_t refClkFreq_Hz)

Initializes the D-PHY.

This function configures the D-PHY timing and setups the D-PHY PLL based on user configuration. The configuration structure could be got by the function DSI_GetDphyDefaultConfig.

For some platforms there is not dedicated D-PHY PLL, indicated by the macro FSL_FEATURE_MIPI_DSI_NO_DPHY_PLL. For these platforms, the refClkFreq_Hz is useless.

Parameters

- base – MIPI DSI host peripheral base address.
- config – Pointer to the D-PHY configuration.
- refClkFreq_Hz – The REFCLK frequency in Hz.

Returns

The actual D-PHY PLL output frequency. If could not configure the PLL to the target frequency, the return value is 0.

void DSI_DeinitDphy(MIPI_DSI_HOST_Type *base)

Deinitializes the D-PHY.

Power down the D-PHY PLL and shut down D-PHY.

Parameters

- base – MIPI DSI host peripheral base address.

void DSI_GetDphyDefaultConfig(*dsi_dphy_config_t* *config, uint32_t txHsBitClk_Hz, uint32_t txEscClk_Hz)

Get the default D-PHY configuration.

Gets the default D-PHY configuration, the timing parameters are set according to D-PHY specification. User could use the configuration directly, or change some parameters according to the special device.

Parameters

- config – Pointer to the D-PHY configuration.
- txHsBitClk_Hz – High speed bit clock in Hz.
- txEscClk_Hz – Esc clock in Hz.

static inline void DSI_EnableInterrupts(MIPI_DSI_HOST_Type *base, uint32_t intGroup1, uint32_t intGroup2)

Enable the interrupts.

The interrupts to enable are passed in as OR'ed mask value of _dsi_interrupt.

Parameters

- base – MIPI DSI host peripheral base address.
- intGroup1 – Interrupts to enable in group 1.
- intGroup2 – Interrupts to enable in group 2.

static inline void DSI_DisableInterrupts(MIPI_DSI_HOST_Type *base, uint32_t intGroup1, uint32_t intGroup2)

Disable the interrupts.

The interrupts to disable are passed in as OR'ed mask value of _dsi_interrupt.

Parameters

- base – MIPI DSI host peripheral base address.
- intGroup1 – Interrupts to disable in group 1.
- intGroup2 – Interrupts to disable in group 2.

static inline void DSI_GetAndClearInterruptStatus(MIPI_DSI_HOST_Type *base, uint32_t *intGroup1, uint32_t *intGroup2)

Get and clear the interrupt status.

Parameters

- base – MIPI DSI host peripheral base address.
- intGroup1 – Group 1 interrupt status.
- intGroup2 – Group 2 interrupt status.

static inline void DSI_SetDbiPixelFifoSendLevel(MIPI_DSI_HOST_Type *base, uint16_t sendLevel)

Configure the DBI pixel FIFO send level.

This controls the level at which the DBI Host bridge begins sending pixels

Parameters

- base – MIPI DSI host peripheral base address.
- sendLevel – Send level value set to register.

static inline void DSI_SetDbiPixelPayloadSize(MIPI_DSI_HOST_Type *base, uint16_t payloadSize)

Configure the DBI pixel payload size.

Configures maximum number of pixels that should be sent as one DSI packet. Recommended to be evenly divisible by the line size (in pixels).

Parameters

- base – MIPI DSI host peripheral base address.
- payloadSize – Payload size value set to register.

void DSI_SetApbPacketControl(MIPI_DSI_HOST_Type *base, uint16_t wordCount, uint8_t virtualChannel, *dsi_tx_data_type_t* dataType, uint8_t flags)

Configure the APB packet to send.

This function configures the next APB packet transfer. After configuration, the packet transfer could be started with function DSI_SendApbPacket. If the packet is long packet, Use DSI_WriteApbTxPayload to fill the payload before start transfer.

Parameters

- base – MIPI DSI host peripheral base address.
- wordCount – For long packet, this is the byte count of the payload. For short packet, this is (data1 « 8) | data0.
- virtualChannel – Virtual channel.
- dataType – The packet data type, (DI).
- flags – The transfer control flags, see _dsi_transfer_flags.

void DSI_WriteApbTxPayload(MIPI_DSI_HOST_Type *base, const uint8_t *payload, uint16_t payloadSize)

Fill the long APB packet payload.

Write the long packet payload to TX FIFO.

Parameters

- base – MIPI DSI host peripheral base address.
- payload – Pointer to the payload.
- payloadSize – Payload size in byte.

void DSI_WriteApbTxPayloadExt(MIPI_DSI_HOST_Type *base, const uint8_t *payload, uint16_t payloadSize, bool sendDcsCmd, uint8_t dcsCmd)

Extended function to fill the payload to TX FIFO.

Write the long packet payload to TX FIFO. This function could be used in two ways

a. Include the DCS command in parameter payload. In this case, the DCS command is the first byte of payload. The parameter sendDcsCmd is set to false, the dcsCmd is not used. This function is the same as DSI_WriteApbTxPayload when used in this way.
b. The DCS command in not in parameter payload, but specified by parameter dcsCmd. In this case, the parameter sendDcsCmd is set to true, the dcsCmd is the DCS command to send. The payload is sent after dcsCmd.

Parameters

- base – MIPI DSI host peripheral base address.
- payload – Pointer to the payload.
- payloadSize – Payload size in byte.

- sendDcsCmd – If set to true, the DCS command is specified by dcsCmd, otherwise the DCS command is included in the payload.
- dcsCmd – The DCS command to send, only used when sendDCSCmd is true.

void DSI_ReadApbRxPayload(MIPI_DSI_HOST_Type *base, uint8_t *payload, uint16_t payloadSize)

Read the long APB packet payload.

Read the long packet payload from RX FIFO. This function reads directly but does not check the RX FIFO status. Upper layer should make sure there are available data.

Parameters

- base – MIPI DSI host peripheral base address.
- payload – Pointer to the payload.
- payloadSize – Payload size in byte.

static inline void DSI_SendApbPacket(MIPI_DSI_HOST_Type *base)

Trigger the controller to send out APB packet.

Send the packet set by DSI_SetApbPacketControl.

Parameters

- base – MIPI DSI host peripheral base address.

static inline uint32_t DSI_GetApbStatus(MIPI_DSI_HOST_Type *base)

Get the APB status.

The return value is OR'ed value of _dsi_apb_status.

Parameters

- base – MIPI DSI host peripheral base address.

Returns

The APB status.

static inline uint32_t DSI_GetRxErrorStatus(MIPI_DSI_HOST_Type *base)

Get the error status during data transfer.

The return value is OR'ed value of _dsi_rx_error_status.

Parameters

- base – MIPI DSI host peripheral base address.

Returns

The error status.

static inline uint8_t DSI_GetEccRxErrorPosition(uint32_t rxErrorStatus)

Get the one-bit RX ECC error position.

When one-bit ECC RX error detected using DSI_GetRxErrorStatus, this function could be used to get the error bit position.

```
uint8_t eccErrorPos;
uint32_t rxErrorStatus = DSI_GetRxErrorStatus(MIPI_DSI);
if (kDSI_RxErrorEccOneBit & rxErrorStatus)
{
    eccErrorPos = DSI_GetEccRxErrorPosition(rxErrorStatus);
}
```

Parameters

- rxErrorStatus – The error status returned by DSI_GetRxErrorStatus.

Returns
The 1-bit ECC error position.

static inline uint32_t DSI_GetAndClearHostStatus(MIPI_DSI_HOST_Type *base)

Get and clear the DSI host status.

The host status are returned as mask value of _dsi_host_status.

Parameters

- base – MIPI DSI host peripheral base address.

Returns
The DSI host status.

static inline uint32_t DSI_GetRxPacketHeader(MIPI_DSI_HOST_Type *base)

Get the RX packet header.

Parameters

- base – MIPI DSI host peripheral base address.

Returns
The RX packet header.

static inline *dsi_rx_data_type_t* DSI_GetRxPacketType(uint32_t rxPktHeader)

Extract the RX packet type from the packet header.

Extract the RX packet type from the packet header get by DSI_GetRxPacketHeader.

Parameters

- rxPktHeader – The RX packet header get by DSI_GetRxPacketHeader.

Returns
The RX packet type.

static inline uint16_t DSI_GetRxPacketWordCount(uint32_t rxPktHeader)

Extract the RX packet word count from the packet header.

Extract the RX packet word count from the packet header get by DSI_GetRxPacketHeader.

Parameters

- rxPktHeader – The RX packet header get by DSI_GetRxPacketHeader.

Returns
For long packet, return the payload word count (byte). For short packet, return the (data0 « 8) | data1.

static inline uint8_t DSI_GetRxPacketVirtualChannel(uint32_t rxPktHeader)

Extract the RX packet virtual channel from the packet header.

Extract the RX packet virtual channel from the packet header get by DSI_GetRxPacketHeader.

Parameters

- rxPktHeader – The RX packet header get by DSI_GetRxPacketHeader.

Returns
The virtual channel.

status_t DSI_TransferBlocking(MIPI_DSI_HOST_Type *base, *dsi_transfer_t* *xfer)

APB data transfer using blocking method.

Perform APB data transfer using blocking method. This function waits until all data send or received, or timeout happens.

When using this API to read data, the actually read data count could be got from xfer->rxDataSize.

Parameters

- base – MIPI DSI host peripheral base address.
- xfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data transfer finished with no error.
- kStatus_Timeout – Transfer failed because of timeout.
- kStatus_DSI_RxDataError – RX data error, user could use DSI_GetRxErrorStatus to check the error details.
- kStatus_DSI_ErrorReportReceived – Error Report packet received, user could use DSI_GetAndClearHostStatus to check the error report status.
- kStatus_DSI_NotSupported – Transfer format not supported.
- kStatus_DSI_Fail – Transfer failed for other reasons.

status_t DSI_TransferCreateHandle(MIPI_DSI_HOST_Type *base, *dsi_handle_t* *handle, *dsi_callback_t* callback, void *userData)

Create the MIPI DSI handle.

This function initializes the MIPI DSI handle which can be used for other transactional APIs.

Parameters

- base – MIPI DSI host peripheral base address.
- handle – Handle pointer.
- callback – Callback function.
- userData – User data.

status_t DSI_TransferNonBlocking(MIPI_DSI_HOST_Type *base, *dsi_handle_t* *handle, *dsi_transfer_t* *xfer)

APB data transfer using interrupt method.

Perform APB data transfer using interrupt method, when transfer finished, upper layer could be informed through callback function.

When using this API to read data, the actually read data count could be got from handle->xfer->rxDataSize after read finished.

Parameters

- base – MIPI DSI host peripheral base address.
- handle – pointer to dsi_handle_t structure which stores the transfer state.
- xfer – Pointer to the transfer structure.

Return values

- kStatus_Success – Data transfer started successfully.
- kStatus_DSI_Busy – Failed to start transfer because DSI is busy with pervious transfer.
- kStatus_DSI_NotSupported – Transfer format not supported.

void DSI_TransferAbort(MIPI_DSI_HOST_Type *base, *dsi_handle_t* *handle)

Abort current APB data transfer.

Parameters

- base – MIPI DSI host peripheral base address.
- handle – pointer to dsi_handle_t structure which stores the transfer state.

void DSI_TransferHandleIRQ(MIPI_DSI_HOST_Type *base, *dsi_handle_t* *handle)

Interrupt handler for the DSI.

Parameters

- base – MIPI DSI host peripheral base address.
- handle – pointer to dsi_handle_t structure which stores the transfer state.

FSL_MIPI_DSI_DRIVER_VERSION

Error codes for the MIPI DSI driver.

Values:

enumerator kStatus_DSI_Busy

DSI is busy.

enumerator kStatus_DSI_RxDataError

Read data error.

enumerator kStatus_DSI_ErrorReportReceived

Error report package received.

enumerator kStatus_DSI_NotSupported

The transfer type not supported.

enum _dsi_dpi_color_coding

MIPI DPI interface color coding.

Values:

enumerator kDSI_Dpi16BitConfig1

16-bit configuration 1. RGB565: XXXXXXXX_RRRRRGGG_GGGBBBBB.

enumerator kDSI_Dpi16BitConfig2

16-bit configuration 2. RGB565: XXXRRRRR_XXGGGGGG_XXXBBBBB.

enumerator kDSI_Dpi16BitConfig3

16-bit configuration 3. RGB565: XXRRRRRX_XXGGGGGG_XXBBBBBX.

enumerator kDSI_Dpi18BitConfig1

18-bit configuration 1. RGB666: XXXXXXRR_RRRRGGGG_GGBBBBBB.

enumerator kDSI_Dpi18BitConfig2

18-bit configuration 2. RGB666: XXRRRRRR_XXGGGGGG_XXBBBBBB.

enumerator kDSI_Dpi24Bit

24-bit.

enum _dsi_dpi_pixel_packet

MIPI DSI pixel packet type send through DPI interface.

Values:

enumerator kDSI_PixelPacket16Bit

16 bit RGB565.

enumerator kDSI_PixelPacket18Bit

18 bit RGB666 packed.

enumerator kDSI_PixelPacket18BitLoosely
18 bit RGB666 loosely packed into three bytes.

enumerator kDSI_PixelPacket24Bit
24 bit RGB888, each pixel uses three bytes.

_dsi_dpi_polarity_flag DPI signal polarity.

Values:

enumerator kDSI_DpiVsyncActiveLow
VSYNC active low.

enumerator kDSI_DpiHsyncActiveLow
HSYNC active low.

enumerator kDSI_DpiVsyncActiveHigh
VSYNC active high.

enumerator kDSI_DpiHsyncActiveHigh
HSYNC active high.

enum _dsi_dpi_video_mode
DPI video mode.

Values:

enumerator kDSI_DpiNonBurstWithSyncPulse
Non-Burst mode with Sync Pulses.

enumerator kDSI_DpiNonBurstWithSyncEvent
Non-Burst mode with Sync Events.

enumerator kDSI_DpiBurst
Burst mode.

enum _dsi_dpi_bllp_mode
Behavior in BLLP (Blanking or Low-Power Interval).

Values:

enumerator kDSI_DpiBllpLowPower
LP mode used in BLLP periods.

enumerator kDSI_DpiBllpBlanking
Blanking packets used in BLLP periods.

enumerator kDSI_DpiBllpNull
Null packets used in BLLP periods.

_dsi_apb_status Status of APB to packet interface.

Values:

enumerator kDSI_ApbNotIdle
State machine not idle

enumerator kDSI_ApbTxDone
Tx packet done

enumerator kDSI_ApbRxControl
DPHY direction 0 - tx had control, 1 - rx has control

enumerator kDSI_ApbTxOverflow
TX fifo overflow

enumerator kDSI_ApbTxUnderflow
TX fifo underflow

enumerator kDSI_ApbRxOverflow
RX fifo overflow

enumerator kDSI_ApbRxUnderflow
RX fifo underflow

enumerator kDSI_ApbRxHeaderReceived
RX packet header has been received

enumerator kDSI_ApbRxPacketReceived
All RX packet payload data has been received

_dsi_rx_error_status Host receive error status.

Values:

enumerator kDSI_RxErrorEccOneBit
ECC single bit error detected.

enumerator kDSI_RxErrorEccMultiBit
ECC multi bit error detected.

enumerator kDSI_RxErrorCrc
CRC error detected.

enumerator kDSI_RxErrorHtxTo
High Speed forward TX timeout detected.

enumerator kDSI_RxErrorLrxTo
Reverse Low power data receive timeout detected.

enumerator kDSI_RxErrorBtaTo
BTA timeout detected.

enum __dsi_host_status
DSI host controller status (status_out)

Values:

enumerator kDSI_HostSoTError
SoT error from peripheral error report.

enumerator kDSI_HostSoTSyncError
SoT Sync error from peripheral error report.

enumerator kDSI_HostEoTSyncError
EoT Sync error from peripheral error report.

enumerator kDSI_HostEscEntryCmdError
Escape Mode Entry Command Error from peripheral error report.

enumerator kDSI_HostLpTxSyncError
Low-power transmit Sync Error from peripheral error report.

enumerator kDSI_HostPeriphToError
Peripheral timeout error from peripheral error report.

enumerator kDSI_HostFalseControlError
False control error from peripheral error report.

enumerator kDSI_HostContentionDetected
Contention detected from peripheral error report.

enumerator kDSI_HostEccErrorOneBit
Single bit ECC error (corrected) from peripheral error report.

enumerator kDSI_HostEccErrorMultiBit
Multi bit ECC error (not corrected) from peripheral error report.

enumerator kDSI_HostChecksumError
Checksum error from peripheral error report.

enumerator kDSI_HostInvalidDataType
DSI data type not recognized.

enumerator kDSI_HostInvalidVcId
DSI VC ID invalid.

enumerator kDSI_HostInvalidTxLength
Invalid transmission length.

enumerator kDSI_HostProtocalViolation
DSI protocal violation.

enumerator kDSI_HostResetTriggerReceived
Reset trigger received.

enumerator kDSI_HostTearTriggerReceived
Tear effect trigger receive.

enumerator kDSI_HostAckTriggerReceived
Acknowledge trigger message received.

_dsi_interrupt DSI interrupt.

Values:

enumerator kDSI_InterruptGroup1ApbNotIdle
State machine not idle

enumerator kDSI_InterruptGroup1ApbTxDone
Tx packet done

enumerator kDSI_InterruptGroup1ApbRxControl
DPHY direction 0 - tx control, 1 - rx control

enumerator kDSI_InterruptGroup1ApbTxOverflow
TX fifo overflow

enumerator kDSI_InterruptGroup1ApbTxUnderflow
TX fifo underflow

enumerator kDSI_InterruptGroup1ApbRxOverflow
RX fifo overflow

enumerator kDSI_InterruptGroup1ApbRxUnderflow
RX fifo underflow

enumerator kDSI_InterruptGroup1ApbRxHeaderReceived
RX packet header has been received

enumerator kDSI_InterruptGroup1ApbRxPacketReceived
All RX packet payload data has been received

enumerator kDSI_InterruptGroup1SoTError
SoT error from peripheral error report.

enumerator kDSI_InterruptGroup1SoTSyncError
SoT Sync error from peripheral error report.

enumerator kDSI_InterruptGroup1EoTSyncError
EoT Sync error from peripheral error report.

enumerator kDSI_InterruptGroup1EscEntryCmdError
Escape Mode Entry Command Error from peripheral error report.

enumerator kDSI_InterruptGroup1LpTxSyncError
Low-power transmit Sync Error from peripheral error report.

enumerator kDSI_InterruptGroup1PeriphToError
Peripheral timeout error from peripheral error report.

enumerator kDSI_InterruptGroup1FalseControlError
False control error from peripheral error report.

enumerator kDSI_InterruptGroup1ContentionDetected
Contention detected from peripheral error report.

enumerator kDSI_InterruptGroup1EccErrorOneBit
Single bit ECC error (corrected) from peripheral error report.

enumerator kDSI_InterruptGroup1EccErrorMultiBit
Multi bit ECC error (not corrected) from peripheral error report.

enumerator kDSI_InterruptGroup1ChecksumError
Checksum error from peripheral error report.

enumerator kDSI_InterruptGroup1InvalidDataType
DSI data type not recognized.

enumerator kDSI_InterruptGroup1InvalidVcId
DSI VC ID invalid.

enumerator kDSI_InterruptGroup1InvalidTxLength
Invalid transmission length.

enumerator kDSI_InterruptGroup1ProtocalViolation
DSI protocal violation.

enumerator kDSI_InterruptGroup1ResetTriggerReceived
Reset trigger received.

enumerator kDSI_InterruptGroup1TearTriggerReceived
Tear effect trigger receive.

enumerator kDSI_InterruptGroup1AckTriggerReceived
Acknowledge trigger message received.

enumerator kDSI_InterruptGroup1HtxTo
High speed TX timeout.

enumerator kDSI_InterruptGroup1LrxTo
Low power RX timeout.

enumerator kDSI_InterruptGroup1BtaTo
Host BTA timeout.

enumerator kDSI_InterruptGroup2EccOneBit
Sinle bit ECC error.

enumerator kDSI_InterruptGroup2EccMultiBit
Multi bit ECC error.

enumerator kDSI_InterruptGroup2CrcError
CRC error.

enum _dsi_tx_data_type
DSI TX data type.

Values:

enumerator kDSI_TxDataVsyncStart
V Sync start.

enumerator kDSI_TxDataVsyncEnd
V Sync end.

enumerator kDSI_TxDataHsyncStart
H Sync start.

enumerator kDSI_TxDataHsyncEnd
H Sync end.

enumerator kDSI_TxDataEoTp
End of transmission packet.

enumerator kDSI_TxDataCmOff
Color mode off.

enumerator kDSI_TxDataCmOn
Color mode on.

enumerator kDSI_TxDataShutDownPeriph
Shut down peripheral.

enumerator kDSI_TxDataTurnOnPeriph
Turn on peripheral.

enumerator kDSI_TxDataGenShortWrNoParam
Generic Short WRITE, no parameters.

enumerator kDSI_TxDataGenShortWrOneParam
Generic Short WRITE, one parameter.

enumerator kDSI_TxDataGenShortWrTwoParam
Generic Short WRITE, two parameter.

enumerator kDSI_TxDataGenShortRdNoParam
Generic Short READ, no parameters.

enumerator kDSI_TxDataGenShortRdOneParam
Generic Short READ, one parameter.

enumerator kDSI_TxDataGenShortRdTwoParam
Generic Short READ, two parameter.

enumerator kDSI_TxDataDcsShortWrNoParam
DCS Short WRITE, no parameters.

enumerator kDSI_TxDataDcsShortWrOneParam
DCS Short WRITE, one parameter.

enumerator kDSI_TxDataDcsShortRdNoParam
DCS Short READ, no parameters.

enumerator kDSI_TxDataSetMaxReturnPktSize
Set the Maximum Return Packet Size.

enumerator kDSI_TxDataNull
Null Packet, no data.

enumerator kDSI_TxDataBlanking
Blanking Packet, no data.

enumerator kDSI_TxDataGenLongWr
Generic long write.

enumerator kDSI_TxDataDcsLongWr
DCS Long Write/write_LUT Command Packet.

enumerator kDSI_TxDataLooselyPackedPixel20BitYCbCr
Loosely Packed Pixel Stream, 20-bit YCbCr, 4:2:2 Format.

enumerator kDSI_TxDataPackedPixel24BitYCbCr
Packed Pixel Stream, 24-bit YCbCr, 4:2:2 Format.

enumerator kDSI_TxDataPackedPixel16BitYCbCr
Packed Pixel Stream, 16-bit YCbCr, 4:2:2 Format.

enumerator kDSI_TxDataPackedPixel30BitRGB
Packed Pixel Stream, 30-bit RGB, 10-10-10 Format.

enumerator kDSI_TxDataPackedPixel36BitRGB
Packed Pixel Stream, 36-bit RGB, 12-12-12 Format.

enumerator kDSI_TxDataPackedPixel12BitYCrCb
Packed Pixel Stream, 12-bit YCbCr, 4:2:0 Format.

enumerator kDSI_TxDataPackedPixel16BitRGB
Packed Pixel Stream, 16-bit RGB, 5-6-5 Format.

enumerator kDSI_TxDataPackedPixel18BitRGB
Packed Pixel Stream, 18-bit RGB, 6-6-6 Format.

enumerator kDSI_TxDataLooselyPackedPixel18BitRGB
Loosely Packed Pixel Stream, 18-bit RGB, 6-6-6 Format.

enumerator kDSI_TxDataPackedPixel24BitRGB
Packed Pixel Stream, 24-bit RGB, 8-8-8 Format.

enum _dsi_rx_data_type
DSI RX data type.

Values:

enumerator kDSI_RxDataAckAndErrorReport
Acknowledge and Error Report

enumerator kDSI_RxDataEoTp
End of Transmission packet.

enumerator kDSI_RxDataGenShortRdResponseOneByte
Generic Short READ Response, 1 byte returned.

enumerator kDSI_RxDataGenShortRdResponseTwoByte
Generic Short READ Response, 2 byte returned.

enumerator kDSI_RxDataGenLongRdResponse
Generic Long READ Response.

enumerator kDSI_RxDataDcsLongRdResponse
DCS Long READ Response.

enumerator kDSI_RxDataDcsShortRdResponseOneByte
DCS Short READ Response, 1 byte returned.

enumerator kDSI_RxDataDcsShortRdResponseTwoByte
DCS Short READ Response, 2 byte returned.

_dsi_transfer_flags DSI transfer control flags.

Values:

enumerator kDSI_TransferUseHighSpeed
Use high speed mode or not.

enumerator kDSI_TransferPerformBTA
Perform BTA or not.

typedef struct *_dsi_config* dsi_config_t
MIPI DSI controller configuration.

typedef enum *_dsi_dpi_color_coding* dsi_dpi_color_coding_t
MIPI DPI interface color coding.

typedef enum *_dsi_dpi_pixel_packet* dsi_dpi_pixel_packet_t
MIPI DSI pixel packet type send through DPI interface.

typedef enum *_dsi_dpi_video_mode* dsi_dpi_video_mode_t
DPI video mode.

typedef enum *_dsi_dpi_bllp_mode* dsi_dpi_bllp_mode_t
Behavior in BLLP (Blanking or Low-Power Interval).

typedef struct *_dsi_dpi_config* dsi_dpi_config_t
MIPI DSI controller DPI interface configuration.

typedef struct *_dsi_dphy_config* dsi_dphy_config_t
MIPI DSI D-PHY configuration.

typedef enum *_dsi_tx_data_type* dsi_tx_data_type_t
DSI TX data type.

typedef enum *_dsi_rx_data_type* dsi_rx_data_type_t
DSI RX data type.

typedef struct *_dsi_transfer* dsi_transfer_t

Structure for the data transfer.

typedef struct *_dsi_handle* dsi_handle_t

MIPI DSI transfer handle.

typedef void (*dsi_callback_t)(MIPI_DSI_HOST_Type *base, *dsi_handle_t* *handle, *status_t* status, void *userData)

MIPI DSI callback for finished transfer.

When transfer finished, one of these status values will be passed to the user:

- kStatus_Success Data transfer finished with no error.
- kStatus_Timeout Transfer failed because of timeout.
- kStatus_DSI_RxDataError RX data error, user could use DSI_GetRxErrorStatus to check the error details.
- kStatus_DSI_ErrorReportReceived Error Report packet received, user could use DSI_GetAndClearHostStatus to check the error report status.
- kStatus_Fail Transfer failed for other reasons.

FSL_DSI_TX_MAX_PAYLOAD_BYTE

FSL_DSI_RX_MAX_PAYLOAD_BYTE

struct _dsi_config

#include <fsl_mipi_dsi.h> MIPI DSI controller configuration.

Public Members

uint8_t numLanes

Number of lanes.

bool enableNonContinuousHsClk

In enabled, the high speed clock will enter low power mode between transmissions.

bool enableTxUlps

Enable the TX ULPS.

bool autoInsertEoTp

Insert an EoTp short package when switching from HS to LP.

uint8_t numExtraEoTp

How many extra EoTp to send after the end of a packet.

uint32_t htxTo_ByteClk

HS TX timeout count (HTX_TO) in byte clock.

uint32_t lrxHostTo_ByteClk

LP RX host timeout count (LRX-H_TO) in byte clock.

uint32_t btaTo_ByteClk

Bus turn around timeout count (TA_TO) in byte clock.

struct _dsi_dpi_config

#include <fsl_mipi_dsi.h> MIPI DSI controller DPI interface configuration.

Public Members

uint16_t pixelPayloadSize

Maximum number of pixels that should be sent as one DSI packet. Recommended that the line size (in pixels) is evenly divisible by this parameter.

dsi_dpi_color_coding_t dpiColorCoding

DPI color coding.

dsi_dpi_pixel_packet_t pixelPacket

Pixel packet format.

dsi_dpi_video_mode_t videoMode

Video mode.

dsi_dpi_bllp_mode_t bllpMode

Behavior in BLLP.

uint8_t polarityFlags

OR'ed value of _dsi_dpi_polarity_flag controls signal polarity.

uint16_t hfp

Horizontal front porch, in dpi pixel clock.

uint16_t hbp

Horizontal back porch, in dpi pixel clock.

uint16_t hsw

Horizontal sync width, in dpi pixel clock.

uint8_t vfp

Number of lines in vertical front porch.

uint8_t vbp

Number of lines in vertical back porch.

uint16_t panelHeight

Line number in vertical active area.

uint8_t virtualChannel

Virtual channel.

struct __dsi__dphy__config

#include <fsl_mipi_dsi.h> MIPI DSI D-PHY configuration.

Public Members

uint32_t txHsBitClk_Hz

The generated HS TX bit clock in Hz.

uint8_t tClkPre_ByteClk

TLPX + TCLK-PREPARE + TCLK-ZERO + TCLK-PRE in byte clock. Set how long the controller will wait after enabling clock lane for HS before enabling data lanes for HS.

uint8_t tClkPost_ByteClk

TCLK-POST + T_CLK-TRAIL in byte clock. Set how long the controller will wait before putting clock lane into LP mode after data lanes detected in stop state.

uint8_t tHsExit_ByteClk

THS-EXIT in byte clock. Set how long the controller will wait after the clock lane has been put into LP mode before enabling clock lane for HS again.

uint32_t tWakeup_EscClk
: Number of clk_esc clock periods to keep a clock or data lane in Mark-1 state after exiting ULPS.

uint8_t tHsPrepare_HalfEscClk
: THS-PREPARE in clk_esc/2. Set how long to drive the LP-00 state before HS transmissions, available values are 2, 3, 4, 5.

uint8_t tClkPrepare_HalfEscClk
: TCLK-PREPARE in clk_esc/2. Set how long to drive the LP-00 state before HS transmissions, available values are 2, 3.

uint8_t tHsZero_ByteClk
: THS-ZERO in clk_byte. Set how long that controller drives data lane HS-0 state before transmit the Sync sequence. Available values are 6, 7, ..., 37.

uint8_t tClkZero_ByteClk
: TCLK-ZERO in clk_byte. Set how long that controller drives clock lane HS-0 state before transmit the Sync sequence. Available values are 3, 4, ..., 66.

uint8_t tHsTrail_ByteClk
: THS-TRAIL + 4*UI in clk_byte. Set the time of the flipped differential state after last payload data bit of HS transmission burst. Available values are 0, 1, ..., 15.

uint8_t tClkTrail_ByteClk
: TCLK-TRAIL + 4*UI in clk_byte. Set the time of the flipped differential state after last payload data bit of HS transmission burst. Available values are 0, 1, ..., 15.

struct _dsi_transfer
: *#include <fsl_mipi_dsi.h>* Structure for the data transfer.

Public Members

uint8_t virtualChannel
: Virtual channel.

dsi_tx_data_type_t txDataType
: TX data type.

uint8_t flags
: Flags to control the transfer, see _dsi_transfer_flags.

const uint8_t *txData
: The TX data buffer.

uint8_t *rxData
: The RX data buffer.

uint16_t txDataSize
: Size of the TX data.

uint16_t rxDataSize
: Size of the RX data.

bool sendDcsCmd
: If set to true, the DCS command is specified by dcsCmd, otherwise the DCS command is included in the txData.

uint8_t dcsCmd
: The DCS command to send, only valid when sendDcsCmd is true.

struct _dsi_handle
: *#include <fsl_mipi_dsi.h>* MIPI DSI transfer handle structure.

Public Members

volatile bool isBusy
MIPI DSI is busy with APB data transfer.

dsi_transfer_t xfer
Transfer information.

dsi_callback_t callback
DSI callback

void *userData
Callback parameter

2.48 MIPI_DSI: MIPI DSI Host Controller

2.49 MRT: Multi-Rate Timer

void MRT_Init(MRT_Type *base, const *mrt_config_t* *config)
Ungates the MRT clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the MRT driver.

Parameters

- base – Multi-Rate timer peripheral base address
- config – Pointer to user's MRT config structure. If MRT has MULTITASK bit field in MODCFG reigster, param config is useless.

void MRT_Deinit(MRT_Type *base)
Gate the MRT clock.

Parameters

- base – Multi-Rate timer peripheral base address

static inline void MRT_GetDefaultConfig(*mrt_config_t* *config)
Fill in the MRT config struct with the default settings.

The default values are:

```
config->enableMultiTask = false;
```

Parameters

- config – Pointer to user's MRT config structure.

static inline void MRT_SetupChannelMode(MRT_Type *base, *mrt_chnl_t* channel, const *mrt_timer_mode_t* mode)
Sets up an MRT channel mode.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Channel that is being configured.
- mode – Timer mode to use for the channel.

static inline void MRT_EnableInterrupts(MRT_Type *base, *mrt_chnl_t* channel, uint32_t mask)

Enables the MRT interrupt.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number
- mask – The interrupts to enable. This is a logical OR of members of the enumeration mrt_interrupt_enable_t

static inline void MRT_DisableInterrupts(MRT_Type *base, *mrt_chnl_t* channel, uint32_t mask)

Disables the selected MRT interrupt.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number
- mask – The interrupts to disable. This is a logical OR of members of the enumeration mrt_interrupt_enable_t

static inline uint32_t MRT_GetEnabledInterrupts(MRT_Type *base, *mrt_chnl_t* channel)

Gets the enabled MRT interrupts.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number

Returns

The enabled interrupts. This is the logical OR of members of the enumeration mrt_interrupt_enable_t

static inline uint32_t MRT_GetStatusFlags(MRT_Type *base, *mrt_chnl_t* channel)

Gets the MRT status flags.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number

Returns

The status flags. This is the logical OR of members of the enumeration mrt_status_flags_t

static inline void MRT_ClearStatusFlags(MRT_Type *base, *mrt_chnl_t* channel, uint32_t mask)

Clears the MRT status flags.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number
- mask – The status flags to clear. This is a logical OR of members of the enumeration mrt_status_flags_t

void MRT_UpdateTimerPeriod(MRT_Type *base, *mrt_chnl_t* channel, uint32_t count, bool immediateLoad)

Used to update the timer period in units of count.

The new value will be immediately loaded or will be loaded at the end of the current time interval. For one-shot interrupt mode the new value will be immediately loaded.

Note: User can call the utility macros provided in fsl_common.h to convert to ticks

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number
- count – Timer period in units of ticks
- immediateLoad – true: Load the new value immediately into the TIMER register; false: Load the new value at the end of current timer interval

static inline uint32_t MRT_GetCurrentTimerCount(MRT_Type *base, *mrt_chnl_t* channel)

Reads the current timer counting value.

This function returns the real-time timer counting value, in a range from 0 to a timer period.

Note: User can call the utility macros provided in fsl_common.h to convert ticks to usec or msec

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number

Returns

Current timer counting value in ticks

static inline void MRT_StartTimer(MRT_Type *base, *mrt_chnl_t* channel, uint32_t count)

Starts the timer counting.

After calling this function, timers load period value, counts down to 0 and depending on the timer mode it will either load the respective start value again or stop.

Note: User can call the utility macros provided in fsl_common.h to convert to ticks

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number.
- count – Timer period in units of ticks. Count can contain the LOAD bit, which control the force load feature.

static inline void MRT_StopTimer(MRT_Type *base, *mrt_chnl_t* channel)

Stops the timer counting.

This function stops the timer from counting.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number.

static inline uint32_t MRT_GetIdleChannel(MRT_Type *base)

Find the available channel.

This function returns the lowest available channel number.

Parameters

- base – Multi-Rate timer peripheral base address

static inline void MRT_ReleaseChannel(MRT_Type *base, *mrt_chnl_t* channel)

Release the channel when the timer is using the multi-task mode.

In multi-task mode, the INUSE flags allow more control over when MRT channels are released for further use. The user can hold on to a channel acquired by calling MRT_GetIdleChannel() for as long as it is needed and release it by calling this function. This removes the need to ask for an available channel for every use.

Parameters

- base – Multi-Rate timer peripheral base address
- channel – Timer channel number.

FSL_MRT_DRIVER_VERSION

enum _mrt_chnl

List of MRT channels.

Values:

enumerator kMRT_Channel_0

MRT channel number 0

enumerator kMRT_Channel_1

MRT channel number 1

enumerator kMRT_Channel_2

MRT channel number 2

enumerator kMRT_Channel_3

MRT channel number 3

enum _mrt_timer_mode

List of MRT timer modes.

Values:

enumerator kMRT_RepeatMode

Repeat Interrupt mode

enumerator kMRT_OneShotMode

One-shot Interrupt mode

enumerator kMRT_OneShotStallMode

One-shot stall mode

enum _mrt_interrupt_enable

List of MRT interrupts.

Values:

enumerator kMRT_TimerInterruptEnable

Timer interrupt enable

enum _mrt_status_flags

List of MRT status flags.

Values:

enumerator kMRT_TimerInterruptFlag

Timer interrupt flag

enumerator kMRT_TimerRunFlag
Indicates state of the timer

typedef enum *_mrt_chnl* mrt_chnl_t
List of MRT channels.

typedef enum *_mrt_timer_mode* mrt_timer_mode_t
List of MRT timer modes.

typedef enum *_mrt_interrupt_enable* mrt_interrupt_enable_t
List of MRT interrupts.

typedef enum *_mrt_status_flags* mrt_status_flags_t
List of MRT status flags.

typedef struct *_mrt_config* mrt_config_t
MRT configuration structure.

This structure holds the configuration settings for the MRT peripheral. To initialize this structure to reasonable defaults, call the MRT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

struct _mrt_config
#include <fsl_mrt.h> MRT configuration structure.

This structure holds the configuration settings for the MRT peripheral. To initialize this structure to reasonable defaults, call the MRT_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool enableMultiTask
true: Timers run in multi-task mode; false: Timers run in hardware status mode

2.50 MU: Messaging Unit

void MU_Init(MU_Type *base)
Initializes the MU module.

This function enables the MU clock only.

Parameters

- base – MU peripheral base address.

void MU_Deinit(MU_Type *base)
De-initializes the MU module.

This function disables the MU clock only.

Parameters

- base – MU peripheral base address.

static inline void MU_SendMsgNonBlocking(MU_Type *base, uint32_t regIndex, uint32_t msg)

Writes a message to the TX register.

This function writes a message to the specific TX register. It does not check whether the TX register is empty or not. The upper layer should make sure the TX register is empty before calling this function. This function can be used in ISR for better performance.

```
while (!(kMU_Tx0EmptyFlag & MU_GetStatusFlags(base))) { }  Wait for TX0 register empty.
MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG_VAL);  Write message to the TX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – TX register index, see mu_msg_reg_index_t.
- msg – Message to send.

status_t MU_SendMsg(MU_Type *base, uint32_t regIndex, uint32_t msg)

Blocks to send a message.

This function waits until the TX register is empty and sends the message. If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and returns kStatus_Timeout.

Parameters

- base – MU peripheral base address.
- regIndex – MU message register, see mu_msg_reg_index_t.
- msg – Message to send.

Return values

- kStatus_Success – Message sent successfully.
- kStatus_Timeout – Timeout occurred while waiting for TX register to be empty.

Returns

status_t

static inline uint32_t MU_ReceiveMsgNonBlocking(MU_Type *base, uint32_t regIndex)

Reads a message from the RX register.

This function reads a message from the specific RX register. It does not check whether the RX register is full or not. The upper layer should make sure the RX register is full before calling this function. This function can be used in ISR for better performance.

```
uint32_t msg;
while (!(kMU_Rx0FullFlag & MU_GetStatusFlags(base)))
{
}  Wait for the RX0 register full.

msg = MU_ReceiveMsgNonBlocking(base, kMU_MsgReg0);  Read message from RX0 register.
```

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns

The received message.

status_t MU_ReceiveMsgTimeout(MU_Type *base, uint32_t regIndex, uint32_t *readValue)

Blocks to receive a message with timeout protection.

This function waits until the RX register is full and receives the message. If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

This function provides the same blocking behavior as MU_ReceiveMsg() but with additional timeout protection to prevent system hangs if the other core becomes unresponsive or if hardware issues occur.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that this function includes timeout protection while MU_ReceiveMsg() waits indefinitely.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.
- readValue – Pointer to store the received message.

Return values

- kStatus_Success – Message received successfully.
- kStatus_InvalidArgument – Invalid readValue pointer.
- kStatus_Timeout – Timeout occurred while waiting for RX register to be full.

Returns

status_t

uint32_t MU_ReceiveMsg(MU_Type *base, uint32_t regIndex)

Blocks to receive a message (infinite wait, no timeout protection).

This function waits until the RX register is full and receives the message. This function will wait indefinitely until a message is received.

Note: Both MU_ReceiveMsg() and MU_ReceiveMsgTimeout() are blocking functions. The difference is that MU_ReceiveMsgTimeout() includes timeout protection while this function waits indefinitely.

Warning: This function does not include timeout protection and may cause system hangs if the other core becomes unresponsive. For applications requiring timeout protection, use MU_ReceiveMsgTimeout() instead.

Parameters

- base – MU peripheral base address.
- regIndex – RX register index, see mu_msg_reg_index_t.

Returns

The received message.

static inline void MU_SetFlagsNonBlocking(MU_Type *base, uint32_t flags)

Sets the 3-bit MU flags reflect on the other MU side.

This function sets the 3-bit MU flags directly. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. The upper layer should make sure the status flag kMU_FlagsUpdatingFlag is cleared before calling this function.

```
while (kMU_FlagsUpdatingFlag & MU_GetStatusFlags(base))
{
}  Wait for previous MU flags updating.

MU_SetFlagsNonBlocking(base, 0U);  Set the mU flags.
```

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

status_t MU_SetFlags(MU_Type *base, uint32_t flags)

brief Blocks setting the 3-bit MU flags reflect on the other MU side.

This function blocks setting the 3-bit MU flags. Every time the 3-bit MU flags are changed, the status flag kMU_FlagsUpdatingFlag asserts indicating the 3-bit MU flags are updating to the other side. After the 3-bit MU flags are updated, the status flag kMU_FlagsUpdatingFlag is cleared by hardware. During the flags updating period, the flags cannot be changed. This function waits for the MU status flag kMU_FlagsUpdatingFlag cleared and sets the 3-bit MU flags.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

return status_t retval kStatus_Success Flags were set successfully. retval kStatus_Timeout Timeout occurred while waiting for flags to update.

Parameters

- base – MU peripheral base address.
- flags – The 3-bit MU flags to set.

static inline uint32_t MU_GetFlags(MU_Type *base)

Gets the current value of the 3-bit MU flags set by the other side.

This function gets the current 3-bit MU flags on the current side.

Parameters

- base – MU peripheral base address.

Returns

flags Current value of the 3-bit flags.

uint32_t MU_GetStatusFlags(MU_Type *base)

Gets the MU status flags.

This function returns the bit mask of the MU status flags. See _mu_status_flags.

```
uint32_t flags;
flags = MU_GetStatusFlags(base);  Get all status flags.
if (kMU_Tx0EmptyFlag & flags)
```

(continues on next page)

(continued from previous page)

```
{
    The TX0 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg0, MSG0_VAL);
}
if (kMU_Tx1EmptyFlag & flags)
{
    The TX1 register is empty. Message can be sent.
    MU_SendMsgNonBlocking(base, kMU_MsgReg1, MSG1_VAL);
}
```

If there are more than 4 general purpose interrupts, use MU_GetGeneralPurposeStatusFlags.

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU status flags, see _mu_status_flags.

static inline uint32_t MU_GetInterruptsPending(MU_Type *base)

Gets the MU IRQ pending status of enabled interrupts.

This function returns the bit mask of the pending MU IRQs of enabled interrupts. Only these flags are checked. kMU_Tx0EmptyFlag kMU_Tx1EmptyFlag kMU_Tx2EmptyFlag kMU_Tx3EmptyFlag kMU_Rx0FullFlag kMU_Rx1FullFlag kMU_Rx2FullFlag kMU_Rx3FullFlag kMU_GenInt0Flag kMU_GenInt1Flag kMU_GenInt2Flag kMU_GenInt3Flag

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU IRQs pending.

static inline void MU_ClearStatusFlags(MU_Type *base, uint32_t flags)

Clears the specific MU status flags.

This function clears the specific MU status flags. The flags to clear should be passed in as bit mask. See _mu_status_flags.

```
Clear general interrupt 0 and general interrupt 1 pending flags.
MU_ClearStatusFlags(base, kMU_GenInt0Flag | kMU_GenInt1Flag);
```

If there are more than 4 general purpose interrupts, use MU_ClearGeneralPurposeStatusFlags.

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU status flags. See _mu_status_flags. Only the following flags can be cleared by software (if applicable for particular device), other flags are cleared by hardware:
  - kMU_GenInt0Flag
  - kMU_GenInt1Flag
  - kMU_GenInt2Flag
  - kMU_GenInt3Flag
  - kMU_MuResetInterruptFlag
  - kMU_OtherSideEnterRunInterruptFlag

- kMU_OtherSideEnterHaltInterruptFlag
- kMU_OtherSideEnterWaitInterruptFlag
- kMU_OtherSideEnterStopInterruptFlag
- kMU_OtherSideEnterPowerDownInterruptFlag
- kMU_ResetAssertInterruptFlag
- kMU_HardwareResetInterruptFlag

static inline void MU_EnableInterrupts(MU_Type *base, uint32_t interrupts)

Enables the specific MU interrupts.

This function enables the specific MU interrupts. The interrupts to enable should be passed in as bit mask. See _mu_interrupt_enable.

```
  Enable general interrupt 0 and TX0 empty interrupt.
MU_EnableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

If there are more than 4 general purpose interrupts, use MU_EnableGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU interrupts. See _mu_interrupt_enable.

static inline void MU_DisableInterrupts(MU_Type *base, uint32_t interrupts)

Disables the specific MU interrupts.

This function disables the specific MU interrupts. The interrupts to disable should be passed in as bit mask. See _mu_interrupt_enable.

```
  Disable general interrupt 0 and TX0 empty interrupt.
MU_DisableInterrupts(base, kMU_GenInt0InterruptEnable | kMU_Tx0EmptyInterruptEnable);
```

If there are more than 4 general purpose interrupts, use MU_DisableGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU interrupts. See _mu_interrupt_enable.

status_t MU_TriggerInterrupts(MU_Type *base, uint32_t interrupts)

Triggers interrupts to the other core.

This function triggers the specific interrupts to the other core. The interrupts to trigger are passed in as bit mask. See _mu_interrupt_trigger. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
if (kStatus_Success != MU_TriggerInterrupts(base, kMU_GenInt0InterruptTrigger | kMU_
↪GenInt2InterruptTrigger))
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
    has not been processed by the other core.
}
```

If there are more than 4 general purpose interrupts, use MU_TriggerGeneralPurposeInterrupts.

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the interrupts to trigger. See _mu_interrupt_trigger.

Return values

- kStatus_Success – Interrupts have been triggered successfully.
- kStatus_Fail – Previous interrupts have not been accepted.

static inline void MU_EnableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Enables the MU general purpose interrupts.

This function enables the MU general purpose interrupts. The interrupts to enable should be passed in as bit mask of mu_general_purpose_interrupt_t. The function MU_EnableInterrupts only support general interrupt 0~3, this function supports all general interrupts.

For example, to enable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt3);
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU general purpose interrupts, see mu_general_purpose_interrupt_t.

static inline void MU_DisableGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Disables the MU general purpose interrupts.

This function disables the MU general purpose interrupts. The interrupts to disable should be passed in as bit mask of mu_general_purpose_interrupt_t. The function MU_DisableInterrupts only support general interrupt 0~3, this function supports all general interrupts.

For example, to disable general purpose interrupt 0 and 3, use like this:

```
MU_EnableGeneralPurposeInterrupts(MU, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt3);
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the MU general purpose interrupts. see mu_general_purpose_interrupt_t.

static inline uint32_t MU_GetGeneralPurposeStatusFlags(MU_Type *base)

Gets the MU general purpose interrupt status flags.

This function returns the bit mask of the MU general purpose interrupt status flags. MU_GetStatusFlags can only get general purpose interrupt status 0~3, this function can get all general purpose interrupts status.

This example shows to check whether general purpose interrupt 0 and 3 happened.

```
uint32_t flags;
flags = MU_GetGeneralPurposeStatusFlags(base);
if (kMU_GeneralPurposeInterrupt0 & flags)
{
}
if (kMU_GeneralPurposeInterrupt3 & flags)
```

(continues on next page)

(continued from previous page)

```
{
}
```

Parameters

- base – MU peripheral base address.

Returns

Bit mask of the MU general purpose interrupt status flags.

static inline void MU_ClearGeneralPurposeStatusFlags(MU_Type *base, uint32_t flags)

Clear the MU general purpose interrupt status flags.

This function clears the specific MU general purpose interrupt status flags. The flags to clear should be passed in as bit mask. mu_general_purpose_interrupt_t_mu_status_flags.

Example to clear general purpose interrupt 0 and general interrupt 1 pending flags.

```
MU_ClearGeneralPurposeStatusFlags(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt1);
```

Parameters

- base – MU peripheral base address.
- flags – Bit mask of the MU general purpose interrupt status flags. See mu_general_purpose_interrupt_t.

static inline uint32_t MU_GetRxStatusFlags(MU_Type *base)

Return the RX status flags in reverse numerical order.

This function return the RX status flags in reverse order. Note: RFn bits of SR[3-0](mu status register) are mapped in ascending numerical order: RF0 -> SR[0] RF1 -> SR[1] RF2 -> SR[2] RF3 -> SR[3] This function will return these bits in reverse numerical order(RF3->RF1) to comply with MU_GetRxStatusFlags() of mu driver. See MU_GetRxStatusFlags() from drivers/mu/fsl_mu.h

```
status_reg = MU_GetRxStatusFlags(base);
```

Parameters

- base – MU peripheral base address.

Returns

MU RX status flags in reverse order

status_t MU_TriggerGeneralPurposeInterrupts(MU_Type *base, uint32_t interrupts)

Triggers general purpose interrupts to the other core.

This function triggers the specific general purpose interrupts to the other core. The interrupts to trigger are passed in as bit mask. See mu_general_purpose_interrupt_t. The MU should not trigger an interrupt to the other core when the previous interrupt has not been processed by the other core. This function checks whether the previous interrupts have been processed. If not, it returns an error.

```
status_t status;
status = MU_TriggerGeneralPurposeInterrupts(base, kMU_GeneralPurposeInterrupt0 | kMU_
↪GeneralPurposeInterrupt2);

if (kStatus_Success != status)
{
    Previous general purpose interrupt 0 or general purpose interrupt 2
```

(continues on next page)

(continued from previous page)

```
    has not been processed by the other core.
}
```

Parameters

- base – MU peripheral base address.
- interrupts – Bit mask of the interrupts to trigger. See mu_general_purpose_interrupt_t.

Return values

- kStatus_Success – Interrupts have been triggered successfully.
- kStatus_Fail – Previous interrupts have not been accepted.

void MU_BootOtherCore(MU_Type *base, mu_core_boot_mode_t mode)

Boots the other core.

This function boots the other core with a boot configuration.

Parameters

- base – MU peripheral base address.
- mode – The other core boot mode.

void MU_HoldOtherCoreReset(MU_Type *base)

Holds the other core reset.

This function causes the other core to be held in reset following any reset event.

Parameters

- base – MU peripheral base address.

static inline *status_t* MU_ResetBothSides(MU_Type *base)

Resets the MU for both A side and B side.

This function resets the MU for both A side and B side. Before reset, it is recommended to interrupt processor B, because this function may affect the ongoing processor B programs.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations if waiting for the other side to come out of reset takes too long.

Note: For some platforms, only MU side A could use this function, check reference manual for details.

Parameters

- base – MU peripheral base address.

Return values

- kStatus_Success – The MU was reset successfully.
- kStatus_Timeout – Timeout occurred while waiting for the other side to come out of reset.

Returns

status_t

status_t MU_HardwareResetOtherCore(MU_Type *base, bool waitReset, bool holdReset, mu_core_boot_mode_t bootMode)

Hardware reset the other core.

This function resets the other core, the other core could mask the hardware reset by calling MU_MaskHardwareReset. The hardware reset mask feature is only available for some platforms. This function could be used together with MU_BootOtherCore to control the other core reset workflow.

If MU1_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout if waiting for the other core to enter or exit reset takes too long.

Example 1: Reset the other core, and no hold reset

```
MU_HardwareResetOtherCore(MU_A, true, false, bootMode);
```

In this example, the core at MU side B will reset with the specified boot mode.

Example 2: Reset the other core and hold it, then boot the other core later. Here the other core enters reset, and the reset is hold

```
MU_HardwareResetOtherCore(MU_A, true, true, modeDontCare);
```

Current core boot the other core when necessary.

```
MU_BootOtherCore(MU_A, bootMode);
```

Note: The feature waitReset, holdReset, and bootMode might be not supported for some platforms. waitReset is only available for platforms that FSL_FEATURE_MU_NO_CORE_STATUS not defined as 1 and FSL_FEATURE_MU_HAS_RESET_ASSERT_INT not defined as 0. holdReset is only available for platforms that FSL_FEATURE_MU_HAS_RSTH not defined as 0. bootMode is only available for platforms that FSL_FEATURE_MU_HAS_BOOT not defined as 0.

Parameters

- base – MU peripheral base address.
- waitReset – Wait the other core enters reset. Only work when there is CSSR0[RAIP].
  - true: Wait until the other core enters reset, if the other core has masked the hardware reset, then this function will be blocked.
  - false: Don't wait the reset.
- holdReset – Hold the other core reset or not. Only work when there is CCR0[RSTH].
  - true: Hold the other core in reset, this function returns directly when the other core enters reset.
  - false: Don't hold the other core in reset, this function waits until the other core out of reset.
- bootMode – Boot mode of the other core, if holdReset is true, this parameter is useless.

Return values

- kStatus_Success – The other core was reset successfully.

- kStatus_Timeout – Timeout occurred while waiting for the other core to enter or exit reset.

Returns
status_t

FSL_MU_DRIVER_VERSION
MU driver version.

enum _mu_status_flags
MU status flags.

Values:

enumerator kMU_Tx0EmptyFlag
TX0 empty.

enumerator kMU_Tx1EmptyFlag
TX1 empty.

enumerator kMU_Tx2EmptyFlag
TX2 empty.

enumerator kMU_Tx3EmptyFlag
TX3 empty.

enumerator kMU_Rx0FullFlag
RX0 full.

enumerator kMU_Rx1FullFlag
RX1 full.

enumerator kMU_Rx2FullFlag
RX2 full.

enumerator kMU_Rx3FullFlag
RX3 full.

enumerator kMU_GenInt0Flag
General purpose interrupt 0 pending.

enumerator kMU_GenInt1Flag
General purpose interrupt 1 pending.

enumerator kMU_GenInt2Flag
General purpose interrupt 2 pending.

enumerator kMU_GenInt3Flag
General purpose interrupt 3 pending.

enumerator kMU_RxFullPendingFlag
Any RX full flag is pending.

enumerator kMU_TxEmptyPendingFlag
Any TX empty flag is pending.

enumerator kMU_GenIntPendingFlag
Any general interrupt flag is pending.

enumerator kMU_EventPendingFlag
MU event pending.

enumerator kMU_FlagsUpdatingFlag
MU flags update is on-going.

enumerator kMU_MuInResetFlag
MU of any side is in reset.

enumerator kMU_MuResetInterruptFlag
The other side initializes MU reset.

enum _mu_interrupt_enable
MU interrupt source to enable.

Values:

enumerator kMU_Tx0EmptyInterruptEnable
TX0 empty.

enumerator kMU_Tx1EmptyInterruptEnable
TX1 empty.

enumerator kMU_Tx2EmptyInterruptEnable
TX2 empty.

enumerator kMU_Tx3EmptyInterruptEnable
TX3 empty.

enumerator kMU_Rx0FullInterruptEnable
RX0 full.

enumerator kMU_Rx1FullInterruptEnable
RX1 full.

enumerator kMU_Rx2FullInterruptEnable
RX2 full.

enumerator kMU_Rx3FullInterruptEnable
RX3 full.

enumerator kMU_GenInt0InterruptEnable
General purpose interrupt 0.

enumerator kMU_GenInt1InterruptEnable
General purpose interrupt 1.

enumerator kMU_GenInt2InterruptEnable
General purpose interrupt 2.

enumerator kMU_GenInt3InterruptEnable
General purpose interrupt 3.

enumerator kMU_MuResetInterruptEnable
The other side initializes MU reset.

enum _mu_interrupt_trigger
MU interrupt that could be triggered to the other core.

Values:

enumerator kMU_GenInt0InterruptTrigger
General purpose interrupt 0.

enumerator kMU_GenInt1InterruptTrigger
General purpose interrupt 1.

enumerator kMU_GenInt2InterruptTrigger
General purpose interrupt 2.

enumerator kMU_GenInt3InterruptTrigger
General purpose interrupt 3.

enum _mu_msg_reg_index
MU message register index.

Values:

enumerator kMU_MsgReg0
Message register 0.

enumerator kMU_MsgReg1
Message register 1.

enumerator kMU_MsgReg2
Message register 2.

enumerator kMU_MsgReg3
Message register 3.

enum _mu_general_purpose_interrupt
MU general purpose interrupts.

Values:

enumerator kMU_GeneralPurposeInterrupt0
General purpose interrupt 0

enumerator kMU_GeneralPurposeInterrupt1
General purpose interrupt 1

enumerator kMU_GeneralPurposeInterrupt2
General purpose interrupt 2

enumerator kMU_GeneralPurposeInterrupt3
General purpose interrupt 3

typedef enum *_mu_msg_reg_index* mu_msg_reg_index_t
MU message register index.

typedef enum *_mu_general_purpose_interrupt* mu_general_purpose_interrupt_t
MU general purpose interrupts.

MU_CORE_INTR(intr)

MU_MISC_INTR(intr)

MU_TX_INTR(intr)

MU_RX_INTR(intr)

MU_GI_INTR(intr)

MU_GET_CORE_INTR(intrs)

MU_GET_TX_INTR(intrs)

MU_GET_RX_INTR(intrs)

MU_GET_GI_INTR(intrs)

MU_CORE_FLAG(flag)

MU_STAT_FLAG(flag)

MU_TX_FLAG(flag)

MU_RX_FLAG(flag)

MU_GI_FLAG(flag)

MU_GET_CORE_FLAG(flags)

MU_GET_STAT_FLAG(flags)

MU_GET_TX_FLAG(flags)

MU_GET_RX_FLAG(flags)

MU_GET_GI_FLAG(flags)

MU1_BUSY_POLL_COUNT

Maximum polling iterations for MU waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the MU code before timing out and returning an error.

It applies to all waiting loops in MU driver, such as waiting for TX register to be empty or waiting for RX register to be full.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if a core becomes unresponsive.

2.51 PDM: Microphone Interface

2.52 PDM Driver

void PDM_Init(PDM_Type *base, const *pdm_config_t* *config)

Initializes the PDM peripheral.

Ungates the PDM clock, resets the module, and configures PDM with a configuration structure. The configuration structure can be custom filled or set with default values by PDM_GetDefaultConfig().

Note: This API should be called at the beginning of the application to use the PDM driver. Otherwise, accessing the PDM module can cause a hard fault because the clock is not enabled.

Parameters

- base – PDM base pointer
- config – PDM configuration structure.

void PDM_Deinit(PDM_Type *base)

De-initializes the PDM peripheral.

This API gates the PDM clock. The PDM module can't operate unless PDM_Init is called to enable the clock.

Parameters

- base – PDM base pointer

static inline void PDM_Reset(PDM_Type *base)

Resets the PDM module.

Parameters

- base – PDM base pointer

static inline void PDM_Enable(PDM_Type *base, bool enable)

Enables/disables PDM interface.

Parameters

- base – PDM base pointer
- enable – True means PDM interface is enabled, false means PDM interface is disabled.

static inline void PDM_EnableDebugMode(PDM_Type *base, bool enable)

Enables/disables debug mode for PDM. The PDM interface cannot enter debug mode once in Disable/Low Leakage or Low Power mode.

Parameters

- base – PDM base pointer
- enable – True means PDM interface enter debug mode, false means PDM interface in normal mode.

static inline void PDM_EnableInDebugMode(PDM_Type *base, bool enable)

Enables/disables PDM interface in debug mode.

Parameters

- base – PDM base pointer
- enable – True means PDM interface is enabled debug mode, false means PDM interface is disabled after after completing the current frame in debug mode.

static inline void PDM_EnterLowLeakageMode(PDM_Type *base, bool enable)

Enables/disables PDM interface disable/Low Leakage mode.

Parameters

- base – PDM base pointer
- enable – True means PDM interface is in disable/low leakage mode, False means PDM interface is in normal mode.

static inline void PDM_EnableChannel(PDM_Type *base, uint8_t channel, bool enable)

Enables/disables the PDM channel.

Parameters

- base – PDM base pointer
- channel – PDM channel number need to enable or disable.
- enable – True means enable PDM channel, false means disable.

void PDM_SetChannelConfig(PDM_Type *base, uint32_t channel, const *pdm_channel_config_t* *config)

PDM one channel configurations.

Parameters

- base – PDM base pointer
- config – PDM channel configurations.

- channel – channel number. after completing the current frame in debug mode.

status_t PDM_SetSampleRateConfig(PDM_Type *base, uint32_t sourceClock_HZ, uint32_t sampleRate_HZ)

PDM set sample rate.

Note: This function is depend on the configuration of the PDM and PDM channel, so the correct call sequence is

```
PDM_Init(base, pdmConfig)
PDM_SetChannelConfig(base, channel, &channelConfig)
PDM_SetSampleRateConfig(base, source, sampleRate)
```

Parameters

- base – PDM base pointer
- sourceClock_HZ – PDM source clock frequency.
- sampleRate_HZ – PDM sample rate.

status_t PDM_SetSampleRate(PDM_Type *base, uint32_t enableChannelMask, *pdm_df_quality_mode_t* qualityMode, uint8_t osr, uint32_t clkDiv)

PDM set sample rate.

Deprecated:

Do not use this function. It has been superceded by PDM_SetSampleRateConfig

Parameters

- base – PDM base pointer
- enableChannelMask – PDM channel enable mask.
- qualityMode – quality mode.
- osr – cic oversample rate
- clkDiv – clock divider

uint32_t PDM_GetInstance(PDM_Type *base)

Get the instance number for PDM.

Parameters

- base – PDM base pointer.

static inline uint32_t PDM_GetStatus(PDM_Type *base)

Gets the PDM internal status flag. Use the Status Mask in _pdm_internal_status to get the status value needed.

Parameters

- base – PDM base pointer

Returns

PDM status flag value.

static inline uint32_t PDM_GetFifoStatus(PDM_Type *base)

Gets the PDM FIFO status flag. Use the Status Mask in _pdm_fifo_status to get the status value needed.

Parameters

- base – PDM base pointer

Returns
FIFO status.

static inline uint32_t PDM_GetRangeStatus(PDM_Type *base)

Gets the PDM Range status flag. Use the Status Mask in _pdm_range_status to get the status value needed.

Parameters

- base – PDM base pointer

Returns
output status.

static inline void PDM_ClearStatus(PDM_Type *base, uint32_t mask)

Clears the PDM Tx status.

Parameters

- base – PDM base pointer
- mask – State mask. It can be a combination of the status between kPDM_StatusFrequencyLow and kPDM_StatusCh7FifoDataAvaliable.

static inline void PDM_ClearFIFOStatus(PDM_Type *base, uint32_t mask)

Clears the PDM Tx status.

Parameters

- base – PDM base pointer
- mask – State mask.It can be a combination of the status in _pdm_fifo_status.

static inline void PDM_ClearRangeStatus(PDM_Type *base, uint32_t mask)

Clears the PDM range status.

Parameters

- base – PDM base pointer
- mask – State mask. It can be a combination of the status in _pdm_range_status.

void PDM_EnableInterrupts(PDM_Type *base, uint32_t mask)

Enables the PDM interrupt requests.

Parameters

- base – PDM base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
  - kPDM_ErrorInterruptEnable
  - kPDM_FIFOInterruptEnable

static inline void PDM_DisableInterrupts(PDM_Type *base, uint32_t mask)

Disables the PDM interrupt requests.

Parameters

- base – PDM base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
  - kPDM_ErrorInterruptEnable

– kPDM_FIFOInterruptEnable

static inline void PDM_EnableDMA(PDM_Type *base, bool enable)

Enables/disables the PDM DMA requests.

Parameters

- base – PDM base pointer
- enable – True means enable DMA, false means disable DMA.

static inline uint32_t PDM_GetDataRegisterAddress(PDM_Type *base, uint32_t channel)

Gets the PDM data register address.

This API is used to provide a transfer address for the PDM DMA transfer configuration.

Parameters

- base – PDM base pointer.
- channel – Which data channel used.

Returns

data register address.

void PDM_ReadFifo(PDM_Type *base, uint32_t startChannel, uint32_t channelNums, void *buffer, size_t size, uint32_t dataWidth)

PDM read fifo.

Note: : This function support 16 bit only for IP version that only supports 16bit.

Parameters

- base – PDM base pointer.
- startChannel – start channel number.
- channelNums – total enabled channelnums.
- buffer – received buffer address.
- size – number of samples to read.
- dataWidth – sample width.

void PDM_SetChannelGain(PDM_Type *base, uint32_t channel, *pdm_df_output_gain_t* gain)

Set the PDM channel gain.

Please note for different quality mode, the valid gain value is different, reference RM for detail.

Parameters

- base – PDM base pointer.
- channel – PDM channel index.
- gain – channel gain, the register gain value range is 0 - 15.

void PDM_TransferCreateHandle(PDM_Type *base, *pdm_handle_t* *handle, *pdm_transfer_callback_t* callback, void *userData)

Initializes the PDM handle.

This function initializes the handle for the PDM transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – PDM base pointer.

- handle – PDM handle pointer.
- callback – Pointer to the user callback function.
- userData – User parameter passed to the callback function.

status_t PDM_TransferSetChannelConfig(PDM_Type *base, *pdm_handle_t* *handle, uint32_t channel, const *pdm_channel_config_t* *config, uint32_t format)

PDM set channel transfer config.

Parameters

- base – PDM base pointer.
- handle – PDM handle pointer.
- channel – PDM channel.
- config – channel config.
- format – data format, support data width configurations,_pdm_data_width.

Return values

kStatus_PDM_ChannelConfig_Failed – or kStatus_Success.

status_t PDM_TransferReceiveNonBlocking(PDM_Type *base, *pdm_handle_t* *handle, *pdm_transfer_t* *xfer)

Performs an interrupt non-blocking receive transfer on PDM.

Note: This API returns immediately after the transfer initiates. Call the PDM_RxGetTransferStatusIRQ to poll the transfer status and check whether the transfer is finished. If the return status is not kStatus_PDM_Busy, the transfer is finished.

Parameters

- base – PDM base pointer
- handle – Pointer to the pdm_handle_t structure which stores the transfer state.
- xfer – Pointer to the pdm_transfer_t structure.

Return values

- kStatus_Success – Successfully started the data receive.
- kStatus_PDM_Busy – Previous receive still not finished.

void PDM_TransferAbortReceive(PDM_Type *base, *pdm_handle_t* *handle)

Aborts the current IRQ receive.

Note: This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – PDM base pointer
- handle – Pointer to the pdm_handle_t structure which stores the transfer state.

void PDM_TransferHandleIRQ(PDM_Type *base, *pdm_handle_t* *handle)

Tx interrupt handler.

Parameters

- base – PDM base pointer.
- handle – Pointer to the pdm_handle_t structure.

FSL_PDM_DRIVER_VERSION

Version 2.9.4

PDM return status.

Values:

enumerator kStatus_PDM_Busy

PDM is busy.

enumerator kStatus_PDM_CLK_LOW

PDM clock frequency low

enumerator kStatus_PDM_FIFO_ERROR

PDM FIFO underrun or overflow

enumerator kStatus_PDM_QueueFull

PDM FIFO underrun or overflow

enumerator kStatus_PDM_Idle

PDM is idle

enumerator kStatus_PDM_Output_ERROR

PDM is output error

enumerator kStatus_PDM_ChannelConfig_Failed

PDM channel config failed

enum _pdm_interrupt_enable

The PDM interrupt enable flag.

Values:

enumerator kPDM_ErrorInterruptEnable

PDM channel error interrupt enable.

enumerator kPDM_FIFOInterruptEnable

PDM channel FIFO interrupt

enum _pdm_internal_status

The PDM status.

Values:

enumerator kPDM_StatusDfBusyFlag

Decimation filter is busy processing data

enumerator kPDM_StatusFrequencyLow

Mic app clock frequency not high enough

enumerator kPDM_StatusCh0FifoDataAvaliable

channel 0 fifo data reached watermark level

enumerator kPDM_StatusCh1FifoDataAvaliable

channel 1 fifo data reached watermark level

enumerator kPDM_StatusCh2FifoDataAvaliable
channel 2 fifo data reached watermark level

enumerator kPDM_StatusCh3FifoDataAvaliable
channel 3 fifo data reached watermark level

enum _pdm_channel_enable_mask
PDM channel enable mask.

Values:

enumerator kPDM_EnableChannel0
channgel 0 enable mask

enumerator kPDM_EnableChannel1
channgel 1 enable mask

enumerator kPDM_EnableChannel2
channgel 2 enable mask

enumerator kPDM_EnableChannel3
channgel 3 enable mask

enumerator kPDM_EnableChannelAll

enum _pdm_fifo_status
The PDM fifo status.

Values:

enumerator kPDM_FifoStatusUnderflowCh0
channel0 fifo status underflow

enumerator kPDM_FifoStatusUnderflowCh1
channel1 fifo status underflow

enumerator kPDM_FifoStatusUnderflowCh2
channel2 fifo status underflow

enumerator kPDM_FifoStatusUnderflowCh3
channel3 fifo status underflow

enumerator kPDM_FifoStatusOverflowCh0
channel0 fifo status overflow

enumerator kPDM_FifoStatusOverflowCh1
channel1 fifo status overflow

enumerator kPDM_FifoStatusOverflowCh2
channel2 fifo status overflow

enumerator kPDM_FifoStatusOverflowCh3
channel3 fifo status overflow

enum _pdm_range_status
The PDM output status.

Values:

enumerator kPDM_RangeStatusUnderFlowCh0
channel0 range status underflow

enumerator kPDM_RangeStatusUnderFlowCh1
channel1 range status underflow

enumerator kPDM_RangeStatusUnderFlowCh2
channel2 range status underflow

enumerator kPDM_RangeStatusUnderFlowCh3
channel3 range status underflow

enumerator kPDM_RangeStatusOverFlowCh0
channel0 range status overflow

enumerator kPDM_RangeStatusOverFlowCh1
channel1 range status overflow

enumerator kPDM_RangeStatusOverFlowCh2
channel2 range status overflow

enumerator kPDM_RangeStatusOverFlowCh3
channel3 range status overflow

enum _pdm_dc_remover
PDM DC remover configurations.

Values:

enumerator kPDM_DcRemoverCutOff20Hz
DC remover cut off 20HZ

enumerator kPDM_DcRemoverCutOff13Hz
DC remover cut off 13.3HZ

enumerator kPDM_DcRemoverCutOff40Hz
DC remover cut off 40HZ

enumerator kPDM_DcRemoverBypass
DC remover bypass

enum _pdm_df_quality_mode
PDM decimation filter quality mode.

Values:

enumerator kPDM_QualityModeMedium
quality mode memdium

enumerator kPDM_QualityModeHigh
quality mode high

enumerator kPDM_QualityModeLow
quality mode low

enumerator kPDM_QualityModeVeryLow0
quality mode very low0

enumerator kPDM_QualityModeVeryLow1
quality mode very low1

enumerator kPDM_QualityModeVeryLow2
quality mode very low2

enum _pdm_qulaity_mode_k_factor
PDM quality mode K factor.

Values:

enumerator kPDM_QualityModeHighKFactor
high quality mode K factor = 1 / 2

enumerator kPDM_QualityModeMediumKFactor
medium/very low0 quality mode K factor = 2 / 2

enumerator kPDM_QualityModeLowKFactor
low/very low1 quality mode K factor = 4 / 2

enumerator kPDM_QualityModeVeryLow2KFactor
very low2 quality mode K factor = 8 / 2

enum _pdm_df_output_gain
PDM decimation filter output gain.

Values:

enumerator kPDM_DfOutputGain0
Decimation filter output gain 0

enumerator kPDM_DfOutputGain1
Decimation filter output gain 1

enumerator kPDM_DfOutputGain2
Decimation filter output gain 2

enumerator kPDM_DfOutputGain3
Decimation filter output gain 3

enumerator kPDM_DfOutputGain4
Decimation filter output gain 4

enumerator kPDM_DfOutputGain5
Decimation filter output gain 5

enumerator kPDM_DfOutputGain6
Decimation filter output gain 6

enumerator kPDM_DfOutputGain7
Decimation filter output gain 7

enumerator kPDM_DfOutputGain8
Decimation filter output gain 8

enumerator kPDM_DfOutputGain9
Decimation filter output gain 9

enumerator kPDM_DfOutputGain10
Decimation filter output gain 10

enumerator kPDM_DfOutputGain11
Decimation filter output gain 11

enumerator kPDM_DfOutputGain12
Decimation filter output gain 12

enumerator kPDM_DfOutputGain13
Decimation filter output gain 13

enumerator kPDM_DfOutputGain14
Decimation filter output gain 14

enumerator kPDM_DfOutputGain15
Decimation filter output gain 15

enum _pdm_data_width
PDM data width.

Values:

enumerator kPDM_DataWwidth24
PDM data width 24bit

enumerator kPDM_DataWwidth32
PDM data width 32bit

typedef enum *_pdm_dc_remover* pdm_dc_remover_t
PDM DC remover configurations.

typedef enum *_pdm_df_quality_mode* pdm_df_quality_mode_t
PDM decimation filter quality mode.

typedef enum *_pdm_df_output_gain* pdm_df_output_gain_t
PDM decimation filter output gain.

typedef struct *_pdm_channel_config* pdm_channel_config_t
PDM channel configurations.

typedef struct *_pdm_config* pdm_config_t
PDM user configuration structure.

typedef struct *_pdm_transfer* pdm_transfer_t
PDM SDMA transfer structure.

typedef struct *_pdm_handle* pdm_handle_t
PDM handle.

typedef void (*pdm_transfer_callback_t)(PDM_Type *base, *pdm_handle_t* *handle, *status_t* status, void *userData)
PDM transfer callback prototype.

PDM_XFER_QUEUE_SIZE
PDM XFER QUEUE SIZE.

struct _pdm_channel_config
#include <fsl_pdm.h> PDM channel configurations.

Public Members

pdm_dc_remover_t outputCutOffFreq
PDM output DC remover cut off frequency

pdm_df_output_gain_t gain
Decimation Filter Output Gain

struct _pdm_config
#include <fsl_pdm.h> PDM user configuration structure.

Public Members

bool enableDoze
This module will enter disable/low leakage mode if DOZEN is active with ipg_doze is asserted

bool enableFilterBypass
: Switchable bypass path for the decimation filter

uint8_t fifoWatermark
: Watermark value for FIFO

pdm_df_quality_mode_t qualityMode
: Quality mode

uint8_t cicOverSampleRate
: CIC filter over sampling rate

struct __pdm__transfer
: *#include <fsl_pdm.h>* PDM SDMA transfer structure.

Public Members

volatile uint8_t *data
: Data start address to transfer.

volatile size_t dataSize
: Total Transfer bytes size.

struct __pdm__handle
: *#include <fsl_pdm.h>* PDM handle structure.

Public Members

uint32_t state
: Transfer status

pdm_transfer_callback_t callback
: Callback function called at transfer event

void *userData
: Callback parameter passed to callback function

pdm_transfer_t pdmQueue[(4U)]
: Transfer queue storing queued transfer

size_t transferSize[(4U)]
: Data bytes need to transfer

volatile uint8_t queueUser
: Index for user to queue transfer

volatile uint8_t queueDriver
: Index for driver to get the transfer data and size

uint32_t format
: data format

uint8_t watermark
: Watermark value

uint8_t startChannel
: end channel

uint8_t channelNums
: Enabled channel number

2.53 PDM EDMA Driver

void PDM_TransferInstallEDMATCDMemory(*pdm_edma_handle_t* *handle, void *tcdAddr, size_t tcdNum)

Install EDMA descriptor memory.

Parameters

- handle – Pointer to EDMA channel transfer handle.
- tcdAddr – EDMA head descriptor address.
- tcdNum – EDMA link descriptor address.

void PDM_TransferCreateHandleEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle, *pdm_edma_callback_t* callback, void *userData, *edma_handle_t* *dmaHandle)

Initializes the PDM Rx eDMA handle.

This function initializes the PDM slave DMA handle, which can be used for other PDM master transactional APIs. Usually, for a specified PDM instance, call this API once to get the initialized handle.

Parameters

- base – PDM base pointer.
- handle – PDM eDMA handle pointer.
- callback – Pointer to user callback function.
- userData – User parameter passed to the callback function.
- dmaHandle – eDMA handle pointer, this handle shall be static allocated by users.

void PDM_TransferSetMultiChannelInterleaveType(*pdm_edma_handle_t* *handle, *pdm_edma_multi_channel_interleave_t* multiChannelInterleaveType)

Initializes the multi PDM channel interleave type.

This function initializes the PDM DMA handle member interleaveType, it shall be called only when application would like to use type kPDM_EDMAMultiChannelInterleavePerChannelBlock, since the default interleaveType is kPDM_EDMAMultiChannelInterleavePerChannelSample always

Parameters

- handle – PDM eDMA handle pointer.
- multiChannelInterleaveType – Multi channel interleave type.

void PDM_TransferSetChannelConfigEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle, uint32_t channel, const *pdm_channel_config_t* *config)

Configures the PDM channel.

Parameters

- base – PDM base pointer.
- handle – PDM eDMA handle pointer.
- channel – channel index.
- config – pdm channel configurations.

status_t PDM_TransferReceiveEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle, *pdm_edma_transfer_t* *xfer)

Performs a non-blocking PDM receive using eDMA.

Mcaro MCUX_SDK_PDM_EDMA_PDM_ENABLE_INTERNAL can control whether PDM is enabled internally or externally.

a. Scatter gather case: This functio support dynamic scatter gather and staic scatter gather, a. for the dynamic scatter gather case: Application should call PDM_TransferReceiveEDMA function continuously to make sure new receive request is submit before the previous one finish. b. for the static scatter gather case: Application should use the link transfer feature and make sure a loop link transfer is provided, such as:

```
pdm_edma_transfer_t pdmXfer[2] =
{
    {
    .data  = s_buffer,
    .dataSize = BUFFER_SIZE,
    .linkTransfer = &pdmXfer[1],
    },

    {
    .data  = &s_buffer[BUFFER_SIZE],
    .dataSize = BUFFER_SIZE,
    .linkTransfer = &pdmXfer[0]
    },
};
```

b. Multi channel case: This function support receive multi pdm channel data, for example, if two channel is requested,

```
PDM_TransferSetChannelConfigEDMA(DEMO_PDM, &s_pdmRxHandle_0, DEMO_PDM_
↪ENABLE_CHANNEL_0, &channelConfig);
PDM_TransferSetChannelConfigEDMA(DEMO_PDM, &s_pdmRxHandle_0, DEMO_PDM_
↪ENABLE_CHANNEL_1, &channelConfig);
PDM_TransferReceiveEDMA(DEMO_PDM, &s_pdmRxHandle_0, pdmXfer);
```

The output data will be formatted as below if handle->interleaveType =

Note: This interface returns immediately after the transfer initiates. Call the PDM_GetReceiveRemainingBytes to poll the transfer status and check whether the PDM transfer is finished.

---

void PDM_TransferTerminateReceiveEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle)

Terminate all PDM receive.

This function will clear all transfer slots buffered in the pdm queue. If users only want to abort the current transfer slot, please call PDM_TransferAbortReceiveEDMA.

Parameters

- base – PDM base pointer.
- handle – PDM eDMA handle pointer.

void PDM_TransferAbortReceiveEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle)

Aborts a PDM receive using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call PDM_TransferTerminateReceiveEDMA.

Parameters

- base – PDM base pointer
- handle – PDM eDMA handle pointer.

status_t PDM_TransferGetReceiveCountEDMA(PDM_Type *base, *pdm_edma_handle_t* *handle, size_t *count)

Gets byte count received by PDM.

Parameters

- base – PDM base pointer
- handle – PDM eDMA handle pointer.
- count – Bytes count received by PDM.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

FSL_PDM_EDMA_DRIVER_VERSION

Version 2.6.5

enum _pdm_edma_multi_channel_interleave

pdm multi channel interleave type

Values:

enumerator kPDM_EDMAMultiChannelInterleavePerChannelSample

enumerator kPDM_EDMAMultiChannelInterleavePerChannelBlock

typedef struct *_pdm_edma_handle* pdm_edma_handle_t

PDM edma handler.

typedef enum *_pdm_edma_multi_channel_interleave* pdm_edma_multi_channel_interleave_t

pdm multi channel interleave type

typedef struct *_pdm_edma_transfer* pdm_edma_transfer_t

PDM edma transfer.

typedef void (*pdm_edma_callback_t)(PDM_Type *base, *pdm_edma_handle_t* *handle, *status_t* status, void *userData)

PDM eDMA transfer callback function for finish and error.

MCUX_SDK_PDM_EDMA_PDM_ENABLE_INTERNAL

the PDM enable position When calling PDM_TransferReceiveEDMA

struct _pdm_edma_transfer

#include <fsl_pdm_edma.h> PDM edma transfer.

Public Members

volatile uint8_t *data

Data start address to transfer.

volatile size_t dataSize
: Total Transfer bytes size.

struct *_pdm_edma_transfer* *linkTransfer
: linked transfer configurations

struct __pdm_edma_handle
: *#include <fsl_pdm_edma.h>* PDM DMA transfer handle, users should not touch the content of the handle.

Public Members

edma_handle_t *dmaHandle
: DMA handler for PDM send

uint8_t count
: The transfer data count in a DMA request

uint32_t receivedBytes
: total transfer count

uint32_t state
: Internal state for PDM eDMA transfer

pdm_edma_callback_t callback
: Callback for users while transfer finish or error occurs

bool isLoopTransfer
: loop transfer

void *userData
: User callback parameter

edma_tcd_t *tcd
: TCD pool for eDMA transfer.

uint32_t tcdNum
: TCD number

uint32_t tcdUser
: Index for user to queue transfer.

uint32_t tcdDriver
: Index for driver to get the transfer data and size

volatile uint32_t tcdUsedNum
: Index for user to queue transfer.

pdm_edma_multi_channel_interleave_t interleaveType
: multi channel transfer interleave type

uint8_t endChannel
: The last enabled channel

uint8_t channelNums
: total channel numbers

2.54 POWERQUAD: PowerQuad hardware accelerator

void PQ_GetDefaultConfig(*pq_config_t* *config)

Get default configuration.

This function initializes the POWERQUAD configuration structure to a default value. FORMAT register field definitions Bits[15:8] scaler (for scaled 'q31' formats) Bits[5:4] external format. 00b=q15, 01b=q31, 10b=float Bits[1:0] internal format. 00b=q15, 01b=q31, 10b=float POWERQUAD->INAFORMAT = (config->inputAPrescale « 8U) | (config->inputAFormat « 4U) | config->machineFormat

For all Powerquad operations internal format must be float (with the only exception being the FFT related functions, ie FFT/IFFT/DCT/IDCT which must be set to q31). The default values are: config->inputAFormat = kPQ_Float; config->inputAPrescale = 0; config->inputBFormat = kPQ_Float; config->inputBPrescale = 0; config->outputFormat = kPQ_Float; config->outputPrescale = 0; config->tmpFormat = kPQ_Float; config->tmpPrescale = 0; config->machineFormat = kPQ_Float; config->tmpBase = 0xE0000000;

Parameters

- config – Pointer to "pq_config_t" structure.

void PQ_SetConfig(POWERQUAD_Type *base, const *pq_config_t* *config)

Set configuration with format/prescale.

Parameters

- base – POWERQUAD peripheral base address
- config – Pointer to "pq_config_t" structure.

static inline void PQ_SetCoprocessorScaler(POWERQUAD_Type *base, const *pq_prescale_t* *prescale)

set coprocessor scaler for coprocessor instructions, this function is used to set output saturation and scaleing for input/output.

Parameters

- base – POWERQUAD peripheral base address
- prescale – Pointer to "pq_prescale_t" structure.

void PQ_Init(POWERQUAD_Type *base)

Initializes the POWERQUAD module.

Parameters

- base – POWERQUAD peripheral base address.

void PQ_Deinit(POWERQUAD_Type *base)

De-initializes the POWERQUAD module.

Parameters

- base – POWERQUAD peripheral base address.

void PQ_SetFormat(POWERQUAD_Type *base, *pq_computationengine_t* engine, *pq_format_t* format)

Set format for non-coprecessor instructions.

Parameters

- base – POWERQUAD peripheral base address
- engine – Computation engine
- format – Data format

static inline void PQ_WaitDone(POWERQUAD_Type *base)

Wait for the completion.

Parameters

- base – POWERQUAD peripheral base address

static inline void PQ_LnF32(float *pSrc, float *pDst)

Processing function for the floating-point natural log.

Parameters

- *pSrc – points to the block of input data. The range of the input value is (0 +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_InvF32(float *pSrc, float *pDst)

Processing function for the floating-point reciprocal.

Parameters

- *pSrc – points to the block of input data. The range of the input value is non-zero.
- *pDst – points to the block of output data

static inline void PQ_SqrtF32(float *pSrc, float *pDst)

Processing function for the floating-point square-root.

Parameters

- *pSrc – points to the block of input data. The range of the input value is [0 +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_InvSqrtF32(float *pSrc, float *pDst)

Processing function for the floating-point inverse square-root.

Parameters

- *pSrc – points to the block of input data. The range of the input value is (0 +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_EtoxF32(float *pSrc, float *pDst)

Processing function for the floating-point natural exponent.

Parameters

- *pSrc – points to the block of input data. The range of the input value is (-INFINITY +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_EtonxF32(float *pSrc, float *pDst)

Processing function for the floating-point natural exponent with negative parameter.

Parameters

- *pSrc – points to the block of input data. The range of the input value is (-INFINITY +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_SinF32(float *pSrc, float *pDst)

Processing function for the floating-point sine.

Parameters

- *pSrc – points to the block of input data. The input value is in radians, the range is (-INFINITY +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_CosF32(float *pSrc, float *pDst)

Processing function for the floating-point cosine.

Parameters

- *pSrc – points to the block of input data. The input value is in radians, the range is (-INFINITY +INFINITY).
- *pDst – points to the block of output data

static inline void PQ_BiquadF32(float *pSrc, float *pDst)

Processing function for the floating-point biquad.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data

static inline void PQ_DivF32(float *x1, float *x2, float *pDst)

Processing function for the floating-point division.

Get x1 / x2.

Parameters

- x1 – x1
- x2 – x2
- *pDst – points to the block of output data

static inline void PQ_Biquad1F32(float *pSrc, float *pDst)

Processing function for the floating-point biquad.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data

static inline int32_t PQ_LnFixed(int32_t val)

Processing function for the fixed natural log.

Parameters

- val – value to be calculated. The range of the input value is (0 +INFINITY).

Returns

returns ln(val).

static inline int32_t PQ_InvFixed(int32_t val)

Processing function for the fixed reciprocal.

Parameters

- val – value to be calculated. The range of the input value is non-zero.

Returns

returns inv(val).

static inline uint32_t PQ_SqrtFixed(uint32_t val)

Processing function for the fixed square-root.

Parameters

- val – value to be calculated. The range of the input value is [0 +INFINITY).

Returns

returns sqrt(val).

static inline int32_t PQ_InvSqrtFixed(int32_t val)

Processing function for the fixed inverse square-root.

Parameters

- val – value to be calculated. The range of the input value is (0 +INFINITY).

Returns

returns 1/sqrt(val).

static inline int32_t PQ_EtoxFixed(int32_t val)

Processing function for the Fixed natural exponent.

Parameters

- val – value to be calculated. The range of the input value is (-INFINITY +INFINITY).

Returns

returns etox^(val).

static inline int32_t PQ_EtonxFixed(int32_t val)

Processing function for the fixed natural exponent with negative parameter.

Parameters

- val – value to be calculated. The range of the input value is (-INFINITY +INFINITY).

Returns

returns etonx^(val).

static inline int32_t PQ_SinQ31(int32_t val)

Processing function for the fixed sine.

Parameters

- val – value to be calculated. The input value is [-1, 1] in Q31 format, which means [-pi, pi].

Returns

returns sin(val).

static inline int16_t PQ_SinQ15(int16_t val)

Processing function for the fixed sine.

Parameters

- val – value to be calculated. The input value is [-1, 1] in Q15 format, which means [-pi, pi].

Returns

returns sin(val).

static inline int32_t PQ_CosQ31(int32_t val)

Processing function for the fixed cosine.

Parameters

- val – value to be calculated. The input value is [-1, 1] in Q31 format, which means [-pi, pi].

Returns
returns cos(val).

static inline int16_t PQ_CosQ15(int16_t val)

Processing function for the fixed sine.

Parameters

- val – value to be calculated. The input value is [-1, 1] in Q15 format, which means [-pi, pi].

Returns
returns sin(val).

static inline int32_t PQ_BiquadFixed(int32_t val)

Processing function for the fixed biquad.

Parameters

- val – value to be calculated

Returns
returns biquad(val).

void PQ_VectorLnF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised natural log.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised reciprocal.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSqrtF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvSqrtF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised inverse square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtoxF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised natural exponent.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtonxF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised natural exponent with negative parameter.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSinF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised sine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorCosF32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised cosine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorLnFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the Q31 vectorised natural log.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the Q31 vectorised reciprocal.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSqrtFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvSqrtFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised inverse square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtoxFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised natural exponent.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtonxFixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised natural exponent with negative parameter.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSinQ15(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the Q15 vectorised sine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorCosQ15(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the Q15 vectorised cosine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSinQ31(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the Q31 vectorised sine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorCosQ31(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the Q31 vectorised cosine.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorLnFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised natural log.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised reciprocal.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorSqrtFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorInvSqrtFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised inverse square-root.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtoxFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised natural exponent.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorEtonxFixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised natural exponent with negative parameter.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block of input data.

void PQ_VectorBiquadDf2F32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data.

void PQ_VectorBiquadDf2Fixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data

void PQ_VectorBiquadDf2Fixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data

void PQ_VectorBiquadCascadeDf2F32(float *pSrc, float *pDst, int32_t length)

Processing function for the floating-point vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data

void PQ_VectorBiquadCascadeDf2Fixed32(int32_t *pSrc, int32_t *pDst, int32_t length)

Processing function for the 32-bit integer vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data

void PQ_VectorBiquadCascadeDf2Fixed16(int16_t *pSrc, int16_t *pDst, int32_t length)

Processing function for the 16-bit integer vectorised biquad direct form II.

Parameters

- *pSrc – points to the block of input data
- *pDst – points to the block of output data
- length – the block size of input data

int32_t PQ_ArctanFixed(POWERQUAD_Type *base, int32_t x, int32_t y, *pq_cordic_iter_t* iteration)

Processing function for the fixed inverse trigonometric.

Get the inverse tangent, the behavior is like c function atan.

Note: The sum of x and y should not exceed the range of int32_t.

Note: Larger input number gets higher output accuracy, for example the arctan(0.5), the result of PQ_ArctanFixed(POWERQUAD, 100000, 200000, kPQ_Iteration_24) is more accurate than PQ_ArctanFixed(POWERQUAD, 1, 2, kPQ_Iteration_24).

Parameters

- base – POWERQUAD peripheral base address
- x – value of opposite
- y – value of adjacent
- iteration – iteration times

Returns

The return value is in the range of -2^26 to 2^26, which means -pi/2 to pi/2.

int32_t PQ_ArctanhFixed(POWERQUAD_Type *base, int32_t x, int32_t y, *pq_cordic_iter_t* iteration)

Processing function for the fixed inverse trigonometric.

Note: The sum of x and y should not exceed the range of int32_t.

Note: Larger input number gets higher output accuracy, for example the arctanh(0.5), the result of PQ_ArctanhFixed(POWERQUAD, 100000, 200000, kPQ_Iteration_24) is more accurate than PQ_ArctanhFixed(POWERQUAD, 1, 2, kPQ_Iteration_24).

Parameters

- base – POWERQUAD peripheral base address
- x – value of opposite
- y – value of adjacent
- iteration – iteration times

Returns

The return value is radians, 2^27 means pi. The range is -1.118 to 1.118 radians.

int32_t PQ_Arctan2Fixed(POWERQUAD_Type *base, int32_t x, int32_t y, *pq_cordic_iter_t* iteration)

Processing function for the fixed inverse trigonometric.

Get the inverse tangent, it calculates the angle in radians for the quadrant. The behavior is like c function atan2.

Note: The sum of x and y should not exceed the range of int32_t.

Note: Larger input number gets higher output accuracy, for example the arctan(0.5), the result of PQ_Arctan2Fixed(POWERQUAD, 100000, 200000, kPQ_Iteration_24) is more accurate than PQ_Arctan2Fixed(POWERQUAD, 1, 2, kPQ_Iteration_24).

Parameters

- base – POWERQUAD peripheral base address
- x – value of opposite
- y – value of adjacent
- iteration – iteration times

Returns
The return value is in the range of -2^27 to 2^27, which means -pi to pi.

static inline int32_t PQ_Biquad1Fixed(int32_t val)

Processing function for the fixed biquad.

Parameters

- val – value to be calculated

Returns
returns biquad(val).

void PQ_TransformCFFT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the complex FFT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_TransformRFFT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the real FFT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_TransformIFFT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the inverse complex FFT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_TransformCDCT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the complex DCT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_TransformRDCT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the real DCT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_TransformIDCT(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the inverse complex DCT.

Parameters

- base – POWERQUAD peripheral base address
- length – number of input samples
- pData – input data
- pResult – output data.

void PQ_BiquadBackUpInternalState(POWERQUAD_Type *base, int32_t biquad_num, *pq_biquad_state_t* *state)

Processing function for backup biquad context.

Parameters

- base – POWERQUAD peripheral base address
- biquad_num – biquad side
- state – point to states.

void PQ_BiquadRestoreInternalState(POWERQUAD_Type *base, int32_t biquad_num, *pq_biquad_state_t* *state)

Processing function for restore biquad context.

Parameters

- base – POWERQUAD peripheral base address
- biquad_num – biquad side
- state – point to states.

void PQ_BiquadCascadeDf2Init(*pq_biquad_cascade_df2_instance* *S, uint8_t numStages, *pq_biquad_state_t* *pState)

Initialization function for the direct form II Biquad cascade filter.

Parameters

- *S – **[inout]** points to an instance of the filter data structure.
- numStages – **[in]** number of 2nd order stages in the filter.
- *pState – **[in]** points to the state buffer.

void PQ_BiquadCascadeDf2F32(const *pq_biquad_cascade_df2_instance* *S, float *pSrc, float *pDst, uint32_t blockSize)

Processing function for the floating-point direct form II Biquad cascade filter.

Parameters

- *S – **[in]** points to an instance of the filter data structure.
- *pSrc – **[in]** points to the block of input data.
- *pDst – **[out]** points to the block of output data
- blockSize – **[in]** number of samples to process.

void PQ_BiquadCascadeDf2Fixed32(const *pq_biquad_cascade_df2_instance* *S, int32_t *pSrc, int32_t *pDst, uint32_t blockSize)

Processing function for the Q31 direct form II Biquad cascade filter.

Parameters

- *S – **[in]** points to an instance of the filter data structure.
- *pSrc – **[in]** points to the block of input data.
- *pDst – **[out]** points to the block of output data
- blockSize – **[in]** number of samples to process.

void PQ_BiquadCascadeDf2Fixed16(const *pq_biquad_cascade_df2_instance* *S, int16_t *pSrc, int16_t *pDst, uint32_t blockSize)

Processing function for the Q15 direct form II Biquad cascade filter.

Parameters

- *S – **[in]** points to an instance of the filter data structure.
- *pSrc – **[in]** points to the block of input data.
- *pDst – **[out]** points to the block of output data
- blockSize – **[in]** number of samples to process.

void PQ_FIR(POWERQUAD_Type *base, const void *pAData, uint16_t ALength, const void *pBData, uint16_t BLength, void *pResult, uint32_t opType)

Processing function for the FIR.

Parameters

- base – POWERQUAD peripheral base address
- pAData – the first input sequence
- ALength – number of the first input sequence
- pBData – the second input sequence
- BLength – number of the second input sequence
- pResult – array for the output data
- opType – operation type, could be PQ_FIR_FIR, PQ_FIR_CONVOLUTION, PQ_FIR_CORRELATION.

void PQ_FIRIncrement(POWERQUAD_Type *base, uint16_t ALength, uint16_t BLength, int32_t xOffset)

Processing function for the incremental FIR. This function can be used after pq_fir() for incremental FIR operation when new x data are available.

Parameters

- base – POWERQUAD peripheral base address
- ALength – number of input samples
- BLength – number of taps
- xOffset – offset for number of input samples

void PQ_MatrixAddition(POWERQUAD_Type *base, uint32_t length, void *pAData, void *pBData, void *pResult)

Processing function for the matrix addition.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- pAData – input matrix A
- pBData – input matrix B
- pResult – array for the output data.

void PQ_MatrixSubtraction(POWERQUAD_Type *base, uint32_t length, void *pAData, void *pBData, void *pResult)

Processing function for the matrix subtraction.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- pAData – input matrix A
- pBData – input matrix B
- pResult – array for the output data.

void PQ_MatrixMultiplication(POWERQUAD_Type *base, uint32_t length, void *pAData, void *pBData, void *pResult)

Processing function for the matrix multiplication.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- pAData – input matrix A
- pBData – input matrix B

- pResult – array for the output data.

void PQ_MatrixProduct(POWERQUAD_Type *base, uint32_t length, void *pAData, void *pBData, void *pResult)

Processing function for the matrix product.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- pAData – input matrix A
- pBData – input matrix B
- pResult – array for the output data.

void PQ_VectorDotProduct(POWERQUAD_Type *base, uint32_t length, void *pAData, void *pBData, void *pResult)

Processing function for the vector dot product.

Parameters

- base – POWERQUAD peripheral base address
- length – length of vector
- pAData – input vector A
- pBData – input vector B
- pResult – array for the output data.

void PQ_MatrixInversion(POWERQUAD_Type *base, uint32_t length, void *pData, void *pTmpData, void *pResult)

Processing function for the matrix inverse.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- pData – input matrix
- pTmpData – input temporary matrix, pTmpData length not less than pData lenght and 1024 words is sufficient for the largest supported matrix.
- pResult – array for the output data, round down for fixed point.

void PQ_MatrixTranspose(POWERQUAD_Type *base, uint32_t length, void *pData, void *pResult)

Processing function for the matrix transpose.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.

- pData – input matrix
- pResult – array for the output data.

void PQ_MatrixScale(POWERQUAD_Type *base, uint32_t length, float misc, const void *pData, void *pResult)

Processing function for the matrix scale.

Parameters

- base – POWERQUAD peripheral base address
- length – rows and cols for matrix. LENGTH register configuration: LENGTH[23:16] = M2 cols LENGTH[15:8] = M1 cols LENGTH[7:0] = M1 rows This could be constructed using macro POWERQUAD_MAKE_MATRIX_LEN.
- misc – scaling parameters
- pData – input matrix
- pResult – array for the output data.

FSL_POWERQUAD_DRIVER_VERSION

Version.

enum pq_computationengine_t

powerquad computation engine

Values:

enumerator kPQ_CP_PQ

Math engine.

enumerator kPQ_CP_MTX

Matrix engine.

enumerator kPQ_CP_FFT

FFT engine.

enumerator kPQ_CP_FIR

FIR engine.

enumerator kPQ_CP_CORDIC

CORDIC engine.

enum pq_format_t

powerquad data structure format type

Values:

enumerator kPQ_16Bit

Int16 Fixed point.

enumerator kPQ_32Bit

Int32 Fixed point.

enumerator kPQ_Float

Float point.

enum pq_cordic_iter_t

CORDIC iteration.

Values:

enumerator kPQ_Iteration_8
Iterate 8 times.

enumerator kPQ_Iteration_16
Iterate 16 times.

enumerator kPQ_Iteration_24
Iterate 24 times.

typedef struct *_pq_biquad_param* pq_biquad_param_t
Struct to save biquad parameters.

typedef struct *_pq_biquad_state* pq_biquad_state_t
Struct to save biquad state.

typedef union *_pq_float* pq_float_t
Conversion between integer and float type.

PQ_VectorBiqaudDf2F32

PQ_VectorBiqaudDf2Fixed32

PQ_VectorBiqaudDf2Fixed16

PQ_VectorBiqaudCascadeDf2F32

PQ_VectorBiqaudCascadeDf2Fixed32

PQ_VectorBiqaudCascadeDf2Fixed16

PQ_Vector8BiqaudDf2CascadeF32

PQ_Vector8BiqaudDf2CascadeFixed32

PQ_Vector8BiqaudDf2CascadeFixed16

PQ_FLOAT32

PQ_FIXEDPT

CP_PQ

CP_MTX

CP_FFT

CP_FIR

CP_CORDIC

PQ_TRANS

PQ_TRIG

PQ_BIQUAD

PQ_TRANS_FIXED

PQ_TRIG_FIXED

PQ_BIQUAD_FIXED

PQ_INV

PQ_LN

PQ_SQRT

PQ_INVSQRT

PQ_ETOX

PQ_ETONX

PQ_DIV

PQ_SIN

PQ_COS

PQ_BIQ0_CALC

PQ_BIQ1_CALC

PQ_COMP0_ONLY

PQ_COMP1_ONLY

CORDIC_ITER(**x**)

CORDIC_MIU(**x**)

CORDIC_T(**x**)

CORDIC_ARCTAN

CORDIC_ARCTANH

INST_BUSY

PQ_ERRSTAT_OVERFLOW

PQ_ERRSTAT_NAN

PQ_ERRSTAT_FIXEDOVERFLOW

PQ_ERRSTAT_UNDERFLOW

PQ_TRANS_CFFT

PQ_TRANS_IFFT

PQ_TRANS_CDCT

PQ_TRANS_IDCT

PQ_TRANS_RFFT

PQ_TRANS_RDCT

PQ_MTX_SCALE

PQ_MTX_MULT

PQ_MTX_ADD

PQ_MTX_INV

PQ_MTX_PROD

PQ_MTX_SUB

PQ_VEC_DOTP

PQ_MTX_TRAN

PQ_FIR_FIR

PQ_FIR_CONVOLUTION

PQ_FIR_CORRELATION

PQ_FIR_INCREMENTAL

__pq_ln0(**x**)

__pq_inv0(**x**)

__pq_sqrt0(**x**)

__pq_invsqrt0(**x**)

__pq_etox0(**x**)

__pq_etonx0(**x**)

__pq_sin0(**x**)

__pq_cos0(**x**)

__pq_biquad0(**x**)

__pq_ln_fx0(**x**)

__pq_inv_fx0(**x**)

__pq_sqrt_fx0(**x**)

__pq_invsqrt_fx0(**x**)

__pq_etox_fx0(**x**)

__pq_etonx_fx0(**x**)

__pq_sin_fx0(**x**)

__pq_cos_fx0(**x**)

__pq_biquad0_fx(**x**)

__pq_div0(**x**)

__pq_div1(**x**)

__pq_ln1(**x**)

__pq_inv1(**x**)

__pq_sqrt1(**x**)

__pq_invsqrt1(**x**)

__pq_etox1(**x**)

__pq_etonx1(**x**)

__pq_sin1(**x**)

__pq__cos1(**x**)

__pq__biquad1(**x**)

__pq__ln__fx1(**x**)

__pq__inv__fx1(**x**)

__pq__sqrt__fx1(**x**)

__pq__invsqrt__fx1(**x**)

__pq__etox__fx1(**x**)

__pq__etonx__fx1(**x**)

__pq__sin__fx1(**x**)

__pq__cos__fx1(**x**)

__pq__biquad1__fx(**x**)

__pq__readMult0()

__pq__readAdd0()

__pq__readMult1()

__pq__readAdd1()

__pq__readMult0__fx()

__pq__readAdd0__fx()

__pq__readMult1__fx()

__pq__readAdd1__fx()

PQ__LN__INF
: Parameter used for vector ln(x)

PQ__INV__INF
: Parameter used for vector 1/x

PQ__SQRT__INF
: Parameter used for vector sqrt(x)

PQ__ISQRT__INF
: Parameter used for vector 1/sqrt(x)

PQ__ETOX__INF
: Parameter used for vector e^x

PQ__ETONX__INF
: Parameter used for vector e^(-x)

PQ__SIN__INF
: Parameter used for vector sin(x)

PQ__COS__INF
: Parameter used for vector cos(x)

PQ__RUN__OPCODE__R3__R2(BATCH_OPCODE, BATCH_MACHINE)

PQ__RUN__OPCODE__R5__R4(BATCH_OPCODE, BATCH_MACHINE)

PQ_RUN_OPCODE_R7_R6(BATCH_OPCODE, BATCH_MACHINE)

PQ_Vector8_FP(middle, last, BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

PQ_RUN_OPCODE_R2_R3(BATCH_OPCODE, BATCH_MACHINE)

PQ_RUN_OPCODE_R4_R5(BATCH_OPCODE, BATCH_MACHINE)

PQ_RUN_OPCODE_R6_R7(BATCH_OPCODE, BATCH_MACHINE)

PQ_Vector8_FX(middle, last, BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

PQ_Initiate_Vector_Func(pSrc, pDst)

Start 32-bit data vector calculation.

Start the vector calculation, the input data could be float, int32_t or Q31.

Parameters

- pSrc – Pointer to the source data.
- pDst – Pointer to the destination data.

PQ_End_Vector_Func()

End vector calculation.

This function should be called after vector calculation.

PQ_StartVector(PSRC, PDST, LENGTH)

Start 32-bit data vector calculation.

Start the vector calculation, the input data could be float, int32_t or Q31.

Parameters

- PSRC – Pointer to the source data.
- PDST – Pointer to the destination data.
- LENGTH – Number of the data, must be multiple of 8.

PQ_StartVectorFixed16(PSRC, PDST, LENGTH)

Start 16-bit data vector calculation.

Start the vector calculation, the input data could be int16_t. This function should be use with PQ_Vector8Fixed16.

Parameters

- PSRC – Pointer to the source data.
- PDST – Pointer to the destination data.
- LENGTH – Number of the data, must be multiple of 8.

PQ_StartVectorQ15(PSRC, PDST, LENGTH)

Start Q15-bit data vector calculation.

Start the vector calculation, the input data could be Q15. This function should be use with PQ_Vector8Q15. This function is dedicate for SinQ15/CosQ15 vector calculation. Because PowerQuad only supports Q31 Sin/Cos fixed function, so the input Q15 data is left shift 16 bits first, after Q31 calculation, the output data is right shift 16 bits.

Parameters

- PSRC – Pointer to the source data.
- PDST – Pointer to the destination data.
- LENGTH – Number of the data, must be multiple of 8.

PQ_EndVector()

End vector calculation.

This function should be called after vector calculation.

PQ_Vector8F32(BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

Float data vector calculation.

Float data vector calculation, the input data should be float. The parameter could be PQ_LN_INF, PQ_INV_INF, PQ_SQRT_INF, PQ_ISQRT_INF, PQ_ETOX_INF, PQ_ETONX_INF. For example, to calculate sqrt of a vector, use like this:

```
#define VECTOR_LEN 8
float input[VECTOR_LEN] = {1.0, 2.0, 3.0, 4.0, 5.0, 6.0, 7.0, 8.0};
float output[VECTOR_LEN];

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8F32(PQ_SQRT_INF);
PQ_EndVector();
```

PQ_Vector8Fixed32(BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

Fixed 32bits data vector calculation.

Float data vector calculation, the input data should be 32-bit integer. The parameter could be PQ_LN_INF, PQ_INV_INF, PQ_SQRT_INF, PQ_ISQRT_INF, PQ_ETOX_INF, PQ_ETONX_INF. PQ_SIN_INF, PQ_COS_INF. When this function is used for sin/cos calculation, the input data should be in the format Q1.31. For example, to calculate sqrt of a vector, use like this:

```
#define VECTOR_LEN 8
int32_t input[VECTOR_LEN] = {1, 4, 9, 16, 25, 36, 49, 64};
int32_t output[VECTOR_LEN];

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8F32(PQ_SQRT_INF);
PQ_EndVector();
```

PQ_Vector8Fixed16(BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

Fixed 32bits data vector calculation.

Float data vector calculation, the input data should be 16-bit integer. The parameter could be PQ_LN_INF, PQ_INV_INF, PQ_SQRT_INF, PQ_ISQRT_INF, PQ_ETOX_INF, PQ_ETONX_INF. For example, to calculate sqrt of a vector, use like this:

```
#define VECTOR_LEN 8
int16_t input[VECTOR_LEN] = {1, 4, 9, 16, 25, 36, 49, 64};
int16_t output[VECTOR_LEN];

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8F32(PQ_SQRT_INF);
PQ_EndVector();
```

PQ_Vector8Q15(BATCH_OPCODE, DOUBLE_READ_ADDERS, BATCH_MACHINE)

Q15 data vector calculation.

Q15 data vector calculation, this function should only be used for sin/cos Q15 calculation, and the coprocessor output prescaler must be set to 31 before this function. This function loads Q15 data and left shift 16 bits, calculate and right shift 16 bits, then stores to the output array. The input range -1 to 1 means -pi to pi. For example, to calculate sin of a vector, use like this:

```
#define VECTOR_LEN 8
int16_t input[VECTOR_LEN] = {...}
```

(continues on next page)

(continued from previous page)

```
int16_t output[VECTOR_LEN];
const pq_prescale_t prescale =
{
    .inputPrescale = 0,
    .outputPrescale = 31,
    .outputSaturate = 0
};

PQ_SetCoprocessorScaler(POWERQUAD, const pq_prescale_t *prescale);

PQ_StartVectorQ15(pSrc, pDst, length);
PQ_Vector8Q15(PQ_SQRT_INF);
PQ_EndVector();
```

PQ_DF2_Vector8_FP(middle, last)

Float data vector biquad direct form II calculation.

Biquad filter, the input and output data are float data. Biquad side 0 is used. Example:

```
#define VECTOR_LEN 16
float input[VECTOR_LEN] = {1024.0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0};
float output[VECTOR_LEN];
pq_biquad_state_t state =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state);

PQ_Initiate_Vector_Func(pSrc,pDst);
PQ_DF2_Vector8_FP(false,false);
PQ_DF2_Vector8_FP(true,true);
PQ_End_Vector_Func();
```

PQ_DF2_Vector8_FX(middle, last)

Fixed data vector biquad direct form II calculation.

Biquad filter, the input and output data are fixed data. Biquad side 0 is used. Example:

```
#define VECTOR_LEN 16
int32_t input[VECTOR_LEN] = {1024, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0};
int32_t output[VECTOR_LEN];
pq_biquad_state_t state =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};
```

(continues on next page)

(continued from previous page)

```
PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state);

PQ_Initiate_Vector_Func(pSrc,pDst);
PQ_DF2_Vector8_FX(false,false);
PQ_DF2_Vector8_FX(true,true);
PQ_End_Vector_Func();
```

PQ_Vector8BiquadDf2F32()

Float data vector biquad direct form II calculation.

Biquad filter, the input and output data are float data. Biquad side 0 is used. Example:

```
#define VECTOR_LEN 8
float input[VECTOR_LEN] = {1.0, 2.0, 3.0, 4.0, 5.0, 6.0, 7.0, 8.0};
float output[VECTOR_LEN];
pq_biquad_state_t state =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2F32();
PQ_EndVector();
```

PQ_Vector8BiquadDf2Fixed32()

Fixed 32-bit data vector biquad direct form II calculation.

Biquad filter, the input and output data are Q31 or 32-bit integer. Biquad side 0 is used. Example:

```
#define VECTOR_LEN 8
int32_t input[VECTOR_LEN] = {1, 2, 3, 4, 5, 6, 7, 8};
int32_t output[VECTOR_LEN];
pq_biquad_state_t state =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2Fixed32();
PQ_EndVector();
```

PQ_Vector8BiquadDf2Fixed16()

Fixed 16-bit data vector biquad direct form II calculation.

Biquad filter, the input and output data are Q15 or 16-bit integer. Biquad side 0 is used. Example:

```
#define VECTOR_LEN 8
int16_t input[VECTOR_LEN] = {1, 2, 3, 4, 5, 6, 7, 8};
int16_t output[VECTOR_LEN];
pq_biquad_state_t state =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2Fixed16();
PQ_EndVector();
```

PQ_DF2_Cascade_Vector8_FP(middle, last)

Float data vector direct form II biquad cascade filter.

The input and output data are float data. The data flow is input -> biquad side 1 -> biquad side 0 -> output.

```
#define VECTOR_LEN 16
float input[VECTOR_LEN] = {1024.0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0};
float output[VECTOR_LEN];
pq_biquad_state_t state0 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

pq_biquad_state_t state1 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state0);
PQ_BiquadRestoreInternalState(POWERQUAD, 1, &state1);

PQ_Initiate_Vector_Func(pSrc, pDst);
PQ_DF2_Cascade_Vector8_FP(false, false);
```

(continues on next page)

(continued from previous page)

```
PQ_DF2_Cascade_Vector8_FP(true, true);
PQ_End_Vector_Func();
```

PQ_DF2_Cascade_Vector8_FX(middle, last)

Fixed data vector direct form II biquad cascade filter.

The input and output data are fixed data. The data flow is input -> biquad side 1 -> biquad side 0 -> output.

```
#define VECTOR_LEN 16
int32_t input[VECTOR_LEN] = {1024.0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0};
int32_t output[VECTOR_LEN];
pq_biquad_state_t state0 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

pq_biquad_state_t state1 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state0);
PQ_BiquadRestoreInternalState(POWERQUAD, 1, &state1);

PQ_Initiate_Vector_Func(pSrc, pDst);
PQ_DF2_Cascade_Vector8_FX(false, false);
PQ_DF2_Cascade_Vector8_FX(true, true);
PQ_End_Vector_Func();
```

PQ_Vector8BiquadDf2CascadeF32()

Float data vector direct form II biquad cascade filter.

The input and output data are float data. The data flow is input -> biquad side 1 -> biquad side 0 -> output.

```
#define VECTOR_LEN 8
float input[VECTOR_LEN] = {1, 2, 3, 4, 5, 6, 7, 8};
float output[VECTOR_LEN];
pq_biquad_state_t state0 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
```

(continues on next page)

(continued from previous page)

```
        .b_2 = xxx,
    },
};

pq_biquad_state_t state1 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state0);
PQ_BiquadRestoreInternalState(POWERQUAD, 1, &state1);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2CascadeF32();
PQ_EndVector();
```

PQ_Vector8BiquadDf2CascadeFixed32()

Fixed 32-bit data vector direct form II biquad cascade filter.

The input and output data are fixed 32-bit data. The data flow is input -> biquad side 1 -> biquad side 0 -> output.

```
#define VECTOR_LEN 8
int32_t input[VECTOR_LEN] = {1, 2, 3, 4, 5, 6, 7, 8};
int32_t output[VECTOR_LEN];
pq_biquad_state_t state0 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

pq_biquad_state_t state1 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state0);
PQ_BiquadRestoreInternalState(POWERQUAD, 1, &state1);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2CascadeFixed32();
PQ_EndVector();
```

PQ_Vector8BiquadDf2CascadeFixed16()

Fixed 16-bit data vector direct form II biquad cascade filter.

The input and output data are fixed 16-bit data. The data flow is input -> biquad side 1 -> biquad side 0 -> output.

```
#define VECTOR_LEN 8
int32_t input[VECTOR_LEN] = {1, 2, 3, 4, 5, 6, 7, 8};
int32_t output[VECTOR_LEN];
pq_biquad_state_t state0 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

pq_biquad_state_t state1 =
{
    .param =
    {
        .a_1 = xxx,
        .a_2 = xxx,
        .b_0 = xxx,
        .b_1 = xxx,
        .b_2 = xxx,
    },
};

PQ_BiquadRestoreInternalState(POWERQUAD, 0, &state0);
PQ_BiquadRestoreInternalState(POWERQUAD, 1, &state1);

PQ_StartVector(input, output, VECTOR_LEN);
PQ_Vector8BiquadDf2CascadeFixed16();
PQ_EndVector();
```

POWERQUAD_MAKE_MATRIX_LEN(mat1Row, mat1Col, mat2Col)

Make the length used for matrix functions.

PQ_Q31_2_FLOAT(x)

Convert Q31 to float.

PQ_Q15_2_FLOAT(x)

Convert Q15 to float.

FSL_POWERQUAD_CMSIS_DRIVER_VERSION

Version.

pq_arm_cos_f32

pq_arm_cos_q31

pq_arm_cos_q15

pq_arm_sin_f32

pq_arm_sin_q31

pq_arm_sin_q15

pq_arm_sqrt_q31

pq_arm_sqrt_q15

pq_arm_cfft_q31

pq_arm_cfft_q15

pq_arm_rfft_init_q31

pq_arm_rfft_q31

pq_arm_rfft_init_q15

pq_arm_rfft_q15

pq_arm_dct4_init_q31

pq_arm_dct4_q31

pq_arm_dct4_init_q15

pq_arm_dct4_q15

pq_arm_fir_init_f32

pq_arm_fir_init_q31

pq_arm_fir_init_q15

pq_arm_fir_f32

pq_arm_fir_q31

pq_arm_fir_q15

pq_arm_conv_f32

pq_arm_conv_q31

pq_arm_conv_q15

pq_arm_correlate_f32

pq_arm_correlate_q31

pq_arm_correlate_q15

pq_arm_mat_init_f32

pq_arm_mat_init_q31

pq_arm_mat_init_q15

pq_arm_mat_add_f32

pq_arm_mat_add_q31

pq_arm_mat_add_q15

pq_arm_mat_sub_f32

pq_arm_mat_sub_q31

pq_arm_mat_sub_q15

pq_arm_mat_mult_f32

pq_arm_mat_mult_q31

pq_arm_mat_mult_q15

pq_arm_mat_inverse_f32

pq_arm_mat_trans_f32

pq_arm_mat_trans_q31

pq_arm_mat_trans_q15

pq_arm_mat_scale_f32

pq_arm_mat_scale_q31

pq_arm_mat_scale_q15

struct pq_prescale_t

#include <fsl_powerquad.h> Coprocessor prescale.

Public Members

int8_t inputPrescale

Input prescale.

int8_t outputPrescale

Output prescale.

int8_t outputSaturate

Output saturate at n bits, for example 0x11 is 8 bit space, the value will be truncated at +127 or -128.

struct pq_config_t

#include <fsl_powerquad.h> powerquad data structure format

Public Members

pq_format_t inputAFormat

Input A format.

int8_t inputAPrescale

Input A prescale, for example 1.5 can be 1.5*2^n if you scale by 'shifting' ('scaling' by a factor of n).

pq_format_t inputBFormat

Input B format.

int8_t inputBPrescale

Input B prescale.

pq_format_t outputFormat

Out format.

int8_t outputPrescale

Out prescale.

pq_format_t tmpFormat

Temp format.

int8_t tmpPrescale
Temp prescale.

pq_format_t machineFormat
Machine format.

uint32_t *tmpBase
Tmp base address.

struct __pq__biquad__param
#include <fsl_powerquad.h> Struct to save biquad parameters.

Public Members

float v__n__1
v[n-1], set to 0 when initialization.

float v__n
v[n], set to 0 when initialization.

float a__1
a[1]

float a__2
a[2]

float b__0
b[0]

float b__1
b[1]

float b__2
b[2]

struct __pq__biquad__state
#include <fsl_powerquad.h> Struct to save biquad state.

Public Members

pq_biquad_param_t param
Filter parameter.

uint32_t compreg
Internal register, set to 0 when initialization.

struct pq__biquad__cascade__df2__instance
#include <fsl_powerquad.h> Instance structure for the direct form II Biquad cascade filter.

Public Members

uint8_t numStages
Number of 2nd order stages in the filter.

pq_biquad_state_t *pState
Points to the array of state coefficients.

union __pq__float
#include <fsl_powerquad.h> Conversion between integer and float type.

Public Members

float floatX
: Float type.

uint32_t integerX
: Unsigned interger type.

2.55 PXP: Pixel Pipeline

void PXP_Init(PXP_Type *base)
: Initialize the PXP.

  This function enables the PXP peripheral clock, and resets the PXP registers to default status.

  Parameters

  - base – PXP peripheral base address.

void PXP_Deinit(PXP_Type *base)
: De-initialize the PXP.

  This function disables the PXP peripheral clock.

  Parameters

  - base – PXP peripheral base address.

void PXP_Reset(PXP_Type *base)
: Reset the PXP.

  This function resets the PXP peripheral registers to default status.

  Parameters

  - base – PXP peripheral base address.

void PXP_ResetControl(PXP_Type *base)
: Reset the PXP and the control register to initialized state.

  Parameters

  - base – PXP peripheral base address.

static inline void PXP_Start(PXP_Type *base)
: Start process.

  Start PXP process using current configuration.

  Parameters

  - base – PXP peripheral base address.

static inline void PXP_EnableLcdHandShake(PXP_Type *base, bool enable)
: Enable or disable LCD hand shake.

  Parameters

  - base – PXP peripheral base address.
  - enable – True to enable, false to disable.

static inline void PXP_EnableContinousRun(PXP_Type *base, bool enable)

Enable or disable continous run.

If continous run not enabled, PXP_Start starts the PXP process. When completed, PXP enters idle mode and flag kPXP_CompleteFlag asserts.

If continous run enabled, the PXP will repeat based on the current configuration register settings.

Parameters

- base – PXP peripheral base address.
- enable – True to enable, false to disable.

static inline void PXP_SetProcessBlockSize(PXP_Type *base, *pxp_block_size_t* size)

Set the PXP processing block size.

This function chooses the pixel block size that PXP using during process. Larger block size means better performace, but be careful that when PXP is rotating, the output must be divisible by the block size selected.

Parameters

- base – PXP peripheral base address.
- size – The pixel block size.

static inline void PXP_EnableProcessEngine(PXP_Type *base, uint32_t mask, bool enable)

Enables or disables PXP engines in the process flow.

Parameters

- base – PXP peripheral base address.
- mask – The engines to enable. Logical OR of pxp_process_engine_name_t.
- enable – true to enable, false to disable.

static inline uint32_t PXP_GetStatusFlags(PXP_Type *base)

Gets PXP status flags.

This function gets all PXP status flags. The flags are returned as the logical OR value of the enumerators _pxp_flags. To check a specific status, compare the return value with enumerators in _pxp_flags. For example, to check whether the PXP has completed process, use like this:

```
if (kPXP_CompleteFlag & PXP_GetStatusFlags(PXP))
{
    ...
}
```

Parameters

- base – PXP peripheral base address.

Returns

PXP status flags which are OR'ed by the enumerators in the _pxp_flags.

static inline void PXP_ClearStatusFlags(PXP_Type *base, uint32_t statusMask)

Clears status flags with the provided mask.

This function clears PXP status flags with a provided mask.

Parameters

- base – PXP peripheral base address.

- statusMask – The status flags to be cleared; it is logical OR value of _pxp_flags.

static inline uint8_t PXP_GetAxiErrorId(PXP_Type *base, uint8_t axiIndex)

Gets the AXI ID of the failing bus operation.

Parameters

- base – PXP peripheral base address.
- axiIndex – Whitch AXI to get
  - 0: AXI0
  - 1: AXI1

Returns

The AXI ID of the failing bus operation.

static inline void PXP_EnableInterrupts(PXP_Type *base, uint32_t mask)

Enables PXP interrupts according to the provided mask.

This function enables the PXP interrupts according to the provided mask. The mask is a logical OR of enumeration members. See _pxp_interrupt_enable. For example, to enable PXP process complete interrupt and command loaded interrupt, do the following.

```
PXP_EnableInterrupts(PXP, kPXP_CommandLoadInterruptEnable | kPXP_
↪CompleteInterruptEnable);
```

Parameters

- base – PXP peripheral base address.
- mask – The interrupts to enable. Logical OR of _pxp_interrupt_enable.

static inline void PXP_DisableInterrupts(PXP_Type *base, uint32_t mask)

Disables PXP interrupts according to the provided mask.

This function disables the PXP interrupts according to the provided mask. The mask is a logical OR of enumeration members. See _pxp_interrupt_enable.

Parameters

- base – PXP peripheral base address.
- mask – The interrupts to disable. Logical OR of _pxp_interrupt_enable.

void PXP_SetAlphaSurfaceBufferConfig(PXP_Type *base, const *pxp_as_buffer_config_t* *config)

Set the alpha surface input buffer configuration.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration.

void PXP_SetAlphaSurfaceBlendConfig(PXP_Type *base, const *pxp_as_blend_config_t* *config)

Set the alpha surface blending configuration.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration structure.

void PXP_SetAlphaSurfaceBlendSecondaryConfig(PXP_Type *base, const *pxp_as_blend_secondary_config_t* *config)

Set the alpha surface blending configuration for the secondary engine.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration structure.

void PXP_SetAlphaSurfaceOverlayColorKey(PXP_Type *base, uint8_t num, uint32_t colorKeyLow, uint32_t colorKeyHigh)

Set the alpha surface overlay color key.

If a pixel in the current overlay image with a color that falls in the range from the colorKeyLow to colorKeyHigh range, it will use the process surface pixel value for that location. If no PS image is present or if the PS image also matches its colorkey range, the PS background color is used.

Note: Colorkey operations are higher priority than alpha or ROP operations

Parameters

- base – PXP peripheral base address.
- num – instance number. 0 for alpha engine A, 1 for alpha engine B.
- colorKeyLow – Color key low range.
- colorKeyHigh – Color key high range.

static inline void PXP_EnableAlphaSurfaceOverlayColorKey(PXP_Type *base, uint32_t num, bool enable)

Enable or disable the alpha surface color key.

Parameters

- base – PXP peripheral base address.
- num – instance number. 0 for alpha engine A, 1 for alpha engine B.
- enable – True to enable, false to disable.

void PXP_SetAlphaSurfacePosition(PXP_Type *base, uint16_t upperLeftX, uint16_t upperLeftY, uint16_t lowerRightX, uint16_t lowerRightY)

Set the alpha surface position in output buffer.

Parameters

- base – PXP peripheral base address.
- upperLeftX – X of the upper left corner.
- upperLeftY – Y of the upper left corner.
- lowerRightX – X of the lower right corner.
- lowerRightY – Y of the lower right corner.

static inline void PXP_SetProcessSurfaceBackGroundColor(PXP_Type *base, uint8_t num, uint32_t backGroundColor)

Set the back ground color of PS.

Parameters

- base – PXP peripheral base address.
- num – instance number. 0 for alpha engine A, 1 for alpha engine B.
- backGroundColor – Pixel value of the background color.

void PXP_SetProcessSurfaceBufferConfig(PXP_Type *base, const *pxp_ps_buffer_config_t* *config)

Set the process surface input buffer configuration.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration.

void PXP_SetProcessSurfaceScaler(PXP_Type *base, uint16_t inputWidth, uint16_t inputHeight, uint16_t outputWidth, uint16_t outputHeight)

Set the process surface scaler configuration.

The valid down scale fact is 1/(2^12) ~ 16.

Parameters

- base – PXP peripheral base address.
- inputWidth – Input image width.
- inputHeight – Input image height.
- outputWidth – Output image width.
- outputHeight – Output image height.

void PXP_SetProcessSurfacePosition(PXP_Type *base, uint16_t upperLeftX, uint16_t upperLeftY, uint16_t lowerRightX, uint16_t lowerRightY)

Set the process surface position in output buffer.

Parameters

- base – PXP peripheral base address.
- upperLeftX – X of the upper left corner.
- upperLeftY – Y of the upper left corner.
- lowerRightX – X of the lower right corner.
- lowerRightY – Y of the lower right corner.

void PXP_SetProcessSurfaceBufferSize(PXP_Type *base, uint16_t lowerRightX, uint16_t lowerRightY)

Set the size of the process surface frame buffer in pixels.

Parameters

- base – PXP peripheral base address.
- lowerRightX – X of the number of horizontal PIXELS in the processed surface.
- lowerRightY – Y of the number of vertical PIXELS in the processed surface.

void PXP_SetProcessSurfaceColorKey(PXP_Type *base, uint8_t num, uint32_t colorKeyLow, uint32_t colorKeyHigh)

Set the process surface color key.

If the PS image matches colorkey range, the PS background color is output. Set colorKeyLow to 0xFFFFFFFF and p colorKeyHigh to 0 will disable the colorkeying.

Parameters

- base – PXP peripheral base address.
- num – instance number. 0 for alpha engine A, 1 for alpha engine B.
- colorKeyLow – Color key low range.
- colorKeyHigh – Color key high range.

static inline void PXP_SetProcessSurfaceYUVFormat(PXP_Type *base, *pxp_ps_yuv_format_t* format)

Set the process surface input pixel format YUV or YCbCr.

If process surface input pixel format is YUV and CSC1 is not enabled, in other words, the process surface output pixel format is also YUV, then this function should be called to set whether input pixel format is YUV or YCbCr.

Parameters

- base – PXP peripheral base address.
- format – The YUV format.

void PXP_SetOutputBufferConfig(PXP_Type *base, const *pxp_output_buffer_config_t* *config)

Set the PXP outpt buffer configuration.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration.

static inline void PXP_SetOverwrittenAlphaValue(PXP_Type *base, uint8_t alpha)

Set the global overwritten alpha value.

If global overwritten alpha is enabled, the alpha component in output buffer pixels will be overwritten, otherwise the computed alpha value is used.

Parameters

- base – PXP peripheral base address.
- alpha – The alpha value.

static inline void PXP_EnableOverWrittenAlpha(PXP_Type *base, bool enable)

Enable or disable the global overwritten alpha value.

If global overwritten alpha is enabled, the alpha component in output buffer pixels will be overwritten, otherwise the computed alpha value is used.

Parameters

- base – PXP peripheral base address.
- enable – True to enable, false to disable.

static inline void PXP_SetRotateConfig(PXP_Type *base, *pxp_rotate_position_t* position, *pxp_rotate_degree_t* degree, *pxp_flip_mode_t* flipMode)

Set the rotation configuration.

The PXP could rotate the process surface or the output buffer. There are two PXP versions:

- Version 1: Only has one rotate sub module, the output buffer and process surface share the same rotate sub module, which means the process surface and output buffer could not be rotate at the same time. When pass in kPXP_RotateOutputBuffer, the process surface could not use the rotate, Also when pass in kPXP_RotateProcessSurface, output buffer could not use the rotate.
- Version 2: Has two seperate rotate sub modules, the output buffer and process surface could configure the rotation independently.

Upper layer could use the macro PXP_SHARE_ROTATE to check which version is. PXP_SHARE_ROTATE=1 means version 1.

Note: This function is different depends on the macro PXP_SHARE_ROTATE.

Parameters

- base – PXP peripheral base address.
- position – Rotate process surface or output buffer.
- degree – Rotate degree.
- flipMode – Flip mode.

void PXP_BuildRect(PXP_Type *base, *pxp_output_pixel_format_t* outFormat, uint32_t value, uint16_t width, uint16_t height, uint16_t pitch, uint32_t outAddr)

Build a solid rectangle of given pixel value.

Parameters

- base – PXP peripheral base address.
- outFormat – output pixel format.
- value – The value of the pixel to be filled in the rectangle in ARGB8888 format.
- width – width of the rectangle.
- height – height of the rectangle.
- pitch – output pitch in byte.
- outAddr – address of the memory to store the rectangle.

void PXP_SetNextCommand(PXP_Type *base, void *commandAddr)

Set the next command.

The PXP supports a primitive ability to queue up one operation while the current operation is running. Workflow:

a. Prepare the PXP register values except STAT, CSCCOEFn, NEXT in the memory in the order they appear in the register map.
b. Call this function sets the new operation to PXP.
c. There are two methods to check whether the PXP has loaded the new operation. The first method is using PXP_IsNextCommandPending. If there is new operation not loaded by the PXP, this function returns true. The second method is checking the flag kPXP_CommandLoadFlag, if command loaded, this flag asserts. User could enable interrupt kPXP_CommandLoadInterruptEnable to get the loaded signal in interrupt way.
d. When command loaded by PXP, a new command could be set using this function.

```
uint32_t pxp_command1[48];
uint32_t pxp_command2[48];

pxp_command1[0] = ...;
pxp_command1[1] = ...;
...
pxp_command2[0] = ...;
pxp_command2[1] = ...;
...

while (PXP_IsNextCommandPending(PXP))
{
}

PXP_SetNextCommand(PXP, pxp_command1);
```

(continues on next page)

(continued from previous page)

```
while (PXP_IsNextCommandPending(PXP))
{
}

PXP_SetNextCommand(PXP, pxp_command2);
```

Parameters

- base – PXP peripheral base address.
- commandAddr – Address of the new command.

static inline bool PXP_IsNextCommandPending(PXP_Type *base)

Check whether the next command is pending.

Parameters

- base – UART peripheral base address.

Returns

True is pending, false is not.

static inline void PXP_CancelNextCommand(PXP_Type *base)

Cancel command set by PXP_SetNextCommand.

Parameters

- base – UART peripheral base address.

void PXP_SetCsc1Mode(PXP_Type *base, *pxp_csc1_mode_t* mode)

Set the CSC1 mode.

The CSC1 module receives scaled YUV/YCbCr444 pixels from the scale engine and converts the pixels to the RGB888 color space. It could only be used by process surface.

Parameters

- base – PXP peripheral base address.
- mode – The conversion mode.

static inline void PXP_EnableCsc1(PXP_Type *base, bool enable)

Enable or disable the CSC1.

Parameters

- base – PXP peripheral base address.
- enable – True to enable, false to disable.

void PXP_SetInternalRamData(PXP_Type *base, *pxp_ram_t* ram, uint16_t bytesNum, uint8_t *data, uint16_t memStartAddr)

Write data to the PXP internal memory.

Parameters

- base – PXP peripheral base address.
- ram – Which internal memory to write.
- bytesNum – How many bytes to write.
- data – Pointer to the data to write.
- memStartAddr – The start address in the internal memory to write the data.

void PXP_SetDitherFinalLutData(PXP_Type *base, const *pxp_dither_final_lut_data_t* *data)

Set the dither final LUT data.

The dither final LUT is only applicble to dither engine 0. It takes the bits[7:4] of the output pixel and looks up and 8 bit value from the 16 value LUT to generate the final output pixel to the next process module.

Parameters

- base – PXP peripheral base address.
- data – Pointer to the LUT data to set.

static inline void PXP_SetDitherConfig(PXP_Type *base, const *pxp_dither_config_t* *config)

Set the configuration for the dither block.

If the pre-dither LUT, post-dither LUT or ordered dither is used, please call PXP_SetInternalRamData to set the LUT data to internal memory.

If the final LUT is used, please call PXP_SetDitherFinalLutData to set the LUT data.

Note: When using ordered dithering, please set the PXP process block size same with the ordered dithering matrix size using function PXP_SetProcessBlockSize.

Parameters

- base – PXP peripheral base address.
- config – Pointer to the configuration.

void PXP_EnableDither(PXP_Type *base, bool enable)

Enable or disable dither engine in the PXP process path.

After the initialize function PXP_Init, the dither engine is disabled and not use in the PXP processing path. This function enables the dither engine and routes the dither engine output to the output buffer. When the dither engine is enabled using this function, PXP_SetDitherConfig must be called to configure dither engine correctly, otherwise there is not output to the output buffer.

Parameters

- base – PXP peripheral base address.
- enable – Pass in true to enable, false to disable.

void PXP_SetPorterDuffConfig(PXP_Type *base, uint8_t num, const *pxp_porter_duff_config_t* *config)

Set the Porter Duff configuration for one of the alpha process engine.

Parameters

- base – PXP peripheral base address.
- num – instance number.
- config – Pointer to the configuration.

status_t PXP_GetPorterDuffConfigExt(*pxp_porter_duff_blend_mode_t* mode, *pxp_porter_duff_config_t* *config, uint8_t dstGlobalAlphaMode, uint8_t dstAlphaMode, uint8_t dstColorMode, uint8_t srcGlobalAlphaMode, uint8_t srcAlphaMode, uint8_t srcColorMode, uint8_t dstGlobalAlpha, uint8_t srcGlobalAlpha)

Get the Porter Duff configuration.

The FactorMode are selected based on blend mode, the other values are set based on input parameters. These values could be modified after calling this function. This function is extened PXP_GetPorterDuffConfig.

Parameters

- mode – The blend mode.
- config – Pointer to the configuration.
- dstGlobalAlphaMode – Destination layer (or PS, s0) global alpha mode, see pxp_porter_duff_global_alpha_mode
- dstAlphaMode – Destination layer (or PS, s0) alpha mode, see pxp_porter_duff_alpha_mode.
- dstColorMode – Destination layer (or PS, s0) color mode, see pxp_porter_duff_color_mode.
- srcGlobalAlphaMode – Source layer (or AS, s1) global alpha mode, see pxp_porter_duff_global_alpha_mode
- srcAlphaMode – Source layer (or AS, s1) alpha mode, see pxp_porter_duff_alpha_mode.
- srcColorMode – Source layer (or AS, s1) color mode, see pxp_porter_duff_color_mode.
- dstGlobalAlpha – Destination layer (or PS, s0) global alpha value, 0~255
- srcGlobalAlpha – Source layer (or AS, s1) global alpha value, 0~255

Return values

- kStatus_Success – Successfully get the configuratoin.
- kStatus_InvalidArgument – The blend mode not supported.

static inline *status_t* PXP_GetPorterDuffConfig(*pxp_porter_duff_blend_mode_t* mode, *pxp_porter_duff_config_t* *config)

Get the Porter Duff configuration by blend mode.

The FactorMode are selected based on blend mode, the AlphaMode are set to kPXP_PorterDuffAlphaStraight, the ColorMode are set to kPXP_PorterDuffColorWithAlpha, the GlobalAlphaMode are set to kPXP_PorterDuffLocalAlpha. These values could be modified after calling this function.

Parameters

- mode – The blend mode.
- config – Pointer to the configuration.

Return values

- kStatus_Success – Successfully get the configuratoin.
- kStatus_InvalidArgument – The blend mode not supported.

FSL_PXP_DRIVER_VERSION

enum _pxp_interrupt_enable

PXP interrupts to enable.

Values:

enumerator kPXP_CompleteInterruptEnable

PXP process completed. bit 1

enumerator kPXP_CommandLoadInterruptEnable
Interrupt to show that the command set by PXP_SetNextCommand has been loaded. bit 2

enumerator kPXP_CompressDoneInterruptEnable
Compress done interrupt enable. bit 15

enumerator kPXP_InputFetchCh0InterruptEnable
Input fetch channel 0 completed. bit 16

enumerator kPXP_InputFetchCh1InterruptEnable
Input fetch channel 1 completed. bit 17

enumerator kPXP_InputStoreCh0InterruptEnable
Input store channel 0 completed. bit 18

enumerator kPXP_InputStoreCh1InterruptEnable
Input store channel 1 completed. bit 19

enumerator kPXP_DitherFetchCh0InterruptEnable
Dither fetch channel 0 completed. bit 20

enumerator kPXP_DitherFetchCh1InterruptEnable
Dither fetch channel 1 completed. bit 21

enumerator kPXP_DitherStoreCh0InterruptEnable
Dither store channle 0 completed. bit 22

enumerator kPXP_DitherStoreCh1InterruptEnable
Dither store channle 1 completed. bit 23

enumerator kPXP_WfeaStoreCh0InterruptEnable
WFE-A store channel 0 completed. bit 24

enumerator kPXP_WfeaStoreCh1InterruptEnable
WFE-A store channel 1 completed. bit 25

enumerator kPXP_WfebStoreCh0InterruptEnable
WFE-B store channel 0 completed. bit 26

enumerator kPXP_WfebStoreCh1InterruptEnable
WFE-B store channel 1 completed. bit 27

enumerator kPXP_InputStoreInterruptEnable
Input store completed. bit 28

enumerator kPXP_DitherStoreInterruptEnable
Dither store completed. bit 29

enumerator kPXP_WfeaStoreInterruptEnable
WFE-A store completed. bit 30

enumerator kPXP_WfebStoreInterruptEnable
WFE-B store completed. bit 31

enum _pxp_flags
PXP status flags.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kPXP_CompleteFlag
PXP process completed. bit 0

enumerator kPXP_Axi0WriteErrorFlag
PXP encountered an AXI write error and processing has been terminated. bit 1

enumerator kPXP_Axi0ReadErrorFlag
PXP encountered an AXI read error and processing has been terminated. bit 2

enumerator kPXP_CommandLoadFlag
The command set by PXP_SetNextCommand has been loaded, could set new command. bit 3

enumerator kPXP_CompressDoneFlag
Compress done. bit 15

enumerator kPXP_InputFetchCh0CompleteFlag
Input fetch channel 0 completed. bit 16

enumerator kPXP_InputFetchCh1CompleteFlag
Input fetch channel 1 completed. bit 17

enumerator kPXP_InputStoreCh0CompleteFlag
Input store channel 0 completed. bit 18

enumerator kPXP_InputStoreCh1CompleteFlag
Input store channel 1 completed. bit 19

enumerator kPXP_DitherFetchCh0CompleteFlag
Dither fetch channel 0 completed. bit 20

enumerator kPXP_DitherFetchCh1CompleteFlag
Dither fetch channel 1 completed. bit 21

enumerator kPXP_DitherStoreCh0CompleteFlag
Dither store channel 0 completed. bit 22

enumerator kPXP_DitherStoreCh1CompleteFlag
Dither store channel 1 completed. bit 23

enumerator kPXP_WfeaStoreCh0CompleteFlag
WFE-A store channel 0 completed. bit 24

enumerator kPXP_WfeaStoreCh1CompleteFlag
WFE-A store channel 1 completed. bit 25

enumerator kPXP_WfebStoreCh0CompleteFlag
WFE-B store channel 0 completed. bit 26

enumerator kPXP_WfebStoreCh1CompleteFlag
WFE-B store channel 1 completed. bit 27

enumerator kPXP_InputStoreCompleteFlag
Input store completed. bit 28

enumerator kPXP_DitherStoreCompleteFlag
Dither store completed. bit 29

enumerator kPXP_WfeaStoreCompleteFlag
WFE-A store completed. bit 30

enumerator kPXP_WfebStoreCompleteFlag
WFE-B store completed. bit 31

enum _pxp_flip_mode

PXP output flip mode.

Values:

enumerator kPXP_FlipDisable

Flip disable.

enumerator kPXP_FlipHorizontal

Horizontal flip.

enumerator kPXP_FlipVertical

Vertical flip.

enumerator kPXP_FlipBoth

Flip both directions.

enum _pxp_rotate_position

PXP rotate mode.

Values:

enumerator kPXP_RotateOutputBuffer

Rotate the output buffer.

enumerator kPXP_RotateProcessSurface

Rotate the process surface. Cannot be used together with flip, scale, or decimation function.

enum _pxp_rotate_degree

PXP rotate degree.

Values:

enumerator kPXP_Rotate0

Clock wise rotate 0 deg.

enumerator kPXP_Rotate90

Clock wise rotate 90 deg.

enumerator kPXP_Rotate180

Clock wise rotate 180 deg.

enumerator kPXP_Rotate270

Clock wise rotate 270 deg.

enum _pxp_interlaced_output_mode

PXP interlaced output mode.

Values:

enumerator kPXP_OutputProgressive

All data written in progressive format to output buffer 0.

enumerator kPXP_OutputField0

Only write field 0 data to output buffer 0.

enumerator kPXP_OutputField1

Only write field 1 data to output buffer 0.

enumerator kPXP_OutputInterlaced

Field 0 write to buffer 0, field 1 write to buffer 1.

enum _pxp_output_pixel_format

PXP output buffer format.

Values:

enumerator kPXP_OutputPixelFormatARGB8888
32-bit pixels with alpha.

enumerator kPXP_OutputPixelFormatRGB888
32-bit pixels without alpha (unpacked 24-bit format)

enumerator kPXP_OutputPixelFormatRGB888P
24-bit pixels without alpha (packed 24-bit format)

enumerator kPXP_OutputPixelFormatARGB1555
16-bit pixels with alpha.

enumerator kPXP_OutputPixelFormatARGB4444
16-bit pixels with alpha.

enumerator kPXP_OutputPixelFormatRGB555
16-bit pixels without alpha.

enumerator kPXP_OutputPixelFormatRGB444
16-bit pixels without alpha.

enumerator kPXP_OutputPixelFormatRGB565
16-bit pixels without alpha.

enumerator kPXP_OutputPixelFormatYUV1P444
32-bit pixels (1-plane XYUV unpacked).

enumerator kPXP_OutputPixelFormatUYVY1P422
16-bit pixels (1-plane U0,Y0,V0,Y1 interleaved bytes)

enumerator kPXP_OutputPixelFormatVYUY1P422
16-bit pixels (1-plane V0,Y0,U0,Y1 interleaved bytes)

enumerator kPXP_OutputPixelFormatY8
8-bit monochrome pixels (1-plane Y luma output)

enumerator kPXP_OutputPixelFormatY4
4-bit monochrome pixels (1-plane Y luma, 4 bit truncation)

enumerator kPXP_OutputPixelFormatYUV2P422
16-bit pixels (2-plane UV interleaved bytes)

enumerator kPXP_OutputPixelFormatYUV2P420
16-bit pixels (2-plane UV)

enumerator kPXP_OutputPixelFormatYVU2P422
16-bit pixels (2-plane VU interleaved bytes)

enumerator kPXP_OutputPixelFormatYVU2P420
16-bit pixels (2-plane VU)

enum _pxp_ps_pixel_format

PXP process surface buffer pixel format.

Values:

enumerator kPXP_PsPixelFormatRGB888
32-bit pixels without alpha (unpacked 24-bit format)

enumerator kPXP_PsPixelFormatRGB555
16-bit pixels without alpha.

enumerator kPXP_PsPixelFormatRGB444
16-bit pixels without alpha.

enumerator kPXP_PsPixelFormatRGB565
16-bit pixels without alpha.

enumerator kPXP_PsPixelFormatYUV1P444
32-bit pixels (1-plane XYUV unpacked).

enumerator kPXP_PsPixelFormatUYVY1P422
16-bit pixels (1-plane U0,Y0,V0,Y1 interleaved bytes)

enumerator kPXP_PsPixelFormatVYUY1P422
16-bit pixels (1-plane V0,Y0,U0,Y1 interleaved bytes)

enumerator kPXP_PsPixelFormatY8
8-bit monochrome pixels (1-plane Y luma output)

enumerator kPXP_PsPixelFormatY4
4-bit monochrome pixels (1-plane Y luma, 4 bit truncation)

enumerator kPXP_PsPixelFormatYUV2P422
16-bit pixels (2-plane UV interleaved bytes)

enumerator kPXP_PsPixelFormatYUV2P420
16-bit pixels (2-plane UV)

enumerator kPXP_PsPixelFormatYVU2P422
16-bit pixels (2-plane VU interleaved bytes)

enumerator kPXP_PsPixelFormatYVU2P420
16-bit pixels (2-plane VU)

enumerator kPXP_PsPixelFormatYVU422
16-bit pixels (3-plane)

enumerator kPXP_PsPixelFormatYVU420
16-bit pixels (3-plane)

enum _pxp_ps_yuv_format
PXP process surface buffer YUV format.

Values:

enumerator kPXP_PsYUVFormatYUV
YUV format.

enumerator kPXP_PsYUVFormatYCbCr
YCbCr format.

enum _pxp_as_pixel_format
PXP alpha surface buffer pixel format.

Values:

enumerator kPXP_AsPixelFormatARGB8888
32-bit pixels with alpha.

enumerator kPXP_AsPixelFormatRGB888
32-bit pixels without alpha (unpacked 24-bit format)

enumerator kPXP_AsPixelFormatARGB1555
16-bit pixels with alpha.

enumerator kPXP_AsPixelFormatARGB4444
16-bit pixels with alpha.

enumerator kPXP_AsPixelFormatRGB555
16-bit pixels without alpha.

enumerator kPXP_AsPixelFormatRGB444
16-bit pixels without alpha.

enumerator kPXP_AsPixelFormatRGB565
16-bit pixels without alpha.

enum _pxp_alpha_mode
PXP alpha mode during blending.

Values:

enumerator kPXP_AlphaEmbedded
The alpha surface pixel alpha value will be used for blend.

enumerator kPXP_AlphaOverride
The user defined alpha value will be used for blend directly.

enumerator kPXP_AlphaMultiply
The alpha surface pixel alpha value scaled the user defined alpha value will be used for blend, for example, pixel alpha set set to 200, user defined alpha set to 100, then the reault alpha is 200 * 100 / 255.

enumerator kPXP_AlphaRop
Raster operation.

enum _pxp_rop_mode
PXP ROP mode during blending.

Explanation:

- AS: Alpha surface
- PS: Process surface
- nAS: Alpha surface NOT value
- nPS: Process surface NOT value

Values:

enumerator kPXP_RopMaskAs
AS AND PS.

enumerator kPXP_RopMaskNotAs
nAS AND PS.

enumerator kPXP_RopMaskAsNot
AS AND nPS.

enumerator kPXP_RopMergeAs
AS OR PS.

enumerator kPXP_RopMergeNotAs
nAS OR PS.

enumerator kPXP_RopMergeAsNot
AS OR nPS.

enumerator kPXP_RopNotCopyAs
nAS.

enumerator kPXP_RopNot
nPS.

enumerator kPXP_RopNotMaskAs
AS NAND PS.

enumerator kPXP_RopNotMergeAs
AS NOR PS.

enumerator kPXP_RopXorAs
AS XOR PS.

enumerator kPXP_RopNotXorAs
AS XNOR PS.

enum _pxp_block_size
PXP process block size.

Values:

enumerator kPXP_BlockSize8
Process 8x8 pixel blocks.

enumerator kPXP_BlockSize16
Process 16x16 pixel blocks.

enum _pxp_csc1_mode
PXP CSC1 mode.

Values:

enumerator kPXP_Csc1YUV2RGB
YUV to RGB.

enumerator kPXP_Csc1YCbCr2RGB
YCbCr to RGB.

enum _pxp_csc2_mode
PXP CSC2 mode.

Values:

enumerator kPXP_Csc2YUV2RGB
YUV to RGB.

enumerator kPXP_Csc2YCbCr2RGB
YCbCr to RGB.

enumerator kPXP_Csc2RGB2YUV
RGB to YUV.

enumerator kPXP_Csc2RGB2YCbCr
RGB to YCbCr.

enum _pxp_ram
PXP internal memory.

Values:

enumerator kPXP_RamDither0Lut
Dither 0 LUT memory.

enumerator kPXP_RamDither1Lut
Dither 1 LUT memory.

enumerator kPXP_RamDither2Lut
Dither 2 LUT memory.

enumerator kPXP_RamDither0Err0
Dither 0 ERR0 memory.

enumerator kPXP_RamDither0Err1
Dither 0 ERR1 memory.

enumerator kPXP_RamAluA
ALU A instr memory.

enumerator kPXP_RamAluB
ALU B instr memory.

enumerator kPXP_WfeAFetch
WFE-A fetch memory.

enumerator kPXP_WfeBFetch
WFE-B fetch memory.

enum _pxp_dither_mode
PXP dither mode.

Values:

enumerator kPXP_DitherPassThrough
Pass through, no dither.

enumerator kPXP_DitherFloydSteinberg
Floyd-Steinberg. For dither engine 0 only.

enumerator kPXP_DitherAtkinson
Atkinson. For dither engine 0 only.

enumerator kPXP_DitherOrdered
Ordered dither.

enumerator kPXP_DitherQuantOnly
No dithering, only quantization.

enumerator kPXP_DitherSierra
Sierra. For dither engine 0 only.

enum _pxp_dither_lut_mode
PXP dither LUT mode.

Values:

enumerator kPXP_DitherLutOff
The LUT memory is not used for LUT, could be used as ordered dither index matrix.

enumerator kPXP_DitherLutPreDither
Use LUT at the pre-dither stage, The pre-dither LUT could only be used in Floyd mode or Atkinson mode, which are not supported by current PXP module.

enumerator kPXP_DitherLutPostDither
Use LUT at the post-dither stage.

enum _pxp_dither_matrix_size

PXP dither matrix size.

Values:

enumerator kPXP_DitherMatrix4

The dither index matrix is 4x4.

enumerator kPXP_DitherMatrix8

The dither index matrix is 8x8.

enumerator kPXP_DitherMatrix16

The dither index matrix is 16x16.

Porter Duff factor mode. .

Values:

enumerator kPXP_PorterDuffFactorOne

Use 1.

enumerator kPXP_PorterDuffFactorZero

Use 0.

enumerator kPXP_PorterDuffFactorStraight

Use straight alpha.

enumerator kPXP_PorterDuffFactorInversed

Use inversed alpha.

Porter Duff global alpha mode. .

Values:

enumerator kPXP_PorterDuffGlobalAlpha

Use global alpha.

enumerator kPXP_PorterDuffLocalAlpha

Use local alpha in each pixel.

enumerator kPXP_PorterDuffScaledAlpha

Use global alpha * local alpha.

Porter Duff alpha mode. .

Values:

enumerator kPXP_PorterDuffAlphaStraight

Use straight alpha, s0_alpha' = s0_alpha.

enumerator kPXP_PorterDuffAlphaInversed

Use inversed alpha, s0_alpha' = 0xFF - s0_alpha.

Porter Duff color mode. .

Values:

enumerator kPXP_PorterDuffColorStraight

Deprecated:

Use kPXP_PorterDuffColorNoAlpha.

enumerator kPXP_PorterDuffColorInversed

Deprecated:
Use kPXP_PorterDuffColorWithAlpha.

enumerator kPXP_PorterDuffColorNoAlpha
s0_pixel' = s0_pixel.

enumerator kPXP_PorterDuffColorWithAlpha
s0_pixel' = s0_pixel * s0_alpha".

enum _pxp_porter_duff_blend_mode
PXP Porter Duff blend mode. Note: don't change the enum item value.

Values:

enumerator kPXP_PorterDuffSrc
Source Only

enumerator kPXP_PorterDuffAtop
Source Atop

enumerator kPXP_PorterDuffOver
Source Over

enumerator kPXP_PorterDuffIn
Source In.

enumerator kPXP_PorterDuffOut
Source Out.

enumerator kPXP_PorterDuffDst
Destination Only.

enumerator kPXP_PorterDuffDstAtop
Destination Atop.

enumerator kPXP_PorterDuffDstOver
Destination Over.

enumerator kPXP_PorterDuffDstIn
Destination In.

enumerator kPXP_PorterDuffDstOut
Destination Out.

enumerator kPXP_PorterDuffXor
XOR.

enumerator kPXP_PorterDuffClear
Clear.

enumerator kPXP_PorterDuffMax

enum _pxp_process_engine_name
PXP process engine enumeration.

Values:

enumerator kPXP_PsAsOutEngine

enumerator kPXP_DitherEngine

enumerator kPXP_WfeaEngine

enumerator kPXP_WfebEngine

enumerator kPXP_InputFetchStoreEngine

enumerator kPXP_Alpha1Engine

enumerator kPXP_Csc2Engine

enumerator kPXP_LutEngine

enumerator kPXP_Rotate0Engine

enumerator kPXP_Rotate1Engine

enum _pxp_fetch_engine_name

PXP fetch engine enumeration.

There are actually 4 fetch engine implemented, the others are WFE-A fetch engine and WFE-B fetch engine, whose registers are reserved from developer.

Values:

enumerator kPXP_FetchInput

enumerator kPXP_FetchDither

enum _pxp_fetch_interface_mode

PXP fetch engine interface mode with the upstream store engine.

Values:

enumerator kPXP_FetchModeNormal

enumerator kPXP_FetchModeHandshake

enumerator kPXP_FetchModeBypass

enum _pxp_scanline_burst

PXP fetch/store engine burst length for scanline mode.

Values:

enumerator kPXP_Scanline8bytes

enumerator kPXP_Scanline16bytes

enumerator kPXP_Scanline32bytes

enumerator kPXP_Scanline64bytes

enum _pxp_activeBits

PXP fetch/store engine input/output active bits configuration.

Since fetch engine is 64-bit input and 32-bit output per channel, need to configure both channels to use 64-bit input mode. And expand configuration will have no effect.

Values:

enumerator kPXP_Active8Bits

enumerator kPXP_Active16Bits

enumerator kPXP_Active32Bits

enumerator kPXP_Active64Bits

enum _pxp_fetch_output_word_order

PXP fetch engine output word order when using 2 channels for 64-bit mode.

Values:

enumerator kPXP_FetchOutputChannel1channel0

In 64bit mode, channel 1 output high byte.

enumerator kPXP_FetchOutputChannel0channel1

In 64bit mode, channel 0 output high byte.

enum _pxp_fetch_pixel_format

PXP fetch engine input pixel format.

Values:

enumerator kPXP_FetchFormatRGB565

enumerator kPXP_FetchFormatRGB555

enumerator kPXP_FetchFormatARGB1555

enumerator kPXP_FetchFormatRGB444

enumerator kPXP_FetchFormatARGB4444

enumerator kPXP_FetchFormatYUYVorYVYU

enumerator kPXP_FetchFormatUYVYorVYUY

enumerator kPXP_FetchFormatYUV422_2P

enum _pxp_store_engine_name

PXP store engine enumeration.

There are actually 4 store engine implemented, the others are WFE-A store engine and WFE-B store engine, whose registers are reserved from developer.

Values:

enumerator kPXP_StoreInput

enumerator kPXP_StoreDither

enum _pxp_store_interface_mode

PXP store engine interface mode with the downstream fetch engine.

Values:

enumerator kPXP_StoreModeBypass

Store engine output the input data, after the shift function directly to the downstream Fetch Engine.

enumerator kPXP_StoreModeNormal

Store engine stores the input data to memory.

enumerator kPXP_StoreModeHandshake

Downstream fetch engine fetch data per scanline from memory using buffer sharing with store engine.

enumerator kPXP_StoreModeDual

Store engine outputs data directly to downstream fetch engine(Bypass) but also storing it to memory at the same time.

enum _pxp_store_yuv_mode

PXP store engine YUV output mode.

Values:

enumerator kPXP_StoreYUVDisable

Do not output YUV pixel format.

enumerator kPXP_StoreYUVPlane1

Use channel to output YUV422_1p pixel format, need to use shift operation to make sure each pixel component in its proper position: 64-bits of pixel data format and each 32 bits as {Y0, U0, Y1, V0}.

enumerator kPXP_StoreYUVPlane2

Use channel to output YUV422_2p pixel format, need to use shift operation to make sure each pixel component in its proper position: channel 0 {Y0,Y1}, channel 1 {U0,V0}.

enum _pxp_cfa_input_format

PXP pre-dither CFA engine input pixel format.

Values:

enumerator kPXP_CfaRGB888

enumerator kPXP_CfaRGB444

enum _pxp_histogram_mask_condition

PXP histogram mask condition.

Values:

enumerator kPXP_HistogramMaskEqual

Value that equal to value0 will pass the mask operation.

enumerator kPXP_HistogramMaskNotequal

Value that not equal to value0 will pass the mask operation.

enumerator kPXP_HistogramMaskIn

Value that within the range of value0-value1 will pass the mask operation.

enumerator kPXP_HistogramMaskOut

Value that without the range of value0-value1 will pass the mask operation.

enum _pxp_histgram_flags

PXP Histogram operation result flags.

Values:

enumerator kPXP_Histogram2levelMatch

enumerator kPXP_Histogram4levelMatch

enumerator kPXP_Histogram8levelMatch

enumerator kPXP_Histogram16levelMatch

enumerator kPXP_Histogram32levelMatch

typedef enum *_pxp_flip_mode* pxp_flip_mode_t

PXP output flip mode.

typedef enum *_pxp_rotate_position* pxp_rotate_position_t

PXP rotate mode.

typedef enum *_pxp_rotate_degree* pxp_rotate_degree_t
PXP rotate degree.

typedef enum *_pxp_interlaced_output_mode* pxp_interlaced_output_mode_t
PXP interlaced output mode.

typedef enum *_pxp_output_pixel_format* pxp_output_pixel_format_t
PXP output buffer format.

typedef struct *_pxp_output_buffer_config* pxp_output_buffer_config_t
PXP output buffer configuration.

typedef enum *_pxp_ps_pixel_format* pxp_ps_pixel_format_t
PXP process surface buffer pixel format.

typedef enum *_pxp_ps_yuv_format* pxp_ps_yuv_format_t
PXP process surface buffer YUV format.

typedef struct *_pxp_ps_buffer_config* pxp_ps_buffer_config_t
PXP process surface buffer configuration.

typedef enum *_pxp_as_pixel_format* pxp_as_pixel_format_t
PXP alpha surface buffer pixel format.

typedef struct *_pxp_as_buffer_config* pxp_as_buffer_config_t
PXP alphs surface buffer configuration.

typedef enum *_pxp_alpha_mode* pxp_alpha_mode_t
PXP alpha mode during blending.

typedef enum *_pxp_rop_mode* pxp_rop_mode_t
PXP ROP mode during blending.

Explanation:

- AS: Alpha surface
- PS: Process surface
- nAS: Alpha surface NOT value
- nPS: Process surface NOT value

typedef struct *_pxp_as_blend_config* pxp_as_blend_config_t
PXP alpha surface blending configuration.

typedef struct *_pxp_as_blend_secondary_config* pxp_as_blend_secondary_config_t
PXP secondary alpha surface blending engine configuration.

typedef enum *_pxp_block_size* pxp_block_size_t
PXP process block size.

typedef enum *_pxp_csc1_mode* pxp_csc1_mode_t
PXP CSC1 mode.

typedef enum *_pxp_csc2_mode* pxp_csc2_mode_t
PXP CSC2 mode.

typedef struct *_pxp_csc2_config* pxp_csc2_config_t
PXP CSC2 configuration.

Converting from YUV/YCbCr color spaces to the RGB color space uses the following equation structure:

R = A1(Y+D1) + A2(U+D2) + A3(V+D3) G = B1(Y+D1) + B2(U+D2) + B3(V+D3) B = C1(Y+D1) + C2(U+D2) + C3(V+D3)

Converting from the RGB color space to YUV/YCbCr color spaces uses the following equation structure:

Y = A1*R + A2*G + A3*B + D1 U = B1*R + B2*G + B3*B + D2 V = C1*R + C2*G + C3*B + D3

typedef enum *_pxp_ram* pxp_ram_t

PXP internal memory.

typedef struct *_pxp_dither_final_lut_data* pxp_dither_final_lut_data_t

PXP dither final LUT data.

typedef struct *_pxp_dither_config* pxp_dither_config_t

PXP dither configuration.

typedef enum *_pxp_porter_duff_blend_mode* pxp_porter_duff_blend_mode_t

PXP Porter Duff blend mode. Note: don't change the enum item value.

typedef struct *_pxp_pic_copy_config* pxp_pic_copy_config_t

PXP Porter Duff blend mode. Note: don't change the enum item value.

typedef enum *_pxp_process_engine_name* pxp_process_engine_name_t

PXP process engine enumeration.

typedef enum *_pxp_fetch_engine_name* pxp_fetch_engine_name_t

PXP fetch engine enumeration.

There are actually 4 fetch engine implemented, the others are WFE-A fetch engine and WFE-B fetch engine, whose registers are reserved from developer.

typedef enum *_pxp_fetch_interface_mode* pxp_fetch_interface_mode_t

PXP fetch engine interface mode with the upstream store engine.

typedef enum *_pxp_scanline_burst* pxp_scanline_burst_t

PXP fetch/store engine burst length for scanline mode.

typedef struct *_pxp_block_format_config* pxp_block_config_t

PXP fetch engine block configuration.

typedef enum *_pxp_activeBits* pxp_active_bits_t

PXP fetch/store engine input/output active bits configuration.

Since fetch engine is 64-bit input and 32-bit output per channel, need to configure both channels to use 64-bit input mode. And expand configuration will have no effect.

typedef enum *_pxp_fetch_output_word_order* pxp_fetch_output_word_order_t

PXP fetch engine output word order when using 2 channels for 64-bit mode.

typedef struct *_pxp_fetch_shift_component* pxp_fetch_shift_component_t

PXP fetch engine shift component configuration.

Fetch engine can divded each word into 4 components and shift them.

typedef struct *_pxp_fetch_shift_config* pxp_fetch_shift_config_t

PXP fetch engine shift configuration.

Fetch engine can divded each word into 4 components and shift them. For example, to change YUV444 to YVU444, U and V positions need to be shifted: OFFSET0=8, OFFSET1=0, OFFSET2=16, OFFSET3=24, WIDTH0/1/2/3=8

typedef enum *_pxp_fetch_pixel_format* pxp_fetch_pixel_format_t

PXP fetch engine input pixel format.

typedef struct *_pxp_fetch_engine_config* pxp_fetch_engine_config_t

PXP fetch engine configuration for one of the channel.

typedef enum *_pxp_store_engine_name* pxp_store_engine_name_t
PXP store engine enumeration.

There are actually 4 store engine implemented, the others are WFE-A store engine and WFE-B store engine, whose registers are reserved from developer.

typedef enum *_pxp_store_interface_mode* pxp_store_interface_mode_t
PXP store engine interface mode with the downstream fetch engine.

typedef enum *_pxp_store_yuv_mode* pxp_store_yuv_mode_t
PXP store engine YUV output mode.

typedef struct *_pxp_store_shift_config* pxp_store_shift_config_t
Shift configuration for PXP store engine.

typedef struct *_pxp_store_engine_config* pxp_store_engine_config_t
PXP store engine configuration for one of the channel.

typedef enum *_pxp_cfa_input_format* pxp_cfa_input_format_t
PXP pre-dither CFA engine input pixel format.

typedef struct *_pxp_cfa_config* pxp_cfa_config_t
PXP pre-dither CFA engine configuration.

typedef enum *_pxp_histogram_mask_condition* pxp_histogram_mask_condition_t
PXP histogram mask condition.

typedef struct *_pxp_histogram_config* pxp_histogram_config_t
PXP Histogram configuration.

typedef struct *_pxp_histogram_mask_result* pxp_histogram_mask_result_t
PXP Histogram mask result.

typedef struct *_pxp_wfea_engine_config* pxp_wfea_engine_config_t
PXP WFE-A engine configuration.

PXP_LUT_TABLE_BYTE

PXP_INTERNAL_RAM_LUT_BYTE

PXP_SHARE_ROTATE

PXP_USE_PATH

PXP_COMBINE_BYTE_TO_WORD(dataAddr)

struct _pxp_output_buffer_config
#include <fsl_pxp.h> PXP output buffer configuration.

Public Members

pxp_output_pixel_format_t pixelFormat
Output buffer pixel format.

pxp_interlaced_output_mode_t interlacedMode
Interlaced output mode.

uint32_t buffer0Addr
Output buffer 0 address.

uint32_t buffer1Addr
Output buffer 1 address, used for UV data in YUV 2-plane mode, or field 1 in output interlaced mode.

uint16_t pitchBytes
: Number of bytes between two vertically adjacent pixels.

uint16_t width
: Pixels per line.

uint16_t height
: How many lines in output buffer.

struct __pxp_ps_buffer_config
: *#include <fsl_pxp.h>* PXP process surface buffer configuration.

Public Members

pxp_ps_pixel_format_t pixelFormat
: PS buffer pixel format.

bool swapByte
: For each 16 bit word, set true to swap the two bytes.

uint32_t bufferAddr
: Input buffer address for the first panel.

uint32_t bufferAddrU
: Input buffer address for the second panel.

uint32_t bufferAddrV
: Input buffer address for the third panel.

uint16_t pitchBytes
: Number of bytes between two vertically adjacent pixels.

struct __pxp_as_buffer_config
: *#include <fsl_pxp.h>* PXP alphs surface buffer configuration.

Public Members

pxp_as_pixel_format_t pixelFormat
: AS buffer pixel format.

uint32_t bufferAddr
: Input buffer address.

uint16_t pitchBytes
: Number of bytes between two vertically adjacent pixels.

struct __pxp_as_blend_config
: *#include <fsl_pxp.h>* PXP alpha surface blending configuration.

Public Members

uint8_t alpha
: User defined alpha value, only used when alphaMode is kPXP_AlphaOverride or kPXP_AlphaRop.

bool invertAlpha
: Set true to invert the alpha.

pxp_alpha_mode_t alphaMode
Alpha mode.

pxp_rop_mode_t ropMode
ROP mode, only valid when alphaMode is kPXP_AlphaRop.

struct __pxp__as__blend__secondary__config
#include <fsl_pxp.h> PXP secondary alpha surface blending engine configuration.

Public Members

bool invertAlpha
Set true to invert the alpha.

bool ropEnable
Enable rop mode.

pxp_rop_mode_t ropMode
ROP mode, only valid when ropEnable is true.

struct __pxp__csc2__config
#include <fsl_pxp.h> PXP CSC2 configuration.

Converting from YUV/YCbCr color spaces to the RGB color space uses the following equation structure:

R = A1(Y+D1) + A2(U+D2) + A3(V+D3) G = B1(Y+D1) + B2(U+D2) + B3(V+D3) B = C1(Y+D1) + C2(U+D2) + C3(V+D3)

Converting from the RGB color space to YUV/YCbCr color spaces uses the following equation structure:

Y = A1*R + A2*G + A3*B + D1 U = B1*R + B2*G + B3*B + D2 V = C1*R + C2*G + C3*B + D3

Public Members

pxp_csc2_mode_t mode
Convertion mode.

float A1
A1.

float A2
A2.

float A3
A3.

float B1
B1.

float B2
B2.

float B3
B3.

float C1
C1.

float C2
C2.

float C3
C3.

int16_t D1
D1.

int16_t D2
D2.

int16_t D3
D3.

struct __pxp_dither_final_lut_data
#include <fsl_pxp.h> PXP dither final LUT data.

Public Members

uint32_t data_3_0
Data 3 to data 0. Data 0 is the least significant byte.

uint32_t data_7_4
Data 7 to data 4. Data 4 is the least significant byte.

uint32_t data_11_8
Data 11 to data 8. Data 8 is the least significant byte.

uint32_t data_15_12
Data 15 to data 12. Data 12 is the least significant byte.

struct __pxp_dither_config
#include <fsl_pxp.h> PXP dither configuration.

Public Members

uint32_t enableDither0
Enable dither engine 0 or not, set 1 to enable, 0 to disable.

uint32_t enableDither1
Enable dither engine 1 or not, set 1 to enable, 0 to disable.

uint32_t enableDither2
Enable dither engine 2 or not, set 1 to enable, 0 to disable.

uint32_t ditherMode0
Dither mode for dither engine 0. See _pxp_dither_mode.

uint32_t ditherMode1
Dither mode for dither engine 1. See _pxp_dither_mode.

uint32_t ditherMode2
Dither mode for dither engine 2. See _pxp_dither_mode.

uint32_t quantBitNum
Number of bits quantize down to, the valid value is 1~7.

uint32_t lutMode

How to use the memory LUT, see _pxp_dither_lut_mode. This must be set to kPXP_DitherLutOff if any dither engine uses kPXP_DitherOrdered mode.

uint32_t idxMatrixSize0

Size of index matrix used for dither for dither engine 0, see _pxp_dither_matrix_size.

uint32_t idxMatrixSize1

Size of index matrix used for dither for dither engine 1, see _pxp_dither_matrix_size.

uint32_t idxMatrixSize2

Size of index matrix used for dither for dither engine 2, see _pxp_dither_matrix_size.

uint32_t enableFinalLut

Enable the final LUT, set 1 to enable, 0 to disable.

struct pxp_porter_duff_config_t

#include <fsl_pxp.h> PXP Porter Duff configuration.

Public Members

uint32_t enable

Enable or disable Porter Duff.

uint32_t srcFactorMode

Source layer (or AS, s1) factor mode, see pxp_porter_duff_factor_mode.

uint32_t dstGlobalAlphaMode

Destination layer (or PS, s0) global alpha mode, see pxp_porter_duff_global_alpha_mode.

uint32_t dstAlphaMode

Destination layer (or PS, s0) alpha mode, see pxp_porter_duff_alpha_mode.

uint32_t dstColorMode

Destination layer (or PS, s0) color mode, see pxp_porter_duff_color_mode.

uint32_t dstFactorMode

Destination layer (or PS, s0) factor mode, see pxp_porter_duff_factor_mode.

uint32_t srcGlobalAlphaMode

Source layer (or AS, s1) global alpha mode, see pxp_porter_duff_global_alpha_mode.

uint32_t srcAlphaMode

Source layer (or AS, s1) alpha mode, see pxp_porter_duff_alpha_mode.

uint32_t srcColorMode

Source layer (or AS, s1) color mode, see pxp_porter_duff_color_mode.

uint32_t dstGlobalAlpha

Destination layer (or PS, s0) global alpha value, 0~255.

uint32_t srcGlobalAlpha

Source layer (or AS, s1) global alpha value, 0~255.

struct __pxp_pic_copy_config

#include <fsl_pxp.h> PXP Porter Duff blend mode. Note: don't change the enum item value.

Public Members

uint32_t srcPicBaseAddr
: Source picture base address.

uint16_t srcPitchBytes
: Pitch of the source buffer.

uint16_t srcOffsetX
: Copy position in source picture.

uint16_t srcOffsetY
: Copy position in source picture.

uint32_t destPicBaseAddr
: Destination picture base address.

uint16_t destPitchBytes
: Pitch of the destination buffer.

uint16_t destOffsetX
: Copy position in destination picture.

uint16_t destOffsetY
: Copy position in destination picture.

uint16_t width
: Pixel number each line to copy.

uint16_t height
: Lines to copy.

pxp_as_pixel_format_t pixelFormat
: Buffer pixel format.

struct __pxp_block_format_config
: *#include <fsl_pxp.h>* PXP fetch engine block configuration.

Public Members

bool enableblock
: Enable to use block mode instead of scanline mode. Note: 1.Make sure to enable if rotate or flip mode is enabled. 2.Block mode cannot work on 64bpp data stream where activeBits = 64. 3. If LUT processing is in the path between the fetch and store engind, block mode must be enabled.

bool blockSize16
: Enable to use 16*16 block, otherwise it will be 8*8 block.

pxp_scanline_burst_t burstLength
: When using scanline mode, configure this for burst length.

struct __pxp_fetch_shift_component
: *#include <fsl_pxp.h>* PXP fetch engine shift component configuration.

  Fetch engine can divded each word into 4 components and shift them.

struct __pxp_fetch_shift_config
: *#include <fsl_pxp.h>* PXP fetch engine shift configuration.

  Fetch engine can divded each word into 4 components and shift them. For example, to change YUV444 to YVU444, U and V positions need to be shifted: OFFSET0=8, OFFSET1=0, OFFSET2=16, OFFSET3=24, WIDTH0/1/2/3=8

struct __pxp_fetch_engine_config

#include <fsl_pxp.h> PXP fetch engine configuration for one of the channel.

Public Members

bool channelEnable

Enable channel.

uint32_t inputBaseAddr0

The input base address. Used for Y plane input when pixel format is YUV422_2p.

uint32_t inputBaseAddr1

Must configure this for UV plane when input pixel format is YUV422_2p.

uint16_t totalHeight

Total height for the actual fetch size.

uint16_t totalWidth

Total width for the actual fetch size.

uint16_t pitchBytes

Channel input pitch

uint16_t ulcX

X coordinate of upper left coordinate in pixels of the active area of the total input memory

uint16_t ulcY

Y coordinate of upper left coordinate in pixels of the active area of the total input memory

uint16_t lrcX

X coordinate of Lower right coordinate in pixels of the active area of the total input memory

uint16_t lrcY

Y coordinate of Lower right coordinate in pixels of the active area of the total input memory

uint32_t backGroundColor

Pixel value of the background color for the space outside the active area.

pxp_fetch_interface_mode_t interface

Interface mode, normal/bypass/handshake

pxp_active_bits_t activeBits

Input active bits.

pxp_fetch_pixel_format_t pixelFormat

Input pixel fetch format

bool expandEnable

If enabled, input pixel will be expanded to ARGB8888, RGB888 or YUV444 of 32-bit format at the output.

pxp_flip_mode_t flipMode

Flip the fetched input.

pxp_rotate_degree_t rotateDegree

Rotate the fetched input.

pxp_block_config_t fetchFormat
Block mode configuration. Make sure to enable block if rotate or flip mode is enabled.

pxp_fetch_shift_config_t shiftConfig
Shift operation configuration.

pxp_fetch_output_word_order_t wordOrder
Output word order when using 2 channels for 64-bit mode.

struct __pxp__store__shift__config
#include <fsl_pxp.h> Shift configuration for PXP store engine.

Public Members

bool shiftBypass
Bypass the data shift

uint64_t *pDataShiftMask
Pointer to mask0~mask7 to mask the 64-bit of output data, data is masked first then shifted according to width.

uint8_t *pDataShiftWidth
Pointer to width0~width7. Bit 7 is for shifted direction, 0 to right. Bit0~5 is for shift width.

uint8_t *pFlagShiftMask
Pointer to mask0~mask7 to mask the 8-bit of output flag, flag is masked first then shifted according to width.

uint8_t *pFlagShiftWidth
Pointer to width0~width7. Bit 6 is for shifted direction, 0 to right. Bit0~5 is for shift width.

struct __pxp__store__engine__config
#include <fsl_pxp.h> PXP store engine configuration for one of the channel.

Public Members

bool channelEnable
Enable channel.

uint32_t outputBaseAddr0
The channel 0 output address if using 2 channels. If using 1 channel(must be channel 0) and YUV422_2p output format, is for Y plane address.

uint32_t outputBaseAddr1
The channel 1 output address if using 2 channels. If using 1 channel(must be channel 0) and YUV422_2p output format, is for UV plane address.

uint16_t totalHeight
Total height for the actual store size.

uint16_t totalWidth
Total width for the actual store size.

uint16_t pitchBytes
Channel input pitch

pxp_store_interface_mode_t interface

Interface mode, normal/bypass/handshake/dual. Make sure 2 channels use the same mode if both enabled.

pxp_active_bits_t activeBits

Output active bits.

pxp_store_yuv_mode_t yuvMode

Whether to output YUV pixel format.

bool useFixedData

Whether to use fixed value for the output data. Can be used to write fixed value to specific memory location for memory initialization.

uint32_t fixedData

The value of the fixed data.

bool packInSelect

When enabled, channel 0 will select low 32 bit shift out data to pack while channel i select high 32 bit, otherwise all 64-bit of data will be selected.

pxp_block_config_t storeFormat

The format to store data, block or otherwise.

pxp_store_shift_config_t shiftConfig

Shift operation configuration.

struct __pxp__cfa__config

#include <fsl_pxp.h> PXP pre-dither CFA engine configuration.

Public Members

bool bypass

Bypass the CFA process

pxp_cfa_input_format_t pixelInFormat

The pixel input format for CFA.

uint8_t arrayWidth

CFA array vertical size in pixels, min 3 max 15.

uint8_t arrayHeight

CFA array horizontal size in pixels, min 3 max 15.

uint16_t totalHeight

Total height for the buffer size, make sure it is aligned with the dither fetch engine and dither engine.

uint16_t totalWidth

Total width for the buffer size, make sure it is aligned with the dither fetch engine and dither engine.

uint32_t *cfaValue

Pointer to the value for the CFA array. 2-bit per component: 00-R,01-G,10-B,11-W. For a 4x4 array, 32 bits are need.

struct __pxp__histogram__config

#include <fsl_pxp.h> PXP Histogram configuration.

Public Members

bool enable

Enable histogram process.

uint8_t *pParamValue

Pointer to the 62(2+4+8+16+32) byte of param value for 2-level, 4-level.....32-level parameters. Only low 5-bit of each byte is valid.

uint8_t lutValueOffset

The starting bit position of the LUT value.

uint8_t lutValueWidth

The bit width of the LUT value, should be no more than 6 bits since only 63 LUTs are supported.

bool enableMask

Enable mask operation.

uint8_t maskValue0

Value 0 for the condition judgement.

uint8_t maskValue1

Value 1 for the condition judgement.

uint8_t maskOffset

The starting bit position of the field to be checked against mask condition.

uint8_t maskWidth

The width of the field to be checked against mask condition.

pxp_histogram_mask_condition_t condition

The mask condition.

uint16_t totalHeight

Total height for the buffer size, make sure it is aligned with the output of legacy flow or the WFE-A/B engine.

uint16_t totalWidth

Total width for the buffer size, make sure it is aligned with the output of legacy flow or the WFE-A/B engine.

struct __pxp_histogram_mask_result

#include <fsl_pxp.h> PXP Histogram mask result.

Public Members

uint32_t pixelCount

The total count of the pixels that pass the mask(collided pixels).

uint32_t minX

The x offset of the ULC of the minimal histogram that covers all passed pixels.

uint32_t minY

The y offset of the ULC of the minimal histogram that covers all passed pixels.

uint32_t maxX

The x offset of the LRC of the minimal histogram that covers all passed pixels.

uint32_t maxY

The y offset of the LRC of the minimal histogram that covers all passed pixels.

uint64_t lutlist
The 64-bit LUT list of collided pixels, if pixel of LUT17 is collided, bit17 in the list is set.

struct __pxp__wfea__engine__config
#include <fsl_pxp.h> PXP WFE-A engine configuration.

Public Members

uint32_t y4Addr
Address for Y4 buffer.

uint32_t y4cAddr
Address for Y4C buffer, {Y4[3:0],3'b000,collision}, 8bpp.

uint32_t wbAddr
Address for EPDC working buffer.

uint16_t updateWidth
Width of the update area.

uint16_t updateHeight
Height of the update area.

uint16_t updatePitch
Pitch of the update area.

uint16_t ulcX
X coordinate of upper left coordinate of the total input memory

uint16_t ulcY
Y coordinate of upper left coordinate of the total input memory

uint16_t resX
Horizontal resolution in pixels.

uint8_t lutNum
The EPDC LUT number for the update.

bool fullUpdateEnable
Enable full update.

bool alphaEnable
Enable alpha field, upd is {Y4[3:0],3'b000,alpha} format, otherwise its {Y4[3:0],4'b0000}.

bool detectionOnly
Detection only, do not write working buffer.

2.56 Reset

enum __pcc__reset
Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control in PCC registers

Values:

enumerator kRESET__IpInvalid

enumerator kRESET_Wdog0

enumerator kRESET_Wdog1

enumerator kRESET_Flexspi0

enumerator kRESET_Lpit0

enumerator kRESET_Flexio0

enumerator kRESET_I3c0

enumerator kRESET_Lpspi0

enumerator kRESET_Lpspi1

enumerator kRESET_Adc0

enumerator kRESET_Dac0

enumerator kRESET_Dac1

enumerator kRESET_Flexspi1

enumerator kRESET_Tpm0

enumerator kRESET_Tpm1

enumerator kRESET_Lpi2c0

enumerator kRESET_Lpi2c1

enumerator kRESET_Lpuart0

enumerator kRESET_Lpuart1

enumerator kRESET_Sai0

enumerator kRESET_Sai1

enumerator kRESET_Adc1

enumerator kRESET_Flexcan

enumerator kRESET_Wdog2

enumerator kRESET_Tpm2

enumerator kRESET_Tpm3

enumerator kRESET_Mrt

enumerator kRESET_Lpi2c2

enumerator kRESET_Lpi2c3

enumerator kRESET_I3c1

enumerator kRESET_Lpuart2

enumerator kRESET_Lpuart3

enumerator kRESET_Lpspi2

enumerator kRESET_Lpspi3

enumerator kRESET_Sai2

enumerator kRESET_Sai3

enumerator kRESET_Micfil

enumerator kRESET_Wdog3

enumerator kRESET_Wdog4

enumerator kRESET_Lpit1

enumerator kRESET_Tpm4

enumerator kRESET_Tpm5

enumerator kRESET_Flexio1

enumerator kRESET_I3c2

enumerator kRESET_Lpi2c4

enumerator kRESET_Lpi2c5

enumerator kRESET_Lpuart4

enumerator kRESET_Lpuart5

enumerator kRESET_Lpspi4

enumerator kRESET_Lpspi5

enumerator kRESET_Flexspi2

enumerator kRESET_Tpm6

enumerator kRESET_Tpm7

enumerator kRESET_Lpi2c6

enumerator kRESET_Lpi2c7

enumerator kRESET_Lpuart6

enumerator kRESET_Lpuart7

enumerator kRESET_Sai4

enumerator kRESET_Sai5

enumerator kRESET_Usdhc0

enumerator kRESET_Usdhc1

enumerator kRESET_Usdhc2

enumerator kRESET_Usb0

enumerator kRESET_Usb0Phy

enumerator kRESET_Usb1

enumerator kRESET_Usb1Phy

enumerator kRESET_Enet

enumerator kRESET_Tpm8

enumerator kRESET_Sai6

enumerator kRESET_Sai7

enumerator kRESET_Spdif

enumerator kRESET_Isi

enumerator kRESET_Csi

enumerator kRESET_Dsi

enumerator kRESET_Wdog5

enumerator kRESET_Epdc

enumerator kRESET_Pxp

enumerator kRESET_Gpu2d

enumerator kRESET_Gpu3d

enumerator kRESET_Dcnano

enumerator kRESET_Lpddr4

enumerator kRESET_CsiClkUi

typedef enum *_pcc_reset* pcc_reset_t

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control in PCC registers

typedef *pcc_reset_t* reset_ip_name_t

IP reset handle.

void RESET_SetPeripheralReset(*reset_ip_name_t* peripheral)

Assert reset to peripheral.

Asserts reset signal to specified peripheral module.

Parameters

- peripheral – Assert reset to this peripheral.

void RESET_ClearPeripheralReset(*reset_ip_name_t* peripheral)

Clear reset to peripheral.

Clears reset signal to specified peripheral module, allows it to operate.

Parameters

- peripheral – Clear reset to this peripheral.

void RESET_PeripheralReset(*reset_ip_name_t* peripheral)

Reset peripheral module.

Reset peripheral module.

Parameters

- peripheral – Peripheral to reset.

FSL_RESET_DRIVER_VERSION

reset driver version 2.0.0.

DAC_RSTS
Array initializers with peripheral reset bits

ENET_RSTS

EPDC_RSTS

FLEXCAN_RSTS

FLEXIO_RSTS

FLEXSPI_RSTS

I3C_RSTS

ISI_RSTS

LCDIF_RSTS

LPADC_RSTS

LPI2C_RSTS

LPIT_RSTS

LPSPI_RSTS

LPUART_RSTS

MIPI_DSI_RSTS

MRT_RSTS

PXP_RSTS

SAI_RSTS

SPDIF_RSTS

TPM_RSTS

USDHC_RSTS

WDOG_RSTS

2.57 RGPIO: Rapid General-Purpose Input/Output Driver

FSL_RGPIO_DRIVER_VERSION
RGPIO driver version 2.2.0.

enum _rgpio_pin_direction
RGPIO direction definition.

Values:

enumerator kRGPIO_DigitalInput
Set current pin as digital input

enumerator kRGPIO_DigitalOutput
Set current pin as digital output

enum _rgpio_checker_attribute

RGPIO checker attribute.

Values:

enumerator kRGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW

User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW

User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kRGPIO_UsernonsecureNUsersecureNPrivilegedsecureR

User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kRGPIO_UsernonsecureNUsersecureNPrivilegedsecureN

User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kRGPIO_IgnoreAttributeCheck

Ignores the attribute check

enum _rgpio_interrupt_sel

Configures the interrupt generation condition.

Values:

enumerator kRGPIO_InterruptOutput0

Interrupt/DMA request/trigger output 0.

enumerator kRGPIO_InterruptOutput1

Interrupt/DMA request/trigger output 1.

enumerator kRGPIO_InterruptOutput2

Interrupt/DMA request/trigger output 2.

enumerator kRGPIO_InterruptOutput3

Interrupt/DMA request/trigger output 3.

enum _rgpio_interrupt_config

Configures the interrupt generation condition.

Values:

enumerator kRGPIO_InterruptOrDMADisabled

Interrupt/DMA request is disabled.

enumerator kRGPIO_DMARisingEdge

DMA request on rising edge.

enumerator kRGPIO_DMAFallingEdge

DMA request on falling edge.

enumerator kRGPIO_DMAEitherEdge
DMA request on either edge.

enumerator kRGPIO_FlagRisingEdge
Flag sets on rising edge.

enumerator kRGPIO_FlagFallingEdge
Flag sets on falling edge.

enumerator kRGPIO_FlagEitherEdge
Flag sets on either edge.

enumerator kRGPIO_InterruptLogicZero
Interrupt when logic zero.

enumerator kRGPIO_InterruptRisingEdge
Interrupt on rising edge.

enumerator kRGPIO_InterruptFallingEdge
Interrupt on falling edge.

enumerator kRGPIO_InterruptEitherEdge
Interrupt on either edge.

enumerator kRGPIO_InterruptLogicOne
Interrupt when logic one.

enumerator kRGPIO_ActiveHighTriggerOutputEnable
Enable active high-trigger output.

enumerator kRGPIO_ActiveLowTriggerOutputEnable
Enable active low-trigger output.

typedef enum *_rgpio_pin_direction* rgpio_pin_direction_t
RGPIO direction definition.

typedef enum *_rgpio_checker_attribute* rgpio_checker_attribute_t
RGPIO checker attribute.

typedef enum *_rgpio_interrupt_sel* rgpio_interrupt_sel_t
Configures the interrupt generation condition.

typedef enum *_rgpio_interrupt_config* rgpio_interrupt_config_t
Configures the interrupt generation condition.

typedef struct *_rgpio_pin_config* rgpio_pin_config_t
The RGPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

struct _rgpio_pin_config
#include <fsl_rgpio.h> The RGPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

rgpio_pin_direction_t pinDirection
RGPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

2.58 RGPIO Driver

void RGPIO_PinInit(RGPIO_Type *base, uint32_t pin, const *rgpio_pin_config_t* *config)
Initializes a RGPIO pin used by the board.

To initialize the RGPIO, define a pin configuration, as either input or output, in the user file. Then, call the RGPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
 Define a digital input pin configuration,
rgpio_pin_config_t config =
{
  kRGPIO_DigitalInput,
  0,
}
Define a digital output pin configuration,
rgpio_pin_config_t config =
{
  kRGPIO_DigitalOutput,
  0,
}
```

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- pin – RGPIO port pin number
- config – RGPIO pin configuration pointer

uint32_t RGPIO_GetInstance(RGPIO_Type *base)
Gets the RGPIO instance according to the RGPIO base.

Parameters

- base – RGPIO peripheral base pointer(PTA, PTB, PTC, etc.)

Return values
RGPIO – instance

static inline *rgpio_pin_direction_t* RGPIO_GetPinDirection(RGPIO_Type *base, uint32_t pin)
Gets the current direction of a RGPIO pin.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- pin – RGPIO port pin number

Return values
RGPIO – pin direction

- kRGPIO_DigitalInput: pin is configured as digital input.

- kRGPIO_DigitalOutput: pin is configured as digital output.

static inline void RGPIO_PinWrite(RGPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple RGPIO pins to the logic 1 or 0.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- pin – RGPIO pin number
- output – RGPIO pin output logic level.
  - 0: corresponding pin output low-logic level.
  - 1: corresponding pin output high-logic level.

static inline void RGPIO_WritePinOutput(RGPIO_Type *base, uint32_t pin, uint8_t output)

Sets the output level of the multiple RGPIO pins to the logic 1 or 0.

Deprecated:

Do not use this function. It has been superceded by RGPIO_PinWrite.

static inline void RGPIO_PortSet(RGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple RGPIO pins to the logic 1.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro

static inline void RGPIO_SetPinsOutput(RGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple RGPIO pins to the logic 1.

Deprecated:

Do not use this function. It has been superceded by RGPIO_PortSet.

static inline void RGPIO_PortClear(RGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple RGPIO pins to the logic 0.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro

static inline void RGPIO_ClearPinsOutput(RGPIO_Type *base, uint32_t mask)

Sets the output level of the multiple RGPIO pins to the logic 0.

Deprecated:

Do not use this function. It has been superceded by RGPIO_PortClear.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro

static inline void RGPIO_PortToggle(RGPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple RGPIO pins.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro

static inline void RGPIO_TogglePinsOutput(RGPIO_Type *base, uint32_t mask)

Reverses the current output logic of the multiple RGPIO pins.

Deprecated:

Do not use this function. It has been superceded by RGPIO_PortToggle.

static inline uint32_t RGPIO_PinRead(RGPIO_Type *base, uint32_t pin)

Reads the current input value of the RGPIO port.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- pin – RGPIO pin number

Return values

RGPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline uint32_t RGPIO_ReadPinInput(RGPIO_Type *base, uint32_t pin)

Reads the current input value of the RGPIO port.

Deprecated:

Do not use this function. It has been superceded by RGPIO_PinRead.

static inline void RGPIO_EnablePortInput(RGPIO_Type *base, uint32_t mask, bool enable)

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number mask
- enable – RGPIO digital input enable/disable flag.

void RGPIO_CheckAttributeBytes(RGPIO_Type *base, *rgpio_checker_attribute_t* attribute)

The RGPIO module supports a device-specific number of data ports, organized as 32-bit words. Each 32-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the RGPIO programming model. The attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro

static inline void RGPIO_SetPinInterruptConfig(RGPIO_Type *base, uint32_t pin,
rgpio_interrupt_sel_t sel,
rgpio_interrupt_config_t config)

Configures the gpio pin interrupt/DMA request.

Parameters

- base – RGPIO peripheral base pointer.
- pin – RGPIO pin number.
- sel – RGPIO pin interrupt selection(0-3).
- config – RGPIO pin interrupt configuration.

static inline void _SetMultipleInterruptPinsConfig(RGPIO_Type *base, uint32_t mask,
rgpio_interrupt_sel_t sel,
rgpio_interrupt_config_t config)

Sets the gpio interrupt configuration in ICR register for multiple pins.

Parameters

- base – RGPIO peripheral base pointer (RGPIOA, RGPIOB, RGPIOC, and so on.)
- mask – RGPIO pin number macro.
- sel – RGPIO pin interrupt selection(0-3).
- config – RGPIO pin interrupt configuration.

static inline uint32_t RGPIO_GetPinsInterruptFlags(RGPIO_Type *base, *rgpio_interrupt_sel_t* sel)

Reads the whole gpio status flag.

If a pin is configured to generate the DMA request, the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic one is written to that flag. If configured for a level sensitive interrupt that remains asserted, the flag is set again immediately.

Parameters

- base – RGPIO peripheral base pointer.
- sel – RGPIO pin interrupt selection(0-3).

Returns

Current gpio interrupt status flags, for example, 0x00010001 means the pin 0 and 16 have the interrupt.

static inline void RGPIO_ClearPinsInterruptFlags(RGPIO_Type *base, *rgpio_interrupt_sel_t* sel,
uint32_t mask)

Clears the multiple pin interrupt status flag.

Parameters

- base – RGPIO peripheral base pointer.
- sel – RGPIO pin interrupt selection(0-3).
- mask – RGPIO pin number macro.

2.59 RTD_CMC: Real Time Domain Core Mode Controller Driver

void RTDCMC_SetClockMode(CMC_Type *base, *cmc_clock_mode_t* mode)

Sets clock mode.

This function configs the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

Parameters

- base – CMC peripheral base address.
- mode – System clock mode.

static inline void RTDCMC_LockClockModeSetting(CMC_Type *base)

Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- base – CMC peripheral base address.

static inline *cmc_core_clock_gate_status_t* RTDCMC_GetCoreClockGatedStatus(CMC_Type *base)

Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void RTDCMC_ClearCoreClockGatedStatus(CMC_Type *base)

Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline uint8_t RTDCMC_GetWakeupSource(CMC_Type *base)

Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See _rtd_cmc_wakeup_sources for details.

static inline *cmc_clock_mode_t* RTDCMC_GetClockMode(CMC_Type *base)

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Low Power status.

static inline uint32_t RTDCMC_GetSystemResetStatus(CMC_Type *base)

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- base – CMC peripheral base address.

Returns

The most recent system reset status. See _rtd_cmc_system_reset_sources for details.

static inline uint32_t RTDCMC_GetStickySystemResetStatus(CMC_Type *base)

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See _rtd_cmc_system_reset_sources for details.

static inline void RTDCMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)

Clears the sticky system reset status flags.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the sticky system reset status to be cleared.

void RTDCMC_SetPowerModeProtection(CMC_Type *base, uint8_t allowedModes)

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power doamin.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use CMC_SetPowerModeProtection(CMC_base, kRTDCMC_AllowSleepMode|kRTDCMC_AllowDeepSleepMode). To allow all low power modes, use CMC_SetPowerModeProtection(CMC_base, kRTDCMC_AllowAllLowPowerModes).

Parameters

- base – CMC peripheral base address.
- allowedModes – Bitmaps of the allowed power modes. See _rtd_cmc_power_mode_protection for details.

static inline void RTDCMC_LockPowerModeProtectionSetting(CMC_Type *base)

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- base – CMC peripheral base address.

void RTDCMC_EnterLowPowerMode(CMC_Type *base, *cmc_low_power_mode_t* lowPowerMode)

Enter into the selected low power mode, please make sure the selected power mode has been enabled in the protection level.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See cmc_low_power_mode_t for details.

static inline void RTDCMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See _rtd_cmc_system_reset_interrupt_enable for details.

static inline void RTDCMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – System reset interrupts. See _rtd_cmc_system_reset_interrupt_enable for details.

static inline uint32_t RTDCMC_GetSystemResetInterruptFlags(CMC_Type *base)

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns

System reset interrupt flags. See _rtd_cmc_system_reset_interrupt_flag for details.

static inline void RTDCMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- base – CMC peripheral base address.
- mask – System Reset interrupt flags. See _rtd_cmc_system_reset_interrupt_flag for details.

static inline void RTDCMC_EnablePowerSwitchDomainOutOfResetInterrupt(CMC_Type *base, uint32_t mask)

Enable power switch domain out of reset interrupts.

Parameters

- base – CMC peripheral base address.

- mask – Power switch domain out of reset interrupt mask, should be the OR'ed value of _rtd_cmc_power_switch_domain_out_of_reset_interrupt_enable.

static inline void RTDCMC_DisablePowerSwitchDomainOutOfResetInterrupt(CMC_Type *base, uint32_t mask)

Disable power switch domain out of reset interrupts.

Parameters

- base – CMC peripheral base address.
- mask – Power switch domain out of reset interrupt mask, should be the OR'ed value of _rtd_cmc_power_switch_domain_out_of_reset_interrupt_enable.

static inline uint32_t RTDCMC_GetPowerSwitchDomainOutOfResetInterruptFlags(CMC_Type *base)

Get power switch domain out of reset interrupt flags.

Parameters

- base – CMC peripheral base address.

Returns

Power switch domain out of reset interrupt flags, shall be the OR'ed value of _rtd_cmc_power_switch_domain_out_of_reset_interrupt_flag.

static inline void RTDCMC_ClearPowerSwitchDomainOutOfResetInterruptFlags(CMC_Type *base, uint32_t mask)

Clear power switch domain out of reset interrupt flags.

Parameters

- base – CMC peripheral base address.
- mask – The mask of power switch domain out of reset interrupt flags to clear.

static inline bool RTDCMC_CheckRealTimeDomainPowerSwitchDomainStatus(CMC_Type *base, *rtd_cmc_power_switch_domain_nam* domainName)

Check the status of selected power switch domain.

Parameters

- base – CMC peripheral base address.
- domainName – The selected domain name, please refer to rtd_cmc_power_switch_domain_name_t.

Return values

- True – The power switch domain is open.
- False – The power switch domain is closed.

static inline uint8_t RTDCMC_GetBootConfigPinLogic(CMC_Type *base)

Gets the logic state of the BOOT_CONFIGn pin.

This function returns the logic state of the BOOT_CONFIGn pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the BOOT_CONFIGn pin on the last negation of RESET_b pin.

static inline void RTDCMC_ClearBootConfig(CMC_Type *base)

Clears Boot_CONFIG pin state.

Parameters

- base – CMC peripheral base address.

static inline void RTDCMC_ForceBootConfiguration(CMC_Type *base, bool assert, uint32_t bitsMask)

Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Confign pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.
- bitsMask – The mask of the corresponding bits in the Mode register to assert or not on the next system reset.

static inline void RTDCMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)

Enable/Disable Non maskable Pin interrupt.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Non maskable pin interrupt. true - enable Non-maskable pin interrupt. false - disable Non-maskable pin interupt.

static inline void RTDCMC_EnableDebugOperation(CMC_Type *base, bool enable)

Enables/Disables debug Operation when the core sleep.

This function configs what happens to debug when core sleeps.

Parameters

- base – CMC peripheral base address.
- enable – Enable or disable Debug when Core is sleeping. true - Debug remains enabled when the core is sleeping. false - Debug is disabled when the core is sleeping.

FSL_RTD_CMC_DRIVER_VERSION

RTD_CMC driver version 2.0.2.

enum _rtd_cmc_power_mode_protection

RTD_CMC power mode Protection enumeration.

Values:

enumerator kRTDCMC_AllowSleepMode

Allow Sleep mode.

enumerator kRTDCMC_AllowDeepSleepMode

Allow Deep Sleep mode.

enumerator kRTDCMC_AllowPowerDownMode

Allow Power Down mode.

enumerator kRTDCMC_AllowDeepPowerDownMode

Allow Deep Power Down mode.

enumerator kRTDCMC_AllowHoldMode

Allow Hold mode.

enumerator kRTDCMC_AllowAllLowPowerModes
Allow all low power modes.

enum _rtd_cmc_wakeup_sources
Wake up sources from the previous low power mode entry.

Values:

enumerator kRTDCMC_WakeupFromResetInterruptOrPowerDown
Wakeup source is reset interrupt, or wake up from [Deep] Power Down.

enumerator kRTDCMC_WakeupFromDebugReuqest
Wakeup source is debug request.

enumerator kRTDCMC_WakeupFromInterrupt
Wakeup source is interrupt.

enumerator kRTDCMC_WakeupFromDMAWakeup
Wakeup source is DMA Wakeup.

enumerator kRTDCMC_WakeupFromWUURequest
Wakeup source is WUU request.

enum _rtd_cmc_system_reset_interrupt_enable
System Reset Interrupt enable enumeration.

Values:

enumerator kRTDCMC_InSystemProgrammingAccessPortResetInterruptEnable
ISP_AP Reset interrupt enable.

enumerator kRTDCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable
Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kRTDCMC_Watchdog0ResetInterruptEnable
Watchdog 0 Reset interrupt enable.

enumerator kRTDCMC_SoftwareResetInterruptEnable
Software Reset interrupt enable.

enumerator kRTDCMC_LockupResetInterruptEnable
Lockup Reset interrupt enable.

enumerator kRTDCMC_AppDomainMuSystemResetInterruptEnable

enumerator kRTDCMC_Watchdog1ResetInterruptEnable
Watchdog 1 Reset interrupt enable.

enumerator kRTDCMC_Watchdog5ResetInterruptEnable
Watchdog 5 Reset interrupt enable.

enumerator kRTDCMC_Watchdog2ResetInterruptEnable
Watchdog 2 Reset interrupt enable.

enum _rtd_cmc_power_switch_domain_out_of_reset_interrupt_enable
Power switch domain out of reset interrupt enable enumeration.

Values:

enumerator kRTDCMC_FusionPSDomainOutOfResetInterruptEnable
Fusion power switch domain out of reset interrupt enable.

enumerator kRTDCMC_FusionAlwaysOnPSDomainOutOfResetInterruptEnable
Fusion always on power switch domain out of reset interrupt enable.

enum _rtd_cmc_system_reset_interrupt_flag

CMC System Reset Interrupt Status flag.

Values:

enumerator kRTDCMC_InSystemProgrammingAccessPortResetDAPResetInterruptFlag

DAP Reset interrupt flag.

enumerator kRTDCMC_LowPowerAcknowledgeTimeoutResetFlag

Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kRTDCMC_Watchdog0ResetInterruptFlag

Watchdog 0 Reset interrupt flag.

enumerator kRTDCMC_SoftwareResetInterruptFlag

Software Reset interrupt flag.

enumerator kRTDCMC_LockupResetInterruptFlag

Lock up Reset interrupt flag.

enumerator kRTDCMC_AppDomainMuSystemResetInterruptFlag

Application Domain MU System Reset interrupt flag.

enumerator kRTDCMC_WatchdogSResetInterruptFlag

Watchdog S Reset interrupt flag.

enumerator kRTDCMC_WatchdogHifi4ResetInterruptFlag

Watchdog Hifi4 Reset interrupt flag.

enumerator kRTDCMC_WatchdogFunsionResetInterruptFlag

Watchdog Fusion Reset interrupt flag.

enumerator _rtd_cmc_power_switch_domain_out_of_reset_interrupt_flag

Power switch domain out of reset interrupt flags enumeration.

Values:

enumerator kRTDCMC_FusionPSDomainOutOfResetInterruptFlag

Fusion power switch domain out of reset interrupt flag.

enumerator kRTDCMC_FusionAlwaysOnPSDomainOutOfResetInterruptFlag

Fusion always on power switch domain out of reset interrupt flag.

enumerator _rtd_cmc_system_reset_sources

System reset sources enumeration.

Values:

enumerator kRTDCMC_WakeUpReset

The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kRTDCMC_PORReset

The reset caused by power on reset detection logic.

enumerator kRTDCMC_HLVDReset

The reset caused by a High or Low Voltage Detect.

enumerator kRTDCMC_WarmReset

The last reset source is a warm reset source.

enumerator kRTDCMC_FatalReset

The last reset source is a fatal reset source.

enumerator kRTDCMC_PinReset
The reset caused by the RESET_b pin.

enumerator kRTDCMC_ISP_APReset
The reset caused by a reset request from in-system programming access port.

enumerator kRTDCMC_ResetTimeout
The reset caused by a timeout or other error condition in the system reset generation.

enumerator kRTDCMC_LowPowerAcknowledgeTimeoutReset
The reset caused by a timeout in low power mode entry logic.

enumerator kRTDCMC_RtdCgcLocReset
The reset caused by real time domain clock generation and control loss-of-clock reset.

enumerator kRTDCMC_Watchdog0Reset
The reset caused by a WatchDog 0 timeout.

enumerator kRTDCMC_SoftwareReset
The reset caused by a software reset request.

enumerator kRTDCMC_LockUpReset
The reset caused by the ARM core indication of a LOCKUP event.

enumerator kRTDCMC_AdMuReset
The reset caused by application domain MU system.

enumerator kRTDCMC_RtdCgcLosReset
The reset caused by RTD clock generation and control loss of sync.

enumerator kRTDCMC_LpavCgcLosReset
The reset caused by LPAV clock generation and control loss of sync.

enumerator kRTDCMC_uPowerReset
The reset caused by uPOWER WDOG System.

enumerator kRTDCMC_VbatReset
The reset caused by VBAT system reset.

enumerator kRTDCMC_WatchdogSReset
The reset caused by a WatchDog_S RTD timeout.

enumerator kRTDCMC_WatchdogHifi4Reset
The reset caused from the WDOG_HIFI4 timeout.

enumerator kRTDCMC_WatchdogFusionReset
The reset caused from the WDOG_FUSION timeout.

enumerator kRTDCMC_JTAGSystemReset
The reset caused by a JTAG system reset request.

enumerator kRTDCMC_SentinelLifeCycleReset
The reset caused by sentinel detecting an unexpected lifecycle coding.

enumerator kRTDCMC_SentinelReset
The reset caused by sentinel reset request.

enumerator kRTDCMC_SentinelSystemFailReset
The reset caused by a sentinel system fail condition.

enum _rtd_cmc_core_clock_gate_status
Indicate the core clock was gated.

Values:

enumerator kRTDCMC_CoreClockNotGated
Core clock not gated.

enumerator kRTDCMC_CoreClockGated
Core clock was gated due to low power mode entry.

enum _rtd_cmc_clock_mode
CMC clock mode enumeration.

Values:

enumerator kRTDCMC_GateNoneClock
No clock gating.

enumerator kRTDCMC_GateCoreClock
Gate Core clock.

enumerator kRTDCMC_GateCorePlatformClock
Gate Core clock and platform clock.

enumerator kRTDCMC_GateAllSystemClocks
Gate all System clocks, without getting core entering into low power mode.

enum _rtd_cmc_low_power_mode
CMC power mode enumeration.

Values:

enumerator kRTDCMC_ActiveMode
Select Active mode.

enumerator kRTDCMC_SleepMode
Select Sleep mode when a core executes WFI or WFE instruction.

enumerator kRTDCMC_DeepSleepMode
Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator kRTDCMC_PowerDownMode
Select Power Down mode when a core executes WFI or WFE instruction.

enumerator kRTDCMC_DeepPowerDown
Select Deep Power Down mode when a core executes WFI or WFE instruction.

enumerator kRTDCMC_HoldMode
Select Hold mode

enum _rtd_cmc_power_switch_domain_name
Values:

enumerator kRTDCMC_FusionAlwaysOnPowerSwitchDomain
Fusion always on power switch domain.

enumerator kRTDCMC_FusionPowerSwitchDomain
Fusion power switch domain.

enumerator kRTDCMC_RealtimePowerDomain
Realtime power switch domain

typedef enum *_rtd_cmc_core_clock_gate_status* cmc_core_clock_gate_status_t
Indicate the core clock was gated.

typedef enum *_rtd_cmc_clock_mode* cmc_clock_mode_t
CMC clock mode enumeration.

typedef enum *_rtd_cmc_low_power_mode* cmc_low_power_mode_t

CMC power mode enumeration.

typedef enum *_rtd_cmc_power_switch_domain_name* rtd_cmc_power_switch_domain_name_t

2.60 SAI: Serial Audio Interface

2.61 SAI Driver

void SAI_Init(I2S_Type *base)

Initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless SAI_Init is called to enable the clock.

Parameters

- base – SAI base pointer.

void SAI_Deinit(I2S_Type *base)

De-initializes the SAI peripheral.

This API gates the SAI clock. The SAI module can't operate unless SAI_TxInit or SAI_RxInit is called to enable the clock.

Parameters

- base – SAI base pointer.

void SAI_TxReset(I2S_Type *base)

Resets the SAI Tx.

This function enables the software reset and FIFO reset of SAI Tx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_RxReset(I2S_Type *base)

Resets the SAI Rx.

This function enables the software reset and FIFO reset of SAI Rx. After reset, clear the reset bit.

Parameters

- base – SAI base pointer

void SAI_TxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Tx.

Parameters

- base – SAI base pointer.
- enable – True means enable SAI Tx, false means disable.

void SAI_RxEnable(I2S_Type *base, bool enable)

Enables/disables the SAI Rx.

Parameters

- base – SAI base pointer.

- enable – True means enable SAI Rx, false means disable.

static inline void SAI_TxSetBitClockDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

static inline void SAI_RxSetBitClockDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx bit clock direction.

Select bit clock direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

static inline void SAI_RxSetFrameSyncDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Rx frame sync direction.

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

static inline void SAI_TxSetFrameSyncDirection(I2S_Type *base, *sai_master_slave_t* masterSlave)

Set Tx frame sync direction.

Select frame sync direction, master or slave.

Parameters

- base – SAI base pointer.
- masterSlave – reference sai_master_slave_t.

void SAI_TxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate, uint32_t bitWidth, uint32_t channelNumbers)

Transmitter bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.
- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

void SAI_RxSetBitClockRate(I2S_Type *base, uint32_t sourceClockHz, uint32_t sampleRate, uint32_t bitWidth, uint32_t channelNumbers)

Receiver bit clock rate configurations.

Parameters

- base – SAI base pointer.
- sourceClockHz – Bit clock source frequency.

- sampleRate – Audio data sample rate.
- bitWidth – Audio data bitWidth.
- channelNumbers – Audio channel numbers.

void SAI_TxSetBitclockConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_bit_clock_t* *config)

Transmitter Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

void SAI_RxSetBitclockConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_bit_clock_t* *config)

Receiver Bit clock configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – bit clock other configurations, can be NULL in slave mode.

void SAI_SetMasterClockConfig(I2S_Type *base, *sai_master_clock_t* *config)

Master clock configurations.

Parameters

- base – SAI base pointer.
- config – master clock configurations.

void SAI_TxSetFifoConfig(I2S_Type *base, *sai_fifo_t* *config)

SAI transmitter fifo configurations.

Parameters

- base – SAI base pointer.
- config – fifo configurations.

void SAI_RxSetFifoConfig(I2S_Type *base, *sai_fifo_t* *config)

SAI receiver fifo configurations.

Parameters

- base – SAI base pointer.
- config – fifo configurations.

void SAI_TxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_frame_sync_t* *config)

SAI transmitter Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_RxSetFrameSyncConfig(I2S_Type *base, *sai_master_slave_t* masterSlave, *sai_frame_sync_t* *config)

SAI receiver Frame sync configurations.

Parameters

- base – SAI base pointer.
- masterSlave – master or slave.
- config – frame sync configurations, can be NULL in slave mode.

void SAI_TxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)

SAI transmitter Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_RxSetSerialDataConfig(I2S_Type *base, *sai_serial_data_t* *config)

SAI receiver Serial data configurations.

Parameters

- base – SAI base pointer.
- config – serial data configurations.

void SAI_TxSetConfig(I2S_Type *base, *sai_transceiver_t* *config)

SAI transmitter configurations.

Parameters

- base – SAI base pointer.
- config – transmitter configurations.

void SAI_RxSetConfig(I2S_Type *base, *sai_transceiver_t* *config)

SAI receiver configurations.

Parameters

- base – SAI base pointer.
- config – receiver configurations.

void SAI_GetClassicI2SConfig(*sai_transceiver_t* *config, *sai_word_width_t* bitWidth, *sai_mono_stereo_t* mode, uint32_t saiChannelMask)

Get classic I2S mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

void SAI_GetLeftJustifiedConfig(*sai_transceiver_t* *config, *sai_word_width_t* bitWidth, *sai_mono_stereo_t* mode, uint32_t saiChannelMask)

Get left justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.

- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

void SAI_GetRightJustifiedConfig(*sai_transceiver_t* *config, *sai_word_width_t* bitWidth, *sai_mono_stereo_t* mode, uint32_t saiChannelMask)

Get right justified mode configurations.

Parameters

- config – transceiver configurations.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to be enable.

void SAI_GetTDMConfig(*sai_transceiver_t* *config, *sai_frame_sync_len_t* frameSyncWidth, *sai_word_width_t* bitWidth, uint32_t dataWordNum, uint32_t saiChannelMask)

Get TDM mode configurations.

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data word width.
- dataWordNum – word number in one frame.
- saiChannelMask – mask value of the channel to be enable.

void SAI_GetDSPConfig(*sai_transceiver_t* *config, *sai_frame_sync_len_t* frameSyncWidth, *sai_word_width_t* bitWidth, *sai_mono_stereo_t* mode, uint32_t saiChannelMask)

Get DSP mode configurations.

DSP/PCM MODE B configuration flow for TX. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)
SAI_TxSetConfig(base, config)
```

Note: DSP mode is also called PCM mode which support MODE A and MODE B, DSP/PCM MODE A configuration flow. RX is similiar but uses SAI_RxSetConfig instead of SAI_TxSetConfig:

```
SAI_GetDSPConfig(config, kSAI_FrameSyncLenOneBitClk, bitWidth, kSAI_Stereo, channelMask)
config->frameSync.frameSyncEarly    = true;
SAI_TxSetConfig(base, config)
```

Parameters

- config – transceiver configurations.
- frameSyncWidth – length of frame sync.
- bitWidth – audio data bitWidth.
- mode – audio data channel.
- saiChannelMask – mask value of the channel to enable.

static inline uint32_t SAI_TxGetStatusFlag(I2S_Type *base)

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Tx status flag value. Use the Status Mask to get the status value needed.

static inline void SAI_TxClearStatusFlags(I2S_Type *base, uint32_t mask)

Clears the SAI Tx status flag state.

Parameters

- base – SAI base pointer
- mask – State mask. It can be a combination of the following source if defined:
  - kSAI_WordStartFlag
  - kSAI_SyncErrorFlag
  - kSAI_FIFOErrorFlag

static inline uint32_t SAI_RxGetStatusFlag(I2S_Type *base)

Gets the SAI Tx status flag state.

Parameters

- base – SAI base pointer

Returns

SAI Rx status flag value. Use the Status Mask to get the status value needed.

static inline void SAI_RxClearStatusFlags(I2S_Type *base, uint32_t mask)

Clears the SAI Rx status flag state.

Parameters

- base – SAI base pointer
- mask – State mask. It can be a combination of the following sources if defined.
  - kSAI_WordStartFlag
  - kSAI_SyncErrorFlag
  - kSAI_FIFOErrorFlag

void SAI_TxSoftwareReset(I2S_Type *base, *sai_reset_type_t* resetType)

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Tx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like TCR1~TCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

void SAI_RxSoftwareReset(I2S_Type *base, *sai_reset_type_t* resetType)

Do software reset or FIFO reset .

FIFO reset means clear all the data in the FIFO, and make the FIFO pointer both to 0. Software reset means clear the Rx internal logic, including the bit clock, frame count etc. But software reset will not clear any configuration registers like RCR1~RCR5. This function will also clear all the error flags such as FIFO error, sync error etc.

Parameters

- base – SAI base pointer
- resetType – Reset type, FIFO reset or software reset

void SAI_TxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)

Set the Tx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

void SAI_RxSetChannelFIFOMask(I2S_Type *base, uint8_t mask)

Set the Rx channel FIFO enable mask.

Parameters

- base – SAI base pointer
- mask – Channel enable mask, 0 means all channel FIFO disabled, 1 means channel 0 enabled, 3 means both channel 0 and channel 1 enabled.

void SAI_TxSetDataOrder(I2S_Type *base, *sai_data_order_t* order)

Set the Tx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_RxSetDataOrder(I2S_Type *base, *sai_data_order_t* order)

Set the Rx data order.

Parameters

- base – SAI base pointer
- order – Data order MSB or LSB

void SAI_TxSetBitClockPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetBitClockPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFrameSyncPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Tx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_RxSetFrameSyncPolarity(I2S_Type *base, *sai_clock_polarity_t* polarity)

Set the Rx data order.

Parameters

- base – SAI base pointer
- polarity –

void SAI_TxSetFIFOPacking(I2S_Type *base, *sai_fifo_packing_t* pack)

Set Tx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of sai_fifo_packing_t.

void SAI_RxSetFIFOPacking(I2S_Type *base, *sai_fifo_packing_t* pack)

Set Rx FIFO packing feature.

Parameters

- base – SAI base pointer.
- pack – FIFO pack type. It is element of sai_fifo_packing_t.

static inline void SAI_TxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)

Set Tx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in TCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

static inline void SAI_RxSetFIFOErrorContinue(I2S_Type *base, bool isEnabled)

Set Rx FIFO error continue.

FIFO error continue mode means SAI will keep running while FIFO error occurred. If this feature not enabled, SAI will hang and users need to clear FEF flag in RCSR register.

Parameters

- base – SAI base pointer.
- isEnabled – Is FIFO error continue enabled, true means enable, false means disable.

static inline void SAI_TxEnableInterrupts(I2S_Type *base, uint32_t mask)

Enables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.

- kSAI_WordStartInterruptEnable
- kSAI_SyncErrorInterruptEnable
- kSAI_FIFOWarningInterruptEnable
- kSAI_FIFORequestInterruptEnable
- kSAI_FIFOErrorInterruptEnable

static inline void SAI_RxEnableInterrupts(I2S_Type *base, uint32_t mask)

Enables the SAI Rx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
  - kSAI_WordStartInterruptEnable
  - kSAI_SyncErrorInterruptEnable
  - kSAI_FIFOWarningInterruptEnable
  - kSAI_FIFORequestInterruptEnable
  - kSAI_FIFOErrorInterruptEnable

static inline void SAI_TxDisableInterrupts(I2S_Type *base, uint32_t mask)

Disables the SAI Tx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
  - kSAI_WordStartInterruptEnable
  - kSAI_SyncErrorInterruptEnable
  - kSAI_FIFOWarningInterruptEnable
  - kSAI_FIFORequestInterruptEnable
  - kSAI_FIFOErrorInterruptEnable

static inline void SAI_RxDisableInterrupts(I2S_Type *base, uint32_t mask)

Disables the SAI Rx interrupt requests.

Parameters

- base – SAI base pointer
- mask – interrupt source The parameter can be a combination of the following sources if defined.
  - kSAI_WordStartInterruptEnable
  - kSAI_SyncErrorInterruptEnable
  - kSAI_FIFOWarningInterruptEnable
  - kSAI_FIFORequestInterruptEnable
  - kSAI_FIFOErrorInterruptEnable

static inline void SAI_TxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)

Enables/disables the SAI Tx DMA requests.

Parameters

- base – SAI base pointer
- mask – DMA source The parameter can be combination of the following sources if defined.
  - kSAI_FIFOWarningDMAEnable
  - kSAI_FIFORequestDMAEnable
- enable – True means enable DMA, false means disable DMA.

static inline void SAI_RxEnableDMA(I2S_Type *base, uint32_t mask, bool enable)

Enables/disables the SAI Rx DMA requests.

Parameters

- base – SAI base pointer
- mask – DMA source The parameter can be a combination of the following sources if defined.
  - kSAI_FIFOWarningDMAEnable
  - kSAI_FIFORequestDMAEnable
- enable – True means enable DMA, false means disable DMA.

static inline uintptr_t SAI_TxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)

Gets the SAI Tx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- base – SAI base pointer.
- channel – Which data channel used.

Returns

data register address.

static inline uintptr_t SAI_RxGetDataRegisterAddress(I2S_Type *base, uint32_t channel)

Gets the SAI Rx data register address.

This API is used to provide a transfer address for the SAI DMA transfer configuration.

Parameters

- base – SAI base pointer.
- channel – Which data channel used.

Returns

data register address.

void SAI_WriteBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer, uint32_t size)

Sends data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.

- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

void SAI_WriteMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask, uint32_t bitWidth, uint8_t *buffer, uint32_t size)

Sends data to multi channel using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be written.
- size – Bytes to be written.

static inline void SAI_WriteData(I2S_Type *base, uint32_t channel, uint32_t data)

Writes data into SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- data – Data needs to be written.

void SAI_ReadBlocking(I2S_Type *base, uint32_t channel, uint32_t bitWidth, uint8_t *buffer, uint32_t size)

Receives data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

void SAI_ReadMultiChannelBlocking(I2S_Type *base, uint32_t channel, uint32_t channelMask, uint32_t bitWidth, uint8_t *buffer, uint32_t size)

Receives multi channel data using a blocking method.

Note: This function blocks by polling until data is ready to be sent.

Parameters

- base – SAI base pointer.
- channel – Data channel used.
- channelMask – channel mask.
- bitWidth – How many bits in an audio word; usually 8/16/24/32 bits.
- buffer – Pointer to the data to be read.
- size – Bytes to be read.

static inline uint32_t SAI_ReadData(I2S_Type *base, uint32_t channel)

Reads data from the SAI FIFO.

Parameters

- base – SAI base pointer.
- channel – Data channel used.

Returns

Data in SAI FIFO.

void SAI_TransferTxCreateHandle(I2S_Type *base, *sai_handle_t* *handle, *sai_transfer_callback_t* callback, void *userData)

Initializes the SAI Tx handle.

This function initializes the Tx handle for the SAI Tx transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – SAI base pointer
- handle – SAI handle pointer.
- callback – Pointer to the user callback function.
- userData – User parameter passed to the callback function

void SAI_TransferRxCreateHandle(I2S_Type *base, *sai_handle_t* *handle, *sai_transfer_callback_t* callback, void *userData)

Initializes the SAI Rx handle.

This function initializes the Rx handle for the SAI Rx transactional APIs. Call this function once to get the handle initialized.

Parameters

- base – SAI base pointer.
- handle – SAI handle pointer.
- callback – Pointer to the user callback function.
- userData – User parameter passed to the callback function.

void SAI_TransferTxSetConfig(I2S_Type *base, *sai_handle_t* *handle, *sai_transceiver_t* *config)

SAI transmitter transfer configurations.

This function initializes the Tx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- base – SAI base pointer.
- handle – SAI handle pointer.

- config – tranmitter configurations.

void SAI_TransferRxSetConfig(I2S_Type *base, *sai_handle_t* *handle, *sai_transceiver_t* *config)

SAI receiver transfer configurations.

This function initializes the Rx, include bit clock, frame sync, master clock, serial data and fifo configurations.

Parameters

- base – SAI base pointer.
- handle – SAI handle pointer.
- config – receiver configurations.

status_t SAI_TransferSendNonBlocking(I2S_Type *base, *sai_handle_t* *handle, *sai_transfer_t* *xfer)

Performs an interrupt non-blocking send transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the SAI_TxGetTransferStatusIRQ to poll the transfer status and check whether the transfer is finished. If the return status is not kStatus_SAI_Busy, the transfer is finished.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure which stores the transfer state.
- xfer – Pointer to the sai_transfer_t structure.

Return values

- kStatus_Success – Successfully started the data receive.
- kStatus_SAI_TxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

status_t SAI_TransferReceiveNonBlocking(I2S_Type *base, *sai_handle_t* *handle, *sai_transfer_t* *xfer)

Performs an interrupt non-blocking receive transfer on SAI.

Note: This API returns immediately after the transfer initiates. Call the SAI_RxGetTransferStatusIRQ to poll the transfer status and check whether the transfer is finished. If the return status is not kStatus_SAI_Busy, the transfer is finished.

Parameters

- base – SAI base pointer
- handle – Pointer to the sai_handle_t structure which stores the transfer state.
- xfer – Pointer to the sai_transfer_t structure.

Return values

- kStatus_Success – Successfully started the data receive.
- kStatus_SAI_RxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

status_t SAI_TransferGetSendCount(I2S_Type *base, *sai_handle_t* *handle, size_t *count)

Gets a set byte count.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure which stores the transfer state.
- count – Bytes count sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

status_t SAI_TransferGetReceiveCount(I2S_Type *base, *sai_handle_t* *handle, size_t *count)

Gets a received byte count.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure which stores the transfer state.
- count – Bytes count received.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

void SAI_TransferAbortSend(I2S_Type *base, *sai_handle_t* *handle)

Aborts the current send.

Note: This API can be called any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure which stores the transfer state.

void SAI_TransferAbortReceive(I2S_Type *base, *sai_handle_t* *handle)

Aborts the current IRQ receive.

Note: This API can be called when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- base – SAI base pointer
- handle – Pointer to the sai_handle_t structure which stores the transfer state.

void SAI_TransferTerminateSend(I2S_Type *base, *sai_handle_t* *handle)

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSend.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTerminateReceive(I2S_Type *base, *sai_handle_t* *handle)

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceive.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTxHandleIRQ(I2S_Type *base, *sai_handle_t* *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure.

void SAI_TransferRxHandleIRQ(I2S_Type *base, *sai_handle_t* *handle)

Tx interrupt handler.

Parameters

- base – SAI base pointer.
- handle – Pointer to the sai_handle_t structure.

void SAI_DriverIRQHandler(uint32_t instance)

SAI driver IRQ handler common entry.

This function provides the common IRQ request entry for SAI.

Parameters

- instance – SAI instance.

FSL_SAI_DRIVER_VERSION

Version 2.4.11

_sai_status_t, SAI return status.

Values:

enumerator kStatus_SAI_TxBusy

SAI Tx is busy.

enumerator kStatus_SAI_RxBusy

SAI Rx is busy.

enumerator kStatus_SAI_TxError

SAI Tx FIFO error.

enumerator kStatus_SAI_RxError
SAI Rx FIFO error.

enumerator kStatus_SAI_QueueFull
SAI transfer queue is full.

enumerator kStatus_SAI_TxIdle
SAI Tx is idle

enumerator kStatus_SAI_RxIdle
SAI Rx is idle

_sai_channel_mask,.sai channel mask value, actual channel numbers is depend soc specific

Values:

enumerator kSAI_Channel0Mask
channel 0 mask value

enumerator kSAI_Channel1Mask
channel 1 mask value

enumerator kSAI_Channel2Mask
channel 2 mask value

enumerator kSAI_Channel3Mask
channel 3 mask value

enumerator kSAI_Channel4Mask
channel 4 mask value

enumerator kSAI_Channel5Mask
channel 5 mask value

enumerator kSAI_Channel6Mask
channel 6 mask value

enumerator kSAI_Channel7Mask
channel 7 mask value

enum _sai_protocol
Define the SAI bus type.

Values:

enumerator kSAI_BusLeftJustified
Uses left justified format.

enumerator kSAI_BusRightJustified
Uses right justified format.

enumerator kSAI_BusI2S
Uses I2S format.

enumerator kSAI_BusPCMA
Uses I2S PCM A format.

enumerator kSAI_BusPCMB
Uses I2S PCM B format.

enum _sai_master_slave
Master or slave mode.

Values:

enumerator kSAI_Master
Master mode include bclk and frame sync

enumerator kSAI_Slave
Slave mode include bclk and frame sync

enumerator kSAI_Bclk_Master_FrameSync_Slave
bclk in master mode, frame sync in slave mode

enumerator kSAI_Bclk_Slave_FrameSync_Master
bclk in slave mode, frame sync in master mode

enum _sai_mono_stereo
Mono or stereo audio format.

Values:

enumerator kSAI_Stereo
Stereo sound.

enumerator kSAI_MonoRight
Only Right channel have sound.

enumerator kSAI_MonoLeft
Only left channel have sound.

enum _sai_data_order
SAI data order, MSB or LSB.

Values:

enumerator kSAI_DataLSB
LSB bit transferred first

enumerator kSAI_DataMSB
MSB bit transferred first

enum _sai_clock_polarity
SAI clock polarity, active high or low.

Values:

enumerator kSAI_PolarityActiveHigh
Drive outputs on rising edge

enumerator kSAI_PolarityActiveLow
Drive outputs on falling edge

enumerator kSAI_SampleOnFallingEdge
Sample inputs on falling edge

enumerator kSAI_SampleOnRisingEdge
Sample inputs on rising edge

enum _sai_sync_mode
Synchronous or asynchronous mode.

Values:

enumerator kSAI_ModeAsync
Asynchronous mode

enumerator kSAI_ModeSync
Synchronous mode (with receiver or transmit)

enumerator kSAI_ModeSyncWithOtherTx
Synchronous with another SAI transmit

enumerator kSAI_ModeSyncWithOtherRx
Synchronous with another SAI receiver

enum _sai_bclk_source
Bit clock source.

Values:

enumerator kSAI_BclkSourceBusclk
Bit clock using bus clock

enumerator kSAI_BclkSourceMclkOption1
Bit clock MCLK option 1

enumerator kSAI_BclkSourceMclkOption2
Bit clock MCLK option2

enumerator kSAI_BclkSourceMclkOption3
Bit clock MCLK option3

enumerator kSAI_BclkSourceMclkDiv
Bit clock using master clock divider

enumerator kSAI_BclkSourceOtherSai0
Bit clock from other SAI device

enumerator kSAI_BclkSourceOtherSai1
Bit clock from other SAI device

_sai_interrupt_enable_t, The SAI interrupt enable flag

Values:

enumerator kSAI_WordStartInterruptEnable
Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorInterruptEnable
Sync error flag, means the sync error is detected

enumerator kSAI_FIFOWarningInterruptEnable
FIFO warning flag, means the FIFO is empty

enumerator kSAI_FIFOErrorInterruptEnable
FIFO error flag

enumerator kSAI_FIFORequestInterruptEnable
FIFO request, means reached watermark

_sai_dma_enable_t, The DMA request sources

Values:

enumerator kSAI_FIFOWarningDMAEnable
FIFO warning caused by the DMA request

enumerator kSAI_FIFORequestDMAEnable
FIFO request caused by the DMA request

_sai_flags, The SAI status flag

Values:

enumerator kSAI_WordStartFlag
Word start flag, means the first word in a frame detected

enumerator kSAI_SyncErrorFlag
Sync error flag, means the sync error is detected

enumerator kSAI_FIFOErrorFlag
FIFO error flag

enumerator kSAI_FIFORequestFlag
FIFO request flag.

enumerator kSAI_FIFOWarningFlag
FIFO warning flag

enum _sai_reset_type
The reset type.

Values:

enumerator kSAI_ResetTypeSoftware
Software reset, reset the logic state

enumerator kSAI_ResetTypeFIFO
FIFO reset, reset the FIFO read and write pointer

enumerator kSAI_ResetAll
All reset.

enum _sai_fifo_packing
The SAI packing mode The mode includes 8 bit and 16 bit packing.

Values:

enumerator kSAI_FifoPackingDisabled
Packing disabled

enumerator kSAI_FifoPacking8bit
8 bit packing enabled

enumerator kSAI_FifoPacking16bit
16bit packing enabled

enum _sai_sample_rate
Audio sample rate.

Values:

enumerator kSAI_SampleRate8KHz
Sample rate 8000 Hz

enumerator kSAI_SampleRate11025Hz
Sample rate 11025 Hz

enumerator kSAI_SampleRate12KHz
Sample rate 12000 Hz

enumerator kSAI_SampleRate16KHz
Sample rate 16000 Hz

enumerator kSAI_SampleRate22050Hz
Sample rate 22050 Hz

enumerator kSAI_SampleRate24KHz
Sample rate 24000 Hz

enumerator kSAI_SampleRate32KHz
Sample rate 32000 Hz

enumerator kSAI_SampleRate44100Hz
Sample rate 44100 Hz

enumerator kSAI_SampleRate48KHz
Sample rate 48000 Hz

enumerator kSAI_SampleRate96KHz
Sample rate 96000 Hz

enumerator kSAI_SampleRate192KHz
Sample rate 192000 Hz

enumerator kSAI_SampleRate384KHz
Sample rate 384000 Hz

enum _sai_word_width
Audio word width.

Values:

enumerator kSAI_WordWidth8bits
Audio data width 8 bits

enumerator kSAI_WordWidth16bits
Audio data width 16 bits

enumerator kSAI_WordWidth24bits
Audio data width 24 bits

enumerator kSAI_WordWidth32bits
Audio data width 32 bits

enum _sai_data_pin_state
sai data pin state definition

Values:

enumerator kSAI_DataPinStateTriState
transmit data pins are tri-stated when slots are masked or channels are disabled

enumerator kSAI_DataPinStateOutputZero
transmit data pins are never tri-stated and will output zero when slots are masked or channel disabled

enum _sai_fifo_combine
sai fifo combine mode definition

Values:

enumerator kSAI_FifoCombineDisabled
sai TX/RX fifo combine mode disabled

enumerator kSAI_FifoCombineModeEnabledOnRead
sai TX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnWrite
sai TX fifo combine mode enabled on FIFO write

enumerator kSAI_RxFifoCombineModeEnabledOnWrite
sai RX fifo combine mode enabled on FIFO write

enumerator kSAI_RXFifoCombineModeEnabledOnRead
sai RX fifo combine mode enabled on FIFO reads

enumerator kSAI_FifoCombineModeEnabledOnReadWrite
sai TX/RX fifo combined mode enabled on FIFO read/writes

enum _sai_transceiver_type
sai transceiver type

Values:

enumerator kSAI_Transmitter
sai transmitter

enumerator kSAI_Receiver
sai receiver

enum _sai_frame_sync_len
sai frame sync len

Values:

enumerator kSAI_FrameSyncLenOneBitClk
1 bit clock frame sync len for DSP mode

enumerator kSAI_FrameSyncLenPerWordWidth
Frame sync length decided by word width

typedef enum *_sai_protocol* sai_protocol_t
Define the SAI bus type.

typedef enum *_sai_master_slave* sai_master_slave_t
Master or slave mode.

typedef enum *_sai_mono_stereo* sai_mono_stereo_t
Mono or stereo audio format.

typedef enum *_sai_data_order* sai_data_order_t
SAI data order, MSB or LSB.

typedef enum *_sai_clock_polarity* sai_clock_polarity_t
SAI clock polarity, active high or low.

typedef enum *_sai_sync_mode* sai_sync_mode_t
Synchronous or asynchronous mode.

typedef enum *_sai_bclk_source* sai_bclk_source_t
Bit clock source.

typedef enum *_sai_reset_type* sai_reset_type_t
The reset type.

typedef enum *_sai_fifo_packing* sai_fifo_packing_t
The SAI packing mode The mode includes 8 bit and 16 bit packing.

typedef struct *_sai_config* sai_config_t
SAI user configuration structure.

typedef enum *_sai_sample_rate* sai_sample_rate_t
: Audio sample rate.

typedef enum *_sai_word_width* sai_word_width_t
: Audio word width.

typedef enum *_sai_data_pin_state* sai_data_pin_state_t
: sai data pin state definition

typedef enum *_sai_fifo_combine* sai_fifo_combine_t
: sai fifo combine mode definition

typedef enum *_sai_transceiver_type* sai_transceiver_type_t
: sai transceiver type

typedef enum *_sai_frame_sync_len* sai_frame_sync_len_t
: sai frame sync len

typedef struct *_sai_transfer_format* sai_transfer_format_t
: sai transfer format

typedef struct *_sai_master_clock* sai_master_clock_t
: master clock configurations

typedef struct *_sai_fifo* sai_fifo_t
: sai fifo configurations

typedef struct *_sai_bit_clock* sai_bit_clock_t
: sai bit clock configurations

typedef struct *_sai_frame_sync* sai_frame_sync_t
: sai frame sync configurations

typedef struct *_sai_serial_data* sai_serial_data_t
: sai serial data configurations

typedef struct *_sai_transceiver* sai_transceiver_t
: sai transceiver configurations

typedef struct *_sai_transfer* sai_transfer_t
: SAI transfer structure.

typedef struct *_sai_handle* sai_handle_t

typedef void (*sai_transfer_callback_t)(I2S_Type *base, *sai_handle_t* *handle, *status_t* status, void *userData)
: SAI transfer callback prototype.

MCUX_SDK_SAI_ALLOW_NULL_FIFO_WATERMARK
: Used to control whether SAI_RxSetFifoConfig()/SAI_TxSetFifoConfig() allows a NULL FIFO watermark.

  If this macro is set to 0 then SAI_RxSetFifoConfig()/SAI_TxSetFifoConfig() will set the watermark to half of the FIFO's depth if passed a NULL watermark.

MCUX_SDK_SAI_DISABLE_IMPLICIT_CHAN_CONFIG
: Disable implicit channel data configuration within SAI_TxSetConfig()/SAI_RxSetConfig().

  Use this macro to control whether SAI_RxSetConfig()/SAI_TxSetConfig() will attempt to implicitly configure the channel data. By channel data we mean the startChannel, channelMask, endChannel, and channelNums fields from the sai_transciever_t structure. By default, SAI_TxSetConfig()/SAI_RxSetConfig() will attempt to compute these fields, which may not be desired in cases where the user wants to set them before the call to said functions.

SAI_XFER_QUEUE_SIZE
SAI transfer queue size, user can refine it according to use case.

FSL_SAI_HAS_FIFO_EXTEND_FEATURE
sai fifo feature

struct _sai_config
#include <fsl_sai.h> SAI user configuration structure.

Public Members

sai_protocol_t protocol
Audio bus protocol in SAI

sai_sync_mode_t syncMode
SAI sync mode, control Tx/Rx clock sync

bool mclkOutputEnable
Master clock output enable, true means master clock divider enabled

sai_bclk_source_t bclkSource
Bit Clock source

sai_master_slave_t masterSlave
Master or slave

struct _sai_transfer_format
#include <fsl_sai.h> sai transfer format

Public Members

uint32_t sampleRate_Hz
Sample rate of audio data

uint32_t bitWidth
Data length of audio data, usually 8/16/24/32 bits

sai_mono_stereo_t stereo
Mono or stereo

uint32_t masterClockHz
Master clock frequency in Hz

uint8_t watermark
Watermark value

uint8_t channel
Transfer start channel

uint8_t channelMask
enabled channel mask value, reference _sai_channel_mask

uint8_t endChannel
end channel number

uint8_t channelNums
Total enabled channel numbers

sai_protocol_t protocol
Which audio protocol used

bool isFrameSyncCompact

True means Frame sync length is configurable according to bitWidth, false means frame sync length is 64 times of bit clock.

struct __sai__master__clock

#include <fsl_sai.h> master clock configurations

Public Members

bool mclkOutputEnable

master clock output enable

uint32_t mclkHz

target mclk frequency

uint32_t mclkSourceClkHz

mclk source frequency

struct __sai__fifo

#include <fsl_sai.h> sai fifo configurations

Public Members

bool fifoContinueOneError

fifo continues when error occur

sai_fifo_combine_t fifoCombine

fifo combine mode

sai_fifo_packing_t fifoPacking

fifo packing mode

uint8_t fifoWatermark

fifo watermark

struct __sai__bit__clock

#include <fsl_sai.h> sai bit clock configurations

Public Members

bool bclkSrcSwap

bit clock source swap

bool bclkInputDelay

bit clock actually used by the transmitter is delayed by the pad output delay, this has effect of decreasing the data input setup time, but increasing the data output valid time .

sai_clock_polarity_t bclkPolarity

bit clock polarity

sai_bclk_source_t bclkSource

bit Clock source

struct __sai__frame__sync

#include <fsl_sai.h> sai frame sync configurations

Public Members

uint8_t frameSyncWidth
: frame sync width in number of bit clocks

bool frameSyncEarly
: TRUE is frame sync assert one bit before the first bit of frame FALSE is frame sync assert with the first bit of the frame

bool frameSyncGenerateOnDemand
: internal frame sync is generated when FIFO waring flag is clear

sai_clock_polarity_t frameSyncPolarity
: frame sync polarity

struct __sai__serial__data
: *#include <fsl_sai.h>* sai serial data configurations

Public Members

sai_data_pin_state_t dataMode
: sai data pin state when slots masked or channel disabled

sai_data_order_t dataOrder
: configure whether the LSB or MSB is transmitted first

uint8_t dataWord0Length
: configure the number of bits in the first word in each frame

uint8_t dataWordNLength
: configure the number of bits in the each word in each frame, except the first word

uint8_t dataWordLength
: used to record the data length for dma transfer

uint8_t dataFirstBitShifted
: Configure the bit index for the first bit transmitted for each word in the frame

uint8_t dataWordNum
: configure the number of words in each frame

uint32_t dataMaskedWord
: configure whether the transmit word is masked

struct __sai__transceiver
: *#include <fsl_sai.h>* sai transceiver configurations

Public Members

sai_serial_data_t serialData
: serial data configurations

sai_frame_sync_t frameSync
: ws configurations

sai_bit_clock_t bitClock
: bit clock configurations

sai_fifo_t fifo
: fifo configurations

sai_master_slave_t masterSlave
transceiver is master or slave

sai_sync_mode_t syncMode
transceiver sync mode

uint8_t startChannel
Transfer start channel

uint8_t channelMask
enabled channel mask value, reference _sai_channel_mask

uint8_t endChannel
end channel number

uint8_t channelNums
Total enabled channel numbers

struct __sai__transfer
#include <fsl_sai.h> SAI transfer structure.

Public Members

uint8_t *data
Data start address to transfer.

size_t dataSize
Transfer size.

struct __sai__handle
#include <fsl_sai.h> SAI handle structure.

Public Members

I2S_Type *base
base address

uint32_t state
Transfer status

sai_transfer_callback_t callback
Callback function called at transfer event

void *userData
Callback parameter passed to callback function

uint8_t bitWidth
Bit width for transfer, 8/16/24/32 bits

uint8_t channel
Transfer start channel

uint8_t channelMask
enabled channel mask value, refernece _sai_channel_mask

uint8_t endChannel
end channel number

uint8_t channelNums
Total enabled channel numbers

sai_transfer_t saiQueue[(4U)]
: Transfer queue storing queued transfer

size_t transferSize[(4U)]
: Data bytes need to transfer

volatile uint8_t queueUser
: Index for user to queue transfer

volatile uint8_t queueDriver
: Index for driver to get the transfer data and size

uint8_t watermark
: Watermark value

2.62 SAI EDMA Driver

void SAI_TransferTxCreateHandleEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_edma_callback_t* callback, void *userData, *edma_handle_t* *txDmaHandle)

Initializes the SAI eDMA handle.

This function initializes the SAI master DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- callback – Pointer to user callback function.
- userData – User parameter passed to the callback function.
- txDmaHandle – eDMA handle pointer, this handle shall be static allocated by users.

void SAI_TransferRxCreateHandleEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_edma_callback_t* callback, void *userData, *edma_handle_t* *rxDmaHandle)

Initializes the SAI Rx eDMA handle.

This function initializes the SAI slave DMA handle, which can be used for other SAI master transactional APIs. Usually, for a specified SAI instance, call this API once to get the initialized handle.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- callback – Pointer to user callback function.
- userData – User parameter passed to the callback function.
- rxDmaHandle – eDMA handle pointer, this handle shall be static allocated by users.

void SAI_TransferSetInterleaveType(*sai_edma_handle_t* *handle, *sai_edma_interleave_t* interleaveType)

Initializes the SAI interleave type.

This function initializes the SAI DMA handle member interleaveType, it shall be called only when application would like to use type kSAI_EDMAInterleavePerChannelBlock, since the default interleaveType is kSAI_EDMAInterleavePerChannelSample always

Parameters

- handle – SAI eDMA handle pointer.
- interleaveType – Multi channel interleave type.

void SAI_TransferTxSetConfigEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transceiver_t* *saiConfig)

Configures the SAI Tx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the channelMask of sai_transceiver_t with the corresponding values of _sai_channel_mask enum, enable the FIFO Combine mode by assigning kSAI_FifoCombineModeEnabledOnWrite to the fifoCombine member of sai_fifo_combine_t which is a member of sai_transceiver_t. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_
↪Channel1Mask);
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnWrite;
SAI_TransferTxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- saiConfig – sai configurations.

void SAI_TransferRxSetConfigEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transceiver_t* *saiConfig)

Configures the SAI Rx.

Note: SAI eDMA supports data transfer in a multiple SAI channels if the FIFO Combine feature is supported. To activate the multi-channel transfer enable SAI channels by filling the channelMask of sai_transceiver_t with the corresponding values of _sai_channel_mask enum, enable the FIFO Combine mode by assigning kSAI_FifoCombineModeEnabledOnRead to the fifoCombine member of sai_fifo_combine_t which is a member of sai_transceiver_t. This is an example of multi-channel data transfer configuration step.

```
sai_transceiver_t config;
SAI_GetClassicI2SConfig(&config, kSAI_WordWidth16bits, kSAI_Stereo, kSAI_Channel0Mask|kSAI_
↪Channel1Mask);
config.fifo.fifoCombine = kSAI_FifoCombineModeEnabledOnRead;
SAI_TransferRxSetConfigEDMA(I2S0, &edmaHandle, &config);
```

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- saiConfig – sai configurations.

status_t SAI_TransferSendEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer)

Performs a non-blocking SAI transfer using DMA.

This function support multi channel transfer,

a. for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
b. for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call SAI_GetTransferStatus to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure.

Return values

- kStatus_Success – Start a SAI eDMA send successfully.
- kStatus_InvalidArgument – The input argument is invalid.
- kStatus_TxBusy – SAI is busy sending data.

status_t SAI_TransferReceiveEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer)

Performs a non-blocking SAI receive using eDMA.

This function support multi channel transfer,

a. for the sai IP support fifo combine mode, application should enable the fifo combine mode, no limitation on channel numbers
b. for the sai IP not support fifo combine mode, sai edma provide another solution which using EDMA modulo feature, but support 2 or 4 channels only.

Note: This interface returns immediately after the transfer initiates. Call the SAI_GetReceiveRemainingBytes to poll the transfer status and check whether the SAI transfer is finished.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a SAI eDMA receive successfully.
- kStatus_InvalidArgument – The input argument is invalid.
- kStatus_RxBusy – SAI is busy receiving data.

status_t SAI_TransferSendLoopEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer, uint32_t loopTransferCount)

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function SAI_TransferAbortSendEDMA to stop the loop transfer.

Note: This function support loop transfer only,such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required, as the function use the tcd pool in sai_edma_handle_t, so application could redefine the SAI_XFER_QUEUE_SIZE to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure, should be a array with elements counts >=1(loopTransferCount).
- loopTransferCount – the counts of xfer array.

Return values

- kStatus_Success – Start a SAI eDMA send successfully.
- kStatus_InvalidArgument – The input argument is invalid.

status_t SAI_TransferReceiveLoopEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, *sai_transfer_t* *xfer, uint32_t loopTransferCount)

Performs a non-blocking SAI loop transfer using eDMA.

Once the loop transfer start, application can use function SAI_TransferAbortReceiveEDMA to stop the loop transfer.

Note: This function support loop transfer only,such as A->B->...->A, application must be aware of that the more counts of the loop transfer, then more tcd memory required, as the function use the tcd pool in sai_edma_handle_t, so application could redefine the SAI_XFER_QUEUE_SIZE to determine the proper TCD pool size. This function support one sai channel only.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- xfer – Pointer to the DMA transfer structure, should be a array with elements counts >=1(loopTransferCount).

- loopTransferCount – the counts of xfer array.

Return values

- kStatus_Success – Start a SAI eDMA receive successfully.
- kStatus_InvalidArgument – The input argument is invalid.

void SAI_TransferTerminateSendEDMA(I2S_Type *base, *sai_edma_handle_t* *handle)

Terminate all SAI send.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortSendEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferTerminateReceiveEDMA(I2S_Type *base, *sai_edma_handle_t* *handle)

Terminate all SAI receive.

This function will clear all transfer slots buffered in the sai queue. If users only want to abort the current transfer slot, please call SAI_TransferAbortReceiveEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferAbortSendEDMA(I2S_Type *base, *sai_edma_handle_t* *handle)

Aborts a SAI transfer using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call SAI_TransferTerminateSendEDMA.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.

void SAI_TransferAbortReceiveEDMA(I2S_Type *base, *sai_edma_handle_t* *handle)

Aborts a SAI receive using eDMA.

This function only aborts the current transfer slots, the other transfer slots' information still kept in the handler. If users want to terminate all transfer slots, just call SAI_TransferTerminateReceiveEDMA.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.

status_t SAI_TransferGetSendCountEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, size_t *count)

Gets byte count sent by SAI.

Parameters

- base – SAI base pointer.
- handle – SAI eDMA handle pointer.
- count – Bytes count sent by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

status_t SAI_TransferGetReceiveCountEDMA(I2S_Type *base, *sai_edma_handle_t* *handle, size_t *count)

Gets byte count received by SAI.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.
- count – Bytes count received by SAI.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is no non-blocking transaction in progress.

uint32_t SAI_TransferGetValidTransferSlotsEDMA(I2S_Type *base, *sai_edma_handle_t* *handle)

Gets valid transfer slot.

This function can be used to query the valid transfer request slot that the application can submit. It should be called in the critical section, that means the application could call it in the corresponding callback function or disable IRQ before calling it in the application, otherwise, the returned value may not correct.

Parameters

- base – SAI base pointer
- handle – SAI eDMA handle pointer.

Return values

valid – slot count that application submit.

FSL_SAI_EDMA_DRIVER_VERSION

Version 2.7.4

enum _sai_edma_interleave

sai interleave type

Values:

enumerator kSAI_EDMAInterleavePerChannelSample

enumerator kSAI_EDMAInterleavePerChannelBlock

typedef struct *sai_edma_handle* sai_edma_handle_t

typedef void (*sai_edma_callback_t)(I2S_Type *base, *sai_edma_handle_t* *handle, *status_t* status, void *userData)

SAI eDMA transfer callback function for finish and error.

typedef enum *_sai_edma_interleave* sai_edma_interleave_t

sai interleave type

MCUX_SDK_SAI_EDMA_RX_ENABLE_INTERNAL

the SAI enable position When calling SAI_TransferReceiveEDMA

MCUX_SDK_SAI_EDMA_TX_ENABLE_INTERNAL

the SAI enable position When calling SAI_TransferSendEDMA

struct sai_edma_handle

#include <fsl_sai_edma.h> SAI DMA transfer handle, users should not touch the content of the handle.

Public Members

edma_handle_t *dmaHandle

DMA handler for SAI send

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint8_t bytesPerFrame

Bytes in a frame

uint8_t channelMask

Enabled channel mask value, reference _sai_channel_mask

uint8_t channelNums

total enabled channel nums

uint8_t channel

Which data channel

uint8_t count

The transfer data count in a DMA request

uint32_t state

Internal state for SAI eDMA transfer

sai_edma_callback_t callback

Callback for users while transfer finish or error occurs

void *userData

User callback parameter

uint8_t tcd[((4U) + 1U) * sizeof(*edma_tcd_t*)]

TCD pool for eDMA transfer.

sai_transfer_t saiQueue[(4U)]

Transfer queue storing queued transfer.

size_t transferSize[(4U)]

Data bytes need to transfer

sai_edma_interleave_t interleaveType

Transfer interleave type

volatile uint8_t queueUser

Index for user to queue transfer.

volatile uint8_t queueDriver

Index for driver to get the transfer data and size

2.63 SEMA42: Hardware Semaphores Driver

FSL_SEMA42_DRIVER_VERSION

SEMA42 driver version.

SEMA42 status return codes.

Values:

enumerator kStatus_SEMA42_Busy
SEMA42 gate has been locked by other processor.

enumerator kStatus_SEMA42_Reseting
SEMA42 gate reseting is ongoing.

enum _sema42_gate_status
SEMA42 gate lock status.

Values:

enumerator kSEMA42_Unlocked
The gate is unlocked.

enumerator kSEMA42_LockedByProc0
The gate is locked by processor 0.

enumerator kSEMA42_LockedByProc1
The gate is locked by processor 1.

enumerator kSEMA42_LockedByProc2
The gate is locked by processor 2.

enumerator kSEMA42_LockedByProc3
The gate is locked by processor 3.

enumerator kSEMA42_LockedByProc4
The gate is locked by processor 4.

enumerator kSEMA42_LockedByProc5
The gate is locked by processor 5.

enumerator kSEMA42_LockedByProc6
The gate is locked by processor 6.

enumerator kSEMA42_LockedByProc7
The gate is locked by processor 7.

enumerator kSEMA42_LockedByProc8
The gate is locked by processor 8.

enumerator kSEMA42_LockedByProc9
The gate is locked by processor 9.

enumerator kSEMA42_LockedByProc10
The gate is locked by processor 10.

enumerator kSEMA42_LockedByProc11
The gate is locked by processor 11.

enumerator kSEMA42_LockedByProc12
The gate is locked by processor 12.

enumerator kSEMA42_LockedByProc13
The gate is locked by processor 13.

enumerator kSEMA42_LockedByProc14
The gate is locked by processor 14.

typedef enum *_sema42_gate_status* sema42_gate_status_t

SEMA42 gate lock status.

void SEMA42_Init(SEMA42_Type *base)

Initializes the SEMA42 module.

This function initializes the SEMA42 module. It only enables the clock but does not reset the gates because the module might be used by other processors at the same time. To reset the gates, call either SEMA42_ResetGate or SEMA42_ResetAllGates function.

Parameters

- base – SEMA42 peripheral base address.

void SEMA42_Deinit(SEMA42_Type *base)

De-initializes the SEMA42 module.

This function de-initializes the SEMA42 module. It only disables the clock.

Parameters

- base – SEMA42 peripheral base address.

status_t SEMA42_TryLock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Tries to lock the SEMA42 gate.

This function tries to lock the specific SEMA42 gate. If the gate has been locked by another processor, this function returns an error code.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – Lock the sema42 gate successfully.
- kStatus_SEMA42_Busy – Sema42 gate has been locked by another processor.

status_t SEMA42_Lock(SEMA42_Type *base, uint8_t gateNum, uint8_t procNum)

Locks the SEMA42 gate.

This function locks the specific SEMA42 gate. If the gate has been locked by other processors, this function waits until it is unlocked and then lock it.

If SEMA42_BUSY_POLL_COUNT is defined and non-zero, the function will timeout after the specified number of polling iterations and return kStatus_Timeout.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to lock.
- procNum – Current processor number.

Return values

- kStatus_Success – The gate was successfully locked.
- kStatus_Timeout – Timeout occurred while waiting for the gate to be unlocked.

Returns

status_t

static inline void SEMA42_Unlock(SEMA42_Type *base, uint8_t gateNum)

Unlocks the SEMA42 gate.

This function unlocks the specific SEMA42 gate. It only writes unlock value to the SEMA42 gate register. However, it does not check whether the SEMA42 gate is locked by the current processor or not. As a result, if the SEMA42 gate is not locked by the current processor, this function has no effect.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number to unlock.

static inline *sema42_gate_status_t* SEMA42_GetGateStatus(SEMA42_Type *base, uint8_t gateNum)

Gets the status of the SEMA42 gate.

This function checks the lock status of a specific SEMA42 gate.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Returns

status Current status.

status_t SEMA42_ResetGate(SEMA42_Type *base, uint8_t gateNum)

Resets the SEMA42 gate to an unlocked status.

This function resets a SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.
- gateNum – Gate number.

Return values

- kStatus_Success – SEMA42 gate is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

static inline *status_t* SEMA42_ResetAllGates(SEMA42_Type *base)

Resets all SEMA42 gates to an unlocked status.

This function resets all SEMA42 gate to an unlocked status.

Parameters

- base – SEMA42 peripheral base address.

Return values

- kStatus_Success – SEMA42 is reset successfully.
- kStatus_SEMA42_Reseting – Some other reset process is ongoing.

SEMA42_GATE_NUM_RESET_ALL

The number to reset all SEMA42 gates.

SEMA42_GATEn(base, n)

SEMA42 gate n register address.

The SEMA42 gates are sorted in the order 3, 2, 1, 0, 7, 6, 5, 4, ... not in the order 0, 1, 2, 3, 4, 5, 6, 7, ... The macro SEMA42_GATEn gets the SEMA42 gate based on the gate index.

The input gate index is XOR'ed with 3U: 0 ^ 3 = 3 1 ^ 3 = 2 2 ^ 3 = 1 3 ^ 3 = 0 4 ^ 3 = 7 5 ^ 3 = 6 6 ^ 3 = 5 7 ^ 3 = 4 ...

SEMA42_BUSY_POLL_COUNT

Maximum polling iterations for SEMA42 waiting loops.

This parameter defines the maximum number of iterations for any polling loop in the SEMA42 driver code before timing out and returning an error.

It applies to all waiting loops in SEMA42 driver, such as waiting for a gate to be unlocked, waiting for a reset to complete, or waiting for a resource to become available.

This is a count of loop iterations, not a time-based value.

If defined as 0, polling loops will continue indefinitely until their exit condition is met, which could potentially cause the system to hang if hardware doesn't respond or if a resource is never released.

2.64 Sentinel

enum rdc_type

Values:

enumerator TRDC_TYPE

enumerator XRDC_TYPE

void SENTINEL_Init(void)

Initialize MU interface for Sentinel access.

void SENTINEL_Deinit(void)

Deinitialize MU interface for Sentinel access.

void SENTINEL_SendMessage(uint32_t *param, uint32_t paramCount)

Send message to Sentinel.

Parameters

- param – Command parameters pointer. Each parameter is a 32bit word.
- paramCount – Command parameter count.

void SENTINEL_ReceiveMessage(uint32_t *pParam, uint32_t *pParamCount)

Receive message from Sentinel.

Parameters

- pParam – Pointer to save command parameters. Each parameter is a 32bit word.
- pParamCount – Inout pointer to command parameter count.

uint32_t SENTINEL_Command(uint32_t *cmdParam, uint32_t cmdParamCount, uint32_t *pRespParam, uint32_t *pRespParamCount)

Send command to Sentinel and receive response.

Parameters

- cmdParam – Command parameters pointer. Each parameter is a 32bit word.
- cmdParamCount – Command parameter count.
- pRespParam – Pointer to save response parameters. Each parameter is a 32bit word.

- pRespParamCount – Inout pointer to response parameter count.

Returns
0 for success, otherwise return error code.

uint32_t SENTINEL_Ping(void)

Ping Sentinel to see if it is alive.

Returns
0 for success, otherwise return error code.

uint32_t SENTINEL_GetFirmwareVersion(uint32_t *pVersion, uint32_t *pCommitSha)

Get Sentinel firmware version.

Parameters

- pVersion – Pointer to save firmware version.
- pCommitSha – Pointer to save first 4 bytes of the git commit ID.

Returns
0 for success, otherwise return error code.

uint32_t SENTINEL_GetFirmwareStatus(uint8_t *pStatus)

Get Sentinel firmware status.

Parameters

- pStatus – Pointer to save firmware status. 0: No firmware in place. 1: Firmware authenticated and operational.

Returns
0 for success, otherwise return error code.

uint32_t SENTINEL_SetPowerDown(uint32_t resumeAddr, uint32_t size)

Request Sentinel to enter power down.

Parameters

- resumeAddr – Base address in memory for resume code
- size – Length of resume code in memory

Returns
0 for success, otherwise return error code.

uint32_t SENTINEL_SessionOpen(uint32_t *pSessionHandle, uint8_t muId, uint8_t interruptId, uint8_t tz, uint8_t did, uint8_t priority, uint8_t operatingMode)

uint32_t SENTINEL_SessionClose(uint32_t *pSessionHandle)

uint32_t SENTINEL_RngOpen(uint32_t *pRngHandle, uint32_t sessionHandle, uint8_t flags)

uint32_t SENTINEL_RngClose(uint32_t *pRngHandle)

uint32_t SENTINEL_RngGetRandom(uint32_t *pRngHandle, uint32_t outAddr, uint32_t outSize)

status_t SENTINEL_RNG_GetRandomData(uint32_t output, uint32_t len)

uint32_t SENTINEL_ReleaseRDC(enum *rdc_type* type)

uint32_t SENTINEL_GetSocInfo(uint16_t *pSoc_id, uint16_t *pSoc_rev)

Get Sentinel cpu version.

Parameters

- pSoc_id – Pointer to soc id.
- pSoc_rev – Pointer to soc revision number.

Returns
0 for success, otherwise return error code.

FSL_SENTINEL_DRIVER_VERSION
sentinel driver version 2.0.3.

SENTINEL_BASELINE_API_CMD_PING
sentinel command definition.

SENTINEL_BASELINE_API_CMD_DUMP_DEBUG_BUFFER

SENTINEL_BASELINE_API_CMD_OEM_CNTN_AUTH

SENTINEL_BASELINE_API_CMD_VERIFY_IMAGE

SENTINEL_BASELINE_API_CMD_RELEASE_CONTAINER

SENTINEL_BASELINE_API_CMD_GET_FW_VERSION

SENTINEL_BASELINE_API_CMD_RELEASE_RDC

SENTINEL_BASELINE_API_CMD_GET_FW_STATUS

SENTINEL_BASELINE_API_CMD_POWER_DOWN

SENTINEL_BASELINE_API_CMD_GET_INFO

SENTINEL_BRIDGE_API_CMD_SESSION_OPEN

SENTINEL_BRIDGE_API_CMD_SESSION_CLOSE

SENTINEL_BRIDGE_API_CMD_RNG_OPEN

SENTINEL_BRIDGE_API_CMD_RNG_CLOSE

SENTINEL_BRIDGE_API_CMD_RNG_GET_RANDOM

SENTINEL_MSG_HDR_CMD_TAG

SENTINEL_MSG_HDR_CMD_RSP_TAG

SENTINEL_BASELINE_API_VER

SENTINEL_BRIDGE_API_VER

SENTINEL_RR_CNT

SENTINEL_TR_CNT

RTC_MU_ID

AP_MU_ID

CM33_DOMAIN_ID

BASELINE_SUCCESS_IND

BASELINE_FAILURE_IND

BRIDGE_SUCCESS_STATUS

BRIDGE_FAILURE_STATUS

SENTINEL_ACCESS_ADDR_ALIGN_SIZE

RTD_CORE_ID

APD_CORE_ID

TRDC_ID

XRDC_ID

uint8_t ver

uint8_t size

uint8_t cmd

uint8_t tag

uint8_t status

uint8_t indication

uint16_t abort_code

uint8_t status

uint8_t rating

uint16_t rating_ext

uint32_t code

struct *baseline_api_rsp_code* baseline_rsp_code

struct *bridge_api_rsp_code* bridge_rsp_code

struct *msg_hdr* hdr

union *response_code* rsp_code

struct *msg_hdr* hdr

struct *common_rsp* rsp

uint32_t fw_version

uint32_t commit_id

struct *msg_hdr* hdr

struct *common_rsp* rsp

uint8_t status

uint8_t rsv[3]

struct *msg_hdr* hdr

uint8_t mu_id

uint8_t interrupt_num

uint8_t tz

uint8_t did

uint8_t priority

uint8_t op_mode

uint16_t reserved

struct *common_rsp* rsp

uint32_t session_handle

struct *msg_hdr* hdr

uint32_t size

uint32_t resume_addr

struct *common_rsp* rsp

struct *msg_hdr* hdr

uint32_t session_handle

struct *common_rsp* rsp

struct *msg_hdr* hdr

uint32_t session_handle

uint32_t input_address_ext

uint32_t output_address_ext

uint8_t flags

uint8_t rsv[3]

uint32_t crc

struct *common_rsp* rsp

uint32_t rng_handle

struct *msg_hdr* hdr

uint32_t rng_handle

struct *common_rsp* rsp

struct *msg_hdr* hdr

uint32_t rng_handle

uint32_t out_addr

uint32_t out_size

struct *common_rsp* rsp

struct *msg_hdr* hdr

struct *common_rsp* rsp

uint32_t debug_words[20]

uint32_t crc

struct *msg_hdr* hdr

uint8_t core_id

uint8_t rdc_id

uint8_t rsv[2]

struct *common_rsp* rsp

struct *msg_hdr* hdr

uint32_t rsp_msb

uint32_t rsp_lsb

uint16_t buf_size

uint16_t rsv

uint8_t cmd

uint8_t ver

uint16_t len

uint16_t soc_id

uint16_t soc_rev

uint16_t lc

uint8_t sssm

uint8_t rsv

uint32_t uid[4]

uint32_t sha256_rom_patch[8]

uint32_t sha_fw[8]

uint32_t oem_srkh[16]

uint8_t trng

uint8_t csal

uint8_t imem

uint8_t rsv2

struct msg_hdr
#include <fsl_sentinel.h>

struct baseline_api_rsp_code
#include <fsl_sentinel.h>

struct bridge_api_rsp_code
#include <fsl_sentinel.h>

union response_code
#include <fsl_sentinel.h>

struct common_rsp
#include <fsl_sentinel.h>

struct get_fw_version_msg_cmd
#include <fsl_sentinel.h>

struct get_fw_version_msg_cmd_rsp
#include <fsl_sentinel.h>

struct get_fw_status_msg_cmd
#include <fsl_sentinel.h>

struct get_fw_status_msg_cmd_rsp
#include <fsl_sentinel.h>

struct open_session_msg_cmd
#include <fsl_sentinel.h>

struct open_session_msg_cmd_rsp
#include <fsl_sentinel.h>

struct power_down_cmd
#include <fsl_sentinel.h>

struct power_down_cmd_rsp
#include <fsl_sentinel.h>

struct close_session_msg_cmd
#include <fsl_sentinel.h>

struct close_session_msg_cmd_rsp
#include <fsl_sentinel.h>

struct rng_open_msg_cmd
#include <fsl_sentinel.h>

struct rng_open_msg_cmd_rsp
#include <fsl_sentinel.h>

struct rng_close_msg_cmd
#include <fsl_sentinel.h>

struct rng_close_msg_cmd_rsp
#include <fsl_sentinel.h>

struct rng_get_rnd_msg_cmd
#include <fsl_sentinel.h>

struct rng_get_rnd_msg_cmd_rsp
#include <fsl_sentinel.h>

struct dump_debug_buffer_msg_cmd
#include <fsl_sentinel.h>

struct dump_debug_buffer_msg_cmd_rsp
#include <fsl_sentinel.h>

struct release_rdc_msg_cmd
#include <fsl_sentinel.h>

struct release_rdc_msg_cmd_rsp
#include <fsl_sentinel.h>

struct get_info_msg_cmd
#include <fsl_sentinel.h>

struct sentinel_get_info_data
#include <fsl_sentinel.h>

2.65 Soc_mipi_dsi

FSL_SOC_MIPI_DSI_DRIVER_VERSION
Driver version.

DSI_DPHY_PLL_VCO_MAX

DSI_DPHY_PLL_VCO_MIN

FSL_COMPONENT_ID

2.66 TPM: Timer PWM Module

uint32_t TPM_GetInstance(TPM_Type *base)
Gets the instance from the base address.

Parameters

- base – TPM peripheral base address

Returns
The TPM instance

void TPM_Init(TPM_Type *base, const *tpm_config_t* *config)
Ungates the TPM clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application using the TPM driver.

Parameters

- base – TPM peripheral base address
- config – Pointer to user's TPM config structure.

void TPM_Deinit(TPM_Type *base)
Stops the counter and gates the TPM clock.

Parameters

- base – TPM peripheral base address

void TPM_GetDefaultConfig(*tpm_config_t* *config)
Fill in the TPM config struct with the default settings.

The default values are:

```
    config->prescale = kTPM_Prescale_Divide_1;
    config->useGlobalTimeBase = false;
    config->syncGlobalTimeBase = false;
    config->dozeEnable = false;
    config->dbgMode = false;
    config->enableReloadOnTrigger = false;
    config->enableStopOnOverflow = false;
    config->enableStartOnTrigger = false;
#if FSL_FEATURE_TPM_HAS_PAUSE_COUNTER_ON_TRIGGER
    config->enablePauseOnTrigger = false;
#endif
    config->triggerSelect = kTPM_Trigger_Select_0;
#if FSL_FEATURE_TPM_HAS_EXTERNAL_TRIGGER_SELECTION
```

(continues on next page)

(continued from previous page)

```
    config->triggerSource = kTPM_TriggerSource_External;
    config->extTriggerPolarity = kTPM_ExtTrigger_Active_High;
#endif
#if defined(FSL_FEATURE_TPM_HAS_POL) && FSL_FEATURE_TPM_HAS_POL
    config->chnlPolarity = 0U;
#endif
```

Parameters

- config – Pointer to user's TPM config structure.

tpm_clock_prescale_t TPM_CalculateCounterClkDiv(TPM_Type *base, uint32_t counterPeriod_Hz, uint32_t srcClock_Hz)

Calculates the counter clock prescaler.

This function calculates the values for SC[PS].

return Calculated clock prescaler value.

Parameters

- base – TPM peripheral base address
- counterPeriod_Hz – The desired frequency in Hz which corresponding to the time when the counter reaches the mod value
- srcClock_Hz – TPM counter clock in Hz

static inline void TPM_Reset(TPM_Type *base)

Performs a software reset on the TPM module.

Reset all internal logic and registers, except the Global Register. Remains set until cleared by software.

Note: TPM software reset is available on certain SoC's only

Parameters

- base – TPM peripheral base address

status_t TPM_SetupPwm(TPM_Type *base, const *tpm_chnl_pwm_signal_param_t* *chnlParams, uint8_t numOfChnls, *tpm_pwm_mode_t* mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Configures the PWM signal parameters.

User calls this function to configure the PWM signals period, mode, dutycycle and edge. Use this function to configure all the TPM channels that will be used to output a PWM signal

Parameters

- base – TPM peripheral base address
- chnlParams – Array of PWM channel parameters to configure the channel(s)
- numOfChnls – Number of channels to configure, this should be the size of the array passed in
- mode – PWM operation mode, options available in enumeration tpm_pwm_mode_t
- pwmFreq_Hz – PWM signal frequency in Hz

- srcClock_Hz – TPM counter clock in Hz

Returns

kStatus_Success PWM setup successful kStatus_Error PWM setup failed kStatus_Timeout PWM setup timeout when write register CnV or MOD

status_t TPM_UpdatePwmDutycycle(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_pwm_mode_t* currentPwmMode, uint8_t dutyCyclePercent)

Update the duty cycle of an active PWM signal.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number. In combined mode, this represents the channel pair number
- currentPwmMode – The current PWM mode set during PWM setup
- dutyCyclePercent – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

Returns

kStatus_Success if the PWM setup was successful, kStatus_Error on failure

void TPM_UpdateChnlEdgeLevelSelect(TPM_Type *base, *tpm_chnl_t* chnlNumber, uint8_t level)

Update the edge level selection for a channel.

Note: When the TPM has PWM pause level select feature (FSL_FEATURE_TPM_HAS_PAUSE_LEVEL_SELECT = 1), the PWM output cannot be turned off by selecting the output level. In this case, must use TPM_DisableChannel API to close the PWM output.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- level – The level to be set to the ELSnB:ELSnA field; valid values are 00, 01, 10, 11. See the appropriate SoC reference manual for details about this field.

static inline uint8_t TPM_GetChannelContorlBits(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Get the channel control bits value (mode, edge and level bit fileds).

This function disable the channel by clear all mode and level control bits.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns

The contorl bits value. This is the logical OR of members of the enumeration tpm_chnl_control_bit_mask_t.

static inline *status_t* TPM_DisableChannel(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Dsiable the channel.

This function disable the channel by clear all mode and level control bits.

Parameters

- base – TPM peripheral base address

- chnlNumber – The channel number

Returns
kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

static inline *status_t* TPM_EnableChannel(TPM_Type *base, *tpm_chnl_t* chnlNumber, uint8_t control)

Enable the channel according to mode and level configs.

This function enable the channel output according to input mode/level config parameters.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- control – The contorl bits value. This is the logical OR of members of the enumeration tpm_chnl_control_bit_mask_t.

Returns
kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

void TPM_SetupInputCapture(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_input_capture_edge_t* captureMode)

Enables capturing an input signal on the channel using the function parameters.

When the edge specified in the captureMode argument occurs on the channel, the TPM counter is captured into the CnV register. The user has to read the CnV register separately to get this value.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- captureMode – Specifies which edge to capture

status_t TPM_SetupOutputCompare(TPM_Type *base, *tpm_chnl_t* chnlNumber, *tpm_output_compare_mode_t* compareMode, uint32_t compareValue)

Configures the TPM to generate timed pulses.

When the TPM counter matches the value of compareVal argument (this is written into CnV reg), the channel output is changed based on what is specified in the compareMode argument.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- compareMode – Action to take on the channel output when the compare condition is met
- compareValue – Value to be programmed in the CnV register.

Returns
kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnV

void TPM_SetupDualEdgeCapture(TPM_Type *base, *tpm_chnl_t* chnlPairNumber, const *tpm_dual_edge_capture_param_t* *edgeParam, uint32_t filterValue)

Configures the dual edge capture mode of the TPM.

This function allows to measure a pulse width of the signal on the input of channel of a channel pair. The filter function is disabled if the filterVal argument passed is zero.

Parameters

- base – TPM peripheral base address
- chnlPairNumber – The TPM channel pair number; options are 0, 1, 2, 3
- edgeParam – Sets up the dual edge capture function
- filterValue – Filter value, specify 0 to disable filter.

void TPM_SetupQuadDecode(TPM_Type *base, const *tpm_phase_params_t* *phaseAParams, const *tpm_phase_params_t* *phaseBParams, *tpm_quad_decode_mode_t* quadMode)

Configures the parameters and activates the quadrature decode mode.

Parameters

- base – TPM peripheral base address
- phaseAParams – Phase A configuration parameters
- phaseBParams – Phase B configuration parameters
- quadMode – Selects encoding mode used in quadrature decoder mode

static inline void TPM_SetChannelPolarity(TPM_Type *base, *tpm_chnl_t* chnlNumber, bool enable)

Set the input and output polarity of each of the channels.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- enable – true: Set the channel polarity to active high; false: Set the channel polarity to active low;

static inline void TPM_EnableChannelExtTrigger(TPM_Type *base, *tpm_chnl_t* chnlNumber, bool enable)

Enable external trigger input to be used by channel.

In input capture mode, configures the trigger input that is used by the channel to capture the counter value. In output compare or PWM mode, configures the trigger input used to modulate the channel output. When modulating the output, the output is forced to the channel initial value whenever the trigger is not asserted.

Note: No matter how many external trigger sources there are, only input trigger 0 and 1 are used. The even numbered channels share the input trigger 0 and the odd numbered channels share the second input trigger 1.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number
- enable – true: Configures trigger input 0 or 1 to be used by channel; false: Trigger input has no effect on the channel

void TPM_EnableInterrupts(TPM_Type *base, uint32_t mask)

Enables the selected TPM interrupts.

Parameters

- base – TPM peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration tpm_interrupt_enable_t

void TPM_DisableInterrupts(TPM_Type *base, uint32_t mask)

Disables the selected TPM interrupts.

Parameters

- base – TPM peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration tpm_interrupt_enable_t

uint32_t TPM_GetEnabledInterrupts(TPM_Type *base)

Gets the enabled TPM interrupts.

Parameters

- base – TPM peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration tpm_interrupt_enable_t

void TPM_RegisterCallBack(TPM_Type *base, *tpm_callback_t* callback)

Register callback.

If channel or overflow interrupt is enabled by the user, then a callback can be registered which will be invoked when the interrupt is triggered.

Parameters

- base – TPM peripheral base address
- callback – Callback function

void TPM_DriverIRQHandler(uint32_t instance)

TPM driver IRQ handler common entry.

This function provides the common IRQ request entry for TPM.

Parameters

- instance – TPM instance.

static inline uint32_t TPM_GetChannelValue(TPM_Type *base, *tpm_chnl_t* chnlNumber)

Gets the TPM channel value.

Note: The TPM channel value contain the captured TPM counter value for the input modes or the match value for the output modes.

Parameters

- base – TPM peripheral base address
- chnlNumber – The channel number

Returns

The channle CnV regisyer value.

static inline uint32_t TPM_GetStatusFlags(TPM_Type *base)

Gets the TPM status flags.

Parameters

- base – TPM peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration tpm_status_flags_t

static inline void TPM_ClearStatusFlags(TPM_Type *base, uint32_t mask)

Clears the TPM status flags.

Parameters

- base – TPM peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration tpm_status_flags_t

static inline *status_t* TPM_SetTimerPeriod(TPM_Type *base, uint32_t ticks)

Sets the timer period in units of ticks.

Timers counts from 0 until it equals the count value set here. The count value is written to the MOD register.

Note:

a. This API allows the user to use the TPM module as a timer. Do not mix usage of this API with TPM's PWM setup API's.

b. Call the utility macros provided in the fsl_common.h to convert usec or msec to ticks.

Parameters

- base – TPM peripheral base address
- ticks – A timer period in units of ticks, which should be equal or greater than 1.

Returns

kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

static inline uint32_t TPM_GetCurrentTimerCount(TPM_Type *base)

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the fsl_common.h to convert ticks to usec or msec.

Parameters

- base – TPM peripheral base address

Returns

The current counter value in ticks

static inline void TPM_StartTimer(TPM_Type *base, *tpm_clock_source_t* clockSource)

Starts the TPM counter.

Parameters

- base – TPM peripheral base address
- clockSource – TPM clock source; once clock source is set the counter will start running

static inline *status_t* TPM_StopTimer(TPM_Type *base)

Stops the TPM counter.

Parameters

- base – TPM peripheral base address

Returns

kStatus_Success PWM setup successful kStatus_Timeout PWM setup timeout when write register CnSC

FSL_TPM_DRIVER_VERSION

TPM driver version 2.4.2.

enum _tpm_chnl

List of TPM channels.

Note: Actual number of available channels is SoC dependent

Values:

enumerator kTPM_Chnl_0

TPM channel number 0

enumerator kTPM_Chnl_1

TPM channel number 1

enumerator kTPM_Chnl_2

TPM channel number 2

enumerator kTPM_Chnl_3

TPM channel number 3

enumerator kTPM_Chnl_4

TPM channel number 4

enumerator kTPM_Chnl_5

TPM channel number 5

enumerator kTPM_Chnl_6

TPM channel number 6

enumerator kTPM_Chnl_7

TPM channel number 7

enum _tpm_pwm_mode

TPM PWM operation modes.

Values:

enumerator kTPM_EdgeAlignedPwm

Edge aligned PWM

enumerator kTPM_CenterAlignedPwm

Center aligned PWM

enumerator kTPM_CombinedPwm

Combined PWM (Edge-aligned, center-aligned, or asymmetrical PWMs can be obtained in combined mode using different software configurations)

enum _tpm_pwm_level_select

TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

Values:

enumerator kTPM_HighTrue

High true pulses

enumerator kTPM_LowTrue

Low true pulses

enum _tpm_pwm_pause_level_select

TPM PWM output when first enabled or paused: set or clear.

Values:

enumerator kTPM_ClearOnPause

Clear Output when counter first enabled or paused.

enumerator kTPM_SetOnPause

Set Output when counter first enabled or paused.

enum _tpm_chnl_control_bit_mask

List of TPM channel modes and level control bit mask.

Values:

enumerator kTPM_ChnlELSnAMask

Channel ELSA bit mask.

enumerator kTPM_ChnlELSnBMask

Channel ELSB bit mask.

enumerator kTPM_ChnlMSAMask

Channel MSA bit mask.

enumerator kTPM_ChnlMSBMask

Channel MSB bit mask.

enum _tpm_trigger_select

Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

Values:

enumerator kTPM_Trigger_Select_0

enumerator kTPM_Trigger_Select_1

enumerator kTPM_Trigger_Select_2

enumerator kTPM_Trigger_Select_3

enumerator kTPM_Trigger_Select_4

enumerator kTPM_Trigger_Select_5

enumerator kTPM_Trigger_Select_6

enumerator kTPM_Trigger_Select_7

enumerator kTPM_Trigger_Select_8

enumerator kTPM_Trigger_Select_9

enumerator kTPM_Trigger_Select_10

enumerator kTPM_Trigger_Select_11

enumerator kTPM_Trigger_Select_12

enumerator kTPM_Trigger_Select_13

enumerator kTPM_Trigger_Select_14

enumerator kTPM_Trigger_Select_15

enum _tpm_trigger_source

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal triger.

Values:

enumerator kTPM_TriggerSource_External

Use external trigger input

enumerator kTPM_TriggerSource_Internal

Use internal trigger (channel pin input capture)

enum _tpm_ext_trigger_polarity

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

Values:

enumerator kTPM_ExtTrigger_Active_High

External trigger input is active high

enumerator kTPM_ExtTrigger_Active_Low

External trigger input is active low

enum _tpm_output_compare_mode

TPM output compare modes.

Values:

enumerator kTPM_NoOutputSignal

No channel output when counter reaches CnV

enumerator kTPM_ToggleOnMatch
Toggle output

enumerator kTPM_ClearOnMatch
Clear output

enumerator kTPM_SetOnMatch
Set output

enumerator kTPM_HighPulseOutput
Pulse output high

enumerator kTPM_LowPulseOutput
Pulse output low

enum _tpm_input_capture_edge
TPM input capture edge.

Values:

enumerator kTPM_RisingEdge
Capture on rising edge only

enumerator kTPM_FallingEdge
Capture on falling edge only

enumerator kTPM_RiseAndFallEdge
Capture on rising or falling edge

enum _tpm_quad_decode_mode
TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

Values:

enumerator kTPM_QuadPhaseEncode
Phase A and Phase B encoding mode

enumerator kTPM_QuadCountAndDir
Count and direction encoding mode

enum _tpm_phase_polarity
TPM quadrature phase polarities.

Values:

enumerator kTPM_QuadPhaseNormal
Phase input signal is not inverted

enumerator kTPM_QuadPhaseInvert
Phase input signal is inverted

enum _tpm_clock_source
TPM clock source selection.

Values:

enumerator kTPM_SystemClock
System clock

enumerator kTPM_ExternalClock
External TPM_EXTCLK pin clock

enumerator kTPM_ExternalInputTriggerClock
Selected external input trigger clock

enum _tpm_clock_prescale
TPM prescale value selection for the clock source.

Values:

enumerator kTPM_Prescale_Divide_1
Divide by 1

enumerator kTPM_Prescale_Divide_2
Divide by 2

enumerator kTPM_Prescale_Divide_4
Divide by 4

enumerator kTPM_Prescale_Divide_8
Divide by 8

enumerator kTPM_Prescale_Divide_16
Divide by 16

enumerator kTPM_Prescale_Divide_32
Divide by 32

enumerator kTPM_Prescale_Divide_64
Divide by 64

enumerator kTPM_Prescale_Divide_128
Divide by 128

enum _tpm_interrupt_enable
List of TPM interrupts.

Values:

enumerator kTPM_Chnl0InterruptEnable
Channel 0 interrupt.

enumerator kTPM_Chnl1InterruptEnable
Channel 1 interrupt.

enumerator kTPM_Chnl2InterruptEnable
Channel 2 interrupt.

enumerator kTPM_Chnl3InterruptEnable
Channel 3 interrupt.

enumerator kTPM_Chnl4InterruptEnable
Channel 4 interrupt.

enumerator kTPM_Chnl5InterruptEnable
Channel 5 interrupt.

enumerator kTPM_Chnl6InterruptEnable
Channel 6 interrupt.

enumerator kTPM_Chnl7InterruptEnable
Channel 7 interrupt.

enumerator kTPM_TimeOverflowInterruptEnable
Time overflow interrupt.

enum _tpm_status_flags
List of TPM flags.

Values:

enumerator kTPM_Chnl0Flag
Channel 0 flag

enumerator kTPM_Chnl1Flag
Channel 1 flag

enumerator kTPM_Chnl2Flag
Channel 2 flag

enumerator kTPM_Chnl3Flag
Channel 3 flag

enumerator kTPM_Chnl4Flag
Channel 4 flag

enumerator kTPM_Chnl5Flag
Channel 5 flag

enumerator kTPM_Chnl6Flag
Channel 6 flag

enumerator kTPM_Chnl7Flag
Channel 7 flag

enumerator kTPM_TimeOverflowFlag
Time overflow flag

typedef enum *_tpm_chnl* tpm_chnl_t
List of TPM channels.

Note: Actual number of available channels is SoC dependent

typedef enum *_tpm_pwm_mode* tpm_pwm_mode_t
TPM PWM operation modes.

typedef enum *_tpm_pwm_level_select* tpm_pwm_level_select_t
TPM PWM output pulse mode: high-true, low-true or no output.

Note: When the TPM has PWM pause level select feature, the PWM output cannot be turned off by selecting the output level. In this case, the channel must be closed to close the PWM output.

typedef enum *_tpm_pwm_pause_level_select* tpm_pwm_pause_level_select_t
TPM PWM output when first enabled or paused: set or clear.

typedef enum *_tpm_chnl_control_bit_mask* tpm_chnl_control_bit_mask_t
List of TPM channel modes and level control bit mask.

typedef struct *_tpm_chnl_pwm_signal_param* tpm_chnl_pwm_signal_param_t
Options to configure a TPM channel's PWM signal.

typedef enum *_tpm_trigger_select* tpm_trigger_select_t

Trigger sources available.

This is used for both internal & external trigger sources (external trigger sources available in certain SoC's)

Note: The actual trigger sources available is SoC-specific.

typedef enum *_tpm_trigger_source* tpm_trigger_source_t

Trigger source options available.

Note: This selection is available only on some SoC's. For SoC's without this selection, the only trigger source available is internal triger.

typedef enum *_tpm_ext_trigger_polarity* tpm_ext_trigger_polarity_t

External trigger source polarity.

Note: Selects the polarity of the external trigger source.

typedef enum *_tpm_output_compare_mode* tpm_output_compare_mode_t

TPM output compare modes.

typedef enum *_tpm_input_capture_edge* tpm_input_capture_edge_t

TPM input capture edge.

typedef struct *_tpm_dual_edge_capture_param* tpm_dual_edge_capture_param_t

TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_quad_decode_mode* tpm_quad_decode_mode_t

TPM quadrature decode modes.

Note: This mode is available only on some SoC's.

typedef enum *_tpm_phase_polarity* tpm_phase_polarity_t

TPM quadrature phase polarities.

typedef struct *_tpm_phase_param* tpm_phase_params_t

TPM quadrature decode phase parameters.

typedef enum *_tpm_clock_source* tpm_clock_source_t

TPM clock source selection.

typedef enum *_tpm_clock_prescale* tpm_clock_prescale_t

TPM prescale value selection for the clock source.

typedef struct *_tpm_config* tpm_config_t

TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

typedef enum *_tpm_interrupt_enable* tpm_interrupt_enable_t

List of TPM interrupts.

typedef enum *_tpm_status_flags* tpm_status_flags_t

List of TPM flags.

typedef void (*tpm_callback_t)(TPM_Type *base)

TPM callback function pointer.

Param base
TPM peripheral base address.

TPM_TIMEOUT

Max loops to wait for writing register.

When writing MOD CnV CnSC and SC register, driver will wait until register is updated. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

TPM_MAX_COUNTER_VALUE(x)

Help macro to get the max counter value.

struct _tpm_chnl_pwm_signal_param

#include <fsl_tpm.h> Options to configure a TPM channel's PWM signal.

Public Members

tpm_chnl_t chnlNumber

TPM channel to configure. In combined mode (available in some SoC's), this represents the channel pair number

tpm_pwm_pause_level_select_t pauseLevel

PWM output level when counter first enabled or paused

tpm_pwm_level_select_t level

PWM output active level select

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=always active signal (100% duty cycle)

uint8_t firstEdgeDelayPercent

Used only in combined PWM mode to generate asymmetrical PWM. Specifies the delay to the first edge in a PWM period. If unsure, leave as 0. Should be specified as percentage of the PWM period, (dutyCyclePercent + firstEdgeDelayPercent) value should be not greate than 100.

bool enableComplementary

Used only in combined PWM mode. true: The combined channels output complementary signals; false: The combined channels output same signals;

tpm_pwm_pause_level_select_t secPauseLevel

Used only in combined PWM mode. Define the second channel output level when counter first enabled or paused

uint8_t deadTimeValue[2]

The dead time value for channel n and n+1 in combined complementary PWM mode. Deadtime insertion is disabled when this value is zero, otherwise deadtime insertion for channel n/n+1 is configured as (deadTimeValue * 4) clock cycles. deadTimeValue's available range is 0 ~ 15.

struct __tpm__dual__edge__capture__param

#include <fsl_tpm.h> TPM dual edge capture parameters.

Note: This mode is available only on some SoC's.

Public Members

bool enableSwap

true: Use channel n+1 input, channel n input is ignored; false: Use channel n input, channel n+1 input is ignored

tpm_input_capture_edge_t currChanEdgeMode

Input capture edge select for channel n

tpm_input_capture_edge_t nextChanEdgeMode

Input capture edge select for channel n+1

struct __tpm__phase__param

#include <fsl_tpm.h> TPM quadrature decode phase parameters.

Public Members

uint32_t phaseFilterVal

Filter value, filter is disabled when the value is zero

tpm_phase_polarity_t phasePolarity

Phase polarity

struct __tpm__config

#include <fsl_tpm.h> TPM config structure.

This structure holds the configuration settings for the TPM peripheral. To initialize this structure to reasonable defaults, call the TPM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

tpm_clock_prescale_t prescale

Select TPM clock prescale value

bool useGlobalTimeBase

true: The TPM channels use an external global time base (the local counter still use for generate overflow interrupt and DMA request); false: All TPM channels use the local counter as their timebase

bool syncGlobalTimeBase

true: The TPM counter is synchronized to the global time base; false: disabled

tpm_trigger_select_t triggerSelect

Input trigger to use for controlling the counter operation

tpm_trigger_source_t triggerSource

Decides if we use external or internal trigger.

tpm_ext_trigger_polarity_t extTriggerPolarity
when using external trigger source, need selects the polarity of it.

bool enableDoze
true: TPM counter is paused in doze mode; false: TPM counter continues in doze mode

bool enableDebugMode
true: TPM counter continues in debug mode; false: TPM counter is paused in debug mode

bool enableReloadOnTrigger
true: TPM counter is reloaded on trigger; false: TPM counter not reloaded

bool enableStopOnOverflow
true: TPM counter stops after overflow; false: TPM counter continues running after overflow

bool enableStartOnTrigger
true: TPM counter only starts when a trigger is detected; false: TPM counter starts immediately

bool enablePauseOnTrigger
true: TPM counter will pause while trigger remains asserted; false: TPM counter continues running

uint8_t chnlPolarity
Defines the input/output polarity of the channels in POL register

2.67 TRDC: Trusted Resource Domain Controller

void TRDC_Init(TRDC_Type *base)
Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

void TRDC_Deinit(TRDC_Type *base)
De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)
Gets the domain ID of the current bus master.

Parameters

- base – TRDC peripheral base address.

Returns
Domain ID of current bus master.

void TRDC_GetHardwareConfig(TRDC_Type *base, *trdc_hardware_config_t* *config)
Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.

static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master)

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.

static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master, bool valid)

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.
- valid – True to set valid, false to set invalid.

void TRDC_GetDefaultProcessorDomainAssignment(*trdc_processor_domain_assignment_t* *domainAssignment)

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```
assignment->domainId         = 0U;
assignment->domainIdSelect   = kTRDC_DidMda;
assignment->lock             = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

void TRDC_GetDefaultNonProcessorDomainAssignment(*trdc_non_processor_domain_assignment_t* *domainAssignment)

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId            = 0U;
assignment->privilegeAttr       = kTRDC_ForceUser;
assignment->secureAttr          = kTRDC_ForceSecure;
assignment->bypassDomainId      = 0U;
assignment->lock                = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, const *trdc_processor_domain_assignment_t* *domainAssignment)

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter assignIndex specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the assignment structure.

static inline void TRDC_EnableProcessorDomainAssignment(TRDC_Type *base, bool enable)

Enables the processor bus master domain assignment.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const *trdc_non_processor_domain_assignment_t* *domainAssignment)

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter assignIndex specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to trdc_master_t in processor header file.
- domainAssignment – Pointer to the assignment structure.

void TRDC_GetDefaultIDAUConfig(*trdc_idau_config_t* *idauConfiguration)

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU     = false;
config->lockNonsecureMPU  = false;
config->lockSAU           = false;
```

Parameters

- idauConfiguration – Pointer to the configuration structure.

void TRDC_SetIDAU(TRDC_Type *base, const *trdc_idau_config_t* *idauConfiguration)

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
idauConfiguration.lockNonsecureMPU     = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- idauConfiguration – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)

Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)

Locks FLW registers. Once locked the registers can noy be updated until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)

Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)

Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

void TRDC_GetDefaultFlashLogicalWindowConfig(*trdc_flw_config_t* *flwConfiguration)

Gets the default FLW(Flsh Logical Window) configuration.

```
config->blockCount    = false;
config->arrayBaseAddr = false;
config->lock      = false;
config->enable    = false;
```

Parameters

- flwConfiguration – Pointer to the configuration structure.

void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const *trdc_flw_config_t* *flwConfiguration)

Sets the FLW function's configuration.

```
trdc_flw_config_t flwConfiguration;

TRDC_GetDefaultIDAUConfig(&flwConfiguration);

flwConfiguration.blockCount = 32U;
flwConfiguration.arrayBaseAddr = 0xXXXXXXXX;
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- flwConfiguration – Pointer to the configuration structure.

status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, *trdc_domain_error_t* *error)

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the kStatus_Success. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the kStatus_NoData.

status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, *trdc_domain_error_t* *error, uint8_t domainId)

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the kStatus_Success. The error information can be obtained from the parameter error. If no access violation is captured, this function returns the kStatus_NoData.

static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint8_t TRDC_GetMrcRegionNumber(TRDC_Type *base, uint8_t mrcIdx)

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.

Returns

the region number of the given MRC instance

void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mrcIdx, uint8_t regIdx)

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask, bool enable)

Enables the update of the selected domains.

After the domains' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.

- domainMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains whose NSE bits to clear.

void TRDC_MrcSetRegionDescriptorConfig(TRDC_Type *base, const *trdc_mrc_region_descriptor_config_t* *config)

Sets the configuration for one of the region descriptor per domain per MRC instnce.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

static inline void TRDC_SetMbcGlobalValid(TRDC_Type *base)

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

void TRDC_GetMbcHardwareConfig(TRDC_Type *base, *trdc_slave_memory_hardware_config_t* *config, uint8_t mbcIdx, uint8_t slvIdx)

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

void TRDC_MbcSetNseUpdateConfig(TRDC_Type *base, const *trdc_mbc_nse_update_config_t* *config, uint8_t mbcIdx)

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be updateby NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

void TRDC_MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

void TRDC_MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

void TRDC_MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slaveMask)

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

void TRDC_MbcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mbcIdx, uint8_t rgdIdx)

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

void TRDC_MbcSetMemoryBlockConfig(TRDC_Type *base, const *trdc_mbc_memory_block_config_t* *config)

Sets the configuration for one of the memory block per domain per MBC instnce.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

enum _trdc_did_sel

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

Values:

enumerator kTRDC_DidMda

Use MDAn[2:0] as DID.

enumerator kTRDC_DidInput

Use the input DID (DID_in) as DID.

enumerator kTRDC_DidMdaAndInput

Use MDAn[2] concatenated with DID_in[1:0] as DID.

enumerator kTRDC_DidReserved

Reserved.

enum _trdc_secure_attr

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

Values:

enumerator kTRDC_ForceSecure

Force the bus attribute for this master to secure.

enumerator kTRDC_ForceNonSecure
Force the bus attribute for this master to non-secure.

enumerator kTRDC_MasterSecure
Use the bus master's secure/nonsecure attribute directly.

enumerator kTRDC_MasterSecure1
Use the bus master's secure/nonsecure attribute directly.

enum _trdc_privilege_attr
TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

Values:

enumerator kTRDC_ForceUser
Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege
Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege
Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1
Use the bus master's attribute directly.

enum _trdc_controller
TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0
Memory block checker 0.

enumerator kTRDC_MemBlockController1
Memory block checker 1.

enumerator kTRDC_MemBlockController2
Memory block checker 2.

enumerator kTRDC_MemBlockController3
Memory block checker 3.

enumerator kTRDC_MemRegionChecker0
Memory region checker 0.

enumerator kTRDC_MemRegionChecker1
Memory region checker 1.

enumerator kTRDC_MemRegionChecker2
Memory region checker 2.

enumerator kTRDC_MemRegionChecker3
Memory region checker 3.

enumerator kTRDC_MemRegionChecker4
Memory region checker 4.

enumerator kTRDC_MemRegionChecker5
Memory region checker 5.

enumerator kTRDC_MemRegionChecker6
Memory region checker 6.

enum _trdc_error_state
TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or TRDC_MRCn_DERR_W1[EST].

Values:

enumerator kTRDC_ErrorStateNone
No access violation detected.

enumerator kTRDC_ErrorStateNone1
No access violation detected.

enumerator kTRDC_ErrorStateSingle
Single access violation detected.

enumerator kTRDC_ErrorStateMulti
Multiple access violation detected.

enum _trdc_error_attr
TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or TRDC_MRCn_DERR_W1[EATR].

Values:

enumerator kTRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum _trdc_error_type
TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum _trdc_region_descriptor

The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator kTRDC_RegionDescriptor0

Region descriptor 0.

enumerator kTRDC_RegionDescriptor1

Region descriptor 1.

enumerator kTRDC_RegionDescriptor2

Region descriptor 2.

enumerator kTRDC_RegionDescriptor3

Region descriptor 3.

enumerator kTRDC_RegionDescriptor4

Region descriptor 4.

enumerator kTRDC_RegionDescriptor5

Region descriptor 5.

enumerator kTRDC_RegionDescriptor6

Region descriptor 6.

enumerator kTRDC_RegionDescriptor7

Region descriptor 7.

enumerator kTRDC_RegionDescriptor8

Region descriptor 8.

enumerator kTRDC_RegionDescriptor9

Region descriptor 9.

enumerator kTRDC_RegionDescriptor10

Region descriptor 10.

enumerator kTRDC_RegionDescriptor11

Region descriptor 11.

enumerator kTRDC_RegionDescriptor12

Region descriptor 12.

enumerator kTRDC_RegionDescriptor13

Region descriptor 13.

enumerator kTRDC_RegionDescriptor14

Region descriptor 14.

enumerator kTRDC_RegionDescriptor15

Region descriptor 15.

enum _trdc_MRC_domain

The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator kTRDC_MrcDomain0

Domain 0.

enumerator kTRDC_MrcDomain1
Domain 1.

enumerator kTRDC_MrcDomain2
Domain 2.

enumerator kTRDC_MrcDomain3
Domain 3.

enumerator kTRDC_MrcDomain4
Domain 4.

enumerator kTRDC_MrcDomain5
Domain 5.

enumerator kTRDC_MrcDomain6
Domain 6.

enumerator kTRDC_MrcDomain7
Domain 7.

enumerator kTRDC_MrcDomain8
Domain 8.

enumerator kTRDC_MrcDomain9
Domain 9.

enumerator kTRDC_MrcDomain10
Domain 10.

enumerator kTRDC_MrcDomain11
Domain 11.

enumerator kTRDC_MrcDomain12
Domain 12.

enumerator kTRDC_MrcDomain13
Domain 13.

enumerator kTRDC_MrcDomain14
Domain 14.

enumerator kTRDC_MrcDomain15
Domain 15.

enum _trdc_MBC_domain
The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0
Domain 0.

enumerator kTRDC_MbcDomain1
Domain 1.

enumerator kTRDC_MbcDomain2
Domain 2.

enumerator kTRDC_MbcDomain3
Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum _trdc_MBC_memory
The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2
Memory 2.

enumerator kTRDC_MbcSlaveMemory3
Memory 3.

enum _trdc_MBC_bit
The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0
Bit 0.

enumerator kTRDC_MbcBit1
Bit 1.

enumerator kTRDC_MbcBit2
Bit 2.

enumerator kTRDC_MbcBit3
Bit 3.

enumerator kTRDC_MbcBit4
Bit 4.

enumerator kTRDC_MbcBit5
Bit 5.

enumerator kTRDC_MbcBit6
Bit 6.

enumerator kTRDC_MbcBit7
Bit 7.

enumerator kTRDC_MbcBit8
Bit 8.

enumerator kTRDC_MbcBit9
Bit 9.

enumerator kTRDC_MbcBit10
Bit 10.

enumerator kTRDC_MbcBit11
Bit 11.

enumerator kTRDC_MbcBit12
Bit 12.

enumerator kTRDC_MbcBit13
Bit 13.

enumerator kTRDC_MbcBit14
Bit 14.

enumerator kTRDC_MbcBit15
Bit 15.

enumerator kTRDC_MbcBit16
Bit 16.

enumerator kTRDC_MbcBit17
Bit 17.

enumerator kTRDC_MbcBit18
Bit 18.

enumerator kTRDC_MbcBit19
Bit 19.

enumerator kTRDC_MbcBit20
Bit 20.

enumerator kTRDC_MbcBit21
Bit 21.

enumerator kTRDC_MbcBit22
Bit 22.

enumerator kTRDC_MbcBit23
Bit 23.

enumerator kTRDC_MbcBit24
Bit 24.

enumerator kTRDC_MbcBit25
Bit 25.

enumerator kTRDC_MbcBit26
Bit 26.

enumerator kTRDC_MbcBit27
Bit 27.

enumerator kTRDC_MbcBit28
Bit 28.

enumerator kTRDC_MbcBit29
Bit 29.

enumerator kTRDC_MbcBit30
Bit 30.

enumerator kTRDC_MbcBit31

Bit 31.

typedef struct *_trdc_hardware_config* trdc_hardware_config_t

TRDC hardware configuration.

typedef struct *_trdc_slave_memory_hardware_config* trdc_slave_memory_hardware_config_t

Hardware configuration of the two slave memories within each MBC(memory block checker).

typedef enum *_trdc_did_sel* trdc_did_sel_t

TRDC domain ID select method, the register bit TRDC_MDA_W0_0_DFMT0[DIDS], used for domain hit evaluation.

typedef enum *_trdc_secure_attr* trdc_secure_attr_t

TRDC secure attribute, the register bit TRDC_MDA_W0_0_DFMT0[SA], used for bus master domain assignment.

typedef struct *_trdc_processor_domain_assignment* trdc_processor_domain_assignment_t

Domain assignment for the processor bus master.

typedef enum *_trdc_privilege_attr* trdc_privilege_attr_t

TRDC privileged attribute, the register bit TRDC_MDA_W0_x_DFMT1[PA], used for non-processor bus master domain assignment.

typedef struct *_trdc_non_processor_domain_assignment* trdc_non_processor_domain_assignment_t

Domain assignment for the non-processor bus master.

typedef struct *_trdc_idau_config* trdc_idau_config_t

IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

typedef struct *_trdc_flw_config* trdc_flw_config_t

FLW(Flash Logical Window) configuration.

typedef enum *_trdc_controller* trdc_controller_t

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

typedef enum *_trdc_error_state* trdc_error_state_t

TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or TRDC_MRCn_DERR_W1[EST].

typedef enum *_trdc_error_attr* trdc_error_attr_t

TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or TRDC_MRCn_DERR_W1[EATR].

typedef enum *_trdc_error_type* trdc_error_type_t

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

typedef struct *_trdc_domain_error* trdc_domain_error_t

TRDC domain error definition.

typedef struct *_trdc_memory_access_control_config* trdc_memory_access_control_config_t

Memory access control configuration for MBC/MRC.

typedef struct *_trdc_mrc_region_descriptor_config* trdc_mrc_region_descriptor_config_t

The configuration of each region descriptor per domain per MRC instance.

typedef struct *_trdc_mbc_nse_update_config* trdc_mbc_nse_update_config_t

The configuration of MBC NSE update.

typedef struct *_trdc_mbc_memory_block_config* trdc_mbc_memory_block_config_t
The configuration of each memory block per domain per MBC instance.

FSL_TRDC_DRIVER_VERSION

struct trdc_hardware_config
#include <fsl_trdc.h> TRDC hardware configuration.

Public Members

uint8_t masterNumber
Number of bus masters.

uint8_t domainNumber
Number of domains.

uint8_t mbcNumber
Number of MBCs.

uint8_t mrcNumber
Number of MRCs.

struct trdc_slave_memory_hardware_config
#include <fsl_trdc.h> Hardware configuration of the two slave memories within each MBC(memory block checker).

Public Members

uint32_t blockNum
Number of blocks.

uint32_t blockSize
Block size.

struct trdc_processor_domain_assignment
#include <fsl_trdc.h> Domain assignment for the processor bus master.

Public Members

uint32_t domainId
Domain ID.

uint32_t domainIdSelect
Domain ID select method, see trdc_did_sel_t.

uint32_t ___pad0___
Reserved.

uint32_t secureAttr
Secure attribute, see trdc_secure_attr_t.

uint32_t ___pad1___
Reserved.

uint32_t lock
Lock the register.

uint32_t ___pad2___
Reserved.

struct __trdc__non__processor__domain__assignment

#include <fsl_trdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see trdc_privilege_attr_t.

uint32_t secureAttr

Secure attribute, see trdc_secure_attr_t.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t ___pad0___

Reserved.

uint32_t lock

Lock the register.

uint32_t ___pad1___

Reserved.

struct __trdc__idau__config

#include <fsl_trdc.h> IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t ___pad0___

Reserved.

uint32_t lockSecureVTOR

Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR

Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU

Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU

Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU

Disable writes to SAU(Security Attribution Unit) registers.

uint32_t ___pad1___

Reserved.

struct __trdc__flw__config

#include <fsl_trdc.h> FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount
: Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr
: Flash array base address of the Flash Logical Window.

bool lock
: Disable writes to FLW registers.

bool enable
: Enable FLW function.

struct __trdc__domain__error
: *#include <fsl_trdc.h>* TRDC domain error definition.

Public Members

trdc_controller_t controller
: Which controller captured access violation.

uint32_t address
: Access address that generated access violation.

trdc_error_state_t errorState
: Error state.

trdc_error_attr_t errorAttr
: Error attribute.

trdc_error_type_t errorType
: Error type.

uint8_t errorPort
: Error port.

uint8_t domainId
: Domain ID.

uint8_t slaveMemoryIdx
: The slave memory index. Only apply when violation in MBC.

struct __trdc__memory__access__control__config
: *#include <fsl_trdc.h>* Memory access control configuration for MBC/MRC.

Public Members

uint32_t nonsecureUsrX
: Allow nonsecure user execute access.

uint32_t nonsecureUsrW
: Allow nonsecure user write access.

uint32_t nonsecureUsrR
: Allow nonsecure user read access.

uint32_t ___pad0___
: Reserved.

uint32_t nonsecurePrivX
: Allow nonsecure privilege execute access.

uint32_t nonsecurePrivW
: Allow nonsecure privilege write access.

uint32_t nonsecurePrivR
: Allow nonsecure privilege read access.

uint32_t ___pad1___
: Reserved.

uint32_t secureUsrX
: Allow secure user execute access.

uint32_t secureUsrW
: Allow secure user write access.

uint32_t secureUsrR
: Allow secure user read access.

uint32_t ___pad2___
: Reserved.

uint32_t securePrivX
: Allownsecure privilege execute access.

uint32_t securePrivW
: Allownsecure privilege write access.

uint32_t securePrivR
: Allownsecure privilege read access.

uint32_t ___pad3___
: Reserved.

uint32_t lock
: Lock the configuration until next reset, only apply to access control register 0.

struct __trdc__mrc__region__descriptor__config
: *#include <fsl_trdc.h>* The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect
: Select one of the 8 access control policies for this region, for access cotrol policies see trdc_memory_access_control_config_t.

uint32_t startAddr
: Physical start address.

bool valid
: Lock the register.

bool nseEnable
: Enable non-secure accesses and disable secure accesses.

uint32_t endAddr
: Physical start address.

uint8_t mrcIdx
The index of the MRC for this configuration to take effect.

uint8_t domainIdx
The index of the domain for this configuration to take effect.

uint8_t regionIdx
The index of the region for this configuration to take effect.

struct __trdc_mbc_nse_update_config
#include <fsl_trdc.h> The configuration of MBC NSE update.

Public Members

uint32_t ___pad0___
Reserved.

uint32_t wordIdx
MBC configuration word index to be updated.

uint32_t ___pad1___
Reserved.

uint32_t memorySelect
Bit mask of the selected memory to be updated. _trdc_MBC_memory.

uint32_t ___pad2___
Reserved.

uint32_t domianSelect
Bit mask of the selected domain to be updated. _trdc_MBC_domain.

uint32_t ___pad3___
Reserved.

uint32_t autoIncrement
Whether to increment the word index after current word is updated using this configuration.

struct __trdc_mbc_memory_block_config
#include <fsl_trdc.h> The configuration of each memory block per domain per MBC instance.

Public Members

uint32_t memoryAccessControlSelect
Select one of the 8 access control policies for this memory block, for access cotrol policies see trdc_memory_access_control_config_t.

uint32_t nseEnable
Enable non-secure accesses and disable secure accesses.

uint32_t mbcIdx
The index of the MBC for this configuration to take effect.

uint32_t domainIdx
The index of the domain for this configuration to take effect.

uint32_t slaveMemoryIdx
The index of the slave memory for this configuration to take effect.

uint32_t memoryBlockIdx
The index of the memory block for this configuration to take effect.

2.68 TRGMUX: Trigger Mux Driver

static inline void TRGMUX_LockRegister(TRGMUX_Type *base, uint32_t index)

Sets the flag of the register which is used to mark writeable.

The function sets the flag of the register which is used to mark writeable. Example:

```
TRGMUX_LockRegister(TRGMUX0,kTRGMUX_Trgmux0Dmamux0);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum trgmux_device_t defined in <SOC>.h.

status_t TRGMUX_SetTriggerSource(TRGMUX_Type *base, uint32_t index, *trgmux_trigger_input_t* input, uint32_t trigger_src)

Configures the trigger source of the appointed peripheral.

The function configures the trigger source of the appointed peripheral. Example:

```
TRGMUX_SetTriggerSource(TRGMUX0, kTRGMUX_Trgmux0Dmamux0, kTRGMUX_TriggerInput0,
↪ kTRGMUX_SourcePortPin);
```

Parameters

- base – TRGMUX peripheral base address.
- index – The index of the TRGMUX register, see the enum trgmux_device_t defined in <SOC>.h.
- input – The MUX select for peripheral trigger input
- trigger_src – The trigger inputs for various peripherals. See the enum trgmux_source_t defined in <SOC>.h.

Return values

- kStatus_Success – Configured successfully.
- kStatus_TRGMUX_Locked – Configuration failed because the register is locked.

FSL_TRGMUX_DRIVER_VERSION

TRGMUX driver version.

TRGMUX configure status.

Values:

enumerator kStatus_TRGMUX_Locked

Configure failed for register is locked

enum _trgmux_trigger_input

Defines the MUX select for peripheral trigger input.

Values:

enumerator kTRGMUX_TriggerInput0

The MUX select for peripheral trigger input 0

enumerator kTRGMUX_TriggerInput1

The MUX select for peripheral trigger input 1

enumerator kTRGMUX_TriggerInput2
The MUX select for peripheral trigger input 2

enumerator kTRGMUX_TriggerInput3
The MUX select for peripheral trigger input 3

typedef enum *_trgmux_trigger_input* trgmux_trigger_input_t
Defines the MUX select for peripheral trigger input.

2.69 TSTMR: Timestamp Timer Driver

void TSTMR_Init(TSTMR_Type *base)
Init TSTMR.

This function initializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

void TSTMR_Deinit(TSTMR_Type *base)
Deinit TSTMR.

This function deinitializes the TSTMR module.

Parameters

- base – TSTMR peripheral base address.

FSL_TSTMR_DRIVER_VERSION
Version 2.1.0

static inline uint64_t TSTMR_ReadTimeStamp(TSTMR_Type *base)
Reads the time stamp.

This function reads the low and high registers and returns the 56-bit free running counter value. This can be read by software at any time to determine the software ticks. TSTMR registers can be read with 32-bit accesses only. The TSTMR LOW read should occur first, followed by the TSTMR HIGH read.

Parameters

- base – TSTMR peripheral base address.

Returns
The 56-bit time stamp value.

void TSTMR_DelayUs(TSTMR_Type *base, uint64_t delayInUs)
Delays for a specified number of microseconds.

This function repeatedly reads the timestamp register and waits for the user-specified delay value.

Parameters

- base – TSTMR peripheral base address.
- delayInUs – Delay value in microseconds.

2.70 Upower

enum drive_mode_e

Drive Mode: OD(Over Drive), ND(Nominal Drive), UD(Under Drive)

Values:

enumerator DRIVE_MODE_UD

enumerator DRIVE_MODE_ND

enumerator DRIVE_MODE_OD

enumerator DRIVE_MODE_NUM

enum _upower_ps_mask

upower power switch mask definition.

Values:

enumerator kUPOWER_PS_M33

RTD: CM33 core complex/platform/peripherals

enumerator kUPOWER_PS_FUSION

RTD: Fusion core and peripherals

enumerator kUPOWER_PS_A35_0

AD: A35[0] core complex

enumerator kUPOWER_PS_A35_1

AD: A35[1] core complex

enumerator kUPOWER_PS_L2_CACHE

AD: 256KB L2 cache

enumerator kUPOWER_PS_AD_NIC

AD: A35 NIC_PER, NIC_AP

enumerator kUPOWER_PS_AD_PER

AD: A35 peripherals and croessbar

enumerator kUPOWER_PS_GPU3D

LPAV: 3DGPU

enumerator kUPOWER_PS_HIFI4

LPAV: HiFi4 complex

enumerator kUPOWER_PS_DDRC

LPAV: DDR controller

enumerator kUPOWER_PS_PXP_EPDC

LPAV: PXP, EPDC

enumerator kUPOWER_PS_MIPI_DSI

LPAV: MIPI DSI

enumerator kUPOWER_PS_MIPI_CSI

LPAV: MIPI CSI

enumerator kUPOWER_PS_AV_NIC

LPAV: NIC, System RAM2, DCNano

enumerator kUPOWER_PS_FUSION_AO

RTD: Fusion “Always ON”

enumerator kUPOWER_PS_FUSES
RTD: Fuses

enum _upower_mp0_mask
upower memory partitions 0 mask definition.

Values:

enumerator kUPOWER_MP0_A35_0
AD: A35 core0

enumerator kUPOWER_MP0_A35_1
AD: A35 core1

enumerator kUPOWER_MP0_A35_CORE_A
AD: A35 core0/1

enumerator kUPOWER_MP0_A35_CORE_B
AD: A35 core0/1

enumerator kUPOWER_MP0_A35_CORE_C
AD: A35 core0/1

enumerator kUPOWER_MP0_CAAM
AD: CAAM

enumerator kUPOWER_MP0_DMA1
AD: DMA1

enumerator kUPOWER_MP0_FLEXSPI2
AD: FlexSPI2

enumerator kUPOWER_MP0_AD_SYSTEM_A
AD: System

enumerator kUPOWER_MP0_AD_SYSTEM_B
AD: System

enumerator kUPOWER_MP0_USB
AD: USB

enumerator kUPOWER_MP0_USDHC0
AD: uSDHC0

enumerator kUPOWER_MP0_USDHC1
AD: uSDHC1

enumerator kUPOWER_MP0_USDHC2
AD: uSDHC2

enumerator kUPOWER_MP0_GIC
AD: GIC

enumerator kUPOWER_MP0_ENET
AD: ENET

enumerator kUPOWER_MP0_BRAINSHIFT
AD: Brainshift

enumerator kUPOWER_MP0_DCNANO_A
LPAV: DCNano

enumerator kUPOWER_MP0_DCNANO_B
LPAV: DCNano

enumerator kUPOWER_MP0_EPDC_A
LPAV: EPDC

enumerator kUPOWER_MP0_EPDC_B
LPAV: EPDC

enumerator kUPOWER_MP0_DMA2
LPAV: DMA2

enumerator kUPOWER_MP0_GPU2D_A
LPAV: GPU2D

enumerator kUPOWER_MP0_GPU2D_B
LPAV: GPU2D

enumerator kUPOWER_MP0_GPU3D_A
LPAV: GPU3D

enumerator kUPOWER_MP0_GPU3D_B
LPAV: GPU3D

enumerator kUPOWER_MP0_HIFI4
LPAV: Hi-Fi DSP

enumerator kUPOWER_MP0_ISI
LPAV: ISI

enumerator kUPOWER_MP0_MIPI_CSI
LPAV: MIPI CSI

enumerator kUPOWER_MP0_MIPI_DSI
LPAV: MIPI DSI

enumerator kUPOWER_MP0_PXP
LPAV: PXP

enumerator kUPOWER_MP0_AV_SYSTEM
LPAV: System

enum _upower_mp1_mask
upower memory partitions 1 mask definition.

Values:

enumerator kUPOWER_MP1_CASPER
RTD: Casper

enumerator kUPOWER_MP1_DMA0
RTD: DMA0

enumerator kUPOWER_MP1_FLEXCAN
RTD: FlexCAN (CAN-FD)

enumerator kUPOWER_MP1_FLEXSPI0
RTD: FlexSPI0 (OTFAD)

enumerator kUPOWER_MP1_FLEXSPI1
RTD: FlexSPI1

enumerator kUPOWER_MP1_M33
RTD: M33

enumerator kUPOWER_MP1_POWERQUAD
RTD: PowerQuad

enumerator kUPOWER_MP1_M33_ETF
RTD: M33-ETF

enumerator kUPOWER_MP1_SENTINEL_A
RTD: Sentinel

enumerator kUPOWER_MP1_SENTINEL_B
RTD: Sentinel

enumerator kUPOWER_MP1_UPOWER_A
RTD: uPower

enumerator kUPOWER_MP1_UPOWER_B
RTD: uPower

enumerator kUPOWER_MP1_RTD_SYSTEM
RTD: System

enumerator kUPOWER_MP1_SYSTEM0
RTD: System[0]

enumerator kUPOWER_MP1_SYSTEM1
RTD: System[1]

enumerator kUPOWER_MP1_SYSTEM2
RTD: System[2]

enumerator kUPOWER_MP1_SYSTEM3
RTD: System[3]

enumerator kUPOWER_MP1_SYSTEM4
RTD: System[4]

enumerator kUPOWER_MP1_SYSTEM5
RTD: System[5]

enumerator kUPOWER_MP1_SYSTEM6
RTD: System[6]

enumerator kUPOWER_MP1_SYSTEM7
RTD: System[7]

enumerator kUPOWER_MP1_SENTINEL_C
RTD: Sentinel

typedef enum *_upower_ps_mask* upower_ps_mask_t
upower power switch mask definition.

typedef enum *_upower_mp0_mask* upower_mp0_mask_t
upower memory partitions 0 mask definition.

typedef enum *_upower_mp1_mask* upower_mp1_mask_t
upower memory partitions 1 mask definition.

typedef struct *_upower_version* upower_version_t

void UPOWER_CheckReqWithArgs(upwr_sg_t sg, uint32_t *sgfptr, upwr_resp_t *errptr, int *retptr, uint32_t attempts)

Check status of current request to uPower.

Will block till related callback function has been called

@sg Indicate which Service Group that request point to @sgfptr: pointer to the variable that will hold the function id of the last request completed @errptr: pointer to the variable that will hold the error code @retptr: pointer to the variable that will hold the value returned by the last request completed (invalid if the last request completed didn't return any value) @attempts: maximum number of polling attempts; if attempts > 0 and is reached with no service response received, upwr_poll_req_status returns UPWR_REQ_BUSY and variables pointed by sgfptr, retptr and errptr are not updated; if attempts = 0, upwr_poll_req_status waits "forever".

void uPower_IRQHandler(void)

uPower specific IRQ handler.

void UPOWER_CheckReq(upwr_sg_t sg)

Check status of current request to uPower.

Will block till related callback function has been called

@sg Indicate which Service Group that request point to

void UPOWER_Init(*upower_version_t* *pVersion)

Initialize MU interface for uPower access.

Parameters

- pVersion – Pointer to the structure to save uPower ROM and RAM versions

void UPOWER_Deinit(void)

Deinitialize MU interface for uPower access.

int UPOWER_PowerOnDomain(soc_domain_t domain)

Power on certain domain without reset.

Parameters

- domain – Target domain to power on.

Returns

0 if ok, failure otherwise.

int UPOWER_BootDomain(soc_domain_t domain)

Reset and kick off certain domain.

Parameters

- domain – Target domain to boot.

Returns

0 if ok, failure otherwise.

int UPOWER_PowerOnSwitches(*upower_ps_mask_t* mask)

Power on power switches.

Parameters

- mask – Bits to define which switch should be turned on. The value should be ORed by upower_ps_mask_t. Bit value 1 means the switch is to be powered on; Value 0 means the switch keeps unchanged.

Returns

0 if ok, failure otherwise.

int UPOWER_PowerOffSwitches(*upower_ps_mask_t* mask)

Power off power switches.

Parameters

- mask – Bits to define which switch should be turned off. The value should be ORed by upower_ps_mask_t. Bit value 1 means the switch is to be powered off; Value 0 means the switch keeps unchanged.

Returns

0 if ok, failure otherwise.

int UPOWER_PowerOnMemPart(uint32_t mask0, uint32_t mask1)

Power on memory partitions array/periphery logic. If a memory is requested to turn on, but the power switch that feeds that memory is not, the power switch will be turned on automatically.

The parameter mask bits define which memory partition should be turned on. The value should be ORed by upower_mp0_mask_t or upower_mp1_mask_t. Mask bit value 1 means the switch is to be powered on; Value 0 means the switch keeps unchanged.

Parameters

- mask0 – memory partition group 0 mask, see upower_mp0_mask_t.
- mask1 – memory partition group 1 mask, see upower_mp1_mask_t.

Returns

0 if ok, failure otherwise.

int UPOWER_PowerOffMemPart(uint32_t mask0, uint32_t mask1)

Power off memory partitions array/periphery logic.

The parameter mask bits define which memory partition should be turned off. The value should be ORed by upower_mp0_mask_t and upower_mp1_mask_t. Mask bit value 1 means the switch is to be powered off; Value 0 means the switch keeps unchanged.

Parameters

- mask0 – memory partition group 0 mask, see upower_mp0_mask_t.
- mask1 – memory partition group 1 mask, see upower_mp1_mask_t.

Returns

0 if ok, failure otherwise.

int UPOWER_RetainMemPart(uint32_t mask0, uint32_t mask1)

Power on memory partitions array logic and power off its periphery logic. If a memory array is requested to turn on, but the power switch that feeds that memory is not, the power switch will be turned on automatically.

The parameter mask bits define which memory partition should be turned on. The value should be ORed by upower_mp0_mask_t or upower_mp1_mask_t. Mask bit value 1 means the switch is to be powered on; Value 0 means the switch keeps unchanged.

Parameters

- mask0 – memory partition group 0 mask, see upower_mp0_mask_t.
- mask1 – memory partition group 1 mask, see upower_mp1_mask_t.

Returns

0 if ok, failure otherwise.

int UPOWER_SetRtdUseDdr(bool use_ddr)

M33 call this API to inform uPower, M33 is using ddr.

Parameters

- use_ddr – not 0, true, means that RTD is using ddr. 0, false, means that, RTD is not using ddr.

Returns
0 if ok, failure otherwise(-1 if service group is busy, -3 if called in an invalid API state).

int UPOWER_PowerOnADInPDMode(void)

M33 call this API to Power On Application Domain when Application Domain is in Power Down/Deep Power Down mode. After upower get the msg, upower write a flag to registers according to msg. Then upower will get a WUU1 interrupt request and upower change Power Down mode/Deep Power mode to Active mode when Application Domain is in Power Down/Deep Power Down mode.

Returns
0 if ok, failure otherwise.

int UPOWER_SetPwrMgmtParam(upwr_pwm_param_t *pcfg_in)

set sg powermanagement parameters of upower.

please see upower_soc_defs.h file for struct upwr_pwm_param_t

Parameters

- pcfg_in – user's selection for powermanagement parameter of upower

Returns
0 if ok, failure otherwise.

int UPOWER_ReduceBuck23VoltInSTBY(void)

Reduce Buck2 and Buck3 voltage in STANDBY mode.

Returns
0 if ok, failure otherwise.

int UPOWER_SetDDRRetention(soc_domain_t domain, bool enable)

Set DDR retention control bit.

Parameters

- domain – Target domain to power on.
- enable – true means set ddr retention, false means clear ddr retention.

Returns
0 if ok, failure otherwise.

int UPOWER_SetLDO1Power(bool enable)

Set LDO1 rail power.

Parameters

- enable – True means on, false means off.

Returns
0 if ok, failure otherwise.

int UPOWER_SetBuck3Power(bool enable)

Set Buck3 rail power.

Parameters

- enable – True means on, false means off.

Returns
0 if ok, failure otherwise.

int UPOWER_ChngPmicVoltage(uint32_t rail, int voltage)

int UPOWER_SetPmicReg(uint32_t reg_addr, uint32_t reg_val)

Write PMIC registers by I2C.

Parameters

- reg_addr – means pmic ic target address.
- reg_val – means write data, specific data can be found in PCA9460.

Returns

0 if ok, failure otherwise.

int UPOWER_ReadPmicReg(uint32_t reg_addr, uint8_t *reg_val)

Read PMIC registers by I2C.

Parameters

- reg_addr – means pmic ic pca9460 target address.
- reg_val – means value of register.

Returns

0 if ok, failure otherwise.

void UPOWER_InitBuck2Buck3Table(void)

Init BUCK2 BUCK3 output voltage table.

int UPOWER_GetPmicVoltage(uint32_t rail, int *voltage)

get PMIC voltage.

Returns

0 if ok, failure otherwise.

int UPOWER_ChngRTDDomBias(*drive_mode_e* drive_mode)

Change Bias Configuration(biasing options: NBB, RBB, ARBB, AFBB; Bias Voltage) for RTD.

Parameters

- drive_mode – Drive Mode: UD, ND, OD.

Returns

0 if ok, failure otherwise.

FSL_UPOWER_DRIVER_VERSION

upower driver version (2.0.19.)

PMIC_BUCK1

pmic rail id.

PMIC_BUCK2

PMIC_BUCK3

PMIC_BUCK4

PMIC_LDO1

PMIC_LDO2

PMIC_LDO3

PMIC_LDO4

PMIC_LSW1

PMIC_LSW2

PMIC_LSW3

PMIC_LSW4

PMIC_VOLTAGE_1_1V
: pmic voltage.

PMIC_VOLTAGE_1_0V

PMIC_VOLTAGE_0_9V

PMIC_I2C_ADDR

PMIC_WRITE_DATA_SIZE

PMIC_IC_WRITE_DATA_SIZE

PMIC_READ_DATA_SIZE

PMIC_IC_READ_DATA_SIZE

PCA9460_BUCK23_DVS_CFG1_ADDR
: PCA9460 register.

PCA9460_BUCK23_DVS_CFG2_ADDR

PCA9460_BUCK2CTRL_ADDR

PCA9460_BUCK2OUT_DVS0_ADDR

PCA9460_BUCK2OUT_DVS1_ADDR

PCA9460_BUCK2OUT_DVS2_ADDR

PCA9460_BUCK2OUT_DVS3_ADDR

PCA9460_BUCK2OUT_DVS4_ADDR

PCA9460_BUCK2OUT_DVS5_ADDR

PCA9460_BUCK2OUT_DVS6_ADDR

PCA9460_BUCK2OUT_DVS7_ADDR

PCA9460_BUCK2OUT_STDBY_ADDR

PCA9460_BUCK2OUT_MAX_LIMIT_ADDR

PCA9460_BUCK2OUT_MIN_LIMIT_ADDR

PCA9460_BUCK3CTRL_ADDR

PCA9460_BUCK3OUT_DVS0_ADDR

PCA9460_LDO1_CFG_ADDR

PCA9460_LDO1_OUT_ADDR

BUCK23_DVS_CFG2_B2_DVS_CTRL_BITS
: PCA9460 BUCK23_DVS_CFG2 register

BUCK23_DVS_CFG2_B3_DVS_CTRL_BITS

BUCK23_DVS_CFG2_RSVD_BITS

B3_RAMP_BITS
PCA9460 BUCK3CTRL register

B3_LPMODE_BITS

B3_AD_BITS

B3_FPWM_BITS

B3_ENMODE_BITS

BUCK_OUTPUT_TABLE_SIZE

BUCK2_BUCK3_VOLTAGE_STEPS

L1_CSEL_BITS
PCA9460 LDO1_CFG register

L1_LLSEL_BITS

L1_LPMODE_BITS

L1_ENMODE_BITS

uint8_t val

uint8_t RSVD

uint8_t B3_DVS_CTRL

uint8_t B2_DVS_CTRL

struct *pca9460_buck23_dvs_cfg2_t* reg

uint8_t val

uint8_t B3_ENMODE

uint8_t B3_FPWM

uint8_t B3_AD

uint8_t B3_LPMODE

uint8_t B3_RAMP

struct *pca9460_buck3ctrl_t* reg

uint8_t val

uint8_t L1_ENMODE

uint8_t L1_LPMODE

uint8_t L1_LLSEL

uint8_t L1_CSEL

struct *pca9460_ldo1_cfg_t* reg

uint32_t romMajor

uint32_t romMinor

uint32_t romFixes

uint32_t ramMajor

uint32_t ramMinor

uint32_t ramFixes

union pca9460_buck23_dvs_cfg2_t
#include <fsl_upower.h>

union pca9460_buck3ctrl_t
#include <fsl_upower.h>

union pca9460_ldo1_cfg_t
#include <fsl_upower.h>

struct _upower_version
#include <fsl_upower.h>

struct reg

struct reg

struct reg

2.71 WDOG32: 32-bit Watchdog Timer

void WDOG32_GetDefaultConfig(*wdog32_config_t* *config)

Initializes the WDOG32 configuration structure.

This function initializes the WDOG32 configuration structure to default values. The default values are:

```
wdog32Config->enableWdog32 = true;
wdog32Config->clockSource = kWDOG32_ClockSource1;
wdog32Config->prescaler = kWDOG32_ClockPrescalerDivide1;
wdog32Config->workMode.enableWait = true;
wdog32Config->workMode.enableStop = false;
wdog32Config->workMode.enableDebug = false;
wdog32Config->testMode = kWDOG32_TestModeDisabled;
wdog32Config->enableUpdate = true;
wdog32Config->enableInterrupt = false;
wdog32Config->enableWindowMode = false;
wdog32Config->windowValue = 0U;
wdog32Config->timeoutValue = 0xFFFFU;
```

See also:

wdog32_config_t

Parameters

- config – Pointer to the WDOG32 configuration structure.

status_t WDOG32_Init(WDOG_Type *base, const *wdog32_config_t* *config)

Initializes the WDOG32 module.

This function initializes the WDOG32. To reconfigure the WDOG32 without forcing a reset first, enableUpdate must be set to true in the configuration.

Example:

```
wdog32_config_t config;
WDOG32_GetDefaultConfig(&config);
config.timeoutValue = 0x7ffU;
config.enableUpdate = true;
WDOG32_Init(wdog_base,&config);
```

Note: If there is errata ERR010536 (FSL_FEATURE_WDOG_HAS_ERRATA_010536 defined as 1), then after calling this function, user need delay at least 4 LPO clock cycles before accessing other WDOG32 registers.

Parameters

- base – WDOG32 peripheral base address.
- config – The configuration of the WDOG32.

Return values

- kStatus_Success – The initialization was successful
- kStatus_Timeout – The initialization timed out

status_t WDOG32_Deinit(WDOG_Type *base)

De-initializes the WDOG32 module.

This function shuts down the WDOG32. Ensure that the WDOG_CS.UPDATE is 1, which means that the register update is enabled.

Parameters

- base – WDOG32 peripheral base address.

Return values

- kStatus_Success – The de-initialization was successful
- kStatus_Timeout – The de-initialization timed out

status_t WDOG32_Unlock(WDOG_Type *base)

Unlocks the WDOG32 register written.

This function unlocks the WDOG32 register written.

Before starting the unlock sequence and following the configuration, disable the global interrupts. Otherwise, an interrupt could effectively invalidate the unlock sequence and the WCT may expire. After the configuration finishes, re-enable the global interrupts.

Parameters

- base – WDOG32 peripheral base address

Return values

- kStatus_Success – The unlock sequence was successful
- kStatus_Timeout – The unlock sequence timed out

void WDOG32_Enable(WDOG_Type *base)

Enables the WDOG32 module.

This function writes a value into the WDOG_CS register to enable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.

void WDOG32_Disable(WDOG_Type *base)

Disables the WDOG32 module.

This function writes a value into the WDOG_CS register to disable the WDOG32. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address

void WDOG32_EnableInterrupts(WDOG_Type *base, uint32_t mask)

Enables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to enable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to enable. The parameter can be a combination of the following source if defined:
  - kWDOG32_InterruptEnable

void WDOG32_DisableInterrupts(WDOG_Type *base, uint32_t mask)

Disables the WDOG32 interrupt.

This function writes a value into the WDOG_CS register to disable the WDOG32 interrupt. The WDOG_CS register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- mask – The interrupts to disabled. The parameter can be a combination of the following source if defined:
  - kWDOG32_InterruptEnable

static inline uint32_t WDOG32_GetStatusFlags(WDOG_Type *base)

Gets the WDOG32 all status flags.

This function gets all status flags.

Example to get the running flag:

```
uint32_t status;
status = WDOG32_GetStatusFlags(wdog_base) & kWDOG32_RunningFlag;
```

See also:

_wdog32_status_flags_t

- true: related status flag has been set.
- false: related status flag is not set.

Parameters

- base – WDOG32 peripheral base address

Returns

State of the status flag: asserted (true) or not-asserted (false).

void WDOG32_ClearStatusFlags(WDOG_Type *base, uint32_t mask)

Clears the WDOG32 flag.

This function clears the WDOG32 status flag.

Example to clear an interrupt flag:

```
WDOG32_ClearStatusFlags(wdog_base,kWDOG32_InterruptFlag);
```

Parameters

- base – WDOG32 peripheral base address.
- mask – The status flags to clear. The parameter can be any combination of the following values:
  - kWDOG32_InterruptFlag

void WDOG32_SetTimeoutValue(WDOG_Type *base, uint16_t timeoutCount)

Sets the WDOG32 timeout value.

This function writes a timeout value into the WDOG_TOVAL register. The WDOG_TOVAL register is a write-once register. To ensure the reconfiguration fits the timing of WCT, unlock function will be called inline.

Parameters

- base – WDOG32 peripheral base address
- timeoutCount – WDOG32 timeout value, count of WDOG32 clock ticks.

void WDOG32_SetWindowValue(WDOG_Type *base, uint16_t windowValue)

Sets the WDOG32 window value.

This function writes a window value into the WDOG_WIN register. The WDOG_WIN register is a write-once register. Please check the enableUpdate is set to true for calling WDOG32_Init to do wdog initialize. Before call the re-configuration APIs, ensure that the WCT window is still open and this register has not been written in this WCT while the function is called.

Parameters

- base – WDOG32 peripheral base address.
- windowValue – WDOG32 window value.

static inline void WDOG32_Refresh(WDOG_Type *base)

Refreshes the WDOG32 timer.

This function feeds the WDOG32. This function should be called before the Watchdog timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WDOG32 peripheral base address

static inline uint16_t WDOG32_GetCounterValue(WDOG_Type *base)

Gets the WDOG32 counter value.

This function gets the WDOG32 counter value.

Parameters

- base – WDOG32 peripheral base address.

Returns
Current WDOG32 counter value.

WDOG_FIRST_WORD_OF_UNLOCK
First word of unlock sequence

WDOG_SECOND_WORD_OF_UNLOCK
Second word of unlock sequence

WDOG_FIRST_WORD_OF_REFRESH
First word of refresh sequence

WDOG_SECOND_WORD_OF_REFRESH
Second word of refresh sequence

FSL_WDOG32_DRIVER_VERSION
WDOG32 driver version.

enum _wdog32_clock_source
Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

Values:

enumerator kWDOG32_ClockSource0
Clock source 0

enumerator kWDOG32_ClockSource1
Clock source 1

enumerator kWDOG32_ClockSource2
Clock source 2

enumerator kWDOG32_ClockSource3
Clock source 3

enum _wdog32_clock_prescaler
Describes the selection of the clock prescaler.

Values:

enumerator kWDOG32_ClockPrescalerDivide1
Divided by 1

enumerator kWDOG32_ClockPrescalerDivide256
Divided by 256

enum _wdog32_test_mode
Describes WDOG32 test mode.

Values:

enumerator kWDOG32_TestModeDisabled
Test Mode disabled

enumerator kWDOG32_UserModeEnabled
User Mode enabled

enumerator kWDOG32_LowByteTest
Test Mode enabled, only low byte is used

enumerator kWDOG32_HighByteTest
Test Mode enabled, only high byte is used

enum __wdog32_interrupt_enable_t
WDOG32 interrupt configuration structure.

This structure contains the settings for all of the WDOG32 interrupt configurations.

Values:

enumerator kWDOG32_InterruptEnable
Interrupt is generated before forcing a reset

enum __wdog32_status_flags_t
WDOG32 status flags.

This structure contains the WDOG32 status flags for use in the WDOG32 functions.

Values:

enumerator kWDOG32_RunningFlag
Running flag, set when WDOG32 is enabled

enumerator kWDOG32_InterruptFlag
Interrupt flag, set when interrupt occurs

typedef enum *_wdog32_clock_source* wdog32_clock_source_t
Max loops to wait for WDOG32 unlock sequence complete.

This is the maximum number of loops to wait for the wdog32 unlock sequence to complete. If set to 0, it will wait indefinitely until the unlock sequence is complete.

Max loops to wait for WDOG32 reconfiguration complete.

This is the maximum number of loops to wait for the wdog32 reconfiguration to complete. If set to 0, it will wait indefinitely until the reconfiguration is complete.

Describes WDOG32 clock source.

typedef enum *_wdog32_clock_prescaler* wdog32_clock_prescaler_t
Describes the selection of the clock prescaler.

typedef struct *_wdog32_work_mode* wdog32_work_mode_t
Defines WDOG32 work mode.

typedef enum *_wdog32_test_mode* wdog32_test_mode_t
Describes WDOG32 test mode.

typedef struct *_wdog32_config* wdog32_config_t
Describes WDOG32 configuration structure.

struct __wdog32_work_mode
#include <fsl_wdog32.h> Defines WDOG32 work mode.

Public Members

bool enableWait
Enables or disables WDOG32 in wait mode

bool enableStop
Enables or disables WDOG32 in stop mode

bool enableDebug
Enables or disables WDOG32 in debug mode

struct _wdog32_config
#include <fsl_wdog32.h> Describes WDOG32 configuration structure.

Public Members

bool enableWdog32
Enables or disables WDOG32

wdog32_clock_source_t clockSource
Clock source select

wdog32_clock_prescaler_t prescaler
Clock prescaler value

wdog32_work_mode_t workMode
Configures WDOG32 work mode in debug stop and wait mode

wdog32_test_mode_t testMode
Configures WDOG32 test mode

bool enableUpdate
Update write-once register enable

bool enableInterrupt
Enables or disables WDOG32 interrupt

bool enableWindowMode
Enables or disables WDOG32 window mode

uint16_t windowValue
Window value

uint16_t timeoutValue
Timeout value

2.72 WUU: Wakeup Unit driver

void WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const *wuu_external_wakeup_pin_config_t* *config)
Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin. See Reference Manual for the details.
- config – Pointer to wuu_external_wakeup_pin_config_t structure.

void WUU_ClearExternalWakeupPinsConfig(WUU_Type *base, uint8_t pinIndex)
Disable and clear external wakeup pin settings.

Parameters

- base – MUU peripheral base address.
- pinIndex – The index of the external input pin.

static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all external wakeup pins.

static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- base – WUU peripheral base address.
- mask – The mask of Wakeup pin index to be cleared.

void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex, *wuu_internal_wakeup_module_event_t* event)

Config Internal modules' event as the wake up soures.

This function configs the internal modules event as the wake up sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – Select interrupt or DMA/Trigger of the internal module as the wake up source.

void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex, *wuu_internal_wakeup_module_event_t* event)

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- base – WUU peripheral base address.
- moduleIndex – The selected internal module. See the Reference Manual for the details.
- event – The event(interrupt or DMA/trigger) of the internal module to disable.

static inline uint32_t WUU_GetModuleInterruptFlag(WUU_Type *base)

Get wakeup flags for internal wakeup modules.

Parameters

- base – WUU peripheral base address.

Returns

Wakeup flags for all internal wakeup modules.

static inline bool WUU_GetInternalWakeupModuleFlag(WUU_Type *base, uint32_t moduleIndex)

Gets the internal module wakeup source flag.

This function checks the flag to detect whether the system is woken up by specific on-chip module interrupt.

Parameters

- base – WWU peripheral base address.
- moduleIndex – A module index, which starts from 0.

Returns

True if the specific pin is a wake up source.

void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const *wuu_pin_filter_config_t* *config)

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filer operate mode filer wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filer.
- config – Pointer to wuu_pin_filter_config_t structure.

bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)

brief Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

FSL_WUU_DRIVER_VERSION

Defines WUU driver version 2.4.2.

enum _wuu_external_pin_edge_detection

External WakeUp pin edge detection enumeration.

Values:

enumerator kWUU_ExternalPinDisable

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge

External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge

External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge

External input Pin enabled with any change detection.

enum _wuu_external_wakeup_pin_event

External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt

External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest

External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent

External input Pin configured as Trigger event.

enum _wuu_external_wakeup_pin_mode

External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD

External input Pin is active only during Deep Sleep/Power Down Mode. NOTE: This enumerations has been deprecated, please switch to kWUU_ExternalPinActiveLowLeakage.

enumerator kWUU_ExternalPinActiveLowLeakageMode

External input Pin is active only during low-leakage power modes.

enumerator kWUU_ExternalPinActiveAlways

External input Pin is active during all power modes.

enum _wuu_internal_wakeup_module_event

Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt

Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger

Internal modules' DMA/Trigger as a wakeup source.

enum _wuu_filter_edge

Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum _wuu_filter_event
Pin Filter event enumeration.

Values:

enumerator kWUU_FilterInterrupt
Filter output configured as interrupt.

enumerator kWUU_FilterDMARequest
Filter output configured as DMA request.

enumerator kWUU_FilterTriggerEvent
Filter output configured as Trigger event.

enum _wuu_filter_mode
Pin filter mode enumeration.

Values:

enumerator kWUU_FilterActiveDSPD
External input pin filter is active only during Deep Sleep/Power Down Mode. NOTE: This enumerations has been deprecated, please switch to kWUU_FilterActiveLowLeakage.

enumerator kWUU_FilterActiveLowLeakageMode
External input pin filter is active only during low-leakage power modes.

enumerator kWUU_FilterActiveAlways
External input Pin filter is active during all power modes.

typedef enum *_wuu_external_pin_edge_detection* wuu_external_pin_edge_detection_t
External WakeUp pin edge detection enumeration.

typedef enum *_wuu_external_wakeup_pin_event* wuu_external_wakeup_pin_event_t
External input wake up pin event enumeration.

typedef enum *_wuu_external_wakeup_pin_mode* wuu_external_wakeup_pin_mode_t
External input wake up pin mode enumeration.

typedef enum *_wuu_internal_wakeup_module_event* wuu_internal_wakeup_module_event_t
Internal module wake up event enumeration.

typedef enum *_wuu_filter_edge* wuu_filter_edge_t
Pin filter edge enumeration.

typedef enum *_wuu_filter_event* wuu_filter_event_t
Pin Filter event enumeration.

typedef enum *_wuu_filter_mode* wuu_filter_mode_t
Pin filter mode enumeration.

typedef struct *_wuu_external_wakeup_pin_config* wuu_external_wakeup_pin_config_t
External WakeUp pin configuration.

typedef struct *_wuu_pin_filter_config* wuu_pin_filter_config_t
Pin Filter configuration.

struct __wuu_external_wakeup_pin_config
#include <fsl_wuu.h> External WakeUp pin configuration.

Public Members

wuu_external_pin_edge_detection_t edge
External Input pin edge detection.

wuu_external_wakeup_pin_event_t event
External Input wakeup Pin event

wuu_external_wakeup_pin_mode_t mode
External Input wakeup Pin operate mode.

struct __wuu_pin_filter_config
#include <fsl_wuu.h> Pin Filter configuration.

Public Members

uint32_t pinIndex
The index of wakeup pin to be muxxed into filter.

wuu_filter_edge_t edge
The edge of the pin digital filter.

wuu_filter_event_t event
The event of the filter output.

wuu_filter_mode_t mode
The mode of the filter operate.

Chapter 3

Middleware

3.1 Motor Control

3.1.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**
- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called "packet-driven BDM" interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT]((https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to FreeMASTER community or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the src/platforms directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.
- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called FMSTR_TRANSPORT with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The *mcuxsdk* folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a "middleware" component which may be downloaded along with the example applications from https://mcuxpresso.nxp.com/en/welcome.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- The official FreeMASTER middleware repository.
- Online version of this document

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer's physical or virtual COM port. The typical transmission speed is 115200 bps.

- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER "middleware" driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample spplications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.

- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.
- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.

- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory

block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- "External" single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.
- "True" single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as "automatic" in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- ***src/platforms*** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- ***src/common*** folder—contains the common driver source files shared by the driver for all supported platforms. All the *.c* files must be added to the project, compiled, and linked together with the application.
  - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
  - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
  - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
  - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
  - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.
  - *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
  - *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
  - *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
  - *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.

  - *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
  - *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
  - *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
  - *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
  - *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
  - *freemaster_serial.h* - defines the low-level character-oriented Serial API.
  - *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
  - *freemaster_can.h* - defines the low-level message-oriented CAN API.
  - *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
  - *freemaster_net.h* - definitions related to the Network transport.
  - *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
  - *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
  - *freemaster_utils.h* - definitions related to utility code.
- ***src/drivers/[sdk]/serial*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
  - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.
- ***src/drivers/[sdk]/can*** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
  - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- ***src/drivers/[sdk]/network*** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
  - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
  - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR   [0|1]
#define FMSTR_SHORT_INTR  [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See *Driver interrupt modes*.

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- **FMSTR_SERIAL** - serial communication protocol
- **FMSTR_CAN** - using CAN communication
- **FMSTR_PDBDM** - using packet-driven BDM communication
- **FMSTR_NET** - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as FMSTR_SERIAL_DRV. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_RQUEUE_SIZE

```
#define FMSTR_COMM_RQUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the FMSTR_SHORT_INTR interrupt mode.
The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the "True" single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as FMSTR_CAN_DRV.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call FMSTR_SetCanBaseAddress() to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with FMSTR_CAN_EXTID bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the FMSTR_Poll() function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options

FMSTR_USE_SCOPE

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance.
Default value is 8.

Recorder options

FMSTR_USE_RECORDER

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature.
Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0.
Default: not defined, user shall call 'FMSTR_RecorderCreate()" API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()" API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.

Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature.
Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options

FMSTR_USE_TSA

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool.
Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables.
Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project.
Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions.
Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used.
Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support.
The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr, FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_RQUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial "character time" which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the FMSTR_Poll routine. An application interrupt can occur in the middle of the

Read Memory or Write Memory commands' execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (FMSTR_LONG_INTR), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the FMSTR_ prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the fmstr_ prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the FMSTR_Init call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the FMSTR_SerialIsr function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the FMSTR_CanIsr function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (FMSTR_USE_RECORDER > 0), call the FMSTR_RecorderCreate function early after FMSTR_Init to set up each recorder instance to be used in the application. Then call the FMSTR_Recorder function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the FMSTR_Recorder in the main application loop.

In applications where FMSTR_Recorder is called periodically with a constant period, specify the period in the Recorder configuration structure before calling FMSTR_RecorderCreate. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all *.c files of the FreeMASTER driver from the *src/common/platforms/[your_platform]* folder are a part of the project. See *Driver files* for more details.
- Configure the FreeMASTER driver by creating or editing the *freemaster_cfg.h* file and by saving it into the application project directory. See *Driver configuration* for more details.
- Include the *freemaster.h* file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the FMSTR_LONG_INTR and FMSTR_SHORT_INTR modes, install the application-specific interrupt routine and call the FMSTR_SerialIsr or FMSTR_CanIsr functions from this handler.
- Call the FMSTR_Init function early on in the application initialization code.
- Call the FMSTR_RecorderCreate functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the FMSTR_Poll API function periodically when the application is idle.
- For the FMSTR_SHORT_INTR and FMSTR_LONG_INTR modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the FMSTR_DEBUG_TX option in the *freemaster_cfg.h* file and call the FMSTR_Poll function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the "idle" time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the FMSTR_Poll function is called at least once per the time calculated as:

*N * Tchar*

where:

- *N* is equal to the length of the receive FIFO queue (configured by the FMSTR_COMM_RQUEUE_SIZE macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see *Driver interrupt modes*), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance *0* which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see *Configurable items*.

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the FMSTR_USE_TSA macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the FMSTR_TSA_TABLE_BEGIN macro with a *table_id* identifying the table. The *table_id* shall be a valid C-langiage symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type)  /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type)  /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
FMSTR_TSA_MEMBER(struct_name, member_name, type)  /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */
```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.

- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINT*n*	Unsigned integer type of size *n* bits (n=8,16,32,64)
FMSTR_TSA_SINT*n*	Signed integer type of size *n* bits (n=8,16,32,64)
FMSTR_TSA_FRAC*n*	Fractional number of size *n* bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(*m*,*n*)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(*m*,*n*)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FMSTR_TSA_USERTYPE(*name*)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```
FMSTR_TSA_TABLE_LIST_BEGIN()

FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...
```

The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)

/* Directory entry applies to all subsequent MEMFILE entries */
FMSTR_TSA_DIRECTORY("/text_files")     /* entering a new virtual directory */
```

(continues on next page)

(continued from previous page)

```
/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index))          /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()
```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when FMSTR_USE_TSA_DYNAMIC is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the FMSTR_TsaAddVar function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```
FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR
↪tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);
```

- Declaration: *freemaster.h*

- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
  - *FMSTR_TSA_INFO_RO_VAR* — read-only memory-mapped object (typically a variable)
  - *FMSTR_TSA_INFO_RW_VAR* — read/write memory-mapped object
  - *FMSTR_TSA_INFO_NON_VAR* — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the FMSTR_USE_TSA_DYNAMIC configuration option and when the FMSTR_SetUpTsaBuff function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See *TSA table definition* for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the FMSTR_APPCMDRESULT_NOCMD constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the FMSTR_AppCmdAck call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The FMSTR_GetAppCmd function does not report the commands for which a callback handler function exists. If the FMSTR_GetAppCmd function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns FMSTR_APPCMDRESULT_NOCMD.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see *FMSTR_GetAppCmd*).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_
↪PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd,
    FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
↪
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_xxx and FMSTR_PIPE_SIZE_xxx constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk. This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the nGranularity value equal to the nLength value, all data are considered as one chunk which is either written successfully as a whole or not at all. The nGranularity value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The readGranularity argument can be used to copy the data in larger chunks in the same way as described in the FMSTR_PipeWrite function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
FMSTR_ADDR	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	
FMSTR_SIZE	Data type used to hold the memory block size.
It is required that this type is unsigned and at least 16 bits wide integer.	
FMSTR_BOOL	Data type used as a general boolean type.
This type is used only in zero/non-zero conditions in the driver code.	
FMSTR_APPCM	Data type used to hold the Application Command code.
Generally, this is an unsigned 8-bit value.	
FMSTR_APPCM	Data type used to create the Application Command data buffer.
Generally, this is an unsigned 8-bit value.	
FMSTR_APPCM	Data type used to hold the Application Command result code.
Generally, this is an unsigned 8-bit value.	

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

FMSTR_TSA_TII	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables.
By default, this is defined as FMSTR_SIZE.	
FMSTR_TSA_TS	Data type used to hold a memory block size, as used in the TSA descriptors.
By default, this is defined as FMSTR_SIZE.	

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

FMSTR_HPIPE	Pipe handle that identifies the open-pipe object.
Generally, this is a pointer to a void type.	
FMSTR_PIPE_P(	Integer type required to hold at least 7 bits of data.
Generally, this is an unsigned 8-bit or 16-bit type.	
FMSTR_PIPE_SI	Integer type required to hold at least 16 bits of data.
This is used to store the data buffer sizes.	
FMSTR_PPIPEF	Pointer to the pipe handler function.
See *FMSTR_PipeOpen* for more details.	

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

FMSTR_U8	The smallest memory entity. On the vast majority of platforms, this is an unsigned 8-bit integer. On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.
FMSTR_U16	Unsigned 16-bit integer.
FMSTR_U32	Unsigned 32-bit integer.
FMSTR_S8	Signed 8-bit integer.
FMSTR_S16	Signed 16-bit integer.
FMSTR_S32	Signed 32-bit integer.
FMSTR_FLOAT	4-byte standard IEEE floating-point type.
FMSTR_FLAGS	Data type forming a union with a structure of flag bit-fields.
FMSTR_SIZE8	Data type holding a general size value, at least 8 bits wide.
FMSTR_INDEX	General for-loop index. Must be signed, at least 16 bits wide.
FMSTR_BCHR	A single character in the communication buffer. Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.
FMSTR_BPTR	A pointer to the communication buffer (an array of FMSTR_BCHR).

Document references

Links

- This document online: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: https://github.com/nxp-mcuxpresso/mcux-freemaster
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document AN4752)
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document AN4771)
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document AN4860)

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

3.2 MultiCore

3.2.1 Multicore SDK

Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

Multicore SDK (MCSDK) Release Notes

Overview These are the release notes for the NXP Multicore Software Development Kit (MCSDK) version 26.03.00.
This software package contains components for efficient work with multicore devices as well as for the
multiprocessor communication.

What is new

- eRPC CHANGELOG
- RPMsg-Lite CHANGELOG
- MCMgr CHANGELOG
- Supported evaluation boards (multicore examples):
  - LPCXpresso55S69
  - FRDM-K32L3A6
  - MIMXRT1170-EVKB
  - MIMXRT1160-EVK
  - MIMXRT1180-EVK
  - MCX-N5XX-EVK
  - MCX-N9XX-EVK
  - FRDM-MCXN947
  - MIMXRT700-EVK
  - KW47-EVK
  - KW47-LOC
  - FRDM-MCXW72
  - MCX-W72-EVK
  - FRDM-IMXRT1186
- Supported evaluation boards (multiprocessor examples):
  - LPCXpresso55S36
  - FRDM-K22F
  - FRDM-K32L2B
  - MIMXRT685-EVK
  - MIMXRT1170-EVKB
  - MIMXRT1180
  - FRDM-MCXN236
  - FRDM-MCXC242
  - FRDM-MCXC444
  - MCX-N9XX-EVK
  - FRDM-MCXN947
  - MIMXRT700-EVK
  - FRDM-IMXRT1186

Development tools The Multicore SDK (MCSDK) was compiled and tested with development tools referred in: Development tools

Release contents This table describes the release contents. Not all MCUXpresso SDK packages contain the whole set of these components.

Deliverable	Location
Multicore SDK location <MCSDK_dir>	<MCUXpressoSDK_install_dir>/middleware/multicore/
Documentation	<MCSDK_dir>/mcuxsdk-doc/
Embedded Remote Procedure Call component	<MCSDK_dir>/erpc/
Multicore Manager component	<MCSDK_dir>/mcmgr/
RPMsg-Lite	<MCSDK_dir>/rpmsg_lite/
Multicore demo applications	<MCUXpressoSDK_install_dir>/examples/multicore_examples/
Multiprocessor demo applications	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/

Multicore SDK release overview Together, the Multicore SDK (MCSDK) and the MCUXpresso SDK (SDK) form a framework for the development of software for NXP multicore devices. The MCSDK release consists of the following elementary software components for multicore:

- Embedded Remote Procedure Call (eRPC)
- Multicore Manager (MCMGR) - included just in SDK for multicore devices
- Remote Processor Messaging - Lite (RPMsg-Lite) - included just in SDK for multicore devices

The MCSDK is also accompanied with documentation and several multicore and multiprocessor demo applications.

Demo applications The multicore demo applications demonstrate the usage of the MCSDK software components on supported multicore development boards.
The following multicore demo applications are located together with other MCUXpresso SDK examples in
the <MCUXpressoSDK_install_dir>/examples/multicore_examples subdirectories.

- erpc_matrix_multiply_mu
- erpc_matrix_multiply_mu_rtos
- erpc_matrix_multiply_rpmsg
- erpc_matrix_multiply_rpmsg_rtos
- erpc_two_way_rpc_rpmsg_rtos
- freertos_message_buffers
- hello_world
- multicore_manager
- rpmsg_lite_pingpong
- rpmsg_lite_pingpong_rtos
- rpmsg_lite_pingpong_dsp
- rpmsg_lite_pingpong_tzm

The eRPC multicore component can be leveraged for inter-processor communication and remote procedure calls between SoCs / development boards.
The following multiprocessor demo applications are located together with other MCUXpresso SDK examples in
the <MCUXpressoSDK_install_dir>/examples/multiprocessor_examples subdirectories.

- erpc_client_matrix_multiply_spi
- erpc_server_matrix_multiply_spi
- erpc_client_matrix_multiply_uart
- erpc_server_matrix_multiply_uart
- erpc_server_dac_adc
- erpc_remote_control

Getting Started with Multicore SDK (MCSDK)

Overview Multicore Software Development Kit (MCSDK) is a Software Development Kit that provides comprehensive software support for NXP dual/multicore devices. The MCSDK is combined with the MCUXpresso SDK to make the software framework for easy development of multicore applications.

The following figure highlights the layers and main software components of the MCSDK.

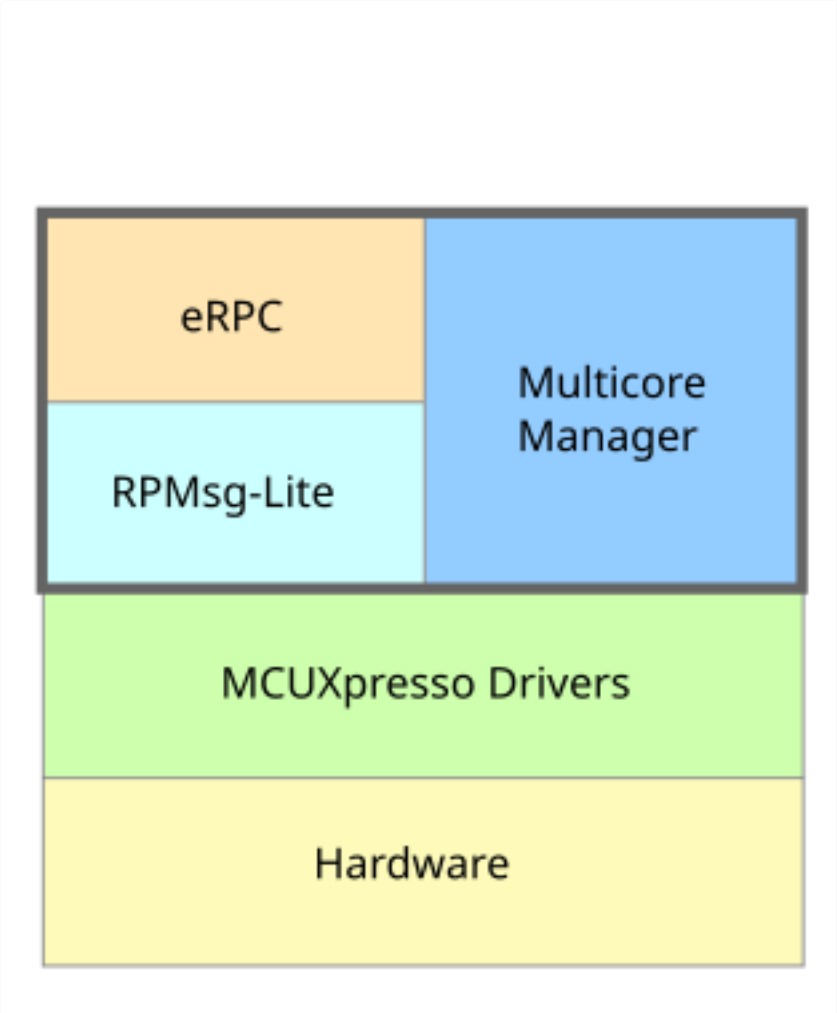

All the MCSDK-related files are located in <MCUXpressoSDK_install_dir>/middleware/multicore folder.

For supported toolchain versions, see the *Multicore SDK v26.03.00 Release Notes* (document MCSDKRN). For the latest version of this and other MCSDK documents, visit www.nxp.com.

Multicore SDK (MCSDK) components The MCSDK consists of the following software components:

- **Embedded Remote Procedure Call (eRPC):** This component is a combination of a library and code generator tool that implements a transparent function call interface to remote services (running on a different core).
- **Multicore Manager (MCMGR):** This library maintains information about all cores and starts up secondary/auxiliary cores.
- **Remote Processor Messaging - Lite (RPMsg-Lite):** Inter-Processor Communication library.

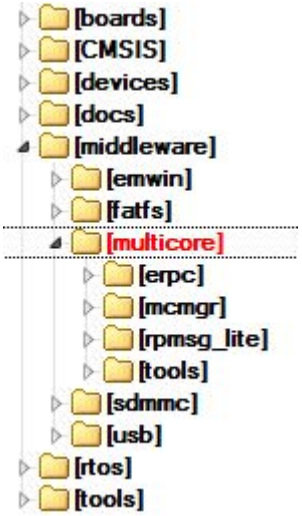

Embedded Remote Procedure Call (eRPC) The Embedded Remote Procedure Call (eRPC) is the RPC system created by NXP. The RPC is a mechanism used to invoke a software routine on a remote system via a simple local function call.

When a remote function is called by the client, the function's parameters and an identifier for the called routine are marshaled (or serialized) into a stream of bytes. This byte stream is transported to the server through a communications channel (IPC, TPC/IP, UART, and so on). The server unmarshaled the parameters, determines which function was invoked, and calls it. If the function returns a value, it is marshaled and sent back to the client.

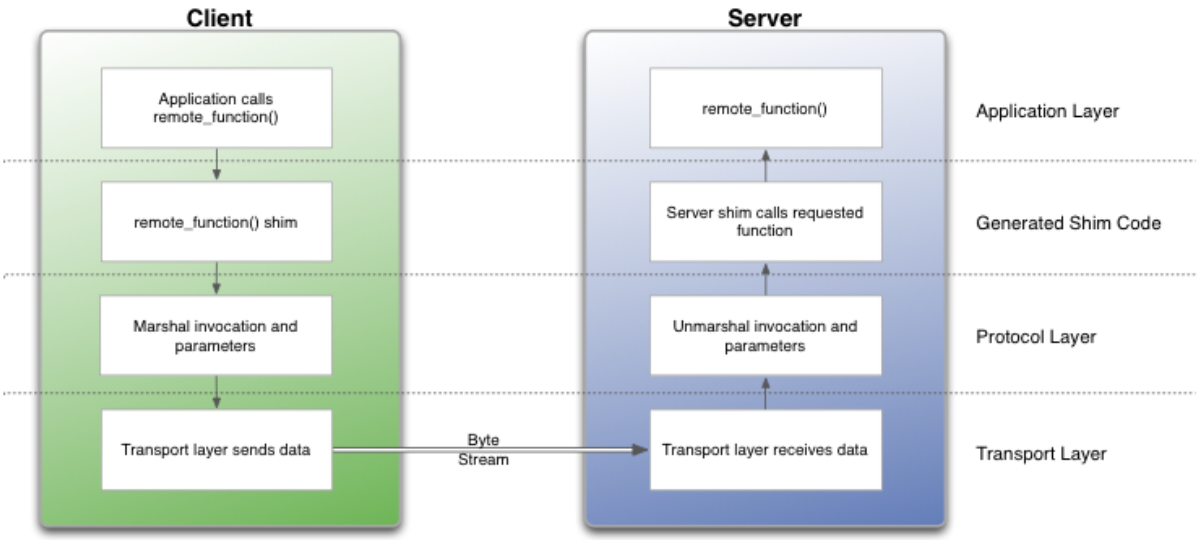

RPC implementations typically use a combination of a tool (erpcgen) and IDL (interface definition language) file to generate source code to handle the details of marshaling a function's parameters and building the data stream.

Main eRPC features:

- Scalable from BareMetal to Linux OS - configurable memory and threading policies.
- Focus on embedded systems - intrinsic support for C, modular, and lightweight implementation.
- Abstracted transport interface - RPMsg is the primary transport for multicore, UART, or SPI-based solutions can be used for multichip.

The eRPC library is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/erpc folder. For detailed information about the eRPC, see the documentation available in the <MCUXpressoSDK_install_dir>/middleware/multicore/erpc/doc folder.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems.

The main MCMGR features:

- Maintains information about all cores in system.
- Secondary/auxiliary cores startup and shutdown.
- Remote core monitoring and event handling.

The MCMGR library is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr folder. For detailed information about the MCMGR library, see the documentation available in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/doc folder.

Remote Processor Messaging Lite (RPMsg-Lite) RPMsg-Lite is a lightweight implementation of the RPMsg protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system. Compared to the legacy OpenAMP implementation, RPMsg-Lite offers a code size reduction, API simplification, and improved modularity.

The main RPMsg protocol features:

- Shared memory interprocessor communication.
- Virtio-based messaging bus.
- Application-defined messages sent between endpoints.

- Portable to different environments/platforms.
- Available in upstream Linux OS.

The RPMsg-Lite library is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg-lite folder. For detailed information about the RPMsg-Lite, see the RPMsg-Lite User's Guide located in the <MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/doc folder.

MCSDK demo applications Multicore and multiprocessor example applications are stored together with other MCUXpresso SDK examples, in the dedicated multicore subfolder.

Location	Folder
Multicore example projects	<MCUXpressoSDK_install_dir>/examples/multicore_examples/<application_name>/
Multiprocessor example projects	<MCUXpressoSDK_install_dir>/examples/multiprocessor_examples/<application_name>/

See the *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) and *Getting Started with MCUXpresso SDK for XXX Derivatives* documents for more information about the MCUXpresso SDK example folder structure and the location of individual files that form the example application projects. These documents also contain information about building, running, and debugging multicore demo applications in individual supported IDEs. Each example application also contains a readme file that describes the operation of the example and required setup steps.

Inter-Processor Communication (IPC) levels The MCSDK provides several mechanisms for Inter-Processor Communication (IPC). Particular ways and levels of IPC are described in this chapter.

IPC using low-level drivers

The NXP multicore SoCs are equipped with peripheral modules dedicated for data exchange between individual cores. They deal with the Mailbox peripheral for LPC parts and the Messaging Unit (MU) peripheral for Kinetis and i.MX parts. The common attribute of both modules is the ability to provide a means of IPC, allowing multiple CPUs to share resources and communicate with each other in a simple manner.

The most lightweight method of IPC uses the MCUXpresso SDK low-level drivers for these peripherals. Using the Mailbox/MU driver API functions, it is possible to pass a value from core to core via the dedicated registers (could be a scalar or a pointer to shared memory) and also to trigger inter-core interrupts for notifications.

For details about individual driver API functions, see the MCUXpresso SDK API Reference Manual of the specific multicore device. The MCUXpresso SDK is accompanied with the RPMsg-Lite documentation that shows how to use this API in multicore applications.

Messaging mechanism

On top of Mailbox/MU drivers, a messaging system can be implemented, allowing messages to send between multiple endpoints created on each of the CPUs. The RPMsg-Lite library of the MCSDK provides this ability and serves as the preferred MCUXpresso SDK messaging library. It implements ring buffers in shared memory for messages exchange without the need of a locking mechanism.

The RPMsg-Lite provides the abstraction layer and can be easily ported to different multicore platforms and environments (Operating Systems). The advantages of such a messaging system are ease of use (there is no need to study behavior of the used underlying hardware) and smooth application code portability between platforms due to unified messaging API.

However, this costs several kB of code and data memory. The MCUXpresso SDK is accompanied by the RPMsg-Lite documentation and several multicore examples. You can also obtain the latest RPMsg-Lite code from the GitHub account github.com/nxp-mcuxpresso/rpmsg-lite.

Remote procedure calls

To facilitate the IPC even more and to allow the remote functions invocation, the remote procedure call mechanism can be implemented. The eRPC of the MCSDK serves for these purposes and allows the ability to invoke a software routine on a remote system via a simple local function call. Utilizing different transport layers, it is possible to communicate between individual cores of multicore SoCs (via RPMsg-Lite) or between separate processors (via SPI, UART, or TCP/IP). The eRPC is mostly applicable to the MPU parts with enough of memory resources like i.MX parts.

The eRPC library allows you to export existing C functions without having to change their prototypes (in most cases). It is accompanied by the code generator tool that generates the shim code for serialization and invocation based on the IDL file with definitions of data types and remote interfaces (API).

If the communicating peer is running as a Linux OS user-space application, the generated code can be either in C/C++ or Python.

Using the eRPC simplifies the access to services implemented on individual cores. This way, the following types of applications running on dedicated cores can be easily interfaced:

- Communication stacks (USB, Thread, Bluetooth Low Energy, Zigbee)
- Sensor aggregation/fusion applications
- Encryption algorithms
- Virtual peripherals

The eRPC is publicly available from the following GitHub account: github.com/EmbeddedRPC/erpc. Also, the MCUXpresso SDK is accompanied by the eRPC code and several multicore and multiprocessor eRPC examples.

The mentioned IPC levels demonstrate the scalability of the Multicore SDK library. Based on application needs, different IPC techniques can be used. It depends on the complexity, required speed, memory resources, system design, and so on. The MCSDK brings users the possibility for quick and easy development of multicore and multiprocessor applications.

Changelog Multicore SDK

All notable changes to this project will be documented in this file.

The format is based on Keep a Changelog, and this project adheres to Semantic Versioning.

[26.03.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.14.0
  - eRPC generator (erpcgen) v1.14.0
  - Multicore Manager (MCMgr) v5.1.0
  - RPMsg-Lite v5.4.0

[25.12.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.14.0

  - eRPC generator (erpcgen) v1.14.0
  - Multicore Manager (MCMgr) v5.0.2
  - RPMsg-Lite v5.3.0

[25.09.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.14.0
  - eRPC generator (erpcgen) v1.14.0
  - Multicore Manager (MCMgr) v5.0.1
  - RPMsg-Lite v5.2.1

[25.06.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.14.0
  - eRPC generator (erpcgen) v1.14.0
  - Multicore Manager (MCMgr) v5.0.0
  - RPMsg-Lite v5.2.0

[25.03.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.13.0
  - eRPC generator (erpcgen) v1.13.0
  - Multicore Manager (MCMgr) v4.1.7
  - RPMsg-Lite v5.1.4

[24.12.00]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.13.0
  - eRPC generator (erpcgen) v1.13.0
  - Multicore Manager (MCMgr) v4.1.6
  - RPMsg-Lite v5.1.3

[2.16.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.13.0
  - eRPC generator (erpcgen) v1.13.0
  - Multicore Manager (MCMgr) v4.1.5
  - RPMsg-Lite v5.1.2

[2.15.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.12.0
  - eRPC generator (erpcgen) v1.12.0
  - Multicore Manager (MCMgr) v4.1.5
  - RPMsg-Lite v5.1.1

[2.14.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.11.0
  - eRPC generator (erpcgen) v1.11.0
  - Multicore Manager (MCMgr) v4.1.4
  - RPMsg-Lite v5.1.0

[2.13.0_imxrt1180a0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.10.0
  - eRPC generator (erpcgen) v1.10.0
  - Multicore Manager (MCMgr) v4.1.3
  - RPMsg-Lite v5.0.0

[2.13.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.10.0
  - eRPC generator (erpcgen) v1.10.0
  - Multicore Manager (MCMgr) v4.1.3
  - RPMsg-Lite v5.0.0

[2.12.0_imx93]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.9.1
  - eRPC generator (erpcgen) v1.9.1
  - Multicore Manager (MCMgr) v4.1.2
  - RPMsg-Lite v4.0.1

[2.12.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.9.1
  - eRPC generator (erpcgen) v1.9.1
  - Multicore Manager (MCMgr) v4.1.2
  - RPMsg-Lite v4.0.0

[2.11.1]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.9.0
  - eRPC generator (erpcgen) v1.9.0
  - Multicore Manager (MCMgr) v4.1.1
  - RPMsg-Lite v3.2.1

[2.11.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.9.0
  - eRPC generator (erpcgen) v1.9.0
  - Multicore Manager (MCMgr) v4.1.1
  - RPMsg-Lite v3.2.0

[2.10.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.8.1
  - eRPC generator (erpcgen) v1.8.1
  - Multicore Manager (MCMgr) v4.1.1
  - RPMsg-Lite v3.1.2

[2.9.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.8.0
  - eRPC generator (erpcgen) v1.8.0
  - Multicore Manager (MCMgr) v4.1.1
  - RPMsg-Lite v3.1.1

[2.8.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.7.4
  - eRPC generator (erpcgen) v1.7.4
  - Multicore Manager (MCMgr) v4.1.0
  - RPMsg-Lite v3.1.0

[2.7.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.7.3
  - eRPC generator (erpcgen) v1.7.3
  - Multicore Manager (MCMgr) v4.1.0
  - RPMsg-Lite v3.0.0

[2.6.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.7.2
  - eRPC generator (erpcgen) v1.7.2
  - Multicore Manager (MCMgr) v4.0.3
  - RPMsg-Lite v2.2.0

[2.5.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.7.1
  - eRPC generator (erpcgen) v1.7.1
  - Multicore Manager (MCMgr) v4.0.2
  - RPMsg-Lite v2.0.2

[2.4.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.7.0
  - eRPC generator (erpcgen) v1.7.0
  - Multicore Manager (MCMgr) v4.0.1
  - RPMsg-Lite v2.0.1

[2.3.1]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.6.0
  - eRPC generator (erpcgen) v1.6.0
  - Multicore Manager (MCMgr) v4.0.0
  - RPMsg-Lite v1.2.0

[2.3.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.5.0
  - eRPC generator (erpcgen) v1.5.0
  - Multicore Manager (MCMgr) v3.0.0
  - RPMsg-Lite v1.2.0

[2.2.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.4.0
  - eRPC generator (erpcgen) v1.4.0
  - Multicore Manager (MCMgr) v2.0.1
  - RPMsg-Lite v1.1.0

[2.1.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.3.0
  - eRPC generator (erpcgen) v1.3.0

[2.0.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.2.0
  - eRPC generator (erpcgen) v1.2.0
  - Multicore Manager (MCMgr) v2.0.0
  - RPMsg-Lite v1.0.0

[1.1.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.1.0
  - Multicore Manager (MCMgr) v1.1.0
  - Open-AMP / RPMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev01

[1.0.0]

- Multicore SDK component versions:
  - embedded Remote Procedure Call (eRPC) v1.0.0
  - Multicore Manager (MCMgr) v1.0.0
  - Open-AMP / RPMsg based on SHA1 ID 44b5f3c0a6458f3cf80 rev00

Multicore SDK Components

RPMSG-Lite

MCUXpresso SDK : mcuxsdk-middleware-rpmsg-lite

Overview This repository is for MCUXpresso SDK RPMSG-Lite middleware delivery and it contains RPMSG-Lite component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk for the complete delivery of MCUXpresso SDK to be able to build and run RPMSG-Lite examples that are based on mcux-sdk-middleware-rpmsg-lite component.

Documentation Overall details can be reviewed here: MCUXpresso SDK Online Documentation

Visit RPMSG-Lite - Documentation to review details on the contents in this sub-repo.

For Further API documentation, please look at doxygen documentation

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest Getting Started with SDK - Detailed Installation Instructions

Contribution We welcome and encourage the community to submit patches directly to the rpmsg-lite project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

RPMSG-Lite This documentation describes the RPMsg-Lite component, which is a lightweight implementation of the Remote Processor Messaging (RPMsg) protocol. The RPMsg protocol defines a standardized binary interface used to communicate between multiple cores in a heterogeneous multicore system.

Compared to the RPMsg implementation of the Open Asymmetric Multi Processing (OpenAMP) framework (https://github.com/OpenAMP/open-amp), the RPMsg-Lite offers a code size reduction, API simplification, and improved modularity. On smaller Cortex-M0+ based systems, it is recommended to use RPMsg-Lite.

The RPMsg-Lite is an open-source component developed by NXP Semiconductors and released under the BSD-compatible license.

For overview please read RPMSG-Lite VirtIO Overview.

For RPMSG-Lite Design Considerations please read RPMSG-Lite Design Considerations.

Motivation to create RPMsg-Lite There are multiple reasons why RPMsg-Lite was developed. One reason is the need for the small footprint of the RPMsg protocol-compatible communication component, another reason is the simplification of extensive API of OpenAMP RPMsg implementation.

RPMsg protocol was not documented, and its only definition was given by the Linux Kernel and legacy OpenAMP implementations. This has changed with [1] which is a standardization protocol allowing multiple different implementations to coexist and still be mutually compatible.

Small MCU-based systems often do not implement dynamic memory allocation. The creation of static API in RPMsg-Lite enables another reduction of resource usage. Not only does the dynamic allocation adds another 5 KB of code size, but also communication is slower and less deterministic, which is a property introduced by dynamic memory. The following table shows some rough comparison data between the OpenAMP RPMsg implementation and new RPMsg-Lite implementation:

Component / Configuration	Flash [B]	RAM [B]
OpenAMP RPMsg / Release (reference)	5547	456 + dynamic
RPMsg-Lite / Dynamic API, Release	3462	56 + dynamic
Relative Difference [%]	~62.4%	~12.3%
RPMsg-Lite / Static API (no malloc), Release	2926	352
Relative Difference [%]	~52.7%	~77.2%

Implementation The implementation of RPMsg-Lite can be divided into three subcomponents, from which two are optional. The core component is situated in rpmsg_lite.c. Two optional components are used to implement a blocking receive API (in rpmsg_queue.c) and dynamic “named” endpoint creation and deletion announcement service (in rpmsg_ns.c).

The actual “media access” layer is implemented in virtqueue.c, which is one of the few files shared with the OpenAMP implementation. This layer mainly defines the shared memory model, and internally defines used components such as vring or virtqueue.

The porting layer is split into two sub-layers: the environment layer and the platform layer. The first sublayer is to be implemented separately for each environment. (The bare metal environment already exists and is implemented in rpmsg_env_bm.c, and the FreeRTOS environment is implemented in rpmsg_env_freertos.c etc.) Only the source file, which matches the used environment, is included in the target application project. The second sublayer is implemented in rpmsg_platform.c and defines low-level functions for interrupt enabling, disabling, and triggering mainly. The situation is described in the following figure:

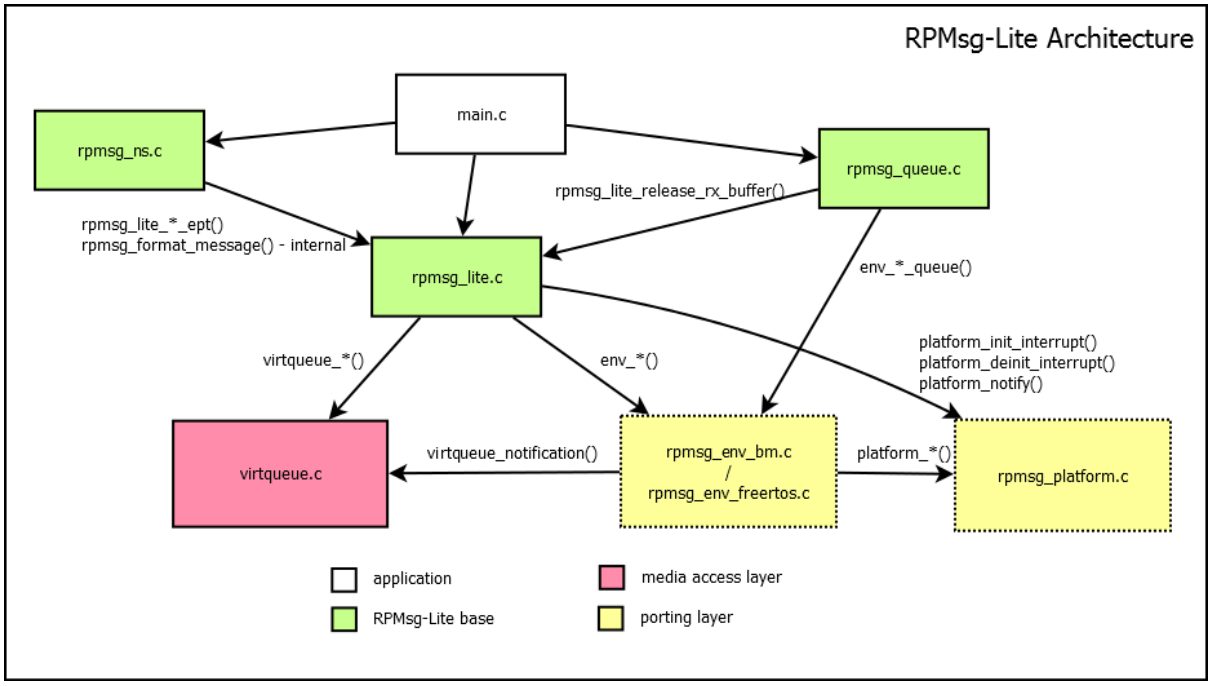

RPMsg-Lite core sub-component This subcomponent implements a blocking send API and callback-based receive API. The RPMsg protocol is part of the transport layer. This is realized by using so-called endpoints. Each endpoint can be assigned a different receive callback function. However, it is important to notice that the callback is executed in an interrupt environment in current design. Therefore, certain actions like memory allocation are discouraged to execute in the callback. The following figure shows the role of RPMsg in an ISO/OSI-like layered model:

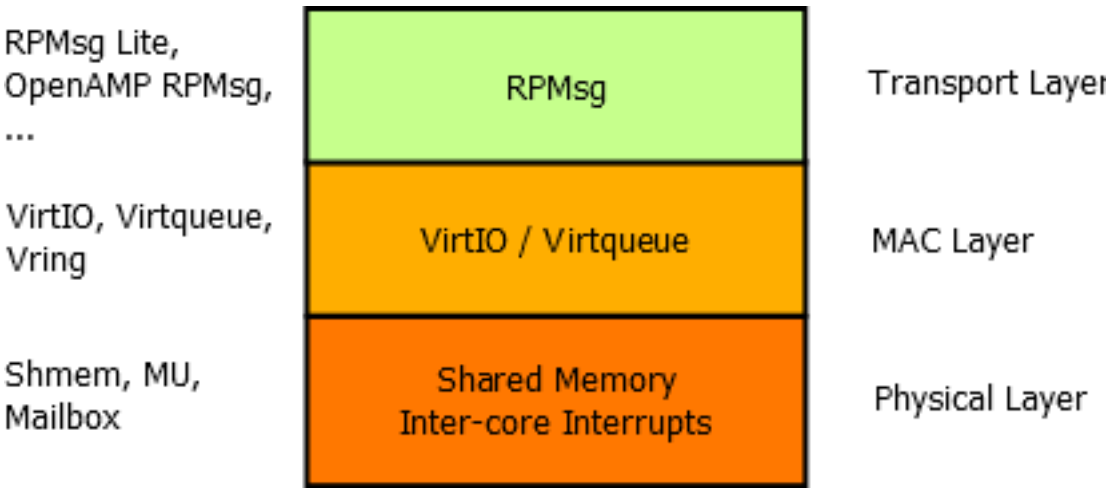

Queue sub-component (optional) This subcomponent is optional and requires implementation of the env_*_queue() functions in the environment porting layer. It uses a blocking receive API, which is common in RTOS-environments. It supports both copy and nocopy blocking receive functions.

Name Service sub-component (optional) This subcomponent is a minimum implementation of the name service which is present in the Linux Kernel implementation of RPMsg. It allows the communicating node both to send announcements about “named” endpoint (in other words, channel) creation or deletion and to receive these announcement taking any user-defined action

in an application callback. The endpoint address used to receive name service announcements is arbitrarily fixed to be 53 (0x35).

Usage The application should put the /rpmsg_lite/lib/include directory to the include path and in the application, include either the rpmsg_lite.h header file, or optionally also include the rpmsg_queue.h and/or rpmsg_ns.h files. Both porting sublayers should be provided for you by NXP, but if you plan to use your own RTOS, all you need to do is to implement your own environment layer (in other words, rpmsg_env_myrtos.c) and to include it in the project build.

The initialization of the stack is done by calling the rpmsg_lite_master_init() on the master side and the rpmsg_lite_remote_init() on the remote side. This initialization function must be called prior to any RPMsg-Lite API call. After the init, it is wise to create a communication endpoint, otherwise communication is not possible. This can be done by calling the rpmsg_lite_create_ept() function. It optionally accepts a last argument, where an internal context of the endpoint is created, just in case the RL_USE_STATIC_API option is set to 1. If not, the stack internally calls env_alloc() to allocate dynamic memory for it. In case a callback-based receiving is to be used, an ISR-callback is registered to each new endpoint with user-defined callback data pointer. If a blocking receive is desired (in case of RTOS environment), the rpmsg_queue_create() function must be called before calling rpmsg_lite_create_ept(). The queue handle is passed to the endpoint creation function as a callback data argument and the callback function is set to rpmsg_queue_rx_cb(). Then, it is possible to use rpmsg_queue_receive() function to listen on a queue object for incoming messages. The rpmsg_lite_send() function is used to send messages to the other side.

The RPMsg-Lite also implements no-copy mechanisms for both sending and receiving operations. These methods require specifics that have to be considered when used in an application.

no-copy-send mechanism: This mechanism allows sending messages without the cost for copying data from the application buffer to the RPMsg/virtio buffer in the shared memory. The sequence of no-copy sending steps to be performed is as follows:

- Call the rpmsg_lite_alloc_tx_buffer() function to get the virtio buffer and provide the buffer pointer to the application.
- Fill the data to be sent into the pre-allocated virtio buffer. Ensure that the filled data does not exceed the buffer size (provided as the rpmsg_lite_alloc_tx_buffer() size output parameter).
- Call the rpmsg_lite_send_nocopy() function to send the message to the destination endpoint. Consider the cache functionality and the virtio buffer alignment. See the rpmsg_lite_send_nocopy() function description below.

no-copy-receive mechanism: This mechanism allows reading messages without the cost for copying data from the virtio buffer in the shared memory to the application buffer. The sequence of no-copy receiving steps to be performed is as follows:

- Call the rpmsg_queue_recv_nocopy() function to get the virtio buffer pointer to the received data.
- Read received data directly from the shared memory.
- Call the rpmsg_queue_nocopy_free() function to release the virtio buffer and to make it available for the next data transfer.

The user is responsible for destroying any RPMsg-Lite objects he has created in case of deinitialization. In order to do this, the function rpmsg_queue_destroy() is used to destroy a queue, rpmsg_lite_destroy_ept() is used to destroy an endpoint and finally, rpmsg_lite_deinit() is used to deinitialize the RPMsg-Lite intercore communication stack. Deinitialize all endpoints using a queue before deinitializing the queue. Otherwise, you are actively invalidating the used queue handle, which is not allowed. RPMsg-Lite does not check this internally, since its main aim is to be lightweight.

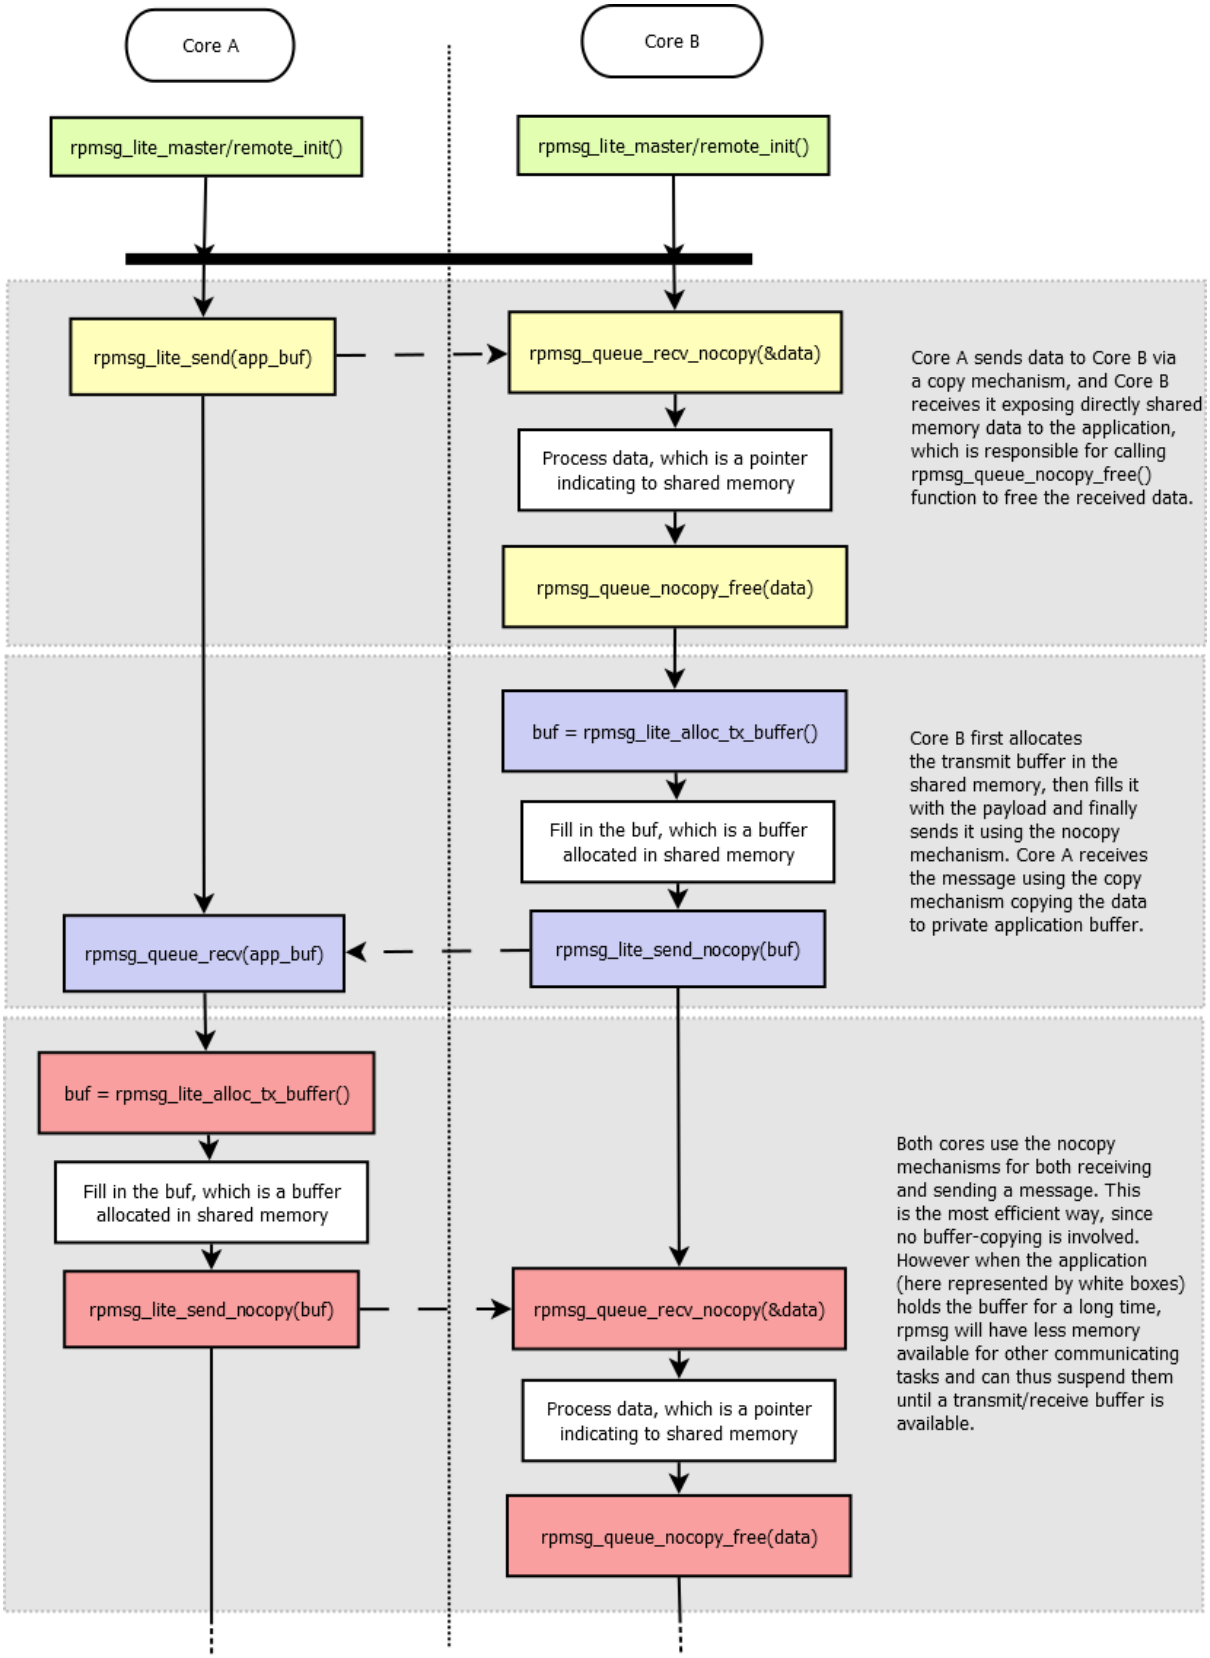

Examples RPMsg_Lite multicore examples are part of NXP MCUXpressoSDK packages. Visit https://mcuxpresso.nxp.com to configure, build and download these packages. To get the board list with multicore support (RPMsg_Lite included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded,

see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for RPMsg_Lite multicore examples with 'rpmsg_lite_' name prefix.

Another way of getting NXP MCUXpressoSDK RPMsg_Lite multicore examples is using the mcuxsdk-manifests Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk-manifests repo in readme section. Once done the armgcc rpmsg_lite examples can be found in

mcuxsdk/examples/_<board_name>/multicore_examples

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the RPMsg_Lite examples use the 'rpmsg_lite_' name prefix.

Notes

Environment layers implementation Several environment layers are provided in lib/rpmsg_lite/porting/environment folder. Not all of them are fully tested however. Here is the list of environment layers that passed testing:

- rpmsg_env_bm.c
- rpmsg_env_freertos.c
- rpmsg_env_xos.c
- rpmsg_env_threadx.c

The rest of environment layers has been created and used in some experimental projects, it has been running well at the time of creation but due to the lack of unit testing there is no guarantee it is still fully functional.

Shared memory configuration It is important to correctly initialize/configure the shared memory for data exchange in the application. The shared memory must be accessible from both the master and the remote core and it needs to be configured as Non-Cacheable memory. Dedicated shared memory section in liker file is also a good practise, it is recommended to use linker files from MCUXpressSDK packages for NXP devices based applications. It needs to be ensured no other application part/component is unintentionally accessing this part of memory.

Configuration options The RPMsg-Lite can be configured at the compile time. The default configuration is defined in the rpmsg_default_config.h header file. This configuration can be customized by the user by including rpmsg_config.h file with custom settings. The following table summarizes all possible RPMsg-Lite configuration options.

Configuration option	Default value	Usage
RL_MS_PE	(1)	Delay in milliseconds used in non-blocking API functions for polling.
RL_BUFFE	(496)	Size of the buffer payload, it must be more than 1 byte, and has to be word align (including rpmsg header size 16 bytes), if not it will be aligned up
RL_BUFFE	(2)	Number of the buffers, it must be power of two (2, 4, ...)
RL_API_H	(1)	Zero-copy API functions enabled/disabled.
RL_USE_S	(0)	Static API functions (no dynamic allocation) enabled/disabled.
RL_USE_D	(0)	Memory cache management of shared memory. Use in case of data cache is enabled for shared memory.
RL_CLEAF	(0)	Clearing used buffers before returning back to the pool of free buffers enabled/disabled.
RL_USE_M	(0)	When enabled IPC interrupts are managed by the Multicore Manager (IPC interrupts router), when disabled RPMsg-Lite manages IPC interrupts by itself.
RL_USE_E	(0)	When enabled the environment layer uses its own context. Required for some environments (QNX). The default value is 0 (no context, saves some RAM).
RL_DEBU(	(0)	When enabled buffer pointers passed to rpmsg_lite_send_nocopy() and rpmsg_lite_release_rx_buffer() functions (enabled by RL_API_HAS_ZEROCOPY config) are checked to avoid passing invalid buffer pointer. The default value is 0 (disabled). Do not use in RPMsg-Lite to Linux configuration.
RL_ALLOV	(0)	When enabled the opposite side is notified each time received buffers are consumed and put into the queue of available buffers. Enable this option in RPMsg-Lite to Linux configuration to allow unblocking of the Linux blocking send. The default value is 0 (RPMsg-Lite to RPMsg-Lite communication).
RL_ALLOV	(0)	It allows to define custom shared memory configuration and replacing the shared memory related global settings from rpmsg_config.h This is useful when multiple instances are running in parallel but different shared memory arrangement (vring size & alignment, buffers size & count) is required. The default value is 0 (all RPMsg_Lite instances use the same shared memory arrangement as defined by common config macros).
RL_ASSER	see rpmsg	Assert implementation.

How to format rpmsg-lite code To format code, use the application developed by Google, named *clang-format*. This tool is part of the llvm project. Currently, the clang-format 10.0.0 version is used for rpmsg-lite. The set of style settings used for clang-format is defined in the .clang-format file, placed in a root of the rpmsg-lite directory where Python script run_clang_format.py can be executed. This script executes the application named *clang-format.exe*. You need to have the path of this application in the OS's environment path, or you need to change the script.

References

[1] M. Novak, M. Cingel, Lockless Shared Memory Based Multicore Communication Protocol
Copyright © 2016 Freescale Semiconductor, Inc. Copyright © 2016-2025 NXP

Changelog RPMSG-Lite All notable changes to this project will be documented in this file.

The format is based on Keep a Changelog, and this project adheres to Semantic Versioning.

v5.4.0

Added

- Added i.MX93W parts support
- Added i.MX952 parts support
- Added mcxl14x parts support
- Added mcxw70 parts support
- Zephyr rpmsg-lite samples add support for RT600 and RT700 DSP cores

Changed

- Port platform_get_custom_shmem_config change return value from uint32_t to int32_t for error handling consistency.

Fixed

- Updated unit tests code to allow correct GCOV code coverage measurement.
- Added missing dsb instructions into all ISRs for cm4/cm7 based platform layers.
- Fixed CERT EXP34-C by adding __attribute__((noreturn)) to RL_HANG(void) function.
- **MISRA C-2012 Rule 14.3 compliance**: Simplified RL_WORD_ALIGN_UP and RL_WORD_ALIGN_DOWN macros to eliminate invariant controlling expression violations (CID 5011148)
  - Replaced ternary operator implementations with standard bitwise alignment idioms
  - Fixed hardcoded 4U constant in RL_WORD_ALIGN_UP to use RL_WORD_SIZE for better portability
- Fixed several MISRA compliance violations

v5.3.0

Added

- RT700 porting layer added support to send rpmsg messages between CM33_0 <-> Hifi1 and CM33_1 <-> Hifi4 cores.
- Add new platform macro RL_PLATFORM_MAX_ISR_COUNT this will set number of IRQ count per platform. This macro is then used in environment layers to set isr_table size where irq handles are registered. It size should match the bit length of VQ_ID so all combinations can fit into table.
- Unit tests updated to improve code coverage, new unit tests added covering static allocations in rtos environment layers.

Fixed

- virtio.h removed typedef uint8_t boolean and in its place use standard C99 bool type to avoid potential type conflicts.
- env_acquire_sync_lock() and env_release_sync_lock() synchronization primitives removed

- Kconfig consolidation, when RL_ALLOW_CUSTOM_SHMEM_CONFIG enabled the platform_get_custom_shmem_config() function needs to be implemented in platform layer to provide custom shared memory configuration for RPMsg-Lite instance.

v5.2.1

Added

- Doc added RPMSG-Lite VirtIO Overview
- Doc added RPSMG-Lite Design Considerations
- Added frdmimxrt1186 unit testing

Changed

- Remove limitation that RL_BUFFER_SIZE needs to be power of 2. It just has to be more than 16 bytes, e.g. 16 bytes of rpmsg header and payload size at least 1 byte and word aligned, if not it will be aligned up.

Fixed

- Fixed CERT-C INT31-C violation in platform_notify function in rpmsg_platform.c for imxrt700_m33, imxrt700_hifi4, imxrt700_hifi1 platforms

v5.2.0

Added

- Add MCXL20 porting layer and unit testing
- New utility macro RL_CALCULATE_BUFFER_COUNT_DOWN_SAFE to safely determine maximum buffer count within shared memory while preventing integer underflow.
- RT700 platform add support for MCMGR in DSPs

Changed

- Change rpmsg_platform.c to support new MCMGR API
- Improved input validation in initialization functions to properly handle insufficient memory size conditions.
- Refactored repeated buffer count calculation pattern for better code maintainability.
- To make sure that remote has already registered IRQ there is required App level IPC mechanism to notify master about it

Fixed

- Fixed env_wait_for_link_up function to handle timeout in link state checks for baremetal and qnx environment, RL_BLOCK mode can be used to wait indefinitely.
- Fixed CERT-C INT31-C violation by adding compile-time check to ensure RL_PLATFORM_HIGHEST_LINK_ID remains within safe range for 16-bit casting in virtqueue ID creation.

- Fixed CERT-C INT30-C violations by adding protection against unsigned integer underflow in shared memory calculations, specifically in shmem_length - (uint32_t)RL_VRING_OVERHEAD and shmem_length - 2U * shmem_config.vring_size expressions.
- Fixed CERT INT31-C violation in platform_interrupt_disable() and similar functions by replacing unsafe cast from uint32_t to int32_t with a return of 0 constant.
- Fixed unsigned integer underflow in rpmsg_lite_alloc_tx_buffer() where subtracting header size from buffer size could wrap around if buffer was too small, potentially leading to incorrect buffer sizing.
- Fixed CERT-C INT31-C violation in rpmsg_lite.c where size parameter was cast from uint32_t to uint16_t without proper validation.
  - Applied consistent masking approach to both size and flags parameters: (uint16_t)(value & 0xFFFFU).
  - This fix prevents potential data loss when size values exceed 65535.
- Fixed CERT INT31-C violation in env_memset functions by explicitly converting int32_t values to unsigned char using bit masking. This prevents potential data loss or misinterpretation when passing values outside the unsigned char range (0-255) to the standard memset() function.
- Fixed CERT-C INT31-C violations in RPMsg-Lite environment porting: Added validation checks for signed-to-unsigned integer conversions to prevent data loss and misinterpretation.
  - rpmsg_env_freertos.c: Added validation before converting int32_t to UBaseType_t.
  - rpmsg_env_qnx.c: Fixed format string and added validation before assigning to mqstat fields.
  - rpmsg_env_threadx.c: Added validation to prevent integer overflow and negative values.
  - rpmsg_env_xos.c: Added range checking before casting to uint16_t.
  - rpmsg_env_zephyr.c: Added validation before passing values to k_msgq_init.
- Fixed a CERT INT31-C compliance issue in env_get_current_queue_size() function where an unsigned queue count was cast to a signed int32_t without proper validation, which could lead to lost or misinterpreted data if queue size exceeded INT32_MAX.
- Fixed CERT INT31-C violation in rpmsg_platform.c where memcmp() return value (signed int) was compared with unsigned constant without proper type handling.
- Fixed CERT INT31-C violation in rpmsg_platform.c where casting from uint32_t to uint16_t could potentially result in data loss. Changed length variable type from uint16_t to uint32_t to properly handle memory address differences without truncation.
- Fixed potential integer overflow in env_sleep_msec() function in ThreadX environment implementation by rearranging calculation order in the sleep duration formula.
- Fixed CERT-C INT31-C violation in RPMsg-Lite where bitwise NOT operations on integer constants were performed in signed integer context before being cast to unsigned. This could potentially lead to misinterpreted data on imx943 platform.
- Added RL_MAX_BUFFER_COUNT (32768U) and RL_MAX_VRING_ALIGN (65536U) limit to ensure alignment values cannot contribute to integer overflow
- Fixed CERT INT31-C violation in vring_need_event(), added cast to uint16_t for each operand.

v5.1.4 - 27-Mar-2025

Added

- Add KW43B43 porting layer

Changed

- Doxygen bump to version 1.9.6

v5.1.3 - 13-Jan-2025

Added

- Memory cache management of shared memory. Enable with #define RL_USE_DCACHE (1) in rpmsg_config.h in case of data cache is used.
- Cmake/Kconfig support added.
- Porting layers for imx95, imxrt700, mcmxw71x, mcmxw72x, kw47b42 added.

v5.1.2 - 08-Jul-2024

Changed

- Zephyr-related changes.
- Minor Misra corrections.

v5.1.1 - 19-Jan-2024

Added

- Test suite provided.
- Zephyr support added.

Changed

- Minor changes in platform and env. layers, minor test code updates.

v5.1.0 - 02-Aug-2023

Added

- RPMsg-Lite: Added aarch64 support.

Changed

- RPMsg-Lite: Increased the queue size to (2 * RL_BUFFER_COUNT) to cover zero copy cases.
- Code formatting using LLVM16.

Fixed

- Resolved issues in ThreadX env. layer implementation.

v5.0.0 - 19-Jan-2023

Added

- Timeout parameter added to rpmsg_lite_wait_for_link_up API function.

Changed

- Improved debug check buffers implementation - instead of checking the pointer fits into shared memory check the presence in the VirtIO ring descriptors list.
- VRING_SIZE is set based on number of used buffers now (as calculated in vring_init) - updated for all platforms that are not communicating to Linux rpmsg counterpart.

Fixed

- Fixed wrong RL_VRING_OVERHEAD macro comment in platform.h files
- Misra corrections.

v4.0.0 - 20-Jun-2022

Added

- Added support for custom shared memory arrangement per the RPMsg_Lite instance.
- Introduced new rpmsg_lite_wait_for_link_up() API function - this allows to avoid using busy loops in rtos environments, GitHub PR #21.

Changed

- Adjusted rpmsg_lite_is_link_up() to return RL_TRUE/RL_FALSE.

v3.2.0 - 17-Jan-2022

Added

- Added support for i.MX8 MP multicore platform.

Changed

- Improved static allocations - allow OS-specific objects being allocated statically, GitHub PR #14.
- Aligned rpmsg_env_xos.c and some platform layers to latest static allocation support.

Fixed

- Minor Misra and typo corrections, GitHub PR #19, #20.

v3.1.2 - 16-Jul-2021

Added

- Addressed MISRA 21.6 rule violation in rpmsg_env.h (use SDK's PRINTF in MCUXpressoSDK examples, otherwise stdio printf is used).
- Added environment layers for XOS.
- Added support for i.MX RT500, i.MX RT1160 and i.MX RT1170 multicore platforms.

Fixed

- Fixed incorrect description of the rpmsg_lite_get_endpoint_from_addr function.

Changed

- Updated RL_BUFFER_COUNT documentation (issue #10).
- Updated imxrt600_hifi4 platform layer.

v3.1.1 - 15-Jan-2021

Added

- Introduced RL_ALLOW_CONSUMED_BUFFERS_NOTIFICATION config option to allow opposite side notification sending each time received buffers are consumed and put into the queue of available buffers.
- Added environment layers for Threadx.
- Added support for i.MX8QM multicore platform.

Changed

- Several MISRA C-2012 violations addressed.

v3.1.0 - 22-Jul-2020

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed (7.4).
- Fixed missing lock in rpmsg_lite_rx_callback() for QNX env.
- Correction of rpmsg_lite_instance structure members description.
- Address -Waddress-of-packed-member warnings in GCC9.

Changed

- Clang update to v10.0.0, code re-formatted.

v3.0.0 - 20-Dec-2019

Added

- Added support for several new multicore platforms.

Fixed

- MISRA C-2012 violations fixed, incl. data types consolidation.
- Code formatted.

v2.2.0 - 20-Mar-2019

Added

- Added configuration macro RL_DEBUG_CHECK_BUFFERS.
- Several MISRA violations fixed.
- Added environment layers for QNX and Zephyr.
- Allow environment context required for some environment (controlled by the RL_USE_ENVIRONMENT_CONTEXT configuration macro).
- Data types consolidation.

v1.1.0 - 28-Apr-2017

Added

- Supporting i.MX6SX and i.MX7D MPU platforms.
- Supporting LPC5411x MCU platform.
- Baremental and FreeRTOS support.
- Support of copy and zero-copy transfer.
- Support of static API (without dynamic allocations).

Multicore Manager

MCUXpresso SDK : mcuxsdk-middleware-mcmgr (Multicore Manager)

Overview This repository is for MCUXpresso SDK Multicore Manager middleware delivery and it contains Multicore Manager component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk for the complete delivery of MCUXpresso SDK to be able to build and run Multicore Manager examples that are based on mcux-sdk-middleware-mcmgr component.

Documentation Overall details can be reviewed here: MCUXpresso SDK Online Documentation

Visit Multicore Manager - Documentation to review details on the contents in this sub-repo.

For Further API documentation, please look at doxygen documentation

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest Getting Started with SDK - Detailed Installation Instructions

Contribution We welcome and encourage the community to submit patches directly to the mcmgr project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

Multicore Manager (MCMGR) The Multicore Manager (MCMGR) software library provides a number of services for multicore systems. This library is distributed as a part of the Multicore SDK (MCSDK). Together, the MCSDK and the MCUXpresso SDK (SDK) form a framework for development of software for NXP multicore devices.

The MCMGR component is located in the <MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr directory.

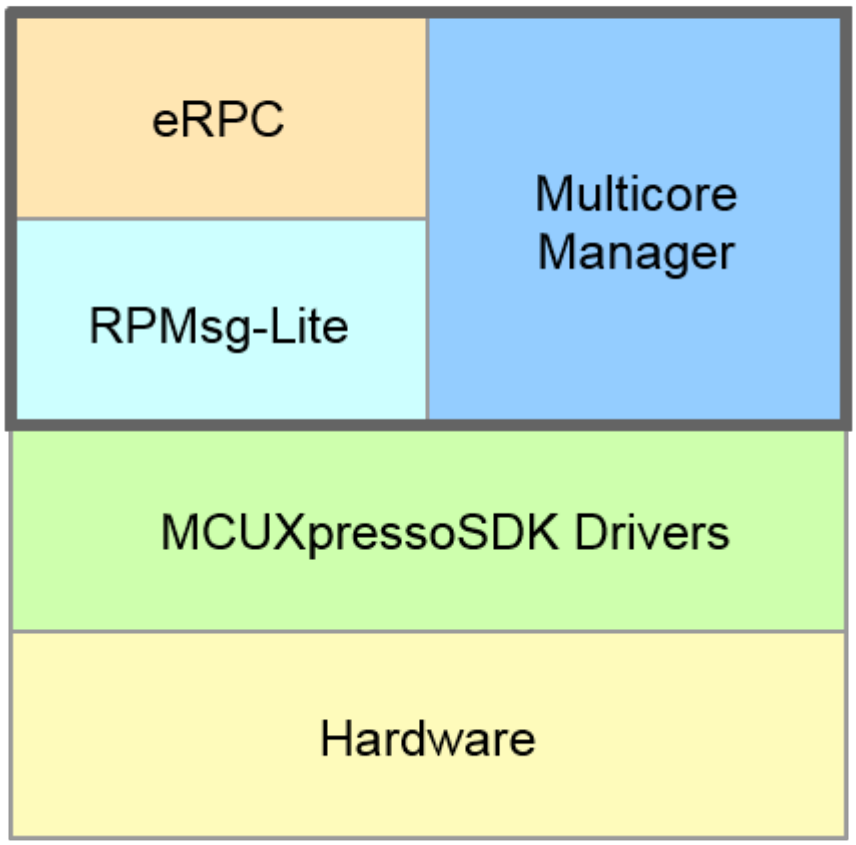

The Multicore Manager provides the following major functions:

- Maintains information about all cores in system.
- Secondary/auxiliary core(s) startup and shutdown.
- Remote core monitoring and event handling.

Usage of the MCMGR software component The main use case of MCMGR is the secondary/auxiliary core start. This functionality is performed by the public API function.

Example of MCMGR usage to start secondary core:

```
#include "mcmgr.h"

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass "1" as startup data,␣
↪starting synchronously. */
    MCMGR_StartCore(kMCMGR_Core1, CORE1_BOOT_ADDRESS, 1, kMCMGR_Start_Synchronous);
.
.
.
    /* Stop secondary core execution. */
    MCMGR_StopCore(kMCMGR_Core1);
}
```

Some platforms allow stopping and re-starting the secondary core application again, using the MCMGR_StopCore / MCMGR_StartCore API calls. It is necessary to ensure the initially loaded image is not corrupted before re-starting, especially if it deals with the RAM target. Cache coherence has to be considered/ensured as well.

It could also happen that the secondary core application stops running correctly and the primary core application does not know about that situation. Therefore, it is beneficial to implement a mechanism for core health monitoring. The *test_heartbeat* unit test can serve as an example how to ensure that: secondary core could periodically send heartbeat signals to the primary core using MCMGR_TriggerEvent() API to indicate that it is alive and functioning properly.

Another important MCMGR feature is the ability for remote core monitoring and handling of events such as reset, exception, and application events. Application-specific callback functions for events are registered by the MCMGR_RegisterEvent() API. Triggering these events is done using the MCMGR_TriggerEvent() API. mcmgr_event_type_t enums all possible event types.

An example of MCMGR usage for remote core monitoring and event handling. Code for the primary side:

```
#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA  (1)
#define APP_NUMBER_OF_CORES (2)
#define APP_SECONDARY_CORE kMCMGR_Core1

/* Callback function registered via the MCMGR_RegisterEvent() and triggered by MCMGR_TriggerEvent()␣
↪called on the secondary core side */
void RPMsgRemoteReadyEventHandler(mcmgr_core_t coreNum, uint16_t eventData, void *context)
{
    uint16_t *data = &((uint16_t *)context)[coreNum];

    *data = eventData;
}

void main()
{
```

(continues on next page)

(continued from previous page)

```
    uint16_t RPMsgRemoteReadyEventData[NUMBER_OF_CORES] = {0};

    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();

    /* Register the application event before starting the secondary core */
    MCMGR_RegisterEvent(kMCMGR_RemoteApplicationEvent, RPMsgRemoteReadyEventHandler, (void␣
↪*)RPMsgRemoteReadyEventData);

    /* Boot secondary core application from the CORE1_BOOT_ADDRESS, pass rpmsg_lite_base address␣
↪as startup data, starting synchronously. */
    MCMGR_StartCore(APP_SECONDARY_CORE, CORE1_BOOT_ADDRESS, (uint32_t)rpmsg_lite_
↪base, kMCMGR_Start_Synchronous);

    /* Wait until the secondary core application signals the rpmsg remote has been initialized and is ready to␣
↪communicate. */
    while(APP_RPMSG_READY_EVENT_DATA != RPMsgRemoteReadyEventData[APP_SECONDARY_
↪CORE]) {};
.
.
.
}
```

Code for the secondary side:

```
#include "mcmgr.h"

#define APP_RPMSG_READY_EVENT_DATA  (1)

void main()
{
    /* Initialize MCMGR - low level multicore management library.
       Call this function as close to the reset entry as possible,
       (into the startup sequence) to allow CoreUp event triggering. */
    MCMGR_EarlyInit();

    /* Initialize MCMGR, install generic event handlers */
    MCMGR_Init();
.
.
.

    /* Signal the to other core that we are ready by triggering the event and passing the APP_RPMSG_
↪READY_EVENT_DATA */
    MCMGR_TriggerEvent(kMCMGR_Core0, kMCMGR_RemoteApplicationEvent, APP_RPMSG_
↪READY_EVENT_DATA);
.
.
.
}
```

MCMGR Data Exchange Diagram The following picture shows how the handshakes are supposed to work between the two cores in the MCMGR software.

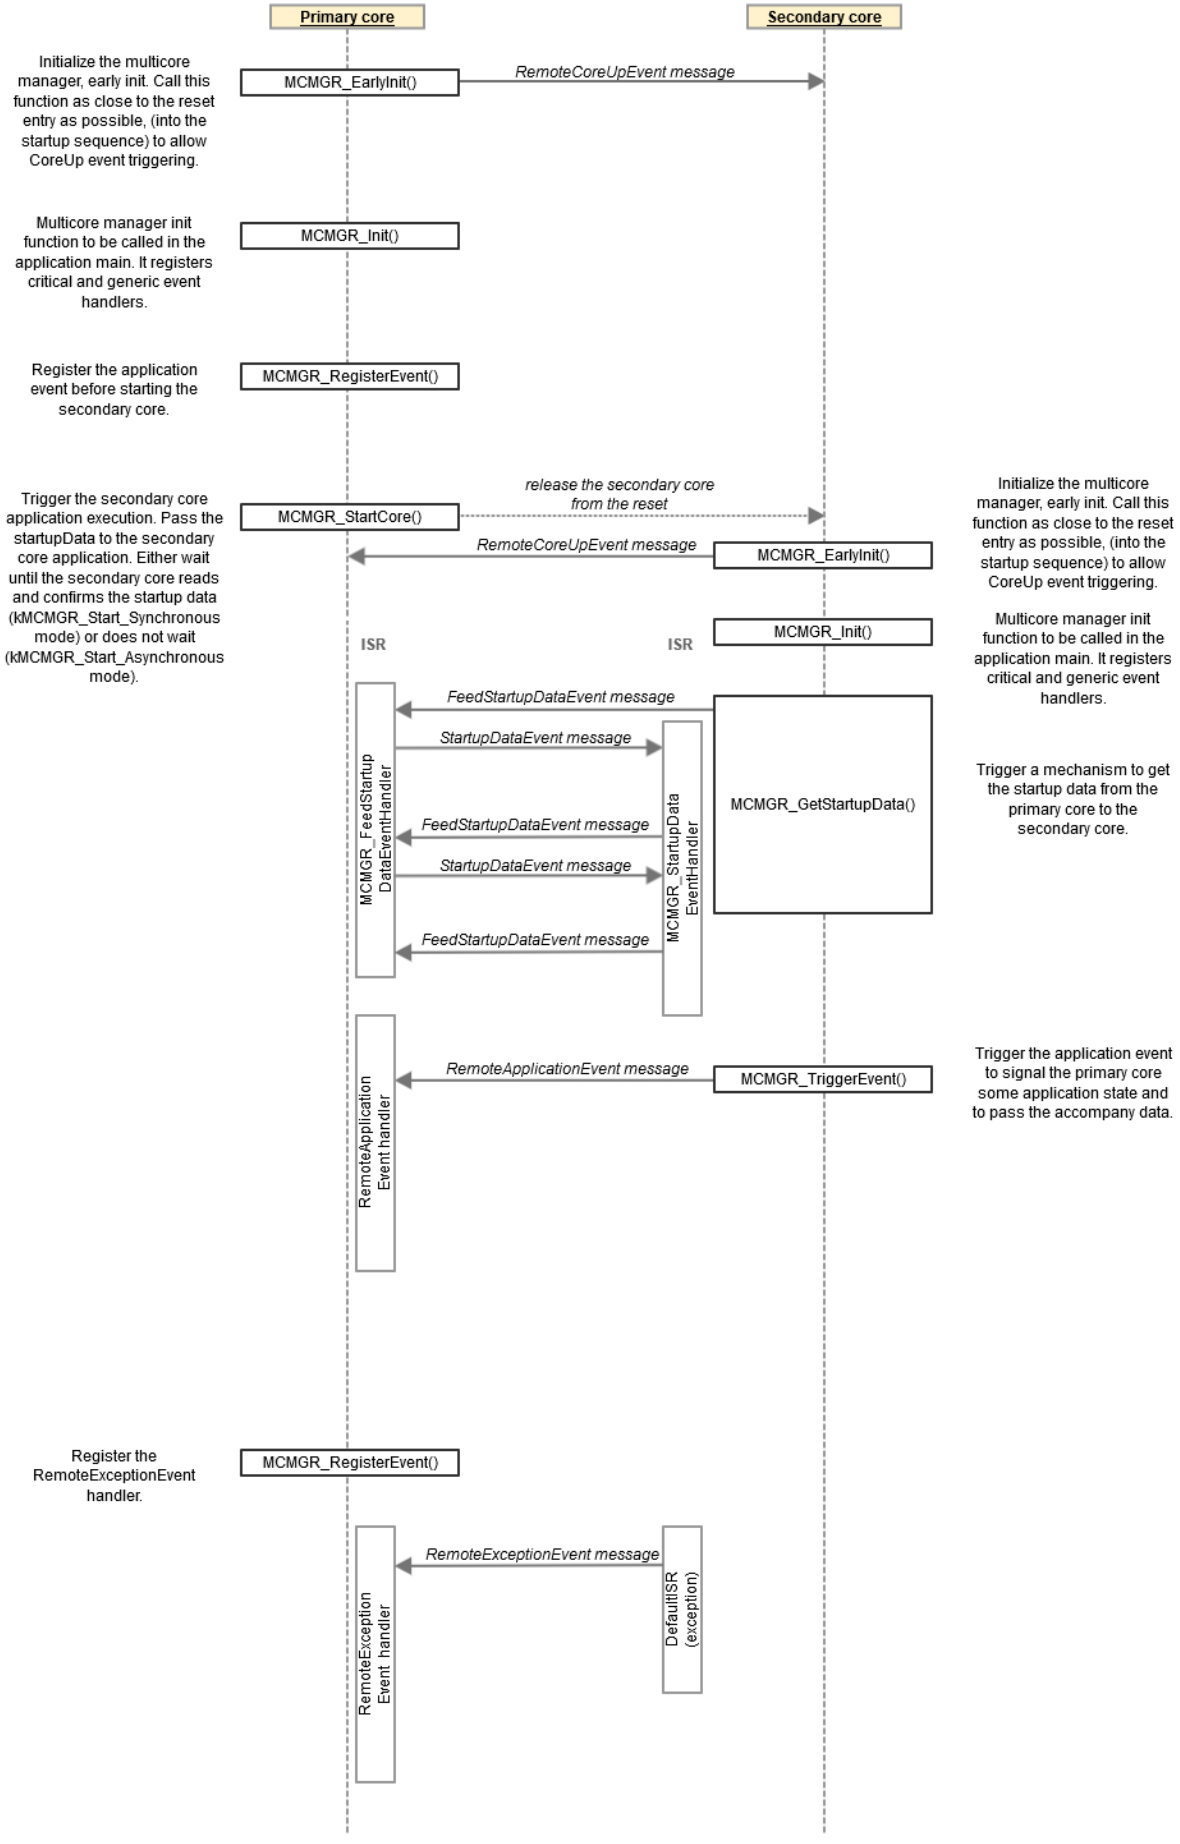
Primary core
Secondary core
Initialize the multicore manager, early init. Call this function as close to the reset entry as possible, (into the startup sequence) to allow CoreUp event triggering.
MCMGR_EarlyInit()
RemoteCoreUpEvent message
Multicore manager init function to be called in the application main. It registers critical and generic event handlers.
MCMGR_Init()
Register the application event before starting the secondary core.
MCMGR_RegisterEvent()
Trigger the secondary core application execution. Pass the startupData to the secondary core application. Either wait until the secondary core reads and confirms the startup data (kMCMGR_Start_Synchronous mode) or does not wait (kMCMGR_Start_Asynchronous mode).
MCMGR_StartCore()
release the secondary core from the reset
RemoteCoreUpEvent message
MCMGR_EarlyInit()
Initialize the multicore manager, early init. Call this function as close to the reset entry as possible, (into the startup sequence) to allow CoreUp event triggering.
MCMGR_Init()
Multicore manager init function to be called in the application main. It registers critical and generic event handlers.
ISR
ISR
FeedStartupDataEvent message
StartupDataEvent message
FeedStartupDataEvent message
StartupDataEvent message
FeedStartupDataEvent message
MCMGR_FeedStartup DataEventHandler
MCMGR_StartupData EventHandler
MCMGR_GetStartupData()
Trigger a mechanism to get the startup data from the primary core to the secondary core.
RemoteApplication Event handler
RemoteApplicationEvent message
MCMGR_TriggerEvent()
Trigger the application event to signal the primary core some application state and to pass the accompany data.
Register the RemoteExceptionEvent handler.
MCMGR_RegisterEvent()
RemoteException Event handler
RemoteExceptionEvent message
DefaultISR (exception)

Changelog Multicore Manager All notable changes to this project will be documented in this file.

The format is based on Keep a Changelog, and this project adheres to Semantic Versioning.

v5.1.0

Added

- Added mcxl14x parts support
- Added mcxw70 parts support
- Add new config MCMGR_REMOTE_APP_EVENT_COUNT for configurable remote application event count. This will expand number of application events available for MCMGR users. kMCMGR_RemoteApplicationEvent, kMCMGR_RemoteApplicationEvent1 .. kMCMGR_RemoteApplicationEvent4.
- Align Kinetis parts porting to changed register map

Fixed

- Fix MISRA C-2012 Rule 20.8 violations.

v5.0.2

Added

- Added gcov options and configs to support mcmgr code coverage
- Added new test_weak_mu_isr testcase for devices with MU peripheral
- Added new test_heartbeat testcase showing heartbeat mechanism between primary and secondary cores using the MCMGR

v5.0.1

Added

- Added frdmimxrt1186 unit testing

Changed

- [KW43] Rename core#1 reset control register

Fixed

- Added CX flag into CMakeLists.txt to allow c++ build compatibility.
- Fix path to mcmgr headers directory in doxyfile

v5.0.0

Added

- Added MCMGR_BUSY_POLL_COUNT macro to prevent infinite polling loops in MCMGR operations.
- Implemented timeout mechanism for all polling loops in MCMGR code.
- Added support to handle more then two cores. Breaking API change by adding parameter coreNum specifying core number in functions bellow.
  - MCMGR_GetStartupData(uint32_t *startupData, mcmgr_core_t coreNum)
  - MCMGR_TriggerEvent(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
  - MCMGR_TriggerEventForce(mcmgr_event_type_t type, uint16_t eventData, mcmgr_core_t coreNum)
  - typedef void (*mcmgr_event_callback_t)(uint16_t data, void *context, mcmgr_core_t coreNum);

  When registering the event with function MCMGR_RegisterEvent() user now needs to provide callbackData pointer to array of elements per every core in system (see README.md for example).In case of systems with only two cores the coreNum in callback can be ignored as events can arrive only from one core. Please see Porting guide for more details: Porting-GuideTo_v5.md
- Updated all porting files to support new MCMGR API.
- Added new platform specific include file mcmgr_platform.h. It will contain common platform specific macros that can be then used in mcmgr and application. e.g. platform core count MCMGR_CORECOUNT 4.
- Move all header files to new inc directory.
- Added new platform-specific include files inc/platform/<platform_name>/mcmgr_platform.h.

Added

- Add MCXL20 porting layer and unit testing

v4.1.7

Fixed

- mcmgr_stop_core_internal() function now returns kStatus_MCMGR_NotImplemented status code instead of kStatus_MCMGR_Success when device does not support stop of secondary core. Ports affected: kw32w1, kw45b41, kw45b42, mcxw716, mcxw727.

[v4.1.6]

Added

- Multicore Manager moved to standalone repository.
- Add porting layers for imxrt700, mcmxw727, kw47b42.
- New MCMGR_ProcessDeferredRxIsr() API added.

[v4.1.5]

Added

- Add notification into MCMGR_EarlyInit and mcmgr_early_init_internal functions to avoid using uninitialized data in their implementations.

[v4.1.4]

Fixed

- Avoid calling tx isr callbacks when respective Messaging Unit Transmit Interrupt Enable flag is not set in the CR/TCR register.
- Messaging Unit RX and status registers are cleared after the initialization.

[v4.1.3]

Added

- Add porting layers for imxrt1180.

Fixed

- mu_isr() updated to avoid calling tx isr callbacks when respective Transmit Interrupt Enable flag is not set in the CR/TCR register.
- mcmgr_mu_internal.c code adaptation to new supported SoCs.

[v4.1.2]

Fixed

- Update mcmgr_stop_core_internal() implementations to set core state to kMCMGR_ResetCoreState.

[v4.1.0]

Fixed

- Code adjustments to address MISRA C-2012 Rules

[v4.0.3]

Fixed

- Documentation updated to describe handshaking in a graphic form.
- Minor code adjustments based on static analysis tool findings

[v4.0.2]

Fixed

- Align porting layers to the updated MCUXpressoSDK feature files.

[v4.0.1]

Fixed

- Code formatting, removed unused code

[v4.0.0]

Added

- Add new MCMGR_TriggerEventForce() API.

[v3.0.0]

Removed

- Removed MCMGR_LoadApp(), MCMGR_MapAddress() and MCMGR_SignalReady()

Modified

- Modified MCMGR_GetStartupData()

Added

- Added MCMGR_EarlyInit(), MCMGR_RegisterEvent() and MCMGR_TriggerEvent()
- Added the ability for remote core monitoring and event handling

[v2.0.1]

Fixed

- Updated to be Misra compliant.

[v2.0.0]

Added

- Support for lpcxpresso54114 board.

[v1.1.0]

Fixed

- Ported to KSDK 2.0.0.

[v1.0.0]

Added

- Initial release.

eRPC

MCUXpresso SDK : mcuxsdk-middleware-erpc

Overview This repository is for MCUXpresso SDK eRPC middleware delivery and it contains eRPC component officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk for the complete delivery of MCUXpresso SDK to be able to build and run eRPC examples that are based on mcux-sdk-middleware-erpc component.

Documentation Overall details can be reviewed here: MCUXpresso SDK Online Documentation

Visit eRPC - Documentation to review details on the contents in this sub-repo.

Setup Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest Getting Started with SDK - Detailed Installation Instructions

Contribution We welcome and encourage the community to submit patches directly to the eRPC project placed on github. Contributing can be managed via pull-requests. Before a pull-request is created the code should be tested and properly formatted.

---

eRPC

- *MCUXpresso SDK : mcuxsdk-middleware-erpc*
  - *Overview*
  - *Documentation*
  - *Setup*
  - *Contribution*
- *eRPC*
  - *About*
  - *Releases*
    - *Edge releases*
  - *Documentation*
  - *Examples*

- *References*
- *Directories*
- *Building and installing*
  - *Requirements*
    - *Windows*
    - *Mac OS X*
  - *Building*
    - *CMake and KConfig*
    - *Make*
  - *Installing for Python*
- *Known issues and limitations*
- *Code providing*

About

eRPC (Embedded RPC) is an open source Remote Procedure Call (RPC) system for multichip embedded systems and heterogeneous multicore SoCs.

Unlike other modern RPC systems, such as the excellent Apache Thrift, eRPC distinguishes itself by being designed for tightly coupled systems, using plain C for remote functions, and having a small code size (<5kB). It is not intended for high performance distributed systems over a network.

eRPC does not force upon you any particular API style. It allows you to export existing C functions, without having to change their prototypes. (There are limits, of course.) And although the internal infrastructure is written in C++, most users will be able to use only the simple C setup APIs shown in the examples below.

A code generator tool called erpcgen is included. It accepts input IDL files, having an .erpc extension, that have definitions of your data types and remote interfaces, and generates the shim code that handles serialization and invocation. erpcgen can generate either C/C++ or Python code.

Example .erpc file:

```
// Define a data type.
enum LEDName { kRed, kGreen, kBlue }

// An interface is a logical grouping of functions.
interface IO {
    // Simple function declaration with an empty reply.
    set_led(LEDName whichLed, bool onOrOff) -> void
}
```

Client side usage:

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;
```

(continues on next page)

(continued from previous page)

```
    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* init eRPC client IO service */
    initIO_client(client_manager);

    // Now we can call the remote function to turn on the green LED.
    set_led(kGreen, true);

    /* deinit objects */
    deinitIO_client();
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

```
void example_client(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_client_t client_manager;

    /* Init eRPC client infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    client_manager = erpc_client_init(transport, message_buffer_factory);

    /* scope for client service */
    {
        /* init eRPC client IO service */
        IO_client client(client_manager);

        // Now we can call the remote function to turn on the green LED.
        client.set_led(kGreen, true);
    }

    /* deinit objects */
    erpc_client_deinit(client_manager);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

Server side usage:

```
// Implement the remote function.
void set_led(LEDName whichLed, bool onOrOff) {
    // implementation goes here
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    erpc_service_t service = create_IO_service();

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);
```

(continues on next page)

(continued from previous page)

```
    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, service);

    // Run the server.
    erpc_server_run();

    /* deinit objects */
    destroy_IO_service(service);
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

```
// Implement the remote function.
class IO : public IO_interface
{
    /* eRPC call definition */
    void set_led(LEDName whichLed, bool onOrOff) override {
        // implementation goes here
    }
}

void example_server(void) {
    erpc_transport_t transport;
    erpc_mbf_t message_buffer_factory;
    erpc_server_t server;
    IO IOImpl;
    IO_service io(&IOImpl);

    /* Init eRPC server infrastructure */
    transport = erpc_transport_cmsis_uart_init(Driver_USART0);
    message_buffer_factory = erpc_mbf_dynamic_init();
    server = erpc_server_init(transport, message_buffer_factory);

    /* add custom service implementation to the server */
    erpc_add_service_to_server(server, &io);

    /* poll for requests */
    erpc_status_t err = server.run();

    /* deinit objects */
    erpc_server_deinit(server);
    erpc_mbf_dynamic_deinit(message_buffer_factory);
    erpc_transport_tcp_deinit(transport);
}
```

A number of transports are supported, and new transport classes are easy to write.

Supported transports can be found in *erpc/erpc_c/transport* folder. E.g:

- CMSIS UART
- NXP Kinetis SPI and DSPI
- POSIX and Windows serial port
- TCP/IP (mostly for testing)
- NXP RPMsg-Lite / RPMsg TTY
- SPIdev Linux
- USB CDC
- NXP Messaging Unit

eRPC is available with an unrestrictive BSD 3-clause license. See the LICENSE file for the full license text.

Releases eRPC releases

Edge releases Edge releases can by found on eRPC CircleCI webpage. Choose build of interest, then platform target and choose ARTIFACTS tab. Here you can find binary application from chosen build.

Documentation Documentation is in the wiki section.

eRPC Infrastructure documentation

Examples *Example IDL* is available in the *examples/* folder.

Plenty of eRPC multicore and multiprocessor examples can be also found in NXP MCUXpressoSDK packages. Visit https://mcuxpresso.nxp.com to configure, build and download these packages.

To get the board list with multicore support (eRPC included) use filtering based on Middleware and search for 'multicore' string. Once the selected package with the multicore middleware is downloaded, see

<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples for eRPC multicore examples (RPMsg_Lite or Messaging Unit transports used) or

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples for eRPC multiprocessor examples (UART or SPI transports used).

eRPC examples use the 'erpc_' name prefix.

Another way of getting NXP MCUXpressoSDK eRPC multicore and multiprocessor examples is using the mcux-sdk Github repo. Follow the description how to use the West tool to clone and update the mcuxsdk repo in readme Overview section. Once done the armgcc eRPC examples can be found in

mcuxsdk/examples/<board_name>/multicore_examples or in

mcuxsdk/examples/<board_name>/multiprocessor_examples folders.

You can use the evkmimxrt1170 as the board_name for instance. Similar to MCUXpressoSDK packages the eRPC examples use the 'erpc_' name prefix.

References This section provides links to interesting erpc-based projects, articles, blogs or guides:

- erpc (EmbeddedRPC) getting started notes
- ERPC Linux Local Environment Construction and Use
- The New Wio Terminal eRPC Firmware

Directories *doc* - Documentation.

doxygen - Configuration and support files for running Doxygen over the eRPC C++ infrastructure and erpcgen code.

erpc_c - Holds C/C++ infrastructure for eRPC. This is the code you will include in your application.

erpc_python - Holds Python version of the eRPC infrastructure.

erpcgen - Holds source code for erpcgen and makefiles or project files to build erpcgen on Windows, Linux, and OS X.

erpcsniffer - Holds source code for erpcsniffer application.

examples - Several example IDL files.

mk - Contains common makefiles for building eRPC components.

test - Client/server tests. These tests verify the entire communications path from client to server and back.

utilities - Holds utilities which bring additional benefit to eRPC apps developers.

Building and installing These build instructions apply to host PCs and embedded Linux. For bare metal or RTOS embedded environments, you should copy the *erpc_c* directory into your application sources.

CMake and KConfig build:

It builds a static library of the eRPC C/C++ infrastructure, the erpcgen executable, and optionally the unit tests and examples.

CMake is compatible with gcc and clang. On Windows local MingGW downloaded by *script* can be used.

Make build:

It builds a static library of the eRPC C/C++ infrastructure, the erpcgen executable, and optionally the unit tests.

The makefiles are compatible with gcc or clang on Linux, OS X, and Cygwin. A Windows build of erpcgen using Visual Studio is also available in the *erpcgen/VisualStudio_v14* directory. There is also an Xcode project file in the *erpcgen* directory, which can be used to build erpcgen for OS X.

Requirements eRPC now support building **erpcgen**, **erpc_lib**, **tests** and **C examples** using CMake.

Requirements when using CMake:

- **CMake** (minimal version 3.20.0)
- Generator - **Make**, **Ninja**, ...
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Binson** - https://www.gnu.org/software/bison/
- **Flex** - https://github.com/westes/flex/

Requirements when using Make:

- **Make**
- **C/C++ compiler** - **GCC**, **CLANG**, ...
- **Binson** - https://www.gnu.org/software/bison/
- **Flex** - https://github.com/westes/flex/

Windows Related steps to build **erpcgen** using **Visual Studio** are described in erpcgen/VisualStudio_v14/readme_erpcgen.txt.

To install MinGW, Bison, Flex locally on Windows:

```
./install_dependencies.ps1
* ```

#### Linux

```bash
./install_dependencies.sh
```

Mandatory for case, when build for different architecture is needed

- gcc-multilib, g++-multilib

Mac OS X

```
./install_dependencies.sh
```

Building

CMake and KConfig eRPC use CMake and KConfig to configurate and build eRPC related targets. KConfig can be edited by *prj.conf* or *menuconfig* when building.

Generate project, config and build. In *erpc/* execute:

```
cmake -B ./build # in erpc/build generate cmake project
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and␣
↪examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

**CMake will use the system's default compilers and generator

If you want to use Windows and locally installed MinGW, use *CMake preset* :

```
cmake --preset mingw64 # Generate project in ./build using mingw64's make and compilers
cmake --build ./build --target menuconfig # Build menuconfig and configurate erpcgen, erpc_lib, tests and␣
↪examples
cmake --build ./build # Build all selected target from prj.conf/menuconfig
```

Make To build the library and erpcgen, run from the repo root directory:

```
make
```

To install the library, erpcgen, and include files, run:

```
make install
```

You may need to sudo the `make install`.

By default this will install into `/usr/local`. If you want to install elsewhere, set the `PREFIX` environment variable. Example for installing into `/opt`:

```
make install PREFIX=/opt
```

List of top level Makefile targets:

- `erpc`: build the liberpc.a static library
- `erpcgen`: build the erpcgen tool
- `erpcsniffer`: build the sniffer tool
- `test`: build the unit tests under the *test* directory
```

- all: build all of the above
- install: install liberpc.a, erpcgen, and include files

eRPC code is validated with respect to the C++ 11 standard.

Installing for Python To install the Python infrastructure for eRPC see instructions in the *erpc python readme*.

Known issues and limitations

- Static allocations controlled by the ERPC_ALLOCATION_POLICY config macro are not fully supported yet, i.e. not all erpc objects can be allocated statically now. It deals with the ongoing process and the full static allocations support will be added in the future.

Code providing Repository on Github contains two main branches: **main** and **develop**. Code is developed on **develop** branch. Release version is created via merging **develop** branch into **main** branch.

Copyright 2014-2016 Freescale Semiconductor, Inc.

Copyright 2016-2025 NXP

eRPC Getting Started

Overview This *Getting Started User Guide* shows software developers how to use Remote Procedure Calls (RPC) in embedded multicore microcontrollers (eRPC).

The eRPC documentation is located in the *<MCUXpressoSDK_install_dir>/ middleware/multicore/erpc/doc* folder.

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
    1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
    2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
    3. Add infrastructure files.
    4. Add user code for client and server applications.
    5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.

Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4/iar

The project files for the eRPC server have the _cm4 suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- *<MCUXpressoSDK_install_dir>/devices/<device>*
- *<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/*

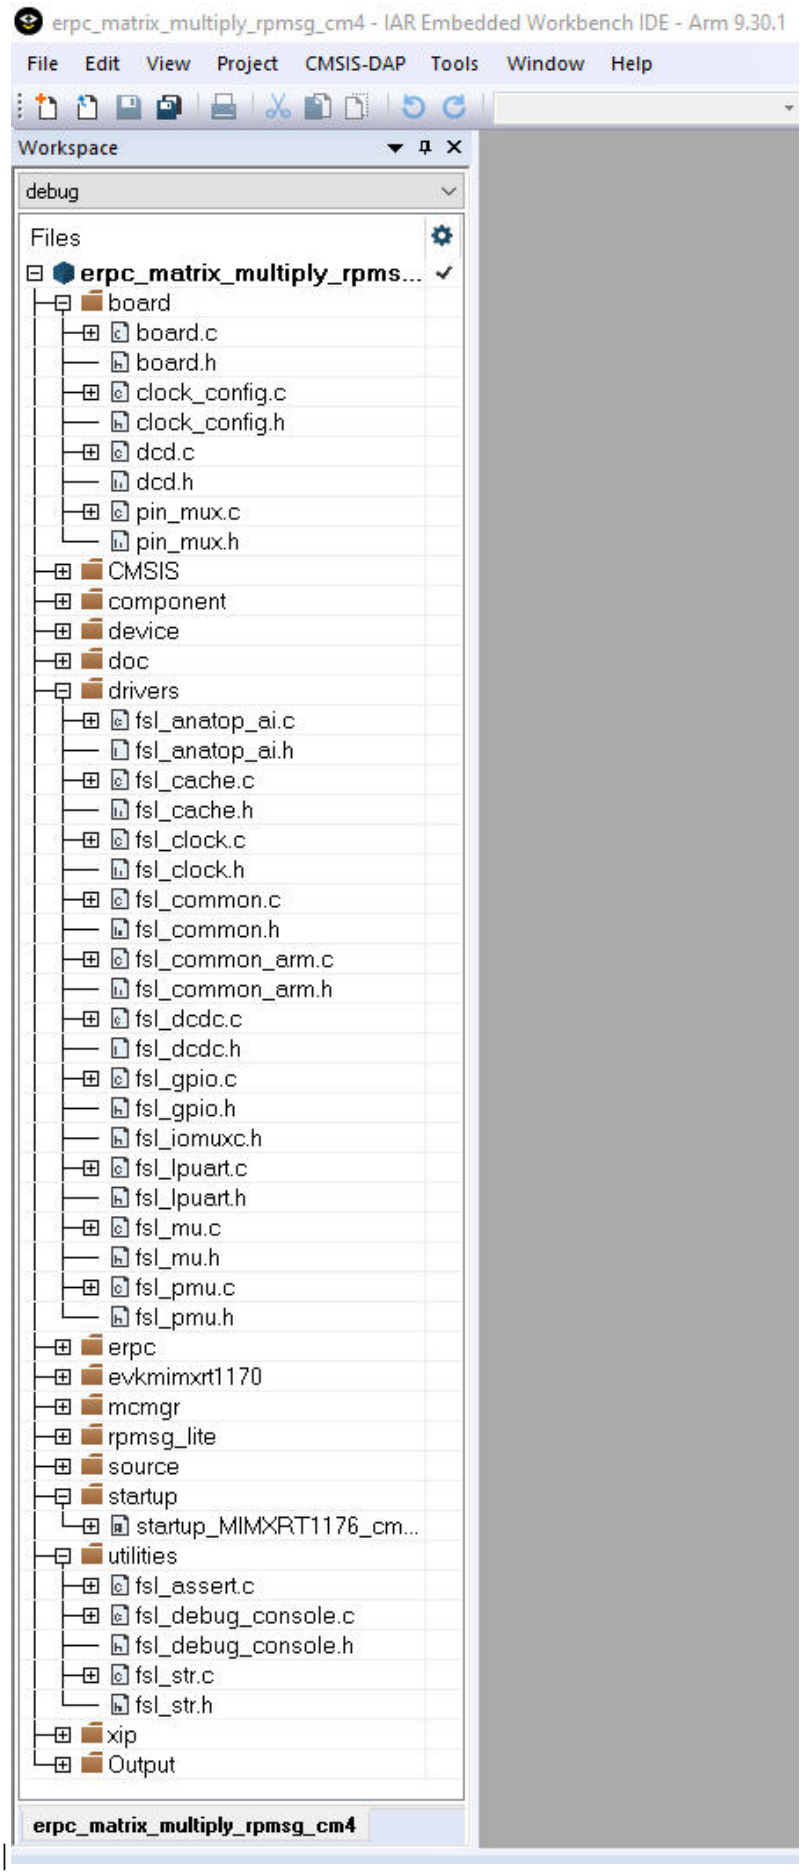
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpms...
board
board.c
board.h
clock_config.c
clock_config.h
dcd.c
dcd.h
pin_mux.c
pin_mux.h
CMSIS
component
device
doc
drivers
fsl_anatop_ai.c
fsl_anatop_ai.h
fsl_cache.c
fsl_cache.h
fsl_clock.c
fsl_clock.h
fsl_common.c
fsl_common.h
fsl_common_arm.c
fsl_common_arm.h
fsl_dcdc.c
fsl_dcdc.h
fsl_gpio.c
fsl_gpio.h
fsl_iomuxc.h
fsl_lpuart.c
fsl_lpuart.h
fsl_mu.c
fsl_mu.h
fsl_pmu.c
fsl_pmu.h
erpc
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
startup_MIMXRT1176_cm...
utilities
fsl_assert.c
fsl_debug_console.c
fsl_debug_console.h
fsl_str.c
fsl_str.h
xip
Output
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server related generated files The server-related generated files are:

- erpc_matric_multiply.h
- erpc_matrix_multiply_server.h
- erpc_matrix_multiply_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/s

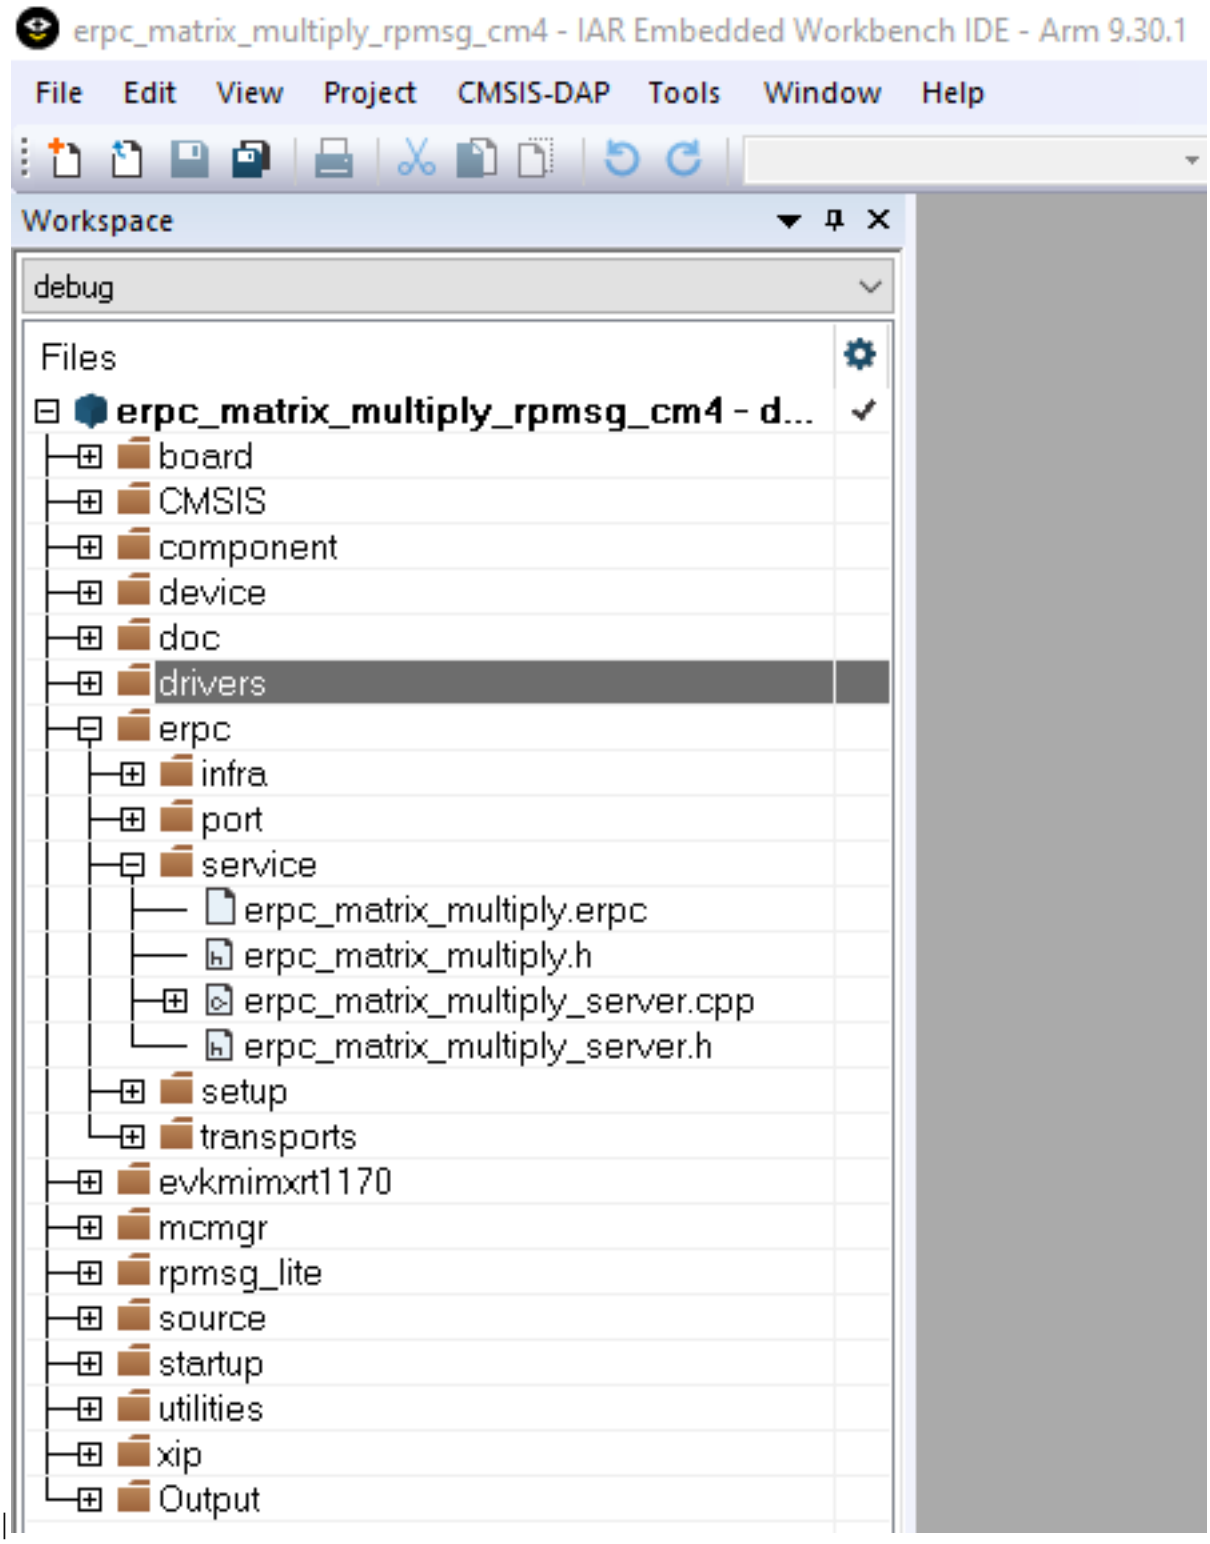

Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c

The **erpc_c** folder contains files for creating eRPC client and server applications in the *C/C++* language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, erpc_server.hpp, erpc_server.cpp, erpc_simple_server.hpp, and erpc_simple_server.cpp, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (erpc_codec.hpp, erpc_basic_codec.hpp, and erpc_basic_codec.cpp) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The erpc_common.hpp file is used for common eRPC definitions, typedefs, and enums.
  - The erpc_manually_constructed.hpp file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: erpc_message_buffer.h and erpc_message_buffer.cpp.
  - The erpc_transport.h file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - erpc_port.h file contains definition of erpc_malloc() and erpc_free() functions.
  - erpc_port_stdlib.cpp file ensures adaptation to stdlib.
  - erpc_config_internal.h internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The erpc_server_setup.h and erpc_server_setup.cpp files needs to be added into the "Matrix multiply" example project to demonstrate the use of C-wrapped functions in this example.
  - The erpc_transport_setup.h and erpc_setup_rpmsg_lite_remote.cpp files needs to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The erpc_mbf_setup.h and erpc_setup_mbf_rpmsg.cpp files needs to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPMsg-Lite is used as the transport layer for the communication between cores, erpc_rpmsg_lite_base_transport.hpp, erpc_rpmsg_lite_transport.hpp, and erpc_rpmsg_lite_transport.cpp files need to be added into the server project.

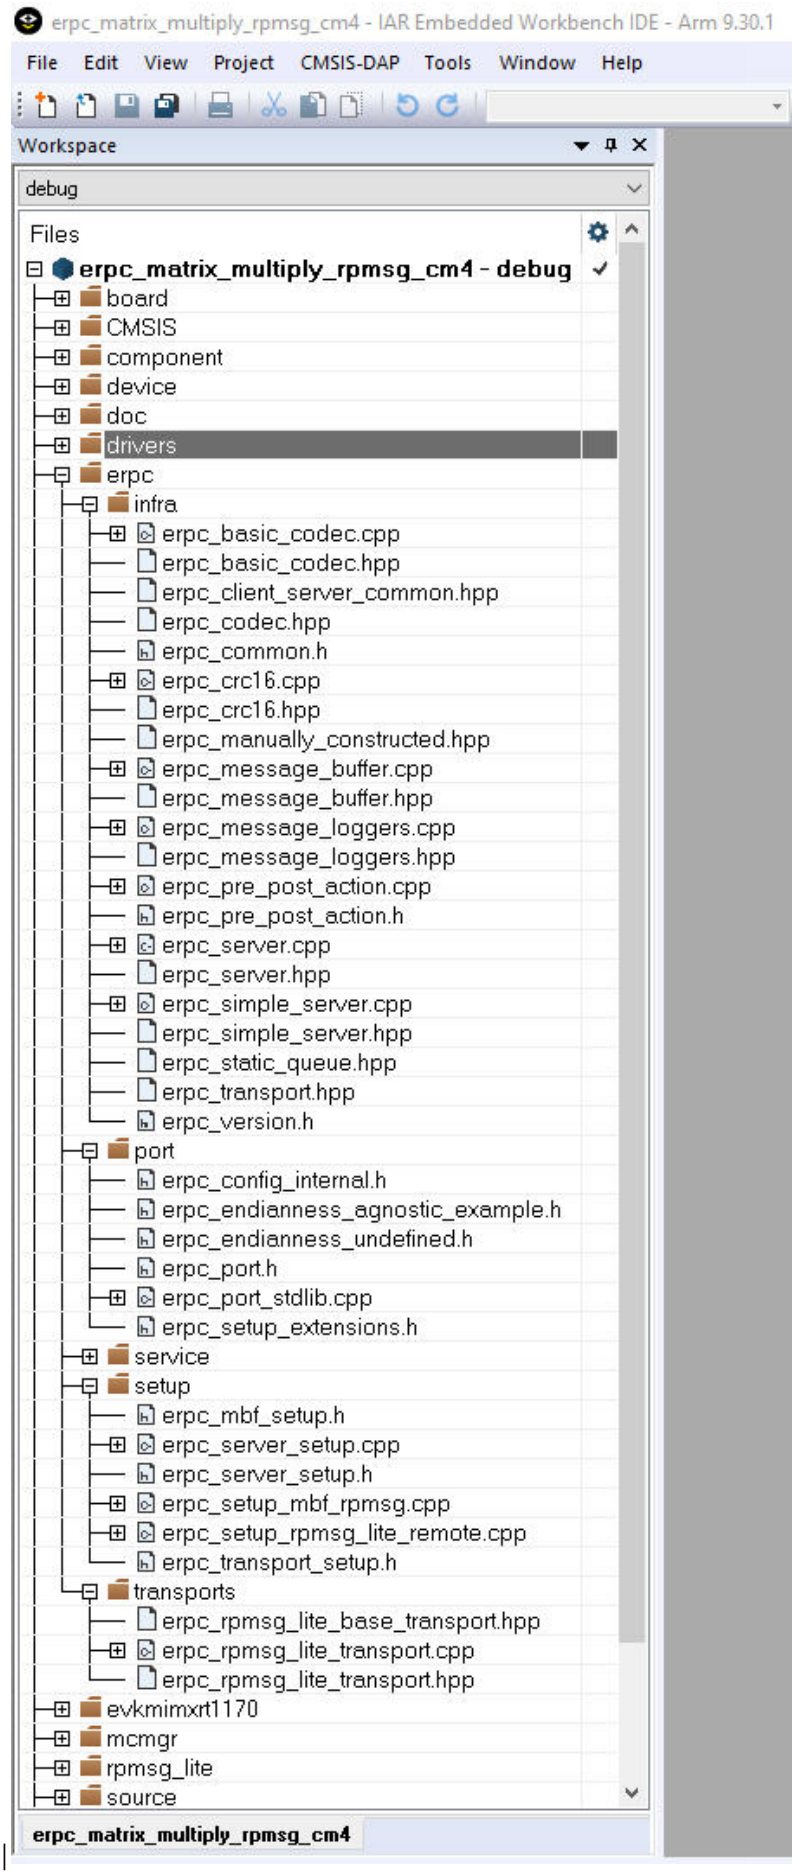
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpmsg_cm4 - debug
board
CMSIS
component
device
doc
drivers
erpc
infra
erpc_basic_codec.cpp
erpc_basic_codec.hpp
erpc_client_server_common.hpp
erpc_codec.hpp
erpc_common.h
erpc_crc16.cpp
erpc_crc16.hpp
erpc_manually_constructed.hpp
erpc_message_buffer.cpp
erpc_message_buffer.hpp
erpc_message_loggers.cpp
erpc_message_loggers.hpp
erpc_pre_post_action.cpp
erpc_pre_post_action.h
erpc_server.cpp
erpc_server.hpp
erpc_simple_server.cpp
erpc_simple_server.hpp
erpc_static_queue.hpp
erpc_transport.hpp
erpc_version.h
port
erpc_config_internal.h
erpc_endianness_agnostic_example.h
erpc_endianness_undefined.h
erpc_port.h
erpc_port_stdlib.cpp
erpc_setup_extensions.h
service
setup
erpc_mbf_setup.h
erpc_server_setup.cpp
erpc_server_setup.h
erpc_setup_mbf_rpmsg.cpp
erpc_setup_rpmsg_lite_remote.cpp
erpc_transport_setup.h
transports
erpc_rpmsg_lite_base_transport.hpp
erpc_rpmsg_lite_transport.cpp
erpc_rpmsg_lite_transport.hpp
evkmimxrt1170
mcmgr
rpmsg_lite
source
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

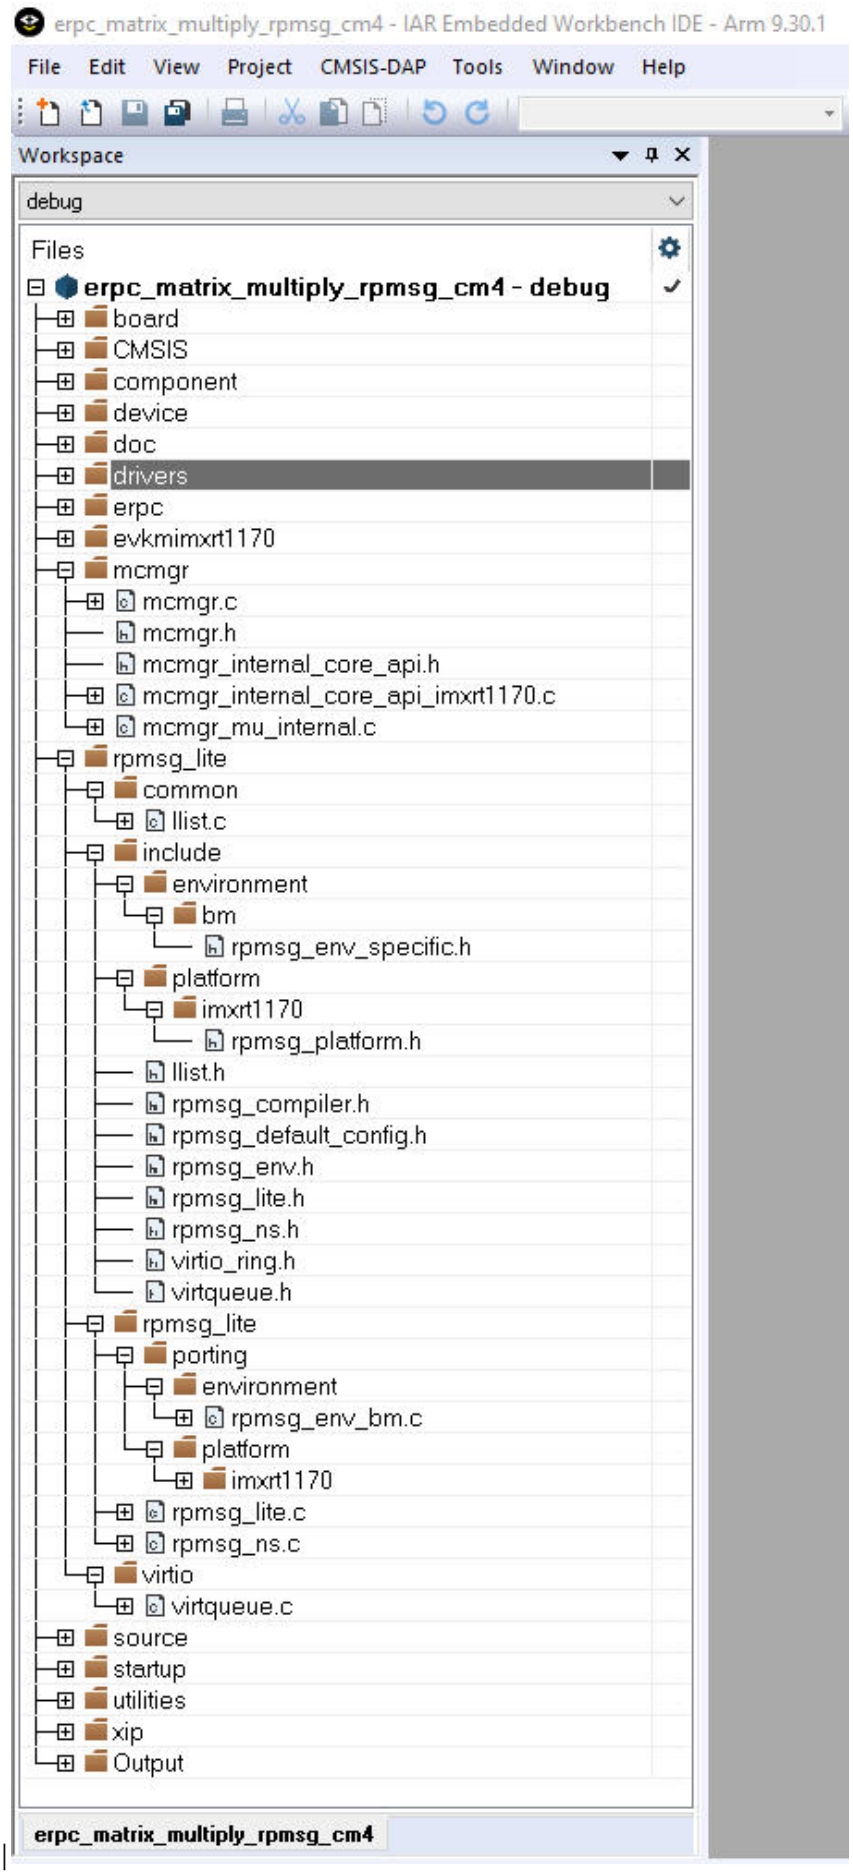
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpmsg_cm4 - debug
board
CMSIS
component
device
doc
drivers
erpc
evkmimxrt1170
mcmgr
mcmgr.c
mcmgr.h
mcmgr_internal_core_api.h
mcmgr_internal_core_api_imxrt1170.c
mcmgr_mu_internal.c
rpmsg_lite
common
llist.c
include
environment
bm
rpmsg_env_specific.h
platform
imxrt1170
rpmsg_platform.h
llist.h
rpmsg_compiler.h
rpmsg_default_config.h
rpmsg_env.h
rpmsg_lite.h
rpmsg_ns.h
virtio_ring.h
virtqueue.h
rpmsg_lite
porting
environment
rpmsg_env_bm.c
platform
imxrt1170
rpmsg_lite.c
rpmsg_ns.c
virtio
virtqueue.c
source
startup
utilities
xip
Output
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server user code The server's user code is stored in the main_core1.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4

The main_core1.c file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the erpc_error_handler.h and erpc_error_handler.cpp files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
  ...
}
int main()
{
  ...
  /* RPMsg-Lite transport layer initialization */
  erpc_transport_t transport;
  transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
  ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
  ...
  /* MessageBufferFactory initialization */
  erpc_mbf_t message_buffer_factory;
  message_buffer_factory = erpc_mbf_rpmsg_init(transport);
  ...
  /* eRPC server side initialization */
  erpc_server_t server;
  server = erpc_server_init(transport, message_buffer_factory);
  ...
  /* Adding the service to the server */
  erpc_service_t service = create_MatrixMultiplyService_service();
  erpc_add_service_to_server(server, service);
  ...
  while (1)
  {
    /* Process eRPC requests */
    erpc_status_t status = erpc_server_poll(server);
    /* handle error status */
    if (status != kErpcStatus_Success)
    {
      /* print error description */
      erpc_error_handler(status, 0);
      ...
    }
    ...
  }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the *<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg* folder.

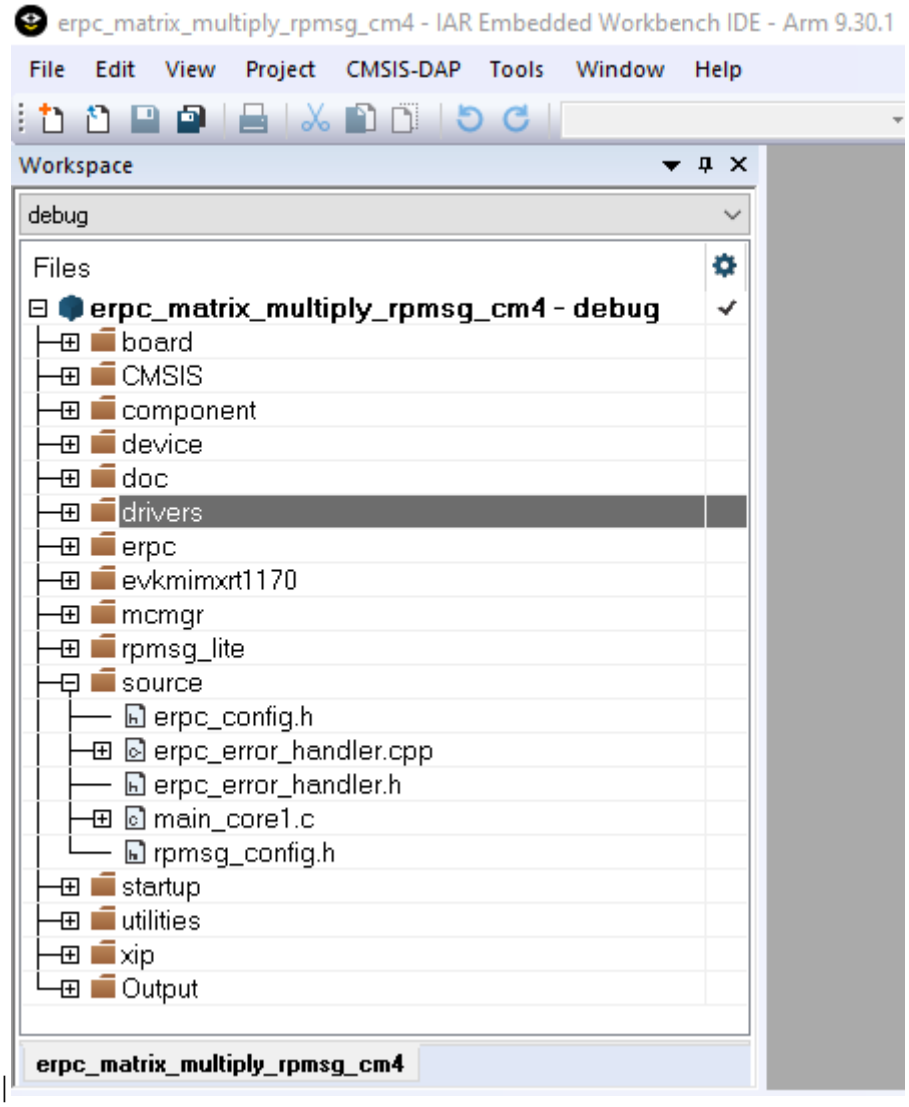

Parent topic: Multicore server application

Parent topic:*Create an eRPC application*

Multicore client application The "Matrix multiply" eRPC client project is located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar

Project files for the eRPC client have the _cm7 suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- *<MCUXpressoSDK_install_dir>/devices/<device>*
- *<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/*

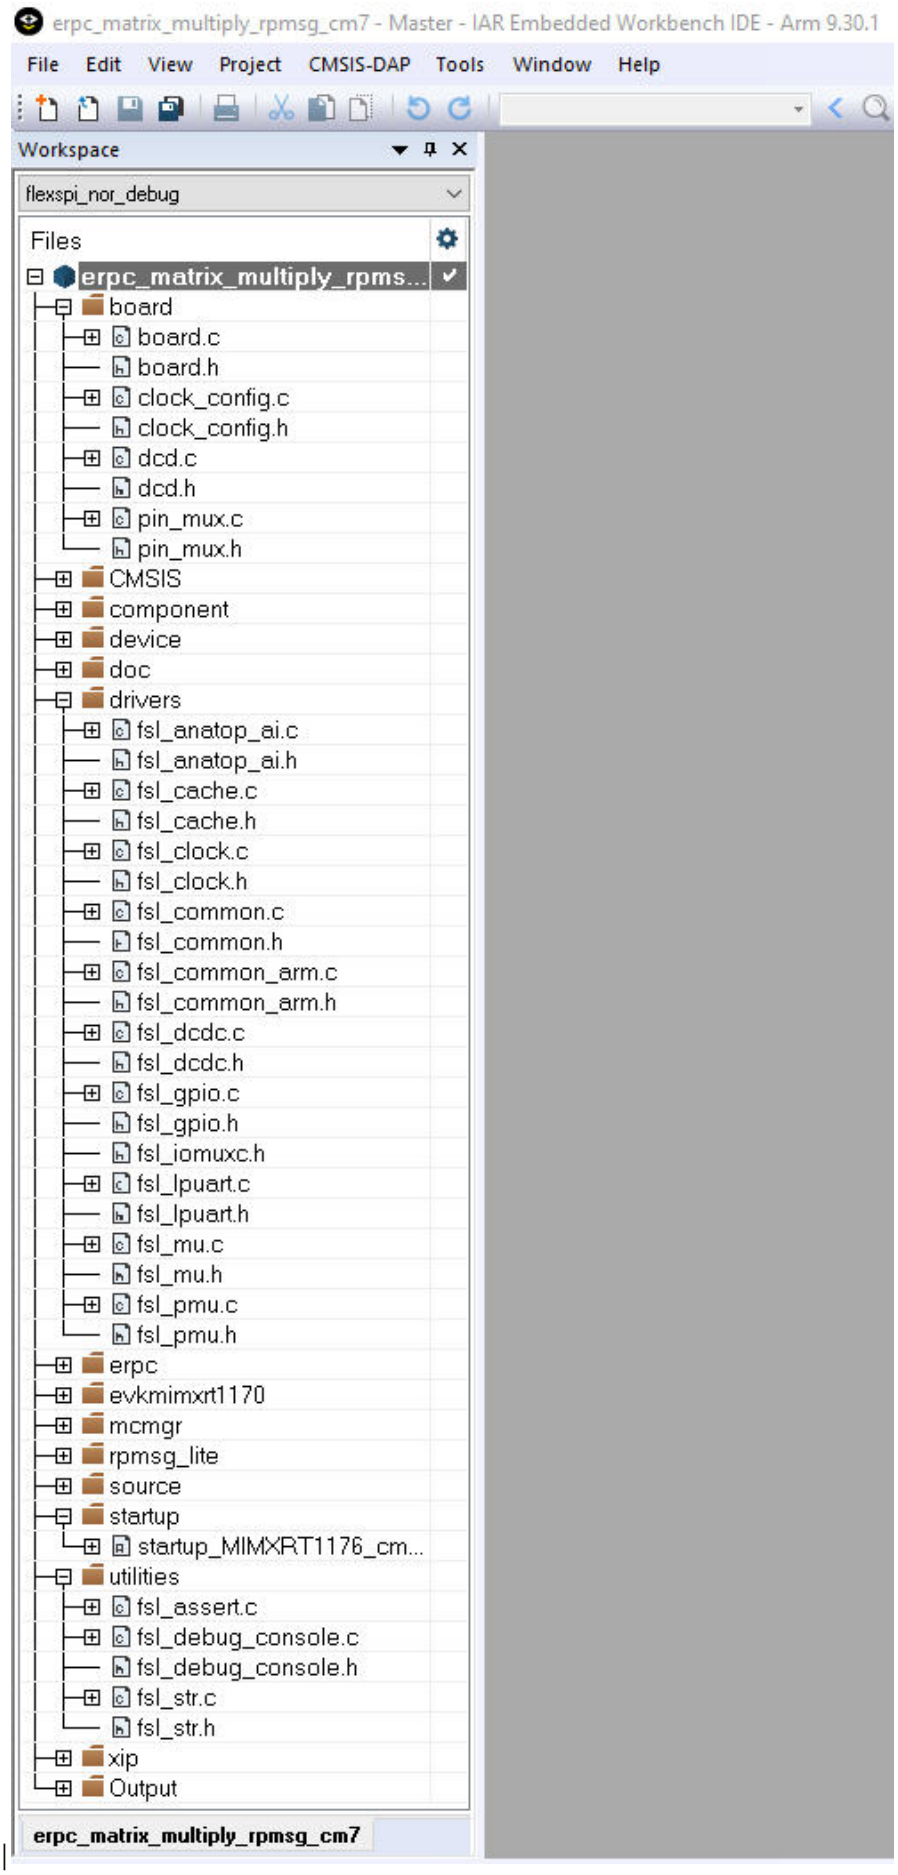
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpms...
board
board.c
board.h
clock_config.c
clock_config.h
dcd.c
dcd.h
pin_mux.c
pin_mux.h
CMSIS
component
device
doc
drivers
fsl_anatop_ai.c
fsl_anatop_ai.h
fsl_cache.c
fsl_cache.h
fsl_clock.c
fsl_clock.h
fsl_common.c
fsl_common.h
fsl_common_arm.c
fsl_common_arm.h
fsl_dcdc.c
fsl_dcdc.h
fsl_gpio.c
fsl_gpio.h
fsl_iomuxc.h
fsl_lpuart.c
fsl_lpuart.h
fsl_mu.c
fsl_mu.h
fsl_pmu.c
fsl_pmu.h
erpc
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
startup_MIMXRT1176_cm...
utilities
fsl_assert.c
fsl_debug_console.c
fsl_debug_console.h
fsl_str.c
fsl_str.h
xip
Output
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client-related generated files The client-related generated files are:

- erpc_matric_multiply.h
- erpc_matrix_multiply_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the *<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/* folder.

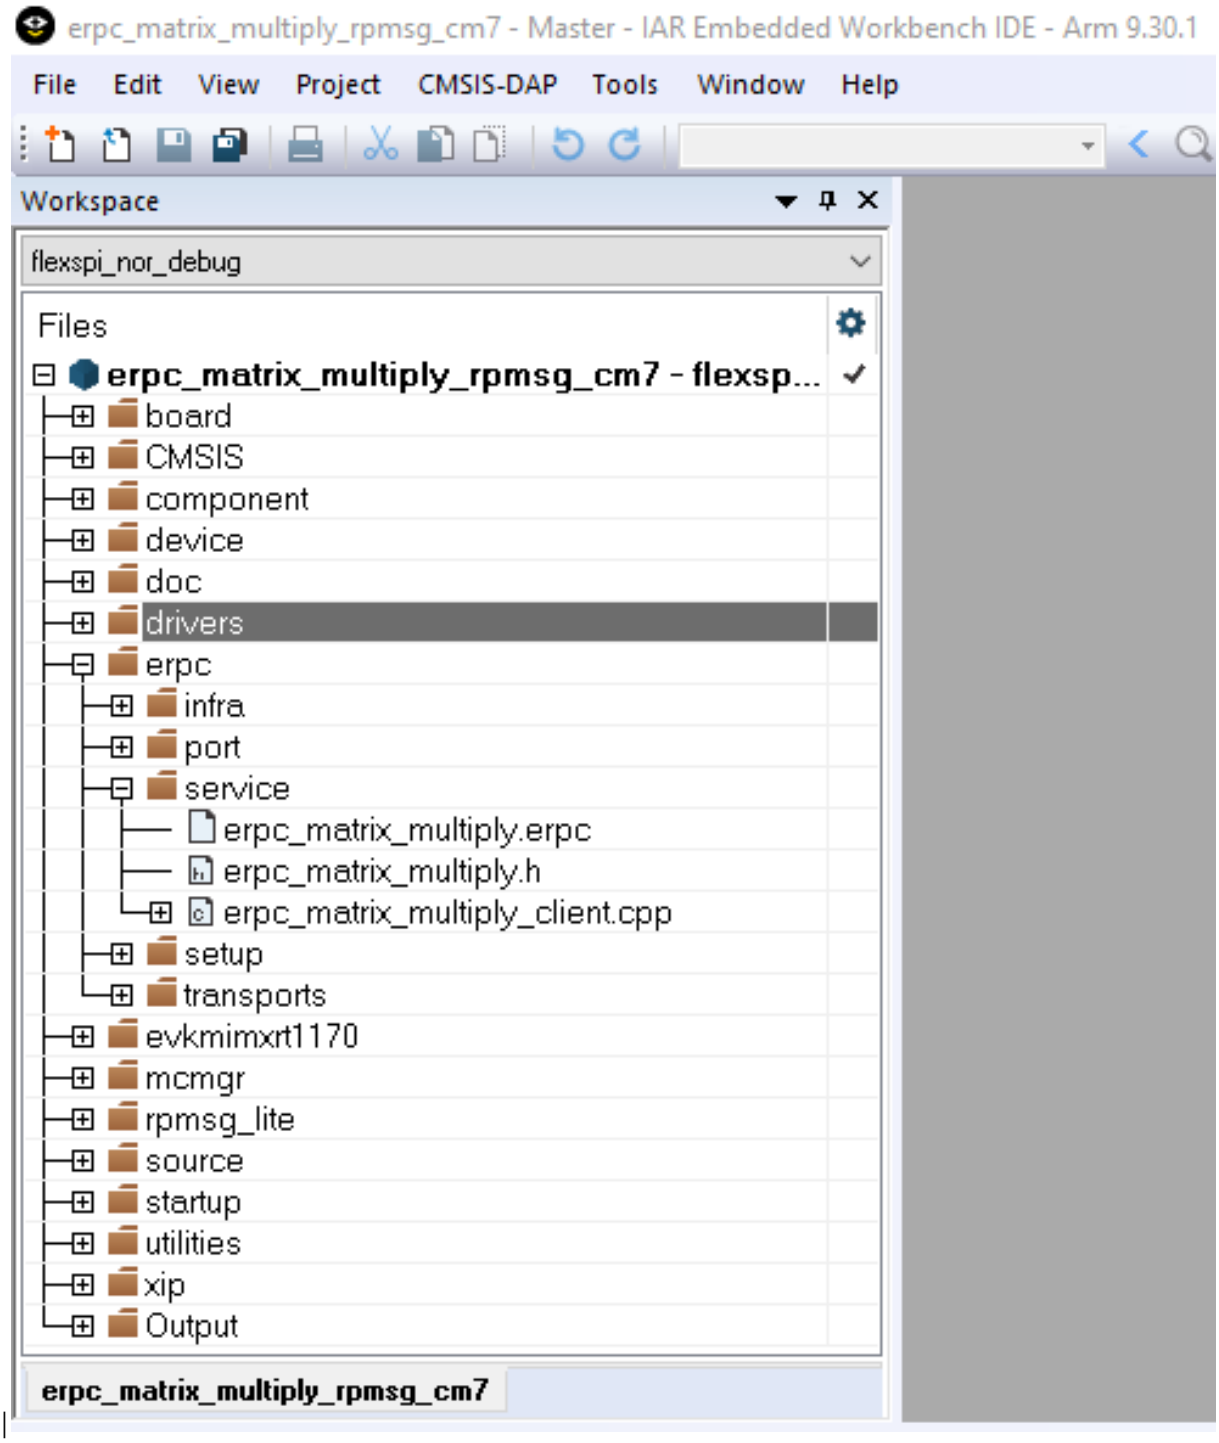

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, erpc_client_manager.h and erpc_client_manager.cpp, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (erpc_codec.hpp, erpc_basic_codec.hpp, and erpc_basic_codec.cpp) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- erpc_common.h file is used for common eRPC definitions, typedefs, and enums.
- erpc_manually_constructed.hpp file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: erpc_message_buffer.hpp and erpc_message_buffer.cpp.
- erpc_transport.hpp file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.

- erpc_port.h file contains definition of erpc_malloc() and erpc_free() functions.
- erpc_port_stdlib.cpp file ensures adaptation to stdlib.
- erpc_config_internal.h internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- erpc_client_setup.h and erpc_client_setup.cpp files needs to be added into the "Matrix multiply" example project to demonstrate the use of C-wrapped functions in this example.
- erpc_transport_setup.h and erpc_setup_rpmsg_lite_master.cpp files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- erpc_mbf_setup.h and erpc_setup_mbf_rpmsg.cpp files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, erpc_rpmsg_lite_base_transport.hpp, erpc_rpmsg_lite_transport.hpp, and erpc_rpmsg_lite_transport.cpp files needs to be added into the client project.

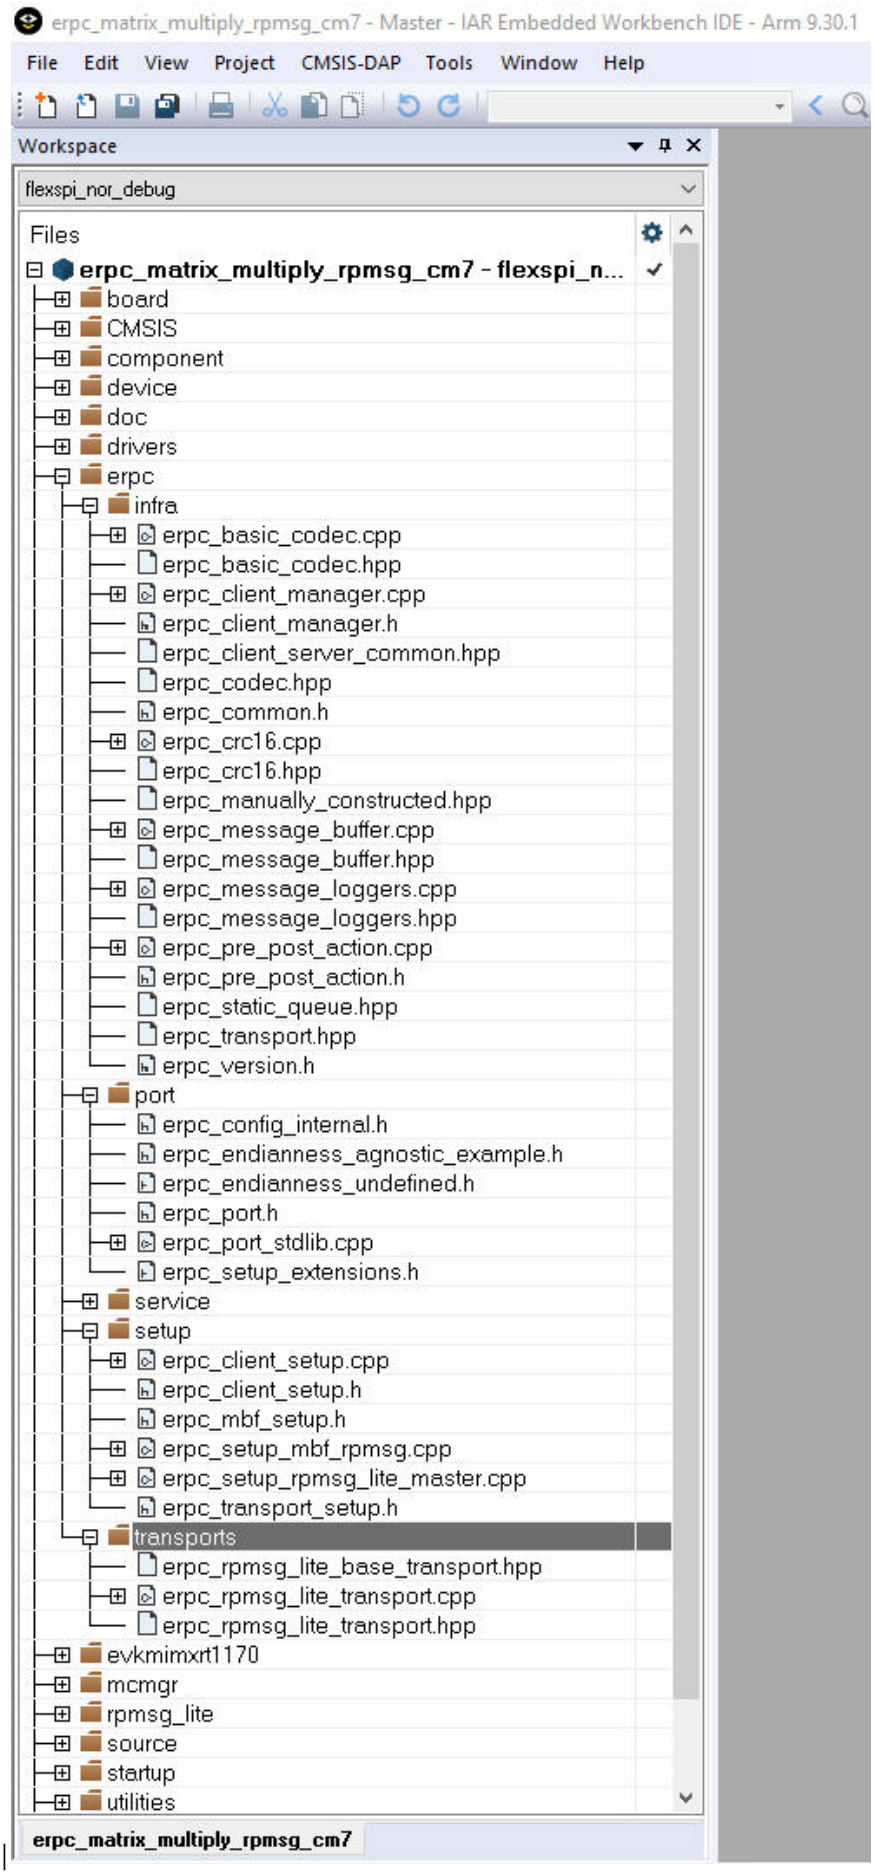
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpmsg_cm7 - flexspi_n...
board
CMSIS
component
device
doc
drivers
erpc
infra
erpc_basic_codec.cpp
erpc_basic_codec.hpp
erpc_client_manager.cpp
erpc_client_manager.h
erpc_client_server_common.hpp
erpc_codec.hpp
erpc_common.h
erpc_crc16.cpp
erpc_crc16.hpp
erpc_manually_constructed.hpp
erpc_message_buffer.cpp
erpc_message_buffer.hpp
erpc_message_loggers.cpp
erpc_message_loggers.hpp
erpc_pre_post_action.cpp
erpc_pre_post_action.h
erpc_static_queue.hpp
erpc_transport.hpp
erpc_version.h
port
erpc_config_internal.h
erpc_endianness_agnostic_example.h
erpc_endianness_undefined.h
erpc_port.h
erpc_port_stdlib.cpp
erpc_setup_extensions.h
service
setup
erpc_client_setup.cpp
erpc_client_setup.h
erpc_mbf_setup.h
erpc_setup_mbf_rpmsg.cpp
erpc_setup_rpmsg_lite_master.cpp
erpc_transport_setup.h
transports
erpc_rpmsg_lite_base_transport.hpp
erpc_rpmsg_lite_transport.cpp
erpc_rpmsg_lite_transport.hpp
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
utilities
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

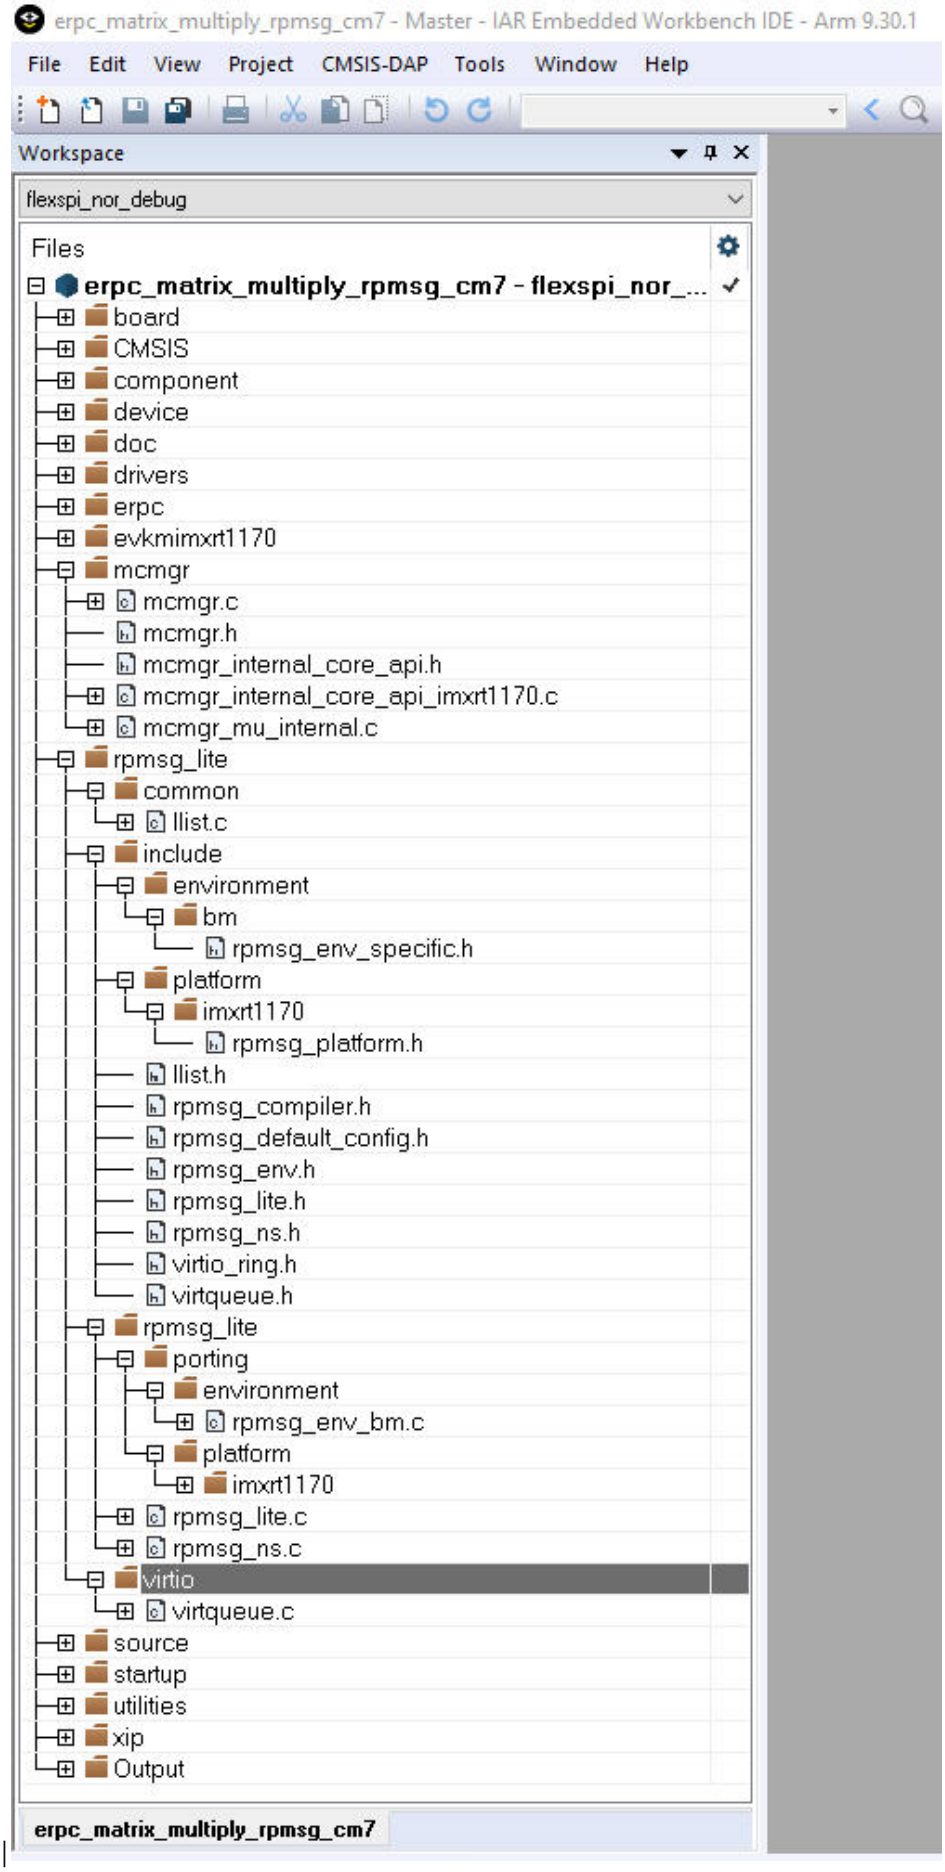
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpmsg_cm7 - flexspi_nor_...
board
CMSIS
component
device
doc
drivers
erpc
evkmimxrt1170
mcmgr
mcmgr.c
mcmgr.h
mcmgr_internal_core_api.h
mcmgr_internal_core_api_imxrt1170.c
mcmgr_mu_internal.c
rpmsg_lite
common
llist.c
include
environment
bm
rpmsg_env_specific.h
platform
imxrt1170
rpmsg_platform.h
llist.h
rpmsg_compiler.h
rpmsg_default_config.h
rpmsg_env.h
rpmsg_lite.h
rpmsg_ns.h
virtio_ring.h
virtqueue.h
rpmsg_lite
porting
environment
rpmsg_env_bm.c
platform
imxrt1170
rpmsg_lite.c
rpmsg_ns.c
virtio
virtqueue.c
source
startup
utilities
xip
Output
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.

The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
  /* Invoke the erpcMatrixMultiply function */
  erpcMatrixMultiply(matrix1, matrix2, result_matrix);
  ...
  /* Check if some error occured in eRPC */
  if (g_erpc_error_occurred)
  {
    /* Exit program loop */
    break;
  }
  ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

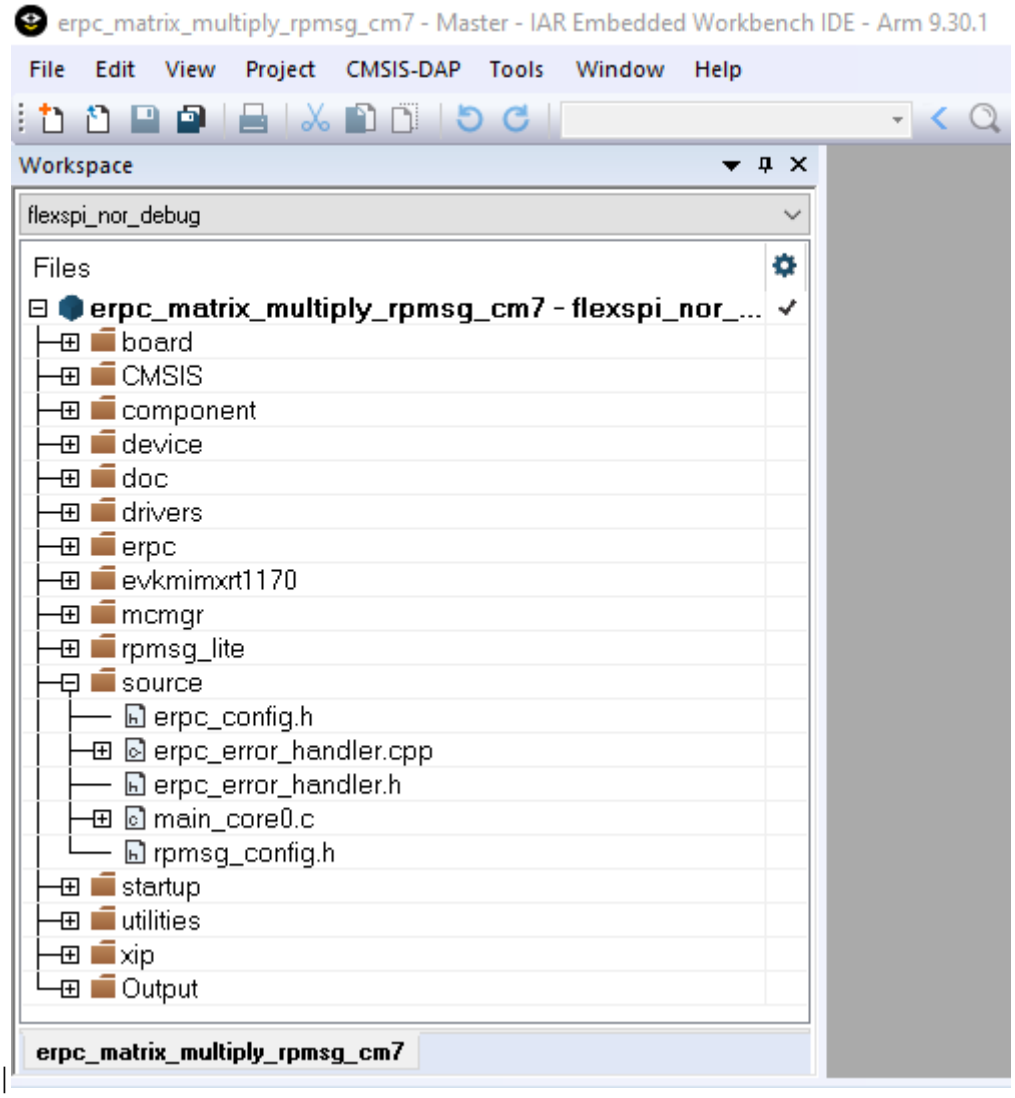

|

|

Parent topic: Multicore client application

Parent topic:*Create an eRPC application*

Multiprocessor server application The "Matrix multiply" eRPC server project for multiprocessor applications is located in the *<MCUXpressoSDK_install_dir»/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>* folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|SPI|<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp

<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp

| |UART|<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/* folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
  ...
}
int main()
{
  ...
  /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver␣
↪operations */
  erpc_transport_t transport;
  transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
  ...
  /* MessageBufferFactory initialization */
  erpc_mbf_t message_buffer_factory;
  message_buffer_factory = erpc_mbf_dynamic_init();
  ...
  /* eRPC server side initialization */
  erpc_server_t server;
  server = erpc_server_init(transport, message_buffer_factory);
  ...
  /* Adding the service to the server */
  erpc_service_t service = create_MatrixMultiplyService_service();
  erpc_add_service_to_server(server, service);
  ...
  while (1)
  {
    /* Process eRPC requests */
    erpc_status_t status = erpc_server_poll(server)
    /* handle error status */
    if (status != kErpcStatus_Success)
    {
      /* print error description */
      erpc_error_handler(status, 0);
      ...
    }
    ...
  }
}
```

Parent topic: Multiprocessor server application

Multiprocessor client application The "Matrix multiply" eRPC client project for multiprocessor applications is located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/* folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|SPI|<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp

<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp

<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp

| |UART|<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

|

Client user code The client's user code is stored in the main_client.c file, located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/* folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver␣
↪operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
  /* Invoke the erpcMatrixMultiply function */
  erpcMatrixMultiply(matrix1, matrix2, result_matrix);
  ...
  /* Check if some error occured in eRPC */
  if (g_erpc_error_occurred)
  {
    /* Exit program loop */
    break;
  }
  ...
}
```

Parent topic: Multiprocessor client application

Parent topic: Multiprocessor server application

Parent topic:*Create an eRPC application*

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the <*MCUXpressoSDK_install_dir*>/*docs* folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

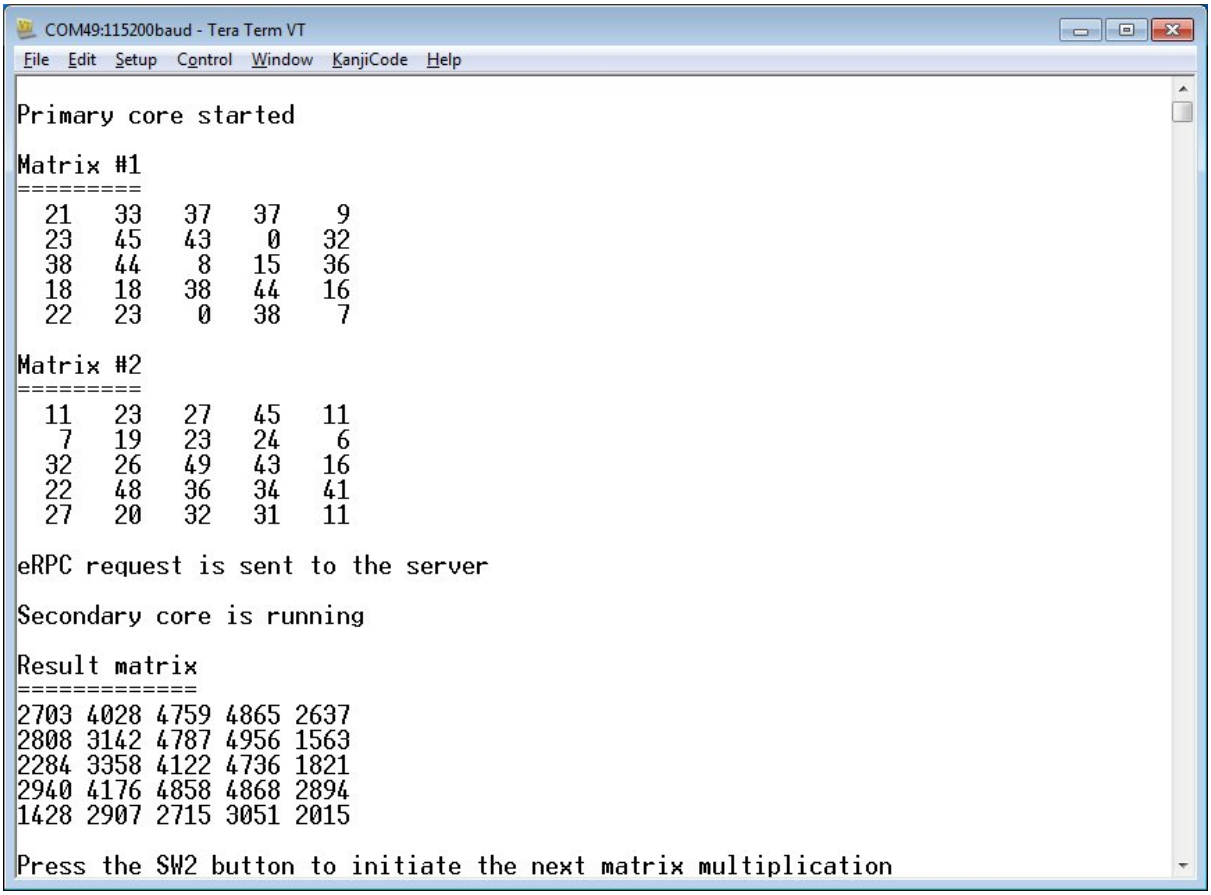

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:*Create an eRPC application*

Parent topic:*eRPC example*

eRPC example This section shows how to create an example eRPC application called “Matrix multiply”, which implements one eRPC function (matrix multiply) with two function parameters (two matrices). The client-side application calls this eRPC function, and the server side performs the multiplication of received matrices. The server side then returns the result.

For example, use the NXP MIMXRT1170-EVK board as the target dual-core platform, and the IAR Embedded Workbench for ARM (EWARM) as the target IDE for developing the eRPC example.

- The primary core (CM7) runs the eRPC client.
- The secondary core (CM4) runs the eRPC server.
- RPMsg-Lite (Remote Processor Messaging Lite) is used as the eRPC transport layer.

The “Matrix multiply” application can be also run in the multi-processor setup. In other words, the eRPC client running on one SoC comunicates with the eRPC server that runs on anothe SoC, utilizing different transport channels. It is possible to run the board-to-PC example (PC as the eRPC server and a board as the eRPC client, and vice versa) and also the board-to-board example. These multiprocessor examples are prepared for selected boards only.

|Multicore application source and project files|*<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore*
|Multiprocessor application source and project files|*<MCUXpressoSDK_install_dir>/boards/<board_name>/multi*

<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<tr

| |eRPC source files|*<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/*| |RPMsg-Lite source files|*<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/*|

Designing the eRPC application The matrix multiply application is based on calling single eRPC function that takes 2 two-dimensional arrays as input and returns matrix multiplication results as another 2 two-dimensional array. The IDL file syntax supports arrays with the dimension length set by the number only (in the current eRPC implementation). Because of this, a variable is declared in the IDL dedicated to store information about matrix dimension length, and to allow easy maintenance of the user and server code.

For a simple use of the two-dimensional array, the alias name (new type definition) for this data type has is declared in the IDL. Declaring this alias name ensures that the same data type can be used across the client and server applications.

Parent topic:*eRPC example*

Creating the IDL file The created IDL file is located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/s

The created IDL file contains the following code:

```
program erpc_matrix_multiply
/*! This const defines the matrix size. The value has to be the same as the
Matrix array dimension. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
const int32 matrix_size = 5;
/*! This is the matrix array type. The dimension has to be the same as the
matrix size const. Do not forget to re-generate the erpc code once the
matrix size is changed in the erpc file */
type Matrix = int32[matrix_size][matrix_size];
interface MatrixMultiplyService {
erpcMatrixMultiply(in Matrix matrix1, in Matrix matrix2, out Matrix result_matrix) ->
void
}
```

Details:

- The IDL file starts with the program name (*erpc_matrix_multiply*), and this program name is used in the naming of all generated outputs.
- The declaration and definition of the constant variable named *matrix_size* follows next. The *matrix_size* variable is used for passing information about the length of matrix dimensions to the client/server user code.
- The alias name for the two-dimensional array type (*Matrix*) is declared.
- The interface group *MatrixMultiplyService* is located at the end of the IDL file. This interface group contains only one function declaration *erpcMatrixMultiply*.
- As shown above, the function’s declaration contains three parameters of Matrix type: *matrix1* and *matrix2* are input parameters, while *result_matrix* is the output parameter. Additionally, the returned data type is declared as void.

When writing the IDL file, the following order of items is recommended:

1. Program name at the top of the IDL file.
2. New data types and constants declarations.
3. Declarations of interfaces and functions at the end of the IDL file.

Parent topic:*eRPC example*

Using the eRPC generator tool |Windows OS|<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erp
|Linux OS|<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x64

<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Linux_x86

| |Mac OS|<MCUXpressoSDK_install_dir>/middleware/multicore/tools/erpcgen/Mac|

The files for the "Matrix multiply" example are pre-generated and already a part of the application projects. The following section describes how they have been created.

- The easiest way to create the shim code is to copy the erpcgen application to the same folder where the IDL file (*.erpc) is located; then run the following command:

  erpcgen <IDL_file>.erpc

- In the "Matrix multiply" example, the command should look like:

  erpcgen erpc_matrix_multiply.erpc

Additionally, another method to create the shim code is to execute the eRPC application using input commands:

- "-?"/"—help" – Shows supported commands.
- "-o <filePath>"/"—output<filePath>" – Sets the output directory.

For example,

```
<path_to_erpcgen>/erpcgen –o <path_to_output>
<path_to_IDL>/<IDL_file_name>.erpc
```

For the "Matrix multiply" example, when the command is executed from the default erpcgen location, it looks like:

erpcgen –o

../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service
../../../../../boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/erpc_matrix_mu

In both cases, the following four files are generated into the *<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service folder.*

- erpc_matrix_multiply.h
- erpc_matrix_multiply_client.cpp
- erpc_matrix_multiply_server.h
- erpc_matrix_multiply_server.cpp

For multiprocessor examples, the eRPC file and pre-generated files can be found in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_common/erpc_matrix_multiply/serv* folder.

For Linux OS users:

- Do not forget to set the permissions for the eRPC generator application.
- Run the application as ./erpcgen... instead of as erpcgen ....

Parent topic:*eRPC example*

Create an eRPC application This section describes a generic way to create a client/server eRPC application:

1. **Design the eRPC application:** Decide which data types are sent between applications, and define functions that send/receive this data.
2. **Create the IDL file:** The IDL file contains information about data types and functions used in an eRPC application, and is written in the IDL language.
3. **Use the eRPC generator tool:** This tool takes an IDL file and generates the shim code for the client and the server-side applications.
4. **Create an eRPC application:**
    1. Create two projects, where one project is for the client side (primary core) and the other project is for the server side (secondary core).
    2. Add generated files for the client application to the client project, and add generated files for the server application to the server project.
    3. Add infrastructure files.
    4. Add user code for client and server applications.
    5. Set the client and server project options.
5. **Run the eRPC application:** Run both the server and the client applications. Make sure that the server has been run before the client request was sent.

A specific example follows in the next section.

Multicore server application The “Matrix multiply” eRPC server project is located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4/iar

The project files for the eRPC server have the `_cm4` suffix.

Server project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in:

- *<MCUXpressoSDK_install_dir>/devices/<device>*
- *<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/*

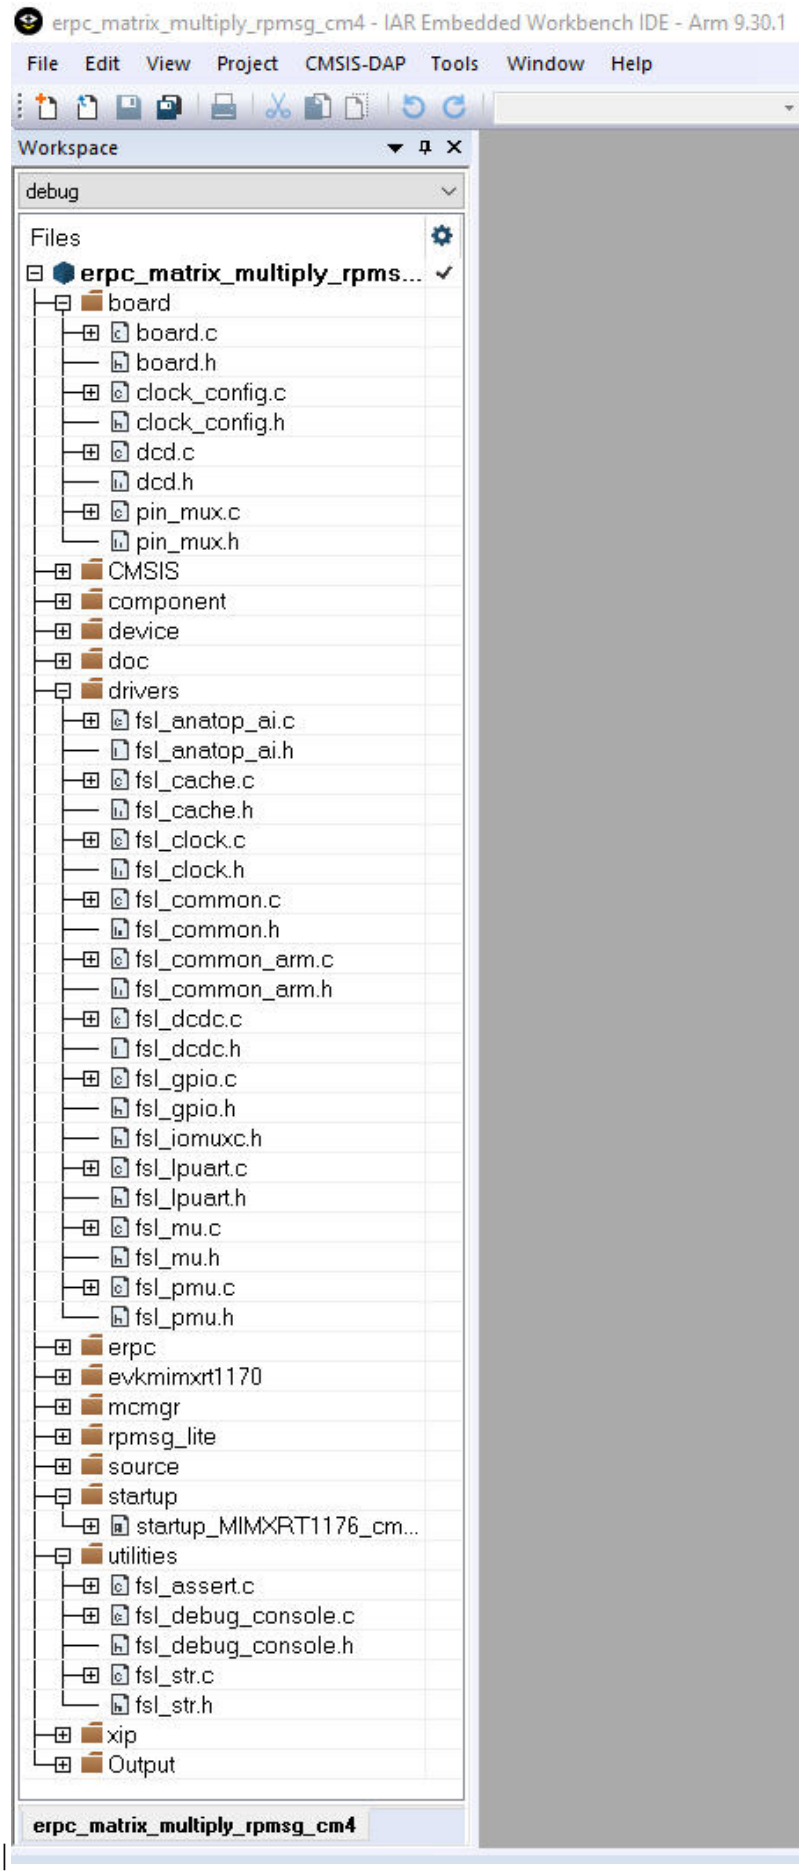
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpms...
board
board.c
board.h
clock_config.c
clock_config.h
dcd.c
dcd.h
pin_mux.c
pin_mux.h
CMSIS
component
device
doc
drivers
fsl_anatop_ai.c
fsl_anatop_ai.h
fsl_cache.c
fsl_cache.h
fsl_clock.c
fsl_clock.h
fsl_common.c
fsl_common.h
fsl_common_arm.c
fsl_common_arm.h
fsl_dcdc.c
fsl_dcdc.h
fsl_gpio.c
fsl_gpio.h
fsl_iomuxc.h
fsl_lpuart.c
fsl_lpuart.h
fsl_mu.c
fsl_mu.h
fsl_pmu.c
fsl_pmu.h
erpc
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
startup_MIMXRT1176_cm...
utilities
fsl_assert.c
fsl_debug_console.c
fsl_debug_console.h
fsl_str.c
fsl_str.h
xip
Output
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server related generated files The server-related generated files are:

- erpc_matric_multiply.h
- erpc_matrix_multiply_server.h
- erpc_matrix_multiply_server.cpp

The server-related generated files contain the shim code for functions and data types declared in the IDL file. These files also contain functions for the identification of client requested functions, data deserialization, calling requested function's implementations, and data serialization and return, if requested by the client. These shim code files can be found in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/s

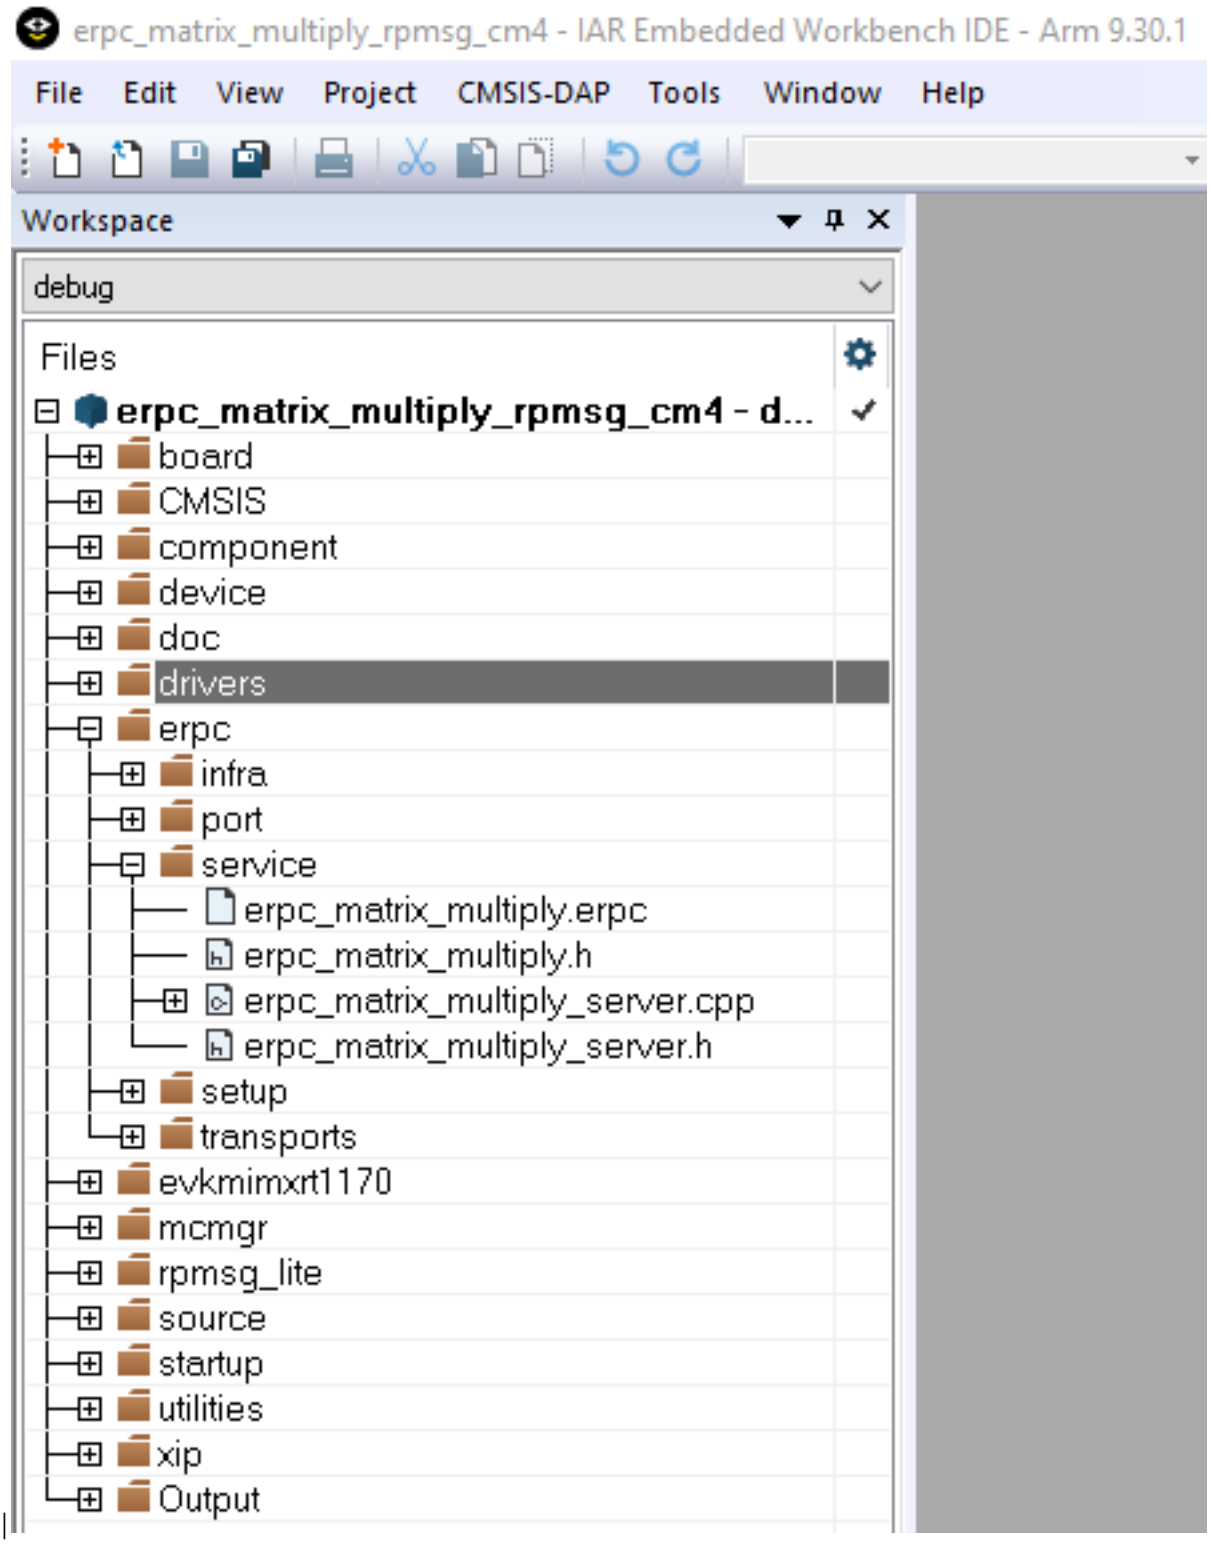

Parent topic: Multicore server application

Server infrastructure files The eRPC infrastructure files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c

The **erpc_c** folder contains files for creating eRPC client and server applications in the *C/C++* language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.
  - Four files, erpc_server.hpp, erpc_server.cpp, erpc_simple_server.hpp, and erpc_simple_server.cpp, are used for running the eRPC server on the server-side applications. The simple server is currently the only implementation of the server, and its role is to catch client requests, identify and call requested functions, and send data back when requested.
  - Three files (erpc_codec.hpp, erpc_basic_codec.hpp, and erpc_basic_codec.cpp) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
  - The erpc_common.hpp file is used for common eRPC definitions, typedefs, and enums.
  - The erpc_manually_constructed.hpp file is used for allocating static storage for the used objects.
  - Message buffer files are used for storing serialized data: erpc_message_buffer.h and erpc_message_buffer.cpp.
  - The erpc_transport.h file defines the abstract interface for transport layer.
- The **port** subfolder contains the eRPC porting layer to adapt to different environments.
  - erpc_port.h file contains definition of erpc_malloc() and erpc_free() functions.
  - erpc_port_stdlib.cpp file ensures adaptation to stdlib.
  - erpc_config_internal.h internal erpc configuration file.
- The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.
  - The erpc_server_setup.h and erpc_server_setup.cpp files needs to be added into the "Matrix multiply" example project to demonstrate the use of C-wrapped functions in this example.
  - The erpc_transport_setup.h and erpc_setup_rpmsg_lite_remote.cpp files needs to be added into the project in order to allow the C-wrapped function for transport layer setup.
  - The erpc_mbf_setup.h and erpc_setup_mbf_rpmsg.cpp files needs to be added into the project in order to allow message buffer factory usage.
- The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions in the setup folder.
  - RPMsg-Lite is used as the transport layer for the communication between cores, erpc_rpmsg_lite_base_transport.hpp, erpc_rpmsg_lite_transport.hpp, and erpc_rpmsg_lite_transport.cpp files need to be added into the server project.

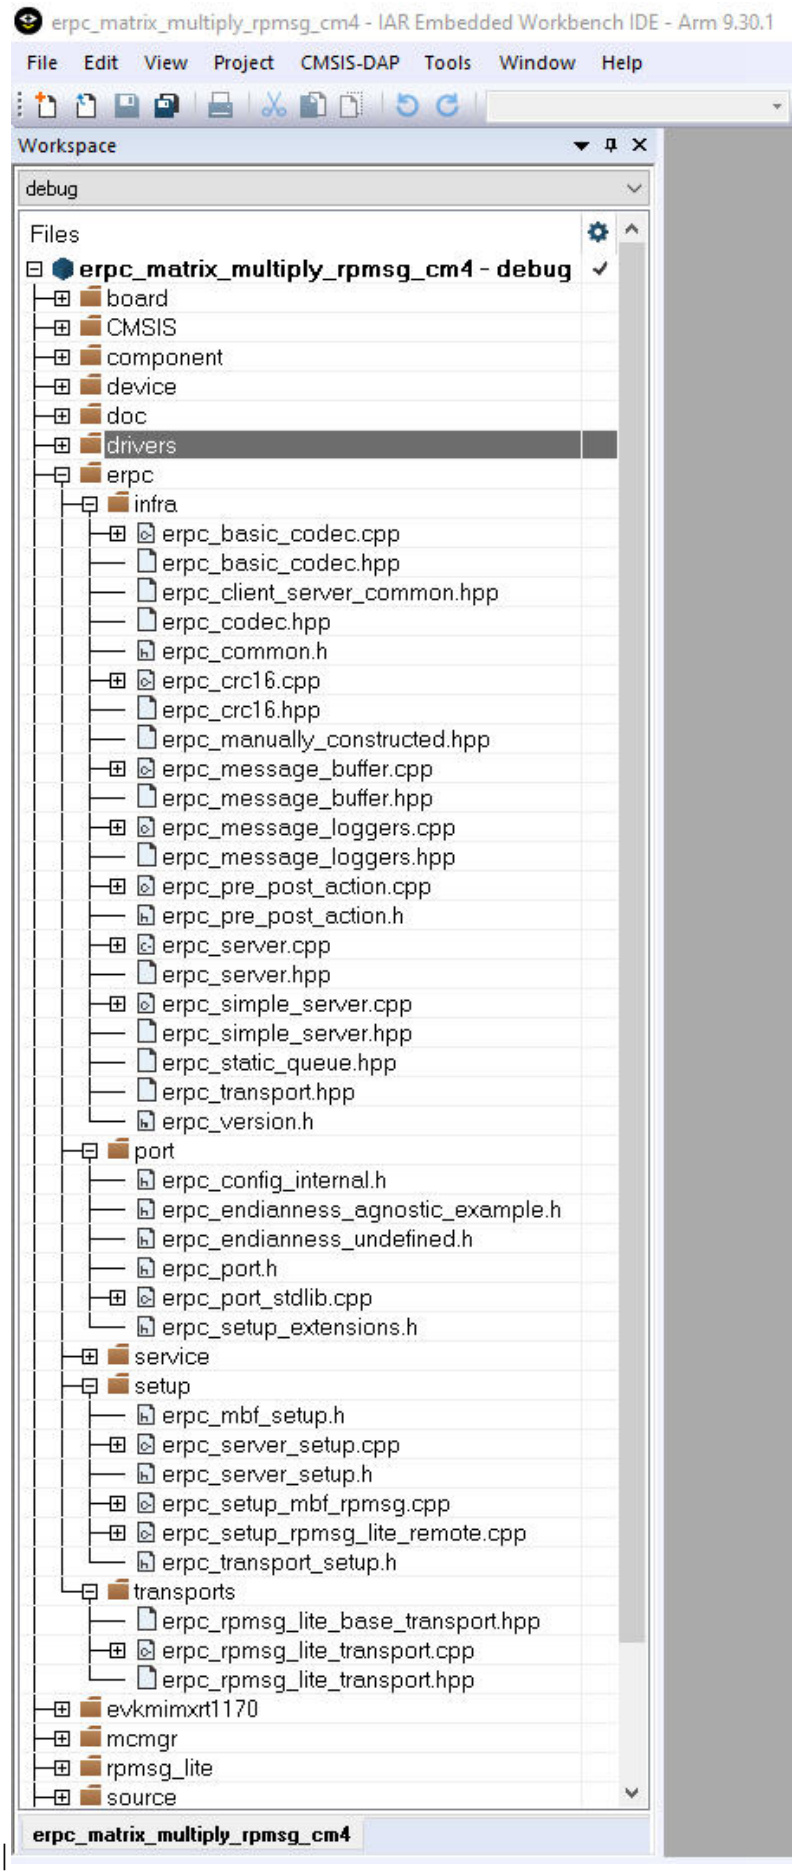
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpmsg_cm4 - debug
board
CMSIS
component
device
doc
drivers
erpc
infra
erpc_basic_codec.cpp
erpc_basic_codec.hpp
erpc_client_server_common.hpp
erpc_codec.hpp
erpc_common.h
erpc_crc16.cpp
erpc_crc16.hpp
erpc_manually_constructed.hpp
erpc_message_buffer.cpp
erpc_message_buffer.hpp
erpc_message_loggers.cpp
erpc_message_loggers.hpp
erpc_pre_post_action.cpp
erpc_pre_post_action.h
erpc_server.cpp
erpc_server.hpp
erpc_simple_server.cpp
erpc_simple_server.hpp
erpc_static_queue.hpp
erpc_transport.hpp
erpc_version.h
port
erpc_config_internal.h
erpc_endianness_agnostic_example.h
erpc_endianness_undefined.h
erpc_port.h
erpc_port_stdlib.cpp
erpc_setup_extensions.h
service
setup
erpc_mbf_setup.h
erpc_server_setup.cpp
erpc_server_setup.h
erpc_setup_mbf_rpmsg.cpp
erpc_setup_rpmsg_lite_remote.cpp
erpc_transport_setup.h
transports
erpc_rpmsg_lite_base_transport.hpp
erpc_rpmsg_lite_transport.cpp
erpc_rpmsg_lite_transport.hpp
evkmimxrt1170
mcmgr
rpmsg_lite
source
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

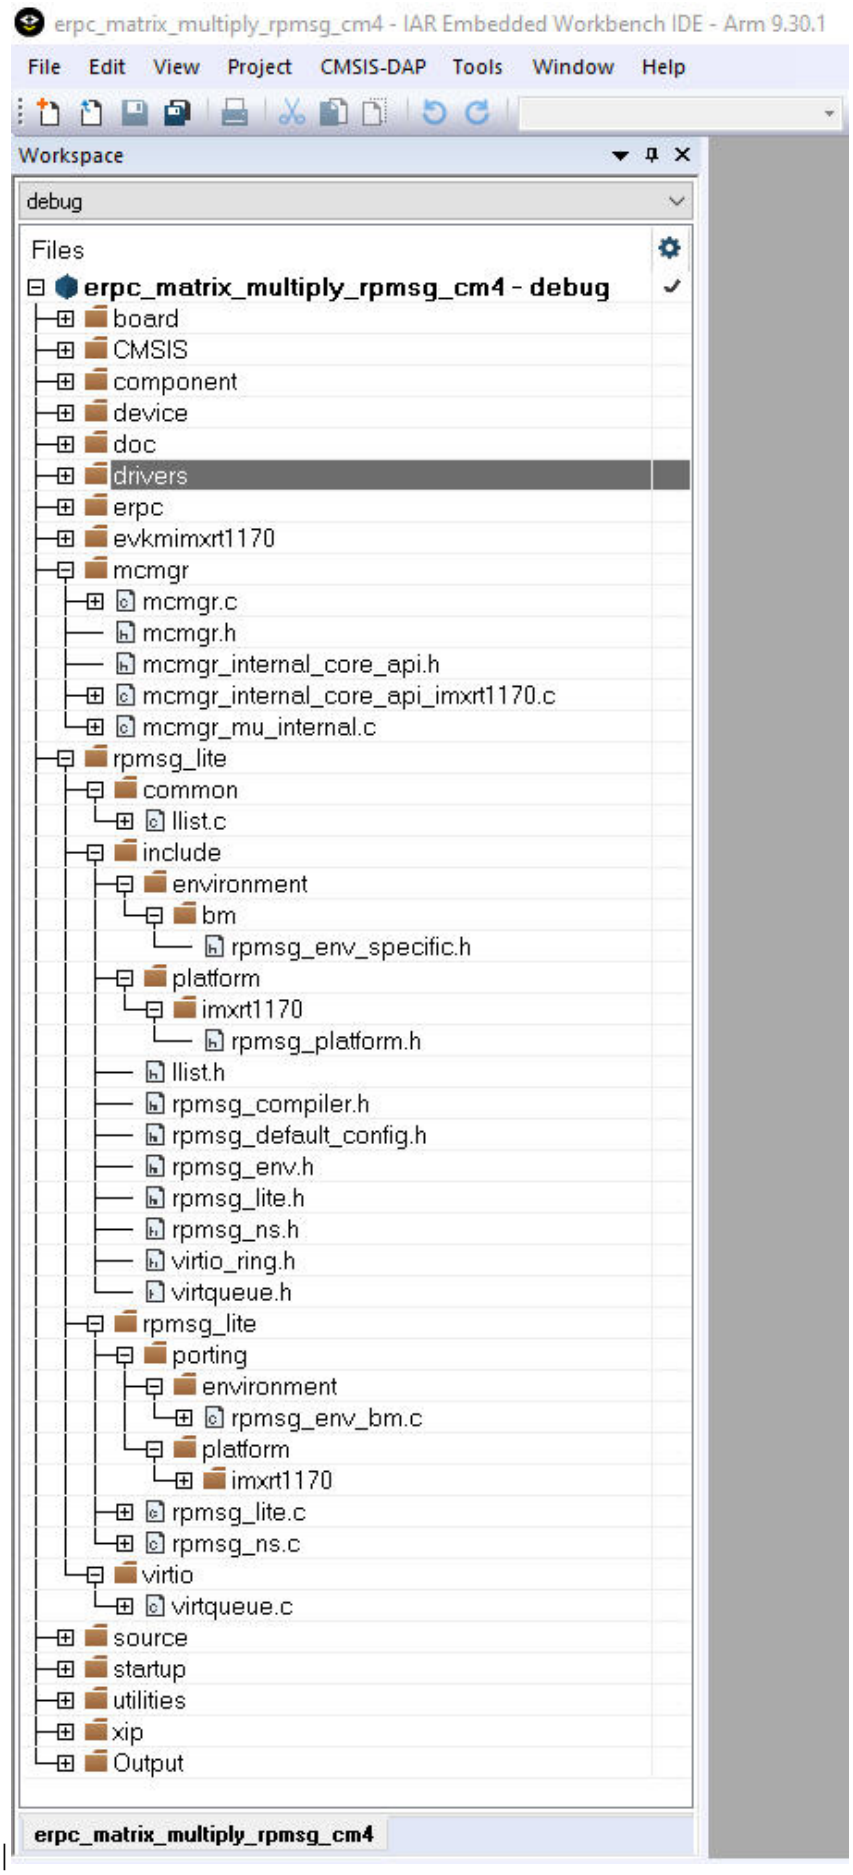
erpc_matrix_multiply_rpmsg_cm4 - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
debug
Files
erpc_matrix_multiply_rpmsg_cm4 - debug
board
CMSIS
component
device
doc
drivers
erpc
evkmimxrt1170
mcmgr
mcmgr.c
mcmgr.h
mcmgr_internal_core_api.h
mcmgr_internal_core_api_imxrt1170.c
mcmgr_mu_internal.c
rpmsg_lite
common
llist.c
include
environment
bm
rpmsg_env_specific.h
platform
imxrt1170
rpmsg_platform.h
llist.h
rpmsg_compiler.h
rpmsg_default_config.h
rpmsg_env.h
rpmsg_lite.h
rpmsg_ns.h
virtio_ring.h
virtqueue.h
rpmsg_lite
porting
environment
rpmsg_env_bm.c
platform
imxrt1170
rpmsg_lite.c
rpmsg_ns.c
virtio
virtqueue.c
source
startup
utilities
xip
Output
erpc_matrix_multiply_rpmsg_cm4

|

Parent topic: Multicore server application

Server user code The server's user code is stored in the main_core1.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm4

The main_core1.c file contains two functions:

- The **main()** function contains the code for the target board and eRPC server initialization. After the initialization, the matrix multiply service is added and the eRPC server waits for client's requests in the while loop.
- The **erpcMatrixMultiply()** function is the user implementation of the eRPC function defined in the IDL file.
- There is the possibility to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in the erpc_error_handler.h and erpc_error_handler.cpp files.

The eRPC-relevant code is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(const Matrix *matrix1, const Matrix *matrix2, Matrix *result_matrix)
{
  ...
}
int main()
{
  ...
  /* RPMsg-Lite transport layer initialization */
  erpc_transport_t transport;
  transport = erpc_transport_rpmsg_lite_remote_init(src, dst, (void*)startupData,
  ERPC_TRANSPORT_RPMSG_LITE_LINK_ID, SignalReady, NULL);
  ...
  /* MessageBufferFactory initialization */
  erpc_mbf_t message_buffer_factory;
  message_buffer_factory = erpc_mbf_rpmsg_init(transport);
  ...
  /* eRPC server side initialization */
  erpc_server_t server;
  server = erpc_server_init(transport, message_buffer_factory);
  ...
  /* Adding the service to the server */
  erpc_service_t service = create_MatrixMultiplyService_service();
  erpc_add_service_to_server(server, service);
  ...
  while (1)
  {
    /* Process eRPC requests */
    erpc_status_t status = erpc_server_poll(server);
    /* handle error status */
    if (status != kErpcStatus_Success)
    {
      /* print error description */
      erpc_error_handler(status, 0);
      ...
    }
    ...
  }
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the *<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg* folder.

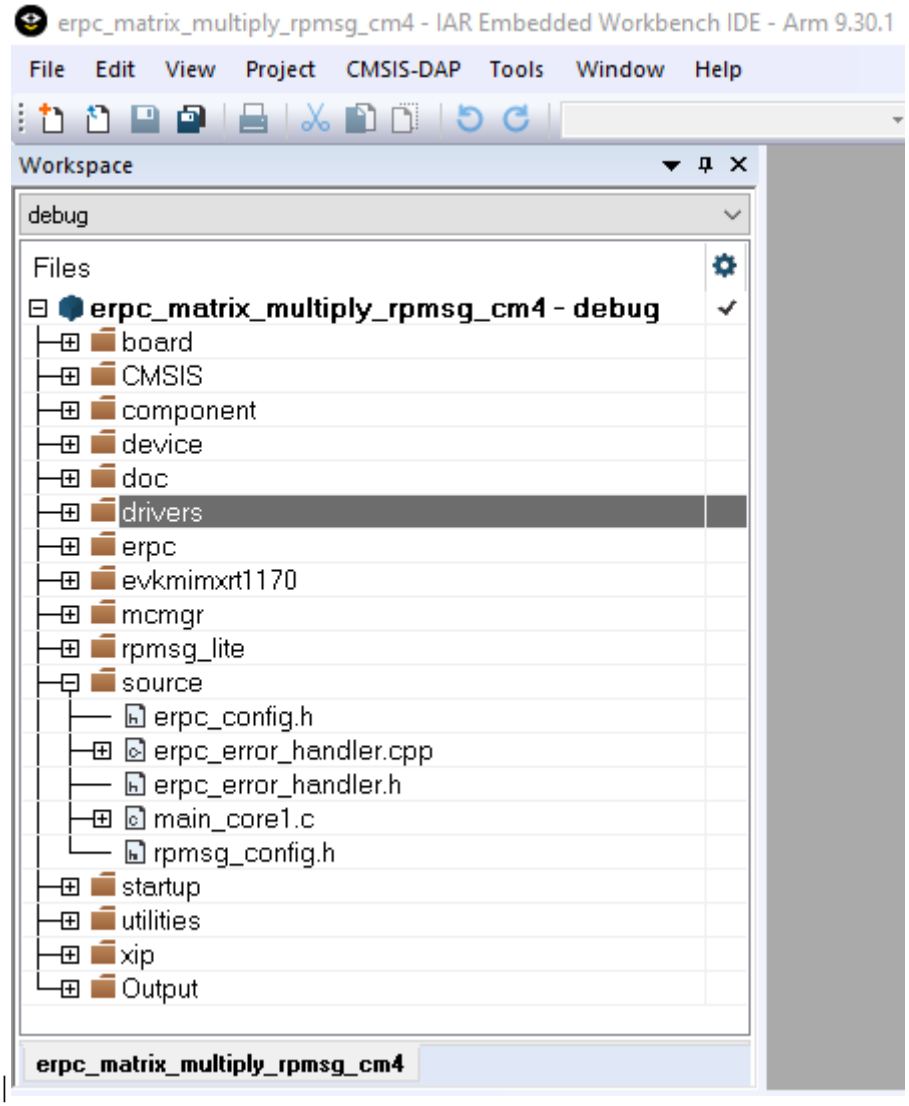

Parent topic: Multicore server application

Parent topic:*Create an eRPC application*

Multicore client application The "Matrix multiply" eRPC client project is located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg/cm7/iar

Project files for the eRPC client have the _cm7 suffix.

Client project basic source files The startup files, board-related settings, peripheral drivers, and utilities belong to the basic project source files and form the skeleton of all MCUXpresso SDK applications. These source files are located in the following folders:

- *<MCUXpressoSDK_install_dir>/devices/<device>*
- *<MCUXpressoSDK_install_dir>/boards/<board_name>/multicore_examples/<example_name>/*

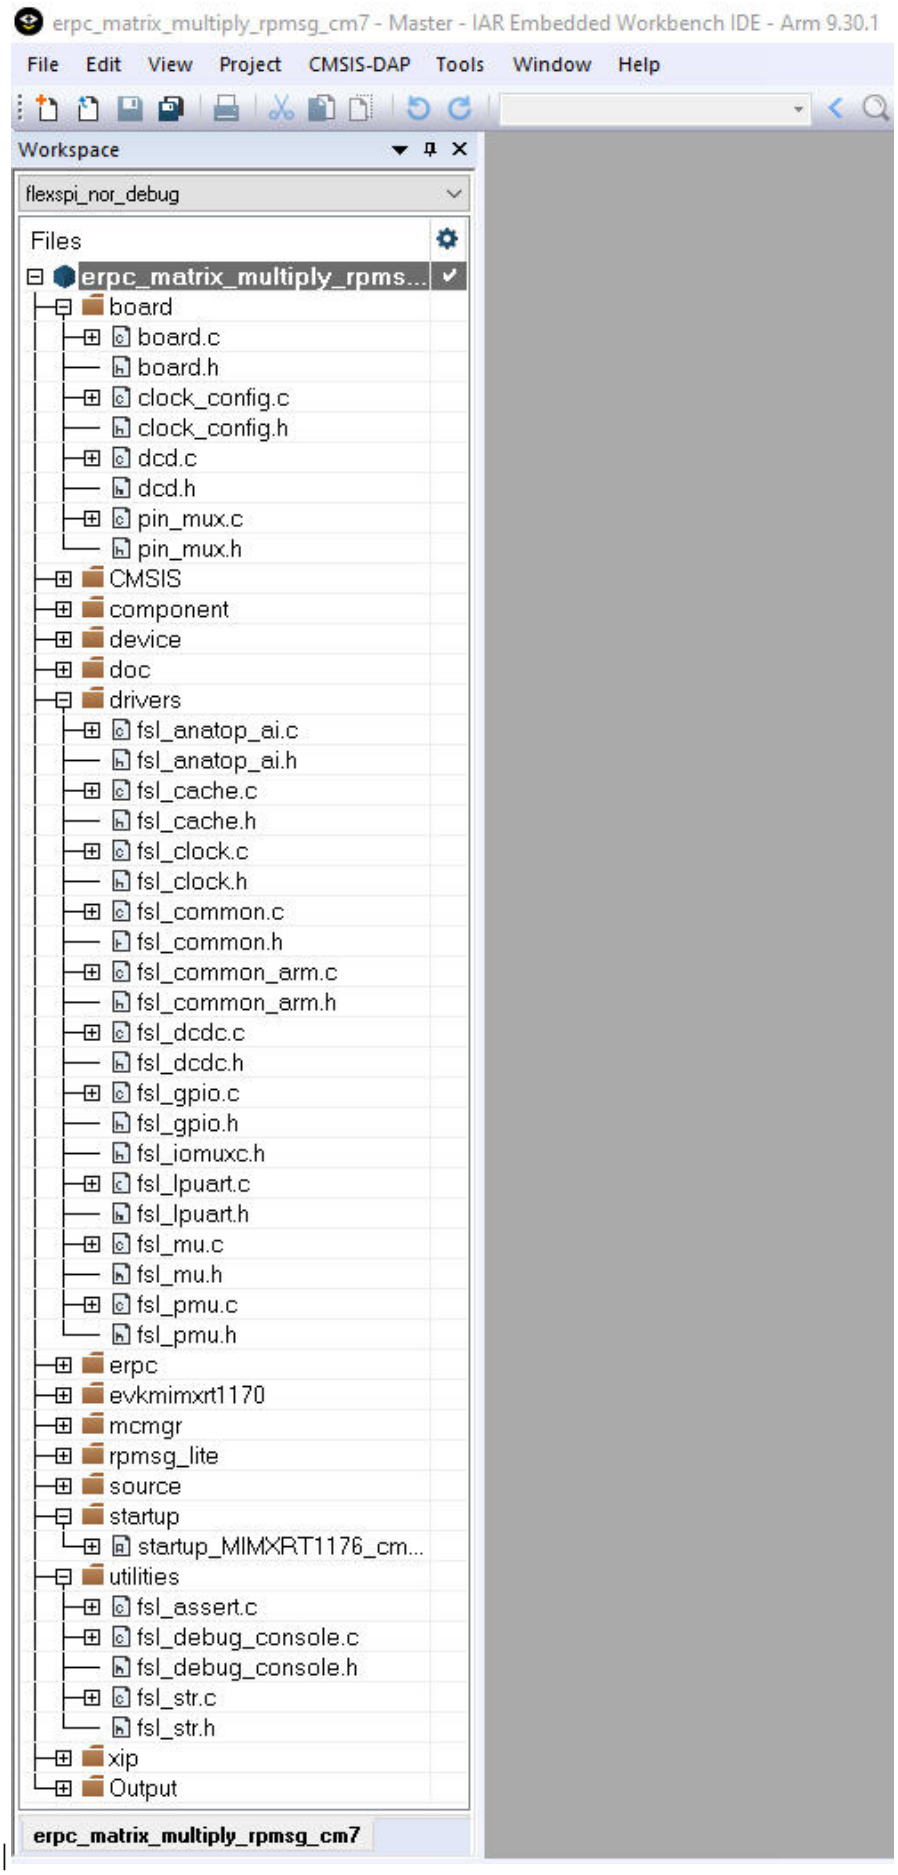
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpms...
board
board.c
board.h
clock_config.c
clock_config.h
dcd.c
dcd.h
pin_mux.c
pin_mux.h
CMSIS
component
device
doc
drivers
fsl_anatop_ai.c
fsl_anatop_ai.h
fsl_cache.c
fsl_cache.h
fsl_clock.c
fsl_clock.h
fsl_common.c
fsl_common.h
fsl_common_arm.c
fsl_common_arm.h
fsl_dcdc.c
fsl_dcdc.h
fsl_gpio.c
fsl_gpio.h
fsl_iomuxc.h
fsl_lpuart.c
fsl_lpuart.h
fsl_mu.c
fsl_mu.h
fsl_pmu.c
fsl_pmu.h
erpc
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
startup_MIMXRT1176_cm...
utilities
fsl_assert.c
fsl_debug_console.c
fsl_debug_console.h
fsl_str.c
fsl_str.h
xip
Output
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client-related generated files The client-related generated files are:

- erpc_matric_multiply.h
- erpc_matrix_multiply_client.cpp

These files contain the shim code for the functions and data types declared in the IDL file. These functions also call methods for codec initialization, data serialization, performing eRPC requests, and de-serializing outputs into expected data structures (if return values are expected). These shim code files can be found in the *<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_common/erpc_matrix_multiply/service/* folder.

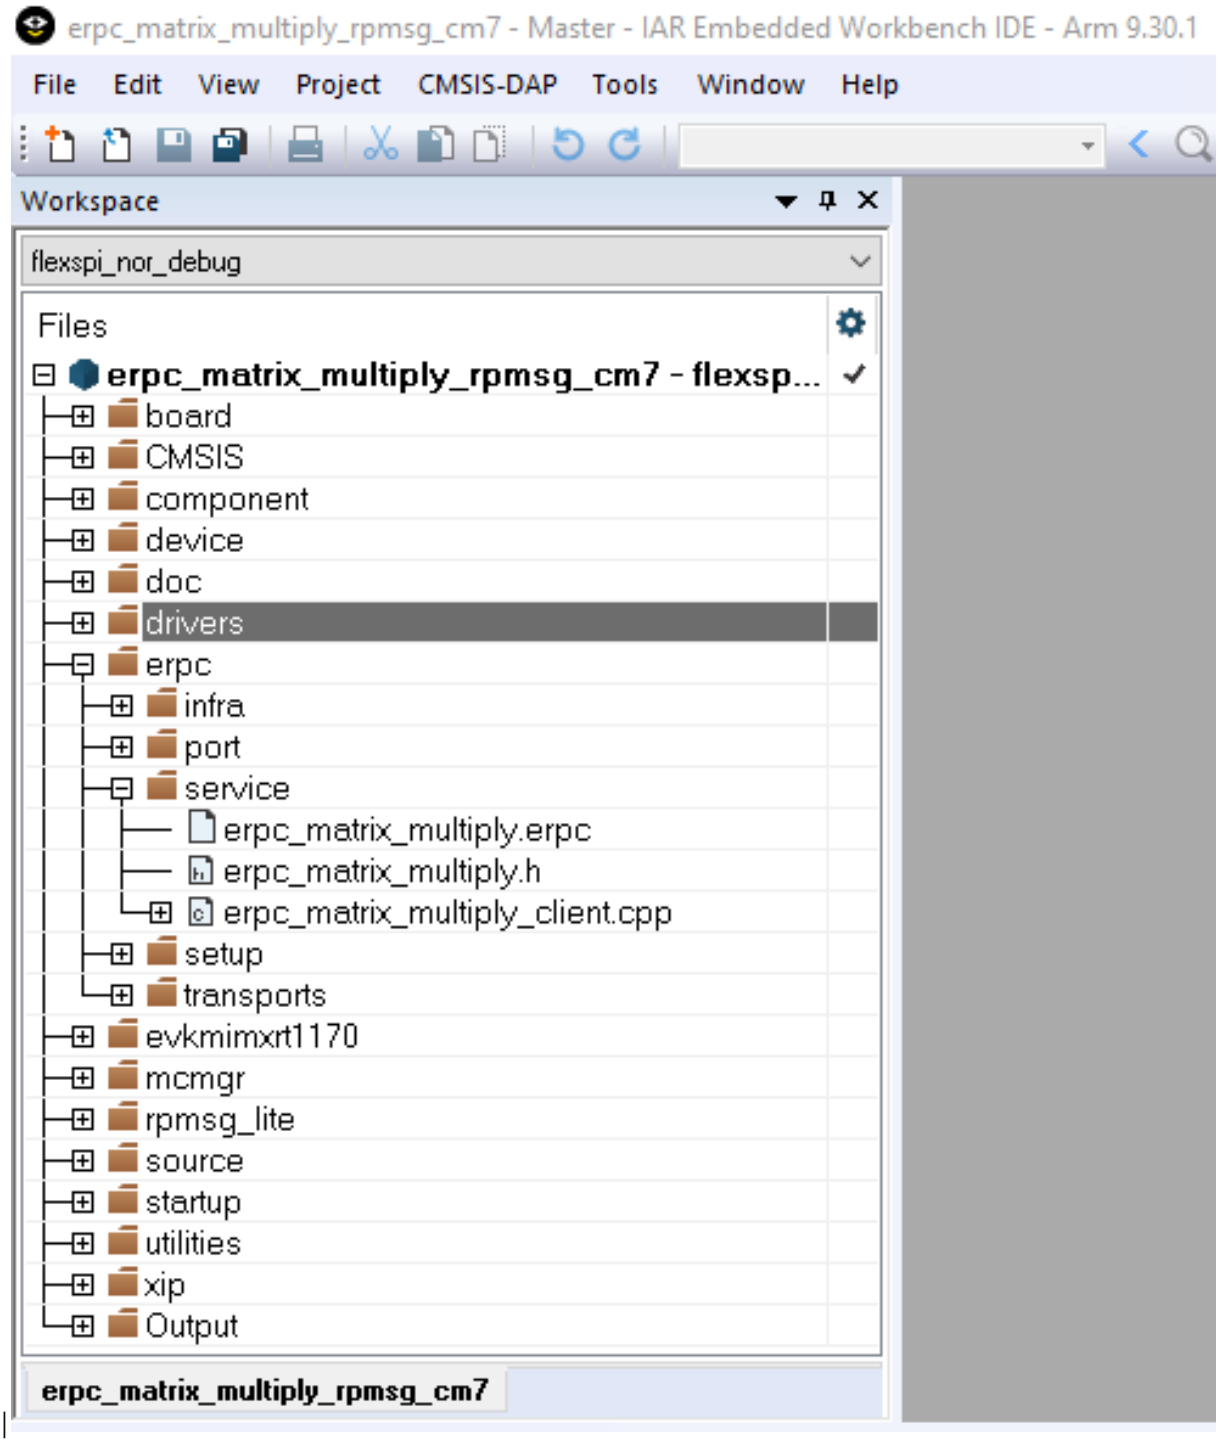

Parent topic: Multicore client application

Client infrastructure files The eRPC infrastructure files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/erpc/erpc_c

The **erpc_c** folder contains files for creating eRPC client and server applications in the C/C++ language. These files are distributed into subfolders.

- The **infra** subfolder contains C++ infrastructure code used to build server and client applications.

- Two files, erpc_client_manager.h and erpc_client_manager.cpp, are used for managing the client-side application. The main purpose of the client files is to create, perform, and release eRPC requests.
- Three files (erpc_codec.hpp, erpc_basic_codec.hpp, and erpc_basic_codec.cpp) are used for codecs. Currently, the basic codec is the initial and only implementation of the codecs.
- erpc_common.h file is used for common eRPC definitions, typedefs, and enums.
- erpc_manually_constructed.hpp file is used for allocating static storage for the used objects.
- Message buffer files are used for storing serialized data: erpc_message_buffer.hpp and erpc_message_buffer.cpp.
- erpc_transport.hpp file defines the abstract interface for transport layer.

The **port** subfolder contains the eRPC porting layer to adapt to different environments.

- erpc_port.h file contains definition of erpc_malloc() and erpc_free() functions.
- erpc_port_stdlib.cpp file ensures adaptation to stdlib.
- erpc_config_internal.h internal eRPC configuration file.

The **setup** subfolder contains a set of plain C APIs that wrap the C++ infrastructure, providing client and server init and deinit routines that greatly simplify eRPC usage in C-based projects. No knowledge of C++ is required to use these APIs.

- erpc_client_setup.h and erpc_client_setup.cpp files needs to be added into the "Matrix multiply" example project to demonstrate the use of C-wrapped functions in this example.
- erpc_transport_setup.h and erpc_setup_rpmsg_lite_master.cpp files needs to be added into the project in order to allow C-wrapped function for transport layer setup.
- erpc_mbf_setup.h and erpc_setup_mbf_rpmsg.cpp files needs to be added into the project in order to allow message buffer factory usage.

The **transports** subfolder contains transport classes for the different methods of communication supported by eRPC. Some transports are applicable only to host PCs, while others are applicable only to embedded or multicore systems. Most transports have corresponding client and server setup functions, in the setup folder.

- RPMsg-Lite is used as the transport layer for the communication between cores, erpc_rpmsg_lite_base_transport.hpp, erpc_rpmsg_lite_transport.hpp, and erpc_rpmsg_lite_transport.cpp files needs to be added into the client project.

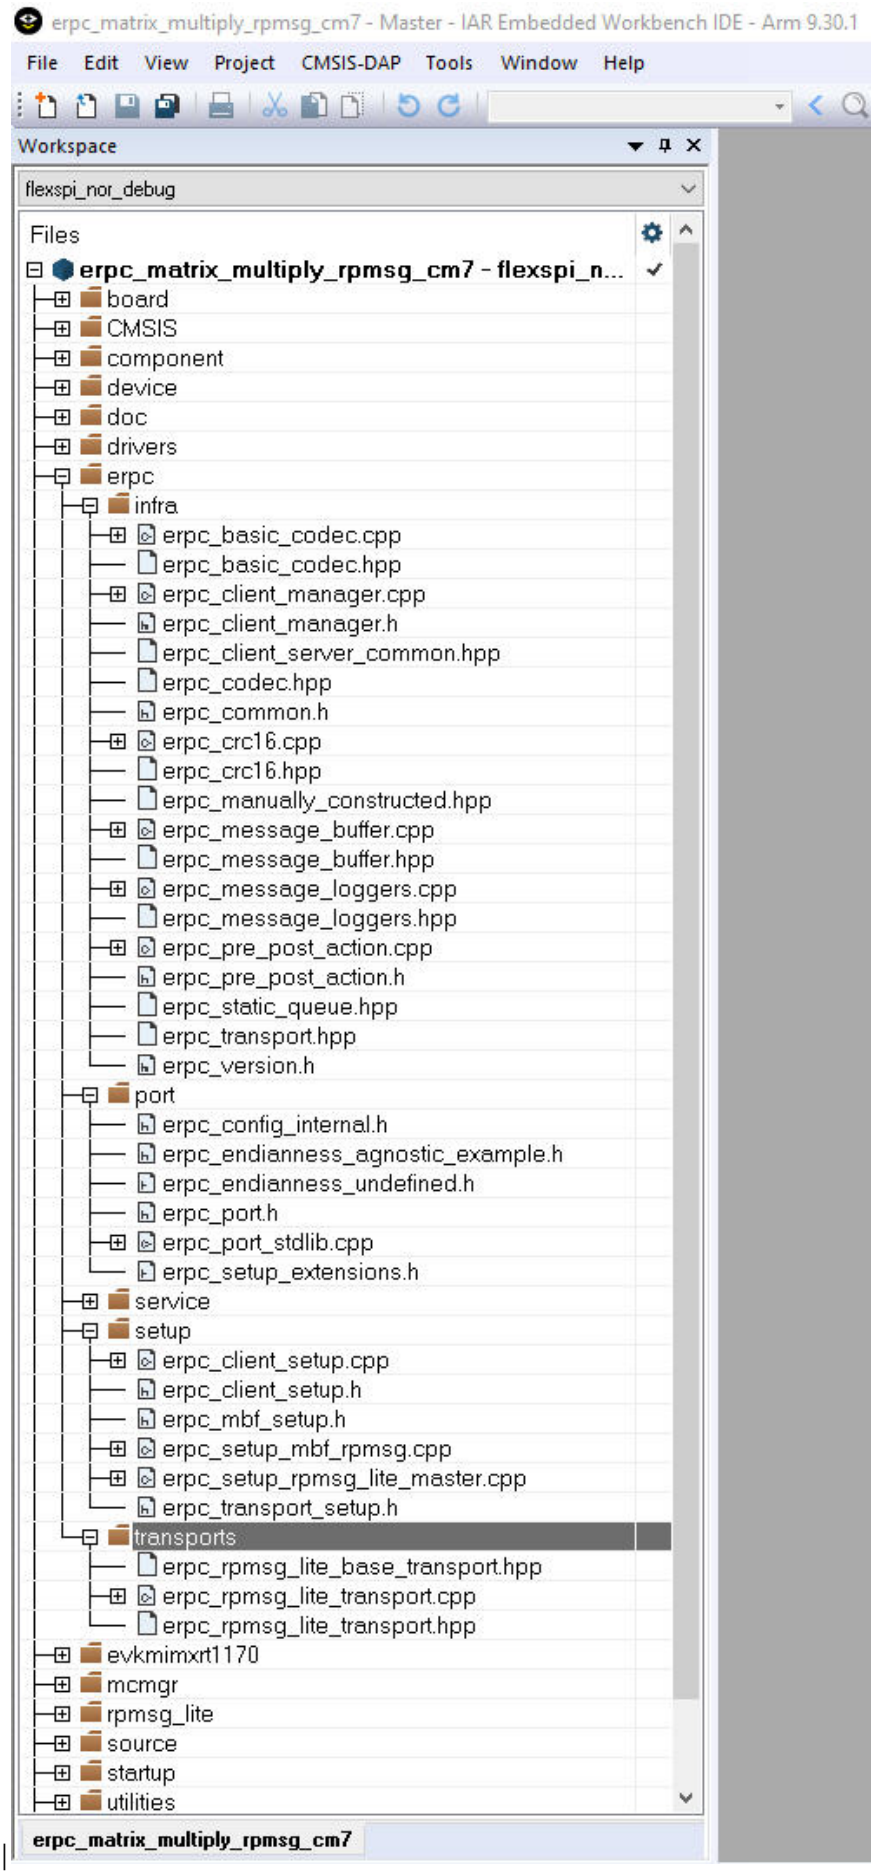
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpmsg_cm7 - flexspi_n...
board
CMSIS
component
device
doc
drivers
erpc
infra
erpc_basic_codec.cpp
erpc_basic_codec.hpp
erpc_client_manager.cpp
erpc_client_manager.h
erpc_client_server_common.hpp
erpc_codec.hpp
erpc_common.h
erpc_crc16.cpp
erpc_crc16.hpp
erpc_manually_constructed.hpp
erpc_message_buffer.cpp
erpc_message_buffer.hpp
erpc_message_loggers.cpp
erpc_message_loggers.hpp
erpc_pre_post_action.cpp
erpc_pre_post_action.h
erpc_static_queue.hpp
erpc_transport.hpp
erpc_version.h
port
erpc_config_internal.h
erpc_endianness_agnostic_example.h
erpc_endianness_undefined.h
erpc_port.h
erpc_port_stdlib.cpp
erpc_setup_extensions.h
service
setup
erpc_client_setup.cpp
erpc_client_setup.h
erpc_mbf_setup.h
erpc_setup_mbf_rpmsg.cpp
erpc_setup_rpmsg_lite_master.cpp
erpc_transport_setup.h
transports
erpc_rpmsg_lite_base_transport.hpp
erpc_rpmsg_lite_transport.cpp
erpc_rpmsg_lite_transport.hpp
evkmimxrt1170
mcmgr
rpmsg_lite
source
startup
utilities
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client multicore infrastructure files Because of the RPMsg-Lite (transport layer), it is also necessary to include RPMsg-Lite related files, which are in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/rpmsg_lite/

The multicore example applications also use the Multicore Manager software library to control the secondary core startup and shutdown. These source files are located in the following folder:

<MCUXpressoSDK_install_dir>/middleware/multicore/mcmgr/

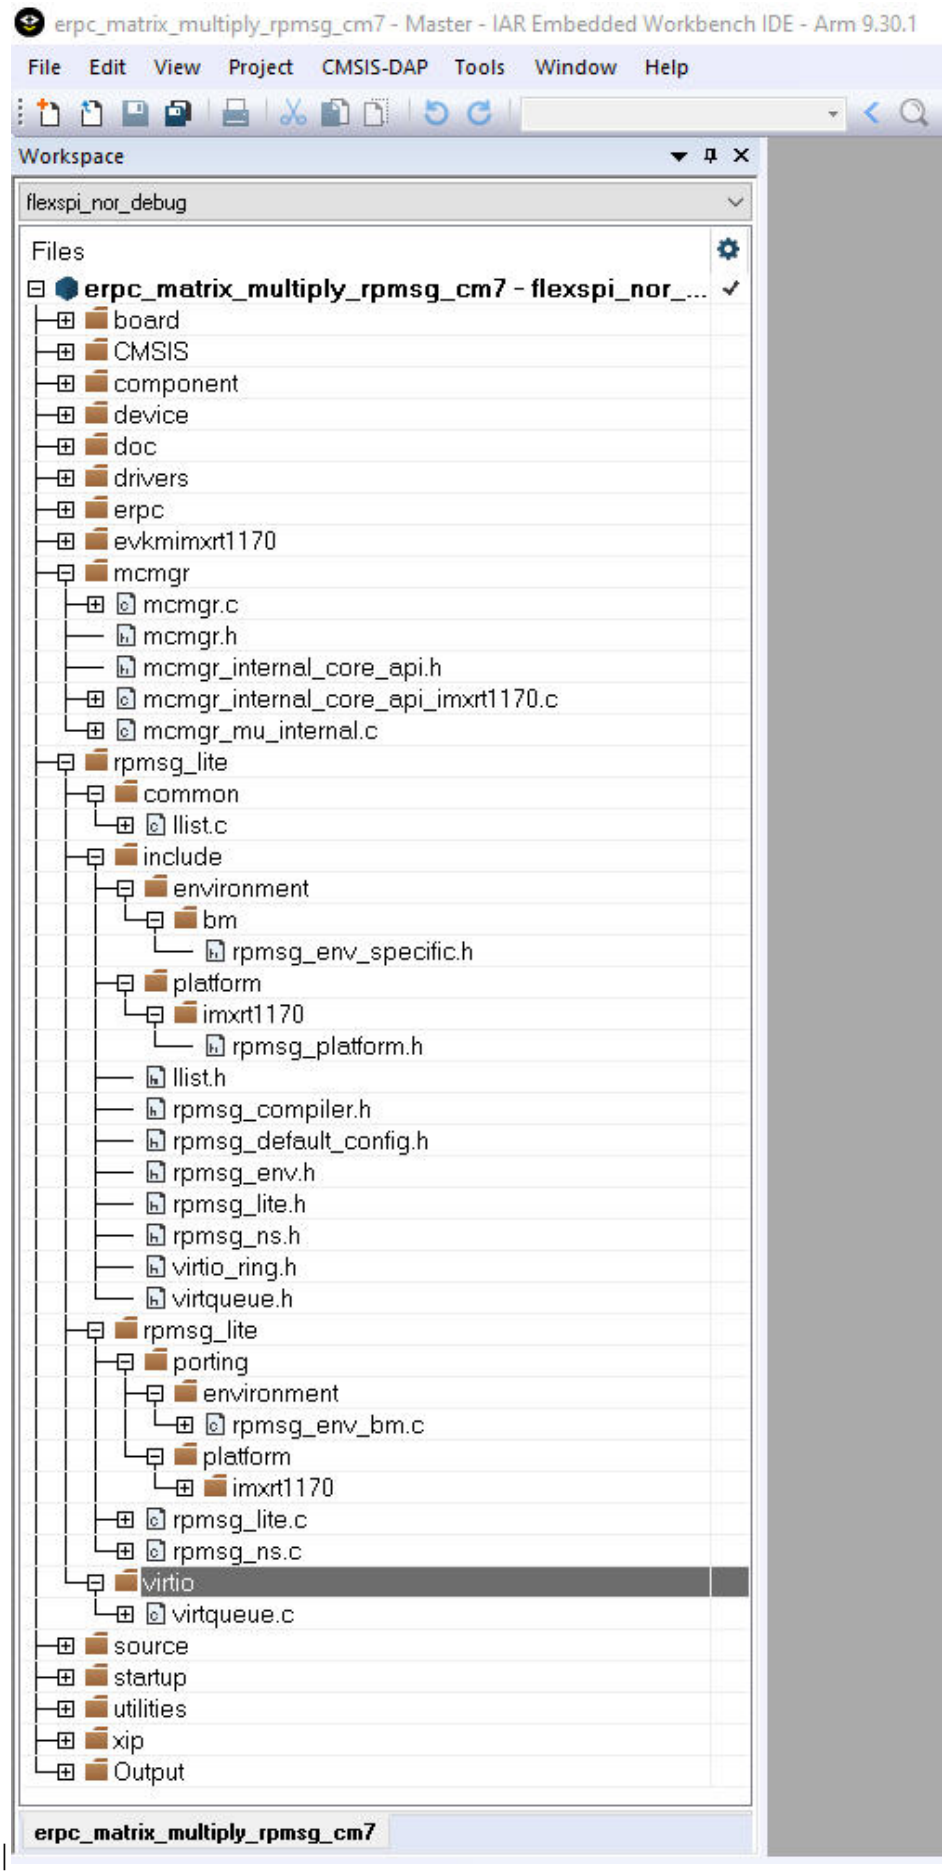
erpc_matrix_multiply_rpmsg_cm7 - Master - IAR Embedded Workbench IDE - Arm 9.30.1
File Edit View Project CMSIS-DAP Tools Window Help
Workspace
flexspi_nor_debug
Files
erpc_matrix_multiply_rpmsg_cm7 - flexspi_nor_...
board
CMSIS
component
device
doc
drivers
erpc
evkmimxrt1170
mcmgr
mcmgr.c
mcmgr.h
mcmgr_internal_core_api.h
mcmgr_internal_core_api_imxrt1170.c
mcmgr_mu_internal.c
rpmsg_lite
common
llist.c
include
environment
bm
rpmsg_env_specific.h
platform
imxrt1170
rpmsg_platform.h
llist.h
rpmsg_compiler.h
rpmsg_default_config.h
rpmsg_env.h
rpmsg_lite.h
rpmsg_ns.h
virtio_ring.h
virtqueue.h
rpmsg_lite
porting
environment
rpmsg_env_bm.c
platform
imxrt1170
rpmsg_lite.c
rpmsg_ns.c
virtio
virtqueue.c
source
startup
utilities
xip
Output
erpc_matrix_multiply_rpmsg_cm7

|

Parent topic: Multicore client application

Client user code The client's user code is stored in the main_core0.c file, located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_example/erpc_matrix_multiply_rpmsg/cm7

The main_core0.c file contains the code for target board and eRPC initialization.

- After initialization, the secondary core is released from reset.
- When the secondary core is ready, the primary core initializes two matrix variables.
- The erpcMatrixMultiply eRPC function is called to issue the eRPC request and get the result.

It is possible to write the application-specific eRPC error handler. The eRPC error handler of the matrix multiply application is implemented in erpc_error_handler.h and erpc_error_handler.cpp files.

The matrix multiplication can be issued repeatedly, when pressing a software board button.

The eRPC-relevant code is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* RPMsg-Lite transport layer initialization */
erpc_transport_t transport;
transport = erpc_transport_rpmsg_lite_master_init(src, dst,
ERPC_TRANSPORT_RPMSG_LITE_LINK_ID);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_rpmsg_init(transport);
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport, message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
  /* Invoke the erpcMatrixMultiply function */
  erpcMatrixMultiply(matrix1, matrix2, result_matrix);
  ...
  /* Check if some error occured in eRPC */
  if (g_erpc_error_occurred)
  {
    /* Exit program loop */
    break;
  }
  ...
}
```

Except for the application main file, there are configuration files for the RPMsg-Lite (rpmsg_config.h) and eRPC (erpc_config.h), located in the following folder:

<MCUXpressoSDK_install_dir>/boards/evkmimxrt1170/multicore_examples/erpc_matrix_multiply_rpmsg

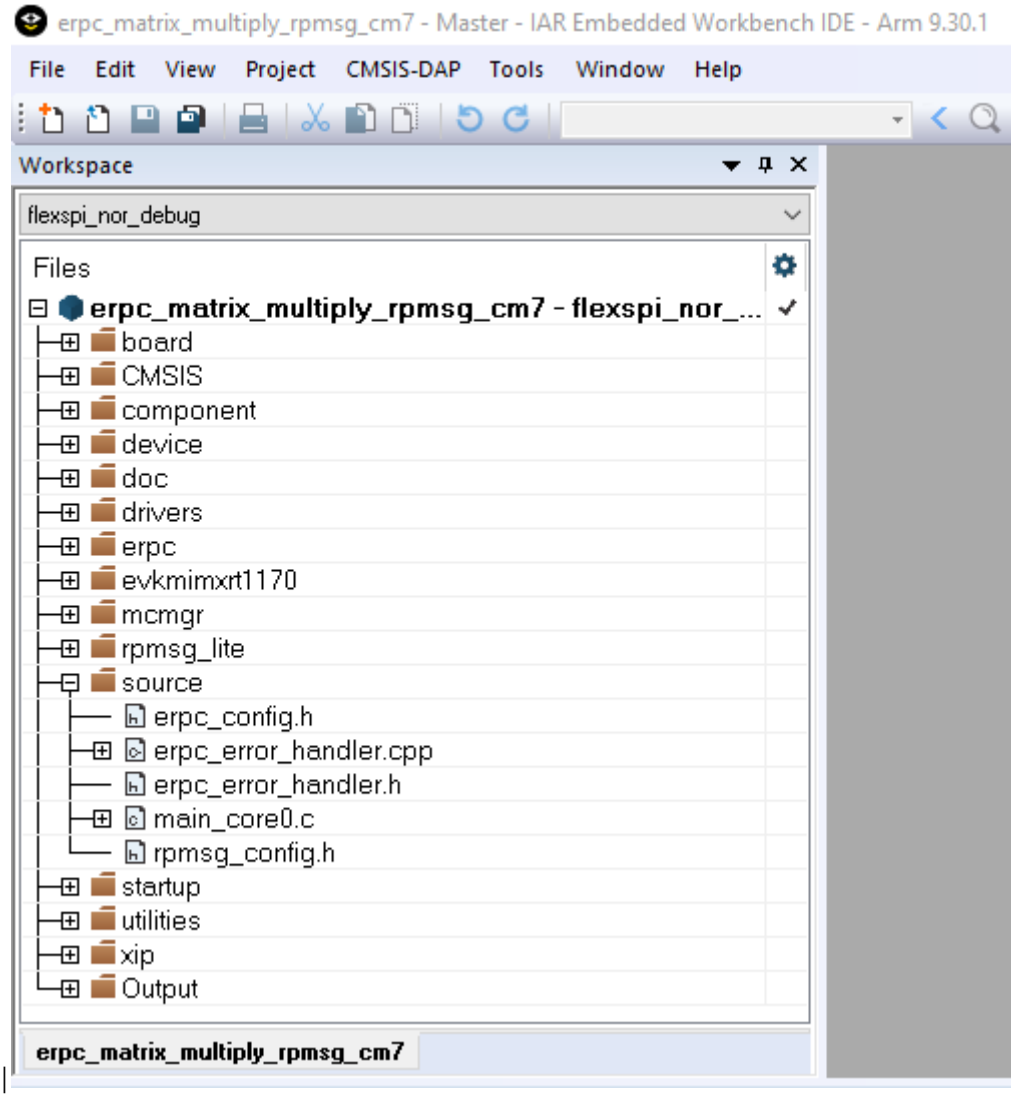

Parent topic: Multicore client application

Parent topic:*Create an eRPC application*

Multiprocessor server application The "Matrix multiply" eRPC server project for multiprocessor applications is located in the *<MCUXpressoSDK_install_dir»/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>* folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires server-related generated files (server shim code), server infrastructure files, and the server user code. There is no need for server multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|SPI|<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_slave.cpp

<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_(d)spi_slave_transport.cpp

| |UART|<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

|

Server user code The server's user code is stored in the main_server.c file, located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_server_matrix_multiply_<transport_layer>/* folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
/* erpcMatrixMultiply function user implementation */
void erpcMatrixMultiply(Matrix matrix1, Matrix matrix2, Matrix result_matrix)
{
  ...
}
int main()
{
  ...
  /* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver␣
↪operations */
  erpc_transport_t transport;
  transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
  ...
  /* MessageBufferFactory initialization */
  erpc_mbf_t message_buffer_factory;
  message_buffer_factory = erpc_mbf_dynamic_init();
  ...
  /* eRPC server side initialization */
  erpc_server_t server;
  server = erpc_server_init(transport, message_buffer_factory);
  ...
  /* Adding the service to the server */
  erpc_service_t service = create_MatrixMultiplyService_service();
  erpc_add_service_to_server(server, service);
  ...
  while (1)
  {
    /* Process eRPC requests */
    erpc_status_t status = erpc_server_poll(server)
    /* handle error status */
    if (status != kErpcStatus_Success)
    {
      /* print error description */
      erpc_error_handler(status, 0);
      ...
    }
    ...
  }
}
```

Parent topic: Multiprocessor server application

Multiprocessor client application The "Matrix multiply" eRPC client project for multiprocessor applications is located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/iar/* folder.

Most of the multiprocessor application setup is the same as for the multicore application. The multiprocessor server application requires client-related generated files (server shim code),

client infrastructure files, and the client user code. There is no need for client multicore infrastructure files (MCMGR and RPMsg-Lite). The RPMsg-Lite transport layer is replaced either by SPI or UART transports. The following table shows the required transport-related files per each transport type.

|SPI|<eRPC base directory>/erpc_c/setup/erpc_setup_(d)spi_master.cpp

<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.hpp

<eRPC base directory>/erpc_c/transports/ erpc_(d)spi_master_transport.cpp

| |UART|<eRPC base directory>/erpc_c/setup/erpc_setup_uart_cmsis.cpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.hpp

<eRPC base directory>/erpc_c/transports/erpc_uart_cmsis_transport.cpp

|

Client user code The client's user code is stored in the main_client.c file, located in the *<MCUXpressoSDK_install_dir>/boards/<board_name>/multiprocessor_examples/erpc_client_matrix_multiply_<transport_layer>/* folder.

The eRPC-relevant code with UART as a transport is captured in the following code snippet:

```
...
extern bool g_erpc_error_occurred;
...
/* Declare matrix arrays */
Matrix matrix1 = {0}, matrix2 = {0}, result_matrix = {0};
...
/* UART transport layer initialization, ERPC_DEMO_UART is the structure of CMSIS UART driver␣
↪operations */
erpc_transport_t transport;
transport = erpc_transport_cmsis_uart_init((void *)&ERPC_DEMO_UART);
...
/* MessageBufferFactory initialization */
erpc_mbf_t message_buffer_factory;
message_buffer_factory = erpc_mbf_dynamic_init();
...
/* eRPC client side initialization */
erpc_client_t client;
client = erpc_client_init(transport,message_buffer_factory);
...
/* Set default error handler */
erpc_client_set_error_handler(client, erpc_error_handler);
...
while (1)
{
  /* Invoke the erpcMatrixMultiply function */
  erpcMatrixMultiply(matrix1, matrix2, result_matrix);
  ...
  /* Check if some error occured in eRPC */
  if (g_erpc_error_occurred)
  {
    /* Exit program loop */
    break;
  }
  ...
}
```

Parent topic: Multiprocessor client application

Parent topic: Multiprocessor server application

Parent topic:*Create an eRPC application*

Running the eRPC application Follow the instructions in *Getting Started with MCUXpresso SDK* (document MCUXSDKGSUG) (located in the *<MCUXpressoSDK_install_dir>/docs* folder), to load both the primary and the secondary core images into the on-chip memory, and then effectively debug the dual-core application. After the application is running, the serial console should look like:

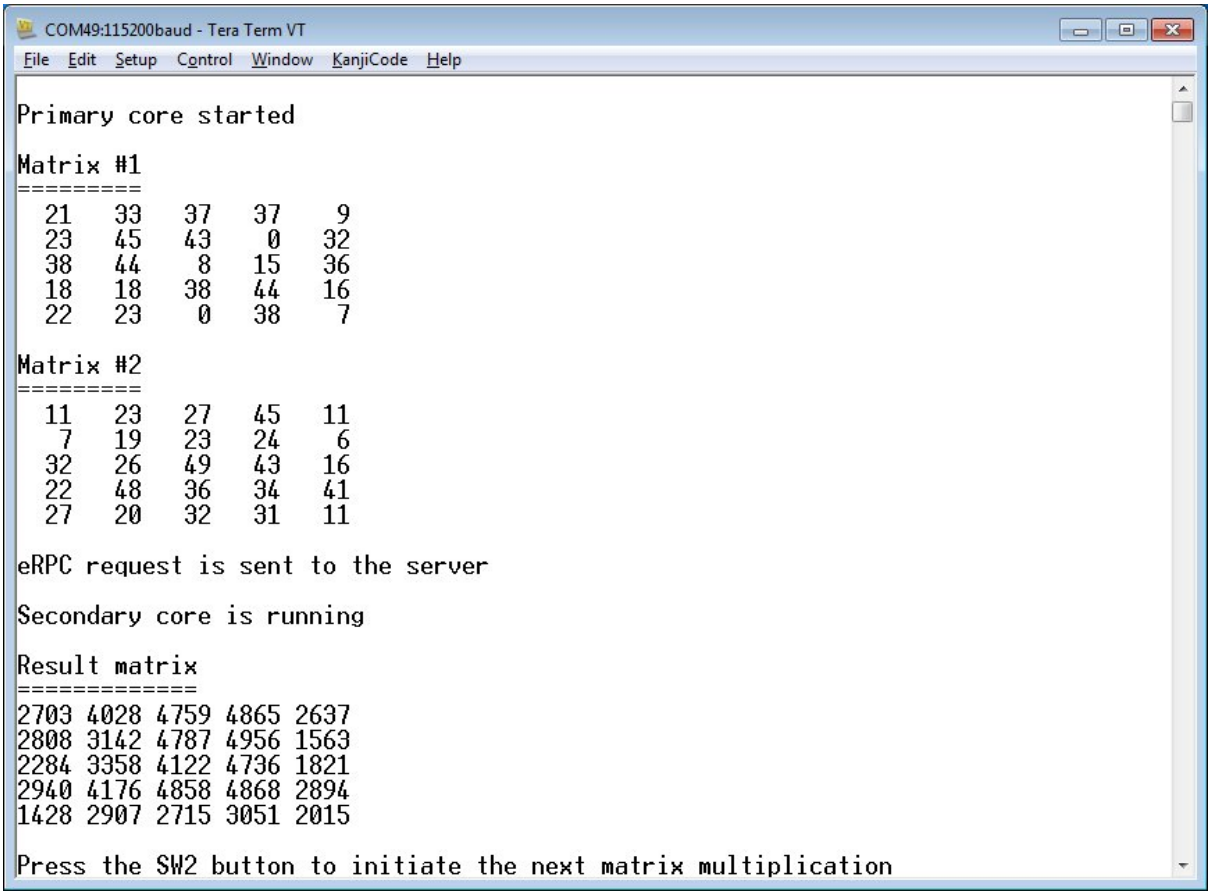

For multiprocessor applications that are running between PC and the target evaluation board or between two boards, follow the instructions in the accompanied example readme files that provide details about the proper board setup and the PC side setup (Python).

Parent topic:*Create an eRPC application*

Parent topic:*eRPC example*

Other uses for an eRPC implementation The eRPC implementation is generic, and its use is not limited to just embedded applications. When creating an eRPC application outside the embedded world, the same principles apply. For example, this manual can be used to create an eRPC application for a PC running the Linux operating system. Based on the used type of transport medium, existing transport layers can be used, or new transport layers can be implemented.

For more information and erpc updates see the github.com/EmbeddedRPC.

Note about the source code in the document Example code shown in this document has the following copyright and BSD-3-Clause license:

Copyright 2024 NXP Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the copyright holder nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Changelog eRPC All notable changes to this project will be documented in this file.

The format is based on Keep a Changelog, and this project adheres to Semantic Versioning.

Unreleased

Added

- Zephyr examples added support for RT600 and RT700.

Updated

- eRPC Zephyr module port updated for Zephyr version 4.4

Fixed

- Python code of the eRPC infrastructure was updated to match the proper python code style, add type annotations and improve readability.
- eRPC: Several MISRA violations addressed.

1.14.0

Added

- Added Cmake/Kconfig support.
- Made java code jdk11 compliant, GitHub PR #432.
- Added imxrt1186 support into mu transport layer.
- erpcgen: Added assert for listType before usage, GitHub PR #406.

Fixed

- eRPC: Sources reformatted.
- erpc: Fixed typo in semaphore get (mutex -> semaphore), and write it can fail in case of timeout, GitHub PR #446.
- erpc: Free the arbitrated client token from client manager, GitHub PR #444.
- erpc: Fixed Makefile, install the erpc_simple_server header, GitHub PR #447.
- erpc_python: Fixed possible AttributeError and OSError on calling TCPTransport.close(), GitHub PR #438.
- Examples and tests consolidated.

1.13.0

Added

- erpc: Add BSD-3 license to endianness agnostic files, GitHub PR #417.
- eRPC: Add new Zephyr-related transports (zephyr_uart, zephyr_mbox).
- eRPC: Add new Zephyr-related examples.

Fixed

- eRPC,erpcgen: Fixing/improving markdown files, GitHub PR #395.
- eRPC: Fix Python client TCPTransports not being able to close, GitHub PR #390.
- eRPC,erpcgen: Align switch brackets, GitHub PR #396.
- erpc: Fix zephyr uart transport, GitHub PR #410.
- erpc: UART ZEPHYR Transport stop to work after a few transactions when using USB-CDC resolved, GitHub PR #420.

Removed

- eRPC,erpcgen: Remove cstbool library, GitHub PR #403.

1.12.0

Added

- eRPC: Add dynamic/static option for transport init, GitHub PR #361.
- eRPC,erpcgen: Winsock2 support, GitHub PR #365.
- eRPC,erpcgen: Feature/support multiple clients, GitHub PR #271.
- eRPC,erpcgen: Feature/buffer head - Framed transport header data stored in MessageBuffer, GitHub PR #378.
- eRPC,erpcgen: Add experimental Java support.

Fixed

- eRPC: Fix receive error value for spidev, GitHub PR #363.
- eRPC: UartTransport::init adaptation to changed driver.
- eRPC: Fix typo in assert, GitHub PR #371.
- eRPC,erpcgen: Move enums to enum classes, GitHub PR #379.
- eRPC: Fixed rpmsg tty transport to work with serial transport, GitHub PR #373.

1.11.0

Fixed

- eRPC: Makefiles update, GitHub PR #301.
- eRPC: Resolving warnings in Python, GitHub PR #325.
- eRPC: Python3.8 is not ready for usage of typing.Any type, GitHub PR #325.
- eRPC: Improved codec function to use reference instead of address, GitHub PR #324.
- eRPC: Fix NULL check for pending client creation, GitHub PR #341.
- eRPC: Replace sprintf with snprintf, GitHub PR #343.
- eRPC: Use MU_SendMsg blocking call in MU transport.
- eRPC: New LPSPI and LPI2C transport layers.
- eRPC: Freeing static objects, GitHub PR #353.
- eRPC: Fixed casting in deinit functions, GitHub PR #354.
- eRPC: Align LIBUSBSIO.GetNumPorts API use with libusbsio python module v. 2.1.11.
- erpcgen: Renamed temp variable to more generic one, GitHub PR #321.
- erpcgen: Add check that string read is not more than max length, GitHub PR #328.
- erpcgen: Move to g++ in pytest, GitHub PR #335.
- erpcgen: Use build=release for make, GitHub PR #334.
- erpcgen: Removed boost dependency, GitHub PR #346.
- erpcgen: Mingw support, GitHub PR #344.
- erpcgen: VS build update, GitHub PR #347.
- erpcgen: Modified name for common types macro scope, GitHub PR #337.
- erpcgen: Fixed memcpy for template, GitHub PR #352.
- eRPC,erpcgen: Change default build target to release + adding artefacts, GitHub PR #334.
- eRPC,erpcgen: Remove redundant includes, GitHub PR #338.
- eRPC,erpcgen: Many minor code improvements, GitHub PR #323.

1.10.0

Fixed

- eRPC: MU transport layer switched to blocking MU_SendMsg() API use.

1.10.0

Added

- eRPC: Add TCP_NODELAY option to python, GitHub PR #298.

Fixed

- eRPC: MUTransport adaptation to new supported SoCs.
- eRPC: Simplifying CI with installing dependencies using shell script, GitHub PR #267.
- eRPC: Using event for waiting for sock connection in TCP python server, formatting python code, C specific includes, GitHub PR #269.
- eRPC: Endianness agnostic update, GitHub PR #276.
- eRPC: Assertion added for functions which are returning status on freeing memory, GitHub PR #277.
- eRPC: Fixed closing arbitrator server in unit tests, GitHub PR #293.
- eRPC: Makefile updated to reflect the correct header names, GitHub PR #295.
- eRPC: Compare value length to used length() in reading data from message buffer, GitHub PR #297.
- eRPC: Replace EXPECT_TRUE with EXPECT_EQ in unit tests, GitHub PR #318.
- eRPC: Adapt rpmsg_lite based transports to changed rpmsg_lite_wait_for_link_up() API parameters.
- eRPC, erpcgen: Better distuingish which file can and cannot by linked by C linker, GitHub PR #266.
- eRPC, erpcgen: Stop checking if pointer is NULL before sending it to the erpc_free function, GitHub PR #275.
- eRPC, erpcgen: Changed api to count with more interfaces, GitHub PR #304.
- erpcgen: Check before reading from heap the buffer boundaries, GitHub PR #287.
- erpcgen: Several fixes for tests and CI, GitHub PR #289.
- erpcgen: Refactoring erpcgen code, GitHub PR #302.
- erpcgen: Fixed assigning const value to enum, GitHub PR #309.
- erpcgen: Enable runTesttest_enumErrorCode_allDirection, serialize enums as int32 instead of uint32.

1.9.1

Fixed

- eRPC: Construct the USB CDC transport, rather than a client, GitHub PR #220.
- eRPC: Fix premature import of package, causing failure when attempting installation of Python library in a clean environment, GitHub PR #38, #226.
- eRPC: Improve python detection in make, GitHub PR #225.
- eRPC: Fix several warnings with deprecated call in pytest, GitHub PR #227.
- eRPC: Fix freeing union members when only default need be freed, GitHub PR #228.
- eRPC: Fix making test under Linux, GitHub PR #229.

- eRPC: Assert costumizing, GitHub PR #148.
- eRPC: Fix corrupt clientList bug in TransportArbitrator, GitHub PR #199.
- eRPC: Fix build issue when invoking g++ with -Wno-error=free-nonheap-object, GitHub PR #233.
- eRPC: Fix inout cases, GitHub PR #237.
- eRPC: Remove ERPC_PRE_POST_ACTION dependency on return type, GitHub PR #238.
- eRPC: Adding NULL to ptr when codec function failed, fixing memcpy when fail is present during deserialization, GitHub PR #253.
- eRPC: MessageBuffer usage improvement, GitHub PR #258.
- eRPC: Get rid for serial and enum34 dependency (enum34 is in python3 since 3.4 (from 2014)), GitHub PR #247.
- eRPC: Several MISRA violations addressed.
- eRPC: Fix timeout for Freertos semaphore, GitHub PR #251.
- eRPC: Use of rpmsg_lite_wait_for_link_up() in rpmsg_lite based transports, GitHub PR #223.
- eRPC: Fix codec nullptr dereferencing, GitHub PR #264.
- erpcgen: Fix two syntax errors in erpcgen Python output related to non-encapsulated unions, improved test for union, GitHub PR #206, #224.
- erpcgen: Fix serialization of list/binary types, GitHub PR #240.
- erpcgen: Fix empty list parsing, GitHub PR #72.
- erpcgen: Fix templates for malloc errors, GitHub PR #110.
- erpcgen: Get rid of encapsulated union declarations in global scale, improve enum usage in unions, GitHub PR #249, #250.
- erpcgen: Fix compile error:UniqueIdChecker.cpp:156:104:'sort' was not declared, GitHub PR #265.

1.9.0

Added

- eRPC: Allow used LIBUSBSIO device index being specified from the Python command line argument.

Fixed

- eRPC: Improving template usage, GitHub PR #153.
- eRPC: run_clang_format.py cleanup, GitHub PR #177.
- eRPC: Build TCP transport setup code into liberpc, GitHub PR #179.
- eRPC: Fix multiple definitions of g_client error, GitHub PR #180.
- eRPC: Fix memset past end of buffer in erpc_setup_mbf_static.cpp, GitHub PR #184.
- eRPC: Fix deprecated error with newer pytest version, GitHub PR #203.
- eRPC, erpcgen: Static allocation support and usage of rpmsg static FreeRTOSs related APi, GitHub PR #168, #169.
- erpcgen: Remove redundant module imports in erpcgen, GitHub PR #196.

1.8.1

Added

- eRPC: New i2c_slave_transport trasnport introduced.

Fixed

- eRPC: Fix misra erpc c, GitHub PR #158.
- eRPC: Allow conditional compilation of message_loggers and pre_post_action.
- eRPC: (D)SPI slave transports updated to avoid busy loops in rtos environments.
- erpcgen: Re-implement EnumMember::hasValue(), GitHub PR #159.
- erpcgen: Fixing several misra issues in shim code, erpcgen and unit tests updated, GitHub PR #156.
- erpcgen: Fix bison file, GitHub PR #156.

1.8.0

Added

- eRPC: Support win32 thread, GitHub PR #108.
- eRPC: Add mbed support for malloc() and free(), GitHub PR #92.
- eRPC: Introduced pre and post callbacks for eRPC call, GitHub PR #131.
- eRPC: Introduced new USB CDC transport.
- eRPC: Introduced new Linux spidev-based transport.
- eRPC: Added formatting extension for VSC, GitHub PR #134.
- erpcgen: Introduce ustring type for unsigned char and force cast to char*, GitHub PR #125.

Fixed

- eRPC: Update makefile.
- eRPC: Fixed warnings and error with using MessageLoggers, GitHub PR #127.
- eRPC: Extend error msg for python server service handle function, GitHub PR #132.
- eRPC: Update CMSIS UART transport layer to avoid busy loops in rtos environments, introduce semaphores.
- eRPC: SPI transport update to allow usage without handshaking GPIO.
- eRPC: Native _WIN32 erpc serial transport and threading.
- eRPC: Arbitrator deadlock fix, TCP transport updated, TCP setup functions introduced, GitHub PR #121.
- eRPC: Update of matrix_multiply.py example: Add –serial and –baud argument, GitHub PR #137.
- eRPC: Update of .clang-format, GitHub PR #140.
- eRPC: Update of erpc_framed_transport.cpp: return error if received message has zero length, GitHub PR #141.

- eRPC, erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136, #139.
- eRPC, erpcgen: Core re-formatted using Clang version 10.
- erpcgen: Enable deallocation in server shim code when callback/function pointer used as out parameter in IDL.
- erpcgen: Removed '$' character from generated symbol name in '_$union' suffix, GitHub PR #103.
- erpcgen: Resolved mismatch between C++ and Python for callback index type, GitHub PR #111.
- erpcgen: Python generator improvements, GitHub PR #100, #118.
- erpcgen: Fixed error messages produced by -Wall -Wextra -Wshadow -pedantic-errors compiler flags, GitHub PR #136.

1.7.4

Added

- eRPC: Support MU transport unit testing.
- eRPC: Adding mbed os support.

Fixed

- eRPC: Unit test code updated to handle service add and remove operations.
- eRPC: Several MISRA issues in rpmsg-based transports addressed.
- eRPC: Fixed Linux/TCP acceptance tests in release target.
- eRPC: Minor documentation updates, code formatting.
- erpcgen: Whitespace removed from C common header template.

1.7.3

Fixed

- eRPC: Improved the test_callbacks logic to be more understandable and to allow requested callback execution on the server side.
- eRPC: TransportArbitrator::prepareClientReceive modified to avoid incorrect return value type.
- eRPC: The ClientManager and the ArbitratedClientManager updated to avoid performing client requests when the previous serialization phase fails.
- erpcgen: Generate the shim code for destroy of statically allocated services.

1.7.2

Added

- eRPC: Add missing doxygen comments for transports.

Fixed

- eRPC: Improved support of const types.
- eRPC: Fixed Mac build.
- eRPC: Fixed serializing python list.
- eRPC: Documentation update.

1.7.1

Fixed

- eRPC: Fixed semaphore in static message buffer factory.
- erpcgen: Fixed MU received error flag.
- erpcgen: Fixed tcp transport.

1.7.0

Added

- eRPC: List names are based on their types. Names are more deterministic.
- eRPC: Service objects are as a default created as global static objects.
- eRPC: Added missing doxygen comments.
- eRPC: Added support for 64bit numbers.
- eRPC: Added support of program language specific annotations.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Generating crc value is optional.
- eRPC: Fixed CMSIS Uart driver. Removed dependency on KSDK.
- eRPC: Forbid users use reserved words.
- eRPC: Removed outByref for function parameters.
- eRPC: Optimized code style of callback functions.

1.6.0

Added

- eRPC: Added @nullable support for scalar types.

Fixed

- eRPC: Improved code size of generated code.
- eRPC: Improved eRPC nested calls.
- eRPC: Improved eRPC list length variable serialization.

1.5.0

Added

- eRPC: Added support for unions type non-wrapped by structure.
- eRPC: Added callbacks support.
- eRPC: Added support @external annotation for functions.
- eRPC: Added support @name annotation.
- eRPC: Added Messaging Unit transport layer.
- eRPC: Added RPMSG Lite RTOS TTY transport layer.
- eRPC: Added version verification and IDL version verification between eRPC code and eRPC generated shim code.
- eRPC: Added support of shared memory pointer.
- eRPC: Added annotation to forbid generating const keyword for function parameters.
- eRPC: Added python matrix multiply example.
- eRPC: Added nested call support.
- eRPC: Added struct member “byref” option support.
- eRPC: Added support of forward declarations of structures
- eRPC: Added Python RPMsg Multiendpoint kernel module support
- eRPC: Added eRPC sniffer tool

1.4.0

Added

- eRPC: New RPMsg-Lite Zero Copy (RPMsgZC) transport layer.

Fixed

- eRPC: win_flex_bison.zip for windows updated.
- eRPC: Use one codec (instead of inCodec outCodec).

[1.3.0]

Added

- eRPC: New annotation types introduced (@length, @max_length, ...).
- eRPC: Support for running both erpc client and erpc server on one side.
- eRPC: New transport layers for (LP)UART, (D)SPI.
- eRPC: Error handling support.

[1.2.0]

Added

- eRPC source directory organization changed.
- Many eRPC improvements.

[1.1.0]

Added

- Multicore SDK 1.1.0 ported to KSDK 2.0.0.

[1.0.0]

Added

- Initial Release

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK ChangeLog

FreeRTOS kernel Readme

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

4.1.5 corejson

JSON parser.

Readme

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

4.1.7 corepkcs11

PKCS #11 key management library.

Readme

4.1.8 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme