



MCUXpresso SDK Documentation

Release 25.09.00



NXP
Sep 19, 2025



Table of contents

1	FRDM-MCXA156	3
1.1	Overview	3
1.2	Getting Started with MCUXpresso SDK Package	3
1.2.1	Getting Started with MCUXpresso SDK Package	3
1.3	Getting Started with MCUXpresso SDK GitHub	55
1.3.1	Getting Started with MCUXpresso SDK Repository	55
1.4	Release Notes	68
1.4.1	MCUXpresso SDK Release Notes	68
1.5	ChangeLog	72
1.5.1	MCUXpresso SDK Changelog	72
1.6	Driver API Reference Manual	164
1.7	Middleware Documentation	164
1.7.1	MCU Boot	164
1.7.2	FreeMASTER	164
1.7.3	FreeRTOS	165
1.7.4	File systemFatfs	165
2	MCXA156	167
2.1	AOI: Crossbar AND/OR/INVERT Driver	167
2.2	CDOG	170
2.3	Clock Driver	174
2.4	CRC: Cyclic Redundancy Check Driver	196
2.5	CTIMER: Standard counter/timers	199
2.6	DAC: Digital-to-Analog Converter Driver	209
2.7	eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver	214
2.8	eDMA core Driver	245
2.9	eDMA soc Driver	252
2.10	EIM: error injection module	252
2.11	EQDC: Enhanced Quadrature Encoder/Decoder	253
2.12	ERM: error recording module	271
2.13	FGPIO Driver	273
2.14	FlexCAN: Flex Controller Area Network Driver	273
2.15	FlexCAN Driver	273
2.16	FlexCAN eDMA Driver	319
2.17	FlexIO: FlexIO Driver	322
2.18	FlexIO Driver	322
2.19	FlexIO eDMA I2S Driver	339
2.20	FlexIO eDMA SPI Driver	343
2.21	FlexIO eDMA UART Driver	346
2.22	FlexIO I2C Master Driver	349
2.23	FlexIO I2S Driver	358
2.24	FlexIO SPI Driver	368
2.25	FlexIO UART Driver	381
2.26	FREQME: Frequency Measurement	392
2.27	GLIKEY	392
2.28	GLIKEY	392

2.29	GPIO: General-Purpose Input/Output Driver	396
2.30	GPIO Driver	399
2.31	I3C: I3C Driver	404
2.32	I3C Common Driver	407
2.33	I3C Master Driver	409
2.34	I3C Master DMA Driver	435
2.35	I3C Slave Driver	438
2.36	I3C Slave DMA Driver	451
2.37	INPUTMUX: Input Multiplexing Driver	453
2.38	Common Driver	561
2.39	Lin_lpuart_driver	573
2.40	LPADC: 12-bit SAR Analog-to-Digital Converter Driver	581
2.41	Lpc_freqme	601
2.42	LPCMP: Low Power Analog Comparator Driver	606
2.43	LPI2C: Low Power Inter-Integrated Circuit Driver	616
2.44	LPI2C Master Driver	617
2.45	LPI2C Master DMA Driver	631
2.46	LPI2C Slave Driver	634
2.47	LPSPi: Low Power Serial Peripheral Interface	644
2.48	LPSPi Peripheral driver	644
2.49	LPSPi eDMA Driver	665
2.50	LPTMR: Low-Power Timer	672
2.51	LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver	678
2.52	LPUART Driver	678
2.53	LPUART eDMA Driver	696
2.54	MCX_CMC: Core Mode Controller Driver	699
2.55	MCX_SPC: System Power Control driver	711
2.56	MCX_VBAT: Smart Power Switch	749
2.57	OPAMP: Operational Amplifier	769
2.58	OSTIMER: OS Event Timer Driver	774
2.59	PORT: Port Control and Interrupts	777
2.60	PWM: Pulse Width Modulator	785
2.61	Reset Driver	810
2.62	TRDC: Trusted Resource Domain Controller	814
2.63	Trdc_core	836
2.64	Trdc_soc	850
2.65	UTICK: MicroTick Timer Driver	850
2.66	WAKETIMER: WAKETIMER Driver	852
2.67	WUU: Wakeup Unit driver	854
2.68	WWDT: Windowed Watchdog Timer Driver	859
3	Middleware	863
3.1	Boot	863
3.1.1	MCUXpresso SDK : mcuxsdk-middlewre-mcuboot_opensource	863
3.1.2	MCUboot	864
3.2	Motor Control	865
3.2.1	FreeMASTER	865
4	RTOS	903
4.1	FreeRTOS	903
4.1.1	FreeRTOS kernel	903
4.1.2	FreeRTOS drivers	909
4.1.3	backoffalgorithm	909
4.1.4	corehttp	912
4.1.5	corejson	914
4.1.6	coremqtt	917
4.1.7	coremqtt-agent	920
4.1.8	corepkcs11	924

4.1.9 freertos-plus-tcp 927

This documentation contains information specific to the frdm-mcxa156 board.

Chapter 1

FRDM-MCXA156

1.1 Overview

The NXP FRDM-MCXA156 is a development board for the A15X/A14X 96 MHz Arm Cortex-M33 microcontroller.



MCU device and part on board is shown below:

- Device: MCXA156
- PartNumber: MCXA156VLL

1.2 Getting Started with MCUXpresso SDK Package


1.2.1 Getting Started with MCUXpresso SDK Package

Overview

The NXP MCUXpresso software and tools offer comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on general purpose, crossover, and Bluetooth-enabled MCUs from NXP. The MCUXpresso SDK includes a flexible set of peripheral drivers designed to speed up and simplify development of embedded applications. Along with the peripheral drivers, the MCUXpresso SDK provides an extensive and rich set of example applications covering everything from basic peripheral use case examples to full demo applications. The MCUXpresso SDK contains optional RTOS integrations such as FreeRTOS and Azure RTOS, and various other middleware to support rapid development.

For supported toolchain versions, see *MCUXpresso SDK Release Notes* (document MCUXSDKRN).

For more details about MCUXpresso SDK, see [MCUXpresso Software Development Kit \(SDK\)](#).

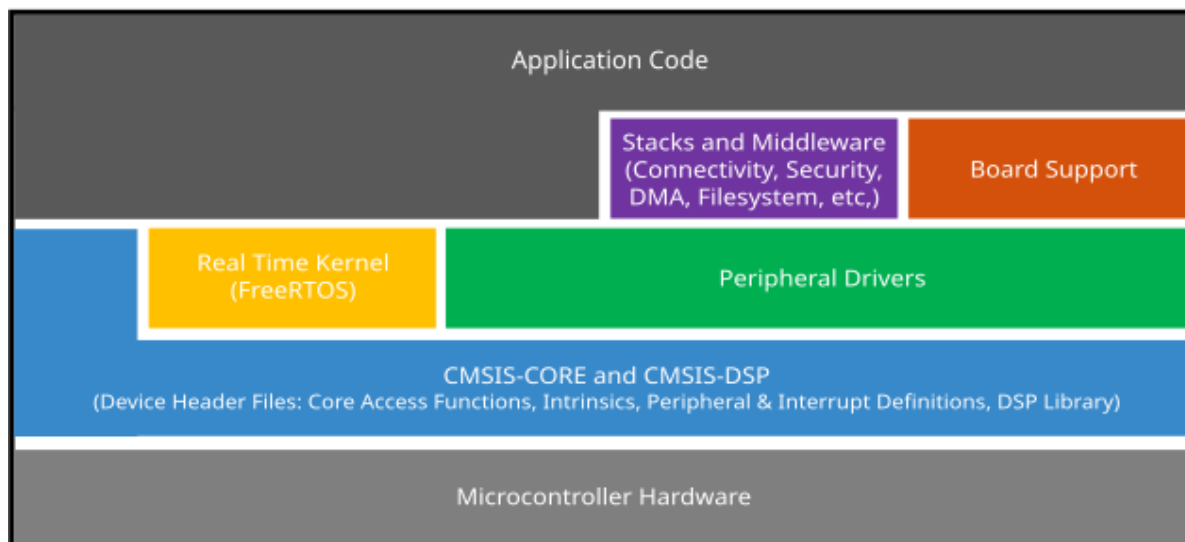

MCUXpresso SDK board support package folders


MCUXpresso SDK board support package provides example applications for NXP development and evaluation boards for Arm Cortex-M cores including Freedom, Tower System, and LPCXpresso boards. Board support packages are found inside the top-level boards folder and each supported board has its own folder (an MCUXpresso SDK package can support multiple boards). Within each `<board_name>` folder, there are various subfolders to classify the type of examples it contains. These include (but are not limited to):

- `cmsis_driver_examples`: Simple applications intended to show how to use CMSIS drivers.
- `demo_apps`: Full-featured applications that highlight key functionality and use cases of the target MCU. These applications typically use multiple MCU peripherals and may leverage stacks and middleware.
- `driver_examples`: Simple applications that show how to use the MCUXpresso SDK's peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI conversion using DMA).
- `emwin_examples`: Applications that use the emWin GUI widgets.
- `rtos_examples`: Basic FreeRTOS OS examples that show the use of various RTOS objects (semaphores, queues, and so on) and interfaces with the MCUXpresso SDK's RTOS drivers
- `usb_examples`: Applications that use the USB host/device/OTG stack.

Example application structure This section describes how the various types of example applications interact with the other components in the MCUXpresso SDK. To get a comprehensive understanding of all MCUXpresso SDK components and folder structure, see *MCUXpresso SDK API Reference Manual*.

Each `<board_name>` folder in the boards directory contains a comprehensive set of examples that are relevant to that specific piece of hardware. Although we use the `hello_world` example (part of the `demo_apps` folder), the same general rules apply to any type of example in the `<board_name>` folder.

In the `hello_world` application folder you see the following contents:

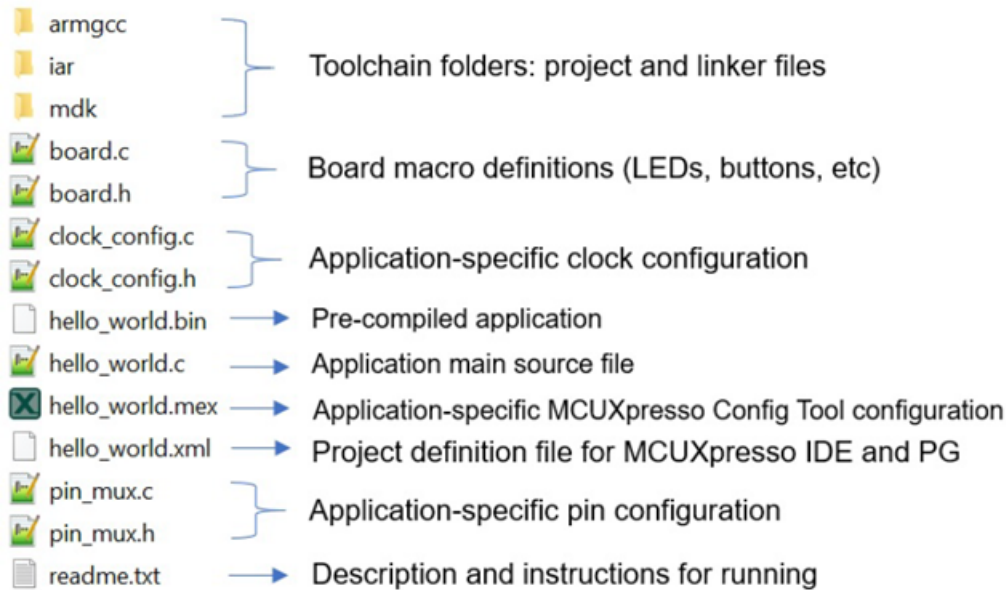

All files in the application folder are specific to that example, so it is easy to copy and paste an existing example to start developing a custom application based on a project provided in the MCUXpresso SDK.

Locating example application source files When opening an example application in any of the supported IDEs, various source files are referenced. The MCUXpresso SDK devices folder is the central component to all example applications. It means that the examples reference the same source files and, if one of these files is modified, it could potentially impact the behavior of other examples.

The main areas of the MCUXpresso SDK tree used in all example applications are:

- `devices/<device_name>`: The device's CMSIS header file, MCUXpresso SDK feature file, and a few other files
- `devices/<device_name>/cmsis_drivers`: All the CMSIS drivers for your specific MCU
- `devices/<device_name>/drivers`: All of the peripheral drivers for your specific MCU
- `devices/<device_name>/<tool_name>`: Toolchain-specific startup code, including vector table definitions
- `devices/<device_name>/utilities`: Items such as the debug console that are used by many of the example applications
- `devices/<device_name>/project`: Project template used in CMSIS PACK new project creation

For examples containing middleware/stacks or an RTOS, there are references to the appropriate source code. Middleware source files are located in the `middleware` folder and RTOSes are in the `rtos` folder. The core files of each of these are shared, so modifying one could have potential impacts on other projects that depend on that file.

Run a demo using MCUXpresso IDE

Note: Ensure that the MCUXpresso IDE toolchain is included when generating the MCUXpresso SDK package.


This section describes the steps required to configure MCUXpresso IDE to build, run, and debug example applications. The `hello_world` demo application targeted for the hardware platform is

used as an example, though these steps can be applied to any example application in the MCUXpresso SDK.


Select the workspace location Every time MCUXpresso IDE launches, it prompts the user to select a workspace location. MCUXpresso IDE is built on top of Eclipse which uses workspace to store information about its current configuration, and in some use cases, source files for the projects are in the workspace. The location of the workspace can be anywhere, but it is recommended that the workspace be located outside the MCUXpresso SDK tree.

Build an example application To build an example application, follow these steps.


1. Drag and drop the SDK zip file into the **Installed SDKs** view to install an SDK. In the window that appears, click **OK** and wait until the import has finished.

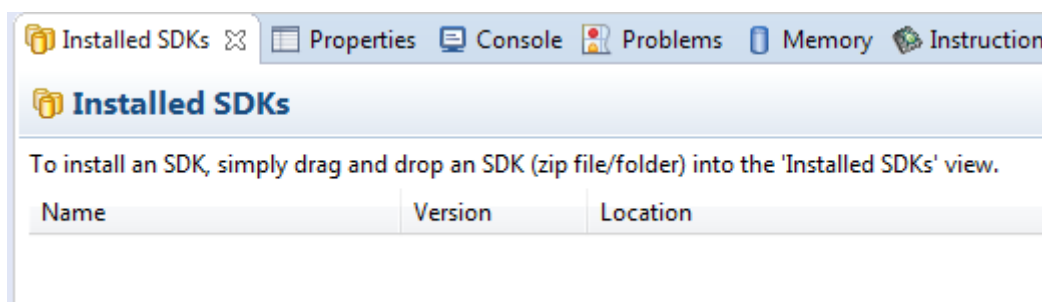

2. On the **Quickstart Panel**, click **Import SDK example(s)...**

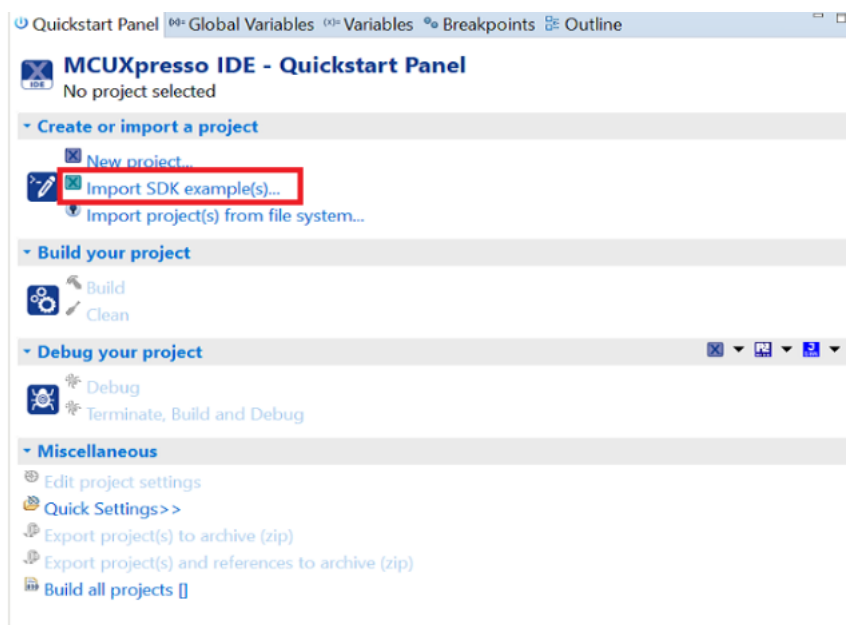

3. Expand the demo_apps folder and select hello_world.
4. Click **Next**.

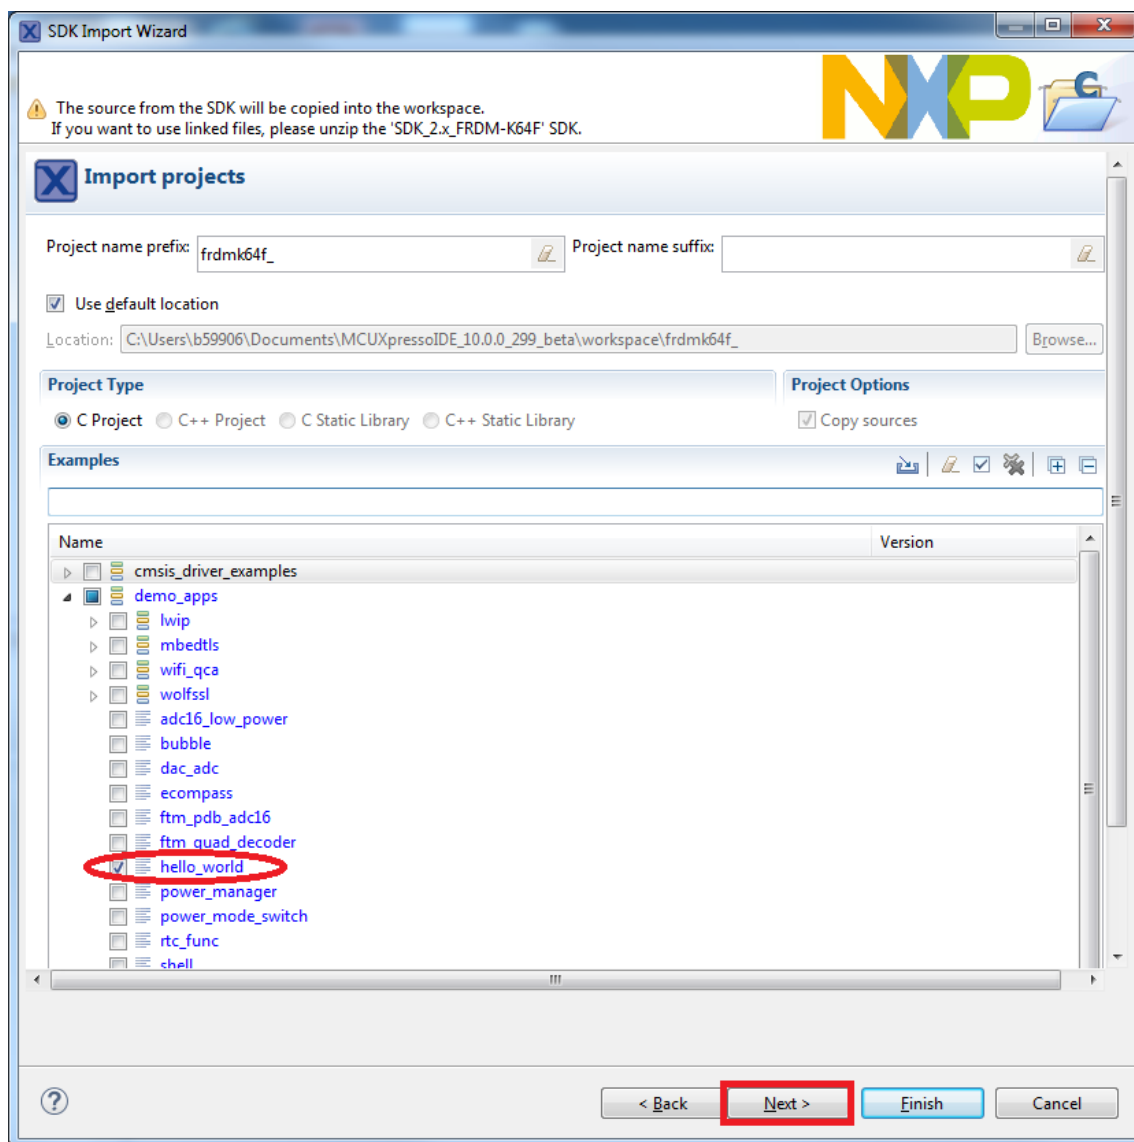


5. Ensure **Redlib: Use floating-point version of printf** is selected if the example prints floating-point numbers on the terminal for demo applications such as `adc_basic`, `adc_burst`, `adc_dma`, and `adc_interrupt`. Otherwise, it is not necessary to select this option. Then, click **Finish**.

Run an example application For more information on debug probe support in the MCUXpresso IDE, see community.nxp.com.

To download and run the application, perform the following steps:


1. Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
2. Connect the development platform to your PC via a USB cable.
3. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference `BOARD_DEBUG_UART_BAUDRATE` variable in `board.h` file)
 2. No parity

3. 8 data bits

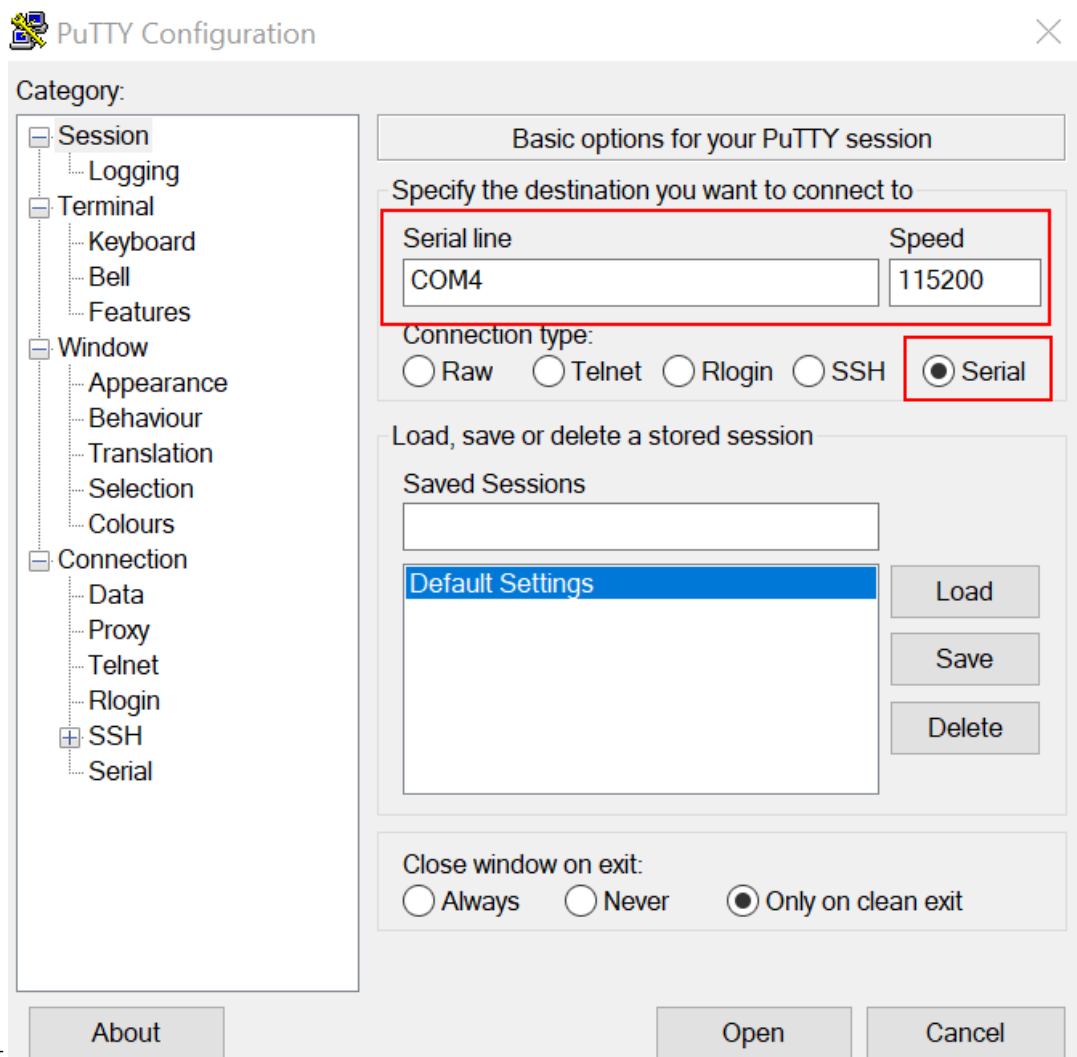

4. 1 stop bit

4. On the **Quickstart Panel**, click **Debug** to launch the debug session.
5. The first time you debug a project, the **Debug Emulator Selection** dialog is displayed, showing all supported probes that are attached to your computer. Select the probe through which you want to debug and click **OK**. (For any future debug sessions, the stored probe selection is automatically used, unless the probe cannot be found.)

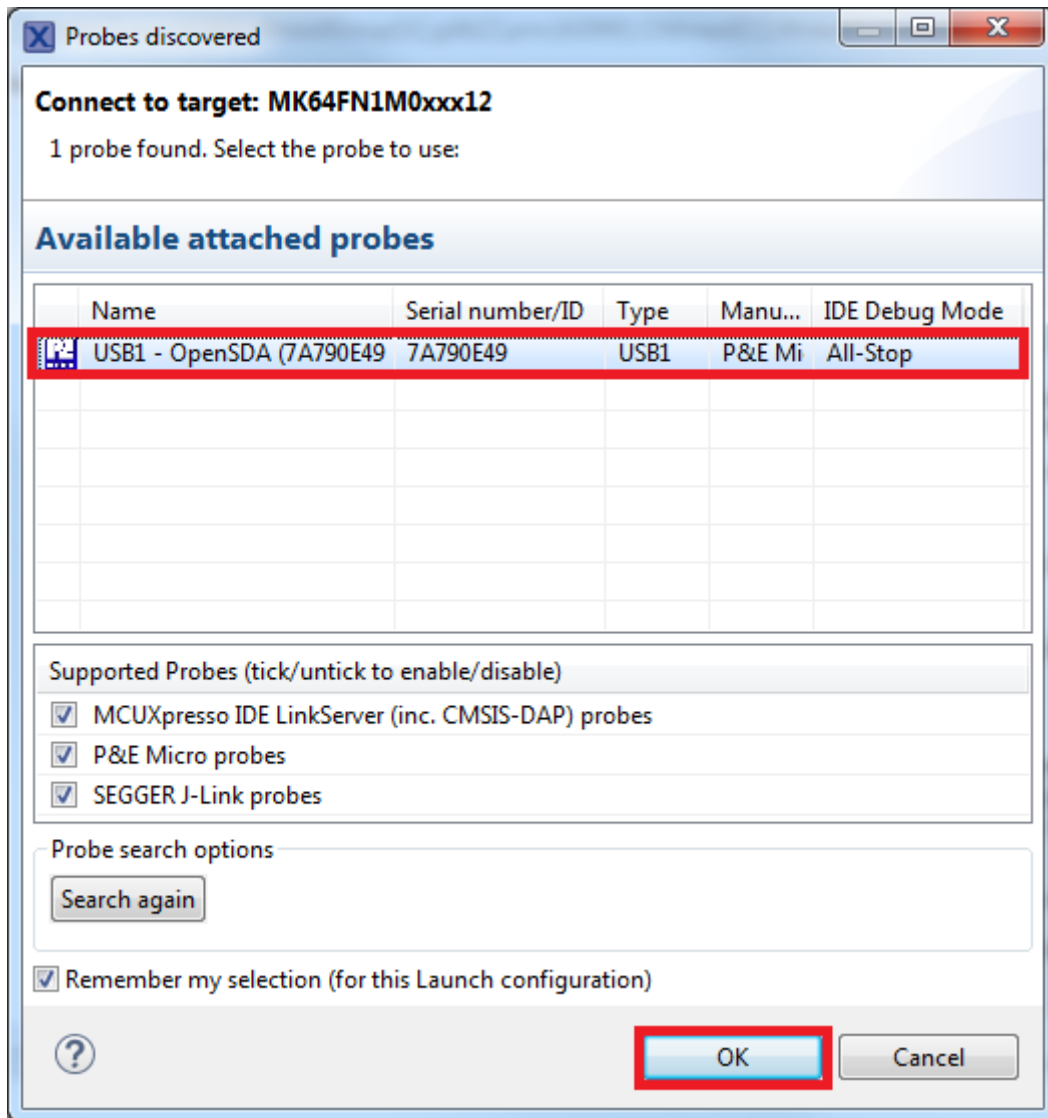

- The application is downloaded to the target and automatically runs to `main()`.
- Start the application by clicking **Resume**.




The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.




Build a multicore example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug multicore example applications. The following steps can be applied to any multicore example application in the MCUXpresso SDK. Here, the dual-core version of hello_world example application targeted for the LPCXpresso54114 hardware platform is used as an example.

1. Multicore examples are imported into the workspace in a similar way as single core applications, explained in **Build an example application**. When the SDK zip package for LPCXpresso54114 is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **LPCxx** folder and select **LPC54114J256**. Then, select **lpcxpresso54114** and click **Next**.
2. Expand the multicore_examples/hello_world folder and select **cm4**. The cm0plus counterpart project is automatically imported with the cm4 project, because the multicore examples are linked together and there is no need to select it explicitly. Click **Finish**.

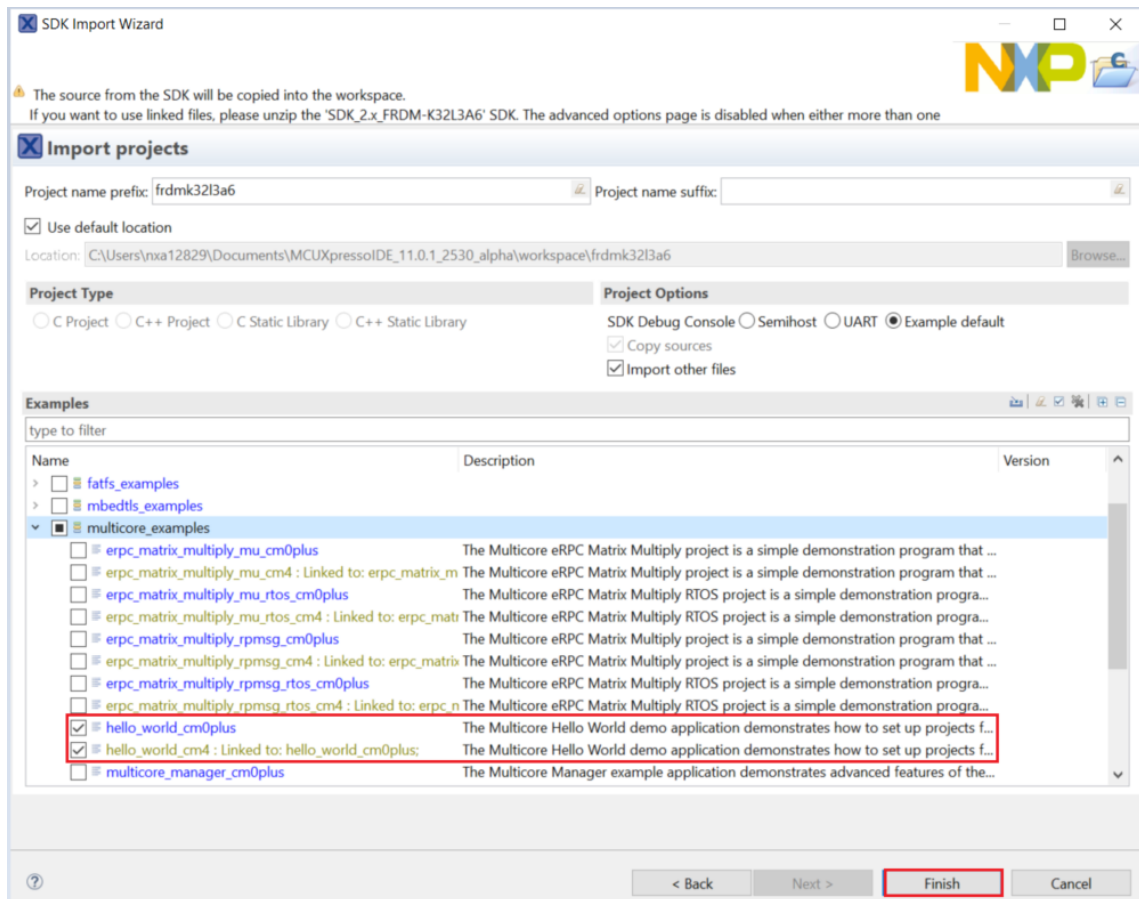


3. Now, two projects should be imported into the workspace. To start building the multicore application, highlight the `lpcxpresso54114_multicore_examples_hello_world_cm4` project (multicore master project) in the Project Explorer. Then choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in the figure. For this example, select **Debug**.

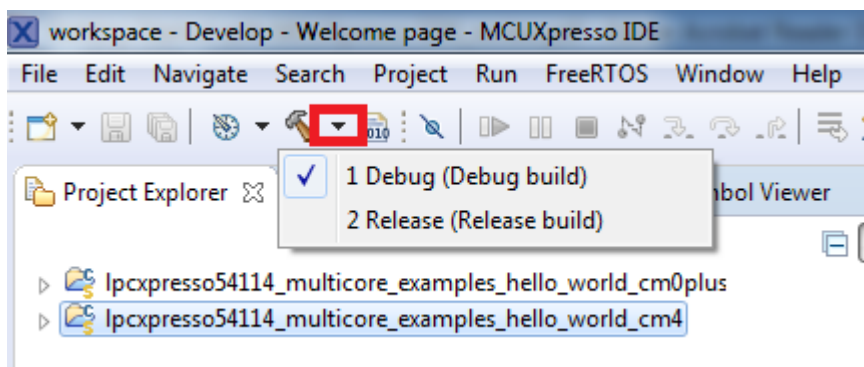




The project starts building after the build target is selected. Because of the project reference settings in multicore projects, triggering the build of the primary core application (cm4) also causes the referenced auxiliary core application (cm0plus) to build.


Note: When the **Release** build is requested, it is necessary to change the build configuration of both the primary and auxiliary core application projects first. To do this, select both projects in the Project Explorer view and then right click which displays the context-sensitive menu. Select **Build Configurations** -> **Set Active** -> **Release**. This alternate navigation using the menu item is **Project** -> **Build Configuration** -> **Set Active** -> **Release**. After switching to the **Release** build configuration, the build of the multicore example can be started by triggering the primary core application (cm4) build.

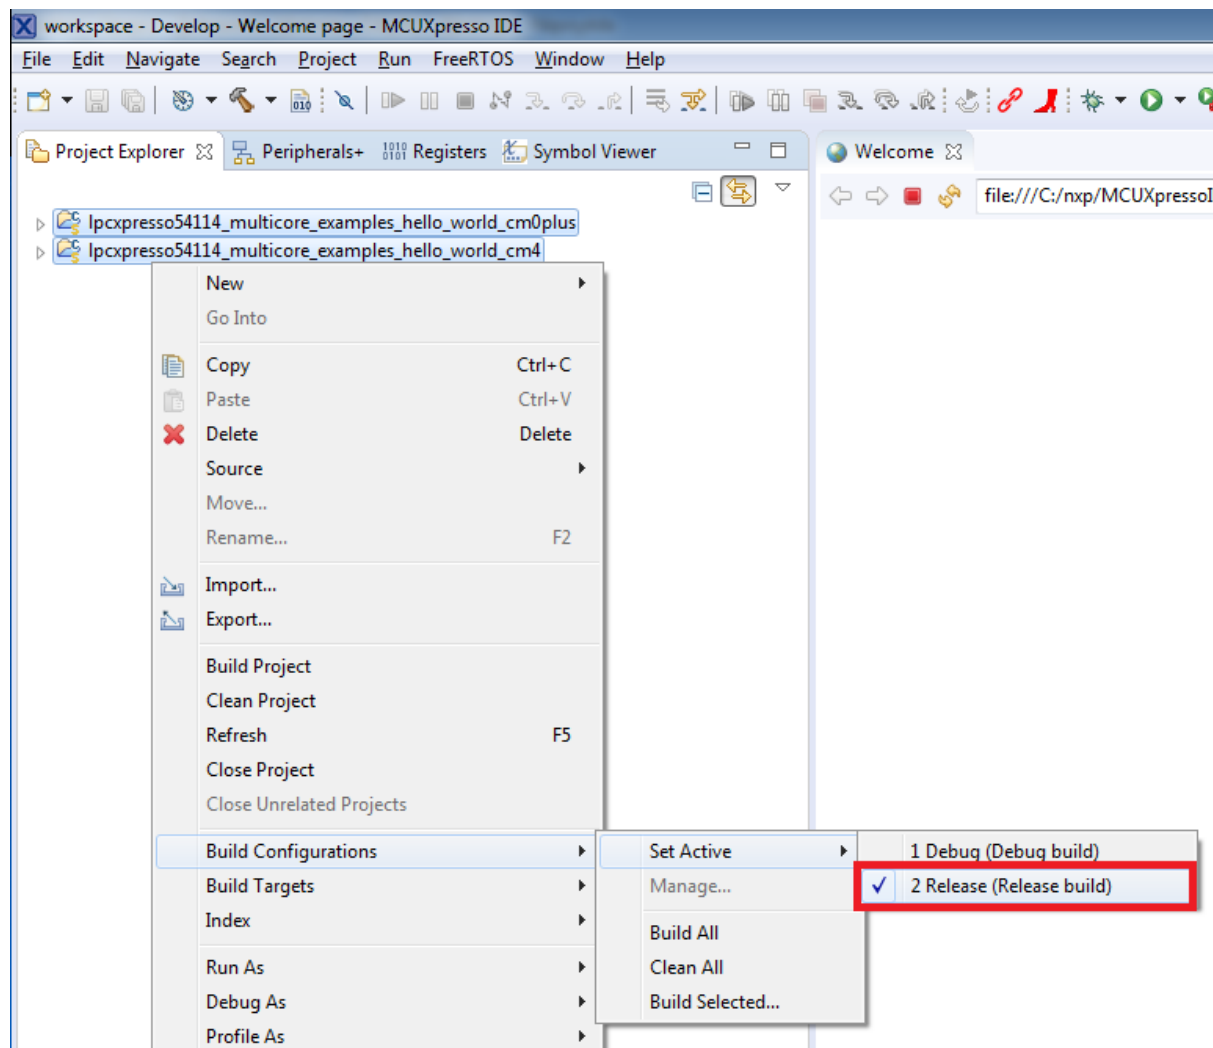


Run a multicore example application The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform all steps as described in **Run an example application**. These steps are common for both single-core applications and the primary side of dual-core applications, ensuring both sides of the multicore application are properly loaded and started. However, there is one additional dialogue that is specific to multicore examples which requires selecting the target core. See the following figures as reference.

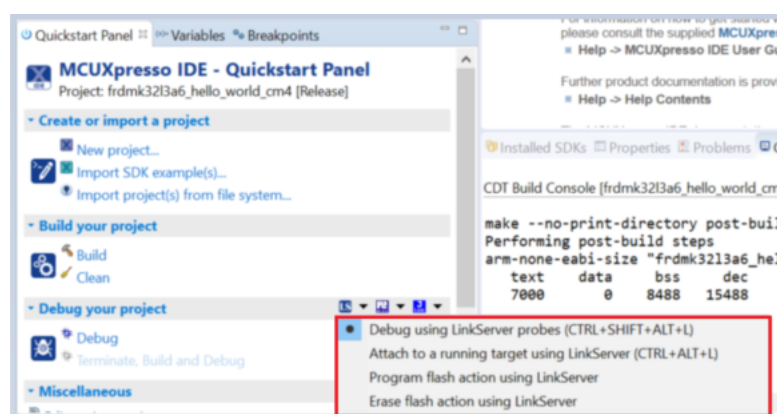

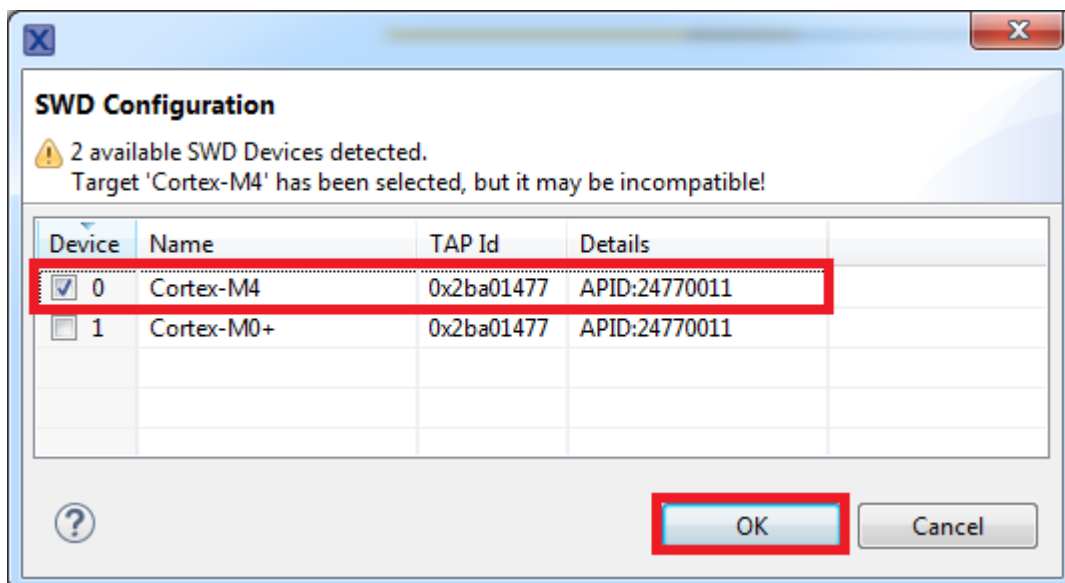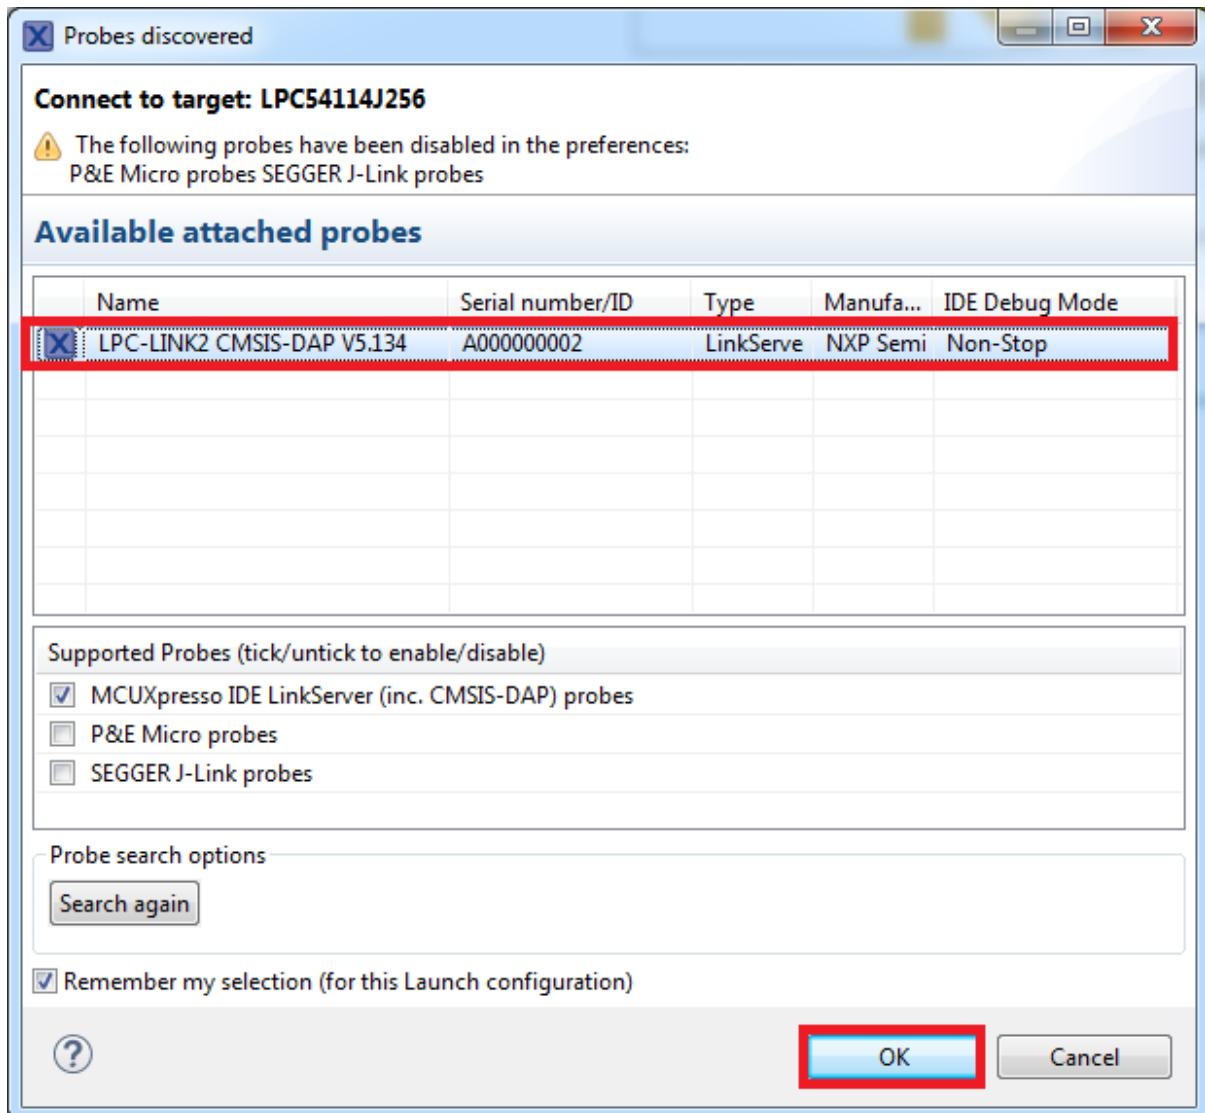

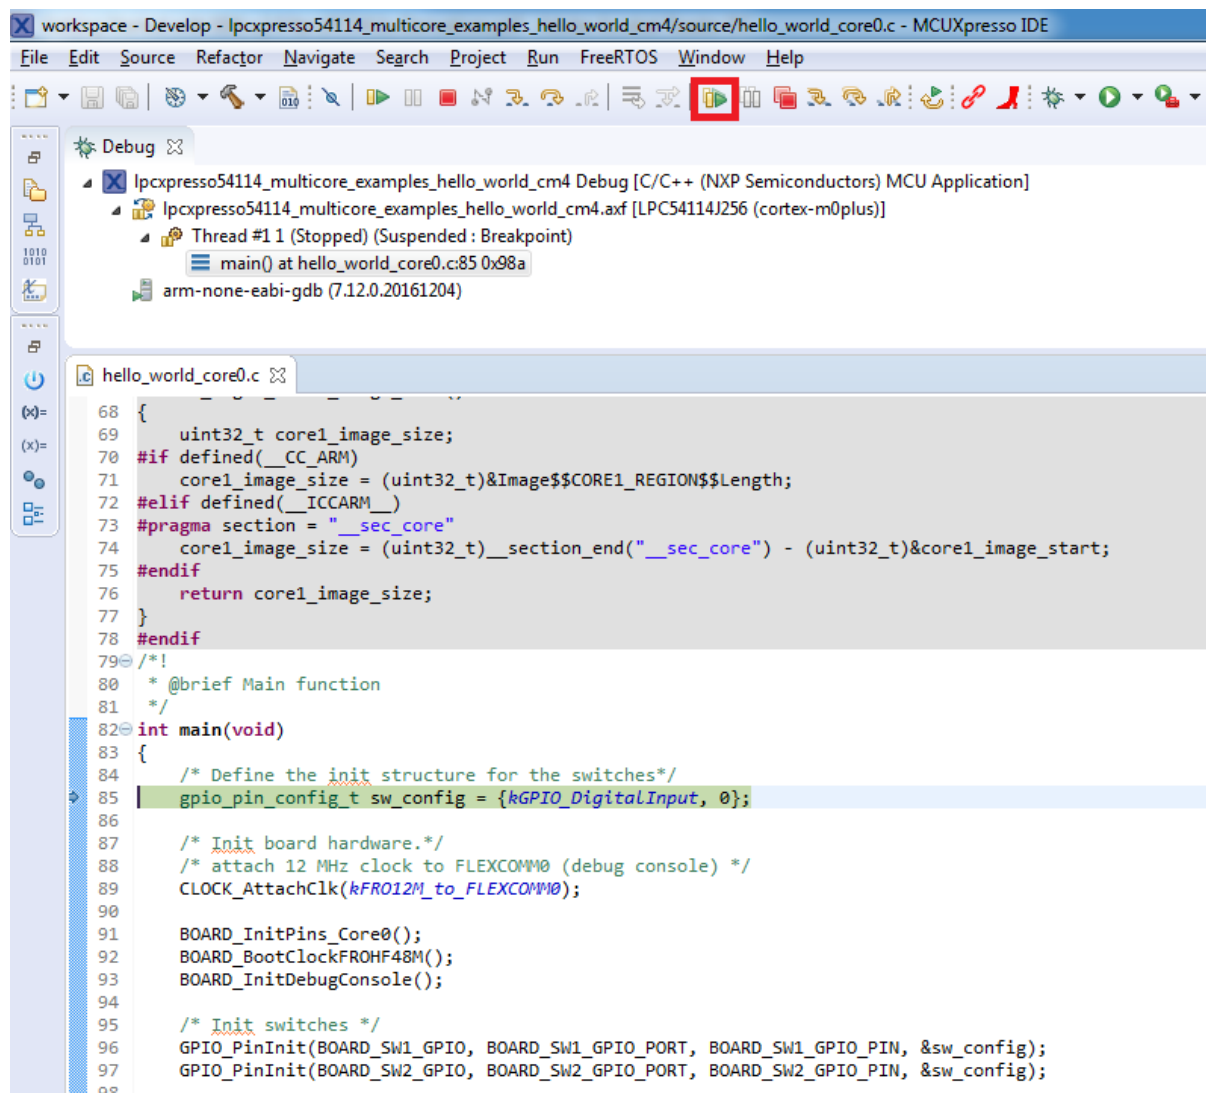



After clicking the “Resume All Debug sessions” button, the `hello_world` multicore application runs and a banner is displayed on the terminal. If this is not the case, check your terminal settings and connections.

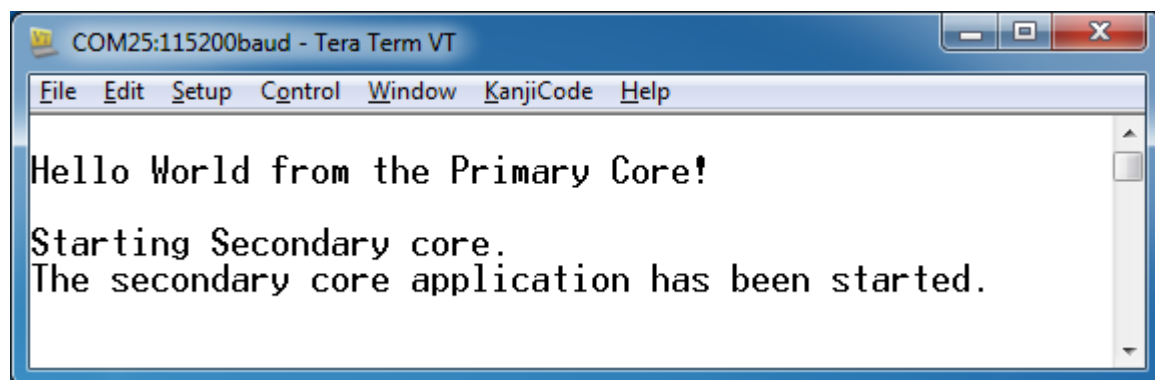


An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and running correctly. It is also possible to debug both sides of the multicore application in parallel. After creating the debug session for the primary core, perform same steps also for the auxiliary core application. Highlight the `lpcxpresso54114_multicore_examples_hello_world_cm0plus` project (multicore slave project) in the Project Explorer. On the Quickstart Panel, click “Debug ‘lpcxpresso54114_multicore_examples_hello_world_cm0plus’ [Debug]” to launch the second debug

session.

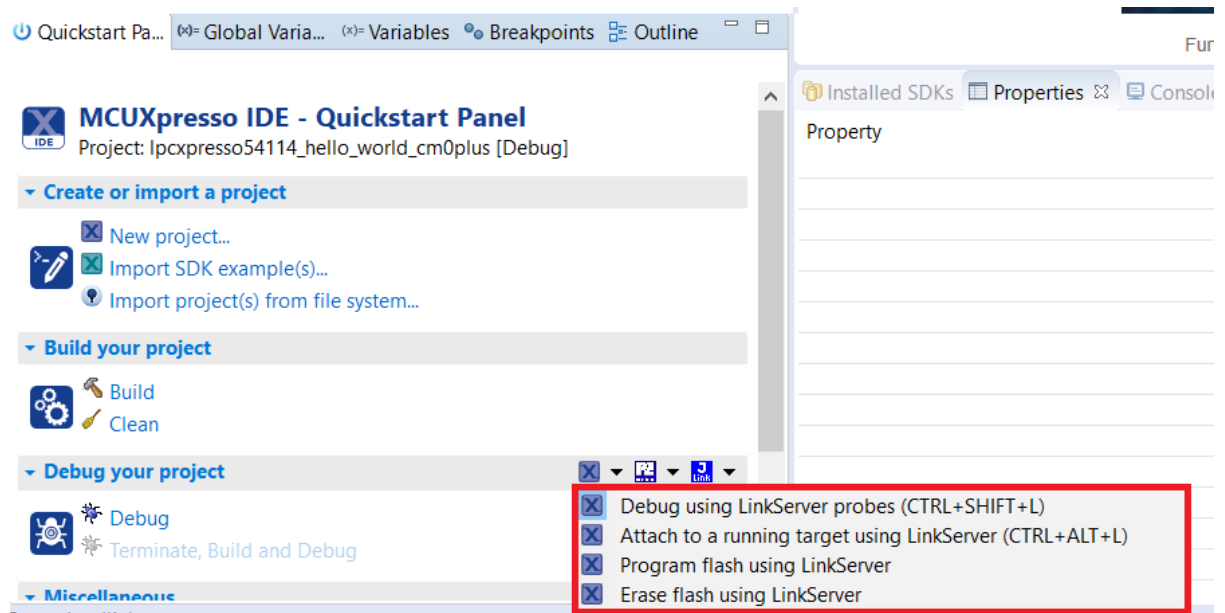


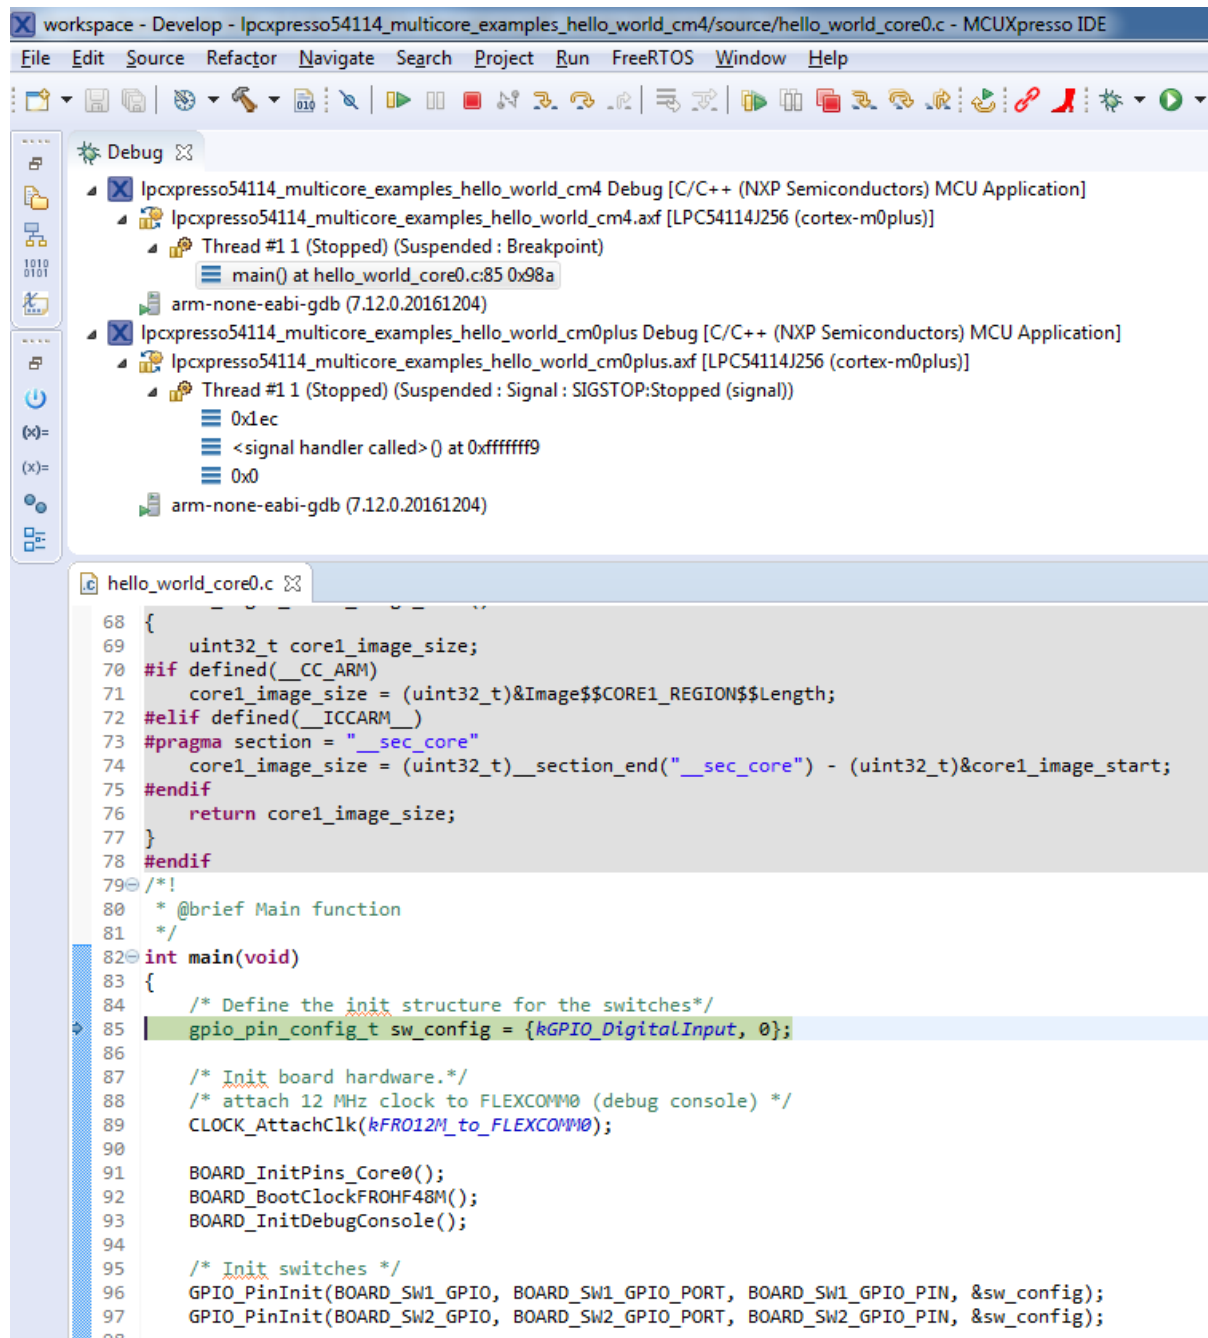


Now, the two debug sessions should be opened, and the debug controls can be used for both debug sessions depending on the debug session selection. Keep the primary core debug session selected by clicking the “Resume” button. The hello_world multicore application then starts running. The primary core application starts the auxiliary core application during runtime, and the auxiliary core application stops at the beginning of the main() function. The debug session of the auxiliary core application is highlighted. After clicking the “Resume” button, it is applied to the auxiliary core debug session. Therefore, the auxiliary core application continues its execution.

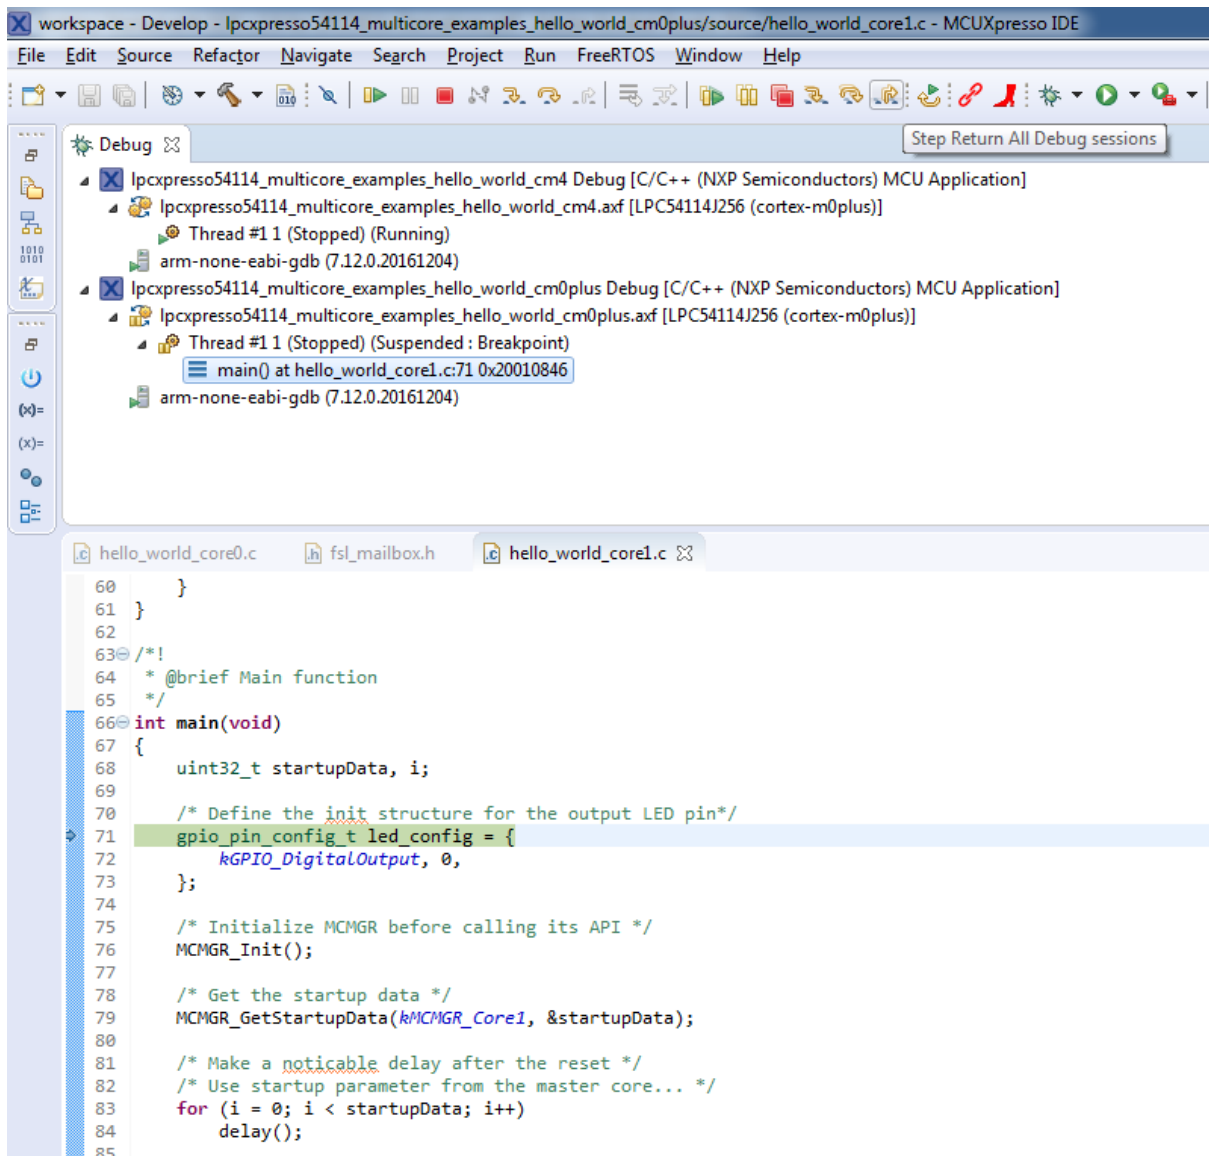


At this point, it is possible to suspend and resume individual cores independently. It is also possible to make synchronous suspension and resumption of both the cores. This is done either by selecting both opened debug sessions (multiple selections) and clicking the “Suspend” / “Resume” control button, or just using the “Suspend All Debug sessions” and the “Resume All Debug sessions” buttons.

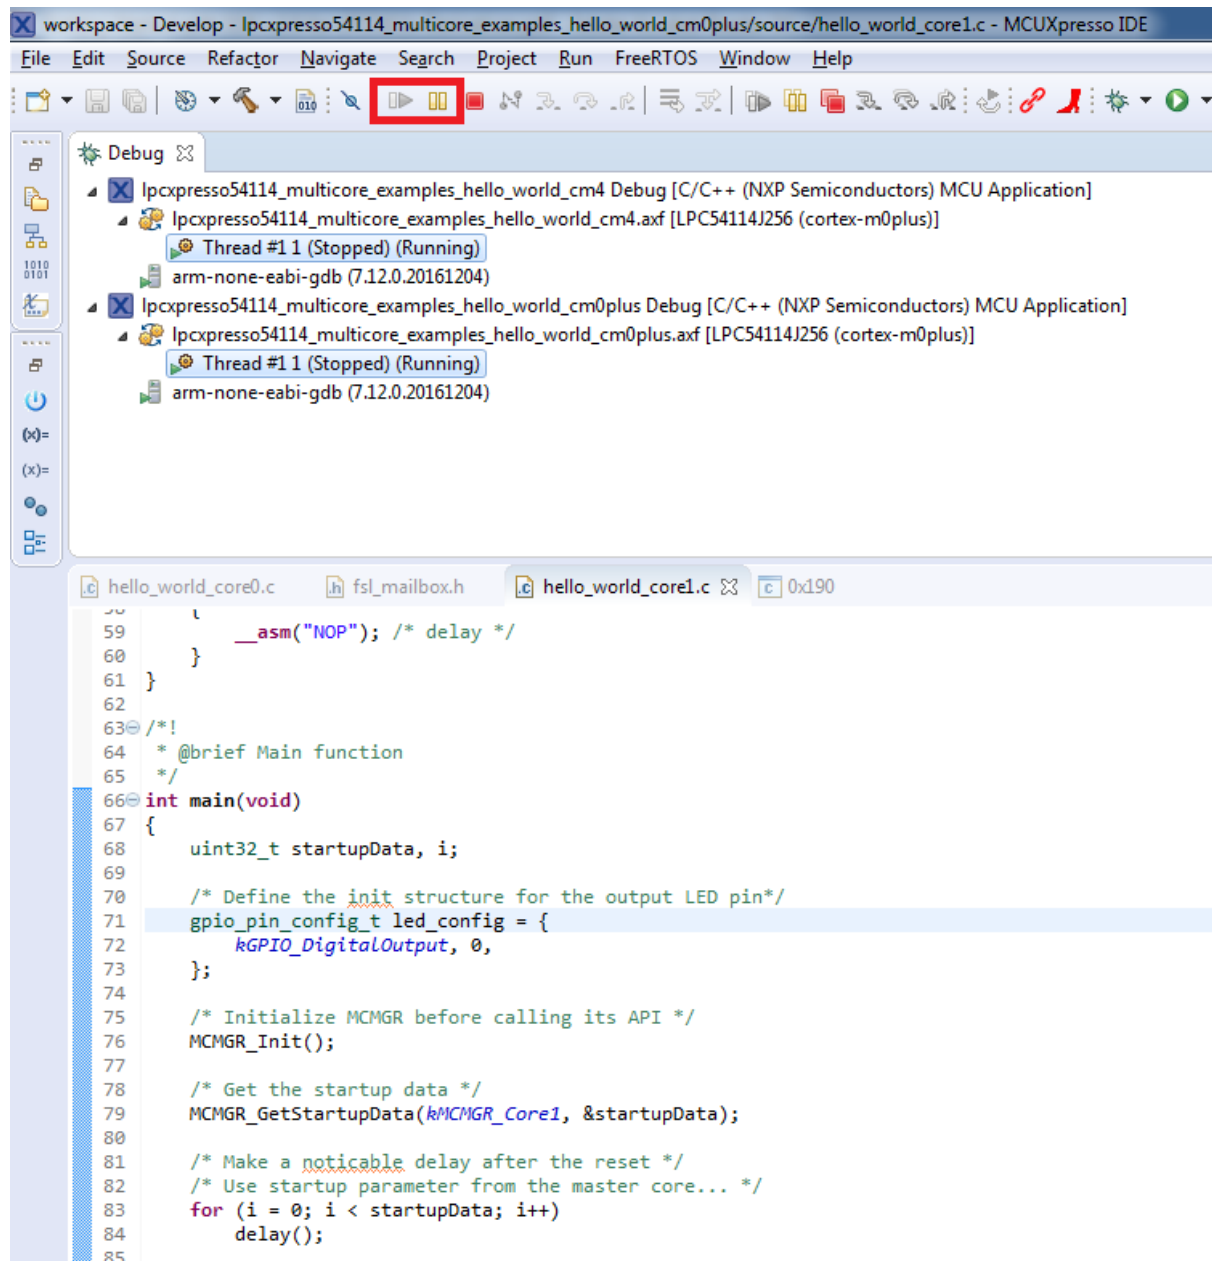

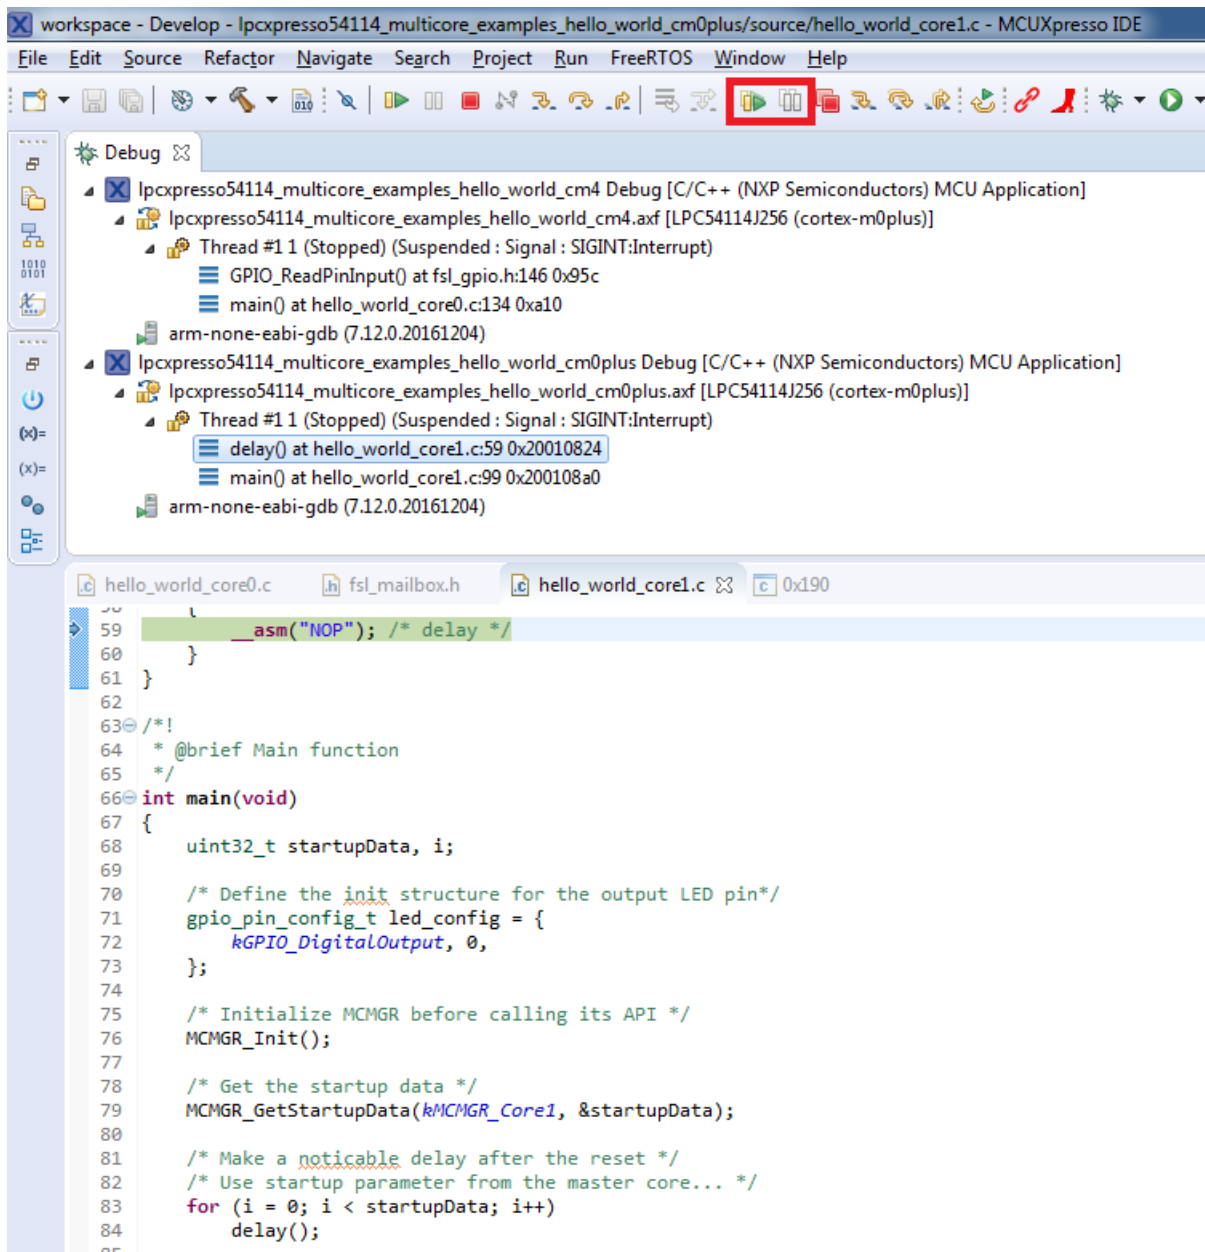


Build a TrustZone example application This section describes the steps required to configure MCUXpresso IDE to build, run, and debug TrustZone example applications. The TrustZone version of the hello_world example application targeted for the MIMXRT595-EVK hardware platform is used as an example, though these steps can be applied to any TrustZone example application in the MCUXpresso SDK.

1. TrustZone examples are imported into the workspace in a similar way as single core applications. When the SDK zip package for MIMXRT595-EVK is installed and available in the **Installed SDKs** view, click **Import SDK example(s)...** on the Quickstart Panel. In the window that appears, expand the **MIMXRT500** folder and select **MIMXRT595S**. Then, select **evkmimxrt595** and click **Next**.
2. Expand the `trustzone_examples/` folder and select `hello_world_s`. Because TrustZone examples are linked together, the non-secure project is automatically imported with the secure project, and there is no need to select it explicitly. Then, click **Finish**.

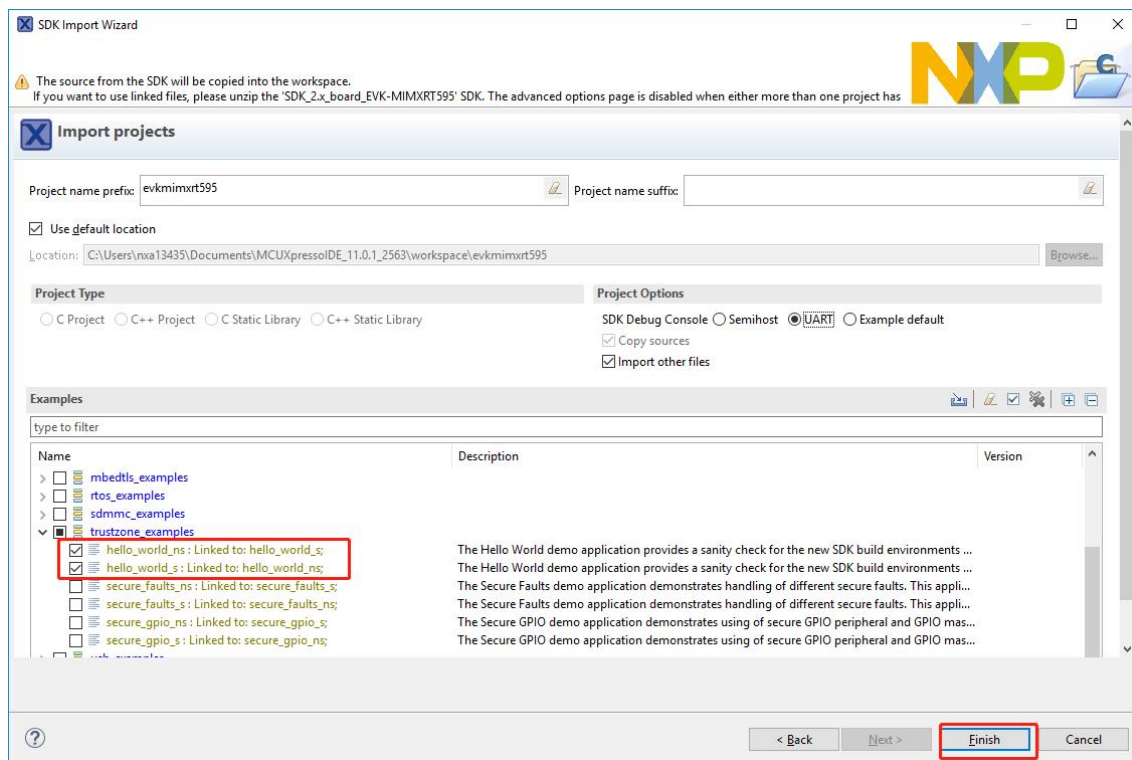


- Now, two projects should be imported into the workspace. To start building the TrustZone application, highlight the `evkmimxrt595_hello_world_s` project (TrustZone master project) in the Project Explorer. Then, choose the appropriate build target, **Debug** or **Release**, by clicking the downward facing arrow next to the hammer icon, as shown in following figure. For this example, select the **Debug** target.

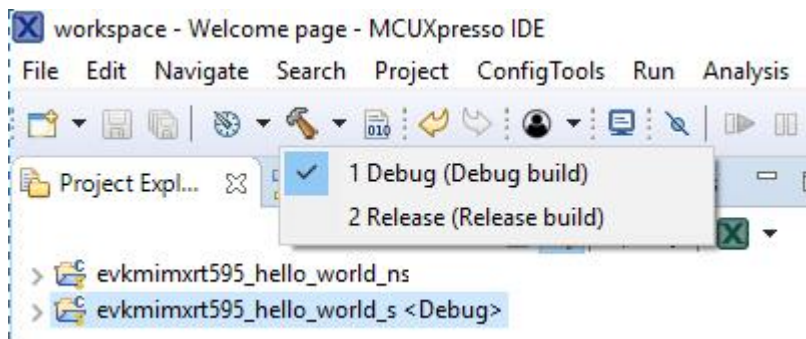


The project starts building after the build target is selected. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library when running the linker. It is not possible to finish the non-secure project linker when the secure project since CMSE library is not ready.

Note: When the **Release** build is requested, it is necessary to change the build configuration of both the secure and non-secure application projects first. To do this, select both projects in the Project Explorer view by clicking to select the first project, then using shift-click or control-click to select the second project. Right click in the Project Explorer view to display the context-sensitive menu and select **Build Configurations > Set Active > Release**. This is also possible by using the menu item of **Project > Build Configuration > Set Active > Release**. After switching to the **Release** build configuration. Build the application for the secure project first.

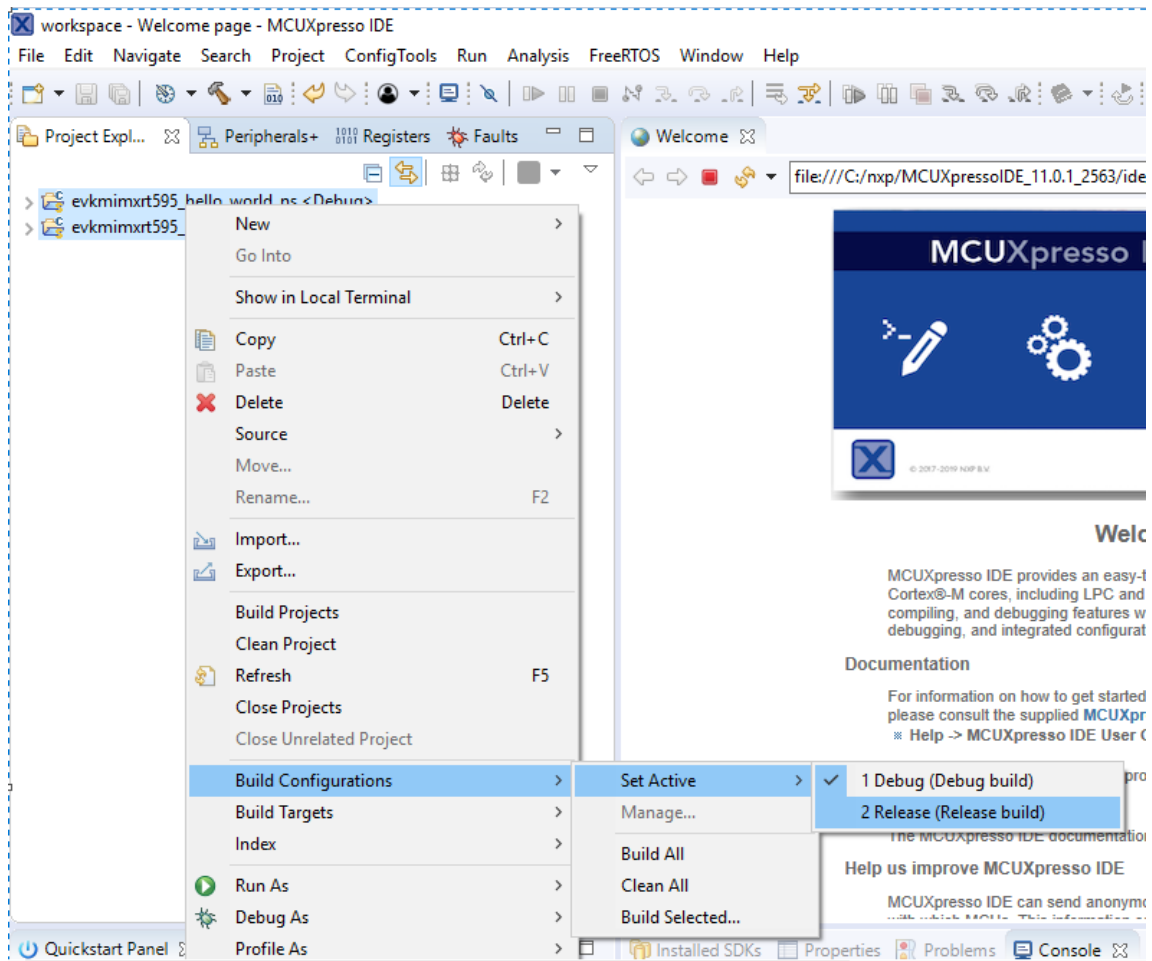

Run a TrustZone example application To download and run the application, perform all steps as described in **Run an example application**. These steps are common for single core, and TrustZone applications, ensuring `<board_name>_hello_world_s` is selected for debugging.

In the Quickstart Panel, click **Debug** to launch the second debug session.

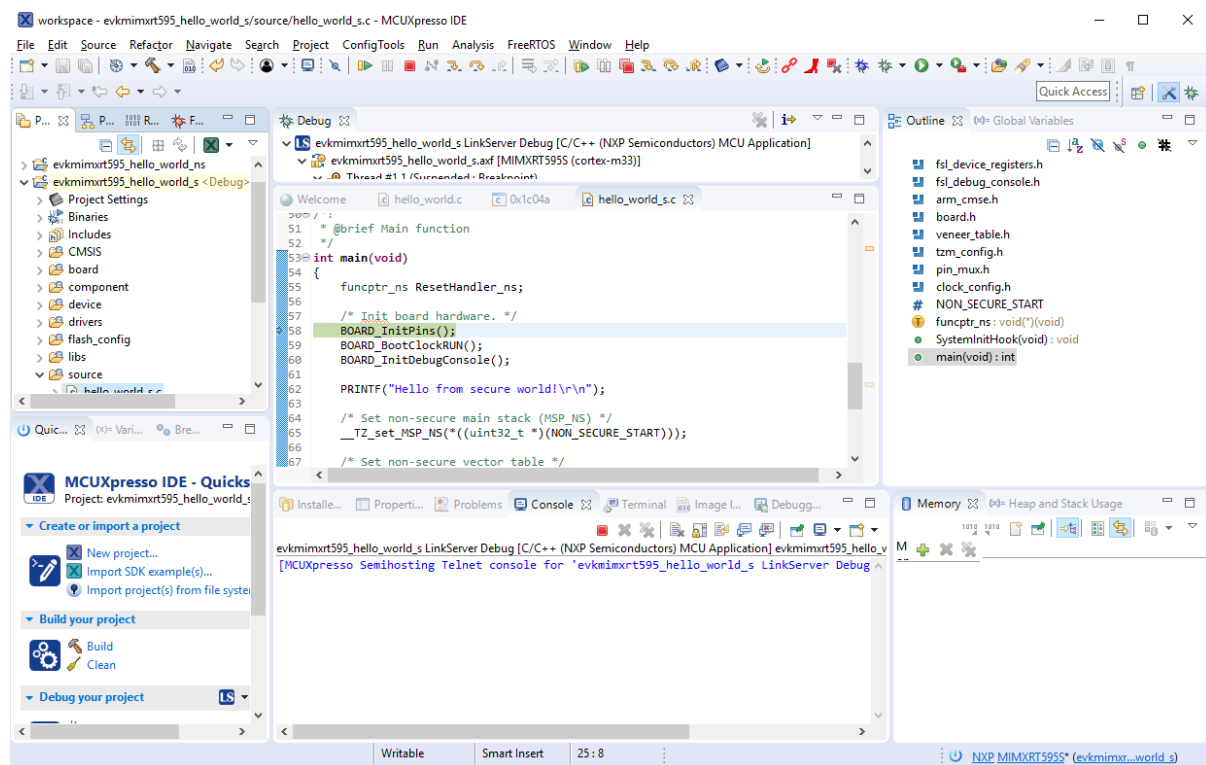

Now, the TrustZone sessions should be opened. Click **Resume**. The `hello_world` TrustZone application then starts running, and the secure application starts the non-secure application during runtime.

Run a demo application using IAR

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Note: IAR Embedded Workbench for Arm version 8.32.3 is used in the following example, and the IAR toolchain should correspond to the latest supported version, as described in the *MCUXpresso SDK Release Notes*.

Build an example application Do the following steps to build the `hello_world` example application.


1. Open the desired demo application workspace. Most example application workspace files can be located using the following path:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/iar
```


Other example applications may have additional folders in their path.

2. Select the desired build target from the drop-down menu.

For this example, select **hello_world – debug**.

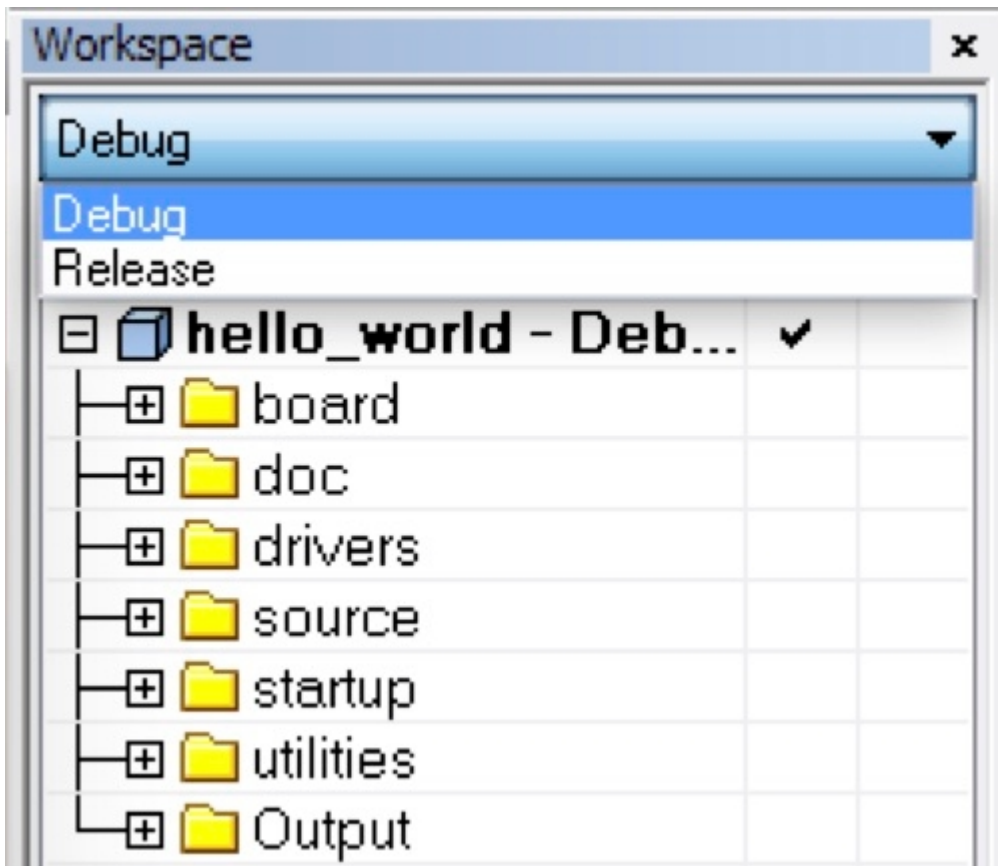


- To build the demo application, click **Make**, highlighted in red in following figure.

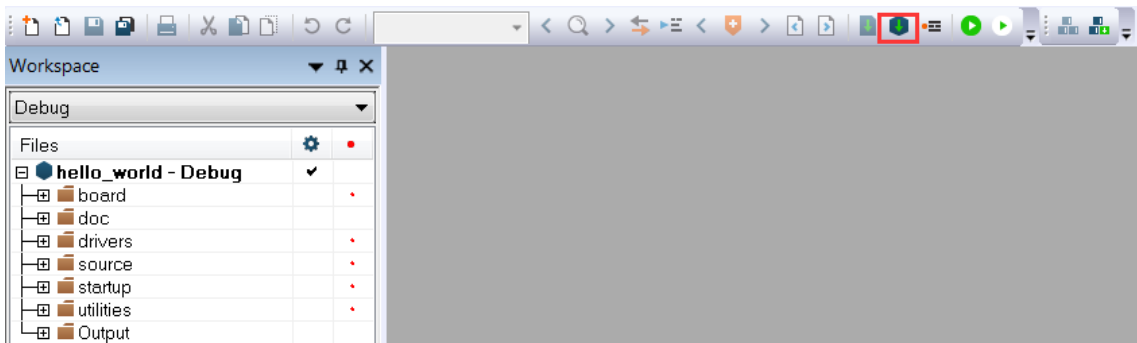

- The build completes without errors.

Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable.
- Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug COM port (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

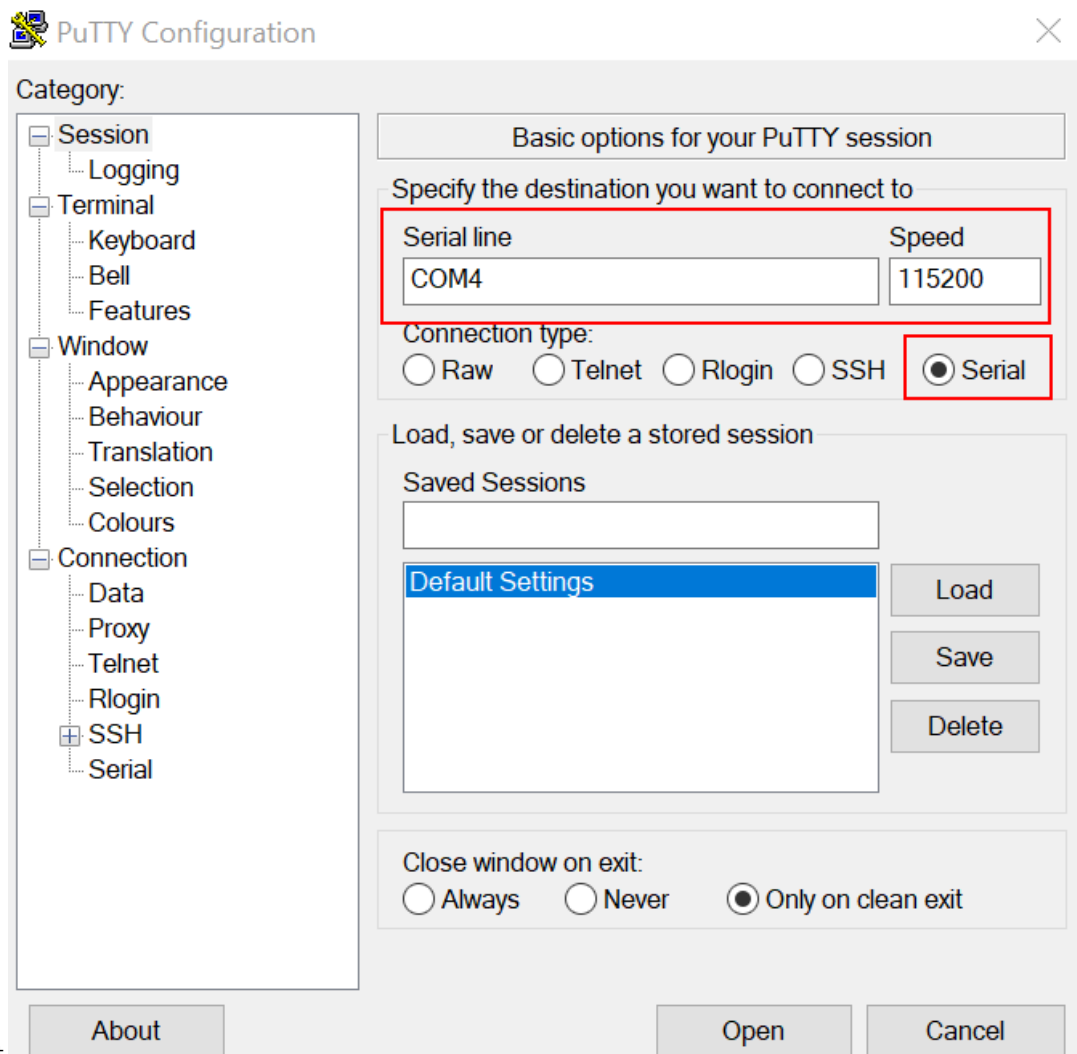


4. 1 stop bit

4. In IAR, click the **Download and Debug** button to download the application to the target.



5. The application is then downloaded to the target and automatically runs to the main() function.

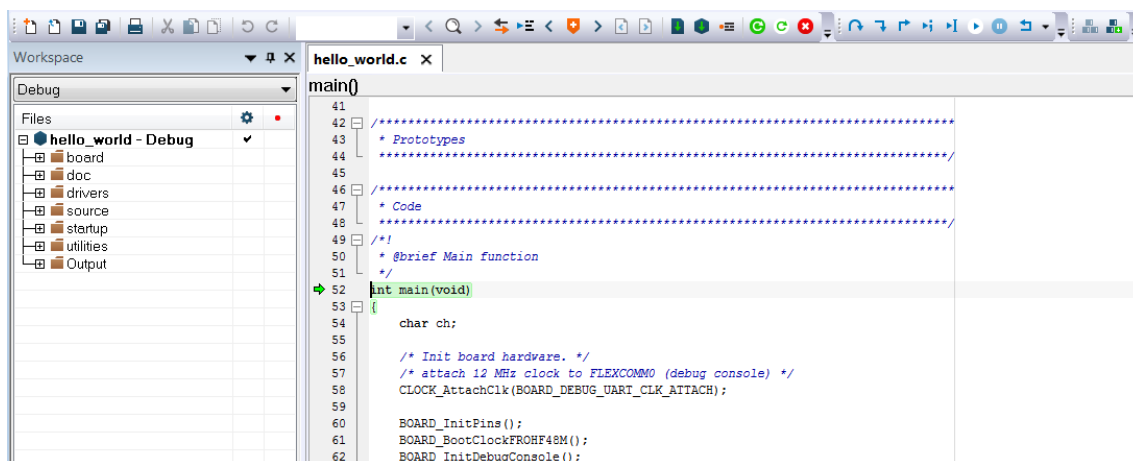

6. Run the code by clicking the **Go** button.

7. The `hello_world` application is now running and a banner is displayed on the terminal. If it does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/iar
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World IAR workspaces are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/iar/hello_world_cm0plus.  
↔eww
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/iar/hello_world_cm4.eww
```

Build both applications separately by clicking the **Make** button. Build the application for the auxiliary core (cm0plus) first, because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger handles flashing both primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core and dual-core applications in IAR.

After clicking the “Download and Debug” button, the auxiliary core project is opened in the separate EWARM instance. Both the primary and auxiliary images are loaded into the device flash memory and the primary core application is executed. It stops at the default C language entry point in the `*main()*` function.


Run both cores by clicking the “Start all cores” button to start the multicore application.



During the primary core code execution, the auxiliary core is released from the reset. The `hello_world` multicore application is now running and a banner is displayed on the terminal. If this does not appear, check the terminal settings and connections.

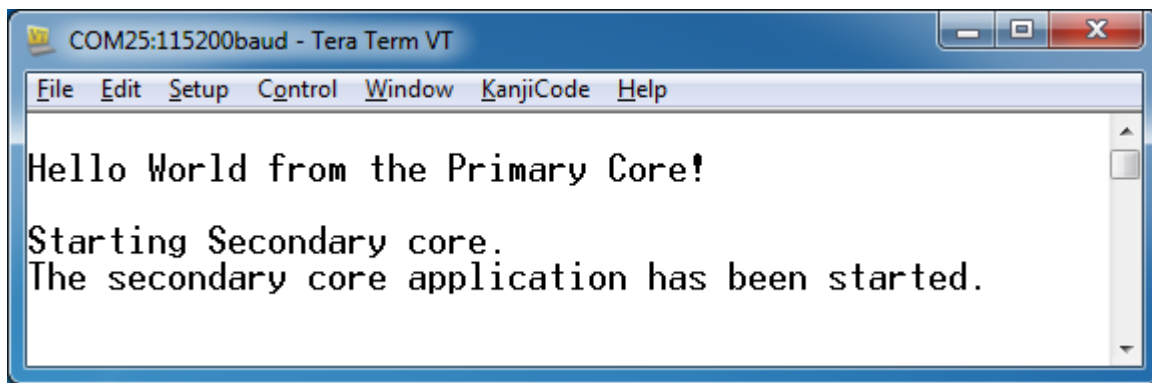

An LED controlled by the auxiliary core starts flashing, indicating that the auxiliary core has been released from the reset and is running correctly. When both cores are running, use the “Stop all cores”, and “Start all cores” control buttons to stop or run both cores simultaneously.



Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/
↔<application_name>_ns/iar
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/iar/
↔<application_name>_s/iar
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World IAR workspaces are located in this folder:


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/iar/hello_world_
↔ns.eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world_s.
↔eww
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/iar/hello_world.eww
```


This project `hello_world.eww` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another. Build both applications separately by clicking **Make**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since the CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project since CMSE library is not ready.

Run a TrustZone example application The secure project is configured to download both secure and non-secure output files, so debugging can be fully managed from the secure project. To download and run the TrustZone application, switch to the secure application project and perform steps 1 – 4 as described in **Run an example application**. These steps are common for both single core, and TrustZone applications in IAR. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device memory, and the secure application is executed. It stops at the `Reset_Handler` function.

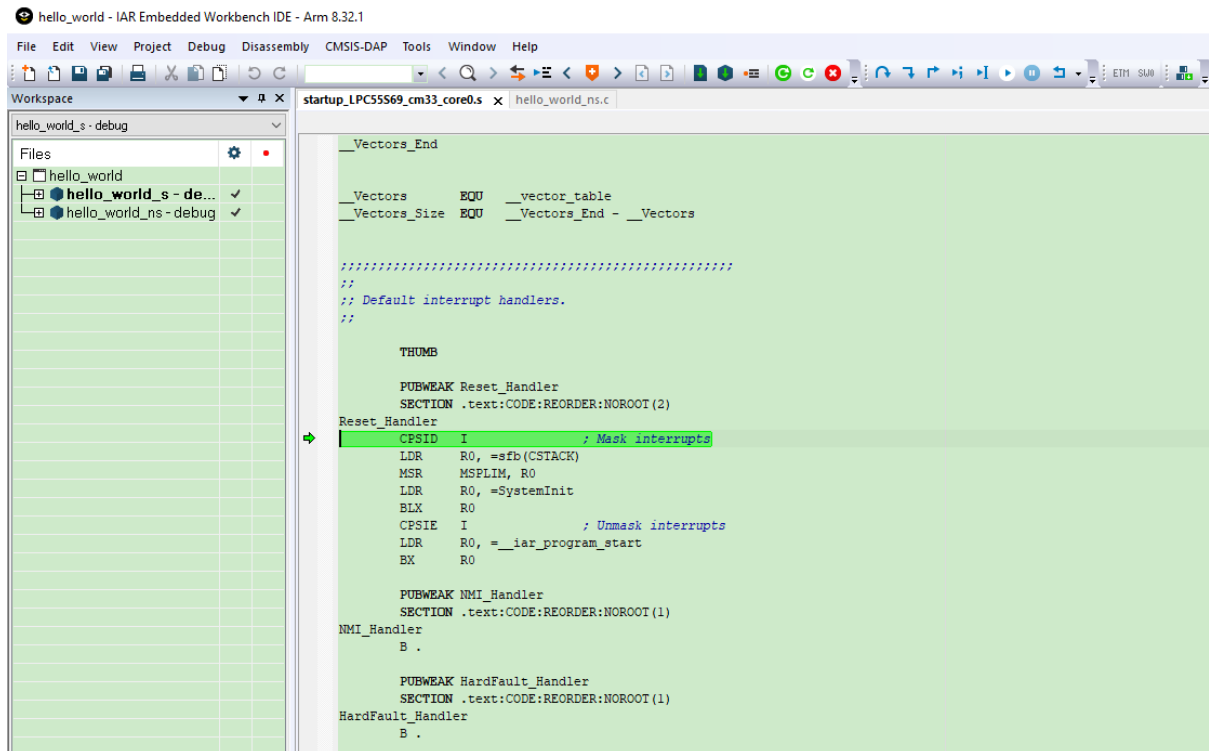


Run the code by clicking **Go** to start the application.

The TrustZone hello_world application is now running and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

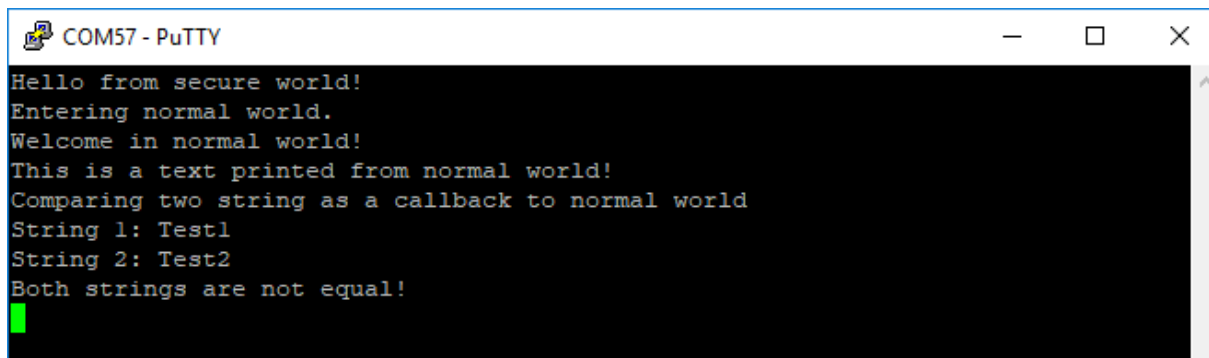

Note: If the application is running in RAM (debug/release build target), in **Options**>**Debugger > Download** tab, disable **Use flash loader(s)**. This can avoid the `__ns` download issue on i.MXRT500.

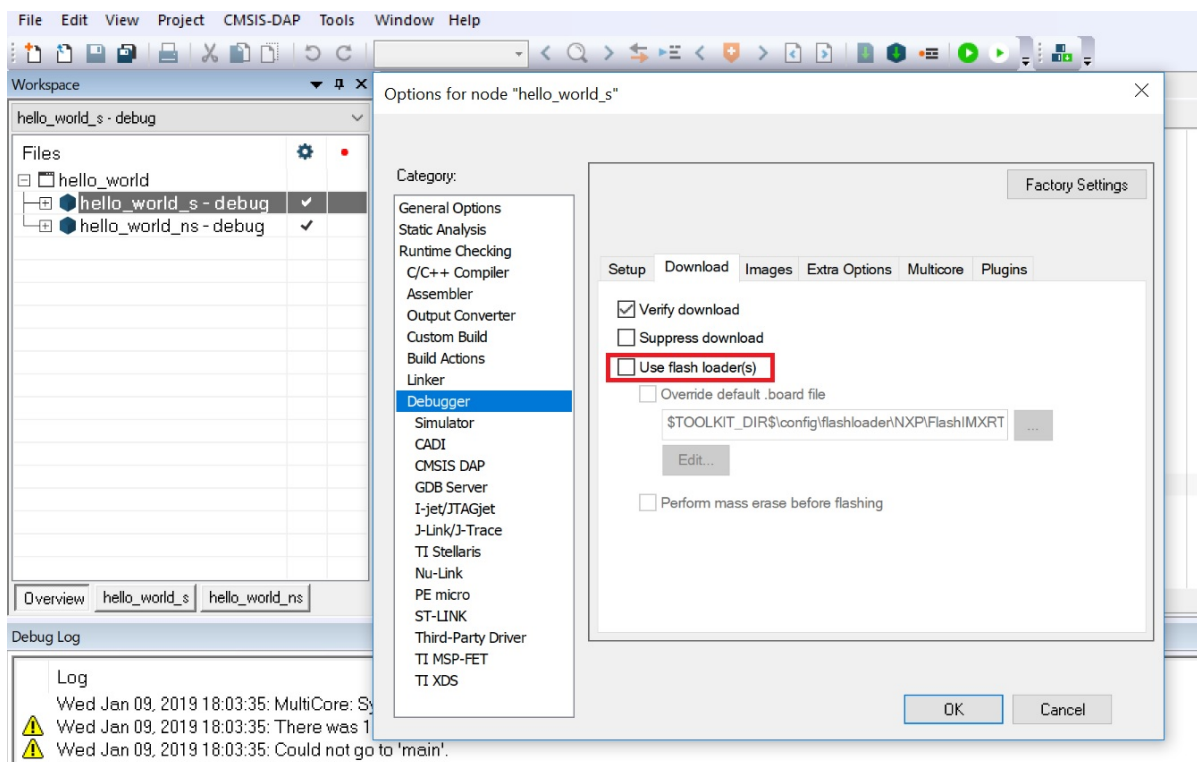


Run a demo using Keil MDK/µVision

This section describes the steps required to build, run, and debug example applications provided in the MCUXpresso SDK.

Install CMSIS device pack After the MDK tools are installed, Cortex Microcontroller Software Interface Standard (CMSIS) device packs must be installed to fully support the device from a debug perspective. These packs include things such as memory map information, register definitions, and flash programming algorithms. Follow these steps to install the appropriate CMSIS pack.

1. Open the MDK IDE, which is called µVision. In the IDE, select the **Pack Installer** icon.

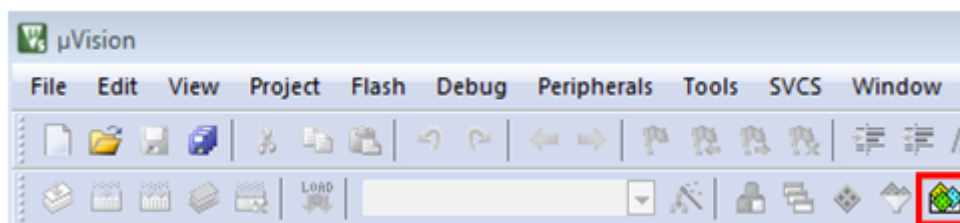

2. After the installation finishes, close the Pack Installer window and return to the µVision IDE.

Build an example application

1. Open the desired example application workspace in:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/mdk
```

The workspace file is named as <demo_name>.uvmpw. For this specific example, the actual path is:


- To build the demo project, select **Rebuild**, highlighted in red.



- The build completes without errors.


Run an example application To download and run the application, perform these steps:

- Ensure the host driver for the debugger firmware has been installed. See [On-board debugger](#).
- Connect the development platform to your PC via USB cable using USB connector.
- Open the terminal application on the PC, such as PuTTY or TeraTerm and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 - 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in the board.h file)
 - No parity
 - 8 data bits

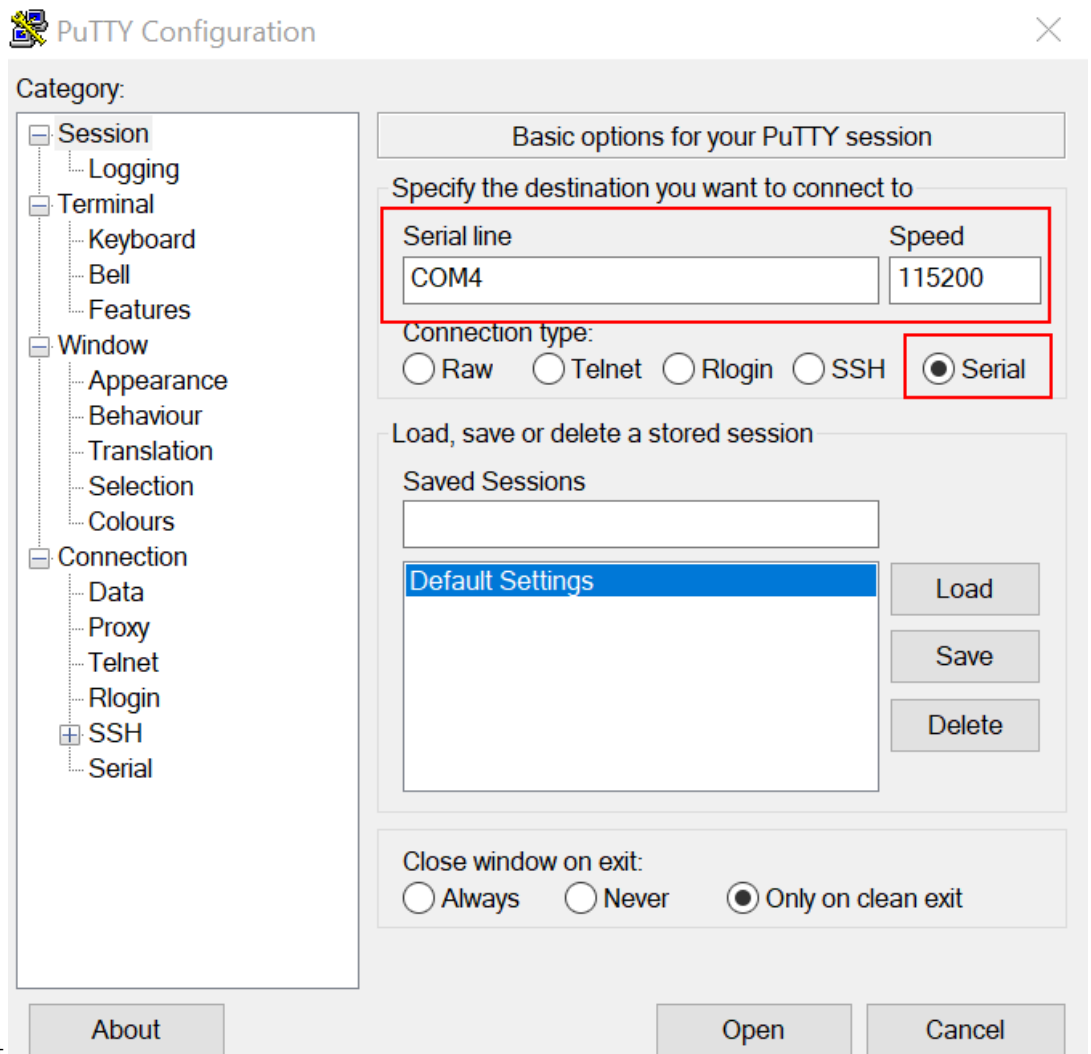


- 1 stop bit


- In μ Vision, after the application is built, click the **Download** button to download the application to the target.

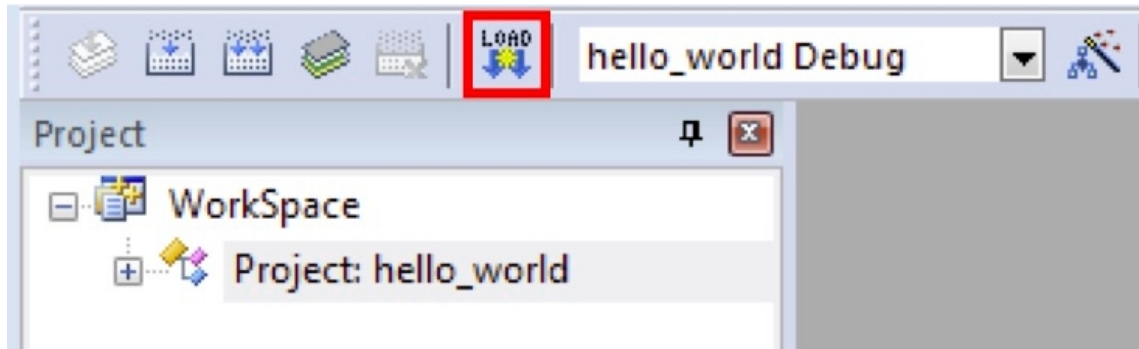

5. After clicking the **Download** button, the application downloads to the target and is running. To debug the application, click the **Start/Stop Debug Session** button, highlighted in red.

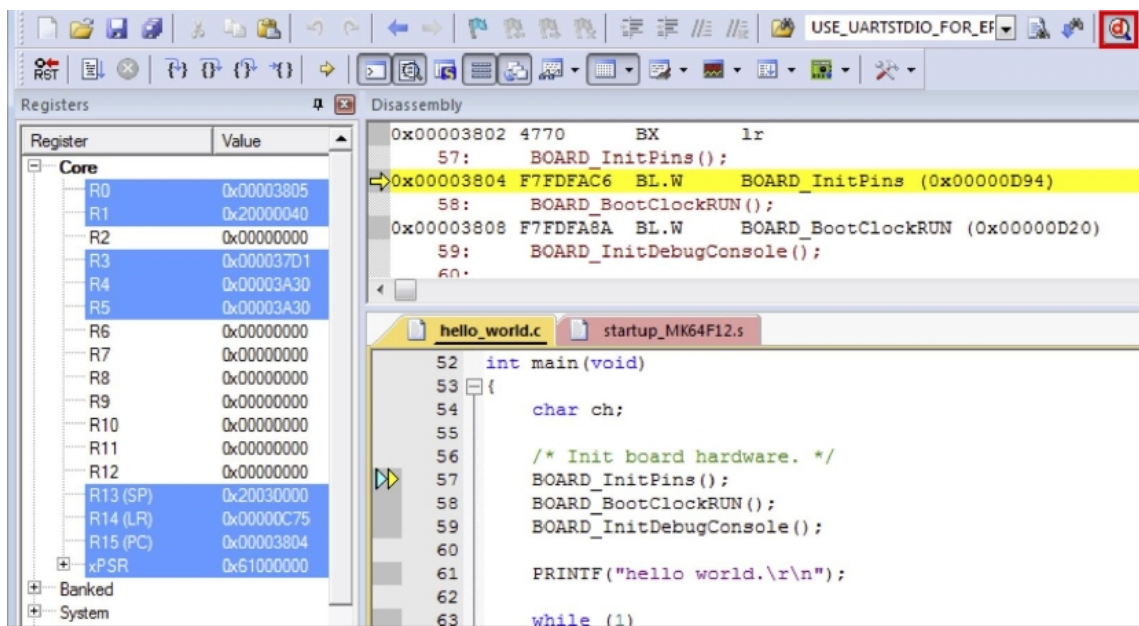

6. Run the code by clicking the **Run** button to start the application.

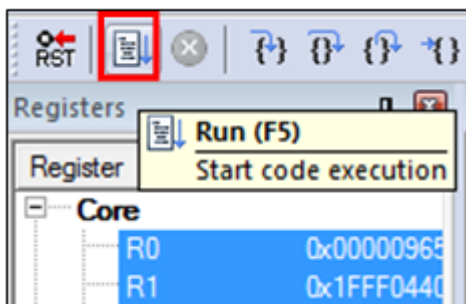

The `hello_world` application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



Build a multicore example application This section describes the steps to build and run a dual-core application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/mdk
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World Keil MSDK/ μ Vision workspaces are located in this folder:


```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/mdk/hello_world_
↪cm0plus.uvmpw
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/mdk/hello_world_cm4.uvmpw
```

Build both applications separately by clicking the **Rebuild** button. Build the application for the auxiliary core (cm0plus) first because the primary core application project (cm4) must know the auxiliary core application binary when running the linker. It is not possible to finish the primary core linker when the auxiliary core application binary is not ready.


Run a multicore example application The primary core debugger flashes both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 – 5 as described in **Run an example application**. These steps are common for both single-core and dual-core applications in μ Vision.

Both the primary and the auxiliary image is loaded into the device flash memory. After clicking the “Run” button, the primary core application is executed. During the primary core code execution, the auxiliary core is released from the reset. The hello_world multicore application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.

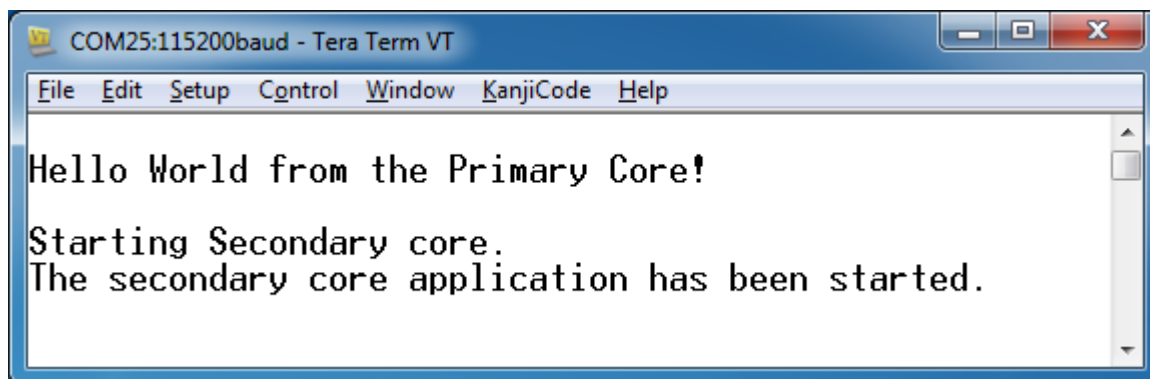

An LED controlled by the auxiliary core starts flashing indicating that the auxiliary core has been released from the reset and is running correctly.

Attach the running application of the auxiliary core by opening the auxiliary core project in the second μ Vision instance and clicking the “Start/Stop Debug Session” button. After this, the second debug session is opened and the auxiliary core application can be debugged.

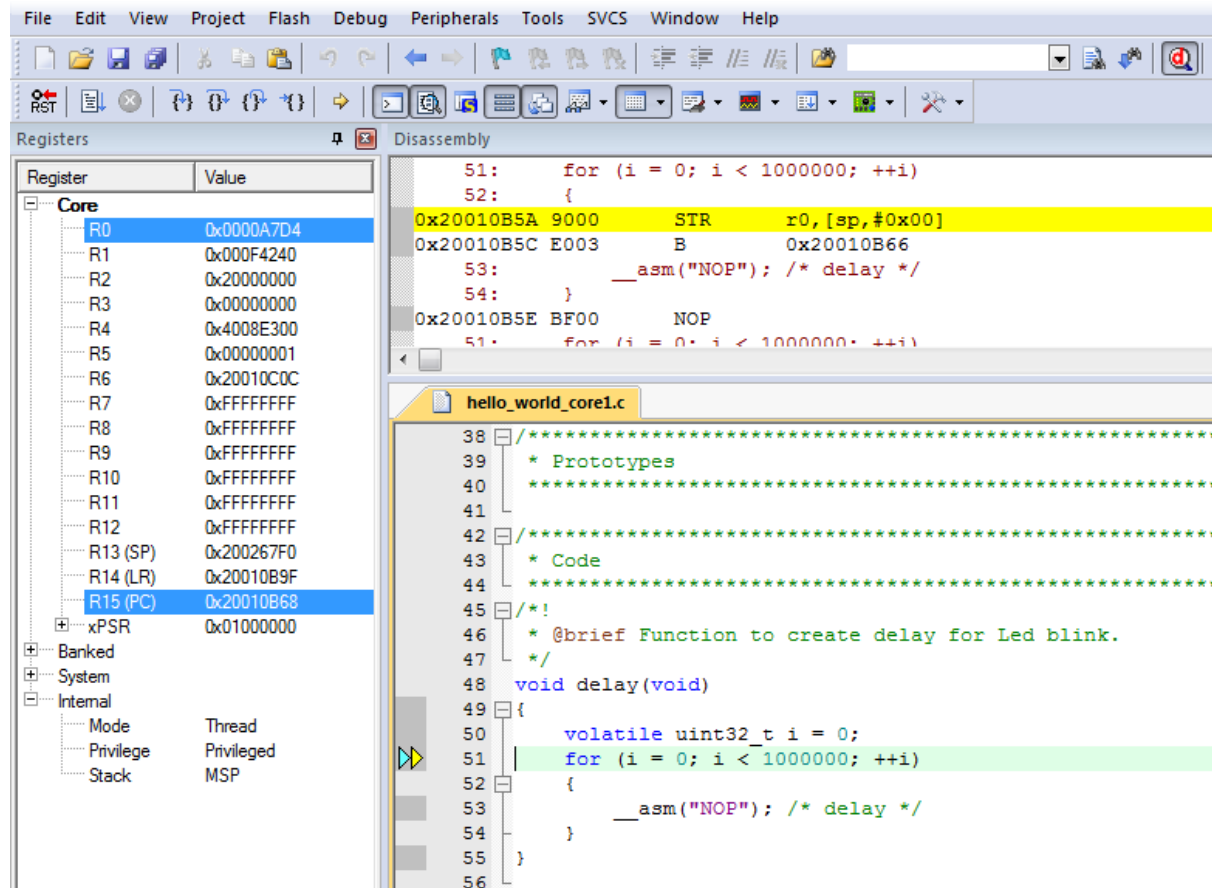

Arm describes multicore debugging using the NXP LPC54114 Cortex-M4/M0+ dual-core processor and Keil uVision IDE in Application Note 318 at www.keil.com/appnotes/docs/apnt_318.asp. The associated video can be found [here](#).

Build a TrustZone example application This section describes the particular steps that must be done in order to build and run a TrustZone application. The demo applications workspace files are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_ns/
↪mdk
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/<application_name>_s/
↪mdk
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World Keil MSDK/ μ Vision workspaces are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/mdk/hello_world_
↪ns.uvmpw
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world_s.
↪uvmpw
```


```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/mdk/hello_world.  
↪ uvmpw
```

This project `hello_world.uvmpw` contains both secure and non-secure projects in one workspace and it allows the user to easily transition from one project to another.

Build both applications separately by clicking **Rebuild**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because CMSE library is not ready.


Run a TrustZone example application The secure project is configured to download both secure and non-secure output files so debugging can be fully managed from the secure project.

To download and run the TrustZone application, switch to the secure application project and perform steps as described in **Run an example application**. These steps are common for single core, dual-core, and TrustZone applications in μ Vision. After clicking **Download and Debug**, both the secure and non-secure images are loaded into the device flash memory, and the secure application is executed. It stops at the `main()` function.

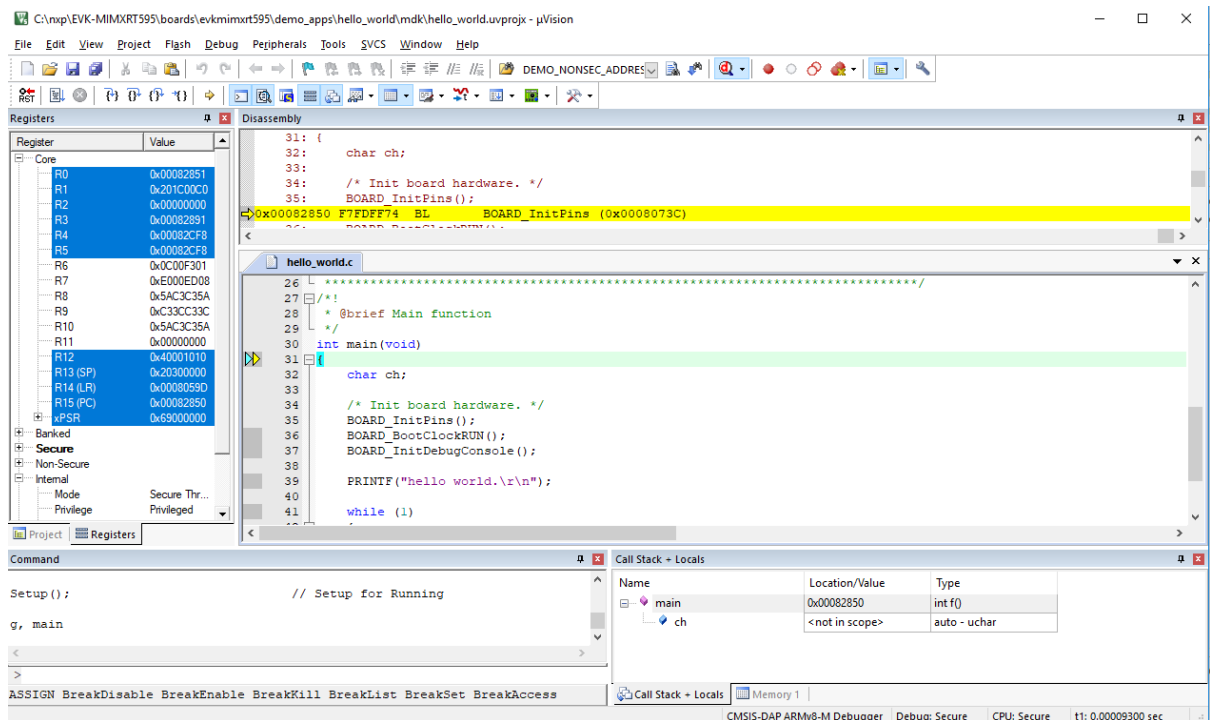

Run the code by clicking **Run** to start the application.

The `hello_world` application is now running and a banner is displayed on the terminal. If not, check your terminal settings and connections.

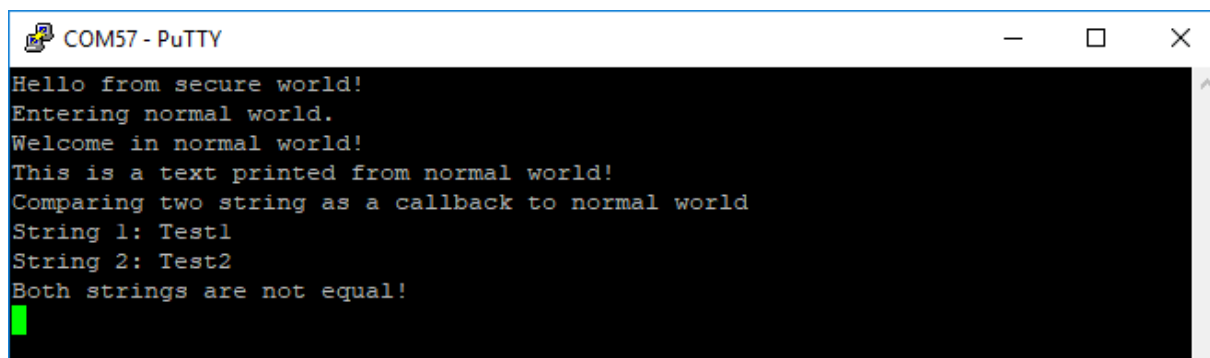

Run a demo using Arm GCC

This section describes the steps to configure the command-line Arm GCC tools to build, run, and debug demo applications and necessary driver libraries provided in the MCUXpresso SDK. The `hello_world` demo application is targeted which is used as an example.

Set up toolchain This section contains the steps to install the necessary components required to build and run an MCUXpresso SDK demo application with the Arm GCC toolchain, as supported by the MCUXpresso SDK. There are many ways to use Arm GCC tools, but this example focuses on a Windows operating system environment.


Install GCC Arm Embedded tool chain Download and run the installer from GNU Arm Embedded Toolchain. This is the actual toolset (in other words, compiler, linker, and so on). The GCC toolchain should correspond to the latest supported version, as described in **MCUXpresso SDK Release Notes**.

Install MinGW (only required on Windows OS) The Minimalist GNU for Windows (MinGW) development tools provide a set of tools that are not dependent on third-party C-Runtime DLLs (such as Cygwin). The build environment used by the MCUXpresso SDK does not use the MinGW build tools, but does leverage the base install of both MinGW and MSYS. MSYS provides a basic shell with a Unix-like interface and tools.


1. Download the latest MinGW mingw-get-setup installer from [MinGW](#).
2. Run the installer. The recommended installation path is `C:\MinGW`, however, you may install to any location.

Note: The installation path cannot contain any spaces.

3. Ensure that the **mingw32-base** and **msys-base** are selected under **Basic Setup**.

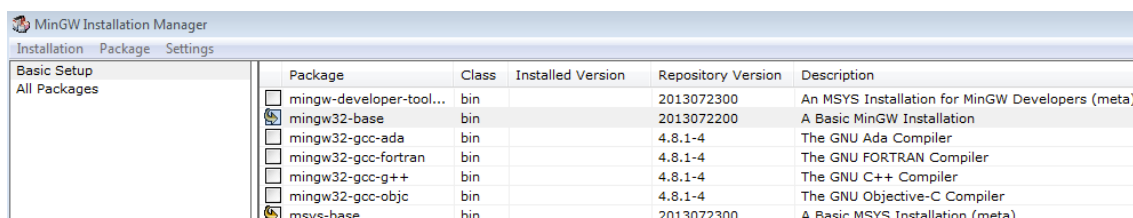

4. In the **Installation** menu, click **Apply Changes** and follow the remaining instructions to complete the installation.

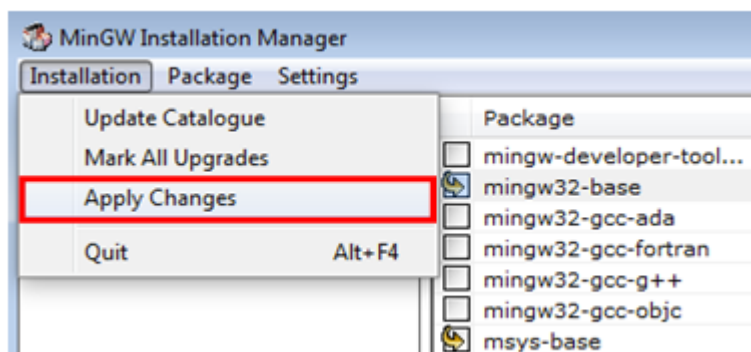


5. Add the appropriate item to the Windows operating system path environment variable. It can be found under **Control Panel->System and Security->System->Advanced System Settings** in the **Environment Variables...** section. The path is:


```
<mingw_install_dir>\bin
```

Assuming the default installation path, C:\MinGW, an example is shown below. If the path is not set correctly, the toolchain will not work.

Note: If you have C:\MinGW\msys\x.x\bin in your PATH variable (as required by Kinetis SDK 1.0.0), remove it to ensure that the new GCC build system works correctly.

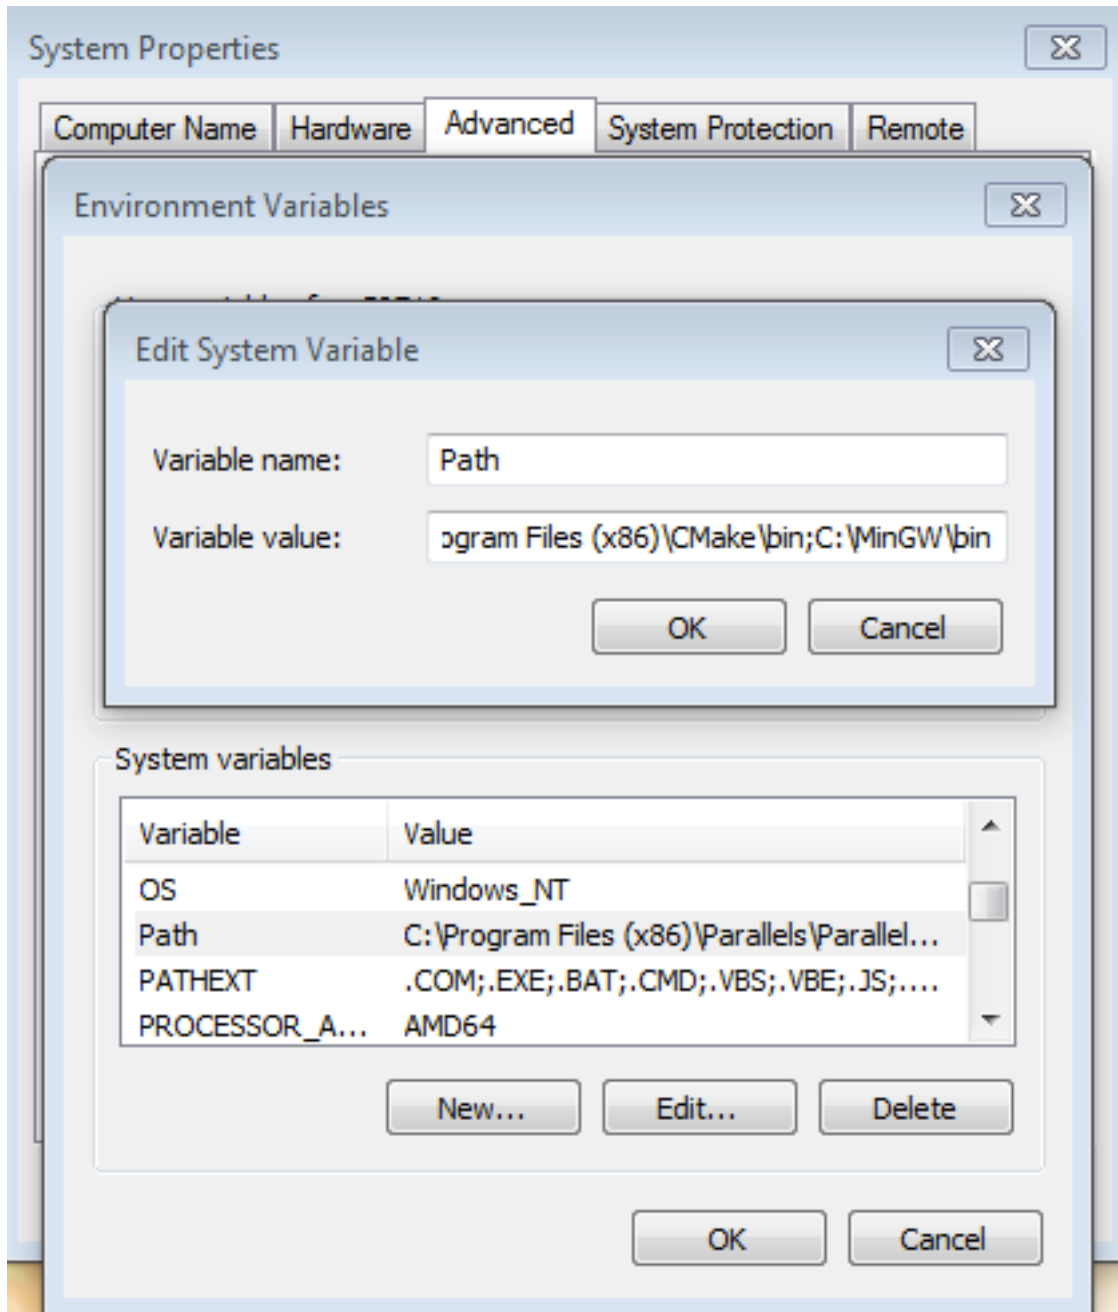


Add a new system environment variable for ARMGCC_DIR Create a new *system* environment variable and name it as ARMGCC_DIR. The value of this variable should point to the Arm GCC Embedded tool chain installation path. For this example, the path is:

```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major
```

See the installation folder of the GNU Arm GCC Embedded tools for the exact pathname of your installation.

Short path should be used for path setting, you could convert the path to short path by running command for %I in (.) do echo %~sI


```
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>for %I in (.) do echo %~sI
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major>echo C:\PROGRA~2\GNUTOO~1\82018~1
C:\PROGRA~2\GNUTOO~1\82018~1
```

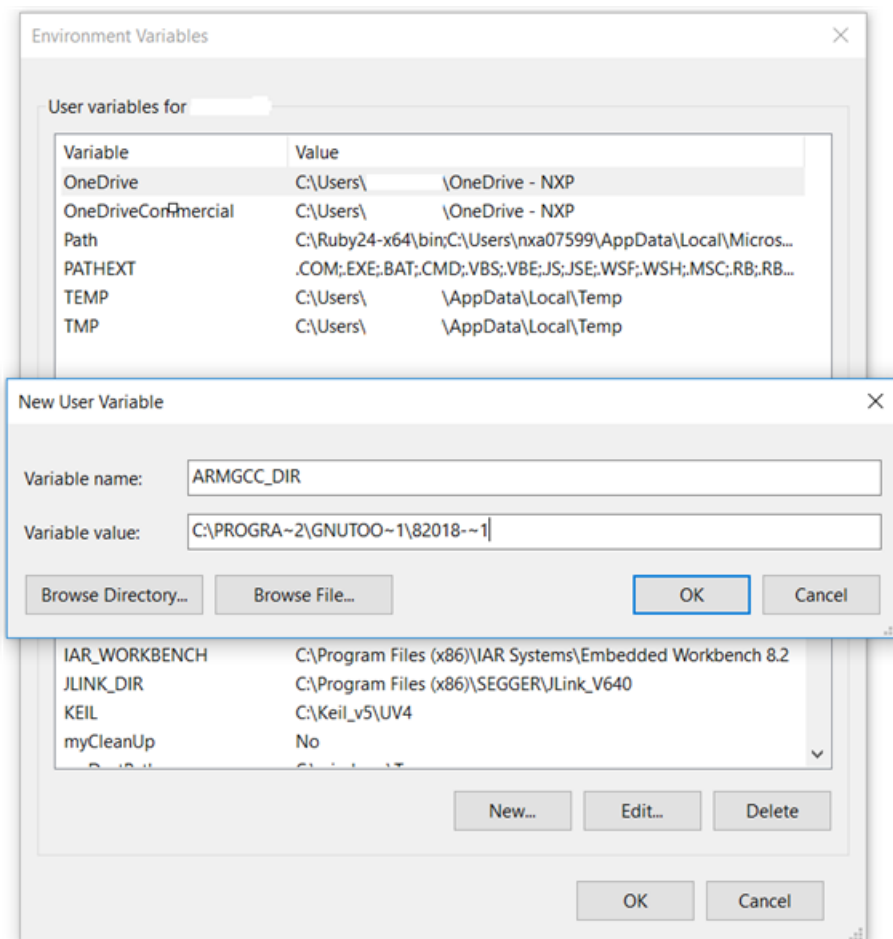

Install CMake

Windows OS

1. Download CMake 3.0.x from www.cmake.org/cmake/resources/software.html.
2. Install CMake, ensuring that the option **Add CMake to system PATH** is selected when installing. The user chooses to select whether it is installed into the PATH for all users or just the current user. In this example, it is installed for all users.

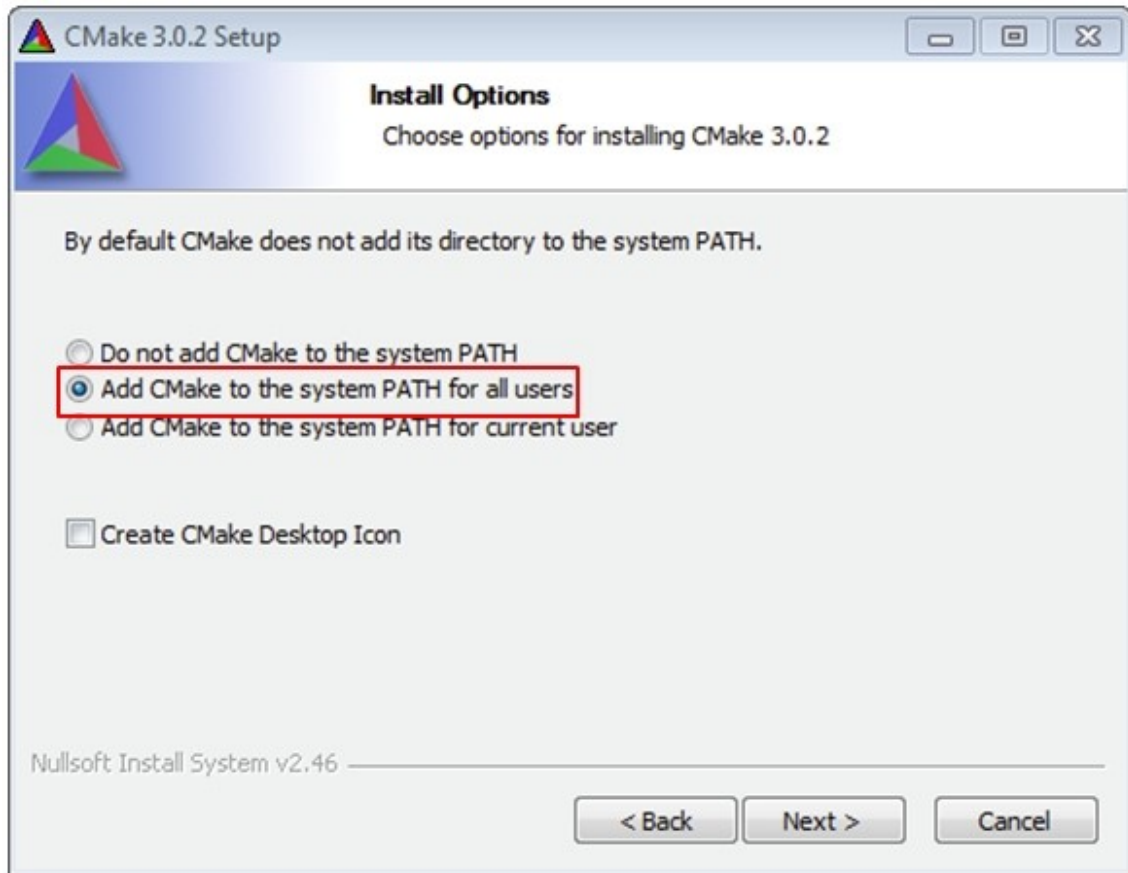

3. Follow the remaining instructions of the installer.
4. You may need to reboot your system for the PATH changes to take effect.
5. Make sure `sh.exe` is not in the Environment Variable PATH. This is a limitation of `mingw32-make`.


Linux OS It depends on the distributions of Linux Operation System. Here we use Ubuntu as an example.

Open shell and use following commands to install `cmake` and its version. Ensure the `cmake` version is above 3.0.x.

```
$ sudo apt-get install cmake
$ cmake --version
```

Build an example application To build an example application, follow these steps.

1. Open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system **Start** menu, go to **Programs > GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

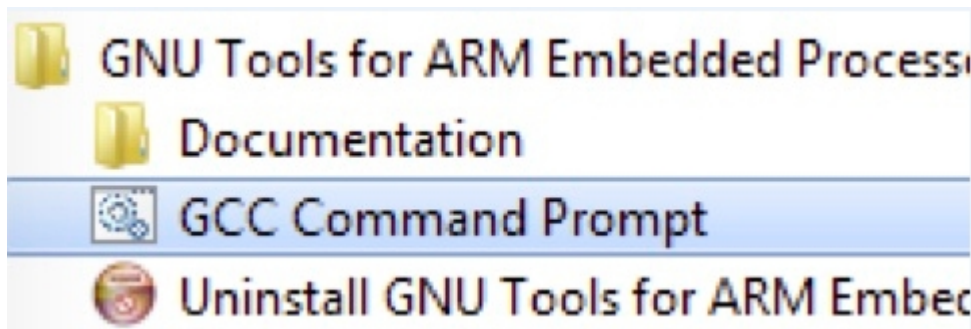

2. Change the directory to the example application project directory which has a path similar to the following:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc
```

For this example, the exact path is:

Note: To change directories, use the `cd` command.

3. Type **build_debug.bat** on the command line or double click on **build_debug.bat** file in Windows Explorer to build it. The output is as shown in following figure.


```
[ 84%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_smc.c.obj
[ 92%] Building C object CMakeFiles/hello_world.elf.dir/C:/nxp/SDK_2.0_FRDM-K64F
/devices/MK64F12/drivers/fsl_clock.c.obj
[100%] Linking C executable debug\hello_world.elf
[100%] Built target hello_world.elf

C:\nxp\SDK_2.0_FRDM-K64F\boards\frdmk64f\demo_apps\hello_world\armgcc>IF "" == "
" <pause >
Press any key to continue . . .
```

Run an example application This section describes steps to run a demo application using J-Link GDB Server application. To install J-Link host driver and update the on-board debugger firmware to Jlink firmware, see [On-board debugger](#).

After the J-Link interface is configured and connected, follow these steps to download and run the demo applications:

1. Connect the development platform to your PC via USB cable between the on-board debugger USB connector and the PC USB connector. If using a standalone J-Link debug pod, connect it to the SWD/JTAG connector of the board.
2. Open the terminal application on the PC, such as PuTTY or TeraTerm, and connect to the debug serial port number (to determine the COM port number, see [How to determine COM port](#)). Configure the terminal with these settings:
 1. 115200 or 9600 baud rate, depending on your board (reference BOARD_DEBUG_UART_BAUDRATE variable in board.h file)
 2. No parity
 3. 8 data bits
 4. 1 stop bit

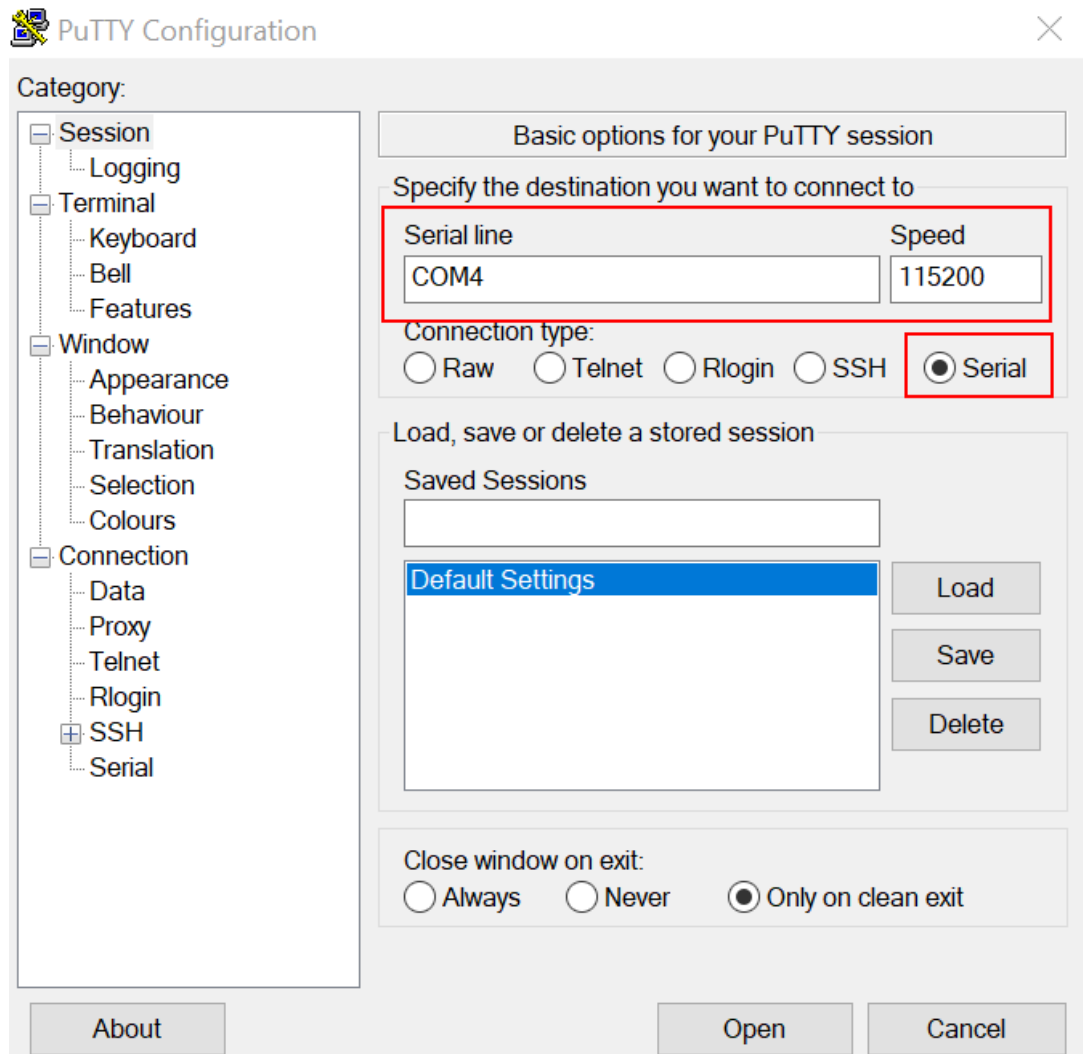


- To launch the application, open the Windows **Start** menu and select **Programs > SEGGER > J-Link <version> J-Link GDB Server**.


Note: It is assumed that the J-Link software is already installed.

The **SEGGER J-Link GDB Server Config** settings dialog appears.


- Make sure to check the following options.
 - Target interface:** The debug connection on board uses internal SWD signaling. In case of a wrong setting J-Link is unable to communicate with device under test.
 - Script file:** If required, a J-Link init script file can be used for board initialization. The file with the “.jlinkscript” file extension is located in the <install_dir>/boards/<board_name>/ directory.
 - Under the **Server settings**, check the GDB port for connection with the gdb target remote command. For more information, see step 9.
 - There is a command line version of J-Link GDB server “JLinkGDBServerCL.exe”. Typical path is C:\Program Files\SEGGER\JLink\. To start the J-Link GDB server with the same settings as are selected in the UI, you can use these command line options.

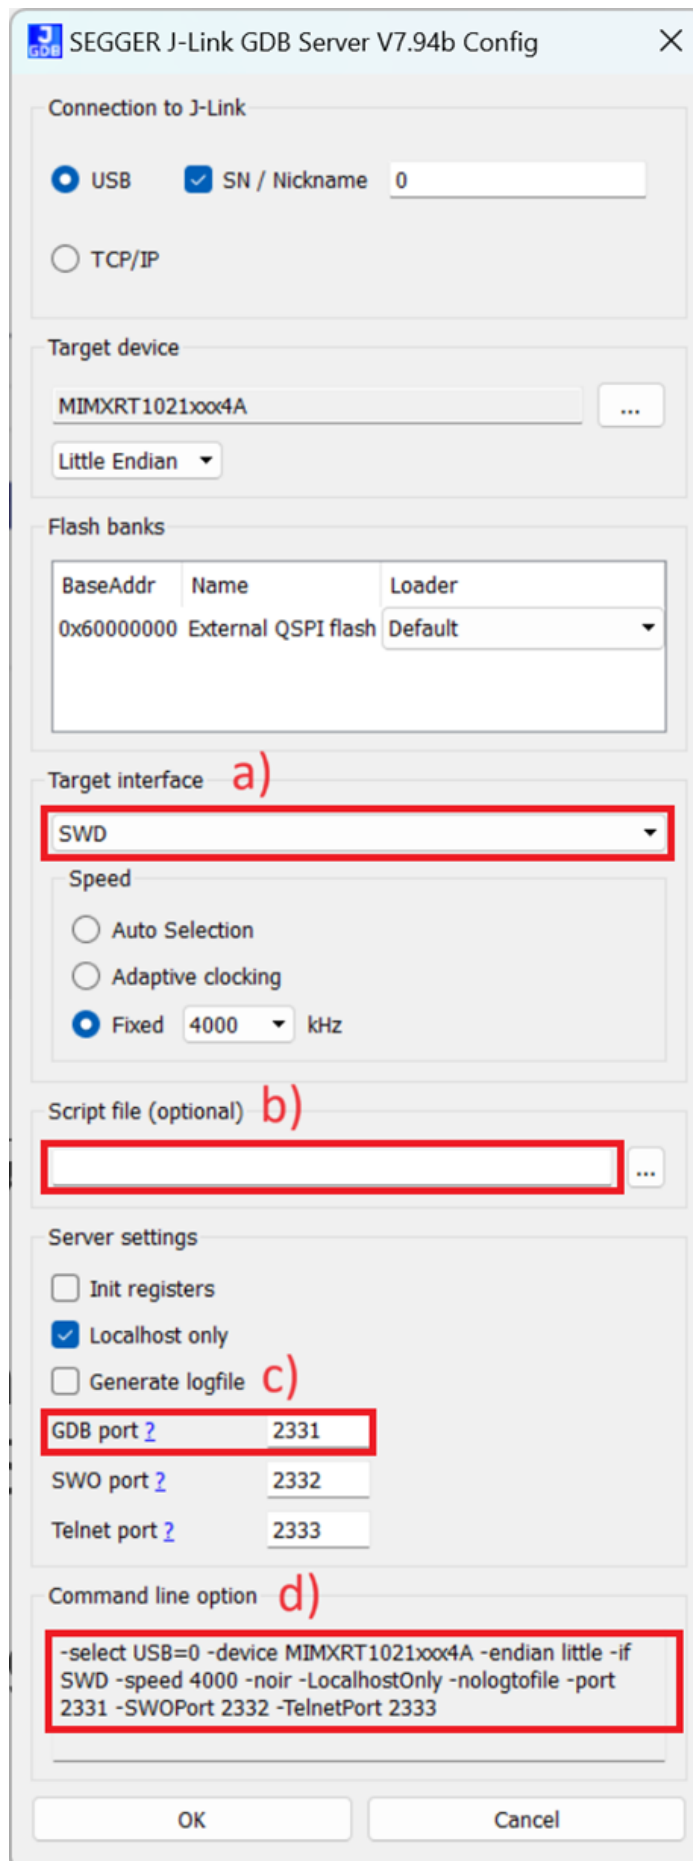

5. After it is connected, the screen should look like this figure:

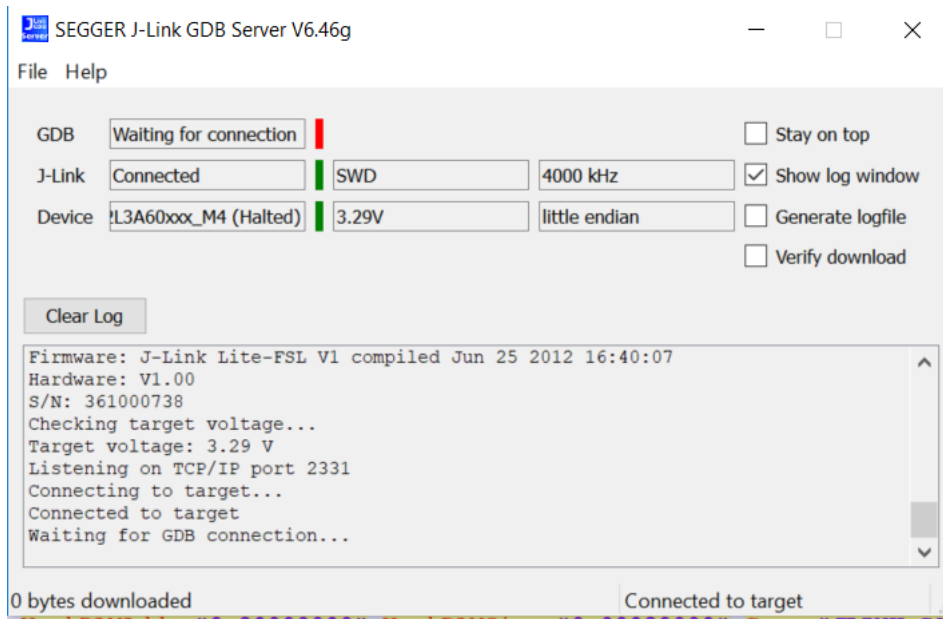

6. If not already running, open a GCC Arm Embedded tool chain command window. To launch the window, from the Windows operating system Start menu, go to **Programs - GNU Tools Arm Embedded <version>** and select **GCC Command Prompt**.

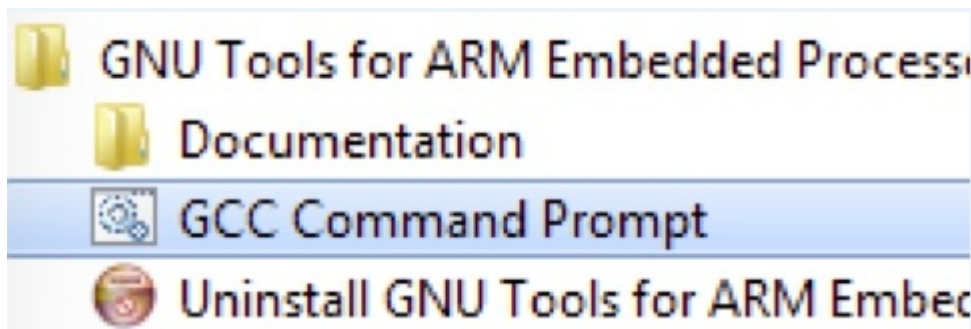


7. Change to the directory that contains the example application output. The output can be found in using one of these paths, depending on the build target selected:

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/debug
```

```
<install_dir>/boards/<board_name>/<example_type>/<application_name>/armgcc/release
```

8. Run the `arm-none-eabi-gdb.exe <application_name>.elf` command. For this example, it is `arm-none-eabi-gdb.exe hello_world.elf`.

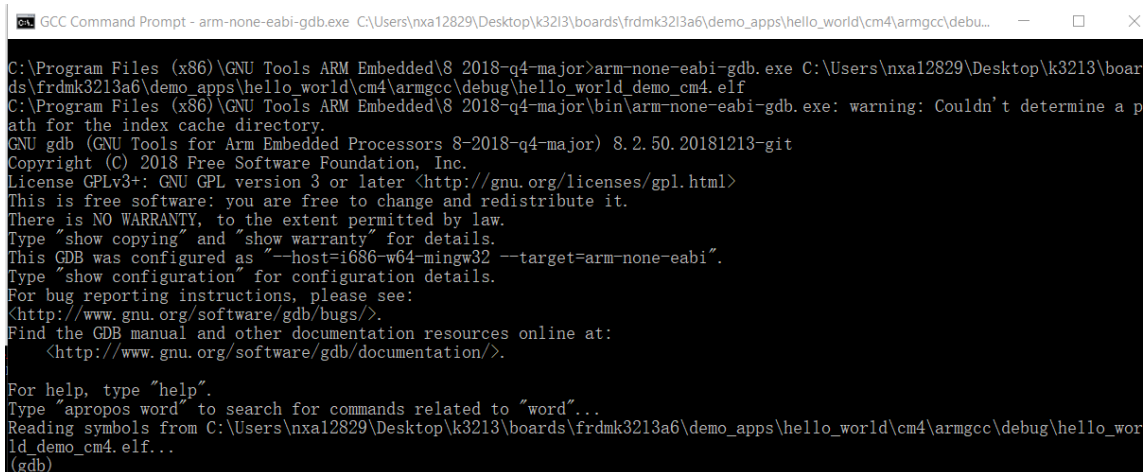

```

GCC Command Prompt - arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debu...
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major>arm-none-eabi-gdb.exe C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf
C:\Program Files (x86)\GNU Tools ARM Embedded\8 2018-q4-major\bin\arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
  <http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from C:\Users\nxa12829\Desktop\k3213\boards\frdmk3213a6\demo_apps\hello_world\cm4\armgcc\debug\hello_world_demo_cm4.elf...
(gdb)

```

9. Run these commands:

1. target remote localhost:2331
2. monitor reset
3. monitor halt
4. load
5. monitor reset

10. The application is now downloaded and halted. Execute the monitor go command to start the demo application.

The hello_world application is now running and a banner is displayed on the terminal. If this does not appear, check your terminal settings and connections.



```

COM4 - PuTTY
hello world.

```

Build a multicore example application This section describes the steps to build and run a dual-core application. The demo application build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/multicore_examples/<application_name>/<core_type>/armgcc
```

Begin with a simple dual-core version of the Hello World application. The multicore Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm0plus/armgcc/build_debug.bat
```

```
<install_dir>/boards/lpcxpresso54114/multicore_examples/hello_world/cm4/armgcc/build_debug.bat
```


Build both applications separately following steps for single core examples as described in **Build an example application**.

```
GCC Command Prompt - build_debug.bat
[ 47%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 52%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 56%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 60%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 65%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 69%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 73%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 78%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 82%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 86%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm0plus.c.obj
[ 91%] Building ASM object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm0plus.S.obj
[ 95%] Building C object CMakeFiles/hello_world_cm0plus.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/middleware/multicore/mcmgr/src/mcmgr.c.obj
[100%] Linking C executable debug\hello_world_cm0plus.elf
[100%] Built target hello_world_cm0plus.elf

c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm0plus\armgcc>IF "" == "" (pause)
Press any key to continue . . .
```

```
GCC Command Prompt - build_debug.bat
[ 50%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_lpuart.c.obj
[ 54%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_common.c.obj
[ 58%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/drivers/fsl_msmc.c.obj
[ 62%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/str/fsl_str.c.obj
[ 66%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/fsl_assert.c.obj
[ 70%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/utilities/debug_console/fsl_debug_console.c.obj
[ 75%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/uart/lpuart_adapter.c.obj
[ 79%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_port_uart.c.obj
[ 83%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/serial_manager/serial_manager.c.obj
[ 87%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/components/lists/generic_list.c.obj
[ 91%] Building C object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/system_K32L3A60_cm4.c.obj
[ 95%] Building ASM object CMakeFiles/hello_world_cm4.elf.dir/C:/packages/SDK_2.6.0_FRDM-K32L3A6_RC1/devices/K32L3A60/gcc/startup_K32L3A60_cm4.S.obj
[100%] Linking C executable debug\hello_world_cm4.elf
[100%] Built target hello_world_cm4.elf


c:\packages\SDK_2.6.0_FRDM-K32L3A6_RC1\boards\frdmk32l3a6\multicore_examples\hello_world\cm4\armgcc>IF "" == "" (pause)
Press any key to continue . . .
```

Run a multicore example application When running a multicore application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single-core application, applies, as described in **Run an example application**.

The primary core debugger handles flashing of both the primary and the auxiliary core applications into the SoC flash memory. To download and run the multicore application, switch to the primary core application project and perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single-core and dual-core applications in Arm GCC.

Both the primary and the auxiliary image is loaded into the SPI flash memory. After execution of the monitor go command, the primary core application is executed. During the primary core code execution, the auxiliary core code is reallocated from the flash memory to the RAM, and the auxiliary core is released from the reset. The hello_world multicore application is now running

and a banner is displayed on the terminal. If this is not true, check your terminal settings and connections.

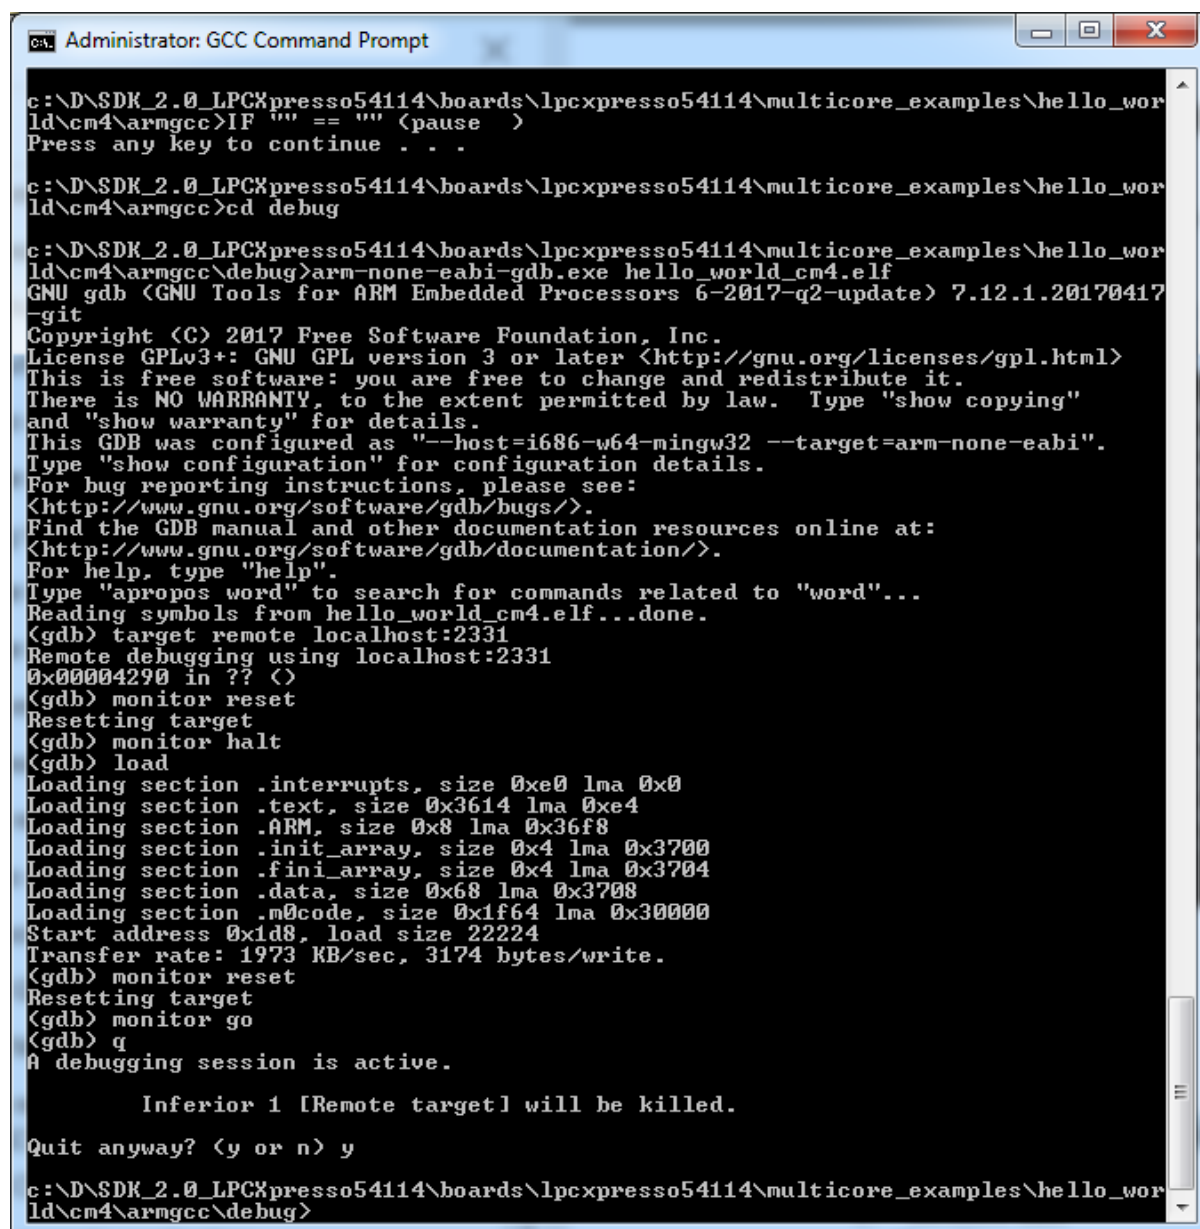

```

Administrator: GCC Command Prompt
c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc>IF "" == "" <pause >
Press any key to continue . . .

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc>cd debug


c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc\debug>arm-none-eabi-gdb.exe hello_world_cm4.elf
GNU gdb (GNU Tools for ARM Embedded Processors 6-2017-q2-update) 7.12.1.20170417-g
-git
Copyright (C) 2017 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software: you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law. Type "show copying"
and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.
For help, type "help".
Type "apropos word" to search for commands related to "word"...
Reading symbols from hello_world_cm4.elf...done.
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
0x00004290 in ?? ()
(gdb) monitor reset
Resetting target
(gdb) monitor halt
(gdb) load
Loading section .interrupts, size 0xe0 lma 0x0
Loading section .text, size 0x3614 lma 0xe4
Loading section .ARM, size 0x8 lma 0x36f8
Loading section .init_array, size 0x4 lma 0x3700
Loading section .fini_array, size 0x4 lma 0x3704
Loading section .data, size 0x68 lma 0x3708
Loading section .m0code, size 0x1f64 lma 0x30000
Start address 0x1d8, load size 22224
Transfer rate: 1973 KB/sec, 3174 bytes/write.
(gdb) monitor reset
Resetting target
(gdb) monitor go
(gdb) q
A debugging session is active.

    Inferior 1 [Remote target] will be killed.

Quit anyway? (y or n) y

c:\D\SDK_2.0_LPCXpresso54114\boards\lpcxpresso54114\multicore_examples\hello_world\cm4\armgcc\debug>

```

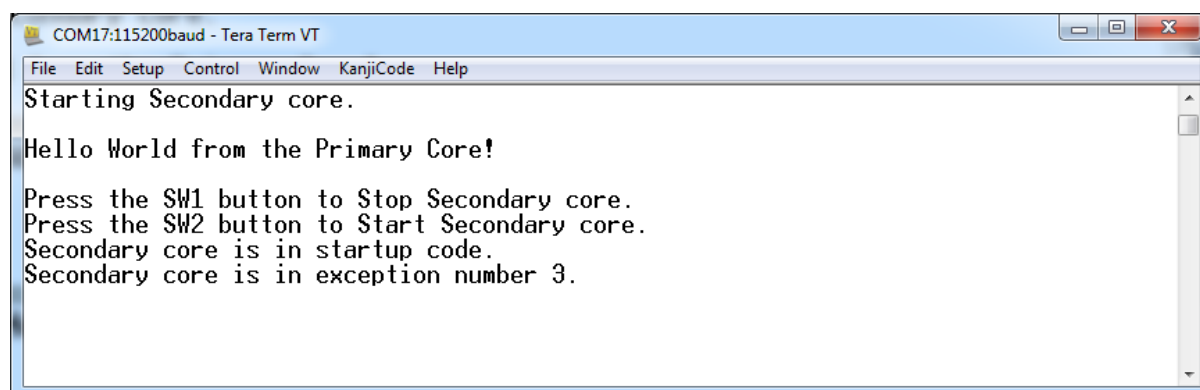

```

COM17:115200baud - Tera Term VT
File Edit Setup Control Window KanjiCode Help
Starting Secondary core.

Hello World from the Primary Core!

Press the SW1 button to Stop Secondary core.
Press the SW2 button to Start Secondary core.
Secondary core is in startup code.
Secondary core is in exception number 3.

```

Build a TrustZone example application This section describes the steps to build and run a TrustZone application. The demo application build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/
↔<application_name>_ns/armgcc
```

```
<install_dir>/boards/<board_name>/trustzone_examples/<application_name>/[<core_type>]/
↔<application_name>_s/armgcc
```

Begin with a simple TrustZone version of the Hello World application. The TrustZone Hello World GCC build scripts are located in this folder:

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_ns/armgcc/build_
↔debug.bat
```

```
<install_dir>/boards/<board_name>/trustzone_examples/hello_world/hello_world_s/armgcc/build_
↔debug.bat
```

Build both applications separately, following steps for single core examples as described in **Build an example application**. It is requested to build the application for the secure project first, because the non-secure project must know the secure project, since CMSE library is running the linker. It is not possible to finish the non-secure project linker with the secure project because the CMSE library is not ready.

```
C:\WINDOWS\system32\cmd.exe
[ 55%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_assert.c.obj
[ 59%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c.obj
[ 62%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexspi.c.obj
[ 66%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexcache.c.obj
[ 70%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_manager.c.obj
[ 74%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_port_uart.c.obj
[ 77%] Building ASM object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startup_MIMXRT595S_cm33.S.obj
[ 81%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c.obj
[ 85%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_uart.c.obj
[ 88%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_s.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_iap.c.obj
[100%] Linking C executable debug\hello_world_s.elf
[100%] Built target hello_world_s.elf
C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_s\armgcc>IF "" == "" (pause)
Press any key to continue . . .
```

```

C:\WINDOWS\system32\cmd.exe
[ 52%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/uart/usart_adapter.c.obj
[ 56%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/utilities/fsl_assert.c.obj
[ 60%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexspi.c.obj
[ 64%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_cache.c.obj
[ 68%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_manager.c.obj
[ 72%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/serial_manager/serial_port_uart.c.obj
[ 76%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_usart.c.obj
[ 80%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/components/lists/generic_list.c.obj
[ 84%] Building ASM object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/gcc/startup_MIMXRT595S_cm33.S.obj
[ 88%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_flexcomm.c.obj
[ 92%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_gpio.c.obj
[ 96%] Building C object CMakeFiles/hello_world_ns.elf.dir/C:/npx/SDK_2.6.0_EVK-MIMXRT595/devices/MIMXRT595S/drivers/fsl_iap.c.obj
[100%] Linking C executable debug\hello_world_ns.elf
[100%] Built target hello_world_ns.elf

C:\npx\SDK_2.6.0_EVK-MIMXRT595\boards\evkmimxrt595\trustzone_examples\hello_world\hello_world_ns\armgcc>IF "" == "" (pause)
Press any key to continue . . .

```

Run a TrustZone example application When running a TrustZone application, the same prerequisites for J-Link/J-Link OpenSDA firmware, and the serial console as for the single core application, apply, as described in **Run an example application**.

To download and run the TrustZone application, perform steps 1 to 10, as described in **Run an example application**. These steps are common for both single core and TrustZone applications in Arm GCC.

Then, run these commands:

1. arm-none-eabi-gdb.exe
2. target remote localhost:2331
3. monitor reset
4. monitor halt
5. monitor exec SetFlashDLNoRMWThreshold = 0x20000
6. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_ns/armgcc/debug/hello_world_ns.elf
7. load <install_dir>/boards/evkmimxrt595/trustzone_examples/hello_world/hello_world_s/armgcc/debug/hello_world_s.elf
8. monitor reset

The application is now downloaded and halted. Execute the `c` command to start the demo application.

```

Command Prompt - arm-none-eabi-gdb
C:\nxp\SDK_2.6.0_EVK-MIMXRT595\boards\evkminxrt595\trustzone_examples\hello_world>arm-none-eabi-gdb
C:\Program Files (x86)\GNU Tools Arm Embedded\8 2018-q4-major\bin\arm-none-eabi-gdb.exe: warning: Couldn't determine a path for the index cache directory.
GNU gdb (GNU Tools for Arm Embedded Processors 8-2018-q4-major) 8.2.50.20181213-git
Copyright (C) 2018 Free Software Foundation, Inc.
License GPLv3+: GNU GPL version 3 or later <http://gnu.org/licenses/gpl.html>
This is free software; you are free to change and redistribute it.
There is NO WARRANTY, to the extent permitted by law.
Type "show copying" and "show warranty" for details.
This GDB was configured as "--host=i686-w64-mingw32 --target=arm-none-eabi".
Type "show configuration" for configuration details.
For bug reporting instructions, please see:
<http://www.gnu.org/software/gdb/bugs/>.
Find the GDB manual and other documentation resources online at:
<http://www.gnu.org/software/gdb/documentation/>.

For help, type "help".
Type "apropos word" to search for commands related to "word".
(gdb) target remote localhost:2331
Remote debugging using localhost:2331
warning: No executable has been specified and target does not support
determining executable automatically. Try using the "file" command.
0x0001c04a in ?? ()
(gdb) load hello_world_ns/armgcc/debug/hello_world_ns.elf
Loading section .interrupts, size 0x168 lma 0xc0000
Loading section .text, size 0x1d30 lma 0xc0180
Loading section .ARM, size 0x8 lma 0xc1eb0
Loading section .init_array, size 0x4 lma 0xc1eb8
Loading section .fini_array, size 0x4 lma 0xc1ebc
Loading section .data, size 0x60 lma 0xc1ec0
Start address 0xc0234, load size 7944
Transfer rate: 74 KB/sec, 1324 bytes/write.
(gdb) load hello_world_s/armgcc/debug/hello_world_s.elf
Loading section .flash_config, size 0x200 lma 0x1007f400
Loading section .interrupts, size 0x168 lma 0x10080000
Loading section .text, size 0x4d54 lma 0x10080180
Loading section .ARM, size 0x8 lma 0x10084ed4
Loading section .init_array, size 0x4 lma 0x10084edc
Loading section .fini_array, size 0x4 lma 0x10084ee0
Loading section .data, size 0x68 lma 0x10084ee4
Loading section .gnu.sgstubs, size 0x20 lma 0x100bfe00
Start address 0x10080234, load size 20820
Transfer rate: 123 KB/sec, 2313 bytes/write.
(gdb) c
Continuing.

```

```






COM57 - PuTTY
Hello from secure world!
Entering normal world.
Welcome in normal world!
This is a text printed from normal world!
Comparing two string as a callback to normal world
String 1: Test1
String 2: Test2
Both strings are not equal!

```

MCUXpresso Config Tools

MCUXpresso Config Tools can help configure the processor and generate initialization code for the on chip peripherals. The tools are able to modify any existing example project, or create a new configuration for the selected board or processor. The generated code is designed to be used with MCUXpresso SDK version 24.12.00 or later.

Following table describes the tools included in the MCUXpresso Config Tools.

Config Tool	Description	Image
Pins tool	For configuration of pin routing and pin electrical properties.	
Clock tool	For system clock configuration	
Peripherals tools	For configuration of other peripherals	
TEE tool	Configures access policies for memory area and peripherals helping to protect and isolate sensitive parts of the application.	
Device Configuration tool	Configures Device Configuration Data (DCD) contained in the program image that the Boot ROM code interprets to set up various on-chip peripherals prior to the program launch.	

MCUXpresso Config Tools can be accessed in the following products:

- **Integrated** in the MCUXpresso IDE. Config tools are integrated with both compiler and debugger which makes it the easiest way to begin the development.
- **Standalone version** available for download from www.nxp.com/mcuxpresso. Recommended for customers using IAR Embedded Workbench, Keil MDK μ Vision, or Arm GCC.
- **Online version** available on mcuxpresso.nxp.com. Recommended doing a quick evaluation of the processor or use the tool without installation.

Each version of the product contains a specific *Quick Start Guide* document MCUXpresso IDE Config Tools installation folder that can help start your work.

How to determine COM port

This section describes the steps necessary to determine the debug COM port number of your NXP hardware development platform. All NXP boards ship with a factory programmed, onboard debug interface, whether it is based on MCU-Link or the legacy OpenSDA, LPC-Link2, P&E Micro OSJTAG interface. To determine what your specific board ships with, see [Default debug interfaces](#).

1. **Linux:** The serial port can be determined by running the following command after the USB Serial is connected to the host:

```
$ dmesg | grep "ttyUSB"
[503175.307873] usb 3-12: cp210x converter now attached to ttyUSB0
[503175.309372] usb 3-12: cp210x converter now attached to ttyUSB1
```

There are two ports, one is for core0 debug console and the other is for core1.

2. **Windows:** To determine the COM port open Device Manager in the Windows operating system. Click the **Start** menu and type **Device Manager** in the search bar.

In the Device Manager, expand the **Ports (COM & LPT)** section to view the available ports. The COM port names are different for all the NXP boards.


1. **CMSIS-DAP/mbed/DAPLink** interface:




2. P&E Micro:




3. J-Link:



4. P&E Micro OSJTAG:



5. MRB-KW01:



On-board Debugger

This section describes the on-board debuggers used on NXP development boards.

On-board debugger MCU-Link MCU-Link is a powerful and cost effective debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. MCU-Link features a high-speed USB interface for high performance debug. MCU-Link is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board MCU-Link debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating MCU-Link firmware This firmware in this debug interface may be updated using the host computer utility called MCU-Link. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), MCU-Link debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the

CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the MCU-Link utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto MCU-Link or NXP boards. The utility can be downloaded from [MCU-Link](#).

These steps show how to update the debugger firmware on your board for Windows operating system.

1. Install the MCU-Link utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the MCU-Link installation directory (<MCU-Link install dir>).
 1. To program CMSIS-DAP debug firmware: <MCU-Link install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <MCU-Link install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger LPC-Link LPC-Link 2 is an extensible debug probe that can be used seamlessly with MCUXpresso IDE, and is also compatible with 3rd party IDEs that support CMSIS-DAP protocol. MCU-Link also includes a USB to UART bridge feature (VCOM) that can be used to provide a serial connection between the target MCU and a host computer. LPC-Link 2 is compatible with Windows, MacOS and Linux. A free utility from NXP provides an easy way to install firmware updates.

On-board LPC-Link 2 debugger supports CMSIS-DAP and J-Link firmware. See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- If using J-Link with either a standalone debug pod or MCU-Link, install the J-Link software (drivers and utilities) from www.segger.com/jlink-software.html.

Updating LPC-Link firmware The LPCXpresso hardware platform comes with a CMSIS-DAP-compatible debug interface (known as LPC-Link2). This firmware in this debug interface may be updated using the host computer utility called LPCScript. This typically used when switching between the default debugger protocol (CMSIS-DAP) to SEGGER J-Link, or for updating this firmware with new releases of these. This section contains the steps to reprogram the debug probe firmware.

Note: If MCUXpresso IDE is used and the jumper making DFUlink is installed on the board (JP5 on some boards, but consult the board user manual or schematic for specific jumper number), LPC-Link2 debug probe boots to DFU mode, and MCUXpresso IDE automatically downloads the CMSIS-DAP firmware to the probe before flash memory programming (after clicking **Debug**). Using DFU mode ensures that most up-to-date/compatible firmware is used with MCUXpresso IDE.

NXP provides the LPCScript utility, which is the recommended tool for programming the latest versions of CMSIS-DAP and J-Link firmware onto LPC-Link2 or LPCXpresso boards. The utility can be downloaded from [LPCScript](#).

These steps show how to update the debugger firmware on your board for Windows operating system. For Linux OS, follow the instructions described in LPCScript user guide ([LPCScript](#), select **LPCScript**, and then the documentation tab).

1. Install the LPCScript utility.
2. Unplug the board's USB cable.
3. Make the DFU link (install the jumper labeled DFUlink).
4. Connect the probe to the host via USB (use Link USB connector).
5. Open a command shell and call the appropriate script located in the LPCScript installation directory (<LPCScript install dir>).
 1. To program CMSIS-DAP debug firmware: <LPCScript install dir>/scripts/program_CMSIS
 2. To program J-Link debug firmware: <LPCScript install dir>/scripts/program_JLINK
6. Remove DFU link (remove the jumper installed in Step 3).
7. Repower the board by removing the USB cable and plugging it in again.

On-board debugger OpenSDA OpenSDA/OpenSDAv2 is a serial and debug adapter that is built into several NXP evaluation boards. It provides a bridge between your computer (or other USB host) and the embedded target processor, which can be used for debugging, flash programming, and serial communication, all over a simple USB cable.

The difference is the firmware implementation: OpenSDA: Programmed with the proprietary P&E Micro developed bootloader. P&E Micro is the default debug interface app. OpenSDAv2: Programmed with the open-sourced CMSIS-DAP/mbed bootloader. CMSIS-DAP is the default debug interface app.

See the table in [Default debug interfaces](#) to determine the default debug interface that comes loaded on your specific hardware platform.

The corresponding host driver must be installed before debugging.

- For boards with CMSIS-DAP firmware, visit developer.mbed.org/handbook/Windows-serial-configuration and follow the instructions to install the Windows operating system serial driver. If running on Linux OS, this step is not required.
- For boards with a P&E Micro interface, see [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.


Updating OpenSDA firmware Any NXP hardware platform that comes with an OpenSDA-compatible debug interface has the ability to update the OpenSDA firmware. This typically means to switch from the default application (either CMSIS-DAP or P&E Micro) to a SEGGER J-Link. This section contains the steps to switch the OpenSDA firmware to a J-Link interface. However, the steps can be applied to restoring the original image also. For reference, OpenSDA firmware files can be found at the links below:

- J-Link: Download appropriate image from www.segger.com/opensda.html. Choose the appropriate J-Link binary based on the table in [Default debug interfaces](#). Any OpenSDA v1.0 interface should use the standard OpenSDA download (in other words, the one with no version). For OpenSDA 2.0 or 2.1, select the corresponding binary.
- CMSIS-DAP: CMSIS-DAP OpenSDA firmware is available at www.nxp.com/opensda.

- P&E Micro: Downloading P&E Micro OpenSDA firmware images requires registration with P&E Micro (www.pemicro.com).

Perform the following steps to update the OpenSDA firmware on your board for Windows and Linux OS users:

1. Unplug the board's USB cable.
2. Press the **Reset** button on the board. While still holding the button, plug the USB cable back into the board.
3. When the board re-enumerates, it shows up as a disk drive called **MAINTENANCE**.

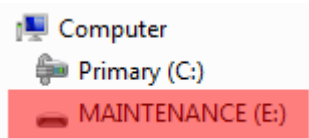

4. Drag and drop the new firmware image onto the MAINTENANCE drive.

Note: If for any reason the firmware update fails, the board can always reenter maintenance mode by holding down **Reset** button and power cycling.

These steps show how to update the OpenSDA firmware on your board for Mac OS users.

1. Unplug the board's USB cable.
2. Press the **Reset** button of the board. While still holding the button, plug the USB cable back into the board.
3. For boards with OpenSDA v2.0 or v2.1, it shows up as a disk drive called **BOOTLOADER** in **Finder**. Boards with OpenSDA v1.0 may or may not show up depending on the bootloader version. If you see the drive in **Finder**, proceed to the next step. If you do not see the drive in **Finder**, use a PC with Windows OS 7 or an earlier version to either update the OpenSDA firmware, or update the OpenSDA bootloader to version 1.11 or later. The bootloader update instructions and image can be obtained from P&E Microcomputer website.
4. For OpenSDA v2.1 and OpenSDA v1.0 (with bootloader 1.11 or later) users, drag the new firmware image onto the BOOTLOADER drive in **Finder**.
5. For OpenSDA v2.0 users, type these commands in a Terminal window:

```
> sudo mount -u -w -o sync /Volumes/BOOTLOADER  
> cp -X <path to update file> /Volumes/BOOTLOADER
```

Note: If for any reason the firmware update fails, the board can always reenter bootloader mode by holding down the **Reset** button and power cycling.

On-board debugger Multilink An on-board Multilink debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

On-board debugger OSJTAG An on-board OSJTAG debug circuit provides a JTAG interface and a power supply input through a single micro-USB connector. It is a hardware interface that allows PC software to debug and program a target processor through its debug port.

The host driver must be installed before debugging.

- See [PE micro](#) to download and install the P&E Micro Hardware Interface Drivers package.

Default debug interfaces

The MCUXpresso SDK supports various hardware platforms that come loaded with various factory programmed debug interface configurations. The following table lists the hardware platforms supported by the MCUXpresso SDK, their default debug firmware, and any version information that helps differentiate a specific interface configuration.

Hardware platform	Default debugger firmware	On-board debugger probe
EVK-MCIMX7ULP	N/A	N/A
EVK-MIMX8MM	N/A	N/A
EVK-MIMX8MN	N/A	N/A
EVK-MIMX8MNDDR3L	N/A	N/A
EVK-MIMX8MP	N/A	N/A
EVK-MIMX8MQ	N/A	N/A
EVK-MIMX8ULP	N/A	N/A
EVK-MIMXRT1010	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1015	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1020	CMSIS-DAP	LPC-Link2
EVK-MIMXRT1064	CMSIS-DAP	LPC-Link2
EVK-MIMXRT595	CMSIS-DAP	LPC-Link2
EVK-MIMXRT685	CMSIS-DAP	LPC-Link2
EVK9-MIMX8ULP	N/A	N/A
EVKB-IMXRT1050	CMSIS-DAP	LPC-Link2
FRDM-K22F	CMSIS-DAP	OpenSDA v2
FRDM-K32L2A4S	CMSIS-DAP	OpenSDA v2
FRDM-K32L2B	CMSIS-DAP	OpenSDA v2
FRDM-K32L3A6	CMSIS-DAP	OpenSDA v2
FRDM-KE02Z40M	P&E Micro	OpenSDA v1
FRDM-KE15Z	CMSIS-DAP	OpenSDA v2
FRDM-KE16Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z	CMSIS-DAP	OpenSDA v2
FRDM-KE17Z512	CMSIS-DAP	MCU-Link
FRDM-MCXA153	CMSIS-DAP	MCU-Link
FRDM-MCXA156	CMSIS-DAP	MCU-Link
FRDM-MCXA266	CMSIS-DAP	MCU-Link
FRDM-MCXA344	CMSIS-DAP	MCU-Link
FRDM-MCXA346	CMSIS-DAP	MCU-Link
FRDM-MCXA366	CMSIS-DAP	MCU-Link
FRDM-MCXC041	CMSIS-DAP	MCU-Link
FRDM-MCXC242	CMSIS-DAP	MCU-Link
FRDM-MCXC444	CMSIS-DAP	MCU-Link
FRDM-MCXE247	CMSIS-DAP	MCU-Link
FRDM-MCXE31B	CMSIS-DAP	MCU-Link
FRDM-MCXN236	CMSIS-DAP	MCU-Link
FRDM-MCXN947	CMSIS-DAP	MCU-Link
FRDM-MCXW23	CMSIS-DAP	MCU-Link
FRDM-MCXW71	CMSIS-DAP	MCU-Link
FRDM-MCXW72	CMSIS-DAP	MCU-Link
FRDM-RW612	CMSIS-DAP	MCU-Link
IMX943-EVK	N/A	N/A
IMX95LP4XEVK-15	N/A	N/A
IMX95LPD5EVK-19	N/A	N/A
IMX95VERDINEVK	N/A	N/A
KW45B41Z-EVK	CMSIS-DAP	MCU-Link
KW45B41Z-LOC	CMSIS-DAP	MCU-Link
KW47-EVK	CMSIS-DAP	MCU-Link

continues on next page

Table 1 – continued from previous page

Hardware platform	Default debugger firmware	On-board debugger probe
KW47-LOC	CMSIS-DAP	MCU-Link
LPC845BREAKOUT	CMSIS-DAP	LPC-Link2
LPCXpresso51U68	CMSIS-DAP	LPC-Link2
LPCXpresso54628	CMSIS-DAP	LPC-Link2
LPCXpresso54S018	CMSIS-DAP	LPC-Link2
LPCXpresso54S018M	CMSIS-DAP	LPC-Link2
LPCXpresso55S06	CMSIS-DAP	LPC-Link2
LPCXpresso55S16	CMSIS-DAP	LPC-Link2
LPCXpresso55S28	CMSIS-DAP	LPC-Link2
LPCXpresso55S36	CMSIS-DAP	MCU-Link
LPCXpresso55S69	CMSIS-DAP	LPC-Link2
LPCXpresso802	CMSIS-DAP	LPC-Link2
LPCXpresso804	CMSIS-DAP	LPC-Link2
LPCXpresso824MAX	CMSIS-DAP	LPC-Link2
LPCXpresso845MAX	CMSIS-DAP	LPC-Link2
LPCXpresso860MAX	CMSIS-DAP	LPC-Link2
MC56F80000-EVK	P&E Micro	Multilink
MC56F81000-EVK	P&E Micro	Multilink
MC56F83000-EVK	P&E Micro	OSJTAG
MCIMX93-EVK	N/A	N/A
MCIMX93-QSB	N/A	N/A
MCIMX93AUTO-EVK	N/A	N/A
MCX-N5XX-EVK	CMSIS-DAP	MCU-Link
MCX-N9XX-EVK	CMSIS-DAP	MCU-Link
MCX-W71-EVK	CMSIS-DAP	MCU-Link
MCX-W72-EVK	CMSIS-DAP	MCU-Link
MIMXRT1024-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1040-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKB	CMSIS-DAP	LPC-Link2
MIMXRT1060-EVKC	CMSIS-DAP	MCU-Link
MIMXRT1160-EVK	CMSIS-DAP	LPC-Link2
MIMXRT1170-EVKB	CMSIS-DAP	MCU-Link
MIMXRT1180-EVK	CMSIS-DAP	MCU-Link
MIMXRT685-AUD-EVK	CMSIS-DAP	LPC-Link2
MIMXRT700-EVK	CMSIS-DAP	MCU-Link
RD-RW612-BGA	CMSIS-DAP	MCU-Link
TWR-KM34Z50MV3	P&E Micro	OpenSDA v1
TWR-KM34Z75M	P&E Micro	OpenSDA v1
TWR-KM35Z75M	CMSIS-DAP	OpenSDA v2
TWR-MC56F8200	P&E Micro	OSJTAG
TWR-MC56F8400	P&E Micro	OSJTAG

How to define IRQ handler in CPP files

With MCUXpresso SDK, users could define their own IRQ handler in application level to override the default IRQ handler. For example, to override the default PIT_IRQHandler define in startup_DEVICE.s, application code like app.c can be implement like:

```
// c
void PIT_IRQHandler(void)
{
    // Your code
}
```

When application file is CPP file, like app.cpp, then `extern "C"` should be used to ensure the function prototype alignment.

```
// cpp
extern "C" {
    void PIT_IRQHandler(void);
}
void PIT_IRQHandler(void)
{
    // Your code
}
```

1.3 Getting Started with MCUXpresso SDK GitHub


1.3.1 Getting Started with MCUXpresso SDK Repository

Installation

NOTE

If the installation instruction asks/selects whether to have the tool installation path added to the PATH variable, agree/select the choice. This option ensures that the tool can be used in any terminal in any path. [Verify the installation](#) after each tool installation.

Install Prerequisites with MCUXpresso Installer The MCUXpresso Installer offers a quick and easy way to install the basic tools needed. The MCUXpresso Installer can be obtained from <https://github.com/nxp-mcuxpresso/vscode-for-mcux/wiki/Dependency-Installation>. The MCUXpresso Installer is an automated installation process, simply select MCUXpresso SDK Developer from the menu and click install. If you prefer to install the basic tools manually, refer to the next section.

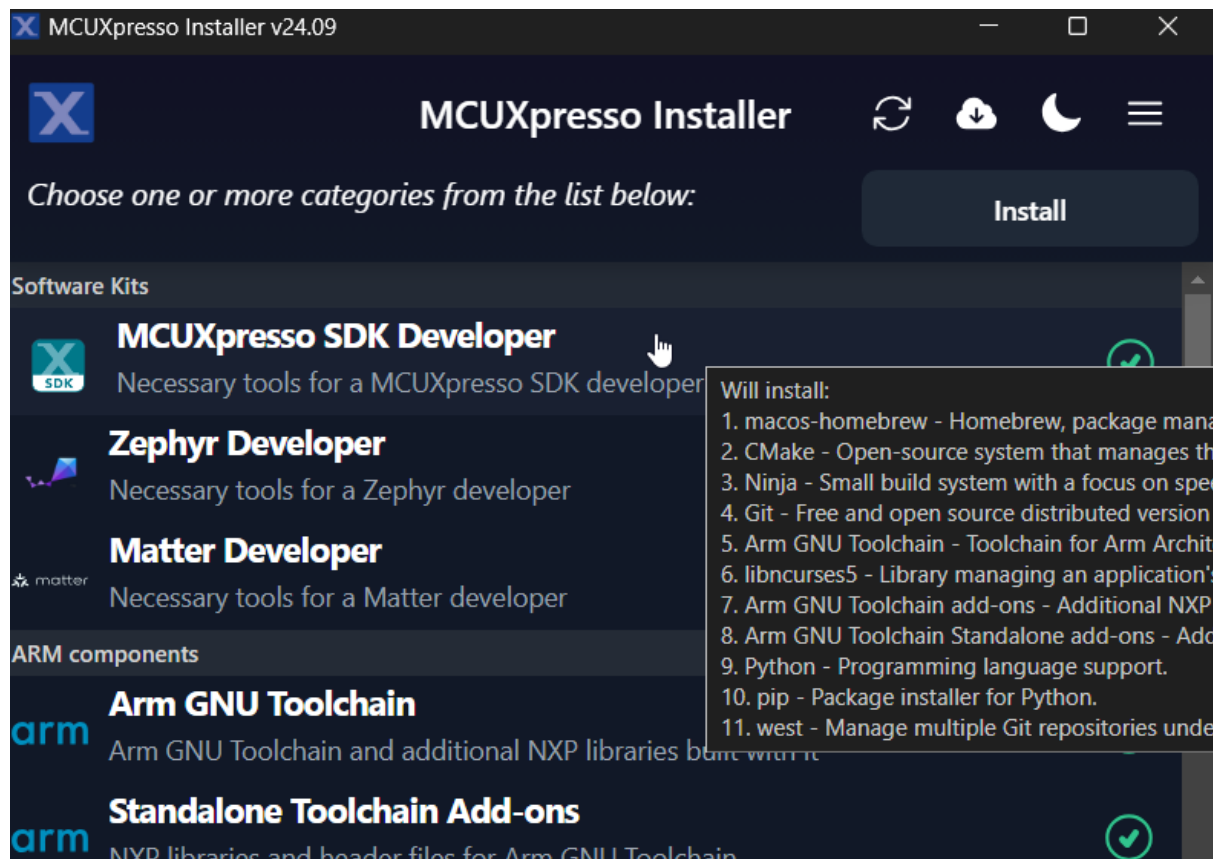

Alternative: Manual Installation

Basic tools

Git Git is a free and open source distributed version control system. Git is designed to handle everything from small to large projects with speed and efficiency. To install Git, visit the [official Git website](#). Download the appropriate version (you may use the latest one) for your operating system (Windows, macOS, Linux). Then run the installer and follow the installation instructions.

User `git --version` to check the version if you have a version installed.

Then configure your username and email using the commands:

```
git config --global user.name "Your Name"
git config --global user.email "youremail@example.com"
```

Python Install python 3.10 or latest. Follow the [Python Download guide](#).

Use `python --version` to check the version if you have a version installed.

West Please use the west version equal or greater than 1.2.0

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a different
↔source using option '-i'.
# for example, in China you could try: pip install -U west -i https://pypi.tuna.tsinghua.edu.cn/simple
pip install -U west
```

Build And Configuration System

CMake It is strongly recommended to use CMake version equal or later than 3.30.0. You can get latest CMake distributions from [the official CMake download page](#).

For Windows, you can directly use the .msi installer like [cmake-3.31.4-windows-x86_64.msi](#) to install.

For Linux, CMake can be installed using the system package manager or by getting binaries from [the official CMake download page](#).

After installation, you can use `cmake --version` to check the version.

Ninja Please use the ninja version equal or later than 1.12.1.

By default, Windows comes with the Ninja program. If the default Ninja version is too old, you can directly download the [ninja binary](#) and register the ninja executor location path into your system path variable to work.

For Linux, you can use your [system package manager](#) or you can directly download the [ninja binary](#) to work.

After installation, you can use `ninja --version` to check the version.

Kconfig MCUXpresso SDK uses Kconfig python implementation. We customize it based on our needs and integrate it into our build and configuration system. The Kconfiglib sources are placed under `mcuxsdk/scripts/kconfig` folder.

Please make sure [python](#) environment is setup ready then you can use the Kconfig.

Ruby Our build system supports IDE project generation for iar, mdk, codewarrior and xtensa to provide OOB from build to debug. This feature is implemented with ruby. You can follow the guide [ruby environment setup](#) to setup the ruby environment. Since we provide a built-in portable ruby, it is just a simple one cmd installation.

If you only work with CLI, you can skip this step.


Toolchain MCUXpresso SDK supports all mainstream toolchains for embedded development. You can install your used or interested toolchains following the guides.

Toolchain	Download and Installation Guide	Note
Armgcc	Arm GNU Toolchain Install Guide	ARMGCC is default toolchain
IAR	IAR Installation and Licensing quick reference guide	
MDK	MDK Installation	
Armclang	Installing Arm Compiler for Embedded	
Zephyr	Zephyr SDK	
Codewarrior	NXP CodeWarrior	
Xtensa	Tensilica Tools	
NXP S32Compiler RISC-V Zen-V	NXP Website	

After you have installed the toolchains, register them in the system environment variables. This will allow the west build to recognize them:

Toolchain	Environment Variable	Example	Cmd Line Argument
Armgcc	ARM-MGCC_DIR	C:\armgcc for windows/usr for Linux. Typically arm-none-eabi-* is installed under /usr/bin	- toolchain armgcc
IAR	IAR_DIR	C:\iar\ewarm-9.60.3 for Windows/opt/iarsystems/bxarm-9.60.3 for Linux	- toolchain iar
MDK	MDK_DIR	C:\Keil_v5 for Windows.MDK IDE is not officially supported with Linux.	- toolchain mdk
Armclang	ARM-CLANG_DIR	C:\ArmCompilerforEmbedded6.22 for Windows/opt/ArmCompilerforEmbedded6.21 for Linux	- toolchain mdk
Zephyr	ZEPHYR_SE	c:\NXP\zephyr-sdk-<version> for windows/opt/zephyr-sdk-<version> for Linux	- toolchain zephyr
CodeWarrior	CW_DIR	C:\Freescale\CW MCU v11.2 for windowsCodeWarrior is not supported with Linux	- toolchain code-warrior
Xtensa	XCC_DIR	C:\xtensa\XtDevTools\install\tools\RI-2023.11-win32\XtensaTools for windows/opt/xtensa/XtDevTools/install/tools/RI-2023.11-Linux/XtensaTools for Linux	- toolchain xtensa
NXP S32Compiler RISC-V Zen-V	RISCVL-LVM_DIR	C:\riscv-llvm-win32_b298_b298_2024.08.12 for Windows/opt/riscv-llvm-Linux-x64_b298_b298_2024.08.12 for Linux	- toolchain riscv-llvm

- The <toolchain>_DIR is the root installation folder, not the binary location folder. For IAR, it is directory containing following installation folders:

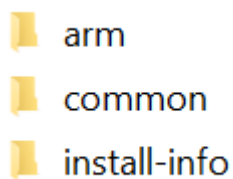

- MDK IDE using armclang toolchain only officially supports Windows. In Linux, please directly use armclang toolchain by setting ARMCLANG_DIR. In Windows, since most Keil users will install MDK IDE instead of standalone armclang toolchain, the MDK_DIR has higher priority than ARMCLANG_DIR.
- For Xtensa toolchain, please set the XTENSA_CORE environment variable. Here’s an example list:

Device Core	XTENSA_CORE
RT500 fusion1	nxp_rt500_RI23_11_newlib
RT600 hifi4	nxp_rt600_RI23_11_newlib
RT700 hifi1	rt700_hifi1_RI23_11_nlib
RT700 hifi4	t700_hifi4_RI23_11_nlib
i.MX8ULP fusion1	fusion_nxp02_dsp_prod

- In Windows, the short path is used in environment variables. If any toolchain is using the long path, you can open a command window from the toolchain folder and use below command to get the short path: `for %i in (.) do echo %~fsi`

Tool installation check Once installed, open a terminal or command prompt and type the associated command to verify the installation.

If you see the version number, you have successfully installed the tool. Else, check whether the tool's installation path is added into the PATH variable. You can add the installation path to the PATH with the commands below:

- Windows: Open command prompt or powershell, run below command to show the user PATH variable.

```
reg query HKEY_CURRENT_USER\Environment /v PATH
```

The tool installation path should be `C:\Users\xxx\AppData\Local\Programs\Git\cmd`. If the path is not seen in the output from above, append the path value to the PATH variable with the command below:

```
reg add HKEY_CURRENT_USER\Environment /v PATH /d "%PATH%;C:\Users\xxx\AppData\
↪Local\Programs\Git\cmd"
```

Then close the command prompt or powershell and verify the tool command again.

- Linux:
 1. Open the `$HOME/.bashrc` file using a text editor, such as `vim`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bashrc` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.
- macOS:
 1. Open the `$HOME/.bash_profile` file using a text editor, such as `nano`.
 2. Go to the end of the file.
 3. Add the line which appends the tool installation path to the PATH variable and export PATH at the end of the file. For example, `export PATH="/Directory1:$PATH"`.
 4. Save and exit.
 5. Execute the script with `source .bash_profile` or reboot the system to make the changes live. To verify the changes, run `echo $PATH`.

Get MCUXpresso SDK Repo

Establish SDK Workspace To get the MCUXpresso SDK repository, use the `west` tool to clone the manifest repository and checkout all the west projects.

```
# Initialize west with the manifest repository
west init -m https://github.com/nxp-mcuxpresso/mcuxsdk-manifests/ mcuxpresso-sdk

# Update the west projects
cd mcuxpresso-sdk
west update

# Allow the usage of west extensions provided by MCUXpresso SDK
west config commands.allow_extensions true
```

Install Python Dependency(If do tool installation manually) To create a Python virtual environment in the west workspace core repo directory `mcuxsdk`, follow these steps:

1. Navigate to the core directory:

```
cd mcuxsdk
```

2. [Optional] Create and activate the virtual environment: If you don't want to use the python virtual environment, skip this step. **We strongly suggest you use venv to avoid conflicts with other projects using python.**

```
python -m venv .venv

# For Linux/MacOS
source .venv/bin/activate

# For Windows
.\.venv\Scripts\activate
# If you are using powershell and see the issue that the activate script cannot be run.
# You may fix the issue by opening the powershell as administrator and run below command:
powershell Set-ExecutionPolicy RemoteSigned
# then run above activate command again.
```

Once activated, your shell will be prefixed with `(.venv)`. The virtual environment can be deactivated at any time by running `deactivate` command.

Remember to activate the virtual environment every time you start working in this directory. If you are using some modern shell like `zsh`, there are some powerful plugins to help you auto switch `venv` among workspaces. For example, `zsh-autoswitch-virtualenv`.

3. Install the required Python packages:

```
# Note: you can add option '--default-timeout=1000' if you meet connection issue. Or you may set a ↵
↵different source using option '-i'.
# for example, in China you could try: pip3 install -r mcuxsdk/scripts/requirements.txt -i https://pypi.
↵tuna.tsinghua.edu.cn/simple
pip install -r scripts/requirements.txt
```

Explore Contents

This section helps you build basic understanding of current fundamental project content and guides you how to build and run the provided example project in whole SDK delivery.

Folder View The whole MCUXpresso SDK project, after you have done the `west init` and `west update` operations follow the guideline at [Getting Started Guide](#), have below folder structure:

Folder	Description
manifests	Manifest repo, contains the manifest file to initialize and update the west workspace.
mcuxsdk	The MCUXpresso SDK source code, examples, middleware integration and script files.

All the projects record in the [Manifest repo](#) are checked out to the folder `mcuxsdk/`, the layout of `mcuxsdk` folder is shown as below:

Folder	Description
arch	Arch related files such as ARM CMSIS core files, RISC-V files and the build files related to the architecture.
cmake	The cmake modules, files which organize the build system.
components	Software components.
devices	Device support package which categorized by device series. For each device, header file, feature file, startup file and linker files are provided, also device specific drivers are included.
docs	Documentation source and build configuration for this sphinx built online documentation.
drivers	Peripheral drivers.
examples	Various demos and examples, support files on different supported boards. For each board support, there are board configuration files.
middleware	Middleware components integrated into SDK.
rtos	Rtos components integrated into SDK.
scripts	Script files for the west extension command and build system support.
svd	Svd files for devices, this is optional because of large size. Customers run <code>west manifest config group.filter +optional</code> and <code>west update mcux-soc-svd</code> to get this folder.

Examples Project The examples project is part of the whole SDK delivery, and locates in the folder `mcuxsdk/examples` of west workspace.

Examples files are placed in folder of `<example_category>`, these examples include (but are not limited to)

- `demo_apps`: Basic demo set to start using SDK, including `hello_world` and `led_blinky`.
- `driver_examples`: Simple applications that show how to use the peripheral drivers for a single use case. These applications typically only use a single peripheral but there are cases where multiple peripherals are used (for example, SPI transfer using DMA).

Board porting layers are placed in folder of `_boards/<board_name>` which aims at providing the board specific parts for examples code mentioned above.

Run a demo using MCUXpresso for VS Code


This section explains how to configure MCUXpresso for VS Code to build, run, and debug example applications. This guide uses the `hello_world` demo application as an example. However, these

steps can be applied to any example application in the MCUXpresso SDK.

Build an example application This section assumes that the user has already obtained the SDK as outlined in [Get MCUXpresso SDK Repo](#).


To build an example application:

1. Import the SDK into your workspace. Click **Import Repository** from the **QUICKSTART PANEL**.

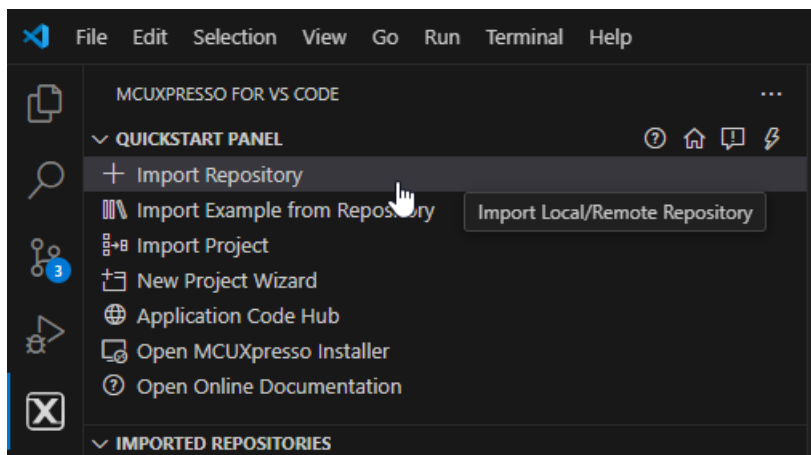


Note: You can import the SDK in several ways. Refer to [MCUXpresso for VS Code Wiki](#) for details.


Select **Local** if you've already obtained the SDK as seen in [Get MCUXpresso SDK Repo](#). Select your location and click **Import**.

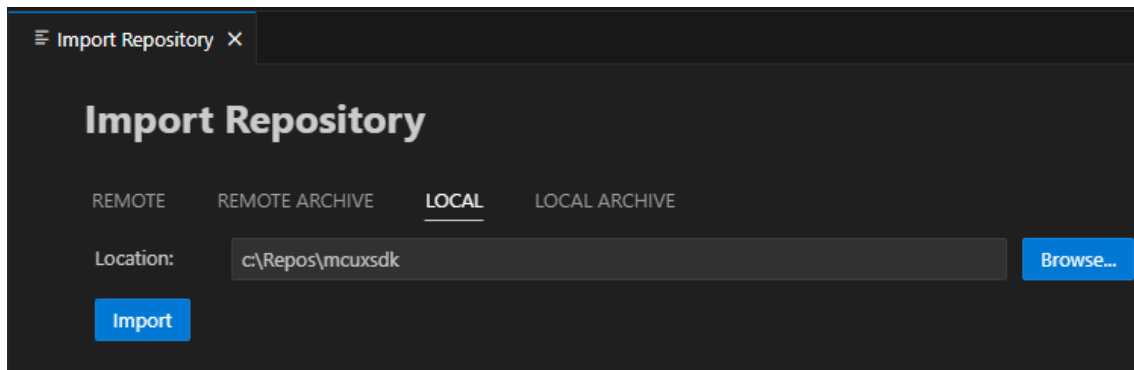

2. Click **Import Example from Repository** from the **QUICKSTART PANEL**.

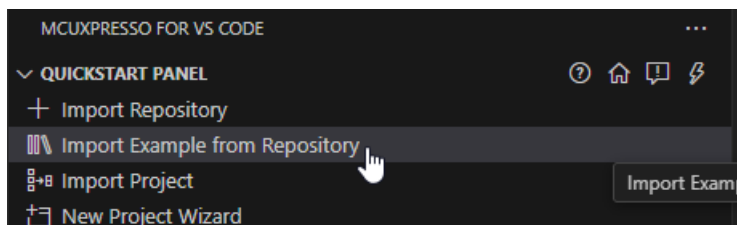


In the dropdown menu, select the MCUXpresso SDK, the Arm GNU Toolchain, your board, template, and application type. Click **Import**.

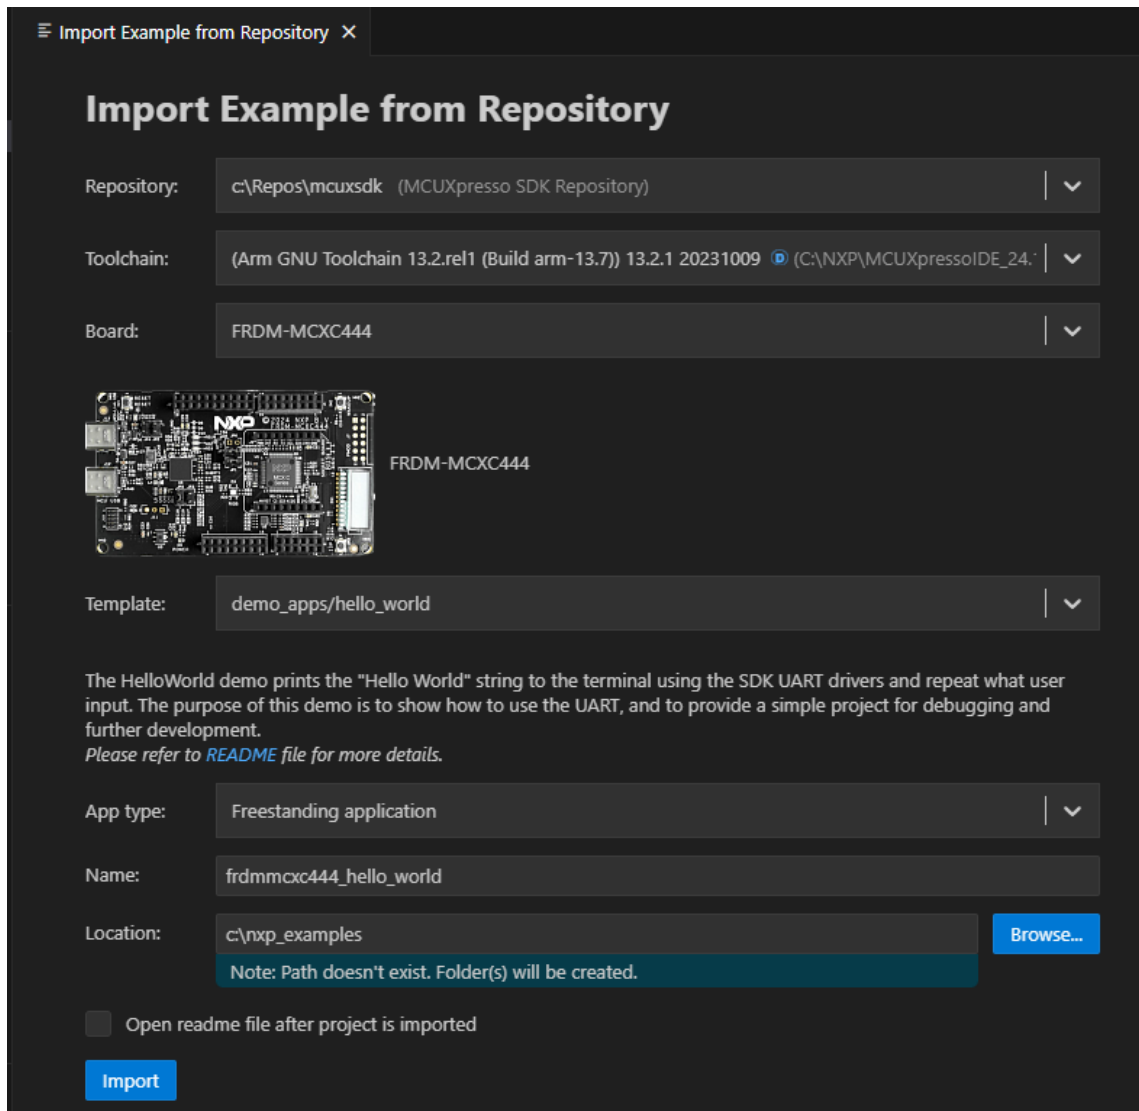

Note: The MCUXpresso SDK projects can be imported as **Repository applications** or **Freestanding applications**. The difference between the two is the import location. Projects imported as Repository examples will be located inside the MCUXpresso SDK, whereas Freestanding examples can be imported to a user-defined location. Select between these by designating your selection in the **App type** dropdown menu.

3. VS Code will prompt you to confirm if the imported files are trusted. Click **Yes**.
4. Navigate to the **PROJECTS** view. Find your project and click the **Build Project** icon.

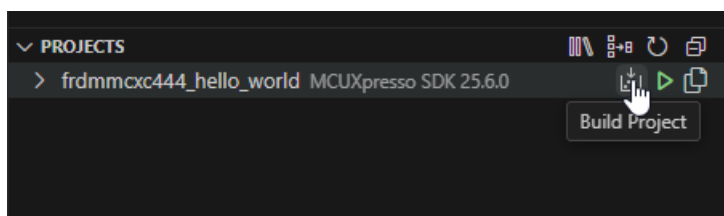


The integrated terminal will open at the bottom and will display the build output.

```


PROBLEMS  OUTPUT  TERMINAL  PORTS  DEBUG CONSOLE  SERIAL MONITOR  OFFLINE PERIPHERALS
[17/21] Building C object C:\MakeFiles\hello_world.dir\C:/Repos/mcuxsdk/mcuxsdk/components/debug_console_lite/fs1_debug_console.c.obj
[18/21] Building C object C:\MakeFiles\hello_world.dir\C:/Repos/mcuxsdk/mcuxsdk/devices/MCX/MCX444/drivers/fs1_clock.c.obj
[19/21] Building C object C:\MakeFiles\hello_world.dir\C:/Repos/mcuxsdk/mcuxsdk/drivers/lpuart/fs1_lpuart.c.obj
[20/21] Building C object C:\MakeFiles\hello_world.dir\C:/Repos/mcuxsdk/mcuxsdk/drivers/uart/fs1_uart.c.obj
[21/21] Linking C executable hello_world.elf
Memory region      Used Size  Region Size  %age Used
m_interrupts:      192 B     512 B       37.50%
m_flash_config:    16 B      16 B       100.00%
m_text:            7892 B   261104 B    3.02%
m_data:           2128 B    32 KB       6.49%
build finished successfully.
Terminal will be reused by tasks, press any key to close it.
    
```

Run an example application **Note:** for full details on MCUXpresso for VS Code debug probe support, see [MCUXpresso for VS Code Wiki](#).


1. Open the **Serial Monitor** from the VS Code's integrated terminal. Select the VCom Port for your device and set the baud rate to 115200.

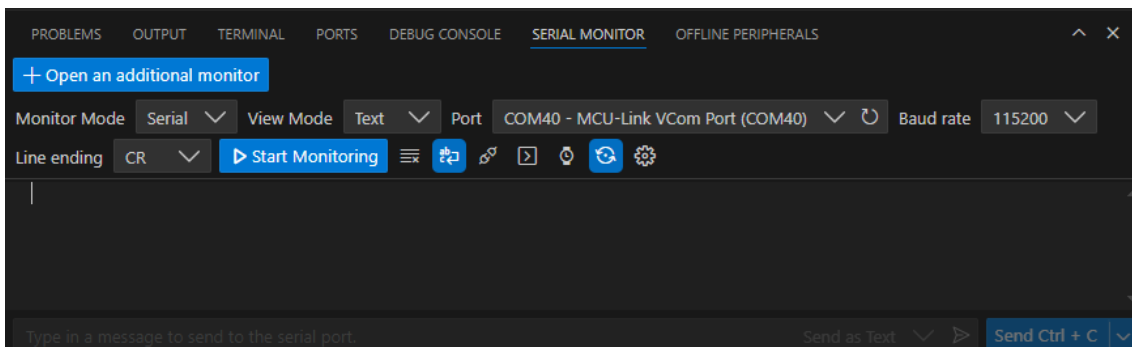

2. Navigate to the **PROJECTS** view and click the play button to initiate a debug session.

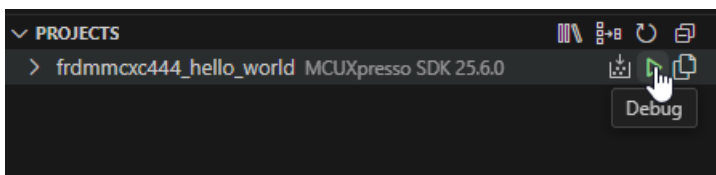

The debug session will begin. The debug controls are initially at the top.

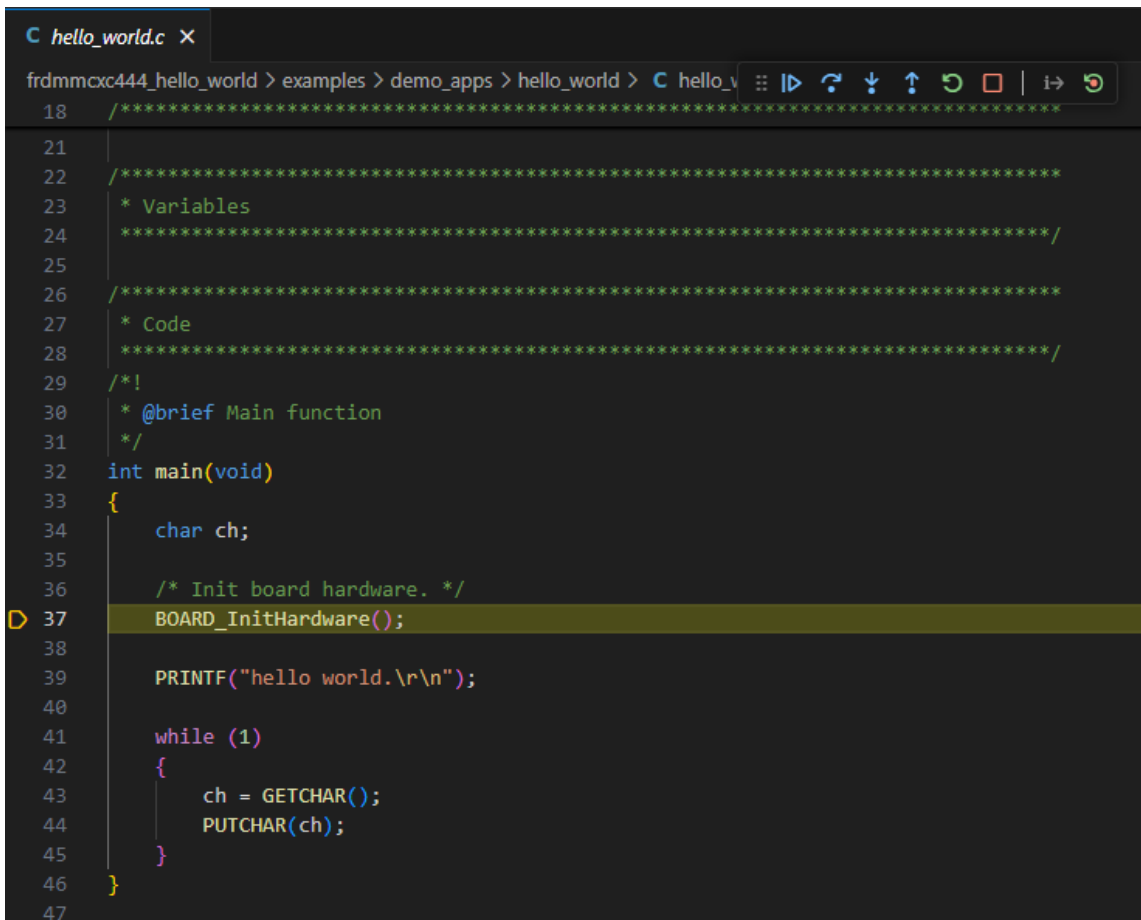


```

18  /*****
21
22  /*****
23  * Variables
24  *****/
25
26  /*****
27  * Code
28  *****/
29  /*!
30  * @brief Main function
31  */
32  int main(void)
33  {
34      char ch;
35
36      /* Init board hardware. */
37      BOARD_InitHardware();
38
39      PRINTF("hello world.\r\n");
40
41      while (1)
42      {
43          ch = GETCHAR();
44          PUTCHAR(ch);
45      }
46  }
47

```

3. Click **Continue** on the debug controls to resume execution of the code. Observe the output on the **Serial Monitor**.

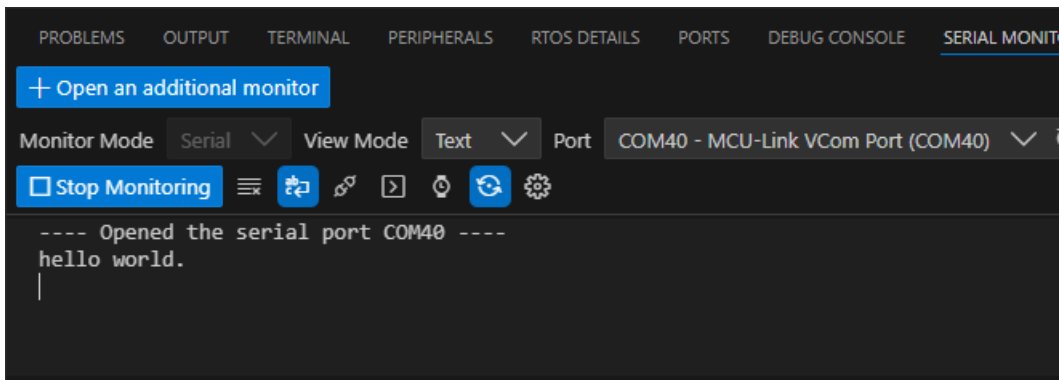

```

PROBLEMS  OUTPUT  TERMINAL  PERIPHERALS  RTOS DETAILS  PORTS  DEBUG CONSOLE  SERIAL MONITOR
+ Open an additional monitor
Monitor Mode Serial View Mode Text Port COM40 - MCU-Link VCom Port (COM40)
Stop Monitoring
---- Opened the serial port COM40 ----
hello world.
|

```

Running a demo using ARMGCC CLI/IAR/MDK

Supported Boards Use the west extension `west list_project` to understand the board support scope for a specified example. All supported build command will be listed in output:

```
west list_project -p examples/demo_apps/hello_world [-t armgcc]
```

```
INFO: [ 1][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evk9mimx8ulp -Dcore_id=cm33]
```

```
INFO: [ 2][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↳ evkbimxrt1050]
```

```
INFO: [ 3][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
```

(continues on next page)

(continued from previous page)

```

↪ evkbnimxrt1060]
INFO: [ 4][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm4]
INFO: [ 5][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkbnimxrt1170 -Dcore_id=cm7]
INFO: [ 6][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkcnimxrt1060]
INFO: [ 7][west build -p always examples/demo_apps/hello_world --toolchain armgcc --config release -b_
↪ evkmcimx7ulp]
...

```

The supported toolchains and build targets for an example are decided by the example-self example.yml and board example.yml, please refer Example Toolchains and Targets for more details.

Build the project Use `west build -h` to see help information for west build command. Compared to zephyr's west build, MCUXpresso SDK's west build command provides following additional options for mcux examples:

- `--toolchain`: specify the toolchain for this build, default `armgcc`.
- `--config`: value for `CMAKE_BUILD_TYPE`. If not provided, build system will get all the example supported build targets and use the first debug target as the default one. Please refer Example Toolchains and Targets for more details about example supported build targets.

Here are some typical usages for generating a SDK example:

```

# Generate example with default settings, default used device is the mainset MK22F51212
west build -b frdmk22f examples/demo_apps/hello_world

# Just print cmake commands, do not execute it
west build -b frdmk22f examples/demo_apps/hello_world --dry-run

# Generate example with other toolchain like iar, default armgcc
west build -b frdmk22f examples/demo_apps/hello_world --toolchain iar

# Generate example with other config type
west build -b frdmk22f examples/demo_apps/hello_world --config release

# Generate example with other devices with --device
west build -b frdmk22f examples/demo_apps/hello_world --device MK22F12810 --config release

```

For multicore devices, you shall specify the corresponding core id by passing the command line argument `-Dcore_id`. For example

```

west build -b evkbnimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_
↪ flexspi_nor_debug

```

For shield, please use the `--shield` to specify the shield to run, like

```

west build -b mimxrt700evk --shield a8974 examples/issdk_examples/sensors/fxls8974cf/fxls8974cf_poll -
↪ Dcore_id=cm33_core0

```

Sysbuild(System build) To support multicore project building, we ported Sysbuild from Zephyr. It supports combine multiple projects for compilation. You can build all projects by adding `--sysbuild` for main application. For example:

```

west build -b evkbnimxrt1170 --sysbuild ./examples/multicore_examples/hello_world/primary -Dcore_
↪ id=cm7 --config flexspi_nor_debug --toolchain=armgcc -p always

```

For more details, please refer to System build.

Config a Project Example in MCUXpresso SDK is configured and tested with pre-defined configuration. You can follow steps blow to change the configuration.

1. Run cmake configuration


```
west build -b evkbnimxrt1170 examples/demo_apps/hello_world -Dcore_id=cm7 --cmake-only -p
```

Please note the project will be built without `--cmake-only` parameter.

2. Run guiconfig target

```
west build -t guiconfig
```

Then you will get the Kconfig GUI launched, like

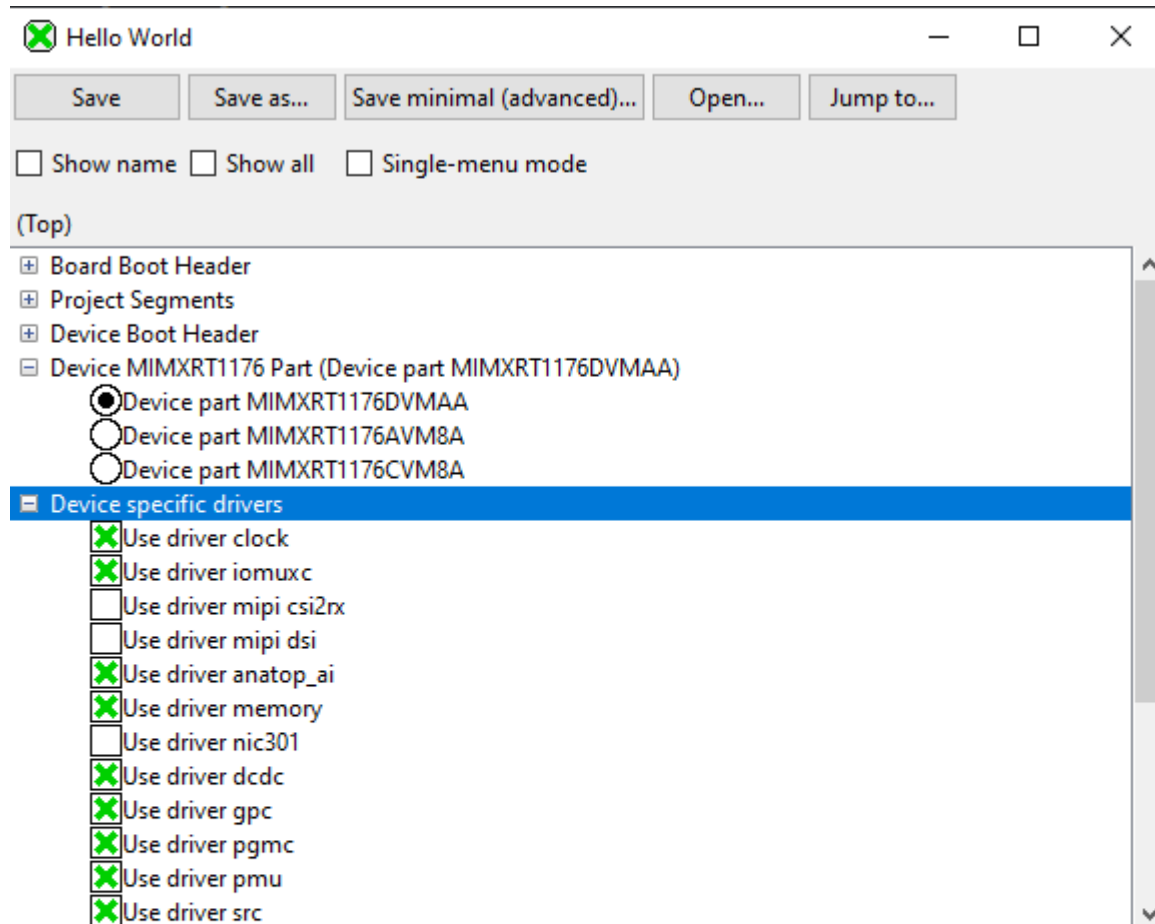

Kconfig definition, with parent deps. propagated to 'depends on'

```
=====  
At D:/sdk_next/mcuxsdk\devices\..\devices/RT/RT1170/MIMXRT1176\drivers/Kconfig: 5  
Included via D:/sdk_next/mcuxsdk/examples/demo_apps/hello_world/Kconfig: 6 ->  
D:/sdk_next/mcuxsdk/Kconfig.mcuxpresso: 9 -> D:/sdk_next/mcuxsdk\devices/Kconfig: 1  
-> D:/sdk_next/mcuxsdk\devices\..\devices/RT/RT1170/MIMXRT1176/Kconfig: 8  
Menu path: (Top)
```

```
menu "Device specific drivers"
```

You can reconfigure the project by selecting/deselecting Kconfig options.

After saving and closing the Kconfig GUI, you can directly run `west build` to build with the new configuration.

Flash *Note:* Please refer Flash and Debug The Example to enable west flash/debug support.

Flash the hello_world example:

```
west flash -r linkserver
```

Debug Start a gdb interface by following command:


```
west debug -r linkserver
```

Work with IDE Project The above build functionalities are all with CLI. If you want to use the toolchain IDE to work to enjoy the better user experience especially for debugging or you are already used to develop with IDEs like IAR, MDK, Xtensa and CodeWarrior in the embedded world, you can play with our IDE project generation functionality.

This is the cmd to generate the evkbnimxrt1170 hello_world IAR IDE project files.

```
west build -b evkbnimxrt1170 examples/demo_apps/hello_world --toolchain iar -Dcore_id=cm7 --config_↵  
↵flexspi_nor_debug -p always -t guiproject
```

By default, the IDE project files are generated in mcuxsdk/build/<toolchain> folder, you can open the project file with the IDE tool to work:

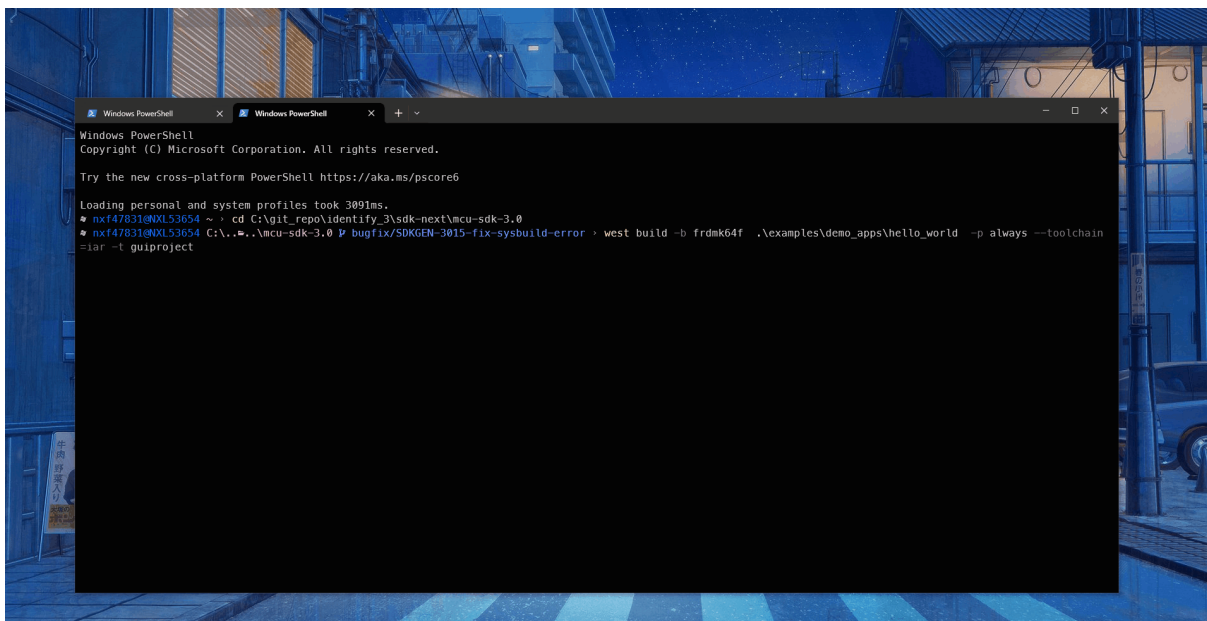

Note, please follow the [Installation](#) to setup the environment especially make sure that *ruby* has been installed.

1.4 Release Notes

1.4.1 MCUXpresso SDK Release Notes

Overview

The MCUXpresso SDK is a comprehensive software enablement package designed to simplify and accelerate application development with Arm Cortex-M-based devices from NXP, including its general purpose, crossover and Bluetooth-enabled MCUs. MCUXpresso SW and Tools for DSC

further extends the SDK support to current 32-bit Digital Signal Controllers. The MCUXpresso SDK includes production-grade software with integrated RTOS (optional), integrated enabling software technologies (stacks and middleware), reference software, and more.

In addition to working seamlessly with the MCUXpresso IDE, the MCUXpresso SDK also supports and provides example projects for various toolchains. The Development tools chapter in the associated Release Notes provides details about toolchain support for your board. Support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

Underscoring our commitment to high quality, the MCUXpresso SDK is MISRA compliant and checked with Coverity static analysis tools. For details on MCUXpresso SDK, see [MCUXpresso-SDK: Software Development Kit for MCUXpresso](#).

MCUXpresso SDK

As part of the MCUXpresso software and tools, MCUXpresso SDK is the evolution of Kinetis SDK, includes support for LPC, DSC, PN76, and i.MX System-on-Chip (SoC). The same drivers, APIs, and middleware are still available with support for Kinetis, LPC, DSC, and i.MX silicon. The MCUXpresso SDK adds support for the MCUXpresso IDE, an Eclipse-based toolchain that works with all MCUXpresso SDKs. Easily import your SDK into the new toolchain to access to all of the available components, examples, and demos for your target silicon. In addition to the MCUXpresso IDE, support for the MCUXpresso Config Tools allows easy cloning of existing SDK examples and demos, allowing users to leverage the existing software examples provided by the SDK for their own projects.

In order to maintain compatibility with legacy Freescale code, the filenames and source code in MCUXpresso SDK containing the legacy Freescale prefix FSL has been left as is. The FSL prefix has been redefined as the NXP Foundation Software Library.

Development tools

The MCUXpresso SDK was tested with following development tools. Same versions or above are recommended.

- MCUXpresso IDE, Rev. 25.06.xx
- IAR Embedded Workbench for Arm, version is 9.60.4
- Keil MDK, version is 5.42
- MCUXpresso for VS Code v25.09
- GCC Arm Embedded Toolchain 14.2.x

Supported development systems

This release supports board and devices listed in following table. The board and devices in bold were tested in this release.

De- vel- op- ment board	MCU devices				
FRDM	MCXA144VFT,	MCXA144VLH,	MCXA144VLL,	MCXA144VMP,	MCXA144VPJ,
MCXA145	MCXA145VFT,	MCXA145VLH,	MCXA145VLL,	MCXA145VMP,	MCXA145VPJ,
MCXA146	MCXA146VFT,	MCXA146VLH,	MCXA146VLL,	MCXA146VMP,	MCXA146VPJ,
MCXA154	MCXA154VFT,	MCXA154VLH,	MCXA154VLL,	MCXA154VMP,	MCXA154VPJ,
MCXA155	MCXA155VFT,	MCXA155VLH,	MCXA155VLL,	MCXA155VMP,	MCXA155VPJ,
MCXA156	MCXA156VFT,	MCXA156VLH,	MCXA156VLL,	MCXA156VMP,	MCXA156VPJ

MCUXpresso SDK release package

The MCUXpresso SDK release package content is aligned with the silicon subfamily it supports. This includes the boards, CMSIS, devices, middleware, and RTOS support.

Device support The device folder contains the whole software enablement available for the specific System-on-Chip (SoC) subfamily. This folder includes clock-specific implementation, device register header files, device register feature header files, and the system configuration source files. Included with the standard SoC support are folders containing peripheral drivers, toolchain support, and a standard debug console. The device-specific header files provide a direct access to the microcontroller peripheral registers. The device header file provides an overall SoC memory mapped register definition. The folder also includes the feature header file for each peripheral on the microcontroller. The toolchain folder contains the startup code and linker files for each supported toolchain. The startup code efficiently transfers the code execution to the main() function.

Board support The boards folder provides the board-specific demo applications, driver examples, and middleware examples.

Demo application and other examples The demo applications demonstrate the usage of the peripheral drivers to achieve a system level solution. Each demo application contains a readme file that describes the operation of the demo and required setup steps. The driver examples demonstrate the capabilities of the peripheral drivers. Each example implements a common use case to help demonstrate the driver functionality.

RTOS

FreeRTOS Real-time operating system for microcontrollers from Amazon

Middleware

CMSIS DSP Library The MCUXpresso SDK is shipped with the standard CMSIS development pack, including the prebuilt libraries.

USB Type-C PD Stack See the *MCUXpresso SDK USB Type-C PD Stack User's Guide* (document MCUXSDKUSBPUG) for more information

USB Host, Device, OTG Stack See the MCUXpresso SDK USB Stack User's Guide (document MCUXSDKUSBSUG) for more information.

Motor Control Software (ACIM, BLDC, PMSM) Motor control examples.

MCU Boot Open source MCU Bootloader.

LVGL LVGL Open Source Graphics Library

LittleFS LittleFS filesystem stack

FreeMASTER FreeMASTER communication driver for 32-bit platforms.

File systemFatfs The FatFs file system is integrated with the MCUXpresso SDK and can be used to access either the SD card or the USB memory stick when the SD card driver or the USB Mass Storage Device class implementation is used.

emWin The MCUXpresso SDK is pre-integrated with the SEGGER emWin GUI middleware. The AppWizard provides developers and designers with a flexible tool to create stunning user interface applications, without writing any code.

Release contents

Provides an overview of the MCUXpresso SDK release package contents and locations.

Deliverable	Location
Boards	INSTALL_DIR/boards
Demo Applications	INSTALL_DIR/boards/<board_name>/demo_apps
Driver Examples	INSTALL_DIR/boards/<board_name>/driver_examples
eIQ examples	INSTALL_DIR/boards/<board_name>/eIQ_examples
Board Project Template for MCUXpresso IDE NPW	INSTALL_DIR/boards/<board_name>/project_template
Driver, SoC header files, extension header files and feature header files, utilities	INSTALL_DIR/devices/<device_name>
CMSIS drivers	INSTALL_DIR/devices/<device_name>/cmsis_drivers
Peripheral drivers	INSTALL_DIR/devices/<device_name>/drivers
Toolchain linker files and startup code	INSTALL_DIR/devices/<device_name>/<toolchain_name>
Utilities such as debug console	INSTALL_DIR/devices/<device_name>/utilities
Device Project Template for MCUXpresso IDE NPW	INSTALL_DIR/devices/<device_name>/project_template
CMSIS Arm Cortex-M header files, DSP library source	INSTALL_DIR/CMSIS
Components and board device drivers	INSTALL_DIR/components
RTOS	INSTALL_DIR/rtos
Release Notes, Getting Started Document and other documents	INSTALL_DIR/docs
Tools such as shared cmake files	INSTALL_DIR/tools
Middleware	INSTALL_DIR/middleware

Known Issues

This section lists the known issues, limitations, and/or workarounds.

Cannot add SDK components into FreeRTOS projects

It is not possible to add any SDK components into FreeRTOS project using the MCUXpresso IDE New Project wizard.

1.5 ChangeLog

1.5.1 MCUXpresso SDK Changelog

Board Support Files

board

[25.06.00]

- Initial version

clock_config

[25.06.00]

- Initial version

pin_mux

[25.06.00]

- Initial version
-

AOI

[2.0.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.8, 2.2.

[2.0.0]

- Initial version.
-

CACHE LPCAC**[2.2.0]**

- Improvements
 - Used new add macros `FSL_FEATURE_SYSCON_HAS_LPCAC_CTRL_PARITY_MISS_EN_BIT` and `FSL_FEATURE_SYSCON_HAS_LPCAC_CTRL_PARITY_FAULT_EN_BIT` to support some platforms which `PARITY_MISS_EN` and `PARITY_FAULT_EN` bit may be reserved.

[2.1.1]

- Bug Fixes
 - Fixed an issue of `L1CACHE_InvalidateCodeCache()` function, to clean cache the `LP-CAC_CTRL[CLR_LPCAC]` should be set not clear.

[2.1.0]

- Improvements
 - Supported more features, such as write buffer control, write buffer limit and so on.

[2.0.0]

- Initial version.
-

CDOG**[2.1.3]**

- Re-design multiple instance IRQs and Clocks
- Add fix for RESTART command errata

[2.1.2]

- Support multiple IRQs
- Fix default CONTROL values

[2.1.1]

- Remove bit `CONTROL[CONTROL_CTRL]`.

[2.1.0]

- Rename CWT to CDOG.

[2.0.2]

- Fix MISRA-2012 issues.

[2.0.1]

- Fix doxygen issues.

[2.0.0]

- Initial version.
-

CLOCK

[2.0.0]

- Initial version.
-

MCX_CMC

[2.3.0]

- Improvements
 - Added macros to support some device have BSR_SCR bit field.

[2.2.3]

- Improvements
 - Clear SCB SCR[SLEEPDEEP] bitfield after wakeup.

[2.2.2]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.2.1]

- Improvements
 - Updated `_cmc_system_reset_interrupt_enable`, `_cmc_system_reset_interrupt_flag` and `_cmc_system_reset_sources` to support new added bit field.
- Bug Fixes
 - Fixed issue in `CMC_PowerOffSRAMAllMode()` and `CMC_PowerOffSRAMLowPowerOnly()` which overwrite reserved bit fields.

[2.2.0]

- Improvements
 - Added feature macro “`FSL_FEATURE_MCX_CMC_HAS_NO_FLASHCR_WAKE`” to support some devices where `FLASHCR[WAKE]` is reserved.

[2.1.0]

- Improvements
 - Added macros to support some devices(such as MCXA family) that only support one power domain.

[2.0.0]

- Initial version.
-

COMMON

[2.6.0]

- Bug Fixes
 - Fix CERT-C violations.

[2.5.0]

- New Features
 - Added new APIs `InitCriticalSectionMeasurementContext`, `DisableGlobalIRQEx` and `EnableGlobalIRQEx` so that user can measure the execution time of the protected sections.

[2.4.3]

- Improvements
 - Enable irqs that mount under `irqsteer` interrupt extender.

[2.4.2]

- Improvements
 - Add the macros to convert peripheral address to secure address or non-secure address.

[2.4.1]

- Improvements
 - Improve for the macro redefinition error when integrated with zephyr.

[2.4.0]

- New Features
 - Added `EnableIRQWithPriority`, `IRQ_SetPriority`, and `IRQ_ClearPendingIRQ` for ARM.
 - Added `MSDK_EnableCpuCycleCounter`, `MSDK_GetCpuCycleCount` for ARM.

[2.3.3]

- New Features
 - Added `NETC` into status group.

[2.3.2]

- Improvements
 - Make driver aarch64 compatible

[2.3.1]

- Bug Fixes
 - Fixed MAKE_VERSION overflow on 16-bit platforms.

[2.3.0]

- Improvements
 - Split the driver to common part and CPU architecture related part.

[2.2.10]

- Bug Fixes
 - Fixed the ATOMIC macros build error in cpp files.

[2.2.9]

- Bug Fixes
 - Fixed MISRA C-2012 issue, 5.6, 5.8, 8.4, 8.5, 8.6, 10.1, 10.4, 17.7, 21.3.
 - Fixed SDK_Malloc issue that not allocate memory with required size.

[2.2.8]

- Improvements
 - Included stddef.h header file for MDK tool chain.
- New Features:
 - Added atomic modification macros.

[2.2.7]

- Other Change
 - Added MECC status group definition.

[2.2.6]

- Other Change
 - Added more status group definition.
- Bug Fixes
 - Undef __VECTOR_TABLE to avoid duplicate definition in cmsis_clang.h

[2.2.5]

- Bug Fixes
 - Fixed MISRA C-2012 rule-15.5.

[2.2.4]

- Bug Fixes
 - Fixed MISRA C-2012 rule-10.4.

[2.2.3]

- New Features
 - Provided better accuracy of SDK_DelayAtLeastUs with DWT, use macro SDK_DELAY_USE_DWT to enable this feature.
 - Modified the Cortex-M7 delay count divisor based on latest tests on RT series boards, this setting lets result be closer to actual delay time.

[2.2.2]

- New Features
 - Added include RTE_Components.h for CMSIS pack RTE.

[2.2.1]

- Bug Fixes
 - Fixed violation of MISRA C-2012 Rule 3.1, 10.1, 10.3, 10.4, 11.6, 11.9.

[2.2.0]

- New Features
 - Moved SDK_DelayAtLeastUs function from clock driver to common driver.

[2.1.4]

- New Features
 - Added OTFAD into status group.

[2.1.3]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.3.

[2.1.2]

- Improvements
 - Add SUPPRESS_FALL_THROUGH_WARNING() macro for the usage of suppressing fallthrough warning.

[2.1.1]

- Bug Fixes
 - Deleted and optimized repeated macro.

[2.1.0]

- New Features
 - Added IRQ operation for XCC toolchain.
 - Added group IDs for newly supported drivers.

[2.0.2]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed the rule: rule-10.4.

[2.0.1]

- Improvements
 - Removed the implementation of LPC8XX Enable/DisableDeepSleepIRQ() function.
 - Added new feature macro switch “FSL_FEATURE_HAS_NO_NONCACHEABLE_SECTION” for specific SoCs which have no noncacheable sections, that helps avoid an unnecessary complex in link file and the startup file.
 - Updated the align(x) to **attribute**(aligned(x)) to support MDK v6 armclang compiler.

[2.0.0]

- Initial version.
-

CRC

[2.0.4]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.3]

- Bug fix:
 - Fix MISRA issues.

[2.0.2]

- Bug fix:
 - Fix MISRA issues.

[2.0.1]

- Bug fix:
 - DATA and DATALL macro definition moved from header file to source file.

[2.0.0]

- Initial version.
-

CTIMER**[2.3.3]**

- Bug Fixes
 - Fix CERT INT30-C INT31-C issue.
 - Make API CTIMER_SetupPwm and CTIMER_UpdatePwmDutycycle return fail if pulse width register overflow.

[2.3.2]

- Bug Fixes
 - Clear unexpected DMA request generated by RESET_PeripheralReset in API CTIMER_Init to avoid trigger DMA by mistake.

[2.3.1]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.7 and 12.2.

[2.3.0]

- Improvements
 - Added the CTIMER_SetPrescale(), CTIMER_GetCaptureValue(), CTIMER_EnableResetMatchChannel(), CTIMER_EnableStopMatchChannel(), CTIMER_EnableRisingEdgeCapture(), CTIMER_EnableFallingEdgeCapture(), CTIMER_SetShadowValue(), APIs Interface to reduce code complexity.

[2.2.2]

- Bug Fixes
 - Fixed SetupPwm() API only can use match 3 as period channel issue.

[2.2.1]

- Bug Fixes
 - Fixed use specified channel to setting the PWM period in SetupPwmPeriod() API.
 - Fixed Coverity Out-of-bounds issue.

[2.2.0]

- Improvements
 - Updated three API Interface to support Users to flexibly configure the PWM period and PWM output.
- Bug Fixes
 - MISRA C-2012 issue fixed: rule 8.4.

[2.1.0]

- Improvements
 - Added the CTIMER_GetOutputMatchStatus() API Interface.
 - Added feature macro for FSL_FEATURE_CTIMER_HAS_NO_CCR_CAP2 and FSL_FEATURE_CTIMER_HAS_NO_IR_CR2INT.

[2.0.3]

- Bug Fixes
 - MISRA C-2012 issue fixed: rule 10.3, 10.4, 10.6, 10.7 and 11.9.

[2.0.2]

- New Features
 - Added new API “CTIMER_GetTimerCountValue” to get the current timer count value.
 - Added a control macro to enable/disable the RESET and CLOCK code in current driver.
 - Added a new feature macro to update the API of CTimer driver for lpc8n04.

[2.0.1]

- Improvements
 - API Interface Change
 - * Changed API interface by adding CTIMER_SetupPwmPeriod API and CTIMER_UpdatePwmPulsePeriod API, which both can set up the right PWM with high resolution.

[2.0.0]

- Initial version.
-

DAC

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.1.0]

- New Features
 - Added support for period trigger mode.
 - Added support for sync trigger between dac instances.
 - Added support for configuring DAC sync cycles.
 - Added support for internal reference current selection.
 - Enabled buffer mode manually for K4 series board.

[2.0.2]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.3 and rule 17.7.

[2.0.1]

- New Features
 - Added a control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

EDMA

[2.10.6]

- Improvements
 - Add macro `FSL_FEATURE_EDMA_HAS_EDMA_TCD_CLOCK_ENABLE` to enable tcd clocks in `EDMA_Init` function.

[2.10.5]

- Bug Fixes
 - Fixed memory convert would convert NULL as zero address issue.

[2.10.4]

- Improvements
 - Add new MP register macros to ensure compatibility with different devices.
 - Add macro `DMA_CHANNEL_ARRAY_STEPn` to adapt to complex addressing of edma tcd registers.

[2.10.3]

- Bug Fixes
 - Clear interrupt status flags in EDMA_CreateHandle to avoid triggering interrupt by mistake.

[2.10.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3.

[2.10.1]

- Bug Fixes
 - Fixed EDMA_GetRemainingMajorLoopCount may return wrong value issue.
 - Fixed violations of the MISRA C-2012 rules 13.5, 10.4.

[2.10.0]

- Improvements
 - Modify the structures edma_core_mp_t, edma_core_channel_t, edma_core_tcd_t to adapt to edma5.
 - Add TCD register macro to facilitate confirmation of tcd type.
 - Modify the mask macro to a fixed value.
 - Add EDMA_TCD_TYPE macro to determine edma tcd type.
 - Add extension API to the following API to determine edma tcd type.
 - * EDMA_ConfigChannelSoftwareTCD -> EDMA_ConfigChannelSoftwareTCDExt
 - * EDMA_TcdReset -> EDMA_TcdResetExt
 - * EDMA_TcdSetTransferConfig -> EDMA_TcdSetTransferConfigExt
 - * EDMA_TcdSetMinorOffsetConfig -> EDMA_TcdSetMinorOffsetConfigExt
 - * EDMA_TcdSetChannelLink -> EDMA_TcdSetChannelLinkExt
 - * EDMA_TcdSetBandWidth -> EDMA_TcdSetBandWidthExt
 - * EDMA_TcdSetModulo -> EDMA_TcdSetModuloExt
 - * EDMA_TcdEnableAutoStopRequest -> EDMA_TcdEnableAutoStopRequestExt
 - * EDMA_TcdEnableInterrupts -> EDMA_TcdEnableInterruptsExt
 - * EDMA_TcdDisableInterrupts -> EDMA_TcdDisableInterruptsExt
 - * EDMA_TcdSetMajorOffsetConfig -> EDMA_TcdSetMajorOffsetConfigExt

[2.9.2]

- Improvements
 - Remove tcd alignment check in API that is low level and does not necessarily use scatter/gather mode.

[2.9.1]

- Bug Fixes
 - Deinit channel request source before set channel mux.

[2.9.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed the variable type definition error issue.
 - Fixed doxygen warning.
 - Fixed violations of MISRA C-2012 rule 18.1.

[2.8.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3

[2.8.0]

- Improvements
 - Added feature FSL_FEATURE_EDMA_HAS_NO_CH_SBR_SEC to separate DMA without SEC bitfield.

[2.7.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 11.8, 14.3,.

[2.7.0]

- Improvements
 - Use more accurate DMA instance based feature macros.
- New Features
 - Add new APIs EDMA_PrepareTransferTCD and EDMA_SubmitTransferTCD, which support EDMA transfer using TCD.

[2.6.0]

- Improvements
 - Modify the type of parameter channelRequestSource from dma_request_source_t to int32_t in the EDMA_SetChannelMux.

[2.5.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4, 11.6, 20.7, 12.2, 20.9, 5.3, 10.8, 8.4, 9.3.

[2.5.2]

- Improvements
 - Applied ERRATA 51327.

[2.5.1]

- Bug Fixes
 - Fixed the EDMA_ResetChannel function cannot reset channel DONE/ERROR status.

[2.5.0]

- Improvements
 - Added feature FSL_FEATURE_EDMA_HAS_NO_SBR_ATTR_BIT to separate DMA without ATTR bitfield.
 - Added api EDMA_GetChannelSystemBusInformation to gets the channel identification and attribute information on the system bus interface.
- Bug Fixes
 - Fixed the ESG bit not set in scatter gather mode issue.
 - Fixed the DREQ bit configuration missed in single transfer issue.
 - Cleared the interrupt status before invoke callback to avoid miss interrupt issue.
 - Removed disableRequestAfterMajorLoopComplete from edma_transfer_config_t structure as driver will handle it.
 - Fixed the channel mux configuration not compatible issue.
 - Fixed the out of bound access in function EDMA_DriverIRQHandler.

[2.4.4]

- Bug Fixes
 - Fixed comments by replacing STCD with TCD
 - Fixed the TCD overwrite issue when submit transfer request in the callback if there is a active TCD in hardware.

[2.4.3]

- Improvements
 - Added FSL_FEATURE_MEMORY_HAS_ADDRESS_OFFSET to convert the address between system mapped address and dma quick access address.
- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt for the non scatter gather case.

[2.4.2]

- Bug Fixes
 - Fixed the wrong tcd done count calculated in first TCD interrupt by correct the initial value of the header.
 - Fixed violations of MISRA C-2012 rule 10.3, 10.4.

[2.4.1]

- Bug Fixes
 - Added clear CITER and BITER registers in EDMA_AbortTransfer to make sure the TCD registers in a correct state for next calling of EDMA_SubmitTransfer.
 - Removed the clear DONE status for ESG not enabled case to avoid DONE bit cleared unexpectedly.

[2.4.0]

- Improvements
 - Added api EDMA_EnableContinuousChannelLinkMode to support continuous link mode.
 - Added apis EDMA_SetMajorOffsetConfig/EDMA_TcdSetMajorOffsetConfig to support major loop address offset feature.
 - Added api EDMA_EnableChannelMinorLoopMapping for minor loop offset feature.
 - Removed the redundant IRQ Handler in edma driver.

[2.3.2]

- Improvements
 - Fixed HIS ccm issue in function EDMA_PrepareTransferConfig.
 - Fixed violations of MISRA C-2012 rule 11.6, 10.7, 10.3, 18.1.
- Bug Fixes
 - Added ACTIVE & BITER & CITER bitfields to determine the channel status to fixed the issue of the transfer request cannot submit by function EDMA_SubmitTransfer when channel is idle.

[2.3.1]

- Improvements
 - Added source/destination address alignment check.
 - Added driver IRQ handler support for multi DMA instance in one SOC.

[2.3.0]

- Improvements
 - Added new api EDMA_PrepareTransferConfig to allow different configurations of width and offset.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.4, 10.1.
 - Fixed the Coverity issue regarding out-of-bounds write.

[2.2.0]

- Improvements
 - Added peripheral-to-peripheral support in EDMA driver.

[2.1.9]

- Bug Fixes
 - Fixed MISRA issue: Rule 10.7 and 10.8 in function `EDMA_DisableChannelInterrupts` and `EDMA_SubmitTransfer`.
 - Fixed MISRA issue: Rule 10.7 in function `EDMA_EnableAsyncRequest`.

[2.1.8]

- Bug Fixes
 - Fixed incorrect channel preemption base address used in `EDMA_SetChannelPreemptionConfig` API which causes incorrect configuration of the channel preemption register.

[2.1.7]

- Bug Fixes
 - Fixed incorrect transfer size setting.
 - * Added 8 bytes transfer configuration and feature for RT series;
 - * Added feature to support 16 bytes transfer for Kinetis.
 - Fixed the issue that `EDMA_HandleIRQ` would go to incorrect branch when TCD was not used and callback function not registered.

[2.1.6]

- Bug Fixes
 - Fixed KW3X MISRA Issue.
 - * Rule 14.4, 10.8, 10.4, 10.7, 10.1, 10.3, 13.5, and 13.2.
- Improvements
 - Cleared the IRQ handler unavailable for specific platform with macro `FSL_FEATURE_EDMA_MODULE_CHANNEL_IRQ_ENTRY_SHARED_OFFSET`.

[2.1.5]

- Improvements
 - Improved EDMA IRQ handler to support half interrupt feature.

[2.1.4]

- Bug Fixes
 - Cleared enabled request, status during `EDMA_Init` for the case that EDMA is halted before reinitialization.

[2.1.3]

- Bug Fixes
 - Added clear DONE bit in IRQ handler to avoid overwrite TCD issue.
 - Optimized above solution for the case that transfer request occurs in callback.

[2.1.2]

- Improvements
 - Added interface to get next TCD address.
 - Added interface to get the unused TCD number.

[2.1.1]

- Improvements
 - Added documentation for eDMA data flow when scatter/gather is implemented for the EDMA_HandleIRQ API.
 - Updated and corrected some related comments in the EDMA_HandleIRQ API and edma_handle_t struct.

[2.1.0]

- Improvements
 - Changed the EDMA_GetRemainingBytes API into EDMA_GetRemainingMajorLoopCount due to eDMA IP limitation (see API comments/note for further details).

[2.0.5]

- Improvements
 - Added pubweak DriverIRQHandler for K32H844P (16 channels shared).

[2.0.4]

- Improvements
 - Added support for SoCs with multiple eDMA instances.
 - Added pubweak DriverIRQHandler for KL28T DMA1 and MCIMX7U5_M4.

[2.0.3]

- Bug Fixes
 - Fixed the incorrect pubweak IRQHandler name issue, which caused re-definition build errors when client set his/her own IRQHandler, by changing the 32-channel IRQHandler name to DriverIRQHandler.

[2.0.2]

- Bug Fixes
 - Fixed incorrect minorLoopBytes type definition in _edma_transfer_config struct, and defined minorLoopBytes as uint32_t instead of uint16_t.

[2.0.1]

- Bug Fixes
 - Fixed the eDMA callback issue (which did not check valid status) in EDMA_HandleIRQ API.

[2.0.0]

- Initial version.
-

EIM

[2.0.2]

- Improvements
 - Reset the peripheral during initialization, otherwise some platforms may not work.
- Bug Fixes
 - Fixed incorrect register access in EIM_GetDataBitMask().

[2.0.1]

- Improvements
 - Update driver to support fewer channel.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.0]

- Initial version.
-

EQDC

[2.3.1]

- Bug Fix
- Fixed CTRL2[CMODE] field overwritten in API EQDC_Init.

[2.3.0]

- Improvements
- Add feature macro to support platforms which do not have compare interrupt.

[2.2.3]

- Bug Fix
- Clear Revolution Counter Register(REV) in init function to prevent its value not equal to zero after reset.

[2.2.2]

- Improvements
- Release peripheral from reset if necessary in init function.

[2.2.1]

- Bug Fix
- Fixed violations of the MISRA C-2012 rules 20.9.

[2.2.0]

- New features
- Supported the feature that the position counter to be initialized by Index Event Edge Mark.

[2.1.0]

- Bug Fix
- Fixed typo in interrupt enumeration values.
 - Improvements
- Supported Count Direct Change interrupt.
- Removed unused parameter in user configuration.
- Supported ERRATA_051383 check, the CTRL[DMAEN] can't be cleared.

[2.0.1]

- Bug Fix
- Fixed violations of the MISRA C-2012 rules 10.3, 10.6, 10.8, 14.4, 16.4.

[2.0.0]

- Initial version.
-

ERM

[2.0.2]

- Improvements
 - Reset the peripheral during initialization, otherwise some platforms may not work.
- Bug Fixes
 - Only keep bit 0-3 of ERM_GetInterruptStatus() as it may get other channel results in higher bits.

[2.0.1]

- Improvements
 - Update driver to support fewer channel.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3.

[2.0.0]

- Initial version.
-

FLEXCAN

[2.14.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 8.4, 10.1, 10.4, 18.1.

[2.14.3]

- Improvements
 - Add unhandled interrupt events check for following API:
 - * FLEXCAN_MbHandleIRQ
 - * FLEXCAN_EhancedRxFifoHandleIRQ
- Bug Fixes
 - Remove FLEXCAN_MemoryErrorHandleIRQ on some platform without memory error interrupt.
 - Add conditional compile for CTRL2[ISOCANFDEN] because some platform do not have this bit.

[2.14.2]

- Improvements
 - Add Coverage Justification for uncovered code.
 - Adjust API FLEXCAN_TransferAbortReceive order.
 - Update FLEXCAN_Enable to enter Freeze Mode first when enter Disable mode on some platform.
 - Added while loop timeout for following API:
 - * FLEXCAN_EnterFreezeMode
 - * FLEXCAN_ExitFreezeMode
 - * FLEXCAN_Enable
 - * FLEXCAN_Reset
 - * FLEXCAN_TransferSendBlocking
 - * FLEXCAN_TransferReceiveBlocking
 - * FLEXCAN_TransferFDSEndBlocking
 - * FLEXCAN_TransferFDReceiveBlocking
 - * FLEXCAN_TransferReceiveFifoBlocking
 - * FLEXCAN_TransferReceiveEnhancedFifoBlocking
- Bug Fixes
 - Remove remote frame feature in CANFD mode because there is no remote frame in the CANFD format.

- Remove legacy Rx FIFO disabled branch in FLEXCAN_SubHandlerForLegacyRxFIFO and FLEXCAN_SubHandlerForDataTransferred.

[2.14.1]

- Bug Fixes
 - Fixed register IMASK2-4 IFLAG2-4 HR_TIME_STAMP_n access issue on FlexCAN instances with different number of MBs.
 - Fixed bit field MBDSR1-3 access issue on FlexCAN instances with different number of MBs.
- Improvements
 - Unified following API as same parameter and return value type:
 - * FLEXCAN_GetMbStatusFlags
 - * FLEXCAN_ClearMbStatusFlags
 - * FLEXCAN_EnableMbInterrupts
 - * FLEXCAN_DisableMbInterrupts
 - Add workaround for ERR050443 and ERR052403.
 - Update message buffer read process in API FLEXCAN_ReadRxMb and FLEXCAN_ReadFDRxMb to make critical section as short as possible.
 - Simplify API FLEXCAN_DriverDataIRQHandler implementation by remove parameter type.

[2.14.0]

- Improvements
 - Support external time tick feature.
 - Support high resolution timestamp feature.
 - Enter Freeze Mode first when enter Disable Mode on some platform.
 - Add feature macro for Pretended Networking because some FlexCAN instance do not have this feature.
 - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
 - Add new FlexCAN IRQ Handler FLEXCAN_DriverDataIRQHandler and FLEXCAN_DriverEventIRQHandler. Thses IRQ Handlers are used on soc which FlexCAN interrupts are grouped by specific function and assigned to different vector.
 - Update macro FLEXCAN_WAKE_UP_FLAG and FLEXCAN_PNWAKE_UP_FLAG to simplify code.
 - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKMSK_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_NO_SLFWAK_SUPPORT.
 - Replace macro FSL_FEATURE_FLEXCAN_HAS_NO_WAKSRC_SUPPORT with FSL_FEATURE_FLEXCAN_HAS_GLITCH_FILTER.
- Bug Fixes
 - Fixed wrong interrupt and status flag helper macro in enumeration flexcan_flags and API FLEXCAN_DisableInterrupts.
 - Fixed interrupt flag helper macro typo issue.

- Remove flags which will be unassociated with interrupt in macro FLEXCAN_MEMORY_ERROR_INT_FLAG.
- Remove flags which will be unassociated with interrupt in macro FLEXCAN_ERROR_AND_STATUS_INT_FLAG.
- Fixed array out-of-bounds access when read enhanced Rx FIFO.

[2.13.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- Improvements
 - Support payload endianness selection feature.

[2.12.0]

- Improvements
 - Support automatic Remote Response feature.
 - Add API FLEXCAN_SetRemoteResponseMbConfig() to configure automatic Remote Response mailbox.

[2.11.8]

- Improvements
 - Synchronize flexcan driver update on s32z platform.

[2.11.7]

- Bug Fixes
 - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compatibility with edma5.

[2.11.6]

- Bug Fixes
 - Fixed ERRATA_9595 FLEXCAN_EnterFreezeMode() may result to bus fault on some platform.

[2.11.5]

- Bug Fixes
 - Fixed flexcan_memset() crash under high optimization compilation.

[2.11.4]

- Improvements
 - Update CANFD max bitrate to 10Mbps on MCXNx3x and MCXNx4x.
 - Release peripheral from reset if necessary in init function.

[2.11.3]

- Bug Fixes
 - Fixed FLEXCAN_TransferReceiveEnhancedFifoEDMA() compile error with DMA3.

[2.11.2]

- Bug Fixes
 - Fixed bug that timestamp in flexcan_handle_t not updated when RX overflow happens.

[2.11.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1.

[2.11.0]

- Bug Fixes
 - Fixed wrong base address argument in FLEXCAN2 IRQ Handler.
- Improvements
 - Add API to determine if the instance supports CAN FD mode at run time.

[2.10.1]

- Bug Fixes
 - Fixed HIS CCM issue.
 - Fixed RTOS issue by adding protection to read-modify-write operations on interrupt enable/disable API.

[2.10.0]

- Improvements
 - Update driver to make it able to support devices which has more than 64 8bytes MBs.
 - Update CAN FD transfer APIs to make them set/get edl bit according to frame content, which can make them compatible with classic CAN.

[2.9.2]

- Bug Fixes
 - Fixed the issue that FLEXCAN_CheckUnhandleInterruptEvents() can't detecting the exist enhanced RX FIFO interrupt status.
 - Fixed the issue that FLEXCAN_ReadPNWakeUpMB() does not return fail even no existing valid wake-up frame.
 - Fixed the issue that FLEXCAN_ReadEnhancedRxFifo() may clear bits other than the data available bit.
 - Fixed violations of the MISRA C-2012 rules 10.4, 10.8.
- Improvements
 - Return kStatus_FLEXCAN_RxFifoDisabled instead of kStatus_Fail when read FIFO fail during IRQ handler.
 - Remove unreachable code from timing calculates APIs.
 - Update Enhanced Rx FIFO handler to make it deal with underflow/overflow status first.

[2.9.1]

- Bug Fixes
 - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoBlocking() API clearing Fifo data available flag more than once.
 - Fixed the issue that entering FLEXCAN_SubHandlerForEnhancedRxFifo() even if Enhanced Rx fifo interrupts are not enabled.
 - Fixed the issue that FLEXCAN_TransferReceiveEnhancedFifoEDMA() update handle even if previous Rx FIFO receive not finished.
 - Fixed the issue that FLEXCAN_SetEnhancedRxFifoConfig() not configure the ERFCR[NFE] bits to the correct value.
 - Fixed the issue that FLEXCAN_ReceiveFifoEDMACallback() can't differentiate between Rx fifo and enhanced rx fifo.
 - Fixed the issue that FLEXCAN_TransferHandleIRQ() can't report Legacy Rx FIFO warning status.

[2.9.0]

- Improvements
 - Add public set bit rate API to make driver easier to use.
 - Update Legacy Rx FIFO transfer APIs to make it support received multiple frames during one API call.
 - Optimized FLEXCAN_SubHandlerForDataTransferred() API in interrupt handling to reduce the probability of packet loss.

[2.8.7]

- Improvements
 - Initialized the EDMA configuration structure in the FLEXCAN EDMA driver.

[2.8.6]

- Bug Fixes
- Fix Coverity overrun issues in fsl_flexcan_edma driver.

[2.8.5]

- Improvements
 - Make driver aarch64 compatible.

[2.8.4]

- Bug Fixes
 - Fixed FlexCan_Errata_6032 to disable all interrupts.

[2.8.3]

- Bug Fixes
 - Fixed an issue with the FLEXCAN_EnableInterrupts and FLEXCAN_DisableInterrupts interrupt enable bits in the CTRL1 register.

[2.8.2]

- Bug Fixes
 - Fixed errors in timing calculations and simplify the calculation process.
 - Fixed issue of CBT and FDCBT register may write failure.

[2.8.1]

- Bug Fixes
 - Fixed the issue of CAN FD three sampling points.
 - Added macro to support the devices that no MCR[SUPV] bit.
 - Remove unnecessary clear WMB operations.

[2.8.0]

- Improvements
 - Update config configuration.
 - * Added enableSupervisorMode member to support enable/disable Supervisor mode.
 - Simplified the algorithm in CAN FD improved timing APIs.

[2.7.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.3, 10.7.

[2.7.0]

- Improvements
 - Update config configuration.
 - * Added enablePretendedNetworking member to support enable/disable Pretended Networking feature.
 - * Added enableTransceiverDelayMeasure member to support enable/disable Transceiver Delay MeasurementPretended feature.
 - * Added bitRate/bitRateFD member to work as baudRate/baudRateFD member union.
 - Rename all “baud” in code or comments to “bit” to align with the CAN spec.
 - Added Pretended Networking mode related APIs.
 - * FLEXCAN_SetPNConfig
 - * FLEXCAN_GetPNMatchCount
 - * FLEXCAN_ReadPNWakeUpMB
 - Added support for Enhanced Rx FIFO.
 - Removed independent memory error interrupt/status APIs and put all interrupt/status control operation into FLEXCAN_EnableInterrupts/FLEXCAN_DisableInterrupts and FLEXCAN_GetStatusFlags/FLEXCAN_ClearStatusFlags APIs.
 - Update improved timing APIs to make it calculate improved timing according to CiA doc recommended.
 - * FLEXCAN_CalculateImprovedTimingValues.
 - * FLEXCAN_FDCalculateImprovedTimingValues.
 - Update FLEXCAN_SetBitRate/FLEXCAN_SetFDBitRate to added the use of enhanced timing registers.

[2.6.2]

- Improvements
 - Add CANFD frame data length enumeration.

[2.6.1]

- Bug Fixes
 - Fixed the issue of not fully initializing memory in FLEXCAN_Reset() API.

[2.6.0]

- Improvements
 - Enable CANFD ISO mode in FLEXCAN_FDInit API.
 - Enable the transceiver delay compensation feature when enable FD operation and set bitrate switch.
 - Implementation memory error control in FLEXCAN_Init API.
 - Improve FLEXCAN_FDCalculateImprovedTimingValues API to get same value for FPRESDIV and PRES DIV.
 - Added memory error configuration for user.

- * enableMemoryErrorControl
- * enableNonCorrectableErrorEnterFreeze
- Added memory error related APIs.
 - * FLEXCAN_GetMemoryErrorReportStatus
 - * FLEXCAN_GetMemoryErrorStatusFlags
 - * FLEXCAN_ClearMemoryErrorStatusFlags
 - * FLEXCAN_EnableMemoryErrorInterrupts
 - * FLEXCAN_DisableMemoryErrorInterrupts
- Bug Fixes
 - Fixed the issue of sent duff CAN frame after call FLEXCAN_FDInit() API.

[2.5.2]

- Bug Fixes
 - Fixed the code error issue and simplified the algorithm in improved timing APIs.
 - * The bit field in CTRL1 register couldn't calculate higher ideal SP, we set it as the lowest one(75%)
 - FLEXCAN_CalculateImprovedTimingValues
 - FLEXCAN_FDCalculateImprovedTimingValues
 - Fixed MISRA-C 2012 Rule 17.7 and 14.4.
- Improvements
 - Pass EsrStatus to callback function when kStatus_FLEXCAN_ErrorStatus is coming.

[2.5.1]

- Bug Fixes
 - Fixed the non-divisible case in improved timing APIs.
 - * FLEXCAN_CalculateImprovedTimingValues
 - * FLEXCAN_FDCalculateImprovedTimingValues

[2.5.0]

- Bug Fixes
 - MISRA C-2012 issue check.
 - * Fixed rules, containing: rule-10.1, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-11.8, rule-12.2, rule-13.4, rule-14.4, rule-15.5, rule-15.6, rule-15.7, rule-16.4, rule-17.3, rule-5.8, rule-8.3, rule-8.5.
 - Fixed the issue that API FLEXCAN_SetFDRxMbConfig lacks inactive message buff.
 - Fixed the issue of Pa082 warning.
 - Fixed the issue of dead lock in the function of interruption handler.
 - Fixed the issue of Legacy Rx Fifo EDMA transfer data fail in evkmimxrt1060 and evk-mimxrt1064.
 - Fixed the issue of setting CANFD Bit Rate Switch.

- Fixed the issue of operating unknown pointer risk.
 - * when used the pointer “handle->mbFrameBuf[mbIdx]” to update the timestamp in a short-live TX frame, the frame pointer became as unknown, the action of operating it would result in program stack destroyed.
- Added assert to check current CAN clock source affected by other clock gates in current device.
 - * In some chips, CAN clock sources could be selected by CCM. But for some clock sources affected by other clock gates, if user insisted on using that clock source, they had to open these gates at the same time. However, they should take into consideration the power consumption issue at system level. In RT10xx chips, CAN clock source 2 was affected by the clock gate of lpuart1. ERRATA ID: (ERR050235 in CCM).
- Improvements
 - Implementation for new FLEXCAN with ECC feature able to exit Freeze mode.
 - Optimized the function of interruption handler.
 - Added two APIs for FLEXCAN EDMA driver.
 - * FLEXCAN_PrepareTransfConfiguration
 - * FLEXCAN_StartTransferDatafromRxFIFO
 - Added new API for FLEXCAN driver.
 - * FLEXCAN_GetTimeStamp
 - For TX non-blocking API, we wrote the frame into mailbox only, so no need to register TX frame address to the pointer, and the timestamp could be updated into the new global variable handle->timestamp[mbIdx], the FLEXCAN driver provided a new API for user to get it by handle and index number after TX DONE Success.
 - * FLEXCAN_EnterFreezeMode
 - * FLEXCAN_ExitFreezeMode
 - Added new configuration for user.
 - * disableSelfReception
 - * enableListenOnlyMode
 - Renamed the two clock source enum macros based on CLKSRC bit field value directly.
 - * The CLKSRC bit value had no property about Oscillator or Peripheral type in lots of devices, it acted as two different clock input source only, but the legacy enum macros name contained such property, that misled user to select incorrect CAN clock source.
 - Created two new enum macros for the FLEXCAN driver.
 - * kFLEXCAN_ClkSrc0
 - * kFLEXCAN_ClkSrc1
 - Deprecated two legacy enum macros for the FLEXCAN driver.
 - * kFLEXCAN_ClkSrcOsc
 - * kFLEXCAN_ClkSrcPeri
 - Changed the process flow for Remote request frame response..
 - * Created a new enum macro for the FLEXCAN driver.
 - kStatus_FLEXCAN_RxRemote

- Changed the process flow for kFLEXCAN_StateRxRemote state in the interrupt handler.
 - * Should the TX frame not register to the pointer of frame handle, interrupt handler would not be able to read the remote response frame from the mail box to ram, so user should read the frame by manual from mail box after a complete remote frame transfer.

[2.4.0]

- Bug Fixes
 - MISRA C-2012 issue check.
 - * Fixed rules, containing: rule-12.1, rule-17.7, rule-16.4, rule-11.9, rule-8.4, rule-14.4, rule-10.8, rule-10.4, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-8.3, rule-12.2 and rule-16.1.
 - Fixed the issue that CANFD transfer data fail when bus baudrate is 30Khz.
 - Fixed the issue that ERR009595 does not follow the ERRATA document.
 - Fixed code error for ERR006032 work around solution.
 - Fixed the Coverity issue of BAD_SHIFT in FLEXCAN.
 - Fixed the Repo build warning issue for variable without initial.
- Improvements
 - Fixed the run fail issue of FlexCAN RemoteRequest UT Case.
 - Implementation all TX and RX transferring Timestamp used in FlexCAN demos.
 - Fixed the issue of UT Test Fail for CANFD payload size changed from 64BperMB to 8PerMB.
 - Implementation for improved timing API by baud rate.

[2.3.2]

- Improvements
 - Implementation for ERR005959.
 - Implementation for ERR005829.
 - Implementation for ERR006032.

[2.3.1]

- Bug Fixes
 - Added correct handle when kStatus_FLEXCAN_TxSwitchToRx is coming.

[2.3.0]

- Improvements
 - Added self-wakeup support for STOP mode in the interrupt handling.

[2.2.3]

- Bug Fixes
 - Fixed the issue of CANFD data phase's bit rate not set as expected.

[2.2.2]

- Improvements
 - Added a time stamp feature and enable it in the interrupt_transfer example.

[2.2.1]

- Improvements
 - Separated CANFD initialization API.
 - In the interrupt handling, fix the issue that the user cannot use the normal CAN API when with an FD.

[2.2.0]

- Improvements
 - Added FSL_FEATURE_FLEXCAN_HAS_SUPPORT_ENGINE_CLK_SEL_REMOVE feature to support SoCs without CAN Engine Clock selection in FlexCAN module.
 - Added FlexCAN Serial Clock Operation to support i.MX SoCs.

[2.1.0]

- Bug Fixes
 - Corrected the spelling error in the function name FLEXCAN_XXX().
 - Moved Freeze Enable/Disable setting from FLEXCAN_Enter/ExitFreezeMode() to FLEXCAN_Init().
 - Corrected wrong helper macro values.
- Improvements
 - Hid FLEXCAN_Reset() from user.
 - Used NDEBUB macro to wrap FLEXCAN_IsMbOccupied() function instead of DEBUG macro.

[2.0.0]

- Initial version.
-

FLEXCAN_EDMA

[2.12.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 18.1.

[2.12.0]

- Improvements
 - Support high resolution timestamp feature in enhanced Rx FIFO EDMA.
 - Add feature macro for enhanced Rx FIFO because some FlexCAN instance do not have this feature.
- Bug Fixes
 - Fixed array out-of-bounds access when read enhanced Rx FIFO in EDMA.

[2.11.7]

- Refer FLEXCAN driver change log 2.7.0 to 2.11.7
-

FLEXIO**[2.3.0]**

- Improvements
 - Supported platforms which don't have DOZE mode control.
 - Added more pin control functions.

[2.2.3]

- Improvements
 - Adapter the FLEXIO driver to platforms which don't have system level interrupt controller, such as NVIC.

[2.2.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.1]

- Improvements
 - Added doxygen index parameter comment in FLEXIO_SetClockMode.

[2.2.0]

- New Features
 - Added new APIs to support FlexIO pin register.

[2.1.0]

- Improvements
 - Added API FLEXIO_SetClockMode to set flexio channel counter and source clock.

[2.0.4]

- Bug Fixes
 - Fixed MISRA 8.4 issues.

[2.0.3]

- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.0.2]

- Improvements
 - Split FLEXIO component which combines all flexio/flexio_uart/flexio_i2c/flexio_i2s drivers into several components: FlexIO component, flexio_uart component, flexio_i2c_master component, and flexio_i2s component.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.0.1]

- Bug Fixes
 - Fixed the doze mode configuration error in FLEXIO_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
-

FLEXIO_I2C

[2.6.2]

- Improvements
 - Added timeout for while loop in FLEXIO_I2C_MasterTransferBlocking().
- Bug Fixes
 - Fixed build issues related to I2C_RETRY_TIMES.

[2.6.1]

- Bug Fixes
 - Fixed coverity issues

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Split some functions, fixed CCM problem in file `fsl_flexio_i2c_master.c`.

[2.4.0]

- Improvements
 - Added delay of 1 clock cycle in `FLEXIO_I2C_MasterTransferRunStateMachine` to ensure that bus would be idle before next transfer if master is nacked.
 - Fixed issue that the restart setup time is less than the time in I2C spec by adding delay of 1 clock cycle before restart signal.

[2.3.0]

- Improvements
 - Used 3 timers instead of 2 to support transfer which is more than 14 bytes in single transfer.
 - Improved `FLEXIO_I2C_MasterTransferGetCount` so that the API can check whether the transfer is still in progress.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
 - Added an API for checking bus pin status.
- Bug Fixes
 - Fixed COVERITY issue of useless call in `FLEXIO_I2C_MasterTransferRunStateMachine`.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.
 - Added codes in `FLEXIO_I2C_MasterTransferCreateHandle` to clear pending NVIC IRQ, disable internal IRQs before enabling NVIC IRQ.
 - Modified code so that during master's nonblocking transfer the start and slave address are sent after interrupts being enabled, in order to avoid potential issue of sending the start and slave address twice.

[2.1.7]

- Bug Fixes
 - Fixed the issue that FLEXIO_I2C_MasterTransferBlocking did not wait for STOP bit sent.
 - Fixed COVERITY issue of useless call in FLEXIO_I2C_MasterTransferRunStateMachine.
 - Fixed the issue that I2C master did not check whether bus was busy before transfer.

[2.1.6]

- Bug Fixes
 - Fixed the issue that I2C Master transfer APIs(blocking/non-blocking) did not support the situation of master transfer with subaddress and transfer data size being zero, which means no data followed the subaddress.

[2.1.5]

- Improvements
 - Unified component full name to FLEXIO I2C Driver.

[2.1.4]

- Bug Fixes
 - The following modifications support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.3]

- Improvements
 - Changed the prototype of FLEXIO_I2C_MasterInit to return kStatus_Success if initialized successfully or to return kStatus_InvalidArgument if “(srcClock_Hz / masterConfig->baudRate_Bps) / 2 - 1” exceeds 0xFFU.

[2.1.2]

- Bug Fixes
 - Fixed the FLEXIO I2C issue where the master could not receive data from I2C slave in high baudrate.
 - Fixed the FLEXIO I2C issue where the master could not receive NAK when master sent non-existent addr.
 - Fixed the FLEXIO I2C issue where the master could not get transfer count successfully.
 - Fixed the FLEXIO I2C issue where the master could not receive data successfully when sending data first.
 - Fixed the Dozen mode configuration error in FLEXIO_I2C_MasterInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.

- Fixed the issue that FLEXIO_I2C_MasterTransferBlocking API called FLEXIO_I2C_MasterTransferCreateHandle, which lead to the s_flexioHandle/s_flexioIsr/s_flexioType variable being written. Then, if calling FLEXIO_I2C_MasterTransferBlocking API multiple times, the s_flexioHandle/s_flexioIsr/s_flexioType variable would not be written any more due to it being out of range. This lead to the following situation: NonBlocking transfer APIs could not work due to the fail of register IRQ.

[2.1.1]

- Bug Fixes
 - Implemented the FLEXIO_I2C_MasterTransferBlocking API which is defined in header file but has no implementation in the C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
-

FLEXIO_I2S

[2.2.2]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 12.4.

[2.2.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.2.0]

- New Features
 - Added timeout mechanism when waiting certain state in transfer API.
- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed violations of the MISRA C-2012 rules 10.4, 14.4, 11.8, 11.9, 10.1, 17.7, 11.6, 10.3, 10.7.

[2.1.6]

- Bug Fixes
 - Added reset flexio before flexio i2s init to make sure flexio status is normal.

[2.1.5]

- Bug Fixes
 - Fixed the issue that I2S driver used hard code for bitwidth setting.

[2.1.4]

- Improvements
 - Unified component's full name to FLEXIO I2S (DMA/EDMA) driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- New Features
 - Added configure items for all pin polarity and data valid polarity.
 - Added default configure for pin polarity and data valid polarity.

[2.1.1]

- Bug Fixes
 - Fixed FlexIO I2S RX data read error and eDMA address error.
 - Fixed FlexIO I2S slave timer compare setting error.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
-

FLEXIO_I2S_EDMA

[2.1.9]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 12.4.

[2.1.8]

- Improvements
 - Applied EDMA ERRATA 51327.
-

FLEXIO_MCU_LCD**[2.3.0]**

- New Features
 - Supported passing an extra user defined parameter to GPIO functions to control the CS/RS/RDWR pin signal.

[2.2.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.1.0]

- New Features
 - Supported transmit only data without command.

[2.0.8]

- Bug Fixes
 - Fixed bug that FLEXIO_MCULCD_Init return kStatus_Success even with invalid parameter.
 - Fixed glitch on WR, that when initially configure the timer pin as output, or change the pin back to disabled, the pin may be driven low causing glitch on bus. Configure the pin as bidirection output first then perform a subsequent write to change to output or disabled to avoid the issue.

[2.0.6]

- Bug Fixes
 - Fixed MISRA 10.4 issues when FLEXIO_MCULCD_DATA_BUS_WIDTH defined as signed value.

[2.0.5]

- Improvements
 - Changed FLEXIO_MCULCD_WriteDataArrayBlocking's data parameter to const type.

[2.0.4]

- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.0.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.4, 10.6, 14.4, 17.7.

[2.0.2]

- Improvements
 - Unified component full name to FLEXIO_MCU_LCD (EDMA) driver.

[2.0.1]

- Bug Fixes
 - The following modification to support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
 - * Updated module Enable APIs to only support enable operation.

[2.0.0]

- Initial version.
-

FLEXIO_MCU_LCD_EDMA

[2.0.6]

- New Features
 - Supported passing an extra user defined parameter to GPIO functions to control the RDWR pin signal.

[2.0.5]

- New Features
 - Supported transmit only data without command.

[2.0.4]

- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.0.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.1, 10.3, 10.4, 10.6, 14.4, 17.7.

[2.0.2]

- Improvements
 - Unified component full name to FLEXIO_MCU_LCD (EDMA) driver.

[2.0.1]

- Bug Fixes
 - The following modification to support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
 - * Updated module Enable APIs to only support enable operation.

[2.0.0]

- Initial version.
-

FLEXIO_SPI**[2.4.3]**

- Improvements
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.4.2]

- Bug Fixes
 - Fixed FLEXIO_SPI_MasterTransferBlocking and FLEXIO_SPI_MasterTransferNonBlocking issue in CS continuous mode, the CS might not be continuous.

[2.4.1]

- Bug Fixes
 - Fixed coverity issues

[2.4.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.3.5]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.3.4]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API

[2.3.3]

- Bugfixes
 - Fixed cs-continuous mode.

[2.3.2]

- Improvements
 - Changed FLEXIO_SPI_DUMMYDATA to 0x00.

[2.3.1]

- Bugfixes
 - Fixed IRQ SHIFTBUF overrun issue when one FLEXIO instance used as multiple SPIs.

[2.3.0]

- New Features
 - Supported FLEXIO_SPI slave transfer with continuous master CS signal and CPHA=0.
 - Supported FLEXIO_SPI master transfer with continuous CS signal.
 - Support 32 bit transfer width.
- Bug Fixes
 - Fixed wrong timer compare configuration for dma/edma transfer.
 - Fixed wrong byte order of rx data if transfer width is 16 bit, since the we use shifter buffer bit swapped/byte swapped register to read in received data, so the high byte should be read from the high bits of the register when MSB.

[2.2.1]

- Bug Fixes
 - Fixed bug in FLEXIO_SPI_MasterTransferAbortEDMA that when aborting EDMA transfer EDMA_AbortTransfer should be used rather than EDMA_StopTransfer.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.
 - Added codes in FLEXIO_SPI_MasterTransferCreateHandle and FLEXIO_SPI_SlaveTransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.1.3]

- Improvements
 - Unified component full name to FLEXIO SPI(DMA/EDMA) Driver.
- Bug Fixes
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.2]

- Bug Fixes
 - The following modification support FlexIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer config instead of disabling module/clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.1]

- Bug Fixes
 - Fixed bug where FLEXIO SPI transfer data is in 16 bit per frame mode with eDMA.
 - Fixed bug when FLEXIO SPI works in eDMA and interrupt mode with 16-bit per frame and Lsbfirst.
 - Fixed the Dozen mode configuration error in FLEXIO_SPI_MasterInit/FLEXIO_SPI_SlaveInit API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
- Improvements
 - Added #ifndef/#endif to allow users to change the default TX value at compile time.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added transferSize in handle structure to record the transfer size.
 - Bug Fixes
 - Fixed the error register address return for 16-bit data write in FLEXIO_SPI_GetTxDataRegisterAddress.
 - Provided independent IRQHandler/transfer APIs for Master and slave to fix the baudrate limit issue.
-

FLEXIO_UART**[2.6.4]**

- Improvements
 - Make UART_RETRY_TIMES configurable by CONFIG_UART_RETRY_TIMES.

[2.6.3]

- Bug Fixes
 - Fixed coverity issues

[2.6.2]

- Bug Fixes
 - Fixed coverity issues

[2.6.1]

- Improvements
 - Improve baudrate calculation method, to support higher frequency FlexIO clock source.

[2.6.0]

- Improvements
 - Supported platforms which don't have DOZE mode control.

[2.5.1]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.0]

- Improvements
 - Added API FLEXIO_UART_FlushShifters to flush UART fifo.

[2.4.0]

- Improvements
 - Use separate data for TX and RX in flexio_uart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling FLEXIO_UART_TransferReceiveNonBlocking, the received data count returned by FLEXIO_UART_TransferGetReceiveCount is wrong.

[2.3.0]

- Improvements
 - Added check for baud rate's accuracy that returns kStatus_FLEXIO_UART_BaudrateNotSupport when the best achieved baud rate is not within 3% error of configured baud rate.
- Bug Fixes
 - Added codes in FLEXIO_UART_TransferCreateHandle to clear pending NVIC IRQ before enabling NVIC IRQ, to fix issue of pending IRQ interfering the on-going process.

[2.2.0]

- Improvements
 - Added timeout mechanism when waiting for certain states in transfer driver.
- Bug Fixes
 - Fixed MISRA 10.4 issues.

[2.1.6]

- Bug Fixes
 - Fixed IAR Pa082 warnings.
 - Fixed MISRA issues
 - * Fixed rules 10.1, 10.3, 10.4, 10.7, 11.6, 11.9, 14.4, 17.7.

[2.1.5]

- Improvements
 - Triggered user callback after all the data in ringbuffer were received in FLEXIO_UART_TransferReceiveNonBlocking.

[2.1.4]

- Improvements
 - Unified component full name to FLEXIO UART(DMA/EDMA) Driver.

[2.1.3]

- Bug Fixes
 - The following modifications support FLEXIO using multiple instances:
 - * Removed FLEXIO_Reset API in module Init APIs.
 - * Updated module Deinit APIs to reset the shifter/timer configuration instead of disabling module and clock.
 - * Updated module Enable APIs to only support enable operation.

[2.1.2]

- Bug Fixes
 - Fixed the transfer count calculation issue in FLEXIO_UART_TransferGetReceiveCount, FLEXIO_UART_TransferGetSendCount, FLEXIO_UART_TransferGetReceiveCountDMA, FLEXIO_UART_TransferGetSendCountDMA, FLEXIO_UART_TransferGetReceiveCountEDMA and FLEXIO_UART_TransferGetSendCountEDMA.
 - Fixed the Dozen mode configuration error in FLEXIO_UART_Init API. For enableInDoze = true, the configuration should be 0; for enableInDoze = false, the configuration should be 1.
 - Added code to report errors if the user sets a too-low-baudrate which FLEXIO cannot reach.
 - Disabled FLEXIO_UART receive interrupt instead of all NVICs when reading data from ring buffer. If ring buffer is used, receive nonblocking will disable all NVIC interrupts to protect the ring buffer. This had negative effects on other IPs using interrupt.

[2.1.1]

- Bug Fixes
 - Changed the API name FLEXIO_UART_StopRingBuffer to FLEXIO_UART_TransferStopRingBuffer to align with the definition in C file.

[2.1.0]

- New Features
 - Added Transfer prefix in transactional APIs.
 - Added txSize/rxSize in handle structure to record the transfer size.
 - Bug Fixes
 - Added an error handle to handle the situation that data count is zero or data buffer is NULL.
-

FLEXIO_UART_EDMA

[2.3.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.3.0]

- Refer FLEXIO_UART driver change log to 2.3.0
-

FREQME

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Fixed MISRA issues.

[2.1.0]

- Updated register name.

[2.0.0]

- Initial version.
-

GLIKEY

[2.0.1]

- Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.

[2.0.0]

- Initial version.
-

GPIO

[2.8.2]

- Bug Fixes
 - Fixed COVERITY issue that GPIO_GetInstance could return clock array overflow values due to GPIO base and clock being out of sync.

[2.8.1]

- Bug Fixes
 - Fixed CERT INT31-C issues.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.

[2.8.0]

- Improvements
 - Add API GPIO_PortInit/GPIO_PortDeinit to set GPIO clock enable and releasing GPIO reset.
 - Remove support for API GPIO_GetPinsDMARequestFlags with GPIO_ISFR_COUNT <= 1.

[2.7.3]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.2]

- New Features
 - Support devices without PORT module.

[2.7.1]

- Bug Fixes
 - Fixed MISRA C-2012 rule 10.4 issues in GPIO_GpioGetInterruptChannelFlags() function and GPIO_GpioClearInterruptChannelFlags() function.

[2.7.0]

- New Features
 - Added API to support Interrupt select (IRQS) bitfield.

[2.6.0]

- New Features
 - Added API to get GPIO version information.
 - Added API to control a pin for general purpose input.
 - Added some APIs to control pin in secure and privilege status.

[2.5.3]

- Bug Fixes
 - Correct the feature macro typo: FSL_FEATURE_GPIO_HAS_NO_INDEP_OUTPUT_CONTORL.

[2.5.2]

- Improvements
 - Improved GPIO_PortSet/GPIO_PortClear/GPIO_PortToggle functions to support devices without Set/Clear/Toggle registers.

[2.5.1]

- Bug Fixes
 - Fixed wrong macro definition.
 - Fixed MISRA C-2012 rule issues in the FGPIO_CheckAttributeBytes() function.
 - Defined the new macro to separate the scene when the width of registers is different.
 - Removed some redundant macros.
- New Features
 - Added some APIs to get/clear the interrupt status flag when the port doesn't control pins' interrupt.

[2.4.1]

- Improvements
 - Improved GPIO_CheckAttributeBytes() function to support 8 bits width GACR register.

[2.4.0]

- Improvements
 - API interface added:
 - * New APIs were added to configure the GPIO interrupt clear settings.

[2.3.2]

- Bug Fixes
 - Fixed the issue for MISRA-2012 check.
 - * Fixed rule 3.1, 10.1, 8.6, 10.6, and 10.3.

[2.3.1]

- Improvements
 - Removed deprecated APIs.

[2.3.0]

- New Features
 - Updated the driver code to adapt the case of interrupt configurations in GPIO module. New APIs were added to configure the GPIO interrupt settings if the module has this feature on it.

[2.2.1]

- Improvements
 - API interface changes:
 - * Refined naming of APIs while keeping all original APIs by marking them as deprecated. The original APIs will be removed in next release. The main change is updating APIs with prefix of `_PinXXX()` and `_PortXXX`.

[2.1.1]

- Improvements
 - API interface changes:
 - * Added an API for the check attribute bytes.

[2.1.0]

- Improvements
 - API interface changes:
 - * Added “pins” or “pin” to some APIs’ names.
 - * Renamed “`_PinConfigure`” to “`GPIO_PinInit`”.
-

I3C

[2.14.2]

- Improvements
 - Added timeout for ENTDAAs process API.
 - Added build system macro to control the timeout setting.

[2.14.1]

- Improvements
 - Split the function `I3C_MasterTransferBlocking` to meet the HIS-CCM requirement.

[2.14.0]

- Improvements
 - Added the choice to set fast start header with push-pull speed when all targets addresses have MSB 0 instead of forcing to set it.
 - Deleted duplicated busy check in `I3C_MasterStart` function.

[2.13.1]

- Bug Fixes
 - Disabled Rx auto-termination in repeated start interrupt event while transfer API doesn't enable it.
 - Waited the completion event after loading all Tx data in Tx FIFO.
- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.13.0]

- New features
 - Added the hot-join support for I3C bus initialization API.
- Bug Fixes
 - Set read termination with START at the same time in case unknown issue.
 - Set `MCTRL[TYPE]` as 0 for DDR force exit.
- Improvements
 - Added the API to reset device count assigned by ENTDAAs.
 - Provided the method to set global macro `I3C_MAX_DEVCNT` to determine how many device addresses ENTDAAs can allocate at one time.
 - Initialized target management static array based on instance number for the case that multiple instances are used at the same time.

[2.12.0]

- Improvements
 - Added the slow clock parameter for Controller initialization function to calculate accurate timeout.
- Bug Fixes
 - Fixed the issue that BAMATCH field can't be 0. BAMATCH should be 1 for 1MHz slow clock.

[2.11.1]

- Bug Fixes
 - Fixed the issue that interrupt API transmits extra byte when subaddress and data size are null.
 - Fixed the slow clock calculation issue.

[2.11.0]

- New features
 - Added the START/ReSTART SCL delay setting for the Soc which supports this feature.
- Bug Fixes
 - Fixed the issue that ENTDA process waits Rx pending flag which causes problem when Rx watermark isn't 0. Just check the Rx FIFO count.

[2.10.8]

- Improvements
 - Support more instances.

[2.10.7]

- Improvements
 - Fixed the potential compile warning.

[2.10.6]

- New features
 - Added the I3C private read/write with 0x7E address as start.

[2.10.5]

- New features
 - Added I3C HDR-DDR transfer support.

[2.10.4]

- Improvements
 - Added one more option for master to not set RDTERM when doing I3C Common Command Code transfer.

[2.10.3]

- Improvements
 - Masked the slave IBI/MR/HJ request functions with feature macro.

[2.10.2]

- Bug Fixes
 - Added workaround for errata ERR051617: I3C working with I2C mode creates the unintended Repeated START before actual STOP on some platforms.

[2.10.1]

- Bug Fixes
 - Fixed the issue that DAA function doesn't wait until all Rx data is read out from FIFO after master control done flag is set.
 - Fixed the issue that DAA function could return directly although the disabled interrupts are not enabled back.

[2.10.0]

- New features
 - Added I3C extended IBI data support.

[2.9.0]

- Improvements
 - Added adaptive termination for master blocking transfer. Set termination with start signal when receiving bytes less than 256.

[2.8.2]

- Improvements
 - Fixed the build warning due to armgcc strict check.

[2.8.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 17.7.

[2.8.0]

- Improvements
 - Added API I3C_MasterProcessDAASpecifiedBaudrate for temporary baud rate adjustment when I3C master assigns dynamic address.

[2.7.1]

- Bug Fixes
 - Fixed the issue that I3C slave handle STOP event before finishing data transmission.

[2.7.0]

- Fixed the CCM problem in file fsl_i3c.c.
- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in I3C_GetDefaultConfig and I3C_Init.

[2.6.0]

- Fixed the FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND usage issue in fsl_i3c.h.
- Changed some static functions in fsl_i3c.c as non-static and define the functions in fsl_i3c.h to make I3C DMA driver reuse:
 - I3C_GetIBIType
 - I3C_GetIBIAddress
 - I3C_SlaveCheckAndClearError
- Changed the handle pointer parameter in IRQ related functions to void * type to make it reuse in I3C DMA driver.
- Added new API I3C_SlaveRequestIBIWithSingleData for slave to request single data byte, this API could be used regardless slave is working in non-blocking interrupt or non-blocking dma.
- Added new API I3C_MasterGetDeviceListAfterDAA for master application to get the device information list built up in DAA process.

[2.5.4]

- Improved I3C driver to avoid setting state twice in the SendCommandState of I3C_RunTransferStateMachine.
- Fixed MISRA violation of rule 20.9.
- Fixed the issue that I3C_MasterEmitRequest did not use Type I3C SDR.

[2.5.3]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH and FSL_FEATURE_I3C_HAS_NO_SCONFIG_IDRAND.

[2.5.2]

- Updated driver for new feature FSL_FEATURE_I3C_HAS_NO_MERRWARN_TERM.
- Fixed the issue that call to I3C_MasterTransferBlocking API did not generate STOP signal when NAK status was returned.

[2.5.1]

- Improved the receive terminate size setting for interrupt transfer read, now it's set at beginning of transfer if the receive size is less than 256 bytes.

[2.5.0]

- Added new API `I3C_MasterRepeatedStartWithRxSize` to send repeated start signal with receive terminate size specified.
- Fixed the status used in `I3C_RunTransferStateMachine`, changed to use pending interrupts as status to be handled in the state machine.
- Fixed MISRA 2012 violation of rule 10.3, 10.7.

[2.4.0]

- Bug Fixes
 - Fixed `kI3C_SlaveMatchedFlag` interrupt is not properly handled in `I3C_SlaveTransferHandleIRQ` when it comes together with interrupt `kI3C_SlaveBusStartFlag`.
 - Fixed the inaccurate I2C baudrate calculation in `I3C_MasterSetBaudRate`.
 - Added new API `I3C_MasterGetIBIRules` to get registered IBI rules.
 - Added new variable `isReadTerm` in struct `_i3c_master_handle` for transfer state routine to check if `MCTRL.RDTERM` is configured for read transfer.
 - Changed to emit Auto IBI in transfer state routine for slave start flag assertion.
 - Fixed the slave `maxWriteLength` and `maxReadLength` does not be configured into `SMAXLIMITS` register issue.
 - Fixed incorrect state for IBI in I3C master interrupt transfer IRQ handle routine.
 - Added `isHotJoin` in `i3c_slave_config_t` to request hot-join event during slave init.

[2.3.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 8.4, 17.7.
 - Fixed incorrect HotJoin event index in `I3C_GetIBIType`.

[2.3.1]

- Bug Fixes
 - Fixed the issue that call of `I3C_MasterTransferBlocking/I3C_MasterTransferNonBlocking` fails for the case which receive length 1 byte of data.
 - Fixed the issue that STOP signal is not sent when NAK status is detected during execution of `I3C_MasterTransferBlocking` function.

[2.3.0]

- Improvements
 - Added I3C common driver APIs to initialize I3C with both master and slave configuration.
 - Updated I3C master transfer callback to function set structure to include callback invoke for IBI event and slave2master event.
 - Updated I3C master non-blocking transfer model and always enable the interrupts to be able to re-act to the slave start event and handle slave IBI.

[2.2.0]

- Bug Fixes
 - Fixed the issue that I3C transfer size limit to 255 bytes.

[2.1.2]

- Bug Fixes
 - Reset default hkeep value to kI3C_MasterHighKeeperNone in I3C_MasterGetDefaultConfig

[2.1.1]

- Bug Fixes
 - Fixed incorrect FIFO reset operation in I3C Master Transfer APIs.
 - Fixed i3c slave IRQ handler issue, slave transmit could be underrun because tx FIFO is not filled in time right after start flag detected.

[2.1.0]

- Added definitions and APIs for I3C slave functionality, updated previous I3C APIs to support I3C functionality.

[2.0.0]

- Initial version.
-

I3C_EDMA**[2.2.10]**

- Bug Fixes
 - Fixed the issue that slave start event is cleared when it has not been handled.
- Added
 - Supported I3C HDR-DDR transfer with EDMA.
- Changed
 - Used linked EDMA to transfer all I3C subaddress and data without handling of intermediate states, simplifying code logic.
 - Prepare DMA before I3C START to ensure there's no time delay between START and transmitting data.
 - Added the MCTRLDONE flag check after START and STOP request to ensure all states are handled properly.

[2.2.9]

- Bug Fixes
 - Fixed MISRA issue rule 11.3.
 - Added the master control done flag waiting code after STOP in case the bus is not idle when transfer function finishes.

[2.2.8]

- Improvements
 - Removed I3C IRQ handler calling in the EDMA callback. Previously driver doesn't use the END byte which can trigger the STOP interrupt for controller sending and receiving, now let I3C event handler deal with all I3C events.
- Bug Fixes
 - Fixed the bug that the END type Tx register is not used when command length or data length is one byte.

[2.2.7]

- Bug Fixes
 - Fixed MISRA issue rule 11.6.

[2.2.6]

- New features
 - Added the I3C private read/write with 0x7E address as start.

[2.2.5]

- Improvements
 - Added the workaround for RT1180 I3C EDMA issue ERR052086.

[2.2.4]

- Bug Fixes
 - Fixed the issue that I3C master sends the last byte data without using the END type register.

[2.2.3]

- Bug Fixes
 - Fixed issue that slave pollutes the last byte when Tx FIFO may be full.

[2.2.2]

- Bug Fixes
 - Fixed I3C MISRA issue rule 10.4, 11.3.

[2.2.1]

- Bug Fixes
 - Fixed the issue that I3C slave send the last byte data without using the END type register.
- Improvements
 - There's no need to reserve two bytes FIFO for DMA transfer which is for IP issue workaround.

[2.2.0]

- Improvements
 - Deleted legacy IBI data request code.

[2.1.0]

- Bug Fixes
 - Fixed MISRA issue rule 8.4, 8.6, 11.8.

[2.0.1]

- Bug Fixes
 - Fixed MISRA issue rule 9.1.

[2.0.0]

- Initial version.
-

INPUTMUX**[2.0.9]**

- Improvements
 - Use INPUTMUX_CLOCKS to initialize the inputmux module clock to adapt to multiple inputmux instances.
 - Modify the API base type from INPUTMUX_Type to void.

[2.0.8]

- Improvements
 - Updated a feature macro usage for function INPUTMUX_EnableSignal.

[2.0.7]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.0.6]

- Bug Fixes
 - Fixed the documentation wrong in API INPUTMUX_AttachSignal.

[2.0.5]

- Bug Fixes
 - Fixed build error because some devices has no sct.

[2.0.4]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rule 10.4, 12.2 in INPUTMUX_EnableSignal() function.

[2.0.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 10.7, 12.2.

[2.0.2]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 10.4, 12.2.

[2.0.1]

- Support channel mux setting in INPUTMUX_EnableSignal().

[2.0.0]

- Initial version.
-

LPADC

[2.9.3]

- Improvements
 - Add timeout for while loop code.

[2.9.2]

- Improvements
 - Fixed CERT-C issues.

[2.9.1]

- Bug Fixes
 - Fixed incorrect channel B FIFO selection logic.

[2.9.0]

- Bug Fixes
 - Add code to handle the case where GCC[GAIN_CAL] is a signed number.
 - Split LPADC_FinishAutoCalibration function into two functions.
 - Improved LPADC driver.

[2.8.4]

- Bug Fixes
 - Remove function 'LPADC_SetOffsetValue' assert statement, this statement may cause runtime errors in existing code.

[2.8.3]

- Bug Fixes
 - Fixed SDK lpadc driver examples compile issue, move condition 'commandId < ADC_CV_COUNT' to a more appropriate location.

[2.8.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 18.1, 10.3, 10.1 and 10.4.

[2.8.1]

- Bug Fixes
 - Fixed LPADC sample mode enum name mistake.

[2.8.0]

- Improvements
 - Release peripheral from reset if necessary in init function.
- Bug Fixes
 - Fixed function LPADC_GetConvResult() issue.
 - Fixed function LPADC_SetConvCommandConfig() bugs.

[2.7.2]

- Improvements
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.1]

- Improvements
 - Corrected descriptions of several functions.
 - Improved function LPADC_GetOffsetValue and LPADC_SetOffsetValue.
 - Revert changes of feature macros for lpadc.
 - Use feature macros instead of header file macros.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rule 10.8.
 - Fixed the violations of MISRA C-2012 rule 10.1, 10.3, 10.4 and 14.3.

[2.7.0]

- Improvements
 - Added supports of CFG2 register.
 - Removed some useless macros.

[2.6.2]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules.
 - Fixed LPADC driver code compile error issue.

[2.6.1]

- Improvements
 - Updated the use of macros in the driver code.

[2.6.0]

- Improvements
 - Added the API LPADC_SetOffset12BitValue() to configure 12bit ADC conversion offset trim value manually.
 - Added the API LPADC_SetOffset16BitValue() to configure 16bit ADC conversion offset trim value manually.
 - Added API to set offset calibration mode.
 - Added configuration of alternate channel.
 - Updated auto calibration API and added calibration value conversion API.
- New feature
 - Added API LPADC_EnableHardwareTriggerCommandSelection() to enable trigger commands controlled by ADC_ETC.
 - Updated LPADC_DoAutoCalibration() to allow doing something else before the ADC initialization to be totally complete. Enhance initialization duration time of the ADC.
 - Added two new APIs to get/set calibration value.

[2.5.2]

- Improvements
 - Added while loop, LPADC_GetConvResult() will return only when the FIFO will not be empty.

[2.5.1]

- Bug Fixes
 - Fixed some typos in Lpadc driver comments.

[2.5.0]

- Improvements
 - Added missing items to enable trigger interrupts.

[2.4.0]

- New features
 - Added APIs to get/clear trigger status flags.

[2.3.0]

- Improvements
 - Removed LPADC_MeasureTemperature() function for the LPADC supports different temperature sensor calculation equations.

[2.2.1]

- Improvements
 - Optimized LPADC_MeasureTemperature() function to support the specific series with flash solidified calibration value.
 - Clean doxygen warnings.
- Bug Fixes
 - Fixed violations of MISRA C-2012 rule 10.3, rule 10.8 and rule 17.7.

[2.2.0]

- New Feature
 - Added API LPADC_MeasureTemperature() to get correct temperature from the internal sensor.
- Improvements
 - Separated lpadc_conversion_resolution_mode_t with related feature macro.
- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules:
 - * Rule 10.3, 10.4, 10.6, 10.7 and 17.7.

[2.1.1]

- Improvements
 - Updated the gain calibration formula.
 - Used feature to segregate the new item kLPADC_TriggerPriorityPreemptSubsequently.

[2.1.0]

- New Features
 - Added the API LPADC_SetOffsetValue() to support configure offset trim value manually.
 - Added the API LPADC_DoOffsetCalibration() to do offset calibration independently.
- Improvements
 - Improved the usage of macros and removed invalid macros.

[2.0.2]

- Improvements
 - Added support for platforms with 2 FIFOs and different calibration measures.

[2.0.1]

- Bug Fixes
 - Ensured the API LPADC_SetConvCommandConfig configure related registers correctly.

[2.0.0]

- Initial version.
-

LPCMP

[2.3.2]

- Improvements
 - Fixed LPCMP CERT-C issues.

[2.3.1]

- Improvements
 - Update LPCMP driver to be compatible with platforms that do not support LPCMP nano power mode selection.

[2.3.0]

- New Feature
 - Added some new features for platforms which support
 - * Plus input source selection.
 - * Minus input source selection.
 - * CMP to DAC link.
- Improvements
 - Removed some new features for platforms which doesn't support
 - * Functional clock source selection.
 - * DAC high power mode selection.

- * Round Robin clock source selection.
- * Round Robin trigger source selection.
- * Round Robin channel sample numbers setting.
- * Round Robin channel sample time threshold setting.
- * Round Robin internal trigger configuration.

[2.2.0]

- Improvements
 - Change `FSL_FEATURE_LPCMP_HAS_NO_CCRO_CMP_STOP_EN` to `FSL_FEATURE_LPCMP_HAS_CCRO_CMP_STOP_EN`.

[2.1.3]

- New Feature
 - Added new macro to handle the case where some instances do not have the CCRO `CMP_STOP_EN` bit field.

[2.1.2]

- New Feature
 - Add macros to be compatible with some platforms that do not have the CCRO `CMP_STOP_EN` bitfield.

[2.1.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.0]

- New Features:
 - Supported round robin mode and window mode feature.

[2.0.3]

- Bug Fixes:
 - Fixed the violation of MISRA-2012 rule 17.7.

[2.0.2]

- Bug Fixes:
 - The current API `LPCMP_ClearStatusFlags` has to check `w1c` bits.

[2.0.1]

- Added control macro to enable/disable the `CLOCK` code in current driver.

[2.0.0]

- Initial version.
-

LPI2C

[2.6.2]

- Improvements
 - Added timeout for while loop in LPI2C_TransferStateMachineSendCommand().

[2.6.1]

- Bug Fixes
 - Fixed coverity issues.

[2.6.0]

- New Feature
 - Added common IRQ handler entry LPI2C_DriverIRQHandler.

[2.5.7]

- Improvements
 - Added support for separated IRQ handlers.

[2.5.6]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.5.5]

- Bug Fixes
 - Fixed LPI2C_SlaveInit() - allow to disable SDA/SCL glitch filter.

[2.5.4]

- Bug Fixes
 - Fixed LPI2C_MasterTransferBlocking() - the return value was sometime affected by call of LPI2C_MasterStop().

[2.5.3]

- Improvements
 - Added handler for LPI2C7 and LPI2C8.

[2.5.2]

- Bug Fixes
 - Fixed ERR051119 to ignore the nak flag when IGNACK=1 in LPI2C_MasterCheckAndClearError.

[2.5.1]

- Bug Fixes
 - Added bus stop incase of bus stall in LPI2C_MasterTransferBlocking.
- Improvements
 - Release peripheral from reset if necessary in init function.

[2.5.0]

- New Features
 - Added new function LPI2C_SlaveEnableAckStall to enable or disable ACKSTALL.

[2.4.1]

- Improvements
 - Before master transfer with transactional APIs, enable master function while disable slave function and vice versa for slave transfer to avoid the one affecting the other.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpi2c.c.
- Bug Fixes
 - Fixed bug in LPI2C_MasterInit that the MCFGR2's value set in LPI2C_MasterSetBaudRate may be overwritten by mistake.

[2.3.2]

- Improvements
 - Initialized the EDMA configuration structure in the LPI2C EDMA driver.

[2.3.1]

- Improvements
 - Updated LPI2C_GetCyclesForWidth to add the parameter of minimum cycle, because for master SDA/SCL filter, master bus idle/pin low timeout and slave SDA/SCL filter configuration, 0 means disabling the feature and cannot be used.
- Bug Fixes
 - Fixed bug in LPI2C_SlaveTransferHandleIRQ that when restart detect event happens the transfer structure should not be cleared.
 - Fixed bug in LPI2C_RunTransferStateMachine, that when only slave address is transferred or there is still data remaining in tx FIFO the last byte's nack cannot be ignored.

- Fixed bug in slave filter doze enable, that when FILTDZ is set it means disable rather than enable.
- Fixed bug in the usage of LPI2C_GetCyclesForWidth. First its return value cannot be used directly to configure the slave FILTSDA, FILTSCL, DATAVD or CLKHOLD, because the real cycle width for them should be FILTSDA+3, FILTSCL+3, FILTSCL+DATAVD+3 and CLKHOLD+3. Second when cycle period is not affected by the prescaler value, prescaler value should be passed as 0 rather than 1.
- Fixed wrong default setting for LPI2C slave. If enabling the slave tx SCL stall, then the default clock hold time should be set to 250ns according to I2C spec for 100kHz standard mode baudrate.
- Fixed bug that before pushing command to the tx FIFO the FIFO occupation should be checked first in case FIFO overflow.

[2.3.0]

- New Features

- Supported reading more than 256 bytes of data in one transfer as master.
- Added API LPI2C_GetInstance.

- Bug Fixes

- Fixed bug in LPI2C_MasterTransferAbortEDMA, LPI2C_MasterTransferAbort and LPI2C_MasterTransferHandleIRQ that before sending stop signal whether master is active and whether stop signal has been sent should be checked, to make sure no FIFO error or bus error will be caused.
- Fixed bug in LPI2C master EDMA transactional layer that the bus error cannot be caught and returned by user callback, by monitoring bus error events in interrupt handler.
- Fixed bug in LPI2C_GetCyclesForWidth that the parameter used to calculate clock cycle should be $2^{\text{prescaler}}$ rather than prescaler.
- Fixed bug in LPI2C_MasterInit that timeout value should be configured after baudrate, since the timeout calculation needs prescaler as parameter which is changed during baudrate configuration.
- Fixed bug in LPI2C_MasterTransferHandleIRQ and LPI2C_RunTransferStateMachine that when master writes with no stop signal, need to first make sure no data remains in the tx FIFO before finishes the transfer.

[2.2.0]

- Bug Fixes

- Fixed issue that the SCL high time, start hold time and stop setup time do not meet I2C specification, by changing the configuration of data valid delay, setup hold delay, clock high and low parameters.
- MISRA C-2012 issue fixed.
 - * Fixed rule 8.4, 13.5, 17.7, 20.8.

[2.1.12]

- Bug Fixes

- Fixed MISRA advisory 15.5 issues.

[2.1.11]

- Bug Fixes
 - Fixed the bug that, during master non-blocking transfer, after the last byte is sent/received, the `kLPI2C_MasterNackDetectFlag` is expected, so master should not check and clear `kLPI2C_MasterNackDetectFlag` when `remainingBytes` is zero, in case FIFO is emptied when stop command has not been sent yet.
 - Fixed the bug that, during non-blocking transfer slave may nack master while master is busy filling tx FIFO, and NDF may not be handled properly.

[2.1.10]

- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fixed rule 10.3, 14.4, 15.5.
 - Fixed unaligned access issue in `LPI2C_RunTransferStateMachine`.
 - Fixed uninitialized variable issue in `LPI2C_MasterTransferHandleIRQ`.
 - Used linked TCD to disable tx and enable rx in read operation to fix the issue that for platform sharing the same DMA request with tx and rx, during LPI2C read operation if interrupt with higher priority happened exactly after command was sent and before tx disabled, potentially both tx and rx could trigger dma and cause trouble.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 11.6, 11.9, 14.4, 17.7.
 - Fixed the `waitTimes` variable not re-assignment issue for each byte read.
- New Features
 - Added the `IRQHandler` for LPI2C5 and LPI2C6 instances.
- Improvements
 - Updated the `LPI2C_WAIT_TIMEOUT` macro to unified name `I2C_RETRY_TIMES`.

[2.1.9]

- Bug Fixes
 - Fixed Coverity issue of unchecked return value in `I2C_RTOS_Transfer`.
 - Fixed Coverity issue of operands did not affect the result in `LPI2C_SlaveReceive` and `LPI2C_SlaveSend`.
 - Removed STOP signal wait when NAK detected.
 - Cleared slave repeat start flag before transmission started in `LPI2C_SlaveSend/LPI2C_SlaveReceive`. The issue was that `LPI2C_SlaveSend/LPI2C_SlaveReceive` did not handle with the reserved repeat start flag. This caused the next slave to send a break, and the master was always in the receive data status, but could not receive data.

[2.1.8]

- Bug Fixes
 - Fixed the transfer issue with `LPI2C_MasterTransferNonBlocking`, `kLPI2C_TransferNoStopFlag`, with the wait transfer done through callback in a way of not doing a blocking transfer.

- Fixed the issue that STOP signal did not appear in the bus when NAK event occurred.

[2.1.7]

- Bug Fixes
 - Cleared the stopflag before transmission started in LPI2C_SlaveSend/LPI2C_SlaveReceive. The issue was that LPI2C_SlaveSend/LPI2C_SlaveReceive did not handle with the reserved stop flag and caused the next slave to send a break, and the master always stayed in the receive data status but could not receive data.

[2.1.6]

- Bug Fixes
 - Fixed driver MISRA build error and C++ build error in LPI2C_MasterSend and LPI2C_SlaveSend.
 - Reset FIFO in LPI2C Master Transfer functions to avoid any byte still remaining in FIFO during last transfer.
 - Fixed the issue that LPI2C_MasterStop did not return the correct NAK status in the bus for second transfer to the non-existing slave address.

[2.1.5]

- Bug Fixes
 - Extended the Driver IRQ handler to support LPI2C4.
 - Changed to use ARRAY_SIZE(kLpi2cBases) instead of FEATURE COUNT to decide the array size for handle pointer array.

[2.1.4]

- Bug Fixes
 - Fixed the LPI2C_MasterTransferEDMA receive issue when LPI2C shared same request source with TX/RX DMA request. Previously, the API used scatter-gather method, which handled the command transfer first, then the linked TCD which was pre-set with the receive data transfer. The issue was that the TX DMA request and the RX DMA request were both enabled, so when the DMA finished the first command TCD transfer and handled the receive data TCD, the TX DMA request still happened due to empty TX FIFO. The result was that the RX DMA transfer would start without waiting on the expected RX DMA request.
 - Fixed the issue by enabling IntMajor interrupt for the command TCD and checking if there was a linked TCD to disable the TX DMA request in LPI2C_MasterEDMACallback API.

[2.1.3]

- Improvements
 - Added LPI2C_WATI_TIMEOUT macro to allow the user to specify the timeout times for waiting flags in functional API and blocking transfer API.
 - Added LPI2C_MasterTransferBlocking API.

[2.1.2]

- Bug Fixes
 - In LPI2C_SlaveTransferHandleIRQ, reset the slave status to idle when stop flag was detected.

[2.1.1]

- Bug Fixes
 - Disabled the auto-stop feature in eDMA driver. Previously, the auto-stop feature was enabled at transfer when transferring with stop flag. Since transfer was without stop flag and the auto-stop feature was enabled, when starting a new transfer with stop flag, the stop flag would be sent before the new transfer started, causing unsuccessful sending of the start flag, so the transfer could not start.
 - Changed default slave configuration with address stall false.

[2.1.0]

- Improvements
 - API name changed:
 - * LPI2C_MasterTransferCreateHandle -> LPI2C_MasterCreateHandle.
 - * LPI2C_MasterTransferGetCount -> LPI2C_MasterGetTransferCount.
 - * LPI2C_MasterTransferAbort -> LPI2C_MasterAbortTransfer.
 - * LPI2C_MasterTransferHandleIRQ -> LPI2C_MasterHandleInterrupt.
 - * LPI2C_SlaveTransferCreateHandle -> LPI2C_SlaveCreateHandle.
 - * LPI2C_SlaveTransferGetCount -> LPI2C_SlaveGetTransferCount.
 - * LPI2C_SlaveTransferAbort -> LPI2C_SlaveAbortTransfer.
 - * LPI2C_SlaveTransferHandleIRQ -> LPI2C_SlaveHandleInterrupt.

[2.0.0]

- Initial version.
-

LPI2C_EDMA**[2.4.4]**

- Improvements
 - Added support for 2KB data transfer

[2.4.3]

- Improvements
 - Added support for separated IRQ handlers.

[2.4.2]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.1]

- Refer LPI2C driver change log 2.0.0 to 2.4.1
-

LPSPi

[2.7.3]

- Improvements
 - Added timeout for while loop in LPSPi_MasterTransferWriteAllTxData().
 - Make SPI_RETRY_TIMES configurable by CONFIG_SPI_RETRY_TIMES.

[2.7.2]

- Bug Fixes
 - Fixed coverity issues.

[2.7.1]

- Bug Fixes
 - Workaround for errata ERR050607
 - Workaround for errata ERR010655

[2.7.0]

- New Feature
 - Added common IRQ handler entry LPSPi_DriverIRQHandler.

[2.6.10]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.6.9]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.6.8]

- Bug Fixes
 - Fixed build error when SPI_RETRY_TIMES is defined to non-zero value.

[2.6.7]

- Bug Fixes
 - Fixed the txData from void * to const void * in transmit API _lpspi_master_handle and _lpspi_slave_handle.

[2.6.6]

- Bug Fixes
 - Added LPSPI register init in LPSPI_MasterInit incase of LPSPI register exist.

[2.6.5]

- Improvements
 - Introduced FSL_FEATURE_LPSPi_HAS_NO_PCSCFG and FSL_FEATURE_LPSPi_HAS_NO_MULTI_WIDTH for conditional compile.
 - Release peripheral from reset if necessary in init function.

[2.6.4]

- Bug Fixes
 - Added LPSPI6_DriverIRQHandler for LPSPI6 instance.

[2.6.3]

- Hot Fixes
 - Added macro switch in function LPSPI_Enable about ERRATA051472.

[2.6.2]

- Bug Fixes
 - Disabled lpspi before LPSPI_MasterSetBaudRate incase of LPSPI opened.

[2.6.1]

- Bug Fixes
 - Fixed return value while calling LPSPI_WaitTxFifoEmpty in function LPSPI_MasterTransferNonBlocking.

[2.6.0]

- Feature
 - Added the new feature of multi-IO SPI .

[2.5.3]

- Bug Fixes
 - Fixed 3-wire txmask of handle vaule reentrant issue.

[2.5.2]

- Bug Fixes
 - Workaround for errata ERR051588 by clearing FIFO after transmit underrun occurs.

[2.5.1]

- Bug Fixes
 - Workaround for errata ERR050456 by resetting the entire module using LPSPIn_CR[RST] bit.

[2.5.0]

- Bug Fixes
 - Workaround for errata ERR011097 to wait the TX FIFO to go empty when writing TCR register and TCR[TXMSK] value is 1.
 - Added API LPSPI_WaitTxFifoEmpty for wait the txfifo to go empty.

[2.4.7]

- Bug Fixes
 - Fixed bug that the SR[REF] would assert if software disabled or enabled the LPSPI module in LPSPI_Enable.

[2.4.6]

- Improvements
 - Moved the configuration of registers for the 3-wire lpspi mode to the LPSPI_MasterInit and LPSPI_SlaveInit function.

[2.4.5]

- Improvements
 - Improved LPSPI_MasterTransferBlocking send performance when frame size is 1-byte.

[2.4.4]

- Bug Fixes
 - Fixed LPSPI_MasterGetDefaultConfig incorrect default inter-transfer delay calculation.

[2.4.3]

- Bug Fixes
 - Fixed bug that the ISR response speed is too slow on some platforms, resulting in the first transmission of overflow, Set proper RX watermarks to reduce the ISR response times.

[2.4.2]

- Bug Fixes
 - Fixed bug that LPSPI_MasterTransferBlocking will modify the parameter txbuff and rxbuff pointer.

[2.4.1]

- Bug Fixes
 - Fixed bug that LPSPI_SlaveTransferNonBlocking can't detect RX error.

[2.4.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpspi.c.

[2.3.1]

- Improvements
 - Initialized the EDMA configuration structure in the LPSPI EDMA driver.
- Bug Fixes
 - Fixed bug that function LPSPI_MasterTransferBlocking should return after the transfer complete flag is set to make sure the PCS is re-asserted.

[2.3.0]

- New Features
 - Supported the master configuration of sampling the input data using a delayed clock to improve slave setup time.

[2.2.1]

- Bug Fixes
 - Fixed bug in LPSPI_SetPCSContinuous when disabling PCS continuous mode.

[2.2.0]

- Bug Fixes
 - Fixed bug in 3-wire polling and interrupt transfer that the received data is not correct and the PCS continuous mode is not working.

[2.1.0]

- Improvements
 - Improved LPSPI_SlaveTransferHandleIRQ to fill up TX FIFO instead of write one data to TX register which improves the slave transmit performance.
 - Added new functional APIs LPSPI_SelectTransferPCS and LPSPI_SetPCSContinuous to support changing PCS selection and PCS continuous mode.
- Bug Fixes

- Fixed bug in non-blocking and EDMA transfer APIs that `kStatus_InvalidArgument` is returned if user configures 3-wire mode and full-duplex transfer at the same time, but transfer state is already set to `kLPSPI_Busy` by mistake causing following transfer can not start.
- Fixed bug when LPSPI slave using EDMA way to transfer, tx should be masked when tx data is null, otherwise in 3-wire mode which tx/rx use the same pin, the received data will be interfered.

[2.0.5]

- Improvements
 - Added timeout mechanism when waiting certain states in transfer driver.
- Bug Fixes
 - Fixed the bug that LPSPI can not transfer large data using EDMA.
 - Fixed MISRA 17.7 issues.
 - Fixed variable overflow issue introduced by MISRA fix.
 - Fixed issue that `rxFifoMaxBytes` should be calculated according to transfer width rather than FIFO width.
 - Fixed issue that completion flag was not cleared after transfer completed.

[2.0.4]

- Bug Fixes
 - Fixed in `LPSPI_MasterTransferBlocking` that master rxfifo may overflow in stall condition.
 - Eliminated IAR Pa082 warnings.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.6, 11.9, 14.2, 14.4, 15.7, 17.7.

[2.0.3]

- Bug Fixes
 - Removed `LPSPI_Reset` from `LPSPI_MasterInit` and `LPSPI_SlaveInit`, because this API may glitch the slave select line. If needed, call this function manually.

[2.0.2]

- New Features
 - Added dummy data set up API to allow users to configure the dummy data to be transferred.
 - Enabled the 3-wire mode, SIN and SOUT pins can be configured as input/output pin.

[2.0.1]

- Bug Fixes
 - Fixed the bug that the clock source should be divided by the `PRESCALE` setting in `LPSPI_MasterSetDelayTimes` function.

- Fixed the bug that LPSPI_MasterTransferBlocking function would hang in some corner cases.
- Optimization
 - Added `#ifndef/#endif` to allow user to change the default TX value at compile time.

[2.0.0]

- Initial version.
-

LPSPI_EDMA

[2.4.9]

- Improvements
 - Removed unused code from `LPSPI_SeparateEdmaReadData()`.

[2.4.8]

- Improvements
 - Added timeout for while loop in `EDMA_LpspiMasterCallback()` and `EDMA_LpspiSlaveCallback()`.

[2.4.7]

- Bug Fixes
 - Add macro `LPSPI_ALIGN_TCD_SIZE_MASK` to align an address to `edma_tcd_t` size.

[2.4.6]

- Improvements
 - Increased transmit FIFO watermark to ensure whole transmit FIFO will be used during data transfer.

[2.4.5]

- Bug Fixes
 - Fixed reading of TCR register
 - Workaround for errata ERR050606

[2.4.4]

- Improvements
 - Add EDMA ext API to accommodate more types of EDMA.

[2.4.3]

- Improvements
 - Supported 32K bytes transmit in DMA, improve the max datasize in `LPSPI_MasterTransferEDMALite`.

[2.4.2]

- Improvements
 - Added callback status in `EDMA_LpspiMasterCallback` and `EDMA_LpspiSlaveCallback` to check `transferDone`.

[2.4.1]

- Improvements
 - Add the `TXMSK` wait after `TCR` setting.

[2.4.0]

- Improvements
 - Separated `LPSPI_MasterTransferEDMA` functions to `LP-SPI_MasterTransferPrepareEDMA` and `LPSPI_MasterTransferEDMALite` to optimize the process of transfer.
-

LPTMR

[2.2.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.2.0]

- Improvements
 - Updated `lptmr_prescaler_clock_select_t`, only define the valid options.

[2.1.1]

- Improvements
 - Updated the characters from “PTMR” to “LPTMR” in “`FSL_FEATURE_PTMR_HAS_NO_PRESCALER_CLOCK_SOURCE_1_SUPPORT`” feature definition.

[2.1.0]

- Improvements
 - Implement for some special devices’ not supporting for all clock sources.
- Bug Fixes
 - Fixed issue when accessing `CMR` register.

[2.0.2]

- Bug Fixes
 - Fixed MISRA-2012 issues.
 - * Rule 10.1.

[2.0.1]

- Improvements
 - Updated the LPTMR driver to support 32-bit CNR and CMR registers in some devices.

[2.0.0]

- Initial version.
-

LPUART

[2.10.0]

- New Feature
 - Added support to configure RTS watermark.

[2.9.4]

- Improvements
 - Merged duplicate code.

[2.9.3]

- Improvements
 - Added timeout for while loops in LPUART_Deinit().

[2.9.2]

- Bug Fixes
 - Fixed coverity issues.

[2.9.1]

- Bug Fixes
 - Fixed coverity issues.

[2.9.0]

- New Feature
 - Added support for swap TXD and RXD pins.
 - Added common IRQ handler entry LPUART_DriverIRQHandler.

[2.8.3]

- Improvements
 - Conditionally compile interrupt handling code to solve the problem of using this driver on CPU cores that do not support interrupts.

[2.8.2]

- Bug Fix
 - Fixed the bug that LPUART_TransferEnable16Bit controlled by wrong feature macro.

[2.8.1]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-5.3, rule-5.8, rule-10.4, rule-11.3, rule-11.8.

[2.8.0]

- Improvements
 - Added support of DATA register for 9bit or 10bit data transmit in write and read API. Such as: LPUART_WriteBlocking16bit, LPUART_ReadBlocking16bit, LPUART_TransferEnable16Bit, LPUART_WriteNonBlocking16bit, LPUART_ReadNonBlocking16bit.

[2.7.7]

- Bug Fixes
 - Fixed the bug that baud rate calculation overflow when srcClock_Hz is 528MHz.

[2.7.6]

- Bug Fixes
 - Fixed LPUART_EnableInterrupts and LPUART_DisableInterrupts bug that blocks if the LPUART address doesn't support exclusive access.

[2.7.5]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.7.4]

- Improvements
 - Added support for atomic register accessing in LPUART_EnableInterrupts and LPUART_DisableInterrupts.

[2.7.3]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules 15.7.

[2.7.2]

- Bug Fix
 - Fixed the bug that the OSR calculation error when lpuart init and lpuart set baud rate.

[2.7.1]

- Improvements
 - Added support for LPUART_BASE_PTRS_NS in security mode in file fsl_lpuart.c.

[2.7.0]

- Improvements
 - Split some functions, fixed CCM problem in file fsl_lpuart.c.

[2.6.0]

- Bug Fixes
 - Fixed bug that when there are multiple lpuart instance, unable to support different ISR.

[2.5.3]

- Bug Fixes
 - Fixed comments by replacing unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag with kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag.

[2.5.2]

- Bug Fixes
 - Fixed bug that when setting watermark for TX or RX FIFO, the value may exceed the maximum limit.
- Improvements
 - Added check in LPUART_TransferDMAHandleIRQ and LPUART_TransferEdmaHandleIRQ to ensure if user enables any interrupts other than transfer complete interrupt, the dma transfer is not terminated by mistake.

[2.5.1]

- Improvements
 - Use separate data for TX and RX in lpuart_transfer_t.
- Bug Fixes
 - Fixed bug that when ring buffer is used, if some data is received in ring buffer first before calling LPUART_TransferReceiveNonBlocking, the received data count returned by LPUART_TransferGetReceiveCount is wrong.

[2.5.0]

- Bug Fixes
 - Added missing interrupt enable masks kLPUART_Match1InterruptEnable and kLPUART_Match2InterruptEnable.
 - Fixed bug in LPUART_EnableInterrupts, LPUART_DisableInterrupts and LPUART_GetEnabledInterrupts that the BAUD[LBKDIE] bit field should be soc specific.

- Fixed bug in LPUART_TransferHandleIRQ that idle line interrupt should be disabled when rx data size is zero.
- Deleted unused status flags kLPUART_NoiseErrorInRxDataRegFlag and kLPUART_ParityErrorInRxDataRegFlag, since firstly their function are the same as kLPUART_NoiseErrorFlag and kLPUART_ParityErrorFlag, secondly to obtain them one data word must be read out thus interfering with the receiving process.
- Fixed bug in LPUART_GetStatusFlags that the STAT[LBKDIF], STAT[MA1F] and STAT[MA2F] should be soc specific.
- Fixed bug in LPUART_ClearStatusFlags that tx/rx FIFO is reset by mistake when clearing flags.
- Fixed bug in LPUART_TransferHandleIRQ that while clearing idle line flag the other bits should be masked in case other status bits be cleared by accident.
- Fixed bug of race condition during LPUART transfer using transactional APIs, by disabling and re-enabling the global interrupt before and after critical operations on interrupt enable register.
- Fixed DMA/eDMA transfer blocking issue by enabling tx idle interrupt after DMA/eDMA transmission finishes.
- New Features
 - Added APIs LPUART_GetRxFifoCount/LPUART_GetTxFifoCount to get rx/tx FIFO data count.
 - Added APIs LPUART_SetRxFifoWatermark/LPUART_SetTxFifoWatermark to set rx/tx FIFO water mark.

[2.4.1]

- Bug Fixes
 - Fixed MISRA advisory 17.7 issues.

[2.4.0]

- New Features
 - Added APIs to configure 9-bit data mode, set slave address and send address.

[2.3.1]

- Bug Fixes
 - Fixed MISRA advisory 15.5 issues.

[2.3.0]

- Improvements
 - Modified LPUART_TransferHandleIRQ so that txState will be set to idle only when all data has been sent out to bus.
 - Modified LPUART_TransferGetSendCount so that this API returns the real byte count that LPUART has sent out rather than the software buffer status.
 - Added timeout mechanism when waiting for certain states in transfer driver.

[2.2.8]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-10.3, rule-14.4, rule-15.5.
 - Eliminated Pa082 warnings by assigning volatile variables to local variables and using local variables instead.
 - Fixed MISRA issues.
 - * Fixed rules 10.1, 10.3, 10.4, 10.8, 14.4, 11.6, 17.7.
- Improvements
 - Added check for `kLPUART_TransmissionCompleteFlag` in `LPUART_WriteBlocking`, `LPUART_TransferHandleIRQ`, `LPUART_TransferSendDMACallback` and `LPUART_SendEDMACallback` to ensure all the data would be sent out to bus.
 - Rounded up the calculated `sbr` value in `LPUART_SetBaudRate` and `LPUART_Init` to achieve more accurate baudrate setting. Changed `osr` from `uint32_t` to `uint8_t` since `osr`'s biggest value is 31.
 - Modified `LPUART_ReadBlocking` so that if more than one receiver errors occur, all status flags will be cleared and the most severe error status will be returned.

[2.2.7]

- Bug Fixes
 - Fixed issue for MISRA-2012 check.
 - * Fixed rule-12.1, rule-17.7, rule-14.4, rule-13.3, rule-14.4, rule-10.4, rule-10.8, rule-10.3, rule-10.7, rule-10.1, rule-11.6, rule-13.5, rule-11.3, rule-13.2, rule-8.3.

[2.2.6]

- Bug Fixes
 - Fixed the issue of register's being in repeated reading status while dealing with the IRQ routine.

[2.2.5]

- Bug Fixes
 - Do not set or clear the TIE/RIE bits when using `LPUART_EnableTxDMA` and `LPUART_EnableRxDMA`.

[2.2.4]

- Improvements
 - Added hardware flow control function support.
 - Added idle-line-detecting feature in `LPUART_TransferNonBlocking` function. If an idle line is detected, a callback is triggered with status `kStatus_LPUART_IdleLineDetected` returned. This feature may be useful when the received Bytes is less than the expected received data size. Before triggering the callback, data in the FIFO (if has FIFO) is read out, and no interrupt will be disabled, except for that the receive data size reaches 0.

- Enabled the RX FIFO watermark function. With the idle-line-detecting feature enabled, users can set the watermark value to whatever you want (should be less than the RX FIFO size). Data is received and a callback will be triggered when data receive ends.

[2.2.3]

- Improvements
 - Changed parameter type in LPUART_RTOS_Init struct from rtos_lpuart_config to lpuart_rtos_config_t.
- Bug Fixes
 - Disabled LPUART receive interrupt instead of all NVICs when reading data from ring buffer. Otherwise when the ring buffer is used, receive nonblocking method will disable all NVICs to protect the ring buffer. This may have a negative effect on other IPs that are using the interrupt.

[2.2.2]

- Improvements
 - Added software reset feature support.
 - Added software reset API in LPUART_Init.

[2.2.1]

- Improvements
 - Added separate RX/TX IRQ number support.

[2.2.0]

- Improvements
 - Added support of 7 data bits and MSB.

[2.1.1]

- Improvements
 - Removed unnecessary check of event flags and assert in LPUART_RTOS_Receive.
 - Added code to always wait for RX event flag in LPUART_RTOS_Receive.

[2.1.0]

- Improvements
 - Update transactional APIs.
-

LPUART_EDMA

[2.4.0]

- Refer LPUART driver change log 2.1.0 to 2.4.0
-

OPAMP

[2.2.1]

- Improvements
 - Fixed CERT-C issues.

[2.2.0]

- Improvements
 - Added OPAMP positive port gain and negative gain configuration functions.

[2.1.2]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.1.1]

- Bug Fixes
 - Fixed violations of the MISRA C-2012 rules.

[2.1.0]

- Improvements
 - Updated opamp driver code, supports devices MCXN947 and MCXN548.
 - Added OPAMP_EnableRefBuffer() API to control bias voltage input buffer.
 - Added OPAMP_EnableTriggerMode() API to control OPAMP trigger mode.

[2.0.0]

- Initial version.
-

OSTIMER

[2.2.5]

- Improvements
 - Support binary encoded ostimer.

[2.2.4]

- Bug Fixes
 - Fixed CERT INT31-C violations.

[2.2.3]

- Improvements
 - Disable and clear pending interrupts before disabling the OSTIMER clock to avoid interrupts being executed when the clock is already disabled.

[2.2.2]

- Improvements
 - Support devices with different OSTIMER instance name.

[2.2.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.2.0]

- Improvements
 - Move the PMC operation out of the OSTIMER driver to board specific files.
 - Added low level APIs to control OSTIMER MATCH and interrupt.

[2.1.2]

- Bug Fixes
 - Fixed MISRA-2012 rule 10.8.

[2.1.1]

- Bug Fixes
 - removes the suffix 'n' for some register names and bit fields' names
- Improvements
 - Added HW CODE GRAY feature supported by CODE GRAY in SYSCTRL register group.

[2.1.0]

- Bug Fixes
 - Added a workaround to fix the issue that no interrupt was reported when user set smaller period.
 - Fixed violation of MISRA C-2012 rule 10.3 and 11.9.
- Improvements
 - Added return value for the two APIs to set match value.
 - * OSTIMER_SetMatchRawValue
 - * OSTIMER_SetMatchValue

[2.0.3]

- Bug Fixes
 - Fixed violation of MISRA C-2012 rule 10.3, 14.4, 17.7.

[2.0.2]

- Improvements
 - Added support for OSTIMERO

[2.0.1]

- Improvements
 - Removed the software reset function out of the initialization API.
 - Enabled interrupt directly instead of enabling deep sleep interrupt. Users need to enable the deep sleep interrupt in application code if needed.

[2.0.0]

- Initial version.
-

PORT

[2.5.1]

- Bug Fixes
 - Fix CERT INT31-C issues.

[2.5.0]

- Bug Fixes
 - Correct the kPORT_MuxAsGpio for some platforms.

[2.4.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.8 and 14.4.

[2.4.0]

- New Features
 - Updated port_pin_config_t to support input buffer and input invert.

[2.3.0]

- New Features
 - Added new APIs for Electrical Fast Transient(EFT) detect.
 - Added new API to configure port voltage range.

[2.2.0]

- New Features
 - Added new api PORT_EnablePinDoubleDriveStrength.

[2.1.1]

- Bug Fixes
 - Fixed the violations of MISRA C-2012 rules: 10.1, 10.4, 11.3, 11.8, 14.4.

[2.1.0]

- New Features
 - Updated the driver code to adapt the case of the interrupt configurations in GPIO module. Will move the pin configuration APIs to GPIO module.

[2.0.2]

- Other Changes
 - Added feature guard macros in the driver.

[2.0.1]

- Other Changes
 - Added “const” in function parameter.
 - Updated some enumeration variables’ names.
-

PWM

[2.9.0]

- Improvements
 - Support PWMX channel output for edge aligned PWM.
 - Forbid submodule 0 counter initialize with master sync and master reload mode.
 - Clarify kPWM_BusClock meaning.
 - Verify pulseCnt within 65535 when update period register.

[2.8.4]

- Improvements
 - Support workaround for ERR051989. This function helps realize no phase delay between submodule 0 and other submodule.

[2.8.3]

- Bug Fixes
 - Fixed MISRA C-2012 Rule 15.7

[2.8.2]

- Bug Fixes
 - Fixed warning conversion from ‘int’ to ‘uint16_t’ on API PWM_Init.
 - Fixed warning unused variable ‘reg’ on API PWM_SetPwmForceOutputToZero.

[2.8.1]

- Improvements
 - Release peripheral from reset if necessary in init function.

[2.8.0]

- Improvements
 - Added API PWM_UpdatePwmPeriodAndDutycycle to update the PWM signal’s period and dutycycle for a PWM submodule.
 - Added API PWM_SetPeriodRegister and PWM_SetDutycycleRegister to merge duplicate code in API PWM_SetupPwm, PWM_UpdatePwmDutycycleHighAccuracy and PWM_UpdatePwmPeriodAndDutycycle

[2.7.1]

- Improvements
 - Supported UPDATE_MASK bit in MASK register.

[2.7.0]

- Improvements
 - Supported platforms which don’t have Capture feature with channel A and B.
 - Supported platforms which don’t have Submodule 3.
 - Added assert function in API PWM_SetPhaseDelay to prevent wrong argument.

[2.6.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.3.

[2.6.0]

- Improvements
 - Added API PWM_SetPhaseDelay to set the phase delay from the master sync signal of submodule 0.
 - Added API PWM_SetFilterSampleCountthe to set number of consecutive samples that must agree prior to the input filter.
 - Added API PWM_SetFilterSamplePeriod to set set the sampling period of the fault pin input filter.

[2.5.1]

- Bug Fixes
 - Fixed MISRA C-2012 rules: 10.1, 10.3, 10.4 , 10.6 and 10.8.
 - Fixed the issue that PWM_UpdatePwmDutycycle() can't update duty cycle status value correct.

[2.5.0]

- Improvements
 - Added API PWM_SetOoutputToIdle to set pwm channel output to idle.
 - Added API PWM_GetPwmChannelState to get the pwm channel output duty cycle value.
 - Added API PWM_SetPwmForceOutputToZero to set the pwm channel output to zero logic.
 - Added API PWM_SetChannelOutput to set the pwm channel output state.
 - Added API PWM_SetClockMode to set the value of the clock prescaler.
 - Added API PWM_SetupPwmPhaseShift to set PWM which a special phase shift and 50% duty cycle.
 - Added API PWM_SetVALxValue/PWM_GetVALxValue to set/get PWM VALs registers values directly.

[2.4.0]

- Improvements
 - Supported the PWM which can't work in wait mode.

[2.3.0]

- Improvements
 - Add PWM output enable&disbale API for SDK.
- Bug Fixes
 - Fixed changing channel B configuration when parameter is kPWM_PWMX and PWMX configuration is not supported yet.

[2.2.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 10.3, 10.4.
- Bug Fixes
 - Fixed the issue that PWM drivers computed VAL1 improperly.
- Improvements
 - Updated calculation accuracy of reloadValue in dutyCycleToReloadValue function.

[2.2.0]

- Improvements
 - Added new enumeration and two APIs to support enabling and disabling one or more PWM output triggers.
 - Added a new function to make the most of 16-bit resolution PWM.
 - Added one API to support updating fault status of PWM output.
 - Added one API to support PWM DMA write request.
 - Added three APIs to support PWM DMA capture read request.
 - Added one API to support get default fault config of PWM.
 - Added one API to support setting PWM fault disable mapping.

[2.1.0]

- Improvements
 - Moved the configuration of fault input filter into a new API to avoid be initialized multiple times.
- Bug Fixes
 - MISRA C-2012 issue fixed.
 - * Fix rules, containing: rule-10.2, rule-10.3, rule-10.4, rule-10.7, rule-10.8, rule-14.4, rule-16.4.

[2.0.1]

- Bug Fixes
 - Fixed the issue that PWM submodule may be initialized twice in function PWM_SetupPwm().

[2.0.0]

- Initial version.
-

RESET**[2.4.0]**

- Improvements
 - Add RESET_ReleasePeripheralReset API.

[2.0.0]

- Initial version.
-

ROMAPI

[2.0.1]

- Add ROMAPI_BASE feature to support MCXA276.

[2.0.0]

- Initial version.
-

MCX_SPC

[2.8.1]

- Improvements
 - Fixed `cert_int31_c_violation` of `SPC_GetVoltageDetectStatusFlag()`, `SPC_GetExternalDomainsStatus()` and `SPC_SetDCDCBurstConfig`.

[2.8.0]

- New Features
 - Updated `MCX_SPC` driver for compatibility with SoCs without `PD_STATUS[PWR_REQ_STATUS]`.

[2.7.0]

- New Features
 - Added new function to unretain RAM array.

[2.6.0]

- Bug Fixes
 - The enumeration `kSPC_DeepPowerDownWithSysClockOff` should be `0x8U`.
- New Features
 - Added functions to get the last low-power mode that the power domain requested.

[2.5.0]

- Improvements
 - Updated `SPC_SetLowPowerModeCoreLDORregulatorConfig()` with adding check that `LP_CFG[CORELDO_VDD_LVL]` only be updated when `CORELDO` is in normal driver strength in active mode.
 - Updated `SPC_SetLowPowerModeRegulatorsConfig()` with adding check the if `DCDC` voltage level set as retention mode, `CORELDO` low voltage detection must be disabled.
 - Updated `spc_analog_module_control` with adding `Opamp3` support.
- New Features
 - Added functions to mask/unmask voltage detections in active mode.

[2.4.2]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.4.1]

- Improvements
 - Fixed the violation of MISRA C-2012 rules.

[2.4.0]

- Improvements
 - Refined APIs to set regulators, the input parameters will be check firstly before setting register.
 - Improved APIs' document.
 - Removed software check for DCDC's settings since there is not hardware restrictions for DCDC.
 - Added new APIs to check if glitch detector is enabled in active/low power mode.
 - Added new APIs for DCDC burst feature, make it more flexible to use.
 - Added new API to enable/disable DCDC bleed resistor.
 - Set functions of VD_SYS_CFG[LVSEL] configuration as deprecated, since this bit filed is reserved for all devices.
 - Updated details of `spc_core_ldo_voltage_level_t` to align with description of latest RM, added comments to reminder users that the retention voltage is reserved in some devices.

[2.3.0]

- New Features
 - Updated glitch detect API to support devices which do not have aGDET

[2.2.1]

- Bug Fixes
 - Fixed an issue of `SPC_SetActiveModeRegulatorsConfig()` which will cause LVD in case of setting DCDC and CORE LDO into higher voltage level.

[2.2.0]

- New Features
 - Added some macros to support some devices(such as MCXA family) do not equipped DCDC, SYS_LDO and so on.
 - Added new function `SPC_EnableSRAMLdoLowPowerModeIREF()`, `SPC_TrimSRAMLdoRefVoltage()`, `SPC_EnableSRAMLdo()` to support some devices(such as MCXA family) that support control of SRAM_LDO.
 - Fixed violation of MISRA C-2012 rule 17.7.
 - Fixed an issue in `SPC_SetLowPowerModeRegulatorsConfig()` function that set ACTIVE_CFG register by mistake.

[2.1.0]

- Improvements
 - Added new functions to set regulators' voltage level and drive strength individually.
 - Updated SPC_SetActiveModeRegulatorsConfig() and SPC_SetLowPowerModeRegulatorsConfig() based on new added functions.

[2.0.1]

- Bug Fixes
 - Fixed a bug that external burst not working properly.
 - Fixed a bug that is SPC has VDD_DS the voltage is not configured correctly.

[2.0.0]

- Initial version.
-

TRDC

[2.2.1]

- Bug Fixes:
 - Fix MISRA violations.

[2.2.0]

- New Features:
 - Supported SoCs that do not have all TRDC modules.

[2.1.0]

- Bug Fixes:
 - Fix MISRA violations.
 - Fixed wrong operation of domain mask in TRDC_MbcNseClearAll and TRDC_MrcDomainNseClear.

[2.0.0]

- Initial version.
-

UTICK

[2.0.5]

- Improvements
 - Improved for SOC RW610.

[2.0.4]

- Bug Fixes
 - Fixed compile fail issue of no-supporting PD configuration in utick driver.

[2.0.3]

- Bug Fixes
 - Fixed violations of MISRA C-2012 rules: 8.4, 14.4, 17.7

[2.0.2]

- Added new feature definition macro to enable/disable power control in drivers for some devices have no power control function.

[2.0.1]

- Added control macro to enable/disable the CLOCK code in current driver.

[2.0.0]

- Initial version.
-

MCX_VBAT

[2.3.1]

- Bug Fixes
 - Fixed violations of MISRA C-2012 low impact rules.

[2.3.0]

- Improvements
 - OSCCTLA[FINE_AMP_GAIN] is reserved, added new macro to support this change.
 - Defined VBAT_LDORAMC_RET in case of this macro is not defined in header file.
- Bug Fixes
 - Fixed violaltions of MISRA C-2012 rule 10.8.

[2.2.0]

- Improvements
 - Added macros to support some devices(such as MCXA family) that do not support OSC control, LDO control, bandgap timer, and tamper.

[2.1.0]

- New features
 - Added functions to support tamper and clock monitor.

[2.0.0]

- Initial version.
-

WAKETIMER

[2.0.1]

- Bug Fix
 - MISRA C-2012 issue fixed: rule 8.2, 8.8, 10.1, 10.4.

[2.0.0]

- Initial version.
-

WUU

[2.4.0]

- New Features
 - Added `WUU_ClearExternalWakeupPinsConfig()` to clear settings of PDC and PE register.

[2.3.0]

- New Features
 - Added `WUU_ClearInternalWakeUpModulesConfig()` to clear settings of DM and ME register.

[2.2.1]

- Bug Fixes
 - Fixed `WUU_SetPinFilterConfig()` unable to set edge detection of pin filter config.
 - Fixed wrong macro used in `WUU_GetPinFilterFlag()` function.

[2.2.0]

- New Features
 - Added the `WUU_GetExternalWakeupPinFlag()` and `WUU_ClearExternalWakeupPinFlag()` function .

[2.1.0]

- New Features
 - Added the `WUU_GetModuleInterruptFlag()` function to support the devices that equipped MF register.

[2.0.0]

- Initial version.
-

WWDT**[2.1.10]**

- Bug Fixes
 - Check WWDT_RSTS instead of FSL_FEATURE_WWDT_HAS_NO_RESET to determine whether the peripheral can be reset.

[2.1.9]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rule 10.4.

[2.1.8]

- Improvements
 - Updated the “WWDT_Init” API to add wait operation. Which can avoid the TV value read by CPU still be 0xFF (reset value) after WWDT_Init function returns.

[2.1.7]

- Bug Fixes
 - Fixed the issue that the watchdog reset event affected the system from PMC.
 - Fixed the issue of setting watchdog WDPROTECT field without considering the backwards compatibility.
 - Fixed the issue of clearing bit fields by mistake in the function of WWDT_ClearStatusFlags.

[2.1.5]

- Bug Fixes
 - deprecated a unusable API in WWWDWT driver.
 - * WWDT_Disable

[2.1.4]

- Bug Fixes
 - Fixed violation of the MISRA C-2012 rules Rule 10.1, 10.3, 10.4 and 11.9.
 - Fixed the issue of the inseparable process interrupted by other interrupt source.
 - * WWDT_Init

[2.1.3]

- Bug Fixes
 - Fixed legacy issue when initializing the MOD register.

[2.1.2]

- Improvements
 - Updated the “WWDT_ClearStatusFlags” API and “WWDT_GetStatusFlags” API to match QN9090. WDTOF is not set in case of WD reset. Get info from PMC instead.

[2.1.1]

- New Features
 - Added new feature definition macro for devices which have no LCOK control bit in MOD register.
 - Implemented delay/retry in WWDT driver.

[2.1.0]

- Improvements
 - Added new parameter in configuration when initializing WWDT module. This parameter, which must be set, allows the user to deliver the WWDT clock frequency.

[2.0.0]

- Initial version.
-

1.6 Driver API Reference Manual

This section provides a link to the Driver API RM, detailing available drivers and their usage to help you integrate hardware efficiently.

[MCXA156](#)

1.7 Middleware Documentation

Find links to detailed middleware documentation for key components. While not all onboard middleware is covered, this serves as a useful reference for configuration and development.

1.7.1 MCU Boot

[mcuboot_opensource](#)

1.7.2 FreeMASTER

[freemaster](#)

1.7.3 FreeRTOS

FreeRTOS

1.7.4 File systemFatfs

fatfs

Chapter 2

MCXA156

2.1 AOI: Crossbar AND/OR/INVERT Driver

`void AOI_Init(AOI_Type *base)`

Initializes an AOI instance for operation.

This function un-gates the AOI clock.

Parameters

- `base` – AOI peripheral address.

`void AOI_Deinit(AOI_Type *base)`

Deinitializes an AOI instance for operation.

This function shutdowns AOI module.

Parameters

- `base` – AOI peripheral address.

`void AOI_GetEventLogicConfig(AOI_Type *base, aoi_event_t event, aoi_event_config_t *config)`

Gets the Boolean evaluation associated.

This function returns the Boolean evaluation associated.

Example:

```
aoi_event_config_t demoEventLogicStruct;

AOI_GetEventLogicConfig(AOI, kAOI_Event0, &demoEventLogicStruct);
```

Parameters

- `base` – AOI peripheral address.
- `event` – Index of the event which will be set of type `aoi_event_t`.
- `config` – Selected input configuration .

`void AOI_SetEventLogicConfig(AOI_Type *base, aoi_event_t event, const aoi_event_config_t *eventConfig)`

Configures an AOI event.

This function configures an AOI event according to the `aoiEventConfig` structure. This function configures all inputs (A, B, C, and D) of all product terms (0, 1, 2, and 3) of a desired event.

Example:

```
aoi_event_config_t demoEventLogicStruct;

demoEventLogicStruct.PT0AC = kAOI_InvInputSignal;
demoEventLogicStruct.PT0BC = kAOI_InputSignal;
demoEventLogicStruct.PT0CC = kAOI_LogicOne;
demoEventLogicStruct.PT0DC = kAOI_LogicOne;

demoEventLogicStruct.PT1AC = kAOI_LogicZero;
demoEventLogicStruct.PT1BC = kAOI_LogicOne;
demoEventLogicStruct.PT1CC = kAOI_LogicOne;
demoEventLogicStruct.PT1DC = kAOI_LogicOne;

demoEventLogicStruct.PT2AC = kAOI_LogicZero;
demoEventLogicStruct.PT2BC = kAOI_LogicOne;
demoEventLogicStruct.PT2CC = kAOI_LogicOne;
demoEventLogicStruct.PT2DC = kAOI_LogicOne;

demoEventLogicStruct.PT3AC = kAOI_LogicZero;
demoEventLogicStruct.PT3BC = kAOI_LogicOne;
demoEventLogicStruct.PT3CC = kAOI_LogicOne;
demoEventLogicStruct.PT3DC = kAOI_LogicOne;

AOI_SetEventLogicConfig(AOI, kAOI_Event0, demoEventLogicStruct);
```

Parameters

- base – AOI peripheral address.
- event – Event which will be configured of type `aoi_event_t`.
- eventConfig – Pointer to type `aoi_event_config_t` structure. The user is responsible for filling out the members of this structure and passing the pointer to this function.

FSL_AOI_DRIVER_VERSION

Version 2.0.2.

enum _aoi_input_config

AOI input configurations.

The selection item represents the Boolean evaluations.

Values:

enumerator kAOI_LogicZero

Forces the input to logical zero.

enumerator kAOI_InputSignal

Passes the input signal.

enumerator kAOI_InvInputSignal

Inverts the input signal.

enumerator kAOI_LogicOne

Forces the input to logical one.

enum _aoi_event

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

Values:

enumerator kAOI_Event0

Event 0 index

enumerator kAOI_Event1
Event 1 index

enumerator kAOI_Event2
Event 2 index

enumerator kAOI_Event3
Event 3 index

typedef enum *_aoi_input_config* aoi_input_config_t
AOI input configurations.

The selection item represents the Boolean evaluations.

typedef enum *_aoi_event* aoi_event_t

AOI event indexes, where an event is the collection of the four product terms (0, 1, 2, and 3) and the four signal inputs (A, B, C, and D).

typedef struct *_aoi_event_config* aoi_event_config_t
AOI event configuration structure.

Defines structure *_aoi_event_config* and use the *AOI_SetEventLogicConfig()* function to make whole event configuration.

AOI

AOI peripheral address

struct *_aoi_event_config*

#include <fsl_aoi.h> AOI event configuration structure.

Defines structure *_aoi_event_config* and use the *AOI_SetEventLogicConfig()* function to make whole event configuration.

Public Members

aoi_input_config_t PT0AC
Product term 0 input A

aoi_input_config_t PT0BC
Product term 0 input B

aoi_input_config_t PT0CC
Product term 0 input C

aoi_input_config_t PT0DC
Product term 0 input D

aoi_input_config_t PT1AC
Product term 1 input A

aoi_input_config_t PT1BC
Product term 1 input B

aoi_input_config_t PT1CC
Product term 1 input C

aoi_input_config_t PT1DC
Product term 1 input D

aoi_input_config_t PT2AC
Product term 2 input A

aoi_input_config_t PT2BC
Product term 2 input B

aoi_input_config_t PT2CC
Product term 2 input C

aoi_input_config_t PT2DC
Product term 2 input D

aoi_input_config_t PT3AC
Product term 3 input A

aoi_input_config_t PT3BC
Product term 3 input B

aoi_input_config_t PT3CC
Product term 3 input C

aoi_input_config_t PT3DC
Product term 3 input D

2.2 CDOG

status_t CDOG_Init(CDOG_Type *base, *cdog_config_t* *conf)
Initialize CDOG.

This function initializes CDOG block and setting.

Parameters

- *base* – CDOG peripheral base address
- *conf* – CDOG configuration structure

Returns

Status of the init operation

void CDOG_Deinit(CDOG_Type *base)
Deinitialize CDOG.

This function deinitializes CDOG secure counter.

Parameters

- *base* – CDOG peripheral base address

void CDOG_GetDefaultConfig(*cdog_config_t* *conf)
Sets the default configuration of CDOG.

This function initialize CDOG config structure to default values.

Parameters

- *conf* – CDOG configuration structure

void CDOG_Stop(CDOG_Type *base, uint32_t stop)
Stops secure counter and instruction timer.

This function stops instruction timer and secure counter. This also change state od CDOG to IDLE.

Parameters

- *base* – CDOG peripheral base address

- stop – expected value which will be compared with value of secure counter

void CDOG_Start(CDOG_Type *base, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in RELOAD and START registers for instruction timer and secure counter

Parameters

- base – CDOG peripheral base address
- reload – reload value
- start – start value

void CDOG_Check(CDOG_Type *base, uint32_t check)

Checks secure counter.

This function compares stop value in handler with secure counter value by writing to RELOAD register.

Parameters

- base – CDOG peripheral base address
- check – expected (stop) value

void CDOG_Set(CDOG_Type *base, uint32_t stop, uint32_t reload, uint32_t start)

Sets secure counter and instruction timer values.

This function sets value in STOP, RELOAD and START registers for instruction timer and secure counter.

Parameters

- base – CDOG peripheral base address
- stop – expected value which will be compared with value of secure counter
- reload – reload value for instruction timer
- start – start value for secure timer

void CDOG_Add(CDOG_Type *base, uint32_t add)

Add value to secure counter.

This function add specified value to secure counter.

Parameters

- base – CDOG peripheral base address.
- add – Value to be added.

void CDOG_Add1(CDOG_Type *base)

Add 1 to secure counter.

This function add 1 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add16(CDOG_Type *base)

Add 16 to secure counter.

This function add 16 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Add256(CDOG_Type *base)

Add 256 to secure counter.

This function add 256 to secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub(CDOG_Type *base, uint32_t sub)

brief Subtract value to secure counter

This function subtract specified value to secure counter.

param base CDOG peripheral base address. param sub Value to be subtracted.

void CDOG_Sub1(CDOG_Type *base)

Subtract 1 from secure counter.

This function subtract specified 1 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub16(CDOG_Type *base)

Subtract 16 from secure counter.

This function subtract specified 16 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_Sub256(CDOG_Type *base)

Subtract 256 from secure counter.

This function subtract specified 256 from secure counter.

Parameters

- base – CDOG peripheral base address.

void CDOG_WritePersistent(CDOG_Type *base, uint32_t value)

Set the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.
- value – The value to be written.

uint32_t CDOG_ReadPersistent(CDOG_Type *base)

Get the CDOG persistent word.

Parameters

- base – CDOG peripheral base address.

Returns

The persistent word.

FSL_CDOG_DRIVER_VERSION

Defines CDOG driver version 2.1.3.

Change log:

- Version 2.1.3
 - Re-design multiple instance IRQs and Clocks
 - Add fix for RESTART command errata

- Version 2.1.2
 - Support multiple IRQs
 - Fix default CONTROL values
- Version 2.1.1
 - Remove bit CONTROL[CONTROL_CTRL]
- Version 2.1.0
 - Rename CWT to CDOG
- Version 2.0.2
 - Fix MISRA-2012 issues
- Version 2.0.1
 - Fix doxygen issues
- Version 2.0.0
 - initial version

enum __cdog_debug_Action_ctrl_enum

Values:

enumerator kCDOG_DebugHaltCtrl_Run

enumerator kCDOG_DebugHaltCtrl_Pause

enum __cdog_irq_pause_ctrl_enum

Values:

enumerator kCDOG_IrqPauseCtrl_Run

enumerator kCDOG_IrqPauseCtrl_Pause

enum __cdog_fault_ctrl_enum

Values:

enumerator kCDOG_FaultCtrl_EnableReset

enumerator kCDOG_FaultCtrl_EnableInterrupt

enumerator kCDOG_FaultCtrl_NoAction

enum __code_lock_ctrl_enum

Values:

enumerator kCDOG_LockCtrl_Lock

enumerator kCDOG_LockCtrl_Unlock

typedef uint32_t secure_counter_t

SC_ADD(add)

SC_ADD1

SC_ADD16

SC_ADD256

SC_SUB(sub)

SC_SUB1

SC_SUB16

SC_SUB256

SC_CHECK(val)

```
struct cdog_config_t
    #include <fsl_cdog.h>
```

2.3 Clock Driver

enum _clock_ip_name

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

Values:

enumerator kCLOCK_InputMux

Clock gate name: INPUTMUX0

enumerator kCLOCK_GateINPUTMUX0

Clock gate name: INPUTMUX0

enumerator kCLOCK_GateI3C0

Clock gate name: I3C0

enumerator kCLOCK_GateCTIMER0

Clock gate name: CTIMER0

enumerator kCLOCK_GateCTIMER1

Clock gate name: CTIMER1

enumerator kCLOCK_GateCTIMER2

Clock gate name: CTIMER2

enumerator kCLOCK_GateCTIMER3

Clock gate name: CTIMER3

enumerator kCLOCK_GateCTIMER4

Clock gate name: CTIMER4

enumerator kCLOCK_GateFREQME

Clock gate name: FREQME

enumerator kCLOCK_GateUTICK0

Clock gate name: UTICK0

enumerator kCLOCK_GateWWDT0

Clock gate name: WWDT0

enumerator kCLOCK_GateDMA

Clock gate name: DMA

enumerator kCLOCK_GateAOI0

Clock gate name: AOI0

enumerator kCLOCK_GateCRC0

Clock gate name: CRC0

enumerator kCLOCK_Crc0

Clock gate name: CRC0

enumerator kCLOCK_GateEIM0
Clock gate name: EIM0

enumerator kCLOCK_GateERM0
Clock gate name: ERM0

enumerator kCLOCK_GateFMC
Clock gate name: FMC

enumerator kCLOCK_GateAOI1
Clock gate name: AOI1

enumerator kCLOCK_GateFLEXIO0
Clock gate name: FLEXIO0

enumerator kCLOCK_GateLPI2C0
Clock gate name: LPI2C0

enumerator kCLOCK_GateLPI2C1
Clock gate name: LPI2C1

enumerator kCLOCK_GateLPSPI0
Clock gate name: LPSPI0

enumerator kCLOCK_GateLPSPI1
Clock gate name: LPSPI1

enumerator kCLOCK_GateLPUART0
Clock gate name: LPUART0

enumerator kCLOCK_GateLPUART1
Clock gate name: LPUART1

enumerator kCLOCK_GateLPUART2
Clock gate name: LPUART2

enumerator kCLOCK_GateLPUART3
Clock gate name: LPUART3

enumerator kCLOCK_GateLPUART4
Clock gate name: LPUART4

enumerator kCLOCK_GateUSB0
Clock gate name: USB0

enumerator kCLOCK_GateQDC0
Clock gate name: QDC0

enumerator kCLOCK_GateQDC1
Clock gate name: QDC1

enumerator kCLOCK_GateFLEXPWM0
Clock gate name: FLEXPWM0

enumerator kCLOCK_GateFLEXPWM1
Clock gate name: FLEXPWM1

enumerator kCLOCK_GateOSTIMER0
Clock gate name: OSTIMER0

enumerator kCLOCK_GateADC0
Clock gate name: ADC0

enumerator kCLOCK_GateADC1
Clock gate name: ADC1

enumerator kCLOCK_GateCMP0
Clock gate name: CMP0

enumerator kCLOCK_GateCMP1
Clock gate name: CMP1

enumerator kCLOCK_GateDAC0
Clock gate name: DAC0

enumerator kCLOCK_GateOPAMP0
Clock gate name: OPAMP0

enumerator kCLOCK_GatePORT0
Clock gate name: PORT0

enumerator kCLOCK_GatePORT1
Clock gate name: PORT1

enumerator kCLOCK_GatePORT2
Clock gate name: PORT2

enumerator kCLOCK_GatePORT3
Clock gate name: PORT3

enumerator kCLOCK_GatePORT4
Clock gate name: PORT4

enumerator kCLOCK_GateFLEXCAN0
Clock gate name: FLEXCAN0

enumerator kCLOCK_GateLPI2C2
Clock gate name: LPI2C2

enumerator kCLOCK_GateLPI2C3
Clock gate name: LPI2C3

enumerator kCLOCK_GateMTR
Clock gate name: MTR

enumerator kCLOCK_GateTCU
Clock gate name: TCU

enumerator kCLOCK_GateRAMA
Clock gate name: RAMA

enumerator kCLOCK_GateRAMB
Clock gate name: RAMB

enumerator kCLOCK_GateGPIO0
Clock gate name: GPIO0

enumerator kCLOCK_GateGPIO1
Clock gate name: GPIO1

enumerator kCLOCK_GateGPIO2
Clock gate name: GPIO2

enumerator kCLOCK_GateGPIO3
Clock gate name: GPIO3

```

enumerator kCLOCK_GateGPIO4
    Clock gate name: GPIO4
enumerator kCLOCK_GateROMC
    Clock gate name: ROMC
enumerator kCLOCK_GatePWM0SM0
    Clock gate name: FlexPWM0 SM0
enumerator kCLOCK_GatePWM0SM1
    Clock gate name: FlexPWM0 SM1
enumerator kCLOCK_GatePWM0SM2
    Clock gate name: FlexPWM0 SM2
enumerator kCLOCK_GatePWM1SM0
    Clock gate name: FlexPWM1 SM0
enumerator kCLOCK_GatePWM1SM1
    Clock gate name: FlexPWM1 SM1
enumerator kCLOCK_GatePWM1SM2
    Clock gate name: FlexPWM1 SM2
enumerator kCLOCK_GateNotAvail
    Clock gate name: None

```

```
enum _clock_name
```

Clock name used to get clock frequency.

Values:

```

enumerator kCLOCK_MainClk
    MAIN_CLK
enumerator kCLOCK_CoreSysClk
    Core/system clock(CPU_CLK)
enumerator kCLOCK_SYSTEM_CLK
    AHB clock
enumerator kCLOCK_BusClk
    Bus clock (AHB clock)
enumerator kCLOCK_ExtClk
    External Clock
enumerator kCLOCK_FroHf
    FRO192
enumerator kCLOCK_FroHfDiv
    Divided by FRO192
enumerator kCLOCK_Clk48M
    CLK48M
enumerator kCLOCK_Fro12M
    FRO12M
enumerator kCLOCK_Clk1M
    CLK1M

```

enumerator kCLOCK_Fro16K
FRO16K

enumerator kCLOCK_Clk16K0
CLK16K[0]

enumerator kCLOCK_Clk16K1
CLK16K[1]

enumerator kCLOCK_SLOW_CLK
SYSTEM_CLK divided by 4

enum _clock_select_name
Clock name used to get clock frequency.

Values:

enumerator kCLOCK_SelI3C0_FCLK

enumerator kCLOCK_SelCTIMER0

enumerator kCLOCK_SelCTIMER1

enumerator kCLOCK_SelCTIMER2

enumerator kCLOCK_SelCTIMER3

enumerator kCLOCK_SelCTIMER4

enumerator kCLOCK_SelFLEXIO0

enumerator kCLOCK_SelLPI2C0

enumerator kCLOCK_SelLPI2C1

enumerator kCLOCK_SelLPSPi0

enumerator kCLOCK_SelLPSPi1

enumerator kCLOCK_SelLPUART0

enumerator kCLOCK_SelLPUART1

enumerator kCLOCK_SelLPUART2

enumerator kCLOCK_SelLPUART3

enumerator kCLOCK_SelLPUART4

enumerator kCLOCK_SelUSB0

enumerator kCLOCK_SelLPTMR0

enumerator kCLOCK_SelOSTIMER0

enumerator kCLOCK_SelADC0

enumerator kCLOCK_SelADC1

enumerator kCLOCK_SelCMP0_RR

enumerator kCLOCK_SelCMP1_RR

enumerator kCLOCK_SelDAC0

enumerator kCLOCK_SelFLEXCAN0

enumerator kCLOCK_SelLPI2C2

enumerator kCLOCK_SelLPI2C3

enumerator kCLOCK_SelTRACE

enumerator kCLOCK_SelCLKOUT

enumerator kCLOCK_SelSCGSCS
SCG SCS clock selection

enumerator kCLOCK_SelMax
MAX clock selection

enum _clock_attach_id

The enumerator of clock attach Id.

Values:

enumerator kCLK_IN_to_MAIN_CLK
Attach clk_in to MAIN_CLK.

enumerator kFRO12M_to_MAIN_CLK
Attach FRO_12M to MAIN_CLK.

enumerator kFRO_HF_to_MAIN_CLK
Attach FRO_HF to MAIN_CLK.

enumerator kCLK_16K_to_MAIN_CLK
Attach CLK_16K[1] to MAIN_CLK.

enumerator kNONE_to_MAIN_CLK
Attach NONE to MAIN_CLK.

enumerator kFRO12M_to_I3C0FCLK
Attach FRO12M to I3C0FCLK.

enumerator kFRO_HF_DIV_to_I3C0FCLK
Attach FRO_HF_DIV to I3C0FCLK.

enumerator kCLK_IN_to_I3C0FCLK
Attach CLK_IN to I3C0FCLK.

enumerator kCLK_1M_to_I3C0FCLK
Attach CLK_1M to I3C0FCLK.

enumerator kNONE_to_I3C0FCLK
Attach NONE to I3C0FCLK.

enumerator kFRO12M_to_CTIMER0
Attach FRO12M to CTIMER0.

enumerator kFRO_HF_to_CTIMER0
Attach FRO_HF to CTIMER0.

enumerator kCLK_IN_to_CTIMER0
Attach CLK_IN to CTIMER0.

enumerator kCLK_16K_to_CTIMER0
Attach CLK_16K to CTIMER0.

enumerator kCLK_1M_to_CTIMER0
Attach CLK_1M to CTIMER0.

enumerator kNONE_to_CTIMER0
Attach NONE to CTIMER0.

enumerator kFRO12M_to_CTIMER1
Attach FRO12M to CTIMER1.

enumerator kFRO_HF_to_CTIMER1
Attach FRO_HF to CTIMER1.

enumerator kCLK_IN_to_CTIMER1
Attach CLK_IN to CTIMER1.

enumerator kCLK_16K_to_CTIMER1
Attach CLK_16K to CTIMER1.

enumerator kCLK_1M_to_CTIMER1
Attach CLK_1M to CTIMER1.

enumerator kNONE_to_CTIMER1
Attach NONE to CTIMER1.

enumerator kFRO12M_to_CTIMER2
Attach FRO12M to CTIMER2.

enumerator kFRO_HF_to_CTIMER2
Attach FRO_HF to CTIMER2.

enumerator kCLK_IN_to_CTIMER2
Attach CLK_IN to CTIMER2.

enumerator kCLK_16K_to_CTIMER2
Attach CLK_16K to CTIMER2.

enumerator kCLK_1M_to_CTIMER2
Attach CLK_1M to CTIMER2.

enumerator kNONE_to_CTIMER2
Attach NONE to CTIMER2.

enumerator kFRO12M_to_CTIMER3
Attach FRO12M to CTIMER3.

enumerator kFRO_HF_to_CTIMER3
Attach FRO_HF to CTIMER3.

enumerator kCLK_IN_to_CTIMER3
Attach CLK_IN to CTIMER3.

enumerator kCLK_16K_to_CTIMER3
Attach CLK_16K to CTIMER3.

enumerator kCLK_1M_to_CTIMER3
Attach CLK_1M to CTIMER3.

enumerator kNONE_to_CTIMER3
Attach NONE to CTIMER3.

enumerator kFRO12M_to_CTIMER4
Attach FRO12M to CTIMER4.

enumerator kFRO_HF_to_CTIMER4
Attach FRO_HF to CTIMER4.

enumerator kCLK_IN_to_CTIMER4
Attach CLK_IN to CTIMER4.

enumerator kCLK_16K_to_CTIMER4
Attach CLK_16K to CTIMER4.

enumerator kCLK_1M_to_CTIMER4
Attach CLK_1M to CTIMER4.

enumerator kNONE_to_CTIMER4
Attach NONE to CTIMER4.

enumerator kFRO12M_to_FLEXIO0
Attach FRO12M to FLEXIO0.

enumerator kFRO_HF_to_FLEXIO0
Attach FRO_HF to FLEXIO0.

enumerator kCLK_IN_to_FLEXIO0
Attach CLK_IN to FLEXIO0.

enumerator kCLK_1M_to_FLEXIO0
Attach CLK_1M to FLEXIO0.

enumerator kNONE_to_FLEXIO0
Attach NONE to FLEXIO0.

enumerator kFRO_HF_DIV_to_FLEXCAN0
Attach FRO_HF_DIV to FLEXCAN0.

enumerator kCLK_IN_to_FLEXCAN0
Attach CLK_IN to FLEXCAN0.

enumerator kNONE_to_FLEXCAN0
Attach NONE to FLEXCAN0.

enumerator kFRO12M_to_DAC0
Attach FRO12M to DAC0.

enumerator kFRO_HF_DIV_to_DAC0
Attach FRO_HF_DIV to DAC0.

enumerator kCLK_IN_to_DAC0
Attach CLK_IN to DAC0.

enumerator kCLK_1M_to_DAC0
Attach CLK_1M to DAC0.

enumerator kNONE_to_DAC0
Attach NONE to DAC0.

enumerator kFRO12M_to_LPI2C0
Attach FRO12M to LPI2C0.

enumerator kFRO_HF_DIV_to_LPI2C0
Attach FRO_HF_DIV to LPI2C0.

enumerator kCLK_IN_to_LPI2C0
Attach CLK_IN to LPI2C0.

enumerator kCLK_1M_to_LPI2C0
Attach CLK_1M to LPI2C0.

enumerator kNONE_to_LPI2C0
Attach NONE to LPI2C0.

enumerator kFRO12M_to_LPI2C1
Attach FRO12M to LPI2C1.

enumerator kFRO_HF_DIV_to_LPI2C1
Attach FRO_HF_DIV to LPI2C1.

enumerator kCLK_IN_to_LPI2C1
Attach CLK_IN to LPI2C1.

enumerator kCLK_1M_to_LPI2C1
Attach CLK_1M to LPI2C1.

enumerator kNONE_to_LPI2C1
Attach NONE to LPI2C1.

enumerator kFRO12M_to_LPI2C2
Attach FRO12M to LPI2C2.

enumerator kFRO_HF_DIV_to_LPI2C2
Attach FRO_HF_DIV to LPI2C2.

enumerator kCLK_IN_to_LPI2C2
Attach CLK_IN to LPI2C2.

enumerator kCLK_1M_to_LPI2C2
Attach CLK_1M to LPI2C2.

enumerator kNONE_to_LPI2C2
Attach NONE to LPI2C2.

enumerator kFRO12M_to_LPI2C3
Attach FRO12M to LPI2C3.

enumerator kFRO_HF_DIV_to_LPI2C3
Attach FRO_HF_DIV to LPI2C3.

enumerator kCLK_IN_to_LPI2C3
Attach CLK_IN to LPI2C3.

enumerator kCLK_1M_to_LPI2C3
Attach CLK_1M to LPI2C3.

enumerator kNONE_to_LPI2C3
Attach NONE to LPI2C3.

enumerator kFRO12M_to_LPSPI0
Attach FRO12M to LPSPI0.

enumerator kFRO_HF_DIV_to_LPSPI0
Attach FRO_HF_DIV to LPSPI0.

enumerator kCLK_IN_to_LPSPI0
Attach CLK_IN to LPSPI0.

enumerator kCLK_1M_to_LPSPI0
Attach CLK_1M to LPSPI0.

enumerator kNONE_to_LPSPi0
Attach NONE to LPSPi0.

enumerator kFRO12M_to_LPSPi1
Attach FRO12M to LPSPi1.

enumerator kFRO_HF_DIV_to_LPSPi1
Attach FRO_HF_DIV to LPSPi1.

enumerator kCLK_IN_to_LPSPi1
Attach CLK_IN to LPSPi1.

enumerator kCLK_1M_to_LPSPi1
Attach CLK_1M to LPSPi1.

enumerator kNONE_to_LPSPi1
Attach NONE to LPSPi1.

enumerator kFRO12M_to_LPUART0
Attach FRO12M to LPUART0.

enumerator kFRO_HF_DIV_to_LPUART0
Attach FRO_HF_DIV to LPUART0.

enumerator kCLK_IN_to_LPUART0
Attach CLK_IN to LPUART0.

enumerator kCLK_16K_to_LPUART0
Attach CLK_16K to LPUART0.

enumerator kCLK_1M_to_LPUART0
Attach CLK_1M to LPUART0.

enumerator kNONE_to_LPUART0
Attach NONE to LPUART0.

enumerator kFRO12M_to_LPUART1
Attach FRO12M to LPUART1.

enumerator kFRO_HF_DIV_to_LPUART1
Attach FRO_HF_DIV to LPUART1.

enumerator kCLK_IN_to_LPUART1
Attach CLK_IN to LPUART1.

enumerator kCLK_16K_to_LPUART1
Attach CLK_16K to LPUART1.

enumerator kCLK_1M_to_LPUART1
Attach CLK_1M to LPUART1.

enumerator kNONE_to_LPUART1
Attach NONE to LPUART1.

enumerator kFRO12M_to_LPUART2
Attach FRO12M to LPUART2.

enumerator kFRO_HF_DIV_to_LPUART2
Attach FRO_HF_DIV to LPUART2.

enumerator kCLK_IN_to_LPUART2
Attach CLK_IN to LPUART2.

enumerator kCLK_16K_to_LPUART2
Attach CLK_16K to LPUART2.

enumerator kCLK_1M_to_LPUART2
Attach CLK_1M to LPUART2.

enumerator kNONE_to_LPUART2
Attach NONE to LPUART2.

enumerator kFRO12M_to_LPUART3
Attach FRO12M to LPUART2.

enumerator kFRO_HF_DIV_to_LPUART3
Attach FRO_HF_DIV to LPUART2.

enumerator kCLK_IN_to_LPUART3
Attach CLK_IN to LPUART2.

enumerator kCLK_16K_to_LPUART3
Attach CLK_16K to LPUART2.

enumerator kCLK_1M_to_LPUART3
Attach CLK_1M to LPUART2.

enumerator kNONE_to_LPUART3
Attach NONE to LPUART2.

enumerator kFRO12M_to_LPUART4
Attach FRO12M to LPUART4.

enumerator kFRO_HF_DIV_to_LPUART4
Attach FRO_HF_DIV to LPUART4.

enumerator kCLK_IN_to_LPUART4
Attach CLK_IN to LPUART4.

enumerator kCLK_16K_to_LPUART4
Attach CLK_16K to LPUART4.

enumerator kCLK_1M_to_LPUART4
Attach CLK_1M to LPUART4.

enumerator kNONE_to_LPUART4
Attach NONE to LPUART4.

enumerator kCLK_48M_to_USB0
Attach FRO12M to USB0.

enumerator kCLK_IN_to_USB0
Attach CLK_IN to USB0.

enumerator kNONE_to_USB0
Attach NONE to USB0.

enumerator kFRO12M_to_LPTMR0
Attach FRO12M to LPTMR0.

enumerator kFRO_HF_DIV_to_LPTMR0
Attach FRO_HF_DIV to LPTMR0.

enumerator kCLK_IN_to_LPTMR0
Attach CLK_IN to LPTMR0.

enumerator kCLK_1M_to_LPTMR0
Attach CLK_1M to LPTMR0.

enumerator kNONE_to_LPTMR0
Attach NONE to LPTMR0.

enumerator kCLK_16K_to_OSTIMER
Attach FRO16K to OSTIMER0.

enumerator kCLK_1M_to_OSTIMER
Attach CLK_1M to OSTIMER0.

enumerator kNONE_to_OSTIMER
Attach NONE to OSTIMER0.

enumerator kFRO12M_to_ADC0
Attach FRO12M to ADC0.

enumerator kFRO_HF_to_ADC0
Attach FRO_HF to ADC0.

enumerator kCLK_IN_to_ADC0
Attach CLK_IN to ADC0.

enumerator kCLK_1M_to_ADC0
Attach CLK_1M to ADC0.

enumerator kNONE_to_ADC0
Attach NONE to ADC0.

enumerator kFRO12M_to_ADC1
Attach FRO12M to ADC1.

enumerator kFRO_HF_to_ADC1
Attach FRO_HF to ADC1.

enumerator kCLK_IN_to_ADC1
Attach CLK_IN to ADC1.

enumerator kCLK_1M_to_ADC1
Attach CLK_1M to ADC1.

enumerator kNONE_to_ADC1
Attach NONE to ADC1.

enumerator kFRO12M_to_CMP0
Attach FRO12M to CMP0.

enumerator kFRO_HF_DIV_to_CMP0
Attach FRO_HF_DIV to CMP0.

enumerator kCLK_IN_to_CMP0
Attach CLK_IN to CMP0.

enumerator kCLK_1M_to_CMP0
Attach CLK_1M to CMP0.

enumerator kNONE_to_CMP0
Attach NONE to CMP0.

enumerator kFRO12M_to_CMP1
Attach FRO12M to CMP1.

enumerator kFRO_HF_DIV_to_CMP1
Attach FRO_HF_DIV to CMP1.

enumerator kCLK_IN_to_CMP1
Attach CLK_IN to CMP1.

enumerator kCLK_1M_to_CMP1
Attach CLK_1M to CMP1.

enumerator kNONE_to_CMP1
Attach NONE to CMP1.

enumerator kCPU_CLK_to_TRACE
Attach CPU_CLK to TRACE.

enumerator kCLK_1M_to_TRACE
Attach CLK_1M to TRACE.

enumerator kCLK_16K_to_TRACE
Attach CLK_16K to TRACE.

enumerator kNONE_to_TRACE
Attach NONE to TRACE.

enumerator kFRO12M_to_CLKOUT
Attach FRO12M to CLKOUT.

enumerator kFRO_HF_DIV_to_CLKOUT
Attach FRO_HF_DIV to CLKOUT.

enumerator kCLK_IN_to_CLKOUT
Attach CLK_IN to CLKOUT.

enumerator kCLK_16K_to_CLKOUT
Attach CLK_16K to CLKOUT.

enumerator kSLOW_CLK_to_CLKOUT
Attach SLOW_CLK to CLKOUT.

enumerator kNONE_to_CLKOUT
Attach NONE to CLKOUT.

enumerator kNONE_to_NONE
Attach NONE to NONE.

enum _clock_div_name

Clock dividers.

Values:

enumerator kCLOCK_DivI3C0_FCLK
I3C0_FCLK clock divider

enumerator kCLOCK_DivCTIMER0
CTIMER0 clock divider

enumerator kCLOCK_DivCTIMER1
CTIMER1 clock divider

enumerator kCLOCK_DivCTIMER2
CTIMER2 clock divider

enumerator kCLOCK_DivCTIMER3
CTIMER3 clock divider

enumerator kCLOCK_DivCTIMER4
CTIMER4 clock divider

enumerator kCLOCK_DivWWDT0
WWDT0 clock divider

enumerator kCLOCK_DivFLEXIO0
FLEXIO0 clock divider

enumerator kCLOCK_DivLPI2C0
LPI2C0 clock divider

enumerator kCLOCK_DivLPI2C1
LPI2C1 clock divider

enumerator kCLOCK_DivLPSPI0
LPSPI0 clock divider

enumerator kCLOCK_DivLPSPI1
LPSPI1 clock divider

enumerator kCLOCK_DivLPUART0
LPUART0 clock divider

enumerator kCLOCK_DivLPUART1
LPUART1 clock divider

enumerator kCLOCK_DivLPUART2
LPUART2 clock divider

enumerator kCLOCK_DivLPUART3
LPUART3 clock divider

enumerator kCLOCK_DivLPUART4
LPUART4 clock divider

enumerator kCLOCK_DivLPTMR0
LPTMR0 clock divider

enumerator kCLOCK_DivADC0
ADC0 clock divider

enumerator kCLOCK_DivADC1
ADC1 clock divider

enumerator kCLOCK_DivCMP0_FUNC
CMP0_FUNC clock divider

enumerator kCLOCK_DivCMP0_RR
CMP0_RR clock divider

enumerator kCLOCK_DivCMP1_FUNC
CMP1_FUNC clock divider

enumerator kCLOCK_DivCMP1_RR
CMP1_RR clock divider

enumerator kCLOCK_DivDAC0
DAC0 clock divider

enumerator kCLOCK_DivFLEXCAN0
 FLEXCAN0 clock divider

enumerator kCLOCK_DivLPI2C2
 LPI2C2 clock divider

enumerator kCLOCK_DivLPI2C3
 LPI2C3 clock divider

enumerator kCLOCK_DivDBG_TRACE
 DBG_TRACE clock divider

enumerator kCLOCK_DivTRACE
 DBG_TRACE clock divider

enumerator kCLOCK_DivCLKOUT
 CLKOUT clock divider

enumerator kCLOCK_DivFRO_HF_DIV
 FRO_HF_DIV clock divider

enumerator kCLOCK_DivSLOWCLK
 SLOWCLK clock divider

enumerator kCLOCK_DivAHBCLK
 System clock divider

enumerator kCLOCK_DivMax
 MAX clock divider

enum _firc_trim_mode
 firc trim mode.

Values:

enumerator kSCG_FircTrimNonUpdate

Trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure firc_trim_config_t.

enumerator kSCG_FircTrimUpdate

Trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _firc_trim_src
 firc trim source.

Values:

enumerator kSCG_FircTrimSrcUsb0
 USB0 start of frame (1kHz).

enumerator kSCG_FircTrimSrcSysOsc
 System OSC.

enum _sirc_trim_mode
 sirc trim mode.

Values:

enumerator kSCG_SircTrimNonUpdate

Trim enable but not enable trim value update. In this mode, the trim value is fixed to the initialized value which is defined by trimCoar and trimFine in configure structure sirc_trim_config_t.

enumerator kSCG_SircTrimUpdate

Trim enable and trim value update enable. In this mode, the trim value is auto update.

enum _sirc_trim_src

sirc trim source.

Values:

enumerator kNoTrimSrc

No external trim source.

enumerator kSCG_SircTrimSrcSysOsc

System OSC.

enum _scg_sosc_monitor_mode

SCG system OSC monitor mode.

Values:

enumerator kSCG_SysOscMonitorDisable

Monitor disabled.

enumerator kSCG_SysOscMonitorInt

Interrupt when the SOSC error is detected.

enumerator kSCG_SysOscMonitorReset

Reset when the SOSC error is detected.

enum _clke_16k

firc trim source.

Values:

enumerator kCLKE_16K_SYSTEM

To VSYS domain.

enumerator kCLKE_16K_COREMAIN

To VDD_CORE domain.

typedef enum *_clock_ip_name* clock_ip_name_t

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

typedef enum *_clock_name* clock_name_t

Clock name used to get clock frequency.

typedef enum *_clock_select_name* clock_select_name_t

Clock name used to get clock frequency.

typedef enum *_clock_attach_id* clock_attach_id_t

The enumerator of clock attach Id.

typedef enum *_clock_div_name* clock_div_name_t

Clock dividers.

typedef enum *_firc_trim_mode* firc_trim_mode_t

firc trim mode.

typedef enum *_firc_trim_src* firc_trim_src_t

firc trim source.

typedef struct *_firc_trim_config* firc_trim_config_t

firc trim configuration.

```
typedef enum _sirc_trim_mode sirc_trim_mode_t  
    sirc_trim_mode.
```

```
typedef enum _sirc_trim_src sirc_trim_src_t  
    sirc_trim_source.
```

```
typedef struct _sirc_trim_config sirc_trim_config_t  
    sirc_trim_configuration.
```

```
typedef enum _scg_sosc_monitor_mode scg_sosc_monitor_mode_t  
    SCG_system_OSC_monitor_mode.
```

```
typedef enum _clke_16k clke_16k_t  
    firc_trim_source.
```

```
static inline void CLOCK_EnableClock(clock_ip_name_t clk)  
    Enable the clock for specific IP.
```

Parameters

- *clk* – : Clock to be enabled.

Returns

Nothing

```
static inline void CLOCK_DisableClock(clock_ip_name_t clk)  
    Disable the clock for specific IP.
```

Parameters

- *clk* – : Clock to be Disabled.

Returns

Nothing

```
void CLOCK_AttachClk(clock_attach_id_t connection)  
    Configure the clock selection muxes.
```

Parameters

- *connection* – : Clock to be configured.

Returns

Nothing

```
clock_attach_id_t CLOCK_GetClockAttachId(clock_attach_id_t connection)
```

Get the actual clock attach id. This function uses the offset in input attach id, then it reads the actual source value in the register and combine the offset to obtain an actual attach id.

Parameters

- *connection* – : Clock attach id to get.

Returns

Clock source value.

```
void CLOCK_SetClockSelect(clock_select_name_t sel_name, uint32_t value)
```

Set the clock select value. This function set the peripheral clock select value.

Parameters

- *sel_name* – : Clock select.
- *value* – : value to be set.

uint32_t CLOCK_GetClockSelect(*clock_select_name_t* sel_name)

Get the clock select value. This function gets the peripheral clock select value.

Parameters

- sel_name – : Clock select.

Returns

Clock source value.

void CLOCK_SetClockDiv(*clock_div_name_t* div_name, uint32_t value)

Setup peripheral clock dividers.

Parameters

- div_name – : Clock divider name
- value – : Value to be divided

Returns

Nothing

uint32_t CLOCK_GetClockDiv(*clock_div_name_t* div_name)

Get peripheral clock dividers.

Parameters

- div_name – : Clock divider name

Returns

peripheral clock dividers

void CLOCK_HaltClockDiv(*clock_div_name_t* div_name)

Halt peripheral clock dividers.

Parameters

- div_name – : Clock divider name

Returns

Nothing

status_t CLOCK_SetupFROHFClocking(uint32_t iFreq)

Initialize the FROHF to given frequency (48,64,96,192). This function turns on FIRC and selects the given frequency as the source of fro_hf.

Parameters

- iFreq – : Desired frequency.

Returns

returns success or fail status.

status_t CLOCK_SetupFRO12MClk(void)

Initialize the FRO12M. This function turns on FRO12M.

Returns

returns success or fail status.

status_t CLOCK_SetupFRO16KClk(uint8_t clk_16k_enable_mask)

Initialize the FRO16K. This function turns on FRO16K.

Parameters

- clk_16k_enable_mask – 0-3 0b00: disable both clk_16k0 and clk_16k1 0b01: only enable clk_16k0 0b10: only enable clk_16k1 0b11: enable both clk_16k0 and clk_16k1

Returns

returns success or fail status.

status_t CLOCK_SetupExtClocking(*uint32_t* iFreq)

Initialize the external osc clock to given frequency.

Parameters

- iFreq – : Desired frequency (must be equal to exact rate in Hz)

Returns

returns success or fail status.

status_t CLOCK_SetupExtRefClocking(*uint32_t* iFreq)

Initialize the external reference clock to given frequency.

Parameters

- iFreq – : Desired frequency (must be equal to exact rate in Hz)

Returns

returns success or fail status.

uint32_t CLOCK_GetFreq(*clock_name_t* clockName)

Return Frequency of selected clock.

Returns

Frequency of selected clock

uint32_t CLOCK_GetCoreSysClkFreq(*void*)

Return Frequency of core.

Returns

Frequency of the core

uint32_t CLOCK_GetI3CFClkFreq(*void*)

Return Frequency of I3C FCLK.

Returns

Frequency of I3C FCLK.

uint32_t CLOCK_GetCTimerClkFreq(*uint32_t* id)

Return Frequency of CTimer functional Clock.

Returns

Frequency of CTimer functional Clock

uint32_t CLOCK_GetLpi2cClkFreq(*uint32_t* id)

Return Frequency of LPI2C0 functional Clock.

Returns

Frequency of LPI2C0 functional Clock

uint32_t CLOCK_GetLpspiClkFreq(*uint32_t* id)

Return Frequency of LPSPI functional Clock.

Returns

Frequency of LPSPI functional Clock

uint32_t CLOCK_GetLpuartClkFreq(*uint32_t* id)

Return Frequency of LPUART functional Clock.

Returns

Frequency of LPUART functional Clock

uint32_t CLOCK_GetLptmrClkFreq(*void*)

Return Frequency of LPTMR functional Clock.

Returns

Frequency of LPTMR functional Clock

uint32_t CLOCK_GetOstimerClkFreq(void)

Return Frequency of OSTIMER.

Returns

Frequency of OSTIMER Clock

uint32_t CLOCK_GetAdcClkFreq(uint32_t id)

Return Frequency of Adc Clock.

Returns

Frequency of Adc.

uint32_t CLOCK_GetDacClkFreq(void)

Return Frequency of Dac Clock.

Returns

Frequency of Dac.

uint32_t CLOCK_GetCmpFClkFreq(uint32_t id)

Return Frequency of CMP Function Clock.

Returns

Frequency of CMP Function.

uint32_t CLOCK_GetCmpRRClkFreq(uint32_t id)

Return Frequency of CMP Round Robin Clock.

Returns

Frequency of CMP Round Robin.

uint32_t CLOCK_GetTraceClkFreq(void)

Return Frequency of Trace Clock.

Returns

Frequency of Trace.

uint32_t CLOCK_GetClkoutClkFreq(void)

Return Frequency of CLKOUT Clock.

Returns

Frequency of CLKOUT.

uint32_t CLOCK_GetWwdtClkFreq(void)

brief Return Frequency of WWDT Clock return Frequency of WWDT.

uint32_t CLOCK_GetFlexioClkFreq(void)

Return Frequency of FLEXIO FCLK.

Returns

Frequency of FLEXIO FCLK.

uint32_t CLOCK_GetFlexcanClkFreq(void)

Return Frequency of FlexCAN FCLK.

Returns

Frequency of FlexCAN FCLK.

status_t CLOCK_FROHFTrimConfig(*firc_trim_config_t* config)

Setup FROHF trim.

Parameters

- config – : FROHF trim value

Returns

returns success or fail status.

status_t CLOCK_FRO12MTrimConfig(*sirc_trim_config_t* config)

Setup FRO 12M trim.

Parameters

- config – : FRO 12M trim value

Returns

returns success or fail status.

void CLOCK_SetSysOscMonitorMode(*scg_sosc_monitor_mode_t* mode)

Sets the system OSC monitor mode.

This function sets the system OSC monitor mode. The mode can be disabled, it can generate an interrupt when the error is disabled, or reset when the error is detected.

Parameters

- mode – Monitor mode to set.

bool CLOCK_EnableUsbfsClock(void)

brief Enable USB FS clock. Enable USB Full Speed clock.

FSL_CLOCK_DRIVER_VERSION

CLOCK driver version 2.0.0.

FSL_SDK_DISABLE_DRIVER_CLOCK_CONTROL

Configure whether driver controls clock.

When set to 0, peripheral drivers will enable clock in initialize function and disable clock in de-initialize function. When set to 1, peripheral driver will not control the clock, application could control the clock out of the driver.

Note: All drivers share this feature switcher. If it is set to 1, application should handle clock enable and disable for all drivers.

SDK_DEVICE_MAXIMUM_CPU_CLOCK_FREQUENCY

CLK_GATE_REG_OFFSET(value)

Clock gate name used for CLOCK_EnableClock/CLOCK_DisableClock.

CLK_GATE_BIT_SHIFT(value)

REG_PWM0SUBCTL

REG_PWM1SUBCTL

AOI_CLOCKS

Clock ip name array for AOI.

CRC_CLOCKS

Clock ip name array for CRC.

CTIMER_CLOCKS

Clock ip name array for CTIMER.

LPDAC_CLOCKS

Clock ip name array for DAC.

DMA_CLOCKS

Clock ip name array for DMA.

EDMA_CLOCKS

Clock gate name array for EDMA.

ERM_CLOCKS

Clock ip name array for ERM.

EIM_CLOCKS

Clock ip name array for EIM.

FLEXCAN_CLOCKS

Clock ip name array for FLEXCAN.

FLEXIO_CLOCKS

Clock ip name array for FLEXIO.

FREQME_CLOCKS

Clock ip name array for FREQME.

GPIO_CLOCKS

Clock ip name array for GPIO.

I3C_CLOCKS

Clock ip name array for I3C.

INPUTMUX_CLOCKS

Clock ip name array for INPUTMUX.

LPCMP_CLOCKS

Clock ip name array for GPIO.

LPADC_CLOCKS

Clock ip name array for LPADC.

LPUART_CLOCKS

Clock ip name array for LPUART.

LPI2C_CLOCKS

Clock ip name array for LPI2C.

LPSPI_CLOCKS

Clock ip name array for LSPI.

MTR_CLOCKS

Clock ip name array for MTR.

OSTIMER_CLOCKS

Clock ip name array for OSTIMER.

OPAMP_CLOCKS

Clock ip name array for DAC.

PWM_CLOCKS

Clock ip name array for PWM.

QDC_CLOCKS

Clock ip name array for QDC.

UTICK_CLOCKS

Clock ip name array for UTICK.

WWDT_CLOCKS

Clock ip name array for WWDT.

BUS_CLK

Peripherals clock source definition.

CLK_ATTACH_REG_OFFSET(value)

Clock Mux Switches The encoding is as follows each connection identified is 32bits wide while 24bits are valuable starting from LSB upwards.

[4 bits for choice, 0 means invalid choice] [8 bits mux ID]*

CLK_ATTACH_CLK_SEL(value)

CLK_ATTACH_MUX(reg, sel)

firc_trim_mode_t trimMode

Trim mode.

firc_trim_src_t trimSrc

Trim source.

uint16_t trimDiv

Divider of SOSC.

uint8_t trimCoar

Trim coarse value; Irrelevant if trimMode is kSCG_TrimUpdate.

uint8_t trimFine

Trim fine value; Irrelevant if trimMode is kSCG_TrimUpdate.

sirc_trim_mode_t trimMode

Trim mode.

sirc_trim_src_t trimSrc

Trim source.

uint16_t trimDiv

Divider of SOSC.

uint8_t cltrim

Trim coarse value; Irrelevant if trimMode is kSCG_TrimUpdate.

uint8_t ccotrim

Trim fine value; Irrelevant if trimMode is kSCG_TrimUpdate.

struct *_firc_trim_config*

#include <fsl_clock.h> firc trim configuration.

struct *_sirc_trim_config*

#include <fsl_clock.h> sirc trim configuration.

2.4 CRC: Cyclic Redundancy Check Driver

FSL_CRC_DRIVER_VERSION

CRC driver version. Version 2.0.4.

Current version: 2.0.4

Change log:

- Version 2.0.4
 - Release peripheral from reset if necessary in init function.

- Version 2.0.3
 - Fix MISRA issues
- Version 2.0.2
 - Fix MISRA issues
- Version 2.0.1
 - move DATA and DATALL macro definition from header file to source file

enum `_crc_bits`

CRC bit width.

Values:

enumerator `kCrcBits16`

Generate 16-bit CRC code

enumerator `kCrcBits32`

Generate 32-bit CRC code

enum `_crc_result`

CRC result type.

Values:

enumerator `kCrcFinalChecksum`

CRC data register read value is the final checksum. Reflect out and final xor protocol features are applied.

enumerator `kCrcIntermediateChecksum`

CRC data register read value is intermediate checksum (raw value). Reflect out and final xor protocol feature are not applied. Intermediate checksum can be used as a seed for `CRC_Init()` to continue adding data to this checksum.

typedef enum `_crc_bits` `crc_bits_t`

CRC bit width.

typedef enum `_crc_result` `crc_result_t`

CRC result type.

typedef struct `_crc_config` `crc_config_t`

CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

void `CRC_Init(CRC_Type *base, const crc_config_t *config)`

Enables and configures the CRC peripheral module.

This function enables the clock gate in the SIM module for the CRC peripheral. It also configures the CRC module and starts a checksum computation by writing the seed.

Parameters

- `base` – CRC peripheral address.
- `config` – CRC module configuration structure.

static inline void `CRC_Deinit(CRC_Type *base)`

Disables the CRC peripheral module.

This function disables the clock gate in the SIM module for the CRC peripheral.

Parameters

- `base` – CRC peripheral address.

void CRC_GetDefaultConfig(*crc_config_t* *config)

Loads default values to the CRC protocol configuration structure.

Loads default values to the CRC protocol configuration structure. The default values are as follows.

```
config->polynomial = 0x1021;
config->seed = 0xFFFF;
config->reflectIn = false;
config->reflectOut = false;
config->complementChecksum = false;
config->crcBits = kCrcBits16;
config->crcResult = kCrcFinalChecksum;
```

Parameters

- config – CRC protocol configuration structure.

void CRC_WriteData(CRC_Type *base, const uint8_t *data, size_t dataSize)

Writes data to the CRC module.

Writes input data buffer bytes to the CRC data register. The configured type of transpose is applied.

Parameters

- base – CRC peripheral address.
- data – Input data stream, MSByte in data[0].
- dataSize – Size in bytes of the input data buffer.

uint32_t CRC_Get32bitResult(CRC_Type *base)

Reads the 32-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 32-bit checksum, after configured transpose and complement operations.

uint16_t CRC_Get16bitResult(CRC_Type *base)

Reads a 16-bit checksum from the CRC module.

Reads the CRC data register (either an intermediate or the final checksum). The configured type of transpose and complement is applied.

Parameters

- base – CRC peripheral address.

Returns

An intermediate or the final 16-bit checksum, after configured transpose and complement operations.

CRC_DRIVER_USE_CRC16_CCIT_FALSE_AS_DEFAULT

Default configuration structure filled by CRC_GetDefaultConfig(). Use CRC16-CCIT-FALSE as default.

struct _crc_config

#include <fsl_crc.h> CRC protocol configuration.

This structure holds the configuration for the CRC protocol.

Public Members

uint32_t polynomial

CRC Polynomial, MSBit first. Example polynomial: $0x1021 = 1_0000_0010_0001 = x^{12} + x^5 + 1$

uint32_t seed

Starting checksum value

bool reflectIn

Reflect bits on input.

bool reflectOut

Reflect bits on output.

bool complementChecksum

True if the result shall be complement of the actual checksum.

crc_bits_t crcBits

Selects 16- or 32- bit CRC protocol.

crc_result_t crcResult

Selects final or intermediate checksum return from CRC_Get16bitResult() or CRC_Get32bitResult()

2.5 CTIMER: Standard counter/timers

void CTIMER_Init(CTIMER_Type *base, const *ctimer_config_t* *config)

Un-gates the clock and configures the peripheral for basic operation.

Note: This API should be called at the beginning of the application before using the driver.

Parameters

- base – Ctimer peripheral base address
- config – Pointer to the user configuration structure.

void CTIMER_Deinit(CTIMER_Type *base)

Gates the timer clock.

Parameters

- base – Ctimer peripheral base address

void CTIMER_GetDefaultConfig(*ctimer_config_t* *config)

Fills in the timers configuration structure with the default settings.

The default values are:

```
config->mode = kCTIMER_TimerMode;
config->input = kCTIMER_Capture_0;
config->prescale = 0;
```

Parameters

- config – Pointer to the user configuration structure.

```
status_t CTIMER_SetupPwmPeriod(CTIMER_Type *base, const ctimer_match_t
                               pwmPeriodChannel, ctimer_match_t matchChannel,
                               uint32_t pwmPeriod, uint32_t pulsePeriod, bool enableInt)
```

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM period

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- pwmPeriod – PWM period match value
- pulsePeriod – Pulse width match value
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

Returns

kStatus_Success on success kStatus_Fail If matchChannel is equal to pwmPeriodChannel; this channel is reserved to set the PWM cycle If PWM pulse width register value is larger than 0xFFFFFFFF.

```
status_t CTIMER_SetupPwm(CTIMER_Type *base, const ctimer_match_t pwmPeriodChannel,
                          ctimer_match_t matchChannel, uint8_t dutyCyclePercent, uint32_t
                          pwmFreq_Hz, uint32_t srcClock_Hz, bool enableInt)
```

Configures the PWM signal parameters.

Enables PWM mode on the match channel passed in and will then setup the match value and other match parameters to generate a PWM signal. This function can manually assign the specified channel to set the PWM cycle.

Note: When setting PWM output from multiple output pins, all should use the same PWM frequency. Please use CTIMER_SetupPwmPeriod to set up the PWM with high resolution.

Parameters

- base – Ctimer peripheral base address
- pwmPeriodChannel – Specify the channel to control the PWM period
- matchChannel – Match pin to be used to output the PWM signal
- dutyCyclePercent – PWM pulse width; the value should be between 0 to 100
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – Timer counter clock in Hz
- enableInt – Enable interrupt when the timer value reaches the match value of the PWM pulse, if it is 0 then no interrupt will be generated.

```
static inline void CTIMER_UpdatePwmPulsePeriod(CTIMER_Type *base, ctimer_match_t
                                             matchChannel, uint32_t pulsePeriod)
```

Updates the pulse period of an active PWM signal.

Parameters

- *base* – Ctimer peripheral base address
- *matchChannel* – Match pin to be used to output the PWM signal
- *pulsePeriod* – New PWM pulse width match value

```
status_t CTIMER_UpdatePwmDutycycle(CTIMER_Type *base, const ctimer_match_t
                                   pwmPeriodChannel, ctimer_match_t matchChannel,
                                   uint8_t dutyCyclePercent)
```

Updates the duty cycle of an active PWM signal.

Note: Please use `CTIMER_SetupPwmPeriod` to update the PWM with high resolution. This function can manually assign the specified channel to set the PWM cycle.

Parameters

- *base* – Ctimer peripheral base address
- *pwmPeriodChannel* – Specify the channel to control the PWM period
- *matchChannel* – Match pin to be used to output the PWM signal
- *dutyCyclePercent* – New PWM pulse width; the value should be between 0 to 100

Returns

`kStatus_Success` on success `kStatus_Fail` If PWM pulse width register value is larger than `0xFFFFFFFF`.

```
static inline void CTIMER_EnableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Enables the selected Timer interrupts.

Parameters

- *base* – Ctimer peripheral base address
- *mask* – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline void CTIMER_DisableInterrupts(CTIMER_Type *base, uint32_t mask)
```

Disables the selected Timer interrupts.

Parameters

- *base* – Ctimer peripheral base address
- *mask* – The interrupts to enable. This is a logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline uint32_t CTIMER_GetEnabledInterrupts(CTIMER_Type *base)
```

Gets the enabled Timer interrupts.

Parameters

- *base* – Ctimer peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `ctimer_interrupt_enable_t`

```
static inline uint32_t CTIMER_GetStatusFlags(CTIMER_Type *base)
```

Gets the Timer status flags.

Parameters

- base – Ctimer peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_ClearStatusFlags(CTIMER_Type *base, uint32_t mask)
```

Clears the Timer status flags.

Parameters

- base – Ctimer peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `ctimer_status_flags_t`

```
static inline void CTIMER_StartTimer(CTIMER_Type *base)
```

Starts the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
static inline void CTIMER_StopTimer(CTIMER_Type *base)
```

Stops the Timer counter.

Parameters

- base – Ctimer peripheral base address

```
FSL_CTIMER_DRIVER_VERSION
```

Version 2.3.3

```
enum _ctimer_capture_channel
```

List of Timer capture channels.

Values:

```
enumerator kCTIMER_Capture_0
```

Timer capture channel 0

```
enumerator kCTIMER_Capture_1
```

Timer capture channel 1

```
enumerator kCTIMER_Capture_3
```

Timer capture channel 3

```
enum _ctimer_capture_edge
```

List of capture edge options.

Values:

```
enumerator kCTIMER_Capture_RiseEdge
```

Capture on rising edge

```
enumerator kCTIMER_Capture_FallEdge
```

Capture on falling edge

```
enumerator kCTIMER_Capture_BothEdge
```

Capture on rising and falling edge

enum _ctimer_match

List of Timer match registers.

Values:

enumerator kCTIMER_Match_0

Timer match register 0

enumerator kCTIMER_Match_1

Timer match register 1

enumerator kCTIMER_Match_2

Timer match register 2

enumerator kCTIMER_Match_3

Timer match register 3

enum _ctimer_external_match

List of external match.

Values:

enumerator kCTIMER_External_Match_0

External match 0

enumerator kCTIMER_External_Match_1

External match 1

enumerator kCTIMER_External_Match_2

External match 2

enumerator kCTIMER_External_Match_3

External match 3

enum _ctimer_match_output_control

List of output control options.

Values:

enumerator kCTIMER_Output_NoAction

No action is taken

enumerator kCTIMER_Output_Clear

Clear the EM bit/output to 0

enumerator kCTIMER_Output_Set

Set the EM bit/output to 1

enumerator kCTIMER_Output_Toggle

Toggle the EM bit/output

enum _ctimer_timer_mode

List of Timer modes.

Values:

enumerator kCTIMER_TimerMode

enumerator kCTIMER_IncreaseOnRiseEdge

enumerator kCTIMER_IncreaseOnFallEdge

enumerator kCTIMER_IncreaseOnBothEdge

enum `_ctimer_interrupt_enable`

List of Timer interrupts.

Values:

enumerator `kCTIMER_Match0InterruptEnable`

Match 0 interrupt

enumerator `kCTIMER_Match1InterruptEnable`

Match 1 interrupt

enumerator `kCTIMER_Match2InterruptEnable`

Match 2 interrupt

enumerator `kCTIMER_Match3InterruptEnable`

Match 3 interrupt

enum `_ctimer_status_flags`

List of Timer flags.

Values:

enumerator `kCTIMER_Match0Flag`

Match 0 interrupt flag

enumerator `kCTIMER_Match1Flag`

Match 1 interrupt flag

enumerator `kCTIMER_Match2Flag`

Match 2 interrupt flag

enumerator `kCTIMER_Match3Flag`

Match 3 interrupt flag

enum `ctimer_callback_type_t`

Callback type when registering for a callback. When registering a callback an array of function pointers is passed the size could be 1 or 8, the callback type will tell that.

Values:

enumerator `kCTIMER_SingleCallback`

Single Callback type where there is only one callback for the timer. based on the status flags different channels needs to be handled differently

enumerator `kCTIMER_MultipleCallback`

Multiple Callback type where there can be 8 valid callbacks, one per channel. for both match/capture

typedef enum `_ctimer_capture_channel` `ctimer_capture_channel_t`

List of Timer capture channels.

typedef enum `_ctimer_capture_edge` `ctimer_capture_edge_t`

List of capture edge options.

typedef enum `_ctimer_match` `ctimer_match_t`

List of Timer match registers.

typedef enum `_ctimer_external_match` `ctimer_external_match_t`

List of external match.

typedef enum `_ctimer_match_output_control` `ctimer_match_output_control_t`

List of output control options.

```
typedef enum _ctimer_timer_mode ctimer_timer_mode_t
```

List of Timer modes.

```
typedef enum _ctimer_interrupt_enable ctimer_interrupt_enable_t
```

List of Timer interrupts.

```
typedef enum _ctimer_status_flags ctimer_status_flags_t
```

List of Timer flags.

```
typedef void (*ctimer_callback_t)(uint32_t flags)
```

```
typedef struct _ctimer_match_config ctimer_match_config_t
```

Match configuration.

This structure holds the configuration settings for each match register.

```
typedef struct _ctimer_config ctimer_config_t
```

Timer configuration structure.

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the `CTIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

```
void CTIMER_SetupMatch(CTIMER_Type *base, ctimer_match_t matchChannel, const
    ctimer_match_config_t *config)
```

Setup the match register.

User configuration is used to setup the match value and action to be taken when a match occurs.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – Match register to configure
- `config` – Pointer to the match configuration structure

```
uint32_t CTIMER_GetOutputMatchStatus(CTIMER_Type *base, uint32_t matchChannel)
```

Get the status of output match.

This function gets the status of output MAT, whether or not this output is connected to a pin. This status is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.

Parameters

- `base` – Ctimer peripheral base address
- `matchChannel` – External match channel, user can obtain the status of multiple match channels at the same time by using the logic of “|” enumeration `ctimer_external_match_t`

Returns

The mask of external match channel status flags. Users need to use the `_ctimer_external_match` type to decode the return variables.

```
void CTIMER_SetupCapture(CTIMER_Type *base, ctimer_capture_channel_t capture,
    ctimer_capture_edge_t edge, bool enableInt)
```

Setup the capture.

Parameters

- `base` – Ctimer peripheral base address
- `capture` – Capture channel to configure

- `edge` – Edge on the channel that will trigger a capture
- `enableInt` – Flag to enable channel interrupts, if enabled then the registered call back is called upon capture

```
static inline uint32_t CTIMER_GetTimerCountValue(CTIMER_Type *base)
```

Get the timer count value from TC register.

Parameters

- `base` – Ctimer peripheral base address.

Returns

return the timer count value.

```
void CTIMER_RegisterCallBack(CTIMER_Type *base, ctimer_callback_t *cb_func,  
                             ctimer_callback_type_t cb_type)
```

Register callback.

This function configures CTimer Callback in following modes:

- **Single Callback:** `cb_func` should be pointer to callback function pointer
For example: `ctimer_callback_t ctimer_callback = pwm_match_callback;`
`CTIMER_RegisterCallBack(CTIMER, &ctimer_callback, kCTIMER_SingleCallback);`
- **Multiple Callback:** `cb_func` should be pointer to array of callback function pointers Each element corresponds to Interrupt Flag in IR register. For example: `ctimer_callback_t ctimer_callback_table[] = { ctimer_match0_callback, NULL, NULL, ctimer_match3_callback, NULL, NULL, NULL, NULL};` `CTIMER_RegisterCallBack(CTIMER, &ctimer_callback_table[0], kCTIMER_MultipleCallback);`

Parameters

- `base` – Ctimer peripheral base address
- `cb_func` – Pointer to callback function pointer
- `cb_type` – callback function type, singular or multiple

```
static inline void CTIMER_Reset(CTIMER_Type *base)
```

Reset the counter.

The timer counter and prescale counter are reset on the next positive edge of the APB clock.

Parameters

- `base` – Ctimer peripheral base address

```
static inline void CTIMER_SetPrescale(CTIMER_Type *base, uint32_t prescale)
```

Setup the timer prescale value.

Specifies the maximum value for the Prescale Counter.

Parameters

- `base` – Ctimer peripheral base address
- `prescale` – Prescale value

```
static inline uint32_t CTIMER_GetCaptureValue(CTIMER_Type *base, ctimer_capture_channel_t  
                                              capture)
```

Get capture channel value.

Get the counter/timer value on the corresponding capture channel.

Parameters

- `base` – Ctimer peripheral base address

- capture – Select capture channel

Returns

The timer count capture value.

```
static inline void CTIMER_EnableResetMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                match, bool enable)
```

Enable reset match channel.

Set the specified match channel reset operation.

Parameters

- base – Ctimer peripheral base address
- match – match channel used
- enable – Enable match channel reset operation.

```
static inline void CTIMER_EnableStopMatchChannel(CTIMER_Type *base, ctimer_match_t
                                                match, bool enable)
```

Enable stop match channel.

Set the specified match channel stop operation.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable match channel stop operation.

```
static inline void CTIMER_EnableMatchChannelReload(CTIMER_Type *base, ctimer_match_t
                                                  match, bool enable)
```

Enable reload channel falling edge.

Enable the specified match channel reload match shadow value.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- enable – Enable .

```
static inline void CTIMER_EnableRisingEdgeCapture(CTIMER_Type *base,
                                                ctimer_capture_channel_t capture, bool
                                                enable)
```

Enable capture channel rising edge.

Sets the specified capture channel for rising edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable rising edge capture.

```
static inline void CTIMER_EnableFallingEdgeCapture(CTIMER_Type *base,
                                                  ctimer_capture_channel_t capture, bool
                                                  enable)
```

Enable capture channel falling edge.

Sets the specified capture channel for falling edge capture.

Parameters

- base – Ctimer peripheral base address.
- capture – capture channel used.
- enable – Enable falling edge capture.

```
static inline void CTIMER_SetShadowValue(CTIMER_Type *base, ctimer_match_t match,
                                         uint32_t matchvalue)
```

Set the specified match shadow channel.

Parameters

- base – Ctimer peripheral base address.
- match – match channel used.
- matchvalue – Reload the value of the corresponding match register.

```
struct _ctimer_match_config
```

```
#include <fsl_ctimer.h> Match configuration.
```

This structure holds the configuration settings for each match register.

Public Members

```
uint32_t matchValue
```

This is stored in the match register

```
bool enableCounterReset
```

true: Match will reset the counter false: Match will not reset the counter

```
bool enableCounterStop
```

true: Match will stop the counter false: Match will not stop the counter

```
ctimer_match_output_control_t outControl
```

Action to be taken on a match on the EM bit/output

```
bool outPinInitState
```

Initial value of the EM bit/output

```
bool enableInterrupt
```

true: Generate interrupt upon match false: Do not generate interrupt on match

```
struct _ctimer_config
```

```
#include <fsl_ctimer.h> Timer configuration structure.
```

This structure holds the configuration settings for the Timer peripheral. To initialize this structure to reasonable defaults, call the CTIMER_GetDefaultConfig() function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

```
ctimer_timer_mode_t mode
```

Timer mode

```
ctimer_capture_channel_t input
```

Input channel to increment the timer, used only in timer modes that rely on this input signal to increment TC

```
uint32_t prescale
```

Prescale value

2.6 DAC: Digital-to-Analog Converter Driver

void DAC_Init(LPDAC_Type *base, const *dac_config_t* *config)

Initialize the DAC module with common configuration.

The clock will be enabled in this function.

Parameters

- base – DAC peripheral base address.
- config – Pointer to configuration structure.

void DAC_GetDefaultConfig(*dac_config_t* *config)

Get the default settings for initialization's configuration.

This function initializes the user configuration structure to a default value. The default values are:

```
config->fifoWatermarkLevel = 0U;
config->fifoTriggerMode = kDAC_FIFOTriggerByHardwareMode;
config->fifoWorkMode = kDAC_FIFODisabled;
config->enableLowPowerMode = false;
config->referenceVoltageSource = kDAC_ReferenceVoltageSourceAlt1;
```

Parameters

- config – Pointer to configuration structure.

void DAC_Deinit(LPDAC_Type *base)

De-initialize the DAC module.

The clock will be disabled in this function.

Parameters

- base – DAC peripheral base address.

static inline void DAC_SetReset(LPDAC_Type *base, uint32_t mask)

Assert the reset control to part hardware.

This function is to assert the reset control to part hardware. Responding part hardware would remain reset until cleared by software.

Parameters

- base – DAC peripheral base address.
- mask – The reset control mask, see to `_dac_reset_control_t`.

static inline void DAC_ClearReset(LPDAC_Type *base, uint32_t mask)

Clear the reset control to part hardware.

This function is to clear the reset control to part hardware. Responding part hardware would work after the reset control is cleared by software.

Parameters

- base – DAC peripheral base address.
- mask – The reset control mask, see to `_dac_reset_control_t`.

static inline void DAC_Enable(LPDAC_Type *base, bool enable)

Enable the DAC hardware system or not.

This function is to start the Programmable Reference Generator operation or not.

Parameters

- base – DAC peripheral base address.
- enable – Assertion of indicated event.

static inline void DAC_EnableInterrupts(LPDAC_Type *base, uint32_t mask)

Enable the interrupts.

Parameters

- base – DAC peripheral base address.
- mask – Mask value of indicated interrupt events. See to `_dac_interrupt_enable`.

static inline void DAC_DisableInterrupts(LPDAC_Type *base, uint32_t mask)

Disable the interrupts.

Parameters

- base – DAC peripheral base address.
- mask – Mask value of indicated interrupt events. See to `_dac_interrupt_enable`.

static inline void DAC_EnableDMA(LPDAC_Type *base, uint32_t mask, bool enable)

Enable the DMA switchers or not.

Parameters

- base – DAC peripheral base address.
- mask – Mask value of indicated DMA request. See to `_dac_dma_enable`.
- enable – Enable the DMA or not.

static inline uint32_t DAC_GetStatusFlags(LPDAC_Type *base)

Get status flags of DAC module.

Parameters

- base – DAC peripheral base address.

Returns

Mask value of status flags. See to `_dac_status_flags`.

static inline void DAC_ClearStatusFlags(LPDAC_Type *base, uint32_t flags)

Clear status flags of DAC module.

Parameters

- base – DAC peripheral base address.
- flags – Mask value of status flags to be cleared. See to `_dac_status_flags`.

static inline void DAC_SetData(LPDAC_Type *base, uint32_t value)

Set data into the entry of FIFO buffer.

Parameters

- base – DAC peripheral base address.
- value – Setting value into FIFO buffer.

static inline uint32_t DAC_GetFIFOWritePointer(LPDAC_Type *base)

Get the value of the FIFO write pointer.

Parameters

- base – DAC peripheral base address.

Returns

Current value of the FIFO write pointer.


```
static inline uint32_t DAC_GetFIFOReadPointer(LPDAC_Type *base)
```

Get the value of the FIFO read pointer.

Parameters

- base – DAC peripheral base address.

Returns

Current value of the FIFO read pointer.

```
static inline void DAC_DoSoftwareTriggerFIFO(LPDAC_Type *base)
```

Do software trigger to FIFO when in software mode.

Parameters

- base – DAC peripheral base address.

```
FSL_DAC_DRIVER_VERSION
```

DAC driver version 2.1.2.

DAC reset control.

Values:

```
enumerator kDAC_ResetFIFO
```

Resets the FIFO pointers and flags.

```
enumerator kDAC_ResetLogic
```

Resets all DAC registers and internal logic.

DAC interrupts.

Values:

```
enumerator kDAC_FIFOFullInterruptEnable
```

FIFO full interrupt enable.

```
enumerator kDAC_FIFOEmptyInterruptEnable
```

FIFO empty interrupt enable.

```
enumerator kDAC_FIFOWatermarkInterruptEnable
```

FIFO watermark interrupt enable.

```
enumerator kDAC_SwingBackInterruptEnable
```

Swing back one cycle complete interrupt enable.

```
enumerator kDAC_FIFOOverflowInterruptEnable
```

FIFO overflow interrupt enable.

```
enumerator kDAC_FIFOUnderflowInterruptEnable
```

FIFO underflow interrupt enable.

```
enumerator kDAC_PeriodTriggerCompleteInterruptEnable
```

Period trigger mode conversion complete interrupt enable

DAC DMA switchers.

Values:

```
enumerator kDAC_FIFOEmptyDMAEnable
```

FIFO empty DMA enable.

enumerator `kDAC_FIFOWatermarkDMAEnable`
FIFO watermark DMA enable.

DAC status flags.

Values:

enumerator `kDAC_FIFOUnderflowFlag`

This flag means that there is a new trigger after the buffer is empty. The FIFO read pointer will not increase in this case and the data sent to DAC analog conversion will not changed. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOOverflowFlag`

This flag indicates that data is intended to write into FIFO after the buffer is full. The writer pointer will not increase in this case. The extra data will not be written into the FIFO. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOSwingBackFlag`

This flag indicates that the DAC has completed one period of conversion in swing back mode. It means that the read pointer has increased to the top (write pointer) once and then decreased to zero once. For example, after three data is written to FIFO, the writer pointer is now 3. Then, if continually triggered, the read pointer will swing like: 0-1-2-1-0-1-2-, and so on. After the fourth trigger, the flag is set. This flag is cleared by writing a 1 to it.

enumerator `kDAC_FIFOWatermarkFlag`

This field is set if the remaining data in FIFO is less than or equal to the setting value of watermark. By writing data into FIFO by DMA or CPU, this flag is cleared automatically when the data in FIFO is more than the setting value of watermark.

enumerator `kDAC_FIFOEmptyFlag`

FIFO empty flag.

enumerator `kDAC_FIFOFullFlag`

FIFO full flag.

enumerator `kDAC_PeriodTriggerCompleteFlag`

Period trigger mode conversion complete flag.

enum `_dac_fifo_trigger_mode`

DAC FIFO trigger mode.

Values:

enumerator `kDAC_FIFOTriggerByHardwareMode`

Buffer would be triggered by hardware.

enumerator `kDAC_FIFOTriggerBySoftwareMode`

Buffer would be triggered by software.

enum `_dac_fifo_work_mode`

DAC FIFO work mode.

Values:

enumerator `kDAC_FIFODisabled`

FIFO mode is disabled and buffer mode is enabled. Any data written to `DATA[DATA]` goes to buffer then goes to conversion.

enumerator `kDAC_FIFOWorkAsNormalMode`

FIFO mode is enabled. Data will be first read from FIFO to buffer then goes to conversion.

enumerator `kDAC_FIFOWorkAsSwingMode`

In swing mode, the read pointer swings between the writer pointer and zero. That is, the trigger increases the read pointer till reach the writer pointer and decreases the read pointer till zero, and so on. The FIFO empty/full/watermark flag will not update during swing back mode.

enumerator `kDAC_FIFOWorkAsPeriodTriggerMode`

In periodic trigger mode, user only needs to send the first trigger. Then after every [PTG_PERIOD+1] RCLK cycles, DAC will be automatically triggered by internal trigger. There will be [PTG_NUM] internal triggers, thus in total [PTG_NUM+1] conversions including the first trigger sent by user. User can terminate the current conversion queue by clearing the GCR[PTGEN] bit. Then, after the current conversion is completed, the conversion is terminated and the PTGCOCO flag is set. If PCR[PTG_NUM] is set to zero, there will be infinite triggers following the first hardware/software trigger, until the GCR[PTGEN] is cleared by software. In any case, the conversion can be terminated by FIFORST/SWRST.

enumerator `kDAC_FIFOWorkAsPeriodTriggerAndSwingMode`

Periodically trigger DAC and swing back.

enum `_dac_reference_voltage_source`

DAC reference voltage source.

Values:

enumerator `kDAC_ReferenceVoltageSourceAlt1`

The DAC selects VREFH_INT as the reference voltage.

enumerator `kDAC_ReferenceVoltageSourceAlt2`

The DAC selects VREFH_EXT as the reference voltage.

enum `_dac_reference_current_source`

Values:

enumerator `kDAC_ReferenceCurrentSourcePtat`

enumerator `kDAC_ReferenceCurrentSourceZtc`

typedef enum `_dac_fifo_trigger_mode` `dac_fifo_trigger_mode_t`

DAC FIFO trigger mode.

typedef enum `_dac_fifo_work_mode` `dac_fifo_work_mode_t`

DAC FIFO work mode.

typedef enum `_dac_reference_voltage_source` `dac_reference_voltage_source_t`

DAC reference voltage source.

typedef enum `_dac_reference_current_source` `dac_reference_current_source_t`

typedef struct `_dac_config` `dac_config_t`

DAC configuration structure.

struct `_dac_config`

#include <fsl_dac.h> DAC configuration structure.

Public Members

uint32_t `fifoWatermarkLevel`

FIFO's watermark, the max value can be the hardware FIFO size.

dac_fifo_trigger_mode_t fifoTriggerMode

Select the trigger mode for FIFO.

dac_fifo_work_mode_t fifoWorkMode

Select the work mode for FIFO.

bool enableOpampBuffer

Opamp is used as buffer.

bool enableLowerLowPowerMode

Enable the lower low power mode.

uint32_t periodicTriggerNumber

There will be 'periodicTriggerNumber' internal triggers following the first hardware/software trigger. So there will be 'periodicTriggerNumber + 1' conversions in total. If set to zero, there will be infinite triggers following the first hw/sw trigger, until the GCR[PTGEN] is cleared.

uint32_t periodicTriggerWidth

Control the periodic trigger frequency. There will be 'periodicTriggerWidth + 1' RCLK cycles between each periodic trigger. The periodic trigger frequency should be configured to not larger than the analog conversion speed.

uint32_t syncTime

RCLK cycles before data latch. accessible range is 0-15. It is used to configure the DAC sync cycles which is helpful to reduce glitch on the output. The sync time is (LATCH_CYC+1) RCLK cycles. User should configure this register according to the RCLK frequency. The recommended sync time is at least 40ns.

dac_reference_current_source_t referenceCurrentSource

Select the internal reference current source.

dac_reference_voltage_source_t referenceVoltageSource

Select the reference voltage source.

2.7 eDMA: Enhanced Direct Memory Access (eDMA) Controller Driver

void EDMA_Init(*EDMA_Type* *base, const *edma_config_t* *config)

Initializes the eDMA peripheral.

This function ungates the eDMA clock and configures the eDMA peripheral according to the configuration structure. All emda enabled request will be cleared in this function.

Note: This function enables the minor loop map feature.

Parameters

- base – eDMA peripheral base address.
- config – A pointer to the configuration structure, see “edma_config_t”.

void EDMA_Deinit(*EDMA_Type* *base)

Deinitializes the eDMA peripheral.

This function gates the eDMA clock.

Parameters

- base – eDMA peripheral base address.

void EDMA_InstallTCD(*EDMA_Type* *base, uint32_t channel, *edma_tcd_t* *tcd)

Push content of TCD structure into hardware TCD register.

Parameters

- base – EDMA peripheral base address.
- channel – EDMA channel number.
- tcd – Point to TCD structure.

void EDMA_GetDefaultConfig(*edma_config_t* *config)

Gets the eDMA default configuration structure.

This function sets the configuration structure to default values. The default configuration is set to the following values.

```
config.enableContinuousLinkMode = false;
config.enableHaltOnError = true;
config.enableRoundRobinArbitration = false;
config.enableDebugMode = false;
```

Parameters

- config – A pointer to the eDMA configuration structure.

void EDMA_InitChannel(*EDMA_Type* *base, uint32_t channel, *edma_channel_config_t* *channelConfig)

EDMA Channel initialization.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelConfig – pointer to user's eDMA4 channel config structure, see *edma_channel_config_t* for detail.

static inline void EDMA_SetChannelMemoryAttribute(*EDMA_Type* *base, uint32_t channel, *edma_channel_memory_attribute_t* writeAttribute, *edma_channel_memory_attribute_t* readAttribute)

Set channel memory attribute.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- writeAttribute – Attributes associated with a write transaction.
- readAttribute – Attributes associated with a read transaction.

static inline void EDMA_SetChannelSignExtension(*EDMA_Type* *base, uint32_t channel, uint8_t position)

Set channel sign extension.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.

- position – A non-zero value specifying the sign extend bit position. If 0, sign extension is disabled.

```
static inline void EDMA_SetChannelSwapSize(EDMA_Type *base, uint32_t channel,  
                                           edma_channel_swap_size_t swapSize)
```

Set channel swap size.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- swapSize – Swap occurs with respect to the specified transfer size. If 0, swap is disabled.

```
static inline void EDMA_SetChannelAccessType(EDMA_Type *base, uint32_t channel,  
                                             edma_channel_access_type_t  
                                             channelAccessType)
```

Set channel access type.

Parameters

- base – eDMA4 peripheral base address.
- channel – eDMA4 channel number.
- channelAccessType – eDMA4's transactions type on the system bus when the channel is active.

```
static inline void EDMA_SetChannelMux(EDMA_Type *base, uint32_t channel, uint32_t  
                                     channelRequestSource)
```

Set channel request source.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- channelRequestSource – eDMA hardware service request source for the channel. User need to use the `dma_request_source_t` type as the input parameter. Note that devices may use other enum type to express dma request source and User can fined it in SOC header or `fsl_edma_soc.h`.

```
static inline uint32_t EDMA_GetChannelSystemBusInformation(EDMA_Type *base, uint32_t  
                                                         channel)
```

Gets the channel identification and attribute information on the system bus interface.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of the channel system bus information. Users need to use the `_edma_channel_sys_bus_info` type to decode the return variables.

```
static inline void EDMA_EnableChannelMasterIDReplication(EDMA_Type *base, uint32_t  
                                                       channel, bool enable)
```

Set channel master ID replication.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

- enable – true is enable, false is disable.

```
static inline void EDMA_SetChannelProtectionLevel(EDMA_Type *base, uint32_t channel,
                                                edma_channel_protection_level_t level)
```

Set channel security level.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- level – security level.

```
void EDMA_ResetChannel(EDMA_Type *base, uint32_t channel)
```

Sets all TCD registers to default values.

This function sets TCD registers for this channel to default values.

Note: This function must not be called while the channel transfer is ongoing or it causes unpredictable results.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_SetTransferConfig(EDMA_Type *base, uint32_t channel, const
                            edma_transfer_config_t *config, edma_tcd_t *nextTcd)
```

Configures the eDMA transfer attribute.

This function configures the transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the TCD address. Example:

```
edma_transfer_t config;
edma_tcd_t tcd;
config.srcAddr = ..;
config.destAddr = ..;
...
EDMA_SetTransferConfig(DMA0, channel, &config, &tcd);
```

Note: If nextTcd is not NULL, it means scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_ResetChannel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Point to TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_SetMinorOffsetConfig(EDMA_Type *base, uint32_t channel, const
                               edma_minor_offset_config_t *config)
```

Configures the eDMA minor offset feature.

The minor offset means that the signed-extended value is added to the source address or destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- config – A pointer to the minor offset configuration structure.

```
void EDMA_SetChannelPreemptionConfig(EDMA_Type *base, uint32_t channel, const
                                      edma_channel_preemption_config_t *config)
```

Configures the eDMA channel preemption feature.

This function configures the channel preemption attribute and the priority of the channel.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number
- config – A pointer to the channel preemption configuration structure.

```
void EDMA_SetChannelLink(EDMA_Type *base, uint32_t channel, edma_channel_link_type_t
                        type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA transfer.

This function configures either the minor link or the major link mode. The minor link means that the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- type – A channel link type, which can be one of the following:
 - kEDMA_LinkNone
 - kEDMA_MinorLink
 - kEDMA_MajorLink
- linkedChannel – The linked channel number.

```
void EDMA_SetBandWidth(EDMA_Type *base, uint32_t channel, edma_bandwidth_t
                      bandWidth)
```

Sets the bandwidth for the eDMA transfer.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- bandWidth – A bandwidth setting, which can be one of the following:
 - kEDMABandwidthStallNone
 - kEDMABandwidthStall4Cycle
 - kEDMABandwidthStall8Cycle

```
void EDMA_SetModulo(EDMA_Type *base, uint32_t channel, edma_modulo_t srcModulo,
                  edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA transfer.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- srcModulo – A source modulo value.
- destModulo – A destination modulo value.

```
static inline void EDMA_EnableAsyncRequest(EDMA_Type *base, uint32_t channel, bool enable)
```

Enables an async request for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
static inline void EDMA_EnableAutoStopRequest(EDMA_Type *base, uint32_t channel, bool
                                             enable)
```

Enables an auto stop request for the eDMA transfer.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- enable – The command to enable (true) or disable (false).

```
void EDMA_EnableChannelInterrupts(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Enables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

void EDMA_DisableChannelInterrupts(*EDMA_Type* *base, uint32_t channel, uint32_t mask)
Disables the interrupt source for the eDMA transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of the interrupt source to be set. Use the defined *edma_interrupt_enable_t* type.

void EDMA_SetMajorOffsetConfig(*EDMA_Type* *base, uint32_t channel, int32_t sourceOffset, int32_t destOffset)

Configures the eDMA channel TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- base – eDMA peripheral base address.
- channel – edma channel number.
- sourceOffset – source address offset will be applied to source address after major loop done.
- destOffset – destination address offset will be applied to source address after major loop done.

void EDMA_ConfigChannelSoftwareTCD(*edma_tcd_t* *tcd, const *edma_transfer_config_t* *transfer)

Sets TCD fields according to the user's channel transfer configuration structure, *edma_transfer_config_t*.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API *EDMA_ConfigChannelSoftwareTCDExt*

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.
- transfer – channel transfer configuration pointer.

void EDMA_TcdReset(*edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API *EDMA_TcdResetExt*

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- tcd – Pointer to the TCD structure.

```
void EDMA_TcdSetTransferConfig(edma_tcd_t *tcd, const edma_transfer_config_t *config,
                               edma_tcd_t *nextTcd)
```

Configures the eDMA TCD transfer attribute.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetTransferConfigExt

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {
...
}
edma_tcd_t tcd __aligned(32);
edma_tcd_t nextTcd __aligned(32);
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- *tcd* – Pointer to the TCD structure.
- *config* – Pointer to eDMA transfer configuration structure.
- *nextTcd* – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

```
void EDMA_TcdSetMinorOffsetConfig(edma_tcd_t *tcd, const edma_minor_offset_config_t
                                  *config)
```

Configures the eDMA TCD minor offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMinorOffsetConfigExt

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- *tcd* – A point to the TCD structure.
- *config* – A pointer to the minor offset configuration structure.

```
void EDMA_TcdSetChannelLink(edma_tcd_t *tcd, edma_channel_link_type_t type, uint32_t
                             linkedChannel)
```

Sets the channel link for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetChannelLinkExt

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- `tcd` – Point to the TCD structure.
- `type` – Channel link type, it can be one of:
 - `kEDMA_LinkNone`
 - `kEDMA_MinorLink`
 - `kEDMA_MajorLink`
- `linkedChannel` – The linked channel number.

```
static inline void EDMA_TcdSetBandWidth(edma_tcd_t *tcd, edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdSetBandWidthExt`

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- `tcd` – A pointer to the TCD structure.
- `bandWidth` – A bandwidth setting, which can be one of the following:
 - `kEDMABandwidthStallNone`
 - `kEDMABandwidthStall4Cycle`
 - `kEDMABandwidthStall8Cycle`

```
void EDMA_TcdSetModulo(edma_tcd_t *tcd, edma_modulo_t srcModulo, edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdSetModuloExt`

This function defines a specific address range specified to be the value after $(SADDR + SOFF)/(DADDR + DOFF)$ calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `tcd` – A pointer to the TCD structure.
- `srcModulo` – A source modulo value.
- `destModulo` – A destination modulo value.

```
static inline void EDMA_TcdEnableAutoStopRequest(edma_tcd_t *tcd, bool enable)
```

Sets the auto stop request for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API `EDMA_TcdEnableAutoStopRequestExt`

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- *tcd* – A pointer to the TCD structure.
- *enable* – The command to enable (true) or disable (false).

void EDMA_TcdEnableInterrupts(*edma_tcd_t* **tcd*, uint32_t *mask*)

Enables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdEnableInterruptsExt

Parameters

- *tcd* – Point to the TCD structure.
- *mask* – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

void EDMA_TcdDisableInterrupts(*edma_tcd_t* **tcd*, uint32_t *mask*)

Disables the interrupt source for the eDMA TCD.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdDisableInterruptsExt

Parameters

- *tcd* – Point to the TCD structure.
- *mask* – The mask of interrupt source to be set. Users need to use the defined *edma_interrupt_enable_t* type.

void EDMA_TcdSetMajorOffsetConfig(*edma_tcd_t* **tcd*, int32_t *sourceOffset*, int32_t *destOffset*)

Configures the eDMA TCD major offset feature.

@Note This API only supports EDMA4 TCD type. It can be used to support all types with extension API EDMA_TcdSetMajorOffsetConfigExt

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- *tcd* – A point to the TCD structure.
- *sourceOffset* – source address offset will be applied to source address after major loop done.
- *destOffset* – destination address offset will be applied to source address after major loop done.

void EDMA_ConfigChannelSoftwareTCDExt(*EDMA_Type* **base*, *edma_tcd_t* **tcd*, const *edma_transfer_config_t* **transfer*)

Sets TCD fields according to the user's channel transfer configuration structure, *edma_transfer_config_t*.

Application should be careful about the TCD pool buffer storage class,

- For the platform has cache, the software TCD should be put in non cache section
- The TCD pool buffer should have a consistent storage class.

Note: This function enables the auto stop request feature.

Parameters

- *base* – eDMA peripheral base address.
- *tcd* – Pointer to the TCD structure.

- transfer – channel transfer configuration pointer.

void EDMA_TcdResetExt(*EDMA_Type* *base, *edma_tcd_t* *tcd)

Sets all fields to default values for the TCD structure.

This function sets all fields for this TCD structure to default value.

Note: This function enables the auto stop request feature.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.

void EDMA_TcdSetTransferConfigExt(*EDMA_Type* *base, *edma_tcd_t* *tcd, const *edma_transfer_config_t* *config, *edma_tcd_t* *nextTcd)

Configures the eDMA TCD transfer attribute.

The TCD is a transfer control descriptor. The content of the TCD is the same as the hardware TCD registers. The TCD is used in the scatter-gather mode. This function configures the TCD transfer attribute, including source address, destination address, transfer size, address offset, and so on. It also configures the scatter gather feature if the user supplies the next TCD address. Example:

```
edma_transfer_t config = {  
...  
}  
edma_tcd_t tcd __aligned(32);  
edma_tcd_t nextTcd __aligned(32);  
EDMA_TcdSetTransferConfig(&tcd, &config, &nextTcd);
```

Note: TCD address should be 32 bytes aligned or it causes an eDMA error.

Note: If the nextTcd is not NULL, the scatter gather feature is enabled and DREQ bit is cleared in the previous transfer configuration, which is set in the EDMA_TcdReset.

Parameters

- base – eDMA peripheral base address.
- tcd – Pointer to the TCD structure.
- config – Pointer to eDMA transfer configuration structure.
- nextTcd – Pointer to the next TCD structure. It can be NULL if users do not want to enable scatter/gather feature.

void EDMA_TcdSetMinorOffsetConfigExt(*EDMA_Type* *base, *edma_tcd_t* *tcd, const *edma_minor_offset_config_t* *config)

Configures the eDMA TCD minor offset feature.

A minor offset is a signed-extended value added to the source address or a destination address after each minor loop.

Parameters

- base – eDMA peripheral base address.
- tcd – A point to the TCD structure.

- `config` – A pointer to the minor offset configuration structure.

```
void EDMA__TcdSetChannelLinkExt(EDMA_Type *base, edma_tcd_t *tcd,
                               edma_channel_link_type_t type, uint32_t linkedChannel)
```

Sets the channel link for the eDMA TCD.

This function configures either a minor link or a major link. The minor link means the channel link is triggered every time CITER decreases by 1. The major link means that the channel link is triggered when the CITER is exhausted.

Note: Users should ensure that DONE flag is cleared before calling this interface, or the configuration is invalid.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Point to the TCD structure.
- `type` – Channel link type, it can be one of:
 - `kEDMA_LinkNone`
 - `kEDMA_MinorLink`
 - `kEDMA_MajorLink`
- `linkedChannel` – The linked channel number.

```
static inline void EDMA__TcdSetBandWidthExt(EDMA_Type *base, edma_tcd_t *tcd,
                                             edma_bandwidth_t bandWidth)
```

Sets the bandwidth for the eDMA TCD.

Because the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. The bandwidth forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the crossbar switch.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – A pointer to the TCD structure.
- `bandWidth` – A bandwidth setting, which can be one of the following:
 - `kEDMABandwidthStallNone`
 - `kEDMABandwidthStall4Cycle`
 - `kEDMABandwidthStall8Cycle`

```
void EDMA__TcdSetModuloExt(EDMA_Type *base, edma_tcd_t *tcd, edma_modulo_t srcModulo,
                           edma_modulo_t destModulo)
```

Sets the source modulo and the destination modulo for the eDMA TCD.

This function defines a specific address range specified to be the value after (SADDR + SOFF)/(DADDR + DOFF) calculation is performed or the original register value. It provides the ability to implement a circular data queue easily.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – A pointer to the TCD structure.
- `srcModulo` – A source modulo value.

- `destModulo` – A destination modulo value.

```
static inline void EDMA_TcdEnableAutoStopRequestExt(EDMA_Type *base, edma_tcd_t *tcd,  
                                                    bool enable)
```

Sets the auto stop request for the eDMA TCD.

If enabling the auto stop request, the eDMA hardware automatically disables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – A pointer to the TCD structure.
- `enable` – The command to enable (true) or disable (false).

```
void EDMA_TcdEnableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Enables the interrupt source for the eDMA TCD.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_TcdDisableInterruptsExt(EDMA_Type *base, edma_tcd_t *tcd, uint32_t mask)
```

Disables the interrupt source for the eDMA TCD.

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – Point to the TCD structure.
- `mask` – The mask of interrupt source to be set. Users need to use the defined `edma_interrupt_enable_t` type.

```
void EDMA_TcdSetMajorOffsetConfigExt(EDMA_Type *base, edma_tcd_t *tcd, int32_t  
                                     sourceOffset, int32_t destOffset)
```

Configures the eDMA TCD major offset feature.

Adjustment value added to the source address at the completion of the major iteration count

Parameters

- `base` – eDMA peripheral base address.
- `tcd` – A point to the TCD structure.
- `sourceOffset` – source address offset will be applied to source address after major loop done.
- `destOffset` – destination address offset will be applied to source address after major loop done.

```
static inline void EDMA_EnableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Enables the eDMA hardware channel request.

This function enables the hardware channel request.

Parameters

- `base` – eDMA peripheral base address.
- `channel` – eDMA channel number.


```
static inline void EDMA_DisableChannelRequest(EDMA_Type *base, uint32_t channel)
```

Disables the eDMA hardware channel request.

This function disables the hardware channel request.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
static inline void EDMA_TriggerChannelStart(EDMA_Type *base, uint32_t channel)
```

Starts the eDMA transfer by using the software trigger.

This function starts a minor loop transfer.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
uint32_t EDMA_GetRemainingMajorLoopCount(EDMA_Type *base, uint32_t channel)
```

Gets the remaining major loop count from the eDMA current channel TCD.

This function checks the TCD (Task Control Descriptor) status for a specified eDMA channel and returns the number of major loop count that has not finished.

Note: 1. This function can only be used to get unfinished major loop count of transfer without the next TCD, or it might be inaccuracy.

- The unfinished/remaining transfer bytes cannot be obtained directly from registers while the channel is running. Because to calculate the remaining bytes, the initial NBYTES configured in DMA_TCDn_NBYTES_MLNO register is needed while the eDMA IP does not support getting it while a channel is active. In another word, the NBYTES value reading is always the actual (decrementing) NBYTES value the dma_engine is working with while a channel is running. Consequently, to get the remaining transfer bytes, a software-saved initial value of NBYTES (for example copied before enabling the channel) is needed. The formula to calculate it is shown below: RemainingBytes = RemainingMajorLoopCount * NBYTES(initially configured)
-

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

Major loop count which has not been transferred yet for the current TCD.

```
static inline uint32_t EDMA_GetErrorStatusFlags(EDMA_Type *base)
```

Gets the eDMA channel error status flags.

Parameters

- base – eDMA peripheral base address.

Returns

The mask of error status flags. Users need to use the `_edma_error_status_flags` type to decode the return variables.

```
uint32_t EDMA_GetChannelStatusFlags(EDMA_Type *base, uint32_t channel)
```

Gets the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.

Returns

The mask of channel status flags. Users need to use the `_edma_channel_status_flags` type to decode the return variables.

```
void EDMA_ClearChannelStatusFlags(EDMA_Type *base, uint32_t channel, uint32_t mask)
```

Clears the eDMA channel status flags.

Parameters

- base – eDMA peripheral base address.
- channel – eDMA channel number.
- mask – The mask of channel status to be cleared. Users need to use the defined `_edma_channel_status_flags` type.

```
void EDMA_CreateHandle(edma_handle_t *handle, EDMA_Type *base, uint32_t channel)
```

Creates the eDMA handle.

This function is called if using the transactional API for eDMA. This function initializes the internal state of the eDMA handle.

Parameters

- handle – eDMA handle pointer. The eDMA handle stores callback function and parameters.
- base – eDMA peripheral base address.
- channel – eDMA channel number.

```
void EDMA_InstallTCDMemory(edma_handle_t *handle, edma_tcd_t *tcdPool, uint32_t tcdSize)
```

Installs the TCDs memory pool into the eDMA handle.

This function is called after the `EDMA_CreateHandle` to use scatter/gather feature. This function shall only be used while users need to use scatter gather mode. Scatter gather mode enables EDMA to load a new transfer control block (tcd) in hardware, and automatically reconfigure that DMA channel for a new transfer. Users need to prepare tcd memory and also configure tcds using interface `EDMA_SubmitTransfer`.

Parameters

- handle – eDMA handle pointer.
- tcdPool – A memory pool to store TCDs. It must be 32 bytes aligned.
- tcdSize – The number of TCD slots.

```
void EDMA_SetCallback(edma_handle_t *handle, edma_callback callback, void *userData)
```

Installs a callback function for the eDMA transfer.

This callback is called in the eDMA IRQ handler. Use the callback to do something after the current major loop transfer completes. This function will be called every time one tcd finished transfer.

Parameters

- handle – eDMA handle pointer.
- callback – eDMA callback function pointer.
- userData – A parameter for the callback function.

```
void EDMA__PrepareTransferConfig(edma_transfer_config_t *config, void *srcAddr, uint32_t
    srcWidth, int16_t srcOffset, void *destAddr, uint32_t
    destWidth, int16_t destOffset, uint32_t bytesEachRequest,
    uint32_t transferBytes)
```

Prepares the eDMA transfer structure configurations.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE). User can check if 128 bytes support is available for specific instance by FSL_FEATURE_EDMA_INSTANCE_SUPPORT_128_BYTES_TRANSFERn.

Parameters

- config – The user configuration structure of type `edma_transfer_t`.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.

```
void EDMA__PrepareTransfer(edma_transfer_config_t *config, void *srcAddr, uint32_t srcWidth,
    void *destAddr, uint32_t destWidth, uint32_t bytesEachRequest,
    uint32_t transferBytes, edma_transfer_type_t type)
```

Prepares the eDMA transfer structure.

This function prepares the transfer configuration structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- config – The user configuration structure of type `edma_transfer_t`.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- type – eDMA transfer type.

```
void EDMA_PrepareTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd, void *srcAddr,
                             uint32_t srcWidth, int16_t srcOffset, void *destAddr, uint32_t
                             destWidth, int16_t destOffset, uint32_t bytesEachRequest,
                             uint32_t transferBytes, edma_tcd_t *nextTcd)
```

Prepares the eDMA transfer content descriptor.

This function prepares the transfer content descriptor structure according to the user input.

Note: The data address and the data width must be consistent. For example, if the SRC is 4 bytes, the source address must be 4 bytes aligned, or it results in source address error (SAE).

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.
- srcAddr – eDMA transfer source address.
- srcWidth – eDMA transfer source address width(bytes).
- srcOffset – source address offset.
- destAddr – eDMA transfer destination address.
- destWidth – eDMA transfer destination address width(bytes).
- destOffset – destination address offset.
- bytesEachRequest – eDMA transfer bytes per channel request.
- transferBytes – eDMA transfer bytes to be transferred.
- nextTcd – eDMA transfer linked TCD address.

```
status_t EDMA_SubmitTransferTCD(edma_handle_t *handle, edma_tcd_t *tcd)
```

Submits the eDMA transfer content descriptor.

This function submits the eDMA transfer request according to the transfer content descriptor. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Typical user case:

a. submit single transfer

```
edma_tcd_t tcd;
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

b. submit static link transfer,

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ...)
EDMA_PrepareTransferTCD(handle, &tcd[1], ...)
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

c. submit dynamic link transfer

```
edma_tcd_t tcdpool[2];
EDMA_InstallTCDMemory(&g_DMA_Handle, tcdpool, 2);
edma_tcd_t tcd;
```

(continues on next page)

(continued from previous page)

```
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_PrepareTransferTCD(handle, tcd, ...)
EDMA_SubmitTransferTCD(handle, tcd)
EDMA_StartTransfer(handle)
```

d. submit loop transfer

```
edma_tcd_t tcd[2];
EDMA_PrepareTransferTCD(handle, &tcd[0], ..., &tcd[1])
EDMA_PrepareTransferTCD(handle, &tcd[1], ..., &tcd[0])
EDMA_SubmitTransferTCD(handle, &tcd[0])
EDMA_StartTransfer(handle)
```

Parameters

- handle – eDMA handle pointer.
- tcd – Pointer to eDMA transfer content descriptor structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitTransfer(*edma_handle_t* *handle, const *edma_transfer_config_t* *config)

Submits the eDMA transfer request.

This function submits the eDMA transfer request according to the transfer configuration structure. In scatter gather mode, call this function will add a configured tcd to the circular list of tcd pool. The tcd pools is setup by call function EDMA_InstallTCDMemory before.

Parameters

- handle – eDMA handle pointer.
- config – Pointer to eDMA transfer configuration structure.

Return values

- kStatus_EDMA_Success – It means submit transfer request succeed.
- kStatus_EDMA_QueueFull – It means TCD queue is full. Submit transfer request is not allowed.
- kStatus_EDMA_Busy – It means the given channel is busy, need to submit request later.

status_t EDMA_SubmitLoopTransfer(*edma_handle_t* *handle, *edma_transfer_config_t* *transfer, *uint32_t* transferLoopCount)

Submits the eDMA scatter gather transfer configurations.

The function is target for submit loop transfer request, the ring transfer request means that the transfer request TAIL is link to HEAD, such as, A->B->C->D->A, or A->A

To use the ring transfer feature, the application should allocate several transfer object, such as

```
edma_channel_transfer_config_t transfer[2];
EDMA_TransferSubmitLoopTransfer(psHandle, &transfer, 2U);
```

Then eDMA driver will link transfer[0] and transfer[1] to each other

Note: Application should check the return value of this function to avoid transfer request submit failed

Parameters

- handle – eDMA handle pointer
- transfer – pointer to user's eDMA channel configure structure, see `edma_channel_transfer_config_t` for detail
- transferLoopCount – the count of the transfer ring, if loop count is 1, that means that the one will link to itself.

Return values

- `kStatus_Success` – It means submit transfer request succeed
- `kStatus_EDMA_Busy` – channel is in busy status
- `kStatus_InvalidArgument` – Invalid Argument

`void EDMA_StartTransfer(edma_handle_t *handle)`

eDMA starts transfer.

This function enables the channel request. Users can call this function after submitting the transfer request or before submitting the transfer request.

Parameters

- handle – eDMA handle pointer.

`void EDMA_StopTransfer(edma_handle_t *handle)`

eDMA stops transfer.

This function disables the channel request to pause the transfer. Users can call `EDMA_StartTransfer()` again to resume the transfer.

Parameters

- handle – eDMA handle pointer.

`void EDMA_AbortTransfer(edma_handle_t *handle)`

eDMA aborts transfer.

This function disables the channel request and clear transfer status bits. Users can submit another transfer after calling this API.

Parameters

- handle – DMA handle pointer.

`static inline uint32_t EDMA_GetUnusedTCDNumber(edma_handle_t *handle)`

Get unused TCD slot number.

This function gets current tcd index which is run. If the TCD pool pointer is NULL, it will return 0.

Parameters

- handle – DMA handle pointer.

Returns

The unused tcd slot number.

```
static inline uint32_t EDMA_GetNextTCDAddress(edma_handle_t *handle)
```

Get the next tcd address.

This function gets the next tcd address. If this is last TCD, return 0.

Parameters

- *handle* – DMA handle pointer.

Returns

The next TCD address.

```
void EDMA_HandleIRQ(edma_handle_t *handle)
```

eDMA IRQ handler for the current major loop transfer completion.

This function clears the channel major interrupt flag and calls the callback function if it is not NULL.

Note: For the case using TCD queue, when the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled).

For instance, when the time interrupt of TCD[0] happens, the TCD[1] has already been loaded into the eDMA engine. As *sga* and *sga_index* are calculated based on the *DLAST_SGA* bitfield lies in the *TCD_CSR* register, the *sga_index* in this case should be 2 (*DLAST_SGA* of TCD[1] stores the address of TCD[2]). Thus, the “*tcdUsed*” updated should be (*tcdUsed* - 2U) which indicates the number of TCDs can be loaded in the memory pool (because TCD[0] and TCD[1] have been loaded into the eDMA engine at this point already.).

For the last two continuous ISRs in a scatter/gather process, they both load the last TCD (The last ISR does not load a new TCD) from the memory pool to the eDMA engine when major loop completes. Therefore, ensure that the header and *tcdUsed* updated are identical for them. *tcdUsed* are both 0 in this case as no TCD to be loaded.

See the “eDMA basic data flow” in the eDMA Functional description section of the Reference Manual for further details.

Parameters

- *handle* – eDMA handle pointer.

```
FSL_EDMA_DRIVER_VERSION
```

eDMA driver version

Version 2.10.6.

```
_edma_transfer_status eDMA transfer status
```

Values:

```
enumerator kStatus_EDMA_QueueFull
```

TCD queue is full.

```
enumerator kStatus_EDMA_Busy
```

Channel is busy and can't handle the transfer request.

```
enum _edma_transfer_size
```

eDMA transfer configuration

Values:

```
enumerator kEDMA_TransferSize1Bytes
```

Source/Destination data transfer size is 1 byte every time

enumerator kEDMA_TransferSize2Bytes

Source/Destination data transfer size is 2 bytes every time

enumerator kEDMA_TransferSize4Bytes

Source/Destination data transfer size is 4 bytes every time

enumerator kEDMA_TransferSize8Bytes

Source/Destination data transfer size is 8 bytes every time

enumerator kEDMA_TransferSize16Bytes

Source/Destination data transfer size is 16 bytes every time

enumerator kEDMA_TransferSize32Bytes

Source/Destination data transfer size is 32 bytes every time

enumerator kEDMA_TransferSize64Bytes

Source/Destination data transfer size is 64 bytes every time

enumerator kEDMA_TransferSize128Bytes

Source/Destination data transfer size is 128 bytes every time

enum _edma_modulo

eDMA modulo configuration

Values:

enumerator kEDMA_ModuloDisable

Disable modulo

enumerator kEDMA_Modulo2bytes

Circular buffer size is 2 bytes.

enumerator kEDMA_Modulo4bytes

Circular buffer size is 4 bytes.

enumerator kEDMA_Modulo8bytes

Circular buffer size is 8 bytes.

enumerator kEDMA_Modulo16bytes

Circular buffer size is 16 bytes.

enumerator kEDMA_Modulo32bytes

Circular buffer size is 32 bytes.

enumerator kEDMA_Modulo64bytes

Circular buffer size is 64 bytes.

enumerator kEDMA_Modulo128bytes

Circular buffer size is 128 bytes.

enumerator kEDMA_Modulo256bytes

Circular buffer size is 256 bytes.

enumerator kEDMA_Modulo512bytes

Circular buffer size is 512 bytes.

enumerator kEDMA_Modulo1Kbytes

Circular buffer size is 1 K bytes.

enumerator kEDMA_Modulo2Kbytes

Circular buffer size is 2 K bytes.

enumerator kEDMA_Modulo4Kbytes
Circular buffer size is 4 K bytes.

enumerator kEDMA_Modulo8Kbytes
Circular buffer size is 8 K bytes.

enumerator kEDMA_Modulo16Kbytes
Circular buffer size is 16 K bytes.

enumerator kEDMA_Modulo32Kbytes
Circular buffer size is 32 K bytes.

enumerator kEDMA_Modulo64Kbytes
Circular buffer size is 64 K bytes.

enumerator kEDMA_Modulo128Kbytes
Circular buffer size is 128 K bytes.

enumerator kEDMA_Modulo256Kbytes
Circular buffer size is 256 K bytes.

enumerator kEDMA_Modulo512Kbytes
Circular buffer size is 512 K bytes.

enumerator kEDMA_Modulo1Mbytes
Circular buffer size is 1 M bytes.

enumerator kEDMA_Modulo2Mbytes
Circular buffer size is 2 M bytes.

enumerator kEDMA_Modulo4Mbytes
Circular buffer size is 4 M bytes.

enumerator kEDMA_Modulo8Mbytes
Circular buffer size is 8 M bytes.

enumerator kEDMA_Modulo16Mbytes
Circular buffer size is 16 M bytes.

enumerator kEDMA_Modulo32Mbytes
Circular buffer size is 32 M bytes.

enumerator kEDMA_Modulo64Mbytes
Circular buffer size is 64 M bytes.

enumerator kEDMA_Modulo128Mbytes
Circular buffer size is 128 M bytes.

enumerator kEDMA_Modulo256Mbytes
Circular buffer size is 256 M bytes.

enumerator kEDMA_Modulo512Mbytes
Circular buffer size is 512 M bytes.

enumerator kEDMA_Modulo1Gbytes
Circular buffer size is 1 G bytes.

enumerator kEDMA_Modulo2Gbytes
Circular buffer size is 2 G bytes.

enum _edma_bandwidth
Bandwidth control.

Values:

enumerator kEDMA_BandwidthStallNone

No eDMA engine stalls.

enumerator kEDMA_BandwidthStall4Cycle

eDMA engine stalls for 4 cycles after each read/write.

enumerator kEDMA_BandwidthStall8Cycle

eDMA engine stalls for 8 cycles after each read/write.

enum _edma_channel_link_type

Channel link type.

Values:

enumerator kEDMA_LinkNone

No channel link

enumerator kEDMA_MinorLink

Channel link after each minor loop

enumerator kEDMA_MajorLink

Channel link while major loop count exhausted

_edma_channel_status_flags eDMA channel status flags.

Values:

enumerator kEDMA_DoneFlag

DONE flag, set while transfer finished, CITER value exhausted

enumerator kEDMA_ErrorFlag

eDMA error flag, an error occurred in a transfer

enumerator kEDMA_InterruptFlag

eDMA interrupt flag, set while an interrupt occurred of this channel

_edma_error_status_flags eDMA channel error status flags.

Values:

enumerator kEDMA_DestinationBusErrorFlag

Bus error on destination address

enumerator kEDMA_SourceBusErrorFlag

Bus error on the source address

enumerator kEDMA_ScatterGatherErrorFlag

Error on the Scatter/Gather address, not 32byte aligned.

enumerator kEDMA_NbytesErrorFlag

NBYTES/CITER configuration error

enumerator kEDMA_DestinationOffsetErrorFlag

Destination offset not aligned with destination size

enumerator kEDMA_DestinationAddressErrorFlag

Destination address not aligned with destination size

enumerator kEDMA_SourceOffsetErrorFlag

Source offset not aligned with source size

enumerator kEDMA_SourceAddressErrorFlag

Source address not aligned with source size

enumerator kEDMA_ErrorChannelFlag

Error channel number of the cancelled channel number

enumerator kEDMA_TransferCanceledFlag

Transfer cancelled

enumerator kEDMA_ValidFlag

No error occurred, this bit is 0. Otherwise, it is 1.

_edma_interrupt_enable eDMA interrupt source

Values:

enumerator kEDMA_ErrorInterruptEnable

Enable interrupt while channel error occurs.

enumerator kEDMA_MajorInterruptEnable

Enable interrupt while major count exhausted.

enumerator kEDMA_HalfInterruptEnable

Enable interrupt while major count to half value.

enum _edma_transfer_type

eDMA transfer type

Values:

enumerator kEDMA_MemoryToMemory

Transfer from memory to memory

enumerator kEDMA_PeripheralToMemory

Transfer from peripheral to memory

enumerator kEDMA_MemoryToPeripheral

Transfer from memory to peripheral

enumerator kEDMA_PeripheralToPeripheral

Transfer from Peripheral to peripheral

enum edma_channel_memory_attribute

eDMA channel memory attribute

Values:

enumerator kEDMA_ChannelNoWriteNoReadNoCacheNoBuffer

No write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadNoCacheBufferable

No write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableNoBuffer

No write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteNoReadCacheableBufferable

No write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheNoBuffer

No write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadNoCacheBufferable
No write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableNoBuffer
No write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelNoWriteReadCacheableBufferable
No write allocate, read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheNoBuffer
write allocate, no read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadNoCacheBufferable
write allocate, no read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableNoBuffer
write allocate, no read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteNoReadCacheableBufferable
write allocate, no read allocate, cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheNoBuffer
write allocate, read allocate, non-cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadNoCacheBufferable
write allocate, read allocate, non-cacheable, bufferable.

enumerator kEDMA_ChannelWriteReadCacheableNoBuffer
write allocate, read allocate, cacheable, non-bufferable.

enumerator kEDMA_ChannelWriteReadCacheableBufferable
write allocate, read allocate, cacheable, bufferable.

enum _edma_channel_swap_size
eDMA4 channel swap size

Values:

enumerator kEDMA_ChannelSwapDisabled
Swap is disabled.

enumerator kEDMA_ChannelReadWith8bitSwap
Swap occurs with respect to the read 8bit.

enumerator kEDMA_ChannelReadWith16bitSwap
Swap occurs with respect to the read 16bit.

enumerator kEDMA_ChannelReadWith32bitSwap
Swap occurs with respect to the read 32bit.

enumerator kEDMA_ChannelWriteWith8bitSwap
Swap occurs with respect to the write 8bit.

enumerator kEDMA_ChannelWriteWith16bitSwap
Swap occurs with respect to the write 16bit.

enumerator kEDMA_ChannelWriteWith32bitSwap
Swap occurs with respect to the write 32bit.

eDMA channel system bus information, _edma_channel_sys_bus_info

Values:

enumerator `kEDMA_PrivilegedAccessLevel`
Privileged Access Level for DMA transfers. 0b - User protection level; 1b - Privileged protection level.

enumerator `kEDMA_MasterId`
DMA's master ID when channel is active and master ID replication is enabled.

enum `_edma_channel_access_type`
eDMA4 channel access type

Values:

enumerator `kEDMA_ChannelDataAccess`
Data access for eDMA4 transfers.

enumerator `kEDMA_ChannelInstructionAccess`
Instruction access for eDMA4 transfers.

enum `_edma_channel_protection_level`
eDMA4 channel protection level

Values:

enumerator `kEDMA_ChannelProtectionLevelUser`
user protection level for eDMA transfers.

enumerator `kEDMA_ChannelProtectionLevelPrivileged`
Privileged protection level eDMA transfers.

typedef enum `_edma_transfer_size` `edma_transfer_size_t`
eDMA transfer configuration

typedef enum `_edma_modulo` `edma_modulo_t`
eDMA modulo configuration

typedef enum `_edma_bandwidth` `edma_bandwidth_t`
Bandwidth control.

typedef enum `_edma_channel_link_type` `edma_channel_link_type_t`
Channel link type.

typedef enum `_edma_transfer_type` `edma_transfer_type_t`
eDMA transfer type

typedef struct `_edma_channel_Preemption_config` `edma_channel_Preemption_config_t`
eDMA channel priority configuration

typedef struct `_edma_minor_offset_config` `edma_minor_offset_config_t`
eDMA minor offset configuration

typedef enum `edma_channel_memory_attribute` `edma_channel_memory_attribute_t`
eDMA channel memory attribute

typedef enum `_edma_channel_swap_size` `edma_channel_swap_size_t`
eDMA4 channel swap size

typedef enum `_edma_channel_access_type` `edma_channel_access_type_t`
eDMA4 channel access type

typedef enum `_edma_channel_protection_level` `edma_channel_protection_level_t`
eDMA4 channel protection level

typedef struct `_edma_channel_config` `edma_channel_config_t`
eDMA4 channel configuration

```
typedef edma_core_tcd_t edma_tcd_t  
    eDMA TCD.
```

This structure is same as TCD register which is described in reference manual, and is used to configure the scatter/gather feature as a next hardware TCD.

```
typedef struct _edma_transfer_config edma_transfer_config_t  
    edma4 channel transfer configuration
```

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
 - b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
 - c. the totalBytes should align with the bytesEachRequest
 - d. the srcAddr should align with the srcWidthOfEachTransfer
 - e. the dstAddr should align with the dstWidthOfEachTransfer
 - f. the srcAddr should align with srcAddrModulo if modulo feature is enabled
 - g. the dstAddr should align with dstAddrModulo if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.
-

```
typedef struct _edma_config edma_config_t  
    eDMA global configuration structure.
```

```
typedef void (*edma_callback)(struct _edma_handle *handle, void *userData, bool transferDone,  
uint32_t tcDs)
```

Define callback function for eDMA.

This callback function is called in the EDMA interrupt handle. In normal mode, run into callback function means the transfer users need is done. In scatter gather mode, run into callback function means a transfer control block (tcd) is finished. Not all transfer finished, users can get the finished tcd numbers using interface EDMA_GetUnusedTCDNumber.

Param handle

EDMA handle pointer, users shall not touch the values inside.

Param userData

The callback user parameter pointer. Users can use this parameter to involve things users need to change in EDMA callback function.

Param transferDone

If the current loaded transfer done. In normal mode it means if all transfer done. In scatter gather mode, this parameter shows is the current transfer block in EDMA register is done. As the load of core is different, it will be different if the new tcd loaded into EDMA registers while this callback called. If true, it always means new tcd still not loaded into registers, while false means new tcd already loaded into registers.

Param tcDs

How many tcDs are done from the last callback. This parameter only used in scatter gather mode. It tells user how many tcDs are finished between the last callback and this.

```
typedef struct _edma_handle edma_handle_t
    eDMA transfer handle structure
```

```
FSL_EDMA_DRIVER_EDMA4
    eDMA driver name
```

```
EDMA_ALLOCATE_TCD(name, number)
    Macro used for allocate edma TCD.
```

```
DMA_DCHPRI_INDEX(channel)
    Compute the offset unit from DCHPRI3.
```

```
struct _edma_channel_Preemption_config
    #include <fsl_edma.h> eDMA channel priority configuration
```

Public Members

```
bool enableChannelPreemption
```

If true: a channel can be suspended by other channel with higher priority

```
bool enablePreemptAbility
```

If true: a channel can suspend other channel with low priority

```
uint8_t channelPriority
```

Channel priority

```
struct _edma_minor_offset_config
```

```
#include <fsl_edma.h> eDMA minor offset configuration
```

Public Members

```
bool enableSrcMinorOffset
```

Enable(true) or Disable(false) source minor loop offset.

```
bool enableDestMinorOffset
```

Enable(true) or Disable(false) destination minor loop offset.

```
uint32_t minorOffset
```

Offset for a minor loop mapping.

```
struct _edma_channel_config
```

```
#include <fsl_edma.h> eDMA4 channel configuration
```

Public Members

edma_channel_Preemption_config_t channelPreemptionConfig
channel preemption configuration

edma_channel_memory_attribute_t channelReadMemoryAttribute
channel memory read attribute configuration

edma_channel_memory_attribute_t channelWriteMemoryAttribute
channel memory write attribute configuration

edma_channel_swap_size_t channelSwapSize
channel swap size configuration

edma_channel_access_type_t channelAccessType
channel access type configuration

uint8_t channelDataSignExtensionBitPosition
channel data sign extension bit position configuration

uint32_t channelRequestSource
hardware service request source for the channel

bool enableMasterIDReplication
enable master ID replication

edma_channel_protection_level_t protectionLevel
protection level

struct *_edma_transfer_config*

#include <fsl_edma.h> edma4 channel transfer configuration

The transfer configuration structure support full feature configuration of the transfer control descriptor.

1.To perform a simple transfer, below members should be initialized at least .srcAddr - source address .dstAddr - destination address .srcWidthOfEachTransfer - data width of source address .dstWidthOfEachTransfer - data width of destination address, normally it should be as same as srcWidthOfEachTransfer .bytesEachRequest - bytes to be transferred in each DMA request .totalBytes - total bytes to be transferred .srcOffsetOfEachTransfer - offset value in bytes unit to be applied to source address as each source read is completed .dstOffsetOfEachTransfer - offset value in bytes unit to be applied to destination address as each destination write is completed enablchannelRequest - channel request can be enabled together with transfer configure submission

2.The transfer configuration structure also support advance feature: Programmable source/destination address range(MODULO) Programmable minor loop offset Programmable major loop offset Programmable channel chain feature Programmable channel transfer control descriptor link feature

Note: User should pay attention to the transfer size alignment limitation

- a. the bytesEachRequest should align with the srcWidthOfEachTransfer and the dstWidthOfEachTransfer that is to say bytesEachRequest % srcWidthOfEachTransfer should be 0
- b. the srcOffsetOfEachTransfer and dstOffsetOfEachTransfer must be aligne with transfer width
- c. the totalBytes should align with the bytesEachRequest
- d. the srcAddr should align with the srcWidthOfEachTransfer

- e. the `dstAddr` should align with the `dstWidthOfEachTransfer`
- f. the `srcAddr` should align with `srcAddrModulo` if modulo feature is enabled
- g. the `dstAddr` should align with `dstAddrModulo` if modulo feature is enabled If anyone of above condition can not be satisfied, the edma4 interfaces will generate assert error.

Public Members

`uint32_t srcAddr`

Source data address.

`uint32_t destAddr`

Destination data address.

`edma_transfer_size_t srcTransferSize`

Source data transfer size.

`edma_transfer_size_t destTransferSize`

Destination data transfer size.

`int16_t srcOffset`

Sign-extended offset value in byte unit applied to the current source address to form the next-state value as each source read is completed

`int16_t destOffset`

Sign-extended offset value in byte unit applied to the current destination address to form the next-state value as each destination write is completed.

`uint32_t minorLoopBytes`

bytes in each minor loop or each request range: $1 - (2^{30} - 1)$ when minor loop mapping is enabled range: $1 - (2^{10} - 1)$ when minor loop mapping is enabled and source or dest minor loop offset is enabled range: $1 - (2^{32} - 1)$ when minor loop mapping is disabled

`uint32_t majorLoopCounts`

minor loop counts in each major loop, should be 1 at least for each transfer range: $(0 - (2^{15} - 1))$ when minor loop channel link is disabled range: $(0 - (2^9 - 1))$ when minor loop channel link is enabled total bytes in a transfer = `minorLoopCountsEachMajorLoop * bytesEachMinorLoop`

`uint16_t enabledInterruptMask`

channel interrupt to enable, can be OR'ed value of `_edma_interrupt_enable`

`edma_modulo_t srcAddrModulo`

source circular data queue range

`int32_t srcMajorLoopOffset`

source major loop offset

`edma_modulo_t dstAddrModulo`

destination circular data queue range

`int32_t dstMajorLoopOffset`

destination major loop offset

`bool enableSrcMinorLoopOffset`

enable source minor loop offset

`bool enableDstMinorLoopOffset`

enable dest minor loop offset

`int32_t` minorLoopOffset
burst offset, the offset will be applied after minor loop update

`bool` enableChannelMajorLoopLink
channel link when major loop complete

`uint32_t` majorLoopLinkChannel
major loop link channel number

`bool` enableChannelMinorLoopLink
channel link when minor loop complete

`uint32_t` minorLoopLinkChannel
minor loop link channel number

`edma_tcd_t` *linkTCD
pointer to the link transfer control descriptor

`struct` _edma_config
#include <fsl_edma.h> eDMA global configuration structure.

Public Members

`bool` enableMasterIdReplication
Enable (true) master ID replication. If Master ID replication is disabled, the privileged protection level (supervisor mode) for eDMA4 transfers is used.

`bool` enableGlobalChannelLink
Enable(true) channel linking is available and controlled by each channel's link settings.

`bool` enableHaltOnError
Enable (true) transfer halt on error. Any error causes the HALT bit to set. Subsequently, all service requests are ignored until the HALT bit is cleared.

`bool` enableDebugMode
Enable(true) eDMA4 debug mode. When in debug mode, the eDMA4 stalls the start of a new channel. Executing channels are allowed to complete.

`bool` enableRoundRobinArbitration
Enable(true) channel linking is available and controlled by each channel's link settings.

`edma_channel_config_t` *channelConfig[1]
channel preemption configuration

`struct` _edma_handle
#include <fsl_edma.h> eDMA transfer handle structure

Public Members

`edma_callback` callback
Callback function for major count exhausted.

`void` *userData
Callback function parameter.

`EDMA_ChannelType` *channelBase
eDMA peripheral channel base address.

`EDMA_Type` *base
eDMA peripheral base address

EDMA_TCDType *tcdBase
eDMA peripheral tcd base address.

edma_tcd_t *tcdPool
Pointer to memory stored TCDs.

uint32_t channel
eDMA channel number.

volatile int8_t header
The first TCD index. Should point to the next TCD to be loaded into the eDMA engine.

volatile int8_t tail
The last TCD index. Should point to the next TCD to be stored into the memory pool.

volatile int8_t tcdUsed
The number of used TCD slots. Should reflect the number of TCDs can be used/loaded in the memory.

volatile int8_t tcdSize
The total number of TCD slots in the queue.

2.8 eDMA core Driver

enum _edma_tcd_type
eDMA tcd flag type

Values:

enumerator kEDMA_EDMA4Flag
Data access for eDMA4 transfers.

enumerator kEDMA_EDMA5Flag
Instruction access for eDMA4 transfers.

typedef struct *_edma_core_mp* edma_core_mp_t
edma core channel structure definition

typedef struct *_edma_core_channel* edma_core_channel_t
edma core channel structure definition

typedef enum *_edma_tcd_type* edma_tcd_type_t
eDMA tcd flag type

typedef struct *_edma5_core_tcd* edma5_core_tcd_t
edma5 core TCD structure definition

typedef struct *_edma4_core_tcd* edma4_core_tcd_t
edma4 core TCD structure definition

typedef struct *_edma_core_tcd* edma_core_tcd_t
edma core TCD structure definition

typedef *edma_core_channel_t* EDMA_ChannelType
EDMA typedef.

typedef *edma_core_tcd_t* EDMA_TCDType

typedef void EDMA_Type

DMA_CORE_MP_CSR_EDBG_MASK
DMA_CORE_MP_CSR_ERCA_MASK
DMA_CORE_MP_CSR_HAE_MASK
DMA_CORE_MP_CSR_HALT_MASK
DMA_CORE_MP_CSR_GCLC_MASK
DMA_CORE_MP_CSR_GMRC_MASK
DMA_CORE_MP_CSR_EDBG(x)
DMA_CORE_MP_CSR_ERCA(x)
DMA_CORE_MP_CSR_HAE(x)
DMA_CORE_MP_CSR_HALT(x)
DMA_CORE_MP_CSR_GCLC(x)
DMA_CORE_MP_CSR_GMRC(x)
DMA_CSR_INTMAJOR_MASK
DMA_CSR_INTHALF_MASK
DMA_CSR_DREQ_MASK
DMA_CSR_ESG_MASK
DMA_CSR_BWC_MASK
DMA_CSR_BWC(x)
DMA_CSR_START_MASK
DMA_CITER_ELINKNO_CITER_MASK
DMA_BITER_ELINKNO_BITER_MASK
DMA_CITER_ELINKNO_CITER_SHIFT
DMA_CITER_ELINKYES_CITER_MASK
DMA_CITER_ELINKYES_CITER_SHIFT
DMA_ATTR_SMOD_MASK
DMA_ATTR_DMOD_MASK
DMA_CITER_ELINKNO_ELINK_MASK
DMA_CSR_MAJORELINK_MASK
DMA_BITER_ELINKYES_ELINK_MASK
DMA_CITER_ELINKYES_ELINK_MASK
DMA_CSR_MAJORLINKCH_MASK
DMA_BITER_ELINKYES_LINKCH_MASK
DMA_CITER_ELINKYES_LINKCH_MASK

DMA_NBYTES_MLOFFYES_MLOFF_MASK
DMA_NBYTES_MLOFFYES_DMLOE_MASK
DMA_NBYTES_MLOFFYES_SMLOE_MASK
DMA_NBYTES_MLOFFNO_NBYTES_MASK
DMA_ATTR_DMOD(x)
DMA_ATTR_SMOD(x)
DMA_BITER_ELINKYES_LINKCH(x)
DMA_CITER_ELINKYES_LINKCH(x)
DMA_NBYTES_MLOFFYES_MLOFF(x)
DMA_NBYTES_MLOFFYES_DMLOE(x)
DMA_NBYTES_MLOFFYES_SMLOE(x)
DMA_NBYTES_MLOFFNO_NBYTES(x)
DMA_NBYTES_MLOFFYES_NBYTES(x)
DMA_ATTR_DSIZE(x)
DMA_ATTR_SSIZE(x)
DMA_CSR_DREQ(x)
DMA_CSR_MAJORLINKCH(x)
DMA_CH_MATTR_WCACHE(x)
DMA_CH_MATTR_RCACHE(x)
DMA_CH_CSR_SIGNEXT_MASK
DMA_CH_CSR_SIGNEXT_SHIFT
DMA_CH_CSR_SWAP_MASK
DMA_CH_CSR_SWAP_SHIFT
DMA_CH_SBR_INSTR_MASK
DMA_CH_SBR_INSTR_SHIFT
DMA_CH_MUX_SOURCE(x)
DMA_ERR_DBE_FLAG
 DMA error flag.
DMA_ERR_SBE_FLAG
DMA_ERR_SGE_FLAG
DMA_ERR_NCE_FLAG
DMA_ERR_DOE_FLAG
DMA_ERR_DAE_FLAG

DMA_ERR_SOE_FLAG
DMA_ERR_SAE_FLAG
DMA_ERR_ERRCHAN_FLAG
DMA_ERR_ECX_FLAG
DMA_ERR_FLAG
DMA_CLEAR_DONE_STATUS(base, channel)
 get/clear DONE bit
DMA_GET_DONE_STATUS(base, channel)
DMA_ENABLE_ERROR_INT(base, channel)
 enable/disable error interrupt
DMA_DISABLE_ERROR_INT(base, channel)
DMA_CLEAR_ERROR_STATUS(base, channel)
 get/clear error status
DMA_GET_ERROR_STATUS(base, channel)
DMA_CLEAR_INT_STATUS(base, channel)
 get/clear INT status
DMA_GET_INT_STATUS(base, channel)
DMA_ENABLE_MAJOR_INT(base, channel)
 enable/disable MAJOR/HALF INT
DMA_ENABLE_HALF_INT(base, channel)
DMA_DISABLE_MAJOR_INT(base, channel)
DMA_DISABLE_HALF_INT(base, channel)
EDMA_TCD_ALIGN_SIZE
 EDMA tcd align size.
EDMA_CORE_BASE(base)
 EDMA base address convert macro.
EDMA_MP_BASE(base)
EDMA_CHANNEL_BASE(base, channel)
EDMA_TCD_BASE(base, channel)
EDMA_TCD_TYPE(x)
 EDMA TCD type macro.
EDMA_TCD_SADDR(tcd, flag)
 EDMA TCD address convert macro.
EDMA_TCD_SOFF(tcd, flag)
EDMA_TCD_ATTR(tcd, flag)
EDMA_TCD_NBYTES(tcd, flag)
EDMA_TCD_SLAST(tcd, flag)

EDMA_TCD_DADDR(tcd, flag)

EDMA_TCD_DOFF(tcd, flag)

EDMA_TCD_CITER(tcd, flag)

EDMA_TCD_DLAST_SGA(tcd, flag)

EDMA_TCD_CSR(tcd, flag)

EDMA_TCD_BITER(tcd, flag)

struct _edma_core_mp

#include <fsl_edma_core.h> edma core channel structure definition

Public Members

__IO uint32_t MP_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t MP_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

struct _edma_core_channel

#include <fsl_edma_core.h> edma core channel structure definition

Public Members

__IO uint32_t CH_CSR

Channel Control and Status, array offset: 0x10000, array step: 0x10000

__IO uint32_t CH_ES

Channel Error Status, array offset: 0x10004, array step: 0x10000

__IO uint32_t CH_INT

Channel Interrupt Status, array offset: 0x10008, array step: 0x10000

__IO uint32_t CH_SBR

Channel System Bus, array offset: 0x1000C, array step: 0x10000

__IO uint32_t CH_PRI

Channel Priority, array offset: 0x10010, array step: 0x10000

struct _edma5_core_tcd

#include <fsl_edma_core.h> edma5 core TCD structure definition

Public Members

__IO uint32_t SADDR

SADDR register, used to save source address

__IO uint32_t SADDR_HIGH

SADDR HIGH register, used to save source address

__IO uint16_t SOFF

SOFF register, save offset bytes every transfer

__IO uint16_t ATTR

ATTR register, source/destination transfer size and modulo

__IO uint32_t NBYTES
Nbytes register, minor loop length in bytes

__IO uint32_t SLAST
SLAST register

__IO uint32_t SLAST_SDA_HIGH
SLAST SDA HIGH register

__IO uint32_t DADDR
DADDR register, used for destination address

__IO uint32_t DADDR_HIGH
DADDR HIGH register, used for destination address

__IO uint32_t DLAST_SGA
DLASTSGA register, next tcd address used in scatter-gather mode

__IO uint32_t DLAST_SGA_HIGH
DLASTSGA HIGH register, next tcd address used in scatter-gather mode

__IO uint16_t DOFF
DOFF register, used for destination offset

__IO uint16_t CITER
CITER register, current minor loop numbers, for unfinished minor loop.

__IO uint16_t CSR
CSR register, for TCD control status

__IO uint16_t BITER
BITER register, begin minor loop count.

uint8_t RESERVED[16]
Aligned 64 bytes

struct _edma4_core_tcd
#include <fsl_edma_core.h> edma4 core TCD struture definition

Public Members

__IO uint32_t SADDR
SADDR register, used to save source address

__IO uint16_t SOFF
SOFF register, save offset bytes every transfer

__IO uint16_t ATTR
ATTR register, source/destination transfer size and modulo

__IO uint32_t NBYTES
Nbytes register, minor loop length in bytes

__IO uint32_t SLAST
SLAST register

__IO uint32_t DADDR
DADDR register, used for destination address

__IO uint16_t DOFF
DOFF register, used for destination offset


```

__IO uint16_t CITER
    CITER register, current minor loop numbers, for unfinished minor loop.
__IO uint32_t DLAST_SGA
    DLASTSGA register, next tcd address used in scatter-gather mode
__IO uint16_t CSR
    CSR register, for TCD control status
__IO uint16_t BITER
    BITER register, begin minor loop count.

```

```

struct _edma_core_tcd
    #include <fsl_edma_core.h> edma core TCD struture definition
union MP_REGS

```

Public Members

```

struct _edma_core_mp EDMA5_REG
struct EDMA5_REG

```

Public Members

```

__IO uint32_t MP_INT_LOW
    Channel Control and Status, array offset: 0x10008, array step: 0x10000
__I uint32_t MP_INT_HIGH
    Channel Control and Status, array offset: 0x1000C, array step: 0x10000
__I uint32_t MP_HRS_LOW
    Channel Control and Status, array offset: 0x10010, array step: 0x10000
__I uint32_t MP_HRS_HIGH
    Channel Control and Status, array offset: 0x10014, array step: 0x10000
__IO uint32_t MP_STOPCH
    Channel Control and Status, array offset: 0x10020, array step: 0x10000
__I uint32_t MP_SSR_LOW
    Channel Control and Status, array offset: 0x10030, array step: 0x10000
__I uint32_t MP_SSR_HIGH
    Channel Control and Status, array offset: 0x10034, array step: 0x10000
__IO uint32_t CH_GRPRI [64]
    Channel Control and Status, array offset: 0x10100, array step: 0x10000
__IO uint32_t CH_MUX [64]
    Channel Control and Status, array offset: 0x10200, array step: 0x10000
__IO uint32_t CH_PROT [64]
    Channel Control and Status, array offset: 0x10400, array step: 0x10000
union CH_REGS

```

Public Members

struct *_edma_core_channel* EDMA5_REG

struct *_edma_core_channel* EDMA4_REG

struct EDMA5_REG

Public Members

__IO uint32_t CH_MATTR

Memory Attributes Register, array offset: 0x10018, array step: 0x8000

struct EDMA4_REG

Public Members

__IO uint32_t CH_MUX

Channel Multiplexor Configuration, array offset: 0x10014, array step: 0x10000

__IO uint16_t CH_MATTR

Memory Attributes Register, array offset: 0x10018, array step: 0x8000

union TCD_REGS

Public Members

edma4_core_tcd_t edma4_tcd

2.9 eDMA soc Driver

FSL_EDMA_SOC_DRIVER_VERSION

Driver version 2.0.0.

FSL_EDMA_SOC_IP_DMA3

DMA IP version.

FSL_EDMA_SOC_IP_DMA4

EDMA_BASE_PTRS

DMA base table.

EDMA_CHN_IRQS

EDMA_CHANNEL_OFFSET

EDMA base address convert macro.

EDMA_CHANNEL_ARRAY_STEP(base)

2.10 EIM: error injection module

FSL_ERM_DRIVER_VERSION

Driver version.

`void EIM_Init(EIM_Type *base)`
EIM module initialization function.

Parameters

- base – EIM base address.

`void EIM_Deinit(EIM_Type *base)`
De-initializes the EIM.

2.11 EQDC: Enhanced Quadrature Encoder/Decoder

`void EQDC_Init(EQDC_Type *base, const eqdc_config_t *psConfig)`
Initializes the EQDC module.

This function initializes the EQDC by enabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.
- psConfig – Pointer to configuration structure.

`void EQDC_GetDefaultConfig(eqdc_config_t *psConfig)`
Gets an available pre-defined configuration.

The default value are:

```
psConfig->enableReverseDirection      = false;
psConfig->countOnce                   = false;
psConfig->operateMode                 = kEQDC_QuadratureDecodeOperationMode;
psConfig->countMode                   = kEQDC_QuadratureX4;
psConfig->homeEnableInitPosCounterMode = kEQDC_HomeInitPosCounterDisabled;
psConfig->indexPresetInitPosCounterMode = kEQDC_IndexInitPosCounterDisabled;
psConfig->enableIndexInitPositionCounter = false;
psConfig->enableDma                   = false;
psConfig->bufferedRegisterLoadMode    = false;
psConfig->enableTriggerInitPositionCounter = false;
psConfig->enableTriggerClearPositionRegisters = false;
psConfig->enableTriggerHoldPositionRegisters = false;
psConfig->enableWatchdog              = false;
psConfig->watchdogTimeoutValue        = 0xFFFFU;
psConfig->filterPhaseA                = 0U;
psConfig->filterPhaseB                = 0U;
psConfig->filterIndPre                 = 0U;
psConfig->filterHomEna                = 0U;
psConfig->filterClockSourceSelection  = false;
psConfig->filterSampleCount           = kEQDC_Filter3Samples;
psConfig->filterSamplePeriod          = 0U;
psConfig->outputPulseMode              = kEQDC_OutputPulseOnCounterEqualCompare;
psConfig->positionCompareValue[0]     = 0xFFFFFFFFFU;
psConfig->positionCompareValue[1]     = 0xFFFFFFFFFU;
psConfig->positionCompareValue[2]     = 0xFFFFFFFFFU;
psConfig->positionCompareValue[3]     = 0xFFFFFFFFFU;
psConfig->revolutionCountCondition    = kEQDC_RevolutionCountOnIndexPulse;
psConfig->positionModulusValue        = 0U;
psConfig->positionInitialValue        = 0U;
psConfig->positionCounterValue        = 0U;
psConfig->enablePeriodMeasurement     = false;
psConfig->prescaler                   = kEQDC_Prescaler1;
psConfig->enabledInterruptsMask       = 0U;
```

Parameters

- psConfig – Pointer to configuration structure.

void EQDC_Deinit(EQDC_Type *base)

De-initializes the EQDC module.

This function deinitializes the EQDC by disabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.

void EQDC_SetOperateMode(EQDC_Type *base, *eqdc_operate_mode_t* operateMode)

Initializes the mode of operation.

This function initializes mode of operation by enabling the IP bus clock (optional).

Parameters

- base – EQDC peripheral base address.
- operateMode – Select operation mode.

static inline void EQDC_SetCountMode(EQDC_Type *base, *eqdc_count_mode_t* countMode)

Initializes the mode of count.

These bits control the basic counting and behavior of Position Counter and Position Difference Counter. Setting CTRL[REV] to 1 can reverse the counting direction. 1.In quadrature Mode (CTRL[PH1] = 0): 00b - CM0: Normal/Reverse Quadrature X4 01b - CM1: Normal/Reverse Quadrature X2 10b - CM2: Normal/Reverse Quadrature X1 11b - CM3: Reserved 2.In Single Phase Mode (CTRL[PH1] = 1): 00b - CM0: UP/DOWN Pulse Count Mode 01b - CM1: Signed Mode, count PHASEA rising/falling edge, position counter counts up when PHASEB is low and counts down when PHASEB is high 10b - CM2: Signed Count Mode, count PHASEA rising edge only, position counter counts up when PHASEB is low and counts down when PHASEB is high 11b - CM3: Reserved

Parameters

- base – EQDC peripheral base address.
- countMode – Select count mode.

static inline void EQDC_EnableWatchdog(EQDC_Type *base, bool bEnable)

Enable watchdog for EQDC module.

Parameters

- base – EQDC peripheral base address
- bEnable – Enables or disables the watchdog

static inline void EQDC_SetWatchdogTimeout(EQDC_Type *base, uint16_t u16Timeout)

Set watchdog timeout value.

Parameters

- base – EQDC peripheral base address
- u16Timeout – Number of clock cycles, plus one clock cycle that the watchdog timer counts before timing out

static inline void EQDC_EnableDMA(EQDC_Type *base, bool bEnable)

Enable DMA for EQDC module.

Parameters

- base – EQDC peripheral base address
- bEnable – Enables or disables the DMA

```
static inline void EQDC_SetBufferedRegisterLoadUpdateMode(EQDC_Type *base)
```

Set Buffered Register Load (Update) Mode.

This bit selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UNIT/LINIT), and modulus register (UMOD/LMOD). Buffered registers are loaded and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

```
static inline void EQDC_ClearBufferedRegisterLoadUpdateMode(EQDC_Type *base)
```

Clear Buffered Register Load (Update) Mode.

Buffered Register Load (Update) Mode bit selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UNIT/LINIT), and modulus register (UMOD/LMOD). Buffered registers are loaded and take effect immediately upon CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

```
static inline void EQDC_SetEqdcLdok(EQDC_Type *base)
```

Set load okay.

Load okay enables that the outer-set values of buffered compare registers (UCOMPx/LCOMPx, x=0~3), initial register(UNIT/LINIT) and modulus register(UMOD/LMOD) can be loaded into their inner-sets and take effect. When LDOK is set, this loading action occurs at the next position counter roll-over or roll-under if CTRL2[LDMOD] is set, or it occurs immediately if CTRL2[LDMOD] is cleared. LDOK is automatically cleared after the values in outer-set is loaded into the inner-set.

Parameters

- base – EQDC peripheral base address.

```
static inline uint8_t EQDC_GetEqdcLdok(EQDC_Type *base)
```

Get load okay.

Parameters

- base – EQDC peripheral base address.

```
static inline void EQDC_ClearEqdcLdok(EQDC_Type *base)
```

Clear load okay.

Parameters

- base – EQDC peripheral base address.

```
static inline uint32_t EQDC_GetStatusFlags(EQDC_Type *base)
```

Get the status flags.

Parameters

- base – EQDC peripheral base address.

Returns

Logical OR'ed value of the status flags, `_eqdc_status_flags`.

```
static inline void EQDC_ClearStatusFlags(EQDC_Type *base, uint32_t u32Flags)
```

Clear the status flags.

Parameters

- base – EQDC peripheral base address.
- u32Flags – Logical OR'ed value of the flags to clear, `_eqdc_status_flags`.

```
static inline uint16_t EQDC_GetSignalStatusFlags(EQDC_Type *base)
```

Get the signals' real-time status.

Parameters

- base – EQDC peripheral base address.

Returns

Logical OR'ed value of the real-time signal status, `_eqdc_signal_status`.

```
static inline eqdc_count_direction_flag_t EQDC_GetLastCountDirection(EQDC_Type *base)
```

Get the direction of the last count.

Parameters

- base – EQDC peripheral base address.

Returns

Direction of the last count.

```
static inline void EQDC_EnableInterrupts(EQDC_Type *base, uint32_t u32Interrupts)
```

Enable the interrupts.

Parameters

- base – EQDC peripheral base address.
- u32Interrupts – Logical OR'ed value of the interrupts, `_eqdc_interrupt_enable`.

```
static inline void EQDC_DisableInterrupts(EQDC_Type *base, uint32_t u32Interrupts)
```

Disable the interrupts.

Parameters

- base – EQDC peripheral base address.
- u32Interrupts – Logical OR'ed value of the interrupts, `_eqdc_interrupt_enable`.

```
static inline void EQDC_DoSoftwareLoadInitialPositionValue(EQDC_Type *base)
```

Load the initial position value to position counter.

Software trigger to load the initial position value (UNIT and LINIT) contents to position counter (UPOS and LPOS), so that to provide the consistent operation the position counter registers.

Parameters

- base – EQDC peripheral base address.

```
static inline void EQDC_SetInitialPositionValue(EQDC_Type *base, uint32_t  
u32PositionInitValue)
```

Set initial position value for EQDC module.

Set the position counter initial value (UNIT, LINIT). After writing values to the UNIT and LINIT registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address

- u32PositionInitValue – Position initial value

```
static inline void EQDC_SetPositionCounterValue(EQDC_Type *base, uint32_t
                                             positionCounterValue)
```

Set position counter value.

Set the position counter value (POS or UPOS, LPOS).

Parameters

- base – EQDC peripheral base address
- positionCounterValue – Position counter value

```
static inline void EQDC_SetPositionModulusValue(EQDC_Type *base, uint32_t
                                             positionModulusValue)
```

Set position counter modulus value.

Set the position counter modulus value (UMOD, LMOD). After writing values to the UMOD and LMOD registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- positionModulusValue – Position modulus value

```
static inline void EQDC_SetPositionCompare0Value(EQDC_Type *base, uint32_t
                                             u32PositionComp0Value)
```

Set position counter compare 0 value.

Set the position counter compare 0 value (UCOMP0, LCOMP0). After writing values to the UCOMP0 and LCOMP0 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp0Value – Position modulus value

```
static inline void EQDC_SetPositionCompare1Value(EQDC_Type *base, uint32_t
                                             u32PositionComp1Value)
```

Set position counter compare 1 value.

Set the position counter compare 1 value (UCOMP1, LCOMP1). After writing values to the UCOMP1 and LCOMP1 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.

- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp1Value – Position modulus value

```
static inline void EQDC_SetPositionCompare2Value(EQDC_Type *base, uint32_t
                                                u32PositionComp2Value)
```

Set position counter compare 2 value.

Set the position counter compare 2 value (UCOMP2, LCOMP2). After writing values to the UCOMP2 and LCOMP2 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp2Value – Position modulus value

```
static inline void EQDC_SetPositionCompare3Value(EQDC_Type *base, uint32_t
                                                u32PositionComp3Value)
```

Set position counter compare 3 value.

Set the position counter compare 3 value (UCOMP3, LCOMP3). After writing values to the UCOMP3 and LCOMP3 registers, the values are “buffered” into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- a. If CTRL2[LDMODE] is 1, “buffered” values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- b. If CTRL2[LDMODE] is 0, “buffered” values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

Parameters

- base – EQDC peripheral base address
- u32PositionComp3Value – Position modulus value

```
static inline uint32_t EQDC_GetPosition(EQDC_Type *base)
```

Get the current position counter’s value.

Parameters

- base – EQDC peripheral base address.

Returns

Current position counter’s value.

```
static inline uint32_t EQDC_GetHoldPosition(EQDC_Type *base)
```

Get the hold position counter’s value.

The position counter (POS or UPOS, LPOS) value is loaded to hold position (POSH or UPOSH, LPOSH) when:

- a. Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read.
- b. TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter's value.

```
static inline uint32_t EQDC_GetHoldPosition1(EQDC_Type *base)
```

Get the hold position counter1's value.

The Upper Position Counter Hold Register 1(UPOSH1) shares the same address with UCOMP1. When read, this register means the value of UPOSH1, which is the upper 16 bits of POSH1. The Lower Position Counter Hold Register 1(LPOSH1) shares the same address with LCOMP1. When read, this register means the value of LPOSH1, which is the lower 16 bits of POSH1. Position counter is captured into POSH1 on the rising edge of ICAP[1].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter1's value.

```
static inline uint32_t EQDC_GetHoldPosition2(EQDC_Type *base)
```

Get the hold position counter2's value.

The Upper Position Counter Hold Register 2(UPOSH2) shares the same address with UCOMP2. When read, this register means the value of UPOSH2, which is the upper 16 bits of POSH2. The Lower Position Counter Hold Register 2(LPOSH2) shares the same address with LCOMP2. When read, this register means the value of LPOSH2, which is the lower 16 bits of POSH2. Position counter is captured into POSH2 on the rising edge of ICAP[2].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter2's value.

```
static inline uint32_t EQDC_GetHoldPosition3(EQDC_Type *base)
```

Get the hold position counter3's value.

The Upper Position Counter Hold Register 3(UPOSH3) shares the same address with UCOMP3. When read, this register means the value of UPOSH3, which is the upper 16 bits of POSH3. The Lower Position Counter Hold Register 3(LPOSH3) shares the same address with LCOMP3. When read, this register means the value of LPOSH3, which is the lower 16 bits of POSH3. Position counter is captured into POSH3 on the rising edge of ICAP[3].

Parameters

- base – EQDC peripheral base address.

Returns

Hold position counter3's value.

```
static inline uint16_t EQDC_GetPositionDifference(EQDC_Type *base)
```

Get the position difference counter's value.

Parameters

- base – EQDC peripheral base address.

Returns

The position difference counter's value.

```
static inline uint16_t EQDC_GetHoldPositionDifference(EQDC_Type *base)
```

Get the hold position difference counter's value.

The position difference (POSD) value is loaded to hold position difference (POSDH) when:

- a. Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read. When Period Measurement is enabled (CTRL3[PMEN] = 1), POSDH will only be updated when reading POSD.
- b. TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position difference counter's value.

```
static inline uint16_t EQDC_GetRevolution(EQDC_Type *base)
```

Get the revolution counter's value.

Get the revolution counter (REV) value.

Parameters

- base – EQDC peripheral base address.

Returns

The revolution counter's value.

```
static inline uint16_t EQDC_GetHoldRevolution(EQDC_Type *base)
```

Get the hold revolution counter's value.

The revolution counter (REV) value is loaded to hold revolution (REXH) when:

- a. Position register (POS or UPOS, LPOS), or position difference register (POSD), or revolution register (REV) is read.
- b. TRIGGER happens and TRIGGER is enabled to update the hold registers.

Parameters

- base – EQDC peripheral base address.

Returns

Hold position revolution counter's value.

```
static inline uint16_t EQDC_GetLastEdgeTime(EQDC_Type *base)
```

Get the last edge time.

Last edge time (LASTEDGE) is the time since the last edge occurred on PHASEA or PHASEB. The last edge time register counts up using the peripheral clock after prescaler. Any edge on PHASEA or PHASEB will reset this register to 0 and start counting. If the last edge timer count reaches 0xffff, the counting will stop in order to prevent an overflow. Counting will continue when an edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The last edge time.

```
static inline uint16_t EQDC_GetHoldLastEdgeTime(EQDC_Type *base)
```

Get the hold last edge time.

The hold of last edge time(LASTEDGEH) is update to last edge time(LASTEDGE) when the position difference register register (POSD) is read.

Parameters

- base – EQDC peripheral base address.

Returns

Hold of last edge time.

```
static inline uint16_t EQDC_GetPositionDifferencePeriod(EQDC_Type *base)
```

Get the Position Difference Period counter value.

The Position Difference Period counter (POSDPER) counts up using the prescaled peripheral clock. When reading the position difference register(POSD), the last edge time (LASTEDGE) will be loaded to position difference period counter(POSDPER). If the POSDPER count reaches 0xffff, the counting will stop in order to prevent an overflow. Counting will continue when an edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The position difference period counter value.

```
static inline uint16_t EQDC_GetBufferedPositionDifferencePeriod(EQDC_Type *base)
```

Get buffered Position Difference Period counter value.

The Bufferd Position Difference Period (POSDPERBFR) value is updated with the position difference period counter(POSDPER) when any edge occurs on PHASEA or PHASEB.

Parameters

- base – EQDC peripheral base address.

Returns

The buffered position difference period counter value.

```
static inline uint16_t EQDC_GetHoldPositionDifferencePeriod(EQDC_Type *base)
```

Get Hold Position Difference Period counter value.

The hold position difference period(POSDPERH) is updated with the value of buffered position difference period(POSDPERBFR) when the position difference(POSD) register is read.

Parameters

- base – EQDC peripheral base address.

Returns

The hold position difference period counter value.

```
enum _eqdc_status_flags
```

EQDC status flags, these flags indicate the counter's events. .

Values:

enumerator kEQDC_HomeEnableTransitionFlag

HOME/ENABLE signal transition occurred.

enumerator kEQDC_IndexPresetPulseFlag

INDEX/PRESET pulse occurred.

enumerator kEQDC_WatchdogTimeoutFlag

Watchdog timeout occurred.

enumerator kEQDC_SimultPhaseChangeFlag
Simultaneous change of PHASEA and PHASEB occurred.

enumerator kEQDC_CountDirectionChangeFlag
Count direction change interrupt enable.

enumerator kEQDC_PositionRollOverFlag
Position counter rolls over from 0xFFFFFFFF to 0, or from MOD value to INIT value.

enumerator kEQDC_PositionRollUnderFlag
Position register roll under from 0 to 0xFFFFFFFF, or from INIT value to MOD value.

enumerator kEQDC_PositionCompare0Flag
Position counter match the COMP0 value.

enumerator kEQDC_PositionCompare1Flag
Position counter match the COMP1 value.

enumerator kEQDC_PositionCompare2Flag
Position counter match the COMP2 value.

enumerator kEQDC_PositionCompare3Flag
Position counter match the COMP3 value.

enumerator kEQDC_StatusAllFlags

enum _eqdc_signal_status

Signal status, these flags indicate the raw and filtered input signal status. .

Values:

enumerator kEQDC_SignalStatusRawHomeEnable
Raw HOME/ENABLE input.

enumerator kEQDC_SignalStatusRawIndexPreset
Raw INDEX/PRESET input.

enumerator kEQDC_SignalStatusRawPhaseB
Raw PHASEB input.

enumerator kEQDC_SignalStatusRawPhaseA
Raw PHASEA input.

enumerator kEQDC_SignalStatusFilteredHomeEnable
The filtered HOME/ENABLE input.

enumerator kEQDC_SignalStatusFilteredIndexPreset
The filtered INDEX/PRESET input.

enumerator kEQDC_SignalStatusFilteredPhaseB
The filtered PHASEB input.

enumerator kEQDC_SignalStatusFilteredPhaseA
The filtered PHASEA input.

enumerator kEQDC_SignalStatusPositionCompare0Flag
Position Compare 0 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare1Flag
Position Compare 1 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare2Flag
Position Compare 2 Flag Output.

enumerator kEQDC_SignalStatusPositionCompare3Flag
Position Compare 3 Flag Output.

enumerator kEQDC_SignalStatusCountDirectionFlagHold
Count Direction Flag Hold.

enumerator kEQDC_SignalStatusCountDirectionFlag
Count Direction Flag Output.

enumerator kEQDC_SignalStatusAllFlags

enum _eqdc_interrupt_enable
Interrupt enable/disable mask. .

Values:

enumerator kEQDC_HomeEnableTransitionInterruptEnable
HOME/ENABLE signal transition interrupt enable.

enumerator kEQDC_IndexPresetPulseInterruptEnable
INDEX/PRESET pulse interrupt enable.

enumerator kEQDC_WatchdogTimeoutInterruptEnable
Watchdog timeout interrupt enable.

enumerator kEQDC_SimultPhaseChangeInterruptEnable
Simultaneous PHASEA and PHASEB change interrupt enable.

enumerator kEQDC_CountDirectionChangeInterruptEnable
Count direction change interrupt enable.

enumerator kEQDC_PositionRollOverInterruptEnable
Roll-over interrupt enable.

enumerator kEQDC_PositionRollUnderInterruptEnable
Roll-under interrupt enable.

enumerator kEQDC_PositionCompare0InterruptEnable
Position compare 0 interrupt enable.

enumerator kEQDC_PositionCompare1InterruptEnable
Position compare 1 interrupt enable.

enumerator kEQDC_PositionCompare2InterruptEnable
Position compare 2 interrupt enable.

enumerator kEQDC_PositionCompare3InterruptEnable
Position compare 3 interrupt enable.

enumerator kEQDC_AllInterruptEnable

enum _eqdc_home_enable_init_pos_counter_mode
Define HOME/ENABLE signal's trigger mode.

Values:

enumerator kEQDC_HomeInitPosCounterDisabled
Don't use HOME/ENABLE signal to initialize the position counter.

enumerator kEQDC_HomeInitPosCounterOnRisingEdge
Use positive going edge to trigger initialization of position counters.

enumerator kEQDC_HomeInitPosCounterOnFallingEdge
Use negative going edge to trigger initialization of position counters.

enum `_eqdc_index_preset_init_pos_counter_mode`

Define INDEX/PRESET signal's trigger mode.

Values:

enumerator `kEQDC_IndexInitPosCounterDisabled`

INDEX/PRESET pulse does not initialize the position counter.

enumerator `kEQDC_IndexInitPosCounterOnRisingEdge`

Use INDEX/PRESET pulse rising edge to initialize position counter.

enumerator `kEQDC_IndexInitPosCounterOnFallingEdge`

Use INDEX/PRESET pulse falling edge to initialize position counter.

enum `_eqdc_operate_mode`

Define type for decoder operation mode.

The Quadrature Decoder operates in following 4 operation modes: 1.Quadrature Decode(QDC) Operation Mode (`CTRL[PH1] = 0,CTRL2[OPMODE] = 0`) In QDC operation mode, Module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 2.Quadrature Count(QCT) Operation Mode (`CTRL[PH1] = 0,CTRL2[OPMODE] = 1`) In QCT operation mode, Module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor. 3.Single Phase Decode(PH1DC) Operation Mode (`CTRL[PH1] = 1,CTRL2[OPMODE] = 0`) In PH1DC operation mode, the module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 4.Single Phase Count(PH1CT) Operation Mode (`CTRL[PH1] = 1,CTRL2[OPMODE] = 1`) In PH1CT operation mode, the module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor.

Values:

enumerator `kEQDC_QuadratureDecodeOperationMode`

Use standard quadrature decoder with PHASEA/PHASEB, INDEX/HOME.

enumerator `kEQDC_QuadratureCountOperationMode`

Use quadrature count operation mode with PHASEA/PHASEB, PRESET/ENABLE.

enumerator `kEQDC_SinglePhaseDecodeOperationMode`

Use single phase quadrature decoder with PHASEA/PHASEB, INDEX/HOME.

enumerator `kEQDC_SinglePhaseCountOperationMode`

Use single phase count decoder with PHASEA/PHASEB, PRESET/ENABLE.

enum `_eqdc_count_mode`

Define type for decoder count mode.

In decode mode, it uses the standard quadrature decoder with PHASEA and PHASEB, PHASEA = 0 and PHASEB = 0 mean reverse direction.

- If PHASEA leads PHASEB, then motion is in the positive direction.
- If PHASEA trails PHASEB, then motion is in the negative direction. In single phase mode, there are three count modes:
- In Signed Count mode (Single Edge). Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down). If `CTRL[REV]` is 1, then the position counter will count in the opposite direction.
- In Signed Count mode (double edge), both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down).

- In UP/DOWN Pulse Count mode. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs. Both counters count in the down direction when input PHASEB rising edge occurs. If CTRL[REV] is 1, then the position counter will count in the opposite direction.

Values:

enumerator kEQDC_QuadratureX4

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_QuadratureX2

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_QuadratureX1

Active on kEQDC_QuadratureDecodeOperationMode/kEQDC_QuadratureCountOperationMode.

enumerator kEQDC_UpDownPulseCount

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enumerator kEQDC_SignedCountDoubleEdge

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enumerator kEQDC_SignedCountSingleEdge

Active on kEQDC_SinglePhaseDecodeOperationMode/kEQDC_SinglePhaseCountOperationMode.

enum _eqdc_output_pulse_mode

Define type for the condition of POSMATCH pulses.

Values:

enumerator kEQDC_OutputPulseOnCounterEqualCompare

POSMATCH pulses when a match occurs between the position counters (POS) and the compare value (UCOMPx/LCOMPx)(x range is 0-3).

enumerator kEQDC_OutputPulseOnReadingPositionCounter

POSMATCH pulses when reading position counter(POS and LPOS), revolution counter(REV), position difference counter(POSD).

enum _eqdc_revolution_count_condition

Define type for determining how the revolution counter (REV) is incremented/decremented.

Values:

enumerator kEQDC_RevolutionCountOnIndexPulse

Use INDEX pulse to increment/decrement revolution counter.

enumerator kEQDC_RevolutionCountOnRollOverModulus

Use modulus counting roll-over/under to increment/decrement revolution counter.

enum _eqdc_filter_sample_count

Input Filter Sample Count.

The Input Filter Sample Count represents the number of consecutive samples that must agree, before the input filter accepts an input transition

Values:

enumerator kEQDC_Filter3Samples

3 samples.

enumerator kEQDC_Filter4Samples

4 samples.

enumerator kEQDC_Filter5Samples
5 samples.

enumerator kEQDC_Filter6Samples
6 samples.

enumerator kEQDC_Filter7Samples
7 samples.

enumerator kEQDC_Filter8Samples
8 samples.

enumerator kEQDC_Filter9Samples
9 samples.

enumerator kEQDC_Filter10Samples
10 samples.

enum _eqdc_count_direction_flag
Count direction.

Values:

enumerator kEQDC_CountDirectionDown
Last count was in down direction.

enumerator kEQDC_CountDirectionUp
Last count was in up direction.

enum _eqdc_prescaler
Prescaler used by Last Edge Time (LASTEDGE) and Position Difference Period Counter (POSDPER).

Values:

enumerator kEQDC_Prescaler1
Prescaler value 1.

enumerator kEQDC_Prescaler2
Prescaler value 2.

enumerator kEQDC_Prescaler4
Prescaler value 4.

enumerator kEQDC_Prescaler8
Prescaler value 8.

enumerator kEQDC_Prescaler16
Prescaler value 16.

enumerator kEQDC_Prescaler32
Prescaler value 32.

enumerator kEQDC_Prescaler64
Prescaler value 64.

enumerator kEQDC_Prescaler128
Prescaler value 128.

enumerator kEQDC_Prescaler256
Prescaler value 256.

enumerator kEQDC_Prescaler512
Prescaler value 512.

enumerator kEQDC_Prescaler1024
Prescaler value 1024.

enumerator kEQDC_Prescaler2048
Prescaler value 2048.

enumerator kEQDC_Prescaler4096
Prescaler value 4096.

enumerator kEQDC_Prescaler8192
Prescaler value 8192.

enumerator kEQDC_Prescaler16384
Prescaler value 16384.

enumerator kEQDC_Prescaler32768
Prescaler value 32768.

typedef enum *_eqdc_home_enable_init_pos_counter_mode*
eqdc_home_enable_init_pos_counter_mode_t

Define HOME/ENABLE signal's trigger mode.

typedef enum *_eqdc_index_preset_init_pos_counter_mode*
eqdc_index_preset_init_pos_counter_mode_t

Define INDEX/PRESET signal's trigger mode.

typedef enum *_eqdc_operate_mode* *eqdc_operate_mode_t*

Define type for decoder operation mode.

The Quadrature Decoder operates in following 4 operation modes: 1.Quadrature Decode(QDC) Operation Mode (CTRL[PH1] = 0,CTRL2[OPMODE] = 0) In QDC operation mode, Module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 2.Quadrature Count(QCT) Operation Mode (CTRL[PH1] = 0,CTRL2[OPMODE] = 1) In QCT operation mode, Module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor. 3.Single Phase Decode(PH1DC) Operation Mode (CTRL[PH1] = 1,CTRL2[OPMODE] = 0) In PH1DC operation mode, the module uses PHASEA, PHASEB, INDEX, HOME, TRIGGER and ICAP[3:1] to decode the PHASEA and PHASEB signals from Speed/Position sensor. 4.Single Phase Count(PH1CT) Operation Mode (CTRL[PH1] = 1,CTRL2[OPMODE] = 1) In PH1CT operation mode, the module uses PHASEA, PHASEB, PRESET, ENABLE, TRIGGER and ICAP[3:1] to count the PHASEA and PHASEB signals from Speed/Position sensor.

typedef enum *_eqdc_count_mode* *eqdc_count_mode_t*

Define type for decoder count mode.

In decode mode, it uses the standard quadrature decoder with PHASEA and PHASEB, PHASEA = 0 and PHASEB = 0 mean reverse direction.

- If PHASEA leads PHASEB, then motion is in the positive direction.
- If PHASEA trails PHASEB, then motion is in the negative direction. In single phase mode, there are three count modes:
- In Signed Count mode (Single Edge). Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down). If CTRL[REV] is 1, then the position counter will count in the opposite direction.
- In Signed Count mode (double edge), both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down).

- In UP/DOWN Pulse Count mode. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs. Both counters count in the down direction when input PHASEB rising edge occurs. If CTRL[REV] is 1, then the position counter will count in the opposite direction.

`typedef enum _eqdc_output_pulse_mode eqdc_output_pulse_mode_t`

Define type for the condition of POSMATCH pulses.

`typedef enum _eqdc_revolution_count_condition eqdc_revolution_count_condition_t`

Define type for determining how the revolution counter (REV) is incremented/decremented.

`typedef enum _eqdc_filter_sample_count eqdc_filter_sample_count_t`

Input Filter Sample Count.

The Input Filter Sample Count represents the number of consecutive samples that must agree, before the input filter accepts an input transition

`typedef enum _eqdc_count_direction_flag eqdc_count_direction_flag_t`

Count direction.

`typedef enum _eqdc_prescaler eqdc_prescaler_t`

Prescaler used by Last Edge Time (LASTEDGE) and Position Difference Period Counter (POSDPER).

`typedef struct _eqdc_config eqdc_config_t`

Define user configuration structure for EQDC module.

`FSL_EQDC_DRIVER_VERSION`

`EQDC_CTRL_W1C_FLAGS`

W1C bits in EQDC CTRL registers.

`EQDC_INTCTRL_W1C_FLAGS`

W1C bits in EQDC INTCTRL registers.

`EQDC_CTRL_INT_EN`

Interrupt enable bits in EQDC CTRL registers.

`EQDC_INTCTRL_INT_EN`

Interrupt enable bits in EQDC INTCTRL registers.

`EQDC_CTRL_INT_FLAGS`

Interrupt flag bits in EQDC CTRL registers.

`EQDC_INTCTRL_INT_FLAGS`

Interrupt flag bits in EQDC INTCTRL registers.

`kEQDC_PositionCompare0InterruptEnable`

`kEQDC_PositionCompare1InterruptEnable`

`kEQDC_PositionCompare2InterruptEnable`

`kEQDC_PositionCompare3InterruptEnable`

`struct _eqdc_config`

`#include <fsl_eqdc.h>` Define user configuration structure for EQDC module.

Public Members

bool enableReverseDirection

Enable reverse direction counting.

bool countOnce

Selects modulo loop or one shot counting mode.

bool enableDma

Enable DMA for new written buffer values of COMPx/INIT/MOD(x range is 0-3)

bool bufferedRegisterLoadMode

selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UINIT/LINIT), and modulus register (UMOD/LMOD).

bool enableTriggerInitPositionCounter

Initialize position counter with initial register(UINIT, LINIT) value on TRIGGER's rising edge.

bool enableIndexInitPositionCounter

Enables the feature that the position counter to be initialized by Index Event Edge Mark.

This option works together with `_eqdc_index_preset_init_pos_counter_mode` and `enableReverseDirection`; If enabled, the behavior is like this:

When PHA leads PHB (Clockwise): If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnRisingEdge`, then INDEX rising edge reset position counter. If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnFallingEdge`, then INDEX falling edge reset position counter. If `enableReverseDirection` is false, then Reset position counter to initial value. If `enableReverseDirection` is true, then reset position counter to modulus value.

When PHA lags PHB (Counter Clockwise): If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnRisingEdge`, then INDEX falling edge reset position counter. If `_eqdc_index_preset_init_pos_counter_mode` is `kEQDC_IndexInitPosCounterOnFallingEdge`, then INDEX rising edge reset position counter. If `enableReverseDirection` is false, then Reset position counter to modulus value. If `enableReverseDirection` is true, then reset position counter to initial value.

bool enableTriggerClearPositionRegisters

Clear position counter(POS), revolution counter(REV), position difference counter (POSD) on TRIGGER's rising edge.

bool enableTriggerHoldPositionRegisters

Load position counter(POS), revolution counter(REV), position difference counter (POSD) values to hold registers on TRIGGER's rising edge.

bool filterPhaseA

Filter operation on PHASEA input, when write 1, it means filter for PHASEA input is bypassed.

bool filterPhaseB

Filter operation on PHASEB input, when write 1, it means filter for PHASEB input is bypassed.

bool filterIndPre

Filter operation on INDEX/PRESET input, when write 1, it means filter for INDEX/PRESET input is bypassed.

bool filterHomEna

Filter operation on HOME/ENABLE input, when write 1, it means filter for HOME/ENABLE input is bypassed.

`bool enableWatchdog`

Enable the watchdog to detect if the target is moving or not.

`uint16_t watchdogTimeoutValue`

Watchdog timeout count value. It stores the timeout count for the quadrature decoder module watchdog timer.

`eqdc_prescaler_t prescaler`

Prescaler.

`bool filterClockSourceselection`

Filter Clock Source selection.

`eqdc_filter_sample_count_t filterSampleCount`

Input Filter Sample Count. This value should be chosen to reduce the probability of noisy samples causing an incorrect transition to be recognized. The value represent the number of consecutive samples that must agree prior to the input filter accepting an input transition.

`uint8_t filterSamplePeriod`

Input Filter Sample Period. This value should be set such that the sampling period is larger than the period of the expected noise. This value represents the sampling period (in IPBus clock cycles) of the decoder input signals. The available range is 0 - 255.

`eqdc_operate_mode_t operateMode`

Selects operation mode.

`eqdc_count_mode_t countMode`

Selects count mode.

`eqdc_home_enable_init_pos_counter_mode_t homeEnableInitPosCounterMode`

Select how HOME/Enable signal used to initialize position counters.

`eqdc_index_preset_init_pos_counter_mode_t indexPresetInitPosCounterMode`

Select how INDEX/Preset signal used to initialize position counters.

`eqdc_output_pulse_mode_t outputPulseMode`

The condition of POSMATCH pulses.

`uint32_t positionCompareValue[4]`

Position compare 0 ~ 3 value. The available value is a 32-bit number.

`eqdc_revolution_count_condition_t revolutionCountCondition`

Revolution Counter Modulus Enable.

`uint32_t positionModulusValue`

Position modulus value. The available value is a 32-bit number.

`uint32_t positionInitialValue`

Position initial value. The available value is a 32-bit number.

`uint32_t positionCounterValue`

Position counter value. When Modulo mode enabled, the positionCounterValue should be in the range of positionInitialValue and positionModulusValue.

`bool enablePeriodMeasurement`

Enable period measurement. When enabled, the position difference hold register (POSDH) is only updated when position difference register (POSD) is read.

`uint16_t enabledInterruptsMask`

Mask of interrupts to be enabled, should be OR'ed value of `_eqdc_interrupt_enable`.

2.12 ERM: error recording module

void ERM_Init(ERM_Type *base)

ERM module initialization function.

Parameters

- base – ERM base address.

void ERM_Deinit(ERM_Type *base)

De-initializes the ERM.

static inline void ERM_EnableInterrupts(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)

ERM enable interrupts.

Parameters

- base – ERM peripheral base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline void ERM_DisableInterrupts(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)

ERM module disable interrupts.

Parameters

- base – ERM base address.
- channel – memory channel.
- mask – single correction interrupt or non-correction interrupt enable to disable for one specific memory region. Refer to “_erm_interrupt_enable” enumeration.

static inline uint32_t ERM_GetInterruptStatus(ERM_Type *base, erm_memory_channel_t channel)

Gets ERM interrupt flags.

Parameters

- base – ERM peripheral base address.

Returns

ERM event flags.

static inline void ERM_ClearInterruptStatus(ERM_Type *base, erm_memory_channel_t channel, uint32_t mask)

ERM module clear interrupt status flag.

Parameters

- base – ERM base address.
- mask – event flag to clear. Refer to “_erm_interrupt_flag” enumeration.

uint32_t ERM_GetMemoryErrorAddr(ERM_Type *base, erm_memory_channel_t channel)

ERM get memory error absolute address, which capturing the address of the last ECC event in Memory n.

Parameters

- base – ERM base address.

- channel – memory channel.

Return values

memory – error absolute address.

uint32_t ERM_GetSyndrome(ERM_Type *base, erm_memory_channel_t channel)

ERM get syndrome, which identifies the pertinent bit position on a correctable, single-bit data inversion or a non-correctable, single-bit address inversion. The syndrome value does not provide any additional diagnostic information on non-correctable, multi-bit inversions.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

syndrome – value.

uint32_t ERM_GetErrorCount(ERM_Type *base, erm_memory_channel_t channel)

ERM get error count, which records the count value of the number of correctable ECC error events for Memory n. Non-correctable errors are considered a serious fault, so the ERM does not provide any mechanism to count non-correctable errors. Only correctable errors are counted.

Parameters

- base – ERM base address.
- channel – memory channel.

Return values

error – count.

void ERM_ResetErrorCount(ERM_Type *base, erm_memory_channel_t channel)

ERM reset error count.

Parameters

- base – ERM base address.
- channel – memory channel.

FSL_ERM_DRIVER_VERSION

Driver version.

ERM interrupt configuration structure, default settings all disabled, `_erm_interrupt_enable`.

This structure contains the settings for all of the ERM interrupt configurations.

Values:

enumerator `kERM_SingleCorrectionIntEnable`
Single Correction Interrupt Notification enable.

enumerator `kERM_NonCorrectableIntEnable`
Non-Correction Interrupt Notification enable.

enumerator `kERM_AllInterruptsEnable`
All Interrupts enable

ERM interrupt status, `_erm_interrupt_flag`.

This provides constants for the ERM event status for use in the ERM functions.

Values:

enumerator kERM_SingleBitCorrectionIntFlag
Single-Bit Correction Event.

enumerator kERM_NonCorrectableErrorIntFlag
Non-Correctable Error Event.

enumerator kERM_AllIntsFlag
All Events.

2.13 FGPIO Driver

2.14 FlexCAN: Flex Controller Area Network Driver

2.15 FlexCAN Driver

bool FLEXCAN_IsInstanceHasFDMode(CAN_Type *base)

Determine whether the FlexCAN instance support CAN FD mode at run time.

Note: Use this API only if different soc parts share the SOC part name macro define. Otherwise, a different SOC part name can be used to determine at compile time whether the FlexCAN instance supports CAN FD mode or not. If need use this API to determine if CAN FD mode is supported, the FLEXCAN_Init function needs to be executed first, and then call this API and use the return to value determines whether to supports CAN FD mode, if return true, continue calling FLEXCAN_FDInit to enable CAN FD mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

return TRUE if instance support CAN FD mode, FALSE if instance only support classic CAN (2.0) mode.

status_t FLEXCAN_EnterFreezeMode(CAN_Type *base)

Enter FlexCAN Freeze Mode.

This function makes the FlexCAN work under Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

status_t FLEXCAN_ExitFreezeMode(CAN_Type *base)

Exit FlexCAN Freeze Mode.

This function makes the FlexCAN leave Freeze Mode.

Parameters

- base – FlexCAN peripheral base address.

Returns

kStatus_Success Enter Freeze Mode successful kStatus_Timeout Timeout when wait for Freeze Mode Acknowledge

```
uint32_t FLEXCAN_GetInstance(CAN_Type *base)
```

Get the FlexCAN instance from peripheral base address.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN instance.

```
bool FLEXCAN_CalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t
                                           sourceClock_Hz, flexcan_timing_config_t
                                           *pTimingConfig)
```

Calculates the improved timing values by specific bit Rates for classical CAN.

This function use to calculates the Classical CAN timing values according to the given bit rate. The Calculated timing values will be set in CTRL1/CBT/ENCBT register. The calculation is based on the recommendation of the CiA 301 v4.2.0 and previous version document.

Parameters

- base – FlexCAN peripheral base address.
- bitRate – The classical CAN speed in bps defined by user, should be less than or equal to 1Mbps.
- sourceClock_Hz – The Source clock frequency in Hz.
- pTimingConfig – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration.

```
void FLEXCAN_Init(CAN_Type *base, const flexcan_config_t *pConfig, uint32_t sourceClock_Hz)
```

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the flexcan_config_t parameters and how to call the FLEXCAN_Init function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc      = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate    = 1000000U;
flexcanConfig.maxMbNum   = 16;
flexcanConfig.enableLoopBack = false;
flexcanConfig.enableSelfWakeup = false;
flexcanConfig.enableIndividMask = false;
flexcanConfig.enableDoze = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
flexcanConfig.timingConfig = timingConfig;
FLEXCAN_Init(CAN0, &flexcanConfig, 4000000UL);
```

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the user-defined configuration structure.
- sourceClock_Hz – FlexCAN Protocol Engine clock source frequency in Hz.

```
bool FLEXCAN_FDCalculateImprovedTimingValues(CAN_Type *base, uint32_t bitRate, uint32_t
                                             bitRateFD, uint32_t sourceClock_Hz,
                                             flexcan_timing_config_t *pTimingConfig)
```

Calculates the improved timing values by specific bit rates for CANFD.

This function use to calculates the CANFD timing values according to the given nominal phase bit rate and data phase bit rate. The Calculated timing values will be set in CBT/ENCBT and FDCBT/EDCBT registers. The calculation is based on the recommendation of the CiA 1301 v1.0.0 document.

Parameters

- `base` – FlexCAN peripheral base address.
- `bitRate` – The CANFD bus control speed in bps defined by user.
- `bitRateFD` – The CAN FD data phase speed in bps defined by user. Equal to `bitRate` means disable bit rate switching.
- `sourceClock_Hz` – The Source clock frequency in Hz.
- `pTimingConfig` – Pointer to the FlexCAN timing configuration structure.

Returns

TRUE if timing configuration found, FALSE if failed to find configuration

```
void FLEXCAN_FDInit(CAN_Type *base, const flexcan_config_t *pConfig, uint32_t
    sourceClock_Hz, flexcan_mb_size_t dataSize, bool brs)
```

Initializes a FlexCAN instance.

This function initializes the FlexCAN module with user-defined settings. This example shows how to set up the `flexcan_config_t` parameters and how to call the `FLEXCAN_FDInit` function by passing in these parameters.

```
flexcan_config_t flexcanConfig;
flexcanConfig.clkSrc      = kFLEXCAN_ClkSrc0;
flexcanConfig.bitRate    = 1000000U;
flexcanConfig.bitRateFD  = 2000000U;
flexcanConfig.maxMbNum   = 16;
flexcanConfig.enableLoopBack = false;
flexcanConfig.enableSelfWakeup = false;
flexcanConfig.enableIndividMask = false;
flexcanConfig.disableSelfReception = false;
flexcanConfig.enableListenOnlyMode = false;
flexcanConfig.enableDoze = false;
flexcanConfig.timingConfig = timingConfig;
FLEXCAN_FDInit(CAN0, &flexcanConfig, 8000000UL, kFLEXCAN_16BperMB, true);
```

Parameters

- `base` – FlexCAN peripheral base address.
- `pConfig` – Pointer to the user-defined configuration structure.
- `sourceClock_Hz` – FlexCAN Protocol Engine clock source frequency in Hz.
- `dataSize` – FlexCAN Message Buffer payload size. The actual transmitted or received CAN FD frame data size needs to be less than or equal to this value.
- `brs` – True if bit rate switch is enabled in FD mode.

```
void FLEXCAN_Deinit(CAN_Type *base)
```

De-initializes a FlexCAN instance.

This function disables the FlexCAN module clock and sets all register values to the reset value.

Parameters

- `base` – FlexCAN peripheral base address.

void FLEXCAN_GetDefaultConfig(*flexcan_config_t* *pConfig)

Gets the default configuration structure.

This function initializes the FlexCAN configuration structure to default values. The default values are as follows. `flexcanConfig->clkSrc = kFLEXCAN_ClkSrc0; flexcanConfig->bitRate = 1000000U; flexcanConfig->bitRateFD = 2000000U; flexcanConfig->maxMbNum = 16; flexcanConfig->enableLoopBack = false; flexcanConfig->enableSelfWakeup = false; flexcanConfig->enableIndividMask = false; flexcanConfig->disableSelfReception = false; flexcanConfig->enableListenOnlyMode = false; flexcanConfig->enableDoze = false; flexcanConfig->enablePretendedeNetworking = false; flexcanConfig->enableMemoryErrorControl = true; flexcanConfig->enableNonCorrectableErrorEnterFreeze = true; flexcanConfig->enableTransceiverDelayMeasure = true; flexcanConfig->enableRemoteRequestFrameStored = true; flexcanConfig->payloadEndianness = kFLEXCAN_bigEndian; flexcanConfig.timingConfig = timingConfig;`

Parameters

- pConfig – Pointer to the FlexCAN configuration structure.

void FLEXCAN_SetTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN classical CAN protocol timing characteristic.

This function gives user settings to classical CAN or CAN FD nominal phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetBitRate() instead.

Note: Calling FLEXCAN_SetTimingConfig() overrides the bit rate set in FLEXCAN_Init() or FLEXCAN_SetBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRate_Bps)

Set bit rate of FlexCAN classical CAN frame or CAN FD frame nominal phase.

This function set the bit rate of classical CAN frame or CAN FD frame nominal phase base on FLEXCAN_CalculateImprovedTimingValues() API calculated timing values.

Note: Calling FLEXCAN_SetBitRate() overrides the bit rate set in FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRate_Bps – Bit rate in Bps.

Returns

kStatus_Success - Set CAN baud rate (only Nominal phase) successfully.

void FLEXCAN_SetFDTimingConfig(CAN_Type *base, const *flexcan_timing_config_t* *pConfig)

Sets the FlexCAN CANFD data phase timing characteristic.

This function gives user settings to CANFD data phase timing characteristic. The function is for an experienced user. For less experienced users, call the FLEXCAN_SetFDBitRate() to set both Nominal/Data bit Rate instead.

Note: Calling FLEXCAN_SetFDTimingConfig() overrides the data phase bit rate set in FLEXCAN_FDInit()/FLEXCAN_SetFDBitRate().

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the timing configuration structure.

status_t FLEXCAN_SetFDBitRate(CAN_Type *base, uint32_t sourceClock_Hz, uint32_t bitRateN_Bps, uint32_t bitRateD_Bps)

Set bit rate of FlexCAN FD frame.

This function set the baud rate of FLEXCAN FD base on FLEXCAN_FDCalculateImprovedTimingValues() API calculated timing values.

Parameters

- base – FlexCAN peripheral base address.
- sourceClock_Hz – Source Clock in Hz.
- bitRateN_Bps – Nominal bit Rate in Bps.
- bitRateD_Bps – Data bit Rate in Bps.

Returns

kStatus_Success - Set CAN FD bit rate (include Nominal and Data phase) successfully.

void FLEXCAN_SetRxMbGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive message buffer global mask.

This function sets the global mask for the FlexCAN message buffer in a matching process. The configuration is only effective when the Rx individual mask is disabled in the FLEXCAN_Init().

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Message Buffer Global Mask value.

void FLEXCAN_SetRxFifoGlobalMask(CAN_Type *base, uint32_t mask)

Sets the FlexCAN receive FIFO global mask.

This function sets the global mask for FlexCAN FIFO in a matching process.

Parameters

- base – FlexCAN peripheral base address.
- mask – Rx Fifo Global Mask value.

void FLEXCAN_SetRxIndividualMask(CAN_Type *base, uint8_t maskIdx, uint32_t mask)

Sets the FlexCAN receive individual mask.

This function sets the individual mask for the FlexCAN matching process. The configuration is only effective when the Rx individual mask is enabled in the FLEXCAN_Init(). If the Rx FIFO is disabled, the individual mask is applied to the corresponding Message Buffer. If the Rx FIFO is enabled, the individual mask for Rx FIFO occupied Message Buffer is applied to the Rx Filter with the same index. Note that only the first 32 individual masks can be used as the Rx FIFO filter mask.

Parameters

- base – FlexCAN peripheral base address.

- maskIdx – The Index of individual Mask.
- mask – Rx Individual Mask value.

void FLEXCAN_SetTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
 - true: Enable Tx Message Buffer.
 - false: Disable Tx Message Buffer.

void FLEXCAN_SetRxMbConfig(CAN_Type *base, uint8_t mbIdx, const flexcan_rx_mb_config_t *pRxMbConfig, bool enable)

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer. User should invoke this API when CTRL2[RRS]=1. When CTRL2[RRS]=1, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbEmpty, kFLEXCAN_RxMbFull or kFLEXCAN_RxMbOverrun. Message buffer will store the remote frame in the same fashion of a data frame. No automatic remote response frame will be generated. User need to setup another message buffer to respond remote request.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
 - true: Enable Rx Message Buffer.
 - false: Disable Rx Message Buffer.

void FLEXCAN_SetFDTxMbConfig(CAN_Type *base, uint8_t mbIdx, bool enable)

Configures a FlexCAN transmit message buffer.

This function aborts the previous transmission, cleans the Message Buffer, and configures it as a Transmit Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- enable – Enable/disable Tx Message Buffer.
 - true: Enable Tx Message Buffer.
 - false: Disable Tx Message Buffer.

```
void FLEXCAN_SetFDRxMbConfig(CAN_Type *base, uint8_t mbIdx, const
                             flexcan_rx_mb_config_t *pRxMbConfig, bool enable)
```

Configures a FlexCAN Receive Message Buffer.

This function cleans a FlexCAN build-in Message Buffer and configures it as a Receive Message Buffer.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pRxMbConfig – Pointer to the FlexCAN Message Buffer configuration structure.
- enable – Enable/disable Rx Message Buffer.
 - true: Enable Rx Message Buffer.
 - false: Disable Rx Message Buffer.

```
void FLEXCAN_SetRemoteResponseMbConfig(CAN_Type *base, uint8_t mbIdx, const
                                        flexcan_frame_t *pFrame)
```

Configures a FlexCAN Remote Response Message Buffer.

User should invoke this API when CTRL2[RRS]=0. When CTRL2[RRS]=0, frame's ID is compared to the IDs of the receive mailboxes with the CODE field configured as kFLEXCAN_RxMbRanswer. If there is a matching ID, then this mailbox content will be transmitted as response. The received remote request frame is not stored in receive buffer. It is only used to trigger a transmission of a frame in response.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The Message Buffer index.
- pFrame – Pointer to CAN message frame structure for response.

```
void FLEXCAN_SetRxFifoConfig(CAN_Type *base, const flexcan_rx_fifo_config_t *pRxFifoConfig,
                             bool enable)
```

Configures the FlexCAN Legacy Rx FIFO.

This function configures the FlexCAN Rx FIFO with given configuration.

Note: Legacy Rx FIFO only can receive classic CAN message.

Parameters

- base – FlexCAN peripheral base address.
- pRxFifoConfig – Pointer to the FlexCAN Legacy Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Legacy Rx FIFO.
 - true: Enable Legacy Rx FIFO.
 - false: Disable Legacy Rx FIFO.

```
void FLEXCAN_SetEnhancedRxFifoConfig(CAN_Type *base, const
                                     flexcan_enhanced_rx_fifo_config_t *pConfig, bool
                                     enable)
```

Configures the FlexCAN Enhanced Rx FIFO.

This function configures the Enhanced Rx FIFO with given configuration.

Note: Enhanced Rx FIFO support receive classic CAN or CAN FD messages, Legacy Rx FIFO and Enhanced Rx FIFO cannot be enabled at the same time.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Enhanced Rx FIFO configuration structure. Can be NULL when enable parameter is false.
- enable – Enable/disable Enhanced Rx FIFO.
 - true: Enable Enhanced Rx FIFO.
 - false: Disable Enhanced Rx FIFO.

```
void FLEXCAN_SetPNConfig(CAN_Type *base, const flexcan_pn_config_t *pConfig)
```

Configures the FlexCAN Pretended Networking mode.

This function configures the FlexCAN Pretended Networking mode with given configuration.

Parameters

- base – FlexCAN peripheral base address.
- pConfig – Pointer to the FlexCAN Rx FIFO configuration structure.

```
static inline uint64_t FLEXCAN_GetStatusFlags(CAN_Type *base)
```

Gets the FlexCAN module interrupt flags.

This function gets all FlexCAN status flags. The flags are returned as the logical OR value of the enumerators `_flexcan_flags`. To check the specific status, compare the return value with enumerators in `_flexcan_flags`.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN status flags which are ORed by the enumerators in the `_flexcan_flags`.

```
static inline void FLEXCAN_ClearStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears status flags with the provided mask.

This function clears the FlexCAN status flags with a provided mask. An automatically cleared flag can't be cleared by this function.

Parameters

- base – FlexCAN peripheral base address.
- mask – The status flags to be cleared, it is logical OR value of `_flexcan_flags`.

```
static inline void FLEXCAN_GetBusErrCount(CAN_Type *base, uint8_t *txErrBuf, uint8_t *rxErrBuf)
```

Gets the FlexCAN Bus Error Counter value.

This function gets the FlexCAN Bus Error Counter value for both Tx and Rx direction. These values may be needed in the upper layer error handling.

Parameters

- base – FlexCAN peripheral base address.
- txErrBuf – Buffer to store Tx Error Counter value.
- rxErrBuf – Buffer to store Rx Error Counter value.

```
static inline uint64_t FLEXCAN_GetMbStatusFlags(CAN_Type *base, uint64_t mask)
```

Gets the FlexCAN low 64 Message Buffer interrupt flags.

This function gets the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns

The status of given Message Buffers.

```
static inline uint64_t FLEXCAN_GetHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)
```

Gets the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

Returns

The status of given Message Buffers.

```
static inline void FLEXCAN_ClearMbStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears the FlexCAN low 64 Message Buffer interrupt flags.

This function clears the interrupt flags of a given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
static inline void FLEXCAN_ClearHigh64MbStatusFlags(CAN_Type *base, uint64_t mask)
```

Clears the FlexCAN High 64 Message Buffer interrupt flags.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
void FLEXCAN_GetMemoryErrorReportStatus(CAN_Type *base,
                                         flexcan_memory_error_report_status_t
                                         *errorStatus)
```

Gets the FlexCAN Memory Error Report registers status.

This function gets the FlexCAN Memory Error Report registers status.

Parameters

- base – FlexCAN peripheral base address.
- errorStatus – Pointer to FlexCAN Memory Error Report registers status structure.

```
static inline uint8_t FLEXCAN_GetPNMatchCount(CAN_Type *base)
```

Gets the FlexCAN Number of Matches when in Pretended Networking.

This function gets the number of times a given message has matched the predefined filtering criteria for ID and/or PL before a wakeup event.

Parameters

- base – FlexCAN peripheral base address.

Returns

The number of received wake up messages.

```
static inline uint32_t FLEXCAN_GetEnhancedFifoDataCount(CAN_Type *base)
```

Gets the number of FlexCAN Enhanced Rx FIFO available frames.

This function gets the number of CAN messages stored in the Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.

Returns

The number of available CAN messages stored in the Enhanced Rx FIFO.

```
static inline void FLEXCAN_EnableInterrupts(CAN_Type *base, uint64_t mask)
```

Enables FlexCAN interrupts according to the provided mask.

This function enables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see `_flexcan_interrupt_enable`.

Parameters

- base – FlexCAN peripheral base address.
- mask – The interrupts to enable. Logical OR of `_flexcan_interrupt_enable`.

```
static inline void FLEXCAN_DisableInterrupts(CAN_Type *base, uint64_t mask)
```

Disables FlexCAN interrupts according to the provided mask.

This function disables the FlexCAN interrupts according to the provided mask. The mask is a logical OR of enumeration members, see `_flexcan_interrupt_enable`.

Parameters

- base – FlexCAN peripheral base address.
- mask – The interrupts to disable. Logical OR of `_flexcan_interrupt_enable`.

```
static inline void FLEXCAN_EnableMbInterrupts(CAN_Type *base, uint64_t mask)
```

Enables FlexCAN low 64 Message Buffer interrupts.

This function enables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
static inline void FLEXCAN_EnableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)
```

Enables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
static inline void FLEXCAN_DisableMbInterrupts(CAN_Type *base, uint64_t mask)
```

Disables FlexCAN low 64 Message Buffer interrupts.

This function disables the interrupts of given Message Buffers.

Parameters

- base – FlexCAN peripheral base address.

- mask – The ORed FlexCAN Message Buffer mask.

```
static inline void FLEXCAN_DisableHigh64MbInterrupts(CAN_Type *base, uint64_t mask)
```

Disables FlexCAN high 64 Message Buffer interrupts.

Valid only if the number of available MBs exceeds 64.

Parameters

- base – FlexCAN peripheral base address.
- mask – The ORed FlexCAN Message Buffer mask.

```
void FLEXCAN_EnableRxFifoDMA(CAN_Type *base, bool enable)
```

Enables or disables the FlexCAN Rx FIFO DMA request.

This function enables or disables the DMA feature of FlexCAN build-in Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- enable – true to enable, false to disable.

```
static inline uintptr_t FLEXCAN_GetRxFifoHeadAddr(CAN_Type *base)
```

Gets the Rx FIFO Head address.

This function returns the FlexCAN Rx FIFO Head address, which is mainly used for the DMA/eDMA use case.

Parameters

- base – FlexCAN peripheral base address.

Returns

FlexCAN Rx FIFO Head address.

```
static inline status_t FLEXCAN_Enable(CAN_Type *base, bool enable)
```

Enables or disables the FlexCAN module operation.

This function enables or disables the FlexCAN module.

Parameters

- base – FlexCAN base pointer.
- enable – true to enable, false to disable.

Returns

kStatus_Success Enable FlexCAN module successful
kStatus_Timeout Timeout when wait for Low-Power Mode Acknowledge

```
status_t FLEXCAN_WriteTxMb(CAN_Type *base, uint8_t mbIdx, const flexcan_frame_t *pTxFrame)
```

Writes a FlexCAN Message to the Transmit Message Buffer.

This function writes a CAN Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN Message transmit. After that the function returns immediately.

Parameters

- base – FlexCAN peripheral base address.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- kStatus_Success – Write Tx Message Buffer Successfully.

- `kStatus_Fail` -- Tx Message Buffer is currently in use.

`status_t` FLEXCAN_ReadRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Receive Message Buffer.

This function reads a CAN message from a specified Receive Message Buffer. The function fills a receive CAN message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- `base` – FlexCAN peripheral base address.
- `mbIdx` – The FlexCAN Message Buffer index.
- `pRxFrame` – Pointer to CAN message frame structure for reception.

Return values

- `kStatus_Success` -- Rx Message Buffer is full and has been read successfully.
- `kStatus_FLEXCAN_RxOverflow` -- Rx Message Buffer is already overflowed and has been read successfully.
- `kStatus_Fail` -- Rx Message Buffer is empty.

`status_t` FLEXCAN_WriteFDTxMb(CAN_Type *base, uint8_t mbIdx, const *flexcan_fd_frame_t* *pTxFrame)

Writes a FlexCAN FD Message to the Transmit Message Buffer.

This function writes a CAN FD Message to the specified Transmit Message Buffer and changes the Message Buffer state to start CAN FD Message transmit. After that the function returns immediately.

Parameters

- `base` – FlexCAN peripheral base address.
- `mbIdx` – The FlexCAN FD Message Buffer index.
- `pTxFrame` – Pointer to CAN FD message frame to be sent.

Return values

- `kStatus_Success` -- Write Tx Message Buffer Successfully.
- `kStatus_Fail` -- Tx Message Buffer is currently in use.

`status_t` FLEXCAN_ReadFDRxMb(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN FD Message from Receive Message Buffer.

This function reads a CAN FD message from a specified Receive Message Buffer. The function fills a receive CAN FD message frame structure with just received data and activates the Message Buffer again. The function returns immediately.

Parameters

- `base` – FlexCAN peripheral base address.
- `mbIdx` – The FlexCAN FD Message Buffer index.
- `pRxFrame` – Pointer to CAN FD message frame structure for reception.

Return values

- `kStatus_Success` -- Rx Message Buffer is full and has been read successfully.
- `kStatus_FLEXCAN_RxOverflow` -- Rx Message Buffer is already overflowed and has been read successfully.
- `kStatus_Fail` -- Rx Message Buffer is empty.

status_t FLEXCAN_ReadRxFifo(CAN_Type *base, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Legacy Rx FIFO.

This function reads a CAN message from the FlexCAN Legacy Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success – Read Message from Rx FIFO successfully.
- kStatus_Fail – Rx FIFO is not enabled.

status_t FLEXCAN_ReadEnhancedRxFifo(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Reads a FlexCAN Message from Enhanced Rx FIFO.

This function reads a CAN or CAN FD message from the FlexCAN Enhanced Rx FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – Read Message from Rx FIFO successfully.
- kStatus_Fail – Rx FIFO is not enabled.

status_t FLEXCAN_ReadPNWakeUpMB(CAN_Type *base, uint8_t mbIdx, *flexcan_frame_t* *pRxFrame)

Reads a FlexCAN Message from Wake Up MB.

This function reads a CAN message from the FlexCAN Wake up Message Buffers. There are four Wake up Message Buffers (WMBs) used to store incoming messages in Pretended Networking mode. The WMB index indicates the arrival order. The last message is stored in WMB3.

Parameters

- base – FlexCAN peripheral base address.
- pRxFrame – Pointer to CAN message frame structure for reception.
- mbIdx – The FlexCAN Wake up Message Buffer index. Range in 0x0 ~ 0x3.

Return values

- kStatus_Success – Read Message from Wake up Message Buffer successfully.
- kStatus_Fail – Wake up Message Buffer has no valid content.

status_t FLEXCAN_TransferFDSendBlocking(CAN_Type *base, uint8_t mbIdx, *flexcan_fd_frame_t* *pTxFrame)

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

- pTxFrame – Pointer to CAN FD message frame to be sent.

Return values

- kStatus_Success – Write Tx Message Buffer Successfully.
- kStatus_Fail – Tx Message Buffer is currently in use.
- kStatus_Timeout – Failed to send frames within specific time.

status_t FLEXCAN_TransferFDReceiveBlocking(CAN_Type *base, uint8_t mbIdx, flexcan_fd_frame_t *pRxFrame)

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN FD Message Buffer index.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success – Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail – Rx Message Buffer is empty.
- kStatus_Timeout – Failed to receive frames within specific time.

status_t FLEXCAN_TransferFDSendNonBlocking(CAN_Type *base, flexcan_handle_t *handle, flexcan_mb_transfer_t *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the flexcan_mb_transfer_t.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferFDReceiveNonBlocking(CAN_Type *base, flexcan_handle_t *handle, flexcan_mb_transfer_t *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.

- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN FD Message Buffer transfer structure. See the `flexcan_mb_transfer_t`.

Return values

- `kStatus_Success` – Start Rx Message Buffer receiving process successfully.
- `kStatus_FLEXCAN_RxBusy` – Rx Message Buffer is in use.

```
void FLEXCAN_TransferFDAbortSend(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

```
void FLEXCAN_TransferFDAbortReceive(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN FD Message Buffer index.

```
status_t FLEXCAN_TransferSendBlocking(CAN_Type *base, uint8_t mbIdx, flexcan_frame_t *pTxFrame)
```

Performs a polling send transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pTxFrame – Pointer to CAN message frame to be sent.

Return values

- `kStatus_Success` – Write Tx Message Buffer Successfully.
- `kStatus_Fail` – Tx Message Buffer is currently in use.
- `kStatus_Timeout` – Failed to send frames within specific time.

```
status_t FLEXCAN_TransferReceiveBlocking(CAN_Type *base, uint8_t mbIdx, flexcan_frame_t *pRxFrame)
```

Performs a polling receive transaction on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- mbIdx – The FlexCAN Message Buffer index.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success -- Rx Message Buffer is full and has been read successfully.
- kStatus_FLEXCAN_RxOverflow – - Rx Message Buffer is already overflowed and has been read successfully.
- kStatus_Fail -- Rx Message Buffer is empty.
- kStatus_Timeout -- Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveFifoBlocking(CAN_Type *base, *flexcan_frame_t* *pRxFrame)
Performs a polling receive transaction from Legacy Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN message frame structure for reception.

Return values

- kStatus_Success -- Read Message from Rx FIFO successfully.
- kStatus_Fail -- Rx FIFO is not enabled.
- kStatus_Timeout -- Failed to receive frames within specific time.

status_t FLEXCAN_TransferReceiveEnhancedFifoBlocking(CAN_Type *base, *flexcan_fd_frame_t* *pRxFrame)

Performs a polling receive transaction from Enhanced Rx FIFO on the CAN bus.

Note: A transfer handle does not need to be created before calling this API.

Parameters

- base – FlexCAN peripheral base pointer.
- pRxFrame – Pointer to CAN FD message frame structure for reception.

Return values

- kStatus_Success -- Read Message from Rx FIFO successfully.
- kStatus_Fail -- Rx FIFO is not enabled.
- kStatus_Timeout -- Failed to receive frames within specific time.

void FLEXCAN_TransferCreateHandle(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_transfer_callback_t* callback, void *userData)

Initializes the FlexCAN handle.

This function initializes the FlexCAN handle, which can be used for other FlexCAN transactional APIs. Usually, for a specified FlexCAN instance, call this API once to get the initialized handle.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- callback – The callback function.
- userData – The parameter of the callback function.

status_t FLEXCAN_TransferSendNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Sends a message using IRQ.

This function sends a message using IRQ. This is a non-blocking function, which returns right away. When messages have been sent out, the send callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the *flexcan_mb_transfer_t*.

Return values

- kStatus_Success – Start Tx Message Buffer sending process successfully.
- kStatus_Fail – Write Tx Message Buffer failed.
- kStatus_FLEXCAN_TxBusy – Tx Message Buffer is in use.

status_t FLEXCAN_TransferReceiveNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_mb_transfer_t* *pMbXfer)

Receives a message using IRQ.

This function receives a message using IRQ. This is non-blocking function, which returns right away. When the message has been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pMbXfer – FlexCAN Message Buffer transfer structure. See the *flexcan_mb_transfer_t*.

Return values

- kStatus_Success -- Start Rx Message Buffer receiving process successfully.
- kStatus_FLEXCAN_RxBusy -- Rx Message Buffer is in use.

status_t FLEXCAN_TransferReceiveFifoNonBlocking(CAN_Type *base, *flexcan_handle_t* *handle, *flexcan_fifo_transfer_t* *pFifoXfer)

Receives a message from Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- pFifoXfer – FlexCAN Rx FIFO transfer structure. See the *flexcan_fifo_transfer_t*.

Return values

- `kStatus_Success` -- Start Rx FIFO receiving process successfully.
- `kStatus_FLEXCAN_RxFifoBusy` -- Rx FIFO is currently in use.

`status_t` FLEXCAN_TransferGetReceiveFifoCount(CAN_Type *base, flexcan_handle_t *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- `base` – FlexCAN peripheral base address.
- `handle` – FlexCAN handle pointer.
- `count` – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

`status_t` FLEXCAN_TransferReceiveEnhancedFifoNonBlocking(CAN_Type *base, flexcan_handle_t *handle, flexcan_fifo_transfer_t *pFifoXfer)

Receives a message from Enhanced Rx FIFO using IRQ.

This function receives a message using IRQ. This is a non-blocking function, which returns right away. When all messages have been received, the receive callback function is called.

Parameters

- `base` – FlexCAN peripheral base address.
- `handle` – FlexCAN handle pointer.
- `pFifoXfer` – FlexCAN Rx FIFO transfer structure. See the ref `flexcan_fifo_transfer_t.@`

Return values

- `kStatus_Success` -- Start Rx FIFO receiving process successfully.
- `kStatus_FLEXCAN_RxFifoBusy` -- Rx FIFO is currently in use.

static inline `status_t` FLEXCAN_TransferGetReceiveEnhancedFifoCount(CAN_Type *base, flexcan_handle_t *handle, size_t *count)

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- `base` – FlexCAN peripheral base address.
- `handle` – FlexCAN handle pointer.
- `count` – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

`uint32_t` FLEXCAN_GetTimeStamp(flexcan_handle_t *handle, uint8_t mbIdx)

Gets the detail index of Mailbox's Timestamp by handle.

Then function can only be used when calling non-blocking Data transfer (TX/RX) API, After TX/RX data transfer done (User can get the status by handler's callback

function), we can get the detail index of Mailbox's timestamp by handle, Detail non-blocking data transfer API (TX/RX) contain. -FLEXCAN_TransferSendNonBlocking -FLEXCAN_TransferFDSendNonBlocking -FLEXCAN_TransferReceiveNonBlocking -FLEXCAN_TransferFDReceiveNonBlocking -FLEXCAN_TransferReceiveFifoNonBlocking

Parameters

- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

Return values

the – index of mailbox 's timestamp stored in the handle.

```
void FLEXCAN_TransferAbortSend(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message send process.

This function aborts the interrupt driven message send process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

```
void FLEXCAN_TransferAbortReceive(CAN_Type *base, flexcan_handle_t *handle, uint8_t mbIdx)
```

Aborts the interrupt driven message receive process.

This function aborts the interrupt driven message receive process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- mbIdx – The FlexCAN Message Buffer index.

```
void FLEXCAN_TransferAbortReceiveFifo(CAN_Type *base, flexcan_handle_t *handle)
```

Aborts the interrupt driven message receive from Rx FIFO process.

This function aborts the interrupt driven message receive from Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

```
void FLEXCAN_TransferAbortReceiveEnhancedFifo(CAN_Type *base, flexcan_handle_t *handle)
```

Aborts the interrupt driven message receive from Enhanced Rx FIFO process.

This function aborts the interrupt driven message receive from Enhanced Rx FIFO process.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

```
void FLEXCAN_TransferHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)
```

FlexCAN IRQ handle function.

This function handles the FlexCAN Error, the Message Buffer, and the Rx FIFO IRQ request.

Parameters

- base – FlexCAN peripheral base address.

- handle – FlexCAN handle pointer.

void FLEXCAN_MbHandleIRQ(CAN_Type *base, flexcan_handle_t *handle, uint32_t startMbIdx, uint32_t endMbIdx)

FlexCAN Message Buffer IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- startMbIdx – First Message Buffer to handle.
- endMbIdx – Last Message Buffer to handle.

void FLEXCAN_EhancedRxFifoHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Enhanced Rx FIFO IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_BusoffErrorHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Bus Off, Error and Warning IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_PNWakeUpHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Pretended Networking Wake-up IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

void FLEXCAN_MemoryErrorHandleIRQ(CAN_Type *base, flexcan_handle_t *handle)

FlexCAN Memory Error IRQ handle function.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.

FSL_FLEXCAN_DRIVER_VERSION

FlexCAN driver version.

FlexCAN transfer status.

Values:

enumerator kStatus_FLEXCAN_TxBusy

Tx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_TxIdle

Tx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_TxSwitchToRx

Remote Message is send out and Message buffer changed to Receive one.

enumerator kStatus_FLEXCAN_RxBusy
Rx Message Buffer is Busy.

enumerator kStatus_FLEXCAN_RxIdle
Rx Message Buffer is Idle.

enumerator kStatus_FLEXCAN_RxOverflow
Rx Message Buffer is Overflowed.

enumerator kStatus_FLEXCAN_RxFifoBusy
Rx Message FIFO is Busy.

enumerator kStatus_FLEXCAN_RxFifoIdle
Rx Message FIFO is Idle.

enumerator kStatus_FLEXCAN_RxFifoOverflow
Rx Message FIFO is overflowed.

enumerator kStatus_FLEXCAN_RxFifoWarning
Rx Message FIFO is almost overflowed.

enumerator kStatus_FLEXCAN_RxFifoDisabled
Rx Message FIFO is disabled during reading.

enumerator kStatus_FLEXCAN_ErrorStatus
FlexCAN Module Error and Status.

enumerator kStatus_FLEXCAN_WakeUp
FlexCAN is waken up from STOP mode.

enumerator kStatus_FLEXCAN_UnHandled
UnHandled Interrupt asserted.

enumerator kStatus_FLEXCAN_RxRemote
Rx Remote Message Received in Mail box.

enumerator kStatus_FLEXCAN_RxFifoUnderflow
Enhanced Rx Message FIFO is underflow.

enumerator kStatus_FLEXCAN_MemoryError
FlexCAN Memory Error.

enum _flexcan_frame_format
FlexCAN frame format.

Values:

enumerator kFLEXCAN_FrameFormatStandard
Standard frame format attribute.

enumerator kFLEXCAN_FrameFormatExtend
Extend frame format attribute.

enum _flexcan_frame_type
FlexCAN frame type.

Values:

enumerator kFLEXCAN_FrameTypeData
Data frame type attribute.

enumerator kFLEXCAN_FrameTypeRemote
Remote frame type attribute.

enum `_flexcan_clock_source`
FlexCAN clock source.

Deprecated:

Do not use the `kFLEXCAN_ClkSrcOs`. It has been superceded `kFLEXCAN_ClkSrc0`

Do not use the `kFLEXCAN_ClkSrcPeri`. It has been superceded `kFLEXCAN_ClkSrc1`

Values:

enumerator `kFLEXCAN_ClkSrcOsc`
FlexCAN Protocol Engine clock from Oscillator.

enumerator `kFLEXCAN_ClkSrcPeri`
FlexCAN Protocol Engine clock from Peripheral Clock.

enumerator `kFLEXCAN_ClkSrc0`
FlexCAN Protocol Engine clock selected by user as SRC == 0.

enumerator `kFLEXCAN_ClkSrc1`
FlexCAN Protocol Engine clock selected by user as SRC == 1.

enum `_flexcan_wake_up_source`
FlexCAN wake up source.

Values:

enumerator `kFLEXCAN_WakeupSrcUnfiltered`
FlexCAN uses unfiltered Rx input to detect edge.

enumerator `kFLEXCAN_WakeupSrcFiltered`
FlexCAN uses filtered Rx input to detect edge.

enum `_flexcan_endianness`
FlexCAN payload endianness.

Values:

enumerator `kFLEXCAN_bigEndian`
Transmit frame with MSB first, receive frame with big-endian format.

enumerator `kFLEXCAN_littleEndian`
Transmit frame with LSB first, receive frame with little-endian format.

enum `_flexcan_rx_fifo_filter_type`
FlexCAN Rx Fifo Filter type.

Values:

enumerator `kFLEXCAN_RxFifoFilterTypeA`
One full ID (standard and extended) per ID Filter element.

enumerator `kFLEXCAN_RxFifoFilterTypeB`
Two full standard IDs or two partial 14-bit ID slices per ID Filter Table element.

enumerator `kFLEXCAN_RxFifoFilterTypeC`
Four partial 8-bit Standard or extended ID slices per ID Filter Table element.

enumerator `kFLEXCAN_RxFifoFilterTypeD`
All frames rejected.

enum `_flexcan_mb_size`

FlexCAN Message Buffer Payload size.

Values:

enumerator `kFLEXCAN_8BperMB`

Selects 8 bytes per Message Buffer.

enumerator `kFLEXCAN_16BperMB`

Selects 16 bytes per Message Buffer.

enumerator `kFLEXCAN_32BperMB`

Selects 32 bytes per Message Buffer.

enumerator `kFLEXCAN_64BperMB`

Selects 64 bytes per Message Buffer.

enum `_flexcan_fd_frame_length`

FlexCAN CAN FD frame supporting data length (available DLC values).

For Tx, when the Data size corresponding to DLC value stored in the MB selected for transmission is larger than the MB Payload size, FlexCAN adds the necessary number of bytes with constant 0xCC pattern to complete the expected DLC. For Rx, when the Data size corresponding to DLC value received from the CAN bus is larger than the MB Payload size, the high order bytes that do not fit the Payload size will lose.

Values:

enumerator `kFLEXCAN_0BperFrame`

Frame contains 0 valid data bytes.

enumerator `kFLEXCAN_1BperFrame`

Frame contains 1 valid data bytes.

enumerator `kFLEXCAN_2BperFrame`

Frame contains 2 valid data bytes.

enumerator `kFLEXCAN_3BperFrame`

Frame contains 3 valid data bytes.

enumerator `kFLEXCAN_4BperFrame`

Frame contains 4 valid data bytes.

enumerator `kFLEXCAN_5BperFrame`

Frame contains 5 valid data bytes.

enumerator `kFLEXCAN_6BperFrame`

Frame contains 6 valid data bytes.

enumerator `kFLEXCAN_7BperFrame`

Frame contains 7 valid data bytes.

enumerator `kFLEXCAN_8BperFrame`

Frame contains 8 valid data bytes.

enumerator `kFLEXCAN_12BperFrame`

Frame contains 12 valid data bytes.

enumerator `kFLEXCAN_16BperFrame`

Frame contains 16 valid data bytes.

enumerator `kFLEXCAN_20BperFrame`

Frame contains 20 valid data bytes.

enumerator kFLEXCAN_24BperFrame
Frame contains 24 valid data bytes.

enumerator kFLEXCAN_32BperFrame
Frame contains 32 valid data bytes.

enumerator kFLEXCAN_48BperFrame
Frame contains 48 valid data bytes.

enumerator kFLEXCAN_64BperFrame
Frame contains 64 valid data bytes.

enum _flexcan_efifo_dma_per_read_length
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

Values:

enumerator kFLEXCAN_1WordPerRead
Transfer 1 32-bit words (CS).

enumerator kFLEXCAN_2WordPerRead
Transfer 2 32-bit words (CS + ID).

enumerator kFLEXCAN_3WordPerRead
Transfer 3 32-bit words (CS + ID + 1~4 bytes data).

enumerator kFLEXCAN_4WordPerRead
Transfer 4 32-bit words (CS + ID + 5~8 bytes data).

enumerator kFLEXCAN_5WordPerRead
Transfer 5 32-bit words (CS + ID + 9~12 bytes data).

enumerator kFLEXCAN_6WordPerRead
Transfer 6 32-bit words (CS + ID + 13~16 bytes data).

enumerator kFLEXCAN_7WordPerRead
Transfer 7 32-bit words (CS + ID + 17~20 bytes data).

enumerator kFLEXCAN_8WordPerRead
Transfer 8 32-bit words (CS + ID + 21~24 bytes data).

enumerator kFLEXCAN_9WordPerRead
Transfer 9 32-bit words (CS + ID + 25~28 bytes data).

enumerator kFLEXCAN_10WordPerRead
Transfer 10 32-bit words (CS + ID + 29~32 bytes data).

enumerator kFLEXCAN_11WordPerRead
Transfer 11 32-bit words (CS + ID + 33~36 bytes data).

enumerator kFLEXCAN_12WordPerRead
Transfer 12 32-bit words (CS + ID + 37~40 bytes data).

enumerator kFLEXCAN_13WordPerRead
Transfer 13 32-bit words (CS + ID + 41~44 bytes data).

enumerator kFLEXCAN_14WordPerRead
Transfer 14 32-bit words (CS + ID + 45~48 bytes data).

enumerator kFLEXCAN_15WordPerRead
Transfer 15 32-bit words (CS + ID + 49~52 bytes data).

enumerator kFLEXCAN_16WordPerRead
Transfer 16 32-bit words (CS + ID + 53~56 bytes data).

enumerator kFLEXCAN_17WordPerRead
Transfer 17 32-bit words (CS + ID + 57~60 bytes data).

enumerator kFLEXCAN_18WordPerRead
Transfer 18 32-bit words (CS + ID + 61~64 bytes data).

enumerator kFLEXCAN_19WordPerRead
Transfer 19 32-bit words (CS + ID + 64 bytes data + ID HIT).

enum _flexcan_rx_fifo_priority

FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

Values:

enumerator kFLEXCAN_RxFifoPrioLow
Matching process start from Rx Message Buffer first.

enumerator kFLEXCAN_RxFifoPrioHigh
Matching process start from Enhanced/Legacy Rx FIFO first.

enum _flexcan_interrupt_enable

FlexCAN interrupt enable enumerations.

This provides constants for the FlexCAN interrupt enable enumerations for use in the FlexCAN functions.

Note: FlexCAN Message Buffers and Legacy Rx FIFO interrupts not included in.

Values:

enumerator kFLEXCAN_BusOffInterruptEnable
Bus Off interrupt, use bit 15.

enumerator kFLEXCAN_ErrorInterruptEnable
CAN Error interrupt, use bit 14.

enumerator kFLEXCAN_TxWarningInterruptEnable
Tx Warning interrupt, use bit 11.

enumerator kFLEXCAN_RxWarningInterruptEnable
Rx Warning interrupt, use bit 10.

enumerator kFLEXCAN_WakeUpInterruptEnable
Self Wake Up interrupt, use bit 26.

enumerator kFLEXCAN_FDErrorInterruptEnable
CAN FD Error interrupt, use bit 31.

enumerator kFLEXCAN_PNMatchWakeUpInterruptEnable
PN Match Wake Up interrupt, use high word bit 17.

enumerator kFLEXCAN_PNTimeoutWakeUpInterruptEnable
PN Timeout Wake Up interrupt, use high word bit 16. Enhanced Rx FIFO Underflow interrupt, use high word bit 31.

enumerator kFLEXCAN_ERxFifoUnderflowInterruptEnable

Enhanced Rx FIFO Overflow interrupt, use high word bit 30.

enumerator kFLEXCAN_ERxFifoOverflowInterruptEnable

Enhanced Rx FIFO Watermark interrupt, use high word bit 29.

enumerator kFLEXCAN_ERxFifoWatermarkInterruptEnable

Enhanced Rx FIFO Data Available interrupt, use high word bit 28.

enumerator kFLEXCAN_ERxFifoDataAvlInterruptEnable

enumerator kFLEXCAN_HostAccessNCErrInterruptEnable

Host Access With Non-Correctable Errors interrupt, use high word bit 0.

enumerator kFLEXCAN_FlexCanAccessNCErrInterruptEnable

FlexCAN Access With Non-Correctable Errors interrupt, use high word bit 2.

enumerator kFLEXCAN_HostOrFlexCanCErrInterruptEnable

Host or FlexCAN Access With Correctable Errors interrupt, use high word bit 3.

enum _flexcan_flags

FlexCAN status flags.

This provides constants for the FlexCAN status flags for use in the FlexCAN functions.

Note: The CPU read action clears the bits corresponding to the FLEXCAN_ErrorFlag macro, therefore user need to read status flags and distinguish which error is occur using _flexcan_error_flags enumerations.

Values:

enumerator kFLEXCAN_ErrorOverrunFlag

Error Overrun Status.

enumerator kFLEXCAN_FDErrorIntFlag

CAN FD Error Interrupt Flag.

enumerator kFLEXCAN_BusoffDoneIntFlag

Bus Off process completed Interrupt Flag.

enumerator kFLEXCAN_SynchFlag

CAN Synchronization Status.

enumerator kFLEXCAN_TxWarningIntFlag

Tx Warning Interrupt Flag.

enumerator kFLEXCAN_RxWarningIntFlag

Rx Warning Interrupt Flag.

enumerator kFLEXCAN_IdleFlag

FlexCAN In IDLE Status.

enumerator kFLEXCAN_FaultConfinementFlag

FlexCAN Fault Confinement State.

enumerator kFLEXCAN_TransmittingFlag

FlexCAN In Transmission Status.

enumerator kFLEXCAN_ReceivingFlag

FlexCAN In Reception Status.

enumerator kFLEXCAN_BusOffIntFlag
Bus Off Interrupt Flag.

enumerator kFLEXCAN_ErrorIntFlag
CAN Error Interrupt Flag.

enumerator kFLEXCAN_WakeUpIntFlag
Self Wake-Up Interrupt Flag.

enumerator kFLEXCAN_ErrorFlag

enumerator kFLEXCAN_PNMatchIntFlag
PN Matching Event Interrupt Flag.

enumerator kFLEXCAN_PNTimeoutIntFlag
PN Timeout Event Interrupt Flag.

enumerator kFLEXCAN_ERxFifoUnderflowIntFlag
Enhanced Rx FIFO underflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoOverflowIntFlag
Enhanced Rx FIFO overflow Interrupt Flag.

enumerator kFLEXCAN_ERxFifoWatermarkIntFlag
Enhanced Rx FIFO watermark Interrupt Flag.

enumerator kFLEXCAN_ERxFifoDataAvlIntFlag
Enhanced Rx FIFO data available Interrupt Flag.

enumerator kFLEXCAN_ERxFifoEmptyFlag
Enhanced Rx FIFO empty status.

enumerator kFLEXCAN_ERxFifoFullFlag
Enhanced Rx FIFO full status.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorIntFlag
Host Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorIntFlag
FlexCAN Access With Non-Correctable Error Interrupt Flag.

enumerator kFLEXCAN_CorrectableErrorIntFlag
Correctable Error Interrupt Flag.

enumerator kFLEXCAN_HostAccessNonCorrectableErrorOverrunFlag
Host Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_FlexCanAccessNonCorrectableErrorOverrunFlag
FlexCAN Access With Non-Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_CorrectableErrorOverrunFlag
Correctable Error Interrupt Overrun Flag.

enumerator kFLEXCAN_AllMemoryErrorIntFlag
All Memory Error Interrupt Flags.

enumerator kFLEXCAN_AllMemoryErrorFlag
All Memory Error Flags.

enum `_flexcan_error_flags`

FlexCAN error status flags.

The FlexCAN Error Status enumerations is used to report current error of the FlexCAN bus. This enumerations should be used with `KFLEXCAN_ErrorFlag` in `_flexcan_flags` enumerations to determine which error is generated.

Values:

enumerator `kFLEXCAN_FDStuffingError`

Stuffing Error.

enumerator `kFLEXCAN_FDFormError`

Form Error.

enumerator `kFLEXCAN_FDCrcError`

Cyclic Redundancy Check Error.

enumerator `kFLEXCAN_FDBit0Error`

Unable to send dominant bit.

enumerator `kFLEXCAN_FDBit1Error`

Unable to send recessive bit.

enumerator `kFLEXCAN_TxErrorWarningFlag`

Tx Error Warning Status.

enumerator `kFLEXCAN_RxErrorWarningFlag`

Rx Error Warning Status.

enumerator `kFLEXCAN_StuffingError`

Stuffing Error.

enumerator `kFLEXCAN_FormError`

Form Error.

enumerator `kFLEXCAN_CrcError`

Cyclic Redundancy Check Error.

enumerator `kFLEXCAN_AckError`

Received no ACK on transmission.

enumerator `kFLEXCAN_Bit0Error`

Unable to send dominant bit.

enumerator `kFLEXCAN_Bit1Error`

Unable to send recessive bit.

FlexCAN Legacy Rx FIFO status flags.

The FlexCAN Legacy Rx FIFO Status enumerations are used to determine the status of the Rx FIFO. Because Rx FIFO occupy the MB0 ~ MB7 (Rx Fifo filter also occupiees more Message Buffer space), Rx FIFO status flags are mapped to the corresponding Message Buffer status flags.

Values:

enumerator `kFLEXCAN_RxFifoOverflowFlag`

Rx FIFO overflow flag.

enumerator `kFLEXCAN_RxFifoWarningFlag`

Rx FIFO almost full flag.

enumerator kFLEXCAN_RxFifoFrameAvlFlag
Frames available in Rx FIFO flag.

enum _flexcan_memory_error_type
FlexCAN Memory Error Type.

Values:

enumerator kFLEXCAN_CorrectableError
The memory error is correctable which means on bit error.

enumerator kFLEXCAN_NonCorrectableError
The memory error is non-correctable which means two bit errors.

enum _flexcan_memory_access_type
FlexCAN Memory Access Type.

Values:

enumerator kFLEXCAN_MoveOutFlexCanAccess
The memory error was detected during move-out FlexCAN access.

enumerator kFLEXCAN_MoveInAccess
The memory error was detected during move-in FlexCAN access.

enumerator kFLEXCAN_TxArbitrationAccess
The memory error was detected during Tx Arbitration FlexCAN access.

enumerator kFLEXCAN_RxMatchingAccess
The memory error was detected during Rx Matching FlexCAN access.

enumerator kFLEXCAN_MoveOutHostAccess
The memory error was detected during Rx Matching Host (CPU) access.

enum _flexcan_byte_error_syndrome
FlexCAN Memory Error Byte Syndrome.

Values:

enumerator kFLEXCAN_NoError
No bit error in this byte.

enumerator kFLEXCAN_ParityBits0Error
Parity bit 0 error in this byte.

enumerator kFLEXCAN_ParityBits1Error
Parity bit 1 error in this byte.

enumerator kFLEXCAN_ParityBits2Error
Parity bit 2 error in this byte.

enumerator kFLEXCAN_ParityBits3Error
Parity bit 3 error in this byte.

enumerator kFLEXCAN_ParityBits4Error
Parity bit 4 error in this byte.

enumerator kFLEXCAN_DataBits0Error
Data bit 0 error in this byte.

enumerator kFLEXCAN_DataBits1Error
Data bit 1 error in this byte.

enumerator kFLEXCAN_DataBits2Error

Data bit 2 error in this byte.

enumerator kFLEXCAN_DataBits3Error

Data bit 3 error in this byte.

enumerator kFLEXCAN_DataBits4Error

Data bit 4 error in this byte.

enumerator kFLEXCAN_DataBits5Error

Data bit 5 error in this byte.

enumerator kFLEXCAN_DataBits6Error

Data bit 6 error in this byte.

enumerator kFLEXCAN_DataBits7Error

Data bit 7 error in this byte.

enumerator kFLEXCAN_AllZeroError

All-zeros non-correctable error in this byte.

enumerator kFLEXCAN_AllOneError

All-ones non-correctable error in this byte.

enumerator kFLEXCAN_NonCorrectableErrors

Non-correctable error in this byte.

enum _flexcan_pn_match_source

FlexCAN Pretended Networking match source selection.

Values:

enumerator kFLEXCAN_PNMatSrcID

Message match with ID filtering.

enumerator kFLEXCAN_PNMatSrcIDAndData

Message match with ID filtering and payload filtering.

enum _flexcan_pn_match_mode

FlexCAN Pretended Networking mode match type.

Values:

enumerator kFLEXCAN_PNMatModeEqual

Match upon ID/Payload contents against an exact target value.

enumerator kFLEXCAN_PNMatModeGreater

Match upon an ID/Payload value greater than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeSmaller

Match upon an ID/Payload value smaller than or equal to a specified target value.

enumerator kFLEXCAN_PNMatModeRange

Match upon an ID/Payload value inside a range, greater than or equal to a specified lower limit, and smaller than or equal to a specified upper limit

typedef enum _flexcan_frame_format flexcan_frame_format_t

FlexCAN frame format.

typedef enum _flexcan_frame_type flexcan_frame_type_t

FlexCAN frame type.

typedef enum *_flexcan_clock_source* flexcan_clock_source_t
FlexCAN clock source.

Deprecated:

Do not use the kFLEXCAN_ClkSrcOs. It has been superceded kFLEXCAN_ClkSrc0

Do not use the kFLEXCAN_ClkSrcPeri. It has been superceded kFLEXCAN_ClkSrc1

typedef enum *_flexcan_wake_up_source* flexcan_wake_up_source_t
FlexCAN wake up source.

typedef enum *_flexcan_endianness* flexcan_endianness_t
FlexCAN payload endianness.

typedef enum *_flexcan_rx_fifo_filter_type* flexcan_rx_fifo_filter_type_t
FlexCAN Rx Fifo Filter type.

typedef enum *_flexcan_mb_size* flexcan_mb_size_t
FlexCAN Message Buffer Payload size.

typedef enum *_flexcan_efifo_dma_per_read_length* flexcan_efifo_dma_per_read_length_t
FlexCAN Enhanced Rx Fifo DMA transfer per read length enumerations.

typedef enum *_flexcan_rx_fifo_priority* flexcan_rx_fifo_priority_t
FlexCAN Enhanced/Legacy Rx FIFO priority.

The matching process starts from the Rx MB(or Enhanced/Legacy Rx FIFO) with higher priority. If no MB(or Enhanced/Legacy Rx FIFO filter) is satisfied, the matching process goes on with the Enhanced/Legacy Rx FIFO(or Rx MB) with lower priority.

typedef enum *_flexcan_memory_error_type* flexcan_memory_error_type_t
FlexCAN Memory Error Type.

typedef enum *_flexcan_memory_access_type* flexcan_memory_access_type_t
FlexCAN Memory Access Type.

typedef enum *_flexcan_byte_error_syndrome* flexcan_byte_error_syndrome_t
FlexCAN Memory Error Byte Syndrome.

typedef struct *_flexcan_memory_error_report_status* flexcan_memory_error_report_status_t
FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of FLEXCAN_GetMemoryErrorReportStatus() function. And user can use FLEXCAN_GetMemoryErrorReportStatus to get the status of the last memory error access.

typedef struct *_flexcan_frame* flexcan_frame_t
FlexCAN message frame structure.

typedef struct *_flexcan_fd_frame* flexcan_fd_frame_t
CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member; see *_flexcan_fd_frame_length*.

typedef struct *_flexcan_timing_config* flexcan_timing_config_t
FlexCAN protocol timing characteristic configuration structure.

typedef struct *flexcan_config* flexcan_config_t
FlexCAN module configuration structure.

Deprecated:

Do not use the baudRate. It has been superceded bitRate

Do not use the baudRateFD. It has been superceded bitRateFD

typedef struct *flexcan_rx_mb_config* flexcan_rx_mb_config_t
FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of FLEXCAN_SetRxMbConfig() function. The FLEXCAN_SetRxMbConfig() function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

typedef enum *flexcan_pn_match_source* flexcan_pn_match_source_t
FlexCAN Pretended Networking match source selection.

typedef enum *flexcan_pn_match_mode* flexcan_pn_match_mode_t
FlexCAN Pretended Networking mode match type.

typedef struct *flexcan_pn_config* flexcan_pn_config_t
FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of FLEXCAN_SetPNConfig() function. The FLEXCAN_SetPNConfig() function is used to configure FlexCAN Networking work mode.

typedef struct *flexcan_rx_fifo_config* flexcan_rx_fifo_config_t
FlexCAN Legacy Rx FIFO configuration structure.

typedef struct *flexcan_enhanced_rx_fifo_std_id_filter* flexcan_enhanced_rx_fifo_std_id_filter_t
FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

typedef struct *flexcan_enhanced_rx_fifo_ext_id_filter* flexcan_enhanced_rx_fifo_ext_id_filter_t
FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

typedef struct *flexcan_enhanced_rx_fifo_config* flexcan_enhanced_rx_fifo_config_t
FlexCAN Enhanced Rx FIFO configuration structure.

typedef struct *flexcan_mb_transfer* flexcan_mb_transfer_t
FlexCAN Message Buffer transfer.

typedef struct *flexcan_fifo_transfer* flexcan_fifo_transfer_t
FlexCAN Rx FIFO transfer.

typedef struct *flexcan_handle* flexcan_handle_t
FlexCAN handle structure definition.

typedef void (*flexcan_transfer_callback_t)(CAN_Type *base, flexcan_handle_t *handle, status_t status, uint64_t result, void *userData)

FLEXCAN_WAIT_TIMEOUT

FLEXCAN_POLLING_TIMEOUT

Max loops to wait for polling transfer.

FLEXCAN_MODULE_TIMEOUT

Max loops to wait for FlexCAN register access complete.

DLC_LENGTH_DECODE(dlc)

FlexCAN frame length helper macro.

`FLEXCAN_ID_STD(id)`
FlexCAN Frame ID helper macro.
Standard Frame ID helper macro.

`FLEXCAN_ID_EXT(id)`
Extend Frame ID helper macro.

`FLEXCAN_RX_MB_STD_MASK(id, rtr, ide)`
FlexCAN Rx Message Buffer Mask helper macro.
Standard Rx Message Buffer Mask helper macro.

`FLEXCAN_RX_MB_EXT_MASK(id, rtr, ide)`
Extend Rx Message Buffer Mask helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_A(id, rtr, ide)`
FlexCAN Legacy Rx FIFO Mask helper macro.
Standard Rx FIFO Mask helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_HIGH(id, rtr, ide)`
Standard Rx FIFO Mask helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_B_LOW(id, rtr, ide)`
Standard Rx FIFO Mask helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_HIGH(id)`
Standard Rx FIFO Mask helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_HIGH(id)`
Standard Rx FIFO Mask helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_MID_LOW(id)`
Standard Rx FIFO Mask helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_STD_MASK_TYPE_C_LOW(id)`
Standard Rx FIFO Mask helper macro Type C lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_A(id, rtr, ide)`
Extend Rx FIFO Mask helper macro Type A helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_HIGH(id, rtr, ide)`
Extend Rx FIFO Mask helper macro Type B upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_B_LOW(id, rtr, ide)`
Extend Rx FIFO Mask helper macro Type B lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_HIGH(id)`
Extend Rx FIFO Mask helper macro Type C upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_HIGH(id)`
Extend Rx FIFO Mask helper macro Type C mid-upper part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_MID_LOW(id)`
Extend Rx FIFO Mask helper macro Type C mid-lower part helper macro.

`FLEXCAN_RX_FIFO_EXT_MASK_TYPE_C_LOW(id)`
Extend Rx FIFO Mask helper macro Type C lower part helper macro.

`FLEXCAN_RX_FIFO_STD_FILTER_TYPE_A(id, rtr, ide)`
FlexCAN Rx FIFO Filter helper macro.
Standard Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_HIGH(id, rtr, ide)

Standard Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_B_LOW(id, rtr, ide)

Standard Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_HIGH(id)

Standard Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_HIGH(id)

Standard Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_MID_LOW(id)

Standard Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_STD_FILTER_TYPE_C_LOW(id)

Standard Rx FIFO Filter helper macro Type C lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_A(id, rtr, ide)

Extend Rx FIFO Filter helper macro Type A helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_HIGH(id, rtr, ide)

Extend Rx FIFO Filter helper macro Type B upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_B_LOW(id, rtr, ide)

Extend Rx FIFO Filter helper macro Type B lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_HIGH(id)

Extend Rx FIFO Filter helper macro Type C upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_HIGH(id)

Extend Rx FIFO Filter helper macro Type C mid-upper part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_MID_LOW(id)

Extend Rx FIFO Filter helper macro Type C mid-lower part helper macro.

FLEXCAN_RX_FIFO_EXT_FILTER_TYPE_C_LOW(id)

Extend Rx FIFO Filter helper macro Type C lower part helper macro.

ENHANCED_RX_FIFO_FSCH(x)

FlexCAN Enhanced Rx FIFO Filter and Mask helper macro.

RTR_STD_HIGH(x)

RTR_STD_LOW(x)

RTR_EXT(x)

ID_STD_LOW(id)

ID_STD_HIGH(id)

ID_EXT(id)

FLEXCAN_ENHANCED_RX_FIFO_STD_MASK_AND_FILTER(id, rtr, id_mask, rtr_mask)

Standard ID filter element with filter + mask scheme.

FLEXCAN_ENHANCED_RX_FIFO_STD_FILTER_WITH_RANGE(id_upper, rtr, id_lower,
rtr_mask)

Standard ID filter element with filter range.

FLEXCAN_ENHANCED_RX_FIFO_STD_TWO_FILTERS(id1, rtr1, id2, rtr2)

Standard ID filter element with two filters without masks.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_LOW(id, rtr)
 Extended ID filter element with filter + mask scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_MASK_AND_FILTER_HIGH(id_mask, rtr_mask)
 Extended ID filter element with filter + mask scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_LOW(id_upper, rtr)
 Extended ID filter element with range scheme low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_FILTER_WITH_RANGE_HIGH(id_lower, rtr_mask)
 Extended ID filter element with range scheme high word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_LOW(id2, rtr2)
 Extended ID filter element with two filters without masks low word.

FLEXCAN_ENHANCED_RX_FIFO_EXT_TWO_FILTERS_HIGH(id1, rtr1)
 Extended ID filter element with two filters without masks high word.

FLEXCAN_PN_STD_MASK(id, rtr)
 FlexCAN Pretended Networking ID Mask helper macro.
 Standard Rx Message Buffer Mask helper macro.

FLEXCAN_PN_EXT_MASK(id, rtr)
 Extend Rx Message Buffer Mask helper macro.

FLEXCAN_PN_INT_MASK(x)
 FlexCAN interrupt/status flag helper macro.

FLEXCAN_PN_INT_UNMASK(x)

FLEXCAN_PN_STATUS_MASK(x)

FLEXCAN_PN_STATUS_UNMASK(x)

FLEXCAN_EFIFO_INT_MASK(x)

FLEXCAN_EFIFO_INT_UNMASK(x)

FLEXCAN_EFIFO_STATUS_MASK(x)

FLEXCAN_EFIFO_STATUS_UNMASK(x)

FLEXCAN_MECR_INT_MASK(x)

FLEXCAN_MECR_INT_UNMASK(x)

FLEXCAN_MECR_STATUS_MASK(x)

FLEXCAN_MECR_STATUS_UNMASK(x)

FLEXCAN_ERROR_AND_STATUS_INT_FLAG

FLEXCAN_PNWAKE_UP_FLAG

FLEXCAN_WAKE_UP_FLAG

FLEXCAN_MEMORY_ERROR_INT_FLAG

FLEXCAN_MEMORY_ENHANCED_RX_FIFO_INT_FLAG

E_RX_FIFO(base)
 FlexCAN Enhanced Rx FIFO base address helper macro.

FLEXCAN_CALLBACK(x)

FlexCAN transfer callback function.

The FlexCAN transfer callback returns a value from the underlying layer. If the status equals to `kStatus_FLEXCAN_ErrorStatus`, the result parameter is the Content of FlexCAN status register which can be used to get the working status(or error status) of FlexCAN module. If the status equals to other FlexCAN Message Buffer transfer status, the result is the index of Message Buffer that generate transfer event. If the status equals to other FlexCAN Message Buffer transfer status, the result is meaningless and should be Ignored.

struct `_flexcan_memory_error_report_status`

#include <fsl_flexcan.h> FlexCAN memory error register status structure.

This structure contains the memory access properties that caused a memory error access. It is used as the parameter of `FLEXCAN_GetMemoryErrorReportStatus()` function. And user can use `FLEXCAN_GetMemoryErrorReportStatus` to get the status of the last memory error access.

Public Members

flexcan_memory_error_type_t errorType

The type of memory error that giving rise to the report.

flexcan_memory_access_type_t accessType

The type of memory access that giving rise to the memory error.

`uint16_t` accessAddress

The address where memory error detected.

`uint32_t` errorData

The raw data word read from memory with error.

struct `_flexcan_frame`

#include <fsl_flexcan.h> FlexCAN message frame structure.

struct `_flexcan_fd_frame`

#include <fsl_flexcan.h> CAN FD message frame structure.

The CAN FD message supporting up to sixty four bytes can be used for a data frame, depending on the length selected for the message buffers. The length should be a enumeration member, see `_flexcan_fd_frame_length`.

Public Members

`uint32_t` idhit

Note: ID HIT offset is changed dynamically according to data length code (DLC), when DLC is 15, they will be located below. Using `FLEXCAN_FixEnhancedRxFifoFrameIdHit` API is recommended to ensure this idhit value is correct. CAN Enhanced Rx FIFO filter hit id (This value is only used in Enhanced Rx FIFO receive mode).

struct `_flexcan_timing_config`

#include <fsl_flexcan.h> FlexCAN protocol timing characteristic configuration structure.

Public Members

`uint16_t preDivider`
 Classic CAN or CAN FD nominal phase bit rate prescaler.

`uint8_t rJumpwidth`
 Classic CAN or CAN FD nominal phase Re-sync Jump Width.

`uint8_t phaseSeg1`
 Classic CAN or CAN FD nominal phase Segment 1.

`uint8_t phaseSeg2`
 Classic CAN or CAN FD nominal phase Segment 2.

`uint8_t propSeg`
 Classic CAN or CAN FD nominal phase Propagation Segment.

`uint16_t fpreDivider`
 CAN FD data phase bit rate prescaler.

`uint8_t frJumpwidth`
 CAN FD data phase Re-sync Jump Width.

`uint8_t fphaseSeg1`
 CAN FD data phase Phase Segment 1.

`uint8_t fphaseSeg2`
 CAN FD data phase Phase Segment 2.

`uint8_t fpropSeg`
 CAN FD data phase Propagation Segment.

`struct _flexcan_config`
#include <fsl_flexcan.h> FlexCAN module configuration structure.

Deprecated:

Do not use the `baudRate`. It has been superceded `bitRate`
 Do not use the `baudRateFD`. It has been superceded `bitRateFD`

Public Members

`flexcan_clock_source_t clkSrc`
 Clock source for FlexCAN Protocol Engine.

`flexcan_wake_up_source_t wakeupSrc`
 Wake up source selection.

`uint8_t maxMbNum`
 The maximum number of Message Buffers used by user.

`bool enableLoopBack`
 Enable or Disable Loop Back Self Test Mode.

`bool enableTimerSync`
 Enable or Disable Timer Synchronization.

`bool enableSelfWakeup`
 Enable or Disable Self Wakeup Mode.

`bool enableIndividMask`
 Enable or Disable Rx Individual Mask and Queue feature.

`bool disableSelfReception`

Enable or Disable Self Reflection.

`bool enableListenOnlyMode`

Enable or Disable Listen Only Mode.

`bool enableDoze`

Enable or Disable Doze Mode.

`bool enablePretendedNetworking`

Enable or Disable the Pretended Networking mode.

`bool enableMemoryErrorControl`

Enable or Disable the memory errors detection and correction mechanism.

`bool enableNonCorrectableErrorEnterFreeze`

Enable or Disable Non-Correctable Errors In FlexCAN Access Put Device In Freeze Mode.

`bool enableTransceiverDelayMeasure`

Enable or Disable the transceiver delay measurement, when it is enabled, then the secondary sample point position is determined by the sum of the transceiver delay measurement plus the enhanced TDC offset.

`bool enableRemoteRequestFrameStored`

true: Store Remote Request Frame in the same fashion of data frame. false: Generate an automatic Remote Response Frame.

flexcan_endianness_t payloadEndianness

Selects the byte order for the payload of transmit and receive frames, see `flexcan_endianness_t`.

`struct _flexcan_rx_mb_config`

#include <fsl_flexcan.h> FlexCAN Receive Message Buffer configuration structure.

This structure is used as the parameter of `FLEXCAN_SetRxMbConfig()` function. The `FLEXCAN_SetRxMbConfig()` function is used to configure FlexCAN Receive Message Buffer. The function abort previous receiving process, clean the Message Buffer and activate the Rx Message Buffer using given Message Buffer setting.

Public Members

`uint32_t id`

CAN Message Buffer Frame Identifier, should be set using `FLEXCAN_ID_EXT()` or `FLEXCAN_ID_STD()` macro.

flexcan_frame_format_t format

CAN Frame Identifier format(Standard of Extend).

flexcan_frame_type_t type

CAN Frame Type(Data or Remote for classical CAN only).

`struct _flexcan_pn_config`

#include <fsl_flexcan.h> FlexCAN Pretended Networking configuration structure.

This structure is used as the parameter of `FLEXCAN_SetPNConfig()` function. The `FLEXCAN_SetPNConfig()` function is used to configure FlexCAN Networking work mode.

Public Members**bool** enableTimeout

Enable or Disable timeout event trigger wakeup.

uint16_t timeoutValue

The timeout value that generates a wakeup event, the counter timer is incremented based on 64 times the CAN Bit Time unit.

bool enableMatch

Enable or Disable match event trigger wakeup.

flexcan_pn_match_source_t matchSrc

Selects the match source (ID and/or data match) to trigger wakeup.

uint8_t matchNum

The number of times a given message must match the predefined ID and/or data before generating a wakeup event, range in 0x1 ~ 0xFF.

flexcan_pn_match_mode_t idMatchMode

The ID match type.

flexcan_pn_match_mode_t dataMatchMode

The data match type.

uint32_t idLower

The ID target values 1 which used either for ID match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in ID match “range detection”.

uint32_t idUpper

The ID target values 2 which used only as the upper limit value in ID match “range detection” or used to store the ID mask in “equal to”.

uint8_t lengthLower

The lower limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

uint8_t lengthUpper

The upper limit for length of data bytes which used only in data match “range detection”. Range in 0x0 ~ 0x8.

struct *_flexcan_rx_fifo_config*

#include <fsl_flexcan.h> FlexCAN Legacy Rx FIFO configuration structure.

Public Members**uint32_t** *idFilterTable

Pointer to the FlexCAN Legacy Rx FIFO identifier filter table.

uint8_t idFilterNum

The FlexCAN Legacy Rx FIFO Filter elements quantity.

flexcan_rx_fifo_filter_type_t idFilterType

The FlexCAN Legacy Rx FIFO Filter type.

flexcan_rx_fifo_priority_t priority

The FlexCAN Legacy Rx FIFO receive priority.

struct *_flexcan_enhanced_rx_fifo_std_id_filter*

#include <fsl_flexcan.h> FlexCAN Enhanced Rx FIFO Standard ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see `_flexcan_fd_frame_length`, When the length ≤ 8 , it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use `DLC_LENGTH_DECODE(length)` macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct `_flexcan_enhanced_rx_fifo_ext_id_filter`

`#include <fsl_flexcan.h>` FlexCAN Enhanced Rx FIFO Extended ID filter element structure.

Public Members

uint32_t filterType

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t rtr1

CAN FD frame data length code (DLC), range see `_flexcan_fd_frame_length`, When the length ≤ 8 , it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use `DLC_LENGTH_DECODE(length)` macro to get the number of valid data bytes.

uint32_t std1

CAN Frame Type(DATA or REMOTE).

uint32_t rtr2

CAN Frame Identifier(STD or EXT format).

uint32_t std2

Substitute Remote request.

struct `_flexcan_enhanced_rx_fifo_config`

`#include <fsl_flexcan.h>` FlexCAN Enhanced Rx FIFO configuration structure.

Public Members

uint32_t *idFilterTable

Pointer to the FlexCAN Enhanced Rx FIFO identifier filter table, each table member occupies 32 bit word, table size should be equal to `idFilterNum`. There are two types of Enhanced Rx FIFO filter elements that can be stored in table : extended-ID filter element (1 word, occupie 1 table members) and standard-ID filter element (2 words, occupies 2 table members), the extended-ID filter element needs to be placed in front of the table.

uint8_t idFilterPairNum

`idFilterPairNum` is the Enhanced Rx FIFO identifier filter element pair numbers, each pair of filter elements occupies 2 words and can consist of one extended ID filter element or two standard ID filter elements.

`uint8_t` `extendIdFilterNum`

The number of extended ID filter element items in the FlexCAN enhanced Rx FIFO identifier filter table, each extended-ID filter element occupies 2 words, `extendIdFilterNum` need less than or equal to `idFilterPairNum`.

`uint8_t` `fifoWatermark`

`(fifoWatermark + 1)` is the minimum number of CAN messages stored in the Enhanced RX FIFO which can trigger FIFO watermark interrupt or a DMA request.

`flexcan_efifo_dma_per_read_length_t` `dmaPerReadLength`

Define the length of each read of the Enhanced RX FIFO element by the DAM, see `_flexcan_fd_frame_length`.

`flexcan_rx_fifo_priority_t` `priority`

The FlexCAN Enhanced Rx FIFO receive priority.

`struct` `_flexcan_mb_transfer`

`#include <fsl_flexcan.h>` FlexCAN Message Buffer transfer.

Public Members

`flexcan_frame_t` `*frame`

The buffer of CAN Message to be transfer.

`uint8_t` `mbIdx`

The index of Message buffer used to transfer Message.

`struct` `_flexcan_fifo_transfer`

`#include <fsl_flexcan.h>` FlexCAN Rx FIFO transfer.

Public Members

`flexcan_fd_frame_t` `*framefd`

The buffer of CAN Message to be received from Enhanced Rx FIFO.

`flexcan_frame_t` `*frame`

The buffer of CAN Message to be received from Legacy Rx FIFO.

`size_t` `frameNum`

Number of CAN Message need to be received from Legacy or Enhanced Rx FIFO.

`struct` `_flexcan_handle`

`#include <fsl_flexcan.h>` FlexCAN handle structure.

Public Members

`flexcan_transfer_callback_t` `callback`

Callback function.

`void` `*userData`

FlexCAN callback function parameter.

`flexcan_frame_t` `*volatile` `mbFrameBuf[CAN_WORD1_COUNT]`

The buffer for received CAN data from Message Buffers.

`flexcan_fd_frame_t` `*volatile` `mbFDFrameBuf[CAN_WORD1_COUNT]`

The buffer for received CAN FD data from Message Buffers.

flexcan_frame_t *volatile rxFifoFrameBuf

The buffer for received CAN data from Legacy Rx FIFO.

flexcan_fd_frame_t *volatile rxFifoFDFrameBuf

The buffer for received CAN FD data from Enhanced Rx FIFO.

size_t rxFifoFrameNum

The number of CAN messages remaining to be received from Legacy or Enhanced Rx FIFO.

size_t rxFifoTransferTotalNum

Total CAN Message number need to be received from Legacy or Enhanced Rx FIFO.

volatile uint8_t mbState[CAN_WORD1_COUNT]

Message Buffer transfer state.

volatile uint8_t rxFifoState

Rx FIFO transfer state.

volatile uint32_t timestamp[CAN_WORD1_COUNT]

Mailbox transfer timestamp.

struct byteStatus

Public Members

bool byteIsRead

The byte n (0~3) was read or not. The type of error and which bit in byte (n) is affected by the error.

struct __unnamed22__

Public Members

uint32_t timestamp

FlexCAN internal Free-Running Counter Time Stamp.

uint32_t length

CAN frame data length in bytes (Range: 0~8).

uint32_t type

CAN Frame Type(DATA or REMOTE).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t __pad0__

Reserved.

uint32_t idhit

CAN Rx FIFO filter hit id(This value is only used in Rx FIFO receive mode).

struct __unnamed24__

Public Members

uint32_t id

CAN Frame Identifier, should be set using FLEXCAN_ID_EXT() or FLEXCAN_ID_STD() macro.


```
uint32_t __pad0__  
    Reserved.  
union __unnamed26__
```

Public Members

```
struct __flexcan_frame  
struct __flexcan_frame  
struct __unnamed28__
```

Public Members

```
uint32_t dataWord0  
    CAN Frame payload word0.  
uint32_t dataWord1  
    CAN Frame payload word1.  
struct __unnamed30__
```

Public Members

```
uint8_t dataByte3  
    CAN Frame payload byte3.  
uint8_t dataByte2  
    CAN Frame payload byte2.  
uint8_t dataByte1  
    CAN Frame payload byte1.  
uint8_t dataByte0  
    CAN Frame payload byte0.  
uint8_t dataByte7  
    CAN Frame payload byte7.  
uint8_t dataByte6  
    CAN Frame payload byte6.  
uint8_t dataByte5  
    CAN Frame payload byte5.  
uint8_t dataByte4  
    CAN Frame payload byte4.  
struct __unnamed32__
```

Public Members

```
uint32_t timestamp  
    FlexCAN internal Free-Running Counter Time Stamp.
```

uint32_t length

CAN FD frame data length code (DLC), range see `_flexcan_fd_frame_length`, When the length ≤ 8 , it equal to the data length, otherwise the number of valid frame data is not equal to the length value. user can use `DLC_LENGTH_DECODE(length)` macro to get the number of valid data bytes.

uint32_t type

CAN Frame Type(DATA only).

uint32_t format

CAN Frame Identifier(STD or EXT format).

uint32_t srr

Substitute Remote request.

uint32_t esi

Error State Indicator.

uint32_t brs

Bit Rate Switch.

uint32_t edl

Extended Data Length.

struct `__unnamed34__`

Public Members

uint32_t id

CAN Frame Identifier, should be set using `FLEXCAN_ID_EXT()` or `FLEXCAN_ID_STD()` macro.

uint32_t `__pad0__`

Reserved.

union `__unnamed36__`

Public Members

struct `_flexcan_fd_frame`

struct `_flexcan_fd_frame`

struct `__unnamed38__`

Public Members

uint32_t dataWord[16]

CAN FD Frame payload, 16 double word maximum.

struct `__unnamed40__`

Public Members

uint8_t dataByte3

CAN Frame payload byte3.

```

uint8_t dataByte2
    CAN Frame payload byte2.
uint8_t dataByte1
    CAN Frame payload byte1.
uint8_t dataByte0
    CAN Frame payload byte0.
uint8_t dataByte7
    CAN Frame payload byte7.
uint8_t dataByte6
    CAN Frame payload byte6.
uint8_t dataByte5
    CAN Frame payload byte5.
uint8_t dataByte4
    CAN Frame payload byte4.
union __unnamed42__

```

Public Members

```

struct _flexcan_config
struct _flexcan_config
struct __unnamed44__

```

Public Members

```

uint32_t baudRate
    FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.
uint32_t baudRateFD
    FlexCAN FD bit rate in bps, for CANFD data phase.
struct __unnamed46__

```

Public Members

```

uint32_t bitRate
    FlexCAN bit rate in bps, for classical CAN or CANFD nominal phase.
uint32_t bitRateFD
    FlexCAN FD bit rate in bps, for CANFD data phase.
union __unnamed48__

```

Public Members

```

struct _flexcan_pn_config
    < The data target values 1 which used either for data match “equal to”, “smaller than”,
    “greater than” comparisons, or as the lower limit value in data match “range
    detection”.

```

```
struct __flexcan_pn_config
```

```
struct __unnamed52__
```

< The data target values 1 which used either for data match “equal to”, “smaller than”, “greater than” comparisons, or as the lower limit value in data match “range detection”.

Public Members

```
uint32_t lowerWord0  
    CAN Frame payload word0.
```

```
uint32_t lowerWord1  
    CAN Frame payload word1.
```

```
struct __unnamed54__
```

Public Members

```
uint8_t lowerByte3  
    CAN Frame payload byte3.
```

```
uint8_t lowerByte2  
    CAN Frame payload byte2.
```

```
uint8_t lowerByte1  
    CAN Frame payload byte1.
```

```
uint8_t lowerByte0  
    CAN Frame payload byte0.
```

```
uint8_t lowerByte7  
    CAN Frame payload byte7.
```

```
uint8_t lowerByte6  
    CAN Frame payload byte6.
```

```
uint8_t lowerByte5  
    CAN Frame payload byte5.
```

```
uint8_t lowerByte4  
    CAN Frame payload byte4.
```

```
union __unnamed50__
```

Public Members

```
struct __flexcan_pn_config
```

< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

```
struct __flexcan_pn_config
```

```
struct __unnamed56__
```

< The data target values 2 which used only as the upper limit value in data match “range detection” or used to store the data mask in “equal to”.

Public Members

uint32_t upperWord0
CAN Frame payload word0.

uint32_t upperWord1
CAN Frame payload word1.

struct __unnamed58__

Public Members

uint8_t upperByte3
CAN Frame payload byte3.

uint8_t upperByte2
CAN Frame payload byte2.

uint8_t upperByte1
CAN Frame payload byte1.

uint8_t upperByte0
CAN Frame payload byte0.

uint8_t upperByte7
CAN Frame payload byte7.

uint8_t upperByte6
CAN Frame payload byte6.

uint8_t upperByte5
CAN Frame payload byte5.

uint8_t upperByte4
CAN Frame payload byte4.

2.16 FlexCAN eDMA Driver

```
void FLEXCAN_TransferCreateHandleEDMA(CAN_Type *base, flexcan_edma_handle_t *handle,
                                       flexcan_edma_transfer_callback_t callback, void
                                       *userData, edma_handle_t *rxFifoEdmaHandle)
```

Initializes the FlexCAN handle, which is used in transactional functions.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- callback – The callback function.
- userData – The parameter of the callback function.
- rxFifoEdmaHandle – User-requested DMA handle for Rx FIFO DMA transfer.

```
void FLEXCAN_PrepareTransfConfiguration(CAN_Type *base, flexcan_fifo_transfer_t *pFifoXfer,
                                       edma_transfer_config_t *pEdmaConfig)
```

Prepares the eDMA transfer configuration for FLEXCAN Legacy RX FIFO.

This function prepares the eDMA transfer configuration structure according to FLEXCAN Legacy RX FIFO.

Parameters

- base – FlexCAN peripheral base address.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

status_t FLEXCAN_StartTransferDatafromRxFIFO(CAN_Type *base, flexcan_edma_handle_t *handle, edma_transfer_config_t *pEdmaConfig)

Start Transfer Data from the FLEXCAN Legacy Rx FIFO using eDMA.

This function to Update edma transfer configuration and Start eDMA transfer

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pEdmaConfig – The user configuration structure of type edma_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferReceiveFifoEDMA(CAN_Type *base, flexcan_edma_handle_t *handle, flexcan_fifo_transfer_t *pFifoXfer)

Receives the CAN Message from the Legacy Rx FIFO using eDMA.

This function receives the CAN Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

status_t FLEXCAN_TransferGetReceiveFifoCountEMDA(CAN_Type *base, flexcan_edma_handle_t *handle, size_t *count)

Gets the Legacy Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

```
void FLEXCAN_TransferAbortReceiveFifoEDMA(CAN_Type *base, flexcan_edma_handle_t
                                         *handle)
```

Aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

This function aborts the receive Legacy/Enhanced Rx FIFO process which used eDMA.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.

```
status_t FLEXCAN_TransferReceiveEnhancedFifoEDMA(CAN_Type *base, flexcan_edma_handle_t
                                                *handle, flexcan_fifo_transfer_t
                                                *pFifoXfer)
```

Receives the CAN FD Message from the Enhanced Rx FIFO using eDMA.

This function receives the CAN FD Message using eDMA. This is a non-blocking function, which returns right away. After the CAN Message is received, the receive callback function is called.

Parameters

- base – FlexCAN peripheral base address.
- handle – Pointer to flexcan_edma_handle_t structure.
- pFifoXfer – FlexCAN Rx FIFO EDMA transfer structure, see flexcan_fifo_transfer_t.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXCAN_RxFifoBusy – Previous transfer ongoing.

```
static inline status_t FLEXCAN_TransferGetReceiveEnhancedFifoCountEMDA(CAN_Type *base,
                                                                       flex-
                                                                       can_edma_handle_t
                                                                       *handle, size_t
                                                                       *count)
```

Gets the Enhanced Rx Fifo transfer status during a interrupt non-blocking receive.

Parameters

- base – FlexCAN peripheral base address.
- handle – FlexCAN handle pointer.
- count – Number of CAN messages receive so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.
- kStatus_Success – Successfully return the count.

```
FSL_FLEXCAN_EDMA_DRIVER_VERSION
```

FlexCAN EDMA driver version.

```
typedef struct flexcan_edma_handle flexcan_edma_handle_t
```

```
typedef void (*flexcan_edma_transfer_callback_t)(CAN_Type *base, flexcan_edma_handle_t
*handle, status_t status, void *userData)
```

FlexCAN transfer callback function.

```
struct flexcan_edma_handle
```

```
#include <fsl_flexcan_edma.h> FlexCAN eDMA handle.
```

Public Members

flexcan_edma_transfer_callback_t callback

Callback function.

void *userData

FlexCAN callback function parameter.

edma_handle_t *rxFifoEdmaHandle

The EDMA handler for Rx FIFO.

volatile uint8_t rxFifoState

Rx FIFO transfer state.

size_t frameNum

The number of messages that need to be received.

flexcan_fd_frame_t *framefd

Point to the buffer of CAN Message to be received from Enhanced Rx FIFO.

2.17 FlexIO: FlexIO Driver

2.18 FlexIO Driver

void FLEXIO_GetDefaultConfig(*flexio_config_t* *userConfig)

Gets the default configuration to configure the FlexIO module. The configuration can be used directly to call the FLEXIO_Configure().

Example:

```
flexio_config_t config;
FLEXIO_GetDefaultConfig(&config);
```

Parameters

- userConfig – pointer to flexio_config_t structure

void FLEXIO_Init(FLEXIO_Type *base, const *flexio_config_t* *userConfig)

Configures the FlexIO with a FlexIO configuration. The configuration structure can be filled by the user or be set with default values by FLEXIO_GetDefaultConfig().

Example

```
flexio_config_t config = {
    .enableFlexio = true,
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false
};
FLEXIO_Configure(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- userConfig – pointer to flexio_config_t structure


```
void FLEXIO_Deinit(FLEXIO_Type *base)
```

Gates the FlexIO clock. Call this API to stop the FlexIO clock.

Note: After calling this API, call the FLEXIO_Init to use the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
uint32_t FLEXIO_GetInstance(FLEXIO_Type *base)
```

Get instance number for FLEXIO module.

Parameters

- base – FLEXIO peripheral base address.

```
void FLEXIO_Reset(FLEXIO_Type *base)
```

Resets the FlexIO module.

Parameters

- base – FlexIO peripheral base address

```
static inline void FLEXIO_Enable(FLEXIO_Type *base, bool enable)
```

Enables the FlexIO module operation.

Parameters

- base – FlexIO peripheral base address
- enable – true to enable, false to disable.

```
static inline uint32_t FLEXIO_ReadPinInput(FLEXIO_Type *base)
```

Reads the input data on each of the FlexIO pins.

Parameters

- base – FlexIO peripheral base address

Returns

FlexIO pin input data

```
static inline uint8_t FLEXIO_GetShifterState(FLEXIO_Type *base)
```

Gets the current state pointer for state mode use.

Parameters

- base – FlexIO peripheral base address

Returns

current State pointer

```
void FLEXIO_SetShifterConfig(FLEXIO_Type *base, uint8_t index, const flexio_shifter_config_t *shifterConfig)
```

Configures the shifter with the shifter configuration. The configuration structure covers both the SHIFTCTL and SHIFTCFG registers. To configure the shifter to the proper mode, select which timer controls the shifter to shift, whether to generate start bit/stop bit, and the polarity of start bit and stop bit.

Example

```
flexio_shifter_config_t config = {
    .timerSelect = 0,
    .timerPolarity = kFLEXIO_ShifterTimerPolarityOnPositive,
    .pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
```

(continues on next page)

(continued from previous page)

```
.pinPolarity = kFLEXIO_PinActiveLow,
.shifterMode = kFLEXIO_ShifterModeTransmit,
.inputSource = kFLEXIO_ShifterInputFromPin,
.shifterStop = kFLEXIO_ShifterStopBitHigh,
.shifterStart = kFLEXIO_ShifterStartBitLow
};
FLEXIO_SetShifterConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Shifter index
- shifterConfig – Pointer to flexio_shifter_config_t structure

```
void FLEXIO_SetTimerConfig(FLEXIO_Type *base, uint8_t index, const flexio_timer_config_t
                          *timerConfig)
```

Configures the timer with the timer configuration. The configuration structure covers both the TIMCTL and TIMCFG registers. To configure the timer to the proper mode, select trigger source for timer and the timer pin output and the timing for timer.

Example

```
flexio_timer_config_t config = {
.triggerSelect = FLEXIO_TIMER_TRIGGER_SEL_SHIFThnSTAT(0),
.triggerPolarity = kFLEXIO_TimerTriggerPolarityActiveLow,
.triggerSource = kFLEXIO_TimerTriggerSourceInternal,
.pinConfig = kFLEXIO_PinConfigOpenDrainOrBidirection,
.pinSelect = 0,
.pinPolarity = kFLEXIO_PinActiveHigh,
.timerMode = kFLEXIO_TimerModeDual8BitBaudBit,
.timerOutput = kFLEXIO_TimerOutputZeroNotAffectedByReset,
.timerDecrement = kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput,
.timerReset = kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput,
.timerDisable = kFLEXIO_TimerDisableOnTimerCompare,
.timerEnable = kFLEXIO_TimerEnableOnTriggerHigh,
.timerStop = kFLEXIO_TimerStopBitEnableOnTimerDisable,
.timerStart = kFLEXIO_TimerStartBitEnabled
};
FLEXIO_SetTimerConfig(base, &config);
```

Parameters

- base – FlexIO peripheral base address
- index – Timer index
- timerConfig – Pointer to the flexio_timer_config_t structure

```
static inline void FLEXIO_SetClockMode(FLEXIO_Type *base, uint8_t index,
                                       flexio_timer_decrement_source_t clocksource)
```

This function set the value of the prescaler on flexio channels.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- index – Timer index
- clocksource – Set clock value

```
static inline void FLEXIO_EnableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Enables the shifter status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_DisableShifterStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Disables the shifter status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple shifter status interrupt enable, for example, two shifter status enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_EnableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Enables the shifter error interrupt. The interrupt generates when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

```
static inline void FLEXIO_DisableShifterErrorInterrupts(FLEXIO_Type *base, uint32_t mask)
```

Disables the shifter error interrupt. The interrupt won't generate when the corresponding SEF is set.

Note: For multiple shifter error interrupt enable, for example, two shifter error enable, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

static inline void FLEXIO_EnableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Enables the timer status interrupt. The interrupt generates when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline void FLEXIO_DisableTimerStatusInterrupts(FLEXIO_Type *base, uint32_t mask)
Disables the timer status interrupt. The interrupt won't generate when the corresponding SSF is set.

Note: For multiple timer status interrupt enable, for example, two timer status enable, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline uint32_t FLEXIO_GetShifterStatusFlags(FLEXIO_Type *base)
Gets the shifter status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter status flags

static inline void FLEXIO_ClearShifterStatusFlags(FLEXIO_Type *base, uint32_t mask)
Clears the shifter status flags.

Note: For clearing multiple shifter status flags, for example, two shifter status flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$

static inline uint32_t FLEXIO_GetShifterErrorFlags(FLEXIO_Type *base)
Gets the shifter error flags.

Parameters

- base – FlexIO peripheral base address

Returns

Shifter error flags

static inline void FLEXIO_ClearShifterErrorFlags(FLEXIO_Type *base, uint32_t mask)

Clears the shifter error flags.

Note: For clearing multiple shifter error flags, for example, two shifter error flags, can calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter error mask which can be calculated by $(1 \ll \text{shifter index})$

static inline uint32_t FLEXIO_GetTimerStatusFlags(FLEXIO_Type *base)

Gets the timer status flags.

Parameters

- base – FlexIO peripheral base address

Returns

Timer status flags

static inline void FLEXIO_ClearTimerStatusFlags(FLEXIO_Type *base, uint32_t mask)

Clears the timer status flags.

Note: For clearing multiple timer status flags, for example, two timer status flags, can calculate the mask by using $((1 \ll \text{timer index0}) | (1 \ll \text{timer index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The timer status mask which can be calculated by $(1 \ll \text{timer index})$

static inline void FLEXIO_EnableShifterStatusDMA(FLEXIO_Type *base, uint32_t mask, bool enable)

Enables/disables the shifter status DMA. The DMA request generates when the corresponding SSF is set.

Note: For multiple shifter status DMA enables, for example, calculate the mask by using $((1 \ll \text{shifter index0}) | (1 \ll \text{shifter index1}))$

Parameters

- base – FlexIO peripheral base address
- mask – The shifter status mask which can be calculated by $(1 \ll \text{shifter index})$
- enable – True to enable, false to disable.

uint32_t FLEXIO_GetShifterBufferAddress(FLEXIO_Type *base, flexio_shifter_buffer_type_t type, uint8_t index)

Gets the shifter buffer address for the DMA transfer usage.

Parameters

- base – FlexIO peripheral base address
- type – Shifter type of flexio_shifter_buffer_type_t

- index – Shifter index

Returns

Corresponding shifter buffer index

`status_t FLEXIO_RegisterHandleIRQ(void *base, void *handle, flexio_isr_t isr)`

Registers the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.
- handle – Pointer to the handler for FlexIO simulated peripheral.
- isr – FlexIO simulated peripheral interrupt handler.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`status_t FLEXIO_UnregisterHandleIRQ(void *base)`

Unregisters the handle and the interrupt handler for the FlexIO-simulated peripheral.

Parameters

- base – Pointer to the FlexIO simulated peripheral type.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`static inline void FLEXIO_ClearPortOutput(FLEXIO_Type *base, uint32_t mask)`

Sets the output level of the multiple FLEXIO pins to the logic 0.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_SetPortOutput(FLEXIO_Type *base, uint32_t mask)`

Sets the output level of the multiple FLEXIO pins to the logic 1.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_TogglePortOutput(FLEXIO_Type *base, uint32_t mask)`

Reverses the current output logic of the multiple FLEXIO pins.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

`static inline void FLEXIO_PinWrite(FLEXIO_Type *base, uint32_t pin, uint8_t output)`

Sets the output level of the FLEXIO pins to the logic 1 or 0.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.
- output – FLEXIO pin output logic level.

- 0: corresponding pin output low-logic level.
- 1: corresponding pin output high-logic level.

static inline void FLEXIO_EnablePinOutput(FLEXIO_Type *base, uint32_t pin)

Enables the FLEXIO output pin function.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

static inline uint32_t FLEXIO_PinRead(FLEXIO_Type *base, uint32_t pin)

Reads the current input value of the FLEXIO pin.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

static inline uint32_t FLEXIO_GetPinStatus(FLEXIO_Type *base, uint32_t pin)

Gets the FLEXIO input pin status.

Parameters

- base – FlexIO peripheral base address
- pin – FLEXIO pin number.

Return values

FLEXIO – port input status

- 0: corresponding pin input capture no status.
- 1: corresponding pin input capture rising or falling edge.

static inline void FLEXIO_SetPinLevel(FLEXIO_Type *base, uint8_t pin, bool level)

Sets the FLEXIO output pin level.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.
- level – FlexIO output pin level to set, can be either 0 or 1.

static inline bool FLEXIO_GetPinOverride(const FLEXIO_Type *const base, uint8_t pin)

Gets the enabled status of a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – FlexIO pin number.

Return values

FlexIO – port enabled status

- 0: corresponding output pin is in disabled state.
- 1: corresponding output pin is in enabled state.

static inline void FLEXIO_ConfigPinOverride(FLEXIO_Type *base, uint8_t pin, bool enabled)

Enables or disables a FLEXIO output pin.

Parameters

- base – FlexIO peripheral base address
- pin – Flexio pin number.
- enabled – Enable or disable the FlexIO pin.

static inline void FLEXIO_ClearPortStatus(FLEXIO_Type *base, uint32_t mask)

Clears the multiple FLEXIO input pins status.

Parameters

- base – FlexIO peripheral base address
- mask – FLEXIO pin number mask

FSL_FLEXIO_DRIVER_VERSION

FlexIO driver version.

enum _flexio_timer_trigger_polarity

Define time of timer trigger polarity.

Values:

enumerator kFLEXIO_TimerTriggerPolarityActiveHigh
Active high.

enumerator kFLEXIO_TimerTriggerPolarityActiveLow
Active low.

enum _flexio_timer_trigger_source

Define type of timer trigger source.

Values:

enumerator kFLEXIO_TimerTriggerSourceExternal
External trigger selected.

enumerator kFLEXIO_TimerTriggerSourceInternal
Internal trigger selected.

enum _flexio_pin_config

Define type of timer/shifter pin configuration.

Values:

enumerator kFLEXIO_PinConfigOutputDisabled
Pin output disabled.

enumerator kFLEXIO_PinConfigOpenDrainOrBidirection
Pin open drain or bidirectional output enable.

enumerator kFLEXIO_PinConfigBidirectionOutputData
Pin bidirectional output data.

enumerator kFLEXIO_PinConfigOutput
Pin output.

enum _flexio_pin_polarity

Definition of pin polarity.

Values:

enumerator kFLEXIO_PinActiveHigh
Active high.

enumerator kFLEXIO_PinActiveLow
Active low.

enum _flexio_timer_mode
Define type of timer work mode.

Values:

enumerator kFLEXIO_TimerModeDisabled
Timer Disabled.

enumerator kFLEXIO_TimerModeDual8BitBaudBit
Dual 8-bit counters baud/bit mode.

enumerator kFLEXIO_TimerModeDual8BitPWM
Dual 8-bit counters PWM mode.

enumerator kFLEXIO_TimerModeSingle16Bit
Single 16-bit counter mode.

enumerator kFLEXIO_TimerModeDual8BitPWMLow
Dual 8-bit counters PWM Low mode.

enum _flexio_timer_output
Define type of timer initial output or timer reset condition.

Values:

enumerator kFLEXIO_TimerOutputOneNotAffectedByReset
Logic one when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputZeroNotAffectedByReset
Logic zero when enabled and is not affected by timer reset.

enumerator kFLEXIO_TimerOutputOneAffectedByReset
Logic one when enabled and on timer reset.

enumerator kFLEXIO_TimerOutputZeroAffectedByReset
Logic zero when enabled and on timer reset.

enum _flexio_timer_decrement_source
Define type of timer decrement.

Values:

enumerator kFLEXIO_TimerDecSrcOnFlexIOClockShiftTimerOutput
Decrement counter on FlexIO clock, Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTimerOutput
Decrement counter on Trigger input (both edges), Shift clock equals Timer output.

enumerator kFLEXIO_TimerDecSrcOnPinInputShiftPinInput
Decrement counter on Pin input (both edges), Shift clock equals Pin input.

enumerator kFLEXIO_TimerDecSrcOnTriggerInputShiftTriggerInput
Decrement counter on Trigger input (both edges), Shift clock equals Trigger input.

enum _flexio_timer_reset_condition
Define type of timer reset condition.

Values:

enumerator kFLEXIO_TimerResetNever

Timer never reset.

enumerator kFLEXIO_TimerResetOnTimerPinEqualToTimerOutput

Timer reset on Timer Pin equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerTriggerEqualToTimerOutput

Timer reset on Timer Trigger equal to Timer Output.

enumerator kFLEXIO_TimerResetOnTimerPinRisingEdge

Timer reset on Timer Pin rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerRisingEdge

Timer reset on Trigger rising edge.

enumerator kFLEXIO_TimerResetOnTimerTriggerBothEdge

Timer reset on Trigger rising or falling edge.

enum _flexio_timer_disable_condition

Define type of timer disable condition.

Values:

enumerator kFLEXIO_TimerDisableNever

Timer never disabled.

enumerator kFLEXIO_TimerDisableOnPreTimerDisable

Timer disabled on Timer N-1 disable.

enumerator kFLEXIO_TimerDisableOnTimerCompare

Timer disabled on Timer compare.

enumerator kFLEXIO_TimerDisableOnTimerCompareTriggerLow

Timer disabled on Timer compare and Trigger Low.

enumerator kFLEXIO_TimerDisableOnPinBothEdge

Timer disabled on Pin rising or falling edge.

enumerator kFLEXIO_TimerDisableOnPinBothEdgeTriggerHigh

Timer disabled on Pin rising or falling edge provided Trigger is high.

enumerator kFLEXIO_TimerDisableOnTriggerFallingEdge

Timer disabled on Trigger falling edge.

enum _flexio_timer_enable_condition

Define type of timer enable condition.

Values:

enumerator kFLEXIO_TimerEnabledAlways

Timer always enabled.

enumerator kFLEXIO_TimerEnableOnPrevTimerEnable

Timer enabled on Timer N-1 enable.

enumerator kFLEXIO_TimerEnableOnTriggerHigh

Timer enabled on Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerHighPinHigh

Timer enabled on Trigger high and Pin high.

enumerator kFLEXIO_TimerEnableOnPinRisingEdge

Timer enabled on Pin rising edge.

enumerator kFLEXIO_TimerEnableOnPinRisingEdgeTriggerHigh
Timer enabled on Pin rising edge and Trigger high.

enumerator kFLEXIO_TimerEnableOnTriggerRisingEdge
Timer enabled on Trigger rising edge.

enumerator kFLEXIO_TimerEnableOnTriggerBothEdge
Timer enabled on Trigger rising or falling edge.

enum _flexio_timer_stop_bit_condition
Define type of timer stop bit generate condition.

Values:

enumerator kFLEXIO_TimerStopBitDisabled
Stop bit disabled.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompare
Stop bit is enabled on timer compare.

enumerator kFLEXIO_TimerStopBitEnableOnTimerDisable
Stop bit is enabled on timer disable.

enumerator kFLEXIO_TimerStopBitEnableOnTimerCompareDisable
Stop bit is enabled on timer compare and timer disable.

enum _flexio_timer_start_bit_condition
Define type of timer start bit generate condition.

Values:

enumerator kFLEXIO_TimerStartBitDisabled
Start bit disabled.

enumerator kFLEXIO_TimerStartBitEnabled
Start bit enabled.

enum _flexio_timer_output_state
FlexIO as PWM channel output state.

Values:

enumerator kFLEXIO_PwmLow
The output state of PWM channel is low

enumerator kFLEXIO_PwmHigh
The output state of PWM channel is high

enum _flexio_shifter_timer_polarity
Define type of timer polarity for shifter control.

Values:

enumerator kFLEXIO_ShifterTimerPolarityOnPositive
Shift on positive edge of shift clock.

enumerator kFLEXIO_ShifterTimerPolarityOnNegative
Shift on negative edge of shift clock.

enum _flexio_shifter_mode
Define type of shifter working mode.

Values:

enumerator kFLEXIO__ShifterDisabled
Shifter is disabled.

enumerator kFLEXIO__ShifterModeReceive
Receive mode.

enumerator kFLEXIO__ShifterModeTransmit
Transmit mode.

enumerator kFLEXIO__ShifterModeMatchStore
Match store mode.

enumerator kFLEXIO__ShifterModeMatchContinuous
Match continuous mode.

enumerator kFLEXIO__ShifterModeState
SHIFTBUF contents are used for storing programmable state attributes.

enumerator kFLEXIO__ShifterModeLogic
SHIFTBUF contents are used for implementing programmable logic look up table.

enum _flexio_shifter_input_source
Define type of shifter input source.

Values:

enumerator kFLEXIO__ShifterInputFromPin
Shifter input from pin.

enumerator kFLEXIO__ShifterInputFromNextShifterOutput
Shifter input from Shifter N+1.

enum _flexio_shifter_stop_bit
Define of STOP bit configuration.

Values:

enumerator kFLEXIO__ShifterStopBitDisable
Disable shifter stop bit.

enumerator kFLEXIO__ShifterStopBitLow
Set shifter stop bit to logic low level.

enumerator kFLEXIO__ShifterStopBitHigh
Set shifter stop bit to logic high level.

enum _flexio_shifter_start_bit
Define type of START bit configuration.

Values:

enumerator kFLEXIO__ShifterStartBitDisabledLoadDataOnEnable
Disable shifter start bit, transmitter loads data on enable.

enumerator kFLEXIO__ShifterStartBitDisabledLoadDataOnShift
Disable shifter start bit, transmitter loads data on first shift.

enumerator kFLEXIO__ShifterStartBitLow
Set shifter start bit to logic low level.

enumerator kFLEXIO__ShifterStartBitHigh
Set shifter start bit to logic high level.

enum `_flexio_shifter_buffer_type`

Define FlexIO shifter buffer type.

Values:

enumerator `kFLEXIO_ShifterBuffer`

Shifter Buffer N Register.

enumerator `kFLEXIO_ShifterBufferBitSwapped`

Shifter Buffer N Bit Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferByteSwapped`

Shifter Buffer N Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferBitByteSwapped`

Shifter Buffer N Bit Swapped Register.

enumerator `kFLEXIO_ShifterBufferNibbleByteSwapped`

Shifter Buffer N Nibble Byte Swapped Register.

enumerator `kFLEXIO_ShifterBufferHalfWordSwapped`

Shifter Buffer N Half Word Swapped Register.

enumerator `kFLEXIO_ShifterBufferNibbleSwapped`

Shifter Buffer N Nibble Swapped Register.

enum `_flexio_gpio_direction`

FLEXIO gpio direction definition.

Values:

enumerator `kFLEXIO_DigitalInput`

Set current pin as digital input

enumerator `kFLEXIO_DigitalOutput`

Set current pin as digital output

enum `_flexio_pin_input_config`

FLEXIO gpio input config.

Values:

enumerator `kFLEXIO_InputInterruptDisabled`

Interrupt request is disabled.

enumerator `kFLEXIO_InputInterruptEnable`

Interrupt request is enable.

enumerator `kFLEXIO_FlagRisingEdgeEnable`

Input pin flag on rising edge.

enumerator `kFLEXIO_FlagFallingEdgeEnable`

Input pin flag on falling edge.

typedef enum `_flexio_timer_trigger_polarity` `flexio_timer_trigger_polarity_t`

Define time of timer trigger polarity.

typedef enum `_flexio_timer_trigger_source` `flexio_timer_trigger_source_t`

Define type of timer trigger source.

typedef enum `_flexio_pin_config` `flexio_pin_config_t`

Define type of timer/shifter pin configuration.

typedef enum *_flexio_pin_polarity* flexio_pin_polarity_t

Definition of pin polarity.

typedef enum *_flexio_timer_mode* flexio_timer_mode_t

Define type of timer work mode.

typedef enum *_flexio_timer_output* flexio_timer_output_t

Define type of timer initial output or timer reset condition.

typedef enum *_flexio_timer_decrement_source* flexio_timer_decrement_source_t

Define type of timer decrement.

typedef enum *_flexio_timer_reset_condition* flexio_timer_reset_condition_t

Define type of timer reset condition.

typedef enum *_flexio_timer_disable_condition* flexio_timer_disable_condition_t

Define type of timer disable condition.

typedef enum *_flexio_timer_enable_condition* flexio_timer_enable_condition_t

Define type of timer enable condition.

typedef enum *_flexio_timer_stop_bit_condition* flexio_timer_stop_bit_condition_t

Define type of timer stop bit generate condition.

typedef enum *_flexio_timer_start_bit_condition* flexio_timer_start_bit_condition_t

Define type of timer start bit generate condition.

typedef enum *_flexio_timer_output_state* flexio_timer_output_state_t

FlexIO as PWM channel output state.

typedef enum *_flexio_shifter_timer_polarity* flexio_shifter_timer_polarity_t

Define type of timer polarity for shifter control.

typedef enum *_flexio_shifter_mode* flexio_shifter_mode_t

Define type of shifter working mode.

typedef enum *_flexio_shifter_input_source* flexio_shifter_input_source_t

Define type of shifter input source.

typedef enum *_flexio_shifter_stop_bit* flexio_shifter_stop_bit_t

Define of STOP bit configuration.

typedef enum *_flexio_shifter_start_bit* flexio_shifter_start_bit_t

Define type of START bit configuration.

typedef enum *_flexio_shifter_buffer_type* flexio_shifter_buffer_type_t

Define FlexIO shifter buffer type.

typedef struct *_flexio_config* flexio_config_t

Define FlexIO user configuration structure.

typedef struct *_flexio_timer_config* flexio_timer_config_t

Define FlexIO timer configuration structure.

typedef struct *_flexio_shifter_config* flexio_shifter_config_t

Define FlexIO shifter configuration structure.

typedef enum *_flexio_gpio_direction* flexio_gpio_direction_t

FLEXIO gpio direction definition.

typedef enum *_flexio_pin_input_config* flexio_pin_input_config_t

FLEXIO gpio input config.

```
typedef struct flexio_gpio_config flexio_gpio_config_t
```

The FLEXIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use `inputConfig` param. If configured as an output pin, use `outputLogic`.

```
typedef void (*flexio_isr_t)(void *base, void *handle)
```

typedef for FlexIO simulated driver interrupt handler.

```
FLEXIO_Type *const s_flexioBases[]
```

Pointers to flexio bases for each instance.

```
const clock_ip_name_t s_flexioClocks[]
```

Pointers to flexio clocks for each instance.

```
void FLEXIO_SetPinConfig(FLEXIO_Type *base, uint32_t pin, flexio_gpio_config_t *config)
```

Configure a FLEXIO pin used by the board.

To Config the FLEXIO PIN, define a pin configuration, as either input or output, in the user file. Then, call the `FLEXIO_SetPinConfig()` function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
flexio_gpio_config_t config =
{
    kFLEXIO_DigitalInput,
    0U,
    kFLEXIO_FlagRisingEdgeEnable | kFLEXIO_InputInterruptEnable,
}
Define a digital output pin configuration,
flexio_gpio_config_t config =
{
    kFLEXIO_DigitalOutput,
    0U,
    0U
}
```

Parameters

- `base` – FlexIO peripheral base address
- `pin` – FLEXIO pin number.
- `config` – FLEXIO pin configuration pointer.

```
FLEXIO_TIMER_TRIGGER_SEL_PININPUT(x)
```

Calculate FlexIO timer trigger.

```
FLEXIO_TIMER_TRIGGER_SEL_SHIFTnSTAT(x)
```

```
FLEXIO_TIMER_TRIGGER_SEL_TIMn(x)
```

```
struct flexio_config
```

`#include <fsl_flexio.h>` Define FlexIO user configuration structure.

Public Members

```
bool enableFlexio
```

Enable/disable FlexIO module

`bool enableInDoze`
Enable/disable FlexIO operation in doze mode

`bool enableInDebug`
Enable/disable FlexIO operation in debug mode

`bool enableFastAccess`
Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

`struct _flexio_timer_config`
#include <fsl_flexio.h> Define FlexIO timer configuration structure.

Public Members

`uint32_t triggerSelect`
The internal trigger selection number using MACROs.

`flexio_timer_trigger_polarity_t triggerPolarity`
Trigger Polarity.

`flexio_timer_trigger_source_t triggerSource`
Trigger Source, internal (see 'trgsel') or external.

`flexio_pin_config_t pinConfig`
Timer Pin Configuration.

`uint32_t pinSelect`
Timer Pin number Select.

`flexio_pin_polarity_t pinPolarity`
Timer Pin Polarity.

`flexio_timer_mode_t timerMode`
Timer work Mode.

`flexio_timer_output_t timerOutput`
Configures the initial state of the Timer Output and whether it is affected by the Timer reset.

`flexio_timer_decrement_source_t timerDecrement`
Configures the source of the Timer decrement and the source of the Shift clock.

`flexio_timer_reset_condition_t timerReset`
Configures the condition that causes the timer counter (and optionally the timer output) to be reset.

`flexio_timer_disable_condition_t timerDisable`
Configures the condition that causes the Timer to be disabled and stop decrementing.

`flexio_timer_enable_condition_t timerEnable`
Configures the condition that causes the Timer to be enabled and start decrementing.

`flexio_timer_stop_bit_condition_t timerStop`
Timer STOP Bit generation.

`flexio_timer_start_bit_condition_t timerStart`
Timer STRAT Bit generation.

`uint32_t timerCompare`
Value for Timer Compare N Register.


```
struct _flexio_shifter_config
```

```
#include <fsl_flexio.h> Define FlexIO shifter configuration structure.
```

Public Members

```
uint32_t timerSelect
```

Selects which Timer is used for controlling the logic/shift register and generating the Shift clock.

```
flexio_shifter_timer_polarity_t timerPolarity
```

Timer Polarity.

```
flexio_pin_config_t pinConfig
```

Shifter Pin Configuration.

```
uint32_t pinSelect
```

Shifter Pin number Select.

```
flexio_pin_polarity_t pinPolarity
```

Shifter Pin Polarity.

```
flexio_shifter_mode_t shifterMode
```

Configures the mode of the Shifter.

```
uint32_t parallelWidth
```

Configures the parallel width when using parallel mode.

```
flexio_shifter_input_source_t inputSource
```

Selects the input source for the shifter.

```
flexio_shifter_stop_bit_t shifterStop
```

Shifter STOP bit.

```
flexio_shifter_start_bit_t shifterStart
```

Shifter START bit.

```
struct _flexio_gpio_config
```

```
#include <fsl_flexio.h> The FLEXIO pin configuration structure.
```

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, use inputConfig param. If configured as an output pin, use outputLogic.

Public Members

```
flexio_gpio_direction_t pinDirection
```

FLEXIO pin direction, input or output

```
uint8_t outputLogic
```

Set a default output logic, which has no use in input

```
uint8_t inputConfig
```

Set an input config

2.19 FlexIO eDMA I2S Driver

```
void FLEXIO_I2S_TransferTxCreateHandleEDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_edma_handle_t *handle,  
                                           flexio_i2s_edma_callback_t callback, void  
                                           *userData, edma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S eDMA handle.

This function initializes the FlexIO I2S master DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer.
- callback – FlexIO I2S eDMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – eDMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferRxCreateHandleEDMA(FLEXIO_I2S_Type *base,  
                                           flexio_i2s_edma_handle_t *handle,  
                                           flexio_i2s_edma_callback_t callback, void  
                                           *userData, edma_handle_t *dmaHandle)
```

Initializes the FlexIO I2S Rx eDMA handle.

This function initializes the FlexIO I2S slave DMA handle which can be used for other FlexIO I2S master transactional APIs. Usually, for a specified FlexIO I2S instance, call this API once to get the initialized handle.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer.
- callback – FlexIO I2S eDMA callback function called while finished a block.
- userData – User parameter for callback.
- dmaHandle – eDMA handle for FlexIO I2S. This handle is a static value allocated by users.

```
void FLEXIO_I2S_TransferSetFormatEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t  
                                       *handle, flexio_i2s_format_t *format, uint32_t  
                                       srcClock_Hz)
```

Configures the FlexIO I2S Tx audio format.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred. This function also sets the eDMA parameter according to format.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S eDMA handle pointer
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – FlexIO I2S clock source frequency in Hz, it should be 0 while in slave mode.

```
status_t FLEXIO_I2S_TransferSendEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                     *handle, flexio_i2s_transfer_t *xfer)
```

Performs a non-blocking FlexIO I2S transfer using DMA.

Note: This interface returned immediately after transfer initiates. Users should call FLEXIO_I2S_GetTransferStatus to poll the transfer status and check whether the FlexIO I2S transfer is finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S eDMA send successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_TxBusy – FlexIO I2S is busy sending data.

```
status_t FLEXIO_I2S_TransferReceiveEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                         *handle, flexio_i2s_transfer_t *xfer)
```

Performs a non-blocking FlexIO I2S receive using eDMA.

Note: This interface returned immediately after transfer initiates. Users should call FLEXIO_I2S_GetReceiveRemainingBytes to poll the transfer status and check whether the FlexIO I2S transfer is finished.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- xfer – Pointer to DMA transfer structure.

Return values

- kStatus_Success – Start a FlexIO I2S eDMA receive successfully.
- kStatus_InvalidArgument – The input arguments is invalid.
- kStatus_RxBusy – FlexIO I2S is busy receiving data.

```
void FLEXIO_I2S_TransferAbortSendEDMA(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t
                                       *handle)
```

Aborts a FlexIO I2S transfer using eDMA.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.

```
void FLEXIO_I2S_TransferAbortReceiveEDMA(FLEXIO_I2S_Type *base,
                                          flexio_i2s_edma_handle_t *handle)
```

Aborts a FlexIO I2S receive using eDMA.

Parameters

- base – FlexIO I2S peripheral base address.

- handle – FlexIO I2S DMA handle pointer.

```
status_t FLEXIO_I2S_TransferGetSendCountEDMA(FLEXIO_I2S_Type *base,  
                                              flexio_i2s_edma_handle_t *handle, size_t  
                                              *count)
```

Gets the remaining bytes to be sent.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

```
status_t FLEXIO_I2S_TransferGetReceiveCountEDMA(FLEXIO_I2S_Type *base,  
                                                 flexio_i2s_edma_handle_t *handle, size_t  
                                                 *count)
```

Get the remaining bytes to be received.

Parameters

- base – FlexIO I2S peripheral base address.
- handle – FlexIO I2S DMA handle pointer.
- count – Bytes received.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

FSL_FLEXIO_I2S_EDMA_DRIVER_VERSION

FlexIO I2S EDMA driver version 2.1.9.

```
typedef struct flexio_i2s_edma_handle flexio_i2s_edma_handle_t
```

```
typedef void (*flexio_i2s_edma_callback_t)(FLEXIO_I2S_Type *base, flexio_i2s_edma_handle_t  
*handle, status_t status, void *userData)
```

FlexIO I2S eDMA transfer callback function for finish and error.

```
struct flexio_i2s_edma_handle
```

```
#include <fsl_flexio_i2s_edma.h> FlexIO I2S DMA transfer handle, users should not touch the  
content of the handle.
```

Public Members

```
edma_handle_t *dmaHandle
```

DMA handler for FlexIO I2S send

```
uint8_t bytesPerFrame
```

Bytes in a frame

```
uint8_t nbytes
```

eDMA minor byte transfer count initially configured.

uint32_t state
Internal state for FlexIO I2S eDMA transfer

flexio_i2s_edma_callback_t callback
Callback for users while transfer finish or error occurred

void *userData
User callback parameter

edma_tcd_t tcd[(4U) + 1U]
TCD pool for eDMA transfer.

flexio_i2s_transfer_t queue[(4U)]
Transfer queue storing queued transfer.

size_t transferSize[(4U)]
Data bytes need to transfer

volatile uint8_t queueUser
Index for user to queue transfer.

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

2.20 FlexIO eDMA SPI Driver

status_t FLEXIO_SPI_MasterTransferCreateHandleEDMA(*FLEXIO_SPI_Type* *base,
flexio_spi_master_edma_handle_t
*handle,
flexio_spi_master_edma_transfer_callback_t
callback, void *userData,
edma_handle_t *txHandle,
edma_handle_t *rxHandle)

Initializes the FlexIO SPI master eDMA handle.

This function initializes the FlexIO SPI master eDMA handle which can be used for other FlexIO SPI master transactional APIs. For a specified FlexIO SPI instance, call this API once to get the initialized handle.

Parameters

- base – Pointer to *FLEXIO_SPI_Type* structure.
- handle – Pointer to *flexio_spi_master_edma_handle_t* structure to store the transfer state.
- callback – SPI callback, NULL means no callback.
- userData – callback function parameter.
- txHandle – User requested eDMA handle for FlexIO SPI RX eDMA transfer.
- rxHandle – User requested eDMA handle for FlexIO SPI TX eDMA transfer.

Return values

- *kStatus_Success* – Successfully create the handle.
- *kStatus_OutOfRange* – The FlexIO SPI eDMA type/handle table out of range.

```
status_t FLEXIO_SPI_MasterTransferEDMA(FLEXIO_SPI_Type *base,
                                       flexio_spi_master_edma_handle_t *handle,
                                       flexio_spi_transfer_t *xfer)
```

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call FLEXIO_SPI_MasterGetTransferCountEDMA to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – Pointer to flexio_spi_master_edma_handle_t structure to store the transfer state.
- xfer – Pointer to FlexIO SPI transfer structure.

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_InvalidArgument – Input argument is invalid.
- kStatus_FLEXIO_SPI_Busy – FlexIO SPI is not idle, is running another transfer.

```
void FLEXIO_SPI_MasterTransferAbortEDMA(FLEXIO_SPI_Type *base,
                                         flexio_spi_master_edma_handle_t *handle)
```

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.

```
status_t FLEXIO_SPI_MasterTransferGetCountEDMA(FLEXIO_SPI_Type *base,
                                               flexio_spi_master_edma_handle_t *handle,
                                               size_t *count)
```

Gets the number of bytes transferred so far using FlexIO SPI master eDMA.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.
- handle – FlexIO SPI eDMA handle pointer.
- count – Number of bytes transferred so far by the non-blocking transaction.

```
static inline void FLEXIO_SPI_SlaveTransferCreateHandleEDMA(FLEXIO_SPI_Type *base,
                                                           flexio_spi_slave_edma_handle_t
                                                           *handle,
                                                           flexio_spi_slave_edma_transfer_callback_t
                                                           callback, void *userData,
                                                           edma_handle_t *txHandle,
                                                           edma_handle_t *rxHandle)
```

Initializes the FlexIO SPI slave eDMA handle.

This function initializes the FlexIO SPI slave eDMA handle.

Parameters

- base – Pointer to FLEXIO_SPI_Type structure.

- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.
- `callback` – SPI callback, NULL means no callback.
- `userData` – callback function parameter.
- `txHandle` – User requested eDMA handle for FlexIO SPI TX eDMA transfer.
- `rxHandle` – User requested eDMA handle for FlexIO SPI RX eDMA transfer.

```
status_t FLEXIO_SPI_SlaveTransferEDMA(FLEXIO_SPI_Type *base,
                                     flexio_spi_slave_edma_handle_t *handle,
                                     flexio_spi_transfer_t *xfer)
```

Performs a non-blocking FlexIO SPI transfer using eDMA.

Note: This interface returns immediately after transfer initiates. Call `FLEXIO_SPI_SlaveGetTransferCountEDMA` to poll the transfer status and check whether the FlexIO SPI transfer is finished.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.
- `xfer` – Pointer to FlexIO SPI transfer structure.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – FlexIO SPI is not idle, is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbortEDMA(FLEXIO_SPI_Type *base,
                                                    flexio_spi_slave_edma_handle_t
                                                    *handle)
```

Aborts a FlexIO SPI transfer using eDMA.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to `flexio_spi_slave_edma_handle_t` structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCountEDMA(FLEXIO_SPI_Type *base,
                                                           flexio_spi_slave_edma_handle_t
                                                           *handle, size_t *count)
```

Gets the number of bytes transferred so far using FlexIO SPI slave eDMA.

Parameters

- `base` – Pointer to `FLEXIO_SPI_Type` structure.
- `handle` – FlexIO SPI eDMA handle pointer.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

`FSL_FLEXIO_SPI_EDMA_DRIVER_VERSION`

FlexIO SPI EDMA driver version.

```
typedef struct flexio_spi_master_edma_handle flexio_spi_master_edma_handle_t
    typedef for flexio_spi_master_edma_handle_t in advance.
```

```
typedef flexio_spi_master_edma_handle_t flexio_spi_slave_edma_handle_t
    Slave handle is the same with master handle.
```

```
typedef void (*flexio_spi_master_edma_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_master_edma_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI master callback for finished transmit.

```
typedef void (*flexio_spi_slave_edma_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_slave_edma_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI slave callback for finished transmit.

```
struct flexio_spi_master_edma_handle
```

```
#include <fsl_flexio_spi_edma.h> FlexIO SPI eDMA transfer handle, users should not touch
the content of the handle.
```

Public Members

```
size_t transferSize
```

Total bytes to be transferred.

```
uint8_t nbytes
```

eDMA minor byte transfer count initially configured.

```
bool txInProgress
```

Send transfer in progress

```
bool rxInProgress
```

Receive transfer in progress

```
edma_handle_t *txHandle
```

DMA handler for SPI send

```
edma_handle_t *rxHandle
```

DMA handler for SPI receive

```
flexio_spi_master_edma_transfer_callback_t callback
```

Callback for SPI DMA transfer

```
void *userData
```

User Data for SPI DMA callback

2.21 FlexIO eDMA UART Driver

```
status_t FLEXIO_UART_TransferCreateHandleEDMA(FLEXIO_UART_Type *base,
flexio_uart_edma_handle_t *handle,
flexio_uart_edma_transfer_callback_t
callback, void *userData, edma_handle_t
*txEdmaHandle, edma_handle_t
*rxEdmaHandle)
```

Initializes the UART handle which is used in transactional functions.

Parameters

- base – Pointer to `FLEXIO_UART_Type`.
- handle – Pointer to `flexio_uart_edma_handle_t` structure.

- callback – The callback function.
- userData – The parameter of the callback function.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO SPI eDMA type/handle table out of range.

```
status_t FLEXIO_UART_TransferSendEDMA(FLEXIO_UART_Type *base,
                                       flexio_uart_edma_handle_t *handle,
                                       flexio_uart_transfer_t *xfer)
```

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent out, the send callback function is called.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – UART handle pointer.
- xfer – UART eDMA transfer structure, see *flexio_uart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_FLEXIO_UART_TxBusy – Previous transfer on going.

```
status_t FLEXIO_UART_TransferReceiveEDMA(FLEXIO_UART_Type *base,
                                          flexio_uart_edma_handle_t *handle,
                                          flexio_uart_transfer_t *xfer)
```

Receives data using eDMA.

This function receives data using eDMA. This is a non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- xfer – UART eDMA transfer structure, see *flexio_uart_transfer_t*.

Return values

- kStatus_Success – if succeed, others failed.
- kStatus_UART_RxBusy – Previous transfer on going.

```
void FLEXIO_UART_TransferAbortSendEDMA(FLEXIO_UART_Type *base,
                                        flexio_uart_edma_handle_t *handle)
```

Aborts the sent data which using eDMA.

This function aborts sent data which using eDMA.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure

```
void FLEXIO_UART_TransferAbortReceiveEDMA(FLEXIO_UART_Type *base,  
                                           flexio_uart_edma_handle_t *handle)
```

Aborts the receive data which using eDMA.

This function aborts the receive data which using eDMA.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure

```
status_t FLEXIO_UART_TransferGetSendCountEDMA(FLEXIO_UART_Type *base,  
                                              flexio_uart_edma_handle_t *handle,  
                                              size_t *count)
```

Gets the number of bytes sent out.

This function gets the number of bytes sent out.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- count – Number of bytes sent so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
status_t FLEXIO_UART_TransferGetReceiveCountEDMA(FLEXIO_UART_Type *base,  
                                                flexio_uart_edma_handle_t *handle,  
                                                size_t *count)
```

Gets the number of bytes received.

This function gets the number of bytes received.

Parameters

- base – Pointer to *FLEXIO_UART_Type*
- handle – Pointer to *flexio_uart_edma_handle_t* structure
- count – Number of bytes received so far by the non-blocking transaction.

Return values

- *kStatus_NoTransferInProgress* – transfer has finished or no transfer in progress.
- *kStatus_Success* – Successfully return the count.

```
FSL_FLEXIO_UART_EDMA_DRIVER_VERSION
```

FlexIO UART EDMA driver version.

```
typedef struct flexio_uart_edma_handle flexio_uart_edma_handle_t
```

```
typedef void (*flexio_uart_edma_transfer_callback_t)(FLEXIO_UART_Type *base,  
flexio_uart_edma_handle_t *handle, status_t status, void *userData)
```

UART transfer callback function.

```
struct flexio_uart_edma_handle
```

```
#include <fsl_flexio_uart_edma.h> UART eDMA handle.
```

Public Members

flexio_uart_edma_transfer_callback_t callback
 Callback function.

`void *userData`
 UART callback function parameter.

`size_t txDataSizeAll`
 Total bytes to be sent.

`size_t rxDataSizeAll`
 Total bytes to be received.

*edma_handle_t *txEdmaHandle*
 The eDMA TX channel used.

*edma_handle_t *rxEdmaHandle*
 The eDMA RX channel used.

`uint8_t nbytes`
 eDMA minor byte transfer count initially configured.

`volatile uint8_t txState`
 TX transfer state.

`volatile uint8_t rxState`
 RX transfer state

2.22 FlexIO I2C Master Driver

status_t FLEXIO_I2C_CheckForBusyBus(*FLEXIO_I2C_Type* *base)

Make sure the bus isn't already pulled down.

Check the FLEXIO pin status to see whether either of SDA and SCL pin is pulled down.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure..

Return values

- `kStatus_Success` –
- `kStatus_FLEXIO_I2C_Busy` –

status_t FLEXIO_I2C_MasterInit(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_config_t* *masterConfig, `uint32_t` srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, and configures the FlexIO I2C hardware configuration.

Example

```
FLEXIO_I2C_Type base = {
.flexioBase = FLEXIO,
.SDAPinIndex = 0,
.SCLPinIndex = 1,
.shifterIndex = {0,1},
.timerIndex = {0,1}
};
flexio_i2c_master_config_t config = {
.enableInDoze = false,
```

(continues on next page)

(continued from previous page)

```
.enableInDebug = true,
.enableFastAccess = false,
.baudRate_Bps = 100000
};
FLEXIO_I2C_MasterInit(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- masterConfig – Pointer to flexio_i2c_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Initialization successful
- kStatus_InvalidArgument – The source clock exceed upper range limitation

```
void FLEXIO_I2C_MasterDeinit(FLEXIO_I2C_Type *base)
```

De-initializes the FlexIO I2C master peripheral. Calling this API Resets the FlexIO I2C master shifer and timer config, module can't work unless the FLEXIO_I2C_MasterInit is called.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.

```
void FLEXIO_I2C_MasterGetDefaultConfig(flexio_i2c_master_config_t *masterConfig)
```

Gets the default configuration to configure the FlexIO module. The configuration can be used directly for calling the FLEXIO_I2C_MasterInit().

Example:

```
flexio_i2c_master_config_t config;
FLEXIO_I2C_MasterGetDefaultConfig(&config);
```

Parameters

- masterConfig – Pointer to flexio_i2c_master_config_t structure.

```
static inline void FLEXIO_I2C_MasterEnable(FLEXIO_I2C_Type *base, bool enable)
```

Enables/disables the FlexIO module operation.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- enable – Pass true to enable module, false does not have any effect.

```
uint32_t FLEXIO_I2C_MasterGetStatusFlags(FLEXIO_I2C_Type *base)
```

Gets the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure

Returns

Status flag, use status flag to AND flexio_i2c_master_status_flags can get the related status.

```
void FLEXIO_I2C_MasterClearStatusFlags(FLEXIO_I2C_Type *base, uint32_t mask)
```

Clears the FlexIO I2C master status flags.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_I2C_RxFullFlag
 - kFLEXIO_I2C_ReceiveNakFlag

void FLEXIO_I2C_MasterEnableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Enables the FlexIO i2c master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source. Currently only one interrupt request source:
 - kFLEXIO_I2C_TransferCompleteInterruptEnable

void FLEXIO_I2C_MasterDisableInterrupts(*FLEXIO_I2C_Type* *base, uint32_t mask)

Disables the FlexIO I2C master interrupt requests.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- mask – Interrupt source.

void FLEXIO_I2C_MasterSetBaudRate(*FLEXIO_I2C_Type* *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)

Sets the FlexIO I2C master transfer baudrate.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- baudRate_Bps – the baud rate value in HZ
- srcClock_Hz – source clock in HZ

void FLEXIO_I2C_MasterStart(*FLEXIO_I2C_Type* *base, uint8_t address, *flexio_i2c_direction_t* direction)

Sends START + 7-bit address to the bus.

Note: This API should be called when the transfer configuration is ready to send a START signal and 7-bit address to the bus. This is a non-blocking API, which returns directly after the address is put into the data register but the address transfer is not finished on the bus. Ensure that the kFLEXIO_I2C_RxFullFlag status is asserted before calling this API.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- address – 7-bit address.
- direction – transfer direction. This parameter is one of the values in *flexio_i2c_direction_t*:
 - kFLEXIO_I2C_Write: Transmit
 - kFLEXIO_I2C_Read: Receive

void FLEXIO_I2C_MasterStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal on the bus.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

void FLEXIO_I2C_MasterRepeatedStart(*FLEXIO_I2C_Type* *base)

Sends the repeated start signal on the bus.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.

void FLEXIO_I2C_MasterAbortStop(*FLEXIO_I2C_Type* *base)

Sends the stop signal when transfer is still on-going.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.

void FLEXIO_I2C_MasterEnableAck(*FLEXIO_I2C_Type* *base, bool enable)

Configures the sent ACK/NAK for the following byte.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- enable – True to configure send ACK, false configure to send NAK.

status_t FLEXIO_I2C_MasterSetTransferCount(*FLEXIO_I2C_Type* *base, *uint16_t* count)

Sets the number of bytes to be transferred from a start signal to a stop signal.

Note: Call this API before a transfer begins because the timer generates a number of clocks according to the number of bytes that need to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- count – Number of bytes need to be transferred from a start signal to a re-start/stop signal

Return values

- *kStatus_Success* – Successfully configured the count.
- *kStatus_InvalidArgument* – Input argument is invalid.

static inline void FLEXIO_I2C_MasterWriteByte(*FLEXIO_I2C_Type* *base, *uint32_t* data)

Writes one byte of data to the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the *TxEEmptyFlag* is asserted before calling this API.

Parameters

- base – Pointer to *FLEXIO_I2C_Type* structure.
- data – a byte of data.

static inline *uint8_t* FLEXIO_I2C_MasterReadByte(*FLEXIO_I2C_Type* *base)

Reads one byte of data from the I2C bus.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the data is ready in the register.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.

Returns

data byte read.

status_t FLEXIO_I2C_MasterWriteBlocking(*FLEXIO_I2C_Type* *base, const uint8_t *txBuff, uint8_t txSize)

Sends a buffer of data in bytes.

Note: This function blocks via polling until all bytes have been sent.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- txBuff – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Nak – Receive NAK during writing data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterReadBlocking(*FLEXIO_I2C_Type* *base, uint8_t *rxBuff, uint8_t rxSize)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- rxBuff – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully read data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

status_t FLEXIO_I2C_MasterTransferBlocking(*FLEXIO_I2C_Type* *base, *flexio_i2c_master_transfer_t* *xfer)

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to receiving NAK.

Parameters

- base – pointer to FLEXIO_I2C_Type structure.
- xfer – pointer to flexio_i2c_master_transfer_t structure.

Returns

status of status_t.

```
status_t FLEXIO_I2C_MasterTransferCreateHandle(FLEXIO_I2C_Type *base,  
                                              flexio_i2c_master_handle_t *handle,  
                                              flexio_i2c_master_transfer_callback_t  
                                              callback, void *userData)
```

Initializes the I2C handle which is used in transactional functions.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure to store the transfer state.
- callback – Pointer to user callback function.
- userData – User param passed to the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/isr table out of range.

```
status_t FLEXIO_I2C_MasterTransferNonBlocking(FLEXIO_I2C_Type *base,  
                                              flexio_i2c_master_handle_t *handle,  
                                              flexio_i2c_master_transfer_t *xfer)
```

Performs a master interrupt non-blocking transfer on the I2C bus.

Note: The API returns immediately after the transfer initiates. Call FLEXIO_I2C_MasterTransferGetCount to poll the transfer status to check whether the transfer is finished. If the return status is not kStatus_FLEXIO_I2C_Busy, the transfer is finished.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state
- xfer – pointer to flexio_i2c_master_transfer_t structure

Return values

- kStatus_Success – Successfully start a transfer.
- kStatus_FLEXIO_I2C_Busy – FlexIO I2C is not idle, is running another transfer.

```
status_t FLEXIO_I2C_MasterTransferGetCount(FLEXIO_I2C_Type *base,  
                                              flexio_i2c_master_handle_t *handle, size_t  
                                              *count)
```

Gets the master transfer status during a interrupt non-blocking transfer.

Parameters

- base – Pointer to FLEXIO_I2C_Type structure.
- handle – Pointer to flexio_i2c_master_handle_t structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_InvalidArgument – count is Invalid.

- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.
- `kStatus_Success` – Successfully return the count.

```
void FLEXIO_I2C_MasterTransferAbort(FLEXIO_I2C_Type *base, flexio_i2c_master_handle_t *handle)
```

Aborts an interrupt non-blocking transfer early.

Note: This API can be called at any time when an interrupt non-blocking transfer initiates to abort the transfer early.

Parameters

- `base` – Pointer to `FLEXIO_I2C_Type` structure
- `handle` – Pointer to `flexio_i2c_master_handle_t` structure which stores the transfer state

```
void FLEXIO_I2C_MasterTransferHandleIRQ(void *i2cType, void *i2cHandle)
```

Master interrupt handler.

Parameters

- `i2cType` – Pointer to `FLEXIO_I2C_Type` structure
- `i2cHandle` – Pointer to `flexio_i2c_master_transfer_t` structure

```
FSL_FLEXIO_I2C_MASTER_DRIVER_VERSION
```

FlexIO I2C transfer status.

Values:

```
enumerator kStatus_FLEXIO_I2C_Busy
```

I2C is busy doing transfer.

```
enumerator kStatus_FLEXIO_I2C_Idle
```

I2C is busy doing transfer.

```
enumerator kStatus_FLEXIO_I2C_Nak
```

NAK received during transfer.

```
enumerator kStatus_FLEXIO_I2C_Timeout
```

Timeout polling status flags.

```
enum _flexio_i2c_master_interrupt
```

Define FlexIO I2C master interrupt mask.

Values:

```
enumerator kFLEXIO_I2C_TxEmptyInterruptEnable
```

Tx buffer empty interrupt enable.

```
enumerator kFLEXIO_I2C_RxFullInterruptEnable
```

Rx buffer full interrupt enable.

```
enum _flexio_i2c_master_status_flags
```

Define FlexIO I2C master status mask.

Values:

enumerator kFLEXIO_I2C_TxEmptyFlag
Tx shifter empty flag.

enumerator kFLEXIO_I2C_RxFullFlag
Rx shifter full/Transfer complete flag.

enumerator kFLEXIO_I2C_ReceiveNakFlag
Receive NAK flag.

enum *_flexio_i2c_direction*
Direction of master transfer.

Values:

enumerator kFLEXIO_I2C_Write
Master send to slave.

enumerator kFLEXIO_I2C_Read
Master receive from slave.

typedef enum *_flexio_i2c_direction* flexio_i2c_direction_t
Direction of master transfer.

typedef struct *_flexio_i2c_type* FLEXIO_I2C_Type
Define FlexIO I2C master access structure typedef.

typedef struct *_flexio_i2c_master_config* flexio_i2c_master_config_t
Define FlexIO I2C master user configuration structure.

typedef struct *_flexio_i2c_master_transfer* flexio_i2c_master_transfer_t
Define FlexIO I2C master transfer structure.

typedef struct *_flexio_i2c_master_handle* flexio_i2c_master_handle_t
FlexIO I2C master handle typedef.

typedef void (*flexio_i2c_master_transfer_callback_t)(FLEXIO_I2C_Type *base,
flexio_i2c_master_handle_t *handle, *status_t* status, void *userData)
FlexIO I2C master transfer callback typedef.

I2C_RETRY_TIMES
Retry times for waiting flag.

struct *_flexio_i2c_type*
#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master access structure typedef.

Public Members

FLEXIO_Type *flexioBase
FlexIO base pointer.

uint8_t SDAPinIndex
Pin select for I2C SDA.

uint8_t SCLPinIndex
Pin select for I2C SCL.

uint8_t shifterIndex[2]
Shifter index used in FlexIO I2C.

uint8_t timerIndex[3]
Timer index used in FlexIO I2C.

uint32_t baudrate

Master transfer baudrate, used to calculate delay time.

struct _flexio_i2c_master_config

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master user configuration structure.

Public Members

bool enableMaster

Enables the FlexIO I2C peripheral at initialization time.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

struct _flexio_i2c_master_transfer

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master transfer structure.

Public Members

uint32_t flags

Transfer flag which controls the transfer, reserved for FlexIO I2C.

uint8_t slaveAddress

7-bit slave address.

flexio_i2c_direction_t direction

Transfer direction, read or write.

uint32_t subaddress

Sub address. Transferred MSB first.

uint8_t subaddressSize

Size of sub address.

uint8_t volatile *data

Transfer buffer.

volatile size_t dataSize

Transfer size.

struct _flexio_i2c_master_handle

#include <fsl_flexio_i2c_master.h> Define FlexIO I2C master handle structure.

Public Members

flexio_i2c_master_transfer_t transfer

FlexIO I2C master transfer copy.

`size_t` transferSize
Total bytes to be transferred.

`uint8_t` state
Transfer state maintained during transfer.

flexio_i2c_master_transfer_callback_t completionCallback
Callback function called at transfer event. Callback function called at transfer event.

`void *`userData
Callback parameter passed to callback function.

`bool` needRestart
Whether master needs to send re-start signal.

2.23 FlexIO I2S Driver

`void FLEXIO_I2S_Init(FLEXIO_I2S_Type *base, const flexio_i2s_config_t *config)`
Initializes the FlexIO I2S.

This API configures FlexIO pins and shifter to I2S and configures the FlexIO I2S with a configuration structure. The configuration structure can be filled by the user, or be set with default values by `FLEXIO_I2S_GetDefaultConfig()`.

Note: This API should be called at the beginning of the application to use the FlexIO I2S driver. Otherwise, any access to the FlexIO I2S module can cause hard fault because the clock is not enabled.

Parameters

- base – FlexIO I2S base pointer
- config – FlexIO I2S configure structure.

`void FLEXIO_I2S_GetDefaultConfig(flexio_i2s_config_t *config)`
Sets the FlexIO I2S configuration structure to default values.

The purpose of this API is to get the configuration structure initialized for use in `FLEXIO_I2S_Init()`. Users may use the initialized structure unchanged in `FLEXIO_I2S_Init()` or modify some fields of the structure before calling `FLEXIO_I2S_Init()`.

Parameters

- config – pointer to master configuration structure

`void FLEXIO_I2S_Deinit(FLEXIO_I2S_Type *base)`
De-initializes the FlexIO I2S.

Calling this API resets the FlexIO I2S shifter and timer config. After calling this API, call the `FLEXIO_I2S_Init` to use the FlexIO I2S module.

Parameters

- base – FlexIO I2S base pointer

`static inline void FLEXIO_I2S_Enable(FLEXIO_I2S_Type *base, bool enable)`
Enables/disables the FlexIO I2S module operation.

Parameters

- base – Pointer to `FLEXIO_I2S_Type`

- enable – True to enable, false dose not have any effect.

```
uint32_t FLEXIO_I2S_GetStatusFlags(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S status flags.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

Status flag, which are ORed by the enumerators in the `_flexio_i2s_status_flags`.

```
void FLEXIO_I2S_EnableInterrupts(FLEXIO_I2S_Type *base, uint32_t mask)
```

Enables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- mask – interrupt source

```
void FLEXIO_I2S_DisableInterrupts(FLEXIO_I2S_Type *base, uint32_t mask)
```

Disables the FlexIO I2S interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – pointer to *FLEXIO_I2S_Type* structure
- mask – interrupt source

```
static inline void FLEXIO_I2S_TxEnableDMA(FLEXIO_I2S_Type *base, bool enable)
```

Enables/disables the FlexIO I2S Tx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

```
static inline void FLEXIO_I2S_RxEnableDMA(FLEXIO_I2S_Type *base, bool enable)
```

Enables/disables the FlexIO I2S Rx DMA requests.

Parameters

- base – FlexIO I2S base pointer
- enable – True means enable DMA, false means disable DMA.

```
static inline uint32_t FLEXIO_I2S_TxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S send data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO i2s send data register address.

```
static inline uint32_t FLEXIO_I2S_RxGetDataRegisterAddress(FLEXIO_I2S_Type *base)
```

Gets the FlexIO I2S receive data register address.

This function returns the I2S data register address, mainly used by DMA/eDMA.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure

Returns

FlexIO I2S receive data register address.

```
void FLEXIO_I2S_MasterSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format,
                               uint32_t srcClock_Hz)
```

Configures the FlexIO I2S audio format in master mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.
- srcClock_Hz – I2S master clock source frequency in Hz.

```
void FLEXIO_I2S_SlaveSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_format_t *format)
```

Configures the FlexIO I2S audio format in slave mode.

Audio format can be changed in run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure
- format – Pointer to FlexIO I2S audio data format structure.

```
status_t FLEXIO_I2S_WriteBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *txData,
                                   size_t size)
```

Sends data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- txData – Pointer to the data to be written.
- size – Bytes to be written.

Return values

- kStatus_Success – Successfully write data.
- kStatus_FLEXIO_I2C_Timeout – Timeout polling status flags.

```
static inline void FLEXIO_I2S_WriteData(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint32_t
                                         data)
```

Writes data into a data register.

Parameters

- base – FlexIO I2S base pointer.
- bitWidth – How many bits in a audio word, usually 8/16/24/32 bits.
- data – Data to be written.

`status_t FLEXIO_I2S_ReadBlocking(FLEXIO_I2S_Type *base, uint8_t bitWidth, uint8_t *rxData, size_t size)`

Receives a piece of data using a blocking method.

Note: This function blocks via polling until data is ready to be sent.

Parameters

- `base` – FlexIO I2S base pointer
- `bitWidth` – How many bits in a audio word, usually 8/16/24/32 bits.
- `rxData` – Pointer to the data to be read.
- `size` – Bytes to be read.

Return values

- `kStatus_Success` – Successfully read data.
- `kStatus_FLEXIO_I2C_Timeout` – Timeout polling status flags.

`static inline uint32_t FLEXIO_I2S_ReadData(FLEXIO_I2S_Type *base)`

Reads a data from the data register.

Parameters

- `base` – FlexIO I2S base pointer

Returns

Data read from data register.

`void FLEXIO_I2S_TransferTxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, flexio_i2s_callback_t callback, void *userData)`

Initializes the FlexIO I2S handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure
- `handle` – Pointer to `flexio_i2s_handle_t` structure to store the transfer state.
- `callback` – FlexIO I2S callback function, which is called while finished a block.
- `userData` – User parameter for the FlexIO I2S callback.

`void FLEXIO_I2S_TransferSetFormat(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle, flexio_i2s_format_t *format, uint32_t srcClock_Hz)`

Configures the FlexIO I2S audio format.

Audio format can be changed at run-time of FlexIO I2S. This function configures the sample rate and audio data format to be transferred.

Parameters

- `base` – Pointer to `FLEXIO_I2S_Type` structure.
- `handle` – FlexIO I2S handle pointer.
- `format` – Pointer to audio data format structure.
- `srcClock_Hz` – FlexIO I2S bit clock source frequency in Hz. This parameter should be 0 while in slave mode.

```
void FLEXIO_I2S_TransferRxCreateHandle(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,  
                                       flexio_i2s_callback_t callback, void *userData)
```

Initializes the FlexIO I2S receive handle.

This function initializes the FlexIO I2S handle which can be used for other FlexIO I2S transactional APIs. Call this API once to get the initialized handle.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure to store the transfer state.
- callback – FlexIO I2S callback function, which is called while finished a block.
- userData – User parameter for the FlexIO I2S callback.

```
status_t FLEXIO_I2S_TransferSendNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                             *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking send transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call *FLEXIO_I2S_GetRemainingBytes* to poll the transfer status and check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure which stores the transfer state
- xfer – Pointer to *flexio_i2s_transfer_t* structure

Return values

- *kStatus_Success* – Successfully start the data transmission.
- *kStatus_FLEXIO_I2S_TxBusy* – Previous transmission still not finished, data not all written to TX register yet.
- *kStatus_InvalidArgument* – The input parameter is invalid.

```
status_t FLEXIO_I2S_TransferReceiveNonBlocking(FLEXIO_I2S_Type *base, flexio_i2s_handle_t  
                                               *handle, flexio_i2s_transfer_t *xfer)
```

Performs an interrupt non-blocking receive transfer on FlexIO I2S.

Note: The API returns immediately after transfer initiates. Call *FLEXIO_I2S_GetRemainingBytes* to poll the transfer status to check whether the transfer is finished. If the return status is 0, the transfer is finished.

Parameters

- base – Pointer to *FLEXIO_I2S_Type* structure.
- handle – Pointer to *flexio_i2s_handle_t* structure which stores the transfer state
- xfer – Pointer to *flexio_i2s_transfer_t* structure

Return values

- *kStatus_Success* – Successfully start the data receive.

- kStatus_FLEXIO_I2S_RxBusy – Previous receive still not finished.
- kStatus_InvalidArgument – The input parameter is invalid.

void FLEXIO_I2S_TransferAbortSend(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)
Aborts the current send.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

void FLEXIO_I2S_TransferAbortReceive(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle)
Aborts the current receive.

Note: This API can be called at any time when interrupt non-blocking transfer initiates to abort the transfer in a early time.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state

status_t FLEXIO_I2S_TransferGetSendCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *size_t* *count)

Gets the remaining bytes to be sent.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes sent.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

status_t FLEXIO_I2S_TransferGetReceiveCount(*FLEXIO_I2S_Type* *base, *flexio_i2s_handle_t* *handle, *size_t* *count)

Gets the remaining bytes to be received.

Parameters

- base – Pointer to FLEXIO_I2S_Type structure.
- handle – Pointer to flexio_i2s_handle_t structure which stores the transfer state
- count – Bytes recieved.

Return values

- kStatus_Success – Succeed get the transfer count.
- kStatus_NoTransferInProgress – There is not a non-blocking transaction currently in progress.

Returns

count Bytes received.

void FLEXIO_I2S_TransferTxHandleIRQ(void *i2sBase, void *i2sHandle)

Tx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure

void FLEXIO_I2S_TransferRxHandleIRQ(void *i2sBase, void *i2sHandle)

Rx interrupt handler.

Parameters

- i2sBase – Pointer to FLEXIO_I2S_Type structure.
- i2sHandle – Pointer to flexio_i2s_handle_t structure.

FSL_FLEXIO_I2S_DRIVER_VERSION

FlexIO I2S driver version 2.2.2.

FlexIO I2S transfer status.

Values:

enumerator kStatus_FLEXIO_I2S_Idle

FlexIO I2S is in idle state

enumerator kStatus_FLEXIO_I2S_TxBusy

FlexIO I2S Tx is busy

enumerator kStatus_FLEXIO_I2S_RxBusy

FlexIO I2S Rx is busy

enumerator kStatus_FLEXIO_I2S_Error

FlexIO I2S error occurred

enumerator kStatus_FLEXIO_I2S_QueueFull

FlexIO I2S transfer queue is full.

enumerator kStatus_FLEXIO_I2S_Timeout

FlexIO I2S timeout polling status flags.

enum _flexio_i2s_master_slave

Master or slave mode.

Values:

enumerator kFLEXIO_I2S_Master

Master mode

enumerator kFLEXIO_I2S_Slave

Slave mode

_flexio_i2s_interrupt_enable Define FlexIO FlexIO I2S interrupt mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyInterruptEnable
Transmit buffer empty interrupt enable.

enumerator kFLEXIO_I2S_RxDataRegFullInterruptEnable
Receive buffer full interrupt enable.

`_flexio_i2s_status_flags` Define FlexIO FlexIO I2S status mask.

Values:

enumerator kFLEXIO_I2S_TxDataRegEmptyFlag
Transmit buffer empty flag.

enumerator kFLEXIO_I2S_RxDataRegFullFlag
Receive buffer full flag.

enum `_flexio_i2s_sample_rate`
Audio sample rate.

Values:

enumerator kFLEXIO_I2S_SampleRate8KHz
Sample rate 8000Hz

enumerator kFLEXIO_I2S_SampleRate11025Hz
Sample rate 11025Hz

enumerator kFLEXIO_I2S_SampleRate12KHz
Sample rate 12000Hz

enumerator kFLEXIO_I2S_SampleRate16KHz
Sample rate 16000Hz

enumerator kFLEXIO_I2S_SampleRate22050Hz
Sample rate 22050Hz

enumerator kFLEXIO_I2S_SampleRate24KHz
Sample rate 24000Hz

enumerator kFLEXIO_I2S_SampleRate32KHz
Sample rate 32000Hz

enumerator kFLEXIO_I2S_SampleRate44100Hz
Sample rate 44100Hz

enumerator kFLEXIO_I2S_SampleRate48KHz
Sample rate 48000Hz

enumerator kFLEXIO_I2S_SampleRate96KHz
Sample rate 96000Hz

enum `_flexio_i2s_word_width`
Audio word width.

Values:

enumerator kFLEXIO_I2S_WordWidth8bits
Audio data width 8 bits

enumerator kFLEXIO_I2S_WordWidth16bits
Audio data width 16 bits

```
enumerator kFLEXIO_I2S_WordWidth24bits
    Audio data width 24 bits
enumerator kFLEXIO_I2S_WordWidth32bits
    Audio data width 32 bits
typedef struct _flexio_i2s_type FLEXIO_I2S_Type
    Define FlexIO I2S access structure typedef.
typedef enum _flexio_i2s_master_slave flexio_i2s_master_slave_t
    Master or slave mode.
typedef struct _flexio_i2s_config flexio_i2s_config_t
    FlexIO I2S configure structure.
typedef struct _flexio_i2s_format flexio_i2s_format_t
    FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.
typedef enum _flexio_i2s_sample_rate flexio_i2s_sample_rate_t
    Audio sample rate.
typedef enum _flexio_i2s_word_width flexio_i2s_word_width_t
    Audio word width.
typedef struct _flexio_i2s_transfer flexio_i2s_transfer_t
    Define FlexIO I2S transfer structure.
typedef struct _flexio_i2s_handle flexio_i2s_handle_t
typedef void (*flexio_i2s_callback_t)(FLEXIO_I2S_Type *base, flexio_i2s_handle_t *handle,
status_t status, void *userData)
    FlexIO I2S xfer callback prototype.
I2S_RETRY_TIMES
    Retry times for waiting flag.
FLEXIO_I2S_XFER_QUEUE_SIZE
    FlexIO I2S transfer queue size, user can refine it according to use case.
struct _flexio_i2s_type
    #include <fsl_flexio_i2s.h> Define FlexIO I2S access structure typedef.
```

Public Members

```
FLEXIO_Type *flexioBase
    FlexIO base pointer
uint8_t txPinIndex
    Tx data pin index in FlexIO pins
uint8_t rxPinIndex
    Rx data pin index
uint8_t bclkPinIndex
    Bit clock pin index
uint8_t fsPinIndex
    Frame sync pin index
uint8_t txShifterIndex
    Tx data shifter index
```

uint8_t rxShifterIndex
Rx data shifter index

uint8_t bclkTimerIndex
Bit clock timer index

uint8_t fsTimerIndex
Frame sync timer index

struct _flexio_i2s_config
#include <fsl_flexio_i2s.h> FlexIO I2S configure structure.

Public Members

bool enableI2S
Enable FlexIO I2S

flexio_i2s_master_slave_t masterSlave
Master or slave

flexio_pin_polarity_t txPinPolarity
Tx data pin polarity, active high or low

flexio_pin_polarity_t rxPinPolarity
Rx data pin polarity

flexio_pin_polarity_t bclkPinPolarity
Bit clock pin polarity

flexio_pin_polarity_t fsPinPolarity
Frame sync pin polarity

flexio_shifter_timer_polarity_t txTimerPolarity
Tx data valid on bclk rising or falling edge

flexio_shifter_timer_polarity_t rxTimerPolarity
Rx data valid on bclk rising or falling edge

struct _flexio_i2s_format
#include <fsl_flexio_i2s.h> FlexIO I2S audio format, FlexIO I2S only support the same format in Tx and Rx.

Public Members

uint8_t bitWidth
Bit width of audio data, always 8/16/24/32 bits

uint32_t sampleRate_Hz
Sample rate of the audio data

struct _flexio_i2s_transfer
#include <fsl_flexio_i2s.h> Define FlexIO I2S transfer structure.

Public Members

uint8_t *data
Data buffer start pointer

size_t dataSize
Bytes to be transferred.

struct flexio_i2s_handle
#include <fsl_flexio_i2s.h> Define FlexIO I2S handle structure.

Public Members

uint32_t state
Internal state

flexio_i2s_callback_t callback
Callback function called at transfer event

void *userData
Callback parameter passed to callback function

uint8_t bitWidth
Bit width for transfer, 8/16/24/32bits

flexio_i2s_transfer_t queue[(4U)]
Transfer queue storing queued transfer

size_t transferSize[(4U)]
Data bytes need to transfer

volatile uint8_t queueUser
Index for user to queue transfer

volatile uint8_t queueDriver
Index for driver to get the transfer data and size

2.24 FlexIO SPI Driver

void FLEXIO_SPI_MasterInit(*FLEXIO_SPI_Type* *base, *flexio_spi_master_config_t* *masterConfig, uint32_t srcClock_Hz)

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI master hardware, and configures the FlexIO SPI with FlexIO SPI master configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_MasterGetDefaultConfig().

Example

```
FLEXIO_SPI_Type spiDev = {
    .flexioBase = FLEXIO,
    .SDOPinIndex = 0,
    .SDIPinIndex = 1,
    .SCKPinIndex = 2,
    .CSnPinIndex = 3,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_spi_master_config_t config = {
    .enableMaster = true,
    .enableInDoze = false,
    .enableInDebug = true,
```

(continues on next page)

(continued from previous page)

```
.enableFastAccess = false,
.baudRate_Bps = 500000,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_MasterInit(&spiDev, &config, srcClock_Hz);
```

Note: 1.FlexIO SPI master only support CPOL = 0, which means clock inactive low. 2.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI master communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $2*2=4$. If FlexIO SPI master communicates with FlexIO SPI slave, the maximum baud rate is FlexIO clock frequency divided by $(1.5+2.5)*2=8$.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- masterConfig – Pointer to the flexio_spi_master_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

```
void FLEXIO_SPI_MasterDeinit(FLEXIO_SPI_Type *base)
```

Resets the FlexIO SPI timer and shifter config.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

```
void FLEXIO_SPI_MasterGetDefaultConfig(flexio_spi_master_config_t *masterConfig)
```

Gets the default configuration to configure the FlexIO SPI master. The configuration can be used directly by calling the FLEXIO_SPI_MasterConfigure(). Example:

```
flexio_spi_master_config_t masterConfig;
FLEXIO_SPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – Pointer to the flexio_spi_master_config_t structure.

```
void FLEXIO_SPI_SlaveInit(FLEXIO_SPI_Type *base, flexio_spi_slave_config_t *slaveConfig)
```

Ungates the FlexIO clock, resets the FlexIO module, configures the FlexIO SPI slave hardware configuration, and configures the FlexIO SPI with FlexIO SPI slave configuration. The configuration structure can be filled by the user, or be set with default values by the FLEXIO_SPI_SlaveGetDefaultConfig().

Note: 1.Only one timer is needed in the FlexIO SPI slave. As a result, the second timer index is ignored. 2.FlexIO SPI slave only support CPOL = 0, which means clock inactive low. 3.For FlexIO SPI master, the input valid time is 1.5 clock cycles, for slave the output valid time is 2.5 clock cycles. So if FlexIO SPI slave communicates with other spi IPs, the maximum baud rate is FlexIO clock frequency divided by $3*2=6$. If FlexIO SPI slave communicates with FlexIO SPI master, the maximum baud rate is FlexIO clock frequency divided by $(1.5+2.5)*2=8$. Example

```
FLEXIO_SPI_Type spiDev = {
.flexioBase = FLEXIO,
.SDOPinIndex = 0,
```

(continues on next page)

(continued from previous page)

```
.SDIPinIndex = 1,
.SCKPinIndex = 2,
.CSnPinIndex = 3,
.shifterIndex = {0,1},
.timerIndex = {0}
};
flexio_spi_slave_config_t config = {
.enableSlave = true,
.enableInDoze = false,
.enableInDebug = true,
.enableFastAccess = false,
.phase = kFLEXIO_SPI_ClockPhaseFirstEdge,
.direction = kFLEXIO_SPI_MsbFirst,
.dataMode = kFLEXIO_SPI_8BitMode
};
FLEXIO_SPI_SlaveInit(&spiDev, &config);
```

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

```
void FLEXIO_SPI_SlaveDeinit(FLEXIO_SPI_Type *base)
```

Gates the FlexIO clock.

Parameters

- base – Pointer to the FLEXIO_SPI_Type.

```
void FLEXIO_SPI_SlaveGetDefaultConfig(flexio_spi_slave_config_t *slaveConfig)
```

Gets the default configuration to configure the FlexIO SPI slave. The configuration can be used directly for calling the FLEXIO_SPI_SlaveConfigure(). Example:

```
flexio_spi_slave_config_t slaveConfig;
FLEXIO_SPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – Pointer to the flexio_spi_slave_config_t structure.

```
uint32_t FLEXIO_SPI_GetStatusFlags(FLEXIO_SPI_Type *base)
```

Gets FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

Returns

status flag; Use the status flag to AND the following flag mask and get the status.

- kFLEXIO_SPI_TxEmptyFlag
- kFLEXIO_SPI_RxEmptyFlag

```
void FLEXIO_SPI_ClearStatusFlags(FLEXIO_SPI_Type *base, uint32_t mask)
```

Clears FlexIO SPI status flags.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.

- mask – status flag The parameter can be any combination of the following values:
 - kFLEXIO_SPI_TxEmptyFlag
 - kFLEXIO_SPI_RxEmptyFlag

```
void FLEXIO_SPI_EnableInterrupts(FLEXIO_SPI_Type *base, uint32_t mask)
```

Enables the FlexIO SPI interrupt.

This function enables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – interrupt source. The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

```
void FLEXIO_SPI_DisableInterrupts(FLEXIO_SPI_Type *base, uint32_t mask)
```

Disables the FlexIO SPI interrupt.

This function disables the FlexIO SPI interrupt.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – interrupt source The parameter can be any combination of the following values:
 - kFLEXIO_SPI_RxFullInterruptEnable
 - kFLEXIO_SPI_TxEmptyInterruptEnable

```
void FLEXIO_SPI_EnableDMA(FLEXIO_SPI_Type *base, uint32_t mask, bool enable)
```

Enables/disables the FlexIO SPI transmit DMA. This function enables/disables the FlexIO SPI Tx DMA, which means that asserting the *kFLEXIO_SPI_TxEmptyFlag* does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- mask – SPI DMA source.
- enable – True means enable DMA, false means disable DMA.

```
static inline uint32_t FLEXIO_SPI_GetTxDataRegisterAddress(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_shift_direction_t  
                                                         direction)
```

Gets the FlexIO SPI transmit data register address for MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI transmit data register address.

```
static inline uint32_t FLEXIO_SPI_GetRxDataRegisterAddress(FLEXIO_SPI_Type *base,  
                                                         flexio_spi_shift_direction_t  
                                                         direction)
```

Gets the FlexIO SPI receive data register address for the MSB first transfer.

This function returns the SPI data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.

Returns

FlexIO SPI receive data register address.

```
static inline void FLEXIO_SPI_Enable(FLEXIO_SPI_Type *base, bool enable)
```

Enables/disables the FlexIO SPI module operation.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type*.
- enable – True to enable, false does not have any effect.

```
void FLEXIO_SPI_MasterSetBaudRate(FLEXIO_SPI_Type *base, uint32_t baudRate_Bps,  
                                  uint32_t srcClockHz)
```

Sets baud rate for the FlexIO SPI transfer, which is only used for the master.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- baudRate_Bps – Baud Rate needed in Hz.
- srcClockHz – SPI source clock frequency in Hz.

```
static inline void FLEXIO_SPI_WriteData(FLEXIO_SPI_Type *base, flexio_spi_shift_direction_t  
                                         direction, uint32_t data)
```

Writes one byte of data, which is sent using the MSB method.

Note: This is a non-blocking API, which returns directly after the data is put into the data register but the data transfer is not finished on the bus. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- direction – Shift direction of MSB first or LSB first.
- data – 8/16/32 bit data.

```
static inline uint32_t FLEXIO_SPI_ReadData(FLEXIO_SPI_Type *base,  
                                           flexio_spi_shift_direction_t direction)
```

Reads 8 bit/16 bit data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.

- direction – Shift direction of MSB first or LSB first.

Returns

8 bit/16 bit data received.

status_t FLEXIO_SPI_WriteBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, const uint8_t *buffer, size_t size)

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The data bytes to send.
- size – The number of data bytes to send.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_ReadBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_shift_direction_t* direction, uint8_t *buffer, size_t size)

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_SPI_Type structure.
- direction – Shift direction of MSB first or LSB first.
- buffer – The buffer to store the received bytes.
- size – The number of data bytes to be received.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_FLEXIO_SPI_Timeout – The transfer timed out and was aborted.

status_t FLEXIO_SPI_MasterTransferBlocking(*FLEXIO_SPI_Type* *base, *flexio_spi_transfer_t* *xfer)

Receives a buffer of bytes.

Note: This function blocks via polling until all bytes have been received.

Parameters

- base – pointer to FLEXIO_SPI_Type structure
- xfer – FlexIO SPI transfer structure, see flexio_spi_transfer_t.

Return values

- kStatus_Success – Successfully create the handle.

- `kStatus_FLEXIO_SPI_Timeout` – The transfer timed out and was aborted.

`void FLEXIO_SPI_FlushShifters(FLEXIO_SPI_Type *base)`

Flush tx/rx shifters.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.

`status_t FLEXIO_SPI_MasterTransferCreateHandle(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle,
flexio_spi_master_transfer_callback_t
callback, void *userData)`

Initializes the FlexIO SPI Master handle, which is used in transactional functions.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.
- `callback` – The callback function.
- `userData` – The parameter of the callback function.

Return values

- `kStatus_Success` – Successfully create the handle.
- `kStatus_OutOfRange` – The FlexIO type/handle/ISR table out of range.

`status_t FLEXIO_SPI_MasterTransferNonBlocking(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle,
flexio_spi_transfer_t *xfer)`

Master transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.
- `xfer` – FlexIO SPI transfer structure. See `flexio_spi_transfer_t`.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – SPI is not idle, is running another transfer.

`void FLEXIO_SPI_MasterTransferAbort(FLEXIO_SPI_Type *base, flexio_spi_master_handle_t
*handle)`

Aborts the master data transfer, which used IRQ.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_master_handle_t` structure to store the transfer state.

```
status_t FLEXIO_SPI_MasterTransferGetCount(FLEXIO_SPI_Type *base,
                                           flexio_spi_master_handle_t *handle, size_t
                                           *count)
```

Gets the data transfer status which used IRQ.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- handle – Pointer to the *flexio_spi_master_handle_t* structure to store the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Return values

- *kStatus_InvalidArgument* – count is Invalid.
- *kStatus_Success* – Successfully return the count.

```
void FLEXIO_SPI_MasterTransferHandleIRQ(void *spiType, void *spiHandle)
```

FlexIO SPI master IRQ handler function.

Parameters

- spiType – Pointer to the *FLEXIO_SPI_Type* structure.
- spiHandle – Pointer to the *flexio_spi_master_handle_t* structure to store the transfer state.

```
status_t FLEXIO_SPI_SlaveTransferCreateHandle(FLEXIO_SPI_Type *base,
                                              flexio_spi_slave_handle_t *handle,
                                              flexio_spi_slave_transfer_callback_t callback,
                                              void *userData)
```

Initializes the FlexIO SPI Slave handle, which is used in transactional functions.

Parameters

- base – Pointer to the *FLEXIO_SPI_Type* structure.
- handle – Pointer to the *flexio_spi_slave_handle_t* structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- *kStatus_Success* – Successfully create the handle.
- *kStatus_OutOfRange* – The FlexIO type/handle/ISR table out of range.

```
status_t FLEXIO_SPI_SlaveTransferNonBlocking(FLEXIO_SPI_Type *base,
                                              flexio_spi_slave_handle_t *handle,
                                              flexio_spi_transfer_t *xfer)
```

Slave transfer data using IRQ.

This function sends data using IRQ. This is a non-blocking function, which returns right away. When all data is sent out/received, the callback function is called.

Parameters

- handle – Pointer to the *flexio_spi_slave_handle_t* structure to store the transfer state.
- base – Pointer to the *FLEXIO_SPI_Type* structure.
- xfer – FlexIO SPI transfer structure. See *flexio_spi_transfer_t*.

Return values

- `kStatus_Success` – Successfully start a transfer.
- `kStatus_InvalidArgument` – Input argument is invalid.
- `kStatus_FLEXIO_SPI_Busy` – SPI is not idle; it is running another transfer.

```
static inline void FLEXIO_SPI_SlaveTransferAbort(FLEXIO_SPI_Type *base,  
                                                flexio_spi_slave_handle_t *handle)
```

Aborts the slave data transfer which used IRQ, share same API with master.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
static inline status_t FLEXIO_SPI_SlaveTransferGetCount(FLEXIO_SPI_Type *base,  
                                                      flexio_spi_slave_handle_t *handle,  
                                                      size_t *count)
```

Gets the data transfer status which used IRQ, share same API with master.

Parameters

- `base` – Pointer to the `FLEXIO_SPI_Type` structure.
- `handle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.
- `count` – Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_InvalidArgument` – `count` is Invalid.
- `kStatus_Success` – Successfully return the count.

```
void FLEXIO_SPI_SlaveTransferHandleIRQ(void *spiType, void *spiHandle)
```

FlexIO SPI slave IRQ handler function.

Parameters

- `spiType` – Pointer to the `FLEXIO_SPI_Type` structure.
- `spiHandle` – Pointer to the `flexio_spi_slave_handle_t` structure to store the transfer state.

```
FSL_FLEXIO_SPI_DRIVER_VERSION
```

FlexIO SPI driver version.

Error codes for the FlexIO SPI driver.

Values:

```
enumerator kStatus_FLEXIO_SPI_Busy  
FlexIO SPI is busy.
```

```
enumerator kStatus_FLEXIO_SPI_Idle  
SPI is idle
```

```
enumerator kStatus_FLEXIO_SPI_Error  
FlexIO SPI error.
```

```
enumerator kStatus_FLEXIO_SPI_Timeout  
FlexIO SPI timeout polling status flags.
```

enum `_flexio_spi_clock_phase`

FlexIO SPI clock phase configuration.

Values:

enumerator `kFLEXIO_SPI_ClockPhaseFirstEdge`

First edge on SPSCCK occurs at the middle of the first cycle of a data transfer.

enumerator `kFLEXIO_SPI_ClockPhaseSecondEdge`

First edge on SPSCCK occurs at the start of the first cycle of a data transfer.

enum `_flexio_spi_shift_direction`

FlexIO SPI data shifter direction options.

Values:

enumerator `kFLEXIO_SPI_MsbFirst`

Data transfers start with most significant bit.

enumerator `kFLEXIO_SPI_LsbFirst`

Data transfers start with least significant bit.

enum `_flexio_spi_data_bitcount_mode`

FlexIO SPI data length mode options.

Values:

enumerator `kFLEXIO_SPI_8BitMode`

8-bit data transmission mode.

enumerator `kFLEXIO_SPI_16BitMode`

16-bit data transmission mode.

enumerator `kFLEXIO_SPI_32BitMode`

32-bit data transmission mode.

enum `_flexio_spi_interrupt_enable`

Define FlexIO SPI interrupt mask.

Values:

enumerator `kFLEXIO_SPI_TxEmptyInterruptEnable`

Transmit buffer empty interrupt enable.

enumerator `kFLEXIO_SPI_RxFullInterruptEnable`

Receive buffer full interrupt enable.

enum `_flexio_spi_status_flags`

Define FlexIO SPI status mask.

Values:

enumerator `kFLEXIO_SPI_TxBufferEmptyFlag`

Transmit buffer empty flag.

enumerator `kFLEXIO_SPI_RxBufferFullFlag`

Receive buffer full flag.

enum `_flexio_spi_dma_enable`

Define FlexIO SPI DMA mask.

Values:

enumerator `kFLEXIO_SPI_TxDmaEnable`

Tx DMA request source

enumerator kFLEXIO_SPI_RxDmaEnable

Rx DMA request source

enumerator kFLEXIO_SPI_DmaAllEnable

All DMA request source

enum *flexio_spi_transfer_flags*

Define FlexIO SPI transfer flags.

Note: Use kFLEXIO_SPI_csContinuous and one of the other flags to OR together to form the transfer flag.

Values:

enumerator kFLEXIO_SPI_8bitMsb

FlexIO SPI 8-bit MSB first

enumerator kFLEXIO_SPI_8bitLsb

FlexIO SPI 8-bit LSB first

enumerator kFLEXIO_SPI_16bitMsb

FlexIO SPI 16-bit MSB first

enumerator kFLEXIO_SPI_16bitLsb

FlexIO SPI 16-bit LSB first

enumerator kFLEXIO_SPI_32bitMsb

FlexIO SPI 32-bit MSB first

enumerator kFLEXIO_SPI_32bitLsb

FlexIO SPI 32-bit LSB first

enumerator kFLEXIO_SPI_csContinuous

Enable the CS signal continuous mode

typedef enum *flexio_spi_clock_phase* flexio_spi_clock_phase_t

FlexIO SPI clock phase configuration.

typedef enum *flexio_spi_shift_direction* flexio_spi_shift_direction_t

FlexIO SPI data shifter direction options.

typedef enum *flexio_spi_data_bitcount_mode* flexio_spi_data_bitcount_mode_t

FlexIO SPI data length mode options.

typedef struct *flexio_spi_type* FLEXIO_SPI_Type

Define FlexIO SPI access structure typedef.

typedef struct *flexio_spi_master_config* flexio_spi_master_config_t

Define FlexIO SPI master configuration structure.

typedef struct *flexio_spi_slave_config* flexio_spi_slave_config_t

Define FlexIO SPI slave configuration structure.

typedef struct *flexio_spi_transfer* flexio_spi_transfer_t

Define FlexIO SPI transfer structure.

typedef struct *flexio_spi_master_handle* flexio_spi_master_handle_t

typedef for flexio_spi_master_handle_t in advance.

typedef *flexio_spi_master_handle_t* flexio_spi_slave_handle_t

Slave handle is the same with master handle.


```
typedef void (*flexio_spi_master_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_master_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI master callback for finished transmit.

```
typedef void (*flexio_spi_slave_transfer_callback_t)(FLEXIO_SPI_Type *base,
flexio_spi_slave_handle_t *handle, status_t status, void *userData)
```

FlexIO SPI slave callback for finished transmit.

```
FLEXIO_SPI_DUMMYDATA
```

FlexIO SPI dummy transfer data, the data is sent while txData is NULL.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
FLEXIO_SPI_XFER_DATA_FORMAT(flag)
```

Get the transfer data format of width and bit order.

```
struct _flexio_spi_type
```

#include <fsl_flexio_spi.h> Define FlexIO SPI access structure typedef.

Public Members

```
FLEXIO_Type *flexioBase
```

FlexIO base pointer.

```
uint8_t SDOPinIndex
```

Pin select for data output. To set SDO pin in Hi-Z state, user needs to mux the pin as GPIO input and disable all pull up/down in application.

```
uint8_t SDIPinIndex
```

Pin select for data input.

```
uint8_t SCKPinIndex
```

Pin select for clock.

```
uint8_t CSnPinIndex
```

Pin select for enable.

```
uint8_t shifterIndex[2]
```

Shifter index used in FlexIO SPI.

```
uint8_t timerIndex[2]
```

Timer index used in FlexIO SPI.

```
struct _flexio_spi_master_config
```

#include <fsl_flexio_spi.h> Define FlexIO SPI master configuration structure.

Public Members

```
bool enableMaster
```

Enable/disable FlexIO SPI master after configuration.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode.

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

uint32_t baudRate_Bps

Baud rate in Bps.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct *_flexio_spi_slave_config*

#include <fsl_flexio_spi.h> Define FlexIO SPI slave configuration structure.

Public Members

bool enableSlave

Enable/disable FlexIO SPI slave after configuration.

bool enableInDoze

Enable/disable FlexIO operation in doze mode.

bool enableInDebug

Enable/disable FlexIO operation in debug mode.

bool enableFastAccess

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

flexio_spi_clock_phase_t phase

Clock phase.

flexio_spi_data_bitcount_mode_t dataMode

8bit or 16bit mode.

struct *_flexio_spi_transfer*

#include <fsl_flexio_spi.h> Define FlexIO SPI transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

size_t dataSize

Transfer bytes.

uint8_t flags

FlexIO SPI control flag, MSB first or LSB first.

struct *_flexio_spi_master_handle*

#include <fsl_flexio_spi.h> Define FlexIO SPI handle structure.

Public Members

`const uint8_t *txData`
Transfer buffer.

`uint8_t *rxData`
Receive buffer.

`size_t transferSize`
Total bytes to be transferred.

`volatile size_t txRemainingBytes`
Send data remaining in bytes.

`volatile size_t rxRemainingBytes`
Receive data remaining in bytes.

`volatile uint32_t state`
FlexIO SPI internal state.

`uint8_t bytePerFrame`
SPI mode, 2bytes or 1byte in a frame

`flexio_spi_shift_direction_t direction`
Shift direction.

`flexio_spi_master_transfer_callback_t callback`
FlexIO SPI callback.

`void *userData`
Callback parameter.

`bool isCsContinuous`
Is current transfer using CS continuous mode.

`uint32_t timer1Cfg`
TIMER1 TIMCFG register value backup.

2.25 FlexIO UART Driver

`status_t FLEXIO_UART_Init(FLEXIO_UART_Type *base, const flexio_uart_config_t *userConfig, uint32_t srcClock_Hz)`

Ungates the FlexIO clock, resets the FlexIO module, configures FlexIO UART hardware, and configures the FlexIO UART with FlexIO UART configuration. The configuration structure can be filled by the user or be set with default values by `FLEXIO_UART_GetDefaultConfig()`.

Example

```
FLEXIO_UART_Type base = {
    .flexioBase = FLEXIO,
    .TxPinIndex = 0,
    .RxPinIndex = 1,
    .shifterIndex = {0,1},
    .timerIndex = {0,1}
};
flexio_uart_config_t config = {
    .enableInDoze = false,
    .enableInDebug = true,
    .enableFastAccess = false,
    .baudRate_Bps = 115200U,
```

(continues on next page)

(continued from previous page)

```
.bitCountPerChar = 8
};
FLEXIO_UART_Init(base, &config, srcClock_Hz);
```

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- userConfig – Pointer to the flexio_uart_config_t structure.
- srcClock_Hz – FlexIO source clock in Hz.

Return values

- kStatus_Success – Configuration success.
- kStatus_FLEXIO_UART_BaudrateNotSupport – Baudrate is not supported for current clock source frequency.

```
void FLEXIO_UART_Deinit(FLEXIO_UART_Type *base)
```

Resets the FlexIO UART shifter and timer config.

Note: After calling this API, call the FLEXIO_UART_Init to use the FlexIO UART module.

Parameters

- base – Pointer to FLEXIO_UART_Type structure

```
void FLEXIO_UART_GetDefaultConfig(flexio_uart_config_t *userConfig)
```

Gets the default configuration to configure the FlexIO UART. The configuration can be used directly for calling the FLEXIO_UART_Init(). Example:

```
flexio_uart_config_t config;
FLEXIO_UART_GetDefaultConfig(&userConfig);
```

Parameters

- userConfig – Pointer to the flexio_uart_config_t structure.

```
uint32_t FLEXIO_UART_GetStatusFlags(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.

Returns

FlexIO UART status flags.

```
void FLEXIO_UART_ClearStatusFlags(FLEXIO_UART_Type *base, uint32_t mask)
```

Gets the FlexIO UART status flags.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- mask – Status flag. The parameter can be any combination of the following values:
 - kFLEXIO_UART_TxDataRegEmptyFlag
 - kFLEXIO_UART_RxEmptyFlag

– kFLEXIO_UART_RxOverRunFlag

```
void FLEXIO_UART_EnableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)
```

Enables the FlexIO UART interrupt.

This function enables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

```
void FLEXIO_UART_DisableInterrupts(FLEXIO_UART_Type *base, uint32_t mask)
```

Disables the FlexIO UART interrupt.

This function disables the FlexIO UART interrupt.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- mask – Interrupt source.

```
static inline uint32_t FLEXIO_UART_GetTxDataRegisterAddress(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART transmit data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART transmit data register address.

```
static inline uint32_t FLEXIO_UART_GetRxDataRegisterAddress(FLEXIO_UART_Type *base)
```

Gets the FlexIO UART receive data register address.

This function returns the UART data register address, which is mainly used by DMA/eDMA.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.

Returns

FlexIO UART receive data register address.

```
static inline void FLEXIO_UART_EnableTxDMA(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART transmit DMA. This function enables/disables the FlexIO UART Tx DMA, which means asserting the kFLEXIO_UART_TxDataRegEmptyFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- enable – True to enable, false to disable.

```
static inline void FLEXIO_UART_EnableRxDMA(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART receive DMA. This function enables/disables the FlexIO UART Rx DMA, which means asserting kFLEXIO_UART_RxDataRegFullFlag does/doesn't trigger the DMA request.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- enable – True to enable, false to disable.

```
static inline void FLEXIO_UART_Enable(FLEXIO_UART_Type *base, bool enable)
```

Enables/disables the FlexIO UART module operation.

Parameters

- base – Pointer to the *FLEXIO_UART_Type*.
- enable – True to enable, false does not have any effect.

```
static inline void FLEXIO_UART_WriteByte(FLEXIO_UART_Type *base, const uint8_t *buffer)
```

Writes one byte of data.

Note: This is a non-blocking API, which returns directly after the data is put into the data register. Ensure that the TxEmptyFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- buffer – The data bytes to send.

```
static inline void FLEXIO_UART_ReadByte(FLEXIO_UART_Type *base, uint8_t *buffer)
```

Reads one byte of data.

Note: This is a non-blocking API, which returns directly after the data is read from the data register. Ensure that the RxFullFlag is asserted before calling this API.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- buffer – The buffer to store the received bytes.

```
status_t FLEXIO_UART_WriteBlocking(FLEXIO_UART_Type *base, const uint8_t *txData, size_t txSize)
```

Sends a buffer of data bytes.

Note: This function blocks using the polling method until all bytes have been sent.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- txData – The data bytes to send.
- txSize – The number of data bytes to send.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully wrote all data.

```
status_t FLEXIO_UART_ReadBlocking(FLEXIO_UART_Type *base, uint8_t *rxData, size_t rxSize)
```

Receives a buffer of bytes.

Note: This function blocks using the polling method until all bytes have been received.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- rxData – The buffer to store the received bytes.
- rxSize – The number of data bytes to be received.

Return values

- kStatus_FLEXIO_UART_Timeout – Transmission timed out and was aborted.
- kStatus_Success – Successfully received all data.

```
status_t FLEXIO_UART_TransferCreateHandle(FLEXIO_UART_Type *base, flexio_uart_handle_t
                                         *handle, flexio_uart_transfer_callback_t callback,
                                         void *userData)
```

Initializes the UART handle.

This function initializes the FlexIO UART handle, which can be used for other FlexIO UART transactional APIs. Call this API once to get the initialized handle.

The UART driver supports the “background” receiving, which means that users can set up a RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the FLEXIO_UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as ringBuffer.

Parameters

- base – to FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.
- callback – The callback function.
- userData – The parameter of the callback function.

Return values

- kStatus_Success – Successfully create the handle.
- kStatus_OutOfRange – The FlexIO type/handle/ISR table out of range.

```
void FLEXIO_UART_TransferStartRingBuffer(FLEXIO_UART_Type *base, flexio_uart_handle_t
                                         *handle, uint8_t *ringBuffer, size_t
                                         ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn’t call the UART_ReceiveNonBlocking() API. If there is already data received in the ring buffer, users can get the received data from the ring buffer directly.

Note: When using the RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, only 31 bytes are used for saving data.

Parameters

- base – Pointer to the FLEXIO_UART_Type structure.
- handle – Pointer to the flexio_uart_handle_t structure to store the transfer state.

- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – Size of the ring buffer.

```
void FLEXIO_UART_TransferStopRingBuffer(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
status_t FLEXIO_UART_TransferSendNonBlocking(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, flexio_uart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function sends data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data to be written to the TX register. When all data is written to the TX register in ISR, the FlexIO UART driver calls the callback function and passes the *kStatus_FLEXIO_UART_TxIdle* as status parameter.

Note: The *kStatus_FLEXIO_UART_TxIdle* is passed to the upper layer when all data is written to the TX register. However, it does not ensure that all data is sent out.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.
- xfer – FlexIO UART transfer structure. See *flexio_uart_transfer_t*.

Return values

- *kStatus_Success* – Successfully starts the data transmission.
- *kStatus_UART_TxBusy* – Previous transmission still not finished, data not written to the TX register.

```
void FLEXIO_UART_TransferAbortSend(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle)
```

Aborts the interrupt-driven data transmit.

This function aborts the interrupt-driven data sending. Get the *remainBytes* to find out how many bytes are still not sent out.

Parameters

- base – Pointer to the *FLEXIO_UART_Type* structure.
- handle – Pointer to the *flexio_uart_handle_t* structure to store the transfer state.

```
status_t FLEXIO_UART_TransferGetSendCount(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, size_t *count)
```

Gets the number of bytes sent.

This function gets the number of bytes sent driven by interrupt.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `count` – Number of bytes sent so far by the non-blocking transaction.

Return values

- `kStatus_NoTransferInProgress` – transfer has finished or no transfer in progress.
- `kStatus_Success` – Successfully return the count.

```
status_t FLEXIO_UART_TransferReceiveNonBlocking(FLEXIO_UART_Type *base,
                                                flexio_uart_handle_t *handle,
                                                flexio_uart_transfer_t *xfer, size_t
                                                *receivedBytes)
```

Receives a buffer of data using the interrupt method.

This function receives data using the interrupt method. This is a non-blocking function, which returns without waiting for all data to be received. If the RX ring buffer is used and not empty, the data in ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in ring buffer is not enough to read, the receive request is saved by the UART driver. When new data arrives, the receive request is serviced first. When all data is received, the UART driver notifies the upper layer through a callback function and passes the status parameter `kStatus_UART_RxIdle`. For example, if the upper layer needs 10 bytes but there are only 5 bytes in the ring buffer, the 5 bytes are copied to `xfer->data`. This function returns with the parameter `receivedBytes` set to 5. For the last 5 bytes, newly arrived data is saved from the `xfer->data[5]`. When 5 bytes are received, the UART driver notifies upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `xfer` – UART transfer structure. See `flexio_uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_FLEXIO_UART_RxBusy` – Previous receive request is not finished.

```
void FLEXIO_UART_TransferAbortReceive(FLEXIO_UART_Type *base, flexio_uart_handle_t
                                       *handle)
```

Aborts the receive data which was using IRQ.

This function aborts the receive data which was using IRQ.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.

`status_t FLEXIO_UART_TransferGetReceiveCount(FLEXIO_UART_Type *base,
flexio_uart_handle_t *handle, size_t *count)`

Gets the number of bytes received.

This function gets the number of bytes received driven by interrupt.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.
- `handle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.
- `count` – Number of bytes received so far by the non-blocking transaction.

Return values

- `kStatus_NoTransferInProgress` – transfer has finished or no transfer in progress.
- `kStatus_Success` – Successfully return the count.

`void FLEXIO_UART_TransferHandleIRQ(void *uartType, void *uartHandle)`

FlexIO UART IRQ handler function.

This function processes the FlexIO UART transmit and receives the IRQ request.

Parameters

- `uartType` – Pointer to the `FLEXIO_UART_Type` structure.
- `uartHandle` – Pointer to the `flexio_uart_handle_t` structure to store the transfer state.

`void FLEXIO_UART_FlushShifters(FLEXIO_UART_Type *base)`

Flush tx/rx shifters.

Parameters

- `base` – Pointer to the `FLEXIO_UART_Type` structure.

`FSL_FLEXIO_UART_DRIVER_VERSION`

FlexIO UART driver version.

Error codes for the UART driver.

Values:

enumerator `kStatus_FLEXIO_UART_TxBusy`

Transmitter is busy.

enumerator `kStatus_FLEXIO_UART_RxBusy`

Receiver is busy.

enumerator `kStatus_FLEXIO_UART_TxIdle`

UART transmitter is idle.

enumerator `kStatus_FLEXIO_UART_RxIdle`

UART receiver is idle.

enumerator `kStatus_FLEXIO_UART_ERROR`

ERROR happens on UART.

enumerator `kStatus_FLEXIO_UART_RxRingBufferOverrun`

UART RX software ring buffer overrun.

enumerator `kStatus_FLEXIO_UART_RxHardwareOverrun`
 UART RX receiver overrun.

enumerator `kStatus_FLEXIO_UART_Timeout`
 UART times out.

enumerator `kStatus_FLEXIO_UART_BaudrateNotSupport`
 Baudrate is not supported in current clock source

enum `_flexio_uart_bit_count_per_char`
 FlexIO UART bit count per char.

Values:

enumerator `kFLEXIO_UART_7BitsPerChar`
 7-bit data characters

enumerator `kFLEXIO_UART_8BitsPerChar`
 8-bit data characters

enumerator `kFLEXIO_UART_9BitsPerChar`
 9-bit data characters

enum `_flexio_uart_interrupt_enable`
 Define FlexIO UART interrupt mask.

Values:

enumerator `kFLEXIO_UART_TxDataRegEmptyInterruptEnable`
 Transmit buffer empty interrupt enable.

enumerator `kFLEXIO_UART_RxDataRegFullInterruptEnable`
 Receive buffer full interrupt enable.

enum `_flexio_uart_status_flags`
 Define FlexIO UART status mask.

Values:

enumerator `kFLEXIO_UART_TxDataRegEmptyFlag`
 Transmit buffer empty flag.

enumerator `kFLEXIO_UART_RxDataRegFullFlag`
 Receive buffer full flag.

enumerator `kFLEXIO_UART_RxOverRunFlag`
 Receive buffer over run flag.

typedef enum `_flexio_uart_bit_count_per_char` `flexio_uart_bit_count_per_char_t`
 FlexIO UART bit count per char.

typedef struct `_flexio_uart_type` `FLEXIO_UART_Type`
 Define FlexIO UART access structure typedef.

typedef struct `_flexio_uart_config` `flexio_uart_config_t`
 Define FlexIO UART user configuration structure.

typedef struct `_flexio_uart_transfer` `flexio_uart_transfer_t`
 Define FlexIO UART transfer structure.

typedef struct `_flexio_uart_handle` `flexio_uart_handle_t`

```
typedef void (*flexio_uart_transfer_callback_t)(FLEXIO_UART_Type *base, flexio_uart_handle_t *handle, status_t status, void *userData)
```

FlexIO UART transfer callback function.

```
UART_RETRY_TIMES
```

Retry times for waiting flag.

```
struct _flexio_uart_type
```

#include <fsl_flexio_uart.h> Define FlexIO UART access structure typedef.

Public Members

```
FLEXIO_Type *flexioBase
```

FlexIO base pointer.

```
uint8_t TxPinIndex
```

Pin select for UART_Tx.

```
uint8_t RxPinIndex
```

Pin select for UART_Rx.

```
uint8_t shifterIndex[2]
```

Shifter index used in FlexIO UART.

```
uint8_t timerIndex[2]
```

Timer index used in FlexIO UART.

```
struct _flexio_uart_config
```

#include <fsl_flexio_uart.h> Define FlexIO UART user configuration structure.

Public Members

```
bool enableUart
```

Enable/disable FlexIO UART TX & RX.

```
bool enableInDoze
```

Enable/disable FlexIO operation in doze mode

```
bool enableInDebug
```

Enable/disable FlexIO operation in debug mode

```
bool enableFastAccess
```

Enable/disable fast access to FlexIO registers, fast access requires the FlexIO clock to be at least twice the frequency of the bus clock.

```
uint32_t baudRate_Bps
```

Baud rate in Bps.

```
flexio_uart_bit_count_per_char_t bitCountPerChar
```

number of bits, 7/8/9 -bit

```
struct _flexio_uart_transfer
```

#include <fsl_flexio_uart.h> Define FlexIO UART transfer structure.

Public Members

```
size_t dataSize
```

Transfer size

```
struct _flexio_uart_handle
    #include <fsl_flexio_uart.h> Define FLEXIO UART handle structure.
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
volatile size_t txDataSize
    Size of the remaining data to send.
uint8_t *volatile rxData
    Address of remaining data to receive.
volatile size_t rxDataSize
    Size of the remaining data to receive.
size_t txDataSizeAll
    Total bytes to be sent.
size_t rxDataSizeAll
    Total bytes to be received.
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
size_t rxRingBufferSize
    Size of the ring buffer.
volatile uint16_t rxRingBufferHead
    Index for the driver to store received data into ring buffer.
volatile uint16_t rxRingBufferTail
    Index for the user to get data from the ring buffer.
flexio_uart_transfer_callback_t callback
    Callback function.
void *userData
    UART callback function parameter.
volatile uint8_t txState
    TX transfer state.
volatile uint8_t rxState
    RX transfer state
union __unnamed89__
```

Public Members

```
uint8_t *data
    The buffer of data to be transfer.
uint8_t *rxData
    The buffer to receive data.
const uint8_t *txData
    The buffer of data to be sent.
```

2.26 **FREQME: Frequency Measurement**

2.27 **GLIKEY**

2.28 **GLIKEY**

Values:

enumerator kStatus_GLIKEY_LockedError
GLIKEY status for locked SFR registers (unexpected) .

enumerator kStatus_GLIKEY_NotLocked
GLIKEY status for unlocked SFR registers.

enumerator kStatus_GLIKEY_Locked
GLIKEY status for locked SFR registers.

enumerator kStatus_GLIKEY_DisabledError
GLIKEY status for disabled error.

FSL_GLIKEY_DRIVER_VERSION
Defines GLIKEY driver version 2.0.1.

Change log:

- Version 2.0.1
 - Implement INIT state recovery from the LOCKED state after a reset when the previous index was locked.
- Version 2.0.0
 - Initial version

GLIKEY_CODEWORD_STEP1

GLIKEY_CODEWORD_STEP2

GLIKEY_CODEWORD_STEP3

GLIKEY_CODEWORD_STEP4

GLIKEY_CODEWORD_STEP5

GLIKEY_CODEWORD_STEP6

GLIKEY_CODEWORD_STEP7

GLIKEY_CODEWORD_STEP_EN

GLIKEY_FSM_WR_DIS

GLIKEY_FSM_INIT

GLIKEY_FSM_STEP1

GLIKEY_FSM_STEP2

GLIKEY_FSM_STEP3

GLIKEY_FSM_STEP4

GLIKEY_FSM_LOCKED

GLIKEY_FSM_WR_EN

GLIKEY_FSM_SSR_RESET

uint32_t GLIKEY_GetStatus(GLIKEY_Type *base)

Retrieves the current status of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Glikey status information

status_t GLIKEY_IsLocked(GLIKEY_Type *base)

Get if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_Locked – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status

status_t GLIKEY_CheckLock(GLIKEY_Type *base)

Check if Glikey is locked.

This operation returns the locking status of Glikey.

Return values

- kStatus_GLIKEY_LockedError – if locked
- kStatus_GLIKEY_NotLocked – if unlocked

Returns

Status kStatus_Success if success

status_t GLIKEY_SyncReset(GLIKEY_Type *base)

Perform a synchronous reset of Glikey.

This function performs a synchronous reset of the Glikey. This results in:

- Glikey will return to the INIT state, unless it is in the LOCK state

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntEnable(GLIKEY_Type *base, uint32_t value)

Set interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[in]** Value to set the interrupt enable flag to, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_GetIntEnable(GLIKEY_Type *base, uint32_t *value)

Get interrupt enable flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance
- value – **[out]** Pointer which will be filled with the interrupt enable status, see #[TODO: add reference to constants]

Returns

Status kStatus_Success if success

status_t GLIKEY_ClearIntStatus(GLIKEY_Type *base)

Clear the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_SetIntStatus(GLIKEY_Type *base)

Set the interrupt status flag of Glikey.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError

status_t GLIKEY_Lock(GLIKEY_Type *base)

Lock Glikey SFR (Special Function Registers) interface.

This operation locks the Glikey SFR interface if it is not locked yet.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success

status_t GLIKEY_LockIndex(GLIKEY_Type *base)

Lock Glikey index.

This operation is used to lock a Glikey index. It can only be executed from the WR_EN state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_IsIndexLocked(GLIKEY_Type *base, uint32_t index)

Check if Glikey index is locked.

This operation returns the locking status of Glikey index.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

kStatus_GLIKEY_Locked if locked, kStatus_GLIKEY_NotLocked if unlocked
Possible errors: kStatus_Fail

status_t GLIKEY_StartEnable(GLIKEY_Type *base, uint32_t index)

Start Glikey enable.

This operation is used to set a new index and start a the sequence to enable it. It needs to be started from the INIT state. If the new index is already locked Glikey will go to LOCKED state, otherwise it will go to STEP1 state. If this operation is used when Glikey is in any state other than INIT Glikey will go to WR_DIS state. It can only recover from this state through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- index – **[in]** The index of the Glikey instance

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError, kStatus_Fail

status_t GLIKEY_ContinueEnable(GLIKEY_Type *base, uint32_t codeword)

Continue Glikey enable.

This operation is used to progress through the different states of the state machine, starting from STEP1 until the state WR_EN is reached. Each next state of the state machine can only be reached by providing the right codeword to this function. If anything goes wrong the state machine will go to WR_DIS state and can only recover from it through a reset (synchronous or asynchronous). If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance
- codeword – **[in]** Encoded word for progressing to next FSM state (see GLIKEY_CODEWORD_STEPx/EN)

Returns

Status kStatus_Success if success Possible errors: kStatus_GLIKEY_LockedError, kStatus_Fail, kStatus_GLIKEY_DisabledError

status_t GLIKEY_EndOperation(GLIKEY_Type *base)

End Glikey operation.

This operation is used to end a Glikey operation. It can only be executed from the WR_EN, LOCKED and RESET states. Executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. After this operation Glikey will go to INIT state or stay in LOCKED state when the index was locked. If the Glikey SFR lock is active this operation will return an error.

Parameters

- base – **[in]** The base address of the Glikey instance

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

status_t GLIKEY_ResetIndex(GLIKEY_Type *base, uint32_t index)

Reset Glikey index.

This operation is used to reset a Glikey index. It can only be executed from the INIT state, executing it from any other state will result in Glikey entering WR_DIS state. When this happens Glikey requires a reset (synchronous or asynchronous) to go back to INIT state. If the Glikey SFR lock is active or the index is locked this operation will return an error.

Returns

A code-flow protected error code (see nxpCsslFlowProtection)

Returns

Status kStatus_Success if success, kStatus_GLIKEY_Locked if index is still locked Possible errors: kStatus_GLIKEY_LockedError, kStatus_GLIKEY_DisabledError

2.29 GPIO: General-Purpose Input/Output Driver

FSL_GPIO_DRIVER_VERSION

GPIO driver version.

enum _gpio_pin_direction

GPIO direction definition.

Values:

enumerator kGPIO_DigitalInput

Set current pin as digital input

enumerator kGPIO_DigitalOutput

Set current pin as digital output

enum _gpio_checker_attribute

GPIO checker attribute.

Values:

enumerator kGPIO_UsernonsecureRWUsersecureRWPrivilegedsecureRW

User nonsecure:Read+Write; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRWPrivilegedsecureRW

User nonsecure:Read; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRWPrivilegedsecureRW

User nonsecure:None; User Secure:Read+Write; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureRUsersecureRPrivilegedsecureRW

User nonsecure:Read; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureRPrivilegedsecureRW

User nonsecure:None; User Secure:Read; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureRW
 User nonsecure:None; User Secure:None; Privileged Secure:Read+Write

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureR
 User nonsecure:None; User Secure:None; Privileged Secure:Read

enumerator kGPIO_UsernonsecureNUsersecureNPrivilegedsecureN
 User nonsecure:None; User Secure:None; Privileged Secure:None

enumerator kGPIO_IgnoreAttributeCheck
 Ignores the attribute check

enum _gpio_interrupt_config
 Configures the interrupt generation condition.

Values:

enumerator kGPIO_InterruptStatusFlagDisabled
 Interrupt status flag is disabled.

enumerator kGPIO_DMARisingEdge
 ISF flag and DMA request on rising edge.

enumerator kGPIO_DMAFallingEdge
 ISF flag and DMA request on falling edge.

enumerator kGPIO_DMAEitherEdge
 ISF flag and DMA request on either edge.

enumerator kGPIO_FlagRisingEdge
 Flag sets on rising edge.

enumerator kGPIO_FlagFallingEdge
 Flag sets on falling edge.

enumerator kGPIO_FlagEitherEdge
 Flag sets on either edge.

enumerator kGPIO_InterruptLogicZero
 Interrupt when logic zero.

enumerator kGPIO_InterruptRisingEdge
 Interrupt on rising edge.

enumerator kGPIO_InterruptFallingEdge
 Interrupt on falling edge.

enumerator kGPIO_InterruptEitherEdge
 Interrupt on either edge.

enumerator kGPIO_InterruptLogicOne
 Interrupt when logic one.

enumerator kGPIO_ActiveHighTriggerOutputEnable
 Enable active high-trigger output.

enumerator kGPIO_ActiveLowTriggerOutputEnable
 Enable active low-trigger output.

enum _gpio_interrupt_selection
 Configures the selection of interrupt/DMA request/trigger output.

Values:

enumerator kGPIO_InterruptOutput0
Interrupt/DMA request/trigger output 0.

enumerator kGPIO_InterruptOutput1
Interrupt/DMA request/trigger output 1.

enum gpio_pin_interrupt_control_t
GPIO pin and interrupt control.

Values:

enumerator kGPIO_PinControlNonSecure
Pin Control Non-Secure.

enumerator kGPIO_InterruptControlNonSecure
Interrupt Control Non-Secure.

enumerator kGPIO_PinControlNonPrivilege
Pin Control Non-Privilege.

enumerator kGPIO_InterruptControlNonPrivilege
Interrupt Control Non-Privilege.

typedef enum _gpio_pin_direction gpio_pin_direction_t
GPIO direction definition.

typedef enum _gpio_checker_attribute gpio_checker_attribute_t
GPIO checker attribute.

typedef struct _gpio_pin_config gpio_pin_config_t
The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

typedef enum _gpio_interrupt_config gpio_interrupt_config_t
Configures the interrupt generation condition.

typedef enum _gpio_interrupt_selection gpio_interrupt_selection_t
Configures the selection of interrupt/DMA request/trigger output.

typedef struct _gpio_version_info gpio_version_info_t
GPIO version information.

GPIO_FIT_REG(value)

struct _gpio_pin_config
#include <fsl_gpio.h> The GPIO pin configuration structure.

Each pin can only be configured as either an output pin or an input pin at a time. If configured as an input pin, leave the outputConfig unused. Note that in some use cases, the corresponding port property should be configured in advance with the PORT_SetPinConfig().

Public Members

gpio_pin_direction_t pinDirection
GPIO direction, input or output

uint8_t outputLogic
Set a default output logic, which has no use in input

struct _gpio_version_info
#include <fsl_gpio.h> GPIO version information.

Public Members

uint16_t feature

Feature Specification Number.

uint8_t minor

Minor Version Number.

uint8_t major

Major Version Number.

2.30 GPIO Driver

void GPIO_PortInit(GPIO_Type *base)

Initializes the GPIO peripheral.

This function ungates the GPIO clock.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PortDenit(GPIO_Type *base)

Denitalizes the GPIO peripheral.

Parameters

- base – GPIO peripheral base pointer.

void GPIO_PinInit(GPIO_Type *base, uint32_t pin, const *gpio_pin_config_t* *config)

Initializes a GPIO pin used by the board.

To initialize the GPIO, define a pin configuration, as either input or output, in the user file. Then, call the GPIO_PinInit() function.

This is an example to define an input pin or an output pin configuration.

```
Define a digital input pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalInput,
    0,
}
Define a digital output pin configuration,
gpio_pin_config_t config =
{
    kGPIO_DigitalOutput,
    0,
}
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO port pin number
- config – GPIO pin configuration pointer

void GPIO_GetVersionInfo(GPIO_Type *base, *gpio_version_info_t* *info)

Get GPIO version information.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

- info – GPIO version information

```
static inline void GPIO_SecurePrivilegeLock(GPIO_Type *base, gpio_pin_interrupt_control_t mask)
```

lock or unlock secure privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – pin or interrupt macro

```
static inline void GPIO_EnablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
Enable Pin Control Non-Secure.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Pin Control Non-Secure.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Pin Control Non-Privilege.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisablePinControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Disable Pin Control Non-Privilege.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Secure.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_DisableInterruptControlNonSecure(GPIO_Type *base, uint32_t mask)
Disable Interrupt Control Non-Secure.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_EnableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
Enable Interrupt Control Non-Privilege.
```

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)

- mask – GPIO pin number macro

```
static inline void GPIO_DisableInterruptControlNonPrivilege(GPIO_Type *base, uint32_t mask)
```

Disable Interrupt Control Non-Privilege.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortInputEnable(GPIO_Type *base, uint32_t mask)
```

Enable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortInputDisable(GPIO_Type *base, uint32_t mask)
```

Disable port input.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PinWrite(GPIO_Type *base, uint32_t pin, uint8_t output)
```

Sets the output level of the multiple GPIO pins to the logic 1 or 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- pin – GPIO pin number
- output – GPIO pin output logic level.
 - 0: corresponding pin output low-logic level.
 - 1: corresponding pin output high-logic level.

```
static inline void GPIO_PortSet(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 1.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortClear(GPIO_Type *base, uint32_t mask)
```

Sets the output level of the multiple GPIO pins to the logic 0.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline void GPIO_PortToggle(GPIO_Type *base, uint32_t mask)
```

Reverses the current output logic of the multiple GPIO pins.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

```
static inline uint32_t GPIO_PinRead(GPIO_Type *base, uint32_t pin)
```

Reads the current input value of the GPIO port.

Parameters

- `base` – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- `pin` – GPIO pin number

Return values

GPIO – port input value

- 0: corresponding pin input low-logic level.
- 1: corresponding pin input high-logic level.

```
static inline void GPIO_SetPinInterruptConfig(GPIO_Type *base, uint32_t pin,  
                                             gpio_interrupt_config_t config)
```

Configures the gpio pin interrupt/DMA request.

Parameters

- `base` – GPIO peripheral base pointer.
- `pin` – GPIO pin number.
- `config` – GPIO pin interrupt configuration.
 - `kGPIO_InterruptStatusFlagDisabled`: Interrupt/DMA request disabled.
 - `kGPIO_DMARisingEdge` : DMA request on rising edge(if the DMA requests exit).
 - `kGPIO_DMAFallingEdge`: DMA request on falling edge(if the DMA requests exit).
 - `kGPIO_DMAEitherEdge` : DMA request on either edge(if the DMA requests exit).
 - `kGPIO_FlagRisingEdge` : Flag sets on rising edge(if the Flag states exit).
 - `kGPIO_FlagFallingEdge` : Flag sets on falling edge(if the Flag states exit).
 - `kGPIO_FlagEitherEdge` : Flag sets on either edge(if the Flag states exit).
 - `kGPIO_InterruptLogicZero` : Interrupt when logic zero.
 - `kGPIO_InterruptRisingEdge` : Interrupt on rising edge.
 - `kGPIO_InterruptFallingEdge`: Interrupt on falling edge.
 - `kGPIO_InterruptEitherEdge` : Interrupt on either edge.
 - `kGPIO_InterruptLogicOne` : Interrupt when logic one.
 - `kGPIO_ActiveHighTriggerOutputEnable` : Enable active high-trigger output (if the trigger states exit).
 - `kGPIO_ActiveLowTriggerOutputEnable` : Enable active low-trigger output (if the trigger states exit).

```
static inline void GPIO_SetPinInterruptChannel(GPIO_Type *base, uint32_t pin,  
                                              gpio_interrupt_selection_t selection)
```

Configures the gpio pin interrupt/DMA request/trigger output channel selection.

Parameters

- `base` – GPIO peripheral base pointer.
- `pin` – GPIO pin number.
- `selection` – GPIO pin interrupt output selection.

- kGPIO_InterruptOutput0: Interrupt/DMA request/trigger output 0.
- kGPIO_InterruptOutput1 : Interrupt/DMA request/trigger output 1.

uint32_t GPIO_GpioGetInterruptFlags(GPIO_Type *base)

Read the GPIO interrupt status flags.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)

Returns

The current GPIO's interrupt status flag. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint32_t GPIO_GpioGetInterruptChannelFlags(GPIO_Type *base, uint32_t channel)

Read the GPIO interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on.)
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

Returns

The current GPIO's interrupt status flag based on the selected interrupt channel. '1' means the related pin's flag is set, '0' means the related pin's flag not set. For example, the return value 0x00010001 means the pin 0 and 17 have the interrupt pending.

uint8_t GPIO_PinGetInterruptFlag(GPIO_Type *base, uint32_t pin)

Read individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer. (GPIOA, GPIOB, GPIOC, and so on)
- pin – GPIO specific pin number.

Returns

The current selected pin's interrupt status flag.

void GPIO_GpioClearInterruptFlags(GPIO_Type *base, uint32_t mask)

Clears GPIO pin interrupt status flags.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro

void GPIO_GpioClearInterruptChannelFlags(GPIO_Type *base, uint32_t mask, uint32_t channel)

Clears GPIO pin interrupt status flags based on selected interrupt channel(IRQS).

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- mask – GPIO pin number macro
- channel – '0' means selete interrupt channel 0, '1' means selete interrupt channel 1.

void GPIO_PinClearInterruptFlag(GPIO_Type *base, uint32_t pin)

Clear GPIO individual pin's interrupt status flag.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on).
- pin – GPIO specific pin number.

```
static inline void GPIO_SetMultipleInterruptPinsConfig(GPIO_Type *base, uint32_t mask,  
                                                    gpio_interrupt_config_t config)
```

Sets the GPIO interrupt configuration in PCR register for multiple pins.

Parameters

- base – GPIO peripheral base pointer.
- mask – GPIO pin number macro.
- config – GPIO pin interrupt configuration.
 - kGPIO_InterruptStatusFlagDisabled: Interrupt disabled.
 - kGPIO_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).
 - kGPIO_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
 - kGPIO_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
 - kGPIO_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
 - kGPIO_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
 - kGPIO_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
 - kGPIO_InterruptLogicZero : Interrupt when logic zero.
 - kGPIO_InterruptRisingEdge : Interrupt on rising edge.
 - kGPIO_InterruptFallingEdge: Interrupt on falling edge.
 - kGPIO_InterruptEitherEdge : Interrupt on either edge.
 - kGPIO_InterruptLogicOne : Interrupt when logic one.
 - kGPIO_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
 - kGPIO_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

```
void GPIO_CheckAttributeBytes(GPIO_Type *base, gpio_checker_attribute_t attribute)
```

brief The GPIO module supports a device-specific number of data ports, organized as 32-bit words/8-bit Bytes. Each 32-bit/8-bit data port includes a GACR register, which defines the byte-level attributes required for a successful access to the GPIO programming model. If the GPIO module's GACR register organized as 32-bit words, the attribute controls for the 4 data bytes in the GACR follow a standard little endian data convention.

Parameters

- base – GPIO peripheral base pointer (GPIOA, GPIOB, GPIOC, and so on.)
- attribute – GPIO checker attribute

2.31 I3C: I3C Driver

```
FSL_I3C_DRIVER_VERSION  
I3C driver version.
```

I3C status return codes.

Values:

enumerator `kStatus_I3C_Busy`

The master is already performing a transfer.

enumerator `kStatus_I3C_Idle`

The slave driver is idle.

enumerator `kStatus_I3C_Nak`

The slave device sent a NAK in response to an address.

enumerator `kStatus_I3C_WriteAbort`

The slave device sent a NAK in response to a write.

enumerator `kStatus_I3C_Term`

The master terminates slave read.

enumerator `kStatus_I3C_HdrParityError`

Parity error from DDR read.

enumerator `kStatus_I3C_CrcError`

CRC error from DDR read.

enumerator `kStatus_I3C_ReadFifoError`

Read from M/SRDATAB register when FIFO empty.

enumerator `kStatus_I3C_WriteFifoError`

Write to M/SWDATAB register when FIFO full.

enumerator `kStatus_I3C_MsgError`

Message SDR/DDR mismatch or read/write message in wrong state

enumerator `kStatus_I3C_InvalidReq`

Invalid use of request.

enumerator `kStatus_I3C_Timeout`

The module has stalled too long in a frame.

enumerator `kStatus_I3C_SlaveCountExceed`

The I3C slave count has exceed the definition in `I3C_MAX_DEVCNT`.

enumerator `kStatus_I3C_IBIWon`

The I3C slave event IBI or MR or HJ won the arbitration on a header address.

enumerator `kStatus_I3C_OverrunError`

Slave internal from-bus buffer/FIFO overrun.

enumerator `kStatus_I3C_UnderrunError`

Slave internal to-bus buffer/FIFO underrun

enumerator `kStatus_I3C_UnderrunNak`

Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator `kStatus_I3C_InvalidStart`

Slave invalid start flag

enumerator `kStatus_I3C_SdrParityError`

SDR parity error

enumerator kStatus_I3C_S0S1Error
S0 or S1 error

enum i3c_hdr_mode
I3C HDR modes.

Values:

enumerator kI3C_HDRModeNone

enumerator kI3C_HDRModeDDR

enumerator kI3C_HDRModeTSP

enumerator kI3C_HDRModeTSL

typedef enum i3c_hdr_mode i3c_hdr_mode_t
I3C HDR modes.

typedef struct i3c_device_info i3c_device_info_t
I3C device information.

I3C_RETRY_TIMES
Max loops to wait for I3C operation status complete.

This is the maximum number of loops to wait for I3C operation status complete. If set to 0, it will wait indefinitely.

I3C_MAX_DEVCNT

I3C_IBI_BUFF_SIZE

struct i3c_device_info
#include <fsl_i3c.h> I3C device information.

Public Members

uint8_t dynamicAddr
Device dynamic address.

uint8_t staticAddr
Static address.

uint8_t dcr
Device characteristics register information.

uint8_t bcr
Bus characteristics register information.

uint16_t vendorID
Device vendor ID(manufacture ID).

uint32_t partNumber
Device part number info

uint16_t maxReadLength
Maximum read length.

uint16_t maxWriteLength
Maximum write length.

uint8_t hdrMode
Support hdr mode, could be OR logic in i3c_hdr_mode.

2.32 I3C Common Driver

```
typedef struct i3c_config i3c_config_t
```

Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the `I3C_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

```
uint32_t I3C_GetInstance(I3C_Type *base)
```

Get which instance current I3C is used.

Parameters

- `base` – The I3C peripheral base address.

```
void I3C_GetDefaultConfig(i3c_config_t *config)
```

Provides a default configuration for the I3C peripheral, the configuration covers both master functionality and slave functionality.

This function provides the following default configuration for I3C:

```
config->enableMaster           = kI3C_MasterCapable;
config->disableTimeout         = false;
config->hKeep                  = kI3C_MasterHighKeeperNone;
config->enableOpenDrainStop    = true;
config->enableOpenDrainHigh    = true;
config->baudRate_Hz.i2cBaud    = 400000U;
config->baudRate_Hz.i3cPushPullBaud = 12500000U;
config->baudRate_Hz.i3cOpenDrainBaud = 2500000U;
config->masterDynamicAddress   = 0x0AU;
config->slowClock_Hz           = 1000000U;
config->enableSlave            = true;
config->vendorID                = 0x11BU;
config->enableRandomPart       = false;
config->partNumber              = 0;
config->dcr                     = 0;
config->bcr = 0;
config->hdrMode                 = (uint8_t)kI3C_HDRModeDDR;
config->nakAllRequest           = false;
config->ignoreS0S1Error        = false;
config->offline                 = false;
config->matchSlaveStartStop    = false;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the common I3C driver with `I3C_Init()`.

Parameters

- `config` – **[out]** User provided configuration structure for default values. Refer to `i3c_config_t`.

```
void I3C_Init(I3C_Type *base, const i3c_config_t *config, uint32_t sourceClock_Hz)
```

Initializes the I3C peripheral. This function enables the peripheral clock and initializes the I3C peripheral as described by the user provided configuration. This will initialize both the master peripheral and slave peripheral so that I3C module could work as pure master, pure slave or secondary master, etc. A software reset is performed prior to configuration.

Parameters

- `base` – The I3C peripheral base address.

- `config` – User provided peripheral configuration. Use `I3C_GetDefaultConfig()` to get a set of defaults that you can override.
- `sourceClock_Hz` – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`struct __i3c_config`

`#include <fsl_i3c.h>` Structure with settings to initialize the I3C module, could both initialize master and slave functionality.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the `I3C_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

`i3c_master_enable_t` enableMaster

Enable master mode.

`bool` disableTimeout

Whether to disable timeout to prevent the ERRWARN.

`i3c_master_hkeep_t` hKeep

High keeper mode setting.

`bool` enableOpenDrainStop

Whether to emit open-drain speed STOP.

`bool` enableOpenDrainHigh

Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

`i3c_baudrate_hz_t` baudRate_Hz

Desired baud rate settings.

`i3c_start_scl_delay_t` startSclDelay

I3C SCL delay after START.

`i3c_start_scl_delay_t` restartSclDelay

I3C SCL delay after Repeated START.

`uint8_t` masterDynamicAddress

Main master dynamic address configuration.

`uint32_t` maxWriteLength

Maximum write length.

`uint32_t` maxReadLength

Maximum read length.

`bool` enableSlave

Whether to enable slave.

`uint8_t` staticAddr

Static address.

`uint16_t` vendorID

Device vendor ID(manufacture ID).

`uint32_t` partNumber

Device part number info

uint8_t dcr

Device characteristics register information.

uint8_t bcr

Bus characteristics register information.

uint8_t hdrMode

Support hdr mode, could be OR logic in enumeration: `i3c_hdr_mode_t`.

bool nakAllRequest

Whether to reply NAK to all requests except broadcast CCC.

bool ignoreS0S1Error

Whether to ignore S0/S1 error in SDR mode.

bool offline

Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

bool matchSlaveStartStop

Whether to assert start/stop status only the time slave is addressed.

2.33 I3C Master Driver

```
void I3C_MasterGetDefaultConfig(i3c_master_config_t *masterConfig)
```

Provides a default configuration for the I3C master peripheral.

This function provides the following default configuration for the I3C master peripheral:

```
masterConfig->enableMaster      = kI3C_MasterOn;
masterConfig->disableTimeout    = false;
masterConfig->hKeep             = kI3C_MasterHighKeeperNone;
masterConfig->enableOpenDrainStop = true;
masterConfig->enableOpenDrainHigh = true;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busType           = kI3C_TypeI2C;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with `I3C_MasterInit()`.

Parameters

- `masterConfig` – **[out]** User provided configuration structure for default values. Refer to `i3c_master_config_t`.

```
void I3C_MasterInit(I3C_Type *base, const i3c_master_config_t *masterConfig, uint32_t
sourceClock_Hz)
```

Initializes the I3C master peripheral.

This function enables the peripheral clock and initializes the I3C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- `base` – The I3C peripheral base address.
- `masterConfig` – User provided peripheral configuration. Use `I3C_MasterGetDefaultConfig()` to get a set of defaults that you can override.

- `sourceClock_Hz` – Frequency in Hertz of the I3C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void I3C_MasterDeinit(I3C_Type *base)`

Deinitializes the I3C master peripheral.

This function disables the I3C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The I3C peripheral base address.

`status_t I3C_MasterCheckAndClearError(I3C_Type *base, uint32_t status)`

`status_t I3C_MasterWaitForCtrlDone(I3C_Type *base, bool waitIdle)`

`status_t I3C_CheckForBusyBus(I3C_Type *base)`

`static inline void I3C_MasterEnable(I3C_Type *base, i3c_master_enable_t enable)`

Set I3C module master mode.

Parameters

- `base` – The I3C peripheral base address.
- `enable` – Enable master mode.

`void I3C_SlaveGetDefaultConfig(i3c_slave_config_t *slaveConfig)`

Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableslave = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with `I3C_SlaveInit()`.

Parameters

- `slaveConfig` – **[out]** User provided configuration structure for default values. Refer to `i3c_slave_config_t`.

`void I3C_SlaveInit(I3C_Type *base, const i3c_slave_config_t *slaveConfig, uint32_t slowClock_Hz)`

Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- `base` – The I3C peripheral base address.
- `slaveConfig` – User provided peripheral configuration. Use `I3C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- `slowClock_Hz` – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If `FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH` defines as 1, this parameter is useless.

`void I3C_SlaveDeinit(I3C_Type *base)`

Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnabled)
Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnabled – Enable or disable.

static inline uint32_t I3C_MasterGetStatusFlags(I3C_Type *base)

Gets the I3C master status flags.

A bit mask with the state of all I3C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

[_i3c_master_flags](#)

Parameters

- base – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

static inline void I3C_MasterClearStatusFlags(I3C_Type *base, uint32_t statusMask)

Clears the I3C master status flag state.

The following status register flags can be cleared:

- kI3C_MasterSlaveStartFlag
- kI3C_MasterControlDoneFlag
- kI3C_MasterCompleteFlag
- kI3C_MasterArbitrationWonFlag
- kI3C_MasterSlave2MasterFlag

Attempts to clear other flags has no effect.

See also:

[_i3c_master_flags](#).

Parameters

- base – The I3C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of [_i3c_master_flags](#) enumerators OR'd together. You may pass the result of a previous call to [I3C_MasterGetStatusFlags\(\)](#).

static inline uint32_t I3C_MasterGetErrorStatusFlags(I3C_Type *base)

Gets the I3C master error status flags.

A bit mask with the state of all I3C master error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_i3c_master_error_flags`

Parameters

- `base` – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void I3C_MasterClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)
Clears the I3C master error status flag state.
```

See also:

`_i3c_master_error_flags`.

Parameters

- `base` – The I3C peripheral base address.
- `statusMask` – A bitmask of error status flags that are to be cleared. The mask is composed of `_i3c_master_error_flags` enumerators OR'd together. You may pass the result of a previous call to `I3C_MasterGetStatusFlags()`.

```
i3c_master_state_t I3C_MasterGetState(I3C_Type *base)
Gets the I3C master state.
```

Parameters

- `base` – The I3C peripheral base address.

Returns

I3C master state.

```
static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)
Gets the I3C slave status flags.
```

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_i3c_slave_flags`

Parameters

- `base` – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)
Clears the I3C slave status flag state.
```

The following status register flags can be cleared:

- `kI3C_SlaveBusStartFlag`

- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag

Attempts to clear other flags has no effect.

See also:

`_i3c_slave_flags`.

Parameters

- `base` – The I3C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_i3c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `I3C_SlaveGetStatusFlags()`.

```
static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)
```

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_i3c_slave_error_flags`

Parameters

- `base` – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)
```

Clears the I3C slave error status flag state.

See also:

`_i3c_slave_error_flags`.

Parameters

- `base` – The I3C peripheral base address.
- `statusMask` – A bitmask of error status flags that are to be cleared. The mask is composed of `_i3c_slave_error_flags` enumerators OR'd together. You may pass the result of a previous call to `I3C_SlaveGetErrorStatusFlags()`.

```
i3c_slave_activity_state_t I3C_SlaveGetActivityState(I3C_Type *base)
```

Gets the I3C slave state.

Parameters

- `base` – The I3C peripheral base address.

Returns

I3C slave activity state, refer `i3c_slave_activity_state_t`.

status_t I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)

static inline void I3C_MasterEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C master interrupt requests.

All flags except `kI3C_MasterBetweenFlag` and `kI3C_MasterNackDetectFlag` can be enabled as interrupts.

Parameters

- `base` – The I3C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_i3c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline void I3C_MasterDisableInterrupts(I3C_Type *base, uint32_t interruptMask)

Disables the I3C master interrupt requests.

All flags except `kI3C_MasterBetweenFlag` and `kI3C_MasterNackDetectFlag` can be enabled as interrupts.

Parameters

- `base` – The I3C peripheral base address.
- `interruptMask` – Bit mask of interrupts to disable. See `_i3c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

static inline uint32_t I3C_MasterGetEnabledInterrupts(I3C_Type *base)

Returns the set of currently enabled I3C master interrupt requests.

Parameters

- `base` – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

static inline uint32_t I3C_MasterGetPendingInterrupts(I3C_Type *base)

Returns the set of pending I3C master interrupt requests.

Parameters

- `base` – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_master_flags` enumerators OR'd together to indicate the set of pending interrupts.

static inline void I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`
- `kI3C_SlaveRxReadyFlag`
- `kI3C_SlaveTxReadyFlag`
- `kI3C_SlaveDynamicAddrChangedFlag`
- `kI3C_SlaveReceivedCCCFlag`
- `kI3C_SlaveErrorFlag`

- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_i3c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)
```

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- kI3C_SlaveBusStartFlag
- kI3C_SlaveMatchedFlag
- kI3C_SlaveBusStopFlag
- kI3C_SlaveRxReadyFlag
- kI3C_SlaveTxReadyFlag
- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_i3c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)
```

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)
```

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_slave_flags` enumerators OR'd together to indicate the set of pending interrupts.

```
static inline void I3C_MasterEnableDMA(I3C_Type *base, bool enableTx, bool enableRx,
                                       uint32_t width)
```

Enables or disables I3C master DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

```
static inline uint32_t I3C_MasterGetTxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C master transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Transmit Data Register address.

```
static inline uint32_t I3C_MasterGetRxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C master receive data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Master Receive Data Register address.

```
static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t
                                       width)
```

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

```
static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Transmit Data Register address.

```
static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C slave receive data register address for DMA transfer.

Parameters

- *base* – The I3C peripheral base address.
- *width* – DMA read/write unit in bytes.

Returns

The I3C Slave Receive Data Register address.

```
static inline void I3C_MasterSetWatermarks(I3C_Type *base, i3c_tx_trigger_level_t txLvl,
                                           i3c_rx_trigger_level_t rxLvl, bool flushTx, bool
                                           flushRx)
```

Sets the watermarks for I3C master FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txLvl* – Transmit FIFO watermark level. The `kI3C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- *rxLvl* – Receive FIFO watermark level. The `kI3C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- *flushTx* – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- *flushRx* – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

```
static inline void I3C_MasterGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of bytes in the I3C master FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txCount* – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- *rxCount* – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

```
static inline void I3C_SlaveSetWatermarks(I3C_Type *base, i3c_tx_trigger_level_t txLvl,
                                           i3c_rx_trigger_level_t rxLvl, bool flushTx, bool
                                           flushRx)
```

Sets the watermarks for I3C slave FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txLvl* – Transmit FIFO watermark level. The `kI3C_SlaveTxReadyFlag` flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- *rxLvl* – Receive FIFO watermark level. The `kI3C_SlaveRxReadyFlag` flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- *flushTx* – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- *flushRx* – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

```
static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txCount* – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- *rxCount* – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

```
void I3C_MasterSetBaudRate(I3C_Type *base, const i3c_baudrate_hz_t *baudRate_Hz, uint32_t  
sourceClock_Hz)
```

Sets the I3C bus frequency for master transactions.

The I3C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Parameters

- *base* – The I3C peripheral base address.
- *baudRate_Hz* – Pointer to structure of requested bus frequency in Hertz.
- *sourceClock_Hz* – I3C functional clock frequency in Hertz.

```
static inline bool I3C_MasterGetBusIdleState(I3C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- *base* – The I3C peripheral base address.

Return values

- *true* – Bus is busy.
- *false* – Bus is idle.

```
status_t I3C_MasterStartWithRxSize(I3C_Type *base, i3c_bus_type_t type, uint8_t address,  
i3c_direction_t dir, uint8_t rxSize)
```

Sends a START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *a* address parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- *base* – The I3C peripheral base address.
- *type* – The bus type to use in this transaction.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either *kI3C_Read* or *kI3C_Write*. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- *rxSize* – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.

`status_t I3C_MasterStart(I3C_Type *base, i3c_bus_type_t type, uint8_t address, i3c_direction_t dir)`

Sends a START signal and slave address on the I2C/I3C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted, followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- *base* – The I3C peripheral base address.
- *type* – The bus type to use in this transaction.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kI3C_Read` or `kI3C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.

`status_t I3C_MasterRepeatedStartWithRxSize(I3C_Type *base, i3c_bus_type_t type, uint8_t address, i3c_direction_t dir, uint8_t rxSize)`

Sends a repeated START signal and slave address on the I2C/I3C bus, receive size is also specified in the call.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `I3C_MasterStart()`, it also sends the specified 7-bit address. Call this API also configures the read terminate size for the following read transfer. For example, set the `rxSize = 2`, the following read transfer will be terminated after two bytes of data received. Write transfer will not be affected by the `rxSize` configuration.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- *base* – The I3C peripheral base address.
- *type* – The bus type to use in this transaction.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kI3C_Read` or `kI3C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.
- *rxSize* – Read terminate size for the followed read transfer, limit to 255 bytes.

Return values

`kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.

```
static inline status_t I3C_MasterRepeatedStart(I3C_Type *base, i3c_bus_type_t type, uint8_t
                                             address, i3c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C/I3C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like I3C_MasterStart(), it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between I3C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- *base* – The I3C peripheral base address.
- *type* – The bus type to use in this transaction.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kI3C_Read` or `kI3C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

`kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.

```
status_t I3C_MasterSend(I3C_Type *base, const void *txBuff, size_t txSize, uint32_t flags)
```

Performs a polling send transfer on the I2C/I3C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_I3C_Nak`.

Parameters

- *base* – The I3C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.
- *flags* – Bit mask of options for the transfer. See enumeration `_i3c_master_transfer_flags` for available options.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.
- `kStatus_I3C_Timeout` – The module has stalled too long in a frame.
- `kStatus_I3C_Nak` – The slave device sent a NAK in response to an address.
- `kStatus_I3C_WriteAbort` – The slave device sent a NAK in response to a write.
- `kStatus_I3C_MsgError` – Message SDR/DDR mismatch or read/write message in wrong state.
- `kStatus_I3C_WriteFifoError` – Write to M/SWDATAB register when FIFO full.
- `kStatus_I3C_InvalidReq` – Invalid use of request.

```
status_t I3C_MasterReceive(I3C_Type *base, void *rxBuff, size_t rxSize, uint32_t flags)
```

Performs a polling receive transfer on the I2C/I3C bus.

Parameters

- `base` – The I3C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.
- `flags` – Bit mask of options for the transfer. See enumeration `_i3c_master_transfer_flags` for available options.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.
- `kStatus_I3C_Timeout` – The module has stalled too long in a frame.
- `kStatus_I3C_Term` – The master terminates slave read.
- `kStatus_I3C_HdrParityError` – Parity error from DDR read.
- `kStatus_I3C_CrcError` – CRC error from DDR read.
- `kStatus_I3C_MsgError` – Message SDR/DDR mismatch or read/write message in wrong state.
- `kStatus_I3C_ReadFifoError` – Read from M/SRDATAB register when FIFO empty.
- `kStatus_I3C_InvalidReq` – Invalid use of request.

`status_t I3C_MasterStop(I3C_Type *base)`

Sends a STOP signal on the I2C/I3C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The I3C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.
- `kStatus_I3C_Timeout` – The module has stalled too long in a frame.
- `kStatus_I3C_InvalidReq` – Invalid use of request.

`void I3C_MasterEmitRequest(I3C_Type *base, i3c_bus_request_t masterReq)`

I3C master emit request.

Parameters

- `base` – The I3C peripheral base address.
- `masterReq` – I3C master request of type `i3c_bus_request_t`

`static inline void I3C_MasterEmitIBIResponse(I3C_Type *base, i3c_ibi_response_t ibiResponse)`

I3C master emit request.

Parameters

- `base` – The I3C peripheral base address.
- `ibiResponse` – I3C master emit IBI response of type `i3c_ibi_response_t`

`void I3C_MasterRegisterIBI(I3C_Type *base, i3c_register_ibi_addr_t *ibiRule)`
I3C master register IBI rule.

Parameters

- `base` – The I3C peripheral base address.
- `ibiRule` – Pointer to ibi rule description of type `i3c_register_ibi_addr_t`

`void I3C_MasterGetIBIRules(I3C_Type *base, i3c_register_ibi_addr_t *ibiRule)`
I3C master get IBI rule.

Parameters

- `base` – The I3C peripheral base address.
- `ibiRule` – Pointer to store the read out ibi rule description.

`i3c_ibi_type_t I3C_GetIBIType(I3C_Type *base)`
I3C master get IBI Type.

Parameters

- `base` – The I3C peripheral base address.

Return values

`i3c_ibi_type_t` – Type of `i3c_ibi_type_t`.

`static inline uint8_t I3C_GetIBIAddress(I3C_Type *base)`
I3C master get IBI Address.

Parameters

- `base` – The I3C peripheral base address.

Return values

The – 8-bit IBI address.

`status_t I3C_MasterProcessDAASpecifiedBaudrate(I3C_Type *base, uint8_t *addressList, uint32_t count, i3c_master_daa_baudrate_t *daaBaudRate)`

Performs a DAA in the i3c bus with specified temporary baud rate.

Parameters

- `base` – The I3C peripheral base address.
- `addressList` – The pointer for address list which is used to do DAA.
- `count` – The address count in the address list.
- `daaBaudRate` – The temporary baud rate in DAA process, NULL for using initial setting. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_I3C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- `kStatus_I3C_SlaveCountExceed` – The I3C slave count has exceed the definition in `I3C_MAX_DEVCNT`.

`static inline status_t I3C_MasterProcessDAA(I3C_Type *base, uint8_t *addressList, uint32_t count)`

Performs a DAA in the i3c bus.

Parameters

- `base` – The I3C peripheral base address.
- `addressList` – The pointer for address list which is used to do DAA.
- `count` – The address count in the address list. The initial setting is set back between the completion of the DAA and the return of this function.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_I3C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.
- `kStatus_I3C_SlaveCountExceed` – The I3C slave count has exceed the definition in `I3C_MAX_DEVCNT`.

`i3c_device_info_t *I3C_MasterGetDeviceListAfterDAA(I3C_Type *base, uint8_t *count)`

Get device information list after DAA process is done.

Parameters

- `base` – The I3C peripheral base address.
- `count` – **[out]** The pointer to store the available device count.

Returns

Pointer to the `i3c_device_info_t` array.

`void I3C_MasterClearDeviceCount(I3C_Type *base)`

Clear the global device count which represents current devices number on the bus. When user resets all dynamic addresses on the bus, should call this API.

Parameters

- `base` – The I3C peripheral base address.

`status_t I3C_MasterTransferBlocking(I3C_Type *base, i3c_master_transfer_t *transfer)`

Performs a master polling transfer on the I2C/I3C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The I3C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_I3C_Busy` – Another master is currently utilizing the bus.
- `kStatus_I3C_IBIWon` – The I3C slave event IBI or MR or HJ won the arbitration on a header address.
- `kStatus_I3C_Timeout` – The module has stalled too long in a frame.
- `kStatus_I3C_Nak` – The slave device sent a NAK in response to an address.
- `kStatus_I3C_WriteAbort` – The slave device sent a NAK in response to a write.
- `kStatus_I3C_Term` – The master terminates slave read.
- `kStatus_I3C_HdrParityError` – Parity error from DDR read.

- `kStatus_I3C_CrcError` – CRC error from DDR read.
- `kStatus_I3C_MsgError` – Message SDR/DDR mismatch or read/write message in wrong state.
- `kStatus_I3C_ReadFifoError` – Read from M/SRDATAB register when FIFO empty.
- `kStatus_I3C_WriteFifoError` – Write to M/SWDATAB register when FIFO full.
- `kStatus_I3C_InvalidReq` – Invalid use of request.

`status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)`

Performs a polling send transfer on the I3C bus.

Parameters

- `base` – The I3C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

`status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)`

Performs a polling receive transfer on the I3C bus.

Parameters

- `base` – The I3C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

`void I3C_MasterTransferCreateHandle(I3C_Type *base, i3c_master_handle_t *handle, const i3c_master_transfer_callback_t *callback, void *userData)`

Creates a new handle for the I3C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `I3C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – **[out]** Pointer to the I3C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

`status_t I3C_MasterTransferNonBlocking(I3C_Type *base, i3c_master_handle_t *handle, i3c_master_transfer_t *transfer)`

Performs a non-blocking transaction on the I2C/I3C bus.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_I3C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

```
status_t I3C_MasterTransferGetCount(I3C_Type *base, i3c_master_handle_t *handle, size_t
                                     *count)
```

Returns number of bytes transferred so far.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.
- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

```
void I3C_MasterTransferAbort(I3C_Type *base, i3c_master_handle_t *handle)
```

Terminates a non-blocking I3C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the I3C peripheral's IRQ priority.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.

Return values

- `kStatus_Success` – A transaction was successfully aborted.
- `kStatus_I3C_Idle` – There is not a non-blocking transaction currently in progress.

```
void I3C_MasterTransferHandleIRQ(I3C_Type *base, void *intHandle)
```

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The I3C peripheral base address.
- `intHandle` – Pointer to the I3C master driver handle.

enum `_i3c_master_flags`

I3C master peripheral flags.

The following status register flags can be cleared:

- `kI3C_MasterSlaveStartFlag`
- `kI3C_MasterControlDoneFlag`
- `kI3C_MasterCompleteFlag`
- `kI3C_MasterArbitrationWonFlag`
- `kI3C_MasterSlave2MasterFlag`

All flags except `kI3C_MasterBetweenFlag` and `kI3C_MasterNackDetectFlag` can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator `kI3C_MasterBetweenFlag`

Between messages/DAA's flag

enumerator `kI3C_MasterNackDetectFlag`

NACK detected flag

enumerator `kI3C_MasterSlaveStartFlag`

Slave request start flag

enumerator `kI3C_MasterControlDoneFlag`

Master request complete flag

enumerator `kI3C_MasterCompleteFlag`

Transfer complete flag

enumerator `kI3C_MasterRxReadyFlag`

Rx data ready in Rx buffer flag

enumerator `kI3C_MasterTxReadyFlag`

Tx buffer ready for Tx data flag

enumerator `kI3C_MasterArbitrationWonFlag`

Header address won arbitration flag

enumerator `kI3C_MasterErrorFlag`

Error occurred flag

enumerator `kI3C_MasterSlave2MasterFlag`

Switch from slave to master flag

enumerator `kI3C_MasterClearFlags`

enum `_i3c_master_error_flags`

I3C master error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator `kI3C_MasterErrorNackFlag`

Slave NACKed the last address

- enumerator kI3C_MasterErrorWriteAbortFlag
Slave NACKed the write data
- enumerator kI3C_MasterErrorParityFlag
Parity error from DDR read
- enumerator kI3C_MasterErrorCrcFlag
CRC error from DDR read
- enumerator kI3C_MasterErrorReadFlag
Read from MRDATAB register when FIFO empty
- enumerator kI3C_MasterErrorWriteFlag
Write to MWDATAB register when FIFO full
- enumerator kI3C_MasterErrorMsgFlag
Message SDR/DDR mismatch or read/write message in wrong state
- enumerator kI3C_MasterErrorInvalidReqFlag
Invalid use of request
- enumerator kI3C_MasterErrorTimeoutFlag
The module has stalled too long in a frame
- enumerator kI3C_MasterAllErrorFlags
All error flags

enum _i3c_master_state

I3C working master state.

Values:

- enumerator kI3C_MasterStateIdle
Bus stopped.
- enumerator kI3C_MasterStateSlvReq
Bus stopped but slave holding SDA low.
- enumerator kI3C_MasterStateMsgSdr
In SDR Message mode from using MWMSG_SDR.
- enumerator kI3C_MasterStateNormAct
In normal active SDR mode.
- enumerator kI3C_MasterStateDdr
In DDR Message mode.
- enumerator kI3C_MasterStateDaa
In ENTDAAs mode.
- enumerator kI3C_MasterStateIbiAck
Waiting on IBI ACK/NACK decision.
- enumerator kI3C_MasterStateIbiRcv
Receiving IBI.

enum _i3c_master_enable

I3C master enable configuration.

Values:

- enumerator kI3C_MasterOff
Master off.

enumerator kI3C_MasterOn

Master on.

enumerator kI3C_MasterCapable

Master capable.

enum _i3c_master_hkeep

I3C high keeper configuration.

Values:

enumerator kI3C_MasterHighKeeperNone

Use PUR to hold SCL high.

enumerator kI3C_MasterHighKeeperWiredIn

Use pin_HK controls.

enumerator kI3C_MasterPassiveSDA

Hi-Z for Bus Free and hold SDA.

enumerator kI3C_MasterPassiveSDASCL

Hi-Z both for Bus Free, and can Hi-Z SDA for hold.

enum _i3c_bus_request

Emits the requested operation when doing in pieces vs. by message.

Values:

enumerator kI3C_RequestNone

No request.

enumerator kI3C_RequestEmitStartAddr

Request to emit start and address on bus.

enumerator kI3C_RequestEmitStop

Request to emit stop on bus.

enumerator kI3C_RequestIbiAckNack

Manual IBI ACK or NACK.

enumerator kI3C_RequestProcessDAA

Process DAA.

enumerator kI3C_RequestForceExit

Request to force exit.

enumerator kI3C_RequestAutoIbi

Hold in stopped state, but Auto-emit START,7E.

enum _i3c_bus_type

Bus type with EmitStartAddr.

Values:

enumerator kI3C_TypeI3CSdr

SDR mode of I3C.

enumerator kI3C_TypeI2C

Standard i2c protocol.

enumerator kI3C_TypeI3CDdr

HDR-DDR mode of I3C.

enum `_i3c_ibi_response`

IBI response.

Values:

enumerator `kI3C_IbiRespAck`
ACK with no mandatory byte.

enumerator `kI3C_IbiRespNack`
NACK.

enumerator `kI3C_IbiRespAckMandatory`
ACK with mandatory byte.

enumerator `kI3C_IbiRespManual`
Reserved.

enum `_i3c_ibi_type`

IBI type.

Values:

enumerator `kI3C_IbiNormal`
In-band interrupt.

enumerator `kI3C_IbiHotJoin`
slave hot join.

enumerator `kI3C_IbiMasterRequest`
slave master ship request.

enum `_i3c_ibi_state`

IBI state.

Values:

enumerator `kI3C_IbiReady`
In-band interrupt ready state, ready for user to handle.

enumerator `kI3C_IbiDataBuffNeed`
In-band interrupt need data buffer for data receive.

enumerator `kI3C_IbiAckNackPending`
In-band interrupt Ack/Nack pending for decision.

enum `_i3c_direction`

Direction of master and slave transfers.

Values:

enumerator `kI3C_Write`
Master transmit.

enumerator `kI3C_Read`
Master receive.

enum `_i3c_tx_trigger_level`

Watermark of TX int/dma trigger level.

Values:

enumerator `kI3C_TxTriggerOnEmpty`
Trigger on empty.

enumerator kI3C_TxTriggerUntilOneQuarterOrLess
Trigger on 1/4 full or less.

enumerator kI3C_TxTriggerUntilOneHalfOrLess
Trigger on 1/2 full or less.

enumerator kI3C_TxTriggerUntilOneLessThanFull
Trigger on 1 less than full or less.

enum _i3c_rx_trigger_level
Watermark of RX int/dma trigger level.

Values:

enumerator kI3C_RxTriggerOnNotEmpty
Trigger on not empty.

enumerator kI3C_RxTriggerUntilOneQuarterOrMore
Trigger on 1/4 full or more.

enumerator kI3C_RxTriggerUntilOneHalfOrMore
Trigger on 1/2 full or more.

enumerator kI3C_RxTriggerUntilThreeQuarterOrMore
Trigger on 3/4 full or more.

enum _i3c_rx_term_ops
I3C master read termination operations.

Values:

enumerator kI3C_RxTermDisable
Master doesn't terminate read, used for CCC transfer.

enumerator kI3C_RxAutoTerm
Master auto terminate read after receiving specified bytes(<=255).

enumerator kI3C_RxTermLastByte
Master terminates read at any time after START, no length limitation.

enum _i3c_start_scl_delay
I3C start SCL delay options.

Values:

enumerator kI3C_NoDelay
No delay.

enumerator kI3C_IncreaseSclHalfPeriod
Increases SCL clock period by 1/2.

enumerator kI3C_IncreaseSclOnePeriod
Increases SCL clock period by 1.

enumerator kI3C_IncreaseSclOneAndHalfPeriod
Increases SCL clock period by 1 1/2

enum _i3c_master_transfer_flags
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_i3c_master_transfer::flags` field.

Values:

enumerator `kI3C_TransferDefaultFlag`
Transfer starts with a start signal, stops with a stop signal.

enumerator `kI3C_TransferNoStartFlag`
Don't send a start condition, address, and sub address

enumerator `kI3C_TransferRepeatedStartFlag`
Send a repeated start condition

enumerator `kI3C_TransferNoStopFlag`
Don't send a stop condition.

enumerator `kI3C_TransferWordsFlag`
Transfer in words, else transfer in bytes.

enumerator `kI3C_TransferDisableRxTermFlag`
Disable Rx termination. Note: It's for I3C CCC transfer.

enumerator `kI3C_TransferRxAutoTermFlag`
Set Rx auto-termination. Note: It's adaptive based on Rx size(<=255 bytes) except in `I3C_MasterReceive`.

enumerator `kI3C_TransferStartWithBroadcastAddr`
Start transfer with 0x7E, then read/write data with device address.

typedef enum `_i3c_master_state` `i3c_master_state_t`
I3C working master state.

typedef enum `_i3c_master_enable` `i3c_master_enable_t`
I3C master enable configuration.

typedef enum `_i3c_master_hkeep` `i3c_master_hkeep_t`
I3C high keeper configuration.

typedef enum `_i3c_bus_request` `i3c_bus_request_t`
Emits the requested operation when doing in pieces vs. by message.

typedef enum `_i3c_bus_type` `i3c_bus_type_t`
Bus type with `EmitStartAddr`.

typedef enum `_i3c_ibi_response` `i3c_ibi_response_t`
IBI response.

typedef enum `_i3c_ibi_type` `i3c_ibi_type_t`
IBI type.

typedef enum `_i3c_ibi_state` `i3c_ibi_state_t`
IBI state.

typedef enum `_i3c_direction` `i3c_direction_t`
Direction of master and slave transfers.

typedef enum `_i3c_tx_trigger_level` `i3c_tx_trigger_level_t`
Watermark of TX int/dma trigger level.

typedef enum `_i3c_rx_trigger_level` `i3c_rx_trigger_level_t`
Watermark of RX int/dma trigger level.

typedef enum `_i3c_rx_term_ops` `i3c_rx_term_ops_t`
I3C master read termination operations.

typedef enum `_i3c_start_scl_delay` `i3c_start_scl_delay_t`
I3C start SCL delay options.

```
typedef struct _i3c_register_ibi_addr i3c_register_ibi_addr_t
    Structure with setting master IBI rules and slave registry.
```

```
typedef struct _i3c_baudrate i3c_baudrate_hz_t
    Structure with I3C baudrate settings.
```

```
typedef struct _i3c_master_daa_baudrate i3c_master_daa_baudrate_t
    I3C DAA baud rate configuration.
```

```
typedef struct _i3c_master_config i3c_master_config_t
    Structure with settings to initialize the I3C master module.
```

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the I3C_MasterGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

```
typedef struct _i3c_master_transfer i3c_master_transfer_t
```

```
typedef struct _i3c_master_handle i3c_master_handle_t
```

```
typedef struct _i3c_master_transfer_callback i3c_master_transfer_callback_t
    i3c master callback functions.
```

```
typedef void (*i3c_master_isr_t)(I3C_Type *base, void *handle)
    Typedef for master interrupt handler.
```

```
struct _i3c_register_ibi_addr
    #include <fsl_i3c.h> Structure with setting master IBI rules and slave registry.
```

Public Members

```
uint8_t address[5]
    Address array for registry.
```

```
bool i3cFastStart
    Allow the START header to run as push-pull speed if all dynamic addresses take MSB 0.
```

```
bool ibiHasPayload
    Whether the address array has mandatory IBI byte.
```

```
struct _i3c_baudrate
    #include <fsl_i3c.h> Structure with I3C baudrate settings.
```

Public Members

```
uint32_t i2cBaud
    Desired I2C baud rate in Hertz.
```

```
uint32_t i3cPushPullBaud
    Desired I3C push-pull baud rate in Hertz.
```

```
uint32_t i3cOpenDrainBaud
    Desired I3C open-drain baud rate in Hertz.
```

```
struct _i3c_master_daa_baudrate
    #include <fsl_i3c.h> I3C DAA baud rate configuration.
```

Public Members

`uint32_t sourceClock_Hz`
FCLK, function clock in Hertz.

`uint32_t i3cPushPullBaud`
Desired I3C push-pull baud rate in Hertz.

`uint32_t i3cOpenDrainBaud`
Desired I3C open-drain baud rate in Hertz.

`struct _i3c_master_config`

#include <fsl_i3c.h> Structure with settings to initialize the I3C master module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the `I3C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

`i3c_master_enable_t enableMaster`
Enable master mode.

`bool disableTimeout`
Whether to disable timeout to prevent the ERRWARN.

`i3c_master_hkeep_t hKeep`
High keeper mode setting.

`bool enableOpenDrainStop`
Whether to emit open-drain speed STOP.

`bool enableOpenDrainHigh`
Enable Open-Drain High to be 1 PPBAUD count for i3c messages, or 1 ODBAUD.

`i3c_baudrate_hz_t baudRate_Hz`
Desired baud rate settings.

`i3c_start_scl_delay_t startSclDelay`
I3C SCL delay after START.

`i3c_start_scl_delay_t restartSclDelay`
I3C SCL delay after Repeated START.

`struct _i3c_master_transfer_callback`

#include <fsl_i3c.h> i3c master callback functions.

Public Members

`void (*slave2Master)(I3C_Type *base, void *userData)`
Transfer complete callback

`void (*ibiCallback)(I3C_Type *base, i3c_master_handle_t *handle, i3c_ibi_type_t ibiType, i3c_ibi_state_t ibiState)`
IBI event callback

`void (*transferComplete)(I3C_Type *base, i3c_master_handle_t *handle, status_t completionStatus, void *userData)`
Transfer complete callback

struct `_i3c_master_transfer`

#include <fsl_i3c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the `I3C_MasterTransferNonBlocking()` API.

Public Members

`uint32_t` flags

Bit mask of options for the transfer. See enumeration `_i3c_master_transfer_flags` for available options. Set to 0 or `kI3C_TransferDefaultFlag` for normal transfers.

`uint8_t` slaveAddress

The 7-bit slave address.

`i3c_direction_t` direction

Either `kI3C_Read` or `kI3C_Write`.

`uint32_t` subaddress

Sub address. Transferred MSB first.

`size_t` subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

`void *`data

Pointer to data to transfer.

`size_t` dataSize

Number of bytes to transfer.

`i3c_bus_type_t` busType

bus type.

`i3c_ibi_response_t` ibiResponse

ibi response during transfer.

struct `_i3c_master_handle`

#include <fsl_i3c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

`uint8_t` state

Transfer state machine current state.

`uint32_t` remainingBytes

Remaining byte count in current state.

`i3c_rx_term_ops_t` rxTermOps

Read termination operation.

`i3c_master_transfer_t` transfer

Copy of the current transfer info.

`uint8_t` ibiAddress

Slave address which request IBI.

`uint8_t *ibiBuff`
 Pointer to IBI buffer to keep ibi bytes.

`size_t ibiPayloadSize`
 IBI payload size.

`i3c_ibi_type_t ibiType`
 IBI type.

`i3c_master_transfer_callback_t callback`
 Callback functions pointer.

`void *userData`
 Application data passed to callback.

2.34 I3C Master DMA Driver

```
void I3C_MasterTransferCreateHandleEDMA(I3C_Type *base, i3c_master_edma_handle_t
                                        *handle, const i3c_master_edma_callback_t
                                        *callback, void *userData, edma_handle_t
                                        *rxDmaHandle, edma_handle_t *txDmaHandle)
```

Create a new handle for the I3C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `I3C_MasterTransferAbortDMA()` API shall be called.

For devices where the I3C send and receive DMA requests are OR'd together, the `txDmaHandle` parameter is ignored and may be set to NULL.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.
- `rxDmaHandle` – Handle for the DMA receive channel. Created by the user prior to calling this function.
- `txDmaHandle` – Handle for the DMA transmit channel. Created by the user prior to calling this function.

```
status_t I3C_MasterTransferEDMA(I3C_Type *base, i3c_master_edma_handle_t *handle,
                                i3c_master_transfer_t *transfer)
```

Performs a non-blocking DMA-based transaction on the I3C bus.

The callback specified when the `handle` was created is invoked when the transaction has completed.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.

- `kStatus_I3C_Busy` – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

`status_t I3C_MasterTransferGetCountEDMA(I3C_Type *base, i3c_master_edma_handle_t *handle, size_t *count)`

Returns number of bytes transferred so far.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.
- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` – There is not a DMA transaction currently in progress.

`void I3C_MasterTransferAbortEDMA(I3C_Type *base, i3c_master_edma_handle_t *handle)`

Terminates a non-blocking I3C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the DMA peripheral's IRQ priority.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to the I3C master driver handle.

`void I3C_MasterTransferEDMAHandleIRQ(I3C_Type *base, void *i3cHandle)`

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The I3C peripheral base address.
- `i3cHandle` – Pointer to the I3C master DMA driver handle.

`typedef struct i3c_master_edma_handle i3c_master_edma_handle_t`

`typedef struct i3c_master_edma_callback i3c_master_edma_callback_t`
i3c master callback functions.

`struct i3c_master_edma_callback`

`#include <fsl_i3c_edma.h>` i3c master callback functions.

Public Members

`void (*slave2Master)(I3C_Type *base, void *userData)`

Target asks for controller request.

```
void (*ibiCallback)(I3C_Type *base, i3c_master_edma_handle_t *handle, i3c_ibi_type_t
ibiType, i3c_ibi_state_t ibiState)
```

IBI event callback.

```
void (*transferComplete)(I3C_Type *base, i3c_master_edma_handle_t *handle, status_t
status, void *userData)
```

Transfer complete callback.

```
struct _i3c_master_edma_handle
```

```
#include <fsl_i3c_edma.h> Driver handle for master EDMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

```
I3C_Type *base
```

I3C base pointer.

```
uint8_t state
```

Transfer state machine current state.

```
uint32_t transferCount
```

Indicates progress of the transfer

```
uint8_t subaddressBuffer[4]
```

Saving subaddress command.

```
uint8_t subaddressCount
```

Saving command count.

```
i3c_master_transfer_t transfer
```

Copy of the current transfer info.

```
i3c_master_edma_callback_t callback
```

Callback function pointer.

```
void *userData
```

Application data passed to callback.

```
edma_handle_t *rxDmaHandle
```

Handle for receive DMA channel.

```
edma_handle_t *txDmaHandle
```

Handle for transmit DMA channel.

```
bool ibiFlag
```

IBIWON flag.

```
uint8_t ibiAddress
```

Slave address which request IBI.

```
uint8_t *ibiBuff
```

Pointer to IBI buffer to keep ibi bytes.

```
size_t ibiPayloadSize
```

IBI payload size.

```
i3c_ibi_type_t ibiType
```

IBI type.

status_t result

Transfer result.

2.35 I3C Slave Driver

void I3C_SlaveGetDefaultConfig(*i3c_slave_config_t* *slaveConfig)

Provides a default configuration for the I3C slave peripheral.

This function provides the following default configuration for the I3C slave peripheral:

```
slaveConfig->enableSlave = true;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the slave driver with I3C_SlaveInit().

Parameters

- slaveConfig – **[out]** User provided configuration structure for default values. Refer to *i3c_slave_config_t*.

void I3C_SlaveInit(I3C_Type *base, const *i3c_slave_config_t* *slaveConfig, uint32_t slowClock_Hz)

Initializes the I3C slave peripheral.

This function enables the peripheral clock and initializes the I3C slave peripheral as described by the user provided configuration.

Parameters

- base – The I3C peripheral base address.
- slaveConfig – User provided peripheral configuration. Use I3C_SlaveGetDefaultConfig() to get a set of defaults that you can override.
- slowClock_Hz – Frequency in Hertz of the I3C slow clock. Used to calculate the bus match condition values. If FSL_FEATURE_I3C_HAS_NO_SCONFIG_BAMATCH defines as 1, this parameter is useless.

void I3C_SlaveDeinit(I3C_Type *base)

Deinitializes the I3C slave peripheral.

This function disables the I3C slave peripheral and gates the clock.

Parameters

- base – The I3C peripheral base address.

static inline void I3C_SlaveEnable(I3C_Type *base, bool isEnabled)

Enable/Disable Slave.

Parameters

- base – The I3C peripheral base address.
- isEnabled – Enable or disable.

static inline uint32_t I3C_SlaveGetStatusFlags(I3C_Type *base)

Gets the I3C slave status flags.

A bit mask with the state of all I3C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:`_i3c_slave_flags`**Parameters**

- `base` – The I3C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void I3C_SlaveClearStatusFlags(I3C_Type *base, uint32_t statusMask)
```

Clears the I3C slave status flag state.

The following status register flags can be cleared:

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`

Attempts to clear other flags has no effect.

See also:`_i3c_slave_flags`.**Parameters**

- `base` – The I3C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_i3c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `I3C_SlaveGetStatusFlags()`.

```
static inline uint32_t I3C_SlaveGetErrorStatusFlags(I3C_Type *base)
```

Gets the I3C slave error status flags.

A bit mask with the state of all I3C slave error status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:`_i3c_slave_error_flags`**Parameters**

- `base` – The I3C peripheral base address.

Returns

State of the error status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void I3C_SlaveClearErrorStatusFlags(I3C_Type *base, uint32_t statusMask)
```

Clears the I3C slave error status flag state.

See also:

`_i3c_slave_error_flags`.

Parameters

- `base` – The I3C peripheral base address.
- `statusMask` – A bitmask of error status flags that are to be cleared. The mask is composed of `_i3c_slave_error_flags` enumerators OR'd together. You may pass the result of a previous call to `I3C_SlaveGetErrorStatusFlags()`.

`i3c_slave_activity_state_t` `I3C_SlaveGetActivityState(I3C_Type *base)`

Gets the I3C slave state.

Parameters

- `base` – The I3C peripheral base address.

Returns

I3C slave activity state, refer `i3c_slave_activity_state_t`.

`status_t` `I3C_SlaveCheckAndClearError(I3C_Type *base, uint32_t status)`

`static inline void` `I3C_SlaveEnableInterrupts(I3C_Type *base, uint32_t interruptMask)`

Enables the I3C slave interrupt requests.

Only below flags can be enabled as interrupts.

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`
- `kI3C_SlaveRxReadyFlag`
- `kI3C_SlaveTxReadyFlag`
- `kI3C_SlaveDynamicAddrChangedFlag`
- `kI3C_SlaveReceivedCCCFlag`
- `kI3C_SlaveErrorFlag`
- `kI3C_SlaveHDRCommandMatchFlag`
- `kI3C_SlaveCCCHandledFlag`
- `kI3C_SlaveEventSentFlag`

Parameters

- `base` – The I3C peripheral base address.
- `interruptMask` – Bit mask of interrupts to enable. See `_i3c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

`static inline void` `I3C_SlaveDisableInterrupts(I3C_Type *base, uint32_t interruptMask)`

Disables the I3C slave interrupt requests.

Only below flags can be disabled as interrupts.

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`
- `kI3C_SlaveRxReadyFlag`
- `kI3C_SlaveTxReadyFlag`

- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Parameters

- base – The I3C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_i3c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t I3C_SlaveGetEnabledInterrupts(I3C_Type *base)
```

Returns the set of currently enabled I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline uint32_t I3C_SlaveGetPendingInterrupts(I3C_Type *base)
```

Returns the set of pending I3C slave interrupt requests.

Parameters

- base – The I3C peripheral base address.

Returns

A bitmask composed of `_i3c_slave_flags` enumerators OR'd together to indicate the set of pending interrupts.

```
static inline void I3C_SlaveEnableDMA(I3C_Type *base, bool enableTx, bool enableRx, uint32_t width)
```

Enables or disables I3C slave DMA requests.

Parameters

- base – The I3C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.
- width – DMA read/write unit in bytes.

```
static inline uint32_t I3C_SlaveGetTxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C slave transmit data register address for DMA transfer.

Parameters

- base – The I3C peripheral base address.
- width – DMA read/write unit in bytes.

Returns

The I3C Slave Transmit Data Register address.

```
static inline uint32_t I3C_SlaveGetRxFifoAddress(I3C_Type *base, uint32_t width)
```

Gets I3C slave receive data register address for DMA transfer.

Parameters

- *base* – The I3C peripheral base address.
- *width* – DMA read/write unit in bytes.

Returns

The I3C Slave Receive Data Register address.

```
static inline void I3C_SlaveSetWatermarks(I3C_Type *base, i3c_tx_trigger_level_t txLvl,  
                                         i3c_rx_trigger_level_t rxLvl, bool flushTx, bool  
                                         flushRx)
```

Sets the watermarks for I3C slave FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txLvl* – Transmit FIFO watermark level. The `kI3C_SlaveTxReadyFlag` flag is set whenever the number of words in the transmit FIFO reaches *txLvl*.
- *rxLvl* – Receive FIFO watermark level. The `kI3C_SlaveRxReadyFlag` flag is set whenever the number of words in the receive FIFO reaches *rxLvl*.
- *flushTx* – true if TX FIFO is to be cleared, otherwise TX FIFO remains unchanged.
- *flushRx* – true if RX FIFO is to be cleared, otherwise RX FIFO remains unchanged.

```
static inline void I3C_SlaveGetFifoCounts(I3C_Type *base, size_t *rxCount, size_t *txCount)
```

Gets the current number of bytes in the I3C slave FIFOs.

Parameters

- *base* – The I3C peripheral base address.
- *txCount* – **[out]** Pointer through which the current number of bytes in the transmit FIFO is returned. Pass NULL if this value is not required.
- *rxCount* – **[out]** Pointer through which the current number of bytes in the receive FIFO is returned. Pass NULL if this value is not required.

```
status_t I3C_SlaveSend(I3C_Type *base, const void *txBuff, size_t txSize)
```

Performs a polling send transfer on the I3C bus.

Parameters

- *base* – The I3C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

```
status_t I3C_SlaveReceive(I3C_Type *base, void *rxBuff, size_t rxSize)
```

Performs a polling receive transfer on the I3C bus.

Parameters

- *base* – The I3C peripheral base address.
- *rxBuff* – The pointer to the data to be transferred.
- *rxSize* – The length in bytes of the data to be transferred.

Returns

Error or success status returned by API.

```
void I3C_SlaveTransferCreateHandle(I3C_Type *base, i3c_slave_handle_t *handle,
                                i3c_slave_transfer_callback_t callback, void *userData)
```

Creates a new handle for the I3C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the I3C_SlaveTransferAbort() API shall be called.

Note: The function also enables the NVIC IRQ for the input I3C. Need to notice that on some SoCs the I3C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- base – The I3C peripheral base address.
- handle – **[out]** Pointer to the I3C slave driver handle.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

```
status_t I3C_SlaveTransferNonBlocking(I3C_Type *base, i3c_slave_handle_t *handle, uint32_t
                                     eventMask)
```

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and I3C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to I3C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the *eventMask* parameter to the OR'd combination of *i3c_slave_transfer_event_t* enumerators for the events you wish to receive. The *kI3C_SlaveTransmitEvent* and *kI3C_SlaveReceiveEvent* events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the *kI3C_SlaveAllEvents* constant is provided as a convenient way to enable all events.

Parameters

- base – The I3C peripheral base address.
- handle – Pointer to struct: *_i3c_slave_handle* structure which stores the transfer state.
- eventMask – Bit mask formed by OR'ing together *i3c_slave_transfer_event_t* enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and *kI3C_SlaveAllEvents* to enable all events.

Return values

- *kStatus_Success* – Slave transfers were successfully started.
- *kStatus_I3C_Busy* – Slave transfers have already been started on this handle.

```
status_t I3C_SlaveTransferGetCount(I3C_Type *base, i3c_slave_handle_t *handle, size_t *count)
```

Gets the slave transfer status during a non-blocking transfer.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to `i2c_slave_handle_t` structure.
- `count` – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` –

`void I3C_SlaveTransferAbort(I3C_Type *base, i2c_slave_handle_t *handle)`

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- `base` – The I3C peripheral base address.
- `handle` – Pointer to struct: `_i3c_slave_handle` structure which stores the transfer state.

Return values

- `kStatus_Success` –
- `kStatus_I3C_Idle` –

`void I3C_SlaveTransferHandleIRQ(I3C_Type *base, void *intHandle)`

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The I3C peripheral base address.
- `intHandle` – Pointer to struct: `_i3c_slave_handle` structure which stores the transfer state.

`enum _i3c_slave_flags`

I3C slave peripheral flags.

The following status register flags can be cleared:

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`

Only below flags can be enabled as interrupts.

- `kI3C_SlaveBusStartFlag`
- `kI3C_SlaveMatchedFlag`
- `kI3C_SlaveBusStopFlag`
- `kI3C_SlaveRxReadyFlag`
- `kI3C_SlaveTxReadyFlag`

- kI3C_SlaveDynamicAddrChangedFlag
- kI3C_SlaveReceivedCCCFlag
- kI3C_SlaveErrorFlag
- kI3C_SlaveHDRCommandMatchFlag
- kI3C_SlaveCCCHandledFlag
- kI3C_SlaveEventSentFlag

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveNotStopFlag

Slave status not stop flag

enumerator kI3C_SlaveMessageFlag

Slave status message, indicating slave is listening to the bus traffic or responding

enumerator kI3C_SlaveRequiredReadFlag

Slave status required, either is master doing SDR read from slave, or is IBI pushing out.

enumerator kI3C_SlaveRequiredWriteFlag

Slave status request write, master is doing SDR write to slave, except slave in ENTDAAMode

enumerator kI3C_SlaveBusDAAModeFlag

I3C bus is in ENTDAAMode

enumerator kI3C_SlaveBusHDRModeFlag

I3C bus is in HDR mode

enumerator kI3C_SlaveBusStartFlag

Start/Re-start event is seen since the bus was last cleared

enumerator kI3C_SlaveMatchedFlag

Slave address(dynamic/static) matched since last cleared

enumerator kI3C_SlaveBusStopFlag

Stop event is seen since the bus was last cleared

enumerator kI3C_SlaveRxReadyFlag

Rx data ready in rx buffer flag

enumerator kI3C_SlaveTxReadyFlag

Tx buffer ready for Tx data flag

enumerator kI3C_SlaveDynamicAddrChangedFlag

Slave dynamic address has been assigned, re-assigned, or lost

enumerator kI3C_SlaveReceivedCCCFlag

Slave received Common command code

enumerator kI3C_SlaveErrorFlag

Error occurred flag

enumerator kI3C_SlaveHDRCommandMatchFlag

High data rate command match

enumerator kI3C_SlaveCCCHandledFlag
Slave received Common command code is handled by I3C module

enumerator kI3C_SlaveEventSentFlag
Slave IBI/P2P/MR/HJ event has been sent

enumerator kI3C_SlaveIbiDisableFlag
Slave in band interrupt is disabled.

enumerator kI3C_SlaveMasterRequestDisabledFlag
Slave master request is disabled.

enumerator kI3C_SlaveHotJoinDisabledFlag
Slave Hot-Join is disabled.

enumerator kI3C_SlaveClearFlags
All flags which are cleared by the driver upon starting a transfer.

enumerator kI3C_SlaveAllIrqFlags

enum _i3c_slave_error_flags
I3C slave error flags to indicate the causes.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator kI3C_SlaveErrorOverrunFlag
Slave internal from-bus buffer/FIFO overrun.

enumerator kI3C_SlaveErrorUnderrunFlag
Slave internal to-bus buffer/FIFO underrun

enumerator kI3C_SlaveErrorUnderrunNakFlag
Slave internal from-bus buffer/FIFO underrun and NACK error

enumerator kI3C_SlaveErrorTermFlag
Terminate error from master

enumerator kI3C_SlaveErrorInvalidStartFlag
Slave invalid start flag

enumerator kI3C_SlaveErrorSdrParityFlag
SDR parity error

enumerator kI3C_SlaveErrorHdrParityFlag
HDR parity error

enumerator kI3C_SlaveErrorHdrCRCFlag
HDR-DDR CRC error

enumerator kI3C_SlaveErrorS0S1Flag
S0 or S1 error

enumerator kI3C_SlaveErrorOverreadFlag
Over-read error

enumerator kI3C_SlaveErrorOverwriteFlag
Over-write error

enum `_i3c_slave_event`

I3C slave.event.

Values:

enumerator `kI3C_SlaveEventNormal`
Normal mode.

enumerator `kI3C_SlaveEventIBI`
In band interrupt event.

enumerator `kI3C_SlaveEventMasterReq`
Master request event.

enumerator `kI3C_SlaveEventHotJoinReq`
Hot-join event.

enum `_i3c_slave_activity_state`

I3C slave.activity state.

Values:

enumerator `kI3C_SlaveNoLatency`
Normal bus operation

enumerator `kI3C_SlaveLatency1Ms`
1ms of latency.

enumerator `kI3C_SlaveLatency100Ms`
100ms of latency.

enumerator `kI3C_SlaveLatency10S`
10s latency.

enum `_i3c_slave_transfer_event`

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `I3C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator `kI3C_SlaveAddressMatchEvent`
Received the slave address after a start or repeated start.

enumerator `kI3C_SlaveTransmitEvent`
Callback is requested to provide data to transmit (slave-transmitter role).

enumerator `kI3C_SlaveReceiveEvent`
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator `kI3C_SlaveRequiredTransmitEvent`
Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator `kI3C_SlaveStartEvent`
A start/repeated start was detected.

enumerator `kI3C_SlaveHDRCommandMatchEvent`
Slave Match HDR Command.

enumerator `kI3C_SlaveCompletionEvent`
A stop was detected, completing the transfer.

enumerator `kI3C_SlaveRequestSentEvent`
Slave request event sent.

enumerator `kI3C_SlaveReceivedCCCEvent`
Slave received CCC event, need to handle by application.

enumerator `kI3C_SlaveAllEvents`
Bit mask of all available events.

typedef enum `_i3c_slave_event` `i3c_slave_event_t`
I3C slave.event.

typedef enum `_i3c_slave_activity_state` `i3c_slave_activity_state_t`
I3C slave.activity state.

typedef struct `_i3c_slave_config` `i3c_slave_config_t`
Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the `I3C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum `_i3c_slave_transfer_event` `i3c_slave_transfer_event_t`
Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `I3C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct `_i3c_slave_transfer` `i3c_slave_transfer_t`
I3C slave transfer structure.

typedef struct `_i3c_slave_handle` `i3c_slave_handle_t`

typedef void (`*i3c_slave_transfer_callback_t`)(`I3C_Type *base`, `i3c_slave_transfer_t *transfer`, void `*userData`)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the `I3C_SlaveSetCallback()` function after you have created a handle.

Param base

Base address for the I3C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*i3c_slave_isr_t)(I3C_Type *base, void *handle)
```

Typedef for slave interrupt handler.

```
struct _i3c_slave_config
```

#include <fsl_i3c.h> Structure with settings to initialize the I3C slave module.

This structure holds configuration settings for the I3C peripheral. To initialize this structure to reasonable defaults, call the `I3C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

```
bool enableSlave
```

Whether to enable slave.

```
uint8_t staticAddr
```

Static address.

```
uint16_t vendorID
```

Device vendor ID(manufacture ID).

```
uint32_t partNumber
```

Device part number info

```
uint8_t dcr
```

Device characteristics register information.

```
uint8_t bcr
```

Bus characteristics register information.

```
uint8_t hdrMode
```

Support hdr mode, could be OR logic in enumeration:`i3c_hdr_mode_t`.

```
bool nakAllRequest
```

Whether to reply NAK to all requests except broadcast CCC.

```
bool ignoreS0S1Error
```

Whether to ignore S0/S1 error in SDR mode.

```
bool offline
```

Whether to wait 60 us of bus quiet or HDR request to ensure slave track SDR mode safely.

```
bool matchSlaveStartStop
```

Whether to assert start/stop status only the time slave is addressed.

```
uint32_t maxWriteLength
```

Maximum write length.

```
uint32_t maxReadLength
```

Maximum read length.

```
struct _i3c_slave_transfer
```

#include <fsl_i3c.h> I3C slave transfer structure.

Public Members

uint32_t event

Reason the callback is being invoked.

uint8_t *txData

Transfer buffer

size_t txDataSize

Transfer size

uint8_t *rxData

Transfer buffer

size_t rxDataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for `kI3C_SlaveCompletionEvent`.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct _i3c_slave_handle

`#include <fsl_i3c.h>` I3C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

i3c_slave_transfer_t transfer

I3C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

i3c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

uint8_t txFifoSize

Tx Fifo size

2.36 I3C Slave DMA Driver

```
void I3C_SlaveTransferCreateHandleEDMA(I3C_Type *base, i3c_slave_edma_handle_t *handle,
                                       i3c_slave_edma_callback_t callback, void *userData,
                                       edma_handle_t *rxDmaHandle, edma_handle_t
                                       *txDmaHandle)
```

Create a new handle for the I3C slave DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `I3C_SlaveTransferAbortDMA()` API shall be called.

For devices where the I3C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- *base* – The I3C peripheral base address.
- *handle* – Pointer to the I3C slave driver handle.
- *callback* – User provided pointer to the asynchronous callback function.
- *userData* – User provided pointer to the application callback data.
- *rxDmaHandle* – Handle for the DMA receive channel. Created by the user prior to calling this function.
- *txDmaHandle* – Handle for the DMA transmit channel. Created by the user prior to calling this function.

```
status_t I3C_SlaveTransferEDMA(I3C_Type *base, i3c_slave_edma_handle_t *handle,
                               i3c_slave_edma_transfer_t *transfer, uint32_t eventMask)
```

Prepares for a non-blocking DMA-based transaction on the I3C bus.

The API will do DMA configuration according to the input transfer descriptor, and the data will be transferred when there's bus master requesting transfer from/to this slave. So the timing of call to this API need be aligned with master application to ensure the transfer is executed as expected. Callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- *base* – The I3C peripheral base address.
- *handle* – Pointer to the I3C slave driver handle.
- *transfer* – The pointer to the transfer descriptor.
- *eventMask* – Bit mask formed by OR'ing together `i3c_slave_transfer_event_t` enumerators to specify which events to send to the callback. The transmit and receive events is not allowed to be enabled.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_I3C_Busy` – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.
- `kStatus_Fail` – The transaction can't be set.

```
void I3C_SlaveTransferAbortEDMA(I3C_Type *base, i3c_slave_edma_handle_t *handle)
```

Abort a slave edma non-blocking transfer in a early time.

Parameters

- *base* – I3C peripheral base address

- handle – pointer to `i3c_slave_edma_handle_t` structure

`void I3C_SlaveTransferEDMAHandleIRQ(I3C_Type *base, void *i3cHandle)`

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The I3C peripheral base address.
- i3cHandle – Pointer to the I3C slave DMA driver handle.

`typedef struct i3c_slave_edma_handle i3c_slave_edma_handle_t`

`typedef struct i3c_slave_edma_transfer i3c_slave_edma_transfer_t`

I3C slave transfer structure.

`typedef void (*i3c_slave_edma_callback_t)(I3C_Type *base, i3c_slave_edma_transfer_t *transfer, void *userData)`

Slave event callback function pointer type.

This callback is used only for the slave DMA transfer API.

Param base

Base address for the I3C instance on which the event occurred.

Param handle

Pointer to slave DMA transfer handle.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

`struct i3c_slave_edma_transfer`

`#include <fsl_i3c_edma.h>` I3C slave transfer structure.

Public Members

`uint32_t event`

Reason the callback is being invoked.

`uint8_t *txData`

Transfer buffer

`size_t txDataSize`

Transfer size

`uint8_t *rxData`

Transfer buffer

`size_t rxDataSize`

Transfer size

`status_t completionStatus`

Success or error code describing how the transfer completed. Only applies for `kI3C_SlaveCompletionEvent`.

`struct _i3c_slave_edma_handle`
#include <fsl_i3c_edma.h> I3C slave edma handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

`I3C_Type *base`
 I3C base pointer.

`i3c_slave_edma_transfer_t transfer`
 I3C slave transfer copy.

`bool isBusy`
 Whether transfer is busy.

`bool wasTransmit`
 Whether the last transfer was a transmit.

`uint32_t eventMask`
 Mask of enabled events.

`i3c_slave_edma_callback_t callback`
 Callback function called at transfer event.

`edma_handle_t *rxDmaHandle`
 Handle for receive DMA channel.

`edma_handle_t *txDmaHandle`
 Handle for transmit DMA channel.

`void *userData`
 Callback parameter passed to callback.

2.37 INPUTMUX: Input Multiplexing Driver

`enum _inputmux_index_t`
Values:

enumerator `kINPUTMUX_INDEX_CTIMER0CAPTSEL0`

enumerator `kINPUTMUX_INDEX_CTIMER0CAPTSEL1`

enumerator `kINPUTMUX_INDEX_CTIMER0CAPTSEL2`

enumerator `kINPUTMUX_INDEX_CTIMER0CAPTSEL3`

enumerator `kINPUTMUX_INDEX_CTIMER1CAPTSEL0`

enumerator `kINPUTMUX_INDEX_CTIMER1CAPTSEL1`

enumerator `kINPUTMUX_INDEX_CTIMER1CAPTSEL2`

enumerator `kINPUTMUX_INDEX_CTIMER1CAPTSEL3`

enumerator `kINPUTMUX_INDEX_CTIMER2CAPTSEL0`

enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL1
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL2
enumerator kINPUTMUX_INDEX_CTIMER2CAPTSEL3
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL0
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL1
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL2
enumerator kINPUTMUX_INDEX_ADC0_TRIGSEL3
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL1
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL2
enumerator kINPUTMUX_INDEX_QDC0_ICAPSEL3
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL1
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL2
enumerator kINPUTMUX_INDEX_QDC1_ICAPSEL3
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL0
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL1
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL2
enumerator kINPUTMUX_INDEX_FLEXPWM0_FAULTSEL3
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL0
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL1
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL2
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL3
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL4
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL5
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL6
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL7
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL8
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL9
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL10
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL11
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL12
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL13
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL14
enumerator kINPUTMUX_INDEX_AOI0_TRIGSEL15

enumerator kINPUTMUX_INDEX_EXT_TRIGSEL0
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL1
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL2
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL3
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL4
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL6
enumerator kINPUTMUX_INDEX_EXT_TRIGSEL7

enum _inputmux_connection_t

INPUTMUX connections type.

Values:

enumerator kINPUTMUX_CtimerInp0ToTimer0Cptsel
 TIMER0 CAPTSEL.
enumerator kINPUTMUX_CtimerInp1ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp2ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp3ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp4ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp5ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp6ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp7ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp8ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp10ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp11ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp12ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp13ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp14ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp15ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp16ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp17ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp18ToTimer0Cptsel
enumerator kINPUTMUX_CtimerInp19ToTimer0Cptsel
enumerator kINPUTMUX_Usb0StartOffFrameToTimer0Cptsel
enumerator kINPUTMUX_Aoi0Out0ToTimer0Cptsel
enumerator kINPUTMUX_Aoi0Out1ToTimer0Cptsel

enumerator kINPUTMUX__Aoi0Out2ToTimer0Cptsel
enumerator kINPUTMUX__Aoi0Out3ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX__Adc0Tcomp3ToTimer0Cptsel
enumerator kINPUTMUX__Cmp0OutToTimer0Cptsel
enumerator kINPUTMUX__Cmp1OutToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M1ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M2ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer1M3ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M1ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M2ToTimer0Cptsel
enumerator kINPUTMUX__Ctimer2M3ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag0ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag1ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag2ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0CmpFlag3ToTimer0Cptsel
enumerator kINPUTMUX__Qdc0PosMatch0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c0MasterEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpi2c0SlaveEndOfPacketToTimer0Cptsel
enumerator kINPUTMUX__Lpspi0EndOfFrameToTimer0Cptsel
enumerator kINPUTMUX__Lpspi0ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX__Lpspi1EndOfFrameToTimer0Cptsel
enumerator kINPUTMUX__Lpspi1ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX__Lpuart0ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX__Lpuart0TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX__Lpuart0ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX__Lpuart1ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX__Lpuart1TransmittedDataWordToTimer0Cptsel

enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer0Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer0Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer0Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M1ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M2ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer3M3ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M1ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M2ToTimer0Cptsel
enumerator kINPUTMUX_Ctimer4M3ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer0Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer0Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer0Cptsel

enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer0Captsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer0Captsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer0Captsel
Timer1 CAPTSEL.
enumerator kINPUTMUX_CtimerInp0ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp1ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp2ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp3ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp4ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp5ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp6ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp7ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp8ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp9ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp10ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp11ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp12ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp13ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp14ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp15ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp16ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp17ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp18ToTimer1Captsel
enumerator kINPUTMUX_CtimerInp19ToTimer1Captsel
enumerator kINPUTMUX_Usb0StartOfFrameToTimer1Captsel
enumerator kINPUTMUX_Aoi0Out0ToTimer1Captsel
enumerator kINPUTMUX_Aoi0Out1ToTimer1Captsel
enumerator kINPUTMUX_Aoi0Out2ToTimer1Captsel
enumerator kINPUTMUX_Aoi0Out3ToTimer1Captsel
enumerator kINPUTMUX_Adc0Tcomp0ToTimer1Captsel
enumerator kINPUTMUX_Adc0Tcomp1ToTimer1Captsel
enumerator kINPUTMUX_Adc0Tcomp2ToTimer1Captsel
enumerator kINPUTMUX_Adc0Tcomp3ToTimer1Captsel

enumerator kINPUTMUX_Cmp0OutToTimer1Capsel
enumerator kINPUTMUX_Cmp1OutToTimer1Capsel
enumerator kINPUTMUX_Ctimer0M1ToTimer1Capsel
enumerator kINPUTMUX_Ctimer0M2ToTimer1Capsel
enumerator kINPUTMUX_Ctimer0M3ToTimer1Capsel
enumerator kINPUTMUX_Ctimer2M1ToTimer1Capsel
enumerator kINPUTMUX_Ctimer2M2ToTimer1Capsel
enumerator kINPUTMUX_Ctimer2M3ToTimer1Capsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer1Capsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer1Capsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer1Capsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer1Capsel
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer1Capsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer1Capsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer1Capsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer1Capsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer1Capsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer1Capsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer1Capsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer1Capsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer1Capsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer1Capsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer1Capsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer1Capsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer1Capsel

enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer1Captsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out0ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out1ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out2ToTimer1Captsel
enumerator kINPUTMUX_Aoi1Out3ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer1Captsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer1Captsel
enumerator kINPUTMUX_Ctimer3M1ToTimer1Captsel
enumerator kINPUTMUX_Ctimer3M2ToTimer1Captsel
enumerator kINPUTMUX_Ctimer3M3ToTimer1Captsel
enumerator kINPUTMUX_Ctimer4M1ToTimer1Captsel
enumerator kINPUTMUX_Ctimer4M2ToTimer1Captsel
enumerator kINPUTMUX_Ctimer4M3ToTimer1Captsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer1Captsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer1Captsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer1Captsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer1Captsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer1Captsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer1Captsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer1Captsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer1Captsel
Timer2 CAPTSEL.
enumerator kINPUTMUX_CtimerInp0ToTimer2Captsel
enumerator kINPUTMUX_CtimerInp1ToTimer2Captsel

enumerator kINPUTMUX_CtimerInp2ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp3ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp4ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp5ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp6ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp7ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp8ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp9ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp10ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp11ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp12ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp13ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp14ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp15ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp16ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp17ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp18ToTimer2Captcha
enumerator kINPUTMUX_CtimerInp19ToTimer2Captcha
enumerator kINPUTMUX_Usb0StartOffFrameToTimer2Captcha
enumerator kINPUTMUX_Aoi0Out0ToTimer2Captcha
enumerator kINPUTMUX_Aoi0Out1ToTimer2Captcha
enumerator kINPUTMUX_Aoi0Out2ToTimer2Captcha
enumerator kINPUTMUX_Aoi0Out3ToTimer2Captcha
enumerator kINPUTMUX_Adc0Tcomp0ToTimer2Captcha
enumerator kINPUTMUX_Adc0Tcomp1ToTimer2Captcha
enumerator kINPUTMUX_Adc0Tcomp2ToTimer2Captcha
enumerator kINPUTMUX_Adc0Tcomp3ToTimer2Captcha
enumerator kINPUTMUX_Cmp0OutToTimer2Captcha
enumerator kINPUTMUX_Cmp1OutToTimer2Captcha
enumerator kINPUTMUX_Ctimer0M1ToTimer2Captcha
enumerator kINPUTMUX_Ctimer0M2ToTimer2Captcha
enumerator kINPUTMUX_Ctimer0M3ToTimer2Captcha
enumerator kINPUTMUX_Ctimer1M1ToTimer2Captcha

enumerator kINPUTMUX_Ctimer1M2ToTimer2Cptsel
enumerator kINPUTMUX_Ctimer1M3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer2Cptsel
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer2Cptsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer2Cptsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer2Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer2Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer2Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer2Cptsel

enumerator kINPUTMUX__Aoi1Out2ToTimer2Captsel
enumerator kINPUTMUX__Aoi1Out3ToTimer2Captsel
enumerator kINPUTMUX__Adc1Tcomp0ToTimer2Captsel
enumerator kINPUTMUX__Adc1Tcomp1ToTimer2Captsel
enumerator kINPUTMUX__Adc1Tcomp2ToTimer2Captsel
enumerator kINPUTMUX__Adc1Tcomp3ToTimer2Captsel
enumerator kINPUTMUX__Ctimer3M1ToTimer2Captsel
enumerator kINPUTMUX__Ctimer3M2ToTimer2Captsel
enumerator kINPUTMUX__Ctimer3M3ToTimer2Captsel
enumerator kINPUTMUX__Ctimer4M1ToTimer2Captsel
enumerator kINPUTMUX__Ctimer4M2ToTimer2Captsel
enumerator kINPUTMUX__Ctimer4M3ToTimer2Captsel
enumerator kINPUTMUX__Qdc1CmpFlag0ToTimer2Captsel
enumerator kINPUTMUX__Qdc1CmpFlag1ToTimer2Captsel
enumerator kINPUTMUX__Qdc1CmpFlag2ToTimer2Captsel
enumerator kINPUTMUX__Qdc1CmpFlag3ToTimer2Captsel
enumerator kINPUTMUX__Qdc1PosMatch0ToTimer2Captsel
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToTimer2Captsel
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToTimer2Captsel
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToTimer2Captsel
enumerator kINPUTMUX__Lpi2c2MasterEndOfPacketToTimer2Captsel
enumerator kINPUTMUX__Lpi2c2SlaveEndOfPacketToTimer2Captsel
enumerator kINPUTMUX__Lpi2c3MasterEndOfPacketToTimer2Captsel
enumerator kINPUTMUX__Lpi2c3SlaveEndOfPacketToTimer2Captsel

Timer3 CAPTSEL.

enumerator kINPUTMUX__CtimerInp0ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp1ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp2ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp3ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp4ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp5ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp6ToTimer3Captsel
enumerator kINPUTMUX__CtimerInp7ToTimer3Captsel

enumerator kINPUTMUX_CtimerInp8ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp10ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp11ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp12ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp13ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp14ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp15ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp16ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp17ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp18ToTimer3Cptsel
enumerator kINPUTMUX_CtimerInp19ToTimer3Cptsel
enumerator kINPUTMUX_Usb0StartOfFrameToTimer3Cptsel
enumerator kINPUTMUX_Aoi0Out0ToTimer3Cptsel
enumerator kINPUTMUX_Aoi0Out1ToTimer3Cptsel
enumerator kINPUTMUX_Aoi0Out2ToTimer3Cptsel
enumerator kINPUTMUX_Aoi0Out3ToTimer3Cptsel
enumerator kINPUTMUX_Adc0Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX_Adc0Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX_Adc0Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX_Adc0Tcomp3ToTimer3Cptsel
enumerator kINPUTMUX_Cmp0OutToTimer3Cptsel
enumerator kINPUTMUX_Cmp1OutToTimer3Cptsel
enumerator kINPUTMUX_Ctimer0M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer0M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer0M3ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer1M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer1M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer1M3ToTimer3Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer3Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer3Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer3Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer3Cptsel

enumerator kINPUTMUX_Qdc0PosMatch0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer3Cptsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer3Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer3Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer3Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer3Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer3Cptsel

enumerator kINPUTMUX_Ctimer2M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer2M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer2M3ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M1ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M2ToTimer3Cptsel
enumerator kINPUTMUX_Ctimer4M3ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer3Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer3Cptsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer3Cptsel
Timer4 CAPTSEL.
enumerator kINPUTMUX_CtimerInp0ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp1ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp2ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp3ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp4ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp5ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp6ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp7ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp8ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp9ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp10ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp11ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp12ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp13ToTimer4Cptsel

enumerator kINPUTMUX_CtimerInp14ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp15ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp16ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp17ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp18ToTimer4Cptsel
enumerator kINPUTMUX_CtimerInp19ToTimer4Cptsel
enumerator kINPUTMUX_Usb0StartOfFrameToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out0ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out1ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out2ToTimer4Cptsel
enumerator kINPUTMUX_Aoi0Out3ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp0ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp1ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp2ToTimer4Cptsel
enumerator kINPUTMUX_Adc0Tcomp3ToTimer4Cptsel
enumerator kINPUTMUX_Cmp0OutToTimer4Cptsel
enumerator kINPUTMUX_Cmp1OutToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer0M3ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer1M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer1M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer1M3ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer4Cptsel
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer4Cptsel

enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer4Cptsel
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer4Cptsel
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer4Cptsel
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer4Cptsel
enumerator kINPUTMUX_Aoi1Out0ToTimer4Cptsel
enumerator kINPUTMUX_Aoi1Out1ToTimer4Cptsel
enumerator kINPUTMUX_Aoi1Out2ToTimer4Cptsel
enumerator kINPUTMUX_Aoi1Out3ToTimer4Cptsel
enumerator kINPUTMUX_Adc1Tcomp0ToTimer4Cptsel
enumerator kINPUTMUX_Adc1Tcomp1ToTimer4Cptsel
enumerator kINPUTMUX_Adc1Tcomp2ToTimer4Cptsel
enumerator kINPUTMUX_Adc1Tcomp3ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer2M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer2M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer2M3ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer3M1ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer3M2ToTimer4Cptsel
enumerator kINPUTMUX_Ctimer3M3ToTimer4Cptsel

enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer4Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer4Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer4Cptsel
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer4Cptsel
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer4Cptsel
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer4Cptsel

TIMER0 Trigger.

enumerator kINPUTMUX_CtimerInp0ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp3ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer0Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer0Trigger

enumerator kINPUTMUX_Usb0StartOfFrameToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer0Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer0Trigger
enumerator kINPUTMUX_Cmp0OutToTimer0Trigger
enumerator kINPUTMUX_Cmp1OutToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer0Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer0Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer0Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer0Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer0Trigger

enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer0Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer0Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer0Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer3M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer0Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer0Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer0Trigger

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer0Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer0Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer0Trigger
Timer1 Trigger.
enumerator kINPUTMUX_CtimerInp0ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp3ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer1Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer1Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer1Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer1Trigger

enumerator kINPUTMUX_Adc0Tcomp1ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer1Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer1Trigger
enumerator kINPUTMUX_Cmp0OutToTimer1Trigger
enumerator kINPUTMUX_Cmp1OutToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer0M3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer1Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer1Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer1Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer1Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer1Trigger

enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer1Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer1Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer1Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer3M3ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer1Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer1Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer1Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer1Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer1Trigger
Timer2 Trigger.

enumerator kINPUTMUX_CtimerInp0ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp3ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer2Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer2Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer2Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer2Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer2Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer2Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer2Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer2Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer2Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer2Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer2Trigger
enumerator kINPUTMUX_Cmp0OutToTimer2Trigger
enumerator kINPUTMUX_Cmp1OutToTimer2Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer2Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer2Trigger

enumerator kINPUTMUX_Ctimer0M3ToTimer2Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer2Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer2Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer2Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer2Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer2Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer2Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer2Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer2Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer2Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer2Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer2Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer2Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer2Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer2Trigger

enumerator kINPUTMUX__Aoi1Out0ToTimer2Trigger
enumerator kINPUTMUX__Aoi1Out1ToTimer2Trigger
enumerator kINPUTMUX__Aoi1Out2ToTimer2Trigger
enumerator kINPUTMUX__Aoi1Out3ToTimer2Trigger
enumerator kINPUTMUX__Adc1Tcomp0ToTimer2Trigger
enumerator kINPUTMUX__Adc1Tcomp1ToTimer2Trigger
enumerator kINPUTMUX__Adc1Tcomp2ToTimer2Trigger
enumerator kINPUTMUX__Adc1Tcomp3ToTimer2Trigger
enumerator kINPUTMUX__Ctimer3M1ToTimer2Trigger
enumerator kINPUTMUX__Ctimer3M2ToTimer2Trigger
enumerator kINPUTMUX__Ctimer3M3ToTimer2Trigger
enumerator kINPUTMUX__Ctimer4M1ToTimer2Trigger
enumerator kINPUTMUX__Ctimer4M2ToTimer2Trigger
enumerator kINPUTMUX__Ctimer4M3ToTimer2Trigger
enumerator kINPUTMUX__Qdc1CmpFlag0ToTimer2Trigger
enumerator kINPUTMUX__Qdc1CmpFlag1ToTimer2Trigger
enumerator kINPUTMUX__Qdc1CmpFlag2ToTimer2Trigger
enumerator kINPUTMUX__Qdc1CmpFlag3ToTimer2Trigger
enumerator kINPUTMUX__Qdc1PosMatch0ToTimer2Trigger
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToTimer2Trigger
enumerator kINPUTMUX__Lpi2c2MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c2SlaveEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c3MasterEndOfPacketToTimer2Trigger
enumerator kINPUTMUX__Lpi2c3SlaveEndOfPacketToTimer2Trigger
Timer3 Trigger.
enumerator kINPUTMUX__CtimerInp0ToTimer3Trigger
enumerator kINPUTMUX__CtimerInp1ToTimer3Trigger
enumerator kINPUTMUX__CtimerInp2ToTimer3Trigger
enumerator kINPUTMUX__CtimerInp3ToTimer3Trigger
enumerator kINPUTMUX__CtimerInp4ToTimer3Trigger
enumerator kINPUTMUX__CtimerInp5ToTimer3Trigger

enumerator kINPUTMUX_CtimerInp6ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp12ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer3Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer3Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer3Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_Cmp0OutToTimer3Trigger
enumerator kINPUTMUX_Cmp1OutToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer0M3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer3Trigger

enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer3Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer3Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer3Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer3Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer3Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer3Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer3Trigger

enumerator kINPUTMUX_Adc1Tcomp2ToTimer3Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer3Trigger
enumerator kINPUTMUX_Ctimer4M1ToTimer3Trigger
enumerator kINPUTMUX_Ctimer4M2ToTimer3Trigger
enumerator kINPUTMUX_Ctimer4M3ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer3Trigger
enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer3Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer3Trigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer3Trigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer3Trigger
Timer4 Trigger.
enumerator kINPUTMUX_CtimerInp0ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp1ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp2ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp3ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp4ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp5ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp6ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp7ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp8ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp9ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp10ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp11ToTimer4Trigger

enumerator kINPUTMUX_CtimerInp12ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp13ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp14ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp15ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp16ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp17ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp18ToTimer4Trigger
enumerator kINPUTMUX_CtimerInp19ToTimer4Trigger
enumerator kINPUTMUX_Usb0StartOfFrameToTimer4Trigger
enumerator kINPUTMUX_Aoi0Out0ToTimer4Trigger
enumerator kINPUTMUX_Aoi0Out1ToTimer4Trigger
enumerator kINPUTMUX_Aoi0Out2ToTimer4Trigger
enumerator kINPUTMUX_Aoi0Out3ToTimer4Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToTimer4Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToTimer4Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToTimer4Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToTimer4Trigger
enumerator kINPUTMUX_Cmp0OutToTimer4Trigger
enumerator kINPUTMUX_Cmp1OutToTimer4Trigger
enumerator kINPUTMUX_Ctimer0M1ToTimer4Trigger
enumerator kINPUTMUX_Ctimer0M2ToTimer4Trigger
enumerator kINPUTMUX_Ctimer0M3ToTimer4Trigger
enumerator kINPUTMUX_Ctimer1M1ToTimer4Trigger
enumerator kINPUTMUX_Ctimer1M2ToTimer4Trigger
enumerator kINPUTMUX_Ctimer1M3ToTimer4Trigger
enumerator kINPUTMUX_Qdc0CmpFlag0ToTimer4Trigger
enumerator kINPUTMUX_Qdc0CmpFlag1ToTimer4Trigger
enumerator kINPUTMUX_Qdc0CmpFlag2ToTimer4Trigger
enumerator kINPUTMUX_Qdc0CmpFlag3ToTimer4Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToTimer4Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToTimer4Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToTimer4Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToTimer4Trigger

enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToTimer4Trigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToTimer4Trigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToTimer4Trigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToTimer4Trigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out0ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out1ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out2ToTimer4Trigger
enumerator kINPUTMUX_Aoi1Out3ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToTimer4Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M1ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M2ToTimer4Trigger
enumerator kINPUTMUX_Ctimer2M3ToTimer4Trigger
enumerator kINPUTMUX_Ctimer3M1ToTimer4Trigger

enumerator kINPUTMUX_Ctimer3M2ToTimer4Trigger
 enumerator kINPUTMUX_Ctimer3M3ToTimer4Trigger
 enumerator kINPUTMUX_Qdc1CmpFlag0ToTimer4Trigger
 enumerator kINPUTMUX_Qdc1CmpFlag1ToTimer4Trigger
 enumerator kINPUTMUX_Qdc1CmpFlag2ToTimer4Trigger
 enumerator kINPUTMUX_Qdc1CmpFlag3ToTimer4Trigger
 enumerator kINPUTMUX_Qdc1PosMatch0ToTimer4Trigger
 enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToTimer4Trigger
 enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToTimer4Trigger
 enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToTimer4Trigger
 enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToTimer4Trigger
 enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToTimer4Trigger
 enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToTimer4Trigger
 enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToTimer4Trigger
 Selection for frequency measurement reference clock.
 enumerator kINPUTMUX_ClkInToFreqmeasRef
 enumerator kINPUTMUX_FroOsc12MToFreqmeasRef
 enumerator kINPUTMUX_FroHfDivToFreqmeasRef
 enumerator kINPUTMUX_Clk16K1ToFreqmeasRef
 enumerator kINPUTMUX_SlowClkToFreqmeasRef
 enumerator kINPUTMUX_FreqmeClkIn0ToFreqmeasRef
 enumerator kINPUTMUX_FreqmeClkIn1ToFreqmeasRef
 enumerator kINPUTMUX_Aoi0Out0ToFreqmeasRef
 enumerator kINPUTMUX_Aoi0Out1ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFreqmeasRef
 enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFreqmeasRef
 Selection for frequency measurement target clock.
 enumerator kINPUTMUX_ClkInToFreqmeasTar
 enumerator kINPUTMUX_FroOsc12MToFreqmeasTar
 enumerator kINPUTMUX_FroHfDivToFreqmeasTar

enumerator kINPUTMUX_Clk16K1ToFreqmeasTar
enumerator kINPUTMUX_SlowClkToFreqmeasTar
enumerator kINPUTMUX_FreqmeClkIn0ToFreqmeasTar
enumerator kINPUTMUX_FreqmeClkIn1ToFreqmeasTar
enumerator kINPUTMUX_Aoi0Out0ToFreqmeasTar
enumerator kINPUTMUX_Aoi0Out1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFreqmeasTar
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFreqmeasTar
 Cmp0 Trigger.
enumerator kINPUTMUX_Aoi0Out0ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out1ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out2ToCmp0Trigger
enumerator kINPUTMUX_Aoi0Out3ToCmp0Trigger
enumerator kINPUTMUX_Cmp1OutToCmp0Trigger
enumerator kINPUTMUX_Ctimer0M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer0M2ToCmp0Trigger
enumerator kINPUTMUX_Ctimer1M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer1M2ToCmp0Trigger
enumerator kINPUTMUX_Ctimer2M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer2M2ToCmp0Trigger
enumerator kINPUTMUX_Lptmr0ToCmp0Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToCmp0Trigger

enumerator kINPUTMUX_Gpio1PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToCmp0Trigger
enumerator kINPUTMUX_WuuToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out0ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out1ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out2ToCmp0Trigger
enumerator kINPUTMUX_Aoi1Out3ToCmp0Trigger
enumerator kINPUTMUX_Ctimer3M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer3M1ToCmp0Trigger
enumerator kINPUTMUX_Ctimer4M0ToCmp0Trigger
enumerator kINPUTMUX_Ctimer4M1ToCmp0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToCmp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToCmp0Trigger
Cmp1 Trigger.
enumerator kINPUTMUX_Aoi0Out0ToCmp1Trigger
enumerator kINPUTMUX_Aoi0Out1ToCmp1Trigger
enumerator kINPUTMUX_Aoi0Out2ToCmp1Trigger
enumerator kINPUTMUX_Aoi0Out3ToCmp1Trigger
enumerator kINPUTMUX_Cmp0OutToCmp1Trigger
enumerator kINPUTMUX_Ctimer0M0ToCmp1Trigger
enumerator kINPUTMUX_Ctimer0M2ToCmp1Trigger
enumerator kINPUTMUX_Ctimer1M0ToCmp1Trigger
enumerator kINPUTMUX_Ctimer1M2ToCmp1Trigger
enumerator kINPUTMUX_Ctimer2M0ToCmp1Trigger
enumerator kINPUTMUX_Ctimer2M2ToCmp1Trigger
enumerator kINPUTMUX_Lptmr0ToCmp1Trigger

enumerator kINPUTMUX_Qdc0PosMatch0ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToCmp1Trigger
enumerator kINPUTMUX_WuuToCmp1Trigger
enumerator kINPUTMUX_Aoi1Out0ToCmp1Trigger
enumerator kINPUTMUX_Aoi1Out1ToCmp1Trigger
enumerator kINPUTMUX_Aoi1Out2ToCmp1Trigger
enumerator kINPUTMUX_Aoi1Out3ToCmp1Trigger
enumerator kINPUTMUX_Ctimer3M0ToCmp1Trigger
enumerator kINPUTMUX_Ctimer3M1ToCmp1Trigger
enumerator kINPUTMUX_Ctimer4M0ToCmp1Trigger
enumerator kINPUTMUX_Ctimer4M1ToCmp1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToCmp1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToCmp1Trigger
 Adc0 Trigger.
enumerator kINPUTMUX_ArmTxevToAdc0Trigger
enumerator kINPUTMUX_Aoi0Out0ToAdc0Trigger
enumerator kINPUTMUX_Aoi0Out1ToAdc0Trigger
enumerator kINPUTMUX_Aoi0Out2ToAdc0Trigger

enumerator kINPUTMUX__Aoi0Out3ToAdc0Trigger
enumerator kINPUTMUX__Cmp0OutToAdc0Trigger
enumerator kINPUTMUX__Cmp1OutToAdc0Trigger
enumerator kINPUTMUX__Ctimer0M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer0M1ToAdc0Trigger
enumerator kINPUTMUX__Ctimer1M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer1M1ToAdc0Trigger
enumerator kINPUTMUX__Ctimer2M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer2M1ToAdc0Trigger
enumerator kINPUTMUX__Lptmr0ToAdc0Trigger
enumerator kINPUTMUX__Qdc0PosMatch0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToAdc0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToAdc0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToAdc0Trigger
enumerator kINPUTMUX__WuuToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out0ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out1ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out2ToAdc0Trigger
enumerator kINPUTMUX__Aoi1Out3ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp0ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp1ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp2ToAdc0Trigger
enumerator kINPUTMUX__Adc1Tcomp3ToAdc0Trigger
enumerator kINPUTMUX__Ctimer3M0ToAdc0Trigger
enumerator kINPUTMUX__Ctimer3M1ToAdc0Trigger

enumerator kINPUTMUX_Ctimer4M0ToAdc0Trigger
enumerator kINPUTMUX_Ctimer4M1ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh0ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh1ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh2ToAdc0Trigger
enumerator kINPUTMUX_FlexioCh3ToAdc0Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAdc0Trigger
Adc1 Trigger.
enumerator kINPUTMUX_ArmTxevToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out0ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out1ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out2ToAdc1Trigger
enumerator kINPUTMUX_Aoi0Out3ToAdc1Trigger
enumerator kINPUTMUX_Cmp0OutToAdc1Trigger
enumerator kINPUTMUX_Cmp1OutToAdc1Trigger
enumerator kINPUTMUX_Ctimer0M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer0M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer1M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer1M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer2M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer2M1ToAdc1Trigger
enumerator kINPUTMUX_Lptmr0ToAdc1Trigger
enumerator kINPUTMUX_Qdc0PosMatch0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAdc1Trigger

enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToAdc1Trigger
enumerator kINPUTMUX_WuuToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out0ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out1ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out2ToAdc1Trigger
enumerator kINPUTMUX_Aoi1Out3ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp0ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp1ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp2ToAdc1Trigger
enumerator kINPUTMUX_Adc0Tcomp3ToAdc1Trigger
enumerator kINPUTMUX_Ctimer3M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer3M1ToAdc1Trigger
enumerator kINPUTMUX_Ctimer4M0ToAdc1Trigger
enumerator kINPUTMUX_Ctimer4M1ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh0ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh1ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh2ToAdc1Trigger
enumerator kINPUTMUX_FlexioCh3ToAdc1Trigger
enumerator kINPUTMUX_Qdc1PosMatch0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAdc1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAdc1Trigger
Dac0 Trigger.
enumerator kINPUTMUX_ArmTxevToDac0Trigger

enumerator kINPUTMUX__Aoi0Out0ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out1ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out2ToDac0Trigger
enumerator kINPUTMUX__Aoi0Out3ToDac0Trigger
enumerator kINPUTMUX__Cmp0OutToDac0Trigger
enumerator kINPUTMUX__Cmp1OutToDac0Trigger
enumerator kINPUTMUX__Ctimer0M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer0M1ToDac0Trigger
enumerator kINPUTMUX__Ctimer1M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer1M1ToDac0Trigger
enumerator kINPUTMUX__Ctimer2M0ToDac0Trigger
enumerator kINPUTMUX__Ctimer2M1ToDac0Trigger
enumerator kINPUTMUX__Lptmr0ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToDac0Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToDac0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToDac0Trigger
enumerator kINPUTMUX__WuuToDac0Trigger
enumerator kINPUTMUX__Aoi1Out0ToDac0Trigger
enumerator kINPUTMUX__Aoi1Out1ToDac0Trigger
enumerator kINPUTMUX__Aoi1Out2ToDac0Trigger
enumerator kINPUTMUX__Aoi1Out3ToDac0Trigger
enumerator kINPUTMUX__Adc1Tcomp0ToDac0Trigger
enumerator kINPUTMUX__Adc1Tcomp1ToDac0Trigger
enumerator kINPUTMUX__Adc1Tcomp2ToDac0Trigger
enumerator kINPUTMUX__Adc1Tcomp3ToDac0Trigger

enumerator kINPUTMUX_Ctimer3M0ToDac0Trigger
enumerator kINPUTMUX_Ctimer3M1ToDac0Trigger
enumerator kINPUTMUX_Ctimer4M0ToDac0Trigger
enumerator kINPUTMUX_Ctimer4M1ToDac0Trigger
Qdc0 Trigger.
enumerator kINPUTMUX_ArmTxevToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out0ToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out1ToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out2ToQdc0Trigger
enumerator kINPUTMUX_Aoi0Out3ToQdc0Trigger
enumerator kINPUTMUX_Cmp0OutToQdc0Trigger
enumerator kINPUTMUX_Cmp1OutToQdc0Trigger
enumerator kINPUTMUX_Ctimer0M2ToQdc0Trigger
enumerator kINPUTMUX_Ctimer0M3ToQdc0Trigger
enumerator kINPUTMUX_Ctimer1M2ToQdc0Trigger
enumerator kINPUTMUX_Ctimer1M3ToQdc0Trigger
enumerator kINPUTMUX_Ctimer2M2ToQdc0Trigger
enumerator kINPUTMUX_Ctimer2M3ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc0Trigger
enumerator kINPUTMUX_TrigIn0ToQdc0Trigger
enumerator kINPUTMUX_TrigIn1ToQdc0Trigger
enumerator kINPUTMUX_TrigIn2ToQdc0Trigger
enumerator kINPUTMUX_TrigIn3ToQdc0Trigger
enumerator kINPUTMUX_TrigIn4ToQdc0Trigger
enumerator kINPUTMUX_TrigIn5ToQdc0Trigger
enumerator kINPUTMUX_TrigIn6ToQdc0Trigger
enumerator kINPUTMUX_TrigIn7ToQdc0Trigger
enumerator kINPUTMUX_TrigIn8ToQdc0Trigger

enumerator kINPUTMUX_TrigIn9ToQdc0Trigger
enumerator kINPUTMUX_TrigIn10ToQdc0Trigger
enumerator kINPUTMUX_TrigIn11ToQdc0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc0Trigger
enumerator kINPUTMUX_Aoi1Out0ToQdc0Trigger
enumerator kINPUTMUX_Aoi1Out1ToQdc0Trigger
enumerator kINPUTMUX_Aoi1Out2ToQdc0Trigger
enumerator kINPUTMUX_Aoi1Out3ToQdc0Trigger
enumerator kINPUTMUX_Ctimer3M2ToQdc0Trigger
enumerator kINPUTMUX_Ctimer3M3ToQdc0Trigger
enumerator kINPUTMUX_Ctimer4M2ToQdc0Trigger
enumerator kINPUTMUX_Ctimer4M3ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc0Trigger
Qdc0 Home.
enumerator kINPUTMUX_ArmTxevToQdc0Home
enumerator kINPUTMUX_Aoi0Out0ToQdc0Home
enumerator kINPUTMUX_Aoi0Out1ToQdc0Home
enumerator kINPUTMUX_Aoi0Out2ToQdc0Home
enumerator kINPUTMUX_Aoi0Out3ToQdc0Home
enumerator kINPUTMUX_Cmp0OutToQdc0Home
enumerator kINPUTMUX_Cmp1OutToQdc0Home
enumerator kINPUTMUX_Ctimer0M2ToQdc0Home
enumerator kINPUTMUX_Ctimer0M3ToQdc0Home
enumerator kINPUTMUX_Ctimer1M2ToQdc0Home

enumerator kINPUTMUX_Ctimer1M3ToQdc0Home
enumerator kINPUTMUX_Ctimer2M2ToQdc0Home
enumerator kINPUTMUX_Ctimer2M3ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc0Home
enumerator kINPUTMUX_TrigIn0ToQdc0Home
enumerator kINPUTMUX_TrigIn1ToQdc0Home
enumerator kINPUTMUX_TrigIn2ToQdc0Home
enumerator kINPUTMUX_TrigIn3ToQdc0Home
enumerator kINPUTMUX_TrigIn4ToQdc0Home
enumerator kINPUTMUX_TrigIn5ToQdc0Home
enumerator kINPUTMUX_TrigIn6ToQdc0Home
enumerator kINPUTMUX_TrigIn7ToQdc0Home
enumerator kINPUTMUX_TrigIn8ToQdc0Home
enumerator kINPUTMUX_TrigIn9ToQdc0Home
enumerator kINPUTMUX_TrigIn10ToQdc0Home
enumerator kINPUTMUX_TrigIn11ToQdc0Home
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc0Home
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc0Home
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc0Home
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc0Home
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc0Home
enumerator kINPUTMUX_Aoi1Out0ToQdc0Home
enumerator kINPUTMUX_Aoi1Out1ToQdc0Home
enumerator kINPUTMUX_Aoi1Out2ToQdc0Home
enumerator kINPUTMUX_Aoi1Out3ToQdc0Home
enumerator kINPUTMUX_Ctimer3M2ToQdc0Home
enumerator kINPUTMUX_Ctimer3M3ToQdc0Home
enumerator kINPUTMUX_Ctimer4M2ToQdc0Home

enumerator kINPUTMUX_Ctimer4M3ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc0Home
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc0Home
Qdc0 Index.
enumerator kINPUTMUX_ArmTxevToQdc0Index
enumerator kINPUTMUX_Aoi0Out0ToQdc0Index
enumerator kINPUTMUX_Aoi0Out1ToQdc0Index
enumerator kINPUTMUX_Aoi0Out2ToQdc0Index
enumerator kINPUTMUX_Aoi0Out3ToQdc0Index
enumerator kINPUTMUX_Cmp0OutToQdc0Index
enumerator kINPUTMUX_Cmp1OutToQdc0Index
enumerator kINPUTMUX_Ctimer0M2ToQdc0Index
enumerator kINPUTMUX_Ctimer0M3ToQdc0Index
enumerator kINPUTMUX_Ctimer1M2ToQdc0Index
enumerator kINPUTMUX_Ctimer1M3ToQdc0Index
enumerator kINPUTMUX_Ctimer2M2ToQdc0Index
enumerator kINPUTMUX_Ctimer2M3ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc0Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc0Index
enumerator kINPUTMUX_TrigIn0ToQdc0Index
enumerator kINPUTMUX_TrigIn1ToQdc0Index
enumerator kINPUTMUX_TrigIn2ToQdc0Index
enumerator kINPUTMUX_TrigIn3ToQdc0Index
enumerator kINPUTMUX_TrigIn4ToQdc0Index
enumerator kINPUTMUX_TrigIn5ToQdc0Index

enumerator kINPUTMUX__TrigIn6ToQdc0Index
enumerator kINPUTMUX__TrigIn7ToQdc0Index
enumerator kINPUTMUX__TrigIn8ToQdc0Index
enumerator kINPUTMUX__TrigIn9ToQdc0Index
enumerator kINPUTMUX__TrigIn10ToQdc0Index
enumerator kINPUTMUX__TrigIn11ToQdc0Index
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Index
enumerator kINPUTMUX__Aoi1Out0ToQdc0Index
enumerator kINPUTMUX__Aoi1Out1ToQdc0Index
enumerator kINPUTMUX__Aoi1Out2ToQdc0Index
enumerator kINPUTMUX__Aoi1Out3ToQdc0Index
enumerator kINPUTMUX__Ctimer3M2ToQdc0Index
enumerator kINPUTMUX__Ctimer3M3ToQdc0Index
enumerator kINPUTMUX__Ctimer4M2ToQdc0Index
enumerator kINPUTMUX__Ctimer4M3ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Index
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Index
Qdc0 Phaseb.
enumerator kINPUTMUX__ArmTxevToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out0ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out1ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out2ToQdc0Phaseb
enumerator kINPUTMUX__Aoi0Out3ToQdc0Phaseb
enumerator kINPUTMUX__Cmp0OutToQdc0Phaseb
enumerator kINPUTMUX__Cmp1OutToQdc0Phaseb

enumerator kINPUTMUX_Ctimer0M2ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer0M3ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer1M2ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer1M3ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer2M2ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer2M3ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn0ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn1ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn2ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn3ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn4ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn5ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn6ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn7ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn8ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn9ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn10ToQdc0Phaseb
enumerator kINPUTMUX_TrigIn11ToQdc0Phaseb
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Aoi1Out0ToQdc0Phaseb
enumerator kINPUTMUX_Aoi1Out1ToQdc0Phaseb
enumerator kINPUTMUX_Aoi1Out2ToQdc0Phaseb
enumerator kINPUTMUX_Aoi1Out3ToQdc0Phaseb

enumerator kINPUTMUX_Ctimer3M2ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer3M3ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer4M2ToQdc0Phaseb
enumerator kINPUTMUX_Ctimer4M3ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc0Phaseb
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc0Phaseb
Qdc0 Phasea.
enumerator kINPUTMUX_ArmTxevToQdc0Phasea
enumerator kINPUTMUX_Aoi0Out0ToQdc0Phasea
enumerator kINPUTMUX_Aoi0Out1ToQdc0Phasea
enumerator kINPUTMUX_Aoi0Out2ToQdc0Phasea
enumerator kINPUTMUX_Aoi0Out3ToQdc0Phasea
enumerator kINPUTMUX_Cmp0OutToQdc0Phasea
enumerator kINPUTMUX_Cmp1OutToQdc0Phasea
enumerator kINPUTMUX_Ctimer0M2ToQdc0Phasea
enumerator kINPUTMUX_Ctimer0M3ToQdc0Phasea
enumerator kINPUTMUX_Ctimer1M2ToQdc0Phasea
enumerator kINPUTMUX_Ctimer1M3ToQdc0Phasea
enumerator kINPUTMUX_Ctimer2M2ToQdc0Phasea
enumerator kINPUTMUX_Ctimer2M3ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc0Phasea
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc0Phasea
enumerator kINPUTMUX_TrigIn0ToQdc0Phasea
enumerator kINPUTMUX_TrigIn1ToQdc0Phasea
enumerator kINPUTMUX_TrigIn2ToQdc0Phasea

enumerator kINPUTMUX__TrigIn3ToQdc0Phasea
enumerator kINPUTMUX__TrigIn4ToQdc0Phasea
enumerator kINPUTMUX__TrigIn5ToQdc0Phasea
enumerator kINPUTMUX__TrigIn6ToQdc0Phasea
enumerator kINPUTMUX__TrigIn7ToQdc0Phasea
enumerator kINPUTMUX__TrigIn8ToQdc0Phasea
enumerator kINPUTMUX__TrigIn9ToQdc0Phasea
enumerator kINPUTMUX__TrigIn10ToQdc0Phasea
enumerator kINPUTMUX__TrigIn11ToQdc0Phasea
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out0ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out1ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out2ToQdc0Phasea
enumerator kINPUTMUX__Aoi1Out3ToQdc0Phasea
enumerator kINPUTMUX__Ctimer3M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer3M3ToQdc0Phasea
enumerator kINPUTMUX__Ctimer4M2ToQdc0Phasea
enumerator kINPUTMUX__Ctimer4M3ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Phasea
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Phasea
Qdc0 Icap1.
enumerator kINPUTMUX__ArmTxevToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out0ToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out1ToQdc0Icap1
enumerator kINPUTMUX__Aoi0Out2ToQdc0Icap1

enumerator kINPUTMUX__Aoi0Out3ToQdc0Icap1
enumerator kINPUTMUX__Cmp0OutToQdc0Icap1
enumerator kINPUTMUX__Cmp1OutToQdc0Icap1
enumerator kINPUTMUX__Ctimer0M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer0M3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer1M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer1M3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer2M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer2M3ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__TrigIn0ToQdc0Icap1
enumerator kINPUTMUX__TrigIn1ToQdc0Icap1
enumerator kINPUTMUX__TrigIn2ToQdc0Icap1
enumerator kINPUTMUX__TrigIn3ToQdc0Icap1
enumerator kINPUTMUX__TrigIn4ToQdc0Icap1
enumerator kINPUTMUX__TrigIn5ToQdc0Icap1
enumerator kINPUTMUX__TrigIn6ToQdc0Icap1
enumerator kINPUTMUX__TrigIn7ToQdc0Icap1
enumerator kINPUTMUX__TrigIn8ToQdc0Icap1
enumerator kINPUTMUX__TrigIn9ToQdc0Icap1
enumerator kINPUTMUX__TrigIn10ToQdc0Icap1
enumerator kINPUTMUX__TrigIn11ToQdc0Icap1
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc0Icap1
enumerator kINPUTMUX__Aoi1Out0ToQdc0Icap1

enumerator kINPUTMUX__Aoi1Out1ToQdc0Icap1
enumerator kINPUTMUX__Aoi1Out2ToQdc0Icap1
enumerator kINPUTMUX__Aoi1Out3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer3M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer3M3ToQdc0Icap1
enumerator kINPUTMUX__Ctimer4M2ToQdc0Icap1
enumerator kINPUTMUX__Ctimer4M3ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc0Icap1
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc0Icap1
Qdc1 Trigger.
enumerator kINPUTMUX__ArmTxevToQdc1Trigger
enumerator kINPUTMUX__Aoi0Out0ToQdc1Trigger
enumerator kINPUTMUX__Aoi0Out1ToQdc1Trigger
enumerator kINPUTMUX__Aoi0Out2ToQdc1Trigger
enumerator kINPUTMUX__Aoi0Out3ToQdc1Trigger
enumerator kINPUTMUX__Cmp0OutToQdc1Trigger
enumerator kINPUTMUX__Cmp1OutToQdc1Trigger
enumerator kINPUTMUX__Ctimer0M2ToQdc1Trigger
enumerator kINPUTMUX__Ctimer0M3ToQdc1Trigger
enumerator kINPUTMUX__Ctimer1M2ToQdc1Trigger
enumerator kINPUTMUX__Ctimer1M3ToQdc1Trigger
enumerator kINPUTMUX__Ctimer2M2ToQdc1Trigger
enumerator kINPUTMUX__Ctimer2M3ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc1Trigger
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc1Trigger

enumerator kINPUTMUX_TrigIn0ToQdc1Trigger
enumerator kINPUTMUX_TrigIn1ToQdc1Trigger
enumerator kINPUTMUX_TrigIn2ToQdc1Trigger
enumerator kINPUTMUX_TrigIn3ToQdc1Trigger
enumerator kINPUTMUX_TrigIn4ToQdc1Trigger
enumerator kINPUTMUX_TrigIn5ToQdc1Trigger
enumerator kINPUTMUX_TrigIn6ToQdc1Trigger
enumerator kINPUTMUX_TrigIn7ToQdc1Trigger
enumerator kINPUTMUX_TrigIn8ToQdc1Trigger
enumerator kINPUTMUX_TrigIn9ToQdc1Trigger
enumerator kINPUTMUX_TrigIn10ToQdc1Trigger
enumerator kINPUTMUX_TrigIn11ToQdc1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Trigger
enumerator kINPUTMUX_Aoi1Out0ToQdc1Trigger
enumerator kINPUTMUX_Aoi1Out1ToQdc1Trigger
enumerator kINPUTMUX_Aoi1Out2ToQdc1Trigger
enumerator kINPUTMUX_Aoi1Out3ToQdc1Trigger
enumerator kINPUTMUX_Ctimer3M2ToQdc1Trigger
enumerator kINPUTMUX_Ctimer3M3ToQdc1Trigger
enumerator kINPUTMUX_Ctimer4M2ToQdc1Trigger
enumerator kINPUTMUX_Ctimer4M3ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Trigger
Qdc1 Home.
enumerator kINPUTMUX_ArmTxevToQdc1Home

enumerator kINPUTMUX__Aoi0Out0ToQdc1Home
enumerator kINPUTMUX__Aoi0Out1ToQdc1Home
enumerator kINPUTMUX__Aoi0Out2ToQdc1Home
enumerator kINPUTMUX__Aoi0Out3ToQdc1Home
enumerator kINPUTMUX__Cmp0OutToQdc1Home
enumerator kINPUTMUX__Cmp1OutToQdc1Home
enumerator kINPUTMUX__Ctimer0M2ToQdc1Home
enumerator kINPUTMUX__Ctimer0M3ToQdc1Home
enumerator kINPUTMUX__Ctimer1M2ToQdc1Home
enumerator kINPUTMUX__Ctimer1M3ToQdc1Home
enumerator kINPUTMUX__Ctimer2M2ToQdc1Home
enumerator kINPUTMUX__Ctimer2M3ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToQdc1Home
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToQdc1Home
enumerator kINPUTMUX__TrigIn0ToQdc1Home
enumerator kINPUTMUX__TrigIn1ToQdc1Home
enumerator kINPUTMUX__TrigIn2ToQdc1Home
enumerator kINPUTMUX__TrigIn3ToQdc1Home
enumerator kINPUTMUX__TrigIn4ToQdc1Home
enumerator kINPUTMUX__TrigIn5ToQdc1Home
enumerator kINPUTMUX__TrigIn6ToQdc1Home
enumerator kINPUTMUX__TrigIn7ToQdc1Home
enumerator kINPUTMUX__TrigIn8ToQdc1Home
enumerator kINPUTMUX__TrigIn9ToQdc1Home
enumerator kINPUTMUX__TrigIn10ToQdc1Home
enumerator kINPUTMUX__TrigIn11ToQdc1Home
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc1Home
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc1Home
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc1Home

enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Home
enumerator kINPUTMUX_Aoi1Out0ToQdc1Home
enumerator kINPUTMUX_Aoi1Out1ToQdc1Home
enumerator kINPUTMUX_Aoi1Out2ToQdc1Home
enumerator kINPUTMUX_Aoi1Out3ToQdc1Home
enumerator kINPUTMUX_Ctimer3M2ToQdc1Home
enumerator kINPUTMUX_Ctimer3M3ToQdc1Home
enumerator kINPUTMUX_Ctimer4M2ToQdc1Home
enumerator kINPUTMUX_Ctimer4M3ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Home
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Home

Qdc1 Index.

enumerator kINPUTMUX_ArmTxevToQdc1Index
enumerator kINPUTMUX_Aoi0Out0ToQdc1Index
enumerator kINPUTMUX_Aoi0Out1ToQdc1Index
enumerator kINPUTMUX_Aoi0Out2ToQdc1Index
enumerator kINPUTMUX_Aoi0Out3ToQdc1Index
enumerator kINPUTMUX_Cmp0OutToQdc1Index
enumerator kINPUTMUX_Cmp1OutToQdc1Index
enumerator kINPUTMUX_Ctimer0M2ToQdc1Index
enumerator kINPUTMUX_Ctimer0M3ToQdc1Index
enumerator kINPUTMUX_Ctimer1M2ToQdc1Index
enumerator kINPUTMUX_Ctimer1M3ToQdc1Index
enumerator kINPUTMUX_Ctimer2M2ToQdc1Index
enumerator kINPUTMUX_Ctimer2M3ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Index

enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Index
enumerator kINPUTMUX_TrigIn0ToQdc1Index
enumerator kINPUTMUX_TrigIn1ToQdc1Index
enumerator kINPUTMUX_TrigIn2ToQdc1Index
enumerator kINPUTMUX_TrigIn3ToQdc1Index
enumerator kINPUTMUX_TrigIn4ToQdc1Index
enumerator kINPUTMUX_TrigIn5ToQdc1Index
enumerator kINPUTMUX_TrigIn6ToQdc1Index
enumerator kINPUTMUX_TrigIn7ToQdc1Index
enumerator kINPUTMUX_TrigIn8ToQdc1Index
enumerator kINPUTMUX_TrigIn9ToQdc1Index
enumerator kINPUTMUX_TrigIn10ToQdc1Index
enumerator kINPUTMUX_TrigIn11ToQdc1Index
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Index
enumerator kINPUTMUX_Aoi1Out0ToQdc1Index
enumerator kINPUTMUX_Aoi1Out1ToQdc1Index
enumerator kINPUTMUX_Aoi1Out2ToQdc1Index
enumerator kINPUTMUX_Aoi1Out3ToQdc1Index
enumerator kINPUTMUX_Ctimer3M2ToQdc1Index
enumerator kINPUTMUX_Ctimer3M3ToQdc1Index
enumerator kINPUTMUX_Ctimer4M2ToQdc1Index
enumerator kINPUTMUX_Ctimer4M3ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Index
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Index

enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Index
Qdc1 Phaseb.

enumerator kINPUTMUX_ArmTxevToQdc1Phaseb

enumerator kINPUTMUX_Aoi0Out0ToQdc1Phaseb

enumerator kINPUTMUX_Aoi0Out1ToQdc1Phaseb

enumerator kINPUTMUX_Aoi0Out2ToQdc1Phaseb

enumerator kINPUTMUX_Aoi0Out3ToQdc1Phaseb

enumerator kINPUTMUX_Cmp0OutToQdc1Phaseb

enumerator kINPUTMUX_Cmp1OutToQdc1Phaseb

enumerator kINPUTMUX_Ctimer0M2ToQdc1Phaseb

enumerator kINPUTMUX_Ctimer0M3ToQdc1Phaseb

enumerator kINPUTMUX_Ctimer1M2ToQdc1Phaseb

enumerator kINPUTMUX_Ctimer1M3ToQdc1Phaseb

enumerator kINPUTMUX_Ctimer2M2ToQdc1Phaseb

enumerator kINPUTMUX_Ctimer2M3ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Phaseb

enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn0ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn1ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn2ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn3ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn4ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn5ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn6ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn7ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn8ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn9ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn10ToQdc1Phaseb

enumerator kINPUTMUX_TrigIn11ToQdc1Phaseb

enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Aoi1Out0ToQdc1Phaseb
enumerator kINPUTMUX_Aoi1Out1ToQdc1Phaseb
enumerator kINPUTMUX_Aoi1Out2ToQdc1Phaseb
enumerator kINPUTMUX_Aoi1Out3ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer3M2ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer3M3ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer4M2ToQdc1Phaseb
enumerator kINPUTMUX_Ctimer4M3ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Phaseb
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Phaseb
Qdc1 Phasea.
enumerator kINPUTMUX_ArmTxevToQdc1Phasea
enumerator kINPUTMUX_Aoi0Out0ToQdc1Phasea
enumerator kINPUTMUX_Aoi0Out1ToQdc1Phasea
enumerator kINPUTMUX_Aoi0Out2ToQdc1Phasea
enumerator kINPUTMUX_Aoi0Out3ToQdc1Phasea
enumerator kINPUTMUX_Cmp0OutToQdc1Phasea
enumerator kINPUTMUX_Cmp1OutToQdc1Phasea
enumerator kINPUTMUX_Ctimer0M2ToQdc1Phasea
enumerator kINPUTMUX_Ctimer0M3ToQdc1Phasea
enumerator kINPUTMUX_Ctimer1M2ToQdc1Phasea
enumerator kINPUTMUX_Ctimer1M3ToQdc1Phasea
enumerator kINPUTMUX_Ctimer2M2ToQdc1Phasea
enumerator kINPUTMUX_Ctimer2M3ToQdc1Phasea

enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Phasea
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Phasea
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Phasea
enumerator kINPUTMUX_TrigIn0ToQdc1Phasea
enumerator kINPUTMUX_TrigIn1ToQdc1Phasea
enumerator kINPUTMUX_TrigIn2ToQdc1Phasea
enumerator kINPUTMUX_TrigIn3ToQdc1Phasea
enumerator kINPUTMUX_TrigIn4ToQdc1Phasea
enumerator kINPUTMUX_TrigIn5ToQdc1Phasea
enumerator kINPUTMUX_TrigIn6ToQdc1Phasea
enumerator kINPUTMUX_TrigIn7ToQdc1Phasea
enumerator kINPUTMUX_TrigIn8ToQdc1Phasea
enumerator kINPUTMUX_TrigIn9ToQdc1Phasea
enumerator kINPUTMUX_TrigIn10ToQdc1Phasea
enumerator kINPUTMUX_TrigIn11ToQdc1Phasea
enumerator kINPUTMUX_Gpio0PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX_Gpio1PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX_Gpio2PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX_Gpio3PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX_Gpio4PinEventTrig0ToQdc1Phasea
enumerator kINPUTMUX_Aoi1Out0ToQdc1Phasea
enumerator kINPUTMUX_Aoi1Out1ToQdc1Phasea
enumerator kINPUTMUX_Aoi1Out2ToQdc1Phasea
enumerator kINPUTMUX_Aoi1Out3ToQdc1Phasea
enumerator kINPUTMUX_Ctimer3M2ToQdc1Phasea
enumerator kINPUTMUX_Ctimer3M3ToQdc1Phasea
enumerator kINPUTMUX_Ctimer4M2ToQdc1Phasea
enumerator kINPUTMUX_Ctimer4M3ToQdc1Phasea
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToQdc1Phasea

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToQdc1Phasea
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToQdc1Phasea
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToQdc1Phasea
Qdc1Icap1.
enumerator kINPUTMUX_ArmTxevToQdc1Icap1
enumerator kINPUTMUX_Aoi0Out0ToQdc1Icap1
enumerator kINPUTMUX_Aoi0Out1ToQdc1Icap1
enumerator kINPUTMUX_Aoi0Out2ToQdc1Icap1
enumerator kINPUTMUX_Aoi0Out3ToQdc1Icap1
enumerator kINPUTMUX_Cmp0OutToQdc1Icap1
enumerator kINPUTMUX_Cmp1OutToQdc1Icap1
enumerator kINPUTMUX_Ctimer0M2ToQdc1Icap1
enumerator kINPUTMUX_Ctimer0M3ToQdc1Icap1
enumerator kINPUTMUX_Ctimer1M2ToQdc1Icap1
enumerator kINPUTMUX_Ctimer1M3ToQdc1Icap1
enumerator kINPUTMUX_Ctimer2M2ToQdc1Icap1
enumerator kINPUTMUX_Ctimer2M3ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToQdc1Icap1
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToQdc1Icap1
enumerator kINPUTMUX_TrigIn0ToQdc1Icap1
enumerator kINPUTMUX_TrigIn1ToQdc1Icap1
enumerator kINPUTMUX_TrigIn2ToQdc1Icap1
enumerator kINPUTMUX_TrigIn3ToQdc1Icap1
enumerator kINPUTMUX_TrigIn4ToQdc1Icap1
enumerator kINPUTMUX_TrigIn5ToQdc1Icap1
enumerator kINPUTMUX_TrigIn6ToQdc1Icap1
enumerator kINPUTMUX_TrigIn7ToQdc1Icap1
enumerator kINPUTMUX_TrigIn8ToQdc1Icap1

enumerator kINPUTMUX__TrigIn9ToQdc1Icap1
enumerator kINPUTMUX__TrigIn10ToQdc1Icap1
enumerator kINPUTMUX__TrigIn11ToQdc1Icap1
enumerator kINPUTMUX__Gpio0PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX__Gpio1PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX__Gpio2PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX__Gpio3PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX__Gpio4PinEventTrig0ToQdc1Icap1
enumerator kINPUTMUX__Aoi1Out0ToQdc1Icap1
enumerator kINPUTMUX__Aoi1Out1ToQdc1Icap1
enumerator kINPUTMUX__Aoi1Out2ToQdc1Icap1
enumerator kINPUTMUX__Aoi1Out3ToQdc1Icap1
enumerator kINPUTMUX__Ctimer3M2ToQdc1Icap1
enumerator kINPUTMUX__Ctimer3M3ToQdc1Icap1
enumerator kINPUTMUX__Ctimer4M2ToQdc1Icap1
enumerator kINPUTMUX__Ctimer4M3ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToQdc1Icap1
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToQdc1Icap1
FlexPWM0_SM0_EXT_A0 input trigger connections.
enumerator kINPUTMUX__ArmTxevToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Aoi0Out0ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Aoi0Out1ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Aoi0Out2ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Aoi0Out3ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Cmp0OutToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Cmp1OutToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Ctimer0M2ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Ctimer0M3ToFlexPwm0Sm0ExtA0
enumerator kINPUTMUX__Ctimer1M2ToFlexPwm0Sm0ExtA0

enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm0Exta0

enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm0Exta0
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm0Exta0
FlexPWM0_SM1_EXT_A1 input trigger connections.
enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm1Exta1
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm1Exta1

enumerator kINPUTMUX__TrigIn3ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Sm1Extal
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Sm1Extal
FlexPWM0_SM2_EXT2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm2Exta2

enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm2Exta2
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm2Exta2
FlexPWM0_SM0_EXTSYNC0 input trigger connections.
enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm0Extsync0

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm0Extsync0

enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm0Extsync0
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm0Extsync0
FlexPWM0_SM1_EXTSYNC1 input trigger connections.
enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm1Extsync1
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm1Extsync1

enumerator kINPUTMUX__TrigIn4ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn5ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn6ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn7ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn8ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn9ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn10ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__TrigIn11ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Sm1Extsync1
 enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Sm1Extsync1
 FlexPWM0_SM2_EXTSYNC2 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Cmp0OutToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Cmp1OutToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Sm2Extsync2
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Sm2Extsync2

enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Sm2Extsync2
 enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Sm2Extsync2
FlexPWM0_FAULT input trigger connections.
 enumerator kINPUTMUX_ArmTxevToFlexPwm0Fault
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Fault
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Fault
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Fault
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Fault
 enumerator kINPUTMUX_Cmp0OutToFlexPwm0Fault
 enumerator kINPUTMUX_Cmp1OutToFlexPwm0Fault
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Fault
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Fault
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Fault
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Fault

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn0ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn1ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn2ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn3ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn4ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn5ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn6ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn7ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn8ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn9ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn10ToFlexPwm0Fault
enumerator kINPUTMUX_TrigIn11ToFlexPwm0Fault
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm0Fault
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm0Fault
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm0Fault
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm0Fault

enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm0Fault
 enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm0Fault
 enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm0Fault
 enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexPwm0Fault
 enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToFlexPwm0Fault
 FlexPWM0_FORCE input trigger connections.
 enumerator kINPUTMUX_ArmTxevToFlexPwm0Force
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm0Force
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm0Force
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm0Force
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm0Force
 enumerator kINPUTMUX_Cmp0OutToFlexPwm0Force
 enumerator kINPUTMUX_Cmp1OutToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer2M2ToFlexPwm0Force
 enumerator kINPUTMUX_Ctimer2M3ToFlexPwm0Force
 enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm0Force
 enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm0Force
 enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm0Force
 enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm0Force
 enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm0Force
 enumerator kINPUTMUX_TrigIn0ToFlexPwm0Force
 enumerator kINPUTMUX_TrigIn1ToFlexPwm0Force
 enumerator kINPUTMUX_TrigIn2ToFlexPwm0Force
 enumerator kINPUTMUX_TrigIn3ToFlexPwm0Force

enumerator kINPUTMUX__TrigIn4ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn5ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn6ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn7ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn8ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn9ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn10ToFlexPwm0Force
enumerator kINPUTMUX__TrigIn11ToFlexPwm0Force
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm0Force
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm0Force
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm0Force
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm0Force
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm0Force
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm0Force
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm0Force
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm0Force
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm0Force
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm1OutTrig1ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm2OutTrig0ToFlexPwm0Force
enumerator kINPUTMUX__Pwm1Sm2OutTrig1ToFlexPwm0Force
FlexPWM1_SM0_EXT_A0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm0Ext0
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm0Ext0

enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm0ExtA0
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm0ExtA0
FlexPWM1_SM1_EXT_A1 input trigger connections.
enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm1ExtA1
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm1ExtA1

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm1Extal
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm1Extal

enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm1Ext1
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm1Ext1
FlexPWM1_SM2_EXT1 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm2Ext2
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm2Ext2

enumerator kINPUTMUX__TrigIn4ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Sm2Exta2
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Sm2Exta2
FlexPWM1_SM0_EXTSYNC0 input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm0Extsync0
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm0Extsync0

enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm0Extsync0
 enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm0Extsync0
FlexPWM1_SM1_EXTSYNC1 input trigger connections.
 enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm1Extsync1

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Sm1Extsync1
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Sm1Extsync1

enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Sm1Extsync1
 enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Sm1Extsync1
FlexPWM1_SM2_EXTSYNC2 input trigger connections.
 enumerator kINPUTMUX_ArmTxevToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Cmp0OutToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Cmp1OutToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn0ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn1ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn2ToFlexPwm1Sm2Extsync2
 enumerator kINPUTMUX_TrigIn3ToFlexPwm1Sm2Extsync2

enumerator kINPUTMUX__TrigIn4ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn5ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn6ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn7ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn8ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn9ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn10ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__TrigIn11ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio0PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio1PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio2PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio3PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Gpio4PinEventTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Aoi1Out3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer3M2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer3M3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer4M2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Ctimer4M3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag2ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1CmpFlag3ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Qdc1PosMatch0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm0OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm0OutTrig1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm1OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm1OutTrig1ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm2OutTrig0ToFlexPwm1Sm2Extsync2
enumerator kINPUTMUX__Pwm0Sm2OutTrig1ToFlexPwm1Sm2Extsync2
FlexPWM1_FAULT input trigger connections.

enumerator kINPUTMUX_ArmTxevToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Fault
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Fault
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Fault
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Fault
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Fault

enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Fault
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Fault
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Fault
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Fault
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Fault
FlexPWM1_FORCE input trigger connections.
enumerator kINPUTMUX_ArmTxevToFlexPwm1Force
enumerator kINPUTMUX_Aoi0Out0ToFlexPwm1Force
enumerator kINPUTMUX_Aoi0Out1ToFlexPwm1Force
enumerator kINPUTMUX_Aoi0Out2ToFlexPwm1Force
enumerator kINPUTMUX_Aoi0Out3ToFlexPwm1Force
enumerator kINPUTMUX_Cmp0OutToFlexPwm1Force
enumerator kINPUTMUX_Cmp1OutToFlexPwm1Force
enumerator kINPUTMUX_Ctimer0M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer0M3ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer1M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer1M3ToFlexPwm1Force

enumerator kINPUTMUX_Ctimer2M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer2M3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0CmpFlag0ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0CmpFlag1ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0CmpFlag2ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0CmpFlag3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc0PosMatch0ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn0ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn1ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn2ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn3ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn4ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn5ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn6ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn7ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn8ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn9ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn10ToFlexPwm1Force
enumerator kINPUTMUX_TrigIn11ToFlexPwm1Force
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio1PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out0ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out1ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out2ToFlexPwm1Force
enumerator kINPUTMUX_Aoi1Out3ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer3M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer3M3ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer4M2ToFlexPwm1Force
enumerator kINPUTMUX_Ctimer4M3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag0ToFlexPwm1Force

enumerator kINPUTMUX_Qdc1CmpFlag1ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag2ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1CmpFlag3ToFlexPwm1Force
enumerator kINPUTMUX_Qdc1PosMatch0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexPwm1Force
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToFlexPwm1Force

PWM0 external clock trigger.

enumerator kINPUTMUX_Clk16K1ToPwm0ExtClk
enumerator kINPUTMUX_ClkInToPwm0ExtClk
enumerator kINPUTMUX_Aoi0Out0ToPwm0ExtClk
enumerator kINPUTMUX_Aoi0Out1ToPwm0ExtClk
enumerator kINPUTMUX_ExttrigIn0ToPwm0ExtClk
enumerator kINPUTMUX_ExttrigIn7ToPwm0ExtClk
enumerator kINPUTMUX_Aoi1Out0ToPwm0ExtClk
enumerator kINPUTMUX_Aoi1Out1ToPwm0ExtClk

PWM1 external clock trigger.

enumerator kINPUTMUX_Clk16K1ToPwm1ExtClk
enumerator kINPUTMUX_ClkInToPwm1ExtClk
enumerator kINPUTMUX_Aoi0Out0ToPwm1ExtClk
enumerator kINPUTMUX_Aoi0Out1ToPwm1ExtClk
enumerator kINPUTMUX_ExttrigIn0ToPwm1ExtClk
enumerator kINPUTMUX_ExttrigIn7ToPwm1ExtClk
enumerator kINPUTMUX_Aoi1Out0ToPwm1ExtClk
enumerator kINPUTMUX_Aoi1Out1ToPwm1ExtClk

AOI0 trigger input connections.

enumerator kINPUTMUX_Adc0Tcomp0ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp1ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp2ToAoi0Mux
enumerator kINPUTMUX_Adc0Tcomp3ToAoi0Mux
enumerator kINPUTMUX_Cmp0OutToAoi0Mux

enumerator kINPUTMUX_Cmp1OutToAoi0Mux
enumerator kINPUTMUX_Ctimer0M0ToAoi0Mux
enumerator kINPUTMUX_Ctimer0M1ToAoi0Mux
enumerator kINPUTMUX_Ctimer0M2ToAoi0Mux
enumerator kINPUTMUX_Ctimer0M3ToAoi0Mux
enumerator kINPUTMUX_Ctimer1M0ToAoi0Mux
enumerator kINPUTMUX_Ctimer1M1ToAoi0Mux
enumerator kINPUTMUX_Ctimer1M2ToAoi0Mux
enumerator kINPUTMUX_Ctimer1M3ToAoi0Mux
enumerator kINPUTMUX_Ctimer2M0ToAoi0Mux
enumerator kINPUTMUX_Ctimer2M1ToAoi0Mux
enumerator kINPUTMUX_Ctimer2M2ToAoi0Mux
enumerator kINPUTMUX_Ctimer2M3ToAoi0Mux
enumerator kINPUTMUX_Lptmr0ToAoi0Mux
enumerator kINPUTMUX_Qdc0CmpFlag0ToAoi0Mux
enumerator kINPUTMUX_Qdc0CmpFlag1ToAoi0Mux
enumerator kINPUTMUX_Qdc0CmpFlag2ToAoi0Mux
enumerator kINPUTMUX_Qdc0CmpFlag3ToAoi0Mux
enumerator kINPUTMUX_Qdc0PosMatchToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAoi0Mux
enumerator kINPUTMUX_TrigIn0ToAoi0Mux
enumerator kINPUTMUX_TrigIn1ToAoi0Mux
enumerator kINPUTMUX_TrigIn2ToAoi0Mux
enumerator kINPUTMUX_TrigIn3ToAoi0Mux
enumerator kINPUTMUX_TrigIn4ToAoi0Mux
enumerator kINPUTMUX_TrigIn5ToAoi0Mux
enumerator kINPUTMUX_TrigIn6ToAoi0Mux
enumerator kINPUTMUX_TrigIn7ToAoi0Mux

enumerator kINPUTMUX__TrigIn8ToAoi0Mux
enumerator kINPUTMUX__TrigIn9ToAoi0Mux
enumerator kINPUTMUX__TrigIn10ToAoi0Mux
enumerator kINPUTMUX__TrigIn11ToAoi0Mux
enumerator kINPUTMUX__Gpio0PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio1PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio2PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio3PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Gpio4PinEventTrig0ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp0ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp1ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp2ToAoi0Mux
enumerator kINPUTMUX__Adc1Tcomp3ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer3M3ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M0ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M1ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M2ToAoi0Mux
enumerator kINPUTMUX__Ctimer4M3ToAoi0Mux
enumerator kINPUTMUX__FlexioCh0ToAoi0Mux
enumerator kINPUTMUX__FlexioCh1ToAoi0Mux
enumerator kINPUTMUX__FlexioCh2ToAoi0Mux
enumerator kINPUTMUX__FlexioCh3ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag0ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag1ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag2ToAoi0Mux
enumerator kINPUTMUX__Qdc1CmpFlag3ToAoi0Mux
enumerator kINPUTMUX__Qdc1PosMatchToAoi0Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig0ToAoi0Mux
enumerator kINPUTMUX__Pwm1Sm0OutTrig1ToAoi0Mux
enumerator kINPUTMUX__Pwm1Sm1OutTrig0ToAoi0Mux

enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAoi0Mux
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAoi0Mux
AOI1 trigger input connections.
enumerator kINPUTMUX_Adc0Tcomp0ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp1ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp2ToAoi1Mux
enumerator kINPUTMUX_Adc0Tcomp3ToAoi1Mux
enumerator kINPUTMUX_Cmp0OutToAoi1Mux
enumerator kINPUTMUX_Cmp1OutToAoi1Mux
enumerator kINPUTMUX_Ctimer0M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer0M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer0M2ToAoi1Mux
enumerator kINPUTMUX_Ctimer0M3ToAoi1Mux
enumerator kINPUTMUX_Ctimer1M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer1M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer1M2ToAoi1Mux
enumerator kINPUTMUX_Ctimer1M3ToAoi1Mux
enumerator kINPUTMUX_Ctimer2M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer2M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer2M2ToAoi1Mux
enumerator kINPUTMUX_Ctimer2M3ToAoi1Mux
enumerator kINPUTMUX_Lptmr0ToAoi1Mux
enumerator kINPUTMUX_Qdc0CmpFlag0ToAoi1Mux
enumerator kINPUTMUX_Qdc0CmpFlag1ToAoi1Mux
enumerator kINPUTMUX_Qdc0CmpFlag2ToAoi1Mux
enumerator kINPUTMUX_Qdc0CmpFlag3ToAoi1Mux
enumerator kINPUTMUX_Qdc0PosMatchToAoi1Mux
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToAoi1Mux
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToAoi1Mux
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToAoi1Mux
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToAoi1Mux
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToAoi1Mux

enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToAoi1Mux
enumerator kINPUTMUX_TrigIn0ToAoi1Mux
enumerator kINPUTMUX_TrigIn1ToAoi1Mux
enumerator kINPUTMUX_TrigIn2ToAoi1Mux
enumerator kINPUTMUX_TrigIn3ToAoi1Mux
enumerator kINPUTMUX_TrigIn4ToAoi1Mux
enumerator kINPUTMUX_TrigIn5ToAoi1Mux
enumerator kINPUTMUX_TrigIn6ToAoi1Mux
enumerator kINPUTMUX_TrigIn7ToAoi1Mux
enumerator kINPUTMUX_TrigIn8ToAoi1Mux
enumerator kINPUTMUX_TrigIn9ToAoi1Mux
enumerator kINPUTMUX_TrigIn10ToAoi1Mux
enumerator kINPUTMUX_TrigIn11ToAoi1Mux
enumerator kINPUTMUX_Gpio0PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX_Gpio1PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX_Gpio2PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX_Gpio3PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX_Gpio4PinEventTrig0ToAoi1Mux
enumerator kINPUTMUX_Adc1Tcomp0ToAoi1Mux
enumerator kINPUTMUX_Adc1Tcomp1ToAoi1Mux
enumerator kINPUTMUX_Adc1Tcomp2ToAoi1Mux
enumerator kINPUTMUX_Adc1Tcomp3ToAoi1Mux
enumerator kINPUTMUX_Ctimer3M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer3M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer3M2ToAoi1Mux
enumerator kINPUTMUX_Ctimer3M3ToAoi1Mux
enumerator kINPUTMUX_Ctimer4M0ToAoi1Mux
enumerator kINPUTMUX_Ctimer4M1ToAoi1Mux
enumerator kINPUTMUX_Ctimer4M2ToAoi1Mux
enumerator kINPUTMUX_Ctimer4M3ToAoi1Mux
enumerator kINPUTMUX_FlexioCh0ToAoi1Mux
enumerator kINPUTMUX_FlexioCh1ToAoi1Mux
enumerator kINPUTMUX_FlexioCh2ToAoi1Mux

enumerator kINPUTMUX_FlexioCh3ToAoi1Mux
 enumerator kINPUTMUX_Qdc1CmpFlag0ToAoi1Mux
 enumerator kINPUTMUX_Qdc1CmpFlag1ToAoi1Mux
 enumerator kINPUTMUX_Qdc1CmpFlag2ToAoi1Mux
 enumerator kINPUTMUX_Qdc1CmpFlag3ToAoi1Mux
 enumerator kINPUTMUX_Qdc1PosMatchToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToAoi1Mux
 enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToAoi1Mux

USB-FS trigger input connections.

enumerator kINPUTMUX_Lpuart0TrgTxdataToUsbfsTrigger
 enumerator kINPUTMUX_Lpuart1TrgTxdataToUsbfsTrigger
 enumerator kINPUTMUX_Lpuart2TrgTxdataToUsbfsTrigger
 enumerator kINPUTMUX_Lpuart3TrgTxdataToUsbfsTrigger
 enumerator kINPUTMUX_Lpuart4TrgTxdataToUsbfsTrigger

EXT trigger connections.

enumerator kINPUTMUX_Aoi0Out0ToExtTrigger
 enumerator kINPUTMUX_Aoi0Out1ToExtTrigger
 enumerator kINPUTMUX_Aoi0Out2ToExtTrigger
 enumerator kINPUTMUX_Aoi0Out3ToExtTrigger
 enumerator kINPUTMUX_Cmp0OutToExtTrigger
 enumerator kINPUTMUX_Cmp1OutToExtTrigger
 enumerator kINPUTMUX_Lpuart0ToExtTrigger
 enumerator kINPUTMUX_Lpuart1ToExtTrigger
 enumerator kINPUTMUX_Lpuart2ToExtTrigger
 enumerator kINPUTMUX_Lpuart3ToExtTrigger
 enumerator kINPUTMUX_Lpuart4ToExtTrigger
 enumerator kINPUTMUX_Aoi1Out0ToExtTrigger
 enumerator kINPUTMUX_Aoi1Out1ToExtTrigger
 enumerator kINPUTMUX_Aoi1Out2ToExtTrigger
 enumerator kINPUTMUX_Aoi1Out3ToExtTrigger

LPI2C0 trigger input connections.

enumerator kINPUTMUX__Aoi0Out0ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi0Out1ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi0Out2ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi0Out3ToLpi2c0Trigger
enumerator kINPUTMUX__Cmp0OutToLpi2c0Trigger
enumerator kINPUTMUX__Cmp1OutToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer0M0ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer0M1ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer1M0ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer1M1ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer2M0ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer2M1ToLpi2c0Trigger
enumerator kINPUTMUX__Lptmr0ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn0ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn1ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn2ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn3ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn4ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn5ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn6ToLpi2c0Trigger
enumerator kINPUTMUX__TrigIn7ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpi2c0Trigger
enumerator kINPUTMUX__WuuToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpi2c0Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpi2c0Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer4M2ToLpi2c0Trigger

enumerator kINPUTMUX_Ctimer4M3ToLpi2c0Trigger

enumerator kINPUTMUX_FlexioCh0ToLpi2c0Trigger

enumerator kINPUTMUX_FlexioCh1ToLpi2c0Trigger

enumerator kINPUTMUX_FlexioCh2ToLpi2c0Trigger

enumerator kINPUTMUX_FlexioCh3ToLpi2c0Trigger

LPI2C1 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpi2c1Trigger

enumerator kINPUTMUX_Aoi0Out1ToLpi2c1Trigger

enumerator kINPUTMUX_Aoi0Out2ToLpi2c1Trigger

enumerator kINPUTMUX_Aoi0Out3ToLpi2c1Trigger

enumerator kINPUTMUX_Cmp0OutToLpi2c1Trigger

enumerator kINPUTMUX_Cmp1OutToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer0M0ToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer0M1ToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer1M0ToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer1M1ToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer2M0ToLpi2c1Trigger

enumerator kINPUTMUX_Ctimer2M1ToLpi2c1Trigger

enumerator kINPUTMUX_Lptmr0ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn0ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn1ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn2ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn3ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn4ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn5ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn6ToLpi2c1Trigger

enumerator kINPUTMUX_TrigIn7ToLpi2c1Trigger

enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpi2c1Trigger

enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpi2c1Trigger

enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpi2c1Trigger

enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpi2c1Trigger

enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpi2c1Trigger

enumerator kINPUTMUX_WuuToLpi2c1Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpi2c1Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpi2c1Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpi2c1Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpi2c1Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpi2c1Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpi2c1Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpi2c1Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpi2c1Trigger
enumerator kINPUTMUX_FlexioCh0ToLpi2c1Trigger
enumerator kINPUTMUX_FlexioCh1ToLpi2c1Trigger
enumerator kINPUTMUX_FlexioCh2ToLpi2c1Trigger
enumerator kINPUTMUX_FlexioCh3ToLpi2c1Trigger
LPI2C2 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpi2c2Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpi2c2Trigger
enumerator kINPUTMUX_Cmp0OutToLpi2c2Trigger
enumerator kINPUTMUX_Cmp1OutToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer0M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer0M1ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer1M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer1M1ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer2M0ToLpi2c2Trigger
enumerator kINPUTMUX_Ctimer2M1ToLpi2c2Trigger
enumerator kINPUTMUX_Lptmr0ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn0ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn1ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn2ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn3ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn4ToLpi2c2Trigger
enumerator kINPUTMUX_TrigIn5ToLpi2c2Trigger

enumerator kINPUTMUX_TrigIn6ToLpi2c2Trigger
 enumerator kINPUTMUX_TrigIn7ToLpi2c2Trigger
 enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpi2c2Trigger
 enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpi2c2Trigger
 enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpi2c2Trigger
 enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpi2c2Trigger
 enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpi2c2Trigger
 enumerator kINPUTMUX_WuuToLpi2c2Trigger
 enumerator kINPUTMUX_Aoi1Out0ToLpi2c2Trigger
 enumerator kINPUTMUX_Aoi1Out1ToLpi2c2Trigger
 enumerator kINPUTMUX_Aoi1Out2ToLpi2c2Trigger
 enumerator kINPUTMUX_Aoi1Out3ToLpi2c2Trigger
 enumerator kINPUTMUX_Ctimer3M2ToLpi2c2Trigger
 enumerator kINPUTMUX_Ctimer3M3ToLpi2c2Trigger
 enumerator kINPUTMUX_Ctimer4M2ToLpi2c2Trigger
 enumerator kINPUTMUX_Ctimer4M3ToLpi2c2Trigger
 enumerator kINPUTMUX_FlexioCh0ToLpi2c2Trigger
 enumerator kINPUTMUX_FlexioCh1ToLpi2c2Trigger
 enumerator kINPUTMUX_FlexioCh2ToLpi2c2Trigger
 enumerator kINPUTMUX_FlexioCh3ToLpi2c2Trigger

LPSPI0 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpspi0Trigger
 enumerator kINPUTMUX_Aoi0Out1ToLpspi0Trigger
 enumerator kINPUTMUX_Aoi0Out2ToLpspi0Trigger
 enumerator kINPUTMUX_Aoi0Out3ToLpspi0Trigger
 enumerator kINPUTMUX_Cmp0OutToLpspi0Trigger
 enumerator kINPUTMUX_Cmp1OutToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer0M1ToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer0M2ToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer1M1ToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer1M2ToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer2M1ToLpspi0Trigger
 enumerator kINPUTMUX_Ctimer2M2ToLpspi0Trigger

enumerator kINPUTMUX_Lptmr0ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn0ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn1ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn2ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn3ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn4ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn5ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn6ToLpspi0Trigger
enumerator kINPUTMUX_TrigIn7ToLpspi0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpspi0Trigger
enumerator kINPUTMUX_WuuToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpspi0Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpspi0Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh0ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh1ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh2ToLpspi0Trigger
enumerator kINPUTMUX_FlexioCh3ToLpspi0Trigger
 LPSP1 trigger input connections.
enumerator kINPUTMUX_Aoi0Out0ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpspi1Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpspi1Trigger
enumerator kINPUTMUX_Cmp0OutToLpspi1Trigger

enumerator kINPUTMUX_Cmp1OutToLpspi1Trigger
enumerator kINPUTMUX_Ctimer0M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer1M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer2M1ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpspi1Trigger
enumerator kINPUTMUX_Lptmr0ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn0ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn1ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn2ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn3ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn4ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn5ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn6ToLpspi1Trigger
enumerator kINPUTMUX_TrigIn7ToLpspi1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpspi1Trigger
enumerator kINPUTMUX_WuuToLpspi1Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpspi1Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpspi1Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpspi1Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpspi1Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpspi1Trigger
enumerator kINPUTMUX_FlexioCh0ToLpspi1Trigger
enumerator kINPUTMUX_FlexioCh1ToLpspi1Trigger
enumerator kINPUTMUX_FlexioCh2ToLpspi1Trigger

enumerator kINPUTMUX_FlexioCh3ToLpspi1Trigger
LPUART0 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpuart0Trigger

enumerator kINPUTMUX_Aoi0Out1ToLpuart0Trigger

enumerator kINPUTMUX_Aoi0Out2ToLpuart0Trigger

enumerator kINPUTMUX_Aoi0Out3ToLpuart0Trigger

enumerator kINPUTMUX_Cmp0OutToLpuart0Trigger

enumerator kINPUTMUX_Cmp1OutToLpuart0Trigger

enumerator kINPUTMUX_Ctimer0M2ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer0M3ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer1M2ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer1M3ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer2M2ToLpuart0Trigger

enumerator kINPUTMUX_Ctimer2M3ToLpuart0Trigger

enumerator kINPUTMUX_Lptmr0ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn0ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn1ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn2ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn3ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn4ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn5ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn6ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn7ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn8ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn9ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn10ToLpuart0Trigger

enumerator kINPUTMUX_TrigIn11ToLpuart0Trigger

enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart0Trigger

enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart0Trigger

enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart0Trigger

enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart0Trigger

enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart0Trigger

enumerator kINPUTMUX_WuuToLpuart0Trigger

enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart0Trigger
 enumerator kINPUTMUX_Aoi1Out0ToLpuart0Trigger
 enumerator kINPUTMUX_Aoi1Out1ToLpuart0Trigger
 enumerator kINPUTMUX_Aoi1Out2ToLpuart0Trigger
 enumerator kINPUTMUX_Aoi1Out3ToLpuart0Trigger
 enumerator kINPUTMUX_Ctimer3M2ToLpuart0Trigger
 enumerator kINPUTMUX_Ctimer3M3ToLpuart0Trigger
 enumerator kINPUTMUX_Ctimer4M2ToLpuart0Trigger
 enumerator kINPUTMUX_Ctimer4M3ToLpuart0Trigger
 enumerator kINPUTMUX_FlexioCh0ToLpuart0Trigger
 enumerator kINPUTMUX_FlexioCh1ToLpuart0Trigger
 enumerator kINPUTMUX_FlexioCh2ToLpuart0Trigger
 enumerator kINPUTMUX_FlexioCh3ToLpuart0Trigger
 LPUART1 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpuart1Trigger
 enumerator kINPUTMUX_Aoi0Out1ToLpuart1Trigger
 enumerator kINPUTMUX_Aoi0Out2ToLpuart1Trigger
 enumerator kINPUTMUX_Aoi0Out3ToLpuart1Trigger
 enumerator kINPUTMUX_Cmp0OutToLpuart1Trigger
 enumerator kINPUTMUX_Cmp1OutToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer0M2ToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer0M3ToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer1M2ToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer1M3ToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer2M2ToLpuart1Trigger
 enumerator kINPUTMUX_Ctimer2M3ToLpuart1Trigger
 enumerator kINPUTMUX_Lptmr0ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn0ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn1ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn2ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn3ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn4ToLpuart1Trigger
 enumerator kINPUTMUX_TrigIn5ToLpuart1Trigger

enumerator kINPUTMUX_TrigIn6ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn7ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn8ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn9ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn10ToLpuart1Trigger
enumerator kINPUTMUX_TrigIn11ToLpuart1Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart1Trigger
enumerator kINPUTMUX_WuuToLpuart1Trigger
enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpuart1Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpuart1Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh0ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh1ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh2ToLpuart1Trigger
enumerator kINPUTMUX_FlexioCh3ToLpuart1Trigger
LPUART2 trigger input connections.
enumerator kINPUTMUX_Aoi0Out0ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpuart2Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpuart2Trigger
enumerator kINPUTMUX_Cmp0OutToLpuart2Trigger
enumerator kINPUTMUX_Cmp1OutToLpuart2Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpuart2Trigger

enumerator kINPUTMUX_Ctimer0M3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer1M3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer2M3ToLpuart2Trigger
enumerator kINPUTMUX_Lptmr0ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn0ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn1ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn2ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn3ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn4ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn5ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn6ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn7ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn8ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn9ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn10ToLpuart2Trigger
enumerator kINPUTMUX_TrigIn11ToLpuart2Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart2Trigger
enumerator kINPUTMUX_WuuToLpuart2Trigger
enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart2Trigger
enumerator kINPUTMUX_Aoi1Out0ToLpuart2Trigger
enumerator kINPUTMUX_Aoi1Out1ToLpuart2Trigger
enumerator kINPUTMUX_Aoi1Out2ToLpuart2Trigger
enumerator kINPUTMUX_Aoi1Out3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer3M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer3M3ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer4M2ToLpuart2Trigger
enumerator kINPUTMUX_Ctimer4M3ToLpuart2Trigger

enumerator kINPUTMUX_FlexioCh0ToLpuart2Trigger
enumerator kINPUTMUX_FlexioCh1ToLpuart2Trigger
enumerator kINPUTMUX_FlexioCh2ToLpuart2Trigger
enumerator kINPUTMUX_FlexioCh3ToLpuart2Trigger
LPUART3 trigger input connections.
enumerator kINPUTMUX_Aoi0Out0ToLpuart3Trigger
enumerator kINPUTMUX_Aoi0Out1ToLpuart3Trigger
enumerator kINPUTMUX_Aoi0Out2ToLpuart3Trigger
enumerator kINPUTMUX_Aoi0Out3ToLpuart3Trigger
enumerator kINPUTMUX_Cmp0OutToLpuart3Trigger
enumerator kINPUTMUX_Cmp1OutToLpuart3Trigger
enumerator kINPUTMUX_Ctimer0M2ToLpuart3Trigger
enumerator kINPUTMUX_Ctimer0M3ToLpuart3Trigger
enumerator kINPUTMUX_Ctimer1M2ToLpuart3Trigger
enumerator kINPUTMUX_Ctimer1M3ToLpuart3Trigger
enumerator kINPUTMUX_Ctimer2M2ToLpuart3Trigger
enumerator kINPUTMUX_Ctimer2M3ToLpuart3Trigger
enumerator kINPUTMUX_Lptmr0ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn0ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn1ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn2ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn3ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn4ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn5ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn6ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn7ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn8ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn9ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn10ToLpuart3Trigger
enumerator kINPUTMUX_TrigIn11ToLpuart3Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToLpuart3Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToLpuart3Trigger

enumerator kINPUTMUX_Gpio3PinEventTrig0ToLpuart3Trigger
 enumerator kINPUTMUX_Gpio4PinEventTrig0ToLpuart3Trigger
 enumerator kINPUTMUX_WuuToLpuart3Trigger
 enumerator kINPUTMUX_Usb0IppIndUartRxdUsbmuxToLpuart3Trigger
 enumerator kINPUTMUX_Aoi1Out0ToLpuart3Trigger
 enumerator kINPUTMUX_Aoi1Out1ToLpuart3Trigger
 enumerator kINPUTMUX_Aoi1Out2ToLpuart3Trigger
 enumerator kINPUTMUX_Aoi1Out3ToLpuart3Trigger
 enumerator kINPUTMUX_Ctimer3M2ToLpuart3Trigger
 enumerator kINPUTMUX_Ctimer3M3ToLpuart3Trigger
 enumerator kINPUTMUX_Ctimer4M2ToLpuart3Trigger
 enumerator kINPUTMUX_Ctimer4M3ToLpuart3Trigger
 enumerator kINPUTMUX_FlexioCh0ToLpuart3Trigger
 enumerator kINPUTMUX_FlexioCh1ToLpuart3Trigger
 enumerator kINPUTMUX_FlexioCh2ToLpuart3Trigger
 enumerator kINPUTMUX_FlexioCh3ToLpuart3Trigger

LPUART4 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToLpuart4Trigger
 enumerator kINPUTMUX_Aoi0Out1ToLpuart4Trigger
 enumerator kINPUTMUX_Aoi0Out2ToLpuart4Trigger
 enumerator kINPUTMUX_Aoi0Out3ToLpuart4Trigger
 enumerator kINPUTMUX_Cmp0OutToLpuart4Trigger
 enumerator kINPUTMUX_Cmp1OutToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer0M2ToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer0M3ToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer1M2ToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer1M3ToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer2M2ToLpuart4Trigger
 enumerator kINPUTMUX_Ctimer2M3ToLpuart4Trigger
 enumerator kINPUTMUX_Lptmr0ToLpuart4Trigger
 enumerator kINPUTMUX_TrigIn0ToLpuart4Trigger
 enumerator kINPUTMUX_TrigIn1ToLpuart4Trigger
 enumerator kINPUTMUX_TrigIn2ToLpuart4Trigger

enumerator kINPUTMUX__TrigIn3ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn4ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn5ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn6ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn7ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn8ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn9ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn10ToLpuart4Trigger
enumerator kINPUTMUX__TrigIn11ToLpuart4Trigger
enumerator kINPUTMUX__Gpio0PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio1PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio2PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio3PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__Gpio4PinEventTrig0ToLpuart4Trigger
enumerator kINPUTMUX__WuuToLpuart4Trigger
enumerator kINPUTMUX__Usb0IppIndUartRxdUsbmuxToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out0ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out1ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out2ToLpuart4Trigger
enumerator kINPUTMUX__Aoi1Out3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer3M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer3M3ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer4M2ToLpuart4Trigger
enumerator kINPUTMUX__Ctimer4M3ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh0ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh1ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh2ToLpuart4Trigger
enumerator kINPUTMUX__FlexioCh3ToLpuart4Trigger
Flexio trigger0 input connections.
enumerator kINPUTMUX__Aoi0Out0ToFlexioTrigger
enumerator kINPUTMUX__Aoi0Out1ToFlexioTrigger
enumerator kINPUTMUX__Aoi0Out2ToFlexioTrigger
enumerator kINPUTMUX__Aoi0Out3ToFlexioTrigger

enumerator kINPUTMUX_Adc0Tcomp0ToFlexioTrigger
enumerator kINPUTMUX_Adc0Tcomp1ToFlexioTrigger
enumerator kINPUTMUX_Adc0Tcomp2ToFlexioTrigger
enumerator kINPUTMUX_Adc0Tcomp3ToFlexioTrigger
enumerator kINPUTMUX_Cmp0OutToFlexioTrigger
enumerator kINPUTMUX_Cmp1OutToFlexioTrigger
enumerator kINPUTMUX_Ctimer0M1ToFlexioTrigger
enumerator kINPUTMUX_Ctimer0M2ToFlexioTrigger
enumerator kINPUTMUX_Ctimer1M1ToFlexioTrigger
enumerator kINPUTMUX_Ctimer1M2ToFlexioTrigger
enumerator kINPUTMUX_Ctimer2M1ToFlexioTrigger
enumerator kINPUTMUX_Ctimer2M2ToFlexioTrigger
enumerator kINPUTMUX_Lptmr0ToFlexioTrigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToFlexioTrigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToFlexioTrigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToFlexioTrigger
enumerator kINPUTMUX_TrigIn0ToFlexioTrigger
enumerator kINPUTMUX_TrigIn1ToFlexioTrigger
enumerator kINPUTMUX_TrigIn2ToFlexioTrigger
enumerator kINPUTMUX_TrigIn3ToFlexioTrigger
enumerator kINPUTMUX_TrigIn4ToFlexioTrigger
enumerator kINPUTMUX_TrigIn5ToFlexioTrigger
enumerator kINPUTMUX_TrigIn6ToFlexioTrigger
enumerator kINPUTMUX_TrigIn7ToFlexioTrigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToFlexioTrigger
enumerator kINPUTMUX_WuuToFlexioTrigger
enumerator kINPUTMUX_Pwm1A0Trig0ToFlexioTrigger
enumerator kINPUTMUX_Lpi2c0MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpi2c0SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpi2c1MasterEndOfPacketToFlexioTrigger

enumerator kINPUTMUX_Lpi2c1SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpspi0EndOfFrameToFlexioTrigger
enumerator kINPUTMUX_Lpspi0ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpspi1EndOfFrameToFlexioTrigger
enumerator kINPUTMUX_Lpspi1ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart0ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart0TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart0ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX_Lpuart1ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart1TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart1ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX_Lpuart2ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart2TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart2ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX_Lpuart3ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart3TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart3ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX_Lpuart4ReceivedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart4TransmittedDataWordToFlexioTrigger
enumerator kINPUTMUX_Lpuart4ReceiveLineIdleToFlexioTrigger
enumerator kINPUTMUX_Aoi1Out0ToFlexioTrigger
enumerator kINPUTMUX_Aoi1Out1ToFlexioTrigger
enumerator kINPUTMUX_Aoi1Out2ToFlexioTrigger
enumerator kINPUTMUX_Aoi1Out3ToFlexioTrigger
enumerator kINPUTMUX_Adc1Tcomp0ToFlexioTrigger
enumerator kINPUTMUX_Adc1Tcomp1ToFlexioTrigger
enumerator kINPUTMUX_Adc1Tcomp2ToFlexioTrigger
enumerator kINPUTMUX_Adc1Tcomp3ToFlexioTrigger
enumerator kINPUTMUX_Ctimer3M2ToFlexioTrigger
enumerator kINPUTMUX_Ctimer3M3ToFlexioTrigger
enumerator kINPUTMUX_Ctimer4M2ToFlexioTrigger
enumerator kINPUTMUX_Ctimer4M3ToFlexioTrigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToFlexioTrigger

enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToFlexioTrigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToFlexioTrigger
enumerator kINPUTMUX_Lpi2c2MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpi2c2SlaveEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpi2c3MasterEndOfPacketToFlexioTrigger
enumerator kINPUTMUX_Lpi2c3SlaveEndOfPacketToFlexioTrigger
Opamp0 trigger input connections.

enumerator kINPUTMUX_Aoi0Out0ToOpamp0Trigger
enumerator kINPUTMUX_Aoi0Out1ToOpamp0Trigger
enumerator kINPUTMUX_Aoi0Out2ToOpamp0Trigger
enumerator kINPUTMUX_Aoi0Out3ToOpamp0Trigger
enumerator kINPUTMUX_Cmp0OutToOpamp0Trigger
enumerator kINPUTMUX_Cmp1OutToOpamp0Trigger
enumerator kINPUTMUX_Ctimer0M0ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer0M1ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer1M0ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer1M1ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer2M0ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer2M1ToOpamp0Trigger
enumerator kINPUTMUX_Lptmr0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm0OutTrig1ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm1OutTrig1ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm0Sm2OutTrig1ToOpamp0Trigger
enumerator kINPUTMUX_Gpio0PinEventTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Gpio1PinEventTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Gpio2PinEventTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Gpio3PinEventTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Gpio4PinEventTrig0ToOpamp0Trigger
enumerator kINPUTMUX_WuuToOpamp0Trigger
enumerator kINPUTMUX_Aoi1Out0ToOpamp0Trigger

enumerator kINPUTMUX_Aoi1Out1ToOpamp0Trigger
enumerator kINPUTMUX_Aoi1Out2ToOpamp0Trigger
enumerator kINPUTMUX_Aoi1Out3ToOpamp0Trigger
enumerator kINPUTMUX_Adc1Tcomp0ToOpamp0Trigger
enumerator kINPUTMUX_Adc1Tcomp1ToOpamp0Trigger
enumerator kINPUTMUX_Adc1Tcomp2ToOpamp0Trigger
enumerator kINPUTMUX_Adc1Tcomp3ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer3M0ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer3M1ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer4M0ToOpamp0Trigger
enumerator kINPUTMUX_Ctimer4M1ToOpamp0Trigger
enumerator kINPUTMUX_FlexioCh0ToOpamp0Trigger
enumerator kINPUTMUX_FlexioCh1ToOpamp0Trigger
enumerator kINPUTMUX_FlexioCh2ToOpamp0Trigger
enumerator kINPUTMUX_FlexioCh3ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm0OutTrig1ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm1OutTrig1ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig0ToOpamp0Trigger
enumerator kINPUTMUX_Pwm1Sm2OutTrig1ToOpamp0Trigger

typedef enum *inputmux_index_t* inputmux_index_t

typedef enum *inputmux_connection_t* inputmux_connection_t
INPUTMUX connections type.

TIMER0CAPTSEL0

Periphinmux IDs.

TIMER0TRIGIN

TIMER1CAPTSEL0

TIMER1TRIGIN

TIMER2CAPTSEL0

TIMER2TRIGIN

FREQMEAS_REF_REG

FREQMEAS_TAR_REG

TIMER3CAPTSEL0

TIMER3TRIGIN
TIMER4CAPTSELO
TIMER4TRIGIN
AOI1_MUX_REG
CMP0_TRIG_REG
ADC0_TRIG0_REG
ADC1_TRIG0_REG
DAC0_TRIG0_REG
QDC0_TRIG_REG
QDC0_HOME_REG
QDC0_INDEX_REG
QDC0_PHASEB_REG
QDC0_PHASEA_REG
QDC0_ICAP0_REG
QDC1_TRIG_REG
QDC1_HOME_REG
QDC1_INDEX_REG
QDC1_PHASEB_REG
QDC1_PHASEA_REG
QDC1_ICAP0_REG
FlexPWM0_SM0_EXT_A0_REG
FlexPWM0_SM0_EXTSYNC0_REG
FlexPWM0_SM1_EXT_A1_REG
FlexPWM0_SM1_EXTSYNC1_REG
FlexPWM0_SM2_EXT_A2_REG
FlexPWM0_SM2_EXTSYNC2_REG
FlexPWM0_FAULT_REG
FlexPWM0_FORCE_REG
FlexPWM1_SM0_EXT_A0_REG
FlexPWM1_SM0_EXTSYNC0_REG
FlexPWM1_SM1_EXT_A1_REG
FlexPWM1_SM1_EXTSYNC1_REG
FlexPWM1_SM2_EXT_A2_REG

FlexPWM1_SM2_EXTSYNC2_REG

FlexPWM1_FAULT_REG

FlexPWM1_FORCE_REG

PWM0_EXT_CLK_REG

PWM1_EXT_CLK_REG

AOI0_MUX_REG

USBFS_TRIG_REG

EXT_TRIG0_REG

CMP1_TRIG_REG

LPI2C2_TRIG_REG

OPAMP0_TRIG_REG

LPI2C0_TRIG_REG

LPI2C1_TRIG_REG

LPSPI0_TRIG_REG

LPSPI1_TRIG_REG

LPUART0_TRIG_REG

LPUART1_TRIG_REG

LPUART2_TRIG_REG

LPUART3_TRIG_REG

LPUART4_TRIG_REG

FLEXIO_TRIG0_REG

PMUX_SHIFT

FSL_INPUTMUX_DRIVER_VERSION

Group interrupt driver version for SDK.

void INPUTMUX_Init(void *base)

Initialize INPUTMUX peripheral.

This function enables the INPUTMUX clock.

Parameters

- base – Base address of the INPUTMUX peripheral.

Return values

None. –

void INPUTMUX_AttachSignal(void *base, uint32_t index, *inputmux_connection_t* connection)

Attaches a signal.

This function attaches multiplexed signals from INPUTMUX to target signals. For example, to attach GPIO PORT0 Pin 5 to PINT peripheral, do the following:

```
INPUTMUX_AttachSignal(INPUTMUX, 2, kINPUTMUX_GpioPort0Pin5ToPintsel);
```

In this example, INTMUX has 8 registers for PINT, PINT_SELO~PINT_SEL7. With parameter `index` specified as 2, this function configures register PINT_SEL2.

Parameters

- `base` – Base address of the INPUTMUX peripheral.
- `index` – The serial number of destination register in the group of INPUTMUX registers with same name.
- `connection` – Applies signal from source signals collection to target signal.

Return values

None. –

`void INPUTMUX_Deinit(void *base)`

Deinitialize INPUTMUX peripheral.

This function disables the INPUTMUX clock.

Parameters

- `base` – Base address of the INPUTMUX peripheral.

Return values

None. –

2.38 Common Driver

`FSL_COMMON_DRIVER_VERSION`

common driver version.

`DEBUG_CONSOLE_DEVICE_TYPE_NONE`

No debug console.

`DEBUG_CONSOLE_DEVICE_TYPE_UART`

Debug console based on UART.

`DEBUG_CONSOLE_DEVICE_TYPE_LPUART`

Debug console based on LPUART.

`DEBUG_CONSOLE_DEVICE_TYPE_LPSCI`

Debug console based on LPSCI.

`DEBUG_CONSOLE_DEVICE_TYPE_USBCDC`

Debug console based on USBCDC.

`DEBUG_CONSOLE_DEVICE_TYPE_FLEXCOMM`

Debug console based on FLEXCOMM.

`DEBUG_CONSOLE_DEVICE_TYPE_IUART`

Debug console based on i.MX UART.

`DEBUG_CONSOLE_DEVICE_TYPE_VUSART`

Debug console based on LPC_VUSART.

`DEBUG_CONSOLE_DEVICE_TYPE_MINI_USART`

Debug console based on LPC_USART.

`DEBUG_CONSOLE_DEVICE_TYPE_SWO`

Debug console based on SWO.

DEBUG_CONSOLE_DEVICE_TYPE_QSCI

Debug console based on QSCI.

MIN(a, b)

Computes the minimum of *a* and *b*.

MAX(a, b)

Computes the maximum of *a* and *b*.

UINT16_MAX

Max value of uint16_t type.

UINT32_MAX

Max value of uint32_t type.

SDK_ATOMIC_LOCAL_ADD(addr, val)

Add value *val* from the variable at address *address*.

SDK_ATOMIC_LOCAL_SUB(addr, val)

Subtract value *val* to the variable at address *address*.

SDK_ATOMIC_LOCAL_SET(addr, bits)

Set the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR(addr, bits)

Clear the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_TOGGLE(addr, bits)

Toggle the bits specified by *bits* to the variable at address *address*.

SDK_ATOMIC_LOCAL_CLEAR_AND_SET(addr, clearBits, setBits)

For the variable at address *address*, clear the bits specified by *clearBits* and set the bits specified by *setBits*.

SDK_ATOMIC_LOCAL_COMPARE_AND_SET(addr, expected, newValue)

For the variable at address *address*, check whether the value equal to *expected*. If value same as *expected* then update *newValue* to address and return **true** , else return **false** .

SDK_ATOMIC_LOCAL_TEST_AND_SET(addr, newValue)

For the variable at address *address*, set as *newValue* value and return old value.

USEC_TO_COUNT(us, clockFreqInHz)

Macro to convert a microsecond period to raw count value

COUNT_TO_USEC(count, clockFreqInHz)

Macro to convert a raw count value to microsecond

MSEC_TO_COUNT(ms, clockFreqInHz)

Macro to convert a millisecond period to raw count value

COUNT_TO_MSEC(count, clockFreqInHz)

Macro to convert a raw count value to millisecond

SDK_ISR_EXIT_BARRIER

SDK_SIZEALIGN(var, alignbytes)

Macro to define a variable with L1 d-cache line size alignment

Macro to define a variable with L2 cache line size alignment

Macro to change a value to a given size aligned value

AT_NONCACHEABLE_SECTION(var)

Define a variable *var*, and place it in non-cacheable section.

`AT_NONCACHEABLE_SECTION_ALIGN(var, alignbytes)`

Define a variable *var*, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

`AT_NONCACHEABLE_SECTION_INIT(var)`

Define a variable *var* with initial value, and place it in non-cacheable section.

`AT_NONCACHEABLE_SECTION_ALIGN_INIT(var, alignbytes)`

Define a variable *var* with initial value, and place it in non-cacheable section, the start address of the variable is aligned to *alignbytes*.

`enum _status_groups`

Status group numbers.

Values:

enumerator `kStatusGroup_Generic`

Group number for generic status codes.

enumerator `kStatusGroup_FLASH`

Group number for FLASH status codes.

enumerator `kStatusGroup_LPSPI`

Group number for LPSPI status codes.

enumerator `kStatusGroup_FLEXIO_SPI`

Group number for FLEXIO SPI status codes.

enumerator `kStatusGroup_DSPI`

Group number for DSPI status codes.

enumerator `kStatusGroup_FLEXIO_UART`

Group number for FLEXIO UART status codes.

enumerator `kStatusGroup_FLEXIO_I2C`

Group number for FLEXIO I2C status codes.

enumerator `kStatusGroup_LPI2C`

Group number for LPI2C status codes.

enumerator `kStatusGroup_UART`

Group number for UART status codes.

enumerator `kStatusGroup_I2C`

Group number for I2C status codes.

enumerator `kStatusGroup_LPSCI`

Group number for LPSCI status codes.

enumerator `kStatusGroup_LPUART`

Group number for LPUART status codes.

enumerator `kStatusGroup_SPI`

Group number for SPI status code.

enumerator `kStatusGroup_XRDC`

Group number for XRDC status code.

enumerator `kStatusGroup_SEMA42`

Group number for SEMA42 status code.

enumerator `kStatusGroup_SDHC`

Group number for SDHC status code

enumerator kStatusGroup_SDMMC
Group number for SDMMC status code

enumerator kStatusGroup_SAI
Group number for SAI status code

enumerator kStatusGroup_MCG
Group number for MCG status codes.

enumerator kStatusGroup_SCG
Group number for SCG status codes.

enumerator kStatusGroup_SDSPI
Group number for SDSPI status codes.

enumerator kStatusGroup_FLEXIO_I2S
Group number for FLEXIO I2S status codes

enumerator kStatusGroup_FLEXIO_MCULCD
Group number for FLEXIO LCD status codes

enumerator kStatusGroup_FLASHIAP
Group number for FLASHIAP status codes

enumerator kStatusGroup_FLEXCOMM_I2C
Group number for FLEXCOMM I2C status codes

enumerator kStatusGroup_I2S
Group number for I2S status codes

enumerator kStatusGroup_IUART
Group number for IUART status codes

enumerator kStatusGroup_CSI
Group number for CSI status codes

enumerator kStatusGroup_MIPI_DSI
Group number for MIPI DSI status codes

enumerator kStatusGroup_SDRAMC
Group number for SDRAMC status codes.

enumerator kStatusGroup_POWER
Group number for POWER status codes.

enumerator kStatusGroup_ENET
Group number for ENET status codes.

enumerator kStatusGroup_PHY
Group number for PHY status codes.

enumerator kStatusGroup_TRGMUX
Group number for TRGMUX status codes.

enumerator kStatusGroup_SMARTCARD
Group number for SMARTCARD status codes.

enumerator kStatusGroup_LMEM
Group number for LMEM status codes.

enumerator kStatusGroup_QSPI
Group number for QSPI status codes.

- enumerator `kStatusGroup_DMA`
Group number for DMA status codes.
- enumerator `kStatusGroup_EDMA`
Group number for EDMA status codes.
- enumerator `kStatusGroup_DMAMGR`
Group number for DMAMGR status codes.
- enumerator `kStatusGroup_FLEXCAN`
Group number for FlexCAN status codes.
- enumerator `kStatusGroup_LTC`
Group number for LTC status codes.
- enumerator `kStatusGroup_FLEXIO_CAMERA`
Group number for FLEXIO CAMERA status codes.
- enumerator `kStatusGroup_LPC_SPI`
Group number for LPC_SPI status codes.
- enumerator `kStatusGroup_LPC_USART`
Group number for LPC_USART status codes.
- enumerator `kStatusGroup_DMIC`
Group number for DMIC status codes.
- enumerator `kStatusGroup_SDIF`
Group number for SDIF status codes.
- enumerator `kStatusGroup_SPIFI`
Group number for SPIFI status codes.
- enumerator `kStatusGroup_OTP`
Group number for OTP status codes.
- enumerator `kStatusGroup_MCAN`
Group number for MCAN status codes.
- enumerator `kStatusGroup_CAAM`
Group number for CAAM status codes.
- enumerator `kStatusGroup_ECSPi`
Group number for ECSPi status codes.
- enumerator `kStatusGroup_USDHC`
Group number for USDHC status codes.
- enumerator `kStatusGroup_LPC_I2C`
Group number for LPC_I2C status codes.
- enumerator `kStatusGroup_DCP`
Group number for DCP status codes.
- enumerator `kStatusGroup_MSCAN`
Group number for MSCAN status codes.
- enumerator `kStatusGroup_ESAI`
Group number for ESAI status codes.
- enumerator `kStatusGroup_FLEXSPI`
Group number for FLEXSPI status codes.

- enumerator `kStatusGroup_MMDC`
Group number for MMDC status codes.
- enumerator `kStatusGroup_PDM`
Group number for MIC status codes.
- enumerator `kStatusGroup_SDMA`
Group number for SDMA status codes.
- enumerator `kStatusGroup_ICS`
Group number for ICS status codes.
- enumerator `kStatusGroup_SPDIF`
Group number for SPDIF status codes.
- enumerator `kStatusGroup_LPC_MINISPI`
Group number for LPC_MINISPI status codes.
- enumerator `kStatusGroup_HASHCRYPT`
Group number for Hashcrypt status codes
- enumerator `kStatusGroup_LPC_SPI_SSP`
Group number for LPC_SPI_SSP status codes.
- enumerator `kStatusGroup_I3C`
Group number for I3C status codes
- enumerator `kStatusGroup_LPC_I2C_1`
Group number for LPC_I2C_1 status codes.
- enumerator `kStatusGroup_NOTIFIER`
Group number for NOTIFIER status codes.
- enumerator `kStatusGroup_DebugConsole`
Group number for debug console status codes.
- enumerator `kStatusGroup_SEMC`
Group number for SEMC status codes.
- enumerator `kStatusGroup_ApplicationRangeStart`
Starting number for application groups.
- enumerator `kStatusGroup_IAP`
Group number for IAP status codes
- enumerator `kStatusGroup_SFA`
Group number for SFA status codes
- enumerator `kStatusGroup_SPC`
Group number for SPC status codes.
- enumerator `kStatusGroup_PUF`
Group number for PUF status codes.
- enumerator `kStatusGroup_TOUCH_PANEL`
Group number for touch panel status codes
- enumerator `kStatusGroup_VBAT`
Group number for VBAT status codes
- enumerator `kStatusGroup_XSPI`
Group number for XSPI status codes

enumerator kStatusGroup_PNGDEC
Group number for PNGDEC status codes

enumerator kStatusGroup_JPEGDEC
Group number for JPEGDEC status codes

enumerator kStatusGroup_AUDMIX
Group number for AUDMIX status codes

enumerator kStatusGroup_HAL_GPIO
Group number for HAL GPIO status codes.

enumerator kStatusGroup_HAL_UART
Group number for HAL UART status codes.

enumerator kStatusGroup_HAL_TIMER
Group number for HAL TIMER status codes.

enumerator kStatusGroup_HAL_SPI
Group number for HAL SPI status codes.

enumerator kStatusGroup_HAL_I2C
Group number for HAL I2C status codes.

enumerator kStatusGroup_HAL_FLASH
Group number for HAL FLASH status codes.

enumerator kStatusGroup_HAL_PWM
Group number for HAL PWM status codes.

enumerator kStatusGroup_HAL_RNG
Group number for HAL RNG status codes.

enumerator kStatusGroup_HAL_I2S
Group number for HAL I2S status codes.

enumerator kStatusGroup_HAL_ADC_SENSOR
Group number for HAL ADC SENSOR status codes.

enumerator kStatusGroup_TIMERMANAGER
Group number for TiMER MANAGER status codes.

enumerator kStatusGroup_SERIALMANAGER
Group number for SERIAL MANAGER status codes.

enumerator kStatusGroup_LED
Group number for LED status codes.

enumerator kStatusGroup_BUTTON
Group number for BUTTON status codes.

enumerator kStatusGroup_EXTERN_EEPROM
Group number for EXTERN EEPROM status codes.

enumerator kStatusGroup_SHELL
Group number for SHELL status codes.

enumerator kStatusGroup_MEM_MANAGER
Group number for MEM MANAGER status codes.

enumerator kStatusGroup_LIST
Group number for List status codes.

- enumerator kStatusGroup_OSA
Group number for OSA status codes.
- enumerator kStatusGroup_COMMON_TASK
Group number for Common task status codes.
- enumerator kStatusGroup_MSG
Group number for messaging status codes.
- enumerator kStatusGroup_SDK_OCOTP
Group number for OCOTP status codes.
- enumerator kStatusGroup_SDK_FLEXSPINOR
Group number for FLEXSPINOR status codes.
- enumerator kStatusGroup_CODEC
Group number for codec status codes.
- enumerator kStatusGroup_ASRC
Group number for codec status ASRC.
- enumerator kStatusGroup_OTFAD
Group number for codec status codes.
- enumerator kStatusGroup_SDIOSLV
Group number for SDIOSLV status codes.
- enumerator kStatusGroup_MECC
Group number for MECC status codes.
- enumerator kStatusGroup_ENET_QOS
Group number for ENET_QOS status codes.
- enumerator kStatusGroup_LOG
Group number for LOG status codes.
- enumerator kStatusGroup_I3CBUS
Group number for I3CBUS status codes.
- enumerator kStatusGroup_QSCI
Group number for QSCI status codes.
- enumerator kStatusGroup_ELEMU
Group number for ELEMU status codes.
- enumerator kStatusGroup_QUEUEDSPI
Group number for QSPI status codes.
- enumerator kStatusGroup_POWER_MANAGER
Group number for POWER_MANAGER status codes.
- enumerator kStatusGroup_IPED
Group number for IPED status codes.
- enumerator kStatusGroup_ELS_PKC
Group number for ELS PKC status codes.
- enumerator kStatusGroup_CSS_PKC
Group number for CSS PKC status codes.
- enumerator kStatusGroup_HOSTIF
Group number for HOSTIF status codes.

enumerator kStatusGroup_CLIF
Group number for CLIF status codes.

enumerator kStatusGroup_BMA
Group number for BMA status codes.

enumerator kStatusGroup_NETC
Group number for NETC status codes.

enumerator kStatusGroup_ELE
Group number for ELE status codes.

enumerator kStatusGroup_GLIKEY
Group number for GLIKEY status codes.

enumerator kStatusGroup_AON_POWER
Group number for AON_POWER status codes.

enumerator kStatusGroup_AON_COMMON
Group number for AON_COMMON status codes.

enumerator kStatusGroup_ENDAT3
Group number for ENDAT3 status codes.

enumerator kStatusGroup_HIPERFACE
Group number for HIPERFACE status codes.

enumerator kStatusGroup_NPX
Group number for NPX status codes.

enumerator kStatusGroup_ELA_CSEC
Group number for ELA_CSEC status codes.

enumerator kStatusGroup_FLEXIO_T_FORMAT
Group number for T-format status codes.

enumerator kStatusGroup_FLEXIO_A_FORMAT
Group number for A-format status codes.

Generic status return codes.

Values:

enumerator kStatus_Success
Generic status for Success.

enumerator kStatus_Fail
Generic status for Fail.

enumerator kStatus_ReadOnly
Generic status for read only failure.

enumerator kStatus_OutOfRange
Generic status for out of range access.

enumerator kStatus_InvalidArgument
Generic status for invalid argument check.

enumerator kStatus_Timeout
Generic status for timeout.

enumerator `kStatus_NoTransferInProgress`

Generic status for no transfer in progress.

enumerator `kStatus_Busy`

Generic status for module is busy.

enumerator `kStatus_NoData`

Generic status for no data is found for the operation.

typedef `int32_t status_t`

Type used for all status and error return values.

void `*SDK_Malloc(size_t size, size_t alignbytes)`

Allocate memory with given alignment and aligned size.

This is provided to support the dynamically allocated memory used in cache-able region.

Parameters

- `size` – The length required to malloc.
- `alignbytes` – The alignment size.

Return values

The – allocated memory.

void `SDK_Free(void *ptr)`

Free memory.

Parameters

- `ptr` – The memory to be release.

void `SDK_DelayAtLeastUs(uint32_t delayTime_us, uint32_t coreClock_Hz)`

Delay at least for some time. Please note that, this API uses while loop for delay, different run-time environments make the time not precise, if precise delay count was needed, please implement a new delay function with hardware timer.

Parameters

- `delayTime_us` – Delay time in unit of microsecond.
- `coreClock_Hz` – Core clock frequency with Hz.

static inline `status_t EnableIRQ(IRQn_Type interrupt)`

Enable specific interrupt.

Enable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only enables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro `FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS`.

Parameters

- `interrupt` – The IRQ number.

Return values

- `kStatus_Success` – Interrupt enabled successfully
- `kStatus_Fail` – Failed to enable the interrupt

static inline *status_t* DisableIRQ(IRQn_Type interrupt)

Disable specific interrupt.

Disable LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only disables the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ number.

Return values

- kStatus_Success – Interrupt disabled successfully
- kStatus_Fail – Failed to disable the interrupt

static inline *status_t* EnableIRQWithPriority(IRQn_Type interrupt, uint8_t priNum)

Enable the IRQ, and also set the interrupt priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to Enable.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

static inline *status_t* IRQ_SetPriority(IRQn_Type interrupt, uint8_t priNum)

Set the IRQ priority.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The IRQ to set.
- priNum – Priority number set to interrupt controller register.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

```
static inline status_t IRQ_ClearPendingIRQ(IRQn_Type interrupt)
```

Clear the pending IRQ flag.

Only handle LEVEL1 interrupt. For some devices, there might be multiple interrupt levels. For example, there are NVIC and intmux. Here the interrupts connected to NVIC are the LEVEL1 interrupts, because they are routed to the core directly. The interrupts connected to intmux are the LEVEL2 interrupts, they are routed to NVIC first then routed to core.

This function only handles the LEVEL1 interrupts. The number of LEVEL1 interrupts is indicated by the feature macro FSL_FEATURE_NUMBER_OF_LEVEL1_INT_VECTORS.

Parameters

- interrupt – The flag which IRQ to clear.

Return values

- kStatus_Success – Interrupt priority set successfully
- kStatus_Fail – Failed to set the interrupt priority.

```
static inline uint32_t DisableGlobalIRQ(void)
```

Disable the global IRQ.

Disable the global interrupt and return the current primask register. User is required to provided the primask register for the EnableGlobalIRQ().

Returns

Current primask value.

```
static inline void EnableGlobalIRQ(uint32_t primask)
```

Enable the global IRQ.

Set the primask register with the provided primask value but not just enable the primask. The idea is for the convenience of integration of RTOS. some RTOS get its own management mechanism of primask. User is required to use the EnableGlobalIRQ() and DisableGlobalIRQ() in pair.

Parameters

- primask – value of primask register to be restored. The primask value is supposed to be provided by the DisableGlobalIRQ().

```
static inline bool _SDK_AtomicLocalCompareAndSet(uint32_t *addr, uint32_t expected, uint32_t
newValue)
```

```
static inline uint32_t _SDK_AtomicTestAndSet(uint32_t *addr, uint32_t newValue)
```

```
FSL_DRIVER_TRANSFER_DOUBLE_WEAK_IRQ
```

Macro to use the default weak IRQ handler in drivers.

```
MAKE_STATUS(group, code)
```

Construct a status code value from a group and code number.

```
MAKE_VERSION(major, minor, bugfix)
```

Construct the version number for drivers.

The driver version is a 32-bit number, for both 32-bit platforms(such as Cortex M) and 16-bit platforms(such as DSC).

Unused	Major Version	Minor Version	Bug Fix
31	25 24	17 16	9 8 0

```
ARRAY_SIZE(x)
```

Computes the number of elements in an array.

UINT64_H(X)

Macro to get upper 32 bits of a 64-bit value

UINT64_L(X)

Macro to get lower 32 bits of a 64-bit value

SUPPRESS_FALL_THROUGH_WARNING()

For switch case code block, if case section ends without “break;” statement, there will be fallthrough warning with compiler flag -Wextra or -Wimplicit-fallthrough=n when using armgcc. To suppress this warning, “SUPPRESS_FALL_THROUGH_WARNING();” need to be added at the end of each case section which misses “break;”statement.

MSDK_REG_SECURE_ADDR(x)

Convert the register address to the one used in secure mode.

MSDK_REG_NONSECURE_ADDR(x)

Convert the register address to the one used in non-secure mode.

MSDK_INVALID_IRQ_HANDLER

Invalid IRQ handler address.

2.39 Lin_lpuart_driver

FSL_LIN_LPUART_DRIVER_VERSION

LIN LPUART driver version.

enum _lin_lpuart_stop_bit_count

Values:

enumerator kLPUART_OneStopBit

One stop bit

enumerator kLPUART_TwoStopBit

Two stop bits

enum _lin_lpuart_flags

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start bit

enumerator kLPUART_DataMatch1Flag

The next character to be read from LPUART_DATA matches MA1

enumerator kLPUART_DataMatch2Flag

The next character to be read from LPUART_DATA matches MA2

enumerator kLPUART_NoiseErrorInRxDataRegFlag

NOISY bit, sets if noise detected in current data word

enumerator kLPUART_ParityErrorInRxDataRegFlag

PARITY bit, sets if noise detected in current data word

enumerator kLPUART_TxFifoEmptyFlag

TXEMPT bit, sets if transmit buffer is empty

enumerator kLPUART_RxFifoEmptyFlag

RXEMPT bit, sets if receive buffer is empty

enumerator kLPUART_TxFifoOverflowFlag

TXOF bit, sets if transmit buffer overflow occurred

enumerator kLPUART_RxFifoUnderflowFlag

RXUF bit, sets if receive buffer underflow occurred

enum _lin_lpuart_interrupt_enable

Values:

enumerator kLPUART_LinBreakInterruptEnable

LIN break detect.

enumerator kLPUART_RxActiveEdgeInterruptEnable

Receive Active Edge.

enumerator kLPUART_TxDataRegEmptyInterruptEnable

Transmit data register empty.

enumerator kLPUART_TransmissionCompleteInterruptEnable

Transmission complete.

enumerator kLPUART_RxDataRegFullInterruptEnable

Receiver data register full.

enumerator kLPUART_IdleLineInterruptEnable

Idle line.

enumerator kLPUART_RxOverrunInterruptEnable

Receiver Overrun.

enumerator kLPUART_NoiseErrorInterruptEnable

Noise error flag.

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag.

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag.

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow.

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow.

enum `_lin_lpuart_status`

Values:

enumerator kStatus_LPUART_TxBusy

TX busy

enumerator kStatus_LPUART_RxBusy

RX busy

enumerator kStatus_LPUART_TxIdle

LPUART transmitter is idle.

enumerator kStatus_LPUART_RxIdle

LPUART receiver is idle.

enumerator kStatus_LPUART_TxWatermarkTooLarge

TX FIFO watermark too large

enumerator kStatus_LPUART_RxWatermarkTooLarge

RX FIFO watermark too large

enumerator kStatus_LPUART_FlagCannotClearManually

Some flag can't manually clear

enumerator kStatus_LPUART_Error

Error happens on LPUART.

enumerator kStatus_LPUART_RxRingBufferOverrun

LPUART RX software ring buffer overrun.

enumerator kStatus_LPUART_RxHardwareOverrun

LPUART RX receiver overrun.

enumerator kStatus_LPUART_NoiseError

LPUART noise error.

enumerator kStatus_LPUART_FramingError

LPUART framing error.

enumerator kStatus_LPUART_ParityError

LPUART parity error.

enum `lin_lpuart_bit_count_per_char_t`

Values:

enumerator LPUART_8_BITS_PER_CHAR

8-bit data characters

enumerator LPUART_9_BITS_PER_CHAR

9-bit data characters

enumerator LPUART_10_BITS_PER_CHAR

10-bit data characters

```
typedef enum lin_lpuart_stop_bit_count lin_lpuart_stop_bit_count_t
```

```
static inline bool LIN_LPUART_GetRxDataPolarity(const LPUART_Type *base)
```

```
static inline void LIN_LPUART_SetRxDataPolarity(LPUART_Type *base, bool polarity)
```

```
static inline void LIN_LPUART_WriteByte(LPUART_Type *base, uint8_t data)
```

```
static inline void LIN_LPUART_ReadByte(const LPUART_Type *base, uint8_t *readData)
```

```
status_t LIN_LPUART_CalculateBaudRate(LPUART_Type *base, uint32_t baudRate_Bps,  
                                     uint32_t srcClock_Hz, uint32_t *osr, uint16_t *sbr)
```

Calculates the best osr and sbr value for configured baudrate.

Parameters

- base – LPUART peripheral base address
- baudRate_Bps – user configuration structure of type #*lin_user_config_t*
- srcClock_Hz – pointer to the LIN_LPUART driver state structure
- osr – pointer to osr value
- sbr – pointer to sbr value

Returns

An error code or *lin_status_t*

```
void LIN_LPUART_SetBaudRate(LPUART_Type *base, uint32_t *osr, uint16_t *sbr)
```

Configure baudrate according to osr and sbr value.

Parameters

- base – LPUART peripheral base address
- osr – pointer to osr value
- sbr – pointer to sbr value

```
lin_status_t LIN_LPUART_Init(LPUART_Type *base, lin_user_config_t *linUserConfig,  
                             lin_state_t *linCurrentState, uint32_t linSourceClockFreq)
```

Initializes an LIN_LPUART instance for LIN Network.

The caller provides memory for the driver state structures during initialization. The user must select the LIN_LPUART clock source in the application to initialize the LIN_LPUART. This function initializes a LPUART instance for operation. This function will initialize the run-time state structure to keep track of the on-going transfers, initialize the module to user defined settings and default settings, set break field length to be 13 bit times minimum, enable the break detect interrupt, Rx complete interrupt, frame error detect interrupt, and enable the LPUART module transmitter and receiver

Parameters

- base – LPUART peripheral base address
- linUserConfig – user configuration structure of type #*lin_user_config_t*
- linCurrentState – pointer to the LIN_LPUART driver state structure

Returns

An error code or *lin_status_t*

`lin_status_t LIN_LPUART_Deinit(LPUART_Type *base)`

Shuts down the LIN_LPUART by disabling interrupts and transmitter/receiver.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendFrameDataBlocking(LPUART_Type *base, const uint8_t *txBuff, uint8_t txSize, uint32_t timeoutMSec)`

Sends Frame data out through the LIN_LPUART module using blocking method. This function will calculate the checksum byte and send it with the frame data. Blocking means that the function does not return until the transmission is complete.

Parameters

- `base` – LPUART peripheral base address
- `txBuff` – source buffer containing 8-bit data chars to send
- `txSize` – the number of bytes to send
- `timeoutMSec` – timeout value in milli seconds

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendFrameData(LPUART_Type *base, const uint8_t *txBuff, uint8_t txSize)`

Sends frame data out through the LIN_LPUART module using non-blocking method. This enables an a-sync method for transmitting data. Non-blocking means that the function returns immediately. The application has to get the transmit status to know when the transmit is complete. This function will calculate the checksum byte and send it with the frame data.

Parameters

- `base` – LPUART peripheral base address
- `txBuff` – source buffer containing 8-bit data chars to send
- `txSize` – the number of bytes to send

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetTransmitStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking transmission While sending frame data using non-blocking method, users can use this function to get status of that transmission. This function return `LIN_TX_BUSY` while sending, or `LIN_TIMEOUT` if timeout has occurred, or return `LIN_SUCCESS` when the transmission is complete. The `bytesRemaining` shows number of bytes that still needed to transmit.

Parameters

- `base` – LPUART peripheral base address
- `bytesRemaining` – Number of bytes still needed to transmit

Returns

`lin_status_t` `LIN_TX_BUSY`, `LIN_SUCCESS` or `LIN_TIMEOUT`

`lin_status_t LIN_LPUART_RecvFrmDataBlocking(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize, uint32_t timeoutMSec)`

Receives frame data through the LIN_LPUART module using blocking method. This function will check the checksum byte. If the checksum is correct, it will receive the frame data. Blocking means that the function does not return until the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive
- timeoutMSec – timeout value in milli seconds

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_RecvFrmData(LPUART_Type *base, uint8_t *rxBuff, uint8_t rxSize)`

Receives frame data through the LIN_LPUART module using non-blocking method. This function will check the checksum byte. If the checksum is correct, it will receive it with the frame data. Non-blocking means that the function returns immediately. The application has to get the receive status to know when the reception is complete.

Parameters

- base – LPUART peripheral base address
- rxBuff – buffer containing 8-bit received data
- rxSize – the number of bytes to receive

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AbortTransferData(LPUART_Type *base)`

Aborts an on-going non-blocking transmission/reception. While performing a non-blocking transferring data, users can call this function to terminate immediately the transferring.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GetReceiveStatus(LPUART_Type *base, uint8_t *bytesRemaining)`

Get status of an on-going non-blocking reception. While receiving frame data using non-blocking method, users can use this function to get status of that receiving. This function return the current event ID, `LIN_RX_BUSY` while receiving and return `LIN_SUCCESS`, or timeout (`LIN_TIMEOUT`) when the reception is complete. The `bytesRemaining` shows number of bytes that still needed to receive.

Parameters

- base – LPUART peripheral base address
- bytesRemaining – Number of bytes still needed to receive

Returns

`lin_status_t LIN_RX_BUSY`, `LIN_TIMEOUT` or `LIN_SUCCESS`

`lin_status_t LIN_LPUART_GoToSleepMode(LPUART_Type *base)`

This function puts current node to sleep mode. This function changes current node state to `LIN_NODE_STATE_SLEEP_MODE`.

Parameters

- base – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_GotoIdleState(LPUART_Type *base)`

Puts current LIN node to Idle state This function changes current node state to `LIN_NODE_STATE_IDLE`.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_SendWakeupSignal(LPUART_Type *base)`

Sends a wakeup signal through the LIN_LPUART interface.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_MasterSendHeader(LPUART_Type *base, uint8_t id)`

Sends frame header out through the LIN_LPUART module using a non-blocking method. This function sends LIN Break field, sync field then the ID with correct parity.

Parameters

- `base` – LPUART peripheral base address
- `id` – Frame Identifier

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_EnableIRQ(LPUART_Type *base)`

Enables LIN_LPUART hardware interrupts.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_DisableIRQ(LPUART_Type *base)`

Disables LIN_LPUART hardware interrupts.

Parameters

- `base` – LPUART peripheral base address

Returns

An error code or `lin_status_t`

`lin_status_t LIN_LPUART_AutoBaudCapture(uint32_t instance)`

This function capture bits time to detect break char, calculate baudrate from sync bits and enable transceiver if autobaud successful. This function should only be used in Slave. The timer should be in mode input capture of both rising and falling edges. The timer input capture pin should be externally connected to RXD pin.

Parameters

- `instance` – LPUART instance

Returns

`lin_status_t`

void LIN_LPUART_IRQHandler(LPUART_Type *base)
LIN_LPUART RX TX interrupt handler.

Parameters

- base – LPUART peripheral base address

Returns

void

LIN_LPUART_TRANSMISSION_COMPLETE_TIMEOUT

Max loops to wait for LPUART transmission complete.

When de-initializing the LIN LPUART module, the program shall wait for the previous transmission to complete. This parameter defines how many loops to check completion before return error. If defined as 0, driver will wait forever until completion.

AUTOBAUD_BAUDRATE_TOLERANCE

BIT_RATE_TOLERANCE_UNSYNC

BIT_DURATION_MAX_19200

BIT_DURATION_MIN_19200

BIT_DURATION_MAX_14400

BIT_DURATION_MIN_14400

BIT_DURATION_MAX_9600

BIT_DURATION_MIN_9600

BIT_DURATION_MAX_4800

BIT_DURATION_MIN_4800

BIT_DURATION_MAX_2400

BIT_DURATION_MIN_2400

TWO_BIT_DURATION_MAX_19200

TWO_BIT_DURATION_MIN_19200

TWO_BIT_DURATION_MAX_14400

TWO_BIT_DURATION_MIN_14400

TWO_BIT_DURATION_MAX_9600

TWO_BIT_DURATION_MIN_9600

TWO_BIT_DURATION_MAX_4800

TWO_BIT_DURATION_MIN_4800

TWO_BIT_DURATION_MAX_2400

TWO_BIT_DURATION_MIN_2400

AUTOBAUD_BREAK_TIME_MIN

2.40 LPADC: 12-bit SAR Analog-to-Digital Converter Driver

enum `_lpadc_status_flags`

Define hardware flags of the module.

Values:

enumerator `kLPADC_ResultFIFO0OverflowFlag`

Indicates that more data has been written to the Result FIFO 0 than it can hold.

enumerator `kLPADC_ResultFIFO0ReadyFlag`

Indicates when the number of valid datawords in the result FIFO 0 is greater than the setting watermark level.

enumerator `kLPADC_TriggerExceptionFlag`

Indicates that a trigger exception event has occurred.

enumerator `kLPADC_TriggerCompletionFlag`

Indicates that a trigger completion event has occurred.

enumerator `kLPADC_CalibrationReadyFlag`

Indicates that the calibration process is done.

enumerator `kLPADC_ActiveFlag`

Indicates that the ADC is in active state.

enumerator `kLPADC_ResultFIFOOverflowFlag`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0OverflowFlag` as instead.

enumerator `kLPADC_ResultFIFOReadyFlag`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0ReadyFlag` as instead.

enum `_lpadc_interrupt_enable`

Define interrupt switchers of the module.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator `kLPADC_ResultFIFO0OverflowInterruptEnable`

Configures ADC to generate overflow interrupt requests when FOF0 flag is asserted.

enumerator `kLPADC_FIFO0WatermarkInterruptEnable`

Configures ADC to generate watermark interrupt requests when RDY0 flag is asserted.

enumerator `kLPADC_ResultFIFOOverflowInterruptEnable`

To compilitable with old version, do not recommend using this, please use `kLPADC_ResultFIFO0OverflowInterruptEnable` as instead.

enumerator `kLPADC_FIFOWatermarkInterruptEnable`

To compilitable with old version, do not recommend using this, please use `kLPADC_FIFO0WatermarkInterruptEnable` as instead.

enumerator `kLPADC_TriggerExceptionInterruptEnable`

Configures ADC to generate trigger exception interrupt.

enumerator `kLPADC_Trigger0CompletionInterruptEnable`

Configures ADC to generate interrupt when trigger 0 completion.

enumerator `kLPADC_Trigger1CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 1 completion.

enumerator `kLPADC_Trigger2CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 2 completion.

enumerator `kLPADC_Trigger3CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 3 completion.

enumerator `kLPADC_Trigger4CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 4 completion.

enumerator `kLPADC_Trigger5CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 5 completion.

enumerator `kLPADC_Trigger6CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 6 completion.

enumerator `kLPADC_Trigger7CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 7 completion.

enumerator `kLPADC_Trigger8CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 8 completion.

enumerator `kLPADC_Trigger9CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 9 completion.

enumerator `kLPADC_Trigger10CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 10 completion.

enumerator `kLPADC_Trigger11CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 11 completion.

enumerator `kLPADC_Trigger12CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 12 completion.

enumerator `kLPADC_Trigger13CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 13 completion.

enumerator `kLPADC_Trigger14CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 14 completion.

enumerator `kLPADC_Trigger15CompletionInterruptEnable`
Configures ADC to generate interrupt when trigger 15 completion.

enum `_lpadc_trigger_status_flags`

The enumerator of `lpadc` trigger status flags, including interrupted flags and completed flags.

Note: LPADC of different chips supports different number of trigger sources, please check the Reference Manual for details.

Values:

enumerator `kLPADC_Trigger0InterruptedFlag`
Trigger 0 is interrupted by a high priority exception.

enumerator `kLPADC_Trigger1InterruptedFlag`
Trigger 1 is interrupted by a high priority exception.

enumerator `kLPADC_Trigger2InterruptedFlag`
Trigger 2 is interrupted by a high priority exception.

enumerator kLPADC_Trigger3InterruptedFlag
Trigger 3 is interrupted by a high priority exception.

enumerator kLPADC_Trigger4InterruptedFlag
Trigger 4 is interrupted by a high priority exception.

enumerator kLPADC_Trigger5InterruptedFlag
Trigger 5 is interrupted by a high priority exception.

enumerator kLPADC_Trigger6InterruptedFlag
Trigger 6 is interrupted by a high priority exception.

enumerator kLPADC_Trigger7InterruptedFlag
Trigger 7 is interrupted by a high priority exception.

enumerator kLPADC_Trigger8InterruptedFlag
Trigger 8 is interrupted by a high priority exception.

enumerator kLPADC_Trigger9InterruptedFlag
Trigger 9 is interrupted by a high priority exception.

enumerator kLPADC_Trigger10InterruptedFlag
Trigger 10 is interrupted by a high priority exception.

enumerator kLPADC_Trigger11InterruptedFlag
Trigger 11 is interrupted by a high priority exception.

enumerator kLPADC_Trigger12InterruptedFlag
Trigger 12 is interrupted by a high priority exception.

enumerator kLPADC_Trigger13InterruptedFlag
Trigger 13 is interrupted by a high priority exception.

enumerator kLPADC_Trigger14InterruptedFlag
Trigger 14 is interrupted by a high priority exception.

enumerator kLPADC_Trigger15InterruptedFlag
Trigger 15 is interrupted by a high priority exception.

enumerator kLPADC_Trigger0CompletedFlag
Trigger 0 is completed and trigger 0 has enabled completion interrupts.

enumerator kLPADC_Trigger1CompletedFlag
Trigger 1 is completed and trigger 1 has enabled completion interrupts.

enumerator kLPADC_Trigger2CompletedFlag
Trigger 2 is completed and trigger 2 has enabled completion interrupts.

enumerator kLPADC_Trigger3CompletedFlag
Trigger 3 is completed and trigger 3 has enabled completion interrupts.

enumerator kLPADC_Trigger4CompletedFlag
Trigger 4 is completed and trigger 4 has enabled completion interrupts.

enumerator kLPADC_Trigger5CompletedFlag
Trigger 5 is completed and trigger 5 has enabled completion interrupts.

enumerator kLPADC_Trigger6CompletedFlag
Trigger 6 is completed and trigger 6 has enabled completion interrupts.

enumerator kLPADC_Trigger7CompletedFlag
Trigger 7 is completed and trigger 7 has enabled completion interrupts.

enumerator kLPADC_Trigger8CompletedFlag

Trigger 8 is completed and trigger 8 has enabled completion interrupts.

enumerator kLPADC_Trigger9CompletedFlag

Trigger 9 is completed and trigger 9 has enabled completion interrupts.

enumerator kLPADC_Trigger10CompletedFlag

Trigger 10 is completed and trigger 10 has enabled completion interrupts.

enumerator kLPADC_Trigger11CompletedFlag

Trigger 11 is completed and trigger 11 has enabled completion interrupts.

enumerator kLPADC_Trigger12CompletedFlag

Trigger 12 is completed and trigger 12 has enabled completion interrupts.

enumerator kLPADC_Trigger13CompletedFlag

Trigger 13 is completed and trigger 13 has enabled completion interrupts.

enumerator kLPADC_Trigger14CompletedFlag

Trigger 14 is completed and trigger 14 has enabled completion interrupts.

enumerator kLPADC_Trigger15CompletedFlag

Trigger 15 is completed and trigger 15 has enabled completion interrupts.

enum _lpadc_sample_scale_mode

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

Values:

enumerator kLPADC_SamplePartScale

Use divided input voltage signal. (For scale select, please refer to the reference manual).

enumerator kLPADC_SampleFullScale

Full scale (Factor of 1).

enum _lpadc_sample_channel_mode

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

Values:

enumerator kLPADC_SampleChannelSingleEndSideA

Single-end mode, only A-side channel is converted.

enumerator kLPADC_SampleChannelSingleEndSideB

Single-end mode, only B-side channel is converted.

enumerator kLPADC_SampleChannelDiffBothSideAB

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDiffBothSideBA

Differential mode, the ADC result is (CHnB-CHnA).

enumerator kLPADC_SampleChannelDiffBothSide

Differential mode, the ADC result is (CHnA-CHnB).

enumerator kLPADC_SampleChannelDualSingleEndBothSide

Dual-Single-Ended Mode. Both A side and B side channels are converted independently.

enum _lpadc_hardware_average_mode

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

Values:

enumerator kLPADC_HardwareAverageCount1

Single conversion.

enumerator kLPADC_HardwareAverageCount2

2 conversions averaged.

enumerator kLPADC_HardwareAverageCount4

4 conversions averaged.

enumerator kLPADC_HardwareAverageCount8

8 conversions averaged.

enumerator kLPADC_HardwareAverageCount16

16 conversions averaged.

enumerator kLPADC_HardwareAverageCount32

32 conversions averaged.

enumerator kLPADC_HardwareAverageCount64

64 conversions averaged.

enumerator kLPADC_HardwareAverageCount128

128 conversions averaged.

enum _lpadc_sample_time_mode

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Values:

enumerator kLPADC_SampleTimeADCK3

3 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK5

5 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK7

7 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK11

11 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK19
19 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK35
35 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK67
69 ADCK cycles total sample time.

enumerator kLPADC_SampleTimeADCK131
131 ADCK cycles total sample time.

enum _lpadc_hardware_compare_mode

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

Values:

enumerator kLPADC_HardwareCompareDisabled
Compare disabled.

enumerator kLPADC_HardwareCompareStoreOnTrue
Compare enabled. Store on true.

enumerator kLPADC_HardwareCompareRepeatUntilTrue
Compare enabled. Repeat channel acquisition until true.

enum _lpadc_conversion_resolution_mode

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to lpadc_sample_channel_mode_t

Values:

enumerator kLPADC_ConversionResolutionStandard
Standard resolution. Single-ended 12-bit conversion, Differential 13-bit conversion with 2's complement output.

enumerator kLPADC_ConversionResolutionHigh
High resolution. Single-ended 16-bit conversion; Differential 16-bit conversion with 2's complement output.

enum _lpadc_conversion_average_mode

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

Values:

enumerator kLPADC_ConversionAverage1
Single conversion.

enumerator kLPADC_ConversionAverage2
2 conversions averaged.

enumerator kLPADC_ConversionAverage4
4 conversions averaged.

enumerator kLPADC_ConversionAverage8
8 conversions averaged.

enumerator kLPADC_ConversionAverage16
16 conversions averaged.

enumerator kLPADC_ConversionAverage32
32 conversions averaged.

enumerator kLPADC_ConversionAverage64
64 conversions averaged.

enumerator kLPADC_ConversionAverage128
128 conversions averaged.

enum _lpadc_reference_voltage_mode

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

Values:

enumerator kLPADC_ReferenceVoltageAlt1
Option 1 setting.

enumerator kLPADC_ReferenceVoltageAlt2
Option 2 setting.

enumerator kLPADC_ReferenceVoltageAlt3
Option 3 setting.

enum _lpadc_power_level_mode

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

Values:

enumerator kLPADC_PowerLevelAlt1
Lowest power setting.

enumerator kLPADC_PowerLevelAlt2
Next lowest power setting.

enumerator kLPADC_PowerLevelAlt3
...

enumerator kLPADC_PowerLevelAlt4
Highest power setting.

enum _lpadc_offset_calibration_mode

Define enumeration of offset calibration mode.

Values:

enumerator kLPADC_OffsetCalibration12bitMode
12 bit offset calibration mode.

enumerator kLPADC_OffsetCalibration16bitMode
16 bit offset calibration mode.

enum `_lpadc_trigger_priority_policy`

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: `kLPADC_TriggerPriorityPreemptSubsequently` is not available on some devices, mainly depends on the size of `TPRCTRL` field in `CFG` register.

Values:

enumerator `kLPADC_ConvPreemptImmediatelyNotAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion is not automatically resumed or restarted.

enumerator `kLPADC_ConvPreemptSoftlyNotAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion is not resumed or restarted.

enumerator `kLPADC_ConvPreemptImmediatelyAutoRestarted`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kLPADC_ConvPreemptSoftlyAutoRestarted`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will automatically be restarted.

enumerator `kLPADC_ConvPreemptImmediatelyAutoResumed`

If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started, when higher priority conversion finishes, the preempted conversion will automatically be resumed.

enumerator `kLPADC_ConvPreemptSoftlyAutoResumed`

If a higher priority trigger is received during command processing, the current conversion is completed (including averaging iterations and compare function if enabled) and stored to the result FIFO before the higher priority trigger/command is initiated, when higher priority conversion finishes, the preempted conversion will be automatically be resumed.

enumerator `kLPADC_TriggerPriorityPreemptImmediately`

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator `kLPADC_TriggerPriorityPreemptSoftly`

Legacy support is not recommended as it only ensures compatibility with older versions.

enumerator `kLPADC_TriggerPriorityExceptionDisabled`

High priority trigger exception disabled.

enum `_lpadc_tune_value`

Define enumeration of tune value.

Values:

enumerator `kLPADC_TuneValue0`

Tune value 0.

enumerator `kLPADC_TuneValue1`

Tune value 1.

enumerator `kLPADC_TuneValue2`

Tune value 2.

enumerator `kLPADC_TuneValue3`

Tune value 3.

typedef enum `_lpadc_sample_scale_mode` `lpadc_sample_scale_mode_t`

Define enumeration of sample scale mode.

The sample scale mode is used to reduce the selected ADC analog channel input voltage level by a factor. The maximum possible voltage on the ADC channel input should be considered when selecting a scale mode to ensure that the reducing factor always results voltage level at or below the VREFH reference. This reducing capability allows conversion of analog inputs higher than VREFH. A-side and B-side channel inputs are both scaled using the scale mode.

typedef enum `_lpadc_sample_channel_mode` `lpadc_sample_channel_mode_t`

Define enumeration of channel sample mode.

The channel sample mode configures the channel with single-end/differential/dual-single-end, side A/B.

typedef enum `_lpadc_hardware_average_mode` `lpadc_hardware_average_mode_t`

Define enumeration of hardware average selection.

It Selects how many ADC conversions are averaged to create the ADC result. An internal storage buffer is used to capture temporary results while the averaging iterations are executed.

Note: Some enumerator values are not available on some devices, mainly depends on the size of AVGS field in CMDH register.

typedef enum `_lpadc_sample_time_mode` `lpadc_sample_time_mode_t`

Define enumeration of sample time selection.

The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

typedef enum `_lpadc_hardware_compare_mode` `lpadc_hardware_compare_mode_t`

Define enumeration of hardware compare mode.

After an ADC channel input is sampled and converted and any averaging iterations are performed, this mode setting guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare values.

typedef enum *lpadc_conversion_resolution_mode* lpadc_conversion_resolution_mode_t

Define enumeration of conversion resolution mode.

Configure the resolution bit in specific conversion type. For detailed resolution accuracy, see to *lpadc_sample_channel_mode_t*

typedef enum *lpadc_conversion_average_mode* lpadc_conversion_average_mode_t

Define enumeration of conversion averages mode.

Configure the conversion average number for auto-calibration.

Note: Some enumerator values are not available on some devices, mainly depends on the size of CAL_AVGS field in CTRL register.

typedef enum *lpadc_reference_voltage_mode* lpadc_reference_voltage_source_t

Define enumeration of reference voltage source.

For detail information, need to check the SoC's specification.

typedef enum *lpadc_power_level_mode* lpadc_power_level_mode_t

Define enumeration of power configuration.

Configures the ADC for power and performance. In the highest power setting the highest conversion rates will be possible. Refer to the device data sheet for power and performance capabilities for each setting.

typedef enum *lpadc_offset_calibration_mode* lpadc_offset_calibration_mode_t

Define enumeration of offset calibration mode.

typedef enum *lpadc_trigger_priority_policy* lpadc_trigger_priority_policy_t

Define enumeration of trigger priority policy.

This selection controls how higher priority triggers are handled.

Note: **kLPADC_TriggerPriorityPreemptSubsequently** is not available on some devices, mainly depends on the size of TPRICTRL field in CFG register.

typedef enum *lpadc_tune_value* lpadc_tune_value_t

Define enumeration of tune value.

typedef struct *lpadc_calibration_value* lpadc_calibration_value_t

A structure of calibration value.

LPADC_CONVERSION_COMPLETE_TIMEOUT

Max loops to wait for LPADC conversion complete.

When doing calibration, driver will wait for the completion of conversion. This parameter defines how many loops to check completion before return timeout. If defined as 0, driver will wait forever until completion.

LPADC_CALIBRATION_READY_TIMEOUT

Max loops to wait for LPADC calibration ready.

Before doing calibration, driver will wait for the calibration ready. This parameter defines how many loops to check the calibration ready. If defined as 0, driver will wait forever until ready.

LPADC_GAIN_CAL_READY_TIMEOUT

Max loops to wait for LPADC gain calibration GAIN_CAL ready.

Before doing calibration, driver will wait for the gain calibration GAIN_CAL ready. This parameter defines how many loops to check the gain calibration GAIN_CAL ready. If defined as 0, driver will wait forever until ready.

ADC_OFSTRIM_OFSTRIM_MAX

ADC_OFSTRIM_OFSTRIM_SIGN

LPADC_GET_ACTIVE_COMMAND_STATUS(statusVal)

Define the MACRO function to get command status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

LPADC_GET_ACTIVE_TRIGGER_STATUE(statusVal)

Define the MACRO function to get trigger status from status value.

The statusVal is the return value from LPADC_GetStatusFlags().

void LPADC_Init(ADC_Type *base, const *lpadc_config_t* *config)

Initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.
- config – Pointer to configuration structure. See “*lpadc_config_t*”.

void LPADC_GetDefaultConfig(*lpadc_config_t* *config)

Gets an available pre-defined settings for initial configuration.

This function initializes the converter configuration structure with an available settings. The default values are:

```
config->enableInDozeMode      = true;
config->enableAnalogPreliminary = false;
config->powerUpDelay          = 0x80;
config->referenceVoltageSource = kLPADC_ReferenceVoltageAlt1;
config->powerLevelMode        = kLPADC_PowerLevelAlt1;
config->triggerPriorityPolicy  = kLPADC_TriggerPriorityPreemptImmediately;
config->enableConvPause       = false;
config->convPauseDelay         = 0U;
config->FIFOWatermark          = 0U;
```

Parameters

- config – Pointer to configuration structure.

void LPADC_Deinit(ADC_Type *base)

De-initializes the LPADC module.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_Enable(ADC_Type *base, bool enable)

Switch on/off the LPADC module.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the module.

static inline void LPADC_DoResetFIFO(ADC_Type *base)

Do reset the conversion FIFO.

Parameters

- base – LPADC peripheral base address.

static inline void LPADC_DoResetConfig(ADC_Type *base)

Do reset the module's configuration.

Reset all ADC internal logic and registers, except the Control Register (ADCx_CTRL).

Parameters

- base – LPADC peripheral base address.

static inline uint32_t LPADC_GetStatusFlags(ADC_Type *base)

Get status flags.

Parameters

- base – LPADC peripheral base address.

Returns

status flags' mask. See to `_lpadc_status_flags`.

static inline void LPADC_ClearStatusFlags(ADC_Type *base, uint32_t mask)

Clear status flags.

Only the flags can be cleared by writing ADCx_STATUS register would be cleared by this API.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for flags to be cleared. See to `_lpadc_status_flags`.

static inline uint32_t LPADC_GetTriggerStatusFlags(ADC_Type *base)

Get trigger status flags to indicate which trigger sequences have been completed or interrupted by a high priority trigger exception.

Parameters

- base – LPADC peripheral base address.

Returns

The OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_ClearTriggerStatusFlags(ADC_Type *base, uint32_t mask)

Clear trigger status flags.

Parameters

- base – LPADC peripheral base address.
- mask – The mask of trigger status flags to be cleared, should be the OR'ed value of `_lpadc_trigger_status_flags`.

static inline void LPADC_EnableInterrupts(ADC_Type *base, uint32_t mask)

Enable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_DisableInterrupts(ADC_Type *base, uint32_t mask)

Disable interrupts.

Parameters

- base – LPADC peripheral base address.
- mask – Mask value for interrupt events. See to `_lpadc_interrupt_enable`.

static inline void LPADC_EnableFIFOWatermarkDMA(ADC_Type *base, bool enable)
Switch on/off the DMA trigger for FIFO watermark event.

Parameters

- base – LPADC peripheral base address.
- enable – Switcher to the event.

static inline uint32_t LPADC_GetConvResultCount(ADC_Type *base)
Get the count of result kept in conversion FIFO.

Parameters

- base – LPADC peripheral base address.

Returns

The count of result kept in conversion FIFO.

bool LPADC_GetConvResult(ADC_Type *base, lpadc_conv_result_t *result)
Get the result in conversion FIFO.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

Returns

Status whether FIFO entry is valid.

void LPADC_GetConvResultBlocking(ADC_Type *base, lpadc_conv_result_t *result)
Get the result in conversion FIFO using blocking method.

Parameters

- base – LPADC peripheral base address.
- result – Pointer to structure variable that keeps the conversion result in conversion FIFO.

void LPADC_SetConvTriggerConfig(ADC_Type *base, uint32_t triggerId, const
lpadc_conv_trigger_config_t *config)

Configure the conversion trigger source.

Each programmable trigger can launch the conversion command in command buffer.

Parameters

- base – LPADC peripheral base address.
- triggerId – ID for each trigger. Typically, the available value range is from 0.
- config – Pointer to configuration structure. See to lpadc_conv_trigger_config_t.

void LPADC_GetDefaultConvTriggerConfig(lpadc_conv_trigger_config_t *config)
Gets an available pre-defined settings for trigger's configuration.

This function initializes the trigger's configuration structure with an available settings. The default values are:

```
config->targetCommandId    = 0U;
config->delayPower         = 0U;
config->priority            = 0U;
config->channelAFIFOSelect = 0U;
```

(continues on next page)

(continued from previous page)

```
config->channelBFIFOSelect    = 0U;
config->enableHardwareTrigger = false;
```

Parameters

- config – Pointer to configuration structure.

```
static inline void LPADC_DoSoftwareTrigger(ADC_Type *base, uint32_t triggerIdMask)
```

Do software trigger to conversion command.

Parameters

- base – LPADC peripheral base address.
- triggerIdMask – Mask value for software trigger indexes, which count from zero.

```
void LPADC_SetConvCommandConfig(ADC_Type *base, uint32_t commandId, const
                                lpadc_conv_command_config_t *config)
```

Configure conversion command.

Note: The number of compare value register on different chips is different, that is mean in some chips, some command buffers do not have the compare functionality.

Parameters

- base – LPADC peripheral base address.
- commandId – ID for command in command buffer. Typically, the available value range is 1 - 15.
- config – Pointer to configuration structure. See to `lpadc_conv_command_config_t`.

```
void LPADC_GetDefaultConvCommandConfig(lpadc_conv_command_config_t *config)
```

Gets an available pre-defined settings for conversion command's configuration.

This function initializes the conversion command's configuration structure with an available settings. The default values are:

```
config->sampleScaleMode      = kLPADC_SampleFullScale;
config->channelBScaleMode    = kLPADC_SampleFullScale;
config->sampleChannelMode    = kLPADC_SampleChannelSingleEndSideA;
config->channelNumber        = 0U;
config->channelBNumber       = 0U;
config->chainedNextCommandNumber = 0U;
config->enableAutoChannelIncrement = false;
config->loopCount            = 0U;
config->hardwareAverageMode    = kLPADC_HardwareAverageCount1;
config->sampleTimeMode        = kLPADC_SampleTimeADCK3;
config->hardwareCompareMode    = kLPADC_HardwareCompareDisabled;
config->hardwareCompareValueHigh = 0U;
config->hardwareCompareValueLow  = 0U;
config->conversionResolutionMode = kLPADC_ConversionResolutionStandard;
config->enableWaitTrigger      = false;
config->enableChannelB         = false;
```

Parameters

- config – Pointer to configuration structure.


```
void LPADC_EnableCalibration(ADC_Type *base, bool enable)
```

Enable the calibration function.

When CALOFS is set, the ADC is configured to perform a calibration function anytime the ADC executes a conversion. Any channel selected is ignored and the value returned in the RESFIFO is a signed value between -31 and 31. -32 is not a valid and is never a returned value. Software should copy the lower 6- bits of the conversion result stored in the RESFIFO after a completed calibration conversion to the OFSTRIM field. The OFSTRIM field is used in normal operation for offset correction.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

```
static inline void LPADC_SetOffsetValue(ADC_Type *base, uint32_t value)
```

Set proper offset value to trim ADC.

To minimize the offset during normal operation, software should read the conversion result from the RESFIFO calibration operation and write the lower 6 bits to the OFSTRIM register.

Parameters

- base – LPADC peripheral base address.
- value – Setting offset value.

```
status_t LPADC_DoAutoCalibration(ADC_Type *base)
```

Do auto calibration.

Calibration function should be executed before using converter in application. It used the software trigger and a dummy conversion, get the offset and write them into the OFSTRIM register. It called some of functional API including: -LPADC_EnableCalibration(...) -LPADC_LPADC_SetOffsetValue(...) -LPADC_SetConvCommandConfig(...) -LPADC_SetConvTriggerConfig(...)

Parameters

- base – LPADC peripheral base address.
- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

```
static inline void LPADC_SetOffsetValue(ADC_Type *base, int16_t value)
```

Set trim value for offset.

Note: For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 LSB to 255.5 LSB; For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 LSB to 15.96875 LSB.

Parameters

- base – LPADC peripheral base address.
- value – Offset trim value, is a 10-bit signed value between -512 and 511.

```
static inline void LPADC_GetOffsetValue(ADC_Type *base, int16_t *pValue)
```

Get trim value of offset.

Parameters

- base – LPADC peripheral base address.
- pValue – Pointer to the variable in type of int16_t to store offset value.

static inline void LPADC_EnableOffsetCalibration(ADC_Type *base, bool enable)

Enable the offset calibration function.

Parameters

- base – LPADC peripheral base address.
- enable – switcher to the calibration function.

static inline void LPADC_SetOffsetCalibrationMode(ADC_Type *base,
lpadc_offset_calibration_mode_t mode)

Set offset calibration mode.

Parameters

- base – LPADC peripheral base address.
- mode – set offset calibration mode.see to lpadc_offset_calibration_mode_t .

status_t LPADC_DoOffsetCalibration(ADC_Type *base)

Do offset calibration.

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_PrepareAutoCalibration(ADC_Type *base)

Prepare auto calibration, LPADC_FinishAutoCalibration has to be called before using the LPADC. LPADC_DoAutoCalibration has been split in two API to avoid to be stuck too long in the function.

Parameters

- base – LPADC peripheral base address.

status_t LPADC_FinishAutoCalibration(ADC_Type *base)

Finish auto calibration start with LPADC_PrepareAutoCalibration.

Note: This feature is used for LPADC with CTRL[CALOFSMODE].

Parameters

- base – LPADC peripheral base address.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

void LPADC_GetCalibrationValue(ADC_Type *base, lpadc_calibration_value_t
*ptrCalibrationValue)

Get calibration value into the memory which is defined by invoker.

Note: Please note the ADC will be disabled temporary.

Note: This function should be used after finish calibration.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure, this memory block should be always powered on even in low power modes.

```
status_t LPADC_SetCalibrationValue(ADC_Type *base, const lpadc_calibration_value_t
                                   *ptrCalibrationValue)
```

Set calibration value into ADC calibration registers.

Note: Please note the ADC will be disabled temporary.

Parameters

- base – LPADC peripheral base address.
- ptrCalibrationValue – Pointer to lpadc_calibration_value_t structure which contains ADC's calibration value.

Return values

- kStatus_Success – Successfully configured.
- kStatus_Timeout – Timeout occurs while waiting completion.

```
static inline void LPADC_RequestHighSpeedModeTrim(ADC_Type *base)
```

Request high speed mode trim calculation.

Parameters

- base – LPADC peripheral base address.

```
static inline int8_t LPADC_GetHighSpeedTrimValue(ADC_Type *base)
```

Get high speed mode trim value, the result is a 5-bit signed value between -16 and 15.

Note: The high speed mode trim value is used to minimize offset for high speed conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The calculated high speed mode trim value.

```
static inline void LPADC_SetHighSpeedTrimValue(ADC_Type *base, int8_t trimValue)
```

Set high speed mode trim value.

Note: If is possible to set the trim value manually, but it is recommended to use the LPADC_RequestHighSpeedModeTrim.

Parameters

- base – LPADC peripheral base address.
- trimValue – The trim value to be set.

```
static inline void LPADC_EnableHighSpeedConversionMode(ADC_Type *base, bool enable)
```

Enable/disable high speed conversion mode, if enabled conversions complete 2 or 3 ADCK cycles sooner compared to conversion cycle counts when high speed mode is disabled.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable high speed conversion mode:
 - **true** Enable high speed conversion mode;
 - **false** Disable high speed conversion mode.

```
static inline void LPADC_EnableExtraCycle(ADC_Type *base, bool enable)
```

Enable/disable an additional ADCK cycle to conversion.

Parameters

- base – LPADC peripheral base address.
- enable – Used to enable/disable an additional ADCK cycle to conversion:
 - **true** Enable an additional ADCK cycle to conversion;
 - **false** Disable an additional ADCK cycle to conversion.

```
static inline void LPADC_SetTuneValue(ADC_Type *base, lpadc_tune_value_t tuneValue)
```

Set tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.
- tuneValue – The tune value to be set, please refer to `lpadc_tune_value_t`.

```
static inline lpadc_tune_value_t LPADC_GetTuneValue(ADC_Type *base)
```

Get tune value which provides some variability in how many cycles are needed to complete a conversion.

Parameters

- base – LPADC peripheral base address.

Returns

The tune value, please refer to `lpadc_tune_value_t`.

```
FSL_LPADC_DRIVER_VERSION
```

LPADC driver version 2.9.3.

```
struct lpadc_config_t
```

```
#include <fsl_lpadc.h> LPADC global configuration.
```

This structure would used to keep the settings for initialization.

Public Members

```
bool enableInternalClock
```

Enables the internally generated clock source. The clock source is used in clock selection logic at the chip level and is optionally used for the ADC clock source.

```
bool enableVref1LowVoltage
```

If voltage reference option1 input is below 1.8V, it should be “true”. If voltage reference option1 input is above 1.8V, it should be “false”.

`bool enableInDozeMode`

Control system transition to Stop and Wait power modes while ADC is converting. When enabled in Doze mode, immediate entries to Wait or Stop are allowed. When disabled, the ADC will wait for the current averaging iteration/FIFO storage to complete before acknowledging stop or wait mode entry.

`lpadc_conversion_average_mode_t conversionAverageMode`

Auto-Calibration Averages.

`bool enableAnalogPreliminary`

ADC analog circuits are pre-enabled and ready to execute conversions without startup delays(at the cost of higher DC current consumption).

`uint32_t powerUpDelay`

When the analog circuits are not pre-enabled, the ADC analog circuits are only powered while the ADC is active and there is a counted delay defined by this field after an initial trigger transitions the ADC from its Idle state to allow time for the analog circuits to stabilize. The startup delay count of (`powerUpDelay * 4`) ADCK cycles must result in a longer delay than the analog startup time.

`lpadc_reference_voltage_source_t referenceVoltageSource`

Selects the voltage reference high used for conversions.

`lpadc_power_level_mode_t powerLevelMode`

Power Configuration Selection.

`lpadc_trigger_priority_policy_t triggerPriorityPolicy`

Control how higher priority triggers are handled, see to `lpadc_trigger_priority_policy_t`.

`bool enableConvPause`

Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in “Compare Until True” configuration.

`uint32_t convPauseDelay`

Controls the duration of pausing during command execution sequencing. The pause delay is a count of (`convPauseDelay*4`) ADCK cycles. Only available when ADC pausing function is enabled. The available value range is in 9-bit.

`uint32_t FIFOWatermark`

FIFOWatermark is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in this field, the ready flag would be asserted to indicate stored data has reached the programmable threshold.

`struct lpadc_conv_command_config_t`

`#include <fsl_lpadc.h>` Define structure to keep the configuration for conversion command.

Public Members

`lpadc_sample_scale_mode_t sampleScaleMode`

Sample scale mode.

`lpadc_sample_scale_mode_t channelBScaleMode`

Alternate channel B Scale mode.

`lpadc_sample_channel_mode_t sampleChannelMode`

Channel sample mode.

uint32_t channelNumber

Channel number, select the channel or channel pair.

uint32_t channelBNumber

Alternate Channel B number, select the channel.

uint32_t chainedNextCommandNumber

Selects the next command to be executed after this command completes. 1-15 is available, 0 is to terminate the chain after this command.

bool enableAutoChannelIncrement

Loop with increment: when disabled, the “loopCount” field selects the number of times the selected channel is converted consecutively; when enabled, the “loopCount” field defines how many consecutive channels are converted as part of the command execution.

uint32_t loopCount

Selects how many times this command executes before finish and transition to the next command or Idle state. Command executes LOOP+1 times. 0-15 is available.

lpadc_hardware_average_mode_t hardwareAverageMode

Hardware average selection.

lpadc_sample_time_mode_t sampleTimeMode

Sample time selection.

lpadc_hardware_compare_mode_t hardwareCompareMode

Hardware compare selection.

uint32_t hardwareCompareValueHigh

Compare Value High. The available value range is in 16-bit.

uint32_t hardwareCompareValueLow

Compare Value Low. The available value range is in 16-bit.

lpadc_conversion_resolution_mode_t conversionResolutionMode

Conversion resolution mode.

bool enableWaitTrigger

Wait for trigger assertion before execution: when disabled, this command will be automatically executed; when enabled, the active trigger must be asserted again before executing this command.

struct *lpadc_conv_trigger_config_t*

#include <fsl_lpadc.h> Define structure to keep the configuration for conversion trigger.

Public Members

uint32_t targetCommandId

Select the command from command buffer to execute upon detect of the associated trigger event.

uint32_t delayPower

Select the trigger delay duration to wait at the start of servicing a trigger event. When this field is clear, then no delay is incurred. When this field is set to a non-zero value, the duration for the delay is $2^{\text{delayPower}}$ ADCK cycles. The available value range is 4-bit.

uint32_t priority

Sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority. The lower value for this field is for the higher priority, the available value range is 1-bit.

bool enableHardwareTrigger

Enable hardware trigger source to initiate conversion on the rising edge of the input trigger source or not. The software trigger is always available.

struct lpadc_conv_result_t

#include <fsl_lpadc.h> Define the structure to keep the conversion result.

Public Members

uint32_t commandIdSource

Indicate the command buffer being executed that generated this result.

uint32_t loopCountIndex

Indicate the loop count value during command execution that generated this result.

uint32_t triggerIdSource

Indicate the trigger source that initiated a conversion and generated this result.

uint16_t convValue

Data result.

struct _lpadc_calibration_value

#include <fsl_lpadc.h> A structure of calibration value.

2.41 Lpc_freqme

void `FREQME_Init`(`FREQME_Type *base`, const *freq_measure_config_t* *config)

Initialize freqme module, set operate mode, operate mode attribute and initialize measurement cycle.

Parameters

- base – FREQME peripheral base address.
- config – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

void `FREQME_GetDefaultConfig`(*freq_measure_config_t* *config)

Get default configuration.

```
config->operateMode = kFREQME_FreqMeasurementMode;
config->operateModeAttribute.refClkScaleFactor = 0U;
config->enableContinuousMode = false;
config->startMeasurement = false;
```

Parameters

- config – The pointer to module basic configuration, please refer to `freq_measure_config_t`.

static inline void `FREQME_StartMeasurementCycle`(`FREQME_Type *base`)

Start frequency or pulse width measurement process.

Parameters

- `base` – FREQME peripheral base address.

`static inline void FREQME_TerminateMeasurementCycle(FREQME_Type *base)`

Force the termination of any measurement cycle currently in progress and resets RESULT or just reset RESULT if the module in idle state.

Parameters

- `base` – FREQME peripheral base address.

`static inline void FREQME_EnableContinuousMode(FREQME_Type *base, bool enable)`

Enable/disable Continuous mode.

Parameters

- `base` – FREQME peripheral base address.
- `enable` – Used to enable/disable continuous mode,
 - **true** Enable Continuous mode.
 - **false** Disable Continuous mode.

`static inline bool FREQME_CheckContinuousMode(FREQME_Type *base)`

Check whether continuous mode is enabled.

Parameters

- `base` – FREQME peripheral base address.

Return values

- `True` – Continuous mode is enabled, the measurement is performed continuously.
- `False` – Continuous mode is disabled.

`static inline void FREQME_SetOperateMode(FREQME_Type *base, freqme_operate_mode_t operateMode)`

Set operate mode of freqme module.

Parameters

- `base` – FREQME peripheral base address.
- `operateMode` – The operate mode to be set, please refer to `freqme_operate_mode_t`.

`static inline bool FREQME_CheckOperateMode(FREQME_Type *base)`

Check module's operate mode.

Parameters

- `base` – FREQME peripheral base address.

Return values

- `True` – Pulse width measurement mode.
- `False` – Frequency measurement mode.

`static inline void FREQME_SetMinExpectedValue(FREQME_Type *base, uint32_t minValue)`

Set the minimum expected value for the measurement result.

Parameters

- `base` – FREQME peripheral base address.
- `minValue` – The minimum value to set, please note that this value is 31 bits width.

static inline void `FREQME_SetMaxExpectedValue(FREQME_Type *base, uint32_t maxValue)`
Set the maximum expected value for the measurement result.

Parameters

- `base` – FREQME peripheral base address.
- `maxValue` – The maximum value to set, please note that this value is 31 bits width.

uint32_t `FREQME_CalculateTargetClkFreq(FREQME_Type *base, uint32_t refClkFrequency)`
Calculate the frequency of selected target clock

Note: The formula: $F_{target} = (RESULT - 2) * F_{reference} / 2^{REF_SCALE}$.

Note: This function only useful when the operate mode is selected as frequency measurement mode.

Parameters

- `base` – FREQME peripheral base address.
- `refClkFrequency` – The frequency of reference clock.

Returns

The frequency of target clock the unit is Hz, if the output result is 0, please check the module's operate mode.

static inline uint8_t `FREQME_GetReferenceClkScaleValue(FREQME_Type *base)`
Get reference clock scaling factor.

Parameters

- `base` – FREQME peripheral base address.

Returns

Reference clock scaling factor, the reference count cycle is 2^{ref_scale} .

static inline void `FREQME_SetPulsePolarity(FREQME_Type *base, freqme_pulse_polarity_t pulsePolarity)`

Set pulse polarity when operate mode is selected as Pulse Width Measurement mode.

Parameters

- `base` – FREQME peripheral base address.
- `pulsePolarity` – The pulse polarity to be set, please refer to `freqme_pulse_polarity_t`.

static inline bool `FREQME_CheckPulsePolarity(FREQME_Type *base)`

Check pulse polarity when the operate mode is selected as pulse width measurement mode.

Parameters

- `base` – FREQME peripheral base address.

Return values

- True – Low period.
- False – High period.

```
static inline uint32_t FREQME_GetMeasurementResult(FREQME_Type *base)
```

Get measurement result, if operate mode is selected as pulse width measurement mode this function can be used to calculate pulse width.

Note: Pulse width = counter result / Frequency of target clock.

Parameters

- base – FREQME peripheral base address.

Returns

Measurement result.

```
static inline uint32_t FREQME_GetInterruptStatusFlags(FREQME_Type *base)
```

Get interrupt status flags, such as overflow interrupt status flag, underflow interrupt status flag, and so on.

Parameters

- base – FREQME peripheral base address.

Returns

Current interrupt status flags, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_ClearInterruptStatusFlags(FREQME_Type *base, uint32_t  
                                                    statusFlags)
```

Clear interrupt status flags.

Parameters

- base – FREQME peripheral base address.
- statusFlags – The combination of interrupt status flags to clear, should be the OR'ed value of `_freqme_interrupt_status_flags`.

```
static inline void FREQME_EnableInterrupts(FREQME_Type *base, uint32_t masks)
```

Enable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- base – FREQME peripheral base address.
- masks – The mask of interrupts to enable, should be the OR'ed value of `_freqme_interrupt_enable`.

```
static inline void FREQME_DisableInterrupts(FREQME_Type *base, uint32_t masks)
```

Disable interrupts, such as result ready interrupt, overflow interrupt and so on.

Parameters

- base – FREQME peripheral base address.
- masks – The mask of interrupts to disable, should be the OR'ed value of `_freqme_interrupt_enable`.

```
FSL_FREQME_DRIVER_VERSION  
FREQME driver version 2.1.2.
```

```
enum _freqme_interrupt_status_flags
```

The enumeration of interrupt status flags. .

Values:

enumerator kFREQME_UnderflowInterruptStatusFlag

Indicate the measurement is just done and the result is less than minimum value.

enumerator kFREQME_OverflowInterruptStatusFlag

Indicate the measurement is just done and the result is greater than maximum value.

enumerator kFREQME_ReadyInterruptStatusFlag

Indicate the measurement is just done and the result is ready to read.

enumerator kFREQME_AllInterruptStatusFlags

All interrupt status flags.

enum _freqme_interrupt_enable

The enumeration of interrupts, including underflow interrupt, overflow interrupt, and result ready interrupt. .

Values:

enumerator kFREQME_UnderflowInterruptEnable

Enable interrupt when the result is less than minimum value.

enumerator kFREQME_OverflowInterruptEnable

Enable interrupt when the result is greater than maximum value.

enumerator kFREQME_ReadyInterruptEnable

Enable interrupt when a measurement completes and the result is ready.

enum _freqme_operate_mode

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

Values:

enumerator kFREQME_FreqMeasurementMode

The module works in the frequency measurement mode.

enumerator kFREQME_PulseWidthMeasurementMode

The module works in the pulse width measurement mode.

enum _freqme_pulse_polarity

The enumeration of pulse polarity.

Values:

enumerator kFREQME_PulseHighPeriod

Select high period of the reference clock.

enumerator kFREQME_PulseLowPeriod

Select low period of the reference clock.

typedef enum *freqme_operate_mode* freqme_operate_mode_t

FREQME module operate mode enumeration, including frequency measurement mode and pulse width measurement mode.

typedef enum *freqme_pulse_polarity* freqme_pulse_polarity_t

The enumeration of pulse polarity.

typedef union *freqme_mode_attribute* freqme_mode_attribute_t

The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

typedef struct *freq_measure_config* freq_measure_config_t

The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

union *freqme_mode_attribute*

#include <fsl_freqme.h> The union of operate mode attribute.

Note: If the operate mode is selected as frequency measurement mode the member **refClkScaleFactor** should be used, if the operate mode is selected as pulse width measurement mode the member **pulsePolarity** should be used.

Public Members

uint8_t refClkScaleFactor

Only useful in frequency measurement operate mode, used to set the reference clock counter scaling factor.

freqme_pulse_polarity_t pulsePolarity

Only Useful in pulse width measurement operate mode, used to set period polarity.

struct *freq_measure_config*

#include <fsl_freqme.h> The structure of freqme module basic configuration, including operate mode, operate mode attribute and so on.

Public Members

freqme_operate_mode_t operateMode

Select operate mode, please refer to *freqme_operate_mode_t*.

freqme_mode_attribute_t operateModeAttribute

Used to set the attribute of the selected operate mode, if the operate mode is selected as kFREOME_FreqMeasurementMode set *freqme_mode_attribute_t::refClkScaleFactor*, if operate mode is selected as kFREOME_PulseWidthMeasurementMode, please set *freqme_mode_attribute_t::pulsePolarity*.

bool enableContinuousMode

Enable/disable continuous mode, if continuous mode is enable, the measurement is performed continuously and the result for the last completed measurement is available in the result register.

2.42 LPCMP: Low Power Analog Comparator Driver

void LPCMP_Init(LPCMP_Type *base, const *lpcmp_config_t* *config)

Initialize the LPCMP.

This function initializes the LPCMP module. The operations included are:

- Enabling the clock for LPCMP module.
- Configuring the comparator.
- Enabling the LPCMP module. Note: For some devices, multiple LPCMP instance share the same clock gate. In this case, to enable the clock for any instance enables all the LPCMPs. Check the chip reference manual for the clock assignment of the LPCMP.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “lpcmp_config_t” structure.

void LPCMP_Deinit(LPCMP_Type *base)

De-initializes the LPCMP module.

This function de-initializes the LPCMP module. The operations included are:

- Disabling the LPCMP module.
- Disabling the clock for LPCMP module.

This function disables the clock for the LPCMP. Note: For some devices, multiple LPCMP instance shares the same clock gate. In this case, before disabling the clock for the LPCMP, ensure that all the LPCMP instances are not used.

Parameters

- base – LPCMP peripheral base address.

void LPCMP_GetDefaultConfig(*lpcmp_config_t* *config)

Gets an available pre-defined settings for the comparator’s configuration.

This function initializes the comparator configuration structure to these default values:

```
config->enableStopMode    = false;
config->enableOutputPin   = false;
config->enableCmpToDacLink = false;
config->useUnfilteredOutput = false;
config->enableInvertOutput = false;
config->hysteresisMode     = kLPCMP_HysteresisLevel0;
config->powerMode          = kLPCMP_LowSpeedPowerMode;
config->functionalSourceClock = kLPCMP_FunctionalClockSource0;
config->plusInputSrc       = kLPCMP_PlusInputSrcMux;
config->minusInputSrc      = kLPCMP_MinusInputSrcMux;
```

Parameters

- config – Pointer to “lpcmp_config_t” structure.

static inline void LPCMP_Enable(LPCMP_Type *base, bool enable)

Enable/Disable LPCMP module.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable the module, and “false” means disable the module.

void LPCMP_SetInputChannels(LPCMP_Type *base, uint32_t positiveChannel, uint32_t negativeChannel)

Select the input channels for LPCMP. This function determines which input is selected for the negative and positive mux.

Parameters

- base – LPCMP peripheral base address.
- positiveChannel – Positive side input channel number. Available range is 0-7.
- negativeChannel – Negative side input channel number. Available range is 0-7.

static inline void LPCMP_EnableDMA(LPCMP_Type *base, bool enable)

Enables/disables the DMA request for rising/falling events. Normally, the LPCMP generates a CPU interrupt if there is a rising/falling event. When DMA support is enabled and the rising/falling interrupt is enabled, the rising/falling event forces a DMA transfer request rather than a CPU interrupt instead.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable DMA support, and “false” means disable DMA support.

void LPCMP_SetFilterConfig(LPCMP_Type *base, const *lpcmp_filter_config_t* *config)

Configures the filter.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “*lpcmp_filter_config_t*” structure.

void LPCMP_SetDACConfig(LPCMP_Type *base, const *lpcmp_dac_config_t* *config)

Configure the internal DAC module.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer to “*lpcmp_dac_config_t*” structure. If config is “NULL”, disable internal DAC.

static inline void LPCMP_EnableInterrupts(LPCMP_Type *base, uint32_t mask)

Enable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “*_lpcmp_interrupt_enable*”.

static inline void LPCMP_DisableInterrupts(LPCMP_Type *base, uint32_t mask)

Disable the interrupts.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for interrupts. See “*_lpcmp_interrupt_enable*”.

static inline uint32_t LPCMP_GetStatusFlags(LPCMP_Type *base)

Get the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.

Returns

Mask value for the asserted flags. See “*_lpcmp_status_flags*”.

static inline void LPCMP_ClearStatusFlags(LPCMP_Type *base, uint32_t mask)

Clear the LPCMP status flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask value for the flags. See “*_lpcmp_status_flags*”.

```
static inline void LPCMP_EnableWindowMode(LPCMP_Type *base, bool enable)
```

Enable/Disable window mode. When any windowed mode is active, COUTA is clocked by the bus clock whenever WINDOW = 1. The last latched value is held when WINDOW = 0. The optionally inverted comparator output COUT_RAW is sampled on every bus clock when WINDOW=1 to generate COUTA.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable window mode, and “false” means disable window mode.

```
void LPCMP_SetWindowControl(LPCMP_Type *base, const lpcmp_window_control_config_t
                             *config)
```

Configure the window control, users can use this API to implement operations on the window, such as inverting the window signal, setting the window closing event (only valid in windowing mode), and setting the COUTA signal after the window is closed (only valid in windowing mode).

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “*lpcmp_window_control_config_t*” structure.

```
void LPCMP_SetRoundRobinConfig(LPCMP_Type *base, const lpcmp_roundrobin_config_t
                                *config)
```

Configure the roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- config – Pointer “*lpcmp_roundrobin_config_t*” structure.

```
static inline void LPCMP_EnableRoundRobinMode(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin mode.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin mode, and “false” means disable roundrobin mode.

```
void LPCMP_SetRoundRobinInternalTimer(LPCMP_Type *base, uint32_t value)
```

brief Configure the roundrobin internal timer reload value.

param base LPCMP peripheral base address. param value RoundRobin internal timer reload value, allowed range: 0x0UL-0xFFFFFFFFUL.

```
static inline void LPCMP_EnableRoundRobinInternalTimer(LPCMP_Type *base, bool enable)
```

Enable/Disable roundrobin internal timer, note that this function is only valid when using the internal trigger source.

Parameters

- base – LPCMP peripheral base address.
- enable – “true” means enable roundrobin internal timer, and “false” means disable roundrobin internal timer.

```
static inline void LPCMP_SetPreSetValue(LPCMP_Type *base, uint8_t mask)
```

Set preset value for all channels, users can set all channels’ preset value through this API, for example, if the mask set to 0x03U means channel0 and channel2’s preset value set to 1U and other channels’ preset value set to 0U.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

```
static inline uint8_t LPCMP_GetComparisonResult(LPCMP_Type *base)
```

Get comparison results for all channels, users can get all channels' comparison results through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' comparison result.

```
static inline void LPCMP_ClearInputChangedFlags(LPCMP_Type *base, uint8_t mask)
```

Clear input changed flags for single channel or multiple channels, users can clear input changed flag of a single channel or multiple channels through this API, for example, if the mask set to 0x03U means clear channel0 and channel2's input changed flags.

Parameters

- base – LPCMP peripheral base address.
- mask – Mask of channel index.

```
static inline uint8_t LPCMP_GetInputChangedFlags(LPCMP_Type *base)
```

Get input changed flags for all channels, Users can get all channels' input changed flags through this API.

Parameters

- base – LPCMP peripheral base address.

Returns

return All channels' changed flag.

```
FSL_LPCMP_DRIVER_VERSION
```

LPCMP driver version 2.3.2.

```
enum _lpcmp_status_flags
```

LPCMP status falgs mask.

Values:

```
enumerator kLPCMP_OutputRisingEventFlag
```

Rising-edge on the comparison output has occurred.

```
enumerator kLPCMP_OutputFallingEventFlag
```

Falling-edge on the comparison output has occurred.

```
enumerator kLPCMP_OutputRoundRobinEventFlag
```

Detects when any channel's last comparison result is different from the pre-set value in trigger mode.

```
enumerator kLPCMP_OutputAssertEventFlag
```

Return the current value of the analog comparator output. The flag does not support W1C.

```
enum _lpcmp_interrupt_enable
```

LPCMP interrupt enable/disable mask.

Values:

enumerator kLPCMP_OutputRisingInterruptEnable
Comparator interrupt enable rising.

enumerator kLPCMP_OutputFallingInterruptEnable
Comparator interrupt enable falling.

enumerator kLPCMP_RoundRobinInterruptEnable
Comparator round robin mode interrupt occurred when the comparison result changes for a given channel.

enum _lpcmp_hysteresis_mode

LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

Values:

enumerator kLPCMP_HysteresisLevel0
The hard block output has level 0 hysteresis internally.

enumerator kLPCMP_HysteresisLevel1
The hard block output has level 1 hysteresis internally.

enumerator kLPCMP_HysteresisLevel2
The hard block output has level 2 hysteresis internally.

enumerator kLPCMP_HysteresisLevel3
The hard block output has level 3 hysteresis internally.

enum _lpcmp_power_mode

LPCMP nano mode.

Values:

enumerator kLPCMP_LowSpeedPowerMode
Low speed comparison mode is selected.

enumerator kLPCMP_HighSpeedPowerMode
High speed comparison mode is selected.

enumerator kLPCMP_NanoPowerMode
Nano power comparator is enabled.

enum _lpcmp_dac_reference_voltage_source

Internal DAC reference voltage source.

Values:

enumerator kLPCMP_VrefSourceVin1
vrefh_int is selected as resistor ladder network supply reference Vin.

enumerator kLPCMP_VrefSourceVin2
vrefh_ext is selected as resistor ladder network supply reference Vin.

enum _lpcmp_functional_source_clock

LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

Values:

enumerator kLPCMP_FunctionalClockSource0
Select functional mode clock source0.

enumerator kLPCMP_FunctionalClockSource1
Select functional mode clock source1.

enumerator kLPCMP_FunctionalClockSource2
Select functional mode clock source2.

enumerator kLPCMP_FunctionalClockSource3
Select functional mode clock source3.

enum _lpcmp_couta_signal

Set the COUTA signal value when the window is closed.

Values:

enumerator kLPCMP_COUTASignalNoSet
NO set the COUTA signal value when the window is closed.

enumerator kLPCMP_COUTASignalLow
Set COUTA signal low(0) when the window is closed.

enumerator kLPCMP_COUTASignalHigh
Set COUTA signal high(1) when the window is closed.

enum _lpcmp_close_window_event

Set COUT event, which can close the active window in window mode.

Values:

enumerator kLPCMP_CCloseWindowEventNoSet
No Set COUT event, which can close the active window in window mode.

enumerator kLPCMP_CloseWindowEventRisingEdge
Set rising edge COUT signal as COUT event.

enumerator kLPCMP_CloseWindowEventFallingEdge
Set falling edge COUT signal as COUT event.

enumerator kLPCMP_CCloseWindowEventBothEdge
Set both rising and falling edge COUT signal as COUT event.

enum _lpcmp_roundrobin_fixedmuxport

LPCMP round robin mode fixed mux port.

Values:

enumerator kLPCMP_FixedPlusMuxPort
Fixed plus mux port.

enumerator kLPCMP_FixedMinusMuxPort
Fixed minus mux port.

enum _lpcmp_roundrobin_clock_source

LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

Values:

enumerator kLPCMP_RoundRobinClockSource0
Select roundrobin mode clock source0.

enumerator kLPCMP_RoundRobinClockSource1
Select roundrobin mode clock source1.

enumerator `kLPCMP_RoundRobinClockSource2`
 Select roundrobin mode clock source2.

enumerator `kLPCMP_RoundRobinClockSource3`
 Select roundrobin mode clock source3.

enum `_lpcmp_roundrobin_trigger_source`
 LPCMP round robin mode trigger source.

Values:

enumerator `kLPCMP_TriggerSourceExternally`
 Select external trigger source.

enumerator `kLPCMP_TriggerSourceInternally`
 Select internal trigger source.

typedef enum `_lpcmp_hysteresis_mode` `lpcmp_hysteresis_mode_t`
 LPCMP hysteresis mode. See chip data sheet to get the actual hysteresis value with each level.

typedef enum `_lpcmp_power_mode` `lpcmp_power_mode_t`
 LPCMP nano mode.

typedef enum `_lpcmp_dac_reference_voltage_source` `lpcmp_dac_reference_voltage_source_t`
 Internal DAC reference voltage source.

typedef enum `_lpcmp_functional_source_clock` `lpcmp_functional_source_clock_t`
 LPCMP functional mode clock source selection.

Note: In different devices, the functional mode clock source selection is different, please refer to specific device Reference Manual for details.

typedef enum `_lpcmp_couta_signal` `lpcmp_couta_signal_t`
 Set the COUTA signal value when the window is closed.

typedef enum `_lpcmp_close_window_event` `lpcmp_close_window_event_t`
 Set COUT event, which can close the active window in window mode.

typedef enum `_lpcmp_roundrobin_fixedmuxport` `lpcmp_roundrobin_fixedmuxport_t`
 LPCMP round robin mode fixed mux port.

typedef enum `_lpcmp_roundrobin_clock_source` `lpcmp_roundrobin_clock_source_t`
 LPCMP round robin mode clock source selection.

Note: In different devices, the round robin mode clock source selection is different, please refer to the specific device Reference Manual for details.

typedef enum `_lpcmp_roundrobin_trigger_source` `lpcmp_roundrobin_trigger_source_t`
 LPCMP round robin mode trigger source.

typedef struct `_lpcmp_filter_config` `lpcmp_filter_config_t`
 Configure the filter.

typedef struct `_lpcmp_dac_config` `lpcmp_dac_config_t`
 configure the internal DAC.

typedef struct `_lpcmp_config` `lpcmp_config_t`
 Configures the comparator.

typedef struct `_lpcmp_window_control_config` `lpcmp_window_control_config_t`
 Configure the window mode control.

```
typedef struct _lpcmp_roundrobin_config lpcmp_roundrobin_config_t
```

Configure the round robin mode.

```
LPCMP_CCR1_COUTA_CFG_MASK
```

```
LPCMP_CCR1_COUTA_CFG_SHIFT
```

```
LPCMP_CCR1_COUTA_CFG(x)
```

```
LPCMP_CCR1_EVT_SEL_CFG_MASK
```

```
LPCMP_CCR1_EVT_SEL_CFG_SHIFT
```

```
LPCMP_CCR1_EVT_SEL_CFG(x)
```

```
struct _lpcmp_filter_config
```

#include <fsl_lpcmp.h> Configure the filter.

Public Members

```
bool enableSample
```

Decide whether to use the external SAMPLE as a sampling clock input.

```
uint8_t filterSampleCount
```

Filter Sample Count. Available range is 1-7; 0 disables the filter.

```
uint8_t filterSamplePeriod
```

Filter Sample Period. The divider to the bus clock. Available range is 0-255. The sampling clock must be at least 4 times slower than the system clock to the comparator. So if enableSample is “false”, filterSamplePeriod should be set greater than 4.

```
struct _lpcmp_dac_config
```

#include <fsl_lpcmp.h> configure the internal DAC.

Public Members

```
bool enableLowPowerMode
```

Decide whether to enable DAC low power mode.

```
lpcmp_dac_reference_voltage_source_t referenceVoltageSource
```

Internal DAC supply voltage reference source.

```
uint8_t DACValue
```

Value for the DAC Output Voltage. Different devices has different available range, for specific values, please refer to the reference manual.

```
struct _lpcmp_config
```

#include <fsl_lpcmp.h> Configures the comparator.

Public Members

```
bool enableStopMode
```

Decide whether to enable the comparator when in STOP modes.

```
bool enableOutputPin
```

Decide whether to enable the comparator is available in selected pin.

```
bool useUnfilteredOutput
```

Decide whether to use unfiltered output.

`bool enableInvertOutput`
Decide whether to invert the comparator output.

`lpcmp_hysteresis_mode_t hysteresisMode`
LPCMP hysteresis mode.

`lpcmp_power_mode_t powerMode`
LPCMP power mode.

`lpcmp_functional_source_clock_t functionalSourceClock`
Select LPCMP functional mode clock source.

`struct __lpcmp_window_control_config`
`#include <fsl_lpcmp.h>` Configure the window mode control.

Public Members

`bool enableInvertWindowSignal`
True: enable invert window signal, False: disable invert window signal.

`lpcmp_couta_signal_t COUTASignal`
Decide whether to define the COUTA signal value when the window is closed.

`lpcmp_close_window_event_t closeWindowEvent`
Decide whether to select COUT event signal edge defines a COUT event to close window.

`struct __lpcmp_roundrobin_config`
`#include <fsl_lpcmp.h>` Configure the round robin mode.

Public Members

`uint8_t initDelayModules`
Comparator and DAC initialization delay modulus, See Reference Manual and DataSheet for specific value.

`uint8_t sampleClockNumbers`
Specify the number of the round robin clock cycles(0~3) to wait after scanning the active channel before sampling the channel's comparison result.

`uint8_t channelSampleNumbers`
Specify the number of samples for one channel, note that `channelSampleNumbers` must not smaller than `sampleTimeThreshhold`.

`uint8_t sampleTimeThreshhold`
Specify that for one channel, when $(\text{sampleTimeThreshhold} + 1)$ sample results are "1", the final result is "1", otherwise the final result is "0", note that the `sampleTimeThreshhold` must not be larger than `channelSampleNumbers`.

`lpcmp_roundrobin_clock_source_t roundrobinClockSource`
Decide which clock source to choose in round robin mode.

`lpcmp_roundrobin_trigger_source_t roundrobinTriggerSource`
Decide which trigger source to choose in round robin mode.

`lpcmp_roundrobin_fixedmuxport_t fixedMuxPort`
Decide which mux port to choose as fixed channel in round robin mode.

`uint8_t fixedChannel`
Indicate which channel of the fixed mux port is used in round robin mode.

uint8_t checkerChannelMask

Indicate which channel of the non-fixed mux port to check its voltage value in round robin mode, for example, if checkerChannelMask set to 0x11U means select channel 0 and channel 4 as checker channel.

2.43 LPI2C: Low Power Inter-Integrated Circuit Driver

void LPI2C_DriverIRQHandler(uint32_t instance)

LPI2C driver IRQ handler common entry.

This function provides the common IRQ request entry for LPI2C.

Parameters

- instance – LPI2C instance.

FSL_LPI2C_DRIVER_VERSION

LPI2C driver version.

LPI2C status return codes.

Values:

enumerator kStatus_LPI2C_Busy

The master is already performing a transfer.

enumerator kStatus_LPI2C_Idle

The slave driver is idle.

enumerator kStatus_LPI2C_Nak

The slave device sent a NAK in response to a byte.

enumerator kStatus_LPI2C_FifoError

FIFO under run or overrun.

enumerator kStatus_LPI2C_BitError

Transferred bit was not seen on the bus.

enumerator kStatus_LPI2C_ArbitrationLost

Arbitration lost error.

enumerator kStatus_LPI2C_PinLowTimeout

SCL or SDA were held low longer than the timeout.

enumerator kStatus_LPI2C_NoTransferInProgress

Attempt to abort a transfer when one is not in progress.

enumerator kStatus_LPI2C_DmaRequestFail

DMA request failed.

enumerator kStatus_LPI2C_Timeout

Timeout polling status flags.

IRQn_Type const kLpi2cIrqs[]

Array to map LPI2C instance number to IRQ number, used internally for LPI2C master interrupt and EDMA transactional APIs.

lpi2c_master_isr_t s_lpi2cMasterIsr

Pointer to master IRQ handler for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
void *s_lpi2cMasterHandle[]
```

Pointers to master handles for each instance, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
uint32_t LPI2C_GetInstance(LPI2C_Type *base)
```

Returns an instance number given a base address.

If an invalid base address is passed, debug builds will assert. Release builds will just return instance number 0.

Parameters

- base – The LPI2C peripheral base address.

Returns

LPI2C instance number starting from 0.

```
I2C_RETRY_TIMES
```

Retry times for waiting flag.

2.44 LPI2C Master Driver

```
void LPI2C_MasterGetDefaultConfig(lpi2c_master_config_t *masterConfig)
```

Provides a default configuration for the LPI2C master peripheral.

This function provides the following default configuration for the LPI2C master peripheral:

```
masterConfig->enableMaster      = true;
masterConfig->debugEnable       = false;
masterConfig->ignoreAck         = false;
masterConfig->pinConfig          = kLPI2C_2PinOpenDrain;
masterConfig->baudRate_Hz       = 100000U;
masterConfig->busIdleTimeout_ns = 0;
masterConfig->pinLowTimeout_ns  = 0;
masterConfig->sdaGlitchFilterWidth_ns = 0;
masterConfig->sclGlitchFilterWidth_ns = 0;
masterConfig->hostRequest.enable = false;
masterConfig->hostRequest.source  = kLPI2C_HostRequestExternalPin;
masterConfig->hostRequest.polarity = kLPI2C_HostRequestPinActiveHigh;
```

After calling this function, you can override any settings in order to customize the configuration, prior to initializing the master driver with `LPI2C_MasterInit()`.

Parameters

- masterConfig – **[out]** User provided configuration structure for default values. Refer to `lpi2c_master_config_t`.

```
void LPI2C_MasterInit(LPI2C_Type *base, const lpi2c_master_config_t *masterConfig, uint32_t sourceClock_Hz)
```

Initializes the LPI2C master peripheral.

This function enables the peripheral clock and initializes the LPI2C master peripheral as described by the user provided configuration. A software reset is performed prior to configuration.

Parameters

- base – The LPI2C peripheral base address.
- masterConfig – User provided peripheral configuration. Use `LPI2C_MasterGetDefaultConfig()` to get a set of defaults that you can override.

- `sourceClock_Hz` – Frequency in Hertz of the LPI2C functional clock. Used to calculate the baud rate divisors, filter widths, and timeout periods.

`void LPI2C_MasterDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C master peripheral.

This function disables the LPI2C master peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.

`void LPI2C_MasterConfigureDataMatch(LPI2C_Type *base, const lpi2c_data_match_config_t *matchConfig)`

Configures LPI2C master data match feature.

Parameters

- `base` – The LPI2C peripheral base address.
- `matchConfig` – Settings for the data match feature.

`status_t LPI2C_MasterCheckAndClearError(LPI2C_Type *base, uint32_t status)`

Convert provided flags to status code, and clear any errors if present.

Parameters

- `base` – The LPI2C peripheral base address.
- `status` – Current status flags value that will be checked.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_PinLowTimeout` –
- `kStatus_LPI2C_ArbitrationLost` –
- `kStatus_LPI2C_Nak` –
- `kStatus_LPI2C_FifoError` –

`status_t LPI2C_CheckForBusyBus(LPI2C_Type *base)`

Make sure the bus isn't already busy.

A busy bus is allowed if we are the one driving it.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` –
- `kStatus_LPI2C_Busy` –

`static inline void LPI2C_MasterReset(LPI2C_Type *base)`

Performs a software reset.

Restores the LPI2C master peripheral to reset conditions.

Parameters

- `base` – The LPI2C peripheral base address.


```
static inline void LPI2C_MasterEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as master.

Parameters

- base – The LPI2C peripheral base address.
- enable – Pass true to enable or false to disable the specified LPI2C as master.

```
static inline uint32_t LPI2C_MasterGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C master status flags.

A bit mask with the state of all LPI2C master status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_master_flags`

Parameters

- base – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_MasterClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C master status flag state.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_master_flags`.

Parameters

- base – The LPI2C peripheral base address.
- statusMask – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_master_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_MasterGetStatusFlags()`.

```
static inline void LPI2C_MasterEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to enable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_MasterDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C master interrupt requests.

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Parameters

- base – The LPI2C peripheral base address.
- interruptMask – Bit mask of interrupts to disable. See `_lpi2c_master_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t LPI2C_MasterGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C master interrupt requests.

Parameters

- base – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_master_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_MasterEnableDMA(LPI2C_Type *base, bool enableTx, bool enableRx)
```

Enables or disables LPI2C master DMA requests.

Parameters

- base – The LPI2C peripheral base address.
- enableTx – Enable flag for transmit DMA request. Pass true for enable, false for disable.
- enableRx – Enable flag for receive DMA request. Pass true for enable, false for disable.

```
static inline uint32_t LPI2C_MasterGetTxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master transmit data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Transmit Data Register address.

```
static inline uint32_t LPI2C_MasterGetRxFifoAddress(LPI2C_Type *base)
```

Gets LPI2C master receive data register address for DMA transfer.

Parameters

- base – The LPI2C peripheral base address.

Returns

The LPI2C Master Receive Data Register address.

```
static inline void LPI2C_MasterSetWatermarks(LPI2C_Type *base, size_t txWords, size_t rxWords)
```

Sets the watermarks for LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txWords` – Transmit FIFO watermark value in words. The `kLPI2C_MasterTxReadyFlag` flag is set whenever the number of words in the transmit FIFO is equal or less than `txWords`. Writing a value equal or greater than the FIFO size is truncated.
- `rxWords` – Receive FIFO watermark value in words. The `kLPI2C_MasterRxReadyFlag` flag is set whenever the number of words in the receive FIFO is greater than `rxWords`. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPI2C_MasterGetFifoCounts(LPI2C_Type *base, size_t *rxCount, size_t
                                           *txCount)
```

Gets the current number of words in the LPI2C master FIFOs.

Parameters

- `base` – The LPI2C peripheral base address.
- `txCount` – **[out]** Pointer through which the current number of words in the transmit FIFO is returned. Pass NULL if this value is not required.
- `rxCount` – **[out]** Pointer through which the current number of words in the receive FIFO is returned. Pass NULL if this value is not required.

```
void LPI2C_MasterSetBaudRate(LPI2C_Type *base, uint32_t sourceClock_Hz, uint32_t
                             baudRate_Hz)
```

Sets the I2C bus frequency for master transactions.

The LPI2C master is automatically disabled and re-enabled as necessary to configure the baud rate. Do not call this function during a transfer, or the transfer is aborted.

Note: Please note that the second parameter is the clock frequency of LPI2C module, the third parameter means user configured bus baudrate, this implementation is different from other I2C drivers which use baudrate configuration as second parameter and source clock frequency as third parameter.

Parameters

- `base` – The LPI2C peripheral base address.
- `sourceClock_Hz` – LPI2C functional clock frequency in Hertz.
- `baudRate_Hz` – Requested bus frequency in Hertz.

```
static inline bool LPI2C_MasterGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the master mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
status_t LPI2C_MasterStart(LPI2C_Type *base, uint8_t address, lpi2c_direction_t dir)
```

Sends a START signal and slave address on the I2C bus.

This function is used to initiate a new master mode transfer. First, the bus state is checked to ensure that another master is not occupying the bus. Then a START signal is transmitted,

followed by the 7-bit address specified in the *address* parameter. Note that this function does not actually wait until the START and address are successfully sent on the bus before returning.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
static inline status_t LPI2C_MasterRepeatedStart(LPI2C_Type *base, uint8_t address,  
                                               lpi2c_direction_t dir)
```

Sends a repeated START signal and slave address on the I2C bus.

This function is used to send a Repeated START signal when a transfer is already in progress. Like `LPI2C_MasterStart()`, it also sends the specified 7-bit address.

Note: This function exists primarily to maintain compatible APIs between LPI2C and I2C drivers, as well as to better document the intent of code that uses these APIs.

Parameters

- *base* – The LPI2C peripheral base address.
- *address* – 7-bit slave device address, in bits [6:0].
- *dir* – Master transfer direction, either `kLPI2C_Read` or `kLPI2C_Write`. This parameter is used to set the R/w bit (bit 0) in the transmitted slave address.

Return values

- `kStatus_Success` – Repeated START signal and address were successfully enqueued in the transmit FIFO.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.

```
status_t LPI2C_MasterSend(LPI2C_Type *base, void *txBuff, size_t txSize)
```

Performs a polling send transfer on the I2C bus.

Sends up to *txSize* number of bytes to the previously addressed slave device. The slave may reply with a NAK to any byte in order to terminate the transfer early. If this happens, this function returns `kStatus_LPI2C_Nak`.

Parameters

- *base* – The LPI2C peripheral base address.
- *txBuff* – The pointer to the data to be transferred.
- *txSize* – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was sent successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.

- `kStatus_LPI2C_FifoError` – FIFO under run or over run.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize)`

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterStop(LPI2C_Type *base)`

Sends a STOP signal on the I2C bus.

This function does not return until the STOP signal is seen on the bus, or an error occurs.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `kStatus_Success` – The STOP signal was successfully sent on the bus and the transaction terminated.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

`status_t LPI2C_MasterTransferBlocking(LPI2C_Type *base, lpi2c_master_transfer_t *transfer)`

Performs a master polling transfer on the I2C bus.

Note: The API does not return until the transfer succeeds or fails due to error happens during transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `transfer` – Pointer to the transfer structure.

Return values

- `kStatus_Success` – Data was received successfully.
- `kStatus_LPI2C_Busy` – Another master is currently utilizing the bus.
- `kStatus_LPI2C_Nak` – The slave device sent a NAK in response to a byte.
- `kStatus_LPI2C_FifoError` – FIFO under run or overrun.
- `kStatus_LPI2C_ArbitrationLost` – Arbitration lost error.
- `kStatus_LPI2C_PinLowTimeout` – SCL or SDA were held low longer than the timeout.

```
void LPI2C_MasterTransferCreateHandle(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                     lpi2c_master_transfer_callback_t callback, void  
                                     *userData)
```

Creates a new handle for the LPI2C master non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_MasterTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C master driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

```
status_t LPI2C_MasterTransferNonBlocking(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                         lpi2c_master_transfer_t *transfer)
```

Performs a non-blocking transaction on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.
- `transfer` – The pointer to the transfer descriptor.

Return values

- `kStatus_Success` – The transaction was started successfully.
- `kStatus_LPI2C_Busy` – Either another master is currently utilizing the bus, or a non-blocking transaction is already in progress.

```
status_t LPI2C_MasterTransferGetCount(LPI2C_Type *base, lpi2c_master_handle_t *handle,  
                                     size_t *count)
```

Returns number of bytes transferred so far.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

- `count` – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- `kStatus_Success` –
- `kStatus_NoTransferInProgress` – There is not a non-blocking transaction currently in progress.

`void LPI2C_MasterTransferAbort(LPI2C_Type *base, lpi2c_master_handle_t *handle)`

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the LPI2C peripheral's IRQ priority.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to the LPI2C master driver handle.

`void LPI2C_MasterTransferHandleIRQ(LPI2C_Type *base, void *lpi2cMasterHandle)`

Reusable routine to handle master interrupts.

Note: This function does not need to be called unless you are reimplementing the non-blocking API's interrupt handler routines to add special functionality.

Parameters

- `base` – The LPI2C peripheral base address.
- `lpi2cMasterHandle` – Pointer to the LPI2C master driver handle.

`enum _lpi2c_master_flags`

LPI2C master peripheral flags.

The following status register flags can be cleared:

- `kLPI2C_MasterEndOfPacketFlag`
- `kLPI2C_MasterStopDetectFlag`
- `kLPI2C_MasterNackDetectFlag`
- `kLPI2C_MasterArbitrationLostFlag`
- `kLPI2C_MasterFifoErrFlag`
- `kLPI2C_MasterPinLowTimeoutFlag`
- `kLPI2C_MasterDataMatchFlag`

All flags except `kLPI2C_MasterBusyFlag` and `kLPI2C_MasterBusBusyFlag` can be enabled as interrupts.

Note: These enums are meant to be OR'd together to form a bit mask.

Values:

enumerator `kLPI2C_MasterTxReadyFlag`
Transmit data flag

- enumerator kLPI2C_MasterRxReadyFlag
Receive data flag
- enumerator kLPI2C_MasterEndOfPacketFlag
End Packet flag
- enumerator kLPI2C_MasterStopDetectFlag
Stop detect flag
- enumerator kLPI2C_MasterNackDetectFlag
NACK detect flag
- enumerator kLPI2C_MasterArbitrationLostFlag
Arbitration lost flag
- enumerator kLPI2C_MasterFifoErrFlag
FIFO error flag
- enumerator kLPI2C_MasterPinLowTimeoutFlag
Pin low timeout flag
- enumerator kLPI2C_MasterDataMatchFlag
Data match flag
- enumerator kLPI2C_MasterBusyFlag
Master busy flag
- enumerator kLPI2C_MasterBusBusyFlag
Bus busy flag
- enumerator kLPI2C_MasterClearFlags
All flags which are cleared by the driver upon starting a transfer.
- enumerator kLPI2C_MasterIrqFlags
IRQ sources enabled by the non-blocking transactional API.
- enumerator kLPI2C_MasterErrorFlags
Errors to check for.

enum _lpi2c_direction
Direction of master and slave transfers.

Values:

enumerator kLPI2C_Write
Master transmit.

enumerator kLPI2C_Read
Master receive.

enum _lpi2c_master_pin_config
LPI2C pin configuration.

Values:

enumerator kLPI2C_2PinOpenDrain
LPI2C Configured for 2-pin open drain mode

enumerator kLPI2C_2PinOutputOnly
LPI2C Configured for 2-pin output only mode (ultra-fast mode)

enumerator kLPI2C_2PinPushPull
LPI2C Configured for 2-pin push-pull mode

enumerator kLPI2C_4PinPushPull

LPI2C Configured for 4-pin push-pull mode

enumerator kLPI2C_2PinOpenDrainWithSeparateSlave

LPI2C Configured for 2-pin open drain mode with separate LPI2C slave

enumerator kLPI2C_2PinOutputOnlyWithSeparateSlave

LPI2C Configured for 2-pin output only mode(ultra-fast mode) with separate LPI2C slave

enumerator kLPI2C_2PinPushPullWithSeparateSlave

LPI2C Configured for 2-pin push-pull mode with separate LPI2C slave

enumerator kLPI2C_4PinPushPullWithInvertedOutput

LPI2C Configured for 4-pin push-pull mode(inverted outputs)

enum _lpi2c_host_request_source

LPI2C master host request selection.

Values:

enumerator kLPI2C_HostRequestExternalPin

Select the LPI2C_HREQ pin as the host request input

enumerator kLPI2C_HostRequestInputTrigger

Select the input trigger as the host request input

enum _lpi2c_host_request_polarity

LPI2C master host request pin polarity configuration.

Values:

enumerator kLPI2C_HostRequestPinActiveLow

Configure the LPI2C_HREQ pin active low

enumerator kLPI2C_HostRequestPinActiveHigh

Configure the LPI2C_HREQ pin active high

enum _lpi2c_data_match_config_mode

LPI2C master data match configuration modes.

Values:

enumerator kLPI2C_MatchDisabled

LPI2C Match Disabled

enumerator kLPI2C_1stWordEqualsM0OrM1

LPI2C Match Enabled and 1st data word equals MATCH0 OR MATCH1

enumerator kLPI2C_AnyWordEqualsM0OrM1

LPI2C Match Enabled and any data word equals MATCH0 OR MATCH1

enumerator kLPI2C_1stWordEqualsM0And2ndWordEqualsM1

LPI2C Match Enabled and 1st data word equals MATCH0, 2nd data equals MATCH1

enumerator kLPI2C_AnyWordEqualsM0AndNextWordEqualsM1

LPI2C Match Enabled and any data word equals MATCH0, next data equals MATCH1

enumerator kLPI2C_1stWordAndM1EqualsM0AndM1

LPI2C Match Enabled and 1st data word and MATCH0 equals MATCH0 and MATCH1

enumerator kLPI2C_AnyWordAndM1EqualsM0AndM1

LPI2C Match Enabled and any data word and MATCH0 equals MATCH0 and MATCH1

enum `_lpi2c_master_transfer_flags`
Transfer option flags.

Note: These enumerations are intended to be OR'd together to form a bit mask of options for the `_lpi2c_master_transfer::flags` field.

Values:

enumerator `kLPI2C_TransferDefaultFlag`
Transfer starts with a start signal, stops with a stop signal.

enumerator `kLPI2C_TransferNoStartFlag`
Don't send a start condition, address, and sub address

enumerator `kLPI2C_TransferRepeatedStartFlag`
Send a repeated start condition

enumerator `kLPI2C_TransferNoStopFlag`
Don't send a stop condition.

typedef enum `_lpi2c_direction` `lpi2c_direction_t`
Direction of master and slave transfers.

typedef enum `_lpi2c_master_pin_config` `lpi2c_master_pin_config_t`
LPI2C pin configuration.

typedef enum `_lpi2c_host_request_source` `lpi2c_host_request_source_t`
LPI2C master host request selection.

typedef enum `_lpi2c_host_request_polarity` `lpi2c_host_request_polarity_t`
LPI2C master host request pin polarity configuration.

typedef struct `_lpi2c_master_config` `lpi2c_master_config_t`
Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum `_lpi2c_data_match_config_mode` `lpi2c_data_match_config_mode_t`
LPI2C master data match configuration modes.

typedef struct `_lpi2c_match_config` `lpi2c_data_match_config_t`
LPI2C master data match configuration structure.

typedef struct `_lpi2c_master_transfer` `lpi2c_master_transfer_t`
LPI2C master descriptor of the transfer.

typedef struct `_lpi2c_master_handle` `lpi2c_master_handle_t`
LPI2C master handle of the transfer.

typedef void (`*lpi2c_master_transfer_callback_t`)(`LPI2C_Type *base`, `lpi2c_master_handle_t *handle`, `status_t completionStatus`, void `*userData`)

Master completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to `LPI2C_MasterTransferCreateHandle()`.

Param base

The LPI2C peripheral base address.

Param handle

Pointer to the LPI2C master driver handle.

Param completionStatus

Either `kStatus_Success` or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
typedef void (*lpi2c_master_isr_t)(LPI2C_Type *base, void *handle)
```

Typedef for master interrupt handler, used internally for LPI2C master interrupt and EDMA transactional APIs.

```
struct _lpi2c_master_config
```

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C master module.

This structure holds configuration settings for the LPI2C peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_MasterGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

```
bool enableMaster
```

Whether to enable master mode.

```
bool enableDoze
```

Whether master is enabled in doze mode.

```
bool debugEnable
```

Enable transfers to continue when halted in debug mode.

```
bool ignoreAck
```

Whether to ignore ACK/NACK.

```
lpi2c_master_pin_config_t pinConfig
```

The pin configuration option.

```
uint32_t baudRate_Hz
```

Desired baud rate in Hertz.

```
uint32_t busIdleTimeout_ns
```

Bus idle timeout in nanoseconds. Set to 0 to disable.

```
uint32_t pinLowTimeout_ns
```

Pin low timeout in nanoseconds. Set to 0 to disable.

```
uint8_t sdaGlitchFilterWidth_ns
```

Width in nanoseconds of glitch filter on SDA pin. Set to 0 to disable.

```
uint8_t sclGlitchFilterWidth_ns
```

Width in nanoseconds of glitch filter on SCL pin. Set to 0 to disable.

```
struct _lpi2c_master_config hostRequest
```

Host request options.

```
struct _lpi2c_match_config
```

#include <fsl_lpi2c.h> LPI2C master data match configuration structure.

Public Members

lpi2c_data_match_config_mode_t matchMode

Data match configuration setting.

bool rxDataMatchOnly

When set to true, received data is ignored until a successful match.

uint32_t match0

Match value 0.

uint32_t match1

Match value 1.

struct *_lpi2c_master_transfer*

#include <fsl_lpi2c.h> Non-blocking transfer descriptor structure.

This structure is used to pass transaction parameters to the LPI2C_MasterTransferNonBlocking() API.

Public Members

uint32_t flags

Bit mask of options for the transfer. See enumeration *_lpi2c_master_transfer_flags* for available options. Set to 0 or *kLPI2C_TransferDefaultFlag* for normal transfers.

uint16_t slaveAddress

The 7-bit slave address.

lpi2c_direction_t direction

Either *kLPI2C_Read* or *kLPI2C_Write*.

uint32_t subaddress

Sub address. Transferred MSB first.

size_t subaddressSize

Length of sub address to send in bytes. Maximum size is 4 bytes.

void *data

Pointer to data to transfer.

size_t dataSize

Number of bytes to transfer.

struct *_lpi2c_master_handle*

#include <fsl_lpi2c.h> Driver handle for master non-blocking APIs.

Note: The contents of this structure are private and subject to change.

Public Members

uint8_t state

Transfer state machine current state.

uint16_t remainingBytes

Remaining byte count in current state.

uint8_t *buf

Buffer pointer for current state.

uint16_t commandBuffer[6]

LPI2C command sequence. When all 6 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

struct hostRequest

Public Members

bool enable

Enable host request.

lpi2c_host_request_source_t source

Host request source.

lpi2c_host_request_polarity_t polarity

Host request pin polarity.

2.45 LPI2C Master DMA Driver

```
void LPI2C_MasterCreateEDMAHandle(LPI2C_Type *base, lpi2c_master_edma_handle_t *handle,
    edma_handle_t *rxDmaHandle, edma_handle_t
    *txDmaHandle, lpi2c_master_edma_transfer_callback_t
    callback, void *userData)
```

Create a new handle for the LPI2C master DMA APIs.

The creation of a handle is for use with the DMA APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the LPI2C_MasterTransferAbortEDMA() API shall be called.

For devices where the LPI2C send and receive DMA requests are OR'd together, the *txDmaHandle* parameter is ignored and may be set to NULL.

Parameters

- base – The LPI2C peripheral base address.
- handle – **[out]** Pointer to the LPI2C master driver handle.
- rxDmaHandle – Handle for the eDMA receive channel. Created by the user prior to calling this function.
- txDmaHandle – Handle for the eDMA transmit channel. Created by the user prior to calling this function.
- callback – User provided pointer to the asynchronous callback function.
- userData – User provided pointer to the application callback data.

status_t LPI2C_MasterTransferEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *lpi2c_master_transfer_t* *transfer)

Performs a non-blocking DMA-based transaction on the I2C bus.

The callback specified when the *handle* was created is invoked when the transaction has completed.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- transfer – The pointer to the transfer descriptor.

Return values

- kStatus_Success – The transaction was started successfully.
- kStatus_LPI2C_Busy – Either another master is currently utilizing the bus, or another DMA transaction is already in progress.

status_t LPI2C_MasterTransferGetCountEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle, *size_t* *count)

Returns number of bytes transferred so far.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.
- count – **[out]** Number of bytes transferred so far by the non-blocking transaction.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress – There is not a DMA transaction currently in progress.

status_t LPI2C_MasterTransferAbortEDMA(LPI2C_Type *base, *lpi2c_master_edma_handle_t* *handle)

Terminates a non-blocking LPI2C master transmission early.

Note: It is not safe to call this function from an IRQ handler that has a higher priority than the eDMA peripheral's IRQ priority.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to the LPI2C master driver handle.

Return values

- kStatus_Success – A transaction was successfully aborted.
- kStatus_LPI2C_Idle – There is not a DMA transaction currently in progress.

typedef struct *lpi2c_master_edma_handle* *lpi2c_master_edma_handle_t*

LPI2C master EDMA handle of the transfer.

```
typedef void (*lpi2c_master_edma_transfer_callback_t)(LPI2C_Type *base,
lpi2c_master_edma_handle_t *handle, status_t completionStatus, void *userData)
```

Master DMA completion callback function pointer type.

This callback is used only for the non-blocking master transfer API. Specify the callback you wish to use in the call to LPI2C_MasterCreateEDMAHandle().

Param base

The LPI2C peripheral base address.

Param handle

Handle associated with the completed transfer.

Param completionStatus

Either kStatus_Success or an error code describing how the transfer completed.

Param userData

Arbitrary pointer-sized value passed from the application.

```
struct _lpi2c_master_edma_handle
#include <fsl_lpi2c_edma.h> Driver handle for master DMA APIs.
```

Note: The contents of this structure are private and subject to change.

Public Members

LPI2C_Type *base

LPI2C base pointer.

bool isBusy

Transfer state machine current state.

uint8_t nbytes

eDMA minor byte transfer count initially configured.

uint16_t commandBuffer[20]

LPI2C command sequence. When all 10 command words are used: Start&addr&write[1 word] + subaddr[4 words] + restart&addr&read[1 word] + receive&Size[4 words]

lpi2c_master_transfer_t transfer

Copy of the current transfer info.

lpi2c_master_edma_transfer_callback_t completionCallback

Callback function pointer.

void *userData

Application data passed to callback.

edma_handle_t *rx

Handle for receive DMA channel.

edma_handle_t *tx

Handle for transmit DMA channel.

edma_tcd_t tcds[3]

Software TCD. Three are allocated to provide enough room to align to 32-bytes.

2.46 LPI2C Slave Driver

`void LPI2C_SlaveGetDefaultConfig(lpi2c_slave_config_t *slaveConfig)`

Provides a default configuration for the LPI2C slave peripheral.

This function provides the following default configuration for the LPI2C slave peripheral:

```
slaveConfig->enableSlave           = true;
slaveConfig->address0              = 0U;
slaveConfig->address1              = 0U;
slaveConfig->addressMatchMode      = kLPI2C_MatchAddress0;
slaveConfig->filterDozeEnable      = true;
slaveConfig->filterEnable          = true;
slaveConfig->enableGeneralCall     = false;
slaveConfig->sciStall.enableAck    = false;
slaveConfig->sciStall.enableTx     = true;
slaveConfig->sciStall.enableRx     = true;
slaveConfig->sciStall.enableAddress = true;
slaveConfig->ignoreAck             = false;
slaveConfig->enableReceivedAddressRead = false;
slaveConfig->sdaGlitchFilterWidth_ns = 0;
slaveConfig->sciGlitchFilterWidth_ns = 0;
slaveConfig->dataValidDelay_ns     = 0;
slaveConfig->clockHoldTime_ns      = 0;
```

After calling this function, override any settings to customize the configuration, prior to initializing the master driver with `LPI2C_SlaveInit()`. Be sure to override at least the *address0* member of the configuration structure with the desired slave address.

Parameters

- *slaveConfig* – **[out]** User provided configuration structure that is set to default values. Refer to `lpi2c_slave_config_t`.

`void LPI2C_SlaveInit(LPI2C_Type *base, const lpi2c_slave_config_t *slaveConfig, uint32_t sourceClock_Hz)`

Initializes the LPI2C slave peripheral.

This function enables the peripheral clock and initializes the LPI2C slave peripheral as described by the user provided configuration.

Parameters

- *base* – The LPI2C peripheral base address.
- *slaveConfig* – User provided peripheral configuration. Use `LPI2C_SlaveGetDefaultConfig()` to get a set of defaults that you can override.
- *sourceClock_Hz* – Frequency in Hertz of the LPI2C functional clock. Used to calculate the filter widths, data valid delay, and clock hold time.

`void LPI2C_SlaveDeinit(LPI2C_Type *base)`

Deinitializes the LPI2C slave peripheral.

This function disables the LPI2C slave peripheral and gates the clock. It also performs a software reset to restore the peripheral to reset conditions.

Parameters

- *base* – The LPI2C peripheral base address.

`static inline void LPI2C_SlaveReset(LPI2C_Type *base)`

Performs a software reset of the LPI2C slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

```
static inline void LPI2C_SlaveEnable(LPI2C_Type *base, bool enable)
```

Enables or disables the LPI2C module as slave.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – Pass true to enable or false to disable the specified LPI2C as slave.

```
static inline uint32_t LPI2C_SlaveGetStatusFlags(LPI2C_Type *base)
```

Gets the LPI2C slave status flags.

A bit mask with the state of all LPI2C slave status flags is returned. For each flag, the corresponding bit in the return value is set if the flag is asserted.

See also:

`_lpi2c_slave_flags`

Parameters

- `base` – The LPI2C peripheral base address.

Returns

State of the status flags:

- 1: related status flag is set.
- 0: related status flag is not set.

```
static inline void LPI2C_SlaveClearStatusFlags(LPI2C_Type *base, uint32_t statusMask)
```

Clears the LPI2C status flag state.

The following status register flags can be cleared:

- `kLPI2C_SlaveRepeatedStartDetectFlag`
- `kLPI2C_SlaveStopDetectFlag`
- `kLPI2C_SlaveBitErrFlag`
- `kLPI2C_SlaveFifoErrFlag`

Attempts to clear other flags has no effect.

See also:

`_lpi2c_slave_flags`.

Parameters

- `base` – The LPI2C peripheral base address.
- `statusMask` – A bitmask of status flags that are to be cleared. The mask is composed of `_lpi2c_slave_flags` enumerators OR'd together. You may pass the result of a previous call to `LPI2C_SlaveGetStatusFlags()`.

```
static inline void LPI2C_SlaveEnableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Enables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.

- `interruptMask` – Bit mask of interrupts to enable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline void LPI2C_SlaveDisableInterrupts(LPI2C_Type *base, uint32_t interruptMask)
```

Disables the LPI2C slave interrupt requests.

All flags except `kLPI2C_SlaveBusyFlag` and `kLPI2C_SlaveBusBusyFlag` can be enabled as interrupts.

Parameters

- `base` – The LPI2C peripheral base address.
- `interruptMask` – Bit mask of interrupts to disable. See `_lpi2c_slave_flags` for the set of constants that should be OR'd together to form the bit mask.

```
static inline uint32_t LPI2C_SlaveGetEnabledInterrupts(LPI2C_Type *base)
```

Returns the set of currently enabled LPI2C slave interrupt requests.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

A bitmask composed of `_lpi2c_slave_flags` enumerators OR'd together to indicate the set of enabled interrupts.

```
static inline void LPI2C_SlaveEnableDMA(LPI2C_Type *base, bool enableAddressValid, bool enableRx, bool enableTx)
```

Enables or disables the LPI2C slave peripheral DMA requests.

Parameters

- `base` – The LPI2C peripheral base address.
- `enableAddressValid` – Enable flag for the address valid DMA request. Pass true for enable, false for disable. The address valid DMA request is shared with the receive data DMA request.
- `enableRx` – Enable flag for the receive data DMA request. Pass true for enable, false for disable.
- `enableTx` – Enable flag for the transmit data DMA request. Pass true for enable, false for disable.

```
static inline bool LPI2C_SlaveGetBusIdleState(LPI2C_Type *base)
```

Returns whether the bus is idle.

Requires the slave mode to be enabled.

Parameters

- `base` – The LPI2C peripheral base address.

Return values

- `true` – Bus is busy.
- `false` – Bus is idle.

```
static inline void LPI2C_SlaveTransmitAck(LPI2C_Type *base, bool ackOrNack)
```

Transmits either an ACK or NAK on the I2C bus in response to a byte from the master.

Use this function to send an ACK or NAK when the `kLPI2C_SlaveTransmitAckFlag` is asserted. This only happens if you enable the `sclStall.enableAck` field of the `lpi2c_slave_config_t` configuration structure used to initialize the slave peripheral.

Parameters

- `base` – The LPI2C peripheral base address.

- `ackOrNack` – Pass true for an ACK or false for a NAK.

```
static inline void LPI2C_SlaveEnableAckStall(LPI2C_Type *base, bool enable)
```

Enables or disables ACKSTALL.

When enables ACKSTALL, software can transmit either an ACK or NAK on the I2C bus in response to a byte from the master.

Parameters

- `base` – The LPI2C peripheral base address.
- `enable` – True will enable ACKSTALL, false will disable ACKSTALL.

```
static inline uint32_t LPI2C_SlaveGetReceivedAddress(LPI2C_Type *base)
```

Returns the slave address sent by the I2C master.

This function should only be called if the `kLPI2C_SlaveAddressValidFlag` is asserted.

Parameters

- `base` – The LPI2C peripheral base address.

Returns

The 8-bit address matched by the LPI2C slave. Bit 0 contains the R/w direction bit, and the 7-bit slave address is in the upper 7 bits.

```
status_t LPI2C_SlaveSend(LPI2C_Type *base, void *txBuff, size_t txSize, size_t *actualTxSize)
```

Performs a polling send transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `txBuff` – The pointer to the data to be transferred.
- `txSize` – The length in bytes of the data to be transferred.
- `actualTxSize` – **[out]**

Returns

Error or success status returned by API.

```
status_t LPI2C_SlaveReceive(LPI2C_Type *base, void *rxBuff, size_t rxSize, size_t *actualRxSize)
```

Performs a polling receive transfer on the I2C bus.

Parameters

- `base` – The LPI2C peripheral base address.
- `rxBuff` – The pointer to the data to be transferred.
- `rxSize` – The length in bytes of the data to be transferred.
- `actualRxSize` – **[out]**

Returns

Error or success status returned by API.

```
void LPI2C_SlaveTransferCreateHandle(LPI2C_Type *base, lpi2c_slave_handle_t *handle,  
                                   lpi2c_slave_transfer_callback_t callback, void *userData)
```

Creates a new handle for the LPI2C slave non-blocking APIs.

The creation of a handle is for use with the non-blocking APIs. Once a handle is created, there is not a corresponding destroy handle. If the user wants to terminate a transfer, the `LPI2C_SlaveTransferAbort()` API shall be called.

Note: The function also enables the NVIC IRQ for the input LPI2C. Need to notice that on some SoCs the LPI2C IRQ is connected to INTMUX, in this case user needs to enable the associated INTMUX IRQ in application.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – **[out]** Pointer to the LPI2C slave driver handle.
- `callback` – User provided pointer to the asynchronous callback function.
- `userData` – User provided pointer to the application callback data.

`status_t` LPI2C_SlaveTransferNonBlocking(LPI2C_Type *base, lpi2c_slave_handle_t *handle, uint32_t eventMask)

Starts accepting slave transfers.

Call this API after calling I2C_SlaveInit() and LPI2C_SlaveTransferCreateHandle() to start processing transactions driven by an I2C master. The slave monitors the I2C bus and pass events to the callback that was passed into the call to LPI2C_SlaveTransferCreateHandle(). The callback is always invoked from the interrupt context.

The set of events received by the callback is customizable. To do so, set the `eventMask` parameter to the OR'd combination of `lpi2c_slave_transfer_event_t` enumerators for the events you wish to receive. The `kLPI2C_SlaveTransmitEvent` and `kLPI2C_SlaveReceiveEvent` events are always enabled and do not need to be included in the mask. Alternatively, you can pass 0 to get a default set of only the transmit and receive events that are always enabled. In addition, the `kLPI2C_SlaveAllEvents` constant is provided as a convenient way to enable all events.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to `lpi2c_slave_handle_t` structure which stores the transfer state.
- `eventMask` – Bit mask formed by OR'ing together `lpi2c_slave_transfer_event_t` enumerators to specify which events to send to the callback. Other accepted values are 0 to get a default set of only the transmit and receive events, and `kLPI2C_SlaveAllEvents` to enable all events.

Return values

- `kStatus_Success` – Slave transfers were successfully started.
- `kStatus_LPI2C_Busy` – Slave transfers have already been started on this handle.

`status_t` LPI2C_SlaveTransferGetCount(LPI2C_Type *base, lpi2c_slave_handle_t *handle, size_t *count)

Gets the slave transfer status during a non-blocking transfer.

Parameters

- `base` – The LPI2C peripheral base address.
- `handle` – Pointer to `i2c_slave_handle_t` structure.
- `count` – **[out]** Pointer to a value to hold the number of bytes transferred. May be NULL if the count is not required.

Return values

- kStatus_Success –
- kStatus_NoTransferInProgress –

void LPI2C_SlaveTransferAbort(LPI2C_Type *base, lpi2c_slave_handle_t *handle)

Aborts the slave non-blocking transfers.

Note: This API could be called at any time to stop slave for handling the bus events.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

void LPI2C_SlaveTransferHandleIRQ(LPI2C_Type *base, lpi2c_slave_handle_t *handle)

Reusable routine to handle slave interrupts.

Note: This function does not need to be called unless you are reimplementing the non blocking API's interrupt handler routines to add special functionality.

Parameters

- base – The LPI2C peripheral base address.
- handle – Pointer to lpi2c_slave_handle_t structure which stores the transfer state.

enum _lpi2c_slave_flags

LPI2C slave peripheral flags.

The following status register flags can be cleared:

- kLPI2C_SlaveRepeatedStartDetectFlag
- kLPI2C_SlaveStopDetectFlag
- kLPI2C_SlaveBitErrFlag
- kLPI2C_SlaveFifoErrFlag

All flags except kLPI2C_SlaveBusyFlag and kLPI2C_SlaveBusBusyFlag can be enabled as interrupts.

Note: These enumerations are meant to be OR'd together to form a bit mask.

Values:

enumerator kLPI2C_SlaveTxReadyFlag

Transmit data flag

enumerator kLPI2C_SlaveRxReadyFlag

Receive data flag

enumerator kLPI2C_SlaveAddressValidFlag

Address valid flag

enumerator kLPI2C_SlaveTransmitAckFlag

Transmit ACK flag

enumerator kLPI2C_SlaveRepeatedStartDetectFlag

Repeated start detect flag

enumerator kLPI2C_SlaveStopDetectFlag

Stop detect flag

enumerator kLPI2C_SlaveBitErrFlag

Bit error flag

enumerator kLPI2C_SlaveFifoErrFlag

FIFO error flag

enumerator kLPI2C_SlaveAddressMatch0Flag

Address match 0 flag

enumerator kLPI2C_SlaveAddressMatch1Flag

Address match 1 flag

enumerator kLPI2C_SlaveGeneralCallFlag

General call flag

enumerator kLPI2C_SlaveBusyFlag

Master busy flag

enumerator kLPI2C_SlaveBusBusyFlag

Bus busy flag

enumerator kLPI2C_SlaveClearFlags

All flags which are cleared by the driver upon starting a transfer.

enumerator kLPI2C_SlaveIrqFlags

IRQ sources enabled by the non-blocking transactional API.

enumerator kLPI2C_SlaveErrorFlags

Errors to check for.

enum _lpi2c_slave_address_match

LPI2C slave address match options.

Values:

enumerator kLPI2C_MatchAddress0

Match only address 0.

enumerator kLPI2C_MatchAddress0OrAddress1

Match either address 0 or address 1.

enumerator kLPI2C_MatchAddress0ThroughAddress1

Match a range of slave addresses from address 0 through address 1.

enum _lpi2c_slave_transfer_event

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `LPI2C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

Values:

enumerator kLPI2C_SlaveAddressMatchEvent

Received the slave address after a start or repeated start.

enumerator kLPI2C_SlaveTransmitEvent

Callback is requested to provide data to transmit (slave-transmitter role).

enumerator kLPI2C_SlaveReceiveEvent

Callback is requested to provide a buffer in which to place received data (slave-receiver role).

enumerator kLPI2C_SlaveTransmitAckEvent

Callback needs to either transmit an ACK or NACK.

enumerator kLPI2C_SlaveRepeatedStartEvent

A repeated start was detected.

enumerator kLPI2C_SlaveCompletionEvent

A stop was detected, completing the transfer.

enumerator kLPI2C_SlaveAllEvents

Bit mask of all available events.

typedef enum *_lpi2c_slave_address_match* lpi2c_slave_address_match_t

LPI2C slave address match options.

typedef struct *_lpi2c_slave_config* lpi2c_slave_config_t

Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the `LPI2C_SlaveGetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

typedef enum *_lpi2c_slave_transfer_event* lpi2c_slave_transfer_event_t

Set of events sent to the callback for non blocking slave transfers.

These event enumerations are used for two related purposes. First, a bit mask created by OR'ing together events is passed to `LPI2C_SlaveTransferNonBlocking()` in order to specify which events to enable. Then, when the slave callback is invoked, it is passed the current event through its *transfer* parameter.

Note: These enumerations are meant to be OR'd together to form a bit mask of events.

typedef struct *_lpi2c_slave_transfer* lpi2c_slave_transfer_t

LPI2C slave transfer structure.

typedef struct *_lpi2c_slave_handle* lpi2c_slave_handle_t

LPI2C slave handle structure.

typedef void (*lpi2c_slave_transfer_callback_t)(LPI2C_Type *base, lpi2c_slave_transfer_t *transfer, void *userData)

Slave event callback function pointer type.

This callback is used only for the slave non-blocking transfer API. To install a callback, use the `LPI2C_SlaveSetCallback()` function after you have created a handle.

Param base

Base address for the LPI2C instance on which the event occurred.

Param transfer

Pointer to transfer descriptor containing values passed to and/or from the callback.

Param userData

Arbitrary pointer-sized value passed from the application.

struct _lpi2c_slave_config

#include <fsl_lpi2c.h> Structure with settings to initialize the LPI2C slave module.

This structure holds configuration settings for the LPI2C slave peripheral. To initialize this structure to reasonable defaults, call the LPI2C_SlaveGetDefaultConfig() function and pass a pointer to your configuration structure instance.

The configuration structure can be made constant so it resides in flash.

Public Members

bool enableSlave

Enable slave mode.

uint8_t address0

Slave's 7-bit address.

uint8_t address1

Alternate slave 7-bit address.

lpi2c_slave_address_match_t addressMatchMode

Address matching options.

bool filterDozeEnable

Enable digital glitch filter in doze mode.

bool filterEnable

Enable digital glitch filter.

bool enableGeneralCall

Enable general call address matching.

struct _lpi2c_slave_config sclStall

SCL stall enable options.

bool ignoreAck

Continue transfers after a NACK is detected.

bool enableReceivedAddressRead

Enable reading the address received address as the first byte of data.

uint32_t sdaGlitchFilterWidth_ns

Width in nanoseconds of the digital filter on the SDA signal. Set to 0 to disable.

uint32_t sclGlitchFilterWidth_ns

Width in nanoseconds of the digital filter on the SCL signal. Set to 0 to disable.

uint32_t dataValidDelay_ns

Width in nanoseconds of the data valid delay.

uint32_t clockHoldTime_ns

Width in nanoseconds of the clock hold time.

struct _lpi2c_slave_transfer

#include <fsl_lpi2c.h> LPI2C slave transfer structure.

Public Members

lpi2c_slave_transfer_event_t event

Reason the callback is being invoked.

uint8_t receivedAddress

Matching address send by master.

uint8_t *data

Transfer buffer

size_t dataSize

Transfer size

status_t completionStatus

Success or error code describing how the transfer completed. Only applies for kLPI2C_SlaveCompletionEvent.

size_t transferredCount

Number of bytes actually transferred since start or last repeated start.

struct *_lpi2c_slave_handle*

#include <fsl_lpi2c.h> LPI2C slave handle structure.

Note: The contents of this structure are private and subject to change.

Public Members

lpi2c_slave_transfer_t transfer

LPI2C slave transfer copy.

bool isBusy

Whether transfer is busy.

bool wasTransmit

Whether the last transfer was a transmit.

uint32_t eventMask

Mask of enabled events.

uint32_t transferredCount

Count of bytes transferred.

lpi2c_slave_transfer_callback_t callback

Callback function called at transfer event.

void *userData

Callback parameter passed to callback.

struct sclStall

Public Members

bool enableAck

Enables SCL clock stretching during slave-transmit address byte(s) and slave-receiver address and data byte(s) to allow software to write the Transmit ACK Register before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the 9th bit. When enableAckSCLStall is enabled, there is no need to set either enableRxDataSCLStall or enableAddressSCLStall.

bool enableTx

Enables SCL clock stretching when the transmit data flag is set during a slave-transmit transfer.

bool enableRx

Enables SCL clock stretching when receive data flag is set during a slave-receive transfer.

bool enableAddress

Enables SCL clock stretching when the address valid flag is asserted.

2.47 LPSPI: Low Power Serial Peripheral Interface

2.48 LPSPI Peripheral driver

```
void LPSPI_MasterInit(LPSPI_Type *base, const lpspi_master_config_t *masterConfig, uint32_t srcClock_Hz)
```

Initializes the LPSPI master.

Parameters

- base – LPSPI peripheral address.
- masterConfig – Pointer to structure *lpspi_master_config_t*.
- srcClock_Hz – Module source input clock in Hertz

```
void LPSPI_MasterGetDefaultConfig(lpspi_master_config_t *masterConfig)
```

Sets the *lpspi_master_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_MasterInit(). The initialized structure can remain unchanged in LPSPI_MasterInit(), or can be modified before calling the LPSPI_MasterInit(). Example:

```
lpspi_master_config_t masterConfig;  
LPSPI_MasterGetDefaultConfig(&masterConfig);
```

Parameters

- masterConfig – pointer to *lpspi_master_config_t* structure

```
void LPSPI_SlaveInit(LPSPI_Type *base, const lpspi_slave_config_t *slaveConfig)
```

LPSPI slave configuration.

Parameters

- base – LPSPI peripheral address.
- slaveConfig – Pointer to a structure *lpspi_slave_config_t*.

```
void LPSPI_SlaveGetDefaultConfig(lpspi_slave_config_t *slaveConfig)
```

Sets the *lpspi_slave_config_t* structure to default values.

This API initializes the configuration structure for LPSPI_SlaveInit(). The initialized structure can remain unchanged in LPSPI_SlaveInit() or can be modified before calling the LPSPI_SlaveInit(). Example:

```
lpspi_slave_config_t slaveConfig;  
LPSPI_SlaveGetDefaultConfig(&slaveConfig);
```

Parameters

- slaveConfig – pointer to lpspi_slave_config_t structure.

void LPSPI_Deinit(LPSPI_Type *base)

De-initializes the LPSPI peripheral. Call this API to disable the LPSPI clock.

Parameters

- base – LPSPI peripheral address.

void LPSPI_Reset(LPSPI_Type *base)

Restores the LPSPI peripheral to reset state. Note that this function sets all registers to reset state. As a result, the LPSPI module can't work after calling this API.

Parameters

- base – LPSPI peripheral address.

uint32_t LPSPI_GetInstance(LPSPI_Type *base)

Get the LPSPI instance from peripheral base address.

Parameters

- base – LPSPI peripheral base address.

Returns

LPSPI instance.

static inline void LPSPI_Enable(LPSPI_Type *base, bool enable)

Enables the LPSPI peripheral and sets the MCR MDIS to 0.

Parameters

- base – LPSPI peripheral address.
- enable – Pass true to enable module, false to disable module.

static inline uint32_t LPSPI_GetStatusFlags(LPSPI_Type *base)

Gets the LPSPI status flag state.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI status(in SR register).

static inline uint8_t LPSPI_GetTxFifoSize(LPSPI_Type *base)

Gets the LPSPI Tx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Tx FIFO size.

static inline uint8_t LPSPI_GetRxFifoSize(LPSPI_Type *base)

Gets the LPSPI Rx FIFO size.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Rx FIFO size.

static inline uint32_t LPSPI_GetTxFifoCount(LPSPI_Type *base)

Gets the LPSPI Tx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the transmit FIFO.

```
static inline uint32_t LPSPI_GetRxFifoCount(LPSPI_Type *base)
```

Gets the LPSPI Rx FIFO count.

Parameters

- base – LPSPI peripheral address.

Returns

The number of words in the receive FIFO.

```
static inline void LPSPI_ClearStatusFlags(LPSPI_Type *base, uint32_t statusFlags)
```

Clears the LPSPI status flag.

This function clears the desired status bit by using a write-1-to-clear. The user passes in the base and the desired status flag bit to clear. The list of status flags is defined in the `_lpspi_flags`. Example usage:

```
LPSPI_ClearStatusFlags(base, kLPSPI_TxDataRequestFlag|kLPSPI_RxDataReadyFlag);
```

Parameters

- base – LPSPI peripheral address.
- statusFlags – The status flag used from type `_lpspi_flags`.

```
static inline uint32_t LPSPI_GetTcr(LPSPI_Type *base)
```

```
static inline void LPSPI_EnableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI interrupts.

This function configures the various interrupt masks of the LPSPI. The parameters are base and an interrupt mask. Note that, for Tx fill and Rx FIFO drain requests, enabling the interrupt request disables the DMA request.

```
LPSPI_EnableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_DisableInterrupts(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI interrupts.

```
LPSPI_DisableInterrupts(base, kLPSPI_TxInterruptEnable | kLPSPI_RxInterruptEnable );
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_interrupt_enable`.

```
static inline void LPSPI_EnableDMA(LPSPI_Type *base, uint32_t mask)
```

Enables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
LPSPI_EnableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline void LPSPI_DisableDMA(LPSPI_Type *base, uint32_t mask)
```

Disables the LPSPI DMA request.

This function configures the Rx and Tx DMA mask of the LPSPI. The parameters are base and a DMA mask.

```
SPI_DisableDMA(base, kLPSPI_TxDmaEnable | kLPSPI_RxDmaEnable);
```

Parameters

- base – LPSPI peripheral address.
- mask – The interrupt mask; Use the enum `_lpspi_dma_enable`.

```
static inline uint32_t LPSPI_GetTxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Transmit Data Register address for a DMA operation.

This function gets the LPSPI Transmit Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Transmit Data Register address.

```
static inline uint32_t LPSPI_GetRxRegisterAddress(LPSPI_Type *base)
```

Gets the LPSPI Receive Data Register address for a DMA operation.

This function gets the LPSPI Receive Data Register address because this value is needed for the DMA operation. This function can be used for either master or slave mode.

Parameters

- base – LPSPI peripheral address.

Returns

The LPSPI Receive Data Register address.

```
bool LPSPI_CheckTransferArgument(LPSPI_Type *base, lpspi_transfer_t *transfer, bool isEdma)
```

Check the argument for transfer .

Parameters

- base – LPSPI peripheral address.
- transfer – the transfer struct to be used.
- isEdma – True to check for EDMA transfer, false to check interrupt non-blocking transfer

Returns

Return true for right and false for wrong.

```
static inline void LPSPI_SetMasterSlaveMode(LPSPI_Type *base, lpspi_master_slave_mode_t mode)
```

Configures the LPSPI for either master or slave.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

Parameters

- `base` – LPSPI peripheral address.
- `mode` – Mode setting (master or slave) of type `lpspi_master_slave_mode_t`.

```
static inline void LPSPI_SelectTransferPCS(LPSPI_Type *base, lpspi_which_pcs_t select)
```

Configures the peripheral chip select used for the transfer.

Parameters

- `base` – LPSPI peripheral address.
- `select` – LPSPI Peripheral Chip Select (PCS) configuration.

```
static inline void LPSPI_SetPCSContinuous(LPSPI_Type *base, bool IsContinuous)
```

Set the PCS signal to continuous or uncontinuous mode.

Note: In master mode, continuous transfer will keep the PCS asserted at the end of the frame size, until a command word is received that starts a new frame. So PCS must be set back to uncontinuous when transfer finishes. In slave mode, when continuous transfer is enabled, the LPSPI will only transmit the first frame size bits, after that the LPSPI will transmit received data back (assuming a 32-bit shift register).

Parameters

- `base` – LPSPI peripheral address.
- `IsContinuous` – True to set the transfer PCS to continuous mode, false to set to uncontinuous mode.

```
static inline bool LPSPI_IsMaster(LPSPI_Type *base)
```

Returns whether the LPSPI module is in master mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

Returns true if the module is in master mode or false if the module is in slave mode.

```
static inline void LPSPI_FlushFifo(LPSPI_Type *base, bool flushTxFifo, bool flushRxFifo)
```

Flushes the LPSPI FIFOs.

Parameters

- `base` – LPSPI peripheral address.
- `flushTxFifo` – Flushes (true) the Tx FIFO, else do not flush (false) the Tx FIFO.
- `flushRxFifo` – Flushes (true) the Rx FIFO, else do not flush (false) the Rx FIFO.

```
static inline void LPSPI_SetFifoWatermarks(LPSPI_Type *base, uint32_t txWater, uint32_t rxWater)
```

Sets the transmit and receive FIFO watermark values.

This function allows the user to set the receive and transmit FIFO watermarks. The function does not compare the watermark settings to the FIFO size. The FIFO watermark should not be equal to or greater than the FIFO size. It is up to the higher level driver to make this check.

Parameters

- `base` – LPSPI peripheral address.
- `txWater` – The TX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

- rxWater – The RX FIFO watermark value. Writing a value equal or greater than the FIFO size is truncated.

```
static inline void LPSPI_SetAllPcsPolarity(LPSPI_Type *base, uint32_t mask)
```

Configures all LPSPI peripheral chip select polarities simultaneously.

Note that the CFGR1 should only be written when the LPSPI is disabled (LPSPIx_CR_MEN = 0).

This is an example: PCS0 and PCS1 set to active low and other PCSs set to active high. Note that the number of PCS is device-specific.

```
LPSPI_SetAllPcsPolarity(base, kLPSPI_Pcs0ActiveLow | kLPSPI_Pcs1ActiveLow);
```

Parameters

- base – LPSPI peripheral address.
- mask – The PCS polarity mask; Use the enum `_lpspi_pcs_polarity`.

```
static inline void LPSPI_SetFrameSize(LPSPI_Type *base, uint32_t frameSize)
```

Configures the frame size.

The minimum frame size is 8-bits and the maximum frame size is 4096-bits. If the frame size is less than or equal to 32-bits, the word size and frame size are identical. If the frame size is greater than 32-bits, the word size is 32-bits for each word except the last (the last word contains the remainder bits if the frame size is not divisible by 32). The minimum word size is 2-bits. A frame size of 33-bits (or similar) is not supported.

Note 1: The transmit command register should be initialized before enabling the LPSPI in slave mode, although the command register does not update until after the LPSPI is enabled. After it is enabled, the transmit command register should only be changed if the LPSPI is idle.

Note 2: The transmit and command FIFO is a combined FIFO that includes both transmit data and command words. That means the TCR register should be written to when the Tx FIFO is not full.

Parameters

- base – LPSPI peripheral address.
- frameSize – The frame size in number of bits.

```
uint32_t LPSPI_MasterSetBaudRate(LPSPI_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz, uint32_t *tcrPrescaleValue)
```

Sets the LPSPI baud rate in bits per second.

This function takes in the desired bitsPerSec (baud rate) and calculates the nearest possible baud rate without exceeding the desired baud rate and returns the calculated baud rate in bits-per-second. It requires the caller to provide the frequency of the module source clock (in Hertz). Note that the baud rate does not go into effect until the Transmit Control Register (TCR) is programmed with the prescale value. Hence, this function returns the prescale `tcrPrescaleValue` parameter for later programming in the TCR. The higher level peripheral driver should alert the user of an out of range baud rate input.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- base – LPSPI peripheral address.
- baudRate_Bps – The desired baud rate in bits per second.
- srcClock_Hz – Module source input clock in Hertz.

- `tcrPrescaleValue` – The TCR prescale value needed to program the TCR.

Returns

The actual calculated baud rate. This function may also return a “0” if the LPSPI is not configured for master mode or if the LPSPI module is not disabled.

```
void LPSPI_MasterSetDelayScaler(LPSPI_Type *base, uint32_t scaler, lpspi_delay_type_t
                               whichDelay)
```

Manually configures a specific LPSPI delay parameter (module must be disabled to change the delay values).

This function configures the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay along with the delay value. This allows the user to directly set the delay values if they have pre-calculated them or if they simply wish to manually increment the value.

Note that the LPSPI module must first be disabled before configuring this. Note that the LPSPI module must be configured for master mode before configuring this.

Parameters

- `base` – LPSPI peripheral address.
- `scaler` – The 8-bit delay value 0x00 to 0xFF (255).
- `whichDelay` – The desired delay to configure, must be of type `lpspi_delay_type_t`.

```
uint32_t LPSPI_MasterSetDelayTimes(LPSPI_Type *base, uint32_t delayTimeInNanoSec,
                                   lpspi_delay_type_t whichDelay, uint32_t srcClock_Hz)
```

Calculates the delay based on the desired delay input in nanoseconds (module must be disabled to change the delay values).

This function calculates the values for the following: SCK to PCS delay, or PCS to SCK delay, or The configurations must occur between the transfer delay.

The delay names are available in type `lpspi_delay_type_t`.

The user passes the desired delay and the desired delay value in nano-seconds. The function calculates the value needed for the desired delay parameter and returns the actual calculated delay because an exact delay match may not be possible. In this case, the closest match is calculated without going below the desired delay value input. It is possible to input a very large delay value that exceeds the capability of the part, in which case the maximum supported delay is returned. It is up to the higher level peripheral driver to alert the user of an out of range delay input.

Note that the LPSPI module must be configured for master mode before configuring this. And note that the `delayTime = LPSPI_clockSource / (PRESCALE * Delay_scaler)`.

Parameters

- `base` – LPSPI peripheral address.
- `delayTimeInNanoSec` – The desired delay value in nano-seconds.
- `whichDelay` – The desired delay to configuration, which must be of type `lpspi_delay_type_t`.
- `srcClock_Hz` – Module source input clock in Hertz.

Returns

actual Calculated delay value in nano-seconds.


```
static inline void LPSPI_WriteData(LPSPI_Type *base, uint32_t data)
```

Writes data into the transmit data buffer.

This function writes data passed in by the user to the Transmit Data Register (TDR). The user can pass up to 32-bits of data to load into the TDR. If the frame size exceeds 32-bits, the user has to manage sending the data one 32-bit word at a time. Any writes to the TDR result in an immediate push to the transmit FIFO. This function can be used for either master or slave modes.

Parameters

- `base` – LPSPI peripheral address.
- `data` – The data word to be sent.

```
static inline uint32_t LPSPI_ReadData(LPSPI_Type *base)
```

Reads data from the data buffer.

This function reads the data from the Receive Data Register (RDR). This function can be used for either master or slave mode.

Parameters

- `base` – LPSPI peripheral address.

Returns

The data read from the data buffer.

```
void LPSPI_SetDummyData(LPSPI_Type *base, uint8_t dummyData)
```

Set up the dummy data.

Parameters

- `base` – LPSPI peripheral address.
- `dummyData` – Data to be transferred when tx buffer is NULL. Note: This API has no effect when LPSPI in slave interrupt mode, because driver will set the TXMSK bit to 1 if txData is NULL, no data is loaded from transmit FIFO and output pin is tristated.

```
void LPSPI_MasterTransferCreateHandle(LPSPI_Type *base, lpspi_master_handle_t *handle,
                                     lpspi_master_transfer_callback_t callback, void
                                     *userData)
```

Initializes the LPSPI master handle.

This function initializes the LPSPI handle, which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Parameters

- `base` – LPSPI peripheral address.
- `handle` – LPSPI handle pointer to `lpspi_master_handle_t`.
- `callback` – DSPI callback.
- `userData` – callback function parameter.

```
status_t LPSPI_MasterTransferBlocking(LPSPI_Type *base, lpspi_transfer_t *transfer)
```

LPSPI master transfer data using a polling method.

This function transfers data using a polling method. This is a blocking function, which does not return until all transfers have been completed.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferNonBlocking(LPSPI_Type *base, *lpspi_master_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using an interrupt method.

This function transfers data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not integer multiples of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferGetCount(LPSPI_Type *base, *lpspi_master_handle_t* *handle, `size_t` *count)

Gets the master transfer remaining bytes.

This function gets the master transfer remaining bytes.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

`void` LPSPI_MasterTransferAbort(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI master abort transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

`void` LPSPI_MasterTransferHandleIRQ(LPSPI_Type *base, *lpspi_master_handle_t* *handle)

LPSPI Master IRQ handler function.

This function processes the LPSPI transmit and receive IRQ.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_master_handle_t` structure which stores the transfer state.

```
void LPSPI_SlaveTransferCreateHandle(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                     lpspi_slave_transfer_callback_t callback, void *userData)
```

Initializes the LPSPi slave handle.

This function initializes the LPSPi handle, which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Parameters

- base – LPSPi peripheral address.
- handle – LPSPi handle pointer to `lpspi_slave_handle_t`.
- callback – DSPI callback.
- userData – callback function parameter.

```
status_t LPSPI_SlaveTransferNonBlocking(LPSPI_Type *base, lpspi_slave_handle_t *handle,
                                         lpspi_transfer_t *transfer)
```

LPSPi slave transfer data using an interrupt method.

This function transfer data using an interrupt method. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be integer multiples of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

```
status_t LPSPI_SlaveTransferGetCount(LPSPI_Type *base, lpspi_slave_handle_t *handle, size_t
                                     *count)
```

Gets the slave transfer remaining bytes.

This function gets the slave transfer remaining bytes.

Parameters

- base – LPSPi peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the non-blocking transaction.

Returns

status of `status_t`.

```
void LPSPI_SlaveTransferAbort(LPSPI_Type *base, lpspi_slave_handle_t *handle)
```

LPSPi slave aborts a transfer which uses an interrupt method.

This function aborts a transfer which uses an interrupt method.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`void LPSPI_SlaveTransferHandleIRQ(LPSPI_Type *base, lpspi_slave_handle_t *handle)`
 LPSPI Slave IRQ handler function.

This function processes the LPSPI transmit and receives an IRQ.

Parameters

- base – LPSPI peripheral address.
- handle – pointer to `lpspi_slave_handle_t` structure which stores the transfer state.

`bool LPSPI_WaitTxFifoEmpty(LPSPI_Type *base)`
 Wait for tx FIFO to be empty.

This function wait the tx fifo empty

Parameters

- base – LPSPI peripheral address.

Returns

true for the tx FIFO is ready, false is not.

`void LPSPI_DriverIRQHandler(uint32_t instance)`
 LPSPI driver IRQ handler common entry.

This function provides the common IRQ request entry for LPSPI.

Parameters

- instance – LPSPI instance.

`FSL_LPSPI_DRIVER_VERSION`
 LPSPI driver version.

Status for the LPSPI driver.

Values:

enumerator `kStatus_LPSPI_Busy`
 LPSPI transfer is busy.

enumerator `kStatus_LPSPI_Error`
 LPSPI driver error.

enumerator `kStatus_LPSPI_Idle`
 LPSPI is idle.

enumerator `kStatus_LPSPI_OutOfRange`
 LPSPI transfer out Of range.

enumerator `kStatus_LPSPI_Timeout`
 LPSPI timeout polling status flags.

`enum _lpspi_flags`
 LPSPI status flags in SPIx_SR register.

Values:

enumerator `kLPSPI_TxDataRequestFlag`
 Transmit data flag

enumerator kLPSPI_RxDataReadyFlag
Receive data flag

enumerator kLPSPI_WordCompleteFlag
Word Complete flag

enumerator kLPSPI_FrameCompleteFlag
Frame Complete flag

enumerator kLPSPI_TransferCompleteFlag
Transfer Complete flag

enumerator kLPSPI_TransmitErrorFlag
Transmit Error flag (FIFO underrun)

enumerator kLPSPI_ReceiveErrorFlag
Receive Error flag (FIFO overrun)

enumerator kLPSPI_DataMatchFlag
Data Match flag

enumerator kLPSPI_ModuleBusyFlag
Module Busy flag

enumerator kLPSPI_AllStatusFlag
Used for clearing all w1c status flags

enum _lpspi_interrupt_enable

LPSPI interrupt source.

Values:

enumerator kLPSPI_TxInterruptEnable
Transmit data interrupt enable

enumerator kLPSPI_RxInterruptEnable
Receive data interrupt enable

enumerator kLPSPI_WordCompleteInterruptEnable
Word complete interrupt enable

enumerator kLPSPI_FrameCompleteInterruptEnable
Frame complete interrupt enable

enumerator kLPSPI_TransferCompleteInterruptEnable
Transfer complete interrupt enable

enumerator kLPSPI_TransmitErrorInterruptEnable
Transmit error interrupt enable(FIFO underrun)

enumerator kLPSPI_ReceiveErrorInterruptEnable
Receive Error interrupt enable (FIFO overrun)

enumerator kLPSPI_DataMatchInterruptEnable
Data Match interrupt enable

enumerator kLPSPI_AllInterruptEnable
All above interrupts enable.

enum _lpspi_dma_enable

LPSPI DMA source.

Values:

enumerator kLPSPI_TxDmaEnable
Transmit data DMA enable

enumerator kLPSPI_RxDmaEnable
Receive data DMA enable

enum _lpspi_master_slave_mode
LPSPI master or slave mode configuration.

Values:

enumerator kLPSPI_Master
LPSPI peripheral operates in master mode.

enumerator kLPSPI_Slave
LPSPI peripheral operates in slave mode.

enum _lpspi_which_pcs_config
LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

Values:

enumerator kLPSPI_Pcs0
PCS[0]

enumerator kLPSPI_Pcs1
PCS[1]

enumerator kLPSPI_Pcs2
PCS[2]

enumerator kLPSPI_Pcs3
PCS[3]

enum _lpspi_pcs_polarity_config
LPSPI Peripheral Chip Select (PCS) Polarity configuration.

Values:

enumerator kLPSPI_PcsActiveHigh
PCS Active High (idles low)

enumerator kLPSPI_PcsActiveLow
PCS Active Low (idles high)

enum _lpspi_pcs_polarity
LPSPI Peripheral Chip Select (PCS) Polarity.

Values:

enumerator kLPSPI_Pcs0ActiveLow
Pcs0 Active Low (idles high).

enumerator kLPSPI_Pcs1ActiveLow
Pcs1 Active Low (idles high).

enumerator kLPSPI_Pcs2ActiveLow
Pcs2 Active Low (idles high).

enumerator kLPSPI_Pcs3ActiveLow
Pcs3 Active Low (idles high).

enumerator kLPSPI_PcsAllActiveLow
Pcs0 to Pcs5 Active Low (idles high).

enum `_lpspi_clock_polarity`

LPSPI clock polarity configuration.

Values:

enumerator `kLPSPI_ClockPolarityActiveHigh`
CPOL=0. Active-high LPSPI clock (idles low)

enumerator `kLPSPI_ClockPolarityActiveLow`
CPOL=1. Active-low LPSPI clock (idles high)

enum `_lpspi_clock_phase`

LPSPI clock phase configuration.

Values:

enumerator `kLPSPI_ClockPhaseFirstEdge`
CPHA=0. Data is captured on the leading edge of the SCK and changed on the following edge.

enumerator `kLPSPI_ClockPhaseSecondEdge`
CPHA=1. Data is changed on the leading edge of the SCK and captured on the following edge.

enum `_lpspi_shift_direction`

LPSPI data shifter direction options.

Values:

enumerator `kLPSPI_MsbFirst`
Data transfers start with most significant bit.

enumerator `kLPSPI_LsbFirst`
Data transfers start with least significant bit.

enum `_lpspi_host_request_select`

LPSPI Host Request select configuration.

Values:

enumerator `kLPSPI_HostReqExtPin`
Host Request is an ext pin.

enumerator `kLPSPI_HostReqInternalTrigger`
Host Request is an internal trigger.

enum `_lpspi_match_config`

LPSPI Match configuration options.

Values:

enumerator `kLPSI_MatchDisabled`
LPSPI Match Disabled.

enumerator `kLPSI_1stWordEqualsM0orM1`
LPSPI Match Enabled.

enumerator `kLPSI_AnyWordEqualsM0orM1`
LPSPI Match Enabled.

enumerator `kLPSI_1stWordEqualsM0and2ndWordEqualsM1`
LPSPI Match Enabled.

enumerator `kLPSI_AnyWordEqualsM0andNxtWordEqualsM1`
LPSPI Match Enabled.

enumerator kLPSPI_1stWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enumerator kLPSPI_AnyWordAndM1EqualsM0andM1
LPSPI Match Enabled.

enum _lpspi_pin_config
LPSPI pin (SDO and SDI) configuration.

Values:

enumerator kLPSPI_SdiInSdoOut
LPSPI SDI input, SDO output.

enumerator kLPSPI_SdiInSdiOut
LPSPI SDI input, SDI output.

enumerator kLPSPI_SdoInSdoOut
LPSPI SDO input, SDO output.

enumerator kLPSPI_SdoInSdiOut
LPSPI SDO input, SDI output.

enum _lpspi_data_out_config
LPSPI data output configuration.

Values:

enumerator kLpspiDataOutRetained
Data out retains last value when chip select is de-asserted

enumerator kLpspiDataOutTristate
Data out is tristated when chip select is de-asserted

enum _lpspi_transfer_width
LPSPI transfer width configuration.

Values:

enumerator kLPSPI_SingleBitXfer
1-bit shift at a time, data out on SDO, in on SDI (normal mode)

enumerator kLPSPI_TwoBitXfer
2-bits shift out on SDO/SDI and in on SDO/SDI

enumerator kLPSPI_FourBitXfer
4-bits shift out on SDO/SDI/PCS[3:2] and in on SDO/SDI/PCS[3:2]

enum _lpspi_delay_type
LPSPI delay type selection.

Values:

enumerator kLPSPI_PcsToSck
PCS-to-SCK delay.

enumerator kLPSPI_LastSckToPcs
Last SCK edge to PCS delay.

enumerator kLPSPI_BetweenTransfer
Delay between transfers.

enum `_lpspi_transfer_config_flag_for_master`

Use this enumeration for LPSPI master transfer configFlags.

Values:

enumerator `kLPSPI_MasterPcs0`

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS0 signal

enumerator `kLPSPI_MasterPcs1`

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS1 signal

enumerator `kLPSPI_MasterPcs2`

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS2 signal

enumerator `kLPSPI_MasterPcs3`

LPSPI master PCS shift macro , internal used. LPSPI master transfer use PCS3 signal

enumerator `kLPSPI_MasterPcsContinuous`

Is PCS signal continuous

enumerator `kLPSPI_MasterByteSwap`

Is master swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set `lpspi_shift_direction_t` to MSB).

- i. If you set `bitPerFrame = 8` , no matter the `kLPSPI_MasterByteSwap` you flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set `bitPerFrame = 16` : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the `kLPSPI_MasterByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_MasterByteSwap` flag.
- iii. If you set `bitPerFrame = 32` : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the `kLPSPI_MasterByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_MasterByteSwap` flag.

enum `_lpspi_transfer_config_flag_for_slave`

Use this enumeration for LPSPI slave transfer configFlags.

Values:

enumerator `kLPSPI_SlavePcs0`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS0 signal

enumerator `kLPSPI_SlavePcs1`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS1 signal

enumerator `kLPSPI_SlavePcs2`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS2 signal

enumerator `kLPSPI_SlavePcs3`

LPSPI slave PCS shift macro , internal used. LPSPI slave transfer use PCS3 signal

enumerator `kLPSPI_SlaveByteSwap`

Is slave swap the byte. For example, when want to send data 1 2 3 4 5 6 7 8 (suppose you set `lpspi_shift_direction_t` to MSB).

- i. If you set `bitPerFrame = 8` , no matter the `kLPSPI_SlaveByteSwap` flag is used or not, the waveform is 1 2 3 4 5 6 7 8.
- ii. If you set `bitPerFrame = 16` : (1) the waveform is 2 1 4 3 6 5 8 7 if you do not use the `kLPSPI_SlaveByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_SlaveByteSwap` flag.
- iii. If you set `bitPerFrame = 32` : (1) the waveform is 4 3 2 1 8 7 6 5 if you do not use the `kLPSPI_SlaveByteSwap` flag. (2) the waveform is 1 2 3 4 5 6 7 8 if you use the `kLPSPI_SlaveByteSwap` flag.

enum `_lpspi_transfer_state`

LPSPI transfer state, which is used for LPSPI transactional API state machine.

Values:

enumerator `kLPSPI_Idle`

Nothing in the transmitter/receiver.

enumerator `kLPSPI_Busy`

Transfer queue is not finished.

enumerator `kLPSPI_Error`

Transfer error.

typedef enum `_lpspi_master_slave_mode` `lpspi_master_slave_mode_t`

LPSPI master or slave mode configuration.

typedef enum `_lpspi_which_pcs_config` `lpspi_which_pcs_t`

LPSPI Peripheral Chip Select (PCS) configuration (which PCS to configure).

typedef enum `_lpspi_pcs_polarity_config` `lpspi_pcs_polarity_config_t`

LPSPI Peripheral Chip Select (PCS) Polarity configuration.

typedef enum `_lpspi_clock_polarity` `lpspi_clock_polarity_t`

LPSPI clock polarity configuration.

typedef enum `_lpspi_clock_phase` `lpspi_clock_phase_t`

LPSPI clock phase configuration.

typedef enum `_lpspi_shift_direction` `lpspi_shift_direction_t`

LPSPI data shifter direction options.

typedef enum `_lpspi_host_request_select` `lpspi_host_request_select_t`

LPSPI Host Request select configuration.

typedef enum `_lpspi_match_config` `lpspi_match_config_t`

LPSPI Match configuration options.

typedef enum `_lpspi_pin_config` `lpspi_pin_config_t`

LPSPI pin (SDO and SDI) configuration.

typedef enum `_lpspi_data_out_config` `lpspi_data_out_config_t`

LPSPI data output configuration.

typedef enum `_lpspi_transfer_width` `lpspi_transfer_width_t`

LPSPI transfer width configuration.

typedef enum `_lpspi_delay_type` `lpspi_delay_type_t`

LPSPI delay type selection.

typedef struct `_lpspi_master_config` `lpspi_master_config_t`

LPSPI master configuration structure.

typedef struct `_lpspi_slave_config` `lpspi_slave_config_t`

LPSPI slave configuration structure.

typedef struct `_lpspi_master_handle` `lpspi_master_handle_t`

Forward declaration of the `_lpspi_master_handle` typedefs.

typedef struct `_lpspi_slave_handle` `lpspi_slave_handle_t`

Forward declaration of the `_lpspi_slave_handle` typedefs.

```
typedef void (*lpspi_master_transfer_callback_t)(LPSPI_Type *base, lpspi_master_handle_t
*handle, status_t status, void *userData)
```

Master completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI master.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_transfer_callback_t)(LPSPI_Type *base, lpspi_slave_handle_t *handle,
status_t status, void *userData)
```

Slave completion callback function pointer type.

Param base

LPSPI peripheral address.

Param handle

Pointer to the handle for the LPSPI slave.

Param status

Success or error code describing whether the transfer is completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef struct lpspi_transfer lpspi_transfer_t
```

LPSPI master/slave transfer structure.

```
volatile uint8_t g_lpspiDummyData[]
```

Global variable for dummy data value setting.

```
LPSPI_DUMMY_DATA
```

LPSPI dummy data if no Tx data.

Dummy data used for tx if there is not txData.

```
SPI_RETRY_TIMES
```

Retry times for waiting flag.

```
LPSPI_MASTER_PCS_SHIFT
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_MASTER_PCS_MASK
```

LPSPI master PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_SHIFT
```

LPSPI slave PCS shift macro , internal used.

```
LPSPI_SLAVE_PCS_MASK
```

LPSPI slave PCS shift macro , internal used.

```
struct lpspi_master_config
```

#include <fsl_lpspi.h> LPSPI master configuration structure.

Public Members

uint32_t baudRate

Baud Rate for LPSPI.

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

uint32_t pcsToSckDelayInNanoSec

PCS to SCK delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t lastSckToPcsDelayInNanoSec

Last SCK to PCS delay time in nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

uint32_t betweenTransferDelayInNanoSec

After the SCK delay time with nanoseconds, setting to 0 sets the minimum delay. It sets the boundary value if out of range.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (PCS).

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

bool enableInputDelay

Enable master to sample the input data on a delayed SCK. This can help improve slave setup time. Refer to device data sheet for specific time length.

struct *_lpspi_slave_config*

#include <fsl_lpspi.h> LPSPI slave configuration structure.

Public Members

uint32_t bitsPerFrame

Bits per frame, minimum 8, maximum 4096.

lpspi_clock_polarity_t cpol

Clock polarity.

lpspi_clock_phase_t cpha

Clock phase.

lpspi_shift_direction_t direction

MSB or LSB data shift direction.

lpspi_which_pcs_t whichPcs

Desired Peripheral Chip Select (pcs)

lpspi_pcs_polarity_config_t pcsActiveHighOrLow

Desired PCS active high or low

lpspi_pin_config_t pinCfg

Configures which pins are used for input and output data during single bit transfers.

lpspi_data_out_config_t dataOutConfig

Configures if the output data is tristated between accesses (LPSPI_PCS is negated).

struct *_lpspi_transfer*

#include <fsl_lpspi.h> LPSPI master/slave transfer structure.

Public Members

const uint8_t *txData

Send buffer.

uint8_t *rxData

Receive buffer.

volatile size_t dataSize

Transfer bytes.

uint32_t configFlags

Transfer transfer configuration flags. Set from *_lpspi_transfer_config_flag_for_master* if the transfer is used for master or *_lpspi_transfer_config_flag_for_slave* enumeration if the transfer is used for slave.

struct *_lpspi_master_handle*

#include <fsl_lpspi.h> LPSPI master transfer handle structure used for transactional API.

Public Members

volatile bool isPcsContinuous

Is PCS continuous in transfer.

volatile bool writeTcrInIsr

A flag that whether should write TCR in ISR.

volatile bool isByteSwap

A flag that whether should byte swap.

volatile bool isTxMask

A flag that whether TCR[TXMSK] is set.

volatile uint16_t bytesPerFrame

Number of bytes in each frame

volatile uint16_t frameSize

Backup of TCR[FRAMESZ]

volatile uint8_t fifoSize

FIFO dataSize.

volatile uint8_t rxWatermark

Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if the txData is NULL.

`volatile uint8_t state`
LPSPi transfer state , `_lpspi_transfer_state`.

`lpspi_master_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`struct _lpspi_slave_handle`
#include <fsl_lpspi.h> LPSPi slave transfer handle structure used for transactional API.

Public Members

`volatile bool isByteSwap`
A flag that whether should byte swap.

`volatile uint8_t fifoSize`
FIFO dataSize.

`volatile uint8_t rxWatermark`
Rx watermark.

`volatile uint8_t bytesEachWrite`
Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`const uint8_t *volatile txData`
Send buffer.

uint8_t *volatile rxData
Receive buffer.

volatile size_t txRemainingByteCount
Number of bytes remaining to send.

volatile size_t rxRemainingByteCount
Number of bytes remaining to receive.

volatile uint32_t writeRegRemainingTimes
Write TDR register remaining times.

volatile uint32_t readRegRemainingTimes
Read RDR register remaining times.

uint32_t totalByteCount
Number of transfer bytes

volatile uint8_t state
LPSPI transfer state , `_lpspi_transfer_state`.

volatile uint32_t errorCount
Error count for slave transfer.

lpspi_slave_transfer_callback_t callback
Completion callback.

void *userData
Callback user data.

2.49 LPSPI eDMA Driver

FSL_LPSPi_EDMA_DRIVER_VERSION

LPSPI EDMA driver version.

DMA_MAX_TRANSFER_COUNT

DMA max transfer size.

typedef struct *lpspi_master_edma_handle* lpspi_master_edma_handle_t

Forward declaration of the `_lpspi_master_edma_handle` typedefs.

typedef struct *lpspi_slave_edma_handle* lpspi_slave_edma_handle_t

Forward declaration of the `_lpspi_slave_edma_handle` typedefs.

typedef void (*lpspi_master_edma_transfer_callback_t)(LPSPI_Type *base,
lpspi_master_edma_handle_t *handle, *status_t* status, void *userData)

Completion callback function pointer type.

Param base

LPSPI peripheral base address.

Param handle

Pointer to the handle for the LPSPI master.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
typedef void (*lpspi_slave_edma_transfer_callback_t)(LPSPi_Type *base,  
lpspi_slave_edma_handle_t *handle, status_t status, void *userData)
```

Completion callback function pointer type.

Param base

LPSPi peripheral base address.

Param handle

Pointer to the handle for the LPSPi slave.

Param status

Success or error code describing whether the transfer completed.

Param userData

Arbitrary pointer-dataSized value passed from the application.

```
void LPSPi_MasterTransferCreateHandleEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t  
*handle, lpspi_master_edma_transfer_callback_t  
callback, void *userData, edma_handle_t  
*edmaRxRegToRxDataHandle, edma_handle_t  
*edmaTxDataToTxRegHandle)
```

Initializes the LPSPi master eDMA handle.

This function initializes the LPSPi eDMA handle which can be used for other LPSPi transactional APIs. Usually, for a specified LPSPi instance, call this API once to get the initialized handle.

Note that the LPSPi eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx are the same source) DMA request source. (1) For a separated DMA request source, enable and set the Rx DMAMUX source for edmaRxRegToRxDataHandle and Tx DMAMUX source for edmaTxDataToTxRegHandle. (2) For a shared DMA request source, enable and set the Rx/Tx DMAMUX source for edmaRxRegToRxDataHandle.

Parameters

- base – LPSPi peripheral base address.
- handle – LPSPi handle pointer to lpspi_master_edma_handle_t.
- callback – LPSPi callback.
- userData – callback function parameter.
- edmaRxRegToRxDataHandle – edmaRxRegToRxDataHandle pointer to edma_handle_t.
- edmaTxDataToTxRegHandle – edmaTxDataToTxRegHandle pointer to edma_handle_t.

```
status_t LPSPi_MasterTransferEDMA(LPSPi_Type *base, lpspi_master_edma_handle_t *handle,  
lpspi_transfer_t *transfer)
```

LPSPi master transfer data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of bytesPerFrame if bytesPerFrame is less than or equal to 4. For bytesPerFrame greater than 4: The transfer data size should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPi peripheral base address.
- handle – pointer to lpspi_master_edma_handle_t structure which stores the transfer state.

- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

`status_t` LPSPI_MasterTransferPrepareEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, uint32_t configFlags)

LPSPI master config transfer parameter while using eDMA.

This function is preparing to transfer data using eDMA, work with LPSPI_MasterTransferEDMALite.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- configFlags – transfer configuration flags. `_lpspi_transfer_config_flag_for_master`.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.

Returns

Indicates whether LPSPI master transfer was successful or not.

`status_t` LPSPI_MasterTransferEDMALite(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI master transfer data using eDMA without configs.

This function transfers data using eDMA. This is a non-blocking function, which returns right away. When all data is transferred, the callback function is called.

Note: This API is only for transfer through DMA without configuration. Before calling this API, you must call LPSPI_MasterTransferPrepareEDMALite to configure it once. The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size should be equal to `bytesPerFrame` if the `bytesPerFrame` is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of `bytesPerFrame`.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure, config field is not used.

Return values

- `kStatus_Success` – Execution successfully.
- `kStatus_LPSPI_Busy` – The LPSPI device is busy.
- `kStatus_InvalidArgument` – The transfer structure is invalid.

Returns

Indicates whether LPSPI master transfer was successful or not.

`void` LPSPI_MasterTransferAbortEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle)

LPSPI master aborts a transfer which is using eDMA.

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.

status_t LPSPI_MasterTransferGetCountEDMA(LPSPI_Type *base, *lpspi_master_edma_handle_t* *handle, *size_t* *count)

Gets the master eDMA transfer remaining bytes.

This function gets the master eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_master_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the EDMA transaction.

Returns

status of *status_t*.

void LPSPI_SlaveTransferCreateHandleEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_slave_edma_transfer_callback_t* callback, void *userData, *edma_handle_t* *edmaRxRegToRxDataHandle, *edma_handle_t* *edmaTxDataToTxRegHandle)

Initializes the LPSPI slave eDMA handle.

This function initializes the LPSPI eDMA handle which can be used for other LPSPI transactional APIs. Usually, for a specified LPSPI instance, call this API once to get the initialized handle.

Note that LPSPI eDMA has a separated (Rx and Tx as two sources) or shared (Rx and Tx as the same source) DMA request source.

(1) For a separated DMA request source, enable and set the Rx DMAMUX source for `edmaRxRegToRxDataHandle` and Tx DMAMUX source for `edmaTxDataToTxRegHandle`. (2) For a shared DMA request source, enable and set the Rx/Rx DMAMUX source for `edmaRxRegToRxDataHandle`.

Parameters

- base – LPSPI peripheral base address.
- handle – LPSPI handle pointer to `lpspi_slave_edma_handle_t`.
- callback – LPSPI callback.
- userData – callback function parameter.
- `edmaRxRegToRxDataHandle` – `edmaRxRegToRxDataHandle` pointer to `edma_handle_t`.
- `edmaTxDataToTxRegHandle` – `edmaTxDataToTxRegHandle` pointer to `edma_handle_t`.

status_t LPSPI_SlaveTransferEDMA(LPSPI_Type *base, *lpspi_slave_edma_handle_t* *handle, *lpspi_transfer_t* *transfer)

LPSPI slave transfers data using eDMA.

This function transfers data using eDMA. This is a non-blocking function, which return right away. When all data is transferred, the callback function is called.

Note: The transfer data size should be an integer multiple of `bytesPerFrame` if `bytesPerFrame` is less than or equal to 4. For `bytesPerFrame` greater than 4: The transfer data size

should be equal to bytesPerFrame if the bytesPerFrame is not an integer multiple of 4. Otherwise, the transfer data size can be an integer multiple of bytesPerFrame.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- transfer – pointer to `lpspi_transfer_t` structure.

Returns

status of `status_t`.

```
void LPSPI_SlaveTransferAbortEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t *handle)
LPSPI slave aborts a transfer which is using eDMA.
```

This function aborts a transfer which is using eDMA.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.

```
status_t LPSPI_SlaveTransferGetCountEDMA(LPSPI_Type *base, lpspi_slave_edma_handle_t
*handle, size_t *count)
```

Gets the slave eDMA transfer remaining bytes.

This function gets the slave eDMA transfer remaining bytes.

Parameters

- base – LPSPI peripheral base address.
- handle – pointer to `lpspi_slave_edma_handle_t` structure which stores the transfer state.
- count – Number of bytes transferred so far by the eDMA transaction.

Returns

status of `status_t`.

```
struct _lpspi_master_edma_handle
```

#include <fsl_lpspi_edma.h> LPSPI master eDMA transfer handle structure used for transactional API.

Public Members

```
volatile bool isPcsContinuous
```

Is PCS continuous in transfer.

```
volatile bool isByteSwap
```

A flag that whether should byte swap.

```
volatile uint8_t fifoSize
```

FIFO dataSize.

```
volatile uint8_t rxWatermark
```

Rx watermark.

```
volatile uint8_t bytesEachWrite
```

Bytes for each write TDR.

`volatile uint8_t bytesEachRead`
Bytes for each read RDR.

`volatile uint8_t bytesLastRead`
Bytes for last read RDR.

`volatile bool isThereExtraRxBytes`
Is there extra RX byte.

`const uint8_t *volatile txData`
Send buffer.

`uint8_t *volatile rxData`
Receive buffer.

`volatile size_t txRemainingByteCount`
Number of bytes remaining to send.

`volatile size_t rxRemainingByteCount`
Number of bytes remaining to receive.

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`edma_tcd_t *lastTimeTCD`
Pointer to the lastTime TCD

`bool isMultiDMATransmit`
Is there multi DMA transmit

`volatile uint8_t dmaTransmitTime`
DMA Transfer times.

`uint32_t lastTimeDataBytes`
DMA transmit last Time data Bytes

`uint32_t dataBytesEveryTime`
Bytes in a time for DMA transfer, default is `DMA_MAX_TRANSFER_COUNT`

`edma_transfer_config_t transferConfigRx`
Config of DMA rx channel.

`edma_transfer_config_t transferConfigTx`
Config of DMA tx channel.

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`uint32_t transmitCommand`
Used to write TCR for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state , `_lpspi_transfer_state`.

```

uint8_t nbytes
    eDMA minor byte transfer count initially configured.
lpspi_master_edma_transfer_callback_t callback
    Completion callback.
void *userData
    Callback user data.
edma_handle_t *edmaRxRegToRxDataHandle
    edma_handle_t handle point used for RxReg to RxData buff
edma_handle_t *edmaTxDataToTxRegHandle
    edma_handle_t handle point used for TxData to TxReg buff
edma_tcd_t lpspiSoftwareTCD[3]
    SoftwareTCD, internal used
struct _lpspi_slave_edma_handle
    #include <fsl_lpspi_edma.h> LPSPI slave eDMA transfer handle structure used for transac-
    tional API.

```

Public Members

```

volatile bool isByteSwap
    A flag that whether should byte swap.
volatile uint8_t fifoSize
    FIFO dataSize.
volatile uint8_t rxWatermark
    Rx watermark.
volatile uint8_t bytesEachWrite
    Bytes for each write TDR.
volatile uint8_t bytesEachRead
    Bytes for each read RDR.
volatile uint8_t bytesLastRead
    Bytes for last read RDR.
volatile bool isThereExtraRxBytes
    Is there extra RX byte.
uint8_t nbytes
    eDMA minor byte transfer count initially configured.
const uint8_t *volatile txData
    Send buffer.
uint8_t *volatile rxData
    Receive buffer.
volatile size_t txRemainingByteCount
    Number of bytes remaining to send.
volatile size_t rxRemainingByteCount
    Number of bytes remaining to receive.

```

`volatile uint32_t writeRegRemainingTimes`
Write TDR register remaining times.

`volatile uint32_t readRegRemainingTimes`
Read RDR register remaining times.

`uint32_t totalByteCount`
Number of transfer bytes

`uint32_t txBuffIfNull`
Used if there is not txData for DMA purpose.

`uint32_t rxBuffIfNull`
Used if there is not rxData for DMA purpose.

`volatile uint8_t state`
LPSPI transfer state.

`uint32_t errorCount`
Error count for slave transfer.

`lpspi_slave_edma_transfer_callback_t callback`
Completion callback.

`void *userData`
Callback user data.

`edma_handle_t *edmaRxRegToRxDataHandle`
edma_handle_t handle point used for RxReg to RxData buff

`edma_handle_t *edmaTxDataToTxRegHandle`
edma_handle_t handle point used for TxData to TxReg

`edma_tcd_t lpspiSoftwareTCD[2]`
SoftwareTCD, internal used

2.50 LPTMR: Low-Power Timer

`void LPTMR_Init(LPTMR_Type *base, const lptmr_config_t *config)`
Ungates the LPTMR clock and configures the peripheral for a basic operation.

Note: This API should be called at the beginning of the application using the LPTMR driver.

Parameters

- base – LPTMR peripheral base address
- config – A pointer to the LPTMR configuration structure.

`void LPTMR_Deinit(LPTMR_Type *base)`
Gates the LPTMR clock.

Parameters

- base – LPTMR peripheral base address

```
void LPTMR_GetDefaultConfig(lptmr_config_t *config)
```

Fills in the LPTMR configuration structure with default settings.

The default values are as follows.

```
config->timerMode = kLPTMR_TimerModeTimeCounter;
config->pinSelect = kLPTMR_PinSelectInput_0;
config->pinPolarity = kLPTMR_PinPolarityActiveHigh;
config->enableFreeRunning = false;
config->bypassPrescaler = true;
config->prescalerClockSource = kLPTMR_PrescalerClock_1;
config->value = kLPTMR_Prescale_Glitch_0;
```

Parameters

- config – A pointer to the LPTMR configuration structure.

```
static inline void LPTMR_EnableInterrupts(LPTMR_Type *base, uint32_t mask)
```

Enables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`

```
static inline void LPTMR_DisableInterrupts(LPTMR_Type *base, uint32_t mask)
```

Disables the selected LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address
- mask – The interrupts to disable. This is a logical OR of members of the enumeration `lptmr_interrupt_enable_t`.

```
static inline uint32_t LPTMR_GetEnabledInterrupts(LPTMR_Type *base)
```

Gets the enabled LPTMR interrupts.

Parameters

- base – LPTMR peripheral base address

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `lptmr_interrupt_enable_t`

```
static inline uint32_t LPTMR_GetStatusFlags(LPTMR_Type *base)
```

Gets the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `lptmr_status_flags_t`

```
static inline void LPTMR_ClearStatusFlags(LPTMR_Type *base, uint32_t mask)
```

Clears the LPTMR status flags.

Parameters

- base – LPTMR peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `lptmr_status_flags_t`.

```
static inline void LPTMR_SetTimerPeriod(LPTMR_Type *base, uint32_t ticks)
```

Sets the timer period in units of count.

Timers counts from 0 until it equals the count value set here. The count value is written to the CMR register.

Note:

- a. The TCF flag is set with the CNR equals the count provided here and then increments.
 - b. Call the utility macros provided in the `fsl_common.h` to convert to ticks.
-

Parameters

- `base` – LPTMR peripheral base address
- `ticks` – A timer period in units of ticks

```
static inline uint32_t LPTMR_GetCurrentTimerCount(LPTMR_Type *base)
```

Reads the current timer counting value.

This function returns the real-time timer counting value in a range from 0 to a timer period.

Note: Call the utility macros provided in the `fsl_common.h` to convert ticks to usec or msec.

Parameters

- `base` – LPTMR peripheral base address

Returns

The current counter value in ticks

```
static inline void LPTMR_StartTimer(LPTMR_Type *base)
```

Starts the timer.

After calling this function, the timer counts up to the CMR register value. Each time the timer reaches the CMR value and then increments, it generates a trigger pulse and sets the timeout interrupt flag. An interrupt is also triggered if the timer interrupt is enabled.

Parameters

- `base` – LPTMR peripheral base address

```
static inline void LPTMR_StopTimer(LPTMR_Type *base)
```

Stops the timer.

This function stops the timer and resets the timer's counter register.

Parameters

- `base` – LPTMR peripheral base address

```
FSL_LPTMR_DRIVER_VERSION
```

Driver Version

```
enum _lptmr_pin_select
```

LPTMR pin selection used in pulse counter mode.

Values:

```
enumerator kLPTMR_PinSelectInput_0
```

Pulse counter input 0 is selected

enumerator kLPTMR_PinSelectInput_1

Pulse counter input 1 is selected

enumerator kLPTMR_PinSelectInput_2

Pulse counter input 2 is selected

enumerator kLPTMR_PinSelectInput_3

Pulse counter input 3 is selected

enum _lptmr_pin_polarity

LPTMR pin polarity used in pulse counter mode.

Values:

enumerator kLPTMR_PinPolarityActiveHigh

Pulse Counter input source is active-high

enumerator kLPTMR_PinPolarityActiveLow

Pulse Counter input source is active-low

enum _lptmr_timer_mode

LPTMR timer mode selection.

Values:

enumerator kLPTMR_TimerModeTimeCounter

Time Counter mode

enumerator kLPTMR_TimerModePulseCounter

Pulse Counter mode

enum _lptmr_prescaler_glitch_value

LPTMR prescaler/glitch filter values.

Values:

enumerator kLPTMR_Prescale_Glitch_0

Prescaler divide 2, glitch filter does not support this setting

enumerator kLPTMR_Prescale_Glitch_1

Prescaler divide 4, glitch filter 2

enumerator kLPTMR_Prescale_Glitch_2

Prescaler divide 8, glitch filter 4

enumerator kLPTMR_Prescale_Glitch_3

Prescaler divide 16, glitch filter 8

enumerator kLPTMR_Prescale_Glitch_4

Prescaler divide 32, glitch filter 16

enumerator kLPTMR_Prescale_Glitch_5

Prescaler divide 64, glitch filter 32

enumerator kLPTMR_Prescale_Glitch_6

Prescaler divide 128, glitch filter 64

enumerator kLPTMR_Prescale_Glitch_7

Prescaler divide 256, glitch filter 128

enumerator kLPTMR_Prescale_Glitch_8

Prescaler divide 512, glitch filter 256

enumerator kLPTMR_Prescale_Glitch_9
Prescaler divide 1024, glitch filter 512

enumerator kLPTMR_Prescale_Glitch_10
Prescaler divide 2048 glitch filter 1024

enumerator kLPTMR_Prescale_Glitch_11
Prescaler divide 4096, glitch filter 2048

enumerator kLPTMR_Prescale_Glitch_12
Prescaler divide 8192, glitch filter 4096

enumerator kLPTMR_Prescale_Glitch_13
Prescaler divide 16384, glitch filter 8192

enumerator kLPTMR_Prescale_Glitch_14
Prescaler divide 32768, glitch filter 16384

enumerator kLPTMR_Prescale_Glitch_15
Prescaler divide 65536, glitch filter 32768

enum _lptmr_prescaler_clock_select
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

Values:

enum _lptmr_interrupt_enable
List of the LPTMR interrupts.

Values:

enumerator kLPTMR_TimerInterruptEnable
Timer interrupt enable

enum _lptmr_status_flags
List of the LPTMR status flags.

Values:

enumerator kLPTMR_TimerCompareFlag
Timer compare flag

typedef enum _lptmr_pin_select lptmr_pin_select_t
LPTMR pin selection used in pulse counter mode.

typedef enum _lptmr_pin_polarity lptmr_pin_polarity_t
LPTMR pin polarity used in pulse counter mode.

typedef enum _lptmr_timer_mode lptmr_timer_mode_t
LPTMR timer mode selection.

typedef enum _lptmr_prescaler_glitch_value lptmr_prescaler_glitch_value_t
LPTMR prescaler/glitch filter values.

typedef enum _lptmr_prescaler_clock_select lptmr_prescaler_clock_select_t
LPTMR prescaler/glitch filter clock select.

Note: Clock connections are SoC-specific

```
typedef enum _lptmr_interrupt_enable lptmr_interrupt_enable_t
```

List of the LPTMR interrupts.

```
typedef enum _lptmr_status_flags lptmr_status_flags_t
```

List of the LPTMR status flags.

```
typedef struct _lptmr_config lptmr_config_t
```

LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

```
static inline void LPTMR_EnableTimerDMA(LPTMR_Type *base, bool enable)
```

Enable or disable timer DMA request.

Parameters

- `base` – base LPTMR peripheral base address
- `enable` – Switcher of timer DMA feature. “true” means to enable, “false” means to disable.

```
struct _lptmr_config
```

`#include <fsl_lptmr.h>` LPTMR config structure.

This structure holds the configuration settings for the LPTMR peripheral. To initialize this structure to reasonable defaults, call the `LPTMR_GetDefaultConfig()` function and pass a pointer to your configuration structure instance.

The configuration struct can be made constant so it resides in flash.

Public Members

```
lptmr_timer_mode_t timerMode
```

Time counter mode or pulse counter mode

```
lptmr_pin_select_t pinSelect
```

LPTMR pulse input pin select; used only in pulse counter mode

```
lptmr_pin_polarity_t pinPolarity
```

LPTMR pulse input pin polarity; used only in pulse counter mode

```
bool enableFreeRunning
```

True: enable free running, counter is reset on overflow False: counter is reset when the compare flag is set

```
bool bypassPrescaler
```

True: bypass prescaler; false: use clock from prescaler

```
lptmr_prescaler_clock_select_t prescalerClockSource
```

LPTMR clock source

```
lptmr_prescaler_glitch_value_t value
```

Prescaler or glitch filter value

2.51 LPUART: Low Power Universal Asynchronous Receiver/Transmitter Driver

2.52 LPUART Driver

`static inline void LPUART_SoftwareReset(LPUART_Type *base)`

Resets the LPUART using software.

This function resets all internal logic and registers except the Global Register. Remains set until cleared by software.

Parameters

- `base` – LPUART peripheral base address.

`status_t LPUART_Init(LPUART_Type *base, const lpuart_config_t *config, uint32_t srcClock_Hz)`

Initializes an LPUART instance with the user configuration structure and the peripheral clock.

This function configures the LPUART module with user-defined settings. Call the `LPUART_GetDefaultConfig()` function to configure the configuration structure and get the default configuration. The example below shows how to use this API to configure the LPUART.

```
lpuart_config_t lpuartConfig;
lpuartConfig.baudRate_Bps = 115200U;
lpuartConfig.parityMode = kLPUART_ParityDisabled;
lpuartConfig.dataBitsCount = kLPUART_EightDataBits;
lpuartConfig.isMsb = false;
lpuartConfig.stopBitCount = kLPUART_OneStopBit;
lpuartConfig.txFifoWatermark = 0;
lpuartConfig.rxFifoWatermark = 1;
LPUART_Init(LPUART1, &lpuartConfig, 2000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `config` – Pointer to a user-defined configuration structure.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not support in current clock source.
- `kStatus_Success` – LPUART initialize succeed

`status_t LPUART_Deinit(LPUART_Type *base)`

Deinitializes a LPUART instance.

This function waits for transmit to complete, disables TX and RX, and disables the LPUART clock.

Parameters

- `base` – LPUART peripheral base address.

Return values

- `kStatus_Success` – `Deinit` is success.
- `kStatus_LPUART_Timeout` – Timeout during `deinit`.

```
void LPUART_GetDefaultConfig(lpuart_config_t *config)
```

Gets the default configuration structure.

This function initializes the LPUART configuration structure to a default value. The default values are: `lpuartConfig->baudRate_Bps = 115200U`; `lpuartConfig->parityMode = kLPUART_ParityDisabled`; `lpuartConfig->dataBitsCount = kLPUART_EightDataBits`; `lpuartConfig->isMsb = false`; `lpuartConfig->stopBitCount = kLPUART_OneStopBit`; `lpuartConfig->txFifoWatermark = 0`; `lpuartConfig->rxFifoWatermark = 1`; `lpuartConfig->rxIdleType = kLPUART_IdleTypeStartBit`; `lpuartConfig->rxIdleConfig = kLPUART_IdleCharacter1`; `lpuartConfig->enableTx = false`; `lpuartConfig->enableRx = false`;

Parameters

- `config` – Pointer to a configuration structure.

```
status_t LPUART_SetBaudRate(LPUART_Type *base, uint32_t baudRate_Bps, uint32_t srcClock_Hz)
```

Sets the LPUART instance baudrate.

This function configures the LPUART module baudrate. This function is used to update the LPUART module baudrate after the LPUART module is initialized by the `LPUART_Init`.

```
LPUART_SetBaudRate(LPUART1, 115200U, 20000000U);
```

Parameters

- `base` – LPUART peripheral base address.
- `baudRate_Bps` – LPUART baudrate to be set.
- `srcClock_Hz` – LPUART clock source frequency in HZ.

Return values

- `kStatus_LPUART_BaudrateNotSupport` – Baudrate is not supported in the current clock source.
- `kStatus_Success` – Set baudrate succeeded.

```
void LPUART_Enable9bitMode(LPUART_Type *base, bool enable)
```

Enable 9-bit data mode for LPUART.

This function set the 9-bit mode for LPUART module. The 9th bit is not used for parity thus can be modified by user.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – true to enable, false to disable.

```
static inline void LPUART_SetMatchAddress(LPUART_Type *base, uint16_t address1, uint16_t address2)
```

Set the LPUART address.

This function configures the address for LPUART module that works as slave in 9-bit data mode. One or two address fields can be configured. When the address field's match enable bit is set, the frame it receives with MSB being 1 is considered as an address frame, otherwise it is considered as data frame. Once the address frame matches one of slave's own addresses, this slave is addressed. This address frame and its following data frames are stored in the receive buffer; otherwise the frames will be discarded. To un-address a slave, just send an address frame with unmatched address.

Note: Any LPUART instance joined in the multi-slave system can work as slave. The position of the address mark is the same as the parity bit when parity is enabled for 8 bit and 9 bit data formats.

Parameters

- base – LPUART peripheral base address.
- address1 – LPUART slave address1.
- address2 – LPUART slave address2.

```
static inline void LPUART_EnableMatchAddress(LPUART_Type *base, bool match1, bool match2)
```

Enable the LPUART match address feature.

Parameters

- base – LPUART peripheral base address.
- match1 – true to enable match address1, false to disable.
- match2 – true to enable match address2, false to disable.

```
static inline void LPUART_SetRxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the rx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Rx FIFO watermark.

```
static inline void LPUART_SetTxFifoWatermark(LPUART_Type *base, uint8_t water)
```

Sets the tx FIFO watermark.

Parameters

- base – LPUART peripheral base address.
- water – Tx FIFO watermark.

```
static inline void LPUART_TransferEnable16Bit(lpuart_handle_t *handle, bool enable)
```

Sets the LPUART using 16bit transmit, only for 9bit or 10bit mode.

This function Enable 16bit Data transmit in *lpuart_handle_t*.

Parameters

- handle – LPUART handle pointer.
- enable – true to enable, false to disable.

```
uint32_t LPUART_GetStatusFlags(LPUART_Type *base)
```

Gets LPUART status flags.

This function gets all LPUART status flags. The flags are returned as the logical OR value of the enumerators *_lpuart_flags*. To check for a specific status, compare the return value with enumerators in the *_lpuart_flags*. For example, to check whether the TX is empty:

```
if (kLPUART_TxDataRegEmptyFlag & LPUART_GetStatusFlags(LPUART1))
{
    ...
}
```

Parameters

- base – LPUART peripheral base address.

Returns

LPUART status flags which are ORed by the enumerators in the `_lpuart_flags`.

`status_t` LPUART_ClearStatusFlags(LPUART_Type *base, uint32_t mask)

Clears status flags with a provided mask.

This function clears LPUART status flags with a provided mask. Automatically cleared flags can't be cleared by this function. Flags that can only be cleared or set by hardware are: `kLPUART_TxDataRegEmptyFlag`, `kLPUART_TransmissionCompleteFlag`, `kLPUART_RxDataRegFullFlag`, `kLPUART_RxActiveFlag`, `kLPUART_NoiseErrorFlag`, `kLPUART_ParityErrorFlag`, `kLPUART_TxFifoEmptyFlag`, `kLPUART_RxFifoEmptyFlag`. Note: This API should be called when the Tx/Rx is idle, otherwise it takes no effects.

Parameters

- base – LPUART peripheral base address.
- mask – the status flags to be cleared. The user can use the enumerators in the `_lpuart_status_flag_t` to do the OR operation and get the mask.

Return values

- `kStatus_LPUART_FlagCannotClearManually` – The flag can't be cleared by this function but it is cleared automatically by hardware.
- `kStatus_Success` – Status in the mask are cleared.

Returns

0 succeed, others failed.

`void` LPUART_EnableInterrupts(LPUART_Type *base, uint32_t mask)

Enables LPUART interrupts according to a provided mask.

This function enables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See the `_lpuart_interrupt_enable`. This example shows how to enable TX empty interrupt and RX full interrupt:

```
LPUART_EnableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to enable. Logical OR of `_lpuart_interrupt_enable`.

`void` LPUART_DisableInterrupts(LPUART_Type *base, uint32_t mask)

Disables LPUART interrupts according to a provided mask.

This function disables the LPUART interrupts according to a provided mask. The mask is a logical OR of enumeration members. See `_lpuart_interrupt_enable`. This example shows how to disable the TX empty interrupt and RX full interrupt:

```
LPUART_DisableInterrupts(LPUART1, kLPUART_TxDataRegEmptyInterruptEnable | kLPUART_
↳ RxDataRegFullInterruptEnable);
```

Parameters

- base – LPUART peripheral base address.
- mask – The interrupts to disable. Logical OR of `_lpuart_interrupt_enable`.

uint32_t LPUART_GetEnabledInterrupts(LPUART_Type *base)

Gets enabled LPUART interrupts.

This function gets the enabled LPUART interrupts. The enabled interrupts are returned as the logical OR value of the enumerators `_lpuart_interrupt_enable`. To check a specific interrupt enable status, compare the return value with enumerators in `_lpuart_interrupt_enable`. For example, to check whether the TX empty interrupt is enabled:

```
uint32_t enabledInterrupts = LPUART_GetEnabledInterrupts(LPUART1);  
  
if (kLPUART_TxDataRegEmptyInterruptEnable & enabledInterrupts)  
{  
    ...  
}
```

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART interrupt flags which are logical OR of the enumerators in `_lpuart_interrupt_enable`.

static inline uintptr_t LPUART_GetDataRegisterAddress(LPUART_Type *base)

Gets the LPUART data register address.

This function returns the LPUART data register address, which is mainly used by the DMA/eDMA.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART data register addresses which are used both by the transmitter and receiver.

static inline void LPUART_EnableTxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART transmitter DMA request.

This function enables or disables the transmit data register empty flag, `STAT[TDRE]`, to generate DMA requests.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – True to enable, false to disable.

static inline void LPUART_EnableRxDMA(LPUART_Type *base, bool enable)

Enables or disables the LPUART receiver DMA.

This function enables or disables the receiver data register full flag, `STAT[RDRF]`, to generate DMA requests.

Parameters

- `base` – LPUART peripheral base address.
- `enable` – True to enable, false to disable.

uint32_t LPUART_GetInstance(LPUART_Type *base)

Get the LPUART instance from peripheral base address.

Parameters

- `base` – LPUART peripheral base address.

Returns

LPUART instance.

```
static inline void LPUART_EnableTx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART transmitter.

This function enables or disables the LPUART transmitter.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_EnableRx(LPUART_Type *base, bool enable)
```

Enables or disables the LPUART receiver.

This function enables or disables the LPUART receiver.

Parameters

- base – LPUART peripheral base address.
- enable – True to enable, false to disable.

```
static inline void LPUART_WriteByte(LPUART_Type *base, uint8_t data)
```

Writes to the transmitter register.

This function writes data to the transmitter register directly. The upper layer must ensure that the TX register is empty or that the TX FIFO has room before calling this function.

Parameters

- base – LPUART peripheral base address.
- data – Data write to the TX register.

```
static inline uint8_t LPUART_ReadByte(LPUART_Type *base)
```

Reads the receiver register.

This function reads data from the receiver register directly. The upper layer must ensure that the receiver register is full or that the RX FIFO has data before calling this function.

Parameters

- base – LPUART peripheral base address.

Returns

Data read from data register.

```
static inline uint8_t LPUART_GetRxFifoCount(LPUART_Type *base)
```

Gets the rx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

rx FIFO data count.

```
static inline uint8_t LPUART_GetTxFifoCount(LPUART_Type *base)
```

Gets the tx FIFO data count.

Parameters

- base – LPUART peripheral base address.

Returns

tx FIFO data count.

`void LPUART_SendAddress(LPUART_Type *base, uint8_t address)`

Transmit an address frame in 9-bit data mode.

Parameters

- `base` – LPUART peripheral base address.
- `address` – LPUART slave address.

`status_t LPUART_WriteBlocking(LPUART_Type *base, const uint8_t *data, size_t length)`

Writes to the transmitter register using a blocking method.

This function polls the transmitter register, first waits for the register to be empty or TX FIFO to have room, and writes data to the transmitter buffer, then waits for the data to be sent out to the bus.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_WriteBlocking16bit(LPUART_Type *base, const uint16_t *data, size_t length)`

Writes to the transmitter register using a blocking method in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer. Please make sure only 10bit of data is valid and other bits are 0.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the data to write.
- `length` – Size of the data to write.

Return values

- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully wrote all data.

`status_t LPUART_ReadBlocking(LPUART_Type *base, uint8_t *data, size_t length)`

Reads the receiver data register using a blocking method.

This function polls the receiver register, waits for the receiver register full or receiver FIFO has data, and reads data from the RX register.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.

- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`status_t LPUART_ReadBlocking16bit(LPUART_Type *base, uint16_t *data, size_t length)`

Reads the receiver data register in 9bit or 10bit mode.

Note: This function only support 9bit or 10bit transfer.

Parameters

- `base` – LPUART peripheral base address.
- `data` – Start address of the buffer to store the received data by 16bit, only 10bit is valid.
- `length` – Size of the buffer.

Return values

- `kStatus_LPUART_RxHardwareOverrun` – Receiver overrun happened while receiving data.
- `kStatus_LPUART_NoiseError` – Noise error happened while receiving data.
- `kStatus_LPUART_FramingError` – Framing error happened while receiving data.
- `kStatus_LPUART_ParityError` – Parity error happened while receiving data.
- `kStatus_LPUART_Timeout` – Transmission timed out and was aborted.
- `kStatus_Success` – Successfully received all data.

`void LPUART_TransferCreateHandle(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_callback_t callback, void *userData)`

Initializes the LPUART handle.

This function initializes the LPUART handle, which can be used for other LPUART transactional APIs. Usually, for a specified LPUART instance, call this API once to get the initialized handle.

The LPUART driver supports the “background” receiving, which means that user can set up an RX ring buffer optionally. Data received is stored into the ring buffer even when the user doesn’t call the `LPUART_TransferReceiveNonBlocking()` API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly. The ring buffer is disabled if passing NULL as `ringBuffer`.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `callback` – Callback function.
- `userData` – User data.

```
status_t LPUART_TransferSendNonBlocking(LPUART_Type *base, lpuart_handle_t *handle,
                                         lpuart_transfer_t *xfer)
```

Transmits a buffer of data using the interrupt method.

This function send data using an interrupt method. This is a non-blocking function, which returns directly without waiting for all data written to the transmitter register. When all data is written to the TX register in the ISR, the LPUART driver calls the callback function and passes the kStatus_LPUART_TxIdle as status parameter.

Note: The kStatus_LPUART_TxIdle is passed to the upper layer when all data are written to the TX register. However, there is no check to ensure that all the data sent out. Before disabling the TX, check the kLPUART_TransmissionCompleteFlag to ensure that the transmit is finished.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART transfer structure, see lpuart_transfer_t.

Return values

- kStatus_Success – Successfully start the data transmission.
- kStatus_LPUART_TxBusy – Previous transmission still not finished, data not all written to the TX register.
- kStatus_InvalidArgument – Invalid argument.

```
void LPUART_TransferStartRingBuffer(LPUART_Type *base, lpuart_handle_t *handle, uint8_t
                                     *ringBuffer, size_t ringBufferSize)
```

Sets up the RX ring buffer.

This function sets up the RX ring buffer to a specific UART handle.

When the RX ring buffer is used, data received is stored into the ring buffer even when the user doesn't call the UART_TransferReceiveNonBlocking() API. If there is already data received in the ring buffer, the user can get the received data from the ring buffer directly.

Note: When using RX ring buffer, one byte is reserved for internal use. In other words, if ringBufferSize is 32, then only 31 bytes are used for saving data.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- ringBuffer – Start address of ring buffer for background receiving. Pass NULL to disable the ring buffer.
- ringBufferSize – size of the ring buffer.

```
void LPUART_TransferStopRingBuffer(LPUART_Type *base, lpuart_handle_t *handle)
```

Aborts the background transfer and uninstalls the ring buffer.

This function aborts the background transfer and uninstalls the ring buffer.

Parameters

- base – LPUART peripheral base address.

- handle – LPUART handle pointer.

`size_t LPUART_TransferGetRxRingBufferLength(LPUART_Type *base, lpuart_handle_t *handle)`

Get the length of received data in RX ring buffer.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

Returns

Length of received data in RX ring buffer.

`void LPUART_TransferAbortSend(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data transmit.

This function aborts the interrupt driven data sending. The user can get the remainBytes to find out how many bytes are not sent out.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.

`status_t LPUART_TransferGetSendCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been sent out to bus.

This function gets the number of bytes that have been sent out to bus by an interrupt method.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- `kStatus_NoTransferInProgress` – No send in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`status_t LPUART_TransferReceiveNonBlocking(LPUART_Type *base, lpuart_handle_t *handle, lpuart_transfer_t *xfer, size_t *receivedBytes)`

Receives a buffer of data using the interrupt method.

This function receives data using an interrupt method. This is a non-blocking function which returns without waiting to ensure that all data are received. If the RX ring buffer is used and not empty, the data in the ring buffer is copied and the parameter `receivedBytes` shows how many bytes are copied from the ring buffer. After copying, if the data in the ring buffer is not enough for read, the receive request is saved by the LPUART driver. When the new data arrives, the receive request is serviced first. When all data is received, the LPUART driver notifies the upper layer through a callback function and passes a status parameter `kStatus_UART_RxIdle`. For example, the upper layer needs 10 bytes but there are only 5 bytes in ring buffer. The 5 bytes are copied to `xfer->data`, which returns with the parameter `receivedBytes` set to 5. For the remaining 5 bytes, the newly arrived data is saved from `xfer->data[5]`. When 5 bytes are received, the LPUART driver notifies the upper layer. If the RX ring buffer is not enabled, this function enables the RX and RX interrupt to receive data to `xfer->data`. When all data is received, the upper layer is notified.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `xfer` – LPUART transfer structure, see `uart_transfer_t`.
- `receivedBytes` – Bytes received from the ring buffer directly.

Return values

- `kStatus_Success` – Successfully queue the transfer into the transmit queue.
- `kStatus_LPUART_RxBusy` – Previous receive request is not finished.
- `kStatus_InvalidArgument` – Invalid argument.

`void LPUART_TransferAbortReceive(LPUART_Type *base, lpuart_handle_t *handle)`

Aborts the interrupt-driven data receiving.

This function aborts the interrupt-driven data receiving. The user can get the `remainBytes` to find out how many bytes not received yet.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.

`status_t LPUART_TransferGetReceiveCount(LPUART_Type *base, lpuart_handle_t *handle, uint32_t *count)`

Gets the number of bytes that have been received.

This function gets the number of bytes that have been received.

Parameters

- `base` – LPUART peripheral base address.
- `handle` – LPUART handle pointer.
- `count` – Receive bytes count.

Return values

- `kStatus_NoTransferInProgress` – No receive in progress.
- `kStatus_InvalidArgument` – Parameter is invalid.
- `kStatus_Success` – Get successfully through the parameter count;

`void LPUART_TransferHandleIRQ(LPUART_Type *base, void *irqHandle)`

LPUART IRQ handle function.

This function handles the LPUART transmit and receive IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

`void LPUART_TransferHandleErrorIRQ(LPUART_Type *base, void *irqHandle)`

LPUART Error IRQ handle function.

This function handles the LPUART error IRQ request.

Parameters

- `base` – LPUART peripheral base address.
- `irqHandle` – LPUART handle pointer.

`void LPUART_DriverIRQHandler(uint32_t instance)`

LPUART driver IRQ handler common entry.

This function provides the common IRQ request entry for LPUART.

Parameters

- `instance` – LPUART instance.

`FSL_LPUART_DRIVER_VERSION`

LPUART driver version.

Error codes for the LPUART driver.

Values:

enumerator `kStatus_LPUART_TxBusy`

TX busy

enumerator `kStatus_LPUART_RxBusy`

RX busy

enumerator `kStatus_LPUART_TxIdle`

LPUART transmitter is idle.

enumerator `kStatus_LPUART_RxIdle`

LPUART receiver is idle.

enumerator `kStatus_LPUART_TxWatermarkTooLarge`

TX FIFO watermark too large

enumerator `kStatus_LPUART_RxWatermarkTooLarge`

RX FIFO watermark too large

enumerator `kStatus_LPUART_FlagCannotClearManually`

Some flag can't manually clear

enumerator `kStatus_LPUART_Error`

Error happens on LPUART.

enumerator `kStatus_LPUART_RxRingBufferOverrun`

LPUART RX software ring buffer overrun.

enumerator `kStatus_LPUART_RxHardwareOverrun`

LPUART RX receiver overrun.

enumerator `kStatus_LPUART_NoiseError`

LPUART noise error.

enumerator `kStatus_LPUART_FramingError`

LPUART framing error.

enumerator `kStatus_LPUART_ParityError`

LPUART parity error.

enumerator `kStatus_LPUART_BaudrateNotSupport`

Baudrate is not support in current clock source

enumerator `kStatus_LPUART_IdleLineDetected`

IDLE flag.

enumerator `kStatus_LPUART_Timeout`

LPUART times out.

enum `_lpuart_parity_mode`

LPUART parity mode.

Values:

enumerator `kLPUART_ParityDisabled`

Parity disabled

enumerator `kLPUART_ParityEven`

Parity enabled, type even, bit setting: PE|PT = 10

enumerator `kLPUART_ParityOdd`

Parity enabled, type odd, bit setting: PE|PT = 11

enum `_lpuart_data_bits`

LPUART data bits count.

Values:

enumerator `kLPUART_EightDataBits`

Eight data bit

enumerator `kLPUART_SevenDataBits`

Seven data bit

enum `_lpuart_stop_bit_count`

LPUART stop bit count.

Values:

enumerator `kLPUART_OneStopBit`

One stop bit

enumerator `kLPUART_TwoStopBit`

Two stop bits

enum `_lpuart_transmit_cts_source`

LPUART transmit CTS source.

Values:

enumerator `kLPUART_CtsSourcePin`

CTS resource is the LPUART_CTS pin.

enumerator `kLPUART_CtsSourceMatchResult`

CTS resource is the match result.

enum `_lpuart_transmit_cts_config`

LPUART transmit CTS configure.

Values:

enumerator `kLPUART_CtsSampleAtStart`

CTS input is sampled at the start of each character.

enumerator `kLPUART_CtsSampleAtIdle`

CTS input is sampled when the transmitter is idle

enum `_lpuart_idle_type_select`

LPUART idle flag type defines when the receiver starts counting.

Values:

enumerator `kLPUART_IdleTypeStartBit`

Start counting after a valid start bit.

enumerator kLPUART_IdleTypeStopBit
Start counting after a stop bit.

enum _lpuart_idle_config

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

Values:

enumerator kLPUART_IdleCharacter1
the number of idle characters.

enumerator kLPUART_IdleCharacter2
the number of idle characters.

enumerator kLPUART_IdleCharacter4
the number of idle characters.

enumerator kLPUART_IdleCharacter8
the number of idle characters.

enumerator kLPUART_IdleCharacter16
the number of idle characters.

enumerator kLPUART_IdleCharacter32
the number of idle characters.

enumerator kLPUART_IdleCharacter64
the number of idle characters.

enumerator kLPUART_IdleCharacter128
the number of idle characters.

enum _lpuart_interrupt_enable

LPUART interrupt configuration structure, default settings all disabled.

This structure contains the settings for all LPUART interrupt configurations.

Values:

enumerator kLPUART_LinBreakInterruptEnable
LIN break detect. bit 7

enumerator kLPUART_RxActiveEdgeInterruptEnable
Receive Active Edge. bit 6

enumerator kLPUART_TxDataRegEmptyInterruptEnable
Transmit data register empty. bit 23

enumerator kLPUART_TransmissionCompleteInterruptEnable
Transmission complete. bit 22

enumerator kLPUART_RxDataRegFullInterruptEnable
Receiver data register full. bit 21

enumerator kLPUART_IdleLineInterruptEnable
Idle line. bit 20

enumerator kLPUART_RxOverrunInterruptEnable
Receiver Overrun. bit 27

enumerator kLPUART_NoiseErrorInterruptEnable
Noise error flag. bit 26

enumerator kLPUART_FramingErrorInterruptEnable

Framing error flag. bit 25

enumerator kLPUART_ParityErrorInterruptEnable

Parity error flag. bit 24

enumerator kLPUART_Match1InterruptEnable

Parity error flag. bit 15

enumerator kLPUART_Match2InterruptEnable

Parity error flag. bit 14

enumerator kLPUART_TxFifoOverflowInterruptEnable

Transmit FIFO Overflow. bit 9

enumerator kLPUART_RxFifoUnderflowInterruptEnable

Receive FIFO Underflow. bit 8

enumerator kLPUART_AllInterruptEnable

enum _lpuart_flags

LPUART status flags.

This provides constants for the LPUART status flags for use in the LPUART functions.

Values:

enumerator kLPUART_TxDataRegEmptyFlag

Transmit data register empty flag, sets when transmit buffer is empty. bit 23

enumerator kLPUART_TransmissionCompleteFlag

Transmission complete flag, sets when transmission activity complete. bit 22

enumerator kLPUART_RxDataRegFullFlag

Receive data register full flag, sets when the receive data buffer is full. bit 21

enumerator kLPUART_IdleLineFlag

Idle line detect flag, sets when idle line detected. bit 20

enumerator kLPUART_RxOverrunFlag

Receive Overrun, sets when new data is received before data is read from receive register. bit 19

enumerator kLPUART_NoiseErrorFlag

Receive takes 3 samples of each received bit. If any of these samples differ, noise flag sets. bit 18

enumerator kLPUART_FramingErrorFlag

Frame error flag, sets if logic 0 was detected where stop bit expected. bit 17

enumerator kLPUART_ParityErrorFlag

If parity enabled, sets upon parity error detection. bit 16

enumerator kLPUART_LinBreakFlag

LIN break detect interrupt flag, sets when LIN break char detected and LIN circuit enabled. bit 31

enumerator kLPUART_RxActiveEdgeFlag

Receive pin active edge interrupt flag, sets when active edge detected. bit 30

enumerator kLPUART_RxActiveFlag

Receiver Active Flag (RAF), sets at beginning of valid start. bit 24

enumerator `kLPUART_DataMatch1Flag`

The next character to be read from `LPUART_DATA` matches MA1. bit 15

enumerator `kLPUART_DataMatch2Flag`

The next character to be read from `LPUART_DATA` matches MA2. bit 14

enumerator `kLPUART_TxFifoEmptyFlag`

TXEMPT bit, sets if transmit buffer is empty. bit 7

enumerator `kLPUART_RxFifoEmptyFlag`

RXEMPT bit, sets if receive buffer is empty. bit 6

enumerator `kLPUART_TxFifoOverflowFlag`

TXOF bit, sets if transmit buffer overflow occurred. bit 1

enumerator `kLPUART_RxFifoUnderflowFlag`

RXUF bit, sets if receive buffer underflow occurred. bit 0

enumerator `kLPUART_AllClearFlags`

enumerator `kLPUART_AllFlags`

typedef enum `_lpuart_parity_mode` `lpuart_parity_mode_t`

LPUART parity mode.

typedef enum `_lpuart_data_bits` `lpuart_data_bits_t`

LPUART data bits count.

typedef enum `_lpuart_stop_bit_count` `lpuart_stop_bit_count_t`

LPUART stop bit count.

typedef enum `_lpuart_transmit_cts_source` `lpuart_transmit_cts_source_t`

LPUART transmit CTS source.

typedef enum `_lpuart_transmit_cts_config` `lpuart_transmit_cts_config_t`

LPUART transmit CTS configure.

typedef enum `_lpuart_idle_type_select` `lpuart_idle_type_select_t`

LPUART idle flag type defines when the receiver starts counting.

typedef enum `_lpuart_idle_config` `lpuart_idle_config_t`

LPUART idle detected configuration. This structure defines the number of idle characters that must be received before the IDLE flag is set.

typedef struct `_lpuart_config` `lpuart_config_t`

LPUART configuration structure.

typedef struct `_lpuart_transfer` `lpuart_transfer_t`

LPUART transfer structure.

typedef struct `_lpuart_handle` `lpuart_handle_t`

typedef void (`*lpuart_transfer_callback_t`)(`LPUART_Type *base`, `lpuart_handle_t *handle`, `status_t status`, void `*userData`)

LPUART transfer callback function.

typedef void (`*lpuart_isr_t`)(`LPUART_Type *base`, void `*handle`)

void `*s_lpuartHandle[]`

const `IRQn_Type s_lpuartTxIRQ[]`

`lpuart_isr_t s_lpuartIsr[]`

UART_RETRY_TIMES

Retry times for waiting flag.

struct `_lpuart_config`

#include <fsl_lpuart.h> LPUART configuration structure.

Public Members

uint32_t baudRate_Bps

LPUART baud rate

lpuart_parity_mode_t parityMode

Parity mode, disabled (default), even, odd

lpuart_data_bits_t dataBitsCount

Data bits count, eight (default), seven

bool isMsb

Data bits order, LSB (default), MSB

lpuart_stop_bit_count_t stopBitCount

Number of stop bits, 1 stop bit (default) or 2 stop bits

uint8_t txFifoWatermark

TX FIFO watermark

uint8_t rxFifoWatermark

RX FIFO watermark

bool enableRxRTS

RX RTS enable

bool enableTxCTS

TX CTS enable

lpuart_transmit_cts_source_t txCtsSource

TX CTS source

lpuart_transmit_cts_config_t txCtsConfig

TX CTS configure

lpuart_idle_type_select_t rxIdleType

RX IDLE type.

lpuart_idle_config_t rxIdleConfig

RX IDLE configuration.

bool enableTx

Enable TX

bool enableRx

Enable RX

struct `_lpuart_transfer`

#include <fsl_lpuart.h> LPUART transfer structure.

Public Members

size_t dataSize

The byte count to be transfer.

struct `_lpuart_handle`
#include <fsl_lpuart.h> LPUART handle structure.

Public Members

volatile `size_t` `txDataSize`
 Size of the remaining data to send.

`size_t` `txDataSizeAll`
 Size of the data to send out.

volatile `size_t` `rxDataSize`
 Size of the remaining data to receive.

`size_t` `rxDataSizeAll`
 Size of the data to receive.

`size_t` `rxRingBufferSize`
 Size of the ring buffer.

volatile `uint16_t` `rxRingBufferHead`
 Index for the driver to store received data into ring buffer.

volatile `uint16_t` `rxRingBufferTail`
 Index for the user to get data from the ring buffer.

lpuart_transfer_callback_t `callback`
 Callback function.

void `*userData`
 LPUART callback function parameter.

volatile `uint8_t` `txState`
 TX transfer state.

volatile `uint8_t` `rxState`
 RX transfer state.

bool `isSevenDataBits`
 Seven data bits flag.

bool `is16bitData`
 16bit data bits flag, only used for 9bit or 10bit data

union `__unnamed67__`

Public Members

`uint8_t` `*data`
 The buffer of data to be transfer.

`uint8_t` `*rxData`
 The buffer to receive data.

`uint16_t` `*rxData16`
 The buffer to receive data.

const `uint8_t` `*txData`
 The buffer of data to be sent.

```
const uint16_t *txData16
    The buffer of data to be sent.
```

```
union __unnamed69__
```

Public Members

```
const uint8_t *volatile txData
    Address of remaining data to send.
```

```
const uint16_t *volatile txData16
    Address of remaining data to send.
```

```
union __unnamed71__
```

Public Members

```
uint8_t *volatile rxData
    Address of remaining data to receive.
```

```
uint16_t *volatile rxData16
    Address of remaining data to receive.
```

```
union __unnamed73__
```

Public Members

```
uint8_t *rxRingBuffer
    Start address of the receiver ring buffer.
```

```
uint16_t *rxRingBuffer16
    Start address of the receiver ring buffer.
```

2.53 LPUART eDMA Driver

```
void LPUART_TransferCreateHandleEDMA(LPUART_Type *base, lpuart_edma_handle_t *handle,
    lpuart_edma_transfer_callback_t callback, void
    *userData, edma_handle_t *txEdmaHandle,
    edma_handle_t *rxEdmaHandle)
```

Initializes the LPUART handle which is used in transactional functions.

Note: This function disables all LPUART interrupts.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to `lpuart_edma_handle_t` structure.
- callback – Callback function.
- userData – User data.
- txEdmaHandle – User requested DMA handle for TX DMA transfer.
- rxEdmaHandle – User requested DMA handle for RX DMA transfer.

status_t LPUART_SendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Sends data using eDMA.

This function sends data using eDMA. This is a non-blocking function, which returns right away. When all data is sent, the send callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- xfer – LPUART eDMA transfer structure. See *lpuart_transfer_t*.

Return values

- *kStatus_Success* – if succeed, others failed.
- *kStatus_LPUART_TxBusy* – Previous transfer on going.
- *kStatus_InvalidArgument* – Invalid argument.

status_t LPUART_ReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle, *lpuart_transfer_t* *xfer)

Receives data using eDMA.

This function receives data using eDMA. This is non-blocking function, which returns right away. When all data is received, the receive callback function is called.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.
- xfer – LPUART eDMA transfer structure, see *lpuart_transfer_t*.

Return values

- *kStatus_Success* – if succeed, others fail.
- *kStatus_LPUART_RxBusy* – Previous transfer ongoing.
- *kStatus_InvalidArgument* – Invalid argument.

void LPUART_TransferAbortSendEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)
Aborts the sent data using eDMA.

This function aborts the sent data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

void LPUART_TransferAbortReceiveEDMA(LPUART_Type *base, *lpuart_edma_handle_t* *handle)
Aborts the received data using eDMA.

This function aborts the received data using eDMA.

Parameters

- base – LPUART peripheral base address.
- handle – Pointer to *lpuart_edma_handle_t* structure.

```
status_t LPUART_TransferGetSendCountEDMA(LPUART_Type *base, lpuart_edma_handle_t
                                         *handle, uint32_t *count)
```

Gets the number of bytes written to the LPUART TX register.

This function gets the number of bytes written to the LPUART TX register by DMA.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Send bytes count.

Return values

- kStatus_NoTransferInProgress – No send in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

```
status_t LPUART_TransferGetReceiveCountEDMA(LPUART_Type *base, lpuart_edma_handle_t
                                             *handle, uint32_t *count)
```

Gets the number of received bytes.

This function gets the number of received bytes.

Parameters

- base – LPUART peripheral base address.
- handle – LPUART handle pointer.
- count – Receive bytes count.

Return values

- kStatus_NoTransferInProgress – No receive in progress.
- kStatus_InvalidArgument – Parameter is invalid.
- kStatus_Success – Get successfully through the parameter count;

```
void LPUART_TransferEdmaHandleIRQ(LPUART_Type *base, void *lpuartEdmaHandle)
```

LPUART eDMA IRQ handle function.

This function handles the LPUART tx complete IRQ request and invoke user callback. It is not set to static so that it can be used in user application.

Note: This function is used as default IRQ handler by double weak mechanism. If user's specific IRQ handler is implemented, make sure this function is invoked in the handler.

Parameters

- base – LPUART peripheral base address.
- lpuartEdmaHandle – LPUART handle pointer.

```
FSL_LPUART_EDMA_DRIVER_VERSION
```

LPUART EDMA driver version.

```
typedef struct lpuart_edma_handle lpuart_edma_handle_t
```

```
typedef void (*lpuart_edma_transfer_callback_t)(LPUART_Type *base, lpuart_edma_handle_t
*handle, status_t status, void *userData)
```

LPUART transfer callback function.


```
struct _lpuart_edma_handle
    #include <fsl_lpuart_edma.h> LPUART eDMA handle.
```

Public Members

```
lpuart_edma_transfer_callback_t callback
    Callback function.

void *userData
    LPUART callback function parameter.

size_t rxDataSizeAll
    Size of the data to receive.

size_t txDataSizeAll
    Size of the data to send out.

edma_handle_t *txEdmaHandle
    The eDMA TX channel used.

edma_handle_t *rxEdmaHandle
    The eDMA RX channel used.

uint8_t nbytes
    eDMA minor byte transfer count initially configured.

volatile uint8_t txState
    TX transfer state.

volatile uint8_t rxState
    RX transfer state
```

2.54 MCX_CMC: Core Mode Controller Driver

```
enum _cmc_power_mode_protection
    CMC power mode Protection enumeration.

    Values:

    enumerator kCMC_AllowDeepSleepMode
        Allow Deep Sleep mode.

    enumerator kCMC_AllowPowerDownMode
        Allow Power Down mode.

    enumerator kCMC_AllowDeepPowerDownMode
        Allow Deep Power Down mode.

    enumerator kCMC_AllowAllLowPowerModes
        Allow Deep Sleep, Power Down, Deep Power Down modes.

enum _cmc_wakeup_sources
    Wake up sources from the previous low power mode entry.
```

Note: kCMC_WakeupFromUsbFs, kCMC_WakeupFromITRC, kCMC_WakeupFromCpu1 are not supported in MCXA family.

Values:

enumerator kCMC_WakeupFromResetInterruptOrPowerDown
Wakeup source is reset interrupt, or wake up from Deep Power Down.

enumerator kCMC_WakeupFromDebugReuqest
Wakeup source is debug request.

enumerator kCMC_WakeupFromInterrupt
Wakeup source is interrupt.

enumerator kCMC_WakeupFromDMAWakeup
Wakeup source is DMA Wakeup.

enumerator kCMC_WakeupFromWUURrequest
Wakeup source is WUU request.

enumerator kCMC_WakeupFromUsbFs
Wakeup source is USBFS(USB0).

enumerator kCMC_WakeupFromITRC
Wakeup source is ITRC.

enumerator kCMC_WakeupFromCpu1
Wakeup source is CPU1.

enum _cmc_system_reset_interrupt_enable
System Reset Interrupt enable enumeration.

Values:

enumerator kCMC_PinResetInterruptEnable
Pin Reset interrupt enable.

enumerator kCMC_DAPResetInterruptEnable
DAP Reset interrupt enable.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetInterruptEnable
Low Power Acknowledge Timeout Reset interrupt enable.

enumerator kCMC_WindowedWatchdog0ResetInterruptEnable
Windowed Watchdog 0 reset interrupt enable.

enumerator kCMC_SoftwareResetInterruptEnable
Software Reset interrupt enable.

enumerator kCMC_LockupResetInterruptEnable
Lockup Reset interrupt enable.

enumerator kCMC_CodeWatchDog0ResetInterruptEnable
Code watchdog 0 reset interrupt enable.

enum _cmc_system_reset_interrupt_flag
CMC System Reset Interrupt Status flag.

Values:

enumerator kCMC_PinResetInterruptFlag
Pin Reset interrupt flag.

enumerator kCMC_DAPResetInterruptFlag
DAP Reset interrupt flag.

enumerator kCMC_LowPowerAcknowledgeTimeoutResetFlag
Low Power Acknowledge Timeout Reset interrupt flag.

enumerator kCMC_WindowedWatchdog0ResetInterruptFlag
Windowed Watchdog 0 Reset interrupt flag.

enumerator kCMC_SoftwareResetInterruptFlag
Software Reset interrupt flag.

enumerator kCMC_LockupResetInterruptFlag
Lock up Reset interrupt flag.

enumerator kCMC_CodeWatchdog0ResetInterruptFlag
Code watchdog0 reset interrupt flag.

enum _cmc_system_sram_arrays
CMC System SRAM arrays low power mode enable enumeration.

Values:

enumerator kCMC_RAMX0
Used to control RAMX0.

enumerator kCMC_RAMX1
Used to control RAMX1.

enumerator kCMC_RAMX2
Used to control RAMX2.

enumerator kCMC_RAMB
Used to control RAMB.

enumerator kCMC_RAMC0
Used to control RAMC0.

enumerator kCMC_RAMC1
Used to control RAMC1.

enumerator kCMC_RAMD0
Used to control RAMD0.

enumerator kCMC_RAMD1
Used to control RAMD1.

enumerator kCMC_RAME0
Used to control RAME0.

enumerator kCMC_RAME1
Used to control RAME1.

enumerator kCMC_RAMF0
Used to control RAMF0.

enumerator kCMC_RAMF1
Used to control RAMF1.

enumerator kCMC_RAMG0_RAMG1
Used to control RAMG0 and RAMG1.

enumerator kCMC_RAMG2_RAMG3
Used to control RAMG2 and RAMG3.

enumerator kCMC_RAMH0_RAMH1
Used to control RAMH0 and RAMH1.

enumerator kCMC_LPCAC

Used to control LPCAC.

enumerator kCMC_DMA0_DMA1_PKC

Used to control DMA0, DMA1 and PKC.

enumerator kCMC_USB0

Used to control USB0.

enumerator kCMC_PQ

Used to control PQ.

enumerator kCMC_CAN0_CAN1_ENET_USB1

Used to control CAN0, CAN1, ENET, USB1.

enumerator kCMC_FlexSPI

Used to control FlexSPI.

enumerator kCMC_AllSramArrays

Mask of all System SRAM arrays.

enum _cmc_system_reset_sources

System reset sources enumeration.

Values:

enumerator kCMC_WakeUpReset

The reset caused by a wakeup from Power Down or Deep Power Down mode.

enumerator kCMC_PORReset

The reset caused by power on reset detection logic.

enumerator kCMC_VDReset

The reset caused by an LVD or HVD.

enumerator kCMC_WarmReset

The last reset source is a warm reset source.

enumerator kCMC_FatalReset

The last reset source is a fatal reset source.

enumerator kCMC_PinReset

The reset caused by the RESET_b pin.

enumerator kCMC_DAPReset

The reset caused by a reset request from the Debug Access port.

enumerator kCMC_ResetTimeout

The reset caused by a timeout or other error condition in the system reset generation.

enumerator kCMC_LowPowerAcknowledgeTimeoutReset

The reset caused by a timeout in low power mode entry logic.

enumerator kCMC_SCGReset

The reset caused by a loss of clock or loss of lock event in the SCG.

enumerator kCMC_WindowedWatchdog0Reset

The reset caused by the Windowed WatchDog 0 timeout.

enumerator kCMC_SoftwareReset

The reset caused by a software reset request.

enumerator kCMC_LockUoReset

The reset caused by the ARM core indication of a LOCKUP event.

enumerator kCMC_CodeWatchDog0Reset

The reset caused by the code watchdog0 fault.

enumerator kCMC_JTAGSystemReset

The reset caused by a JTAG system reset request.

enum _cmc_core_clock_gate_status

Indicate the core clock was gated.

Values:

enumerator kCMC_CoreClockNotGated

Core clock not gated.

enumerator kCMC_CoreClockGated

Core clock was gated due to low power mode entry.

enum _cmc_clock_mode

CMC clock mode enumeration.

Values:

enumerator kCMC_GateNoneClock

No clock gating.

enumerator kCMC_GateCoreClock

Gate Core clock.

enumerator kCMC_GateCorePlatformClock

Gate Core clock and platform clock.

enumerator kCMC_GateAllSystemClocks

Gate all System clocks, without getting core entering into low power mode.

enumerator kCMC_GateAllSystemClocksEnterLowPowerMode

Gate all System clocks, with core entering into low power mode.

enum _cmc_low_power_mode

CMC power mode enumeration.

Values:

enumerator kCMC_ActiveOrSleepMode

Select Active/Sleep mode.

enumerator kCMC_DeepSleepMode

Select Deep Sleep mode when a core executes WFI or WFE instruction.

enumerator kCMC_PowerDownMode

Select Power Down mode when a core executes WFI or WFE instruction.

enumerator kCMC_DeepPowerDown

Select Deep Power Down mode when a core executes WFI or WFE instruction.

typedef enum _cmc_core_clock_gate_status cmc_core_clock_gate_status_t

Indicate the core clock was gated.

typedef enum _cmc_clock_mode cmc_clock_mode_t

CMC clock mode enumeration.

typedef enum *_cmc_low_power_mode* cmc_low_power_mode_t
CMC power mode enumeration.

typedef struct *_cmc_reset_pin_config* cmc_reset_pin_config_t
CMC reset pin configuration.

typedef struct *_cmc_power_domain_config* cmc_power_domain_config_t
power mode configuration for each power domain.

FSL_CMC_DRIVER_VERSION
CMC driver version 2.3.0.

void CMC_SetClockMode(CMC_Type *base, *cmc_clock_mode_t* mode)
Sets clock mode.

This function config the amount of clock gating when the core asserts Sleeping due to WFI, WFE or SLEEPONEXIT.

Parameters

- base – CMC peripheral base address.
- mode – System clock mode.

static inline void CMC_LockClockModeSetting(CMC_Type *base)
Locks the clock mode setting.

After invoking this function, any clock mode setting will be blocked.

Parameters

- base – CMC peripheral base address.

static inline *cmc_core_clock_gate_status_t* CMC_GetCoreClockGatedStatus(CMC_Type *base)
Gets the core clock gated status.

This function get the status to indicate whether the core clock is gated. The core clock gated status can be cleared by software.

Parameters

- base – CMC peripheral base address.

Returns

The status to indicate whether the core clock is gated.

static inline void CMC_ClearCoreClockGatedStatus(CMC_Type *base)
Clears the core clock gated status.

This function clear clock status flag by software.

Parameters

- base – CMC peripheral base address.

static inline uint8_t CMC_GetWakeupSource(CMC_Type *base)
Gets the Wakeup Source.

This function gets the Wakeup sources from the previous low power mode entry.

Parameters

- base – CMC peripheral base address.

Returns

The Wakeup sources from the previous low power mode entry. See *_cmc_wakeup_sources* for details.

```
static inline cmc_clock_mode_t CMC_GetClockMode(CMC_Type *base)
```

Gets the Clock mode.

This function gets the clock mode of the previous low power mode entry.

Parameters

- *base* – CMC peripheral base address.

Returns

The Low Power status.

```
static inline uint32_t CMC_GetSystemResetStatus(CMC_Type *base)
```

Gets the System reset status.

This function returns the system reset status. Those status updates on every MAIN Warm Reset to indicate the type/source of the most recent reset.

Parameters

- *base* – CMC peripheral base address.

Returns

The most recent system reset status. See `_cmc_system_reset_sources` for details.

```
static inline uint32_t CMC_GetStickySystemResetStatus(CMC_Type *base)
```

Gets the sticky system reset status since the last WAKE Cold Reset.

This function gets all source of system reset that have generated a system reset since the last WAKE Cold Reset, and that have not been cleared by software.

Parameters

- *base* – CMC peripheral base address.

Returns

System reset status that have not been cleared by software. See `_cmc_system_reset_sources` for details.

```
static inline void CMC_ClearStickySystemResetStatus(CMC_Type *base, uint32_t mask)
```

Clears the sticky system reset status flags.

Parameters

- *base* – CMC peripheral base address.
- *mask* – Bitmap of the sticky system reset status to be cleared.

```
static inline uint8_t CMC_GetResetCount(CMC_Type *base)
```

Gets the number of reset sequences completed since the last Cold Reset.

Parameters

- *base* – CMC peripheral base address.

Returns

The number of reset sequences.

```
void CMC_SetPowerModeProtection(CMC_Type *base, uint32_t allowedModes)
```

Configures all power mode protection settings.

This function configures the power mode protection settings for supported power modes. This should be done before set the lowPower mode for each power doamin.

The allowed lowpower modes are passed as bit map. For example, to allow Sleep and DeepSleep, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowSleepMode|kCMC_AllowDeepSleepMode)`. To allow all low power modes, use `CMC_SetPowerModeProtection(CMC_base, kCMC_AllowAllLowPowerModes)`.

Parameters

- base – CMC peripheral base address.
- allowedModes – Bitmaps of the allowed power modes. See `_cmc_power_mode_protection` for details.

```
static inline void CMC_LockPowerModeProtectionSetting(CMC_Type *base)
```

Locks the power mode protection.

This function locks the power mode protection. After invoking this function, any power mode protection setting will be ignored.

Parameters

- base – CMC peripheral base address.

```
static inline void CMC_SetGlobalPowerMode(CMC_Type *base, cmc_low_power_mode_t  
lowPowerMode)
```

Config the same lowPower mode for all power domain.

This function configures the same low power mode for MAIN power domain and WAKE power domain.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

```
static inline void CMC_SetMAINPowerMode(CMC_Type *base, cmc_low_power_mode_t  
lowPowerMode)
```

Configures entry into low power mode for the MAIN Power domain.

This function configures the low power mode for the MAIN power domain, when the core executes WFI/WFE instruction. The available lowPower modes are defined in the `cmc_low_power_mode_t`.

Parameters

- base – CMC peripheral base address.
- lowPowerMode – The desired lowPower mode. See `cmc_low_power_mode_t` for details.

```
static inline cmc_low_power_mode_t CMC_GetMAINPowerMode(CMC_Type *base)
```

Gets the power mode of the MAIN Power domain.

Parameters

- base – CMC peripheral base address.

Returns

The power mode of MAIN Power domain. See `cmc_low_power_mode_t` for details.

```
void CMC_ConfigResetPin(CMC_Type *base, const cmc_reset_pin_config_t *config)
```

Configure reset pin.

This function configures reset pin. When enabled, the low power filter is enabled in both Active and Low power modes, the reset filter is only enabled in Active mode. When both filters are enabled, they operate in series.

Parameters

- base – CMC peripheral base address.
- config – Pointer to the reset pin config structure.


```
static inline void CMC_EnableSystemResetInterrupt(CMC_Type *base, uint32_t mask)
```

Enable system reset interrupts.

This function enables the system reset interrupts. The assertion of non-fatal warm reset can be delayed for 258 cycles of the 32K_CLK clock while an enabled interrupt is generated. Then Software can perform a graceful shutdown or abort the non-fatal warm reset provided the pending reset source is cleared by resetting the reset source and then clearing the pending flag.

Parameters

- `base` – CMC peripheral base address.
- `mask` – System reset interrupts. See `_cmc_system_reset_interrupt_enable` for details.

```
static inline void CMC_DisableSystemResetInterrupt(CMC_Type *base, uint32_t mask)
```

Disable system reset interrupts.

This function disables the system reset interrupts.

Parameters

- `base` – CMC peripheral base address.
- `mask` – System reset interrupts. See `_cmc_system_reset_interrupt_enable` for details.

```
static inline uint32_t CMC_GetSystemResetInterruptFlags(CMC_Type *base)
```

Gets System Reset interrupt flags.

This function returns the System reset interrupt flags.

Parameters

- `base` – CMC peripheral base address.

Returns

System reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

```
static inline void CMC_ClearSystemResetInterruptFlags(CMC_Type *base, uint32_t mask)
```

Clears System Reset interrupt flags.

This function clears system reset interrupt flags. The pending reset source can be cleared by resetting the source of the reset and then clearing the pending flags.

Parameters

- `base` – CMC peripheral base address.
- `mask` – System Reset interrupt flags. See `_cmc_system_reset_interrupt_flag` for details.

```
static inline void CMC_EnableNonMaskablePinInterrupt(CMC_Type *base, bool enable)
```

Enable/Disable Non maskable Pin interrupt.

Parameters

- `base` – CMC peripheral base address.
- `enable` – Enable or disable Non maskable pin interrupt. `true` - enable Non-maskable pin interrupt. `false` - disable Non-maskable pin interrupt.

```
static inline uint8_t CMC_GetISPMODEPinLogic(CMC_Type *base)
```

Gets the logic state of the ISPMODE_n pin.

This function returns the logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

Parameters

- base – CMC peripheral base address.

Returns

The logic state of the ISPMODE_n pin on the last negation of RESET_b pin.

```
static inline void CMC_ClearISPMODEPinLogic(CMC_Type *base)
```

Clears ISPMODE_n pin state.

Parameters

- base – CMC peripheral base address.

```
static inline void CMC_ForceBootConfiguration(CMC_Type *base, bool assert)
```

Set the logic state of the BOOT_CONFIGn pin.

This function force the logic state of the Boot_Confign pin to assert on next system reset.

Parameters

- base – CMC peripheral base address.
- assert – Assert the corresponding pin or not. true - Assert corresponding pin on next system reset. false - No effect.

```
static inline uint32_t CMC_GetBootRomStatus(CMC_Type *base)
```

Gets the status information written by the BootROM.

Parameters

- base – CMC peripheral base address.

Returns

The status information written by the BootROM.

```
static inline void CMC_SetBootRomStatus(CMC_Type *base, uint32_t statValue)
```

Sets the bootROM status value.

Note: This function is useful when result of CMC_CheckBootRomRegisterWrittable() is true.

Parameters

- base – CMC peripheral base address.
- stat – The state value to set.

```
static inline bool CMC_CheckBootRomRegisterWrittable(CMC_Type *base)
```

Check if BootROM status and lock registers is writtable.

Parameters

- base – CMC peripheral base address.

Returns

The result of whether BootROM status and lock register is writtable.

- **true** BootROM status and lock registers are writtable;
- **false** BootROM status and lock registers are not writtable.

```
static inline void CMC_LockBootRomStatusWritten(CMC_Type *base)
```

After invoking this function, BootROM status and lock registers cannot be written.

Parameters

- base – CMC peripheral base address.

```
static inline void CMC_UnlockBootRomStatusWritten(CMC_Type *base)
```

After invoking this function, BootROM status and lock register can be written.s.

Parameters

- base –

```
void CMC_PowerOffSRAMAllMode(CMC_Type *base, uint32_t mask)
```

Power off the selected system SRAM always.

Note: This function power off the selected system SRAM always. The SRAM arrays should not be accessed while they are shut down. SRAM array contents are not retained if they are powered off.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered off all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

```
static inline void CMC_PowerOnSRAMAllMode(CMC_Type *base, uint32_t mask)
```

Power on SRAM during all mode.

Note: Once invoked, the previous settings will be overwritten.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be powered on all modes. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

```
void CMC_PowerOffSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)
```

Power off the selected system SRAM during low power modes only.

This function power off the selected system SRAM only during low power mode. SRAM array contents are not retained if they are power off.

Parameters

- base – CMC peripheral base address.
- mask – Bitmap of the SRAM arrays to be power off during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

```
static inline void CMC_PowerOnSRAMLowPowerOnly(CMC_Type *base, uint32_t mask)
```

Power on the selected system SRAM during low power modes only.

This function power on the selected system SRAM. The SRAM array contents are retained in low power modes.

Parameters

- base – CMC peripheral base address.

- `mask` – Bitmap of the SRAM arrays to be power on during low power mode only. See `_cmc_system_sram_arrays` for details. Check Reference Manual for the SRAM region and mask bit relationship.

`void CMC_ConfigFlashMode(CMC_Type *base, bool wake, bool doze, bool disable)`

Configures the low power mode of the on-chip flash memory.

This function configures the low power mode of the on-chip flash memory.

Parameters

- `base` – CMC peripheral base address.
- `wake` – `true`: Flash will exit low power state during the flash memory accesses. `false`: No effect.
- `doze` – `true`: Flash is disabled while core is sleeping `false`: No effect.
- `disable` – `true`: Flash memory is placed in low power state. `false`: No effect.

`static inline void CMC_EnableDebugOperation(CMC_Type *base, bool enable)`

Enables/Disables debug operation when the core sleeps.

This function configures what happens to debug when core sleeps.

Parameters

- `base` – CMC peripheral base address.
- `enable` – Enable or disable Debug when Core is sleeping. `true` - Debug remains enabled when the core is sleeping. `false` - Debug is disabled when the core is sleeping.

`void CMC_PreEnterLowPowerMode(void)`

Prepares to enter low power modes.

This function should be called before entering low power modes.

`void CMC_PostExitLowPowerMode(void)`

Recovers after wake up from low power modes.

This function should be called after wake up from low power modes. This function should be used with `CMC_PreEnterLowPowerMode()`

`void CMC_GlobalEnterLowPowerMode(CMC_Type *base, cmc_low_power_mode_t lowPowerMode)`

Configures the entry into the same low power mode for each power domains.

This function provides the feature to entry into the same low power mode for each power domains. Before invoking this function, please ensure the selected power mode have been allowed.

Parameters

- `base` – CMC peripheral base address.
- `lowPowerMode` – The low power mode to be entered. See `cmc_low_power_mode_t` for the details.

`void CMC_EnterLowPowerMode(CMC_Type *base, const cmc_power_domain_config_t *config)`

Configures the entry into different low power modes for each power domains.

This function provides the feature to entry into different low power modes for each power domains. Before invoking this function please ensure the selected modes are allowed.

Parameters

- `base` – CMC peripheral base address.
- `config` – Pointer to the `cmc_power_domain_config_t` structure.

bool lowpowerFilterEnable

Low Power Filter enable.

bool resetFilterEnable

Reset Filter enable.

uint8_t resetFilterWidth

Width of the Reset Filter.

cmc_clock_mode_t clock_mode

Clock mode for each power domain.

cmc_low_power_mode_t main_domain

The low power mode of the MAIN power domain.

struct _cmc_reset_pin_config

#include <fsl_cmc.h> CMC reset pin configuration.

struct _cmc_power_domain_config

#include <fsl_cmc.h> power mode configuration for each power domain.

2.55 MCX_SPC: System Power Control driver

uint8_t SPC_GetPeriphIOIsolationStatus(SPC_Type *base)

Gets Isolation status for each power domains.

This function gets the status which indicates whether certain peripheral and the IO pads are in a latched state as a result of having been in POWERDOWN mode.

Parameters

- base – SPC peripheral base address.

Returns

Current isolation status for each power domains. See `_spc_power_domains` for details.

static inline void SPC_ClearPeriphIOIsolationFlag(SPC_Type *base)

Clears peripherals and I/O pads isolation flags for each power domains.

This function clears peripherals and I/O pads isolation flags for each power domains. After recovering from the POWERDOWN mode, user must invoke this function to release the I/O pads and certain peripherals to their normal run mode state. Before invoking this function, user must restore chip configuration in particular pin configuration for enabled WUU wakeup pins.

Parameters

- base – SPC peripheral base address.

static inline bool SPC_GetBusyStatusFlag(SPC_Type *base)

Gets SPC busy status flag.

This function gets SPC busy status flag. When SPC executing any type of power mode transition in ACTIVE mode or any of the SOC low power mode, the SPC busy status flag is set and this function returns true. When changing CORE LDO voltage level and DCDC voltage level in ACTIVE mode, the SPC busy status flag is set and this function return true.

Parameters

- base – SPC peripheral base address.

Returns

Ack busy flag. true - SPC is busy. false - SPC is not busy.

```
static inline bool SPC_CheckLowPowerRequest(SPC_Type *base)
```

Checks system low power request.

Note: Only when all power domains request low power mode entry, the result of this function is true. That means when all power domains request low power mode entry, the SPC regulators will be controlled by LP_CFG register.

Parameters

- base – SPC peripheral base address.

Returns

The system low power request check result.

- **true** All power domains have requested low power mode and SPC has entered a low power state and power mode configuration are based on the LP_CFG configuration register.
- **false** SPC in active mode and ACTIVE_CFG register control system power supply.

```
static inline void SPC_ClearLowPowerRequest(SPC_Type *base)
```

Clears system low power request, set SPC in active mode.

Parameters

- base – SPC peripheral base address.

```
static inline spc_power_domain_low_power_mode_t SPC_GetRequestedLowPowerMode(SPC_Type *base)
```

Check the last low-power mode that the power domain requested.

Parameters

- base – SPC peripheral base address.

Returns

The last low-power mode that the power domain requested.

```
static inline bool SPC_CheckSwitchState(SPC_Type *base)
```

Checks whether the power switch is on.

Parameters

- base – SPC peripheral base address.

Return values

- true – The power switch is on.
- false – The power switch is off.

```
spc_power_domain_low_power_mode_t SPC_GetPowerDomainLowPowerMode(SPC_Type *base, spc_power_domain_id_t powerDomainId)
```

Gets selected power domain's requested low power mode.

Parameters

- base – SPC peripheral base address.
- powerDomainId – Power Domain Id, please refer to *spc_id_t*.

Returns

The selected power domain's requested low power mode, please refer to `spc_power_domain_low_power_mode_t`.

```
static inline bool SPC__CheckPowerDomainLowPowerRequest(SPC_Type *base,
                                                       spc_power_domain_id_t
                                                       powerDomainId)
```

Checks power domain's low power request.

Parameters

- `base` – SPC peripheral base address.
- `powerDomainId` – Power Domain Id, please refer to `spc_power_domain_id_t`.

Returns

The result of power domain's low power request.

- **true** The selected power domain requests low power mode entry.
- **false** The selected power domain does not request low power mode entry.

```
static inline void SPC__ClearPowerDomainLowPowerRequestFlag(SPC_Type *base,
                                                           spc_power_domain_id_t
                                                           powerDomainId)
```

Clears selected power domain's low power request flag.

Parameters

- `base` – SPC peripheral base address.
- `powerDomainId` – Power Domain Id, please refer to `spc_power_domain_id_t`.

```
static inline void SPC__TrimSRAMLdoRefVoltage(SPC_Type *base, uint8_t trimValue)
```

Trims SRAM retention regulator reference voltage, trim step is 12 mV, range is around 0.48V to 0.85V.

Parameters

- `base` – SPC peripheral base address.
- `trimValue` – Reference voltage trim value.

```
static inline void SPC__EnableSRAMLdo(SPC_Type *base, bool enable)
```

Enables/disables SRAM retention LDO.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Used to enable/disable SRAM LDO :
 - **true** Enable SRAM LDO;
 - **false** Disable SRAM LDO.

```
static inline void SPC__RetainSRAMArray(SPC_Type *base, uint8_t mask)
```

Parameters

- `base` – SPC peripheral base address.
- `mask` – The OR'ed value of SRAM Array.

```
static inline void SPC__UnRetainSRAMArray(SPC_Type *base, uint8_t mask)
```

Unretain SRAM array.

Parameters

- base – SPC peripheral base address.
- mask – The OR'ed value of SRAM Array.

```
void SPC_SetLowPowerRequestConfig(SPC_Type *base, const spc_lowpower_request_config_t *config)
```

Configs Low power request output pin.

This function config the low power request output pin

Parameters

- base – SPC peripheral base address.
- config – Pointer the `spc_lowpower_request_config_t` structure.

```
static inline void SPC_EnableIntegratedPowerSwitchManually(SPC_Type *base, bool enable)
```

Enables/disables the integrated power switch manually.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable the integrated power switch:
 - **true** Enable the integrated power switch;
 - **false** Disable the integrated power switch.

```
static inline void SPC_EnableIntegratedPowerSwitchAutomatically(SPC_Type *base, bool sleepGate, bool wakeupUngate)
```

Enables/disables the integrated power switch automatically.

To gate the integrated power switch when chip enter low power modes, and ungate the switch after wake-up from low power modes:

```
SPC_EnableIntegratedPowerSwitchAutomatically(SPC, true, true);
```

Parameters

- base – SPC peripheral base address.
- sleepGate – Enable the integrated power switch when chip enter low power modes:
 - **true** SPC asserts an output pin at low-power entry to power-gate the switch;
 - **false** SPC does not assert an output pin at low-power entry to power-gate the switch.
- wakeupUngate – Enables the switch after wake-up from low power modes:
 - **true** SPC asserts an output pin at low-power exit to power-ungate the switch;
 - **false** SPC does not assert an output pin at low-power exit to power-ungate the switch.

```
void SPC_SetSRAMOperateVoltage(SPC_Type *base, const spc_sram_voltage_config_t *config)
```

Set SRAM operate voltage.

Parameters

- base – SPC peripheral base address.
- config – The pointer to `spc_sram_voltage_config_t`, specifies the configuration of sram voltage.

static inline *spc_bandgap_mode_t* SPC_GetActiveModeBandgapMode(SPC_Type *base)

Gets the Bandgap mode in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

Bandgap mode in the type of *spc_bandgap_mode_t* enumeration.

static inline uint32_t SPC_GetActiveModeVoltageDetectStatus(SPC_Type *base)

Gets all voltage detectors status in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

All voltage detectors status in Active mode.

status_t SPC_SetActiveModeBandgapModeConfig(SPC_Type *base, *spc_bandgap_mode_t* mode)

Configs Bandgap mode in Active mode.

Note: To disable bandgap in Active mode:

- a. Disable all LVD's and HVD's in active mode;
 - b. Disable Glitch detect;
 - c. Configure LDO's and DCDC to low drive strength in active mode;
 - d. Invoke this function to disable bandgap in active mode; otherwise the error status will be reported.
-

Note: Some other system resources(such as PLL, CMP) require bandgap to be enabled, to disable bandgap please take care of other system resources.

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode be selected.

Return values

- *kStatus_SPC_BandgapModeWrong* – The Bandgap can not be disabled in active mode.
- *kStatus_Success* – Config Bandgap mode in Active power mode successful.

static inline void SPC_EnableActiveModeCMPBandgapBuffer(SPC_Type *base, bool enable)

Enables/Disable the CMP Bandgap Buffer in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference voltage to CMP. false - Disable Buffer Stored Reference voltage to CMP.

static inline void SPC_SetActiveModeVoltageTrimDelay(SPC_Type *base, uint16_t delay)

Sets the delay when the regulators change voltage level in Active mode.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles.

status_t SPC_SetActiveModeRegulatorsConfig(SPC_Type *base, const
spc_active_mode_regulators_config_t *config)

Configs all settings of regulators in Active mode at a time.

Note: This function is used to overwrite all settings of regulators(including bandgap mode, regulators' drive strength and voltage level) in active mode at a time.

Note: Enable/disable LVDs/HVDs before invoking this function.

Note: This function will check input parameters based on hardware restrictions before setting registers, if input parameters do not satisfy hardware restrictions the specific error will be reported.

Note: Some hardware restrictions not covered, application should be aware of this and follow this hardware restrictions otherwise some unknown issue may occur:

- If Core LDO's drive strength are set to same value in both Active mode and low power mode, the voltage level should also set to same value.
 - When switching Core LDO's drive strength from low to normal, ensure the LDO_CORE high voltage level is set to same level that was set prior to switching to the LDO_CORE drive strength. Otherwise, if the LVDs are enabled, an unexpected LVD can occur.
-

Note: If this function can not satisfy some tricky settings, please invoke other APIs in low-level function group.

Parameters

- base – SPC peripheral base address.
- config – Pointer to *spc_active_mode_regulators_config_t* structure.

Return values

- *kStatus_Success* – Config regulators in Active power mode successful.
- *kStatus_SPC_BandgapModeWrong* – Based on input setting, bandgap can not be disabled.
- *kStatus_SPC_Busy* – The SPC instance is busy to execute any type of power mode transition.
- *kStatus_SPC_CORELDOLowDriveStrengthIgnore* – Any of LVDs/HVDs kept enabled before invoking this function.
- *kStatus_SPC_SYSLDOOverDriveVoltageFail* – Fail to regulator to Over Drive Voltage due to System VDD HVD is not disabled.
- *kStatus_SPC_SYSLDOLowDriveStrengthIgnore* – Any of LVDs/HVDs kept enabled before invoking this function.
- *kStatus_SPC_CORELDOVoltageWrong* – Core LDO and System LDO do not have same voltage level.

static inline void SPC_EnableActiveModeAnalogModules(SPC_Type *base, uint32_t maskValue)
Enables analog modules in active mode.

Parameters

- base – SPC peripheral base address.
- maskValue – The mask of analog modules to enable in active mode, should be the OR'ed value of `spc_analog_module_control`.

static inline void SPC_DisableActiveModeAnalogModules(SPC_Type *base, uint32_t maskValue)
Disables analog modules in active mode.

Parameters

- base – SPC peripheral base address.
- maskValue – The mask of analog modules to disable in active mode, should be the OR'ed value of `spc_analog_module_control`.

static inline uint32_t SPC_GetActiveModeEnabledAnalogModules(SPC_Type *base)
Gets enabled analog modules that enabled in active mode.

Parameters

- base – SPC peripheral base address.

Returns

The mask of enabled analog modules that enabled in active mode.

static inline *spc_bandgap_mode_t* SPC_GetLowPowerModeBandgapMode(SPC_Type *base)
Gets the Bandgap mode in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns

Bandgap mode in the type of `spc_bandgap_mode_t` enumeration.

static inline uint32_t SPC_GetLowPowerModeVoltageDetectStatus(SPC_Type *base)
Gets the status of all voltage detectors in Low Power mode.

Parameters

- base – SPC peripheral base address.

Returns

The status of all voltage detectors in low power mode.

static inline void SPC_EnableLowPowerModeLowPowerIREF(SPC_Type *base, bool enable)
Enables/Disables Low Power IREF in low power modes.

This function enables/disables Low Power IREF. Low Power IREF can only get disabled in Deep power down mode. In other low power modes, the Low Power IREF is always enabled.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Low Power IREF. true - Enable Low Power IREF for Low Power modes. false - Disable Low Power IREF for Deep Power Down mode.

status_t SPC_SetLowPowerModeBandgapmodeConfig(SPC_Type *base, *spc_bandgap_mode_t* mode)

Configs Bandgap mode in Low Power mode.

Note: To disable Bandgap in Low-power mode:

- a. Disable all LVD's and HVD's in low power mode;
 - b. Disable Glitch detect in low power mode;
 - c. Configure LDO's and DCDC to low drive strength in low power mode;
 - d. Disable bandgap in low power mode; Otherwise, the error status will be reported.
-

Note: Some other system resources (such as PLL, CMP) require bandgap to be enabled, to disable bandgap please take care of other system resources.

Parameters

- base – SPC peripheral base address.
- mode – The Bandgap mode to be selected.

Return values

- kStatus_SPC_BandgapModeWrong – The bandgap mode setting in Low Power mode is wrong.
- kStatus_Success – Config Bandgap mode in Low Power mode successful.

```
static inline void SPC_EnableSRAMLdOLowPowerModeIREF(SPC_Type *base, bool enable)
    Enables/disables SRAM_LDO deep power low power IREF.
```

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable low power IREF :
 - **true:** Low Power IREF is enabled ;
 - **false:** Low Power IREF is disabled for power saving.

```
static inline void SPC_EnableLowPowerModeCMPBandgapBufferMode(SPC_Type *base, bool
    enable)
```

Enables/Disables CMP Bandgap Buffer.

This function gates CMP bandgap buffer. CMP bandgap buffer is automatically disabled and turned off in Deep Power Down mode.

Deprecated:

No longer used, please use SPC_EnableLowPowerModeCMPBandgapBuffer as instead.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference Voltage to CMP. false - Disable Buffer Stored Reference Voltage to CMP.

```
static inline void SPC_EnableLowPowerModeCMPBandgapBuffer(SPC_Type *base, bool enable)
    Enables/Disables CMP Bandgap Buffer.
```

This function gates CMP bandgap buffer. CMP bandgap buffer is automatically disabled and turned off in Deep Power Down mode.

Deprecated:

No longer used.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CMP Bandgap buffer. true - Enable Buffer Stored Reference Voltage to CMP. false - Disable Buffer Stored Reference Voltage to CMP.

```
static inline void SPC_EnableLowPowerModeCoreVDDInternalVoltageScaling(SPC_Type *base,
                                                                    bool enable)
```

Enables/Disables CORE VDD IVS(Internal Voltage Scaling) in power down modes.

This function gates CORE VDD IVS. When enabled, the IVS regulator will scale the external input CORE VDD to a lower voltage level to reduce internal leakage. IVS is invalid in Sleep or Deep power down mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IVS. true - enable CORE VDD IVS in Power Down mode. false - disable CORE VDD IVS in Power Down mode.

```
static inline void SPC_SetLowPowerWakeUpDelay(SPC_Type *base, uint16_t delay)
```

Sets the delay when exit the low power modes.

Parameters

- base – SPC peripheral base address.
- delay – The number of SPC timer clock cycles that the SPC waits on exit from low power modes.

```
status_t SPC_SetLowPowerModeRegulatorsConfig(SPC_Type *base, const
                                             spc_lowpower_mode_regulators_config_t
                                             *config)
```

Configs all settings of regulators in Low power mode at a time.

Note: This function is used to overwrite all settings of regulators(including bandgap mode, regulators' drive strength and voltage level) in low power mode at a time.

Note: Enable/disable LVDs/HVDs before invoking this function.

Note: This function will check input parameters based on hardware restrictions before setting registers, if input parameters do not satisfy hardware restrictions the specific error will be reported.

Note: Some hardware restrictions not covered, application should be aware of this and follow this hardware restrictions otherwise some unknown issue may occur:

- If Core LDO's drive strength are set to same value in both Active mode and low power mode, the voltage level should also set to same value.
- When switching Core LDO's drive strength from low to normal, ensure the LDO_CORE high voltage level is set to same level that was set prior to switching to the LDO_CORE drive strength. Otherwise, if the LVDs are enabled, an unexpected LVD can occur.

Note: If this function can not satisfy some tricky settings, please invoke other APIs in low-level function group.

Parameters

- `base` – SPC peripheral base address.
- `config` – Pointer to `spc_lowpower_mode_regulators_config_t` structure.

Return values

- `kStatus_Success` – Config regulators in Low power mode successful.
- `kStatus_SPC_BandgapModeWrong` – The bandgap should not be disabled based on input settings.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.
- `kStatus_SPC_CORELDOLowVoltageWrong` – Core LDO and System LDO do not have same voltage level.

```
static inline void SPC_EnableLowPowerModeAnalogModules(SPC_Type *base, uint32_t
                                                    maskValue)
```

Enables analog modules in low power modes.

Parameters

- `base` – SPC peripheral base address.
- `maskValue` – The mask of analog modules to enable in low power modes, should be OR'ed value of `spc_analog_module_control`.

```
static inline void SPC_DisableLowPowerModeAnalogModules(SPC_Type *base, uint32_t
                                                    maskValue)
```

Disables analog modules in low power modes.

Parameters

- `base` – SPC peripheral base address.
- `maskValue` – The mask of analog modules to disable in low power modes, should be OR'ed value of `spc_analog_module_control`.

```
static inline uint32_t SPC_GetLowPowerModeEnabledAnalogModules(SPC_Type *base)
```

Gets enabled analog modules that enabled in low power modes.

Parameters

- `base` – SPC peripheral base address.

Returns

The mask of enabled analog modules that enabled in low power modes.

```
static inline uint32_t SPC_GetVoltageDetectStatusFlag(SPC_Type *base)
```

Get Voltage Detect Status Flags.

Parameters

- `base` – SPC peripheral base address.

Returns

Voltage Detect Status Flags. See `_spc_voltage_detect_flags` for details.

```
static inline void SPC_ClearVoltageDetectStatusFlag(SPC_Type *base, uint8_t mask)
    Clear Voltage Detect Status Flags.
```

Parameters

- base – SPC peripheral base address.
- mask – The mask of the voltage detect status flags. See `_spc_voltage_detect_flags` for details.

```
void SPC_SetCoreVoltageDetectConfig(SPC_Type *base, const spc_core_voltage_detect_config_t
    *config)
```

Configs CORE voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.
- config – Pointer to `spc_core_voltage_detect_config_t` structure.

```
static inline void SPC_LockCoreVoltageDetectResetSetting(SPC_Type *base)
    Locks Core voltage detect reset setting.
```

This function locks core voltage detect reset setting. After invoking this function any configuration of Core voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

```
static inline void SPC_UnlockCoreVoltageDetectResetSetting(SPC_Type *base)
    Unlocks Core voltage detect reset setting.
```

This function unlocks core voltage detect reset setting. If locks the Core voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

```
status_t SPC_EnableActiveModeCoreLowVoltageDetect(SPC_Type *base, bool enable)
    Enables/Disables the Core Low Voltage Detector in Active mode.
```

Note: If the `CORE_LDO` low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core LVD. true - Enable Core Low voltage detector in active mode. false - Disable Core Low voltage detector in active mode.

Return values

`kStatus_Success` – Enable/Disable Core Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeCoreLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core Low Voltage Detector in Low Power mode.

This function enables/disables the Core Low Voltage Detector. If enabled the Core Low Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core Low voltage detector in low power mode. false - Disable Core Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable Core Low Voltage Detect in low power mode successfully.

status_t SPC_EnableActiveModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core High Voltage Detector in Active mode.

Note: If the CORE_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core High voltage detector in active mode. false - Disable Core High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable Core High Voltage Detect successfully.

status_t SPC_EnableLowPowerModeCoreHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the Core High Voltage Detector in Low Power mode.

This function enables/disables the Core High Voltage Detector. If enabled the Core High Voltage detector. The Bandgap mode in low power mode must be programmed so that Bandgap is enabled.

Note: If the CORE_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in low power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable Core HVD. true - Enable Core High voltage detector in low power mode. false - Disable Core High voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable Core High Voltage Detect in low power mode successfully.

```
void SPC_SetSystemVDDLowVoltageLevel(SPC_Type *base, spc_low_voltage_level_select_t level)
```

Set system VDD Low-voltage level selection.

This function selects the system VDD low-voltage level. Changing system VDD low-voltage level must be done after disabling the System VDD low voltage reset and interrupt.

Deprecated:

In latest RM, reserved for all devices, will removed in next release.

Parameters

- base – SPC peripheral base address.
- level – System VDD Low-Voltage level selection.

```
void SPC_SetSystemVoltageDetectConfig(SPC_Type *base, const
                                     spc_system_voltage_detect_config_t *config)
```

Configs SYS voltage detect options.

This function config SYS voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- base – SPC peripheral base address.
- config – Pointer to spc_system_voltage_detect_config_t structure.

```
static inline void SPC_LockSystemVoltageDetectResetSetting(SPC_Type *base)
```

Lock System voltage detect reset setting.

This function locks system voltage detect reset setting. After invoking this function any configuration of System Voltage detect reset will be ignored.

Parameters

- base – SPC peripheral base address.

```
static inline void SPC_UnlockSystemVoltageDetectResetSetting(SPC_Type *base)
```

Unlock System voltage detect reset setting.

This function unlocks system voltage detect reset setting. If locks the System voltage detect reset setting, invoking this function to unlock.

Parameters

- base – SPC peripheral base address.

```
status_t SPC_EnableActiveModeSystemHighVoltageDetect(SPC_Type *base, bool enable)
```

Enables/Disables the System High Voltage Detector in Active mode.

Note: If the System_LDO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System High voltage detector in active mode. false - Disable System High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable System High Voltage Detect successfully.

status_t SPC_EnableActiveModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disable the System Low Voltage Detector in Active mode.

Note: If the System_LDO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System LVD. true - Enable System Low voltage detector in active mode. false - Disable System Low voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable the System Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeSystemHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System High Voltage Detector in Low Power mode.

Note: If the System_LDO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System HVD. true - Enable System High voltage detector in low power mode. false - Disable System High voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable System High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeSystemLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the System Low Voltage Detector in Low Power mode.

Note: If the System_LDO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.

- `enable` – Enable/Disable System HVD. `true` - Enable System Low voltage detector in low power mode. `false` - Disable System Low voltage detector in low power mode.

Return values

`kStatus_Success` – Enables System Low Voltage Detect in low power mode successfully.

```
void SPC_SetIOVDDLowVoltageLevel(SPC_Type *base, spc_low_voltage_level_select_t level)
Set IO VDD Low-Voltage level selection.
```

This function selects the IO VDD Low-voltage level. Changing IO VDD low-voltage level must be done after disabling the IO VDD low voltage reset and interrupt.

Parameters

- `base` – SPC peripheral base address.
- `level` – IO VDD Low-voltage level selection.

```
void SPC_SetIOVoltageDetectConfig(SPC_Type *base, const spc_io_voltage_detect_config_t
                                 *config)
```

Configs IO voltage detect options.

This function config IO voltage detect options.

Note: : Setting both the voltage detect interrupt and reset enable will cause interrupt to be generated on exit from reset. If those conditioned is not desired, interrupt/reset so only one is enabled.

Parameters

- `base` – SPC peripheral base address.
- `config` – Pointer to `spc_voltage_detect_config_t` structure.

```
static inline void SPC_LockIOVoltageDetectResetSetting(SPC_Type *base)
Lock IO Voltage detect reset setting.
```

This function locks IO voltage detect reset setting. After invoking this function any configuration of system voltage detect reset will be ignored.

Parameters

- `base` – SPC peripheral base address.

```
static inline void SPC_UnlockIOVoltageDetectResetSetting(SPC_Type *base)
Unlock IO voltage detect reset setting.
```

This function unlocks IO voltage detect reset setting. If locks the IO voltage detect reset setting, invoking this function to unlock.

Parameters

- `base` – SPC peripheral base address.

```
status_t SPC_EnableActiveModeIOHighVoltageDetect(SPC_Type *base, bool enable)
Enables/Disables the IO High Voltage Detector in Active mode.
```

Note: If the IO high voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in active mode. false - Disable IO High voltage detector in active mode.

Return values

kStatus_Success – Enable/Disable IO High Voltage Detect successfully.

status_t SPC_EnableActiveModeIOLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO Low Voltage Detector in Active mode.

Note: If the IO low voltage detect is enabled in Active mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Active mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in active mode. false - Disable IO Low voltage detector in active mode.

Return values

kStatus_Success – Enable IO Low Voltage Detect successfully.

status_t SPC_EnableLowPowerModeIOHighVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO High Voltage Detector in Low Power mode.

Note: If the IO high voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO HVD. true - Enable IO High voltage detector in low power mode. false - Disable IO High voltage detector in low power mode.

Return values

kStatus_Success – Enable IO High Voltage Detect in low power mode successfully.

status_t SPC_EnableLowPowerModeIOLowVoltageDetect(SPC_Type *base, bool enable)

Enables/Disables the IO Low Voltage Detector in Low Power mode.

Note: If the IO low voltage detect is enabled in Low Power mode, please note that the bandgap must be enabled and the drive strength of each regulator must not set to low in Low Power mode.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable IO LVD. true - Enable IO Low voltage detector in low power mode. false - Disable IO Low voltage detector in low power mode.

Return values

kStatus_Success – Enable/Disable IO Low Voltage Detect in low power mode successfully.

```
void SPC_SetExternalVoltageDomainsConfig(SPC_Type *base, uint8_t lowPowerIsoMask, uint8_t IsoMask)
```

Configs external voltage domains.

This function configs external voltage domains isolation.

Parameters

- base – SPC peripheral base address.
- lowPowerIsoMask – The mask of external domains isolate enable during low power mode. Please read the Reference Manual for the Bitmap.
- IsoMask – The mask of external domains isolate. Please read the Reference Manual for the Bitmap.

```
static inline uint8_t SPC_GetExternalDomainsStatus(SPC_Type *base)
```

Gets External Domains status.

Parameters

- base – SPC peripheral base address.

Returns

The status of each external domain.

```
static inline void SPC_EnableCoreLDORegulator(SPC_Type *base, bool enable)
```

Enable/Disable Core LDO regulator.

Note: The CORE LDO enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable CORE LDO Regulator. true - Enable CORE LDO Regulator. false - Disable CORE LDO Regulator.

```
static inline void SPC_PullDownCoreLDORegulator(SPC_Type *base, bool pulldown)
```

Enable/Disable the CORE LDO Regulator pull down in Deep Power Down.

Note: This function only useful when enabled the CORE LDO Regulator.

Parameters

- base – SPC peripheral base address.
- pulldown – Enable/Disable CORE LDO pulldown in Deep Power Down mode. true - CORE LDO Regulator will discharge in Deep Power Down mode. false - CORE LDO Regulator will not discharge in Deep Power Down mode.

```
status_t SPC_SetActiveModeCoreLDORegulatorConfig(SPC_Type *base, const
                                                    spc_active_mode_core_ldo_option_t
                                                    *option)
```

Configs Core LDO Regulator in Active mode.

Note: The bandgap must be enabled before invoking this function.

Note: To set Core LDO as low drive strength, all HVDs/LVDs must be disabled previously.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the `spc_active_mode_core_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config Core LDO regulator in Active power mode successful.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – Bandgap should be enabled before invoking this function.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – To set Core LDO as low drive strength, all LVDs/HVDs must be disabled before invoking this function.

```
status_t SPC_SetActiveModeCoreLDORegulatorVoltageLevel(SPC_Type *base,  
                                                       spc_core_ldo_voltage_level_t  
                                                       voltageLevel)
```

Set Core LDO Regulator Voltage level in Active mode.

Note: In active mode, the Core LDO voltage level should only be changed when the Core LDO is in normal drive strength.

Note: Update Core LDO voltage level will set Busy flag, this function return only when busy flag is cleared by hardware

Parameters

- base – SPC peripheral base address.
- voltageLevel – Specify the voltage level of CORE LDO Regulator in Active mode, please refer to `spc_core_ldo_voltage_level_t`.

Return values

- `kStatus_SPC_CORELDIVoltageSetFail` – The drive strength of Core LDO is not normal.
- `kStatus_Success` – Set Core LDO regulator voltage level in Active power mode successful.

```
static inline spc_core_ldo_voltage_level_t SPC_GetActiveModeCoreLDOVDDVoltageLevel(SPC_Type  
                                                                                    *base)
```

Gets CORE LDO Regulator Voltage level.

This function returns the voltage level of CORE LDO Regulator in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

Voltage level of CORE LDO in type of `spc_core_ldo_voltage_level_t` enumeration.

```
status_t SPC_SetActiveModeCoreLDORegulatorDriveStrength(SPC_Type *base,
                                                       spc_core_ldo_drive_strength_t
                                                       driveStrength)
```

Set Core LDO VDD Regulator Drive Strength in Active mode.

Parameters

- base – SPC peripheral base address.
- driveStrength – Specify the drive strength of CORE LDO Regulator in Active mode, please refer to `spc_core_ldo_drive_strength_t`.

Return values

- `kStatus_Success` – Set Core LDO regulator drive strength in Active power mode successful.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – If any voltage detect enabled, core_ldo's drive strength can not set to low.
- `kStatus_SPC_BandgapModeWrong` – The selected bandgap mode is not allowed.

```
static inline spc_core_ldo_drive_strength_t SPC_GetActiveModeCoreLDODriveStrength(SPC_Type
                                                                                  *base)
```

Gets CORE LDO VDD Regulator Drive Strength in Active mode.

Parameters

- base – SPC peripheral base address.

Returns

Drive Strength of CORE LDO regulator in Active mode, please refer to `spc_core_ldo_drive_strength_t`.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorConfig(SPC_Type *base, const
                                                    spc_lowpower_mode_core_ldo_option_t
                                                    *option)
```

Configs CORE LDO Regulator in low power mode.

This function configs CORE LDO Regulator in Low Power mode. If CORE LDO VDD Drive Strength is set to Normal, the CORE LDO VDD regulator voltage level in Active mode must be equal to the voltage level in Low power mode. And the Bandgap must be programmed to select bandgap enabled. Core VDD voltage levels for the Core LDO low power regulator can only be changed when the CORE LDO Drive Strength set as Normal.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the `spc_lowpower_mode_core_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config Core LDO regulator in power mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.
- `#kStatus_SPC_CORELDOVoltageSetFail` – Fail to change Core LDO voltage level.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorVoltageLevel(SPC_Type *base,
                                                          spc_core_ldo_voltage_level_t
                                                          voltageLevel)
```

Set Core LDO VDD Regulator Voltage level in Low power mode.

Note: If CORE LDO's drive strength is set to Normal, the CORE LDO VDD regulator voltage in active mode and low power mode must be same.

Note: Voltage level for the CORE LDO in low power mode can only be changed when the CORE LDO Drive Strength set as Normal.

Parameters

- base – SPC peripheral base address.
- voltageLevel – Voltage level of CORE LDO Regulator in Low power mode, please refer to `spc_core_ldo_voltage_level_t`.

Return values

- `kStatus_SPC_CORELDOVoltageWrong` – Voltage level in active mode and low power mode is not same.
- `kStatus_Success` – Set Core LDO regulator voltage level in Low power mode successful.
- `kStatus_SPC_CORELDOVoltageSetFail` – Fail to update voltage level because drive strength is incorrect.

```
static inline spc_core_ldo_voltage_level_t SPC_GetLowPowerCoreLDOVDDVoltageLevel(SPC_Type  
*base)
```

Gets the CORE LDO VDD Regulator Voltage Level for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO VDD Regulator's voltage level.

```
status_t SPC_SetLowPowerModeCoreLDORegulatorDriveStrength(SPC_Type *base,  
*spc_core_ldo_drive_strength_t  
driveStrength)
```

Set Core LDO VDD Regulator Drive Strength in Low power mode.

Parameters

- base – SPC peripheral base address.
- driveStrength – Specify drive strength of CORE LDO in low power mode.

Return values

- `kStatus_SPC_CORELDOLowDriveStrengthIgnore` – Some voltage detect enabled, CORE LDO's drive strength can not set as low.
- `kStatus_Success` – Set Core LDO regulator drive strength in Low power mode successful.
- `kStatus_SPC_BandgapModeWrong` – Bandgap is disabled when attempt to set CORE LDO work as normal drive strength.

```
static inline spc_core_ldo_drive_strength_t SPC_GetLowPowerCoreLDOVDDDriveStrength(SPC_Type  
*base)
```

Gets CORE LDO VDD Drive Strength for Low Power modes.

Parameters

- base – SPC peripheral base address.

Returns

The CORE LDO's VDD Drive Strength.

```
static inline void SPC_EnableSystemLDORegulator(SPC_Type *base, bool enable)
    Enable/Disable System LDO regulator.
```

Note: The SYSTEM LDO enable bit is write-once.

Parameters

- base – SPC peripheral base address.
- enable – Enable/Disable System LDO Regulator. true - Enable System LDO Regulator. false - Disable System LDO Regulator.

```
static inline void SPC_EnableSystemLDOSinkFeature(SPC_Type *base, bool sink)
    Enable/Disable current sink feature of System LDO Regulator.
```

Parameters

- base – SPC peripheral base address.
- sink – Enable/Disable current sink feature. true - Enable current sink feature of System LDO Regulator. false - Disable current sink feature of System LDO Regulator.

```
status_t SPC_SetActiveModeSystemLDORegulatorConfig(SPC_Type *base, const
    spc_active_mode_sys_ldo_option_t
    *option)
```

Configs System LDO VDD Regulator in Active mode.

Note: If System LDO VDD Drive Strength is set to Normal, the Bandgap mode in Active mode must be programmed to a value that enables the bandgap.

Note: If any voltage detects are kept enabled, configuration to set System LDO VDD drive strength to low will be ignored.

Note: If select System LDO VDD Regulator voltage level to Over Drive Voltage, the Drive Strength of System LDO VDD Regulator must be set to Normal otherwise the regulator Drive Strength will be forced to Normal.

Note: If select System LDO VDD Regulator voltage level to Over Drive Voltage, the High voltage detect must be disabled. Otherwise it will be fail to regulator to Over Drive Voltage.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_active_mode_sys_ldo_option_t structure.

Return values

- `kStatus_Success` – Config System LDO regulator in Active power mode successful.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – The bandgap is not enabled before invoking this function.
- `kStatus_SPC_SYSLDOOverDriveVoltageFail` – HVD of System VDD is not disable before setting to Over Drive voltage.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Set System LDO VDD regulator's driver strength to Low will be ignored.

```
status_t SPC_SetActiveModeSystemLDORegulatorVoltageLevel(SPC_Type *base,  
                                                         spc_sys_ldo_voltage_level_t  
                                                         voltageLevel)
```

Set System LDO Regulator voltage level in Active mode.

Note: The system LDO regulator can only operate at the overdrive voltage level for a limited amount of time for the life of chip.

Parameters

- `base` – SPC peripheral base address.
- `voltageLevel` – Specify the voltage level of System LDO Regulator in Active mode.

Return values

- `kStatus_Success` – Set System LDO Regulator voltage level in Active mode successfully.
- `kStatus_SPC_SYSLDOOverDriveVoltageFail` – Must disable system LDO high voltage detector before specifying overdrive voltage.

```
static inline spc_sys_ldo_voltage_level_t SPC_GetActiveModeSystemLDORegulatorVoltageLevel(SPC_Type  
                                                                                       *base)
```

Get System LDO Regulator voltage level in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO Regulator voltage level in Active mode, please refer to `spc_sys_ldo_voltage_level_t`.

```
status_t SPC_SetActiveModeSystemLDORegulatorDriveStrength(SPC_Type *base,  
                                                           spc_sys_ldo_drive_strength_t  
                                                           driveStrength)
```

Set System LDO Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the drive strength of System LDO Regulator in Active mode.

Return values

- `kStatus_Success` – Set System LDO Regulator drive strength in Active mode successfully.

- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Attempt to specify low drive strength is ignored due to any voltage detect feature is enabled in active mode.
- `kStatus_SPC_BandgapModeWrong` – Bandgap mode in Active mode must be programmed to a value that enables the bandgap if attempt to specify normal drive strength.

```
static inline spc_sys_ldo_drive_strength_t SPC_GetActiveModeSystemLDORegulatorDriveStrength(SPC_Type *base)
```

Get System LDO Regulator Drive Strength in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO regulator drive strength in Active mode, please refer to `spc_sys_ldo_drive_strength_t`.

```
status_t SPC_SetLowPowerModeSystemLDORegulatorConfig(SPC_Type *base, const spc_lowpower_mode_sys_ldo_option_t *option)
```

Configs System LDO regulator in low power modes.

This function configs System LDO regulator in low power modes. If System LDO VDD Regulator Drive strength is set to normal, bandgap mode in low power mode must be programmed to a value that enables the Bandgap. If any High voltage detectors or Low Voltage detectors are kept enabled, configuration to set System LDO Regulator drive strength as Low will be ignored.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to `spc_lowpower_mode_sys_ldo_option_t` structure.

Return values

- `kStatus_Success` – Config System LDO regulator in Low Power Mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Set driver strength to low will be ignored.

```
status_t SPC_SetLowPowerModeSystemLDORegulatorDriveStrength(SPC_Type *base, spc_sys_ldo_drive_strength_t driveStrength)
```

Set System LDO Regulator drive strength in Low Power Mode.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the drive strength of System LDO Regulator in Low Power Mode.

Return values

- `kStatus_Success` – Set System LDO Regulator drive strength in Low Power Mode successfully.
- `kStatus_SPC_SYSLDOLowDriveStrengthIgnore` – Attempt to specify low drive strength is ignored due to any voltage detect feature is enabled in low power mode.

- `kStatus_SPC_BandgapModeWrong` – Bandgap mode in low power mode must be programmed to a value that enables the bandgap if attempt to specify normal drive strength.

static inline `spc_sys_ldo_drive_strength_t` SPC_GetLowPowerModeSystemLDORegulatorDriveStrength(`SPC_Type *base`)

Get System LDO Regulator drive strength in Low Power Mode.

Parameters

- `base` – SPC peripheral base address.

Returns

System LDO regulator drive strength in Low Power Mode, please refer to `spc_sys_ldo_drive_strength_t`.

static inline void SPC_EnableDCDCRegulator(`SPC_Type *base`, bool enable)
Enable/Disable DCDC Regulator.

Note: The DCDC enable bit is write-once, settings only reset after a POR, LVD, or HVD event.

Parameters

- `base` – SPC peripheral base address.
- `enable` – Enable/Disable DCDC Regulator. `true` - Enable DCDC Regulator. `false` - Disable DCDC Regulator.

void SPC_SetDCDCBurstConfig(`SPC_Type *base`, `spc_dcdc_burst_config_t *config`)
Config DCDC Burst options.

Parameters

- `base` – SPC peripheral base address.
- `config` – Pointer to `spc_dcdc_burst_config_t` structure.

static inline void SPC_TriggerDCDCBurstRequest(`SPC_Type *base`)
Trigger a software burst request to DCDC.

Parameters

- `base` – SPC peripheral base address.

static inline bool SPC_CheckDCDCBurstAck(`SPC_Type *base`)
Check if burst acknowledge flag is asserted.

Parameters

- `base` – SPC peripheral base address.

Return values

- `false` – DCDC burst not complete.
- `true` – DCDC burst complete.

static inline void SPC_ClearDCDCBurstAckFlag(`SPC_Type *base`)
Clear DCDC burst acknowledge flag.

Parameters

- `base` – SPC peripheral base address.

```
void SPC_SetDCDCRefreshCount(SPC_Type *base, uint16_t count)
```

Set the count value of the reference clock to configure the period of DCDC not active.

Note: This function is only useful when DCDC's drive strength is set as pulse refresh.

Note: The pulse duration(time between on and off) is: reference clock period * (count + 2).

Parameters

- base – SPC peripheral base address.
- count – The count value, 16 bit width.

```
static inline void SPC_EnableDCDCBleedResistor(SPC_Type *base, bool enable)
```

Enable a bleed resistor to discharge DCDC output when DCDC is disabled.

Parameters

- base – SPC peripheral base address.
- enable – Used to enable/disable bleed resistor.

```
status_t SPC_SetActiveModeDCDCRegulatorConfig(SPC_Type *base, const
                                              spc_active_mode_dcdc_option_t *option)
```

Configs DCDC_CORE Regulator in Active mode.

Note: When changing the DCDC output voltage level, take care to change the CORE LDO voltage level.

Parameters

- base – SPC peripheral base address.
- option – Pointer to the spc_active_mode_dcdc_option_t structure.

Return values

- kStatus_Success – Config DCDC regulator in Active power mode successful.
- kStatus_SPC_Busy – The SPC instance is busy to execute any type of power mode transition.
- kStatus_SPC_BandgapModeWrong – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

```
static inline void SPC_SetActiveModeDCDCRegulatorVoltageLevel(SPC_Type *base,
                                                             spc_dcdc_voltage_level_t
                                                             voltageLevel)
```

Set DCDC_CORE Regulator voltage level in Active mode.

Note: When changing the DCDC output voltage level, take care to change the CORE LDO voltage level.

Parameters

- base – SPC peripheral base address.

- `voltageLevel` – Specify the DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

```
static inline spc_dcdc_voltage_level_t SPC_GetActiveModeDCDCRegulatorVoltageLevel(SPC_Type *base)
```

Get DCDC_CORE Regulator voltage level in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

```
status_t SPC_SetActiveModeDCDCRegulatorDriveStrength(SPC_Type *base,
                                                    spc_dcdc_drive_strength_t
                                                    driveStrength)
```

Set DCDC_CORE Regulator drive strength in Active mode.

Note: To set DCDC drive strength as Normal, the bandgap must be enabled.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the DCDC_CORE regulator drive strength, please refer to `spc_dcdc_drive_strength_t`.

Return values

- `kStatus_Success` – Set DCDC_CORE Regulator drive strength in Active mode successfully.
- `kStatus_SPC_BandgapModeWrong` – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

```
static inline spc_dcdc_drive_strength_t SPC_GetActiveModeDCDCRegulatorDriveStrength(SPC_Type *base)
```

Get DCDC_CORE Regulator drive strength in Active mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator drive strength, please refer to `spc_dcdc_drive_strength_t`.

```
status_t SPC_SetLowPowerModeDCDCRegulatorConfig(SPC_Type *base, const
                                                spc_lowpower_mode_dcdc_option_t
                                                *option)
```

Configs DCDC_CORE Regulator in Low power modes.

Note: If DCDC_CORE Drive Strength is set to Normal, the Bandgap mode in Low Power mode must be programmed to a value that enables the Bandgap.

Note: In Deep Power Down mode, DCDC regulator is always turned off.

Parameters

- `base` – SPC peripheral base address.
- `option` – Pointer to the `spc_lowpower_mode_dcdc_option_t` structure.

Return values

- `kStatus_Success` – Config DCDC regulator in low power mode successfully.
- `kStatus_SPC_Busy` – The SPC instance is busy to execute any type of power mode transition.
- `kStatus_SPC_BandgapModeWrong` – The bandgap mode setting in Low Power mode is wrong.

```
status_t SPC_SetLowPowerModeDCDCRegulatorDriveStrength(SPC_Type *base,
                                                       spc_dcdc_drive_strength_t
                                                       driveStrength)
```

Set DCDC_CORE Regulator drive strength in Low power mode.

Note: To set drive strength as normal, the bandgap must be enabled.

Parameters

- `base` – SPC peripheral base address.
- `driveStrength` – Specify the DCDC_CORE Regulator drive strength, please refer to `spc_dcdc_drive_strength_t`.

Return values

- `kStatus_Success` – Set DCDC_CORE Regulator drive strength in Low power mode successfully.
- `kStatus_SPC_BandgapModeWrong` – Set DCDC_CORE Regulator drive strength to Normal, the Bandgap must be enabled.

```
static inline spc_dcdc_drive_strength_t SPC_GetLowPowerModeDCDCRegulatorDriveStrength(SPC_Type
                                                                                       *base)
```

Get DCDC_CORE Regulator drive strength in Low power mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator drive strength, please refer to `spc_dcdc_drive_strength_t`.

```
static inline void SPC_SetLowPowerModeDCDCRegulatorVoltageLevel(SPC_Type *base,
                                                                spc_dcdc_voltage_level_t
                                                                voltageLevel)
```

Set DCDC_CORE Regulator voltage level in Low power mode.

- Configure `ACTIVE_CFG[DCDC_VDD_LVL]` to same level programmed in #1.

Note: To change DCDC level in Low-Power mode:

- Configure `LP_CFG[DCDC_VDD_LVL]` to desired level;
- Configure `LP_CFG[DCDC_VDD_DS]` to low driver strength;

Note: After invoking this function, the voltage level in active mode(wakeup from low power modes) also changed, if it is necessary, please invoke `SPC_SetActiveModeDCDCRegulatorVoltageLevel()` to change to desired voltage level.

Parameters

- `base` – SPC peripheral base address.
- `voltageLevel` – Specify the DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

```
static inline spc_dcdc_voltage_level_t SPC_GetLowPowerModeDCDCRegulatorVoltageLevel(SPC_Type  
*base)
```

Get DCDC_CORE Regulator voltage level in Low power mode.

Parameters

- `base` – SPC peripheral base address.

Returns

DCDC_CORE Regulator voltage level, please refer to `spc_dcdc_voltage_level_t`.

FSL_SPC_DRIVER_VERSION
SPC driver version 2.8.1.

SPC status enumeration.

Note: Some device(such as MCXA family) do not equip DCDC or System LDO, please refer to the reference manual to check.

Values:

enumerator `kStatus_SPC_Busy`

The SPC instance is busy executing any type of power mode transition.

enumerator `kStatus_SPC_DCDCLowDriveStrengthIgnore`

DCDC Low drive strength setting be ignored for LVD/HVD enabled.

enumerator `kStatus_SPC_DCDCPulseRefreshModeIgnore`

DCDC Pulse Refresh Mode drive strength setting be ignored for LVD/HVD enabled.

enumerator `kStatus_SPC_SYSLDOOverDriveVoltageFail`

SYS LDO regulate to Over drive voltage failed for SYS LDO HVD must be disabled.

enumerator `kStatus_SPC_SYSLDOLowDriveStrengthIgnore`

SYS LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator `kStatus_SPC_CORELDOLowDriveStrengthIgnore`

CORE LDO Low driver strength setting be ignored for LDO LVD/HVD enabled.

enumerator `kStatus_SPC_BandgapModeWrong`

Selected Bandgap Mode wrong.

enumerator `kStatus_SPC_CORELDIVoltageWrong`

Core LDO voltage is wrong.

enumerator `kStatus_SPC_CORELDIVoltageSetFail`

Core LDO voltage set fail.

enumerator kStatus_SPC_CORELDOVoltageDetectWrong
Settings of CORE_LDO voltage detection is not allowed.

enumerator kStatus_SPC_DCDCCoreLdoVoltageMisMatch
Target voltage level of DCDC not equal to CORE_LDO.

enum _spc_voltage_detect_flags
Voltage Detect Status Flags.

Values:

enumerator kSPC_IOVDDHighVoltageDetectFlag
IO VDD High-Voltage detect flag.

enumerator kSPC_IOVDDLowVoltageDetectFlag
IO VDD Low-Voltage detect flag.

enumerator kSPC_SystemVDDHighVoltageDetectFlag
System VDD High-Voltage detect flag.

enumerator kSPC_SystemVDDLowVoltageDetectFlag
System VDD Low-Voltage detect flag.

enumerator kSPC_CoreVDDHighVoltageDetectFlag
Core VDD High-Voltage detect flag.

enumerator kSPC_CoreVDDLowVoltageDetectFlag
Core VDD Low-Voltage detect flag.

enum _spc_power_domains
SPC power domain isolation status.

Note: Some devices(such as MCXA family) do not contain WAKE Power Domain, please refer to the reference manual to check.

Values:

enumerator kSPC_MAINPowerDomainRetain
Peripherals and IO pads retain in MAIN Power Domain.

enumerator kSPC_WAKEPowerDomainRetain
Peripherals and IO pads retain in WAKE Power Domain.

enum _spc_analog_module_control
The enumeration of all analog module that can be controlled by SPC in active or low-power modes.

Note: Enumerations may not suitable for all devices, please check the specific device's RM for supported analog modules.

Values:

enumerator kSPC_controlVref
Enable/disable VREF in active or low-power modes.

enumerator kSPC_controlUsb3vDet
Enable/disable USB3V_Det in active or low-power modes.

enumerator kSPC_controlDac0
Enable/disable DAC0 in active or low-power modes.

enumerator kSPC_controlDac1
Enable/disable DAC1 in active or low-power modes.

enumerator kSPC_controlDac2
Enable/disable DAC2 in active or low-power modes.

enumerator kSPC_controlOpamp0
Enable/disable OPAMP0 in active or low-power modes.

enumerator kSPC_controlOpamp1
Enable/disable OPAMP1 in active or low-power modes.

enumerator kSPC_controlOpamp2
Enable/disable OPAMP2 in active or low-power modes.

enumerator kSPC_controlOpamp3
Enable/disable OPAMP3 in active or low-power modes.

enumerator kSPC_controlCmp0
Enable/disable CMP0 in active or low-power modes.

enumerator kSPC_controlCmp1
Enable/disable CMP1 in active or low-power modes.

enumerator kSPC_controlCmp2
Enable/disable CMP2 in active or low-power modes.

enumerator kSPC_controlCmp0Dac
Enable/disable CMP0_DAC in active or low-power modes.

enumerator kSPC_controlCmp1Dac
Enable/disable CMP1_DAC in active or low-power modes.

enumerator kSPC_controlCmp2Dac
Enable/disable CMP2_DAC in active or low-power modes.

enumerator kSPC_controlAllModules
Enable/disable all modules in active or low-power modes.

enum _spc_power_domain_id

The enumeration of spc power domain, the connected power domain is chip specific, please refer to chip's RM for details.

Values:

enumerator kSPC_PowerDomain0
Power domain0, the connected power domain is chip specific.

enumerator kSPC_PowerDomain1
Power domain1, the connected power domain is chip specific.

enum _spc_power_domain_low_power_mode

The enumeration of Power domain's low power mode.

Values:

enumerator kSPC_SleepWithSYSClockRunning
Power domain request SLEEP mode with SYS clock running.

enumerator kSPC_DeepSleepWithSysClockOff
Power domain request deep sleep mode with system clock off.

enumerator kSPC_PowerDownWithSysClockOff
Power domain request power down mode with system clock off.

enumerator kSPC_DeepPowerDownWithSysClockOff

Power domain request deep power down mode with system clock off.

enum _spc_lowPower_request_pin_polarity

SPC low power request output pin polarity.

Values:

enumerator kSPC_HighTruePolarity

Control the High Polarity of the Low Power Request Pin.

enumerator kSPC_LowTruePolarity

Control the Low Polarity of the Low Power Request Pin.

enum _spc_lowPower_request_output_override

SPC low power request output override.

Values:

enumerator kSPC_LowPowerRequestNotForced

Not Forced.

enumerator kSPC_LowPowerRequestReserved

Reserved.

enumerator kSPC_LowPowerRequestForcedLow

Forced Low (Ignore LowPower request output polarity setting.)

enumerator kSPC_LowPowerRequestForcedHigh

Forced High (Ignore LowPower request output polarity setting.)

enum _spc_bandgap_mode

SPC Bandgap mode enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_BandgapDisabled

Bandgap disabled.

enumerator kSPC_BandgapEnabledBufferDisabled

Bandgap enabled with Buffer disabled.

enumerator kSPC_BandgapEnabledBufferEnabled

Bandgap enabled with Buffer enabled.

enumerator kSPC_BandgapReserved

Reserved.

enum _spc_dcdc_voltage_level

DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

Note: kSPC_DCDC_RetentionVoltage not supported for all power modes.

Values:

enumerator kSPC_DCDC_RetentionVoltage

DCDC_CORE Regulator regulate to retention Voltage(Only supported in low power modes)

enumerator kSPC_DCDC_MidVoltage

DCDC_CORE Regulator regulate to Mid Voltage(1.0V).

enumerator kSPC_DCDC_NormalVoltage
DCDC_CORE Regulator regulate to Normal Voltage(1.1V).

enumerator kSPC_DCDC_OverdriveVoltage
DCDC_CORE Regulator regulate to Safe-Mode Voltage(1.2V).

enum _spc_dcdc_drive_strength
DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

Note: Different drive strength differ in these DCDC characteristics: Maximum load current
Quiescent current Transient response.

Values:

enumerator kSPC_DCDC_PulseRefreshMode
DCDC_CORE Regulator Drive Strength set to Pulse Refresh Mode, This enum member is only useful for Low Power Mode config, please note that pluse refresh mode is invalid in SLEEP mode.

enumerator kSPC_DCDC_LowDriveStrength
DCDC_CORE regulator Drive Strength set to low.

enumerator kSPC_DCDC_NormalDriveStrength
DCDC_CORE regulator Drive Strength set to Normal.

enum _spc_sys_ldo_voltage_level
SYS LDO regulator voltage level enumeration in Active mode.

Values:

enumerator kSPC_SysLDO_NormalVoltage
SYS LDO VDD Regulator regulate to Normal Voltage(1.8V).

enumerator kSPC_SysLDO_OverDriveVoltage
SYS LDO VDD Regulator regulate to Over Drive Voltage(2.5V).

enum _spc_sys_ldo_drive_strength
SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_SysLDO_LowDriveStrength
SYS LDO VDD regulator Drive Strength set to low.

enumerator kSPC_SysLDO_NormalDriveStrength
SYS LDO VDD regulator Drive Strength set to Normal.

enum _spc_core_ldo_voltage_level
Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

Values:

enumerator kSPC_CoreLDO_UnderDriveVoltage

Deprecated:

, to align with description of latest RM, please use
kSPC_Core_LDO_RetentionVoltage as instead.

enumerator kSPC_Core_LDO_RetentionVoltage
Core LDO VDD regulator regulate to retention voltage, please note that only useful in low power modes and not all devices support this options please refer to devices' RM for details.

enumerator kSPC_CoreLDO_MidDriveVoltage
Core LDO VDD regulator regulate to Mid Drive Voltage.

enumerator kSPC_CoreLDO_NormalVoltage
Core LDO VDD regulator regulate to Normal Voltage.

enumerator kSPC_CoreLDO_OverDriveVoltage
Core LDO VDD regulator regulate to overdrive Voltage.

enum _spc_core_ldo_drive_strength
CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

Values:

enumerator kSPC_CoreLDO_LowDriveStrength
Core LDO VDD regulator Drive Strength set to low.

enumerator kSPC_CoreLDO_NormalDriveStrength
Core LDO VDD regulator Drive Strength set to Normal.

enum _spc_low_voltage_level_select
IO VDD Low-Voltage Level Select.

Values:

enumerator kSPC_LowVoltageNormalLevel

Deprecated:

, please use kSPC_LowVoltageHighRange as instead.

enumerator kSPC_LowVoltageSafeLevel

Deprecated:

, please use kSPC_LowVoltageLowRange as instead.

enumerator kSPC_LowVoltageHighRange
High range LVD threshold.

enumerator kSPC_LowVoltageLowRange
Low range LVD threshold.

enum _spc_sram_operate_voltage
The list of the operating voltage for the SRAM's read/write timing margin.

Values:

enumerator kSPC_sramOperateAt1P0V
SRAM configured for 1.0V operation.

enumerator kSPC_sramOperateAt1P1V
SRAM configured for 1.1V operation.

enumerator kSPC_sramOperateAt1P2V
SRAM configured for 1.2V operation.

typedef enum _spc_power_domain_id spc_power_domain_id_t
The enumeration of spc power domain, the connected power domain is chip specific, please refer to chip's RM for details.

typedef enum _spc_power_domain_low_power_mode spc_power_domain_low_power_mode_t
The enumeration of Power domain's low power mode.

typedef enum _spc_lowPower_request_pin_polarity spc_lowpower_request_pin_polarity_t
SPC low power request output pin polarity.

typedef enum *_spc_lowPower_request_output_override* spc_lowpower_request_output_override_t
SPC low power request output override.

typedef enum *_spc_bandgap_mode* spc_bandgap_mode_t
SPC Bandgap mode enumeration in Active mode or Low Power mode.

typedef enum *_spc_dcdc_voltage_level* spc_dcdc_voltage_level_t
DCDC regulator voltage level enumeration in Active mode or Low Power Mode.

Note: kSPC_DCDC_RetentionVoltage not supported for all power modes.

typedef enum *_spc_dcdc_drive_strength* spc_dcdc_drive_strength_t
DCDC regulator Drive Strength enumeration in Active mode or Low Power Mode.

Note: Different drive strength differ in these DCDC characteristics: Maximum load current
Quiescent current Transient response.

typedef enum *_spc_sys_ldo_voltage_level* spc_sys_ldo_voltage_level_t
SYS LDO regulator voltage level enumeration in Active mode.

typedef enum *_spc_sys_ldo_drive_strength* spc_sys_ldo_drive_strength_t
SYS LDO regulator Drive Strength enumeration in Active mode or Low Power mode.

typedef enum *_spc_core_ldo_voltage_level* spc_core_ldo_voltage_level_t
Core LDO regulator voltage level enumeration in Active mode or Low Power mode.

typedef enum *_spc_core_ldo_drive_strength* spc_core_ldo_drive_strength_t
CORE LDO VDD regulator Drive Strength enumeration in Low Power mode.

typedef enum *_spc_low_voltage_level_select* spc_low_voltage_level_select_t
IO VDD Low-Voltage Level Select.

typedef enum *_spc_sram_operate_voltage* spc_sram_operate_voltage_t
The list of the operating voltage for the SRAM's read/write timing margin.

typedef struct *_spc_sram_voltage_config* spc_sram_voltage_config_t

typedef struct *_spc_lowpower_request_config* spc_lowpower_request_config_t
Low Power Request output pin configuration.

typedef struct *_spc_active_mode_core_ldo_option* spc_active_mode_core_ldo_option_t
Core LDO regulator options in Active mode.

typedef struct *_spc_active_mode_sys_ldo_option* spc_active_mode_sys_ldo_option_t
System LDO regulator options in Active mode.

typedef struct *_spc_active_mode_dcdc_option* spc_active_mode_dcdc_option_t
DCDC regulator options in Active mode.

typedef struct *_spc_lowpower_mode_core_ldo_option* spc_lowpower_mode_core_ldo_option_t
Core LDO regulator options in Low Power mode.

typedef struct *_spc_lowpower_mode_sys_ldo_option* spc_lowpower_mode_sys_ldo_option_t
System LDO regulator options in Low Power mode.

typedef struct *_spc_lowpower_mode_dcdc_option* spc_lowpower_mode_dcdc_option_t
DCDC regulator options in Low Power mode.

```
typedef struct _spc_dcdc_burst_config spc_dcdc_burst_config_t
    DCDC Burst configuration.
```

Deprecated:

Do not recommend to use this structure.

```
typedef struct _spc_voltage_detect_option spc_voltage_detect_option_t
    CORE/SYS/IO VDD Voltage Detect options.
```

```
typedef struct _spc_core_voltage_detect_config spc_core_voltage_detect_config_t
    Core Voltage Detect configuration.
```

```
typedef struct _spc_system_voltage_detect_config spc_system_voltage_detect_config_t
    System Voltage Detect Configuration.
```

```
typedef struct _spc_io_voltage_detect_config spc_io_voltage_detect_config_t
    IO Voltage Detect Configuration.
```

```
typedef struct _spc_active_mode_regulators_config spc_active_mode_regulators_config_t
    Active mode configuration.
```

```
typedef struct _spc_lowpower_mode_regulators_config spc_lowpower_mode_regulators_config_t
    Low Power Mode configuration.
```

```
SPC_EVD_CFG_REG_EVDISO_SHIFT
```

```
SPC_EVD_CFG_REG_EVDLPISO_SHIFT
```

```
SPC_EVD_CFG_REG_EVDSTAT_SHIFT
```

```
SPC_EVD_CFG_REG_EVDISO(x)
```

```
SPC_EVD_CFG_REG_EVDLPISO(x)
```

```
SPC_EVD_CFG_REG_EVDSTAT(x)
```

```
struct _spc_sram_voltage_config
```

```
    #include <fsl_spc.h>
```

Public Members

```
spc_sram_operate_voltage_t operateVoltage
```

Specifies the operating voltage for the SRAM's read/write timing margin.

```
bool requestVoltageUpdate
```

Used to control whether request an SRAM trim value change.

```
struct _spc_lowpower_request_config
```

```
    #include <fsl_spc.h> Low Power Request output pin configuration.
```

Public Members

```
bool enable
```

Low Power Request Output enable.

```
spc_lowpower_request_pin_polarity_t polarity
```

Low Power Request Output pin polarity select.

spc_lowpower_request_output_override_t override

Low Power Request Output Override.

struct *_spc_active_mode_core_ldo_option*

#include <fsl_spc.h> Core LDO regulator options in Active mode.

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage

Core LDO Regulator Voltage Level selection in Active mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength

Core LDO Regulator Drive Strength selection in Active mode

struct *_spc_active_mode_sys_ldo_option*

#include <fsl_spc.h> System LDO regulator options in Active mode.

Public Members

spc_sys_ldo_voltage_level_t SysLDOVoltage

System LDO Regulator Voltage Level selection in Active mode.

spc_sys_ldo_drive_strength_t SysLDODriveStrength

System LDO Regulator Drive Strength selection in Active mode.

struct *_spc_active_mode_dc_dc_option*

#include <fsl_spc.h> DCDC regulator options in Active mode.

Public Members

spc_dc_dc_voltage_level_t DCDCVoltage

DCDC Regulator Voltage Level selection in Active mode.

spc_dc_dc_drive_strength_t DCDCDriveStrength

DCDC_CORE Regulator Drive Strength selection in Active mode.

struct *_spc_lowpower_mode_core_ldo_option*

#include <fsl_spc.h> Core LDO regulator options in Low Power mode.

Public Members

spc_core_ldo_voltage_level_t CoreLDOVoltage

Core LDO Regulator Voltage Level selection in Low Power mode.

spc_core_ldo_drive_strength_t CoreLDODriveStrength

Core LDO Regulator Drive Strength selection in Low Power mode

struct *_spc_lowpower_mode_sys_ldo_option*

#include <fsl_spc.h> System LDO regulator options in Low Power mode.

Public Members

spc_sys_ldo_drive_strength_t SysLDODriveStrength

System LDO Regulator Drive Strength selection in Low Power mode.

struct *_spc_lowpower_mode_dc_dc_option*

#include <fsl_spc.h> DCDC regulator options in Low Power mode.

Public Members

spc_dcdc_voltage_level_t DCDCVoltage
DCDC Regulator Voltage Level selection in Low Power mode.

spc_dcdc_drive_strength_t DCDCDriveStrength
DCDC_CORE Regulator Drive Strength selection in Low Power mode.

struct *_spc_dcdc_burst_config*
#include <fsl_spc.h> DCDC Burst configuration.

Deprecated:

Do not recommend to use this structure.

Public Members

bool *softwareBurstRequest*
Enable/Disable DCDC Software Burst Request.

bool *externalBurstRequest*
Enable/Disable DCDC External Burst Request.

bool *stabilizeBurstFreq*
Enable/Disable DCDC frequency stabilization.

uint8_t *freq*
The frequency of the current burst.

struct *_spc_voltage_detect_option*
#include <fsl_spc.h> CORE/SYS/IO VDD Voltage Detect options.

Public Members

bool *HVDInterruptEnable*
CORE/SYS/IO VDD High Voltage Detect interrupt enable.

bool *HVDResetEnable*
CORE/SYS/IO VDD High Voltage Detect reset enable.

bool *LVDInterruptEnable*
CORE/SYS/IO VDD Low Voltage Detect interrupt enable.

bool *LVDResetEnable*
CORE/SYS/IO VDD Low Voltage Detect reset enable.

struct *_spc_core_voltage_detect_config*
#include <fsl_spc.h> Core Voltage Detect configuration.

Public Members

spc_voltage_detect_option_t option
Core VDD Voltage Detect option.

struct *_spc_system_voltage_detect_config*
#include <fsl_spc.h> System Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option
System VDD Voltage Detect option.

spc_low_voltage_level_select_t level

Deprecated:

, reserved for all devices, will removed in next release.

struct *_spc_io_voltage_detect_config*
#include <fsl_spc.h> IO Voltage Detect Configuration.

Public Members

spc_voltage_detect_option_t option
IO VDD Voltage Detect option.

spc_low_voltage_level_select_t level
IO VDD Low-voltage level selection.

struct *_spc_active_mode_regulators_config*
#include <fsl_spc.h> Active mode configuration.

Public Members

spc_bandgap_mode_t bandgapMode
Specify bandgap mode in active mode.

bool lpBuff
Enable/disable CMP bandgap buffer.

spc_active_mode_dcdc_option_t DCDCOption
Specify DCDC configurations in active mode.

spc_active_mode_sys_ldo_option_t SysLDOOption
Specify System LDO configurations in active mode.

spc_active_mode_core_ldo_option_t CoreLDOOption
Specify Core LDO configurations in active mode.

struct *_spc_lowpower_mode_regulators_config*
#include <fsl_spc.h> Low Power Mode configuration.

Public Members

bool lpIREF
Enable/disable low power IREF in low power modes.

spc_bandgap_mode_t bandgapMode
Specify bandgap mode in low power modes.

bool lpBuff
Enable/disable CMP bandgap buffer in low power modes.

bool CoreIVS
Enable/disable CORE VDD internal voltage scaling.

spc_lowpower_mode_dcdc_option_t DCDCOption

Specify DCDC configurations in low power modes.

spc_lowpower_mode_sys_ldo_option_t SysLDOOption

Specify system LDO configurations in low power modes.

spc_lowpower_mode_core_ldo_option_t CoreLDOOption

Specify core LDO configurations in low power modes.

2.56 MCX_VBAT: Smart Power Switch

The enumeration of VBAT module status.

Values:

enumerator kStatus_VBAT_Fro16kNotEnabled

Internal 16kHz free running oscillator not enabled.

enumerator kStatus_VBAT_BandgapNotEnabled

Bandgap not enabled.

enumerator kStatus_VBAT_WrongCapacitanceValue

Wrong capacitance for selected oscillator mode.

enumerator kStatus_VBAT_ClockMonitorLocked

Clock monitor locked.

enumerator kStatus_VBAT_OSC32KNotReady

OSC32K not ready.

enumerator kStatus_VBAT_LDONotReady

LDO not ready.

enumerator kStatus_VBAT_TamperLocked

Tamper locked.

enum _vbat_status_flag

The enumeration of VBAT status flags.

Values:

enumerator kVBAT_StatusFlagPORDetect

VBAT domain has been reset

enumerator kVBAT_StatusFlagWakeupPin

A falling edge is detected on the wakeup pin.

enumerator kVBAT_StatusFlagBandgapTimer0

Bandgap Timer0 period reached.

enumerator kVBAT_StatusFlagBandgapTimer1

Bandgap Timer1 period reached.

enumerator kVBAT_StatusFlagLdoReady

LDO is enabled and ready.

enumerator kVBAT_StatusFlagOsc32kReady

OSC32k is enabled and clock is ready.

enumerator kVBAT_StatusFlagConfigDetect
Configuration error detected.

enumerator kVBAT_StatusFlagInterrupt0Detect
Interrupt 0 asserted.

enumerator kVBAT_StatusFlagInterrupt1Detect
Interrupt 1 asserted.

enumerator kVBAT_StatusFlagInterrupt2Detect
Interrupt 2 asserted.

enumerator kVBAT_StatusFlagInterrupt3Detect
Interrupt 2 asserted.

enum _vbat_interrupt_enable

The enumeration of VBAT interrupt enable.

Values:

enumerator kVBAT_InterruptEnablePORDetect
Enable POR detect interrupt.

enumerator kVBAT_InterruptEnableWakeupPin
Enable the interrupt when a falling edge is detected on the wakeup pin.

enumerator kVBAT_InterruptEnableBandgapTimer0
Enable the interrupt if Bandgap Timer0 period reached.

enumerator kVBAT_InterruptEnableBandgapTimer1
Enable the interrupt if Bandgap Timer1 period reached.

enumerator kVBAT_InterruptEnableLdoReady
Enable LDO ready interrupt.

enumerator kVBAT_InterruptEnableOsc32kReady
Enable OSC32K ready interrupt.

enumerator kVBAT_InterruptEnableConfigDetect
Enable configuration error detected interrupt.

enumerator kVBAT_InterruptEnableInterrupt0
Enable the interrupt0.

enumerator kVBAT_InterruptEnableInterrupt1
Enable the interrupt1.

enumerator kVBAT_InterruptEnableInterrupt2
Enable the interrupt2.

enumerator kVBAT_InterruptEnableInterrupt3
Enable the interrupt3.

enumerator kVBAT_AllInterruptsEnable
Enable all interrupts.

enum _vbat_wakeup_enable

The enumeration of VBAT wakeup enable.

Values:

enumerator kVBAT_WakeupEnablePORDetect
Enable POR detect wakeup.

enumerator `kVBAT_WakeupEnableWakeupPin`
 Enable wakeup feature when a falling edge is detected on the wakeup pin.

enumerator `kVBAT_WakeupEnableBandgapTimer0`
 Enable wakeup feature when bandgap timer0 period reached.

enumerator `kVBAT_WakeupEnableBandgapTimer1`
 Enable wakeup feature when bandgap timer1 period reached.

enumerator `kVBAT_WakeupEnableLdoReady`
 Enable wakeup when LDO ready.

enumerator `kVBAT_WakeupEnableOsc32kReady`
 Enable wakeup when OSC32k ready.

enumerator `kVBAT_WakeupEnableConfigDetect`
 Enable wakeup when configuration error detected.

enumerator `kVBAT_WakeupEnableInterrupt0`
 Enable wakeup when interrupt0 asserted.

enumerator `kVBAT_WakeupEnableInterrupt1`
 Enable wakeup when interrupt1 asserted.

enumerator `kVBAT_WakeupEnableInterrupt2`
 Enable wakeup when interrupt2 asserted.

enumerator `kVBAT_WakeupEnableInterrupt3`
 Enable wakeup when interrupt3 asserted.

enumerator `kVBAT_AllWakeupEnable`
 Enable all wakeup.

enum `_vbat_tamper_enable`
 The enumeration of VBAT tamper enable.

Values:

enumerator `kVBAT_TamperEnablePOR`
 Enable tamper if POR asserted in STATUS register.

enumerator `kVBAT_TamperEnableClockDetect`
 Enable tamper if clock monitor detect an error.

enumerator `kVBAT_TamperEnableConfigDetect`
 Enable tamper if configuration error detected.

enumerator `kVBAT_TamperEnableVoltageDetect`
 Enable tamper if voltage monitor detect an error.

enumerator `kVBAT_TamperEnableTemperatureDetect`
 Enable tamper if temperature monitor detect an error.

enumerator `kVBAT_TamperEnableSec0Detect`
 Enable tamper if security input 0 detect an error.

enum `_vbat_bandgap_timer_id`
 The enumeration of bandgap timer id, VBAT support two bandgap timers.

Values:

enumerator `kVBAT_BandgapTimer0`
 Bandgap Timer0.

enumerator kVBAT_BandgapTimer1
Bandgap Timer1.

enum _vbat_clock_enable

The enumeration of connections for OSC32K/FRO32K output clock to other modules.

Values:

enumerator kVBAT_EnableClockToDomain0
Enable clock to power domain0.

enumerator kVBAT_EnableClockToDomain1
Enable clock to power domain1.

enumerator kVBAT_EnableClockToDomain2
Enable clock to power domain2.

enumerator kVBAT_EnableClockToDomain3
Enable clock to power domain3.

enum _vbat_ram_array

The enumeration of SRAM arrays that controlled by VBAT. .

Values:

enumerator kVBAT_SramArray0
Specify SRAM array0 that controlled by VBAT.

enumerator kVBAT_SramArray1
Specify SRAM array1 that controlled by VBAT.

enumerator kVBAT_SramArray2
Specify SRAM array2 that controlled by VBAT.

enumerator kVBAT_SramArray3
Specify SRAM array3 that controlled by VBAT.

enum _vbat_bandgap_refresh_period

The enumeration of bandgap refresh period.

Values:

enumerator kVBAT_BandgapRefresh7P8125ms
Bandgap refresh every 7.8125ms.

enumerator kVBAT_BandgapRefresh15P625ms
Bandgap refresh every 15.625ms.

enumerator kVBAT_BandgapRefresh31P25ms
Bandgap refresh every 31.25ms.

enumerator kVBAT_BandgapRefresh62P5ms
Bandgap refresh every 62.5ms.

enum _vbat_bandgap_timer0_timeout_period

The enumeration of bandgap timer0 timeout period.

Values:

enumerator kVBAT_BangapTimer0Timeout1s
Bandgap timer0 timerout every 1s.

enumerator kVBAT_BangapTimer0Timeout500ms
Bandgap timer0 timerout every 500ms.

enumerator kVBAT_BangapTimer0Timeout250ms
Bandgap timer0 timerout every 250ms.

enumerator kVBAT_BangapTimer0Timeout125ms
Bandgap timer0 timerout every 125ms.

enumerator kVBAT_BangapTimer0Timeout62P5ms
Bandgap timer0 timerout every 62.5ms.

enumerator kVBAT_BangapTimer0Timeout31P25ms
Bandgap timer0 timerout every 31.25ms.

enum _vbat_osc32k_operate_mode

The enumeration of osc32k operate mode, including Bypass mode, low power switched mode and so on.

Values:

enumerator kVBAT_Osc32kEnabledToTransconductanceMode
Set to transconductance mode.

enumerator kVBAT_Osc32kEnabledToLowPowerBackupMode
Set to low power backup mode.

enumerator kVBAT_Osc32kEnabledToLowPowerSwitchedMode
Set to low power switched mode.

enum _vbat_osc32k_load_capacitance_select

The enumeration of OSC32K load capacitance.

Values:

enumerator kVBAT_Osc32kCrystalLoadCap0pF
Internal capacitance bank is enabled, set the internal capacitance to 0 pF.

enumerator kVBAT_Osc32kCrystalLoadCap2pF
Internal capacitance bank is enabled, set the internal capacitance to 2 pF.

enumerator kVBAT_Osc32kCrystalLoadCap4pF
Internal capacitance bank is enabled, set the internal capacitance to 4 pF.

enumerator kVBAT_Osc32kCrystalLoadCap6pF
Internal capacitance bank is enabled, set the internal capacitance to 6 pF.

enumerator kVBAT_Osc32kCrystalLoadCap8pF
Internal capacitance bank is enabled, set the internal capacitance to 8 pF.

enumerator kVBAT_Osc32kCrystalLoadCap10pF
Internal capacitance bank is enabled, set the internal capacitance to 10 pF.

enumerator kVBAT_Osc32kCrystalLoadCap12pF
Internal capacitance bank is enabled, set the internal capacitance to 12 pF.

enumerator kVBAT_Osc32kCrystalLoadCap14pF
Internal capacitance bank is enabled, set the internal capacitance to 14 pF.

enumerator kVBAT_Osc32kCrystalLoadCap16pF
Internal capacitance bank is enabled, set the internal capacitance to 16 pF.

enumerator kVBAT_Osc32kCrystalLoadCap18pF
Internal capacitance bank is enabled, set the internal capacitance to 18 pF.

enumerator kVBAT_Osc32kCrystalLoadCap20pF
Internal capacitance bank is enabled, set the internal capacitance to 20 pF.

enumerator `kVBAT_Osc32kCrystalLoadCap22pF`

Internal capacitance bank is enabled, set the internal capacitance to 22 pF.

enumerator `kVBAT_Osc32kCrystalLoadCap24pF`

Internal capacitance bank is enabled, set the internal capacitance to 24 pF.

enumerator `kVBAT_Osc32kCrystalLoadCap26pF`

Internal capacitance bank is enabled, set the internal capacitance to 26 pF.

enumerator `kVBAT_Osc32kCrystalLoadCap28pF`

Internal capacitance bank is enabled, set the internal capacitance to 28 pF.

enumerator `kVBAT_Osc32kCrystalLoadCap30pF`

Internal capacitance bank is enabled, set the internal capacitance to 30 pF.

enumerator `kVBAT_Osc32kCrystalLoadCapBankDisabled`

Internal capacitance bank is disabled.

enum `_vbat_osc32k_start_up_time`

The enumeration of start-up time of the oscillator.

Values:

enumerator `kVBAT_Osc32kStartUpTime8Sec`

Configure the start-up time as 8 seconds.

enumerator `kVBAT_Osc32kStartUpTime4Sec`

Configure the start-up time as 4 seconds.

enumerator `kVBAT_Osc32kStartUpTime2Sec`

Configure the start-up time as 2 seconds.

enumerator `kVBAT_Osc32kStartUpTime1Sec`

Configure the start-up time as 1 seconds.

enumerator `kVBAT_Osc32kStartUpTime0P5Sec`

Configure the start-up time as 0.5 seconds.

enumerator `kVBAT_Osc32kStartUpTime0P25Sec`

Configure the start-up time as 0.25 seconds.

enumerator `kVBAT_Osc32kStartUpTime0P125Sec`

Configure the start-up time as 0.125 seconds.

enumerator `kVBAT_Osc32kStartUpTime0P5MSec`

Configure the start-up time as 0.5 milliseconds.

enum `_vbat_internal_module_supply`

The enumeration of VBAT module supplies.

Values:

enumerator `kVBAT_ModuleSuppliedByVddBat`

VDD_BAT supplies VBAT modules.

enumerator `kVBAT_ModuleSuppliedByVddSys`

VDD_SYS supplies VBAT modules.

enum `_vbat_clock_monitor_divide_trim`

The enumeration of VBAT clock monitor divide trim value.

Values:

enumerator `kVBAT_ClockMonitorOperateAt1kHz`
Clock monitor operates at 1 kHz.

enumerator `kVBAT_ClockMonitorOperateAt64Hz`
Clock monitor operates at 64 Hz.

enum `_vbat_clock_monitor_freq_trim`

The enumeration of VBAT clock monitor frequency trim value used to adjust the clock monitor assert.

Values:

enumerator `kVBAT_ClockMonitorAssert2Cycle`
Clock monitor assert 2 cycles after expected edge.

enumerator `kVBAT_ClockMonitorAssert4Cycle`
Clock monitor assert 4 cycles after expected edge.

enumerator `kVBAT_ClockMonitorAssert6Cycle`
Clock monitor assert 8 cycles after expected edge.

enumerator `kVBAT_ClockMonitorAssert8Cycle`
Clock monitor assert 8 cycles after expected edge.

typedef enum `_vbat_bandgap_refresh_period` `vbat_bandgap_refresh_period_t`
The enumeration of bandgap refresh period.

typedef enum `_vbat_bandgap_timer0_timeout_period` `vbat_bandgap_timer0_timeout_period_t`
The enumeration of bandgap timer0 timeout period.

typedef enum `_vbat_osc32k_operate_mode` `vbat_osc32k_operate_mode_t`
The enumeration of osc32k operate mode, including Bypass mode, low power switched mode and so on.

typedef enum `_vbat_osc32k_load_capacitance_select` `vbat_osc32k_load_capacitance_select_t`
The enumeration of OSC32K load capacitance.

typedef enum `_vbat_osc32k_start_up_time` `vbat_osc32k_start_up_time_t`
The enumeration of start-up time of the oscillator.

typedef enum `_vbat_internal_module_supply` `vbat_internal_module_supply_t`
The enumeration of VBAT module supplies.

typedef enum `_vbat_clock_monitor_divide_trim` `vbat_clock_monitor_divide_trim_t`
The enumeration of VBAT clock monitor divide trim value.

typedef enum `_vbat_clock_monitor_freq_trim` `vbat_clock_monitor_freq_trim_t`
The enumeration of VBAT clock monitor frequency trim value used to adjust the clock monitor assert.

typedef struct `_vbat_fro16k_config` `vbat_fro16k_config_t`
The structure of internal 16kHz free running oscillator attributes.

typedef struct `_vbat_clock_monitor_config` `vbat_clock_monitor_config_t`
The structure of internal clock monitor, including divide trim and frequency trim.

typedef struct `_vbat_tamper_config` `vbat_tamper_config_t`
The structure of Tamper configuration.

FSL_VBAT_DRIVER_VERSION
VBAT driver version 2.3.1.

VBAT_LDORAMC_RET_MASK

VBAT_LDORAMC_RET_SHIFT

VBAT_LDORAMC_RET(x)

kVBAT__EnableClockToVddBat

kVBAT__EnableClockToVddSys

kVBAT__EnableClockToVddWake

kVBAT__EnableClockToVddMain

void VBAT_ConfigFRO16k(VBAT_Type *base, const *vbat_fro16k_config_t* *config)

Configure internal 16kHz free running oscillator, including enable FRO16k, gate FRO16k output.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to *vbat_fro16k_config_t* structure.

static inline void VBAT_EnableFRO16k(VBAT_Type *base, bool enable)

Enable/disable internal 16kHz free running oscillator.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable 16kHz FRO.
 - **true** Enable internal 16kHz free running oscillator.
 - **false** Disable internal 16kHz free running oscillator.

static inline bool VBAT_CheckFRO16kEnabled(VBAT_Type *base)

Check if internal 16kHz free running oscillator is enabled.

Parameters

- base – VBAT peripheral base address.

Return values

- true – The internal 16kHz Free running oscillator is enabled.
- false – The internal 16kHz Free running oscillator is disabled.

static inline void VBAT_UngateFRO16k(VBAT_Type *base, uint8_t connectionsMask)

Enable FRO16kHz output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The mask of modules that FRO16k is connected, should be the OR'ed value of *vbat_clock_enable_t*.

static inline void VBAT_GateFRO16k(VBAT_Type *base, uint8_t connectionsMask)

Disable FRO16kHz output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of *vbat_clock_enable_t*.

static inline void VBAT_LockFRO16kSettings(VBAT_Type *base)

Lock settings of internal 16kHz free running oscillator, please note that if locked 16kHz FRO's settings can not be updated until the next POR.

Note: Please note that the operation to ungate/gate FRO 16kHz output clock can not be locked by this function.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT_CheckFRO16kSettingsLocked(VBAT_Type *base)

Check if FRO16K settings are locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of FRO16k settings are locked, false in case of FRO16k settings are not locked.

static inline void VBAT_EnableCrystalOsc32k(VBAT_Type *base, bool enable)

Enable/disable 32K Crystal Oscillator.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable 32k Crystal Oscillator:
 - **true** Enable crystal oscillator and polling status register to check clock is ready.
 - **false** Disable crystal oscillator.

static inline void VBAT_BypassCrystalOsc32k(VBAT_Type *base, bool enableBypass)

Bypass 32k crystal oscillator, the clock is still output by oscillator but this clock is the same as clock provided on EXTAL pin.

Note: In bypass mode, oscillator must be enabled; To exit bypass mode, oscillator must be disabled.

Parameters

- base – VBAT peripheral base address.
- enableBypass – Used to enter/exit bypass mode:
 - **true** Enter into bypass mode;
 - **false** Exit bypass mode.

static inline void VBAT_AdjustCrystalOsc32kAmplifierGain(VBAT_Type *base, uint8_t coarse)

Adjust 32k crystal oscillator amplifier gain.

Parameters

- base – VBAT peripheral base address.
- coarse – Specify amplifier coarse trim value.

```
status_t VBAT_SetCrystalOsc32kModeAndLoadCapacitance(VBAT_Type *base,
                                                    vbat_osc32k_operate_mode_t
                                                    operateMode,
                                                    vbat_osc32k_load_capacitance_select_t
                                                    xtalCap,
                                                    vbat_osc32k_load_capacitance_select_t
                                                    extalCap)
```

Set 32k crystal oscillator mode and load capacitance for the XTAL/EXTAL pin.

Parameters

- base – VBAT peripheral base address.
- operateMode – Specify the crystal oscillator mode, please refer to `vbat_osc32k_operate_mode_t`.
- xtalCap – Specify the internal capacitance for the XTAL pin from the capacitor bank.
- extalCap – Specify the internal capacitance for the EXTAL pin from the capacitor bank.

Return values

- `kStatus_VBAT_WrongCapacitanceValue` – The load capacitance value to set is not align with operate mode's requirements.
- `kStatus_Success` – Success to set operate mode and load capacitance.

```
static inline void VBAT_TrimCrystalOsc32kStartupTime(VBAT_Type *base,
                                                    vbat_osc32k_start_up_time_t
                                                    startupTime)
```

Trim 32k crystal oscillator startup time.

Parameters

- base – VBAT peripheral base address.
- startupTime – Specify the startup time of the oscillator.

```
static inline void VBAT_SetOsc32kSwitchModeComparatorTrimValue(VBAT_Type *base, uint8_t
                                                                comparatorTrimValue)
```

Set crystal oscillator comparator trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.
- comparatorTrimValue – Comparator trim value, ranges from 0 to 7.

```
static inline void VBAT_SetOsc32kSwitchModeDelayTrimValue(VBAT_Type *base, uint8_t
                                                         delayTrimValue)
```

Set crystal oscillator delay trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.
- delayTrimValue – Delay trim value, ranges from 0 to 15.

```
static inline void VBAT_SetOsc32kSwitchModeCapacitorTrimValue(VBAT_Type *base, uint8_t
                                                             capacitorTrimValue)
```

Set crystal oscillator capacitor trim value when oscillator is set as low power switch mode.

Parameters

- base – VBAT peripheral base address.

- capacitorTrimValue – Capacitor value to trim, ranges from 0 to 3.

static inline void VBAT_LockOsc32kSettings(VBAT_Type *base)

Lock Osc32k settings, after locked all writes to the Oscillator registers are blocked.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT_UnlockOsc32kSettings(VBAT_Type *base)

Unlock Osc32k settings.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT_CheckOsc32kSettingsLocked(VBAT_Type *base)

Check if osc32k settings are locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of osc32k settings are locked, false in case of osc32k settings are not locked.

static inline void VBAT_UngateOsc32k(VBAT_Type *base, uint8_t connectionsMask)

Enable OSC32k output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of vbat_clock_enable_t.

static inline void VBAT_GateOsc32k(VBAT_Type *base, uint8_t connectionsMask)

Disable OSC32k output clock to selected modules.

Parameters

- base – VBAT peripheral base address.
- connectionsMask – The OR'ed value of vbat_clock_enable_t.

status_t VBAT_EnableBandgap(VBAT_Type *base, bool enable)

Enable/disable Bandgap.

Note: The FRO16K must be enabled before enabling the bandgap.

Note: This setting can be locked by VBAT_LockRamLdoSettings() function.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable bandgap.
 - **true** Enable the bandgap.
 - **false** Disable the bandgap.

Return values

- kStatus_Success – Success to enable/disable the bandgap.

- `kStatus_VBAT_Fro16kNotEnabled` – Fail to enable the bandgap due to FRO16k is not enabled previously.

`static inline bool VBAT_CheckBandgapEnabled(VBAT_Type *base)`

Check if bandgap is enabled.

Parameters

- `base` – VBAT peripheral base address.

Return values

- `true` – The bandgap is enabled.
- `false` – The bandgap is disabled.

`static inline void VBAT_EnableBandgapRefreshMode(VBAT_Type *base, bool enableRefreshMode)`

Enable/disable bandgap low power refresh mode.

Note: For lowest power consumption, refresh mode must be enabled.

Note: This setting can be locked by `VBAT_LockRamLdoSettings()` function.

Parameters

- `base` – VBAT peripheral base address.
- `enableRefreshMode` – Used to enable/disable bandgap low power refresh mode.
 - **true** Enable bandgap low power refresh mode.
 - **false** Disable bandgap low power refresh mode.

`status_t VBAT_EnableBackupSRAMRegulator(VBAT_Type *base, bool enable)`

Enable/disable Backup RAM Regulator(RAM_LDO).

Note: This setting can be locked by `VBAT_LockRamLdoSettings()` function.

Parameters

- `base` – VBAT peripheral base address.
- `enable` – Used to enable/disable RAM_LDO.
 - **true** Enable backup SRAM regulator.
 - **false** Disable backup SRAM regulator.

Return values

- `kStatusSuccess` – Success to enable/disable backup SRAM regulator.
- `kStatus_VBAT_Fro16kNotEnabled` – Fail to enable backup SRAM regulator due to FRO16k is not enabled previously.
- `kStatus_VBAT_BandgapNotEnabled` – Fail to enable backup SRAM regulator due to the bandgap is not enabled previously.

```
static inline void VBAT_LockRamLdoSettings(VBAT_Type *base)
```

Lock settings of RAM_LDO, please note that if locked then RAM_LDO's settings can not be updated until the next POR.

Parameters

- base – VBAT peripheral base address.

```
static inline bool VBAT_CheckRamLdoSettingsLocked(VBAT_Type *base)
```

Check if RAM_LDO settings is locked.

Parameters

- base – VBAT peripheral base address.

Returns

true in case of RAM_LDO settings are locked, false in case of RAM_LDO settings are unlocked.

```
status_t VBAT_SwitchSRAMPowerByLDOSRAM(VBAT_Type *base)
```

Switch the SRAM to be powered by LDO_RAM.

Note: This function can be used to switch the SRAM to the VBAT retention supply at any time, but please note that the SRAM must not be accessed during this time.

Note: Invoke this function to switch power supply before switching off external power.

Note: RAM_LDO must be enabled before invoking this function.

Note: To access the SRAM arrays retained by the LDO_RAM, please invoke VBAT_SwitchSRAMPowerBySocSupply(), after external power is switched back on.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatusSuccess – Success to Switch SRAM powered by VBAT.
- kStatus_VBAT_Fro16kNotEnabled – Fail to switch SRAM powered by VBAT due to FRO16K not enabled previously.

```
static inline void VBAT_SwitchSRAMPowerBySocSupply(VBAT_Type *base)
```

Switch the RAM to be powered by Soc Supply in software mode.

Parameters

- base – VBAT peripheral base address.

```
static inline void VBAT_PowerOffSRAMsInLowPowerModes(VBAT_Type *base, uint8_t
                                                    sramMask)
```

Power off selected SRAM array in low power modes.

Parameters

- base – VBAT peripheral base address.
- sramMask – The mask of SRAM array to power off, should be the OR'ed value of vbat_ram_array_t.

static inline void VBAT_RetainSRAMsInLowPowerModes(VBAT_Type *base, uint8_t sramMask)
Retain selected SRAM array in low power modes.

Parameters

- base – VBAT peripheral base address.
- sramMask – The mask of SRAM array to retain, should be the OR'ed value of vbat_ram_array_t.

static inline void VBAT_EnableSRAMIsolation(VBAT_Type *base, bool enable)
Enable/disable SRAM isolation.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable SRAM violation.
 - **true** SRAM will be isolated.
 - **false** SRAM state follows the SoC power modes.

status_t VBAT_EnableBandgapTimer(VBAT_Type *base, bool enable, uint8_t timerIdMask)
Enable/disable Bandgap timer.

Note: The bandgap timer is available when the bandgap is enabled and are clocked by the FRO16k.

Parameters

- base – VBAT peripheral base address.
- enable – Used to enable/disable bandgap timer.
- timerIdMask – The mask of bandgap timer Id, should be the OR'ed value of vbat_bandgap_timer_id_t.

Return values

- kStatus_Success – Success to enable/disable selected bandgap timer.
- kStatus_VBAT_Fro16kNotEnabled – Fail to enable/disable selected bandgap timer due to FRO16k not enabled previously.
- kStatus_VBAT_BandgapNotEnabled – Fail to enable/disable selected bandgap timer due to bandgap not enabled previously.

void VBAT_SetBandgapTimer0TimeoutValue(VBAT_Type *base,
vbat_bandgap_timer0_timeout_period_t
timeoutPeriod)

Set bandgap timer0 timeout value.

Note: The timeout value can only be changed when the timer is disabled.

Parameters

- base – VBAT peripheral base address.
- timeoutPeriod – Bandgap timer timeout value, please refer to vbat_bandgap_timer0_timeout_period_t.

void VBAT_SetBandgapTimer1TimeoutValue(VBAT_Type *base, uint32_t timeoutPeriod)
Set bandgap timer1 timeout value.

Note: The timeout value can only be changed when the timer is disabled.

Parameters

- base – VBAT peripheral base address.
- timeoutPeriod – The bandgap timerout 1 period, in number of seconds, ranging from 0 to 65535s.

static inline void VBAT_SwitchVBATModuleSupplyActiveMode(VBAT_Type *base,
vbat_internal_module_supply_t
supply)

Control the VBAT internal switch in active mode, VBAT modules can be supplied by VDD_BAT and VDD_SYS.

Parameters

- base – VBAT peripheral base address.
- supply – Used to control the VBAT internal switch.

static inline *vbat_internal_module_supply_t* VBAT_GetVBATModuleSupply(VBAT_Type *base)
Get VBAT module supply in active mode.

Parameters

- base – VBAT peripheral base address.

Returns

VDD_SYS supplies VBAT modules or VDD_BAT supplies VBAT modules, in type of *vbat_internal_module_supply_t*.

static inline void VBAT_SwitchVBATModuleSupplyLowPowerMode(VBAT_Type *base,
vbat_internal_module_supply_t
supply)

Control the VBAT internal switch in low power modes.

Note: If VBAT modules are supplied by VDD_SYS in low power modes, VBAT module will also be supplied by VDD_SYS in active mode.

Parameters

- base – VBAT peripheral base address.
- supply – Used to specify which voltage input supply VBAT modules in low power mode.

static inline void VBAT_LockSwitchControl(VBAT_Type *base)
Lock switch control, if locked all writes to the switch registers will be blocked.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT_UnlockSwitchControl(VBAT_Type *base)
Unlock switch control.

Parameters

- base – VBAT peripheral base address.

static inline bool VBAT_CheckSwitchControlLocked(VBAT_Type *base)

Check if switch control is locked.

Parameters

- base – VBAT peripheral base address.

Return values

- false – switch control is not locked.
- true – switch control is locked, any writes to related registers are blocked.

status_t VBAT_InitClockMonitor(VBAT_Type *base, const vbat_clock_monitor_config_t *config)

Initialize the VBAT clock monitor, enable clock monitor and set the clock monitor configuration.

Note: Both FRO16K and OSC32K should be enabled and stable before invoking this function.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to vbat_clock_monitor_config_t structure.

Return values

- kStatus_Success – Clock monitor is initialized successfully.
- kStatus_VBAT_Fro16kNotEnabled – FRO16K is not enabled.
- kStatus_VBAT_Osc32kNotReady – OSC32K is not ready.
- kStatus_VBAT_ClockMonitorLocked – Clock monitor is locked.

status_t VBAT_DeinitMonitor(VBAT_Type *base)

Deinitialize the VBAT clock monitor.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatus_Success – Clock monitor is de-initialized successfully.
- kStatus_VBAT_ClockMonitorLocked – Control of Clock monitor is locked.

static inline void VBAT_EnableClockMonitor(VBAT_Type *base, bool enable)

Enable/disable clock monitor.

- false: disable clock monitor.

Parameters

- base – VBAT peripheral base address.
- enable – Switcher to enable/disable clock monitor:
 - true: enable clock monitor;

static inline void VBAT_SetClockMonitorDivideTrim(VBAT_Type *base,
vbat_clock_monitor_divide_trim_t
divideTrim)

Set clock monitor's divide trim, available value is `kVBAT_ClockMonitorOperateAt1kHz` and `kVBAT_ClockMonitorOperateAt64Hz`.

Parameters

- `base` – VBAT peripheral base address.
- `divideTrim` – Specify divide trim value, please refer to `vbat_clock_monitor_divide_trim_t`.

```
static inline void VBAT_SetClockMonitorFrequencyTrim(VBAT_Type *base,
                                                    vbat_clock_monitor_freq_trim_t
                                                    freqTrim)
```

Set clock monitor's frequency trim, available value is `kVBAT_ClockMonitorAssert2Cycle`, `kVBAT_ClockMonitorAssert4Cycle`, `kVBAT_ClockMonitorAssert6Cycle` and `kVBAT_ClockMonitorAssert8Cycle`.

Parameters

- `base` – VBAT peripheral base address.
- `freqTrim` – Specify frequency trim value, please refer to `vbat_clock_monitor_freq_trim_t`.

```
static inline void VBAT_LockClockMonitorControl(VBAT_Type *base)
Lock clock monitor enable/disable control.
```

Note: If locked, it is not allowed to change clock monitor enable/disable control.

Parameters

- `base` – VBAT peripheral base address.

```
static inline void VBAT_UnlockClockMonitorControl(VBAT_Type *base)
Unlock clock monitor enable/disable control.
```

Parameters

- `base` – VBTA peripheral base address.

```
static inline bool VBAT_CheckClockMonitorControlLocked(VBAT_Type *base)
Check if clock monitor enable/disable control is locked.
```

Note: If locked, it is not allowed to change clock monitor enable/disable control.

Parameters

- `base` – VBAT peripheral base address.

Return values

- `false` – clock monitor enable/disable control is not locked.
- `true` – clock monitor enable/disable control is locked, any writes to related registers are blocked.

```
status_t VBAT_InitTamper(VBAT_Type *base, const vbat_tamper_config_t *config)
Initialize tamper control.
```

Note: Both FRO16K and bandgap should be enabled before calling this function.

Parameters

- base – VBAT peripheral base address.
- config – Pointer to vbat_tamper_config_t structure.

Return values

- kStatus_Success – Tamper is initialized successfully.
- kStatus_VBAT_TamperLocked – Tamper control is locked.
- kStatus_VBAT_BandgapNotEnabled – Bandgap is not enabled.
- kStatus_VBAT_Fro16kNotEnabled – FRO 16K is not enabled.

status_t VBAT_DeinitTamper(VBAT_Type *base)

De-initialize tamper control.

Parameters

- base – VBAT peripheral base address.

Return values

- kStatus_Success – Tamper is de-initialized successfully.
- kStatus_VBAT_TamperLocked – Tamper control is locked.

static inline void VBAT_EnableTamper(VBAT_Type *base, uint32_t tamperEnableMask)

Enable tampers for VBAT.

Parameters

- base – VBAT peripheral base address.
- tamperEnableMask – Mask of tamper to be enabled, should be the OR'ed value of `_vbat_tamper_enable`.

static inline void VBAT_DisableTamper(VBAT_Type *base, uint32_t tamperEnableMask)

Disable tampers for VBAT.

Parameters

- base – VBAT peripheral base address.
- tamperEnableMask – Mask of tamper to be disabled, should be the OR'ed value of `_vbat_tamper_enable`.

static inline uint32_t VBAT_GetTamperEnableInfo(VBAT_Type *base)

Get tamper enable information.

Parameters

- base – VBAT peripheral base address.

Returns

Mask of tamper enable information, should be the OR'ed value of `_vbat_tamper_enable`.

static inline void VBAT_LockTamperControl(VBAT_Type *base)

Lock tamper control, if locked, it is not allowed to change tamper control.

Parameters

- base – VBAT peripheral base address.

static inline void VBAT_UnlockTamperControl(VBAT_Type *base)

Unlock tamper control.

Parameters

- base – VBAT peripheral base address.

```
static inline bool VBAT_CheckTamperControlLocked(VBAT_Type *base)
```

Check if tamper control is locked.

Parameters

- base – VBAT peripheral base address.

Return values

- false – Tamper control is not locked.
- true – Tamper control is locked, any writes to related registers are blocked.

```
static inline uint32_t VBAT_GetStatusFlags(VBAT_Type *base)
```

Get VBAT status flags.

Parameters

- base – VBAT peripheral base address.

Returns

The asserted status flags, should be the OR'ed value of `vbat_status_flag_t`.

```
static inline void VBAT_ClearStatusFlags(VBAT_Type *base, uint32_t mask)
```

Clear VBAT status flags.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of status flags to be cleared, should be the OR'ed value of `vbat_status_flag_t` except `kVBAT_StatusFlagLdoReady`, `kVBAT_StatusFlagOsc32kReady`, `kVBAT_StatusFlagInterrupt0Detect`, `kVBAT_StatusFlagInterrupt1Detect`, `kVBAT_StatusFlagInterrupt2Detect`, `kVBAT_StatusFlagInterrupt3Detect`.

```
static inline void VBAT_EnableInterrupts(VBAT_Type *base, uint32_t mask)
```

Enable interrupts for the VBAT module, such as POR detect interrupt, Wakeup Pin interrupt and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of interrupts to be enabled, should be the OR'ed value of `vbat_interrupt_enable_t`.

```
static inline void VBAT_DisableInterrupts(VBAT_Type *base, uint32_t mask)
```

Disable interrupts for the VBAT module, such as POR detect interrupt, wakeup pin interrupt and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of interrupts to be disabled, should be the OR'ed value of `vbat_interrupt_enable_t`.

```
static inline void VBAT_EnableWakeup(VBAT_Type *base, uint32_t mask)
```

Enable wakeup for the VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of enumerators in `vbat_wakeup_enable_t`.

```
static inline void VBAT_DisableWakeup(VBAT_Type *base, uint32_t mask)
```

Disable wakeup for VBAT module, such as POR detect wakeup, wakeup pin wakeup and so on.

Parameters

- base – VBAT peripheral base address.
- mask – The mask of enumerators in vbat_wakeup_enable_t.

```
static inline void VBAT_LockInterruptWakeupSettings(VBAT_Type *base)
```

Lock VBAT interrupt and wakeup settings, please note that if locked the interrupt and wakeup settings can not be updated until the next POR.

Parameters

- base – VBAT peripheral base address.

```
static inline void VBAT_SetWakeupPinDefaultState(VBAT_Type *base, bool assert)
```

Set the default state of the WAKEUP_b pin output when no enabled wakeup source is asserted.

Parameters

- base – VBAT peripheral base address.
- assert – Used to set default state of the WAKEUP_b pin output:
 - **true** WAKEUP_b output state is logic one;
 - **false** WAKEUP_b output state is logic zero.

```
struct _vbat_fro16k_config
```

#include <fsl_vbat.h> The structure of internal 16kHz free running oscillator attributes.

Public Members

```
bool enableFRO16k
```

Enable/disable internal 16kHz free running oscillator.

```
uint8_t enabledConnectionsMask
```

The mask of connected modules to enable FRO16k clock output.

```
struct _vbat_clock_monitor_config
```

#include <fsl_vbat.h> The structure of internal clock monitor, including divide trim and frequency trim.

Public Members

```
vbat_clock_monitor_freq_trim_t freqTrim
```

Frequency trim value used to adjust the clock monitor assert, please refer to vbat_clock_monitor_freq_trim_t.

```
bool lock
```

Lock the clock monitor control after enabled.

```
struct _vbat_tamper_config
```

#include <fsl_vbat.h> The structure of Tamper configuration.

Public Members

`bool enableVoltageDetect`

Enable/disable voltage detection.

`bool enableTemperatureDetect`

Enable/disable temperature detection.

`bool lock`

Lock the tamper control after enabled.

2.57 OPAMP: Operational Amplifier

`void OPAMP_Init(OPAMP_Type *base, const opamp_config_t *config)`

Initialize OPAMP instance.

Parameters

- `base` – OPAMP peripheral base address.
- `config` – The pointer to `opamp_config_t`.

`void OPAMP_Deinit(OPAMP_Type *base)`

De-initialize OPAMP instance.

Parameters

- `base` – OPAMP peripheral base address.

`void OPAMP_GetDefaultConfig(opamp_config_t *config)`

Get default configuration of OPAMP.

```
config->enable      = false;
config->mode        = kOPAMP_LowNoiseMode;
config->trimOption  = kOPAMP_TrimOptionDefault;
config->intRefVoltage = kOPAMP_IntRefVoltVddaDiv2;
config->enablePosADCSw = false;
config->posRefVoltage = kOPAMP_PosRefVoltVrefh3;
config->posGain      = kOPAMP_PosGainReserved;
config->negGain      = kOPAMP_NegGainBufferMode;
```

Parameters

- `config` – The pointer to `opamp_config_t`.

`static inline void OPAMP_DoPosGainConfig(OPAMP_Type *base, opamp_positive_gain_t option)`

Configure OPAMP positive port gain.

Parameters

- `base` – OPAMP peripheral base address.
- `option` – OPAMP positive port gain.

`static inline void OPAMP_DoNegGainConfig(OPAMP_Type *base, opamp_negative_gain_t option)`

Configure OPAMP negative port gain.

Parameters

- `base` – OPAMP peripheral base address.
- `option` – OPAMP negative port gain.

static inline void OPAMP_EnableRefBuffer(OPAMP_Type *base, bool enable)

Enable reference buffer.

Parameters

- base – OPAMP peripheral base address.
- enable – true to enable and false to disable.

static inline void OPAMP_EnableTriggerMode(OPAMP_Type *base, bool enable)

Enable OPAMP trigger mode.

Parameters

- base – OPAMP peripheral base address.
- enable – true to enable and false to disable.

FSL_OPAMP_DRIVER_VERSION

OPAMP driver version.

enum __opamp_mode

The enumeration of OPAMP mode, including low noise mode and high speed mode.

Values:

enumerator kOPAMP_LowNoiseMode

Set opamp mode as low noise mode.

enumerator kOPAMP_HighSpeedMode

Set opamp mode as high speed mode.

enum __opamp_bias_current_trim_option

The enumeration of bias current trim option.

Values:

enumerator kOPAMP_TrimOptionDefault

Default Bias current trim option.

enumerator kOPAMP_TrimOptionIncreaseCurrent

Trim option selected as increase current.

enumerator kOPAMP_TrimOptionDecreaseCurrent

Trim option selected as decrease current.

enumerator kOPAMP_TrimOptionFurtherDecreaseCurrent

Trim option selected as further decrease current.

enum __opamp_internal_ref_voltage

The enumeration of internal reference voltage.

Values:

enumerator kOPAMP_IntRefVoltVddaDiv2

Internal reference voltage selected as Vdda/2.

enumerator kOPAMP_IntRefVoltVdda3V

Internal reference voltage selected as Vdda_3V.

enumerator kOPAMP_IntRefVoltVssa3V

Internal reference voltage selected as Vssa_3V.

enumerator kOPAMP_IntRefVoltNotAllowed

Internal reference voltage not allowed.

enum `_opamp_positive_ref_voltage`

The enumeration of positive reference voltage—please refer to manual use.

Values:

enumerator `kOPAMP_PosRefVoltVrefh3`

Positive part reference voltage select `Vrefh3`, connected from DAC output.

enumerator `kOPAMP_PosRefVoltVrefh0`

Positive part reference voltage select `Vrefh0`, connected from VDDA supply.

enumerator `kOPAMP_PosRefVoltVrefh1`

Positive part reference voltage select `Vrefh1`, connected from Voltage reference output.

enumerator `kOPAMP_PosRefVoltVrefh4`

Positive part reference voltage select 520mv or reserved.

enum `_opamp_positive_gain`

The enumeration of positive programmable gain (please refer to manual use).

Values:

enumerator `kOPAMP_PosGainReserved`

Positive Gain reserved.

enumerator `kOPAMP_PosGainNonInvert1X`

Positive non-inverting gain application 1X.

enumerator `kOPAMP_PosGainNonInvert2X`

Positive non-inverting gain application 2X.

enumerator `kOPAMP_PosGainNonInvert4X`

Positive non-inverting gain application 4X.

enumerator `kOPAMP_PosGainNonInvert8X`

Positive non-inverting gain application 8X.

enumerator `kOPAMP_PosGainNonInvert16X`

Positive non-inverting gain application 16X.

enumerator `kOPAMP_PosGainNonInvert33X`

Positive non-inverting gain application 33X.

enumerator `kOPAMP_PosGainNonInvert64X`

Positive non-inverting gain application 64X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer2X`

Positive non-inverting gain application 2X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer3X`

Positive non-inverting gain application 3X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer5X`

Positive non-inverting gain application 5X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer9X`

Positive non-inverting gain application 9X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer17X`

Positive non-inverting gain application 17X.

enumerator `kOPAMP_PosGainNonInvertDisableBuffer34X`

Positive non-inverting gain application 34X.

enumerator kOPAMP_PosGainNonInvertDisableBuffer65X
Positive non-inverting gain application 65X.

enum _opamp_negative_gain

The enumeration of negative programmable gain.

Values:

enumerator kOPAMP_NegGainBufferMode
Negative Buffer Mode.

enumerator kOPAMP_NegGainInvert1X
Negative inverting gain application -1X.

enumerator kOPAMP_NegGainInvert2X
Negative inverting gain application -2X.

enumerator kOPAMP_NegGainInvert4X
Negative inverting gain application -4X.

enumerator kOPAMP_NegGainInvert8X
Negative inverting gain application -8X.

enumerator kOPAMP_NegGainInvert16X
Negative inverting gain application -16X.

enumerator kOPAMP_NegGainInvert33X
Negative inverting gain application -33X.

enumerator kOPAMP_NegGainInvert64X
Negative inverting gain application -64X.

enum _opamp_positive_input_channel_selection

The enumeration of positive input channel selection.

Values:

enumerator kOPAMP_PosInputChannel0
When OPAMP not in trigger mode, select positive input 0 (INP0).

enumerator kOPAMP_PosInputChannel1
When OPAMP not in trigger mode, select positive input 1 (INP1).

typedef enum _opamp_mode opamp_mode_t

The enumeration of OPAMP mode, including low noise mode and high speed mode.

typedef enum _opamp_bias_current_trim_option opamp_bias_current_trim_option_t

The enumeration of bias current trim option.

typedef enum _opamp_internal_ref_voltage opamp_internal_ref_voltage_t

The enumeration of internal reference voltage.

typedef enum _opamp_positive_ref_voltage opamp_positive_ref_voltage_t

The enumeration of positive reference voltage [please refer to manual use].

typedef enum _opamp_positive_gain opamp_positive_gain_t

The enumeration of positive programmable gain (please refer to manual use).

typedef enum _opamp_negative_gain opamp_negative_gain_t

The enumeration of negative programmable gain.

typedef enum _opamp_positive_input_channel_selection

opamp_positive_input_channel_selection_t

The enumeration of positive input channel selection.

```
typedef struct _opamp_config opamp_config_t
    OPAMP configuraion, including mode, internal reference voltage, positive gain, negative
    gain and so on.

struct _opamp_config
    #include <fsl_opamp.h> OPAMP configuraion, including mode, internal reference voltage,
    positive gain, negative gain and so on.
```

Public Members

```
bool enable
    Enable/disable OPAMP.

opamp_mode_t mode
    Opamp mode, available values are kOPAMP_LowNoiseMode and
    kOPAMP_HighSpeedMode.

opamp_bias_current_trim_option_t trimOption
    Bias current trim option, please refer to opamp_bias_current_trim_option_t.

opamp_internal_ref_voltage_t intRefVoltage
    Internal reference voltage, please refer to opamp_internal_ref_voltage_t.

opamp_positive_ref_voltage_t posRefVoltage
    Positive part reference voltage, please refer to opamp_positive_ref_voltage_t.

opamp_positive_gain_t posGain
    Positive part programmable gain, please refer to opamp_positive_gain_t.

opamp_negative_gain_t negGain
    Negative part programmable gain, please refer to opamp_negative_gain_t.

bool enableOutputSwitch
    OPAMP out to negative gain resistor ladder switch.

bool enablePosADCSw1
    Positive part reference voltage switch to ADC channel or not.
    • true Positive part reference voltage switch to ADC channel.
    • false Positive part reference voltage do not switch to ADC channel.

bool enablePosADCSw2
    Positive part reference voltage switch to ADC channel or not.
    • true Positive part reference voltage switch to ADC channel.
    • false Positive part reference voltage do not switch to ADC channel.

bool enableRefBuffer
    Reference buffer enable.

opamp_positive_input_channel_selection_t PosInputChannelSelection
    Positive Input Channel Selection

bool enableTriggerMode
    Trigger Mode Enable.
```

2.58 OSTIMER: OS Event Timer Driver

`void OSTIMER_Init(OSTIMER_Type *base)`

Initializes an OSTIMER by turning its bus clock on.

`void OSTIMER_Deinit(OSTIMER_Type *base)`

Deinitializes a OSTIMER instance.

This function shuts down OSTIMER bus clock

Parameters

- `base` – OSTIMER peripheral base address.

`uint64_t OSTIMER_GrayToDecimal(uint64_t gray)`

Translate the value from gray-code to decimal.

Parameters

- `gray` – The gray value input.

Returns

The decimal value.

`static inline uint64_t OSTIMER_DecimalToGray(uint64_t dec)`

Translate the value from decimal to gray-code.

Parameters

- `dec` – The decimal value.

Returns

The gray code of the input value.

`uint32_t OSTIMER_GetStatusFlags(OSTIMER_Type *base)`

Get OSTIMER status Flags.

This returns the status flag. Currently, only match interrupt flag can be got.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

status register value

`void OSTIMER_ClearStatusFlags(OSTIMER_Type *base, uint32_t mask)`

Clear Status Interrupt Flags.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- `base` – OSTIMER peripheral base address.
- `mask` – Clear bit mask.

Returns

none

`status_t OSTIMER_SetMatchRawValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)`

Set the match raw value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central EVTIMER. Please note that, the data format may be gray-code, if so, please using `OSTIMER_SetMatchValue()`.

Parameters

- `base` – OSTIMER peripheral base address.
- `count` – OSTIMER timer match value.(Value may be gray-code format)
- `cb` – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- `kStatus_Success` – - Set match raw value and enable interrupt Successfully.
- `kStatus_Fail` – - Set match raw value fail.

`status_t OSTIMER_SetMatchValue(OSTIMER_Type *base, uint64_t count, ostimer_callback_t cb)`

Set the match value for OSTIMER.

This function will set a match value for OSTIMER with an optional callback. And this callback will be called while the data in dedicated pair match register is equals to the value of central OS TIMER.

Parameters

- `base` – OSTIMER peripheral base address.
- `count` – OSTIMER timer match value.(Value is decimal format, and this value will be translate to Gray code in API if the IP counter is gray encoded.)
- `cb` – OSTIMER callback (can be left as NULL if none, otherwise should be a void func(void)).

Return values

- `kStatus_Success` – - Set match value and enable interrupt Successfully.
- `kStatus_Fail` – - Set match value fail.

`static inline void OSTIMER_SetMatchRegister(OSTIMER_Type *base, uint64_t value)`

Set value to OSTIMER MATCH register directly.

This function writes the input value to OSTIMER MATCH register directly, it does not touch any other registers. Note that, the data format is gray-code. The function `OSTIMER_DecimalToGray` could convert decimal value to gray code.

Parameters

- `base` – OSTIMER peripheral base address.
- `value` – OSTIMER timer match value (Value is gray-code format).

`static inline uint64_t OSTIMER_GetMatchRegister(OSTIMER_Type *base)`

Get the match value from OSTIMER.

This function will get the match value from OSTIMER. The value of timer match is gray code format.

Parameters

- `base` – OSTIMER peripheral base address.

Returns

Value of match register, data format is gray code.

`static inline uint64_t OSTIMER_GetMatchValue(OSTIMER_Type *base)`

Get the match value from OSTIMER.

This function will get a match value from OSTIMER.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of match register.

```
static inline void OSTIMER_EnableMatchInterrupt(OSTIMER_Type *base)
```

Enable the OSTIMER counter match interrupt.

Enable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- base – OSTIMER peripheral base address.

```
static inline void OSTIMER_DisableMatchInterrupt(OSTIMER_Type *base)
```

Disable the OSTIMER counter match interrupt.

Disable the timer counter match interrupt. The interrupt happens when OSTIMER counter matches the value in MATCH registers.

Parameters

- base – OSTIMER peripheral base address.

```
static inline uint64_t OSTIMER_GetCurrentTimerRawValue(OSTIMER_Type *base)
```

Get current timer raw count value from OSTIMER.

This function will get the timer count value from OS timer register. The raw value of timer count may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of OSTIMER, may be gray code format.

```
uint64_t OSTIMER_GetCurrentTimerValue(OSTIMER_Type *base)
```

Get current timer count value from OSTIMER.

This function will get a decimal timer count value. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of OSTIMER which will be formatted to decimal value.

```
static inline uint64_t OSTIMER_GetCaptureRawValue(OSTIMER_Type *base)
```

Get the capture value from OSTIMER.

This function will get a captured value from OSTIMER. The Raw value of timer capture may be gray code format.

Parameters

- base – OSTIMER peripheral base address.

Returns

Raw value of capture register, data format may be gray code.

```
uint64_t OSTIMER_GetCaptureValue(OSTIMER_Type *base)
```

Get the capture value from OSTIMER.

This function will get a capture decimal-value from OSTIMER. If the RAW value of timer count is gray code format, it will be translated to decimal data internally.

Parameters

- base – OSTIMER peripheral base address.

Returns

Value of capture register, data format is decimal.

```
void OSTIMER_HandleIRQ(OSTIMER_Type *base, ostimer_callback_t cb)
```

OS timer interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in OSTIMER_SetMatchValue()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – OS timer peripheral base address.
- cb – callback scheduled for this instance of OS timer

Returns

none

```
FSL_OSTIMER_DRIVER_VERSION
```

OSTIMER driver version.

```
enum _ostimer_flags
```

OSTIMER status flags.

Values:

```
enumerator kOSTIMER_MatchInterruptFlag
```

Match interrupt flag bit, sets if the match value was reached.

```
typedef void (*ostimer_callback_t)(void)
```

ostimer callback function.

2.59 PORT: Port Control and Interrupts

```
static inline void PORT_GetVersionInfo(PORT_Type *base, port_version_info_t *info)
```

Get PORT version information.

Parameters

- base – PORT peripheral base pointer
- info – PORT version information

```
static inline void PORT_SecletPortVoltageRange(PORT_Type *base, port_voltage_range_t range)
```

Get PORT version information.

Note: : PORTA_CONFIG[RANGE] controls the voltage ranges of Port A, B, and C. Read or write PORTB_CONFIG[RANGE] and PORTC_CONFIG[RANGE] does not take effect.

Parameters

- base – PORT peripheral base pointer
- range – port voltage range

```
static inline void PORT_SetPinConfig(PORT_Type *base, uint32_t pin, const port_pin_config_t *config)
```

Sets the port PCR register.

This is an example to define an input pin or output pin PCR configuration.

```
// Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnLockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultiplePinsConfig(PORT_Type *base, uint32_t mask, const port_pin_config_t *config)
```

Sets the port PCR register for multiple pins.

This is an example to define input pins or output pins PCR configuration.

```
Define a digital input pin PCR configuration
port_pin_config_t config = {
    kPORT_PullUp ,
    kPORT_PullEnable,
    kPORT_FastSlewRate,
    kPORT_PassiveFilterDisable,
    kPORT_OpenDrainDisable,
    kPORT_LowDriveStrength,
    kPORT_MuxAsGpio,
    kPORT_UnlockRegister,
};
```

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT PCR register configuration structure.

```
static inline void PORT_SetMultipleInterruptPinsConfig(PORT_Type *base, uint32_t mask, port_interrupt_t config)
```

Sets the port interrupt configuration in PCR register for multiple pins.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- config – PORT pin interrupt configuration.
 - #kPORT_InterruptOrDMADisabled: Interrupt/DMA request disabled.
 - #kPORT_DMARisingEdge : DMA request on rising edge(if the DMA requests exit).

- #kPORT_DMAFallingEdge: DMA request on falling edge(if the DMA requests exit).
- #kPORT_DMAEitherEdge : DMA request on either edge(if the DMA requests exit).
- #kPORT_FlagRisingEdge : Flag sets on rising edge(if the Flag states exit).
- #kPORT_FlagFallingEdge : Flag sets on falling edge(if the Flag states exit).
- #kPORT_FlagEitherEdge : Flag sets on either edge(if the Flag states exit).
- #kPORT_InterruptLogicZero : Interrupt when logic zero.
- #kPORT_InterruptRisingEdge : Interrupt on rising edge.
- #kPORT_InterruptFallingEdge: Interrupt on falling edge.
- #kPORT_InterruptEitherEdge : Interrupt on either edge.
- #kPORT_InterruptLogicOne : Interrupt when logic one.
- #kPORT_ActiveHighTriggerOutputEnable : Enable active high-trigger output (if the trigger states exit).
- #kPORT_ActiveLowTriggerOutputEnable : Enable active low-trigger output (if the trigger states exit)..

static inline void PORT_SetPinMux(PORT_Type *base, uint32_t pin, port_mux_t mux)

Configures the pin muxing.

Note: : This function is NOT recommended to use together with the PORT_SetPinsConfig, because the PORT_SetPinsConfig need to configure the pin mux anyway (Otherwise the pin mux is reset to zero : kPORT_PinDisabledOrAnalog). This function is recommended to use to reset the pin mux

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- mux – pin muxing slot selection.
 - kPORT_PinDisabledOrAnalog: Pin disabled or work in analog function.
 - kPORT_MuxAsGpio : Set as GPIO.
 - kPORT_MuxAlt2 : chip-specific.
 - kPORT_MuxAlt3 : chip-specific.
 - kPORT_MuxAlt4 : chip-specific.
 - kPORT_MuxAlt5 : chip-specific.
 - kPORT_MuxAlt6 : chip-specific.
 - kPORT_MuxAlt7 : chip-specific.

static inline void PORT_EnablePinsDigitalFilter(PORT_Type *base, uint32_t mask, bool enable)

Enables the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- mask – PORT pin number macro.
- enable – PORT digital filter configuration.

```
static inline void PORT_SetDigitalFilterConfig(PORT_Type *base, const
                                             port_digital_filter_config_t *config)
```

Sets the digital filter in one port, each bit of the 32-bit register represents one pin.

Parameters

- base – PORT peripheral base pointer.
- config – PORT digital filter configuration structure.

```
static inline void PORT_SetPinDriveStrength(PORT_Type *base, uint32_t pin, uint8_t strength)
```

Configures the port pin drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- strength – PORT pin drive strength
 - kPORT_LowDriveStrength = 0U - Low-drive strength is configured.
 - kPORT_HighDriveStrength = 1U - High-drive strength is configured.

```
static inline void PORT_EnablePinDoubleDriveStrength(PORT_Type *base, uint32_t pin, bool
                                                    enable)
```

Enables the port pin double drive strength.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- enable – PORT pin drive strength configuration.

```
static inline void PORT_SetPinPullValue(PORT_Type *base, uint32_t pin, uint8_t value)
```

Configures the port pin pull value.

Parameters

- base – PORT peripheral base pointer.
- pin – PORT pin number.
- value – PORT pin pull value
 - kPORT_LowPullResistor = 0U - Low internal pull resistor value is selected.
 - kPORT_HighPullResistor = 1U - High internal pull resistor value is selected.

```
static inline uint32_t PORT_GetEFTDetectFlags(PORT_Type *base)
```

Get EFT detect flags.

Parameters

- base – PORT peripheral base pointer

Returns

EFT detect flags

```
static inline void PORT_EnableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)
```

Enable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_DisableEFTDetectInterrupts(PORT_Type *base, uint32_t interrupt)
 Disable EFT detect interrupts.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllLowEFTDetectors(PORT_Type *base)
 Clear all low EFT detector.

Note: : Port B and Port C pins share the same EFT detector clear control from PORTC_EDCR register. Any write to the PORTB_EDCR does not take effect.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

static inline void PORT_ClearAllHighEFTDetectors(PORT_Type *base)
 Clear all high EFT detector.

Parameters

- base – PORT peripheral base pointer
- interrupt – EFT detect interrupt

FSL_PORT_DRIVER_VERSION
 PORT driver version.

enum __port_pull
 Internal resistor pull feature selection.

Values:

enumerator kPORT_PullDisable
 Internal pull-up/down resistor is disabled.

enumerator kPORT_PullDown
 Internal pull-down resistor is enabled.

enumerator kPORT_PullUp
 Internal pull-up resistor is enabled.

enum __port_pull_value
 Internal resistor pull value selection.

Values:

enumerator kPORT_LowPullResistor
 Low internal pull resistor value is selected.

enumerator kPORT_HighPullResistor
 High internal pull resistor value is selected.

enum __port_slew_rate
 Slew rate selection.

Values:

enumerator kPORT_FastSlewRate
 Fast slew rate is configured.

enumerator kPORT_SlowSlewRate
Slow slew rate is configured.

enum __port_open_drain_enable
Open Drain feature enable/disable.

Values:

enumerator kPORT_OpenDrainDisable
Open drain output is disabled.

enumerator kPORT_OpenDrainEnable
Open drain output is enabled.

enum __port_passive_filter_enable
Passive filter feature enable/disable.

Values:

enumerator kPORT_PassiveFilterDisable
Passive input filter is disabled.

enumerator kPORT_PassiveFilterEnable
Passive input filter is enabled.

enum __port_drive_strength
Configures the drive strength.

Values:

enumerator kPORT_LowDriveStrength
Low-drive strength is configured.

enumerator kPORT_HighDriveStrength
High-drive strength is configured.

enum __port_drive_strength1
Configures the drive strength1.

Values:

enumerator kPORT_NormalDriveStrength
Normal drive strength

enumerator kPORT_DoubleDriveStrength
Double drive strength

enum __port_input_buffer
input buffer disable/enable.

Values:

enumerator kPORT_InputBufferDisable
Digital input is disabled

enumerator kPORT_InputBufferEnable
Digital input is enabled

enum __port_invert_input
Digital input is not inverted or it is inverted.

Values:

enumerator kPORT_InputNormal
Digital input is not inverted

enumerator kPORT_InputInvert
Digital input is inverted

enum __port_lock_register
Unlock/lock the pin control register field[15:0].

Values:

enumerator kPORT_UnlockRegister
Pin Control Register fields [15:0] are not locked.

enumerator kPORT_LockRegister
Pin Control Register fields [15:0] are locked.

enum __port_mux
Pin mux selection.

Values:

enumerator kPORT_PinDisabledOrAnalog
Corresponding pin is disabled, but is used as an analog pin.

enumerator kPORT_MuxAsGpio
Corresponding pin is configured as GPIO.

enumerator kPORT_MuxAlt0
Chip-specific

enumerator kPORT_MuxAlt1
Chip-specific

enumerator kPORT_MuxAlt2
Chip-specific

enumerator kPORT_MuxAlt3
Chip-specific

enumerator kPORT_MuxAlt4
Chip-specific

enumerator kPORT_MuxAlt5
Chip-specific

enumerator kPORT_MuxAlt6
Chip-specific

enumerator kPORT_MuxAlt7
Chip-specific

enumerator kPORT_MuxAlt8
Chip-specific

enumerator kPORT_MuxAlt9
Chip-specific

enumerator kPORT_MuxAlt10
Chip-specific

enumerator kPORT_MuxAlt11
Chip-specific

enumerator kPORT_MuxAlt12
Chip-specific

enumerator kPORT_MuxAlt13
Chip-specific

enumerator kPORT_MuxAlt14
Chip-specific

enumerator kPORT_MuxAlt15
Chip-specific

enum _port_digital_filter_clock_source
Digital filter clock source selection.

Values:

enumerator kPORT_BusClock
Digital filters are clocked by the bus clock.

enumerator kPORT_LpoClock
Digital filters are clocked by the 1 kHz LPO clock.

enum _port_voltage_range
PORT voltage range.

Values:

enumerator kPORT_VoltageRange1Dot71V_3Dot6V
Port voltage range is 1.71 V - 3.6 V.

enumerator kPORT_VoltageRange2Dot70V_3Dot6V
Port voltage range is 2.70 V - 3.6 V.

typedef enum _port_mux port_mux_t
Pin mux selection.

typedef enum _port_digital_filter_clock_source port_digital_filter_clock_source_t
Digital filter clock source selection.

typedef struct _port_digital_filter_config port_digital_filter_config_t
PORT digital filter feature configuration definition.

typedef struct _port_pin_config port_pin_config_t
PORT pin configuration structure.

typedef struct _port_version_info port_version_info_t
PORT version information.

typedef enum _port_voltage_range port_voltage_range_t
PORT voltage range.

FSL_COMPONENT_ID

struct _port_digital_filter_config
#include <fsl_port.h> PORT digital filter feature configuration definition.

Public Members

uint32_t digitalFilterWidth
Set digital filter width

port_digital_filter_clock_source_t clockSource
Set digital filter clockSource

struct _port_pin_config
#include <fsl_port.h> PORT pin configuration structure.

Public Members

```

uint16_t pullSelect
    No-pull/pull-down/pull-up select
uint16_t pullValueSelect
    Pull value select
uint16_t slewRate
    Fast/slow slew rate Configure
uint16_t passiveFilterEnable
    Passive filter enable/disable
uint16_t openDrainEnable
    Open drain enable/disable
uint16_t driveStrength
    Fast/slow drive strength configure
uint16_t driveStrength1
    Normal/Double drive strength enable/disable
uint16_t inputBuffer
    Input Buffer Configure
uint16_t invertInput
    Invert Input Configure
uint16_t lockRegister
    Lock/unlock the PCR field[15:0]
struct __port_version_info
    #include <fsl_port.h> PORT version information.

```

Public Members

```

uint16_t feature
    Feature Specification Number.
uint8_t minor
    Minor Version Number.
uint8_t major
    Major Version Number.

```

2.60 PWM: Pulse Width Modulator

```

status_t PWM_Init(PWM_Type *base, pwm_submodule_t submodule, const pwm_config_t
    *config)

```

Un-gates the PWM submodule clock and configures the peripheral for basic operation.

This API should be called at the beginning of the application using the PWM driver. When user select PWMX, user must choose edge aligned output, because there are some limitation on center aligned PWMX output. When output PWMX in center aligned mode, VAL1 register controls both PWM period and PWMX duty cycle, PWMA and PWMB output will be corrupted. But edge aligned PWMX output do not have such limit. In master reload counter initialization mode, PWM period is depended by period of set LDOK in submodule

0 because this operation will reload register. Submodule 0 counter initialization cannot be master sync or master reload.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- config – Pointer to user's PWM config structure.

Returns

kStatus_Success means success; else failed.

void PWM_Deinit(PWM_Type *base, *pwm_submodule_t* subModule)
Gate the PWM submodule clock.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to deinitialize

void PWM_GetDefaultConfig(*pwm_config_t* *config)
Fill in the PWM config struct with the default settings.

The default values are:

```
config->enableDebugMode = false;
config->enableWait = false;
config->reloadSelect = kPWM_LocalReload;
config->clockSource = kPWM_BusClock;
config->prescale = kPWM_Prescale_Divide_1;
config->initializationControl = kPWM_Initialize_LocalSync;
config->forceTrigger = kPWM_Force_Local;
config->reloadFrequency = kPWM_LoadEveryOpportunity;
config->reloadLogic = kPWM_ReloadImmediate;
config->pairOperation = kPWM_Independent;
```

Parameters

- config – Pointer to user's PWM config structure.

status_t PWM_SetupPwm(PWM_Type *base, *pwm_submodule_t* subModule, const
pwm_signal_param_t *chnlParams, uint8_t numOfChnls,
pwm_mode_t mode, uint32_t pwmFreq_Hz, uint32_t srcClock_Hz)

Sets up the PWM signals for a PWM submodule.

The function initializes the submodule according to the parameters passed in by the user. The function also sets up the value compare registers to match the PWM signal requirements. If the dead time insertion logic is enabled, the pulse period is reduced by the dead time period specified by the user. When user select PWMX, user must choose edge aligned output, because there are some limitation on center aligned PWMX output. Due to edge aligned PWMX is negative true signal, need to configure PWMX active low true level to get correct duty cycle. The half cycle point will not be exactly in the middle of the PWM cycle when PWMX enabled.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- chnlParams – Array of PWM channel parameters to configure the channel(s).

- numOfChnls – Number of channels to configure, this should be the size of the array passed in. Array size should not be more than 3 as each submodule has 3 pins to output PWM.
- mode – PWM operation mode, options available in enumeration `pwm_mode_t`
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – PWM source clock of correspond submodule in Hz. If source clock of submodule1,2,3 is from submodule0 AUX_CLK, its source clock is submodule0 source clock divided with submodule0 prescaler value instead of submodule0 source clock.

Returns

Returns `kStatus_Fail` if there was error setting up the signal; `kStatus_Success` otherwise

```
status_t PWM_SetupPwmPhaseShift(PWM_Type *base, pwm_submodule_t subModule,
                                pwm_channels_t pwmChannel, uint32_t pwmFreq_Hz,
                                uint32_t srcClock_Hz, uint8_t shiftvalue, bool doSync)
```

Set PWM phase shift for PWM channel running on channel PWM_A, PWM_B which with 50% duty cycle.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- pwmFreq_Hz – PWM signal frequency in Hz
- srcClock_Hz – PWM main counter clock in Hz.
- shiftvalue – Phase shift value, range in 0 ~ 50
- doSync – true: Set LDOK bit for the submodule list; false: LDOK bit don't set, need to call `PWM_SetPwmLdok` to sync update.

Returns

Returns `kStatus_Fail` if there was error setting up the signal; `kStatus_Success` otherwise

```
void PWM_UpdatePwmDutycycle(PWM_Type *base, pwm_submodule_t subModule,
                            pwm_channels_t pwmSignal, pwm_mode_t currPwmMode,
                            uint8_t dutyCyclePercent)
```

Updates the PWM signal's dutycycle.

The function updates the PWM dutycycle to the new value that is passed in. If the dead time insertion logic is enabled then the pulse period is reduced by the dead time period specified by the user.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A, PWM B, PWM X) to update
- currPwmMode – The current PWM mode set during PWM setup
- dutyCyclePercent – New PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)... 100=active signal (100% duty cycle)

```
void PWM_UpdatePwmDutycycleHighAccuracy(PWM_Type *base, pwm_submodule_t subModule,  
                                         pwm_channels_t pwmSignal, pwm_mode_t  
                                         currPwmMode, uint16_t dutyCycle)
```

Updates the PWM signal's dutycycle with 16-bit accuracy.

The function updates the PWM dutycycle to the new value that is passed in. If the dead time insertion logic is enabled then the pulse period is reduced by the dead time period specified by the user.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A, PWM B, PWM X) to update
- currPwmMode – The current PWM mode set during PWM setup
- dutyCycle – New PWM pulse width, value should be between 0 to 65535
0=inactive signal(0% duty cycle)... 65535=active signal (100% duty cycle)

```
void PWM_UpdatePwmPeriodAndDutycycle(PWM_Type *base, pwm_submodule_t subModule,  
                                       pwm_channels_t pwmSignal, pwm_mode_t  
                                       currPwmMode, uint16_t pulseCnt, uint16_t  
                                       dutyCycle)
```

Update the PWM signal's period and dutycycle for a PWM submodule.

The function updates PWM signal period generated by a specific submodule according to the parameters passed in by the user. This function can also set dutycycle whether you want to keep original dutycycle or update new dutycycle. Call this function in local sync control mode because PWM period is depended by

INIT and VAL1 register of each submodule. In master sync initialization control mode, call this function to update INIT and VAL1 register of all submodule because PWM period is depended by INIT and VAL1 register in submodule0. If the dead time insertion logic is enabled, the pulse period is reduced by the dead time period specified by the user. PWM signal will not be generated if its period is less than dead time duration.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmSignal – Signal (PWM A or PWM B) to update
- currPwmMode – The current PWM mode set during PWM setup, options available in enumeration `pwm_mode_t`
- pulseCnt – New PWM period, value should be between 0 to 65535 0=minimum PWM period... 65535=maximum PWM period
- dutyCycle – New PWM pulse width of channel, value should be between 0 to 65535 0=inactive signal(0% duty cycle)... 65535=active signal (100% duty cycle) You can keep original duty cycle or update new duty cycle

```
static inline void PWM_EnableInterrupts(PWM_Type *base, pwm_submodule_t subModule,  
                                         uint32_t mask)
```

Enables the selected PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure

- mask – The interrupts to enable. This is a logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline void PWM_DisableInterrupts(PWM_Type *base, pwm_submodule_t subModule,
                                         uint32_t mask)
```

Disables the selected PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The interrupts to enable. This is a logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline uint32_t PWM_GetEnabledInterrupts(PWM_Type *base, pwm_submodule_t
                                                subModule)
```

Gets the enabled PWM interrupts.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure

Returns

The enabled interrupts. This is the logical OR of members of the enumeration `pwm_interrupt_enable_t`

```
static inline void PWM_DMAFIFOWatermarkControl(PWM_Type *base, pwm_submodule_t
                                                subModule, pwm_watermark_control_t
                                                pwm_watermark_control)
```

Capture DMA Enable Source Select.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- `pwm_watermark_control` – PWM FIFO watermark and control

```
static inline void PWM_DMACaptureSourceSelect(PWM_Type *base, pwm_submodule_t
                                              subModule, pwm_dma_source_select_t
                                              pwm_dma_source_select)
```

Capture DMA Enable Source Select.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- `pwm_dma_source_select` – PWM capture DMA enable source select

```
static inline void PWM_EnableDMACapture(PWM_Type *base, pwm_submodule_t subModule,
                                         uint16_t mask, bool activate)
```

Enables or disables the selected PWM DMA Capture read request.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- mask – The DMA to enable or disable. This is a logical OR of members of the enumeration `pwm_dma_enable_t`
- activate – true: Enable DMA read request; false: Disable DMA read request

```
static inline void PWM_EnableDMAWrite(PWM_Type *base, pwm_submodule_t subModule, bool activate)
```

Enables or disables the PWM DMA write request.

Parameters

- *base* – PWM peripheral base address
- *subModule* – PWM submodule to configure
- *activate* – true: Enable DMA write request; false: Disable DMA write request

```
static inline uint32_t PWM_GetStatusFlags(PWM_Type *base, pwm_submodule_t subModule)
```

Gets the PWM status flags.

Parameters

- *base* – PWM peripheral base address
- *subModule* – PWM submodule to configure

Returns

The status flags. This is the logical OR of members of the enumeration `pwm_status_flags_t`

```
static inline void PWM_ClearStatusFlags(PWM_Type *base, pwm_submodule_t subModule, uint32_t mask)
```

Clears the PWM status flags.

Parameters

- *base* – PWM peripheral base address
- *subModule* – PWM submodule to configure
- *mask* – The status flags to clear. This is a logical OR of members of the enumeration `pwm_status_flags_t`

```
static inline void PWM_StartTimer(PWM_Type *base, uint8_t subModulesToStart)
```

Starts the PWM counter for a single or multiple submodules.

Sets the Run bit which enables the clocks to the PWM submodule. This function can start multiple submodules at the same time.

Parameters

- *base* – PWM peripheral base address
- *subModulesToStart* – PWM submodules to start. This is a logical OR of members of the enumeration `pwm_module_control_t`

```
static inline void PWM_StopTimer(PWM_Type *base, uint8_t subModulesToStop)
```

Stops the PWM counter for a single or multiple submodules.

Clears the Run bit which resets the submodule's counter. This function can stop multiple submodules at the same time.

Parameters

- *base* – PWM peripheral base address
- *subModulesToStop* – PWM submodules to stop. This is a logical OR of members of the enumeration `pwm_module_control_t`

FSL_PWM_DRIVER_VERSION

Version 2.9.0

enum `_pwm_submodule`

List of PWM submodules.

Values:

enumerator `kPWM_Module_0`
Submodule 0

enumerator `kPWM_Module_1`
Submodule 1

enumerator `kPWM_Module_2`
Submodule 2

enum `_pwm_channels`

List of PWM channels in each module.

Values:

enumerator `kPWM_PwmB`

enumerator `kPWM_PwmA`

enumerator `kPWM_PwmX`

enum `_pwm_value_register`

List of PWM value registers.

Values:

enumerator `kPWM_ValueRegister_0`
PWM Value0 register

enumerator `kPWM_ValueRegister_1`
PWM Value1 register

enumerator `kPWM_ValueRegister_2`
PWM Value2 register

enumerator `kPWM_ValueRegister_3`
PWM Value3 register

enumerator `kPWM_ValueRegister_4`
PWM Value4 register

enumerator `kPWM_ValueRegister_5`
PWM Value5 register

enum `_pwm_value_register_mask`

List of PWM value registers mask.

Values:

enumerator `kPWM_ValueRegisterMask_0`
PWM Value0 register mask

enumerator `kPWM_ValueRegisterMask_1`
PWM Value1 register mask

enumerator `kPWM_ValueRegisterMask_2`
PWM Value2 register mask

enumerator `kPWM_ValueRegisterMask_3`
PWM Value3 register mask

enumerator kPWM_ValueRegisterMask_4
PWM Value4 register mask

enumerator kPWM_ValueRegisterMask_5
PWM Value5 register mask

enum __pwm_clock_source
PWM clock source selection.

Values:

enumerator kPWM_BusClock
Device specific IPBus clock, refer reference manual for frequency

enumerator kPWM_ExternalClock
EXT_CLK is used as the clock

enumerator kPWM_Submodule0Clock
Clock of the submodule 0 (AUX_CLK) is used as the source clock

enum __pwm_clock_prescale
PWM prescaler factor selection for clock source.

Values:

enumerator kPWM_Prescale_Divide_1
PWM clock frequency = fclk/1

enumerator kPWM_Prescale_Divide_2
PWM clock frequency = fclk/2

enumerator kPWM_Prescale_Divide_4
PWM clock frequency = fclk/4

enumerator kPWM_Prescale_Divide_8
PWM clock frequency = fclk/8

enumerator kPWM_Prescale_Divide_16
PWM clock frequency = fclk/16

enumerator kPWM_Prescale_Divide_32
PWM clock frequency = fclk/32

enumerator kPWM_Prescale_Divide_64
PWM clock frequency = fclk/64

enumerator kPWM_Prescale_Divide_128
PWM clock frequency = fclk/128

enum __pwm_force_output_trigger
Options that can trigger a PWM FORCE_OUT.

Values:

enumerator kPWM_Force_Local
The local force signal, CTRL2[FORCE], from the submodule is used to force updates

enumerator kPWM_Force_Master
The master force signal from submodule 0 is used to force updates

enumerator kPWM_Force_LocalReload
The local reload signal from this submodule is used to force updates without regard to the state of LDOK

enumerator kPWM_Force_MasterReload

The master reload signal from submodule 0 is used to force updates if LDOK is set

enumerator kPWM_Force_LocalSync

The local sync signal from this submodule is used to force updates

enumerator kPWM_Force_MasterSync

The master sync signal from submodule0 is used to force updates

enumerator kPWM_Force_External

The external force signal, EXT_FORCE, from outside the PWM module causes updates

enumerator kPWM_Force_ExternalSync

The external sync signal, EXT_SYNC, from outside the PWM module causes updates

enum _pwm_output_state

PWM channel output status.

Values:

enumerator kPWM_HighState

The output state of PWM channel is high

enumerator kPWM_LowState

The output state of PWM channel is low

enumerator kPWM_NormalState

The output state of PWM channel is normal

enumerator kPWM_InvertState

The output state of PWM channel is invert

enumerator kPWM_MaskState

The output state of PWM channel is mask

enum _pwm_init_source

PWM counter initialization options.

Values:

enumerator kPWM_Initialize_LocalSync

Local sync causes initialization

enumerator kPWM_Initialize_MasterReload

Master reload from submodule 0 causes initialization

enumerator kPWM_Initialize_MasterSync

Master sync from submodule 0 causes initialization

enumerator kPWM_Initialize_ExtSync

EXT_SYNC causes initialization

enum _pwm_load_frequency

PWM load frequency selection.

Values:

enumerator kPWM_LoadEveryOpportunity

Every PWM opportunity

enumerator kPWM_LoadEvery2Opportunity

Every 2 PWM opportunities

enumerator kPWM_LoadEvery3Opportunity
Every 3 PWM opportunities

enumerator kPWM_LoadEvery4Opportunity
Every 4 PWM opportunities

enumerator kPWM_LoadEvery5Opportunity
Every 5 PWM opportunities

enumerator kPWM_LoadEvery6Opportunity
Every 6 PWM opportunities

enumerator kPWM_LoadEvery7Opportunity
Every 7 PWM opportunities

enumerator kPWM_LoadEvery8Opportunity
Every 8 PWM opportunities

enumerator kPWM_LoadEvery9Opportunity
Every 9 PWM opportunities

enumerator kPWM_LoadEvery10Opportunity
Every 10 PWM opportunities

enumerator kPWM_LoadEvery11Opportunity
Every 11 PWM opportunities

enumerator kPWM_LoadEvery12Opportunity
Every 12 PWM opportunities

enumerator kPWM_LoadEvery13Opportunity
Every 13 PWM opportunities

enumerator kPWM_LoadEvery14Opportunity
Every 14 PWM opportunities

enumerator kPWM_LoadEvery15Opportunity
Every 15 PWM opportunities

enumerator kPWM_LoadEvery16Opportunity
Every 16 PWM opportunities

enum __pwm_fault_input

List of PWM fault selections.

Values:

enumerator kPWM_Fault_0
Fault 0 input pin

enumerator kPWM_Fault_1
Fault 1 input pin

enumerator kPWM_Fault_2
Fault 2 input pin

enumerator kPWM_Fault_3
Fault 3 input pin

enum __pwm_fault_disable

List of PWM fault disable mapping selections.

Values:

enumerator kPWM_FaultDisable_0
Fault 0 disable mapping

enumerator kPWM_FaultDisable_1
Fault 1 disable mapping

enumerator kPWM_FaultDisable_2
Fault 2 disable mapping

enumerator kPWM_FaultDisable_3
Fault 3 disable mapping

enum _pwm_fault_channels
List of PWM fault channels.

Values:

enumerator kPWM_faultchannel_0

enumerator kPWM_faultchannel_1

enum _pwm_input_capture_edge
PWM capture edge select.

Values:

enumerator kPWM_Disable
Disabled

enumerator kPWM_FallingEdge
Capture on falling edge only

enumerator kPWM_RisingEdge
Capture on rising edge only

enumerator kPWM_RiseAndFallEdge
Capture on rising or falling edge

enum _pwm_force_signal
PWM output options when a FORCE_OUT signal is asserted.

Values:

enumerator kPWM_UsePwm
Generated PWM signal is used by the deadtime logic.

enumerator kPWM_InvertedPwm
Inverted PWM signal is used by the deadtime logic.

enumerator kPWM_SoftwareControl
Software controlled value is used by the deadtime logic.

enumerator kPWM_UseExternal
PWM_EXT_A signal is used by the deadtime logic.

enum _pwm_chnl_pair_operation
Options available for the PWM A & B pair operation.

Values:

enumerator kPWM_Independent
PWM A & PWM B operate as 2 independent channels

enumerator kPWM_ComplementaryPwmA
PWM A & PWM B are complementary channels, PWM A generates the signal

enumerator kPWM_ComplementaryPwmB

PWM A & PWM B are complementary channels, PWM B generates the signal

enum _pwm_register_reload

Options available on how to load the buffered-registers with new values.

Values:

enumerator kPWM_ReloadImmediate

Buffered-registers get loaded with new values as soon as LDOK bit is set

enumerator kPWM_ReloadPwmHalfCycle

Registers loaded on a PWM half cycle

enumerator kPWM_ReloadPwmFullCycle

Registers loaded on a PWM full cycle

enumerator kPWM_ReloadPwmHalfAndFullCycle

Registers loaded on a PWM half & full cycle

enum _pwm_fault_recovery_mode

Options available on how to re-enable the PWM output when recovering from a fault.

Values:

enumerator kPWM_NoRecovery

PWM output will stay inactive

enumerator kPWM_RecoverHalfCycle

PWM output re-enabled at the first half cycle

enumerator kPWM_RecoverFullCycle

PWM output re-enabled at the first full cycle

enumerator kPWM_RecoverHalfAndFullCycle

PWM output re-enabled at the first half or full cycle

enum _pwm_interrupt_enable

List of PWM interrupt options.

Values:

enumerator kPWM_CompareVal0InterruptEnable

PWM VAL0 compare interrupt

enumerator kPWM_CompareVal1InterruptEnable

PWM VAL1 compare interrupt

enumerator kPWM_CompareVal2InterruptEnable

PWM VAL2 compare interrupt

enumerator kPWM_CompareVal3InterruptEnable

PWM VAL3 compare interrupt

enumerator kPWM_CompareVal4InterruptEnable

PWM VAL4 compare interrupt

enumerator kPWM_CompareVal5InterruptEnable

PWM VAL5 compare interrupt

enumerator kPWM_CaptureX0InterruptEnable

PWM capture X0 interrupt

enumerator kPWM_CaptureX1InterruptEnable
PWM capture X1 interrupt

enumerator kPWM_CaptureB0InterruptEnable
PWM capture B0 interrupt

enumerator kPWM_CaptureB1InterruptEnable
PWM capture B1 interrupt

enumerator kPWM_CaptureA0InterruptEnable
PWM capture A0 interrupt

enumerator kPWM_CaptureA1InterruptEnable
PWM capture A1 interrupt

enumerator kPWM_ReloadInterruptEnable
PWM reload interrupt

enumerator kPWM_ReloadErrorInterruptEnable
PWM reload error interrupt

enumerator kPWM_Fault0InterruptEnable
PWM fault 0 interrupt

enumerator kPWM_Fault1InterruptEnable
PWM fault 1 interrupt

enumerator kPWM_Fault2InterruptEnable
PWM fault 2 interrupt

enumerator kPWM_Fault3InterruptEnable
PWM fault 3 interrupt

enum _pwm_status_flags

List of PWM status flags.

Values:

enumerator kPWM_CompareVal0Flag
PWM VAL0 compare flag

enumerator kPWM_CompareVal1Flag
PWM VAL1 compare flag

enumerator kPWM_CompareVal2Flag
PWM VAL2 compare flag

enumerator kPWM_CompareVal3Flag
PWM VAL3 compare flag

enumerator kPWM_CompareVal4Flag
PWM VAL4 compare flag

enumerator kPWM_CompareVal5Flag
PWM VAL5 compare flag

enumerator kPWM_CaptureX0Flag
PWM capture X0 flag

enumerator kPWM_CaptureX1Flag
PWM capture X1 flag

enumerator kPWM_CaptureB0Flag

PWM capture B0 flag

enumerator kPWM_CaptureB1Flag

PWM capture B1 flag

enumerator kPWM_CaptureA0Flag

PWM capture A0 flag

enumerator kPWM_CaptureA1Flag

PWM capture A1 flag

enumerator kPWM_ReloadFlag

PWM reload flag

enumerator kPWM_ReloadErrorFlag

PWM reload error flag

enumerator kPWM_RegUpdatedFlag

PWM registers updated flag

enumerator kPWM_Fault0Flag

PWM fault 0 flag

enumerator kPWM_Fault1Flag

PWM fault 1 flag

enumerator kPWM_Fault2Flag

PWM fault 2 flag

enumerator kPWM_Fault3Flag

PWM fault 3 flag

enum _pwm_dma_enable

List of PWM DMA options.

Values:

enumerator kPWM_CaptureX0DMAEnable

PWM capture X0 DMA

enumerator kPWM_CaptureX1DMAEnable

PWM capture X1 DMA

enumerator kPWM_CaptureB0DMAEnable

PWM capture B0 DMA

enumerator kPWM_CaptureB1DMAEnable

PWM capture B1 DMA

enumerator kPWM_CaptureA0DMAEnable

PWM capture A0 DMA

enumerator kPWM_CaptureA1DMAEnable

PWM capture A1 DMA

enum _pwm_dma_source_select

List of PWM capture DMA enable source select.

Values:

enumerator kPWM_DMAResourceDisable

Read DMA requests disabled

enumerator kPWM_DMAWatermarksEnable
Exceeding a FIFO watermark sets the DMA read request

enumerator kPWM_DMALocalSync
A local sync (VAL1 matches counter) sets the read DMA request

enumerator kPWM_DMALocalReload
A local reload (STS[RF] being set) sets the read DMA request

enum __pwm_watermark_control
PWM FIFO Watermark AND Control.

Values:

enumerator kPWM_FIFOWatermarksOR
Selected FIFO watermarks are OR'ed together

enumerator kPWM_FIFOWatermarksAND
Selected FIFO watermarks are AND'ed together

enum __pwm_mode
PWM operation mode.

Values:

enumerator kPWM_SignedCenterAligned
Signed center-aligned

enumerator kPWM_CenterAligned
Unsigned cente-aligned

enumerator kPWM_SignedEdgeAligned
Signed edge-aligned

enumerator kPWM_EdgeAligned
Unsigned edge-aligned

enum __pwm_level_select
PWM output pulse mode, high-true or low-true.

Values:

enumerator kPWM_HighTrue
High level represents “on” or “active” state

enumerator kPWM_LowTrue
Low level represents “on” or “active” state

enum __pwm_fault_state
PWM output fault status.

Values:

enumerator kPWM_PwmFaultState0
Output is forced to logic 0 state prior to consideration of output polarity control.

enumerator kPWM_PwmFaultState1
Output is forced to logic 1 state prior to consideration of output polarity control.

enumerator kPWM_PwmFaultState2
Output is tristated.

enumerator kPWM_PwmFaultState3
Output is tristated.

enum `_pwm_reload_source_select`

PWM reload source select.

Values:

enumerator `kPWM_LocalReload`

The local reload signal is used to reload registers

enumerator `kPWM_MasterReload`

The master reload signal (from submodule 0) is used to reload

enum `_pwm_fault_clear`

PWM fault clearing options.

Values:

enumerator `kPWM_Automatic`

Automatic fault clearing

enumerator `kPWM_ManualNormal`

Manual fault clearing with no fault safety mode

enumerator `kPWM_ManualSafety`

Manual fault clearing with fault safety mode

enum `_pwm_module_control`

Options for submodule master control operation.

Values:

enumerator `kPWM_Control_Module_0`

Control submodule 0's start/stop,buffer reload operation

enumerator `kPWM_Control_Module_1`

Control submodule 1's start/stop,buffer reload operation

enumerator `kPWM_Control_Module_2`

Control submodule 2's start/stop,buffer reload operation

enumerator `kPWM_Control_Module_3`

Control submodule 3's start/stop,buffer reload operation

typedef enum `_pwm_submodule` `pwm_submodule_t`

List of PWM submodules.

typedef enum `_pwm_channels` `pwm_channels_t`

List of PWM channels in each module.

typedef enum `_pwm_value_register` `pwm_value_register_t`

List of PWM value registers.

typedef enum `_pwm_clock_source` `pwm_clock_source_t`

PWM clock source selection.

typedef enum `_pwm_clock_prescale` `pwm_clock_prescale_t`

PWM prescaler factor selection for clock source.

typedef enum `_pwm_force_output_trigger` `pwm_force_output_trigger_t`

Options that can trigger a PWM FORCE_OUT.

typedef enum `_pwm_output_state` `pwm_output_state_t`

PWM channel output status.

typedef enum *_pwm_init_source* pwm_init_source_t
 PWM counter initialization options.

typedef enum *_pwm_load_frequency* pwm_load_frequency_t
 PWM load frequency selection.

typedef enum *_pwm_fault_input* pwm_fault_input_t
 List of PWM fault selections.

typedef enum *_pwm_fault_disable* pwm_fault_disable_t
 List of PWM fault disable mapping selections.

typedef enum *_pwm_fault_channels* pwm_fault_channels_t
 List of PWM fault channels.

typedef enum *_pwm_input_capture_edge* pwm_input_capture_edge_t
 PWM capture edge select.

typedef enum *_pwm_force_signal* pwm_force_signal_t
 PWM output options when a FORCE_OUT signal is asserted.

typedef enum *_pwm_chnl_pair_operation* pwm_chnl_pair_operation_t
 Options available for the PWM A & B pair operation.

typedef enum *_pwm_register_reload* pwm_register_reload_t
 Options available on how to load the buffered-registers with new values.

typedef enum *_pwm_fault_recovery_mode* pwm_fault_recovery_mode_t
 Options available on how to re-enable the PWM output when recovering from a fault.

typedef enum *_pwm_interrupt_enable* pwm_interrupt_enable_t
 List of PWM interrupt options.

typedef enum *_pwm_status_flags* pwm_status_flags_t
 List of PWM status flags.

typedef enum *_pwm_dma_enable* pwm_dma_enable_t
 List of PWM DMA options.

typedef enum *_pwm_dma_source_select* pwm_dma_source_select_t
 List of PWM capture DMA enable source select.

typedef enum *_pwm_watermark_control* pwm_watermark_control_t
 PWM FIFO Watermark AND Control.

typedef enum *_pwm_mode* pwm_mode_t
 PWM operation mode.

typedef enum *_pwm_level_select* pwm_level_select_t
 PWM output pulse mode, high-true or low-true.

typedef enum *_pwm_fault_state* pwm_fault_state_t
 PWM output fault status.

typedef enum *_pwm_reload_source_select* pwm_reload_source_select_t
 PWM reload source select.

typedef enum *_pwm_fault_clear* pwm_fault_clear_t
 PWM fault clearing options.

typedef enum *_pwm_module_control* pwm_module_control_t
 Options for submodule master control operation.

```
typedef struct _pwm_signal_param pwm_signal_param_t
```

Structure for the user to define the PWM signal characteristics.

```
typedef struct _pwm_config pwm_config_t
```

PWM config structure.

This structure holds the configuration settings for the PWM peripheral. To initialize this structure to reasonable defaults, call the PWM_GetDefaultConfig() function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

```
typedef struct _pwm_fault_input_filter_param pwm_fault_input_filter_param_t
```

Structure for the user to configure the fault input filter.

```
typedef struct _pwm_fault_param pwm_fault_param_t
```

Structure is used to hold the parameters to configure a PWM fault.

```
typedef struct _pwm_input_capture_param pwm_input_capture_param_t
```

Structure is used to hold parameters to configure the capture capability of a signal pin.

```
void PWM_SetupInputCapture(PWM_Type *base, pwm_submodule_t subModule,  
                           pwm_channels_t pwmChannel, const  
                           pwm_input_capture_param_t *inputCaptureParams)
```

Sets up the PWM input capture.

Each PWM submodule has 3 pins that can be configured for use as input capture pins. This function sets up the capture parameters for each pin and enables the pin for input capture operation.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel in the submodule to setup
- inputCaptureParams – Parameters passed in to set up the input pin

```
void PWM_SetupFaultInputFilter(PWM_Type *base, const pwm_fault_input_filter_param_t  
                              *faultInputFilterParams)
```

Sets up the PWM fault input filter.

Parameters

- base – PWM peripheral base address
- faultInputFilterParams – Parameters passed in to set up the fault input filter.

```
void PWM_SetupFaults(PWM_Type *base, pwm_fault_input_t faultNum, const  
                    pwm_fault_param_t *faultParams)
```

Sets up the PWM fault protection.

PWM has 4 fault inputs.

Parameters

- base – PWM peripheral base address
- faultNum – PWM fault to configure.
- faultParams – Pointer to the PWM fault config structure

```
void PWM_FaultDefaultConfig(pwm_fault_param_t *config)
```

Fill in the PWM fault config struct with the default settings.

The default values are:


```
config->faultClearingMode = kPWM_Automatic;
config->faultLevel = false;
config->enableCombinationalPath = true;
config->recoverMode = kPWM_NoRecovery;
```

Parameters

- config – Pointer to user's PWM fault config structure.

```
void PWM_SetupForceSignal(PWM_Type *base, pwm_submodule_t subModule, pwm_channels_t
    pwmChannel, pwm_force_signal_t mode)
```

Selects the signal to output on a PWM pin when a FORCE_OUT signal is asserted.

The user specifies which channel to configure by supplying the submodule number and whether to modify PWM A or PWM B within that submodule.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel to configure
- mode – Signal to output when a FORCE_OUT is triggered

```
static inline void PWM_SetVALxValue(PWM_Type *base, pwm_submodule_t subModule,
    pwm_value_register_t valueRegister, uint16_t value)
```

Set the PWM VALx registers.

This function allows the user to write value into VAL registers directly. And it will destroying the PWM clock period set by the PWM_SetupPwm()/PWM_SetupPwmPhaseShift() functions. Due to VALx registers are bufferd, the new value will not active unless call PWM_SetPwmLdok() and the reload point is reached.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegister – VALx register that will be written new value
- value – Value that will be write into VALx register

```
static inline uint16_t PWM_GetVALxValue(PWM_Type *base, pwm_submodule_t subModule,
    pwm_value_register_t valueRegister)
```

Get the PWM VALx registers.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegister – VALx register that will be read value

Returns

The VALx register value

```
static inline void PWM_OutputTriggerEnable(PWM_Type *base, pwm_submodule_t subModule,
    pwm_value_register_t valueRegister, bool activate)
```

Enables or disables the PWM output trigger.

This function allows the user to enable or disable the PWM trigger. The PWM has 2 triggers. Trigger 0 is activated when the counter matches VAL 0, VAL 2, or VAL 4 register. Trigger 1 is activated when the counter matches VAL 1, VAL 3, or VAL 5 register.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegister – Value register that will activate the trigger
- activate – true: Enable the trigger; false: Disable the trigger

```
static inline void PWM_ActivateOutputTrigger(PWM_Type *base, pwm_submodule_t subModule,
                                             uint16_t valueRegisterMask)
```

Enables the PWM output trigger.

This function allows the user to enable one or more (VAL0-5) PWM trigger.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegisterMask – Value register mask that will activate one or more (VAL0-5) trigger enumeration *_pwm_value_register_mask*

```
static inline void PWM_DeactivateOutputTrigger(PWM_Type *base, pwm_submodule_t
                                              subModule, uint16_t valueRegisterMask)
```

Disables the PWM output trigger.

This function allows the user to disables one or more (VAL0-5) PWM trigger.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- valueRegisterMask – Value register mask that will Deactivate one or more (VAL0-5) trigger enumeration *_pwm_value_register_mask*

```
static inline void PWM_SetupSwCtrlOut(PWM_Type *base, pwm_submodule_t subModule,
                                     pwm_channels_t pwmChannel, bool value)
```

Sets the software control output for a pin to high or low.

The user specifies which channel to modify by supplying the submodule number and whether to modify PWM A or PWM B within that submodule.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – Channel to configure
- value – true: Supply a logic 1, false: Supply a logic 0.

```
static inline void PWM_SetPwmLdok(PWM_Type *base, uint8_t subModulesToUpdate, bool
                                  value)
```

Sets or clears the PWM LDOK bit on a single or multiple submodules.

Set LDOK bit to load buffered values into CTRL[PRSC] and the INIT, FRACVAL and VAL registers. The values are loaded immediately if *kPWM_ReloadImmediate* option was chosen during config. Else the values are loaded at the next PWM reload point. This function can issue the load command to multiple submodules at the same time.

Parameters

- base – PWM peripheral base address

- `subModulesToUpdate` – PWM submodules to update with buffered values. This is a logical OR of members of the enumeration `pwm_module_control_t`
- `value` – `true`: Set LDOK bit for the submodule list; `false`: Clear LDOK bit

```
static inline void PWM_SetPwmFaultState(PWM_Type *base, pwm_submodule_t subModule,
                                       pwm_channels_t pwmChannel, pwm_fault_state_t
                                       faultState)
```

Set PWM output fault status.

These bits determine the fault state for the PWM_A output in fault conditions and STOP mode. It may also define the output state in WAIT and DEBUG modes depending on the settings of CTRL2[WAITEN] and CTRL2[DBGEN]. This function can update PWM output fault status.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – Channel to configure
- `faultState` – PWM output fault status

```
static inline void PWM_SetupFaultDisableMap(PWM_Type *base, pwm_submodule_t subModule,
                                           pwm_channels_t pwmChannel,
                                           pwm_fault_channels_t pwm_fault_channels,
                                           uint16_t value)
```

Set PWM fault disable mapping.

Each of the four bits of this read/write field is one-to-one associated with the four FAULTx inputs of fault channel 0/1. The PWM output will be turned off if there is a logic 1 on an FAULTx input and a 1 in the corresponding bit of this field. A reset sets all bits in this field.

Parameters

- `base` – PWM peripheral base address
- `subModule` – PWM submodule to configure
- `pwmChannel` – PWM channel to configure
- `pwm_fault_channels` – PWM fault channel to configure
- `value` – Fault disable mapping mask value enumeration `pwm_fault_disable_t`

```
static inline void PWM_OutputEnable(PWM_Type *base, pwm_channels_t pwmChannel,
                                    pwm_submodule_t subModule)
```

Set PWM output enable.

This feature allows the user to enable the PWM Output. Recommend to invoke this API after PWM and fault configuration. But invoke this API before configure MCTRL register is okay, such as set LDOK or start timer.

Parameters

- `base` – PWM peripheral base address
- `pwmChannel` – PWM channel to configure
- `subModule` – PWM submodule to configure

```
static inline void PWM_OutputDisable(PWM_Type *base, pwm_channels_t pwmChannel,
                                     pwm_submodule_t subModule)
```

Set PWM output disable.

This feature allows the user to disable the PWM output. Recommend to invoke this API after PWM and fault configuration. But invoke this API before configure MCTRL register is okay, such as set LDOK or start timer.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure

```
uint8_t PWM_GetPwmChannelState(PWM_Type *base, pwm_submodule_t subModule,  
                               pwm_channels_t pwmChannel)
```

Get the dutycycle value.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure

Returns

Current channel dutycycle value.

```
status_t PWM_SetOutputToIdle(PWM_Type *base, pwm_channels_t pwmChannel,  
                             pwm_submodule_t subModule, bool idleStatus)
```

Set PWM output in idle status (high or low).

Note: This API should call after PWM_SetupPwm() APIs, and PWMX submodule is not supported.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure
- idleStatus – True: PWM output is high in idle status; false: PWM output is low in idle status.

Returns

kStatus_Fail if there was error setting up the signal; kStatus_Success if set output idle success

```
void PWM_SetClockMode(PWM_Type *base, pwm_submodule_t subModule,  
                     pwm_clock_prescale_t prescaler)
```

Set the pwm submodule prescaler.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- prescaler – Set prescaler value

```
void PWM_SetPwmForceOutputToZero(PWM_Type *base, pwm_submodule_t subModule,
                                pwm_channels_t pwmChannel, bool forcetozero)
```

This function enables-disables the forcing of the output of a given eFlexPwm channel to logic 0.

Parameters

- base – PWM peripheral base address
- pwmChannel – PWM channel to configure
- subModule – PWM submodule to configure
- forcetozero – True: Enable the pwm force output to zero; False: Disable the pwm output resumes normal function.

```
void PWM_SetChannelOutput(PWM_Type *base, pwm_submodule_t subModule,
                          pwm_channels_t pwmChannel, pwm_output_state_t outputstate)
```

This function set the output state of the PWM pin as requested for the current cycle.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- outputstate – Set pwm output state, see *pwm_output_state_t*.

```
status_t PWM_SetPhaseDelay(PWM_Type *base, pwm_channels_t pwmChannel,
                           pwm_submodule_t subModule, uint16_t delayCycles)
```

This function set the phase delay from the master sync signal of submodule 0.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- delayCycles – Number of cycles delayed from submodule 0.

Returns

kStatus_Fail if the number of delay cycles is set larger than the period defined in submodule 0; kStatus_Success if set phase delay success

```
static inline void PWM_SetFilterSampleCount(PWM_Type *base, pwm_channels_t pwmChannel,
                                           pwm_submodule_t subModule, uint8_t
                                           filterSampleCount)
```

This function set the number of consecutive samples that must agree prior to the input filter.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- filterSampleCount – Number of consecutive samples.

```
static inline void PWM_SetFilterSamplePeriod(PWM_Type *base, pwm_channels_t pwmChannel,
                                           pwm_submodule_t subModule, uint8_t
                                           filterSamplePeriod)
```

This function set the sampling period of the fault pin input filter.

Parameters

- base – PWM peripheral base address
- subModule – PWM submodule to configure
- pwmChannel – PWM channel to configure
- filterSamplePeriod – Sampling period of input filter.

PWM_SUBMODULE_SWCONTROL_WIDTH

Number of bits per submodule for software output control

PWM_SUBMODULE_CHANNEL

Submodule channels include PWMA, PWMB, PWMX.

struct `_pwm_signal_param`

#include <fsl_pwm.h> Structure for the user to define the PWM signal characteristics.

Public Members

pwm_channels_t pwmChannel

PWM channel being configured; PWM A or PWM B

uint8_t dutyCyclePercent

PWM pulse width, value should be between 0 to 100 0=inactive signal(0% duty cycle)...
100=always active signal (100% duty cycle)

pwm_level_select_t level

PWM output active level select

uint16_t deadtimeValue

The deadtime value; only used if channel pair is operating in complementary mode

pwm_fault_state_t faultState

PWM output fault status

bool pwmchannelenable

Enable PWM output

struct `_pwm_config`

#include <fsl_pwm.h> PWM config structure.

This structure holds the configuration settings for the PWM peripheral. To initialize this structure to reasonable defaults, call the `PWM_GetDefaultConfig()` function and pass a pointer to your config structure instance.

The config struct can be made const so it resides in flash

Public Members

bool enableDebugMode

true: PWM continues to run in debug mode; false: PWM is paused in debug mode

pwm_init_source_t initializationControl

Option to initialize the counter

pwm_clock_source_t clockSource

Clock source for the counter

pwm_clock_prescale_t prescale

Pre-scaler to divide down the clock

pwm_chnl_pair_operation_t pairOperation
Channel pair in independent or complementary mode

pwm_register_reload_t reloadLogic
PWM Reload logic setup

pwm_reload_source_select_t reloadSelect
Reload source select

pwm_load_frequency_t reloadFrequency
Specifies when to reload, used when user's choice is not immediate reload

pwm_force_output_trigger_t forceTrigger
Specify which signal will trigger a FORCE_OUT

struct *_pwm_fault_input_filter_param*
#include <fsl_pwm.h> Structure for the user to configure the fault input filter.

Public Members

uint8_t faultFilterCount
Fault filter count

uint8_t faultFilterPeriod
Fault filter period; value of 0 will bypass the filter

bool faultGlitchStretch
Fault Glitch Stretch Enable: A logic 1 means that input fault signals will be stretched to at least 2 IPBus clock cycles

struct *_pwm_fault_param*
#include <fsl_pwm.h> Structure is used to hold the parameters to configure a PWM fault.

Public Members

pwm_fault_clear_t faultClearingMode
Fault clearing mode to use

bool faultLevel
true: Logic 1 indicates fault; false: Logic 0 indicates fault

bool enableCombinationalPath
true: Combinational Path from fault input is enabled; false: No combination path is available

pwm_fault_recovery_mode_t recoverMode
Specify when to re-enable the PWM output

struct *_pwm_input_capture_param*
#include <fsl_pwm.h> Structure is used to hold parameters to configure the capture capability of a signal pin.

Public Members

bool captureInputSel
true: Use the edge counter signal as source false: Use the raw input signal from the pin as source

uint8_t edgeCompareValue

Compare value, used only if edge counter is used as source

pwm_input_capture_edge_t edge0

Specify which edge causes a capture for input circuitry 0

pwm_input_capture_edge_t edge1

Specify which edge causes a capture for input circuitry 1

bool enableOneShotCapture

true: Use one-shot capture mode; false: Use free-running capture mode

uint8_t fifoWatermark

Watermark level for capture FIFO. The capture flags in the status register will set if the word count in the FIFO is greater than this watermark level

2.61 Reset Driver

enum _SYSCON_RSTn

Enumeration for peripheral reset control bits.

Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers

Values:

enumerator kINPUTMUX0_RST_SHIFT_RSTn

INPUTMUX0 reset control

enumerator kI3C0_RST_SHIFT_RSTn

I3C0 reset control

enumerator kCTIMER0_RST_SHIFT_RSTn

CTIMER0 reset control

enumerator kCTIMER1_RST_SHIFT_RSTn

CTIMER1 reset control

enumerator kCTIMER2_RST_SHIFT_RSTn

CTIMER2 reset control

enumerator kCTIMER3_RST_SHIFT_RSTn

CTIMER3 reset control

enumerator kCTIMER4_RST_SHIFT_RSTn

CTIMER4 reset control

enumerator kFREQME_RST_SHIFT_RSTn

FREQME reset control

enumerator kUTICK0_RST_SHIFT_RSTn

UTICK0 reset control

enumerator kDMA_RST_SHIFT_RSTn

DMA reset control

enumerator kAOI0_RST_SHIFT_RSTn

AOI0 reset control

enumerator kCRC0_RST_SHIFT_RSTn

CRC0 reset control

enumerator kEIM0_RST_SHIFT_RSTn
EIM0 reset control

enumerator kERM0_RST_SHIFT_RSTn
ERM0 reset control

enumerator kAOI1_RST_SHIFT_RSTn
AOI1 reset control

enumerator kFLEXIO0_RST_SHIFT_RSTn
FLEXIO0 reset control

enumerator kLPI2C0_RST_SHIFT_RSTn
LPI2C0 reset control

enumerator kLPI2C1_RST_SHIFT_RSTn
LPI2C1 reset control

enumerator kLPSPi0_RST_SHIFT_RSTn
LPSPi0 reset control

enumerator kLPSPi1_RST_SHIFT_RSTn
LPSPi1 reset control

enumerator kLPUART0_RST_SHIFT_RSTn
LPUART0 reset control

enumerator kLPUART1_RST_SHIFT_RSTn
LPUART1 reset control

enumerator kLPUART2_RST_SHIFT_RSTn
LPUART2 reset control

enumerator kLPUART3_RST_SHIFT_RSTn
LPUART3 reset control

enumerator kLPUART4_RST_SHIFT_RSTn
LPUART4 reset control

enumerator kUSB0_RST_SHIFT_RSTn
USB0 reset control

enumerator kQDC0_RST_SHIFT_RSTn
QDC0 reset control

enumerator kQDC1_RST_SHIFT_RSTn
QDC1 reset control

enumerator kFLEXPWM0_RST_SHIFT_RSTn
FLEXPWM0 reset control

enumerator kFLEXPWM1_RST_SHIFT_RSTn
FLEXPWM1 reset control

enumerator kOSTIMER0_RST_SHIFT_RSTn
OSTIMER0 reset control

enumerator kADC0_RST_SHIFT_RSTn
ADC0 reset control

enumerator kADC1_RST_SHIFT_RSTn
ADC1 reset control

```
enumerator kCMP1_RST_SHIFT_RSTn
    CMP1 reset control
enumerator kDAC0_RST_SHIFT_RSTn
    DAC0 reset control
enumerator kOPAMP0_RST_SHIFT_RSTn
    OPAMP0 reset control
enumerator kPORT0_RST_SHIFT_RSTn
    PORT0 reset control
enumerator kPORT1_RST_SHIFT_RSTn
    PORT1 reset control
enumerator kPORT2_RST_SHIFT_RSTn
    PORT2 reset control
enumerator kPORT3_RST_SHIFT_RSTn
    PORT3 reset control
enumerator kPORT4_RST_SHIFT_RSTn
    PORT4 reset control
enumerator kFLEXCAN0_RST_SHIFT_RSTn
    FLEXCAN0 reset control
enumerator kLPI2C2_RST_SHIFT_RSTn
    LPI2C2 reset control
enumerator kLPI2C3_RST_SHIFT_RSTn
    LPI2C3 reset control
enumerator kGPIO0_RST_SHIFT_RSTn
    GPIO0 reset control
enumerator kGPIO1_RST_SHIFT_RSTn
    GPIO1 reset control
enumerator kGPIO2_RST_SHIFT_RSTn
    GPIO2 reset control
enumerator kGPIO3_RST_SHIFT_RSTn
    GPIO3 reset control
enumerator kGPIO4_RST_SHIFT_RSTn
    GPIO4 reset control
enumerator NotAvail_RSTn
    No reset control
typedef enum _SYSCON_RSTn SYSCON_RSTn_t
    Enumeration for peripheral reset control bits.
    Defines the enumeration for peripheral reset control bits in PRESETCTRL/ASYNCPRESETCTRL registers
typedef SYSCON_RSTn_t reset_ip_name_t
void RESET_SetPeripheralReset(reset_ip_name_t peripheral)
    Assert reset to peripheral.
    Asserts reset signal to specified peripheral module.
```

Parameters

- `peripheral` – Assert reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

`void RESET_ClearPeripheralReset(reset_ip_name_t peripheral)`

Clear reset to peripheral.

Clears reset signal to specified peripheral module, allows it to operate.

Parameters

- `peripheral` – Clear reset to this peripheral. The enum argument contains encoding of reset register and reset bit position in the reset register.

`void RESET_PeripheralReset(reset_ip_name_t peripheral)`

Reset peripheral module.

Reset peripheral module.

Parameters

- `peripheral` – Peripheral to reset. The enum argument contains encoding of reset register and reset bit position in the reset register.

`static inline void RESET_ReleasePeripheralReset(reset_ip_name_t peripheral)`

Release peripheral module.

Release peripheral module.

Parameters

- `peripheral` – Peripheral to release. The enum argument contains encoding of reset register and reset bit position in the reset register.

`FSL_RESET_DRIVER_VERSION`

reset driver version 2.4.0

`AOI_RSTS`

Array initializers with peripheral reset bits

`ADC_RSTS`

`CRC_RSTS`

`CTIMER_RSTS`

`DAC_RSTS_N`

`DMA_RSTS_N`

`EIM_RSTS_N`

`ERM_RSTS_N`

`FLEXCAN_RSTS_N`

`FLEXIO_RSTS_N`

`FLEXPWM_RSTS_N`

`FREQME_RSTS_N`

`GPIO_RSTS_N`

`I3C_RSTS`

INPUTMUX_RSTS
LPUART_RSTS
LPSPI_RSTS
LPI2C_RSTS
LPCMP_RSTS
OPAMP_RSTS
OSTIMER_RSTS
PORT_RSTS_N
EQDC_RSTS
UTICK_RSTS

2.62 TRDC: Trusted Resource Domain Controller

`void TRDC_Init(TRDC_Type *base)`

Initializes the TRDC module.

This function enables the TRDC clock.

Parameters

- `base` – TRDC peripheral base address.

`void TRDC_Deinit(TRDC_Type *base)`

De-initializes the TRDC module.

This function disables the TRDC clock.

Parameters

- `base` – TRDC peripheral base address.

`static inline uint8_t TRDC_GetCurrentMasterDomainId(TRDC_Type *base)`

Gets the domain ID of the current bus master.

Parameters

- `base` – TRDC peripheral base address.

Returns

Domain ID of current bus master.

`void TRDC_GetHardwareConfig(TRDC_Type *base, trdc_hardware_config_t *config)`

Gets the TRDC hardware configuration.

This function gets the TRDC hardware configurations, including number of bus masters, number of domains, number of MRCs and number of PACs.

Parameters

- `base` – TRDC peripheral base address.
- `config` – Pointer to the structure to get the configuration.

```
static inline void TRDC_SetDacGlobalValid(TRDC_Type *base)
```

Sets the TRDC DAC(Domain Assignment Controllers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

```
static inline void TRDC_LockMasterDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t
                                                    regNum)
```

Locks the bus master domain assignment register.

This function locks the master domain assignment. After it is locked, the register can't be changed until next reset.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdcx_master_t` in processor header file, x is trdc instance.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- assignIndex – Which assignment register to lock.

```
static inline void TRDC_SetMasterDomainAssignmentValid(TRDC_Type *base, uint8_t master,
                                                       uint8_t regNum, bool valid)
```

Sets the master domain assignment as valid or invalid.

This function sets the master domain assignment as valid or invalid.

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- assignIndex – Index for the domain assignment register.
- valid – True to set valid, false to set invalid.

```
void TRDC_GetDefaultProcessorDomainAssignment(trdc_processor_domain_assignment_t
                                              *domainAssignment)
```

Gets the default master domain assignment for the processor bus master.

This function gets the default master domain assignment for the processor bus master. It should only be used for the processor bus masters, such as CORE0. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->domainIdSelect = kTRDC_DidMda;
assignment->lock          = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_GetDefaultNonProcessorDomainAssignment(trdc_non_processor_domain_assignment_t
                                                 *domainAssignment)
```

Gets the default master domain assignment for non-processor bus master.

This function gets the default master domain assignment for non-processor bus master. It should only be used for the non-processor bus masters, such as DMA. This function sets the assignment as follows:

```
assignment->domainId      = 0U;
assignment->privilegeAttr  = kTRDC_ForceUser;
assignment->secureAttr     = kTRDC_ForceSecure;
assignment->bypassDomainId = 0U;
assignment->lock           = 0U;
```

Parameters

- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetProcessorDomainAssignment(TRDC_Type *base, uint8_t master, uint8_t regNum,
                                       const trdc_processor_domain_assignment_t
                                       *domainAssignment)
```

Sets the processor bus master domain assignment.

This function sets the processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for core 0.

```
trdc_processor_domain_assignment_t processorAssignment;

TRDC_GetDefaultProcessorDomainAssignment(&processorAssignment);

processorAssignment.domainId = 0;
processorAssignment.xxx      = xxx;
TRDC_SetMasterDomainAssignment(TRDC, &processorAssignment);
```

Parameters

- base – TRDC peripheral base address.
- master – Which master to configure, refer to `trdc_master_t` in processor header file.
- regNum – Which register to configure, processor master can have more than one register for the MDAC configuration.
- domainAssignment – Pointer to the assignment structure.

```
void TRDC_SetNonProcessorDomainAssignment(TRDC_Type *base, uint8_t master, const
                                          trdc_non_processor_domain_assignment_t
                                          *domainAssignment)
```

Sets the non-processor bus master domain assignment.

This function sets the non-processor master domain assignment as valid. One bus master might have multiple domain assignment registers. The parameter `assignIndex` specifies which assignment register to set.

Example: Set domain assignment for DMA0.

```
trdc_non_processor_domain_assignment_t nonProcessorAssignment;

TRDC_GetDefaultNonProcessorDomainAssignment(&nonProcessorAssignment);
nonProcessorAssignment.domainId = 1;
nonProcessorAssignment.xxx      = xxx;

TRDC_SetMasterDomainAssignment(TRDC, kTrdcMasterDma0, 0U, &nonProcessorAssignment);
```

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which master to configure, refer to `trdc_master_t` in processor header file.
- `domainAssignment` – Pointer to the assignment structure.

```
static inline uint64_t TRDC_GetActiveMasterPidMap(TRDC_Type *base)
```

Gets the bit map of the bus master(s) that is(are) sourcing a PID register.

This function sets the non-processor master domain assignment as valid.

Parameters

- `base` – TRDC peripheral base address.

Returns

the bit map of the master(s). Bit 1 sets indicates bus master 1.

```
void TRDC_SetPid(TRDC_Type *base, uint8_t master, const trdc_pid_config_t *pidConfig)
```

Sets the current Process identifier(PID) for processor core.

Each processor has a corresponding process identifier (PID) which can be used to group tasks into different domains. Secure privileged software saves and restores the PID as part of any context switch. This data structure defines an array of 32-bit values, one per MDA module, that define the PID. Since this register resource is only applicable to processor cores, the data structure is typically sparsely populated. The HWCFG[2-3] registers provide a bitmap of the implemented PIDn registers. This data structure is indexed using the corresponding MDA instance number. Depending on the operating clock domain of each DAC instance, there may be optional information stored in the corresponding PIDm register to properly implement the LK2 = 2 functionality.

Parameters

- `base` – TRDC peripheral base address.
- `master` – Which processor master to configure, refer to `trdc_master_t` in processor header file.
- `pidConfig` – Pointer to the configuration structure.

```
void TRDC_GetDefaultIDAUConfig(trdc_idau_config_t *idauConfiguration)
```

Gets the default IDAU(Implementation-Defined Attribution Unit) configuration.

```
config->lockSecureVTOR    = false;
config->lockNonsecureVTOR = false;
config->lockSecureMPU     = false;
config->lockNonsecureMPU  = false;
config->lockSAU           = false;
```

Parameters

- `domainAssignment` – Pointer to the configuration structure.

```
void TRDC_SetIDAU(TRDC_Type *base, const trdc_idau_config_t *idauConfiguration)
```

Sets the IDAU(Implementation-Defined Attribution Unit) control configuration.

Example: Lock the secure and non-secure MPU registers.

```
trdc_idau_config_t idauConfiguration;

TRDC_GetDefaultIDAUConfig(&idauConfiguration);

idauConfiguration.lockSecureMPU = true;
```

(continues on next page)

(continued from previous page)

```

idauConfiguration.lockNonsecureMPU    = true;
TRDC_SetIDAU(TRDC, &idauConfiguration);

```

Parameters

- base – TRDC peripheral base address.
- domainAssignment – Pointer to the configuration structure.

static inline void TRDC_EnableFlashLogicalWindow(TRDC_Type *base, bool enable)
Enables/disables the FLW(flash logical window) function.

Parameters

- base – TRDC peripheral base address.
- enable – True to enable, false to disable.

static inline void TRDC_LockFlashLogicalWindow(TRDC_Type *base)
Locks FLW registers. Once locked the registers can not be updated until next reset.

Parameters

- base – TRDC peripheral base address.

static inline uint32_t TRDC_GetFlashLogicalWindowPbase(TRDC_Type *base)
Gets the FLW physical base address.

Parameters

- base – TRDC peripheral base address.

Returns

Physical address of the FLW function.

static inline void TRDC_GetSetFlashLogicalWindowSize(TRDC_Type *base, uint16_t size)
Sets the FLW size.

Parameters

- base – TRDC peripheral base address.
- size – Size of the FLW in unit of 32k bytes.

void TRDC_GetDefaultFlashLogicalWindowConfig(*trdc_flw_config_t* *flwConfiguration)
Gets the default FLW(Flash Logical Window) configuration.

```

config->blockCount    = false;
config->arrayBaseAddr = false;
config->lock          = false;
config->enable        = false;

```

Parameters

- flwConfiguration – Pointer to the configuration structure.

void TRDC_SetFlashLogicalWindow(TRDC_Type *base, const *trdc_flw_config_t* *flwConfiguration)
Sets the FLW function's configuration.

```

trdc_flw_config_t flwConfiguration;

TRDC_GetDefaultIDAUConfig(&flwConfiguration);

flwConfiguration.blockCount = 32U;

```

(continues on next page)

(continued from previous page)

```
flwConfiguration.arrayBaseAddr = 0XXXXXXXXX;
TRDC_SetIDAU(TRDC, &flwConfiguration);
```

Parameters

- base – TRDC peripheral base address.
- flwConfiguration – Pointer to the configuration structure.

status_t TRDC_GetAndClearFirstDomainError(TRDC_Type *base, *trdc_domain_error_t* *error)

Gets and clears the first domain error of the current domain.

This function gets the first access violation information for the current domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.

Returns

If the access violation is captured, this function returns the *kStatus_Success*. The error information can be obtained from the parameter *error*. If no access violation is captured, this function returns the *kStatus_NoData*.

status_t TRDC_GetAndClearFirstSpecificDomainError(TRDC_Type *base, *trdc_domain_error_t* *error, *uint8_t* domainId)

Gets and clears the first domain error of the specific domain.

This function gets the first access violation information for the specific domain and clears the pending flag. There might be multiple access violations pending for the current domain. This function only processes the first error.

Parameters

- base – TRDC peripheral base address.
- error – Pointer to the error information.
- domainId – The error of which domain to get and clear.

Returns

If the access violation is captured, this function returns the *kStatus_Success*. The error information can be obtained from the parameter *error*. If no access violation is captured, this function returns the *kStatus_NoData*.

static inline void TRDC_SetMrcGlobalValid(TRDC_Type *base)

Sets the TRDC MRC(Memory Region Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

static inline *uint8_t* TRDC_GetMrcRegionNumber(TRDC_Type *base, *uint8_t* mrcIdx)

Gets the TRDC MRC(Memory Region Checkers) region number valid.

Parameters

- base – TRDC peripheral base address.

Returns

the region number of the given MRC instance

```
void TRDC_MrcSetMemoryAccessConfig(TRDC_Type *base, const
                                   trdc_memory_access_control_config_t *config, uint8_t
                                   mrcIdx, uint8_t regIdx)
```

Sets the memory access configuration for one of the access control register of one MRC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMrcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mrcIdx – MRC index.
- regIdx – Register number.

```
void TRDC_MrcEnableDomainNseUpdate(TRDC_Type *base, uint8_t mrcIdx, uint16_t
                                   domianMask, bool enable)
```

Enables the update of the selected domians.

After the domians' update are enabled, their regions' NSE bits can be set or clear.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domianMask – Bit mask of the domains to be enabled.
- enable – True to enable, false to disable.

```
void TRDC_MrcRegionNseSet(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Sets the NSE bits of the selected regions for domains.

This function sets the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to set.

```
void TRDC_MrcRegionNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t regionMask)
```

Clears the NSE bits of the selected regions for domains.

This function clears the NSE bits for the selected regions for the domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- regionMask – Bit mask of the regions whose NSE bits to clear.

```
void TRDC_MrcDomainNseClear(TRDC_Type *base, uint8_t mrcIdx, uint16_t domainMask)
```

Clears the NSE bits for all the regions of the selected domains.

This function clears the NSE bits for all regions of selected domains whose update are enabled.

Parameters

- base – TRDC peripheral base address.
- mrcIdx – MRC index.
- domainMask – Bit mask of the domains whose NSE bits to clear.

```
void TRDC_MrcSetRegionDescriptorConfig(TRDC_Type *base, const
                                     trdc_mrc_region_descriptor_config_t *config)
```

Sets the configuration for one of the region descriptor per domain per MRC instance.

This function sets the configuration for one of the region descriptor, including the start and end address of the region, memory access control policy and valid.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to region descriptor configuration structure.

```
static inline void TRDC_SetMbcGlobalValid(TRDC_Type *base)
```

Sets the TRDC MBC(Memory Block Checkers) global valid.

Once enabled, it will remain enabled until next reset.

Parameters

- base – TRDC peripheral base address.

```
void TRDC_GetMbcHardwareConfig(TRDC_Type *base, trdc_slave_memory_hardware_config_t
                               *config, uint8_t mbcIdx, uint8_t slvIdx)
```

Gets the hardware configuration of the one of two slave memories within each MBC(memory block checker).

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the structure to get the configuration.
- mbcIdx – MBC number.
- slvIdx – Slave number.

```
void TRDC_MbcSetNseUpdateConfig(TRDC_Type *base, const trdc_mbc_nse_update_config_t
                                *config, uint8_t mbcIdx)
```

Sets the NSR update configuration for one of the MBC instance.

After set the NSE configuration, the configured memory area can be update by NSE set/clear.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to NSE update configuration structure.
- mbcIdx – MBC index.

```
void TRDC_MbcWordNseSet(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)
```

Sets the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured region, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to set.

void TRDC_MbcWordNseClear(TRDC_Type *base, uint8_t mbcIdx, uint32_t bitMask)

Clears the NSE bits of the selected configuration words according to NSE update configuration.

This function sets the NSE bits of the word for the configured regio, memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- bitMask – Mask of the bits whose NSE bits to clear.

void TRDC_MbcNseClearAll(TRDC_Type *base, uint8_t mbcIdx, uint16_t domainMask, uint8_t slave)

Clears all configuration words' NSE bits of the selected domain and memory.

Parameters

- base – TRDC peripheral base address.
- mbcIdx – MBC index.
- domainMask – Mask of the domains whose NSE bits to clear, 0b110 means clear domain 1&2.
- slaveMask – Mask of the slaves whose NSE bits to clear, 0x11 means clear all slave 0&1's NSE bits.

void TRDC_MbcSetMemoryAccessConfig(TRDC_Type *base, const *trdc_memory_access_control_config_t* *config, uint8_t mbcIdx, uint8_t rgdIdx)

Sets the memory access configuration for one of the region descriptor of one MBC.

Example: Enable the secure operations and lock the configuration for MRC0 region 1.

```
trdc_memory_access_control_config_t config;

config.securePrivX = true;
config.securePrivW = true;
config.securePrivR = true;
config.lock = true;
TRDC_SetMbcMemoryAccess(TRDC, &config, 0, 1);
```

Parameters

- base – TRDC peripheral base address.
- config – Pointer to the configuration structure.
- mbcIdx – MBC index.
- rgdIdx – Region descriptor number.

void TRDC_MbcSetMemoryBlockConfig(TRDC_Type *base, const *trdc_mbc_memory_block_config_t* *config)

Sets the configuration for one of the memory block per domain per MBC instance.

This function sets the configuration for one of the memory block, including the memory access control policy and nse enable.

Parameters

- base – TRDC peripheral base address.
- config – Pointer to memory block configuration structure.

enum `_trdc_did_sel`

TRDC domain ID select method, the register bit `TRDC_MDA_W0_0_DFMT0[DIDS]`, used for domain hit evaluation.

Values:

enumerator `kTRDC_DidMda`

Use `MDAn[2:0]` as DID.

enumerator `kTRDC_DidInput`

Use the input DID (`DID_in`) as DID.

enumerator `kTRDC_DidMdaAndInput`

Use `MDAn[2]` concatenated with `DID_in[1:0]` as DID.

enumerator `kTRDC_DidReserved`

Reserved.

enum `_trdc_secure_attr`

TRDC secure attribute, the register bit `TRDC_MDA_W0_0_DFMT0[SA]`, used for bus master domain assignment.

Values:

enumerator `kTRDC_ForceSecure`

Force the bus attribute for this master to secure.

enumerator `kTRDC_ForceNonSecure`

Force the bus attribute for this master to non-secure.

enumerator `kTRDC_MasterSecure`

Use the bus master's secure/nonsecure attribute directly.

enumerator `kTRDC_MasterSecure1`

Use the bus master's secure/nonsecure attribute directly.

enum `_trdc_pid_domain_hit_config`

The configuration of domain hit evaluation of PID.

Values:

enumerator `kTRDC_pidDomainHitNone0`

No PID is included in the domain hit evaluation.

enumerator `kTRDC_pidDomainHitNone1`

No PID is included in the domain hit evaluation.

enumerator `kTRDC_pidDomainHitInclusive`

The PID is included in the domain hit evaluation when $(PID \& \sim PIDM)$.

enumerator `kTRDC_pidDomainHitExclusive`

The PID is included in the domain hit evaluation when $\sim(PID \& \sim PIDM)$.

enum `_trdc_privilege_attr`

TRDC privileged attribute, the register bit `TRDC_MDA_W0_x_DFMT1[PA]`, used for non-processor bus master domain assignment.

Values:

enumerator `kTRDC_ForceUser`

Force the bus attribute for this master to user.

enumerator kTRDC_ForcePrivilege

Force the bus attribute for this master to privileged.

enumerator kTRDC_MasterPrivilege

Use the bus master's attribute directly.

enumerator kTRDC_MasterPrivilege1

Use the bus master's attribute directly.

enum _trdc_pid_lock

PID lock configuration.

Values:

enumerator kTRDC_PidUnlocked0

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked1

The PID value can be updated by any secure privileged write.

enumerator kTRDC_PidUnlocked2

The PID value can be updated by any secure privileged write from the bus master that first configured this register.

enumerator kTRDC_PidLocked

The PID value is locked until next reset.

enum _trdc_controller

TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call TRDC_GetHardwareConfig to get the actual count.

Values:

enumerator kTRDC_MemBlockController0

Memory block checker 0.

enumerator kTRDC_MemBlockController1

Memory block checker 1.

enumerator kTRDC_MemBlockController2

Memory block checker 2.

enumerator kTRDC_MemBlockController3

Memory block checker 3.

enumerator kTRDC_MemRegionChecker0

Memory region checker 0.

enumerator kTRDC_MemRegionChecker1

Memory region checker 1.

enumerator kTRDC_MemRegionChecker2

Memory region checker 2.

enumerator kTRDC_MemRegionChecker3

Memory region checker 3.

enumerator kTRDC_MemRegionChecker4

Memory region checker 4.

enumerator kTRDC_MemRegionChecker5

Memory region checker 5.

enumerator kTRDC_MemRegionChecker6
Memory region checker 6.

enum _trdc_error_state

TRDC domain error state definition TRDC_MBCn_DERR_W1[EST] or
TRDC_MRCn_DERR_W1[EST].

Values:

enumerator kTRDC_ErrorStateNone
No access violation detected.

enumerator kTRDC_ErrorStateNone1
No access violation detected.

enumerator kTRDC_ErrorStateSingle
Single access violation detected.

enumerator kTRDC_ErrorStateMulti
Multiple access violation detected.

enum _trdc_error_attr

TRDC domain error attribute definition TRDC_MBCn_DERR_W1[EATR] or
TRDC_MRCn_DERR_W1[EATR].

Values:

enumerator kTRDC_ErrorSecureUserInst
Secure user mode, instruction fetch access.

enumerator kTRDC_ErrorSecureUserData
Secure user mode, data access.

enumerator kTRDC_ErrorSecurePrivilegeInst
Secure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorSecurePrivilegeData
Secure privileged mode, data access.

enumerator kTRDC_ErrorNonSecureUserInst
NonSecure user mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecureUserData
NonSecure user mode, data access.

enumerator kTRDC_ErrorNonSecurePrivilegeInst
NonSecure privileged mode, instruction fetch access.

enumerator kTRDC_ErrorNonSecurePrivilegeData
NonSecure privileged mode, data access.

enum _trdc_error_type

TRDC domain error access type definition TRDC_DERR_W1_n[ERW].

Values:

enumerator kTRDC_ErrorTypeRead
Error occurs on read reference.

enumerator kTRDC_ErrorTypeWrite
Error occurs on write reference.

enum `_trdc_region_descriptor`

The region descriptor enumeration, used to form a mask to set/clear the NSE bits for one or several regions.

Values:

enumerator `kTRDC_RegionDescriptor0`
Region descriptor 0.

enumerator `kTRDC_RegionDescriptor1`
Region descriptor 1.

enumerator `kTRDC_RegionDescriptor2`
Region descriptor 2.

enumerator `kTRDC_RegionDescriptor3`
Region descriptor 3.

enumerator `kTRDC_RegionDescriptor4`
Region descriptor 4.

enumerator `kTRDC_RegionDescriptor5`
Region descriptor 5.

enumerator `kTRDC_RegionDescriptor6`
Region descriptor 6.

enumerator `kTRDC_RegionDescriptor7`
Region descriptor 7.

enumerator `kTRDC_RegionDescriptor8`
Region descriptor 8.

enumerator `kTRDC_RegionDescriptor9`
Region descriptor 9.

enumerator `kTRDC_RegionDescriptor10`
Region descriptor 10.

enumerator `kTRDC_RegionDescriptor11`
Region descriptor 11.

enumerator `kTRDC_RegionDescriptor12`
Region descriptor 12.

enumerator `kTRDC_RegionDescriptor13`
Region descriptor 13.

enumerator `kTRDC_RegionDescriptor14`
Region descriptor 14.

enumerator `kTRDC_RegionDescriptor15`
Region descriptor 15.

enum `_trdc_MRC_domain`

The MRC domain enumeration, used to form a mask to enable/disable the update or clear all NSE bits of one or several domains.

Values:

enumerator `kTRDC_MrcDomain0`
Domain 0.

enumerator kTRDC_MrcDomain1

Domain 1.

enumerator kTRDC_MrcDomain2

Domain 2.

enumerator kTRDC_MrcDomain3

Domain 3.

enumerator kTRDC_MrcDomain4

Domain 4.

enumerator kTRDC_MrcDomain5

Domain 5.

enumerator kTRDC_MrcDomain6

Domain 6.

enumerator kTRDC_MrcDomain7

Domain 7.

enumerator kTRDC_MrcDomain8

Domain 8.

enumerator kTRDC_MrcDomain9

Domain 9.

enumerator kTRDC_MrcDomain10

Domain 10.

enumerator kTRDC_MrcDomain11

Domain 11.

enumerator kTRDC_MrcDomain12

Domain 12.

enumerator kTRDC_MrcDomain13

Domain 13.

enumerator kTRDC_MrcDomain14

Domain 14.

enumerator kTRDC_MrcDomain15

Domain 15.

enum _trdc_MBC_domain

The MBC domain enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several domains.

Values:

enumerator kTRDC_MbcDomain0

Domain 0.

enumerator kTRDC_MbcDomain1

Domain 1.

enumerator kTRDC_MbcDomain2

Domain 2.

enumerator kTRDC_MbcDomain3

Domain 3.

enumerator kTRDC_MbcDomain4
Domain 4.

enumerator kTRDC_MbcDomain5
Domain 5.

enumerator kTRDC_MbcDomain6
Domain 6.

enumerator kTRDC_MbcDomain7
Domain 7.

enum _trdc_MBC_memory

The MBC slave memory enumeration, used to form a mask to enable/disable the update or clear NSE bits of one or several memory block.

Values:

enumerator kTRDC_MbcSlaveMemory0
Memory 0.

enumerator kTRDC_MbcSlaveMemory1
Memory 1.

enumerator kTRDC_MbcSlaveMemory2
Memory 2.

enumerator kTRDC_MbcSlaveMemory3
Memory 3.

enum _trdc_MBC_bit

The MBC bit enumeration, used to form a mask to set/clear configured words' NSE.

Values:

enumerator kTRDC_MbcBit0
Bit 0.

enumerator kTRDC_MbcBit1
Bit 1.

enumerator kTRDC_MbcBit2
Bit 2.

enumerator kTRDC_MbcBit3
Bit 3.

enumerator kTRDC_MbcBit4
Bit 4.

enumerator kTRDC_MbcBit5
Bit 5.

enumerator kTRDC_MbcBit6
Bit 6.

enumerator kTRDC_MbcBit7
Bit 7.

enumerator kTRDC_MbcBit8
Bit 8.

enumerator kTRDC_MbcBit9
Bit 9.

enumerator kTRDC_MbcBit10

Bit 10.

enumerator kTRDC_MbcBit11

Bit 11.

enumerator kTRDC_MbcBit12

Bit 12.

enumerator kTRDC_MbcBit13

Bit 13.

enumerator kTRDC_MbcBit14

Bit 14.

enumerator kTRDC_MbcBit15

Bit 15.

enumerator kTRDC_MbcBit16

Bit 16.

enumerator kTRDC_MbcBit17

Bit 17.

enumerator kTRDC_MbcBit18

Bit 18.

enumerator kTRDC_MbcBit19

Bit 19.

enumerator kTRDC_MbcBit20

Bit 20.

enumerator kTRDC_MbcBit21

Bit 21.

enumerator kTRDC_MbcBit22

Bit 22.

enumerator kTRDC_MbcBit23

Bit 23.

enumerator kTRDC_MbcBit24

Bit 24.

enumerator kTRDC_MbcBit25

Bit 25.

enumerator kTRDC_MbcBit26

Bit 26.

enumerator kTRDC_MbcBit27

Bit 27.

enumerator kTRDC_MbcBit28

Bit 28.

enumerator kTRDC_MbcBit29

Bit 29.

enumerator kTRDC_MbcBit30

Bit 30.

enumerator `kTRDC_MbcBit31`

Bit 31.

typedef struct *trdc_hardware_config* `trdc_hardware_config_t`
TRDC hardware configuration.

typedef struct *trdc_slave_memory_hardware_config* `trdc_slave_memory_hardware_config_t`
Hardware configuration of the two slave memories within each MBC(memory block checker).

typedef enum *trdc.did_sel* `trdc.did_sel_t`
TRDC domain ID select method, the register bit `TRDC_MDA_W0_0_DFMT0[DIDS]`, used for domain hit evaluation.

typedef enum *trdc_secure_attr* `trdc_secure_attr_t`
TRDC secure attribute, the register bit `TRDC_MDA_W0_0_DFMT0[SA]`, used for bus master domain assignment.

typedef enum *trdc_pid_domain_hit_config* `trdc_pid_domain_hit_config_t`
The configuration of domain hit evaluation of PID.

typedef struct *trdc_processor_domain_assignment* `trdc_processor_domain_assignment_t`
Domain assignment for the processor bus master.

typedef enum *trdc_privilege_attr* `trdc_privilege_attr_t`
TRDC privileged attribute, the register bit `TRDC_MDA_W0_x_DFMT1[PA]`, used for non-processor bus master domain assignment.

typedef struct *trdc_non_processor_domain_assignment* `trdc_non_processor_domain_assignment_t`
Domain assignment for the non-processor bus master.

typedef enum *trdc_pid_lock* `trdc_pid_lock_t`
PID lock configuration.

typedef struct *trdc_pid_config* `trdc_pid_config_t`
Process identifier(PID) configuration for processor cores.

typedef struct *trdc_idau_config* `trdc_idau_config_t`
IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

typedef struct *trdc_flw_config* `trdc_flw_config_t`
FLW(Flash Logical Window) configuration.

typedef enum *trdc_controller* `trdc_controller_t`
TRDC controller definition for domain error check. Each TRDC instance may have different MRC or MBC count, call `TRDC_GetHardwareConfig` to get the actual count.

typedef enum *trdc_error_state* `trdc_error_state_t`
TRDC domain error state definition `TRDC_MBCn_DERR_W1[EST]` or `TRDC_MRCn_DERR_W1[EST]`.

typedef enum *trdc_error_attr* `trdc_error_attr_t`
TRDC domain error attribute definition `TRDC_MBCn_DERR_W1[EATR]` or `TRDC_MRCn_DERR_W1[EATR]`.

typedef enum *trdc_error_type* `trdc_error_type_t`
TRDC domain error access type definition `TRDC_DERR_W1_n[ERW]`.

typedef struct *trdc_domain_error* `trdc_domain_error_t`
TRDC domain error definition.

`typedef struct _trdc_memory_access_control_config trdc_memory_access_control_config_t`
Memory access control configuration for MBC/MRC.

`typedef struct _trdc_mrc_region_descriptor_config trdc_mrc_region_descriptor_config_t`
The configuration of each region descriptor per domain per MRC instance.

`typedef struct _trdc_mbc_nse_update_config trdc_mbc_nse_update_config_t`
The configuration of MBC NSE update.

`typedef struct _trdc_mbc_memory_block_config trdc_mbc_memory_block_config_t`
The configuration of each memory block per domain per MBC instance.

`FSL_TRDC_DRIVER_VERSION`

`struct _trdc_hardware_config`
`#include <fsl_trdc.h>` TRDC hardware configuration.

Public Members

`uint8_t masterNumber`
Number of bus masters.

`uint8_t domainNumber`
Number of domains.

`uint8_t mbcNumber`
Number of MBCs.

`uint8_t mrcNumber`
Number of MRCs.

`struct _trdc_slave_memory_hardware_config`
`#include <fsl_trdc.h>` Hardware configuration of the two slave memories within each MBC(memory block checker).

Public Members

`uint32_t blockNum`
Number of blocks.

`uint32_t blockSize`
Block size.

`struct _trdc_processor_domain_assignment`
`#include <fsl_trdc.h>` Domain assignment for the processor bus master.

Public Members

`uint32_t domainId`
Domain ID.

`uint32_t domainIdSelect`
Domain ID select method, see `trdc_did_sel_t`.

`uint32_t pidDomainHitConfig`
The configuration of the domain hit evaluation for PID, see `trdc_pid_domain_hit_config_t`.

uint32_t pidMask

The mask combined with PID, so multiple PID can be included as part of the domain hit determination. Set to 0 to disable.

uint32_t secureAttr

Secure attribute, see `trdc_secure_attr_t`.

uint32_t pid

The process identifier, combined with pidMask to form the domain hit determination.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct `_trdc_non_processor_domain_assignment`

#include <fsl_trdc.h> Domain assignment for the non-processor bus master.

Public Members

uint32_t domainId

Domain ID.

uint32_t privilegeAttr

Privileged attribute, see `trdc_privilege_attr_t`.

uint32_t secureAttr

Secure attribute, see `trdc_secure_attr_t`.

uint32_t bypassDomainId

Bypass domain ID.

uint32_t __pad0__

Reserved.

uint32_t lock

Lock the register.

uint32_t __pad1__

Reserved.

struct `_trdc_pid_config`

#include <fsl_trdc.h> Process identifier(PID) configuration for processor cores.

Public Members

uint32_t pid

The process identifier of the executing task. The highest bit can be used to define secure/nonsecure attribute of the task.

uint32_t __pad0__

Reserved.

uint32_t lock

How to lock the register, see `trdc_pid_lock_t`.

uint32_t __pad1__
Reserved.

struct _trdc_idau_config
#include <fsl_trdc.h> IDAU(Implementation-Defined Attribution Unit) configuration for TZ-M function control.

Public Members

uint32_t __pad0__
Reserved.

uint32_t lockSecureVTOR
Disable writes to secure VTOR(Vector Table Offset Register).

uint32_t lockNonsecureVTOR
Disable writes to non-secure VTOR, Application interrupt and Reset Control Registers.

uint32_t lockSecureMPU
Disable writes to secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor in Secure state.

uint32_t lockNonsecureMPU
Disable writes to non-secure MPU(Memory Protection Unit) from software or from a debug agent connected to the processor.

uint32_t lockSAU
Disable writes to SAU(Security Attribution Unit) registers.

uint32_t __pad1__
Reserved.

struct _trdc_flw_config
#include <fsl_trdc.h> FLW(Flash Logical Window) configuration.

Public Members

uint16_t blockCount
Block count of the Flash Logic Window in 32KByte blocks.

uint32_t arrayBaseAddr
Flash array base address of the Flash Logical Window.

bool lock
Disable writes to FLW registers.

bool enable
Enable FLW function.

struct _trdc_domain_error
#include <fsl_trdc.h> TRDC domain error definition.

Public Members

trdc_controller_t controller
Which controller captured access violation.

`uint32_t` address
Access address that generated access violation.

`trdc_error_state_t` errorState
Error state.

`trdc_error_attr_t` errorAttr
Error attribute.

`trdc_error_type_t` errorType
Error type.

`uint8_t` errorPort
Error port.

`uint8_t` domainId
Domain ID.

`uint8_t` slaveMemoryIdx
The slave memory index. Only apply when violation in MBC.

`struct _trdc_memory_access_control_config`
`#include <fsl_trdc.h>` Memory access control configuration for MBC/MRC.

Public Members

`uint32_t` nonsecureUsrX
Allow nonsecure user execute access.

`uint32_t` nonsecureUsrW
Allow nonsecure user write access.

`uint32_t` nonsecureUsrR
Allow nonsecure user read access.

`uint32_t` __pad0__
Reserved.

`uint32_t` nonsecurePrivX
Allow nonsecure privilege execute access.

`uint32_t` nonsecurePrivW
Allow nonsecure privilege write access.

`uint32_t` nonsecurePrivR
Allow nonsecure privilege read access.

`uint32_t` __pad1__
Reserved.

`uint32_t` secureUsrX
Allow secure user execute access.

`uint32_t` secureUsrW
Allow secure user write access.

`uint32_t` secureUsrR
Allow secure user read access.

`uint32_t` __pad2__
Reserved.

uint32_t securePrivX
Allownsecure privilege execute access.

uint32_t securePrivW
Allownsecure privilege write access.

uint32_t securePrivR
Allownsecure privilege read access.

uint32_t __pad3__
Reserved.

uint32_t lock
Lock the configuration until next reset, only apply to access control register 0.

struct _trdc_mrc_region_descriptor_config
#include <fsl_trdc.h> The configuration of each region descriptor per domain per MRC instance.

Public Members

uint8_t memoryAccessControlSelect
Select one of the 8 access control policies for this region, for access cotrol policies see `trdc_memory_access_control_config_t`.

uint32_t startAddr
Physical start address.

bool valid
Lock the register.

bool nseEnable
Enable non-secure accesses and disable secure accesses.

uint32_t endAddr
Physical start address.

uint8_t mrcIdx
The index of the MRC for this configuration to take effect.

uint8_t domainIdx
The index of the domain for this configuration to take effect.

uint8_t regionIdx
The index of the region for this configuration to take effect.

struct _trdc_mbc_nse_update_config
#include <fsl_trdc.h> The configuration of MBC NSE update.

Public Members

uint32_t __pad0__
Reserved.

uint32_t wordIdx
MBC configuration word index to be updated.

uint32_t __pad1__
Reserved.

uint32_t memorySelect

Bit mask of the selected memory to be updated. `_trdc_MBC_memory`.

uint32_t __pad2__

Reserved.

uint32_t domainSelect

Bit mask of the selected domain to be updated. `_trdc_MBC_domain`.

uint32_t __pad3__

Reserved.

uint32_t autoIncrement

Whether to increment the word index after current word is updated using this configuration.

struct `_trdc_mbc_memory_block_config`

`#include <fsl_trdc.h>` The configuration of each memory block per domain per MBC instance.

Public Members

uint32_t memoryAccessControlSelect

Select one of the 8 access control policies for this memory block, for access control policies see `trdc_memory_access_control_config_t`.

uint32_t nseEnable

Enable non-secure accesses and disable secure accesses.

uint32_t mbcIdx

The index of the MBC for this configuration to take effect.

uint32_t domainIdx

The index of the domain for this configuration to take effect.

uint32_t slaveMemoryIdx

The index of the slave memory for this configuration to take effect.

uint32_t memoryBlockIdx

The index of the memory block for this configuration to take effect.

2.63 Trdc_core

typedef struct `_TRDC_General_Type` TRDC_General_Type

TRDC general configuration register definition.

typedef struct `_TRDC_FLW_Type` TRDC_FLW_Type

TRDC flash logical control register definition.

typedef struct `_TRDC_DomainError_Type` TRDC_DomainError_Type

TRDC domain error register definition.

typedef struct `_TRDC_DomainAssignment_Type` TRDC_DomainAssignment_Type

TRDC master domain assignment register definition.

typedef struct `_TRDC_MBC_Type` TRDC_MBC_Type

TRDC MBC control register definition.

```
typedef struct _TRDC_MRC_Type TRDC_MRC_Type
    TRDC MRC control register definition. MRC_DOM0_RGD_W[region][word].
TRDC_GENERAL_BASE(base)
    TRDC base address convert macro.
TRDC_FLW_BASE(base)
TRDC_DOMAIN_ERROR_BASE(base)
TRDC_DOMAIN_ASSIGNMENT_BASE(base)
TRDC_MBC_BASE(base, instance)
TRDC_MRC_BASE(base, instance)
struct _TRDC_General_Type
    #include <fsl_trdc_core.h> TRDC general configuration register definition.
```

Public Members

```
__IO uint32_t TRDC_CR
    TRDC Register, offset: 0x0
__I uint32_t TRDC_HWCFG0
    TRDC Hardware Configuration Register 0, offset: 0xF0
__I uint32_t TRDC_HWCFG1
    TRDC Hardware Configuration Register 1, offset: 0xF4
__I uint32_t TRDC_HWCFG2
    TRDC Hardware Configuration Register 2, offset: 0xF8
__I uint32_t TRDC_HWCFG3
    TRDC Hardware Configuration Register 3, offset: 0xFC
__I uint8_t DACFG [8]
    Domain Assignment Configuration Register, array offset: 0x100, array step: 0x1
__IO uint32_t TRDC_IDAU_CR
    TRDC IDAU Control Register, offset: 0x1C0
struct _TRDC_FLW_Type
    #include <fsl_trdc_core.h> TRDC flash logical control register definition.
```

Public Members

```
__IO uint32_t TRDC_FLW_CTL
    TRDC FLW Control, offset: 0x1E0
__I uint32_t TRDC_FLW_PBASE
    TRDC FLW Physical Base, offset: 0x1E4
__IO uint32_t TRDC_FLW_ABASE
    TRDC FLW Array Base, offset: 0x1E8
__IO uint32_t TRDC_FLW_BCNT
    TRDC FLW Block Count, offset: 0x1EC
struct _TRDC_DomainError_Type
    #include <fsl_trdc_core.h> TRDC domain error register definition.
```

Public Members

`__IO uint32_t TRDC_FDID`
TRDC Fault Domain ID, offset: 0x1FC

`__I uint32_t TRDC_DERRLOC [16]`
TRDC Domain Error Location Register, array offset: 0x200, array step: 0x4

`struct TRDC_DomainAssignment_Type`
#include <fsl_trdc_core.h> TRDC master domain assignment register definition.

Public Members

`__IO uint32_t PID [8]`
Process Identifier, array offset: 0x700, array step: 0x4

`struct TRDC_MBC_Type`
#include <fsl_trdc_core.h> TRDC MBC control register definition.

Public Members

`__I uint32_t MBC_MEM_GLB_CFG [4]`
MBC Global Configuration Register, array offset: 0x10000, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_NSE_BLK_INDEX`
MBC NonSecure Enable Block Index, array offset: 0x10010, array step: 0x2000

`__O uint32_t MBC_NSE_BLK_SET`
MBC NonSecure Enable Block Set, array offset: 0x10014, array step: 0x2000

`__O uint32_t MBC_NSE_BLK_CLR`
MBC NonSecure Enable Block Clear, array offset: 0x10018, array step: 0x2000

`__O uint32_t MBC_NSE_BLK_CLR_ALL`
MBC NonSecure Enable Block Clear All, array offset: 0x1001C, array step: 0x2000

`__IO uint32_t MBC_MEMN_GLBAC [8]`
MBC Global Access Control, array offset: 0x10020, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_DOM0_MEM0_BLK_CFG_W [64]`
MBC Memory Block Configuration Word, array offset: 0x10040, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_DOM0_MEM0_BLK_NSE_W [16]`
MBC Memory Block NonSecure Enable Word, array offset: 0x10140, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_DOM0_MEM1_BLK_CFG_W [8]`
MBC Memory Block Configuration Word, array offset: 0x10180, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_DOM0_MEM1_BLK_NSE_W [2]`
MBC Memory Block NonSecure Enable Word, array offset: 0x101A0, array step: index*0x2000, index2*0x4

`__IO uint32_t MBC_DOM0_MEM2_BLK_CFG_W [8]`
MBC Memory Block Configuration Word, array offset: 0x101A8, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM0_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x101D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM0_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x101F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x103D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM1_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x103F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10440, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10540, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10580, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105A0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM2_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x105D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM2_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x105F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10640, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10740, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10780, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x107D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM3_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x107F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10980, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM4_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x109D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM4_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x109F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BC8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10BD0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM5_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10BF0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10C40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM6_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10D40, array step: index*0x2000, index2*0x4

- __IO uint32_t MBC_DOM6_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10D80, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM6_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DA0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM6_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DA8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM6_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DC8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM6_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10DD0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM6_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10DF0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x10E40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x10F40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10F80, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FA0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FA8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FC8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x10FD0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM7_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x10FF0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM8_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11040, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM8_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11140, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11180, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x111D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM8_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x111F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11240, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11340, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11380, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x113D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM9_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x113F0, array step: index*0x2000, index2*0x4

- __IO uint32_t MBC_DOM10_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11440, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11540, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11580, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115A0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115A8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115C8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x115D0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM10_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x115F0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11640, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11740, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11780, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117A0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117A8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117C8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM11_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x117D0, array step: index*0x2000, index2*0x4

- ___IO uint32_t MBC_DOM11_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x117F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11840, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11940, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11980, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119A0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119A8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119C8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x119D0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM12_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x119F0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11A40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11B40, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11B80, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BA0, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BA8, array step: index*0x2000, index2*0x4
- ___IO uint32_t MBC_DOM13_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BC8, array step: index*0x2000, index2*0x4

- __IO uint32_t MBC_DOM13_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11BD0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM13_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11BF0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11C40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11D40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11D80, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DA0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11DA8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM2_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DC8, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM3_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11DD0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM14_MEM3_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11DF0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM15_MEM0_BLK_CFG_W [64]
MBC Memory Block Configuration Word, array offset: 0x11E40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM15_MEM0_BLK_NSE_W [16]
MBC Memory Block NonSecure Enable Word, array offset: 0x11F40, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM15_MEM1_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11F80, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM15_MEM1_BLK_NSE_W [2]
MBC Memory Block NonSecure Enable Word, array offset: 0x11FA0, array step: index*0x2000, index2*0x4
- __IO uint32_t MBC_DOM15_MEM2_BLK_CFG_W [8]
MBC Memory Block Configuration Word, array offset: 0x11FA8, array step: index*0x2000, index2*0x4

```

__IO uint32_t MBC_DOM15_MEM2_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FC8, array step: in-
    dex*0x2000, index2*0x4
__IO uint32_t MBC_DOM15_MEM3_BLK_CFG_W [8]
    MBC Memory Block Configuration Word, array offset: 0x11FD0, array step: in-
    dex*0x2000, index2*0x4
__IO uint32_t MBC_DOM15_MEM3_BLK_NSE_W [2]
    MBC Memory Block NonSecure Enable Word, array offset: 0x11FF0, array step: in-
    dex*0x2000, index2*0x4

```

```
struct _TRDC_MRC_Type
```

```

#include <fsl_trdc_core.h> TRDC MRC control register definition.
MRC_DOM0_RGD_W[region][word].

```

Public Members

```

__I uint32_t MRC_GLBCFG
    MRC Global Configuration Register, array offset: 0x14000, array step: 0x1000
__IO uint32_t MRC_NSE_RGN_INDIRECT
    MRC NonSecure Enable Region Indirect, array offset: 0x14010, array step: 0x1000
__O uint32_t MRC_NSE_RGN_SET
    MRC NonSecure Enable Region Set, array offset: 0x14014, array step: 0x1000
__O uint32_t MRC_NSE_RGN_CLR
    MRC NonSecure Enable Region Clear, array offset: 0x14018, array step: 0x1000
__O uint32_t MRC_NSE_RGN_CLR_ALL
    MRC NonSecure Enable Region Clear All, array offset: 0x1401C, array step: 0x1000
__IO uint32_t MRC_GLBAC [8]
    MRC Global Access Control, array offset: 0x14020, array step: index*0x1000, in-
    dex2*0x4
__IO uint32_t MRC_DOM0_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14040,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM0_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x140C0, array step: 0x1000
__IO uint32_t MRC_DOM1_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14140,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM1_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x141C0, array step: 0x1000
__IO uint32_t MRC_DOM2_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14240,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM2_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x142C0, array step: 0x1000
__IO uint32_t MRC_DOM3_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14340,
    array step: index*0x1000, index2*0x8, index3*0x4

```

___IO uint32_t MRC_DOM3_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x143C0, array step: 0x1000

___IO uint32_t MRC_DOM4_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14440, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM4_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x144C0, array step: 0x1000

___IO uint32_t MRC_DOM5_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14540, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM5_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x145C0, array step: 0x1000

___IO uint32_t MRC_DOM6_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14640, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM6_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x146C0, array step: 0x1000

___IO uint32_t MRC_DOM7_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14740, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM7_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x147C0, array step: 0x1000

___IO uint32_t MRC_DOM8_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14840, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM8_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x148C0, array step: 0x1000

___IO uint32_t MRC_DOM9_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14940, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM9_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x149C0, array step: 0x1000

___IO uint32_t MRC_DOM10_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14A40, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM10_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14AC0, array step: 0x1000

___IO uint32_t MRC_DOM11_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14B40, array step: index*0x1000, index2*0x8, index3*0x4

___IO uint32_t MRC_DOM11_RGD_NSE
MRC Region Descriptor NonSecure Enable, array offset: 0x14BC0, array step: 0x1000

___IO uint32_t MRC_DOM12_RGD_W [16][2]
MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14C40, array step: index*0x1000, index2*0x8, index3*0x4

```

__IO uint32_t MRC_DOM12_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14CC0, array step: 0x1000
__IO uint32_t MRC_DOM13_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14D40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM13_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14DC0, array step: 0x1000
__IO uint32_t MRC_DOM14_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14E40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM14_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14EC0, array step: 0x1000
__IO uint32_t MRC_DOM15_RGD_W [16][2]
    MRC Region Descriptor Word 0..MRC Region Descriptor Word 1, array offset: 0x14F40,
    array step: index*0x1000, index2*0x8, index3*0x4
__IO uint32_t MRC_DOM15_RGD_NSE
    MRC Region Descriptor NonSecure Enable, array offset: 0x14FC0, array step: 0x1000
struct MBC_DERR

```

Public Members

```

__I uint32_t W0
    MBC Domain Error Word0 Register, array offset: 0x400, array step: 0x10
__I uint32_t W1
    MBC Domain Error Word1 Register, array offset: 0x404, array step: 0x10
__O uint32_t W3
    MBC Domain Error Word3 Register, array offset: 0x40C, array step: 0x10
struct MRC_DERR

```

Public Members

```

__I uint32_t W0
    MRC Domain Error Word0 Register, array offset: 0x480, array step: 0x10
__I uint32_t W1
    MRC Domain Error Word1 Register, array offset: 0x484, array step: 0x10
__O uint32_t W3
    MRC Domain Error Word3 Register, array offset: 0x48C, array step: 0x10
union __unnamed79__

```

Public Members

```

struct _TRDC_DomainAssignment_Type MDA_DFMT0[8]
struct _TRDC_DomainAssignment_Type MDA_DFMT1[8]
struct MDA_DFMT0

```

Public Members

__IO uint32_t MDA_W_DFMT0 [8]

DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20, index2*0x4

struct MDA_DFMT1

Public Members

__IO uint32_t MDA_W_DFMT1 [1]

DAC Master Domain Assignment Register, array offset: 0x800, array step: index*0x20, index2*0x4

2.64 Trdc_soc

FSL_TRDC_SOC_DRIVER_VERSION

Driver version 2.0.0.

TRDC_MBC_MEM_GLBCFG_NBLKS_MASK

TRDC_MBC_MEM_GLBCFG_SIZE_LOG2_MASK

TRDC_MBC_MEM_GLBCFG_SIZE_LOG2_SHIFT

TRDC_MBC_NSE_BLK_CLR_ALL_MEMSEL(x)

TRDC_MBC_NSE_BLK_CLR_ALL_DID_SEL(x)

FSL_FEATURE_TRDC_DOMAIN_COUNT

TRDC feature.

TRDC_MBC_COUNT

TRDC base address convert macro.

TRDC_MBC_OFFSET(x)

TRDC_MBC_ARRAY_STEP

FSL_COMPONENT_ID

2.65 UTICK: MictoTick Timer Driver

void UTICK_Init(UTICK_Type *base)

Initializes an UTICK by turning its bus clock on.

void UTICK_Deinit(UTICK_Type *base)

Deinitializes a UTICK instance.

This function shuts down Utick bus clock

Parameters

- base – UTICK peripheral base address.


```
uint32_t UTICK_GetStatusFlags(UTICK_Type *base)
```

Get Status Flags.

This returns the status flag

Parameters

- base – UTICK peripheral base address.

Returns

status register value

```
void UTICK_ClearStatusFlags(UTICK_Type *base)
```

Clear Status Interrupt Flags.

This clears intr status flag

Parameters

- base – UTICK peripheral base address.

Returns

none

```
void UTICK_SetTick(UTICK_Type *base, utick_mode_t mode, uint32_t count, utick_callback_t cb)
```

Starts UTICK.

This function starts a repeat/onetime countdown with an optional callback

Parameters

- base – UTICK peripheral base address.
- mode – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- count – UTICK timer mode (ie kUTICK_onetime or kUTICK_repeat)
- cb – UTICK callback (can be left as NULL if none, otherwise should be a void func(void))

Returns

none

```
void UTICK_HandleIRQ(UTICK_Type *base, utick_callback_t cb)
```

UTICK Interrupt Service Handler.

This function handles the interrupt and refers to the callback array in the driver to callback user (as per request in UTICK_SetTick()). if no user callback is scheduled, the interrupt will simply be cleared.

Parameters

- base – UTICK peripheral base address.
- cb – callback scheduled for this instance of UTICK

Returns

none

```
FSL_UTICK_DRIVER_VERSION
```

UTICK driver version 2.0.5.

```
enum _utick_mode
```

UTICK timer operational mode.

Values:

```
enumerator kUTICK_Onetime
    Trigger once
enumerator kUTICK_Repeat
    Trigger repeatedly
typedef enum _utick_mode utick_mode_t
    UTICK timer operational mode.
typedef void (*utick_callback_t)(void)
    UTICK callback function.
```

2.66 WAKETIMER: WAKETIMER Driver

`void WAKETIMER_Init(WAKETIMER_Type *base, const waketimer_config_t *config)`
Initializes an WAKETIMER.

This function initializes the WAKETIMER.

Parameters

- `base` – WAKETIMER peripheral base address.
- `config` – Pointer to the user configuration structure.

`void WAKETIMER_Deinit(WAKETIMER_Type *base)`
Deinitializes a WAKETIMER instance.

This function deinitialize the WAKETIMER.

Parameters

- `base` – WAKETIMER peripheral base address.

`void WAKETIMER_GetDefaultConfig(waketimer_config_t *config)`
Fills in the WAKETIMER configuration structure with the default settings.

The default values are:

```
config->enableInterrupt = true;
config->enableOSCDivide = true;
config->callback         = NULL;
```

Parameters

- `config` – Pointer to the user configuration structure.

`void WAKETIMER_EnableInterrupts(WAKETIMER_Type *base, uint32_t mask)`
Enables the selected WAKETIMER interrupts.

Parameters

- `base` – WAKETIMER peripheral base address
- `mask` – Mask value for interrupt events. See to `_waketimer_interrupt_enable`

`void WAKETIMER_DisableInterrupts(WAKETIMER_Type *base, uint32_t mask)`
Enables the selected WAKETIMER interrupts.

Parameters

- `base` – WAKETIMER peripheral base address

- `mask` – Mask value for interrupt events. See to `_waketimer_interrupt_enable`

`void WAKETIMER_ClearStatusFlags(WAKETIMER_Type *base, uint32_t mask)`

Clear Status Interrupt Flag.

This clears intrrupt status flag. Currently, only match interrupt flag can be cleared.

Parameters

- `base` – WAKETIMER peripheral base address.
- `mask` – Mask value for flags to be cleared. See to `_waketimer_status_flags`.

Returns

none

`void WAKETIMER_SetCallback(WAKETIMER_Type *base, waketimer_callback_t callback)`

Receive notification when waketime countdown.

If the interrupt for the waketime countdown is enabled, then a callback can be registered which will be invoked when the event is triggered

Parameters

- `base` – WAKETIMER peripheral base address
- `callback` – Function to invoke when the event is triggered

`static inline void WAKETIMER_HaltTimer(WAKETIMER_Type *base)`

Halt and clear timer counter.

This halt and clear timer counter.

Parameters

- `base` – WAKETIMER peripheral base address.

Returns

none

`static inline void WAKETIMER_StartTimer(WAKETIMER_Type *base, uint32_t value)`

Set timer counter.

This set the timer counter and start the timer countdown.

Parameters

- `base` – WAKETIMER peripheral base address.
- `value` – countdown value.

Returns

none

`uint32_t WAKETIMER_GetCurrentTimerValue(WAKETIMER_Type *base)`

Get current timer count value from WAKETIMER.

This function will get a decimal timer count value. The RAW value of timer count is gray code format, will be translated to decimal data internally.

Parameters

- `base` – WAKETIMER peripheral base address.

Returns

Value of WAKETIMER which will be formatted to decimal value.

`FSL_WAKETIMER_DRIVER_VERSION`

WAKETIMER driver version.

enum `_waketimer_status_flags`
WAKETIMER status flags.

Values:

enumerator `kWAKETIMER_WakeFlag`
Wake Timer Status Flag, sets wake timer has timed out.

enum `_waketimer_interrupt_enable`
Define interrupt switchers of the module.

Values:

enumerator `kWAKETIMER_WakeInterruptEnable`
Generate interrupt requests when WAKE_FLAG is asserted.

typedef void (`*waketimer_callback_t`)(void)
waketimer callback function.

typedef struct `_waketimer_config` `waketimer_config_t`
WAKETIMER configuration structure.

This structure holds the configuration settings for the WAKETIMER peripheral. To initialize this structure to reasonable defaults, call the `WAKETIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

struct `_waketimer_config`
`#include <fsl_waketimer.h>` WAKETIMER configuration structure.

This structure holds the configuration settings for the WAKETIMER peripheral. To initialize this structure to reasonable defaults, call the `WAKETIMER_GetDefaultConfig()` function and pass a pointer to the configuration structure instance.

The configuration structure can be made constant so as to reside in flash.

Public Members

bool `enableOSCDivide`
true: Enable OSC Divide. false: Disable OSC Divide.

bool `enableInterrupt`
true: Enable interrupt. false: Disable interrupt.

`waketimer_callback_t` `callback`
timer countdown callback.

2.67 WUU: Wakeup Unit driver

void `WUU_SetExternalWakeUpPinsConfig(WUU_Type *base, uint8_t pinIndex, const wuu_external_wakeup_pin_config_t *config)`

Enables and Configs External WakeUp Pins.

This function enables/disables the external pin as wakeup input. What's more this function configs pins options, including edge detection wakeup event and operate mode.

Parameters

- `base` – MUU peripheral base address.

- `pinIndex` – The index of the external input pin. See Reference Manual for the details.
- `config` – Pointer to `wuu_external_wakeup_pin_config_t` structure.

```
void WUU_ClearExternalWakeupPinsConfig(WUU_Type *base, uint8_t pinIndex)
```

Disable and clear external wakeup pin settings.

Parameters

- `base` – MUU peripheral base address.
- `pinIndex` – The index of the external input pin.

```
static inline uint32_t WUU_GetExternalWakeUpPinsFlag(WUU_Type *base)
```

Gets External Wakeup pin flags.

This function return the external wakeup pin flags.

Parameters

- `base` – WUU peripheral base address.

Returns

Wakeup flags for all external wakeup pins.

```
static inline void WUU_ClearExternalWakeUpPinsFlag(WUU_Type *base, uint32_t mask)
```

Clears External WakeUp Pin flags.

This function clears external wakeup pins flags based on the mask.

Parameters

- `base` – WUU peripheral base address.
- `mask` – The mask of Wakeup pin index to be cleared.

```
void WUU_SetInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                         wuu_internal_wakeup_module_event_t event)
```

Config Internal modules' event as the wake up sources.

This function configs the internal modules event as the wake up sources.

Parameters

- `base` – WUU peripheral base address.
- `moduleIndex` – The selected internal module. See the Reference Manual for the details.
- `event` – Select interrupt or DMA/Trigger of the internal module as the wake up source.

```
void WUU_ClearInternalWakeUpModulesConfig(WUU_Type *base, uint8_t moduleIndex,  
                                           wuu_internal_wakeup_module_event_t event)
```

Disable an on-chip internal modules' event as the wakeup sources.

Parameters

- `base` – WUU peripheral base address.
- `moduleIndex` – The selected internal module. See the Reference Manual for the details.
- `event` – The event(interrupt or DMA/trigger) of the internal module to disable.

```
void WUU_SetPinFilterConfig(WUU_Type *base, uint8_t filterIndex, const
                           wuu_pin_filter_config_t *config)
```

Configs and Enables Pin filters.

This function configs Pin filter, including pin select, filter operate mode filter wakeup event and filter edge detection.

Parameters

- base – WUU peripheral base address.
- filterIndex – The index of the pin filter.
- config – Pointer to `wuu_pin_filter_config_t` structure.

```
bool WUU_GetPinFilterFlag(WUU_Type *base, uint8_t filterIndex)
```

Gets the pin filter configuration.

This function gets the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index, which starts from 1.

Returns

True if the flag is a source of the existing low-leakage power mode.

```
void WUU_ClearPinFilterFlag(WUU_Type *base, uint8_t filterIndex)
```

Clears the pin filter configuration.

This function clears the pin filter flag.

Parameters

- base – WUU peripheral base address.
- filterIndex – A pin filter index to clear the flag, starting from 1.

```
bool WUU_GetExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)
```

Gets the external wakeup source flag.

This function checks the external pin flag to detect whether the MCU is woken up by the specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0. return True if the specific pin is a wakeup source.

```
void WUU_ClearExternalWakeupPinFlag(WUU_Type *base, uint32_t pinIndex)
```

Clears the external wakeup source flag.

This function clears the external wakeup source flag for a specific pin.

param base WUU peripheral base address. param pinIndex A pin index, which starts from 0.

```
FSL_WUU_DRIVER_VERSION
```

Defines WUU driver version 2.4.0.

```
enum _wuu_external_pin_edge_detection
```

External WakeUp pin edge detection enumeration.

Values:

```
enumerator kWUU_ExternalPinDisable
```

External input Pin disabled as wake up input.

enumerator kWUU_ExternalPinRisingEdge
External input Pin enabled with the rising edge detection.

enumerator kWUU_ExternalPinFallingEdge
External input Pin enabled with the falling edge detection.

enumerator kWUU_ExternalPinAnyEdge
External input Pin enabled with any change detection.

enum _wuu_external_wakeup_pin_event
External input wake up pin event enumeration.

Values:

enumerator kWUU_ExternalPinInterrupt
External input Pin configured as interrupt.

enumerator kWUU_ExternalPinDMARequest
External input Pin configured as DMA request.

enumerator kWUU_ExternalPinTriggerEvent
External input Pin configured as Trigger event.

enum _wuu_external_wakeup_pin_mode
External input wake up pin mode enumeration.

Values:

enumerator kWUU_ExternalPinActiveDSPD
External input Pin is active only during Deep Sleep/Power Down Mode.

enumerator kWUU_ExternalPinActiveAlways
External input Pin is active during all power modes.

enum _wuu_internal_wakeup_module_event
Internal module wake up event enumeration.

Values:

enumerator kWUU_InternalModuleInterrupt
Internal modules' interrupt as a wakeup source.

enumerator kWUU_InternalModuleDMATrigger
Internal modules' DMA/Trigger as a wakeup source.

enum _wuu_filter_edge
Pin filter edge enumeration.

Values:

enumerator kWUU_FilterDisabled
Filter disabled.

enumerator kWUU_FilterPosedgeEnable
Filter posedge detect enabled.

enumerator kWUU_FilterNegedgeEnable
Filter negedge detect enabled.

enumerator kWUU_FilterAnyEdge
Filter any edge detect enabled.

enum `_wuu_filter_event`

Pin Filter event enumeration.

Values:

enumerator `kWUU_FilterInterrupt`

Filter output configured as interrupt.

enumerator `kWUU_FilterDMARequest`

Filter output configured as DMA request.

enumerator `kWUU_FilterTriggerEvent`

Filter output configured as Trigger event.

enum `_wuu_filter_mode`

Pin filter mode enumeration.

Values:

enumerator `kWUU_FilterActiveDSPD`

External input pin filter is active only during Deep Sleep/Power Down Mode.

enumerator `kWUU_FilterActiveAlways`

External input Pin filter is active during all power modes.

typedef enum `_wuu_external_pin_edge_detection` `wuu_external_pin_edge_detection_t`

External WakeUp pin edge detection enumeration.

typedef enum `_wuu_external_wakeup_pin_event` `wuu_external_wakeup_pin_event_t`

External input wake up pin event enumeration.

typedef enum `_wuu_external_wakeup_pin_mode` `wuu_external_wakeup_pin_mode_t`

External input wake up pin mode enumeration.

typedef enum `_wuu_internal_wakeup_module_event` `wuu_internal_wakeup_module_event_t`

Internal module wake up event enumeration.

typedef enum `_wuu_filter_edge` `wuu_filter_edge_t`

Pin filter edge enumeration.

typedef enum `_wuu_filter_event` `wuu_filter_event_t`

Pin Filter event enumeration.

typedef enum `_wuu_filter_mode` `wuu_filter_mode_t`

Pin filter mode enumeration.

typedef struct `_wuu_external_wakeup_pin_config` `wuu_external_wakeup_pin_config_t`

External WakeUp pin configuration.

typedef struct `_wuu_pin_filter_config` `wuu_pin_filter_config_t`

Pin Filter configuration.

struct `_wuu_external_wakeup_pin_config`

`#include <fsl_wuu.h>` External WakeUp pin configuration.

Public Members

`wuu_external_pin_edge_detection_t` edge

External Input pin edge detection.

`wuu_external_wakeup_pin_event_t` event

External Input wakeup Pin event

wuu_external_wakeup_pin_mode_t mode
External Input wakeup Pin operate mode.

struct *_wuu_pin_filter_config*
#include <fsl_wuu.h> Pin Filter configuration.

Public Members

uint32_t pinIndex
The index of wakeup pin to be muxxed into filter.

wuu_filter_edge_t edge
The edge of the pin digital filter.

wuu_filter_event_t event
The event of the filter output.

wuu_filter_mode_t mode
The mode of the filter operate.

2.68 WWDT: Windowed Watchdog Timer Driver

void WWDT_GetDefaultConfig(*wwdt_config_t* *config)

Initializes WWDT configure structure.

This function initializes the WWDT configure structure to default value. The default value are:

```
config->enableWwdt = true;
config->enableWatchdogReset = false;
config->enableWatchdogProtect = false;
config->enableLockOscillator = false;
config->windowValue = 0xFFFFFU;
config->timeoutValue = 0xFFFFFU;
config->warningValue = 0;
```

See also:

wwdt_config_t

Parameters

- config – Pointer to WWDT config structure.

void WWDT_Init(WWDT_Type *base, const *wwdt_config_t* *config)

Initializes the WWDT.

This function initializes the WWDT. When called, the WWDT runs according to the configuration.

Example:

```
wwdt_config_t config;
WWDT_GetDefaultConfig(&config);
config.timeoutValue = 0x7fU;
WWDT_Init(wwdt_base,&config);
```

Parameters

- base – WWDT peripheral base address
- config – The configuration of WWDT

void WWDT_Deinit(WWDT_Type *base)

Shuts down the WWDT.

This function shuts down the WWDT.

Parameters

- base – WWDT peripheral base address

static inline void WWDT_Enable(WWDT_Type *base)

Enables the WWDT module.

This function write value into WWDT_MOD register to enable the WWDT, it is a write-once bit; once this bit is set to one and a watchdog feed is performed, the watchdog timer will run permanently.

Parameters

- base – WWDT peripheral base address

static inline void WWDT_Disable(WWDT_Type *base)

Disables the WWDT module.

Deprecated:

Do not use this function. It will be deleted in next release version, for once the bit field of W DEN written with a 1, it can not be re-written with a 0.

This function write value into WWDT_MOD register to disable the WWDT.

Parameters

- base – WWDT peripheral base address

static inline uint32_t WWDT_GetStatusFlags(WWDT_Type *base)

Gets all WWDT status flags.

This function gets all status flags.

Example for getting Timeout Flag:

```
uint32_t status;  
status = WWDT_GetStatusFlags(wwdt_base) & kWWDT_TimeoutFlag;
```

Parameters

- base – WWDT peripheral base address

Returns

The status flags. This is the logical OR of members of the enumeration `_wwdt_status_flags_t`

void WWDT_ClearStatusFlags(WWDT_Type *base, uint32_t mask)

Clear WWDT flag.

This function clears WWDT status flag.

Example for clearing warning flag:

```
WWDT_ClearStatusFlags(wwdt_base, kWWDT_WarningFlag);
```

Parameters

- base – WWDT peripheral base address
- mask – The status flags to clear. This is a logical OR of members of the enumeration `_wwdt_status_flags_t`

```
static inline void WWDT_SetWarningValue(WWDT_Type *base, uint32_t warningValue)
```

Set the WWDT warning value.

The `WDWARNINT` register determines the watchdog timer counter value that will generate a watchdog interrupt. When the watchdog timer counter is no longer greater than the value defined by `WARNINT`, an interrupt will be generated after the subsequent `WDCLK`.

Parameters

- base – WWDT peripheral base address
- warningValue – WWDT warning value.

```
static inline void WWDT_SetTimeoutValue(WWDT_Type *base, uint32_t timeoutCount)
```

Set the WWDT timeout value.

This function sets the timeout value. Every time a feed sequence occurs the value in the TC register is loaded into the Watchdog timer. Writing a value below `0xFF` will cause `0xFF` to be loaded into the TC register. Thus the minimum time-out interval is `TWDCLK*256*4`. If `enableWatchdogProtect` flag is true in `wwdt_config_t` config structure, any attempt to change the timeout value before the watchdog counter is below the warning and window values will cause a watchdog reset and set the `WDTOF` flag.

Parameters

- base – WWDT peripheral base address
- timeoutCount – WWDT timeout value, count of WWDT clock tick.

```
static inline void WWDT_SetWindowValue(WWDT_Type *base, uint32_t windowValue)
```

Sets the WWDT window value.

The `WINDOW` register determines the highest TV value allowed when a watchdog feed is performed. If a feed sequence occurs when timer value is greater than the value in `WINDOW`, a watchdog event will occur. To disable windowing, set `windowValue` to `0xFFFFFFFF` (maximum possible timer value) so windowing is not in effect.

Parameters

- base – WWDT peripheral base address
- windowValue – WWDT window value.

```
void WWDT_Refresh(WWDT_Type *base)
```

Refreshes the WWDT timer.

This function feeds the WWDT. This function should be called before WWDT timer is in timeout. Otherwise, a reset is asserted.

Parameters

- base – WWDT peripheral base address

```
FSL_WWDT_DRIVER_VERSION
```

Defines WWDT driver version.

```
WWDT_FIRST_WORD_OF_REFRESH
```

First word of refresh sequence

```
WWDT_SECOND_WORD_OF_REFRESH
```

Second word of refresh sequence

enum `_wwdt_status_flags_t`

WWDT status flags.

This structure contains the WWDT status flags for use in the WWDT functions.

Values:

enumerator `kWWDT_TimeoutFlag`

Time-out flag, set when the timer times out

enumerator `kWWDT_WarningFlag`

Warning interrupt flag, set when timer is below the value `WDWARNINT`

typedef struct `_wwdt_config` `wwdt_config_t`

Describes WWDT configuration structure.

struct `_wwdt_config`

#include `<fsl_wwdt.h>` Describes WWDT configuration structure.

Public Members

bool `enableWwdt`

Enables or disables WWDT

bool `enableWatchdogReset`

true: Watchdog timeout will cause a chip reset false: Watchdog timeout will not cause a chip reset

bool `enableWatchdogProtect`

true: Enable watchdog protect i.e timeout value can only be changed after counter is below warning & window values false: Disable watchdog protect; timeout value can be changed at any time

bool `enableLockOscillator`

true: Disabling or powering down the watchdog oscillator is prevented Once set, this bit can only be cleared by a reset false: Do not lock oscillator

uint32_t `windowValue`

Window value, set this to `0xFFFFFFFF` if windowing is not in effect

uint32_t `timeoutValue`

Timeout value

uint32_t `warningValue`

Watchdog time counter value that will generate a warning interrupt. Set this to 0 for no warning

uint32_t `clockFreq_Hz`

Watchdog clock source frequency.

Chapter 3

Middleware

3.1 Boot

3.1.1 MCUXpresso SDK : mcuxsdk-middleware-mcuboot_opensource

Overview

This repository is a fork of MCUboot (<https://github.com/mcu-tools/mcuboot>) for MCUXpresso SDK delivery and it contains the components officially provided in NXP MCUXpresso SDK. This repository is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository (mcuxsdk-manifests) for the complete delivery of MCUXpresso SDK.

Documentation

Overall details can be reviewed here: [MCUXpresso SDK Online Documentation](#)

Visit [MCUboot - Documentation](#) to review details on the contents in this sub-repo.

Setup

Instructions on how to install the MCUXpresso SDK provided from GitHub via west manifest [Getting Started with SDK - Detailed Installation Instructions](#)

Contribution


Contributions are not currently accepted. If the intended contribution is not related to NXP specific code, consider contributing directly to the upstream MCUboot project. Once this MCUboot fork is synchronized with the upstream project, such contributions will end up here as well. If the intended contribution is a bugfix or improvement for NXP porting layer or for code added or modified by NXP, please open an issue or contact NXP support.

NXP Fork

This fork of MCUboot contains specific modifications and enhancements for NXP MCUXpresso SDK integration.

See *changelog* for details.

3.1.2 MCUboot



This is MCUboot version 2.2.0

MCUboot is a secure bootloader for 32-bits microcontrollers. It defines a common infrastructure for the bootloader and the system flash layout on microcontroller systems, and provides a secure bootloader that enables easy software upgrade.

MCUboot is not dependent on any specific operating system and hardware and relies on hardware porting layers from the operating system it works with. Currently, MCUboot works with the following operating systems and SoCs:

- [Zephyr](#)
- [Apache Mynewt](#)
- [Apache NuttX](#)
- [RIOT](#)
- [Mbed OS](#)
- [Espressif](#)
- [Cypress/Infineon](#)

RIOT is supported only as a boot target. We will accept any new port contributed by the community once it is good enough.

MCUboot How-tos

See the following pages for instructions on using MCUboot with different operating systems and SoCs:

- [Zephyr](#)
- [Apache Mynewt](#)
- [Apache NuttX](#)
- [RIOT](#)
- [Mbed OS](#)
- [Espressif](#)
- [Cypress/Infineon](#)

There are also instructions for the *Simulator*.

Roadmap

The issues being planned and worked on are tracked using GitHub issues. To give your input, visit [MCUboot GitHub Issues](#).

Source files

You can find additional documentation on the bootloader in the source files. For more information, use the following links:

- [boot/bootutil](#) - The core of the bootloader itself.
- [boot/boot_serial](#) - Support for serial upgrade within the bootloader itself.
- [boot/zephyr](#) - Port of the bootloader to Zephyr.
- [boot/mynewt](#) - Bootloader application for Apache Mynewt.
- [boot/nuttX](#) - Bootloader application and port of MCUboot interfaces for Apache NuttX.
- [boot/mbed](#) - Port of the bootloader to Mbed OS.
- [boot/espressif](#) - Bootloader application and MCUboot port for Espressif SoCs.
- [boot/cypress](#) - Bootloader application and MCUboot port for Cypress/Infineon SoCs.
- [imgtool](#) - A tool to securely sign firmware images for booting by MCUboot.
- [sim](#) - A bootloader simulator for testing and regression.

Joining the project

Developers are welcome!

Use the following links to join or see more about the project:

- [Our developer mailing list](#)
- [Our Discord channel](#) [Get your invite](#)

3.2 Motor Control

3.2.1 FreeMASTER

Communication Driver User Guide

Introduction

What is FreeMASTER? FreeMASTER is a PC-based application developed by NXP for NXP customers. It is a versatile tool usable as a real-time monitor, visualization tool, and a graphical control panel of embedded applications based on the NXP processing units.

This document describes the embedded-side software driver which implements an interface between the application and the host PC. The interface covers the following communication:

- **Serial** UART communication either over plain RS232 interface or more typically over a USB-to-Serial either external or built in a debugger probe.
- **USB** direct connection to target microcontroller
- **CAN bus**

- **TCP/IP network** wired or WiFi
- **Segger J-Link RTT**
- **JTAG** debug port communication
- ...and all of the above also using a **Zephyr** generic drivers.

The driver also supports so-called “packet-driven BDM” interface which enables a protocol-based communication over a debugging port. The BDM stands for Background Debugging Module and its physical implementation is different on each platform. Some platforms leverage a semi-standard JTAG interface, other platforms provide a custom implementation called BDM. Regardless of the name, this debugging interface enables non-intrusive access to the memory space while the target CPU is running. For basic memory read and write operations, there is no communication driver required on the target when communicating with the host PC. Use this driver to get more advanced FreeMASTER protocol features over the BDM interface. The driver must be configured for the packet-driven BDM mode, in which the host PC uses the debugging interface to write serial command frames directly to the target memory buffer. The same method is then used to read response frames from that memory buffer.

Similar to “packet-driven BDM”, the FreeMASTER also supports a communication over [J-Link RTT](<https://www.segger.com/products/debug-probes/j-link/technology/about-real-time-transfer/>) interface defined by SEGGER Microcontroller GmbH for ARM CortexM-based microcontrollers. This method also uses JTAG physical interface and enables high-speed real time communication to run over the same channel as used for application debugging.

Driver version 3 This document describes version 3 of the FreeMASTER Communication Driver. This version features the implementation of the new Serial Protocol, which significantly extends the features and security of its predecessor. The new protocol internal number is v4 and its specification is available in the documentation accompanying the driver code.

Driver V3 is deployed to modern 32-bit MCU platforms first, so the portfolio of supported platforms is smaller than for the previous V2 versions. It is recommended to keep using the V2 driver for legacy platforms, such as S08, S12, ColdFire, or Power Architecture. Reach out to [FreeMASTER community](#) or to the local NXP representative with requests for more information or to port the V3 driver to legacy MCU devices.

Thanks to a layered approach, the new driver simplifies the porting of the driver to new UART, CAN or networking communication interfaces significantly. Users are encouraged to port the driver to more NXP MCU platforms and contribute the code back to NXP for integration into future releases. Existing code and low-level driver layers may be used as an example when porting to new targets.

Note: Using the FreeMASTER tool and FreeMASTER Communication Driver is only allowed in systems based on NXP microcontroller or microprocessor unit. Use with non-NXP MCU platforms is **not permitted** by the license terms.

Target platforms The driver implementation uses the following abstraction mechanisms which simplify driver porting and supporting new communication modules:

- **General CPU Platform** (see source code in the `src/platforms` directory). The code in this layer is only specific to native data type sizes and CPU architectures (for example; alignment-aware memory copy routines). This driver version brings two generic implementations of 32-bit platforms supporting both little-endian and big-endian architectures. There are also implementations customized for the 56F800E family of digital signal controllers and S12Z MCUs. **Zephyr** is treated as a specific CPU platform as it brings unified user configuration (Kconfig) and generic hardware device drivers. With Zephyr, the transport layer and low-level communication layers described below are configured automatically using Kconfig and Device Tree technologies.

- **Transport Communication Layer** - The Serial, CAN, Networking, PD-BDM, and other methods of transport logic are implemented as a driver layer called FMSTR_TRANSPORT with a uniform API. A support of the Network transport also extends single-client modes of operation which are native for Serial, USB and CAN by a concept of multiple client sessions.
- **Low-level Communication Driver** - Each type of transport further defines a low-level API used to access the physical communication module. For example, the Serial transport defines a character-oriented API implemented by different serial communication modules like UART, LPUART, USART, and also USB-CDC. Similarly, the CAN transport defines a message-oriented API implemented by the FlexCAN or MCAN modules. Moreover, there are multiple different implementations for the same kind of communication peripherals. The difference between the implementation is in the way the low-level hardware registers are accessed. The *mcuxsdk* folder contains implementations which use MCUXpresso SDK drivers. These drivers should be used in applications based on the NXP MCUXpresso SDK. The “ampsdk” drivers target automotive-specific MCUs and their respective SDKs. The “dreg” implementations use a plain C-language access to hardware register addresses which makes it a universal and the most portable solution. In this case, users are encouraged to add more drivers for other communication modules or other respective SDKs and contribute the code back to NXP for integration.

The low-level drivers defined for the Networking transport enable datagram-oriented UDP and stream TCP communication. This implementation is demonstrated using the lwIP software stack but shall be portable to other TCP/IP stacks. It may sound surprisingly, but also the Segger J-Link RTT communication driver is linked to the Networking transport (RTT is stream oriented communication handled similarly to TCP).

Replacing existing drivers For all supported platforms, the driver described in this document replaces the V2 implementation and also older driver implementations that were available separately for individual platforms (PC Master SCI drivers).

Clocks, pins, and peripheral initialization The FreeMASTER communication driver is only responsible for runtime processing of the communication and must be integrated with an user application code to function properly. The user application code is responsible for general initialization of clock sources, pin multiplexers, and peripheral registers related to the communication speed. Such initialization should be done before calling the FMSTR_Init function.

It is recommended to develop the user application using one of the Software Development Kits (SDKs) available from third parties or directly from NXP, such as MCUXpresso SDK, MCUXpresso IDE, and related tools. This approach simplifies the general configuration process significantly.

MCUXpresso SDK The MCUXpresso SDK is a software package provided by NXP which contains the device initialization code, linker files, and software drivers with example applications for the NXP family of MCUs. The MCUXpresso Config Tools may be used to generate the clock-setup and pin-multiplexer setup code suitable for the selected processor.

The MCUXpresso SDK also contains this FreeMASTER communication driver as a “middleware” component which may be downloaded along with the example applications from <https://mcuxpresso.nxp.com/en/welcome>.

MCUXpresso SDK on GitHub The FreeMASTER communication driver is also released as one of the middleware components of the MCUXpresso SDK on the GitHub. This release enables direct integration of the FreeMASTER source code Git repository into a target applications including Zephyr applications.

Related links:

- [The official FreeMASTER middleware repository.](#)

- [Online version of this document](#)

FreeMASTER in Zephyr The FreeMASTER middleware repository can be used with MCUXpresso SDK as well as a Zephyr module. Zephyr-specific samples which include examples of Kconfig and Device Tree configurations for Serial, USB and Network communications are available in separate repository. West manifest in this sample repository fetches the full Zephyr package including the FreeMASTER middleware repository used as a Zephyr module.

Example applications

MCUX SDK Example applications There are several example applications available for each supported MCU platform.

- **fmstr_uart** demonstrates a plain serial transmission, typically connecting to a computer's physical or virtual COM port. The typical transmission speed is 115200 bps.
- **fmstr_can** demonstrates CAN bus communication. This requires a suitable CAN interface connected to the computer and interconnected with the target MCU using a properly terminated CAN bus. The typical transmission speed is 500 kbps. A FreeMASTER-over-CAN communication plug-in must be used.
- **fmstr_usb_cdc** uses an on-chip USB controller to implement a CDC communication class. It is connected directly to a computer's USB port and creates a virtual COM port device. The typical transmission speed is above 1 Mbps.
- **fmstr_net** demonstrates the Network communication over UDP or TCP protocol. Existing examples use lwIP stack to implement the communication, but in general, it shall be possible to use any other TCP/IP stack to achieve the same functionality.
- **fmstr_wifi** is the fmstr_net application modified to use a WiFi network interface instead of a wired Ethernet connection.
- **fmstr_rtt** demonstrates the communication over SEGGER J-Link RTT interface. Both fmstr_net and fmstr_rtt examples require the FreeMASTER TCP/UDP communication plug-in to be used on the PC host side.
- **fmstr_eonce** uses the real-time data unit on the JTAG EOnCE module of the 56F800E family to implement pseudo-serial communication over the JTAG port. The typical transmission speed is around 10 kbps. This communication requires FreeMASTER JTAG/EOnCE communication plug-in.
- **fmstr_pdbdm** uses JTAG or BDM debugging interface to access the target RAM directly while the CPU is running. Note that such approach can be used with any MCU application, even without any special driver code. The computer reads from and writes into the RAM directly without CPU intervention. The Packet-Driven BDM (PD-BDM) communication uses the same memory access to exchange command and response frames. With PD-BDM, the FreeMASTER tool is able to go beyond basic memory read/write operations and accesses also advanced features like Recorder, TSA, or Pipes. The typical transmission speed is around 10 kbps. A PD-BDM communication plug-in must be used in FreeMASTER and configured properly for the selected debugging interface. Note that this communication cannot be used while a debugging interface is used by a debugger session.
- **fmstr_any** is a special example application which demonstrates how the NXP MCUXpresso Config Tools can be used to configure pins, clocks, peripherals, interrupts, and even the FreeMASTER "middleware" driver features in a graphical and user friendly way. The user can switch between the Serial, CAN, and other ways of communication and generate the required initialization code automatically.

Zephyr sample applications Zephyr sample applications demonstrate Kconfig and Device Tree configuration which configure the FreeMASTER middleware module for a selected communication option (Serial, CAN, Network or RTT).

Refer to *readme.md* files in each sample directory for description of configuration options required to implement FreeMASTER connectivity.

Description

This section shows how to add the FreeMASTER Communication Driver into application and how to configure the connection to the FreeMASTER visualization tool.

Features The FreeMASTER driver implements the FreeMASTER protocol V4 and provides the following features which may be accessed using the FreeMASTER visualization tool:

- Read/write access to any memory location on the target.
- Optional password protection of the read, read/write, and read/write/flash access levels.
- Atomic bit manipulation on the target memory (bit-wise write access).
- Optimal size-aligned access to memory which is also suitable to access the peripheral register space.
- Oscilloscope access—real-time access to target variables. The sample rate may be limited by the communication speed.
- Recorder— access to the fast transient recorder running on the board as a part of the FreeMASTER driver. The sample rate is only limited by the MCU CPU speed. The length of the data recorded depends on the amount of available memory.
- Multiple instances of Oscilloscopes and Recorders without the limitation of maximum number of variables.
- Application commands—high-level message delivery from the PC to the application.
- TSA tables—describing the data types, variables, files, or hyperlinks exported by the target application. The TSA newly supports also non-memory mapped resources like external EEPROM or SD Card files.
- Pipes—enabling the buffered stream-oriented data exchange for a general-purpose terminal-like communication, diagnostic data streaming, or other data exchange.

The FreeMASTER driver features:

- Full FreeMASTER protocol V4 implementation with a new V4 style of CRC used.
- Layered approach supporting Serial, CAN, Network, PD-BDM, and other transports.
- Layered low-level Serial transport driver architecture enabling to select UART, LPUART, USART, and other physical implementations of serial interfaces, including USB-CDC.
- Layered low-level CAN transport driver architecture enabling to select FlexCAN, msCAN, MCAN, and other physical implementations of the CAN interface.
- Layered low-level Networking transport enabling to select TCP, UDP or J-Link RTT communication.
- TSA support to write-protect memory regions or individual variables and to deny the access to the unsafe memory.
- The pipe callback handlers are invoked whenever new data is available for reading from the pipe.

- Two Serial Single-Wire modes of operation are enabled. The “external” mode has the RX and TX shorted on-board. The “true” single-wire mode interconnects internally when the MCU or UART modules support it.

The following sections briefly describe all FreeMASTER features implemented by the driver. See the PC-based FreeMASTER User Manual for more details on how to use the features to monitor, tune, or control an embedded application.

Board Detection The FreeMASTER protocol V4 defines the standard set of configuration values which the host PC tool reads to identify the target and to access other target resources properly. The configuration includes the following parameters:

- Version of the driver and the version of the protocol implemented.
- MTU as the Maximum size of the Transmission Unit (for example; communication buffer size).
- Application name, description, and version strings.
- Application build date and time as a string.
- Target processor byte ordering (little/big endian).
- Protection level that requires password authentication.
- Number of the Recorder and Oscilloscope instances.
- RAM Base Address for optimized memory access commands.

Memory Read This basic feature enables the host PC to read any data memory location by specifying the address and size of the required memory area. The device response frame must be shorter than the MTU to fit into the outgoing communication buffer. To read a device memory of any size, the host uses the information retrieved during the Board Detection and splits the large-block request to multiple partial requests.

The driver uses size-aligned operations to read the target memory (for example; uses proper read-word instruction when an address is aligned to 4 bytes).

Memory Write Similarly to the Memory Read operation, the Memory Write feature enables to write to any RAM memory location on the target device. A single write command frame must be shorter than the MTU to fit into the target communication buffer. Larger requests must be split into smaller ones.

The driver uses size-aligned operations to write to the target memory (for example; uses proper write-word instruction when an address is aligned to 4 bytes).

Masked Memory Write To implement the write access to a single bit or a group of bits of target variables, the Masked Memory Write feature is available in the FreeMASTER protocol and it is supported by the driver using the Read-Modify-Write approach.

Be careful when writing to bit fields of volatile variables that are also modified in an application interrupt. The interrupt may be serviced in the middle of a read-modify-write operation and it may cause data corruption.

Oscilloscope The protocol and driver enables any number of variables to be read at once with a single request from the host. This feature is called Oscilloscope and the FreeMASTER tool uses it to display a real-time graph of variable values.

The driver can be configured to support any number of Oscilloscope instances and enable simultaneously running graphs to be displayed on the host computer screen.

Recorder The protocol enables the host to select target variables whose values are then periodically recorded into a dedicated on-board memory buffer. After such data sampling stops (either on a host request or by evaluating a threshold-crossing condition), the data buffer is downloaded to the host and displayed as a graph. The data sampling rate is not limited by the speed of the communication line, so it enables displaying the variable transitions in a very high resolution.

The driver can be configured to support multiple Recorder instances and enable multiple recorder graphs to be displayed on the host screen. Having multiple recorders also enables setting the recording point differently for each instance. For example; one instance may be recording data in a general timer interrupt while another instance may record at a specific control algorithm time in the PWM interrupt.

TSA With the TSA feature, data types and variables can be described directly in the application source code. Such information is later provided to the FreeMASTER tool which may use it instead of reading symbol data from the application ELF executable file.

The information is encoded as so-called TSA tables which become direct part of the application code. The TSA tables contain descriptors of variables that shall be visible to the host tool. The descriptors can describe the memory areas by specifying the address and size of the memory block or more conveniently using the C variable names directly. Different set of TSA descriptors can be used to encode information about the structure types, unions, enumerations, or arrays.

The driver also supports special types of TSA table entries to describe user resources like external EEPROM and SD Card files, memory-mapped files, virtual directories, web URL hyperlinks, and constant enumerations.

TSA Safety When the TSA is enabled in the application, the TSA Safety can be enabled and validate the memory accesses directly by the embedded-side driver. When the TSA Safety is turned on, any memory request received from the host is validated and accepted only if it belongs to a TSA-described object. The TSA entries can be declared as Read-Write or Read-Only so that the driver can actively deny the write access to the Read-Only objects.

Application commands The Application Commands are high-level messages that can be delivered from the PC Host to the embedded application for further processing. The embedded application can either poll the status, or be called back when a new Application Command arrives to be processed. After the embedded application acknowledges that the command is handled, the host receives the Result Code and reads the other return data from memory. Both the Application Commands and the Result Codes are specific to a given application and it is user's responsibility to define them. The FreeMASTER protocol and the FreeMASTER driver only implement the delivery channel and a set of API calls to enable the Application Command processing in general.

Pipes The Pipes enable buffered and stream-oriented data exchange between the PC Host and the target application. Any pipe can be written to and read from at both ends (either on the PC or the MCU). The data transmission is acknowledged using the special FreeMASTER protocol commands. It is guaranteed that the data bytes are delivered from the writer to the reader in a proper order and without losses.

Serial single-wire operation The MCU Serial Communication Driver natively supports normal dual-wire operation. Because the protocol is half-duplex only, the driver can also operate in two single-wire modes:

- “External” single-wire operation where the Receiver and Transmitter pins are shorted on the board. This mode is supported by default in the MCU driver because the Receiver and Transmitter units are enabled or disabled whenever needed. It is also easy to extend this operation for the RS485 communication.

- “True” single-wire mode which uses only a single pin and the direction switching is made by the UART module. This mode of operation must be enabled by defining the FMSTR_SERIAL_SINGLEWIRE configuration option.

Multi-session support With networking interface it is possible for multiple clients to access the target MCU simultaneously. Reading and writing of target memory is processed atomically so there is no risk of data corruption. The state-full resources such as Recorders or Oscilloscopes are locked to a client session upon first use and access is denied to other clients until lock is released..

Zephyr-specific

Dedicated communication task FreeMASTER communication may run isolated in a dedicated task. The task automates the FMSTR_Init and FMSTR_Poll calls together with periodic activities enabling the FreeMASTER UI to fetch information about tasks and CPU utilization. The task can be started automatically or manually, and it must be assigned a priority to be able to react on interrupts and other communication events. Refer to Zephyr FreeMASTER sample applications which all use this communication task.

Zephyr shell and logging over FreeMASTER pipe FreeMASTER implements a shell backend which may use FreeMASTER pipe as a I/O terminal and logging output. Refer to Zephyr FreeMASTER sample applications which all use this feature.

Automatic TSA tables TSA tables can be declared as “automatic” in Zephyr which make them automatically registered in the table list. This may be very useful when there are many TSA tables or when the tables are defined in different (often unrelated) libraries linked together. In this case user does not need to build a list of all tables manually.

Driver files The driver source files can be found in a top-level src folder, further divided into the sub-folders:

- **src/platforms** platform-specific folder—one folder exists for each supported processor platform (for example; 32-bit Little Endian platform). Each such folder contains a platform header file with data types and a code which implements the potentially platform-specific operations, such as aligned memory access.
- **src/common** folder—contains the common driver source files shared by the driver for all supported platforms. All the .c files must be added to the project, compiled, and linked together with the application.
 - *freemaster.h* - master driver header file, which declares the common data types, macros, and prototypes of the FreeMASTER driver API functions.
 - *freemaster_cfg.h.example* - this file can serve as an example of the FreeMASTER driver configuration file. Save this file into a project source code folder and rename it to *freemaster_cfg.h*. The FreeMASTER driver code includes this file to get the project-specific configuration options and to optimize the compilation of the driver.
 - *freemaster_defcfg.h* - defines the default values for each FreeMASTER configuration option if the option is not set in the *freemaster_cfg.h* file.
 - *freemaster_protocol.h* - defines the FreeMASTER protocol constants used internally by the driver.
 - *freemaster_protocol.c* - implements the FreeMASTER protocol decoder and handles the basic Get Configuration Value, Memory Read, and Memory Write commands.

- *freemaster_rec.c* - handles the Recorder-specific commands and implements the Recorder sampling and triggering routines. When the Recorder is disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
- *freemaster_scope.c* - handles the Oscilloscope-specific commands. If the Oscilloscope is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_pipes.c* - implements the Pipes functionality when the Pipes feature is enabled.
- *freemaster_appcmd.c* - handles the communication commands used to deliver and execute the Application Commands within the context of the embedded application. When the Application Commands are disabled by the FreeMASTER driver configuration file, this file only compiles to empty API functions.
- *freemaster_tsa.c* - handles the commands specific to the TSA feature. This feature enables the FreeMASTER host tool to obtain the TSA memory descriptors declared in the embedded application. If the TSA is disabled by the FreeMASTER driver configuration file, this file compiles as void.
- *freemaster_tsa.h* - contains the declaration of the macros used to define the TSA memory descriptors. This file is indirectly included into the user application code (via *freemaster.h*).
- *freemaster_sha.c* - implements the SHA-1 hash code used in the password authentication algorithm.
- *freemaster_private.h* - contains the declarations of functions and data types used internally in the driver. It also contains the C pre-processor statements to perform the compile-time verification of the user configuration provided in the *freemaster_cfg.h* file.
- *freemaster_serial.c* - implements the serial protocol logic including the CRC, FIFO queuing, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a character-oriented API exported by the specific low-level driver.
- *freemaster_serial.h* - defines the low-level character-oriented Serial API.
- *freemaster_can.c* - implements the CAN protocol logic including the CAN message preparation, signalling using the first data byte in the CAN frame, and other communication-related operations. This code calls the functions of the low-level communication driver indirectly via a message-oriented API exported by the specific low-level driver.
- *freemaster_can.h* - defines the low-level message-oriented CAN API.
- *freemaster_net.c* - implements the Network protocol transport logic including multiple session management code.
- *freemaster_net.h* - definitions related to the Network transport.
- *freemaster_pdbdm.c* - implements the packet-driven BDM communication buffer and other communication-related operations.
- *freemaster_utils.c* - aligned memory copy routines, circular buffer management and other utility functions
- *freemaster_utils.h* - definitions related to utility code.
- **src/drivers/[sdk]/serial** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_serial_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the UART, LPUART, USART, and other kinds of Serial communication modules.

- **src/drivers/[sdk]/can** - contains the code related to the serial communication implemented using one of the supported SDK frameworks.
 - *freemaster_XXX.c* and *.h* - implement low-level access to the communication peripheral registers. Different files exist for the FlexCAN, msCAN, MCAN, and other kinds of CAN communication modules.
- **src/drivers/[sdk]/network** - contains low-level code adapting the FreeMASTER Network transport to an underlying TCP/IP or RTT stack.
 - *freemaster_net_lwip_tcp.c* and *_udp.c* - default networking implementation of TCP and UDP transports using lwIP stack.
 - *freemaster_net_segger_rtt.c* - implementation of network transport using Segger J-Link RTT interface

Driver configuration The driver is configured using a single header file (*freemaster_cfg.h*). Create this file and save it together with other project source files before compiling the driver code. All FreeMASTER driver source files include the *freemaster_cfg.h* file and use the macros defined here for the conditional and parameterized compilation. The C compiler must locate the configuration file when compiling the driver files. Typically, it can be achieved by putting this file into a folder where the other project-specific included files are stored.

As a starting point to create the configuration file, get the *freemaster_cfg.h.example* file, rename it to *freemaster_cfg.h*, and save it into the project area.

Note: It is NOT recommended to leave the *freemaster_cfg.h* file in the FreeMASTER driver source code folder. The configuration file must be placed at a project-specific location, so that it does not affect the other applications that use the same driver.

Configurable items This section describes the configuration options which can be defined in *freemaster_cfg.h*.

Interrupt modes

```
#define FMSTR_LONG_INTR [0|1]
#define FMSTR_SHORT_INTR [0|1]
#define FMSTR_POLL_DRIVEN [0|1]
```

Value Type boolean (0 or 1)

Description Exactly one of the three macros must be defined to non-zero. The others must be defined to zero or left undefined. The non-zero-defined constant selects the interrupt mode of the driver. See [Driver interrupt modes](#).

- FMSTR_LONG_INTR — long interrupt mode
- FMSTR_SHORT_INTR — short interrupt mode
- FMSTR_POLL_DRIVEN — poll-driven mode

Note: Some options may not be supported by all communication interfaces. For example, the FMSTR_SHORT_INTR option is not supported by the USB_CDC interface.

Protocol transport

```
#define FMSTR_TRANSPORT [identifier]
```


Value Type Driver identifiers are structure instance names defined in FreeMASTER source code. Specify one of existing instances to make use of the protocol transport.

Description Use one of the pre-defined constants, as implemented by the FreeMASTER code. The current driver supports the following transports:

- **FMSTR_SERIAL** - serial communication protocol
- **FMSTR_CAN** - using CAN communication
- **FMSTR_PDBDM** - using packet-driven BDM communication
- **FMSTR_NET** - network communication using TCP or UDP protocol

Serial transport This section describes configuration parameters used when serial transport is used:

```
#define FMSTR_TRANSPORT FMSTR_SERIAL
```

FMSTR_SERIAL_DRV Select what low-level driver interface will be used when implementing the Serial communication.

```
#define FMSTR_SERIAL_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing serial driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/serial* implementation):

- **FMSTR_SERIAL_MCUX_UART** - UART driver
- **FMSTR_SERIAL_MCUX_LPUART** - LPUART driver
- **FMSTR_SERIAL_MCUX_USART** - USART driver
- **FMSTR_SERIAL_MCUX_MINIUSART** - miniUSART driver
- **FMSTR_SERIAL_MCUX_QSCI** - DSC QSCI driver
- **FMSTR_SERIAL_MCUX_USB** - USB/CDC class driver (also see code in the */support/mcuxsdk_usb* folder)
- **FMSTR_SERIAL_56F800E_EONCE** - DSC JTAG EOnCE driver

Other SDKs or BSPs may define custom low-level driver interface structure which may be used as **FMSTR_SERIAL_DRV**. For example:

- **FMSTR_SERIAL_DREG_UART** - demonstrates the low-level interface implemented without the MCUXpresso SDK and using direct access to peripheral registers.

FMSTR_SERIAL_BASE

```
#define FMSTR_SERIAL_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the UART, LPUART, USART, or other serial peripheral module to be used for the communication. This value is not defined by default. User application should call `FMSTR_SetSerialBaseAddress()` to select the peripheral module.

FMSTR_COMM_BUFFER_SIZE

```
#define FMSTR_COMM_BUFFER_SIZE [number]
```

Value Type 0 or a value in range 32...255

Description Specify the size of the communication buffer to be allocated by the driver. Default value, which suits all driver features, is used when this option is defined as 0.

FMSTR_COMM_QUEUE_SIZE

```
#define FMSTR_COMM_QUEUE_SIZE [number]
```

Value Type Value in range 0...255

Description Specify the size of the FIFO receiver queue used to quickly receive and store characters in the `FMSTR_SHORT_INTR` interrupt mode. The default value is 32 B.

FMSTR_SERIAL_SINGLEWIRE

```
#define FMSTR_SERIAL_SINGLEWIRE [0|1]
```

Value Type Boolean 0 or 1.

Description Set to non-zero to enable the “True” single-wire mode which uses a single MCU pin to communicate. The low-level driver enables the pin direction switching when the MCU peripheral supports it.

CAN Bus transport This section describes configuration parameters used when CAN transport is used:

```
#define FMSTR_TRANSPORT FMSTR_CAN
```

FMSTR_CAN_DRV Select what low-level driver interface will be used when implementing the CAN communication.

```
#define FMSTR_CAN_DRV [identifier]
```

Value Type Driver identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing CAN driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/can implementation*):

- **FMSTR_CAN_MCUX_FLEXCAN** - FlexCAN driver
- **FMSTR_CAN_MCUX_MCAN** - MCAN driver
- **FMSTR_CAN_MCUX_MSCAN** - msCAN driver
- **FMSTR_CAN_MCUX_DSCFLEXCAN** - DSC FlexCAN driver
- **FMSTR_CAN_MCUX_DSCMSCAN** - DSC msCAN driver

Other SDKs or BSPs may define the custom low-level driver interface structure which may be used as **FMSTR_CAN_DRV**.

FMSTR_CAN_BASE

```
#define FMSTR_CAN_BASE [address|symbol]
```

Value Type Optional address value (numeric or symbolic)

Description Specify the base address of the FlexCAN, msCAN, or other CAN peripheral module to be used for the communication. This value is not defined by default. User application should call **FMSTR_SetCanBaseAddress()** to select the peripheral module.

FMSTR_CAN_CMDID

```
#define FMSTR_CAN_CMDID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for FreeMASTER commands (direction from PC Host tool to target application). When declaring 29-bit identifier, combine the numeric value with **FMSTR_CAN_EXTID** bit. Default value is 0x7AA.

FMSTR_CAN_RSPID

```
#define FMSTR_CAN_RSPID [number]
```

Value Type CAN identifier (11-bit or 29-bit number)

Description CAN message identifier used for responding messages (direction from target application to PC Host tool). When declaring 29-bit identifier, combine the numeric value with **FMSTR_CAN_EXTID** bit. Note that both *CMDID* and *RSPID* values may be the same. Default value is 0x7AA.

FMSTR_FLEXCAN_TXMB

```
#define FMSTR_FLEXCAN_TXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame transmission. Default value is 0.

FMSTR_FLEXCAN_RXMB

```
#define FMSTR_FLEXCAN_RXMB [number]
```

Value Type Number in range of 0..N where N is number of CAN message-buffers supported by HW module.

Description Only used when the FlexCAN low-level driver is used. Define the FlexCAN message buffer for CAN frame reception. Note that the FreeMASTER driver may also operate with a common message buffer used by both TX and RX directions. Default value is 1.

Network transport This section describes configuration parameters used when Network transport is used:

```
#define FMSTR_TRANSPORT FMSTR_NET
```

FMSTR_NET_DRV Select network interface implementation.

```
#define FMSTR_NET_DRV [identifier]
```

Value Type Identifiers are structure instance names defined in FreeMASTER drivers code. Specify one of existing NET driver instances.

Description When using MCUXpresso SDK, use one of the following constants (see */drivers/mcuxsdk/network implementation*):

- **FMSTR_NET_LWIP_TCP** - TCP communication using lwIP stack
- **FMSTR_NET_LWIP_UDP** - UDP communication using lwIP stack
- **FMSTR_NET_SEGGER_RTT** - Communication using SEGGER J-Link RTT interface

Other SDKs or BSPs may define the custom networking interface which may be used as FMSTR_CAN_DRV.

Add another row below:

FMSTR_NET_PORT

```
#define FMSTR_NET_PORT [number]
```

Value Type TCP or UDP port number (short integer)

Description Specifies the server port number used by TCP or UDP protocols.

FMSTR_NET_BLOCKING_TIMEOUT

```
#define FMSTR_NET_BLOCKING_TIMEOUT [number]
```

Value Type Timeout as number of milliseconds

Description This value specifies a timeout in milliseconds for which the network socket operations may block the execution inside *FMSTR_Poll*. This may be set high (e.g. 250) when a dedicated RTOS task is used to handle FreeMASTER protocol polling. Set to a lower value when the polling task is also responsible for other operations. Set to 0 to attempt to use non-blocking socket operations.

FMSTR_NET_AUTODISCOVERY

```
#define FMSTR_NET_AUTODISCOVERY [0|1]
```

Value Type Boolean 0 or 1.

Description This option enables the FreeMASTER driver to use a separate UDP socket to broadcast auto-discovery messages to network. This helps the FreeMASTER tool to discover the target device address, port and protocol options.

Debugging options

FMSTR_DISABLE

```
#define FMSTR_DISABLE [0|1]
```

Value Type boolean (0 or 1)

Description Define as non-zero to disable all FreeMASTER features, exclude the driver code from build, and compile all its API functions empty. This may be useful to remove FreeMASTER without modifying any application source code. Default value is 0 (false).

FMSTR_DEBUG_TX

```
#define FMSTR_DEBUG_TX [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to enable the driver to periodically transmit test frames out on the selected communication interface (SCI or CAN). With the debug transmission enabled, it is simpler to detect problems in the baudrate or other communication configuration settings.

The test frames are transmitted until the first valid command frame is received from the PC Host tool. The test frame is a valid error status frame, as defined by the protocol format. On the serial line, the test frame consists of three printable characters (+©W) which are easy to capture using the serial terminal tools.

This feature requires the *FMSTR_Poll()* function to be called periodically. Default value is 0 (false).

FMSTR_APPLICATION_STR

```
#define FMSTR_APPLICATION_STR
```

Value Type String.

Description Name of the application visible in FreeMASTER host application.

Memory access

FMSTR_USE_READMEM

```
#define FMSTR_USE_READMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Read command and enable FreeMASTER to have read access to memory and variables. The access can be further restricted by using a TSA feature.
Default value is 1 (true).

FMSTR_USE_WRITEMEM

```
#define FMSTR_USE_WRITEMEM [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Memory Write command.
The default value is 1 (true).

Oscilloscope options

FMSTR_USE_SCOPE

```
#define FMSTR_USE_SCOPE [number]
```

Value Type Integer number.

Description Number of Oscilloscope instances to be supported. Set to 0 to disable the Oscilloscope feature.
Default value is 0.

FMSTR_MAX_SCOPE_VARS

```
#define FMSTR_MAX_SCOPE_VARS [number]
```

Value Type Integer number larger than 2.

Description Number of variables to be supported by each Oscilloscope instance. Default value is 8.

Recorder options

FMSTR_USE_RECORDER

```
#define FMSTR_USE_RECORDER [number]
```

Value Type Integer number.

Description Number of Recorder instances to be supported. Set to 0 to disable the Recorder feature. Default value is 0.

FMSTR_REC_BUFF_SIZE

```
#define FMSTR_REC_BUFF_SIZE [number]
```

Value Type Integer number larger than 2.

Description Defines the size of the memory buffer used by the Recorder instance #0. Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_TIMEBASE

```
#define FMSTR_REC_TIMEBASE [time specification]
```

Value Type Number (nanoseconds time).

Description Defines the base sampling rate in nanoseconds (sampling speed) Recorder instance #0.

Use one of the following macros:

- FMSTR_REC_BASE_SECONDS(x)
- FMSTR_REC_BASE_MILLISEC(x)
- FMSTR_REC_BASE_MICROSEC(x)
- FMSTR_REC_BASE_NANOSEC(x)

Default: not defined, user shall call 'FMSTR_RecorderCreate()' API function to specify this parameter in run time.

FMSTR_REC_FLOAT_TRIG

```
#define FMSTR_REC_FLOAT_TRIG [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the floating-point triggering. Be aware that floating-point triggering may grow the code size by linking the floating-point standard library.

Default value is 0 (false).

Application Commands options

FMSTR_USE_APPCMD

```
#define FMSTR_USE_APPCMD [0|1]
```

Value Type Boolean 0 or 1.

Description Define as non-zero to implement the Application Commands feature.

Default value is 0 (false).

FMSTR_APPCMD_BUFF_SIZE

```
#define FMSTR_APPCMD_BUFF_SIZE [size]
```

Value Type Numeric buffer size in range 1..255

Description The size of the Application Command data buffer allocated by the driver. The buffer stores the (optional) parameters of the Application Command which waits to be processed.

FMSTR_MAX_APPCMD_CALLS

```
#define FMSTR_MAX_APPCMD_CALLS [number]
```

Value Type Number in range 0..255

Description The number of different Application Commands that can be assigned a callback handler function using FMSTR_RegisterAppCmdCall(). Default value is 0.

TSA options

FMSTR_USE_TSA

```
#define FMSTR_USE_TSA [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER TSA feature to be used. With this option enabled, the TSA tables defined in the applications are made available to the FreeMASTER host tool. Default value is 0 (false).

FMSTR_USE_TSA_SAFETY

```
#define FMSTR_USE_TSA_SAFETY [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the memory access validation in the FreeMASTER driver. With this option, the host tool is not able to access the memory which is not described by at least one TSA descriptor. Also a write access is denied for objects defined as read-only in TSA tables. Default value is 0 (false).

FMSTR_USE_TSA_INROM

```
#define FMSTR_USE_TSA_INROM [0|1]
```

Value Type Boolean 0 or 1.

Description Declare all TSA descriptors as *const*, which enables the linker to put the data into the flash memory. The actual result depends on linker settings or the linker commands used in the project. Default value is 0 (false).

FMSTR_USE_TSA_DYNAMIC

```
#define FMSTR_USE_TSA_DYNAMIC [0|1]
```

Value Type Boolean 0 or 1.

Description Enable runtime-defined TSA entries to be added to the TSA table by the FMSTR_SetUpTsaBuff() and FMSTR_TsaAddVar() functions. Default value is 0 (false).

Pipes options

FMSTR_USE_PIPES

```
#define FMSTR_USE_PIPES [0|1]
```

Value Type Boolean 0 or 1.

Description Enable the FreeMASTER Pipes feature to be used. Default value is 0 (false).

FMSTR_MAX_PIPES_COUNT

```
#define FMSTR_MAX_PIPES_COUNT [number]
```

Value Type Number in range 1..63.

Description The number of simultaneous pipe connections to support. The default value is 1.

Driver interrupt modes To implement the communication, the FreeMASTER driver handles the Serial or CAN module's receive and transmit requests. Use the *freemaster_cfg.h* configuration file to select whether the driver processes the communication automatically in the interrupt service routine handler or if it only polls the status of the module (typically during the application idle time).

This section describes each of the interrupt mode in more details.

Completely Interrupt-Driven operation Activated using:

```
#define FMSTR_LONG_INTR 1
```

In this mode, both the communication and the FreeMASTER protocol decoding is done in the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine. Because the protocol execution may be a lengthy task (especially with the TSA-Safety enabled) it is recommended to use this mode only if the interrupt prioritization scheme is possible in the application and the FreeMASTER interrupt is assigned to a lower (the lowest) priority.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

Mixed Interrupt and Polling Modes Activated using:

```
#define FMSTR_SHORT_INTR 1
```

In this mode, the communication processing time is split between the interrupt routine and the main application loop or task. The raw communication is handled by the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, or other interrupt service routine, while the protocol decoding and execution is handled by the *FMSTR_Poll* routine. Call *FMSTR_Poll* during the idle time in the application main loop.

The interrupt processing in this mode is relatively fast and deterministic. Upon a serial-receive event, the received character is only placed into a FIFO-like queue and it is not further processed. Upon a CAN receive event, the received frame is stored into a receive buffer. When transmitting, the characters are fetched from the prepared transmit buffer.

In this mode, the application code must register its own interrupt handler for all interrupt vectors related to the selected communication interface and call the *FMSTR_SerialIsr* or *FMSTR_CanIsr* functions from that handler.

When the serial interface is used as the serial communication interface, ensure that the *FMSTR_Poll* function is called at least once per *N* character time periods. *N* is the length of the FreeMASTER FIFO queue (*FMSTR_COMM_QUEUE_SIZE*) and the character time is the time needed to transmit or receive a single byte over the SCI line.

Completely Poll-driven

```
#define FMSTR_POLL_DRIVEN 1
```

In this mode, both the communication and the FreeMASTER protocol decoding are done in the *FMSTR_Poll* routine. No interrupts are needed and the *FMSTR_SerialIsr*, *FMSTR_CanIsr*, and similar handlers compile to an empty code.

When using this mode, ensure that the *FMSTR_Poll* function is called by the application at least once per the serial “character time” which is the time needed to transmit or receive a single character.

In the latter two modes (*FMSTR_SHORT_INTR* and *FMSTR_POLL_DRIVEN*), the protocol handling takes place in the *FMSTR_Poll* routine. An application interrupt can occur in the middle of the Read Memory or Write Memory commands’ execution and corrupt the variable being accessed by the FreeMASTER driver. In these two modes, some issues or glitches may occur when using FreeMASTER to visualize or monitor volatile variables modified in interrupt servicing code.

The same issue may appear even in the full interrupt mode (*FMSTR_LONG_INTR*), if volatile variables are modified in the interrupt code with a priority higher than the priority of the communication interrupt.

Data types Simple portability was one of the main requirements when writing the FreeMASTER driver. This is why the driver code uses the privately-declared data types and the vast majority of the platform-dependent code is separated in the platform-dependent source files. The data types used in the driver API are all defined in the platform-specific header file.

To prevent name conflicts with the symbols used in the application, all data types, macros, and functions have the *FMSTR_* prefix. The only global variables used in the driver are the transport and low-level API structures exported from the driver-implementation layer to upper layers. Other than that, all private variables are declared as static and named using the *fmstr_* prefix.

Communication interface initialization The FreeMASTER driver does not perform neither the initialization nor the configuration of the peripheral module that it uses to communicate. It is the application startup code responsibility to configure the communication module before the FreeMASTER driver is initialized by the *FMSTR_Init* call.

When the Serial communication module is used as the FreeMASTER communication interface, configure the UART receive and transmit pins, the serial communication baud rate, parity (no-parity), the character length (eight bits), and the number of stop bits (one) before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected serial peripheral module. Call the *FMSTR_SerialIsr* function from the application handler.

When a CAN module is used as the FreeMASTER communication interface, configure the CAN receive and transmit pins and the CAN module bit rate before initializing the FreeMASTER driver. For either the long or the short interrupt modes of the driver (see *Driver interrupt modes*), configure the interrupt controller and register an application-specific interrupt handler for all interrupt sources related to the selected CAN peripheral module. Call the *FMSTR_CanIsr* function from the application handler.

Note: It is not necessary to enable or unmask the serial nor the CAN interrupts before initializing the FreeMASTER driver. The driver enables or disables the interrupts and communication lines, as required during runtime.

FreeMASTER Recorder calls When using the FreeMASTER Recorder in the application (*FMSTR_USE_RECORDER* > 0), call the *FMSTR_RecorderCreate* function early after *FMSTR_Init* to set

up each recorder instance to be used in the application. Then call the `FMSTR_Recorder` function periodically in the code where the data recording should occur. A typical place to call the Recorder routine is at the timer or PWM interrupts, but it can be anywhere else. The example applications provided together with the driver code call the `FMSTR_Recorder` in the main application loop.

In applications where `FMSTR_Recorder` is called periodically with a constant period, specify the period in the Recorder configuration structure before calling `FMSTR_RecorderCreate`. This setting enables the PC Host FreeMASTER tool to display the X-axis of the Recorder graph properly scaled for the time domain.

Driver usage Start using or evaluating FreeMASTER by opening some of the example applications available in the driver setup package.

Follow these steps to enable the basic FreeMASTER connectivity in the application:

- Make sure that all `*c` files of the FreeMASTER driver from the `src/common/platforms/[your_platform]` folder are a part of the project. See [Driver files](#) for more details.
- Configure the FreeMASTER driver by creating or editing the `freemaster_cfg.h` file and by saving it into the application project directory. See [Driver configuration](#) for more details.
- Include the `freemaster.h` file into any application source file that makes the FreeMASTER API calls.
- Initialize the Serial or CAN modules. Set the baud rate, parity, and other parameters of the communication. Do not enable the communication interrupts in the interrupt mask registers.
- For the `FMSTR_LONG_INTR` and `FMSTR_SHORT_INTR` modes, install the application-specific interrupt routine and call the `FMSTR_SerialIsr` or `FMSTR_CanIsr` functions from this handler.
- Call the `FMSTR_Init` function early on in the application initialization code.
- Call the `FMSTR_RecorderCreate` functions for each Recorder instance to enable the Recorder feature.
- In the main application loop, call the `FMSTR_Poll` API function periodically when the application is idle.
- For the `FMSTR_SHORT_INTR` and `FMSTR_LONG_INTR` modes, enable the interrupts globally so that the interrupts can be handled by the CPU.

Communication troubleshooting The most common problem that causes communication issues is a wrong baud rate setting or a wrong pin multiplexer setting of the target MCU. When a communication between the PC Host running FreeMASTER and the target MCU cannot be established, try enabling the `FMSTR_DEBUG_TX` option in the `freemaster_cfg.h` file and call the `FMSTR_Poll` function periodically in the main application task loop.

With this feature enabled, the FreeMASTER driver periodically transmits a test frame through the Serial or CAN lines. Use a logic analyzer or an oscilloscope to monitor the signals at the communication pins of the CPU device to examine whether the bit rate and signal polarity are configured properly.

Driver API

This section describes the driver Application Programmers' Interface (API) needed to initialize and use the FreeMASTER serial communication driver.

Control API There are three key functions to initialize and use the driver.

FMSTR_Init

Prototype

```
FMSTR_BOOL FMSTR_Init(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description This function initializes the internal variables of the FreeMASTER driver and enables the communication interface. This function does not change the configuration of the selected communication module. The hardware module must be initialized before the *FMSTR_Init* function is called.

A call to this function must occur before calling any other FreeMASTER driver API functions.

FMSTR_Poll

Prototype

```
void FMSTR_Poll(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_protocol.c*

Description In the poll-driven or short interrupt modes, this function handles the protocol decoding and execution (see *Driver interrupt modes*). In the poll-driven mode, this function also handles the communication interface with the PC. Typically, the *FMSTR_Poll* function is called during the “idle” time in the main application task loop.

To prevent the receive data overflow (loss) on a serial interface, make sure that the *FMSTR_Poll* function is called at least once per the time calculated as:

$$N * Tchar$$

where:

- *N* is equal to the length of the receive FIFO queue (configured by the *FMSTR_COMM_QUEUE_SIZE* macro). *N* is 1 for the poll-driven mode.
- *Tchar* is the character time, which is the time needed to transmit or receive a single byte over the SCI line.

Note: In the long interrupt mode, this function typically compiles as an empty function and can still be called. It is worthwhile to call this function regardless of the interrupt mode used in the application. This approach enables a convenient switching between the different interrupt modes only by changing the configuration macros in the *freemaster_cfg.h* file.

FMSTR_SerialIsr / FMSTR_CanIsr

Prototype

```
void FMSTR_SerialIsr(void);  
void FMSTR_CanIsr(void);
```

- Declaration: *freemaster.h*
- Implementation: *hw-specific low-level driver C file*

Description This function contains the interrupt-processing code of the FreeMASTER driver. In long or short interrupt modes (see [Driver interrupt modes](#)), this function must be called from the application interrupt service routine registered for the communication interrupt vector. On platforms where the communication module uses multiple interrupt vectors, the application should register a handler for all vectors and call this function at each interrupt.

Note: In a poll-driven mode, this function is compiled as an empty function and does not have to be used.

Recorder API

FMSTR_RecorderCreate

Prototype

```
FMSTR_BOOL FMSTR_RecorderCreate(FMSTR_INDEX recIndex, FMSTR_REC_BUFF* buffCfg);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function registers a recorder instance and enables it to be used by the PC Host tool. Call this function for all recorder instances from 0 to the maximum number defined by the FMSTR_USE_RECORDER configuration option (minus one). An exception to this requirement is the recorder of instance 0 which may be automatically configured by FMSTR_Init when the *freemaster_cfg.h* configuration file defines the *FMSTR_REC_BUFF_SIZE* and *FMSTR_REC_TIMEBASE* options.

For more information, see [Configurable items](#).

FMSTR_Recorder

Prototype

```
void FMSTR_Recorder(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function takes a sample of the variables being recorded using the FreeMASTER Recorder instance *recIndex*. If the selected Recorder is not active when the *FMSTR_Recorder* function is being called, the function returns immediately. When the Recorder is active, the values of the variables being recorded are copied into the recorder buffer and the trigger conditions are evaluated.

If a trigger condition is satisfied, the Recorder enters the post-trigger mode, where it counts down the follow-up samples (number of *FMSTR_Recorder* function calls) and de-activates the Recorder when the required post-trigger samples are finished.

The *FMSTR_Recorder* function is typically called in the timer or PWM interrupt service routines. This function can also be called in the application main loop (for testing purposes).

FMSTR_RecorderTrigger

Prototype

```
void FMSTR_RecorderTrigger(FMSTR_INDEX recIndex);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_rec.c*

Description This function forces the Recorder trigger condition to happen, which causes the Recorder to be automatically deactivated after the post-trigger samples are sampled. Use this function in the application code for programmatic control over the Recorder triggering. This can be useful when a more complex triggering conditions need to be used.

Fast Recorder API The Fast Recorder feature is not available in the FreeMASTER driver version 3. This feature was heavily dependent on the target platform and it was only available for the 56F8xxxx DSCs.

TSA Tables When the TSA is enabled in the FreeMASTER driver configuration file (by setting the *FMSTR_USE_TSA* macro to a non-zero value), it defines the so-called TSA tables in the application. This section describes the macros that must to be used to define the TSA tables.

There can be any number of TSA tables spread across the application source files. There must be always exactly one TSA Table List defined, which informs the FreeMASTER driver about the active TSA tables.

When there is at least one TSA table and one TSA Table List defined in the application, the TSA information automatically appears in the FreeMASTER symbols list. The symbols can then be used to create FreeMASTER variables for visualization or control.

TSA table definition The TSA table describes the static or global variables together with their address, size, type, and access-protection information. If the TSA-described variables are of a structure type, the TSA table may also describe this type and provide an access to the individual structure members of the variable.

The TSA table definition begins with the *FMSTR_TSA_TABLE_BEGIN* macro with a *table_id* identifying the table. The *table_id* shall be a valid C-language symbol.

```
FMSTR_TSA_TABLE_BEGIN(table_id)
```

After this opening macro, the TSA descriptors are placed using these macros:

```
/* Adding variable descriptors */
FMSTR_TSA_RW_VAR(name, type) /* read/write variable entry */
FMSTR_TSA_RO_VAR(name, type) /* read-only variable entry */

/* Description of complex data types */
FMSTR_TSA_STRUCT(struct_name) /* structure or union type entry */
```

(continues on next page)

(continued from previous page)

```

FMSTR_TSA_MEMBER(struct_name, member_name, type) /* structure member entry */

/* Memory blocks */
FMSTR_TSA_RW_MEM(name, type, address, size) /* read/write memory block */
FMSTR_TSA_RO_MEM(name, type, address, size) /* read-only memory block */

```

The table is closed using the FMSTR_TSA_TABLE_END macro:

```
FMSTR_TSA_TABLE_END()
```

TSA descriptor parameters The TSA descriptor macros accept these parameters:

- *name* — variable name. The variable must be defined before the TSA descriptor references it.
- *type* — variable or member type. Only one of the pre-defined type constants may be used (see below).
- *struct_name* — structure type name. The type must be defined (typedef) before the TSA descriptor references it.
- *member_name* — structure member name.

Note: The structure member descriptors (FMSTR_TSA_MEMBER) must immediately follow the parent structure descriptor (FMSTR_TSA_STRUCT) in the table.

Note: To write-protect the variables in the FreeMASTER driver (FMSTR_TSA_RO_VAR), enable the TSA-Safety feature in the configuration file.

TSA variable types The table lists *type* identifiers which can be used in TSA descriptors:

Constant	Description
FMSTR_TSA_UINTn	Unsigned integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_SINTn	Signed integer type of size <i>n</i> bits (n=8,16,32,64)
FMSTR_TSA_FRACn	Fractional number of size <i>n</i> bits (n=16,32,64).
FMSTR_TSA_FRAC_Q(m,n)	Signed fractional number in general Q form (m+n+1 total bits)
FMSTR_TSA_FRAC_UQ(m,n)	Unsigned fractional number in general UQ form (m+n total bits)
FMSTR_TSA_FLOAT	4-byte standard IEEE floating-point type
FMSTR_TSA_DOUBLE	8-byte standard IEEE floating-point type
FMSTR_TSA_POINTER	Generic pointer type defined (platform-specific 16 or 32 bit)
FM-STR_TSA_USERTYPE(name)	Structure or union type declared with FMSTR_TSA_STRUCT record

TSA table list There shall be exactly one TSA Table List in the application. The list contains one entry for each TSA table defined anywhere in the application.

The TSA Table List begins with the FMSTR_TSA_TABLE_LIST_BEGIN macro and continues with the TSA table entries for each table.

```

FMSTR_TSA_TABLE_LIST_BEGIN()

FMSTR_TSA_TABLE(table_id)
FMSTR_TSA_TABLE(table_id2)
FMSTR_TSA_TABLE(table_id3)
...

```


The list is closed with the FMSTR_TSA_TABLE_LIST_END macro:

```
FMSTR_TSA_TABLE_LIST_END()
```

TSA Active Content entries FreeMASTER v2.0 and higher supports TSA Active Content, enabling the TSA tables to describe the memory-mapped files, virtual directories, and URL hyperlinks. FreeMASTER can access such objects similarly to accessing the files and folders on the local hard drive.

With this set of TSA entries, the FreeMASTER pages can be embedded directly into the target MCU flash and accessed by FreeMASTER directly over the communication line. The HTML-coded pages rendered inside the FreeMASTER window can access the TSA Active Content resources using a special URL referencing the *fmstr:* protocol.

This example provides an overview of the supported TSA Active Content entries:

```
FMSTR_TSA_TABLE_BEGIN(files_and_links)

/* Directory entry applies to all subsequent MEMFILE entries */
FMSTR_TSA_DIRECTORY("/text_files") /* entering a new virtual directory */

/* The readme.txt file will be accessible at the fmstr://text_files/readme.txt URL */
FMSTR_TSA_MEMFILE("readme.txt", readme_txt, sizeof(readme_txt)) /* memory-mapped file */

/* Files can also be specified with a full path so the DIRECTORY entry does not apply */
FMSTR_TSA_MEMFILE("/index.htm", index, sizeof(index)) /* memory-mapped file */
FMSTR_TSA_MEMFILE("/prj/demo.pmp", demo_pmp, sizeof(demo_pmp)) /* memory-mapped file */

/* Hyperlinks can point to a local MEMFILE object or to the Internet */
FMSTR_TSA_HREF("Board's Built-in Welcome Page", "/index.htm")
FMSTR_TSA_HREF("FreeMASTER Home Page", "http://www.nxp.com/freemaster")

/* Project file links simplify opening the projects from any URLs */
FMSTR_TSA_PROJECT("Demonstration Project (embedded)", "/prj/demo.pmp")
FMSTR_TSA_PROJECT("Full Project (online)", "http://mycompany.com/prj/demo.pmp")

FMSTR_TSA_TABLE_END()
```

TSA API

FMSTR_SetUpTsaBuff

Prototype

```
FMSTR_BOOL FMSTR_SetUpTsaBuff(FMSTR_ADDR buffAddr, FMSTR_SIZE buffSize);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *buffAddr* [in] - address of the memory buffer for the dynamic TSA table
- *buffSize* [in] - size of the memory buffer which determines the maximum number of TSA entries to be added in the runtime

Description This function must be used to assign the RAM memory buffer to the TSA subsystem when `FMSTR_USE_TSA_DYNAMIC` is enabled. The memory buffer is then used to store the TSA entries added dynamically to the runtime TSA table using the `FMSTR_TsaAddVar` function call. The runtime TSA table is processed by the FreeMASTER PC Host tool along with all static tables as soon as the communication port is open.

The size of the memory buffer determines the number of TSA entries that can be added dynamically. Depending on the MCU platform, one TSA entry takes either 8 or 16 bytes.

FMSTR_TsaAddVar

Prototype

```
FMSTR_BOOL FMSTR_TsaAddVar(FMSTR_TSATBL_STRPTR tsaName, FMSTR_TSATBL_STRPTR ↵
↵ tsaType,
    FMSTR_TSATBL_VOIDPTR varAddr, FMSTR_SIZE32 varSize,
    FMSTR_SIZE flags);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_tsa.c*

Arguments

- *tsaName* [in] - name of the object
- *tsaType* [in] - name of the object type
- *varAddr* [in] - address of the object
- *varSize* [in] - size of the object
- *flags* [in] - access flags; a combination of these values:
 - `FMSTR_TSA_INFO_RO_VAR` — read-only memory-mapped object (typically a variable)
 - `FMSTR_TSA_INFO_RW_VAR` — read/write memory-mapped object
 - `FMSTR_TSA_INFO_NON_VAR` — other entry, describing structure types, structure members, enumerations, and other types

Description This function can be called only when the dynamic TSA table is enabled by the `FMSTR_USE_TSA_DYNAMIC` configuration option and when the `FMSTR_SetUpTsaBuff` function call is made to assign the dynamic TSA table memory. This function adds an entry into the dynamic TSA table. It can be used to register a read-only or read/write memory object or describe an item of the user-defined type.

See [TSA table definition](#) for more details about the TSA table entries.

Application Commands API

FMSTR_GetAppCmd

Prototype

```
FMSTR_APPCMD_CODE FMSTR_GetAppCmd(void);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Description This function can be used to detect if there is an Application Command waiting to be processed by the application. If no command is pending, this function returns the FMSTR_APPCMDRESULT_NOCMD constant. Otherwise, this function returns the code of the Application Command that must be processed. Use the FMSTR_AppCmdAck call to acknowledge the Application Command after it is processed and to return the appropriate result code to the host.

The FMSTR_GetAppCmd function does not report the commands for which a callback handler function exists. If the FMSTR_GetAppCmd function is called when a callback-registered command is pending (and before it is actually processed by the callback function), this function returns FMSTR_APPCMDRESULT_NOCMD.

FMSTR_GetAppCmdData

Prototype

```
FMSTR_APPCMD_PDATA FMSTR_GetAppCmdData(FMSTR_SIZE* dataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *dataLen* [out] - pointer to the variable that receives the length of the data available in the buffer. It can be NULL when this information is not needed.

Description This function can be used to retrieve the Application Command data when the application determines that an Application Command is pending (see [FMSTR_GetAppCmd](#)).

There is just a single buffer to hold the Application Command data (the buffer length is FMSTR_APPCMD_BUFF_SIZE bytes). If the data are to be used in the application after the command is processed by the FMSTR_AppCmdAck call, copy the data out to a private buffer.

FMSTR_AppCmdAck

Prototype

```
void FMSTR_AppCmdAck(FMSTR_APPCMD_RESULT resultCode);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultCode* [in] - the result code which is to be returned to FreeMASTER

Description This function is used when the Application Command processing finishes in the application. The resultCode passed to this function is returned back to the host and the driver is re-initialized to expect the next Application Command.

After this function is called and before the next Application Command arrives, the return value of the FMSTR_GetAppCmd function is FMSTR_APPCMDRESULT_NOCMD.

FMSTR_AppCmdSetResponseData

Prototype

```
void FMSTR_AppCmdSetResponseData(FMSTR_ADDR resultDataAddr, FMSTR_SIZE resultDataLen);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *resultDataAddr* [in] - pointer to the data buffer that is to be copied to the Application Command data buffer
- *resultDataLen* [in] - length of the data to be copied. It must not exceed the FMSTR_APPCMD_BUFF_SIZE value.

Description This function can be used before the Application Command processing finishes, when there are data to be returned back to the PC.

The response data buffer is copied into the Application Command data buffer, from where it is accessed when the host requires it. Do not use FMSTR_GetAppCmdData and the data buffer after FMSTR_AppCmdSetResponseData is called.

Note: The current version of FreeMASTER does not support the Application Command response data.

FMSTR_RegisterAppCmdCall

Prototype

```
FMSTR_BOOL FMSTR_RegisterAppCmdCall(FMSTR_APPCMD_CODE appCmdCode, FMSTR_PAPPCMDFUNC callbackFunc);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_appcmd.c*

Arguments

- *appCmdCode* [in] - the Application Command code for which the callback is to be registered
- *callbackFunc* [in] - pointer to the callback function that is to be registered. Use NULL to unregister a callback registered previously with this Application Command.

Return value This function returns a non-zero value when the callback function was successfully registered or unregistered. It can return zero when trying to register a callback function for more than FMSTR_MAX_APPCMD_CALLS different Application Commands.

Description This function can be used to register the given function as a callback handler for the Application Command. The Application Command is identified using single-byte code. The callback function is invoked automatically by the FreeMASTER driver when the protocol decoder obtains a request to get the application command result code.

The prototype of the callback function is

```
FMSTR_APPCMD_RESULT HandlerFunction(FMSTR_APPCMD_CODE nAppcmd, FMSTR_APPCMD_PDATA pData, FMSTR_SIZE nDataLen);
```

Where:

- *nAppcmd* -Application Command code
- *pData* —points to the Application Command data received (if any)
- *nDataLen* —information about the Application Command data length

The return value of the callback function is used as the Application Command Result Code and returned to FreeMASTER.

Note: The FMSTR_MAX_APPCMD_CALLS configuration macro defines how many different Application Commands may be handled by a callback function. When FMSTR_MAX_APPCMD_CALLS is undefined or defined as zero, the FMSTR_RegisterAppCmdCall function always fails.

Pipes API

FMSTR_PipeOpen

Prototype

```
FMSTR_HPIPE FMSTR_PipeOpen(FMSTR_PIPE_PORT pipePort, FMSTR_PPIPEFUNC pipeCallback,
    FMSTR_ADDR pipeRxBuff, FMSTR_PIPE_SIZE pipeRxSize,
    FMSTR_ADDR pipeTxBuff, FMSTR_PIPE_SIZE pipeTxSize,
    FMSTR_U8 type, const FMSTR_CHAR *name);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipePort* [in] - port number that identifies the pipe for the client
- *pipeCallback* [in] - pointer to the callback function that is called whenever a pipe data status changes
- *pipeRxBuff* [in] - address of the receive memory buffer
- *pipeRxSize* [in] - size of the receive memory buffer
- *pipeTxBuff* [in] - address of the transmit memory buffer
- *pipeTxSize* [in] - size of the transmit memory buffer
- *type* [in] - a combination of FMSTR_PIPE_MODE_XXX and FMSTR_PIPE_SIZE_XXX constants describing primary pipe data format and usage. This type helps FreeMASTER decide how to access the pipe by default. Optional, use 0 when undetermined.
- *name* [in] - user name of the pipe port. This name is visible to the FreeMASTER user when creating the graphical pipe interface.

Description This function initializes a new pipe and makes it ready to accept or send the data to the PC Host client. The receive memory buffer is used to store the received data before they are read out by the FMSTR_PipeRead call. When this buffer gets full, the PC Host client denies the data transmission into this pipe until there is enough free space again. The transmit memory buffer is used to store the data transmitted by the application to the PC Host client using the FMSTR_PipeWrite call. The transmit buffer can get full when the PC Host is disconnected or when it is slow in receiving and reading out the pipe data.

The function returns the pipe handle which must be stored and used in the subsequent calls to manage the pipe object.

The callback function (if specified) is called whenever new data are received through the pipe and available for reading. This callback is also called when the data waiting in the transmit buffer are successfully pushed to the PC Host and the transmit buffer free space increases. The prototype of the callback function provided by the user application must be as follows. The *PipeHandler* name is only a placeholder and must be defined by the application.

```
void PipeHandler(FMSTR_HPIPE pipeHandle);
```

FMSTR_PipeClose

Prototype

```
void FMSTR_PipeClose(FMSTR_HPIPE pipeHandle);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call

Description This function de-initializes the pipe object. No data can be received or sent on the pipe after this call.

FMSTR_PipeWrite

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeWrite(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,  
FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE writeGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the FMSTR_PipeOpen function call
- *pipeData* [in] - address of the data to be written
- *pipeDataLen* [in] - length of the data to be written
- *writeGranularity* [in] - size of the minimum unit of data which is to be written

Description This function puts the user-specified data into the pipe's transmit memory buffer and schedules it for transmission. This function returns the number of bytes that were successfully written into the buffer. This number may be smaller than the number of the requested bytes if there is not enough free space in the transmit buffer.

The *writeGranularity* argument can be used to split the data into smaller chunks, each of the size given by the *writeGranularity* value. The FMSTR_PipeWrite function writes as many data chunks as possible into the transmit buffer and does not attempt to write an incomplete chunk.

This feature can prove to be useful to avoid the intermediate caching when writing an array of integer values or other multi-byte data items. When making the `nGranularity` value equal to the `nLength` value, all data are considered as one chunk which is either written successfully as a whole or not at all. The `nGranularity` value of 0 or 1 disables the data-chunk approach.

FMSTR_PipeRead

Prototype

```
FMSTR_PIPE_SIZE FMSTR_PipeRead(FMSTR_HPIPE pipeHandle, FMSTR_ADDR pipeData,
    FMSTR_PIPE_SIZE pipeDataLen, FMSTR_PIPE_SIZE readGranularity);
```

- Declaration: *freemaster.h*
- Implementation: *freemaster_pipes.c*

Arguments

- *pipeHandle* [in] - pipe handle returned from the `FMSTR_PipeOpen` function call
- *pipeData* [in] - address of the data buffer to be filled with the received data
- *pipeDataLen* [in] - length of the data to be read
- *readGranularity* [in] - size of the minimum unit of data which is to be read

Description This function copies the data received from the pipe from its receive buffer to the user buffer for further processing. The function returns the number of bytes that were successfully copied to the buffer. This number may be smaller than the number of the requested bytes if there is not enough data bytes available in the receive buffer.

The `readGranularity` argument can be used to copy the data in larger chunks in the same way as described in the `FMSTR_PipeWrite` function.

API data types This section describes the data types used in the FreeMASTER driver. The information provided here can be useful when modifying or porting the FreeMASTER Communication Driver to new NXP platforms.

Note: The licensing conditions prohibit use of FreeMASTER and the FreeMASTER Communication Driver with non-NXP MPU or MCU products.

Public common types The table below describes the public data types used in the FreeMASTER driver API calls. The data types are declared in the *freemaster.h* header file.

Type name	Description
<i>FM-STR_ADDR</i> For example, this type is defined as long integer on the 56F8xxx platform where the 24-bit addresses must be supported, but the C-pointer may be only 16 bits wide in some compiler configurations.	Data type used to hold the memory address. On most platforms, this is normally a C-pointer, but it may also be a pure integer type.
<i>FM-STR_SIZE</i> It is required that this type is unsigned and at least 16 bits wide integer.	Data type used to hold the memory block size.
<i>FM-STR_BOOL</i> This type is used only in zero/non-zero conditions in the driver code.	Data type used as a general boolean type.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command code.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to create the Application Command data buffer.
<i>FM-STR_APPCM</i> Generally, this is an unsigned 8-bit value.	Data type used to hold the Application Command result code.

Public TSA types The table describes the TSA-specific public data types. These types are declared in the *freemaster_tsa.h* header file, which is included in the user application indirectly by the *freemaster.h* file.

<i>FM-STR_TSA_TII</i>	Data type used to hold a descriptor index in the TSA table or a table index in the list of TSA tables.
-----------------------	--

By default, this is defined as *FM-STR_SIZE*.

<i>FM-STR_TSA_TS</i>	Data type used to hold a memory block size, as used in the TSA descriptors.
----------------------	---

By default, this is defined as *FM-STR_SIZE*.

Public Pipes types The table describes the data types used by the FreeMASTER Pipes API:

<i>FM-STR_HPIPE</i>	Pipe handle that identifies the open-pipe object.
---------------------	---

Generally, this is a pointer to a void type.

<i>FM-STR_PIPE_PC</i>	Integer type required to hold at least 7 bits of data.
-----------------------	--

Generally, this is an unsigned 8-bit or 16-bit type.

<i>FM-STR_PIPE_SI</i>	Integer type required to hold at least 16 bits of data.
-----------------------	---

This is used to store the data buffer sizes.

<i>FM-STR_PPIPEF</i>	Pointer to the pipe handler function.
----------------------	---------------------------------------

See [FM-STR_PipeOpen](#) for more details.

Internal types The table describes the data types used internally by the FreeMASTER driver. The data types are declared in the platform-specific header file and they are not available in the application code.

<i>FMSTR_U8</i>	The smallest memory entity.
On the vast majority of platforms, this is an unsigned 8-bit integer.	
On the 56F8xx DSP platform, this is defined as an unsigned 16-bit integer.	
<i>FM-STR_U16</i>	Unsigned 16-bit integer.
<i>FM-STR_U32</i>	Unsigned 32-bit integer.
<i>FMSTR_S8</i>	Signed 8-bit integer.
<i>FM-STR_S16</i>	Signed 16-bit integer.
<i>FM-STR_S32</i>	Signed 32-bit integer.
<i>FM-STR_FLOAT</i>	4-byte standard IEEE floating-point type.
<i>FM-STR_FLAGS</i>	Data type forming a union with a structure of flag bit-fields.
<i>FM-STR_SIZE8</i>	Data type holding a general size value, at least 8 bits wide.
<i>FM-STR_INDEX</i>	General for-loop index. Must be signed, at least 16 bits wide.
<i>FM-STR_BCHR</i>	A single character in the communication buffer.
Typically, this is an 8-bit unsigned integer, except for the DSP platforms where it is a 16-bit integer.	
<i>FM-STR_BPTR</i>	A pointer to the communication buffer (an array of <i>FMSTR_BCHR</i>).

Document references

Links

- This document online: <https://mcuxpresso.nxp.com/mcuxsdk/latest/html/middleware/freemaster/doc/index.html>

- FreeMASTER tool home: www.nxp.com/freemaster
- FreeMASTER community area: community.nxp.com/community/freemaster
- FreeMASTER GitHub code repo: <https://github.com/nxp-mcuxpresso/mcux-freemaster>
- MCUXpresso SDK home: www.nxp.com/mcuxpresso
- MCUXpresso SDK builder: mcuxpresso.nxp.com/en

Documents

- *FreeMASTER Usage Serial Driver Implementation* (document [AN4752](#))
- *Integrating FreeMASTER Time Debugging Tool With CodeWarrior For Microcontrollers v10.X Project* (document [AN4771](#))
- *Flash Driver Library For MC56F847xx And MC56F827xx DSC Family* (document [AN4860](#))

Revision history This Table summarizes the changes done to this document since the initial release.

Revision	Date	Description
1.0	03/2006	Limited initial release
2.0	09/2007	Updated for FreeMASTER version. New Freescale document template used.
2.1	12/2007	Added description of the new Fast Recorder feature and its API.
2.2	04/2010	Added support for MPC56xx platform, Added new API for use CAN interface.
2.3	04/2011	Added support for Kxx Kinetis platform and MQX operating system.
2.4	06/2011	Serial driver update, adds support for USB CDC interface.
2.5	08/2011	Added Packet Driven BDM interface.
2.7	12/2013	Added FLEXCAN32 interface, byte access and isr callback configuration option.
2.8	06/2014	Removed obsolete license text, see the software package content for up-to-date license.
2.9	03/2015	Update for driver version 1.8.2 and 1.9: FreeMASTER Pipes, TSA Active Content, LIN Transport Layer support, DEBUG-TX communication troubleshooting, Kinetis SDK support.
3.0	08/2016	Update for driver version 2.0: Added support for MPC56xx, MPC57xx, KEAxx and S32Kxx platforms. New NXP document template as well as new license agreement used. added MCAN interface. Folders structure at the installation destination was rearranged.
4.0	04/2019	Update for driver released as part of FreeMASTER v3.0 and MCUXpresso SDK 2.6. Updated to match new V4 serial communication protocol and new configuration options. This version of the document removes substantial portion of outdated information related to S08, S12, ColdFire, Power and other legacy platforms.
4.1	04/2020	Minor update for FreeMASTER driver included in MCUXpresso SDK 2.8.
4.2	09/2020	Added example applications description and information about the MCUXpresso Config Tools. Fixed the pipe-related API description.
4.3	10/2024	Added description of Network and Segger J-Link RTT interface configuration. Accompanying the MCUXpresso SDK version 24.12.00.
4.4	04/2025	Added Zephyr-specific information. Accompanying the MCUXpresso SDK version 25.06.00.

Chapter 4

RTOS

4.1 FreeRTOS

4.1.1 FreeRTOS kernel

Open source RTOS kernel for small devices.

FreeRTOS kernel for MCUXpresso SDK Readme

FreeRTOS kernel for MCUXpresso SDK

Overview The purpose of this document is to describes the [FreeRTOS kernel repo](#) integration into the [NXP MCUXpresso Software Development Kit: mcuxsdk](#). MCUXpresso SDK provides a comprehensive development solutions designed to optimize, ease, and help accelerate embedded system development of applications based on MCUs from NXP. This project involves the FreeRTOS kernel repo fork with:

- cmake and Kconfig support to allow the configuration and build in MCUXpresso SDK ecosystem
- FreeRTOS OS additions, such as [FreeRTOS driver wrappers](#), RTOS ready FatFs file system, and the implementation of FreeRTOS tickless mode

The history of changes in FreeRTOS kernel repo for MCUXpresso SDK are summarized in [CHANGELOG_mcuxsdk.md](#) file.


The MCUXpresso SDK framework also contains a set of FreeRTOS examples which show basic FreeRTOS OS features. This makes it easy to start a new FreeRTOS project or begin experimenting with FreeRTOS OS. Selected drivers and middleware are RTOS ready with related FreeRTOS adaptation layer.

FreeRTOS example applications The FreeRTOS examples are written to demonstrate basic FreeRTOS features and the interaction between peripheral drivers and the RTOS.

List of examples The list of `freertos_examples`, their description and availability for individual supported MCUXpresso SDK development boards can be obtained here: https://mcuxpresso.nxp.com/mcuxsdk/latest/html/examples/freertos_examples/index.html

Location of examples The FreeRTOS examples are located in [mcuxsdk-examples](#) repository, see the `freertos_examples` folder.

Once using MCUXpresso SDK zip packages created via the [MCUXpresso SDK Builder](#) the FreeRTOS kernel library and associated `freertos_examples` are added into final zip package once FreeRTOS components is selected on the Developer Environment Settings page:

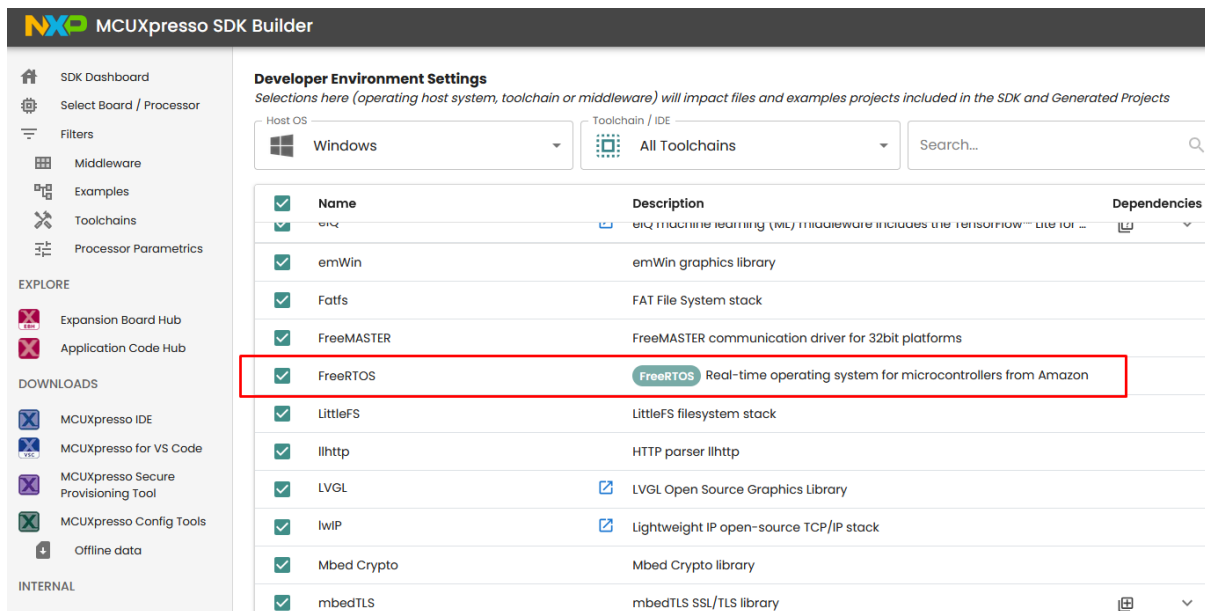

The FreeRTOS examples in MCUXpresso SDK zip packages are located in `<MCUXpressoSDK_install_dir>/boards/<board_name>/freertos_examples/` subfolders.

Building a FreeRTOS example application For information how to use the cmake and Kconfig based build and configuration system and how to build `freertos_examples` visit: [MCUXpresso SDK documentation for Build And Configuration MCUXpresso SDK Getting Start Guide](#)

Tip: To list all FreeRTOS example projects and targets that can be built via the west build command, use this `west list_project` command in `mcuxsdk` workspace:

```
west list_project -p examples/freertos_examples
```

FreeRTOS aware debugger plugin NXP provides FreeRTOS task aware debugger for GDB. The plugin is compatible with Eclipse-based (MCUXpressoIDE) and is available after the installation.

TCB#	Task Name	Task Handle	Task State	Priority	Stack Usage	Event Object	Runtime
1	task_one	0x1ffffcc8	Blocked	1 (1)	0 B / 880 B	MyCountingSemaphore (Rx)	0x0 (0.0%)
2	task_two	0x1ffff130	Blocked	2 (2)	0 B / 888 B	MyCountingSemaphore (Rx)	0x1 (0.1%)
3	IDLE	0x1ffff330	Running	0 (0)	0 B / 296 B		0x3e5 (99.6%)
4	Tmr Svc	0x1ffff6b8	Blocked	17 (17)	28 B / 672 B	TmrQ (Rx)	0x3 (0.3%)

FreeRTOS kernel for MCUXpresso SDK ChangeLog

Changelog FreeRTOS kernel for MCUXpresso SDK All notable changes to this project will be documented in this file.

The format is based on [Keep a Changelog](#), and this project adheres to [Semantic Versioning](#).

[Unreleased]**Added**

- Kconfig added `CONFIG_FREERTOS_USE_CUSTOM_CONFIG_FRAGMENT` config to optionally include custom `FreeRTOSConfig` fragment include file `FreeRTOSConfig_frag.h`. File must be provided by application.
- Added missing Kconfig option for `configUSE_PICOLIBC_TLS`.
- Add correct header files to build when `configUSE_NEWLIB_REENTRANT` and `configUSE_PICOLIBC_TLS` is selected in config.

[11.1.0_rev0]

- update amazon freertos version

[11.0.1_rev0]

- update amazon freertos version

[10.5.1_rev0]

- update amazon freertos version

[10.4.3_rev1]

- Apply CM33 security fix from 10.4.3-LTS-Patch-2. See `rtos/freertos/freertos_kernel/History.txt`
- Apply CM33 security fix from 10.4.3-LTS-Patch-1. See `rtos/freertos/freertos_kernel/History.txt`

[10.4.3_rev0]

- update amazon freertos version.

[10.4.3_rev0]

- update amazon freertos version.

[9.0.0_rev3]

- New features:
 - Tickless idle mode support for Cortex-A7. Add `fsl_tickless_epit.c` and `fsl_tickless_generic.h` in `portable/IAR/ARM_CA9` folder.
 - Enabled float context saving in IAR for Cortex-A7. Added `configUSE_TASK_FPU_SUPPORT` macros. Modified `port.c` and `portmacro.h` in `portable/IAR/ARM_CA9` folder.
- Other changes:
 - Transformed `ARM_CM` core specific tickless low power support into generic form under `freertos/Source/portable/low_power_tickless/`.

[9.0.0_rev2]

- New features:
 - Enabled MCUXpresso thread aware debugging. Add `freertos_tasks_c_additions.h` and `configINCLUDE_FREERTOS_TASK_C_ADDITIONS_H` and `configFREERTOS_MEMORY_SCHEME` macros.

[9.0.0_rev1]

- New features:
 - Enabled `-flto` optimization in GCC by adding `attribute((used))` for `vTaskSwitchContext`.
 - Enabled KDS Task Aware Debugger. Apply FreeRTOS patch to enable `configRECORD_STACK_HIGH_ADDRESS` macro. Modified files are `task.c` and `FreeRTOS.h`.

[9.0.0_rev0]

- New features:
 - Example `freertos_sem_static`.
 - Static allocation support RTOS driver wrappers.
- Other changes:
 - Tickless idle rework. Support for different timers is in separated files (`fsl_tickless_systick.c`, `fsl_tickless_lptmr.c`).
 - Removed configuration option `configSYSTICK_USE_LOW_POWER_TIMER`. Low power timer is now selected by linking of appropriate file `fsl_tickless_lptmr.c`.
 - Removed `configOVERRIDE_DEFAULT_TICK_CONFIGURATION` in RVDS port. Use of `attribute((weak))` is the preferred solution. Not same as `_weak!`

[8.2.3]

- New features:
 - Tickless idle mode support.
 - Added template application for Kinetis Expert (KEx) tool (`template_application`).
- Other changes:
 - Folder structure reduction. Keep only Kinetis related parts.

FreeRTOS kernel Readme

MCUXpresso SDK: FreeRTOS kernel This repository is a fork of FreeRTOS kernel (<https://github.com/FreeRTOS/FreeRTOS-Kernel>)(11.1.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable FreeRTOS kernel repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

For more information about the FreeRTOS kernel repo adoption see [README_mcuxsdk.md: FreeRTOS kernel for MCUXpresso SDK Readme](#) document.



Getting started This repository contains FreeRTOS kernel source/header files and kernel ports only. This repository is referenced as a submodule in [FreeRTOS/FreeRTOS](#) repository, which contains pre-configured demo application projects under `FreeRTOS/Demo` directory.

The easiest way to use FreeRTOS is to start with one of the pre-configured demo application projects. That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS kernel feature information refer to the [Developer Documentation](#), and [API Reference](#).

Also for contributing and creating a Pull Request please refer to *the instructions here*.

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#).

To consume FreeRTOS-Kernel

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's `CMakeLists.txt`:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_kernel
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Kernel.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
)
```

In case you prefer to add it as a git submodule, do:

```
git submodule add https://github.com/FreeRTOS/FreeRTOS-Kernel.git <path of the submodule>
git submodule update --init
```

- Add a `freertos_config` library (typically an INTERFACE library) The following assumes the directory structure:

– `include/FreeRTOSConfig.h`

```
add_library(freertos_config INTERFACE)

target_include_directories(freertos_config SYSTEM
  INTERFACE
    include
)

target_compile_definitions(freertos_config
  INTERFACE
    projCOVERAGE_TEST=0
)
```

In case you installed FreeRTOS-Kernel as a submodule, you will have to add it as a subdirectory:

```
add_subdirectory(${FREERTOS_PATH})
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
set( FREERTOS_HEAP "4" CACHE STRING "" FORCE)
# Select the native compile PORT
set( FREERTOS_PORT "GCC_POSIX" CACHE STRING "" FORCE)
# Select the cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  set(FREERTOS_PORT "GCC_ARM_CA9" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_kernel)
```

- In case of cross compilation, you should also add the following to `freertos_config`:

```
target_compile_definitions(freertos_config INTERFACE ${definitions})
target_compile_options(freertos_config INTERFACE ${options})
```

Consuming stand-alone - Cloning this repository

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Kernel.git
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Kernel.git
```

Repository structure

- The root of this repository contains the three files that are common to every port - `list.c`, `queue.c` and `tasks.c`. The kernel is contained within these three files. `croutine.c` implements the optional co-routine functionality - which is normally only used on very memory limited systems.
- The `./portable` directory contains the files that are specific to a particular microcontroller and/or compiler. See the readme file in the `./portable` directory for more information.
- The `./include` directory contains the real time kernel header files.
- The `./template_configuration` directory contains a sample `FreeRTOSConfig.h` to help jumpstart a new project. See the `FreeRTOSConfig.h` file for instructions.

Code Formatting FreeRTOS files are formatted using the “`uncrustify`” tool. The configuration file used by `uncrustify` can be found in the `FreeRTOS/CI-CD-GitHub-Actions`’s `uncrustify.cfg` file.

Line Endings File checked into the `FreeRTOS-Kernel` repository use unix-style LF line endings for the best compatibility with `git`.

For optimal compatibility with Microsoft Windows tools, it is best to enable the `git autocrlf` feature. You can enable this setting for the current repository using the following command:

```
git config core.autocrlf true
```

Git History Optimizations Some commits in this repository perform large refactors which touch many lines and lead to unwanted behavior when using the `git blame` command. You can configure `git` to ignore the list of large refactor commits in this repository with the following command:

```
git config blame.ignoreRevsFile .git-blame-ignore-revs
```

Spelling and Formatting We recommend using [Visual Studio Code](#), commonly referred to as VSCode, when working on the FreeRTOS-Kernel. The FreeRTOS-Kernel also uses [cSpell](#) as part of its spelling check. The config file for which can be found at [cspell.config.yaml](#). There is additionally a [cSpell plugin for VSCode](#) that can be used as well. `.cSpellWords.txt` contains words that are not traditionally found in an English dictionary. It is used by the spellchecker to verify the various jargon, variable names, and other odd words used in the FreeRTOS code base are correct. If your pull request fails to pass the spelling and you believe this is a mistake, then add the word to `.cSpellWords.txt`. When adding a word please then sort the list, which can be done by running the bash command: `sort -u .cSpellWords.txt -o .cSpellWords.txt`. Note that only the FreeRTOS-Kernel Source Files, *include*, *portable/MemMang*, and *portable/Common* files are checked for proper spelling, and formatting at this time.

4.1.2 FreeRTOS drivers

This is set of NXP provided FreeRTOS reentrant bus drivers.

4.1.3 backoffalgorithm

Algorithm for calculating exponential backoff with jitter for network retry attempts.

Readme

MCUXpresso SDK: backoffAlgorithm Library This repository is a fork of backoffAlgorithm library (<https://github.com/FreeRTOS/backoffalgorithm>)(1.3.0). Modifications have been made to adapt to NXP MCUXpresso SDK. `CMakeLists.txt` and `Kconfig` added to enable backoffAlgorithm repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository `mcuxsdk-manifests`(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

backoffAlgorithm Library This repository contains the backoffAlgorithm library, a utility library to calculate backoff period using an exponential backoff with jitter algorithm for retrying network operations (like failed network connection with server). This library uses the “Full Jitter” strategy for the exponential backoff with jitter algorithm. More information about the algorithm can be seen in the [Exponential Backoff and Jitter](#) AWS blog.

The backoffAlgorithm library is distributed under the *MIT Open Source License*.

Exponential backoff with jitter is typically used when retrying a failed network connection or operation request with the server. An exponential backoff with jitter helps to mitigate failed network operations with servers, that are caused due to network congestion or high request load on the server, by spreading out retry requests across multiple devices attempting network operations. Besides, in an environment with poor connectivity, a client can get disconnected at any time. A backoff strategy helps the client to conserve battery by not repeatedly attempting reconnections when they are unlikely to succeed.

See memory requirements for this library [here](#).

backoffAlgorithm v1.3.0 source code is part of the FreeRTOS 202210.00 LTS release.

backoffAlgorithm v1.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example The example below shows how to use the `backoffAlgorithm` library on a POSIX platform to retry a DNS resolution query for `amazon.com`.

```
#include "backoff_algorithm.h"
#include <stdlib.h>
#include <string.h>
#include <netdb.h>
#include <unistd.h>
#include <time.h>

/* The maximum number of retries for the example code. */
#define RETRY_MAX_ATTEMPTS      ( 5U )

/* The maximum back-off delay (in milliseconds) for between retries in the example. */
#define RETRY_MAX_BACKOFF_DELAY_MS ( 5000U )

/* The base back-off delay (in milliseconds) for retry configuration in the example. */
#define RETRY_BACKOFF_BASE_MS   ( 500U )

int main()
{
    /* Variables used in this example. */
    BackoffAlgorithmStatus_t retryStatus = BackoffAlgorithmSuccess;
    BackoffAlgorithmContext_t retryParams;
    char serverAddress[] = "amazon.com";
    uint16_t nextRetryBackoff = 0;

    int32_t dnsStatus = -1;
    struct addrinfo hints;
    struct addrinfo ** pListHead = NULL;
    struct timespec tp;

    /* Add hints to retrieve only TCP sockets in getaddrinfo. */
    ( void ) memset( &hints, 0, sizeof( hints ) );

    /* Address family of either IPv4 or IPv6. */
    hints.ai_family = AF_UNSPEC;
    /* TCP Socket. */
    hints.ai_socktype = ( int32_t ) SOCK_STREAM;
    hints.ai_protocol = IPPROTO_TCP;

    /* Initialize reconnect attempts and interval. */
    BackoffAlgorithm_InitializeParams( &retryParams,
                                       RETRY_BACKOFF_BASE_MS,
                                       RETRY_MAX_BACKOFF_DELAY_MS,
                                       RETRY_MAX_ATTEMPTS );

    /* Seed the pseudo random number generator used in this example (with call to
     * rand() function provided by ISO C standard library) for use in backoff period
     * calculation when retrying failed DNS resolution. */

    /* Get current time to seed pseudo random number generator. */
    ( void ) clock_gettime( CLOCK_REALTIME, &tp );
    /* Seed pseudo random number generator with seconds. */
    srand( tp.tv_sec );

    do
    {
        /* Perform a DNS lookup on the given host name. */
        dnsStatus = getaddrinfo( serverAddress, NULL, &hints, pListHead );
    }
}
```

(continues on next page)

(continued from previous page)

```

/* Retry if DNS resolution query failed. */
if( dnsStatus != 0 )
{
    /* Generate a random number and get back-off value (in milliseconds) for the next retry.
    * Note: It is recommended to use a random number generator that is seeded with
    * device-specific entropy source so that backoff calculation across devices is different
    * and possibility of network collision between devices attempting retries can be avoided.
    *
    * For the simplicity of this code example, the pseudo random number generator, rand()
    * function is used. */
    retryStatus = BackoffAlgorithm_GetNextBackoff( &retryParams, rand(), &nextRetryBackoff );

    /* Wait for the calculated backoff period before the next retry attempt of querying DNS.
    * As usleep() takes nanoseconds as the parameter, we multiply the backoff period by 1000. */
    ( void ) usleep( nextRetryBackoff * 1000U );
}
} while( ( dnsStatus != 0 ) && ( retryStatus != BackoffAlgorithmRetriesExhausted ) );

return dnsStatus;
}

```

Building the library A compiler that supports **C90 or later** such as *gcc* is required to build the library.

Additionally, the library uses a header file introduced in ISO C99, *stdint.h*. For compilers that do not provide this header file, the *source/include* directory contains *stdint.readme*, which can be renamed to *stdint.h* to build the *backoffAlgorithm* library.

For instance, if the example above is copied to a file named *example.c*, *gcc* can be used like so:

```
gcc -I source/include example.c source/backoff_algorithm.c -o example
./example
```

gcc can also produce an output file to be linked:

```
gcc -I source/include -c source/backoff_algorithm.c
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules*, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C89 or later compiler like *gcc*
 - CMake 3.13.0 or later
- For running the coverage target, *gcov* is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.4 corehttp

C language HTTP client library designed for embedded platforms.

MCUXpresso SDK: coreHTTP Client Library

This repository is a fork of coreHTTP Client library (<https://github.com/FreeRTOS/corehttp>)(3.0.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreHTTP Client repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreHTTP Client Library

This repository contains a C language HTTP client library designed for embedded platforms. It has no dependencies on any additional libraries other than the standard C library, [llhttp](#), and a customer-implemented transport interface. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety and data structure invariance through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreHTTP v3.0.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreHTTP v2.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

coreHTTP Config File The HTTP client library exposes configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_http_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_http_config.h* can be provided by the user application to the library.

By default, a *core_http_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `HTTP_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

The HTTP client library can be built by either:

- Defining a `core_http_config.h` file in the application, and adding it to the include directories for the library build. **OR**
- Defining the `HTTP_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Building the Library The `httpFilePaths.cmake` file contains the information of all source files and header include paths required to build the HTTP client library.

As mentioned in the *previous section*, either a custom config file (i.e. `core_http_config.h`) OR `HTTP_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the HTTP client library.

For a CMake example of building the HTTP library with the `httpFilePaths.cmake` file, refer to the `coverity_analysis` library target in `test/CMakeLists.txt` file.

Building Unit Tests

Platform Prerequisites

- For running unit tests, the following are required:
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is required for this repository's [CMock test framework](#).
- For running the coverage target, the following are required:
 - **gcov**
 - **lcov**

Steps to build Unit Tests

1. Go to the root directory of this repository.
2. Run the `cmake` command: `cmake -S test -B build -DBUILD_CLONE_SUBMODULES=ON`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The AWS IoT Device SDK for Embedded C repository contains demos of using the HTTP client library [here](#) on a POSIX platform. These can be used as reference examples for the library API.

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreHTTP may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.5 corejson

JSON parser.

Readme

MCUXpresso SDK: coreJSON Library This repository is a fork of coreJSON library (<https://github.com/FreeRTOS/corejson>)(3.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreJSON repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreJSON Library This repository contains the coreJSON library, a parser that strictly enforces the ECMA-404 JSON standard and is suitable for low memory footprint embedded devices. The coreJSON library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreJSON v3.2.0 source code is part of the FreeRTOS 202210.00 LTS release.

coreJSON v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Reference example


```

#include <stdio.h>
#include "core_json.h"

int main()
{
    // Variables used in this example.
    JSONStatus_t result;
    char buffer[] = "{\"foo\": \"abc\", \"bar\": {\"foo\": \"xyz\"}}";
    size_t bufferLength = sizeof( buffer ) - 1;
    char queryKey[] = "bar.foo";
    size_t queryKeyLength = sizeof( queryKey ) - 1;
    char * value;
    size_t valueLength;

    // Calling JSON_Validate() is not necessary if the document is guaranteed to be valid.
    result = JSON_Validate( buffer, bufferLength );

    if( result == JSONSuccess )
    {
        result = JSON_Search( buffer, bufferLength, queryKey, queryKeyLength,
                             &value, &valueLength );
    }

    if( result == JSONSuccess )
    {
        // The pointer "value" will point to a location in the "buffer".
        char save = value[ valueLength ];
        // After saving the character, set it to a null byte for printing.
        value[ valueLength ] = '\\0';
        // "Found: bar.foo -> xyz" will be printed.
        printf( "Found: %s -> %s\\n", queryKey, value );
        // Restore the original character.
        value[ valueLength ] = save;
    }

    return 0;
}

```

A search may descend through nested objects when the `queryKey` contains matching key strings joined by a separator, .. In the example above, `bar` has the value `{"foo": "xyz"}`. Therefore, a search for query key `bar.foo` would output `xyz`.

Building coreJSON A compiler that supports **C90 or later** such as `gcc` is required to build the library.

Additionally, the library uses 2 header files introduced in ISO C99, `stdbool.h` and `stdint.h`. For compilers that do not provide this header file, the *source/include* directory contains *stdbool.readme* and *stdint.readme*, which can be renamed to `stdbool.h` and `stdint.h` respectively.

For instance, if the example above is copied to a file named `example.c`, `gcc` can be used like so:

```
gcc -I source/include example.c source/core_json.c -o example
./example
```

`gcc` can also produce an output file to be linked:

```
gcc -I source/include -c source/core_json.c
```

Documentation

Existing documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of the coreJSON library may differ across repositories.

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Building unit tests

Checkout Unity Submodule By default, the submodules in this repository are configured with `update=none` in `.gitmodules`, to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of Unity is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/Unity
```

Platform Prerequisites

- For running unit tests
 - C90 compiler like gcc
 - CMake 3.13.0 or later
 - Ruby 2.0.0 or later is additionally required for the Unity test framework (that we use).
- For running the coverage target, gcov is additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **Unity** submodule is cloned as described [above](#).)
2. Create build directory: `mkdir build && cd build`
3. Run `cmake` while inside build directory: `cmake -S ../test`
4. Run this command to build the library and unit tests: `make all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.6 coremqtt

MQTT publish/subscribe messaging library.

MCUXpresso SDK: coreMQTT Library

This repository is a fork of coreMQTT library (<https://github.com/FreeRTOS/coremqtt>)(2.1.1). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Client Library

This repository contains the coreMQTT library that has been optimized for a low memory footprint. The coreMQTT library is compliant with the [MQTT 3.1.1](#) standard. It has no dependencies on any additional libraries other than the standard C library, a customer-implemented network transport interface, and *optionally* a user-implemented platform time function. This library is distributed under the *MIT Open Source License*.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

coreMQTT v2.1.1 source code is part of the FreeRTOS 202210.01 LTS release.

MQTT Config File The MQTT client library exposes build configuration macros that are required for building the library. A list of all the configurations and their default values are defined in *core_mqtt_config_defaults.h*. To provide custom values for the configuration macros, a custom config file named *core_mqtt_config.h* can be provided by the application to the library.

By default, a *core_mqtt_config.h* custom config is required to build the library. To disable this requirement and build the library with default configuration values, provide `MQTT_DO_NOT_USE_CUSTOM_CONFIG` as a compile time preprocessor macro.

Thus, the MQTT library can be built by either:

- Defining a *core_mqtt_config.h* file in the application, and adding it to the include directories list of the library
- OR**
- Defining the `MQTT_DO_NOT_USE_CUSTOM_CONFIG` preprocessor macro for the library build.

Sending metrics to AWS IoT When establishing a connection with AWS IoT, users can optionally report the Operating System, Hardware Platform and MQTT client version information of their device to AWS. This information can help AWS IoT provide faster issue resolution and technical support. If users want to report this information, they can send a specially formatted string (see below) in the username field of the MQTT CONNECT packet.

Format

The format of the username string with metrics is:

```
<Actual_Username>?SDK=<OS_Name>&Version=<OS_Version>&Platform=<Hardware_Platform>&MQTTLib=<MQTT_Library_name>@<MQTT_Library_version>
```

Where

- <Actual_Username> is the actual username used for authentication, if username and password are used for authentication. When username and password based authentication is not used, this is an empty value.
- <OS_Name> is the Operating System the application is running on (e.g. FreeRTOS)
- <OS_Version> is the version number of the Operating System (e.g. V10.4.3)
- <Hardware_Platform> is the Hardware Platform the application is running on (e.g. WinSim)
- <MQTT_Library_name> is the MQTT Client library being used (e.g. coreMQTT)
- <MQTT_Library_version> is the version of the MQTT Client library being used (e.g. 1.0.2)

Example

- Actual_Username = "iotuser", OS_Name = FreeRTOS, OS_Version = V10.4.3, Hardware_Platform_Name = WinSim, MQTT_Library_Name = coremqtt, MQTT_Library_version = 2.1.1. If username is not used, then "iotuser" can be removed.

```
/* Username string:
 * iotuser?SDK=FreeRTOS&Version=v10.4.3&Platform=WinSim&MQTTLib=coremqtt@2.1.1
 */

#define OS_NAME           "FreeRTOS"
#define OS_VERSION       "V10.4.3"
#define HARDWARE_PLATFORM_NAME "WinSim"
#define MQTT_LIB         "coremqtt@2.1.1"

#define USERNAME_STRING   "iotuser?SDK=" OS_NAME "&Version=" OS_VERSION "&
↳ Platform=" HARDWARE_PLATFORM_NAME "&MQTTLib=" MQTT_LIB
#define USERNAME_STRING_LENGTH (( uint16_t ) ( sizeof( USERNAME_STRING ) - 1 ) )

MQTTConnectInfo_t connectInfo;
connectInfo.pUserName = USERNAME_STRING;
connectInfo.userNameLength = USERNAME_STRING_LENGTH;
mqttStatus = MQTT_Connect( pMqttContext, &connectInfo, NULL, CONNACK_RECV_TIMEOUT_MS,
↳ pSessionPresent );
```

Upgrading to v2.0.0 and above With coreMQTT versions >=v2.0.0, there are breaking changes. Please refer to the *coreMQTT version >=v2.0.0 Migration Guide*.

Building the Library The *mqttFilePaths.cmake* file contains the information of all source files and the header include path required to build the MQTT library.

Additionally, the MQTT library requires two header files that are not part of the ISO C90 standard library, *stdbool.h* and *stdint.h*. For compilers that do not provide these header files, the

source/include directory contains the files *stdbool.readme* and *stdint.readme*, which can be renamed to *stdbool.h* and *stdint.h*, respectively, to provide the type definitions required by MQTT.

As mentioned in the previous section, either a custom config file (i.e. *core_mqtt_config.h*) OR `MQTT_DO_NOT_USE_CUSTOM_CONFIG` macro needs to be provided to build the MQTT library.

For a CMake example of building the MQTT library with the *mqttFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule By default, the submodules in this repository are configured with `update=none` in *.gitmodules* to avoid increasing clone time and disk space usage of other repositories (like [amazon-freertos](#) that submodules this repository).

To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Platform Prerequisites

- Docker

or the following:

- For running unit tests
 - **C90 compiler** like `gcc`
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. If using docker, launch the container:
 1. `docker build -t coremqtt .`
 2. `docker run -it -v "$PWD":/workspaces/coreMQTT -w /workspaces/coreMQTT coremqtt`
2. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
3. Run the *cmake* command: `cmake -S test -B build`
4. Run this command to build the library and unit tests: `make -C build all`
5. The generated test executables will be present in `build/bin/tests` folder.
6. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT client library in the following locations for reference examples on POSIX and FreeRTOS platforms:

Platform	Location	Transport Interface Implementation
POSIX	AWS IoT Device SDK for Embedded C	POSIX sockets for TCP/IP and OpenSSL for TLS stack
FreeRTOS	FreeRTOS/FreeRTOS	FreeRTOS+TCP for TCP/IP and mbedTLS for TLS stack
FreeRTOS	FreeRTOS AWS Reference Integrations	Based on Secure Sockets Abstraction

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of coreMQTT may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Contributing See *CONTRIBUTING.md* for information on contributing.

4.1.7 coremqtt-agent

The coreMQTT Agent library is a high level API that adds thread safety to the coreMQTT library.

Readme

MCUXpresso SDK: coreMQTT Agent Library This repository is a fork of coreMQTT Agent library (<https://github.com/FreeRTOS/coremqtt-agent>)(1.2.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable coreMQTT Agent repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

coreMQTT Agent Library The coreMQTT Agent library is a high level API that adds thread safety to the [coreMQTT](#) library. The library provides thread safe equivalents to the coreMQTT's APIs, greatly simplifying its use in multi-threaded environments. The coreMQTT Agent library manages the MQTT connection by serializing the access to the coreMQTT library and reducing implementation overhead (e.g., removing the need for the application to repeatedly call `MQTT_ProcessLoop`). This allows your multi-threaded applications to share the same MQTT connection, and enables you to design an embedded application without having to worry about coreMQTT thread safety.

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). This library has also undergone both static code analysis from [Coverity static analysis](#), and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

Cloning this repository This repo uses [Git Submodules](#) to bring in dependent components.

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

Using SSH:

```
git clone git@github.com:FreeRTOS/coreMQTT-Agent.git --recurse-submodules
```

If you have downloaded the repo without using the `--recurse-submodules` argument, you need to run:

```
git submodule update --init --recursive
```

coreMQTT Agent Library Configurations The MQTT Agent library uses the same `core_mqtt_config.h` configuration file as coreMQTT, with the addition of configuration constants listed at the top of `core_mqtt_agent.h` and `core_mqtt_agent_command_functions.h`. Documentation for these configurations can be found [here](#).

To provide values for these configuration values, they must be either:

- Defined in `core_mqtt_config.h` used by coreMQTT **OR**
- Passed as compile time preprocessor macros

Porting the coreMQTT Agent Library In order to use the MQTT Agent library on a platform, you need to supply thread safe functions for the agent's *messaging interface*.

Messaging Interface Each of the following functions must be thread safe.

Function Pointer	Description
MQTTAgentMessageSend_t	A function that sends commands (as MQTTAgentCommand_t * pointers) to be received by MQTTAgent_CommandLoop. This can be implemented by pushing to a thread safe queue.
MQTTAgentMessageRecv_t	A function used by MQTTAgent_CommandLoop to receive MQTTAgentCommand_t * pointers that were sent by API functions. This can be implemented by receiving from a thread safe queue.
MQTTAgentCommandGet_t	A function that returns a pointer to an allocated MQTTAgentCommand_t structure, which is used to hold information and arguments for a command to be executed in MQTTAgent_CommandLoop(). If using dynamic memory, this can be implemented using malloc().
MQTTAgentCommandRelease_t	A function called to indicate that a command structure that had been allocated with the MQTTAgentCommandGet_t function pointer will no longer be used by the agent, so it may be freed or marked as not in use. If using dynamic memory, this can be implemented with free().

Reference implementations for the interface functions can be found in the [reference examples](#) below.

Additional Considerations

Static Memory If only static allocation is used, then the MQTTAgentCommandGet_t and MQTTAgentCommandRelease_t could instead be implemented with a pool of MQTTAgentCommand_t structures, with a queue or semaphore used to control access and provide thread safety. The below [reference examples](#) use static memory with a command pool.

Subscription Management The MQTT Agent does not track subscriptions for MQTT topics. The receipt of any incoming PUBLISH packet will result in the invocation of a single MQTTAgentIncomingPublishCallback_t callback, which is passed to MQTTAgent_Init() for initialization. If it is desired for different handlers to be invoked for different incoming topics, then the publish callback will have to manage subscriptions and fan out messages. A platform independent subscription manager example is implemented in the [reference examples](#) below.

Building the Library You can build the MQTT Agent source files that are in the *source* directory, and add *source/include* to your compiler's include path. Additionally, the MQTT Agent library requires the coreMQTT library, whose files follow the same *source/* and *source/include* pattern as the agent library; its build instructions can be found [here](#).

If using CMake, the *mqttAgentFilePaths.cmake* file contains the above information of the source files and the header include path from this repository. The same information is found for coreMQTT from *mqttFilePaths.cmake* in the *coreMQTT submodule*.

For a CMake example of building the MQTT Agent library with the *mqttAgentFilePaths.cmake* file, refer to the *coverity_analysis* library target in *test/CMakeLists.txt* file.

Building Unit Tests

Checkout CMock Submodule To build unit tests, the submodule dependency of CMock is required. Use the following command to clone the submodule:

```
git submodule update --checkout --init --recursive test/unit-test/CMock
```

Unit Test Platform Prerequisites

- For running unit tests
 - **C90 compiler** like gcc
 - **CMake 3.13.0 or later**
 - **Ruby 2.0.0 or later** is additionally required for the CMock test framework (that we use).
- For running the coverage target, **gcov** and **lcov** are additionally required.

Steps to build Unit Tests

1. Go to the root directory of this repository. (Make sure that the **CMock** submodule is cloned as described [above](#))
2. Run the *cmake* command: `cmake -S test -B build`
3. Run this command to build the library and unit tests: `make -C build all`
4. The generated test executables will be present in `build/bin/tests` folder.
5. Run `cd build && ctest` to execute all tests and view the test run summary.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples Please refer to the demos of the MQTT Agent library in the following locations for reference examples on FreeRTOS platforms:

Location
coreMQTT Agent Demos FreeRTOS/FreeRTOS

Documentation The MQTT Agent API documentation can be found [here](#).

Generating documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages yourself, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Getting help You can use your Github login to get support from both the FreeRTOS community and directly from the primary FreeRTOS developers on our [active support forum](#). You can find a list of [frequently asked questions](#) here.

Contributing See *CONTRIBUTING.md* for information on contributing.

License This library is licensed under the MIT License. See the *LICENSE* file.

4.1.8 corepkcs11

PKCS #11 key management library.

Readme

MCUXpresso SDK: corePKCS11 Library This repository is a fork of PKCS #11 key management library (<https://github.com/FreeRTOS/corePKCS11/tree/v3.5.0>)(v3.5.0). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable corepkcs11 repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

corePKCS11 Library PKCS #11 is a standardized and widely used API for manipulating common cryptographic objects. It is important because the functions it specifies allow application software to use, create, modify, and delete cryptographic objects, without ever exposing those objects to the application's memory. For example, FreeRTOS AWS reference integrations use a small subset of the PKCS #11 API to, among other things, access the secret (private) key necessary to create a network connection that is authenticated and secured by the [Transport Layer Security \(TLS\)](#) protocol – without the application ever ‘seeing’ the key.

The Cryptoki or PKCS #11 standard defines a platform-independent API to manage and use cryptographic tokens. The name, “PKCS #11”, is used interchangeably to refer to the API itself and the standard which defines it.

This repository contains a software based mock implementation of the PKCS #11 interface (API) that uses the cryptographic functionality provided by Mbed TLS. Using a software mock enables rapid development and flexibility, but it is expected that the mock be replaced by an implementation specific to your chosen secure key storage in production devices.

Only a subset of the PKCS #11 standard is implemented, with a focus on operations involving asymmetric keys, random number generation, and hashing.

The targeted use cases include certificate and key management for TLS authentication and code-sign signature verification, on small embedded devices.

corePKCS11 is implemented on PKCS #11 v2.4.0, the full PKCS #11 standard can be found on the [oasis website](#).

This library has gone through code quality checks including verification that no function has a [GNU Complexity](#) score over 8, and checks against deviations from mandatory rules in the [MISRA coding standard](#). Deviations from the MISRA C:2012 guidelines are documented under *MISRA Deviations*. This library has also undergone both static code analysis from [Coverity static analysis](#) and validation of memory safety through the [CBMC automated reasoning tool](#).

See memory requirements for this library [here](#).

corePKCS11 v3.5.0 source code is part of the FreeRTOS 202210.00 LTS release.

corePKCS11 v3.0.0 source code is part of the FreeRTOS 202012.00 LTS release.

Purpose Generally vendors for secure cryptoprocessors such as Trusted Platform Module (TPM), Hardware Security Module (HSM), Secure Element, or any other type of secure hardware enclave, distribute a PKCS #11 implementation with the hardware. The purpose of the corePKCS11 software only mock library is therefore to provide a non hardware specific PKCS #11 implementation that allows for rapid prototyping and development before switching to a cryptoprocessor specific PKCS #11 implementation in production devices.

Since the PKCS #11 interface is defined as part of the PKCS #11 [specification](#) replacing this library with another implementation should require little porting effort, as the interface will not change. The system tests distributed in this repository can be leveraged to verify the behavior of a different implementation is similar to corePKCS11.

corePKCS11 Configuration The corePKCS11 library exposes preprocessor macros which must be defined prior to building the library. A list of all the configurations and their default values are defined in the doxygen documentation for this library.

Build Prerequisites

Library Usage For building the library the following are required:

- **A C99 compiler**
- **mbedcrypto** library from [mbedtls](#) version 2.x or 3.x.
- **pkcs11 API header(s)** available from [OASIS](#) or [OpenSC](#)

Optionally, variables from the `pkcsFilePaths.cmake` file may be referenced if your project uses `cmake`.

Integration and Unit Tests In order to run the integration and unit test suites the following are dependencies are necessary:

- **C Compiler**
- **CMake 3.13.0 or later**
- **Ruby 2.0.0 or later** required by CMock.
- **Python 3** required for configuring mbedtls.
- **git** required for fetching dependencies.
- **GNU Make** or **Ninja**

The *mbedtls*, *CMock*, and *Unity* libraries are downloaded and built automatically using the `cmake` `FetchContent` feature.

Coverage Measurement and Instrumentation The following software is required to run the coverage target:

- Linux, MacOS, or another POSIX-like environment.
- A recent version of **GCC** or **Clang** with support for `gcov`-like coverage instrumentation.
- **gcov** binary corresponding to your chosen compiler
- **lcov** from the [Linux Test Project](#)
- **perl** needed to run the `lcov` utility.

Coverage builds are validated on recent versions of Ubuntu Linux.

Running the Integration and Unit Tests

1. Navigate to the root directory of this repository in your shell.
2. Run **cmake** to construct a build tree: `cmake -S test -B build`
 - You may specify your preferred build tool by appending `-G'Unix Makefiles'` or `-GNinja` to the command above.
 - You may append `-DUNIT_TESTS=0` or `-DSYSTEM_TESTS=0` to disable Unit Tests or Integration Tests respectively.
3. Build the test binaries: `cmake --build ./build --target all`
4. Run `ctest --test-dir ./build` or `cmake --build ./build --target test` to run the tests without capturing coverage.
5. Run `cmake --build ./build --target coverage` to run the tests and capture coverage data.

CBMC To learn more about CBMC and proofs specifically, review the training material [here](#).

The `test/cbmc/proofs` directory contains CBMC proofs.

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).

Reference examples The FreeRTOS-Labs repository contains demos using the PKCS #11 library [here](#) using FreeRTOS on the Windows simulator platform. These can be used as reference examples for the library API.

Porting Guide Documentation for porting corePKCS11 to a new platform can be found on the [AWS docs](#) web page.

corePKCS11 is not meant to be ported to projects that have a TPM, HSM, or other hardware for offloading crypto-processing. This library is specifically meant to be used for development and prototyping.

Related Example Implementations These projects implement the PKCS #11 interface on real hardware and have similar behavior to corePKCS11. It is preferred to use these, over corePKCS11, as they allow for offloading Cryptography to separate hardware.

- ARM's [Platform Security Architecture](#).
- Microchip's [cryptoauthlib](#).
- Infineon's [Optiga Trust X](#).

Documentation

Existing Documentation For pre-generated documentation, please see the documentation linked in the locations below:

Location
AWS IoT Device SDK for Embedded C FreeRTOS.org

Note that the latest included version of corePKCS11 may differ across repositories.

Generating Documentation The Doxygen references were created using Doxygen version 1.9.2. To generate the Doxygen pages, please run the following command from the root of this repository:

```
doxygen docs/doxygen/config.doxyfile
```

Security See *CONTRIBUTING* for more information.

License This library is licensed under the MIT-0 License. See the LICENSE file.

4.1.9 freertos-plus-tcp

Open source RTOS FreeRTOS Plus TCP.

Readme

MCUXpresso SDK: FreeRTOS-Plus-TCP Library This repository is a fork of FreeRTOS-Plus-TCP library (<https://github.com/FreeRTOS/freertos-plus-tcp>)(4.3.3). Modifications have been made to adapt to NXP MCUXpresso SDK. CMakeLists.txt and Kconfig added to enable FreeRTOS-Plus-TCP repo sources build in MCUXpresso SDK. It is part of the MCUXpresso SDK overall delivery which is composed of several sub-repositories/projects. Navigate to the top/parent repository mcuxsdk-manifests(<https://github.com/nxp-mcuxpresso/mcuxsdk-manifests>) for the complete delivery of MCUXpresso SDK.

FreeRTOS-Plus-TCP Library FreeRTOS-Plus-TCP is a lightweight TCP/IP stack for FreeRTOS. It provides a familiar Berkeley sockets interface, making it as simple to use and learn as possible. FreeRTOS-Plus-TCP's features and RAM footprint are fully scalable, making FreeRTOS-Plus-TCP equally applicable to smaller lower throughput microcontrollers as well as larger higher throughput microprocessors.

This library has undergone static code analysis and checks for compliance with the [MISRA coding standard](#). Any deviations from the MISRA C:2012 guidelines are documented under [MISRA Deviations](#). The library is validated for memory safety and data structure invariance through the [CBMC automated reasoning tool](#) for the functions that parse data originating from the network. The library is also protocol tested using Maxwell protocol tester for both IPv4 and IPv6.

FreeRTOS-Plus-TCP Library V4.2.2 source code is part of the FreeRTOS 202406.01 LTS release.

Getting started The easiest way to use version 4.0.0 and later of FreeRTOS-Plus-TCP is to refer the Getting started Guide (found [here](#)) Another way is to start with the pre-configured IPv4 Windows Simulator demo (found in [this directory](#)) or IPv6 Multi-endpoint Windows Simulator demo (found in [this directory](#)). That way you will have the correct FreeRTOS source files included, and the correct include paths configured. Once a demo application is building and executing you can remove the demo application files, and start to add in your own application source files. See the [FreeRTOS Kernel Quick Start Guide](#) for detailed instructions and other useful links.

Additionally, for FreeRTOS-Plus-TCP source code organization refer to the [Documentation](#), and [API Reference](#).

Getting help If you have any questions or need assistance troubleshooting your FreeRTOS project, we have an active community that can help on the [FreeRTOS Community Support Forum](#). Please also refer to [FAQ](#) for frequently asked questions.

Also see the [Submitting a bug/feature request](#) section of CONTRIBUTING.md for more details.

Note: All the remaining sections are generic and applies to all the versions from V3.0.0 onwards.

Upgrading to V4.3.0 and above For users of STM32 network interfaces:

Starting from version V4.3.0, the STM32 network interfaces have been consolidated into a single unified implementation located at `source/portable/NetworkInterface/STM32/NetworkInterface.c`, supporting STM32 F4, F7, and H7 series microcontrollers, with newly added support for STM32 H5. The new interface has been tested with the STM32 HAL Ethernet (ETH) drivers, available at `source/portable/NetworkInterface/STM32/Drivers`. For compatibility, the legacy interfaces (STM32Fxx and STM32Hxx) have been retained and relocated to `source/portable/NetworkInterface/STM32/Legacy`.

Upgrading to V3.0.0 and V3.1.0 In version 3.0.0 or 3.1.0, the folder structure of FreeRTOS-Plus-TCP has changed and the files have been broken down into smaller logically separated modules. This change makes the code more modular and conducive to unit-tests. FreeRTOS-Plus-TCP V3.0.0 improves the robustness, security, and modularity of the library. Version 3.0.0 adds comprehensive unit test coverage for all lines and branches of code and has undergone protocol testing, and penetration testing by AWS Security to reduce the exposure to security vulnerabilities. Additionally, the source files have been moved to a `source` directory. This change requires modification of any existing project(s) to include the modified source files and directories.

FreeRTOS-Plus-TCP V3.1.0 source code(.c .h) is part of the FreeRTOS 202210.00 LTS release.

Generating pre V3.0.0 folder structure for backward compatibility: If you wish to continue using a version earlier than V3.0.0 i.e. continue to use your existing source code organization, a script is provided to generate the folder structure similar to [this](#).

Note: After running the script, while the `.c` files will have same names as the pre V3.0.0 source, the files in the `include` directory will have different names and the number of files will differ as well. This should, however, not pose any problems to most projects as projects generally include all files in a given directory.

Running the script to generate pre V3.0.0 folder structure: For running the script, you will need Python version > 3.7. You can download/install it from [here](#).

Once python is downloaded and installed, you can verify the version from your terminal/command window by typing `python --version`.

To run the script, you should switch to the FreeRTOS-Plus-TCP directory Then run `python <Path/to/the/script>/GenerateOriginalFiles.py`.

To consume FreeRTOS+TCP

Consume with CMake If using CMake, it is recommended to use this repository using FetchContent. Add the following into your project's main or a subdirectory's `CMakeLists.txt`:

- Define the source and version/tag you want to use:

```
FetchContent_Declare( freertos_plus_tcp
  GIT_REPOSITORY https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git
  GIT_TAG        main #Note: Best practice to use specific git-hash or tagged version
```

(continues on next page)

(continued from previous page)

```
GIT_SUBMODULES "" # Don't grab any submodules since not latest
)
```

- Configure the FreeRTOS-Kernel and make it available
 - this particular example supports a native and cross-compiled build option.

```
# Select the native compile PORT
set( FREERTOS_PLUS_TCP_NETWORK_IF "POSIX" CACHE STRING "" FORCE)
# Or: select a cross-compile PORT
if (CMAKE_CROSSCOMPILING)
  # Eg. STM32Hxx version of port
  set(FREERTOS_PLUS_TCP_NETWORK_IF "STM32HXX" CACHE STRING "" FORCE)
endif()

FetchContent_MakeAvailable(freertos_plus_tcp)
```

Consuming stand-alone This repository uses [Git Submodules](#) to bring in dependent components.

Note: If you download the ZIP file provided by GitHub UI, you will not get the contents of the submodules. (The ZIP file is also not a valid Git repository)

To clone using HTTPS:

```
git clone https://github.com/FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Using SSH:

```
git clone git@github.com:FreeRTOS/FreeRTOS-Plus-TCP.git ./FreeRTOS-Plus-TCP
cd ./FreeRTOS-Plus-TCP
git submodule update --checkout --init --recursive tools/CMock test/FreeRTOS-Kernel
```

Porting The porting guide is available on [this page](#).

Repository structure This repository contains the FreeRTOS-Plus-TCP repository and a number of supplementary libraries for testing/PR Checks. Below is the breakdown of what each directory contains:

- tools
 - This directory contains the tools and related files (CMock/uncrustify) required to run tests/checks on the TCP source code.
- tests
 - This directory contains all the tests (unit tests and CBMC) and the dependencies ([FreeRTOS-Kernel/Litani-port](#)) the tests require.
- source/portable
 - This directory contains the portable files required to compile the FreeRTOS-Plus-TCP source code for different hardware/compiler.
- source/include
 - The include directory has all the ‘core’ header files of FreeRTOS-Plus-TCP source.
- source

- This directory contains all the [.c] source files.

Note At this time it is recommended to use `BufferAllocation_2.c` in which case it is essential to use the `heap_4.c` memory allocation scheme. See [memory management](#).

Kernel sources The FreeRTOS Kernel Source is in [FreeRTOS/FreeRTOS-Kernel repository](#), and it is consumed by testing/PR checks as a submodule in this repository.

The version of the FreeRTOS Kernel Source in use could be accessed at `./test/FreeRTOS-Kernel` directory.

CBMC The `test/cbmc/proofs` directory contains CBMC proofs.

To learn more about CBMC and proofs specifically, review the training material [here](#).

In order to run these proofs you will need to install CBMC and other tools by following the instructions [here](#).